



Junos[®] OS for EX Series Ethernet Switches

MPLS for EX Series Switches

Release

15.1



Published: 2015-05-15

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos[®] OS for EX Series Ethernet Switches MPLS for EX Series Switches
Release 15.1
Copyright © 2015, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xiii
	Documentation and Release Notes	xiii
	Supported Platforms	xiii
	Using the Examples in This Manual	xiii
	Merging a Full Example	xiv
	Merging a Snippet	xiv
	Documentation Conventions	xv
	Documentation Feedback	xvii
	Requesting Technical Support	xvii
	Self-Help Online Tools and Resources	xvii
	Opening a Case with JTAC	xviii
Part 1	Overview	
Chapter 1	MPLS Overview	3
	Junos OS MPLS for EX Series Switches Overview	3
	Benefits of MPLS	4
	Additional Benefits of MPLS and Traffic Engineering	4
	Understanding Junos OS MPLS Components for EX Series Switches	5
	Provider Edge Switches	5
	MPLS Protocol and Label-Switched Paths	6
	Circuit Cross-Connect for Customer Edge Interfaces	6
	IP Over MPLS for Customer Edge Interfaces	7
	BGP for Layer 2 VPN and Layer 3 VPN Configurations (EX8200 and EX4500 Switches Only)	7
	Routing Instances for Layer 2 VPN and Layer 3 VPN (EX8200 and EX4500 Switches Only)	7
	Ethernet Encapsulation for Layer 2 VPN (EX8200 and EX4500 Switches Only)	7
	LDP for Layer 2 Circuits (EX8200 and EX4500 Switches Only)	7
	Provider Switch	7
	Components Required for All Switches in the MPLS Network	8
	Routing Protocol	8
	Traffic Engineering	8
	MPLS Protocol	8
	RSVP	9
	LDP	9
	Family mpls	9
	Planning Considerations While Using EX8200 Standalone Switches and EX8200 Virtual Chassis	10

	MPLS Support on EX4500 and EX4550 Standalone Switches and Virtual Chassis	10
	Understanding MPLS and Path Protection on EX Series Switches	11
	Understanding Using CoS with MPLS Networks on EX Series Switches	12
	EXP Classifiers and EXP rewrite Rules	12
	Guidelines for Using CoS Classifiers on CCCs	13
	Using CoS Classifiers with IP over MPLS	13
	Setting CoS Bits in an MPLS Header	14
	EXP Rewrite Rules	15
	Policer	15
	Schedulers	16
	Understanding MPLS Label Operations on EX Series Switches	17
	MPLS Label-Switched Paths and MPLS Labels on the Switches	17
	Reserved Labels	18
	MPLS Label Operations on the Switches	18
	Penultimate-Hop Popping and Ultimate-Hop Popping	19
	Understanding Using MPLS-Based Layer 2 and Layer 3 VPNs on EX Series Switches	20
	MPLS-Based Layer 2 VPNs	20
	Layer 2 Circuits	21
	MPLS-Based Layer 3 VPNs	22
	Comparing an MPLS-Based Layer 2 VPN and an MPLS-Based Layer 3 VPN	22
Part 2	Configuration	
Chapter 2	Configuration Examples	27
	Example: Configuring MPLS on EX8200 and EX4500 Switches	27
	Example: Combining CoS with MPLS on EX Series Switches	42
	Example: Configuring MPLS-Based Layer 3 VPNs on EX Series Switches	54
	Example: Configuring MPLS-Based Layer 2 VPNs	63
Chapter 3	Configuration Tasks	77
	Configuring MPLS on EX8200 and EX4500 Provider Switches (CLI Procedure)	78
	Configuring Path Protection in an MPLS Network (CLI Procedure)	79
	Configuring the Primary Path	81
	Configuring the Secondary Path	81
	Configuring the Revert Timer	82
	Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure)	83
	Configuring the Ingress PE Switch	83
	Configuring the Egress PE Switch	85
	Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect (CLI Procedure)	87
	Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS (CLI Procedure)	90
	Configuring CoS	90
	Configuring an LSP Policer	91

	Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect (CLI Procedure)	91
	Configuring CoS	92
	Configuring an LSP Policer	93
	Configuring CoS on Provider Switches of an MPLS Network (CLI Procedure) . . .	94
	Configuring CoS Bits for an MPLS Network (CLI Procedure)	95
	Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)	96
	Configuring an MPLS-Based Layer 3 VPN (CLI Procedure)	99
	Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN (CLI Procedure) . .	101
	Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit (CLI Procedure)	104
	Configuring an MPLS-Based VLAN CCC Using the Connection Method (CLI Procedure)	107
	Configuring IPv6 Tunneling for MPLS (CLI Procedure)	108
	Configuring Static Label Switched Paths for MPLS (CLI Procedure)	110
	Configuring the Ingress PE Switch	110
	Configuring the Provider and the Egress PE Switch	111
	Configuring Bidirectional Forwarding Detection for MPLS (CLI Procedure)	112
	Configuring BFD on Provider Edge and Provider Switches for an LDP-Based LSP	112
	Configuring BFD on Provider Edge and Provider Switches for an RSVP-Based LSP	114
Chapter 4	Configuration Statements	117
	[edit interfaces] Configuration Statement Hierarchy on EX Series Switches . . .	118
	[edit protocols] Configuration Statement Hierarchy on EX Series Switches . . .	119
	[edit protocols mpls] Configuration Statement Hierarchy on EX Series Switches	120
	Supported Statements in the [edit protocols mpls] Hierarchy Level	120
	Unsupported Statements in the [edit protocols mpls] Hierarchy Level	121
	bfd-liveness-detection (Protocols MPLS)	132
	connections (MPLS)	133
	description (Protocols Layer 2 VPN)	133
	encapsulation (Physical Interface)	134
	encapsulation-type (Layer 2 VPNs)	139
	exp	141
	fec	142
	instance-type	144
	interface (MPLS)	146
	l2circuit	147
	l2vpn	149
	label-switched-path	151
	ldp	152
	mpls	155
	neighbor (Protocols Layer 2 Circuit)	158
	path	160
	periodic-traceroute	161
	policing	163
	primary	163

	remote-interface-switch	164
	remote-site-id	165
	revert-timer	166
	route-distinguisher	167
	rsvp	169
	secondary	170
	signaling	171
	site (Layer 2 Circuits)	172
	site-identifier (Layer 2 Circuits)	173
	standby	173
	traffic-engineering	174
	vrf-table-label	175
	vrf-target	176
Part 3	Administration	
Chapter 5	Routine Monitoring	179
	Verifying That MPLS Is Working Correctly	179
	Verifying the Physical Layer on the Switches	179
	Verifying the Routing Protocol	180
	Verifying the Core Interfaces Being Used for the MPLS Traffic	180
	Verifying RSVP	180
	Verifying the Assignment of Interfaces for MPLS Label Operations	181
	Verifying the Status of the CCC	181
	Verifying traceroute for Layer 3 VPN	182
	Verifying Path Protection in an MPLS Network	183
	Verifying the Primary Path	183
	Verifying the RSVP-Enabled Interfaces	184
	Verifying a Secondary Path	185
Chapter 6	Operational Commands	187
	clear mpls lsp	189
	clear rsvp session	191
	clear rsvp statistics	193
	ping mpls l2circuit	194
	ping mpls l2vpn	197
	ping mpls l3vpn	200
	ping mpls ldp	203
	ping mpls lsp-end-point	206
	ping mpls rsvp	208
	request mpls lsp adjust-autobandwidth	213
	show connections	215
	show link-management	218
	show link-management peer	222
	show link-management routing	224
	show link-management statistics	227
	show link-management te-link	229
	show mpls admin-groups	231
	show mpls call-admission-control	233
	show mpls cspf	235

show mpls diffserv-te	237
show route forwarding-table	239
show mpls interface	247
show mpls interface	248
show mpls lsp	250
show mpls path	268
show rsvp interface	270
show rsvp neighbor	275
show rsvp session	280
show rsvp session	285
show rsvp statistics	295
show rsvp version	299
show ted database	302
show ted link	309
show ted protocol	312

List of Figures

Part 1	Overview	
Chapter 1	MPLS Overview	3
	Figure 1: Label Encoding	18
	Figure 2: MPLS Label Swapping	19
	Figure 3: Layer 2 VPN Connecting CE Switches	21
Part 2	Configuration	
Chapter 2	Configuration Examples	27
	Figure 4: Configuring MPLS on EX Series Switches	29
	Figure 5: MPLS-Based Layer 3 VPN	55
	Figure 6: MPLS-Based Layer 2 VPN	65

List of Tables

	About the Documentation	xiii
	Table 1: Notice Icons	xv
	Table 2: Text and Syntax Conventions	xv
Part 1	Overview	
Chapter 1	MPLS Overview	3
	Table 3: MPLS CoS Values	14
	Table 4: Comparing an MPLS-Based Layer 2 VPN and an MPLS-Based Layer 3 VPN	22
Part 2	Configuration	
Chapter 2	Configuration Examples	27
	Table 5: Components of the Ingress PE Switch in the Topology for MPLS with Interface-Based CCC	29
	Table 6: Components of the Egress PE Switch in the Topology for MPLS with Interface-Based CCC	30
	Table 7: Components of the Provider Switch in the Topology for MPLS with Interface-Based CCC	31
	Table 8: CoS Configuration Components on the Ingress PE Switch	43
	Table 9: CoS Configuration Components of the Egress PE Switch	44
	Table 10: CoS Configuration Components of the Provider Switch	44
	Table 11: Local CE Switch in the MPLS-Based Layer 3 VPN Topology	55
	Table 12: Remote CE Switch in the MPLS-Based Layer 3 VPN Topology	55
	Table 13: Layer 3 VPN Components of the Local PE Switch	56
	Table 14: Layer 3 VPN Components of the Remote PE Switch	57
	Table 15: Local CE Routing Device in the MPLS-Based Layer 2 VPN Topology	65
	Table 16: Remote CE Routing Device in the MPLS-Based Layer 2 VPN Topology	65
	Table 17: Layer 2 VPN Components of the Local PE Routing Device	66
	Table 18: Layer 2 VPN Components of the Remote PE Routing Device	66
Chapter 4	Configuration Statements	117
	Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches	122
Part 3	Administration	
Chapter 6	Operational Commands	187
	Table 20: show connections Output Fields	216
	Table 21: show link-management Output Fields	218

Table 22: show link-management peer Output Fields	222
Table 23: show link-management routing Output Fields	224
Table 24: show link-management statistics Output Fields	227
Table 25: show link-management te-link Output Fields	229
Table 26: show mpls admin-groups Output Fields	231
Table 27: show mpls call-admission-control Output Fields	233
Table 28: show mpls cspf Output Fields	235
Table 29: show mpls diffserv-te Output Fields	237
Table 30: show route forwarding-table Output Fields	240
Table 31: show mpls interface Output Fields	247
Table 32: show mpls interface Output Fields	248
Table 33: show mpls lsp Output Fields	252
Table 34: show mpls path Output Fields	268
Table 35: show rsvp interface Output Fields	271
Table 36: show rsvp neighbor Output Fields	275
Table 37: show rsvp session Output Fields	281
Table 38: show rsvp session Output Fields	287
Table 39: show rsvp statistics Output Fields	295
Table 40: show rsvp version Output Fields	299
Table 41: show ted database Output Fields	302
Table 42: show ted link Output Fields	309
Table 43: show ted protocol Output Fields	312

About the Documentation

- Documentation and Release Notes on page xiii
- Supported Platforms on page xiii
- Using the Examples in This Manual on page xiii
- Documentation Conventions on page xv
- Documentation Feedback on page xvii
- Requesting Technical Support on page xvii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks[®] technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- EX Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

Table 1 on page xv defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xv defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<code>user@host> show chassis alarms</code> <code>No alarms currently active</code>
<i>Italic text like this</i>	<ul style="list-style-type: none">Introduces or emphasizes important new terms.Identifies guide names.Identifies RFC and Internet draft titles.	<ul style="list-style-type: none">A policy <i>term</i> is a named structure that defines match conditions and actions.<i>Junos OS CLI User Guide</i>RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none">To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level.The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric <i>metric</i>>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none">In the Logical Interfaces box, select All Interfaces.To cancel the configuration, click Cancel.

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page at the Juniper Networks Technical Documentation site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [MPLS Overview on page 3](#)

CHAPTER 1

MPLS Overview

- [Junos OS MPLS for EX Series Switches Overview on page 3](#)
- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)
- [Understanding MPLS and Path Protection on EX Series Switches on page 11](#)
- [Understanding Using CoS with MPLS Networks on EX Series Switches on page 12](#)
- [Understanding MPLS Label Operations on EX Series Switches on page 17](#)
- [Understanding Using MPLS-Based Layer 2 and Layer 3 VPNs on EX Series Switches on page 20](#)

Junos OS MPLS for EX Series Switches Overview

You can configure Junos OS MPLS on Juniper Networks EX Series Ethernet Switches to increase transport efficiency in the network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as voice over IP (VoIP) and other business-critical functions.



NOTE: MPLS configurations on EX Series switches are compatible with configurations on other Juniper Networks devices that support MPLS and MPLS-based circuit cross-connect (CCC). MPLS features available on the switches depend upon which switch you are using. See *EX Series Switch Software Features Overview* for a complete list of the Junos OS MPLS features that are supported on specific switches.



NOTE: MPLS configurations on the switches do not support:

- Q-in-Q tunneling

This topic describes:

- [Benefits of MPLS on page 4](#)
- [Additional Benefits of MPLS and Traffic Engineering on page 4](#)

Benefits of MPLS

MPLS has the following advantages over conventional packet forwarding:

- Packets arriving on different ports can be assigned different labels.
- A packet arriving at a particular provider edge (PE) switch can be assigned a label that is different from that of the same packet entering the network at a different PE switch. As a result, forwarding decisions that depend on the ingress PE switch can be easily made.
- Sometimes it is desirable to force a packet to follow a particular route that is explicitly chosen at or before the time the packet enters the network, rather than letting it follow the route chosen by the normal dynamic routing algorithm as the packet travels through the network. In MPLS, a label can be used to represent the route so that the packet need not carry the identity of the explicit route.

Additional Benefits of MPLS and Traffic Engineering

MPLS is the packet-forwarding component of the Junos OS traffic engineering architecture. Traffic engineering provides the capabilities to do the following:

- Route primary paths around known bottlenecks or points of congestion in the network.
- Provide precise control over how traffic is rerouted when the primary path is faced with single or multiple failures.
- Provide efficient use of available aggregate bandwidth and long-haul fiber by ensuring that certain subsets of the network are not overutilized while other subsets of the network along potential alternate paths are underutilized.
- Maximize operational efficiency.
- Enhance the traffic-oriented performance characteristics of the network by minimizing packet loss, minimizing prolonged periods of congestion, and maximizing throughput.
- Enhance statistically bound performance characteristics of the network (such as loss ratio, delay variation, and transfer delay) required to support a multiservice Internet.

Related Documentation

- [Understanding MPLS Label Operations on EX Series Switches on page 17](#)
- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)
- [Understanding Using CoS with MPLS Networks on EX Series Switches on page 12](#)
- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN \(CLI Procedure\) on page 101](#)
- [Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit \(CLI Procedure\) on page 104](#)

Understanding Junos OS MPLS Components for EX Series Switches

Juniper Networks Junos operating system (Junos OS) MPLS for Juniper Networks EX Series Ethernet Switches includes a number of components. While some components are required for all MPLS applications, others might not be, depending on the specific application or the specific switch. See *EX Series Switch Software Features Overview* for a complete list of the Junos OS MPLS features that are supported on specific EX Series switches.

This topic includes:

- [Provider Edge Switches on page 5](#)
- [Provider Switch on page 7](#)
- [Components Required for All Switches in the MPLS Network on page 8](#)
- [Planning Considerations While Using EX8200 Standalone Switches and EX8200 Virtual Chassis on page 10](#)
- [MPLS Support on EX4500 and EX4550 Standalone Switches and Virtual Chassis on page 10](#)

Provider Edge Switches

To implement MPLS on a network, you must configure two *provider edge* (PE) switches—that is, an ingress PE switch and an egress PE switch. In addition, you must configure one or more *provider* switches as transit switches within the network to support the forwarding of MPLS packets.

The ingress PE switch (the entry point to the MPLS tunnel) receives a packet, analyzes it, and pushes an MPLS label onto it. This label places the packet in a forwarding equivalence class (FEC) and determines its handling and destination through the MPLS tunnel. The egress PE switch (the exit point from the MPLS tunnel) *pops* the MPLS label off the outgoing packet.

Within an MPLS tunnel, the network traffic is bidirectional. Therefore, each PE switch can be configured to be both an ingress switch and an egress switch, depending on the direction of the traffic.

The following MPLS components are configured on the PE switches but not on the provider switches:

- [MPLS Protocol and Label-Switched Paths on page 6](#)
- [Circuit Cross-Connect for Customer Edge Interfaces on page 6](#)
- [IP Over MPLS for Customer Edge Interfaces on page 7](#)
- [BGP for Layer 2 VPN and Layer 3 VPN Configurations \(EX8200 and EX4500 Switches Only\) on page 7](#)
- [Routing Instances for Layer 2 VPN and Layer 3 VPN \(EX8200 and EX4500 Switches Only\) on page 7](#)

- [Ethernet Encapsulation for Layer 2 VPN \(EX8200 and EX4500 Switches Only\)](#) on page 7
- [LDP for Layer 2 Circuits \(EX8200 and EX4500 Switches Only\)](#) on page 7

MPLS Protocol and Label-Switched Paths

Each PE switch must be configured to support the MPLS protocol. The configuration of a label-switched path (LSP) depends upon which signaling protocol is used:

- If the RSVP signaling protocol is used, the LSPs must be explicitly configured at the **[edit protocols mpls]** hierarchy level.
- If the LDP signaling protocol is used, LSP configuration is not required. (LDP signaling is used with Layer 2 circuit configurations.)

Circuit Cross-Connect for Customer Edge Interfaces

You can configure the customer edge interface of the PE switches as a circuit cross-connect (CCC) to create a transparent connection between two circuits. When you configure an interface as a CCC, the interface is removed from the default VLAN if it was a member of that VLAN. The interface becomes an MPLS tunnel—used exclusively for MPLS packets. You can create different CCCs for different customers or for segregating different traffic streams over different MPLS tunnels.

Using a CCC configuration, you can connect the following types of interfaces:

- A local interface with a remote interface or VLAN
- A local VLAN with a remote interface or VLAN



NOTE: To configure a VLAN circuit as a CCC, you must enable VLAN tagging and specify a VLAN ID. You must specify the same VLAN ID on both ends of the CCC.

The VLAN CCC configuration must use the same type of switch for both PE switches. For example, you cannot use an EX8200 switch for one PE switch and an EX3200, EX4200, or EX4500 switch for the other PE switch.

MPLS on EX Series switches does not support the following types of CCC configurations:

- Routed VLAN interfaces (RVIs) on switches other than EX8200 switches
- Q-in-Q tunneling

On EX8200 switches only, the following types of CCC configurations are supported:

- Local switching—Connecting interfaces on the same switch
- MPLS tunneling—Using LSPs as the conduit to connect two distant interface circuits

- LSP stitching—Connecting LSPs that fall into two different traffic engineering database areas
- RVIs on customer edge interfaces

IP Over MPLS for Customer Edge Interfaces

You can configure the customer edge interfaces of the PE switches for IP over MPLS using a Layer 3 interface and a static route from the ingress PE switch to the egress PE switch. See “Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure)” on page 83.

BGP for Layer 2 VPN and Layer 3 VPN Configurations (EX8200 and EX4500 Switches Only)

If you are implementing a Layer 2 virtual private network (VPN) or a Layer 3 VPN, you must configure the BGP routing protocol on the PE switches.

Routing Instances for Layer 2 VPN and Layer 3 VPN (EX8200 and EX4500 Switches Only)

If you are implementing a Layer 2 VPN or a Layer 3 VPN, you must configure a routing instance. A routing instance is a collection of routing tables, interfaces, and routing protocol parameters. The set of interfaces belongs to the routing tables, and the routing protocol parameters control the information in the routing tables.

EX Series switches support the following types of routing instances:

- Layer 2 VPN—To support a Layer 2 VPN
- VPN routing and forwarding (VRF)—To support a Layer 3 VPN

Each routing instance has a unique name and a corresponding IP unicast table. For example, if you configure a routing instance with the name **my-instance**, its corresponding IP unicast table will be **my-instance.inet.0**. All routes for **my-instance** are installed in **my-instance.inet.0**.

Ethernet Encapsulation for Layer 2 VPN (EX8200 and EX4500 Switches Only)

If you are implementing a Layer 2 VPN, you must also configure the physical layer encapsulation type on the customer edge interface and within the routing instance.

LDP for Layer 2 Circuits (EX8200 and EX4500 Switches Only)

If you are implementing a Layer 2 circuit configuration, you must configure LDP as the signaling protocol on the PE switches.

Provider Switch

You must configure one or more *provider* switches as transit switches within the network to support the forwarding of MPLS packets. You can add provider switches without changing the configuration of the PE switches.

A provider switch does not analyze the packets. It refers to an MPLS label forwarding table and swaps one label for another. The new label determines the next hop along the MPLS tunnel. A provider switch cannot perform push or pop operations.

Components Required for All Switches in the MPLS Network

The following MPLS components are configured on both the PE switches and the provider switches:

- [Routing Protocol on page 8](#)
- [Traffic Engineering on page 8](#)
- [MPLS Protocol on page 8](#)
- [RSVP on page 9](#)
- [LDP on page 9](#)
- [Family mpls on page 9](#)

Routing Protocol

MPLS works in coordination with the interior gateway protocol (IGP). Therefore, you must configure OSPF or IS-IS as the routing protocol on the loopback interface and core interfaces of both the PE switches and the provider switches.

The core interfaces can be either Gigabit Ethernet or 10-Gigabit Ethernet interfaces, and they can be configured as either individual interfaces or as aggregated Ethernet interfaces.



NOTE: The core interfaces cannot be configured with VLAN tagging or a VLAN ID. When you configure them to belong to family mpls, they are removed from the default VLAN if they were members of that VLAN. They operate as an exclusive tunnel for MPLS traffic.

Traffic Engineering

Traffic engineering maps traffic flows onto an existing physical topology and provides the ability to move traffic flow away from the shortest path selected by the IGP and to a potentially less congested physical path across a network.

Traffic engineering enables the selection of specific end-to-end paths to send given types of traffic through your network. The configuration of traffic engineering depends upon which routing protocol is being used:

- With OSPF—Traffic engineering needs to be enabled.
- With IS-IS—Traffic engineering is enabled by default.

MPLS Protocol

You must enable the MPLS protocol on all switches that participate in the MPLS network and apply it to the core interfaces of both the PE and provider switches. You do not need to apply it to the loopback interface, because the MPLS protocol uses the framework

established by the signaling protocol to create LSPs. On the PE switches, the configuration of the MPLS protocol must also include the definition of an LSP.

RSVP

RSVP is a signaling protocol that allocates and distributes labels throughout an MPLS network. RSVP sets up unidirectional paths between the ingress PE switch and the egress PE switch. RSVP makes the LSPs dynamic; it can detect topology changes and outages and establish new LSPs to allow traffic to move around a failure.

You must enable RSVP and apply it to the loopback interface and the core interface of both the PE and provider switches. The path message contains the configured information about the resources required for the LSP to be established.

When the egress switch receives the path message, it sends a reservation message back to the ingress switch. This reservation message is passed along from switch to switch along the same path as the original path message. Once the ingress switch receives this reservation message, an RSVP path is established.

The established LSP stays active as long as the RSVP session remains active. RSVP continues activity through the transmissions and responses to RSVP path and reservation messages. If the messages stop for three minutes, the RSVP session terminates and the LSP is lost.

RSVP runs as a separate software process in the Junos OS and is not in the packet-forwarding path.

LDP

LDP is a signaling protocol available on EX8200 switches and EX4500 switches. LDP is a simple, fast-acting signaling protocol that automatically establishes LSP adjacencies within an MPLS network. Switches then share LSP updates such as hello packets and LSP advertisements across the adjacencies.

Because LDP runs on top of an IGP such as IS-IS or OSPF, you must configure LDP and the IGP on the same set of interfaces. After both are configured, LDP begins transmitting and receiving LDP messages through all LDP-enabled interfaces. Because of LDP's simplicity, it cannot perform true traffic engineering like RSVP. LDP does not support bandwidth reservation or traffic constraints.



NOTE: LDP can be used with basic MPLS or with MPLS and a Layer 2 circuit configuration.

Family mpls

You must configure the core interfaces used for MPLS traffic to belong to **family mpls**.



NOTE: You can enable family mpls on either individual interfaces or on aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

Planning Considerations While Using EX8200 Standalone Switches and EX8200 Virtual Chassis

EX8200 standalone switches and EX8200 Virtual Chassis support up to 4000 MPLS tunnel start entries. MPLS tunnel start entries define tunnels to be used to transmit packets across the MPLS network. MPLS tunnel start entries are required for label manipulation (push and swap) beyond two labels. In scenarios requiring make-before-break, for example Layer 3 VPN packets on an ingress PE switch transmitted from one LSP to another, the system creates new tunnel start entries even before the old tunnel start entries are deleted. In such cases, consider a maximum of 2000 MPLS tunnel start entries while planning your MPLS implementation.

MPLS Support on EX4500 and EX4550 Standalone Switches and Virtual Chassis

EX4500 standalone switches and EX4500 Virtual Chassis now support all MPLS features that are supported on EX8200 switches with the following exceptions:

- MPLS is not supported in a mixed EX4200 and EX4500 Virtual Chassis.
- IP over MPLS is not supported when an EX4500 switch is positioned as a non-penultimate hop popping (PHP) MPLS switch; that is, when the label operation is swap. However, EX4500 switches support CCC, Layer2 VPNs, Layer2 circuits, and Layer3 VPNs the same way these are supported on EX8200 switches.
- MPLS over RVIs, LSP statistics, unicast reverse-path forwarding (RPF) statistics, MPLS class of service (CoS), traffic policing, Diffserv-aware LSPs, graceful Routing Engine switchover (GRES), and equal-cost multipath (ECMP) are not supported.
- LSP ping and traceroute for CCCs, Layer 2 circuits, and Layer 2 VPNs are not supported.
- An MPLS configuration that consists of a mix of EX8200 and EX4500 switches does not support VLAN-CCCs.
- VLAN-CCCs require that the VLAN ID is the same at both ends of the connection. The VLAN ID translation feature is not supported.
- EX4500 standalone switches and EX4500 Virtual Chassis support a maximum of 125 instances of Layer 2 VPN, Layer 3 VPN, or CCC connections; or a combination of these.



NOTE: EX4500 switches do not support non-stop routing (NSR) for MPLS. With NSR support for MPLS, EX4500 switches can support up to 225 simultaneous instances of Layer 2 VPN or Layer 3 VPN or CCC connections.

-
- Time to live (TTL) of MPLS packets is not decremented in the ingress MPLS switch.
 - The pipe model of TTL handling is not supported on a Layer 3 VPN if an EX4500 switch is configured as the ingress provider edge (PE) switch.

- Related Documentation**
- [Understanding MPLS and Path Protection on EX Series Switches on page 11](#)
 - [Understanding Using MPLS-Based Layer 2 and Layer 3 VPNs on EX Series Switches on page 20](#)
 - [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
 - [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
 - [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\) on page 83](#)
 - [Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN \(CLI Procedure\) on page 101](#)
 - [Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit \(CLI Procedure\) on page 104](#)
 - [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)
 - *Junos OS VPNs Library for Routing Devices*
 - *MPLS Applications Feature Guide for Routing Devices*

Understanding MPLS and Path Protection on EX Series Switches

Junos OS MPLS for Juniper Networks EX Series Ethernet Switches provides path protection to protect your MPLS network from label switched path (LSP) failures.

By default, an LSP routes itself hop-by-hop from the ingress provider edge switch through the provider switches toward the egress provider edge switch. The LSP generally follows the shortest path as dictated by the local routing table, usually taking the same path as destination-based, best-effort traffic. These paths are “soft” in nature because they automatically reroute themselves whenever a change occurs in a routing table or in the status of a node or link.

Typically, when an LSP fails, the switch immediately upstream from the failure signals the outage to the ingress provider edge switch. The ingress provider edge switch calculates a new path to the egress provider edge switch, establishes the new LSP, and then directs traffic from the failed path to the new path. This rerouting process can be time-consuming and prone to failure. For example, the outage signals to the ingress switch might get lost or the new path might take too long to come up, resulting in significant packet drops.

You can configure path protection by configuring primary and secondary paths on the ingress switch. If the primary path fails, the ingress switch immediately reroutes traffic from the failed path to the standby path, eliminating the need for the ingress switch to calculate a new route and signal a new path. For information about configuring standby LSPs, see “[Configuring Path Protection in an MPLS Network \(CLI Procedure\)](#)” on page 79.

- Related Documentation**
- [Junos OS MPLS for EX Series Switches Overview on page 3](#)
 - [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)
 - [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)

- [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS \(CLI Procedure\) on page 90](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect \(CLI Procedure\) on page 91](#)
- *MPLS Applications Feature Guide for Routing Devices*

Understanding Using CoS with MPLS Networks on EX Series Switches

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. See *EX Series Switch Software Features Overview* for a complete list of the Junos OS MPLS features that are supported on specific EX Series switches.

Juniper Networks EX Series Ethernet Switches support Differentiated Service Code Point (DSCP) or IP precedence and IEEE 802.1p CoS classifiers on the customer-edge interfaces of the ingress provider edge (PE) switch. DSCP or IP precedence classifiers are used for Layer 3 packets. IEEE 802.1p is used for Layer 2 packets.

When a packet enters a customer-edge interface of the ingress PE switch, the switch associates the packet with a particular CoS servicing level before putting the packet onto the label-switched path (LSP). The switches within the LSP utilize the CoS value set at the ingress PE switch. The CoS value that was embedded in the classifier is translated and encoded in the MPLS header by means of the EXP or experimental bits. EX Series switches enable a default EXP classifier and a default EXP rewrite rule. For more information about EXP classifiers and EXP rewrite rules, see [EXP Classifiers and EXP rewrite Rules](#).

This topic includes:

- [EXP Classifiers and EXP rewrite Rules on page 12](#)
- [Guidelines for Using CoS Classifiers on CCCs on page 13](#)
- [Using CoS Classifiers with IP over MPLS on page 13](#)
- [Setting CoS Bits in an MPLS Header on page 14](#)
- [EXP Rewrite Rules on page 15](#)
- [Policer on page 15](#)
- [Schedulers on page 16](#)

EXP Classifiers and EXP rewrite Rules

EX Series switches enable a default EXP classifier and a default EXP rewrite rule. You can configure a custom EXP classifier and a custom EXP rewrite rule if you prefer. However, the switch supports only one type of EXP classifier (default or custom) and only one EXP rewrite rule (default or custom).

You do not bind the EXP classifier or the EXP rewrite rule to individual interfaces. The switch automatically and implicitly applies the default or the custom EXP classifier and the default or the custom EXP rewrite rule to the appropriate MPLS-enabled interfaces.

Because rewrite rules affect only egress interfaces, the switch applies the EXP rewrite rule only to those MPLS interfaces that are transmitting MPLS packets (not to the MPLS interfaces that are receiving the packets).

After traversing the MPLS tunnel, the traffic flows out from the egress provider edge (PE) switch. Before the traffic leaves the egress interface, the egress PE switch copies the EXP bits from the MPLS header to the most significant bits in the original IP packet---that is, to the IP precedence bits. Note that this is the default behavior only on Juniper Networks EX8200 Ethernet Switches (standalone or Virtual Chassis) that are configured for MPLS.

Guidelines for Using CoS Classifiers on CCCs

When you are configuring CoS for MPLS over circuit cross-connect (CCC), there are some additional guidelines, as follows:

- You *must* explicitly bind a CoS classifier to the CCC interface on the ingress PE switch.
- You *must* use the same DSCP, IP precedence, or IEEE 802.1p classifier on CCC interfaces. However, if the CCC interfaces are on the same switch, you cannot configure both a DSCP and an IP precedence classifier on these interfaces. Thus, if you configure one CCC interface to use a DSCP classifier DSCP1, you cannot configure another CCC interface to use another DSCP classifier DSCP2. All the CCC interfaces on the switch must use the same DSCP (or IP precedence) classifier and the same IEEE 802.1p classifier.
- You *cannot* configure one CCC interface to use a DSCP classifier and another CCC interface to use an IP precedence classifier, because these classifier types overlap.
- You *can* configure one CCC interface to use a DSCP classifier and another CCC interface to use IEEE 802.1p classifier.
- You *can* configure one CCC interface to use both a DSCP and an IEEE 802.1p classifier. If you configure a CCC interface to use both these classifiers, the DSCP classifier is used for routing Layer 3 packets and the IEEE 802.1p classifier is used for routing Layer 2 packets.
- You *can* configure one CCC interface to use both an IP precedence and an IEEE 802.1p classifier. If you configure a CCC interface to use both these classifiers, the IP precedence classifier is used for routing Layer 3 packets and the IEEE 802.1p classifier is used for routing Layer 2 packets.



NOTE: These guidelines are not applicable to Juniper Networks EX8200 Ethernet Switches (standalone or Virtual Chassis).

You can define multiple DSCP, IP precedence, and IEEE 802.1p classifiers for the non-CCC interfaces on a switch.

Using CoS Classifiers with IP over MPLS

When you are configuring CoS for IP over MPLS, the customer-edge interface uses the CoS configuration for the switch as the default. You do not have to bind a classifier to

the customer-edge interface in this case. There are no restrictions on using multiple DSCP, IP precedence, and IEEE 802.1p classifiers on the same switch.

- You can modify the CoS classifier for a particular interface, but it is not required.
- You can configure a DSCP classifier, DSCP1 on the first interface, another DSCP classifier, DSCP2 on the second interface, and an IP precedence classifier on a third interface, and so forth.

Setting CoS Bits in an MPLS Header

When traffic enters an LSP tunnel, the CoS bits in the MPLS header are set in one of two ways:

- The number of the output queue into which the packet was buffered and the packet loss priority (PLP) bit are written into the MPLS header and are used as the packet's CoS value. This behavior is the default, and no configuration is required. The *Class of Service Feature Guide for Routing Devices* explains the IP CoS values, and summarizes how the CoS bits are treated.
- You set a fixed CoS value on all packets entering the LSP tunnel. A fixed CoS value means that all packets entering the LSP receive the same class of service.

The CoS value can be a decimal number from 0 through 7. This number corresponds to a 3-bit binary number. The high-order 2 bits of the CoS value select which transmit queue to use on the outbound interface card.

The low-order bit of the CoS value is treated as the PLP bit and is used to select the RED drop profile to use on the output queue. If the low-order bit is 0, the non-PLP drop profile is used, and if the low-order bit is 1, the PLP drop profile is used. It is generally expected that random early detection (RED) will more aggressively drop packets that have the PLP bit set. For more information about RED and drop profiles, see the *Class of Service Feature Guide for Routing Devices*.



NOTE: Configuring the PLP drop profile to drop packets more aggressively (for example, setting the CoS value from 6 to 7) decreases the likelihood of traffic getting through.

Table 3 on page 14 summarizes how MPLS CoS values correspond to the transmit queue and PLP bit. Note that in MPLS, the mapping between the CoS bit value and the output queue is hard-coded. You cannot configure the mapping for MPLS; you can configure it only for IPv4 traffic flows, as described in the *Class of Service Feature Guide for Routing Devices*.

Table 3: MPLS CoS Values

MPLS CoS Value	Bits	Transmit Queue	PLP Bit
0	000	0	Not set
1	001	0	Set

Table 3: MPLS CoS Values (*continued*)

MPLS CoS Value	Bits	Transmit Queue	PLP Bit
2	010	1	Not set
3	011	1	Set
4	100	2	Not set
5	101	2	Set
6	110	3	Not set
7	111	3	Set

Because the CoS value is part of the MPLS header, the value is associated with the packets only while they travel through the LSP tunnel. The value is not copied back to the IP header when the packets exit from the LSP tunnel.



NOTE: On EX8200 switches that run MPLS-based Layer 2 virtual private networks (VPNs):

- If you configure an LSP CoS, the EXP bits of the MPLS packet continue to use the same CoS values that are configured at the interface level.
- For Virtual Chassis, if the input and output interfaces are on different line cards, then the loss priority value that you configured on the first line card is not carried to the subsequent line cards. The loss priority for the outgoing traffic from the subsequent line cards is always set to low.

EXP Rewrite Rules

When traffic passes from the customer-edge interface to an MPLS interface, the DSCP, IP precedence, or IEEE 802.1p CoS classifier is translated into the EXP bits within the MPLS header. You cannot disable the default EXP rewrite rule, but you can configure your own custom EXP classifier and a custom EXP rewrite rule. You cannot bind the EXP classifier to individual MPLS interfaces; the switch applies it globally to all the MPLS-enabled interfaces on the switch.

Only one EXP rewrite rule (either default or custom) is supported on a switch. The switch applies it to all the egress interfaces on which MPLS is enabled. This is, however, not the case with EX8200 switches. With EX8200 switches, you must explicitly apply the rewrite rule on each of the egress interfaces.

Policer

Policing helps to ensure that the amount of traffic forwarded through an LSP never exceeds the requested bandwidth allocation. During periods of congestion (when the total rate of queuing packets exceeds the rate of transmission), any new packets being

sent to an interface can be dropped because there is no place to store them. You can configure a policer on the ingress PE switch to prevent this:

- If you are using MPLS over CCC, you bind the policer to the LSP. You cannot bind a policer to a CCC interface.
- If you are using IP over MPLS, you bind the policer to the **inet-family** customer-edge interface. You cannot bind a policer to the LSP when you are using IP over MPLS.



NOTE: You cannot configure LSP policers on EX8200 switches.

Schedulers

The schedulers for using CoS with MPLS are the same as for the other CoS configurations on EX Series switches. Default schedulers are provided for best-effort and network-control forwarding classes. If you are using assured-forwarding, expedited-forwarding, or any custom forwarding class, we recommend that you configure a scheduler to support that forwarding class. See *Understanding CoS Schedulers*.

Related Documentation

- [Understanding CoS Classifiers](#)
- [Example: Configuring CoS on EX Series Switches](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect \(CLI Procedure\) on page 91](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS \(CLI Procedure\) on page 90](#)
- [Configuring Rewrite Rules for EXP Classifiers on MPLS Networks \(CLI Procedure\)](#)
- [Configuring CoS on Provider Switches of an MPLS Network \(CLI Procedure\) on page 94](#)
- [Configuring CoS Bits for an MPLS Network \(CLI Procedure\) on page 95](#)

Understanding MPLS Label Operations on EX Series Switches

In the traditional packet-forwarding paradigm, as a packet travels from one switch to the next, an independent forwarding decision is made at each hop. The IP network header is analyzed and the next hop is chosen based on this analysis and on the information in the routing table. In an MPLS environment, the analysis of the packet header is made only once, when a packet enters the MPLS tunnel (that is, the path used for MPLS traffic).

When an IP packet enters a label-switched path (LSP), the ingress provider edge (PE) switch examines the packet and assigns it a label based on its destination, placing the label in the packet's header. The label transforms the packet from one that is forwarded based on its IP routing information to one that is forwarded based on information associated with the label. The packet is then forwarded to the next provider switch in the LSP. This switch and all subsequent switches in the LSP do not examine any of the IP routing information in the labeled packet. Rather, they use the label to look up information in their label forwarding table. They then replace the old label with a new label and forward the packet to the next switch in the path. When the packet reaches the egress PE switch, the label is removed, and the packet again becomes a native IP packet and is again forwarded based on its IP routing information.

This topic describes:

- [MPLS Label-Switched Paths and MPLS Labels on the Switches on page 17](#)
- [Reserved Labels on page 18](#)
- [MPLS Label Operations on the Switches on page 18](#)
- [Penultimate-Hop Popping and Ultimate-Hop Popping on page 19](#)

MPLS Label-Switched Paths and MPLS Labels on the Switches


When a packet enters the MPLS network, it is assigned to an LSP. Each LSP is identified by a label, which is a short (20-bit), fixed-length value at the front of the MPLS label (32 bits). Labels are used as lookup indexes for the label forwarding table. For each label, this table stores forwarding information. Because no additional parsing or lookup is done on the encapsulated packet, MPLS supports the transmission of any other protocols within the packet payload.



NOTE: The implementation of MPLS on Juniper Networks EX3200 and EX4200 Ethernet Switches supports only single-label packets. However, MPLS on Juniper Networks EX8200 Ethernet Switches supports packets with as many as three labels.

[Figure 1 on page 18](#) shows the encoding of a single label. The encoding appears after data link layer headers, but before any network layer header.

Figure 1: Label Encoding

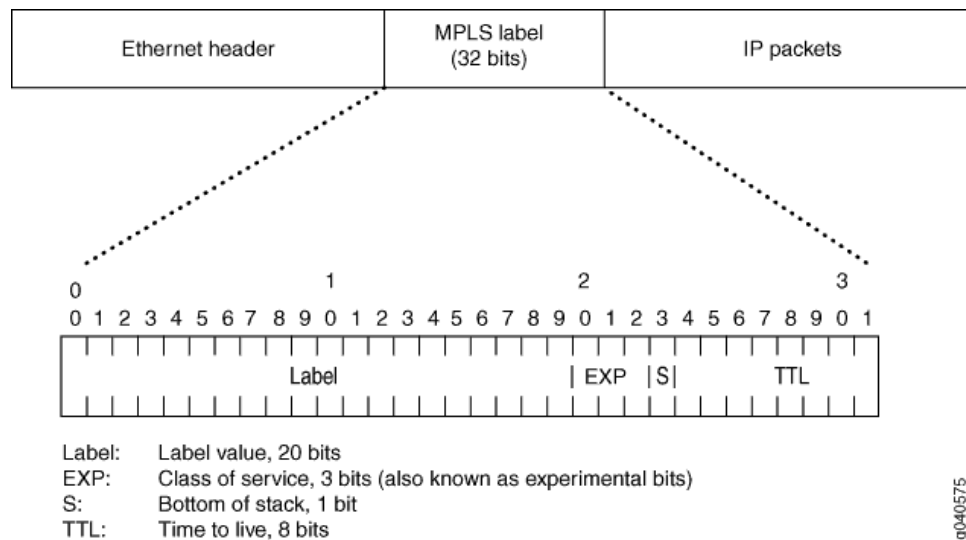

Reserved Labels

Labels range from 0 through 1,048,575. Labels 0 through 999,999 are for internal use.

Some of the reserved labels (in the range 0 through 15) have well-defined meanings. The following reserved labels are used by the switches:

- 0, IPv4 Explicit Null label—This value is valid only when it is the sole label entry (no label stacking). It indicates that the label must be popped on receipt. Forwarding continues based on the IP version 4 (IPv4) packet.
- 1, Router Alert label—When a packet is received with a top label value of 1, it is delivered to the local software module for processing.
- 2, IPv6 Explicit Null label—This value is legal only when it is the sole label entry (no label stacking). It indicates that the label must be popped on receipt.
- 3, Implicit Null label—This label is used in the signaling protocol (RSVP) only to request label popping by the downstream switch. It never actually appears in the encapsulation. Labels with a value of 3 must not be used in the data packet as real labels. No payload type (IPv4 or IPv6) is implied with this label.

MPLS Label Operations on the Switches

EX Series switches support the following label operations:

- Push
- Pop
- Swap

The push operation affixes a new label to the top of the IP packet. For IPv4 packets, the new label is the first label. The time to live (TTL) field value in the packet header is derived

from the IP packet header. The push operation cannot be applied to a packet that already has an MPLS label.

The pop operation removes a label from the beginning of the packet. Once the label is removed, the TTL is copied from the label into the IP packet header, and the underlying IP packet is forwarded as a native IP packet

The swap operation removes an existing MPLS label from an IP packet and replaces it with a new MPLS label, based on the following:

- Incoming interface
- Label
- Label forwarding table

Figure 2 on page 19 shows an IP packet without a label arriving on the customer edge interface (**ge-0/0/1**) of the ingress PE switch. The ingress PE switch examines the packet and identifies that packet's destination as the egress PE switch. The ingress PE switch applies label 100 to the packet and sends the MPLS packet to its outgoing MPLS core interface (**ge-0/0/5**). The MPLS packet is transmitted on the MPLS tunnel through the provider switch, where it arrives at interface **ge-0/0/5** with label 100. The provider switch swaps label 100 to label 200 and forwards the MPLS packet through its core interface (**ge-0/0/7**) to the next hop on the tunnel, which is the egress PE switch. The egress PE switch receives the MPLS packet through its core interface (**ge-0/0/7**), removes the MPLS label, and sends the IP packet out of its customer edge interface (**ge-0/0/1**) to a destination that is beyond the tunnel.

Figure 2: MPLS Label Swapping

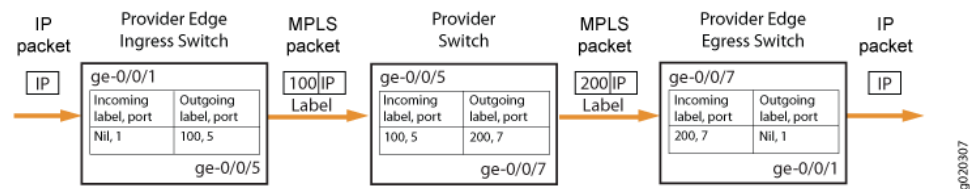


Figure 2 on page 19 shows the path of a packet as it passes in one direction from the ingress PE switch to the egress PE switch. However, the MPLS configuration also allows traffic to travel in the reverse direction. Thus, each PE switch operates as both an ingress switch and an egress switch.

Penultimate-Hop Popping and Ultimate-Hop Popping

The switches enable penultimate-hop popping (PHP) by default with IP over MPLS configurations. With PHP, the penultimate provider switch is responsible for popping the MPLS label and forwarding the traffic to the egress PE switch. The egress PE switch then performs an IP route lookup and forwards the traffic. This reduces the processing load on the egress PE switch, because it is not responsible for popping the MPLS label.

On EX8200 switches, you can choose to use either the default, PHP, or to configure ultimate-hop popping.

- The default advertised label is label 3 (Implicit Null label). If label 3 is advertised, the penultimate-hop switch removes the label and sends the packet to the egress PE switch.
- If ultimate-hop popping is enabled, label 0 (IPv4 Explicit Null label) is advertised and the egress PE switch of the LSP removes the label.

Related Documentation

- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)
- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
- [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\) on page 83](#)
- [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)
- *Junos OS VPNs Library for Routing Devices*
- *Junos OS MPLS Applications Library for Routing Devices*

Understanding Using MPLS-Based Layer 2 and Layer 3 VPNs on EX Series Switches

On EX8200 and EX4500 switches, you can use MPLS-based Layer 2 and Layer 3 virtual private networks (VPNs) or MPLS Layer 2 circuits, allowing you to securely connect geographically diverse sites across an MPLS network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as voice over IP (VoIP) and other business-critical functions.

A VPN uses a public telecommunications infrastructure, such as the Internet, to provide remote offices or individual users with secure access to their organization's network. VPNs are designed to provide the same level of performance and security as privately owned or leased networks but without the attendant costs.

This topic describes:

- [MPLS-Based Layer 2 VPNs on page 20](#)
- [Layer 2 Circuits on page 21](#)
- [MPLS-Based Layer 3 VPNs on page 22](#)
- [Comparing an MPLS-Based Layer 2 VPN and an MPLS-Based Layer 3 VPN on page 22](#)

MPLS-Based Layer 2 VPNs


In an MPLS-based Layer 2 VPN, traffic is forwarded by the customer's customer edge (CE) switch (or router) to the service provider's provider edge (PE) switch in a Layer 2 format. It is carried by MPLS over the service provider's network and then converted back to Layer 2 format at the receiving site.

On a Layer 2 VPN, routing occurs on the customer's switches, typically on the CE switch. The CE switch connected to a service provider on a Layer 2 VPN must select the appropriate circuit on which to send traffic. The PE switch receiving the traffic sends it across the service provider's network to the PE switch connected to the receiving site. The PE switches do not store or process the customer's routes; the switches must be configured to send data to the appropriate tunnel.

For a Layer 2 VPN, customers must configure their own switches to carry all Layer 3 traffic. The service provider must detect only how much traffic the Layer 2 VPN will need to carry. The service provider's switches carry traffic between the customer's sites using Layer 2 VPN interfaces. The VPN topology is determined by policies configured on the PE switches.

Customers must know only which VPN interfaces connect to which of their own sites. [Figure 3 on page 21](#) illustrates a full-mesh Layer 2 VPN in which each site has a VPN interface linked to each of the other customer sites. In a full-mesh topology between all three sites, each site requires two logical interfaces (one for each of the other CE routers or switches), although only one physical link is needed to connect each PE switch to each CE router or switch.

Figure 3: Layer 2 VPN Connecting CE Switches

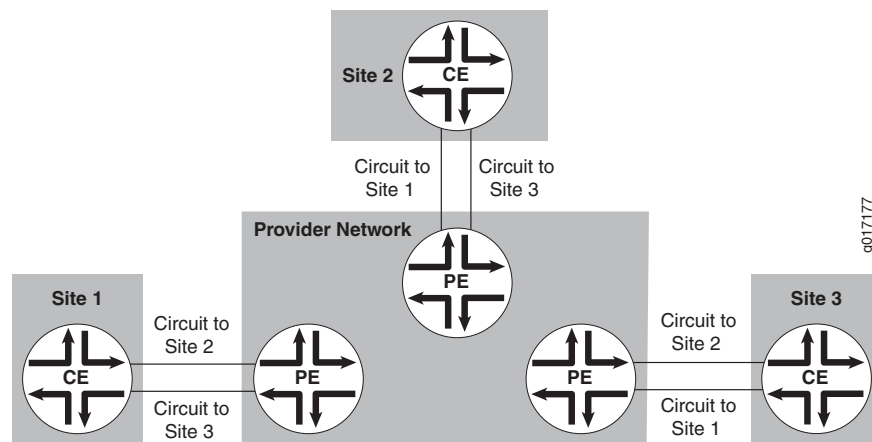

Layer 2 Circuits

A Layer 2 circuit is a point-to-point Layer 2 connection that uses MPLS or another tunneling technology on the service provider's network. A Layer 2 circuit is similar to a circuit cross-connect (CCC), except that multiple Layer 2 circuits can be transported over a single label-switched path (LSP) tunnel between two provider edge (PE) switches. In contrast, each CCC requires a dedicated LSP.

The Junos OS implementation of Layer 2 circuits supports only the remote form of a Layer 2 circuit; that is, a connection from a local customer edge (CE) switch to a remote CE switch.

Packets are sent to the remote CE switch by means of an egress virtual private network (VPN) label advertised by the remote PE switch. The VPN label transits over either an

RSVP or an LDP LSP (or other type) tunnel to the remote PE switch connected to the remote CE switch. LDP is the signaling protocol used for advertising VPN labels.

Return traffic sent from the remote CE switch to the local CE switch uses an ingress VPN label advertised by the local PE switch.

MPLS-Based Layer 3 VPNs

In a Layer 3 VPN, the routing occurs on the service provider's routers. Therefore, Layer 3 VPNs require more configuration on the part of the service provider, because the service provider's PE routers must store and process the customer's routes.

In the Junos OS, Layer 3 VPNs are based on RFC 4364, [BGP/MPLS IP Virtual Private Networks](#). This RFC defines a mechanism by which service providers can use their IP backbones to provide Layer 3 VPN services to their customers. The sites that make up a Layer 3 VPN are connected over a provider's existing public Internet backbone.

VPNs based on RFC 4364 are also known as BGP/MPLS VPNs because BGP is used to distribute VPN routing information across the provider's backbone, and MPLS is used to forward VPN traffic across the backbone to remote VPN sites.

Customer networks, because they are private, can use either public addresses or private addresses, as defined in RFC 1918, [Address Allocation for Private Internets](#). When customer networks that use private addresses connect to the public Internet infrastructure, the private addresses might overlap with the private addresses used by other network users. BGP/MPLS VPNs solve this problem by prefixing a VPN identifier to each address from a particular VPN site, thereby creating an address that is unique both within the VPN and within the public Internet.

In addition, each VPN has its own VPN-specific routing table that contains the routing information for that VPN only. Two different VPNs can use overlapping addresses. Each route within a VPN is assigned an MPLS label (for example, MPLS-ARCH, MPLS-BGP, or MPLS-ENCAPS). When BGP distributes a VPN route, it also distributes an MPLS label for that route. Before a customer data packet travels across the service provider's backbone, it is encapsulated along with the MPLS label that corresponds to the route within the customer's VPN that is the best match based on the packet's destination address. This MPLS packet is further encapsulated with another MPLS label or with an IP, so that it gets tunneled across the backbone to the egress provider edge (PE) switch. Thus, the backbone core switches do not need to know the VPN routes.

Comparing an MPLS-Based Layer 2 VPN and an MPLS-Based Layer 3 VPN

The differences between Layer 2 VPNs and Layer 3 VPNs are summarized in [Table 4 on page 22](#)

Table 4: Comparing an MPLS-Based Layer 2 VPN and an MPLS-Based Layer 3 VPN

Layer 2 VPN	Layer 3 VPN
Customer sites appear to be on the same LAN even if geographically dispersed.	Service provider's technical expertise ensures efficient site-to-site routing.
	Service providers can provide additional value-added services through network convergence that encompasses voice, video, and data.

Table 4: Comparing an MPLS-Based Layer 2 VPN and an MPLS-Based Layer 3 VPN (*continued*)

Layer 2 VPN	Layer 3 VPN
<p>The service provider does not require information about the customer's network topology, policies, routing information, etc.</p> <p>The customer has complete control over policies and routing.</p>	<p>Customers must share information about their network topology.</p> <p>The service provider determines the policies and routing.</p>
<p>The CE switch forwards traffic to the service provider's PE switch in Layer 2 format.</p>	<p>The customer's CE switch must be configured to use BGP or OSPF to communicate with the service provider's PE switch to carry IP prefixes across the network. Other protocol packets are not supported.</p>

- Related Documentation
- [Understanding MPLS Label Operations on EX Series Switches on page 17](#)
 - [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)
 - [Example: Configuring MPLS-Based Layer 2 VPNs on page 63](#)
 - [Example: Configuring MPLS-Based Layer 3 VPNs on EX Series Switches on page 54](#)

PART 2

Configuration

- [Configuration Examples on page 27](#)
- [Configuration Tasks on page 77](#)
- [Configuration Statements on page 117](#)

CHAPTER 2

Configuration Examples

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Example: Combining CoS with MPLS on EX Series Switches on page 42](#)
- [Example: Configuring MPLS-Based Layer 3 VPNs on EX Series Switches on page 54](#)
- [Example: Configuring MPLS-Based Layer 2 VPNs on page 63](#)

Example: Configuring MPLS on EX8200 and EX4500 Switches

You can configure MPLS on switches to increase transport efficiency in your network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as voice over IP (VoIP) and other business-critical functions.

To implement MPLS on the switches, you must configure two provider edge (PE) switches—an ingress PE switch and an egress PE switch— and at least one provider (transit) switch. You can configure the customer edge (CE) interfaces on the PE switches of the MPLS network as either circuit cross-connect (CCC) or IP (**family inet**) interfaces.

This example shows how to configure an MPLS tunnel using a simple interface as a CCC:



NOTE: This example shows how to configure MPLS using a simple interface as a CCC. For information on configuring a tagged VLAN interface as a CCC, see [“Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN \(CLI Procedure\)” on page 101](#) or [“Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit \(CLI Procedure\)” on page 104](#).

- [Requirements on page 28](#)
- [Overview and Topology on page 28](#)
- [Configuring the Local PE Switch on page 32](#)
- [Configuring the Remote PE Switch on page 35](#)
- [Configuring the Provider Switch on page 37](#)
- [Verification on page 39](#)

Requirements

This example uses the following hardware and software components:

- Junos OS Release 10.1 or later for switches
- Three EX Series switches

Before you begin configuring MPLS, ensure that you have configured the routing protocol (OSPF or IS-IS) on the core interface and the loopback interface on all the switches. This example includes the configuration of OSPF on all the switches. For information on configuring IS-IS as the routing protocol, see the [Junos OS Routing Protocols Configuration Guide](#).

Overview and Topology

This example includes an ingress or local PE switch, an egress or remote PE switch, and one provider switch. It includes CCCs that tie the customer edge interface of the local PE switch (PE-1) to the customer edge interface of the remote PE switch (PE-2). It also describes how to configure the core interfaces of the PE switches and the provider switch to support the transmission of the MPLS packets. In this example, the core interfaces that connect the local PE switch and the provider switch are individual interfaces, while the core interfaces that connect the remote PE switch and the provider switch are aggregated Ethernet interfaces.



NOTE:

- Core interfaces cannot be tagged VLAN interfaces.
 - Core interfaces can be aggregated Ethernet interfaces. This example includes a LAG between the provider switch and the remote PE switch because this type of configuration is another option you can implement. For information on configuring LAGs, see [Configuring Aggregated Ethernet Links \(CLI Procedure\)](#).
-

Figure 4 on page 29 shows the topology used in this example.

Figure 4: Configuring MPLS on EX Series Switches

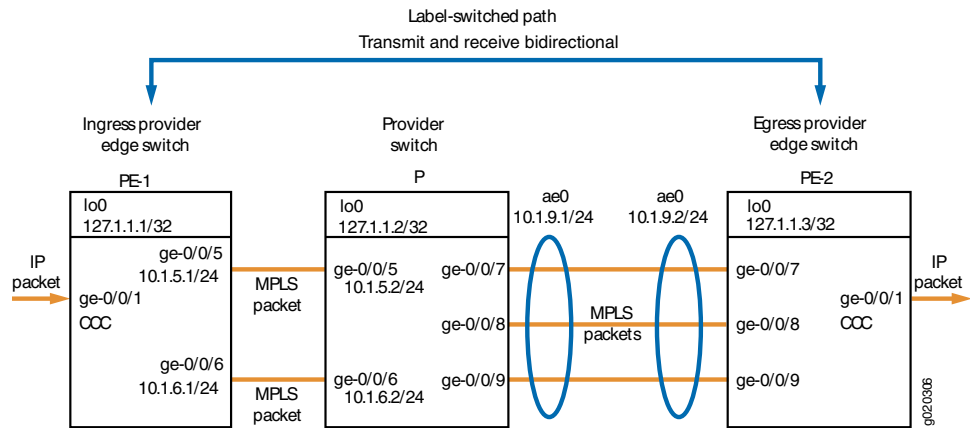


Table 5 on page 29 shows the MPLS configuration components used for the ingress PE switch in this example.

Table 5: Components of the Ingress PE Switch in the Topology for MPLS with Interface-Based CCC

Property	Settings	Description
Local PE switch hardware	EX Series switch	PE-1
Loopback address	lo0 127.1.1.1/32	Identifies PE-1 for interswitch communications.
Routing protocol	ospf traffic-engineering	Indicates that this switch is using OSPF as the routing protocol and that traffic engineering is enabled.
MPLS protocol and definition of label-switched path	mpls label-switched-path lsp_to_pe2_ge1 to 127.1.13	Indicates that this PE switch is using the MPLS protocol with the specified LSP to reach the other PE switch (specified by the loopback address). The statement must also specify the core interfaces to be used for MPLS traffic.
RSVP	rsvp	Indicates that this switch is using RSVP. The statement must specify the loopback address and the core interfaces that will be used for the RSVP session.
Interface family	family inet family mpls family ccc	The logical units of the core interfaces are configured to belong to both family inet and family mpls . The logical unit of the customer edge interface is configured to belong to family ccc .

Table 5: Components of the Ingress PE Switch in the Topology for MPLS with Interface-Based CCC (continued)

Property	Settings	Description
Customer edge interface	ge-0/0/1	Interface that connects this network to devices outside the network.
Core interfaces	ge-0/0/5.0 and ge-0/0/6.0 with IP addresses 10.1.5.1/24 and 10.1.6.1/24	Interfaces that connect to other switches within the MPLS network.
CCC definition	connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/1.0 transmit-lsp lsp_to_pe2_ge1 receive-lsp lsp_to_pe1_ge1	Associates the circuit cross-connect (CCC), ge-0/0/1 , with the LSPs that have been defined on the local and remote PE switches.

[Table 6 on page 30](#) shows the MPLS configuration components used for the egress PE switch in this example.

Table 6: Components of the Egress PE Switch in the Topology for MPLS with Interface-Based CCC

Property	Settings	Description
Remote PE switch hardware	EX Series switch	PE-2
Loopback address	lo0 127.1.1.3/32	Identifies PE-2 for interswitch communications.
Routing protocol	ospf traffic-engineering	Indicates that this switch is using OSPF as the routing protocol and that traffic engineering is enabled.
MPLS protocol and definition of label-switched path	mpls label-switched-path lsp_to_pe1_ge1 to 127.1.1.1	Indicates that this PE switch is using the MPLS protocol with the specified label-switched path (LSP) to reach the other PE switch. The statement must also specify the core interfaces to be used for MPLS traffic.
RSVP	rsvp	Indicates that this switch is using RSVP. The statement must specify the loopback address and the core interfaces that will be used for the RSVP session.

Table 6: Components of the Egress PE Switch in the Topology for MPLS with Interface-Based CCC (continued)

Property	Settings	Description
Interface family	family inet	The logical unit of the core interface is configured to belong to both family inet and family mpls .
	family mpls	
	family ccc	The logical unit of the customer edge interface is configured to belong to family ccc .
Customer edge interface	ge-0/0/1	Interface that connects this network to devices outside the network.
Core interface	ae0 with IP address 10.1.9.2/24	Aggregated Ethernet interface on PE-2 that connects to aggregated Ethernet interface ae0 of the provider switch and belongs to family mpls .
CCC definition	connections remote-interface-switch ge-1-to-pe1 interface ge-0/0/1.0 transmit-lsp lsp_to_pe1_ge1; receive-lsp lsp_to_pe2_ge1;	Associates the CCC, ge-0/0/1 , with the LSPs that have been defined on the local and remote PE switches.

[Table 7 on page 31](#) shows the MPLS configuration components used for the provider switch in this example.

Table 7: Components of the Provider Switch in the Topology for MPLS with Interface-Based CCC

Property	Settings	Description
Provider switch hardware	EX Series switch	Transit switch within the MPLS network configuration.
Loopback address	lo0 127.1.1.2/32	Identifies provider switch for interswitch communications.
Routing protocol	ospf traffic-engineering	Indicates that this switch is using OSPF as the routing protocol and that traffic engineering is enabled.
MPLS protocol	mpls	Indicates that this switch is using the MPLS protocol. The statement must specify the core interfaces that will be used for MPLS traffic.

Table 7: Components of the Provider Switch in the Topology for MPLS with Interface-Based CCC (*continued*)

Property	Settings	Description
RSVP	rsvp	Indicates that this switch is using RSVP. The statement must specify the loopback and the core interfaces that will be used for the RSVP session.
Interface family	family inet family mpls	The logical units for the loopback interface and the core interfaces belong to family inet . The logical units of the core interfaces are also configured to belong to family mpls .
Core interfaces	ge-0/0/5.0 and ge-0/0/6.0 with IP addresses 10.1.5.1/24 and 10.1.6.1/24 and ae0 with IP address 10.1.9.1/24	Interfaces that connect the provider switch (P) to PE-1. Aggregated Ethernet interface on P that connects to aggregated Ethernet interface ae0 of PE-2.

Configuring the Local PE Switch

CLI Quick Configuration To quickly configure the local ingress PE switch, copy the following commands and paste them into the switch terminal window of PE-1:

```
[edit]
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/0/6.0
set protocols mpls label-switched-path lsp_to_pe2_ge1 to 127.1.1.3
set protocols mpls interface ge-0/0/5.0
set protocols mpls interface ge-0/0/6.0
set protocols rsvp interface lo0.0
set protocols rsvp interface ge-0/0/5.0
set protocols rsvp interface ge-0/0/6.0
set interfaces lo0 unit 0 family inet address 127.1.1.1/32
set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/0/6 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family ccc
set protocols connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/1.0
set protocols connections remote-interface-switch ge-1-to-pe2 transmit-lsp lsp_to_pe2_ge1
set protocols connections remote-interface-switch ge-1-to-pe2 receive-lsp lsp_to_pe1_ge1
```

Step-by-Step Procedure To configure the local ingress PE switch:

1. Configure OSPF with traffic engineering enabled:

```
[edit protocols]
user@switchPE-1# set ospf traffic-engineering
```
2. Configure OSPF on the loopback address and the core interfaces:

- ```
[edit protocols]
user@switchPE-1# set ospf area 0.0.0.0 interface lo0.0
user@switchPE-1# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switchPE-1# set ospf area 0.0.0.0 interface ge-0/0/6.0
```
3. Configure MPLS on this PE switch (PE-1) with a label-switched path (LSP) to the other PE switch (PE-2):
 

```
[edit protocols]
user@switchPE-1# set mpls label-switched-path lsp_to_pe2_ge1 to 127.1.1.3
```
  4. Configure MPLS on the core interfaces:
 

```
[edit protocols]
user@switchPE-1# set mpls interface ge-0/0/5.0
user@switchPE-1# set mpls interface ge-0/0/6.0
```
  5. Configure RSVP on the loopback interface and the core interfaces:
 

```
[edit protocols]
user@switchPE-1# set rsvp interface lo0.0
user@switchPE-1# set rsvp interface ge-0/0/5.0
user@switchPE-1# set rsvp interface ge-0/0/6.0
```
  6. Configure IP addresses for the loopback interface and the core interfaces:
 

```
[edit]
user@switchPE-1# set interfaces lo0 unit 0 family inet address 127.1.1.32
user@switchPE-1# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switchPE-1# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
```
  7. Configure **family mpls** on the logical unit of the core interface addresses:
 

```
[edit]
user@switchPE-1# set interfaces ge-0/0/5 unit 0 family mpls
user@switchPE-1# set interfaces ge-0/0/6 unit 0 family mpls
```
  8. Configure the logical unit of the customer edge interface as a CCC:
 

```
[edit interfaces ge-0/0/1 unit 0]
-user@PE-1# set family ccc
```
  9. Configure the interface-based CCC from PE-1 to PE-2:



**NOTE:** You can also configure a tagged VLAN interface as a CCC. See “Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN (CLI Procedure)” on page 101 or “Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit (CLI Procedure)” on page 104.

```
[edit protocols]
user@PE-1# set connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/1.0
user@PE-1# set connections remote-interface-switch ge-1-to-pe2 transmit-lsp lsp_to_pe2_ge1
user@PE-1# set connections remote-interface-switch ge-1-to-pe2 receive-lsp lsp_to_pe1_ge1
```

**Results** Display the results of the configuration:

```
user@switchPE-1> show configuration

interfaces {
 ge-0/0/1 {
 unit 0 {
 family ccc;
 }
 }
}
```

```
ge-0/0/5 {
 unit 0 {
 family inet {
 address 10.1.5.1/24;
 }
 family mpls;
 }
}
ge-0/0/6 {
 unit 0 {
 family inet {
 address 10.1.6.1/24;
 }
 family mpls;
 }
}
lo0 {
 unit 0 {
 family inet {
 address 127.1.1.1/32;
 }
 }
}
protocols {
 rsvp {
 interface lo0.0;
 interface ge-0/0/5.0;
 interface ge-0/0/6.0;
 }
 mpls {
 label-switched-path lsp_to_pe2_ge1 {
 to 127.1.1.3;
 }
 interface ge-0/0/5.0;
 interface ge-0/0/6.0;
 }
 ospf {
 traffic-engineering;
 area 0.0.0.0 {
 interface lo0.0;
 interface ge-0/0/5.0;
 interface ge-0/0/6.0;
 }
 }
}
connections {
 remote-interface-switch ge-1-to-pe2 {
 interface ge-0/0/1.0;
 transmit-lsp lsp_to_pe2_ge1;
 receive-lsp lsp_to_pe1_ge1;
 }
}
```

## Configuring the Remote PE Switch

**CLI Quick Configuration** To quickly configure the remote PE switch, copy the following commands and paste them into the switch terminal window of PE-2:

```
[edit]
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ae0
set protocols mpls label-switched-path lsp_to_pe1_ge1 to 127.1.1.1
set protocols mpls interface ae0
set protocols rsvp interface lo0.0
set protocols rsvp interface ae0
set interfaces lo0 unit 0 family inet address 127.1.1.3/32
set interfaces ae0 unit 0 family inet address 10.1.9.2/24
set interfaces ae0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family ccc
set protocols connections remote-interface-switch ge-1-to-pe1 interface ge-0/0/1.0
set protocols connections remote-interface-switch ge-1-to-pe1 transmit-lsp lsp_to_pe1_ge1
set protocols connections remote-interface-switch ge-1-to-pe1 receive-lsp lsp_to_pe2_ge1
```

**Step-by-Step Procedure** To configure the remote PE switch (PE-2):

1. Configure OSPF with traffic engineering enabled:  

```
[edit protocols]
user@switchPE-2# set ospf traffic-engineering
```
2. Configure OSPF on the loopback interface and the core interface:  

```
[edit protocols]
user@switchPE-2# set ospf area 0.0.0.0 interface lo0.0
user@switchPE-2# set ospf area 0.0.0.0 interface ae0
```
3. Configure MPLS on this switch (PE-2) with a label-switched path (LSP) to the other PE switch (PE-1):  

```
[edit protocols]
user@switchPE-2# set mpls label-switched-path lsp_to_pe1_ge1 to 127.1.1.1
```
4. Configure MPLS on the core interface:  

```
[edit protocols]
user@switchPE-2# set mpls interface ae0
```
5. Configure RSVP on the loopback interface and the core interface:  

```
[edit protocols]
ser@switchPE-2# set rsvp interface lo0.0
user@switchPE-2# set rsvp interface ae0
```
6. Configure IP addresses for the loopback interface and the core interface:  

```
[edit]
user@switchPE-2# set interfaces lo0 unit 0 family inet address 127.1.1.3/32
user@switchPE-2# set interfaces ae0 unit 0 family inet address 10.1.9.2/24
```
7. Configure **family mpls** on the logical unit of the core interface:  

```
[edit]
user@switchPE-2# set interfaces ae0 unit 0 family mpls
```
8. Configure the logical unit of the customer edge interface as a CCC:  

```
[edit interfaces ge-0/0/1 unit 0]
user@PE-2# set family ccc
```
9. Configure the interface-based CCC from PE-2 to PE-1:

```
[edit protocols]
user@PE-2# set connections remote-interface-switch ge-1-to-pe1 interface ge-0/0/1.0
user@PE-2# set connections remote-interface-switch ge-1-to-pe1 transmit-lsp lsp_to_pe1_ge1
user@PE-2# set connections remote-interface-switch ge-1-to-pe1 receive-lsp lsp_to_pe2_ge1
```

**Results** Display the results of the configuration:

```
user@switchPE-2> show configuration

interfaces {
 ge-0/0/1 {
 unit 0 {
 family ccc;
 }
 }
 ae0 {
 unit 0 {
 family inet {
 address 10.1.9.2/24;
 }
 family mpls;
 }
 }
 lo0 {
 unit 0 {
 family inet {
 address 127.1.1.3/32;
 }
 }
 }
}
protocols {
 rsvp {
 interface lo0.0;
 interface ae0.0;
 }
 mpls {
 label-switched-path lsp_to_pe1_ge1 {
 to 127.1.1.1;
 }
 interface ae0.0;
 }
 ospf {
 traffic-engineering;
 area 0.0.0.0 {
 interface ae0.0;
 }
 }
 connections {
 remote-interface-switch ge-1-to-pe1 {
 interface ge-0/0/1.0;
 transmit-lsp lsp_to_pe1_ge1;
 receive-lsp lsp_to_pe2_ge1;
 }
 }
}
```

## Configuring the Provider Switch

**CLI Quick Configuration** To quickly configure the provider switch, copy the following commands and paste them into the switch terminal window:

```
[edit]
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/0/6.0
set protocols ospf area 0.0.0.0 interface ae0
set protocols mpls interface ge-0/0/5.0
set protocols mpls interface ge-0/0/6.0
set protocols mpls interface ae0
set protocols rsvp interface lo0.0
set protocols rsvp interface ge-0/0/5.0
set protocols rsvp interface ge-0/0/6.0
set protocols rsvp interface ae0
set interfaces lo0 unit 0 family inet address 127.1.1.2/32
set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
set interfaces ae0 unit 0 family inet address 10.1.9.1/24
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/0/6 unit 0 family mpls
set interfaces ae0 unit 0 family mpls
```

**Step-by-Step Procedure** To configure the provider switch:

1. Configure OSPF with traffic engineering enabled:  

```
[edit protocols]
user@switchP# set ospf traffic-engineering
```
2. Configure OSPF on the loopback interface and the core interfaces:  

```
[edit protocols]
user@switchP# set ospf area 0.0.0.0 interface lo0.0
user@switchP# set ospf area 0.0.0.0 interface ge-0/0/5
user@switchP# set ospf area 0.0.0.0 interface ge-0/0/6
user@switchP# set ospf area 0.0.0.0 interface ae0
```
3. Configure MPLS on the core interfaces on the switch:  

```
[edit protocols]
user@switchP# set mpls interface ge-0/0/5
user@switchP# set mpls interface ge-0/0/6
user@switchP# set mpls interface ae0
```
4. Configure RSVP on the loopback interface and the core interfaces:  

```
[edit protocols]
user@switchP# set rsvp interface lo0.0
user@switchP# set rsvp interface ge-0/0/5
user@switchP# set rsvp interface ge-0/0/6
user@switchP# set rsvp interface ae0
```
5. Configure IP addresses for the loopback interface and the core interfaces:  

```
[edit]
user@switchP# set interfaces lo0 unit 0 family inet address 127.1.1.2/32
user@switchP# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switchP# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
user@switchP# set interfaces ae0 unit 0 family inet address 10.1.9.1/24
```
6. Configure **family mpls** on the logical unit of the core interface addresses:

```
[edit]
user@switchP# set interfaces ge-0/0/5 unit 0 family mpls
user@switchP# set interfaces ge-0/0/6 unit 0 family mpls
user@switchP# set interfaces ae0 unit 0 family mpls
```

**Results** Display the results of the configuration:

```
user@switchP> show configuration
```

```
interfaces {
 ge-0/0/5 {
 unit 0 {
 family inet {
 address 10.1.5.1/24;
 }
 family mpls;
 }
 }
 ge-0/0/6 {
 unit 0 {
 family inet {
 address 10.1.6.1/24;
 }
 family mpls;
 }
 }
}
ae0 {
 unit 0 {
 family inet {
 address 10.1.9.1/24;
 }
 family mpls;
 }
}
lo0 {
 unit 0 {
 family inet {
 address 127.1.1.2/32;
 }
 }
}
protocols {
 rsvp {
 interface lo0.0;
 interface ge-0/0/5.0;
 interface ge-0/0/6.0;
 interface ae0.0;
 }
 mpls {
 interface ge-0/0/5.0;
 interface ge-0/0/6.0;
 interface ae0.0;
 }
 ospf {
 traffic-engineering;
 area 0.0.0.0 {
```



```

interface lo0.0;
interface ge-0/0/5.0;
interface ge-0/0/6.0;
interface ae0.0;
}
}

```

## Verification

To confirm that the configuration is working properly, perform these tasks:

- [Verifying the Physical Layer on the Switches on page 39](#)
- [Verifying the Routing Protocol on page 40](#)
- [Verifying the Core Interfaces Being Used for MPLS Traffic on page 40](#)
- [Verifying the Status of the RSVP Sessions on page 40](#)
- [Verifying the Assignment of Interfaces for MPLS Label Operations on page 41](#)
- [Verifying the Status of the CCC on page 41](#)

### Verifying the Physical Layer on the Switches

**Purpose** Verify that the interfaces are up. Perform this verification task on each of the switches.

**Action** user@switchPE-1> **show interfaces terse**

| Interface  | Admin | Link | Proto      | Local       | Remote |
|------------|-------|------|------------|-------------|--------|
| ge-0/0/0   | up    | up   |            |             |        |
| ge-0/0/0.0 | up    | up   | eth-switch |             |        |
| ge-0/0/1   | up    | up   |            |             |        |
| ge-0/0/1.0 | up    | up   | ccc        |             |        |
| ge-0/0/2   | up    | up   |            |             |        |
| ge-0/0/2.0 | up    | up   | eth-switch |             |        |
| ge-0/0/3   | up    | up   |            |             |        |
| ge-0/0/3.0 | up    | up   | eth-switch |             |        |
| ge-0/0/4   | up    | up   |            |             |        |
| ge-0/0/4.0 | up    | up   | eth-switch |             |        |
| ge-0/0/5   | up    | up   |            |             |        |
| ge-0/0/5.0 | up    | up   | inet       | 10.1.5.1/24 |        |
|            |       |      | mpls       |             |        |
| ge-0/0/6   | up    | up   |            |             |        |
| ge-0/0/6.0 | up    | up   | inet       | 10.1.6.1/24 |        |
|            |       |      | mpls       |             |        |

**Meaning** The **show interfaces terse** command displays status information about the Gigabit Ethernet interfaces on the switch. This output verifies that the interfaces are **up**. The output for the protocol family (**Proto** column) shows that interface **ge-0/0/1.0** is configured as a circuit cross-connect. The output for the protocol family of the core interfaces (**ge-0/0/5.0** and **ge-0/0/6.0**) shows that these interfaces are configured as both **inet** and **mpls**. The **Local** column for the core interfaces shows the IP address configured for these interfaces.

### Verifying the Routing Protocol

---

**Purpose** Verify the state of the configured routing protocol. Perform this verification task on each of the switches. The state must be **Full**.

**Action** user@switchPE-1> **show ospf neighbor**

| Address   | Interface | State | ID          | Pri | Dead |
|-----------|-----------|-------|-------------|-----|------|
| 127.1.1.2 | ge-0/0/5  | Full  | 10.10.10.10 | 128 | 39   |

**Meaning** The **show ospf neighbor** command displays the status of the routing protocol. This output shows that the state is **Full**, meaning that the routing protocol is operating correctly—that is, hello packets are being exchanged between directly connected neighbors.

### Verifying the Core Interfaces Being Used for MPLS Traffic

---

**Purpose** Verify that the state of the MPLS interface is **Up**. Perform this verification task on each of the switches.

**Action** user@switchPE-1> **show mpls interface**

| Interface | State | Administrative groups |
|-----------|-------|-----------------------|
| ge-0/0/5  | Up    | <none>                |
| ge-0/0/6  | Up    | <none>                |

**Meaning** The **show mpls interface** command displays the status of the core interfaces that have been configured to belong to **family mpls**. This output shows that the interface configured to belong to **family mpls** is **Up**.

### Verifying the Status of the RSVP Sessions

---

**Purpose** Verify the status of the RSVP sessions. Perform this verification task on each of the switches.

**Action** user@switchPE-1> **show rsvp session**

```
Ingress RSVP: 1 sessions
To From State Rt Style Labelin Labelout LSPname
127.1.13 127.1.1.1 Up 0 1 FF - 300064 lsp_to_pe2_ge1
Total 1 displayed, Up 1, Down 0
```

```
Egress RSVP: 1 sessions
To From State Rt Style Labelin Labelout LSPname
127.1.1.1 127.1.1.3 Up 0 1 FF 299968 lsp_to_pe1_ge1
Total 1 displayed, Up 1, Down 0
```

```
Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** This output confirms that the RSVP sessions are **Up**.

### Verifying the Assignment of Interfaces for MPLS Label Operations

**Purpose** Verify which interface is being used as the beginning of the CCC and which interface is being used to push the MPLS packet to the next hop. Perform this task only on the PE switches.

**Action** user@switchPE-1> **show route forwarding-table family mpls**

MPLS:

| Destination      | Type | RtRef | Next hop | Type | Index  | NhRef | Netif      |
|------------------|------|-------|----------|------|--------|-------|------------|
| default          | perm | 0     |          | dscd | 50     | 1     |            |
| 0                | user | 0     |          | recv | 49     | 3     |            |
| 1                | user | 0     |          | recv | 49     | 3     |            |
| 2                | user | 0     |          | recv | 49     | 3     |            |
| 299776           | user | 0     |          | Pop  | 541    | 2     | ge-0/0/1.0 |
| ge-0/0/1.0 (CCC) | user | 0     | 2.0.0.1  | Push | 299792 | 540 2 | ge-0/0/5.0 |

**Meaning** This output shows that the CCC has been set up on interface **ge-0/0/1.0**. The switch receives ingress traffic on **ge-0/0/1.0** and pushes label **299792** onto the packet, which goes out through interface **ge-0/0/5.0**. The output also shows when the switch receives an MPLS packet with label 29976, it pops the label and sends the packet out through interface **ge-0/0/1.0**.

After you have checked the local PE switch, run the same command on the remote PE switch.

### Verifying the Status of the CCC

**Purpose** Verify the status of the CCC. Perform this task only on the PE switches.

**Action** user@switchPE-1> **show connections**

CCC and TCC connections [Link Monitoring On]

|                                |                                     |
|--------------------------------|-------------------------------------|
| Legend for status (St)         | Legend for connection types         |
| UN -- uninitialized            | if-sw: interface switching          |
| NP -- not present              | rmt-if: remote interface switching  |
| WE -- wrong encapsulation      | lsp-sw: LSP switching               |
| DS -- disabled                 | tx-p2mp-sw: transmit P2MP switching |
| Dn -- down                     | rx-p2mp-sw: receive P2MP switching  |
| -> -- only outbound conn is up |                                     |
| <- -- only inbound conn is up  | Legend for circuit types            |
| Up -- operational              | intf -- interface                   |
| RmtDn -- remote CCC down       | tlsp -- transmit LSP                |
| Restart -- restarting          | rlsp -- receive LSP                 |

| Connection/Circuit | Type   | St | Time last up    | # Up trans |
|--------------------|--------|----|-----------------|------------|
| ge1-to-pe2         | rmt-if | Up | Feb 17 05:00:09 | 1          |
| ge-0/0/1.0         | intf   | Up |                 |            |
| lsp_to_pe1_ge1     | tlsp   | Up |                 |            |
| lsp_to_pe2_ge1     | rlsp   | Up |                 |            |

**Meaning** The **show connections** command displays the status of the CCC connections. This output verifies that the CCC interface and its associated transmit and receive LSPs are **Up**. After you have checked the local PE switch, run the same command on the remote PE switch.

**Related Documentation**

- [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
- [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\) on page 83](#)
- [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)
- [Junos OS MPLS for EX Series Switches Overview on page 3](#)

---

## Example: Combining CoS with MPLS on EX Series Switches

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. The CoS value is included within the MPLS label, which is passed through the network, enabling end-to-end CoS across the network.

MPLS services are often used to ensure better performance for low-latency applications such as VoIP and other business-critical functions. These applications place specific demands on a network for successful transmission. CoS gives you the ability to control the mix of bandwidth, delay, jitter, and packet loss while taking advantage of the MPLS labeling mechanism.

This example shows how to configure CoS on an MPLS network that is using a unidirectional circuit cross-connect (CCC) from the ingress provider edge (PE) switch to the egress PE switch. for the customer-edge interface of the ingress provider edge (PE) switch. It describes adding the configuration of CoS components to the ingress PE switch, the egress PE switch, and the core provider switches of the existing MPLS network. Because of the unidirectional configuration, the DSCP classifier needs to be configured only on the ingress PE switch.

- [Requirements on page 42](#)
- [Overview and Topology on page 43](#)
- [Configuring the Local PE Switch on page 45](#)
- [Configuring the Remote PE Switch on page 47](#)
- [Configuring the Provider Switch on page 48](#)
- [Verification on page 49](#)

## Requirements

This example uses the following hardware and software components:

- Junos OS Release 10.1 or later for EX Series switches
- Three EX Series switches

Before you configure CoS with MPLS, be sure you have:

Configured an MPLS network with two PE switches and one provider switch. See [“Example: Configuring MPLS on EX8200 and EX4500 Switches” on page 27](#). This example assumes that an MPLS network has been configured using a cross circuit-connect (CCC).

## Overview and Topology

This example describes adding custom classifiers and custom rewrite rules to switches in an MPLS network that is using MPLS over CCC.

It is a unidirectional configuration. Therefore, you need to configure custom classifiers and custom rewrite rules as follows:

- On the ingress PE switch: custom DSCP classifier and custom EXP rewrite rule
- On the egress PE switch: custom EXP classifier
- On the provider switch: customer EXP classifier and custom EXP rewrite rule



**NOTE:** You can also configure schedulers and shapers as needed. If you are using **assured-forwarding**, **expedited-forwarding**, or other custom forwarding classes, we recommend that you configure a scheduler to support that forwarding class. See *Defining CoS Schedulers and Scheduler Maps (CLI Procedure)*.

The example creates a custom DSCP classifier (**dscp1**) on the ingress PE switch and binds this classifier to the CCC interface. It includes configuration of a policer on the ingress PE switch. The policer is applied as a filter on the label-switched path (LSP) **lsp\_to\_pe2\_ge1** (created in [“Example: Configuring MPLS on EX8200 and EX4500 Switches” on page 27](#)) to ensure that the amount of traffic forwarded through the LSP never exceeds the requested bandwidth allocation.

This example creates a custom EXP rewrite rule (**exp1**) on the ingress PE switch, specifying a loss-priority and code point to be used for the expedited-forwarding class as the packet travels through the LSP. The switch applies this custom rewrite rule on the core interfaces **ge-0/0/5.0** and **ge-0/0/6.0**, which are the egress interfaces for this switch.

[Table 8 on page 43](#) shows the CoS configuration components added to the ingress PE switch.

**Table 8: CoS Configuration Components on the Ingress PE Switch**

| Property                                           | Settings                         | Description                                      |
|----------------------------------------------------|----------------------------------|--------------------------------------------------|
| Local PE switch hardware                           | EX Series switch                 | PE-1                                             |
| Policing filter configured and applied to the LSP. | <b>policing filter mypolicer</b> | Name of the rate-limiting policer.               |
|                                                    | <b>filter myfilter</b>           | Name of the filter, which refers to the policer  |
| Custom DSCP classifier                             | <b>dscp1</b>                     | Specifies the name of the custom DSCP classifier |

**Table 8: CoS Configuration Components on the Ingress PE Switch (*continued*)**

| Property                | Settings                         | Description                                                                                                                                             |
|-------------------------|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Custom EXP rewrite rule | <b>e1</b>                        | Name of the custom EXP rewrite rule.                                                                                                                    |
| Customer-edge interface | <b>ge-0/0/1.0</b>                | Interface that receives packets from devices outside the network.<br><br>The custom DSCP classifier must be specified on this CCC interface.            |
| Core interfaces         | <b>ge-0/0/5.0 and ge-0/0/6.0</b> | Interfaces that transmit MPLS packets to other switches within the MPLS network.<br><br>The EXP rewrite rule is applied implicitly to these interfaces. |

[Table 9 on page 44](#) shows the CoS configuration components added to the egress PE switch in this example.

**Table 9: CoS Configuration Components of the Egress PE Switch**

| Property                             | Settings                         | Description                                                                                                                                                                    |
|--------------------------------------|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote provider edge switch hardware | EX Series switch                 | PE-2                                                                                                                                                                           |
| Custom EXP classifier                | <b>exp1</b>                      | Name of custom EXP classifier                                                                                                                                                  |
| Customer-edge interface              | <b>ge-0/0/1.0</b>                | Interface that transmits packets from this network to devices outside the network. No CoS classifier is specified for this interface. A scheduler can be specified.            |
| Core interfaces                      | <b>ge-0/0/7.0 and ge-0/0/8.0</b> | Core interfaces on PE-2 that receive MPLS packets from the provider switch. The EXP classifier is enabled by default on the switch and applied implicitly to these interfaces. |

[Table 10 on page 44](#) shows the MPLS configuration components used for the provider switch in this example.

**Table 10: CoS Configuration Components of the Provider Switch**

| Property                 | Settings         | Description                                           |
|--------------------------|------------------|-------------------------------------------------------|
| Provider switch hardware | EX Series switch | Transit switch within the MPLS network configuration. |
| Custom EXP classifier    | <b>exp1</b>      | Name of the custom EXP classifier.                    |

Table 10: CoS Configuration Components of the Provider Switch (*continued*)

| Property                                                                        | Settings                         | Description                                                                                                                                                                                         |
|---------------------------------------------------------------------------------|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Custom EXP rewrite rule                                                         | <b>e1</b>                        | Name of the custom EXP rewrite rule.                                                                                                                                                                |
| Core interfaces receiving packets from other MPLS switches.                     | <b>ge-0/0/5.0 and ge-0/0/6.0</b> | Interfaces that connect the provider switch to the ingress PE switch (PE-1). The EXP classifier is enabled by default on the switch and applied implicitly to these interfaces.                     |
| Core interfaces transmitting packets to other switches within the MPLS network. | <b>ge-0/0/7.0 and ge-0/0/8.0</b> | Interfaces that transmit packets to the egress PE (PE-2). The EXP rewrite rule is applied implicitly on these interfaces. Schedulers can also be specified and will be applied to these interfaces. |

## Configuring the Local PE Switch

**CLI Quick Configuration** To quickly configure a custom DSCP classifier, custom EXP rewrite rule, and a policer on the local PE switch, copy the following commands and paste them into the switch terminal window of PE-1:

```
[edit]
set class-of-service classifiers dscp dscp1 import default
set class-of-service classifiers dscp dscp1 forwarding-class expedited-forwarding loss-priority
low code-points 000111
set class-of-service rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority low
code-point 111
set class-of-service interfaces ge-0/0/1 unit 0 classifier dscp1
set firewall policer mypolicer if-exceeding bandwidth-limit 500m
set firewall policer mypolicer if-exceeding burst-size-limit 33553920
set firewall policer mypolicer then discard
set firewall family any filter myfilter term t1 then policer mypolicer
set protocols mpls label-switched-path lsp_to_pe2_ge1 to 127.1.1.3 policing filter myfilter
```

**Step-by-Step Procedure** To configure a custom DSCP classifier, custom EXP rewrite rule, and a policer on the ingress PE switch:

1. Import the default DSCP classifier classes to the custom DSCP classifier that you are creating:
 

```
[edit class-of-service]
user@switch# set classifiers dscp dscp1 import default
```
2. Add the expedited-forwarding class to this custom DSCP classifier, specifying a loss priority and code point:
 

```
[edit class-of-service]
user@switch# set classifiers dscp dscp1 forwarding-class expedited-forwarding loss-priority
low code-points 000111
```
3. Specify the values for the custom EXP rewrite rule, **e1**:
 

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority
low code-point 111
```
4. Bind the DSCP classifier to the CCC interface:

- ```
[edit ]
user@switch# set class-of-service interfaces ge-0/0/1 unit 0 classifier dscp1
```
5. Specify the number of bits per second permitted, on average, for the firewall policer, which will later be applied to the LSP:


```
[edit firewall]
set policer mypolicer if-exceeding bandwidth-limit 500m
```
 6. Specify the maximum size permitted for bursts of data that exceed the given bandwidth limit for this policer:


```
[edit firewall policer]
set mypolicer if-exceeding burst-size-limit 33553920
```
 7. Discard traffic that exceeds the rate limits for this policer:


```
[edit firewall policer]
set mypolicer then discard
```
 8. To reference the policer, configure a filter term that includes the policer action:


```
[edit firewall]
user@switch# set family any filter myfilter term t1 then policer mypolicer
```
 9. Apply the filter to the LSP:


```
[edit protocols mpls]
set label-switched-path lsp_to_pe2_ge1 policing filter myfilter
```

Results Display the results of the configuration:

```
[edit]
user@switch# show
class-of-service {
  classifiers {
    dscp dscp1 {
      import default;
      forwarding-class expedited-forwarding {
        loss-priority low code-points 000111;
      }
    }
  }
}
interfaces {
  ge-0/0/1 {
    unit 0 {
      classifiers {
        dscp dscp1;
      }
    }
  }
}
rewrite-rules {
  exp e1 {
    forwarding-class expedited-forwarding {
      loss-priority low code-point 111;
    }
  }
}
}
firewall {
  family any {
    filter myfilter {
```



```

        term t1 {
            then policer mypolicer;
        }
    }
}
policer mypolicer {
    if-exceeding {
        bandwidth-limit 500m;
        burst-size-limit 33553920;
    }
    then discard;
}
}

```

Configuring the Remote PE Switch

CLI Quick Configuration To quickly configure a custom EXP classifier on the remote PE switch, copy the following commands and paste them into the switch terminal window of PE-2:

```

[edit]
set class-of-service classifiers exp exp1 import default
set class-of-service classifiers exp exp1 forwarding-class expedited-forwarding loss-priority low
code-points 010

```

Step-by-Step Procedure To configure a custom EXP classifier on the egress PE switch:

1. Import the default EXP classifier classes to the custom EXP classifier that you are creating:

```

[edit class-of-service]
user@switch# set classifiers exp exp1 import default

```

2. Add the expedited-forwarding class to this custom EXP classifier, specifying a loss priority and code point:

```

[edit class-of-service]
user@switch# set classifiers exp exp1 forwarding-class expedited-forwarding loss-priority
low code-points 010

```

Results Display the results of the configuration:

```

[edit]
user@switch# show
class-of-service {
  classifiers {
    exp exp1 {
      import default;
      forwarding-class expedited-forwarding {
        loss-priority low code-points 010;
      }
    }
  }
}

```

Configuring the Provider Switch

CLI Quick Configuration To quickly configure a custom EXP classifier and a custom EXP rewrite rule on the provider switch, copy the following commands and paste them into the switch terminal window of the provider switch:

```
[edit]
set class-of-service classifiers exp exp1 import default
set class-of-service classifiers exp exp1 forwarding-class expedited-forwarding loss-priority low
code-points 010
set class-of-service rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority low
code-point 111
```

Step-by-Step Procedure To configure a custom EXP classifier and a custom EXP rewrite rule on the provider switch:

1. Import the default EXP classifier classes to the custom EXP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 import default
```

2. Add the expedited-forwarding class to this custom EXP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 forwarding-class expedited-forwarding loss-priority
low code-points 010
```

3. Specify the values for the custom EXP rewrite rule, **e1**:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority
low code-point 111
```

Results Display the results of the configuration:

```
[edit]
user@switch# show
class-of-service {
  classifiers {
    exp exp1 {
      import default;
      forwarding-class expedited-forwarding {
        loss-priority low code-points 010;
      }
    }
  }
  rewrite-rules {
    exp e1 {
      forwarding-class expedited-forwarding {
        loss-priority low code-point 111;
      }
    }
  }
}
```

Verification

To confirm that the configuration is working properly, perform these tasks:

- [Verifying That the Policer Firewall Filter Is Operational on page 49](#)
- [Verifying That the CoS Classifiers Are Going to the Right Queue on page 49](#)
- [Verifying the CoS Forwarding Table Mapping on page 52](#)
- [Verifying the Rewrite Rules on page 53](#)

Verifying That the Policer Firewall Filter Is Operational

Purpose Verify the operational state of the policer that is configured on the ingress PE switch.

Action user@switch> show firewall
Filter: myfilter
Policers:

Name	Packets
mypolicer-t1	0

Meaning This output shows that the firewall filter **mypolicer** has been created.

Verifying That the CoS Classifiers Are Going to the Right Queue

Purpose Verify that the CoS classifiers are going to the right queue.

Action user@switch> show class-of-service forwarding-table classifier

Classifier table index: 7, # entries: 64, Table type: DSCP

Entry #	Code point	Forwarding-class #	PLP
0	000000	0	0
1	000001	0	0
2	000010	0	0
3	000011	0	0
4	000100	0	0
5	000101	0	0
6	000110	0	0
7	000111	0	0
8	001000	0	0
9	001001	0	0
10	001010	0	0
11	001011	0	0
12	001100	0	0
13	001101	0	0
14	001110	0	0
15	001111	0	0
16	010000	0	0
17	010001	0	0
18	010010	0	0
19	010011	0	0
20	010100	0	0
21	010101	0	0
22	010110	0	0
23	010111	0	0
24	011000	0	0
25	011001	0	0
26	011010	0	0
27	011011	0	0
28	011100	0	0
29	011101	0	0
30	011110	0	0
31	011111	0	0
32	100000	0	0
33	100001	0	0
34	100010	0	0
35	100011	0	0
36	100100	0	0
37	100101	0	0
38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
47	101111	0	0
48	110000	3	0
49	110001	3	0
50	110010	3	0
51	110011	3	0
52	110100	3	0
53	110101	3	0
54	110110	3	0
55	110111	3	0

56	111000	3	0
57	111001	3	0
58	111010	3	0
59	111011	3	0
60	111100	3	0
61	111101	3	0
62	111110	3	0
63	111111	3	0

Classifier table index: 11, # entries: 8, Table type: IEEE 802.1

Entry #	Code point	Forwarding-class #	PLP
0	000	0	0
1	001	0	0
2	010	0	0
3	011	0	0
4	100	0	0
5	101	0	0
6	110	3	0
7	111	3	0

Classifier table index: 12, # entries: 8, Table type: IPv4 precedence

Entry #	Code point	Forwarding-class #	PLP
0	000	0	0
1	001	0	0
2	010	0	0
3	011	0	0
4	100	0	0
5	101	0	0
6	110	3	0
7	111	3	0

Classifier table index: 16, # entries: 8, Table type: Untrust

Entry #	Code point	Forwarding-class #	PLP
0	000	0	0
1	001	0	0
2	010	0	0
3	011	0	0
4	100	0	0
5	101	0	0
6	110	0	0
7	111	0	0

Classifier table index: 9346, # entries: 64, Table type: DSCP

Entry #	Code point	Forwarding-class #	PLP
0	000000	0	0
1	000001	0	0
2	000010	0	0
3	000011	0	0
4	000100	0	0
5	000101	0	0
6	000110	0	0
7	000111	1	0
8	001000	0	0
9	001001	0	0
10	001010	0	0
11	001011	0	0
12	001100	0	0
13	001101	0	0
14	001110	0	0
15	001111	0	0
16	010000	0	0

17	010001	0	0
18	010010	0	0
19	010011	0	0
20	010100	0	0
21	010101	0	0
22	010110	0	0
23	010111	0	0
24	011000	0	0
25	011001	0	0
26	011010	0	0
27	011011	0	0
28	011100	0	0
29	011101	0	0
30	011110	0	0
31	011111	0	0
32	100000	0	0
33	100001	0	0
34	100010	0	0
35	100011	0	0
36	100100	0	0
37	100101	0	0
38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
47	101111	0	0
48	110000	3	0
49	110001	3	0
50	110010	3	0
51	110011	3	0
52	110100	3	0
53	110101	3	0
54	110110	3	0
55	110111	3	0
56	111000	3	0
57	111001	3	0
58	111010	3	0
59	111011	3	0
60	111100	3	0
61	111101	3	0
62	111110	3	0
63	111111	3	0

Meaning This output shows that a new DSCP classifier has been created, index **9346**, on the ingress PE switch (PE-1).

Verifying the CoS Forwarding Table Mapping

Purpose For each logical interface, display either the table index of the classifier for a given code point type or the queue number (if it is a fixed classification) in the forwarding table.

Action user@switch>show class-of-service forwarding-table classifier mapping

Interface	Index	Table Index/ Q num	Table type
ge-0/0/1.0	92	9346	DSCP

Meaning The results show that the new DSCP classifier, index number **9346**, is bound to interface **ge-0/0/1.0**.

Verifying the Rewrite Rules

Purpose Display mapping of the queue number and loss priority to code point value for each rewrite rule as it exists in the forwarding table.

Action user@switch>show class-of-service forwarding-table rewrite-rule

Rewrite table index: 31, # entries: 4, Table type: DSCP

FC#	Low bits	State	High bits	State
0	000000	Enabled	000000	Enabled
1	101110	Enabled	101110	Enabled
2	001010	Enabled	001100	Enabled
3	110000	Enabled	111000	Enabled

Rewrite table index: 34, # entries: 4, Table type: IEEE 802.1

FC#	Low bits	State	High bits	State
0	000	Enabled	001	Enabled
1	010	Enabled	011	Enabled
2	100	Enabled	101	Enabled
3	110	Enabled	111	Enabled

Rewrite table index: 35, # entries: 4, Table type: IPv4 precedence

FC#	Low bits	State	High bits	State
0	000	Enabled	000	Enabled
1	101	Enabled	101	Enabled
2	001	Enabled	001	Enabled
3	110	Enabled	111	Enabled

Rewrite table index: 9281, # entries: 1, Table type: EXP

FC#	Low bits	State	High bits	State
1	111	Enabled	000	Disabled

Meaning This output shows that a new EXP classifier with the index number **9281** has been created.

- Related Documentation**
- [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
 - [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\) on page 83](#)
 - [Understanding Using CoS with MPLS Networks on EX Series Switches on page 12](#)
 - [Monitoring CoS Forwarding Classes](#)

Example: Configuring MPLS-Based Layer 3 VPNs on EX Series Switches

You can implement an MPLS-based Layer 3 virtual private network (VPN) on EX8200 and EX4500 switches to interconnect sites for customers who want the service provider to handle all the Layer 3 routing functions. To support an MPLS-based Layer 3 VPN, you need to add components of the Layer 3 VPN to the configuration of the two provider edge (PE) switches. You do not need to change the configuration of the provider switches.



NOTE: The core interfaces and the loopback interfaces are configured in the same way for Layer 2 VPNs and Layer 3 VPNs.

This example shows how to configure an MPLS-based Layer 3 VPN spanning two corporate sites:

- [Requirements on page 54](#)
- [Overview and Topology on page 54](#)
- [Configuring the Local PE Switch on page 57](#)
- [Configuring the Remote PE Switch on page 60](#)
- [Verification on page 62](#)

Requirements

This example uses the following software and hardware components:

- Junos OS Release 11.1 or later for EX Series switches
- Three EX8200 switches

Before you configure the Layer 3 VPN components, you must configure the basic components for an MPLS network:

- Configure two PE switches. See “[Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\)](#)” on page 83.
- Configure one or more provider switches. See “[Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)](#)” on page 78.



NOTE: A Layer 3 VPN requires that the PE switches be configured using IP over MPLS.

Overview and Topology

Layer 3 VPNs allow customers to leverage the service provider’s technical expertise to ensure efficient site-to-site routing. The customer’s customer edge (CE) switch uses a routing protocol such as BGP or OSPF to communicate with the service provider’s provider edge (PE) switch to carry IP prefixes across the network. MPLS-based Layer 3 VPNs use

only IP over MPLS; other protocol packets are not supported. This example includes two PE switches, PE1 and PE2.

In the basic MPLS configuration of the PE switches using IP over MPLS, the PE switches were configured to use OSPF as the routing protocol between the MPLS switches and RSVP as the signaling protocol. Traffic engineering was enabled. A label-switched path (LSP) was configured.



NOTE: A static path is not configured in this example.

The following components must be added to the PE switches for an MPLS-based Layer 3 VPN:

- BGP group with **family inet-vpn unicast**
- Routing instance with instance type **vrf**

Figure 5 on page 55 illustrates the topology of this MPLS-based Layer 3 VPN.

Figure 5: MPLS-Based Layer 3 VPN

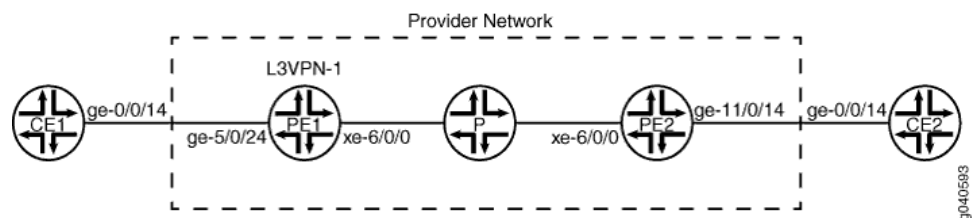


Table 11 on page 55 shows the settings of the customer edge interface on the local CE switch.

Table 11: Local CE Switch in the MPLS-Based Layer 3 VPN Topology

Property	Settings	Description
Local CE switch hardware	EX8200 switch	CE1
Customer edge interface	ge-0/0/14 unit 0 family inet address 51.51.0.14/16	Interface that connects CE1 to PE1.

Table 12 on page 55 shows the settings of the customer edge interface on the remote CE switch.

Table 12: Remote CE Switch in the MPLS-Based Layer 3 VPN Topology

Property	Settings	Description
Remote CE switch hardware	EX8200 switch	CE2

Table 12: Remote CE Switch in the MPLS-Based Layer 3 VPN Topology (*continued*)

Property	Settings	Description
Customer edge interface	ge-0/0/14 unit 0 family inet address 11.22.26.1/16	Interface that connects CE2 to PE2.

Table 13 on page 56 shows the Layer 3 VPN components of the local PE switch.

Table 13: Layer 3 VPN Components of the Local PE Switch

Property	Settings	Description
Local PE switch hardware	EX8200 switch	PE1
Customer edge interface	ge-5/0/24 unit 0 family inet address 51.51.0.1/16	Connects PE1 to CE1. NOTE: The family inet configuration should already have been completed as part of the basic MPLS configuration of the PE switch for IP over MPLS. It is included here to show what was specified for that portion of the configuration.
Core interface	xe-6/0/0 unit 0 family inet address 60.0.0.60/16 family iso; family mpls	Connects PE1 to P. NOTE: This portion of the configuration should already have been completed as part of the basic MPLS configuration. It is included here to show what was specified for that portion of the configuration.
Loopback interface	lo0 unit 0 family inet address 21.21.21.21/32 family iso address 49.0001.2102.1021.0210.00	NOTE: This portion of the configuration should already have been completed as part of the basic MPLS configuration. It is included here to show what was specified for that portion of the configuration.
BGP	bgp	Added for the Layer 3 VPN configuration.
Routing instance	L3VPN-1	Added for the Layer 3 VPN configuration.

Table 14 on page 57 shows the Layer 3 VPN components of the remote PE switch.

Table 14: Layer 3 VPN Components of the Remote PE Switch

Property	Settings	Description
Remote PE switch hardware	EX8200 switch	PE2
Customer edge interface	ge-11/0/14 unit 0 family inet address 11.22.26.14/16 family mpls	Connects PE2 to CE2. For the Layer 3 VPN configuration, added family mpls . NOTE: The family inet configuration should already have been completed as part of the basic MPLS configuration of the PE switch for IP over MPLS. It is included here to show what was specified for that portion of the configuration.
Core interface	xe-6/0/0/ unit 0 family inet address 60.2.0.60/16 family iso family mpls	Connects PE1 to P. NOTE: This portion of the configuration should already have been completed as part of the basic MPLS configuration. It is included here to show what was specified for that portion of the configuration.
Loopback interface	lo0 unit 0 family inet address 22.22.22.22/32 family iso address 49.0001.2202.1022.0220.00	NOTE: This portion of the configuration should already have been completed as part of the basic MPLS configuration. It is included here to show what was specified for that portion of the configuration.
BGP	bgp	Added for the Layer 3 VPN configuration.
Routing instances	L3VPN-1	Added for the Layer 3 VPN configuration.

Configuring the Local PE Switch

CLI Quick Configuration To quickly configure the Layer 3 VPN components on the local PE switch, copy the following commands and paste them into the switch terminal window of PE1:

```
[edit]
set protocols bgp group ibgp local-address 21.21.21.21 family inet-vpn unicast
set protocols bgp group ibgp type internal
set protocols bgp group ibgp neighbor 22.22.22.22
set routing-instances L3VPN-1 instance-type vrf
set routing-instances L3VPN-1 description "BETWEEN PE1 AND PE2"
set routing-instances L3VPN-1 interface ge-5/0/24.0
set routing-instances L3VPN-1 route-distinguisher 21:21
set routing-instances L3VPN-1 vrf-target target:21:21
set routing-instances L3VPN-1 vrf-table-label;
set routing-options router-id 21.21.21.21
set routing-options autonomous-system 10;
```

Step-by-Step Procedure

To configure the Layer 3 VPN components on the local PE switch:

1. Configure BGP, specifying the loopback address as the local address and specifying **family inet-vpn unicast**:

```
[edit protocols bgp]
user@switchPE1# set group ibgp local-address 21.21.21.21 family inet-vpn unicast
```
2. Configure the BGP group, specifying the group name and type:

```
[edit protocols bgp]
user@switchPE1# set group ibgp type internal
```
3. Configure the BGP neighbor, specifying the loopback address of the remote PE switch as the neighbor's address:

```
[edit protocols bgp]
user@switchPE1# set group ibgp neighbor 22.22.22.22
```
4. Configure the routing instance, specifying the routing-instance name and using **vrf** as the instance type:

```
[edit routing-instances]
user@switchPE1# set L3VPN-1 instance-type vrf
```
5. Configure a description for this routing instance:

```
[edit routing-instances]
user@switchPE1# set L3VPN-1 description "BETWEEN PE1 AND PE2"
```
6. Configure the routing instance to use a route distinguisher:

```
[edit routing-instances]
user@switchPE1# set L3VPN-1 route-distinguisher 21:21
```



NOTE: Each routing instance that you configure on a PE switch must have a unique route distinguisher associated with it. VPN routing instances require a route distinguisher to allow BGP to distinguish between potentially identical network layer reachability information (NLRI) messages received from different VPNs. If you configure different VPN routing instances with the same route distinguisher, the commit fails.

7. Configure the VPN routing and forwarding (VRF) target of the routing instance:

```
[edit routing-instances]
user@switchPE1# set L3VPN-1 vrf-target target:21:21
```



NOTE: You can create more complex policies by explicitly configuring VRF import and export policies using the import and export options. See the [Junos OS VPNs Configuration Guide](#).

8. Configure this routing instance with **vrf-table-label**, which maps the inner label of a packet to a specific VPN routing and forwarding (VRF) table and allows the examination of the encapsulated IP header:

```
[edit routing-instances]
```

```
user@switchPE1# set L3VPN-1 vrf-table-label
```

9. Configure the router ID and autonomous system (AS):



NOTE: We recommend that you explicitly configure the router identifier under the [edit routing-options] hierarchy level to avoid unpredictable behavior if the interface address on a loopback interface changes.

```
[edit routing-options]
```

```
user@switchPE1# set router-id 21.21.21.21 autonomous-system 10
```

Results Display the results of the configuration:

```
user@switchPE1> vrf-table-label
```

```
interfaces {
  ge-5/0/24 {
    unit 0 {
      family inet {
        address 51.51.0.1/16;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 21.21.21.21/32;
      }
    }
  }
  xe-6/0/0 {
    unit 0 {
      family inet {
        address 60.0.0.60/16;
      }
      family iso;
      family mpls;
    }
  }
}
protocols {
  mpls {
    label-switched-path 21-22 {
      from 21.21.21.21;
      to 22.22.22.22;
      no-cspf;
    }
    interface xe-6/0/0.0;
    interface lo0.0;
    bgp {
      group ibgp
      type internal
      local-address 21.21.21.21
      family inet-vpn
      unicast
    }
  }
}
```

```

ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-5/0/24.0;
        interface lo0.0;
        interface xe-6/0/0.0;
    }
}
}
routing-instances {
    L3VPN-1 {
        instance-type vrf;
        description "BETWEEN PE1 AND PE2";
        route-distinguisher 21:21;
        vrf-target target:21:21;
        vrf-table-label;
    }
}
routing-options {
    router-id 21.21.21.21;
    autonomous-system 10;
}

```

Configuring the Remote PE Switch

CLI Quick Configuration To quickly configure the Layer 3 VPN components on the remote PE switch, copy the following commands and paste them into the switch terminal window of PE2:

```

[edit]
set protocols bgp group ibgp local-address 22.22.22.22 family inet-vpn unicast
set protocols bgp group ibgp type internal
set protocols bgp group ibgp neighbor 21.21.21.21
set routing-instances L3VPN-1 instance-type vrf
set routing-instances L3VPN-1 description "BETWEEN PE1 AND PE2"
set routing-instances L3VPN-1 interface ge-11/0/14.0
set routing-instances L3VPN-1 route-distinguisher 21:21
set routing-instances L3VPN-1 vrf-target target:21:21
set routing-instances L3VPN-1 vrf-table-label;
set routing-options router-id 22.22.22.22;
set routing-options autonomous-system 10;

```

Step-by-Step Procedure To configure Layer 3 VPN components on the remote PE switch:

1. Configure BGP, specifying the loopback address as the local address and specifying **family inet-vpn unicast**:

```

[edit protocols bgp]
user@switchPE2# set group ibgp local-address 22.22.22.22 family inet-vpn unicast

```
2. Configure the BGP group, specifying the group name and type:

```

[edit protocols bgp]
user@switchPE2# set group ibgp type internal

```
3. Configure the BGP neighbor, specifying the loopback address of the remote PE switch as the neighbor's address:

```

[edit protocols bgp]
user@switchPE2# set group ibgp neighbor 21.21.21.21

```
4. Configure the routing instance, specifying the routing-instance name and using **vrf** as the instance type:

- ```
[edit routing-instances]
user@switchPE2# set L3VPN-1 instance-type vrf
```
5. Configure a description for this routing instance:
 

```
[edit routing-instances]
user@switchPE1# set L3VPN-1 description "BETWEEN PE1 AND PE2"
```
  6. Configure the routing instance to apply to the customer edge interface:
 

```
[edit routing-instances]
user@switchPE2# set L3VPN-1 interface ge-11/0/14.0
```
  7. Configure the routing instance to use a route distinguisher, using the format *ip-address:number*:
 

```
[edit routing-instances]
user@switchPE2# set L3VPN-1 route-distinguisher 21:21
```
  8. Configure the VPN routing and forwarding (VRF) target of the routing instance:
 

```
[edit routing-instances]
user@switchPE2# set L3VPN-1 vrf-target target:21:21
```
  9. Configure this routing instance with **vrf-table-label**, which maps the inner label of a packet to a specific VPN routing and forwarding (VRF) table and allows the examination of the encapsulated IP header.
 

```
[edit routing-instances]
user@switchPE2# set L3VPN-1 vrf-table-label
```
  10. Configure the router ID and autonomous system (AS):
 

```
[edit routing-options]
user@switchPE2# set router-id 22.22.22.22 autonomous-system 10
```

**Results** Display the results of the configuration:

```
user@switchPE2> show configuration

interfaces {
 ge-11/0/14 {
 unit 0 {
 family inet {
 address 11.22.26.14/16;
 }
 }
 }
 lo0 {
 unit 0 {
 family inet {
 address 22.22.22.22/32;
 }
 }
 }
 xe-6/0/0 {
 unit 0 {
 family inet {
 address 60.2.0.60/16;
 }
 family iso;
 family mpls;
 }
 }
 protocols {
```

```
mpls {
 label-switched-path 22-21 {
 from 22.22.22.22;
 to 21.21.21.21;
 no-cspf;
 }
 interface xe-6/0/0.0;
 interface lo0.0;
 bgp {
 group ibgp
 type internal
 local-address 21.21.21.21
 family inet-vpn
 unicast
 }
 ospf {
 traffic-engineering;
 area 0.0.0.0 {
 interface ge-11/0/14.0;
 interface lo0.0;
 interface xe-6/0/0.0;
 }
 }
}
routing-instances {
 L3VPN-1 {
 instance-type vrf;
 description "BETWEEN PE1 AND PE2";
 route-distinguisher 21:21;
 vrf-target target:21:21;
 vrf-table-label;
 }
}
routing-options {
 router-id 22.22.22.22;
 autonomous-system 10;
```

## Verification

To confirm that the MPLS-based Layer 3 VPN is working properly, perform these tasks:

- [Verifying Peering and Adjacency on page 62](#)
- [Verifying That the Local CE Switch Can Ping the Local PE Switch on page 63](#)
- [Verifying That the Local PE Switch Can Ping the Local CE Switch on page 63](#)

### Verifying Peering and Adjacency

---

**Purpose** Verify the peering and adjacency along the route from CE1 (the local CE switch or router) to CE2 (the remote CE switch or router), starting with checking the routing protocol adjacency on the local PE switch:



**NOTE:** Be sure to specify the name of the routing instance.

---



**Action** user@switchPE1> show ospf neighbor instance L3VPN-1

```
Address Interface State ID Pri Dead
51.51.0.14 ge-5/0/24.0 Full 21.21.21.21 128 38
```

**Meaning** The **Address** field shows the IP address of the customer edge interface that connects CE1 to PE1. The **Interface** field shows the interface name of the customer edge interface that connects PE1 to CE1. For our purposes, the **State** field is the most important. It shows a status of **Full**, indicating that neighboring routing devices are fully adjacent. These adjacencies appear in router-link and network-link advertisements. (The field **Pri** indicates the priority of the neighbor to become the designated router. The field **Dead** indicates the number of seconds until the neighbor becomes unreachable.)

### Verifying That the Local CE Switch Can Ping the Local PE Switch

**Purpose** Verify that the local CE switch can ping the local PE switch:

**Action** user@switchCE1> ping 51.51.0.1  
 PING 51.51.0.1 (51.51.0.1): 56 data bytes  
 64 bytes from 51.51.0.1: icmp\_seq=0 ttl=64 time=3.461 ms  
 64 bytes from 51.51.0.1: icmp\_seq=1 ttl=64 time=3.543 ms

**Meaning** This command specified the IP address of the customer edge interface on PE1. The results indicate that CE1 is receiving packets from PE1.

### Verifying That the Local PE Switch Can Ping the Local CE Switch

**Purpose** Verify that the local PE switch can ping the local CE switch:

**Action** user@switchPE1> ping 51.51.0.14 routing-instance L3VPN-1  
 PING 51.51.0.14 (51.51.0.14): 56 data bytes  
 64 bytes from 51.51.0.14: icmp\_seq=0 ttl=64 time=3.842 ms  
 64 bytes from 51.51.0.14: icmp\_seq=1 ttl=64 time=3.736 ms

**Meaning** The results indicate a successful connection.

**Related Documentation**

- [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\) on page 83](#)
- [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)

## Example: Configuring MPLS-Based Layer 2 VPNs

You can implement an MPLS-based Layer 2 virtual private network (VPN) using Junos OS routing devices to interconnect customer sites with Layer 2 technology. Layer 2 VPNs give customers complete control of their own routing. To support an MPLS-based Layer

2 VPN, you need to add components to the configuration of the two provider edge (PE) routing devices. You do not need to change the configuration of the provider devices.

This example shows how to configure an MPLS-based Layer 2 VPN.



**NOTE:** You can configure both an MPLS-based Layer 2 VPN and an MPLS-based Layer 3 VPN on the same device. However, you cannot configure the same customer edge interface to support both a Layer 2 VPN and a Layer 3 VPN. The core interfaces and the loopback interfaces are configured in the same way for Layer 2 VPNs and Layer 3 VPNs.

- [Requirements on page 64](#)
- [Overview and Topology on page 64](#)
- [Configuring the Local PE Routing Device on page 67](#)
- [Configuring the Remote PE Routing Device on page 70](#)
- [Verification on page 73](#)

## Requirements

This example uses the following hardware and software components:

- Junos OS Release 11.1 or later if you are using EX Series switches
- Two PE routing devices

Before you configure the Layer 2 VPN components, configure the basic components for an MPLS network:

- Configure two PE routing devices. See “[Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\)](#)” on page 87.
- Configure one or more provider devices. See “[Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)](#)” on page 78.



**NOTE:** A Layer 2 VPN requires that the PE routing devices be configured using circuit cross-connect (CCC). The provider routing devices are configured in the same way for MPLS using CCC and for IP over MPLS.

## Overview and Topology

A Layer 2 VPN provides complete separation between the provider's network and the customer's network—that is, the PE devices and the CE devices do not exchange routing information. Some benefits of a Layer 2 VPN are that it is private, secure, and flexible.

This example shows how to configure Layer 2 VPN components on the local and remote PE devices. This example does not include configuring a provider device, because there are no specific Layer 2 VPN components on the provider devices.

In the basic MPLS configuration of the PE devices using a circuit cross-connect (CCC), the PE devices are configured to use an interior gateway protocol (IGP), such as OSPF or IS-IS, as the routing protocol between the MPLS devices and LDP or RSVP as the signaling protocol. Traffic engineering is enabled. A label-switched path (LSP) is configured within the **[edit protocols]** hierarchy. However, unlike the basic MPLS configuration using a CCC, you do not need to associate the LSP with the customer edge interface. When you are configuring a Layer 2 VPN, you must use BGP signaling. The BGP signaling automates the connections, so manual configuration of the association between the LSP and the customer edge interface is not required.

The following components must be added to the PE routing devices for an MPLS-based Layer 2 VPN:

- BGP group with **family l2vpn signaling**
- Routing instance using instance type **l2vpn**
- The physical layer encapsulation type (**ethernet**) must be specified on the customer edge interface and the encapsulation type must also be specified in the configuration of the routing instance.

Figure 6 on page 65 illustrates the topology of this MPLS-based Layer 2 VPN.

Figure 6: MPLS-Based Layer 2 VPN

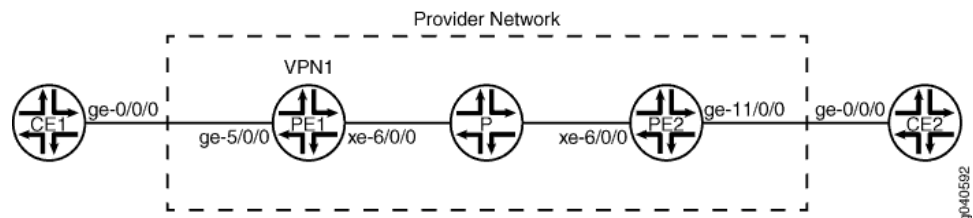


Table 15 on page 65 shows the settings of the customer edge interface on the local CE device.

Table 15: Local CE Routing Device in the MPLS-Based Layer 2 VPN Topology

| Property                         | Settings                                              | Description                         |
|----------------------------------|-------------------------------------------------------|-------------------------------------|
| Local CE routing device hardware | Routing device                                        | CE1                                 |
| Customer edge interface          | ge-0/0/0 unit 0<br>family inet<br>address 11.0.0.2/16 | Interface that connects CE1 to PE1. |

Table 16 on page 65 shows the settings of the customer edge interface on the remote CE routing device.

Table 16: Remote CE Routing Device in the MPLS-Based Layer 2 VPN Topology

| Property                          | Settings       | Description |
|-----------------------------------|----------------|-------------|
| Remote CE routing device hardware | Routing device | CE2         |

Table 16: Remote CE Routing Device in the MPLS-Based Layer 2 VPN Topology (*continued*)

| Property                | Settings                                                                   | Description                         |
|-------------------------|----------------------------------------------------------------------------|-------------------------------------|
| Customer edge interface | <b>ge-0/0/0 unit 0</b><br><b>family inet</b><br><b>address 11.0.0.1/16</b> | Interface that connects CE2 to PE2. |

Table 17 on page 66 shows the Layer 2 VPN components of the local PE routing device.

Table 17: Layer 2 VPN Components of the Local PE Routing Device

| Property                         | Settings                                                                                                                        | Description                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Local PE routing device hardware | Routing device                                                                                                                  | PE1                                                                                                                                                                                                                                                                                                                                                                             |
| Customer edge interface          | <b>ge-5/0/0</b><br><b>encapsulation ethernet-ccc</b><br><b>unit 0</b><br><b>family ccc</b>                                      | Connects PE1 to CE1.<br><br>For the Layer 2 VPN, add <b>ethernet-ccc</b> as the physical layer encapsulation type.<br><br><b>NOTE:</b> The <b>family ccc</b> should already have been completed as part of the basic MPLS configuration of a PE routing device for circuit cross-connect. It is included here to show what was specified for that portion of the configuration. |
| Core interface                   | <b>xe-6/0/0 unit 0</b><br><b>family inet address 60.0.0.60/16</b><br><b>family iso</b><br><b>family mpls</b>                    | Connects PE1 to P.<br><br><b>NOTE:</b> This portion of the configuration should already have been completed as part of the basic MPLS configuration. It is included here to show what was specified for that portion of the configuration.                                                                                                                                      |
| Loopback interface               | <b>lo0 unit 0</b><br><b>family inet address 21.21.21.21/32</b><br><b>family iso address</b><br><b>49.0001.2102.2021.0210.00</b> | <b>NOTE:</b> This portion of the configuration should already have been completed as part of the basic MPLS configuration. It is included here to show what was specified for that portion of the configuration.                                                                                                                                                                |
| BGP                              | <b>bgp</b>                                                                                                                      | Added for the Layer 2 VPN configuration.                                                                                                                                                                                                                                                                                                                                        |
| Routing instance                 | <b>vpn1</b>                                                                                                                     | Added for the Layer 2 VPN configuration                                                                                                                                                                                                                                                                                                                                         |

Table 18 on page 66 shows the Layer 2 VPN components of the remote PE routing device.

Table 18: Layer 2 VPN Components of the Remote PE Routing Device

| Property                   | Settings       | Description |
|----------------------------|----------------|-------------|
| PE routing device hardware | Routing device | PE2         |

Table 18: Layer 2 VPN Components of the Remote PE Routing Device (*continued*)

| Property                | Settings                                                                                                                                                 | Description                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Customer edge interface | <code>ge-11/0/0</code><br><code>encapsulation ethernet-ccc unit 0</code><br><code>family ccc</code>                                                      | Connects PE2 to CE2.<br><br>For the Layer 2 VPN, add <b>ethernet-ccc</b> as the physical layer encapsulation type.<br><br><b>NOTE:</b> The <b>family ccc</b> should already have been completed as part of the basic MPLS configuration of a PE routing device for circuit cross-connect. It is included here to show what was specified for that portion of the configuration. |
| Core interface          | <code>xe-6/0/0</code><br><br><code>unit 0</code><br><code>family inet</code><br><code>address 60.2.0.61/16 family iso</code><br><code>family mpls</code> | Connects PE2 to P.<br><br><b>NOTE:</b> This portion of the configuration should already have been completed as part of the basic MPLS configuration. It is included here to show what was specified for that portion of the configuration.                                                                                                                                      |
| Loopback interface      | <code>lo0 unit 0</code><br><code>family inet address 22.22.22.22/32</code><br><code>family iso address</code><br><code>49.0001.2202.2022.0220.00</code>  | <b>NOTE:</b> This portion of the configuration should already have been completed as part of the basic MPLS configuration. It is included here to show what was specified for that portion of the configuration.                                                                                                                                                                |
| BGP                     | <code>bgp</code>                                                                                                                                         | Added for the Layer 2 VPN configuration.                                                                                                                                                                                                                                                                                                                                        |
| Routing instance        | <code>vpn1</code>                                                                                                                                        | Added for the Layer 2 VPN configuration.                                                                                                                                                                                                                                                                                                                                        |

## Configuring the Local PE Routing Device

**CLI Quick Configuration** To quickly configure the Layer 2 VPN components on the local PE routing device, copy the following commands and paste them into the routing device terminal window:

```
[edit]
set interfaces ge-5/0/0 encapsulation ethernet-ccc
set protocols bgp group ibgp local-address 21.21.21.21 family l2vpn signaling
set protocols bgp group ibgp type internal
set protocols bgp group ibgp neighbor 22.22.22.22
set routing-instances vpn1 instance-type l2vpn
set routing-instances vpn1 interface ge-5/0/0
set routing-instances vpn1 route-distinguisher 21.21.21.21:21
set routing-instances vpn1 vrf-target target:21:21
set routing-instances vpn1 protocols l2vpn encapsulation-type ethernet
set routing-instances vpn1 protocols l2vpn interface ge-5/0/0.0 description "BETWEEN PE1 AND CE1"
set routing-instances vpn1 protocols l2vpn site JE-V21 site-identifier 21 interface ge-5/0/0
remote-site-id 26
```

**Step-by-Step Procedure**

To configure the Layer 2 VPN components on the local PE routing device:

1. Configure the customer edge interface to use the physical encapsulation type **ethernet-ccc**:  

```
[edit]
user@PE1# set interfaces ge-5/0/0 encapsulation ethernet-ccc
```
2. Configure BGP, specifying the loopback address as the local address and enabling **family l2vpn signaling**:  

```
[edit protocols bgp]
user@PE1# set group ibgp local-address 21.21.21.21 family l2vpn signaling
```
3. Configure the BGP group, specifying the group name and type:  

```
[edit protocols bgp]
user@PE1# set group ibgp type internal
```
4. Configure the BGP neighbor, specifying the loopback address of the remote PE routing device as the neighbor's address:  

```
[edit protocols bgp]
user@PE1# set group ibgp neighbor 22.22.22.22
```
5. Configure the routing instance, specifying the routing-instance name and using **l2vpn** as the instance type:  

```
[edit routing-instances]
user@PE1# set vpn1 instance-type l2vpn
```
6. Configure the routing instance to apply to the customer edge interface:  

```
[edit routing-instances]
user@PE1# set vpn1 interface ge-5/0/0
```
7. Configure the routing instance to use a route distinguisher:  

```
[edit routing-instances]
user@PE1# set vpn1 route-distinguisher 21.21.21.21:21
```
8. Configure the VPN routing and forwarding (VRF) target of the routing instance:  

```
[edit routing-instances]
user@PE1# set vpn1 vrf-target target:21:21
```



**NOTE:** You can create more complex policies by explicitly configuring VRF import and export policies using the import and export options. See the [Junos OS VPNs Configuration Guide](#).

9. Configure the protocols and encapsulation type used by the routing instance:  

```
[edit routing-instances]
user@PE1# set vpn1 protocols l2vpn encapsulation-type ethernet
```
10. Apply the routing instance to a customer edge interface and specify a description for it:  

```
[edit routing-instances]
user@PE1# set vpn1 protocols interface ge-5/0/0.0 description "BETWEEN PE1 AND CE1"
```
11. Configure the routing-instance protocols site:  

```
[edit routing-instances]
user@PE1# set vpn1 protocols l2vpn site JE-V21 site-identifier 21remote-site-id 26
```



**NOTE:** The remote site ID (configured with the `remote-site-id` statement) corresponds to the site ID (configured with the `site-identifier` statement) configured on the other PE routing device.

**Results** Display the results of the configuration:

```
user@PE1# show

interfaces {
 ge-5/0/0 {
 encapsulation ethernet-ccc;
 unit 0 {
 family ccc;
 }
 }
 xe-6/0/0 {
 unit 0 {
 family inet {
 address 60.0.0.60/16;
 }
 family mpls;
 }
 }
 lo0 {
 unit 0 {
 family inet {
 address 21.21.21.21/32;
 }
 family iso {
 address 49.0001.2102.2021.0210.00;
 }
 }
 }
}

protocols {
 rsvp {
 interface lo0.0;
 interface xe-0/0/6.0;
 }
 mpls {
 label-switched-path lsp_to_pe2 {
 to 22.22.22.22;
 }
 interface xe-0/0/6.0;
 }
 bgp {
 group ibgp {
 type internal;
 local-address 21.21.21.21;
 family inet-vpn {
 signaling;
 }
 neighbor 22.22.22.22;
 }
 }
}
```

```

 }
 }
 routing-instances {
 vpn1 {
 instance-type l2vpn;
 interface ge-5/0/0.0;
 route-distinguisher 21.21.21.21;
 vrf-target target:21:21;
 protocols {
 l2vpn {
 encapsulation-type ethernet;
 interface ge-5/0/0.0 {
 description "BETWEEN PE1 AND CE1";
 }
 site JE-V21 {
 site-identifier 21;
 interface ge-5/0/0.0 {
 remote-site-id 26;
 }
 }
 }
 }
 }
 }
}

```

## Configuring the Remote PE Routing Device

**CLI Quick Configuration** To quickly configure the Layer 2 VPN components on the remote PE routing device, copy the following commands and paste them into the routing device terminal window:

```

[edit]
set interfaces ge-11/0/0 encapsulation ethernet-ccc
set protocols bgp group ibgp local-address 22.22.22.22 family l2vpn signaling
set protocols bgp group ibgp type internal
set protocols bgp group ibgp neighbor 21.21.21.21
set routing-instances vpn1 instance-type l2vpn
set routing-instances vpn1 interface ge-11/0/0
set routing-instances vpn1 route-distinguisher 21.21.21.21
set routing-instances vpn1 vrf-target target:21:21
set routing-instances vpn1 protocols l2vpn encapsulation-type ethernet
set routing-instances vpn1 protocols l2vpn interface ge-11/0/0.0 description "BETWEEN PE1 AND CE1"
set routing-instances vpn1 protocols l2vpn site T26-VPN1 site-identifier 26 remote-site-id 21

```

**Step-by-Step Procedure** To configure the Layer 2 VPN components on the remote PE routing device:

1. Configure the customer edge interface to use the physical encapsulation type **ethernet-ccc**:  

```

[edit]
user@PE1# set interfaces ge-11/0/0 encapsulation ethernet-ccc

```
2. Configure BGP, specifying the loopback address as the **local-address** and specifying **family l2vpn signaling**:  

```

[edit protocols bgp]
user@PE2# set group ibgp local-address 22.22.22.22 family l2vpn signaling

```
3. Configure the BGP group, specifying the group name and type:  

```

[edit protocols bgp]

```



- ```

user@PE2# set group ibgp type internal

```
4. Configure the BGP neighbor, specifying the loopback address of the remote PE routing device as the neighbor's address:


```

[edit protocols bgp]
user@PE2# set group ibgp neighbor 21.21.21.21

```
 5. Configure the routing instance, specifying the routing-instance name and using **l2vpn** as the **instance-type**:


```

[edit routing-instances]
user@PE2# set vpn1 instance-type l2vpn

```
 6. Configure the routing instance to apply to the customer edge interface:


```

[edit routing-instances]
user@PE2# set vpn1 interface ge-11/0/0.0

```
 7. Configure the routing instance to use a route distinguisher, using the format *ip-address:number*:


```

[edit routing-instances]
user@PE2# set vpn1 route-distinguisher 21.21.21.21

```
 8. Configure the VPN routing and forwarding (VRF) target of the routing instance:


```

[edit routing-instances]
user@PE2# set vpn1 vrf-target target:21:21

```
 9. Configure the protocols and encapsulation type used by the routing instance:


```

[edit routing-instances]
user@PE2# set vpn1 protocols l2vpn encapsulation-type ethernet

```
 10. Apply the routing instance to a customer edge interface and specify a description for it:


```

[edit routing-instances]
user@PE1# set vpn1 protocols interface ge-11/0/0.0 description "BETWEEN PE1 AND CE1"

```
 11. Configure the routing-instance protocols site:


```

[edit routing-instances]
user@PE2# set vpn1 protocols l2vpn site T26-VPN1 site-identifier 26 remote-site-id 21

```



NOTE: The remote site ID (configured with the `remote-site-id` statement) corresponds to the site ID (configured with the `site-identifier` statement) configured on the other PE routing device.

Results Display the results of the configuration:

```

user@PE2# show

interfaces {
  ge-11/0/0 {
    encapsulation ethernet-ccc;
    unit 0 {
      family ccc;
    }
  }
  xe-6/0/0 {
    unit 0 {
      family inet {

```

```
        address 60.2.0.61/16;
    }
    family mpls;
}
}
lo0 {
    unit 0 {
        family inet {
            address 22.22.22.22/32;
        }
        family iso {
            address 49.0001.2202.2022.0220.00;
        }
    }
}
protocols {
    rsvp {
        interface lo0.0;
        interface xe-0/0/6.0;
    }
    mpls {
        label-switched-path lsp_to_pe1 {
            to 21.21.21.21;
        }
    }
    interface xe-0/0/6.0;
    bgp {
        group ibgp
        type internal
        local-address 21.21.21.21
        family inet-vpn
        unicast
    }
}
routing-instances {
    vpn1 {
        instance-type l2vpn;
        interface ge-11/0/0.0;
        route-distinguisher 21.21.21.21:21;
        vrf-target target:21:21;
        protocols {
            l2vpn {
                encapsulation-type ethernet;
                interface ge-11/0/0.0 {
                    description "BETWEEN PE1 AND CE1";
                }
            }
            site T26-VPN1 {
                site-identifier 26;
                interface ge-11/0/0.0 {
                    remote-site-id 21;
                }
            }
        }
    }
}
}
```

Verification

To confirm that the MPLS-based Layer 2 VPN is working properly, perform these tasks:

- [Verifying the Layer 2 VPN Connection on page 73](#)
- [Verifying the Status of MPLS Label-Switched Paths on page 74](#)
- [Verifying BGP Status on page 74](#)
- [Verifying the Status of the RSVP Sessions on page 74](#)
- [Verifying the Routes in the Routing Table on page 75](#)
- [Pinging the Layer 2 VPN Connections on page 76](#)

Verifying the Layer 2 VPN Connection

Purpose Verify that the Layer 2 VPN connection is up.

Action user@PE1> show l2vpn connections

Layer-2 VPN connections:

Legend for connection status (St)

EI -- encapsulation invalid	NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch	WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down	NP -- interface hardware not present
CM -- control-word mismatch	-> -- only outbound connection is up
CN -- circuit not provisioned	<- -- only inbound connection is up
OR -- out of range	Up -- operational
OL -- no outgoing label	Dn -- down
LD -- local site signaled down	CF -- call admission control failure
RD -- remote site signaled down	SC -- local and remote site ID collision
LN -- local site not designated	LM -- local site ID not minimum designated
RN -- remote site not designated	RM -- remote site ID not minimum designated
XX -- unknown connection status	IL -- no incoming label
MM -- MTU mismatch	MI -- Mesh-Group ID not available
BK -- Backup connection	ST -- Standby connection
PF -- Profile parse failure	PB -- Profile busy
RS -- remote site standby	SN -- Static Neighbor

Legend for interface status

Up -- operational
Dn -- down

Instance: vpn1

Local site: JE-V21 (21)

connection-site	Type	St	Time last up	# Up trans
26	rmt	Up	Apr 16 05:53:21 2010	1

Remote PE: 22.22.22.22, Negotiated control-word: Yes (Null)
Incoming label: 800000, Outgoing label: 800001
Local interface: ge-5/0/0.0, Status: Up, Encapsulation: ETHERNET

Meaning The **St** field in the output shows that the Layer 2 VPN connection to **Remote PE (22.22.22.22)** is up.

Verifying the Status of MPLS Label-Switched Paths

Purpose Verify that the MPLS label-switched paths (ingress and egress) are up.

Action user@PE1> `show mpls lsp`
Ingress LSP: 1 sessions

To	From	State	Rt	P	ActivePath	LSPName
22.22.22.22	21.21.21.21	Up	0	*		lsp_to_pe2

Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPName
21.21.21.21	22.22.22.22	Up	0	1 FF	3	-	lsp_to_pe1

Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

Meaning The **State** field in the output shows that the Ingress LSP to **Remote PE (22.22.22.22)** is up, and the Egress LSP from the remote PE routing device to this PE routing device (**21.21.21.21**) is also up.

Verifying BGP Status

Purpose Verify that BGP is up.

Action user@PE1> `show bgp summary`

Groups: 1 Peers: 1 Down peers: 0

Table	Tot Paths	Act Paths	Suppressed	History	Damp	State	Pending
bgp.l2vpn.0	1	1	0	0	0	0	0
Peer	AS	InPkt	OutPkt	OutQ	Flaps	Last	Up/Dwn
State #Active/Received/Accepted/Damped...							
22.22.22.22	10	33	34	0	1	13:24	
Established							
bgp.l2vpn.0: 1/1/1/0							
vpn2.l2vpn.0: 1/1/1/0							

Meaning The output shows that the remote PE routing device (**22.22.22.22**) is listed as the BGP peer and that a protocol session has been established. It also shows the number of packets received from the remote PE routing device (**33**) and the number of packets sent (**34**) to the remote PE routing device.

Verifying the Status of the RSVP Sessions

Purpose Verify that the RSVP sessions (ingress and egress) are up.

Action user@PE1> `show rsvp session`

```
Ingress RSVP: 1 sessions
To          From          State   Rt  Style Labelin Labelout LSPname
22.22.22.22 21.21.21.21 Up      0  1 FF      -    462880 lsp_to_pe2
Total 1 displayed, Up 1, Down 0
```

```
Egress RSVP: 1 sessions
To          From          State   Rt  Style Labelin Labelout LSPname
21.21.21.21 22.22.22.22 Up      0  1 FF      3      -    lsp_to_pe1
Total 1 displayed, Up 1, Down 0
```

```
Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Meaning The output shows that both the ingress RSVP session and the egress RSVP session are up.

Verifying the Routes in the Routing Table

Purpose On routing device PE1, use the `show route table` command to verify that the routing table is populated with the Layer 2 VPN routes used to forward the traffic.

Action user@PE1> `show route table bgp.l2vpn.0`

```
bgp.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
2:2:27:27/96
    *[BGP/170] 00:13:55, localpref 100, from 22.22.22.22
    AS path: I
    > to 60.2.0.24 via ge-6/0/46.0, label-switched-path lsp_to_pe2
```

user@PE1> `show route table vpn1.l2vpn.0`

```
vpn1.l2vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
2:2:27:27/96
    *[BGP/170] 00:14:00, localpref 100, from 22.22.22.22
    AS path: I
    > to 60.2.0.24 via ge-6/0/46.0, label-switched-path lsp_to_pe2
2:2:28:27/96
    *[L2VPN/170/-101] 00:15:55, metric2 1
    Indirect
```

Meaning The command `show route table bgp.l2vpn.0` displays all Layer 2 VPN routes that have been created on this routing device. The command `show route table vpn1.l2vpn.0` shows the Layer 2 VPN routes that have been created for the routing instance `vpn1`.

Pinging the Layer 2 VPN Connections

Purpose Verify connectivity.

Action

```
user@PE1> ping mpls l2vpn interface xe-6/0/0.0 reply-mode ip-udp
!!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss

user@PE1> ping mpls l2vpn instance vpn1 remote-site-id 26 local-site-id 21 detail
Request for seq 1, to interface 68, labels <800001, 100176>
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 68, labels <800001, 100176>
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 68, labels <800001, 100176>
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 68, labels <800001, 100176>
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 68, labels <800001, 100176>
Reply for seq 5, return code: Egress-ok

--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

Meaning The output shows that connectivity is established.

Related Documentation

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Example: Configuring MPLS-Based Layer 3 VPNs on EX Series Switches on page 54](#)
- [Configuring an MPLS-Based Layer 2 VPN \(CLI Procedure\) on page 96](#)

CHAPTER 3

Configuration Tasks

- [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)
- [Configuring Path Protection in an MPLS Network \(CLI Procedure\) on page 79](#)
- [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\) on page 83](#)
- [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS \(CLI Procedure\) on page 90](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect \(CLI Procedure\) on page 91](#)
- [Configuring CoS on Provider Switches of an MPLS Network \(CLI Procedure\) on page 94](#)
- [Configuring CoS Bits for an MPLS Network \(CLI Procedure\) on page 95](#)
- [Configuring an MPLS-Based Layer 2 VPN \(CLI Procedure\) on page 96](#)
- [Configuring an MPLS-Based Layer 3 VPN \(CLI Procedure\) on page 99](#)
- [Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN \(CLI Procedure\) on page 101](#)
- [Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit \(CLI Procedure\) on page 104](#)
- [Configuring an MPLS-Based VLAN CCC Using the Connection Method \(CLI Procedure\) on page 107](#)
- [Configuring IPv6 Tunneling for MPLS \(CLI Procedure\) on page 108](#)
- [Configuring Static Label Switched Paths for MPLS \(CLI Procedure\) on page 110](#)
- [Configuring Bidirectional Forwarding Detection for MPLS \(CLI Procedure\) on page 112](#)

Configuring MPLS on EX8200 and EX4500 Provider Switches (CLI Procedure)

You can configure MPLS on EX8200 and EX4500 switches to increase transport efficiency in your network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as VoIP and other business-critical functions.

To implement MPLS on EX Series switches, you must configure at least one provider switch as a transit switch for the MPLS packets. The configuration of all the provider switches remains the same regardless of whether the provider edge (PE) switches are using circuit cross-connect (CCC) or using MPLS over IP for the customer edge interfaces. Likewise, you do not need to change the configuration of the provider switches if you implement an MPLS-based Layer 2 VPN, Layer 3 VPN, or a Layer 2 circuit configuration.

MPLS requires the configuration of a routing protocol (OSPF or IS-IS) on the core interfaces and the loopback interface of all the switches. This procedure includes the configuration of OSPF on the provider switch. For information on configuring IS-IS as the routing protocol, see [Junos OS Routing Protocols Configuration Guide](#).

To configure the provider switch, complete the following tasks:

1. Enable the routing protocol (OSPF or IS-IS) on the loopback interface and on the core interfaces:



NOTE: You can use the switch address as an alternative to the loopback interface.

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/6.0
user@switch# set ospf area 0.0.0.0 interface ae0
```

2. Enable traffic engineering for the routing protocol (traffic engineering must be explicitly enabled for OSPF):

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Enable MPLS within the **protocols** stanza and apply it to the core interfaces:

```
[edit protocols]
user@switch# set mpls interface ge-0/0/5.0
user@switch# set mpls interface ge-0/0/6.0
user@switch# set mpls interface ae0
```

4. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface ge-0/0/5.0
user@switch# set rsvp interface ge-0/0/6.0
user@switch# set rsvp interface ae0
```

5. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
```



```

user@switch# set interfaces lo0 unit 0 family inet address 127.1.1/32
user@switch# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switch# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
user@switch# set interfaces ae0 unit 0 family inet address 10.1.9.2/24

```

6. Configure **family mpls** on the logical units of the core interfaces:

```

[edit]
user@switch# set interfaces ge-0/0/5 unit 0 family mpls
user@switch# set interfaces ge-0/0/6 unit 0 family mpls
user@switch# set interfaces ae0 unit 0 family mpls

```



NOTE: You can enable **family mpls** on either individual interfaces or aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

Related Documentation

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
- [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\) on page 83](#)
- [Configuring an MPLS-Based Layer 2 VPN \(CLI Procedure\) on page 96](#)
- [Configuring an MPLS-Based Layer 3 VPN \(CLI Procedure\) on page 99](#)

Configuring Path Protection in an MPLS Network (CLI Procedure)

The Junos OS implementation of MPLS on EX Series switches provides path protection as a mechanism for protecting against label switched path (LSP) failures. Path protection reduces the time required to recalculate a route in case of a failure within the MPLS tunnel. You configure path protection on the ingress provider edge switch in your MPLS network. You do not configure the egress provider edge switch or the provider switches for path protection. You can explicitly specify which provider switches are used for the primary and secondary paths, or you can let the software calculate the paths automatically.

Before you configure path protection, be sure you have:

- Configured an ingress provider edge switch and an egress provider edge switch. See [“Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\)” on page 83](#) or [“Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\)” on page 87](#).
- Configured at least one provider (transit) switch. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)” on page 78](#).

- Verified the configuration of your MPLS network. See [“Verifying That MPLS Is Working Correctly”](#) on page 179.

To configure path protection, complete the following tasks on the ingress provider edge switch:

1. [Configuring the Primary Path on page 81](#)
2. [Configuring the Secondary Path on page 81](#)
3. [Configuring the Revert Timer on page 82](#)

Configuring the Primary Path

The **primary** statement creates the primary path, which is the LSP's preferred path. The **secondary** statement creates an alternative path if the primary path can no longer reach the egress provider edge switch.

In the tasks described in this topic, the **lsp-name** has already been configured on the ingress provider edge switch as **lsp_to_240** and the loopback interface address on the remote provider edge switch has already been configured as **127.0.0.8**.

When the software switches from the primary to the secondary path, it continuously attempts to revert to the primary path, switching back to it when it is again reachable but no sooner than the retry time specified in the **revert-timer** statement.

You can configure zero primary paths or one primary path. If you do not configure a primary path, the first secondary path (if a secondary path has been configured) is selected as the path. If you do not specify any named paths, or if the path that you specify is empty, the software makes all routing decisions necessary for the packets to reach the egress provider edge switch.

To configure a primary path:

1. Create the primary path for the LSP:

```
[edit protocols mpls label-switched-path lsp_to_240 to 127.0.0.8]
user@switch# set primary primary_path_lsp_to_240
```

2. Configure an explicit route for the primary path by specifying the IP address of the loopback interface or the switch IP address or hostname of each switch used in the MPLS tunnel. You can specify the link types as either **strict** or **loose** in each **path** statement. If the link type is **strict**, the LSP must go to the next address specified in the **path** statement without traversing other switches. If the link type is **loose**, the LSP can traverse through other switches before reaching this switch. This configuration uses the default **strict** designation for the paths.



NOTE: You can enable path protection without specifying which provider switches are used. If you do not list the specific provider switches to be used for the MPLS tunnel, the switch calculates the route.



TIP: Do not include the ingress provider edge switch in these statements. List the IP address of the loopback interface or switch address or hostname of all other switch hops in sequence, ending with the egress provider edge switch.

```
[edit protocols mpls label-switched-path lsp_to_240 to 127.0.0.8]
user@switch# set path primary_path_lsp_to_240 127.0.0.2
user@switch# set path primary_path_lsp_to_240 127.0.0.3
user@switch# set path primary_path_lsp_to_240 127.0.0.8
```

Configuring the Secondary Path

You can configure zero or more secondary paths. All secondary paths are equal, and the software tries them in the order that they are listed in the configuration. The software does not attempt to switch among secondary paths. If the first secondary path in the configuration is not available, the next one is tried, as so on. To create a set of equal paths, specify secondary paths without specifying a primary path. If you do not specify any named paths, or if the path that you specify is empty, the software makes all routing decisions necessary to reach the egress provider edge switch.

To configure the secondary path:

1. Create a secondary path for the LSP:

```
[edit protocols mpls label-switched-path lsp_to_240 to 127.0.0.8]
user@switch# set secondary secondary_path_lsp_to_240 standby
```

2. Configure an explicit route for the secondary path by specifying the IP address of the loopback interface or the switch IP address or hostname of each switch used in the MPLS tunnel. You can specify the link types as either **strict** or **loose** in each **path** statement. This configuration uses the default **strict** designation for the paths.



TIP: Do not include the ingress provider edge switch in these statements. List the IP address of the loopback interface or switch address or hostname of all other switch hops in sequence, ending with the egress provider edge switch.

```
[edit protocols mpls label-switched-path lsp_to_240 to 127.0.0.8]
user@switch# set path secondary_path_lsp_to_240 127.0.0.4
user@switch# set path primary_path_lsp_to_240 127.0.0.8
```

Configuring the Revert Timer

For LSPs configured with both primary and secondary paths, you can optionally configure a revert timer. If the primary path goes down and traffic is switched to the secondary path, the revert timer specifies the amount of time (in seconds) that the LSP must wait before it can revert traffic back to the primary path. If the primary path experiences any connectivity problems or stability problems during this time, the timer is restarted.



TIP: If you do not explicitly configure the revert timer, it is set by default to 60 seconds.

To configure the revert timer for LSPs configured with primary and secondary paths:

- For all LSPs on the switch:

```
[edit protocols mpls]
user@switch# set revert-timer 120
```

- For a specific LSP on the switch:

```
[edit protocols mpls label-switched-path]
user@switch# set lsp_to_240 revert-timer 120
```

- Related Documentation**
- [Understanding MPLS and Path Protection on EX Series Switches on page 11](#)

Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure)

You can configure MPLS on EX Series switches to increase transport efficiency in your network. MPLS services can be used to connect various sites to a backbone network or to ensure better performance for low-latency applications such as VoIP and other business-critical functions.

To implement MPLS on switches, you must configure two provider edge (PE) switches—an ingress PE switch and an egress PE switch—and at least one provider switch. You can configure customer edge (CE) interfaces on the PE switches of the MPLS network by using either IP over MPLS or MPLS over circuit cross-connect (CCC).

The main differences between configuring IP over MPLS and configuring MPLS over CCC are that for IP over MPLS you configure the customer edge interfaces to belong to **family inet** (rather than **family ccc**) and you configure a static route for the label-switched path (LSP). The configuration of the provider switch is the same regardless of whether you have used IP over MPLS or MPLS over CCC. See “[Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)](#)” on page 78.

This topic describes how to configure an ingress PE switch and an egress PE switch using IP over MPLS:

1. [Configuring the Ingress PE Switch on page 83](#)
2. [Configuring the Egress PE Switch on page 85](#)

Configuring the Ingress PE Switch

To configure the ingress PE switch:

1. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit 0 family inet address 100.100.100.100/32
user@switch# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switch# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
```

2. Configure OSPF on the loopback and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/6.0
```



NOTE: If you want to use routed VLAN interfaces (RVIs) or Layer 3 subinterfaces as the core interfaces, replace `ge-0/0/5.0` and `ge-0/0/6` each with an RVI name (for example, `vlan.logical-interface-number`) or a subinterface name (for example, `interface-name.logical-unit-number`).

RVIs function as logical routers, eliminating the need to have both a switch and a router. Layer 3 subinterfaces allow you to route traffic among multiple VLANs along a single trunk line that connects an EX Series switch to a Layer 2 switch.

3. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

4. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface ge-0/0/5.0
user@switch# set rsvp interface ge-0/0/6.0
```

5. Configure MPLS traffic engineering:

```
[edit protocols]
user@switch# set protocols mpls traffic-engineering bgp-igp
```

6. Configure MPLS on the core interfaces:

```
[edit protocols]
user@switch# set mpls interface ge-0/0/5.0
user@switch# set mpls interface ge-0/0/6.0
```

7. Configure **family mpls** on the logical units of the core interfaces, thereby identifying the interfaces that will be used for forwarding MPLS packets:

```
[edit]
user@switch# set interfaces ge-0/0/5 unit 0 family mpls
user@switch# set interfaces ge-0/0/6 unit 0 family mpls
```

8. Configure a customer edge interface as a Layer 3 routed interface, specifying an IP address:

```
[edit]
user@switch# set interfaces ge-2/0/3 unit 0 family inet 121.121.121.1/16
```

9. Configure this Layer 3 customer edge interface for the routing protocol:

```
[edit]
user@switch# set protocols ospf area 0.0.0 interface ge-2/0/3.0
```

10. Configure an LSP on the ingress PE switch (100.100.100.100) to send IP packets over MPLS to the egress PE switch (208.208.208.208):

```
[edit protocols mpls]
user@switch# set label-switched-path ip_lspjavae_29 from 100.100.100.100
user@switch# set label-switched-path ip_lspjavae_29 to 208.208.208.208
```

11. Disable constrained-path LSP computation for this LSP:

```
[edit protocols mpls]
```

```
user@switch# set label-switched-path ip_lspjavae_29 no-cspf
```

12. Configure a static route from the ingress PE switch to the egress PE switch, thereby indicating to the routing protocol that the packets will be forwarded over the MPLS LSP that has been set up to that destination:



NOTE: Do not configure a static route if you are using this procedure to configure an MPLS-based Layer 3 VPN.

```
[edit]
```

```
user@switch# set routing-options static route 2.2.2.0/24 next-hop 100.100.100.100
user@switch# set routing-options static route 2.2.2.0/24 resolve
```

Configuring the Egress PE Switch

To configure the egress PE switch:

1. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
```

```
user@switch# set interfaces lo0 unit 0 family inet address 208.208.208.208/32
user@switch# set interfaces ge-0/0/5 unit 0 family inet address 10.1.20.1/24
user@switch# set interfaces ge-0/0/6 unit 0 family inet address 10.1.21.1/24
```

2. Configure OSPF on the loopback interface (or switch address) and core interfaces:

```
[edit protocols]
```

```
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/6.0
```



NOTE: If you want to use routed VLAN interfaces (RVIs) or Layer 3 subinterfaces as the core interfaces, replace ge-0/0/5.0 and ge-0/0/6.0 each with an RVI name (for example, *vlan.logical-interface-number*) or a subinterface name (for example, *interface-name.logical-unit-number*).

RVIs function as logical routers, eliminating the need to have both a switch and a router. Layer 3 subinterfaces allow you to route traffic among multiple VLANs along a single trunk line that connects an EX Series switch to a Layer 2 switch.

3. Enable traffic engineering for the routing protocol:

```
[edit protocols]
```

```
user@switch# set ospf traffic-engineering
```

4. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
```

```
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface ge-0/0/5.0
user@switch# set rsvp interface ge-0/0/6.0
```

5. Configure MPLS traffic engineering on both BGP and IGP destinations:

```
[edit protocols]
```

```
user@switch# set protocols mpls traffic-engineering bgp-igp
```

6. Configure MPLS on the core interfaces:

- ```
[edit protocols]
user@switch# set mpls interface ge-0/0/5.0
user@switch# set mpls interface ge-0/0/6.0
```
7. Configure **family mpls** on the logical units of the core interfaces, thereby identifying the interfaces that will be used for forwarding MPLS packets:
 

```
[edit]
user@switch# set interfaces ge-0/0/5 unit 0 family mpls
user@switch# set interfaces ge-0/0/6 unit 0 family mpls
```
  8. Configure a customer edge interface as a Layer 3 routed interface, specifying an IP address:
 

```
[edit]
user@switch# set interfaces ge-2/0/3 unit 0 family inet address 2.2.2.1/16
```
  9. Configure this Layer 3 customer edge interface for the routing protocol:
 

```
[edit]
user@switch# set protocols ospf area 0.0.0 interface ge-2/0/3
```
  10. Configure an LSP on the egress PE switch (208.208.208.208) to send IP packets over MPLS to the ingress PE switch (100.100.100.100):
 

```
[edit protocols mpls]
user@switch# set label-switched-path ip_lsp29_javae from 208.208.208.208
user@switch# set label-switched-path ip_lsp29_javae to 100.100.100.100
```
  11. Disable constrained-path LSP computation for this LSP:
 

```
[edit protocols mpls]
user@switch# set label-switched-path ip_lsp29_javae no-cspf
```
  12. Configure a static route from the ingress PE switch to the egress PE switch, thereby indicating to the routing protocol that the packets will be forwarded over the MPLS LSP that has been set up to that destination:



**NOTE:** Do not configure a static route if you are using this procedure to configure an MPLS-based Layer 3 VPN.

```
[edit]
user@switch# set routing-options static route 121.121.121.0/24 next-hop 208.208.208.208
user@switch# set routing-options static route 121.121.121.0/24 resolve
```

#### Related Documentation

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)
- [Configuring an OSPF Network \(J-Web Procedure\)](#)
- [Verifying That MPLS Is Working Correctly on page 179](#)
- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)



## Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect (CLI Procedure)

Junos OS MPLS for EX8200 and EX4500 switches supports Layer 2 protocols and Layer 2 virtual private networks (VPNs). You can configure MPLS on switches to increase transport efficiency in your network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as VoIP and other business-critical functions.

This topic describes configuring provider edge (PE) switches in an MPLS network using a circuit cross-connect (CCC). The customer edge interface can be either a simple interface or a tagged VLAN interface.



**NOTE:** If you are configuring a CCC on a tagged VLAN interface, you do not specify **family ccc**. See [Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN](#) and [Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit](#).



**NOTE:** If you are going through this procedure in preparation for configuring an MPLS-based Layer 2 VPN, you do not need to configure the association of the label-switched path (LSP) with the customer edge interface. The BGP signaling automates the connections, so manual configuration of the connections is not required.

The following guidelines apply to CCC configurations:

- When an interface is configured to belong to **family ccc**, it cannot belong to any other family.
- You can send any kind of traffic over a CCC, including nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment.
- If you are configuring a CCC on a tagged VLAN interface, you must explicitly enable VLAN tagging and specify a VLAN ID. The VLAN ID cannot be configured on logical interface unit 0. The logical unit number must be 1 or higher. See [Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN](#) and [Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit](#).

This procedure shows how to set up two CCCs:

- If you are configuring a CCC on a simple interface (**ge-0/0/1**), you do not need to enable VLAN tagging or specify a VLAN ID, so you skip those steps.
- If you are configuring a CCC on a tagged VLAN interface (**ge-0/0/2**), include all the steps in this procedure.

To configure a PE switch with a CCC:

1. Configure OSPF (or IS-IS) on the loopback (or switch address) and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/6.0
user@switch# set ospf area 0.0.0.0 interface ae0
```

2. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit 0 family inet address 127.1.1.1/32
user@switch# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switch# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
user@switch# set interfaces ae0 unit 0 family inet address 10.1.9.1/24
```

4. Enable MPLS and define the LSP:

```
[edit protocols]
user@switch# set mpls label-switched-path lsp_to_pe2_ge1 to 127.1.1.3
```



**TIP:** `lsp_to_pe2_ge1` is the LSP name. You will need to use the specified name again when configuring the CCC.

5. Configure MPLS on the core interfaces:

```
[edit protocols]
user@switch# set mpls interface ge-0/0/5.0
user@switch# set mpls interface ge-0/0/6.0
user@switch# set mpls interface ae0
```

6. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface ge-0/0/5.0
user@switch# set rsvp interface ge-0/0/6.0
user@switch# set rsvp interface ae0
```

7. Configure **family mpls** on the logical units of the core interfaces:

```
[edit]
user@switch# set interfaces ge-0/0/5 unit 0 family mpls
user@switch# set interfaces ge-0/0/6 unit 0 family mpls
user@switch# set interfaces ae0 unit 0 family mpls
```



**NOTE:** You can enable **family mpls** on either individual interfaces or aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

8. If you are configuring a CCC on a tagged VLAN interface, enable VLAN tagging on the customer edge interface `ge-0/0/2` of the local PE switch:

```
[edit interfaces ge-0/0/2]
user@switch# set vlan-tagging
```

If you are configuring a CCC on a simple interface (`ge-0/0/1`), omit this step.

9. If you are configuring a CCC on a tagged VLAN interface, configure the logical unit of the customer edge interface with a VLAN ID:

```
[edit interfaces ge-0/0/2 unit 1]
user@switch# set vlan-id 100
```

If you are configuring a CCC on a simple interface (**ge-0/0/1**), omit this step.

10. Configure the logical unit of the customer edge interface to belong to **family ccc**:

- On a simple interface:

```
[edit interfaces ge-0/0/1 unit 0]
user@switch# set family ccc
```

- On a tagged VLAN interface:

```
[edit interfaces ge-0/0/2 unit 1]
user@switch# set family ccc
```

11. Associate the CCC interface with two LSPs, one for transmitting MPLS packets and the other for receiving MPLS packets:



**NOTE:** If you are configuring a Layer 2 VPN, omit this step. The BGP signaling automates the connections, so manual configuration of the connections is not required.

- On a simple interface:

```
[edit protocols]
user@switch# set connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/1.0
user@switch# set connections remote-interface-switch ge-1-to-pe2 transmit-lsp
lsp_to_pe2_ge1
user@switch# set connections remote-interface-switch ge-1-to-pe2 receive-lsp
lsp_to_pe1_ge1
```

- On a tagged VLAN interface:

```
[edit protocols]
user@switch# set connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/2.1
user@switch# set connections remote-interface-switch ge-1-to-pe2 transmit-lsp
lsp_to_pe2_ge1
user@switch# set connections remote-interface-switch ge-1-to-pe2 receive-lsp
lsp_to_pe1_ge1
```



**TIP:** The `transmit-lsp` option specifies the LSP name that was configured on PE-1 (the local PE switch) by the label-switched-path statement within the `[edit protocols mpls]` hierarchy.

The `receive-lsp` option specifies the LSP name that was configured on PE-2 (the remote PE switch) by the label-switched-path statement within the `[edit protocols mpls]` hierarchy.

When you have completed configuring one PE switch, follow the same procedures to configure the other PE switch.

**Related Documentation**

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Example: Configuring MPLS-Based Layer 2 VPNs on page 63](#)
- [Verifying That MPLS Is Working Correctly on page 179](#)
- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)

## **Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS (CLI Procedure)**

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. This topic describes configuring CoS components on a provider edge (PE) switch that is using IP Over MPLS.

This task describes how to create a custom DSCP classifier and a custom EXP rewrite rule on the ingress PE switch. It includes configuring a policer firewall filter and applying it to the customer-edge interface of the ingress PE switch. The policer firewall filter ensures that the amount of traffic forwarded through the MPLS tunnel never exceeds the requested bandwidth allocation.

Before you begin, configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\)” on page 87](#).
- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)” on page 78](#).

This topic includes:

1. [Configuring CoS on page 90](#)
2. [Configuring an LSP Policer on page 91](#)

### **Configuring CoS**

To configure CoS on a provider edge switch:

1. Import the default DSCP classifier classes to the custom DSCP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name import default
```

2. Add a forwarding class to this custom DSCP classifier and specify a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name forwarding-class forwarding-class
loss-priority loss-priority code-points code-point
```

3. Specify the values for the custom EXP rewrite rule, e1:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class forwarding-class loss-priority
loss-priority code-points code-point
```

4. On EX8200 switches only, bind the custom EXP rewrite rule to the interface:

```
[edit class-of-service]
user@switch# set class-of-service interfaces interface unit unit rewrite-rules exp e1
```

## Configuring an LSP Policer

To configure an LSP policer:



**NOTE:** You cannot configure LSP policers on EX8200 switches. EX8200 switches do not support LSP policers.

1. Specify the number of bits per second permitted, on average, for the firewall policer, which will later be applied to the customer-edge-interface:

```
[edit firewall]
user@switch# set policer mypolicer if-exceeding bandwidth-limit 500m
```

2. Specify the maximum size permitted for bursts of data that exceed the given bandwidth limit for this policer:

```
[edit firewall policer]
user@switch# set mypolicer if-exceeding burst-size-limit 33553920
```

3. Discard traffic that exceeds the rate limits for this policer:

```
[edit firewall policer]
user@switch# set mypolicer then discard
```

4. To reference the policer, configure a filter term that includes the policer action:

```
[edit firewall]
user@switch# set family inet filter myfilter term t1 then policer mypolicer
```

5. Apply the filter to the customer-edge interface:

```
[edit interfaces]
user@switch# set ge-2/0/3 unit 0 family inet address 121.121.121.1/16 policing filter myfilter
```



**NOTE:** You can also configure schedulers and shapers as needed. See *Defining CoS Schedulers and Scheduler Maps (CLI Procedure)*.

### Related Documentation

- [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
- [Assigning CoS Components to Interfaces \(CLI Procedure\)](#)
- [Configuring Policers to Control Traffic Rates \(CLI Procedure\)](#)
- [Understanding the Use of Policers in Firewall Filters](#)

## Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect (CLI Procedure)

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. This topic describes configuring CoS components on a provider edge (PE) switch that is using MPLS over circuit-cross connect (CCC).



**NOTE:** On EX Series switches other than EX8200 switches, if you are using MPLS over CCC, you can use only one DSCP or IP precedence classifier and only one IEEE 802.1p classifier on the CCC interfaces.

This procedure is for creating a custom DSCP classifier and a custom EXP rewrite rule on the ingress PE. It also includes enabling a policer on the label-switched path (LSP) of the ingress PE to ensure that the amount of traffic forwarded through the LSP never exceeds the requested bandwidth allocation.

This topic includes:

1. [Configuring CoS on page 92](#)
2. [Configuring an LSP Policer on page 93](#)

## Configuring CoS

To configure CoS on a provider edge switch:

1. Import the default DSCP classifier classes to the custom DSCP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name import default
```

2. Add the expedited-forwarding class to this custom DSCP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name forwarding-class forwarding-class
loss-priority loss-priority code-points code-point
```

3. Specify the values for the custom EXP rewrite rule, **e1**:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class forwarding-class loss-priority
loss-priority code-point code-point
```

4. Bind the DSCP classifier to the CCC interface:

```
[edit]
user@switch# set class-of-service interfaces interface unit unit classifier classifier-name
```

5. On EX8200 switches only, bind the custom EXP rewrite rule to the interface:

```
[edit class-of-service]
user@switch# set class-of-service interfaces interface unit unit rewrite-rules exp e1
```

## Configuring an LSP Policer

To configure an LSP policer:



**NOTE:** You cannot configure LSP policers on EX8200 switches. EX8200 switches do not support LSP policers.

1. Specify the number of bits per second permitted, on average, for the policer, which will later be applied to the LSP:

```
[edit firewall]
set policer mypolicer if-exceeding bandwidth-limit 500m
```

2. Specify the maximum size permitted for bursts of data that exceed the given bandwidth limit for this policer:

```
[edit firewall policer]
set mypolicer if-exceeding burst-size-limit 33553920
```

3. Discard traffic that exceeds the rate limits for this policer:

```
[edit firewall policer]
set mypolicer then discard
```

4. To reference the policer, configure a filter term that includes the policer action:

```
[edit firewall]
user@switch# set family any filter myfilter term t1 then policer mypolicer
```

5. Apply the filter to the LSP:

```
[edit protocols mpls]
set label-switched-path lsp_to_pe2_ge1 policing filter myfilter
```



**NOTE:** You can also configure schedulers and shapers as needed. See *Defining CoS Schedulers and Scheduler Maps (CLI Procedure)*.

### Related Documentation

- [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
- [Assigning CoS Components to Interfaces \(CLI Procedure\)](#)
- [Configuring Policers to Control Traffic Rates \(CLI Procedure\)](#)
- [Understanding the Use of Policers in Firewall Filters](#)

## Configuring CoS on Provider Switches of an MPLS Network (CLI Procedure)

---

You can add class-of-service (CoS) components to your MPLS networks on EX Series switches to achieve end-to-end Differentiated Services to match your specific business requirements. The configuration of CoS components on the provider switches is the same regardless of whether the provider edge (PE) switches are using MPLS over CCC or IP over MPLS.

This task shows how to configure a custom EXP classifier and custom EXP rewrite rule on the provider switch.

1. Import the default EXP classifier classes to the custom EXP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 import default
```

2. Add the expedited-forwarding class to this custom EXP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 forwarding-class expedited-forwarding loss-priority
low code-points 010
```

3. Specify the values for the custom EXP rewrite rule, **e1**:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority
low code-point 111
```

4. On EX8200 switches only, bind the custom EXP rewrite rule to the interface:

```
[edit class-of-service]
user@switch# set class-of-service interfaces ge-0/0/2 unit 0 rewrite-rules exp e1
```



**NOTE:** You can also configure schedulers and shapers as needed. See *Defining CoS Schedulers and Scheduler Maps (CLI Procedure)*.

### Related Documentation

- *Example: Configuring CoS on EX Series Switches*



## Configuring CoS Bits for an MPLS Network (CLI Procedure)

When traffic enters a labeled-switch path (LSP) tunnel, the CoS bits in the MPLS header are set in one of two ways:

- The number of the output queue into which the packet was buffered and the packet loss priority (PLP) bit are written into the MPLS header and are used as the packet's CoS value. This behavior is the default, and no configuration is required. The [Junos OS Class of Service Configuration Guide](#) explains the IP CoS values, and summarizes how the CoS bits are treated.
- You set a fixed CoS value on all packets entering the LSP tunnel. A fixed CoS value means that all packets entering the LSP receive the same class of service.

To set a fixed CoS value on all packets entering the LSP:

1. Specify a class of service value for the LSP:



**NOTE:** The CoS value set using the `class-of-service` statement at the `[edit protocols mpls]` hierarchy level supersedes the CoS value set at the `[edit class-of-service]` hierarchy level for an interface. Effectively, the CoS value configured for an LSP overrides the CoS value set for an interface.

```
[edit protocols mpls]
user@switch# set class-of-service cos-value
```

### Related Documentation

- [Understanding CoS Classifiers](#)
- [Example: Configuring CoS on EX Series Switches](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect \(CLI Procedure\) on page 91](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS \(CLI Procedure\) on page 90](#)
- [Configuring CoS on Provider Switches of an MPLS Network \(CLI Procedure\) on page 94](#)
- [Defining CoS Rewrite Rules \(CLI Procedure\)](#)

## Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)

You can configure MPLS-based Layer 2 virtual private networks (VPNs) on EX8200 and EX4500 switches. Some benefits of a Layer 2 VPN are that it is private, secure and flexible. To configure Layer 2 VPN functionality in your MPLS network, you must configure Layer 2 VPN components on the local and remote provider edge (PE) switches.



**NOTE:** This topic shows how to add Layer 2 VPN components to a CCC configured on a simple interface. For information on combining Layer 2 VPN components with a tagged VLAN CCC, see [“Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN \(CLI Procedure\)”](#) on page 101.

Before you configure the Layer 2 VPN components, you must configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\)”](#) on page 87.
- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)”](#) on page 78.



**NOTE:** A Layer 2 VPN requires that the PE switches be configured using a circuit cross-connect (CCC).

Configure the Layer 2 VPN components on both PE switches. This procedure describes how to configure one PE switch. Repeat the procedure to configure the remote PE switch.

To configure Layer 2 VPN components on the PE switch:

1. Configure the customer edge interface to use the physical encapsulation type **ethernet-ccc**:



**NOTE:** The customer edge interface is a simple interface.

[edit]

```
user@switch# set interfaces interface-name encapsulation ethernet-ccc
```

2. Configure BGP, specifying the loopback address of this PE switch as the local address and specifying **family l2vpn signaling**:

[edit protocols bgp]

```
user@switch# set local-address address family l2vpn signaling
```

3. Configure the BGP group, specifying the group name and **type internal**:

[edit protocols bgp]

```
user@switch# set group group-name type internal
```

4. Configure the BGP neighbor, specifying the loopback address of the remote PE switch as the neighbor's address:

```
[edit protocols bgp]
user@switch# set neighbor address
```

5. Configure the routing instance, specifying the routing-instance name and using **l2vpn** as the instance type:

```
[edit routing-instances]
user@switch# set routing-instance-name instance-type l2vpn
```

6. Configure the routing instance to apply to the customer edge interface:

```
user@switch# set routing-instances routing-instance-name interface interface-name
```

7. Configure the routing instance to use a route distinguisher:



**NOTE:** Each routing instance that you configure on a PE switch must have a unique route distinguisher associated with it. VPN routing instances must have a route distinguisher to allow BGP to distinguish between potentially identical network layer reachability information (NLRI) messages received from different VPNs. If you configure different VPN routing instances with the same route distinguisher, the commit fails.

```
user@switch# set routing-instances routing-instance-name route-distinguisher
ip-address:number
```

8. Configure the VPN routing and forwarding (VRF) target of the routing instance:

```
[edit routing-instances]
user@switch# set routing-instance-name vrf-target community
```



**NOTE:** If you configure the *community* option only, default VRF import and export policies are generated that accept and tag routes with the specified target community. You can create more complex policies by explicitly configuring VRF import and export policies using the import and export options. See the *Junos OS VPNs Configuration Guide*.

9. Configure the protocols and encapsulation type used by the routing instance:

```
[edit routing-instances]
user@switch# set routing-instance-name protocols l2vpn encapsulation-type ethernet
```

10. Apply the routing instance to a customer edge interface and specify a description for it:

```
[edit routing-instances]
user@switch# set routing-instance-name protocols interface interface-name description text
```

11. Configure the routing instance protocols site:

```
[edit routing-instances]
user@switch# set routing-instance-name protocols l2vpn site site-name site-identifier
identifier remote-site-id identifier
```



**NOTE:** The remote site ID (configured with the *remote-site-id* statement) corresponds to the site ID (configured with the *site-identifier* statement) configured on the other PE switch.

**Related  
Documentation**

- [Example: Configuring MPLS-Based Layer 2 VPNs on page 63](#)
- [Configuring an MPLS-Based Layer 3 VPN \(CLI Procedure\) on page 99](#)
- [Understanding Using MPLS-Based Layer 2 and Layer 3 VPNs on EX Series Switches on page 20](#)

## Configuring an MPLS-Based Layer 3 VPN (CLI Procedure)

You can configure MPLS-based Layer 3 virtual private networks (VPNs) on EX8200 and EX4500 switches. Layer 3 VPNs leverage the service provider's technical expertise for site-to-site routing.

To configure Layer 3 VPN functionality in your MPLS network, you must enable Layer 3 VPN support on the local and remote provider edge (PE) switches as described in this task.

Before you configure the Layer 3 VPN components, you must configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\)”](#) on page 83.
- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)”](#) on page 78.



**NOTE:** A Layer 3 VPN requires that the PE switches be configured using IP over MPLS.

Configure the Layer 3 VPN components on both PE switches. This procedure describes how to configure one PE switch. Repeat the procedure to configure the remote PE switch.



**NOTE:** When you configure the remote PE switch, the information specified for the routing instance must be configured the same as the information specified for the routing instance on the local PE switch. You must also specify the same BGP group name. The following statements will have different values on the remote PE switch from those on the local PE switch:

- **local-address**
- **neighbor**

To configure an MPLS-based Layer 3 VPN on the PE switch:

1. Configure BGP, specifying the loopback address as the local address and specifying **family inet-vpn unicast**:  

```
[edit protocols bgp]
user@switch# set local-address address family inet-vpn unicast
```
2. Configure the BGP group, specifying the group name and **type internal**:  

```
[edit protocols bgp]
user@switch# set group group-name type internal
```
3. Configure the BGP neighbor, specifying the loopback address of the remote PE switch as the neighbor's address:  

```
[edit protocols bgp]
```

```
user@switch# set neighbor address
```

4. Configure the routing instance, specifying the routing-instance name and using **vrf** as the instance type:

```
[edit]
```

```
user@switch# set routing-instances routing-instance-name instance-type vrf
```

5. Configure a description for this routing instance:

```
[edit]
```

```
user@switch# set routing-instances routing-instance-name description text
```

6. Configure the routing instance to use a route distinguisher:



**NOTE:** Each routing instance that you configure on a PE switch must have a unique route distinguisher associated with it. VPN routing instances must have a route distinguisher to allow BGP to distinguish between potentially identical network layer reachability information (NLRI) messages received from different VPNs. If you configure different VPN routing instances with the same route distinguisher, the commit fails.

```
user@switch# set routing-instances routing-instance-name route-distinguisher ip-address:number
```

7. Configure the VPN routing and forwarding (VRF) target of the routing instance:

```
[edit routing-instances]
```

```
user@switch# set routing-instance-name vrf-target community
```



**NOTE:** If you configure the *community* option only, default VRF import and export policies are generated that accept and tag routes with the specified target community. You can create more complex policies by explicitly configuring VRF import and export policies using the import and export options. See the *Junos OS VPNs Configuration Guide*.

8. Configure this routing instance with **vrf-table-label**, which maps the inner label of a packet to a specific VPN routing and forwarding (VRF) table and allows the examination of the encapsulated IP header.

```
[edit routing-instances]
```

```
user@switch# set routing-instance-name vrf-table-label
```

9. (Optional) Configure the routing options:



**NOTE:** We recommend that you configure the router identifier under the **[edit routing-options]** hierarchy level to avoid unpredictable behavior if the interface address on a loopback interface changes.

```
[edit routing-options]
```

```
user@switch# set router-id ip-address autonomous-system as-number
```

#### Related Documentation

- [Example: Configuring MPLS-Based Layer 2 VPNs on page 63](#)
- [Configuring an MPLS-Based Layer 2 VPN \(CLI Procedure\) on page 96](#)

- [Understanding Using MPLS-Based Layer 2 and Layer 3 VPNs on EX Series Switches on page 20](#)

## Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN (CLI Procedure)

You can use configure an 802.1Q VLAN as an MPLS-based Layer 2 virtual private network (VPN) using EX8200 and EX4500 switches to interconnect multiple customer sites with Layer 2 technology.

This topic describes configuring provider edge (PE) switches in an MPLS network using a circuit cross-connect (CCC) on a tagged VLAN interface (802.1Q VLAN) rather than a simple interface.



**NOTE:** You do not need to make any changes to existing provider switches in your MPLS network to support this type of configuration. For information on configuring provider switches, see [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)” on page 78](#).



**NOTE:** You can send any kind of traffic over a CCC, including nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment.

To configure a PE switch with a VLAN CCC and an MPLS-based Layer 2 VPN:

1. Configure OSPF (or IS-IS) on the loopback (or switch address) and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
```

2. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
```

4. Enable the MPLS protocol with **cspf** disabled:



**NOTE:** CSPF is a shortest-path-first algorithm that has been modified to take into account specific restrictions when the shortest path across the network is calculated. You need to disable CSPF for link protection to function properly on interarea paths.

```
[edit protocols]
```

```
user@switch# set mpls no-cspf
```

5. Define the label switched path (LSP):

```
[edit protocols]
```

```
user@switch# set mpls label-switched-path lsp_name to address
```



**TIP:** You will need to use the specified LSP name again when configuring the CCC.

6. Configure MPLS on the core interfaces:

```
[edit protocols]
```

```
user@switch# set mpls interface interface-name
```

```
user@switch# set mpls interface interface-name
```

```
user@switch# set mpls interface interface-name
```

7. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
```

```
user@switch# set rsvp interface lo0.0
```

```
user@switch# set rsvp interface interface-name
```

```
user@switch# set rsvp interface interface-name
```

```
user@switch# set rsvp interface interface-name
```

8. Configure **family mpls** on the logical units of the core interfaces:

```
[edit]
```

```
user@switch# set interfaces interface-name unit logical-unit-number family mpls
```

```
user@switch# set interfaces interface-name unit logical-unit-number family mpls
```

```
user@switch# set interfaces interface-name unit logical-unit-number family mpls
```



**NOTE:** You can enable **family mpls** on either individual interfaces or aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

9. Enable VLAN tagging on the customer edge interface of the local PE switch:

```
[edit]
```

```
user@switch# set interfaces interface-name vlan-tagging
```

10. Configure the customer edge interface to use encapsulation **vlan-ccc**:

```
[edit]
```

```
user@switch# set interfaces interface-name encapsulation vlan-ccc
```

11. Configure the logical unit of the customer edge interface with a VLAN ID:





**NOTE:** The VLAN ID cannot be configured on logical interface unit 0. The logical unit number must be 1 or higher.

The same VLAN ID must be used when configuring the customer edge interface on the other PE switch.

[edit ]

user@switch# **set interfaces** *interface-name* *logical-unit-number* *vlan-id* *vlan-id*

12. Configure BGP, specifying the loopback address as the local address and enabling family l2vpn signaling:

[edit protocols bgp]

user@switchPE1# **set local-address** *address* **family** l2vpn signaling

13. Configure the BGP group, specifying the group name and type:

[edit protocols bgp]

user@switchPE1# **set group** *ibgp* **type** internal

14. Configure the BGP neighbor, specifying the loopback address of the remote PE switch as the neighbor's address:

[edit protocols bgp]

user@switchPE1# **set neighbor** *address*

15. Configure the routing instance, specifying the routing-instance name and using l2vpn as the instance type:

[edit routing-instances]

user@switchPE1# **set routing-instance-name** *instance-name* *instance-type* l2vpn

16. Configure the routing instance to apply to the customer edge interface:

[edit routing-instances]

user@switchPE1# **set routing-instance-name** *interface* *interface-name*

17. Configure the routing instance to use a route distinguisher:

[edit routing-instances]

user@switchPE1# **set routing-instance-name** *route-distinguisher* *address*

18. Configure the VPN routing and forwarding (VRF) target of the routing instance:

[edit routing-instances]

user@switchPE1# **set routing-instance-name** *vrf-target* *community*



**NOTE:** You can create more complex policies by explicitly configuring VRF import and export policies using the import and export options. See the [Junos OS VPNs Configuration Guide](#).

19. Configure the protocols and encapsulation type used by the routing instance:

[edit routing-instances]

user@switchPE1# **set routing-instance-name** *protocols* *l2vpn* *encapsulation-type* ethernet-vlan

20. Apply the routing instance to a customer edge interface and specify a description for it:

[edit routing-instances]

user@switchPE1# **set routing-instance-name** *protocols* *interface* *interface-name* *description* *description*

21. Configure the routing-instance protocols site:

```
[edit routing-instances]
user@switchPE1# set routing-instance-name protocols l2vpn site site-name site-identifier
identifier remote-site-id identifier
```



**NOTE:** The remote site ID (configured with the `remote-site-id` statement) corresponds to the site ID (configured with the `site-identifier` statement) configured on the other PE switch.

When you have completed configuring one PE switch, follow the same procedures to configure the other PE switch.



**NOTE:** You must use the same type of switch for the other PE switch. You cannot use an EX8200 as one PE switch and use an EX3200 or EX4200 as the other PE switch.

#### Related Documentation

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Example: Configuring MPLS-Based Layer 2 VPNs on page 63](#)
- [Verifying That MPLS Is Working Correctly on page 179](#)
- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)

## Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit (CLI Procedure)

You can use configure an 802.1Q VLAN as an MPLS-based Layer 2 circuit using EX8200 and EX4500 switches to interconnect multiple customer sites with Layer 2 technology.

This topic describes configuring provider edge (PE) switches in an MPLS network using a circuit cross-connect (CCC) on a tagged VLAN interface (802.1Q VLAN) rather than a simple interface.



**NOTE:** You do not need to make any changes to existing provider switches in your MPLS network to support this type of configuration. For information on configuring provider switches, see [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)” on page 78](#).



**NOTE:** You can send any kind of traffic over a CCC, including nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment.

To configure a PE switch with a VLAN CCC and an MPLS-based Layer 2 circuit:

1. Configure OSPF (or IS-IS) on the loopback (or switch address) and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
```

2. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
```

4. Enable the MPLS protocol with CSPF disabled:



**NOTE:** CSPF is a shortest-path-first algorithm that has been modified to take into account specific restrictions when the shortest path across the network is calculated. You need to disable CSPF for link protection to function properly on interarea paths.

```
[edit protocols]
user@switch# set mpls no-cspf
```

5. Configure the customer edge interface as a Layer 2 circuit from the local PE switch to the other PE switch:

```
[edit protocols]
user@switch# set l2circuit neighbor address interface interface-name virtual-circuit-id identifier
```



**TIP:** Use the switch address of the other switch as the neighbor address.

6. Configure MPLS on the core interfaces:

```
[edit protocols]
user@switch# set mpls interface interface-name
user@switch# set mpls interface interface-name
user@switch# set mpls interface interface-name
```

7. Configure LDP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set ldp interface lo0.0
user@switch# set ldp interface interface-name
user@switch# set ldp interface interface-name
user@switch# set ldp interface interface-name
```

8. Configure **family mpls** on the logical units of the core interfaces:

```
[edit]
user@switch# set interfaces interface-name unit logical-unit-number family mpls
user@switch# set interfaces interface-name unit logical-unit-number family mpls
```

```
user@switch# set interfaces interface-name unit logical-unit-number family mpls
```



**NOTE:** You can enable **family mpls** on either individual interfaces or aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

9. Enable VLAN tagging on the customer edge interface of the local PE switch:

```
[edit]
```

```
user@switch# set interfaces interface-name vlan-tagging
```

10. Configure the customer edge interface to use VLAN CCC encapsulation:

```
[edit]
```

```
user@switch# set interfaces interface-name encapsulation vlan-ccc
```

11. Configure the logical unit of the customer edge interface with a VLAN ID:



**NOTE:** The VLAN ID cannot be configured on logical interface unit 0. The logical unit number must be 1 or higher.

The same VLAN ID must be used when configuring the customer edge interface on the other PE switch.

```
[edit]
```

```
user@switch# set interfaces interface-name logical-unit-number vlan-id vlan-id
```

When you have completed configuring one PE switch, follow the same procedures to configure the other PE switch.



**NOTE:** You must use the same type of switch for the other PE switch. You cannot use an EX8200 as one PE switch and use an EX3200 or EX4200 as the other PE switch.

#### Related Documentation

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Example: Configuring MPLS-Based Layer 2 VPNs on page 63](#)
- [Verifying That MPLS Is Working Correctly on page 179](#)
- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)

## Configuring an MPLS-Based VLAN CCC Using the Connection Method (CLI Procedure)

You can configure an 802.1Q VLAN as an MPLS-based connection using EX8200 and EX4500 switches to interconnect multiple customer sites with Layer 2 technology.

This topic describes configuring provider edge (PE) switches in an MPLS network using a circuit cross-connect (CCC) on a tagged VLAN interface (802.1Q VLAN) rather than a simple interface.



**NOTE:** You do not need to make any changes to existing provider switches in your MPLS network to support this type of configuration. For information on configuring provider switches, see [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)”](#) on page 78.



**NOTE:** You can send any kind of traffic over a CCC, including nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment.

To configure a PE switch with a VLAN CCC and an MPLS-based connections:

1. Configure OSPF (or IS-IS) on the loopback (or switch address) and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
```

2. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
```

4. Enable the MPLS protocol with **cspf** disabled:



**NOTE:** CSPF is a shortest-path-first algorithm that has been modified to take into account specific restrictions when the shortest path across the network is calculated. You need to disable CSPF for link protection to function properly on interarea paths.

```
[edit protocols]
user@switch# set mpls no-cspf
```

5. Enable VLAN tagging on the customer edge interface of the local PE switch:

```
[edit]
user@switch# set interfaces interface-name vlan-tagging
```

6. Configure the customer edge interface to use encapsulation `vlan-ccc`:

```
[edit]
user@switch# set interfaces interface-name encapsulation vlan-ccc
```

7. Configure the logical unit of the customer edge interface with a VLAN ID:



**NOTE:** The VLAN ID cannot be configured on logical interface unit 0.

The same VLAN ID must be used when configuring the customer edge interface on the other PE switch.

```
[edit]
user@switch# set interfaces interface-name logical-unit-number vlan-id vlan-id
```

8. Define the label switched path (LSP):

```
[edit protocols]
user@switch# set mpls label-switched-path lsp-name from address
user@switch# set mpls label-switched-path lsp-name to address
```



**TIP:** You will need to use the specified LSP name again when configuring the CCC.

9. Configure the connection between the two circuits in the CCC connection

```
[edit protocols]
user@switch# set connections remote-interface-switch interface-switch interface
local-interface
user@switch# set connections remote-interface-switch interface-switch transmit-lsp
destination-lsp
user@switch# set connections remote-interface-switch interface-switch receive-lsp source-lsp
```

#### Related Documentation

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Example: Configuring MPLS-Based Layer 2 VPNs on page 63](#)
- [Verifying That MPLS Is Working Correctly on page 179](#)
- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)

## Configuring IPv6 Tunneling for MPLS (CLI Procedure)

You can configure the IPv6 tunneling for MPLS to tunnel IPv6 traffic over an MPLS-based IPv4 network. This configuration allows you to interconnect a number of smaller IPv6 networks over an IPv4-based network core, giving you the ability to provide IPv6 service without having to upgrade the switches in your core network. BGP is configured to exchange routes between the IPv6 networks, and data is tunneled between these IPv6 networks by means of IPv4-based MPLS.

To configure IPv6 tunneling for MPLS on your EX Series switch:

1. Configure IPv4 and IPv6 IP addresses for all the core interfaces:

```
[edit]
user@switch# set interfaces interface-name unit logical-unit-number family inet address
address
```

2. Configure the number assigned to you by the Network Information Center (NIC) as the autonomous system (AS) number

```
[edit routing-options]
user@switch# set autonomous-system number
```

3. Advertise label 0 to the egress router of the LSP:

```
[edit protocols]
user@switch# set mpls explicit-null
```

4. Configure the LSP to allow IPv6 routes to be resolved over an MPLS network by converting all routes stored in the inet3 routing table to IPv4-mapped IPv6 addresses and then copying them into the inet6.3 routing table:

```
[edit protocols]
user@switch# set mpls ipv6-tunneling
```

5. Set the local AS number:

```
[edit protocols bgp]
user@switch# set local-as local-autonomous-system-number
```

6. Configure the default import and export policies:

```
[edit protocols bgp]
user@switch# set local-address address
user@switch# set import default-import
user@switch# set family inet6 labeled-unicast explicit-null
user@switch# set export default-export
```

7. Configure a BGP group that recognizes only the specified BGP systems as peers. Define a group name, group type, local end of a BGP session, and a neighbor (peer). To configure multiple BGP peers, include multiple neighbor statements:

```
[edit protocols bgp]
user@switch# set group group-name type internal
user@switch# set group group-name local-address address-of-the-local-end-of-a-bgp-session
user@switch# set group group-name family inet6 labeled-unicast explicit-null
user@switch# set group group-name peer-as peer-autonomous-system-number
user@switch# set group group-name neighbor address family inet6 labeled-unicast explicit-null
```

8. Configure routing options to accept the default import and export policies:

```
[edit policy-options]
user@switch# set policy-statement default-import then accept
user@switch# set policy-statement default-export then accept
```

#### Related Documentation

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Verifying That MPLS Is Working Correctly on page 179](#)
- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)

## Configuring Static Label Switched Paths for MPLS (CLI Procedure)

---

Configuring static label-switched paths (LSPs) for MPLS is similar to configuring static routes on individual switches. As with static routes, there is no error reporting, liveliness detection, or statistics reporting.

To configure static LSPs, configure the ingress switch and each provider switch along the path up to and including the egress switch.

For the ingress switch, configure which packets to tag (based on the packet's destination IP address), configure the next switch in the LSP, and the tag to apply to the packet. Manually assigned labels can have values from 0 through 1,048,575. Optionally, you can apply preference, class-of-service (CoS) values, node protection, and link protection to the packets.

For the transit switches in the path, configure the next switch in the path and the tag to apply to the packet. Manually assigned labels can have values from 1,000,000 through 1,048,575. Optionally, you can apply node protection and link protection to the packets.

For the egress switch, you generally just remove the label and continue forwarding the packet to the IP destination. However, if the previous switch removed the label, the egress switch examines the packet's IP header and forwards the packet toward its IP destination.

Before you configure an LSP, you must configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\)” on page 87](#).
- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)” on page 78](#).

This topic describes how to configure an ingress PE switch, one or more provider switches, and an egress PE switch for static LSP:

1. [Configuring the Ingress PE Switch on page 110](#)
2. [Configuring the Provider and the Egress PE Switch on page 111](#)

### Configuring the Ingress PE Switch

To configure the ingress PE switch:

1. Configure an IP address for the core interfaces:

```
[edit]
user@switch# set interfaces interface-name unit logical-unit-number family inet address
address
user@switch# set interfaces interface-name unit logical-unit-number family inet address
address
```

2. Configure the name and the traffic rate associated with the LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name ingress bandwidth
rate
```



3. Configure the next hop switch for the LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name ingress next-hop
address-of-next-hop
```

4. Enable link protection on the specified static LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name ingress link-protection
bypass-name name
```

5. Specify the address of the egress switch for the LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path path1 ingress to
address-of-egress-switch
```

6. Configure the new label that you want to add to the top of the label stack:

```
[edit]
user@switch# set protocols mpls static-label-switched-path path1 ingress push out-label
```

7. Optionally, configure the next hop address and the egress router address that you want to bypass, for the static LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name by bypass next-hop
address-of-next-hop
user@switch# set protocols mpls static-label-switched-path lsp-name by bypass to
address-of-the-egress-switch
user@switch# set protocols mpls static-label-switched-path lsp-name bypass push out-label
```

## Configuring the Provider and the Egress PE Switch

To configure a static LSP for MPLS on the provider and egress provider edge switch:

1. Configure a transit static LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path path1 transit incoming-label
```

2. Configure the next hop switch for the LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name transit incoming-label
next-hop address-of-next-hop
```

3. Only for provider switches, remove the label at the top of the label stack and replace it with the specified label:

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name transit incoming-label
swap out-label
```

4. Only for the egress provider edge switch, remove the label at the top of the label stack:



**NOTE:** If there is another label in the stack, that label becomes the label at the top of the label stack. Otherwise, the packet is forwarded as a native protocol packet (typically, as an IP packet).

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name transit incoming-label
pop
```

- Related Documentation**
- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
  - [Verifying That MPLS Is Working Correctly on page 179](#)
  - [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)

---

## Configuring Bidirectional Forwarding Detection for MPLS (CLI Procedure)

You can configure the Bidirectional Forwarding Detection (BFD) protocol on EX8200 standalone switches and EX8200 Virtual Chassis to detect failures in the MPLS label-switch path (LSP). The BFD protocol is a simple hello mechanism that detects failures in a network. Hello packets are sent at a specified, regular interval. A neighbor failure is detected when the routing device stops receiving a reply from the neighbor after a specified interval. BFD works with a wide variety of network environments and topologies. The failure detection timers for BFD have shorter time limits than those of the failure detection mechanisms for static routes, and thus provide faster detection. These timers are also adaptive. For example, a timer can adapt to a higher value if an adjacency fails, or a neighbor can negotiate a higher value than the one configured.

This topic describes configuring the provider edge (PE) switches and the provider switches to support for LDP-based LSPs and RSVP-based LSPs.

This topic includes:

- [Configuring BFD on Provider Edge and Provider Switches for an LDP-Based LSP on page 112](#)
- [Configuring BFD on Provider Edge and Provider Switches for an RSVP-Based LSP on page 114](#)

### Configuring BFD on Provider Edge and Provider Switches for an LDP-Based LSP

You can enable BFD for the LDP-based LSPs or RSVP-based LSPs associated with a specific forwarding equivalence class (FEC). Alternatively, you can configure an Operation Administration and Maintenance (OAM) ingress policy to enable BFD on a range of FEC addresses.

Before you configure BFD for an LDP-based based LSP, you must configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\)” on page 83](#).
- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)” on page 78](#).

To configure BFD on PE and provider switches:

1. Define an OAM policy:

[edit]

```
user@switch# set protocols ldp oam ingress-policy policy-name
```

2. Specify the FEC on which you want to enable OAM:

```
[edit]
user@switch# set protocols ldp oam fec address
```

3. Specify the minimum transmit and receive interval for the BFD configuration:



**NOTE:** If you configure the minimum-interval statement, you do not need to configure the minimum-receive-interval statement or the minimum-transmit-interval statement.

```
[edit]
user@switch# set protocols ldp oam bfd-liveness-detection minimum-interval time
or
```

```
[edit]
user@switch# set protocols ldp oam bfd-liveness-detection minimum-receive-interval time
user@switch# set protocols ldp oam bfd-liveness-detection minimum-transmit-interval time
```

4. Specify the detection time multiplier. The negotiated transmit interval multiplied by this value gives the detection time for the receiving system in Asynchronous mode:

```
[edit]
user@switch# set protocols ldp oam bfd-liveness-detection multiplier multiplier
```

5. Specify the minimum transmit interval (or the minimum receive interval).

```
[edit]
user@switch# set protocols ldp oam bfd-liveness-detection transmit-interval minimum-interval time
```

6. Specify a threshold for detecting the adaptation of the detection time:

```
[edit]
user@switch# set protocols ldp oam bfd-liveness-detection detection-time threshold time
```

7. Configure route and next-hop action in the event of a BFD session failure event on the LDP-based LSP:

```
[edit]
user@switch# set protocols ldp oam bfd-liveness-detection failure-action action
```



**NOTE:** When a BFD session goes down, you can configure the Junos OS to resignal the LSP path or to simply disable the LSP path. You can configure a standby LSP path to handle traffic while the primary LSP path is unavailable. The switch can automatically recover from LSP failures that can be detected by BFD. By default, if a BFD session fails, the event is simply logged.

8. Specify how long the BFD session must be up before adding the route or next hop. Specifying a time of 0 seconds causes the route or next hop to be added as soon as the BFD session comes back up.

```
[edit]
user@switch# set protocols ldp oam bfd-liveness-detection holddown-interval time
```

9. Enable tracing of FECs for LDP-based LSPs and specify a source address for sending probes. Then, specify a wait interval, after which to send the probe packet.

```
[edit]
user@switch# set protocols ldp oam periodic-traceroute source address
user@switch# set protocols ldp oam periodic-traceroute wait time
```

10. Specify the duration of the LSP ping interval in seconds:

```
[edit]
user@switch# set protocols ldp oam lsp-ping-interval time
```

11. Specify the action to be taken for the OAM policy:

```
[edit]
user@switch# set policy-options policy-statement policy-name then accept
```

12. Apply the BFD configurations at the MPLS hierarchy level for the configuration to inherit the statements in the configuration group:

```
[edit]
user@switch# set apply-groups MPLS
```

## Configuring BFD on Provider Edge and Provider Switches for an RSVP-Based LSP

When BFD is configured for an RSVP-based LSP on the ingress switch, it is enabled on the primary path and on all standby secondary paths for that LSP. You can enable BFD for all LSPs on a switch or for specific LSPs. If you configure BFD for a specific LSP, whatever values configured globally for BFD are overridden on that LSP. The BFD sessions originate only at the ingress switch and terminate at the egress switch.

Before you configure BFD for an RSVP-based LSP, you must configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\)”](#) on page 83.
- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\)”](#) on page 78.

To configure BFD on PE and provider switches:

1. Specify the minimum transmit and receive interval for the BFD configuration:



**NOTE:** If you configure the `minimum-interval` statement, you do not need to configure the `minimum-receive-interval` statement or the `minimum-transmit-interval` statement.

```
[edit]
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection
minimum-interval time
or
```

```
[edit]
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection
minimum-receive-interval time
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection
minimum-transmit-interval time
```

2. Specify the detection time multiplier. The negotiated transmit interval multiplied by this value gives the detection time for the receiving system in Asynchronous mode:

```
[edit]
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection
multiplier multiplier
```

3. Specify the minimum transmit interval (or the minimum receive interval):

[edit]

```
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection
transmit-interval minimum-interval time
```

4. Configure route and next-hop actions in the event of a BFD session failure event on the RSVP-based LSP:

[edit]

```
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection
failure-action action
```



**NOTE:** When a BFD session goes down, you can configure the Junos OS to resignal the LSP path or to simply disable the LSP path. You can configure a standby LSP path to handle traffic while the primary LSP path is unavailable. The switch can automatically recover from LSP failures that can be detected by BFD. By default, if a BFD session fails, the event is simply logged if you do not specifically configure a failure action.

#### Related Documentation

- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
- [Verifying That MPLS Is Working Correctly on page 179](#)
- [Understanding Junos OS MPLS Components for EX Series Switches on page 5](#)



## CHAPTER 4

# Configuration Statements

- [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 118](#)
- [\[edit protocols\] Configuration Statement Hierarchy on EX Series Switches on page 119](#)
- [\[edit protocols mpls\] Configuration Statement Hierarchy on EX Series Switches on page 120](#)
- [bfd-liveness-detection \(Protocols MPLS\) on page 132](#)
- [connections \(MPLS\) on page 133](#)
- [description \(Protocols Layer 2 VPN\) on page 133](#)
- [encapsulation \(Physical Interface\) on page 134](#)
- [encapsulation-type \(Layer 2 VPNs\) on page 139](#)
- [exp on page 141](#)
- [fec on page 142](#)
- [instance-type on page 144](#)
- [interface \(MPLS\) on page 146](#)
- [l2circuit on page 147](#)
- [l2vpn on page 149](#)
- [label-switched-path on page 151](#)
- [ldp on page 152](#)
- [mpls on page 155](#)
- [neighbor \(Protocols Layer 2 Circuit\) on page 158](#)
- [path on page 160](#)
- [periodic-traceroute on page 161](#)
- [policing on page 163](#)
- [primary on page 163](#)
- [remote-interface-switch on page 164](#)
- [remote-site-id on page 165](#)
- [revert-timer on page 166](#)
- [route-distinguisher on page 167](#)
- [rsvp on page 169](#)

- [secondary](#) on page 170
- [signaling](#) on page 171
- [site \(Layer 2 Circuits\)](#) on page 172
- [site-identifier \(Layer 2 Circuits\)](#) on page 173
- [standby](#) on page 173
- [traffic-engineering](#) on page 174
- [vrf-table-label](#) on page 175
- [vrf-target](#) on page 176

## **[edit interfaces] Configuration Statement Hierarchy on EX Series Switches**

---

Each of the following topics lists the statements at a subhierarchy of the **[edit interfaces]** hierarchy:

- [\[edit interfaces ae\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit interfaces ge\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit interfaces gr\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit interfaces interface-range\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit interfaces lo\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit interfaces me\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit interfaces vlan\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit interfaces vme\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit interfaces xe\] Configuration Statement Hierarchy on EX Series Switches](#)

### **Related Documentation**

- [EX Series Switches Interfaces Overview](#)
- [Configuring Aggregated Ethernet Links \(CLI Procedure\)](#)
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\)](#)
- [Configuring a Layer 3 Subinterface \(CLI Procedure\)](#)
- [Configuring Routed VLAN Interfaces \(CLI Procedure\)](#)
- [Configuring the Virtual Management Ethernet Interface for Global Management of an EX Series Virtual Chassis \(CLI Procedure\)](#)
- [Junos OS Interfaces Fundamentals Configuration Guide](#)
- [Junos OS Ethernet Interfaces Configuration Guide](#)



## **[edit protocols]** Configuration Statement Hierarchy on EX Series Switches

---

Each of the following topics lists the statements at a subhierarchy of the **[edit protocols]** hierarchy:

- *[edit protocols bfd] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols bgp] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols connections] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols dcbx] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols dot1x] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols igmp] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols igmp-snooping] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols isis] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols lacp] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols link-management] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols lldp] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols lldp-med] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols mld] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols mld-snooping] Configuration Statement Hierarchy on EX Series Switches*
- [\[edit protocols mpls\] Configuration Statement Hierarchy on EX Series Switches on page 120](#)
- *[edit protocols msdp] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols mstp] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols mvrp] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols neighbor-discovery] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols oam] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols ospf] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols ospf3] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols pim] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols rip] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols ripng] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols router-advertisement] Configuration Statement Hierarchy on EX Series Switches*
- *[edit protocols router-discovery] Configuration Statement Hierarchy on EX Series Switches*

- [\[edit protocols rstp\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit protocols rsvp\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit protocols sflow\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit protocols stp\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit protocols uplink-failure-detection\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit protocols vrrp\] Configuration Statement Hierarchy on EX Series Switches](#)
- [\[edit protocols vstp\] Configuration Statement Hierarchy on EX Series Switches](#)

**Related  
Documentation**

- [EX Series Switch Software Features Overview](#)
- [EX Series Virtual Chassis Software Features Overview](#)

---

## [\[edit protocols mpls\] Configuration Statement Hierarchy on EX Series Switches](#)

This topic lists supported and unsupported configuration statements in the [\[edit protocols mpls\]](#) hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [EX Series Switch Software Features Overview](#).

This topic lists:

- [Supported Statements in the \[edit protocols mpls\] Hierarchy Level on page 120](#)
- [Unsupported Statements in the \[edit protocols mpls\] Hierarchy Level on page 121](#)

### Supported Statements in the [\[edit protocols mpls\] Hierarchy Level](#)

The following hierarchy shows the [\[edit protocols mpls\]](#) configuration statements supported on EX Series switches:

```
protocols {
 mpls {
 class-of-service cos-value;
 disable;
 explicit-null;
 interface (interface-name | all) {
 disable;
 }
 ipv6-tunneling ;
 label-switched-path lsp-name {
 description text-string; }
 }
}
```

```

disable;
exclude-slrg;
from address;
ldp-tunneling;
no-cspf;
no-decrement-ttl;
oam {
 bfd-liveness-detection {
 detection-time {
 threshold milliseconds;
 }
 failure-action (make-before-break <teardown-timeout seconds> | teardown);
 minimum-interval milliseconds;
 minimum-receive-interval milliseconds;
 multiplier number;
 no-adaptation;
 transmit-interval {
 minimum-interval milliseconds;
 threshold milliseconds;
 }
 version (1 | automatic);
 }
}
to address;
}
no-cspf;
no-decrement-ttl;
no-propagate-ttl;
static-label-switched-path lsp-name {
 ingress {
 install {
 destination-prefix <active>;
 }
 next-hop (address | interface-name | address/interface-name);
 push out-label;
 to address;
 }
 transit incoming-label {
 description text-string;
 next-hop (address | interface-name | address/interface-name);
 pop;
 swap out-label;
 }
 traffic-engineering (bgp | bgp-igp | bgp-igp-both-ribs | mpls-forwarding);
}
}

```

### Unsupported Statements in the [edit protocols mpls] Hierarchy Level

All statements in the [edit protocols mpls] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:

Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches

| Statement                                                                                               | Hierarchy                                                                                                                                                                                                         |
|---------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>NOTE:</b> Variables, such as <i>interface-name</i> , are not shown in the statements or hierarchies. |                                                                                                                                                                                                                   |
| active                                                                                                  | [edit protocols mpls static-label-switched-path ingress install]<br>[edit protocols mpls label-switched-path install]                                                                                             |
| adaptive                                                                                                | [edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]                                                             |
| adjust-interval                                                                                         | [edit protocols mpls label-switched-path auto-bandwidth]                                                                                                                                                          |
| adjust-threshold                                                                                        | [edit protocols mpls label-switched-path auto-bandwidth]                                                                                                                                                          |
| adjust-threshold-overflow-limit                                                                         | [edit protocols mpls label-switched-path auto-bandwidth]                                                                                                                                                          |
| adjust-threshold-underflow-limit                                                                        | [edit protocols mpls label-switched-path auto-bandwidth]                                                                                                                                                          |
| admin-down                                                                                              | [edit protocols mpls]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]                                    |
| admin-group                                                                                             | [edit protocols mpls]<br>[edit protocols mpls interface]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary] |
| admin-group-extended                                                                                    | [edit protocols mpls]<br>[edit protocols mpls interface]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary] |
| admin-groups                                                                                            | [edit protocols mpls]                                                                                                                                                                                             |
| advertisement-hold-time                                                                                 | [edit protocols mpls]                                                                                                                                                                                             |
| allow-fragmentation                                                                                     | [edit protocols mpls path-mtu]                                                                                                                                                                                    |
| always-mark-connection-protection-tlv                                                                   | [edit protocols mpls interface]                                                                                                                                                                                   |
| associate-backup-pe-groups                                                                              | [edit protocols mpls label-switched-path]                                                                                                                                                                         |
| auto-bandwidth                                                                                          | [edit protocols mpls label-switched-path]<br><br>[edit protocols mpls statistics]                                                                                                                                 |
| auto-policing                                                                                           | [edit protocols mpls]                                                                                                                                                                                             |

Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches (*continued*)

| Statement              | Hierarchy                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| backup                 | [edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                                                                                                                                                                      |
| bandwidth              | [edit protocols mpls]<br>[edit protocols mpls bandwidth]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls static-label-switched-path bypass]<br>[edit protocols mpls label-switched-path fast-reroute]<br>[edit protocols mpls static-label-switched-path ingress]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]<br>[edit protocols mpls static-label-switched-path transit] |
| bandwidth-model        | [edit protocols mpls diffserv-te]                                                                                                                                                                                                                                                                                                                                                                                                                              |
| bandwidth-percent      | [edit protocols mpls label-switched-path fast-reroute]                                                                                                                                                                                                                                                                                                                                                                                                         |
| bfd-liveness-detection | [edit protocols mpls label-switched-path primary oam]<br>[edit protocols mpls label-switched-path secondary oam]<br>[edit protocols mpls oam]                                                                                                                                                                                                                                                                                                                  |
| bypass                 | [edit protocols mpls static-label-switched-path]                                                                                                                                                                                                                                                                                                                                                                                                               |
| bypass-name            | [edit protocols mpls static-label-switched-path ingress link-protection]<br>[edit protocols mpls static-label-switched-path ingress node-protection]<br>[edit protocols mpls static-label-switched-path transit link-protection]<br>[edit protocols mpls static-label-switched-path transit node-protection]                                                                                                                                                   |
| class                  | [edit protocols mpls auto-policing]                                                                                                                                                                                                                                                                                                                                                                                                                            |
| class-of-service       | [edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]<br>[edit protocols mpls static-label-switched-path ingress]                                                                                                                                                                                                                                              |
| context-identifier     | [edit protocols mpls egress-protection]                                                                                                                                                                                                                                                                                                                                                                                                                        |
| ct0                    | [edit protocols mpls bandwidth]<br>[edit protocols mpls label-switched-path bandwidth]<br>[edit protocols mpls label-switched-path primary bandwidth]<br>[edit protocols mpls label-switched-path secondary bandwidth]                                                                                                                                                                                                                                         |
| ct1                    | [edit protocols mpls bandwidth]<br>[edit protocols mpls label-switched-path bandwidth]<br>[edit protocols mpls label-switched-path primary bandwidth]<br>[edit protocols mpls label-switched-path secondary bandwidth]                                                                                                                                                                                                                                         |

Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches (*continued*)

| Statement         | Hierarchy                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ct2               | [edit protocols mpls bandwidth]<br>[edit protocols mpls label-switched-path bandwidth]<br>[edit protocols mpls label-switched-path primary bandwidth]<br>[edit protocols mpls label-switched-path secondary bandwidth]                                                                                                                                                                                                                                                                                                       |
| ct3               | [edit protocols mpls bandwidth]<br>[edit protocols mpls label-switched-path bandwidth]<br>[edit protocols mpls label-switched-path primary bandwidth]<br>[edit protocols mpls label-switched-path secondary bandwidth]                                                                                                                                                                                                                                                                                                       |
| description       | [edit protocols mpls static-label-switched-path bypass]<br>[edit protocols mpls static-label-switched-path ingress]                                                                                                                                                                                                                                                                                                                                                                                                          |
| detection-time    | [edit protocols mpls label-switched-path primary oam<br>bfd-liveness-detection]<br>[edit protocols mpls label-switched-path secondary oam<br>bfd-liveness-detection]                                                                                                                                                                                                                                                                                                                                                         |
| diffserv-te       | [edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| drop              | [edit protocols mpls auto-policing class]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| egress-protection | [edit protocols mpls]<br>[edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| encoding-type     | [edit protocols mpls label-switched-path lsp-attributes]                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| exclude           | [edit protocols mpls admin-group]<br>[edit protocols mpls label-switched-path admin-group]<br>[edit protocols mpls label-switched-path<br>admin-group-extended]<br>[edit protocols mpls label-switched-path primary admin-group]<br>[edit protocols mpls label-switched-path primary<br>admin-group-extended]<br>[edit protocols mpls label-switched-path secondary<br>admin-group]<br>[edit protocols mpls label-switched-path secondary<br>admin-group-extended]<br>[edit protocols mpls label-switched-path fast-reroute] |
| exclude-slrq      | [edit protocols mpls]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]                                                                                                                                                                                                                                                                                                                                               |
| expand-loose-hop  | [edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches (*continued*)

| Statement      | Hierarchy                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| failure-action | [edit protocols mpls label-switched-path primary oam bfd-liveness-detection]<br>[edit protocols mpls label-switched-path secondary oam bfd-liveness-detection]                                                                                                                                                                                                                                                                                                                                                                                                 |
| fast-reroute   | [edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| file           | [edit protocols mpls label-switched-path primary oam traceoptions]<br>[edit protocols mpls label-switched-path secondary oam traceoptions]<br>[edit protocols mpls label-switched-path traceoptions]<br>[edit protocols mpls statistics]<br>[edit protocols mpls traceoptions]                                                                                                                                                                                                                                                                                 |
| files          | [edit protocols mpls statistics file]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| filter         | [edit protocols mpls static-label-switched-path ingress policing]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| flag           | [edit protocols mpls label-switched-path primary oam traceoptions]<br>[edit protocols mpls label-switched-path secondary oam traceoptions]<br>[edit protocols mpls label-switched-path traceoptions]<br>[edit protocols mpls traceoptions]                                                                                                                                                                                                                                                                                                                     |
| gpid           | [edit protocols mpls label-switched-path lsp-attributes]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| hop-limit      | [edit protocols mpls]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]<br>[edit protocols mpls label-switched-path fast-reroute]<br>[edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                                                                       |
| icmp-tunneling | [edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| include-all    | [edit protocols mpls admin-group]<br>[edit protocols mpls admin-group-extended]<br>[edit protocols mpls label-switched-path admin-group]<br>[edit protocols mpls label-switched-path admin-group-extended]<br>[edit protocols mpls label-switched-path fast-reroute]<br>[edit protocols mpls label-switched-path primary admin-group]<br>[edit protocols mpls label-switched-path primary admin-group-extended]<br>[edit protocols mpls label-switched-path secondary admin-group]<br>[edit protocols mpls label-switched-path secondary admin-group-extended] |

Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches (*continued*)

| Statement          | Hierarchy                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| include-any        | [edit protocols mpls admin-group]<br>[edit protocols mpls admin-group-extended]<br>[edit protocols mpls label-switched-path admin-group]<br>[edit protocols mpls label-switched-path admin-group-extended]<br>[edit protocols mpls label-switched-path fast-reroute]<br>[edit protocols mpls label-switched-path primary admin-group]<br>[edit protocols mpls label-switched-path primary admin-group-extended]<br>[edit protocols mpls label-switched-path secondary admin-group]<br>[edit protocols mpls label-switched-path secondary admin-group-extended] |
| install            | [edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| inter-domain       | [edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| interval           | [edit protocols mpls statistics]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| least-fill         | [edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| link-protection    | [edit protocols mpls label-switched-path]<br>[edit protocols mpls static-label-switched-path ingress]<br>[edit protocols mpls static-label-switched-path transit]                                                                                                                                                                                                                                                                                                                                                                                              |
| log-updown         | [edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| loss-priority-high | [edit protocols mpls auto-policing class]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| loss-priority-low  | [edit protocols mpls auto-policing class]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| lsp-attributes     | [edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| make-before-break  | [edit protocols mpls label-switched-path secondary oam bfd-liveness-detection failure-action]                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| maximum-bandwidth  | [edit protocols mpls label-switched-path auto-bandwidth]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| metric             | [edit protocols mpls egress-protection context-identifier]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls static-label-switched-path ingress]                                                                                                                                                                                                                                                                                                                                                                                            |
| mib-mpls-show-p2mp | [edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| minimum-bandwidth  | [edit protocols mpls label-switched-path auto-bandwidth]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |



Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches (*continued*)

| Statement                | Hierarchy                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| minimum-interval         | [edit protocols mpls label-switched-path primary oam bfd-liveness-detection]<br>[edit protocols mpls label-switched-path primary oam bfd-liveness-detection transit-interval]<br>[edit protocols mpls label-switched-path secondary oam bfd-liveness-detection]<br>[edit protocols mpls label-switched-path secondary oam bfd-liveness-detection transit-interval] |
| minimum-receive-interval | [edit protocols mpls label-switched-path primary oam bfd-liveness-detection]<br>[edit protocols mpls label-switched-path secondary oam bfd-liveness-detection]                                                                                                                                                                                                     |
| monitor-bandwidth        | [edit protocols mpls label-switched-path auto-bandwidth]                                                                                                                                                                                                                                                                                                           |
| most-fill                | [edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                                                                          |
| mpls-lsp-traps           | [edit protocols mpls log-updown no-trap]                                                                                                                                                                                                                                                                                                                           |
| mpls-tp-mode             | [edit protocols mpls oam]                                                                                                                                                                                                                                                                                                                                          |
| mtu-signaling            | [edit protocols mpls path-mtu rsvp]                                                                                                                                                                                                                                                                                                                                |
| multiplier               | [edit protocols mpls label-switched-path primary oam bfd-liveness-detection]<br>[edit protocols mpls label-switched-path secondary oam bfd-liveness-detection]                                                                                                                                                                                                     |
| next-hop                 | [edit protocols mpls path]<br>[edit protocols mpls static-label-switched-path bypass]                                                                                                                                                                                                                                                                              |
| next-next-label          | [edit protocols mpls static-label-switched-path ingress node-protection]<br>[edit protocols mpls static-label-switched-path transit node-protection]                                                                                                                                                                                                               |
| no-adaptation            | [edit protocols mpls label-switched-path primary oam bfd-liveness-detection]<br>[edit protocols mpls label-switched-path secondary oam bfd-liveness-detection]                                                                                                                                                                                                     |
| no-auto-policing         | [edit protocols mpls static-label-switched-path ingress policing]                                                                                                                                                                                                                                                                                                  |
| no-cspf                  | [edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]                                                                                                                                                                                                                                                           |
| no-decrement-ttl         | [edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]                                                                                                                                                                                                                                                           |

Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches (*continued*)

| Statement                 | Hierarchy                                                                                                                                                                      |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| node-link-protection      | [edit protocols mpls label-switched-path]                                                                                                                                      |
| node-protection           | [edit protocols mpls static-label-switched-path ingress]<br>[edit protocols mpls static-label-switched-path transit]                                                           |
| no-exclude                | [edit protocols mpls label-switched-path fast-reroute]                                                                                                                         |
| no-include-all            | [edit protocols mpls label-switched-path fast-reroute]                                                                                                                         |
| no-include-any            | [edit protocols mpls label-switched-path fast-reroute]                                                                                                                         |
| no-install-to-address     | [edit protocols mpls label-switched-path]<br>[edit protocols mpls static-label-switched-path ingress]                                                                          |
| no-record                 | [edit protocols mpls]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary] |
| no-remote-trace           | [edit protocols mpls label-switched-path oam traceoptions]<br>[edit protocols mpls label-switched-path secondary oam traceoptions]                                             |
| no-syslog                 | [edit protocols mpls log-updown]                                                                                                                                               |
| no-trap                   | [edit protocols mpls log-updown]                                                                                                                                               |
| no-world-readable         | [edit protocols mpls statistics file]                                                                                                                                          |
| number                    | [edit protocols mpls auto-policing class]                                                                                                                                      |
| oam                       | [edit protocols mpls]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]                                              |
| optimize-aggressive       | [edit protocols mpls]                                                                                                                                                          |
| optimize-hold-dead-delay  | [edit protocols mpls]                                                                                                                                                          |
| optimize-switchover-delay | [edit protocols mpls]                                                                                                                                                          |
| optimize-timer            | [edit protocols mpls]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary] |
| path                      | [edit protocols mpls]                                                                                                                                                          |

Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches (*continued*)

| Statement              | Hierarchy                                                                                                                                                                                                                                  |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| path-mtu               | [edit protocols mpls]                                                                                                                                                                                                                      |
| policing               | [edit protocols mpls static-label-switched-path ingress]<br>[edit protocols mpls label-switched-path]                                                                                                                                      |
| preference             | [edit protocols mpls]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls static-label-switched-path ingress]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary] |
| primary                | [edit protocols mpls egress-protection context-identifier]                                                                                                                                                                                 |
| priority               | [edit protocols mpls]<br>[edit protocols mpls diffserv-te te-class-matrix tex]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]    |
| protection-revert-time | [edit protocols mpls interface static]                                                                                                                                                                                                     |
| protector              | [edit protocols mpls egress-protection context-identifier]                                                                                                                                                                                 |
| push                   | [edit protocols mpls static-label-switched-path bypass]                                                                                                                                                                                    |
| random                 | [edit protocols mpls label-switched-path]                                                                                                                                                                                                  |
| record                 | [edit protocols mpls]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]                                                             |
| retry-limit            | [edit protocols mpls label-switched-path]                                                                                                                                                                                                  |
| retry-timer            | [edit protocols mpls label-switched-path]                                                                                                                                                                                                  |
| revert-timer           | [edit protocols mpls]<br>[edit protocols mpls label-switched-path]                                                                                                                                                                         |
| rfc3812-traps          | [edit protocols mpls log-updown no-trap]                                                                                                                                                                                                   |
| rsvp                   | [edit protocols mpls path-mtu]                                                                                                                                                                                                             |
| rsvp-error-hold-time   | [edit protocols mpls]                                                                                                                                                                                                                      |
| select                 | [edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]                                                                                                                                   |

Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches (*continued*)

| Statement            | Hierarchy                                                                                                                                                                                                                                                                                                    |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| signal-bandwidth     | [edit protocols mpls label-switched-path lsp-attributes]                                                                                                                                                                                                                                                     |
| size                 | [edit protocols mpls statistics file]                                                                                                                                                                                                                                                                        |
| smart-optimize-timer | [edit protocols mpls]                                                                                                                                                                                                                                                                                        |
| soft-preemption      | [edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                    |
| srlg                 | [edit protocols mpls interface]                                                                                                                                                                                                                                                                              |
| standby              | [edit protocols mpls]<br>[edit protocols mpls label-switched-path]<br>[edit protocols mpls label-switched-path primary]<br>[edit protocols mpls label-switched-path secondary]                                                                                                                               |
| static               | [edit protocols mpls interface]                                                                                                                                                                                                                                                                              |
| statistics           | [edit protocols mpls]                                                                                                                                                                                                                                                                                        |
| switch-away-lsps     | [edit protocols mpls interface]                                                                                                                                                                                                                                                                              |
| switching-type       | [edit protocols mpls label-switched-path lsp-attributes]                                                                                                                                                                                                                                                     |
| syslog               | [edit protocols mpls log-updown]                                                                                                                                                                                                                                                                             |
| tex                  | [edit protocols mpls diffserv-te te-class-matrix]                                                                                                                                                                                                                                                            |
| teardown             | [edit protocols mpls label-switched-path secondary oam<br>bfd-liveness-detection failure-action]                                                                                                                                                                                                             |
| te-class-matrix      | [edit protocols mpls diffserv-te]                                                                                                                                                                                                                                                                            |
| template             | [edit protocols mpls label-switched-path]                                                                                                                                                                                                                                                                    |
| threshold            | [edit protocols mpls label-switched-path primary oam<br>bfd-liveness-detection transmit-interval]<br>[edit protocols mpls label-switched-path secondary oam<br>bfd-liveness-detection detection-time]<br>[edit protocols mpls label-switched-path secondary oam<br>bfd-liveness-detection transmit-interval] |
| to                   | [edit protocols mpls static-label-switched-path bypass]                                                                                                                                                                                                                                                      |
| traceoptions         | [edit protocols mpls]<br>[edit protocols mpls label-switched-path ]<br>[edit protocols mpls label-switched-path oam]<br>[edit protocols mpls label-switched-path primary oam]<br>[edit protocols mpls label-switched-path secondary oam]                                                                     |

Table 19: Unsupported [edit protocols mpls] Configuration Statements on EX Series Switches (*continued*)

| Statement         | Hierarchy                                                                                                                                                      |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| traffic-class     | [edit protocols mpls diffserv-te te-class-matrix tex]                                                                                                          |
| transmit-interval | [edit protocols mpls label-switched-path primary oam bfd-liveness-detection]<br>[edit protocols mpls label-switched-path secondary oam bfd-liveness-detection] |
| trap              | [edit protocols mpls log-updown]                                                                                                                               |
| trap-path-down    | [edit protocols mpls log-updown]                                                                                                                               |
| trap-path-up      | [edit protocols mpls log-updown]                                                                                                                               |
| version           | [edit protocols mpls label-switched-path primary oam bfd-liveness-detection]<br>[edit protocols mpls label-switched-path secondary oam bfd-liveness-detection] |
| world-readable    | [edit protocols mpls statistics file]                                                                                                                          |

**Related  
Documentation**

- [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
- [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\) on page 83](#)
- [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)
- [Junos OS MPLS for EX Series Switches Overview on page 3](#)
- [\[edit protocols\] Configuration Statement Hierarchy on EX Series Switches on page 119](#)

## bfd-liveness-detection (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>bfd-liveness-detection {<br/>    failure-action {<br/>        make-before-break teardown-timeout <i>seconds</i>;<br/>        teardown;<br/>    }<br/>    minimum-interval <i>milliseconds</i>;<br/>    minimum-receive-interval <i>milliseconds</i>;<br/>    minimum-transmit-interval <i>milliseconds</i>;<br/>    multiplier <i>detection-time-multiplier</i>;<br/>}</pre>                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit protocols mpls label-switched-path <i>lsp-name</i> oam],<br>[edit protocols mpls oam]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.6.<br><b>failure-action</b> option added in Junos OS Release 8.5.<br>Statement introduced in Junos OS Release 12.2 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Enable Bidirectional Forwarding Detection (BFD) for all of the MPLS LSPs or for just a specific LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b>minimum-interval</b>—Minimum transmit and receive interval.<br/><b>Range:</b> 50 through 255,000 milliseconds<br/><b>Default:</b> 50</p> <p><b>minimum-receive-interval</b>—Minimum receive interval.<br/><b>Range:</b> 50 through 255,000 milliseconds<br/><b>Default:</b> 50</p> <p><b>minimum-transmit-interval</b>—Minimum transmit interval.<br/><b>Range:</b> 50 through 255,000 milliseconds<br/><b>Default:</b> 50</p> <p><b>multiplier</b>—Detection time multiplier.<br/><b>Range:</b> 1 through 255<br/><b>Default:</b> 3</p> <p>The <b>failure-action</b> statement is explained separately.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring BFD for MPLS IPv4 LSPs</a></li><li>• <a href="#">Configuring Bidirectional Forwarding Detection for MPLS (CLI Procedure) on page 112</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                 |

## connections (MPLS)

|                                 |                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>connections {   remote-interface-switch connection-name {     interface interface-name.unit-number;     transmit-lsp label-switched-path;     receive-lsp label-switched-path;   } }</pre>                       |
| <b>Hierarchy Level</b>          | [edit protocols]                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                  |
| <b>Description</b>              | <p>Define the connection between two circuits in a CCC connection.</p> <p>The remaining statements are explained separately.</p>                                                                                      |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27</a></li> <li>• <a href="#">MPLS Applications Feature Guide for Routing Devices</a></li> </ul> |

## description (Protocols Layer 2 VPN)

|                                 |                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | description text;                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn site <i>site-name</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols l2vpn site <i>site-name</i> interface <i>interface-name</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for EX Series switches.</p>                                                                                                                                                                             |
| <b>Description</b>              | Describe the VPN or virtual private LAN service (VPLS) routing instance.                                                                                                                                                                                                                                          |
| <b>Options</b>                  | <b>text</b> —Provide a text description. If the text includes one or more spaces, enclose it in quotation marks (" "). Any descriptive text you include is displayed in the output of the <b>show route instance detail</b> command and has no effect on operation.                                               |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Local Site on PE Routers in Layer 2 VPNs</a></li> <li>• <a href="#">Configuring an MPLS-Based Layer 2 VPN (CLI Procedure) on page 96</a></li> </ul>                                                                                          |

## encapsulation (Physical Interface)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | encapsulation (atm-ccc-cell-relay   atm-pvc   cisco-hdlc   cisco-hdlc-ccc   cisco-hdlc-tcc   ethernet-bridge   ethernet-ccc   ethernet-over-atm   ethernet-tcc   ethernet-vpls   ethernet-vpls-fr   ether-vpls-over-atm-llc   ethernet-vpls-ppp   extended-frame-relay-ccc   extended-frame-relay-ether-type-tcc   extended-frame-relay-tcc   extended-vlan-bridge   extended-vlan-ccc   extended-vlan-tcc   extended-vlan-vpls   flexible-ethernet-services   flexible-frame-relay   frame-relay   frame-relay-ccc   frame-relay-ether-type   frame-relay-ether-type-tcc   frame-relay-port-ccc   frame-relay-tcc   generic-services   multilink-frame-relay-uni-nni   ppp   ppp-ccc   ppp-tcc   vlan-ccc   vlan-vci-ccc   vlan-vpls);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> ],<br>[edit interfaces rlsq <i>number:number</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 11.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers ( <b>flexible-ethernet-services</b> , <b>ethernet-ccc</b> , and <b>ethernet-tcc</b> options only).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>         | Specify the physical link-layer encapsulation type. Not all encapsulation types are supported on the switches. See the switch CLI.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Default</b>             | <b>ppp</b> —Use serial PPP encapsulation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>             | <p><b>atm-ccc-cell-relay</b>—Use ATM cell-relay encapsulation.</p> <p><b>atm-pvc</b>—Use ATM PVC encapsulation.</p> <p><b>cisco-hdlc</b>—Use Cisco-compatible High-Level Data Link Control (HDLC) framing.</p> <p><b>cisco-hdlc-ccc</b>—Use Cisco-compatible HDLC framing on CCC circuits.</p> <p><b>cisco-hdlc-tcc</b>—Use Cisco-compatible HDLC framing on TCC circuits for connecting different media.</p> <p><b>ethernet-bridge</b>—Use Ethernet bridge encapsulation on Ethernet interfaces that have bridging enabled and that must accept all packets.</p> <p><b>ethernet-ccc</b>—Use Ethernet CCC encapsulation on Ethernet interfaces that must accept packets carrying standard Tag Protocol ID (TPID) values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, CCC is not supported.</p> <p><b>ethernet-over-atm</b>—For interfaces that carry IPv4 traffic, use Ethernet over ATM encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces. As defined in RFC 2684, <i>Multiprotocol Encapsulation over ATM Adaptation Layer 5</i>, this encapsulation type allows ATM interfaces to connect to devices that support only bridge protocol data units (BPDUs). Junos OS does not completely support bridging, but accepts BPDU packets as a default gateway. If you use the router as an edge device, then the router acts as a default gateway. It accepts Ethernet LLC/SNAP frames with IP or ARP in the payload, and drops the rest. For packets destined to the Ethernet LAN, a route lookup is done using the destination</p> |



IP address. If the route lookup yields a full address match, the packet is encapsulated with an LLC/SNAP and MAC header, and the packet is forwarded to the ATM interface.

**ethernet-tcc**—For interfaces that carry IPv4 traffic, use Ethernet TCC encapsulation on interfaces that must accept packets carrying standard TPID values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC is not supported.

**ethernet-vpls**—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard TPID values. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.

**ethernet-vpls-fr**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.

**ethernet-vpls-ppp**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 PPP connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use it to forward the packet into a given VPLS instance.

**ether-vpls-over-atm-llc**—For ATM intelligent queuing (IQ) interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.

**extended-frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to CCC.

**extended-frame-relay-ether-type-tcc**—Use extended Frame Relay ether type TCC for Cisco-compatible Frame Relay for DLCIs 1 through 1022. This encapsulation type is used for circuits with different media on either side of the connection.

**extended-frame-relay-tcc**—Use Frame Relay encapsulation on TCC circuits to connect different media. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to TCC.

**extended-vlan-bridge**—Use extended VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q VLAN tagging and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.

**extended-vlan-ccc**—Use extended VLAN encapsulation on CCC circuits with Gigabit Ethernet and 4-port Fast Ethernet interfaces that must accept packets carrying 802.1Q values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, extended VLAN CCC is not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC is not supported.

**extended-vlan-tcc**—For interfaces that carry IPv4 traffic, use extended VLAN encapsulation on TCC circuits with Gigabit Ethernet interfaces on which you want to use 802.1Q tagging. For 4-port Gigabit Ethernet PICs, extended VLAN TCC is not supported.

**extended-vlan-vpls**—Use extended VLAN VPLS encapsulation on Ethernet interfaces that have VLAN 802.1Q tagging and VPLS enabled and that must accept packets carrying TPIDs 0x8100, 0x9100, and 0x9901. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.



**NOTE:** The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

---

**flexible-ethernet-services**—For Gigabit Ethernet IQ interfaces and Gigabit Ethernet PICs with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), use flexible Ethernet services encapsulation when you want to configure multiple per-unit Ethernet encapsulations. Aggregated Ethernet bundles can use this encapsulation type. This encapsulation type allows you to configure any combination of route, TCC, CCC, Layer 2 virtual private networks (VPNs), and VPLS encapsulations on a single physical port. If you configure flexible Ethernet services encapsulation on the physical interface, VLAN IDs from 1 through 511 are no longer reserved for normal VLANs.

**flexible-frame-relay**—For IQ interfaces only, use flexible Frame Relay encapsulation when you want to configure multiple per-unit Frame Relay encapsulations. This encapsulation type allows you to configure any combination of TCC, CCC, and standard Frame Relay encapsulations on a single physical port. Also, each logical interface can have any DLCI value from 1 through 1022.

**frame-relay**—Use Frame Relay encapsulation.

**frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits.

**frame-relay-ether-type**—Use Frame Relay ether type encapsulation for compatibility with the Cisco Frame Relay.

**frame-relay-ether-type-tcc**—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media.

**frame-relay-port-ccc**—Use Frame Relay port CCC encapsulation to transparently carry all the DLCIs between two customer edge (CE) routers without explicitly configuring each DLCI on the two provider edge (PE) routers with Frame Relay transport. When you use this encapsulation type, you can configure the **ccc** family only.

**frame-relay-tcc**—Use Frame Relay encapsulation on TCC circuits to connect different media.

**generic-services**—Use generic services encapsulation for services with a hierarchical scheduler.

**multilink-frame-relay-uni-nni**—Use MLFR UNI NNI encapsulation. This encapsulation is used on link services, voice services interfaces functioning as FRF.16 bundles, and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.

**ppp**—Use serial PPP encapsulation.

**ppp-ccc**—Use serial PPP encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

**ppp-tcc**—Use serial PPP encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.

**vlan-ccc**—Use Ethernet VLAN encapsulation on CCC circuits.

**vlan-vci-ccc**—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only. All logical interfaces configured on the Ethernet interface must also have the encapsulation type set to **vlan-vci-ccc**.

**vlan-vpls**—Use VLAN VPLS encapsulation on Ethernet interfaces with VLAN tagging and VPLS enabled. Interfaces with VLAN VPLS encapsulation accept packets carrying standard TPID values only. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.



#### NOTE:

- Label-switched interfaces (LSIs) do not support VLAN VPLS encapsulation. Therefore, you can only use VLAN VPLS encapsulation on a PE-router-to-CE-router interface and not a core-facing interface.
- Starting with Junos OS release 13.3, a commit error occurs when you configure **vlan-vpls** encapsulation on a physical interface and configure **family inet** on one of the logical units. Previously, it was possible to commit this invalid configuration.

|                                 |                                                               |
|---------------------------------|---------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.        |
|                                 | interface-control—To add this statement to the configuration. |

**Related  
Documentation**

- *Configuring Interface Encapsulation on Physical Interfaces*
- *Configuring CCC Encapsulation for Layer 2 VPNs*
- *Configuring Layer 2 Switching Cross-Connects Using CCC*
- *Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits*
- *Configuring ATM Interface Encapsulation*
- *Configuring ATM-to-Ethernet Interworking*
- *Configuring VLAN Encapsulation*
- *Configuring Extended VLAN Encapsulation*
- *Configuring Encapsulation for Layer 2 Wholesale VLAN Interfaces*
- *Configuring Interfaces for Layer 2 Circuits*
- *Configuring Interface Encapsulation on PTX Series Packet Transport Routers*
- *Configuring MPLS LSP Tunnel Cross-Connects Using CCC*
- *Configuring TCC*
- *Configuring VPLS Interface Encapsulation*
- *Configuring Interfaces for VPLS Routing*
- *Defining the Encapsulation for Switching Cross-Connects*

## encapsulation-type (Layer 2 VPNs)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | encapsulation-type (atm-aal5   atm-cell   atm-cell-port-mode   atm-cell-vc-mode   atm-cell-vp-mode   cesop   cisco-hdlc   ethernet   ethernet-vlan   frame-relay   frame-relay-port-mode   interworking   ppp   satop-e1   satop-e3   satop-t1   satop-t3);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>     | <p>[edit logical-systems <i>logical-system-name</i> protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn neighbor <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols vpls],</p> <p>[edit protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols l2vpn],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols l2vpn neighbor <i>address</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols vpls],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols vpls neighbor <i>address</i>]</p> |
| <b>Release Information</b> | <p>Statement introduced in Junos OS Release 9.2.</p> <p>Statement introduced in Junos OS Release 11.1 for EX Series switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>         | Specify the type of Layer 2 traffic originating from the CE device. Only the <b>ethernet</b> and <b>ethernet-vlan</b> encapsulation types are supported for VPLS. Not all encapsulation types are supported on the switches. See the switch CLI.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>             | <p><b>atm-aal5</b>—ATM Adaptation Layer (AAL/5)</p> <p><b>atm-cell</b>—ATM cell relay</p> <p><b>atm-cell-port-mode</b>—ATM cell relay port promiscuous mode</p> <p><b>atm-cell-vc-mode</b>—ATM VC cell relay nonpromiscuous mode</p> <p><b>atm-cell-vp-mode</b>—ATM virtual path (VP) cell relay promiscuous mode</p> <p><b>cesop</b>—CESOP-based Layer 2 VPN</p> <p><b>cisco-hdlc</b>—Cisco Systems-compatible HDLC</p> <p><b>ethernet</b>—Ethernet</p> <p><b>ethernet-vlan</b>—Ethernet VLAN</p> <p><b>frame-relay</b>—Frame Relay</p> <p><b>frame-relay-port-mode</b>—Frame Relay port mode</p> <p><b>interworking</b>—Layer 2.5 interworking VPN</p> <p><b>ppp</b>—PPP</p> <p><b>satsop-e1</b>—SATSOP-E1-based Layer 2 VPN</p>                                                                                                                                                                                                                                                                      |

**satsop-e3**—SATSOP-E3-based Layer 2 VPN

**satsop-t1**—SATSOP-T1-based Layer 2 VPN

**satsop-t3**—SATSOP-T3-based Layer 2 VPN

**Default:** For VPLS networks, the default encapsulation type is **ethernet**.

|                           |                                                             |
|---------------------------|-------------------------------------------------------------|
| <b>Required Privilege</b> | routing—To view this statement in the configuration.        |
| <b>Level</b>              | routing-control—To add this statement to the configuration. |

|                              |                                                                                                                                                                                                                                                                                                                               |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <i>Configuring the Local Site on PE Routers in Layer 2 VPNs</i></li><li>• <i>Configuring VPLS Routing Instances</i></li><li>• <i>Configuring Interfaces for Layer 2 Circuits</i></li><li>• <a href="#">Configuring an MPLS-Based Layer 2 VPN (CLI Procedure) on page 96</a></li></ul> |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## exp

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>exp classifier-name {     import (classifier-name   default);     forwarding-class class-name {         loss-priority level {             code-points [aliases] [3-bit-patterns];         }     } }</pre>                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | <p>[edit class-of-service classifiers],<br/>         [edit class-of-service code-point-aliases],<br/>         [edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules],<br/>         [edit class-of-service rewrite-rules]</p>                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | <p>Define the experimental bits (EXP) code point mapping that is applied to MPLS packets. You can define an <b>exp</b> classifier only on EX3200 switches, EX4200 and EX8200 standalone switches, and EX8200 Virtual Chassis. You can bind an <b>exp</b> rewrite rule on EX8200 standalone switches and EX8200 Virtual Chassis.</p> <p>EX Series switches support only one EXP code mapping on the switch (either default or custom). It is applied globally and implicitly to all the MPLS-enabled interfaces on the switch. You cannot bind it or disable it on individual interfaces.</p> |
| <b>Options</b>                  | <p><b>classifier-name</b>—Name of the classifier.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Understanding Using CoS with MPLS Networks on EX Series Switches on page 12</a></li> <li>• <a href="#">Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect (CLI Procedure) on page 87</a></li> <li>• <a href="#">Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure) on page 83</a></li> <li>• <a href="#">Configuring CoS on Provider Switches of an MPLS Network (CLI Procedure) on page 94</a></li> </ul>                                                             |

## fec

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> fec <i>fec-address</i> {   bfd-liveness-detection {     detection-time threshold <i>milliseconds</i>;     ecmp;     failure-action {       remove-nexthop;       remove-route;     }     holddown-interval <i>milliseconds</i>;     ingress-policy <i>ingress-policy-name</i>;     minimum-interval <i>milliseconds</i>;     minimum-receive-interval <i>milliseconds</i>;     minimum-transmit-interval <i>milliseconds</i>;     multiplier <i>detection-time-multiplier</i>;     no-adaptation;     transmit-interval {       minimum-interval <i>milliseconds</i>;       threshold <i>milliseconds</i>;     }     version (0   1   automatic);   }   no-bfd-liveness-detection;   periodic-traceroute {     disable;     exp <i>exp-value</i>;     fanout <i>fanout-value</i>;     frequency <i>minutes</i>;     paths <i>number-of-paths</i>;     retries <i>retry-attempts</i>;     source <i>address</i>;     ttl <i>ttl-value</i>;     wait <i>seconds</i>;   } } </pre> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-systems-name</i> protocols ldp oam],<br>[edit protocols ldp oam]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.5.<br>Statement introduced in Junos OS Release 12.2 for EX Series switches.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Allows you to configure BFD for a specific LDP forwarding equivalence class (FEC).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Options</b>                  | <p><b><i>fec-address</i></b>—Specify the FEC address.</p> <p>The other statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |



**Related Documentation** • *Configuring BFD for LDP LSPs*

## instance-type

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>instance-type type;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>     | <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i>],</code><br><code>[edit routing-instances <i>routing-instance-name</i>]</code>                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br><b>virtual-switch</b> and <b>layer2-control</b> options introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 9.2 for EX Series switches.<br>Statement introduced in Junos OS Release 11.3 for the QFX Series.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers.<br><b>evpn</b> option introduced in Junos OS Release 13.2 for MX 3D Series routers.<br><b>forwarding</b> option introduced in Junos OS Release 14.2 for PTX Series Packet Transport Routers. |
| <b>Description</b>         | Define the type of routing instance.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

### Options



**NOTE:** On ACX Series routers, you can configure only the forwarding, virtual router, and VRF routing instances.

**type**—Can be one of the following:

- **evpn**—(MX Series routers only) Enable an Ethernet VPN (EVPN) on the routing instance. You cannot configure the **evpn** option under the `[edit logical-systems logical-system-name routing-instances routing-instance-name instance-type]` hierarchy level.
- **forwarding**—Provide support for filter-based forwarding, where interfaces are not associated with instances. All interfaces belong to the default instance. Other instances are used for populating RPD learned routes. For this instance type, there is no one-to-one mapping between an interface and a routing instance. All interfaces belong to the default instance inet.0.
- **l2backhaul-vpn**—Provide support for Layer 2 wholesale VLAN packets with no existing corresponding logical interface. When using this instance, the router learns both the outer tag and inner tag of the incoming packets, when the **instance-role** statement is defined as **access**, or the outer VLAN tag only, when the **instance-role** statement is defined as **nni**.
- **l2vpn**—Enable a Layer 2 VPN on the routing instance. You must configure the **interface**, **route-distinguisher**, **vrf-import**, and **vrf-export** statements for this type of routing instance.
- **layer2-control**—(MX Series routers only) Provide support for RSTP or MSTP in customer edge interfaces of a VPLS routing instance. This instance type cannot be used if the customer edge interface is multihomed to two provider edge interfaces. If the customer

edge interface is multihomed to two provider edge interfaces, use the default BPDU tunneling.

- **no-forwarding**—This is the default routing instance. Do not create a corresponding forwarding instance. Use this routing instance type when a separation of routing table information is required. There is no corresponding forwarding table. All routes are installed into the default forwarding table. IS-IS instances are strictly nonforwarding instance types.
- **virtual-router**—Enable a virtual router routing instance. This instance type is similar to a VPN routing and forwarding instance type, but used for non-VPN-related applications. You must configure the **interface** statement for this type of routing instance. You do not need to configure the **route-distinguisher**, **vrf-import**, and **vrf-export** statements.
- **virtual-switch**—(MX Series routers and EX9200 switches only) Provide support for Layer 2 bridging. Use this routing instance type to isolate a LAN segment with its Spanning Tree Protocol (STP) instance and to separate its VLAN identifier space.
- **vpls**—Enable VPLS on the routing instance. Use this routing instance type for point-to-multipoint LAN implementations between a set of sites in a VPN. You must configure the **interface**, **route-distinguisher**, **vrf-import**, and **vrf-export** statements for this type of routing instance.
- **vrf**—VPN routing and forwarding (VRF) instance. Provides support for Layer 3 VPNs, where interface routes for each instance go into the corresponding forwarding table only. Required to create a Layer 3 VPN. Create a VRF table (*instance-name.inet.0*) that contains the routes originating from and destined for a particular Layer 3 VPN. For this instance type, there is a one-to-one mapping between an interface and a routing instance. Each VRF instance corresponds with a forwarding table. Routes on an interface go into the corresponding forwarding table. You must configure the **interface**, **route-distinguisher**, **vrf-import**, and **vrf-export** statements for this type of routing instance.

|                           |                                                             |
|---------------------------|-------------------------------------------------------------|
| <b>Required Privilege</b> | routing—To view this statement in the configuration.        |
| <b>Level</b>              | routing-control—To add this statement to the configuration. |

- |                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"> <li>• <i>Configuring Routing Instances on PE Routers in VPNs</i></li> <li>• <i>Configuring EVPN Routing Instances</i></li> <li>• <i>Configuring EVPN Routing Instances on EX9200 Switches</i></li> <li>• <i>Configuring Virtual Router Routing Instances</i></li> <li>• <i>Example: Configuring Filter-Based Forwarding on the Source Address</i></li> <li>• <i>Example: Configuring Filter-Based Forwarding on Logical Systems</i></li> <li>• <i>Layer 2 Routing Instance Types</i></li> </ul> |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## interface (MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>interface (all   <i>interface-name</i>);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit protocols <a href="#">mpls</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Enable MPLS on all interfaces on the switch or on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Default</b>                  | MPLS is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Options</b>                  | <p><b>all</b>—All interfaces on the switch.</p> <p><b><i>interface-name</i></b>—Name of an interface:</p> <ul style="list-style-type: none"><li>• Aggregated Ethernet—<b>aex</b></li><li>• Gigabit Ethernet—<b>ge-<i>fpc/pic/port</i></b></li></ul>                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27</a></li><li>• <a href="#">Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS (CLI Procedure) on page 90</a></li><li>• <a href="#">Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect (CLI Procedure) on page 91</a></li><li>• <a href="#">Configuring MPLS on EX8200 and EX4500 Provider Switches (CLI Procedure) on page 78</a></li></ul> |

## l2circuit

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> l2circuit {   local-switching {     interface <i>interface-name</i> {       description <i>text</i>;     end-interface {       interface <i>interface-name</i>;       protect-interface <i>interface-name</i>;     }     ignore-mtu-mismatch;     protect-interface <i>interface-name</i>;   } } neighbor <i>address</i> {   interface <i>interface-name</i> {     backup-neighbor <i>address</i>;     bandwidth (<i>bandwidth</i>   <i>ctnumber bandwidth</i>);     community <i>community-name</i>;     connection-protection;     (control-word   no-control-word);     description <i>text</i>;     egress-protection;     encapsulation-type <i>type</i>;     ignore-encapsulation-mismatch;     ignore-mtu-mismatch;     mtu <i>mtu-number</i>;     protect-interface <i>interface-name</i>;     pseudowire-status-tlv hot-standby-vc-on;     psn-tunnel-endpoint <i>address</i>;     virtual-circuit-id <i>identifier</i>;   } } traceoptions {   file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;   flag <i>flag</i> &lt;flag-modifier&gt; &lt;disable&gt;; } </pre> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols],<br>[edit protocols]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 11.1 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Enables a Layer 2 circuit.<br><br>The remaining statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

**Related  
Documentation**

- *Configuring ATM Trunking on Layer 2 Circuits*
- *Configuring Bandwidth Allocation and Call Admission Control in Layer 2 Circuits*
- *Configuring Interfaces for Layer 2 Circuits*
- *Configuring LDP for Layer 2 Circuits*
- *Configuring Policies for Layer 2 Circuits*
- *Configuring Static Layer 2 Circuits*
- *Tracing Layer 2 Circuit Operations*

## l2vpn

```
Syntax l2vpn {
 (control-word | no-control-word);
 encapsulation-type type;
 oam {
 bfd-liveness-detection {
 detection-time {
 threshold milliseconds;
 }
 minimum-interval milliseconds;
 minimum-receive-interval milliseconds;
 multiplier number;
 no-adaptation;
 transmit-interval {
 threshold milliseconds;
 minimum-interval milliseconds;
 }
 version (1 | automatic);
 }
 ping-interval seconds;
 }
 site site-name {
 community COMM;
 control-word ;
 encapsulation-type ethernet;
 ignore-encapsulation-mismatch;
 ignore-mtu-mismatch;
 interface interface-name {
 description text;
 community COMM;
 control-word ;
 encapsulation-type ethernet;
 ignore-encapsulation-mismatch;
 ignore-mtu-mismatch;
 mtu 1500;
 no-control-word;
 oam {
 bfd-liveness-detection {
 detection-time {
 threshold milliseconds;
 }
 minimum-interval milliseconds;
 minimum-receive-interval milliseconds;
 multiplier number;
 no-adaptation;
 transmit-interval {
 threshold milliseconds;
 minimum-interval milliseconds;
 }
 version (1 | automatic);
 }
 ping-interval seconds; seconds;
 }
 }
 }
}
```

```

 remote-site-id remote-site-id;
 target-attachment-identifier identifier;
}
mtu 1500;
no-control-word;
oam {
 bfd-liveness-detection {
 detection-time {
 threshold milliseconds;
 }
 minimum-interval milliseconds;
 minimum-receive-interval milliseconds;
 multiplier number;
 no-adaptation;
 transmit-interval {
 threshold milliseconds;
 minimum-interval milliseconds;
 }
 version (1 | automatic);
 }
 ping-interval seconds; seconds;
}
site-identifier identifier;
site-preference preference-value {
 backup;
 primary;
}
source-attachment-identifier identifier;
}
traceoptions {
 file filename <files number> <size size> <world-readable | no-world-readable>;
 flag flag <flag-modifier> <disable>;
}
}

```

|                                 |                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols],<br>[edit routing-instances <i>routing-instance-name</i> protocols]       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 11.1 for EX Series switches.                                                           |
| <b>Description</b>              | Enable a Layer 2 VPN routing instance on a PE router or switch.<br><br>The remaining statements are explained separately.                                                            |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Configuring the Local Site on PE Routers in Layer 2 VPNs</li> <li>Configuring an MPLS-Based Layer 2 VPN (CLI Procedure) on page 96</li> </ul> |



## label-switched-path

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | label-switched-path <i>lsp-name</i> to <i>remote-provider-edge-switch</i> ;                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit protocols <a href="#">mpls</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Define a label-switched path (LSP) to the remote provider edge switch to use for MPLS traffic. You must specify this statement on the provider edge switch.                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <p><b><i>lsp-name</i></b> —Name that identifies the LSP. The name can be up to 32 characters and can contain letters, digits, periods, and hyphens. To include other characters, enclose the name in quotation marks. The name must be unique on the ingress switch.</p> <p><b><i>remote-provider-edge-switch</i></b> —Either the loopback address or the switch address.</p>                                                                                           |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27</a></li> <li>• <a href="#">Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS (CLI Procedure) on page 90</a></li> <li>• <a href="#">Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect (CLI Procedure) on page 91</a></li> <li>• <i>MPLS Applications Feature Guide for Routing Devices</i></li> </ul> |

## ldp

```
Syntax ldp {
 (deaggregate | no-deaggregate);
 egress-policy [policy-names];
 explicit-null;
 export [policy-names];
 graceful-restart {
 disable;
 helper-disable;
 maximum-neighbor-recovery-time seconds;
 reconnect-time seconds;
 recovery-time seconds;
 }
 import [policy-names];
 interface (interface-name | all) {
 disable;
 hello-interval seconds;
 hold-time seconds;
 transport-address (interface | router-id);
 }
 keepalive-interval seconds;
 keepalive-timeout seconds;
 log-updown {
 trap disable;
 }
 no-forwarding;
 oam {
 bfd-liveness-detection {
 detection-time threshold milliseconds;
 ecmp;
 failure-action {
 remove-nexthop;
 remove-route;
 }
 holddown-interval milliseconds;
 minimum-interval milliseconds;
 minimum-receive-interval milliseconds;
 minimum-transmit-interval milliseconds;
 multiplier detection-time-multiplier;
 no-adaptation;
 transmit-interval {
 minimum-interval milliseconds;
 threshold milliseconds;
 }
 }
 }
 fec fec-address {
 bfd-liveness-detection {
 detection-time threshold milliseconds;
 ecmp;
 failure-action {
 remove-nexthop;
 remove-route;
 }
 }
 }
}
```

```

 holddown-interval milliseconds;
 ingress-policy ingress-policy-name;
 minimum-interval milliseconds;
 minimum-receive-interval milliseconds;
 minimum-transmit-interval milliseconds;
 multiplier detection-time-multiplier;
 no-adaptation;
 transmit-interval {
 minimum-interval milliseconds;
 threshold milliseconds;
 }
 version (0 | 1 | automatic);
}
no-bfd-liveness-detection;
periodic-traceroute {
 disable;
 exp exp-value;
 fanout fanout-value;
 frequency minutes;
 paths number-of-paths;
 retries retry-attempts;
 source address;
 ttl ttl-value;
 wait seconds;
}
}
ingress-policy ingress-policy-name;
periodic-traceroute {
 disable;
 exp exp-value;
 fanout fanout-value;
 frequency minutes;
 paths number-of-paths;
 retries retry-attempts;
 source address;
 ttl ttl-value;
 wait seconds;
}
}
p2mp;
policing {
 fec fec-address {
 ingress-traffic filter-name;
 transit-traffic filter-name;
 }
}
}
preference preference;
session address {
 authentication-algorithm algorithm;
 authentication-key authentication-key;
 authentication-key-chain key-chain-name;
}
}
strict-targeted-hellos;
traceoptions {
 file filename <files number <size size> <world-readable | no-world-readable>;
 flag flag <flag-modifier> <disable>;

```

```
 }
 track-igp-metric;
 traffic-statistics {
 file filename <files number> <size size> <world-readable | no-world-readable>;
 interval interval;
 no-penultimate-hop;
 }
 transport-address (address | interface | router-id);
}
```

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols],  
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name*  
protocols],  
[edit protocols],  
[edit routing-instances *routing-instance-name* protocols]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 11.1 for EX Series switches.  
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description** Enable LDP routing on the router or switch.

You must include the **ldp** statement in the configuration to enable LDP on the router or switch.

**Default** LDP is disabled on the router.

**Options** The other statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- *Minimum LDP Configuration*
- *Enabling and Disabling LDP*

## mpls

```

Syntax mpls {
 disable;
 class-of-service cos-value;
 no-cspf;
 no-decrement-ttl;

 advertisement-hold-time seconds;
 explicit-null;
 icmp-tunneling;
 interface (interface-name | all) {
 disable;
 }
 ipv6-tunneling;
 no-propagate-ttl;
 path path-name {
 (address | hostname) <loose | strict>;
 }
 label-switched-path lsp-name {
 disable;
 auto-bandwidth {
 adjust-interval seconds;
 adjust-threshold percentage;
 adjust-threshold-overflow-limit count;
 adjust-threshold-underflow-limit
 maximum-bandwidth bps;
 minimum-bandwidth bps;
 monitor-bandwidth;
 }
 description text-string;
 from address;
 install destination-prefix </prefix-length> <active>;
 ldp-tunneling;
 no-cspf;
 no-decrement-ttl;
 primary path-name {
 adaptive;
 select (manual | unconditional);
 }
 secondary path-name {
 adaptive;
 select (manual | unconditional);
 }
 to address;
 traceoptions {
 file filename <files number> <size maximum-file-size> <world-readable |
 no-world-readable>;
 flag flag;
 }
 }
 static-label-switched-path lsp-name {
 bypass bypass-name {
 description text-string;

```

```

 next-hop (address | interface-name | address/interface-name);
 to address;
 }
 ingress {
 description string;
 install {
 destination-prefix <active>;
 }
 link-protection bypass-name name;
 next-hop (address | interface-name | address/interface-name);
 to address;
 }
 transit incoming-label {
 bandwidth bps;
 description text-string;
 link-protection bypass-name name;
 next-hop (address | interface-name | address/interface-name);
 pop;
 swap out-label;
 }
 statistics {
 auto-bandwidth;
 file filename <files number> <size maximum-file-size> <world-readable |
 no-world-readable>;
 interval seconds;
 }
 traceoptions {
 file filename <files number> <size maximum-file-size> <world-readable |
 no-world-readable>;
 flag flag;
 }
 traffic-engineering (bgp | bgp-igp);
}
}

```

|                                 |                                                                                                                                |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <b>Hierarchy Level</b>          | [edit protocols]                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                           |
| <b>Description</b>              | <p>Enable MPLS on the switch.</p> <p>The remaining statements are explained separately.</p>                                    |
| <b>Default</b>                  | MPLS is disabled.                                                                                                              |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p> |

- Related Documentation**
- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
  - [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS \(CLI Procedure\) on page 90](#)
  - [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect \(CLI Procedure\) on page 91](#)
  - [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)
  - [\*Junos OS MPLS Applications Configuration Guide\*](#)

## neighbor (Protocols Layer 2 Circuit)

```
Syntax neighbor address {
 interface interface-name {
 backup-neighbor address {
 community name;
 hot-standby;
 psn-tunnel-endpoint address;
 standby;
 virtual-circuit-id number;
 }
 bandwidth (bandwidth | ctnumber bandwidth);
 community community-name;
 (control-word | no-control-word);
 description text;
 egress-protection {
 protected-l2circuit {
 egress-pe address;
 ingress-pe address;
 virtual-circuit-id identifier;
 }
 protector-interface interface-name;
 protector-pe address {
 context-identifier identifier;
 lsp lsp-name;
 }
 }
 }
 encapsulation-type type;
 ignore-encapsulation-mismatch;
 ignore-mtu-mismatch;
 mtu mtu-number;
 no-revert;
 protect-interface interface-name;
 pseudowire-status-tlv hot-standby-vc-on;
 psn-tunnel-endpoint address;
 revert-time seconds;
 static {
 incoming-label label;
 outgoing-label label;
 send-oam;
 }
 switchover-delay milliseconds;
 virtual-circuit-id identifier;
 }
```

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols l2circuit],  
[edit protocols l2circuit]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 11.1 for EX Series switches.



|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>              | Each Layer 2 circuit is represented by the logical interface connecting the local provider edge (PE) router or switch to the local customer edge (CE) router or switch. All the Layer 2 circuits using a particular remote PE router or switch designated for remote CE routers or switches are listed under the <b>neighbor</b> statement (neighbor designates the PE router or switch). Each neighbor is identified by its IP address and is usually the end-point destination for the LSP tunnel (transporting the Layer 2 circuit). |
| <b>Options</b>                  | <b>address</b> —IP address of a neighboring router or switch.<br><br>The remaining statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Configuring Interfaces for Layer 2 Circuits</i></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## path

---

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | <pre>path destination {<br/>    &lt;address   hostname&gt; &lt;strict   loose&gt;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Hierarchy Level          | [edit protocols <a href="#">mpls</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Release Information      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Description              | Configure path protection on your MPLS network.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Options                  | <p><b>destination</b> —Name of a label switched path (LSP). In addition to specifying the name of the configured LSP, you can include some other designation such as <b>primary-path</b>.</p> <p><b>address</b> —(Optional) IP address of each transit switch (or the IP address of the loopback interface on the switch) in the LSP. If you want to control exactly which switches are selected for the LSP, specify the address or hostname of each transit switch. Specify the addresses in order, starting with the first provider (transit) switch, and continuing sequentially along the path until reaching the egress provider edge switch.</p> <p><b>Default:</b> If you do not specify the addresses or hostnames of any switches, the LSP is calculated by the switch.</p> <p><b>hostname</b> —(Optional) See <b>address</b>.</p> <p><b>Default:</b> If you do not specify the addresses or hostnames of any switches, the LSP is calculated by the switch.</p> <p><b>loose</b>—(Optional) Indicates that the next address in the <b>path</b> statement is a loose link. This means that the LSP can traverse through other switches before reaching this switch.</p> <p><b>Default:</b> <b>strict</b></p> <p><b>strict</b>—(Optional) Indicates that the LSP must go to the next address specified in the <b>path</b> statement without traversing other switches. This is the default.</p> |
| Required Privilege Level | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Related Documentation    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Path Protection in an MPLS Network (CLI Procedure) on page 79</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## periodic-traceroute

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> periodic-traceroute {   disable;   exp <i>exp-value</i>;   fanout <i>fanout-value</i>;   frequency <i>minutes</i>;   paths <i>number-of-paths</i>;   retries <i>retry-attempts</i>;   source <i>address</i>;   ttl <i>ttl-value</i>;   wait <i>seconds</i>; } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols ldp oam],<br>[edit logical-systems <i>logical-system-name</i> protocols ldp oam fec <i>fec-address</i> ],<br>[edit protocols ldp oam],<br>[edit protocols ldp oam fec <i>fec-address</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b> | Statement introduced in Junos OS Release 8.4.<br>Support added at the [edit protocols ldp oam] and [edit logical-systems <i>logical-system-name</i> protocols ldp oam] hierarchy levels in Junos OS Release 9.0.<br>Statement introduced in Junos OS Release 12.2 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>         | Enable tracing of forwarding equivalence classes (FECs) for LDP LSPs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>             | <p><b>disable</b>—(Optional) Disable tracing for a specific FEC. This option is available at the [edit protocols ldp oam fec <i>fec-address</i> periodic-traceroute] and [edit logical-systems <i>logical-system-name</i> protocols ldp oam fec <i>fec-address</i> periodic-traceroute] hierarchy levels only.</p> <p><b>exp <i>exp-value</i></b>—(Optional) Specify the class of service to use when sending probes.<br/> <b>Default:</b> 7<br/> <b>Range:</b> 0 through 7</p> <p><b>fanout <i>fanout-value</i></b>—(Optional) Specify the maximum number of next hops to search per node.<br/> <b>Default:</b> 16<br/> <b>Range:</b> 1 through 16</p> <p><b>frequency <i>minutes</i></b>—(Optional) Specify the interval between traceroute attempts.<br/> <b>Default:</b> 60 minutes<br/> <b>Range:</b> 15 through 120 minutes</p> <p><b>paths <i>number-of-paths</i></b>—(Optional) Specify the maximum number of paths to search.<br/> <b>Default:</b> 3<br/> <b>Range:</b> 1 through 255</p> |

**retries** *retry-attempts*—(Optional) Specify the number of attempts to send a probe to a specific node before giving up.

**Default:** 3

**Range:** 1 through 9

**source address**—(Optional) Specify the IPv4 source address to use when sending probes.

**ttl value**—(Optional) Specify the maximum time-to-live value. Nodes that are beyond this value are not traced.

**Default:** 64

**Range:** 1 through 255

**wait seconds**—(Optional) Specify the wait interval before resending a probe packet.

**Default:** 10 seconds

**Range:** 5 though 15 seconds

|                           |                                                             |
|---------------------------|-------------------------------------------------------------|
| <b>Required Privilege</b> | routing—To view this statement in the configuration.        |
| <b>Level</b>              | routing-control—To add this statement to the configuration. |

|                              |                                                                                         |
|------------------------------|-----------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <i>Configuring LDP LSP Traceroute</i></li></ul> |
|------------------------------|-----------------------------------------------------------------------------------------|

## policing

|                                 |                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>policing (filter <i>filter-name</i>   no-automatic-policing);</code>                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit protocols mpls label-switched-path <i>lsp-name</i> ]<br>[edit interfaces <i>interface-id</i> unit <i>number-of-logical-unit</i> family inet address <i>ip-address</i> ]                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1 for EX Series switches.                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Apply a rate-limiting policer as the specified policing filter: <ul style="list-style-type: none"> <li>To the LSP for MPLS over CCC.</li> <li>To the customer-edge interface for IP over MPLS.</li> </ul>                                                                                                                                                                           |
| <b>Options</b>                  | <b>filter <i>filter-name</i></b> —Specify the name of the policing filter.<br><br><b>no-automatic-policing</b> —Disable automatic policing on this LSP.                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><i>policer</i></li> <li><i>Configuring Policers to Control Traffic Rates (CLI Procedure)</i></li> <li><i>Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect (CLI Procedure)</i> on page 91</li> <li><i>Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS (CLI Procedure)</i> on page 90</li> </ul> |

## primary

|                                 |                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>primary <i>path-name</i>;</code>                                                                                             |
| <b>Hierarchy Level</b>          | [edit protocols <a href="#">mpls label-switched-path</a> <i>lsp-name</i> ]                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                               |
| <b>Description</b>              | Specify the primary path to use for a label switched path (LSP). You can configure only one primary path.                          |
| <b>Options</b>                  | <b><i>path-name</i></b> —Name of the primary path that you created with the <b>path</b> statement.                                 |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><i>Configuring Path Protection in an MPLS Network (CLI Procedure)</i> on page 79</li> </ul> |

## remote-interface-switch

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>remote-interface-switch <i>connection-name</i> {<br/>    interface <i>interface-name.unit-number</i>;<br/>    receive-lsp <i>label-switched-path</i>;<br/>    transmit-lsp <i>label-switched-path</i>;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols connections],<br>[edit protocols <a href="#">connections (MPLS)</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | Configure MPLS LSP tunnel cross-connects. This makes an association between a CCC interface and two LSPs, one for transmitting MPLS packets from the local provider edge switch to the remote provider edge switch and the other for receiving MPLS packets on the local provider edge switch from the remote provider edge switch.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <p><b><i>connection-name</i></b>—Connection name.</p> <p><b><i>interface interface-name.unit-number</i></b>—Interface name. Include the logical portion of the name, which corresponds to the logical unit number of the CCC interface.</p> <p><b><i>receive-lsp label-switched-path</i></b>—Name of the LSP from the connection's source. This LSP name was specified by the <b><i>label-switched-path</i></b> statement on the remote provider edge switch in the <b>protocols mpls</b> stanza.</p> <p><b><i>transmit-lsp label-switched-path</i></b>—Name of the LSP to the connection's destination. This LSP name was specified by the <b><i>label-switched-path</i></b> statement on the local provider edge switch in the <b>protocols mpls</b> stanza.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MPLS LSP Tunnel Cross-Connects Using CCC</a></li><li>• <a href="#">Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27</a></li><li>• <a href="#">Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect (CLI Procedure) on page 87</a></li><li>• <a href="#">Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure) on page 83</a></li><li>• <a href="#">MPLS Applications Feature Guide for Routing Devices</a></li></ul>                                                                                                                                                                                                 |

## remote-site-id

---

|                                 |                                                                                                                                                                                                                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>remote-site-id remote-site-ID;</code>                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn site <i>site-name</i> interface <i>interface-name</i> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols l2vpn site <i>site-name</i> interface <i>interface-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 11.1 for EX Series switches.                                                                                                                                                                               |
| <b>Description</b>              | Control the remote interface to which the interface should connect. If you do not explicitly configure the remote site ID, the order of the interfaces configured for the site determines the default value. This statement is optional.                                                                 |
| <b>Options</b>                  | <i>remote-site-ID</i> —Identifier specifying the interface on the remote PE router the Layer 2 VPN routing instance connects to.                                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Local Site on PE Routers in Layer 2 VPNs</a></li> <li>• <a href="#">Configuring an MPLS-Based Layer 2 VPN (CLI Procedure) on page 96</a></li> </ul>                                                                                 |

## revert-timer

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>revert-timer <i>seconds</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit protocols <a href="#">mpls</a> ],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | <p>Specify the amount of time that a label switched path (LSP) must wait before traffic reverts to a primary path. If during this time the primary path experiences any connectivity problem or stability problem, the timer is restarted.</p> <p>If you have configured a value of 0 seconds for the <b>revert-timer</b> statement and traffic is switched to the secondary path, the traffic remains on that path indefinitely. It is never switched back to the primary path unless you intervene.</p> |
| <b>Default</b>                  | 60 seconds                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <b><i>seconds</i></b> —Value in seconds.<br><b>Range:</b> 0 through 65,535 seconds                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Path Protection in an MPLS Network (CLI Procedure)</a> on page 79</li></ul>                                                                                                                                                                                                                                                                                                                                                               |



## route-distinguisher

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>route-distinguisher (as-number:id   ip-address:id);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>     | <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn mesh-group <i>mesh-group-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols vpls mesh-group <i>mesh-group-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols l2vpn mesh-group <i>mesh-group-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols vpls mesh-group <i>mesh-group-name</i>]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for EX Series switches.</p> <p>Support at [edit routing-instances <i>routing-instance-name</i> protocols vpls mesh-group <i>mesh-group-name</i>] hierarchy level introduced in Junos OS Release 11.2.</p> <p>Statement introduced in Junos OS Release 12.3 for ACX Series routers.</p> <p>Support at [edit routing-instances <i>routing-instance-name</i> protocols l2vpn mesh-group <i>mesh-group-name</i>] hierarchy level introduced in Junos OS Release 13.2.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>         | <p>Specify an identifier attached to a route, enabling you to distinguish to which VPN or VPLS the route belongs. Each routing instance must have a unique route distinguisher associated with it. The route distinguisher is used to place bounds around a VPN so that the same IP address prefixes can be used in different VPNs without having them overlap. If the instance type is <b>vrf</b>, the <b>route-distinguisher</b> statement is required.</p> <p>For Layer 2 VPNs and VPLS, if you configure the <b>l2vpn-use-bgp-rules</b> statement, you must configure a unique route distinguisher for each PE router participating in the routing instance.</p> <p>For other types of VPNs, we recommend that you use a unique route distinguisher for each PE router participating in specific routing instance. Although you can use the same route distinguisher on all PE routers for the same VPN routing instance, if you use a unique route distinguisher, you can determine the CE router from which a route originated within the VPN.</p> <p>For Layer 2 VPNs and VPLS, if you configure mesh groups, the route distinguisher in each mesh group must be unique.</p> |



**CAUTION:** We strongly recommend that if you change a route distinguisher that has already been configured, make the change during a maintenance window, as follows:

1. Deactivate the routing instance.
2. Change the route distinguisher.
3. Activate the routing instance.

This is not required if you are configuring the route distinguisher for the first time.

**Options** *as-number:number*—*as-number* is an assigned AS number, and *number* is any 2-byte or 4-byte value. The AS number can be from 1 through 4,294,967,295. If the AS number is a 2-byte value, the administrative number is a 4-byte value. If the AS number is a 4-byte value, the administrative number is a 2-byte value. A route distinguisher consisting of a 4-byte AS number and a 2-byte administrative number is defined as a type 2 route distinguisher in RFC 4364 *BGP/MPLS IP Virtual Private Networks (VPNs)*.



**NOTE:** In Junos OS Release 9.1 and later, the numeric range for AS numbers is extended to provide BGP support for 4-byte AS numbers, as defined in RFC 4893, *BGP Support for Four-octet AS Number Space*. All releases of Junos OS support 2-byte AS numbers. To configure a route distinguisher that includes a 4-byte AS number, append the letter “L” to the end of the AS number. For example, a route distinguisher with the 4-byte AS number 7,765,000 and an administrative number of 1,000 is represented as 7765000L:1000.

In Junos OS Release 9.2 and later, you can also configure a 4-byte AS number using the AS dot notation format of two integer values joined by a period: *<16-bit high-order value in decimal>.<16-bit low-order value in decimal>*. For example, the 4-byte AS number of 65,546 in the plain-number format is represented as 1.10 in AS dot notation format.

*ip-address:id*—IP address (*ip-address* is a 4-byte value) within your assigned prefix range and a 2-byte value for the *id*. The IP address can be any globally unique unicast address.

**Range:** 0 through 4,294,967,295 ( $2^{32} - 1$ ). If the router you are configuring is a BGP peer of a router that does not support 4-byte AS numbers, you need to configure a local AS number. For more information, see *Using 4-Byte Autonomous System Numbers in BGP Networks Technology Overview*.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- *Example: Configuring BGP Route Target Filtering for VPNs*
- *Example: Configuring FEC 129 BGP Autodiscovery for VPWS*
- *Configuring EVPN Routing Instances*
- *Configuring Routing Instances on PE Routers in VPNs*
- *l2vpn-use-bgp-rules*

## rsvp

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | rsvp;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols],<br>[edit protocols]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Enable Resource Reservation Protocol (RSVP) signaling.</p> <p>You must include the <b>rsvp</b> statement in the configuration to enable RSVP on the router.</p> <p>The primary purpose of RSVP in Junos OS for EX Series switches is to support dynamic signaling within label switched paths (LSPs).</p>                                                                                                                                                                                                                                                         |
| <b>Default</b>                  | RSVP is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Minimum RSVP Configuration</i></li> <li>• <a href="#">Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27</a></li> <li>• <a href="#">Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect (CLI Procedure) on page 87</a></li> <li>• <a href="#">Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure) on page 83</a></li> <li>• <a href="#">Configuring MPLS on EX8200 and EX4500 Provider Switches (CLI Procedure) on page 78</a></li> </ul> |

## secondary

---

|                                 |                                                                                                                                                                                                             |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>secondary <i>path-name</i> {<br/>    standby;<br/>}</code>                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit protocols <code>mpls label-switched-path</code> <i>lsp-name</i> ]                                                                                                                                     |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                        |
| <b>Description</b>              | Specify one or more secondary paths to use for the label switched path (LSP). You can configure more than one secondary path. All secondary paths are equal, and the first one that is available is chosen. |
| <b>Options</b>                  | <b><i>path-name</i></b> —Name of a secondary path that you created with the <b>path</b> statement.<br><br>The remaining statement is explained separately.                                                  |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Path Protection in an MPLS Network (CLI Procedure) on page 79</a></li></ul>                                                                 |

## signaling

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | signaling;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols<br>bgp family inet-mdt],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols<br>bgp family inet-mvpn],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols<br>bgp group <i>group-name</i> family inet-mdt],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols<br>bgp group <i>group-name</i> family inet-mvpn],<br>[edit routing-instances <i>routing-instance-name</i> protocols bgp family inet-mdt],<br>[edit routing-instances <i>routing-instance-name</i> protocols bgp family inet-mvpn],<br>[edit routing-instances <i>routing-instance-name</i> protocols bgp group <i>group-name</i> family<br>inet-mdt],<br>[edit routing-instances <i>routing-instance-name</i> protocols bgp group <i>group-name</i> family<br>inet-mvpn] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.4.<br>Statement introduced in Junos OS Release 11.1 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Enable signaling in BGP. For multicast distribution tree (MDT) subaddress family identifier (SAFI) NLRI signaling, configure signaling under the <b>inet-mdt</b> family. For multiprotocol BGP (MBGP) intra-AS NLRI signaling, configure signaling under the <b>inet-mvpn</b> family.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Source-Specific Multicast for Draft-Rosen Multicast VPNs</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## site (Layer 2 Circuits)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> site <i>site-name</i> {     hot-standby;     site-identifier <i>identifier</i>;     site-preference <i>preference-value</i> {         backup;         primary;     }     interface <i>interface-name</i> {         description <i>text</i>;         remote-site-id <i>remote-site-ID</i>;     } } </pre>                                                                                                    |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols l2vpn]</p>                                                                                                                                                                                                             |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for EX Series switches.</p> <p><b>hot-standby</b> option introduced in Junos OS Release 14.2 for MX Series routers.</p>                                                                                                                                                                                 |
| <b>Description</b>              | Specify the site name, site identifier, and interfaces connecting to the site. Allows you to configure a remote site ID for remote sites.                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | <p><b>hot-standby</b>—Turn on the protector behavior for the site. This keeps backup pseudowire in continuous standby mode and ready for traffic forwarding.</p> <p><b>site-identifier <i>identifier</i></b>—Numerical identifier for the site used as a default reference for the remote site ID.</p> <p><b><i>site-name</i></b>—Name of the site.</p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Configuring the Local Site on PE Routers in Layer 2 VPNs</li> <li><a href="#">Configuring an MPLS-Based Layer 2 VPN (CLI Procedure) on page 96</a></li> </ul>                                                                                                                                                                                                              |

## site-identifier (Layer 2 Circuits)

|                                 |                                                                                                                                                                                                                                          |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | site-identifier <i>identifier</i> ;                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn site <i>site-name</i> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols l2vpn site <i>site-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 11.1 for EX Series switches.                                                                                                               |
| <b>Description</b>              | Specify the numerical identifier for the local Layer 2 VPN site.                                                                                                                                                                         |
| <b>Options</b>                  | <i>identifier</i> —The numerical identifier for the Layer 2 VPN site, which can be any number from 1 through 65,534.                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Local Site on PE Routers in Layer 2 VPNs</a></li> <li>• <a href="#">Configuring an MPLS-Based Layer 2 VPN (CLI Procedure) on page 96</a></li> </ul>                 |

## standby

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | standby;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> (primary   secondary) <i>path-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> (primary   secondary) <i>path-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Enable the path to remain up at all times to provide instant switchover if connectivity problems occur.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Hot Standby of Secondary Paths for LSPs</a></li> <li>• <a href="#">Configuring Path Protection in an MPLS Network (CLI Procedure) on page 79</a></li> </ul>                                                                                                                                                                                                                                                                                               |

## traffic-engineering

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | traffic-engineering;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit protocols ospf   isis]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Enable the traffic engineering features of the specified routing protocol.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Default</b>                  | Traffic engineering is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27</a></li><li>• <a href="#">Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect (CLI Procedure) on page 87</a></li><li>• <a href="#">Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure) on page 83</a></li><li>• <a href="#">Configuring MPLS on EX8200 and EX4500 Provider Switches (CLI Procedure) on page 78</a></li><li>• <a href="#">Configuring an OSPF Network (J-Web Procedure)</a></li><li>• <a href="#">MPLS Applications Feature Guide for Routing Devices</a></li></ul> |



## vrf-table-label

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>vrf-table-label {     source-class-usage; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> ],<br>[edit routing-instances <i>routing-instance-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Support for the <b>source-class-usage</b> statement added in Junos OS Release 9.3.<br>Statement introduced in Junos OS Release 11.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | <p>Map the inner label of a packet to a specific VPN routing and forwarding (VRF) instance. This allows the examination of the encapsulated IP header. The first lookup is done on the VPN label to determine which VRF instance to refer to, and the second lookup is done on the IP header to determine how to forward packets to the correct end hosts.</p> <p>When you include the <b>vrf-table-label</b> statement in the configuration of a VRF routing instance, a label-switched interface (LSI) logical interface label is created and mapped to the VRF routing table. Any routes in the VRF routing table are advertised with the LSI logical interface label allocated for the VRF routing table. When packets destined for the VRF routing instance arrive on a core-facing interface, they are treated as if the enclosed IP packet arrived on the LSI interface and are then forwarded and filtered based on the correct table.</p> <p>All routes in a VRF routing instance configured with this option are advertised with one label allocated per VRF.</p> |
| <b>Options</b>                  | The remaining statement is explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Filtering Packets in Layer 3 VPNs Based on IP Headers</i></li> <li>• <i>Configuring EXP-Based Traffic Classification for VPLS</i></li> <li>• <i>Load Balancing and IP Header Filtering for Layer 3 VPNs</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## vrf-target

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>vrf-target {<br/>    community;<br/>    auto<br/>    import community-name;<br/>    export community-name;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems logical-system-name routing-instances routing-instance-name],<br/>[edit logical-systems logical-system-name routing-instances routing-instance-name protocols<br/>  l2vpn mesh-group mesh-group-name],<br/>[edit logical-systems logical-system-name routing-instances routing-instance-name protocols<br/>  vpls mesh-group mesh-group-name],<br/>[edit routing-instances routing-instance-name],<br/>[edit routing-instances routing-instance-name protocols l2vpn mesh-group<br/>  mesh-group-name],<br/>[edit routing-instances routing-instance-name protocols vpls mesh-group mesh-group-name],<br/>[edit switch-options]</pre>                                                      |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.3 for ACX Series routers.</p> <p>Statement introduced in Junos OS Release 14.1X53-D30 for QFX5100. Auto option also added at this time.</p>                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | <p>Specify a VRF target community. If you configure the <b>community</b> option only, default VRF import and export policies are generated that accept and tag routes with the specified target community. The purpose of the <b>vrf-target</b> statement is to simplify the configuration by allowing you to configure most statements at the <b>[edit routing-instances]</b> hierarchy level. In effect, this statement configures a single policy for import and a single policy for export to replace the per-VRF policies for every community.</p> <p>You can still create more complex policies by explicitly configuring VRF import and export policies using the <b>import</b> and <b>export</b> options.</p> |
| <b>Options</b>                  | <p><b>community</b>—Community name.</p> <p><b>auto</b>—Auto-derives the route target for QFX5100</p> <p><b>import community-name</b>—Allowed communities accepted from neighbors.</p> <p><b>export community-name</b>—Allowed communities sent to neighbors.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Configuring Policies for the VRF Table on PE Routers in VPNs</i></li><li>• <i>Example: Configuring FEC 129 BGP Autodiscovery for VPWS</i></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

## PART 3

# Administration

- [Routine Monitoring on page 179](#)
- [Operational Commands on page 187](#)



## CHAPTER 5

# Routine Monitoring

- [Verifying That MPLS Is Working Correctly on page 179](#)
- [Verifying Path Protection in an MPLS Network on page 183](#)

### Verifying That MPLS Is Working Correctly

---

To verify that MPLS is working correctly on EX Series switches, perform the following tasks:

1. [Verifying the Physical Layer on the Switches on page 179](#)
2. [Verifying the Routing Protocol on page 180](#)
3. [Verifying the Core Interfaces Being Used for the MPLS Traffic on page 180](#)
4. [Verifying RSVP on page 180](#)
5. [Verifying the Assignment of Interfaces for MPLS Label Operations on page 181](#)
6. [Verifying the Status of the CCC on page 181](#)
7. [Verifying traceroute for Layer 3 VPN on page 182](#)

### Verifying the Physical Layer on the Switches

**Purpose** Verify that the interfaces are up. Perform this verification task on each of the switches.

**Action** user@switch> **show interfaces ge- terse**

| Interface  | Admin | Link | Proto      | Local       | Remote |
|------------|-------|------|------------|-------------|--------|
| ge-0/0/0   | up    | up   |            |             |        |
| ge-0/0/0.0 | up    | up   |            |             |        |
| ge-0/0/1.0 | up    | up   | ccc        |             |        |
| ge-0/0/2.0 | up    | up   | ccc        |             |        |
| ge-0/0/3.0 | up    | up   | eth-switch |             |        |
| ge-0/0/4.0 | up    | up   | eth-switch |             |        |
| ge-0/0/5.0 | up    | up   | inet       | 10.1.5.1/24 |        |
| mpls       |       |      |            |             |        |
| ge-0/0/6.0 | up    | up   | inet       | 10.1.6.1/24 |        |
| mpls       |       |      |            |             |        |

**Meaning** The **show interfaces terse** command displays status information about the Gigabit Ethernet interfaces on the switch. This output verifies that the interfaces are **up**. The output for

the protocol family (**Proto** column) shows that interfaces **ge-0/0/1.0** and **ge-0/0/2.0** are configured as circuit cross-connect. The Local and Remote columns do not display IP addresses, because the **inet family** is not configured for CCC interfaces. The output for the protocol family of the core interfaces (**ge-0/0/0.5** and **ge-0/0/0.6**), shows that these interfaces are configured as both **inet** and **mpls**. The **Local** column for the core interfaces shows the IP address configured for these interfaces.

## Verifying the Routing Protocol

**Purpose** Verify the state of the configured routing protocol. You should perform this verification task on each of the switches. The state should be **Full**. If you have configured OSPF as the routing protocol, use the **show ospf neighbor** command to verify that the routing protocol is communicating with the switch neighbors. If you have configured IS-IS as the routing protocol, use the **show isis adjacency** command to verify that the routing protocol is communicating with the switch neighbors.

**Action** user@switch> **show ospf neighbor**

| Address   | Interface | State | ID          | Pri | Dead |
|-----------|-----------|-------|-------------|-----|------|
| 127.1.1.2 | ge-0/0/5  | Full  | 10.10.10.10 | 128 | 39   |

**Meaning** The **show ospf neighbor** command displays the status of the routing protocol that has been configured on this switch. The output shows that the state is **full**, meaning that the routing protocol is operating correctly—that is, hello packets are being exchanged between directly connected neighbors. For additional information on checking and monitoring routing protocols, see the [Junos OS Routing Protocols and Policies Command Reference](#).

## Verifying the Core Interfaces Being Used for the MPLS Traffic

**Purpose** Verify that the state of the MPLS interface is **Up**. You should perform this verification task on each of the switches.

**Action** user@switch> **show mpls interface**

| Interface | State | Administrative groups |
|-----------|-------|-----------------------|
| ge-0/0/5  | Up    | <none>                |

**Meaning** The **show mpls interface** command displays the status of the core interfaces that have been configured to belong to **family mpls**. This output shows that the interface configured to belong to **family mpls** is **up**.

## Verifying RSVP

**Purpose** Verify the state of the RSVP session. You should perform this verification task on each of the switches.

**Action** user@switch> `show rsvp session`

```
Ingress RSVP: 1 sessions
To From State Rt Style Labelin Labelout LSPname
127.1.1.3 127.1.1.1 Up 0 1 FF - 300064
lsp_to_pe2_ge1
Total 1 displayed, Up 1, Down 0

Egress RSVP: 1 sessions
To From State Rt Style Labelin Labelout LSPname
127.1.1.1 127.1.1.3 Up 0 1 FF 299968 -
lsp_to_pe1_ge1
Total 1 displayed, Up 1, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** This output confirms that the RSVP sessions are **Up**.

## Verifying the Assignment of Interfaces for MPLS Label Operations

**Purpose** Verify which interface is being used as the beginning of the CCC and which interface is being used to push the MPLS packet to the next hop. You should perform this task only on the provider edge switches.

**Action** user@switch> `show route forwarding-table family mpls`

```
MPLS:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0 dscd 50 1
0 user 0 recv 49 3
1 user 0 recv 49 3
2 user 0 recv 49 3
299776 user 0 Pop 541 2 ge-0/0/1.0
ge-0/0/1.0 (CCC) user 0 127.1.2.1 Push 299792 540 2 ge-0/0/5.0
```

**Meaning** This output shows that CCC has been set up on interface **ge-0/0/1.0**. The switch receives ingress traffic on **ge-0/0/1.0** with label **299776**. It pops that label and swaps it to label **299792**, which it pushes out on interface **ge-0/0/5.0**.

## Verifying the Status of the CCC

**Purpose** Verify the status of the CCC. You should perform this task only on the provider edge switches.

**Action** user@switch> show connections

```

CCC and TCC connections [Link Monitoring On]
Legend for status (St)
UN -- uninitialized
NP -- not present
WE -- wrong encapsulation
DS -- disabled
Dn -- down
-> -- only outbound conn is up
<- -- only inbound conn is up
Up -- operational
RmtDn -- remote CCC down
Restart -- restarting

Legend for connection types
if-sw: interface switching
rmt-if: remote interface switching
lsp-sw: LSP switching
tx-p2mp-sw: transmit P2MP switching
rx-p2mp-sw: receive P2MP switching

Legend for circuit types
intf -- interface
tlsp -- transmit LSP
rlsp -- receive LSP

```

| Connection/Circuit | Type   | St | Time last up    | # Up trans |
|--------------------|--------|----|-----------------|------------|
| ge1-to-pe2         | rmt-if | Up | Feb 17 05:00:09 | 1          |
| ge-0/0/1.0         | intf   | Up |                 |            |
| lsp_to_pe1_ge1     | tlsp   | Up |                 |            |
| lsp_to_pe2_ge1     | rlsp   | Up |                 |            |

**Meaning** The **show connections** command displays the status of the CCC connections. This output verifies that the CCC interface and its associated transmit and receive LSPs are **Up**.

## Verifying traceroute for Layer 3 VPN

**Purpose** Verify the route that packets take to a specified network host..

**Action** user@switch> run traceroute routing-instance vpn1 20.0.1.1  
 traceroute to 20.0.1.1 (20.0.1.1), 30 hops max, 40 byte packets  
 1 \* \* \*  
 2 \* \* \*  
 3 \* 20.0.1.1 (20.0.1.1) 6.077 ms 5.513 ms

**Meaning** The **run traceroute** command displays route that packets take to a specified network host. You can also use traceroute as a debugging tool to locate points of failure in a network. This output verifies that the Layer 3 VPN named *vpn1* is correctly configured and that the packets are able to traverse across *vpn1* to the destination host *20.0.1.1*.

**Related Documentation**

- [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS \(CLI Procedure\) on page 90](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect \(CLI Procedure\) on page 91](#)
- [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)



## Verifying Path Protection in an MPLS Network

---

To verify that path protection is working correctly on EX Series switches, perform the following tasks:

1. [Verifying the Primary Path on page 183](#)
2. [Verifying the RSVP-Enabled Interfaces on page 184](#)
3. [Verifying a Secondary Path on page 185](#)

### Verifying the Primary Path

**Purpose** Verify that the primary path is operational.

**Action** user@switch> show mpls lsp extensive ingress

```
Ingress LSP: 2 sessions

127.1.8.8
 From: 127.1.9.9, State: Up, ActiveRoute: 0, LSPname: lsp_to_240
 ActivePath: primary_path_lsp_to_240 (primary)
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 *Primary primary_path_lsp_to_240 State: Up
 Priorities: 7 0
 SmartOptimizeTimer: 180
 Exclude: red
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
 10.3.3.2 S 10.3.4.2 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
 20=Node-ID):
 10.3.3.2 10.3.4.2
 6 Mar 11 23:58:01.684 Selected as active path: due to 'primary'
 5 Mar 11 23:57:00.750 Record Route: 10.3.3.2 10.3.4.2
 4 Mar 11 23:57:00.750 Up
 3 Mar 11 23:57:00.595 Originate Call
 2 Mar 11 23:57:00.595 CSPF: computation result accepted 10.3.3.2 10.3.4.2
 1 Mar 11 23:56:31.135 CSPF failed: no route toward 10.3.2.2[25 times]
 Standby secondary_path_lsp_to_240 State: Up
 Standby secondary_path_lsp_to_240 State: Up
 Priorities: 7 0
 SmartOptimizeTimer: 180
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 1)
 10.3.5.2 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
 20=Node-ID):
 10.3.5.2
 7 Mar 11 23:58:01.684 Deselected as active: due to 'primary'
 6 Mar 11 23:46:17.298 Selected as active path
 5 Mar 11 23:46:17.295 Record Route: 5.5.5.2
 4 Mar 11 23:46:17.287 Up
 3 Mar 11 23:46:16.760 Originate Call
 2 Mar 11 23:46:16.760 CSPF: computation result accepted 10.3.5.2
 1 Mar 11 23:45:48.095 CSPF failed: no route toward 10.5.5.5[2 times]
 Created: Wed Mar 11 23:44:37 2009
 [Output truncated]
```

**Meaning** As indicated by the **ActivePath** in the output, the LSP **primary\_path\_lsp\_to\_240** is active.

## Verifying the RSVP-Enabled Interfaces

**Purpose** Verify the status of Resource Reservation Protocol (RSVP)-enabled interfaces and packet statistics.

**Action** user@switch> show RSVP interfaces

```

RSVP interface: 1 active
 Active Subscr- Static Available Reserved Highwater
Interface State resv iption BW BW BW mark
ge-0/0/20.0 Up 2 100% 1000Mbps 1000Mbps 0bps 0bps

```

**Meaning** This output verifies that RSVP is enabled and operational on interface **ge-0/0/20.0**.

## Verifying a Secondary Path

**Purpose** Verify that a secondary path is established.

**Action** Deactivate a switch that is critical to the primary path and then issue the following command:

user@switch> show mpls lsp extensive

```

Ingress LSP: 1 sessions

127.0.0.8
 From: 127.0.0.1, State: Up, ActiveRoute: 0, LSPname: lsp_to_240
 ActivePath: secondary_path_lsp_to_240 (secondary)
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 Primary primary_path_lsp_to_240 State: Dn
 Priorities: 7 0
 SmartOptimizeTimer: 180
 Exclude: red
 Will be enqueued for recomputation in 8 second(s).
 51 Mar 8 12:23:31.268 CSPF failed: no route toward 127.0.0.11[11420 times]
 50 Mar 4 15:35:25.610 Clear Call: CSPF computation failed
 49 Mar 4 15:35:25.610 CSPF: link down/deleted:
127.0.0.2(127.0.0.1:0)(127.0.0.1)->
0.0.0.0(127.0.0.20:0)(127.0.0.20)
 48 Mar 4 15:35:25.576 Deselected as active
 47 Mar 4 15:35:25.550 No Route toward dest
 46 Mar 4 15:35:25.550 ?????
 45 Mar 4 15:35:25.549 127.0.0.12: Down
 44 Mar 4 15:33:29.839 Selected as active path
 43 Mar 4 15:33:29.837 Record Route: 127.0.0.20 127.0.0.40
 42 Mar 4 15:33:29.835 Up
 41 Mar 4 15:33:29.756 Originate Call
 40 Mar 4 15:33:29.756 CSPF: computation result accepted 127.0.0.20 127.0.0.40

 39 Mar 4 15:33:00.395 CSPF failed: no route toward 127.0.0.11[7 times]
 38 Mar 4 15:30:31.412 Clear Call: CSPF computation failed
 37 Mar 4 15:30:31.412 CSPF: link down/deleted:
127.0.0.2(127.0.0.1:0)(127.0.0.1)->
0.0.0.0(127.0.0.20:0)(127.0.0.20)
 36 Mar 4 15:30:31.379 Deselected as active
 35 Mar 4 15:30:31.350 No Route toward dest
 34 Mar 4 15:30:31.350 ?????
 33 Mar 4 15:30:31.349 127.0.0.12: Down
 32 Mar 4 15:29:05.802 Selected as active path
 31 Mar 4 15:29:05.801 Record Route: 127.0.0.20 127.0.0.40
 30 Mar 4 15:29:05.801 Up
 29 Mar 4 15:29:05.686 Originate Call

```

```
28 Mar 4 15:29:05.686 CSPF: computation result accepted 127.0.0.20 127.0.0.40
27 Mar 4 15:28:35.852 CSPF failed: no route toward 127.0.0.11[132 times]
26 Mar 4 14:25:12.113 Clear Call: CSPF computation failed
25 Mar 4 14:25:12.113 CSPF: link down/deleted:
0.0.0.0(127.0.0.20:0)(127.0.0.20)->
0.0.0.0(10.10.10.10:0)(10.10.10.10)
*Standby secondary_path_lsp_to_240 State: Up
 Priorities: 7 0
 SmartOptimizeTimer: 180
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 1)
[Output truncated]
```

**Meaning** As indicated by the **ActivePath** in the output, the LSP **secondary\_path\_lsp\_to\_240** is active.

- Related Documentation**
- [Configuring Path Protection in an MPLS Network \(CLI Procedure\) on page 79](#)
  - [Understanding MPLS and Path Protection on EX Series Switches on page 11](#)


## CHAPTER 6

# Operational Commands

- clear mpls lsp
- clear rsvp session
- clear rsvp statistics
- ping mpls l2circuit
- ping mpls l2vpn
- ping mpls l3vpn
- ping mpls ldp
- ping mpls lsp-end-point
- ping mpls rsvp
- request mpls lsp adjust-autobandwidth
- show connections
- show link-management
- show link-management peer
- show link-management routing
- show link-management statistics
- show link-management te-link
- show mpls admin-groups
- show mpls call-admission-control
- show mpls cspf
- show mpls diffserv-te
- show route forwarding-table
- show mpls interface
- show mpls interface
- show mpls lsp
- show mpls path
- show rsvp interface
- show rsvp neighbor
- show rsvp session

- `show rsvp session`
- `show rsvp statistics`
- `show rsvp version`
- `show ted database`
- `show ted link`
- `show ted protocol`

## clear mpls lsp

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <a href="#">Syntax on page 189</a><br><a href="#">Syntax (EX and QFX Series Switches) on page 189</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Syntax</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <pre>clear mpls lsp &lt;autobandwidth&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;name <i>name</i>&gt; &lt;optimize   optimize-aggressive&gt; &lt;path <i>regular-expression</i>&gt; &lt;statistics&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Syntax (EX and QFX Series Switches)</b>                                                                                                                                                                                                                                                                                                                                                                                                                                        | <pre>clear mpls lsp &lt;autobandwidth&gt; &lt;name <i>name</i>&gt; &lt;optimize   optimize-aggressive&gt; &lt;path <i>regular-expression</i>&gt; &lt;statistics&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Release the routes and states associated with MPLS label-switched paths (LSPs), and start new LSPs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p><b>CAUTION:</b> This command disconnects existing Resource Reservation Protocol (RSVP) sessions on the ingress routing device. If there is a time lag between the old path being torn down and the new path being set up, this command might impact traffic traveling along the LSPs.</p> </div> </div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <p><b>none</b>—Reset and restart all LSPs that originated from this routing device; that is, all LSPs for which this routing device is the ingress routing device. Depending on the number of LSPs involved, it might take a while to restart all the LSPs.</p> <p><b>autobandwidth</b>—(Optional) Clear LSP autobandwidth counters.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>name <i>name</i></b>—(Optional) Reset and restart the specified LSP or group of LSPs. You can include wildcard characters in the interface name, as described in the <i>Junos Network Interfaces Configuration Guide</i>.</p> <p><b>optimize   optimize-aggressive</b>—(Optional) Run nonpreemptive optimization or aggressive optimization computation now.</p> |

**path *regular-expression***—(Optional) Clear the specific LSP path matching the specified regular expression.

**statistics**—(Optional) Clear LSP statistics. You cannot clear the MPLS LSP statistics using a regular expression (**name** and **path** options) on transit routers.

**Required Privilege Level**

clear

**Related Documentation**

- [show mpls lsp on page 250](#)
- [show rsvp session on page 285](#)

**List of Sample Output** [clear mpls lsp on page 190](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear mpls lsp

```
user@host> clear mpls lsp
```



## clear rsvp session

|                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                      | <a href="#">Syntax on page 191</a><br><a href="#">Syntax (EX and QFX Series Switches) on page 191</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Syntax</b>                              | <pre>clear rsvp session &lt;connection-destination address&gt; &lt;connection-source address&gt; &lt;gracefully&gt; &lt;logical-system (all   logical-system-name)&gt; &lt;lsp-id identifier&gt; &lt;name name&gt; &lt;optimize-fast-reroute&gt; &lt;tunnel-id identifier&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Syntax (EX and QFX Series Switches)</b> | <pre>clear rsvp session &lt;connection-destination address&gt; &lt;connection-source address&gt; &lt;gracefully&gt; &lt;lsp-id identifier&gt; &lt;name name&gt; &lt;optimize-fast-reroute&gt; &lt;tunnel-id identifier&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>                 | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>                         | Reset and restart Resource Reservation Protocol (RSVP) sessions.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                             | <p><b>none</b>—Reset and restart all RSVP sessions for which this routing device is the ingress, transit, or egress routing device.</p> <p><b>connection-source address</b>—(Optional) Source address for GMPLS and MPLS LSPs from the RSVP sender template.</p> <p><b>connection-destination address</b>—(Optional) Destination address for GMPLS and MPLS LSPs from the RSVP sender template.</p> <p><b>gracefully</b>—(Optional) Gracefully reset an RSVP session for a nonpacket LSP in two passes. In the first pass, the Admin-Status object is signaled along the path to the other endpoint of the RSVP session. In the second pass, the path used by the RSVP session is torn down. This option can only be used on the ingress or egress routing device of the RSVP session and is only valid for nonpacket LSPs.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>lsp-id identifier</b>—(Optional) LSP identifier (source port) for the RSVP sender template.</p> <p><b>name name</b>—(Optional) Reset and restart the specified RSVP session.</p> <p><b>optimize-fast-reroute</b>—(Optional) Begin fast reroute optimization.</p> |

**tunnel-id *identifier***—(Optional) Tunnel identifier (destination port) for the RSVP session.

**Required Privilege Level** clear

**Related Documentation**

- [clear mpls lsp on page 189](#)
- [show rsvp session on page 285](#)

**List of Sample Output** [clear rsvp session on page 192](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

[clear rsvp session](#)

```
user@host> clear rsvp session
```

## clear rsvp statistics

---

|                                    |                                                                                                                                                                                                                   |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 193</a><br><a href="#">Syntax (EX Series Switches) on page 193</a>                                                                                                                     |
| <b>Syntax</b>                      | clear rsvp statistics<br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                     |
| <b>Syntax (EX Series Switches)</b> | clear rsvp statistics                                                                                                                                                                                             |
| <b>Release Information</b>         | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                             |
| <b>Description</b>                 | Clear Resource Reservation Protocol (RSVP) packet and error statistics.                                                                                                                                           |
| <b>Options</b>                     | <b>none</b> —Clear RSVP packet and error statistics.<br><br><b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system. |
| <b>Required Privilege Level</b>    | clear                                                                                                                                                                                                             |
| <b>Related Documentation</b>       | <ul style="list-style-type: none"> <li>• <a href="#">show rsvp statistics on page 295</a></li> </ul>                                                                                                              |
| <b>List of Sample Output</b>       | <a href="#">clear rsvp statistics on page 193</a>                                                                                                                                                                 |
| <b>Output Fields</b>               | When you enter this command, you are provided feedback on the status of your request.                                                                                                                             |

## Sample Output

### clear rsvp statistics

```
user@host> clear rsvp statistics
```

## ping mpls l2circuit

**Syntax** ping mpls l2circuit (interface *interface-name* | virtual-circuit *virtual-circuit-id* neighbor *address*)  
 <count *count*>  
 <destination *address*>  
 <detail>  
 <exp *forwarding-class*>  
 <logical-system (all | *logical-system-name*)>  
 reply-mode (application-level-control-channel | ip-udp | no-reply)  
 <size *bytes*>  
 <source *source-address*>  
 <sweep>  
 <v1>

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
 The **size** and **sweep** options were introduced in Junos OS Release 9.6.  
 The **reply-mode** option and its suboptions are introduced in Junos OS Release 10.4R1.

**Description** Check the operability of the MPLS Layer 2 circuit connections. Type Ctrl+c to interrupt a ping mpls l2circuit command. You can also issue this command within logical systems.

**Options** **count** *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is 1 through 1,000,000. The default value is 5.

**destination** *address*—(Optional) Specify an address other than the default (127.0.0.1/32) for the ping echo requests. The address can be anything within the 127/8 subnet.

**detail**—(Optional) Display detailed information about the echo requests sent and received.

**exp** *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

**interface** *interface-name*—Ping an interface configured for the Layer 2 circuit on the egress provider edge (PE) router.

**logical-system** (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

**reply-mode**—(Optional) Reply mode for the ping request. This option has the following suboptions:

**application-level-control-channel**—Reply using an application level control channel.

**ip-udp**—Reply using an IPv4 or IPv6 UDP packet.

**no-reply**—Do not reply to the ping request.



**NOTE:** The **reply-mode** option and its suboptions **application-level-control-channel**, **ip-udp**, and **no-reply** are also available in Junos OS Release 10.2R4 and 10.3R2.

**size bytes**—(Optional) Size of the label-switched path (LSP) ping request packet (96 through 65468 bytes). Packets are 4-byte aligned. For example, If you enter a size of 97, 98, 99, or 100, the router or switch uses a size value of 100 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 96-byte minimum.

**source source-address**—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (lo.0).

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

**vl**—(Optional) Use the type 9 Layer 2 circuit type, length, and value (TLV).

**virtual-circuit virtual-circuit-id neighbor address**—Ping the virtual circuit identifier on the egress PE router or switch and the specified neighbor, testing the integrity of the Layer 2 circuit between the ingress and egress PE routers or switches.

**Additional Information** You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the egress PE router or switch (the router or switch receiving the MPLS echo packets) to ping a Layer 2 circuit.

In asymmetric MTU scenarios, the echo response may be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

**Required Privilege Level** network

**List of Sample Output** [ping mpls l2circuit interface on page 195](#)  
[ping mpls l2circuit virtual-circuit detail on page 195](#)  
[ping mpls l2circuit interface <interface-name> reply-mode on page 196](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with an error code are not counted in the received packets count. They are accounted for separately.

## Sample Output

### ping mpls l2circuit interface

```
user@host> ping mpls l2circuit interface so-1/0/0.1
Request for seq 1, to interface 69, labels <100000, 100208>, packet size 100
Reply for seq 1, return code: Egress-ok, time: 0.439 ms
```

### ping mpls l2circuit virtual-circuit detail

```
user@host> ping mpls l2circuit virtual-circuit 200 neighbor 10.255.245.122/32 detail
```

Request for seq 1, to interface 68, labels <100048, 100128>, packet size 100

Reply for seq 1, return code: Egress-ok time: 0.539 ms

**ping mpls l2circuit interface <interface-name> reply-mode**

```
user@host> ping mpls l2circuit interface lt-1/2/0.21 reply-mode application-level-control-channel
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

## ping mpls l2vpn

**Syntax** ping mpls l2vpn (instance *instance-name* local-site-id *local-site-id-number* remote-site-id *remote-site-id-number* | interface *interface-name*)  
 <bottom-label-ttl>  
 <count *count*>  
 <destination *address*>  
 <detail>  
 <exp *forwarding-class*>  
 <fec129>  
 <logical-system (all | *logical-system-name*)>  
 reply-mode (application-level-control-channel | ip-udp | no-reply)  
 <size *bytes*>  
 <source *source-address*>  
 <sweep>

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
**size** and **sweep** options introduced in Junos OS Release 9.6.  
**reply-mode** option and its suboptions introduced in Junos OS Release 10.4R1.  
**fec129** option introduced in Junos OS Release 12.2.

**Description** Check the operability of MPLS Layer 2 virtual private network (VPN) connections. Type Ctrl+c to interrupt a **ping mpls l2vpn** command.

**Options** **bottom-label-ttl**—(Optional) Display the time-to-live value for the bottom label in the label stack.

**count** *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is 1 through 1,000,000. The default value is 5.

**destination** *address*—(Optional) Specify an address other than the default (127.0.0.1/32) for the ping echo requests. The address can be anything within the 127/8 subnet.

**detail**—(Optional) Display detailed information about the echo requests sent and received.

**exp** *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

**fec129**—(Optional) Ping the LSP for an FEC 129 Layer 2 VPN connection.

**instance** *instance-name* local-site-id *local-site-id-number* remote-site-id *remote-site-id-number*—Ping a combination of the Layer 2 VPN routing instance name, the local site identifier, and the remote site identifier, testing the integrity of the Layer 2 VPN circuit (specified by the identifiers) between the ingress and egress provider edge (PE) routers or switches.

**interface** *interface-name*—Ping an interface configured for the Layer 2 VPN on the egress PE router or switch.

**logical-system** (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

**reply-mode**—(Optional) Reply mode for the ping request. This option has the following suboptions:

**application-level-control-channel**—Reply using an application level control channel.

**ip-udp**—Reply using an IPv4 or IPv6 UDP packet.

**no-reply**—Do not reply to the ping request.

The **reply-mode** option and its suboptions **application-level-control-channel**, **ip-udp**, and **no-reply** are also available in Junos OS Release 10.2R4 and 10.3R2.

**size bytes**—(Optional) Size of the label-switched path (LSP) ping request packet (96 through 65468 bytes). Packets are 4-byte aligned. For example, If you enter a size of 97, 98, 99, or 100, the router or switch uses a size value of 100 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 96-byte minimum.

**source source-address**—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

**Additional Information** You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the egress PE router or switch (the router or switch receiving the MPLS echo packets) to ping a Layer 2 circuit.

In asymmetric MTU scenarios, the echo response may be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

**Required Privilege Level** network

**Related Documentation**

- *Example: Configuring FEC 129 BGP Autodiscovery for VPWS*

**List of Sample Output**

[ping mpls l2vpn instance on page 199](#)  
[ping mpls l2vpn instance detail on page 199](#)  
[ping mpls l2vpn interface <interface-name> reply-mode on page 199](#)  
[ping mpls l2vpn fec129 interface <interface-name> on page 199](#)  
[ping mpls l2vpn fec129 instance <instance-name> on page 199](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with an error code are not counted in the received packets count. They are accounted for separately.



## Sample Output

### ping mpls l2vpn instance

```
user@host> ping mpls l2vpn instance vpn1 remote-site-id 1 local-site-id 2
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

### ping mpls l2vpn instance detail

```
user@host> ping mpls l2vpn instance vpn1 remote-site-id 1 local-site-id 2 detail
Request for seq 1, to interface 68, labels <800001, 100176>
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 68, labels <800001, 100176>
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 68, labels <800001, 100176>
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 68, labels <800001, 100176>
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 68, labels <800001, 100176>
Reply for seq 5, return code: Egress-ok

--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

### ping mpls l2vpn interface <interface-name> reply-mode

```
user@host> ping mpls l2vpn interface lt-1/2/0.21 reply-mode ip-udp
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

### ping mpls l2vpn fec129 interface <interface-name>

```
user@host> ping mpls l2vpn fec129 interface ge-2/0/5.0
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

### ping mpls l2vpn fec129 instance <instance-name>

```
user@PE1> ping mpls l2vpn fec129 instance FEC129-VPWS remote-id 2 remote-pe-address 2.2.2.2
local-id 1
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

## ping mpls l3vpn

---

**Syntax**    ping mpls l3vpn prefix *prefix-name*  
             <l3vpn-name>  
             <bottom-label-ttl>  
             <count *count*>  
             <destination *address*>  
             <detail>  
             <exp *forwarding-class*>  
             <logical-system (all | *logical-system-name*)>  
             <size *bytes*>  
             <source *source-address*>  
             <sweep>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                             Command introduced in Junos OS Release 9.0 for EX Series switches.  
                             The **size** and **sweep** options were introduced in Junos OS Release 9.6.

**Description**            Check the operability of an MPLS Layer 3 virtual private network (VPN) connection.  
                             Press Ctrl+c to interrupt a **ping mpls l3vpn** command.

**Options**    **bottom-label-ttl**—(Optional) Display the time-to-live value for the bottom label in the label stack.

**count *count***—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is 1 through **1,000,000**. The default value is **5**.

**destination *address***—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

**detail**—(Optional) Display detailed information about the echo requests sent and received.

**exp *forwarding-class***—(Optional) Value of the forwarding class for the MPLS ping packets.

**l3vpn-name**—(Optional) Layer 3 VPN name.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on the specified logical system.

**prefix *prefix-name***—Ping to test whether a prefix is present in a provider edge (PE) router's or switch's VPN routing and forwarding (VRF) table, by means of a Layer 3 VPN destination prefix. This option does not test the connection between a PE router or switch and a customer edge (CE) router or switch.

**size *bytes***—(Optional) Size of the label-switched path (LSP) ping request packet (**96** through **65468** bytes). Packets are 4-byte aligned. For example, If you enter a size of 97, 98, 99, or 100, the router or switch uses a size value of 100 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 96-byte minimum.

**source *source-address***—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (lo.0).

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

**Additional Information** You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the egress PE router or switch (the router or switch receiving the MPLS echo packets) to ping a Layer 2 circuit.

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes. The echo response is dropped because the PAD TLV is included in the echo response, making it too large.

If the Layer 3 VPN traffic transits a route reflector within the network, the **ping mpls l3vpn** command does not work.

**Required Privilege Level** network

**List of Sample Output** [ping mpls l3vpn on page 201](#)  
[ping mpls l3vpn detail on page 201](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. When an echo reply is received with an error code, the packets are not counted in the received packets count, and are counted separately.

## Sample Output

### ping mpls l3vpn

```
user@host> ping mpls l3vpn vpn1 prefix 10.255.245.122/32
!!!!
--- 1sping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

### ping mpls l3vpn detail

```
user@host> ping mpls l3vpn vpn1 prefix 10.255.245.122/32 detail
Request for seq 1, to interface 68, labels <100128, 100112>
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 68, labels <100128, 100112>
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 68, labels <100128, 100112>
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 68, labels <100128, 100112>
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 68, labels <100128, 100112>
Reply for seq 5, return code: Egress-ok
```

```
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

## ping mpls ldp

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>ping mpls ldp <i>fec</i> &lt;count <i>count</i>&gt; &lt;destination <i>address</i>&gt; &lt;detail&gt; &lt;exp <i>forwarding-class</i>&gt; &lt;instance <i>routing-instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;p2mp root-addr <i>ip-address</i> lsp-id <i>identifier</i>&gt; &lt;size <i>bytes</i>&gt; &lt;source <i>source-address</i>&gt; &lt;sweep&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b> | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>size</b> and <b>sweep</b> options introduced in Junos OS Release 9.6.</p> <p><b>instance</b> option introduced in Junos OS Release 10.0.</p> <p><b>p2mp</b>, <b>root-address</b>, and <b>lsp-id</b> options introduced in Junos OS Release 11.2.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>         | <p>Check the operability of MPLS LDP-signaled label-switched path (LSP) connections. Type Ctrl+c to interrupt a <b>ping mpls</b> command.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>             | <p><b>count</b> <i>count</i>—(Optional) Number of ping requests to send. If <b>count</b> is not specified, five ping requests are sent. The range of values is 1 through <b>1,000,000</b>. The default value is <b>5</b>.</p> <p><b>destination</b> <i>address</i>—(Optional) Specify an address other than the default (<b>127.0.0.1/32</b>) for the ping echo requests. The address can be anything within the <b>127/8</b> subnet.</p> <p><b>detail</b>—(Optional) Display detailed information about the echo requests sent and received.</p> <p><b>exp</b> <i>forwarding-class</i>—(Optional) Value of the forwarding class for the MPLS ping packets.</p> <p><b>fec</b>—Ping an LDP-signaled LSP using the forwarding equivalence class (FEC) prefix and length.</p> <p><b>instance</b> <i>routing-instance-name</i>—(Optional) Allows you to ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP.</p> <p><b>logical-system</b> (all   <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on the specified logical system.</p> <p><b>p2mp root-addr</b> <i>ip-address</i> <b>lsp-id</b> <i>identifier</i>—(Optional) Ping the end points of a point-to-multipoint LSP. Enter the IP address of the point-to-multipoint LSP root and the ID number of the point-to-multipoint LSP.</p> <p><b>size</b> <i>bytes</i>—(Optional) Size of the LSP ping request packet (<b>88</b> through <b>65468</b> bytes). Packets are 4-byte aligned. For example, If you enter a size of 89, 90, 91, or 92, the router or switch uses a size value of 92 bytes. If you enter a packet size that is smaller</p> |

than the minimum size, an error message is displayed reminding you of the 88-byte minimum.

**source source-address**—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

**Additional Information** If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

You can configure the ping interval for the **ping mpls ldp** command by specifying a new time in seconds using the **lsp-ping-interval** statement at the **[edit protocols ldp oam]** hierarchy level. For more information, see the *MPLS Applications Feature Guide for Routing Devices*.

In asymmetric MTU scenarios, the echo response may be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

**Required Privilege Level** network

**List of Sample Output** [ping mpls ldp fec count on page 204](#)  
[ping mpls ldp p2mp root-addr lsp-id on page 204](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with error codes are not counted in the received packets count. They are accounted for separately.

## Sample Output

### ping mpls ldp fec count

```
user@host> ping mpls ldp 10.255.245.222 count 10
!!!xxx...x--- lsping statistics ---10 packets transmitted, 3 packets received,
70% packet loss 4 packets received with error status, not counted as received.
```

### ping mpls ldp p2mp root-addr lsp-id

```
user@host> ping mpls ldp p2mp root-addr 10.1.1.1/32 lsp-id 1 count 1
Request for seq 1, to interface 71, no label stack.
Request for seq 1, to interface 70, label 299786
Reply for seq 1, egress 10.1.1.3, return code: Egress-ok, time: 18.936 ms
Local transmit time: 2009-01-12 03:50:03 PST 407.281 ms
Remote receive time: 2009-01-12 03:50:03 PST 426.217 ms
```

```
Reply for seq 1, egress 10.1.1.4, return code: Egress-ok, time: 18.936 ms
 Local transmit time: 2009-01-12 03:50:03 PST 407.281 ms
 Remote receive time: 2009-01-12 03:50:03 PST 426.217 ms
Reply for seq 1, egress 10.1.1.5, return code: Egress-ok, time: 18.936 ms
 Local transmit time: 2009-01-12 03:50:03 PST 407.281 ms
 Remote receive time: 2009-01-12 03:50:03 PST 426.217 ms
```

## ping mpls lsp-end-point

---

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>ping mpls lsp-end-point <i>prefix-name</i></code><br><code>&lt;count <i>count</i>&gt;</code><br><code>&lt;destination <i>address</i>&gt;</code><br><code>&lt;detail&gt;</code><br><code>&lt;exp <i>forwarding-class</i>&gt;</code><br><code>&lt;instance <i>routing-instance-name</i>&gt;</code><br><code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code><br><code>&lt;size <i>bytes</i>&gt;</code><br><code>&lt;source <i>source-address</i>&gt;</code><br><code>&lt;sweep&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b> | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br>The <b>size</b> and <b>sweep</b> options were introduced in Junos OS Release 9.6.<br>The <b>instance</b> option was introduced in Junos OS Release 10.0.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>         | Check the operability of MPLS label-switched path (LSP) endpoint connections. Type Ctrl+c to interrupt a <b>ping mpls</b> command.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>             | <p><b>count</b> <i>count</i>—(Optional) Number of ping requests to send. If <b>count</b> is not specified, five ping requests are sent. The range of values is 1 through <b>1,000,000</b>. The default value is <b>5</b>.</p> <p><b>destination</b> <i>address</i>—(Optional) Specify an address other than the default (<b>127.0.0.1/32</b>) for the ping echo requests. The address can be anything within the <b>127/8</b> subnet.</p> <p><b>detail</b>—(Optional) Display detailed information about the echo requests sent and received.</p> <p><b>exp</b> <i>forwarding-class</i>—(Optional) Value of the forwarding class for the MPLS ping packets.</p> <p><b>instance</b> <i>routing-instance-name</i>—(Optional) Ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP connection.</p> <p><b>logical-system</b> (all   <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on the specified logical system.</p> <p><b>prefix-name</b>—LDP forwarding equivalence class (FEC) prefix or RSVP LSP endpoint address.</p> <p><b>size</b> <i>bytes</i>—(Optional) Size of the LSP ping request packet. If the endpoint is LDP-based, the minimum size of the packet is <b>88</b> bytes. If the endpoint is RSVP-based, the minimum size of the packet is <b>100</b> bytes. The maximum size in either case is <b>65468</b> bytes.</p> <p><b>source</b> <i>source-address</i>—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (<b>lo.0</b>).</p> <p><b>sweep</b>—(Optional) Automatically determine the size of the maximum transmission unit (MTU).</p> |



**Additional Information** If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

In asymmetric MTU scenarios, the echo response may be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

**Required Privilege Level** network

**List of Sample Output** [ping mpls lsp-end-point detail on page 207](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with an error code are not counted in the received packets count. They are accounted for separately.

## Sample Output

### ping mpls lsp-end-point detail

```
user@host> ping mpls lsp-end-point 10.255.245.119 detail
Route to end point address is via LDP FEC
Request for seq 1, to interface 67, label 100032
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 67, label 100032
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 67, label 100032
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 67, label 100032
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 67, label 100032
Reply for seq 5, return code: Egress-ok
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

## ping mpls rsvp

---

**Syntax**    ping mpls rsvp  
             <lsp-name>  
             <count count>  
             <destination address>  
             <detail>  
             <dynamic-bypass>  
             <egress egress-address>  
             <exp forwarding-class>  
             <interface interface-name>  
             <logical-system (all | logical-system-name)>  
             <manual-bypass>  
             <multipoint>  
             <size bytes>  
             <source source-address>  
             <standby standby-path-name>  
             <sweep>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              The **egress** and **multipoint** options were introduced in Junos OS Release 9.2.  
                              The **size** and **sweep** options were introduced in Junos OS Release 9.6.  
                              The **dynamic-bypass** and **manual-bypass** options were introduced in Junos OS Release 10.2.

**Description**            Check the operability of MPLS RSVP-signaled label-switched path (LSP) connections.  
                              Type Ctrl+c to interrupt a **ping mpls** command.

**Options**                **count count**—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is 1 through 1,000,000. The default value is 5.

**destination address**—(Optional) Specify an address other than the default (127.0.0.1/32) for the ping echo requests. The address can be anything within the 127/8 subnet.

**detail**—(Optional) Display detailed information about the echo requests sent and received.



**NOTE:** When using the **detail** option, the reported time is based on the system time configured on the local and remote routers. Differences in these system times can result in inaccurate one way ping trip times being reported.

In practice, it is difficult to synchronize the system times of independent Juniper Networks routers with sufficient accuracy to provide a meaningful time value for the **detail** option (even when synchronized using NTP).

---

**dynamic-bypass**—(Optional) Ping dynamically generated bypass LSPs, used for protecting other LSPs.

**egress *egress-address***—(Optional) Only the specified egress router or switch responds to the ping request.

**exp *forwarding-class***—(Optional) Value of the forwarding class for the MPLS ping packets.

**interface**—(Optional) Specify the name of the interface protected by the manual bypass LSP. This option is only available when you have also used the **manual-bypass** option.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on the specified logical system.

***lsp-name***—Ping an RSVP-signaled LSP using an LSP name.

**manual-bypass**—(Optional) Ping manually configured bypass LSPs, used for protecting other LSPs. For this option, you must also specify the interface protected by the manual bypass LSP using the **interface** option.

**multipoint**—(Optional) Send ping requests to each of the egress routers or switches participating in a point-to-multipoint LSP. You can also include the **egress** option to ping a specific egress router or switch participating in a point-to-multipoint LSP.

**size *bytes***—(Optional) Size of the LSP ping request packet (100 through 65468 bytes). Packets are 4-byte aligned. For example, if you enter a size of 101, 102, 103, or 104, the router or switch uses a size value of 104 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 100-byte minimum.

**source *source-address***—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface.

**standby *standby-path-name***—(Optional) Name of the standby path.

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

**Additional Information** If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

In asymmetric MTU scenarios, the echo response may be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

**Required Privilege Level** network

**List of Sample Output** [ping mpls rsvp \(Echo Reply Received\) on page 210](#)  
[ping mpls rsvp \(Echo Reply with Error Code\) on page 210](#)

[ping mpls rsvp detail on page 210](#)

[ping mpls rsvp multipoint egress detail count on page 210](#)

[ping mpls rsvp multipoint detail count on page 210](#)

[ping mpls rsvp destination detail count size on page 211](#)

[ping mpls rsvp destination detail sweep size on page 211](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with an error code are not counted in the received packets count. They are accounted for separately.

## Sample Output

### ping mpls rsvp (Echo Reply Received)

```
user@host> ping mpls rsvp test1
!!!!!--- lsping statistics ---5 packets transmitted, 5 packets received, 0% packet
loss
```

### ping mpls rsvp (Echo Reply with Error Code)

```
user@host> ping mpls rsvp test2
!!xxx--- lsping statistics ---5 packets transmitted, 2 packets received, 60%
packet loss3 packets received with error status, not counted as received.
```

### ping mpls rsvp detail

```
user@host> ping mpls rsvp to-green detail
Request for seq 1, to interface 67, labels <100095, 0, 0>
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 67, labels <100095, 0, 0>
Reply for seq 2, return code: Egress-ok
```

### ping mpls rsvp multipoint egress detail count

```
user@host>ping mpls rsvp sample-lsp multipoint egress 192.168.1.3 detail count 1
Request for seq 1, to interface 70, label 299952
Request for seq 1, to interface 70, no label stack.
Request for seq 1, to interface 67, no label stack.

Reply for seq 1, egress 192.168.1.3, return code: Egress-ok, time: 0.242 ms
Local transmit time: 1205310695s 215737us
Remote receive time: 1205310695s 215979us

--- lsping, egress 192.168.1.3 statistics ---
1 packets transmitted, 1 packets received, 0% packet loss
```

### ping mpls rsvp multipoint detail count

```
user@host>ping mpls rsvp sample-lsp multipoint detail count 1
Request for seq 1, to interface 70, label 299952
Request for seq 1, to interface 70, no label stack.
Request for seq 1, to interface 67, no label stack.

Reply for seq 1, return code: Unknown TLV, time: 9.877 ms
Local transmit time: 1205310615s 347317us
Remote receive time: 1205310615s 357194us
Reply for seq 1, egress 192.168.1.3, return code: Egress-ok, time: 0.351 ms
```

```

Local transmit time: 1205310615s 347262us
Remote receive time: 1205310615s 347613us
Reply for seq 1, egress 192.168.1.13, return code: Egress-ok, time: 0.301 ms
Local transmit time: 1205310615s 347167us
Remote receive time: 1205310615s 347468us
Timeout for seq 1, egress 192.168.1.1
Timeout for seq 1, egress 192.168.1.4
Timeout for seq 1, egress 192.168.1.14

--- lsping, egress 192.168.1.1 statistics ---
1 packets transmitted, 0 packets received, 100% packet loss

--- lsping, egress 192.168.1.3 statistics ---
1 packets transmitted, 1 packets received, 0% packet loss

--- lsping, egress 192.168.1.4 statistics ---
1 packets transmitted, 0 packets received, 100% packet loss

--- lsping, egress 192.168.1.13 statistics ---
1 packets transmitted, 1 packets received, 0% packet loss

--- lsping, egress 192.168.1.14 statistics ---
1 packets transmitted, 0 packets received, 100% packet loss

```

#### ping mpls rsvp destination detail count size

```

user@host> ping mpls rsvp chaser-access destination 192.168.0.1 detail count 1 size 4468

Request for seq 1, to interface 88, label 299984, packet size 4468
Reply for seq 1, return code: Egress-ok, time: 44.804 ms
 Local transmit time: 2009-03-30 22:05:02 CEST 408.629 ms
 Remote receive time: 2009-03-30 22:05:02 CEST 453.433 ms

--- lsping statistics ---
1 packets transmitted, 1 packets received, 0% packet loss

```

#### ping mpls rsvp destination detail sweep size

```

user@router> ping mpls rsvp chaser-access destination 192.168.0.1 detail sweep size 4500
Request for seq 1, to interface 86, no label stack., packet size 100
Reply for seq 1, return code: Egress-ok, time: -39.264 ms
 Local transmit time: 2009-04-24 14:05:40 CEST 541.423 ms
 Remote receive time: 2009-04-24 14:05:40 CEST 502.159 ms
Request for seq 2, to interface 86, no label stack., packet size 2300
Reply for seq 2, return code: Egress-ok, time: -38.179 ms
 Local transmit time: 2009-04-24 14:05:41 CEST 544.240 ms
 Remote receive time: 2009-04-24 14:05:41 CEST 506.061 ms
Request for seq 3, to interface 86, no label stack., packet size 4500
Timeout for seq 3
Request for seq 4, to interface 86, no label stack., packet size 3400
Reply for seq 4, return code: Egress-ok, time: -37.545 ms
 Local transmit time: 2009-04-24 14:05:45 CEST 549.953 ms
 Remote receive time: 2009-04-24 14:05:45 CEST 512.408 ms
Request for seq 5, to interface 86, no label stack., packet size 3952
Reply for seq 5, return code: Egress-ok, time: -37.176 ms
 Local transmit time: 2009-04-24 14:05:46 CEST 555.881 ms
 Remote receive time: 2009-04-24 14:05:46 CEST 518.705 ms
Request for seq 6, to interface 86, no label stack., packet size 4228
Reply for seq 6, return code: Egress-ok, time: -36.962 ms
 Local transmit time: 2009-04-24 14:05:47 CEST 561.809 ms
 Remote receive time: 2009-04-24 14:05:47 CEST 524.847 ms

```

```
Request for seq 7, to interface 86, no label stack., packet size 4368
Reply for seq 7, return code: Egress-ok, time: -36.922 ms
 Local transmit time: 2009-04-24 14:05:48 CEST 568.738 ms
 Remote receive time: 2009-04-24 14:05:48 CEST 531.816 ms
Request for seq 8, to interface 86, no label stack., packet size 4440
Reply for seq 8, return code: Egress-ok, time: -36.855 ms
 Local transmit time: 2009-04-24 14:05:49 CEST 575.669 ms
 Remote receive time: 2009-04-24 14:05:49 CEST 538.814 ms
Request for seq 9, to interface 86, no label stack., packet size 4476
Timeout for seq 9
Request for seq 10, to interface 86, no label stack., packet size 4460
Reply for seq 10, return code: Egress-ok, time: -36.906 ms
 Local transmit time: 2009-04-24 14:05:53 CEST 584.382 ms
 Remote receive time: 2009-04-24 14:05:53 CEST 547.476 ms
Request for seq 11, to interface 86, no label stack., packet size 4480
Timeout for seq 11
Request for seq 12, to interface 86, no label stack., packet size 4472
Timeout for seq 12
Request for seq 13, to interface 86, no label stack., packet size 4468
Reply for seq 13, return code: Egress-ok, time: -36.943 ms
 Local transmit time: 2009-04-24 14:06:00 CEST 594.884 ms
 Remote receive time: 2009-04-24 14:06:00 CEST 557.941 ms
Request for seq 14, to interface 86, no label stack., packet size 4476
Timeout for seq 14
Request for seq 15, to interface 86, no label stack., packet size 4472
Timeout for seq 15

--- lsp ping sweep result---
Maximum Transmission Unit (MTU) is 4468 bytes
```

## request mpls lsp adjust-autobandwidth

|                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                      | <a href="#">Syntax on page 213</a><br><a href="#">Syntax (EX and QFX Series Switches) on page 213</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Syntax</b>                              | <pre>request mpls lsp adjust-autobandwidth &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;name <i>lsp-name</i>&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Syntax (EX and QFX Series Switches)</b> | <pre>request mpls lsp adjust-autobandwidth &lt;name <i>lsp-name</i>&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>                 | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>                         | <p>Manually trigger a bandwidth allocation adjustment for active label-switched paths (LSPs).</p> <p>Without running this command, the bandwidth adjustment is recomputed at a configurable interval. The default interval is 5 minutes. If you do not want to wait for the periodic adjustment (for example, during a software demonstration), this command is useful.</p> <p>During bandwidth allocation adjustment, the LSP stays up to enable the bandwidth to be changed without dropping any traffic. This functionality is often referred to as <i>make-before-break</i>.</p> |
| <b>Options</b>                             | <p><b>none</b>—Manually trigger a bandwidth allocation adjustment for all active LSP paths.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>name <i>lsp-name</i></b>—(Optional) Manually trigger a bandwidth allocation adjustment on the specified LSP only.</p>                                                                                                                                                                                              |
| <b>Additional Information</b>              | <p>For this command to work properly, the following conditions must exist:</p> <ul style="list-style-type: none"> <li>Automatic bandwidth allocation must be enabled on the LSP. The parameters for adjustment interval and maximum average bandwidth are not reset after you issue the <b>request mpls lsp adjust-autobandwidth</b> command.</li> <li>The difference between the adjusted bandwidth and the current LSP path bandwidth must be greater than the threshold limit.</li> </ul>                                                                                         |
| <b>Required Privilege Level</b>            | clear, maintenance                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>               | <ul style="list-style-type: none"> <li><i>auto-bandwidth</i></li> <li><i>Configuring Automatic Bandwidth Allocation for LSPs</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                          |

**List of Sample Output** [request mpls lsp adjust-auto-bandwidth on page 214](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

[request mpls lsp adjust-auto-bandwidth](#)

```
user@host> request mpls lsp adjust-auto-bandwidth
```



## show connections

**List of Syntax**    [Syntax on page 215](#)  
                           [Syntax \(EX Series Switches\) on page 215](#)

**Syntax**    show connections  
                   <brief | extensive>  
                   <all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch |  
                       remote-interface-switch>  
                   <down | up | up-down>  
                   <history>  
                   <labels>  
                   <logical-system (all | *logical-system-name*)>  
                   <*name*>  
                   <status>

**Syntax (EX Series Switches)**    show connections  
                                           <brief | extensive>  
                                           <all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch |  
                                               remote-interface-switch>  
                                           <down | up | up-down>  
                                           <history>  
                                           <labels>  
                                           <*name*>  
                                           <status>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                   Command introduced in Junos OS Release 9.5 for EX Series switches.

**Description**    Display information about the configured circuit cross-connect (CCC) connections.

**Options**    **none**—Display the standard level of output for all configured CCC connections.

**all**—(Optional) Display all connections.

**brief | extensive**—(Optional) Display the specified level of output. Use history to display information about connection history. Use labels to display labels used for transmit and receive LSPs. Use status to display information about the connection and interface status.

**interface-switch**—(Optional) Display interface switch connections only.

**lsp-switch**—(Optional) Display LSP switch connections only.

**p2mp-receive-switch**—(Optional) Display point-to-multipoint LSP to local interfaces switch connections only.

**p2mp-transmit-switch**—(Optional) Display local interface to point-to-multipoint LSP switch connections only.

**remote-interface-switch**—(Optional) Display remote interface switch connections only.

**down | up | up-down**—(Optional) Display nonoperational, operational, or both kinds of connections.

**history**—(Optional) Display information about connection history.

**labels**—(Optional) Display labels used for transmit and receive.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**name**—(Optional) Display information about the specified connection only.

**status**—(Optional) Display information about the connection and interface status.

**Required Privilege Level** view

**Output Fields** [Table 20 on page 216](#) describes the output fields for the **show connections** command. Output fields are listed in the approximate order in which they appear.

**Table 20: show connections Output Fields**

| Field Name                                         | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CCC and TCC connections [Link Monitoring On   Off] | Whether link monitoring is enabled: <b>On</b> or <b>Off</b> .                                                                                                                                                                                                                                                                                                                                                                             |
| Legend for Status (St)                             | Connection or circuit status. See the output's legend for an explanation of the status field values.                                                                                                                                                                                                                                                                                                                                      |
| Legend for connection types                        | Type of connection: <ul style="list-style-type: none"> <li><b>if-sw</b>—Layer 2 switching cross-connect.</li> <li><b>rmt-if</b>—Remote interface switch. While graceful restart is in progress, <b>rmt-if</b> will display a state (<b>St</b>) of <b>Restart</b>.</li> <li><b>lsp-sw</b>—LSP stitching cross-connect. While graceful restart is in progress, <b>lsp-sw</b> will display a state (<b>St</b>) of <b>Restart</b>.</li> </ul> |
| Legend for circuit types                           | Type of circuits: <ul style="list-style-type: none"> <li><b>intf</b>—Interface circuit.</li> <li><b>tlsp</b>—Transmit LSP circuit.</li> <li><b>rlsp</b>—Receive LSP circuit.</li> </ul>                                                                                                                                                                                                                                                   |
| Connection/Circuit                                 | Name of the configured CCC connection.                                                                                                                                                                                                                                                                                                                                                                                                    |
| Type                                               | Type of connection.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| St                                                 | State of the connection.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Time last up                                       | Time that the connection or circuit last transitioned to the <b>Up</b> (operational) state.                                                                                                                                                                                                                                                                                                                                               |

Table 20: show connections Output Fields (*continued*)

| Field Name | Field Description                                                                              |
|------------|------------------------------------------------------------------------------------------------|
| # Up trans | Number of times that the connection or circuit has transitioned to the Up (operational) state. |

## Sample Output

### show connections

```

user@switch> show connections
CCC and TCC connections [Link Monitoring On]
 Legend for status (St) Legend for connection types
 UN -- uninitialized if-sw: interface switching
 NP -- not present rmt-if: remote interface switching
 WE -- wrong encapsulation lsp-sw: LSP switching
 DS -- disabled
 Dn -- down
 -> -- only outbound conn is up intf -- interface
 <- -- only inbound conn is up tlsp -- transmit LSP
 Up -- operational rlsp -- receive LSP
 RmtDn -- remote CCC down
 Restart -- restarting

CCC Graceful restart : Restarting

Connection/Circuit Type St Time last up # Up trans
IFSW-ed if-sw Up Aug 5 15:39:15 1
 so-1/0/2.0 intf Up
 t1-0/1/2.0 intf Up
SW-db rmt-if Restart 0
 so-1/0/3.0 intf Up
 pro4-ca tlsp Dn
 pro4-ac rlsp NP

```

## show link-management

|                                 |                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show link-management                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                    |
| <b>Description</b>              | Display Multiprotocol Label Switching (MPLS) peer and traffic engineering link information.                                                                                                                                                                                                                              |
| <b>Options</b>                  | This command has no options.                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management peer on page 222</a></li> <li>• <a href="#">show link-management routing on page 224</a></li> <li>• <a href="#">show link-management statistics on page 227</a></li> <li>• <a href="#">show link-management te-link on page 229</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show link-management on page 221</a>                                                                                                                                                                                                                                                                         |
| <b>Output Fields</b>            | Table 21 on page 218 describes the output fields for the <b>show link-management</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                    |

**Table 21: show link-management Output Fields**

| Field Name        | Field Description                                                                                                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------|
| Peer Name         | Name of the peer.                                                                                                 |
| System identifier | Internal identifier for the peer. The range of values is 0 through 64,000.                                        |
| State             | State of the peer: <b>Up</b> or <b>Down</b> .                                                                     |
| Control address   | Address to which a control channel is established.                                                                |
| CC local ID       | Identifier assigned to the control channel by the local peer. The range of values is 1 through 4,294,967,296.     |
| CC remote ID      | Identifier assigned to the control channel by the remote peer. The range of values is 1 through 4,294,967,296.    |
| State             | State of the control channel: <b>Up</b> or <b>Down</b> .                                                          |
| TxSeqNum          | Sequence number of the hello message being sent to the peer. The range of values is 1 through 4,294,967,295.      |
| RcvSeqNum         | Sequence number of the last hello message received from the peer. The range of values is 0 through 4,294,967,295. |

Table 21: show link-management Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                           |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Flags</b>               | Code that provides information about the control channel. Currently supports only code value <b>R</b> , which indicates that the control channel is restarting after a failure in the control plane, as when the Link Management Protocol (LMP) process starts or restarts. |
| <b>TE links</b>            | Traffic-engineered links that are managed by their peer.                                                                                                                                                                                                                    |
| <b>TE link name</b>        | Name of the traffic-engineered link.                                                                                                                                                                                                                                        |
| <b>State</b>               | State of the traffic-engineered link: <b>Up</b> , <b>Down</b> , or <b>Init</b> .                                                                                                                                                                                            |
| <b>Local identifier</b>    | Identifier of the local side of the link.                                                                                                                                                                                                                                   |
| <b>Remote identifier</b>   | Identifier of the remote side of the link.                                                                                                                                                                                                                                  |
| <b>Local address</b>       | Address of the local side of the link.                                                                                                                                                                                                                                      |
| <b>Remote address</b>      | Address of the remote side of the link.                                                                                                                                                                                                                                     |
| <b>Encoding</b>            | Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include <b>SDH/SONET</b> , <b>Ethernet</b> , <b>Packet</b> , and <b>PDH</b> .                                                                               |
| <b>Switching</b>           | Type of switching that can be performed on the traffic-engineered link. Supported values are <b>PSC-1</b> and <b>Packet</b> .                                                                                                                                               |
| <b>Minimum bandwidth</b>   | Smallest single allocation of bandwidth possible on the traffic-engineered link. This number is equal to the smallest bandwidth interface that is a member of the traffic-engineered link (in bps).                                                                         |
| <b>Maximum bandwidth</b>   | Largest single allocation of bandwidth possible on the traffic-engineered link. This number is equal to the largest bandwidth interface that is a member of the link (in bps).                                                                                              |
| <b>Total bandwidth</b>     | Sum of the bandwidth, in bits per second (bps) and megabits per second (Mbps), of all interfaces that are members of the link.                                                                                                                                              |
| <b>Available bandwidth</b> | Sum of the bandwidths of all interfaces that are members of the link and that are not yet allocated (in bps).                                                                                                                                                               |
| <b>Name</b>                | Name of the interface.                                                                                                                                                                                                                                                      |
| <b>State</b>               | State of the interface: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                                          |
| <b>Local ID</b>            | Identifier of the local side of the interface.                                                                                                                                                                                                                              |
| <b>Remote ID</b>           | Identifier of the remote side of the interface.                                                                                                                                                                                                                             |
| <b>Bandwidth</b>           | Bandwidth, in bps or Mbps, of the member interface.                                                                                                                                                                                                                         |
| <b>Used</b>                | Whether the resource is allocated to an LSP: <b>Yes</b> or <b>No</b> .                                                                                                                                                                                                      |

Table 21: show link-management Output Fields (*continued*)

| Field Name | Field Description |
|------------|-------------------|
| LSP-name   | LSP name.         |

## Sample Output

### show link-management

```

user@host> show link-management
Peer name: PEER-A, System identifier: 11973
State: Up, Control address: 10.255.245.4
 CC local ID CC remote ID State TxSeqNum RcvSeqNum Flags
 24547 24547 Up 1027 1026
TE links:
 pro4-ba

TE link name: pro4-ba, State: Init
Local identifier: 2662, Remote identifier: 0, Encoding: SDH/SONET, Switching:
PSC-1,
Minimum bandwidth: 155.52Mbps, Maximum bandwidth: 155.52Mbps, Total bandwidth:
155.52Mbps,
Available bandwidth: 155.52Mbps
 Name State Local ID Remote ID Bandwidth Used LSP-name
 so-1/0/2 Up 21271 0 155.52Mbps No

```

## show link-management peer

|                                 |                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show link-management peer</code><br><code>&lt;name <i>peer-name</i>&gt;</code>                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                               |
| <b>Description</b>              | Display Multiprotocol Label Switching (MPLS) peer link information.                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <b>none</b> —Display all peer link information.<br><br><b>name <i>peer-name</i></b> —(Optional) Display information for the specified peer only.                                                                                                                                                                    |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management on page 218</a></li> <li>• <a href="#">show link-management routing on page 224</a></li> <li>• <a href="#">show link-management statistics on page 227</a></li> <li>• <a href="#">show link-management te-link on page 229</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show link-management peer on page 223</a>                                                                                                                                                                                                                                                               |
| <b>Output Fields</b>            | Table 22 on page 222 describes the output fields for the <b>show link-management peer</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                          |

Table 22: show link-management peer Output Fields

| Field Name          | Field Description                                                                                                                                                                                          |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Peer Name           | Name of the peer.                                                                                                                                                                                          |
| System identifier   | Internal identifier for the peer. The range of values is 0 through 64,000.                                                                                                                                 |
| State               | State of the peer: <b>Up</b> or <b>Down</b> .                                                                                                                                                              |
| Control address     | Address to which a control channel is established.                                                                                                                                                         |
| Hello interval      | How often the routing device sends Link Management Protocol (LMP) hello packets.                                                                                                                           |
| Hello dead interval | How long LMP waits before declaring the control channel to be dead. This is an interval during which the routing device receives no LMP hello packets from the neighbor on a control that is active or up. |
| CC local ID         | Identifier assigned to the control channel by the local peer. The range of values is 1 through 4,294,967,296.                                                                                              |
| CC remote ID        | Identifier assigned to the control channel by the remote peer. The range of values is 1 through 4,294,967,296.                                                                                             |



Table 22: show link-management peer Output Fields (*continued*)

| Field Name       | Field Description                                                                                                                                                                                                                                                           |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>State</b>     | State of the control channel: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                                    |
| <b>TxSeqNum</b>  | Sequence number of the hello message being sent to the peer. The range of values is <b>1</b> through <b>4,294,967,295</b> .                                                                                                                                                 |
| <b>RcvSeqNum</b> | Sequence number of the last hello message received from the peer. The range of values is <b>0</b> through <b>4,294,967,295</b> .                                                                                                                                            |
| <b>Flags</b>     | Code that provides information about the control channel. Currently supports only code value <b>R</b> , which indicates that the control channel is restarting after a failure in the control plane, as when the Link Management Protocol (LMP) process starts or restarts. |
| <b>TE links</b>  | Traffic-engineered links that are managed by their peer.                                                                                                                                                                                                                    |

## Sample Output

### show link-management peer

```

user@host> show link-management peer
Peer name: sonet, System identifier: 41448
State: Up, Control address: 70.70.70.70
Hello interval: 10000, Hello dead interval: 30000
 CC local ID CC remote ID State TxSeqNum RcvSeqNum Flags
 3265 0 ConfSnd 1 0 R
TE links:
to-sonet

```

## show link-management routing

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show link-management routing<br><peer <name <i>name</i> >   te-link <name <i>name</i> >><br><resource <name <i>name</i> >>                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Display Multiprotocol Label Switching (MPLS) peer or traffic engineering link information from the routing process.                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <p><b>none</b>—Display all peer and traffic-engineered link information.</p> <p><b>peer &lt;name <i>name</i>&gt;</b>—(Optional) Display information for all peers or for the specified peer only.</p> <p><b>resource &lt;name <i>name</i>&gt;</b>—(Optional) Display information for all resources or for the specified resource only.</p> <p><b>te-link &lt;name <i>name</i>&gt;</b>—(Optional) Display information for all traffic-engineered forwarding paths or for the specified path only.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management on page 218</a></li> <li>• <a href="#">show link-management peer on page 222</a></li> <li>• <a href="#">show link-management statistics on page 227</a></li> <li>• <a href="#">show link-management te-link on page 229</a></li> </ul>                                                                                                                                                                                     |
| <b>List of Sample Output</b>    | <a href="#">show link-management routing on page 226</a>                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Output Fields</b>            | Table 23 on page 224 describes the output fields for the <b>show link-management routing</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                        |

**Table 23: show link-management routing Output Fields**

| Field Name        | Field Description                                                          |
|-------------------|----------------------------------------------------------------------------|
| Peer Name         | Name of the peer.                                                          |
| System identifier | Internal identifier for the peer. The range of values is 0 through 64,000. |
| State             | State of the peer: Up or Down.                                             |
| Control address   | Address to which a control channel is established.                         |
| Control channel   | Interface over which control packets are sent.                             |

Table 23: show link-management routing Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>State</b>               | State of the control channel.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>TE link name</b>        | Traffic-engineered link name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>State</b>               | State of the traffic-engineered link: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Local identifier</b>    | Identifier of the local side of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Remote identifier</b>   | Identifier of the remote side of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Local address</b>       | Address of the local side of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Remote address</b>      | Address of the remote side of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Encoding</b>            | Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include <b>SDH/SONET</b> , <b>Ethernet</b> , and <b>Packet</b> .                                                                                                                                                                                                                                                                                                                                                   |
| <b>Minimum bandwidth</b>   | Smallest single allocation of bandwidth, in bits per second (bps) or megabits per second (Mbps), possible on the traffic-engineered link. This number is equal to the smallest bandwidth interface that is a member of the traffic-engineered link.                                                                                                                                                                                                                                                                                |
| <b>Maximum bandwidth</b>   | Largest single allocation of bandwidth, in bps or Mbps, possible on the traffic-engineered link. This number is equal to the largest bandwidth interface that is a member of the link (in bps).                                                                                                                                                                                                                                                                                                                                    |
| <b>Total bandwidth</b>     | Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Available bandwidth</b> | Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link and that are not yet allocated.                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Resource</b>            | Forwarding adjacency LSP information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Type</b>                | Type of resource. The type is always a forwarding adjacency LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>State</b>               | State of the LSP: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>System Identifier</b>   | Internal identifier for the peer. The range of values is <b>0</b> through <b>64,000</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Total bandwidth</b>     | Bandwidth resource, in bps or Mbps, on the TE-link learned from the routing process.                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Traffic parameters</b>  | <ul style="list-style-type: none"> <li>• <b>Encoding</b>—Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include <b>SDH/SONET</b>, <b>Ethernet</b>, and <b>Packet</b>.</li> <li>• <b>Switching</b>—Type of switching that can be performed on the traffic-engineered link: <b>PSC-1</b> and <b>Packet</b>.</li> <li>• <b>Granularity</b>—Layer 2 data for switching Layer 2 LSPs for this resource. Not supported. This value is always <b>unknown</b>.</li> </ul> |

## Sample Output

### show link-management routing

```

user@host> show link-management routing
Peer name: __rpd:fe-0/1/0.0, System identifier: 2147483649
State: Up, Control address: (null)
Control-channel State
fe-0/1/0.0 Active

Peer name: __rpd:fe-0/1/2.0, System identifier: 2147483650
State: Up, Control address: (null)
Control-channel State
fe-0/1/2.0 Active

Peer name: __rpd:so-0/2/0.0, System identifier: 2147483651
State: Down, Control address: (null)
Control-channel State
so-0/2/0.0 State

Peer name: __rpd:so-0/2/1.0, System identifier: 2147483652
State: Down, Control address: (null)
Control-channel State
so-0/2/1.0 State

...

TE link name: __rpd:fe-0/1/0.0, State: Up
Local identifier: 2147483649, Remote identifier: 0,
Local address: 192.168.37.66, Remote address: 192.168.37.66,
Encoding: Ethernet, Minimum bandwidth: 0bps, Maximum bandwidth: 100Mbps,
Total bandwidth: 100Mbps, Available bandwidth: 100Mbps

TE link name: __rpd:fe-0/1/2.0, State: Up
Local identifier: 2147483650, Remote identifier: 0,
Local address: 192.168.37.73, Remote address: 192.168.37.73,
Encoding: Ethernet, Minimum bandwidth: 0bps, Maximum bandwidth: 100Mbps,
Total bandwidth: 100Mbps, Available bandwidth: 100Mbps

TE link name: __rpd:so-0/2/0.0, State: Down
Local identifier: 2147483651, Remote identifier: 0,
Local address: 192.168.37.82, Remote address: 192.168.37.95,
Encoding: Ethernet, Minimum bandwidth: 0bps, Maximum bandwidth: 155.52Mbps,
Total bandwidth: 155.52Mbps, Available bandwidth: 155.52Mbps

...

Resource: falsp-bd, Type: LSP, State: Dn System identifier: 2147483652,
Total bandwidth: 0bps, Traffic parameters: Encoding: Packet, Switching: Packet,
Granularity: Unknown

Resource: falsp-be, Type: LSP, State: Up System identifier: 2147483654,
Total bandwidth: bw[1]=10Mbps, Traffic parameters: Encoding: Packet,
Switching: Packet, Granularity: Unknown

```

## show link-management statistics

|                                 |                                                                                                                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show link-management statistics<br><peer <name <i>name</i> >>                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Command introduced in Junos OS Release 8.0.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                             |
| <b>Description</b>              | Display statistical information for Link Management Protocol (LMP) packets.                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <b>none</b> —Display information for all peers.<br><br><b>peer &lt;name <i>name</i>&gt;</b> —(Optional) Display information for all peers or for the specified peer only.                                                                                                                                     |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management on page 218</a></li> <li>• <a href="#">show link-management peer on page 222</a></li> <li>• <a href="#">show link-management routing on page 224</a></li> <li>• <a href="#">show link-management te-link on page 229</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show link-management statistics on page 228</a>                                                                                                                                                                                                                                                   |
| <b>Output Fields</b>            | <a href="#">Table 24 on page 227</a> describes the output fields for the <b>show link-management statistics</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                              |

**Table 24: show link-management statistics Output Fields**

| Field Name                | Field Description                                                                                                                                                                                     |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Received packets          | Number of received packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.     |
| Received bad packets      | Number of received bad packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed. |
| Small packets             | Number of packets that are too small.                                                                                                                                                                 |
| Wrong protocol version    | Number of packets specifying the wrong LMP version.                                                                                                                                                   |
| Messages for unknown peer | Number of packets destined for an unknown peer.                                                                                                                                                       |
| Messages for bad state    | Number of packets indicating a state that does not match the recipient.                                                                                                                               |
| Stale acknowledgments     | Number of <b>configAck</b> and <b>LinkSummaryAck</b> packets received that have a stale message ID.                                                                                                   |

Table 24: show link-management statistics Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                              |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Stale negative acknowledgments</b> | Number of <b>configNack</b> and <b>LinkSummaryNack</b> packets received that have a stale message ID.                                                                                                                                                                                          |
| <b>Sent packets</b>                   | Number of sent packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.                                                                                                  |
| <b>Retransmitted packets</b>          | Number of retransmitted packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.                                                                                         |
| <b>Dropped packets</b>                | Number of packets sent, by message type, that have been dropped by the receiver after the LMP retransmission interval has been exceeded. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed. |

## Sample Output

### show link-management statistics

```

user@host> show link-management statistics peer pro4-a
Statistics for peer pro4-a
 Received packets
 Config: 1
 Hello: 2572
 Small packets: 0
 Wrong protocol version: 0
 Messages for unknown peer: 0
 Messages for bad state: 0
 Stale acknowledgments: 0
 Stale negative acknowledgments: 0
 Sent packets
 Config: 2
 ConfigAck: 1
 Hello: 2572
 Retransmitted packets
 Config: 1

```

## show link-management te-link

|                                 |                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show link-management te-link<br><brief   detail><br><name <i>name</i> >                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                            |
| <b>Description</b>              | Display the resources used to set up Multiprotocol Label Switching (MPLS) traffic-engineered forwarding paths.                                                                                                                                                                                                   |
| <b>Options</b>                  | <b>none</b> —Display information for all traffic-engineered links.<br><br><b>brief   detail</b> —(Optional) Display the specified level of output.<br><br><b>name <i>name</i></b> —(Optional) Display information for the specified traffic-engineered link only.                                                |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management on page 218</a></li> <li>• <a href="#">show link-management peer on page 222</a></li> <li>• <a href="#">show link-management routing on page 224</a></li> <li>• <a href="#">show link-management statistics on page 227</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show link-management te-link on page 230</a>                                                                                                                                                                                                                                                         |
| <b>Output Fields</b>            | Table 25 on page 229 describes the output fields for the <b>show link-management te-link</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                    |

Table 25: show link-management te-link Output Fields

| Field Name        | Field Description                                                                                                                                                                             |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TE link name      | Traffic-engineered link name.                                                                                                                                                                 |
| State             | State of the traffic-engineered link: <b>Up</b> or <b>Down</b> .                                                                                                                              |
| Local identifier  | Identifier of the local side of the link.                                                                                                                                                     |
| Remote identifier | Identifier of the remote side of the link.                                                                                                                                                    |
| Local address     | Address of the local side of the link.                                                                                                                                                        |
| Remote address    | Address of the remote side of the link.                                                                                                                                                       |
| Encoding          | Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include <b>SDH/SONET</b> , <b>Ethernet</b> , <b>Packet</b> , and <b>PDH</b> . |

Table 25: show link-management te-link Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                   |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Switching</b>           | Type of switching that can be performed on the traffic-engineered link. Supported values are <b>PSC-1</b> and <b>Packet</b> .                                                                                                                       |
| <b>Minimum bandwidth</b>   | Smallest single allocation of bandwidth, in bits per second (bps) or megabits per second (Mbps), possible on the traffic-engineered link. This number is equal to the smallest bandwidth interface that is a member of the traffic-engineered link. |
| <b>Maximum bandwidth</b>   | Largest single allocation of bandwidth, in bps or Mbps, possible on the traffic-engineered link. This number is equal to the largest bandwidth interface that is a member of the link.                                                              |
| <b>Total bandwidth</b>     | Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link (in bps).                                                                                                                                                      |
| <b>Available Bandwidth</b> | Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link and that are not yet allocated.                                                                                                                                |
| <b>Name</b>                | Name of the interface.                                                                                                                                                                                                                              |
| <b>State</b>               | State of the interface: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                  |
| <b>Local ID</b>            | Identifier of the local side of the interface.                                                                                                                                                                                                      |
| <b>Remote ID</b>           | Identifier of the remote side of the interface.                                                                                                                                                                                                     |
| <b>Bandwidth</b>           | Bandwidth, in bps or Mbps, of the member interface.                                                                                                                                                                                                 |
| <b>Used</b>                | Whether the resource is allocated to an LSP: <b>Yes</b> or <b>No</b> .                                                                                                                                                                              |
| <b>LSP-name</b>            | LSP name.                                                                                                                                                                                                                                           |

## Sample Output

### show link-management te-link

```

user@host> show link-management te-link
TE link name: FA-bd, State: Up
 Local identifier: 4144, Remote identifier: 0, Local address: 2.2.2.1,
 Remote address: 2.2.2.2, Encoding: Ethernet, Switching: Packet,
 Minimum bandwidth: 0bps, Maximum bandwidth: 0bps, Total bandwidth: 0bps,
 Available bandwidth: 0bps
 Name State Local ID Remote ID Bandwidth Used LSP-name
 falsp-bd Dn 43077 0 0bps No
TE link name: FA-be, State: Up
 Local identifier: 4145, Remote identifier: 0, Local address: 1.1.1.1,
 Remote address: 1.1.1.2, Encoding: Ethernet, Switching: Packet,
 Minimum bandwidth: 0bps, Maximum bandwidth: 10Mbps, Total bandwidth: 10Mbps,
 Available bandwidth: 8Mbps
 Name State Local ID Remote ID Bandwidth Used LSP-name
 falsp-be Up 43076 0 10Mbps Yes e2elasp-bf

```



## show mpls admin-groups

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 231</a><br><a href="#">Syntax (EX Series Switches) on page 231</a>                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Syntax</b>                      | <pre>show mpls admin-groups &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Syntax (EX Series Switches)</b> | show mpls admin-groups                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                         |
| <b>Description</b>                 | Display information about configured Multiprotocol Label Switching (MPLS) administrative groups.                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                     | <p><b>none</b>—Display information about the configured MPLS administrative groups.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display MPLS administrative group information for the specified instance. If <b><i>instance-name</i></b> is omitted, MPLS administrative group information for the master instance is displayed.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>List of Sample Output</b>       | <a href="#">show mpls admin-groups on page 231</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Output Fields</b>               | <p><a href="#">Table 26 on page 231</a> describes the output fields for the <b>show mpls admin-groups</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                              |

**Table 26: show mpls admin-groups Output Fields**

| Field Name       | Field Description                           |
|------------------|---------------------------------------------|
| <b>Group</b>     | Name of the administrative group.           |
| <b>Bit index</b> | Value assigned to the administrative group. |

## Sample Output

### show mpls admin-groups

```
user@host> show mpls admin-groups
Group Bit index
black 3
blue 2
```

|       |   |
|-------|---|
| gold  | 1 |
| green | 0 |

## show mpls call-admission-control

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 233</a><br><a href="#">Syntax (EX Series Switches) on page 233</a>                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Syntax</b>                      | <pre>show mpls call-admission-control &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;lsp-name&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Syntax (EX Series Switches)</b> | <pre>show mpls call-admission-control &lt;lsp-name&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>                 | Display Multiprotocol Label Switching (MPLS) label-switched path (LSP) call admission control (CAC) information.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                     | <p><b>none</b>—Display CAC information for all LSPs.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display MPLS LSP CAC information for the specified instance. If <b>instance-name</b> is omitted, MPLS LSP CAC information for the master instance is displayed.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>lsp-name</b>—(Optional) Display CAC information for the specified LSP only.</p> |
| <b>Additional Information</b>      | The available bandwidth on an LSP path at a particular class type is the total path bandwidth at that class type minus the total bandwidth reserved by any Layer 2 connection at that class type.                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>List of Sample Output</b>       | <a href="#">show mpls call-admission-control on page 234</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Output Fields</b>               | <a href="#">Table 27 on page 233</a> describes the output fields for the <b>show mpls call-admission-control</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                 |

**Table 27: show mpls call-admission-control Output Fields**

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Available bandwidth</b> | Current available bandwidth on each LSP path. Depending on whether the LSP is an E-LSP or a regular LSP, either per-class bandwidth or a single bandwidth value (corresponding to best-effort bandwidth at <b>ct0</b> ) is displayed. The available bandwidth on an LSP path at a particular class type is the total path bandwidth at that class type minus the total bandwidth reserved by some Layer 2 connections at that class type. |

Table 27: show mpls call-admission-control Output Fields (*continued*)

| Field Name         | Field Description                                                                                     |
|--------------------|-------------------------------------------------------------------------------------------------------|
| Layer2 connections | Different Layer 2 connections that had some bandwidth requirement and were admitted into an LSP path. |
| LSP name           | LSP pathname.                                                                                         |
| Neighbor address   | Neighbor address from which CAC and bandwidth booking are configured for Layer 2 circuits.            |
| Circuit            | Interface name and circuit information.                                                               |
| Primary            | LSP's primary standby path.                                                                           |
| Standby            | LSP's secondary standby path.                                                                         |
| VC bandwidth       | Bandwidth constraints associated with a Layer 2 circuit route.                                        |

## Sample Output

### show mpls call-admission-control

```

user@host# show mpls call-admission-control

LSP name: pro1-be
*Primary
 Available bandwidth: 0bps

LSP name: pro1-be-1
*Primary
 Available bandwidth: 60kbps

LSP name: pro1-be-gold
*Primary
 Available bandwidth: <ct0 50kbps> <ct1 20kbps> <ct2 30kbps> <ct3 0bps>
 Layer2 connections:
 Neighbor address: 10.255.245.215, Circuit: so-0/3/0.0(vc 5)
 VC bandwidth: <ct0 50kbps> <ct1 40kbps> <ct2 40kbps>

LSP name: pro1-be-gold-2
*Primary
 Available bandwidth: <ct0 0bps> <ct1 40kbps> <ct2 40kbps> <ct3 0bps>

LSP name: pro1-be-silver
*Primary prim1
 Available bandwidth: <ct0 10kbps> <ct1 20kbps> <ct2 0bps> <ct3 40kbps>
 Layer2 connections:
 Neighbor address: 10.255.245.215, Circuit: so-0/3/0.1(vc 3)
 VC bandwidth: <ct0 20kbps> <ct1 20kbps>
 Standby sec1
 Available bandwidth: <ct0 10kbps> <ct1 10kbps> <ct2 20kbps> <ct3 0bps>
 Layer2 connections:
 Neighbor address: 10.255.245.215, Circuit: so-0/3/0.1(vc 3)
 VC bandwidth: <ct0 20kbps> <ct1 20kbps>

```

## show mpls cspf

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 235</a><br><a href="#">Syntax (EX Series Switches) on page 235</a>                                                                                                                                                                                                                                                                                                                                        |
| <b>Syntax</b>                      | <pre>show mpls cspf &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                            |
| <b>Syntax (EX Series Switches)</b> | show mpls cspf                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                  |
| <b>Description</b>                 | Display Multiprotocol Label Switching (MPLS) Constrained Shortest Path First (CSPF) statistics.                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                     | <p><b>none</b>—Display MPLS CSFP statistics.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display MPLS CSPF information for the specified instance. If <b><i>instance-name</i></b> is omitted, MPLS CSPF information for the master instance is displayed.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>       | <a href="#">show mpls cspf on page 236</a>                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Output Fields</b>               | <p><a href="#">Table 28 on page 235</a> describes the output fields for the <b>show mpls cspf</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                               |

**Table 28: show mpls cspf Output Fields**

| Field Name          | Field Description                                     |
|---------------------|-------------------------------------------------------|
| <b>Queue length</b> | Number of LSPs queued for automatic path computation. |
| <b>current</b>      | Current queue length.                                 |
| <b>maximum</b>      | Maximum queue length (high-water mark).               |
| <b>dequeued</b>     | Number of aborted computation attempts.               |
| <b>Paths</b>        | Counters for label-switched path computations.        |
| <b>total</b>        | Sum of the next four fields.                          |

Table 28: show mpls cspf Output Fields (*continued*)

| Field Name          | Field Description                                                                          |
|---------------------|--------------------------------------------------------------------------------------------|
| <b>successful</b>   | Number of path computations that were successfully completed.                              |
| <b>no route</b>     | Number of path computations that failed because the destination is unreachable.            |
| <b>Sys Error</b>    | Number of path computations that failed because of lack of memory.                         |
| <b>CSPFs</b>        | Total number of CSPF computations. A single path might require multiple CSPF computations. |
| <b>Time</b>         | Time, in seconds, required to perform the label-switched path computation.                 |
| <b>Total</b>        | Total amount of time consumed by the CSPF path computation algorithm.                      |
| <b>CSPFs</b>        | Total number of CSPF computations.                                                         |
| <b>Avg per CSPF</b> | Average amount of time required for each CSPF computation.                                 |
| <b>% of rpd</b>     | Percentage of routing process CPU used in the CSPF computation.                            |

## Sample Output

### show mpls cspf

```

user@host> show mpls cspf
CSPF statistics
Queue length current maximum dequeued
 0 0 0
Paths total successful no route sys error CSPFs
 0 0 0 0 0
Time (secs) total CSPFs avg per CSPF % of rpd
 0.000000 0.000000 0.000000 0.0000

```

## show mpls diffserv-te

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 237</a><br><a href="#">Syntax (EX Series Switches) on page 237</a>                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Syntax</b>                      | <pre>show mpls diffserve-te &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                            |
| <b>Syntax (EX Series Switches)</b> | show mpls diffserve-te                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                          |
| <b>Description</b>                 | Display Multiprotocol Label Switching (MPLS) label-switched path (LSP) Differentiated Services (DiffServ) class and preemption priority information.                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                     | <p><b>none</b>—Display DiffServ classes and priorities used by MPLS LSPs.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display DiffServ classes and priorities used by MPLS LSPs for the specified instance. If <b><i>instance-name</i></b> is omitted, DiffServ information for the master instance is displayed.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>List of Sample Output</b>       | <a href="#">show mpls diffserv-te on page 238</a>                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Output Fields</b>               | <p><a href="#">Table 29 on page 237</a> describes the output fields for the <b>show mpls diffserv-te</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                |

**Table 29: show mpls diffserv-te Output Fields**

| Field Name             | Field Description                                                                                                                                                                                                                                                                       |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Bandwidth model</b> | Bandwidth constraint model supported. The maximum allocation model (MAM) for EXP-inferred LSPs (E-LSPs) is currently supported.                                                                                                                                                         |
| <b>TE class</b>        | DiffServ traffic engineering class.                                                                                                                                                                                                                                                     |
| <b>Traffic class</b>   | <p>MPLS class type that corresponds to the DiffServ traffic engineering class:</p> <ul style="list-style-type: none"> <li>• <b>ct0</b>—Best effort</li> <li>• <b>ct1</b>—Assured forwarding</li> <li>• <b>ct2</b>—Expedited forwarding</li> <li>• <b>ct3</b>—Network control</li> </ul> |

Table 29: show mpls diffserv-te Output Fields (*continued*)

| Field Name | Field Description                                                                                                                                                                                  |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Priority   | MPLS preemption priority for this class type, a value from 0 through 7. Interior gateway protocols (IGPs) distribute information about the available bandwidth for each traffic engineering class. |

## Sample Output

show mpls diffserv-te

```
user@host> show mpls diffserv-te
Bandwidth model: Maximum Allocation Model with support for E-LSPs.
TE class Traffic class Priority
te0 ct0 3
te1 ct1 2
```



## show route forwarding-table

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show route forwarding-table &lt;detail   extensive   summary&gt; &lt;ccc ccc-interface-name&gt; &lt;destination&gt; &lt;family family-name&gt; &lt;label label&gt; &lt;matching ip_prefix&gt; &lt;multicast&gt; &lt;vpn vpn&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Display the Routing Engine's forwarding table, including the network-layer prefixes and their next hops. This command is used to help verify that the routing protocol process has relayed the correction information to the forwarding table. The Routing Engine constructs and maintains one or more routing tables. From the routing tables, the Routing Engine derives a table of active routes, called the forwarding table.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <p><b>none</b>—Display the routes in the forwarding table.</p> <p><b>detail   extensive   summary</b>—(Optional) Display the specified level of output.</p> <p><b>ccc</b>—(Optional) Display the specified circuit cross-connect interface name for entries to match.</p> <p><b>destination</b>—(Optional) Display the destination prefix.</p> <p><b>family family-name</b>—(Optional) Display routing table entries for the specified family: <b>ethernet-switching</b>, <b>inet</b>, <b>inet6</b>, <b>iso</b>, <b>mpls</b>, <b>vlan classification</b>.</p> <p><b>label label</b>—(Optional) Display route entries for the specified label name.</p> <p><b>matching ip_prefix</b>—(Optional) Display route entries for the specified IP prefix.</p> <p><b>multicast</b>—(Optional) Display route entries for multicast routes.</p> <p><b>vpn vpn</b>—(Optional) Display route entries for the specified VPN.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27</a></li> <li>• <a href="#">Configuring MPLS on EX8200 and EX4500 Provider Switches (CLI Procedure) on page 78</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>    | <p><a href="#">show route forwarding-table on page 241</a></p> <p><a href="#">show route forwarding-table summary on page 242</a></p> <p><a href="#">show route forwarding-table extensive on page 242</a></p> <p><a href="#">show route forwarding-table ccc on page 244</a></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

[show route forwarding-table family \(MPLS\) on page 244](#)  
[show route forwarding-table family \(IPv6\) on page 244](#)  
[show route forwarding-table label on page 245](#)  
[show route forwarding-table matching on page 245](#)  
[show route forwarding-table multicast on page 245](#)

**Output Fields** Table 30 on page 240 lists the output fields for the **show route forwarding-table** command. Output fields are listed in the approximate order in which they appear. Field names might be abbreviated (as shown in parentheses) when no level of output is specified or when the **detail** keyword is used instead of the **extensive** keyword.

**Table 30: show route forwarding-table Output Fields**

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output                  |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|
| <b>Routing table</b>           | Name of the routing table (for example, <b>inet</b> , <b>inet6</b> , <b>mpls</b> ).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | All levels                       |
| <b>Address family</b>          | Address family (for example, <b>IP</b> , <b>IPv6</b> , <b>ISO</b> , <b>MPLS</b> ).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | All levels                       |
| <b>Destination</b>             | Destination of the route.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail</b> , <b>extensive</b> |
| <b>Route Type (Type)</b>       | How the route was placed into the forwarding table. When the <b>detail</b> keyword is used, the route type might be abbreviated (as shown in parentheses): <ul style="list-style-type: none"> <li><b>cloned (clon)</b>—(TCP or multicast only) Cloned route.</li> <li><b>destination (dest)</b>—Remote addresses directly reachable through an interface.</li> <li><b>destination down (iddn)</b>—Destination route for which the interface is unreachable.</li> <li><b>interface cloned (ifcl)</b>—Cloned route for which the interface is unreachable.</li> <li><b>route down (ifdn)</b>—Interface route for which the interface is unreachable.</li> <li><b>ignore (ignr)</b>—Ignore this route.</li> <li><b>interface (intf)</b>—Installed as a result of configuring an interface.</li> <li><b>permanent (perm)</b>—Routes installed by the kernel when the routing table is initialized.</li> <li><b>user</b>—Routes installed by the routing protocol process or as a result of the configuration.</li> </ul> | All levels                       |
| <b>Route reference (RtRef)</b> | Number of routes to reference.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail</b> , <b>extensive</b> |
| <b>Flags</b>                   | Route type flags: <ul style="list-style-type: none"> <li><b>none</b>—No flags are enabled.</li> <li><b>accounting</b>—Route has accounting enabled.</li> <li><b>cached</b>—Cache route.</li> <li><b>incoming-iface interface-number</b>—Check against incoming interface.</li> <li><b>prefix load balance</b>—Load balancing is enabled for this prefix.</li> <li><b>sent to PFE</b>—Route has been sent to the Packet Forwarding Engine.</li> <li><b>static</b>—Static route.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>extensive</b>                 |
| <b>Nexthop</b>                 | IP address of the next hop to the destination.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail</b> , <b>extensive</b> |

Table 30: show route forwarding-table Output Fields (*continued*)

| Field Name                        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Level of Output               |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| <b>Next hop type (Type)</b>       | <p>Next-hop type. When the <b>detail</b> keyword is used, the next-hop type might be abbreviated (as indicated in parentheses):</p> <ul style="list-style-type: none"> <li>• <b>broadcast (bcst)</b>—Broadcast.</li> <li>• <b>deny</b>—Deny.</li> <li>• <b>hold</b>—Next hop is waiting to be resolved into a unicast or multicast type.</li> <li>• <b>indexed (idxd)</b>—Indexed next hop.</li> <li>• <b>indirect (indr)</b>—Indirect next hop.</li> <li>• <b>local (locl)</b>—Local address on an interface.</li> <li>• <b>routed multicast (mcr)</b>—Regular multicast next hop</li> <li>• <b>multicast (mcst)</b>—Wire multicast next hop (limited to the LAN).</li> <li>• <b>multicast discard (mdsc)</b>—Multicast discard.</li> <li>• <b>multicast group (mgrp)</b>—Multicast group member.</li> <li>• <b>receive (rcv)</b>—Receive.</li> <li>• <b>reject (rjct)</b>—Discard. An ICMP unreachable message was sent.</li> <li>• <b>resolve (rslv)</b>—Resolving the next hop.</li> <li>• <b>unicast (ucst)</b>—Unicast.</li> <li>• <b>unilist (ulst)</b>—List of unicast next hops. A packet sent to this next hop goes to any next hop in the list.</li> </ul> | <b>detail, extensive</b>      |
| <b>Index</b>                      | Software index of the next hop that is used to route the traffic for a given prefix.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail, extensive none</b> |
| <b>Route interface-index</b>      | Logical interface index from which the route is learned. For example, for interface routes, this is the logical interface index of the route itself. For static routes, this field is zero. For routes learned through routing protocols, this is the logical interface index from which the route is learned.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>extensive</b>              |
| <b>Reference (NhRef)</b>          | Number of routes that refer to this next hop.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>none detail, extensive</b> |
| <b>Next-hop interface (Netif)</b> | Interface used to reach the next hop.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | <b>none detail, extensive</b> |
| <b>Alternate forward nh index</b> | Index number of the alternate next hop interface. Seen with <b>multicast</b> option only.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>extensive</b>              |
| <b>Next-hop L3 Interface</b>      | The next hop layer 3 interface. This option can be expressed as a VLAN name and is only seen with the <b>multicast</b> option.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>extensive</b>              |
| <b>Next-hop L2 Interfaces</b>     | The next hop layer 2 interfaces. Seen with <b>multicast</b> option only.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>extensive</b>              |

## Sample Output

### show route forwarding-table

```

user@switch> show route forwarding-table

Routing table: default.inet

```

| Internet:          |      |       |                  |      |       |       |             |
|--------------------|------|-------|------------------|------|-------|-------|-------------|
| Destination        | Type | RtRef | Next hop         | Type | Index | NhRef | Netif       |
| default            | user | 2     | 0:12:f2:21:cf:0  | ucst | 333   | 5     | me0.0       |
| default            | perm | 0     |                  | rjct | 36    | 2     |             |
| 0.0.0.0/32         | perm | 0     |                  | dscd | 34    | 1     |             |
| 2.2.2.0/24         | intf | 0     |                  | rslv | 1309  | 1     | ae0.0       |
| 2.2.2.0/32         | dest | 0     | 2.2.2.0          | recv | 1307  | 1     | ae0.0       |
| 2.2.2.1/32         | dest | 0     | 0:21:59:cc:89:c0 | ucst | 1320  | 1     | ae0.0       |
| 2.2.2.2/32         | intf | 0     | 2.2.2.2          | loc1 | 1308  | 2     |             |
| 2.2.2.2/32         | dest | 0     | 2.2.2.2          | loc1 | 1308  | 2     |             |
| 2.2.2.255/32       | dest | 0     | 2.2.2.255        | bcst | 1306  | 1     | ae0.0       |
| 3.3.3.0/24         | intf | 0     |                  | rslv | 1313  | 1     | ae1.0       |
| 3.3.3.0/32         | dest | 0     | 3.3.3.0          | recv | 1311  | 1     | ae1.0       |
| 3.3.3.1/32         | intf | 0     | 3.3.3.1          | loc1 | 1312  | 2     |             |
| 3.3.3.1/32         | dest | 0     | 3.3.3.1          | loc1 | 1312  | 2     |             |
| 3.3.3.2/32         | dest | 0     | 0:21:59:cc:89:c1 | ucst | 1321  | 24    | ae1.0       |
| 3.3.3.255/32       | dest | 0     | 3.3.3.255        | bcst | 1310  | 1     | ae1.0       |
| 4.4.4.0/24         | user | 0     | 3.3.3.2          | ucst | 1321  | 24    | ae1.0       |
| 8.8.8.8/32         | user | 0     | 3.3.3.2          | ucst | 1321  | 24    | ae1.0       |
| 9.9.9.9/32         | intf | 0     | 9.9.9.9          | loc1 | 1280  | 1     |             |
| 10.10.10.10/32     | user | 0     | 3.3.3.2          | ucst | 1321  | 24    | ae1.0       |
| 10.93.8.0/21       | intf | 0     |                  | rslv | 323   | 1     | me0.0       |
| 10.93.8.0/32       | dest | 0     | 10.93.8.0        | recv | 321   | 1     | me0.0       |
| 10.93.13.238/32    | intf | 0     | 10.93.13.238     | loc1 | 322   | 2     |             |
| 10.93.13.238/32    | dest | 0     | 10.93.13.238     | loc1 | 322   | 2     |             |
| 10.93.15.254/32    | dest | 0     | 0:12:f2:21:cf:0  | ucst | 333   | 5     | me0.0       |
| 10.93.15.255/32    | dest | 0     | 10.93.15.255     | bcst | 320   | 1     | me0.0       |
| 14.14.14.0/24      | ifdn | 0     |                  | rslv | 1319  | 1     | ge-0/0/25.0 |
| 14.14.14.0/32      | iddn | 0     | 14.14.14.0       | recv | 1317  | 1     | ge-0/0/25.0 |
| 14.14.14.2/32      | user | 0     |                  | rjct | 36    | 2     |             |
| 14.14.14.2/32      | intf | 0     | 14.14.14.2       | loc1 | 1318  | 2     |             |
| 14.14.14.2/32      | iddn | 0     | 14.14.14.2       | loc1 | 1318  | 2     |             |
| 14.14.14.255/32    | iddn | 0     | 14.14.14.255     | bcst | 1316  | 1     | ge-0/0/25.0 |
| 224.0.0.0/4        | perm | 1     |                  | mdsc | 35    | 1     |             |
| 224.0.0.1/32       | perm | 0     | 224.0.0.1        | mcst | 31    | 3     |             |
| 224.0.0.5/32       | user | 1     | 224.0.0.5        | mcst | 31    | 3     |             |
| 255.255.255.255/32 | perm | 0     |                  | bcst | 32    | 1     |             |

### show route forwarding-table summary

```
user@switch> show route forwarding-table summary
```

```
Routing table: default.inet
```

```
Internet:
```

```

user: 6 routes
perm: 5 routes
intf: 8 routes
dest: 12 routes
ifdn: 1 routes
iddn: 3 routes
```

### show route forwarding-table extensive

```
user@switch> show route forwarding-table summary
```

```
Routing table: default.inet [Index 0]
```

```
Internet:
```

```
Destination: default
```

```
Route type: user
```

```
Route reference: 2
```

```
Route interface-index: 0
```

```

Flags: sent to PFE, rt nh decoupled
Nexthop: 0:12:f2:21:cf:0
Next-hop type: unicast Index: 333 Reference: 5
Next-hop interface: me0.0

Destination: default
Route type: permanent
Route reference: 0 Route interface-index: 0
Flags: none
Next-hop type: reject Index: 36 Reference: 2

Destination: 0.0.0.0/32
Route type: permanent
Route reference: 0 Route interface-index: 0
Flags: sent to PFE
Next-hop type: discard Index: 34 Reference: 1

Destination: 2.2.2.0/24
Route type: interface
Route reference: 0 Route interface-index: 66
Flags: sent to PFE
Next-hop type: resolve Index: 1309 Reference: 1
Next-hop interface: ae0.0

Destination: 2.2.2.0/32
Route type: destination
Route reference: 0 Route interface-index: 66
Flags: sent to PFE
Nexthop: 2.2.2.0
Next-hop type: receive Index: 1307 Reference: 1
Next-hop interface: ae0.0

Destination: 2.2.2.1/32
Route type: destination
Route reference: 0 Route interface-index: 66
Flags: sent to PFE
Nexthop: 0:21:59:cc:89:c0
Next-hop type: unicast Index: 1320 Reference: 1
Next-hop interface: ae0.0

Destination: 2.2.2.2/32
Route type: interface
Route reference: 0 Route interface-index: 0
Flags: sent to PFE
Nexthop: 2.2.2.2
Next-hop type: local Index: 1308 Reference: 2

Destination: 2.2.2.2/32
Route type: destination
Route reference: 0 Route interface-index: 66
Flags: none
Nexthop: 2.2.2.2
Next-hop type: local Index: 1308 Reference: 2

Destination: 2.2.2.255/32
Route type: destination
Route reference: 0 Route interface-index: 66
Flags: sent to PFE
Nexthop: 2.2.2.255
Next-hop type: broadcast Index: 1306 Reference: 1
Next-hop interface: ae0.0

```

## show route forwarding-table ccc

```

user@switch> show route forwarding-table ccc ge-0/0/0.10
Routing table: default.mpls
MPLS:
Destination Type RtRef Next hop Type Index NhRef Netif
ge-0/0/0.10 (CCC) user 0 3.3.3.2 Push 300112 1343 2 ae1.0

```

## show route forwarding-table family (MPLS)

```

user@switch> show route forwarding-table family mpls

Routing table: default.mpls
MPLS:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0
0 user 0 recv 49 3
1 user 0 recv 49 3
2 user 0 recv 49 3
299776 user 0 Pop 1334 2 ge-0/0/0.10
299792 user 0 Pop 1339 2 ge-0/0/0.14
299808 user 0 Pop 1341 2 ge-0/0/0.2
299824 user 0 Pop 1344 2 ge-0/0/0.11
299840 user 0 Pop 1345 2 ge-0/0/0.13
299856 user 0 Pop 1346 2 ge-0/0/0.18
299872 user 0 Pop 1347 2 ge-0/0/0.16
299888 user 0 Pop 1348 2 ge-0/0/0.7
299904 user 0 Pop 1349 2 ge-0/0/0.20
299920 user 0 Pop 1350 2 ge-0/0/0.19
299936 user 0 Pop 1351 2 ge-0/0/0.17
299952 user 0 Pop 1352 2 ge-0/0/0.9
299968 user 0 Pop 1353 2 ge-0/0/0.1
299984 user 0 Pop 1354 2 ge-0/0/0.12
300000 user 0 Pop 1355 2 ge-0/0/0.8
300016 user 0 Pop 1356 2 ge-0/0/0.4
300032 user 0 Pop 1357 2 ge-0/0/0.5
300048 user 0 Pop 1358 2 ge-0/0/0.3
300064 user 0 Pop 1359 2 ge-0/0/0.15
ge-0/0/0.1 (CCC) user 0 3.3.3.2 Push 300064 1340 2 ae1.0
ge-0/0/0.2 (CCC) user 0 3.3.3.2 Push 299872 1328 2 ae1.0
ge-0/0/0.3 (CCC) user 0 3.3.3.2 Push 299792 1323 2 ae1.0
ge-0/0/0.4 (CCC) user 0 3.3.3.2 Push 300016 1337 2 ae1.0
ge-0/0/0.5 (CCC) user 0 3.3.3.2 Push 299824 1325 2 ae1.0
ge-0/0/0.7 (CCC) user 0 3.3.3.2 Push 299920 1331 2 ae1.0
ge-0/0/0.8 (CCC) user 0 3.3.3.2 Push 299840 1326 2 ae1.0
ge-0/0/0.9 (CCC) user 0 3.3.3.2 Push 299888 1329 2 ae1.0
ge-0/0/0.10 (CCC) user 0 3.3.3.2 Push 300112 1343 2 ae1.0
ge-0/0/0.11 (CCC) user 0 3.3.3.2 Push 299776 1322 2 ae1.0
ge-0/0/0.12 (CCC) user 0 3.3.3.2 Push 299952 1333 2 ae1.0
ge-0/0/0.13 (CCC) user 0 3.3.3.2 Push 300096 1342 2 ae1.0
ge-0/0/0.14 (CCC) user 0 3.3.3.2 Push 299984 1335 2 ae1.0
ge-0/0/0.15 (CCC) user 0 3.3.3.2 Push 299936 1332 2 ae1.0
ge-0/0/0.16 (CCC) user 0 3.3.3.2 Push 299808 1324 2 ae1.0
ge-0/0/0.17 (CCC) user 0 3.3.3.2 Push 300000 1336 2 ae1.0
ge-0/0/0.18 (CCC) user 0 3.3.3.2 Push 300032 1338 2 ae1.0
ge-0/0/0.19 (CCC) user 0 3.3.3.2 Push 299904 1330 2 ae1.0
ge-0/0/0.20 (CCC) user 0 3.3.3.2 Push 299856 1327 2 ae1.0

```

## show route forwarding-table family (IPv6)

```

user@switch> show route forwarding-table family inet6

```

```

Routing table: default.inet6
Internet6:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0 rjct 44 1
::/128 perm 0 dscd 42 1
ff00::/8 perm 0 mdsc 43 1
ff02::1/128 perm 0 ff02::1 mcst 39 1

```

```

Routing table: default-switch.inet6
Internet6:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0 rjct 530 1
::/128 perm 0 dscd 528 1
2:1::3a00/312 user 0 indr 131070 2
 comp 572 1
2:1::3a82/320 user 0 indr 131071 3
 comp 573 1
2:1::3af0/320 user 0 indr 131071 3
 comp 573 1
2:1:0:ff00::/56 user 0 mdsc 529 2
ff00::/8 perm 0 mdsc 529 2
ff02::1/128 perm 0 ff02::1 mcst 526 1

```

```

Routing table: __master.anon__.inet6
Internet6:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0 rjct 554 1
::/128 perm 0 dscd 552 1
ff00::/8 perm 0 mdsc 553 1
ff02::1/128 perm 0 ff02::1 mcst 550 1

```

### show route forwarding-table label

```
user@switch> show route forwarding-table label 29976
```

```

Routing table: default.mpls
MPLS:
Destination Type RtRef Next hop Type Index NhRef Netif
299776 user 0 Pop 1334 2 ge-0/0/0.10

```

### show route forwarding-table matching

```
user@switch> show route forwarding-table matching 3
```

```

Routing table: default.inet
Internet:

```

### show route forwarding-table multicast

```
user@switch> show route forwarding-table multicast
```

```

Routing table: default.inet
Internet:
Destination Type RtRef Next hop Type Index NhRef Netif
224.0.0.0/4 perm 1 mdsc 35 1
224.0.0.1/32 perm 0 224.0.0.1 mcst 31 3
224.0.0.5/32 user 1 224.0.0.5 mcst 31 3

```

```

Routing table: __master.anon__.inet
Internet:
Destination Type RtRef Next hop Type Index NhRef Netif
224.0.0.0/4 perm 0 mdsc 1289 1

```

224.0.0.1/32      perm      0 224.0.0.1

mcst 1285      1

Routing table: default.inet6

Internet6:

| Destination | Type | RtRef | Next hop | Type | Index | NhRef | Netif |
|-------------|------|-------|----------|------|-------|-------|-------|
| ff00::/8    | perm | 0     |          | mdsc | 43    | 1     |       |
| ff02::1/128 | perm | 0     | ff02::1  | mcst | 39    | 1     |       |



## show mpls interface

**Syntax** `show mpls interface`

**Release Information** Command introduced in Junos OS Release 9.5 for EX Series switches.

**Description** Display information about MPLS-enabled interfaces. MPLS is enabled on an interface when the interface is configured with both the `set protocols mpls interface interface-name` and `set interfaces interface-name unit 0 family mpls` commands.

**Required Privilege Level** view

- Related Documentation**
- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
  - [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS \(CLI Procedure\) on page 90](#)
  - [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect \(CLI Procedure\) on page 91](#)
  - [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)

**List of Sample Output** [show mpls interface on page 247](#)

**Output Fields** [Table 31 on page 247](#) describes the output fields for the `show mpls interface` command. Output fields are listed in the approximate order in which they appear.

**Table 31: show mpls interface Output Fields**

| Field Name                   | Field Description                                      |
|------------------------------|--------------------------------------------------------|
| <b>Interface</b>             | Name of the interface.                                 |
| <b>State</b>                 | State of the interface: <b>Up</b> or <b>Dn</b> (down). |
| <b>Administrative groups</b> | Administratively assigned colors of the link.          |

## Sample Output

`show mpls interface`

```
user@switch> show mpls interface
Interface State Administrative groups
so-1/0/0.0 Up Blue Yellow Red
```

## show mpls interface

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 248</a><br><a href="#">Syntax (EX Series Switches) on page 248</a>                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Syntax</b>                      | <pre>show mpls interface &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Syntax (EX Series Switches)</b> | show mpls interface                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                |
| <b>Description</b>                 | Display information about Multiprotocol Label Switching (MPLS)-enabled interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                     | <p><b>none</b>—Display information about MPLS-enabled interfaces.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information about MPLS-enabled interfaces for the specified routing instance. If <b>instance-name</b> is omitted, information about MPLS-enabled interfaces is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Additional Information</b>      | MPLS is enabled on an interface when the interface is configured with both the <b>set protocol mpls interface <i>interface-name</i></b> and <b>set interface <i>interface-name</i> unit 0 family mpls</b> statements.                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>       | <a href="#">show mpls interface on page 249</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Output Fields</b>               | <p><a href="#">Table 32 on page 248</a> describes the output fields for the <b>show mpls interface</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                        |

**Table 32: show mpls interface Output Fields**

| Field Name                   | Field Description                                      |
|------------------------------|--------------------------------------------------------|
| <b>Interface</b>             | Name of the interface.                                 |
| <b>State</b>                 | State of the interface: <b>Up</b> or <b>Dn</b> (down). |
| <b>Administrative groups</b> | Administratively assigned colors of the link.          |

Table 32: show mpls interface Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Maximum labels                        | Maximum number of MPLS labels upon which MPLS can operate on a logical interface. This is configured using the <b>maximum-labels</b> statement at the [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family mpls] or the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family mpls] hierarchy levels.                                                                                                                                                                                                            |
| Static protection revert time         | Time (in seconds) that a static LSP must wait before traffic reverts from the bypass path to the original path. This is configured using the <b>protection-revert-time</b> statement at the [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static] or the [edit protocols mpls interface <i>interface-name</i> static] hierarchy levels.                                                                                                                                                                                                                    |
| Always mark connection protection tlv | Enabled or Disabled: Enabled indicates that the <b>always-mark-connection-protection-tlv</b> statement is configured at the [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static] or the [edit protocols mpls interface <i>interface-name</i> static] hierarchy levels. When this statement is configured, it marks all OAM traffic transiting this interface in preparation for switching the traffic to an alternate path based on the OAM functionality. To switch traffic to the bypass LSP, the <b>switch-away-lsps</b> statement must be configured. |
| Switch away lsps                      | Enabled or Disabled: Enabled indicates that the <b>switch-away-lsps</b> statement is configured at the [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static] or the [edit protocols mpls interface <i>interface-name</i> static] hierarchy levels. This enables you to switch an LSP away from a network node using a bypass LSP. This feature can be used in maintenance of active networks when a network device needs to be replaced without interrupting traffic passing through the network. The LSPs can be either static or dynamic.                |

## Sample Output

### show mpls interface

```

user@host> show mpls interface

Interface: ge-0/2/1.57
State: Up
Administrative group: <none>
Maximum labels: 5
Static protection revert time: 5 seconds
Always mark connection protection tlv: Disabled
Switch away lsps : Disabled

```

## show mpls lsp

**List of Syntax**    [Syntax on page 250](#)  
                          [Syntax \(EX Series Switches\) on page 250](#)

**Syntax**    show mpls lsp  
                  <brief | detail | extensive | terse>  
                  <autobandwidth>  
                  <bidirectional | unidirectional>  
                  <bypass>  
                  <count-active-routes>  
                  <defaults>  
                  <descriptions>  
                  <down | up>  
                  <externally-controlled>  
                  <externally-provisioned>  
                  <logical-system (all | *logical-system-name*)>  
                  <lsp-type>  
                  <name *name*>  
                  <p2mp>  
                  <statistics>  
                  <transit>

**Syntax (EX Series Switches)**    show mpls lsp  
                  <brief | detail | extensive | terse>  
                  <bidirectional | unidirectional>  
                  <bypass>  
                  <descriptions>  
                  <down | up>  
                  <externally-controlled>  
                  <externally-provisioned>  
                  <lsp-type>  
                  <name *name*>  
                  <p2mp>  
                  <statistics>  
                  <transit>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                  **defaults** option added in Junos OS Release 8.5.  
                  Command introduced in Junos OS Release 9.5 for EX Series switches.  
                  **autobandwidth** option added in Junos OS Release 11.4.  
                  **externally-controlled** option added in Junos OS Release 12.3.  
                  **externally-provisioned** option added in Junos OS Release 13.3.  
                  Command introduced in Junos OS Release 13.2X51-D15 for QFX Series.  
                  **instance *instance-name*** option added in Junos OS Release 15.1.

**Description**    Display information about configured and active dynamic Multiprotocol Label Switching (MPLS) label-switched paths (LSPs).

**Options**    **none**—Display standard information about all configured and active dynamic MPLS LSPs.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output. The extensive option displays the same information as the detail option, but covers the most recent 50 events.

**autobandwidth**—(Optional) Display automatic bandwidth information. This option is explained separately (see **show mpls lsp autobandwidth**).

**bidirectional | unidirectional**—(Optional) Display bidirectional or unidirectional LSP information, respectively.

**bypass**—(Optional) Display LSPs used for protecting other LSPs.

**count-active-routes**—(Optional) Display active routes for LSPs.

**defaults**—(Optional) Display the MPLS LSP default settings.

**descriptions**—(Optional) Display the MPLS label-switched path (LSP) descriptions. To view this information, you must configure the description statement at the **[edit protocol mpls lsp]** hierarchy level. Only LSPs with a description are displayed. This command is only valid for the ingress routing device, because the description is not propagated in RSVP messages.

**down | up**—(Optional) Display only LSPs that are inactive or active, respectively.

**externally-controlled**—(Optional) Display the LSPs that are under the control of an external Path Computation Element (PCE).

**externally-provisioned**—(Optional) Display the LSPs that are generated dynamically and provisioned by an external Path Computation Element (PCE).

**instance *instance-name***—(Optional) Display MPLS LSP information for the specified instance. If *instance-name* is omitted, MPLS LSP information is displayed for the master instance.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

***lsp-type***—(Optional) Display information about a particular LSP type:

- **bypass**—Sessions for bypass LSPs.
- **egress**—Sessions that terminate on this routing device.
- **ingress**—Sessions that originate from this routing device.
- **transit**—Sessions that pass through this routing device.

**name *name***—(Optional) Display information about the specified LSP or group of LSPs.

**p2mp**—(Optional) Display information about point-to-multipoint LSPs.

**statistics**—(Optional) (Ingress and transit routers only) Display accounting information about LSPs. Statistics are not available for LSPs on the egress routing device, because the penultimate routing device in the LSP sets the label to 0. Also, as the packet arrives at the egress routing device, the hardware removes its MPLS header and the

packet reverts to being an IPv4 packet. Therefore, it is counted as an IPv4 packet, not an MPLS packet.



**NOTE:** If a bypass LSP is configured for the primary static LSP, display cumulative statistics of packets traversing through the protected LSP and bypass LSP when traffic is re-optimized when the protected LSP link is restored. (Bypass LSPs are not supported on QFX Series switches.)

When used with the **bypass** option (**show mpls lsp bypass statistics**), display statistics for the traffic that flows only through the bypass LSP.

**transit**—(Optional) Display LSPs transiting this routing device.

**Required Privilege Level**

view

**Related Documentation**

- [clear mpls lsp on page 189](#)
- [show mpls lsp autobandwidth](#)

**List of Sample Output**

[show mpls lsp defaults on page 259](#)  
[show mpls lsp descriptions on page 259](#)  
[show mpls lsp detail on page 259](#)  
[show mpls lsp detail \(When Egress Protection Is in Standby Mode\) on page 260](#)  
[show mpls lsp detail \(When Egress Protection Is in Effect During a Local Repair\) on page 260](#)  
[show mpls lsp extensive on page 261](#)  
[show mpls lsp ingress extensive on page 263](#)  
[show mpls lsp extensive \(automatic bandwidth adjustment enabled\) on page 264](#)  
[show mpls lsp bypass extensive on page 265](#)  
[show mpls lsp p2mp on page 265](#)  
[show mpls lsp p2mp detail on page 265](#)  
[show mpls lsp detail count-active-routes on page 266](#)  
[show mpls lsp statistics extensive on page 267](#)

**Output Fields**

Table 33 on page 252 describes the output fields for the **show mpls lsp** command. Output fields are listed in the approximate order in which they appear.

**Table 33: show mpls lsp Output Fields**

| Field Name         | Field Description                                                                                                                                                                                        | Level of Output |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Ingress LSP</b> | Information about LSPs on the ingress routing device. Each session has one line of output.                                                                                                               | All levels      |
| <b>Egress LSP</b>  | Information about the LSPs on the egress routing device. MPLS learns this information by querying RSVP, which holds all the transit and egress session information. Each session has one line of output. | All levels      |

Table 33: show mpls lsp Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                                                                                                                                                     | Level of Output         |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Transit LSP</b>          | Number of LSPs on the transit routing devices and the state of these paths. MPLS learns this information by querying RSVP, which holds all the transit and egress session information.                                                                                                | All levels              |
| <b>P2MP name</b>            | Name of the point-to-multipoint LSP. Dynamically generated P2MP LSPs used for VPLS flooding use dynamically generated P2MP LSP names. The name uses the format <i>identifier:vpls:router-id:routing-instance-name</i> . The <i>identifier</i> is automatically generated by Junos OS. | All levels              |
| <b>P2MP branch count</b>    | Number of destination LSPs the point-to-multipoint LSP is transmitting to.                                                                                                                                                                                                            | All levels              |
| <b>P</b>                    | An asterisk (*) under this heading indicates that the LSP is a primary path.                                                                                                                                                                                                          | All levels              |
| <b>address</b>              | ( <b>detail</b> and <b>extensive</b> ) Destination (egress routing device) of the LSP.                                                                                                                                                                                                | <b>detail extensive</b> |
| <b>To</b>                   | Destination (egress routing device) of the session.                                                                                                                                                                                                                                   | <b>brief</b>            |
| <b>From</b>                 | Source (ingress routing device) of the session.                                                                                                                                                                                                                                       | <b>brief detail</b>     |
| <b>State</b>                | State of the LSP handled by this RSVP session: <b>Up</b> , <b>Dn</b> (down), or <b>Restart</b> .                                                                                                                                                                                      | <b>brief detail</b>     |
| <b>Active Route</b>         | Number of active routes (prefixes) installed in the forwarding table. For ingress LSPs, the forwarding table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the forwarding table is the primary MPLS table ( <b>mpls.0</b> ).                     | <b>detail extensive</b> |
| <b>Rt</b>                   | Number of active routes (prefixes) installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the routing table is the primary MPLS table ( <b>mpls.0</b> ).                     | <b>brief</b>            |
| <b>P</b>                    | Path. An asterisk (*) underneath this column indicates that the LSP is a primary path.                                                                                                                                                                                                | <b>brief</b>            |
| <b>ActivePath</b>           | (Ingress LSP) Name of the active path: <b>Primary</b> or <b>Secondary</b> .                                                                                                                                                                                                           | <b>detail extensive</b> |
| <b>LSPname</b>              | Name of the LSP.                                                                                                                                                                                                                                                                      | <b>brief detail</b>     |
| <b>Statistics</b>           | Displays the number of packets and the number of bytes transmitted over the LSP. These counters are reset to zero whenever the LSP path is optimized (for example, during an automatic bandwidth allocation).                                                                         | <b>extensive</b>        |
| <b>Aggregate statistics</b> | Displays the number of packets and the number of bytes transmitted over the LSP. These counters continue to iterate even if the LSP path is optimized. You can reset these counters to zero using the <b>clear mpls lsp statistics</b> command.                                       | <b>extensive</b>        |
| <b>Packets</b>              | Displays the number of packets transmitted over the LSP.                                                                                                                                                                                                                              | <b>brief extensive</b>  |
| <b>Bytes</b>                | Displays the number of bytes transmitted over the LSP.                                                                                                                                                                                                                                | <b>brief extensive</b>  |

Table 33: show mpls lsp Output Fields (*continued*)

| Field Name                          | Field Description                                                                                                                                                                                                      | Level of Output         |
|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>DiffServInfo</b>                 | Type of LSP: multiclass LSP ( <b>multiclass diffServ-TE LSP</b> ) or Differentiated-Services-aware traffic engineering LSP ( <b>diffServ-TE LSP</b> ).                                                                 | <b>detail</b>           |
| <b>LSPtype</b>                      | Type of LSP: static <b>Static configured</b> or dynamic <b>Dynamic configured</b> . Also indicates if the LSP is a <b>Penultimate hop popping</b> LSP or an <b>Ultimate hop popping</b> LSP.                           | <b>detail extensive</b> |
| <b>Bypass</b>                       | (Bypass LSP) Destination address (egress routing device) for the bypass LSP.                                                                                                                                           | All levels              |
| <b>LSPpath</b>                      | Indicates whether the RSVP session is for the primary or secondary LSP path. <b>LSPpath</b> can be either <b>primary</b> or <b>secondary</b> and can be displayed on the ingress, egress, and transit routing devices. | <b>detail</b>           |
| <b>Bidir</b>                        | (GMPLS) The LSP allows data to travel in both directions between GMPLS devices.                                                                                                                                        | All levels              |
| <b>Bidirectional</b>                | (GMPLS) The LSP allows data to travel both ways between GMPLS devices.                                                                                                                                                 | All levels              |
| <b>FastReroute desired</b>          | Fast reroute has been requested by the ingress routing device.                                                                                                                                                         | <b>detail</b>           |
| <b>Link protection desired</b>      | <b>detail</b>                                                                                                                                                                                                          |                         |
| <b>Node/Link protection desired</b> | Link protection has been requested by the ingress routing device.                                                                                                                                                      | <b>detail extensive</b> |
| <b>LoadBalance</b>                  | (Ingress LSP) CSPF load-balancing rule that was configured to select the LSP's path among equal-cost paths: <b>Most-fill</b> , <b>Least-fill</b> , or <b>Random</b> .                                                  | <b>detail extensive</b> |
| <b>Signal type</b>                  | Signal type for GMPLS LSPs. The signal type determines the peak data rate for the LSP: <b>DS0</b> , <b>DS3</b> , <b>STS-1</b> , <b>STM-1</b> , or <b>STM-4</b> .                                                       | All levels              |
| <b>Encoding type</b>                | LSP encoding type: <b>Packet</b> , <b>Ethernet</b> , <b>PDH</b> , <b>SDH/SONET</b> , <b>Lambda</b> , or <b>Fiber</b> .                                                                                                 | All levels              |
| <b>Switching type</b>               | Type of switching on the links needed for the LSP: <b>Fiber</b> , <b>Lambda</b> , <b>Packet</b> , <b>TDM</b> , or <b>PSC-1</b> .                                                                                       | All levels              |
| <b>GPID</b>                         | Generalized Payload Identifier (identifier of the payload carried by an LSP): <b>HDLC</b> , <b>Ethernet</b> , <b>IPv4</b> , <b>PPP</b> , or <b>Unknown</b> .                                                           | All levels              |
| <b>Protection</b>                   | Configured protection capability desired for the LSP: <b>Extra</b> , <b>Enhanced</b> , <b>none</b> , <b>One plus one</b> , <b>One to one</b> , or <b>Shared</b> .                                                      | All levels              |
| <b>Upstream label in</b>            | (Bidirectional LSPs) Incoming label for reverse direction traffic for this LSP.                                                                                                                                        | All levels              |
| <b>Upstream label out</b>           | (Bidirectional LSPs) Outgoing label for reverse direction traffic for this LSP.                                                                                                                                        | All levels              |



Table 33: show mpls lsp Output Fields (*continued*)

| Field Name                                          | Field Description                                                                                                                                                                       | Level of Output  |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Suggested label received</b>                     | (Bidirectional LSPs) Label the upstream node suggests to use in the Resv message that is sent.                                                                                          | All levels       |
| <b>Suggested label sent</b>                         | (Bidirectional LSPs) Label the downstream node suggests to use in the Resv message that is returned.                                                                                    | All levels       |
| <b>Autobandwidth</b>                                | (Ingress LSP) The LSP is performing autobandwidth allocation.                                                                                                                           | detail extensive |
| <b>MinBW</b>                                        | (Ingress LSP) Configured minimum value of the LSP, in bps.                                                                                                                              | detail extensive |
| <b>MaxBW</b>                                        | (Ingress LSP) Configured maximum value of the LSP, in bps.                                                                                                                              | detail extensive |
| <b>Dynamic MinBW</b>                                | (Ingress LSP) Displays the current dynamically specified minimum bandwidth allocation for the LSP, in bps.                                                                              | detail extensive |
| <b>Adjustment Timer</b>                             | (Ingress LSP) Configured value for the <b>adjust-timer</b> statement, indicating the total amount of time allowed before bandwidth adjustment will take place, in seconds.              | detail extensive |
| <b>Adjustment Threshold</b>                         | (Ingress LSP) Configured value for the <b>adjust-threshold</b> statement. Specifies how sensitive the automatic bandwidth adjustment for an LSP is to changes in bandwidth utilization. | detail extensive |
| <b>Time for Next Adjustment</b>                     | (Ingress LSP) Time in seconds until the next automatic bandwidth adjustment sample is taken.                                                                                            | detail extensive |
| <b>Time of Last Adjustment</b>                      | (Ingress LSP) Date and time since the last automatic bandwidth adjustment was completed.                                                                                                | detail extensive |
| <b>Max AvgBW util</b>                               | (Ingress LSP) Current value of the actual maximum average bandwidth utilization, in bps.                                                                                                | detail extensive |
| <b>Overflow limit</b>                               | (Ingress LSP) Configured value of the threshold overflow limit.                                                                                                                         | detail extensive |
| <b>Overflow sample count</b>                        | (Ingress LSP) Current value for the overflow sample count.                                                                                                                              | detail extensive |
| <b>Bandwidth Adjustment in <i>nnn</i> second(s)</b> | (Ingress LSP) Current value of the bandwidth adjustment timer, indicating the amount of time remaining until the bandwidth adjustment will take place, in seconds.                      | detail extensive |
| <b>Underflow limit</b>                              | (Ingress LSP) Configured value of the threshold underflow limit.                                                                                                                        | detail extensive |
| <b>Underflow sample count</b>                       | (Ingress LSP) Current value for the underflow sample count.                                                                                                                             | detail extensive |
| <b>Underflow Max AvgBW</b>                          | (Ingress LSP) The highest sample bandwidth among the underflow samples recorded currently. This is the signaling bandwidth if an adjustment occurs because of an underflow.             | detail extensive |

Table 33: show mpls lsp Output Fields (*continued*)

| Field Name                                              | Field Description                                                                                                                                                                                                                                                                                                                           | Level of Output  |
|---------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Active path indicator</b>                            | (Ingress LSP) A value of * indicates that the path is active. The absence of * indicates that the path is not active. In the following example, "long" is the active path.<br><br>*Primary long<br>Standby short                                                                                                                            | detail extensive |
| <b>Primary</b>                                          | (Ingress LSP) Name of the primary path.                                                                                                                                                                                                                                                                                                     | detail extensive |
| <b>Secondary</b>                                        | (Ingress LSP) Name of the secondary path.                                                                                                                                                                                                                                                                                                   | detail extensive |
| <b>Standby</b>                                          | (Ingress LSP) Name of the path in standby mode.                                                                                                                                                                                                                                                                                             | detail extensive |
| <b>State</b>                                            | (Ingress LSP) State of the path: <b>Up</b> or <b>Dn</b> (down).                                                                                                                                                                                                                                                                             | detail extensive |
| <b>COS</b>                                              | (Ingress LSP) Class-of-service value.                                                                                                                                                                                                                                                                                                       | detail extensive |
| <b>Bandwidth per class</b>                              | (Ingress LSP) Active bandwidth for the LSP path for each MPLS class type, in bps.                                                                                                                                                                                                                                                           | detail extensive |
| <b>Priorities</b>                                       | (Ingress LSP) Configured value of the setup priority and the hold priority respectively (the setup priority is displayed first), where 0 is the highest priority and 7 is the lowest priority. If you have not explicitly configured these values, the default values are displayed (7 for the setup priority and 0 for the hold priority). | detail extensive |
| <b>OptimizeTimer</b>                                    | (Ingress LSP) Configured value of the optimize timer, indicating the total amount of time allowed before path reoptimization, in seconds.                                                                                                                                                                                                   | detail extensive |
| <b>SmartOptimizeTimer</b>                               | (Ingress LSP) Configured value of the smart optimize timer, indicating the total amount of time allowed before path reoptimization, in seconds.                                                                                                                                                                                             | detail extensive |
| <b>Reoptimization in xxx seconds</b>                    | (Ingress LSP) Current value of the optimize timer, indicating the amount of time remaining until the path will be reoptimized, in seconds.                                                                                                                                                                                                  | detail extensive |
| <b>Computed ERO (S [L] denotes strict [loose] hops)</b> | (Ingress LSP) Computed explicit route. A series of hops, each with an address followed by a hop indicator. The value of the hop indicator can be strict (S) or loose (L).                                                                                                                                                                   | detail extensive |
| <b>CSPF metric</b>                                      | (Ingress LSP) Constrained Shortest Path First metric for this path.                                                                                                                                                                                                                                                                         | detail extensive |

Table 33: show mpls lsp Output Fields (*continued*)

| Field Name   | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Level of Output        |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| Received RRO | <p>(Ingress LSP) Received record route. A series of hops, each with an address followed by a flag. (In most cases, the received record route is the same as the computed explicit route. If <b>Received RRO</b> is different from <b>Computed ERO</b>, there is a topology change in the network, and the route is taking a detour.) The following flags identify the protection capability and status of the downstream node:</p> <ul style="list-style-type: none"> <li>• <b>0x01</b>—Local protection available. The link downstream from this node is protected by a local repair mechanism. This flag can be set only if the Local protection flag was set in the <b>SESSION_ATTRIBUTE</b> object of the corresponding Path message.</li> <li>• <b>0x02</b>—Local protection in use. A local repair mechanism is in use to maintain this tunnel (usually because of an outage of the link it was routed over previously).</li> <li>• <b>0x03</b>—Combination of <b>0x01</b> and <b>0x02</b>.</li> <li>• <b>0x04</b>—Bandwidth protection. The downstream routing device has a backup path providing the same bandwidth guarantee as the protected LSP for the protected section.</li> <li>• <b>0x08</b>—Node protection. The downstream routing device has a backup path providing protection against link and node failure on the corresponding path section. If the downstream routing device can set up only a link-protection backup path, the <b>Local protection available</b> bit is set but the <b>Node protection</b> bit is cleared.</li> <li>• <b>0x09</b>—Detour is established. Combination of <b>0x01</b> and <b>0x08</b>.</li> <li>• <b>0x10</b>—Preemption pending. The preempting node sets this flag if a pending preemption is in progress for the traffic engine LSP. This flag indicates to the ingress legacy edge router (LER) of this LSP that it should be rerouted.</li> <li>• <b>0x20</b>—Node ID. Indicates that the address specified in the RRO's IPv4 or IPv6 sub-object is a node ID address, which refers to the router address or router ID. Nodes must use the same address consistently.</li> <li>• <b>0xb</b>—Detour is in use. Combination of <b>0x01</b>, <b>0x02</b>, and <b>0x08</b>.</li> </ul> | detail extensive       |
| Index number | (Ingress LSP) Log entry number of each LSP path event. The numbers are in chronological descending order, with a maximum of 50 index numbers displayed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | extensive              |
| Date         | (Ingress LSP) Date of the LSP event.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | extensive              |
| Time         | (Ingress LSP) Time of the LSP event.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | extensive              |
| Event        | (Ingress LSP) Description of the LSP event.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | extensive              |
| Created      | (Ingress LSP) Date and time the LSP was created.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | extensive              |
| Resv style   | (Bypass) RSVP reservation style. This field consists of two parts. The first is the number of active reservations. The second is the reservation style, which can be <b>FF</b> (fixed filter), <b>SE</b> (shared explicit), or <b>WF</b> (wildcard filter).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | brief detail extensive |
| Labelin      | Incoming label for this LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | brief detail           |
| Labelout     | Outgoing label for this LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | brief detail           |

Table 33: show mpls lsp Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Level of Output     |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| <b>LSPname</b>                 | Name of the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>brief detail</b> |
| <b>Time left</b>               | Number of seconds remaining in the lifetime of the reservation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail</b>       |
| <b>Since</b>                   | Date and time when the RSVP session was initiated.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>       |
| <b>Tspec</b>                   | Sender's traffic specification, which describes the sender's traffic parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b>       |
| <b>Port number</b>             | Protocol ID and sender or receiver port used in this RSVP session.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>       |
| <b>PATH rcvfrom</b>            | Address of the previous-hop (upstream) routing device or client, interface the neighbor used to reach this router, and number of packets received from the upstream neighbor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail</b>       |
| <b>PATH sentto</b>             | Address of the next-hop (downstream) routing device or client, interface used to reach this neighbor, and number of packets sent to the downstream routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>       |
| <b>RESV rcvfrom</b>            | Address of the previous-hop (upstream) routing device or client, interface the neighbor used to reach this routing device, and number of packets received from the upstream neighbor. The output in this field, which is consistent with that in the <b>PATH rcvfrom</b> field, indicates that the RSVP negotiation is complete.                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b>       |
| <b>Record route</b>            | Recorded route for the session, taken from the record route object.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail</b>       |
| <b>Soft preempt</b>            | Number of soft preemptions that occurred on a path and when the last soft preemption occurred. Only successful soft preemptions are counted (those that actually resulted in a new path being used).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>detail</b>       |
| <b>Soft preemption pending</b> | Path is in the process of being soft preempted. This display is removed once the ingress router has calculated a new path.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>detail</b>       |
| <b>MPLS-TE LSP Defaults</b>    | Default settings for MPLS traffic engineered LSPs: <ul style="list-style-type: none"> <li>• <b>LSP Holding Priority</b>—Determines the degree to which an LSP holds on to its session reservation after the LSP has been set up successfully.</li> <li>• <b>LSP Setup Priority</b>—Determines whether a new LSP that preempts an existing LSP can be established.</li> <li>• <b>Hop Limit</b>—Specifies the maximum number of routers the LSP can traverse (including the ingress and egress).</li> <li>• <b>Bandwidth</b>—Specifies the bandwidth in bits per second for the LSP.</li> <li>• <b>LSP Retry Timer</b>—Length of time in seconds that the ingress router waits between attempts to establish the primary path.</li> </ul> | <b>defaults</b>     |

The XML tag name of the **bandwidth** tag under the **auto-bandwidth** tag has been updated to **maximum-average-bandwidth**. You can see the new tag when you issue the **show mpls lsp extensive** command with the **| display xml** pipe option. If you have any scripts that use the **bandwidth** tag, ensure that they are updated to **maximum-average-bandwidth**.

## Sample Output

### show mpls lsp defaults

```
user@host> show mpls lsp defaults
MPLS-TE LSP Defaults
 LSP Holding Priority 0
 LSP Setup Priority 7
 Hop Limit 255
 Bandwidth 0
 LSP Retry Timer 30 seconds
```

### show mpls lsp descriptions

```
user@host> show mpls lsp descriptions
Ingress LSP: 3 sessions
To LSP name Description
10.0.0.195 to-sanjose to-sanjose-desc
10.0.0.195 to-sanjose-other-desc other-desc
Total 2 displayed, Up 2, Down 0
```

### show mpls lsp detail

```
user@host> show mpls lsp detail
Ingress LSP: 1 sessions

192.168.0.4
 From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
 ActivePath: (primary)
 LSPtype: Static Configured, Penultimate hop popping
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 *Primary State: Up
 Priorities: 7 0
 SmartOptimizeTimer: 180
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
 10.0.0.18 S 10.0.0.22 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
 20=Node-ID):
 10.0.0.18 10.0.0.22
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.0.5
 From: 192.168.0.4, LSPstate: Up, ActiveRoute: 0
 LSPname: E-D, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: -
 Resv style: 1 FF, Label in: 3, Label out: -
 Time left: 157, Since: Wed Jul 18 17:55:12 2012
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 1 receiver 46128 protocol 0
 PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 3 pkts
 Adspec: received MTU 1500
 PATH sentto: localclient
 RESV rcvfrom: localclient
 Record route: 10.0.0.22 10.0.0.18 <self>
Total 1 displayed, Up 1, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

#### show mpls lsp detail (When Egress Protection Is in Standby Mode)

```
user@host> show mpls lsp detail
Ingress LSP: 1 sessions

192.168.0.4
 From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
 ActivePath: (primary)
 LSPtype: Static Configured, Penultimate hop popping
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 *Primary State: Up
 Priorities: 7 0
 SmartOptimizeTimer: 180
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
 10.0.0.18 S 10.0.0.22 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
 20=Node-ID):
 10.0.0.18 10.0.0.22
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.0.5
 From: 192.168.0.4, LSPstate: Up, ActiveRoute: 0
 LSPname: E-D, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: -
 Resv style: 1 FF, Label in: 3, Label out: -
 Time left: 157, Since: Wed Jul 18 17:55:12 2012
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 1 receiver 46128 protocol 0
Egress protection PLR as protector: Active

 PATH rcvfrom: 10.0.0.18 (1t-1/2/0.17) 3 pkts
 Adspec: received MTU 1500
 PATH sentto: localclient
 RESV rcvfrom: localclient
 Record route: 10.0.0.22 10.0.0.18 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

#### show mpls lsp detail (When Egress Protection Is in Effect During a Local Repair)

```
user@host> show mpls lsp detail
Ingress LSP: 1 sessions

192.168.0.4
 From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
 ActivePath: (primary)
 LSPtype: Static Configured, Penultimate hop popping
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 *Primary State: Up
 Priorities: 7 0
 SmartOptimizeTimer: 180
```

```

 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
10.0.0.18 S 10.0.0.22 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
 10.0.0.18 10.0.0.22
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.0.5
 From: 192.168.0.4, LSPstate: Down, ActiveRoute: 0
 LSPname: E-D, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: -
 Resv style: 1 FF, Label in: 3, Label out: -
 Time left: 157, Since: Wed Jul 18 17:55:12 2012
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 1 receiver 46128 protocol 0
Egress protection PLR as protector: In Use
PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 3 pkts
 Adspec: received MTU 1500
 PATH sentto: localclient
 RESV rcvfrom: localclient
 Record route: 10.0.0.22 10.0.0.18 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### show mpls lsp extensive

```

user@host> show mpls lsp extensive
Ingress LSP: 4 sessions

1.1.1.1
 From: 3.3.3.3, State: Up, ActiveRoute: 0, LSPname: m120b-to-mx960
 ActivePath: DEFAULT (primary)
 FastReroute desired
 LSptype: Static Configured, Penultimate hop popping
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary DEFAULT State: Up
 Priorities: 7 0
 SmartOptimizeTimer: 180
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 310)
10.0.35.5 S 10.0.15.1 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
 10.0.34.4(flag=1) 10.0.14.1
50 Sep 13 16:08:19.712 Record Route: 10.0.35.5(flag=1) 10.0.15.1
49 Sep 13 16:08:16.720 Record Route: 10.0.34.4(flag=1) 10.0.14.1
48 Sep 13 16:08:16.699 Fast-reroute Detour Up
47 Sep 13 16:08:13.702 Record Route: 10.0.34.4 10.0.14.1
46 Sep 13 16:08:13.702 Up
45 Sep 13 16:08:13.672 Originate make-before-break call
44 Sep 13 16:08:13.672 CSPF: computation result accepted 10.0.34.4 10.0.14.1

43 Sep 13 16:08:13.672 Selected as active path
42 Sep 13 16:08:13.672 Make-before-break: Switched to new instance
41 Sep 13 16:08:01.685 Pending path switchover, skip CSPF run[3 times]
40 Sep 13 16:06:33.910 Deselected as active

```

```

39 Sep 13 16:06:33.910 Pending path switchover, skip CSPF run

38 Sep 13 16:06:19.521 Record Route: 10.0.35.5 10.0.15.1
37 Sep 13 16:06:19.518 ResvTear received
36 Sep 13 16:06:19.518 Fast-reroute Detour Down
35 Sep 13 16:06:16.676 Record Route: 10.0.35.5(flag=1) 10.0.15.1
34 Sep 13 16:06:13.670 Record Route: 10.0.35.5 10.0.15.1
33 Sep 13 16:06:13.670 Up
32 Sep 13 16:06:13.569 Pending path switchover, skip CSPF run

31 Sep 13 16:06:13.569 CSPF: link down/deleted:
10.0.34.3(3.3.3.3:79)(m120-b-re1.00/3.3.3.3)->0.0.0.0(0.0.0.0:0)(m120-b-re1.04/0.0.0.0)

30 Sep 13 16:06:13.552 Pending path switchover, skip CSPF run

29 Sep 13 16:06:13.552 CSPF: link down/deleted:
0.0.0.0(0.0.0.0:0)(m120-b-re1.04/0.0.0.0)->0.0.0.0(4.4.4.4:0)(m10i-a-re0.00/4.4.4.4)

28 Sep 13 16:06:13.549 Originate make-before-break call
27 Sep 13 16:06:13.549 CSPF: computation result accepted 10.0.35.5 10.0.15.1

26 Sep 13 16:06:13.548 Tunnel local repaired
25 Sep 13 16:06:13.546 Record Route: 10.0.23.2 10.0.12.1
24 Sep 13 16:06:13.546 10.0.34.3: Tunnel local repaired
23 Sep 13 16:06:13.546 10.0.34.3: Down
22 Sep 13 16:03:46.842 Fast-reroute Detour Up
21 Sep 13 16:03:42.730 Record Route: 10.0.34.4(flag=1) 10.0.14.1
20 Sep 13 16:03:39.836 Selected as active path
19 Sep 13 16:03:39.834 Record Route: 10.0.34.4 10.0.14.1
18 Sep 13 16:03:39.834 Up
17 Sep 13 16:03:39.698 Originate Call
16 Sep 13 16:03:39.698 CSPF: computation result accepted 10.0.34.4 10.0.14.1

15 Sep 13 16:03:39.697 Clear Call
14 Sep 13 16:03:39.696 Deselected as active
13 Sep 13 16:03:37.837 Record Route: 10.0.34.4 10.0.14.1
12 Sep 13 16:03:32.829 Fast-reroute Detour Down
11 Sep 13 16:02:15.493 Record Route: 10.0.34.4(flag=1) 10.0.14.1
10 Sep 13 16:02:15.486 Fast-reroute Detour Up
9 Sep 13 16:02:12.468 Record Route: 10.0.34.4 10.0.14.1
8 Sep 13 16:02:07.460 Fast-reroute Detour Down
7 Sep 13 15:57:46.741 Fast-reroute Detour Up
6 Sep 13 15:57:40.768 Record Route: 10.0.34.4(flag=1) 10.0.14.1
5 Sep 13 15:57:37.761 Selected as active path
4 Sep 13 15:57:37.760 Record Route: 10.0.34.4 10.0.14.1
3 Sep 13 15:57:37.760 Up
2 Sep 13 15:57:37.733 Originate Call
1 Sep 13 15:57:37.733 CSPF: computation result accepted 10.0.34.4 10.0.14.1

Created: Fri Sep 13 15:57:38 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 4 sessions, 6 detours
Total 0 displayed, Up 0, Down 0

Transit LSP: 6 sessions, 1 detours

1.1.1.1
From: 3.3.3.3, LSPstate: Up, ActiveRoute: 0
LSPname: m120b-to-mx960, LSPpath: Primary
Suggested label received: -, Suggested label sent: -

```



```

Recovery label received: -, Recovery label sent: 302288
Resv style: 1 FF, Label in: 300416, Label out: 302288
Time left: 147, Since: Fri Sep 13 16:08:16 2013
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 4 receiver 13955 protocol 0
Detour branch from 10.0.34.4, to skip 1.1.1.1, Up
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Adspec: received MTU 1500
 Path MTU: received 0
 PATH rcvfrom: 10.0.34.4 (ge-4/3/7.0) 7 pkts
 Adspec: received MTU 1500 sent MTU 1500
 PATH sentto: 10.0.35.5 (ge-3/1/0.0) 7 pkts
 RESV rcvfrom: 10.0.35.5 (ge-3/1/0.0) 7 pkts
 Explicit route: 10.0.35.5 10.0.15.1
 Record route: 10.0.34.3 10.0.34.4 <self>10.0.35.5 10.0.15.1
Label in: 300416, Label out: 302288
Total 1 displayed, Up 1, Down 0

```

### show mpls lsp ingress extensive

```

user@host> show mpls lsp ingress extensive
Ingress LSP: 1 sessions

50.0.0.1
 From: 10.0.0.1, State: Up, ActiveRoute: 0, LSPName: test
 ActivePath: (primary)
 LSPType: Static Configured
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 *Primary State: Up
 Priorities: 7 0
 OptimizeTimer: 300
 SmartOptimizeTimer: 180
 Reoptimization in 240 second(s).
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
1.1.1.2 S 4.4.4.1 S 5.5.5.2 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
 1.1.1.2 4.4.4.1 5.5.5.2
 17 Aug 3 13:17:33.601 CSPF: computation result ignored, new path less avail
bw[3 times]
 16 Aug 3 13:02:51.283 CSPF: computation result ignored, new path no benefit[2
times]
 15 Aug 3 12:54:36.678 Selected as active path
 14 Aug 3 12:54:36.676 Record Route: 1.1.1.2 4.4.4.1 5.5.5.2
 13 Aug 3 12:54:36.676 Up
 12 Aug 3 12:54:33.924 Deselected as active
 11 Aug 3 12:54:33.924 Originate Call
 10 Aug 3 12:54:33.923 Clear Call
 9 Aug 3 12:54:33.923 CSPF: computation result accepted 1.1.1.2 4.4.4.1
5.5.5.2
 8 Aug 3 12:54:33.922 2.2.2.2: No Route toward dest
 7 Aug 3 12:54:28.177 CSPF: computation result ignored, new path no benefit[4
times]
 6 Aug 3 12:35:03.830 Selected as active path
 5 Aug 3 12:35:03.828 Record Route: 2.2.2.2 3.3.3.2
 4 Aug 3 12:35:03.827 Up
 3 Aug 3 12:35:03.814 Originate Call
 2 Aug 3 12:35:03.814 CSPF: computation result accepted 2.2.2.2 3.3.3.2
 1 Aug 3 12:34:34.921 CSPF failed: no route toward 50.0.0.1

```

Created: Tue Aug 3 12:34:35 2010  
Total 1 displayed, Up 1, Down 0

### show mpls lsp extensive (automatic bandwidth adjustment enabled)

user@host> show mpls lsp extensive  
Ingress LSP: 1 sessions

```

192.168.0.4
 From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPName: E-D
 ActivePath: (primary)
 Node/Link protection desired
 LSPTYPE: Static Configured, Penultimate hop popping
 LoadBalance: Random
 Autobandwidth
 MinBW: 300bps, MaxBW: 1000bps, Dynamic MinBW: 1000bps
 Adjustment Timer: 300 secs AdjustThreshold: 25%
 Max AvgBW util: 963.739bps, Bandwidth Adjustment in 0 second(s).
 Min BW Adjust Interval: 1000, MinBW Adjust Threshold (in %): 50
 Overflow limit: 0, Overflow sample count: 0
 Underflow limit: 0, Underflow sample count: 9, Underflow Max AvgBW: 614.421bps

 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 *Primary State: Up
 Priorities: 7 0
 Bandwidth: 1000bps
 SmartOptimizeTimer: 180
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
 10.0.0.18 S 10.0.0.22 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
 20=Node-ID):
 192.168.0.6(flag=0x20) 10.0.0.18(Label=299792) 192.168.0.4(flag=0x20)
 10.0.0.22(Label=3)
 12 Apr 30 10:25:17.024 Make-before-break: Switched to new instance
 11 Apr 30 10:25:16.023 Record Route: 192.168.0.6(flag=0x20)
 10.0.0.18(Label=299792) 192.168.0.4(flag=0x20) 10.0.0.22(Label=3)
 10 Apr 30 10:25:16.023 Up
 9 Apr 30 10:25:16.023 Automatic Autobw adjustment succeeded: BW changes from
 300 bps to 1000 bps
 8 Apr 30 10:25:15.946 Originate make-before-break call
 7 Apr 30 10:25:15.946 CSPF: computation result accepted 10.0.0.18 10.0.0.22

 6 Apr 30 10:16:42.891 Selected as active path
 5 Apr 30 10:16:42.891 Record Route: 192.168.0.6(flag=0x20)
 10.0.0.18(Label=299776) 192.168.0.4(flag=0x20) 10.0.0.22(Label=3)
 4 Apr 30 10:16:42.890 Up
 3 Apr 30 10:16:42.828 Originate Call
 2 Apr 30 10:16:42.828 CSPF: computation result accepted 10.0.0.18 10.0.0.22

 1 Apr 30 10:16:14.064 CSPF: could not determine self[2 times]
 Created: Tue Apr 30 10:15:16 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### show mpls lsp bypass extensive

```

user@host # show mpls lsp bypass extensive

Ingress LSP: 1 sessions

2.2.2.2
 From: 1.1.1.1, LSPstate: Up, ActiveRoute: 0
 LSPname: Bypass->1.1.2.2
 LSPtype: Static Configured
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 300032
 Resv style: 1 SE, Label in: -, Label out: 300032
 Time left: -, Since: Tue Dec 3 15:19:49 2013
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 1 receiver 55750 protocol 0
 Type: Bypass LSP
 Number of data route tunnel through: 1
 Number of RSVP session tunnel through: 0
 PATH rcvfrom: localclient
 Adspec: sent MTU 1500
 Path MTU: received 1500
 PATH sentto: 1.1.5.2 (lt-1/2/0.15) 1221 pkts
 RESV rcvfrom: 1.1.5.2 (lt-1/2/0.15) 1221 pkts, Entropy label: No
 Explct route: 1.1.5.2 1.2.5.1
 Record route: <self> 1.1.5.2 1.2.5.1
+ 4 Dec 3 15:19:49 Record Route: 1.1.5.2 1.2.5.1
+ 3 Dec 3 15:19:49 Up
+ 2 Dec 3 15:19:49 CSPF: computation result accepted
+ 1 Dec 3 15:19:47 Originate Call
Total 1 displayed, Up 1, Down 0
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
Transit LSP: 0 sessions

```

### show mpls lsp p2mp

```

user@host> show mpls lsp p2mp
Ingress LSP: 2 sessions
P2MP name: p2mp-lsp1, P2MP branch count: 1
To From State Rt P ActivePath LSPname
10.255.245.51 10.255.245.50 Up 0 * path1 p2mp-branch-1
P2MP name: p2mp-lsp2, P2MP branch count: 1
To From State Rt P ActivePath LSPname
10.255.245.51 10.255.245.50 Up 0 * path1 p2mp-st-br1
Total 2 displayed, Up 2, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### show mpls lsp p2mp detail

```

user@host> show mpls lsp p2mp detail
Ingress LSP: 2 sessions
P2MP name: p2mp-lsp1, P2MP branch count: 1

10.255.245.51
 From: 10.255.245.50, State: Up, ActiveRoute: 0, LSPname: p2mp-branch-1

```

```

ActivePath: path1 (primary)
P2MP name: p2mp-lsp1
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary path1 State: Up
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 25)
192.168.208.17 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):
 192.168.208.17
P2MP name: p2mp-lsp2, P2MP branch count: 1

10.255.245.51
 From: 10.255.245.50, State: Up, ActiveRoute: 0, LSPname: p2mp-st-br1
 ActivePath: path1 (primary)
 P2MP name: p2mp-lsp2
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 *Primary path1 State: Up
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 25)
192.168.208.17 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):
 192.168.208.17
Total 2 displayed, Up 2, Down 0

```

#### show mpls lsp detail count-active-routes

```

user@host> show mpls lsp detail count-active-routes
Ingress LSP: 1 sessions

213.119.192.2
 From: 156.154.162.128, State: Up, ActiveRoute: 1, LSPname: to-lahore
 ActivePath: (primary)
 LSPtype: Static Configured
 LoadBalance: Random
 Autobandwidth
 MinBW: 5Mbps MaxBW: 250Mbps
 Adjustment Timer: 300 secs
 Max AvgBW util: 60.2599Mbps, Bandwidth Adjustment in 0 second(s).
 Overflow limit: 0, Overflow sample count: 0
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 *Primary State: Up
 Priorities: 7 0
 Bandwidth: 5Mbps
 SmartOptimizeTimer: 180
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 4)
10.252.0.177 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
 10.252.0.177
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**show mpls lsp statistics extensive**

```

user@host> show mpls lsp statistics extensive
Ingress LSP: 1 sessions

192.168.0.4
 From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPName: E-D
 Statistics: Packets 302, Bytes 28992
 Aggregate statistics: Packets 302, Bytes 28992
 ActivePath: (primary)
 LSPType: Static Configured, Penultimate hop popping
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4
 *Primary State: Up
 Priorities: 7 0
 SmartOptimizeTimer: 180
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
10.0.0.18 S 10.0.0.22 S
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
 10.0.0.18 10.0.0.22
 6 Oct 3 11:18:28.281 Selected as active path
 5 Oct 3 11:18:28.281 Record Route: 10.0.0.18 10.0.0.22
 4 Oct 3 11:18:28.280 Up
 3 Oct 3 11:18:27.995 Originate Call
 2 Oct 3 11:18:27.995 CSPF: computation result accepted 10.0.0.18 10.0.0.22

 1 Oct 3 11:17:59.118 CSPF failed: no route toward 192.168.0.4[2 times]
 Created: Wed Oct 3 11:17:01 2012
Total 1 displayed, Up 1, Down 0

```

## show mpls path

**List of Syntax** [Syntax on page 268](#)  
[Syntax \(EX Series Switches\) on page 268](#)

**Syntax** show mpls path  
 <instance *instance-name*>  
 <logical-system (all | *logical-system-name*)>  
 <path-name>

**Syntax (EX Series Switches)** show mpls path  
 <path-name>

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.5 for EX Series switches.  
**instance** *instance-name* option added in Junos OS Release 15.1.

**Description** Display dynamic Multiprotocol Label Switching (MPLS) label-switched paths (LSPs).

**Options** **none**—Display standard information about all MPLS LSPs.

**instance** *instance-name*—(Optional) Display the dynamic MPLS LSP for the specified instance. If *instance-name* is omitted, dynamic MPLS LSP for the master instance is displayed.

**logical-system** (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

**path-name**—(Optional) Display information about the specified LSP only.

**Required Privilege Level** view

**List of Sample Output** [show mpls path on page 269](#)

**Output Fields** [Table 34 on page 268](#) describes the output fields for the **show mpls path** command. Output fields are listed in the approximate order in which they appear.

**Table 34: show mpls path Output Fields**

| Field Name                  | Field Description                                                 |
|-----------------------------|-------------------------------------------------------------------|
| <b>Path name</b>            | Information about ingress LSPs. Each path has one line of output. |
| <b>Address</b>              | Addresses of the routing devices that form the LSP.               |
| <b>Strict/loose address</b> | Whether the address is configured as a strict or loose address.   |

## Sample Output

show mpls path

```
user@host> show mpls path
Path name Address Strict/loose address
p1 123.456.55.6 Strict
 123.456.1.6 Loose
p2 191.456.1.4 Strict
```

## show rsvp interface

---

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 270</a><br><a href="#">Syntax (EX Series Switches) on page 270</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Syntax</b>                      | <code>show rsvp interface</code><br><code>&lt;brief   detail   extensive&gt;</code><br><code>&lt;instance <i>instance-name</i>&gt;</code><br><code>&lt;link-management&gt;</code><br><code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Syntax (EX Series Switches)</b> | <code>show rsvp interface</code><br><code>&lt;brief   detail   extensive&gt;</code><br><code>&lt;link-management&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>         | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.<br><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>                 | Display the status of Resource Reservation Protocol (RSVP)-enabled interfaces and packet statistics.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                     | <b>none</b> —Display standard information about the status of RSVP-enabled interfaces and packet statistics.<br><br><b>brief   detail   extensive   link-management</b> —(Optional) Display the specified level of output.<br><br><b>instance <i>instance-name</i></b> —(Optional) Display RSVP status information for the specified instance. If <i>instance-name</i> is omitted, RSVP status information is displayed for the master instance.<br><br><b>link-management</b> —(Optional) Use the link-management option to display the control peers and corresponding TE-link information created by the Link Management Protocol (LMP).<br><br><b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system. |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>List of Sample Output</b>       | <a href="#">show rsvp interface brief on page 273</a><br><a href="#">show rsvp interface detail on page 273</a><br><a href="#">show rsvp interface extensive on page 273</a><br><a href="#">show rsvp interface link-management on page 274</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Output Fields</b>               | <a href="#">Table 35 on page 271</a> lists the output fields for the <b>show rsvp interface</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |



Table 35: show rsvp interface Output Fields

| Field Name                    | Field Description                                                                                                                                                                                                                                                                                                    | Level of Output  |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>RSVP interface</b>         | Number of interfaces on which RSVP is active. Each interface has one line of output.                                                                                                                                                                                                                                 | All levels       |
| <b>Interface</b>              | Name of the interface.                                                                                                                                                                                                                                                                                               | All levels       |
| <b>Index</b>                  | Index of the interface.                                                                                                                                                                                                                                                                                              | <b>detail</b>    |
| <b>State</b>                  | State of the interface. <ul style="list-style-type: none"> <li>• <b>Disabled</b>—No traffic engineering information is displayed.</li> <li>• <b>Down</b>—Interface is not operational.</li> <li>• <b>Enabled</b>—Displays traffic engineering information.</li> <li>• <b>Up</b>—Interface is operational.</li> </ul> | All levels       |
| <b>NoAuthentication</b>       | Interface does not support RSVP authentication.                                                                                                                                                                                                                                                                      | <b>detail</b>    |
| <b>NoAggregate</b>            | Interface does not support refresh reduction.                                                                                                                                                                                                                                                                        | <b>detail</b>    |
| <b>NoReliable</b>             | Interface does not support refresh reduction message ID extension.                                                                                                                                                                                                                                                   | <b>detail</b>    |
| <b>NoLinkProtection</b>       | Interface does not support link protection.                                                                                                                                                                                                                                                                          | <b>detail</b>    |
| <b>HelloInterval</b>          | Frequency at which RSVP hellos are sent on this interface (in seconds).                                                                                                                                                                                                                                              | <b>detail</b>    |
| <b>Address</b>                | IP address of the local interface.                                                                                                                                                                                                                                                                                   | <b>detail</b>    |
| <b>Active control channel</b> | Next-hop link address to transmit messages.                                                                                                                                                                                                                                                                          | None specified   |
| <b>TELink</b>                 | Traffic-engineered links that are managed by the peer they are associated with.                                                                                                                                                                                                                                      | None specified   |
| <b>Active resv</b>            | Number of reservations that are actively reserving bandwidth on the interface.                                                                                                                                                                                                                                       | All levels       |
| <b>PreemptionCnt</b>          | Number of times an RSVP session was preempted on this interface.                                                                                                                                                                                                                                                     | <b>detail</b>    |
| <b>Update threshold</b>       | Percentage change in reserved bandwidth to trigger an IGP update.                                                                                                                                                                                                                                                    | <b>detail</b>    |
| <b>Subscription</b>           | User-configured subscription factor.                                                                                                                                                                                                                                                                                 | All levels       |
| <b>bc number</b>              | Bandwidth allocated for the specified bandwidth constraint.                                                                                                                                                                                                                                                          | <b>extensive</b> |
| <b>ct number</b>              | Bandwidth allocated for the specified class type.                                                                                                                                                                                                                                                                    | <b>extensive</b> |
| <b>Static BW</b>              | Total interface bandwidth, in bps.                                                                                                                                                                                                                                                                                   | All levels       |
| <b>Available BW</b>           | Amount of bandwidth that RSVP is allowed to reserve, in bps. It is equal to (static bandwidth * subscription factor).                                                                                                                                                                                                | al levels        |

Table 35: show rsvp interface Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                               | Level of Output |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Reserved BW</b>             | Currently reserved bandwidth, in bps.                                                                                                                           | All levels      |
| <b>SoftPreemptionCnt</b>       | Number of times a soft preemption occurred on this interface. This number is not included in the <b>PreemptionCnt</b> value.                                    | detail          |
| <b>Overbooked BW</b>           | Currently overbooked bandwidth, in bps, by class type (ct0 through ct3).                                                                                        | detail          |
| <b>Highwater mark</b>          | Highest bandwidth that has ever been reserved on this interface, in bps.                                                                                        | brief           |
| <b>PacketType</b>              | Type of RSVP packet.                                                                                                                                            | detail          |
| <b>Total Sent</b>              | Total number of packets sent.                                                                                                                                   | detail          |
| <b>Total Received</b>          | Total number of packets received since RSVP was enabled.                                                                                                        | detail          |
| <b>Last 5 seconds Sent</b>     | Number of packets sent in the last 5 seconds.                                                                                                                   | detail          |
| <b>Last 5 seconds Received</b> | Number of packets received in the last 5 seconds.                                                                                                               | detail          |
| <b>Path</b>                    | Statistics about Path messages, which are sent from the RSVP sender along the data paths and store path state information in each node along the path.          | detail          |
| <b>PathErr</b>                 | Statistics about PathErr messages, which are advisory messages that are sent upstream to the sender.                                                            | detail          |
| <b>PathTear</b>                | Statistics about PathTear messages, which remove path states and dependent reservation states in any routers along a path.                                      | detail          |
| <b>Resv</b>                    | Statistics about Resv messages, which are sent from the RSVP receiver along the data paths and store reservation state information in each node along the path. | detail          |
| <b>ResvErr</b>                 | Statistics about ResvErr messages, which are advisory messages that are sent when an attempt to establish a reservation fails.                                  | detail          |
| <b>ResvTear</b>                | Statistics about ResvTear messages, which remove reservation states along a path.                                                                               | detail          |
| <b>Hello</b>                   | Number of RSVP hello packets that have been sent to and received from the neighbor.                                                                             | detail          |
| <b>Ack</b>                     | Acknowledge message for refresh reductions.                                                                                                                     | detail          |
| <b>Srefresh</b>                | Summary refresh messages.                                                                                                                                       | detail          |
| <b>EndtoEnd RSVP</b>           | Statistics for the number of end-to-end RSVP messages sent.                                                                                                     | detail          |
| <b>Queue</b>                   | CoS transmit queue number and its associated forwarding class designation.                                                                                      | extensive       |

Table 35: show rsvp interface Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                          | Level of Output  |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>TxRate</b>               | Configured bandwidth in Mbps and configured bandwidth as a percentage of the specified queue.                                                              | <b>extensive</b> |
| <b>Priority</b>             | Weight of the queue relative to other configured queues, in percentage.                                                                                    | <b>extensive</b> |
| <i>queue-priority-value</i> | <b>Low, High, None</b> , or <b>Exact</b> . <b>None</b> indicates no rate limiting. <b>Exact</b> indicates the queue transmits at the configured rate only. | <b>extensive</b> |

## Sample Output

### show rsvp interface brief

```

user@host> show rsvp interface brief
RSVP interface: 1 active

```

| Interface | State | Active resv | Subscr-<br>ption | Static<br>BW | Available<br>BW | Reserved<br>BW | Highwater<br>mark |
|-----------|-------|-------------|------------------|--------------|-----------------|----------------|-------------------|
| de0.0     | Up    | 1           | 23%              | 10Mbps       | 989.992kbps     | 1.31Mbps       | 1.31Mbps          |

### show rsvp interface detail

```

user@host> show rsvp interface detail
so-0/1/1.0 Index 6, State: Ena/Up
NoAuthentication, NoAggregate, NoReliable, NoLinkProtection
HelloInterval 3(second)
Address 192.168.207.29, 10.255.245.194
ActiveResv 0, PreemptionCnt 0, Update threshold 10%
Subscription 100%, StaticBW 155.52Mbps, AvailableBW 155.52Mbps
ReservedBW [0] 155Mbps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
SoftPreemptionCnt1
OverbookedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 155Mbps[5] 0bps[6] 0bps[7] 0bps
PacketType

```

|               | Total |          | Last 5 seconds |          |
|---------------|-------|----------|----------------|----------|
|               | Sent  | Received | Sent           | Received |
| Path          | 16    | 0        | 1              | 0        |
| PathErr       | 0     | 0        | 0              | 0        |
| PathTear      | 1     | 0        | 0              | 0        |
| Resv          | 0     | 11       | 0              | 1        |
| ResvErr       | 0     | 0        | 0              | 0        |
| ResvTear      | 0     | 0        | 0              | 0        |
| Hello         | 66    | 67       | 1              | 1        |
| Ack           | 0     | 0        | 0              | 0        |
| Srefresh      | 0     | 0        | 0              | 0        |
| EndtoEnd RSVP | 0     | 0        | 0              | 0        |

...

### show rsvp interface extensive

```

user@host> show rsvp interface extensive
so-1/0/0.0 Index 72, State Ena/Up
NoAuthentication, NoAggregate, NoReliable, NoLinkProtection
HelloInterval 9(second)
Address 192.168.213.22, 10.255.240.175
ActiveResv 1, PreemptionCnt 0, Update threshold 10%
Subscription 100%,
bc0 = (ct0+ct1+ct2+ct3), StaticBW 622.08Mbps
bc1 = (ct1+ct2+ct3), StaticBW 466.56Mbps

```

```

bc2 = (ct2+ct3), StaticBW 311.04Mbps
bc3 = ct3, StaticBW 155.52Mbps
ct0: StaticBW 155.52Mbps, AvailableBW 522.08Mbps
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
ct1: StaticBW 155.52Mbps, AvailableBW 366.56Mbps
ReservedBW [0] 100Mbps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps

ct2: StaticBW 155.52Mbps, AvailableBW 311.04Mbps
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
ct3: StaticBW 155.52Mbps, AvailableBW 155.52Mbps
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
Queue TxRate Priority Exact
 0 155.52Mbps 25% Low
 1 155.52Mbps 25% Low
 2 155.52Mbps 25% Low
 3 155.52Mbps 25% Low

```

### show rsvp interface link-management

```

user@host> show rsvp interface link-management
RSVP interface: 2 active
PEER-C State: Up
Active Control Channel: so-0/1/0.0

TElink: TElnk1, Link ID: 37811
ActiveResv 0, PreemptionCnt 0
StaticBW 155.52Mbps, ReservedBW: 0bps, AvailableBW: 155.52Mbps

TElink: TElnk2, Link ID: 37808
ActiveResv 1, PreemptionCnt 0
StaticBW 155.52Mbps, ReservedBW: 0bps, AvailableBW: 155.52Mbps

PEER-B State: Up
Active Control Channel: so-1/0/0.0

TElink: TElnkAB1, Link ID: 1598
ActiveResv 0, PreemptionCnt 0
StaticBW 622.08Mbps, ReservedBW: 0bps, AvailableBW: 622.08Mbps

TElink: TElnkAB2, Link ID: 1597
ActiveResv 0, PreemptionCnt 0
StaticBW 622.08Mbps, ReservedBW: 0bps, AvailableBW: 622.08Mbps

```

## show rsvp neighbor

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 275</a><br><a href="#">Syntax (EX Series Switches) on page 275</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Syntax</b>                      | <pre>show rsvp neighbor &lt;brief   detail&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Syntax (EX Series Switches)</b> | <pre>show rsvp neighbor &lt;brief   detail&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>                 | Display Resource Reservation Protocol (RSVP) neighbors that were discovered dynamically during the exchange of RSVP packets.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                     | <p><b>none</b>—Display standard information about RSVP neighbors.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display the RSVP neighbor information for the specified instance. If <i>instance-name</i> is omitted, RSVP neighbor information is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>List of Sample Output</b>       | <a href="#">show rsvp neighbor on page 279</a><br><a href="#">show rsvp neighbor detail on page 279</a>                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Output Fields</b>               | <a href="#">Table 36 on page 275</a> lists the output fields for the <b>show rsvp neighbor</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                               |

**Table 36: show rsvp neighbor Output Fields**

| Field Name    | Field Description                                                                                                                                                    | Level of Output |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| RSVP neighbor | Number of neighbors that the routing device has learned of. Each neighbor has one line of output.                                                                    | All levels      |
| via           | Name of the interface where the neighbor has been detected. In the case of generalized MPLS (GMPLS) LSPs, the name of the peer where the neighbor has been detected. | detail          |
| Address       | Address of a learned neighbor.                                                                                                                                       | All levels      |

Table 36: show rsvp neighbor Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Level of Output |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Idle</b>                | Length of time the neighbor has been idle, in seconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | All levels      |
| <b>Up/Dn</b>               | Number of neighbor up or down transitions detected by RSVP hello packets. If the up count is 1 greater than the down count, the neighbor is currently up. Otherwise, the neighbor is down. Neighbors that do not support RSVP hello packets, such as routers running Junos OS Release 3.2 or earlier, are not reported as up or down.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | All levels      |
| <b>Up cnt and Down cnt</b> | Number of neighbor up or down transitions detected by RSVP hello packets. If the up count is 1 greater than the down count, the neighbor is currently up. Otherwise, the neighbor is down. Neighbors that do not support RSVP hello packets, such as routers running Junos OS Release 3.2 or earlier, are not reported as up or down.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail</b>   |
| <b>status</b>              | State of the RSVP neighbor: <ul style="list-style-type: none"> <li>• <b>Up</b>—Routing device can detect RSVP Hello messages from the neighbor.</li> <li>• <b>Down</b>—Routing device has received one of the following indications:               <ul style="list-style-type: none"> <li>• Communication failure from the neighbor.</li> <li>• Communication from IGP that the neighbor is unavailable.</li> <li>• Change in the sequence numbers in the RSVP Hello messages sent by the neighbor.</li> </ul> </li> <li>• <b>Restarting</b>—RSVP neighbor is unavailable and might be restarting. The neighbor remains in this state until it has restarted or is declared dead. This state is possible only when graceful restart is enabled.</li> <li>• <b>Restarted</b>—RSVP neighbor has restarted and is undergoing state recovery (graceful restart) procedures.</li> <li>• <b>Dead</b>—Routing device has lost all communication with the RSVP neighbor. Any RSVP sessions with that neighbor are torn down.</li> </ul> | <b>detail</b>   |
| <b>LastChange</b>          | Time elapsed since the neighbor state changed either from up to down or from down to up. The format is <b>hh:mm:ss</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | All levels      |
| <b>Last changed time</b>   | Time elapsed since the neighbor state changed either from up to down or from down to up.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b>   |
| <b>HelloInt</b>            | Frequency at which RSVP hellos are sent on this interface (in seconds).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | All levels      |
| <b>HelloTx/Rx</b>          | Number of hello packets sent to and received from the neighbor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | All levels      |
| <b>Hello</b>               | Number of RSVP hello packets that have been sent to and received from the neighbor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail</b>   |
| <b>Message received</b>    | Number of Path and Resv messages that this routing device has received from the neighbor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail</b>   |
| <b>Remote Instance</b>     | Identification provided by the remote routing device during Hello message exchange.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail</b>   |

Table 36: show rsvp neighbor Output Fields (*continued*)

| Field Name               | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Local Instance</b>    | Identification sent to the remote routing device during Hello message exchange.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>   |
| <b>Refresh reduction</b> | <p>Measure of processing overhead requests of refresh messages. Refresh reduction extensions improve routing device performance by reducing the process overhead, thus increasing the number of LSPs a routing device can support. <b>Refresh reduction</b> can have the following values:</p> <ul style="list-style-type: none"> <li>• <b>operational</b>—All four RSVP refresh reduction extensions—message ack, bundling, summary refresh, and staged refresh timer—are functional between the two neighboring routing devices. For a detailed explanation of these extensions, see RFC 2961.</li> <li>• <b>incomplete</b>—Some RSVP refresh reduction extensions are functional between the two neighboring routing devices.</li> <li>• <b>no operational</b>—Either the refresh reduction feature has been turned off, or the remote routing device cannot support the refresh reduction extensions.</li> </ul> | <b>detail</b>   |
| <b>Remote end</b>        | <p>Neighboring routing device's status with regard to refresh reduction:</p> <ul style="list-style-type: none"> <li>• <b>enabled</b>—Remote routing device has requested refresh reduction during RSVP message exchanges.</li> <li>• <b>disabled</b>—Remote routing device does not require refresh reduction.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail</b>   |
| <b>Ack-extension</b>     | <p>An RSVP refresh reduction extension:</p> <ul style="list-style-type: none"> <li>• <b>enabled</b>—Both local and remote routing devices support the ack-extension (RFC 2961).</li> <li>• <b>disabled</b>—Remote routing device does not support the ack-extension.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>   |
| <b>Link protection</b>   | <p>Status of the MPLS fast reroute mechanism that protects traffic from link failure:</p> <ul style="list-style-type: none"> <li>• <b>enabled</b>—Link protection feature has been turned on, protecting the neighbor with a bypass LSP.</li> <li>• <b>disabled</b>—No link protection feature has been enabled for this neighbor.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b>   |
| <b>LSP name</b>          | Name of the bypass LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>detail</b>   |
| <b>Bypass LSP</b>        | <p>Status of the bypass LSP. It can have the following values:</p> <ul style="list-style-type: none"> <li>• <b>does not exist</b>—Bypass LSP is not available.</li> <li>• <b>connecting</b>—Routing device is in the process of establishing a bypass LSP, and the LSP is not available for link protection at the moment.</li> <li>• <b>operational</b>—Bypass LSP is up and running.</li> <li>• <b>down</b>—Bypass LSP has gone down, with the most probable cause a node or a link failure on the bypass path.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail</b>   |
| <b>Backup routes</b>     | Number of user LSPs (or routes) that are being protected by a bypass LSP (before link failure).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>   |
| <b>Backup LSPs</b>       | Number of LSPs that have been temporarily established to maintain traffic by refreshing the downstream LSPs during link failure (not a one-to-one correspondence).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | <b>detail</b>   |

**Table 36: show rsvp neighbor Output Fields (*continued*)**

| Field Name                   | Field Description                                                                                                                                                                                                                                                                                                              | Level of Output |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Bypass explicit route</b> | Explicit route object's (ERO) path that is taken by the bypass LSP.                                                                                                                                                                                                                                                            | <b>detail</b>   |
| <b>Restart time</b>          | Length of time a neighbor waits to receive a Hello from the restarting node before declaring the node dead and deleting the states (in milliseconds).                                                                                                                                                                          | <b>detail</b>   |
| <b>Recovery time</b>         | Length of time during which the restarting node attempts to recover its lost states with help from its neighbors (in milliseconds). Recovery time is advertised by the restarting node to its neighbors, and applies to nodal faults. The restarting node considers its graceful restart complete after this time has elapsed. | <b>detail</b>   |



## Sample Output

### show rsvp neighbor

```
user@host> show rsvp neighbor
RSVP neighbor: 2 learned
Address Idle Up/Dn LastChange HelloInt HelloTx/Rx
192.168.207.203 0 3/2 13:01 3 366/349
192.168.207.207 0 1/0 22:49 3 448/448
```

### show rsvp neighbor detail

```
user@host> show rsvp neighbor detail
RSVP neighbor: 2 learned
Address: 192.168.207.203 via: ecstasy1 status: Up
 Last changed time: 28:47, Idle: 0 sec, Up cnt: 3, Down cnt: 2
 Message received: 632
 Hello: sent 673, received 656, interval 3 sec
 Remote instance: 0x6432838a, Local instance: 0x74b72e36
 Refresh reduction: operational
 Remote end: enabled, Ack-extension: enabled
 Link protection: enabled
 LSP name: Bypass_to_192.168.207.203
 Bypass LSP: operational, Backup routes: 1, Backup LSPs: 0
 Bypass explicit route: 192.168.207.207 192.168.207.224
 Restart time: 60000 msec, Recovery time: 0 msec
```

## show rsvp session

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show rsvp session &lt;brief   detail   extensive   terse&gt; &lt;bidirectional   unidirectional&gt; &lt;down   up&gt; &lt;interface <i>interface-name</i>&gt; &lt;lsp-type&gt; &lt;name <i>session-name</i>&gt; &lt;session-type&gt; &lt;statistics&gt; &lt;te-link <i>te-link</i>&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Display information about Resource Reservation Protocol (RSVP) sessions.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><b>none</b>—Display standard information about all RSVP sessions.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>bidirectional   unidirectional</b>—(Optional) Display information about bidirectional or unidirectional RSVP sessions only, respectively.</p> <p><b>down   up</b>—(Optional) Display only LSPs that are inactive or active, respectively.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display RSVP sessions for the specified interface only.</p> <p><b><i>lsp-type</i></b> —(Optional) Display information about RSVP sessions with regard to LSPs:</p> <ul style="list-style-type: none"><li>• <b>bypass</b>—Sessions used for bypass LSPs.</li><li>• <b>lsp</b>—Sessions used to set up LSPs.</li><li>• <b>nolsp</b>—Sessions not used to set up LSPs.</li></ul> <p><b>name <i>session-name</i></b>—(Optional) Display information about the named session.</p> <p><b><i>session-type</i></b>—(Optional) Display information about a particular session type:</p> <ul style="list-style-type: none"><li>• <b>egress</b>—Sessions that terminate on this switch.</li><li>• <b>ingress</b>—Sessions that originate from this switch.</li><li>• <b>transit</b>—Sessions that transit through this switch.</li></ul> <p><b>statistics</b>—(Optional) Display packet statistics.</p> <p><b>te-link <i>te-link</i></b>—(Optional) Display sessions with reservations on the specified traffic-engineered link name.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

- Related Documentation**
- [Example: Configuring MPLS on EX8200 and EX4500 Switches on page 27](#)
  - [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect \(CLI Procedure\) on page 87](#)
  - [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\) on page 83](#)
  - [Configuring MPLS on EX8200 and EX4500 Provider Switches \(CLI Procedure\) on page 78](#)
  - [MPLS Applications Feature Guide for Routing Devices](#)

**List of Sample Output**

- [show rsvp session on page 283](#)
- [show rsvp session statistics on page 283](#)
- [show rsvp session detail on page 283](#)
- [show rsvp session extensive on page 283](#)

**Output Fields** [Table 37 on page 281](#) describes the output fields for the **show rsvp session** command. Output fields are listed in the approximate order in which they appear.

**Table 37: show rsvp session Output Fields**

| Field Name   | Field Description                                                                                                                                                                                                                                                                | Level of Output |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Ingress RSVP | Information about ingress RSVP sessions.                                                                                                                                                                                                                                         | detail          |
| Ingress RSVP | Information about ingress RSVP sessions. Each session has one line of output.                                                                                                                                                                                                    | All levels      |
| Egress RSVP  | Information about egress RSVP sessions.                                                                                                                                                                                                                                          | All levels      |
| Transit RSVP | Information about the transit RSVP sessions.                                                                                                                                                                                                                                     | All levels      |
| To           | Destination (egress switch) of the session.                                                                                                                                                                                                                                      | All levels      |
| From         | Source (ingress switch) of the session.                                                                                                                                                                                                                                          | All levels      |
| State        | State of the path: <b>Up</b> , <b>Down</b> , or <b>AdminDn</b> . <b>AdminDn</b> indicates that the LSP is being taken down gracefully.                                                                                                                                           | All levels      |
| Address      | Destination (egress switch) of the LSP.                                                                                                                                                                                                                                          | detail          |
| LSPstate     | State of the LSP that is being handled by this RSVP session. It can be either <b>Up</b> , <b>Dn</b> (down), or <b>AdminDn</b> . <b>AdminDn</b> indicates that the LSP is being taken down gracefully.                                                                            | brief, detail   |
| Rt           | Number of active routes (prefixes) that have been installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the routing table is the primary MPLS table ( <b>mpls.0</b> ). | brief           |

Table 37: show rsvp session Output Fields (*continued*)

| Field Name                                         | Field Description                                                                                                                                                                                                                                                                                 | Level of Output      |
|----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| <b>ActiveRoute</b>                                 | Number of active routes (prefixes) that have been installed in the forwarding table. For ingress RSVP sessions, the forwarding table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the forwarding table is the primary MPLS table ( <b>mpls.0</b> ).         | <b>detail</b>        |
| <b>LSPname</b>                                     | Name of the LSP.                                                                                                                                                                                                                                                                                  | <b>brief, detail</b> |
| <b>LSPpath</b>                                     | Indicates whether the RSVP session is for the primary or secondary LSP path. <b>LSPpath</b> can be either <b>primary</b> or <b>secondary</b> and can be displayed on the ingress, egress, and transit switches. <b>LSPpath</b> can also indicate when a graceful LSP deletion has been triggered. | <b>detail</b>        |
| <b>Recovery label received</b>                     | (When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.                                                                                                                                                                                            | <b>detail</b>        |
| <b>Recovery label sent</b>                         | (When LSP is bidirectional) Label the downstream node suggests for use in its Resv messages that is returned.                                                                                                                                                                                     | <b>detail</b>        |
| <b>Suggested label received</b>                    | (When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.                                                                                                                                                                                            | <b>detail</b>        |
| <b>Suggested label sent</b>                        | (When LSP is bidirectional) Label the downstream node suggests for use in its Resv message that is returned.                                                                                                                                                                                      | <b>detail</b>        |
| <b>Resv style or Style</b>                         | RSVP reservation style. This field consists of two parts. The first is the number of active reservations. The second is the reservation style, which can be <b>FF</b> (fixed filter), <b>SE</b> (shared explicit), or <b>WF</b> (wildcard filter).                                                | <b>brief detail</b>  |
| <b>Label in</b>                                    | Incoming label for this LSP.                                                                                                                                                                                                                                                                      | <b>brief, detail</b> |
| <b>Label out</b>                                   | Outgoing label for this LSP.                                                                                                                                                                                                                                                                      | <b>brief, detail</b> |
| <b>Time left</b>                                   | Number of seconds remaining in the lifetime of the reservation.                                                                                                                                                                                                                                   | <b>brief, detail</b> |
| <b>Since</b>                                       | Date and time when the RSVP session was initiated.                                                                                                                                                                                                                                                | <b>detail</b>        |
| <b>Tspec</b>                                       | Sender's traffic specification, which describes the sender's traffic parameters.                                                                                                                                                                                                                  | <b>detail</b>        |
| <b>Port number</b>                                 | Protocol ID and sender/receiver port used in this RSVP session.                                                                                                                                                                                                                                   | <b>detail</b>        |
| <b>Creating backup LSP, link down</b>              | A <b>link down</b> event occurred, and traffic is being switched over to the bypass LSP.                                                                                                                                                                                                          | <b>extensive</b>     |
| <b>Deleting backup LSP, protected LSP restored</b> | Link has come back up and the LSP has been restored. Because the backup LSP is no longer needed, it is deleted.                                                                                                                                                                                   | <b>extensive</b>     |
| <b>PATH rcvfrom</b>                                | Address of the previous-hop (upstream) switch or client, interface the neighbor used to reach this switch, and number of packets received from the upstream neighbor.                                                                                                                             | <b>detail</b>        |

## Sample Output

### show rsvp session

```

user@switch> show rsvp session
Ingress RSVP: 1 sessions
To From State Rt Style Labelin Labelout LSPName
10.255.245.214 10.255.245.212 AdminDn 0 1 FF - 22293 LSP Bidir
Total 1 displayed, Up 1, Down 0

Egress RSVP: 2 sessions
To From State Rt Style Labelin Labelout LSPName
10.255.245.194 10.255.245.195 Up 0 1 FF 39811 - Gpro3-ba Bidir
10.255.245.194 10.255.245.195 Up 0 1 FF 3 - pro3-ba
Total 2 displayed, Up 2, Down 0

Transit RSVP: 1 sessions
To From State Rt Style Labelin Labelout LSPName
10.255.245.198 10.255.245.197 Up 0 1 SE 100000 3 pro3-de
Total 1 displayed, Up 1, Down 0

```

### show rsvp session statistics

```

user@switch> show rsvp session statistics
Ingress RSVP: 2 sessions
To From State Packets Bytes LSPName
10.255.245.24 10.255.245.22 Up 0 0 pro3-bd
10.255.245.24 10.255.245.22 Up 44868 2333136 pro3-bd-2
Total 2 displayed, Up 2, Down 0
Egress RSVP: 2 sessions
To From State Packets Bytes LSPName
10.255.245.22 10.255.245.24 Up 0 0 pro3-db
10.255.245.22 10.255.245.24 Up 0 0 pro3-db-2
Total 2 displayed, Up 2, Down 0
Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### show rsvp session detail

```

user@switch> show rsvp session detail
Ingress RSVP: 1 sessions
1.1.1.1
 From: 2.2.2.2, LSPstate: Up, ActiveRoute: 0
 LSPName: to-a, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 3
 Resv style: 1 FF, Label in: -, Label out: 3
 Time left: -, Since: Fri Mar 26 18:42:42 2004
 Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
 DiffServ info: diffServ-TE LSP, bandwidth: <ct1 300kbps>
 Port number: sender 1 receiver 15876 protocol 0
 PATH rcvfrom: localclient
 Adspec: sent MTU 1500
 PATH sentto: 192.168.37.16 (t1-0/2/1.0) 1 pkt

```

### show rsvp session extensive

```

user@switch> show rsvp session extensive

8.8.8.8

```

```
From: 9.9.9.9, LSPstate: Up, ActiveRoute: 0
LSPname: lsp_to_240, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 322832
Resv style: 1 FF, Label in: -, Label out: 322832
Time left: -, Since: Thu Feb 26 16:25:39 2009
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 2 receiver 44542 protocol 0
PATH rcvfrom: localclient
Adspec: sent MTU 1500
Path MTU: received 1500
PATH sentto: 3.3.3.2 (xe-0/1/0.0) 238 pkts
RESV rcvfrom: 3.3.3.2 (xe-0/1/0.0) 234 pkts
Explct route: 3.3.3.2 4.4.4.2
```

## show rsvp session

|                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                      | <a href="#">Syntax on page 285</a><br><a href="#">Syntax (EX and QFX Series Switches) on page 285</a>                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Syntax</b>                              | <pre>show rsvp session &lt;brief   detail   extensive   terse&gt; &lt;bidirectional   unidirectional&gt; &lt;bypass&gt; &lt;down   up&gt; &lt;externally-provisioned&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;lsp-type&gt; &lt;name <i>session-name</i>&gt; &lt;p2mp&gt; &lt;session-type&gt; &lt;statistics&gt; &lt;te-link <i>te-link</i>&gt;</pre>                                           |
| <b>Syntax (EX and QFX Series Switches)</b> | <pre>show rsvp session &lt;brief   detail   extensive   terse&gt; &lt;bidirectional   unidirectional&gt; &lt;bypass&gt; &lt;down   up&gt; &lt;externally-provisioned&gt; &lt;interface <i>interface-name</i>&gt; &lt;lsp-type&gt; &lt;name <i>session-name</i>&gt; &lt;p2mp&gt; &lt;session-type&gt; &lt;statistics&gt; &lt;te-link <i>te-link</i>&gt;</pre>                                                                                                                                           |
| <b>Release Information</b>                 | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>externally-provisioned</b> option added in Junos OS Release 13.3.</p> <p>Command introduced in Junos OS Release 13.2X51-D15 for QFX Series.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                              |
| <b>Description</b>                         | Display information about Resource Reservation Protocol (RSVP) sessions.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                             | <p><b>none</b>—Display standard information about all RSVP sessions.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>bidirectional   unidirectional</b>—(Optional) Display information about bidirectional or unidirectional RSVP sessions only, respectively.</p> <p><b>bypass</b>—(Optional) Display RSVP sessions for bypass LSPs.</p> <p><b>down   up</b>—(Optional) Display only LSPs that are inactive or active, respectively.</p> |

**externally-provisioned**—(Optional) Display the LSPs that are generated dynamically and provisioned by an external Path Computation Element (PCE).

**instance *instance-name***—(Optional) Display RSVP sessions for the specified instance. If *instance-name* is omitted, RSVP session information is displayed for the master instance.

**interface *interface-name***—(Optional) Display RSVP sessions for the specified interface only.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

***lsp-type***—(Optional) Display information about RSVP sessions with regard to LSPs:

- **bypass**—Sessions used for bypass LSPs.
- **lsp**—Sessions used to set up LSPs.
- **nolsp**—Sessions not used to set up LSPs.

**name *session-name***—(Optional) Display information about the named session.

**p2mp**—(Optional) Display point-to-multipoint information.

***session-type***—(Optional) Display information about a particular session type:

- **egress**—Sessions that terminate on this routing device.
- **ingress**—Sessions that originate from this routing device.
- **transit**—Sessions that transit through this routing device.

**statistics**—(Optional) Display packet statistics.

**te-link *te-link***—(Optional) Display sessions with reservations on the specified TE link.

**Required Privilege  
Level**

view

**Related  
Documentation**

- [clear rsvp session on page 191](#)

**List of Sample Output**

[show rsvp session on page 290](#)  
[show rsvp session statistics on page 290](#)  
[show rsvp session detail on page 291](#)  
[show rsvp session detail \(When Egress Protection is in Standby Mode\) on page 291](#)  
[show rsvp session detail \(When Egress Protection is in Effect During a Local Repair\) on page 291](#)  
[show rsvp session detail \(Path MTU Output Field\) on page 292](#)  
[show rsvp session detail \(GMPLS\) on page 292](#)  
[show rsvp session extensive on page 292](#)  
[show rsvp session p2mp \(Ingress Router\) on page 293](#)  
[show rsvp session p2mp \(Transit Router\) on page 293](#)



**Output Fields** Table 38 on page 287 describes the output fields for the **show rsvp session** command. Output fields are listed in the approximate order in which they appear.

**Table 38: show rsvp session Output Fields**

| Field Name               | Field Description                                                                                                                                                                                                                                                                                        | Level of Output     |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| <b>Ingress RSVP</b>      | Information about ingress RSVP sessions.                                                                                                                                                                                                                                                                 | <b>detail</b>       |
| <b>Ingress RSVP</b>      | Information about ingress RSVP sessions. Each session has one line of output.                                                                                                                                                                                                                            | All levels          |
| <b>Egress RSVP</b>       | Information about egress RSVP sessions.                                                                                                                                                                                                                                                                  | All levels          |
| <b>Transit RSVP</b>      | Information about the transit RSVP sessions.                                                                                                                                                                                                                                                             | All levels          |
| <b>P2MP name</b>         | (Appears only when the <b>p2mp</b> option is specified). Name of the point-to-multipoint LSP path.                                                                                                                                                                                                       | All levels          |
| <b>P2MP branch count</b> | (Appears only when the <b>p2mp</b> option is specified). Number of LSPs receiving packets from the point-to-multipoint LSP.                                                                                                                                                                              | All levels          |
| <b>To</b>                | Destination (egress routing device) of the session.                                                                                                                                                                                                                                                      | All levels          |
| <b>From</b>              | Source (ingress routing device) of the session.                                                                                                                                                                                                                                                          | All levels          |
| <b>State</b>             | State of the path: <b>Up</b> , <b>Down</b> , or <b>AdminDn</b> . <b>AdminDn</b> indicates that the LSP is being taken down gracefully.                                                                                                                                                                   | All levels          |
| <b>Address</b>           | Destination (egress routing device) of the LSP.                                                                                                                                                                                                                                                          | <b>detail</b>       |
| <b>From</b>              | Source (ingress routing device) of the session.                                                                                                                                                                                                                                                          | <b>detail</b>       |
| <b>LSPstate</b>          | State of the LSP that is being handled by this RSVP session. It can be either <b>Up</b> , <b>Dn</b> (down), or <b>AdminDn</b> . <b>AdminDn</b> indicates that the LSP is being taken down gracefully.                                                                                                    | <b>brief detail</b> |
| <b>Rt</b>                | Number of active routes (prefixes) that have been installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the routing table is the primary MPLS table ( <b>mpls.0</b> ).                         | <b>brief</b>        |
| <b>Active Route</b>      | Number of active routes (prefixes) that have been installed in the forwarding table. For ingress RSVP sessions, the forwarding table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the forwarding table is the primary MPLS table ( <b>mpls.0</b> ).                | <b>detail</b>       |
| <b>LSPname</b>           | Name of the LSP.                                                                                                                                                                                                                                                                                         | <b>brief detail</b> |
| <b>LSPpath</b>           | Indicates whether the RSVP session is for the primary or secondary LSP path. <b>LSPpath</b> can be either <b>primary</b> or <b>secondary</b> and can be displayed on the ingress, egress, and transit routing devices. <b>LSPpath</b> can also indicate when a graceful LSP deletion has been triggered. | <b>detail</b>       |

Table 38: show RSVP session Output Fields (*continued*)

| Field Name                      | Field Description                                                                                                                                                                                                                                  | Level of Output     |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| <b>Bypass</b>                   | (Egress routing device) Destination address for the bypass LSP.                                                                                                                                                                                    | <b>detail</b>       |
| <b>Bidir</b>                    | (When LSP is bidirectional) LSP will allow data to travel in both directions between GMPLS devices.                                                                                                                                                | <b>detail</b>       |
| <b>Bidirectional</b>            | (When LSP is bidirectional) LSP will allow data to travel both ways between GMPLS devices.                                                                                                                                                         | <b>detail</b>       |
| <b>Upstream label in</b>        | (When LSP is bidirectional) Incoming label for reverse direction traffic for this LSP.                                                                                                                                                             | <b>detail</b>       |
| <b>Upstream label out</b>       | (When LSP is bidirectional) Outgoing label for reverse direction traffic for this LSP.                                                                                                                                                             | <b>detail</b>       |
| <b>Recovery label received</b>  | (When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.                                                                                                                                             | <b>detail</b>       |
| <b>Recovery label sent</b>      | (When LSP is bidirectional) Label the downstream node suggests for use in its Resv messages that is returned.                                                                                                                                      | <b>detail</b>       |
| <b>Suggested label received</b> | (When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.                                                                                                                                             | <b>detail</b>       |
| <b>Suggested label sent</b>     | (When LSP is bidirectional) Label the downstream node suggests for use in its Resv message that is returned.                                                                                                                                       | <b>detail</b>       |
| <b>Resv style or Style</b>      | RSVP reservation style. This field consists of two parts. The first is the number of active reservations. The second is the reservation style, which can be <b>FF</b> (fixed filter), <b>SE</b> (shared explicit), or <b>WF</b> (wildcard filter). | <b>brief detail</b> |
| <b>Label in</b>                 | Incoming label for this LSP.                                                                                                                                                                                                                       | <b>brief detail</b> |
| <b>Label out</b>                | Outgoing label for this LSP.                                                                                                                                                                                                                       | <b>brief detail</b> |
| <b>Time left</b>                | Number of seconds remaining in the lifetime of the reservation.                                                                                                                                                                                    | <b>brief detail</b> |
| <b>Since</b>                    | Date and time when the RSVP session was initiated.                                                                                                                                                                                                 | <b>detail</b>       |
| <b>Tspec</b>                    | Sender's traffic specification, which describes the sender's traffic parameters.                                                                                                                                                                   | <b>detail</b>       |
| <b>DiffServ info</b>            | Indicates whether the LSP is a multiclass LSP ( <b>multiclass diffServ-TE LSP</b> ) or a Differentiated-Services-aware traffic engineering LSP ( <b>diffServ-TE LSP</b> ).                                                                         | <b>detail</b>       |
| <b>bandwidth</b>                | Bandwidth for each class type ( <b>ct0</b> , <b>ct1</b> , <b>ct2</b> , or <b>ct3</b> ).                                                                                                                                                            | <b>detail</b>       |
| <b>Port number</b>              | Protocol ID and sender/receiver port used in this RSVP session.                                                                                                                                                                                    | <b>detail</b>       |
| <b>Attrib flags</b>             | <b>Non-PHP</b> indicates that ultimate hop popping has been requested by the LSP using this RSVP session                                                                                                                                           | <b>extensive</b>    |

Table 38: show RSVP session Output Fields (*continued*)

| Field Name                                          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Level of Output         |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>FastReroute desired</b>                          | Fast reroute has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>detail</b>           |
| <b>Soft preemption desired</b>                      | Soft preemption has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail</b>           |
| <b>FastReroute desired</b>                          | (Data [not a bypass or backup] LSP when the protection scheme has been requested) Fast reroute (one-to-one backup) has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail extensive</b> |
| <b>Link protection desired</b>                      | (Data [not a bypass or backup] LSP when the protection scheme has been requested) Link protection (many-to-one backup) has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>detail extensive</b> |
| <b>Node/Link protection desired</b>                 | (Data [not a bypass or backup] LSP when the protection scheme has been requested) Node and link protection (many-to-one backup) has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail extensive</b> |
| <b>Type</b>                                         | <p>LSP type:</p> <ul style="list-style-type: none"> <li>• <b>Link protected LSP</b>—LSP has been protected by link protection at the outgoing interface. The name of the bypass used is also listed here (<b>extensive</b>).</li> <li>• <b>Node/Link protected LSP</b>—LSP has been protected by node and link protection at the outgoing interface. The name of the bypass used is also listed here (<b>extensive</b>).</li> <li>• <b>Protection down</b>—LSP is not currently protected.</li> <li>• <b>Bypass LSP</b>—LSP that is used to protect one or more user LSPs in case of link failure.</li> <li>• <b>Backup LSP at Point-of-Local-Repair (PLR)</b>—LSP that has been temporarily established to protect a user LSP at the ingress of a failed link.</li> <li>• <b>Backup LSP at Merge Point (MP)</b>—LSP that has been temporarily established to protect a user LSP at the egress of a failed link.</li> </ul> | <b>detail extensive</b> |
| <b>New bypass</b>                                   | New bypass (the bypass name is also displayed) has been activated to protect the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>extensive</b>        |
| <b>Link protection up, using <i>bypass-name</i></b> | Link protection (the bypass name is also displayed) has been activated for the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>extensive</b>        |
| <b>Creating backup LSP, link down</b>               | A <b>link down</b> event occurred, and traffic is being switched over to the bypass LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>extensive</b>        |
| <b>Deleting backup LSP, protected LSP restored</b>  | Link has come back up and the LSP has been restored. Because the backup LSP is no longer needed, it is deleted.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>extensive</b>        |
| <b>Path mtu</b>                                     | Displays the value of the path MTU received from the network (through signaling) and the value used for forwarding. This value is only displayed on ingress routing devices with the <b>allow-fragmentation</b> statement configured at the <b>[edit protocols mpls path-mtu]</b> hierarchy level. If there is a detour LSP, the path MTU for the detour is also displayed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | <b>detail</b>           |

Table 38: show rsvp session Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                   | Level of Output |
|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Egress protection<br>PLR as protector | RSVP state on the Protector or the point-of-local-repair (PLR) routing device: <ul style="list-style-type: none"> <li><b>Active</b>— Egress protection is available at the Protector or the PLR routing device.</li> <li><b>In Use</b>— Local repair has been completed.</li> </ul> | detail          |
| PATH rcvfrom                          | Address of the previous-hop (upstream) routing device or client, interface the neighbor used to reach this routing device, and number of packets received from the upstream neighbor.                                                                                               | detail          |
| Adspec                                | MTU signaled from the ingress routing device to the egress routing device by means of the adspec object.                                                                                                                                                                            | detail          |
| PATH sentto                           | Address of the next-hop (downstream) routing device or client, interface used to reach this neighbor (or peer-name in the GMPLS LSP case), and number of packets sent to the downstream routing device.                                                                             | detail          |
| Explct route                          | Explicit route for the session. Normally this value will be the same as that of record route. Differences indicate that path rerouting has occurred, typically during fast reroute.                                                                                                 | detail          |
| Record route                          | Recorded route for the session, taken from the record route object. Normally this value will be the same as that of explct route. Differences indicate that path rerouting has occurred, typically during fast reroute.                                                             | detail          |

## Sample Output

### show rsvp session

```

user@host> show rsvp session
Ingress RSVP: 1 sessions
To From State Rt Style Labelin Labelout LSPName
10.255.245.214 10.255.245.212 AdminDn 0 1 FF - 22293 LSP Bidir
Total 1 displayed, Up 1, Down 0

Egress RSVP: 2 sessions
To From State Rt Style Labelin Labelout LSPName
10.255.245.194 10.255.245.195 Up 0 1 FF 39811 - Gpro3-ba Bidir
10.255.245.194 10.255.245.195 Up 0 1 FF 3 - pro3-ba
Total 2 displayed, Up 2, Down 0

Transit RSVP: 1 sessions
To From State Rt Style Labelin Labelout LSPName
10.255.245.198 10.255.245.197 Up 0 1 SE 100000 3 pro3-de
Total 1 displayed, Up 1, Down 0

```

### show rsvp session statistics

```

user@host> show rsvp session statistics
Ingress RSVP: 2 sessions
To From State Packets Bytes LSPName
10.255.245.24 10.255.245.22 Up 0 0 pro3-bd
10.255.245.24 10.255.245.22 Up 44868 2333136 pro3-bd-2

```

```

Total 2 displayed, Up 2, Down 0
Egress RSVP: 2 sessions
To From State Packets Bytes LSPname
10.255.245.22 10.255.245.24 Up 0 0 pro3-db
10.255.245.22 10.255.245.24 Up 0 0 pro3-db-2
Total 2 displayed, Up 2, Down 0
Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

#### show rsvp session detail

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
1.1.1.1
 From: 2.2.2.2, LSPstate: Up, ActiveRoute: 0
 LSPname: to-a, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 3
 Resv style: 1 FF, Label in: -, Label out: 3
 Time left: -, Since: Fri Mar 26 18:42:42 2004
 Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
 DiffServ info: diffServ-TE LSP, bandwidth: <ct1 300kbps>
 Port number: sender 1 receiver 15876 protocol 0
 PATH rcvfrom: localclient
 Adspec: sent MTU 1500
 PATH sentto: 192.168.37.16 (t1-0/2/1.0) 1 pkt

```

#### show rsvp session detail (When Egress Protection is in Standby Mode)

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
1.1.1.1
 From: 2.2.2.2, LSPstate: Up, ActiveRoute: 0
 LSPname: to-a, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 3
 Resv style: 1 FF, Label in: -, Label out: 3
 Time left: -, Since: Fri Mar 26 18:42:42 2004
 Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
 DiffServ info: diffServ-TE LSP, bandwidth: <ct1 300kbps>
 Port number: sender 1 receiver 15876 protocol 0
 Egress protection PLR as protector: Active
 PATH rcvfrom: localclient
 Adspec: sent MTU 1500
 PATH sentto: 192.168.37.16 (t1-0/2/1.0) 1 pkt

```

#### show rsvp session detail (When Egress Protection is in Effect During a Local Repair)

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
1.1.1.1
 From: 2.2.2.2, LSPstate: Down, ActiveRoute: 0
 LSPname: to-a, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 3
 Resv style: 1 FF, Label in: -, Label out: 3
 Time left: -, Since: Fri Mar 26 18:42:42 2004
 Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
 DiffServ info: diffServ-TE LSP, bandwidth: <ct1 300kbps>
 Port number: sender 1 receiver 15876 protocol 0
 Egress protection PLR as protector: In Use
 PATH rcvfrom: localclient

```

```

Adspec: sent MTU 1500
PATH sentto: 192.168.37.16 (t1-0/2/1.0) 1 pkt

```

#### show rsvp session detail (Path MTU Output Field)

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
10.255.245.3
 From: 10.255.245.5, LSPstate: Up, ActiveRoute: 3
 LSPname: to-c, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 100432
 Resv style: 1 FF, Label in: -, Label out: 100432
 Time left: -, Since: Mon Aug 16 17:54:40 2006
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 9192
 Port number: sender 1 receiver 57843 protocol 0
 FastReroute desired
 PATH rcvfrom: localclient
 Adspec: sent MTU 4470
 Path mtu: received 4470, using 4458 for forwarding
 PATH sentto: 192.168.37.89 (so-0/2/3.0) 11 pkts
 RESV rcvfrom: 192.168.37.89 (so-0/2/3.0) 10 pkts
 Explct route: 192.168.37.89
 Record route: <self> 192.168.37.89 192.168.37.87
 Detour is Up
 Detour Tspec: rate 0bps size 0bps peak Infbps m 20 M 9192
 Detour adspec: sent MTU 1512
 Path mtu: received 1512, using 1500 for forwarding

```

#### show rsvp session detail (GMPLS)

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
192.168.4.1
 From: 192.168.1.1, LSPstate: Dn, ActiveRoute: 0
 LSPname: gmpls-r1-to-r3, LSPpath: Primary
 Bidirectional, Upstream label in: 21253, Upstream label out: -
 Suggested label received: -, Suggested label sent: 21253
 Recovery label received: -, Recovery label sent: -
 Resv style: 0 -, Label in: -, Label out: -
 Time left: -, Since: Mon Aug 16 17:54:40 2006
 Tspec: rate 0bps size 0bps peak 155.52Mbps m 20 M 1500
 Port number: sender 2 receiver 46115 protocol 0
 PATH rcvfrom: localclient
 Adspec: sent MTU 1500
 PATH MTU: received 0
 PATH sentto: 10.35.1.5 (so-0/2/3.0) 11 pkts
 Explct route: 100.100.100.100 93.93.93.93
 Record route: <self> 100.100.100.100 93.93.93.93
 Total 1 displayed, Up 0, Down 1
 Egress RSVP: 0 sessions
 Total 0 displayed, Up 0, Down 0
 Transit RSVP: 0 sessions
 Total 0 displayed, Up 0, Down 0

```

#### show rsvp session extensive

```

user@host> show rsvp session extensive
Ingress RSVP: 1 sessions

192.168.0.4
 From: 192.168.0.5, LSPstate: Up, ActiveRoute: 0

```

```

LSPname: E-D, LSPpath: Primary
LSPtype: Static Configured
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 299808
Resv style: 1 FF, Label in: -, Label out: 299808
Time left: -, Since: Thu Sep 20 15:54:20 2012
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 2 receiver 61576 protocol 0
Attrib flags: Non-PHP
PATH rcvfrom: localclient
Adspec: sent MTU 1500
Path MTU: received 1500
PATH sentto: 10.0.0.18 (lt-1/2/0.17) 41 pkts
RESV rcvfrom: 10.0.0.18 (lt-1/2/0.17) 40 pkts
Explct route: 10.0.0.18 10.0.0.22
Record route: <self> 10.0.0.18 10.0.0.22
Total 1 displayed, Up 1, Down 0

```

Egress RSVP: 1 sessions

192.168.0.5

```

From: 192.168.0.4, LSPstate: Up, ActiveRoute: 0
LSPname: E-D, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 140, Since: Thu Sep 20 15:52:10 2012
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 49601 protocol 0
PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 44 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.0.0.22 10.0.0.18 <self>
Total 1 displayed, Up 1, Down 0

```

Transit RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

#### show rsvp session p2mp (Ingress Router)

```

user@host> show rsvp session p2mp
Ingress RSVP: 3 sessions
P2MP name: test, P2MP branch count: 1
To From State Rt Style Labelin Labelout LSPname
10.255.10.95 10.255.10.2 Up 0 1 SE - 3 to-pe1
P2MP name: test2, P2MP branch count: 2
To From State Rt Style Labelin Labelout LSPname
10.255.10.23 10.255.10.2 Up 0 1 SE - 299776 to-pe3
10.255.10.16 10.255.10.2 Up 0 1 SE - 299776 to-pe4
Total 3 displayed, Up 3, Down 0

```

Egress RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

#### show rsvp session p2mp (Transit Router)

```

user@host> show rsvp session p2mp

```

## Ingress RSVP: 1 sessions

P2MP name: test, P2MP branch count: 1

| To           | From         | State | Rt | Style | Labelin | Labelout | LSPname |
|--------------|--------------|-------|----|-------|---------|----------|---------|
| 10.255.10.23 | 10.255.10.95 | Up    | 0  | 1 SE  | -       | 299792   | to-pe2  |

Total 1 displayed, Up 1, Down 0

## Egress RSVP: 1 sessions

P2MP name: test, P2MP branch count: 1

| To           | From        | State | Rt | Style | Labelin | Labelout | LSPname |
|--------------|-------------|-------|----|-------|---------|----------|---------|
| 10.255.10.95 | 10.255.10.2 | Up    | 0  | 1 SE  | 3       | -        | to-pe1  |

Total 1 displayed, Up 1, Down 0

## Transit RSVP: 2 sessions

P2MP name: test2, P2MP branch count: 2

| To           | From        | State | Rt | Style | Labelin | Labelout | LSPname |
|--------------|-------------|-------|----|-------|---------|----------|---------|
| 10.255.10.23 | 10.255.10.2 | Up    | 0  | 1 SE  | 299776  | 299808   | to-pe3  |
| 10.255.10.16 | 10.255.10.2 | Up    | 0  | 1 SE  | 299776  | 299856   | to-pe4  |

Total 2 displayed, Up 2, Down 0



## show rsvp statistics

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 295</a><br><a href="#">Syntax (EX Series Switches) on page 295</a>                                                                                                                                                                                                                                                                                                                                                         |
| <b>Syntax</b>                      | <pre>show rsvp statistics &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                       |
| <b>Syntax (EX Series Switches)</b> | show rsvp statistics                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                   |
| <b>Description</b>                 | Display Resource Reservation Protocol (RSVP) packet and error statistics.                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                     | <p><b>none</b>—Display RSVP packet and error statistics.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display RSVP packet and error statistics for the specified instance. If <b><i>instance-name</i></b> is omitted, RSVP statistics is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>       | <ul style="list-style-type: none"> <li>• <a href="#">clear rsvp statistics on page 193</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>       | <a href="#">show rsvp statistics on page 298</a>                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Output Fields</b>               | <p><a href="#">Table 39 on page 295</a> describes the output fields for the <b>show rsvp statistics</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                          |

**Table 39: show rsvp statistics Output Fields**

| Field Name                     | Field Description                                        |
|--------------------------------|----------------------------------------------------------|
| <b>Packet Type</b>             | Statistics about different RSVP messages.                |
| <b>Total Sent</b>              | Total number of packets sent since RSVP was enabled.     |
| <b>Total Received</b>          | Total number of packets received since RSVP was enabled. |
| <b>Last 5 seconds Sent</b>     | Total number of packets sent in the last 5 seconds.      |
| <b>Last 5 seconds Received</b> | Number of packets received in the last 5 seconds.        |

Table 39: show rsvp statistics Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                            |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Path</b>                   | Statistics about Path messages, which are sent from the RSVP sender along the data paths and which store path state information in each node along the path. |
| <b>PathErr</b>                | Statistics about PathErr messages, which are advisory messages that are sent upstream to the sender.                                                         |
| <b>PathTear</b>               | Statistics about PathTear messages, which remove path states and dependent reservation states in any routing devices along a path.                           |
| <b>Resv FF</b>                | Statistics about fixed-filter reservation style messages, which consist of distinct reservations among explicit senders.                                     |
| <b>Resv WF</b>                | Statistics about wildcard-filter reservation style messages, which consist of shared reservations among wildcard senders.                                    |
| <b>Res SE</b>                 | Statistics about shared-explicit reservation style messages, which consist of shared reservations among explicit senders.                                    |
| <b>ResvErr</b>                | Statistics about ResvErr messages, which are advisory messages that are sent when an attempt to establish a reservation fails.                               |
| <b>ResvTear</b>               | Statistics about ResvTear messages, which remove reservation states along a path.                                                                            |
| <b>ResvConf</b>               | Statistics about ResvConfirm messages, which are responses to confirm a reservation request.                                                                 |
| <b>Ack</b>                    | Acknowledge message for refresh reductions.                                                                                                                  |
| <b>SRefresh</b>               | Summary refresh messages.                                                                                                                                    |
| <b>Hello</b>                  | Number of RSVP hello packets that have been sent to and received from the neighbor.                                                                          |
| <b>EndtoEnd RSVP</b>          | Statistics for the number of End-to-end RSVP messages.                                                                                                       |
| <b>Errors</b>                 | Statistics about errored RSVP packets.                                                                                                                       |
| <b>Rcv pkt bad length</b>     | The packet was not processed because its length is inappropriate.                                                                                            |
| <b>Rcv pkt unknown type</b>   | The packet is not one of the well-known RSVP types, as defined in RFC 2205, <i>Resource ReSerVation Protocol (RSVP)</i> .                                    |
| <b>Rcv pkt bad version</b>    | The packet is not an RSVP version 1 packet.                                                                                                                  |
| <b>Rcv pkt auth fail</b>      | The packet failed authentication checks.                                                                                                                     |
| <b>Rcv pkt bad checksum</b>   | The RSVP checksum check failed.                                                                                                                              |
| <b>Rcv pkt bad format</b>     | General packet processing failed because the packet was badly formed.                                                                                        |
| <b>Memory allocation fail</b> | An internal resource failure occurred.                                                                                                                       |

Table 39: show rsvp statistics Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                                                                                                                                                                                                     |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No path information         | A reservation was received, but no sender is active.                                                                                                                                                                                                                                                                                  |
| Resv style conflict         | The same session contains inconsistent reservation styles.                                                                                                                                                                                                                                                                            |
| Port conflict               | There were inconsistent port numbers for the same session.                                                                                                                                                                                                                                                                            |
| Resv no interface           | An interface for the receive reservation packets cannot be located.                                                                                                                                                                                                                                                                   |
| PathErr to client           | Number of PathErr packets delivered to the local client.                                                                                                                                                                                                                                                                              |
| ResvErr to client           | Number of ResvErr packets delivered to the local client.                                                                                                                                                                                                                                                                              |
| Path timeout                | Number of times the sender timed out because the path was removed.                                                                                                                                                                                                                                                                    |
| Resv timeout                | Number of times the receiver timed out because the reservation was removed.                                                                                                                                                                                                                                                           |
| Message out-of-order        | Records the number of RSVP incoming messages that are considered out of order. This is detected from the message ID object's sequence number.                                                                                                                                                                                         |
| Unknown ack msg             | A neighboring routing device replies with an ACK object that contains an unknown message ID. This can indicate a message ID handshake problem. For example, a router receives an ACK for message IDs 1, 2, and 3. However, it only has state for message IDs 1 and 3. The router increments the unknown ack counter by 1.             |
| Recv nack                   | If a neighboring router receives an unknown message ID in an RSVP refresh message, the router sends a Resv nack message back to the sender. This can happen if that neighbor has been rebooted. For this case, the router sends a regular RSVP refresh message to recover the state and start the message-ID handshake process again. |
| Recv duplicated msg-id      | Number of times the same message ID is used by two different RSVP messages. This duplication is usually caused when a neighboring routing device restarts.                                                                                                                                                                            |
| No TE-link to rcv Hop       | Counter of packets discarded because a TE link was not found.                                                                                                                                                                                                                                                                         |
| Rcv pkt disabled interface  | Number of RSVP packets received on an interface that is not enabled for RSVP.                                                                                                                                                                                                                                                         |
| Transmit buffer full        | Number of times the buffer for assembling an outgoing RSVP message was not large enough.                                                                                                                                                                                                                                              |
| Transmit failure            | Number of times the RSVP task failed to send out a packet.                                                                                                                                                                                                                                                                            |
| Receive failure             | Number of times the RSVP task failed to read an incoming packet.                                                                                                                                                                                                                                                                      |
| P2MP RESV discarded by appl | Number of Resv messages discarded because the MPLS label is not valid for the P2MP LSP application.                                                                                                                                                                                                                                   |
| Rate limit                  | Number of RSVP packets dropped due to rate limiting.                                                                                                                                                                                                                                                                                  |

Table 39: show rsvp statistics Output Fields (*continued*)

| Field Name                   | Field Description                                                                                                                                      |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Err msg loop detected</b> | Number of RSVP error messages that have looped back to their originator. This is detected by checking the error node address in the ERROR_SPEC object. |

## Sample Output

### show rsvp statistics

```

user@host> show rsvp statistics
 PacketType Sent Received Last 5 seconds
 Sent Received
Path 355 408 0 0
PathErr 2 13 0 0
PathTear 101 139 0 0
Resv FF 0 0 0 0
Resv WF 0 0 0 0
Resv SE 419 225 0 0
ResvErr 0 0 0 0
ResvTear 0 13 0 0
ResvConf 0 0 0 0
Ack 682 1414 0 0
SRefresh 395198 236030 5 2
Hello 578809 578221 4 4
EndtoEnd RSVP 0 0 0 0

Errors Total Last 5 seconds
Rcv pkt bad length 0 0
Rcv pkt unknown type 0 0
Rcv pkt bad version 0 0
Rcv pkt auth fail 0 0
Rcv pkt bad checksum 0 0
Rcv pkt bad format 0 0
Memory allocation fail 0 0
No path information 10 0
Resv style conflict 0 0
Port conflict 0 0
Resv no interface 0 0
PathErr to client 38 0
ResvErr to client 0 0
Path timeout 8 0
Resv timeout 57 0
Message out-of-order 0 0
Unknown ack msg 2978 0
Recv nack 86 0
Recv duplicated msg-id 5 0
No TE-link to recv Hop 0 0
Rcv pkt disabled interface 0 0
Transmit buffer full 0 0
Transmit failure 0 0
Receive failure 0 0
P2MP RESV discarded by appl 0 0
Rate limit 306 0
Err msg loop detected 0 0

```

## show rsvp version

|                                    |                                                                                                                                                                                                                                          |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 299</a><br><a href="#">Syntax (EX Series Switches) on page 299</a>                                                                                                                                            |
| <b>Syntax</b>                      | show rsvp version<br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                |
| <b>Syntax (EX Series Switches)</b> | show rsvp version                                                                                                                                                                                                                        |
| <b>Release Information</b>         | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                    |
| <b>Description</b>                 | Display information about the Resource Reservation Protocol (RSVP) protocol settings, such as the version of the RSVP software, the refresh timer and keep multiplier, and local RSVP graceful restart capabilities on a routing device. |
| <b>Options</b>                     | <b>none</b> —Display RSVP protocol settings.<br><br><b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.                                |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                     |
| <b>List of Sample Output</b>       | <a href="#">show rsvp version on page 300</a>                                                                                                                                                                                            |
| <b>Output Fields</b>               | <a href="#">Table 40 on page 299</a> describes the output fields for the <b>show rsvp version</b> command. Output fields are listed in the approximate order in which they appear.                                                       |

**Table 40: show rsvp version Output Fields**

| Field Name                             | Field Description                                                                                                                                                                                                                                                                                                                               |
|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Resource ReSerVation Protocol, version | RSVP software version.                                                                                                                                                                                                                                                                                                                          |
| RSVP protocol                          | Status of RSVP: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                                                                                                                                                             |
| R(refresh timer)                       | Configured time interval used to generate periodic RSVP messages.                                                                                                                                                                                                                                                                               |
| K(keep multiplier)                     | Number of RSVP messages that can be lost before an RSVP state is declared stale.                                                                                                                                                                                                                                                                |
| Preemption                             | Currently configured preemption capability: <b>Aggressive</b> , <b>Disabled</b> , or <b>Normal</b> . The default is <b>Normal</b> .                                                                                                                                                                                                             |
| Soft-preemption cleanup                | Time, in seconds, that an LSP is kept after it has been soft preempted. This is a global property of the RSVP protocol.                                                                                                                                                                                                                         |
| Graceful deleting timeout              | Currently configured value for the <b>graceful-deletion-timeout</b> statement. The router that initiates the graceful deletion procedure for an RSVP session waits for the graceful deletion timeout interval to ensure that all routers along the path (especially the ingress and egress routers) have prepared for the LSP to be taken down. |

Table 40: show rsvp version Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NSR Mode                      | Status of the nonstop active routing feature for RSVP on the restarting device: <b>Disabled</b> , <b>Enabled/Master</b> , or <b>Enabled/Standby</b> .                                                                                                                                                                                                                                                                                |
| NSR State                     | <p>State of the nonstop active routing feature for RSVP on the restarting device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• <b>Idle</b></li> <li>• <b>TE-link sync complete</b></li> <li>• <b>Neighbor sync complete</b></li> <li>• <b>Path state sync complete</b></li> <li>• <b>Resv state sync complete</b></li> <li>• <b>Bypass sync complete</b></li> <li>• <b>Init sync complete</b></li> </ul> |
| Setup protection              | Status of point-to-point and point-to-multipoint LSP setup protection configuration on the device: <b>Enabled</b> or <b>Disabled</b>                                                                                                                                                                                                                                                                                                 |
| Graceful restart              | Status of the graceful restart feature for RSVP on the restarting routing device: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                                                                                                                                                                                |
| Restart helper mode           | Status of the helper mode feature: <b>Enabled</b> or <b>Disabled</b> . When this feature is enabled, the restarting routing device can help the neighbor with its RSVP restart procedures.                                                                                                                                                                                                                                           |
| Maximum helper restart time   | Number of milliseconds (ms) configured for the maximum helper restart time. The maximum helper restart time is the length of time the routing device waits before declaring that an RSVP neighbor attempting to restart gracefully is down.                                                                                                                                                                                          |
| Maximum helper recovery time  | Number of milliseconds configured for the maximum helper recovery time. The maximum helper recovery time is the amount of time the routing device maintains the state of an RSVP neighbor attempting to restart gracefully.                                                                                                                                                                                                          |
| Restart time                  | Number of milliseconds that a neighbor waits to receive a Hello message from the restarting node before declaring the node dead and deleting the states.                                                                                                                                                                                                                                                                             |
| Recovery time                 | Number of milliseconds during which the restarting node attempts to recover its lost states with help from its neighbors. Recovery time is advertised by the restarting node to its neighbors, and applies to nodal faults. The restarting node considers its graceful restart complete after this time has elapsed.                                                                                                                 |
| P2p transit LSP nexthop mode  | Point-to-point transit LSP nexthop mode on PTX Series devices. The possible values are <b>Chained</b> or <b>Unchained</b>                                                                                                                                                                                                                                                                                                            |
| P2mp transit LSP nexthop mode | Point-to-multipoint transit LSP nexthop mode on PTX Series devices. The possible values are <b>Chained</b> or <b>Unchained</b>                                                                                                                                                                                                                                                                                                       |

## Sample Output

### show rsvp version

```
user@host> show rsvp version
```

```
Resource ReSerVation Protocol, version 1. rfc2205
 RSVP protocol: Enabled
 R(refresh timer): 30 seconds
 K(keep multiplier): 3
 Preemption: Normal
 Soft-preemption cleanup: 30 seconds
 Graceful deletion timeout: 30 seconds
 NSR mode: Enabled/Master
 NSR state: Init sync complete
 Setup protection: Disabled
 Graceful restart: Disabled
 Restart helper mode: Enabled
 Maximum helper restart time: 20000 msec
 Maximum helper recovery time: 180000 msec
 Restart time: 0 msec
 P2p transit LSP nexthop mode: Unchained
 P2mp transit LSP nexthop mode: Unchained
```

## show ted database

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 302</a><br><a href="#">Syntax (EX Series Switches) on page 302</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Syntax</b>                      | show ted database<br><brief   detail   extensive><br><instance <i>instance-name</i> ><br><logical-system (all   <i>logical-system-name</i> )><br>< <i>system-name</i> >                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Syntax (EX Series Switches)</b> | show ted database<br><brief   detail   extensive><br>< <i>system-name</i> >                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>         | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.<br><b>instance</b> <i>instance-name</i> option added in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>                 | Display the entries in the Multiprotocol Label Switching (MPLS) traffic engineering database.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                     | <p><b>none</b>—Display standard information about all entries in the traffic engineering database.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>instance</b> <i>instance-name</i>—(Optional) Display routing instance information for the specified instance. If <i>instance-name</i> is omitted, information is displayed for the master instance.</p> <p><b>logical-system</b> (all   <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>system-name</b>—(Optional) Display traffic engineering database information for a particular system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>List of Sample Output</b>       | <a href="#">show ted database brief on page 304</a><br><a href="#">show ted database detail on page 305</a><br><a href="#">show ted database extensive on page 306</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Output Fields</b>               | <a href="#">Table 41 on page 302</a> describes the output fields for the <b>show ted database</b> command.<br>Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

**Table 41: show ted database Output Fields**

| Field Name   | Field Description                                                               | Level of Output |
|--------------|---------------------------------------------------------------------------------|-----------------|
| TED database | Number of nodes and pseudonodes participating in IS-IS and OSPF domain routing. | All levels      |



Table 41: show ted database Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                           | Level of Output         |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| ID                             | Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode. If the node contains a router ID, it is displayed in parentheses. | <b>brief</b>            |
| NodeID                         | Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.                                                                   | <b>extensive</b>        |
| Type                           | Type of node. It can be either <b>Rtr</b> (router) or <b>Net</b> (pseudonode).                                                                                                                                                                                                              | All levels              |
| Age(s)                         | How long since the node was last refreshed, in seconds.                                                                                                                                                                                                                                     | All levels              |
| LnkIn                          | Number of nodes pointing toward this node.                                                                                                                                                                                                                                                  | All levels              |
| LnkOut                         | Number of nodes to which this node points.                                                                                                                                                                                                                                                  | All levels              |
| Protocol                       | Protocol that reported the node information: <ul style="list-style-type: none"> <li>• <b>IS-IS(1)</b>—IS-IS Level 1.</li> <li>• <b>IS-IS(2)</b>—IS-IS Level 2.</li> <li>• <b>OSPF (area-number)</b>—OSPF from the specified area.</li> </ul>                                                | All levels              |
| To                             | Address on the far end of a link.                                                                                                                                                                                                                                                           | <b>detail extensive</b> |
| Local                          | Address of the local interface being used to reach the remote node.                                                                                                                                                                                                                         | <b>detail extensive</b> |
| Remote                         | Address of the interface on the remote node.                                                                                                                                                                                                                                                | <b>detail extensive</b> |
| Local interface index          | The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.                                                                                                                                                                                 | <b>detail extensive</b> |
| Remote interface index         | The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.                                                                                                                                                                                 | <b>detail extensive</b> |
| Metric                         | Configured traffic engineering metric.                                                                                                                                                                                                                                                      | <b>extensive</b>        |
| Static BW                      | Total interface bandwidth in bps.                                                                                                                                                                                                                                                           | <b>extensive</b>        |
| Reservable bandwidth           | Subscription factor for the interface, which is the percentage of the link bandwidth that can be used for the RSVP reservation process. You configure this by including the <b>subscription</b> statement when configuring RSVP.                                                            | <b>extensive</b>        |
| <b>Available BW [priority]</b> | (Must include <b>diffserv-te</b> statement when configuring LSPs) Amount of bandwidth actually reserved by RSVP for each priority level. The bandwidth shown is for the entire interface, not for each individual LSP.                                                                      | <b>extensive</b>        |
| Diffserv-TE BW Model           | Bandwidth constraint model used by the LSPs.                                                                                                                                                                                                                                                | <b>extensive</b>        |

Table 41: show ted database Output Fields (*continued*)

| Field Name                                             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Level of Output  |
|--------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Available BW [TE-class]</b>                         | (Must include the <b>diffserv-te</b> statement when configuring LSPs) Amount of bandwidth actually reserved by RSVP for each traffic engineering class.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>extensive</b> |
| <b>Static BW [CT-class]</b>                            | Total interface bandwidth used by an MPLS traffic class, in bps.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>extensive</b> |
| Interface Switching Capability Descriptor ( <i>n</i> ) | <p>Information about the interface switching capability descriptor, which is a subtype length value (TLV) of the link TLV. <i>n</i> is the index number.</p> <ul style="list-style-type: none"> <li>• <b>Switching type</b>—Type of switching to be performed on a particular link: <ul style="list-style-type: none"> <li>• <b>PSC-1</b>—Packet switch-capable 1</li> <li>• <b>PSC-2</b>—Packet switch-capable 2</li> <li>• <b>PSC-3</b>—Packet switch-capable 3</li> <li>• <b>PSC-4</b>—Packet switch-capable 4</li> <li>• <b>L2SC</b>—Layer-2-switch-capable</li> <li>• <b>TDM</b>—Time-division-multiplexing-capable</li> <li>• <b>LSC</b>—Lambda switch-capable</li> <li>• <b>FSC</b>—Fiber switch-capable</li> </ul> </li> <li>• <b>Encoding type</b>—Encoding of the LSP being requested: <ul style="list-style-type: none"> <li>• <b>Packet</b></li> <li>• <b>Ethernet</b></li> <li>• <b>ANSI/ETSI PDH</b></li> <li>• <b>Reserved</b></li> <li>• <b>SDH /SONET</b></li> <li>• <b>Digital Wrapper</b></li> <li>• <b>Lambda (photonic)</b></li> <li>• <b>Fiber</b></li> <li>• <b>FiberSDH/SONET</b></li> </ul> </li> <li>• <b>Maximum LSP BW [priority] bps</b>—Maximum LSP bandwidth information. Amount of bandwidth actually reserved for each priority level. The bandwidth shown is for the entire interface. <ul style="list-style-type: none"> <li>• <b>[<i>n</i>]</b>—Priority level. The range is from <b>0</b> (high) through <b>7</b> (low).</li> <li>• <b><i>n</i> Mbps</b>—Amount of the maximum bandwidth.</li> </ul> </li> <li>• <b>Minimum LSP BW</b>—Minimum LSP bandwidth in Mbps. Amount of bandwidth actually reserved for each priority level. The bandwidth shown is for the entire interface. <b>Minimum LSP BW</b> is displayed only when <b>switching type</b> is <b>PSC-1</b> or <b>TDM</b>.</li> <li>• <b>Interface MTU</b>—Displayed only when <b>switching type</b> is <b>TDM</b>.</li> <li>• <b>Interface supports standard SONET/SDH</b>—Displayed only when <b>switching type</b> is <b>TDM</b>.</li> </ul> | <b>extensive</b> |

## Sample Output

### show ted database brief

```
user@host> show ted database brief
```

```

TED database: 12 ISIS nodes 0 INET nodes
ID Type Age(s) LnkIn LnkOut Protocol
Router-A.00 --- 3178 2 0
Router-B.00 --- 3152 2 0
Router-B.02 Net 802 0 2 IS-IS(2)
 To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-C.00 --- 3126 2 0
Router-C.02 Net 38 0 2 IS-IS(2)
 To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-D.00 --- 3144 2 0
Router-D.02 Net 723 0 2 IS-IS(2)
 To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-D.03 Net 607 0 2 IS-IS(2)
 To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-E.00 --- 3178 2 0
Router-E.02 Net 131 0 2 IS-IS(2)
 To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-F.00 --- 3153 2 0
Router-F.02 Net 769 0 2 IS-IS(2)
 To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0

```

#### show ted database detail

```

TED database: 12 ISIS nodes 0 INET nodes
ID Type Age(s) LnkIn LnkOut Protocol
Router-A.00 --- 2913 2 0
Router-B.00 --- 2887 2 0
Router-B.02 Net 537 0 2 IS-IS(2)
 To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-C.00 --- 2861 2 0
Router-C.02 Net 597 0 2 IS-IS(2)
 To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0

```

```

 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-D.00 --- 2879 2 0
Router-D.02 Net 458 0 2 IS-IS(2)
 To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-D.03 Net 342 0 2 IS-IS(2)
 To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-E.00 --- 2913 2 0
Router-E.02 Net 640 0 2 IS-IS(2)
 To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
ID Type Age(s) LnkIn LnkOut Protocol
Router-F.00 --- 2888 2 0
Router-F.02 Net 504 0 2 IS-IS(2)
 To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0

```

#### show ted database extensive

```

user@host> show ted database extensive
TED database: 12 ISIS nodes 0 INET nodes
NodeID: Router-A.00
 Type: ---, Age: 3067 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-B.00
 Type: ---, Age: 3041 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-B.02
 Type: Net, Age: 691 secs, LinkIn: 0, LinkOut: 2
 Protocol: IS-IS(2)
 To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 Metric: 0
 Interface Switching Capability Descriptor(1):
 Switching type: Packet
 Encoding type: Packet
 Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
 To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 Metric: 0
 Interface Switching Capability Descriptor(1):
 Switching type: Packet
 Encoding type: Packet
 Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
NodeID: Router-C.00
 Type: ---, Age: 3015 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-C.02

```

```

Type: Net, Age: 751 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
 To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 Metric: 0
 Interface Switching Capability Descriptor(1):
 Switching type: Packet
 Encoding type: Packet
 Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
 To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 Metric: 0
 Interface Switching Capability Descriptor(1):
 Switching type: Packet
 Encoding type: Packet
 Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
NodeID: Router-D.00
 Type: ---, Age: 3034 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-D.02
 Type: Net, Age: 613 secs, LinkIn: 0, LinkOut: 2
 Protocol: IS-IS(2)
 To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 Metric: 0
 Interface Switching Capability Descriptor(1):
 Switching type: Packet
 Encoding type: Packet
 Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
 To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 Metric: 0
 Interface Switching Capability Descriptor(1):
 Switching type: Packet
 Encoding type: Packet
 Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
NodeID: Router-D.03
 Type: Net, Age: 497 secs, LinkIn: 0, LinkOut: 2
 Protocol: IS-IS(2)
 To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 Metric: 0
 Interface Switching Capability Descriptor(1):
 Switching type: Packet
 Encoding type: Packet
 Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
 To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 Metric: 0
 Interface Switching Capability Descriptor(1):
 Switching type: Packet
 Encoding type: Packet

```

```

Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
NodeID: Router-E.00
Type: ---, Age: 3068 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-E.02
Type: Net, Age: 21 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
Interface Switching Capability Descriptor(1):
Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
Interface Switching Capability Descriptor(1):
Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
NodeID: Router-F.00
Type: ---, Age: 3043 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-F.02
Type: Net, Age: 659 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
Interface Switching Capability Descriptor(1):
Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps
To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
Interface Switching Capability Descriptor(1):
Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
 [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 [4] 0bps [5] 0bps [6] 0bps [7] 0bps

```

## show ted link

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 309</a><br><a href="#">Syntax (EX Series Switches) on page 309</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Syntax</b>                      | <pre>show ted link &lt;brief   detail&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Syntax (EX Series Switches)</b> | <pre>show ted link &lt;brief   detail&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>                 | Display Multiprotocol Label Switching (MPLS) traffic engineering database link information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Options</b>                     | <p><b>none</b>—Display standard information about traffic engineering database link information.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display routing instance information for the specified instance. If <b><i>instance-name</i></b> is omitted, information is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>       | <a href="#">show ted link brief on page 310</a><br><a href="#">show ted link detail on page 310</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Output Fields</b>               | Table 42 on page 309 describes the output fields for the <b>show ted link</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                       |

Table 42: show ted link Output Fields

| Field Name | Field Description                                                                                                                                                                                                         | Level of Output |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| ID         | Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode. | <b>brief</b>    |
| -->ID      | Hostname and address of the node that the link is going to. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.    | <b>brief</b>    |

Table 42: show ted link Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                         | Level of Output  |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <i>hostname</i>        | Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode. | detail           |
| <i>hostname</i>        | Hostname and address of the node that the link is going to. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.    | detail           |
| Local Path             | Number of paths CSPF on the local routing device has placed on the link.                                                                                                                                                  | All levels       |
| Local BW               | Amount of bandwidth the local routing device has placed on the link.                                                                                                                                                      | All levels       |
| Local                  | Address of the local interface being used to reach the remote node.                                                                                                                                                       | detail extensive |
| Remote                 | Address of the interface on the remote node.                                                                                                                                                                              | detail extensive |
| Local interface index  | The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.                                                                                                               | detail           |
| Remote interface index | The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.                                                                                                               | detail           |

## Sample Output

### show ted link brief

```

user@host> show ted link brief
ID ->ID LocalPath LocalBW
Router-B.02 Router-A.00 0 0bps
Router-B.02 Router-B.00 0 0bps
Router-C.02 Router-B.00 0 0bps
Router-C.02 Router-C.00 0 0bps
Router-D.02 Router-F.00 0 0bps
Router-D.02 Router-D.00 0 0bps
Router-D.03 Router-D.00 0 0bps
Router-D.03 Router-C.00 0 0bps
Router-E.02 Router-A.00 0 0bps
Router-E.02 Router-E.00 0 0bps
Router-F.02 Router-E.00 0 0bps
Router-F.02 Router-F.00 0 0bps

```

### show ted link detail

```

user@host> show ted link detail
Router-B.02->Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: 0bps
 localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
 localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-B.02->Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: 0bps
 localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps

```



```

 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-C.02->Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-C.02->Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-D.02->Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-D.02->Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-D.03->Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-D.03->Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-E.02->Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-E.02->Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-F.02->Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-F.02->Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
 Local interface index: 0, Remote interface index: 0
 LocalPath: 0, Metric: 0, AvailBW: Obps
 localBW [0] Obps [1] Obps [2] Obps [3] Obps
 localBW [4] Obps [5] Obps [6] Obps [7] Obps

```

## show ted protocol

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 312</a><br><a href="#">Syntax (EX Series Switches) on page 312</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Syntax</b>                      | <pre>show ted protocol &lt;brief   detail&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Syntax (EX Series Switches)</b> | <pre>show ted protocol &lt;brief   detail&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>                 | Display information about the protocols from which the Multiprotocol Label Switching (MPLS) traffic engineering database learned about its nodes.                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                     | <p><b>none</b>—Display standard information about the protocols from which the traffic engineering database learned about its nodes.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display routing instance information for the specified instance. If <b><i>instance-name</i></b> is omitted, information is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>List of Sample Output</b>       | <a href="#">show ted protocol on page 313</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Output Fields</b>               | <p><a href="#">Table 43 on page 312</a> describes the output fields for the <b>show ted protocol</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                                                                                                                                |

**Table 43: show ted protocol Output Fields**

| Field Name           | Field Description                                                                                                                                                                                                                             |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Protocol name</b> | Protocol that reported the node information: <ul style="list-style-type: none"> <li><b>IS-IS(1)</b>—IS-IS Level 1.</li> <li><b>IS-IS(2)</b>—IS-IS Level 2.</li> <li><b>OSPF (<i>area-number</i>)</b>—OSPF from the specified area.</li> </ul> |
| <b>Credibility</b>   | If the protocols provide conflicting information about a node, the protocol with the highest credibility value is the one that the traffic engineering database uses.                                                                         |
| <b>Self node</b>     | Address the protocol uses as the local address.                                                                                                                                                                                               |

## Sample Output

show ted protocol

```
user@host> show ted protocol
Protocol name Credibility Self node
IS-IS(2) 2 (highest) corriedale.00(123.456.1.11)
IS-IS(1) 1 corriedale.00(123.456.1.11)
```

