

Chapter 4

Providing Premium Services in a PCMM Environment

This chapter describes the SRC application's support for the *PacketCable Multimedia Specification* (PCMM) as defined by Cable Television Laboratories, Inc. (CableLabs).

Topics in this chapter include:

- Overview of a PCMM Environment on page 37
- Using the SAE in a PCMM Environment on page 47

Overview of a PCMM Environment

The PCMM specification defines a standards-based way to deliver premium quality of service (QoS)-enhanced services across the radio frequency (RF) portion of a cable network. The PCMM capabilities of the SRC software along with Juniper Networks routers provide an end-to-end solution that seamlessly links the cable operator's RF domain with IP edge and core QoS services.

Key services supported in this environment include:

- Bandwidth on demand and variable bandwidth
- QoS-enabled streaming media, including video on demand and video telephony
- Residential voice over IP (VoIP)
- Multicast audio and video applications
- Videoconferencing
- Interactive gaming
- Peer-to-peer controls and protection services

References

For more information about PCMM, consult the following specifications provided by CableLabs:


- PacketCable Multimedia Architecture Framework Technical Report (PKT-TR-MM-ARCH)
- PacketCable Multimedia Specification PKT-SP-MM-I03-051221
- PacketCable Security Specifications (PKT-SP-SEC)

PCMM Architecture

Figure 6 depicts the PCMM architectural framework. The basic roles of the various PCMM components are:

- Application manager—Provides an interface to policy server(s) for the purpose of requesting QoS-based service on behalf of a subscriber or a network management system. It maps session requests to resource requests and creates policies.
- Policy server—Acts as a policy decision point and policy enforcement point and manages relationships between application managers and cable modem termination system (CMTS) devices.
- CMTS device—Cable modem termination system. Performs admission control and manages network resources through Data over Cable Service Interface Specifications (DOCSIS) service flows.
- Client—Represents endpoints, such as PC applications, that can send or receive data.
- Record-keeping server—Receives event messages from other network elements, such as the policy server or CMTS device, and acts as a short-term repository for the messages. It can also assemble event messages into coherent sets or call detail records, which are then made available to other back office systems, such as billing, fraud detection, and other systems.

Figure 6: PCMM Architectural Framework

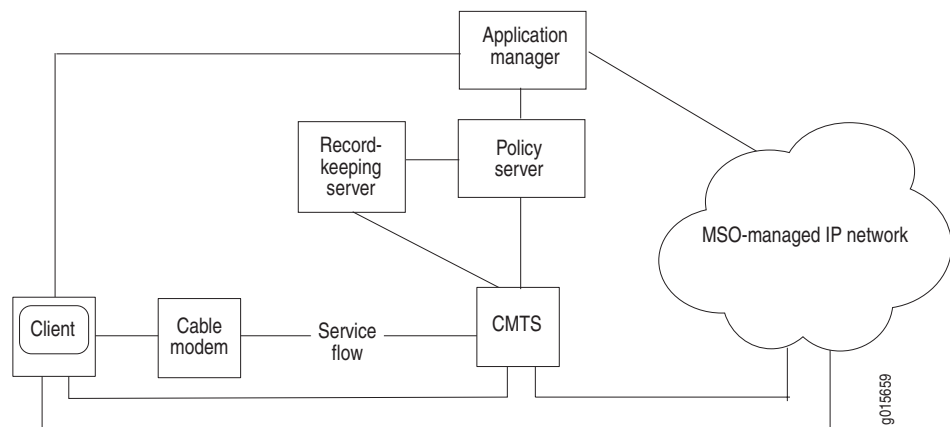

In the PCMM architecture, a client requests a multimedia service from an application manager. The application manager relays the request to a policy server. The policy server is then responsible for provisioning the policies on a CMTS device. Based on the request, the policy server records an event that indicates the policy request. The request can include network resource records, and the policy server can provide the records to a record-keeping server, such as a RADIUS accounting server.

The policy server may also provide functions such as tracking resource usage and tracking the authorization of resources on a per-subscriber, per-service, or aggregate basis.

DOCSIS Protocol

The DOCSIS protocol is the standard for providing quality of service for traffic between the cable modem and CMTS devices. The CMTS device is the headend in the DOCSIS architecture, and it controls the operations of many cable modems. Two channels carry signals between CMTS devices and cable modems:

- Downstream channels—Carry signals from the CMTS headend to cable modems.
- Upstream channels—Carry signals from the cable modems to the CMTS headend.

The DOCSIS protocol defines the physical layer and the Media Access Control (MAC) protocol layer that is used on these channels.

A cable modem usually uses one upstream channel and an associated downstream channel. Upstream channels are shared, and the CMTS device uses the MAC protocol to control the cable modem's access to the upstream channel.

Service Flows

The DOCSIS protocol uses the concept of service flows to support QoS on upstream and downstream channels. A service flow is a unidirectional flow of packets that provides a particular quality of service. Traffic is classified into a service flow, and each service flow has its own set of QoS parameters. The SRC software is compliant with the following upstream service flow scheduling types, as defined in the PacketCable Multimedia Specification PKT-SP-MM-I03-051221.

- Best effort—Used for standard Internet traffic such as Web browsing, e-mail, or instant messaging.
- Non-real-time polling service (NRTPS)—Used for standard Internet traffic that requires high throughput, and traffic that requires variable-sized data packets on a regular basis, such as high-bandwidth File Transfer Protocol (FTP).
- Real-time polling service (RTPS)—Used for applications such as Moving Pictures Experts Group (MPEG) video.

- Unsolicited grant service (UGS)—Used for real-time traffic that generates fixed-size data packets on a periodic basis. Applications include VoIP.
- Unsolicited grant service with activity detection (UGS-AD)—Used for applications such as voice activity detection, also known as silence suppression.

Downstream service flows are defined through a similar set of QoS parameters that are associated with the best-effort scheduling type on upstream service flows.

See *Delivering QoS Services in a Cable Environment* in *SRC-PE Services and Policies Guide, Chapter 6, Policy Management Overview* for more information about each scheduling type.

Client Types

The PCMM specification uses the concept of clients and defines a client as a logical entity that can send or receive data. The SRC software supports type 1 and type 2 clients.

The PCMM specification defines two resource reservation models for each client type—a single phase and a dual phase. The SRC software supports the single-phase model.


Client Type 1 Single Phase Resource Reservation Model

Type 1 clients represent endpoints, such as PC applications or gaming consoles, that lack specific QoS awareness or signaling capabilities. Type 1 clients communicate with an application manager to request a service. They do not request QoS resources directly from the multiple service operator (MSO) network.

Client type 1 entities support the proxied-QoS with policy-push scenario of service delivery defined in PacketCable Multimedia Architecture Framework Technical Report (PKT-TR-MM-ARCH). In this scenario, the application manager requests QoS resources on behalf of the client, and the policy server pushes the request to the CMTS device. The CMTS device sets up and manages the DOCSIS service flow that the application requires, and might also set up and manage the cable modems.

Figure 7 shows the message flow in an application scenario for the client type 1 single-phase resource reservation model.

Figure 7: Client Type 1 Single-Phase Resource Reservation Model

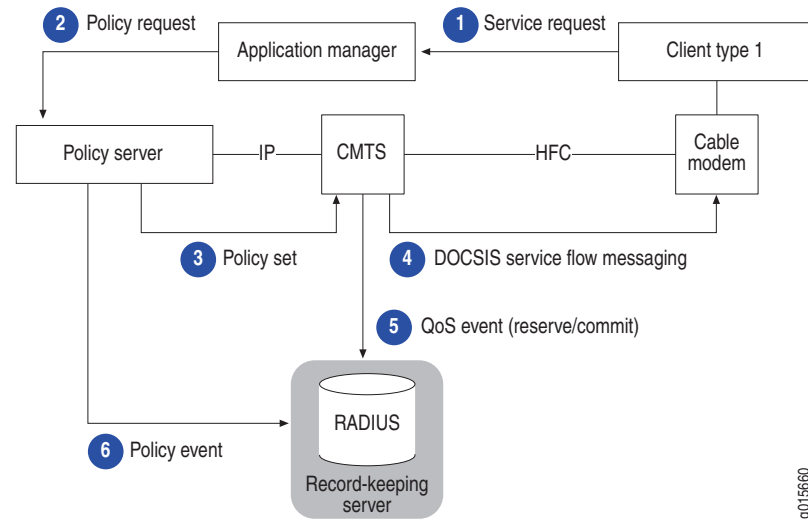


Client Type 2 Single Phase Resource Reservation Model

Type 2 clients represent endpoints that have QoS awareness or signaling capabilities. Type 2 clients communicate with an application manager to request a service and to obtain a token to present for requesting QoS resources directly from the MSO network.

Client type 2 entities support the client-requested QoS with policy-push scenario of service delivery defined in PacketCable Multimedia Architecture Framework Technical Report (PKT-TR-MM-ARCH). In this scenario, the application manager requests QoS resources on behalf of the client, and the policy server pushes the request to the CMTS device. The CMTS device sets up and manages the DOCSIS service flow that the application requires. After the CMTS device sets up the policy, the client can request QoS resources directly from the CMTS device as long as the request is authorized by the policy server.

Figure 8 shows the message flow in an application scenario for the client type 2 single-phase resource reservation model.


Figure 8: Client Type 2 Single-Phase Resource Reservation Model

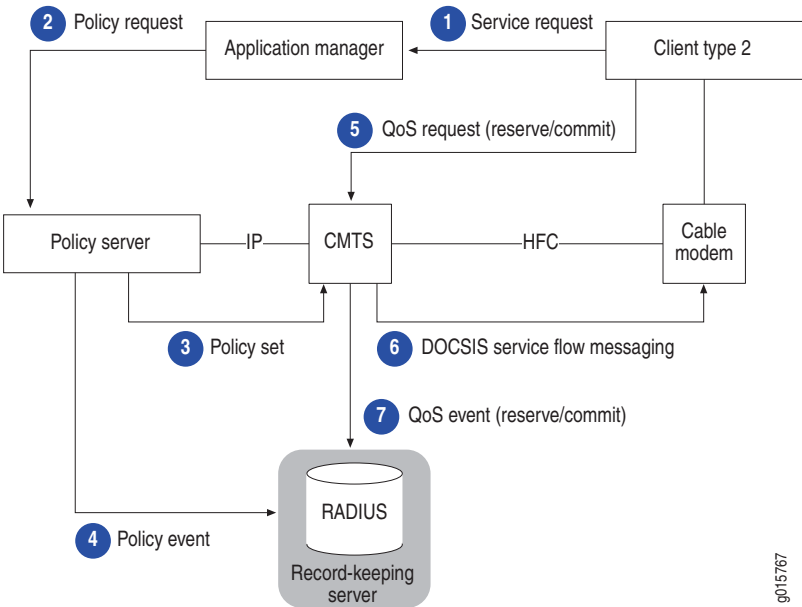

SRC Software in the PCMM Environment

Figure 9 shows the SRC software in the PCMM environment. The SAE is an application manager that can manage a PCMM-compliant policy server and/or a CMTS device on behalf of applications. The SAE has an embedded policy server that is not fully PCMM-compliant, but it can manage CMTS devices without requiring an external policy server. The Juniper Policy Server (JPS), a component of the SRC software that acts as a policy server, is a PCMM-compliant policy server. For more information about using the JPS, see *Chapter 11, Using PCMM Policy Servers*.

Figure 9: SRC Software in the PCMM Environment

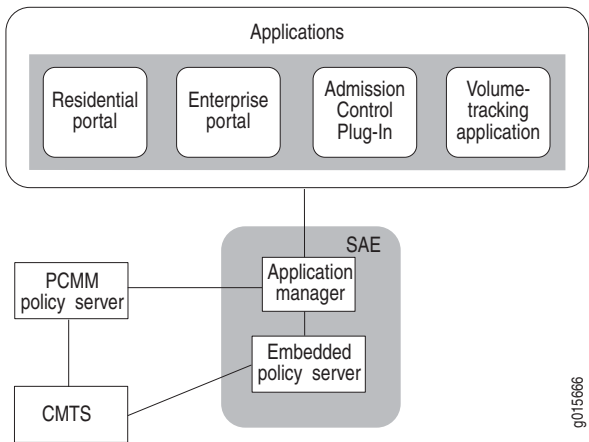

Traffic Profiles

The SRC software supports three types of policies that you can use to define traffic profiles between the CMTS device and the cable modem:

- DOCSIS parameters—Specifies the traffic profile through DOCSIS-specific parameters. You select the type of service flow that you want to offer, and then configure QoS parameters for the service flow.
- Service class name—Specifies the name of a service class that is configured on the CMTS device.
- FlowSpec—Defines the traffic profile through an Resource Reservation Protocol (RSVP)-like parameterization scheme. FlowSpecs support both controlled-load and guaranteed services.

You can also mark packets and then install policies that handle the marked packets in a certain way. The mark action sets the ToS byte in the IP header of IPv4 traffic or the traffic-class field in the IP header of IPv6 traffic.

See *Delivering QoS Services in a Cable Environment* in *SRC-PE Services and Policies Guide, Chapter 6, Policy Management Overview* for more information about traffic profiles.


End-to-End QoS Architecture

The previous sections show how the SRC software supports QoS in the cable operator's RF domain, which encompasses the connection from the cable modem to the CMTS device. Using the SRC software along with Juniper Networks routers, you can link the RF domain to the subscriber and service edge domains.

- IP subscriber edge domain—Includes the IP network from the CMTS device to the edge router that typically connects to the cable operator's regional access network. (See *Extending QoS to the Subscriber Edge Domain* on page 44.)
- IP service edge domain—Typically includes the IP network that connects the data center that houses service delivery applications to a backbone or directly to a cable head-on facility. (See *Extending QoS to the Service Edge Domain* on page 44.)

By provisioning services across a network path, you can deliver a particular level of service for specified types of traffic. Figure 10 on page 44 shows a typical high-level architecture of a cable operator and how the SRC software and Juniper Networks routers can be deployed to deliver end-to-end QoS services.

Figure 10: End-to-End QoS Architecture in a Cable Network

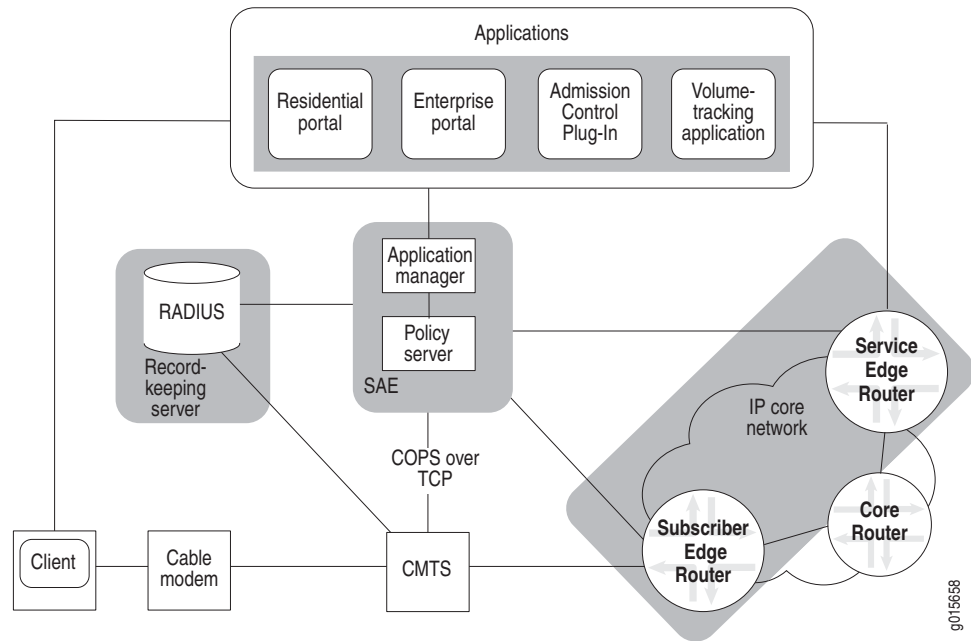

Extending QoS to the Subscriber Edge Domain

The subscriber edge domain includes subscriber edge routers that aggregate CMTS devices. To support QoS in subscriber edge domains, QoS must be enabled across the subscriber edge into the core or regional access network. When the SRC software receives a service request, it performs service authorization, which can include admission control. It then sends policies to the appropriate CMTS device and subscriber edge router interface.

In addition to the QoS services required in the RF domain, service policies in the subscriber edge domain that must be available for provisioning at this point include:

- Policy routing to best-of-breed appliances and premium paths
- Rate limiting, traffic shaping, and marking
- Admission control (edge resources and core resources)
- Captive portal and Web redirect capabilities
- Filtering and JUNOS routing platform-based firewall services
- JUNOS routing platform virtual private network (VPN) services

Extending QoS to the Service Edge Domain

The service edge domain includes service edge routers that aggregate applications. To support QoS in service edge domains, the SRC software sends policies to a service edge router that provides for enhanced service delivery to the service origination edge for centralized or hosted services, such as multimedia or VoD.

In addition to the QoS services required in the RF domain, service policies in the service edge domain that must be capable of being provisioned at this point include:

- Policy routing to best-of-breed appliances and premium paths
- Rate limiting, traffic shaping (called hierarchical queuing in JUNOS software), and marking
- Filtering and JUNOS routing platform based firewall services
- JUNOS routing platform VPN services


Provisioning End-to-End Services

The following sections provide examples of how you can use the SRC software to provision services for video applications. Although the examples show one SAE managing all the network devices, separate SAEs could manage each device and provide the same service.

Example for Videoconferencing Services

You can configure services to mark traffic forwarded from specified systems, and then apply an end-to-end service level for that traffic. Figure 11 shows a scenario in which videoconferencing is delivered in a PCMM environment.

Figure 11: Videoconferencing Example

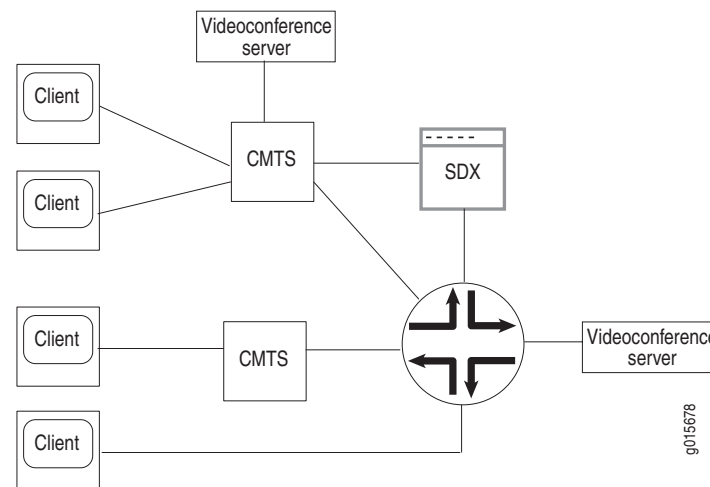

To ensure a specified level of service from each client PC to the videoconference server and then to each client PC participating in the videoconference, you could configure the following types of services:


- Three services:
 - A service that provides policies to mark packets with a specified type of service for the videoconferencing software.
 - A service that provides policies for the type of service specified for CMTS device.
 - A service that provides policies for the type of service specified for the JUNOS routing platform or JUNOSe router.
- An infrastructure service for each service.
- An aggregate service that contains the three infrastructure services as fragment services.

This configuration marks packets that the CMTS device receives from both client and server, and applies forwarding policies on the CMTS device and on the JUNOSe router or JUNOS routing platform for packets sent to and received from the videoconferencing server.

Example for Video-on-Demand Services

You can configure services to provide server-to-client service for traffic sent from a video-on-demand server to client PCs. Figure 12 shows a scenario in which video on demand is delivered in a PCMM environment.

Figure 12: Video-on-Demand Example

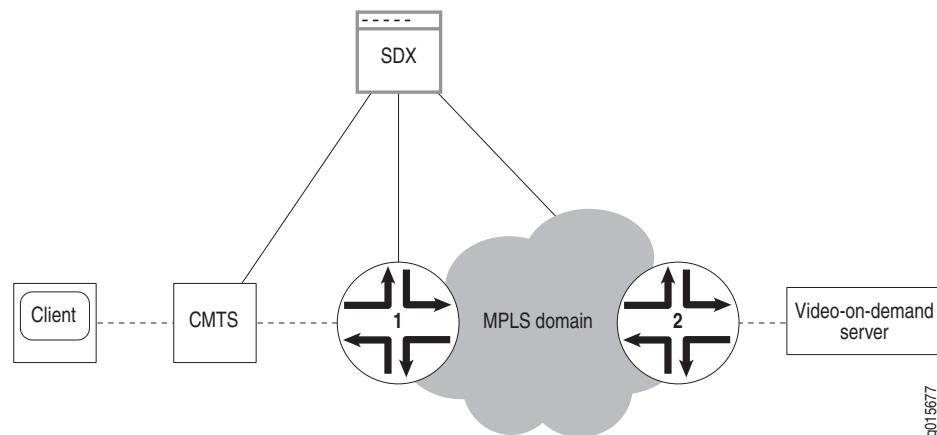

To ensure a specified level of service from the video-on-demand server to the client PC, you could configure the following types of services:

- Services that provide bandwidth-on-demand (BoD) policies for traffic that is being forwarded from the video-on-demand server through:
 - JUNOS routing platforms
 - CMTS devices
- A script service that sets up the Multiprotocol Label Switching (MPLS) path and delivers the specified service level for traffic that is being forwarded from the video-on-demand server through the MPLS domain.
- An infrastructure service for each value-added and script service.
- An aggregate service that contains all the infrastructure services as fragment services.

This configuration applies BoD policies to the two JUNOS routing platforms, the MPLS domain, and the CMTS device, and sets up the MPLS path from JUNOS routing platform (2) to JUNOS routing platform (1).

Using the SAE in a PCMM Environment

The SAE uses the Common Open Policy Service (COPS) protocol as specified in the PacketCable Multimedia Specification PKT-SP-MM-I03-051221 to manage PCMM-compliant CMTS devices in a cable network environment. The SAE connects to the CMTS device by using a COPS over Transmission Control Protocol (TCP) connection. In cable environments, the SAE manages the connection to the CMTS device.

The CMTS device does not provide address requests or notify the SAE of new subscribers, subscriber IP addresses, or any other attributes. IP address detection and all other subscriber attributes are collected outside of the COPS connection to the CMTS device. The SAE uses COPS only to push policies to the CMTS device and to learn about the CMTS status and usage data.

Because the CMTS device does not have the concept of interfaces, the SRC software uses pseudointerfaces to model CMTS subscriber connections similar to subscriber connections for JUNOS routing platforms and JUNOSe routers.

This section describes how the SAE is used in cable networks. It includes the following topics:

- Logging In Subscribers and Creating Sessions on page 48
- SAE Communities on page 51
- Storing Session Data on page 52

Logging In Subscribers and Creating Sessions

You can use two mechanisms to obtain subscriber address requests and other information and to set up a pseudointerface on the CMTS device. (You must choose one mechanism; you cannot mix them.):

1. Assigned IP subscriber. The SAE learns about a subscriber through subscriber-initiated activities, such as activating a service through the portal or through the Advanced Services Gateway (ASG).

With this method, you use the assigned IP subscriber login type along with the network interface collector (NIC) to map IP addresses to the SAE.

2. Event notification from an IP address manager. The SAE learns about subscribers through notifications from an external IP address manager, such as a DHCP server or a RADIUS server.

With this method, you use the event notification application programming interface (API). The API provides an interface to the IP address manager, and lets the IP address manager notify the SAE of events such as IP address assignments.


Assigned IP Subscribers

With the assigned IP subscriber method of logging in subscribers and creating sessions, the SRC software uses IP address pools along with NIC resolvers to provide mapping of IP addresses to SAEs. You configure the static address pools or dynamically discovered address pools in the virtual router configuration for a CMTS device. These pools are published in the NIC. The NIC maps subscriber IP addresses in requests received through the portal or Advanced Services Gateway to the SAE that currently manages that CMTS device.

Login Interactions with Assigned IP Subscribers

This section describes login interactions for assigned IP subscribers. In the example shown in Figure 13, the subscriber activates a service through a portal. You could also have the subscriber activate a service through the Advanced Services Gateway.

Figure 13: Login Interactions with Assigned IP Subscribers

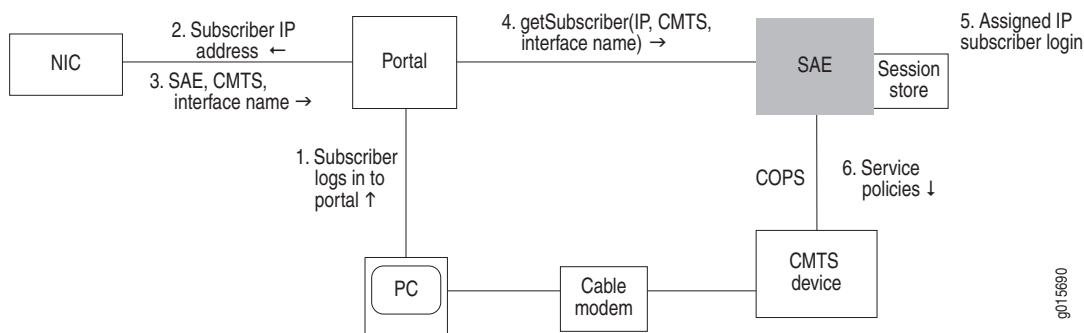

The sequence of events for logging in and creating sessions for assigned IP subscribers is:

1. The subscriber logs in to the portal.
2. The portal sends the subscriber's IP address to the NIC.
3. Based on the IP address, the NIC looks up the subscriber's SAE, CMTS device, and interface name, and returns this information to the portal.
4. The portal sends a `getSubscriber` message to the SAE. The message includes the subscriber's IP address, CMTS device, and interface name.
5. The SAE creates an assigned IP subscriber and performs a subscriber login. Specifically, it:
 - a. Runs the interface classification script and creates a pseudointerface for the PCMM device driver.
 - If it finds a default policy, it pushes the policy to the CMTS device.
 - If it does not find a default policy, it continues with the next steps.
 - b. Runs the subscriber classification script with the IP address of the subscriber. (Use the `ASSIGNEDIP` login type in subscriber classification scripts.)
 - c. Loads the subscriber profile.
 - d. Runs the subscriber authorization plug-ins.
 - e. Runs the subscriber tracking plug-ins.
 - f. Creates a subscriber session and stores the session data in the session store file.
6. The SAE pushes service policies for the subscriber session to the CMTS device.

Because the SAE is not notified when the subscriber logs out, the assigned IP idle timer begins when no service is active. The SAE removes the interface subscriber session when the timeout period ends.

Event Notification from an IP Address Manager


With the event notification method of logging in subscribers and creating subscriber sessions, the subscriber logs in to the CMTS device and obtains an IP address through an address server, usually a DHCP server. The SAE receives notifications about the subscriber, such as the subscriber's IP address, from an event notification application that is installed on the DHCP server.

To use this method of logging in subscribers, you can use the event notification API to create the application that notifies the SAE when events occur between the DHCP server and the CMTS device. You can also use Monitoring Agent, an application that was created with the event notification API, and that monitors DHCP or RADIUS messages for DHCP or RADIUS servers. See *SRC Application Library Guide, Chapter 27, Integrating IP Address Managers with the SAE*.

Login with Event Notification

This section describes login interactions using event notifications.

Figure 14: Login Interactions with Event Notification Application

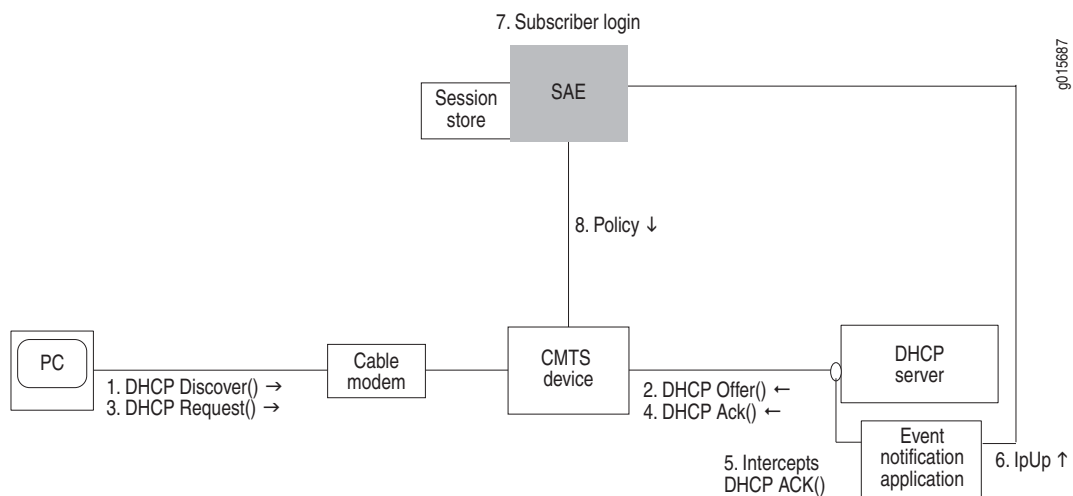

The sequence of events for logging in subscribers and creating sessions is:

1. The DHCP client in the subscriber's computer sends a DHCP discover request to the DHCP server.
2. The DHCP server sends a DHCP offer to the subscriber's DHCP client.
3. The DHCP client sends a DHCP request to the DHCP server.
4. The DHCP server acknowledges the request by sending a DHCP Ack message to the DHCP client.
5. The event notification application that is running on the DHCP server intercepts the DHCP Ack message.
6. The event notification application sends an ipUp message to the SAE that notifies the SAE that an IP address is up.

7. The SAE performs a subscriber login. Specifically, it:
 - a. Runs the interface classification script and creates a pseudointerface for the PCMM device driver.
 - If it finds a default policy, it pushes the policy to the CMTS device.
 - If it does not find a default policy, it continues with the next steps.
 - b. Runs the subscriber classification script.
 - c. Loads the subscriber profile.
 - d. Runs the subscriber authorization plug-ins.
 - e. Runs the subscriber tracking plug-ins.
 - f. Creates a subscriber session and stores the session in the session store file.
8. The SAE provisions policies for the subscriber session on the CMTS device.


The ipUp event should be sent with a timeout set to the DHCP lease time. The DHCP server sends an ipUp event for each Ack sent to the client. The SAE restarts the timeout each time it receives an ipUp event.

If the client explicitly releases the DHCP address (that is, it sends a DHCP release event), the DHCP server sends an ipDown event. If the client does not renew the address, the lease expires on the DHCP server and the timeout expires on the SAE.

SAE Communities

For SAE redundancy in a cable network, you can have a community of two or more SAEs. SAEs in a community are given the role of either active SAE or passive SAE. The active SAE manages the connection to the CMTS device and keeps session data up to date within the community. Figure 15 shows a typical SAE community.

Figure 15: SAE Community

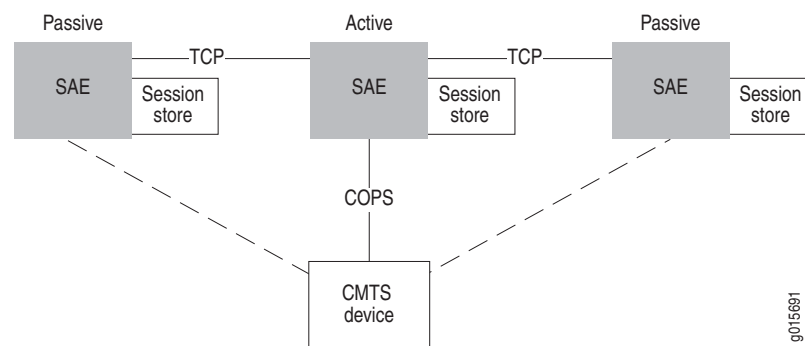

When an SAE opens a connection to the CMTS device, it negotiates with other SAEs to determine which SAE controls the CMTS device. The SAE community manager and members of the community select the active SAE.

A passive SAE needs to take over as active SAE in any of the following cases:

- The active SAE shuts down or the connection between the CMTS device and the active SAE goes down. In this case, the active SAE notifies the passive SAEs, and one of the passive SAEs takes over as active SAE.
- A passive SAE does not receive a keepalive message from the active SAE within the keepalive interval. In this case, the passive SAE attempts to become the active SAE.

Storing Session Data

To aid in recovering from an SAE failover, the SAE stores subscriber and service session data. When the SAE manages a CMTS device, session data is stored locally in the SAE host's file system. The SRC component that controls the storage of session data on the SAE is called the session store. The session store queues data and then writes the data to session store files on the SAE host's disk. Once the data is written to disk, it can survive a server reboot.

For more information, see *Storing Subscriber and Service Session Data* in *SRC-PE Network Guide, Chapter 3, Configuring the SAE with SDX Configuration Editor*.

PCMM Record-Keeping Server Plug-In

To allow the SAE's embedded policy server to communicate with a record-keeping server (RKS) in a PCMM environment, you need to use the PCMM record-keeping server plug-in. This plug-in is similar to the RADIUS accounting plug-ins, but it works with any RKS that is compliant with the PCMM specification. The RKS plug-in supports additional attributes: Application-Manager-ID, Request-Type, and Update-Reason. The plug-in sends all requests to the RKS as Acct-Status-Type = Interim-Update.