

Network Configuration Example

Configuring VPLS Pseudowires on MX Series Routers Using Dynamic Profiles

Release
NCE0061



Modified: 2017-01-25

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Copyright © 2017, Juniper Networks, Inc. All rights reserved.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Network Configuration Example Configuring VPLS Pseudowires on MX Series Routers Using Dynamic Profiles

NCE0061

Copyright © 2017, Juniper Networks, Inc.

All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

| | | |
|------------------|---|----------|
| Chapter 1 | Configuring VPLS Pseudowires on MX Series Routers Using Dynamic Profiles | 5 |
| | About This Network Configuration Example | 6 |
| | Dynamic Profiles Overview | 6 |
| | Dynamic Profile Interface Support | 6 |
| | What Dynamic Profiles Do | 6 |
| | How Dynamic Profiles Work | 7 |
| | Dynamic Profile Version Creation | 7 |
| | Dynamic Profile Semantic Checking | 8 |
| | Dynamic Profiles for VPLS Pseudowires | 9 |
| | Use Cases for Dynamic Profiles for VPLS Pseudowires | 9 |
| | Example: Configuring the Router to Push an Extra VLAN Tag onto Pseudowire Traffic Using Dynamic Profiles | 10 |
| | Example: Configuring a VPLS Pseudowire as a Trunk Interface Using Dynamic Profiles | 13 |

CHAPTER 1

Configuring VPLS Pseudowires on MX Series Routers Using Dynamic Profiles

- [About This Network Configuration Example on page 6](#)
- [Dynamic Profiles Overview on page 6](#)
- [Dynamic Profiles for VPLS Pseudowires on page 9](#)
- [Use Cases for Dynamic Profiles for VPLS Pseudowires on page 9](#)
- [Example: Configuring the Router to Push an Extra VLAN Tag onto Pseudowire Traffic Using Dynamic Profiles on page 10](#)
- [Example: Configuring a VPLS Pseudowire as a Trunk Interface Using Dynamic Profiles on page 13](#)

About This Network Configuration Example

This network configuration example describes what dynamic profiles do, how they work, and how to configure virtual private LAN service (VPLS) pseudowires using dynamic profiles.

Dynamic Profiles Overview

A dynamic profile is a set of characteristics, defined in a type of template, that you can use to provide dynamic subscriber access and services for broadband applications. These services are assigned dynamically to interfaces. The **dynamic-profiles** hierarchy appears at the top level of the CLI hierarchy and contains many Juniper Networks configuration statements that you normally define statically.

Dynamic profile statements appear in the following subhierarchies within the **[edit dynamic-profiles]** hierarchy:

- **class-of-service**
- **firewall**
- **interfaces**
- **predefined-variable-defaults**
- **protocols**
- **routing-instances**
- **routing-options**
- **variables**

This topic covers:

- [Dynamic Profile Interface Support on page 6](#)
- [What Dynamic Profiles Do on page 6](#)
- [How Dynamic Profiles Work on page 7](#)
- [Dynamic Profile Version Creation on page 7](#)
- [Dynamic Profile Semantic Checking on page 8](#)

Dynamic Profile Interface Support

You can identify subscribers statically or dynamically. To identify subscribers statically, you can reference a static VLAN interface in a dynamic profile. To identify subscribers dynamically, you create variables for demux interfaces that are dynamically created when subscribers log in.

What Dynamic Profiles Do

A dynamic profile acts as a kind of template that enables you to create, update, or remove a configuration that includes client access (for example, interface or protocol) or service

(for example, class of service (CoS)) attributes or objects that are created dynamically (for example pseudowire). Using these profiles enables you to consolidate all of the common attributes of a client (and eventually a group of clients) and apply the attributes or dynamically created objects simultaneously.

How Dynamic Profiles Work

After profiles are created, they reside on the router in a profile library. These profiles can contain various configurations. For example, you can create a client network access configuration, a services activation configuration, or both. When a router interface receives a join message from a client, the router applies the values configured in the specified dynamic profile to that router interface. The profile can contain interface, CoS, and protocol values that are applied directly to the interface. In addition, the dynamic profile can call input or output firewall filters that reside outside of the dynamic profiles hierarchy.

Dynamic Profile Version Creation

You can create new versions of dynamic profiles that are currently in use by subscribers. Dynamic profile version creation is enabled at the **[edit system]** hierarchy level. When enabled, you can create multiple versions of any dynamic profiles on the router. Any subscriber that logs in following a dynamic profile modification uses the latest version of the dynamic profile. Subscribers that are already active continue to use the older version of the dynamic profile until they log out or their session terminates.

When creating versions of dynamic profiles, keep the following in mind:

- You must enable or disable dynamic profile version creation before creating or using any dynamic profiles on the router. Enabling or disabling dynamic profile version creation after dynamic profiles are configured is not supported.



NOTE: Before you can enable or disable dynamic profile version creation for a router on which any dynamic profiles are configured, you must first remove all dynamic profiles from the router configuration.

- Each version of a dynamic profile is stored in the profile database as a new profile.
- The name of the new profile version is derived by appending a string to the original base dynamic profile name. This string contains two dollar sign (\$) characters to identify the version field of the profile name. These two characters are followed by numerical characters that represent the “version number” of the dynamic profile (for example, 01).
- The version number of the dynamic profile is automatically generated by the system.
- The dynamic profile that you modify is always stored as the latest version. You cannot create a modified dynamic profile and save it as an earlier version. For example, if you modify version three of a dynamic profile while it is in use, the dynamic profile is saved as version four.
- You can only modify the latest version of a dynamic profile.

- The maximum value for the version number is 99999. However, for each profile, only 10 active versions are supported at a time.
- If the dynamic profile version that you modify is not in use by any subscriber, the profile is overwritten with committed changes without creating a new version.
- After reaching the 99999th modified version of a dynamic profile, any further modifications to the dynamic profile result in overwriting that final version. If the final version is in use, any modification attempts fail upon commit.
- You can delete a dynamic profile only when none of its versions are in use.
- The dynamic profile version feature supports graceful restart and unified ISSU.

Dynamic Profile Semantic Checking

Variables are applied to dynamic profiles dynamically and cannot be checked with existing CLI commands. Semantic checking validates some variables in dynamic profiles to help identify potential configuration errors.

Semantic checks are performed during commit and during profile instantiation. Commit time checks ensure that variables appear in the correct location within the dynamic profile. Checks performed before profile instantiation ensure that the values that replace the variables are correct. The checks performed on the values include the following:

- Range validation
- Variable type validation
- Existence of variables where they are mandatory
- Variable matching to regular expressions

A commit time check failure results in an error message being displayed and logged in the `/var/log/messages` file and the commit failing. An instantiation failure results in an error being logged in the `/var/log/messages` file and the profile instantiation failing.

Related Documentation

- [Dynamic Profiles for VPLS Pseudowires on page 9](#)
- [Use Cases for Dynamic Profiles for VPLS Pseudowires on page 9](#)
- [Example: Configuring the Router to Push an Extra VLAN Tag onto Pseudowire Traffic Using Dynamic Profiles on page 10](#)
- [Example: Configuring a VPLS Pseudowire as a Trunk Interface Using Dynamic Profiles on page 13](#)

Dynamic Profiles for VPLS Pseudowires

A router often has two types of interfaces:

- Static interfaces, which are configured before the router is booted
- Dynamic interfaces, which are created after the router is booted and while it is running

A virtual private LAN service (VPLS) pseudowire interface (such as `lsi.1048576`) is dynamically created by the system. Therefore, the logical interface unit number for the VPLS pseudowire is not available in advance to configure characteristics such as virtual local area network (VLAN) identifiers and other parameters. As a result, certain VLAN manipulation features that are easily applied to static interfaces (such as `xe-`, `ge-`, and so on) are either not supported on dynamic interfaces or supported in a nonstandard method.

However, on MX Series routers, there is another configuration method that dynamic interfaces can use to determine their VLAN parameters when they are created by a running router: *dynamic profiles*. A dynamic profile is a conceptual container that includes parameters associated with a dynamic entity, parameters whose values are not known at the time the entity is configured.

A dynamic profile acts as a kind of template that enables you to create, update, or remove a configuration that includes client access (for example, interface or protocol) or service (for example, CoS) attributes. Using these profiles you can consolidate all of the common attributes of a client (and eventually a group of clients) and apply the attributes simultaneously. The router contains several predefined variables that enable dynamic association of interfaces and logical units to incoming subscriber requests. While configuring a dynamic profile, use the `$junos-interface-ifd-name` variable for a dynamic physical interface and the `$junos-underlying-unit-number` variable for a dynamic logical interface (unit). When a client accesses the router, the dynamic profile configuration replaces the predefined variable with the actual interface name or unit value for the interface the client is accessing.

Dynamic profiles for VPLS are supported only on MX Series routers.

Related Documentation

- [Dynamic Profiles Overview on page 6](#)
- [Use Cases for Dynamic Profiles for VPLS Pseudowires on page 9](#)
- [Example: Configuring the Router to Push an Extra VLAN Tag onto Pseudowire Traffic Using Dynamic Profiles on page 10](#)
- [Example: Configuring a VPLS Pseudowire as a Trunk Interface Using Dynamic Profiles on page 13](#)

Use Cases for Dynamic Profiles for VPLS Pseudowires

A dynamic profile is a set of characteristics, defined in a type of template, that you can use to provide dynamic subscriber access and services for broadband applications. These

services are assigned dynamically to interfaces. You can use dynamic profiles to configure the VLAN parameters of the dynamic interfaces on MX Series routers.

Two use cases for configuring VPLS pseudowires with dynamic profiles are:

- **Configuring an extra VLAN tag onto pseudowire traffic** — This is a common scenario where all the traffic received from a customer edge (CE) interface needs an additional VLAN tag toward the core. In such cases, you can use dynamic profiles at ingress and egress to control the pseudowire behavior. You can apply dynamic profiles to receive the desired frames, set the additional VLAN tag for these frames, and send these tagged frames with the desired VLAN identifier.
- **Configuring a VPLS pseudowire as a trunk interface** — This is another common scenario where the requirement is to accept traffic from a particular source and to route the traffic based on specific criteria. Dynamic profiles can be used to create multiple pseudowire trunk interfaces to accept the traffic based on specific VLAN identifiers, and to route the accepted traffic to the desired destination.

**Related
Documentation**

- [Dynamic Profiles Overview on page 6](#)
- [Dynamic Profiles for VPLS Pseudowires on page 9](#)
- [Example: Configuring the Router to Push an Extra VLAN Tag onto Pseudowire Traffic Using Dynamic Profiles on page 10](#)
- [Example: Configuring a VPLS Pseudowire as a Trunk Interface Using Dynamic Profiles on page 13](#)

Example: Configuring the Router to Push an Extra VLAN Tag onto Pseudowire Traffic Using Dynamic Profiles

This example shows how dynamic profiles can be used to add an extra VLAN tag to the traffic received from a customer edge (CE) interface toward the network core.

- [Requirements on page 10](#)
- [Overview and Topology on page 11](#)
- [Configuration on page 11](#)
- [Verification on page 12](#)

Requirements

This example uses the following hardware and software components:

- MX Series 3D Universal Edge Routers
- Junos OS Release 9.3 or later




NOTE: This configuration example has been tested using the software release listed and is assumed to work on all later releases.

Overview and Topology

A dynamic profile is a set of characteristics, defined in a type of template, that you can use to provide dynamic subscriber access and services for broadband applications. These services are assigned dynamically to interfaces. You can use dynamic profiles at ingress and egress to control the pseudowire behavior.

The topology used in this example for dynamically pushing an extra VLAN tag on to a pseudowire is shown in [Figure 1 on page 11](#). On the ingress, the pseudowire receives dual-tagged frames with an inner VLAN ID 100, and an outer VLAN ID 10. All other frames are dropped. The outer tag is stripped at the interface. On the egress, the dual-tagged frames are transmitted with the outer vlan tag set to 10.

Figure 1: Pushing an Extra VLAN Tag on a Pseudowire

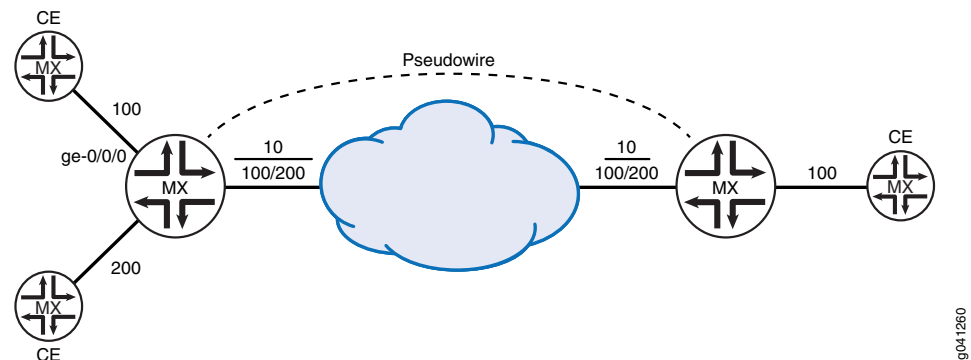

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set dynamic-profiles pw-tagged interfaces $junos-interface-ifd-name unit
  $junos-underlying-interface-unit vlan-tags inner 100 outer 10
set routing-instances red instance-type vpls vlan-id 100 interface ge-0/0/0
set routing-instances red protocols vpls associate-profile pw-tagged
```

Pushing an Additional VLAN Tag Over the Pseudowire

Step-by-Step Procedure The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the Junos OS CLI User Guide.



NOTE: This is not a complete router configuration.

To push an additional VLAN tag over the pseudowire:

1. Create a dynamic profile named **pw-tagged**.

```
user@host#set dynamic-profiles pw-tagged
```
2. Specify the variables **\$junos-interface-ifd-name** and **\$junos-underlying-interface-unit** to be used by the router to match the interface name and the unit value of the receiving interface.

```
[edit dynamic-profiles pw-tagged]
user@host# set interfaces $junos-interface-ifd-name unit
$junos-underlying-interface-unit
```
3. Specify the VLAN tag to receive dual-tagged frames with an inner VLAN ID 100 and an outer VLAN ID 10.

```
[edit dynamic-profiles pw-tagged interfaces "$junos-interface-ifd-name" unit
"$junos-underlying-interface-unit"]
user@host# set vlan-tags inner 100 outer 10
```
4. Create a routing instance named **red**.

```
[edit ]
user@host# set routing-instances red instance-type vpls vlan-id 100 interface
ge-0/0/0
```
5. Associate the profile with the routing instance.

```
[edit routing-instances red]
user@host# set protocols vpls associate-profile pw-tagged
```

Verification

Verifying the Dynamic Profile Configuration

Purpose Make sure that the dynamic profile is configured correctly.

Action From configuration mode, enter the **show dynamic-profiles** command.

```
user@host# show dynamic-profiles

pw-tagged {
  interfaces {
    "$junos-interface-ifd-name" {
      unit "$junos-underlying-interface-unit" {
```

```
        vlan-tags inner 100 outer 10;
    }
}
}
```

From configuration mode, enter the **show routing-instances** command.

user@host# show routing-instances

```
red {
  instance-type vpls;
  interface ge-0/0/0.0;
  vlan-id 100;
  protocols {
    vpls {
      associate-profile pw-tagged;
    }
  }
}
```

Meaning In the ingress direction, the pseudowire receives dual-tagged frames with an inner VLAN ID 100, and an outer VLAN ID 10. All other frames are dropped and the outer tag is stripped at the interface. In the egress direction, dual-tagged frames are transmitted with an inner VLAN ID 100 and an outer VLAN ID 10.

Related Documentation

- [Dynamic Profiles Overview on page 6](#)
- [Dynamic Profiles for VPLS Pseudowires on page 9](#)
- [Use Cases for Dynamic Profiles for VPLS Pseudowires on page 9](#)
- [Example: Configuring a VPLS Pseudowire as a Trunk Interface Using Dynamic Profiles on page 13](#)

Example: Configuring a VPLS Pseudowire as a Trunk Interface Using Dynamic Profiles

This example shows how dynamic profiles can be used to create multiple pseudowire trunk interfaces to accept the traffic based on specific VLAN identifiers, and to route the accepted traffic to the desired destination.

- [Requirements on page 13](#)
- [Overview and Topology on page 14](#)
- [Configuration on page 14](#)
- [Verification on page 17](#)

Requirements

This example uses the following hardware and software components:

- MX Series 3D Universal Edge Routers
- Junos OS Release 9.3 or later




NOTE: This configuration example has been tested using the software release listed and is assumed to work on all later releases.

Overview and Topology

The topology used in this example for configuring VPLS pseudowires as trunk interfaces is shown in [Figure 2 on page 14](#). Three trunk interfaces, **pw-trunk-1** with VLAN ID 100–300, **pw-trunk-2** with VLAN ID 301–600, and **pw-trunk-3** with VLAN ID 601–1000, are configured.

Figure 2: Using Pseudowires as Trunk Interfaces

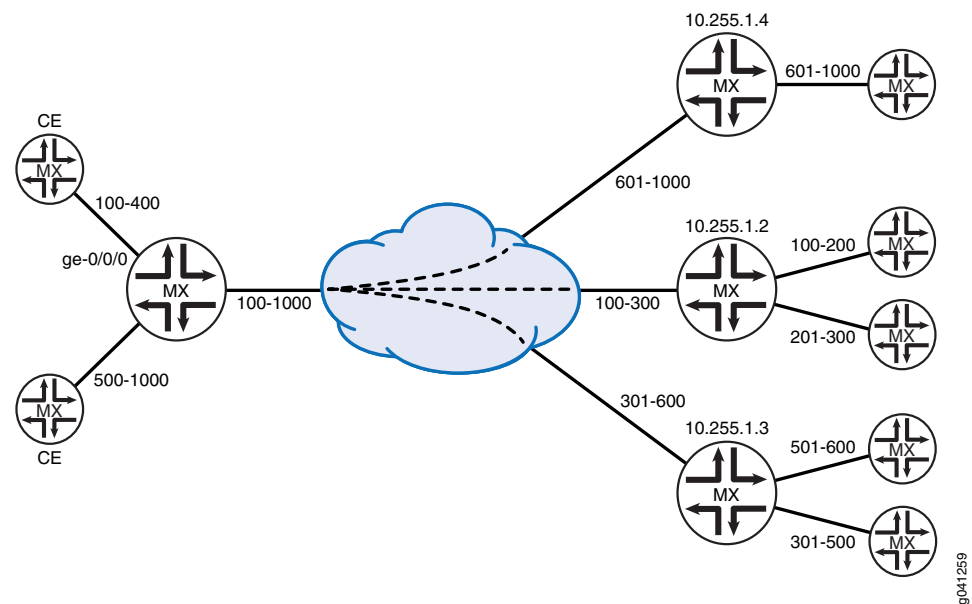

Configuration

Configuring VPLS pseudowires as trunk interfaces using dynamic profiles involves performing these tasks:

- [Creating a Dynamic Profile on page 15](#)
- [Creating a Routing Instance with a Bridge Domain on page 16](#)
- [Associating Dynamic Profiles with a Routing Instance on page 17](#)

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set dynamic-profiles pw-trunk-1 interfaces $junos-interface-ifd-name unit
  $junos-underlying-interface-unit family bridge interface-mode trunk vlan-id-list
  [100-300]
set dynamic-profiles pw-trunk-2 interfaces $junos-interface-ifd-name unit
  $junos-underlying-interface-unit family bridge interface-mode trunk vlan-id-list
  [301-600]
```

```

set dynamic-profiles pw-trunk-3 interfaces $junos-interface-ifd-name unit
  $junos-underlying-interface-unit family bridge interface-mode trunk vlan-id-list
  [601-1000]
set routing-instances red instance-type virtual-switch bridge-domains vlan-100 vlan-id
  100
set routing-instances red instance-type virtual-switch bridge-domains vlan-200 vlan-id
  200
set routing-instances red instance-type virtual-switch bridge-domains vlan-1000 vlan-id
  1000
set routing-instances red protocols vpls neighbor 10.255.1.2 associate-profile pw-trunk-1
set routing-instances red protocols vpls neighbor 10.255.1.3 associate-profile pw-trunk-2
set routing-instances red protocols vpls neighbor 10.255.1.4 associate-profile pw-trunk-3

```

Creating a Dynamic Profile

Step-by-Step Procedure Perform the following steps to create the **pw-trunk-1** dynamic profile. This dynamic profile is then associated with the routing instance to filter the ingress and egress frames.

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the Junos OS CLI User Guide.



NOTE: This is not a complete router configuration.

1. Create a dynamic profile named **pw-trunk-1**.

```

[edit]
user@host# set dynamic-profiles pw-trunk-1

```
2. Specify the variables **\$junos-interface-ifd-name** and **\$junos-underlying-interface-unit** to be used by the router to match the interface name and the unit value of the receiving interface.

```

[edit dynamic-profiles pw-trunk-1]
user@host# set interfaces $junos-interface-ifd-name unit
  $junos-underlying-interface-unit

```
3. Specify the protocol family, interface mode, and the trunk mode VLAN membership for the interface.

```

[edit dynamic-profiles pw-trunk-1 interfaces "$junos-interface-ifd-name" unit
  "$junos-underlying-interface-unit"]
user@host# set family bridge family bridge interface-mode trunk vlan-id-list
  [100-300]

```

Step-by-Step Procedure Perform the following steps to create the **pw-trunk-2** dynamic profile. This dynamic profile is then associated with the routing instance to filter the ingress and egress frames.

1. Create a dynamic profile named **pw-trunk-2**.

```

[edit ]
user@host# set dynamic-profiles pw-trunk-2

```

2. Specify the variables `$junos-interface-ifd-name` and `$junos-underlying-interface-unit` to be used by the router to match the interface name and the unit value of the receiving interface.

```
[edit dynamic-profiles pw-trunk-2]
user@host# set interfaces $junos-interface-ifd-name unit
$junos-underlying-interface-unit
```

3. Specify the protocol family, interface mode, and the trunk mode VLAN membership for the interface.

```
[edit dynamic-profiles pw-trunk-2 interfaces "$junos-interface-ifd-name" unit
"$junos-underlying-interface-unit"]
user@host# set family bridge family bridge interface-mode trunk vlan-id-list
[301-600]
```

Step-by-Step Procedure Perform the following steps to create the **pw-trunk-3** dynamic profile. This dynamic profile is then associated with the routing instance to filter the ingress and egress frames.

1. Create a dynamic profile named **pw-trunk-3**.

```
[edit]
user@host# set dynamic-profiles pw-trunk-3
```

2. Specify the variables `$junos-interface-ifd-name` and `$junos-underlying-interface-unit` to be used by the router to match the interface name and the unit value of the receiving interface.

```
[edit dynamic-profiles pw-trunk-3]
user@host# set interfaces $junos-interface-ifd-name unit
$junos-underlying-interface-unit
```

3. Specify the protocol family, interface mode, and the trunk mode VLAN membership for the interface.

```
[edit dynamic-profiles pw-trunk-3 interfaces "$junos-interface-ifd-name" unit
"$junos-underlying-interface-unit"]
user@host# set family bridge family bridge interface-mode trunk vlan-id-list
[601-1000]
```

Creating a Routing Instance with a Bridge Domain

Step-by-Step Procedure In this example, the routing instance is created with three bridge domains: **vlan-100**, **vlan-200**, **vlan-300**. Only the packets with VLAN IDs that match the VLAN ID configured for a bridge domain are forwarded within the bridge domain.



NOTE: The VLAN ID configuration supports a range of VLAN IDs but for brevity the example only shows one VLAN ID configured for each bridge domain.

To configure a routing instance with bridge domains:

1. Create a routing instance named **red**.

```
[edit ]
```



```
user@host# set routing-instances red instance-type virtual-switch
```

2. Configure the bridge domains on the routing instance.

```
[edit routing-instances red]
user@host# set bridge-domains vlan-100 vlan-id 100
user@host# set bridge-domains vlan-200 vlan-id 200
user@host# set bridge-domains vlan-1000 vlan-id 1000
```

Associating Dynamic Profiles with a Routing Instance

Step-by-Step Procedure By associating the dynamic profiles with a routing instance, you can filter the frames on egress and ingress.

To associate dynamic profiles with a routing instance, configure the routing protocol to accept the VLANs. In this example, the dynamic profile **pw-trunk-1** is associated with neighbor 10.255.1.2, the dynamic profile **pw-trunk-2** is associated with neighbor 10.255.1.3, and the dynamic profile **pw-trunk-3** is associated with neighbor 10.255.1.4.

```
[edit routing-instances red]
user@host# set protocols vpls neighbor 10.255.1.2 associate-profile pw-trunk-1
user@host# set protocols vpls neighbor 10.255.1.3 associate-profile pw-trunk-2
user@host# set protocols vpls neighbor 10.255.1.4 associate-profile pw-trunk-3
```

Verification

Verifying the Trunk Interface

Purpose Make sure that the settings for the trunk interface are correct.

Action From operational mode, enter the following commands:

```
user@host> show dynamic-profiles

pw-trunk-1 {
  interfaces {
    "$junos-interface-ifd-name" {
      unit "$junos-underlying-interface-unit" {
        family-bridge {
          interface-mode trunk;
          vlan-id-list 100-300;
        }
      }
    }
  }
}
pw-trunk-2 {
  interfaces {
    "$junos-interface-ifd-name" {
      unit "$junos-underlying-interface-unit" {
        family-bridge {
          interface-mode trunk;
          vlan-id-list 301-600;
        }
      }
    }
  }
}
```

```
    }  
  }  
}  
pw-trunk-3 {  
  interfaces {  
    "$junos-interface-ifd-name" {  
      unit "$junos-underlying-interface-unit" {  
        family-bridge {  
          interface-mode trunk;  
          vlan-id-list 601-1000;  
        }  
      }  
    }  
  }  
}
```

user@host> show routing-instances

```
red {  
  instance-type virtual-switch;  
  protocols {  
    vpls {  
      neighbor 10.255.1.2 {  
        associate-profile pw-trunk-1;  
      }  
      neighbor 10.255.1.3 {  
        associate-profile pw-trunk-2;  
      }  
      neighbor 10.255.1.4 {  
        associate-profile pw-trunk-3;  
      }  
    }  
  }  
  bridge-domains {  
    vlan-100 {  
      vlan-id 100;  
    }  
    vlan-1000 {  
      vlan-id 1000;  
    }  
    vlan-200 {  
      vlan-id 200;  
    }  
  }  
}
```

Meaning On the ingress, the pseudowire receives frames with the VLAN ID 100 to 1000. All other frames are dropped. On the egress, the pseudowire sends frames with VLAN ID 100-300 to a particular neighbor, 301-600 to the second neighbor, and 601-1000 to the third neighbor. All other frames are dropped.

Related Documentation

- [Dynamic Profiles Overview on page 6](#)
- [Dynamic Profiles for VPLS Pseudowires on page 9](#)

- [Use Cases for Dynamic Profiles for VPLS Pseudowires on page 9](#)
- [Example: Configuring the Router to Push an Extra VLAN Tag onto Pseudowire Traffic Using Dynamic Profiles on page 10](#)

