



---

# Integrated User Firewall Feature Guide for NFX Devices



---

Modified: 2018-07-07

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. and/or its affiliates in the United States and other countries. All other trademarks may be property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Integrated User Firewall Feature Guide for NFX Devices*  
Copyright © 2018 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://www.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	xv
	Documentation and Release Notes . . . . .	xv
	Using the Examples in This Manual . . . . .	xv
	Merging a Full Example . . . . .	xvi
	Merging a Snippet . . . . .	xvi
	Documentation Conventions . . . . .	xvii
	Documentation Feedback . . . . .	xix
	Requesting Technical Support . . . . .	xix
	Self-Help Online Tools and Resources . . . . .	xix
	Opening a Case with JTAC . . . . .	xx
<b>Part 1</b>	<b>Integrated User Firewall</b>	
<b>Chapter 1</b>	<b>Understanding Integrated User Firewall . . . . .</b>	<b>3</b>
	Integrated User Firewall on NFX Devices . . . . .	3
	Integrated User Firewall and Authentication Sources . . . . .	3
	Benefits of Integrated User Firewall . . . . .	4
	How the Integrated User Firewall Works . . . . .	4
	Deployment Scenario for User Firewall Integration with Windows Active Directory . . . . .	5
	Limitations . . . . .	6
	Active Directory Authentication Tables . . . . .	6
	Active Directory Authentication as an Authentication Source . . . . .	6
	Active Directory Authentication Tables . . . . .	7
	State Information for Active Directory Authentication Table Entries . . . . .	9
	Active Directory Authentication Table Management . . . . .	9
	Timeout Interval for Table Entries . . . . .	11
	Timeout Setting for Invalid Authentication Entries . . . . .	12
	How the Invalid Authentication Entry Timeout Works for Windows Active Directory . . . . .	13
	How the Invalid Authentication Entry Timeout Works for NFX Series Aruba ClearPass . . . . .	14
	LDAP Functionality in Integrated User Firewall on NFX Devices . . . . .	15
	Role of LDAP in Integrated User Firewall . . . . .	15
	LDAP Server's Username, Password, and Server Address . . . . .	15
	Caching and Calculation of User-to-Group Mappings . . . . .	16
	Updating Group Information in the Authentication Entry Table . . . . .	16
	Active Directory Autodiscovery . . . . .	16
	Configuring Integrated User Firewall on NFX Devices . . . . .	17

<b>Chapter 2</b>	<b>Managing Event Logs</b>	<b>21</b>
	Understanding the Windows Management Instrumentation Client	21
	Windows Management Instrumentation Client	21
	Specifying IP Filters to Limit IP-to-User Mapping	22
	Event Log Verification and Statistics	22
	Understanding Integrated User Firewall Domain PC Probing	22
	Overview of Domain PC Probing	23
	Probing Domain PCs for User Information	23
	Probe Response	24
	Probe Configuration	24
	Probe Rate and Statistics	25
<b>Chapter 3</b>	<b>Logging User Identity Information Based on Zones</b>	<b>27</b>
	Logging User Identity Information Based on Zones	27
	Understanding How to Include User Identity Information in the Session Log	
	File Based on the Source Zone	27
	Configuring Integrated User Firewall to Write User Identity to the Session	
	Log Based On the Source Zone	29
	Verifying that the User Identity Information Was Logged	30
<b>Chapter 4</b>	<b>Configuring Integrated User Firewall Device Identity Authentication for Access Control</b>	<b>33</b>
	Integrated User Firewall Device Identity Authentication	33
	Using Device Identity Information to Control Access to Your Network	33
	Device Identity	35
	Device Identity Profile Contents	36
	Predefined Device Identity Attributes	38
	Characteristics of Device Identity Profiles, and Attributes and Target	
	Scaling	38
	Understanding the Device Identity Authentication Table on NFX Devices	39
	The Device Identity Authentication Table	40
	Why the Device Identity Authentication Table Content Changes	40
	Security Policy Matching and Device Identity Profiles	43
	Understanding the Device Identity XML Solution for Third-Party NAC	
	Authentication Systems	43
	XML Web API Implementation	44
	Ensuring the Integrity of Data Sent from the NAC Service to the NFX Series	
	Device	44
	Data Size Restrictions and Other Constraints	44
	Example: Configuring the Device Identity Feature in an Active Directory	
	Environment on NFX Devices	45
<b>Chapter 5</b>	<b>Configuring Advanced Query for Active Directory and ClearPass Authentication Sources</b>	<b>55</b>
	Understanding the Advanced Query Feature for Obtaining User Identity	
	Information from JIMS	55
	Juniper Identity Management Service (JIMS) Overview	55
	Establishing a Connection to JIMS to Obtain User Identity Information	56
	Querying JIMS for User Identity Information	56
	Filters	57

	Caveats and Limitations . . . . .	58
	Configuring the Advanced Query Feature for Obtaining User Identity Information from JIMS . . . . .	58
	Configuring the Advanced Query Feature for Obtaining User Identity Information from JIMS . . . . .	59
	Configure Security Policy Parameters to Match the User Identity Information Obtained from JIMS . . . . .	60
<b>Part 2</b>	<b>Configuring Integrated ClearPass Authentication and Enforcement</b>	
<b>Chapter 6</b>	<b>Understanding Integrated ClearPass Authentication and Enforcement . .</b>	<b>65</b>
	Understanding the NFX Series Integrated ClearPass Authentication and Enforcement Feature . . . . .	65
	Why You Need to Protect Your Environment With the NFX Series Integrated ClearPass Authentication and Enforcement Feature . . . . .	65
	How the NFX Series Integrated ClearPass Authentication and Enforcement Feature Can Protect Your Network Environment . . . . .	66
<b>Chapter 7</b>	<b>Configuring Communication with ClearPass Using the WebAPI Feature . . . . .</b>	<b>69</b>
	Understanding How ClearPass Communicates with the NFX Series Device Using the Web API . . . . .	69
	Web API . . . . .	69
	ClearPass Authentication Table . . . . .	70
	Using HTTPS or HTTP for the Connection Protocol Between ClearPass and the NFX Series Device . . . . .	70
	Ensuring the Integrity of Data Sent from ClearPass to the NFX Series Device . . . . .	71
	Data Size Restrictions and Other Constraints . . . . .	71
	Posture States and the Posture Group . . . . .	71
	Example: Configuring the NFX Series Integrated ClearPass Feature to Allow the Device to Receive User Authentication Data from ClearPass . . . . .	72
<b>Chapter 8</b>	<b>Configuring Integrated ClearPass Authentication and Enforcement . . . .</b>	<b>83</b>
	Understanding Enforcement of ClearPass User and Group Authentication on NFX Devices . . . . .	83
	Understanding How the NFX Device Manages the ClearPass Authentication Table . . . . .	83
	User Authentication Entries in the ClearPass Authentication Table . . . . .	84
	Communication Between ClearPass and the NFX Series Device . . . . .	86
	Understanding Domains and Interested Groups . . . . .	89
	When a User Has Already Been Authenticated By Another Source . . . . .	91
	Example: Enforcing Security Policies on NFX Series Using Aruba ClearPass as the Authentication Source . . . . .	92

<b>Chapter 9</b>	<b>Configuring the Integrated ClearPass Authentication and Enforcement User Query Function . . . . .</b>	<b>111</b>
	Understanding the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices . . . . .	111
	Example: Configuring the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices . . . . .	114
<b>Chapter 10</b>	<b>Configuring ClearPass and JIMS . . . . .</b>	<b>125</b>
	Configuring JIMS and Clearpass Simultaneously on NFX Series . . . . .	125
	Understanding How ClearPass and JIMS Function Simultaneously . . . . .	125
	Configuring ClearPass and JIMS on NFX Devices . . . . .	126
	Verifying the Configuration . . . . .	128
<b>Part 3</b>	<b>Configuration Statements and Operational Commands</b>	
<b>Chapter 11</b>	<b>Configuration Statements . . . . .</b>	<b>131</b>
	actions (Services SSL Proxy) . . . . .	137
	active-directory-access . . . . .	139
	active-directory-authentication-table . . . . .	141
	address (Services) . . . . .	142
	address (Services User Identification) . . . . .	142
	address (Identity Management Advanced Query Primary) . . . . .	143
	address (Identity Management Advanced Query Secondary) . . . . .	145
	admin-search . . . . .	147
	allow-reverse-ecmp . . . . .	148
	application (Security Policies) . . . . .	149
	application-services (Security Policies) . . . . .	150
	assemble . . . . .	151
	auth-only-browser . . . . .	152
	auth-user-agent . . . . .	153
	authentication-entry-timeout (Services User Identification) . . . . .	154
	authentication-entry-timeout (Identity Management Advanced Query) . . . . .	155
	authentication-source (Services User Identification ClearPass) . . . . .	157
	authentication-source (Services User Identification Device Identity) . . . . .	159
	batch query . . . . .	161
	banner (Access FTP HTTP Telnet Authentication) . . . . .	163
	banner (Access Web Authentication) . . . . .	164
	base-distinguished-name . . . . .	164
	ca-certificate (Services User Identification) . . . . .	165
	ca-certificate (Identity Management Advanced Query Primary) . . . . .	166
	ca-certificate (Identity Management Advanced Query Secondary) . . . . .	168
	ca-profile (Services) . . . . .	169
	certificate (System Services) . . . . .	170
	certificate-key (System Services) . . . . .	171
	certificate-verification . . . . .	172
	client (System Services) . . . . .	173
	client-id (Services User Identification) . . . . .	173
	client-id (Identity Management Advanced Query Primary) . . . . .	174
	client-id (Identity Management Advanced Query Secondary) . . . . .	176

client-group	177
client-idle-timeout (Access Profile)	178
client-name-filter	178
client-secret (Services User Identification)	179
client-secret (Identity Management Advanced Query Primary)	180
client-secret (Identity Management Advanced Query Secondary)	182
client-session-timeout (Access Profile)	183
configuration-file	184
connection (Identity Management Advanced Query)	185
connect-method (Identity Management Advanced Query)	189
connect-method (Services User Identification)	190
count	191
custom-ciphers	192
debug-level (System Services)	194
debug-log (System Services)	195
default-certificate (System Services)	195
default-profile	196
delay-query-time (Services User Identification)	197
distinguished-name (Access)	198
domain-name (Access Profile)	198
enable-flow-tracing (Services)	199
enable-session-cache	200
end-user-profile	201
fail	202
file (Services User Identification)	203
file (System Logging)	204
filter (Security)	206
filter (Identity Management Advanced Query)	207
firewall-user	209
flag (Services)	210
from-zone (Security Policies)	211
ftp (Access)	214
group-profile (Access)	215
http (Access)	216
http (Services)	217
http (Services User Identification)	218
http (System Services)	219
https (Services)	220
https (Services User Identification)	221
https (System Services)	223
infranet-controller	224
interface (Services)	225
interval (Services)	226
invalid-authentication-entry-timeout (Services User Identification Active Directory and ClearPass)	227
ip-address (Access Profile)	229
ip-query (Identity Management Advanced Query)	230
ip-user-mapping	232
ldap-options	233

ldap-server	234
level (Services)	235
level (Services User Identification)	236
lifetime-seconds (Security IKE)	237
link (Access)	237
local-authentication-table	238
log (Services)	239
login (Access)	240
nas-port-type	240
network (Access)	241
no-remote-trace (Services User Identification)	241
no-user-query (Services User Identification)	242
no-tls-certificate-check	242
pass-through	243
password (Access)	244
password (Services)	244
password (System Services)	245
permit (Security Policies)	246
pki-local-certificate (Services)	247
policies	248
pool (Access)	253
port (Access LDAP)	254
port (Identity Management Advanced Query)	255
port (Services)	256
port (System Services)	257
preferred-ciphers	258
prefix (Access IPv6)	259
primary connection (Identity Management Advanced Query)	260
priority (Security User Identification)	262
push-to-identity-management	263
protocol-version	264
query-api (Services User Identification)	265
query-api (advanced user query)	266
radius-options (Access)	267
radius-server (Access)	268
range (Access)	269
rate-limit (Security Log)	270
redirect-traffic	271
redirect-url	272
retry (Access LDAP)	273
retry (Access RADIUS)	274
revert-interval (Access LDAP)	274
revert-interval (Access RADIUS)	275
root-ca (Services)	275
routing-instance (Access LDAP)	276
routing-instance (Access RADIUS)	276
search	277
search-filter	278
secondary connection (Identity Management Advanced Query)	279



secret (Access Profile) . . . . .	281
securid-server . . . . .	281
separator . . . . .	282
server-certificate (Services) . . . . .	282
server-certificate-subject . . . . .	283
session-options (Access Profile) . . . . .	283
size (Services) . . . . .	284
source-address (Access LDAP) . . . . .	284
source-address (Access RADIUS) . . . . .	285
source-end-user-profile . . . . .	286
source-identity-log (Security) . . . . .	287
ssl (Services) . . . . .	288
ssl-termination-profile . . . . .	290
success . . . . .	290
system-generated-certificate . . . . .	291
telnet (Access) . . . . .	291
termination (Services) . . . . .	292
test-only-mode . . . . .	293
then (Security Policies) . . . . .	294
timeout (Access LDAP) . . . . .	296
timeout (Access RADIUS) . . . . .	296
timeout (Services) . . . . .	297
timeout-action . . . . .	298
tls-min-version . . . . .	299
tls-peer-name . . . . .	299
tls-timeout . . . . .	300
tls-type . . . . .	301
token-api (Services User Identification) . . . . .	302
token-api . . . . .	303
to-zone (Security Policies) . . . . .	305
traceoptions (Access) . . . . .	308
traceoptions (Active Directory Access) . . . . .	310
traceoptions (Services SSL) . . . . .	312
traceoptions (Services User Identification) . . . . .	313
trusted-ca (Services) . . . . .	314
user-group-mapping . . . . .	315
user-identification (Services) . . . . .	317
webapi (System Services) . . . . .	320
webapi-clear-text (Security) . . . . .	321
webapi-ssl (Security) . . . . .	321
web-authentication . . . . .	322
web-authentication (Access) . . . . .	323
web-authentication (Interfaces) . . . . .	324
web-management (System Services) . . . . .	325
web-server (Services) . . . . .	328
whitelist (Services) . . . . .	329
wins-server (Access) . . . . .	330

<b>Chapter 12</b>	<b>Operational Commands</b>	<b>331</b>
	clear network-access requests pending	333
	clear network-access requests statistics	334
	clear network-access securid-node-secret-file	335
	clear security user-identification local-authentication-table	336
	clear service user-identification identity-management counter	337
	clear services user-identification active-directory-access	338
	clear services user-identification authentication-table	339
	request security user-identification local-authorization-table add	340
	request services user-identification active-directory-access	
	active-directory-authentication-table delete	342
	request services user-identification active-directory-access	
	domain-controller	343
	request services user-identification active-directory-access ip-user-probe	344
	request services user-identification authentication-source aruba-clearpass	
	user-query	346
	request services user-identification authentication-table delete	347
	show network-access requests pending	354
	show network-access requests statistics	356
	show network-access securid-node-secret-file	358
	show security user-identification local-authentication-table	359
	show security policies	362
	show services unified-access-control counters	373
	show services unified-access-control policies	375
	show services unified-access-control roles	377
	show services unified-access-control status	378
	show services user-identification active-directory-access domain-controller	
	status	379
	show services user-identification active-directory-access statistics	382
	show services user-identification active-directory-access	
	user-group-mapping	385
	show service user-identification authentication-source aruba-clearpass	
	user-query counters	388
	show service user-identification authentication-source aruba-clearpass	
	user-query status	390
	show services user-identification authentication-table	391
	show service user-identification identity-management	405
	show services user-identification device-information table	408

# List of Figures

<b>Part 1</b>	<b>Integrated User Firewall</b>	
<b>Chapter 1</b>	<b>Understanding Integrated User Firewall</b>	<b>3</b>
	Figure 1: Scenario for Integrated User Firewall	5
<b>Chapter 4</b>	<b>Configuring Integrated User Firewall Device Identity Authentication for Access Control</b>	<b>33</b>
	Figure 2: Using a Third-Party Network Access Control (NAC) System for Device Identity Authentication	35
	Figure 3: Topology for the Device Identity Feature with Active Directory as the Authentication Source	48
<b>Part 2</b>	<b>Configuring Integrated ClearPass Authentication and Enforcement</b>	
<b>Chapter 7</b>	<b>Configuring Communication with ClearPass Using the WebAPI Feature</b>	<b>69</b>
	Figure 4: ClearPass and NFX Series Device Communication and User Authentication Process	74
	Figure 5: Integrated ClearPass Authentication and Enforcement Deployment Topology	77
<b>Chapter 8</b>	<b>Configuring Integrated ClearPass Authentication and Enforcement</b>	<b>83</b>
	Figure 6: User Information from the CPPM to the Device Routing Engine Synchronized to the ClearPass Authentication Table	87
	Figure 7: Communication between ClearPass and the Device, and User Authentication Process	88
	Figure 8: Topology for the Integrated ClearPass Authentication Enforcement Through Security Policies Example	97
<b>Chapter 9</b>	<b>Configuring the Integrated ClearPass Authentication and Enforcement User Query Function</b>	<b>111</b>
	Figure 9: ClearPass Integration User Query Function	112
	Figure 10: User Query Function Process	116
	Figure 11: Topology for the Overall Deployment that Includes User Query	118



# List of Tables

	<b>About the Documentation</b> . . . . .	<b>xv</b>
	Table 1: Notice Icons . . . . .	xvii
	Table 2: Text and Syntax Conventions . . . . .	xvii
<b>Part 1</b>	<b>Integrated User Firewall</b>	
<b>Chapter 1</b>	<b>Understanding Integrated User Firewall</b> . . . . .	<b>3</b>
	Table 3: Integrated User Firewall Features . . . . .	3
	Table 4: Active Directory Authentication Table Support for NFX Series Devices . . . . .	8
	Table 5: Events Triggering Active Directory Authentication Table Updates . . . . .	10
	Table 6: How New Invalid Authentication Entry Timeout Settings Affect Timeout Settings for Existing Invalid Entries in the Active Directory Authentication Table . . . . .	13
	Table 7: How New Invalid Authentication Entry Timeout Settings Affect Timeout Settings for Invalid Entries in the ClearPass Authentication Table . . . . .	14
<b>Chapter 2</b>	<b>Managing Event Logs</b> . . . . .	<b>21</b>
	Table 8: Probe Responses and Associated Active Directory Authentication Table Actions . . . . .	24
<b>Chapter 4</b>	<b>Configuring Integrated User Firewall Device Identity Authentication for Access Control</b> . . . . .	<b>33</b>
	Table 9: Platform-Independent Scaling . . . . .	39
	Table 10: Platform-Dependent Scaling . . . . .	39
	Table 11: Group Changes for Devices in the Active Directory LDAP and the Response . . . . .	41
	Table 12: Changes to Device Identity Entries Based on Security Policy Specifications . . . . .	42
	Table 13: Changes to Device Identity Authentication Table Resulting from LDAP and Security Policy Changes . . . . .	42
<b>Part 2</b>	<b>Configuring Integrated ClearPass Authentication and Enforcement</b>	
<b>Chapter 7</b>	<b>Configuring Communication with ClearPass Using the WebAPI Feature</b> . . . . .	<b>69</b>
	Table 14: NFX Series Device Authentication Tables Search Priority Assignment . . . . .	81
<b>Chapter 8</b>	<b>Configuring Integrated ClearPass Authentication and Enforcement</b> . . . . .	<b>83</b>
	Table 15: Assigning a Domain to a Group . . . . .	89

	Table 16: Interested Groups: Effect on the ClearPass Authentication Table . . . . .	91
	Table 17: Authenticated User Information for Security Policy Example . . . . .	96
<b>Chapter 9</b>	<b>Configuring the Integrated ClearPass Authentication and Enforcement User Query Function . . . . .</b>	<b>111</b>
	Table 18: Relationship Between User Query Function and Active Directory Authentication as Processed by the CLI . . . . .	113
	Table 19: Time Stamp Components as Defined by ISO 8601 . . . . .	114
<b>Part 3</b>	<b>Configuration Statements and Operational Commands</b>	
<b>Chapter 12</b>	<b>Operational Commands . . . . .</b>	<b>331</b>
	Table 20: show network-access requests pending Output Fields . . . . .	354
	Table 21: show network-access requests statistics Output Fields . . . . .	356
	Table 22: show network-access securid-node-secret-file Output Fields . . . . .	358
	Table 23: show security user-identification local-authentication-table Output Fields . . . . .	359
	Table 24: show security policies Output Fields . . . . .	363
	Table 25: show services unified-access-control counters Output Fields . . . . .	373
	Table 26: show services unified-access-control roles Output Fields . . . . .	377
	Table 27: show services user-identification active-directory-access domain-controller Output Fields . . . . .	379
	Table 28: show services user-identification active-directory-access statistics ip-user-mapping Output Fields . . . . .	382
	Table 29: show services user-identification active-directory-access statistics ip-user-probe Output Fields . . . . .	383
	Table 30: show services user-identification active-directory-access statistics user-group-mapping Output Fields . . . . .	383
	Table 31: show services user-identification active-directory-access user-group-mapping group Output Fields . . . . .	385
	Table 32: show services user-identification active-directory-access user-group-mapping status Output Fields . . . . .	386
	Table 33: show services user-identification active-directory-access user-group-mapping user Output Fields . . . . .	386
	Table 34: show services user-identification device-information table Output Fields . . . . .	409

# About the Documentation

- Documentation and Release Notes on page xv
- Using the Examples in This Manual on page xv
- Documentation Conventions on page xvii
- Documentation Feedback on page xix
- Requesting Technical Support on page xix

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
```



```
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:







```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

## Documentation Conventions

[Table 1 on page xvii](#) defines notice icons used in this guide.

*Table 1: Notice Icons*

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

[Table 2 on page xvii](#) defines the text and syntax conventions used in this guide.

*Table 2: Text and Syntax Conventions*

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>

Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<code>user@host&gt; show chassis alarms</code> <code>No alarms currently active</code>
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: <code>[edit]</code> <code>root@# set system domain-name domain-name</code>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the <code>[edit protocols ospf area area-id]</code> hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<code>stub &lt;default-metric metric&gt;;</code>
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<code>broadcast   multicast</code> <code>(string1   string2   string3)</code>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<code>rsvp { # Required for dynamic MPLS only</code>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<code>community name members [ community-ids ]</code>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	<code>[edit]</code> <code>routing-options {</code> <code>  static {</code> <code>    route default {</code> <code>      nexthop address;</code> <code>      retain;</code> <code>    }</code> <code>  }</code> <code>}</code>
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
<b>GUI Conventions</b>		
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>

Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page of the Juniper Networks TechLibrary site at <https://www.juniper.net/documentation/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <https://www.juniper.net/documentation/feedback/>.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>

- Download the latest versions of software and review release notes:  
<https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:  
<https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:  
<https://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <https://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <https://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://www.juniper.net/support/requesting-support.html>.

## PART 1

# Integrated User Firewall

- [Understanding Integrated User Firewall on page 3](#)
- [Managing Event Logs on page 21](#)
- [Logging User Identity Information Based on Zones on page 27](#)
- [Configuring Integrated User Firewall Device Identity Authentication for Access Control on page 33](#)
- [Configuring Advanced Query for Active Directory and ClearPass Authentication Sources on page 55](#)



## CHAPTER 1

# Understanding Integrated User Firewall

- [Integrated User Firewall on NFX Devices on page 3](#)
- [Active Directory Authentication Tables on page 6](#)
- [LDAP Functionality in Integrated User Firewall on NFX Devices on page 15](#)
- [Configuring Integrated User Firewall on NFX Devices on page 17](#)

## Integrated User Firewall on NFX Devices

---

- [Integrated User Firewall and Authentication Sources on page 3](#)
- [Benefits of Integrated User Firewall on page 4](#)
- [How the Integrated User Firewall Works on page 4](#)
- [Deployment Scenario for User Firewall Integration with Windows Active Directory on page 5](#)
- [Limitations on page 6](#)

## Integrated User Firewall and Authentication Sources

Many customers want simple user firewall functionality without full Network Access Control (NAC), and do not want the additional cost or complexity of user role firewall (which has Active Directory dependencies such as Kerberos, SPNEGO on Browsers, Active Directory DNS/Certs, and UAC configuration).

The integrated user firewall fulfills the requirement for simplicity. It retrieves user-to-IP address mappings from the Windows Active Directory for the firewall policies usage as match criteria. This feature consists of the device polling the event log of the Active Directory controller to determine, by username and source IP address, who has logged in to the device. Then the username and group information are queried from the LDAP service in the Active Directory controller. Once the device has the IP address, username, and group relationship information, it generates authentication entries. With the authentication entries, the device user firewall module enforces user-based and group-based policy control over traffic.

[Table 3 on page 3](#) lists the features of the integrated user firewall.

**Table 3: Integrated User Firewall Features**

---

### Integrated User Firewall

---

*Table 3: Integrated User Firewall Features (continued)*

Authentication	Passive authentication—Does not interact with client directly; polls the Active Directory for login information.
Extent of Authentication	Best effort.
Where Enforced	Enforced at firewall.
Ideal Environments	<ul style="list-style-type: none"> <li>• Needs visibility into who is accessing the device</li> <li>• Small-to-medium business</li> </ul>

## Benefits of Integrated User Firewall

The integrated user firewall feature introduces an authentication source via integration with Microsoft Active Directory technology.

- Provides visibility into who is accessing the device and best-effort security for access to the device.
- A single-box solution.
- Does not require the configuration of a captive portal, although that option is available to enforce on users who do not authenticate.
- Ideal for small-to-medium businesses and low-scale deployments.

## How the Integrated User Firewall Works

At a high level, this feature involves the UserID process in the device Routing Engine, which reads the Windows event log from the Active Directory controller and abstracts IP address-to-user mapping information. The process correlates users to the groups to which they belong, via the LDAP protocol with the LDAP service in the Active Directory controller. Thus, the process has gathered enough information to generate authentication entries. The network administrator then references the authentication entries in user firewall security policies to control traffic.

You can assign IPv6 or IPv4 addresses to Active Directory domain controllers and the LDAP server.

A more detailed explanation of how this feature works is as follows:

1. The device reads the Active Directory event log to get source IP address-to-username mapping information. To do so, a process in the device Routing Engine implements a Windows Management Instrumentation (WMI) client with Microsoft Distributed COM/Microsoft RPC stacks and an authentication mechanism to communicate with a Windows Active Directory controller in an Active Directory domain. Using event log information retrieved from the Active Directory controller, the process knows the IP addresses of active Active Directory users and abstracts IP-to-Active Directory username mapping information. The process monitors Active Directory event log changes via the same WMI DCOM interface to adjust local mapping information to



reflect any change in the Active Directory server. The WMI client can read the Active Directory event log to obtain IPv6 addresses, in addition to IPv4 addresses.


2. The process uses LDAP to query the LDAP service interface of the Active Directory to identify the groups to which users belong. Having the IP address, the Active Directory user, and the groups, the process can generate authentication entries accordingly.
3. The process pushes the authentication entries to the Packet Forwarding Engine authentication table. The Packet Forwarding Engine uses the entries and user policy to apply user firewall access control to traffic.

This feature supports two domains and up to 5 Active Directory controllers in a domain.

### Deployment Scenario for User Firewall Integration with Windows Active Directory

Figure 1 on page 5 illustrates a typical scenario where the integrated user firewall feature is deployed. Users in the Active Directory domain and users outside the Active Directory domain want access to the Internet through the device. The domain controller might also act as the LDAP server.

*Figure 1: Scenario for Integrated User Firewall*

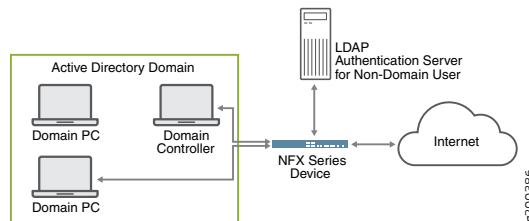

The device reads and analyzes the event log of the domain controller and generates an authentication table as an Active Directory authentication source for this feature. The user firewall is aware of any domain user on an Active Directory domain device via the Active Directory authentication source. The device administrator configures a user firewall policy that enforces the desired user-based or group-based access control.

If the IP address or user information is not available from the event log, the user can again log in to the Windows PC to generate an event log entry. Then the system generates the user's authentication entry accordingly.

The device can search the Active Directory authentication table and the local authentication table, for information based on IPv4 or IPv6 addresses.

Consider the following scenario and security policy configuration in light of support for IPv6 addresses. When traffic arrives at the device from a user whose IP address (source-address) is 2001:db8::1:1, given a source-identity match—that is, as illustrated in this example, the user belongs to the role2 group—the device UserFW module is able to authenticate the user, and it sets up a session for the user's traffic flow.

```
user@host set security policies from-zone trust to-zone untrust policy p1 match
source-address any
user@host set security policies from-zone trust to-zone untrust policy p1 match
destination-address any
user@host set security policies from-zone trust to-zone untrust policy p1 match application
any
user@host set security policies from-zone trust to-zone untrust policy p1 match
source-identity role2
user@host set security policies from-zone trust to-zone untrust policy p1 then permit
```

## Limitations

- Windows Active Directory controllers earlier than Windows 2003 are not supported.
- Tracking the status of non-Windows Active Directory users is not supported.
- Logical systems are not supported.
- The WMIC does not support multiple users logged on to the same PC.
- Domain controllers and domain PCs must be running Windows OS. The minimum support for a Windows client is Windows XP. The minimum support for a server is Windows Server 2003.
- You cannot use the Primary Group, whether by its default name of Domain Users, or any other name (if you happened to have changed it), in integrated user firewall configurations.

When a new user is created in Active Directory, the user is added to the global security group Primary Group which is by default called Domain Users. The Primary Group is less specific than other groups created in Active Directory because all users belong to it. Consequently, it can become very large.

### Related Documentation

- [Configuring Integrated User Firewall on NFX Devices on page 17](#)

---

## Active Directory Authentication Tables

- [Active Directory Authentication as an Authentication Source on page 6](#)
- [Active Directory Authentication Tables on page 7](#)
- [State Information for Active Directory Authentication Table Entries on page 9](#)
- [Active Directory Authentication Table Management on page 9](#)
- [Timeout Interval for Table Entries on page 11](#)
- [Timeout Setting for Invalid Authentication Entries on page 12](#)

## Active Directory Authentication as an Authentication Source

User information tables serve as the authentication source for information required by firewall security policies. The device supports local and Active Directory authentication.

The integrated user firewall feature gathers user and group information for Active Directory authentication by reading domain controller event logs, probing domain PCs, and querying Lightweight Directory Access Protocol (LDAP) services within the configured Windows domain. Up to two Windows domains are supported.

From the user and group information, the integrated user firewall feature generates an Active Directory authentication table on the Routing Engine of the device, which then pushes the authentication table to the Packet Forwarding Engine. Security policies use the information in the table to authenticate users and to provide access control for traffic through the firewall.

## Active Directory Authentication Tables

The Active Directory authentication table contains the IP address, username, and group mapping information that serves as the authentication source for the integrated user firewall feature. Information in the table is obtained by reading Windows Active Directory domain controller event logs, probing domain PCs, and querying LDAP services within a specified Windows domain.

Reading domain controller event logs generates a list of IP address-to-user mapping information that is used to create entries in the Active Directory authentication table. Once entries have been added in the table, a query is sent to the LDAP server for user-to-group mapping information.

In addition to IPv4, IPv6 traffic can match any security policy configured for source identity.

When user traffic arrives at the device, the Active Directory authentication table is searched for an entry corresponding to the source IP address of the traffic to authenticate the user. The device can also search for an entry in the local authentication table, if an entry is not found in the Active Directory authentication table.

The device supports use of IPv6 and IPv4 addresses associated with source identities in security policies. If an entry exists, policies matching that entry are applied to the traffic and access is allowed or denied.

The LDAP server returns all group information; this includes not only information about the groups you directly belong to, but also all the parent (and parent of the parent and so on) groups that you belong to. Group information returned from the LDAP server is compared with the source identity in security policies. If there is a match, Active Directory authentication table entries are updated to include only the group information provided in the security policy. In this way, only relevant group information is listed in the authentication table. Whenever source identity is updated, the authentication table is also updated to reflect the up-to-date relevant group information for all listed users.



**NOTE:** The integrated user firewall feature for both Active Directory authentication and ClearPass authentication will manage up to 2048 sessions for each user for whom there is a user identity and authentication entry in the authentication table. There might be additional sessions associated with a user beyond the 2048 supported sessions, but they are not managed by integrated user firewall. When an authentication entry in an authentication table is deleted, integrated user firewall only closes sessions that are associated with that entry. It will not close sessions that it does not manage. That is, sessions that are not associated with the authentication entry are not closed.

Table 4 on page 8 lists Active Directory authentication table support for NFX devices. Platform support depends on the Junos OS release in your installation.

**Table 4: Active Directory Authentication Table Support for NFX Series Devices**

Device	Active Directory Authentication Table Entries	Domains	Active Directory Controllers
NFX150	500	1	5

Once the maximum number of authentication table entries is reached, no additional entries are created.

To be compliant with the Active Directory authentication table, entries must adhere to the following parameters:

- Usernames are limited to 64 characters.
- Group names are limited to 64 characters.
- Each entry can be associated with up to 200 relevant groups (configured in the source identity field). For example, if you belong to 1000 groups in LDAP and out of these, no more than 200 groups are configured in the source identity field, you are compliant with the Active Directory authentication table.

The Active Directory authentication table must be enabled as the authentication source for integrated user firewall information retrieval in the Windows Active Directory environment. Use the following statement for that purpose:

```
user@host# set security user-identification authentication source
active-directory-authentication-table priority priority
```



**NOTE:** The priority option specifies the sequence in which user information tables are checked. Using the lowest setting for the Active Directory authentication source specifies the highest priority, meaning that the Active Directory authentication source is searched first.

## State Information for Active Directory Authentication Table Entries

Active Directory authentication table entries can be in one of four states:

**Initial**—Specifies that IP address-to-user mapping information was obtained by reading domain controller event logs and an entry was added to the authentication table. Entries in this state are changed to valid when the table is pushed from the Routing Engine to the Packet Forwarding Engine.

**Valid**—Specifies that a valid entry was obtained by reading domain controller event logs or that a valid response was received from a domain PC probe and the user is a valid domain user.

**Invalid**—Specifies that an invalid response was received from a domain PC probe and the user is an invalid domain user.

**Pending**—Specifies that a probe event generated an entry in the authentication table, but no probe response has been received from the domain PC. If a probe response is not received within 90 seconds, the entry is deleted from the table.

For a list of probe responses, see *Understanding Integrated User Firewall Domain PC Probing*.

To display Active Directory authentication entries, along with their state information, use the following command:

```
user@host>show services user-identification active-directory-access
active-directory-authentication-table all
```

Domain: www.example1.net

Total count: 3

Source IP	Username	Groups	State
2001:db8::1:1	u2	r1, r3, r4	initial
192.168.10.3	u3	r5, r6, r4	pending
2001:db8::2:1	u4	r3, r4	initial

Domain: www.example2.net

Total count: 2

Source IP	Username	Groups	State
10.1.1.2	u4	r1, r3, r4	valid
10.1.1.3	u5	r5, r6, r4	invalid

Command options allow you to display information by **user** or **group**, and to define additional output levels—**brief**, **domain**, **extensive**, **node**.

## Active Directory Authentication Table Management

Windows domain environments are constantly changing as users log in and out of the network and as network administrators modify user group information. The integrated user firewall feature manages changes in the Windows domain by periodically reading domain controller event logs and querying the LDAP server for user-to-group mapping information. That information is used in updating the Active Directory authentication table as appropriate.

Additionally, a probe function is provided to address changes that occur between reading event logs, or to address the case where event log information is lost. An on-demand probe is triggered when client traffic arrives at the firewall but a source IP address for that client cannot be found in the table. And at any point, manual probing is available to probe a specific IP address

Changes to the Active Directory Authentication table also occur due to source identity changes in the security policy configuration.

[Table 5 on page 10](#) describes events that trigger an Active Directory authentication table update.

**Table 5: Events Triggering Active Directory Authentication Table Updates**

Event	Active Directory Authentication Table Update
A domain controller event log is read at configured intervals.	<p>New IP address-to-user entries are added in the authentication table in initial state. Group information is retrieved from the LDAP server.</p> <p>When the authentication entry is pushed to Packet Forwarding Engine, the state is changed to valid.</p>
An on-demand or manual probe is sent to a domain PC.	An entry is added in the authentication table in pending state. If a probe response is not returned within 90 seconds, the state of the entry is deleted.
An on-demand or manual probe response is received from a domain PC.	Based on the response, entries in pending state are changed to valid or invalid. For valid responses, the group information is retrieved from the LDAP server. For invalid responses, the entry is marked as invalid.
An LDAP server query identifies new user-to-group mapping information.	Entries are updated with the group information.
An LDAP server query identifies deleted user information.	Entries associated with that user are deleted from the table.
An LDAP server query identifies deleted group information.	<p>The affected group information is updated.</p> <p>For example, user2 belongs to group2, and group2 belongs to group1. And, group1 is listed as a source-identity for group2. For any authentication entry of user2, group1 is listed in its relevant groups. However, if group2 is removed from the LDAP server, user2 loses the connection with group1, and as a result, group1 is removed from the user2 authentication table.</p>
An LDAP server query identifies added group information.	If the group is referenced in a security policy, entries associated with this group are updated to add the group information.
The source identity information is removed from a security policy configuration.	Entries associated with the source identity are deleted from Active Directory authentication table.



**NOTE:** If an entry is deleted from the table, any sessions attached to that entry are also deleted. If an entry in the table is updated to add or remove group information, there is no impact to existing sessions for that entry.



**NOTE:** When you use the CLI to delete an Active Directory authentication entry, the system closes the related session and writes a session-close message to the log file. However, the session-close message does not contain the source identity information for the user, that is, the user and user group information.

To manually delete an entry from the table, use the **request services user-identification active-directory-access active-directory-authentication-table** command. Options exist for deleting a specific IP address, domain, group, or user.

To clear the contents of the Active Directory authentication table, use the **clear services user-identification active-directory access active-directory-authentication-table** command.

## Timeout Interval for Table Entries

When a user is no longer active, a timer is started for that user's entry in the Active Directory authentication table. When time is up, the user's entry is removed from the table. Entries in the table remain active as long as there are sessions associated with the entry.

To set the timeout value, use the following statement:

```
user@host# set services user-identification active-directory-access
authentication-entry-timeout minutes
```

The default **authentication-entry-timeout** interval is 30 minutes. To disable timeouts, set the interval to 0.



**NOTE:** We recommend that you disable timeouts when disabling on-demand probing in order to prevent someone from accessing the Internet without logging in again.

To view timeout information for Active Directory authentication table entries, use the following command:

```
user@host>show services user-identification active-directory-access
active-directory-authentication-table all extensive
```

```
Domain: www.example1.net
Total entries: 2
Source IP: 192.168.1.2
Username: u2
Groups: r1, r3, r4
State: initial
Access start date: 2014-03-22
Access start time: 10:56:58
```

```
Age time: 20 min

Source IP: 192.168.1.3
Username: u3
Groups: r5, r6, r4
State: pending
Access start date: 2014-03-22
Access start time: 10:46:58
Age time: 10 min
```

This example shows that the timer has started for two entries—the entry for user u2 will time out in 20 minutes, while the entry for user u3 will time out in 10 minutes. When session traffic is associated with an entry, the age time value changes to “infinite.”

## Timeout Setting for Invalid Authentication Entries

You can protect invalid user authentication entries in an authentication table from expiring before the user can be validated by configuring a timeout setting that is specific to invalid entries. The invalid authentication entry timeout setting is separate from the common authentication entry timeout setting that is applied to valid entries.

Authentication entries in both the Windows Active Directory authentication table and the NFX Series ClearPass authentication table contain a timeout value after which the entry expires. The invalid entry could expire before the user's identity could be validated. Here is what could cause that event to occur in each case:

- Windows Active Directory uses a mechanism to probe an unauthenticated user's device for user identity authentication information based on the IP address of the device. It is not uncommon for Windows to trigger a WMI probe that fails because it occurs before the user logs in. After an unsuccessful probe, the system generates an entry in the authentication table with an INVALID state for the IP address of the device. If you configured a value for the invalid timeout setting, that timeout is applied to the entry. If you did not configure a value for the invalid entry timeout setting, then its default timeout of 30 minutes is applied.

The invalid authentication entry timeout setting is separate from the common authentication entry timeout setting that is applied to valid entries.

- For the NFX Series ClearPass feature, if an unauthenticated user attempts to join the network and the IP address of the user's device is not found—that is, it is not in the Packet Forwarding Engine—the NFX Series device queries Aruba ClearPass for the user's information. If the query is unsuccessful, the system generates an INVALID authentication entry for the user. If you configured a value for the invalid timeout setting, that timeout is applied to the entry. If you did not configure the invalid entry timeout, then its default timeout of 30 minutes is applied to the new entry.



**NOTE:** The invalid entry timeout is also applied to entries whose state is changed from valid or pending to INVALID.

---

You configure the timeout setting to be applied to invalid authentication entries in the Windows Active Directory authentication table and the NFX Series ClearPass



authentication table separately. If you do not configure a timeout setting, the invalid authentication entry timeout default value of 30 minutes is applied. The application and effect of the timeout value is determined differently for these authentication sources.

### How the Invalid Authentication Entry Timeout Works for Windows Active Directory

Use the following command to configure the invalid authentication entry timeout setting for entries in the Windows Active Directory authentication table. In this example, the invalid authentication entry timeout value is set to 40 minutes. That timeout value is applied to new invalid entries.

```
user@host# set services user-identification active-directory-access
invalid-authentication-entry-timeout 40
```

The timeout value is also applied to existing invalid entries but within the context of the current timeout value assigned to them and the timeout state. Suppose that the authentication table contains existing invalid entries to which an invalid authentication entry timeout setting or the default was previously applied. In this case, the new invalid entry timeout setting has effect on the timeout for these entries, but in a different way. For these entries, the original timeout setting—the time that has expired since the original timeout value was applied—and the new timeout setting collude to produce the resulting timeout value that is applied to the existing entry.

As [Table 6 on page 13](#) shows, in some cases the resulting timeout is extended, in some cases it is shortened, and in some cases it causes the original timeout to expire and the invalid authentication entry to which it applies to be deleted.

**Table 6: How New Invalid Authentication Entry Timeout Settings Affect Timeout Settings for Existing Invalid Entries in the Active Directory Authentication Table**

Original Invalid Entry Timeout Setting for Existing Entry	Elastice Time	New Invalid Entry Timeout Configuration Setting	Resulting Timeout Setting for Existing Invalid Entry
20 minutes	5 minutes	50 minutes	45 minutes
50 minutes	10 minutes	20 minutes	10 minutes
50 minutes	40 minutes	20 minutes	Timeout expired and entry is removed from the authentication table
40 minutes	20 minutes	0	0



**NOTE:** Just as the new invalid timeout entry is imposed on that of old invalid entries, producing various and unique results, a new invalid entry is subject to the same rules and effects when the invalid entry timeout value is changed.

### How the Invalid Authentication Entry Timeout Works for NFX Series Aruba ClearPass

Use the following command to configure the invalid authentication entry timeout for entries in the NFX Series ClearPass authentication table. In this example, invalid authentication entries in the NFX Series ClearPass authentication table will expire 22 minutes after they are created.

```
user@host# set services user-identification authentication-source aruba-clearpass
invalid-authentication-entry-timeout 22
```

- When you initially configure the invalid authentication entry timeout value for ClearPass, it is applied to any invalid authentication entries that are generated *after* it was configured. However, all existing invalid authentication entries retain the default timeout of 30 minutes.
- If you do not configure the invalid authentication entry timeout setting, the default timeout of 30 minutes is applied to all invalid authentication entries.

If you configure the invalid authentication entry timeout setting and delete it later, the default value is applied to new invalid authentication entries generated after the deletion. However, any existing invalid authentication entries to which a configured value had been applied previously retain that value.

- If you change the setting for the invalid authentication entry timeout value, the new value is applied to all invalid authentication entries that were created *after* the value was changed. However, all existing invalid authentication entries retain the former invalid authentication entry timeout setting applied to them. Those entries to which the default value of 30 minutes had been applied previously retain that setting.
- When the pending or valid state of an entry is changed to invalid, the invalid authentication entry timeout setting is applied to it.

When the state of an invalid authentication entry is changed to pending or valid, the invalid authentication entry timeout setting is no longer applicable to it. The timeout value set for the common authentication entry timeout is applied to it.

[Table 7 on page 14](#) shows how a new invalid entry timeout value affects new and existing invalid entries.

**Table 7: How New Invalid Authentication Entry Timeout Settings Affect Timeout Settings for Invalid Entries in the ClearPass Authentication Table**

Invalid Entry Timeout Setting	Initial Invalid Entry Timeout Setting	Elastice Time	New Invalid Entry Timeout Configuration Setting	Final Timeout Setting for Existing Invalid Entry
New invalid authentication entry			50	50
Existing invalid entry timeout	20	5	50	15
Existing invalid entry timeout	0	40	20	0
Existing invalid entry timeout	40	20	0	20

**Related  
Documentation**

- [Configuring Integrated User Firewall on NFX Devices on page 17](#)

---

## LDAP Functionality in Integrated User Firewall on NFX Devices

---

- [Role of LDAP in Integrated User Firewall on page 15](#)
- [LDAP Server's Username, Password, and Server Address on page 15](#)
- [Caching and Calculation of User-to-Group Mappings on page 16](#)
- [Updating Group Information in the Authentication Entry Table on page 16](#)
- [Active Directory Autodiscovery on page 16](#)

### Role of LDAP in Integrated User Firewall

In order to get the user and group information necessary to implement the Integrated User Firewall feature, the NFX Series device uses the Lightweight Directory Access Protocol (LDAP). The device acts as an LDAP client communicating with an LDAP server. In a common implementation scenario of the integrated user firewall feature, the domain controller acts as the LDAP server. The LDAP module, by default, queries the Active Directory in the domain controller.

The device downloads user and group lists from the LDAP server. The device also queries the LDAP server for user and group updates. The device downloads a first-level, user-to-group mapping relationship and then calculates a full user-to-group mapping.

Most of the LDAP server configuration is optional, leveraging the common implementation scenario where the domain controller acts as the LDAP server. The device periodically (every two minutes) queries the LDAP server to obtain the user and group information that has changed since the last query.

By default, the LDAP authentication method uses simple authentication. The client's username and password are sent to the LDAP server in plaintext. Note that the password is clear and can be read from the network.

To avoid exposing the password, you can use simple authentication within an encrypted channel [namely Secure Sockets layer (SSL)], as long as the LDAP server supports LDAP over SSL (LDAPS). After enabling SSL, the data sent from the LDAP server to the device is encrypted. To enable SSL, see the **user-group-mapping** statement.

### LDAP Server's Username, Password, and Server Address

The LDAP server's username, password, IP address, and port are all optional, but they can be configured.

- If the username and password are not configured, the system uses the configured domain controller's username and password.
- If the LDAP server's IP address is not configured, the system uses the address of one of the configured Active Directory domain controllers.
- If the port is not configured, the system uses port 389 for plaintext or port 636 for encrypted text.

## Caching and Calculation of User-to-Group Mappings

The device caches user-to-group mappings in its local database when the **show services user-identification active-directory-access user-group-mapping** operation is performed. This command displays the users who belong to a group or the groups to which a user belongs.

Three events cause a user-to-group mapping to be removed from the cache:

- A source-identity is removed from a referenced firewall policy (because only source-identities referenced in a policy are stored in the authentication table).
- The LDAP configuration is deleted from the customer's configuration, so all cached Active Directory user-to-group mappings for the domain are removed.
- The user-to-group mapping is deleted from the LDAP server.

The device periodically queries to get user and group information from the LDAP server in real time. The user list and the group list show only cached users or groups, not all users or groups in the LDAP server. From this information, the device calculates one-level mapping relationships. The user list, group list, and mapping are cached in the local database.

## Updating Group Information in the Authentication Entry Table

The device queries to get the changed users and groups based on the prior query results from the LDAP server. The device updates the local database and triggers an authentication entry update. Only user/group mappings that are already cached are updated. Other users and groups that are not in the database do not have their mapping relationships cached.

You can verify the LDAP connection status by issuing the **show services user-identification active-directory-access user-group-mapping status** command.

You can see counts of queries made to the LDAP server by issuing the **show services user-identification active-directory-access statistics user-group-mapping** command.

## Active Directory Autodiscovery

The integrated user firewall feature provides the IP address and Active Directory name of the domain. The auto-discovery feature can use the Active Directory's global catalog feature and then query DNS for a list of global catalogs. The global catalogs in the list are typically provided in a weighted order based on criteria such as network location, system-set weights based on global catalog server size, and so on. Once the customer has the list of Active Directories, the customer can configure it for both event log reading and LDAP search.

### Related Documentation

- [Understanding the Device Identity Attributes and Profiles for the Integrated User Firewall Device Identity Authentication Feature on page 33](#)

## Configuring Integrated User Firewall on NFX Devices

In a typical scenario for the integrated user firewall feature, domain users want to access the Internet through an NFX device. The device reads and analyzes the event log of the domain controllers configured in the domain. Thus, the device detects domain users on an Active Directory domain controller. Active Directory domain generates an authentication table as the Active Directory authentication source for the integrated user firewall. The device uses this information to enforce the policy to achieve user-based or group-based access control.



**NOTE:** When a new user is created in Active Directory (AD), the user is added to the global security group Primary Group which is by default Domain Users. The Primary Group is less specific than other groups created in AD because all users belong to it. Also, it can become very large.

You cannot use the Primary Group, whether by its default name of Domain Users or any other name, if you changed it, in integrated user firewall configurations.

To establish a Windows Active Directory domain and to configure another security policy:

1. Configure the LDAP base distinguished name.

```
[edit services user-identification]
user@host# set active-directory-access domain example.com user-group-mapping
ldap base DC=example,DC=com
```

2. Configure a domain name, the username and password of the domain, and the name and IP address of the domain controller in the domain.

```
[edit services user-identification]
user@host# set active-directory-access domain example.com user administrator
password $ABC123
user@host# set active-directory-access domain example.net domain-controller ad1
address 2001:db8:0:1:2a0:a502:0:1da
```

3. Configure a second policy to enable a specific user.

```
[edit security policies from-zone trust to-zone untrust policy p2]
user@host# set match source-address any
user@host# set match destination-address any
user@host# set match application any
user@host# set match source-identity ""example.com\user1""
user@host# set then permit
```



**NOTE:** When you specify a source identity in a policies statement, prepend the domain name and a backslash to the group name or username. Enclose the combination in quotation marks.

4. Set the Active Directory authentication table as the authentication source for integrated user firewall information retrieval and specify the sequence in which user information tables are checked.

[edit security]

```
user@host# set user-identification authentication-source  
active-directory-authentication-table priority 125
```

---



**NOTE:** You must set the Active Directory authentication table as the authentication source for integrated user firewall information retrieval and specify the sequence in which user information tables are checked using the command `set security user-identification authentication-source active-directory-authentication-table priority value`.

The default value of this option is 125. The default priority for all the authentication sources is as follows:

- Local authentication: 100
- Integrated user firewall: 125
- User role firewall: 150

The field `priority` specifies the sources for the Active Directory authentication table. The value set determines the sequence for searching among various supported authentication tables to retrieve a user role. Note that these are the only currently supported values. You can enter any value from 0 through 65,535. The default priority of the Active Directory authentication table is 125. This means that even if you do not specify a priority value, the Active Directory authentication table will be searched starting at sequence of value 125 (integrated user firewall).

For more details, see [“Active Directory Authentication Tables” on page 6](#) and [active-directory-authentication-table](#).

---

To verify that the configuration is working properly:

1. Verify that at least one domain controller is configured and connected by entering the `show services user-identification active-directory-access domain-controller status` command.
2. Verify that the LDAP server is providing user-to-group mapping information by entering the `show services user-identification active-directory-access user-group-mapping status` command..
3. Verify the authentication table entries by entering the `show services user-identification active-directory-access active-directory-authentication-table all` command. The IP addresses, usernames, and groups are displayed for each domain.
4. Verifying IP-to-user mapping by entering the `show services user-identification active-directory-access statistics ip-user-mapping` command. The counts of the queries and failed queries are displayed.

5. Verify that IP probes are occurring by entering the **show services user-identification active-directory-access statistics ip-user-probe** command.
6. Verify that user-to-group mappings are being queried by entering the **show services user-identification active-directory-access statistics user-group-mapping** command.

**Related  
Documentation**

- [Understanding Integrated User Firewall Domain PC Probing on page 22](#)





## CHAPTER 2

# Managing Event Logs

- [Understanding the Windows Management Instrumentation Client on page 21](#)
- [Understanding Integrated User Firewall Domain PC Probing on page 22](#)

## Understanding the Windows Management Instrumentation Client

---

- [Windows Management Instrumentation Client on page 21](#)
- [Specifying IP Filters to Limit IP-to-User Mapping on page 22](#)
- [Event Log Verification and Statistics on page 22](#)

## Windows Management Instrumentation Client

When you configure the integrated user firewall feature on an NFX Series device, the device establishes a Windows Management Instrumentation (WMI)/Distributed Component Object Module (DCOM) connection to the domain controller. The device acts as a WMI client (WMIC), and reads and monitors the security event log on the domain controller. The device analyzes the event messages to generate IP address-to-user mapping information.

All configuration regarding the WMIC is optional; it will function with default values. After the domain is configured (by using the **set services user-identification active-directory-access domain** statement), the WMIC starts to work. The WMIC connection to the domain controller uses the same user credentials as those configured for the domain.



**CAUTION:** Integrated user firewall uses NTLMv2 as the default WMIC authentication protocol for security reasons. NTLMv1 exposes the system to attacks in which authentication hashes could be extracted from NTLMv1 authentication responses.

For compatibility with integrated user firewall, you must apply the latest version of the Microsoft SP2 patch if you are running an older version of Windows OS, including Windows 2000, Windows XP, and Windows 2003.

When the WMIC reads the event log on the domain controller, the NFX Series device:

- Monitors the event log at a configurable interval, which defaults to 10 seconds.

- Reads the event log for a certain timespan, which you can configure. The default timespan is one hour. Each time at WMIC startup, the device checks the last timestamp and the timespan. If the last timestamp is older than the current timespan, then the timespan takes effect. After the WMIC and the UserID process start working, the timespan does not apply; the device simply reads the latest event log.

The device can read the event log to obtain IPv6 addresses in addition to IPv4 addresses.

During WMIC startup, the device has a maximum count of events it will read from the event log, and that maximum is not configurable.

During WMIC startup, this maximum count is used with the timespan setting, so that if either limit is reached, the WMIC stops reading the event log.

## Specifying IP Filters to Limit IP-to-User Mapping

You can specify IP filters to limit the IP address-to-user mapping information that the NFX Series device generates from the event log.

To understand when a filter is useful for such mapping, consider the following scenario. A customer deploys 10 devices in one domain, and each device controls a branch. All 10 devices read all 10 branch user login event logs in the domain controller. However, the device is configured to detect only whether the user is authenticated on the branch it controls. By configuring an IP filter on the device, the device reads only the IP event log under its control.

You can configure a filter to include or exclude IP addresses or prefixes. You can specify a maximum of 20 addresses for each filter.

## Event Log Verification and Statistics

You can verify that the authentication table is getting IP address and user information by issuing the **show services user-identification active-directory-access active-directory-authentication-table all** command. A list of IP address-to-user mappings is displayed for each domain. The table contains no group information until LDAP is running.

You can see statistics about reading the event log by issuing the **show services user-identification active-directory-access ip-user-mapping statistics domain** command.

## Understanding Integrated User Firewall Domain PC Probing

---

- [Overview of Domain PC Probing on page 23](#)
- [Probing Domain PCs for User Information on page 23](#)
- [Probe Response on page 24](#)
- [Probe Configuration on page 24](#)
- [Probe Rate and Statistics on page 25](#)

## Overview of Domain PC Probing

At a high level, the integrated user firewall feature gathers IP address, user, and group information from Windows Active Directory domain controller event logs and LDAP services. This information is used to generate Active Directory authentication table entries on an NFX Series device. Authentication entries serve as the authentication source for security policies that enforce user-based or group-based access control.

PC probing acts as a supplement of event log reading. When a user logs in to the domain, the event log contains that information. The PC probe is triggered only when there is no IP-to-address mapping from the event log.

Domain information constantly changes as users log in and out of domain PCs. The integrated user firewall probe functionality provides a mechanism for tracking and verifying information in the authentication tables by directly probing domain PCs for IP address-to-user mapping information. New and changed information identified by the probe serves to update Active Directory authentication table entries, which is critical to maintaining firewall integrity.

The IP address filter also impacts the PC probe. Once you configure the IP address filter, only the IP address specified in the filter is probed.

## Probing Domain PCs for User Information

The integrated user firewall feature tracks the online status of users by probing domain PCs. If a user is not online or is not an expected user, the Active Directory authentication table is updated as appropriate. The following probe behaviors apply:

**On-demand probing**—On-demand probing occurs when a packet is dropped due to a missing entry in the Active Directory authentication table. In this case, an entry is added in pending state to the authentication table, and the domain PC identified by the source IP field of the dropped packet is probed for IP address and user information. The entry remains in pending state until a response is received from the probe.

**Manual probing**—Manual probing is used to verify and troubleshoot the online status of a user or a range of users, and is at the discretion of the system administrator. To initiate a manual probe, use the **request services user-identification active-directory-access ip-user-probe address ip-address address domain domain-name** command. If a domain name is not specified, the probe looks at the first configured domain for the IP address. To specify a range, use the appropriate network address.



**NOTE:** Manual probing can cause entries to be removed from the Active Directory authentication table. For example, if there is no response from your PC due to a network issue, such as when the PC is too busy, the IP address entry of the PC is marked as *invalid* and your access is blocked.

If the device cannot access a domain PC for some reason, such as a network configuration or Windows firewall issue, the probe fails.

## Probe Response

Based on the domain PC probe response, updates are made to the Active Directory authentication table, and associated firewall policies take effect. If no response is received from the probe after 90 seconds, the authentication entry times out. The timed-out authentication entry is the pending state authentication entry, which is generated when you start the PC probe.

If the probe is successful, the state of the authentication entry is updated from pending to valid. If the probe is unsuccessful, the state of the authentication entry is marked as invalid. The invalid entry has the same lifetime as a valid entry and is overwritten by upcoming fwauth (firewall authentication process) authentication results or by the event log. [Table 8 on page 24](#) lists probe responses and corresponding authentication table actions.

**Table 8: Probe Responses and Associated Active Directory Authentication Table Actions**

Probe Response from Domain PC	Active Directory Authentication Table Action
Valid IP address and username	Add IP-related entry.
Logged on user changed	Update IP-related entry.
Connection timeout	Update IP-related entry as invalid.
Access denied	Update IP-related entry as invalid.
Connection refused	Update IP-related entry as invalid.
Authentication failed (The configured username and password have no privilege to probe the domain PC.)	Update IP-related entry as invalid.

## Probe Configuration

On-demand probing is enabled by default. To disable on-demand probing, use the **set services user-identification active-directory-access no-on-demand-probe** statement. Delete this statement to reenabling probing. When on-demand probing is disabled, manual probing is available.

The probe timeout value is configurable. The default timeout is 10 seconds. To configure the timeout value, use the following statement:

```
user@host# set services user-identification active-directory-access wmi-timeout seconds
```

If no response is received from the domain PC within the **wmi-timeout** interval, the probe fails and the system either creates an invalid authentication entry or updates the existing authentication entry as invalid. If an authentication table entry already exists for the probed IP address, and no response is received from the domain PC within the **wmi-timeout** interval, the probe fails and that entry is deleted from the table.



**NOTE:** To probe domain PCs, you must configure the integrated user firewall feature with the username and password credentials. You do not necessarily need a username and password account for each PC; instead you could set up one administrator account with privileges to access information on multiple PCs.

## Probe Rate and Statistics

The maximum probe rate for the integrated user firewall feature is set by default and cannot be changed. Probe functionality supports 5000 users, or up to 10 percent of the total supported authentication entries, whichever is smaller. Supporting 10 percent means that at any time, the number of IP addresses waiting to be probed cannot exceed 10 percent. For more information about the number of supported Active Directory authentication table entries, see [“Active Directory Authentication Tables” on page 6](#).

High-level statistics covering probe activity are available for the total number of probes and the number of failed probes. [Table 8 on page 24](#) describes the reasons for probe failures. To display probe statistics, use the **show services user-identification active-directory-access statistics ip-user-probe** command.

```
user@host> show services user-identification active-directory-access statistics ip-user-probe
Domain: www.example1.net
    Total user probe number           : 176116
    Failed user probe number          : 916

Domain: www.example2.net
    Total user probe number           : 17632
    Failed user probe number          : 342
```



## CHAPTER 3

# Logging User Identity Information Based on Zones

- [Logging User Identity Information Based on Zones on page 27](#)

## Logging User Identity Information Based on Zones

---

This topic covers the integrated user firewall feature that allows you to configure the system to write to the session log the user's identity by user name or group name without having to use the source identity (source-identity) tuple in the security policy. Knowing the user's identity by name, as written to the log, not just by the IP address of the user's device, gives you clearer visibility into their activity and allows you to resolve security problems faster and more easily. Relying on the source zone (from-zone) to trigger user identity logging rather than on the source identity widens the scope of users whose source identity is logged.

- [Understanding How to Include User Identity Information in the Session Log File Based on the Source Zone on page 27](#)
- [Configuring Integrated User Firewall to Write User Identity to the Session Log Based On the Source Zone on page 29](#)
- [Verifying that the User Identity Information Was Logged on page 30](#)

## Understanding How to Include User Identity Information in the Session Log File Based on the Source Zone

Typically, for each security policy, you must specify in the policy the source and destination IP addresses and the zones against which traffic is matched. You must also specify an application that the traffic is matched to. If traffic matches these criteria, then the security policy's action is applied to the traffic issued from the user's device. However, no user identity information is written to the session log.

Optionally, instead of relying exclusively on the IP address of the user's device to identify the source of the traffic, you can specify the user identity—that is, the user name or the group name—in the source-identity tuple of a security policy. This approach gives you greater control over resource access by narrowing down application of the security policy's actions to a single, identified user or a group of users, if other security policy matching conditions are met. However, use of the source-identity tuple constrains application of the policy to traffic from a single user or user group.

It may happen that you want the system to write to the session log the user identity for all users from whom traffic originated based on the zone to which they belong (from-zone). In this case, you do not want to narrow the traffic match and security policy application to a single user or a user group, which configuring the source-identity tuple would do.

The zone-based user identity feature allows you to direct the system to write to the log user identity information for any user who belongs to a zone that is configured with the source-identity-log statement when that zone is used as the source zone in a matching security policy.

When all conditions are met, the user's name is written to the log at the beginning of the session (or session initialization) and at the beginning of the close of the session (or session tear-down). Note that if a security policy denies the user access to the resource, an entry identifying the user by name is written to the log, that is, if session close is configured.

You can use the source-identity tuple in a security policy that also specifies as its source zone a zone that was configured for user identity logging. Because integrated user firewall collects the names of the groups that a user belongs to from Microsoft Domain Controllers only when integrated user firewall relies on the source identity tuple, if you use the zone-based user identity logging feature without also configuring source-identity, the log will contain only the name of the user requesting access and not the groups that the user belongs to.

After you configure a zone to support source identity logging, the zone is reusable as the from-zone specification in any security policy for which you want user identity information logged.



**NOTE:** For the source-identity-log feature to take effect, you must also configure logging of the session initialize (session-init) and session end (session-close) events as part of the security policy's actions.

---

To summarize, the user's name is written to the log if:

- The user belongs to the zone configured for source identity logging.
- The user issues a resource access request whose generated traffic matches a security policy whose source zone (from-zone) tuple specifies a qualifying zone.
- The security policy includes as part of its actions the session initialize (session-init) and session end (session-close) events.

The source identity log function benefits include the ability to:

- Cover a wide range of users in a single specification—that is, all users who belong to a zone that is configured for source identity logging.
- Continue to use an address range for the source address in a security policy without forfeiting user identity logging.



- Reuse a zone that is configured for source identity logging in more than one security policy.

Because it is configured independent of the security policy, you can specify the zone as the source zone in one or more policies.



**NOTE:** The user identity is not logged if you specify a zone configured for zone-based user identity logging as the destination zone rather than as the source zone.

## Configuring Integrated User Firewall to Write User Identity to the Session Log Based On the Source Zone

This procedure shows how to configure the integrated user firewall zone-based user identity feature that directs the system to log user identity information based on the source zone (from-zone) configured in the security policy. For this to occur, the zone specified as the source zone must be configured for source identity logging. For zone-based user identity logging, the security policy's actions must include session create (session-init) and session close (session-init) events.

For this function to work, you must configure the following information:

- The source identity log statement configured for a zone that is used as the source zone (from-zone) in the intended security policy.
- A security policy that specifies:
  - A qualifying zone as its source zone.
  - The session-init and the session-close events as part of its actions.

To configure the source identity logging feature, perform these tasks:

1. Configure source identity logging for the trust zone. When this zone is used as the source zone in a security policy, the system writes the user identity information to the session log for all users to whom the security policy applies.

[edit security]

**user@host# set zones security-zone trust source-identity-log**

2. Configure a security policy called appfw-policy1 that specifies the zone trust as the term for its source zone. Source identity logging is applied to any user whose traffic matches the security policy's tuples.

This security policy allows the user to access the junos-ftp service. When the session is established for the user, the user's identity is logged. It is also logged at the close of the session.

[edit security]

**user@host# set policies from-zone trust to-zone untrust policy appfw-policy1 match source-address any destination-address any application junos-ftp**

```
user@host# set policies from-zone trust to-zone untrust policy appfw-policy1 then
permit
```

3. Configure the appfw-policy1 security policy's actions to include logging of the session initiation and session close events.



**NOTE:** You must configure the security policy to log session initiation and session close events for the source identity log function to take effect. The user identity information is written to the log in conjunction with these events.

```
[edit security]
user@host# set policies from-zone trust to-zone untrust policy appfw-policy1 then
log session-init
user@host# set policies from-zone trust to-zone untrust policy appfw-policy1 then
log session-close
```

Verify your configuration by entering the **show security zones** command.

## Verifying that the User Identity Information Was Logged

**Purpose** Note that integrated user firewall collects groups configured as the source-identity only from Microsoft Domain Controllers. If you use the zone-based user-identity feature without configuring source-identity, the log will contain only the user's name, that is, no group informations is recorded. In that case, the "roles=" section of the log will show "N/A". In the following procedure, it is assumed that the source-identity tuple was used and the "roles=" section shows a long list of the groups that the user "Administrator" belongs to.

**Action** Display the log information.

## Sample Output

```
<14>1 2015-01-19T15:03:40.482+08:00 user1 RT_FLOW - RT_FLOW_SESSION_CREATE
[user@host2636 192.0.2.123 source-address="198.51.100.13" source-port="635"
destination-address="198.51.100.10" destination-port="51" service-name="junos-ftp"
nat-source-address="203.0.113.10" nat-source-port="12349" nat-destination-address
="198.51.100.13" nat-destination-port="3522" nat-rule-name="None"
dst-nat-rule-name="None" protocol-id="6" policy-name="appfw-policy1"
source-zone-name="trust" destination-zone-name="untrust" session-id-22="12245"
username="MyCompany/Administrator " roles="administrators, Users, Enterprise
Admins, Schema Admins, ad, Domain Users, Group Policy Creator Owners, example-team,
Domain Admins" packet-incoming-interface="ge-0/0/0.1" application="UNKNOWN"
nested-application="UNKNOWN" encrypted="UNKNOWN"] session created 192.0.2.1/21
junos-ftp 10.1.1.12/32898->10.3.1.10/21 junos-ftp 10.1.1.1/547798->10.1.2.10/21
None None 6 appfw-policy1 trust untrust 20000025 MyCompany/Administrator
(administrators, Users, Enterprise Admins, Schema Admins, ad, Domain Users, Group
Policy Creator Ownersexample-team, Domain Admins) ge-0/0/0.0 UNKNOWN UNKNOWN
UNKNOWN
<14>1 2015-01-19T15:03:59.427+08:00 user1 RT_FLOW - RT_FLOW_SESSION_CLOSE
[user@host2636 192.0.2.123 reason="idle Timeout" source-address="198.51.100.13"
source-port="635" destination-address="198.51.100.10" destination-port="51"
```

```

service-name="junos-ftp" nat-source-address="203.0.113.10" nat-source-port="12349"
  nat-destination-address ="198.51.100.13" "nat-destination-port="3522"
src-nat-rule-name="None" dst-nat-rule-name="None" protocol-id="6"
policy-name="appfw-policy1" source-zone-name="trust"
destination-zone-name="untrust" session-id-32="20000025" packets-from-client="3"
bytes-from-client="180"
packets-from-server="0" bytes-from-server="0" elapsed-time="19"
application="INCONCLUSIVE" nested-application="INCONCLUSIVE" username=" J
"MyCompany /Administrator" roles="administrators, Users, Enterprise Admins,
Schema Admins, ad, Domain Users, Group Policy Creator Owners, example-team,
Domain Admins" packet-incoming-interface="ge-0/0/0.1" encrypted="UNKNOWN"]
session closed idle Timeout: 111.1.1.10/1234>10.1.1.11/21 junos-ftp
10.1.1.12/32898->10.3.1.10/21 1 None None 6 appfw-policy1 trust untrust 20000025
3(180) 0(0) 19
INCONCLUSIVE INCONCLUSIVE MyCompany/Administrator (administrators, Users,
Enterprise Admins, Schema Admins, ad, Domain Users, Group Policy Creator Owners,
example-team, Domain Admins) ge-0/0/0.1 UNKNOWN

```

- Related Documentation**
- [Understanding the Device Identity Attributes and Profiles for the Integrated User Firewall Device Identity Authentication Feature on page 33](#)



## CHAPTER 4

# Configuring Integrated User Firewall Device Identity Authentication for Access Control

- [Integrated User Firewall Device Identity Authentication on page 33](#)
- [Understanding the Device Identity Authentication Table on NFX Devices on page 39](#)
- [Understanding the Device Identity XML Solution for Third-Party NAC Authentication Systems on page 43](#)
- [Example: Configuring the Device Identity Feature in an Active Directory Environment on NFX Devices on page 45](#)

## Integrated User Firewall Device Identity Authentication

---

You can use the integrated user firewall device identity authentication feature to control access to network resources based on the attributes, or characteristics, of the device used. After you configure device identity authentication feature, you can configure security policies that allow or deny traffic from the identified device based on the policy action.

- [Using Device Identity Information to Control Access to Your Network on page 33](#)
- [Device Identity on page 35](#)

### Using Device Identity Information to Control Access to Your Network

For various reasons, you might want to control access to your network resources based on the identity of the user's device rather than on the identity of the user. For example, you might not know the identity of the user. You might allow your users to use their own devices (BYOD) to access network resources and you do not want to use captive portal authenticate. Some companies might have older switches that do not support 802.1, or they might not have a network access Control (NAC) system. The integrated user firewall device identity authentication feature was designed to offer a solution to these and other similar situations by enabling you to control network access based on attributes of the user's device.

Fundamentally, the Juniper Networks device receives or obtains the device identity information from the authentication source in the same manner that it obtains the user identity information, depending on the authentication source. If Microsoft Windows Active

Directory is the authentication source, the device retrieves the device information from the Active Directory domain controller. In the case of third-party Network Access Control (NAC) systems, the device receives the information from the authentication source through the RESTful Web services API that the device exposes to it for this purpose. After the device obtains the device identity information, it creates an entry for it in the device identity authentication table.

The purpose of obtaining the device information and entering it into the device identity authentication table is to control user access to network resources based on the device's identity. For this to occur, you must also configure security policies that identify the device, based on the specified device identity profile, and specify the action to be taken on traffic that issues from that device.

In broad terms, the process in which the device identity information is obtained and stored in the device identity information table entails the following actions on the part of the NFX Series device:

- Getting the device identity information.

Depending on the authentication source, the device uses one of the following two methods to obtain the device identity information:

- Active Directory—For Active Directory, the device can extract the device information from the domain controller's event log and then connect to the Active Directory LDAP server to obtain the names of the groups that the device belongs to. The device uses the information that it obtained from the event log to locate the device's information in the LDAP directory.
- Third-party NAC systems—These authentication systems use the POST service of the RESTful Web services API, called Web API. The device implements the API and exposes to the authentication systems to allow them to send the device identity information to the device.

The API has a formal XML structure and restrictions that the authentication source must adhere to in sending this information to the device.

- Creating an entry for the device in the device identity authentication table.


After the device obtains the device identity information, it creates an entry for it in the device identity authentication table. The device identity authentication table is separate from the Active Directory authentication table or any of the other local authentication tables used for third party authentication sources. Too, unlike local user authentication tables which are particular to an authentication source or feature, the device identity authentication table holds device identity information for all authentication sources. However, only one authentication source, such as Active Directory, can be active at a time. The device allows only authentication source to be used at a time to constrain the demand on the system to process information.

The device identity authentication feature supports various types of authentication systems, such as Active Directory or a third-party authentication source. That is, the device identity authentication feature provides a generic solution that stores device identity information in the same table regardless of the authentication source.

The device identity table can include entries with IPv6 addresses when active directory is the authentication source.

Figure 2 on page 35 shows the communication between the Juniper Networks device and a third-party NAC authentication source that is used for device identity authentication. The device receives the device identity information from the NAC system and stores it in its local device identity authentication table. A security policy that specifies a device identity profile is applicable to one or more devices. If a device matches the device identity profile and other parts of the security policy, the security policy is applied to traffic issuing from that device.

**Figure 2: Using a Third-Party Network Access Control (NAC) System for Device Identity Authentication**

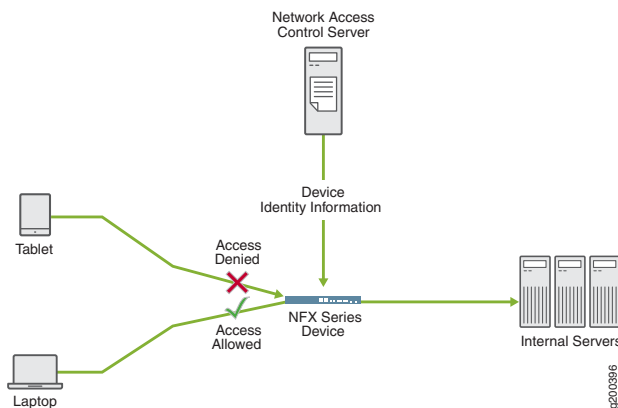

Use of a device identity profile in a security policy is optional.

If no device identity profile is specified in the security policy's source-end-user-profile field, "any" profile is *assumed*. However, you can not use the keyword "any" in the source-end-user-profile field of a security policy. It is a reserved keyword.

## Device Identity

The *device identity profile*, referred to in the CLI as the **end-user-profile**, is a key component of the integrated user firewall device identity authentication feature. It identifies the device and specifies its attributes. The device identity authentication feature allows you to control access to your network resources based on the identity of the device used and not the identity of the user of that device. This feature supports Microsoft Windows Active Directory and third-party network access control (NAC) systems as authentication sources.

The device identity essentially consists of the IP address of the device, its name, its domain, and the groups that the device belongs to.

For example, the following output shows information about the device, which is referred to from the device identity profile. The device identity authentication table contains entries for two devices. For each entry, it shows the IP address of the device, the name

assigned to the device, and the groups that the device belongs to. Note that both devices belong to the group grp4.

Source IP	Device ID	Device-Groups
192.0.2.1	lab-computer1	grp1, grp3, grp4
198.51.100.1	dev-computer2	grp5, grp6, grp4

---

### Device Identity Profile Contents

The device identity profile is a collection of attributes that are characteristics of a specific group of devices, or of a specific device, depending on the attributes configured in the profile. The Packet Forwarding Engine of the device maps the IP address of a device to the device identity profile.

A device identity profile specifies the name of the device and information that includes the IP address of the device, groups to which the device belongs, and attributes of the device which are collectively referred to as the host attributes.



**NOTE:** The only attributes that you can configure using the CLI are the name of the device and the groups that it belongs to. The other attributes are configured using the third-party RESTful web services API, which is used by NAC systems or Active Directory LDAP.

When traffic from a device arrives at the device, the device obtains the IP address of the device from the first packet of the traffic and uses it to search the device identity authentication table for a matching device identity entry. Then it matches that device identity profile with a security policy whose **source-end-user-profile** field specifies the device identity profile name. If a match is found, the security policy is applied to traffic issuing from the device.

The same device identity profile can also apply to other devices sharing the same attributes. However, for the same security policy to apply, the device and its traffic must match all other fields in the security policy.

A device identity profile must contain the domain name. It might contain more than one set of attributes, but it must contain at least one. Consider the following two sets of attributes that belong to the profile called marketing-main-alice.

The profile contains the following set of attributes:

- alice-T430, as the name of the device.
- MARKETING and WEST-COAST, as the groups that the device belongs to.
- example.net as the name of the domain that it belongs to.

The profile also the following attributes that characterize the device:

- laptop, as the category of the device (device-category)
- Lenovo, as the device vendor (device-vendor)



- ThinkPad T430, as the type of device (device-type)

In cases such as the marketing-main-alice profile that includes the name given to the device, the profile applies exclusively to that device.

However, now suppose that another profile called marketing-west-coast-T430 was configured and that it contains the same attributes as the marketing-main-alice profile with one exception: the name given to the device in the marketing-main-alice profile was not included as an attribute in the marketing-west-coast-T430 profile. In this case, the attributes contained in the profile now make up a group profile. Application of the profile is widened to include all Lenovo ThinkPad T430 devices (which are laptops) that fit the rest of the characteristics, or attributes, defined in the profile.

Devices are covered by the profile if all other attributes match: devices that belong to either the MARKETING or WEST-COAST groups, which the marketing-west-coast-T430 profile specifies as its groups, or to both groups, match the profile.

As mentioned previously, a device identity profile can contain more than one group. A device can also belong to more than one group.

To illustrate further, note that the group device identity profile called marketing-west-coast-T430 also applies to the device called alice-T430 because that device belongs to both the MARKETING and the WEST-COAST groups and it matches all other attributes defined in the profile. Of course, the marketing-main-alice device identity profile still applies to the device called alice-T430. Therefore, the device called alice-T430 belongs to at least two groups, and it is covered by at least two device identity profiles.

Suppose that another profile called marketing-human-resources was defined with all of the attributes of the marketing-west-coast-T430 device identity profile but with these differences: the new device identity profile includes a group called HUMAN-RESOURCES and it does not include the group called WEST-COAST. However, it does contain the MARKETING group.

Because the device called alice-T430 belongs to the MARKETING group, which remains as a group in marketing-human-resources profile, the alice-T430 device also matches the marketing-human-resources device identity profile. Now the alice-T430 device matches three profiles. If the names of any of these profiles is specified in a security policy's source-end-user-profile and the alice-T430 device matches all of the other fields in the security profile, then that profile's action is applied to traffic from that device.

The previous examples of device identity profiles illustrate the following points:

- A profile can be defined to identify only one device or it can be defined to apply to many devices.
- A device identity profile can contain more than one group to which a given device belongs.
- A device can match more than one device identity profile by matching the characteristics, or attributes, including at least one of the groups, configured for the profile.

The flexible use of device identity profiles will become evident when you configure security policies that are designed to include the source-end-user-profile field, in particular when you want the policy's action to be applied to a number of devices.

### Predefined Device Identity Attributes

The device provides the predefined device identity policy attributes that are configured using the third-party RESTful web services API, which is used by NAC systems or Active Directory LDAP.

- device-identity
- device-category
- device-vendor
- device-type
- device-os
- device-os-version

You specify values for these attributes in a device identity profile.

### Characteristics of Device Identity Profiles, and Attributes and Target Scaling

This section describes how the device treats device identity attributes and profiles. It also gives the device-independent and device-dependent scaling numbers for these entities.

The following attribute and profile characteristics apply to their use on all supported devices.

- The maximum length of the following entities is 64 bytes: device identity profile names (referred to in the CLI as **end-user-profile**) attribute names, attribute-values.
- You can not overlap values in a range if you configure more than one digital value range for the same attribute.
- When the device matches a device identity profile to a security policy, all of the attributes in the profile are taken into account. Here is how they are treated:
  - If the device identity profile contains multiple values for an attribute, the values of that attribute are treated individually. It is said that they are ORed.

For the security policy to be applied to the device, the following conditions must be met. The device must match:

- One of the values for each attribute that has multiple values.
- The rest of the attribute values specified in the device identity profile.
- The security policy field values.
- All individual attributes that have a single value are treated separately and considered together as a collection of values—that is, the AND operation is applied to them. The NFX Series device uses its standard policy-matching criteria in handling these attributes.

Table 9 on page 39 shows the platform-independent scaling values used in the device identity authentication feature.

*Table 9: Platform-Independent Scaling*

Item	Maximum
Values per attribute	20
Attributes per profile	100
Device identity profile specification per security policy (source-end-user-profile)	1

Table 10 on page 39 shows the platform-dependent scaling values used in the device identity authentication feature.

*Table 10: Platform-Dependent Scaling*

Platform	Maximum Number of Profiles	Maximum Total Number of Attribute Values
NFX150	100	1000

The following changes to device identity profiles and their use in security policies do not cause the NFX Series device to perform a session scan:

- Updates to a profile which is referenced in a security policy.
- Updates to the profile configuration.
- Updates to attributes that are made through the RESTful web services API, which is used by NAC systems, or Active Directory LDAP.

**Related Documentation**

- [Understanding the Device Identity XML Solution for Third-Party NAC Authentication Systems on page 43](#)

## Understanding the Device Identity Authentication Table on NFX Devices

The NFX Series device contains a number of local authentication tables used for user authentication for various purposes. For example, the device contains a local Active Directory authentication table for user authentication when Microsoft Windows Active Directory is used as the authentication source.

When you configure the device to use the integrated user firewall device identity authentication feature for authentication based on the device identity and its attributes, the device creates a new table called the device identity authentication table.

To gain a complete view of the device identity authentication feature, it helps to understand this table, its contents, and its relationship to other entities.

- [The Device Identity Authentication Table on page 40](#)
- [Why the Device Identity Authentication Table Content Changes on page 40](#)
- [Security Policy Matching and Device Identity Profiles on page 43](#)

## The Device Identity Authentication Table

Unlike other local authentication tables, the device identity authentication table does not contain information about a user but rather about the user's device. Moreover, unlike user authentication tables, it does not contain information about devices authenticated by one authentication source. Rather, it serves as a repository for device identity information for all devices regardless of their authentication source. For example, it might contain entries for devices authenticated by Active Directory or third-party NAC authentication sources.

A device identity authentication table entry contains the following parts:

- The IP address of the device.
- The name of the domain that the device belongs to.
- The groups with which the device is associated.
- The device identity.

The device identity is actually that of a device identity profile (referred to in the CLI as **end-user-profile**). This type of profile contains a group of attributes that characterize a specific individual device or a specific group of devices, for example, a specific type of laptop.

IPv6 addresses are supported for the following authentication sources:

- Active directory authentication table
- Device identity with Active Directory authentication
- Local authentication table

## Why the Device Identity Authentication Table Content Changes

The device identity entries in the device identity authentication table are changed when certain events occur: when the user authentication entry with which the device identity entry is associated expires, when security policy changes occur in regard to referencing a group that the device belongs to, when the device is added to or removed from groups, or when groups that it belongs to are deleted and that change is made to the Windows Active Directory LDAP server.

- When the User Identity Entry with Which a Device Identity Entry Is Associated Expires

When the device generates an entry for a device in the device identity authentication table, it associates that entry with a user identity entry in a local authentication table for the specific authentication source that authenticated the user of the device, such

as Active Directory. That is, it ties the device identity entry in the device identity authentication table to the entry for the user of the device in the user authentication table.

When the user authentication entry with which the device identity entry is associated expires and is deleted from the user authentication table, the device identity entry is deleted silently from the device identity authentication table. That is, no message is issued to inform you of this event.

- When Security Policy Changes Occur in Regard to Referencing a Group to Which the Device Belongs

To control access to network resources based on device identity, you create a device identity profile that you can refer to in a security policy. In addition to other attributes, a device identity profile contains the names of groups. When a device identity profile is referenced by a security policy, the groups that it contains are referred to as *interested groups*.

A group qualifies as an *interested group* if it is referenced by a security policy—that is, if it is included in a device identity profile that is specified in the **source-end-user-device** field of a security policy. If a group is included in a device identity profile that is not currently used in a security policy, it is not included in the list of interested groups. A group can move in and out of the list of groups referenced by security policies.

- When a Device Is Added to or Removed from a Group or a Group Is Deleted

To keep the device identity entries in the local device identity authentication table current, the SRX Series monitors the Active Directory event log for changes. In addition to determining whether a device has logged out of or in to the network, it can determine changes to any groups that the device might belong to. When changes occur to the groups that a device belongs to—that is, when a device is added to or removed from a group or the group is deleted—the device modifies the contents of the affected device entries in its own device identity authentication table to reflect the changes made in the Microsoft Windows Active Directory LDAP server.

The device identity authentication table is updated according to changes to groups with which the device is associated in the LDAP server, as illustrated in [Table 11 on page 41](#).

**Table 11: Group Changes for Devices in the Active Directory LDAP and the Response**

Changes Made to LDAP	LDAP Message and UserID Daemon Action
Group information for a device has changed. The device has been added to or removed from a group, or a group that the device belongs to has been deleted.	<p>The Active Directory LDAP module sends notification of the change to the UserID daemon, directing it to revise information in its local device identity authentication table.</p> <p>The device processes these messages every 2 minutes.</p>
The device entry in LDAP is deleted.	<p>The Active Directory LDAP module sends notification of the change to the UserID daemon, directing it to revise information in its local device identity authentication table.</p> <p>The device processes these messages every 2 minutes.</p>

The UserID daemon is informed of the changes. Whether or not a group that a device belongs to is specified in a security policy has bearing on what information is stored in device identity authentication table entries for the affected device. [Table 12 on page 42](#) shows the activity that occurs when a group is added to or deleted from the Active Directory LDAP.

**Table 12: Changes to Device Identity Entries Based on Security Policy Specifications**

Device Identity Profile Changes	Device-Group Mapping Behavior	SRX Series UserID Daemon Response
A new group that was added to the Active Directory LDAP is added to the device identity profile.	The device gets the list of devices that belong to the new group and its subgroups from the Active Directory LDAP server. It adds the list to its local LDAP directory.	<p>The UserID daemon determines whether the device identity authentication table includes entries for the set of affected devices. If so, it updates the group information for these entries.</p> <p>For example, here is the entry for device1 before it was updated to include the new group and after the group was added:</p> <ul style="list-style-type: none"> <li>• device1, g1</li> <li>• device1, g1, g2</li> </ul>
A group is deleted from the Active Directory LDAP. The device deletes the group from the device identity profile.	<p>The device gets the list of devices that belong to the deleted group from its local LDAP database.</p> <p>It deletes the device-group mapping from the local LDAP directory.</p>	<p>The UserID daemon checks the device identity authentication table for entries that belong to the group. It removes the group from affected entries.</p> <p>For example, here is the entry for device1 before the group was deleted and after the group was deleted:</p> <ul style="list-style-type: none"> <li>• device1, g1, g2</li> <li>• device1, g1</li> </ul>

[Table 13 on page 42](#) elaborates on the contents of device authentication entries for several devices that are affected by deletion of a group.

**Table 13: Changes to Device Identity Authentication Table Resulting from LDAP and Security Policy Changes**

Changes to Device identity Authentication Table Entries		
IP Address	Device Information	Group
Original Entries		
192.0.2.10	device1	group1, group2
192.0.2.11	device2	group3, group4
192.0.2.12	device3	group2
Same Entries After group2 Is Deleted		
192.0.2.10	device1	group1

**Table 13: Changes to Device Identity Authentication Table Resulting from LDAP and Security Policy Changes (continued)**

Changes to Device Identity Authentication Table Entries		
IP Address	Device Information	Group
192.0.2.11	device2	group3, group4
192.0.2.12	device3	<i>This entry no longer contains groups.</i>

## Security Policy Matching and Device Identity Profiles

The device follows the standard rules for matching traffic against security policies. The following behavior pertains to the use of a device identity profile in a security policy for determining a match:

- Use of a device identity profile in a security policy is optional.
  - If no device identity profile is specified in the source-end-user-profile field, **any** profile is assumed.
  - You cannot use the keyword **any** in the **source-end-user-profile** field of a security policy.
 

If you use the source-end-user-profile field in a security policy, you must reference a specific profile. The device from which the access attempt is issued must match the profile's attributes.
- Only one device identity profile can be specified in a single security policy.
- A security policy rematch is triggered when the **source-end-user-profile** field value of the security policy is changed. No rematch is triggered when an attribute value of a profile is changed.

## Understanding the Device Identity XML Solution for Third-Party NAC Authentication Systems

The integrated user firewall device identity authentication feature enables you to control access to network resources based on the identity of a device. You can use one of the following device identity solutions:

- Microsoft Active Directory as the authentication source.

If your environment is set up to use Microsoft Active Directory, the NFX Series device obtains the device IP address and groups from the Active Directory domain controller and LDAP service.

- Network access control (NAC) authentication system.

If your network environment is configured for a NAC solution and you decide to take this approach, the NAC system sends the device identity information to the NFX Series

device. The RESTful Web services API enables you to send the device information to the NFX Series device in a formal XML structure.



**WARNING:** If you take this approach, you must verify that your NAC solution works with the NFX Series device.

- [XML Web API Implementation on page 44](#)
- [Ensuring the Integrity of Data Sent from the NAC Service to the NFX Series Device on page 44](#)
- [Data Size Restrictions and Other Constraints on page 44](#)

## XML Web API Implementation

The RESTful Web services API enables you to send the device identity information to the NFX Series device in a formal XML structure. It allows your NAC solution to integrate with the NFX Series and efficiently send the device information to it. You must adhere to the formal structure and restrictions in sending information to the NFX Series device using the API.

## Ensuring the Integrity of Data Sent from the NAC Service to the NFX Series Device

The following requirements ensure that the data sent from the NAC service is not compromised:

- The API implementation is restricted to processing only HTTP/HTTPS POST requests. Any other type of request that it receives generates an error message.
- The API daemon analyzes and processes HTTP/HTTPS requests from only the following dedicated URL:

`/api/userfw/v1/post-entry`

- The HTTP/HTTPS content that your NAC solution posts to the NFX Series device must be consistently formatted correctly. The correct XML format indicates a lack of compromise, and it ensures that user identity information is not lost.

## Data Size Restrictions and Other Constraints

The following data size restrictions and limitations apply to the data posted to the NFX Series device:

- The NAC authentication system must control the size of the data that it posts. Otherwise, the Web API daemon is unable to process it. The Web API daemon can process a maximum of 2 megabytes of data.
- The following limitations apply to XML data for role and device posture information. The Web API daemon discards XML data sent to it that exceeds these amounts (that is, the overflow data):
  - The NFX Series device can process a maximum of 209 roles.



- The NFX Series device supports only one type of posture with six possible posture tokens, or values. Identity information for an individual user can have only one posture token.

**See Also** • [Understanding the Device Identity Attributes and Profiles for the Integrated User Firewall Device Identity Authentication Feature on page 33](#)

## Example: Configuring the Device Identity Feature in an Active Directory Environment on NFX Devices

---

This example shows how to configure the integrated user firewall device identity authentication feature to control access to network resources based on the identity of an authenticated device, not its user. For various reasons, you might want to use the identity of a device for resource access control. For example, you might not know the identity of the user. Also some companies might have older switches that do not support 802.1, or they might not have a network access control (NAC) system. The device identity authentication feature offers a solution to these and other similar situations by enabling you to control network access based on the device identity. You can control access for a group of devices that fit the device identity specification or an individual device.

- [Requirements on page 45](#)
- [Overview on page 46](#)
- [Configuration on page 48](#)
- [Verification on page 53](#)

### Requirements

This example uses the following hardware and software components:

- An NFX Series device
- Microsoft Active Directory with a domain controller and the Lightweight Directory Access Protocol (LDAP) server

The Active Directory domain controller has a high-performance configuration of 4 cores and 8 gigabytes of memory.



**NOTE:** The NFX Series device obtains the IP address of a device by reading the domain controller event log. The process that reads the event log consumes domain controller CPU resources, which might lead to high CPU usage. For this reason, the Active Directory domain controller should have a high-performance configuration of at least 4 cores and 8 gigabytes of memory.

- A server on the internal corporate network.

## Overview

This example uses Microsoft Active Directory as the authentication source. It covers how to configure a device identity profile that characterizes a device, or set of devices, and how to reference that profile in a security policy. If a device matches the device identity and the security policy parameters, the security policy's action is applied to traffic issuing from that device.



**NOTE:** You must configure the authentication source for this feature to work.

This example covers the following configuration parts:

- Zones and their interfaces

You must configure the zones to which the source and destination entities specified in the security policy belong. If you do not configure them, the security policy that references the device identity profile will be invalid.

- A device identity profile

You configure the device identity profile apart from the security policy; you refer to it from a security policy. A device identity profile specifies a device identity that can be matched by one or more devices. For Active Directory, you can specify only the device-identity attribute in the profile.

In this example, the device-identity attribute specification is *company-computers*.



**NOTE:** The device identity profile is referred to as *end-user-profile* in the CLI.

- A security policy

You configure a security policy whose action is applied to traffic issuing from any device that matches the device identity profile attributes and the rest of the security policy's parameters.



**NOTE:** You specify the name of the device identity profile in the security policy's *source-end-user-profile* field.

- Authentication source

You configure the authentication source to be used to authenticate the device. This example uses Active Directory as the device identity authentication source.

If Active Directory is the authentication source, the NFX Series device obtains identity information for an authenticated device by reading the Active Directory domain's event log. The NFX Series device then queries the LDAP interface of Active Directory to identify the groups that the device belongs to, using the device's IP address for the query.

For this purpose, the NFX Series device implements a Windows Management Instrumentation (WMI) client with Microsoft Distributed COM/Microsoft RPC stacks and an authentication mechanism to communicate with the Windows Active Directory controller in the Active Directory domain. It is the NFX Series device `wmic` daemon that extracts device information from the event log of the Active Directory domain.

The `wmic` daemon also monitors the Active Directory event log for changes by using the same WMI DCOM interface. When changes occur, the NFX Series device adjusts its local device identity authentication table to reflect those changes.

### Topology

---

In this example, users who belong to the marketing-zone zone want to access resources on the internal corporate servers. Access control is based on the identity of the device. In this example, `company-computers` is specified as the device identity. Therefore, the security policy action is applied only to devices that fit that specification and match the security policy criteria. It is the device that is either granted or denied access to the server resources. Access is not controlled based on user identification.


Two zones are established: one that includes the network devices (marketing-zone) and one that includes the internal servers (servers-zone). The NFX Series device interface `ge-1/0/3.1`, whose IP address is `192.0.2.18/24`, is assigned to the marketing-zone zone. The NFX Series device interface `ge-1/0/3.2`, whose IP address is `192.0.2.14/24`, is assigned to the servers-zone zone.

This examples covers the following activity:

1. The NFX Series device connects to the Active Directory domain controller using the WMI DCOM interface to obtain information about devices authenticated by Active Directory.  
  
When a user logs in to the network and is authenticated, information about the user's device is written to the event log.
2. The NFX Series device extracts the device information from the event log of the Active Directory domain controller.
3. The NFX Series device uses the extracted information to obtain a list of the groups that the device belongs to from the Active Directory LDAP server.
4. The NFX Series device creates a local device identity authentication table and stores the device identity information that it obtained from the domain controller and LDAP server in the table.
5. When traffic from a device arrives at the NFX Series device, the NFX Series device checks the device identity authentication table for a matching entry for the device that issued the traffic.
6. If the NFX Series device finds a matching entry for the device that is requesting access, it checks the security policy table for a security policy whose **source-end-user-profile** field specifies a device identity profile with a device-identity specification that matches that of the device requesting access.
7. The matching security policy is applied to traffic issuing from the device.

Figure 3 on page 48 shows the topology for this example.

*Figure 3: Topology for the Device Identity Feature with Active Directory as the Authentication Source*

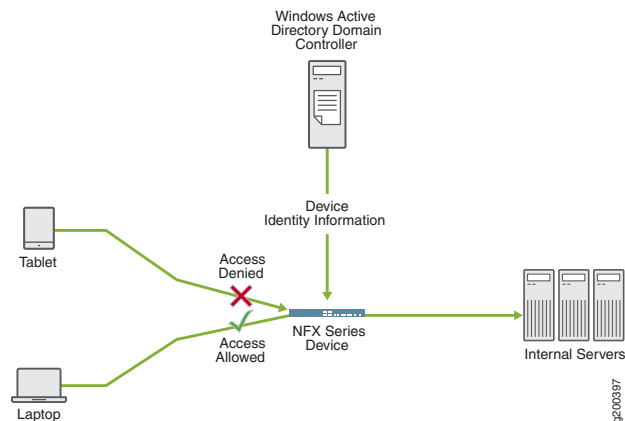

## Configuration

To configure the device identity feature in an Active Directory environment, perform these tasks:

- [Configuring the Integrated User Firewall Device Identity Authentication Feature in an Active Directory Environment on page 49](#)
- [Results on page 51](#)

### CLI Quick Configuration

To quickly configure this example, copy the following commands to a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter **commit** from configuration mode.

```
set interfaces ge-1/0/3.1 family inet address 192.0.2.18/24
set interfaces ge-1/0/3.2 family inet address 192.0.2.14/24
set security zones security-zone marketing-zone interfaces ge-1/0/3.1 host-inbound-traffic
  system-services all
set security zones security-zone marketing-zone interfaces ge-1/0/3.1 host-inbound-traffic
  protocols all
set security zones security-zone servers-zone interfaces ge-1/0/3.2 host-inbound-traffic
  system-services all
set security zones security-zone servers-zone interfaces ge-1/0/3.2 host-inbound-traffic
  protocols all
set services user-identification device-information authentication-source active-directory
set services user-identification device-information end-user-profile profile-name
  marketing-west-coast domain-name example.net
set device-information end-user-profile profile-name marketing-west-coast attribute
  device-identity string company-computers
set security policies from-zone marketing-zone to-zone servers-zone policy
  mark-server-access match source-address any destination-address any
set security policies from-zone marketing-zone to-zone servers-zone policy
  mark-server-access match application any
```

```

set security policies from-zone marketing-zone to-zone servers-zone policy
  mark-server-access match source-end-user-profile marketing-west-coast
set security policies from-zone marketing-zone to-zone servers-zone policy
  mark-server-access then permit
set services user-identification active-directory-access domain example.net user1
  password pswd
set services user-identification active-directory-access domain example.net
  domain-controller dc-example address 203.0.113.0
set services user-identification active-directory-access domain example.net
  ip-user-mapping discovery-method wmi event-log-scanning-interval 30
set services user-identification active-directory-access domain example.net
  ip-user-mapping discovery-method wmi initial-event-log-timespan 1
set services user-identification active-directory-access domain example.net
  user-group-mapping ldap authentication-algorithm simple
set services user-identification active-directory-access domain example.net
  user-group-mapping ldap address 198.51.100.9 port 389
set services user-identification active-directory-access domain example.net
  user-group-mapping ldap base dc=example, dc=net
set services user-identification active-directory-access authentication-entry-timeout
  100
set services user-identification active-directory-access wmi-timeout 60

```

### Configuring the Integrated User Firewall Device Identity Authentication Feature in an Active Directory Environment

#### Step-by-Step Procedure

This procedure includes the configuration statements required to configure the NFX Series device to support the device identity authentication feature in an Active Directory environment.

1. Configure the interfaces to be used for the marketing-zone and the servers-zone.

```

[edit interfaces]
user@host# set ge-1/0/3.1 family inet address 192.0.2.18/24
user@host# set ge-1/0/3.2 family inet address 192.0.2.14/24

```

2. Configure the marketing-zone and the servers-zone and assign interfaces to them.

```

[edit security zones]
user@host# set security-zone marketing-zone interfaces ge-1/0/3.1
  host-inbound-traffic system-services all
user@host# set security-zone marketing-zone interfaces ge-1/0/3.1
  host-inbound-traffic protocols all
user@host# set security-zone servers-zone interfaces ge-1/0/3.2
  host-inbound-traffic system-services all
user@host# set security-zone servers-zone interfaces ge-1/0/3.2
  host-inbound-traffic protocols all

```

3. Configure the authentication source to specify Microsoft Active Directory. You must specify the authentication source for the device identity feature to work. This is a required value.

```

[edit services user-identification]
user@host# set device-information authentication-source active-directory

```

4. Configure the device identity specification for the device identity profile, which is also referred to as **end-user-profile**.

```
[edit services user-identification]
user@host# set device-information end-user-profile profile-name
marketing-west-coast domain-name example.net
user@host# set device-information end-user-profile profile-name
marketing-west-coast attribute device-identity string company-computers
```

5. Configure a security policy, called mark-server-access, that references the device identity profile called marketing-west-coast. The security policy allows any device that belongs to the marketing-zone zone (and that matches the device identity profile specification) access to the target server's resources.

```
[edit security policies]
user@host# set from-zone marketing-zone to-zone servers-zone policy
mark-server-access match source-address any destination-address any
user@host# set security policies from-zone marketing-zone to-zone servers-zone
policy mark-server-access match source-end-user-profile marketing-west-coast
user@host# set security policies from-zone marketing-zone to-zone servers-zone
policy mark-server-access match application any
user@host# set security policies from-zone marketing-zone to-zone servers-zone
policy mark-server-access then permit
```

6. Configure the NFX Series device to communicate with Active Directory and to use the LDAP service.

To get the group information necessary to implement the device identity authentication feature, the NFX Series device uses the Lightweight Directory Access Protocol (LDAP). The NFX Series device acts as an LDAP client communicating with an LDAP server. Typically, the Active Directory domain controller acts as the LDAP server. The LDAP module in the NFX Series device queries the Active Directory in the domain controller.

```
[edit services user-identification]
user@host# set active-directory-access domain example.net user user1 password
pswd
user@host# set active-directory-access domain example.net domain-controller
dc-example address 203.0.113.0
user@host# set active-directory-access domain example.net ip-user-mapping
discovery-method wmi event-log-scanning-interval 30
user@host# set active-directory-access domain example.net ip-user-mapping
discovery-method wmi initial-event-log-timespan 1
user@host# set active-directory-access domain example.net user-group-mapping
ldap address 198.51.100.9 port 389
user@host# set active-directory-access domain example.net user-group-mapping
ldap base dc=example,dc=net
user@host# set active-directory-access domain example.net user-group-mapping
ldap authentication-algorithm simple
user@host# set active-directory-access authentication-entry-timeout 100
user@host# set active-directory-access wmi-timeout 60
```

## Results

---

### show interfaces

```
ge-1/0/3 {
  unit 1 {
    family inet {
      address 192.0.2.18/24;
    }
  }
  unit 2 {
    family inet {
      address 192.0.2.14/24;
    }
  }
}
```

### show security zones

```
security-zone marketing-zone {
  interfaces {
    ge-1/0/3.1 {
      host-inbound-traffic {
        system-services {
          all;
        }
        protocols {
          all;
        }
      }
    }
  }
}
security-zone servers-zone {
  interfaces {
    ge-1/0/3.2 {
      host-inbound-traffic {
        system-services {
          all;
        }
        protocols {
          all;
        }
      }
    }
  }
}
```

### show services user-identification device-information end-user-profile

```
domain-name example.net
attribute device-identity {
  string company-computers;
}
```

### show services user-identification device-information authentication-source

```
active-directory;
```

**show security policies**

```
from-zone marketing-zone to-zone servers-zone {  
  policy mark-server-access {  
    match {  
      source-address any;  
      destination-address any;  
      application any;  
      source-end-user-profile {  
        marketing-west-coast;  
      }  
    }  
    then {  
      permit;  
    }  
  }  
}
```

**show services user-identification active-directory-access**

```
domain example-net {  
  user {  
    user1;  
    password $ABC123; ## SECRET-DATA  
  }  
  ip-user-mapping {  
    discovery-method {  
      wmi {  
        event-log-scanning-interval 30;  
        initial-event-log-timespan 1;  
      }  
    }  
  }  
  user-group-mapping {  
    ldap {  
      base dc=example,DC=net;  
      address 198.51.100.9 {  
        port 389;  
      }  
    }  
  }  
}
```

**show services user-identification active-directory-access domain example-net**

```
user {  
  user1;  
  password $ABC123 ## SECRET-DATA  
}  
domain-controller dc-example {  
  address 203.0.113.0;  
}
```



## Verification

- [Verify the Device Identity Authentication Table Contents on page 53](#)
- [Verify the Domain Configuration on the NFX Series Device on page 53](#)

---

### Verify the Device Identity Authentication Table Contents

- Purpose** Verify that the device identity authentication table contains the expected entries and their groups.
- Action** In this case, the device identity authentication table contains three entries. The following command displays extensive information for all three entries.
- Enter **show services user-identification device-information table all extensive** to display the table's contents.

## Sample Output

```
Domain: example.net
Total entries: 1
Source IP: 192.0.2.19
Device ID: company-computers$
Device-Groups: device_group1,
device_group2,device_group3,
device_group4, device_group5
Referred by: mark-server-access
```

- Meaning** The table should contain entries with information for all authenticated devices and the groups that they belong to.

---

### Verify the Domain Configuration on the NFX Series Device

- Purpose** Ensure that the NFX Series device is configured with the correct domain information.
- Action** Enter **show services user-identification active-directory-access domain example-net**.
- ```
user {
  user1;
  password $ABC123 ; ## SECRET-DATA
}
domain-controller dc-example {
  address 203.0.113.0;
}
```
- Meaning** The output should reflect the correct information configured for the domain.

- Related Documentation**
- [Understanding the Device Identity Attributes and Profiles for the Integrated User Firewall Device Identity Authentication Feature on page 33](#)
  - [Understanding the Device Identity Authentication Table on NFX Devices on page 39](#)

## CHAPTER 5

# Configuring Advanced Query for Active Directory and ClearPass Authentication Sources

- [Understanding the Advanced Query Feature for Obtaining User Identity Information from JIMS on page 55](#)
- [Configuring the Advanced Query Feature for Obtaining User Identity Information from JIMS on page 58](#)

## Understanding the Advanced Query Feature for Obtaining User Identity Information from JIMS

---

- [Juniper Identity Management Service \(JIMS\) Overview on page 55](#)
- [Establishing a Connection to JIMS to Obtain User Identity Information on page 56](#)
- [Querying JIMS for User Identity Information on page 56](#)
- [Filters on page 57](#)
- [Caveats and Limitations on page 58](#)

### Juniper Identity Management Service (JIMS) Overview

Juniper Identity Management Service (JIMS) is a software agent and repository that collects user name, device identity, and group information from various sources. JIMS supports Microsoft active directory and Microsoft Exchange Server.

The NFX Series device relies on JIMS for user identity information much in the same way that it does LDAP.

If you configure the advanced user query feature, the NFX Series device can perform the following tasks:

- Query JIMS for identity information that it collected.
- Populate its identity management authentication table with the information that it obtained from JIMS.
- Use its populated identity management authentication table to authenticate a user or a device requesting access to a protected resource.

If JIMS does not contain information for a user, you can push that information to it. The user must first authenticate to the NFX Series device through captive portal.

User identity information that JIMS sends in response to the queries includes:

- IP address of the user's device.
- User name.
- Domain that the user's device belongs to.
- Roles that the user belongs to, such mycompany-pc. CEO. user-authenticated.
- Online status of the device and the state of the device, such as "Healthy".
- End-user-attributes, such as device-identity, value (device name), and groups that the device belongs to.

## Establishing a Connection to JIMS to Obtain User Identity Information

The NFX Series device obtains user identity information by querying JIMS either in batch mode to obtain information for groups of users or through queries for individual users. For the device to query JIMS, you must establish an HTTPS connection between the device and the JIMS server.



**NOTE:** HTTP connections are used only for debugging purposes.

Defining the connection entails configuring the following information:

- Connection parameters.
- Information that allows the device to authenticate to JIMS.

The device obtains an access token after it authenticates to the JIMS server. The device must have this token for it to query JIMS for user information.

You must configure connection parameters and authentication information for the connection to a JIMS primary server, but you can *also* configure this information for connection to a *secondary*, backup server.

The device always attempts to connect to the primary server first. It falls back to the secondary server when its queries to the primary server fail. After the primary server connection fails and the device switches to the secondary server, it periodically probes the failed primary server and reverts to it when it is available again.

The Web API supports IPv4 and IPv6 user or device entries obtained from JIMS.

## Querying JIMS for User Identity Information

There are three ways to obtain user identity information from JIMS:

- Initial batch query at startup—When the device is started, it sends a batch query message to JIMS to obtain all available user identity information for active directory

users that it expects at that time, if you have configured the connection to the JIMS server.

- Follow-on batch queries—Following its initial receipt of user identity information, the device queries JIMS periodically for batches of newly generated user identity information. For this to occur, you configure an interval for the periodic queries and specify the number of user identity records to be sent in return per batch.
- Query for individual user information—You can configure the advanced query feature to allow you to query the JIMS server for identity information for an individual user based on the IP address of the user's device, if that information is missing from a batch response.



**NOTE:** If an entry for the specified IP address does not exist, JIMS returns an HTTP 404 “Not Found” message.



**NOTE:** When the device requests user information from JIMS initially, it specifies a timestamp. JIMS sends user information in response going back to the timestamp specification, and it includes a cookie to the device in the response to indicate the context. The device sends that cookie with its next query instead of a timestamp.

You can refresh the user identity information in your identity management authentication table obtained from JIMS. You can obtain everything that was received automatically when you started the device and from subsequent batch queries and individual IP queries up to the present.

For this purpose, you clear the authentication table by disabling the advanced query feature configuration. You can reconfigure the advanced query feature to retrieve all available user identities.

The device supports the use of IPv6 addresses associated with source identities in security policies. If an IPv4 or IPv6 entry exists, policies matching that entry are applied to the traffic and access is either allowed or denied.

## Filters

The advanced query feature provides an optional filter function that you can use to control at a granular level the user information records that you want to receive in response to queries. You can configure filters based on IP addresses and domains. Filters allow you to define specifically users whose information you want JIMS to return to you in response to queries.

You can configure filters composed of:

- A range of IP addresses. You can specify a range of IP addresses for:
  - Users whose information you want to receive.
  - Users for whom you do not want information.

You use address books to create the IP address filters. You configure address sets, each of which must not contain more than twenty IP addresses to be included in the address book.

- Domain names.

You can specify the names of up to twenty-five active directory domains.

You can configure a filter that includes all three specifications: a range of IP addresses to include, a range of IP addresses to be excluded, and the names of one or more domains.



**NOTE:** Filters are contextual. That is, you can use a different filter configuration for different requests. If you change the filter configuration, the new filter applies to subsequent queries exclusively. It has no bearing on prior query requests

---

## Caveats and Limitations

The following warnings and caveats apply to the advanced query feature:

- Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.
- CPU usage and resource consumption is affected by the device's reading and processing of user identity records. The impact may last several minutes.
- If user identity information is cleared from JIMS or it is missing for other reasons or delayed, the device could receive inaccurate IP address and user mapping information.

The following limitations apply to the advanced query feature:

- Generation of authentication entries in the identity management authentication table can be affected by a delay in the JIMS server's response time or the number of user identity records to be retrieved.
- As noted, if configuration of a filter is changed, the new filter will be used only in subsequent retrievals of user identities.

## Configuring the Advanced Query Feature for Obtaining User Identity Information from JIMS

---

Configuring the advanced query feature involves the following tasks:

- [Configuring the Advanced Query Feature for Obtaining User Identity Information from JIMS on page 59](#)
- [Configure Security Policy Parameters to Match the User Identity Information Obtained from JIMS on page 60](#)

## Configuring the Advanced Query Feature for Obtaining User Identity Information from JIMS

By configuring the advanced user query feature, the device can query JIMS and add identity information in the local active directory authentication table.

Follow the steps below to configure the advanced query feature:

1. Configure the IP address of the primary JIMS server.

```
[edit services user-identification]
user@host# set identity-management connection primary address ip-address
```

2. Configure the client ID that the device provides to the JIMS primary server as part of its authentication to it.

```
[edit services user-identification]
user@host# set identity-management connection primary client-id client-id
```

3. Configure the client secret that the device provides to the JIMS primary server as part of its authentication to it.

```
[edit services user-identification]
user@host# set identity-management connection primary client-secret client-secret
```

4. Configure the IP address for the secondary JIMS server.

```
[edit services user-identification]
user@host# set identity-management connection secondary address ip-address
```

5. Configure the client ID that the device provides to the JIMS secondary server as part of its authentication to it.

```
[edit services user-identification]
user@host# set identity-management connection secondary client-id client-id
```

6. Configure the client secret that the device provides to the JIMS secondary server as part of its authentication to it.

```
[edit services user-identification]
user@host# set identity-management connection primary client-secret client-secret
```

7. Configure the maximum number of user identity items that the device accepts in one batch in response to the query.

```
[edit services user-identification]
user@host# set identity-management batch-query items-per-batch items-per-batch
```

8. Configure Interval in seconds after which the device issues a query request for newly generated user identities.

```
[edit services user-identification]
user@host# set identity-management batch-query query-interval query-interval
```

9. Configure active directory domains of interest to the device. You can specify up to twenty domain names for the filter.

```
[edit services user-identification]
user@host# set identity-management filter domain domain
```

10. Configure the address book name to include the IP filter.

```
[edit services user-identification]
user@host# set identity-management filter include-ip address-book address-book
```

11. Configure the referenced address set.

```
[edit services user-identification]
user@host# set identity-management filter include-ip address-set address-set
```

12. Configure the trace option file name.

```
[edit services user-identification]
user@host# set identity-management traceoptions file file name
```

13. Configure trace file size.

```
[edit services user-identification]
user@host# set identity-management traceoptions file file size
```

14. Configure the level of debugging output.

```
[edit services user-identification]
user@host# set identity-management traceoptions level all
```

15. Configure the trace identity management for all modules.

```
[edit services user-identification]
user@host# set identity-management traceoptions flag all
```

## Configure Security Policy Parameters to Match the User Identity Information Obtained from JIMS

To configure the security policy:

1. Configure authentication source for the device identity feature to work.

```
[edit services user-identification ]
user@host# set device-information authentication-source network-access-controller
```

2. Configure the device identity profile.

```
[edit services user-identification ]
user@host# set device-information end-user-profile profile-name profile-name
domain-name domain-name
```

3. Configure the domain name to which the device belongs.



```
[edit services user-identification ]
user@host# set device-information end-user-profile profile-name profile-name
attribute device-identity string string-value
```

4. Create a source address for a security policy.

```
[edit security ]
user@host# set policies from-zone untrust to-zone trust policy name match
source-address any
```

5. Create a destination address for a security policy.

```
[edit security ]
user@host# set policies from-zone untrust to-zone trust policy name match
destination-address any
```

6. Configure the port-based application to match the policy.

```
[edit security ]
user@host# set policies from-zone untrust to-zone trust policy name match application
any
```

7. Define a username or a role (group) name that the JIMS sends to the device. Example: "jims-dom1.local\user1".

```
[edit security ]
user@host# set policies from-zone untrust to-zone trust policy name match
source-identity username or group
```

8. Permit the packet if the policy matches.

```
[edit security ]
user@host# set policies from-zone untrust to-zone trust policy name then permit
```

9. Configure the session initiation time.

```
[edit security ]
user@host# set policies from-zone untrust to-zone trust policy name then log
session-init
```

10. Configure the session close time.

```
[edit security ]
user@host# set policies from-zone untrust to-zone trust policy name then log
session-close
```



## PART 2

# Configuring Integrated ClearPass Authentication and Enforcement

- [Understanding Integrated ClearPass Authentication and Enforcement on page 65](#)
- [Configuring Communication with ClearPass Using the WebAPI Feature on page 69](#)
- [Configuring Integrated ClearPass Authentication and Enforcement on page 83](#)
- [Configuring the Integrated ClearPass Authentication and Enforcement User Query Function on page 111](#)
- [Configuring ClearPass and JIMS on page 125](#)



## CHAPTER 6

# Understanding Integrated ClearPass Authentication and Enforcement

- [Understanding the NFX Series Integrated ClearPass Authentication and Enforcement Feature on page 65](#)

## Understanding the NFX Series Integrated ClearPass Authentication and Enforcement Feature

---

This topic introduces the NFX Series integrated ClearPass authentication and enforcement feature in which the NFX Series device and Aruba ClearPass collaborate to protect your network resources by enforcing security at the user identity level and controlling user access to the Internet. The ClearPass Policy Manager (CPPM) can authenticate users across wired, wireless, and VPN infrastructures. The integrated ClearPass feature allows the CPPM and the NFX Series device to collaborate in multiple environments in which they are deployed together.

- [Why You Need to Protect Your Environment With the NFX Series Integrated ClearPass Authentication and Enforcement Feature on page 65](#)
- [How the NFX Series Integrated ClearPass Authentication and Enforcement Feature Can Protect Your Network Environment on page 66](#)

## Why You Need to Protect Your Environment With the NFX Series Integrated ClearPass Authentication and Enforcement Feature

The proliferation of mobile devices and cloud services and securing them has become a fundamental strategic part of enterprise cybersecurity. Use of company smartphones poses one of the biggest IT security risks to businesses. The integrated ClearPass feature protects against malicious intrusions introduced through use of mobile devices and multiple concurrently connected devices.

In a work environment that supports mobile devices, knowing the identity of the user whose device is associated with an attack or threat provides IT administrators with improved advantage in identifying the source of the attack and stemming future potential attacks that follow the same strategy.

Attackers can gain access to nearby company-owned mobile devices and install malware on them that they can then use to capture data at any time. Whether reconnaissance or malicious, attacks against network resources are commonplace in today's computing

environment. Attackers can launch information-gathering ventures, stop business activity, and steal sensitive corporate data.

Today's network environments are more open to attacks of various kinds because they support *anywhere, anytime, any device* access, to a greater or lesser degree, and they allow a user to use multiple concurrently network-connected devices.

The NFX Series integrated ClearPass authentication and enforcement feature can protect you against attacks and intrusions by allowing you to configure security policies that identify users by their usernames or by the groups that they belong to. It also identifies threats and attacks perpetrated against your network environment and provides this information to the CPPM. As administrator of the CPPM, you can better align your security enforcement to protect against possible future attacks of the same kind. If a user is logged in to the network with more than one device, you can keep track of their activity based on their identity, not only by their devices, and you can more easily control their network access and any egregious activity on their behalf, whether intended or not.

## How the NFX Series Integrated ClearPass Authentication and Enforcement Feature Can Protect Your Network Environment

The NFX Series integrated ClearPass authentication and enforcement feature gives you granular control at the user level, not the device's IP address, over user access to protected resources and the Internet. As administrator of the NFX Series device, you can now specify in the source-identity parameter of *identity-aware* security policies a username or a role (group) name that the CPPM posts to the NFX Series device. You are no longer restricted to relying solely on the IP address of the device as a means of identifying the user. Honing in on the user of the device, rather than only the device, enhances your control over security enforcement.

In addition to providing the NFX Series device with authenticated user information, the CPPM can map a device type to a role and assign users to that role. It can then send that role mapping to the NFX Series device. This capability allows you to control through security policies a user's access to resources when they are using a *specific type of device*.

For example, suppose that the administrator of the CPPM configured a role called marketing-company-device and mapped to that role both company devices and members of the Marketing department. As administrator of the NFX Series device, you could specify that role in a security policy as if it were a group. The security policy would then apply to all users mapped to the role, inherently controlling their network activity when they use that type of device type.

The NFX Series integrated ClearPass feature delivers the protection of the SCREENS, IDP and UTM features to defend your network against a wide range of attack strategies. In addition to protecting the company's network resources, the NFX Series device can make available to the CPPM log records generated by these protective security features in response to attack or attack threats. Knowing about threats and specific attacks that have already occurred can help IT departments to identify noncompliant systems and exposed areas of the network. With this information, they can harden their security by enforcing device compliance and strengthening protection of their resources.

Security policies protect the company's resources and enforce access control at a fine-grain level, taking advantage of the user authentication and identity information sent to the device from the CPPM. The CPPM acts as the authentication source. It uses its own internal RADIUS server to authenticate users. It can also rely on an external authentication source to perform the authentication for it, such as an external RADIUS server or Active Directory.

The CPPM authentication is triggered by requests from NAS devices such as switches and access controllers. The CPPM uses the XML portion of the RESTful Web services that the NFX Series device exposes to it to send in POST request messages to the NFX Series device authenticated user identity and device posture information.

The NFX Series device and Aruba ClearPass simplify the complex and complicated security tasks required to safeguard company resources and enforce Internet access policy for mobile devices. This security is essential in a network environment that supports the mobile experience and that gives the user latitude to use a wide range of devices, including their own systems, smartphones, and tablets.

The NFX Series device supports the use of IPv4 and IPv6 addresses associated with source identities in security policies. If IPv4 or IPv6 entry exists, policies matching that entry are applied to the traffic and access is allowed or denied.

**Related  
Documentation**

- [Understanding Enforcement of ClearPass User and Group Authentication on NFX Devices on page 83](#)





## CHAPTER 7

# Configuring Communication with ClearPass Using the WebAPI Feature

- [Understanding How ClearPass Communicates with the NFX Series Device Using the Web API on page 69](#)
- [Example: Configuring the NFX Series Integrated ClearPass Feature to Allow the Device to Receive User Authentication Data from ClearPass on page 72](#)

## Understanding How ClearPass Communicates with the NFX Series Device Using the Web API

---

The integrated ClearPass authentication and enforcement feature enables the NFX Series device and Aruba ClearPass to collaborate in protecting your company's resources by enforcing security at the user identity level in environments in which they are deployed together. The ClearPass Policy Manager (CPPM) can authenticate users across wired, wireless, and VPN infrastructures and post that information to the NFX Series device, which, in turn, uses it to authenticate users requesting access to your protected resources and to the internet. The NFX Series device can provide the CPPM with threat and attack logs associated users' devices so that you can better harden your security at the ClearPass end.

- [Web API on page 69](#)
- [ClearPass Authentication Table on page 70](#)
- [Using HTTPS or HTTP for the Connection Protocol Between ClearPass and the NFX Series Device on page 70](#)
- [Ensuring the Integrity of Data Sent from ClearPass to the NFX Series Device on page 71](#)
- [Data Size Restrictions and Other Constraints on page 71](#)
- [Posture States and the Posture Group on page 71](#)

## Web API

The NFX Series device exposes to the CPPM its Web API daemon (webapi) interface that enables the CPPM to integrate with it and efficiently send authenticated user identity information to the NFX Series device. The NFX Series Web API daemon acts as an HTTP server in that it implements part of the RESTful Web services that supports concurrent HTTP and HTTPS requests. In this relationship, the CPPM is the client. The Web API

daemon is restricted to processing only HTTP/HTTPS requests. Any other type of request it receives generates an error message.



**WARNING:** If you are deploying the integrated ClearPass Web API function and Web management at the same time, you must ensure that they use different HTTP or HTTPS service ports.

However, for security considerations, we recommend that you use HTTPS instead of HTTP. HTTP is supported primarily for debugging purposes.

The Web API daemon runs on the master Routing Engine in a chassis cluster environment. After an Chassis Cluster switchover, the daemon will start automatically on the new master Routing Engine. It has no effect on the Packet Forwarding Engine.

## ClearPass Authentication Table

After the NFX Series device receives information posted to it from the CPPM, the device extracts the user authentication and identity information, analyzes it, and distributes it to the appropriate processes for handling. The device creates a ClearPass authentication table on the Packet Forwarding Engine side to hold this user information. When the device receives the information sent to it from ClearPass, it generates entries in the ClearPass authentication table for the authenticated users. When the device receives an access request from a user, it can check its ClearPass authentication table to verify that the user is authenticated, and then apply the security policy that matches the traffic from the user.

## Using HTTPS or HTTP for the Connection Protocol Between ClearPass and the NFX Series Device

When you configure the NFX Series Web API, you specify a certificate key if you are using HTTPS as the connection protocol. To ensure security, the HTTPS default certificate key size is 2048 bytes. If you do not specify a certificate size, the default size is assumed. There are three methods that you can use to specify a certificate:

- Default certificate
- Certificate generated by PKI
- Custom certificate and certificate key

The NFX Series Web API supports only the Privacy-Enhanced Mail (PEM) format for the certificate and certificate key configuration.

If you enable the Web API on the default ports—HTTP (8080) or HTTPS (8443)—you must enable host inbound traffic on the ports. If you enable it on any other TCP port, you must enable host inbound traffic specifying the parameter **any-service**. For example:

```
user@host# set security zones security-zone trust host-inbound-traffic system-services  
any-service
```

## Ensuring the Integrity of Data Sent from ClearPass to the NFX Series Device

The following requirements ensure that the data sent from the CPPM is not compromised:

- The Web API implementation is restricted to processing only HTTP/HTTPS POST requests. Any other type of request that it receives generates an error message.
- The Web API daemon analyzes and processes HTTP/HTTPS requests from only the following dedicated URL:

```
/api/userfw/v1/post-entry
```

- The HTTP/HTTPS content that the CPPM posts to the NFX Series device must be consistently formatted correctly. The correct XML format indicates a lack of compromise, and it ensures that user identity information is not lost.

## Data Size Restrictions and Other Constraints

The following data size restrictions and limitations apply to the CPPM:

- The CPPM must control the size of the data that it posts. Otherwise the Web API daemon is unable to process it. Presently the Web API can process a maximum of 2 megabytes of data.
- The following limitations apply to XML data for role and device posture information. The Web API daemon discards XML data sent to it that exceeds these amounts (that is, the overflow data):
  - The NFX Series device can process a maximum of 209 roles.
  - The NFX Series device supports only one type of posture with six possible posture tokens, or values. Identity information for an individual user can have only one posture token.



**NOTE:** The CPPM checks the health and posture of a device and it can send that information to the NFX Series device as part of the user information that it posts. You cannot define posture on the NFX Series device. Also, the NFX Series device does not check posture information that it receives.

## Posture States and the Posture Group

User, role, and posture token fields are distinct in the context of the CPPM. Each set of user identity information contains user and role (group) identity and a posture token. Because the NFX Series device supports only user and role (group) fields, the posture token value is mapped to a role by adding the prefix **posture-**. You can then use that role in a security policy as a group and that policy will be applied to all traffic that matches the policy.

The predefined posture identity states are:

- posture-healthy (HEALTHY)
- posture-checkup (CHECKUP)
- posture-transition (TRANSITION)
- posture-quarantine (QUARANTINE)
- posture-infected (INFECTED)
- posture-unknown (UNKNOWN)

## Example: Configuring the NFX Series Integrated ClearPass Feature to Allow the Device to Receive User Authentication Data from ClearPass

---

The NFX Series device and the ClearPass Policy Manager (CPPM) collaborate to control access to your protected resources and to the Internet. To carry this out, the NFX Series device must authenticate users in conjunction with applying security policies that match their requests. For the integrated ClearPass authentication and enforcement feature, the NFX Series device relies on ClearPass as its authentication source.

The Web API function, which this example covers, exposes to the CPPM an API that enables it to initiate a secure connection with the NFX Series device. The CPPM uses this connection to post user authentication information to the NFX Series device. In their relationship, the NFX Series device acts as an HTTPS server for the CPPM client.

- [Requirements on page 72](#)
- [Overview on page 73](#)
- [Configuration on page 77](#)

## Requirements

This section defines the software and hardware requirements for the topology for this example. See [Figure 5 on page 77](#) for the topology design.

The hardware and software components are:

- Aruba ClearPass Policy Manager (CPPM). The CPPM is configured to use its local authentication source to authenticate users.



**NOTE:** It is assumed that the CPPM is configured to provide the NFX Series device with user authentication and identity information, including the username, a list of the names of any groups that the user belongs to, the IP addresses of the devices used, and the device posture token.

- NFX Series device running Junos OS that includes the integrated ClearPass feature.
- A server farm composed of six servers, all in the servers-zone:

- marketing-server-protected (203.0.113.23 )
  - human-resources-server (203.0.113.25 )
  - accounting-server (203.0.113.72)
  - public-server (192.0.2.96)
  - corporate-server (203.0.113.71)
  - sales-server (203.0.113.81)
- AC 7010 Aruba Cloud Services Controller running ArubaOS.
  - Aruba AP wireless access controller running ArubaOS.

The Aruba AP is connected to the AC7010.

Wireless users connect to the CPPM through the Aruba AP.

- Juniper Networks EX4300 switch used as the wired 802.1 access device.

Wired users connect to the CPPM using the EX4300 switch.


- Six end-user systems:
  - Three wired network-connected PCs running Microsoft OS
  - Two BYOD devices that access the network through the Aruba AP access device
  - One wireless laptop running Microsoft OS

## Overview

You can configure identity-aware security policies on the NFX Series device to control a user's access to resources based on username or group name, not the IP address of the device. For this feature, the NFX Series device relies on the CPPM for user authentication. The NFX Series device exposes to ClearPass its Web API (webapi) to allow the CPPM to integrate with it. The CPPM posts user authentication information efficiently to the NFX Series device across the connection. You must configure the Web API function to allow the CPPM to initiate and establish a secure connection. There is no separate Routing Engine process required on the NFX Series device to establish a connection between the NFX Series device and the CPPM.

[Figure 4 on page 74](#) illustrates the communication cycle between the NFX Series device and the CPPM, including user authentication.

**Figure 4: ClearPass and NFX Series Device Communication and User Authentication Process**

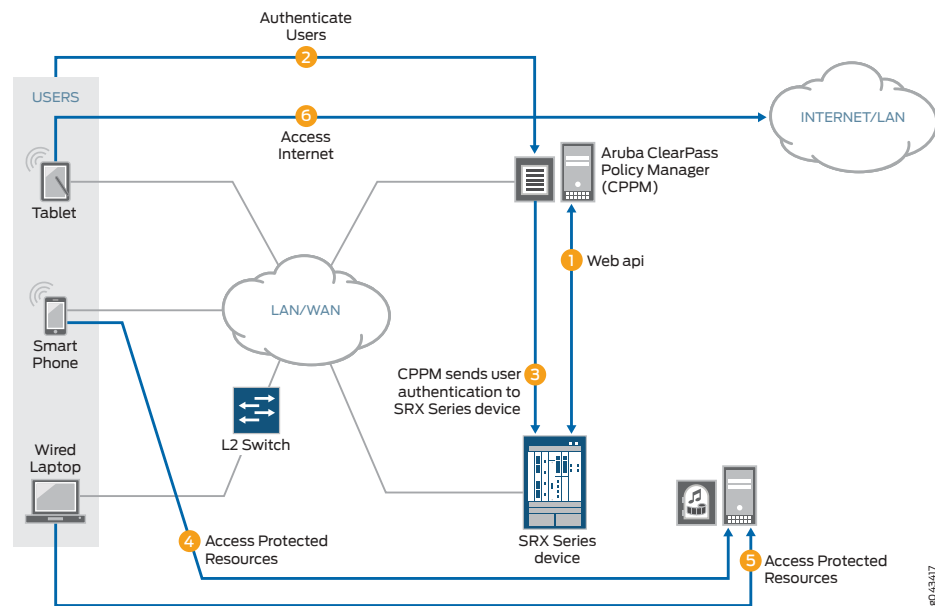

As depicted, the following activity takes place:

1. The CPPM initiates a secure connection with the NFX Series device using Web API.
2. Three users join the network and are authenticated by the CPPM.
  - A tablet user joins the network across the corporate WAN.
  - A smartphone user joins the network across the corporate WAN.
  - A wireless laptop user joins the network from a wired laptop connected to a Layer 2 switch that is connected to the corporate LAN.
3. The CPPM sends the user authentication and identity information for the users who are logged in to the network to the NFX Series device in POST request messages using the Web API.

When traffic from a user arrives at the NFX Series device, the NFX Series device:

- Identifies a security policy that the traffic matches.
  - Locates an authentication entry for the user in the ClearPass authentication table.
  - Applies the security policy to the traffic after authenticating the user.
4. Traffic from the smartphone user who is requesting access to an internal, protected resource arrives at the NFX Series device. Because all of the conditions identified in Step 3 are met and the security policy permits it, the NFX Series device allows the user connection to the protected resource.
  5. Traffic from the wired laptop user who is requesting access to a protected resource arrives at the NFX Series device. Because all of the conditions identified in Step 3 are met and the security policy permits it, the NFX Series device allows the user connection to the protected resource.

met and the security policy permits it, the NFX Series device allows the user connection to the resource.

6. Traffic from the tablet user who is requesting access to the Internet arrives at the NFX Series device. Because all of the conditions identified in Step 3 are met and the security policy permits it, the NFX Series device allows the user connection to the Internet.

The Web API daemon is not enabled by default for security reasons. When you start up the Web API daemon, by default it opens either the HTTP (8080) or the HTTPS (8443) service port. You must ensure that one of these ports is configured, depending on which version of the HTTP protocol you want to use. We recommend that you use HTTPS for security reasons. Opening these ports makes the system more vulnerable to service attacks. To protect against service attacks that might use these ports, the Web API daemon will start up only after you enable it.

The Web API is a RESTful Web services implementation. However, it does not fully support the RESTful Web services. Rather, it acts as an HTTP or HTTPS server that responds to requests from the ClearPass client.



**NOTE:** The Web API connection is initialized by the CPPM using the HTTP service port (8080) or HTTPS service port (8443). For ClearPass to be able to post messages, you must enable and configure the Web API daemon.

To mitigate abuse and protect against data tampering, the Web API daemon:

- Requires ClearPass client authentication by HTTP or HTTPS basic user account authentication.
- Allows data to be posted to it only from the IP address configured as the client source. That is, it allows HTTP or HTTPS POST requests only from the ClearPass client IP address, which in this example is 192.0.2.199.
- Requires that posted content conforms to the established XML data format. When it processes the data, the Web API daemon ensures that the correct data format was used.



**NOTE:** Note that if you deploy Web management and the NFX Series device together, they must run on different HTTP or HTTPS service ports.

See [“Understanding How ClearPass Communicates with the NFX Series Device Using the Web API” on page 69](#) for further information on how this feature protects against data tampering.

The NFX Series UserID daemon processes the user authentication and identity information and synchronizes it to the ClearPass authentication table on the Packet Forwarding Engine. The NFX Series device creates the ClearPass authentication table to be used for information received only from the CPPM. The ClearPass authentication table does not contain user authentication information from other authentication sources. The NFX Series device checks the ClearPass authentication table to authenticate users attempting

to access protected network resources on the Internet using wired or wireless devices and local network resources.

For the CPPM to connect to the NFX Series device and post authentication information, it must be certified using HTTPS authentication. The Web API daemon supports three methods that can be used to refer to an HTTPS certificate: a default certificate, a PKI local certificate, and a customized certificate implemented through the certificate and certificate-key configuration statements. These certificate methods are mutually exclusive.

This example uses HTTPS for the connection between the CPPM and the NFX Series device. To ensure security, the integrated ClearPass feature default certificate key size is 2048 bits.

Whether you use any method—the default certificate, a PKI-generated certificate, or a custom certificate—for security reasons, you must ensure that the certificate size is 2048 bits or greater.

The following example shows how to generate a certificate and key using PKI:

```
user@host>request security pki generate-key-pair certificate-id aruba size 2048
user@host>request security pki local-certificate generate-self-signed certificate-id aruba
domain-name mycompany.net email jxchan@mycompany.net ip-address 192.51.100.21
subject "CN= John Doe,OU=Sales ,O=mycompany.net ,L=MyCity ,ST=CA,C=US"
```


---

## Topology

Figure 5 on page 77 shows the topology used for the integrated ClearPass deployment examples.



Figure 5: Integrated ClearPass Authentication and Enforcement Deployment Topology

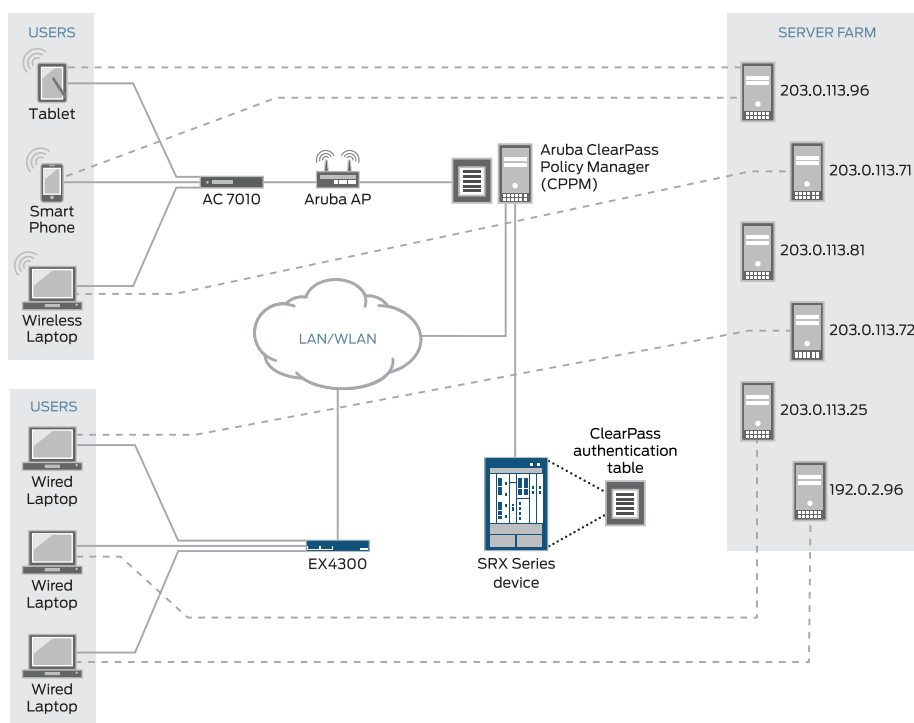

## Configuration

This section covers how to enable and configure the NFX Series Web API.



**NOTE:** You must enable the Web API. It is not enabled by default.

- [Configuring the NFX Series Web API Daemon on page 78](#)
- [Configuring the ClearPass Authentication Table Entry Timeout and Priority on page 80](#)

### CLI Quick Configuration

To quickly configure this example, copy the following statements, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the statements into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```
set system services webapi user sunny password i4%rgd
set system services webapi client 192.0.2.199
set system services webapi https port 8443
set system services webapi https default-certificate
set system services webapi debug-level alert
set interfaces ge-0/0/3.4 vlan-id 340 family inet address 192.51.100.21
set security zones security-zone trust interfaces ge-0/0/3.4 host-inbound-traffic
  system-services webapi-ssl
set security user-identification authentication-source aruba-clearpass priority 110
set security user-identification authentication-source local-authentication-table priority
  120
```

```

set security user-identification authentication-source active-directory-authentication-table
priority 125
set security user-identification authentication-source firewall-authentication priority 150
set security user-identification authentication-source unified-access-control priority 200

```

### Configuring the NFX Series Web API Daemon

**Step-by-Step Procedure** Configuring the Web API allows the CPPM to initialize a connection to the NFX Series device. No separate connection configuration is required.

It is assumed that the CPPM is configured to provide the NFX Series device with authenticated user identity information, including the username, the names of any groups that the user belongs to, the IP addresses of the devices used, and a posture token.

Note that the CPPM might have configured role mappings that map users or user groups to device types. If the CPPM forwards the role mapping information to the NFX Series device, the device treats the role mappings as groups. The NFX Series device does not distinguish them from other groups.

**Step-by-Step Procedure** To configure the Web API daemon:

1. Configure the Web API daemon (webapi) username and password for the account.

This information is used for the HTTPS certification request.

```

[edit system services]
user@host# set webapi user sunny password i4%rgd

```

2. Configure the Web API client address—that is, the IP address of the ClearPass webserver's data port.

The NFX Series device accepts information from this address only.



**NOTE:** The ClearPass webserver data port whose address is configured here is the same one that is used for the user query function, if you configure that function.

```

[edit system services]
user@host# set webapi client 192.0.2.199

```



**NOTE:** The NFX Series device supports both IPv4 and IPv6 addresses to configure the Web API client address.

3. Configure the Web API daemon HTTPS service port.

If you enable the Web API service on the default TCP port 8080 or 8443, you must enable host inbound traffic on that port.

In this example, the secure version of the Web API service is used (webapi-ssl), so you must configure the HTTPS service port, 8443.

```
[edit system services]
user@host# set webapi https port 8443
```

4. Configure the Web API daemon to use the HTTPS default certificate.

```
[edit system services]
user@host# set webapi https default-certificate
```

5. Configure the trace level for the Web API daemon.

The supported trace levels are notice, warn, error, crit, alert, and emerg. The default value is error.

```
[edit system services]
user@host# webapi debug-level alert
```

6. Configure the interface to use for host inbound traffic from the CPPM.

```
user@host# set interfaces ge-0/0/3.4 vlan-id 340 family inet address 192.51.100.21
```

7. Enable the Web API service over HTTPS host inbound traffic on TCP port 8443.

```
[edit security zones]
user@host# set security-zone trust interfaces ge-0/0/3.4 host-inbound-traffic
system-services webapi-ssl
```

**Results** From configuration mode, confirm your Web API configuration by entering the **show system services webapi** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user {
  sunny;
  password "$ABC123"; ## SECRET-DATA
}
client {
  192.0.2.199;
}
https {
  port 8443;
  default-certificate;
}
debug-level {
  alert;
}
```

From configuration mode, confirm the configuration for the interface used for host inbound traffic from the CPPM by entering the **show interfaces ge-0/0/3.4** command. If the

output does not display the intended configuration, repeat the verification process in this example to correct it.

```
vlan-id 340;
family inet {
    address 192.51.100.21/32;
}
```

From configuration mode, confirm your security zone configuration that allows host-inbound traffic from the CPPM using the secure Web API service (web-api-ssl) by entering the **show security zones security-zone trust** command. If the output does not display the intended configuration, repeat the verification process in this example to correct it.

```
interfaces {
    ge-0/0/3.4 {
        host-inbound-traffic {
            system-services {
                webapi-ssl;
            }
        }
    }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring the ClearPass Authentication Table Entry Timeout and Priority

#### Step-by-Step Procedure

This procedure configures the following information:

- The timeout parameter that determines when to age out idle authentication entries in the ClearPass authentication table.
- The ClearPass authentication table as the first authentication table in the lookup order for the NFX Series device to search for user authentication entries. If no entry is found in the ClearPass authentication table and there are other authentication tables configured, the NFX Series device will search them, based on the order that you set.

1. Set the timeout value that is used to expire idle authentication entries in the ClearPass authentication table to 20 minutes.

```
[edit services user-identification]
user@host# set authentication-source aruba-clearpass authentication-entry-timeout
20
```

The first time that you configure the NFX Series device to integrate with an authentication source, you must specify a timeout value to identify when to expire idle entries in the ClearPass authentication table. If you do not specify a timeout value, the default value is assumed.

- default = 30 minutes

- range = If set, the timeout value should be within the range [10,1440 minutes]. A value of 0 means that the entry will never expire.
2. Set the authentication table priority order to direct the NFX Series device to search for user authentication entries in the ClearPass authentication table first. Specify the order in which other authentication tables are searched if an entry for the user is not found in the ClearPass authentication table.



**NOTE:** You need to set this value if the ClearPass authentication table is *not* the only authentication table on the Packet Forwarding Engine.

[edit security user-identification]

user@host# set authentication-source aruba-clearpass priority 110

user@host# set authentication-source local-authentication-table priority 120

user@host# set authentication-source active-directory-authentication-table priority 125

user@host# set authentication-source firewall-authentication priority 150

user@host# set authentication-source unified-access-control priority 200

The default priority value for the ClearPass authentication table is 110. You must change the local authentication table entry from 100 to 120 to direct the NFX Series device to check the ClearPass authentication table first if there are other authentication tables on the Packet Forwarding Engine. [Table 14 on page 81](#) shows the new authentication table search priority.

**Table 14: NFX Series Device Authentication Tables Search Priority Assignment**

| NFX Series Authentication Tables      | Set Value |
|---------------------------------------|-----------|
| ClearPass authentication table        | 110       |
| Local authentication table            | 100       |
| Active Directory authentication table | 125       |

**Results** From configuration mode, confirm that the timeout value set for aging out ClearPass authentication table entries is correct. Enter the **show services user-identification** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
authentication-source aruba-clearpass {
  authentication-entry-timeout 20;
}
```

**Related Documentation**

- [Understanding Enforcement of ClearPass User and Group Authentication on NFX Devices on page 83](#)

- [Understanding the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices on page 111](#)

## CHAPTER 8

# Configuring Integrated ClearPass Authentication and Enforcement

- [Understanding Enforcement of ClearPass User and Group Authentication on NFX Devices on page 83](#)
- [Example: Enforcing Security Policies on NFX Series Using Aruba ClearPass as the Authentication Source on page 92](#)

## Understanding Enforcement of ClearPass User and Group Authentication on NFX Devices

---

This topic describes how the NFX Series device enforces user and group authentication when a user attempts to access a resource. It also explains how the device handles information in the ClearPass authentication table user entries when a security policy that references a group in a user entry is removed. Understanding that process will help you troubleshoot issues related to group identity and give you insight into changes in the ClearPass authentication table user entries.

- [Understanding How the NFX Device Manages the ClearPass Authentication Table on page 83](#)
- [User Authentication Entries in the ClearPass Authentication Table on page 84](#)
- [Communication Between ClearPass and the NFX Series Device on page 86](#)
- [Understanding Domains and Interested Groups on page 89](#)
- [When a User Has Already Been Authenticated By Another Source on page 91](#)

## Understanding How the NFX Device Manages the ClearPass Authentication Table

The integrated ClearPass authentication and enforcement feature enables the NFX device and the Aruba ClearPass Policy Manager (CPPM) to collaborate in protecting your company's resources. It enables the device to apply firewall security policies to user traffic and to control user access to protected resources based on user or group identity. To ensure the identity of the user, the device relies on authenticated user information that it receives from the CPPM.

It is useful to understand how the device gets authenticated user identity information from the CPPM, generates entries in its ClearPass authentication table, and manages

those entries in relation to security policies and user events. Understanding these processes will help you to quickly identify and resolve related problems.

This topic focuses on:

- How the device obtains user identity information from the CPPM and manages it, and how you can use this information in security policies.
- How security policies that reference a group as the source (source-identity) have bearing on the groups listed in user entries in the ClearPass authentication table. Groups that are referenced by security policies are referred to as *interested groups*.

## User Authentication Entries in the ClearPass Authentication Table

In their collaboration, ClearPass acts as the authentication source for the NFX device. The CPPM sends to the device identity information about users that it has authenticated. The UserID daemon process in the device receives this information, processes it, and synchronizes it to the Packet Forwarding Engine side in the independent ClearPass authentication table that is generated for this purpose.

As administrator of the device, you can use the authenticated user identity information in security policies to control access to your protected resources and the Internet.

The collection of user identity information that the device obtains from the CPPM and uses to create entries in its global Routing Engine authentication table that is synchronized to its individual ClearPass authentication table is referred to as a mapping, or, more commonly, an IP-user mapping because the username and the related group list are mapped to the IP address of the user's device.

For each user authentication entry in the ClearPass authentication table, a group list identifies the groups that a user belongs to in addition to other information such as the posture token, which indicates state of the device, such as whether it is healthy.



**NOTE:** The integrated user firewall feature for both ClearPass and active directory authentication will manage up to 2048 sessions for each user for whom there is a user identity and authentication entry in the authentication table. There might be additional sessions associated with a user beyond the 2048 supported sessions, but they are not managed by integrated user firewall. When an authentication entry in an authentication table is deleted, integrated user firewall only closes sessions that are associated with that entry. It will not close sessions that it does not manage. That is, sessions that are not associated with the authentication entry are not closed.

---

You can use a username or a group name in security policies to identify a user and not rely directly on the IP address of the device used, because the IP address of the device is tied to the username and its groups in the ClearPass authentication table entry.





**NOTE:** For each user entry, the number of groups, or roles, in the entry cannot exceed 200. After the capacity is reached, additional roles are discarded and the following syslog message is sent:

```
userid_get_and_check_adauth_num: src_ip ip-address user domain:user
dropped.record numrecord-number has arrived max num of db
```

The CPPM posts user information to the device in the following format. The device does not use all of this information.

```
<userfw-entries>
  <userfw-entry>
    <source>Aruba ClearPass</source>
    <timestamp>2016-01-29T0310Z</timestamp>
    <operation>logon</operation>
    <IP>192.0.2.123</IP>
    <domain>my-company-domain</domain>
    <user>user1</user>
    <role-list>
      <role>human-resources-grp</role>
      <role>[User Authenticated],</role>
    </role-list>
    <posture>HEALTHY</posture>
    <device_category>Computer</device_category>
  </userfw-entry>
</userfw-entries>
```

Here is the format for a ClearPass authentication table entry for a user, followed by an example entry and a description of its components.

*IP-address, domain, user, user-group-list*

In the following example, the user belongs to two groups, the human-resources-grp group and the posture-healthy group. The device converts the posture information from the CPPM to a group name. You might configure a security policy that allows all users access to the marketing server if their devices belong to the posture-healthy group (role).

192.0.2.11 , my-company-domain, lin, human-resources-grp, posture-healthy

- IP address

This is the IP address of the device used.

- The name of the domain that the user belongs to.

In this example, the domain name is “my-company-domain.” The default domain name GLOBAL is used if a domain name is not provided.

- The username

The username is the user’s login name used to connect to the network, which, in this example, is lin.

This name is constant regardless of the device used.

When you configure a security policy whose source-identity tuple identifies the source of the traffic by username or group name, not by the IP address of the device used, it

is as if the security policy were device independent; it applies to the user's activity regardless of the device used.

- One or more groups that a user belongs to

It is here where the concept of *interested groups* and their relationship to security policies comes into play. An interested group is a group that is referenced in a security policy. The concept of interested groups is covered later in this topic.

Note that if a user is connected to the network using multiple devices, there might be more than one IP-user mapping for that user. Each mapping would have its own set of values—that is, domain name and group-list—in conjunction with the username and IP address.

For example, the following three IP address-to-username mappings might exist for the user `abe` who is connected to the network using three separate devices:

```
203.0.113.5 abe, marketing-grp, posture-healthy
192.0.2.34 abe, marketing-grp, posture-transition
203.0.133.19 abe, marketing-grp, posture-unknown
```

Assume that the device receives a logout message for `110.208.132.23, abe`. The following partial user authentication entry shows that the user `abe` is now logged in to the network using only two devices:

```
192.0.2.34 abe, marketing-grp, posture-transition
203.0.133.19 abe, marketing-grp, posture-unknown
```



**WARNING:** If more than 2048 sessions are associated with a single authentication entry in the ClearPass authentication table, the integrated user firewall for ClearPass will not manage the sessions that caused the overflow. Consequently, there will be no user identification information for those sessions reported in the session close log for those sessions.

---

## Communication Between ClearPass and the NFX Series Device

Here is a summary of how the NFX Series device and ClearPass communicate:


- A user joins the company network via a wired or wireless LAN.
- The CPPM authenticates the user.
- The CPPM initiates a secure connection with the device using the integrated Web API.
- The UserID daemon gets the full IP-user mapping from the CPPM. For each authenticated user, the UserID daemon generates an entry in the Routing Engine authentication table.

The Routing Engine authentication table is common in that it holds authentication entries based on information from other authentication sources in addition to ClearPass.

For example, it might also hold entries for users authenticated by Microsoft Active Directory.

- The UserID daemon synchronizes the user authentication information from the Routing Engine authentication table to the ClearPass authentication table on the Packet Forwarding Engine. The ClearPass authentication table is dedicated to holding only ClearPass authentication information. See [Figure 6 on page 87](#).

**Figure 6: User Information from the CPPM to the Device Routing Engine Synchronized to the ClearPass Authentication Table**

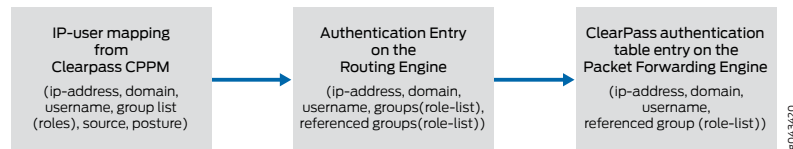

The device uses the authenticated user identity information in the following process. When a user attempts to access an internal, protected resource or the Internet, the device:

- Checks the traffic generated by the user for a matching security policy. The source traffic must match all of the tuples specified in the security policy. The match includes the source-identity field, which specifies a username or a group name.

To identify a match, the device compares the username or the group name with the source-identity specification that is configured in a security policy, along with all other security policy values.

- Checks the ClearPass authentication table for an authentication entry for the user, if a security policy match was found.


If it does not find an entry in the ClearPass authentication table, the device checks other local authentication tables, in the order that you specified, until a match is found. However, it does not check other local authentication tables if the user query function is configured. See *Understanding the Integrated ClearPass Authentication and Enforcement User Query Function*.



**NOTE:** The device can query the CPPM for individual user information, under certain circumstances, when it has not already received that information from the CPPM. This feature is referred to as user query.

[Figure 7 on page 88](#) illustrates the connection and communication between the device and the CPPM. It also shows the paths entailed in authenticating users and allowing them access to the Internet and internal, protected resources.

**Figure 7: Communication between ClearPass and the Device, and User Authentication Process**

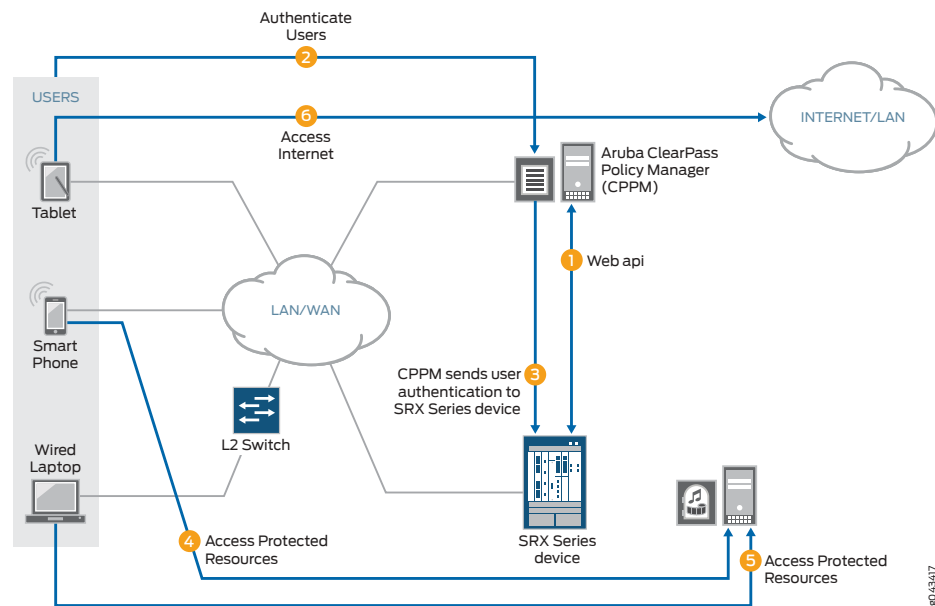

As [Figure 7 on page 88](#) depicts, the following activity takes place:

1. The CPPM initiates a secure connection with the device using the Web API.
2. Three users join the network and are authenticated by the CPPM.
  - A tablet user joins the network across the corporate WAN.
  - A smartphone user joins the network across the corporate WAN.
  - A wireless laptop user joins the network from a wired laptop connected to a Layer 2 switch that is connected to the corporate LAN.
3. The CPPM sends the user authentication and identity information for the users who are logged in to the network to the device in POST request messages using the Web API.

When traffic from a user arrives at the device, the device:

- Identifies a security policy that the traffic matches.
  - Locates an authentication entry for the user in the ClearPass authentication table.
  - Applies the security policy to the traffic after authenticating the user.
4. Traffic from the smartphone user who is requesting access to an internal, protected resource arrives at the device. Because all of the conditions identified in Step 3 are met and the security policy permits it, the device allows the user connection to the protected resource.

5. Traffic from the wired laptop user who is requesting access to a protected resource arrives at the device. Because all of the conditions identified in Step 3 are met and the security policy permits it, the device allows the user connection to the resource.
6. Traffic from the tablet user who is requesting access to the Internet arrives at the device. Because all of the conditions identified in Step 3 are met and the security policy permits it, the device allows the user connection to the Internet.

## Understanding Domains and Interested Groups

How the user identity group information is managed on the NFX Series device is dominated by two concepts:

- Domain group

The device follows the usual course in regard to how it handles usernames in domain namespaces. It makes use of the namespace to distinguish names that are the same—such as **admin**—but that are from different sources and are in different domains. Because they belong to different domains, the names are not in conflict.

Any group that is part of an IP-user mapping will always belong to a domain, whether that domain is a specific domain or the GLOBAL domain. If a domain name is not specified in the IP-user mapping, then the GLOBAL domain is assumed.

[Table 15 on page 89](#) illustrates how the domain for a group is determined, based on the IP-user mapping information obtained from the CPPM.

**Table 15: Assigning a Domain to a Group**

Does the IP-User Mapping Contain a Domain Name?	What Domain Is Applied to the Group?
<p>No</p> <p>For example:</p> <p style="padding-left: 40px;">IP, , user1, group-list</p> <p>The second comma serves as a placeholder for the domain name and the GLOBAL domain is applied.</p>	<p>Groups included in group-list belong to the GLOBAL domain.</p>
<p>Yes</p> <p>For example:</p> <p style="padding-left: 40px;">IP, domain1, user1, group-list</p> <p><b>NOTE:</b> In this example, the IP-user mapping specifies the domain name as domain1.</p>	<p>The domain name, domain1, is included in the IP-user mapping from the CPPM, and it is used. It is retained in the entry for the authenticated user in the ClearPass authentication table on the Packet Forwarding Engine.</p>

- Interested group

A group qualifies as an *interested group* if it is referenced by a security policy—that is, if it is specified in a policy's source-identity field. On the Routing Engine authentication table, each user entry contains a group referenced by a policy list that identifies the names of the groups for which a security policy exists. If a group included in a user entry

is not currently used in a security policy, it is not included in this list. A group can move in and out of the groups referenced by a policy list.

- Interested group lists

An interested group list, or a list of groups referenced by policies, is a subset of overall groups. It is the intersection of the group list in a user authentication entry and the source-identity list for security policies. That is, any group included in a ClearPass authentication table user entry qualifies as an interested group. The Routing Engine synchronizes to the user entry in the ClearPass authentication table on the Packet Forwarding Engine only those groups that are referenced by security policies.

Here is how it works:

- The UserID daemon gets the full IP-user role (group) mapping from the CPPM.
- For each group, the UserID daemon identifies whether it is an interested group by determining if there is a security policy that references it. Any qualifying groups are included in the groups referenced by a policy list on the Routing Engine. The UserID daemon synchronizes to the user entry in the ClearPass authentication table on the Packet Forwarding Engine interested groups along with the rest of the user authentication and identity information.

The interested groups list for a user entry on the Routing Engine can change, based on the following events:

- A new security policy is configured that references a group included in the user entry on the Routing Engine but that is not already in the entry's referenced groups list.
- A currently configured security policy that references a group in its source-identity is deleted.

Consider the following example:

- Assume that the CPPM posted the following information for two users to the device:  
  
192.51.100.1, abe, group1, group2, group3, group4, healthy  
192.0.2.21, john, group1, group5, healthy
- After the device maps the posture, defining it as a group, the two user entries in the device Routing Engine authentication table appear as follows:  
  
192.51.100.1, abe, group1, group2, group3, group4, posture-healthy  
192.0.2.21, john, group1, group5, posture-healthy
- Assume that several security policies include source-identity fields that reference one of the following: group1, group3, posture-healthy.

The intersection of the preceding sets—the original group list and the list of security policies that refer to the groups—results in the following interested groups list:

- For the user john, the groups referenced by policy list includes group1 and posture-healthy.
- For the user abe, the groups referenced by policy list includes group1, group3, and posture-healthy.

Now suppose that the security policy whose source-identity field specified group1 was deleted. The groups referenced by policy lists for the user authentication entries for the two users—john and abe—would be changed, producing the following results:

- For the user john, the list would include only posture-healthy.
- For the user abe, the list would include group3 and posture-healthy.

Table 16 on page 91 shows how a security policy that references a group affects the ClearPass authentication table. It also shows the effect on the ClearPass authentication table when a group is *not* referenced by a security policy, and therefore is not an interested group.

**Table 16: Interested Groups: Effect on the ClearPass Authentication Table**

Security Policies Configuration and Modification	Resulting Effect on ClearPass Authentication Table Packet Forwarding Engine Entries
<b>Case 1:</b>  The device gets the IP-user mapping for a user from the CPPM.  None of the groups in the user mapping are referenced by security policies.	
IP-user mapping from the CPPM:  203.0.113.9, user1, g1, g2, g3, g4	The user authentication entry written to the ClearPass authentication table in the Packet Forwarding Engine for this user does not contain any groups.  203.0.113.9, user1
<b>Case 2:</b>  The device gets the IP-user mapping for a user from the CPPM. It checks the groups list against the security policies list and finds that two of the groups are referenced by security policies.	
IP-user mapping on the Routing Engine:  192.0.2.1, domain1, user2, g1, g2, g3, g4	The user authentication entry written to the ClearPass authentication table on the Packet Forwarding Engine for this user includes the following groups that are included in the groups referenced by the policy list on the Routing Engine:  192.0.2.1, domain1, user2, g2, g4

## When a User Has Already Been Authenticated By Another Source

It can happen that the device Routing Engine authentication table and the individual Microsoft Active Directory authentication table on the Packet Forwarding Engine, for example, contain an entry for a user who was authenticated by Active Directory. As usual, the CPPM sends the IP-user mapping for the user to the device. The device must resolve the problem because its Routing Engine authentication table is common to both Active Directory and ClearPass.

Here is how the device handles the situation:

- On the Routing Engine authentication table:
  - The device overwrites the Active Directory authentication entry for the user in its common Routing Engine authentication table with the newly generated one from the IP-user mapping for the user from the CPPM.

There is now no IP address or username conflict.

- On the Packet Forwarding Engine:
  - The device deletes the existing Active Directory authentication entry for the user from the Active Directory authentication table.
- The device generates a new entry for the CPPM-authenticated user in the Packet Forwarding Engine ClearPass authentication table.

Traffic associated with the IP-user mapping entry will initiate new sessions based on user authentication in the ClearPass authentication table.

---

## Example: Enforcing Security Policies on NFX Series Using Aruba ClearPass as the Authentication Source

---

This example covers how to configure security to protect your resources and control access to the internet using the NFX Series device integrated ClearPass authentication and enforcement feature, which relies on the Aruba ClearPass Policy Manager as its authentication source. The NFX Series integrated ClearPass feature allows you to configure security policies that control access to company resources and the Internet by identifying users by username, group name, or the name of a role that ties together a group of users and a device type.

Today's network environments are more open to attacks of various kinds because they support *anywhere, anytime, any device* access, to a greater or lesser degree, and they allow a user to use multiple concurrently network-connected devices. Because it allows you identify the user by username, the integrated ClearPass authentication and enforcement feature narrows the security gap that these capabilities introduce.

For details on how user authentication and identity information is conveyed from the CPPM to the NFX Series device, see the following topics:

- [Understanding How ClearPass Communicates with the NFX Series Device Using the Web API on page 69](#)
- [Understanding the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices on page 111](#)

The example covers the following processes:

- How to control access at the user level based on username or group name, not device IP address.



You can use the source-identity parameter in a security policy to specify the name of a user or the name of a group of users whose authentication is provided by the CPPM. The policy is applied to traffic generated by the users when they attempt to access a protected resource or the Internet regardless of the device used. The access control is tied to the user's name, and not directly to the IP address of the user's device.



**NOTE:** You can configure different security policies for a single user that specify different actions, differentiated by the zones and the destination addresses specified or a group that the user belongs to.

- How to display and interpret the contents of the ClearPass authentication table.

The NFX Series device creates the ClearPass authentication table to contain user authentication and identity information that it receives from the CPPM. The device refers to the table to authenticate a user who requests access to a resource.

The ClearPass authentication table contents are dynamic. They are modified to reflect user activity in response to various events and also in regard to security policies that reference groups.

For example, when a user logs out of the network or in to the network, the ClearPass authentication table is modified, as is the case when a user is removed from a group or a referenced security policy that specifies a group that the user belongs to is deleted. In the latter case, the user entry no longer shows the user as belonging to that group.

In this example, the ClearPass authentication table contents are displayed to depict changes made because of two events. The content for the users is displayed:

- Before and after a specific user logs out of the network
- Before and after a referenced security policy is deleted

The entry for the user who belonged to the group referenced by the security policy is displayed before and after the policy is deleted.

- [Requirements on page 94](#)
- [Overview on page 94](#)
- [Configuration on page 97](#)
- [Verification on page 107](#)

## Requirements

This section defines the software and hardware requirements for the topology for this example. See [Figure 8 on page 97](#) for the topology design.

The hardware and software components are:

- Aruba ClearPass. The ClearPass Policy Manager (CPPM) is configured to use its local authentication source to authenticate users.



**NOTE:** It is assumed that the CPPM is configured to provide the NFX Series device with user authentication and identity information, including the username, a list of the names of any groups that the user belongs to, the IP addresses of the devices used, and the device posture token.

- NFX Series device running Junos OS that includes the integrated ClearPass feature.
- A server farm composed of six servers, all in the servers-zone:
  - marketing-server-protected (203.0.113.23 )
  - human-resources-server (203.0.113.25 )
  - accounting-server (203.0.113.72)
  - public-server (203.0.113.62)
  - corporate-server (203.0.113.71)
  - sales-server (203.0.113.81)

- AC 7010 Aruba Cloud Services Controller running ArubaOS.
- Aruba AP wireless access controller running ArubaOS.

The Aruba AP is connected to the AC7010.

Wireless users connect to the CPPM through the Aruba AP.

- Juniper Networks EX4300 switch used as the wired 802.1 access device.

Wired users connect to the CPPM using the EX4300 switch.

- Six end-user systems:
  - Three wired network-connected PCs running Microsoft OS
  - Two BYOD devices that access the network through the Aruba AP access device
  - One wireless laptop running Microsoft OS

## Overview

In its capacity as the authentication source for the integrated ClearPass feature, the CPPM posts to the NFX Series device user authentication and identity information. When it receives this information, the NFX Series UserID daemon processes it and generates

entries for the authenticated users in the Routing Engine authentication table and then synchronizes that information to the ClearPass authentication table on the Packet Forwarding Engine side.

The NFX Series device requires the user authentication and identity information to verify that a user is authenticated when the user makes an access request and the traffic generated from the user's device arrives at the NFX Series device. If a security policy exists that specifies in the source-identity parameter the username or the name of a group that the user belongs to, the NFX Series device searches the contents of its ClearPass authentication table for an entry for that user.

If it does not find an entry for the user in its ClearPass authentication table, the NFX Series device can search its other authentication tables, if you have configured a search order that includes them. See [“Example: Configuring the NFX Series Integrated ClearPass Feature to Allow the Device to Receive User Authentication Data from ClearPass” on page 72](#) for information about the authentication table search order.

The integrated ClearPass feature allows you to create identity-aware security policies configured to match traffic issued by users based on their username or the name of a group that they belong to.



**NOTE:** You configure role mappings on the CPPM, not on the NFX Series device.

For example, a device type role mapping might tie user identities to company-owned computers. You could specify this role as a group in a security policy configured to apply to all users who are mapped to the rule. In this case, the conditions set by CPPM for the rule—use of company-owned computer—would apply to all users mapped to the rule. The NFX Series device does not consider the conditions, but rather accepts the rule from the CPPM.

The following configurations included in this example cover security policies that are applicable based on the type of device used as defined by the CPPM through rule mappings. It is assumed that the CPPM posted to the NFX Series device the following mapped rules that are used as groups in security policies:

- marketing-access-for-pcs-limited-group

Maps jxchan to the device type PC.

The policy that specifies marketing-access-for-pcs-limited-group in its source-identity field allows jxchan, and other users who are mapped to it, access to the marketing-server-protected server using their PC, whether it is company owned or not.

- accounting-grp-and-company-device

Maps users who belong to accounting groups using company devices. The CPPM sends the role accounting-grp-and-company-device to the NFX Series device. The mapping is done on the CPPM by role mapping rules.

The policy that specifies accounting-grp-and-company-device in its source identity field allows users who are mapped to the rule to access protected resources on the

accounting-server. The group accounting-grp is mapped to the rule. Therefore the mapped rule applies to the members of accounting-grp.

The user viki2 belongs to accounting-grp. If all conditions apply—that is, if viki2 is using a company-owned device and the policy permits access—she is allowed access to the resources on accounting-server. But, recall that the NFX Series device does not analyze the rule. Rather it applies it to all users who are mapped to it by the CPPM.

- guest-device-byod

Maps the guest group to the device type byod—that is, any user-owned device brought to the network.

The policy that specifies guest-device-byod in its source identity field denies users who are mapped to the rule access to all servers in the server zone if they are using smartphones or other user-owned devices. The username guest2 is mapped to this rule by the CPPM.

For all cases, if the users are allowed or denied access according to the security policy conditions, you can assume that the following conditions exist:

- The CPPM posted the correct authentication information for the users and groups to the NFX Series device.
- The NFX Series device processed the authenticated user information correctly and generated entries for the users and groups in its ClearPass authentication table.

[Table 17 on page 96](#) summarizes the users, their groups, and the zones to which they belong. All users belong to the default GLOBAL domain.

**Table 17: Authenticated User Information for Security Policy Example**

User	Group	Zone
Abe (abew1)	<ul style="list-style-type: none"> <li>• marketing-access-limited-grp</li> </ul>	marketing-zone
John (jxchan)	<ul style="list-style-type: none"> <li>• posture-healthy</li> <li>• marketing-access-for-pcs-limited-group</li> <li>• marketing-general</li> <li>• sales-limited</li> <li>• corporate-limited</li> </ul>	marketing-zone
Lin (lchen1)	<ul style="list-style-type: none"> <li>• posture-healthy</li> <li>• human-resources-grp</li> <li>• accounting-limited</li> <li>• corporate-limited</li> </ul>	human-resources-zone
Viki (viki2)	<ul style="list-style-type: none"> <li>• posture-healthy</li> <li>• accounting-grp</li> <li>• accounting-grp-and-company-device</li> <li>• corporate-limited</li> </ul>	accounting-zone


Table 17: Authenticated User Information for Security Policy Example (continued)

User	Group	Zone
guest1	<ul style="list-style-type: none"> <li>posture-healthy</li> <li>guest</li> </ul>	public-zone
guest2	<ul style="list-style-type: none"> <li>posture-healthy</li> <li>guest-device-byod</li> </ul>	public-zone

### Topology

Figure 8 on page 97 shows the topology for this example.

Figure 8: Topology for the Integrated ClearPass Authentication Enforcement Through Security Policies Example

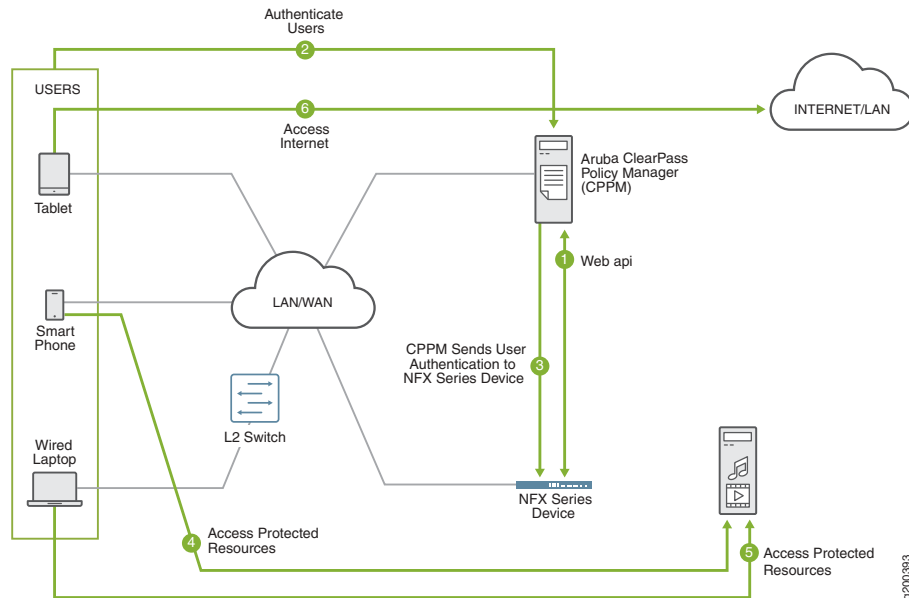

### Configuration

This section covers how to configure the NFX Series device to include security policies that match traffic issued by users authenticated by the CPPM.

- [Configuring Interfaces, Zones, and an Address Book on page 100](#)
- [Configuring Identity-Aware Security Policies to Control User Access to Company Resources on page 103](#)
- [Results on page 106](#)

#### CLI Quick Configuration

To quickly configure this example, copy the following statements, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the statements into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```
set interfaces ge-1/0/3 vlan-tagging
set interfaces ge-1/0/3.0 vlan-id 300 family inet address 203.0.113.45/24
set interfaces ge-1/0/3.1 vlan-id 310 family inet address 192.0.2.18/24
set interfaces ge-1/0/3.2 vlan-id 320 family inet address 192.0.2.14/24
set interfaces ge-1/0/4 vlan-tagging
set interfaces ge-1/0/4.0 vlan-id 400 family inet address 192.0.2.16/24
set interfaces ge-1/0/4.1 vlan-id 410 family inet address 192.0.2.19/24
set security zones security-zone marketing-zone interfaces ge-1/0/3.0 host-inbound-traffic
  system-services all
set security zones security-zone marketing-zone interfaces ge-1/0/3.0 host-inbound-traffic
  protocols all
set security zones security-zone accounting-zone interfaces ge-1/0/3.1 host-inbound-traffic
  system-services all
set security zones security-zone accounting-zone interfaces ge-1/0/3.1 host-inbound-traffic
  protocols all
set security zones security-zone human-resources-zone interfaces ge-1/0/3.2
  host-inbound-traffic system-services all
set security zones security-zone human-resources-zone interfaces ge-1/0/3.2
  host-inbound-traffic protocols all
set security zones security-zone public-zone interfaces ge-1/0/4.0 host-inbound-traffic
  system-services all
set security zones security-zone public-zone interfaces ge-1/0/4.0 host-inbound-traffic
  protocols all
set security zones security-zone servers-zone interfaces ge-1/0/4.1 host-inbound-traffic
  system-services all
set security zones security-zone servers-zone interfaces ge-1/0/4.1 host-inbound-traffic
  protocols all
set security address-book servers-zone-addresses address marketing-server-protected
  203.0.113.23
set security address-book servers-zone-addresses address human-resources-server
  203.0.113.25
set security address-book servers-zone-addresses address accounting-server 203.0.113.72
set security address-book servers-zone-addresses address corporate-server 203.0.113.71
set security address-book servers-zone-addresses address public-server 203.0.113.91
set security address-book servers-zone-addresses attach zone servers-zone
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p1
  match source-address any destination address any
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p1
  match application any
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p1
  match source-identity "global\marketing-access-for-pcs-limited-group"
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p1
  then permit
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p2
  match source-address any destination address marketing-zone-protected
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p2
  match application any
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p2
  match source-identity "global\abew1"
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p2
  then permit
set security policies from-zone accounting-zone to-zone servers-zone policy acct-cp-device
  match source-address any destination address accounting-server
set security policies from-zone accounting-zone to-zone servers-zone policy acct-cp-device
  match application any
```

```
set security policies from-zone accounting-zone to-zone servers-zone policy acct-cp-device
  match source-identity "global\accounting-grp-and-company-device"
set security policies from-zone accounting-zone to-zone servers-zone policy acct-cp-device
  then permit
set security policies from-zone human-resources-zone to-zone servers-zone policy
  human-resources-p1 match source-address any destination-address corporate-server
set security policies from-zone human-resources-zone to-zone servers-zone policy
  human-resources-p1 match application any
set security policies from-zone human-resources-zone to-zone servers-zone policy
  human-resources-p1 match source-identity "global\corporate-limited"
set security policies from-zone human-resources-zone to servers-zone policy
  human-resources-p1 then permit
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p0
  match source-address any destination-address corporate-server
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p0
  match application any
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p0
  match source-identity "global\marketing-access-limited-grp"
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p0
  then permit
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p3
  match source-address any destination-address human-resources-server
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p3
  match application any
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p3
  match source-identity "global\sales-limited-group"
set security policies from-zone marketing-zone to-zone servers-zone policy marketing-p3
  then permit
set security policies from-zone public-zone to-zone servers-zone policy guest-allow-access
  match source-address any destination address public-server
set security policies from-zone public-zone to-zone servers-zone policy guest-allow-access
  match application any
set security policies from-zone public-zone to-zone servers-zone policy guest-allow-access
  match source-identity "global\guest"
set security policies from-zone public-zone to-zone servers-zone policy guest-allow-access
  then permit
set security policies from-zone public-zone to-zone servers-zone policy guest-deny-access
  match source-address any destination-address any
set security policies from-zone public-zone to-zone servers-zone policy guest-deny-access
  match application any
set security policies from-zone public-zone to-zone servers-zone policy guest-deny-access
  match source-identity "global\guest-device-byod"
set security policies from-zone public-zone to-zone servers-zone policy guest-deny-access
  then deny
```

## Configuring Interfaces, Zones, and an Address Book

---

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode*.

Configure the following interfaces and assign them to zones:

- ge-1/0/3.0 > marketing-zone
- ge-1/0/3.1 > human-resources-zone
- ge-1/0/3.2 > accounting-zone
- ge-1/0/4.0 > public-zone
- ge-1/0/4.1 > servers-zone

Because this example uses logical interfaces, you must configure VLAN tagging.

1. Configure interfaces for the NFX Series device:

```
[edit interfaces]
set ge-1/0/3 vlan-tagging
set ge-1/0/3.0 vlan-id 300 family inet address 203.0.113.45/24
set ge-1/0/3.1 vlan-id 310 family inet address 192.0.2.18/24
set ge-1/0/3.2 vlan-id 320 family inet address 192.0.2.14/24
set ge-1/0/4 vlan-tagging
set ge-1/0/4.0 vlan-id 400 family inet address 192.0.2.16/24
set ge-1/0/4.1 vlan-id 410 family inet address 192.0.2.19/24
```

2. Configure zones.

```
[edit security zones]
user@host#set security-zone marketing-zone interfaces ge-1/0/3.0
host-inbound-traffic system-services all
user@host#set security-zone marketing-zone interfaces ge-1/0/3.0
host-inbound-traffic protocols all
user@host#set security-zone accounting-zone interfaces ge-1/0/3.1
host-inbound-traffic system-services all
user@host#set security-zone accounting-zone interfaces ge-1/0/3.1
host-inbound-traffic protocols all
user@host#set security-zone human-resources-zone interfaces ge-1/0/3.2
host-inbound-traffic system-services all
user@host#set security-zone human-resources-zone interfaces ge-1/0/3.2
host-inbound-traffic protocols all
user@host#set security-zone public-zone interfaces ge-1/0/4.0 host-inbound-traffic
system-services all
user@host#set security-zone public-zone interfaces ge-1/0/4.0 host-inbound-traffic
protocols all
user@host#set security-zone servers-zone interfaces ge-1/0/4.1 host-inbound-traffic
system-services all
user@host#set security-zone servers-zone interfaces ge-1/0/4.1 host-inbound-traffic
protocols all
```



3. Configure an address book containing the IP addresses of the servers to use as destination addresses in security policies.

```
[edit security address-book servers-zone-addresses]
user@host# set address marketing-server-protected 203.0.113.23
user@host# set address human-resources-server 203.0.113.25
user@host# set address accounting-server 203.0.113.72
user@host# set address corporate-server 203.0.113.71
user@host# set address public-server 203.0.113.91
```

4. Attach the servers-zone-addresses address book to servers-zone.

```
[edit security address-book]
user@host# set servers-zone-addresses attach zone servers-zone
```

**Results** From configuration mode, confirm your configuration for interfaces by entering the **show interfaces** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
ge-1/0/3 {
  unit 0 {
    vlan-id 300;
    family inet {
      address 203.0.113.45/24;
    }
  }
  unit 1 {
    vlan-id 310;
    family inet {
      address 192.0.2.18/24;
    }
  }
  unit 2 {
    vlan-id 320;
    family inet {
      address 192.0.2.14/24;
    }
  }
}
ge-1/0/4 {
  vlan-tagging;
  unit 0 {
    vlan-id 400;
    family inet {
      address 192.0.2.16/24;
    }
  }
  unit 1 {
    vlan-id 410;
    family inet {
      address 192.0.2.19/24;
    }
  }
}
```

From configuration mode, confirm your configuration for zones by entering the **show security zones** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
security-zone human-resources-zone {
  interfaces {
    ge-1/0/3.2 {
      host-inbound-traffic {
        system-services {
          all;
        }
        protocols {
          all;
        }
      }
    }
  }
}
security-zone accounting-zone {
  interfaces {
    ge-1/0/3.1 {
      host-inbound-traffic {
        system-services {
          all;
        }
        protocols {
          all;
        }
      }
    }
  }
}
security-zone marketing-zone {
  interfaces {
    ge-1/0/3.0 {
      host-inbound-traffic {
        system-services {
          all;
        }
        protocols {
          all;
        }
      }
    }
  }
}
security-zone servers-zone {
  interfaces {
    ge-1/0/4.1 {
      host-inbound-traffic {
        system-services {
          all;
        }
        protocols {
          all;
        }
      }
    }
  }
}
```

```

    }
  }
}
}
security-zone public-zone {
  interfaces {
    ge-1/0/4.0 {
      host-inbound-traffic {
        system-services {
          all;
        }
        protocols {
          all;
        }
      }
    }
  }
}
}

```

From configuration mode, confirm your configuration for the address book by entering the **show security address-book** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

servers-zone-addresses {
  address marketing-zone-protected 203.0.113.23 /32;
  address human-resources-server 203.0.113.25 /32;
  address accounting-server 203.0.113.72/32;
  address corporate-server 203.0.113.71/32;
  address public-server 203.0.113.91/32;
  attach {
    zone servers-zone;
  }
}

```

### Configuring Identity-Aware Security Policies to Control User Access to Company Resources

**Step-by-Step Procedure** This task entails configuring security policies that apply to a user's access to resources based on username or group name, and not the IP address of the device used.

Note that all users belong to the default GLOBAL domain.

1. Configure a security policy that specifies marketing-access-for-pcs-limited-group as the source-identity. It allows the user jxchan, who belongs to this group, access to any of the servers in the servers-zones when he is using a PC, whether it is a personal device or a company-owned device. The username jxchan is mapped by the CPPM to the rule marketing-access-for-pcs-limited-group.

[edit security policies]

```

user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p1
match source-address any destination address any
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p1
match application any

```

```
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p1
match source-identity "global\marketing-access-for-pcs-limited-group"
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p1
then permit
```

2. Configure a security policy that allows the user abew1 access to the marketing-zone-protected server (IP address 203.0.113.23 ) in the servers-zone regardless of the device that he uses.

```
[edit security policies]
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p2
match source-address any destination address marketing-zone-protected
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p2
match application any
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p2
match source-identity "global\abew1"
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p2
then permit
```

3. Configure a security policy that allows the user viki2 access to the accounting-server (IP address 203.0.113.72) in the servers-zone when she is using a company-owned device. The user viki2 belongs to accounting-grp which is mapped to the company-owned-device rule (accounting-grp-and-company-device) by the CPPM.

```
[edit security policies]
user@host# set from-zone accounting-zone to-zone servers-zone policy
acct-cp-device match source-address any destination-address accounting-server
user@host# set from-zone accounting-zone to-zone servers-zone policy
acct-cp-device match application any
user@host# set from-zone accounting-zone to-zone servers-zone policy
acct-cp-device match source-identity
"global\accounting-grp-and-company-device"
user@host# set from-zone accounting-zone to-zone servers-zone policy
acct-cp-device then permit
```

4. Configure a security policy that allows users who belong to the corporate-limited group limited access to the corporate-server server (IP address 203.0.113.71) in the servers-zone when they are initiating a request from the human-resources zone.

If the source-address were specified as "any", the policy would apply to other users who also belong to the corporate-limited group.

```
[edit security policies]
user@host# set from-zone human-resources-zone to-zone servers-zone policy
human-resources-p1 match source-address any destination-address
corporate-server
user@host# set from-zone human-resources-zone to-zone servers-zone policy
human-resources-p1 match application any
user@host# set from-zone human-resources-zone to-zone servers-zone policy
human-resources-p1 match source-identity "global\corporate-limited"
user@host# set from-zone human-resources-zone to servers-zone policy
human-resources-p1 then permit
```

5. Configure a security policy that allows the user `abewl` access to the corporate-server (IP address 203.0.113.71) server in the servers-zone. The user `abewl` belongs to marketing-access-limited-grp to which the security policy applies.

```
[edit security policies]
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p0
match source-address any destination-address corporate-server
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p0
match application any
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p0
match source-identity "global\marketing-access-limited-grp"
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p0
then permit
```

6. Configure a security policy that allows users who belong to the sales-limited-group access to the human-resources-server (IP address 203.0.113.81) server when they initiate a request from the marketing-zone. The user `jxchan` belongs to sales-limited-group.

```
[edit security policies]
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p3
match source-address any destination-address human-resources-server
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p3
match application any
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p3
match source-identity "global\sales-limited-group"
user@host# set from-zone marketing-zone to-zone servers-zone policy marketing-p3
then permit
```

7. Configure a security policy that allows users who belong to the guest group access to the public-server (IP address 203.0.113.91) in the servers-zone.

```
[edit security policies]
user@host# set from-zone public-zone to-zone servers-zone policy
guest-allow-access match source-address any destination-address public-server
user@host# set from-zone public-zone to-zone servers-zone policy
guest-allow-access match application any
user@host# set from-zone public-zone to-zone servers-zone policy
guest-allow-access match source-identity "global\guest"
user@host# set from-zone public-zone to-zone servers-zone policy
guest-allow-access then permit
```

8. Configure a security policy that denies users who belong to the guest-device-byod group access to any servers in the servers-zone when they use their own devices.

```
[edit security policies]
user@host# set from-zone public-zone to-zone servers-zone policy
guest-deny-access match source-address any destination-address any
user@host# set from-zone public-zone to-zone servers-zone policy
guest-deny-access match application any
user@host# user@host# set from-zone public-zone to-zone servers-zone policy
guest-deny-access match source-identity "global\guest-device-byod"
user@host# set from-zone public-zone to-zone servers-zone policy
guest-deny-access then deny
```

## Results

---

From configuration mode, confirm your security policies configuration for integrated ClearPass by entering the **show security policies** command.

If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
from-zone marketing-zone to-zone servers-zone {
  policy marketing-p1 {
    match {
      source-address any;
      destination-address any;
      application any;
      source-identity "global\marketing-access-for-pcs-limited-group";
    }
    then {
      permit;
    }
  }
  policy marketing-p2 {
    match {
      source-address any;
      destination-address marketing-zone-protected;
      application any;
      source-identity "global\abew1";
    }
    then {
      permit;
    }
  }
  policy marketing-p0 {
    match {
      source-address any;
      destination-address corporate-server;
      application any;
      source-identity "global\marketing-access-limited-grp";
    }
    then {
      permit;
    }
  }
  policy marketing-p3 {
    match {
      source-address any;
      destination-address human-resources-server;
      application any;
      source-identity "global\sales-limited-group";
    }
    then {
      permit;
    }
  }
}
```

```

from-zone accounting-zone to-zone servers-zone {
  policy acct-cp-device {
    match {
      source-address any;
      destination-address accounting-server;
      application any;
      source-identity "global\accounting-grp-and-company-device";
    }
    then {
      permit;
    }
  }
}
from-zone human-resources-zone to-zone servers-zone {
  policy human-resources-pl {
    match {
      source-address any;
      destination-address corporate-server;
      application any;
      source-identity "global\corporate-limited";
    }
    then {
      permit;
    }
  }
}
from-zone public-zone to-zone servers-zone {
  policy guest-allow-access {
    match {
      source-address any;
      destination-address public-server;
      application any;
      source-identity "global\guest";
    }
    then {
      permit;
    }
  }
  policy guest-deny-access {
    match {
      source-address any;
      destination-address any;
      application any;
      source-identity "global\guest-device-byod";
    }
    then {
      deny;
    }
  }
}

```

## Verification

This section verifies the ClearPass authentication table contents after certain events occur that cause some of its user authentication entries to be modified. It also shows

how to ensure that the ClearPass authentication table has been deleted successfully after you issue the delete command. It includes the following parts:

- [Displaying the ClearPass Authentication Table Contents Before and After an Authenticated User Logs Out of the Network on page 108](#)
- [Displaying the Authentication Table Contents Before and After a Referenced Security Policy Is Deleted on page 108](#)

### Displaying the ClearPass Authentication Table Contents Before and After an Authenticated User Logs Out of the Network

**Purpose** Display the ClearPass authentication table contents when a specific, authenticated user is logged in to the network and after the user logs out.

**Action** Enter the **show services user-identification authentication-table authentication-source authentication-source** command for the ClearPass authentication table, which is referred to as **aruba-clearpass**. Notice that the ClearPass authentication table includes an entry for the user **vikid**.

```
show services user-identification authentication-table authentication-source
aruba-clearpass
Domain: GLOBAL
Total entries: 6
```

Source IP	Username	groups(Ref by policy)	state
203.0.113.21	vikid	accounting-grp-and-company-dev	Valid
203.0.113.89	abew1	marketing-access-limited-grp	Valid
203.0.113.52	jxchan	marketing-access-for-pcs-limit	Valid
203.0.113.53	lchen1	corporate-limited	Valid
203.0.113.54	guest1		Valid
203.0.113.55	guest2		Valid

Enter the same command again after **vikid** logs out of the network. Notice that the ClearPass authentication table no longer contains an entry for **vikid**.

```
Domain: GLOBAL
Total entries: 6
```

Source IP	Username	groups(Ref by policy)	state
203.0.113.89	abew1	marketing-access-limited-grp	Valid
203.0.113.52	jxchan	marketing-access-for-pcs-limit	Valid
203.0.113.53	lchen1	corporate-limited	Valid
203.0.113.54	guest1		Valid
203.0.113.55	guest2		Valid

### Displaying the Authentication Table Contents Before and After a Referenced Security Policy Is Deleted

**Purpose** Display the ClearPass authentication table contents for a specific user—**lchen1**—who belongs to a group that is referenced by a security policy. Delete that security policy, then display the entry for that user again.



**Action** Enter the **show service user-identification authentication-table authentication-source user *user-name*** command to display the ClearPass authentication table entry for a specific user, lchen1. Notice that it includes the group corporate-limited.

```
show service user-identification authentication-table authentication-source user lchen1
Domain: GLOBAL
Source IP      Username      groups(Ref by policy)      state
203.0.113.53   lchen1        corporate-limited          Valid
```

The human-resources-p1 security policy source-identity field refers to the group corporate-limited. As shown above in the ClearPass authentication entry for him, the user lchen1 belongs to that group. Here is the configuration for the human-resources-p1 referenced security policy:

```
from-zone human-resources-zone to-zone servers-zone {
  policy human-resources-p1 {
    match {
      source-address any;
      destination-address corporate-server;
      application any;
      source-identity "global\corporate-limited";
    }
    then {
      permit;
    }
  }
}
```

After you delete the human-resources-p1 security policy, whose source-identity parameter refers to the group called corporate-limited, enter the same command again. Notice that the authentication entry for lchen1 does not contain the corporate-limited group.

```
show service user-identification authentication-table authentication-source aruba-clearpass
user lchen1
Domain: GLOBAL
Source IP      Username      groups(Ref by policy)      state
203.0.113.53   lchen1
```

Take a different approach in verifying the ClearPass authentication table state after the modification. Display the entire table to verify that the group—corporate-limited—is not included in any of the user entries. Note that if more than one user belonged to the corporate-limited group, authentication entries for all of the affected users would not show that group name.

From operational mode, enter the **show services user-identification authentication-table authentication-source aruba-clearpass** command.

```
show services user-identification authentication-table authentication-source
aruba-clearpass
Domain: GLOBAL
Total entries: 6
Source IP      Username      groups(Ref by policy)      state
203.0.113.21   viki2         accounting-grp-and-company-dev Valid
203.0.113.89   abew1         marketing-access-limited-grp Valid
203.0.113.52   jxchan        marketing-access-for-pcs-limit Valid
```

203.0.113.53	lchen1	Valid
203.0.113.54	guest1	Valid
203.0.113.55	guest2	Valid

**Related Documentation**

- [Understanding the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices on page 111](#)

## CHAPTER 9

# Configuring the Integrated ClearPass Authentication and Enforcement User Query Function

- [Understanding the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices on page 111](#)
- [Example: Configuring the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices on page 114](#)

## Understanding the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices

---

This topic focuses on how you can obtain user authentication and identity information for an individual user when that information is not posted directly to the NFX Series device by the ClearPass Policy Manager (CPPM).

The integrated ClearPass authentication and enforcement feature allows the NFX Series device and Aruba ClearPass to control access to protected resources and the Internet from wireless and wired devices. For this to occur, ClearPass sends user authentication and identity information to the NFX Series device. The NFX Series device stores the information in its ClearPass authentication table. To send this information, usually the CPPM uses the Web API (webapi) services implementation, which allows it to make HTTP or HTTPS POST requests to the NFX Series device.


It can happen that the CPPM does not send user authentication information for a user, for various reasons. When traffic from that user arrives at the NFX Series device, the device cannot authenticate the user. If you configure the NFX Series device to enable the user query function, it can query the ClearPass webserver for authentication information for an individual user. The NFX Series device bases the query on the IP address of the user's device, which it obtains from the user's access request traffic.

If the user query function is configured, the query process is triggered automatically when the NFX Series device does not find an entry for the user in its ClearPass authentication table when it receives traffic from that user requesting access to a resource or the Internet. The NFX Series device does not search its other authentication tables. Rather, it sends a query to the CPPM requesting authentication information for the user.

[Figure 9 on page 112](#) depicts the user query process. In this example:

1. A user attempts to access a resource. The NFX Series device receives the traffic requesting access. The NFX Series device searches for an entry for the user in its ClearPass authentication table, but none is found.
2. The NFX Series device requests authentication for the user from the CPPM.
3. The CPPM authenticates the user and returns the user authentication and identity information to the NFX Series device.
4. The NFX Series device creates an entry for the user in its ClearPass authentication table, and grants the user access to the Internet.

**Figure 9: ClearPass Integration User Query Function**

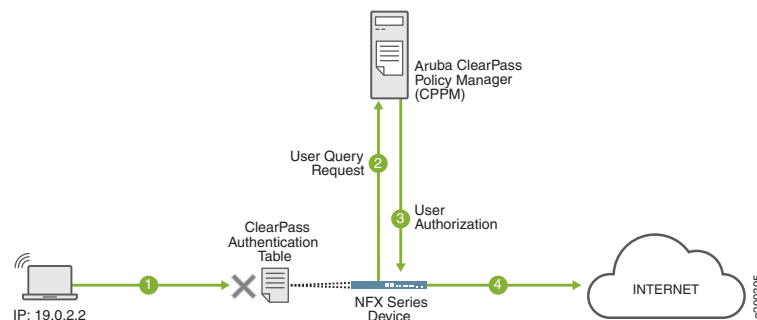

You can control when the NFX Series device sends its requests automatically by configuring the following two mechanisms:

- The **delay-query-time** parameter

To determine the value to set for the **delay-query-time** parameter, it helps to understand the events and duration involved in how user identity information is transferred to the NFX Series device from ClearPass, and how the **delay-query-time** parameter influences the query process.

A delay is incurred from when the CPPM initially posts user identity information to the NFX Series device using the Web API to when the NFX Series device can update its local ClearPass authentication table with that information. The user identity information must first pass through the ClearPass device's control plane and the control plane of the NFX Series device. In other words, this process can delay when the NFX Series device can enter the user identity information in its ClearPass authentication table.

While this process is taking place, traffic might arrive at the NFX Series device that is generated by an access request from a user whose authentication and identity information is in transit from ClearPass to the NFX Series device.

Rather than allow the NFX Series device to respond automatically by sending a user query *immediately*, you can set a **delay-query-time** parameter, specified in seconds, that allows the NFX Series device to wait for a period of time before sending the query.

After the delay timeout expires, the NFX Series device sends the query to the CPPM and creates a pending entry in the Routing Engine authentication table. During this period, the traffic matches the default policy and is dropped or allowed, depending on the policy configuration.



**NOTE:** If there are many query requests in the queue, the NFX Series device can maintain multiple concurrent connections to ClearPass to increase throughput. However, to ensure that ClearPass is not stressed by these connections, the number of concurrent connections is constrained to no more than 20 ( $\leq 20$ ). You cannot change this value.

- A default policy, which is applied to a packet if the NFX Series device does not find an entry for the user associated with the traffic in its ClearPass authentication table.

The system default policy is configured to drop packets. You can override this action by configuring a policy that specifies a different action to apply to this traffic.

Table 18 on page 113 shows the effect on the user query function in regard to whether or not Active Directory is enabled.

**Table 18: Relationship Between User Query Function and Active Directory Authentication as Processed by the CLI**

Active Directory Is Configured	ClearPass User Query Function Is Enabled	CLI Check Result
No	No	Pass
No	Yes	Pass
Yes	No	Pass
Yes	Yes	Fail

To avoid the failure condition reflected in the bottom row of the table, you must disable either Active Directory or the user query function. If both are configured, the system displays the following error message:

The priority of CP auth source is higher than AD auth source, and the CP user-query will shadow all AD features. Therefore, please choose either disabling CP user-query or not configuring AD.

In its response to the user query request, the ClearPass web server returns information for the user's device whose IP address was specified in the request. This response includes a time stamp, which is expressed in UTC (Coordinated Universal Time) as defined by ISO 8601.

Here are some examples:

- 2016-12-30T09:30:10.678123Z
- 2016-12-30T09:30:10Z
- 2016-06-06T00:31:52-07:00

Table 19 on page 114 shows the components that comprise a timestamp format.

**Table 19: Time Stamp Components as Defined by ISO 8601**

Format Component	Meaning
YY	two-digit month
DD	two-digit day of month
hh	two-digits of hour (00 through 23)
mm	two-digits of minute
ss	two-digits of second
s	one or more digits representing a decimal fraction of a second
TZD	time zone designator: Z or +hh:mm or -hh:mm

- Related Documentation**
- [Understanding How ClearPass Communicates with the NFX Series Device Using the Web API on page 69](#)

## Example: Configuring the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices

This example covers how to configure the NFX Series device to enable it to query Aruba ClearPass automatically for user authentication and identity information for an individual user when that information is not available.



**NOTE:** The user query function is supplementary to the Web API method of obtaining user authentication and identity information, and it is optional.

- [Requirements on page 115](#)
- [Overview on page 115](#)
- [Configuration on page 118](#)
- [Verification on page 121](#)

## Requirements

This section defines the software and hardware requirements for the overall topology that includes user query requirements. See [Figure 11 on page 118](#) for the topology. For details on the user query process, see [Figure 10 on page 116](#).

The hardware and software components are:

- Aruba ClearPass (CPPM). The CPPM is configured to use its local authentication source to authenticate users.



**NOTE:** It is assumed that the CPPM is configured to provide the NFX Series device with user authentication and identity information, including the username, a list of the names of any groups that the user belongs to, the IP addresses of the devices used, and the device posture token.

- NFX Series device running Junos OS that includes the integrated ClearPass feature.
- A server farm composed of six servers, all in the servers-zone:
  - marketing-server-protected (203.0.113.23 )
  - human-resources-server (203.0.113.25 )
  - accounting-server (203.0.113.72)
  - public-server (203.0.113.91)
  - corporate-server (203.0.113.71)
  - sales-server (203.0.113.81)
- AC 7010 Aruba Cloud Services Controller running ArubaOS.
- Aruba AP wireless access controller running ArubaOS.  
The Aruba AP is connected to the AC7010.  
Wireless users connect to the CPPM through the Aruba AP.
- Juniper Networks EX4300 switch used as the wired 802.1 access device.  
Wired users connect to the CPPM using the EX4300 switch.
- Six end-user systems:
  - Three wired network-connected PCs running Microsoft OS
  - Two BYOD devices that access the network through the Aruba AP access device
  - One wireless laptop running Microsoft OS

## Overview

You can configure the user query function to enable the NFX Series device to obtain authenticated user identity information from the CPPM for an individual user when the

NFX Series device's ClearPass authentication table does not contain an entry for that user. The NFX Series device bases the query on the IP address of the user's device that generated the traffic issuing from the access request.


There are a number of reasons why the NFX Series device might not already have authentication information from the CPPM for a particular user. For example, it can happen that a user has not already been authenticated by the CPPM. This condition could occur if a user joined the network through an access layer that is not on a managed switch or WLAN.

The user query function provides a means for the NFX Series device to obtain user authentication and identity information from the CPPM for a user for whom the CPPM did not post that information to the NFX Series device using the Web API. When the NFX Series device receives an access request from a user for which there is not an entry in its ClearPass authentication table, it will automatically query the CPPM for it if this function is configured.

Figure 10 on page 116 shows the user query flow process, which encompasses the following steps:

1. A user attempts to access a resource. The NFX Series device receives the traffic requesting access. The NFX Series device searches for an entry for the user in its ClearPass authentication table, but none is found.
2. The NFX Series device requests authentication for the user from the CPPM.
3. The CPPM authenticates the user and returns the user authentication and identity information to the NFX Series device.
4. The NFX Series device creates an entry for the user in its ClearPass authentication table, and grants the user access to the Internet.

**Figure 10: User Query Function Process**

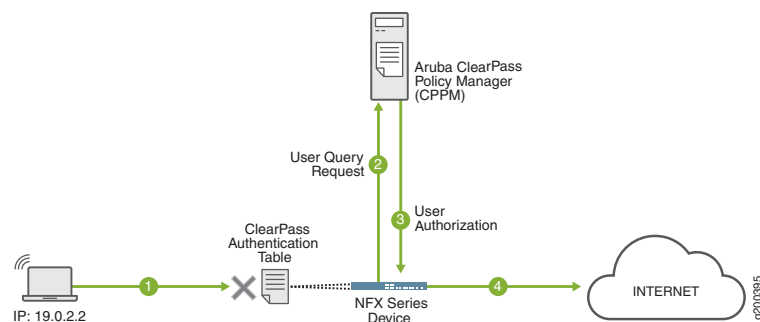

For details on the parameters that you can use to control when the NFX Series device issues the query, see [“Understanding the Integrated ClearPass Authentication and Enforcement User Query Function on NFX Devices”](#) on page 111.



**NOTE:** You can also manually query the CPPM for authentication information for an individual user when this feature is configured.



The ClearPass endpoint API requires use of OAuth (RFC 6749) to authenticate and authorize access to it. For the NFX Series device to be able to query the CPPM for individual user authentication and authorization information, it must acquire an access token. For this purpose, the NFX Series device uses the Client Credentials access token grant type, which is one of the two types that ClearPass supports.

As administrator of the ClearPass Policy Manager (CPPM), you must create an API client on the CPPM with the `grant_type` set to `client_credentials`. You can then configure the NFX Series device to use that information to obtain an access token. Here is an example of the message format for doing this:

```
curl https://{Server}/api/oauth -- insecure -- data
"grant_type=client_credentials&client_id=Client2&client_secret=
m2Tvcklsi9je0kH9UTwuXQwlutKLC2obaDL54/fC2DzC"
```

A successful request from the NFX Series device to obtain an access token results in a response that is similar to the following example:

```
{
  "access_token": "ae79d980adf83ecb8e0eaca6516a50a784e81a4e",
  "expires_in": 2880,
  "token_type": "Bearer",
  "scope": "nu;
}
```


Before the access token expires, the NFX Series device can obtain a new token using the same message.

---

## Topology

[Figure 11 on page 118](#) shows the overall topology for this deployment, which encompasses the user query environment.

Figure 11: Topology for the Overall Deployment that Includes User Query

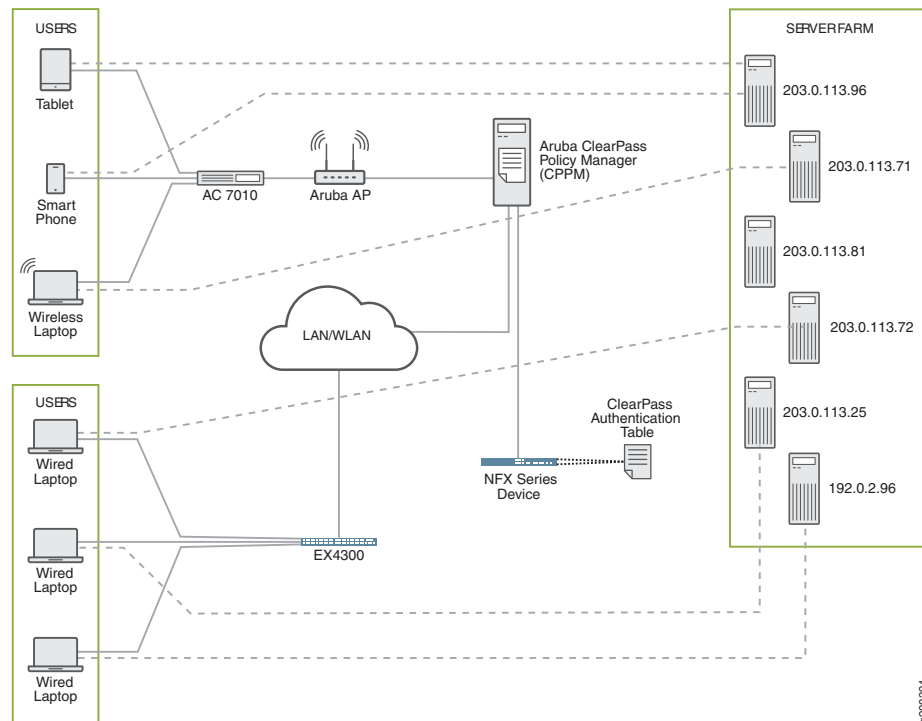

## Configuration

To enable and configure the user query function, perform these tasks:

- [Configure the User Query Function \(Optional\) on page 119](#)
- [Manually Issuing a Query to the CPPM for Individual User Authentication Information \(Optional\) on page 121](#)

### CLI Quick Configuration

To quickly configure this example, copy the following statements, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the statements into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```
set services user-identification authentication-source aruba-clearpass user-query
  web-server cp-webserver address 192.0.2.199
set services user-identification authentication-source aruba_clearpass user-query
  ca-certificate RADUIServerCertificate.crt
set services user-identification authentication-source aruba-clearpass user-query client-id
  client-1
set services user-identification authentication-source aruba-clearpass user-query
  client-secret 7cTr13#
set services user-identification authentication-source aruba-clearpass user-query token-api
  "api/aouth"
set services user-identification authentication-source aruba-clearpass user-query IP
  address "api/vi/insight/endpoint/ip/$IP$"
```

### Configure the User Query Function (Optional)

#### Step-by-Step Procedure

Configure the user query function to allow the NFX Series device to connect automatically to the ClearPass client to make requests for authentication information for individual users.

The user query function supplements input from the CPPM sent using the Web API. The Web API daemon does not need to be enabled for the user query function to work. For the user query function, the NFX Series device is the HTTP client. By it sends HTTPS requests to the CPPM on port 443.

To enable the NFX Series device to make individual user queries automatically:

1. Configure Aruba ClearPass as the authentication source for user query requests, and configure the ClearPass webserver name and its IP address. The NFX Series device requires this information to contact the ClearPass webserver.



**NOTE:** You must specify `aruba-clearpass` as the authentication source.

```
[edit services user-identification]
user@host# set authentication-source aruba-clearpass user-query web-server
cp-webserver address 192.0.2.199
```



**NOTE:** You can configure only one ClearPass webserver.

Optionally, configure the port number and connection method, or accept the following values for these parameters. This example assumes the default values.

- `connect-method` (default is HTTPS)
- `port` (by default, the NFX Series device sends HTTPS requests to the CPPM on port 443)

However, if you were to explicitly configure the connection method and port, you would use these statements:

```
set services user-identification authentication-source aruba-clearpass user-query
web-server cp-webserver connect method <https/http>
set services user-identification authentication-source aruba-clearpass user-query
web-server cp-webserver port port-number
```

2. (Optional) Configure the ClearPass CA certificate file for the NFX Series device to use to verify the ClearPass webserver. (The default certificate is assumed if none is configured.)

```
[edit services user-identification]
user@host# set authentication-source aruba_clearpass user-query ca-certificate
RADUIServerCertificate.crt
```

The ca-certificate enables the NFX Series device to verify the authenticity of the ClearPass webserver and that it is trusted.

Before you configure the certificate, as administrator of the ClearPass device you must take the following actions:

- Export the ClearPass webserver's certificate from CPPM and import the certificate to the NFX Series device.
- Configure the ca-certificate as the path, including its CA filename, as located on the NFX Series device. In this example, the following path is used:

```
/var/tmp/RADUIServerCertificate.crt
```

3. Configure the client ID and the secret that the NFX Series device requires to obtain an access token required for user queries.

```
[edit services user-identification]
user@host# set authentication-source aruba-clearpass user-query client-id client-1
user@host# set authentication-source aruba-clearpass user-query client-secret
7cTr13#
```

The client ID and the client secret are required values. They must be consistent with the client configuration on the CPPM.



**TIP:** When you configure the client on the CPPM, copy the client ID and secret to use in the NFX Series device configuration.

4. Configure the token API that is used in generating the URL for acquiring an access token.



**NOTE:** You must specify the token API. It does not have a default value.

```
[edit services user-identification]
user@host# set authentication-source aruba-clearpass user-query
token-api "api/aoauth"
```

In this example, the token API is `api/aoauth`. It is combined with the following information to generate the complete URL for acquiring an access token `https://192.0.2.199/api/aoauth`

- The connection method is HTTPS.
- In this example, the IP address of the ClearPass webserver is 192.0.2.199.

5. Configure the query API to use for querying individual user authentication and identity information.

```
[edit services user-identification]
user@host# set authentication-source aruba-clearpass user-query query-api
'api/vi/insight/endpoint/ip/$IP$'
```

In this example, the query-api is `api/vi/insight/endpoint/ip/$IP$`. It is combined with the URL `https://192.0.2.199` resulting in `https://192.0.2.199/api/vi/insight/endpoint/ip/$IP$`.

The `$IP` variable is replaced with the IP address of the end-user's device for the user whose authentication information the NFX Series is requesting.

6. Configure the amount of time in seconds to delay before the NFX Series device sends the individual user query.

```
[edit services user-identification]
user@host# set authentication-source aruba-clearpass user-query delay-query-time
10
```

---

### Manually Issuing a Query to the CPPM for Individual User Authentication Information (Optional)

---

#### Step-by-Step Procedure

- Configure the following statement to manually request authentication information for the user whose device's IP address is 203.0.113.46.

```
root@device>request service user-identification authentication-source
aruba-clearpass user-query address 203.0.113.46
```

## Verification

Use the following procedures to verify that the user query function is behaving as expected:

- [Verifying That the ClearPass Webserver Is Online on page 121](#)
- [Enabling Trace and Checking the Output on page 122](#)
- [Determining If the User Query Function Is Executing Normally on page 122](#)
- [Determining If a Problem Exists by Relying on User Query Counters on page 122](#)

---

### Verifying That the ClearPass Webserver Is Online

---

- Purpose** Ensure that the ClearPass webserver is online, which is the first means of verifying that the user query request can complete successfully.

**Action** Enter the **show service user-identification authentication-source authentication-source user-query status** command to verify that ClearPass is online.

```
show service user-identification authentication-source aruba-clearpass user-query status
```

```
Authentication source: aruba-clearpass
Web server Address: 192.0.2.199
Status: Online
Current connections: 0
```

---

### Enabling Trace and Checking the Output

---

**Purpose** Display in the trace log any error messages generated by the user query function.

**Action** Set the trace log file name and enable trace using the following commands:

```
set system services webapi debug-log trace-log-1
set services user-identification authentication-source aruba-clearpass traceoptions flag user-query
```

---

### Determining If the User Query Function Is Executing Normally

---

**Purpose** Determine if there is a problem with the user query function behavior.

**Action** Check syslog messages to determine if the user query request failed.

If it failed, the following error message is reported:

```
LOG1: sending user query for IP <ip-address> to ClearPass web server failed.
:reason
```

The reason might be “server unconnected” or “socket error”.

---

### Determining If a Problem Exists by Relying on User Query Counters

---

**Purpose** Display the user query counters to home in on the problem, if one exists, by entering the **show service user-identification authentication-source authentication-source user-query counters** command.



**NOTE:** The timestamp returned by ClearPass in response to the user query request can be specified in any of the ISO 8601 formats, including the format that includes a time zone.

---

**Action**    `show service user-identification authentication-source aruba-clearpass user-query counters`

Authentication source: aruba-clearpass

Web server Address: Address: *ip-address*

Access token: *token-string*

RE quest sent number: *counter*

Routing received number: *counter*

Time of last response: *timestamp*

**Related Documentation**    • [Understanding Enforcement of ClearPass User and Group Authentication on NFX Devices on page 83](#)





## CHAPTER 10

# Configuring ClearPass and JIMS

- [Configuring JIMS and Clearpass Simultaneously on NFX Series on page 125](#)

## Configuring JIMS and Clearpass Simultaneously on NFX Series

---

You can configure JIMS, ClearPass, and Web API simultaneously on NFX devices.

- [Understanding How ClearPass and JIMS Function Simultaneously on page 125](#)
- [Configuring ClearPass and JIMS on NFX Devices on page 126](#)
- [Verifying the Configuration on page 128](#)

## Understanding How ClearPass and JIMS Function Simultaneously

When a user gets authenticated by Aruba ClearPass Policy Manager (CPPM), the CPPM uses a Web API to push the user or device information to an NFX Series device. The device builds up the authentication entry or device information for the user, and the user traffic can pass through the device based on the security policy. When the Windows Active Directory client logs on to the domain, the device obtains the client's user or device information from JIMS through a batch query. The authentication table is updated with the entry provided by JIMS.

When both the JIMS IP query and ClearPass user query are enabled, the device always queries ClearPass first. If CPPM returns the IP-user mapping information, then the information is subsequently added to the authentication table. If CPPM does not return the IP-user mapping information or if the device receives a response from CPPM without IP-user mapping, then the device queries JIMS to obtain the IP-user or IP-group mapping.

You can set a **delay-query-time** parameter, specified in seconds, that allows the device to wait for a period of time before sending the query. The delay time should be the same value for ClearPass and JIMS. Otherwise, an error message is displayed and the commit check fails.



**NOTE:** When the IP-user or IP-group mapping is received from both JIMS and CPPM, the device considers the latest authentication entries and overwrites the existing authentication entries.

By configuring ClearPass and JIMS simultaneously, the device can query JIMS to obtain user identity information from Active Directory and the exchange servers, and ClearPass can push the user authentication and identity information to the device through Web API.

## Configuring ClearPass and JIMS on NFX Devices

To configure JIMS and ClearPass:

1. Configure the IP address of the primary JIMS server.

```
[edit services]
user@host# set user-identification identity-management connection primary address
192.0.2.0
```

2. Configure the client ID that the device provides to the JIMS primary server as part of its authentication.

```
[edit services]
user@host# set user-identification identity-management connection primary client-id
otest
```

3. Configure the client secret that the device provides to the JIMS primary server as part of its authentication.

```
[edit services]
user@host# set user-identification identity-management connection primary
client-secret test
```

4. Configure Aruba ClearPass as the authentication source for user query requests, and configure the ClearPass webserver name and its IP address. The device requires this information to contact the ClearPass webserver.

```
[edit services]
user@host# set user-identification authentication-source aruba-clearpass user-query
web-server cp-server address 198.51.100.0
```

5. Configure the client ID and the client secret that the device requires for obtaining an access token required for user queries.

```
[edit services]
user@host# set user-identification authentication-source aruba-clearpass user-query
client-id otest
user@host# set user-identification authentication-source aruba-clearpass user-query
client-secret test
```

6. Configure the token API that is used in generating the URL for acquiring an access token.

```
[edit services]
user@host# set user-identification authentication-source aruba-clearpass user-query
token-api oauth_token/oauth
```

7. Configure the query API to use for querying individual user authentication and identity information.

```
[edit services]
user@host# set user-identification authentication-source aruba-clearpass user-query
query-api "user_query/v1/ip/$IP$"
```

8. Configure the Web API daemon username and password for the account.

```
[edit system services]
user@host# set webapi user user password "$ABC123"
```

9. Configure the Web API client address, which is the IP address of the ClearPass webserver's data port.

```
[edit system services]
user@host# set webapi client 203.0.113.0
```

10. Configure the Web API process HTTPS service port.

```
[edit system services]
user@host# set webapi https port 8443
user@host# set webapi https default-certificate
```

11. Configure an authentication entry timeout value for Aruba ClearPass.

```
[edit services]
user@host# set user-identification authentication-source aruba-clearpass
invalid-authentication-entry-timeout 30
```

12. Configure an independent timeout value to be assigned to invalid user authentication entries in the device authentication table for Aruba ClearPass.

```
[edit services]
user@host# set user-identification identity-management authentication-entry-timeout
30
```

13. Configure an independent timeout value to be assigned to invalid user authentication entries in the device authentication table for JIMS.

```
[edit services]
user@host# set user-identification identity-management
invalid-authentication-entry-timeout 30
```

14. Set a **query-delay-time** parameter, specified in seconds, that allows the device to wait for a period of time before sending the query.

```
[edit services]
user@host# set user-identification identity-management ip-query query-delay-time
15
```

15. Set a **query-delay-time** parameter, specified in seconds, that allows the device to wait for a period of time before sending the query.

```
[edit services]
user@host# set user-identification authentication-source aruba-clearpass user-query
delay-query-time 15
```

## Verifying the Configuration

**Purpose** Confirm that the configuration is working properly.

- Action**
- Verify that the device identity authentication table for JIMS is updated.  

```
user@host >show services user-identification authentication-table
authentication-source identity-management source-name "JIMS - Active Directory"
node 0
```
  - Verify that the device identity authentication table for ClearPass is updated.  

```
user@host >show services user-identification authentication-table
authentication-source aruba-clearpass node 0
```
  - Verify that the ClearPass webserver is online.  

```
user@host >show services user-identification authentication-source aruba-clearpass
user-query status
```
  - Verify that the JIMS server is online.  

```
user@host >show services user-identification identity-management status
```

## PART 3

# Configuration Statements and Operational Commands

- Configuration Statements on page 131
- Operational Commands on page 331



## CHAPTER 11

# Configuration Statements

- [actions \(Services SSL Proxy\) on page 137](#)
- [active-directory-access on page 139](#)
- [active-directory-authentication-table on page 141](#)
- [address \(Services\) on page 142](#)
- [address \(Services User Identification\) on page 142](#)
- [address \(Identity Management Advanced Query Primary\) on page 143](#)
- [address \(Identity Management Advanced Query Secondary\) on page 145](#)
- [admin-search on page 147](#)
- [allow-reverse-ecmp on page 148](#)
- [application \(Security Policies\) on page 149](#)
- [application-services \(Security Policies\) on page 150](#)
- [assemble on page 151](#)
- [auth-only-browser on page 152](#)
- [auth-user-agent on page 153](#)
- [authentication-entry-timeout \(Services User Identification\) on page 154](#)
- [authentication-entry-timeout \(Identity Management Advanced Query\) on page 155](#)
- [authentication-source \(Services User Identification ClearPass\) on page 157](#)
- [authentication-source \(Services User Identification Device Identity\) on page 159](#)
- [batch query on page 161](#)
- [banner \(Access FTP HTTP Telnet Authentication\) on page 163](#)
- [banner \(Access Web Authentication\) on page 164](#)
- [base-distinguished-name on page 164](#)
- [ca-certificate \(Services User Identification\) on page 165](#)
- [ca-certificate \(Identity Management Advanced Query Primary\) on page 166](#)
- [ca-certificate \(Identity Management Advanced Query Secondary\) on page 168](#)
- [ca-profile \(Services\) on page 169](#)
- [certificate \(System Services\) on page 170](#)
- [certificate-key \(System Services\) on page 171](#)

- [certificate-verification](#) on page 172
- [client](#) (System Services) on page 173
- [client-id](#) (Services User Identification) on page 173
- [client-id](#) (Identity Management Advanced Query Primary) on page 174
- [client-id](#) (Identity Management Advanced Query Secondary) on page 176
- [client-group](#) on page 177
- [client-idle-timeout](#) (Access Profile) on page 178
- [client-name-filter](#) on page 178
- [client-secret](#) (Services User Identification) on page 179
- [client-secret](#) (Identity Management Advanced Query Primary) on page 180
- [client-secret](#) (Identity Management Advanced Query Secondary) on page 182
- [client-session-timeout](#) (Access Profile) on page 183
- [configuration-file](#) on page 184
- [connection](#) (Identity Management Advanced Query) on page 185
- [connect-method](#) (Identity Management Advanced Query) on page 189
- [connect-method](#) (Services User Identification) on page 190
- [count](#) on page 191
- [custom-ciphers](#) on page 192
- [debug-level](#) (System Services) on page 194
- [debug-log](#) (System Services) on page 195
- [default-certificate](#) (System Services) on page 195
- [default-profile](#) on page 196
- [delay-query-time](#) (Services User Identification) on page 197
- [distinguished-name](#) (Access) on page 198
- [domain-name](#) (Access Profile) on page 198
- [enable-flow-tracing](#) (Services) on page 199
- [enable-session-cache](#) on page 200
- [end-user-profile](#) on page 201
- [fail](#) on page 202
- [file](#) (Services User Identification) on page 203
- [file](#) (System Logging) on page 204
- [filter](#) (Security) on page 206
- [filter](#) (Identity Management Advanced Query) on page 207
- [firewall-user](#) on page 209
- [flag](#) (Services) on page 210
- [from-zone](#) (Security Policies) on page 211
- [ftp](#) (Access) on page 214



- [group-profile \(Access\)](#) on page 215
- [http \(Access\)](#) on page 216
- [http \(Services\)](#) on page 217
- [http \(Services User Identification\)](#) on page 218
- [http \(System Services\)](#) on page 219
- [https \(Services\)](#) on page 220
- [https \(Services User Identification\)](#) on page 221
- [https \(System Services\)](#) on page 223
- [infranet-controller](#) on page 224
- [interface \(Services\)](#) on page 225
- [interval \(Services\)](#) on page 226
- [invalid-authentication-entry-timeout \(Services User Identification Active Directory and ClearPass\)](#) on page 227
- [ip-address \(Access Profile\)](#) on page 229
- [ip-query \(Identity Management Advanced Query\)](#) on page 230
- [ip-user-mapping](#) on page 232
- [ldap-options](#) on page 233
- [ldap-server](#) on page 234
- [level \(Services\)](#) on page 235
- [level \(Services User Identification\)](#) on page 236
- [lifetime-seconds \(Security IKE\)](#) on page 237
- [link \(Access\)](#) on page 237
- [local-authentication-table](#) on page 238
- [log \(Services\)](#) on page 239
- [login \(Access\)](#) on page 240
- [nas-port-type](#) on page 240
- [network \(Access\)](#) on page 241
- [no-remote-trace \(Services User Identification\)](#) on page 241
- [no-user-query \(Services User Identification\)](#) on page 242
- [no-tls-certificate-check](#) on page 242
- [pass-through](#) on page 243
- [password \(Access\)](#) on page 244
- [password \(Services\)](#) on page 244
- [password \(System Services\)](#) on page 245
- [permit \(Security Policies\)](#) on page 246
- [pki-local-certificate \(Services\)](#) on page 247
- [policies](#) on page 248

- [pool \(Access\) on page 253](#)
- [port \(Access LDAP\) on page 254](#)
- [port \(Identity Management Advanced Query\) on page 255](#)
- [port \(Services\) on page 256](#)
- [port \(System Services\) on page 257](#)
- [preferred-ciphers on page 258](#)
- [prefix \(Access IPv6\) on page 259](#)
- [primary connection \(Identity Management Advanced Query\) on page 260](#)
- [priority \(Security User Identification\) on page 262](#)
- [push-to-identity-management on page 263](#)
- [protocol-version on page 264](#)
- [query-api \(Services User Identification\) on page 265](#)
- [query-api \(advanced user query\) on page 266](#)
- [radius-options \(Access\) on page 267](#)
- [radius-server \(Access\) on page 268](#)
- [range \(Access\) on page 269](#)
- [rate-limit \(Security Log\) on page 270](#)
- [redirect-traffic on page 271](#)
- [redirect-url on page 272](#)
- [retry \(Access LDAP\) on page 273](#)
- [retry \(Access RADIUS\) on page 274](#)
- [revert-interval \(Access LDAP\) on page 274](#)
- [revert-interval \(Access RADIUS\) on page 275](#)
- [root-ca \(Services\) on page 275](#)
- [routing-instance \(Access LDAP\) on page 276](#)
- [routing-instance \(Access RADIUS\) on page 276](#)
- [search on page 277](#)
- [search-filter on page 278](#)
- [secondary connection \(Identity Management Advanced Query\) on page 279](#)
- [secret \(Access Profile\) on page 281](#)
- [securid-server on page 281](#)
- [separator on page 282](#)
- [server-certificate \(Services\) on page 282](#)
- [server-certificate-subject on page 283](#)
- [session-options \(Access Profile\) on page 283](#)
- [size \(Services\) on page 284](#)
- [source-address \(Access LDAP\) on page 284](#)

- [source-address \(Access RADIUS\) on page 285](#)
- [source-end-user-profile on page 286](#)
- [source-identity-log \(Security\) on page 287](#)
- [ssl \(Services\) on page 288](#)
- [ssl-termination-profile on page 290](#)
- [success on page 290](#)
- [system-generated-certificate on page 291](#)
- [telnet \(Access\) on page 291](#)
- [termination \(Services\) on page 292](#)
- [test-only-mode on page 293](#)
- [then \(Security Policies\) on page 294](#)
- [timeout \(Access LDAP\) on page 296](#)
- [timeout \(Access RADIUS\) on page 296](#)
- [timeout \(Services\) on page 297](#)
- [timeout-action on page 298](#)
- [tls-min-version on page 299](#)
- [tls-peer-name on page 299](#)
- [tls-timeout on page 300](#)
- [tls-type on page 301](#)
- [token-api \(Services User Identification\) on page 302](#)
- [token-api on page 303](#)
- [to-zone \(Security Policies\) on page 305](#)
- [traceoptions \(Access\) on page 308](#)
- [traceoptions \(Active Directory Access\) on page 310](#)
- [traceoptions \(Services SSL\) on page 312](#)
- [traceoptions \(Services User Identification\) on page 313](#)
- [trusted-ca \(Services\) on page 314](#)
- [user-group-mapping on page 315](#)
- [user-identification \(Services\) on page 317](#)
- [webapi \(System Services\) on page 320](#)
- [webapi-clear-text \(Security\) on page 321](#)
- [webapi-ssl \(Security\) on page 321](#)
- [web-authentication on page 322](#)
- [web-authentication \(Access\) on page 323](#)
- [web-authentication \(Interfaces\) on page 324](#)
- [web-management \(System Services\) on page 325](#)
- [web-server \(Services\) on page 328](#)

- [whitelist \(Services\) on page 329](#)
- [wins-server \(Access\) on page 330](#)

## actions (Services SSL Proxy)

**Syntax**

```
actions {
  crl {
    disable;
    if-not-present (allow | drop);
    ignore-hold-instruction-code;
  }
  disable-session-resumption;
  ignore-server-auth-failure;
  logs {
    all;
    errors;
    info;
    sessions-allowed;
    sessions-dropped;
    sessions-ignored;
    sessions-whitelisted;
    warning;
  }
  renegotiation {
    (allow | allow-secure | drop);
  }
}
```

**Hierarchy Level** [edit services ssl proxy profile *profile-name*]

**Release Information** Statement introduced in Junos OS Release 12.1X44-D10. The **crl** statement is supported from Junos OS Release 15.1X49-D30.

**Description** Specify the logging and traffic related actions for a SSL proxy profile.

An SSL proxy profile is required to configure SSL proxy on your SRX Series device. As a part of the proxy profile configuration, you can configure— actions related to certification revocations checks, options to specify if a change in SSL parameters requires renegotiation for a session, option to disable session resumption, option to ignore certificate validation, root CA expiration dates, and other such issues based on your requirements.

- Options**
- **crl**—Specify the certificate revocation actions.
    - **disable**—Disable CRL verification.
    - **if-not-present**—Specify actions for sessions.
      - **allow**—Allow sessions when CRL information is not available.
      - **drop**—Drop sessions when CRL information is not available.
    - **ignore-hold-instruction-code**—Ignore the unconfirmed (on hold) revocation status, and accept a certificate.
  - **disable-session-resumption**—Disable session resumption.

- **ignore-server-auth-failure**—Ignore server authentication failure.
- **log**—Specify the logging actions.
  - **all**—Log all events.
  - **errors**—Log all error events.
  - **info**—Log all information events.
  - **sessions-allowed**—Log SSL session allowed events after an error.
  - **sessions-dropped**—Log only SSL session dropped events.
  - **sessions-ignored**—Log session ignored events.
  - **sessions-whitelisted**—Log SSL session whitelisted events.
  - **warning**—Log all warning events.
- **renegotiation**—Specify the renegotiation options.
  - **allow**—Allow secure and nonsecure renegotiation.
  - **allow-secure**—Allow secure negotiation only.
  - **drop**—Drop session on renegotiation request.

<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
---------------------------------	-----------------------------------------------------------------------------------------------------------------------

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>SSL Proxy Overview</i></li><li>• <i>Configuring SSL Forward Proxy</i></li><li>• <i>Enabling Debugging and Tracing for SSL Proxy</i></li></ul>
------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## active-directory-access

```
Syntax  active-directory-access {
        domain domain-name {
            user username;
            password password;
            domain-controller domain-controller-name {
                address domain-controller-address;
            }
            ip-user-mapping {
                discovery-method {
                    wmi {
                        event-log-scanning-interval seconds;
                        initial-event-log-timespan hours;
                    }
                }
            }
        }
        user-group-mapping {
            ldap {
                authentication-algorithm {
                    simple;
                }
                ssl;
                base base;
                user name {
                    password password;
                }
                address ip-address {
                    port port;
                }
            }
        }
    }
```

**Hierarchy Level** [edit services user-identification]

**Release Information** Statement introduced in Junos OS Release 12.1X47-D10.

**Description** Identify the domain and domain controllers where the integrated user firewall feature is implemented; configure the IP address-to-user mapping information and the user-to-group mapping information for accessing the LDAP server.

**Options** **domain *domain-name***—Required. Name of the domain; the length of the name ranges from 1 through 64 characters. The SRX Series device can have the integrated user firewall feature configured in a maximum of two domains.

**user *username***—Required. Active Directory account name.

**Range:** 1 through 64 characters.

**password *password***—Required. Password of the Active Directory account.

**Range:** 1 through 128 characters.

**domain-controller *domain-controller-name***—Required. Name of the domain controller; the length of the name can range from 1 through 64 characters. A maximum of 10 domain controllers can be configured.

**address *domain-controller-address***—Required. IP address of the domain controller.

The remaining statements are explained separately. See [CLI Explorer](#).

<b>Required Privilege Level</b>	security—To view this statement in the configuration. security-control—To add this statement to the configuration.
---------------------------------	-----------------------------------------------------------------------------------------------------------------------

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">user-identification (Services) on page 317</a></li><li>• <i>LDAP Functionality in Integrated User Firewall</i></li></ul>
------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



## active-directory-authentication-table

<b>Syntax</b>	<pre>active-directory-authentication-table {     priority <i>priority</i>; }</pre>
<b>Hierarchy Level</b>	[edit security user-identification authentication-source]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X47-D10.
<b>Description</b>	<p>An authentication table is generated by polling Active Directory domain controllers for source identity information about active users. Each entry in the table correlates an authenticated user with an IP address and associated user groups. That information is used for matching in IP-based firewall policies. The user information must be retrieved from the table before policy lookup can proceed and traffic is allowed to pass through the firewall.</p> <p>Revision History</p>
<b>Options</b>	<p><b>priority <i>priority</i></b>—Specify the priority of the Active Directory authentication table. The priority determines the sequence for searching among various other authentication tables to retrieve a user role. The priorities of the following tables are considered: local authentication table, firewall authentication table, Active Directory authentication table, and UAC authentication table.</p> <p>Each authentication table is given a unique priority value. The lower the value, the higher the priority. A table with priority 120 is searched before a table with priority 200. Setting the priority value of a table to 0 is equivalent to disabling the table and eliminating it from the search sequence.</p> <p><b>Range:</b> A unique value from 0 through 65535.</p> <p><b>Default:</b> The default priority of the Active Directory authentication table is 125.</p>
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>authentication-source (Security)</i></li> <li>• <i>Overview of Integrated User Firewall</i></li> <li>• <i>Understanding User Role Firewalls</i></li> <li>• <i>Understanding the User Identification Table</i></li> </ul>

## address (Services)

---

<b>Syntax</b>	address <i>ip-address</i> ;
<b>Hierarchy Level</b>	[edit services unified-access-control infranet-controller <i>hostname</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Specify the IP address of the IC Series device with which the SRX Series devices should communicate.</p> <p>This statement is required when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series device.</p>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding Unified Access Control</i></li><li>• <i>Acquiring User Role Information from an Active Directory Authentication Server</i></li></ul>

## address (Services User Identification)

---

<b>Syntax</b>	address ( <i>ip-address</i>   <i>hostname</i> );
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass user-query web-server]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Configure for the integrated ClearPass authentication and enforcement feature the address of the ClearPass webserver that the SRX Series device communicates with. The SRX Series device requests user authentication and identity information for an individual user from the ClearPass webserver whose address is configured. If you configure the user query function, the SRX Series device can obtain this information for a specific user when it does not receive it from the ClearPass Policy Manager through Web API POST requests.</p>
<b>Required Privilege Level</b>	services—To view this statement in the configuration services-control—To add this statement to the configuration.

## address (Identity Management Advanced Query Primary)

<b>Syntax</b>	<code>address ip-address;</code>
<b>Hierarchy Level</b>	[edit services user-identification identity-management connection primary],
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure the IP address for the primary Juniper Identity Management Service (JIMS) server. The SRX Series device requires the server IP address to connect to the server to obtain an access code that allows it to query the server for user identity information. The IP address is configured as part of a collection of information which includes the SRX Series device's client ID, client secret, and ca-certificate information.</p> <p>You configure separate sets of information for connection to the primary server and the secondary server. The SRX Series device queries the primary server first. When the primary one fails, it queries the secondary server. You configure the SRX Series device to connect to the secondary server separately.</p>



**NOTE:** This feature supports only IPv4 addresses.

Juniper Identity Management Service uses the credentials grant access token process, which requires use of OAuth2 to authenticate and authorize access to it by the SRX Series device. (See RFC 6749.) Prior to querying the primary server, the SRX Series device must go through a process which, as mentioned previously, entails obtaining an access code.

The Juniper Identity Management Service server must authenticate the SRX Series device before it allows the SRX Series device to query it for user identity information. When the SRX Series device connects to the Juniper Identity Management Service server, it sends the server its identifying client ID, client secret, and ca-certificate. This information must be consistent with the API client configured on the Juniper Identity Management Service primary server to which it authorizes.



**NOTE:** The SRX Series device sends a unique set of identification information to the primary server and the secondary server.

After the SRX Series device is authenticated and issues queries for user identity information, it inserts that information into its authentication table. When a user requests access to a protected resource, the SRX Series device authenticates the user based on the authentication table entry for that user.

The Juniper Identity Management Service provides a global, end-to-end user identity management solution that allows you to provision users locally and have their authentication information made available to other sites in your network for policy

enforcement and reporting. It provides a centralized identity collection (CIC) system from which the SRX Series device obtains user identity information. It also includes device endpoint context, also referred to as device identity, and machine identity (machine ID) information for the user.



**WARNING:** Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.

**Required Privilege  
Level**

services—To view this statement in the configuration.

services-control—To add this statement to the configuration.

**Related  
Documentation**

- *Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS*
- [filter on page 207](#)
- [port on page 255](#)
- [primary on page 260](#)
- [query-api on page 266](#)
- [secondary on page 279](#)
- [token-api on page 303](#)
- [invalid-authentication-entry-timeout on page 227](#)

## address (Identity Management Advanced Query Secondary)

<b>Syntax</b>	<code>address ip-address;</code>
<b>Hierarchy Level</b>	[edit services user-identification identity-management connection secondary]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure the IP address for the secondary Juniper Identity Management Service (JIMS) server. The SRX Series device requires the server IP address to connect to the server to obtain an access code that allows it to query the server for user identity information. The IP address is configured as part of a collection of information which includes the SRX Series device's client ID, client secret, and ca-certificate information.</p> <p>The SRX Series device uses the secondary server when the primary one fails. You configure the SRX Series device to connect to the primary server separately.</p>



**NOTE:** This feature supports only IPv4 addresses.

Juniper Identity Management Service uses the credentials grant access token process, which requires use of OAuth2 to authenticate and authorize access to it by the SRX Series device. (See RFC 6749.) Prior to querying the secondary server, the SRX Series device must go through a process which, as mentioned previously, entails obtaining an access code. The Juniper Identity Management Service server must authenticate the SRX Series device before it allows the SRX Series device to query it for user identity information. When the SRX Series device connects to the Juniper Identity Management Service server, it sends the server its identifying client ID, client secret, and ca-certificate. This information must be consistent with the API client configured on the Juniper Identity Management Service secondary server.



**NOTE:** The SRX Series device sends a unique set of identification information to the primary server and the secondary server.

After the SRX Series device is authenticated and issues queries for user identity information, it inserts that information into its authentication table. When a user requests access to a protected resource, the SRX Series device authenticates the user based on the authentication table entry for that user.

The Juniper Identity Management Service provides a global, end-to-end user identity management solution that allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting. It provides a centralized identity collection (CIC) system from which the SRX Series device obtains user identity information. It also includes device

endpoint context, also referred to as device identity, and machine identity (machine ID) information for the user.



**WARNING:** Before you use this feature, you must disable any other actively used options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication and the ClearPass query and device-id functions are configured and committed.

**Required Privilege  
Level**

services—To view this statement in the configuration.

services-control—To add this statement to the configuration.

**Related  
Documentation**

- *Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS*
- [address on page 143](#)
- [authentication-entry-timeout on page 155](#)
- [batch-query on page 161](#)
- [ca-certificate on page 166](#)
- [client-id on page 174](#)

---

## admin-search

---

<b>Syntax</b>	admin-search { distinguished-name <i>distinguished-name</i> ; password <i>password</i> ; }
<b>Hierarchy Level</b>	[edit access ldap-options search], [edit access profile <i>profile-name</i> ldap-options search]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify that a Lightweight Directory Access Protocol (LDAP) administrator search is performed. To perform an administrator search, you must specify administrator credentials, which are used in the bind as part of performing the search.
<b>Options</b>	The remaining statements are explained separately. <b>Default:</b> Anonymous search. To perform an administrator search, you must specify administrator credentials, which are used in the bind as part of performing the search.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.


## allow-reverse-ecmp

---

<b>Syntax</b>	allow-reverse-ecmp
<b>Hierarchy Level</b>	[edit security flow]
<b>Release Information</b>	Statement introduced in Junos OS Release 17.3.
<b>Description</b>	<p>Enable ECMP support for reverse traffic. In this case, Junos OS for SRX Series devices and vSRX instances use a hash algorithm to determine the interface to use for reverse traffic in a flow. This process is similar to asymmetric routing in which a packet traverses from a source to a destination in one path and takes a different path when it returns to the source.</p> <p>If you do not enable this feature, the software selects a route in the ECMP set to the incoming interface for reverse traffic, which is the default behavior.</p>
<b>Required Privilege Level</b>	security—To view this in the configuration. security-control—To add this to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding ECMP Flow-Based Forwarding</i></li><li>• <i>Understanding ECMP Flow-Based Forwarding for Reverse Traffic on SRX Series Devices and vSRX Instances</i></li></ul>



## application (Security Policies)

<b>Syntax</b>	<pre>application {     [application];     any; }</pre>
<b>Hierarchy Level</b>	[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> match] [edit security policies global policy <i>policy-name</i> match]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Specify the IP or remote procedure call (RPC) application or set of applications to be used as match criteria.
<b>Options</b>	<p><b><i>application-name-or-set</i></b>—Name of the predefined or custom application or application set used as match criteria.</p> <p><b><i>any</i></b>—Any predefined or custom applications or application sets.</p>
<div>  <p><b>NOTE:</b> A custom application that does not use a well-known destination port for the application will not be included in the <i>any</i> option, and must be named explicitly.</p> </div>	
<b>Required Privilege Level</b>	security—To view this statement in the configuration. security-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Security Policies Overview</i></li> </ul>

## application-services (Security Policies)

<b>Syntax</b>	<pre> application-services {   advanced-anti-malware-policy <i>advanced-anti-malware-policy</i>;   application-firewall {     rule-set <i>rule-set</i>;   }   application-traffic-control {     rule-set <i>rule-set</i>;   }   gprs-gtp-profile <i>gprs-gtp-profile</i>;   gprs-sctp-profile <i>gprs-sctp-profile</i>;   idp <i>idp</i>;   (redirect-wx <i>redirect-wx</i>   reverse-redirect-wx <i>reverse-redirect-wx</i>);   security-intelligence-policy <i>security-intelligence-policy</i>;   ssl-proxy {     profile-name <i>profile-name</i>;   }   uac-policy {     captive-portal <i>captive-portal</i>;   }   utm-policy <i>utm-policy</i>; } </pre>
<b>Hierarchy Level</b>	[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit]
<b>Release Information</b>	Statement modified in Junos OS Release 11.1.
<b>Description</b>	Enable application services within a security policy. You can enable service such as application firewall, IDP, UTM, SSL proxy, and so on by specifying them in a security policy permit action, when the traffic matches the policy rule.
<b>Options</b>	<p><b>advanced-anti-malware-policy</b>—Specify advanced-anti-malware policy name.</p> <p><b>application-firewall</b>—Specify the rule sets configured as part of application firewall to be applied to the permitted traffic.</p> <p><b>application-traffic-control</b>—Specify the rule sets configured as part of AppQoS, application-aware quality of service, to be applied to the permitted traffic.</p> <p><b>gprs-gtp-profile</b>—Specify GPRS tunneling protocol profile name.</p> <p><b>gprs-sctp-profile</b>—Specify GPRS stream control protocol profile name.</p> <p><b>idp</b>—Apply Intrusion detection and prevention (IDP) as application services.</p> <p><b>redirect-wx</b>—Specify the WX redirection needed for the packets that arrive from the LAN.</p>

**reverse-redirect-wx**—Specify the WX redirection needed for the reverse flow of the packets that arrive from the WAN.

**security-intelligence-policy**—Specify security-intelligence policy name.

**uac-policy** —Enable Unified Access Control (UAC) for the security policy. This statement is required when you are configuring the SRX Series device to act as a Junos OS Enforcer in a UAC deployment.

**captive-portal** ***captive-portal***—Specify the preconfigured security policy for captive portal on the Junos OS Enforcer to enable the captive portal feature. The captive portal policy is configured as part of the UAC policy. By configuring the captive portal feature, you can redirect traffic destined for protected resources to the IC Series device or to the URL you configure on the Junos OS Enforcer.

**utm-policy** ***utm-policy***—Specify UTM policy name. The UTM policy configured for antivirus, antispam, content-filtering, traffic-options, and Web-filtering protocols is attached to the security policy to be applied to the permitted traffic.

**Required Privilege Level** security—To view this statement in the configuration.  
security-control—To add this statement to the configuration.

**Related Documentation**

- *Application Firewall Overview*

## assemble

**Syntax**

```
assemble {
    common-name common-name;
}
```

**Hierarchy Level** [edit access ldap-options],  
[edit access profile *profile-name* ldap-options]

**Release Information** Statement introduced in Release 8.5 of Junos OS.

**Description** Specify that a user's LDAP distinguished name (DN) is assembled through the use of a common name identifier, the username, and base distinguished name.

**Options** **common-name** ***common-name***—Common name identifier used as a prefix for the username during the assembly of the user's distinguished name. For example, **uid** specifies “user id,” and **cn** specifies “common name.”

**Required Privilege Level** access—To view this statement in the configuration.  
access-control—To add this statement to the configuration.

## auth-only-browser

---

<b>Syntax</b>	<code>auth-only-browser &lt;auth-user-agent [<i>user-agent</i>] &gt;;</code> <code>auth-only-browser;</code>
<b>Hierarchy Level</b>	[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit firewall-authentication pass-through] [edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit firewall-authentication user-firewall]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D90.
<b>Description</b>	<p>Configure firewall authentication to ignore non-browser HTTP/HTTPS traffic. This feature allows you to ensure that unauthenticated users issuing access requests through HTTP/HTTPS browsers are presented with a captive portal interface to allow them to authenticate. By default, firewall authentication responds to all HTTP/HTTPS traffic.</p> <p>It can happen that non-browser HTTP/HTTPS services running in the background can trigger captive portal authentication, creating a race condition that suppresses presentation of the captive portal interface to the HTTP/HTTPS browser user.</p> <p>When <b>auth-only-browser</b> is configured, non-browser HTTP traffic is dropped to allow for captive portal to be presented to unauthenticated users who request access using a browser.</p>
<b>Options</b>	<p><b>auth-user-agent <i>user-agent</i></b>—Allow the SRX Series device to use the user-agent strings that you specify to verify that the browser traffic is HTTP/HTTPS traffic. Firewall authentication checks the strings against the User-Agent field in the browser header. You can specify only one value for this parameter. It must not contain spaces and it does not need to be enclosed in parenthesis. For example, <b>auth-user-agent</b> might specify Opera1 as one of its values.</p> <p>You can use the <b>auth-user-agent</b> parameter alone for pass-through or user-firewall authentication or in conjunction with <b>auth-only-browser</b>.</p>
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">auth-user-agent on page 153</a></li><li>• <i>Understanding SRX Series Assured Captive Portal Support for Unauthenticated Browser Users</i></li></ul>

## auth-user-agent


<b>Syntax</b>	<code>auth-user-agent [<i>user-agent</i>];</code>
<b>Hierarchy Level</b>	<p>[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit firewall-authentication pass-through]</p> <p>[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit firewall-authentication pass-through auth-only-browser]</p> <p>[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit firewall-authentication user-firewall]]</p> <p>[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit firewall-authentication user-firewall auth-only-browser]</p>
<b>Description</b>	<p>Specify a user-agent value to be used to verify that the user's browser traffic is HTTP/HTTPS traffic. Firewall authentication checks the value against the User-Agent field in the browser header. For example, the <b>auth-user-agent</b> parameter might specify Opera1 to be verified against the browser's User-Agent field for a match.</p> <p>You can use the <b>auth-user-agent</b> parameter alone for pass-through or user-firewall authentication or in conjunction with <b>auth-only-browser</b>.</p> <p>The <b>auth-only-browser</b> directs firewall authentication to ignore non-browser HTTP/HTTPS traffic to ensure that unauthenticated users using an HTTP/HTTPS browser are authenticated by captive portal before they are granted access to protected resources. It can happen that non-browser HTTP/HTTPS services running in the background can trigger captive portal authentication creating a race condition that suppresses presentation of the captive portal interface to the HTTP/HTTPS browser user.</p>
<b>Options</b>	<p><b>user-agent</b>—A string to be matched against values specified in the browser's User-Agent header field that identifies the traffic as HTTP/HTTPS browser traffic. You can specify only one user-agent value for a security policy configuration. The value must not contain spaces. You do not need to enclose the string in parenthesis. The length of a string must be 17 characters or less.</p>
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">auth-only-browser on page 152</a></li> <li>• <i>Understanding SRX Series Assured Captive Portal Support for Unauthenticated Browser Users</i></li> </ul>

## authentication-entry-timeout (Services User Identification)

---

<b>Syntax</b>	authentication-entry-timeout <i>minutes</i> ;
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Configure for the integrated ClearPass authentication and enforcement feature the timeout interval after which idle entries in the ClearPass authentication table expire.
<b>Options</b>	<p><b>minutes</b>—Timeout interval. The timeout interval begins from when the user authentication entry is added to the ClearPass authentication table. If a value of 0 is specified, the entries will never expire.</p> <p><b>Range:</b> 10 through 1440 minutes</p> <p><b>Default:</b> 30 minutes</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration</p> <p>services-control—To add this statement to the configuration.</p>

## authentication-entry-timeout (Identity Management Advanced Query)

<b>Syntax</b>	authentication-entry-timeout <i>time-out-in-minutes</i> ;
<b>Hierarchy Level</b>	[edit services user-identification identity-management]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure the time-out for the user identity authentication entries. You configure this parameter as part of the advanced user identity query feature for SRX Series devices.</p> <p>The advanced user identity query feature for SRX Series devices relies on the Juniper Identity Management Service (JIMS), a centralized identity collection (CIC) system from which the SRX Series device obtains the user identity information. It provides a global, end-to-end user identity management solution that allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.</p>
	<div>  <p><b>WARNING:</b> Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.</p> </div>
<b>Options</b>	<p><b><i>time-out-in-minutes</i></b>—The amount of time after which a user identity authentication entry expires.</p> <p><b>Range:</b> 0 or 10 through 1440 minutes. Specification of 0 indicates no time-out.</p> <p><b>Default:</b> 69 minutes</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</i></li> <li>• <a href="#">address on page 145</a></li> <li>• <a href="#">batch-query on page 161</a></li> <li>• <a href="#">ca-certificate on page 168</a></li> <li>• <a href="#">client-id on page 174</a></li> <li>• <a href="#">connect-method on page 189</a></li> </ul>

- [filter on page 207](#)
- [query-api on page 266](#)
- [secondary on page 279](#)
- [token-api on page 303](#)



## authentication-source (Services User Identification ClearPass)

**Syntax**

```
authentication-source aruba-clearpass {
  authentication-entry-timeout minutes;
  no-user-query;
  traceoptions {
    file {
      filename;
      files number;
      match regular-expression;
      size maximum-file-size;
      (world-readable |no-world-readable);
    }
    flag flag;
    level level ;
    no-remote-trace;
  }
  user-query {
    web-server {
      servername;
      connect-method https|http;
      address server-address;
      port port -number;
    }
  }
}
```

**Hierarchy Level** [edit services user-identification]

**Release Information** Statement introduced in Junos OS Release 12.3X48-D30.

**Description** Configure ClearPass as the authentication source for the integrated ClearPass authentication and enforcement feature.

The ClearPass Policy Manager (CPPM), as the authentication source and client of the SRX Series device HTTP server, initiates a connection to the SRX Series device using the Web API that the SRX Series device exposes to it. The CPPM sends user authentication and identity information to the SRX Series device across this connection using HTTP or HTTPS POST request messages.

The remaining statements are explained separately. See [CLI Explorer](#).



**NOTE:** `set authentication-source aruba-clearpass` command can be used to configure the Juniper Identity Management Service as the authentication-source.

**Required Privilege Level** services—To view this statement in the configuration.

services-control—To add this statement to the configuration.

## authentication-source (Services User Identification Device Identity)

<b>Syntax</b>	authentication-source (active-directory   network-access-controller)
<b>Hierarchy Level</b>	[edit services user-identification device-information]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D70.
<b>Description</b>	<p>Specify the device identity authentication source. The integrated user firewall device identity authentication feature enables you to control access to resources based on the identity of the device and not that of the user of the device. Supported authentication sources include Active Directory and third-party network access systems.</p> <p>The SRX Series device obtains the device identity information for authenticated devices from the authentication source. After the SRX Series device obtains the device information, it creates a device identity authentication table to use to store device identity entries.</p> <p>The SRX Series device searches the device identity authentication table for a device match when traffic issuing from a user's device arrives at the SRX Series device. If it finds a match, the SRX Series device searches for a matching security policy. If it finds a matching security policy, the security policy's action is applied to the traffic.</p>
<b>Options</b>	<p><b>active-directory</b>—Specifies Microsoft Active Directory as the authentication source.</p> <p>The SRX Series device obtains the device identity information for authenticated devices from Active Directory. It reads the Active Directory domain controller event logs to obtain the IP addresses of devices logged into the domain and authenticated by Windows. Then, for each authenticated device, it obtains from the Active Directory LDAP server the names of the groups to which the device belongs, based on the IP addresses of the devices.</p> <p><b>network-access-controller</b>—Specifies the authentication source as that of a third-party network access controller (NAC) system. If your network environment is configured for a NAC solution and you decide to take this approach, the NAC system sends the device identity information to the SRX Series device. The SRX Series device exposes a RESTful Web services API implementation that enables you to send the device identity information to the SRX Series device in a formal XML structure. If you take this approach, you must verify that your NAC solution works with the SRX Series device.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding Access Control to Network Resources Based on Device Identity Information</i></li> <li>• <i>Understanding the Device Identity Attributes and Profiles for the Integrated User Firewall Device Identity Authentication Feature</i></li> </ul>

- *Understanding the Device Identity Authentication Table and Its Entries*

## batch query

**Syntax**    batch-query {  
              items-per-batch *items-per-batch*;  
              query-interval *seconds*;  
          }

**Hierarchy Level**    [edit services user-identification identity-management]

**Release Information**    Statement introduced in Junos OS Release 15.1X49-D100.

**Description**    Configure the SRX Series device to communicate with the Juniper Identity Management Service server to obtain an access token to use to query the server for identity information for an individual user (IP query and user query) or a group of users (batch query). The access token allows the SRX Series device to connect to the Juniper Identity Management Service server to query it for this information.

The batch-query statement allows the SRX Series device to periodically query the Juniper Identity Management Service server automatically for user identity information. When you start the SRX Series device, it automatically sends a batch query request to the Juniper Identity Management Service server to obtain all of the user identity information that it expects. After it receives the user identity information, the SRX Series device periodically issues a query to the Juniper Identity Management Service server requesting that a new report be generated to include any newly available user identity items so as to keep its authentication table entries up-to-date.

You can configure an interval for when the batch query request is to be issued and the maximum number of user identity items to be sent in response to the query in one batch. Only remaining available user identity items are sent if their number is fewer than the configured maximum.



**NOTE:** If you need to refresh the user identities in the authentication table—that is, everything that was received automatically when you started the system and from subsequent batch queries or IP queries—you can clear the authentication table by disabling the user-identification feature configuration. Afterward, you can reconfigure the advanced-query feature to retrieve all available user identities. To accomplish this, you use the following sequence of CLI statements: deactivate services user-identification, commit, activate services user-identification, commit.



**WARNING:** Before you use this feature, you must disable active-directory-access and authentication-source options under the [edit services user-identification] hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.

The advanced query feature queries the Juniper Identity Management Service for user identification information that the SRX Series stores in its authentication table and uses to authenticate users. Use of the Juniper Identity Management Service allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.

To obtain device information, such as device identity, groups, and the operating system, from the Juniper Identity Management Service server using either the batch-query or ip-query configuration, you must set the device authentication source, as follows.

```
user@host# set services user-identification device-information authentication-source  
network-access-controller
```

**Options** **items-per-batch**—The maximum number of user identity items that the SRX Series device will accept in one batch in response to the query.

**Default:** 200

**Range:** 100-1000

**query-interval**—Interval in seconds after which the SRX Series device will issue a query request for newly generated user identities.

**Default:** 5

**Range:** 1-60

**Required Privilege  
Level**

services—To view this statement in the configuration.

services-control—To add this statement to the configuration.

**Related  
Documentation**

- *Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS*
- [filter on page 207](#)
- [port on page 255](#)
- [primary on page 260](#)
- [query-api on page 266](#)
- [secondary on page 279](#)
- [token-api on page 303](#)

## banner (Access FTP HTTP Telnet Authentication)

<b>Syntax</b>	<pre> banner {     fail <i>string</i>;     login <i>string</i>;     success <i>string</i>; } </pre>
<b>Hierarchy Level</b>	[edit access firewall-authentication pass-through (ftp   http   telnet)]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.5.</p> <p>HTTPS for Web authentication is supported on SRX5400, SRX5600, and SRX5800 devices and SRX Series Services Gateways from Junos OS Release 12.1X44-D10 and on SRX300, SRX320, SRX340, SRX345, SRX550M, and SRX1500 Services Gateways from Junos OS Release 15.1X49-D40.</p>
<b>Description</b>	Configure the banners that appear to users during the FTP, HTTP, HTTPS, and Telnet firewall authentication process. The banners appear during login, after successful authentication, and after failed authentication.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	<p>access—To view this statement in the configuration.</p> <p>access-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Understanding Firewall Authentication Banner Customization</i></li> </ul>

## banner (Access Web Authentication)

---

<b>Syntax</b>	<code>banner {     success <i>string</i>; }</code>
<b>Hierarchy Level</b>	[edit access firewall-authentication web-authentication]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Configure the banner that appears to users during the Web authentication process. The banner appears during login, after successful authentication, and after failed authentication.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.

## base-distinguished-name

---



<b>Syntax</b>	<code>base-distinguished-name <i>base-distinguished-name</i>;</code>
<b>Hierarchy Level</b>	[edit access ldap-options], [edit access profile <i>profile-name</i> ldap-options]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	<p>Specify the base distinguished name (DN), which can be used in one of the following ways:</p> <ul style="list-style-type: none"><li>• If you are using the <b>assemble</b> statement so that the user's distinguished name is being assembled, the base distinguished name is appended to a username to generate the user's distinguished name. The resulting distinguished name is used in the LDAP bind call.</li><li>• If you are using the <b>search</b> statement so that the user's distinguished name is found by a search, the search is restricted to the subtree of the base distinguished name.</li></ul>
<b>Options</b>	<i>base-distinguished-name</i> —Series of basic properties that define the user. For example in the base distinguished name <b>o=juniper,c=us</b> , where <b>c</b> stands for country, and <b>o</b> for organization.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.



## ca-certificate (Services User Identification)

<b>Syntax</b>	<code>ca-certificate <i>certificate-file</i>;</code>
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass user-query https]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Specify the certificate file that the SRX Series device uses to verify the Clearpass server's certificate for the SSL connection that is used for the user query function. As the ClearPass administrator, you must export the server's certificate from the CPPM and import it to the SRX Series device. Afterward, you must configure the ca-certificate path and the certificate filename on the SRX Series device. Here is an example:</p> <pre>'/var/tmp/RADIUSServerCertificate.crt'</pre> <p>This configuration is part of the Integrated ClearPass Authentication and Enforcement feature user query function configuration. User query enables the SRX Series device to query the ClearPass Policy Manager (CPPM) for authentication and identity information for an individual user under certain circumstance when it does not receive that information from the CPPM through the Web API POST requests.</p>
<b>Required Privilege Level</b>	<p><b>services</b>—To view this statement in the configuration.</p> <p><b>services-control</b>—To add this statement to the configuration.</p>

## ca-certificate (Identity Management Advanced Query Primary)

<b>Syntax</b>	<code>ca-certificate <i>ca-certificate</i>;</code>
<b>Hierarchy Level</b>	[edit services user-identification identity-management connection primary]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure the file name of the Juniper Identity Management Service's ca-certificate for the primary server. The certificate enables the SRX Series device to verify the identity of Juniper Identity Management Service (JIMS) and that it is trusted for the SSL connection.</p> <p>Before you configure ca-certificate file name, the administrator of the Juniper Identity Management Services server must export the certificate and import it to the SRX Series device. The administrator must configure the complete path and file name of the certificate where it is installed on the SRX Series device, for example, '/var/db/RADIUSServerCertificate.crt'. If the ca-certificate is not configured, the SRX Series device can not verify the Juniper Identity Management Service certificate.</p>
	<p> <b>NOTE:</b> The SRX Series device supports a self signed + BASE64 encoded X.509 cert only.</p>
	<p>The advanced user identity query feature allows you to obtain user identity information from the Juniper Identity Management Service (JIMS) through queries. It allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.</p>
	<p> <b>WARNING:</b> Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.</p>
	<p>If the configuration entails a primary and a secondary Juniper Identity Management Services server, you configure individual certificates for each of them.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</i></li> </ul>

- [connect-method on page 189](#)
- [filter on page 207](#)
- [port on page 255](#)
- [primary on page 260](#)
- [query-api on page 266](#)
- [token-api on page 303](#)
- [client-id on page 174](#)
- [invalid-authentication-entry-timeout on page 227](#)

## ca-certificate (Identity Management Advanced Query Secondary)

<b>Syntax</b>	<code>ca-certificate <i>ca-certificate</i>;</code>
<b>Hierarchy Level</b>	[edit services user-identification identity-management connection secondary]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure the file name of the Juniper Identity Management Service's ca-certificate for the secondary server that enables the SRX Series device to verify its identity for the SSL connection and that it is trusted.</p> <p>Before you configure ca-certificate filename, the administrator of the Juniper Identity Management Services system must export the certificate and import it to the SRX Series device. The administrator must configure the complete path and file name of the certificate where it is installed on the SRX Series device, for example, <code>'/var/db/RADIUSServerCertificate.crt'</code>.</p> <p>If the ca-certificate is not configured, the SRX Series device will not verify the certificate.</p> <p>The SRX Series device uses the client credentials grant type access token. For this method, Juniper Identity Management Service requires use of OAuth2 to authenticate and authorize access by the SRX Series device. (See RFC 6749).To authenticate itself to the Juniper Identity Management Service, the SRX Series device must acquire an access token. It must authenticate itself before it can query the server for user identity information.</p>



**NOTE:** The SRX Series device supports a self signed + BASE64 encoded X.509 cert only.

To obtain an access token, the SRX Series device must specify the client secret and the client ID. It must also specify the full path and filename of the ca-certificate, as it was installed on the SRX Series device. All of these values must be consistent with the API client configured on the Juniper Identity Management Service.

You specify a separate set of values for the primary server.

If both a primary server and a secondary server are configured, the SRX Series device always attempts to connect to the primary server first.



**WARNING:** Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.


<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</a></li> <li>• <a href="#">filter on page 207</a></li> <li>• <a href="#">port on page 255</a></li> <li>• <a href="#">primary on page 260</a></li> <li>• <a href="#">query-api on page 266</a></li> <li>• <a href="#">secondary on page 279</a></li> <li>• <a href="#">token-api on page 303</a></li> <li>• <a href="#">invalid-authentication-entry-timeout on page 227</a></li> </ul>

## ca-profile (Services)

<b>Syntax</b>	<code>ca-profile <i>ca-profile</i>;</code>
<b>Hierarchy Level</b>	[edit services unified-access-control infranet-controller <i>hostname</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Specify the certificate authority (CA) of the certificate that the SRX Series device should use in communications with an Infranet Enforcer. The SRX Series device uses the CA to validate the IC Series UAC Appliance server certificate.</p> <p>Use this statement if you have loaded certificates from multiple certificate authorities (CAs) onto your SRX Series device and you need to configure the device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series appliance .</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

## certificate (System Services)

---

<b>Syntax</b>	<code>certificate <i>certificate-filename</i>;</code>
<b>Hierarchy Level</b>	[edit system services webapi https]
<b>Release Information</b>	Statement introduced in Junos OS release 12.3X48-D30.
<b>Description</b>	<p>Configures a custom certificate to be used for the Integrated ClearPass Authentication and Enforcement feature Web API (webapi) configuration when the HTTPS protocol is configured.</p> <p>When you configure the Web API (webapi) function to use HTTPS, you can use the default certificate, a custom one, or a certificate generated by the PKI local store.</p> <p>If you configure a custom certificate, you must configure a certificate key with it. Here is an example of how to configure a certificate and certificate key:</p> <pre>set system services webapi https certificate /var/tmp/certificate.crt set system services webapi https certificate-key /var/tmp/certificate.key</pre> <div> <b>NOTE:</b> The Web API supports only the PEM format for the custom certificate and certificate key.</div>
<b>Required Privilege Level</b>	<p><b>system</b>—To view this statement in the configuration.</p> <p><b>system-control</b>—To add this statement to the configuration.</p>

---

## certificate-key (System Services)

---

**Syntax**    `certificate-key filename;`

**Hierarchy Level**    [edit system services webapi https]

**Release Information**    Statement introduced in Junos OS release 12.3X48-D30.

**Description**    Configures the filename of the certificate key to use with the specified custom certificate for the Web API (webapi) HTTPS configuration. A certificate key is required if a custom certificate file is used.




**NOTE:** The Integrated ClearPass Authentication and Enforcement feature Web API supports only the PEM format for the custom certificate and certificate key.

---

**Required Privilege Level**    **system**—To view this statement in the configuration.  
                                         **system-control**—To add this statement to the configuration.

## certificate-verification

---

<b>Syntax</b>	certificate-verification [ optional   required   warning ]
<b>Hierarchy Level</b>	[edit services unified-access-control]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1.
<b>Description</b>	<p>This option determines whether server certificate verification is required when initiating a connection between an SRX Series device and a Junos Pulse Access Control Service in a UAC configuration. If no CA profile contains the certificate authority (CA) that signed the configured server certificate for the Access Control Service, this option determines whether the commit check should fail, a warning should be displayed, or the connection should be made without any warning.</p>
	<div><div></div><div><p><b>NOTE:</b> For strict security, this option should be reset to <b>required</b>, and the proper CA certificate should be specified in the CA profile.</p></div></div>
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>optional</b>—Certificate verification is not required. If the CA certificate is not specified in the <b>ca-profile</b> option, the commit check passes and no warning is issued.</li><li>• <b>required</b>—Certificate verification is required. If the CA certificate is not specified in the <b>ca-profile</b> option, an error message is displayed, and the commit check fails. Use this option to ensure strict security.</li></ul> <p><b>Default:</b> <b>warning</b>—Certificate verification is not required. A warning message is displayed during commit check if the CA certificate is not specified in the <b>ca-profile</b> option.</p>
<b>Required Privilege Level</b>	security—To view this statement in the configuration. security-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding Communications Between the Junos OS Enforcer and the IC Series UAC Appliance</i></li><li>• <i>Understanding User Role Firewalls</i></li></ul>




## client (System Services)

<b>Syntax</b>	<code>client <i>ip-address</i>;</code>
<b>Hierarchy Level</b>	[edit system services webapi]
<b>Release Information</b>	Statement introduced in Junos OS release 12.3X48-D30.
<b>Description</b>	<p>Configures the IP address of the client. For the Integrated ClearPass Authentication and Enforcement feature Web API daemon configuration, the client is the ClearPass Policy Manager (CPPM).</p> <p>The SRX Series Web API daemon acts as an HTTP(S) server. The CPPM client sends POST request messages containing user authentication and identity information to the Web API daemon. The SRX Series device accepts information only from the configured address of the client.</p>
<b>Required Privilege Level</b>	<p><b>system</b>—To view this statement in the configuration.</p> <p><b>system-control</b>—To add this statement to the configuration.</p>

## client-id (Services User Identification)



<b>Syntax</b>	<code>client-id <i>client-id</i>;</code>
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass user-query]
<b>Release Information</b>	Statement introduced in Junos OS release 12.3X48-D30.
<b>Description</b>	<p>Configures the client ID that the SRX Series device requires to obtain an access token for the Integrated ClearPass Authentication and Enforcement user query function. The client ID must be consistent with the API client configured on the CPPM.</p> <p>The ClearPass endpoint API requires use of OAuth (RFC 6749) to authenticate and authorize the SRX Series device access. The SRX Series device uses the Client Credentials grant type access token, which is one of the two types that ClearPass supports.</p> <p>If it is configured, the user query function allows the SRX Series device to query the CPPM for authentication and identity information about individual users when it does not receive this information from the CPPM through the SRX Series Web API daemon (webapi).</p>
<b>Required Privilege Level</b>	<p><b>services</b>—To view this statement in the configuration.</p> <p><b>services-control</b>—To add this statement to the configuration.</p>

## client-id (Identity Management Advanced Query Primary)

<b>Syntax</b>	client-id <i>client-id</i> ;
<b>Hierarchy Level</b>	[edit services user-identification identity-management connection primary]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>For the advanced user query function, configure the client ID that the SRX Series provides to the Juniper Identity Management Service (JIMS) primary server as part of its authentication to it. The SRX Series device must authenticate to the server to obtain an access token that allows the SRX Series device to query the server for user identity information. The client ID must be consistent with the API client configured on the Juniper Identity Management Service primary server.</p> <p>Juniper Identity Management Service requires the SRX Series device to use OAuth2 to authenticate to it before the SRX Series device is allowed to query it for user identity information. OAuth2 requires that the client, in this case the SRX Series device, provide credentials. If the client is authenticated, it is granted an access token. (See RFC 6749)</p> <p>To obtain an access token, the SRX Series device must specify the client ID and the client secret. Both the client ID and the client secret must be consistent with the API client configured on the Juniper Identity Management Service that is used as the primary server.</p> <p>You configure this information for a secondary server separately. The SRX Series device always attempts to connect to the primary server first.</p> <p>The advanced user identity query feature relies on the Juniper Identity Management Service that provides a global, end-to-end user identity management solution that allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.</p> <p>It provides a centralized identity collection (CIC) system from which the SRX Series device obtains user identity information. It also includes device endpoint context, also referred to as device identity, and machine identity (machine ID) information for the user.</p>
	<div>  <p><b>WARNING:</b> Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.</p> </div>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

- Related Documentation**
- *Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS*
  - [connection on page 185](#)
  - [connect-method on page 189](#)
  - [filter on page 207](#)
  - [port on page 255](#)
  - [primary on page 260](#)
  - [invalid-authentication-entry-timeout on page 227](#)

## client-id (Identity Management Advanced Query Secondary)

<b>Syntax</b>	<code>client-id <i>client-id</i>;</code>
<b>Hierarchy Level</b>	[edit services user identification identity-management connection secondary]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure for the secondary Juniper Identity Management Service (JIMS) server connection the client ID that the SRX Series requires to obtain an access token so that it can issue successfully the advanced user query function.</p> <p>This process is part of the client credentials grant type access token. For the client credentials grant type access token, Juniper Identity Management Service requires use of OAuth2 to authenticate and authorize access by the SRX Series device. (See RFC 6749.) To authenticate itself to the Juniper Identity Management Service, the SRX Series device must acquire an access token. It must authenticate itself before it can query the server for user identity information. To obtain an access token, the SRX Series device must specify the client ID and the client secret. Both the client ID and the client secret must be consistent with the API client configured on the Juniper Identity Management Service secondary server.</p> <p> <b>NOTE:</b> The client ID is part of a set of credentials. You configure a set of credentials for both the primary server and the secondary server. The SRX Series device always attempts to connect to the primary server first.</p> <p>The advanced user identity query feature relies on the Juniper Identity Management Service that provides a global, end-to-end user identity management solution that allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.</p> <p>It provides a centralized identity collection (CIC) system from which the SRX Series device obtains user identity information. It also includes device endpoint context, also referred to as device identity, and machine identity (machine ID) information for the user.</p> <p> <b>WARNING:</b> Before you use this feature, you must disable any other actively used options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication and the ClearPass query and device-id functions are configured and committed.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</a></li> <li>• <a href="#">address on page 143</a></li> <li>• <a href="#">authentication-entry-timeout on page 155</a></li> <li>• <a href="#">batch-query on page 161</a></li> <li>• <a href="#">ca-certificate on page 168</a></li> <li>• <a href="#">connect-method on page 189</a></li> <li>• <a href="#">ip-query on page 230</a></li> <li>• <a href="#">invalid-authentication-entry-timeout on page 227</a></li> </ul>
------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## client-group

---

<b>Syntax</b>	<code>client-group [ <i>group-names</i> ];</code>
<b>Hierarchy Level</b>	<code>[edit access profile <i>profile-name</i> client <i>client-name</i>]</code> <code>[edit access profile <i>profile-name</i> session-options]</code>
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify a list of client groups that the client belongs to. If the group list is not defined as part of the client profile, the client group configured at the <b>[edit access profile session-options]</b> hierarchy level is used.
<b>Options</b>	<b><i>group-names</i></b> —Names of one or more groups the client belongs to, separated by spaces—for example <b>g1, g2, g3</b> . The total length of the group name string cannot exceed 256 characters.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.

## client-idle-timeout (Access Profile)

---

<b>Syntax</b>	<code>client-idle-timeout <i>minutes</i>;</code>
<b>Hierarchy Level</b>	<code>[edit access profile <i>profile-name</i> session-options]</code>
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the grace period that begins after an authenticated user terminates all sessions and connections. Authentication is not required if a new connection is initiated during the grace period by the same user.
<b>Options</b>	<b><i>minutes</i></b> —Number of minutes of idle time that elapse before the session is terminated. <b>Range:</b> 10 through 255 minutes <b>Default:</b> 10 minutes
<b>Required Privilege Level</b>	<b>access</b> —To view this statement in the configuration. <b>access-control</b> —To add this statement to the configuration.

## client-name-filter


---

<b>Syntax</b>	<pre>client-name-filter <i>client-name</i> {     count <i>number</i>;     domain-name <i>domain-name</i>;     separator <i>special-character</i>; }</pre>
<b>Hierarchy Level</b>	<code>[edit access profile <i>profile-name</i>]</code>
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Define client-name-related restrictions. Clients whose names follow these restrictions are authenticated on the server.
<b>Options</b>	<b><i>client-name</i></b> —Name of the client.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	<b>access</b> —To view this statement in the configuration. <b>access-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## client-secret (Services User Identification)

<b>Syntax</b>	<code>client-secret <i>client-secret</i>;</code>
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass user-query]
<b>Release Information</b>	Statement introduced in Junos OS release 12.3X48-D30.
<b>Description</b>	<p>Configures the client secret used with the client ID that the SRX Series device requires to obtain an access token for the Integrated ClearPass Authentication and Enforcement user query function. The client secret must be consistent with the client secret configured on the CPPM.</p> <p>The ClearPass endpoint API requires use of OAuth (RFC 6749) to authenticate and authorize SRX Series device access. The SRX Series device uses the Client Credentials grant type access token, which is one of the two types that ClearPass supports.</p> <p>If it is configured, the user query function allows the SRX Series device to query the CPPM for authentication and identity information about individual users when it does not receive this information from the CPPM through the SRX Series Web API daemon (webapi).</p>
<b>Required Privilege Level</b>	<p><b>services</b>—To view this statement in the configuration.</p> <p><b>services-control</b>—To add this statement to the configuration.</p>



## client-secret (Identity Management Advanced Query Primary)

<b>Syntax</b>	<code>client-secret <i>client-secret</i>;</code>
<b>Hierarchy Level</b>	[edit services user-identification identity-management connection primary]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure for the advanced user identity query feature the client secret that the SRX Series provides to the Juniper Identity Management Service primary server as part of its authentication to it. The Juniper Identity Management Service uses OAuth2 to authenticate the SRX Series device and grant it an access token. (See RFC 6749). The SRX Series device must authenticate to the server to obtain a token that allows it to query the server for user identity information. The client secret must be consistent with the API client configured on the Juniper Identity Management Service (JIMS) primary server.</p> <p>The Juniper Identity Management Service uses OAuth2 to authenticate the SRX Series device and grant it an access token. (See RFC 6749). The SRX Series device must authenticate to the server before it can query the server for user identity information.</p> <p>If both a primary server and a secondary server are configured, the SRX Series device always attempts to connect to the primary server first.</p> <p>The advanced user identity query feature relies on the Juniper Identity Management Service (JIMS) that provides a global, end-to-end user identity management solution that allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.</p> <p>It provides a centralized identity collection (CIC) system from which the SRX Series device obtains user identity information. It also includes device endpoint context, also referred to as device identity, and machine identity (machine ID) information for the user.</p>
	<div>  <p><b>WARNING:</b> Before you use this feature, you must disable <code>active-directory-access</code> and <code>authentication-source</code> options under the <code>user-identification</code> hierarchy. You cannot commit this configuration if <code>active directory authentication</code> or the <code>ClearPass</code> query and <code>webapi</code> functions are configured and committed.</p> </div>
<b>Required Privilege Level</b>	<p><code>services</code>—To view this statement in the configuration.</p> <p><code>services-control</code>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</i></li> </ul>



- [filter on page 207](#)
- [port on page 255](#)
- [primary on page 260](#)
- [query-api on page 266](#)
- [secondary on page 279](#)
- [token-api on page 303](#)
- [client-id on page 174](#)
- [invalid-authentication-entry-timeout on page 227](#)

## client-secret (Identity Management Advanced Query Secondary)

<b>Syntax</b>	<code>client-secret <i>client-secret</i>;</code>
<b>Hierarchy Level</b>	[edit services <b>user-identification (Services)</b> identity-management connection secondary]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure for the secondary Juniper Identity Management Service (JIMS) server connection the client secret that the SRX Series requires to obtain an access token so that it can issue successfully the advanced user query function.</p> <p>This process is part of the client credentials grant type access token. For the client credentials grant type access token, Juniper Identity Management Service requires use of OAuth2 to authenticate and authorize access by the SRX Series device. (See RFC 6749.) To authenticate itself to the Juniper Identity Management Service, the SRX Series device must acquire an access token. It must authenticate itself before it can query the server for user identity information. To obtain an access token, the SRX Series device must specify the client secret, in addition to the client ID for the secondary server. Both the client secret and the client ID must be consistent with the API client configured on the Juniper Identity Management Service secondary server.</p> <p> <b>NOTE:</b> The client secret is part of a set of credentials. You configure a set of credentials for both the primary server and the secondary server. The SRX Series device always attempts to connect to the primary server first.</p> <p>The advanced user identity query feature relies on the Juniper Identity Management Service that provides a global, end-to-end user identity management solution that allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.</p> <p>It provides a centralized identity collection (CIC) system from which the SRX Series device obtains user identity information. It also includes device endpoint context, also referred to as device identity, and machine identity (machine ID) information for the user.</p> <p> <b>WARNING:</b> Before you use this feature, you must disable any other actively used options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication and the ClearPass query and device-id functions are configured and committed.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</a></li> <li>• <a href="#">filter on page 207</a></li> <li>• <a href="#">port on page 255</a></li> <li>• <a href="#">primary on page 260</a></li> <li>• <a href="#">query-api on page 266</a></li> <li>• <a href="#">secondary on page 279</a></li> <li>• <a href="#">token-api on page 303</a></li> <li>• <a href="#">client-id on page 174</a></li> <li>• <a href="#">invalid-authentication-entry-timeout on page 227</a></li> </ul>
------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## client-session-timeout (Access Profile)

---

<b>Syntax</b>	<code>client-session-timeout <i>minutes</i>;</code>
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> session-options]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the amount of time after which user sessions are terminated, regardless of user activity (also known as a forced or hard authentication timeout).
<b>Options</b>	<p><b>minutes</b> —Number of minutes after which user sessions are terminated.</p> <p><b>Range:</b> 1 through 10,000 minutes</p> <p><b>Default:</b> Off</p>
<b>Required Privilege Level</b>	<p><b>access</b>—To view this statement in the configuration.</p> <p><b>access-control</b>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Junos OS Security Configuration Guide</a></li> </ul>

## configuration-file

---

<b>Syntax</b>	<code>server-name configuration-file <i>filepath</i>;</code>
<b>Hierarchy Level</b>	[edit access securid-server]
<b>Release Information</b>	Statement introduced in Release 9.1 of Junos OS.
<b>Description</b>	Specify the path of the SecurID server configuration file. The file is copied on the devices in some directory location—for example, <code>/var/db/securid/sdconf.rec</code> .
<b>Options</b>	<ul style="list-style-type: none"><li>• <b><i>server-name</i></b>—Name of the SecurID authentication server.</li><li>• <b><i>filepath</i></b>—Path of the SecurID server configuration file.</li></ul>
<b>Required Privilege Level</b>	secret—To view this statement in the configuration. secret-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## connection (Identity Management Advanced Query)

**Syntax**

```

connection {
    connect-method (http | https);
    port port;
    primary {
        address address;
        ca-certificate ca-certificate;
        client-id client-id;
        client-secret client-secret;
    }
    query-api query-api;
    secondary {
        address address;
        ca-certificate ca-certificate;
        client-id client-id;
        client-secret client-secret;
    }
    token-api token-api;
}

```

**Hierarchy Level** [edit services user-identification identity-management]

**Release Information** Statement introduced in Junos OS Release 15.1X49-D100.

**Description** Configure parameters for connecting the SRX Series to the Juniper Identity Management Service server to obtain user identity and device information.

For the SRX Series device to obtain user identity information, you must first establish a connection to the Juniper Identity Management Service server. The parameters to specify for the connection include the protocol, the IP address of the Juniper Identity Management Service server, and the information to authenticate the SRX Series device to the Juniper Identity Management Service server.

If you are using more than one Juniper Identity Management Service server, you must configure each server separately. The SRX Series device always attempts to connect to the primary server first. If the primary server fails, the SRX Series device falls back to the secondary server. The SRX Series device periodically probes the failed primary server and reverts to it when it is available.



**NOTE:** Only configuration of the primary server is mandatory. You are not required to use a secondary server.

The SRX Series advanced user identity query feature queries the Juniper Identity Management Service for user identity information that the SRX Series stores in its authentication table and uses to authenticate users. Use of the Juniper Identity Management Service allows you to provision users locally and have their authentication

information made available to other sites in your network for policy enforcement and reporting.



**WARNING:** Before you use this feature, you must disable any other actively used options under the [edit services user-identification] hierarchy. You cannot commit this configuration if active directory authentication and the ClearPass query and webapi functions are configured and committed.

To obtain device information, such as device identity, groups, and the operating system, from the Juniper Identity Management Service server using either the batch-query or ip-query configuration, you must set the device authentication source, as follows.

```
user@host# set services user-identification device-information authentication-source  
network-access-controller
```

**Options** **connect-method**—The protocol to be used for the SRX Series device connection to Juniper Identity Management Service.

**Values:**

- **https**—HTTPS connection
- **http**—HTTP connection

HTTP is used for debugging purposes only.

**Default:** HTTPS

**port**—The port on the Juniper Identity Management Service server that the SRX Series device uses to connect to it.

**Default:** 443

**Range:** 1-65535

**query-api**—The prefix of the URL path for querying user identities. This value is used to construct the prefix of the path for a batch query, an IP address query, and a user-query, each of which has a unique suffix:

- For IP query, *query-api/ip/*
- For batch query, *query-api/users/*
- For user-query *query-api/user*



**NOTE:** The default value for **query-api** is **query-query/v2**.

For example, for a batch query, assume that the query API is configured as **user-query/v2**. To generate the complete URL, the prefix is combined with the connection method, which is **HTTPS**, the IP address of the Juniper Identity Management Service server, expressed as a variable in this example (*JIMS*), the beginning timestamp, **begintime={timestamp}**, and the number of user identity information items to be provided in the record that the Juniper Identity Management Service server returns, **entry\_count={count}**.

'https://JIMS/user\_query/v2/users/endpoints?begintime={timestamp}&entry\_count={count}'

**token-api**—The path of the URL that the SRX Series device uses to acquire an access token.

The remaining statements are described separately.

**Required Privilege Level**


services—To view this statement in the configuration.

services-control—To add this statement to the configuration.

- Related Documentation**
- *Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS*
  - [address on page 143](#)
  - [authentication-entry-timeout on page 155](#)
  - [batch-query on page 161](#)
  - [ca-certificate on page 168](#)
  - [client-id on page 174](#)
  - [client-secret on page 180](#)
  - [client-secret on page 182](#)
  - [filter on page 207](#)
  - [ip-query on page 230](#)
  - [primary on page 260](#)
  - [secondary on page 279](#)
  - [token-api on page 303](#)



## connect-method (Identity Management Advanced Query)

<b>Syntax</b>	connect-method (http   https);
<b>Hierarchy Level</b>	[edit services user-identification identity-management connection]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure the protocol to be used for the SRX Series device connection to Juniper Identity Management Service (JIMS). The SRX Series device connects to the Juniper Identity Management Service to obtain user identity information.</p> <p>For the SRX Series device to do so, it must first establish a connection to the server. The connect-method parameter is part of a group of parameters that specify the information required for the connection. Other parameters include information about the server, such as its port number and IP address, and security information required by the Juniper Identity Management Service server.</p> <p>The SRX Series device supports connection to a primary and a secondary Juniper Identity Management Service server. It always attempts to connect to the primary server first. It falls back to the secondary server when its queries to the primary server fail. If the primary server fails, the SRX Series device should be configured to periodically probe the failed primary server and revert to it when it becomes available.</p> <p>The advanced user query feature allows the SRX Series device to query the Juniper Identity Management Service for identity information.</p>
	<div>  <p><b>WARNING:</b> Before you use this feature, you must disable active-directory-access and authentication-source options under the [edit services user-identification] hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.</p> </div>
<b>Options</b>	<p><b>http</b>—HTTP connection. Use the HTTP protocol for debugging purposes only.</p> <p><b>https</b>—HTTPS connection. Use the secure HTTPS protocol for requesting user identity information.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</i></li> </ul>

- [filter on page 207](#)
- [port on page 255](#)
- [primary on page 260](#)
- [query-api on page 266](#)
- [secondary on page 279](#)
- [token-api on page 303](#)
- [invalid-authentication-entry-timeout on page 227](#)

---

## connect-method (Services User Identification)

---

<b>Syntax</b>	connect-method (http   https);
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass user-query web-server]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Configure the application protocol used for the SRX Series device connection to the ClearPass Policy Manager (CPPM) for user query requests. You identify the connection protocol as part of the configuration that identifies the CPPM server. The user query function allows the SRX Series device to request from the CPPM user authentication and identity information for an individual user.
<b>Options</b>	<p><b>HTTP</b>—Protocol that the CPPM uses to connect to the SRX Series device.</p> <p><b>HTTPS</b>—Secure version of the protocol that the CPPM uses to connect to the SRX Series device.</p> <p><b>Default:</b> HTTPS—The connect-method configuration is optional. If it is not configured, HTTPS is assumed.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

---

## count

---

<b>Syntax</b>	<code>count <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> client-name-filter <i>client-name</i> ]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the number of characters to be stripped from a client name, from right to left, until the specified number of characters are deleted. The resulting name is sent to the authentication server.
<b>Options</b>	<i>number</i> —Number of characters to be stripped in a client name.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## custom-ciphers

<b>Syntax</b>	<p>custom-ciphers [ecdhe-rsa-with-3des-ede-cbc-sha   ecdhe-rsa-with-aes-128-cbc-sha   ecdhe-rsa-with-aes-128-cbc-sha256   ecdhe-rsa-with-aes-128-gcm-sha256   ecdhe-rsa-with-aes-256-cbc-sha   ecdhe-rsa-with-aes-256-cbc-sha384   ecdhe-rsa-with-aes-256-gcm-sha384   rsa-with-aes-128-cbc-sha256 RSA   rsa-with-aes-128-gcm-sha256 RSA   rsa-with-aes-256-cbc-sha256 RSA   rsa-with-aes-256-gcm-sha384 RSA   rsa-with-rc4-128-md5 RSA   128bit rc4   md5 hash rsa-with-rc4-128-sha RSA   128bit rc4   sha hash rsa-with-des-cbc-sha RSA   des cbc   sha hash rsa-with-3des-ede-cbc-sha RSA   3des ede/cbc   sha hash rsa-with-aes-128-cbc-sha RSA   128 bit aes/cbc   sha hash rsa-with-aes-256-cbc-sha RSA   256 bit aes/cbc   sha hash rsa-export-with-rc4-40-md5 RSA-export   40 bit rc4   md5 hash rsa-export-with-des40-cbc-sha RSA-export   40 bit des/cbc   sha hash rsa-with-null-md5 RSA   no symmetric cipher   md5 hash rsa-with-null-sha RSA   no symmetric cipher   sha hash];</p>
<b>Hierarchy Level</b>	<p>[edit services ssl proxy profile <i>profile-name</i>]  [edit services ssl termination profile <i>profile-name</i>]  [edit services ssl initiation profile <i>profile-name</i>]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 12.1X44-D10.  This statement is supported in the SRX340, SRX345, SRX550M, SRX1500, SRX4100, SRX4200, SRX5400, SRX5600, and SRX5800 devices and vSRX instances.</p>
<b>Description</b>	<p>Configure custom cipher, which SSH server can use to perform encryption and decryption functions.</p> <p>Custom ciphers allow you to define your own cipher list. If you do not want to use one of the three categories, you can select ciphers from each of the categories to form a custom cipher set.</p> <p>To configure custom ciphers, you must set preferred-ciphers to custom. See <a href="#">preferred-ciphers</a> for more details.</p>
<b>Options</b>	<p><b>ecdhe-rsa-with-3des-ede-cbc-sha</b>—ECDHE/RSA, 3 DES EDE/CBC, SHA hash</p> <p><b>ecdhe-rsa-with-aes-128-cbc-sha</b>—ECDHE/RSA, 128-bit AES/CBC, SHA hash</p> <p><b>ecdhe-rsa-with-aes-128-cbc-sha256</b>—ECDHE/RSA, 128-bit AES/CBC, SHA256 hash</p> <p><b>ecdhe-rsa-with-aes-128-gcm-sha256</b>—ECDHE/RSA, 128-bit AES/GCM, SHA256 hash</p> <p><b>ecdhe-rsa-with-aes-256-cbc-sha</b>—ECDHE/RSA, 256-bit AES/CBC, SHA hash</p> <p><b>ecdhe-rsa-with-aes-256-cbc-sha384</b>—ECDHE/RSA, 256-bit AES/CBC, SHA384 hash</p> <p><b>ecdhe-rsa-with-aes-256-gcm-sha384</b>—ECDHE/RSA, 256-bit AES/GCM, SHA384 hash</p> <p><b>rsa-export-with-des40-cbc-sha</b>—RSA-export, 40-bit DES/CBC, SHA hash</p> <p><b>rsa-export-with-rc4-40-md5</b>—RSA-export, 40-bit RC4, MD5 hash</p>

**rsa-export1024-with-des-cbc-sha**—RSA 1024-bit export, DES/CBC, SHA hash

**rsa-export1024-with-rc4-56-md5**—RSA 1024-bit export, 56 bit RC4, MD5 hash

**rsa-export1024-with-rc4-56-sha**—RSA 1024-bit export, 56 bit RC4, SHA hash

**rsa-with-3des-ede-cbc-sha**—RSA, 3DES EDE/CBC, SHA hash

**rsa-with-aes-128-cbc-sha**—RSA, 128-bit AES/CBC, SHA hash

**rsa-with-aes-128-cbc-sha256**—RSA, 128-bit AES/CBC, SHA256 hash

**rsa-with-aes-128-gcm-sha256**—RSA, 128-bit AES/GCM, SHA256 hash

**rsa-with-aes-256-cbc-sha**—RSA, 256-bit AES/CBC, SHA hash

**rsa-with-aes-256-cbc-sha256**—RSA, 256-bit AES/CBC, SHA256 hash

**rsa-with-aes-256-gcm-sha384**—RSA, 256-bit AES/GCM, SHA384 hash

**rsa-with-des-cbc-sha**—RSA, DES CBC, SHA hash

**rsa-with-null-md5**—RSA, no symmetric cipher, MD5 hash

**rsa-with-null-sha**—RSA, no symmetric cipher, SHA hash

**rsa-with-rc4-128-md5**—RSA, 128-bit RC4, MD5 hash

**rsa-with-rc4-128-sha**—RSA, 128-bit RC4, SHA hash

**Required Privilege Level**    **services**—To view this statement in the configuration.  
                                       **services-control**—To add this statement to the configuration.

**Related Documentation**

- *SSL Proxy Overview*
- *Configuring SSL Forward Proxy*
- *Enabling Debugging and Tracing for SSL Proxy*

## debug-level (System Services)

---

<b>Syntax</b>	<code>debug-level <i>level</i>;</code>
<b>Hierarchy Level</b>	[edit system services webapi]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Specify the trace level for the integrated ClearPass authentication and enforcement Web API daemon (webapi).
<b>Options</b>	<p><b>level</b>—A flag that specifies the type of logs to be written to the log file for the Web API daemon (webapi).</p> <p><b>alert</b>—Matches alert messages.</p> <p><b>crit</b>—Matches critical messages.</p> <p><b>emerg</b>—Matches emergency messages.</p> <p><b>error</b>—Matches error messages.</p> <p><b>notice</b>—Matches notification messages.</p> <p><b>warn</b>—Matches warning messages.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>

## debug-log (System Services)

<b>Syntax</b>	debug-log <i>filename</i> ;
<b>Hierarchy Level</b>	[edit system services webapi]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Specify the name of the log file to which trace messages for the integrated ClearPass authentication and enforcement Web API daemon (webapi) are written.</p> <p>The debug level flag determines the kind of logs that are written to this file. Possible values are:</p> <p><b>alert</b>—Matches alert messages.</p> <p><b>crit</b>—Matches critical messages.</p> <p><b>emerg</b>—Matches emergency messages.</p> <p><b>error</b>—Matches error messages.</p> <p><b>notice</b>—Matches notification messages.</p> <p><b>warn</b>—Matches warning messages.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>

## default-certificate (System Services)

<b>Syntax</b>	default-certificate;
<b>Hierarchy Level</b>	[edit system services webapi https]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Specify that the default certificate is to be used for the integrated ClearPass authentication and enforcement Web API daemon (webapi) HTTPS configuration. To ensure security, the Junos OS default certificate key size is 2084 bits.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>

## default-profile

---

<b>Syntax</b>	default-profile <i>profile-name</i> ;
<b>Hierarchy Level</b>	[edit access firewall-authentication pass-through]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the authentication profile to use if no profile is specified in a policy.
<b>Options</b>	<i>profile-name</i> —Name of the profile.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>



## delay-query-time (Services User Identification)

<b>Syntax</b>	<code>delay-query-time <i>delay-time-in-seconds</i>;</code>
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass user-query]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>If the CPPM does not send to the SRX Series device authentication and identity information for a particular user, the SRX Series device can request that information for the user if you configure the user query function.</p> <p>Delays can occur from when the CPPM initially posts user authentication information to the SRX Series device to when the SRX Series device updates its ClearPass authentication table with that information. In its transit, the user identity information must first pass through the CPPM device's control plane and the control plane of the SRX Series device.</p> <p>During that period, traffic might arrive at the SRX Series device that is generated by an access request from a user whose authentication and identity information is in transit from the CPPM to the SRX Series device. Rather than allow the SRX Series device to respond automatically by sending a user query request <i>immediately</i>, you can set the delay time parameter specifying in seconds how long the SRX Series device should wait before sending the request.</p> <p>After the delay timeout expires, the SRX Series device sends the query to the CPPM and creates a pending entry for the user in the Routing Engine authentication table. During this period, any arriving traffic matches the default policy whose action on the traffic you can configure.</p>
<b>Options</b>	<p><b><i>delay-time-in-seconds</i></b>—Amount of time for the SRX Series device to delay before sending queries to the Aruba ClearPass Policy Manager (CPPM) for authentication and identity information for individual users</p> <p><b>Range:</b> 0 through 60 seconds</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

## distinguished-name (Access)

---

<b>Syntax</b>	distinguished-name <i>distinguished-name</i> ;
<b>Hierarchy Level</b>	[edit access ldap-options search admin-search], [edit access profile <i>profile-name</i> ldap-options search admin-search]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the distinguished name of an administrative user. The distinguished name is used in the bind for performing the LDAP search.
<b>Options</b>	<i>distinguished-name</i> —Set of properties that define the user. For example, <b>cn=admin</b> , <b>ou=eng</b> , <b>o=juniper</b> , <b>dc=net</b> .
<b>Required Privilege Level</b>	secret—To view this statement in the configuration. secret-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## domain-name (Access Profile)

---

<b>Syntax</b>	domain-name <i>domain-name</i> ;
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> client-name-filter <i>client-name</i> ]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify a domain name that must be in a client's name during the authentication process.
<b>Options</b>	<i>domain-name</i> —Domain name that must be in a client name. The name must not exceed 128 characters.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## enable-flow-tracing (Services)

<b>Syntax</b>	enable-flow-tracing;
<b>Hierarchy Level</b>	[edit services ssl proxy profile <i>profile-name</i> ] [edit services ssl termination profile <i>profile-name</i> ] [edit services ssl initiation profile <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10. This statement is supported on the SRX550M, SRX1500, SRX4100, SRX4200, SRX5400, SRX5600, and SRX5800 devices.
<b>Description</b>	<p>Enable flow tracing for the profile.</p> <p>When you configure <b>enable-flow-tracing</b> for SSL profiles, the debug tracing will be enabled on that profile when the flag is set as <b>selected-profile</b>.</p>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>SSL Proxy Overview</i></li> <li>• <i>Configuring SSL Forward Proxy</i></li> <li>• <i>Enabling Debugging and Tracing for SSL Proxy</i></li> </ul>

## enable-session-cache

---

<b>Syntax</b>	enable-session-cache;
<b>Hierarchy Level</b>	[edit services ssl termination profile <i>profile-name</i> ] [edit services ssl initiation profile <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10. This statement is supported on the SRX550M, SRX4100, SRX4200, SRX5400, SRX5600, and SRX5800 devices.
<b>Description</b>	<p>Enable SSL session cache.</p> <p>You can enable session caching to cache session information, such as the pre-master secret key and agreed-upon ciphers, for both the client and server.</p> <p>The cached information is identified by a session ID. In subsequent connections both parties agree to use the session ID to retrieve the information rather than create a new pre-master secret key. Session resumption shortens the handshake process and accelerates SSL transactions there by improves the throughput and maintains an appropriate level of security at the same time.</p>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>SSL Proxy Overview</i></li><li>• <i>Configuring SSL Forward Proxy</i></li><li>• <i>Enabling Debugging and Tracing for SSL Proxy</i></li></ul>

## end-user-profile

**Syntax**

```
end-user-profile profile-name profile-name
domain-name domain-name;
{
  attribute device-category {
    string string-value;
  }
  attribute device-identity {
    string string-value;
  }
  attribute device-vendor {
    string string-value;
  }
  attribute device-type {
    string string-value;
  }
  attribute device-os {
    string string-value;
  }
  attribute device-os-version {
    string string-value;
  }
}
```

**Hierarchy Level** [edit services user-identification device-information]

**Release Information** Statement introduced in Junos OS 15.1X49-D70.

**Description** Specify the name of the device identity profile, also referred to as the **end-user-profile**, and either one or more of its attributes or the name of the Active Directory domain to which the device belongs.

The device identity profile is a key component of the SRX Series device identity feature, which enables you to control access to network resources based on the identity of the user's device, not the identity of the user of the device. The device identity profile includes the domain name and a collection of attributes that characterize the device.



**NOTE:** You cannot configure the device identity profile without specifying either the domain that the device belongs to at least one of its attributes.

- Options**
- **profile-name** *profile-name*—Name of the device identity profile; for example, marketing-west-coast. The profile is specified in the **source-end-user-profile** field of a security policy.
  - **domain** *domain-name*—Name of the domain to which the device belongs; for example, domain1.

- attribute device-identity *string*—Name given to the device, for example, my-device1.
- attribute device-category *string*—Category of the device, for example, laptop.
- attribute device-vendor *string*—Name of the manufacturer of the device, for example, Lenovo.
- attribute device-type *string*—Type of device; for example, ThinkPad.
- attribute device-os *string*—Operating system running on the device; for example, Windows.
- attribute device-os-version *string*—Version of the operating system that is running on the device; for example, 10.1.

**Required Privilege Level** services—To view this statement in the configuration.  
services-control—To add this statement to the configuration.

**Related Documentation**

- *Understanding Access Control to Network Resources Based on Device Identity Information*
- *Understanding the Device Identity Attributes and Profiles for the Integrated User Firewall Device Identity Authentication Feature*
- *Understanding the Device Identity Authentication Table and Its Entries*

---

## fail

---

**Syntax** fail *string*;

**Hierarchy Level** [edit access firewall-authentication pass-through default-profile *profile-name* (ftp | http | telnet) banner]

**Release Information** Statement introduced in Release 8.5 of Junos OS.

**Description** Specify the banner that a client sees if the authentication process fails.

**Options** *string*—Banner text. Maximum length of the message text is 250 characters. Enclose the banner text within spaces or special characters—for example, quotation marks (" ").

**Required Privilege Level** access—To view this statement in the configuration.  
access-control—To add this statement to the configuration.

**Related Documentation**

- *Junos OS Security Configuration Guide*

## file (Services User Identification)

<b>Syntax</b>	<pre>file {     filename     files <i>number</i>;     match <i>regular-expression</i>;     size <i>maximum-file-size</i>;     (world-readable   no-world-readable); }</pre>
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass traceoptions]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Configure the name of the trace log file and its characteristics to which messages for the behavior of the authentication source are logged. For the SRX Series device integrated ClearPass authentication and enforcement feature, the authentication source is the Aruba ClearPass Policy Manager (CPPM).
<b>Options</b>	<p><b><i>filename</i></b>—Name of the log file.</p> <p><b><i>files max-number-of-files</i></b>—Specifies the maximum number of trace files.</p> <p>Range: 2 through 1000</p> <p><b><i>match regular-expression</i></b>—Specifies a regular expression that determines which lines are logged.</p> <p><b><i>no-world-readable</i></b>—Denies users the ability to read the log file.</p> <p><b><i>size max-file-size</i></b>—Specifies the trace file maximum file size.</p> <p>Range: 10,240 through 1,073,741,824.</p> <p><b><i>world-readable</i></b>—Allows users to read the log file.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

## file (System Logging)

**Syntax**    `file filename {`  
               `allow-duplicates;`  
               `any (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `archive {`  
                   `archive-sites {`  
                       `url password;`  
                   `}`  
               `(binary-data | no-binary-data);`  
               `files number;`  
               `size size;`  
               `start-time start-time;`  
               `transfer-interval transfer-interval;`  
               `(world-readable | no-world-readable);`  
               `}`  
               `authorization (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `change-log (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `conflict-log (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `daemon (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `dfc (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `explicit-priority;`  
               `external (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `firewall (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `ftp (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `interactive-commands (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `kernel (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `match "regular-expression";`  
               `ntp (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `pfe (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `security (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `structured-data {`  
                   `brief;`  
               `}`  
               `user (alert | any | critical | emergency | error | info | none | notice | warning);`  
               `}`

**Hierarchy Level**    [edit system syslog]

**Release Information**    Statement introduced before Junos OS Release 12.1X47 for SRX Series.

**Description**    Specify the file in which to log data.

- Options**
- *filename*—Specify the name of the file in which to log data.
  - *allow-duplicates*—Do not suppress the repeated messages.
  - *any*—Specify all facilities information.
    - *alert*—Specify the conditions that should be corrected immediately.
    - *critical*—Specify the critical conditions.



- *emergency*—Specify the conditions that cause security functions to stop.
- *error*—Specify the general error conditions.
- *info*—Specify the information about normal security operations.
- *none*—Do not specify any messages.
- *notice*—Specify the conditions that should be handled specifically.
- *warning*—Specify the general warning conditions.
- *archive*—Specify the archive file information.
  - *archive-sites*—Specify a list of destination URLs for the archived log files.
    - *url*—Specify the primary and failover URLs to receive archive files.
  - *binary-data*—Mark file such that it contains binary data.
  - *no-binary-data*—Do not mark the file such that it contains binary data.
  - *files*—Specify the number of files to be archived. Range: 1 through 1000 files.
  - *size*—Specify the size of files to be archived. Range: 65,536 through 1,073,741,824 bytes.
  - *world-readable*—Allow any user to read the log file.
  - *no-world-readable*—Do not allow any user to read the log file.
  - *start-time*—Specify the start time for file transmission. Enter the start time in the yyyy-mm-dd.hh:mm format.
  - *transfer-interval*—Specify the frequency at which to transfer the files to archive sites.
- *authorization*—Specify the authorization system.
- *change-log*—Specify the configuration change log.
- *conflict-log*—Specify the configuration conflict log.
- *daemon*—Specify the various system processes.
- *dfc*—Specify the dynamic flow capture.
- *explicit-priority*—Include the priority and facility in messages.
- *external*—Specify the local external applications.
- *firewall*—Specify the firewall filtering system.
- *ftp*—Specify the FTP process.
- *interactive-commands*—Specify the commands executed by the UI.
- *kernel*—Specify the kernel information.
- *match*—Specify the regular expression for lines to be logged.
- *ntp*—Specify the NTP process.
- *pfe*—Specify the Packet Forwarding Engine.

- *security*—Specify the security-related information.
- *structured-data*—Log the messages in structured log format.
  - *brief*—Omit English language text from the end of the logged message.
- *user*—Specify the user processes.
  - *info*—Specify the informational messages.

**Required Privilege** system—To view this statement in the configuration.  
**Level** system-control—To add this statement to the configuration.

---

## filter (Security)

---

**Syntax** filter threat-attack

**Hierarchy Level** [edit security log stream *stream-name*]

**Release Information** Statement introduced in Junos OS Release 12.3X48-D30.

**Description** Configure the log stream filter to transmit only threat and attack logs to the ClearPass Policy Manager (CPPM). The integrated ClearPass authentication and enforcement feature sends to the CPPM threat and attack logs detected by the SRX Series device security modules. You can use these reports to inform your approach to hardening the CPPM security policy. Setting the log stream filter to threat-attack ensures that the SRX Series device and the log server are not overburdened by irrelevant logs.



**NOTE:** Unlike for other features that use a filter for log streams, threat-attack is the only log stream filter supported for integrated ClearPass. Therefore, it is not shown here as an option.

---

**Required Privilege** security—To view this statement in the configuration.  
**Level** security-control—To add this statement to the configuration.

## filter (Identity Management Advanced Query)

**Syntax**

```
filter {
  domain name;
  exclude-ip {
    address-book book-name;
    address-set address-set;
  }
  include-ip {
    address-book book-name;
    address-set address-set;
  }
}
```

**Hierarchy Level** [edit services user-identification identity-management]

**Release Information** Statement introduced in Junos OS Release 15.1X49-D100.

**Description** The advanced user identity query feature enables the SRX Series device to communicate with the Juniper Identity Management Service server to obtain user identity information for an individual user (ip-query) or a group of users (batch query).

Optionally, you can configure filters to convey to the Juniper Identity Management Service server at a more granular level the users for whom you want information, based on their IP addresses. The filter statement gives you the flexibility to specify a range of IP addresses to be excluded from the record that the Juniper Identity Management Service server sends in response or a range of IP addresses to be included in it. You can also constrain the query target to users in one or more specific active directory domains. Only IPv4 addresses are supported

You can configure a filter that includes all three specifications: include-ip, exclude-ip, and domain.



**NOTE:** Filters are contextual. That is, you can use a different filter configuration for different requests. If you change the filter configuration, the new filter applies to subsequent user identity requests exclusively. It has no bearing on prior query requests

Use of the Juniper Identity Management Service allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.



**WARNING:** Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active

directory authentication or the ClearPass query and webapi functions are configured and committed.

**Options** **include-ip**—address-book *book-name* address-set *address-set-name*. Optionally, configure a filter that directs the SRX Series device to issue a query to the Juniper Identity Management Service server to include in its response record user identity information for users based on IP addresses in certain address-ranges.

A filter can include up to twenty IP address ranges. Therefore, an address set that contains more than twenty ranges will cause the filter configuration to fail. To specify the ranges, specify the name of a predefined address set which includes them and which is included in an existing address book.



**NOTE:** The filter for IP addresses does not support nested address sets in an address book. If an address book contains nested address sets, it is ignored.

Here is an include-ip address configuration:

```
user@host# set security address-book mybook address addr1 range-address
198.51.100.0 to 198.51.120.0
user@host# set security address-book mybook address-set myset address addr1
user@host# set service user-identification identity-management filter include-ip
address-book mybook address-set myset
```

**exclude-ip**—address-book *book-name* address-set *address-set-name*. Optionally, configure a filter that directs the SRX Series device to issue a query to the Juniper Identity Management Service server to exclude from its response record user identity information for users based on the specified address-ranges. To specify the ranges, specify the name of a predefined address set which includes them and which is included in an existing address book. The address set must not include more than twenty IP addresses, otherwise the exclude-ip filter will fail. Here is an exclude-ip address configuration similar to that of the include-ip filter:

```
user@host# set security address-book mybook address addr1 range-address
198.51.100.0/24 to 198.51.120.0/24
user@host# set security address-book mybook address-set myset address addr1
user@host# set service user-identification identity-management filter exclude-ip
address-book mybook address-set myset
```

**domain**—One or more active directory domains of interest to the SRX Series device. You can specify up to twenty domain names for the filter.

**Required Privilege  
Level**

services—To view this statement in the configuration.

services-control—To add this statement to the configuration.

<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</a></li> <li>• <a href="#">address on page 143</a></li> <li>• <a href="#">authentication-entry-timeout on page 155</a></li> <li>• <a href="#">batch-query on page 161</a></li> <li>• <a href="#">ca-certificate on page 166</a></li> <li>• <a href="#">client-id on page 174</a></li> <li>• <a href="#">port on page 255</a></li> <li>• <a href="#">invalid-authentication-entry-timeout on page 227</a></li> <li>• <a href="#">primary on page 260</a></li> <li>• <a href="#">query-api on page 266</a></li> <li>• <a href="#">secondary on page 279</a></li> <li>• <a href="#">token-api on page 303</a></li> </ul>
------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## firewall-user

---

<b>Syntax</b>	<pre>firewall-user {     password <i>password</i>; }</pre>
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> client <i>client-name</i> ]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify a client as a firewall user and the associated password (encrypted).
<b>Options</b>	<p><b>password <i>password</i></b>—Password used by the firewall user during local authentication.</p> <p><b>Range:</b> 1 through 128 characters</p>
<b>Required Privilege Level</b>	<p>secret—To view this statement in the configuration.</p> <p>secret-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Junos OS Security Configuration Guide</a></li> </ul>

## flag (Services)

---

<b>Syntax</b>	<code>flag (all   cli-configuration   initiation   proxy   selected-profile   termination);</code>
<b>Hierarchy Level</b>	[edit services ssl traceoptions]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10. This statement is supported on the SRX1500, SRX5400, SRX5600, and SRX5800 devices and vSRX.
<b>Description</b>	Specify the tracing flag parameters.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>all</i>—Trace all the parameters.</li><li>• <i>cli-configuration</i>—Trace CLI configuration events.</li><li>• <i>initiation</i>—Trace initiation service events.</li><li>• <i>proxy</i>—Trace proxy service events.</li><li>• <i>selected-profile</i>—Trace events for profiles with <b>enable-flow-tracing</b> set.</li><li>• <i>termination</i>—Trace termination service events.</li></ul>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring SSL Forward Proxy</i></li></ul>

## from-zone (Security Policies)

```

Syntax  from-zone zone-name to-zone zone-name {
    policy policy-name {
        description description;
        match {
            application {
                [junos-defaults | application];
                any;
            }
            dynamic-application {
                [dynamic-application-name | dynamic-application-group-name];
                any;
                none;
            }
            destination-address {
                [address];
                any;
                any-ipv4;
                any-ipv6;
            }
            source-address {
                [address];
                any;
                any-ipv4;
                any-ipv6;
            }
            source-identity {
                [role-name];
                any;
                authenticated-user;
                unauthenticated-user;
                unknown-user;
            }
            source-end-user-profile {
                profile-name;
            }
        }
        scheduler-name scheduler-name;
        then {
            count {
                alarm {
                    per-minute-threshold number;
                    per-second-threshold number;
                }
            }
            deny;
            log {
                session-close;
                session-init;
            }
            permit {
                application-services {
                    application-firewall {

```

```

        rule-set rule-set-name;
    }
    application-traffic-control {
        rule-set rule-set-name;
    }
    gprs-gtp-profile profile-name;
    gprs-sctp-profile profile-name;
    idp;
    redirect-wx | reverse-redirect-wx;
    ssl-proxy {
        profile-name profile-name;
    }
    uac-policy {
        captive-portal captive-portal;
    }
    utm-policy policy-name;
}
destination-address {
    drop-translated;
    drop-untranslated;
}
firewall-authentication {
    pass-through {
        access-profile profile-name;
        client-match user-or-group-name;
        ssl-termination-profile profile-name;
        web-redirect;
        web-redirect-to-https;
    }
    user-firewall {
        access-profile profile-name;
        domain domain-name;
        ssl-termination-profile profile-name;
    }
    web-authentication {
        client-match user-or-group-name;
    }
}
services-offload;
tcp-options {
    initial-tcp-mss mss-value;
    reverse-tcp-mss mss-value;
    sequence-check-required;
    sequence-check-required;
    syn-check-required;
}
tunnel {
    ipsec-group-vpn group-vpn;
    ipsec-vpn vpn-name;
    pair-policy pair-policy;
}
}
deny | reject;
deny | reject [profile name];
}
}

```



```
}

```

<b>Hierarchy Level</b>	[edit security policies]
<b>Release Information</b>	Statement introduced in Junos OS release 8.5. Support for the <b>services-offload</b> option added in Junos OS release 11.4. Support for the <b>source-identity</b> option added in Junos OS release 12.1. Support for the <b>description</b> option added in Junos OS release 12.1. Support for the <b>ssl-termination-profile</b> and <b>web-redirect-to-https</b> options added in Junos OS release 12.1X44-D10. Support for the <b>user-firewall</b> option added in Junos OS release 12.1X45-D10. Support for the <b>initial-tcp-mss</b> and <b>reverse-tcp-mss</b> options added in Junos OS release 12.3X48-D20. Support for the <b>dynamic-application</b> and <b>deny</b> options added in Junos OS release 18.2R1.
<b>Description</b>	Specify a source zone and destination zone to be associated with the security policy.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>from-zone <i>zone-name</i></b>—Name of the source zone.</li> <li>• <b>to-zone <i>zone-name</i></b>—Name of the destination zone.</li> </ul> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	security—To view this statement in the configuration. security-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Security Policies Overview</i></li> <li>• <i>Understanding Security Policy Rules</i></li> <li>• <i>Understanding Security Policy Elements</i></li> <li>• <i>Unified Policies Configuration Overview</i></li> </ul>

## ftp (Access)

---

**Syntax**

```
ftp {  
    banner {  
        fail string;  
        login string;  
        success string;  
    }  
}
```

**Hierarchy Level** [edit access firewall-authentication pass-through]

**Release Information** Statement introduced in Junos OS Release 8.5.

**Description** Configure banners for the FTP login prompt, successful authentication, and failed authentication.

**Options** The remaining statements are explained separately.

**Required Privilege Level**

access	—To view this statement in the configuration.
access-control	—To add this statement to the configuration.

## group-profile (Access)

<b>Syntax</b>	<pre>group-profile <i>profile-name</i> {   ppp {     cell-overhead;     encapsulated-overhead;     framed-pool <i>address-pool-name</i>;     idle-timeout <i>seconds</i>;     interface-id <i>interface-identifier</i>;     keepalive <i>seconds</i>;     primary-dns <i>IP address</i>;     primary-wins <i>IP address</i>;     secondary-dns <i>IP address</i>;     secondary-wins <i>IP address</i>;   } }</pre>
<b>Hierarchy Level</b>	[edit access]
<b>Release Information</b>	Statement introduced in Release 10.4 of Junos OS.
<b>Description</b>	Configure a group profile to define Point-to-Point Protocol (PPP) attributes. Any client referencing the configured group profile inherits all the group profile attributes.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>ppp</b>—Configure Point-to-Point Protocol (PPP) attributes.</li> <li>• <b>cell-overhead</b>—Configure the session to use Asynchronous Transfer Mode (ATM)-aware egress shaping.</li> <li>• <b>framed-pool <i>pool-name</i></b>—Configure a framed-pool.</li> <li>• <b>idle-timeout</b>—Configure the idle timeout for a user.</li> <li>• <b>interface-id</b>—Configure the interface identifier.</li> <li>• <b>keep-alive</b>—Configure the keepalive interval for an L2TP tunnel.</li> <li>• <b>primary-dns</b>—Specify the primary-dns IP address.</li> <li>• <b>secondary-dns</b>—Specify the secondary-dns IP address.</li> <li>• <b>primary-wins</b>—Specify the primary-wins IP address.</li> <li>• <b>secondary-wins</b>—Specify the secondary-wins IP address.</li> </ul>
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Security Configuration Guide</i></li> </ul>

## http (Access)

---

<b>Syntax</b>	<pre>http {     banner {         fail <i>string</i>;         login <i>string</i>;         success <i>string</i>;     } }</pre>
<b>Hierarchy Level</b>	[edit access firewall-authentication pass-through]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Configure banners for the HTTP login prompt, successful authentication, and failed authentication.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li><i>Firewall User Authentication Overview</i></li><li><i>Obtaining Username and Role Information Through Firewall Authentication</i></li></ul>


## http (Services)

---

<b>Syntax</b>	<pre>http {   interfaces [ <i>interface-names</i> ];   port <i>port</i>; }</pre>
<b>Hierarchy Level</b>	[edit system services web-management]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Unencrypted HTTP connection setting.
<b>Options</b>	<p><b>interfaces [ <i>interface-names</i> ]</b>—Name of one or more interfaces on which to allow the HTTP service.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Example: Configuring HTTPS Traffic to Trigger Pass-Through Authentication</i></li> <li>• <i>Example: Configuring HTTPS Traffic to Trigger Web Authentication</i></li> <li>• <i>Firewall User Authentication Overview</i></li> </ul>

## http (Services User Identification)

---

<b>Syntax</b>	<code>http port <i>port-number</i>;</code>
<b>Hierarchy Level</b>	[edit services user-identification authentication-source <i>name</i> user-query web-server <i>name</i> connect-method]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Configure HTTP as the connection protocol to use for the SRX Series integrated ClearPass authentication and enforcement feature's connection to the ClearPass Policy Manager (CPPM) webserver for individual user authentication queries. You identify the connection protocol as part of the configuration that identifies the CPPM webserver (mutually exclusive with HTTPS).</p> <p>If the SRX Series devices does not find an authentication entry for a user in its local ClearPass authentication table, it can query the Aruba ClearPass webserver for this information.</p>
	<div> <b>NOTE:</b> This configuration assumes that aruba-clearpass is specified as the authentication source.</div>
<b>Options</b>	<i>port-number</i> —Port numbr to use for the HTTP connection protocol.
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.

## http (System Services)

---

**Syntax** `http port port-number;`

**Hierarchy Level** [edit system services webapi]

**Release Information** Statement introduced in Junos OS Release 12.3X48-D30.

**Description** Specify HTTP as the communication protocol for the Web API function of the SRX Series integrated ClearPass authentication and enforcement feature.

The SRX Series device exposes to the ClearPass Policy Manager (CPPM) the Web API for it to use to initiate a connection and then use that connection to send to the SRX Series device user authentication and identity information.

This statement also specifies the port number to use for the HTTP connection. The port number is optional.



**NOTE:** If you deploy HTTP along with a Web management application, you must ensure that they run on different service ports.

**Options** *port-number*—Port for HTTP to use for the Web API function.

**Default:** 8080

**Required Privilege Level** system—To view this statement in the configuration.

system-control—To add this statement to the configuration.

## https (Services)

---

<b>Syntax</b>	<pre>https {     interfaces [ <i>interface-names</i> ];     local-certificate <i>local-certificate-name</i>;     pki-local-certificate <i>pki-local-certificate-name</i>;     port <i>port</i>;     system-generated-certificate <i>name</i>; }</pre>
<b>Hierarchy Level</b>	[edit system services web-management]
<b>Release Information</b>	Statement introduced on the SRX5400, SRX5600, and SRX5800 devices starting from Junos OS Release 12.1X44-D10 and on vSRX, SRX300, SRX320, SRX340, SRX345, SRX550M, and SRX1500 Services Gateways starting from Junos OS Release 15.1X49-D40.
<b>Description</b>	Encrypted HTTPS connections.
<b>Options</b>	<p><b><i>interface-names</i></b>—Name of one or more interfaces on which to allow the HTTPS service.</p> <p><b><i>local-certificate-name</i></b> —Name of the X.509 certificate for a Secure Sockets Layer (SSL) connection. An SSL connection is configured at the [edit security certificates local] hierarchy.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Example: Configuring HTTPS Traffic to Trigger Pass-Through Authentication</i></li><li>• <i>Example: Configuring HTTPS Traffic to Trigger Web Authentication</i></li><li>• <i>Firewall User Authentication Overview</i></li></ul>



## https (Services User Identification)

**Syntax**    `https (`  
               `certificate local-certificate;`  
               `certificate-key local-certificate-key;`  
               `default-certificate;`  
               `pki-local-certificate certificate-name;`  
               `port port-number;`  
               `)`

**Hierarchy Level**    `[edit services user-identification authentication-source name user-query web-server name connect-method]`

**Release Information**    Statement introduced in Junos OS Release 12.3X48-D30.

**Description**    Configure HTTPS as the connection protocol used for the SRX Series connection to the ClearPass Policy Manager (CPPM) for user query requests. You identify the connection protocol as part of the configuration that identifies the CPPM webserver.

The integrated ClearPass authentication and enforcement user query function allows the SRX Series device to request from the CPPM user authentication and identity information for an individual when the SRX Series ClearPass authentication table does not contain that information.



**NOTE:** This configuration assumes that `aruba-clearpass` is specified as the authentication source.

**Options**    **https**—Use the encrypted HTTPS protocol. (Mutually exclusive with HTTP.)

**Default:** HTTPS

**default-certificate**—Use the default HTTPS certificate.

For security reasons, the HTTPS default-certificate key size 2048.

**filename**—Custom certificate file.

The Web API supports only the Privacy-Enhanced Mail (PEM) format for the custom certificate and certificate key configuration.

**local-certificate-key**—Web API daemon service certificate key. This parameter is required if a custom service certificate file is configured.

**pki-certificate**—Use the local X.509 PKI certificate.

**port-number**—HTTPS service port.

**Range:** 1 through 65535.

**Default:** 8443

<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
---------------------------------	-----------------------------------------------------------------------------------------------------------------------

## https (System Services)

**Syntax**    `https (  
               certificate local-certificate;  
               certificate-key local-certificate-key;  
               default-certificate;  
               pki-local-certificate certificate-name;  
               port port-number;  
           )`

**Hierarchy Level**    [edit system services webapi connect-method]

**Release Information**    Statement introduced in Junos OS Release 12.3X48-D30.

**Description**    Specify HTTPS as the communication protocol for the Web API function of the SRX Series integrated ClearPass authentication and enforcement feature. When you configure HTTPS, you specify the service certificate and certificate key. You can also specify the port to be used.

The Web API daemon, acting as an HTTPS server, allows the ClearPass Policy Manager (CPPM), acting as the client, to send POST request messages to it. The CPPM, which is the authentication source for this feature, sends to the SRX Series device user authentication and identity information.



**NOTE:** If you deploy HTTPS with a Web management application, ensure that they run on different service ports.

**Options**    **https**—Specifies use of the encrypted HTTPS protocol. (Mutually exclusive with HTTP.)

**default-certificate**—Configures the Web API daemon (webapi) to use the default HTTPS certificate.

**Default:** key size, 2048

**filename**—Configures the Web API daemon to use the specified, custom certificate file.

For certificate and certificate key configuration, the Web API function supports only the Privacy-Enhanced Mail (PEM) format.

**local-certificate-key**—Configures the Web API daemon service certificate key. This parameter is required if a custom service certificate file is configured.

**certificate-name**—Configures the Web API daemon to use the local X.509 PKI certificate.

**port-number**—Configures the HTTPS service port.

**Range:** For port number, 1 through 65,535.

**Default:** For port, 8443.

<b>Required Privilege Level</b>	system—To view this statement in the configuration.
	system-control—To add this statement to the configuration.

---

## infranet-controller

---

<b>Syntax</b>	<pre>infranet-controller <i>host-name</i> {     address <i>ip-address</i>;     ca-profile [<i>ca-profile</i>];     interface <i>interface-name</i>;     password <i>password</i>;     port <i>port-number</i>;     server-certificate-subject <i>subject</i>; }</pre>
---------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

<b>Hierarchy Level</b>	[edit services unified-access-control ]
------------------------	-----------------------------------------

<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
----------------------------	-----------------------------------------------

<b>Description</b>	To configure an Infranet Controller, specify the hostname of the IC Series device with which the SRX Series device should communicate. Possible values for this statement range from 1 to 31 characters.
--------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

This statement is required when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series device.

One or more IC Series devices can be configured as Infranet Controllers on the SRX Series device. There is no maximum number of IC Series devices that can be configured. However, only one IC Series device can be active at any time. The others are failover devices. A round-robin algorithm determines which of the configured IC Series devices is the active Infranet Controller. If the active Infranet Controller becomes inoperative, the algorithm is reapplied to the remaining IC Series devices that are configured to establish the new active Infranet Controller.

<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
----------------	---------------------------------------------------------------------------------------

<b>Required Privilege Level</b>	services—To view this statement in the configuration.
	services-control—To add this statement to the configuration.

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Firewall User Authentication Overview</a></li></ul>
------------------------------	---------------------------------------------------------------------------------------------------------

---

## interface (Services)

---

<b>Syntax</b>	interface <i>interface-name</i> ;
<b>Hierarchy Level</b>	[edit services unified-access-control infranet-controller <i>hostname</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Specify the SRX Series interface through which the IC Series device should connect.</p> <p>This statement is required when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series device.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">port (Services) on page 256</a></li><li>• <a href="#">password (Services) on page 244</a></li></ul>

## interval (Services)

---

<b>Syntax</b>	<code>interval seconds;</code>
<b>Hierarchy Level</b>	[edit services unified-access-control ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Specify the value in seconds that the SRX Series device should expect to receive a heartbeat signal from the IC Series device (default 30). This configuration statement is used in conjunction with the <b>timeout</b> statement to test active communications with the IC Series device. The value of the <b>interval</b> statement must be smaller than the value of <b>timeout</b> statement.</p> <p>Use this statement when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series device.</p>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">timeout (Services) on page 297</a></li><li>• <a href="#">timeout-action on page 298</a></li></ul>

## invalid-authentication-entry-timeout (Services User Identification Active Directory and ClearPass)

<b>Syntax</b>	<code>invalid-authentication-entry-timeout <i>timeout-value-in-minutes</i>;</code>
<b>Hierarchy Level</b>	<code>[edit services user-identification active-directory-access]</code> <code>[edit services user-identification authentication-source aruba-clearpass]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure an independent timeout value to be assigned to invalid user authentication entries in the SRX Series authentication table for either Windows active directory or Aruba ClearPass. The invalid authentication entry timeout setting is different from the general authentication entry timeout setting. It allows you to protect invalid user authentication entries in an authentication table from expiring before the user can be validated.</p> <p>User authentication entries in an authentication table contain a time-out value after which the entry expires, or is no longer valid. An invalid authentication entry is created with a NULL and INVALID state for a user's IP address and stored in the access directory authentication table when there is no identity information for that user. Prior to implementation of this feature, the current time-out value that applies to all user entries was applied to the invalid entry also.</p> <p>Separate authentication tables exist for the two authentication sources and you configure separate settings for them, as illustrated in the following examples.</p> <p>Use the following command to configure the invalid authentication entry timeout for entries in the Windows active directory authentication table. In this example, invalid authentication entries in the active directory authentication table will expire 40 minutes after they were created.</p> <pre>user@host# set services user-identification active-directory-access invalid-authentication-entry-timeout 40</pre> <p>Use the following command to configure the invalid authentication entry timeout for entries in the SRX Series ClearPass authentication table. In this example, invalid authentication entries in the SRX Series ClearPass authentication table will expire 22 minutes after they were created.</p> <pre>user@host# set services user-identification authentication-source aruba-clearpass invalid-authentication-entry-timeout 22</pre> <p>The following rules govern how the invalid authentication entry timeout setting is used:</p> <ul style="list-style-type: none"> <li>When you initially configure the invalid authentication entry timeout value, it is applied to any invalid authentication entries that are created <i>after</i> it was configured.</li> </ul> <p>However, all existing invalid authentication entries retain the default timeout of 30 minutes.</p> <ul style="list-style-type: none"> <li>If you do not configure the invalid authentication entry timeout function, then the default timeout of 30 minutes is applied to all invalid authentication entries.</li> </ul>

- If you configure the invalid authentication entry timeout value but later you delete it, the default timeout of 30 minutes is applied to any invalid authentication entries created *after* the deletion.

However, any invalid authentication entries to which the invalid entry timeout value was applied *before* the deletion retain that setting.

- If you change the setting for the invalid authentication entry timeout value, the new value is applied to all invalid authentication entries that were created *after* the value was changed. However, all existing invalid authentication entries retain the former invalid authentication entry timeout setting, if it applied to them. Those to which the default value of 30 minutes applies retain that setting.
- When the state of an invalid authentication entry changes to Pending or Valid, the invalid authentication entry timeout setting is no longer applicable to it. Therefore, the timeout value assigned to that entry is changed to the value that is set for the general authentication entry timeout.

**Options**    ***timeout-value-in-minutes***—Expiration time in minutes to be applied to invalid authentication entries in the SRX Series authentication table for either Windows active directory or Aruba ClearPass authentication sources.

**Range:** 0 through 1440 minutes.

**Default:** 30 minutes

**Required Privilege Level**

services—To view this statement in the configuration.

services-control—To add this statement to the configuration.

**Related Documentation**

- *Understanding the Invalid Authentication Table Entry Timeout Setting*
- *Understanding the Forced Timeout Setting Assigned to Active Directory Authentication Entries for Users Authenticated Through Captive Portal*
- *firewall-authentication-forced-timeout*



## ip-address (Access Profile)

---

<b>Syntax</b>	<code>ip-address <i>address</i></code>
<b>Hierarchy Level</b>	[edit access profile <i>name</i> client <i>name</i> xauth]
<b>Release Information</b>	Statement introduced in Release 10.4 of Junos OS.
<b>Description</b>	Specify the IP address for the client.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## ip-query (Identity Management Advanced Query)

---

**Syntax**    ip-query {  
              no-ip-query;  
              query-delay-time *seconds*;  
          }

**Hierarchy Level**    [edit services user-identification identity-management]

**Release Information**    Statement introduced in Junos OS Release 15.1X49-D100.

**Description**    Configure the parameters to be used for the IP query function. When this feature is enabled, the SRX Series device queries the Juniper Identity Management Service (JIMS) server for user identity information based on the IP address of a user's device.

For example, if information for a user is missing from a flow, the SRX Series device can issue a query request specifying the IP address of the user's device. Also, If the SRX Series device does not have identity information for a specific user, it can engage captive portal to authenticate the user. After it authenticates the user, the SRX Series device can issue a query request to the Juniper Identity Management Service, specifying the user ID and the IP address of the user's device to obtain additional information, such as the names of the groups that the user belongs to.

If there are many IP query requests in the queue, the SRX Series device can maintain multiple concurrent HTTP/HTTPS connections with the Juniper Identity Management Service to increase throughput. However, the number of concurrent connections are kept at a reasonable level, which is twenty or less, so as not to impose pressure on the Juniper Identity Management Service.



**NOTE:** IP query is one of three query methods: IP query, batch query, and user query. All three types of queries can occur concurrently. They are not mutually exclusive.

---

The advanced user identity query feature, to which this configuration statement belongs, relies on the Juniper Identity Management Service that allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting. The feature allows the SRX Series device to query the Juniper Identity Management Service to pull user identity information.

---



**WARNING:** Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.

---

To obtain device information, such as device identity, groups, and the operating system, from the Juniper Identity Management Service server using either the batch-query or ip-query configuration, you must set the device authentication source, as follows.

```
user@host# set services user-identification device-information authentication-source
network-access-controller
```

**Options** **no-ip-query**—Disable IP query. IP query is enabled by default.

**query-delay-time**—Time after which the SRX Series device sends the query. Rather than allow the SRX Series device to respond automatically by sending a user query *immediately*, you can set a **query-delay-time** parameter, specified in seconds, that allows the SRX Series device to wait for a period of time before sending the query.

**Default:** 15

**Range:** 0-60 seconds

**Required Privilege Level**

services—To view this statement in the configuration.

services-control—To add this statement to the configuration.

**Related Documentation**

- *Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS*
- [port on page 255](#)
- [primary on page 260](#)
- [query-api on page 266](#)
- [secondary on page 279](#)
- [invalid-authentication-entry-timeout on page 227](#)

## ip-user-mapping

---

<b>Syntax</b>	<pre>ip-user-mapping {   discovery-method {     wmi {       event-log-scanning-interval <i>seconds</i>;       initial-event-log-timespan <i>hours</i>;     }   } }</pre>
<b>Hierarchy Level</b>	[edit services user-identification active-directory domain]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X47-D10.
<b>Description</b>	<p>Control how the SRX Series device accesses a domain controller in order to monitor and scan security event logs on the domain controller. By parsing the event log, the SRX Series gets IP address-to-user mappings. This process is part of the integrated user firewall feature. The <b>ip-user-mapping</b> statement is optional because WMI is the default discovery method and its properties have default values.</p> <p>The other available method the SRX Series uses to retrieve address-to-user mapping information is manual (on-demand) probing of a domain PC.</p>
<b>Options</b>	<p><b>discovery-method</b>—Method of discover IP address-to-user mappings.</p> <p><b>wmi</b>—Windows Management Instrumentation (WMI) is the discovery method used to access the domain controller.</p> <p><b>event-log-scanning-interval <i>seconds</i></b>—Optional. Interval at which the SRX Series scans the event log on the domain controller.</p> <p><b>Range:</b> 5 through 60 seconds</p> <p><b>Default:</b> 10 seconds</p> <p><b>initial-event-log-timespan <i>hours</i></b>—Optional. Time of the earliest event log on the domain controller that the SRX Series will initially scan. This argument applies to the initial deployment only. After WMIC and the user identification start working, the SRX Series scans only the latest event log.</p> <p><b>Range:</b> 1 through 168 hours</p> <p><b>Default:</b> 1 hour</p>
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">active-directory-access on page 139</a></li><li>• <a href="#">clear services user-identification active-directory-access on page 338</a></li></ul>

- [request services user-identification active-directory-access ip-user-probe](#) on page 344
- [user-identification \(Services\)](#) on page 317
- [show services user-identification active-directory-access statistics](#) on page 382
- [traceoptions \(Active Directory Access\)](#) on page 310

## ldap-options

<b>Syntax</b>	<pre> ldap-options {   assemble {     common-name <i>common-name</i>;   }   base-distinguished-name <i>base-distinguished-name</i>;   revert-interval <i>seconds</i>;   search {     admin-search {       distinguished-name <i>distinguished-name</i>;       password <i>password</i>;     }     search-filter <i>filter-name</i>;   } }</pre>
<b>Hierarchy Level</b>	[edit access], [edit access profile <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Configure LDAP authentication options.
<b>Options</b>	The remaining options are explained separately.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Security Configuration Guide</i></li> </ul>

## ldap-server

---

<b>Syntax</b>	<pre>ldap-server server-address {     port port-number;     retry attempts;     routing-instance routing-instance-name;     source-address source-address;     timeout seconds;     no-tls-certificate-check;     tls-min-version (v1.1   v1.2);     tls-peer-name;     tls-timeout;     tls-type {         start-tls;     } }</pre>
<b>Hierarchy Level</b>	<pre>[edit access] [edit access profile profile-name]</pre>
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify that the device uses a Lightweight Directory Access Protocol (LDAP) server for authentication.
<b>Options</b>	<p><b>server-address</b>—Address of the LDAP authentication server.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>access—To view this statement in the configuration.</p> <p>access-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li><li>• <i>Obtaining Username and Role Information Through Firewall Authentication</i></li><li>• <i>LDAP Functionality in Integrated User Firewall</i></li></ul>

---

## level (Services)

---

<b>Syntax</b>	<code>level [<i>brief</i>   <i>detail</i>   <i>extensive</i>   <i>verbose</i>];</code>
<b>Hierarchy Level</b>	<code>[edit services ssl traceoptions]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10.
<b>Description</b>	Specify the level of debugging the output. This statement is supported on the SRX550M, SRX4100, SRX4200, SRX5400, SRX5600, and SRX5800 devices and vSRX.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>brief</i>—Specify brief debugging output.</li><li>• <i>detail</i>—Specify detailed debugging output.</li><li>• <i>extensive</i>—Specify extensive debugging output.</li><li>• <i>verbose</i>—Specify verbose debugging output.</li></ul>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring SSL Forward Proxy</i></li></ul>

## level (Services User Identification)

---

<b>Syntax</b>	level (brief   detail   extensive   verbose);
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass traceoptions]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Configure the level of messages o be written to the trace log file about authentication source behavior.</p> <p>For the integrated ClearPass authentication enforcement feature, the authentication source is Aruba ClearPass.</p>
<b>Options</b>	<p><b>all</b>—Matches all levels.</p> <p><b>error</b>—Matches error conditions.</p> <p><b>info</b>—Matches informational messages.</p> <p><b>notice</b>—Matches conditions that require special handling.</p> <p><b>verbose</b>—Matches verbose messages.</p> <p><b>warning</b>—Matches warning messages.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>



## lifetime-seconds (Security IKE)

<b>Syntax</b>	<code>lifetime-seconds seconds;</code>
<b>Hierarchy Level</b>	[edit security ike proposal <i>proposal-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5. Default value modified in Junos OS Release 10.2.
<b>Description</b>	Specify the lifetime (in seconds) of an IKE security association (SA). When the SA expires, it is replaced by a new SA and security parameter index (SPI) or terminated.
<b>Options</b>	<p><b>seconds</b>—Lifetime of the IKE SA.</p> <p><b>Range:</b> 180 through 86,400 seconds</p> <p><b>Default:</b> 28,800 seconds</p>
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>IPsec VPN Overview</i></li> <li>• <i>Junos OS User Authentication Methods</i></li> </ul>

## link (Access)

<b>Syntax</b>	<code>link pool-name;</code>
<b>Hierarchy Level</b>	[edit access address-assignment pool]
<b>Release Information</b>	Statement introduced in Release 10.4 of Junos OS.
<b>Description</b>	Configure the name of the secondary address-assignment pool that is linked to a primary address-assignment pool. The secondary pool provides a backup pool for local address assignment.
<b>Options</b>	<b>pool-name</b> —Name of the address assignment pool.
<b>Required Privilege Level</b>	<p>access—To view this statement in the configuration.</p> <p>access-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Firewall User Authentication Overview</i></li> <li>• <i>Obtaining Username and Role Information Through Firewall Authentication</i></li> </ul>

## local-authentication-table

---

<b>Syntax</b>	<code>local-authentication-table priority <i>priority</i>;</code>
<b>Hierarchy Level</b>	[edit security user-identification authentication-source]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1. Support for <b>disable</b> option dropped in Junos OS Release 12.1X47-D10.
<b>Description</b>	An authentication table created on the SRX Series device using the <b>request security user-identification local-authentication-table add</b> command.
<b>Options</b>	<p><b>priority <i>priority</i></b>—A unique value between 0 and 65535 that determines the sequence for searching multiple tables to retrieve a user role. Each table is given a unique priority value. The lower the value, the higher the priority. A table with priority 120 is searched before a table with priority 200. The default priority value of the local authentication table is 100.</p> <p>Setting the priority value of the local authentication table to 0 is equivalent to disabling the table and eliminating it from the search sequence.</p>
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding User Role Firewalls</i></li><li>• <i>Understanding the User Identification Table</i></li></ul>

## log (Services)

<b>Syntax</b>	<pre>log {   all;   errors;   info;   sessions-allowed;   sessions-dropped;   sessions-ignored;   sessions-whitelisted;   warning; }</pre>
<b>Hierarchy Level</b>	[edit services ssl proxy profile <i>profile-name</i> actions]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10.
<b>Description</b>	<p>Specify the logging actions. When configuring SSL proxy, you can choose to set the option to receive some or all of the logs.</p> <p>SSL proxy logs contain the logical system name, SSL proxy whitelists, policy information, SSL proxy information, and other information that helps you troubleshoot when there is an error.</p> <p>You can configure logging of all or specific events, such as error, warning, and information events. You can also configure logging of sessions that are whitelisted, dropped, ignored, or allowed after an error occurs.</p>
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>all</b>—Log all events.</li> <li>• <b>errors</b>—Log all error events.</li> <li>• <b>info</b>—Log all information events.</li> <li>• <b>sessions-allowed</b>—Log SSL session allowed events after an error.</li> <li>• <b>sessions-dropped</b>—Log only SSL session dropped events.</li> <li>• <b>sessions-ignored</b>—Log session ignored events.</li> <li>• <b>sessions-whitelisted</b>—Log SSL session whitelisted events.</li> <li>• <b>warning</b>—Log all warning events.</li> </ul>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring SSL Forward Proxy</i></li> </ul>

## login (Access)

---

<b>Syntax</b>	<code>login <i>string</i>;</code>
<b>Hierarchy Level</b>	[edit access firewall-authentication pass-through default-profile <i>profile-name</i> (ftp   http   telnet) banner]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the login banner for users using FTP, HTTP, and Telnet during the authentication process.
<b>Options</b>	<b><i>string</i></b> —Banner text. Maximum length of the message text is 250 characters. Enclose the banner text within spaces or special characters—for example quotation marks (" ").
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li><li>• <i>Obtaining Username and Role Information Through Firewall Authentication</i></li></ul>

## nas-port-type

---

<b>Syntax</b>	<code>nas-port-type {     ethernet (ethernet); }</code>
<b>Hierarchy Level</b>	[edit access profile <i>name</i> radius options]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D110 for SRX300, SRX320, SRX340, SRX345, and SRX550M devices.
<b>Description</b>	RADIUS is an authentication method for validating users trying to access the device using Telnet. Using the <b>nas-port-type</b> configuration statement, you can define the type of physical port to authenticate the user.
<b>Options</b>	<b>ethernet</b> — Translation mechanism for changing the Ethernet value. <b>Values:</b> <ul style="list-style-type: none"><li>• ethernet—Configure the NAS port type as Ethernet</li></ul>
<b>Required Privilege Level</b>	access

## network (Access)

---

<b>Syntax</b>	network
<b>Hierarchy Level</b>	[edit access address-assignment pool <name> family (inet   inet6)]
<b>Release Information</b>	Statement introduced in Release 10.4 of Junos OS.
<b>Description</b>	Specify the IPv4 network address for the pool. This attribute is mandatory. For an IPv6 pool, you will set the IPv6 network prefix.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Security Configuration Guide</i></li> </ul>

## no-remote-trace (Services User Identification)

---

<b>Syntax</b>	no-remote-trace;
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass traceoptions]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Disable remote tracing.
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.

## no-user-query (Services User Identification)

---

<b>Syntax</b>	no-user-query;
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Disable the integrated ClearPass authentication and enforcement user query function, if it is configured. You can use the no-user-query statement to turn off the user query function without having to delete the configuration.</p> <p>The user query function allows the SRX Series device to query the ClearPass webserver for authentication and identity information for an individual user whose information was not posted to the SRX Series device by ClearPass.</p>
<b>Required Privilege Level</b>	<p><b>services</b>—To view this statement in the configuration.</p> <p><b>services-control</b>—To add this statement to the configuration.</p>

## no-tls-certificate-check

---

<b>Syntax</b>	no-tls-certificate-check;
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> ldap-server <i>ip-address</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D70.
<b>Description</b>	<p>Specify validation of the server certificate not required. SRX Series devices support an additional check on the Lightweight Directory Access Protocol (LDAP) server's certificate during the Transport Layer Security (TLS) handshake for LDAP authentication. If the validation of the server certificate is not required, you can use this option to ignore the validation and accept the certificate without checking. By default, this option is disabled.</p>
<b>Required Privilege Level</b>	<p><b>services</b>—To view this statement in the configuration.</p> <p><b>services-control</b>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li><li>• <i>Example: Configuring Integrated User Firewall</i></li></ul>

## pass-through

```
Syntax  pass-through {
        default-profile profile-name;
        ftp {
            banner {
                fail string;
                login string;
                success string;
            }
        }
        http {
            banner {
                fail string;
                login string;
                success string;
            }
        }
        telnet {
            banner {
                fail string;
                login string;
                success string;
            }
        }
    }
```

**Hierarchy Level** [edit access firewall-authentication]

**Release Information** Statement introduced in Junos OS Release 8.5.  
HTTPS for pass-through authentication is supported on SRX5400, SRX5600, and SRX5800 devices starting from Junos OS Release 12.1X44-D10 and on vSRX, SRX300, SRX320, SRX340, SRX345, SRX550M, and SRX1500 Services Gateways starting from Junos OS Release 15.1X49-D40.

**Description** Configure pass-through , when a host or user from one zone needs to access a protected resource in another zone. A user must use an FTP, Telnet, or HTTP client to access the IP address of the protected resource and get authenticated by the firewall. The device uses FTP, Telnet, and HTTP to collect username and password information. Subsequent traffic from the user or host is allowed or denied based on the result of this authentication. After the user is authenticated, the firewall proxies the connection.

**Options** The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** access—To view this statement in the configuration.  
access-control—To add this statement to the configuration.

**Related Documentation**

- *Firewall User Authentication Overview*
- *Obtaining Username and Role Information Through Firewall Authentication*

## password (Access)

---

<b>Syntax</b>	<code>password password;</code>
<b>Hierarchy Level</b>	[edit access ldap-options search admin-search], [edit access profile <i>profile-name</i> ldap-options search admin-search]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Configure the plain-text password for the administrative user. This password is used in the bind for performing the LDAP search.
<b>Options</b>	<i>password</i> —Administrative user password.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## password (Services)

---

<b>Syntax</b>	<code>password password;</code>
<b>Hierarchy Level</b>	[edit services unified-access-control infranet-controller <i>hostname</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Specify the password that the SRX Series device should send to the IC Series device to establish communications. The SRX Series device sends the password in its first message to the IC Series device.</p> <p>This statement is required when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series device.</p>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">ca-profile (Services) on page 169</a></li><li>• <a href="#">server-certificate-subject on page 283</a></li></ul>



## password (System Services)

---

<b>Syntax</b>	<code>password password;</code>
<b>Hierarchy Level</b>	[edit system services webapi user]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Specify the password for the integrated ClearPass authentication and enforcement feature Web API daemon (webapi) user.</p> <p>Range: 1 through 128 characters.</p> <p>The Web API daemon, acting as an HTTP server, exposes to the Aruba ClearPass Policy Manager (CPPM) an API that allows the CPPM, acting as a client, to send POST request messages to it. The CPPM, which serves as the authentication source, initiates the session to the SRX Series device and sends it user authentication and identity information.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>

## permit (Security Policies)

```
Syntax  permit {
        application-services {
            application-firewall {
                rule-set rule-set-name;
            }
            application-traffic-control {
                rule-set rule-set-name;
            }
            gprs-gtp-profile profile-name;
            gprs-sctp-profile profile-name;
            idp;
            redirect-wx | reverse-redirect-wx;
            ssl-proxy {
                profile-name profile-name;
            }
            uac-policy {
                captive-portal captive-portal;
            }
            utm-policy policy-name;
        }
        destination-address {
            drop-translated;
            drop-untranslated;
        }
        firewall-authentication {
            pass-through {
                access-profile profile-name;
                client-match user-or-group-name;
                ssl-termination-profile profile-name;
                web-redirect;
                web-redirect-to-https;
            }
            user-firewall {
                access-profile profile-name;
                domain domain-name;
                ssl-termination-profile profile-name;
            }
            web-authentication {
                client-match user-or-group-name;
            }
        }
        services-offload;
        tcp-options {
            sequence-check-required;
            syn-check-required;
        }
        tunnel {
            ipsec-group-vpn group-vpn;
            ipsec-vpn vpn-name;
            pair-policy pair-policy;
        }
    }
```

<b>Hierarchy Level</b>	[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5. Support for the <b>tcp-options</b> added in Junos OS Release 10.4. Support for the <b>services-offload</b> option added in Junos OS Release 11.4. Support for the <b>ssl-termination-profile</b> and <b>web-redirect-to-https</b> options added in Junos OS Release 12.1X44-D10. Support for the <b>user-firewall</b> option added in Junos OS Release 12.1X45-D10.
<b>Description</b>	Specify the policy action to perform when packets match the defined criteria.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	<b>security</b> —To view this statement in the configuration. <b>security-control</b> —To add this statement to the configuration.

### **pki-local-certificate (Services)**

---

<b>Syntax</b>	<b>pki-local-certificate</b> <i>pki-certificate</i> ;
<b>Hierarchy Level</b>	[edit system services webapi https]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Configure the Web API daemon to use the local X.509 PKI certificate for HTTPS when HTTPS is specified as the communication protocol. The SRX Series integrated ClearPass authentication and enforcement feature exposes the Web API to the ClearPass Policy Manager (CPPM) to allow the CPPM to initiate a connection to the SRX Series device. For this feature, ClearPass acts as the authentication source. The CPPM uses the HTTPS connection to send user authentication and identity information to the SRX Series device.
<b>Required Privilege Level</b>	<b>services</b> —To view this statement in the configuration. <b>services-control</b> —To add this statement to the configuration.

## policies

```

Syntax  policies {
        default-policy (deny-all | permit-all);
        from-zone zone-name to-zone zone-name {
            policy policy-name {
                description description;
                match {
                    application {
                        [application];
                        any;
                    }
                    destination-address {
                        [address];
                        any;
                        any-ipv4;
                        any-ipv6;
                    }
                    source-address {
                        [address];
                        any;
                        any-ipv4;
                        any-ipv6;
                    }
                    source-identity {
                        [role-name];
                        any;
                        authenticated-user;
                        unauthenticated-user;
                        unknown-user;
                    }
                }
            }
            scheduler-name scheduler-name;
            then {
                count {
                    alarm {
                        per-minute-threshold number;
                        per-second-threshold number;
                    }
                }
                deny;
                log {
                    session-close;
                    session-init;
                }
                permit {
                    application-services {
                        application-firewall {
                            rule-set rule-set-name;
                        }
                    }
                    application-traffic-control {
                        rule-set rule-set-name;
                    }
                    gprs-gtp-profile profile-name;
                }
            }
        }
    }

```

```

    gprs-sctp-profile profile-name;
    idp;
    idp-policy idp-policy;
    redirect-wx | reverse-redirect-wx;
    ssl-proxy {
        profile-name profile-name;
    }
    uac-policy {
        captive-portal captive-portal;
    }
    utm-policy policy-name;
}
destination-address {
    drop-translated;
    drop-untranslated;
}
firewall-authentication {
    pass-through {
        access-profile profile-name;
        client-match user-or-group-name;
        ssl-termination-profile profile-name;
        web-redirect;
        web-redirect-to-https;
    }
    user-firewall {
        access-profile profile-name;
        domain domain-name;
        ssl-termination-profile profile-name;
    }
    web-authentication {
        client-match user-or-group-name;
    }
}
services-offload;
tcp-options {
    sequence-check-required;
    syn-check-required;
}
tunnel {
    ipsec-group-vpn group-vpn;
    ipsec-vpn vpn-name;
    pair-policy pair-policy;
}
}
reject;
}
}
global {
    policy policy-name {
        description description;
        match {
            application {
                [application];
                any;
            }
        }
    }
}

```

```
destination-address {
    [address];
    any;
    any-ipv4;
    any-ipv6;
}
from-zone {
    [zone-name];
    any;
}
source-address {
    [address];
    any;
    any-ipv4;
    any-ipv6;
}
source-identity {
    [role-name];
    any;
    authenticated-user;
    unauthenticated-user;
    unknown-user;
}
to-zone {
    [zone-name];
    any;
}
}
scheduler-name scheduler-name;
then {
    count {
        alarm {
            per-minute-threshold number;
            per-second-threshold number;
        }
    }
    deny;
    log {
        session-close;
        session-init;
    }
    permit {
        application-services {
            application-firewall {
                rule-set rule-set-name;
            }
            application-traffic-control {
                rule-set rule-set-name;
            }
        }
        gprs-gtp-profile profile-name;
        gprs-sctp-profile profile-name;
        idp;
        idp-policy idp-policy;
        redirect-wx | reverse-redirect-wx;
        ssl-proxy {
            profile-name profile-name;
        }
    }
}
```

```

    }
    uac-policy {
        captive-portal captive-portal;
    }
    utm-policy policy-name;
}
destination-address {
    drop-translated;
    drop-untranslated;
}
firewall-authentication {
    pass-through {
        access-profile profile-name;
        client-match user-or-group-name;
        ssl-termination-profile profile-name;
        web-redirect;
        web-redirect-to-https;
    }
    web-authentication {
        client-match user-or-group-name;
    }
}
services-offload;
tcp-options {
    initial-tcp-mss mss-value;
    reverse-tcp-mss mss-value;
    sequence-check-required;
    syn-check-required;
}
}
reject;
}
}
}
policy-rematch;
policy-stats {
    system-wide (disable | enable) ;
}
traceoptions {
    file {
        filename;
        files number;
        match regular-expression;
        size maximum-file-size;
        (world-readable | no-world-readable);
    }
    flag flag;
    no-remote-trace;
}
}
}

```

Hierarchy Level [edit security]

<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.5.</p> <p>Support for the <b>services-offload</b> option added in Junos OS Release 11.4.</p> <p>Support for the <b>source-identity</b> option added in Junos OS Release 12.1.</p> <p>Support for the <b>description</b> option added in Junos OS Release 12.1.</p> <p>Support for the <b>ssl-termination-profile</b> and <b>web-redirect-to-https</b> options added on SRX5400, SRX5600, and SRX5800 devices starting from Junos OS Release 12.1X44-D10 and on vSRX, SRX300, SRX320, SRX340, SRX345, SRX550M, and SRX1500 Services Gateways starting from Junos OS Release 15.1X49-D40.</p> <p>Support for the <b>user-firewall</b> option added in Junos OS Release 12.1X45-D10.</p> <p>Support for the <b>domain</b> option, and for the <b>from-zone</b> and <b>to-zone</b> global policy match options, added in Junos OS Release 12.1X47-D10.</p> <p>Support for the <b>initial-tcp-mss</b> and <b>reverse-tcp-mss</b> options added in Junos OS Release 12.3X48-D20. Support for the <b>extensive</b> option for <b>policy-rematch</b> added in Junos OS Release 15.1X49-D20.</p> <p>Starting in Junos OS Release 18.2R1, IDP policy is available within unified security policy. IDP policy is simplified and made available under the unified policy as one of the policy. When IDP policy is available within the unified security policy, configuring source or destination address, source and destination-except, from and to zone, or application is not required, as the match happens in the security policy itself.</p>
<b>Description</b>	Configure network security policies.
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Security Policies Overview</i></li></ul>



## pool (Access)

```
Syntax  pool pool-name {
        family {
            inet {
                dhcp-attributes {
                    boot-file boot file name;
                    boot-server boot server name;
                    domain-name domain name;
                    grace-period seconds;
                    maximum-lease-time (seconds | infinite);
                    name-server ipv4-address;
                    name-server address;
                    netbios-node-type (b-node | h-node | m-node | p-node);
                    option dhcp option-identifier-code;
                    option-match {
                        option-82 {
                            circuit-id match-value;
                            remote-id match-value;
                        }
                    }
                }
                router IPv4 address;
                server-identifier IP address;
                tftp-server server name;
                wins-server IPv4 address;
            }
            host hostname;
            network network address;
            range range-name {
                high upper-limit;
                low lower-limit;
            }
            xauth-attributes {
                primary-dns IP address;
                primary-wins IP address;
                secondary-dns IP address;
                secondary-wins IP address;
            }
        }
        inet6 {
            dhcp-attributes {
                dns-server IPv6-address;
                grace-period seconds;
                maximum-lease-time seconds;
                option dhcp-option-identifier-code;
                sip-server-address IPv6-address;
                sip-server-domain-name domain-name;
            }
            prefix IPv6-network-prefix;
            range range-name {
                high upper-limit;
                low lower-limit;
                prefix-length delegated-prefix-length;
            }
        }
    }
```

```
    link pool-name;  
}
```

<b>Hierarchy Level</b>	[edit access address-assignment]
<b>Release Information</b>	Statement introduced in Release 10.4 of Junos OS.
<b>Description</b>	Configure the name of an address assignment pool. The remaining statements are explained separately.
<b>Options</b>	<i>pool-name</i> —Name assigned to the address-assignment pool.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li><li>• <i>Obtaining Username and Role Information Through Firewall Authentication</i></li></ul>


---

## port (Access LDAP)

---

<b>Syntax</b>	port <i>port-number</i> ;
<b>Hierarchy Level</b>	[edit access ldap-server <i>server-address</i> ], [edit access profile <i>profile-name</i> ldap-server <i>server-address</i> ]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Configure the port number on which to contact the LDAP server.
<b>Options</b>	<i>port-number</i> —Port number on which to contact the LDAP server. <b>Default:</b> 389
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## port (Identity Management Advanced Query)

<b>Syntax</b>	<code>port port;</code>
<b>Hierarchy Level</b>	[edit services user-identification services identity-management connection]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure the port on the Juniper Identity Management Service server that the SRX Series device uses to connect to the server.</p> <p>The SRX Series device by default always attempts to connect to the primary server. It falls back to the secondary server when its queries to the primary server fail. If the primary server fails, the SRX Series device should be configured to periodically probe the failed primary server and revert to it when it is available.</p> <p>The advanced user identity query feature relies on the Juniper Identity Management Service to provide a global, end-to-end user identity management solution which allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting. Juniper Identity Management Service provides a centralized identity collection (CIC) system from which the SRX Series device obtains user identity information. It also includes device endpoint context, also referred to as <i>device identity</i>, and machine identity (machine ID) information for the user.</p>
	<div>  <p><b>WARNING:</b> Before you use this feature, you must disable active-directory-access and authentication-source options under the [edit services user-identification] hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.</p> </div>
<b>Options</b>	<p><b>port</b>—The port number on the Juniper Identity Management Service server that the SRX Series device connects to.</p> <p><b>Default:</b> 443</p> <p><b>Range:</b> 1-65535</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</i></li> <li>• <a href="#">connection on page 185</a></li> </ul>

- [connect-method on page 189](#)
- [filter on page 207](#)
- [ip-query on page 230](#)
- [primary on page 260](#)

## **port (Services)**

---

<b>Syntax</b>	<code>port <i>port-number</i>;</code>
<b>Hierarchy Level</b>	[edit services unified-access-control infranet-controller <i>hostname</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Specify the port on the IC Series device through which the SRX Series device should establish connections (default 11123). Possible values for this statement range from 1 through 65,535.</p> <p>Use this statement when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series device.</p>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">interface (Services) on page 225</a></li><li>• <a href="#">password (Services) on page 244</a></li></ul>

## port (System Services)

---

<b>Syntax</b>	<code>port <i>port-number</i>;</code>
<b>Hierarchy Level</b>	[edit system services webapi http] [edit system services webapi https]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Specify the SRX Series device TCP port to use for incoming HTTP or HTTPS connection requests initiated by the ClearPass Policy Manager (CPPM). The SRX Series device integrated ClearPass authentication and enforcement feature exposes its Web API (webapi) to the CPPM. The CPPM uses the Web API to establish a connection to the SRX Series device and send user authentication and identity information to it.
<b>Options</b>	<p><b><i>port-number</i></b>—For HTTP connection protocol.</p> <p><b>Range:</b> 1 through 65535.</p> <p><b>Default:</b> 8080</p> <p><b><i>port port-number</i></b>—For HTTPS connection protocol.</p> <p><b>Range:</b> 1 through 65535.</p> <p><b>Default:</b> 8443</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>

## preferred-ciphers

---

<b>Syntax</b>	preferred-ciphers (custom   medium   strong   weak);
<b>Hierarchy Level</b>	[edit services ssl proxy profile <i>profile-name</i> ] [edit services ssl termination profile <i>profile-name</i> ] [edit services ssl initiation profile <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10.
<b>Description</b>	<p>Select preferred ciphers. Preferred ciphers allow you to define an SSL cipher that can be used with acceptable key strength. Ciphers are divided in three categories depending on their key strength: strong, medium, or weak.</p> <p>Custom ciphers allow you to define your own cipher list. If you do not want to use one of the three categories, you can select ciphers from each of the categories to form a custom cipher set. To configure custom ciphers, you must set <b>preferred-ciphers</b> to <b>custom</b>.</p>
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>custom</b>—Configure custom cipher suite and order of preference.</li><li>• <b>medium</b>—Use ciphers with key strength of 128 bits or greater.</li><li>• <b>strong</b>—Use ciphers with key strength of 168 bits or greater.</li><li>• <b>weak</b>—Use ciphers with key strength of 40 bits or greater.</li></ul>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li><li>• <i>SSL Proxy Overview</i></li></ul>

## prefix (Access IPv6)

---

<b>Syntax</b>	<code>prefix <i>IPv6-network prefix</i>;</code>
<b>Hierarchy Level</b>	[edit access address-assignment pool pool-name family inet6]
<b>Release Information</b>	Statement introduced in Release 10.4 of Junos OS.
<b>Description</b>	Specify the IPv6 prefix for the IPv6 address-assignment pool. This statement is mandatory for IPv6 address-assignment pools.
<b>Options</b>	<i>IPv6-network-prefix</i> —IPv6 prefix.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li></ul>

## primary connection (Identity Management Advanced Query)

**Syntax**    `primary {  
          address address;  
          ca-certificate ca-certificate;  
          client-id client-id;  
          client-secret client-secret;  
          }`

**Hierarchy Level**    `[edit services user-identification identity-management connection]`

**Release Information**    Statement introduced in Junos OS Release 15.1X49-D100.

**Description**    Configure parameters that the SRX Series device uses to connect to the Juniper Identity Management Service (JIMS) primary server and authenticate to it to obtain an access token. Juniper Identity Management Service requires that the SRX Series device use OAuth2 to authenticate to it before the SRX Series device is allowed to query the Juniper Identity Management Service server for user identity information. The SRX Series device must provide the Juniper Identity Management Service server with credentials, including a client ID and a client secret. If the client is authenticated—in this case the SRX Series device—it is granted an access token. (See RFC 6749.) Both the client ID and the client secret must be consistent with the API client configured on the Juniper Identity Management Service primary server.

In addition to configuring the client ID and the client secret, you configure the filename of the Juniper Identity Management Service's ca-certificate. The certificate enables the SRX Series device to verify the identity of Juniper Identity Management Service and that it is trusted for the SSL connection.

If the deployment configuration consists of more than one Juniper Identity Management Service server, a primary and secondary relationship is established. The SRX Series device always attempts to connect to the primary one. When one or more queries to the primary server fails, the system falls back to the secondary server.

The advanced user identity query feature allows you to obtain user identity information from the Juniper Identity Management Service through queries. It allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.



**WARNING:** Before you use this feature, you must disable any other actively used options under the `[edit services user-identification]` hierarchy. You cannot commit this configuration if active directory authentication and the ClearPass query and webapi functions are configured and committed.

**Options**    `address`—IP address of the primary server.



**ca-certificate**—Filename of the Juniper Identity Management Services primary server's ca-certificate. Before you configure the ca-certificate filename, the administrator of the Juniper Identity Management Services server must export the certificate and import it to the SRX Series device. The administrator must configure the complete path and filename of the certificate in regard to where it is installed on the SRX Series device, for example, '/var/db/RADIUSServerCertificate.crt'. If the ca-certificate is not configured, the SRX Series device cannot verify the Juniper Identity Management Service certificate.



**NOTE:** The SRX Series device supports a self signed + BASE64 encoded X.509 cert only.

**client-id**—Client ID that the SRX Series provides to the Juniper Identity Management Service primary server as part of its authentication to it. The SRX Series device must authenticate to the server to obtain an access token that allows the SRX Series device to query the server for user identity information. The client ID must be consistent with the API client configured on the Juniper Identity Management Service primary server.

**client-secret**—Client secret that the SRX Series provides to the Juniper Identity Management Service primary server as part of its authentication to it. The client secret must be consistent with the API client configured on the Juniper Identity Management Service primary server.

#### Required Privilege Level

#### Related Documentation

- *Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS*
- [connect-method on page 189](#)
- [filter on page 207](#)
- [ip-query on page 230](#)
- [port on page 255](#)
- [query-api on page 266](#)
- [authentication-entry-timeout on page 155](#)
- [batch-query on page 161](#)

## priority (Security User Identification)

**Syntax** authentication-source {  
     active-directory priority *priority*;  
     aruba-clearpass priority *priority*;  
     firewall-authentication priority *priority*;  
     local-authentication-table priority *priority*;  
     unified-access-control priority *priority*;  
 }

**Hierarchy Level** [edit security user-identification]

**Release Information** Statement introduced in Junos OS Release 12.3X48-D30.

**Description** Set the lookup priority to identify the order in which the SRX Series device checks its configured authentication tables for user authentication information. Authentication tables are searched in order based on their priority setting in which lowest value takes precedence.

For the integrated ClearPass authentication and enforcement feature, the SRX Series device must be configured to search the ClearPass authentication table first.



**NOTE:** Note that both the authentication source, Aruba ClearPass, and the SRX Series ClearPass authentication table are both referred to as `aruba-clearpass` in the CLI and its output.

You need to set this value only if the local authentication table, whose default value is 100, also resides on the Packet Forwarding Engine. In that case, you must configure a higher priority value, such as 120, for the local authentication table.

**Options** *priority*—Aruba-clearpass authentication table search priority.

**Range:** 1 through 65535.


**Default:** 110.

Default values for other authentication tables:

- Local authentication table: 100
- Active Directory (AD) table: 125
- UAC authentication table: 150
- Firewall authentication table: 200

**Required Privilege Level** security—To view this statement in the configuration.  
 security-control—To add this statement to the configuration.

## push-to-identity-management

<b>Syntax</b>	push-to-identity-management;
<b>Hierarchy Level</b>	[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit firewall-authentication]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure firewall authentication to push authentication entries with a successful authentication state to the Juniper Identity Management Service server. You use this statement in conjunction with the <code>query-api/user</code> statement, which sets the path of the URL for querying user identities.</p> <p>When the SRX Series device does not have authentication information for a user based on the user's IP address, it can force the user to authenticate through captive portal to obtain the user ID information and authenticate the user. If a security policy that specifies firewall authentication is configured with the <b>push-to-identity-management</b> statement, the user information is pushed to the Juniper Identity Management Service server.</p> <p>After you push the entry to the Juniper Identity Management Service server, you can use the batch query function to obtain authentication information for that user from the Juniper Identity Management Service server, including the groups that the user belongs to.</p>
	<div>  <p><b>NOTE:</b> The SRX Series device does not update the authentication-entry time-out state to Juniper Identity Management Service.</p> </div>
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</i></li> <li>• <a href="#">query-api on page 266</a></li> <li>• <a href="#">filter on page 207</a></li> <li>• <a href="#">port on page 255</a></li> <li>• <a href="#">primary on page 260</a></li> <li>• <a href="#">secondary on page 279</a></li> <li>• <a href="#">token-api on page 303</a></li> </ul>

## protocol-version


---

<b>Syntax</b>	protocol-version (all   tls1   tls11   tls12);
<b>Hierarchy Level</b>	[edit services ssl termination profile <i>profile-name</i> ] [edit services ssl initiation profile <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10. The <b>tls11</b> and <b>tls12</b> options are introduced in 15.1X49-D30.
<b>Description</b>	<p>Specify the accepted SSL protocol version.</p> <p>You can specify the SSL/TLS protocol version the SRX Series device uses to negotiate in SSL connections.</p>
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>all</b>—Accept all versions of TLS.</li><li>• <b>TLS version 1.0</b>—Accept TLS version 1.0. It provides secure communication over networks by providing privacy and data integrity between communicating applications</li><li>• <b>TLS version 1.1</b>—Accept TLS version 1.1. This enhanced version of TLS provides protection against cipher-block chaining (CBC) attacks.</li><li>• <b>TLS version 1.2</b>—Accept TLS version 1.2. This enhanced version of TLS provides improved flexibility for negotiation of cryptographic algorithms.</li></ul>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li><li>• <i>SSL Proxy Overview</i></li></ul>

## query-api (Services User Identification)

<b>Syntax</b>	<code>query-api query-api</code>
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass user-query]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Configure <b>query-api</b> to specify the path of the URL that the SRX Series device uses to query the ClearPass Policy Manager (CPPM) webserver for authentication and identity information for an individual user. For the SRX Series device to be able to make a request, you must have configured it to obtain an access token. See <a href="#">token-api (Services User Identification)</a>.</p> <p>The integrated ClearPass authentication and enforcement user query function supplements the Web API function (webapi) by allowing the SRX Series device to obtain from the CPPM authentication information for an individual user whose information does not already exist in the SRX Series ClearPass authentication table.</p> <p>Consider the following <b>query-api</b> example:</p> <pre>api/v1/insight/endpoint/ip/\$IP\$</pre> <p>The SRX Series device generates the complete URL for the user query request by combining the query-api string with the connection method (HTTPS) and the CPPM webserver IP address ({server}).</p> <pre>https://{server}/api/v1/insight/endpoint/ip/\$IP\$</pre> <p>In this example, the SRX Series device replaces the variables with the following values resulting in a specific URL request for the individual user:</p> <pre>https://203.0.113.76/api/v1/insight/endpoint/ip/192.0.2.98</pre> <p>Under normal circumstances, the ClearPass webserver sends user authentication information to the SRX Series device in POST request messages and the SRX Series device writes that information to its ClearPass authentication table. When the SRX Series device receives an access request from a user, it searches its ClearPass authentication table for an entry for that user.</p> <p>It can happen that the SRX Series device might not have received authentication for a user from the CPPM because the user has not yet been authenticated by the CPPM. For example, the user might have joined the network through an access layer not on a managed switch or WLAN. When the CPPM receives the user query from the SRX Series device, it authenticates the user and returns the authentication information to the device.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

## query-api (advanced user query)

<b>Syntax</b>	<code>query-api query-api;</code>
<b>Hierarchy Level</b>	[edit services user-identification identity-management connection]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>Configure the prefix of the URL path for querying user identities. This value is used to construct the prefix of the path for queries for individual users, as well as for ip-query and batch-query requests, each of which has a unique suffix:</p> <ul style="list-style-type: none"> <li>• For user-query <i>query-api/user</i></li> <li>• For IP query, <i>query-api/ip/</i></li> <li>• For batch query, <i>query-api/users/</i></li> </ul> <p>For example, for individual user queries, you can obtain user information, such as the groups that the user belongs to, from the Juniper Identity Management Service server. When the SRX Series device does not have authentication information for a user based on the user's IP address, it can force the user to authenticate through captive portal to obtain the user ID information and authenticate the user.</p> <p>If a security policy that specifies firewall authentication is configured with the <b>push-to-identity-management</b> statement, the user information is pushed to the JIMS server.</p> <p>After you push the user identity entry to the JIMS server, you can obtain the user identity information, including information such as groups that the user belongs to and information about the user's device. This information is returned to you in the next batch query response.</p> <p>To generate the complete URL for a user query, the prefix <b>user_query/v2</b> is combined with the connection method, which is HTTPS, the IP address of the Juniper Identity Management Service server, the IP address of the user's device, and the domain name.</p>
	<div>  <p><b>WARNING:</b> Before you use this feature, you must disable <b>active-directory-access</b> and <b>authentication-source</b> options under the <b>user-identification</b> hierarchy. You cannot commit this configuration if <b>active directory authentication</b> or the <b>ClearPass query</b> and <b>webapi</b> functions are configured and committed.</p> </div>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</i></li><li>• <a href="#">push-to-identity-management on page 263</a></li><li>• <a href="#">filter on page 207</a></li><li>• <a href="#">ip-query on page 230</a></li><li>• <a href="#">port on page 255</a></li><li>• <a href="#">primary on page 260</a></li><li>• <a href="#">token-api on page 303</a></li></ul>
------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## radius-options (Access)

---

<b>Syntax</b>	<pre>radius-options {     revert-interval <i>seconds</i>; }</pre>
<b>Hierarchy Level</b>	<pre>[edit access]; [edit access profile <i>profile-name</i>]</pre>
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Configure RADIUS options.
<b>Options</b>	The remaining statement is explained separately.
<b>Required Privilege Level</b>	<pre>access—To view this statement in the configuration. access-control—To add this statement to the configuration.</pre>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## radius-server (Access)

---

<b>Syntax</b>	<pre>radius-server server-address {     port <i>port-number</i>;     retry <i>attempts</i>;     routing-instance <i>routing-instance-name</i>;     secret <i>password</i>;     source-address <i>source-address</i>;     timeout <i>seconds</i>; }</pre>
<b>Hierarchy Level</b>	[edit access], [edit access profile <i>profile-name</i> ]
<b>Release Information</b>	Statement modified in Junos OS Release 8.5.
<b>Description</b>	<p>Configure RADIUS for Layer 2 Tunneling Protocol (L2TP) or Point-to-Point Protocol (PPP) authentication.</p> <p>To configure multiple RADIUS servers, include multiple <b>radius-server</b> statements. The servers are tried in order and in a round-robin fashion until a valid response is received from one of the servers or until all the configured retry limits are reached.</p>
<b>Options</b>	<p><b>server-address</b>—Address of the RADIUS authentication server.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>access—To view this statement in the configuration.</p> <p>access-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li></ul>




## range (Access)

---

<b>Syntax</b>	<pre>range <i>range-name</i> {     high <i>upper-limit</i>;     low <i>lower-limit</i>;     prefix-length <i>delegated-prefix-length</i>; }</pre>
<b>Hierarchy Level</b>	<pre>[edit access address-assignment pool pool-name family inet6] [edit access address-assignment pool pool-name family inet]</pre>
<b>Release Information</b>	Statement introduced in Release 10.4 of Junos OS.
<b>Description</b>	Configure an IP name range used within an address-assignment pool. For IPv4, you do not create a prefix-length.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>range-name</i>—Name of the range.</li> <li>• <b>high</b> <i>upper-limit</i>—Upper limit of IPv6 address range.</li> <li>• <b>low</b> <i>lower-limit</i>—Lower limit of IPv6 address range.</li> <li>• <b>prefix-length</b> <i>delegated-prefix-length</i>—IPv6 delegated prefix length.</li> </ul>
<b>Required Privilege Level</b>	<pre>access—To view this statement in the configuration. access-control—To add this statement to the configuration.</pre>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Firewall User Authentication Overview</i></li> </ul>

## rate-limit (Security Log)

---


<b>Syntax</b>	<code>rate-limit <i>rate-limit</i>;</code>
<b>Hierarchy Level</b>	[edit security log stream <i>stream-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>The Integrated Authentication and Enforcement feature sends threat and attack logs generated by the SRX Series device security modules to the ClearPass Policy Manager (CPPM) to use in its security policy assessment.</p> <p>The logs are sent in stream mode. To avoid overburdening the SRX Series device and the log server, you can control the rate at which these logs are sent. By setting a rate-limit value, you can constrain the number of logs that are sent in 1 second. After the limit is reached, no more logs are sent.</p> <p>Range: 1 through 65,535.</p> <div><b>NOTE:</b> For devices with multicore systems that use SPUs, each SPU is programmed with the configured-rate, which results in an aggregate-rate proportional to the number of SPUs.</div> <div><math display="block">\text{SPU configured-rate} = \text{aggregate-rate} / \text{number-of-SPUs}</math><p>Rate limiting on SRX5400, SRX5600, and SRX5800 devices is generally not as accurate as it is on SRX100, SRX210, SRX220, SRX240, SRX650, SRX1400, SRX1500, SRX3400, SRX3600, SRX4100, and SRX4200 devices, because the generation of logs is not entirely balanced between SPUs.</p></div>
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>

## redirect-traffic

---

<b>Syntax</b>	redirect-traffic (all   unauthenticated);
<b>Hierarchy Level</b>	[edit services unified-access-control captive-portal <i>policy</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2.
<b>Description</b>	Specify to redirect traffic destined for protected sources to the IC Series device. You can choose to redirect all traffic or only unauthenticated traffic.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>all</b>—Redirect all traffic destined for the protected sources to the IC Series device. Specify this option if you want to redirect all traffic (IPsec or source IP) to the currently connected IC Series device or to an IP address or domain name that you specify in a redirect URL.</li> <li>• <b>unauthenticated</b>—Redirect unauthenticated traffic destined for the protected sources to the IC Series device. Select this option if your deployment uses source IP only or a combination of source IP and IPsec. The Junos OS Enforcer redirects clear-text traffic from unauthenticated users to the currently connected IC Series device or to an IP address or domain name that you specify in a redirect URL.</li> </ul>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Firewall User Authentication Overview</i></li> </ul>

## redirect-url

<b>Syntax</b>	<code>redirect-url url;</code>
<b>Hierarchy Level</b>	<code>[edit services unified-access-control captive-portal <i>policy</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2.
<b>Description</b>	<p>Specify to redirect traffic destined for protected sources to a specified URL.</p> <p>You can configure the following options in the redirect URL string:</p> <ul style="list-style-type: none"> <li>• <b>%dest-url%</b>—Specifies the protected resource which the user is trying to access.</li> <li>• <b>%enforcer-id%</b>—Specifies the ID assigned to the Junos OS Enforcer by the IC Series device.</li> <li>• <b>%policy-id%</b>—Specifies the encrypted policy ID for the security policy that redirected the traffic.</li> <li>• <b>%dest-ip%</b>—Specifies the IP address or hostname of the protected resource that the user is trying to access.</li> <li>• <b>%ic-ip%</b>—Specifies the IP address or hostname of the IC Series device to which the Junos OS Enforcer is currently connected.</li> </ul> <p>If you do not specify the redirect URL, the Junos OS Enforcer uses the following default configuration:</p> <pre>https://%ic-ip%/?target = %dest-url% &amp;enforcer = %enforcer-id% &amp;policy = %policy-id% &amp;dest-ip = %dest-ip%</pre> <div>  <p><b>NOTE:</b> The maximum size of a redirect payload is 1450 bytes. The size of the redirect URL is restricted to 1407 bytes (excluding a few HTTP headers). If a user accesses a destination URL that is larger than 1407 bytes, the Infranet Controller authenticates the payload, calculates the exact length of the redirect URL, and trims the destination URL so that it can fit into the redirect URL. The destination URL can be fewer than 1407 bytes based on what else is present in the redirect URL (for example, policy ID). The destination URL in the default redirect URL is trimmed so that the redirect packet payload size is limited to 1450 bytes. If the length of the payload is larger than 1450 bytes, the excess length is trimmed and the user is directed to the destination URL that has been resized to 1450 bytes.</p> </div>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

**Related Documentation** • *Firewall User Authentication Overview*

## retry (Access LDAP)

---

<b>Syntax</b>	<code>retry attempts;</code>
<b>Hierarchy Level</b>	[edit access ldap-server <i>server-address</i> ], [edit access profile <i>profile-name</i> ldap-server <i>server-address</i> ]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the number of retries that a device can attempt to contact an LDAP server.
<b>Options</b>	<p><b>attempts</b>—Number of retries that the device is allowed to attempt to contact an LDAP server.</p> <p><b>Range:</b> 1 through 10</p> <p><b>Default:</b> 3</p>
<b>Required Privilege Level</b>	<p><b>access</b>—To view this statement in the configuration.</p> <p><b>access-control</b>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	• <i>Junos OS Security Configuration Guide</i>

## retry (Access RADIUS)

---

<b>Syntax</b>	<code>retry attempts;</code>
<b>Hierarchy Level</b>	[edit access radius-server <i>server-address</i> ], [edit access profile <i>profile-name</i> radius-server <i>server-address</i> ]
<b>Release Information</b>	Statement modified in Release 8.5 of Junos OS.
<b>Description</b>	Specify the number of retries that a device can attempt to contact a RADIUS authentication server.
<b>Options</b>	<b>attempts</b> —Number of retries that the device is allowed to attempt to contact a RADIUS server. <b>Range:</b> 1 through 10 <b>Default:</b> 3
<b>Required Privilege Level</b>	secret—To view this statement in the configuration. secret-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## revert-interval (Access LDAP)

---

<b>Syntax</b>	<code>revert-interval seconds;</code>
<b>Hierarchy Level</b>	[edit access ldap-options], [edit access profile <i>profile-name</i> ldap-options]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the amount of time that elapses before the primary server is contacted if a backup server is being used.
<b>Options</b>	<b>seconds</b> —Number of seconds that elapse before the primary server is contacted. <b>Range:</b> 60 through 4,294,967,295 seconds <b>Default:</b> 600 seconds
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## revert-interval (Access RADIUS)

<b>Syntax</b>	<code>revert-interval <i>seconds</i>;</code>
<b>Hierarchy Level</b>	<code>[edit access radius-options]</code>
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the amount of time that elapses before the primary server is contacted if a backup server is being used.
<b>Options</b>	<p><b><i>seconds</i></b>—Number of seconds that elapse before the primary server is contacted.</p> <p><b>Range:</b> 60 through 4,294,967,295 seconds</p> <p><b>Default:</b> 600 seconds</p>
<b>Required Privilege Level</b>	<p>access—To view this statement in the configuration.</p> <p>access-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Security Configuration Guide</i></li> </ul>

## root-ca (Services)

<b>Syntax</b>	<code>root-ca <i>root-certificate</i>;</code>
<b>Hierarchy Level</b>	<p><code>[edit services ssl proxy profile <i>profile-name</i>]</code></p> <p><code>[edit services ssl termination profile <i>profile-name</i>]</code></p>
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10.
<b>Description</b>	Root certificate for interdicting server certificates in proxy mode. This statement is supported on the SRX1500, SRX5400, SRX5600, and SRX5800 devices and vSRX.
<b>Options</b>	<b><i>root-ca-name</i></b> —Specify root certificate for interdicting server certificates in proxy mode.
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring SSL Forward Proxy</i></li> <li>• <i>Firewall User Authentication Overview</i></li> </ul>

## routing-instance (Access LDAP)

---

<b>Syntax</b>	<code>routing-instance <i>routing-instance-name</i>;</code>
<b>Hierarchy Level</b>	<code>[edit access ldap-server <i>server-address</i>],</code> <code>[edit access profile <i>profile-name</i> ldap-server <i>server-address</i>]</code>
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Configure the routing instance used to send LDAP packets to the LDAP server. A routing instance is a collection of routing tables, the interfaces contained in the routing tables, and the routing protocol parameters that control the information in the routing tables.
<b>Options</b>	<i>routing-instance-name</i> —Name of the routing instance.
<b>Required Privilege Level</b>	<code>access</code> —To view this statement in the configuration. <code>access-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## routing-instance (Access RADIUS)

---

<b>Syntax</b>	<code>routing-instance <i>routing-instance-name</i>;</code>
<b>Hierarchy Level</b>	<code>[edit access radius-server <i>server-address</i>],</code> <code>[edit access profile <i>profile-name</i> radius-server <i>server-address</i>]</code>
<b>Release Information</b>	Statement modified in Release 8.5 of Junos OS.
<b>Description</b>	Configure the routing instance used to send RADIUS packets to the RADIUS server. A routing instance is a collection of routing tables, the interfaces contained in the routing tables, and the routing protocol parameters that control the information in the routing tables.
<b>Options</b>	<i>routing-instance-name</i> —Name of the routing instance.
<b>Required Privilege Level</b>	<code>secret</code> —To view this statement in the configuration. <code>secret-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>



## search

---

<b>Syntax</b>	<pre> search {   admin-search {     distinguished-name <i>distinguished-name</i>;     password <i>password</i>;   }   search-filter <i>filter-name</i>; } </pre>
<b>Hierarchy Level</b>	[edit access ldap-options], [edit access profile <i>profile-name</i> ldap-options]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify that a search is used to get a user's LDAP distinguished name (DN). The search is performed based on the search filter and the part typed in by the user during authentication.
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Security Configuration Guide</i></li> </ul>

## search-filter

---

<b>Syntax</b>	<code>search-filter <i>filter-name</i>;</code>
<b>Hierarchy Level</b>	[edit access ldap-options search], [edit access profile <i>profile-name</i> ldap-options search]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify that a search filter is used to find the user's LDAP distinguished name (DN). For example, a filter of <b>cn</b> specifies that the search matches a user whose common name is the username.
<b>Options</b>	<i>filter-name</i> —Name of the filter used to find the user's distinguished name.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## secondary connection (Identity Management Advanced Query)

**Syntax**    `secondary {  
          address address;  
          ca-certificate ca-certificate;  
          client-id client-id;  
          client-secret client-secret;  
          }`

**Hierarchy Level**    `[edit services user-identification identity-management connection]`

**Release Information**    Statement introduced in Junos OS Release 15.1X49-D100.

**Description**    Configure parameters that the SRX Series device uses to connect to the Juniper Identity Management Service (JIMS) secondary server and authenticate to it in order to obtain an access token. Juniper Identity Management Service requires that the SRX Series device use OAuth2 to authenticate to it before the SRX Series device is allowed to query the Juniper Identity Management Service server for user identity information. The SRX Series device must provide the Juniper Identity Management Service server with credentials, including a client ID and a client secret. If the client is authenticated—in this case the SRX Series device—it is granted an access token. (See RFC 6749.) Both the client ID and the client secret must be consistent with the API client configured on the Juniper Identity Management Service primary server.

In addition to configuring the client ID and the client secret, you configure a ca-certificate for the secondary server, if one exists. You configure the file name of the Juniper Identity Management Service's ca-certificate. The certificate enables the SRX Series device to verify the identity of Juniper Identity Management Service (JIMS) and that it is trusted for the SSL connection.

The SRX Series device always attempts to connect to the primary server first. When one or more queries to the primary server fails, the system falls back to the secondary server.

The advanced user identity query feature allows you to obtain user identity information from the Juniper Identity Management Service through queries. It allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.



**WARNING:** Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.

**Options**    `address`—IP address of the secondary server.

**ca-certificate**—File name of the ca-certificate for the secondary server. Before you configure the ca-certificate file name, the administrator of the Juniper Identity Management Services server must export the certificate and import it to the SRX Series device. The administrator must configure the complete path and file name of the certificate in regard to where it is installed on the SRX Series device, for example, '/var/db/RADIUSServerCertificate.crt'. If the ca-certificate is not configured, the SRX Series device can not verify the Juniper Identity Management Service certificate.



**NOTE:** The SRX Series device supports a self signed + BASE64 encoded X.509 cert only.

---

**client-id**—Client ID that the SRX Series provides to the Juniper Identity Management Service secondary server as part of its authentication to it. The SRX Series device must authenticate to the server to obtain an access token that allows the SRX Series device to query the server for user identity information. The client ID must be consistent with the API client configured on the Juniper Identity Management Service (JIMS) primary server.

**client-secret**—Client secret that the SRX Series provides to the Juniper Identity Management Service secondary server as part of its authentication to it. The client secret must be consistent with the API client configured on the Juniper Identity Management Service (JIMS) secondary server.

**Required Privilege  
Level**

services—To view this statement in the configuration.

services-control—To add this statement to the configuration.


**Related  
Documentation**

- *Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS*
- [connect-method on page 189](#)
- [filter on page 207](#)
- [ip-query on page 230](#)
- [port on page 255](#)
- [query-api on page 266](#)
- [authentication-entry-timeout on page 155](#)
- [batch-query on page 161](#)

## secret (Access Profile)

<b>Syntax</b>	<code>secret <i>password</i>;</code>
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> radius-server <i>server-address</i> ]
<b>Release Information</b>	Statement modified in Release 8.5 of Junos OS.
<b>Description</b>	Specify the RADIUS secret password, which is shared between the router and the RADIUS server. The device uses this secret to encrypt the user's password that is sent to the RADIUS server.
<b>Options</b>	<i>password</i> —RADIUS secret. Maximum length is 256 characters.
<b>Required Privilege Level</b>	secret—To view this statement in the configuration. secret-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Security Configuration Guide</i></li> </ul>

## securid-server

<b>Syntax</b>	<code>securid-server {     <i>server-name</i> configuration-file <i>filepath</i>; }</code>
<b>Hierarchy Level</b>	[edit access]
<b>Release Information</b>	Statement introduced in Release 9.1 of Junos OS.
<b>Description</b>	Configure SecurID server for SecurID authentication type.
<b>Options</b>	The remaining statement is explained separately.
<div style="display: flex; align-items: center;">  <div> <p><b>NOTE:</b> You can configure only one SecurID server. SecurID challenges are not yet supported.</p> </div> </div>	
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Security Configuration Guide</i></li> </ul>

## separator

---

<b>Syntax</b>	<code>separator <i>special-character</i>;</code>
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> client-name-filter <i>client-name</i> ]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	<p>Specify a character to identify where stripping of characters occurs in a client name. Stripping removes characters to the right of each instance of the specified character, plus the character itself. The stripping begins with the rightmost separator character.</p> <p>Use the <b>separator</b> statement with the <b>count</b> statement to determine which characters in a client name are stripped. If the specified number of separator characters (count) exceeds the actual number of separator characters in the client name, stripping stops at the last available separator character.</p>
<b>Options</b>	<b><i>special-character</i></b> —Character used to identify where to start the stripping of characters in a client name.
<b>Required Privilege Level</b>	<b>access</b> —To view this statement in the configuration. <b>access-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## server-certificate (Services)

---

<b>Syntax</b>	<code>server-certificate <i>server-certificate</i>;</code>
<b>Hierarchy Level</b>	[edit services ssl termination profile <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10. This statement is supported on the SRX1500, SRX5400, SRX5600, and SRX5800 devices and vSRX.
<b>Description</b>	Specify the local certificate identifier.
<b>Options</b>	<b>server-certificate</b> —Specify the name of the local certificate identifier.
<b>Required Privilege Level</b>	<b>services</b> —To view this statement in the configuration. <b>services-control</b> —To add this statement to the configuration.

## server-certificate-subject

<b>Syntax</b>	<code>server-certificate-subject <i>subject</i>;</code>
<b>Hierarchy Level</b>	[edit services unified-access-control infranet-controller <i>hostname</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Optionally specify the full subject name of the certificate that the SRX Series device should use to validate the IC Series device's server certificate.</p> <p>Use this statement when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series device.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">ca-profile (Services) on page 169</a></li> <li>• <a href="#">password (Services) on page 244</a></li> </ul>

## session-options (Access Profile)

<b>Syntax</b>	<pre>session-options {   client-group [<i>group-names</i>];   client-idle-timeout <i>minutes</i>;   client-session-timeout <i>minutes</i>; }</pre>
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Define options that control a user's session after successful authentication.
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	<p>access—To view this statement in the configuration.</p> <p>access-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Junos OS Security Configuration Guide</a></li> </ul>

## size (Services)

---

<b>Syntax</b>	<code>size size;</code>
<b>Hierarchy Level</b>	[edit services ssl traceoptions file <i>file-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10.
<b>Description</b>	Specify the maximum trace file size. This statement is supported on the SRX1500, SRX4100, SRX4200, SRX5400, SRX5600, and SRX5800 devices and vSRX.
<b>Options</b>	<b>size</b> —Specify the maximum trace file size.  <b>Range:</b> 10,240 to 1,073,741,824.
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring SSL Forward Proxy</i></li><li>• <i>Firewall User Authentication Overview</i></li></ul>

## source-address (Access LDAP)

---

<b>Syntax</b>	<code>source-address source-address;</code>
<b>Hierarchy Level</b>	[edit access ldap-server server-address], [edit access profile <i>profile-name</i> ldap-server server-address]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Configure a source address for each configured LDAP server. Each LDAP request sent to a LDAP server uses the specified source address.
<b>Options</b>	<b>source-address</b> —Valid IP address configured on one of the device interfaces.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>



## source-address (Access RADIUS)

---

<b>Syntax</b>	<code>source-address <i>source-address</i>;</code>
<b>Hierarchy Level</b>	<code>[edit access radius-server <i>server-address</i>],</code> <code>[edit access profile <i>profile-name</i> radius-server <i>server-address</i>]</code>
<b>Release Information</b>	Statement modified in Junos OS Release 8.5.
<b>Description</b>	Configure a source address for each configured RADIUS server. Each RADIUS request sent to a RADIUS server uses the specified source address.
<b>Options</b>	<i>source-address</i> —Valid IP address configured on one of the device interfaces.
<b>Required Privilege Level</b>	<code>secret</code> —To view this statement in the configuration. <code>secret-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li></ul>

## source-end-user-profile

---

<b>Syntax</b>	<code>source-end-user-profile <i>device-identity-profile-name</i>;</code>
<b>Hierarchy Level</b>	[edit security policies from-zone <i>from-zone</i> to-zone <i>to-zone</i> policy <i>policy-name</i> match]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D70.
<b>Description</b>	<p>The <b>source-end-user-profile</b> field in a security policy enables you to specify a device identity profile that identifies the traffic source based on the device from which the traffic issued. The security policy action is applied to traffic issuing from a device if the device matches the attributes specified in the profile and it matches the rest of the security policy parameters.</p> <p>The device identity profile feature provides a solution for cases in which you cannot or do not want to use the user identity to control access to network resources. The device identity feature allows you to use the identity of a device and its attributes to control access to network resources instead of the identity of the user of that device.</p> <p>You might want to control network access based on the device identity for various reasons. For example, you might allow your users to use their own devices (BYOD) to access network resources and you do not want to use captive portal authentication. Also, some companies might have older switches that do not support 802.1, or they might not have a Network Access Control (NAC) system.</p>
<b>Options</b>	<b>device-identity-profile-name</b> —Device identity profile that specifies characteristics that can apply to one or more devices.
<b>Required Privilege Level</b>	security—To view this statement in the configuration. security-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding Access Control to Network Resources Based on Device Identity Information</i></li><li>• <i>Understanding the Device Identity Attributes and Profiles for the Integrated User Firewall Device Identity Authentication Feature</i></li><li>• <i>Understanding the Device Identity Authentication Table and Its Entries</i></li></ul>

## source-identity-log (Security)

<b>Syntax</b>	source-identity-log
<b>Hierarchy Level</b>	[edit security zones security-zone <i>zone-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D60.
<b>Description</b>	<p>Specify the source-identity-log parameter as part of the configuration for a zone to enable it to trigger user identity logging when that zone is used as the source zone (from-zone) in a security policy. If a zone is configured for zone-based user identity logging and it is used as the source zone in a security policy, the system logs the user identity of any user who belongs to that zone and whose traffic matches the security policy's terms.</p> <p>A zone configured for zone-based user identity logging is reusable. That is, you can use it as the source zone in any security policy.</p> <p>For zone-based user identity logging to occur, you must have configured the session initialization (session-init) and the session termination (session-close) events as actions for the security policy.</p> <p>Zone-based user identity logging allows you to broaden the scope of users whose identities are recorded in the session log. The source-identity security policy tuple writes the user or group name to log, but it restricts application of the security policy to the specified user or user group.</p>
<b>Required Privilege Level</b>	<p>security—To view this statement in the configuration.</p> <p>security-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding How to Include User Identity Information in the Session Log File Based on the Source Zone</i></li> <li>• <i>Example: Configuring Integrated User Firewall to Write User Identity to the Session Log Based On the Source Zone</i></li> <li>• <i>Overview of Integrated User Firewall</i></li> <li>• <i>Example: Configuring Integrated User Firewall</i></li> </ul>

## ssl (Services)

```
Syntax  ssl {
    initiation {
        profile profile-name {
            actions {
                ignore-server-auth-failure;
            }
            client-certificate;
            custom-ciphers [cipher];
            enable-flow-tracing;
            enable-session-cache;
            preferred-ciphers (custom | medium | strong | weak);
            protocol-version (all | tls1 | tls11 | tls12);
            trusted-ca (all | [ca-profile] );
        }
    }
    proxy {
        global-config {
            session-cache-timeout seconds;
        }
        profile profile-name {
            actions {
                crt {
                    disable;
                    if-not-present (allow | drop);
                    ignore-hold-instruction-code;
                }
                disable-session-resumption;
                ignore-server-auth-failure;
                log {
                    all;
                    errors;
                    info;
                    sessions-allowed;
                    sessions-dropped;
                    sessions-ignored;
                    sessions-whitelisted;
                    warning;
                }
                renegotiation {
                    (allow | allow-secure | drop);
                }
            }
            custom-ciphers [cipher];
            enable-flow-tracing;
            preferred-ciphers (custom | medium | strong | weak);
            root-ca root-certificate;
            trusted-ca (all | [ca-profile] );
            whitelist [global-address-book-addresses];
        }
    }
    termination {
        profile profile-name {
```

```

    custom-ciphers [cipher];
    enable-flow-tracing;
    enable-session-cache;
    preferred-ciphers (custom | medium | strong | weak);
    protocol-version (all | tls1 | tls11 | tls12);
    server-certificate certificate-identifier;
  }
}
traceoptions {
  file {
    filename;
    files number;
    match regular-expression;
    (no-world-readable | world-readable);
    size maximum-file-size;
  }
  flag flag;
  level [brief | detail | extensive | verbose];
  no-remote-trace;
}
}

```

<b>Hierarchy Level</b>	[edit services]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10. The <b>crl</b> statement is supported from 15.1X49-D30. The <b>protocol-version</b> statement is updated to include <b>tls11</b> and <b>tls12</b> from Junos OS Release 15.1X49-D30.
<b>Description</b>	Specify the configuration for Secure Socket Layer (SSL) support service. This statement is supported on the SRX1500, SRX4100, SRX4200, SRX5400, SRX5600, and SRX5800 devices and vSRX.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring SSL Forward Proxy</i></li> <li>• <i>Firewall User Authentication Overview</i></li> </ul>

## ssl-termination-profile

---

<b>Syntax</b>	<code>ssl-termination-profile <i>profile-name</i>;</code>
<b>Hierarchy Level</b>	[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit firewall-authentication pass-through]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10.
<b>Description</b>	Specify the SSL termination profile used for SSL offloading.
<b>Options</b>	<i>profile-name</i> —Specify the name of the SSL termination profile used to the SSL offload.
<b>Required Privilege Level</b>	security—To view this statement in the configuration. security-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Security Policies Overview</i></li></ul>

## SUCCESS

---

<b>Syntax</b>	<code>success <i>string</i>;</code>
<b>Hierarchy Level</b>	[edit access firewall-authentication pass-through default-profile <i>name</i> (ftp   http   telnet) banner], [edit access firewall-authentication web-authentication]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Specify the banner (message) that users see when trying to connect using FTP, HTTP, or Telnet after successful authentication.
<b>Options</b>	<i>string</i> —Banner text. Maximum length of the message text is 250 characters. Enclose the banner text within spaces or special characters—for example, quotation marks (" ").
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## system-generated-certificate

---

<b>Syntax</b>	system-generated-certificate;
<b>Hierarchy Level</b>	[edit system services web-management https]
<b>Release Information</b>	Command introduced in Junos OS Release 11.1 for EX Series switches.
<b>Description</b>	Configure the automatically generated self-signed certificate for enabling HTTPS services.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Enabling HTTPS and XNM-SSL Services on Switches Using Self-Signed Certificates (CLI Procedure)</i></li> </ul>

## telnet (Access)

---

<b>Syntax</b>	<pre>telnet {   banner {     fail <i>string</i>;     login <i>string</i>;     success <i>string</i>;   } }</pre>
<b>Hierarchy Level</b>	[edit access firewall-authentication pass-through]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Configure banners for Telnet login prompt, successful authentication, and failed authentication.
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Security Configuration Guide</i></li> </ul>

## termination (Services)

---

<b>Syntax</b>	<pre>termination {   profile <i>profile-name</i> {     custom-ciphers [<i>cipher</i>];     enable-flow-tracing;     enable-session-cache;     preferred-ciphers (custom   medium   strong   weak);     protocol-version (all   tls1   tls11   tls12);     server-certificate <i>certificate-identifier</i>;   } }</pre>
<b>Hierarchy Level</b>	[edit services ssl]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10. The <b>protocol-version</b> statement is updated to include <b>tls11</b> and <b>tls12</b> from Junos OS Release 15.1X49-D30.
<b>Description</b>	<p>Specify the configuration for Secure Socket Layer (SSL) termination support service.</p> <p>Following types of SSL profiles are supported on SRX Series to secure connections based on the role of the SRX Series device:</p> <ul style="list-style-type: none"><li>• SSL initiation: The SRX Series device, acting as an SSL proxy client, initiates and maintains SSL sessions between itself and an SSL server. SRX device receives unencrypted data from an HTTP client, and encrypts and transmits the data as ciphertext to the SSL server.</li><li>• SSL termination: The SRX Series device, acting as an SSL proxy server, terminates the SSL session from the client and then establishing a new SSL connection to the server. The SRX Series device decrypts the data and then sends the data as un-encrypted request to the other servers (HTTP server).</li></ul> <p>The SSL proxy profile will be applied to the security policy as application services.</p>
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.



## test-only-mode

---

<b>Syntax</b>	test-only-mode (true   false):
<b>Hierarchy Level</b>	[edit services unified-access-control ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Configure the device in test-only mode to log access decisions from the IC Series device without actually enforcing the decisions. When configured in test-only mode, the SRX Series device enables all UAC traffic to go through so you can test the implementation without impeding traffic.</p> <p>Use this statement when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series device.</p>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.

## then (Security Policies)

```
Syntax  then {
        count {
            alarm {
                per-minute-threshold number;
                per-second-threshold number;
            }
        }
        deny;
        log {
            session-close;
            session-init;
        }
        permit {
            application-services {
                application-firewall {
                    rule-set rule-set-name;
                }
                application-traffic-control {
                    rule-set rule-set-name;
                }
                gprs-gtp-profile profile-name;
                gprs-sctp-profile profile-name;
                idp;
                redirect-wx | reverse-redirect-wx;
                ssl-proxy {
                    profile-name profile-name;
                }
                uac-policy {
                    captive-portal captive-portal;
                }
                utm-policy policy-name;
            }
            destination-address {
                drop-translated;
                drop-untranslated;
            }
            firewall-authentication {
                pass-through {
                    access-profile profile-name;
                    client-match user-or-group-name;
                    ssl-termination-profile profile-name;
                    web-redirect;
                    web-redirect-to-https;
                }
                user-firewall {
                    access-profile profile-name;
                    domain domain-name;
                    ssl-termination-profile profile-name;
                }
                web-authentication {
                    client-match user-or-group-name;
                }
            }
        }
    }
```

```

    }
    services-offload;
    tcp-options {
        initial-tcp-mss mss-value;
        reverse-tcp-mss mss-value;
        sequence-check-required;
        syn-check-required;
    }
    tunnel {
        ipsec-group-vpn group-vpn;
        ipsec-vpn vpn-name;
        pair-policy pair-policy;
    }
}
reject;
}

```

**Hierarchy Level** [edit security policies from-zone *zone-name* to-zone *zone-name* policy *policy-name*]

**Release Information** Statement introduced in Junos OS Release 8.5. Support for the **services-offload** option added in Junos OS Release 11.4. Support for the **ssl-termination-profile** and **web-redirect-to-https** options added in Junos OS Release 12.1X44-D10. Support for the **user-firewall** option added in Junos OS Release 12.1X45-D10. Support for the **initial-tcp-mss** and **reverse-tcp-mss** options added in Junos OS Release 12.3X48-D20.

**Description** Specify the policy action to be performed when packets match the defined criteria.

**Options** The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** security—To view this statement in the configuration.  
security-control—To add this statement to the configuration.

**Related Documentation**

- *Security Policies Overview*
- *Understanding Security Policy Rules*
- *Understanding Security Policy Elements*

## timeout (Access LDAP)

---

<b>Syntax</b>	<code>timeout seconds;</code>
<b>Hierarchy Level</b>	<code>[edit access ldap-server server-address]</code> <code>[edit access profile profile-name ldap-server server-address]</code>
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Configure the amount of time that the local device waits to receive a response from an LDAP server.
<b>Options</b>	<b>seconds</b> —Amount of time to wait. <b>Range:</b> 1 through 90 seconds <b>Default:</b> 3 seconds
<b>Required Privilege Level</b>	<b>access</b> —To view this statement in the configuration. <b>access-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## timeout (Access RADIUS)

---

<b>Syntax</b>	<code>timeout seconds;</code>
<b>Hierarchy Level</b>	<code>[edit access radius-server server-address]</code> <code>[edit access profile profile-name radius-server server-address]</code>
<b>Release Information</b>	Statement modified in Release 8.5 of Junos OS.
<b>Description</b>	Configure the amount of time that the local device waits to receive a response from a RADIUS server.
<b>Options</b>	<b>seconds</b> —Amount of time to wait. <b>Range:</b> 1 through 90 seconds <b>Default:</b> 3 seconds
<b>Required Privilege Level</b>	<b>secret</b> —To view this statement in the configuration. <b>secret-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li></ul>

## timeout (Services)

---

<b>Syntax</b>	<code>timeout seconds;</code>
<b>Hierarchy Level</b>	<code>[edit services unified-access-control ]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Specify the value, in seconds, that the SRX Series device should wait to get a heartbeat response from an IC Series UAC Appliance (default is 300). If the SRX Series device does not receive it in the specified time, it takes the action specified by the <b>timeout-action</b> configuration statement. It also tries again to make a connection to the IC Series appliance. After the second failed attempt, the SRX Series device fails over to the next IC Series appliance in the cluster. The SRX Series device continues trying to reach IC Series appliances in the cluster until a connection is established.</p> <p>Use this statement when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series appliance. When working with a cluster of IC Series appliances, the Junos OS Enforcer connects to one at a time, failing over to other IC Series appliances in the cluster as required.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">interval (Services) on page 226</a></li> <li>• <a href="#">timeout-action on page 298</a></li> </ul>

## timeout-action

---

<b>Syntax</b>	timeout-action (close   no-change   open):
<b>Hierarchy Level</b>	[edit services unified-access-control ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Specify what the SRX Series device should do when a timeout occurs and the device cannot connect to an Infranet Enforcer.</p> <p>Use this statement when you are configuring the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series UAC Appliance.</p>
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>close</b>—Close existing sessions and block any further traffic. This is the default option.</li><li>• <b>no-change</b>—Preserve existing sessions and require authentication for new sessions.</li><li>• <b>open</b>—Preserve existing sessions and allow new sessions access.</li></ul>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">interval (Services) on page 226</a></li><li>• <a href="#">timeout (Services) on page 297</a></li></ul>

## tls-min-version

<b>Syntax</b>	tls-min-version (v1.1   v1.2);
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> ldap-server <i>ip-address</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D70.
<b>Description</b>	Configure Transport Layer Security (TLS) version to limit the lowest supported versions of TLS that are enabled for SSL connections.
<b>Options</b>	<p><b>v1.1</b>—Accept TLS version 1.1. This enhanced version of TLS provides protection against cipher-block chaining (CBC) attacks.</p> <p><b>v1.2</b> —Accept TLS version 1.2. This enhanced version of TLS provides improved flexibility for negotiation of cryptographic algorithms.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Firewall User Authentication Overview</i></li> <li>• <i>Example: Configuring Integrated User Firewall</i></li> </ul>

## tls-peer-name

<b>Syntax</b>	tls-peer-name <i>peer-host-name</i> ;
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> ldap-server <i>ip-address</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D70.
<b>Description</b>	Configure the peer hostname to be authenticated.
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Firewall User Authentication Overview</i></li> <li>• <i>Obtaining Username and Role Information Through Firewall Authentication</i></li> <li>• <i>LDAP Functionality in Integrated User Firewall</i></li> </ul>

## tls-timeout

---

<b>Syntax</b>	tls-timeout <i>seconds</i> ;
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> ldap-server <i>ip-address</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D70.
<b>Description</b>	<p>Specify timeout value on the Transport Layer Security (TLS) handshake. The TLS handshake is responsible for the encryption keys exchange necessary to establish secure sessions between client and server.</p> <p><b>Range:</b> 3 through 90 seconds.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li><li>• <i>Obtaining Username and Role Information Through Firewall Authentication</i></li><li>• <i>LDAP Functionality in Integrated User Firewall</i></li></ul>



## tls-type

---


<b>Syntax</b>	tls-type { start-tls; }
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> ldap-server <i>ip-address</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D70.
<b>Description</b>	Configure Lightweight Directory Access Protocol (LDAP) over Secure Sockets Layer/Transport Layer Security (SSL/TLS) for secure communication. Transport Layer Security StartTLS extension for LDAP is used for the firewall user authentication and the integrated user firewall authentication for obtaining username and role information through firewall authentication. StartTLS allows protocol data transfers between the LDAP server and client over the TLS layer after successful negotiation between the peers. StartTLS upgrades an existing insecure LDAP connection to a secure Secure Sockets Layer/Transport Layer Security (SSL/TLS) connection.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>start-tls</b>—Configure LDAP over StartTLS. The StartTLS communications occurs over TCP port 389.</li> </ul>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Firewall User Authentication Overview</i></li> <li>• <i>Obtaining Username and Role Information Through Firewall Authentication</i></li> <li>• <i>LDAP Functionality in Integrated User Firewall</i></li> </ul>

## token-api (Services User Identification)

---

<b>Syntax</b>	<code>token-api <i>token-api</i></code>
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass user-query]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Configure the token API that is used in generating the URL for acquiring an access token. The token API is combined with the connection method and the IP address of the ClearPass webserver to produce the complete URL used for acquiring an access token.</p> <p>For example, if the token API is oauth, the connection method is HTTPS, and the IP address of the ClearPass webserver is 192.0.2.199, the complete URL for acquiring an access token would be https://192.0.2.199/api/oauth. This is a required parameter. There is no default value.</p> <p>The SRX Series device user query function requires an access token to be able to query the ClearPass webserver. If the user query function is configured, the SRX Series device can request from the ClearPass webserver user authentication and identity information for an individual user.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

## token-api

<b>Syntax</b>	<code>token-api token-api;</code>
<b>Hierarchy Level</b>	[edit services user-identification identity-management connection]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D100.
<b>Description</b>	<p>The path of the URL for acquiring the access token for OAuth2 authentication (RFC 6749). The Juniper Identity Management Service server requires that the SRX Series device authenticate to it using OAuth2. The SRX Series device uses the Client Credentials grant type for this purpose.</p> <p>The following example shows the default tokenAPI, <b>oauth_token/oauth</b>, combined with the connection method, <b>https</b>, and the Juniper Identity Management Service server IP address placeholder to create the complete URL:</p> <p><b>https://JIMS/oauth_token/oauth.</b></p> <p>The advanced user identity query feature, to which this statement belongs, allows you to obtain user identity information from the Juniper Identity Management Service through queries. It allows you to provision users locally and have their authentication information made available to other sites in your network for policy enforcement and reporting.</p>
	<div>  <p><b>WARNING:</b> Before you use this feature, you must disable active-directory-access and authentication-source options under the user-identification hierarchy. You cannot commit this configuration if active directory authentication or the ClearPass query and webapi functions are configured and committed.</p> </div>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</i></li> <li>• <a href="#">address on page 143</a></li> <li>• <a href="#">authentication-entry-timeout on page 155</a></li> <li>• <a href="#">batch-query on page 161</a></li> <li>• <a href="#">ca-certificate on page 166</a></li> <li>• <a href="#">client-id on page 174</a></li> <li>• <a href="#">ip-query on page 230</a></li> </ul>

- [port on page 255](#)
- [primary on page 260](#)
- [query-api on page 266](#)

## to-zone (Security Policies)

```

Syntax  to-zone zone-name {
        policy policy-name {
            description description;
            match {
                application {
                    [application];
                    any;
                }
                destination-address {
                    [address];
                    any;
                    any-ipv4;
                    any-ipv6;
                }
                source-address {
                    [address];
                    any;
                    any-ipv4;
                    any-ipv6;
                }
                source-identity {
                    [role-name];
                    any;
                    authenticated-user;
                    unauthenticated-user;
                    unknown-user;
                }
            }
            scheduler-name scheduler-name;
            then {
                count {
                    alarm {
                        per-minute-threshold number;
                        per-second-threshold number;
                    }
                }
                deny;
                log {
                    session-close;
                    session-init;
                }
                permit {
                    application-services {
                        application-firewall {
                            rule-set rule-set-name;
                        }
                    }
                    application-traffic-control {
                        rule-set rule-set-name;
                    }
                    gprs-gtp-profile profile-name;
                    gprs-sctp-profile profile-name;
                    idp;
                }
            }
        }
    }

```

```

    redirect-wx | reverse-redirect-wx;
    ssl-proxy {
        profile-name profile-name;
    }
    uac-policy {
        captive-portal captive-portal;
    }
    utm-policy policy-name;
}
destination-address {
    drop-translated;
    drop-untranslated;
}
firewall-authentication {
    pass-through {
        access-profile profile-name;
        client-match user-or-group-name;
        ssl-termination-profile profile-name;
        web-redirect;
        web-redirect-to-https;
    }
    web-authentication {
        client-match user-or-group-name;
    }
}
services-offload;
tcp-options {
    sequence-check-required;
    syn-check-required;
}
tunnel {
    ipsec-group-vpn group-vpn;
    ipsec-vpn vpn-name;
    pair-policy pair-policy;
}
}
reject;
}
}

```

**Hierarchy Level** [edit security policies from-zone *zone-name*]

**Release Information** Statement introduced in Junos OS Release 8.5. Support for the **services-offload** and **junos-host** options added in Junos OS Release 11.4. Support for the **source-identity** option added in Junos OS Release 12.1. Support for the **ssl-termination-profile** and **web-redirect-to-https** options added in Junos OS Release 12.1X44-D10.

**Description** Specify a destination zone to be associated with the security policy.

- Options**
- **zone-name**—Name of the destination zone object.
  - **junos-host**—Default security zone for self-traffic of the device.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege** security—To view this statement in the configuration.  
**Level** security-control—To add this statement to the configuration.

- Related Documentation**
- *Security Policies Overview*
  - *Understanding Security Policy Rules*
  - *Understanding Security Policy Elements*

## traceoptions (Access)

<b>Syntax</b>	<pre> traceoptions {     file <i>filename</i> {         files <i>number</i>;         match <i>regular-expression</i>;         size <i>maximum-file-size</i>;         &lt;world-readable   no-world-readable&gt;;     }     flag <i>flag</i>; } </pre>
<b>Hierarchy Level</b>	[edit access firewall-authentication]
<b>Release Information</b>	Statement introduced in Release 8.5 of Junos OS.
<b>Description</b>	Define Routing Engine firewall authentication tracing options.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>file <i>filename</i></b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log</code>.</li> <li>• <b>files <i>number</i></b>—(Optional) Maximum number of trace files. When a trace file named <b><i>trace-file</i></b> reaches its maximum size, it is renamed to <b><i>trace-file.0</i></b>, then <b><i>trace-file.1</i></b>, and so on, until the maximum number of trace files is reached. The oldest archived file is overwritten.</li> <li>• If you specify a maximum number of files, you also must specify a maximum file size with the size option and a filename.</li> </ul> <p><b>Range:</b> 2 through 1000 files  <b>Default:</b> 10 files</p> <ul style="list-style-type: none"> <li>• <b>match <i>regular-expression</i></b>—(Optional) Refine the output to include lines that contain the regular expression.</li> <li>• <b>size <i>maximum-file-size</i></b>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b><i>trace-file</i></b> reaches this size, it is renamed <b><i>trace-file.0</i></b>. When the <b><i>trace-file</i></b> again reaches its maximum size, <b><i>trace-file.0</i></b> is renamed <b><i>trace-file.1</i></b> and <b><i>trace-file</i></b> is renamed <b><i>trace-file.0</i></b>. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</li> <li>• If you specify a maximum file size, you also must specify a maximum number of trace files with the files option and filename.</li> </ul> <p><b>Syntax:</b> <i>x k</i> to specify KB, <i>x m</i> to specify MB, or <i>x g</i> to specify GB  <b>Range:</b> 10 KB through 1 GB  <b>Default:</b> 128 KB</p>



- **world-readable | no-world-readable**—(Optional) By default, log files can be accessed only by the user who configures the tracing operation. The **world-readable** option enables any user to read the file. To explicitly set the default behavior, use the **no-world-readable** option.
- **flag *flag***—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. You can include the following flags.
  - **all**—All tracing operations
  - **authentication**—Trace authentication events
  - **configuration**—Trace configuration events
  - **setup**—Trace setup of firewall authentication service

<b>Required Privilege</b>	trace—To view this statement in the configuration.
<b>Level</b>	trace-control—To add this statement to the configuration.

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li></ul>
------------------------------	------------------------------------------------------------------------------------------------

## traceoptions (Active Directory Access)

---

**Syntax**

```
traceoptions {  
  file filename ;  
  flag {  
    active-directory-authentication;  
    all;  
    configuration;  
    db;  
    ip-user-mapping;  
    ip-user-probe;  
    ipc;  
    user-group-mapping;  
    wmic;  
  }  
  level {  
    all  
    error  
    info  
    notice  
    verbose  
    warning  
  }  
  no-remote-trace;  
}
```

**Hierarchy Level** [edit services user-identification active-directory-access]

**Release Information** Statement introduced in Junos OS Release 12.1X47-D10.

**Description** Define Active Directory trace options for the integrated user firewall feature.

**Options** **file *filename***—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory **/var/log**.

**flag**—Trace the operation or operations to perform on the integrated user firewall. To specify more than one trace operation, include multiple flag statements.

**active-directory-authentication**—Trace the building of and modifications to the Active Directory authentication table.

**all**—Trace everything.

**configuration**—Trace configuration events.

**db**—Trace the database.

**ip-user-mapping**—Trace the ip-user-mapping module.

**ip-user-probe**—Trace PC client probing.

**ipc**—Trace communication events with the Packet Forwarding Engine.

**user-group-mapping**—Trace the process of getting user-to-group-mapping.

**wmic**—Trace the Windows Management Instrumentation Client process.

**level**—Level of trace operation to perform.

**all**—Match all levels.

**error**—Match error conditions.

**info**—Match informational messages.

**notice**—Match conditions that should be handled specially.

**verbose**—Match verbose messages.

**warning**—Match warning messages.

**no-remote-trace**—Disallow tracing from a remote device.

<b>Required Privilege</b>	security—To view this statement in the configuration.
<b>Level</b>	security-control—To add this statement to the configuration.

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">active-directory-access on page 139</a></li><li>• <a href="#">user-identification (Services) on page 317</a></li><li>• <i>Overview of Integrated User Firewall</i></li></ul>
------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## traceoptions (Services SSL)

---

**Syntax**    traceoptions {  
              file {  
                  filename;  
                  files number;  
                  match regular-expression;  
                  size maximum-file-size;  
                  (world-readable | no-world-readable);  
              }  
              flag flag;  
              level [brief | detail | extensive | verbose];  
              no-remote-trace;  
          }

**Hierarchy Level**    [edit services ssl]

**Release Information**    Statement introduced in Junos OS Release 12.1X44-D10. This statement is supported on the SRX1500, SRX4100, SRX4200, SRX5400, SRX5600, and SRX5800 devices and vSRX.

**Description**    Specify the trace file information.

Debug tracing on both Routing Engine and the Packet Forwarding Engine can be enabled for SSL proxy by using **[edit services ssl traceoptions]** command.

- Options**
- **file-name**—Specify the name of file in which to write trace information.
  - **files**—Specify the maximum number of trace files. Range: 2 to 1000.
  - **match**—Specify the regular expression for lines to be logged. This statement is supported on the SRX1500, SRX4100, SRX4200, SRX5400, SRX5600, and SRX5800 devices and vSRX.
  - **no-world-readable size**—Do not allow any user to read the log file.
  - **size**—Specify the maximum trace file size. Range: 10,240 to 1,073,741,824.
  - **world-readable**—Allow any user to read the log file.
  - **flag**—Trace operation to perform. To specify more than one trace operation, include multiple **flag** statements.
    - **all**—Trace all the parameters.
    - **cli-configuration**—Trace CLI configuration events.
    - **initiation**—Trace initiation service events.
    - **proxy**—Trace proxy service events.
    - **selected-profile**—Trace events for profiles with **enable-flow-tracing** set.
    - **termination**—Trace termination service events.

- **level**—Set the level of debugging the output option.
  - **brief**—Match brief messages.
  - **detail**—Match detail messages.
  - **extensive**—Match extensive messages.
  - **verbose**—Match verbose messages.
- **no-remote-trace**—Set remote tracing as disabled.

**Required Privilege Level** services—To view this statement in the configuration.  
 services-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring SSL Forward Proxy*
- *Firewall User Authentication Overview*

## traceoptions (Services User Identification)

**Syntax**

```
traceoptions {
    file {
        filename;
        files number;
        match regular-expression;
        size maximum-file-size;
        (world-readable | no-world-readable);
    }
    flag flag;
    level level ;
    no-remote-trace;
}
```

**Hierarchy Level** [edit services user-identification authentication-source aruba-clearpass]

**Release Information** Statement introduced in Junos OS Release 12.3X48-D30.

**Description** Specify the name of the trace log file and its characteristics. Messages about the behavior of the authentication source are written to this log file. Aruba ClearPass Policy Manager (CPPM) is the authentication source for the SRX Series device integrated ClearPass authentication and enforcement feature.

**Required Privilege Level** services—To view this statement in the configuration.  
 services-control—To add this statement to the configuration.

## trusted-ca (Services)

---

<b>Syntax</b>	trusted-ca (all   [ <i>ca-profile</i> ] );
<b>Hierarchy Level</b>	[edit services ssl proxy profile <i>profile-name</i> ] [edit services ssl termination profile <i>profile-name</i> ] [edit services ssl initiation profile <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10.
<b>Description</b>	Specify the list of trusted certificate authority profiles. This statement is supported on the SRX1500, SRX5400, SRX5600, and SRX5800 devices, and vSRX.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>trusted-ca-name</i>—Specify the certificate authority profile name.</li><li>• <b>all</b>—Select all certificate authority profiles.</li></ul>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring SSL Forward Proxy</i></li><li>• <i>Firewall User Authentication Overview</i></li></ul>

## user-group-mapping

```
Syntax  user-group-mapping {
        ldap {
            address ip-address {
                port port;
            }
            authentication-algorithm {
                simple;
            }
            base base;
            ssl;
            user username {
                password password;
            }
        }
    }
```

**Hierarchy Level** [edit services user-identification active-directory-access domain]

**Release Information** Statement introduced in Junos OS Release 12.1X47-D10.

**Description** Configure the SRX Series device to connect to an LDAP server, so that the server can provide the SRX Series with user-to-group mappings. These mappings are used to implement the integrated user firewall feature. The domain controller acts as the LDAP server in typical customer scenarios.

Most of this statement is optional, because the default communication method is LDAP and most arguments have default values. Only the LDAP keyword and the base are required.

**Options** **ldap**—Required. LDAP is the protocol used to access the LDAP server to get user-to-group mappings.

**address *ip-address***—Optional. Specify the IP address of the LDAP server. If no address is specified, the system uses one of the configured Active Directory domain controllers.

**port *port***—Optional. Specify the port number of the LDAP server. If no port number is specified, the system uses port 389 for plaintext or port 636 for encrypted text.

**authentication-algorithm**—Optional. Specify the algorithm used while the SRX Series communicates with the LDAP server. The default method is Kerberos.

**simple**—Configure simple (plaintext) authentication method.

**base *base***—Required. LDAP base distinguished name (DN).

**ssl**—Optional. Enable Secure Sockets Layer (SSL) to ensure secure transmission with the LDAP server. Disabled by default, which means that the password is sent in plaintext.

**user *username***—Optional. Username of the LDAP account. If no username is specified, the system will use the configured domain controller's username.

**password *password***—Optional. Specify the password for the account. If no password is specified, the system uses the configured domain controller's password.

<b>Required Privilege Level</b>	security—To view this statement in the configuration. security-control—To add this statement to the configuration.
---------------------------------	-----------------------------------------------------------------------------------------------------------------------

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">active-directory-access on page 139</a></li><li>• <a href="#">clear services user-identification active-directory-access on page 338</a></li><li>• <a href="#">show services user-identification active-directory-access statistics on page 382</a></li><li>• <a href="#">show services user-identification active-directory-access user-group-mapping on page 385</a></li><li>• <a href="#">traceoptions (Active Directory Access) on page 310</a></li><li>• <a href="#">user-identification (Services) on page 317</a></li><li>• <i>LDAP Functionality in Integrated User Firewall</i></li></ul>
------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



## user-identification (Services)

```

Syntax  user-identification {
    active-directory-access {
        domain domain-name {
            user username;
            password password;
            domain-controller domain-controller-name {
                address domain-controller-address;
            }
        }
        ip-user-mapping {
            discovery-method {
                wmi {
                    event-log-scanning-interval seconds;
                    initial-event-log-timespan hours;
                }
            }
        }
        user-group-mapping {
            ldap {
                address ip-address {
                    port port;
                }
                authentication-algorithm {
                    simple;
                }
                base base;
                ssl;
                user username {
                    password password;
                }
            }
        }
    }
    authentication-entry-timeout minutes;
    filter {
        include address;
        exclude address;
    }
    no-on-demand-probe;
    wmi-timeout seconds;
    traceoptions {
        file file;
        flag {
            active-directory-authentication;
            all;
            configuration;
            db;
            ip-user-mapping;
            ip-user-probe;
            ipc;
            user-group-mapping;
            wmic;
        }
    }
}

```

```
level {  
  all;  
  error;  
  info;  
  notice;  
  verbose;  
  warning;  
}  
no-remote-trace;  
}  
}
```

**Hierarchy Level** [edit services]

**Release Information** Statement introduced in Junos OS Release 12.1X47-D10.

**Description** Configure the integrated user firewall feature, including access to the Active Directory domain and domain controller, IP address-to-user mapping, and user-to-group mapping. One or two Active Directories are allowed under one domain. The IP address-to-user mapping and user-to-group mapping are configured per domain.

**Options** **authentication-entry-timeout *minutes***—Timeout interval starting from the Active Directory/domain controller login time, the last active session, or the last successful probe. A setting of 0 means the authentication does not need a timeout. We recommend that you configure a setting of 0 when you disable on-demand-probe to prevent someone from accessing the Internet without logging in again.

**Range:** 10 through 1440 minutes

**Default:** 30 minutes

**filter**—Optional. Range of IP addresses that needs to be monitored or not monitored.

**include *address***—Include IP address or range. Maximum of 20 addresses.

**exclude *address***—Exclude IP address or range. Maximum of 20 addresses.

**no-on-demand-probe**—Do not use traffic to discover user. Default is disabled.

**wmi-timeout *seconds***—Optional. Configures the number of seconds that the domain PC has to respond to the SRX Series device's query through WMI/DCOM.

- If the PC responds within that timeframe to the WMI query, the SRX creates an authentication entry for this PC.
- If the PC does not respond within that timeframe, the WMI query failed. In the case of a failed query, if the SRX had an authentication entry about the queried PC before the WMI query, that authentication entry is deleted. If the SRX had no authentication entry before the WMI query, the SRX does not create an authentication entry.

**Range:** 3 through 120 seconds

**Default:** 10 seconds

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** security—To view this statement in the configuration.  
security-control—To add this statement to the configuration.

**Related Documentation**

- [active-directory-access on page 139](#)
- [traceoptions \(Active Directory Access\) on page 310](#)

## webapi (System Services)

---

**Syntax**

```
webapi {
  client ip-address;
  (
    http {
      port port-number;
    }
    https {
      certificate certificate-filename;
      certificate-key local-certificate-key;
      default-certificate
        pki-local-certificate;
      port port-number;
    }
    user {
      name;
      password password;
    }
    debug-log filename;
    debug-level level;
  }
}
```

**Hierarchy Level** [edit system services]

**Release Information** Statement introduced in Junos OS Release 12.3X48-D30.

**Description** Configure the Web API function daemon (webapi) component of the integrated ClearPass authentication and enforcement feature. The Web API daemon acts as a HTTP or HTTPS server. The SRX Series device exposes to the Aruba ClearPass Policy Manager (CPPM) the Web API that allows the CPPM, as a client, to send POST request messages to it that provide the SRX Series device with user authentication and identity information. The CPPM serves as the user authentication source for the SRX Series device.

The Web API function (webapi) facilitates efficient transmission of user authentication and identity information from the CPPM to the SRX Series device. The CPPM, which is the client in this relationship, initiates a session with the SRX Series device Web API daemon, which is the server in this relationship. However, the CPPM can do this only if you have configured the Web API function on the SRX Series device. For security reasons, the Web API daemon is not enabled by default.

The configuring statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** security—To view this statement in the configuration.  
security-control—To add this statement to the configuration.

## webapi-clear-text (Security)

---

<b>Syntax</b>	web-api-cleartext
<b>Hierarchy Level</b>	[edit security zones security-zone <i>zone</i> host-inbound-traffic system-services]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Enable the Web API (webapi) service over HTTP host inbound traffic on TCP port 8080 for unencrypted data.
<b>Required Privilege Level</b>	security—To view this statement in the configuration. security-control—To add this statement to the configuration.

## webapi-ssl (Security)

---

<b>Syntax</b>	webapi-ssl
<b>Hierarchy Level</b>	[edit security zones security-zone <i>zone</i> host-inbound-traffic system-services]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Enable the Web API service over HTTPS host inbound traffic on TCP port 8443.
<b>Required Privilege Level</b>	security—To view this statement in the configuration. security-control—To add this statement to the configuration.

## web-authentication

---

<b>Syntax</b>	<pre>web-authentication {   client-match <i>user-or-group-name</i>; }</pre>
<b>Hierarchy Level</b>	[edit security policies from-zone <i>zone-name</i> to-zone <i>zone-name</i> policy <i>policy-name</i> then permit firewall-authentication]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5. HTTPS for Web authentication is supported on SRX5400, SRX5600, and SRX5800 devices starting from Junos OS Release 12.1X44-D10 and on vSRX, SRX300, SRX320, SRX340, SRX345, SRX550M, and SRX1500 Services Gateways starting from Junos OS Release 15.1X49-D40.
<b>Description</b>	Specify that the policy allows access to users who have previously been authenticated by Web authentication. Web authentication must be enabled on one of the addresses on the interface to which the HTTP or HTTPS request is redirected.
<b>Options</b>	<b>client-match <i>user-or-group</i></b> —(Optional) Username or user group name.
<b>Required Privilege Level</b>	<b>security</b> —To view this statement in the configuration. <b>security-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding User Role Firewalls</i></li></ul>

## web-authentication (Access)

<b>Syntax</b>	<pre>web-authentication {   banner {     success <i>string</i>;   }   default-profile <i>profile-name</i>;   timeout <i>seconds</i>; }</pre>
<b>Hierarchy Level</b>	[edit access firewall-authentication]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.5.</p> <p>HTTPS for Web authentication is supported on SRX5400, SRX5600, and SRX5800 devices starting from Junos OS Release 12.1X44-D10 and on vSRX, SRX300, SRX320, SRX340, SRX345, SRX550M, and SRX1500 Services Gateways starting from Junos OS Release 15.1X49-D40.</p> <p>Option <b>timeout</b> introduced in Junos OS Release 15.1X49-D130.</p>
<b>Description</b>	<p>Specify that users go through the Web authentication process. The user uses HTTP or HTTPS to access an IP address on the device that is enabled for Web authentication. In this scenario, the user does not use HTTP or HTTPS to access the IP address of the protected resource. The user is prompted for a username and password, which are verified by the device. Subsequent traffic from the user or host to the protected resource is allowed or denied based on the results of this authentication. This method of authentication differs from pass-through authentication in that users need to access the protected resource directly after accessing the Web authentication IP address and being authenticated.</p>
<b>Options</b>	<p><b>timeout <i>seconds</i></b>—Specify the <b>timeout</b> option in seconds. If you do not specify a timeout value, and if the web authentication process takes more than 3 seconds, your browser may display <b>invalid username and password</b>, even though the username and password is correct. For example, when you type a username and password in a browser for authentication, SRX Series device checks your account in the database, and after 3 seconds your web browser displays a message <b>invalid username and password</b>. However, after 10 seconds, SRX Series device receives a response from the database that the user authentication is successful, but SRX Series device could not notify you about successful authentication, due to 3 seconds timeout value. If you configure the timeout value from 5 through 60 seconds, then the browser waits for the SRX Series device to respond for the specified time.</p> <p><b>Default:</b> 3 seconds</p> <p><b>Range:</b> 5 through 60 seconds</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>access—To view this statement in the configuration.</p> <p>access-control—To add this statement to the configuration.</p>

**Related Documentation** • *Firewall User Authentication Overview*

---

## web-authentication (Interfaces)

---

<b>Syntax</b>	<pre>web-authentication {     http;     https;     redirect-to-https; }</pre>
<b>Hierarchy Level</b>	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family-name</i> address   <i>address</i> ]</pre>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2. Support for <b>https</b> and <b>redirect-to-https</b> introduced for SRX5400, SRX5600, and SRX5800 Services Gateways starting from Junos OS Release 12.1X44-D10 and on vSRX, SRX300, SRX320, SRX340, SRX345, SRX550, and SRX1500 Services Gateways starting from Junos OS Release 15.1X49-D40.
<b>Description</b>	Enable the Web authentication process for firewall user authentication.
<b>Options</b>	<b>http</b> —Enable HTTP service.  <b>https</b> —Enable authentication through HTTPS.  <b>redirect-to-https</b> —Redirect Web authentication to HTTPS.
<b>Required Privilege Level</b>	<b>interface</b> —To view this statement in the configuration. <b>interface-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	• <i>Understanding Interfaces</i>



## web-management (System Services)

```
Syntax  web-management {
        http {
            interfaces interface-names ;
            port port;
        }
        https {
            interfaces interface-names;
            local-certificate name;
            pki-local-certificate name;
            system-generated-certificate name;
            port port;
        }
        management url management url;
        session {
            idle-timeout minutes;
            session-limit number;
        }
        traceoptions {
            file {
                filename;
                files number;
                match regular-expression;
                size maximum-file-size;
                (no-world-readable | world-readable);
            }
            flag flag;
            level level;
            no-remote-trace;
        }
    }
```

**Hierarchy Level** [edit system services]

**Release Information** Statement introduced in Junos OS Release 9.0.  
Support for **https** introduced for SRX5400, SRX5600, and SRX5800 devices starting from Junos OS Release 12.1X44-D10 and on vSRX, SRX300, SRX320, SRX340, SRX345, SRX550M, and SRX1500 devices starting from Junos OS Release 15.1X49-D40.

**Description** Configure settings for HTTP or HTTPS access. HTTP access allows management of the device using the J-Web interface. HTTPS access allows secure management of the device using the J-Web interface. With HTTPS access, communication is encrypted between your browser and the webserver for your device.



**NOTE:** On SRX340 and SRX345 devices, the factory-default configuration has a generic HTTP configuration. To use ge and fxp0 ports as management ports, you must use the set system services web-management http command. The Web management HTTP and HTTPS interfaces are changed to fxp0.0 and from ge-0/0/1.0 through ge-0/0/7.0.

**Options**    **control**—Disable the SBC process.

- **max-threads**—Maximum simultaneous threads to handle requests.

**Range:** 0 through 16

**http**—Configure HTTP.

- **interface** *[value]*—Interface value that accepts HTTP access.
- **port** *number*—TCP port for incoming HTTP connections.

**Range:** 1 through 65,535

**https**—Configure HTTPS.

- **interface** *[value]*—Interface value that accept HTTP access.
  - **port** *number*—TCP port for incoming HTTP connections.
- Range:** 1 through 65,535
- **local-certificate**—X.509 certificate to use from the configuration.
  - **pki-local-certificate**—X.509 certificate to use from the PKI local store.
  - **system-generated-certificate**—X.509 certificate generated automatically by the system.

**management url** *management url*—URL path for Web management access.

**session**—Configure the Web-management session.

- **idle-timeout** *minutes*—Default timeout of Web-management sessions in minutes.
- **session-limit** *number*—Maximum number of Web-management sessions to allow.

**traceoptions**—Set the trace options.

- **file**—Configure the trace file information.
  - *filename*—Name of the file to receive the output of the tracing operation. Enclose the name in quotation marks. All files are placed in the directory */var/log*. By default, the name of the file is the name of the process being traced.
  - **files** *number*—Maximum number of trace files. When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**, then **trace-file.1**, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum number of files, you also must specify a maximum file size with the **size** *maximum file-size* option.

**Range:** 2 through 1000 files

**Default:** 10 files

- **match *regular-expression***—Refine the output to include lines that contain the regular expression.
- **size *maximum-file-size***—Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB).

**Range:** 10 KB through 1 GB

**Default:** 128 KB

If you specify a maximum file size, you also must specify a maximum number of trace files with the **files *number*** option.

- **(world-readable | no-world-readable)**— By default, log files can be accessed only by the user who configures the tracing operation. The **world-readable** option enables any user to read the file. To explicitly set the default behavior, use the **no-world-readable** option.
- **flag *flag***—Specify which tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements. You can include the following flags.
  - **all**—Trace all areas.
  - **configuration**—Trace configuration.
  - **dynamic-vpn**—Trace dynamic VPN events.
  - **init**—Trace the daemon init process.
  - **mgd**—Trace MGD requests.
  - **webauth**—Trace Web authentication requests.
- **level *level*** —Specify the level of debugging output.
  - **all**—Match all levels.
  - **error**—Match error conditions.
  - **info**—Match informational messages.
  - **notice**—Match conditions that should be handled specially.
  - **verbose**—Match verbose messages.
  - **warning**—Match warning messages.
- **no-remote-trace**—Disable remote tracing.

<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
---------------------------------	-------------------------------------------------------------------------------------------------------------------

- Related Documentation**
- *Firewall User Authentication Overview*
  - *Dynamic VPN Overview*

## web-server (Services)

---

<b>Syntax</b>	<code>web-server server-name;</code>
<b>Hierarchy Level</b>	[edit services user-identification authentication-source aruba-clearpass user-query]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Specify the name of the webserver configuration on the SRX Series device used for the user query integrated ClearPass authentication and enforcement function. The webserver is the ClearPass server to which the SRX Series device connects to request authentication and identity information for an individual user.</p> <p>When information for the individual user is not posted to the SRX Series device by ClearPass through Web API POST request messages, the SRX Series device can request this information from the ClearPass Policy Manager (CPPM) under certain circumstances. You must enable the user query function by configuring it.</p>
<b>Required Privilege Level</b>	<p>services—To view this statement in the configuration.</p> <p>services-control—To add this statement to the configuration.</p>

## whitelist (Services)

<b>Syntax</b>	<code>whitelist [global-address-book-addresses];</code>
<b>Hierarchy Level</b>	<code>[edit services ssl proxy profile <i>profile-name</i>]</code> <code>[edit services ssl termination profile <i>profile-name</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1X44-D10.
<b>Description</b>	<p>Specify the addresses exempted from the SSL proxy. This statement is supported on the SRX1500, SRX4100, SRX4200, SRX5400, SRX5600, and SRX5800 devices and vSRX.</p> <p>You can selectively bypass SSL proxy processing for some sessions by configuring a whitelist. Typically, you might configure the whitelist to include trusted servers or domains with which you are very familiar. Whitelists include addresses that you want to exempt from undergoing SSL proxy processing.</p> <p>To configure the whitelist, you need to specify the domain that you want to exempt in an address book and then configure the address in the SSL proxy profile.</p>
<b>Options</b>	<ul style="list-style-type: none"> <li><i>whitelist-address</i>—Specify address from the global address book.</li> </ul>
<b>Required Privilege Level</b>	services—To view this statement in the configuration. services-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring SSL Forward Proxy</i></li> <li><i>Firewall User Authentication Overview</i></li> </ul>

## wins-server (Access)

---

<b>Syntax</b>	<code>wins-server address</code>
<b>Hierarchy Level</b>	[edit access address-assignment pool <name> family (inet   inet6) xauth-attributes] [edit access <i>profile profile-name</i> ]
<b>Release Information</b>	Statement introduced in Release 10.4 of Junos OS. Starting with Junos OS 15.1X49-D80 and Junos OS Release 17.3R1, the wins-server option at the [edit access profile] hierarchy level allows you to configure the IPv4 address of a Windows Internet Name Service (WINS) server.
<b>Description</b>	Specify the wins-server IP address.
<b>Required Privilege Level</b>	access—To view this statement in the configuration. access-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Security Configuration Guide</i></li></ul>

## CHAPTER 12

# Operational Commands

- clear network-access requests pending
- clear network-access requests statistics
- clear network-access securid-node-secret-file
- clear security user-identification local-authentication-table
- clear service user-identification identity-management counter
- clear services user-identification active-directory-access
- clear services user-identification authentication-table
- request security user-identification local-authorization-table add
- request services user-identification active-directory-access  
active-directory-authentication-table delete
- request services user-identification active-directory-access domain-controller
- request services user-identification active-directory-access ip-user-probe
- request services user-identification authentication-source aruba-clearpass user-query
- request services user-identification authentication-table delete
- show network-access requests pending
- show network-access requests statistics
- show network-access securid-node-secret-file
- show security user-identification local-authentication-table
- show security policies
- show services unified-access-control counters
- show services unified-access-control policies
- show services unified-access-control roles
- show services unified-access-control status
- show services user-identification active-directory-access domain-controller status
- show services user-identification active-directory-access statistics
- show services user-identification active-directory-access user-group-mapping
- show service user-identification authentication-source aruba-clearpass user-query  
counters

- `show service user-identification authentication-source aruba-clearpass user-query status`
- `show services user-identification authentication-table`
- `show service user-identification identity-management`
- `show services user-identification device-information table`



## clear network-access requests pending

<b>Syntax</b>	clear network-access requests pending <index <i>index-number</i> >
<b>Release Information</b>	Command introduced in Release 8.5 of Junos OS.
<b>Description</b>	Clear or cancel all pending authentication requests.
<b>Options</b>	<ul style="list-style-type: none"> <li>• none—Clear all network access requests pending.</li> <li>• index <i>index-number</i> —Clear the specified authentication request. To display index numbers, use the <b>show network-access requests pending</b> command.</li> </ul>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show network-access requests pending on page 354</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear network-access requests pending on page 333</a>

### Sample Output

The following example displays the network access requests that are pending, clears the requests, and displays the results of the clear operation:

#### clear network-access requests pending

```

user@host> show network-access requests pending
Information about pending authentication entries
  Total pending authentication requests: 2
Index User                Status
1      Sun                Processing
2      Sam                Processed

user@host> clear network-access requests pending
user@host> show network-access requests pending
Information about pending authentication entries
  Total pending authentication requests: 2
Index User                Status
1      Sun                Cancelled by Admin
2      Sam                Cancelled by Admin

```

## clear network-access requests statistics

---

<b>Syntax</b>	clear network-access requests statistics
<b>Release Information</b>	Command introduced in Release 8.5 of Junos OS.
<b>Description</b>	Clear general authentication statistics for the configured authentication type.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>authentication-order (Access Profile)</i></li><li>• <a href="#">show network-access requests statistics on page 356</a></li></ul>
<b>Output Fields</b>	This command produces no output.

---

## clear network-access securid-node-secret-file

---

<b>Syntax</b>	clear network-access securid-node-secret-file
<b>Release Information</b>	Command introduced in Junos OS Release 9.1.
<b>Description</b>	Delete the node secret file for the SecuriD authentication type.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Firewall User Authentication Overview</i></li><li>• <a href="#">configuration-file on page 184</a></li><li>• <a href="#">securid-server on page 281</a></li><li>• <a href="#">show network-access securid-node-secret-file on page 358</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear network-access securid-node-secret-file on page 335</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

### Sample Output

#### clear network-access securid-node-secret-file

```
user@host> clear network-access securid-node-secret-file
```

## clear security user-identification local-authentication-table

---

<b>Syntax</b>	clear security user-identification local-authentication-table
<b>Release Information</b>	Command introduced in Junos OS Release 12.1.
<b>Description</b>	This command removes all entries from the local authentication table.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding Application Security</i></li><li>• <i>Firewall User Authentication Overview</i></li></ul>
<b>List of Sample Output</b>	<a href="#">clear security user-identification local-authentication-table on page 336</a>
<b>Output Fields</b>	When you enter this command, all entries are cleared from the local authentication table.

### Sample Output

#### clear security user-identification local-authentication-table

```
user@host> clear security user-identification local-authentication-table
user@host> show security user-identification local-authentication-table all
Total entries: 0
```

## **clear service user-identification identity-management counter**

---

**Syntax**    clear service user-identification identity-management counter

**Release Information**    Statement introduced in Junos OS Release 15.1X49-D100.

**Description**    Clear the counters associated with the batch queries and IP queries for the advanced user query feature.

**Options**    This command has no options.

**Required Privilege Level**    clear

**Related Documentation**    •

## **clear services user-identification active-directory-access**

---

<b>Syntax</b>	clear services user-identification active-directory-access (active-directory-authentication-table   statistics (ip-user-mapping   ip-user-probe   user-group-mapping))
<b>Release Information</b>	Command introduced in Junos OS Release 12.1X47-D10.
<b>Description</b>	Delete entries from the Active Directory authentication table or statistics related to integrated user firewall mappings.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>active-directory-authentication-table</b>—Remove all entries from the Active Directory authentication table.</li><li>• <b>statistics</b>—Remove the specified type of statistics:<ul style="list-style-type: none"><li>• <b>ip-user-mapping</b>—IP address-to-user mappings</li><li>• <b>ip-user-probe</b>—PC probe statistics</li><li>• <b>user-group-mapping</b>—User-to-group mappings</li></ul></li></ul>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">ip-user-mapping on page 232</a></li><li>• <a href="#">request services user-identification active-directory-access ip-user-probe on page 344</a></li><li>• <a href="#">show services user-identification active-directory-access statistics on page 382</a></li><li>• <a href="#">show services user-identification active-directory-access user-group-mapping on page 385</a></li><li>• <a href="#">user-group-mapping on page 315</a></li><li>• <a href="#">user-identification (Services) on page 317</a></li></ul>
<b>Output Fields</b>	This command produces no output.

## clear services user-identification authentication-table

<b>Syntax</b>	<code>clear services user-identification authentication-table authentication-source authentication-source</code> (all   active-directory   aruba-clearpass   identity-management)
<b>Release Information</b>	Command introduced in Junos OS Release 12.1X47-D10 for active directory as an authentication source. Support added for Aruba ClearPass as an authentication source in Junos OS release 12.3X48-D30. Support added for identity-management as an authentication source in Junos OS Release 15.1X49-D100.
<b>Description</b>	Clear the user identity and authentication entries content of the specified authentication source's authentication table.
<b>Options</b>	<b><i>authentication-source</i></b> —Active Directoy, Aruba ClearPass, or the identity management server, which could be the Juniper Identity Management Service (JIMS) or any third-party authentication source.
<b>Additional Information</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	clear
<b>List of Sample Output</b>	<a href="#">clear services user-identification authentication-table authentication-source on page 339</a>
<b>Output Fields</b>	<p>For Aruba ClearPass, if there are no entries in the ClearPass authentication table, the following warning message is displayed after you enter the clear command.</p> <p><b>There is no authentication-table entry.</b></p> <p>If there are entries in the ClearPass authentication table, no messages are displayed after you enter the <b>clear</b> command.</p>

## Sample Output

### clear services user-identification authentication-table authentication-source

```
user@host> clear services user-identification authentication-table authentication-source
aruba-clearpass
warning: "There is no authentication-table entry."
```

## request security user-identification local-authorization-table add

**Syntax** `request security user-identification local-authorization-table add user user-name ip-address ip-address roles [role-name]`

**Release Information** Command introduced in Junos OS Release 12.1. Command updated in Junos OS Release 12.1X44-D10.

**Description** This command adds user and role information to the local authentication table. The table is used to retrieve user and role information for traffic from the specified IP address to enforce a user role firewall.

To add an entry, specify the user name, IP address, and up to 40 roles to be associated with this user. Subsequent commands for the same user and IP address aggregates any new roles to the existing list. An authentication entry can contain up to 200 roles.



**NOTE:** To change the user name of an entry or to remove or change entries in a role list, you must delete the existing entry and create a new one.

An IP address can be associated with only one user. If a second request is made to add a different user using the same IP address, the second authentication entry overwrites the existing entry.

**Options** `user user-name`—Specify the name of the user to be added to the table.

`ip-address ip-address`—Specify the IP address of the user. Either IPv4 or IPv6 addresses are supported.

`roles [role-name]`—(Optional) Specify the role or list of roles to be associated with the specified user. If the specified user and IP address already exist, any roles specified in the command are added to the existing role list.

**Required Privilege Level** maintenance

**Related Documentation**

- [request security user-identification local-authentication-table delete](#)
- [Understanding the User Identification Table](#)

**List of Sample Output** [request security user-identification local-authentication-table add on page 341](#)

**Output Fields** When you enter this command, either an entry is added to the local authentication table, or the roles of an existing entry are aggregated with additional roles.



## Sample Output

### request security user-identification local-authentication-table add

```
user@host> request security user-identification local-authentication-table add user user1
ip-address 192.0.2.1 roles role1
user@host> request security user-identification local-authentication-table add user user2
ip-address 203.0.113.2 roles [role2 role3]
user@host> request security user-identification local-authentication-table add user user2
ip-address 203.0.113.2 roles role1
user@host> show security user-identification local-authentication-table all
Total entries: 2
Source IP      Username      Roles
192.0.2.1      user1         role1
203.0.113.2    user2         role2, role3, role1
```

## request services user-identification active-directory-access active-directory-authentication-table delete

---

**Syntax**     request services user-identification active-directory-access  
                 active-directory-authentication-table delete  
                 (domain *name* | ip-address *ip-address* | group *group-name* <domain *name*> | user *name*  
                 <domain *name*>

**Release Information**     Command introduced in Junos OS Release 12.1X47-D10.

**Description**     Delete entries from the active directory authentication table by domain, address, group, or user. This command provides the network administrator with flexibility and control over the table entries beyond what is automatically added to or deleted from the table. For example, if a person leaves the company, the corresponding username can be deleted; after a department reorganization, a group can be deleted.

- Options**
- **domain *name***—Delete the entries from the authentication table for the specified domain.
  - **ip-address *ip-address***—Delete the entry from the authentication table for the specified IP address.
  - **group *group-name***—Delete the entries from the authentication table for the specified group.
    - **domain *name***—Delete the group only from the specified domain.
  - **user *name***—Delete the entries from the authentication table for the specified username.
    - **domain *name***—Delete the user only from the specified domain.

**Required Privilege Level**     maintenance

- Related Documentation**
- *show services user-identification active-directory-access active-directory-authentication-table*
  - [user-identification \(Services\) on page 317](#)
  - *Understanding Active Directory Authentication Tables*

**Output Fields**     This command produces no output.

## request services user-identification active-directory-access domain-controller

<b>Syntax</b>	request services user-identification active-directory-access domain-controller discovery domain <i>name</i>
<b>Release Information</b>	Command introduced in Junos OS Release 12.1X47-D10.
<b>Description</b>	Discover and display the name and address of all domain controllers in the specified domain.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>domain <i>name</i></b>—Name of the domain for which to get and display domain controller names and addresses.</li> </ul>
<b>Required Privilege Level</b>	maintenance
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">active-directory-access on page 139</a></li> <li>• <a href="#">show services user-identification active-directory-access domain-controller status on page 379</a></li> <li>• <a href="#">user-identification (Services) on page 317</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">request services user-identification active-directory-access domain-controller discovery domain &lt;domain-name&gt; on page 343</a>
<b>Output Fields</b>	This command displays the discovered domain controllers.

### Sample Output

[request services user-identification active-directory-access domain-controller discovery domain <domain-name>](#)

```
user@host> request services user-identification active-directory-access domain-controller
discovery domain example.net
Domain: example.net
Domain controller: example-dc.example.net
Address: 192.0.2.2
```

## request services user-identification active-directory-access ip-user-probe

---

<b>Syntax</b>	request services user-identification active-directory-access ip-user-probe address <i>ip-address</i> <domain <i>name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 12.1X47-D10.
<b>Description</b>	Probe the PC at the specified IP address to get an authentication entry, which is used for the integrated user firewall feature. You can display the authentication table to see the results. If the probe succeeded, there will be a valid authentication entry. If the probe failed, there will be an invalid authentication entry.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>address <i>ip-address</i></b>—Probe the PC at this IP address.</li><li>• <b>domain <i>name</i></b>—Probe the IP address in the specified domain.</li></ul>
<b>Required Privilege Level</b>	maintenance
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">clear services user-identification active-directory-access on page 338</a></li><li>• <a href="#">show services user-identification active-directory-access active-directory-authentication-table</a></li><li>• <a href="#">show services user-identification active-directory-access statistics on page 382</a></li><li>• <a href="#">user-identification (Services) on page 317</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show services user-identification active-directory-access active-directory-authentication-table address &lt;ip-address&gt; on page 344</a>
<b>Output Fields</b>	The following command displays the results of the IP address probe:

### Sample Output

[show services user-identification active-directory-access active-directory-authentication-table address <ip-address>](#)

```
user@host> show services user-identification active-directory-access
active-directory-authentication-table address 192.0.2.3
Domain: example.net
Source-ip: 192.0.2.3
Username: user1
Groups:group1
State: Valid
Source: wmic
Access start date: 2014-03-10
Access start time: 13:59:56
Age time: 1437
```

```
user@host> show services user-identification active-directory-access
active-directory-authentication-table address 2001:db8::1:1
Domain: example.net
Source-ip: 2001:db8::1:1
Username: user2
Groups:group1
State: Valid
Source: wmic
Access start date: 2017-03-10
Access start time: 13:59:56
Age time: 1437
```

## request services user-identification authentication-source aruba-clearpass user-query

**Syntax** request services user-identification authentication-source *authentication-source* user-query address *ip-address*

**Release Information** Command introduced in Junos OS Release 12.3X48-D30.

**Description** Manually send to the ClearPass website a request for user authentication and identity information for an individual user. The command specifies the IP address of the user's device to identify the user whose information you want to obtain. If the user query command executes successfully, an entry for the user (IP address) has been created in the ClearPass authentication table, and no output is displayed.

The user query function is part of the SRX Series integrated ClearPass authentication and enforcement feature. The user query function, if configured, allows the SRX Series device to send requests for individual user information. This command also allows you to manually send requests. Normally administrators send query requests manually to troubleshoot issues.

The user query function supplements use of the Web API function. The SRX Series device exposes to ClearPass a Web API that ClearPass uses to send POST request messages to the SRX Series device. These messages contain user authentication and identity information.

**Options** *ip-address*—The IP address of the user's device for whom you are manually requesting authentication information.



**NOTE:** Starting with Junos OS Release 15.1X49-D130, SRX Series device can query ClearPass for IPv6 addresses, in addition to IPv4 addresses for an individual user.

**Required Privilege Level** maintenance

**List of Sample Output** [request services user-identification authentication-source authentication-source user-query address ip-address on page 346](#)

### Sample Output

[request services user-identification authentication-source authentication-source user-query address ip-address](#)

```
user@host> request services user-identification authentication-source aruba-clearpass user-query
address 40.0.0.1
user@host> request services user-identification authentication-source aruba-clearpass user-query
address 2001:db8:4136:e378:8000:63bf:3fff:fdd2
```

## request services user-identification authentication-table delete

**Syntax** request services user-identification authentication-table delete (ip-address *ip-address* | authentication-source (all | active-directory | *authentication-source* (domain *domain-name* | group *group-name* | user *user-name* ) )

**Release Information** Command introduced in Junos OS Release 12.3X48-D30.

**Description** Delete entries from the ClearPass authentication table based on the IP address of the user's device, or on the authentication source and the name of a domain, a group, or a user. When only the authentication source is specified, the entire ClearPass authentication table is deleted. For the integrated ClearPass authentication and enforcement feature, the authentication source is always aruba-clearpass.

**Options** *ip-address*—Deletes a user authentication entry from the ClearPass authentication table, and the Active Directory (AD) table, based on the IP address of the user's device.



**NOTE:** Starting with Junos OS Release 15.1X49-D130, SRX Series device supports to delete IPv6 addresses if IPv6 addresses were configured.

***authentication-source*** —Deletes user entries from the ClearPass authentication table. In the CLI, ClearPass as the authentication source is referred to by the value aruba-clearpass as is the ClearPass authentication table. To identify the user entries to be deleted, you specify a domain, a group, or a username.

***domain-name***—Deletes from the ClearPass authentication table user entries for users who belong to the specified domain.

***group group-name***—Deletes the entry entry from the ClearPass authentication table for users who belong to the group, regardless of whether they belong to other groups.

***user user-name***—Deletes the entry for the specified user from the ClearPass authentication table.

**Required Privilege Level** maintenance

**List of Sample Output** [request services user-identification authentication-table delete ip-address on page 348](#)  
[request services user-identification authentication-table delete authentication-source aruba-clearpass domain on page 348](#)  
[request services user-identification authentication-table delete authentication-source aruba-clearpass group on page 350](#)  
[request services user-identification authentication-table delete authentication-source aruba-clearpass on page 352](#)

**Output Fields** The following examples cover how to delete various user entries from the ClearPass authentication table based on the specified parameter. It also shows how to check to ensure that the user entries were deleted successfully.

## Sample Output

### request services user-identification authentication-table delete ip-address

The following command deletes the entry for the user whose device IP address is specified.

```
user@host> request services user-identification authentication-table delete ip-address 50.0.0.1
user@host> request services user-identification authentication-table delete ip-address
2001:db8:4136:e378:8000:63bf:3fff:fdd2
```

Before you delete the entry:

To ensure that the entry exists in the ClearPass authentication table, use the following command to display the entry for the user. Note that the ClearPass authentication table includes the user entry with the IP address 50.0.0.1 and 2001:db8:4136:e378:8000:63bf:3fff:fdd2.

```
user@host> show services user-identification authentication-table ip-address 50.0.0.1
Domain: GLOBAL
Source-ip: 50.0.0.1
Username: guest1
Groups: posture-healthy, guest, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2015-12-14
Access start time: 17:07:23
Last updated timestamp: 2015-12-22 05:50:47
Age time: 0
```

```
user@host> show services user-identification authentication-table ip-address
2001:db8:4136:e378:8000:63bf:3fff:fdd2
Domain: GLOBAL
Source-ip: 2001:db8:4136:e378:8000:63bf:3fff:fdd2
Username: guest2
Groups: posture-healthy1, guest, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2015-12-14
Access start time: 17:07:23
Last updated timestamp: 2015-12-22 05:50:47
Age time: 0
```

After you delete the user entry associated with the IP address, enter the command again to verify that the entry has been deleted.

```
user@host> show services user-identification authentication-table ip-address 50.0.0.1
warning: "This IP address isn't in authentication table."

user@host> show services user-identification authentication-table ip-address
2001:db8:4136:e378:8000:63bf:3fff:fdd2
warning: "This IP address isn't in authentication table."
```

### request services user-identification authentication-table delete authentication-source aruba-clearpass domain

The following command deletes the specified domain.



```
user@host> request services user-identification authentication-table delete authentication-source domain global
```

Before you delete the domain contents from the ClearPass authentication table, use the following command to display the domain information to ensure that it exists. Note that the ClearPass authentication table includes the global domain.

```
user@host> show services user-identification authentication-table authentication-source aruba-clearpass domain global extensive
```

```
Domain: GLOBAL
Total entries: 6
Source-ip: 10.0.0.1
  Username: viki2
  Groups: posture-healthy, accounting-grp, accounting-grp-and-company-device, corporate-limited, [user authenticated]
  Groups referenced by policy: accounting-grp-and-company-device
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:20:30
  Last updated timestamp: 2015-12-22 04:02:48
  Age time: 0
Source-ip: 20.0.0.1
  Username: abew1
  Groups: posture-unknown, marketing-access-limited-grp, [user authenticated]
  Groups referenced by policy: marketing-access-limited-grp
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:31:40
  Last updated timestamp: 2015-12-22 04:18:48
  Age time: 0
Source-ip: 30.0.0.1
  Username: jxchan
  Groups: posture-healthy, marketing-access-for-pcs-limited-group, marketing-general, sales-limited, corporate-limited, [user authenticated]
  Groups referenced by policy: marketing-access-for-pcs-limited-group
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:22:48
  Last updated timestamp: 2015-12-22 05:46:21
  Age time: 0
Source-ip: 40.0.0.1
  Username: lchen1
  Groups: posture-healthy, human-resources-grp, accounting-limited, corporate-limited, [user authenticated]
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:21:37
  Last updated timestamp: 2015-12-22 05:41:18
  Age time: 0
Source-ip: 50.0.0.1
  Username: guest1
  Groups: posture-healthy, guest, [user authenticated]
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:23:10
  Last updated timestamp: 2015-12-22 05:50:47
```

```
Age time: 0
Source-ip: 50.0.0.2
Username: guest2
Groups:posture-healthy, guest-device-byod, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:23:21
Last updated timestamp: 2015-12-22 05:52:44
Age time: 0
```

After you delete the domain, use the command again to verify that the domain and its user members was deleted.

```
user@host> show services user-identification authentication-table authentication-source
aruba-clearpass domain global
warning: "There is no related auth entry in authentication-table."
```

#### **request services user-identification authentication-table delete authentication-source aruba-clearpass group**

The following command deletes the entries for any users who belong to the group posture-healthy.

```
user@host> request services user-identification authentication-table delete authentication-source
aruba-clearpass group posture-healthy
```

Before you delete the group contents from the ClearPass authentication table, use the following command to display it to ensure that the group is used in some user entries. Notice that the appropriate user entries contain the posture-healthy group.

```
Domain: GLOBAL
Total entries: 6
Source-ip: 10.0.0.1
Username: viki2
Groups:posture-healthy, accounting-grp, accounting-grp-and-company-device,
corporate-limited, [user authenticated]
Groups referenced by policy:accounting-grp-and-company-device
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:20:30
Last updated timestamp: 2015-12-22 04:02:48
Age time: 0
Source-ip: 20.0.0.1
Username: abew1
Groups:posture-unknown, marketing-access-limited-grp, [user authenticated]
Groups referenced by policy:marketing-access-limited-grp
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:31:40
Last updated timestamp: 2015-12-22 04:18:48
Age time: 0
Source-ip: 30.0.0.1
Username: jxchan
Groups:posture-healthy, marketing-access-for-pcs-limited-group,
marketing-general, sales-limited, corporate-limited, [user authenticated]
Groups referenced by policy:marketing-access-for-pcs-limited-group
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
```

```

Access start time: 17:22:48
Last updated timestamp: 2015-12-22 05:46:21
Age time: 0
Source-ip: 40.0.0.1
Username: lchen1
Groups:posture-healthy, human-resources-grp, accounting-limited,
corporate-limited, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:21:37
Last updated timestamp: 2015-12-22 05:41:18
Age time: 0
Source-ip: 50.0.0.1
Username: guest1
Groups:posture-healthy, guest, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:23:10
Last updated timestamp: 2015-12-22 05:50:47
Age time: 0
Source-ip: 50.0.0.2
Username: guest2
Groups:posture-healthy, guest-device-byod, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:23:21
Last updated timestamp: 2015-12-22 05:52:44
Age time: 0

```

Enter the **show services user-identification authentication-table authentication-source aruba-clearpass group posture-healthy** to display the entries for the users who belong to the group posture-healthy.

Notice that the group name does not show up in the column for groups referenced by policy because it is not one. Notice, too, that the output contains information for only those users who belong to the group. It does not include an entry for the user abewl, who does not belong to the group.

```

Domain: GLOBAL
Source IP      Username      groups(Ref by policy)      state
10.0.0.1      viki2        accounting-grp-and-company-dev Valid
30.0.0.1      jxchan       marketing-access-for-pcs-limit Valid
40.0.0.1      lchen1       corporate-limited          Valid
50.0.0.1      guest1       Valid
50.0.0.2      guest2       Valid

```

After you delete the group, use the command again to verify that it has been deleted.

```

user@host> show services user-identification authentication-table authentication-source
aruba-clearpass group posture-healthy
warning: "There is no related auth entry in authentication-table."

```

For further verification, you can use the following command to check the entry for one of the users who belonged to the group:

```
user@host> show services user-identification authentication-table authentication-source
aruba-clearpass user viki2
warning: "There is no related auth entry in authentication-table."
```

#### **request services user-identification authentication-table delete authentication-source aruba-clearpass**

The following command deletes the ClearPass authentication table (aruba-clearpass).

```
user@host> request services user-identification authentication-table delete authentication-source
aruba-clearpass
```

Before you delete the ClearPass authentication table, use the following command to display it to ensure that the table exists.

```
user@host> show services user-identification authentication-table authentication-source
aruba-clearpass
Domain: GLOBAL
Total entries: 6
Source-ip: 10.0.0.1
  Username: viki2
  Groups: posture-healthy, accounting-grp, accounting-grp-and-company-device,
  corporate-limited, [user authenticated]
  Groups referenced by policy: accounting-grp-and-company-device
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:20:30
  Last updated timestamp: 2015-12-22 04:02:48
  Age time: 0
Source-ip: 20.0.0.1
  Username: abew1
  Groups: posture-unknown, marketing-access-limited-grp, [user authenticated]
  Groups referenced by policy: marketing-access-limited-grp
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:31:40
  Last updated timestamp: 2015-12-22 04:18:48
  Age time: 0
Source-ip: 30.0.0.1
  Username: jxchan
  Groups: posture-healthy, marketing-access-for-pcs-limited-group,
  marketing-general, sales-limited, corporate-limited, [user authenticated]
  Groups referenced by policy: marketing-access-for-pcs-limited-group
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:22:48
  Last updated timestamp: 2015-12-22 05:46:21
  Age time: 0
Source-ip: 40.0.0.1
  Username: lchen1
  Groups: posture-healthy, human-resources-grp, accounting-limited,
  corporate-limited, [user authenticated]
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:21:37
  Last updated timestamp: 2015-12-22 05:41:18
  Age time: 0
Source-ip: 50.0.0.1
```

```
Username: guest1
Groups:posture-healthy, guest, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:23:10
Last updated timestamp: 2015-12-22 05:50:47
Age time: 0
Source-ip: 50.0.0.2
Username: guest2
Groups:posture-healthy, guest-device-byod, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:23:21
Last updated timestamp: 2015-12-22 05:52:44
Age time: 0
```

To verify that you deleted the authentication table successfully, enter the command again:

```
user@host> show services user-identification authentication-table authentication-source
aruba-clearpass
```

```
warning: "There is no authentication-table entry."
```

## show network-access requests pending

<b>Syntax</b>	<code>show network-access requests pending</code> <code>&lt;detail&gt;</code> <code>&lt;index <i>number</i>&gt;</code>
<b>Release Information</b>	Command introduced in Release 8.5 of Junos OS.
<b>Description</b>	Display the status of pending authentication requests.
<b>Options</b>	<ul style="list-style-type: none"> <li><code>none</code>—Show pending authentication requests.</li> <li><code>show network-access requests pending</code><code>show network-access requests pending detail</code>—Display detailed information about all pending requests.</li> <li><code>index <i>number</i></code>—(Optional) Display detailed information about the request specified by this index number. Use the command without options to obtain a list of requests and index numbers.</li> </ul>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">clear network-access requests pending on page 333</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show network-access requests pending on page 355</a> <a href="#">show network-access requests pending detail on page 355</a> <a href="#">show network-access requests pending index 1 on page 355</a>
<b>Output Fields</b>	<a href="#">Table 20 on page 354</a> lists the output fields for the <code>show network-access requests pending</code> command. Output fields are listed in the approximate order in which they appear.

*Table 20: show network-access requests pending Output Fields*

Field Name	Field Description
Index	Internal number identifying the pending request. Use this number to obtain more information on the record.
User	Originator of authentication request.

Table 20: show network-access requests pending Output Fields (continued)

Field Name	Field Description
Status	<p>The pending requests are requests and responses that are not yet sent back to the respective clients. The pending requests can be in one of the following states:</p> <ul style="list-style-type: none"> <li>• <b>Processing:</b> This request is being processed by the device. The authentication process has started but is not complete.</li> <li>• <b>Waiting on Auth Server:</b> The request is sent to an external authentication server, and the device is waiting for the response.</li> <li>• <b>Processed:</b> This request has completed authentication (success or failure). The results are not yet forwarded back to the client.</li> <li>• <b>Request cancelled by Admin:</b> This request was cancelled by the Admin. The reply with cancel code is not yet sent back to the client.</li> </ul>
Profile	<p>The profile determines how the user is authenticated.</p> <p>Local clients defined with the statement <b>access profile client</b> are authenticated with the password authentication. Clients configured external to the device, on a RADIUS or LDAP server are authenticated with RADIUS or LDAP authentication.</p>

## Sample Output

### show network-access requests pending

```

user@host> show network-access requests pending
Information about pending authentication entries
  Total pending authentication requests: 2
Index  User              Status
1      Sun               Processing
2      Sam               Processed

```

## Sample Output

### show network-access requests pending detail

```

user@host> show network-access requests pending detail
Information about pending authentication entries
  Total pending authentication requests: 2
Index: 1  User: Sun
  Status: Processing
  Profile: Sunnyvale-firewall-users
Index: 2  User: Sam
  Status: Processed
  Profile: Westford-profile

```

## Sample Output

### show network-access requests pending index 1

```

user@host> show network-access requests pending index 1
Index: 1  User: Sun
  Status: Processing
  Profile: Sunnyvale-firewall-users

```

## show network-access requests statistics

**Syntax** `show network-access requests statistics`

**Release Information** Command modified in Release 9.1 of Junos OS.

**Description** Display authentication statistics for the configured authentication type.

**Required Privilege Level** view

**Related Documentation** • [clear network-access requests statistics on page 334](#)

**Output Fields** [Table 21 on page 356](#) lists the output fields for the network-access requests statistics command. Output fields are listed in the approximate order in which they appear.

*Table 21: show network-access requests statistics Output Fields*

Field Name	Field Description
Total requests received	Total number of authentication requests that the device received from clients.
Total responses sent	Total number of authentication responses that the device sent to the clients.
Success responses	Total number of clients that authenticated successfully.
Failure responses	Total number of clients that failed to authenticate.

## show network-access requests statistics

```

user@host> show network-access requests statistics
General authentication statistics
  Total requests received: 100
  Total responses sent: 70
Radius authentication statistics
  Total requests received: 40
  Success responses: 20
  Failure responses: 20
Radius reauthentication statistics
  Total requests received: 0
  Success responses: 0
  Failure responses: 0
LDAP authentication statistics
  Total requests received: 30
  Success responses: 15
  Failure responses: 15
Local authentication statistics
  Total requests received: 5
  Success responses: 2
  Failure responses: 3

```



```
Local re-authentication statistics
  Total requests received: 0
  Success responses: 0
  Failure responses: 0
Securid authentication statistics
  Total requests received: 15
  Success responses: 3
  Failure responses: 12
```

## show network-access securid-node-secret-file

<b>Syntax</b>	<code>show network-access securid-node-secret-file</code>
<b>Release Information</b>	Command introduced in Release 9.1 of Junos OS.
<b>Description</b>	Display the path to the node secret file for the SecurID authentication type.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">configuration-file on page 184</a></li> <li>• <a href="#">securid-server on page 281</a></li> <li>• <a href="#">clear network-access securid-node-secret-file on page 335</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show network-access securid-node-secret-file on page 358</a>
<b>Output Fields</b>	Table 22 on page 358 lists the output fields for the network-access securid-node-secret-file command. Output fields are listed in the approximate order in which they appear.

Table 22: show network-access securid-node-secret-file Output Fields

Field Name	Field Description
SecurID Server	Name of the SecurID authentication server.
Node Secret File	Path to the node secret file.

## Sample Output

### show network-access securid-node-secret-file

```

user@host> show network-access securid-node-secret-file
SecurID server node secret file:
SecurID Server      Node Secret File
ace-server1         /var/db/securid/ace-server1/node-secret

```

## show security user-identification local-authentication-table

<b>Syntax</b>	<code>show security user-identification local-authentication-table [ ( all [brief   extensive]) [ip-address <i>ip-address</i>   role <i>role-name</i>   start <i>value</i>   count <i>value</i>   user <i>user-name</i> ]</code>
<b>Release Information</b>	Command introduced in Junos OS Release 12.1.
<b>Description</b>	<p>This command displays the content of the local authentication table by IP address.</p> <p><b>all</b>—(Optional) All entries displayed from the beginning of the table or from the specified starting entry.</p> <p><b>brief</b>—(Default) Uses a tabular format and truncates longer entries:  username—displays up to 13 characters, roles—displays up to 32 characters.</p> <p><b>extensive</b>—(Optional) Displays the full names and all items.</p> <p><b>count <i>value</i></b>—(Optional) The total number of entries to display.</p> <p><b>ip-address <i>ip-address</i></b>—(Optional) The IP address of the entry to display.</p> <p><b>role <i>role-name</i></b>—(Optional) The role name of the entries to display.</p> <p><b>start <i>value</i></b>—(Optional) The first entry to display.</p> <p><b>user <i>user-name</i></b>—(Optional) The username of the entry to display.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">request security user-identification local-authorization-table add on page 340</a></li> <li>• <a href="#">Understanding the User Identification Table</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show security user-identification local-authentication-table all on page 360</a> <a href="#">show security user-identification local-authentication-table ip-address on page 360</a> <a href="#">show security user-identification local-authentication-table start on page 360</a> <a href="#">show security user-identification local-authentication-table role on page 360</a>
<b>Output Fields</b>	Table 23 on page 359 lists the output fields for the <b>show security user-identification local-authentication-table</b> command. Output fields are listed in the approximate order in which they appear.

Table 23: show security user-identification local-authentication-table Output Fields

Field Name	Field Description
Total entries	The number of entries in the table.

Table 23: show security user-identification local-authentication-table Output Fields (continued)

Field Name	Field Description
IP address	IP address of the associated user.  <i>NOTE:</i> Only one user can be associated with an IP address.
Username	User associated with the specified IP address.
Roles	A comma-separated list of all roles associated with this IP address and user.

## Sample Output

### show security user-identification local-authentication-table all

```

user@host> show security user-identification local-authentication-table all
Total entries: 3
Source IP      Username      Roles
192.0.2.1      user1         role1
203.0.113.2    user1         role2
198.51.100.3   user3         role1, role2

```

### show security user-identification local-authentication-table ip-address

```

user@host> show security user-identification local-authentication-table ip-address 203.0.113.2
Ip-address: 203.0.113.2
Username: user2
Roles: role2, role3, role1

```

### show security user-identification local-authentication-table start

```

user@host> show security user-identification local-authentication-table start 2 count 2
Total entries: 2
Ip-address: 203.0.113.2
Username: user2
Roles: role2, role3, role1

Ip-address: 198.51.100.3   Username: user3
Roles: role2, role3

```

### show security user-identification local-authentication-table role

```

user@host> show security user-identification local-authentication-table role qa3456
Total entries: 3
Ip-address: 203.0.113.2
Username: dev-grp-3
Roles: qa432, qa3456, qa84, qa794

Ip-address: 198.51.100.3
Username: dev-qa
Roles: qa3456, qa3985, qa23

Ip-address: 203.0.113.2
Username: branda11
Roles: qa3456

```



## show security policies

---

<b>Syntax</b>	<code>show security policies</code> <code>none</code> <code>&lt;detail&gt;</code> <code>policy-name <i>policy-name</i></code> <code>&lt;global&gt;</code>
<b>Release Information</b>	Command modified in Junos OS release 9.2. Support for IPv6 addresses added in Junos OS release 10.2. Support for wildcard addresses added in Junos OS release 11.1. Support for global policy added in Junos OS release 11.4. Support for services offloading added in Junos OS release 11.4. Support for source-identities added in Junos OS release 12.1. The <b>Description</b> output field added in Junos OS release 12.1. Support for negated address added in Junos OS release 12.1X45-D10. The output fields for Policy Statistics expanded, and the output fields for the <b>global</b> and <b>policy-name</b> options expanded to include from-zone and to-zone global match criteria in Junos OS release 12.1X47-D10. Support for the <b>initial-tcp-mss</b> and <b>reverse-tcp-mss</b> options added in Junos OS release 12.3X48-D20. Output field and description for <b>source-end-user-profile</b> option added in Junos OS release 15.1x49-D70. Output field and description for <b>dynamic-applications</b> option added in Junos OS release 15.1x49-D100. Output field and description for <b>dynapp-redir-profile</b> option added in Junos OS release 18.2R1.
<b>Description</b>	Display a summary of all security policies configured on the device. If a particular policy is specified, display information specific to that policy.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>none</b>—Display basic information about all configured policies.</li><li>• <b>detail</b>—(Optional) Display a detailed view of all of the policies configured on the device.</li><li>• <b>policy-name <i>policy-name</i></b>—(Optional) Display information about a specified policy.</li><li>• <b>global</b>—(Optional) Display information about global policies.</li></ul>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Security Policies Overview</i></li><li>• <i>Understanding Security Policy Rules</i></li><li>• <i>Understanding Security Policy Elements</i></li><li>• <i>Unified Policies Configuration Overview</i></li></ul>
<b>List of Sample Output</b>	<a href="#">show security policies on page 366</a> <a href="#">show security policies (Dynamic Applications) on page 366</a> <a href="#">show security policies policy-name detail on page 367</a> <a href="#">show security policies (Services-Offload) on page 368</a> <a href="#">show security policies (Device Identity) on page 368</a>

[show security policies detail on page 369](#)  
[show security policies detail \(TCP Options\) on page 371](#)  
[show security policies policy-name \(Negated Address\) on page 371](#)  
[show security policies policy-name detail \(Negated Address\) on page 371](#)  
[show security policies global on page 372](#)

**Output Fields** Table 24 on page 363 lists the output fields for the **show security policies** command. Output fields are listed in the approximate order in which they appear.

*Table 24: show security policies Output Fields*

Field Name	Field Description
<b>From zone</b>	Name of the source zone.
<b>To zone</b>	Name of the destination zone.
<b>Policy</b>	Name of the applicable policy.
<b>Description</b>	Description of the applicable policy.
<b>State</b>	Status of the policy: <ul style="list-style-type: none"> <li>• <b>enabled:</b> The policy can be used in the policy lookup process, which determines access rights for a packet and the action taken in regard to it.</li> <li>• <b>disabled:</b> The policy cannot be used in the policy lookup process, and therefore it is not available for access control.</li> </ul>
<b>Index</b>	Internal number associated with the policy.
<b>Sequence number</b>	Number of the policy within a given context. For example, three policies that are applicable in a from-zoneA-to-zoneB context might be ordered with sequence numbers 1, 2, 3. Also, in a from-zoneC-to-zoneD context, four policies might have sequence numbers 1, 2, 3, 4.
<b>Source addresses</b>	For standard display mode, the names of the source addresses for a policy. Address sets are resolved to their individual names.  For detail display mode, the names and corresponding IP addresses of the source addresses for a policy. Address sets are resolved to their individual address name-IP address pairs.
<b>Destination addresses</b>	Name of the destination address (or address set) as it was entered in the destination zone's address book. A packet's destination address must match this value for the policy to apply to it.
<b>source-end-user-profile</b>	Name of the device identity profile (referred to as <b>end-user-profile</b> in the CLI) that contains attributes, or characteristics of a device. Specification of the device identity profile in the <b>source-end-user-profile</b> field is part of the device identity feature. If a device matches the attributes specified in the profile and other security policy parameters, then the security policy's action is applied to traffic issuing from the device.
<b>Source addresses (excluded)</b>	Name of the source address excluded from the policy.

Table 24: show security policies Output Fields (continued)

Field Name	Field Description
Destination addresses (excluded)	Name of the destination address excluded from the policy.
Source identities	One or more user roles specified for a policy.
Applications	<p>Name of a preconfigured or custom application whose type the packet matches, as specified at configuration time.</p> <ul style="list-style-type: none"> <li>• <b>IP protocol</b>: The Internet protocol used by the application—for example, TCP, UDP, ICMP.</li> <li>• <b>ALG</b>: If an ALG is explicitly associated with the policy, the name of the ALG is displayed. If <b>application-protocol ignore</b> is configured, <b>ignore</b> is displayed. Otherwise, <b>0</b> is displayed. However, even if this command shows <b>ALG: 0</b>, ALGs might be triggered for packets destined to well-known ports on which ALGs are listening, unless ALGs are explicitly disabled or when <b>application-protocol ignore</b> is not configured for custom applications.</li> <li>• <b>Inactivity timeout</b>: Elapsed time without activity after which the application is terminated.</li> <li>• <b>Source port range</b>: The low-high source port range for the session application.</li> </ul>
Dynamic Applications	Application identification based layer 7 dynamic applications.
Destination Address Translation	<p>Status of the destination address translation traffic:</p> <ul style="list-style-type: none"> <li>• <b>drop translated</b>—Drop the packets with translated destination addresses.</li> <li>• <b>drop untranslated</b>—Drop the packets without translated destination addresses.</li> </ul>
Application Firewall	<p>An application firewall includes the following:</p> <ul style="list-style-type: none"> <li>• <b>Rule-set</b>—Name of the rule set.</li> <li>• <b>Rule</b>—Name of the rule. <ul style="list-style-type: none"> <li>• <b>Dynamic applications</b>—Name of the applications.</li> <li>• <b>Dynamic application groups</b>—Name of the application groups.</li> <li>• <b>Action</b>—The action taken with respect to a packet that matches the application firewall rule set. Actions include the following: <ul style="list-style-type: none"> <li>• <b>permit</b></li> <li>• <b>deny</b></li> </ul> </li> </ul> </li> <li>• <b>Default rule</b>—The default rule applied when the identified application is not specified in any rules of the rule set.</li> </ul>



Table 24: show security policies Output Fields (continued)

Field Name	Field Description
Action or Action-type	<ul style="list-style-type: none"> <li>The action taken for a packet that matches the policy's tuples. Actions include the following: <ul style="list-style-type: none"> <li><b>permit</b></li> <li><b>firewall-authentication</b></li> <li><b>tunnel ipsec-vpn <i>vpn-name</i></b></li> <li><b>pair-policy <i>pair-policy-name</i></b></li> <li><b>source-nat pool <i>pool-name</i></b></li> <li><b>pool-set <i>pool-set-name</i></b></li> <li><b>interface</b></li> <li><b>destination-nat <i>name</i></b></li> <li><b>deny</b></li> <li><b>reject</b></li> <li><b>services-offload</b></li> </ul> </li> </ul>
Session log	Session log entry that indicates whether the <b>at-create</b> and <b>at-close</b> flags were set at configuration time to log session information.
Scheduler name	Name of a preconfigured scheduler whose schedule determines when the policy is active and can be used as a possible match for traffic.
Policy statistics	<ul style="list-style-type: none"> <li><b>Input bytes</b>—The total number of bytes presented for processing by the device. <ul style="list-style-type: none"> <li><b>Initial direction</b>—The number of bytes presented for processing by the device from the initial direction.</li> <li><b>Reply direction</b>—The number of bytes presented for processing by the device from the reply direction.</li> </ul> </li> <li><b>Output bytes</b>—The total number of bytes actually processed by the device. <ul style="list-style-type: none"> <li><b>Initial direction</b>—The number of bytes from the initial direction actually processed by the device.</li> <li><b>Reply direction</b>—The number of bytes from the reply direction actually processed by the device.</li> </ul> </li> <li><b>Input packets</b>—The total number of packets presented for processing by the device. <ul style="list-style-type: none"> <li><b>Initial direction</b>—The number of packets presented for processing by the device from the initial direction.</li> <li><b>Reply direction</b>—The number of packets presented for processing by the device from the reply direction.</li> </ul> </li> <li><b>Output packets</b>—The total number of packets actually processed by the device. <ul style="list-style-type: none"> <li><b>Initial direction</b>—The number of packets actually processed by the device from the initial direction.</li> <li><b>Reply direction</b>—The number of packets actually processed by the device from the reply direction.</li> </ul> </li> <li><b>Session rate</b>—The total number of active and deleted sessions.</li> <li><b>Active sessions</b>—The number of sessions currently present because of access control lookups that used this policy.</li> <li><b>Session deletions</b>—The number of sessions deleted since system startup.</li> <li><b>Policy lookups</b>—The number of times the policy was accessed to check for a match.</li> </ul>

Table 24: show security policies Output Fields (continued)

Field Name	Field Description
<b>dynapp-redir-profile</b>	Displays application-firewall profile. See <a href="#">redirect profile(dynamic-application)</a>
<b>Per policy TCP Options</b>	Configured syn and sequence checks, and the configured TCP MSS value for the initial direction, the reverse direction or, both.

## Sample Output

### show security policies

```

user@host> show security policies

From zone: trust, To zone: untrust
Policy: p1, State: enabled, Index: 4, Sequence number: 1
Source addresses:
sa-1-ipv4: 198.51.100.11/24
sa-2-ipv6: 2001:db8:a0b:12f0::1/32
sa-3-ipv6: 2001:db8:a0b:12f0::22/32
sa-4-wc: 203.0.113.1/255.255.0.255
Destination addresses:
da-1-ipv4: 2.2.2.2/24
da-2-ipv6: 2001:db8:a0b:12f0::8/32
da-3-ipv6: 2001:db8:a0b:12f0::9/32
da-4-wc: 192.168.22.11/255.255.0.255
Source identities: role1, role2, role4
Applications: any
Action: permit, application services, log, scheduled
Application firewall : my_ruleset1
Policy: p2, State: enabled, Index: 5, Sequence number: 2
Source addresses:
sa-1-ipv4: 198.51.100.11/24
sa-2-ipv6: 2001:db8:a0b:12f0::1/32
sa-3-ipv6: 2001:db8:a0b:12f0::22/32
Destination addresses:
da-1-ipv4: 2.2.2.2/24
da-2-ipv6: 2001:db8:a0b:12f0::1/32
da-3-ipv6: 2001:db8:a0b:12f0::9/32
Source identities: role1, role4
Applications: any
Action: deny, scheduled

```

### show security policies (Dynamic Applications)

```

user@host>show security policies

Policy: p1, State: enabled, Index: 4, Scope Policy: 0, Sequence number: 1
Source addresses: any
Destination addresses: any
Applications: any
Dynamic Applications: junos:YAH00
Action: deny, log
Policy: p2, State: enabled, Index: 5, Scope Policy: 0, Sequence number: 2
Source addresses: any
Destination addresses: any
Applications: any

```

```

Dynamic Applications: junos:web, junos:web:social-networking:facebook,
junos:TFTP, junos:QQ
Action: permit, log
Policy: p3, State: enabled, Index: 6, Scope Policy: 0, Sequence number: 3
Source addresses: any
Destination addresses: any
Applications: any
Dynamic Applications: junos:HTTP, junos:SSL
Action: permit, application services, log

```

The following example displays the output with unified policies configured.

```
user@host> show security policies
```

```

Default policy: deny-all
Pre ID default policy: permit-all
From zone: trust, To zone: untrust
Policy: p2, State: enabled, Index: 4, Scope Policy: 0, Sequence number: 1
Source addresses: any
Destination addresses: any
Applications: junos-defaults
Dynamic Applications: junos:GMAIL, junos:FACEBOOK-CHAT
dynapp-redir-profile: profile1

```

### show security policies policy-name detail

```
user@host> show security policies policy-name p1 detail
```

```

Policy: p1, action-type: permit, State: enabled, Index: 4, Scope Policy: 0
Description: The policy p1 is for the sales team
Sequence number: 1
From zone: trust, To zone: untrust
Source addresses:
  sa-1-ipv4: 198.51.100.11/24
  sa-2-ipv6: 2001:db8:a0b:12f0::1/32
  sa-3-ipv6: 2001:db8:a0b:12f0::9/32
  sa-4-wc: 203.0.113.1/255.255.0.255
Destination addresses:
  da-1-ipv4: 192.0.2.0/24
  da-2-ipv6: 2001:db8:a0b:12f0::1/32
  da-3-ipv6: 2001:db8:a0b:12f0::9/32
  da-4-wc: 192.168.22.11/255.255.0.255
Source identities:
  role1
  role2
  role4
Application: any
  IP protocol: 0, ALG: 0, Inactivity timeout: 0
  Source port range: [0-0]
  Destination port range: [0-0]
Destination Address Translation: drop translated
Application firewall :
Rule-set: my_ruleset1
  Rule: rule1
    Dynamic Applications: junos:FACEBOOK-ACCESS, junos:YMSG
    Dynamic Application groups: junos:web, junos:chat
    Action: deny
  Default rule: permit
Session log: at-create, at-close
Scheduler name: sch20
Per policy TCP Options: SYN check: No, SEQ check: No

```

```

Policy statistics:
  Input bytes      :      18144      545 bps
    Initial direction:      9072      272 bps
    Reply direction :      9072      272 bps
  Output bytes     :      18144      545 bps
    Initial direction:      9072      272 bps
    Reply direction :      9072      272 bps
  Input packets    :         216         6 pps
    Initial direction:         108         3 bps
    Reply direction :         108         3 bps
  Output packets   :         216         6 pps
    Initial direction:         108         3 bps
    Reply direction :         108         3 bps
  Session rate     :         108         3 sps
  Active sessions  :          93
  Session deletions :          15
  Policy lookups    :         108

```

The following example displays the output with unified policies configured.

```
user@host> show security policies policy-name p1 detail
```

```

Default policy: permit-all
Pre ID default policy: permit-all
From zone: trust, To zone: trust
Policy: p1, State: enabled, Index: 4, Scope Policy: 0, Sequence number: 1
Source addresses: any
Destination addresses: any
Applications: any
Action: reject
dynapp-redir-profile: profile1

```

#### show security policies (Services-Offload)

```
user@host> show security policies
```

```

Policy: p1, action-type: reject, State: enabled, Index: 4, Scope Policy: 0
Policy Type: Configured
Sequence number: 1
From zone: trust, To zone: trust
Source addresses:
  any-ipv4(global): 0.0.0.0/0
  any-ipv6(global): ::/0
Destination addresses:
  any-ipv4(global): 0.0.0.0/0
  any-ipv6(global): ::/0
Application: any
IP protocol: 0, ALG: 0, Inactivity timeout: 0
Source port range: [0-0]
Destination port range: [0-0]
dynapp-redir-profile: profile1(1)
Per policy TCP Options: SYN check: No, SEQ check: No, Window scale: No

```

#### show security policies (Device Identity)

```
user@host> show security policies
```

```

From zone: trust, To zone: untrust
Policy: dev-id-marketing, State: enabled, Index: 5, Scope Policy: 0,
Sequence number: 1
Source addresses: any
Destination addresses: any

```

```

source-end-user-profile: marketing-profile
Applications: any
Action: permit

```

### show security policies detail

```
user@host> show security policies detail
```

```

Default policy: deny-all
Policy: p1, action-type: permit, services-offload:enabled , State: enabled, Index:
4, Scope Policy: 0
Policy Type: Configured
Description: The policy p1 is for the sales team
Sequence number: 1
From zone: trust, To zone: untrust
Source addresses:
  any-ipv4(global): 0.0.0.0/0
  any-ipv6(global): ::/0
Destination addresses:
  any-ipv4(global): 0.0.0.0/0
  any-ipv6(global): ::/0
Source identities:
  role1
  role2
  role4
Application: any
  IP protocol: 0, ALG: 0, Inactivity timeout: 0
  Source port range: [0-0]
  Destination port range: [0-0]
Per policy TCP Options: SYN check: No, SEQ check: No
Policy statistics:
  Input bytes      :          18144          545 bps
  Initial direction:          9072          272 bps
  Reply direction  :          9072          272 bps
  Output bytes     :          18144          545 bps
  Initial direction:          9072          272 bps
  Reply direction  :          9072          272 bps
  Input packets    :           216           6 pps
  Initial direction:          108           3 bps
  Reply direction  :          108           3 bps
  Output packets   :           216           6 pps
  Initial direction:          108           3 bps
  Reply direction  :          108           3 bps
  Session rate     :          108           3 sps
  Active sessions  :           93
  Session deletions:           15
  Policy lookups   :          108
Policy: p2, action-type: permit, services-offload:enabled , State: enabled, Index:
5, Scope Policy: 0
Policy Type: Configured
Description: The policy p2 is for the sales team
Sequence number: 1
From zone: untrust, To zone: trust
Source addresses:
  any-ipv4(global): 0.0.0.0/0
  any-ipv6(global): ::/0
Destination addresses:
  any-ipv4(global): 0.0.0.0/0
  any-ipv6(global): ::/0
Source identities:
  role1

```

```

role2
role4
Application: any
  IP protocol: 0, ALG: 0, Inactivity timeout: 0
  Source port range: [0-0]
  Destination port range: [0-0]
Per policy TCP Options: SYN check: No, SEQ check: No

```

The following example displays the output with unified policies configured.

```
user@host> show security policies detail
```

```

Default policy: deny-all
Pre ID default policy: permit-all
Policy: p2, action-type: reject, State: enabled, Index: 4, Scope Policy: 0
  Policy Type: Configured
  Sequence number: 1
  From zone: trust, To zone: untrust
  Source addresses:
    any-ipv4(global): 0.0.0.0/0
    any-ipv6(global): ::/0
  Destination addresses:
    any-ipv4(global): 0.0.0.0/0
    any-ipv6(global): ::/0
  Application: junos-defaults
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [443-443]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [5432-5432]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [80-80]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [3128-3128]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [8000-8000]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [8080-8080]
    IP protocol: 17, ALG: 0, Inactivity timeout: 60
      Source port range: [0-0]
      Destination port range: [1-65535]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [443-443]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [5432-5432]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [80-80]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [3128-3128]
    IP protocol: 6, ALG: 0, Inactivity timeout: 1800
      Source port range: [0-0]
      Destination port range: [8000-8000]

```

```

IP protocol: 6, ALG: 0, Inactivity timeout: 1800
Source port range: [0-0]
Destination port range: [8080-8080]
IP protocol: 17, ALG: 0, Inactivity timeout: 60
Source port range: [0-0]
Destination port range: [1-65535]
Dynamic Application:
  junos:FACEBOOK-CHAT: 10704
  junos:GMAIL: 51
dynapp-redir-profile: profile1(1)
Per policy TCP Options: SYN check: No, SEQ check: No, Window scale: No

```

### show security policies detail (TCP Options)

```

user@host> show security policies policy-name p2 detail
node0:
-----
Policy:p2, action-type:permit, State: enabled,Index: 4, Scope Policy: 0
Policy Type: Configured
Sequence number: 1
From zone: trust, To zone: trust
Source addresses:
  any-ipv4(global): 0.0.0.0/0
  any-ipv6(global): ::/0
Destination addresses:
  any-ipv4(global): 0.0.0.0/0
  any-ipv6(global): ::/0
Application: junos-defaults
  IP protocol: tcp, ALG: 0, Inactivity timeout: 0
  Source port range: [0-0]
  Destination port range: [80-80]
Per policy TCP Options: SYN check: No, SEQ check: No, Window scale: No
Dynamic-application: junos:HTTP

```

### show security policies policy-name (Negated Address)

```

user@host> show security policies policy-name p1
node0:
-----
From zone: trust, To zone: untrust
Policy: p1, State: enabled, Index: 4, Scope Policy: 0, Sequence number: 1
Source addresses(excluded): as1
Destination addresses(excluded): as2
Applications: any
Action: permit

```

### show security policies policy-name detail (Negated Address)

```

user@host> show security policies policy-name p1 detail
node0:
-----
Policy: p1, action-type: permit, State: enabled, Index: 4, Scope Policy: 0
Policy Type: Configured
Sequence number: 1
From zone: trust, To zone: untrust
Source addresses(excluded):
  ad1(ad): 255.255.255.255/32
  ad2(ad): 198.51.100.1/24
  ad3(ad): 198.51.100.6 ~ 198.51.100.56
  ad4(ad): 192.0.2.8/24

```

```
ad5(ad): 198.51.100.99 ~ 198.51.100.199
ad6(ad): 203.0.113.9/24
ad7(ad): 203.0.113.23/24
Destination addresses(excluded):
ad13(ad2): 198.51.100.76/24
ad12(ad2): 198.51.100.88/24
ad11(ad2): 192.0.2.23 ~ 192.0.2.66
ad10(ad2): 192.0.2.93
ad9(ad2): 203.0.113.76 ~ 203.0.113.106
ad8(ad2): 203.0.113.199
Application: any
IP protocol: 0, ALG: 0, Inactivity timeout: 0
Source port range: [0-0]
Destination port range: [0-0]
Per policy TCP Options: SYN check: No, SEQ check: No
```

### show security policies global

```
user@host> show security policies global policy-name Pa
node0:
-----
Global policies:
Policy: Pa, State: enabled, Index: 6, Scope Policy: 0, Sequence number: 1
From zones: any
To zones: any
Source addresses: H0
Destination addresses: H1
Applications: junos-http
Action: permit
```



## show services unified-access-control counters

**Syntax** `show services unified-access-control counters`

**Release Information** Command introduced in Junos OS Release 12.1X44-D10.

**Description** Display the number of sessions allowed, denied, and terminated by the Unified Access Control (UAC) service when invoked by a firewall policy with the `uac-policy` action. Counts are reported for each action taken by UAC. Sessions that were allowed, denied, or terminated by other firewall policy actions are not included in these statistics.

On SRX1500, SRX5400, SRX5600, and SRX5800 devices, UAC counts are grouped and displayed for each PIC on the device. On SRX 300, SRX 320, SRX 340, SRX 345 SRX Series devices, UAC counts are accumulated by device only. There is no PIC specification on these devices.

**Required Privilege Level** view

**Related Documentation**

- *Firewall User Authentication Overview*

**List of Sample Output** [show services unified-access-control counters on page 374](#)

**Output Fields** [Table 25 on page 373](#) lists the output fields for the `show services unified-access-control counters` command. Output fields are listed in the approximate order in which they appear.

*Table 25: show services unified-access-control counters Output Fields*

Field Name	Field Description
PIC	If applicable, the number of each PIC implementing UAC. UAC statistics are grouped by PIC.
Sessions allowed	The sessions permitted by UAC when invoked by a user role firewall policy.
Policy action	Number of sessions permitted by UAC based on the UAC policy action.
Timeout action	Number of sessions permitted by the timeout action while the SRX was disconnected from the UAC device.
Sessions denied	The sessions denied by UAC when invoked by a user role firewall policy.
Unauthenticated	Number of sessions denied by UAC because the user was not authenticated.
Policy action	Number of sessions denied by UAC based on the UAC policy action.
Policy not matched	Number of sessions denied because no UAC policy match was found.

Table 25: show services unified-access-control counters Output Fields (continued)

Field Name	Field Description
Timeout action	Number of sessions denied by the timeout action while the SRX was disconnected from the access control device.
Sessions terminated	The sessions originally permitted that were later terminated.
Reevaluation	Number of sessions terminated due to a change in the UAC user roles associated with the session.
Signout	Number of sessions terminated due to the user signing out.

## Sample Output

### show services unified-access-control counters

```

user@host> show services unified-access-control counters
PIC: fpc2.pic0
  Sessions allowed
    Policy action: 0
    Timeout action: 0
  Sessions denied
    Unauthenticated: 0
    Policy action: 0
    Policy not matched: 0
    Timeout action: 0
  Sessions terminated
    Reevaluation: 0
    Signout: 0

```

Statistics on SRX 300, SRX 320, SRX 340, and SRX 345 devices are accumulated by device only. There is no PIC specification on these devices.

```

user@host> show services unified-access-control counters
Sessions allowed
  Policy action: 0
  Timeout action: 0
Sessions denied
  Unauthenticated: 0
  Policy action: 0
  Policy not matched: 0
  Timeout action: 0
Sessions terminated
  Reevaluation: 0
  Signout: 0

```

## show services unified-access-control policies

<b>Syntax</b>	show services unified-access-control policies
<b>Release Information</b>	Command introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Display a summary of resource access policies configured from the IC Series UAC Appliance.</p> <p>Use this command when you have configured the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series appliance.</p>
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>detail</b>—Display a detailed view of all policies.</li> <li>• <b>identifier <i>id</i></b>—Display information about a specific policy by identification number.</li> </ul>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Firewall User Authentication Overview</i></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show services unified-access-control policies on page 375</a></p> <p><a href="#">show services unified-access-control policies detail on page 375</a></p> <p><a href="#">show services unified-access-control policies identifier 1 on page 376</a></p>

## Sample Output

### show services unified-access-control policies

```

user@host> services unified-access-control policies
Id      Resource                Action Apply      Role identifier
1       10.100.15.0/24:*        allow selected  1113249951.100616.0
2       10.100.17.0/24:*        deny  all

```

## Sample Output

### show services unified-access-control policies detail

```

user@host> services unified-access-control policies detail
Identifier: 1
Resource: 10.100.15.0/24:*
Resource: 10.100.16.23-10.100.16.60:*
Action: allow
Apply: selected
Role identifier      Role name
1113249951.100616.0  Personal Firewall
1112927873.881659.0  Antivirus
1183670148.427197.0  UAC
Identifier: 2

```

```
Resource: 10.100.17.0/24:*
Resource: 10.100.16.23-10.100.16.60:*
Resource: 10.100.18.0/24:*
Action: deny
Apply: all
```

## Sample Output

### show services unified-access-control policies identifier 1

```
user@host> show services unified-access-control policies identifier 1
Identifier: 1
Resource: 10.100.15.0/24:*
Resource: 10.100.16.23-10.100.16.60:*
Action: allow
Apply: selected
Role identifier      Role name
1113249951.100616.0 Personal Firewall
1112927873.881659.0 Antivirus
1183670148.427197.0 UAC
```

## show services unified-access-control roles

<b>Syntax</b>	show services unified-access-control roles
<b>Release Information</b>	Command introduced in Junos OS Release 12.1.
<b>Description</b>	When implementing user role firewall, display a summary of the roles that have been pushed to the SRX Series device from the access control service.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Security Basics Guide for Security Devices</i></li> <li>• <i>Firewall User Authentication Overview</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show services unified-access-control roles on page 377</a>
<b>Output Fields</b>	<a href="#">Table 26 on page 377</a> lists the output fields for the <b>show services unified-access-control roles</b> command. Output fields are listed in the approximate order in which they appear.

Table 26: show services unified-access-control roles Output Fields

Field Name	Field Description
Name	Name of the user role.
Identifier	Unique identifier associated with the specified user role.
Total	Total number of user roles specified in the table.

## Sample Output

### show services unified-access-control roles

```

user@host> show services unified-access-control roles
Name                               Identifier
Users                             0000000001.000005.0
admin-1                           1420298444.225667.0
Total: 2

```

## show services unified-access-control status

---

**Syntax**    `show services unified-access-control status`

**Release Information**    Command introduced in Junos OS Release 9.4.

**Description**    Display the status of the connection between the SRX Series device and the IC Series UAC Appliance as well as statistics to help debug connections to the IC Series appliance.

Use this command when you have configured the SRX Series device to act as a Junos OS Enforcer in a Unified Access Control (UAC) deployment. When deployed as a Junos OS Enforcer, the SRX Series device enforces the policies that are defined on the UAC's IC Series appliance.

**Required Privilege Level**    view

**Related Documentation**

- *Firewall User Authentication Overview*

**List of Sample Output**    [show services unified-access-control status on page 378](#)

### Sample Output

`show services unified-access-control status`

```
user@host> show services unified-access-control status
Host      Address      Port  Interface  State
dev106vm26 10.64.11.106 11123 ge-0/0/0.0 connected
dev107vm26 10.64.11.106 11123 ge-0/0/0.0 closed
```

## [show services user-identification active-directory-access domain-controller status](#)

<b>Syntax</b>	<code>show services user-identification active-directory-access domain-controller status</code> <code>&lt;domain <i>name</i>&gt; &lt;node (<i>node-id</i>   all   local   primary)&gt; &lt;brief   extensive&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 12.1X47-D10.
<b>Description</b>	Display status information for the Active Directory domain controllers configured for the integrated user firewall feature.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>domain <i>name</i></b>—(Optional) Display the status of the domain controllers for a specific domain.</li> <li>• <b>node</b>—(Optional) For chassis cluster configurations, display the status of the domain controllers for a specific node. <ul style="list-style-type: none"> <li>• <b><i>node-id</i></b>—Identification number of the node. It can be 0 or 1.</li> <li>• <b>all</b>—Display information about all nodes.</li> <li>• <b>local</b>—Display information about the local node.</li> <li>• <b>primary</b>—Display information about the primary node.</li> </ul> </li> <li>• <b>brief   extensive</b>—Display the specified level of output (the default is brief).</li> </ul>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">active-directory-access on page 139</a></li> <li>• <i>show services user-identification active-directory-access active-directory-authentication-table</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show services user-identification active-directory-access domain-controller status on page 380</a> <a href="#">show services user-identification active-directory-access domain-controller status brief domain on page 380</a> <a href="#">show services user-identification active-directory-access domain-controller status extensive domain on page 380</a>
<b>Output Fields</b>	<a href="#">Table 27 on page 379</a> lists the output fields for the <code>show services user-identification active-directory-access domain-controller status</code> command.

*Table 27: show services user-identification active-directory-access domain-controller Output Fields*

Field Name	Field Description
Domain controller	Domain controller name.

Table 27: *show services user-identification active-directory-access domain-controller Output Fields (continued)*

Field Name	Field Description
Address	IP address of the domain controller.
Status	Connection status of the domain controller: connected or disconnected.
Reason	Reason for a disconnected status: network issue, authentication failed, or host unreachable.

## Sample Output

### show services user-identification active-directory-access domain-controller status

Displays brief information for domain controllers in all configured domains.

```
user@host> show services user-identification active-directory-access domain-controller status
Domain: example-domain-controller.com
  Domain controller  Address      Status
  DC1                203.0.113.51 Connected
  DC2                203.0.113.12 Connected
  DC3                203.0.113.6  Connected
  DC4                203.0.113.11 Disconnected
  DC5                203.0.113.7  Disconnected

Domain: example-domain
  Domain controller  Address      Status
  example-domain10   10.1.1.1     Disconnected
  example-domain20   10.2.2.2     Disconnected
  example-domain30   10.3.3.3     Disconnected
```

## Sample Output

### show services user-identification active-directory-access domain-controller status brief domain

```
user@host> show services user-identification active-directory-access domain-controller status
brief domain example-domain-controller.com
Domain: example-domain-controller.com
  Domain controller  Address      Status
  DC1                203.0.113.51 Connected
  DC2                203.0.113.12 Connected
  DC3                203.0.113.6  Connected
  DC4                203.0.113.11 Disconnected
  DC5                203.0.113.7  Disconnected
```

## Sample Output

### show services user-identification active-directory-access domain-controller status extensive domain

```
user@host> show services user-identification active-directory-access domain-controller status
extensive domain example-domain
Domain: example-domain
  Domain controller: example-domain10
  Address: 10.1.1.1
  Status: Disconnected
```



Reason: Network issue  
Domain controller: example-domain20  
Address: 10.2.2.2  
Status: Disconnected  
Reason: Authentication failed  
Domain controller: example-domain30  
Address: 10.3.3.3  
Status: Disconnected  
Reason: Host unreachable

## show services user-identification active-directory-access statistics

<b>Syntax</b>	show services user-identification active-directory-access statistics (ip-user-mapping   ip-user-probe   user-group-mapping) <domain <i>name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 12.1X47-D10.
<b>Description</b>	Display statistics about IP address-to-user mapping, user-to-group mapping, and IP user probes used for the integrated user firewall feature. If two domains are configured, output is provided per domain.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>ip-user-mapping</b>—Number of total queries and failed queries to the event log on the domain controller for address-to-user mappings. Includes additional information, such as the log scan interval and the timestamp of the last event read.</li> <li>• <b>ip-user-probe</b>—Number of total PC probes and failed probes.</li> <li>• <b>user-group-mapping</b>—Number of total queries and failed queries to the LDAP server for user-to-group mappings</li> <li>• <b>domain <i>name</i></b>—(Optional) Display the statistics for the specified domain.</li> </ul>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear services user-identification active-directory-access on page 338</a></li> <li>• <a href="#">ip-user-mapping on page 232</a></li> <li>• <a href="#">request services user-identification active-directory-access ip-user-probe on page 344</a></li> <li>• <a href="#">user-group-mapping on page 315</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show services user-identification active-directory-access statistics ip-user-mapping on page 383</a> <a href="#">show services user-identification active-directory-access statistics ip-user-probe on page 384</a> <a href="#">show services user-identification active-directory-access statistics user-group-mapping on page 384</a>
<b>Output Fields</b>	<a href="#">Table 28 on page 382</a> lists the output fields for the <b>show services user-identification active-directory-access statistics ip-user-mapping</b> command.

Table 28: show services user-identification active-directory-access statistics ip-user-mapping Output Fields

Field Name	Field Description
Host	IP address of the domain controller.

**Table 28: show services user-identification active-directory-access statistics ip-user-mapping Output Fields (continued)**

Field Name	Field Description
Initial event log timespan	When the feature is first deployed, the number of previous hours for which the event log on the domain controller is read. A one means the last hour of the event log is read.
Eventlog scan interval	Number of seconds between event log scans.
Total log query number	Count of the queries on the event log.
Failed log query number	Count of the failed queries on the event log.
Log read number	Count of the times the event log was read.
Latest timestamp	Year:month:date:hours:minutes:seconds is the timestamp taken from the event log. Timestamp records the latest statistics updated time of the SRX Series devices.

Table 29 on page 383 lists the output fields for the **show services user-identification active-directory-access statistics ip-user-probe** command.

**Table 29: show services user-identification active-directory-access statistics ip-user-probe Output Fields**

Field Name	Field Description
Total user probe number	Count of the probes of IP addresses to get IP address-to-user mappings.
Failed user probe number	Count of failed probe attempts.

Table 30 on page 383 lists the output fields for the **show services user-identification active-directory-access statistics user-group-mapping** command.

**Table 30: show services user-identification active-directory-access statistics user-group-mapping Output Fields**

Field Name	Field Description
Host	IP address and port being queried.
Total query number	Count of queries.
Failed query number	Count of failed query attempts.

## Sample Output

### show services user-identification active-directory-access statistics ip-user-mapping

```

user@host> show services user-identification active-directory-access statistics ip-user-mapping
Domain: example-domain1.com
Host: 192.0.2.192
Initial event log timespan : 1
Eventlog scan interval : 60

```

```
Total log query number : 240
Failed log query number : 0
Log read number : 838
Latest timestamp :2013-10-11:15:11:54
Host: 192.0.2.50
Initial event log timespan : 1
Eventlog scan interval : 60
Total log query number : 273
Failed log query number : 0
Log read number : 2012
Latest timestamp :2013-10-11:15:11:23
Domain: example-domain2.com
Host: 192.0.2.39
Initial event log timespan : 1
Eventlog scan interval : 10
Total log query number : 1596
Failed log query number : 0
Log read number : 6691
Latest timestamp :2013-10-11:15:25:03
Host: 192.0.2.1
Initial event log timespan : 1
Eventlog scan interval : 10
Total log query number : 2628
Failed log query number : 0
Log read number : 114953
Latest timestamp :2013-10-11:15:24:01
```

## Sample Output

**show services user-identification active-directory-access statistics ip-user-probe**

```
user@host> show services user-identification active-directory-access statistics ip-user-probe
Domain: example-domain3.com
Total user probe number : 176116
Failed user probe number : 916
Domain: example-domain3.com
Total user probe number : 17632
Failed user probe number : 342
```

## Sample Output

**show services user-identification active-directory-access statistics user-group-mapping**

```
user@host> show services user-identification active-directory-access statistics
user-group-mapping
Domain: example-domain3.com
Host: 192.0.2.1 Port 389
Total query number : 176116
Failed query number : 916
Domain: example-domain3.com
Host: 192.0.2.5 Port 389
Total query number : 8965
```

## show services user-identification active-directory-access user-group-mapping

<b>Syntax</b>	show services user-identification active-directory-access user-group-mapping (group <i>name</i>   status   user <i>name</i> ) domain <i>name</i>
<b>Release Information</b>	Command introduced in Junos OS Release 12.1X47-D10.
<b>Description</b>	Display user-to-group mapping information used in the integrated user firewall feature. Note that the LDAP server is often part of the domain controller.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>group <i>group-name</i></b>—Display the users mapped to the specified group.</li> <li>• <b>status</b>—Display the status of the last query to the LDAP server for user-group mapping.</li> <li>• <b>user <i>name</i></b>—Display the groups for the specified username.</li> <li>• <b>domain <i>name</i></b>—(Optional) Display the group, status, or user information for the specified domain.</li> </ul>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">LDAP Functionality in Integrated User Firewall</a></li> <li>• <a href="#">user-group-mapping on page 315</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show services user-identification active-directory-access user-group-mapping group domain on page 386</a> <a href="#">show services user-identification active-directory-access user-group-mapping status on page 386</a> <a href="#">show services user-identification active-directory-access user-group-mapping user on page 387</a>
<b>Output Fields</b>	<a href="#">Table 31 on page 385</a> lists the output fields for the <b>show services user-identification active-directory-access user-group-mapping group</b> command.

*Table 31: show services user-identification active-directory-access user-group-mapping group Output Fields*

Field Name	Field Description
Domain	Domain of the specified group.
Users	Username mapped to the specified group.

[Table 32 on page 386](#) lists the output fields for the **show services user-identification active-directory-access user-group-mapping status** command.

*Table 32: show services user-identification active-directory-access user-group-mapping status Output Fields*

Field Name	Field Description
Domain	Domain for which the status is displayed.
LDAP server	IP address of the LDAP server.
Port	Port number on the LDAP server.
Last-query-status	Status of the last query from the SRX Series device.
Last-query-time	Year-month-date:hour:minutes:seconds when the SRX device last queried the LDAP server.

Table 33 on page 386 lists the output fields for the **show services user-identification active-directory-access user-group-mapping user** command.

*Table 33: show services user-identification active-directory-access user-group-mapping user Output Fields*

Field Name	Field Description
Domain controller	Domain controller about which the user information is displayed.
Groups	Groups to which the user belongs.
Referenced by policy	Groups to which the user belongs and that are referenced by a firewall policy.

## Sample Output

### show services user-identification active-directory-access user-group-mapping group domain

```

user@host> show services user-identification active-directory-access user-group-mapping group
finance domain www.apac-acme.net
show services user-identification active-directory-access user-group-mapping group
finance-group
Domain: example-domain.net
Users: user1, user2
Domain: example2.domain.net
Users: user3

```

## Sample Output

### show services user-identification active-directory-access user-group-mapping status

```

user@host> show services user-identification active-directory-access user-group-mapping status
Domain: example-domain.net
LDAP server  Port      Last-query-status  Last-query-time
192.0.2.87    389      Query success      2014-02-07:15:50:52

Domain: example2.domain.net
LDAP server  Port      Last-query-status  Last-query-time
192.0.2.144  389      Idle               0

```

## Sample Output

`show services user-identification active-directory-access user-group-mapping user`

```
user@host> show services user-identification active-directory-access user-group-mapping user
user1
Domain example-domain.net
Groups: Dev, NAT, SBU
Referenced by policy: SBU
Domain: example2.domain.net
Groups: HR, USA
```

## show service user-identification authentication-source aruba-clearpass user-query counters

---

<b>Syntax</b>	show service user-identification authentication-source aruba-clearpass user-query counters
<b>Release Information</b>	Command introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	<p>Display statistics on the counters maintained by the user query function. The output identifies the ClearPass webserver as the destination of the user query requests. It displays the number of requests sent from the SRX Series device to the ClearPass webserver and the number of responses that the SRX Series device received from it. You can use this command to identify that a problem exists—the number of responses received is less than the number of requests sent.—and then analyze and correct it.</p> <p>If there are no problems with the communication between the ClearPass Policy Manager (CPPM) and the SRX Series device, the number of requests sent is equal to the number of responses received and the number of error responses.</p> $\text{number-of-requests} = \text{number-of-responses} + \text{error-message-responses}$ <p>The user query function is part of the SRX Series integrated ClearPass authentication and enforcement feature. The SRX Series device can automatically send requests for individual user authentication and identity information to ClearPass in the event that ClearPass does not post that information to it. For this to occur, you must have configured the user query function.</p> <p>The SRX Series device exposes to ClearPass a Web API (webapi) that ClearPass uses to send POST request messages to it automatically. These messages contain user authentication and identity information.</p> <p>The user query function supplements use of the SRX Series Web API function.</p>
<b>Options</b>	<b>authentication-source</b> —Specify aruba-clearpass to identifies Aruba ClearPass as the authentication source.
<b>Required Privilege Level</b>	view
<b>Output Fields</b>	<ul style="list-style-type: none"><li>• Webserver Address—The IP address of the ClearPass webserver.</li><li>• Access token—The token string that the SRX Series device obtains from ClearPass which allows the SRX Series device to query the ClearPass webserver for an individual user's authentication and identity information.</li><li>• Requests sent number—A counter that shows the number of individual user authentication information queries that the SRX Series device sent to the ClearPass webserver.</li><li>• Total response received number—A counter that shows the number of returns from the ClearPass webserver in response to the individual user authentication information</li></ul>



queries that the SRX Series device sent to it. The number of responses should match the number of requests unless an error occurred.

- Error response received number—The number errors that occurred in relation to requests.
- Time of last response—A timestamp showing when the last response from the ClearPass webserver was received.

## Sample Output

**show service user-identification authentication-source aruba-clearpass user-query counters**

```
user@host> show service user-identification authentication-source aruba-clearpass user-query counters
```

```
Web server Address: 4.0.0.20
Access token: 433feffae5c3eb3ff8ffdc49f968b03437ca1ce5
Request sent number: 7
Total response received number: 7
Error response received number: 0
Time of last response: 2000-01-01 11:57:17
```

## show service user-identification authentication-source aruba-clearpass user-query status

---

<b>Syntax</b>	show service user-identification authentication-source <i>authentication-source</i> user-query status
<b>Release Information</b>	Command introduced in Junos OS Release 12.3X48-D30.
<b>Description</b>	Checks to determine if the ClearPass webserver is online. The SRX Series device sends user query requests to the ClearPass webserver. The user query function is part of the SRX Series ClearPass Authentication and Enforcement feature.
<b>Options</b>	<b><i>authentication-source</i></b> —Identifies the authentication source. For the integrated ClearPass feature, you must specify the predefined term aruba-clearpass to determine if the ClearPass webserver is online.
<b>Required Privilege Level</b>	view

## show services user-identification authentication-table

**Syntax** show services user-identification authentication-table  
 <authentication-source | counter | ip-address>  
 show services user-identification authentication-table authentication-source  
 <active-directory | all | aruba-clearpass | identity-management>  
 show services user-identification authentication-table authentication-source active-directory  
 <brief | domain | extensive | group | logical-system | root-logical-system |summary |user>  
 show services user-identification authentication-table authentication-source all  
 <brief | domain | extensive |group | logical-system | root-logical-system |summary |user>  
 <domain *domain*>  
 <group (group-name | brief | domain | extensive | logical-system | root-logical-system |  
 summary)>  
 <logical-system (*logical-system-name*| all)>  
 <node (node-id | all | local | primary)>  
 <root-logical-system (enter |brief | domain | extensive | node)>  
 <user (user-name | brief | domain | extensive | logical-system | node | root-logical-system |  
 summary)>  
 show services user-identification authentication-table authentication-source active-directory  
 <brief | domain | extensive | group | logical-system | root-logical-system |summary |user>  
 show services user-identification authentication-table authentication-source  
 identity-management source-name  
 show services user-identification authentication-table counter  
 show services user-identification authentication-table ip-address  
 <summary>  
 <logical-system *logical-system-name*>  
 <root-logical-system>  
 <node *node-id*>  
 <IP address *ip-address*>

**Release Information** Command introduced in Junos OS Release 12.1X47-D10 for active directory. Support for Aruba ClearPass added in Junos OS release 12.3X48-D30 for Aruba ClearPass. Support added for identity-management as an authentication source in Junos OS Release 15.1X49-D100. Support added for logical-system for authentication-source all in Junos OS Release 18.2R1.

**Description** Display the user identity information authentication table entries for the specified authentication source. You can display the entire contents of the specified authentication source's authentication table, or you can constrain the displayed information to a specific domain, group, or user based on the user name. You can also display identity information for a user based on the IP address of the user's device. You can show brief or extensive information for all of these instances.

***authentication-source***—User authentication source whose authentication table or identity management server entries are to be displayed.

Authentication sources include:

***active-directory***—Display the SRX Series active-directory table contents. You can display all of the table's contents or you can delimit the display of user identity information by domain, group, or user name. You can display brief or extensive information for each of these categories.

- **domain**—Display the entries in the authentication table for the specified domain. You can display summary, group, or user entries for the specified domain.
- **group**—Display the entries from the authentication table for the specified group.
- **user**—Display the entries from the authentication table for the specified user based on the user name.

**aruba-clearpass**—Display the SRX Series Aruba ClearPass authentication table contents. You can display all of the table's contents or you can delimit the display of user information by domain, group, or user name. You can display brief or extensive information for each of these categories.

- **domain**—Display the entries in the authentication table for the specified domain. You can display summary, group, or user entries for the specified domain.
- **group**—Display the entries from the authentication table for the specified group.
- **user**—Display the entries from the authentication table for the specified user based on the user name.

**identity-management** —Display user identity entries contained in the identity-management authentication system.

- **source-name**—Name of the identity -management source. This could be the Juniper Identity Management Service (JIMS) or any third-party authentication source.
  - If you specify a source, such as "JIMS – Active Directory" for Juniper Identity Management Service, the SRX Series device will show entries only for that authentication source.

Possible values include:

- For JIMS: "JIMS – Active Directory", "JIMS – Exchange"
- For ClearPass: "Aruba ClearPass"
- **domain**—Display the entries in the identity management system for the specified domain. You can display summary, group, or user entries for the specified domain.
- **group**—Display the entries in the identity management system for the specified group.
- **user**—Display the entries in the identity management system for the specified user based on the user name.

- Options**
- **all**—Summary of the authentication entry information for all entries.
  - **group *group-name***—Entries from the authentication table or identity management system for the specified group.
  - **ip-address *ip-address***—Entries from the authentication table or identity management system for the specified IP address.
  - **user *name***—Entries from the authentication table for the specified username.
  - **domain *name***—Summary, group, or user entries for the specified domain.
  - **node**—(Optional) For chassis cluster configurations, the summary, IP address, or user entries for a specific node.
    - **node-id**—Identification number of the node. It can be 0 or 1.
    - **all**—Display information about all nodes.
    - **local**—Display information about the local node.
    - **primary**—Display information about the primary node.
  - **brief | extensive**—Display the specified level of output (the default is brief).
  - **logical-system**—Display the authentication entries based on the logical system name.
  - **root-logical-system**—Display the authentication entries based on the root logical system.

**Required Privilege Level**

view

**List of Sample Output**

[show services user-identification active-directory-access active-directory-authentication-table ip-address on page 395](#)  
[show services user-identification authentication-table ip-address on page 396](#)  
[show services user-identification active-directory-access active-directory-authentication-table all on page 396](#)  
[show services user-identification active-directory-access active-directory-authentication-table all extensive on page 396](#)  
[show services user-identification active-directory-access active-directory-authentication-table all domain on page 397](#)  
[All Authentication Sources on page 397](#)  
[Aruba ClearPass on page 399](#)  
[show services user-identification authentication-table authentication-source aruba-clearpass domain brief on page 401](#)  
[show services user-identification authentication-table authentication-source aruba-clearpass extensive on page 401](#)  
[show services user-identification authentication-table authentication-source identity-management brief on page 403](#)  
[show services user-identification authentication-table authentication-source identity-management extensive on page 403](#)  
[show services user-identification authentication-table authentication-source all extensive on page 404](#)

[show services user-identification authentication-table authentication-source all](#)  
[extensive on page 404](#)

Field Name	Field Description
Domain <b>Output Fields</b>	Name of the domain that the users belong to. User identity and authentication information is display for all users who belong to the domain and for whom there are entries in the specified authentication source table or repository.
Total entries	Number of user entries in the authentication table, by domain.
For each entry:	
Source IP	The IP address of the user's device. If a user is logged in to the network with more than one device, a separate entry is created for the user for each device. It showing the devices IP address.
Username	The name by which the user is logged in to the network.
Groups	A list of the groups that the user belongs to. The list can include a group that identifies the device posture.
State	<p>The state of the entry. There are four states for an authentication entry: initial, valid, invalid, and pending.</p> <ul style="list-style-type: none"> <li>An initial state is a temporary state, and it can be created from either a valid or an invalid entry. The entry had not been pushed to the Packet Forwarding Engine.</li> <li>A valid state indicates that the authentication entry has a valid IP address, domain, and username. The authentication entry is pushed to the Packet Forwarding Engine.</li> <li>An invalid state indicates that the entry does not have a valid IP address, domain, and username. If the entry is invalid, it is put in the null domain.</li> <li>A pending state indicates that the entry was created after the user query was sent and before the response was received. The IP address is being probed.</li> </ul>
Source	Authentication source.
Access start date	The date when the authentication entry was created by the SRX Series device.
Access start time	The time when the authentication entry was created by the SRX Series device.
Last updated timestamp	The time when the user information was created. This value is taken from the timestamp field in the user information.
Age time:	The time, in minutes, after which the entry expires, as configured by the authentication-entry-timeout statement. If a value of 0 was specified, the entry never expires.
Forced Age time:	<p>The rest value and the forced value.</p> <p>This information is made available if you configure the firewall-authentication-forced-timeout statement for active directory.</p>

## Active Directory

**show services user-identification active-directory-access active-directory-authentication-table ip-address**

Output of this command displays authentication and identity information for a specific user based on the IP address of the user's device.

```
user@host> show services user-identification active-directory-access
active-directory-authentication-table ip-address 198.51.100.3.
Domain: ad.example.net
Source-ip: 198.51.100.3
Username: user1
Groups:group1
State: Valid
Source: wmic
Access start date: 2014-03-10
Access start time: 13:59:56
Age time: 1437
```

**show services user-identification authentication-table ip-address**

Output of this command displays authentication and identity information for a specific user based on the IP address of the user's device.

```
user@host> show services user-identification authentication-table ip-address 2001:db8::1:1
Domain: ac.example.net
Source-ip: 2001:db8::1:1
Username: user1
Groups:group1
State: Valid
Source: wmic
Access start date: 2017-05-10
Access start time: 13:59:56
Age time: 1437
```

**show services user-identification active-directory-access active-directory-authentication-table all**

Output of this command displays user authentication and identity information for all users for whom there are entries in the active directory authentication table.

```
user@host> show services user-identification active-directory-access
active-directory-authentication-table all
Domain: www.engineering-example.net
Total count: 2
Source IP      Username      Groups        State
198.51.100.22  u2           r1, r3, r4    initial
198.51.100.23  u3           r5, r6, r4    pending

Domain: www.hr-example.net
Total count: 2
Source IP      Username      Groups        State
198.51.100.26  u4           r1, r3, r4    initial
198.51.100.27  u5           r5, r6, r4    pending
```

**show services user-identification active-directory-access active-directory-authentication-table all extensive**

Output of this command, which specifies the **extensive** option, shows state and access information for all entries in the active directory authentication table, in addition to basic information displayed when the **brief** option is used and by default.



```
user@host> show services user-identification active-directory-access
active-directory-authentication-table all extensive
```

```
Domain: www.mycompany-example.com
Total entries: 2
```

```
Source IP: 198.51.100.29
Username: u2
Groups: r1, r3, r4
State: initial
Access start date: 2013-05-22
Access start time: 10:56:58
Age time: 20 min
```

```
Source IP: 198.51.100.30
Username: u3
Groups: r5, r6, r4
State: pending
Access start date: 2013-05-22
Access start time: 10:56:58
Age time: 20 min
```

```
Domain: www.hr-example.net
Total entries: 2
```

```
Source IP: 198.51.100.31
Username: u2
Groups: r1, r3, r4
State: initial
Access start date: 2013-05-22
Access start time: 10:56:58
Age time: 20 min
```

```
Source IP: 198.51.100.32
Username: u3
Groups: r5, r6, r4
State: pending
Access start date: 2013-05-22
Access start time: 10:56:58
Age time: 20
```

### show services user-identification active-directory-access active-directory-authentication-table all domain

Output of this command shows by default brief user identity and authentication information for all users for whom there are entries in the active directory authentication table and whose devices belong to the specified domain.

```
user@host> show services user-identification active-directory-access
active-directory-authentication-table all domain www.mydomain-example.com
```

```
Domain: www.mydomain-example.com
Total count: 2
```

Source IP	Username	Groups	State
198.51.100.36	u2	r1, r3, r4	initial
198.51.100.37	u3	r5, r6, r4	pending

### All Authentication Sources

Output of this command shows extensive user identity and authentication information for all users with entries in authentication tables of any authentication source. This

example shows only one entry to illustrate the content that is displayed with the extensive option.

```
user@host> show services user-identification authentication-table authentication-source all
extensive
```

```
Domain: ad-userfw-example.net
Total entries: 1
Source-ip: 198.51.100.1/24
Username: administrator
State: Valid
Source: firewall-authentication
Access start date: 2016-10-27
Access start time: 09:30:27
Age time: 30
```

```
user@host> show services user-identification authentication-table authentication-source all
logical-system
```

```
lsys1
node0:
```

```
-----
Logical System: root-logical-system
```

```
Domain: ad2012.jims.com
Total entries: 18003
Source IP      Username      groups(Ref by policy)      state
bbbb:bbbb:bbbb: jimsuser18000      Valid
bbbb:bbbb:bbbb: jimsuser17999      Valid
bbbb:bbbb:bbbb: jimsuser17998      Valid
bbbb:bbbb:bbbb: jimsuser17997      Valid
bbbb:bbbb:bbbb: jimsuser17996      Valid
bbbb:bbbb:bbbb: jimsuser17995      Valid
bbbb:bbbb:bbbb: jimsuser17994      Valid
bbbb:bbbb:bbbb: jimsuser17993      Valid
```

```
user@host> show services user-identification authentication-table authentication-source all
root-logical-system
```

```
node0:
```

```
-----
Logical System: root-logical-system
```

```
Domain: ad2012.jims.com
Total entries: 18003
Source IP      Username      groups(Ref by policy)      state
bbbb:bbbb:bbbb: jimsuser10745      Valid
bbbb:bbbb:bbbb: jimsuser18000      Valid
bbbb:bbbb:bbbb: jimsuser17999      Valid
bbbb:bbbb:bbbb: jimsuser17998      Valid
bbbb:bbbb:bbbb: jimsuser17997      Valid
bbbb:bbbb:bbbb: jimsuser17996      Valid
bbbb:bbbb:bbbb: jimsuser17995      Valid
bbbb:bbbb:bbbb: jimsuser17994      Valid
bbbb:bbbb:bbbb: jimsuser17993      Valid
bbbb:bbbb:bbbb: jimsuser17992      Valid
```

```
user@host> show services user-identification authentication-table
authentication-source all node 0
```

```
node0:
```

```
-----
Logical System: root-logical-system
```

```

Domain: ad2012.jims.com
Total entries: 18003
Source IP      Username      groups(Ref by policy)      state
bbbb:bbbb:bbbb: jimsuser14716
bbbb:bbbb:bbbb: jimsuser18000      Valid
bbbb:bbbb:bbbb: jimsuser17999      Valid
bbbb:bbbb:bbbb: jimsuser17998      Valid
bbbb:bbbb:bbbb: jimsuser17997      Valid
bbbb:bbbb:bbbb: jimsuser17996      Valid
bbbb:bbbb:bbbb: jimsuser17995      Valid
bbbb:bbbb:bbbb: jimsuser17994      Valid
bbbb:bbbb:bbbb: jimsuser17993      Valid

```

```

user@host> show services user-identification authentication-table authentication-source all
node 0 logical-system lsys1
node0:

```

```
-----
Logical System: root-logical-system

```

```

Domain: ad2012.jims.com
Total entries: 18003
Source IP      Username      groups(Ref by policy)      state
bbbb:bbbb:bbbb: jimsuser18000      Valid
bbbb:bbbb:bbbb: jimsuser17999      Valid
bbbb:bbbb:bbbb: jimsuser17998      Valid
bbbb:bbbb:bbbb: jimsuser17997      Valid
bbbb:bbbb:bbbb: jimsuser17996      Valid
bbbb:bbbb:bbbb: jimsuser17995      Valid
bbbb:bbbb:bbbb: jimsuser17994      Valid
bbbb:bbbb:bbbb: jimsuser17993      Valid
bbbb:bbbb:bbbb: jimsuser17992      Valid

```

```

user@host> show services user-identification authentication-table authentication-source all
node 0
node0:

```

```
-----
Logical System: root-logical-system

```

```

Domain: ad2012.jims.com
Total entries: 18003
Source IP      Username      groups(Ref by policy)      state
bbbb:bbbb:bbbb: jimsuser1213
bbbb:bbbb:bbbb: jimsuser18000      Valid
bbbb:bbbb:bbbb: jimsuser17999      Valid
bbbb:bbbb:bbbb: jimsuser17998      Valid
bbbb:bbbb:bbbb: jimsuser17997      Valid
bbbb:bbbb:bbbb: jimsuser17996      Valid
bbbb:bbbb:bbbb: jimsuser17995      Valid
bbbb:bbbb:bbbb: jimsuser17994      Valid
bbbb:bbbb:bbbb: jimsuser17993      Valid

```

## Aruba ClearPass

```

show services user-identification authentication-table authentication-source
aruba-clearpass domain extensive

```

Output of this command shows extensive user identity and authentication information, when Aruba ClearPass is used as the authentication source, for all users whose devices belong to the GLOBAL domain.

```
user@host> show services user-identification authentication-table authentication-source
aruba-clearpass domain GLOBAL extensive
Domain: GLOBAL
Total entries: 7
Source-ip: 203.0.113.21
  Username: vikiyr
  Groups: posture-healthy, accounting-grp, accounting-grp-and-company-device,
  corporate-limited, [user authenticated]
  Groups referenced by policy: accounting-grp-and-company-device,
  corporate-limited
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:20:30
  Last updated timestamp: 2015-12-22 04:02:48
  Age time: 0
Source-ip: 203.0.113.89
  Username: abewhfy
  Groups: posture-unknown, marketing-access-limited-grp, [user authenticated]
  Groups referenced by policy: marketing-access-limited-grp
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:31:40
  Last updated timestamp: 2015-12-22 04:18:48
  Age time: 0
Source-ip: 203.0.113.52
  Username: jjxchan
  Groups: posture-healthy, marketing-access-for-pcs-limited-group,
  marketing-general, sales-limited, corporate-limited, [user authenticated]
  Groups referenced by policy: marketing-access-for-pcs-limited-group,
  corporate-limited
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:22:48
  Last updated timestamp: 2015-12-22 05:46:21
  Age time: 0
Source-ip: 203.0.113.53
  Username: ltchen1
  Groups: posture-healthy, human-resources-grp, accounting-limited,
  corporate-limited, [user authenticated]
  Groups referenced by policy: corporate-limited
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:21:37
  Last updated timestamp: 2015-12-22 05:41:18
  Age time: 0
Source-ip: 203.0.113.54
  Username: guest1
  Groups: posture-healthy, guest, [user authenticated]
  State: Valid
  Source: Aruba ClearPass
  Access start date: 2016-03-08
  Access start time: 17:23:10
  Last updated timestamp: 2015-12-22 05:50:47
```

```

Age time: 0
Source-ip: 203.0.113.55
Username: guest2
Groups:posture-healthy, guest-device-byod, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:23:21
Last updated timestamp: 2015-12-22 05:52:44
Age time: 0
Source-ip: 2001:db8:4136:e378:8000:63bf:3fff:fdd2
Username: guest3
Groups:posture-healthy, guest-device-grp, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:23:21
Last updated timestamp: 2015-12-22 05:52:44
Age time: 0

```

#### show services user-identification authentication-table authentication-source aruba-clearpass domain brief

Output of this command shows brief user identity and authentication information for users whose devices belong to the GLOBAL domain.

If you do not specify brief, the same information would be displayed. The default behavior is to show brief output.

```

user@host> show services user-identification authentication-table authentication-source
aruba-clearpass domain GLOBAL brief

```

```

Domain: GLOBAL
Total entries: 6
Source IP                               Username      groups(Ref by policy)
state
203.0.113.71                             taviki2
accounting-grp-and-company-dev Valid
203.0.113.89                             gabewb1
marketing-access-limited-grp Valid
203.0.113.92                             tljxchan
marketing-access-for-pcs-limit Valid
203.0.113.93                             tjlchen1      corporate-limited
Valid
203.0.113.94                             guest1
Valid
203.0.113.95                             guest2
Valid
2001:db8:4136:e378:8000:63bf:3fff:fdd2 guest2
Valid

```

#### show services user-identification authentication-table authentication-source aruba-clearpass extensive

Output of the following command shows extensive user identity and authentication information for all users authenticated by Aruba ClearPass for whom entries exist in the aruba-clearpass authentication table.

```

user@host> show services user-identification authentication-table authentication-source
aruba-clearpass extensive

```

Domain: GLOBAL  
Total entries: 7

Source-ip: 203.0.113.31  
Username: vjki2  
Groups:posture-healthy, accounting-grp, accounting-grp-and-company-device, corporate-limited, [user authenticated]  
Groups referenced by policy:accounting-grp-and-company-device, corporate-limited  
State: Valid  
Source: Aruba ClearPass  
Access start date: 2016-03-08  
Access start time: 17:20:30  
Last updated timestamp: 2015-12-22 04:02:48  
Age time: 0

Source-ip: 203.0.113.89  
Username: labew11  
Groups:posture-unknown, marketing-access-limited-grp, [user authenticated]  
Groups referenced by policy:marketing-access-limited-grp  
State: Valid  
Source: Aruba ClearPass  
Access start date: 2016-03-08  
Access start time: 17:31:40  
Last updated timestamp: 2015-12-22 04:18:48  
Age time: 0

Source-ip: 203.0.113.62  
Username: dxchan45  
Groups:posture-healthy, marketing-access-for-pcs-limited-group, marketing-general, sales-limited, corporate-limited, [user authenticated]  
Groups referenced by policy:marketing-access-for-pcs-limited-group, corporate-limited  
State: Valid  
Source: Aruba ClearPass  
Access start date: 2016-03-08  
Access start time: 17:22:48  
Last updated timestamp: 2015-12-22 05:46:21  
Age time: 0

Source-ip: 2001:db8:4136:e378:8000:63bf:3fff:fdd2  
Username: efchan47  
Groups:posture-healthy, marketing-access-for-pcs-limited-group, marketing-general, sales-limited, corporate-limited, [user authenticated]  
Groups referenced by policy:marketing-access-for-pcs-limited-group, corporate-limited  
State: Valid  
Source: Aruba ClearPass  
Access start date: 2016-03-08  
Access start time: 17:22:48  
Last updated timestamp: 2015-12-22 05:46:21  
Age time: 0

Source-ip: 203.0.113.83  
Username: ljhen1  
Groups:posture-healthy, human-resources-grp, accounting-limited, corporate-limited, [user authenticated]  
Groups referenced by policy:corporate-limited  
State: Valid  
Source: Aruba ClearPass  
Access start date: 2016-03-08  
Access start time: 17:21:37  
Last updated timestamp: 2015-12-22 05:41:18  
Age time: 0

Source-ip: 203.0.113.34

```

Username: guest1
Groups:posture-healthy, guest, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:23:10
Last updated timestamp: 2015-12-22 05:50:47
Age time: 0
Source-ip: 203.0.113.95
Username: guest2
Groups:posture-healthy, guest-device-byod, [user authenticated]
State: Valid
Source: Aruba ClearPass
Access start date: 2016-03-08
Access start time: 17:23:21
Last updated timestamp: 2015-12-22 05:52:44
Age time: 0

```

## Identity Management

### show services user-identification authentication-table authentication-source identity-management brief

Output of this command displays brief user authentication and identity information for all users for whom there are entries in the identity-management authentication source.

```

user@host> show services user-identification authentication-table authentication-source
identity-management brief
Domain: ad-domaine-example.net
Total entries: 5
Source IP      Username      groups(Ref by policy)      state
198.51.100.63  N/A          administrator              Valid
203.0.113.30   administrator
203.0.113.18   N/A          administrator              Valid
198.51.100.69  N/A          administrator              Valid
198.51.100.66  administrator
Domain: NULL
Total entries: 1
Source IP      Username      groups(Ref by policy)

```

### show services user-identification authentication-table authentication-source identity-management extensive

Output of this command displays extensive user authentication and identity information for all users for whom there are entries in the identity-management authentication source.

```

user@host> show services user-identification authentication-table authentication-source
identity-management extensive
Domain: ad-domain2-example.net
Total entries: 5
Source-ip: 198.51.100.63
Username: N/A
Groups:posture-healthy
State: Valid
Source: JIMS - Active Directory
Access start date: 2017-06-05
Access start time: 09:28:45
Last updated timestamp: 2017-06-06 08:41:56
Age time: 0
Source-ip: 198.51.100.66

```

```
Username: administrator
Groups:posture-healthy, group policy creator owners, enterprise admins, schema
admins, domain admins,
administrators, denied rod password replication group
State: Valid
Source: JIMS - Active Directory
Access start date: 2017-06-05
Access start time: 09:23:44
Last updated timestamp: 2017-06-06 08:11:45
Age time: 0
```

### **show services user-identification authentication-table authentication-source all extensive**

Output of this command, which specifies the extensive option, shows state and access information for all entries.

```
user@host> show services user-identification authentication-table authentication-source
identity-management extensive
Domain: jims-dom1.local
Total entries: 1
Source-ip: 2001:db8:4136:e378:8000:63bf:3fff:fdd2
Username: user1
Groups:posture-healthy
Groups referenced by policy:posture-healthy
State: Valid
Source: JIMS - Active Directory
Access start date: 2017-08-23
Access start time: 15:06:32
Last updated timestamp: 2017-06-07 02:50:10
Age time: 30
```

## **Firewall Authentication Forced Age Timeout**

Output shows the “Forced Age timeout” value is displayed when the firewall authentication forced timeout function is configured, but only for when the extensive option is used. The value shows the remaining time left based on the forced timeout setting.

### **show services user-identification authentication-table authentication-source all extensive**

```
user@host> show services user-identification authentication-table
authentication-source all extensive
Domain: ad-userfw.net
Total entries: 1
Source-ip: 198.51.100.98
Username: administrator
State: Valid
Source: firewall-authentication
Access start date: 2016-10-27
Access start time: 09:30:27
Age time: 30
Forced Age time: 30/180
```



## show service user-identification identity-management

<b>Syntax</b>	show service user-identification identity-management (counter   status)
<b>Release Information</b>	Command introduced in Junos OS Release 15.1X49-D100 for identity-management as the authentication source.
<b>Description</b>	Display statistical data about the advanced user query function batch queries and IP queries, or show status on the Juniper Identity Management Service servers.
<b>Options</b>	<p>The following information is displayed for the primary server and the secondary server separately.</p> <p><b>counter</b>—Display counters for batch and IP queries send to the Juniper Identity Management Service device an responses received from the Juniper Identity Management Service server. This is displayed separately for the primary server and the secondary server, if more than one is configured.</p> <p><b>status</b>—Verify that the Juniper Identity Management Service server is online and which server is responding to queries from the SRX Series device.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding the SRX Series Advanced Query Feature for Obtaining User Identity Information from JIMS</i></li> <li>• <a href="#">primary on page 260</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show service user-identification identity-management counter on page 406</a> <a href="#">show service user-identification identity-management status on page 406</a>

Output Fields	Token string
Access token	
Batch queries sent number	A number indicating how many batch queries the SRX Series device sent to the Juniper Identity Management Service server.
Batch queries Response received number	A number indicating how many responses the SRX Series device received from the Juniper Identity Management Service server in response to its batch queries.
Time of last response	Timestamp indicating when the last response was received.
IP queries sent number	A number indicating how many IP queries the SRX Series device sent to the Juniper Identity Management Service server.
IP queries Response received number	A number indicating how many responses the SRX Series device received from the Juniper Identity Management Service server in response to its IP queries.
Primary server address	For the status option, the IP address of the primary server.
Secondary server address	For the status option, the IP address of the secondary server.
Current working server	The Juniper Identity Management Service server that is responding to SRX Series queries.

## Sample Output

### show service user-identification identity-management counter

```

user@host> show service user-identification identity-management counter
Primary server Address:
  Access token:  token-string
  Batch queries sent number: counter
  Batch queries Response received number: counter
  Time of last response: timestamp timestamp /* when received last response
*/
  IP queries sent number: counter
  IP queries Response received number: counter
Secondary Server
  Access token:  token-string
  Batch queries sent number: counter
  Batch queries Response received number: counter
  Time of last response: timestamp timestamp /* when received last response
*/
  IP queries sent number: counter
  IP queries Response received number: counter

```

### show service user-identification identity-management status

```

user@host> show service user-identification identity-management status
Primary server Address:  iP-address
  Status: Online
Secondary server Address: iP-address
  Status: Offline
Current working server:
  Primary server

```



## show services user-identification device-information table

---

<b>Syntax</b>	<code>show services user-identification device-information table all (brief   domain   extensive)   device-id <i>device-id</i> ( brief  domain  extensive)   ip-address <i>ip-address</i></code>
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X49-D70.
<b>Description</b>	<p>Display the contents of the device identity authentication table. The device identity authentication table includes entries for authenticated devices whose information is obtained from external authentication sources. A device identity entry contains the device's IP address, the device ID, and a list of groups that the device belongs to. It also contains attributes that are configured in the device identity profile—for example, the type of device, the vendor, and the operating system that is running on the device and its version.</p> <p>The device identity authentication table is separate from the Active Directory authentication table or any other local authentication table that is used for Junos OS features, or for specific third-party authentication sources. Also, unlike local user authentication tables, which are specific to an authentication source, the device identity authentication table holds device identity information for devices authenticated by different sources.</p> <p>Only one authentication source, such as Active Directory, can be active at a time. A result of this requirement is that there is less demand on the system to process information.</p>
<b>Options</b>	<p><b>all</b>—Display information for all authenticated devices with entries in the table.</p> <p><b>device-id</b>—Display information for the authenticated device whose device ID is specified.</p> <p><b>ip-address</b>—Display information for the authenticated device whose IP address is specified.</p> <p><b>brief</b>—Display terse information for the entries in the device identity authentication table entries. You can specify <b>brief</b> as a keyword to the parameters <b>all</b> and <b>device-id</b>.</p> <p><b>domain</b> —Display the name of domain and information for all authenticated devices that belong to the domain. You can specify <b>domain</b> as a keyword to the parameters <b>all</b> and <b>device-id</b>.</p> <p><b>extensive</b>—Display <b>extensive</b> information for all of the authenticated devices for which there are table entries. It displays the domain name, the IP address of the device, the device's ID, the device category and vendor, the device type, and the operating system running on the device and its version.</p>
<b>Required Privilege Level</b>	view

- Related Documentation**
- *Understanding the Device Identity Attributes and Profiles for the Integrated User Firewall Device Identity Authentication Feature*
  - *Understanding the Device Identity Authentication Table and Its Entries*
  - *Understanding Access Control to Network Resources Based on Device Identity Information*
  - [authentication-source \(Services User Identification Device Identity\) on page 159](#)
  - [source-end-user-profile on page 286](#)

**Table 34. Output Fields** *user-identification device-information table Output Fields*

Field Name	Field Description
Domain name	The name of the domain to which the devices belong.
<b>NOTE:</b> For each authenticated device, the following information is displayed when the parameter <b>all</b> is specified after <b>table</b> and it is modified by the keyword <b>extensive</b> .	
Source IP address	The IP address of the device.
Device ID	The ID assigned to the device.
Device-Groups	The groups to which the device belongs.
device-category	The kind of device. For example, the device might be a laptop. You configured this value as part of the device identity profile.
device-vendor	The maker of the device. For example, the device vendor might be Lenovo.
device-type	The device type. If this device is a laptop made by Lenovo, it might be of type thinkpad-t430.
device-os	The operating system that is running on the device. The operating system might be Windows.
device-os-version	The version of the operating system running on the device. For example, for Windows, this might be 7.1.
Location1	The location where the device is being used. The location might be specified as United States.
Referred by	The security policy that refers to the device in its <b>source-end-user-profile</b> field. The <b>source-end-user-profile</b> that you configure might pertain to a group of devices or a single device.

## Sample Output

### show services user-identification device-information table

```

user@host> show services user-identification device-information table all extensive
Domain: example.net
Total entries: 3
Source IP:192.0.2.11

```

```

Device ID: dev01
Device-Groups: device_group01, device_group02, device_group03, device_group04,
device_group05
device-category: laptop
device-vendor: lenovo
device-type: thinkpad-t430
device-os: windows
device-os-version: 7.1
Location1: us1
Referred by: My-pf_0
Source IP: 192.0.2.12
Device ID: dev02
Device-Groups: device_group06, device_group07, device_group08, device_group09,
device_group10
device-category: laptop
device-vendor: lenovo
device-type: thinkpad-t430
device-os: windows
device-os-version: 7.1
Location1: us1
Referred by: My-pf_0
Source IP: 192.0.2.14
Device ID: dev03
Device-Groups: device_group01, device_group02, device_group03, device_group04,
device_group05
device-category: laptop
device-vendor: lenovo
device-type: thinkpad-t430
device-os: windows
device-os-version: 7.1
Location1: us1
Referred by: My-pf_0

```

```
user@host> show services user-identification device-information table all
```

```
Domain: example.net
```

```
Total entries: 1
```

Source IP	Device ID	Device-Groups
2001:db8::1:1	dev04	device-group08

#### show services user-identification device-information table all extensive

```
user@host> show services user-identification device-information table all extensive
```

```
Domain: jims-dom1.local
```

```
Total entries: 1
```

```
Source IP: 2001:db8:4136:e378:8000:63bf:3fff:fdd2
```

```
Device ID: win-test$
```

```
Device-Groups: dev, pre-windows 2000 compatible access, cert publishers,
denied rod password replication group
```

```
device-os: windows server 2012 r2 standard evaluation
```

```
device-os-version: 6.3 (9600)
```

```
Referred by: p1
```

#### show services user-identification device-information table all

```
user@host> show services user-identification device-information table all
```

```
example.net
```

```
Total entries: 1
```

Source IP	Device ID	Device-Groups
2001:db8:4136:e378:8000:63bf:3fff:fdd2	dev04	device-group08