

**Junos<sup>®</sup> OS**

---

# Layer 3 VPNs User Guide for Routing Devices

Published  
2019-12-10



Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Junos<sup>®</sup> OS Layer 3 VPNs User Guide for Routing Devices*  
Copyright © 2019 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

## YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

## END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.



# Table of Contents

## About the Documentation | xxiii

Documentation and Release Notes | xxiii

Using the Examples in This Manual | xxiii

Merging a Full Example | xxiv

Merging a Snippet | xxv

Documentation Conventions | xxv

Documentation Feedback | xxviii

Requesting Technical Support | xxviii

Self-Help Online Tools and Resources | xxix

Creating a Service Request with JTAC | xxix

## 1

## Overview of Layer 3 VPNs

### Overview | 33

Types of VPNs | 33

Layer 2 VPNs | 34

Layer 3 VPNs | 34

VPLS | 35

Virtual-Router Routing Instances | 36

VPNs and Logical Systems | 37

Understanding Layer 3 VPNs | 37

Components of a Layer 3 VPN | 38

Layer 3 VPN Terminology | 38

Layer 3 VPN Architecture | 40

Supported Layer 3 VPN Standards | 41

Understanding Layer 3 VPN Forwarding Through the Core | 42

Understanding Layer 3 VPN Attributes | 44

Routers in a VPN | 45

Introduction to Configuring Layer 3 VPNs | 45



## Routing in Layer 3 VPNs

### Routing Instances in Layer 3 VPNs | 51

Routing Instances in Layer 3 VPNs | 51

Configuring Logical Units on the Loopback Interface for Routing Instances in Layer 3 VPNs | 52

Configuring Routing Instances on PE Routers in VPNs | 53

Configuring the Routing Instance Name for a VPN | 54

Configuring the Description | 55

Configuring the Instance Type | 55

Configuring Interfaces for VPN Routing | 56

Configuring the Route Distinguisher | 58

Configuring Automatic Route Distinguishers | 59

Configuring Virtual-Router Routing Instances in VPNs | 59

Configuring a Routing Protocol Between the Service Provider Routers | 60

Configuring Logical Interfaces Between Participating Routers | 61

Configuring Path MTU Checks for VPN Routing Instances | 61

Enabling Path MTU Checks for a VPN Routing Instance | 62

Assigning an IP Address to the VPN Routing Instance | 62

### Creating Unique VPN Routes Using VRF Tables | 63

Understanding Virtual Routing and Forwarding Tables | 63

Understanding VRF Localization in Layer 3 VPNs | 67

Maximizing VPN Routes Using VRF Localization for Layer 3 VPNs | 68

Example: Improving Scalability Using VRF Localization for Layer 3 VPNs | 70

Filtering Packets in Layer 3 VPNs Based on IP Headers | 85

Egress Filtering Options | 87

Support on Aggregated and VLAN Interfaces for IP-Based Filtering | 87

Support on ATM and Frame Relay Interfaces for IP-Based Filtering | 87

Support on Ethernet, SONET/SDH, and T1/T3/E3 Interfaces for IP-Based Filtering | 88

Support on SONET/SDH and DS3/E3 Channelized Enhanced Intelligent Queuing Interfaces for IP-Based Filtering | 89

Support on Multilink PPP and Multilink Frame Relay Interfaces for IP-Based Filtering | 90

Support for IP-Based Filtering of Packets with Null Top Labels | 91

General Limitations on IP-Based Filtering | 92

Configuring a Label Allocation and Substitution Policy for VPNs | 93



## **Distributing VPN Routes | 94**

Enabling Routing Information Exchange for VPNs | 95

Configuring IBGP Sessions Between PE Routers in VPNs | 95

Configuring Aggregate Labels for VPNs | 97

Configuring a Signaling Protocol and LSPs for VPNs | 98

Using LDP for VPN Signaling | 98

Using RSVP for VPN Signaling | 100

Configuring Policies for the VRF Table on PE Routers in VPNs | 102

Configuring the Route Target | 103

Configuring the Route Origin | 103

Configuring an Import Policy for the PE Router's VRF Table | 104

Configuring an Export Policy for the PE Router's VRF Table | 106

Applying Both the VRF Export and the BGP Export Policies | 108

Configuring a VRF Target | 109

Configuring the Route Origin for VPNs | 110

Configuring the Site of Origin Community on CE Router A | 110

Configuring the Community on CE Router A | 111

Applying the Policy Statement on CE Router A | 111

Configuring the Policy on PE Router D | 112

Configuring the Community on PE Router D | 113

Applying the Policy on PE Router D | 113

## **Route Target Filtering | 114**

Configuring Static Route Target Filtering for VPNs | 115

Reducing Network Resource Use with Static Route Target Filtering for VPNs | 116

Configuring BGP Route Target Filtering for VPNs | 116

BGP Route Target Filtering Overview | 117

Configuring BGP Route Target Filtering for VPNs | 117

Example: BGP Route Target Filtering for VPNs | 118

Example: Configuring BGP Route Target Filtering for VPNs | 121

Configure BGP Route Target Filtering on Router PE1 | 122

Configure BGP Route Target Filtering on Router PE2 | 124

Configure BGP Route Target Filtering on the Route Reflector | 127



Configure BGP Route Target Filtering on Router PE3 | 129

Example: Configuring an Export Policy for BGP Route Target Filtering for VPNs | 132

Example: Configuring Layer 3 VPN Protocol Family Qualifiers for Route Filters | 154

Understanding Proxy BGP Route Target Filtering for VPNs | 159

Example: Configuring Proxy BGP Route Target Filtering for VPNs | 159

## **Configuring Routing Between PE and CE Routers | 180**

Configuring Routing Between PE and CE Routers in Layer 3 VPNs | 181

Configuring BGP Between the PE and CE Routers | 181

Configuring OSPF Between the PE and CE Routers | 182

Configuring OSPF Sham Links for Layer 3 VPNs | 183

Configuring an OSPF Domain ID | 186

Configuring RIP Between the PE and CE Routers | 189

Configuring Static Routes Between the PE and CE Routers | 191

Configuring an OSPF Domain ID for a Layer 3 VPN | 192

Configuring Interfaces on Router PE1 | 193

Configuring Routing Options on Router PE1 | 193

Configuring Protocols on Router PE1 | 194

Configuring Policy Options on Router PE1 | 195

Configuring the Routing Instance on Router PE1 | 195

Configuration Summary for Router PE1 | 196

OSPFv2 Sham Links Overview | 199

Example: Configuring OSPFv2 Sham Links | 201

Configuring EBGp Multihop Sessions Between PE and CE Routers in Layer 3 VPNs | 213

Configuring an LDP-over-RSVP VPN Topology | 213

Enabling an IGP on the PE and P Routers | 217

Enabling LDP on the PE and P Routers | 217

Enabling RSVP and MPLS on the P Router | 219

Configuring the MPLS LSP Tunnel Between the P Routers | 219

Configuring IBGP on the PE Routers | 220

Configuring Routing Instances for VPNs on the PE Routers | 221

Configuring VPN Policy on the PE Routers | 223

LDP-over-RSVP VPN Configuration Summarized by Router | 225



**Configuring an Application-Based Layer 3 VPN Topology | 234****Configuration on Router A | 235****Configuration on Router E | 238****Configuration on Router F | 238****IPv4 Traffic Over Layer 3 VPNs | 239****Understanding IPv4 Route Distribution in a Layer 3 VPN | 240****Distribution of Routes from CE to PE Routers | 240****Distribution of Routes Between PE Routers | 241****Distribution of Routes from PE to CE Routers | 243****Understanding VPN-IPv4 Addresses and Route Distinguishers | 244****Configuring IPv4 Packet Forwarding for Layer 3 VPNs | 247****IPv6 Traffic over Layer 3 VPNs | 249****Understanding IPv6 Layer 3 VPNs | 249****Configuring Layer 3 VPNs to Carry IPv6 Traffic | 250****Configuring IPv6 on the PE Router | 250****Configuring the Connection Between the PE and CE Routers | 251****Configuring IPv6 on the Interfaces | 253****Example: Tunneling Layer 3 VPN IPv6 Islands over an IPv4 Core Using IBGP and Independent Domains | 254****Configuring an AS for Layer 3 VPNs | 267****Configuring Layer 3 VPNs to Carry IBGP Traffic | 267****Example: Configuring a Layer 3 VPN with Route Reflection and AS Override | 269****Configuring the Algorithm That Determines the Active Route to Evaluate AS Numbers in AS Paths for VPN Routes | 282****Limiting VPN Routes Using Route Resolution | 283****Example: Configuring Route Resolution on PE Routers | 283****Example: Configuring Route Resolution on Route Reflectors | 286****Limiting the Number of Paths and Prefixes Accepted from CE Routers in Layer 3 VPNs | 290**



## Enabling Internet Access for Layer 3 VPNs | 291

### Non-VRF Internet Access Through Layer 3 VPNs | 292

CE Router Accesses Internet Independently of the PE Router | 292

PE Router Provides Layer 2 Internet Service | 293

### Distributed Internet Access Through Layer 3 VPNs | 293

### Routing VPN and Internet Traffic Through Different Interfaces for Layer 3 VPNs | 294

Configuring Interfaces on Router PE1 | 295

Configuring Routing Options on Router PE1 | 296

Configuring BGP, IS-IS, and LDP Protocols on Router PE1 | 296

Configuring a Routing Instance on Router PE1 | 297

Configuring Policy Options on Router PE1 | 298

Traffic Routed by Different Interfaces: Configuration Summarized by Router | 299

### Routing VPN and Outgoing Internet Traffic Through the Same Interface and Routing Return Internet Traffic Through a Different Interface | 303

Configuration for Router PE1 | 303

### Routing VPN and Internet Traffic Through the Same Interface Bidirectionally (VPN Has Public Addresses) | 304

Configuring Routing Options on Router PE1 | 305

Configuring Routing Protocols on Router PE1 | 306

Configuring the Routing Instance on Router PE1 | 306

Traffic Routed Through the Same Interface Bidirectionally: Configuration Summarized by Router | 307

### Routing VPN and Internet Traffic Through the Same Interface Bidirectionally (VPN Has Private Addresses) | 309

Configuring Routing Options for Router PE1 | 310

Configuring a Routing Instance for Router PE1 | 311

Configuring Policy Options for Router PE1 | 312

Traffic Routed by the Same Interface Bidirectionally (VPN Has Private Addresses): Configuration Summarized by Router | 313

### Routing Internet Traffic Through a Separate NAT Device | 315

### Centralized Internet Access Through Layer 3 VPNs | 325

Routing Internet Traffic Through a Hub CE Router | 326

Routing Internet Traffic Through Multiple CE Routers | 331



## Connecting Layer 3 VPNs to Layer 2 Circuits | 339

Applications for Interconnecting a Layer 2 Circuit with a Layer 3 VPN | 340

Example: Interconnecting a Layer 2 Circuit with a Layer 3 VPN | 340

## Connecting Layer 3 VPNs to Layer 2 VPNs | 365

Interconnecting Layer 2 VPNs with Layer 3 VPNs Overview | 365

Interconnecting Layer 2 VPNs with Layer 3 VPNs Applications | 365

Example: Interconnecting a Layer 2 VPN with a Layer 3 VPN | 366

## Interprovider and Carrier-of-Carrier VPNs

### Interprovider and Carrier-of-Carriers VPNs | 399

Traditional VPNs, Interprovider VPNs, and Carrier-of-Carriers VPNs | 399

Understanding Interprovider and Carrier-of-Carriers VPNs | 400

Interprovider and Carrier-of-Carrier VPNs Example Terminology | 401

Supported Carrier-of-Carriers and Interprovider VPN Standards | 402

### Interprovider VPNs | 403

Interprovider VPNs | 403

Linking VRF Tables Between Autonomous Systems | 404

Configuring Next Generation Layer 3 VPNs Options A, B, and C | 404

Configuring Multihop MP-EBGP Between AS Border Routers | 406

Interprovider VPN Example—MP-EBGP Between ISP Peer Routers | 406

Configuration for Router A | 407

Configuration for Router B | 408

Configuration for Router C | 410

Configuration for Router D | 411

Configuration for Router E | 412

Configuration for Router F | 414

Interprovider VPN Example—Multihop MP-EBGP with P Routers | 415

Configuration for Router A | 416

Configuration for Router B | 416

Configuration for Router C | 419

Configuration for Router D | 420

Configuration for Router E | 422



Configuration for Router F | 424

Example: Configuring Interprovider Layer 3 VPN Option A | 424

Example: Configuring Interprovider Layer 3 VPN Option B | 451

Example: Configuring Interprovider Layer 3 VPN Option C | 478

## **Carrier-of-Carrier VPNs | 507**

Understanding Carrier-of-Carriers VPNs | 507

Internet Service Provider as the Customer | 509

VPN Service Provider as the Customer | 509

Configuring Carrier-of-Carriers VPNs for Customers That Provide Internet Service | 510

Configuring the Carrier-of-Carriers VPN Service Customer's CE Router | 510

Configuring the Carrier-of-Carriers VPN Service Provider's PE Routers | 513

Carrier-of-Carriers VPN Example—Customer Provides Internet Service | 517

Network Topology for Carrier-of-Carriers Service | 517

Configuration for Router A | 518

Configuration for Router B | 518

Configuration for Router C | 519

Configuration for Router D | 520

Configuration for Router E | 521

Configuration for Router F | 523

Configuration for Router G | 523

Configuration for Router H | 524

Configuration for Router I | 526

Configuration for Router J | 527

Configuration for Router K | 527

Configuration for Router L | 529

Configuring Carrier-of-Carriers VPNs for Customers That Provide VPN Service | 529

Configuring the Carrier-of-Carriers Customer's PE Router | 530

Configuring the Carrier-of-Carriers Customer's CE Router (or switch) | 533

Configuring the Provider's PE Router or Switch | 536

Carrier-of-Carriers VPN Example—Customer Provides VPN Service | 539

Network Topology for Carrier-of-Carriers Service | 540

Configuration for Router A | 541

Configuration for Router B | 541

Configuration for Router C | 543



- Configuration for Router D | 544
- Configuration for Router E | 545
- Configuration for Router F | 547
- Configuration for Router G | 547
- Configuration for Router H | 548
- Configuration for Router I | 550
- Configuration for Router J | 552
- Configuration for Router K | 552
- Configuration for Router L | 554

Multiple Instances for LDP and Carrier-of-Carriers VPNs | 554

## Multicast on Layer 3 VPNs

### Multicast on Layer 3 VPNs | 559

Understanding MVPN Concepts and Protocols | 559

- Multicast over Layer 3 VPNs Overview | 559
- Sending PIM Hello Messages to the PE Routers | 561
- Sending PIM Join Messages to the PE Routers | 562
- Receiving the Multicast Transmission | 562

Supported Multicast VPN Standards | 563

Configuring Multicast Layer 3 VPNs | 564

Example: Configuring PIM Join Load Balancing on Draft-Rosen Multicast VPN | 565

MBGP Multicast VPN Sites | 576

Example: Configuring MBGP Multicast VPNs | 577

Configuring Point-to-Multipoint LSPs for an MBGP MVPN | 601

- Configuring RSVP-Signaled Inclusive Point-to-Multipoint LSPs for an MBGP MVPN | 602
- Configuring Selective Provider Tunnels for an MBGP MVPN | 603

Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview | 608

Configuring Segmented Inter-Area P2MP LSP | 610

Example: Configuring Segmented Inter-Area P2MP LSP | 613

### MVPN Route Distribution | 684

Configuring Routing Instances for an MBGP MVPN | 685

Configuring Shared-Tree Data Distribution Across Provider Cores for Providers of MBGP MVPNs | 686

Configuring SPT-Only Mode for Multiprotocol BGP-Based Multicast VPNs | 687



Configuring Internet Multicast Using Ingress Replication Provider Tunnels | 690

Controlling PIM Resources for Multicast VPNs Overview | 694

System Log Messages for PIM Resources | 696

Example: Configuring PIM State Limits | 697

Understanding Wildcards to Configure Selective Point-to-Multipoint LSPs for an MBGP MVPN | 710

About S-PMSI | 711

Scenarios for Using Wildcard S-PMSI | 712

Types of Wildcard S-PMSI | 713

Differences Between Wildcard S-PMSI and (S,G) S-PMSI | 713

Wildcard (\*,\*) S-PMSI and PIM Dense Mode | 713

Wildcard (\*,\*) S-PMSI and PIM-BSR | 714

Wildcard Source and the 0.0.0.0/0 Source Prefix | 715

Configuring a Selective Provider Tunnel Using Wildcards | 716

Example: Configuring Selective Provider Tunnels Using Wildcards | 717

Configuring NLRI Parameters for an MBGP MVPN | 718

## **Resiliency in Multicast L3 VPNs with Redundant Virtual Tunnels | 719**

Redundant Virtual Tunnels Providing Resiliency in Delivering Multicast Traffic Overview | 720

Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic | 721

Example: Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic | 723

Understanding Redundant Virtual Tunnel Interfaces in MBGP MVPNs | 742

Example: Configuring Redundant Virtual Tunnel Interfaces in MBGP MVPNs | 742

## **MVPN VRF Import and Export Policies | 756**

Configuring VRF Route Targets for Routing Instances for an MBGP MVPN | 756

Configuring the Export Target for an MBGP MVPN | 758

Configuring the Import Target for an MBGP MVPN | 758

Limiting Routes to Be Advertised by an MVPN VRF Instance | 760

## **Configuring Provider Tunnels in MVPNs | 761**

PIM Sparse Mode, PIM Dense Mode, Auto-RP, and BSR for MBGP MVPNs | 762

Configuring PIM Provider Tunnels for an MBGP MVPN | 762

Configuring PIM-SSM GRE Selective Provider Tunnels | 763



## Full-Mesh, Hub-and-Spoke, and Overlapping VPNs

### Full Mesh VPNs | 767

#### Configuring a Simple Full-Mesh VPN Topology | 767

- Enabling an IGP on the PE and P Routers | 769
- Enabling RSVP and MPLS on the P Router | 769
- Configuring the MPLS LSP Tunnel Between the PE Routers | 769
- Configuring IBGP on the PE Routers | 771
- Configuring Routing Instances for VPNs on the PE Routers | 772
- Configuring VPN Policy on the PE Routers | 775
- Simple VPN Configuration Summarized by Router | 778

#### Configuring a Full-Mesh VPN Topology with Route Reflectors | 787

### Hub-and-Spoke VPNs | 788

#### Configuring Hub-and-Spoke VPN Topologies: One Interface | 788

- Configuring Hub CE1 | 790
- Configuring Hub PE1 | 790
- Configuring the P Router | 791
- Configuring Spoke PE2 | 792
- Configuring Spoke PE3 | 794
- Configuring Spoke CE2 | 796
- Configuring Spoke CE3 | 796
- Enabling Egress Features on the Hub PE Router | 799

#### Configuring Hub-and-Spoke VPN Topologies: Two Interfaces | 803

- Enabling an IGP on the Hub-and-Spoke PE Routers | 806
- Configuring LDP on the Hub-and-Spoke PE Routers | 806
- Configuring IBGP on the PE Routers | 807
- Configuring VPN Routing Instances on the Hub-and-Spoke PE Routers | 808
- Configuring VPN Policy on the PE Routers | 811
- Hub-and-Spoke VPN Configuration Summarized by Router | 815

### Overlapping VPNs | 823

#### Configuring Overlapping VPNs Using Routing Table Groups | 824

- Configuring Routing Table Groups | 825
- Configuring Static Routes Between the PE and CE Routers | 826



- Configuring BGP Between the PE and CE Routers | 832
- Configuring OSPF Between the PE and CE Routers | 834
- Configuring Static, BGP, and OSPF Routes Between PE and CE Routers | 835
- Configuring Overlapping VPNs Using Automatic Route Export | 837
- Configuring Overlapping VPNs with BGP and Automatic Route Export | 838
- Configuring Overlapping VPNs and Additional Tables | 840
- Configuring Automatic Route Export for All VRF Instances | 841

## Layer 3 VPN Tunnels

### ES Tunnels for Layer 3 VPNs | 845

- Configuring an ES Tunnel Interface for Layer 3 VPNs | 845
- Configuring the ES Tunnel Interface on the PE Router | 845
- Configuring the ES Tunnel Interface on the CE Router | 847
- Configuring an ES Tunnel Interface Between a PE and CE Router | 847
- Configuring IPsec on Router PE1 | 848
- Configuring the Routing Instance Without the Encapsulating Interface | 849
- Configuring the Routing Instance with the Encapsulating Interface | 850
- Configuring the ES Tunnel Interface on Router CE1 | 852
- Configuring IPsec on Router CE1 | 852

### GRE Tunnels for Layer 3 VPNs | 853

- Configuring GRE Tunnels for Layer 3 VPNs | 853
- Configuring GRE Tunnels Manually Between PE and CE Routers | 854
- Configuring GRE Tunnels Dynamically | 856
- Configuring a GRE Tunnel Interface Between PE Routers | 858
- Configuring the Routing Instance on Router A | 858
- Configuring the Routing Instance on Router D | 859
- Configuring MPLS, BGP, and OSPF on Router A | 860
- Configuring MPLS, BGP, and OSPF on Router D | 860
- Configuring the Tunnel Interface on Router A | 861
- Configuring the Tunnel Interface on Router D | 861
- Configuring the Routing Options on Router A | 862
- Configuring the Routing Options on Router D | 862
- Configuration Summary for Router A | 863



Configuration Summary for Router D | 865

Configuring a GRE Tunnel Interface Between a PE and CE Router | 868

Configuring the Routing Instance Without the Encapsulating Interface | 868

Configuring the Routing Instance with the Encapsulating Interface | 870

Configuring the GRE Tunnel Interface on Router CE1 | 873

## Next-Hop Based Tunnels for Layer 3 VPNs | 873

Example: Configuring a Next-Hop-Based Dynamic GRE Tunnels | 874

Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels | 889

Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview | 908

Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels | 911

## Protection and Performance Features for Layer 3 VPNs

### BGP PIC for Layer 3 VPNs | 927

Configuring BGP PIC Edge for MPLS Layer 3 VPNs | 927

Example: Configuring BGP PIC Edge for MPLS Layer 3 VPNs | 930

### Egress Protection in Layer 3 VPNs | 945

Egress Protection for BGP Labeled Unicast | 946

Configuring Egress Protection for BGP Labeled Unicast | 948

Example: Configuring Egress Protection for BGP Labeled Unicast | 950

Egress Protection for Layer 3 VPN Edge Protection Overview | 968

Router Functions | 969

Protector and Protection Models | 970

IGP Advertisement Model | 971

Example: Configuring MPLS Egress Protection for Layer 3 VPN Services | 975

Example: Configuring Egress Protection for Layer 3 VPN Services | 976

Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP | 986

### Provider Edge Link Protections in Layer 3 VPNs | 1029

Understanding Provider Edge Link Protection for BGP Labeled Unicast Paths | 1030

Understanding Provider Edge Link Protection in Layer 3 VPNs | 1031

Example: Configuring Provider Edge Link Protection in Layer 3 VPNs | 1033

Example: Configuring Provider Edge Link Protection for BGP Labeled Unicast Paths | 1054



**Understanding Host Fast Reroute | 1073**

- ARP Prefix Limit and Blackout Supplementary Timeout | 1074

- Primary Route and Backup Route Candidates | 1075

- Backup Path Selection Policy | 1076

- Characteristics of HFRR Routes | 1076

- Removal of HFRR Routes | 1076

- Interfaces That Support HFRR | 1077

Example: Configuring Link Protection with Host Fast Reroute | 1078

**Unicast Reverse Path Forwarding Check for VPNs | 1093****Understanding Unicast RPF (Switches) | 1093**

- Unicast RPF for Switches Overview | 1094

- Unicast RPF Implementation | 1095

- When to Enable Unicast RPF | 1096

- When Not to Enable Unicast RPF | 1097

- Limitations of the Unicast RPF Implementation on EX3200, EX4200, and EX4300 Switches | 1098

Example: Configuring Unicast RPF (On a Router) | 1099

**Load Balancing in Layer 3 VPNs | 1110**

- VPN Per-Packet Load Balancing | 1110

- Load Balancing and IP Header Filtering for Layer 3 VPNs | 1112

- Layer 3 VPN Load Balancing Overview | 1112

- Example: Load Balancing Layer 3 VPN Traffic While Simultaneously Using IP Header Filtering | 1113

- Configuring Protocol-Independent Load Balancing in Layer 3 VPNs | 1132

- Configuring Load Balancing for Layer 3 VPNs | 1133

- Configuring Load Balancing and Routing Policies | 1134

Example: Configuring PIM Join Load Balancing on Next-Generation Multicast VPN | 1136

**Improving Layer 3 VPN Performance | 1146**

- Chained Composite Next Hops for VPNs and Layer 2 Circuits | 1146

- Benefits of chained composite next hops | 1147

- Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs | 1147

- Accepting Up to One Million Layer 3 VPN Route Updates | 1148

- Accepting More Than One Million Layer 3 VPN Route Updates | 1150



Enabling Chained Composite Next Hops for IPv6-Labeled Unicast Routes | 1152

Example: Configuring Chained Composite Next Hops for Direct PE-PE Connections in VPNs | 1152

## **Class of Service for VPNs | 1168**

VPNs and Class of Service | 1169

Rewriting Class of Service Markers and VPNs | 1169

Configuring Traffic Policing in Layer 3 VPNs | 1169

Applying Custom MPLS EXP Classifiers to Routing Instances in Layer 3 VPNs | 1170

## **Graceful Restarts for VPNs | 1172**

VPN Graceful Restart | 1172

Benefit of a VPN graceful restart | 1173

Configuring Graceful Restart for VPNs | 1173

Configuring Nonstop Active Routing for BGP Multicast VPN | 1176

# 8

## **Troubleshooting Layer 3 VPNs**

### **Pinging VPNs | 1183**

Pinging VPNs, VPLS, and Layer 2 Circuits | 1183

Setting the Forwarding Class of the Ping Packets | 1184

Pinging a VPLS Routing Instance | 1184

Pinging a Layer 3 VPN | 1185

### **Troubleshooting Layer 3 VPNs | 1185**

Diagnosing Common Layer 3 VPN Problems | 1185

Example: Troubleshooting Layer 3 VPNs | 1190

Example: Diagnosing Networking Problems Related to Layer 3 VPNs by Disabling TTL Decrementing | 1201

# 1

## **Configuration Statements and Operational Commands**

### **Configuration Statements (All VPNs) | 1213**

aggregate-label | 1214

backup-neighbor | 1215

description (Routing Instances) | 1217

family route-target | 1218

graceful-restart (Enabling Globally) | 1220

instance-type | 1222



interface (Routing Instances) | 1225

no-forwarding | 1226

forward-policy-mismatch (Security Group VPN Member) | 1227

proxy-generate | 1228

revert-time (Protocols Layer 2 Circuits) | 1229

route-distinguisher | 1231

route-distinguisher-id | 1235

route-target-filter | 1236

switchover-delay | 1238

unicast-reverse-path | 1239

vpn-apply-export | 1240

vrf-export | 1241

vrf-import | 1243

vrf-mtu-check | 1244

vrf-target | 1245

## **Configuration Statements (Layer 3 VPNs) | 1247**

advertise-from-main-vpn-tables | 1251

advertise-mode (MPLS) | 1253

all-regions | 1255

allow-l3vpn-traceroute-src-select | 1257

arp-prefix-limit (Host Fast Reroute) | 1258

as-path-compare | 1260

chained-composite-next-hop | 1261

classifiers | 1264

create-new-ucast-tunnel | 1265

domain-id | 1266

domain-vpn-tag | 1267

dynamic-tunnels | 1268

egress-protection (BGP) | 1270

egress-protection (MPLS) | 1271

egress-protection (Routing Instances) | 1272

export-target | 1273

extended-space | 1274



family (VRF Advertisement) | **1275**

forwarding-table | **1276**

forwarding-context (Protocols BGP) | **1277**

forward-policy-mismatch (Security Group VPN Member) | **1278**

global-arp-prefix-limit (Host Fast Reroute) | **1279**

global-supplementary-blackout-timer (Host Fast Reroute) | **1281**

group (Routing Instances) | **1283**

group-address (Routing Instances VPN) | **1285**

group-range (MBGP MVPN Tunnel) | **1287**

group-rp-mapping | **1288**

host-fast-reroute | **1289**

import-target | **1290**

independent-domain | **1291**

inet-mvpn (BGP) | **1293**

inet-mvpn (VRF Advertisement) | **1294**

inet6 | **1295**

inet6-mvpn (BGP) | **1296**

inet6-mvpn (VRF Advertisement) | **1297**

inet6-vpn | **1298**

ingress (Chained Composite Next Hop) | **1300**

ingress-replication | **1302**

interface (Host Fast Reroute) | **1303**

ip-tunnel-rpf-check | **1304**

interface (Virtual Tunnel in Routing Instances) | **1306**

inter-region | **1308**

inter-region-segmented | **1309**

inter-region-template | **1311**

l3vpn (ingress) | **1313**

l3vpn (transit) | **1315**

label | **1316**

label-switched-path (Protocols MVPN) | **1317**

label-switched-path-template (Multicast) | **1318**

labeled-bgp | **1320**

labeled-unicast | **1321**



link-protection (Host Fast Reroute) | 1323

localized-fib | 1324

maximum-paths | 1325

maximum-prefixes | 1327

metric (Protocols OSPF Sham Link) | 1329

mpls-internet-multicast | 1330

multicast (Virtual Tunnel in Routing Instances) | 1331

multihop | 1332

multipath (Routing Options) | 1337

mvpn | 1339

mvpn-mode | 1341

no-vrf-advertise | 1342

no-vrf-propagate-ttl | 1343

per-group-label | 1344

pim-asm | 1345

pim-ssm (Selective Tunnel) | 1346

primary (Virtual Tunnel in Routing Instances) | 1347

protect core | 1349

protection (Protocols BGP) | 1350

provider-tunnel | 1351

redundancy-group (Chassis - MX Series) | 1357

redundancy-group (Interfaces) | 1358

redundant-logical-tunnel | 1359

redundant-virtual-tunnel | 1360

region | 1361

register-limit | 1363

route-target (Protocols MVPN) | 1365

routing-instances (CoS) | 1367

rpt-spt | 1368

rsvp-te (Routing Instances Provider Tunnel Selective) | 1369

rsvp-te (Protocols MVPN) | 1371

selective | 1373

sglimit | 1376

sham-link | 1378



sham-link-remote | **1380**

source (Routing Instances Provider Tunnel Selective) | **1382**

source-class-usage | **1384**

spt-only | **1385**

static-lsp | **1386**

supplementary-blackout-timer (Host Fast Reroute) | **1388**

target (Routing Instances MVPN) | **1390**

template(Protocols MVPN) | **1391**

threshold-rate | **1393**

traceoptions (Protocols MVPN) | **1394**

traffic-statistics (Protocols BGP) | **1397**

tunnel-limit (Routing Instances Provider Tunnel Selective) | **1399**

unicast (Route Target Community) | **1400**

unicast (Virtual Tunnel in Routing Instances) | **1401**

vpn-localization | **1402**

vpn-unequal-cost | **1403**

vrf-advertise-selective | **1404**

vrf-propagate-ttl | **1405**

vrf-table-label | **1406**

wildcard-group-inet | **1408**

wildcard-group-inet6 | **1410**

wildcard-source (Selective Provider Tunnels) | **1412**

## **Operational Commands | 1415**

ping mpls l3vpn | **1416**

show hfrr profiles | **1419**

show ingress-replication mvpn | **1422**

show mvpn c-multicast | **1424**

show mvpn instance | **1428**

show mvpn neighbor | **1433**

show route vpn-localization | **1439**



# About the Documentation

## IN THIS SECTION

- Documentation and Release Notes | xxiii
- Using the Examples in This Manual | xxiii
- Documentation Conventions | xxv
- Documentation Feedback | xxviii
- Requesting Technical Support | xxviii

The Junos operating system (Junos OS) supports layer 3 VPN service which allows customers to have geographically dispersed private networks across service provider's networks. Use the topics on this page to configure VPN routing and forwarding instances to support Layer 3 VPNs.

## Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

## Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.



If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xsl;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```



## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {  
    file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]  
user@host# edit system scripts  
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]  
user@host# load merge relative /var/tmp/ex-script-snippet.conf  
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

## Documentation Conventions

[Table 1 on page xxvi](#) defines notice icons used in this guide.



Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xxvi defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b>  No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>



Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
<b>Text like this</b>	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit <b>protocols ospf area area-id</b>] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub</b> <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast   multicast</b>  ( <i>string1</i>   <i>string2</i>   <i>string3</i> )
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members [ <i>community-ids</i> ]</b>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
; (semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

## GUI Conventions




Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

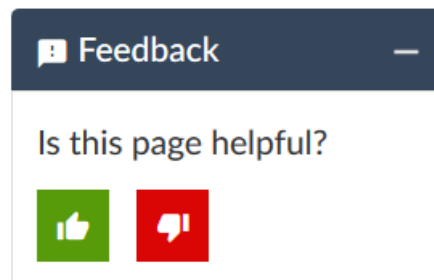

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are



covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

## Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.



# 1

CHAPTER

## Overview of Layer 3 VPNs

---

Overview | 33

---







# Overview

## IN THIS SECTION

- [Types of VPNs | 33](#)
- [VPNs and Logical Systems | 37](#)
- [Understanding Layer 3 VPNs | 37](#)
- [Supported Layer 3 VPN Standards | 41](#)
- [Understanding Layer 3 VPN Forwarding Through the Core | 42](#)
- [Understanding Layer 3 VPN Attributes | 44](#)
- [Routers in a VPN | 45](#)
- [Introduction to Configuring Layer 3 VPNs | 45](#)

## Types of VPNs

## IN THIS SECTION

- [Layer 2 VPNs | 34](#)
- [Layer 3 VPNs | 34](#)
- [VPLS | 35](#)
- [Virtual-Router Routing Instances | 36](#)



A virtual private network (VPN) consists of two topological areas: the provider's network and the customer's network. The customer's network is commonly located at multiple physical sites and is also private (non-Internet). A customer site would typically consist of a group of routers or other networking equipment located at a single physical location. The provider's network, which runs across the public Internet infrastructure, consists of routers that provide VPN services to a customer's network as well as routers that provide other services. The provider's network connects the various customer sites in what appears to the customer and the provider to be a private network.

To ensure that VPNs remain private and isolated from other VPNs and from the public Internet, the provider's network maintains policies that keep routing information from different VPNs separate. A provider can service multiple VPNs as long as its policies keep routes from different VPNs separate. Similarly, a customer site can belong to multiple VPNs as long as it keeps routes from the different VPNs separate.

The Junos<sup>®</sup> Operating System (Junos OS) provides several types of VPNs; you can choose the best solution for your network environment. Each of the following VPNs has different capabilities and requires different types of configuration:

## **Layer 2 VPNs**

Implementing a Layer 2 VPN on a router is similar to implementing a VPN using a Layer 2 technology such as ATM or Frame Relay. However, for a Layer 2 VPN on a router, traffic is forwarded to the router in Layer 2 format. It is carried by MPLS over the service provider's network and then converted back to Layer 2 format at the receiving site. You can configure different Layer 2 formats at the sending and receiving sites. The security and privacy of an MPLS Layer 2 VPN are equal to those of an ATM or Frame Relay VPN.

On a Layer 2 VPN, routing occurs on the customer's routers, typically on the CE router. The CE router connected to a service provider on a Layer 2 VPN must select the appropriate circuit on which to send traffic. The PE router receiving the traffic sends it across the service provider's network to the PE router connected to the receiving site. The PE routers do not need to store or process the customer's routes; they only need to be configured to send data to the appropriate tunnel.

For a Layer 2 VPN, customers need to configure their own routers to carry all Layer 3 traffic. The service provider needs to know only how much traffic the Layer 2 VPN needs to carry. The service provider's routers carry traffic between the customer's sites using Layer 2 VPN interfaces. The VPN topology is determined by policies configured on the PE routers.

## **Layer 3 VPNs**

In a Layer 3 VPN, the routing occurs on the service provider's routers. Therefore, Layer 3 VPNs require more configuration on the part of the service provider, because the service provider's PE routers must store and process the customer's routes.



In the Junos OS, Layer 3 VPNs are based on RFC 4364, *BGP/MPLS IP Virtual Private Networks (VPNs)*. This RFC defines a mechanism by which service providers can use their IP backbones to provide Layer 3 VPN services to their customers. The sites that make up a Layer 3 VPN are connected over a provider's existing public Internet backbone.

VPNs based on RFC 4364 are also known as BGP/MPLS VPNs because BGP is used to distribute VPN routing information across the provider's backbone, and MPLS is used to forward VPN traffic across the backbone to remote VPN sites.

Customer networks, because they are private, can use either public addresses or private addresses, as defined in RFC 1918, *Address Allocation for Private Internets*. When customer networks that use private addresses connect to the public Internet infrastructure, the private addresses might overlap with the private addresses used by other network users. BGP/MPLS VPNs solve this problem by prefixing a VPN identifier to each address from a particular VPN site, thereby creating an address that is unique both within the VPN and within the public Internet. In addition, each VPN has its own VPN-specific routing table that contains the routing information for that VPN only.

## VPLS

Virtual private LAN service (VPLS) allows you to connect geographically dispersed customer sites as if they were connected to the same LAN. In many ways, it works like a Layer 2 VPN. VPLS and Layer 2 VPNs use the same network topology and function similarly. A packet originating within a customer's network is sent first to a CE device. It is then sent to a PE router within the service provider's network. The packet traverses the service provider's network over an MPLS LSP. It arrives at the egress PE router, which then forwards the traffic to the CE device at the destination customer site.

The key difference in VPLS is that packets can traverse the service provider's network in a point-to-multipoint fashion, meaning that a packet originating from a CE device can be broadcast to PE routers in the VPLS. In contrast, a Layer 2 VPN forwards packets in a point-to-point fashion only. The destination of a packet received from a CE device by a PE router must be known for the Layer 2 VPN to function properly.

In a Layer 3 network only, you can configure virtual private LAN service (VPLS), to connect geographically dispersed Ethernet local area networks (LAN) sites to each other across an MPLS backbone. For ISP customers who implement VPLS, all sites appear to be in the same Ethernet LAN even though traffic travels across the service provider's network. VPLS is designed to carry Ethernet traffic across an MPLS-enabled service provider network. In certain ways, VPLS mimics the behavior of an Ethernet network. When a PE router configured with a VPLS routing instance receives a packet from a CE device, it first checks the appropriate routing table for the destination of the VPLS packet. If the router has the destination, it forwards it to the appropriate PE router. If it does not have the destination, it broadcasts the packet to all the other PE routers that are members of the same VPLS routing instance. The PE routers forward the packet to their CE devices. The CE device that is the intended recipient of the packet forwards it to its final destination. The other CE devices discard it.




## Virtual-Router Routing Instances

A virtual-router routing instance, like a VPN routing and forwarding (VRF) routing instance, maintains separate routing and forwarding tables for each instance. However, many configuration steps required for VRF routing instances are not required for virtual-router routing instances. Specifically, you do not need to configure a route distinguisher, a routing table policy (the **vrf-export**, **vrf-import**, and **route-distinguisher** statements), or MPLS between the P routers.

However, you need to configure separate logical interfaces between each of the service provider routers participating in a virtual-router routing instance. You also need to configure separate logical interfaces between the service provider routers and the customer routers participating in each routing instance. Each virtual-router instance requires its own unique set of logical interfaces to all participating routers.

Figure 1 on page 36 shows how this works. The service provider routers G and H are configured for virtual-router routing instances Red and Green. Each service provider router is directly connected to two local customer routers, one in each routing instance. The service provider routers are also connected to each other over the service provider network. These routers need four logical interfaces: a logical interface to each of the locally connected customer routers and a logical interface to carry traffic between the two service provider routers for each virtual-router instance.

Figure 1: Logical Interface per Router in a Virtual-Router Routing Instance

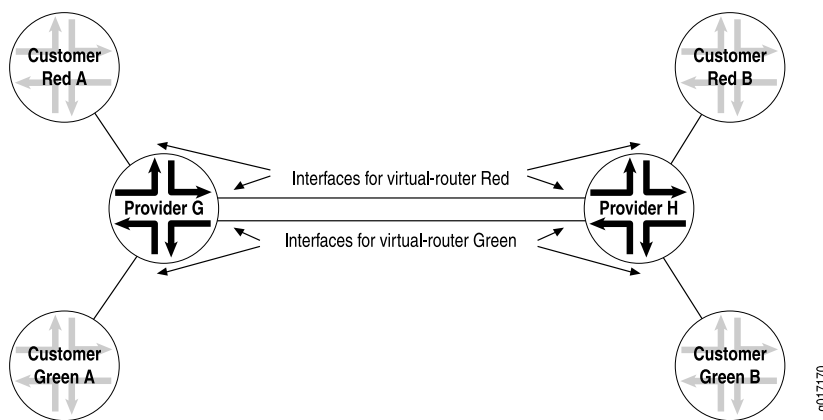

Layer 3 VPNs do not have this configuration requirement. If you configure several Layer 3 VPN routing instances on a PE router, all the instances can use the same logical interface to reach another PE router. This is possible because Layer 3 VPNs use MPLS (VPN) labels that differentiate traffic going to and from various routing instances. Without MPLS and VPN labels, as in a virtual-router routing instance, you need separate logical interfaces to separate traffic from different instances.

One method of providing this logical interface between the service provider routers is by configuring tunnels between them. You can configure IP Security (IPsec), generic routing encapsulation (GRE), or IP-IP tunnels between the service provider routers, terminating the tunnels at the virtual-router instance.



## VPNs and Logical Systems

You can partition a single physical router into multiple logical systems that perform independent routing tasks. Because logical systems perform a subset of the tasks once handled by the physical router, logical systems offer an effective way to maximize the use of a single routing platform.

Logical systems perform a subset of the actions of a physical router and have their own unique routing tables, interfaces, policies, and routing instances. A set of logical systems within a single router can handle the functions previously performed by several small routers.

Logical systems support Layer 2 VPNs, Layer 3 VPNs, VPLS, and Layer 2 circuits.. For more information about logical systems, see the *Logical Systems User Guide for Routers and Switches*.

Starting in Junos OS release 17.4R1, Ethernet VPN (EVPN) support has also been extended to logical systems running on MX devices. The same EVPN options and performance are available, and can be configured under the `[edit logical-systems logical-system-name routing-instances routing-instance-name protocols evpn]` hierarchy.

## Understanding Layer 3 VPNs

### IN THIS SECTION

- [Components of a Layer 3 VPN | 38](#)
- [Layer 3 VPN Terminology | 38](#)
- [Layer 3 VPN Architecture | 40](#)

Virtual private networks (VPNs) are private networks that use a public network to connect two or more remote sites. Instead of dedicated connections between networks, VPNs use virtual connections routed (tunneled) through public networks that are typically service provider networks.

Layer 3 VPN operates at the Layer 3 level of the OSI model, the Network layer. A Layer 3 VPN is composed of a set of customer sites that are connected over a service provider's existing public Internet backbone. A peer-to-peer model is used to connect to the customer sites, where the service providers learn the customer routes on peering with the customers. The common routing information is shared across the provider's backbone using multiprotocol BGP, and the VPN traffic is forwarded to the customer sites using MPLS.



Junos OS supports Layer 3 VPNs based on RFC 4364. The RFC describes VPNs using MPLS tunnels for connectivity, BGP to distribute reachability information, and an IP backbone for transport. Service providers use their IP backbones to link a set of customer sites belonging to the same VPN.

### Components of a Layer 3 VPN

There are three primary types of MPLS VPNs: Layer 2 VPNs, Layer 2 circuits, and Layer 3 VPNs. All types of MPLS VPNs share certain components:

- **CE devices**—Customer Edge (CE) devices at the customer premises that connect to the provider's network. Some models call these Customer Premises Equipment (CPE) devices.
- **Customer network**—Customer sites with CE devices that belong to the VPN.
- **Provider network**—The service provider backbone network running the MPLS backbone.
- **P devices**—Provider (P) devices within the core of the provider's network. Provider devices are not connected to any device at a customer site and are part of the tunnel between pairs of PE devices. Provider devices support label-switched path (LSP) functionality as part of the tunnel support, but do not support VPN functionality.
- **PE devices**—Provider Edge (PE) devices within a service provider core network that connect directly to a CE device at the customer's site.
- **MP-BGP**—PE devices use MP-BGP to distribute customer routes to the proper PE devices across the MPLS backbone.

### Layer 3 VPN Terminology

VPNs use a distinct terminology to identify components of the network:

- **IP routing table** (also called the global routing table)—This table contains service provider routes not included in a VRF. Provider devices need this table to be able to reach each other, while the VRF table is needed to reach all customer devices on a particular VPN. For example, a PE router with Interface A to a CE router and Interface B to a backbone P router places the Interface A addresses in the VRF and the Interface B addresses in the global IP routing table.
- **Route Distinguisher**—A 64-bit value prepended to an IP address. This unique tag helps identify the different customers' routes as packets flow across the same service provider tunnel.

Because a typical transit network is configured to handle more than one VPN, the provider routers are likely to have multiple VRF instances configured. As a result, depending on the origin of the traffic and any filtering rules applied to the traffic, the BGP routing tables can contain multiple routes for a particular destination address. Because BGP requires that exactly one BGP route per destination to be imported into the forwarding table, BGP must have a way to distinguish between potentially identical network layer reachability information (NLRI) messages received from different VPNs.



A route distinguisher is a locally unique number that identifies all route information for a particular VPN. Unique numeric identifiers allow BGP to distinguish between routes that are otherwise identical.

Each routing instance that you configure on a PE router must have a unique route distinguisher. There are two possible formats:

- **as-number:number**—Where, *as-number* is an autonomous system (AS) number (a 2-byte value) in the range 1 through 65,535, and *number* is any 4-byte value. We recommend that you use an Internet Assigned Numbers Authority (IANA)-assigned, nonprivate AS number, preferably the ISP or the customer AS number.
- **ip-address:number**—Where, *ip-address* is an IP address (a 4-byte value), and *number* is any 2-byte value. The IP address can be any globally unique unicast address. We recommend that you use the address that you configure in the router-id statement, which is a public IP address in your assigned prefix range.
- **Route Target (RT)**—A 64-bit value used to identify the final egress PE device for customer routes in a particular VRF to enable complex sharing of routes. The route target defines which route is part of a VPN. A unique route target helps distinguish between different VPN services on the same router. Each VPN also has a policy that defines how routes are imported into the VRF table on the router. A Layer 2 VPN is configured with import and export policies. A Layer 3 VPN uses a unique route target to distinguish between VPN routes. For example, the RT enables the sharing of routes in a shared service network to multiple customers. Each VPN route can have one or more RTs. A PE device handles RTs as extended BGP community values and uses the RTs to install customer routes.
- **VPN-IPv4 routes**—A route consisting of a 96-bit sequence composed of a 64-bit RD tag prepended to a 32-bit IPv4 address. The PE devices export the VPN-IPv4 routes in IBGP sessions to the other provider devices. These routes are exchanged across the MPLS backbone using iBGP. When the outbound PE device receives the route, it strips off the route distinguisher and advertises the route to the connected CE devices, typically through standard BGP IPv4 route advertisements.
- **VRF**—The virtual routing and forwarding (VRF) table distinguishes the routes for different customers, as well as customer routes from provider routes on the PE device. These routes can include overlapping private network address spaces, customer-specific public routes, and provider routes on a PE device useful to the customer.

A VRF instance consists of one or more routing tables, a derived forwarding table, the interfaces that use the forwarding table, and the policies and routing protocols that determine what goes into the forwarding table. Because each instance is configured for a particular VPN, each VPN has separate tables, rules, and policies that control its operation.

A separate VRF table is created for each VPN that has a connection to a CE router. The VRF table is populated with routes received from directly connected CE sites associated with the VRF instance, and with routes received from other PE routers in the same VPN.




## Layer 3 VPN Architecture

A Layer 3 VPN links customer-edge routers (CE routers) to routers on the edge of the service provider network (PE routers). A Layer 3 VPN uses a peer routing model between local PE and CE routers that directly connect. That is, without needing multiple hops on the provider backbone to connect PE and CE router pairs. The PE routers distribute routing information to all CE routers belonging to the same VPN, based on the BGP route distinguisher, locally and across the provider network. Each VPN has its own routing table for that VPN, coordinated with the routing tables in the CE and PE peer routers. The CE and PE routers have different VRF tables. Each CE router has only a single VRF table because the other VPNs are invisible to the CE. A PE router can connect to more than one CE router, so the PE router has a general IP routing table and VRF table for each attached CE with a VPN.

Figure 2 on page 40 shows the general architecture of a Layer 3 VPN.

Figure 2: General Layer 3 VPN Architecture.

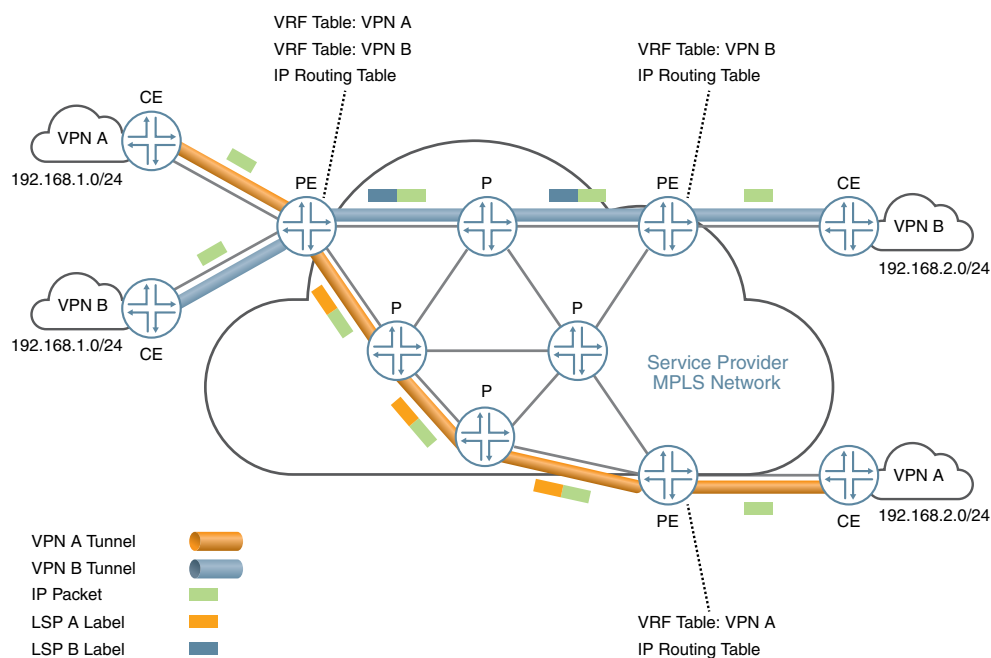

The PE router knows which VRF table to use for packets arriving from remote VPN sites because every VRF table has one or more extended community attributes associated with it. The community attributes identify the route as belonging to a specific collection of routers. The route target community attribute identifies a collection of sites (more accurately, the collection of their VRF tables) to which a PE router distributes routes. The PE router uses the route target to import the correct remote VPN routes into its VRF tables.

The import and export of VPN routes between VPN sites is not automatic. This process is controlled by BGP routing policies. The routing policies establish the rules for exchanging routing information across the



service provider's MPLS network and must be configured correctly and maintained when the network topology changes.

The PE router classifies IPv4 routes announced by a peer CE router and received by the PE router as VPN-IPv4 routes. When an ingress PE router receives routes advertised from a directly connected peer CE router, the ingress PE router checks the received route against the VRF export policy for that VPN. That is, the ingress PE router decides which remote PE routers need to know about the advertised routes. This is a two-step process:

- If the established export policy accepts the route, the PE router converts the information to VPN-IPv4 format by adding the route distinguisher to the IPv4 address. The PE router then announces the VPN-IPv4 route to the remote PE routers. The configured export target policy of the VRF table determines the value of the attached route target. IBGP sessions distribute the VPN-IPv4 routes across the service provider's core network.
- If the established export policy does not accept the route, the PE router does not export the route to other PE routers, but the PE router uses the route locally. This happens, for example, when two CE routers in the same VPN connect directly to the same PE router so general traffic can flow from one CE site to another.

When an egress PE router on the other side of the service provider network receives a route, the egress PE router checks the route against the IBGP import policy in place between the PE routers. If the egress PE router accepts the route, then the egress PE router adds the route to the `bgp.l3vpn.0` routing table. The router also checks the route against the VRF import policy for the VPN. If the route is accepted, the egress PE router removes the route distinguisher and places the route into the correct VRF table. The VRF tables use the `routing-instance-name.inet.0` naming convention, so "VPN A" usually configures the table as `vpna.inet.0`.

## Supported Layer 3 VPN Standards

Junos OS substantially supports the following RFCs, which define standards for Layer 3 virtual private networks (VPNs).

- RFC 2283, *Multiprotocol Extensions for BGP-4*
- RFC 2685, *Virtual Private Networks Identifier*
- RFC 2858, *Multiprotocol Extensions for BGP-4*
- RFC 4364, *BGP/MPLS IP Virtual Private Networks (VPNs)*
- RFC 4379, *Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures*

The traceroute functionality is supported only on transit routers.

- RFC 4576, *Using a Link State Advertisement (LSA) Options Bit to Prevent Looping in BGP/MPLS IP Virtual Private Networks (VPNs)*



- RFC 4577, *OSPF as the Provider/Customer Edge Protocol for BGP/MPLS IP Virtual Private Networks (VPNs)*
- RFC 4659, *BGP/MPLS IP Virtual Private Network (VPN) Extension for IPv6 VPN*
- RFC 4684, *Constrained Route Distribution for Border Gateway Protocol/MultiProtocol Label Switching (BGP/MPLS) Internet Protocol (IP) Virtual Private Networks (VPNs)*

The following RFCs do not define a standard, but provide information about technology related to Layer 3 VPNs. The IETF classifies them as a “Best Current Practice” or “Informational.”

- RFC 1918, *Address Allocation for Private Internets*
- RFC 2917, *A Core MPLS IP VPN Architecture*

SEE ALSO

<a href="#">Supported Carrier-of-Carriers and Interprovider VPN Standards   402</a>
<a href="#">Supported VPWS Standards</a>
<a href="#">Supported Layer 2 VPN Standards</a>
<a href="#">Supported Multicast VPN Standards   563</a>
<a href="#">Supported VPLS Standards</a>
<a href="#">Supported MPLS Standards</a>
<a href="#">Supported Standards for BGP</a>
<a href="#">Accessing Standards Documents on the Internet</a>

## Understanding Layer 3 VPN Forwarding Through the Core

The PE routers in the provider’s core network are the only routers that are configured to support VPNs and hence are the only routers to have information about the VPNs. From the point of view of VPN functionality, the provider (P) routers in the core—those P routers that are not directly connected to CE routers—are merely routers along the tunnel between the ingress and egress PE routers.

The tunnels can be either LDP or MPLS. Any P routers along the tunnel must support the protocol used for the tunnel, either LDP or MPLS.

When PE-router-to-PE router forwarding is tunneled over MPLS label-switched paths (LSPs), the MPLS packets have a two-level label stack (see [Figure 3 on page 43](#)):

- Outer label—Label assigned to the address of the BGP next hop by the IGP next hop
- Inner label—Label that the BGP next hop assigned for the packet’s destination address



Figure 3: Using MPLS LSPs to Tunnel Between PE Routers


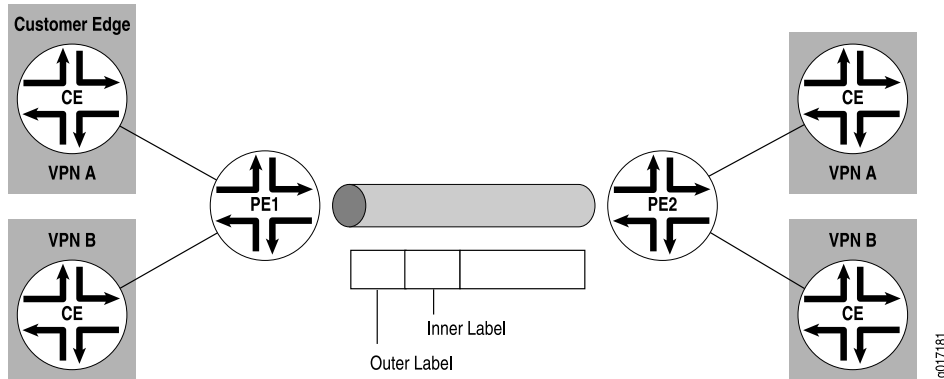


Figure 4 on page 43 illustrates how the labels are assigned and removed:

1. When CE Router X forwards a packet to Router PE1 with a destination of CE Router Y, the PE route identifies the BGP next hop to Router Y and assigns a label that corresponds to the BGP next hop and identifies the destination CE router. This label is the inner label.
2. Router PE1 then identifies the IGP route to the BGP next hop and assigns a second label that corresponds to the LSP of the BGP next hop. This label is the outer label.
3. The inner label remains the same as the packet traverses the LSP tunnel. The outer label is swapped at each hop along the LSP and is then popped by the penultimate hop router (the third P router).
4. Router PE2 pops the inner label from the route and forwards the packet to Router Y.

Figure 4: Label Stack



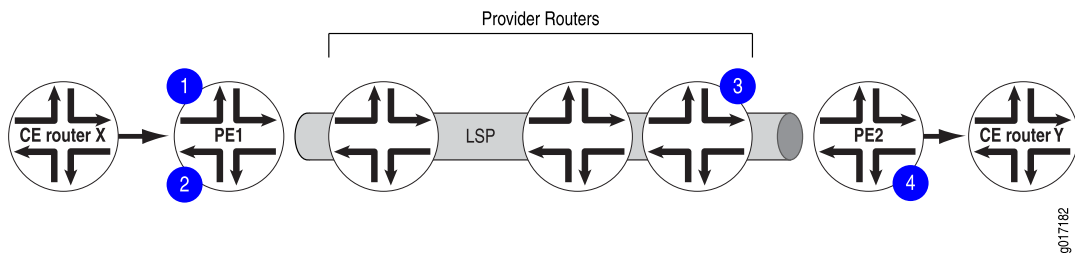

## Understanding Layer 3 VPN Attributes


Route distribution within a VPN is controlled through BGP extended community attributes. RFC 4364 defines the following three attributes used by VPNs:

- **Target VPN**—Identifies a set of sites within a VPN to which a provider edge (PE) router distributes routes. This attribute is also called the *route target*. The route target is used by the egress PE router to determine whether a received route is destined for a VPN that the router services.

Figure 5 on page 44 illustrates the function of the route target. PE Router PE1 adds the route target “VPN B” to routes received from the customer edge (CE) router at Site 1 in VPN B. When it receives the route, the egress router PE2 examines the route target, determines that the route is for a VPN that it services, and accepts the route. When the egress router PE3 receives the same route, it does not accept the route because it does not service any CE routers in VPN B.

- **VPN of origin**—Identifies a set of sites and the corresponding route as having come from one of the sites in that set.
- **Site of origin**—Uniquely identifies the set of routes that a PE router learned from a particular site. This attribute ensures that a route learned from a particular site through a particular PE-CE connection is not distributed back to the site through a different PE-CE connection. It is particularly useful if you are using BGP as the routing protocol between the PE and CE routers and if different sites in the VPN have been assigned the same autonomous system (AS) numbers.

Figure 5: VPN Attributes and Route Distribution

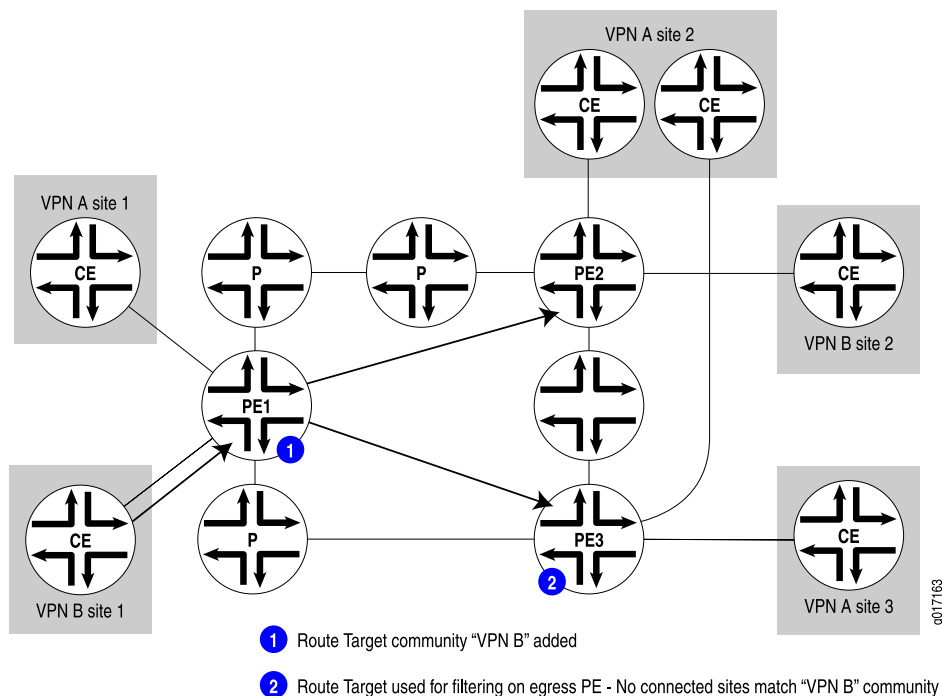




## Routers in a VPN

Figure 6 on page 45 illustrates how VPN functionality is provided by the provider edge (PE) routers; the provider and customer edge (CE) routers have no special configuration requirements for VPNs.

Figure 6: Routers in a VPN

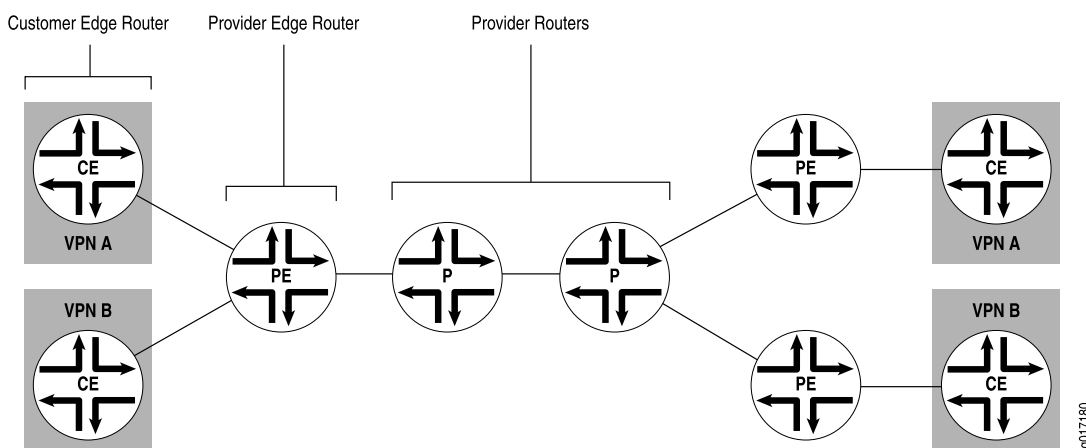

## Introduction to Configuring Layer 3 VPNs

To configure Layer 3 virtual private network (VPN) functionality, you must enable VPN support on the provider edge (PE) router. You must also configure any provider (P) routers that service the VPN, and you must configure the customer edge (CE) routers so that their routes are distributed into the VPN.

To configure Layer 3 VPNs, you include the following statements:

```
description text;
instance-type vrf;
interface interface-name;
protocols {
  bgp {
    group group-name {
      peer-as as-number;
      neighbor ip-address;
    }
    multihop ttl-value;
  }
  (ospf | ospf3) {
    area area {
```



```

    interface interface-name;
  }
  domain-id domain-id;
  domain-vpn-tag number;
  sham-link {
    local address;
  }
  sham-link-remote address <metric number>;
}
rip {
  rip-configuration;
}
}
route-distinguisher (as-number:id | ip-address:id);
router-id address;
routing-options {
  autonomous-system autonomous-system {
    independent-domain;
    loops number;
  }
  forwarding-table {
    export [ policy-names ];
  }
  interface-routes {
    rib-group group-name;
  }
  martians {
    destination-prefix match-type <allow>;
  }
  maximum-paths {
    path-limit;
    log-interval interval;
    log-only;
    threshold percentage;
  }
  maximum-prefixes {
    prefix-limit;
    log-interval interval;
    log-only;
    threshold percentage;
  }
  multipath {
    vpn-unequal-cost;
  }
}

```



```

options {
    syslog (level level | upto level);
}
rib routing-table-name {
    martians {
        destination-prefix match-type <allow>;
    }
    multipath {
        vpn-unequal-cost;
    }
    static {
        defaults {
            static-options;
        }
        route destination-prefix {
            next-hop [next-hops];
            static-options;
        }
    }
}
static {
    defaults {
        static-options;
    }
    route destination-prefix {
        policy [ policy-names ];
        static-options;
    }
}
vrf-advertise-selective {
    family {
        inet-mvpn;
        inet6-mvpn;
    }
}
vrf-export [ policy-names ];
vrf-import [ policy-names ];
vrf-target (community | export community-name | import community-name);
vrf-table-label;

```

You can include these statements at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]



**NOTE:** The **[edit logical-systems]** hierarchy level is not applicable in ACX Series routers.

The **sham-link**, **sham-link-remote**, and **vrf-advertise-selective** statements are not applicable in ACX Series routers.

For Layer 3 VPNs, only some of the statements in the **[edit routing-instances]** hierarchy are valid. For the full hierarchy, see *Junos OS Routing Protocols Library*.

In addition to these statements, you must enable a signaling protocol, IBGP sessions between the PE routers, and an interior gateway protocol (IGP) on the PE and P routers.

By default, Layer 3 VPNs are disabled.

Many of the configuration procedures for Layer 3 VPNs are common to all types of VPNs.



# 2

CHAPTER

## Routing in Layer 3 VPNs

---

Routing Instances in Layer 3 VPNs | 51

Creating Unique VPN Routes Using VRF Tables | 63

Distributing VPN Routes | 94

Route Target Filtering | 114

Configuring Routing Between PE and CE Routers | 180

IPv4 Traffic Over Layer 3 VPNs | 239

IPv6 Traffic over Layer 3 VPNs | 249

Configuring an AS for Layer 3 VPNs | 267

Limiting VPN Routes Using Route Resolution | 283

Enabling Internet Access for Layer 3 VPNs | 291

Connecting Layer 3 VPNs to Layer 2 Circuits | 339

Connecting Layer 3 VPNs to Layer 2 VPNs | 365

---







# Routing Instances in Layer 3 VPNs

## IN THIS SECTION

- [Routing Instances in Layer 3 VPNs | 51](#)
- [Configuring Logical Units on the Loopback Interface for Routing Instances in Layer 3 VPNs | 52](#)
- [Configuring Routing Instances on PE Routers in VPNs | 53](#)
- [Configuring Virtual-Router Routing Instances in VPNs | 59](#)
- [Configuring Path MTU Checks for VPN Routing Instances | 61](#)

This topic discusses configuring routing instances in Layer 3 VPNs

## Routing Instances in Layer 3 VPNs

A routing instance is a collection of routing tables, interfaces, and routing protocol parameters. The set of interfaces belongs to the routing tables, and the routing protocol parameters control the information in the routing tables. Each routing instance has a unique name and a corresponding IP unicast table.

To implement Layer 3 VPNs in the JUNOS Software, you configure one routing instance for each VPN. You configure the routing instances on PE routers only. Each VPN routing instance consists of the following components:

- VRF table—On each PE router, you configure one VRF table for each VPN.
- Set of interfaces that use the VRF table—The logical interface to each directly connected CE router must be associated with a VRF table. You can associate more than one interface with the same VRF table if more than one CE router in a VPN is directly connected to the PE router.
- Policy rules—These control the import of routes into and the export of routes from the VRF table.
- One or more routing protocols that install routes from CE routers into the VRF table—You can use the BGP, OSPF, and RIP routing protocols, and you can use static routes.



## Configuring Logical Units on the Loopback Interface for Routing Instances in Layer 3 VPNs

For Layer 3 VPNs (VRF routing instances), you can configure a logical unit on the loopback interface into each VRF routing instance that you have configured on the router. Associating a VRF routing instance with a logical unit on the loopback interface allows you to easily identify the VRF routing instance.

Doing this is useful for troubleshooting:

- It allows you to ping a remote CE router from a local PE router in a Layer 3 VPN. For more information, see [“Example: Troubleshooting Layer 3 VPNs” on page 1190](#).
- It ensures that a path maximum transmission unit (MTU) check on traffic originating on a VRF or virtual-router routing instance functions properly. For more information, see [“Configuring Path MTU Checks for VPN Routing Instances” on page 61](#).

You can also configure a firewall filter for the logical unit on the loopback interface; this configuration allows you to filter traffic for the VRF routing instance associated with it.

The following describes how firewall filters affect the VRF routing instance depending on whether they are configured on the default loopback interface, the VRF routing instance, or some combination of the two. The “default loopback interface” refers to **lo0.0** (associated with the default routing table), and the “VRF loopback interface” refers to **lo0.n**, which is configured in the VRF routing instance.

- If you configure Filter A on the default loopback interface and Filter B on the VRF loopback interface, the VRF routing instance uses Filter B.
- If you configure Filter A on the default loopback interface but do not configure a filter on the VRF loopback interface, the VRF routing instance does not use a filter.
- If you configure Filter A on the default loopback interface but do not even configure a VRF loopback interface, the VRF routing instance uses Filter A.

To configure a logical unit on the loopback interface, include the **unit** statement:

```
unit number {
  family inet {
    address address;
  }
}
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces lo0]**
- **[edit logical-systems *logical-system-name* interfaces lo0]**

To associate a firewall filter with the logical unit on the loopback interface, include the **filter** statement:



```
filter {
  input filter-name;
}
```

You can include this statement at the following hierarchy levels:

- [edit interfaces **lo0** unit *unit-number* family inet]
- [edit logical-systems *logical-system-name* interfaces **lo0** unit *unit-number* family inet]

To include the **lo0.n** interface (where *n* specifies the logical unit) in the configuration for the VRF routing instance, include the following statement:

```
interface lo0.n;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

## Configuring Routing Instances on PE Routers in VPNs

### IN THIS SECTION

- [Configuring the Routing Instance Name for a VPN | 54](#)
- [Configuring the Description | 55](#)
- [Configuring the Instance Type | 55](#)
- [Configuring Interfaces for VPN Routing | 56](#)
- [Configuring the Route Distinguisher | 58](#)
- [Configuring Automatic Route Distinguishers | 59](#)

You need to configure a routing instance for each VPN on each of the PE routers participating in the VPN. The configuration procedures outlined in this section are applicable to Layer 2 VPNs, Layer 3 VPNs, and VPLS. The configuration procedures specific to each type of VPN are described in the corresponding sections in the other configuration chapters.

To configure routing instances for VPNs, include the following statements:



```

description text;
instance-type type;
interface interface-name;
route-distinguisher (as-number:number | ip-address:number);
vrf-import [ policy-names ];
vrf-export [ policy-names ];
vrf-target {
    export community-name;
    import community-name;
}

```

You can include these statements at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

To configure VPN routing instances, you perform the steps in the following sections:

### Configuring the Routing Instance Name for a VPN

The name of the routing instance for a VPN can be a maximum of 128 characters and can contain letters, numbers, and hyphens. In Junos OS Release 9.0 and later, you can no longer specify **default** as the actual routing-instance name. You also cannot use any special characters (! @ # \$ % ^ & \* , + < > : ;) within the name of a routing instance.

**NOTE:** In Junos OS Release 9.6 and later, you can include a slash (/) in a routing instance name only if a logical system is not configured. That is, you cannot include the slash character in a routing instance name if a logical system other than the default is explicitly configured.

Specify the routing-instance name with the **routing-instance** statement:

```

routing-instance routing-instance-name {...}

```

You can include this statement at the following hierarchy levels:

- [edit]
- [edit logical-systems *logical-system-name*]



## Configuring the Description

To provide a text description for the routing instance, include the **description** statement. If the text includes one or more spaces, enclose them in quotation marks (" "). Any descriptive text you include is displayed in the output of the **show route instance detail** command and has no effect on the operation of the routing instance.

To configure a text description, include the **description** statement:

```
description text;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

## Configuring the Instance Type

The instance type you configure varies depending on whether you are configuring Layer 2 VPNs, Layer 3 VPNs, VPLS, or virtual routers. Specify the instance type by including the **instance-type** statement:

- To enable Layer 2 VPN routing on a PE router, include the **instance-type** statement and specify the value **l2vpn**:

```
instance-type l2vpn;
```

- To enable VPLS routing on a PE router, include the **instance-type** statement and specify the value **vpls**:

```
instance-type vpls;
```

- Layer 3 VPNs require that each PE router have a VPN routing and forwarding (VRF) table for distributing routes within the VPN. To create the VRF table on the PE router, include the **instance-type** statement and specify the value **vrf**:

```
instance-type vrf;
```

**NOTE:** Routing Engine based sampling is not supported on VRF routing instances.

- To enable the virtual-router routing instance, include the **instance-type** statement and specify the value **virtual-router**:



```
instance-type virtual-router;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

## Configuring Interfaces for VPN Routing

### IN THIS SECTION

- [General Configuration for VPN Routing | 56](#)
- [Configuring Interfaces for Layer 3 VPNs | 57](#)
- [Configuring Interfaces for Carrier-of-Carriers VPNs | 57](#)
- [Configuring Unicast RPF on VPN Interfaces | 58](#)

On each PE router, you must configure an interface over which the VPN traffic travels between the PE and CE routers.

The sections that follow describe how to configure interfaces for VPNs:

### **General Configuration for VPN Routing**

The configuration described in this section applies to all types of VPNs. For Layer 3 VPNs and carrier-of-carriers VPNs, complete the configuration described in this section before proceeding to the interface configuration sections specific to those topics.

To configure interfaces for VPN routing, include the **interface** statement:

```
interface interface-name;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

Specify both the physical and logical portions of the interface name, in the following format:

```
physical.logical
```



For example, in **at-1/2/1.2**, **at-1/2/1** is the physical portion of the interface name and **2** is the logical portion. If you do not specify the logical portion of the interface name, the value **0** is set by default.

A logical interface can be associated with only one routing instance. If you enable a routing protocol on all instances by specifying **interfaces all** when configuring the master instance of the protocol at the **[edit protocols]** hierarchy level, and if you configure a specific interface for VPN routing at the **[edit routing-instances routing-instance-name]** hierarchy level or at the **[edit logical-systems logical-system-name routing-instances routing-instance-name]** hierarchy level, the latter interface statement takes precedence and the interface is used exclusively for the VPN.

If you explicitly configure the same interface name at the **[edit protocols]** hierarchy level and at either the **[edit routing-instances routing-instance-name]** or **[edit logical-systems logical-system-name routing-instances routing-instance-name]** hierarchy levels, an attempt to commit the configuration fails.

### Configuring Interfaces for Layer 3 VPNs

When you configure the Layer 3 VPN interfaces at the **[edit interfaces]** hierarchy level, you must also configure **family inet** when configuring the logical interface:

```
[edit interfaces]
interface-name {
  unit logical-unit-number {
    family inet;
  }
}
```

### Configuring Interfaces for Carrier-of-Carriers VPNs

When you configure carrier-of-carriers VPNs, you need to configure the **family mpls** statement in addition to the **family inet** statement for the interfaces between the PE and CE routers. For carrier-of-carriers VPNs, configure the logical interface as follows:

```
[edit interfaces]
interface-name {
  unit logical-unit-number {
    family inet;
    family mpls;
  }
}
```

If you configure **family mpls** on the logical interface and then configure this interface for a non-carrier-of-carriers routing instance, the **family mpls** statement is automatically removed from the configuration for the logical interface, since it is not needed.



### Configuring Unicast RPF on VPN Interfaces

For VPN interfaces that carry IP version 4 or version 6 (IPv4 or IPv6) traffic, you can reduce the impact of denial-of-service (DoS) attacks by configuring unicast reverse path forwarding (RPF). Unicast RPF helps determine the source of attacks and rejects packets from unexpected source addresses on interfaces where unicast RPF is enabled.

You can configure unicast RPF on a VPN interface by enabling unicast RPF on the interface and including the **interface** statement at the **[edit routing-instances routing-instance-name]** hierarchy level.

You cannot configure unicast RPF on the core-facing interfaces. You can only configure unicast RPF on the CE router-to-PE router interfaces on the PE router. However, for virtual-router routing instances, unicast RPF is supported on all interfaces you specify in the routing instance.

For information about how to configure unicast RPF on VPN interfaces, see *Understanding Unicast RPF (Routers)*.

### Configuring the Route Distinguisher

Each routing instance that you configure on a PE router must have a unique route distinguisher associated with it. VPN routing instances need a route distinguisher to help BGP to distinguish between potentially identical network layer reachability information (NLRI) messages received from different VPNs. If you configure different VPN routing instances with the same route distinguisher, the commit fails.

For Layer 2 VPNs and VPLS, if you have configured the **l2vpn-use-bgp-rules** statement, you must configure a unique route distinguisher for each PE router participating in a specific routing instance.

For other types of VPNs, we recommend that you use a unique route distinguisher for each PE router participating in the routing instance. Although you can use the same route distinguisher on all PE routers for the same VPN routing instance (except for Layer 2 VPNs and VPLS), if you use a unique route distinguisher, you can determine the CE router from which a route originated within the VPN.

To configure a route distinguisher on a PE router, include the **route-distinguisher** statement:

```
route-distinguisher (as-number:number | ip-address:number);
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The route distinguisher is a 6-byte value that you can specify in one of the following formats:

- **as-number:number**, where **as-number** is an autonomous system (AS) number (a 2-byte value) and **number** is any 4-byte value. The AS number can be in the range 1 through 65,535. We recommend that you use an Internet Assigned Numbers Authority (IANA)-assigned, nonprivate AS number, preferably the Internet service provider's (ISP's) own or the customer's own AS number.



- ***ip-address:number***, where ***ip-address*** is an IP address (a 4-byte value) and ***number*** is any 2-byte value. The IP address can be any globally unique unicast address. We recommend that you use the address that you configure in the **route-id** statement, which is a nonprivate address in your assigned prefix range.

## Configuring Automatic Route Distinguishers

If you configure the **route-distinguisher-id** statement at the [edit routing-options] hierarchy level, a route distinguisher is automatically assigned to the routing instance. If you also configure the **route-distinguisher** statement in addition to the **route-distinguisher-id** statement, the value configured for **route-distinguisher** supersedes the value generated from **route-distinguisher-id**.

To assign a route distinguisher automatically, include the **route-distinguisher-id** statement:

```
route-distinguisher-id ip-address;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

A type 1 route distinguisher is automatically assigned to the routing instance using the format ***ip-address:number***. The IP address is specified by the **route-distinguisher-id** statement and the number is unique for the routing instance.

## Configuring Virtual-Router Routing Instances in VPNs

### IN THIS SECTION

- [Configuring a Routing Protocol Between the Service Provider Routers | 60](#)
- [Configuring Logical Interfaces Between Participating Routers | 61](#)

A virtual-router routing instance, like a VRF routing instance, maintains separate routing and forwarding tables for each instance. However, many of the configuration steps required for VRF routing instances are not required for virtual-router routing instances. Specifically, you do not need to configure a route distinguisher, a routing table policy (the **vrf-export**, **vrf-import**, and **route-distinguisher** statements), or MPLS between the service provider routers.



Configure a virtual-router routing instance by including the following statements:

```
description text;
instance-type virtual-router;
interface interface-name;
protocols { ... }
```

You can include these statements at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

The following sections explain how to configure a virtual-router routing instance:

### Configuring a Routing Protocol Between the Service Provider Routers

The service provider routers need to be able to exchange routing information. You can configure the following protocols for the virtual-router routing instance **protocols** statement configuration at the [edit routing-instances *routing-instance-name*] hierarchy level:

- BGP
- IS-IS
- LDP
- OSPF
- Protocol Independent Multicast (PIM)
- RIP

You can also configure static routes.

IBGP route reflection is not supported for virtual-router routing instances.

If you configure LDP under a virtual-router instance, LDP routes are placed by default in the routing instance's inet.0 and inet.3 routing tables (for example, sample.inet.0 and sample.inet.3). To restrict LDP routes to only the routing instance's inet.3 table, include the **no-forwarding** statement:

```
no-forwarding;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols ldp]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols ldp]



When you restrict the LDP routes to only the inet.3 routing table, the corresponding IGP route in the inet.0 routing table can be redistributed and advertised into other routing protocols.

For information about routing tables, see *Understanding Junos OS Routing Tables*.

## Configuring Logical Interfaces Between Participating Routers

You must configure an interface to each customer router participating in the routing instance and to each P router participating in the routing instance. Each virtual-router routing instance requires its own separate logical interfaces to all P routers participating in the instance. To configure interfaces for virtual-router instances, include the **interface** statement:

```
interface interface-name;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

Specify both the physical and logical portions of the interface name, in the following format:

```
physical.logical
```

For example, in **at-1/2/1.2**, **at-1/2/1** is the physical portion of the interface name and **2** is the logical portion. If you do not specify the logical portion of the interface name, **0** is set by default.

You must also configure the interfaces at the [edit **interfaces**] hierarchy level.

One method of providing this logical interface between the provider routers is by configuring tunnels between them. You can configure IP Security (IPsec), generic routing encapsulation (GRE), or IP-IP tunnels between the provider routers, terminating the tunnels at the virtual-router instance.

For information about how to configure tunnels and interfaces, see the *Junos OS Services Interfaces Library for Routing Devices*.

## Configuring Path MTU Checks for VPN Routing Instances

### IN THIS SECTION

- [Enabling Path MTU Checks for a VPN Routing Instance | 62](#)
- [Assigning an IP Address to the VPN Routing Instance | 62](#)



By default, the maximum transmission unit (MTU) check for VPN routing instances is disabled on M Series routers (except the M320 router) and enabled for the M320 router. On M Series routers, you can configure path MTU checks on the outgoing interfaces for unicast traffic routed on VRF routing instances and on virtual-router routing instances.

When you enable an MTU check, the routing platform sends an Internet Control Message Protocol (ICMP) message when a packet traversing the routing instance exceeds the MTU size and has the **do-not-fragment** bit set. The ICMP message uses the VRF local address as its source address.

For an MTU check to work in a routing instance, you must both include the **vrf-mtu-check** statement at the **[edit chassis]** hierarchy level and assign at least one interface containing an IP address to the routing instance.

For more information about the path MTU check, see the *Junos OS Administration Library*.

To configure path MTU checks, do the tasks described in the following sections:

### Enabling Path MTU Checks for a VPN Routing Instance

To enable path checks on the outgoing interface for unicast traffic routed on a VRF or virtual-router routing instance, include the **vrf-mtu-check** statement at the **[edit chassis]** hierarchy level:

```
[edit chassis]
vrf-mtu-check;
```

### Assigning an IP Address to the VPN Routing Instance

To ensure that the path MTU check functions properly, at least one IP address must be associated with each VRF or virtual-router routing instance. If an IP address is not associated with the routing instance, ICMP reply messages cannot be sent.

Typically, the VRF or virtual-router routing instance IP address is drawn from among the IP addresses associated with interfaces configured for that routing instance. If none of the interfaces associated with a VRF or virtual-router routing instance is configured with an IP address, you need to explicitly configure a logical loopback interface with an IP address. This interface must then be associated with the routing instance. See [“Configuring Logical Units on the Loopback Interface for Routing Instances in Layer 3 VPNs” on page 52](#) for details.

#### RELATED DOCUMENTATION

*Routing Policies, Firewall Filters, and Traffic Policers User Guide*

[Configuring Policies for the VRF Table on PE Routers in VPNs](#) | 102



## Creating Unique VPN Routes Using VRF Tables

### IN THIS SECTION

- Understanding Virtual Routing and Forwarding Tables | 63
- Understanding VRF Localization in Layer 3 VPNs | 67
- Maximizing VPN Routes Using VRF Localization for Layer 3 VPNs | 68
- Example: Improving Scalability Using VRF Localization for Layer 3 VPNs | 70
- Filtering Packets in Layer 3 VPNs Based on IP Headers | 85
- Configuring a Label Allocation and Substitution Policy for VPNs | 93


### Understanding Virtual Routing and Forwarding Tables

To separate a VPN's routes from routes in the public Internet or those in other VPNs, the PE router creates a separate routing table for each VPN, called a VPN routing and forwarding (VRF) table. The PE router creates one VRF table for each VPN that has a connection to a CE router. Any customer or site that belongs to the VPN can access only the routes in the VRF tables for that VPN.

[Figure 7 on page 64](#) illustrates the VRF tables that are created on the PE routers. The three PE routers have connections to CE routers that are in two different VPNs, so each PE router creates two VRF tables, one for each VPN.



Figure 7: VRF Tables

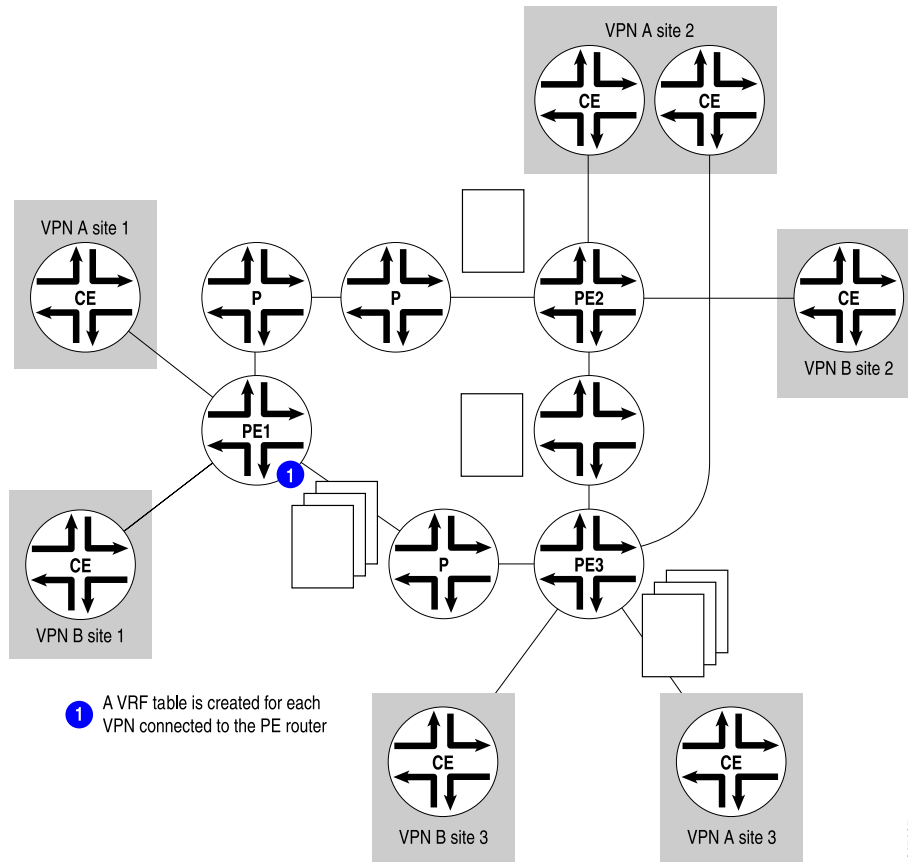

Each VRF table is populated from routes received from directly connected CE sites associated with that VRF routing instance and from routes received from other PE routers that passed BGP community filtering and are in the same VPN.

Each PE router also maintains one global routing table (**inet.0**) to reach other routers in and outside the provider's core network.

Each customer connection (that is, each logical interface) is associated with one VRF table. Only the VRF table associated with a customer site is consulted for packets from that site.

You can configure the router so that if a next hop to a destination is not found in the VRF table, the router performs a lookup in the global routing table, which is used for Internet access.



The Junos OS uses the following routing tables for VPNs:

- **bgp.l3vpn.0**—Stores routes learned from other PE routers. Routes in this table are copied into a Layer 3 VRF when there is a matching route table. This table is present only on PE routers, and it does not store routes received from directly connected CE routers.

When a PE router receives a route from another PE router, it places the route into its **bgp.l3vpn.0** routing table. The route is resolved using the information in the **inet.3** routing table. The resultant route is converted into IPv4 format and redistributed to all **routing-instance-name.inet.0** routing tables on the PE router if it matches the VRF import policy.

The **bgp.l3vpn.0** table is also used to resolve routes over the MPLS tunnels that connect the PE routers. These routes are stored in the **inet.3** routing table. PE-to-PE router connectivity must exist in **inet.3** (not just in **inet.0**) for VPN routes to be resolved properly.

When a router is advertising non-local VPN-IPv4 unicast routes and the router is a route reflector or is performing external peering, the VPN-IPv4 unicast routes are automatically exported into the VPN routing table (**bgp.l3vpn.0**). This enables the router to perform path selection and advertise from the **bgp.l3vpn.0** routing table.

To determine whether to add a route to the **bgp.l3vpn.0** routing table, the Junos OS checks it against the VRF instance import policies for all the VPNs configured on the PE router. If the VPN-IPv4 route matches one of the policies, it is added to the **bgp.l3vpn.0** routing table. To display the routes in the **bgp.l3vpn.0** routing table, use the **show route table bgp.l3vpn.0** command.

- **routing-instance-name.inet.0**—Stores all unicast IPv4 routes received from directly connected CE routers in a routing instance (that is, in a single VPN) and all explicitly configured static routes in the routing instance. This is the VRF table and is present only on PE routers. For example, for a routing instance named **VPN-A**, the routing table for that instance is named **VPN-A.inet.0**.

When a CE router advertises to a PE router, the PE router places the route into the corresponding **routing-instance-name.inet.0** routing table and advertises the route to other PE routers if it passes a VRF export policy. Among other things, this policy tags the route with the route distinguisher (route target) that corresponds to the VPN site to which the CE belongs. A label is also allocated and distributed with the route. The **bgp.l3vpn.0** routing table is not involved in this process.

The **routing-instance-name.inet.0** table also stores routes announced by a remote PE router that match the VRF import policy for that VPN. The PE router redistributed these routes from its **bgp.l3vpn.0** table.

Routes are not redistributed from the **routing-instance-name.inet.0** table to the **bgp.l3vpn.0** table; they are directly advertised to other PE routers.

For each **routing-instance-name.inet.0** routing table, one forwarding table is maintained in the router's Packet Forwarding Engine. This table is maintained in addition to the forwarding tables that correspond to the router's **inet.0** and **mpls.0** routing tables. As with the **inet.0** and **mpls.0** routing tables, the best routes from the **routing-instance-name.inet.0** routing table are placed into the forwarding table.

To display the routes in the **routing-instance-name.inet.0** table, use the **show route table routing-instance-name.inet.0** command.



- **inet.3**—Stores all MPLS routes learned from LDP and RSVP signaling done for VPN traffic. The routing table stores the MPLS routes only if the **traffic-engineering bgp-igp** option is not enabled.

For VPN routes to be resolved properly, the **inet.3** table must contain routes to all the PE routers in the VPN.

To display the routes in the **inet.3** table, use the **show route table inet.3** command.

- **inet.0**—Stores routes learned by the IBGP sessions between the PE routers. To provide Internet access to the VPN sites, configure the **routing-instance-name.inet.0** routing table to contain a default route to the **inet.0** routing table.

To display the routes in the **inet.0** table, use the **show route table inet.0** command.

The following routing policies, which are defined in VRF import and export statements, are specific to VRF tables.

- Import policy—Applied to VPN-IPv4 routes learned from another PE router to determine whether the route should be added to the PE router's **bgp.l3vpn.0** routing table. Each routing instance on a PE router has a VRF import policy.
- Export policy—Applied to VPN-IPv4 routes that are announced to other PE routers. The VPN-IPv4 routes are IPv4 routes that have been announced by locally connected CE routers.

VPN route processing differs from normal BGP route processing in one way. In BGP, routes are accepted if they are not explicitly rejected by import policy. However, because many more VPN routes are expected, the Junos OS does not accept (and hence store) VPN routes unless the route matches at least one VRF import policy. If no VRF import policy explicitly accepts the route, it is discarded and not even stored in the **bgp.l3vpn.0** table. As a result, if a VPN change occurs on a PE router—such as adding a new VRF table or changing a VRF import policy—the PE router sends a BGP route refresh message to the other PE routers (or to the route reflector if this is part of the VPN topology) to retrieve all VPN routes so they can be reevaluated to determine whether they should be kept or discarded.

SEE ALSO

| *IGP Shortcuts and VPNs*



## Understanding VRF Localization in Layer 3 VPNs

In a Layer 3 VPN, to separate routes of a VPN from routes in the public Internet or those in other VPNs, the PE router creates a separate routing table for each VPN, called a virtual routing and forwarding (VRF) table. Each VRF uses a route distinguisher and route target to differentiate other VPNs so that each VRF achieves a VPN in a public network. The PE router creates one VRF table for each VPN that has a connection to a CE router. Any customer or site that belongs to the VPN can access only the routes in the VRF tables for that VPN.

The PE routers in a Layer 3 VPN deployment have two types of line cards hosting the following interfaces:

- CE-facing interfaces
- Core-facing interfaces

**NOTE:** An FPC can be either core-facing or CE-facing.

The VRFs are present on these line cards and currently, in Junos OS, all the routes of all the VRFs are present on all line cards along with chained composite next hops on all the FPCs. This uses up the memory in each line card. Since traffic from CE-facing interfaces comes in only through the corresponding CE-facing FPCs, all the routes and next hops need not be present on all the line cards. VRF localization provides a mechanism for localizing routes of VRF to specific line cards to help maximize the number of routes that a router can handle. CE-facing interfaces localize all the routes of instance type VRF to a specific line card. If CE-facing interfaces are logical interfaces like AE or RLSQ or IRB, then a line card number has to be configured to localize routes. Core-facing line cards store all the VRF routes. These cards have to be configured as VPN core-facing default or VPN core-facing only. Core-facing line cards store routes of all the VRFs, and they are of the following types:

- vpn-core-facing-default — The core-facing FPC installs all the routes and next hops of the VRF routes.
- vpn-core-facing-only — The core-facing FPC installs all the routes and does not store next hops of the VRF routes.

**NOTE:** Core-facing FPCs can be configured as either core-facing-default or core-facing-only.



## Maximizing VPN Routes Using VRF Localization for Layer 3 VPNs

Virtual routing and forwarding (VRF) localization provides a mechanism for localizing routes of VRF to specific line cards to help maximize the number of routes that a router can handle. CE-facing interfaces localize all the routes of instance type VRF to a specific line card. If the CE-facing interfaces are logical interfaces like AE/RLSQ/IRB, then the line card has to be configured to localize routes. Core-facing line cards store all the VRF routes. These cards have to be configured as VPN core-facing only or VPN core-facing default. To configure VRF localization, configure the **localized-fib** statement at the **[edit routing-instances *instance-name* routing-options]** hierarchy level and configure the **vpn-localization** statement at the **[edit chassis fpc *fpc-slot*]** hierarchy level. The **show route vpn-localization** command displays the localization information of all the VRFs in the system.

Before you begin to localize the VRF table:

- Configure the interfaces.
- Configure the routing and signaling protocols.

To configure VRF localization:

1. Configure the chassis of the router.
  - a. Configure the FPC slot as either VPN core-facing only or VPN core-facing default to store the VRF routes.

```
[edit chassis]
user@host# set fpc slot-number vpn-localization vpn-core-facing-only
user@host# set fpc slot-number vpn-localization vpn-core-facing-default
```

2. Configure enhanced IP network service on the chassis.

```
[edit chassis]
user@host# set network-services enhanced-ip
```

3. Create an instance type, configure the route distinguisher, and configure the VRF target community and VRF target label.

```
[edit routing-instances routing-instance]
user@host# set instance-type vrf
user@host# set interface interface-name
user@host# set route-distinguisher route-distinguisher-id
user@host# set provider-tunnel rsvp-te static-lsp vpn1-p2mp
user@host# set vrf-target vrf-target-community
user@host# set vrf-table-label
```



4. Configure the multipath routing option to balance load independent of the protocol.

```
[edit routing-instances routing-instance routing-options]
user@host# set multipath
```

5. Configure the specific FPC of CE-facing physical interfaces or specify the FPC slot number if the CE-facing interfaces are logical interfaces like AE or RSQL or IRB to localize the VRF routing instance routes.

- Configure the specific FPC of CE-facing physical interfaces to localize the VRF routing instance routes.

```
[edit routing-instances routing-instance routing-options]
user@host# set localized-fib
```

- Configure the FPC slot number of the CE-facing logical interfaces like AE or RSQL or IRB to localize the VRF routing instance routes.

```
[edit routing-instances routing-instance routing-options]
user@host# set localized-fib fpc-slot fpc-slot-number
```

6. Configure the peer group of the BGP protocol for the routing instance.

```
[edit routing-instances routing-instance protocols bgp group group-name]
user@host# set type external
user@host# set export direct
user@host# set peer-as 100
user@host# set neighbor IP-address family inet unicast
user@host# set neighbor IP-address family inet6 unicast
```

7. Configure the MVPN protocol for the routing instance.

```
[edit routing-instances routing-instance protocols]
user@host# set mvpn
```



## Example: Improving Scalability Using VRF Localization for Layer 3 VPNs

### IN THIS SECTION

- Requirements | 70
- Overview | 70
- Configuration | 71
- Verification | 84

This example shows how to configure VRF localization on MX Series routers, which enables you to improve the VPN scalability on MX Series routers.

### Requirements

This example uses the following hardware and software components:

- Five MX Series 5G Universal Routing Platforms
- Junos OS Release 14.2 or later running on all devices

Before you begin:

1. Configure the device interfaces.
2. Configure the BGP protocol.

### Overview


Starting with Junos OS Release 14.2, the VRF localization provides a mechanism for localizing routes of VRF to specific line cards which helps maximize the number of routes that a router can handle. CE-facing interfaces localize all the routes of instance type VRF to a specific line card. If the CE-facing interfaces are logical interfaces like AE or RLSQ or IRB, then the line card has to be configured to localize routes. Core-facing line cards store all the VRF routes. These cards have to be configured as VPN core-facing only or VPN core-facing default. To configure VRF localization, configure the **localized-fib** configuration statement at the **[edit routing-instances instance-name routing-options]** hierarchy level and configure **vpn-localization** at the **[edit chassis fpc fpc-slot]** hierarchy level. The **show route vpn-localization** command displays the localization information of all the VRFs in the system.

### Topology

In the topology shown in [Figure 8 on page 71](#), VRF localization is configured on Device PE1.



Figure 8: Example VRF Localization

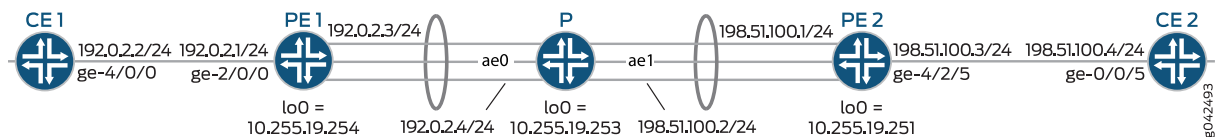

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from the configuration mode.

#### CE1

```
set interfaces ge-4/0/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-4/0/0 unit 0 family inet6 address abcd:a:a:a:1::2/126
set protocols bgp group vpn1 type external
set protocols bgp group vpn1 export direct
set protocols bgp group vpn1 peer-as 10
set protocols bgp group vpn1 neighbor 192.0.2.1 family inet unicast
set protocols bgp group vpn1 neighbor abcd:a:a:a:1::1 family inet6 unicast
set policy-options policy-statement direct from protocol direct
set policy-options policy-statement direct then accept
set policy-options policy-statement load-balancing-policy then load-balance per-packet
set routing-options autonomous-system 100
set routing-options forwarding-table export load-balancing-policy
```

#### PE1

```
set chassis redundancy graceful-switchover
set chassis aggregated-devices ethernet device-count 16
set chassis fpc 8 vpn-localization vpn-core-facing-only
set chassis network-services enhanced-ip
set interfaces ge-2/0/0 unit 0 family inet address 192.0.2.1/24
set interfaces ge-2/0/0 unit 0 family inet6 address abcd:a:a:a:1::1/126
set interfaces ge-8/1/0 gigether-options 802.3ad ae0
```



```

set interfaces ge-8/1/9 gigether-options 802.3ad ae0
set interfaces ae0 unit 0 family inet address 192.0.2.3/24
set interfaces ae0 unit 0 family iso
set interfaces ae0 unit 0 family mpls
set interfaces lo0 unit 1 family inet address 203.0.113.1/24
set interfaces lo0 unit 1 family inet6 address abcd::10:0:1:1/128
set policy-options policy-statement direct from protocol direct
set policy-options policy-statement direct then accept
set policy-options policy-statement load-balancing-policy then load-balance per-packet
set protocols rsvp interface ae0.0
set protocols mpls ipv6-tunneling
set protocols mpls icmp-tunneling
set protocols mpls label-switched-path pe1-pe2-p2mp-1 from 10.255.19.254
set protocols mpls label-switched-path pe1-pe2-p2mp-1 to 10.255.19.251
set protocols mpls label-switched-path pe1-pe2-p2mp-1 link-protection
set protocols mpls label-switched-path pe1-pe2-p2mp-1 p2mp vpn1-p2mp
set protocols mpls label-switched-path pe1-pe3-p2mp-1 from 10.255.19.254
set protocols mpls label-switched-path pe1-pe3-p2mp-1 to 10.255.19.203
set protocols mpls label-switched-path pe1-pe3-p2mp-1 link-protection
set protocols mpls label-switched-path pe1-pe3-p2mp-1 p2mp vpn1-p2mp
set protocols mpls interface ae0.0
set protocols bgp group mpbg type internal
set protocols bgp group mpbg local-address 10.255.19.254
set protocols bgp group mpbg family inet unicast
set protocols bgp group mpbg family inet-vpn unicast
set protocols bgp group mpbg family inet6 unicast
set protocols bgp group mpbg family inet6-vpn unicast
set protocols bgp group mpbg family inet-mvpn signaling
set protocols bgp group mpbg family inet6-mvpn signaling
set protocols bgp group mpbg neighbor 10.255.19.253
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ae0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ae0.0
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-2/0/0.0
set routing-instances vpn1 interface lo0.1
set routing-instances vpn1 route-distinguisher 1:1
set routing-instances vpn1 provider-tunnel rsvp-te static-lsp vpn1-p2mp
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 vrf-table-label
set routing-instances vpn1 routing-options multipath

```



```

set routing-instances vpn1 routing-options localized-fib
set routing-instances vpn1 protocols bgp group grp1 type external
set routing-instances vpn1 protocols bgp group grp1 export direct
set routing-instances vpn1 protocols bgp group grp1 peer-as 100
set routing-instances vpn1 protocols bgp group grp1 neighbor 192.0.2.2 family inet unicast
set routing-instances vpn1 protocols bgp group grp1 neighbor abcd:a:a:a:1::2 family inet6 unicast
set routing-instances vpn1 protocols mvpn
set routing-options nonstop-routing
set routing-options autonomous-system 10
set routing-options forwarding-table export load-balancing-policy
set routing-options forwarding-table chained-composite-next-hop ingress l3vpn extended-space

```

P

```

set chassis aggregated-devices ethernet device-count 16
set interfaces ge-1/0/1 gigether-options 802.3ad ae0
set interfaces ge-1/0/3 gigether-options 802.3ad ae0
set interfaces ge-1/1/1 gigether-options 802.3ad ae1
set interfaces ae0 unit 0 family inet address 192.0.2.4/24
set interfaces ae0 unit 0 family iso
set interfaces ae0 unit 0 family mpls
set interfaces ae1 unit 0 family inet address 198.51.100.2/24
set interfaces ae1 unit 0 family iso
set interfaces ae1 unit 0 family mpls
set routing-options autonomous-system 10
set routing-options forwarding-table export load-balancing-policy
set protocols rsvp interface ae0.0
set protocols rsvp interface ae1.0
set protocols mpls ipv6-tunneling
set protocols mpls icmp-tunneling
set protocols mpls interface ae0.0
set protocols mpls interface ae1.0
set protocols bgp group mpbg type internal
set protocols bgp group mpbg local-address 10.255.19.253
set protocols bgp group mpbg family inet unicast
set protocols bgp group mpbg family inet-vpn unicast
set protocols bgp group mpbg family inet6 unicast
set protocols bgp group mpbg family inet6-vpn unicast
set protocols bgp group mpbg family inet-mvpn signaling
set protocols bgp group mpbg family inet6-mvpn signaling

```



```

set protocols bgp group mpbg cluster 10.255.19.253
set protocols bgp group mpbg neighbor 10.255.19.254
set protocols bgp group mpbg neighbor 10.255.19.251
set protocols bgp group mpbg neighbor 10.255.19.203
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ae0.0
set protocols ospf area 0.0.0.0 interface ae1.0
set protocols ldp interface ae0.0
set protocols ldp interface ae1.0
set policy-options policy-statement load-balancing-policy then load-balance per-packet

```

## PE2

```

set chassis redundancy graceful-switchover
set chassis aggregated-devices ethernet device-count 16
set interfaces ge-4/2/1 gigether-options 802.3ad ae1
set interfaces ge-4/2/5 unit 0 family inet address 198.51.100.3/24
set interfaces ge-4/2/5 unit 0 family inet6 address abcd:a:a:a:2::1/126
set interfaces ae1 unit 0 family inet address 198.51.100.1/24
set interfaces ae1 unit 0 family iso
set interfaces ae1 unit 0 family mpls
set interfaces lo0 unit 2 family inet address 203.0.113.2/24
set interfaces lo0 unit 2 family inet6 address abcd::203:0:113:2/128
set policy-options policy-statement direct from protocol direct
set policy-options policy-statement direct then accept
set policy-options policy-statement load-balancing-policy then load-balance per-packet
set protocols rsvp interface ae1.0
set protocols mpls ipv6-tunneling
set protocols mpls icmp-tunneling
set protocols mpls label-switched-path pe2-pe1-p2mp-1 from 10.255.19.251
set protocols mpls label-switched-path pe2-pe1-p2mp-1 to 10.255.19.254
set protocols mpls label-switched-path pe2-pe1-p2mp-1 link-protection
set protocols mpls label-switched-path pe2-pe1-p2mp-1 p2mp vpn1-p2mp
set protocols mpls label-switched-path pe2-pe3-p2mp-1 from 10.255.19.251
set protocols mpls label-switched-path pe2-pe3-p2mp-1 to 10.255.19.203
set protocols mpls label-switched-path pe2-pe3-p2mp-1 link-protection
set protocols mpls label-switched-path pe2-pe3-p2mp-1 p2mp vpn1-p2mp
set protocols mpls interface ae1.0
set protocols bgp group mpbg type internal

```



```

set protocols bgp group mpbg local-address 10.255.19.251
set protocols bgp group mpbg family inet unicast
set protocols bgp group mpbg family inet-vpn unicast per-prefix-label
set protocols bgp group mpbg family inet6 unicast
set protocols bgp group mpbg family inet6-vpn unicast per-prefix-label
set protocols bgp group mpbg family inet-mvpn signaling
set protocols bgp group mpbg family inet6-mvpn signaling
set protocols bgp group mpbg neighbor 10.255.19.253
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ae1.0
set protocols ldp interface ae1.0
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-4/2/5.0
set routing-instances vpn1 route-distinguisher 1:1
set routing-instances vpn1 provider-tunnel rsvp-te static-lsp vpn1-p2mp
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 vrf-table-label
set routing-instances vpn1 routing-options multipath
set routing-instances vpn1 protocols bgp group grp1 type external
set routing-instances vpn1 protocols bgp group grp1 export direct
set routing-instances vpn1 protocols bgp group grp1 peer-as 200
set routing-instances vpn1 protocols bgp group grp1 neighbor 198.51.100.4 family inet unicast
set routing-instances vpn1 protocols bgp group grp1 neighbor abcd:a:a:a:2::2 family inet6 unicast
set routing-instances vpn1 protocols mvpn
set routing-options nonstop-routing
set routing-options autonomous-system 10
set routing-options forwarding-table export load-balancing-policy

```

## CE2

```

set interfaces ge-0/0/5 unit 0 family inet address 198.51.100.4/24
set interfaces ge-0/0/5 unit 0 family inet6 address abcd:a:a:a:2::2/126
set protocols bgp group vpn1 type external
set protocols bgp group vpn1 export direct
set protocols bgp group vpn1 export vpn1
set protocols bgp group vpn1 peer-as 10
set protocols bgp group vpn1 neighbor 198.51.100.3 family inet unicast
set protocols bgp group vpn1 neighbor abcd:a:a:a:2::1 family inet6 unicast
set policy-options policy-statement direct from protocol direct

```



```

set policy-options policy-statement direct then accept
set policy-options policy-statement load-balancing-policy then load-balance per-packet
set routing-options autonomous-system 200
set routing-options forwarding-table export load-balancing-policy

```

## Configuring Device PE1

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device PE1:

1. Specify the number of aggregated Ethernet interfaces to be created, configure the FPCs as vpn-core-facing-only, and enable enhanced IP network services.

```

[edit chassis]
user@PE1# set redundancy graceful-switchover
user@PE1# set aggregated-devices ethernet device-count 16
user@PE1# set fpc 8 vpn-localization vpn-core-facing-only
user@PE1# set network-services enhanced-ip

```

2. Configure the interfaces.

```

[edit interfaces]
user@PE1# set ge-2/0/0 unit 0 family inet address 192.0.2.1/24
user@PE1# set ge-2/0/0 unit 0 family inet6 address abcd:a:a:a:1::1/126

user@PE1# set ge-8/1/0 gigether-options 802.3ad ae0
user@PE1# set ge-8/1/9 gigether-options 802.3ad ae0

user@PE1# set ae0 unit 0 family inet address 192.0.2.3/24
user@PE1# set ae0 unit 0 family iso
user@PE1# set ae0 unit 0 family mpls

user@PE1# set lo0 unit 1 family inet address 203.0.113.1/24
user@PE1# set lo0 unit 1 family inet6 address abcd::10:0:1:1/128

```

3. Configure policy options to load balance the packets.



```
[edit policy-options policy-statement]
user@PE1# set direct from protocol direct
user@PE1# set direct then accept
user@PE1# set load-balancing-policy then load-balance per-packet
```

4. Configure the RSVP protocol on the interface.

```
[edit protocols rsvp]
user@PE1# set interface ae0.0
```

5. Configure the MPLS protocol.

```
[edit protocols mpls]
user@PE1# set ipv6-tunneling
user@PE1# set icmp-tunneling
user@PE1# set label-switched-path pe1-pe2-p2mp-1 from 10.255.19.254
user@PE1# set label-switched-path pe1-pe2-p2mp-1 to 10.255.19.251
user@PE1# set label-switched-path pe1-pe2-p2mp-1 link-protection
user@PE1# set label-switched-path pe1-pe2-p2mp-1 p2mp vpn1-p2mp
user@PE1# set label-switched-path pe1-pe3-p2mp-1 from 10.255.19.254
user@PE1# set label-switched-path pe1-pe3-p2mp-1 to 10.255.19.203
user@PE1# set label-switched-path pe1-pe3-p2mp-1 link-protection
user@PE1# set label-switched-path pe1-pe3-p2mp-1 p2mp vpn1-p2mp
user@PE1# set interface ae0.0
```

6. Configure the BGP protocol for the mpbg group.

```
[edit protocols bgp group mpbg]
user@PE1# set type internal
user@PE1# set local-address 10.255.19.254
user@PE1# set family inet unicast
user@PE1# set family inet-vpn unicast
user@PE1# set family inet6 unicast
user@PE1# set family inet6-vpn unicast
user@PE1# set family inet-mvpn signaling
user@PE1# set family inet6-mvpn signaling
user@PE1# set neighbor 10.255.19.253
```

7. Configure the OSPF protocol.



```
[edit protocols ospf]
user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.0 interface ae0.0
user@PE1# set area 0.0.0.0 interface lo0.0 passive
```

8. Configure the LDP protocol on the interface.

```
[edit protocols]
user@PE1# set ldp interface ae0.0
```

9. Create an instance type and configure the routing instances on the interface.

```
[edit routing-instances vpn1]
user@PE1# set instance-type vrf
user@PE1# set interface ge-2/0/0.0
user@PE1# set interface lo0.1
```

10. Configure the route distinguisher, and configure the static LSP for the provider tunnel RSVP-TE.

```
[edit routing-instances vpn1]
user@PE1# set route-distinguisher 1:1
user@PE1# set provider-tunnel rsvp-te static-lsp vpn1-p2mp
```

11. Configure the VRF target and the VRF target label for the routing instance.

```
[edit routing-instances vpn1]
user@PE1# set vrf-target target:1:1
user@PE1# set vrf-table-label
```

12. Configure the multipath routing option for a routing instance, and configure the localized fib routing option for the routing instance.

```
[edit routing-instances vpn1 routing-options]
user@PE1# set multipath
user@PE1# set localized-fib
```

13. Configure the group of BGP protocols for a routing instance.



```
[edit routing-instances vpn1 protocols bgp group grp1]
user@PE1# set type external
user@PE1# set export direct
user@PE1# set peer-as 100
user@PE1# set neighbor 192.0.2.2 family inet unicast
user@PE1# set neighbor abcd:a:a:a:1::2 family inet6 unicast
```

14. Configure the MVPN protocols.

```
[edit routing-instances vpn1]
user@PE1# set protocols mvpn
```

15. Configure the nonstop active routing and the autonomous system number for a routing option.

```
[edit routing-options]
user@PE1# set nonstop-routing
user@PE1# set autonomous-system 10
```

16. Configure the load-balancing policy for the forwarding table and extended space for the chained composite next hop for the L3VPN of the forwarding table.

```
[edit routing-options]
user@PE1# set forwarding-table export load-balancing-policy
user@PE1# set forwarding-table chained-composite-next-hop ingress l3vpn extended-space
```

## Results

From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show policy-options**, **show protocols**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show chassis
redundancy {
  graceful-switchover;
}
aggregated-devices {
  ethernet {
    device-count 16;
  }
}
```



```

}
fpc 8 {
    vpn-localization vpn-core-facing-only;
}
network-services enhanced-ip;

```

user@PE1# **show interfaces**

```

ge-2/0/0 {
    unit 0 {
        family inet {
            address 192.0.2.1/24;
        }
        family inet6 {
            address abcd:a:a:a:1::1/126;
        }
    }
}
ge-8/1/0 {
    gigether-options {
        802.3ad ae0;
    }
}
ge-8/1/9 {
    gigether-options {
        802.3ad ae0;
    }
}
ae0 {
    unit 0 {
        family inet {
            address 192.0.2.3/24;
        }
        family iso;
        family mpls;
    }
}
lo0 {
    unit 1 {
        family inet {
            address 203.0.113.1/24;
        }
        family inet6 {
            address abcd::10:0:1:1/128;
        }
    }
}

```



```

    }
}

```

```

user@PE1# show policy-options
policy-statement direct {
    from protocol direct;
    then accept;
}
policy-statement load-balancing-policy {
    then {
        load-balance per-packet;
    }
}

```

```

user@PE1# show routing-options
nonstop-routing;
autonomous-system 10;
forwarding-table {
    export load-balancing-policy;
    chained-composite-next-hop {
        ingress {
            l3vpn extended-space;
        }
    }
}

```

```

user@PE1# show routing-instances
vpn1 {
    instance-type vrf;
    interface ge-2/0/0.0;
    interface lo0.1;
    route-distinguisher 1:1;
    provider-tunnel {
        rsvp-te {
            static-lsp vpn1-p2mp;
        }
    }
    vrf-target target:1:1;
    vrf-table-label;
    routing-options {
        multipath;
        localized-fib;
    }
}

```



```

}
protocols {
  bgp {
    group grp1 {
      type external;
      export direct;
      peer-as 100;
      neighbor 192.0.2.2 {
        family inet {
          unicast;
        }
      }
      neighbor abcd:a:a:a:1::2 {
        family inet6 {
          unicast;
        }
      }
    }
  }
  mvpn;
}
}

```

```

user@PE1# show protocols
rsvp {
  interface ae0.0;
}
mpls {
  ipv6-tunneling;
  icmp-tunneling;
  label-switched-path pe1-pe2-p2mp-1 {
    from 10.255.19.254;
    to 10.255.19.251;
    link-protection;
    p2mp vpn1-p2mp;
  }
  label-switched-path pe1-pe3-p2mp-1 {
    from 10.255.19.254;
    to 10.255.19.203;
    link-protection;
    p2mp vpn1-p2mp;
  }
  interface ae0.0;
}

```



```
bgp {
  group mpbg {
    type internal;
    local-address 10.255.19.254;
    family inet {
      unicast;
    }
    family inet-vpn {
      unicast;
    }
    family inet6 {
      unicast;
    }
    family inet6-vpn {
      unicast;
    }
    family inet-mvpn {
      signaling;
    }
    family inet6-mvpn {
      signaling;
    }
    neighbor 10.255.19.253;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ae0.0;
    interface lo0.0 {
      passive;
    }
  }
}
ldp {
  interface ae0.0;
}
```

If you are done configuring the device, enter **commit** from configuration mode.



## Verification

### IN THIS SECTION

- [Verifying VRF Localization | 84](#)
- [Verifying VRF Localization for a VPN | 85](#)

Confirm that the configuration is working properly.

### *Verifying VRF Localization*

#### Purpose

Verify the localization of VRF in a Layer 3 VPN.

#### Action

From operational mode, run the **show route vpn-localization** command for Device PE1.

```
user@PE1> show route vpn-localization
```

```
Routing table: vpn1.inet, Localized
  Index: 7, Address Family: inet, Localization status: Complete
  Local FPC's: 2 8

Routing table: vpn1.inet6, Localized
  Index: 7, Address Family: inet6, Localization status: Complete
  Local FPC's: 2 8

Routing table: vpn2.inet, Non-localized
  Index: 8, Address Family: inet, Localization status: Complete
  Local FPC's: All

Routing table: vpn2.inet6, Non-localized
  Index: 8, Address Family: inet6, Localization status: Complete
  Local FPC's: All
```

#### Meaning

The output shows the localization information of all the VRFs.



## Verifying VRF Localization for a VPN

### Purpose

Verify VRF localization for a VPN.

### Action

From operational mode, run the **show route vpn-localization vpn-name *vpn-name*** command.

```
user@PE1> show route vpn-localization vpn-name vpn1
```

```
Routing table: vpn1.inet, Localized
  Index: 7, Address Family: inet, Localization status: Complete
  Local FPC's: 2 8

Routing table: vpn1.inet6, Localized
  Index: 7, Address Family: inet6, Localization status: Complete
  Local FPC's: 2 8
```

### Meaning

The output shows the VPN localization of a VPN.

## Filtering Packets in Layer 3 VPNs Based on IP Headers

### IN THIS SECTION

- [Egress Filtering Options | 87](#)
- [Support on Aggregated and VLAN Interfaces for IP-Based Filtering | 87](#)
- [Support on ATM and Frame Relay Interfaces for IP-Based Filtering | 87](#)
- [Support on Ethernet, SONET/SDH, and T1/T3/E3 Interfaces for IP-Based Filtering | 88](#)
- [Support on SONET/SDH and DS3/E3 Channelized Enhanced Intelligent Queuing Interfaces for IP-Based Filtering | 89](#)
- [Support on Multilink PPP and Multilink Frame Relay Interfaces for IP-Based Filtering | 90](#)
- [Support for IP-Based Filtering of Packets with Null Top Labels | 91](#)
- [General Limitations on IP-Based Filtering | 92](#)



Including the **vrf-table-label** statement in the configuration for a routing instance makes it possible to map the inner label to a specific VRF routing table; such mapping allows the examination of the encapsulated IP header at an egress VPN router. You might want to enable this functionality so that you can do either of the following:

- Forward traffic on a PE-router-to-CE-device interface, in a shared medium, where the CE device is a Layer 2 switch without IP capabilities (for example, a metro Ethernet switch).

The first lookup is done on the VPN label to determine which VRF table to refer to, and the second lookup is done on the IP header to determine how to forward packets to the correct end hosts on the shared medium.

- Perform egress filtering at the egress PE router.

The first lookup on the VPN label is done to determine which VRF routing table to refer to, and the second lookup is done on the IP header to determine how to filter and forward packets. You can enable this functionality by configuring output filters on the VRF interfaces.

When you include the **vrf-table-label** statement in the configuration of a VRF routing table, a label-switched interface (LSI) logical interface label is created and mapped to the VRF routing table. Any routes in such a VRF routing table are advertised with the LSI logical interface label allocated for the VRF routing table. When packets for this VPN arrive on a core-facing interface, they are treated as if the enclosed IP packet arrived on the LSI interface and are then forwarded and filtered based on the correct table.

To filter traffic based on the IP header, include the **vrf-table-label** statement:

```
vrf-table-label {
  source-class-usage;
}
```

You can include the statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

You can include the **vrf-table-label** statement for both IPv4 and IPv6 Layer 3 VPNs. If you include the statement for a dual-stack VRF routing table (where both IPv4 and IPv6 routes are supported), the statement applies to both the IPv4 and IPv6 routes and the same label is advertised for both sets of routes.

You can also configure SCU accounting for Layer 3 VPNs configured with the **vrf-table-label** statement by also including the **source-class-usage** option. Include the **source-class-usage** statement at the [edit routing-instances *routing-instance-name* vrf-table-label] hierarchy level. The **source-class-usage** statement at this hierarchy level is supported only for the **vrf** instance type (Layer 3 VPNs). DCU is not supported for the **vrf-table-label** statement. For more information, see *Enabling Source Class and Destination Class Usage*.



The following sections provide more information about traffic filtering based on the IP header:

## Egress Filtering Options

You can enable egress filtering (which allows egress Layer 3 VPN PE routers to perform lookups on the VPN label and IP header at the same time) by including the **vrf-table-label** statement at the **[edit routing-instances *instance-name*]** hierarchy level. There is no restriction on including this statement for CE-router-to-PE-router interfaces, but there are several limitations on other interface types, as described in subsequent sections in this topic.

You can also enable egress filtering by configuring a VPN tunnel (VT) interface on routing platforms equipped with a Tunnel Services Physical Interface Card (PIC). When you enable egress filtering this way, there is no restriction on the type of core-facing interface used. There is also no restriction on the type of CE-router-to-PE-router interface used.

## Support on Aggregated and VLAN Interfaces for IP-Based Filtering

Support for the **vrf-table-label** statement over aggregated and VLAN interfaces is available on the routers summarized in [Table 3 on page 87](#).

**Table 3: Support for Aggregated and VLAN Interfaces**

Interfaces	M Series Router Without an Enhanced FPC	M Series Router with an Enhanced FPC	M320 Router	T Series Router
Aggregated	No	Yes	Yes	Yes
VLAN	No	Yes	Yes	Yes

**NOTE:** The **vrf-table-label** statement is not supported for Aggregated Gigabit Ethernet, 10-Gigabit Ethernet, and VLAN physical interfaces on M120 routers.

## Support on ATM and Frame Relay Interfaces for IP-Based Filtering

Support for the **vrf-table-label** statement over Asynchronous Transfer Mode (ATM) and Frame Relay interfaces is available on the routers summarized in [Table 4 on page 88](#).



**Table 4: Support for ATM and Frame Relay Interfaces**

Interfaces	M Series Router Without an Enhanced FPC	M Series Router with an Enhanced FPC	M320 Router	T Series Router
ATM1	No	No	No	No
ATM2 intelligent queuing (IQ)	No	Yes	Yes	Yes
Frame Relay	No	Yes	Yes	Yes
Channelized	No	No	No	No

When you include the **vrf-table-label** statement, be aware of the following limitations with ATM or Frame Relay interfaces:

- The **vrf-table-label** statement is supported on ATM interfaces, but with the following limitations:
  - ATM interfaces can be configured on the M320 router and the T Series routers, and on M Series routers with an enhanced FPC.
  - The interface can only be a PE router interface receiving traffic from a P router.
  - The router must have an ATM2 IQ PIC.
- The **vrf-table-label** statement is also supported on Frame Relay encapsulated interfaces, but with the following limitations:
  - Frame Relay interfaces can be configured on the M320 router and the T Series routers, and on M Series routers with an enhanced FPC.
  - The interface can only be a PE router interface receiving traffic from a P router.

### Support on Ethernet, SONET/SDH, and T1/T3/E3 Interfaces for IP-Based Filtering

Support for the **vrf-table-label** statement over Ethernet, SONET/SDH, and T1/T3/E3 interfaces is available on the routers summarized in [Table 5 on page 88](#).

**Table 5: Support for Ethernet, SONET/SDH, and T1/T3/E3 Interfaces**

Interfaces	M Series Router Without an Enhanced FPC	M Series Router with an Enhanced FPC	M320 Router	T Series Router
Ethernet	Yes	Yes	Yes	Yes



Table 5: Support for Ethernet, SONET/SDH, and T1/T3/E3 Interfaces (*continued*)

Interfaces	M Series Router Without an Enhanced FPC	M Series Router with an Enhanced FPC	M320 Router	T Series Router
SONET/SDH	Yes	Yes	Yes	Yes
T1/T3/E3	Yes	Yes	Yes	Yes

Only the following Ethernet PICs support the **vrf-table-label** statement on M Series routers without an Enhanced FPC:

- 1-port Gigabit Ethernet
- 2-port Gigabit Ethernet
- 4-port Fast Ethernet

### Support on SONET/SDH and DS3/E3 Channelized Enhanced Intelligent Queuing Interfaces for IP-Based Filtering

Support for the **vrf-table-label** statement for the specified channelized IQE interfaces is only available on M120 and M320 routers with Enhanced III FPCs as summarized in [Table 6 on page 89](#).

Table 6: Support for Channelized IQE Interfaces on M320 Routers with Enhanced III FPCs

Interfaces	M120 Routers with Enhanced III FPCs	M320 Routers with Enhanced III FPCs
OC12	Yes	Yes
STM4	Yes	Yes
OC3	Yes	Yes
STM1	Yes	Yes
DS3	Yes	Yes
E3	Yes	Yes



The following IQE Type-1 PICs are supported:

- 1-port OC12/STM4 IQE with SFP
- 4-port OC3/STM1 IQE with SFP
- 4-port DS3/E3 IQE with BNC
- 2-port Channelized OC3/STM1 IQE with SFP, with no SONET partitions
- 1-port Channelized OC12/STM4 IQE with SFP, with no SONET partitions

The following constraints are applicable with respect to a router configuration utilizing logical systems:

- Multiport IQE PIC interfaces constraints—On multiport IQE PICs, such as the 2-port Channelized OC3/STM1 IQE with SFP, if the port 1 interface is configured as one logical system with its own routing-instance and the port 2 interface is configured as a different logical system with its own routing instances such that there are core-facing logical interfaces on both port 1 and port 2, then you cannot configure the **vrf-table-label** statement on routing-instance in both logical systems. Only one set of LSI labels are supported; the last routing instance with the **vrf-table-label** statement configured is committed.
- Frame Relay encapsulation and logical interfaces across logical systems constraints—Similar to the multiport PIC with logical systems, if you try to configure one logical interface of an IQE PIC with Frame Relay encapsulation in one logical system and configure another logical interface on the same IQE PIC in the second logical system, the configuration will not work for all the **vrf-table-label** statement configured instances. It will only work for the instances configured in one of the logical systems.

Both the above constraints occur because the router configuration maintains one LSI tree in the Packet Forwarding Engine per logical system, which is common across all streams. The stream channel table lookup is then adjusted to point to the LSI tree. In the case of multiport type-1 IQE PICs, all physical interfaces share the same stream. Therefore, the logical interfaces (multiport or not) obviously share the same stream. Consequently, the LSI binding is at the stream level. Hence, provisioning logical interfaces under the same stream provisioned to be core-facing and supporting a different set of routing instances with the **vrf-table-label** statement is not supported.

## Support on Multilink PPP and Multilink Frame Relay Interfaces for IP-Based Filtering

Support for the **vrf-table-label** statement over Multilink Point-to-Point Protocol (MLPPP) and Multilink Frame Relay (MLFR) interfaces is available on the routers summarized in [Table 7 on page 90](#).

**Table 7: Support for Multilink PPP and Multilink Frame Relay Interfaces**

Interfaces	M Series Router Without an Enhanced FPC	M Series Router with an Enhanced FPC	M320	T Series Router	MX Series Router
MLPPP	No	Yes	No	No	No



Table 7: Support for Multilink PPP and Multilink Frame Relay Interfaces (*continued*)

Interfaces	M Series Router Without an Enhanced FPC	M Series Router with an Enhanced FPC	M320	T Series Router	MX Series Router
End-to-End MLFR (FRF.15)	No	Yes	No	No	No
UNI/NNI MLFR (FRF.16)	No	No	No	No	No

M Series routers must have an AS PIC to support the **vrf-table-label** statement over MLPPP and MLFR interfaces. The **vrf-table-label** statement over MLPPP interfaces is not supported on M120 routers.

### Support for IP-Based Filtering of Packets with Null Top Labels

You can include the **vrf-table-label** statement in the configuration for core-facing interfaces receiving MPLS packets with a null top label, which might be transmitted by some vendors' equipment. These packets can be received only on the M320 router, the M10i router, and T Series Core routers using one of the following PICs:

- 1-port Gigabit Ethernet with SFP
- 2-port Gigabit Ethernet with SFP
- 4-port Gigabit Ethernet with SFP
- 10-port Gigabit Ethernet with SFP
- 1-port SONET STM4
- 4-port SONET STM4
- 1-port SONET STM16
- 1-port SONET STM16 (non-SFP)
- 4-port SONET STM16
- 1-port SONET STM64

The following PICs can receive packets with null top labels, but only when installed in an M120 router or an M320 router with an Enhanced III FPC:

- 1-port 10-Gigabit Ethernet
- 1-port 10-Gigabit Ethernet IQ2



## General Limitations on IP-Based Filtering

The following limitations apply when you include the **vrf-table-label** statement:

- Firewall filters cannot be applied to interfaces included in a routing instance on which you have configured the **vrf-table-label** statement.
- The time-to-live (TTL) value in the MPLS header is not copied back to the IP header of packets sent from the PE router to the CE router.
- You cannot include the **vrf-table-label** statement in a routing instance configuration that also includes a virtual loopback tunnel interface; the commit operation fails in this case.
- When you include the statement, MPLS packets with label-switched interface (LSI) labels that arrive on core-facing interfaces are not counted at the logical interface level if the core-facing interface is any of the following:
  - ATM
  - Frame Relay
  - Ethernet configured with VLANs
  - Aggregated Ethernet configured with VLANs
- For LMNR, Stoli, and I-Chip-based Packet Forwarding Engines, you cannot include the statement in the configuration of a VRF routing instance if the PE-router-to-P-router interface is any of the following interfaces:

**NOTE:** The **vrf-table-label** statement is supported when the PE-router-to-P-router interface is a tunnel interface on a Junos Trio-based Packet Forwarding Engine, so no limitation applies.

- Aggregated SONET/SDH interface
- Channelized interface
- Tunnel interface (for example, generic routing encapsulation [GRE] or IP Security [IPsec])
- Circuit cross-connect (CCC) or translational cross-connect (TCC) encapsulated interface
- Logical tunnel interface
- Virtual private LAN service (VPLS) encapsulated interface

**NOTE:** All CE-router-to-PE-router and PE-router-to-CE-router interfaces are supported.

- You cannot include the **vrf-table-label** statement in the configuration of a VRF routing instance if the PE-router-to-P-router PIC is one of the following PICs:



- 10-port E1
- 8-port Fast Ethernet
- 12-port Fast Ethernet
- 48-port Fast Ethernet
- ATM PIC other than the ATM2 IQ
- Label-switched interface (LSI) traffic statistics are not supported for Intelligent Queuing 2 (IQ2), Enhanced IQ (IQE), and Enhanced IQ2 (IQ2E) PICs on M Series routers.

SEE ALSO

| *Enabling Source Class and Destination Class Usage*

## Configuring a Label Allocation and Substitution Policy for VPNs

You can control label-advertisements on MPLS ingress and AS border routers (ASBRs). Labels can be assigned on a per-next-hop (by default) or on a per-table basis (by configuring the [vrf-table-label](#) statement). This choice affects all routes of a given routing instance. You can also configure a policy to generate labels on a per-route basis by specifying a label allocation policy.

To specify a label allocation policy for the routing instance, configure the **label** statement and specify a label allocation policy using the **allocation** option:

```
label {
    allocation label-allocation-policy;
}
```

You can configure this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* routing-options]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* routing-options]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

To configure the label allocation policy, include the **label-allocation** statement at the [edit policy-options policy-statement *policy-statement-name* term *term-name* then] hierarchy level. You can configure the label allocation mode as either **per-nexthop** or **per-table**.



For a VPN option B ASBR, labels for transit routes are substituted for a local virtual tunnel label or vrf-table-label label. When a VRF table is configured on the ASBR (this type of configuration is uncommon for the option B model), the ASBR does not generate MPLS swap or swap and push state for transit routes. Instead, the ASBR re-advertises a local virtual-tunnel or vrf-table-label label and forwards that transit traffic based on IP forwarding tables. The label substitution helps to conserve labels on Juniper Networks routers.

However, this type of label substitution effectively breaks the MPLS forwarding path, which becomes visible when using an MPLS OAM command such as LSP ping. You can configure the way in which labels are substituted on a per-route basis by specifying a label substitution policy.

To specify a label substitution policy for the routing instance, configure the **label** statement and specify a label substitution policy using the **substitution** option:

```
label {
  substitution label-substitution-policy;
}
```

You can configure this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* routing-options]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* routing-options]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

The label substitution policy is used to determine whether or not a label should be substituted on an ASBR router. The results of the policy operation are either **accept** (label substitution is performed) or **reject** (label substitution is not performed). The default behavior is **accept**. The following set command example illustrates how you can configure a **reject** label substitution policy: **set policy-options policy-statement no-label-substitution term default then reject**.

## Distributing VPN Routes

### IN THIS SECTION

- [Enabling Routing Information Exchange for VPNs | 95](#)
- [Configuring IBGP Sessions Between PE Routers in VPNs | 95](#)



- [Configuring Aggregate Labels for VPNs | 97](#)
- [Configuring a Signaling Protocol and LSPs for VPNs | 98](#)
- [Configuring Policies for the VRF Table on PE Routers in VPNs | 102](#)
- [Configuring the Route Origin for VPNs | 110](#)

This topic describes configuring a router to handle route information in BGP, MPLS signaling, and policies.

## Enabling Routing Information Exchange for VPNs

For Layer 2 VPNs, Layer 3 VPNs, virtual-router routing instances, VPLS, EVPNs, and Layer 2 circuits to function properly, the service provider's PE and P routers must be able to exchange routing information. For this to happen, you must configure either an IGP (such as OSPF or IS-IS) or static routes on these routers. You configure the IGP on the master instance of the routing protocol process at the **[edit protocols]** hierarchy level, not within the routing instance used for the VPN—that is, not at the **[edit routing-instances]** hierarchy level.

When you configure the PE router, do not configure any summarization of the PE router's loopback addresses at the area boundary. Each PE router's loopback address should appear as a separate route.

## Configuring IBGP Sessions Between PE Routers in VPNs

You must configure an IBGP session between the PE routers to allow the PE routers to exchange information about routes originating and terminating in the VPN. The PE routers rely on this information to determine which labels to use for traffic destined for remote sites.

Configure an IBGP session for the VPN as follows:

```
[edit protocols]
bgp {
  group group-name {
    type internal;
    local-address ip-address;
    family evpn {
      signaling;
    }
  }
}
```



```

    family (inet-vpn | inet6-vpn) {
        unicast;
    }
    family l2vpn {
        signaling;
    }
    neighbor ip-address;
}

```

The IP address in the **local-address** statement is the address of the loopback interface on the local PE router. The IBGP session for the VPN runs through the loopback address. (You must also configure the loopback interface at the **[edit interfaces]** hierarchy level.)

The IP address in the **neighbor** statement is the loopback address of the neighboring PE router. If you are using RSVP signaling, this IP address is the same address you specify in the **to** statement at the **[edit mpls label-switched-path *lsp-path-name*]** hierarchy level when you configure the MPLS LSP.

The **family** statement allows you to configure the IBGP session for Layer 2 VPNs, VPLS, EVPNs or for Layer 3 VPNs.

- To configure an IBGP session for Layer 2 VPNs and VPLS, include the **signaling** statement at the **[edit protocols bgp group *group-name* family l2vpn]** hierarchy level:

```

[edit protocols bgp group group-name family l2vpn]
signaling;

```

- To configure an IBGP session for EVPNs, include the **signaling** statement at the **[edit protocols bgp group *group-name* family evpn]** hierarchy level:

```

[edit protocols bgp group group-name family evpn]
signaling;

```

- To configure an IPv4 IBGP session for Layer 3 VPNs, configure the **unicast** statement at the **[edit protocols bgp group *group-name* family inet-vpn]** hierarchy level:

```

[edit protocols bgp group group-name family inet-vpn]
unicast;

```

- To configure an IPv6 IBGP session for Layer 3 VPNs, configure the **unicast** statement at the **[edit protocols bgp group *group-name* family inet6-vpn]** hierarchy level:

```

[edit protocols bgp group group-name family inet6-vpn]

```



unicast;

**NOTE:** You can configure both **family inet** and **family inet-vpn** or both **family inet6** and **family inet6-vpn** within the same peer group. This allows you to enable support for both IPv4 and IPv4 VPN routes or both IPv6 and IPv6 VPN routes within the same peer group.

## Configuring Aggregate Labels for VPNs

Aggregate labels for VPNs allow a Juniper Networks routing platform to aggregate a set of incoming labels (labels received from a peer router) into a single forwarding label that is selected from the set of incoming labels. The single forwarding label corresponds to a single next hop for that set of labels. Label aggregation reduces the number of VPN labels that the router must examine.

For a set of labels to share an aggregate forwarding label, they must belong to the same forwarding equivalence class (FEC). The labeled packets must have the same destination egress interface.

Including the **community community-name** statement with the **aggregate-label** statement lets you specify prefixes with a common origin community. Set by policy on the peer PE, these prefixes represent an FEC on the peer PE router.



**CAUTION:** If the target community is set by mistake instead of the origin community, forwarding problems at the egress PE can result. All prefixes from the peer PE will appear to be in the same FEC, resulting in a single inner label for all CE routers behind a given PE in the same VPN.

To work with route reflectors in Layer 3 VPN networks, the Juniper Networks M10i router aggregates a set of incoming labels only when the routes:

- Are received from the same peer router
- Have the same site of origin community
- Have the same next hop

The next hop requirement is important because route reflectors forward routes originated from different BGP peers to another BGP peer without changing the next hop of those routes.

To configure aggregate labels for VPNs, include the **aggregate-label** statement:



```
aggregate-label {
  community community-name;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary for this statement.

For information about how to configure a community, see *Understanding BGP Communities, Extended Communities, and Large Communities as Routing Policy Match Conditions*.

## Configuring a Signaling Protocol and LSPs for VPNs

### IN THIS SECTION

- [Using LDP for VPN Signaling | 98](#)
- [Using RSVP for VPN Signaling | 100](#)

For VPNs to function, you must enable a signaling protocol, either the LDP or RSVP on the provider edge (PE) routers and on the provider (P) routers. You also need to configure label-switched paths (LSPs) between the ingress and egress routers. In a typical VPN configuration, you need to configure LSPs from each PE router to all of the other PE routers participating in the VPN in a full mesh.

**NOTE:** As with any configuration involving MPLS, you cannot configure any of the core-facing interfaces on the PE routers over dense Fast Ethernet PICs.

To enable a signaling protocol, perform the steps in one of the following sections:

### Using LDP for VPN Signaling

To use LDP for VPN signaling, perform the following steps on the PE and provider (P) routers:

1. Configure LDP on the interfaces in the core of the service provider's network by including the **ldp** statement at the **[edit protocols]** hierarchy level.



You need to configure LDP only on the interfaces between PE routers or between PE and P routers. You can think of these as the “core-facing” interfaces. You do not need to configure LDP on the interface between the PE and customer edge (CE) routers.

```
[edit]
protocols {
  ldp {
    interface type-fpc/pic/port;
  }
}
```

2. Configure the MPLS address family on the interfaces on which you enabled LDP (the interfaces you configured in Step 1) by including the **family mpls** statement at the **[edit interfaces type-fpc/pic/port unit logical-unit-number]** hierarchy level.

```
[edit]
interfaces {
  type-fpc/pic/port {
    unit logical-unit-number {
      family mpls;
    }
  }
}
```

3. Configure OSPF or IS-IS on each PE and P router.

You configure these protocols at the master instance of the routing protocol, not within the routing instance used for the VPN.

- To configure OSPF, include the **ospf** statement at the **[edit protocols]** hierarchy level. At a minimum, you must configure a backbone area on at least one of the router’s interfaces.

```
[edit]
protocols {
  ospf {
    area 0.0.0.0 {
      interface type-fpc/pic/port;
    }
  }
}
```

- To configure IS-IS, include the **isis** statement at the **[edit protocols]** hierarchy level and configure the loopback interface and International Organization for Standardization (ISO) family at the **[edit**



**interfaces]** hierarchy level. At a minimum, you must enable IS-IS on the router, configure a network entity title (NET) on one of the router's interfaces (preferably the loopback interface, lo0), and configure the ISO family on all interfaces on which you want IS-IS to run. When you enable IS-IS, Level 1 and Level 2 are enabled by default. The following is the minimum IS-IS configuration. In the **address** statement, **address** is the NET.

```
[edit]
interfaces {
  lo0 {
    unit logical-unit-number {
      family iso {
        address address;
      }
    }
  }
  type-fpc/pic/port {
    unit logical-unit-number {
      family iso;
    }
  }
}
protocols {
  isis {
    interface all;
  }
}
```

## Using RSVP for VPN Signaling

To use RSVP for VPN signaling, perform the following steps:

1. On each PE router, configure traffic engineering.

To do this, you must configure an interior gateway protocol (IGP) that supports traffic engineering (either IS-IS or OSPF) and enable traffic engineering support for that protocol.

To enable OSPF traffic engineering support, include the **traffic-engineering** statement at the **[edit protocols ospf]** hierarchy level:

```
[edit protocols ospf]
traffic-engineering {
  shortcuts;
}
```

For IS-IS, traffic engineering support is enabled by default.



2. On each PE and P router, enable RSVP on the interfaces that participate in the label-switched path (LSP).

On the PE router, these interfaces are the ingress and egress points to the LSP. On the P router, these interfaces connect the LSP between the PE routers. Do not enable RSVP on the interface between the PE and the CE routers, because this interface is not part of the LSP.

To configure RSVP on the PE and P routers, include the **interface** statement at the **[edit protocols rsvp]** hierarchy level. Include one **interface** statement for each interface on which you are enabling RSVP.

```
[edit protocols]
rsvp {
  interface interface-name;
  interface interface-name;
}
```

3. On each PE router, configure an MPLS LSP to the PE router that is the LSP's egress point.

To do this, include the **interface** and **label-switched-path** statements at the **[edit protocols mpls]** hierarchy level:

```
[edit protocols]
mpls {
  interface interface-name;
  label-switched-path path-name {
    to ip-address;
  }
}
```

In the **to** statement, specify the address of the LSP's egress point, which is an address on the remote PE router.

In the **interface** statement, specify the name of the interface (both the physical and logical portions). Include one **interface** statement for the interface associated with the LSP.

When you configure the logical portion of the same interface at the **[edit interfaces]** hierarchy level, you must also configure the **family inet** and **family mpls** statements:

```
[edit interfaces]
interface-name {
  unit logical-unit-number {
    family inet;
    family mpls;
  }
}
```



4. On all P routers that participate in the LSP, enable MPLS by including the **interface** statement at the **[edit mpls]** hierarchy level.

Include one **interface** statement for each connection to the LSP.

```
[edit]
mpls {
  interface interface-name;
  interface interface-name;
}
```

5. Enable MPLS on the interface between the PE and CE routers by including the **interface** statement at the **[edit mpls]** hierarchy level.

Doing this allows the PE router to assign an MPLS label to traffic entering the LSP or to remove the label from traffic exiting the LSP.

```
[edit]
mpls {
  interface interface-name;
}
```

For information about configuring MPLS, see the *Configuring the Ingress Router for MPLS-Signaled LSPs*.

#### SEE ALSO

| *Configuring the Ingress Router for MPLS-Signaled LSPs*

## Configuring Policies for the VRF Table on PE Routers in VPNs

### IN THIS SECTION

- [Configuring the Route Target | 103](#)
- [Configuring the Route Origin | 103](#)
- [Configuring an Import Policy for the PE Router's VRF Table | 104](#)
- [Configuring an Export Policy for the PE Router's VRF Table | 106](#)
- [Applying Both the VRF Export and the BGP Export Policies | 108](#)
- [Configuring a VRF Target | 109](#)



On each PE router, you must define policies that define how routes are imported into and exported from the router's VRF table. In these policies, you must define the route target, and you can optionally define the route origin.

To configure policy for the VRF tables, you perform the steps in the following sections:

## Configuring the Route Target

As part of the policy configuration for the VPN routing table, you must define a route target, which defines which VPN the route is a part of. When you configure different types of VPN services (Layer 2 VPNs, Layer 3 VPNs, EVPNs, or VPLS) on the same PE router, be sure to assign unique route target values to avoid the possibility of adding route and signaling information to the wrong VPN routing table.

To configure the route target, include the **target** option in the **community** statement:

```
community name members target:community-id;
```

You can include this statement at the following hierarchy levels:

- [edit policy-options]
- [edit logical-systems *logical-system-name* policy-options]

**name** is the name of the community.

**community-id** is the identifier of the community. Specify it in one of the following formats:

- **as-number:number**, where **as-number** is an AS number (a 2-byte value) and **number** is a 4-byte community value. The AS number can be in the range 1 through 65,535. We recommend that you use an IANA-assigned, nonprivate AS number, preferably the ISP's own or the customer's own AS number. The community value can be a number in the range 0 through 4,294,967,295 ( $2^{32} - 1$ ).
- **ip-address:number**, where **ip-address** is an IPv4 address (a 4-byte value) and **number** is a 2-byte community value. The IP address can be any globally unique unicast address. We recommend that you use the address that you configure in the **router-id** statement, which is a nonprivate address in your assigned prefix range. The community value can be a number in the range 1 through 65,535.

## Configuring the Route Origin

In the import and export policies for the PE router's VRF table, you can optionally assign the route origin (also known as the site of origin) for a PE router's VRF routes using a VRF export policy applied to multiprotocol external BGP (MP-EBGP) VPN IPv4 route updates sent to other PE routers.

Matching on the assigned route origin attribute in a receiving PE's VRF import policy helps ensure that VPN-IPv4 routes learned through MP-EBGP updates from one PE are not reimported to the same VPN site from a different PE connected to the same site.



To configure a route origin, complete the following steps:

1. Include the **community** statement with the **origin** option:

```
community name members origin:community-id;
```

You can include this statement at the following hierarchy levels:

- [edit policy-options]
- [edit logical-systems *logical-system-name* policy-options]

*name* is the name of the community.

*community-id* is the identifier of the community. Specify it in one of the following formats:

- **as-number:number**, where *as-number* is an AS number (a 2-byte value) and *number* is a 4-byte community value. The AS number can be in the range 1 through 65,535. We recommend that you use an IANA-assigned, nonprivate AS number, preferably the ISP's own or the customer's own AS number. The community value can be a number in the range 0 through 4,294,967,295 ( $2^{32} - 1$ ).
- **ip-address:number**, where *ip-address* is an IPv4 address (a 4-byte value) and *number* is a 2-byte community value. The IP address can be any globally unique unicast address. We recommend that you use the address that you configure in the **router-id** statement, which is a nonprivate address in your assigned prefix range. The community value can be a number in the range 1 through 65,535.

2. Include the community in the import policy for the PE router's VRF table by configuring the **community** statement with the *community-id* identifier defined in Step 1 at the [edit policy-options policy-statement *import-policy-name* term *import-term-name* from] hierarchy level. See [“Configuring an Import Policy for the PE Router's VRF Table” on page 104](#).

If the policy's **from** clause does not specify a community condition, the **vrf-import** statement in which the policy is applied cannot be committed. The Junos OS commit operation does not pass the validation check.

3. Include the community in the export policy for the PE router's VRF table by configuring the **community** statement with the *community-id* identifier defined in Step 1 at the [edit policy-options policy-statement *export-policy-name* term *export-term-name* then] hierarchy level. See [“Configuring an Export Policy for the PE Router's VRF Table” on page 106](#).

See [“Configuring the Route Origin for VPNs” on page 110](#) for a configuration example.

## Configuring an Import Policy for the PE Router's VRF Table

Each VPN can have a policy that defines how routes are imported into the PE router's VRF table. An import policy is applied to routes received from other PE routers in the VPN. A policy must evaluate all routes received over the IBGP session with the peer PE router. If the routes match the conditions, the route is



installed in the PE router's ***routing-instance-name.inet.0*** VRF table. An import policy must contain a second term that rejects all other routes.

Unless an import policy contains only a **then reject** statement, it must include a reference to a community. Otherwise, when you try to commit the configuration, the commit fails. You can configure multiple import policies.

An import policy determines what to import to a specified VRF table based on the VPN routes learned from the remote PE routers through IBGP. The IBGP session is configured at the **[edit protocols bgp]** hierarchy level. If you also configure an import policy at the **[edit protocols bgp]** hierarchy level, the import policies at the **[edit policy-options]** hierarchy level and the **[edit protocols bgp]** hierarchy level are combined through a logical AND operation. This allows you to filter traffic as a group.

To configure an import policy for the PE router's VRF table, follow these steps:

1. To define an import policy, include the **policy-statement** statement. For all PE routers, an import policy must always include the **policy-statement** statement, at a minimum:

```
policy-statement import-policy-name {
  term import-term-name {
    from {
      protocol bgp;
      community community-id;
    }
    then accept;
  }
  term term-name {
    then reject;
  }
}
```

You can include the **policy-statement** statement at the following hierarchy levels:

- **[edit policy-options]**
- **[edit logical-systems *logical-system-name* policy-options]**

The ***import-policy-name*** policy evaluates all routes received over the IBGP session with the other PE router. If the routes match the conditions in the **from** statement, the route is installed in the PE router's ***routing-instance-name.inet.0*** VRF table. The second term in the policy rejects all other routes.

For more information about creating policies, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

2. You can optionally use a regular expression to define a set of communities to be used for the VRF import policy.



For example you could configure the following using the **community** statement at the **[edit policy-options policy-statement *policy-statement-name*]** hierarchy level:

```
[edit policy-options vrf-import-policy-sample]
community high-priority members *:50
```

Note that you cannot configure a regular expression as a part of a route target extended community. For more information about how to configure regular expressions for communities, see *Understanding How to Define BGP Communities and Extended Communities*.

3. To configure an import policy, include the **vrf-import** statement:

```
vrf-import import-policy-name;
```

You can include this statement at the following hierarchy levels:

- **[edit routing-instances *routing-instance-name*]**
- **[edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]**

## Configuring an Export Policy for the PE Router's VRF Table

Each VPN can have a policy that defines how routes are exported from the PE router's VRF table. An export policy is applied to routes sent to other PE routers in the VPN. An export policy must evaluate all routes received over the routing protocol session with the CE router. (This session can use the BGP, OSPF, or Routing Information Protocol [RIP] routing protocols, or static routes.) If the routes match the conditions, the specified community target (which is the route target) is added to them and they are exported to the remote PE routers. An export policy must contain a second term that rejects all other routes.

Export policies defined within the VPN routing instance are the only export policies that apply to the VRF table. Any export policy that you define on the IBGP session between the PE routers has no effect on the VRF table. You can configure multiple export policies.

To configure an export policy for the PE router's VRF table, follow these steps:

1. For all PE routers, an export policy must distribute VPN routes to and from the connected CE routers in accordance with the type of routing protocol that you configure between the CE and PE routers within the routing instance.

To define an export policy, include the **policy-statement** statement. An export policy must always include the **policy-statement** statement, at a minimum:

```
policy-statement export-policy-name {
  term export-term-name {
```



```

    from protocol (bgp | ospf | rip | static);
    then {
        community add community-id;
        accept;
    }
}
term term-name {
    then reject;
}
}

```

**NOTE:** Configuring the **community add** statement is a requirement for Layer 2 VPN VRF export policies. If you change the **community add** statement to the **community set** statement, the router at the egress of the Layer 2 VPN link might drop the connection.

**NOTE:** When configuring draft-rosen multicast VPNs operating in source-specific mode and using the **vrf-export** statement to specify the export policy, the policy must have a term that accepts routes from the vrf-name.mdt.0 routing table. This term ensures proper PE autodiscovery using the **inet-mdt** address family.

When configuring draft-rosen multicast VPNs operating in source-specific mode and using the **vrf-target** statement, the VRF export policy is automatically generated and automatically accepts routes from the vrf-name.mdt.0 routing table.

You can include the **policy-statement** statement at the following hierarchy levels:

- [edit policy-options]
- [edit logical-systems *logical-system-name* policy-options]

The **export-policy-name** policy evaluates all routes received over the routing protocol session with the CE router. (This session can use the BGP, OSPF, or RIP routing protocols, or static routes.) If the routes match the conditions in the **from** statement, the community target specified in the **then community add** statement is added to them and they are exported to the remote PE routers. The second term in the policy rejects all other routes.

For more information about creating policies, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

2. To apply the policy, include the **vrf-export** statement:



```
vrf-export export-policy-name;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

## Applying Both the VRF Export and the BGP Export Policies

When you apply a VRF export policy as described in [“Configuring an Export Policy for the PE Router’s VRF Table” on page 106](#), routes from VPN routing instances are advertised to other PE routers based on this policy, whereas the BGP export policy is ignored.

If you include the **vpn-apply-export** statement in the BGP configuration, both the VRF export and BGP group or neighbor export policies are applied (VRF first, then BGP) before routes are advertised in the VPN routing tables to other PE routers.

**NOTE:** When a PE device is also acting as a Route Reflector (RR) or an Autonomous system boundary router (ASBR) in a Carrier-over-Carrier or inter-AS VPN, the next-hop manipulation in the vrf-export policy is ignored.

When you include the **vpn-apply-export** statement, be aware of the following:

- Routes imported into the bgp.l3vpn.0 routing table retain the attributes of the original routes (for example, an OSPF route remains an OSPF route even when it is stored in the bgp.l3vpn.0 routing table). You should be aware of this when you configure an export policy for connections between an IBGP PE router and a PE router, a route reflector and a PE router, or AS boundary router (ASBR) peer routers.
- By default, all routes in the bgp.l3vpn.0 routing table are exported to the IBGP peers. If the last statement of the export policy is deny all and if the export policy does not specifically match on routes in the bgp.l3vpn.0 routing table, no routes are exported.

To apply both the VRF export and BGP export policies to VPN routes, include the **vpn-apply-export** statement:

```
vpn-apply-export;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.



## Configuring a VRF Target

Including the **vrf-target** statement in the configuration for a VRF target community causes default VRF import and export policies to be generated that accept and tag routes with the specified target community. You can still create more complex policies by explicitly configuring VRF import and export policies. These policies override the default policies generated when you configure the **vrf-target** statement.

If you do not configure the **import** and **export** options of the **vrf-target** statement, the specified community string is applied in both directions. The **import** and **export** keywords give you more flexibility, allowing you to specify a different community for each direction.

The syntax for the VRF target community is not a name. You must specify it in the format **target:x:y**. A community name cannot be specified because this would also require you to configure the community members for that community using the **policy-options** statement. If you define the **policy-options** statements, then you can just configure VRF import and export policies as usual. The purpose of the **vrf-target** statement is to simplify the configuration by allowing you to configure most statements at the **[edit routing-instances]** hierarchy level.

To configure a VRF target, include the **vrf-target** statement:

```
vrf-target community;
```

You can include this statement at the following hierarchy levels:

- **[edit routing-instances *routing-instance-name*]**
- **[edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]**

An example of how you might configure the **vrf-target** statement follows:

```
[edit routing-instances sample]
vrf-target target:69:102;
```

To configure the **vrf-target** statement with the **export** and **import** options, include the following statements:

```
vrf-target {
  export community-name;
  import community-name;
}
```

You can include this statement at the following hierarchy levels:

- **[edit routing-instances *routing-instance-name*]**
- **[edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]**



## Configuring the Route Origin for VPNs


### IN THIS SECTION

- Configuring the Site of Origin Community on CE Router A | 110
- Configuring the Community on CE Router A | 111
- Applying the Policy Statement on CE Router A | 111
- Configuring the Policy on PE Router D | 112
- Configuring the Community on PE Router D | 113
- Applying the Policy on PE Router D | 113

You can use route origin to prevent routes learned from one customer edge (CE) router marked with origin community from being advertised back to it from another CE router in the same AS.

In the example, the route origin is used to prevent routes learned from CE Router A that are marked with origin community from being advertised back to CE Router E by AS 200. The example topology is shown in [Figure 9 on page 110](#).

**Figure 9: Network Topology of Site of Origin Example**

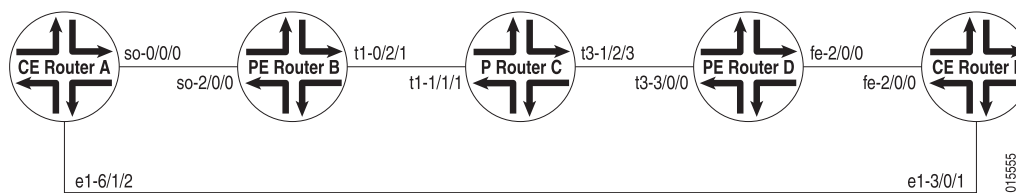

In this topology, CE Router A and CE Router E are in the same AS (AS200). They use EBGP to exchange routes with their respective provider edge (PE) routers, PE Router B and PE Router D. The two CE routers have a back connection.

The following sections describe how to configure the route origin for a group of VPNs:

### Configuring the Site of Origin Community on CE Router A

The following section describes how to configure CE Router A to advertise routes with a site of origin community to PE Router B for this example.



**NOTE:** In this example, direct routes are configured to be advertised, but any route can be configured.

Configure a policy to advertise routes with **my-soo** community on CE Router A as follows:

```
[edit]
policy-options {
  policy-statement export-to-my-isp {
    term a {
      from {
        protocol direct;
      }
      then {
        community add my-soo;
        accept;
      }
    }
  }
}
```

## Configuring the Community on CE Router A

Configure the **my-soo** community on CE Router A as follows:

```
[edit]
policy-options {
  community my-soo {
    members origin:100:1;
  }
}
```

## Applying the Policy Statement on CE Router A

Apply the export-to-my-isp policy statement as an export policy to the EBGp peering on the CE Router A as follows:

```
[edit]
protocols {
  bgp {
```



```

    group my_isp {
        export export-to-my-isp;
    }
}
}

```

When you issue the **show route receive-protocol bgp detail** command, you should see the following routes originated from PE Router B with **my-soo** community:

```
user@host> show route receive-protocol bgp 10.12.99.2 detail
```

```

inet.0: 16 destinations, 16 routes (15 active, 0 holddown, 1 hidden)
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
vpn_blue.inet.0: 8 destinations, 10 routes (8 active, 0 holddown, 0 hidden)
* 10.12.33.0/30 (2 entries, 1 announced)
    Nexthop: 10.12.99.2
    AS path: 100 I
    Communities: origin:100:1
10.12.99.0/30 (2 entries, 1 announced)
    Nexthop: 10.12.99.2
    AS path: 100 I
    Communities: origin:100:1
* 10.255.71.177/32 (1 entry, 1 announced)
    Nexthop: 10.12.99.2
    AS path: 100 I
    Communities: origin:100:1
* 192.168.64.0/21 (1 entry, 1 announced)
    Nexthop: 10.12.99.2
    AS path: 100 I
    Communities: origin:100:1
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
mpls.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
bgp.l3vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
__juniper_private1__.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0
hidden)

```

## Configuring the Policy on PE Router D

Configure a policy on PE Router D that prevents routes with **my-soo** community tagged by CE Router A from being advertised to CE Router E as follows:



```
[edit]
policy-options {
  policy-statement soo-ce1-policy {
    term a {
      from {
        community my-soo;
      }
      then {
        reject;
      }
    }
  }
}
```

## Configuring the Community on PE Router D

Configure the community on PE Router D as follows:

```
[edit]
policy-options {
  community my-soo {
    members origin:100:1;
  }
}
```

## Applying the Policy on PE Router D

To prevent routes learned from CE Router A from being advertised to CE Router E (the two routers can communicate these routes directly), apply the **soo-ce1-policy** policy statement as an export policy to the PE Router D and CE Router E EBGp session **vpn\_blue**.

View the EBGp session on PE Router D using the **show routing-instances** command.

user@host# **show routing-instances**

```
vpn_blue {
  instance-type vrf;
  interface fe-2/0/0.0;
  vrf-target target:100:200;
  protocols {
    bgp {
      group ce2 {
```



```

        advertise-peer-as;
        peer-as 100;
        neighbor 10.12.99.6;
    }
}
}

```

Apply the **soo-ce1-policy** policy statement as an export policy to the PE Router D and CE Router E EBGP session **vpn\_blue** as follows:

```

[edit routing-instances]
vpn_blue {
  protocols {
    bgp {
      group ce2{
        export soo-ce1-policy;
      }
    }
  }
}

```

## RELATED DOCUMENTATION

Example: Configuring IS-IS  
OSPF User Guide

# Route Target Filtering

## IN THIS SECTION

- [Configuring Static Route Target Filtering for VPNs | 115](#)
- [Reducing Network Resource Use with Static Route Target Filtering for VPNs | 116](#)
- [Configuring BGP Route Target Filtering for VPNs | 116](#)
- [Example: BGP Route Target Filtering for VPNs | 118](#)



- [Example: Configuring BGP Route Target Filtering for VPNs | 121](#)
- [Example: Configuring an Export Policy for BGP Route Target Filtering for VPNs | 132](#)
- [Example: Configuring Layer 3 VPN Protocol Family Qualifiers for Route Filters | 154](#)
- [Understanding Proxy BGP Route Target Filtering for VPNs | 159](#)
- [Example: Configuring Proxy BGP Route Target Filtering for VPNs | 159](#)

This topic describes configuring static, BGP, and Proxy BGP route target filtering and provides examples on configuring route target filtering for VPNs.

## Configuring Static Route Target Filtering for VPNs

The BGP VPN route target extended community (RFC 4360, *BGP Extended Communities Attribute*) is used to determine VPN membership. Static route target filtering helps to prevent resources from being consumed in portions of the network where the VPN routes are not needed due to the lack of member PE routers (RFC 4684, *Constrained Route Distribution for Border Gateway Protocol/MultiProtocol Label Switching (BGP/MPLS) Internet Protocol (IP) Virtual Private Networks (VPNs)*). Routers can originate routes into the RT-Constrain protocol to indicate their interest in receiving VPN routes containing route targets that match the RT-Constrain NLRI.

To configure static route target filtering for VPNs:

- Configure the **route-target-filter** statement at the `[edit routing-options rib bgp.rtarget.0 static]` hierarchy level.

The following example illustrates how you could configure the **route-target-filter** statement:

```
[edit routing-options rib bgp.rtarget.0 static]
route-target-filter destination {
  group bgp-group;
  local;
  neighbor bgp-peer;
}
```

- You can display route target filtering information using the **show bgp group rtf detail** command.



## Reducing Network Resource Use with Static Route Target Filtering for VPNs

The BGP VPN route target extended community (RFC 4360, *BGP Extended Communities Attribute*) is used to determine VPN membership. Static route target filtering helps to prevent resources from being consumed in portions of the network where the VPN routes are not needed due to the lack of member PE routers (RFC 4684, *Constrained Route Distribution for Border Gateway Protocol/MultiProtocol Label Switching (BGP/MPLS) Internet Protocol (IP) Virtual Private Networks (VPNs)*). Routers can originate routes into the RT-Constrain protocol to indicate their interest in receiving VPN routes containing route targets that match the RT-Constrain NLRI.

Normally, for the RT-Constrain feature to function properly, it must be broadly deployed throughout a network. If this is not the case, the feature is less useful, because the RT-Constrain BGP speaker facing a non-RT-Constrain speaker must advertise a default RT-Constrain route to the other RT-Constrain speakers on behalf of the peer that does not support the feature. This effectively removes the resource saving benefits of the feature in portions of the network where it is not supported since a default RT-Constrain route causes the PE router and all intervening PE routers to need to receive all VPN routes.

The static RT-Constrain feature enables you to partially deploy the RT-Constrain feature in a network. The feature is enabled at a boundary in the network where RT-Constrain is configured. However, some BGP VPN peers do not support RT-Constrain, typically PE routers. The route targets of those PE routers must be statically configured on the router. These route targets are disseminated using the RT-Constrain protocol.

The proxy RT-Constrain feature permits BGP VPN peers that do not support the protocol to have their route-targets discovered and disseminated automatically. However, this feature can only support symmetric route-targets. For example, the import and export route-targets for a VRF routing instance are identical. However, for a hub-and-spoke VPN, the import and export route-targets are not identical. In this scenario, the import and export route-target may be statically configured to be disseminated in the RT-Constrain protocol.

## Configuring BGP Route Target Filtering for VPNs

### IN THIS SECTION

- [BGP Route Target Filtering Overview | 117](#)
- [Configuring BGP Route Target Filtering for VPNs | 117](#)



BGP route target filtering allows you to distribute VPN routes to only the routers that need them. In VPN networks without BGP route target filtering configured, BGP distributes all VPN routes to all VPN peer routers.

For more information about BGP route target filtering, see RFC 4684, *Constrained Route Distribution for Border Gateway Protocol/MultiProtocol Label Switching (BGP/MPLS) Internet Protocol (IP) Virtual Private Networks (VPNs)*.

The following sections provide an overview of BGP route target filtering and how to configure it for VPNs:

## BGP Route Target Filtering Overview

PE routers, unless they are configured as route reflectors or are running an EBGp session, discard any VPN routes that do not include a route target extended community as specified in the local VRF import policies. This is the default behavior of the Junos OS.

However, unless it is explicitly configured not to store VPN routes, any router configured either as a route reflector or border router for a VPN address family must store all of the VPN routes that exist in the service provider's network. Also, though PE routers can automatically discard routes that do not include a route target extended community, route updates continue to be generated and received.

By reducing the number of routers receiving VPN routes and route updates, BGP route target filtering helps to limit the amount of overhead associated with running a VPN. BGP route target filtering is most effective at reducing VPN-related administrative traffic in networks where there are many route reflectors or AS border routers that do not participate in the VPNs directly (not acting as PE routers for the CE devices).

BGP route target filtering uses standard UPDATE messages to distribute route target extended communities between routers. The use of UPDATE messages allows BGP to use its standard loop detection mechanisms, path selection, policy support, and database exchange implementation.

## Configuring BGP Route Target Filtering for VPNs

BGP route target filtering is enabled through the exchange of the **route-target** address family, stored in the `bgp.rtarget.0` routing table. Based on the **route-target** address family, the route target NLRI (address family indicator [AFI]=1, subsequent AFI [SAFI]=132) is negotiated with its peers.

On a system that has locally configured VRF instances, BGP automatically generates local routes corresponding to targets referenced in the **vrf-import** policies.

To configure BGP route target filtering, include the **family route-target** statement:

```
family route-target {
  advertise-default;
  external-paths number;
```



```
prefix-limit number;  
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The **advertise-default**, **external-paths**, and **prefix-limit** statements affect the BGP route target filtering configuration as follows:

- The **advertise-default** statement causes the router to advertise the default route target route (0:0:0/0) and suppress all routes that are more specific. This can be used by a route reflector on BGP groups consisting of neighbors that act as PE routers only. PE routers often need to advertise all routes to the route reflector.

Suppressing all route target advertisements other than the default route reduces the amount of information exchanged between the route reflector and the PE routers. The Junos OS further helps to reduce route target advertisement overhead by not maintaining dependency information unless a nondefault route is received.

- The **external-paths** statement (which has a default value of 1) causes the router to advertise the VPN routes that reference a given route target. The number you specify determines the number of external peer routers (currently advertising that route target) that receive the VPN routes.
- The **prefix-limit** statement limits the number of prefixes that can be received from a peer router.

The **route-target**, **advertise-default**, and **external-path** statements affect the RIB-OUT state and must be consistent between peer routers that share the same BGP group. The **prefix-limit** statement affects the receive side only and can have different settings between different peer routers in a BGP group.

SEE ALSO

| [Configuring the Route Origin for VPNs | 110](#)

## Example: BGP Route Target Filtering for VPNs

BGP route target filtering is enabled by configuring the **family route-target** statement at the appropriate BGP hierarchy level. This statement enables the exchange of a new **route-target** address family, which is stored in the `bgp.rtarget.0` routing table.

The following configuration illustrates how you could configure BGP route target filtering for a BGP group titled `to_vpn04`:



```
[edit]
protocols {
  bgp {
    group to_vpn04 {
      type internal;
      local-address 10.255.14.182;
      peer-as 200;
      neighbor 10.255.14.174 {
        family inet-vpn {
          unicast;
        }
        family route-target;
      }
    }
  }
}
```

The following configuration illustrates how you could configure a couple of local VPN routing and forwarding (VRF) routing instances to take advantage of the functionality provided by BGP route target filtering. Based on this configuration, BGP would automatically generate local routes corresponding to the route targets referenced in the VRF import policies (note the targets defined by the **vrf-target** statements).

```
[edit]
routing-instances {
  vpn1 {
    instance-type vrf;
    interface t1-0/1/2.0;
    vrf-target target:200:101;
    protocols {
      ospf {
        export bgp-routes;
        area 0.0.0.0 {
          interface t1-0/1/2.0;
        }
      }
    }
  }
  vpn2 {
    instance-type vrf;
    interface t1-0/1/2.1;
    vrf-target target:200:102;
    protocols {
      ospf {
        export bgp-routes;
      }
    }
  }
}
```



```

        area 0.0.0.0 {
            interface t1-0/1/2.1;
        }
    }
}
}
}

```

Issue the **show route table bgp.rtarget.0** show command to verify the BGP route target filtering configuration:

```
user@host> show route table bgp.rtarget.0
```

```

bgp.rtarget.0: 4 destinations, 6 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
200:200:101/96
                *[RTarget/5] 00:10:00
                  Local
200:200:102/96
                *[RTarget/5] 00:10:00
                  Local
200:200:103/96
                *[BGP/170] 00:09:48, localpref 100, from 10.255.14.174
                  AS path: I
                  > t3-0/0/0.0
200:200:104/96
                *[BGP/170] 00:09:48, localpref 100, from 10.255.14.174
                  AS path: I
                  > t3-0/0/0.0

```

The **show** command display format for route target prefixes is:

```
AS number:route target extended community/length
```

The first number represents the autonomous system (AS) of the router that sent this advertisement. The remainder of the display follows the Junos **show** command convention for extended communities.

The output from the **show route table bgp-rtarget.0** command displays the locally generated and remotely generated routes.

The first two entries correspond to the route targets configured for the two local VRF routing instances (**vpn1** and **vpn2**):



- **200:200:101/96**—Community **200:101** in the **vpn1** routing instance
- **200:200:102/96**—Community **200:102** in the **vpn2** routing instance

The last two entries are prefixes received from a BGP peer:

- **200:200:103/96**—Tells the local router that routes tagged with this community (**200:103**) should be advertised to peer **10.255.14.174** through **t3-0/0/0.0**
- **200:200:104/96**—Tells the local router that routes tagged with this community (**200:104**) should be advertised to peer **10.255.14.174** through **t3-0/0/0.0**

## Example: Configuring BGP Route Target Filtering for VPNs

### IN THIS SECTION


- [Configure BGP Route Target Filtering on Router PE1 | 122](#)
- [Configure BGP Route Target Filtering on Router PE2 | 124](#)
- [Configure BGP Route Target Filtering on the Route Reflector | 127](#)
- [Configure BGP Route Target Filtering on Router PE3 | 129](#)

BGP route target filtering reduces the number of routers that receive VPN routes and route updates, helping to limit the amount of overhead associated with running a VPN. BGP route target filtering is most effective at reducing VPN-related administrative traffic in networks where there are many route reflectors or AS border routers that do not participate in the VPNs directly (do not act as PE routers for the CE devices).

[Figure 10 on page 122](#) illustrates the topology for a network configured with BGP route target filtering for a group of VPNs.



Figure 10: BGP Route Target Filtering Enabled for a Group of VPNs

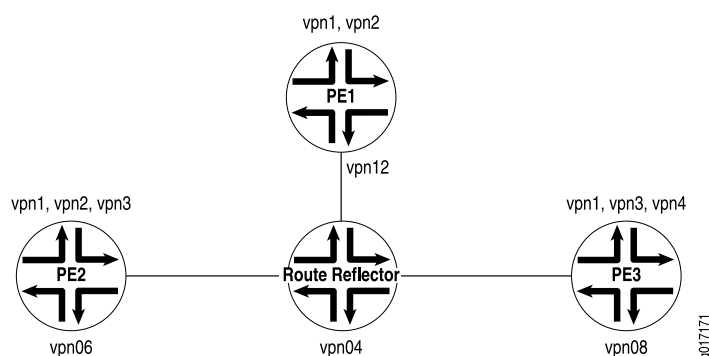

The following sections describe how to configure BGP route target filtering for a group of VPNs:

### Configure BGP Route Target Filtering on Router PE1

This section describes how to enable BGP route target filtering on Router PE1 for this example.

Configure the routing options on router PE1 as follows:

```
[edit]
routing-options {
  route-distinguisher-id 10.255.14.182;
  autonomous-system 198;
}
```

Configure the BGP protocol on Router PE1 as follows:

```
[edit]
protocols {
  bgp {
    group to_VPN_D {
      type internal;
      local-address 10.255.14.182;
      peer-as 198;
      neighbor 10.255.14.174 {
        family inet-vpn {
          unicast;
        }
        family route-target;
      }
    }
  }
}
```



Configure the **vpn1** routing instance as follows:

```
[edit]
routing-instances {
  vpn1 {
    instance-type vrf;
    interface t1-0/1/2.0;
    vrf-target target:198:101;
    protocols {
      ospf {
        export bgp-routes;
        area 0.0.0.0 {
          interface t1-0/1/2.0;
        }
      }
    }
  }
}
```

Configure the **vpn2** routing instance on Router PE1 as follows:

```
[edit]
routing-instances {
  vpn2 {
    instance-type vrf;
    interface t1-0/1/2.1;
    vrf-target target:198:102;
    protocols {
      ospf {
        export bgp-routes;
        area 0.0.0.0 {
          interface t1-0/1/2.1;
        }
      }
    }
  }
}
```

Once you have implemented this configuration, you should see the following when you issue a **show route table bgp.rtarget.0** command:

```
user@host> show route table bgp.rtarget.0
```



```

bgp.rtarget.0: 4 destinations, 6 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

198.198:101/96
    * [RTarget/5] 00:27:42
        Local
        [BGP/170] 00:27:30, localpref 100, from
10.255.14.174
        AS path: I
        > via t3-0/0/0.0

198.198:102/96
    * [RTarget/5] 00:27:42
        Local
        [BGP/170] 00:27:30, localpref 100, from
10.255.14.174
        AS path: I
        > via t3-0/0/0.0

198.198:103/96
    * [BGP/170] 00:27:30, localpref 100, from
10.255.14.174
        AS path: I
        > via t3-0/0/0.0

198.198:104/96
    * [BGP/170] 00:27:30, localpref 100, from
10.255.14.174
        AS path: I
        > via t3-0/0/0.0

```

## Configure BGP Route Target Filtering on Router PE2

This section describes how to enable BGP route target filtering on Router PE2 for this example.

Configure the routing options on Router PE2 as follows:

```

[edit]
routing-options {
    route-distinguisher-id 10.255.14.176;
    autonomous-system 198;
}

```

Configure the BGP protocol on Router PE2 as follows:



```
[edit]
protocols {
  bgp {
    group to_vpn04 {
      type internal;
      local-address 10.255.14.176;
      peer-as 198;
      neighbor 10.255.14.174 {
        family inet-vpn {
          unicast;
        }
        family route-target;
      }
    }
  }
}
```

Configure the **vpn1** routing instance on Router PE2 as follows:

```
[edit]
routing-instances {
  vpn1 {
    instance-type vrf;
    interface t3-0/0/0.0;
    vrf-target target:198:101;
    protocols {
      bgp {
        group vpn1 {
          type external;
          peer-as 101;
          as-override;
          neighbor 10.49.11.2;
        }
      }
    }
  }
}
```

Configure the **vpn2** routing instance on Router PE2 as follows:

```
[edit]
routing-instances {
  vpn2 {
```



```

instance-type vrf;
interface t3-0/0/0.1;
vrf-target target:198:102;
protocols {
    bgp {
        group vpn2 {
            type external;
            peer-as 102;
            as-override;
            neighbor 10.49.21.2;
        }
    }
}

```

Configure the **vpn3** routing instance on Router PE2 as follows:

```

[edit]
routing-instances {
    vpn3 {
        instance-type vrf;
        interface t3-0/0/0.2;
        vrf-import vpn3-import;
        vrf-export vpn3-export;
        protocols {
            bgp {
                group vpn3 {
                    type external;
                    peer-as 103;
                    as-override;
                    neighbor 10.49.31.2;
                }
            }
        }
    }
}

```

Once you have configured router PE2 in this manner, you should see the following when you issue the **show route table bgp.rtarget.0** command:

```
user@host> show route table bgp.rtarget.0
```



```

bgp.rtarget.0: 4 destinations, 7 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

198.198:101/96
    * [RTarget/5] 00:28:15
        Local
        [BGP/170] 00:28:03, localpref 100, from
10.255.14.174
        AS path: I
        > via t1-0/1/0.0

198.198:102/96
    * [RTarget/5] 00:28:15
        Local
        [BGP/170] 00:28:03, localpref 100, from
10.255.14.174
        AS path: I
        > via t1-0/1/0.0

198.198:103/96
    * [RTarget/5] 00:28:15
        Local
        [BGP/170] 00:28:03, localpref 100, from
10.255.14.174
        AS path: I
        > via t1-0/1/0.0

198.198:104/96
    * [BGP/170] 00:28:03, localpref 100, from
10.255.14.174
        AS path: I
        > via t1-0/1/0.0

```

## Configure BGP Route Target Filtering on the Route Reflector

This section illustrates how to enable BGP route target filtering on the route reflector for this example.

Configure the routing options on the route reflector as follows:

```

[edit]
routing-options {
    route-distinguisher-id 10.255.14.174;
    autonomous-system 198;
}

```

Configure the BGP protocol on the route reflector as follows:



```
[edit]
protocols {
  bgp {
    group rr-group {
      type internal;
      local-address 10.255.14.174;
      cluster 10.255.14.174;
      peer-as 198;
      neighbor 10.255.14.182 {
        description to_PE1_vpn12;
        family inet-vpn {
          unicast;
        }
        family route-target;
      }
      neighbor 10.255.14.176 {
        description to_PE2_vpn06;
        family inet-vpn {
          unicast;
        }
        family route-target;
      }
      neighbor 10.255.14.178 {
        description to_PE3_vpn08;
        family inet-vpn {
          unicast;
        }
        family route-target;
      }
    }
  }
}
```

Once you have configured the route reflector in this manner, you should see the following when you issue the **show route table bgp.rtarget.0** command:

```
user@host> show route table bgp.rtarget.0
```

```
bgp.rtarget.0: 4 destinations, 8 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

198.198:101/96
          *[BGP/170] 00:29:03, localpref 100, from
10.255.14.176
```



```

AS path: I
> via t1-0/2/0.0
[BGP/170] 00:29:03, localpref 100, from
10.255.14.178

AS path: I
> via t3-0/1/1.0
[BGP/170] 00:29:03, localpref 100, from
10.255.14.182

AS path: I
> via t3-0/1/3.0
198.198:102/96
*[BGP/170] 00:29:03, localpref 100, from
10.255.14.176

AS path: I
> via t1-0/2/0.0
[BGP/170] 00:29:03, localpref 100, from
10.255.14.182

AS path: I
> via t3-0/1/3.0
198.198:103/96
*[BGP/170] 00:29:03, localpref 100, from
10.255.14.176

AS path: I
> via t1-0/2/0.0
[BGP/170] 00:29:03, localpref 100, from
10.255.14.178

AS path: I
> via t3-0/1/1.0
198.198:104/96
*[BGP/170] 00:29:03, localpref 100, from
10.255.14.178

AS path: I
> via t3-0/1/1.0

```

## Configure BGP Route Target Filtering on Router PE3

The following section describes how to enable BGP route target filtering on Router PE3 for this example.

Configure the routing options on Router PE3 as follows:

```

[edit]
routing-options {
  route-distinguisher-id 10.255.14.178;

```



```

    autonomous-system 198;
}

```

Configure the BGP protocol on Router PE3 as follows:

```

[edit]
protocols {
  bgp {
    group to_vpn04 {
      type internal;
      local-address 10.255.14.178;
      peer-as 198;
      neighbor 10.255.14.174 {
        family inet-vpn {
          unicast;
        }
        family route-target;
      }
    }
  }
}

```

Configure the **vpn1** routing instance on Router PE3 as follows:

```

[edit]
routing-instances {
  vpn1 {
    instance-type vrf;
    interface t3-0/0/0.0;
    vrf-target target:198:101;
    protocols {
      rip {
        group vpn1 {
          export bgp-routes;
          neighbor t3-0/0/0.0;
        }
      }
    }
  }
}

```

Configure the **vpn3** routing instance on Router PE3 as follows:



```
[edit]
routing-instances {
  vpn3 {
    instance-type vrf;
    interface t3-0/0/0.1;
    vrf-target target:198:103;
    protocols {
      rip {
        group vpn3 {
          export bgp-routes;
          neighbor t3-0/0/0.1;
        }
      }
    }
  }
}
```

Configure the **vpn4** routing instance on Router PE3 as follows:

```
[edit]
routing-instances {
  vpn4 {
    instance-type vrf;
    interface t3-0/0/0.2;
    vrf-target target:198:104;
    protocols {
      rip {
        group vpn4 {
          export bgp-routes;
          neighbor t3-0/0/0.2;
        }
      }
    }
  }
}
```

Once you have configured Router PE3 in this manner, you should see the following when you issue the **show route table bgp.rtarget.0** command:

```
user@host> show route table bgp.rtarget.0
```

```
bgp.rtarget.0: 4 destinations, 7 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```



```

198.198:101/96
    *[RTarget/5] 00:29:42
        Local
    [BGP/170] 00:29:30, localpref 100, from
10.255.14.174
    AS path: I
    > via t3-0/0/1.0
198.198:102/96
    *[BGP/170] 00:29:29, localpref 100, from
10.255.14.174
    AS path: I
    > via t3-0/0/1.0
198.198:103/96
    *[RTarget/5] 00:29:42
        Local
    [BGP/170] 00:29:30, localpref 100, from
10.255.14.174
    AS path: I
    > via t3-0/0/1.0
198.198:104/96
    *[RTarget/5] 00:29:42
        Local
    [BGP/170] 00:29:30, localpref 100, from
10.255.14.174
    AS path: I
    > via t3-0/0/1.0

```

## Example: Configuring an Export Policy for BGP Route Target Filtering for VPNs

### IN THIS SECTION

- Requirements | 133
- Overview | 133
- Configuration | 135
- Verification | 153



This example shows how to configure an export routing policy for BGP route target filtering (also known as route target constrain, or RTC).

## Requirements

This example uses the following hardware and software components:

- Four Juniper Networks devices that support BGP route target filtering.
- Junos OS Release 12.2 or later on one or more devices configured for proxy BGP route filtering. In this example, you explicitly configure proxy BGP route filtering on the route reflectors.

Before configuring an export policy for BGP route target filtering, make sure that you are familiar with and understand the following concepts:

- *Layer 2 VPNs*
- [Understanding Layer 3 VPNs on page 37](#)
- [Understanding VPN-IPv4 Addresses and Route Distinguishers on page 244](#)
- [Configuring Policies for the VRF Table on PE Routers in VPNs on page 102](#)
- [Configuring BGP Route Target Filtering for VPNs on page 116](#)
- *BGP extended communities*

## Overview

BGP route target filtering allows you to reduce network resource consumption by distributing route target membership (RT membership) advertisements throughout the network. BGP uses the RT membership information to send VPN routes only to the devices that need them in the network. Similar to other types of BGP reachability, you can apply a routing policy to route target filtering routes to influence the network. When route target filtering is configured, restricting the flow of route target filtering routes also restricts the VPN routes that might be attracted by this RT membership. Configuring this policy involves:

- Creating a filter that defines the list of route target prefixes.
- Creating a policy to select a subset of the route target filters to use for BGP route target filtering.



To define the list of route target prefixes:

- You configure the **rtf-prefix-list** statement at the **[edit policy-options]** hierarchy level to specify the name of the route target prefix list and one or more route target prefixes to use. This configuration allows you to specify the incoming route target filtering routes that the device will use and then distribute them throughout the network.

To configure the routing policy and apply the route target prefix list to that policy, you can specify the following policy options:

- **family route-target**—(Optional) The route-target family match condition specifies matching BGP route target filtering routes. You define this criteria in the **from** statement. This example shows how to create an export policy using the **family route-target** match condition.
- **protocol route-target**—(Optional) The route-target protocol match condition defines the criteria that an incoming route must match. You define this criteria in the **from** statement. This statement is primarily useful for restricting the policy to locally generated route target filtering routes.


**NOTE:** When you use the **show route table bgp.rtarget.0** command to view proxy BGP route target filtering routes, you will see the BGP protocol for received routes and the route target protocol routes for local route target filtering routes.

- **rtf-prefix-list name**—The rtf-prefix-list statement applies the list of route target prefixes that you already configured to the policy. You define this criteria in the **from** statement.

### Topology Diagram

Figure 11 on page 134 shows the topology used in this example.

Figure 11: BGP Route Target Filtering Export Policy Topology

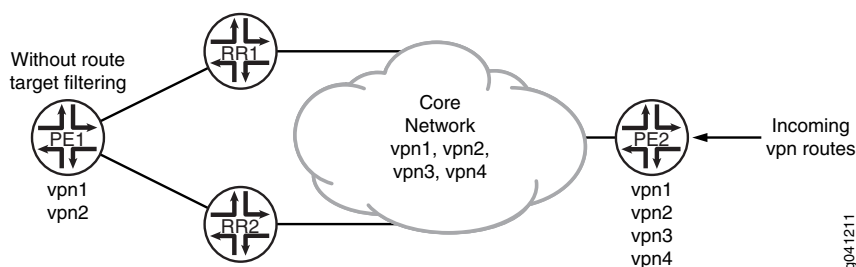

In this example, BGP route target filtering is configured on the route reflectors (Device RR1 and Device RR2) and provider edge (PE) Device PE2. The other PE, Device PE1, does not support BGP route target filtering. Proxy BGP route target filtering is also configured on the peering sessions between the route reflectors and Device PE1 to minimize the number of VPN route updates processed by Device PE1. Device PE2 has four VPNs configured (vpn1, vpn2, vpn3, and vpn4), and Device PE1 has two VPNs configured (vpn1 and vpn2). In the sample topology, all devices participate in autonomous system (AS) 203, OSPF is



the configured interior gateway protocol (IGP), and LDP is the signaling protocol used by the VPNs. In this example, we use static routes in the VPN routing and forwarding (VRF) instances to generate VPN routes. This is done in place of using a PE to customer edge (CE) protocol such as OSPF or BGP.

In this example, you further control the routes being advertised from Device PE2 to Device PE1 by configuring an export policy on Device PE2 to prevent vpn3 routes from being advertised to Device RR1. You create a policy that specifies the **family route-target** match condition, defines the list of route target prefixes, and applies the list of route target prefixes by defining the **rtf-prefix-list** criteria.

## Configuration

### IN THIS SECTION

- [Configuring Device PE1 | 138](#)
- [Configuring Device RR1 | 142](#)
- [Configuring Device RR2 | 145](#)
- [Configuring Device PE2 | 148](#)

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device PE1

```
set interfaces ge-1/0/0 unit 0 description PE1-to-RR1
set interfaces ge-1/0/0 unit 0 family inet address 10.49.0.1/30
set interfaces ge-1/0/0 unit 0 family mpls
set interfaces ge-1/0/1 unit 0 description PE1-to-RR2
set interfaces ge-1/0/1 unit 0 family inet address 10.49.10.1/30
set interfaces ge-1/0/1 unit 0 family mpls
set protocols ldp interface ge-1/0/0
set protocols ldp interface ge-1/0/1
set protocols bgp group internal type internal
set protocols bgp group internal local-address 10.255.163.58
set protocols bgp group internal neighbor 10.255.165.220 family inet-vpn unicast
set protocols bgp group internal neighbor 10.255.165.28 family inet-vpn unicast
set protocols ospf area 0.0.0.0 interface ge-1/0/0
set protocols ospf area 0.0.0.0 interface ge-1/0/1
```



```

set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-options route-distinguisher-id 10.255.163.58
set routing-options autonomous-system 203
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 vrf-target target:203:100
set routing-instances vpn1 routing-options static route 203.0.113.1/24 discard
set routing-instances vpn2 instance-type vrf
set routing-instances vpn2 vrf-target target:203:101
set routing-instances vpn2 routing-options static route 203.0.113.2/24 discard

```

### Device RR1

```

set interfaces ge-1/0/0 unit 0 description RR1-to-PE1
set interfaces ge-1/0/0 unit 0 family inet address 10.49.0.2/30
set interfaces ge-1/0/0 unit 0 family mpls
set interfaces ge-1/0/1 unit 0 description RR1-to-PE2
set interfaces ge-1/0/1 unit 0 family inet address 10.50.0.2/30
set interfaces ge-1/0/1 unit 0 family mpls
set protocols ldp interface ge-1/0/0
set protocols ldp interface ge-1/0/1
set protocols bgp group internal type internal
set protocols bgp group internal local-address 198.51.100.0
set protocols bgp group internal cluster 198.51.100.1
set protocols bgp group internal neighbor 10.255.163.58 description vpn1-to-pe1 family inet-vpn
    unicast
set protocols bgp group internal neighbor 10.255.163.58 family route-target proxy-generate
set protocols bgp group internal neighbor 10.255.168.42 description vpn1-to-pe2 family inet-vpn
    unicast
set protocols ospf area 0.0.0.0 interface ge-1/0/0
set protocols ospf area 0.0.0.0 interface ge-1/0/1
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-options route-distinguisher-id 10.255.165.220
set routing-options autonomous-system 203

```

### Device RR2

```

set interfaces ge-1/0/0 unit 0 description RR2-to-PE1

```



```

set interfaces ge-1/0/0 unit 0 family inet address 10.49.10.2/30
set interfaces ge-1/0/0 unit 0 family mpls
set interfaces ge-1/0/1 unit 0 description RR2-to-PE2
set interfaces ge-1/0/1 unit 0 family inet address 10.50.10.2/30
set interfaces ge-1/0/1 unit 0 family mpls
set protocols ldp interface ge-1/0/0
set protocols ldp interface ge-1/0/1
set protocols bgp group internal type internal
set protocols bgp group internal local-address 10.255.165.28
set protocols bgp group internal cluster 198.51.100.1
set protocols bgp group internal neighbor 10.255.163.58 description vpn2-to-pe1 family inet-vpn
    unicast
set protocols bgp group internal neighbor 10.255.163.58 family route-target proxy-generate
set protocols bgp group internal neighbor 10.255.168.42 description vpn2-to-pe2 family inet-vpn
    unicast
set protocols bgp group internal neighbor 10.255.163.58 family route-target
set protocols ospf area 0.0.0.0 interface ge-1/0/0
set protocols ospf area 0.0.0.0 interface ge-1/0/1
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-options route-distinguisher-id 10.255.165.28
set routing-options autonomous-system 203

```

## Device PE2

```

set interfaces ge-1/0/0 unit 0 description PE2-to-RR1
set interfaces ge-1/0/0 unit 0 family inet address 10.50.0.1/30
set interfaces ge-1/0/0 unit 0 family mpls
set interfaces ge-1/0/1 unit 0 description PE2-to-RR2
set interfaces ge-1/0/1 unit 0 family inet address 10.50.10.2/30
set interfaces ge-1/0/1 unit 0 family mpls
set protocols ldp interface ge-1/0/0
set protocols ldp interface ge-1/0/1
set protocols bgp group internal type internal
set protocols bgp group internal local-address 10.255.168.42
set protocols bgp group internal family inet-vpn unicast
set protocols bgp group internal family route-target
set protocols bgp group internal neighbor 10.255.165.220 export filter-rtc
set protocols bgp group internal neighbor 10.255.165.28
set protocols ospf area 0.0.0.0 interface ge-1/0/0
set protocols ospf area 0.0.0.0 interface ge-1/0/1

```



```

set protocols ospf area 0.0.0.0 interface lo0.0 passive
set policy-options rtf-prefix-list exclude-103 203:203:103/96
set policy-options policy-statement filter-rtc from family route-target
set policy-options policy-statement filter-rtc from rtf-prefix-list exclude-103
set policy-options policy-statement filter-rtc then reject
set routing-options route-distinguisher-id 10.255.168.42
set routing-options autonomous-system 203
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 vrf-target target:203:100
set routing-instances vpn1 routing-options static route 203.0.113.1/24 discard
set routing-instances vpn2 instance-type vrf
set routing-instances vpn2 vrf-target target:203:101
set routing-instances vpn2 routing-options static route 203.0.113.2/24 discard
set routing-instances vpn3 instance-type vrf
set routing-instances vpn3 vrf-target target:203:103
set routing-instances vpn3 routing-options static route 203.0.113.3/24 discard
set routing-instances vpn4 instance-type vrf
set routing-instances vpn4 vrf-target target:203:104
set routing-instances vpn4 routing-options static route 203.0.113.4/24 discard

```

## Configuring Device PE1

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device PE1:

1. Configure the interfaces.

```

[edit interfaces]
user@PE1# set ge-1/0/0 unit 0 description PE1-to-RR1
user@PE1# set ge-1/0/0 unit 0 family inet address 10.49.0.1/30
user@PE1# set ge-1/0/0 unit 0 family mpls

user@PE1#set ge-1/0/1 unit 0 description PE1-to-RR2
user@PE1#set ge-1/0/1 unit 0 family inet address 10.49.10.1/30
user@PE1# set ge-1/0/1 unit 0 family mpls

```

2. Configure the route distinguisher and the AS number.



```
[edit routing-options]
user@PE1# set route-distinguisher-id 10.255.163.58
user@PE1# set autonomous-system 203
```

3. Configure LDP as the signaling protocol used by the VPN.

```
[edit protocols ldp]
user@PE1# set interface ge-1/0/0
user@PE1# set interface ge-1/0/1
```

4. Configure BGP.

```
[edit protocols bgp group internal]
user@PE1# set type internal
user@PE1# set local-address 10.255.163.58
user@PE1# set neighbor 10.255.165.220 family inet-vpn unicast
user@PE1# set neighbor 10.255.165.28 family inet-vpn unicast
```

5. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@PE1# set interface ge-1/0/0
user@PE1# set interface ge-1/0/1
user@PE1# set interface lo0.0 passive
```

6. Configure the VPN routing instances.

```
[edit routing-instances vpn1]
user@PE1# set instance-type vrf
user@PE1# set vrf-target target:203:100
user@PE1# set routing-options static route 203.0.113.1/24 discard
```

```
[edit routing-instances vpn2]
user@PE1# set instance-type vrf
user@PE1# set vrf-target target:203:101
user@PE1# set routing-options static route 203.0.113.2/24 discard
```

7. If you are done configuring the device, commit the configuration.



```
[edit]
user@PE1# commit
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show routing-options**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-1/0/0 {
  unit 0 {
    description PE1-to-RR1;
    family inet {
      address 10.49.0.1/30;
    }
    family mpls;
  }
}
ge-1/0/1 {
  unit 0 {
    description PE1-to-RR2;
    family inet {
      address 10.49.10.1/30;
    }
    family mpls;
  }
}
```

```
user@PE1# show protocols
bgp {
  group internal {
    type internal;
    local-address 10.255.163.58;
    neighbor 10.255.165.220 {
      family inet-vpn {
        unicast;
      }
    }
  }
  neighbor 10.255.165.28 {
    family inet-vpn {
      unicast;
    }
  }
}
```



```

    }
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
    interface lo0.0 {
      passive;
    }
  }
}
ldp {
  interface ge-1/0/0.0;
  interface ge-1/0/1.0;
}

```

```

user@PE1# show routing-options
route-distinguisher-id 10.255.14.182;
autonomous-system 203;

```

```

user@PE1# show routing-instances
vpn1 {
  instance-type vrf;
  vrf-target target:203:100;
  routing-options {
    static {
      route 203.0.113.1/24 discard;
    }
  }
}
vpn2 {
  instance-type vrf;
  vrf-target target:203:101;
  routing-options {
    static {
      route 203.0.113.2/24 discard;
    }
  }
}

```



## Configuring Device RR1

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device RR1:

1. Configure the interfaces.

```
[edit interfaces]
user@RR1# set ge-1/0/0 unit 0 description RR1-to-PE1
user@RR1# set ge-1/0/0 unit 0 family inet address 10.49.0.2/30
user@RR1# set ge-1/0/0 unit 0 family mpls
user@RR1# set ge-1/0/1 unit 0 description RR1-to-PE2
user@RR1# set ge-1/0/1 unit 0 family inet address 10.50.0.2/30
user@RR1# set ge-1/0/1 unit 0 family mpls
```

2. Configure the route distinguisher and the AS number.

```
[edit routing-options]
user@RR1# set route-distinguisher-id 10.255.165.220
user@RR1# set autonomous-system 203
```

3. Configure LDP as the signaling protocol used by the VPN.

```
[edit protocols ldp]
user@RR1# set interface ge-1/0/0
user@RR1# set interface ge-1/0/1
```

4. Configure BGP.

```
[edit protocols bgp group internal]
user@RR1# set type internal
user@RR1# set local-address 10.255.165.220
user@RR1# set cluster 198.51.100.1
user@RR1# set neighbor 10.255.163.58 description vpn1-to-pe1 family inet-vpn unicast
user@RR1# set neighbor 10.255.168.42 description vpn1-to-pe2 family inet-vpn unicast
```

5. Configure BGP route target filtering on the peering session with Device PE2.



```
[edit protocols bgp group internal]
user@RR1# set neighbor 10.255.168.42 family route-target
```

6. Configure proxy BGP route target filtering on the peering session with Device PE1.

```
[edit protocols bgp group internal]
user@RR1# set neighbor 10.255.163.58 family route-target proxy-generate
```

7. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@RR1# set interface ge-1/0/0
user@RR1# set interface ge-1/0/1
user@RR1# set interface lo0.0 passive
```

8. If you are done configuring the device, commit the configuration.

```
[edit]
user@RR1# commit
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@RR1# show interfaces
ge-1/0/0 {
  unit 0 {
    description RR1-to-PE1;
    family inet {
      address 10.49.0.2/30;
    }
    family mpls;
  }
}
ge-1/0/1 {
  unit 0 {
    description RR1-to-PE2;
    family inet {
```



```

        address 10.50.0.2/30;
    }
    family mpls;
}
}

```

```

user@RR1# show protocols
bgp {
  group internal {
    type internal;
    local-address 198.51.100.0;
    cluster 198.51.100.1;
    neighbor 10.255.163.58 {
      description vpn1-to-pe1;
      family inet-vpn {
        unicast;
      }
      family route-target {
        proxy-generate;
      }
    }
    neighbor 10.255.168.42 {
      description vpn1-to-pe2;
      family inet-vpn {
        unicast;
      }
      family route-target;
    }
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
    interface lo0.0 {
      passive;
    }
  }
}
ldp {
  interface ge-1/0/0.0;
  interface ge-1/0/1.0;
}
ospf {

```



```

area 0.0.0.0 {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
    interface lo0.0 {
        passive;
    }
}
}
ldp {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
}

```

```

user@RR1# show routing-options
route-distinguisher-id 10.255.165.220;
autonomous-system 203;

```

## Configuring Device RR2

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device RR2:

1. Configure the interfaces.

```

[edit interfaces]
user@RR2# set ge-1/0/0 unit 0 description RR2-to-PE1
user@RR2# set ge-1/0/0 unit 0 family inet address 10.49.10.2/30
user@RR2# set ge-1/0/0 unit 0 family mpls

user@RR2# set ge-1/0/1 unit 0 description RR2-to-PE2
user@RR2# set ge-1/0/1 unit 0 family inet address 10.50.10.2/30
user@RR2# set ge-1/0/1 unit 0 family mpls

```

2. Configure the route distinguisher and the AS number.

```

[edit routing-options]
user@RR2# set route-distinguisher-id 10.255.165.28
user@RR2# set autonomous-system 203

```



3. Configure LDP as the signaling protocol used by the VPN.

```
[edit protocols ldp]
user@RR2# set interface ge-1/0/0
user@RR2# set interface ge-1/0/1
```

4. Configure BGP.

```
[edit protocols bgp group internal]
user@RR2# set type internal
user@RR2# set local-address 10.255.165.28
user@RR2# set cluster 198.51.100.1
user@RR2# set neighbor 10.255.163.58 description vpn2-to-pe1 family inet-vpn unicast
user@RR2# set neighbor 10.255.168.42 description vpn2-to-pe2 family inet-vpn unicast
```

5. Configure BGP route target filtering on the peering session with Device PE2.

```
[edit protocols bgp group internal]
user@RR2# set neighbor 10.255.168.42 family route-target
```

6. Configure proxy BGP route target filtering on the peering session with Device PE1.

```
[edit protocols bgp group internal]
user@RR2# set neighbor 10.255.163.58 family route-target proxy-generate
```

7. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@RR2# set interface ge-1/0/0
user@RR2# set interface ge-1/0/1
user@RR2# set interface lo0.0 passive
```

8. If you are done configuring the device, commit the configuration.

```
[edit]
user@RR2# commit
```

## Results



From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@RR2# show interfaces
ge-1/0/0 {
  unit 0 {
    description RR2-to-PE1;
    family inet {
      address 10.49.10.2/30;
    }
    family mpls;
  }
}
ge-1/0/1 {
  unit 0 {
    description RR2-to-PE2;
    family inet {
      address 10.50.10.2/30;
    }
    family mpls;
  }
}
```

```
user@RR2# show protocols
bgp {
  group internal {
    local-address 10.255.165.28;
    cluster 198.51.100.1;
    neighbor 10.255.163.58 {
      description vpn2-to-pe1;
      family inet-vpn {
        unicast;
      }
      family route-target {
        proxy-generate;
      }
    }
  }
  neighbor 10.255.168.42 {
    description vpn2-to-pe2;
    family inet-vpn {
      unicast;
    }
    family route-target;
```



```

    }
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
    interface lo0.0 {
      passive;
    }
  }
}
ldp {
  interface ge-1/0/0.0;
  interface ge-1/0/1.0;
}

```

```

user@RR2# show routing-options
route-distinguisher-id 10.255.165.28;
autonomous-system 203;

```

## Configuring Device PE2

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device PE2:

1. Configure the interfaces.

```

[edit interfaces]
user@PE2# set ge-1/0/0 unit 0 description PE2-to-RR1
user@PE2# set ge-1/0/0 unit 0 family inet address 10.50.0.1/30
user@PE2# set ge-1/0/0 unit 0 family mpls

user@PE2#set ge-1/0/1 unit 0 description PE2-to-RR2
user@PE2#set ge-1/0/1 unit 0 family inet address 10.50.10.2/30
user@PE2# set ge-1/0/1 unit 0 family mpls

```

2. Configure the route distinguisher and the AS number.

```

[edit routing-options]

```



```
user@PE2# set route-distinguisher-id 10.255.168.42
user@PE2# set autonomous-system 203
```

3. Configure LDP as the signaling protocol used by the VPN.

```
[edit protocols ldp]
user@PE2# set interface ge-1/0/0
user@PE2# set interface ge-1/0/1
```

4. Configure BGP.

```
[edit protocols bgp group internal]
user@PE2# set type internal
user@PE2# set local-address 10.255.168.42
user@PE2# set family inet-vpn unicast
user@PE2# set family route-target
user@PE2# set neighbor 10.255.165.220
user@PE2# set neighbor 10.255.165.28
```

5. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@PE2# set interface ge-1/0/0
user@PE2# set interface ge-1/0/1
user@PE2# set interface lo0.0 passive
```

6. Configure the VPN routing instances.

```
[edit routing-instances vpn1]
user@PE2# set instance-type vrf
user@PE2# set vrf-target target:203:100
user@PE2# set routing-options static route 203.0.113.1/24 discard
```

```
[edit routing-instances vpn2]
user@PE2# set instance-type vrf
user@PE2# set vrf-target target:203:101
user@PE2# set routing-options static route 203.0.113.2/24 discard
```



```
[edit routing-instances vpn3]
user@PE2# set instance-type vrf
user@PE2# set vrf-target target:203:103
user@PE2# set routing-options static route 203.0.113.3/24 discard
```

```
[edit routing-instances vpn4]
user@PE2# set instance-type vrf
user@PE2# set vrf-target target:203:104
user@PE2# set routing-options static route 203.0.113.4/24 discard
```

7. Configure and apply the export routing policy.

```
[edit policy-options]
user@PE2# set rtf-prefix-list exclude-103 203:203:103/96
```

```
[edit policy-options policy-statement filter-rtc]
user@PE2# set from family route-target
user@PE2# set from rtf-prefix-list exclude-103
user@PE2# set then reject
```

```
[edit protocols bgp group internal]
user@PE2# set neighbor 10.255.165.220 export filter-rtc
```

8. If you are done configuring the device, commit the configuration.

```
[edit]
user@PE2# commit
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show policy-options**, **show routing-options**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE2# show interfaces
ge-1/0/0 {
  unit 0 {
    description PE2-to-RR1;
    family inet {
      address 10.50.0.1/30;
```



```

    }
    family mpls;
  }
}
ge-1/0/1 {
  unit 0 {
    description PE2-to-RR2;
    family inet {
      address 10.50.10.2/30;
    }
    family mpls;
  }
}

```

user@PE2# **show protocols**

```

bgp {
  group internal {
    type internal;
    local-address 10.255.168.42;
    family inet-vpn {
      unicast;
    }
    family route-target;
    neighbor 10.255.165.220 {
      export filter-rtc;
    }
    neighbor 10.255.165.28;
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
    interface lo0.0 {
      passive;
    }
  }
}
ldp {
  interface ge-1/0/0.0;
  interface ge-1/0/1.0;
}

```



```
user@PE2# show routing-options
route-distinguisher-id 10.255.168.42;
autonomous-system 203;
```

```
user@PE2# show policy-options
policy-statement filter-rtc {
  from {
    family route-target;
    rtf-prefix-list exclude-103;
  }
  then reject;
}
rtf-prefix-list exclude-103 {
  203:203:103/96;
}
```

```
user@PE2# show routing-instances
vpn1 {
  instance-type vrf;
  vrf-target target:203:100;
  routing-options {
    static {
      route 203.0.113.1/24 discard;
    }
  }
}
vpn2 {
  instance-type vrf;
  vrf-target target:203:101;
  routing-options {
    static {
      route 203.0.113.2/24 discard;
    }
  }
}
vpn3 {
  instance-type vrf;
  vrf-target target:203:103;
  routing-options {
    static {
      route 203.0.113.3/24 discard;
    }
  }
}
```



```

}
vpn4 {
  instance-type vrf;
  vrf-target target:203:104;
  routing-options {
    static {
      route 203.0.113.4/24 discard;
    }
  }
}
}

```

## Verification

### IN THIS SECTION

- [Verifying the Route Target Filtering Routes in the bgp.rtarget.0 Routing Table for Device RR1 | 153](#)
- [Verifying the Route Target Filtering Routes in the bgp.rtarget.0 Routing Table for Device RR2 | 154](#)

Confirm that the configuration is working properly.

### *Verifying the Route Target Filtering Routes in the bgp.rtarget.0 Routing Table for Device RR1*

#### Purpose

Verify that the route prefix for vpn3 is not in Device RR1's bgp.rtarget.0 table. Since an export policy on Device PE2 was applied to prevent the advertisement of vpn3 routes to Device RR1, Device RR1 should not receive those advertisements.

#### Action

From operational mode, enter the **show route advertising-protocol bgp 10.255.165.220 table bgp.rtarget.0** command.

```
user@PE2# show route advertising-protocol bgp 10.255.165.220 table bgp.rtarget.0
```

```

bgp.rtarget.0: 4 destinations, 11 routes
(4 active, 0 holddown, 0 hidden)

```

Prefix	Nexthop	MED	Lclpref	AS path
203:203:100/96	*	Self	100	I
203:203:101/96	*	Self	100	I
203:203:104/96	*	Self	100	I



### Meaning

The `bgp.rtarget.0` table does not display `203:203:103/96`, which is the route prefix for `vpn3`. That means the export policy was applied correctly.

### Verifying the Route Target Filtering Routes in the `bgp.rtarget.0` Routing Table for Device `RR2`

#### Purpose

Verify that the route prefix for `vpn3` is in Device `RR2`'s `bgp.rtarget.0` table. Since an export policy was not applied on Device `PE2` to prevent the advertisement of `vpn3` routes to Device `RR2`, Device `RR2` should receive advertisements from all of the VPNs.

#### Action

From operational mode, enter the **`show route advertising-protocol bgp 10.255.165.28 table bgp.rtarget.0`** command.

```
user@PE2# show route advertising-protocol bgp 10.255.165.28 table bgp.rtarget.0
```

```
bgp.rtarget.0: 4 destinations, 11 routes (4 active, 0 holddown, 0 hidden)
(4 active, 0 holddown, 0 hidden)
  Prefix                Nexthop          MED      Lclpref    AS path
  203:203:100/96        *                Self      100        I
  203:203:101/96        *                Self      100        I
  203:203:103/96        *                Self      100        I
  203:203:104/96        *                Self      100        I
```

### Meaning

The `bgp.rtarget.0` table displays the route prefixes for all of the VPNs.

## Example: Configuring Layer 3 VPN Protocol Family Qualifiers for Route Filters

### IN THIS SECTION

- Requirements | 155
- Overview | 155
- Configuration | 156
- Verification | 158



This example shows how to control the scope of BGP import policies by configuring a family qualifier for the BGP import policy. The family qualifier specifies routes of type **inet**, **inet6**, **inet-vpn**, or **inet6-vpn**.

## Requirements

This example uses Junos OS Release 10.0 or later.

Before you begin:

- Configure the device interfaces.
- Configure an interior gateway protocol. See the *Junos OS Routing Protocols Library*.
- Configure a BGP session for multiple route types. For example, configure the session for both family **inet** routes and family **inet-vpn** routes. See [“Configuring IBGP Sessions Between PE Routers in VPNs” on page 95](#) and [“Configuring Layer 3 VPNs to Carry IPv6 Traffic” on page 250](#).

## Overview

Family qualifiers cause a route filter to match only one specific family. When you configure an IPv4 route filter without a family qualifier, as shown here, the route filter matches **inet** and **inet-vpn** routes.

```
route-filter ipv4-address/mask;
```

Likewise, when you configure an IPv6 route filter without a family qualifier, as shown here, the route filter matches **inet6** and **inet6-vpn** routes.

```
route-filter ipv6-address/mask;
```

Consider the case in which a BGP session has been configured for both family **inet** routes and family **inet-vpn** routes, and an import policy has been configured for this BGP session. This means that both family **inet** and family **inet-vpn** routes, when received, share the same import policy. The policy term might look as follows:

```
from {
    route-filter 0.0.0.0/0 exact;
}
then {
    next-hop self;
    accept;
}
```



This route-filter logic matches an **inet** route of 0.0.0.0 and an **inet-vpn** route whose IPv4 address portion is 0.0.0.0. The 8-byte route distinguisher portion of the **inet-vpn** route is not considered in the route-filter matching. This is a change in Junos OS behavior that was introduced in Junos OS Release 10.0.

If you do not want your policy to match both types of routes, add a family qualifier to your policy. To have the route-filter match only **inet** routes, add the family **inet** policy qualifier. To have the route-filter match only **inet-vpn** routes, add the family **inet-vpn** policy qualifier.

The family qualifier is evaluated before the route-filter is evaluated. Thus, the route-filter is not evaluated if the family match fails. The same logic applies to family **inet6** and family **inet6-vpn**. The route-filter used in the **inet6** example must use an IPv6 address. There is a potential efficiency gain in using a family qualifier because the family qualifier is tested before most other qualifiers, quickly eliminating routes from undesired families.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### inet Example

```
set policy-options policy-statement specific-family from family inet
set policy-options policy-statement specific-family from route-filter 0.0.0.0/0 exact
set policy-options policy-statement specific-family then next-hop self
set policy-options policy-statement specific-family then accept
set protocols bgp import specific-family
```

#### Inet-vpn Example

```
set policy-options policy-statement specific-family from family inet-vpn
set policy-options policy-statement specific-family from route-filter 0.0.0.0/0 exact
set policy-options policy-statement specific-family then next-hop self
set policy-options policy-statement specific-family then accept
set protocols bgp import specific-family
```

#### inet6 Example



```

set policy-options policy-statement specific-family from family inet6
set policy-options policy-statement specific-family from route-filter 0::0/0 exact
set policy-options policy-statement specific-family then next-hop self
set policy-options policy-statement specific-family then accept
set protocols bgp import specific-family

```

### Inet6-vpn Example

```

set policy-options policy-statement specific-family from family inet6-vpn
set policy-options policy-statement specific-family from route-filter 0::0/0 exact
set policy-options policy-statement specific-family then next-hop self
set policy-options policy-statement specific-family then accept
set protocols bgp import specific-family

```

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure a flow map:

1. Configure the family qualifier.

```

[edit policy-options]
user@host# set policy-statement specific-family from family inet

```

2. Configure the route filter.

```

[edit policy-options]
user@host# set policy-statement specific-family from route-filter 0.0.0.0/0 exact

```

3. Configure the policy actions.

```

[edit policy-options]
user@host# set policy-statement specific-family then next-hop self
user@host# set policy-statement specific-family then accept

```



#### 4. Apply the policy.

```
[edit protocols bgp]
user@host# set import specific-family
```

### Results

From configuration mode, confirm your configuration by issuing the **show protocols** and **show policy-options** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@host# show protocols
bgp {
  import specific-family;
}
user@host# show policy-options
policy-statement specific-family {
  from {
    family inet;
    route-filter 0.0.0.0/0 exact;
  }
  then {
    next-hop self;
    accept;
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

Repeat the procedure for every protocol family for which you need a specific route-filter policy.

### Verification

To verify the configuration, run the following commands:

- **show route advertising-protocol bgp *neighbor* detail**
- **show route instance *instance-name* detail**



## Understanding Proxy BGP Route Target Filtering for VPNs

BGP route target filtering (also known as route target constrain, or RTC) allows you to distribute VPN routes to only the devices that need them. In VPN networks without BGP route target filtering configured, BGP distributes all VPN routes to all VPN peer devices, which can strain network resources. The route target filtering feature was introduced to reduce the number of devices receiving VPN routes and VPN routing updates, thereby limiting the amount of overhead associated with running a VPN. The Junos OS implementation for BGP route target filtering is based on RFC 4684, *Constrained Route Distribution for Border Gateway Protocol/MultiProtocol Label Switching (BGP/MPLS) Internet Protocol (IP) Virtual Private Networks (VPNs)*.

What if you have a network environment where route target filtering is not widely deployed, or what if some devices do not support route target filtering? For example, you might have a BGP speaker with route target filtering enabled that is peered with a BGP speaker that does not support or have route target filtering configured. In this case, the BGP speaker with route target filtering configured must advertise default route target membership (RT membership) on behalf of its peer. The route target filtering resource savings are unrealized because the device supporting the filtering must now send all VPN routes to the device that does not support the filter. Proxy BGP route target filtering (or Proxy RTC) permits the generation of RT membership for devices that do not support route target filtering. This eases the deployment of route target filtering in networks where it is incompletely deployed or not fully supported.

Proxy BGP route target filtering allows you to distribute proxy RT membership advertisements created from the received BGP VPN routes to other devices in the network that need them. These are known as proxy advertisements because the device creates the RT membership on behalf of its peers without the route target filtering functionality. Proxy BGP route target filtering uses BGP route target extended communities that are exported to a specific BGP speaker to generate the route targets. Generated proxy RTC routes are stored in the `bgp.rtarget.0` routing table.

You can also configure a policy to control which VPN routes are used to generate the proxy RTC routes. This can help control which RT membership is generated by the proxying device. In addition, you can configure a policy to reduce the memory overhead associated with proxy RTC. Proxy RTC only uses additional memory on a per-VPN route basis when it is permitted by a policy to be used for generating RT membership.

## Example: Configuring Proxy BGP Route Target Filtering for VPNs

### IN THIS SECTION

- [Requirements | 160](#)
- [Overview | 160](#)



●	Configuration   162
●	Verification   179

This example shows how to configure proxy BGP route target filtering (also known as proxy route target constrain, or proxy RTC).

## Requirements

This example uses the following hardware and software components:

- Four Juniper Networks devices that can be a combination of M Series, MX Series, or T Series routers.
- Junos OS Release 12.2 or later on one or more devices configured for proxy BGP route filtering. In this example, you explicitly configure proxy BGP route filtering on the route reflectors.

Before configuring proxy BGP route target filtering, make sure that you are familiar with and understand the following concepts:

- *Layer 2 VPNs*
- [Understanding Layer 3 VPNs on page 37](#)
- [Understanding VPN-IPv4 Addresses and Route Distinguishers on page 244](#)
- [Configuring Policies for the VRF Table on PE Routers in VPNs on page 102](#)
- [Configuring BGP Route Target Filtering for VPNs on page 116](#)
- *BGP extended communities*

## Overview

Route target filtering decreases the number of devices in a network that receive VPN routes that are not needed. Proxy BGP route target filtering allows networks to take advantage of route target filtering in locations where the feature is not currently supported. By configuring this feature, you can realize many of the same network resource savings that are available to you if your network fully supported BGP route target filtering.

To configure proxy BGP route target filtering, you include the **family route-target proxy-generate** statement on the devices that will distribute proxy route target membership (RT membership) advertisements for the devices that do not support BGP route target filtering. The proxy BGP route target filtering routes are then stored in the `bgp.rtarget.0` routing table.




Proxy BGP route target filtering is intended to create RT membership advertisements for devices that do not support the BGP route target filtering feature. If the **proxy-generate** statement is present, but the route target family is negotiated with the BGP peer, the proxy-generate functionality is disabled. This allows simplified configuration of BGP peer groups where a portion of the peers in the group support route target filtering but others do not. In such an example case, the **family route-target proxy-generate** statement might be part of the BGP peer group configuration.

**NOTE:** When deploying proxy BGP route target filtering in your network, the **advertise-default** statement for BGP route target filtering causes the device to advertise the default route target route (0:0:0/0) and suppress all routes that are more specific. If you have proxy BGP route target filtering configured on one device and one or more peers have the **advertise-default** statement configured as part of their BGP route target filtering configuration, the advertise-default configuration is ignored.

### Topology Diagram

Figure 12 on page 161 shows the topology used in this example.

Figure 12: Proxy BGP Route Target Filtering Topology

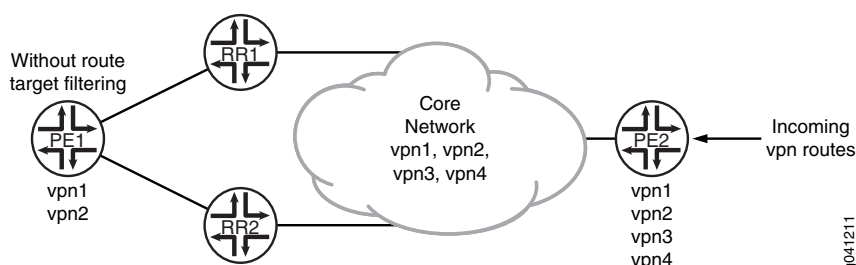

In this example, BGP route target filtering is configured on the route reflectors (Device RR1 and Device RR2) and the provider edge (PE) Device PE2, but the other PE, Device PE1, does not support the BGP route target filtering functionality. Device PE2 has four VPNs configured (vpn1, vpn2, vpn3, and vpn4). Device PE1 has two VPNs configured (vpn1 and vpn2), so this device is only interested in receiving route updates for vpn1 and vpn2. Currently, this is impossible because both route reflectors (Device RR1 and Device RR2) learn and share information about all of the incoming VPN routes (vpn1 through vpn4) with Device PE1. In the sample topology, all devices participate in autonomous system (AS) 203, OSPF is the configured interior gateway protocol (IGP), and LDP is the signaling protocol used by the VPNs. In this example, we use static routes in the VPN routing and forwarding (VRF) instances to generate VPN routes. This is done in place of using a PE to customer edge (CE) protocol such as OSPF or BGP.

To minimize the number of VPN route updates being processed by Device PE1, you include the **family route-target proxy-generate** statement to configure proxy BGP route target filtering on each route reflector. Each route reflector has a peering session with Device PE1 and supports route target filtering to the core.



However, Device PE1 does not support route target filtering, so the network resource savings are unrealized by Device PE1 since it receives all of the VPN updates. By configuring proxy BGP route target filtering on the peering sessions facing Device PE1, you limit the number of VPN updates processed by Device PE1, and the route reflectors generate the proxy BGP route target routes for Device PE1 throughout the network.

## Configuration

### IN THIS SECTION

- [Configuring Device PE1 | 165](#)
- [Configuring Device RR1 | 168](#)
- [Configuring Device RR2 | 171](#)
- [Configuring Device PE2 | 174](#)

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device PE1

```
set interfaces ge-1/0/0 unit 0 description PE1-to-RR1
set interfaces ge-1/0/0 unit 0 family inet address 10.49.0.1/30
set interfaces ge-1/0/0 unit 0 family mpls
set interfaces ge-1/0/1 unit 0 description PE1-to-RR2
set interfaces ge-1/0/1 unit 0 family inet address 10.49.10.1/30
set interfaces ge-1/0/1 unit 0 family mpls
set protocols ldp interface ge-1/0/0
set protocols ldp interface ge-1/0/1
set protocols bgp group internal type internal
set protocols bgp group internal local-address 10.255.163.58
set protocols bgp group internal neighbor 10.255.165.220 family inet-vpn unicast
set protocols bgp group internal neighbor 10.255.165.28 family inet-vpn unicast
set protocols ospf area 0.0.0.0 interface ge-1/0/0
set protocols ospf area 0.0.0.0 interface ge-1/0/1
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-options route-distinguisher-id 10.255.163.58
set routing-options autonomous-system 203
```



```

set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 vrf-target target:203:100
set routing-instances vpn1 routing-options static route 203.0.113.1/24 discard
set routing-instances vpn2 instance-type vrf
set routing-instances vpn2 vrf-target target:203:101
set routing-instances vpn2 routing-options static route 203.0.113.2/24 discard

```

## Device RR1

```

set interfaces ge-1/0/0 unit 0 description RR1-to-PE1
set interfaces ge-1/0/0 unit 0 family inet address 10.49.0.2/30
set interfaces ge-1/0/0 unit 0 family mpls
set interfaces ge-1/0/1 unit 0 description RR1-to-PE2
set interfaces ge-1/0/1 unit 0 family inet address 10.50.0.2/30
set interfaces ge-1/0/1 unit 0 family mpls
set protocols ldp interface ge-1/0/0
set protocols ldp interface ge-1/0/1
set protocols bgp group internal type internal
set protocols bgp group internal local-address 198.51.100.1
set protocols bgp group internal cluster 198.51.100.1
set protocols bgp group internal neighbor 10.255.163.58 description vpn1-to-pe1 family inet-vpn
unicast
set protocols bgp group internal neighbor 10.255.163.58 family route-target proxy-generate
set protocols bgp group internal neighbor 10.255.168.42 description vpn1-to-pe2 family inet-vpn
unicast
set protocols bgp group internal neighbor 10.255.168.42 family route-target
set protocols ospf area 0.0.0.0 interface ge-1/0/0
set protocols ospf area 0.0.0.0 interface ge-1/0/1
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-options route-distinguisher-id 10.255.165.220
set routing-options autonomous-system 203

```

## Device RR2

```

set interfaces ge-1/0/0 unit 0 description RR2-to-PE1
set interfaces ge-1/0/0 unit 0 family inet address 10.49.10.2/30
set interfaces ge-1/0/0 unit 0 family mpls

```



```

set interfaces ge-1/0/1 unit 0 description RR2-to-PE2
set interfaces ge-1/0/1 unit 0 family inet address 10.50.10.2/30
set interfaces ge-1/0/1 unit 0 family mpls
set protocols ldp interface ge-1/0/0
set protocols ldp interface ge-1/0/1
set protocols bgp group internal type internal
set protocols bgp group internal local-address 10.255.165.28
set protocols bgp group internal cluster 198.51.100.1
set protocols bgp group internal neighbor 10.255.163.58 description vpn2-to-pe1 family inet-vpn
    unicast
set protocols bgp group internal neighbor 10.255.163.58 family route-target proxy-generate
set protocols bgp group internal neighbor 10.255.168.42 description vpn2-to-pe2 family inet-vpn
    unicast
set protocols bgp group internal neighbor 10.255.168.42 family route-target
set protocols ospf area 0.0.0.0 interface ge-1/0/0
set protocols ospf area 0.0.0.0 interface ge-1/0/1
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-options route-distinguisher-id 10.255.165.28
set routing-options autonomous-system 203

```

## Device PE2

```

set interfaces ge-1/0/0 unit 0 description PE2-to-RR1
set interfaces ge-1/0/0 unit 0 family inet address 10.50.0.1/30
set interfaces ge-1/0/0 unit 0 family mpls
set interfaces ge-1/0/1 unit 0 description PE2-to-RR2
set interfaces ge-1/0/1 unit 0 family inet address 10.50.10.1/30
set interfaces ge-1/0/1 unit 0 family mpls
set protocols ldp interface ge-1/0/0
set protocols ldp interface ge-1/0/1
set protocols bgp group internal type internal
set protocols bgp group internal local-address 10.255.168.42
set protocols bgp group internal family inet-vpn unicast
set protocols bgp group internal family route-target
set protocols bgp group internal neighbor 10.255.165.220
set protocols bgp group internal neighbor 10.255.165.28
set protocols ospf area 0.0.0.0 interface ge-1/0/0
set protocols ospf area 0.0.0.0 interface ge-1/0/1
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-options route-distinguisher-id 10.255.168.42

```



```

set routing-options autonomous-system 203
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 vrf-target target:203:100
set routing-instances vpn1 routing-options static route 203.0.113.1/24 discard
set routing-instances vpn2 instance-type vrf
set routing-instances vpn2 vrf-target target:203:101
set routing-instances vpn2 routing-options static route 203.0.113.2/24 discard
set routing-instances vpn3 instance-type vrf
set routing-instances vpn3 vrf-target target:203:103
set routing-instances vpn3 routing-options static route 203.0.113.3/24 discard
set routing-instances vpn4 instance-type vrf
set routing-instances vpn4 vrf-target target:203:104
set routing-instances vpn4 routing-options static route 203.0.113.4/24 discard

```

## Configuring Device PE1

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device PE1:

1. Configure the interfaces.

```

[edit interfaces]
user@PE1# set ge-1/0/0 unit 0 description PE1-to-RR1
user@PE1# set ge-1/0/0 unit 0 family inet address 10.49.0.1/30
user@PE1# set ge-1/0/0 unit 0 family mpls

user@PE1# set ge-1/0/1 unit 0 description PE1-to-RR2
user@PE1# set ge-1/0/1 unit 0 family inet address 10.49.10.1/30
user@PE1# set ge-1/0/1 unit 0 family mpls

```

2. Configure the route distinguisher and the AS number.

```

[edit routing-options]
user@PE1# set route-distinguisher-id 10.255.163.58
user@PE1# set autonomous-system 203

```

3. Configure LDP as the signaling protocol used by the VPN.



```
[edit protocols ldp]
user@PE1# set interface ge-1/0/0
user@PE1# set interface ge-1/0/1
```

#### 4. Configure BGP.

```
[edit protocols bgp group internal]
user@PE1# set type internal
user@PE1# set local-address 10.255.163.58
user@PE1# set neighbor 10.255.165.220 family inet-vpn unicast
user@PE1# set neighbor 10.255.165.28 family inet-vpn unicast
```

#### 5. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@PE1# set interface ge-1/0/0
user@PE1# set interface ge-1/0/1
user@PE1# set interface lo0.0 passive
```

#### 6. Configure the VPN routing instances.

```
[edit routing-instances vpn1]
user@PE1# set instance-type vrf
user@PE1# set vrf-target target:203:100
user@PE1# set routing-options static route 203.0.113.1/24 discard
```

```
[edit routing-instances vpn2]
user@PE1# set instance-type vrf
user@PE1# set vrf-target target:203:101
user@PE1# set routing-options static route 203.0.113.2/24 discard
```

#### 7. If you are done configuring the device, commit the configuration.

```
[edit]
user@PE1# commit
```

## Results



From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show routing-options**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-1/0/0 {
  unit 0 {
    description PE1-to-RR1;
    family inet {
      address 10.49.0.1/30;
    }
    family mpls;
  }
}
ge-1/0/1 {
  unit 0 {
    description PE1-to-RR2;
    family inet {
      address 10.49.10.1/30;
    }
    family mpls;
  }
}
```

```
user@PE1# show protocols
bgp {
  group internal {
    type internal;
    local-address 10.255.163.58;
    neighbor 10.255.165.220 {
      family inet-vpn {
        unicast;
      }
    }
    neighbor 10.255.165.28 {
      family inet-vpn {
        unicast;
      }
    }
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-1/0/0.0;
```



```

interface ge-1/0/1.0;
interface lo0.0 {
    passive;
}
}
ldp {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
}

```

```

user@PE1# show routing-options
route-distinguisher-id 10.255.14.182;
autonomous-system 203;

```

```

user@PE1# show routing-instances
vpn1 {
    instance-type vrf;
    vrf-target target:203:100;
    routing-options {
        static {
            route 203.0.113.1/24 discard;
        }
    }
}
vpn2 {
    instance-type vrf;
    vrf-target target:203:101;
    routing-options {
        static {
            route 203.0.113.2/24 discard;
        }
    }
}

```

### Configuring Device RR1

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device RR1:

1. Configure the interfaces.



```
[edit interfaces]
user@RR1# set ge-1/0/0 unit 0 description RR1-to-PE1
user@RR1# set ge-1/0/0 unit 0 family inet address 10.49.0.2/30
user@RR1# set ge-1/0/0 unit 0 family mpls

user@RR1# set ge-1/0/1 unit 0 description RR1-to-PE2
user@RR1# set ge-1/0/1 unit 0 family inet address 10.50.0.2/30
user@RR1# set ge-1/0/1 unit 0 family mpls
```

2. Configure the route distinguisher and the AS number.

```
[edit routing-options]
user@RR1# set route-distinguisher-id 10.255.165.220
user@RR1# set autonomous-system 203
```

3. Configure LDP as the signaling protocol used by the VPN.

```
[edit protocols ldp]
user@RR1# set interface ge-1/0/0
user@RR1# set interface ge-1/0/1
```

4. Configure BGP.

```
[edit protocols bgp group internal]
user@RR1# set type internal
user@RR1# set local-address 10.255.165.220
user@RR1# set cluster 198.51.100.1
user@RR1# set neighbor 10.255.163.58 description vpn1-to-pe1 family inet-vpn unicast
user@RR1# set neighbor 10.255.168.42 description vpn1-to-pe2 family inet-vpn unicast
```

5. Configure BGP route target filtering on the peering session with Device PE2.

```
[edit protocols bgp group internal]
user@RR1# set neighbor 10.255.168.42 family route-target
```

6. Configure proxy BGP route target filtering on the peering session with Device PE1.

```
[edit protocols bgp group internal]
user@RR1# set neighbor 10.255.163.58 family route-target proxy-generate
```



## 7. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@RR1# set interface ge-1/0/0
user@RR1# set interface ge-1/0/1
user@RR1# set interface lo0.0 passive
```

## 8. If you are done configuring the device, commit the configuration.

```
[edit]
user@RR1# commit
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols** and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@RR1# show interfaces
ge-1/0/0 {
  unit 0 {
    description RR1-to-PE1;
    family inet {
      address 10.49.0.2/30;
    }
    family mpls;
  }
}
ge-1/0/1 {
  unit 0 {
    description RR1-to-PE2;
    family inet {
      address 10.50.0.2/30;
    }
    family mpls;
  }
}
```

```
user@RR1# show protocols
bgp {
  group internal {
    type internal;
```



```

local-address 198.51.100.1;
cluster 198.51.100.1;
neighbor 10.255.163.58 {
    description vpn1-to-pe1;
    family inet-vpn {
        unicast;
    }
    family route-target {
        proxy-generate;
    }
}
neighbor 10.255.168.42 {
    description vpn1-to-pe2;
    family inet-vpn {
        unicast;
    }
    family route-target;
}
}
}
ospf {
    area 0.0.0.0 {
        interface ge-1/0/0.0;
        interface ge-1/0/1.0;
        interface lo0.0 {
            passive;
        }
    }
}
ldp {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
}

```

```

user@RR1# show routing-options
route-distinguisher-id 10.255.165.220;
autonomous-system 203;

```

## Configuring Device RR2

### Step-by-Step Procedure



The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device RR2:

1. Configure the interfaces.

```
[edit interfaces]
user@RR2# set ge-1/0/0 unit 0 description RR2-to-PE1
user@RR2# set ge-1/0/0 unit 0 family inet address 10.49.10.2/30
user@RR2# set ge-1/0/0 unit 0 family mpls

user@RR2# set ge-1/0/1 unit 0 description RR2-to-PE2
user@RR2# set ge-1/0/1 unit 0 family inet address 10.50.10.2/30
user@RR2# set ge-1/0/1 unit 0 family mpls
```

2. Configure the route distinguisher and the AS number.

```
[edit routing-options]
user@RR2# set route-distinguisher-id 10.255.165.28
user@RR2# set autonomous-system 203
```

3. Configure LDP as the signaling protocol used by the VPN.

```
[edit protocols ldp]
user@RR2# set interface ge-1/0/0
user@RR2# set interface ge-1/0/1
```

4. Configure BGP.

```
[edit protocols bgp group internal]
user@RR2# set type internal
user@RR2# set local-address 10.255.165.28
user@RR2# set cluster 198.51.100.1
user@RR2# set neighbor 10.255.163.58 description vpn2-to-pe1 family inet-vpn unicast
user@RR2# set neighbor 10.255.168.42 description vpn2-to-pe2 family inet-vpn unicast
```

5. Configure BGP route target filtering on the peering session with Device PE2.

```
[edit protocols bgp group internal]
user@RR2# set neighbor 10.255.168.42 family route-target
```



6. Configure proxy BGP route target filtering on the peering session with Device PE1.

```
[edit protocols bgp group internal]
user@RR2# set neighbor 10.255.163.58 family route-target proxy-generate
```

7. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@RR2# set interface ge-1/0/0
user@RR2# set interface ge-1/0/1
user@RR2# set interface lo0.0 passive
```

8. If you are done configuring the device, commit the configuration.

```
[edit]
user@RR2# commit
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@RR2# show interfaces
ge-1/0/0 {
  unit 0 {
    description RR2-to-PE1;
    family inet {
      address 10.49.10.2/30;
    }
    family mpls;
  }
}
ge-1/0/1 {
  unit 0 {
    description RR2-to-PE2;
    family inet {
      address 10.50.10.2/30;
    }
    family mpls;
  }
}
```



```

user@RR2# show protocols
bgp {
  group internal {
    local-address 10.255.165.28;
    cluster 198.51.100.1;
    neighbor 10.255.163.58 {
      description vpn2-to-pe1;
      family inet-vpn {
        unicast;
      }
      family route-target {
        proxy-generate;
      }
    }
    neighbor 10.255.168.42 {
      description vpn2-to-pe2;
      family inet-vpn {
        unicast;
      }
      family route-target;
    }
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
    interface lo0.0 {
      passive;
    }
  }
}
ldp {
  interface ge-1/0/0.0;
  interface ge-1/0/1.0;
}

```

```

user@RR2# show routing-options
route-distinguisher-id 10.255.165.28;
autonomous-system 203;

```

### **Configuring Device PE2**

#### **Step-by-Step Procedure**



The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device PE2:

1. Configure the interfaces.

```
[edit interfaces]
user@PE2# set ge-1/0/0 unit 0 description PE2-to-RR1
user@PE2# set ge-1/0/0 unit 0 family inet address 10.50.0.1/30
user@PE2# set ge-1/0/0 unit 0 family mpls

user@PE2# set ge-1/0/1 unit 0 description PE2-to-RR2
user@PE2# set ge-1/0/1 unit 0 family inet address 10.50.10.1/30
user@PE2# set ge-1/0/1 unit 0 family mpls
```

2. Configure the route distinguisher and the AS number.

```
[edit routing-options]
user@PE2# set route-distinguisher-id 10.255.168.42
user@PE2# set autonomous-system 203
```

3. Configure LDP as the signaling protocol used by the VPN.

```
[edit protocols ldp]
user@PE2# set interface ge-1/0/0
user@PE2# set interface ge-1/0/1
```

4. Configure BGP.

```
[edit protocols bgp group internal]
user@PE2# set type internal
user@PE2# set local-address 10.255.168.42
user@PE2# set family inet-vpn unicast
user@PE2# set family route-target
user@PE2# set neighbor 10.255.165.220
user@PE2# set neighbor 10.255.165.28
```

5. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
```



```

user@PE2# set interface ge-1/0/0
user@PE2# set interface ge-1/0/1
user@PE2# set interface lo0.0 passive

```

## 6. Configure the VPN routing instances.

```

[edit routing-instances vpn1]
user@PE2# set instance-type vrf
user@PE2# set vrf-target target:203:100
user@PE2# set routing-options static route 203.0.113.1/24 discard

```

```

[edit routing-instances vpn2]
user@PE2# set instance-type vrf
user@PE2# set vrf-target target:203:101
user@PE2# set routing-options static route 203.0.113.2/24 discard

```

```

[edit routing-instances vpn3]
user@PE2# set instance-type vrf
user@PE2# set vrf-target target:203:103
user@PE2# set routing-options static route 203.0.113.3/24 discard

```

```

[edit routing-instances vpn4]
user@PE2# set instance-type vrf
user@PE2# set vrf-target target:203:104
user@PE2# set routing-options static route 203.0.113.4/24 discard

```

## 7. If you are done configuring the device, commit the configuration.

```

[edit]
user@PE2# commit

```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show routing-options**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@PE2# show interfaces
ge-1/0/0 {

```



```

unit 0 {
    description PE2-to-RR1;
    family inet {
        address 10.50.0.1/30;
    }
    family mpls;
}
}
ge-1/0/1 {
    unit 0 {
        description PE2-to-RR2;
        family inet {
            address 10.50.10.1/30;
        }
        family mpls;
    }
}
}

```

```

user@PE2# show protocols
bgp {
    group internal {
        type internal;
        local-address 10.255.168.42;
        family inet-vpn {
            unicast;
        }
        family route-target;
        neighbor 10.255.165.220;
        neighbor 10.255.165.28;
    }
}
ospf {
    area 0.0.0.0 {
        interface ge-1/0/0.0;
        interface ge-1/0/1.0;
        interface lo0.0 {
            passive;
        }
    }
}
ldp {
    interface ge-1/0/0.0;
    interface ge-1/0/1.0;
}

```



```
user@PE2# show routing-options
route-distinguisher-id 10.255.168.42;
autonomous-system 203;
```

```
user@PE2# show routing-instances
vpn1 {
  instance-type vrf;
  vrf-target target:203:100;
  routing-options {
    static {
      route 203.0.113.1/24 discard;
    }
  }
}
vpn2 {
  instance-type vrf;
  vrf-target target:203:101;
  routing-options {
    static {
      route 203.0.113.2/24 discard;
    }
  }
}
vpn3 {
  instance-type vrf;
  vrf-target target:203:103;
  routing-options {
    static {
      route 203.0.113.3/24 discard;
    }
  }
}
vpn4 {
  instance-type vrf;
  vrf-target target:203:104;
  routing-options {
    static {
      route 203.0.113.4/24 discard;
    }
  }
}
```



## Verification

Confirm that the configuration is working properly.

### Verifying the Proxy BGP Route Target Routes

#### Purpose

Verify that the proxy BGP route target routes are displayed in the `bgp.rtarget.0` table on Device RR1.

#### Action

From operational mode, enter the **show route table bgp.rtarget.0** command to display the proxy BGP route targets.

```
user@RR1# show route table bgp.rtarget.0
```

```
4 destinations, 6 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

203:203:100/96
    *[RTarget/5] 00:01:22
        Type Proxy
        for 10.255.163.58
        Local
    [BGP/170] 00:04:55, localpref 100, from 10.255.168.42
        AS path: I, validation-state: unverified
    > to 10.50.0.1 via ge-1/0/1

203:203:101/96
    *[RTarget/5] 00:01:22
        Type Proxy
        for 10.255.163.58
        Local
    [BGP/170] 00:04:55, localpref 100, from 10.255.168.42
        AS path: I, validation-state: unverified
    > to 10.50.0.1 via ge-1/0/1

203:203:103/96
    *[BGP/170] 00:04:55, localpref 100, from 10.255.168.42
        AS path: I, validation-state: unverified
    > to 10.50.0.1 via ge-1/0/1

203:203:104/96
    *[BGP/170] 00:04:55, localpref 100, from 10.255.168.42
        AS path: I, validation-state: unverified
    > to 10.50.0.1 via ge-1/0/1
```

## Meaning



Device RR1 is generating the proxy BGP route target routes on behalf of its peer Device PE1. The proxy BGP route target routes are identified with the protocol and preference [**RTarget/5**] and the route target type of **Proxy**.

## RELATED DOCUMENTATION

*Understanding Route Filters for Use in Routing Policy Match Conditions*

*Route Filter Match Conditions*

*Example: Configuring Policy Chains and Route Filters*

*Example: Configuring the MED Using Route Filters*

*Example: Configuring a Route Filter Policy to Specify Priority for Prefixes Learned Through OSPF*

# Configuring Routing Between PE and CE Routers

## IN THIS SECTION

- [Configuring Routing Between PE and CE Routers in Layer 3 VPNs | 181](#)
- [Configuring an OSPF Domain ID for a Layer 3 VPN | 192](#)
- [OSPFv2 Sham Links Overview | 199](#)
- [Example: Configuring OSPFv2 Sham Links | 201](#)
- [Configuring EBGMP Multihop Sessions Between PE and CE Routers in Layer 3 VPNs | 213](#)
- [Configuring an LDP-over-RSVP VPN Topology | 213](#)
- [Configuring an Application-Based Layer 3 VPN Topology | 234](#)

This topic provides information on how to configure routing on PE and CE routers \ in a Layer 3 VPN.



## Configuring Routing Between PE and CE Routers in Layer 3 VPNs

### IN THIS SECTION

- [Configuring BGP Between the PE and CE Routers | 181](#)
- [Configuring OSPF Between the PE and CE Routers | 182](#)
- [Configuring OSPF Sham Links for Layer 3 VPNs | 183](#)
- [Configuring an OSPF Domain ID | 186](#)
- [Configuring RIP Between the PE and CE Routers | 189](#)
- [Configuring Static Routes Between the PE and CE Routers | 191](#)

For the PE router to distribute VPN-related routes to and from connected CE routers, you must configure routing within the VPN routing instance. You can configure a routing protocol—BGP, OSPF, or RIP—or you can configure static routing. For the connection to each CE router, you can configure only one type of routing.

The following sections explain how to configure VPN routing between the PE and CE routers:

### Configuring BGP Between the PE and CE Routers

To configure BGP as the routing protocol between the PE and the CE routers, include the **bgp** statement:

```
bgp {  
  group group-name {  
    peer-as as-number;  
    neighbor ip-address;  
  }  
}
```

You can include this statement at the following hierarchy levels:

- **[edit routing-instances *routing-instance-name* protocols]**
- **[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols]**

**NOTE:** The **[edit logical-systems]** hierarchy level is not applicable in ACX Series routers.



Please be aware of the following limitations regarding configuring BGP for routing instances:

- In a VRF routing instance, do not configure the local autonomous system (AS) number using an AS number that is already in use by a remote BGP peer in a separate VRF routing instance. Doing so creates an autonomous system loop where all the routes received from this remote BGP peer are hidden.

You configure the local AS number using either the **autonomous-system** statement at the **[edit routing-instances *routing-instance-name* routing-options]** hierarchy level or the **local-as** statement at any of the following hierarchy levels:

- **[edit routing-instances *routing-instance-name* protocols bgp]**
- **[edit routing-instances *routing-instance-name* protocols bgp group *group-name*]**
- **[edit routing-instances *routing-instance-name* protocols bgp group *group-name* neighbor *address*]**

You configure the AS number for a BGP peer using the **peer-as** statement at the **[edit routing-instances *routing-instance-name* protocols bgp group *group-name*]** hierarchy level.

## Configuring OSPF Between the PE and CE Routers

### IN THIS SECTION

- [Configuring OSPF Version 2 Between the PE and CE Routers | 182](#)
- [Configuring OSPF Version 3 Between the PE and CE Routers | 183](#)

You can configure OSPF (version 2 or version 3) to distribute VPN-related routes between PE and CE routers.

The following sections describe how to configure OSPF as a routing protocol between the PE and the CE routers:

### Configuring OSPF Version 2 Between the PE and CE Routers

To configure OSPF version 2 as the routing protocol between a PE and CE router, include the **ospf** statement:

```
ospf {
  area area {
    interface interface-name;
  }
}
```



You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

### Configuring OSPF Version 3 Between the PE and CE Routers

To configure OSPF version 3 as the routing protocol between a PE and CE router, include the **ospf3** statement:

```
ospf3 {
  area area {
    interface interface-name;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

### Configuring OSPF Sham Links for Layer 3 VPNs

#### IN THIS SECTION

- [OSPF Sham Links Overview | 184](#)
- [Configuring OSPF Sham Links | 184](#)
- [OSPF Sham Links Example | 185](#)

When you configure OSPF between the PE and CE routers of a Layer 3 VPN, you can also configure OSPF sham links to compensate for issues related to OSPF intra-area links.



The following sections describe OSPF sham links and how to configure them:


### OSPF Sham Links Overview

Figure 13 on page 184 provides an illustration of when you might configure an OSPF sham link. Router CE1 and Router CE2 are located in the same OSPF area. These CE routers are linked together by a Layer 3 VPN over Router PE1 and Router PE2. In addition, Router CE1 and Router CE2 are connected by an intra-area link used as a backup.

OSPF treats the link through the Layer 3 VPN as an interarea link. By default, OSPF prefers intra-area links to interarea links, so OSPF selects the backup intra-area link as the active path. This is not acceptable in configurations where the intra-area link is not the expected primary path for traffic between the CE routers.

An OSPF sham link is also an intra-area link, except that it is configured between the PE routers as shown in Figure 13 on page 184. You can configure the metric for the sham link to ensure that the path over the Layer 3 VPN is preferred to a backup path over an intra-area link connecting the CE routers.

Figure 13: OSPF Sham Link

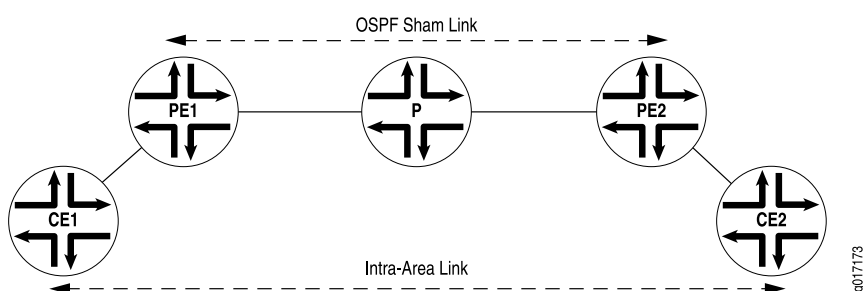

You should configure an OSPF sham link under the following circumstances:

- Two CE routers are linked together by a Layer 3 VPN.
- These CE routers are in the same OSPF area.
- An intra-area link is configured between the two CE routers.

If there is no intra-area link between the CE routers, you do not need to configure an OSPF sham link.

For more information about OSPF sham links, see the Internet draft draft-ietf-l3vpn-ospf-2547-01.txt, *OSPF as the PE/CE Protocol in BGP/MPLS VPNs*.

### Configuring OSPF Sham Links

The sham link is an unnumbered point-to-point intra-area link and is advertised by means of a type 1 link-state advertisement (LSA). Sham links are valid only for routing instances and OSPF version 2.

Each sham link is identified by a combination of the local and remote sham link end-point address and the OSPF area to which it belongs. Sham links must be configured manually. You configure the sham link between two PE routers, both of which are within the same VRF routing instance.



You need to specify the address for the local end point of the sham link. This address is used as the source for the sham link packets and is also used by the remote PE router as the sham link remote end-point.

The OSPF sham link's local address must be specified with a loopback address for the local VPN. The route to this address must be propagated by BGP. Specify the address for the local end point using the **local** option of the **sham-link** statement:

```
sham-link {
  local address;
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols ospf]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols ospf]

The OSPF sham link's remote address must be specified with a loopback address for the remote VPN. The route to this address must be propagated by BGP. To specify the address for the remote end point, include the **sham-link-remote** statement:

```
sham-link-remote address <metric number>;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols ospf area *area-id*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols ospf area *area-id*]

Optionally, you can include the **metric** option to set a metric value for the remote end point. The metric value specifies the cost of using the link. Routes with lower total path metrics are preferred over those with higher path metrics.

You can configure a value from 1 through 65,535. The default value is 1.

### OSPF Sham Links Example

This example shows how to enable OSPF sham links on a PE router.

The following is the loopback interface configuration on the PE router. The address configured is for the local end point of the OSPF sham link:

```
[edit]
interfaces {
  lo0 {
    unit 1 {
```



```

        family inet {
            address 10.1.1.1/32;
        }
    }
}

```

The following is the routing instance configuration on the PE router, including the configuration for the OSPF sham link. The **sham-link local** statement is configured with the address for the local loopback interface:

```

[edit]
routing-instances {
    example-sham-links {
        instance-type vrf;
        interface e1-1/0/2.0;
        interface lo0.1;
        route-distinguisher 3:4;
        vrf-import vpn-red-import;
        vrf-export vpn-red-export;
        protocols {
            ospf {
                sham-link local 10.1.1.1;
                area 0.0.0.0 {
                    sham-link-remote 10.2.2.2 metric 1;
                    interface e1-1/0/2.0 metric 1;
                }
            }
        }
    }
}

```

## Configuring an OSPF Domain ID

For most OSPF configurations involving Layer 3 VPNs, you do not need to configure an OSPF domain ID. However, for a Layer 3 VPN connecting multiple OSPF domains, configuring OSPF domain IDs can help you control LSA translation (for Type 3 and Type 5 LSAs) between the OSPF domains and back-door paths. Each VPN routing and forwarding (VRF) table in a PE router associated with an OSPF instance is configured with the same OSPF domain ID. The default OSPF domain ID is the null value 0.0.0.0. As shown in [Table 8 on page 187](#), a route with a null domain ID is handled differently from a route without any domain ID at all.



Table 8: How a PE Router Redistributes and Advertises Routes

Route Received	Domain ID of the Route Received	Domain ID on the Receiving Router	Route Redistributed and Advertised As
Type 3 route	A.B.C.D	A.B.C.D	Type 3 LSA
Type 3 route	A.B.C.D	E.F.G.H	Type 5 LSA
Type 3 route	0.0.0.0	0.0.0.0	Type 3 LSA
Type 3 route	Null	0.0.0.0	Type 3 LSA
Type 3 route	Null	Null	Type 3 LSA
Type 3 route	0.0.0.0	Null	Type 3 LSA
Type 3 route	A.B.C.D	Null	Type 5 LSA
Type 3 route	Null	A.B.C.D	Type 3 LSA
Type 5 route	Not applicable	Not applicable	Type 5 LSA

You can configure an OSPF domain ID for both version 2 and version 3 of OSPF. The only difference in the configuration is that you include statements at the **[edit routing-instances routing-instance-name protocols ospf]** hierarchy level for OSPF version 2 and at the **[edit routing-instances routing-instance-name protocols ospf3]** hierarchy level for OSPF version 3. The configuration descriptions that follow present the OSPF version 2 statement only. However, the substatements are also valid for OSPF version 3.

To configure an OSPF domain ID, include the **domain-id** statement:

```
domain-id domain-id;
```

You can include this statement at the following hierarchy levels:

- **[edit routing-instances routing-instance-name protocols ospf]**
- **[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf]**

You can set a VPN tag for the OSPF external routes generated by the PE router to prevent looping. By default, this tag is automatically calculated and needs no configuration. However, you can configure the domain VPN tag for Type 5 LSAs explicitly by including the **domain-vpn-tag** statement:

```
no-domain-vpn-tag number;
```



You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols ospf]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols ospf]

The range is 1 through 4,294,967,295 ( $2^{32} - 1$ ). If you set VPN tags manually, you must set the same value for all PE routers in the VPN.

For an example of this type of configuration, see [“Configuring an OSPF Domain ID for a Layer 3 VPN” on page 192](#).

### **Hub-and-Spoke Layer 3 VPNs and OSPF Domain IDs**

The default behavior of an OSPF domain ID causes some problems for hub-and-spoke Layer 3 VPNs configured with OSPF between the hub PE router and the hub CE router when the routes are not aggregated. A hub-and-spoke configuration has a hub PE router with direct links to a hub CE router. The hub PE router receives Layer 3 BGP updates from the other remote spoke PE routers, and these are imported into the spoke routing instance. From the spoke routing instance, the OSPF LSAs are originated and sent to the hub CE router.

The hub CE router typically aggregates these routes, and then sends these newly originated LSAs back to the hub PE router. The hub PE router exports the BGP updates to the remote spoke PE routers containing the aggregated prefixes. However, if there are nonaggregated Type 3 summary LSAs or external LSAs, two issues arise with regard to how the hub PE router originates and sends LSAs to the hub CE router, and how the hub PE router processes LSAs received from the hub CE router:

- By default, all LSAs originated by the hub PE router in the spoke routing instance have the DN bit set. Also, all externally originated LSAs have the VPN route tag set. These settings help prevent routing loops. For Type 3 summary LSAs, routing loops are not a concern because the hub CE router, as an area border router (ABR), reoriginates the LSAs with the DN bit clear and sends them back to the hub PE router. However, the hub CE router does not reoriginate external LSAs, because they have an AS flooding scope.

You can originate the external LSAs (before sending them to the hub CE router) with the DN bit clear and the VPN route tag set to 0 by altering the hub PE router's routing instance configuration. To clear the DN bit and set the VPN route tag to zero on external LSAs originated by a PE router, configure 0 for the **domain-vpn-tag** statement at the [edit routing-instances *routing-instance-name* protocols ospf] hierarchy level. You should include this configuration in the routing instance on the hub PE router facing the hub CE router where the LSAs are sent. When the hub CE router receives external LSAs from the hub PE router and then forwards them back to the hub PE router, the hub PE router can use the LSAs in its OSPF route calculation.

- When LSAs flooded by the hub CE router arrive at the hub PE router's routing instance, the hub PE router, acting as an ABR, does not consider these LSAs in its OSPF route calculations, even though the LSAs do not have the DN bits set and the external LSAs do not have a VPN route tag set. The LSAs are assumed to be from a disjoint backbone area.



You can change the configuration of the PE router's routing instance to cause the PE router to act as a non-ABR by including the **disable** statement at the **[edit routing-instances routing-instance-name protocols ospf domain-id]** hierarchy level. You make this configuration change to the hub PE router that receives the LSAs from the hub CE router.

By making this configuration change, the PE router's routing instance acts as a non-ABR. The PE router then considers the LSAs arriving from the hub CE router as if they were coming from a contiguous nonbackbone area.

## Configuring RIP Between the PE and CE Routers

For a Layer 3 VPN, you can configure RIP on the PE router to learn the routes of the CE router or to propagate the routes of the PE router to the CE router. RIP routes learned from neighbors configured at any **[edit routing-instances]** hierarchy level are added to the routing instance's **inet** table (**instance\_name.inet.0**).

To configure RIP as the routing protocol between the PE and the CE router, include the **rip** statement:

```
rip {
  group group-name {
    export policy-names;
    neighbor interface-name;
  }
}
```

You can include this statement at the following hierarchy levels:

- **[edit routing-instances routing-instance-name protocols]**
- **[edit logical-systems logical-system-name routing-instances routing-instance-name protocols]**

**NOTE:** The **[edit logical-systems]** hierarchy level is not applicable in ACX Series routers.

By default, RIP does not advertise the routes it receives. To advertise routes from a PE router to a CE router, you need to configure an export policy on the PE router for RIP. For information about how to define policies for RIP, see *RIP Import Policy*.

To specify an export policy for RIP, include the **export** statement:

```
export [ policy-names ];
```



You can include this statement for RIP at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols rip group *group-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols rip group *group-name*]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

To install routes learned from a RIP routing instance into multiple routing tables, include the **rib-group** and **group** statements:

```
rib-group inet group-name;
group group-name {
  neighbor interface-name;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols]
- [edit routing-instances *routing-instance-name* protocols]
- [edit logical-systems *logical-system-name* protocols]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

To configure a routing table group, include the **rib-groups** statement:

```
rib-groups group-name;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.



To add a routing table to a routing table group, include the **import-rib** statement. The first routing table name specified under the **import-rib** statement must be the name of the routing table you are configuring. For more information about how to configure routing tables and routing table groups, see *Junos OS Routing Protocols Library*.

```
import-rib [ group-names ];
```

You can include this statement at the following hierarchy levels:

- [edit routing-options rib-groups *group-name*]
- [edit logical-systems *logical-system-name* routing-options rib-groups *group-name*]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

RIP instances are supported only for VRF instance types. You can configure multiple instances of RIP for VPN support only. You can use RIP in the customer edge-provider edge (CE-PE) environment to learn routes from the CE router and to propagate the PE router's instance routes in the CE router.

RIP routes learned from neighbors configured under any instance hierarchy are added to the instance's routing table, ***instance-name.inet.0***.

RIP does not support routing table groups; therefore, it cannot import routes into multiple tables as the OSPF or OSPFv3 protocol does.

## Configuring Static Routes Between the PE and CE Routers

You can configure static (nonchanging) routes between the PE and CE routers of a VPN routing instance. To configure a static route for a VPN, you need to configure it within the VPN routing instance configuration at the [edit routing-instances *routing-instance-name* routing-options] hierarchy level.

To configure a static route between the PE and the CE routers, include the **static** statement:

```
static {
  route destination-prefix {
    next-hop [ next-hops ];
    static-options;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* routing-options]



- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* routing-options]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

For more information about configuring routing protocols and static routes, see *Junos OS Routing Protocols Library*.

## Configuring an OSPF Domain ID for a Layer 3 VPN

### IN THIS SECTION

- Configuring Interfaces on Router PE1 | 193
- Configuring Routing Options on Router PE1 | 193
- Configuring Protocols on Router PE1 | 194
- Configuring Policy Options on Router PE1 | 195
- Configuring the Routing Instance on Router PE1 | 195
- Configuration Summary for Router PE1 | 196

This example illustrates how to configure an OSPF domain ID for a VPN by using OSPF as the routing protocol between the PE and CE routers. Routes from an OSPF domain need an OSPF domain ID when they are distributed in BGP as VPN-IPv4 routes in VPNs with multiple OSPF domains. In a VPN connecting multiple OSPF domains, the routes from one domain might overlap with the routes of another.


The domain ID that is configured in a routing instance identifies the OSPF domain and is used to identify the route origination. The domain ID that is configured on a community policy is used in setting exported routes.

For more information about OSPF domain IDs and Layer 3 VPNs, see [“Configuring Routing Between PE and CE Routers in Layer 3 VPNs” on page 181](#).

[Figure 14 on page 193](#) shows this example’s configuration topology. Only the configuration for Router PE1 is provided. The configuration for Router PE2 can be similar to the configuration for Router PE1. There are no special configuration requirements for the CE routers.



Figure 14: Example of a Configuration Using an OSPF Domain ID

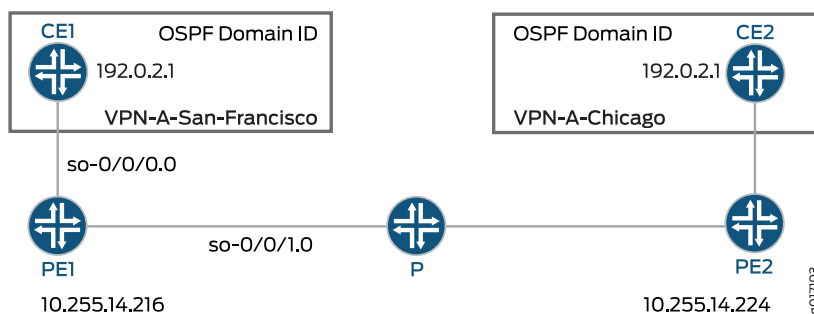

For configuration information, see the following sections:

### Configuring Interfaces on Router PE1

You need to configure two interfaces for Router PE1—the **so-0/0/0** interface for traffic to Router CE1 (San Francisco) and the **so-0/0/1** interface for traffic to a P router in the service provider's network.

Configure the interfaces for Router PE1:

```
[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        address 10.19.1.2/30;
      }
    }
  }
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.19.2.1/30;
      }
      family mpls;
    }
  }
}
```

### Configuring Routing Options on Router PE1

At the **[edit routing-options]** hierarchy level, you need to configure the **router-id** and **autonomous-system** statements. The **router-id** statement identifies Router PE1.



Configure the routing options for Router PE1:

```
[edit]
routing-options {
  router-id 10.255.14.216;
  autonomous-system 69;
}
```

## Configuring Protocols on Router PE1

On Router PE1, you need to configure MPLS, BGP, OSPF, and LDP at the **[edit protocols]** hierarchy level:

```
[edit]
protocols {
  mpls {
    interface so-0/0/1.0;
  }
  bgp {
    group San-Francisco-Chicago {
      type internal;
      preference 10;
      local-address 10.255.14.216;
      family inet-vpn {
        unicast;
      }
      neighbor 10.255.14.224;
    }
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface so-0/0/1.0;
    }
  }
  ldp {
    interface so-0/0/1.0;
  }
}
```



## Configuring Policy Options on Router PE1

On Router PE1, you need to configure policies at the **[edit policy-options]** hierarchy level. These policies ensure that the CE routers in the Layer 3 VPN exchange routing information. In this example, Router CE1 in San Francisco exchanges routing information with Router CE2 in Chicago.

Configure the policy options on the PE1 router:

```
[edit]
policy-options {
  policy-statement vpn-import-VPN-A {
    term term1 {
      from {
        protocol bgp;
        community import-target-VPN-A;
      }
      then accept;
    }
    term term2 {
      then reject;
    }
  }
  policy-statement vpn-export-VPN-A {
    term term1 {
      from protocol ospf;
      then {
        community add export-target-VPN-A;
        accept;
      }
    }
    term term2 {
      then reject;
    }
  }
  community export-target-VPN-A members [target:10.255.14.216:11
domain-id:192.0.2.1:0];
  community import-target-VPN-A members target:10.255.14.224:31;
}
```

## Configuring the Routing Instance on Router PE1

You need to configure a Layer 3 VPN routing instance on Router PE1. To indicate that the routing instance is for a Layer 3 VPN, add the **instance-type vrf** statement at the **[edit routing-instance routing-instance-name]** hierarchy level.



The **domain-id** statement is configured at the **[edit routing-instances routing-options protocols ospf]** hierarchy level. As shown in [Figure 14 on page 193](#), the routing instance on Router PE2 must share the same domain ID as the corresponding routing instance on Router PE1 so that routes from Router CE1 to Router CE2 and vice versa are distributed as Type 3 LSAs. If you configure different OSPF domain IDs in the routing instances for Router PE1 and Router PE2, the routes from each CE router will be distributed as Type 5 LSAs.

Configure the routing instance on Router PE1:

```
[edit]
routing-instances {
  VPN-A-San-Francisco-Chicago {
    instance-type vrf;
    interface so-0/0/0.0;
    route-distinguisher 10.255.14.216:11;
    vrf-import vpn-import-VPN-A;
    vrf-export vpn-export-VPN-A;
    routing-options {
      router-id 10.255.14.216;
      autonomous-system 69;
    }
    protocols {
      ospf {
        domain-id 192.0.2.1;
        export vpn-import-VPN-A;
        area 0.0.0.0 {
          interface so-0/0/0.0;
        }
      }
    }
  }
}
```

## Configuration Summary for Router PE1

### Configure Interfaces

```
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
```



```

        address 10.19.1.2/30;
    }
}
so-0/0/1 {
    unit 0 {
        family inet {
            address 10.19.2.1/30;
        }
        family mpls;
    }
}
}

```

### Configure Routing Options

```

routing-options {
    router-id 10.255.14.216;
    autonomous-system 69;
}

```

### Configure Protocols

```

protocols {
    mpls {
        interface so-0/0/0.0;
    }
    bgp {
        group San-Francisco-Chicago {
            type internal;
            preference 10;
            local-address 10.255.14.216;
            family inet-vpn {
                unicast;
            }
            neighbor 10.255.14.224;
        }
    }
}

```



```

}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface so-0/0/1.0;
  }
}
ldp {
  interface so-0/0/1.0;
}
}

```

### Configure VPN Policy

```

policy-options {
  policy-statement vpn-import-VPN-A {
    term term1 {
      from {
        protocol bgp;
        community import-target-VPN-A;
      }
      then accept;
    }
    term term2 {
      then reject;
    }
  }
  policy-statement vpn-export-VPN-A {
    term term1 {
      from protocol ospf;
      then {
        community add export-target-VPN-A;
        accept;
      }
    }
    term term2 {
      then reject;
    }
  }
  community export-target-VPN-B members [ target:10.255.14.216:11domain-id:192.0.2.1:0 ];
}

```



```
community import-target-VPN-B members target:10.255.14.224:31;
}
```

### Routing Instance for Layer 3 VPN

```
routing-instances {
  VPN-A-San-Francisco-Chicago {
    instance-type vrf;
    interface so-0/0/0.0;
    route-distinguisher 10.255.14.216:11;
    vrf-import vpn-import-VPN-A;
    vrf-export vpn-export-VPN-A;
    routing-options {
      router-id 10.255.14.216;
      autonomous-system 69;
    }
    protocols {
      ospf {
        domain-id 192.0.2.1;
        export vpn-import-VPN-A;
        area 0.0.0.0 {
          interface so-0/0/0.0;
        }
      }
    }
  }
}
```

## OSPFv2 Sham Links Overview

You can create an intra-area link or sham link between two provider edge (PE) routing devices so that the VPN backbone is preferred over the back-door link. A back-door link is a backup link that connects customer edge (CE) devices in case the VPN backbone is unavailable. When such a backup link is available and the CE devices are in the same OSPF area, the default behavior is to prefer this backup link over the VPN backbone. This is because the backup link is considered an intra-area link, while the VPN backbone is always considered an interarea link. Intra-area links are always preferred over interarea links.




The sham link is an unnumbered point-to-point intra-area link between PE devices. When the VPN backbone has a sham intra-area link, this sham link can be preferred over the backup link if the sham link has a lower OSPF metric than the backup link.

The sham link is advertised using Type 1 link-state advertisements (LSAs). Sham links are valid only for routing instances and OSPFv2.

Each sham link is identified by the combination of a local endpoint address and a remote endpoint address. [Figure 15 on page 200](#) shows an OSPFv2 sham link. Router CE1 and Router CE2 are located in the same OSPFv2 area. These customer edge (CE) routing devices are linked together by a Layer 3 VPN over Router PE1 and Router PE2. In addition, Router CE1 and Router CE2 are connected by an intra-area link used as a backup.

**Figure 15: OSPFv2 Sham Link**

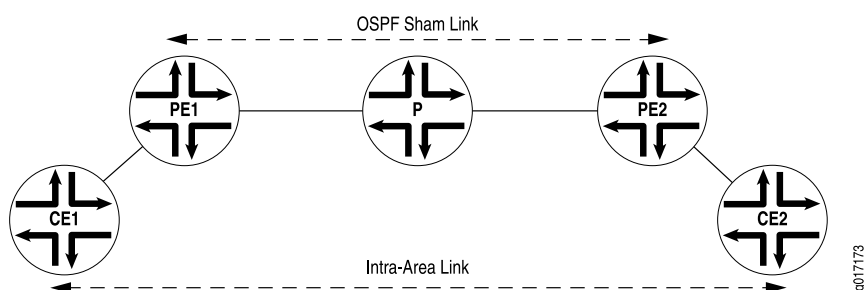

OSPFv2 treats the link through the Layer 3 VPN as an interarea link. By default, OSPFv2 prefers intra-area links to interarea links, so OSPFv2 selects the backup intra-area link as the active path. This is not acceptable in a configuration where the intra-area link is not the expected primary path for traffic between the CE routing devices. You can configure the metric for the sham link to ensure that the path over the Layer 3 VPN is preferred to a backup path over an intra-area link connecting the CE routing devices.

For the remote endpoint, you can configure the OSPFv2 interface as a demand circuit, configure IPsec authentication (you configure the actual IPsec authentication separately), and define the metric value.

You should configure an OSPFv2 sham link under the following circumstances:

- Two CE routing devices are linked together by a Layer 3 VPN.
- These CE routing devices are in the same OSPFv2 area.
- An intra-area link is configured between the two CE routing devices.

If there is no intra-area link between the CE routing devices, you do not need to configure an OSPFv2 sham link.



**NOTE:** In Junos OS Release 9.6 and later, an OSPFv2 sham link is installed in the routing table as a hidden route. Additionally, a BGP route is not exported to OSPFv2 if a corresponding OSPF sham link is available.

**NOTE:** In Junos OS Release 16.1 and later, OSPF sham-links are supported on default instances. The cost of the sham-link is dynamically set to the aigp-metric of the BGP route if no metric is configured on the sham-link by the user. If the aigp-metric is not present in the BGP route then the sham-link cost defaults to 1.

## Example: Configuring OSPFv2 Sham Links

### IN THIS SECTION

- [Requirements | 201](#)
- [Overview | 201](#)
- [Configuration | 202](#)
- [Verification | 210](#)

This example shows how to enable OSPFv2 sham links on a PE routing device.

### Requirements

No special configuration beyond device initialization is required before configuring this example.

### Overview

The sham link is an unnumbered point-to-point intra-area link and is advertised by means of a type 1 link-state advertisement (LSA). Sham links are valid only for routing instances and OSPFv2.

Each sham link is identified by a combination of the local endpoint address and a remote endpoint address and the OSPFv2 area to which it belongs. You manually configure the sham link between two PE devices, both of which are within the same VPN routing and forwarding (VRF) routing instance, and you specify




the address for the local end point of the sham link. This address is used as the source for the sham link packets and is also used by the remote PE routing device as the sham link remote end point. You can also include the optional **metric** option to set a metric value for the remote end point. The metric value specifies the cost of using the link. Routes with lower total path metrics are preferred over those with higher path metrics.

To enable OSPFv2 sham links on a PE routing device:

- Configure an extra loopback interface on the PE routing device.
- Configure the VRF routing instance that supports Layer 3 VPNs on the PE routing device, and associate the sham link with an existing OSPF area. The OSPFv2 sham link configuration is also included in the routing instance. You configure the sham link's local endpoint address, which is the loopback address of the local VPN, and the remote endpoint address, which is the loopback address of the remote VPN. In this example, the VRF routing instance is named red.

Figure 16 on page 202 shows an OSPFv2 sham link.

Figure 16: OSPFv2 Sham Link Example

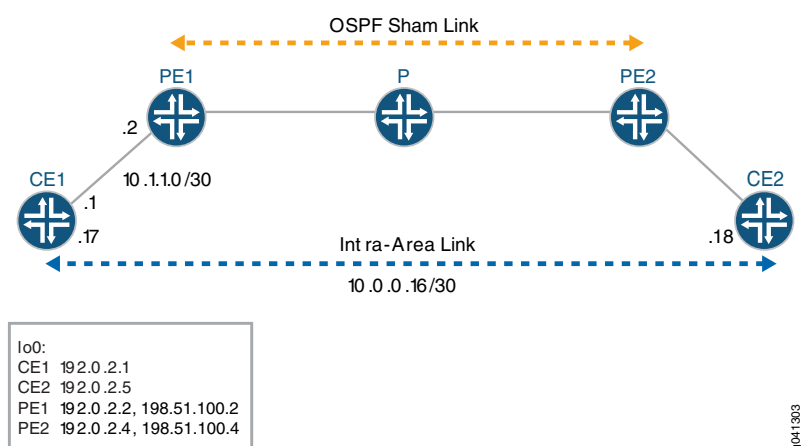

The devices in the figure represent the following functions:

- CE1 and CE2 are the customer edge devices.
- PE1 and PE2 are the provider edge devices.
- P is the provider device.

"CLI Quick Configuration" on page 202 shows the configuration for all of the devices in Figure 16 on page 202. The section "Step-by-Step Procedure" on page 205 describes the steps on Device PE1.

## Configuration

### CLI Quick Configuration



To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### CE1

```
set interfaces fe-1/2/0 unit 0 family inet address 10.1.1.1/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 10.0.0.17/30
set interfaces lo0 unit 0 family inet address 192.0.2.1/24
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface fe-1/2/1.0 metric 100
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept
set routing-options router-id 192.0.2.1
set routing-options autonomous-system 1
```

#### PE1

```
set interfaces fe-1/2/0 unit 0 family inet address 10.1.1.2/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 10.1.1.5/30
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.2/24
set interfaces lo0 unit 1 family inet address 198.51.100.2/24
set protocols mpls interface fe-1/2/1.0
set protocols bgp group toR4 type internal
set protocols bgp group toR4 local-address 192.0.2.2
set protocols bgp group toR4 family inet-vpn unicast
set protocols bgp group toR4 neighbor 192.0.2.4
set protocols ospf area 0.0.0.0 interface fe-1/2/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface fe-1/2/1.0
set protocols ldp interface lo0.0
set policy-options policy-statement bgp-to-ospf term 1 from protocol bgp
set policy-options policy-statement bgp-to-ospf term 1 then accept
set policy-options policy-statement bgp-to-ospf term 2 then reject
set routing-instances red instance-type vrf
set routing-instances red interface fe-1/2/0.0
```



```

set routing-instances red interface lo0.1
set routing-instances red route-distinguisher 2:1
set routing-instances red vrf-target target:2:1
set routing-instances red protocols ospf export bgp-to-ospf
set routing-instances red protocols ospf sham-link local 198.51.100.2
set routing-instances red protocols ospf area 0.0.0.0 sham-link-remote 198.51.100.4 metric 10
set routing-instances red protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set routing-instances red protocols ospf area 0.0.0.0 interface lo0.1
set routing-options router-id 192.0.2.2
set routing-options autonomous-system 2

```

## P

```

set interfaces fe-1/2/0 unit 0 family inet address 10.1.1.6/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 10.1.1.9/30
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 3 family inet address 192.0.2.3/24
set protocols mpls interface all
set protocols ospf area 0.0.0.0 interface lo0.3 passive
set protocols ospf area 0.0.0.0 interface all
set protocols ldp interface all
set routing-options router-id 192.0.2.3

```

## PE2

```

set interfaces fe-1/2/0 unit 0 family inet address 10.1.1.10/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 10.1.1.13/30
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.4/32
set interfaces lo0 unit 1 family inet address 198.51.100.4/32
set protocols mpls interface fe-1/2/0.0
set protocols bgp group toR2 type internal
set protocols bgp group toR2 local-address 192.0.2.4
set protocols bgp group toR2 family inet-vpn unicast
set protocols bgp group toR2 neighbor 192.0.2.2

```



```

set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ldp interface fe-1/2/0.0
set protocols ldp interface lo0.0
set policy-options policy-statement bgp-to-ospf term 1 from protocol bgp
set policy-options policy-statement bgp-to-ospf term 1 then accept
set policy-options policy-statement bgp-to-ospf term 2 then reject
set routing-instances red instance-type vrf
set routing-instances red interface fe-1/2/1.0
set routing-instances red interface lo0.1
set routing-instances red route-distinguisher 2:1
set routing-instances red vrf-target target:2:1
set routing-instances red protocols ospf export bgp-to-ospf
set routing-instances red protocols ospf sham-link local 198.51.100.4
set routing-instances red protocols ospf area 0.0.0.0 sham-link-remote 198.51.100.2 metric 10
set routing-instances red protocols ospf area 0.0.0.0 interface fe-1/2/1.0
set routing-instances red protocols ospf area 0.0.0.0 interface lo0.1
set routing-options router-id 192.0.2.4
set routing-options autonomous-system 2

```

## CE2

```

set interfaces fe-1/2/0 unit 14 family inet address 10.1.1.14/30
set interfaces fe-1/2/0 unit 14 family mpls
set interfaces fe-1/2/0 unit 18 family inet address 10.0.0.18/30
set interfaces lo0 unit 5 family inet address 192.0.2.5/24
set protocols ospf area 0.0.0.0 interface fe-1/2/0.14
set protocols ospf area 0.0.0.0 interface lo0.5 passive
set protocols ospf area 0.0.0.0 interface fe-1/2/0.18
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept
set routing-options router-id 192.0.2.5
set routing-options autonomous-system 3

```

## Step-by-Step Procedure



The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Modifying the Junos OS Configuration* in *CLI User Guide*.

To configure OSPFv2 sham links on each PE device:

1. Configure the interfaces, including two loopback interfaces.

```
[edit interfaces]
user@PE1# set fe-1/2/0 unit 0 family inet address 10.1.1.2/30
user@PE1# set fe-1/2/0 unit 0 family mpls
user@PE1# set fe-1/2/1 unit 0 family inet address 10.1.1.5/30
user@PE1# set fe-1/2/1 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 192.0.2.2/24
user@PE1# set lo0 unit 1 family inet address 198.51.100.2/24
```

2. Configure MPLS on the core-facing interface.

```
[edit protocols mpls]
user@PE1# set interface fe-1/2/1.0
```

3. Configure internal BGP (IBGP).

```
[edit ]
user@PE1# set protocols bgp group toR4 type internal
user@PE1# set protocols bgp group toR4 local-address 192.0.2.2
user@PE1# set protocols bgp group toR4 family inet-vpn unicast
user@PE1# set protocols bgp group toR4 neighbor 192.0.2.4
```

4. Configure OSPF on the core-facing interface and on the loopback interface that is being used in the main instance.

```
[edit protocols ospf area 0.0.0.0]
user@PE1# set interface fe-1/2/1.0
user@PE1# set interface lo0.0 passive
```

5. Configure LDP or RSVP on the core-facing interface and on the loopback interface that is being used in the main instance.

```
[edit protocols ldp]
user@PE1# set interface fe-1/2/1.0
user@PE1# set interface lo0.0
```



6. Configure a routing policy for use in the routing instance.

```
[edit policy-options policy-statement bgp-to-ospf]
user@PE1# set term 1 from protocol bgp
user@PE1# set term 1 then accept
user@PE1# set term 2 then reject
```

7. Configure the routing instance.

```
[edit routing-instances red]
user@PE1# set instance-type vrf
user@PE1# set interface fe-1/2/0.0
user@PE1# set route-distinguisher 2:1
user@PE1# set vrf-target target:2:1
user@PE1# set protocols ospf export bgp-to-ospf
user@PE1# set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
```

8. Configure the OSPFv2 sham link.

Include the extra loopback interface in the routing instance and also in the OSPF configuration.

Notice that the metric on the sham-link interface is set to 10. On Device CE1's backup OSPF link, the metric is set to 100. This causes the sham link to be the preferred link.

```
[edit routing-instances red]
user@PE1# set interface lo0.1
user@PE1# set protocols ospf sham-link local 198.51.100.2
user@PE1# set protocols ospf area 0.0.0.0 sham-link-remote 198.51.100.4 metric 10
user@PE1# set protocols ospf area 0.0.0.0 interface lo0.1
```

9. Configure the autonomous system (AS) number and the router ID.

```
[edit routing-options]
user@PE1# set router-id 192.0.2.2
user@PE1# set autonomous-system 2
```

10. If you are done configuring the device, commit the configuration.

```
[edit]
user@R1# commit
```



## Results

Confirm your configuration by entering the **show interfaces** and the **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

Output for PE1:

```
user@PE1# show interfaces
fe-1/2/0 {
  unit 0{
    family inet {
      address 10.1.1.2/30;
    }
    family mpls;
  }
}
fe-1/2/1 {
  unit 0 {
    family inet {
      address 10.1.1.5/30;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.2/24;
    }
  }
  unit 1 {
    family inet {
      address 198.51.100.2/24;
    }
  }
}
```

```
user@PE1# show protocols
mpls {
  interface fe-1/2/1.0;
}
bgp {
  group toR4 {
    type internal;
```



```

    local-address 192.0.2.2;
    family inet-vpn {
        unicast;
    }
    neighbor 192.0.2.4;
}
}
ospf {
    area 0.0.0.0 {
        interface fe-1/2/1.0;
        interface lo0.0 {
            passive;
        }
    }
}
ldp {
    interface fe-1/2/1.0;
    interface lo0.0;
}

```

**user@PE1# show policy-options**

```

policy-statement bgp-to-ospf {
    term 1 {
        from protocol bgp;
        then accept;
    }
    term 2 {
        then reject;
    }
}

```

**user@PE1# show routing-instances**

```

red {
    instance-type vrf;
    interface fe-1/2/0.0;
    interface lo0.1;
    route-distinguisher 2:1;
    vrf-target target:2:1;
    protocols {
        ospf {
            export bgp-to-ospf;
            sham-link local 198.51.100.2;
            area 0.0.0.0 {

```



```

        sham-link-remote 198.51.100.4 metric 10;
    interface fe-1/2/0.0;
    interface lo0.1;
    }
}
}
}

```

```

user@PE1# show routing-options
router-id 192.0.2.2;
autonomous-system 2;

```

## Verification

### IN THIS SECTION

- [Verifying the Sham Link Interfaces | 210](#)
- [Verifying the Local and Remote End Points of the Sham Link | 211](#)
- [Verifying the Sham Link Adjacencies | 211](#)
- [Verifying the Link-State Advertisement | 212](#)
- [Verifying the Path Selection | 212](#)

Confirm that the configuration is working properly.

### *Verifying the Sham Link Interfaces*

#### Purpose

Verify the sham link interface. The sham link is treated as an interface in OSPFv2, with the name displayed as **shamlink.<unique identifier>**, where the unique identifier is a number. For example, **shamlink.0**. The sham link appears as a point-to-point interface.

#### Action

From operational mode, enter the **show ospf interface instance *instance-name*** command.

```
user@PE1> show ospf interface instance red
```



Interface	State	Area	DR ID	BDR ID	Nbrs
lo0.1	DR	0.0.0.0	198.51.100.2	0.0.0.0	
0					
fe-1/2/0.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	1
<b>shamlink.0</b>	<b>PtToPt</b>	<b>0.0.0.0</b>	<b>0.0.0.0</b>	<b>0.0.0.0</b>	<b>1</b>

### Verifying the Local and Remote End Points of the Sham Link

#### Purpose

Verify the local and remote end points of the sham link. The MTU for the sham link interface is always zero.

#### Action

From operational mode, enter the **show ospf interface instance *instance-name* detail** command.

```
user@PE1> show ospf interface shamlink.0 instance red
```

Interface	State	Area	DR ID	BDR ID	Nbrs
shamlink.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	1
Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 0, Cost: 10					
Local: 198.51.100.2, Remote: 198.51.100.4					
Adj count: 1					
Hello: 10, Dead: 40, ReXmit: 5, Not Stub					
Auth type: None					
Protection type: None, No eligible backup					
Topology default (ID 0) -> Cost: 10					

### Verifying the Sham Link Adjacencies

#### Purpose

Verify the adjacencies between the configured sham links.

#### Action

From operational mode, enter the **show ospf neighbor instance *instance-name*** command.

```
user@PE1> show ospf neighbor instance red
```

Address	Interface	State	ID	Pri	Dead
10.1.1.1	fe-1/2/0.0	Full	192.0.2.1	128	35
198.51.100.4	shamlink.0	Full	198.51.100.4		0
31					



## Verifying the Link-State Advertisement

### Purpose

Verify that the router LSA originated by the instance carries the sham link adjacency as an unnumbered point-to-point link. The link data for sham links is a number ranging from 0x80010000 through 0x8001ffff.

### Action

From operational mode, enter the **show ospf database instance *instance-name*** command.

```
user@PE1> show ospf database instance red
```

```

      OSPF database, Area 0.0.0.0
  Type      ID          Adv Rtr          Seq      Age  Opt  Cksum  Len
  Router    192.0.2.1    192.0.2.1        0x80000009 1803 0x22 0x6ec7 72
  Router    192.0.2.5    192.0.2.5        0x80000007  70 0x22 0x2746 72
  Router    *198.51.100.2 198.51.100.2      0x80000006  55 0x22 0xda6b
  60
  Router    198.51.100.4 198.51.100.4      0x80000005  63 0x22 0xb19
  60
  Network   10.0.0.18     192.0.2.5        0x80000002  70 0x22 0x9a71 32
      OSPF AS SCOPE link state database
  Type      ID          Adv Rtr          Seq      Age  Opt  Cksum  Len
  Extern    198.51.100.2    198.51.100.4      0x80000002  72 0xa2 0x343
  36
  Extern    *198.51.100.4    198.51.100.2      0x80000002  71 0xa2 0xe263
  36

```

## Verifying the Path Selection

### Purpose

Verify that the Layer 3 VPN path is used instead of the backup path.

### Action

From operational mode, enter the **traceroute** command from Device CE1 to Device CE2.

```
user@CE1> traceroute 192.0.2.5
```

```

traceroute to 192.0.2.5 (192.0.2.5), 30 hops max, 40 byte packets
 1  10.1.1.2 (10.1.1.2)  1.930 ms  1.664 ms  1.643 ms
 2  * * *
 3  10.1.1.10 (10.1.1.10)  2.485 ms  1.435 ms  1.422 ms

```



```
MPLS Label=299808 CoS=0 TTL=1 S=1
4 192.0.2.5 (192.0.2.5) 1.347 ms 1.362 ms 1.329 ms
```

### Meaning

The traceroute operation shows that the Layer 3 VPN is the preferred path. If you were to remove the sham link or if you were to modify the OSPF metric to prefer that backup path, the traceroute would show that the backup path is preferred.

## Configuring EBGp Multihop Sessions Between PE and CE Routers in Layer 3 VPNs

You can configure an EBGp or IBGP multihop session between the PE and CE routers of a Layer 3 VPN. This allows you to have one or more routers between the PE and CE routers. Using IBGP between PE and CE routers does not require the configuration of any additional statements. However, using EBGp between the PE and CE routers requires the configuration of the **multihop** statement.

To configure an external BGP multihop session for the connection between the PE and CE routers, include the **multihop** statement on the PE router. To help prevent routing loops, you have to configure a time-to-live (TTL) value for the multihop session:

```
multihop ttl-value;
```

For the list of hierarchy levels at which you can configure this statement, see the summary section for this statement.

## Configuring an LDP-over-RSVP VPN Topology

### IN THIS SECTION

- [Enabling an IGP on the PE and P Routers | 217](#)
- [Enabling LDP on the PE and P Routers | 217](#)
- [Enabling RSVP and MPLS on the P Router | 219](#)
- [Configuring the MPLS LSP Tunnel Between the P Routers | 219](#)
- [Configuring IBGP on the PE Routers | 220](#)
- [Configuring Routing Instances for VPNs on the PE Routers | 221](#)




- [Configuring VPN Policy on the PE Routers | 223](#)
- [LDP-over-RSVP VPN Configuration Summarized by Router | 225](#)

This example shows how to set up a VPN topology in which LDP packets are tunneled over an RSVP LSP. This configuration consists of the following components (see [Figure 17 on page 214](#)):

- One VPN (VPN-A)
- Two PE routers
- LDP as the signaling protocol between the PE routers and their adjacent P routers
- An RSVP LSP between two of the P routers over which LDP is tunneled

**Figure 17: Example of an LDP-over-RSVP VPN Topology**

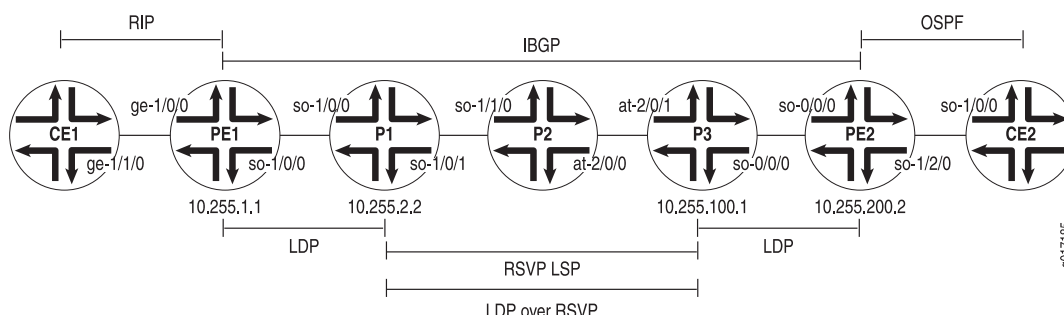

The following steps describe how this topology is established and how packets are sent from CE Router CE2 to CE Router CE1:

1. The P routers P1 and P3 establish RSVP LSPs between each other and install their loopback addresses in their inet.3 routing tables.
2. PE Router PE1 establishes an LDP session with Router P1 over interface **so-1/0/0.0**.
3. Router P1 establishes an LDP session with Router P3's loopback address, which is reachable using the RSVP LSP.
4. Router P1 sends its label bindings, which include a label to reach Router PE1, to Router P3. These label bindings allow Router P3 to direct LDP packets to Router PE1.
5. Router P3 establishes an LDP session with Router PE2 over interface **so0-0/0/0.0** and establishes an LDP session with Router P1's loopback address.



6. Router P3 sends its label bindings, which include a label to reach Router PE2, to Router P1. These label bindings allow Router P1 to direct LDP packets to Router PE2's loopback address.
7. Routers PE1 and PE2 establish IBGP sessions with each other.
8. When Router PE1 announces to Router PE2 routes that it learned from Router CE1, it includes its VPN label. (The PE router creates the VPN label and binds it to the interface between the PE and CE routers.) Similarly, when Router PE2 announces routes that it learned from Router CE2, it sends its VPN label to Router PE1.

When Router PE2 wants to forward a packet to Router CE1, it pushes two labels onto the packet's label stack: first the VPN label that is bound to the interface between Router PE1 and Router CE1, then the LDP label used to reach Router PE1. Then it forwards the packets to Router P3 over interface **so-0/0/1.0**.

1. When Router P3 receives the packets from Router PE2, it swaps the LDP label that is on top of the stack (according to its LDP database) and also pushes an RSVP label onto the top of the stack so that the packet can now be switched by the RSVP LSP. At this point, there are three labels on the stack: the inner (bottom) label is the VPN label, the middle is the LDP label, and the outer (top) is the RSVP label.
2. Router P2 receives the packet and switches it to Router P1 by swapping the RSVP label. In this topology, because Router P2 is the penultimate-hop router in the LSP, it pops the RSVP label and forwards the packet over interface **so-1/1/0.0** to Router P1. At this point, there are two labels on the stack: The inner label is the VPN label, and the outer one is the LDP label.
3. When Router P1 receives the packet, it pops the outer label (the LDP label) and forwards the packet to Router PE1 using interface **so-1/0/0.0**. In this topology, Router PE1 is the egress LDP router, so Router P1 pops the LDP label instead of swapping it with another label. At this point, there is only one label on the stack, the VPN label.
4. When Router PE1 receives the packet, it pops the VPN label and forwards the packet as an IPv4 packet to Router CE1 over interface **ge-1/1/0.0**.

A similar set of operations occurs for packets sent from Router CE1 that are destined for Router CE2.


The following list explains how, for packets being sent from Router CE2 to Router CE1, the LDP, RSVP, and VPN labels are announced by the various routers. These steps include examples of label values (illustrated in [Figure 18 on page 216](#)).

- LDP labels
  - Router PE1 announces LDP label 3 for itself to Router P1.
  - Router P1 announces LDP label 100,001 for Router PE1 to Router P3.
  - Router P3 announces LDP label 100,002 for Router PE1 to Router PE2.
- RSVP labels



- Router P1 announces RSVP label 3 to Router P2.
- Router P2 announces RSVP label 100,003 to Router P3.
- VPN label
  - Router PE1 announces VPN label 100,004 to Router PE2 for the route from Router CE1 to Router CE2.

Figure 18: Label Pushing and Popping

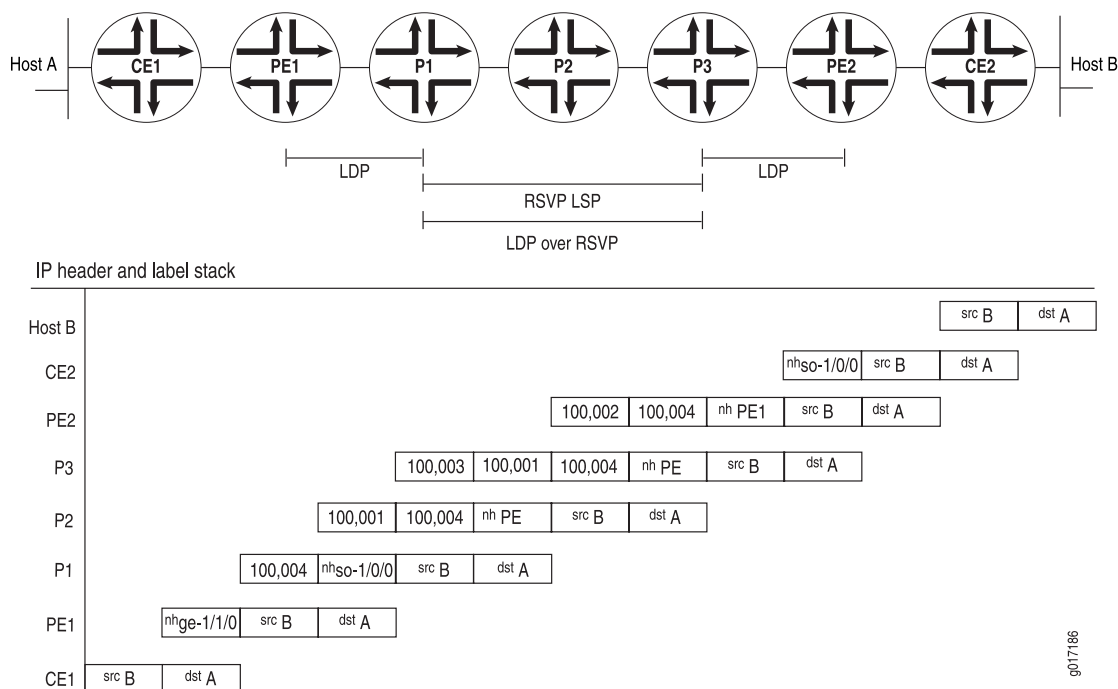

For a packet sent from Host B in [Figure 18 on page 216](#) to Host A, the packet headers and labels change as the packet travels to its destination:

1. The packet that originates from Host B has a source address of B and a destination address of A in its header.
2. Router CE2 adds to the packet a next hop of interface **so-1/0/0**.
3. Router PE2 swaps out the next hop of interface **so-1/0/0** and replaces it with a next hop of PE1. It also adds two labels for reaching Router PE1, first the VPN label (100,004), then the LDP label (100,002). The VPN label is thus the inner (bottom) label on the stack, and the LDP label is the outer label.
4. Router P3 swaps out the LDP label added by Router PE2 (100,002) and replaces it with its LDP label for reaching Router PE1 (100,001). It also adds the RSVP label for reaching Router P2 (100,003).
5. Router P2 removes the RSVP label (100,003) because it is the penultimate hop in the MPLS LSP.
6. Router P1 removes the LDP label (100,001) because it is the penultimate LDP router. It also swaps out the next hop of PE1 and replaces it with the next-hop interface, **so-1/0/0**.



7. Router PE1 removes the VPN label (100,004). It also swaps out the next-hop interface of **so-1/0/0** and replaces it with its next-hop interface, **ge-1/1/0**.
8. Router CE1 removes the next-hop interface of **ge-1/1/0**, and the packet header now contains just a source address of B and a destination address of A.

The final section in this example consolidates the statements needed to configure VPN functionality on each of the service P routers shown in [Figure 17 on page 214](#).

**NOTE:** In this example, a private AS number is used for the route distinguisher and the route target. This number is used for illustration only. When you are configuring VPNs, you should use an assigned AS number.

The following sections explain how to configure the VPN functionality on the PE and P routers. The CE routers do not have any information about the VPN, so you configure them normally.

### Enabling an IGP on the PE and P Routers

To allow the PE and P routers to exchange routing information among themselves, you must configure an IGP on all these routers or you must configure static routes. You configure the IGP on the master instance of the routing protocol process (rpd) (that is, at the **[edit protocols]** hierarchy level), not within the VPN routing instance (that is, not at the **[edit routing-instances]** hierarchy level).

You configure the IGP in the standard way. This configuration example does not include this portion of the configuration.

### Enabling LDP on the PE and P Routers

In this configuration example, the LDP is the signaling protocol between the PE routers. For the VPN to function, you must configure LDP on the two PE routers and on the P routers that are connected to the PE routers. You need to configure LDP only on the interfaces in the core of the service provider's network; that is, between the PE and P routers and between the P routers. You do not need to configure LDP on the interface between the PE and CE routers.

In this configuration example, you configure LDP on the P routers' loopback interfaces because these are the interfaces on which the MPLS LSP is configured.

On the PE routers, you must also configure **family inet** when you configure the logical interface.

On Router PE1, configure LDP:

```
[edit protocols]
ldp {
```



```

    interface so-1/0/0.0;
}
[edit interfaces]
so-1/0/0 {
    unit 0 {
        family mpls;
    }
}

```

On Router PE2, configure LDP:

```

[edit protocols]
ldp {
    interface so-0/0/0.0;
}
[edit interfaces]
so-0/0/1 {
    unit 0 {
        family mpls;
    }
}

```

On Router P1, configure LDP:

```

[edit protocols]
ldp {
    interface so-1/0/0.0;
    interface lo0;
}

```

On Router P3, configure LDP:

```

[edit protocols]
ldp {
    interface lo0;
    interface so-0/0/0.0;
}

```

On Router P2, although you do not need to configure LDP, you can optionally configure it to provide a fallback LDP path in case the RSVP LSP becomes nonoperational:

```

[edit protocols]

```



```
ldp {
  interface so-1/1/0.0;
  interface at-2/0/0.0;
}
```

## Enabling RSVP and MPLS on the P Router

On the P Router P2 you must configure RSVP and MPLS because this router exists on the MPLS LSP path between the P Routers P1 and P3:

```
[edit]
protocols {
  rsvp {
    interface so-1/1/0.0;
    interface at-2/0/0.0;
  }
  mpls {
    interface so-1/1/0.0;
    interface at-2/0/0.0;
  }
}
```

## Configuring the MPLS LSP Tunnel Between the P Routers

In this configuration example, LDP is tunneled over an RSVP LSP. Therefore, in addition to configuring RSVP, you must enable traffic engineering support in an IGP, and you must create an MPLS LSP to tunnel the LDP traffic.

On Router P1, enable RSVP and configure one end of the MPLS LSP tunnel. In this example, traffic engineering support is enabled for OSPF, and you configure MPLS on the interfaces to the LSP and to Router PE1. In the **to** statement, you specify the loopback address of Router P3.

```
[edit]
protocols {
  rsvp {
    interface so-1/0/1.0;
  }
  mpls {
    label-switched-path P1-to-P3 {
      to 10.255.100.1;
      ldp-tunneling;
    }
  }
}
```



```

    }
    interface so-1/0/0.0;
    interface so-1/0/1.0;
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface so-1/0/0.0;
      interface so-1/0/1.0;
    }
  }
}

```

On Router P3, enable RSVP and configure the other end of the MPLS LSP tunnel. Again, traffic engineering support is enabled for OSPF, and you configure MPLS on the interfaces to the LSP and to Router PE2. In the **to** statement, you specify the loopback address of Router P1.

```

[edit]
protocols {
  rsvp {
    interface at-2/0/1.0;
  }
  mpls {
    label-switched-path P3-to-P1 {
      to 10.255.2.2;
      ldp-tunneling;
    }
    interface at-2/0/1.0;
    interface so-0/0/0.0;
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface at-2/0/1.0;
      interface so-0/0/0.0;
    }
  }
}

```

## Configuring IBGP on the PE Routers

On the PE routers, configure an IBGP session with the following properties:

- VPN family—To indicate that the IBGP session is for the VPN, include the **family inet-vpn** statement.



- Loopback address—Include the **local-address** statement, specifying the local PE router's loopback address. The IBGP session for VPNs runs through the loopback address. You must also configure the **lo0** interface at the **[edit interfaces]** hierarchy level. The example does not include this part of the router's configuration.
- Neighbor address—Include the **neighbor** statement, specifying the IP address of the neighboring PE router, which is its loopback (**lo0**) address.

On Router PE1, configure IBGP:

```
[edit]
protocols {
  bgp {
    group PE1-to-PE2 {
      type internal;
      local-address 10.255.1.1;
      family inet-vpn {
        unicast;
      }
      neighbor 10.255.200.2;
    }
  }
}
```

On Router PE2, configure IBGP:

```
[edit]
protocols {
  bgp {
    group PE2-to-PE1 {
      type internal;
      local-address 10.255.200.2;
      family inet-vpn {
        unicast;
      }
      neighbor 10.255.1.1;
    }
  }
}
```

## Configuring Routing Instances for VPNs on the PE Routers

Both PE routers service VPN-A, so you must configure one routing instance on each router for the VPN in which you define the following:



- Route distinguisher, which must be unique for each routing instance on the PE router. It is used to distinguish the addresses in one VPN from those in another VPN.
- Instance type of **vrf**, which creates the VRF table on the PE router.
- Interfaces connected to the CE routers.
- VRF import and export policies, which must be the same on each PE router that services the same VPN. Unless the import policy contains only a **then reject** statement, it must include reference to a community. Otherwise, when you try to commit the configuration, the commit fails.

**NOTE:** In this example, a private AS number is used for the route distinguisher. This number is used for illustration only. When you are configuring VPNs, you should use an assigned AS number.

- Routing between the PE and CE routers, which is required for the PE router to distribute VPN-related routes to and from connected CE routers. You can configure a routing protocol—BGP, OSPF, or RIP—or you can configure static routing.

On Router PE1, configure the following routing instance for VPN-A. In this example, Router PE1 uses RIP to distribute routes to and from the CE router to which it is connected.

```
[edit]
routing-instance {
  VPN-A {
    instance-type vrf;
    interface ge-1/0/0.0;
    route-distinguisher 65535:0;
    vrf-import VPN-A-import;
    vrf-export VPN-A-export;
    protocols {
      rip {
        group PE1-to-CE1 {
          neighbor ge-1/0/0.0;
        }
      }
    }
  }
}
```

On Router PE2, configure the following routing instance for VPN-A. In this example, Router PE2 uses OSPF to distribute routes to and from the CE router to which it is connected.



```
[edit]
routing-instance {
  VPN-A {
    instance-type vrf;
    interface so-1/2/0.0;
    route-distinguisher 65535:1;
    vrf-import VPN-A-import;
    vrf-export VPN-A-export;
    protocols {
      ospf {
        area 0.0.0.0 {
          interface so-1/2/0.0;
        }
      }
    }
  }
}
```

## Configuring VPN Policy on the PE Routers

You must configure VPN import and export policies on each of the PE routers so that they install the appropriate routes in their VRF tables, which they use to forward packets within a VPN. For VPN-A, the VRF table is VPN-A.inet.0.

In the VPN policy, you also configure VPN target communities.

**NOTE:** In this example, a private AS number is used for the route target. This number is used for illustration only. When you are configuring VPNs, you should use an assigned AS number.

On Router PE1, configure the following VPN import and export policies:

**NOTE:** The policy qualifiers shown in this example are only those needed for the VPN to function. You can configure additional qualifiers, as needed, to any policies that you configure.

```
[edit]
policy-options {
  policy-statement VPN-A-import {
    term a {
```



```

        from {
            protocol bgp;
            community VPN-A;
        }
        then accept;
    }
    term b {
        then reject;
    }
}
policy-statement VPN-A-export {
    term a {
        from protocol rip;
        then {
            community add VPN-A;
            accept;
        }
    }
    term b {
        then reject;
    }
}
community VPN-A members target:65535:00;
}

```

On Router PE2, configure the following VPN import and export policies:

```

[edit]
policy-options {
    policy-statement VPN-A-import {
        term a {
            from {
                protocol bgp;
                community VPN-A;
            }
            then accept;
        }
        term b {
            then reject;
        }
    }
    policy-statement VPN-A-export {
        term a {
            from protocol ospf;

```



```

        then {
            community add VPN-A;
            accept;
        }
    }
    term b {
        then reject;
    }
}
community VPN-A members target:65535:00;
}

```

To apply the VPN policies on the routers, include the **vrf-export** and **vrf-import** statements when you configure the routing instance on the PE routers. The VRF import and export policies handle the route distribution across the IBGP session running between the PE routers.

## LDP-over-RSVP VPN Configuration Summarized by Router

### *Router PE1*

#### Routing Instance for VPN-A

```

routing-instance {
    VPN-A {
        instance-type vrf;
        interface ge-1/0/0.0;
        route-distinguisher 65535:0;
        vrf-import VPN-A-import;
        vrf-export VPN-A-export;
    }
}

```

#### Instance Routing Protocol

```

protocols {
    rip {
        group PE1-to-CE1 {
            neighbor ge-1/0/0.0;
        }
    }
}

```



```
    }
}
```

## Interfaces

```
interfaces {
  so-1/0/0 {
    unit 0 {
      family mpls;
    }
  }
  ge-1/0/0 {
    unit 0;
  }
}
```

## Master Protocol Instance

```
protocols {
}
```

## Enable LDP

```
ldp {
  interface so-1/0/0.0;
}
```

## Enable MPLS

```
mpls {
  interface so-1/0/0.0;
  interface ge-1/0/0.0;
```



```
}
```

### Configure IBGP

```
bgp {
  group PE1-to-PE2 {
    type internal;
    local-address 10.255.1.1;
    family inet-vpn {
      unicast;
    }
    neighbor 10.255.100.1;
  }
}
```

### Configure VPN Policy

```
policy-options {
  policy-statement VPN-A-import {
    term a {
      from {
        protocol bgp;
        community VPN-A;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
  policy-statement VPN-A-export {
    term a {
      from protocol rip;
      then {
        community add VPN-A;
        accept;
      }
    }
  }
}
```



```

    }
    term b {
        then reject;
    }
}
community VPN-A members target:65535:00;
}

```

### **Router P1**

#### **Master Protocol Instance**

```

protocols {
}

```

#### **Enable RSVP**

```

rsvp {
    interface so-1/0/1.0;
}

```

#### **Enable LDP**

```

ldp {
    interface so-1/0/0.0;
    interface lo0.0;
}

```

#### **Enable MPLS**

```

mpls {
    label-switched-path P1-to-P3 {

```



```

        to 10.255.100.1;
        ldp-tunneling;
    }
    interface so-1/0/0.0;
    interface so-1/0/1.0;
}

```

### Configure OSPF for Traffic Engineering Support

```

ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface so-1/0/0.0;
        interface so-1/0/1.0;
    }
}

```

### Router P2

#### Master Protocol Instance

```

protocols {
}

```

#### Enable RSVP

```

rsvp {
    interface so-1/1/0.0;
    interface at-2/0/0.0;
}

```

#### Enable MPLS



```
mpls {  
  interface so-1/1/0.0;  
  interface at-2/0/0.0;  
}
```

### **Router P3**

#### **Master Protocol Instance**

```
protocols {  
}
```

#### **Enable RSVP**

```
rsvp {  
  interface at-2/0/1.0;  
}
```

#### **Enable LDP**

```
ldp {  
  interface so-0/0/0.0;  
  interface lo0.0;  
}
```

#### **Enable MPLS**

```
mpls {  
  label-switched-path P3-to-P1 {  
    to 10.255.2.2;  
    ldp-tunneling;  
  }  
}
```



```

interface at-2/0/1.0;
interface so-0/0/0.0;
}

```

### Configure OSPF for Traffic Engineering Support

```

ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface at-2/0/1.0;
    interface at-2/0/1.0;
  }
}

```

### Router PE2

#### Routing Instance for VPN-A

```

routing-instance {
  VPN-A {
    instance-type vrf;
    interface so-1/2/0.0;
    route-distinguisher 65535:1;
    vrf-import VPN-A-import;
    vrf-export VPN-A-export;
  }
}

```

#### Instance Routing Protocol

```

protocols {
  ospf {
    area 0.0.0.0 {
      interface so-1/2/0.0;
    }
  }
}

```



```

    }
  }
}

```

## Interfaces

```

interfaces {
  so-0/0/0 {
    unit 0 {
      family mpls;
    }
  }
  so-1/2/0 {
    unit 0;
  }
}

```

## Master Protocol Instance

```

protocols {
}

```

## Enable LDP

```

ldp {
  interface so-0/0/0.0;
}

```

## Enable MPLS

```

mpls {
  interface so-0/0/0.0;
}

```



```

interface so-1/2/0.0;
}

```

### Configure IBGP

```

bgp {
  group PE2-to-PE1 {
    type internal;
    local-address 10.255.200.2;
    family inet-vpn {
      unicast;
    }
    neighbor 10.255.1.1;
  }
}

```

### Configure VPN Policy

```

policy-options {
  policy-statement VPN-A-import {
    term a {
      from {
        protocol bgp;
        community VPN-A;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
  policy-statement VPN-A-export {
    term a {
      from protocol ospf;
      then {
        community add VPN-A;
        accept;
      }
    }
  }
}

```



```

    }
  }
  term b {
    then reject;
  }
}
community VPN-A members target:65535:01;
}

```

## Configuring an Application-Based Layer 3 VPN Topology

### IN THIS SECTION

- [Configuration on Router A | 235](#)
- [Configuration on Router E | 238](#)
- [Configuration on Router F | 238](#)

This example illustrates an application-based mechanism for forwarding traffic into a Layer 3 VPN. Typically, one or more interfaces are associated with, or bound to, a VPN by including them in the configuration of the VPN routing instance. By binding the interface to the VPN, the VPN's VRF table is used to make forwarding decisions for any incoming traffic on that interface. Binding the interface also includes the interface local routes in the VRF table, which provides next-hop resolution for VRF routes.

In this example, a firewall filter is used to define which incoming traffic on an interface is forwarded by means of the standard routing table, `inet.0`, and which incoming traffic is forwarded by means of the VRF table. You can expand this example such that incoming traffic on an interface can be redirected to one or more VPNs. For example, you can define a configuration to support a VPN that forwards traffic based on source address, that forwards Hypertext Transfer Protocol (HTTP) traffic, or that forwards only streaming media.

For this configuration to work, the following conditions must be true:

- The interfaces that use filter-based forwarding must not be bound to the VPN.
- Static routing must be used as the means of routing.



- You must define an interface routing table group that is shared among inet.0 and the VRF tables to provide local routes to the VRF table.

This example consists of two client hosts (Client D and Client E) that are in two different VPNs and that want to send traffic both within the VPN and to the Internet. The paths are defined as follows:


- Client A sends traffic to Client E over VPN A with a return path that also uses VPN A (using the VPN's VRF table).
- Client B sends traffic to Client D over VPN B with a return path that uses standard destination-based routing (using the inet.0 routing table).
- Clients B and C send traffic to the Internet using standard routing (using the inet.0 routing table), with a return path that also uses standard routing.

This example illustrates that there are a large variety of options in configuring an application-based Layer 3 VPN topology. This flexibility has application in many network implementations that require specific traffic to be forwarded in a constrained routing environment.

This configuration example shows only the portions of the configuration for the filter-based forwarding, routing instances, and policy. It does not illustrate how to configure a Layer 3 VPN.

Figure 19 on page 235 illustrates the network topology used in this example.

**Figure 19: Application-Based Layer 3 VPN Example Configuration**

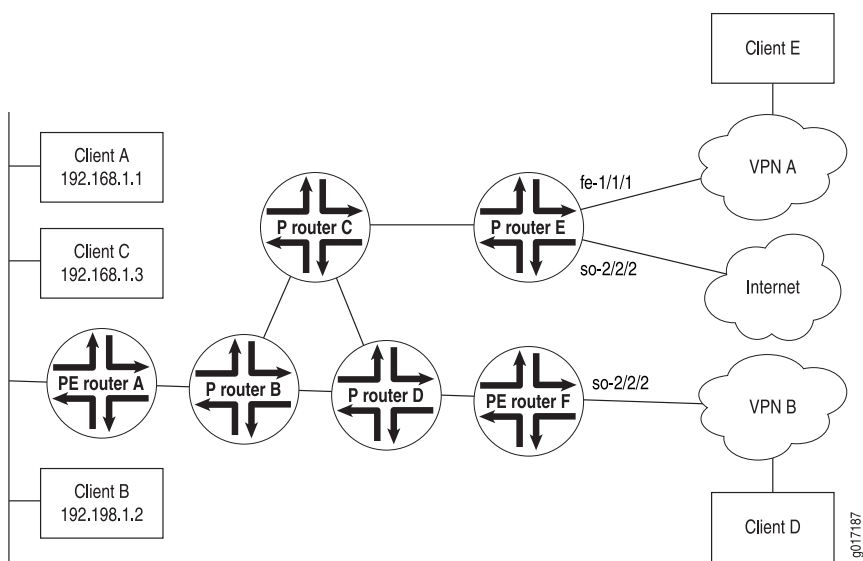

### Configuration on Router A

On Router A, you configure the interface to Clients A, B, and C. The configuration evaluates incoming traffic to determine whether it is to be forwarded by means of VPN or standard destination-based routing.



First, you apply an inbound filter and configure the interface:

```
[edit]
interfaces {
  fe-1/1/0 {
    unit 0 {
      family inet {
        filter {
          input fbf-vrf;
        }
        address 192.168.1.1/24;
      }
    }
  }
}
```

Because the interfaces that use filter-based forwarding must not be bound to a VPN, you must configure an alternate method to provide next-hop routes to the VRF table. You do this by defining an interface routing table group and sharing this group among all the routing tables:

```
[edit]
routing-options {
  interface-routes {
    rib-group inet if-rib;
  }
  rib-groups {
    if-rib {
      import-rib [ inet.0 vpn-A.inet.0 vpn-B.inet.0 ];
    }
  }
}
```

You apply the following filter to incoming traffic on interface **fe-1/1/0.0**. The first term matches traffic from Client A and forwards it to the routing instance for VPN A. The second term matches traffic from Client B that is destined for Client D and forwards it to the routing instance for VPN B. The third term matches all other traffic, which is forwarded normally by means of destination-based forwarding according to the routes in inet.0.

```
[edit firewall family family-name]
filter fbf-vrf {
  term vpnA {
    from {
      source-address {
```



```

        192.168.1.1/32;
    }
}
then {
    routing-instance vpn-A;
}
}
term vpnB {
    from {
        source-address {
            192.168.1.2/32;
        }
        destination-address {
            192.168.3.0/24;
        }
    }
    then routing-instance vpn-B;
}
}
term internet {
    then accept;
}
}

```

You then configure the routing instances for VPN A and VPN B. Notice that these statements include all the required statements to define a Layer 3 VPN except for the **interface** statement.

```

[edit]
routing-instances {
    vpn-A {
        instance-type vrf;
        route-distinguisher 172.21.10.63:100;
        vrf-import vpn-A-import;
        vrf-export vpn-A-export;
    }
    vpn-B {
        instance-type vrf;
        route-distinguisher 172.21.10.63:200;
        vrf-import vpn-B-import;
        vrf-export vpn-B-export;
    }
}
}

```



## Configuration on Router E

On Router E, configure a default route to reach the Internet. You should inject this route into the local IBGP mesh to provide an exit point from the network.

```
[edit]
routing-options {
  static {
    route 0.0.0.0/0 next-hop so-2/2/2.0 discard
  }
}
```

Configure the interface to Client E so that all incoming traffic on interface **fe-1/1/1.0** that matches the VPN policy is forwarded over VPN A:

```
[edit]
routing-instances {
  vpn-A {
    interface fe-1/1/1.0
    instance-type vrf;
    route-distinguisher 172.21.10.62:100;
    vrf-import vpn-A-import;
    vrf-export vpn-A-export;
    routing-options {
      static {
        route 192.168.2.0/24 next-hop fe-1/1/1.0;
      }
    }
  }
}
```

## Configuration on Router F

Again, because the interfaces that use filter-based forwarding must not be bound to a VPN, you configure an alternate method to provide next-hop routes to the VRF table by defining an interface routing table group and sharing this group among all the routing tables. To provide a route back to the clients for normal inet.0 routing, you define a static route to include in inet.0 and redistribute the static route into BGP:

```
[edit]
routing-options {
  interface-routes {
    rib-group inet if-rib;
```



```

    }
    rib-groups {
        if-rib {
            import-rib [ inet.0 vpn-B.inet.0 ];
        }
    }
}

```

To direct traffic from VPN B to Client D, you configure the routing instance for VPN B on Router F. All incoming traffic from Client D on interface **so-3/3/3.0** is forwarded normally by means of the destination address based on the routes in **inet.0**.

```

[edit]
routing-instances {
    vpn-B {
        instance-type vrf;
        route-distinguisher 172.21.10.64:200;
        vrf-import vpn-B-import;
        vrf-export vpn-B-export;
        routing-options {
            static {
                route 192.168.3.0/24 next-hop so-3/3/3.0;
            }
        }
    }
}

```

## IPv4 Traffic Over Layer 3 VPNs

### IN THIS SECTION

- [Understanding IPv4 Route Distribution in a Layer 3 VPN | 240](#)
- [Understanding VPN-IPv4 Addresses and Route Distinguishers | 244](#)
- [Configuring IPv4 Packet Forwarding for Layer 3 VPNs | 247](#)




## Understanding IPv4 Route Distribution in a Layer 3 VPN

### IN THIS SECTION

- Distribution of Routes from CE to PE Routers | 240
- Distribution of Routes Between PE Routers | 241
- Distribution of Routes from PE to CE Routers | 243

Within a VPN, the distribution of VPN-IPv4 routes occurs between the PE and CE routers and between the PE routers (see [Figure 20 on page 240](#)).

Figure 20: Route Distribution Within a VPN

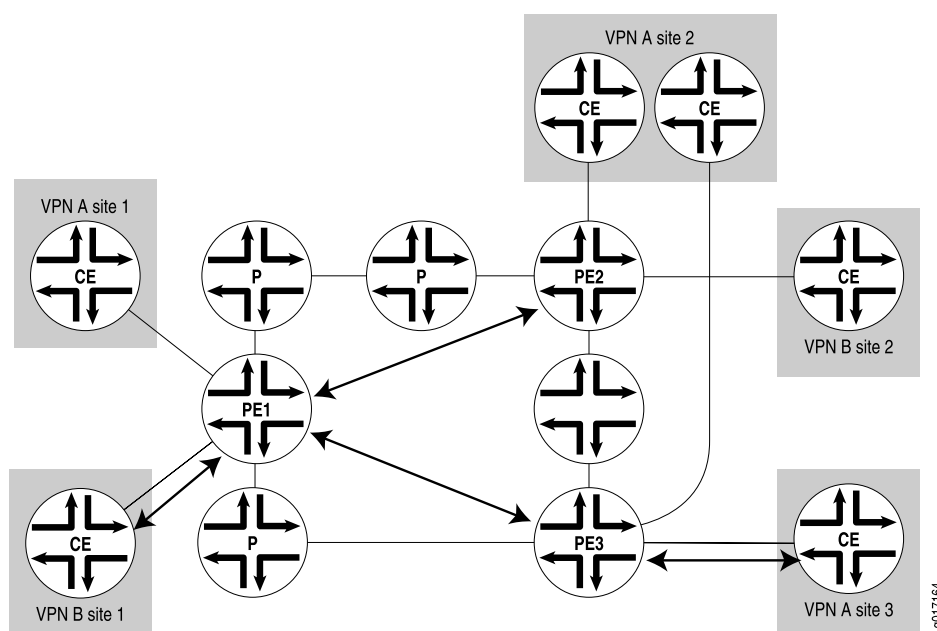

This section discusses the following topics:

### Distribution of Routes from CE to PE Routers

A CE router announces its routes to the directly connected PE router. The announced routes are in IPv4 format. The PE router places the routes into the VRF table for the VPN. In the Junos OS, this is the



*routing-instance-name*.inet.0 routing table, where ***routing-instance-name*** is the configured name of the VPN.


The connection between the CE and PE routers can be a remote connection (a WAN connection) or a direct connection (such as a Frame Relay or Ethernet connection).

CE routers can communicate with PE routers using one of the following:

- OSPF
- RIP
- BGP
- Static route

Figure 21 on page 241 illustrates how routes are distributed from CE routers to PE routers. Router PE1 is connected to two CE routers that are in different VPNs. Therefore, it creates two VRF tables, one for each VPN. The CE routers announce IPv4 routes. The PE router installs these routes into two different VRF tables, one for each VPN. Similarly, Router PE2 creates two VRF tables into which routes are installed from the two directly connected CE routers. Router PE3 creates one VRF table because it is directly connected to only one VPN.

Figure 21: Distribution of Routes from CE Routers to PE Routers

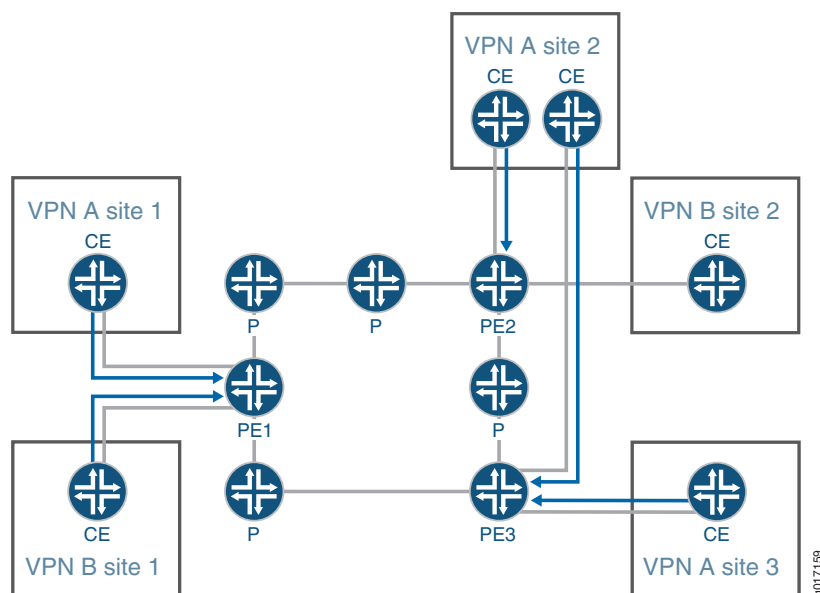

### Distribution of Routes Between PE Routers

When one PE router receives routes advertised from a directly connected CE router, it checks the received route against the VRF export policy for that VPN. If it matches, the route is converted to VPN-IPv4 format—that is, the 8-byte route distinguisher is prepended to the 4-byte VPN prefix to form a 12-byte




VPN-IPv4 address. The route is then tagged with a route target community. The PE router announces the route in VPN-IPv4 format to the remote PE routers for use by VRF import policies. The routes are distributed using IBGP sessions, which are configured in the provider's core network. If the route does not match, it is not exported to other PE routers, but can still be used locally for routing, for example, if two CE routers in the same VPN are directly connected to the same PE router.

The remote PE router places the route into its `bgp.l3vpn.0` table if the route passes the import policy on the IBGP session between the PE routers. At the same time, it checks the route against the VRF import policy for the VPN. If it matches, the route distinguisher is removed from the route, and it is placed into the VRF table (the `routing-instance-name.inet.0` table) in IPv4 format.

Figure 22 on page 242 illustrates how Router PE1 distributes routes to the other PE routers in the provider's core network. Router PE2 and Router PE3 each have VRF import policies that they use to determine whether to accept routes received over the IBGP sessions and install them in their VRF tables.

Figure 22: Distribution of Routes Between PE Routers

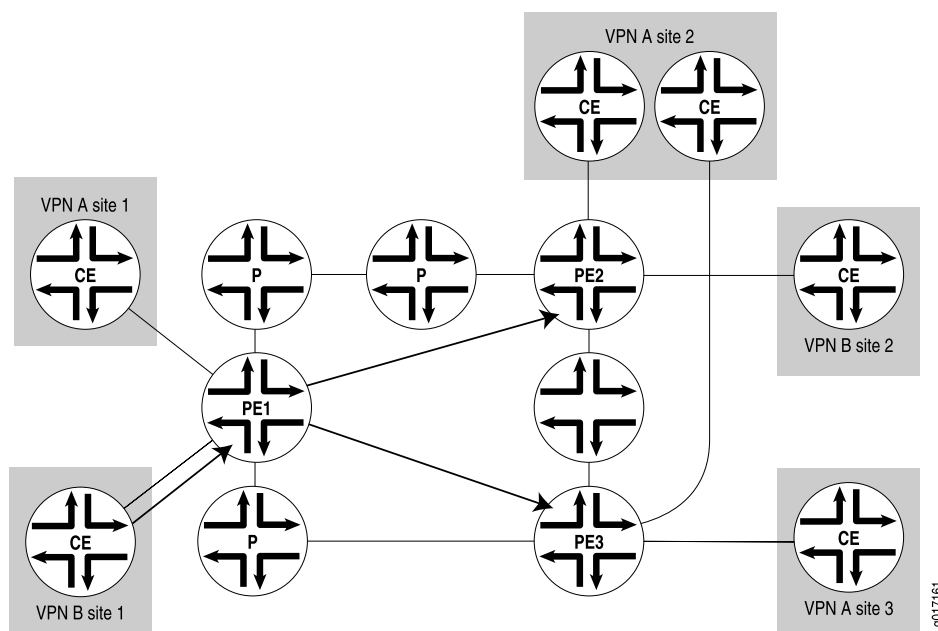

When a PE router receives routes advertised from a directly connected CE router (Router PE1 in Figure 22 on page 242), it uses the following procedure to examine the route, convert it to a VPN route, and distribute it to the remote PE routers:

1. The PE router checks the received route using the VRF export policy for that VPN.



2. If the received route matches the export policy, the route is processed as follows:
  - a. The route is converted to VPN-IPv4 format—that is, the 8-byte route distinguisher is prepended to the 4-byte VPN prefix to form the 12-byte VPN-IPv4 address.
  - b. A route target community is added to the route.
  - c. The PE router advertises the route in VPN-IPv4 format to the remote PE routers. The routes are distributed using IBGP sessions, which are configured in the provider's core network.
3. If the route does not match the export policy, it is not exported to the remote PE routers, but can still be used locally for routing—for example, if two CE routers in the same VPN are directly connected to the same PE router.

When the remote PE router receives routes advertised from another PE router (Routers PE2 and PE3 in [Figure 22 on page 242](#)), it uses the following procedure to process the route:

1. If the route is accepted by the import policy on the IBGP session between the PE routers, the remote PE router places the route into its `bgp.l3vpn.0` table.
2. The remote PE router checks the route's route target community against the VRF import policy for the VPN.
3. If it matches, the route distinguisher is removed from the route, and it is placed into the VRF table (the *routing-instance-name.inet.0* table) in IPv4 format.

## Distribution of Routes from PE to CE Routers

The remote PE router announces the routes in its VRF tables, which are in IPv4 format, to its directly connected CE routers.


PE routers can communicate with CE routers using one of the following routing protocols:

- OSPF
- RIP
- BGP
- Static route

[Figure 23 on page 244](#) illustrates how the three PE routers announce their routes to their connected CE routers.



Figure 23: Distribution of Routes from PE Routers to CE Routers

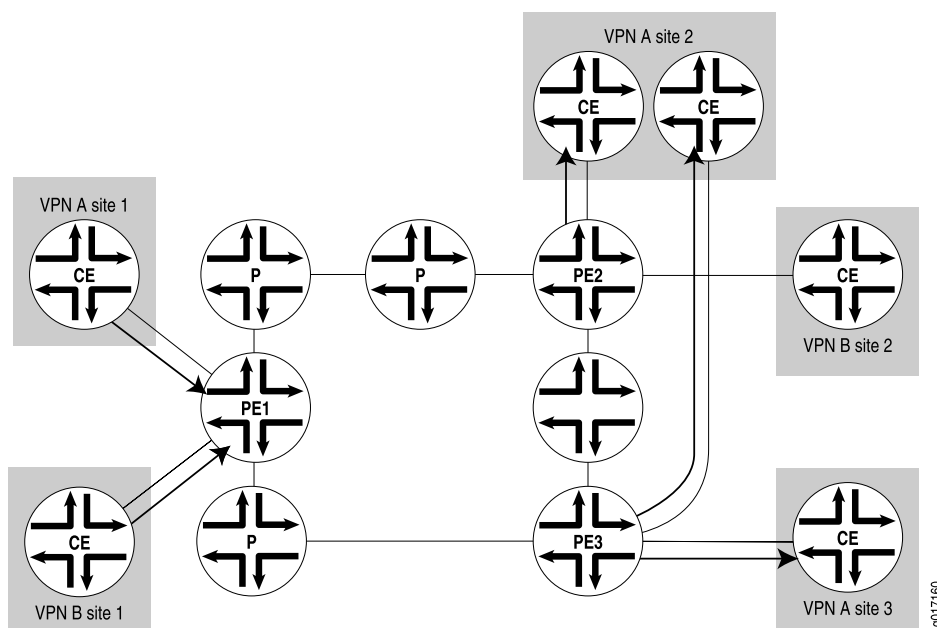


## Understanding VPN-IPv4 Addresses and Route Distinguishers

Because Layer 3 VPNs connect private networks—which can use either public addresses or private addresses, as defined in RFC 1918 (*Address Allocation for Private Internets*)—over the public Internet infrastructure, when the private networks use private addresses, the addresses might overlap with the addresses of another private network.

Figure 24 on page 245 illustrates how private addresses of different private networks can overlap. Here, sites within VPN A and VPN B use the address spaces 10.1.0.0/16, 10.2.0.0/16, and 10.3.0.0/16 for their private networks.



Figure 24: Overlapping Addresses Among Different VPNs

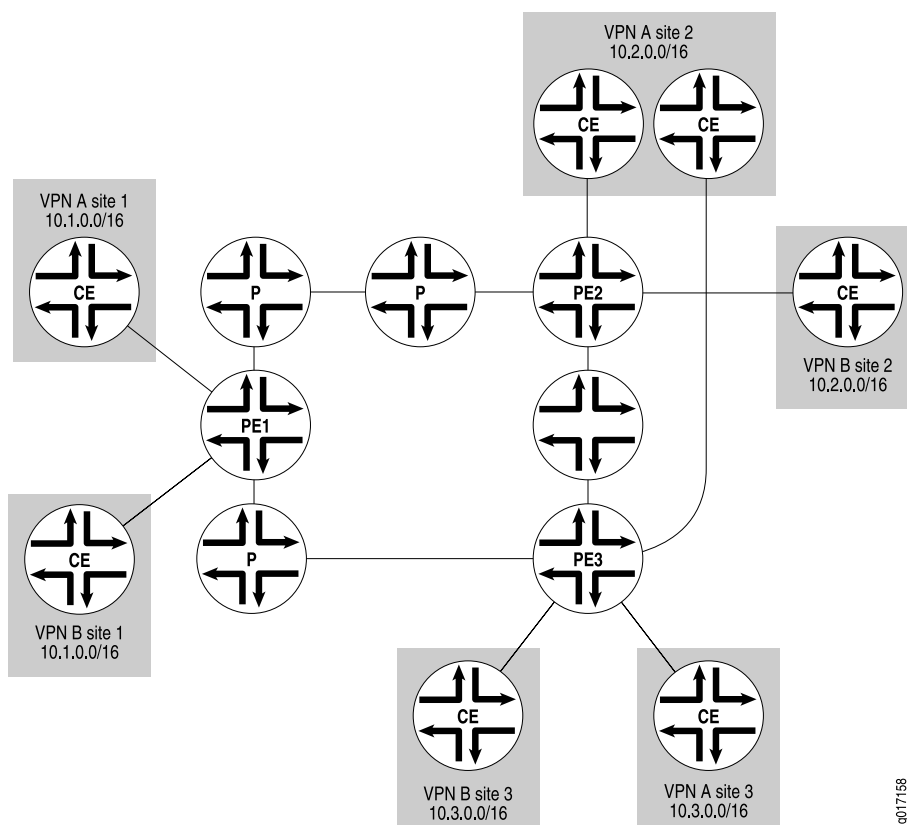

To avoid overlapping private addresses, you can configure the network devices to use public addresses instead of private addresses. However, this is a large and complex undertaking. The solution provided in RFC 4364 uses the existing private network numbers to create a new address that is unambiguous. The new address is part of the VPN-IPv4 address family, which is a BGP address family added as an extension to the BGP protocol. In VPN-IPv4 addresses, a value that identifies the VPN, called a route distinguisher, is prefixed to the private IPv4 address, providing an address that uniquely identifies a private IPv4 address.

Only the PE routers need to support the VPN-IPv4 address extension to BGP. When an ingress PE router receives an IPv4 route from a device within a VPN, it converts it into a VPN-IPv4 route by adding the route distinguisher prefix to the route. The VPN-IPv4 addresses are used only for routes exchanged between PE routers. When an egress PE router receives a VPN-IPv4 route, it converts the VPN-IPv4 route back to an IPv4 route by removing the route distinguisher before announcing the route to its connected CE routers.

VPN-IPv4 addresses have the following format:

- Route distinguisher is a 6-byte value that you can specify in one of the following formats:
  - **as-number:number**, where **as-number** is an AS number (a 2-byte value) and **number** is any 4-byte value. The AS number can be in the range 1 through 65,535. We recommend that you use an Internet Assigned Numbers Authority (IANA)-assigned, nonprivate AS number, preferably the Internet service provider's (ISP's) own or the customer's own AS number.



- **ip-address:number**, where **ip-address** is an IP address (a 4-byte value) and **number** is any 2-byte value. The IP address can be any globally unique unicast address. We recommend that you use the address that you configure in the **router-id** statement, which is a nonprivate address in your assigned prefix range.
- IPv4 address—4-byte address of a device within the VPN.

Figure 24 on page 245 illustrates how the AS number can be used in the route distinguisher. Suppose that VPN A is in AS 65535 and that VPN B is in AS 666 (both these AS numbers belong to the ISP), and suppose that the route distinguisher for Site 2 in VPN A is 65535:02 and that the route distinguisher for Site 2 in VPN B is 666:02. When Router PE2 receives a route from the CE router in VPN A, it converts it from its IP address of 10.2.0.0 to a VPN-IPv4 address of 65535:02:10.2.0.0. When the PE router receives a route from VPN B, which uses the same address space as VPN A, it converts it to a VPN-IPv4 address of 666:02:10.2.0.0.

If the IP address is used in the route distinguisher, suppose Router PE2's IP address is 172.168.0.1. When the PE router receives a route from VPN A, it converts it to a VPN-IPv4 address of 172.168.0.1:0:10.2.0.0/16, and it converts a route from VPN B to 172.168.0.0:1:10.2.0.0/16.

Route distinguishers are used only among PE routers to IPv4 addresses from different VPNs. The ingress PE router creates a route distinguisher and converts IPv4 routes received from CE routers into VPN-IPv4 addresses. The egress PE routers convert VPN-IPv4 routes into IPv4 routes before announcing them to the CE router.


Because VPN-IPv4 addresses are a type of BGP address, you must configure IBGP sessions between pairs of PE routers so that the PE routers can distribute VPN-IPv4 routes within the provider's core network. (All PE routers are assumed to be within the same AS.)

You define BGP communities to constrain the distribution of routes among the PE routers. Defining BGP communities does not, by itself, distinguish IPv4 addresses.

Figure 25 on page 247 illustrates how Router PE1 adds the route distinguisher 10458:22:10.1/16 to routes received from the CE router at Site 1 in VPN A and forwards these routes to the other two PE routers. Similarly, Router PE1 adds the route distinguisher 10458:23:10.2/16 to routes received by the CE router at Site 1 in VPN B and forwards these routes to the other PE routers.



Figure 25: Route Distinguishers

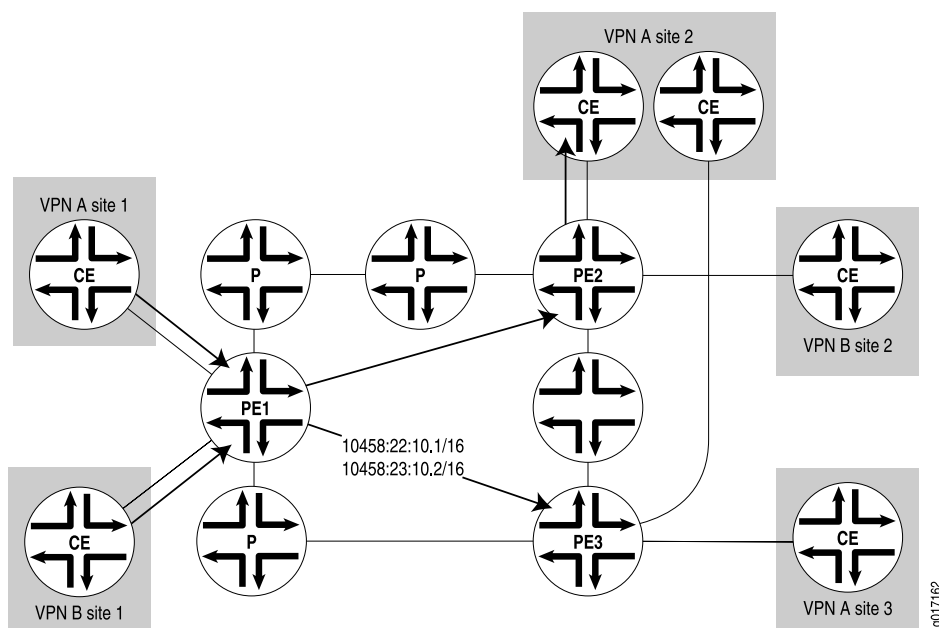

## Configuring IPv4 Packet Forwarding for Layer 3 VPNs

You can configure the router to support packet forwarding for IPv4 traffic in Layer 2 and Layer 3 VPNs. Packet forwarding is handled in one of the following ways, depending on the type of helper service configured:

- **BOOTP service**—Clients send Bootstrap Protocol (BOOTP) requests through the router configured with BOOTP service to a server in the specified routing instance. The server recognizes the client address and sends a response back to the router configured with BOOTP service. This router forwards the reply to the correct client address in the specified routing instance.
- **Other services**—Clients send requests through the router configured with the service to a server in the specified routing instance. The server recognizes the client address and sends a response to the correct client address in the specified routing instance.

To enable packet forwarding for VPNs, include the **helpers** statement:

```
helpers {
  service {
    description description-of-service;
    server {
```



```

    address address {
        routing-instance routing-instance-names;
    }
}
interface interface-name {
    description description-of-interface;
    no-listen;
    server {
        address address {
            routing-instance routing-instance-names;
        }
    }
}
}
}

```

You can include this statement at the following hierarchy levels:

- [edit forwarding-options]
- [edit logical-systems *logical-system-name* forwarding-options]
- [edit routing-instances *routing-instance-name* forwarding-options]

**NOTE:** You can enable packet forwarding for multiple VPNs. However, the client and server must be within the same VPN. Any Juniper Networks routing platforms with packet forwarding enabled along the path between the client and server must also reside within the same VPN.

The address and routing instance together constitute a unique server. This has implications for routers configured with BOOTP service, which can accept multiple servers.

For example, a BOOTP service can be configured as follows:

```

[edit forwarding-options helpers bootp]
server address 10.2.3.4 routing-instance [instance-A instance-B];

```

Even though the addresses are identical, the routing instances are different. A packet coming in for BOOTP service on **instance-A** is forwarded to **10.2.3.4** in the **instance-A** routing instance, while a packet coming in on **instance-B** is forwarded in the **instance-B** routing instance. Other services can only accept a single server, so this configuration does not apply in those cases.



## RELATED DOCUMENTATION

| *Routing Policies, Firewall Filters, and Traffic Policers User Guide*

## IPv6 Traffic over Layer 3 VPNs

### IN THIS SECTION

- [Understanding IPv6 Layer 3 VPNs | 249](#)
- [Configuring Layer 3 VPNs to Carry IPv6 Traffic | 250](#)
- [Example: Tunneling Layer 3 VPN IPv6 Islands over an IPv4 Core Using IBGP and Independent Domains | 254](#)

### Understanding IPv6 Layer 3 VPNs

The interfaces between the PE and CE routers of a Layer 3 VPN can be configured to carry IP version 6 (IPv6) traffic. IP allows numerous nodes on different networks to interoperate seamlessly. IPv4 is currently used in intranets and private networks, as well as the Internet. IPv6 is the successor to IPv4, and is based for the most part on IPv4.

In the Juniper Networks implementation of IPv6, the service provider implements an MPLS-enabled IPv4 backbone to provide VPN service for IPv6 customers. The PE routers have both IPv4 and IPv6 capabilities. They maintain IPv6 VPN routing and forwarding (VRF) tables for their IPv6 sites and encapsulate IPv6 traffic in MPLS frames that are then sent into the MPLS core network.

IPv6 for Layer 3 VPNs is supported for BGP and for static routes.

IPv6 over Layer 3 VPNs is described in RFC 4659, *BGP-MPLS IP Virtual Private Network (VPN) Extension for IPv6 VPN*.



## Configuring Layer 3 VPNs to Carry IPv6 Traffic

### IN THIS SECTION

- [Configuring IPv6 on the PE Router | 250](#)
- [Configuring the Connection Between the PE and CE Routers | 251](#)
- [Configuring IPv6 on the Interfaces | 253](#)

You can configure IP version 6 (IPv6) between the PE and CE routers of a Layer 3 VPN. The PE router must have the PE router to PE router BGP session configured with the **family inet6-vpn** statement. The CE router must be capable of receiving IPv6 traffic. You can configure BGP or static routes between the PE and CE routers.

The following sections explain how to configure IPv6 VPNs between the PE routers:

### Configuring IPv6 on the PE Router

To configure IPv6 between the PE and CE routers, include the **family inet6-vpn** statement in the configuration on the PE router:

```
family inet6-vpn {  
  (any | multicast | unicast) {  
    aggregate-label community community-name;  
    prefix-limit maximum prefix-limit;  
    rib-group rib-group-name;  
  }  
}
```

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

You also must include the **ipv6-tunneling** statement:

```
ipv6-tunneling;
```

You can include this statement at the following hierarchy levels:

- [\[edit protocols mpls\]](#)
- [\[edit logical-systems \*logical-system-name\* protocols mpls\]](#)



## Configuring the Connection Between the PE and CE Routers

### IN THIS SECTION

- [Configuring BGP on the PE Router to Handle IPv6 Routes | 251](#)
- [Configuring BGP on the PE Router for IPv4 and IPv6 Routes | 251](#)
- [Configuring OSPF Version 3 on the PE Router | 252](#)
- [Configuring Static Routes on the PE Router | 253](#)

To support IPv6 routes, you must configure BGP, OSPF version 3, IS-IS, or static routes for the connection between the PE and CE routers in the Layer 3 VPN. You can configure BGP to handle just IPv6 routes or both IP version 4 (IPv4) and IPv6 routes.

For more information about IS-IS see *Example: Configuring IS-IS*,

The following sections explain how to configure BGP and static routes:

### **Configuring BGP on the PE Router to Handle IPv6 Routes**

To configure BGP in the Layer 3 VPN routing instance to handle IPv6 routes, include the **bgp** statement:

```
bgp {
  group group-name {
    local-address IPv6-address;
    family inet6 {
      unicast;
    }
    peer-as as-number;
    neighbor IPv6-address;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols]

### **Configuring BGP on the PE Router for IPv4 and IPv6 Routes**

To configure BGP in the Layer 3 VPN routing instance to handle both IPv4 and IPv6 routes, include the **bgp** statement:



```

bgp {
  group group-name {
    local-address IPv4-address;
    family inet {
      unicast;
    }
    family inet6 {
      unicast;
    }
    peer-as as-number;
    neighbor address;
  }
}

```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

### Configuring OSPF Version 3 on the PE Router

To configure OSPF version 3 in the Layer 3 VPN routing instance to handle IPv6 routes, include the **ospf3** statement:

```

ospf3 {
  area area-id {
    interface interface-name;
  }
}

```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.



### Configuring Static Routes on the PE Router

To configure a static route to the CE router in the Layer 3 VPN routing instance, include the **routing-options** statement:

```
routing-options {
  rib routing-table.inet6.0 {
    static {
      defaults {
        static-options;
      }
    }
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

### Configuring IPv6 on the Interfaces

You need to configure IPv6 on the PE router interfaces to the CE routers and on the CE router interfaces to the PE routers.

To configure the interface to handle IPv6 routes, include the **family inet6** statement:

```
family inet6 {
  address ipv6-address;
}
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *unit-number*]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.



If you have configured the Layer 3 VPN to handle both IPv4 and IPv6 routes, configure the interface to handle both IPv4 and IPv6 routes by including the **unit** statement:

```
unit unit-number {
  family inet {
    address ipv4-address;
  }
  family inet6 {
    address ipv6-address;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

## Example: Tunneling Layer 3 VPN IPv6 Islands over an IPv4 Core Using IBGP and Independent Domains

### IN THIS SECTION

- [Requirements | 255](#)
- [Overview | 255](#)
- [Configuration | 256](#)
- [Verification | 263](#)

This example shows how to configure Junos OS to tunnel IPv6 over a Layer 3 VPN IPv4 network. Internal BGP (IBGP) is used between the customer edge (CE) and provider edge (PE) devices, as described in Internet draft draft-marques-ppvpn-ibgp-version.txt, *RFC2547bis networks using internal BGP as PE-CE protocol*, instead of the more typical external BGP (EBGP) PE-CE connections.



## Requirements

No special configuration beyond device initialization is required before you configure this example.

All PE routers participating in a Layer 3 VPN with the **independent-domain** statement in its configuration must be running Junos OS Release 6.3 or later.

## Overview

This example shows one method of enabling a router to participate in a customer VPN autonomous-system (AS) domain and to transparently exchange routing information through a Layer 3 VPN without the customer network attributes being visible to the carrier network, and without the carrier network attributes being visible to the customer network.

As an added requirement, the customer network in this example is based on IPv6, while the provider network uses IPv4.

The **independent-domain** feature is useful when customer route attributes need to be transparently forwarded across the VPN network without even the service-provider (SP) AS path appearing in the routes. In a typical Layer 3 VPN, the route attributes such as the originator ID, cluster list, route metric, and AS path are not transparent from one CE device to another CE device.


For example, suppose you have a customer VRF whose AS is 1. The customer advertises routes to you through BGP (either IBGP or EBGP). Your core network (the primary routing instance) uses AS 3. Without **independent-domain** configured, if the customer advertises 10.0.0.0/24 to you through BGP, the prefix contains the customer's AS 1 in the AS path. To transport the advertisement across the core to the other PE devices, your core AS 3 is added to the AS path by multiprotocol BGP (MP-BGP). The AS path is now 3 1. When the prefix is advertised out of the core back into the Layer 3 VPN at a remote PE device, the Layer 3 VPN AS 1 is added again, making the AS Path 1 3 1, which is an AS loop. The **independent-domain** statement ensures that only the ASs in the routing-instance are checked during loop detection, and the main, primary routing instances (your core's AS 3) is not considered. This is done by using the attribute 128 (attribute set), which is an optional transitive attribute. The attribute set hides the route's AS path, local preference, and so on, so that those do not appear during the loop check.

**NOTE:** In Junos OS 10.4 and later, you can specify the **no-attrset** option of **independent-domain** so that instead of using attribute 128 (attribute set), Junos OS simply does loop checking on routing-instance ASs without considering your core's AS used in MP-BGP. This is useful if you are using the **local-as** feature, and you only want to configure independent domains to maintain the independence of local ASs in the routing instance, and perform BGP loop detection only for the specified local ASs in the routing instance. In this case, you can disable the attribute set message.



Figure 26 on page 256 shows the sample network.

Figure 26: Layer 3 VPN IPv6 Islands over an IPv4 Core Using IBGP and Independent Domains

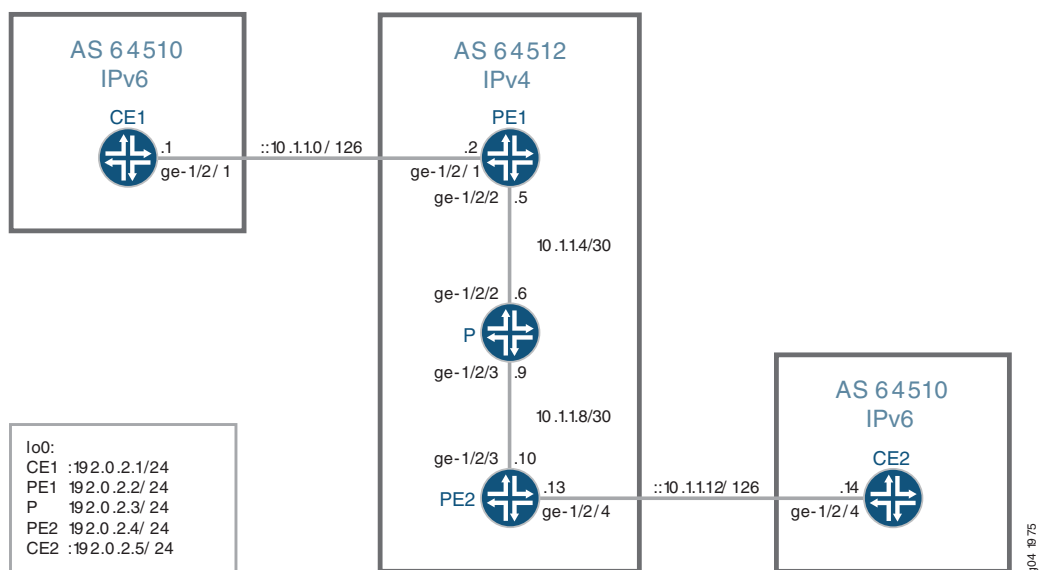

“CLI Quick Configuration” on page 256 shows the configuration for all of the devices in Figure 26 on page 256.

The section “Configuring Device PE1” on page 259 describes the steps on Device PE1.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level.

#### Device CE1

```

set interfaces ge-1/2/1 unit 0 family inet6 address ::10.1.1.1/126
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet6 address ::192.0.2.1/24
set protocols bgp group toPE1 type internal
set protocols bgp group toPE1 family inet6 unicast
set protocols bgp group toPE1 export send-direct
set protocols bgp group toPE1 neighbor ::10.1.1.2
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept
  
```



```

set routing-options router-id 192.0.2.1
set routing-options autonomous-system 64510

```

## Device CE2

```

set interfaces ge-1/2/4 unit 0 family inet6 address ::10.1.1.14/126
set interfaces ge-1/2/4 unit 0 family mpls
set interfaces lo0 unit 0 family inet6 address ::192.0.2.5/24
set protocols bgp group toPE2 type internal
set protocols bgp group toPE2 family inet6 unicast
set protocols bgp group toPE2 export send-direct
set protocols bgp group toPE2 neighbor ::10.1.1.13
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept
set routing-options router-id 192.0.2.5
set routing-options autonomous-system 64510

```

## Device PE1

```

set interfaces ge-1/2/1 unit 0 family inet6 address ::10.1.1.2/126
set interfaces ge-1/2/2 unit 0 family inet address 10.1.1.5/30
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.2/24
set protocols mpls ipv6-tunneling
set protocols mpls interface ge-1/2/2.0
set protocols bgp group toPE2 type internal
set protocols bgp group toPE2 local-address 192.0.2.2
set protocols bgp group toPE2 family inet6-vpn unicast
set protocols bgp group toPE2 neighbor 192.0.2.4
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/2.0
set protocols ldp interface ge-1/2/2.0
set protocols ldp interface lo0.0
set routing-instances red instance-type vrf
set routing-instances red interface ge-1/2/1.0
set routing-instances red route-distinguisher 64512:1
set routing-instances red vrf-target target:64512:1

```



```

set routing-instances red routing-options router-id 192.0.2.2
set routing-instances red routing-options autonomous-system 64510
set routing-instances red routing-options autonomous-system independent-domain
set routing-instances red protocols bgp group toCE1 type internal
set routing-instances red protocols bgp group toCE1 family inet6 unicast
set routing-instances red protocols bgp group toCE1 neighbor ::10.1.1.1
set routing-options router-id 192.0.2.2
set routing-options autonomous-system 64512

```

#### Device P

```

set interfaces ge-1/2/2 unit 0 family inet address 10.1.1.6/30
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces ge-1/2/3 unit 0 family inet address 10.1.1.9/30
set interfaces ge-1/2/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.3/24
set protocols mpls interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface all
set protocols ldp interface all
set routing-options router-id 192.0.2.3

```

#### Device PE2

```

set interfaces ge-1/2/3 unit 0 family inet address 10.1.1.10/30
set interfaces ge-1/2/3 unit 0 family mpls
set interfaces ge-1/2/4 unit 0 family inet6 address ::10.1.1.13/126
set interfaces lo0 unit 0 family inet address 192.0.2.4/24
set protocols mpls ipv6-tunneling
set protocols mpls interface ge-1/2/3.0
set protocols bgp group toPE1 type internal
set protocols bgp group toPE1 local-address 192.0.2.4
set protocols bgp group toPE1 family inet6-vpn unicast
set protocols bgp group toPE1 neighbor 192.0.2.2
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/3.0
set protocols ldp interface ge-1/2/3.0

```



```

set protocols ldp interface lo0.0
set routing-instances red instance-type vrf
set routing-instances red interface ge-1/2/4.0
set routing-instances red route-distinguisher 64512:1
set routing-instances red vrf-target target:64512:1
set routing-instances red routing-options router-id 192.0.2.4
set routing-instances red routing-options autonomous-system 64510
set routing-instances red routing-options autonomous-system independent-domain
set routing-instances red protocols bgp group toCE2 type internal
set routing-instances red protocols bgp group toCE2 family inet6 unicast
set routing-instances red protocols bgp group toCE2 neighbor ::10.1.1.14
set routing-options router-id 192.0.2.4
set routing-options autonomous-system 64512

```

### Configuring Device PE1

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the interfaces.

```

[edit interfaces]
user@PE1# set ge-1/2/1 unit 0 family inet6 address ::10.1.1.2/126
user@PE1# set ge-1/2/2 unit 0 family inet address 10.1.1.5/30
user@PE1# set ge-1/2/2 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 192.0.2.2/24

```

2. Configure MPLS on the interfaces.

```

[edit protocols mpls]
user@PE1# set ipv6-tunneling
user@PE1# set interface ge-1/2/2.0

```

3. Configure BGP.

```

[edit protocols bgp group toPE2]
user@PE1# set type internal

```



```

user@PE1# set local-address 192.0.2.2
user@PE1# set family inet6-vpn unicast
user@PE1# set neighbor 192.0.2.4

```

4. Configure an interior gateway protocol (IGP).

```

[edit protocols ospf area 0.0.0.0]
user@PE1# set interface lo0.0 passive
user@PE1# set interface ge-1/2/2.0

```

5. Configure a signaling protocol.

```

[edit protocols]
user@PE1# set ldp interface ge-1/2/2.0
user@PE1# set ldp interface lo0.0

```

6. Configure the routing instance.

```

[edit routing-instances red]
user@PE1# set instance-type vrf
user@PE1# set interface ge-1/2/1.0
user@PE1# set route-distinguisher 64512:1
user@PE1# set vrf-target target:64512:1
user@PE1# set routing-options router-id 192.0.2.2
user@PE1# set protocols bgp group toCE1 type internal
user@PE1# set protocols bgp group toCE1 family inet6 unicast
user@PE1# set protocols bgp group toCE1 neighbor ::10.1.1.1

```

7. In the routing instance, include the AS number of the customer network, and include the **independent-domain** statement.

```

[edit routing-instances red routing-options]
user@PE1# set autonomous-system 64510
user@PE1# set autonomous-system independent-domain

```

8. In the main instance, configure the router ID and the provider AS number.

```

[edit routing-options]
user@PE1# set router-id 192.0.2.2

```



```
user@PE1# set autonomous-system 64512
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
interfaces {
  ge-1/2/1 {
    unit 0 {
      family inet6 {
        address ::10.1.1.2/126;
      }
    }
  }
  ge-1/2/2 {
    unit 0 {
      family inet {
        address 10.1.1.5/30;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 192.0.2.2/24;
      }
    }
  }
}
```

```
user@PE1# show protocols
mpls {
  ipv6-tunneling;
  interface ge-1/2/2.0;
}
bgp {
  group toPE2 {
    type internal;
    local-address 192.0.2.2;
```



```

        family inet6-vpn {
            unicast;
        }
        neighbor 192.0.2.4;
    }
}
ospf {
    area 0.0.0.0 {
        interface lo0.0 {
            passive;
        }
        interface ge-1/2/2.0;
    }
}
ldp {
    interface ge-1/2/2.0;
    interface lo0.0;
}

```

```

user@PE1# show routing-instances
red {
    instance-type vrf;
    interface ge-1/2/1.0;
    route-distinguisher 64512:1;
    vrf-target target:64512:1;
    routing-options {
        router-id 192.0.2.2;
        autonomous-system 64510 independent-domain;
    }
    protocols {
        bgp {
            group toCE1 {
                type internal;
                family inet6 {
                    unicast;
                }
                neighbor ::10.1.1.1;
            }
        }
    }
}

```

```

user@PE1# show routing-options

```



```
router-id 192.0.2.2;
autonomous-system 64512;
```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

### IN THIS SECTION

- [Verifying That the CE Devices Have Connectivity | 263](#)
- [Checking the AS Paths | 264](#)

Confirm that the configuration is working properly.

### *Verifying That the CE Devices Have Connectivity*

#### Purpose

Make sure that the tunnel is operating.

#### Action

From operational mode, enter the **ping** command.

```
user@CE1> ping ::192.0.2.5
```

```
PING6(56=40+8+8 bytes) ::10.1.1.1 --> ::192.0.2.5
16 bytes from ::192.0.2.5, icmp_seq=0 hlim=63 time=1.943 ms
16 bytes from ::192.0.2.5, icmp_seq=1 hlim=63 time=1.587 ms
^C
--- ::192.0.2.5 ping6 statistics ---
2 packets transmitted, 2 packets received, 0% packet loss
round-trip min/avg/max/std-dev = 1.587/1.765/1.943/0.178 ms
```

```
user@CE2> ping ::192.0.2.1
```

```
PING6(56=40+8+8 bytes) ::10.1.1.14 --> ::192.0.2.1
16 bytes from ::192.0.2.1, icmp_seq=0 hlim=63 time=2.097 ms
16 bytes from ::192.0.2.1, icmp_seq=1 hlim=63 time=1.610 ms
```



```
^C
--- ::192.0.2.1 ping6 statistics ---
2 packets transmitted, 2 packets received, 0% packet loss
round-trip min/avg/max/std-dev = 1.610/1.853/2.097/0.244 ms
```

### Meaning

The IPv6 CE devices can communicate over the core IPv4 network.

### Checking the AS Paths

#### Purpose

Make sure that the provider AS number does not appear in the CE device routing tables.

#### Action

From operational mode, enter the **show route protocol bgp detail** command.

```
user@CE1> show route protocol bgp detail
```

```
inet6.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
::192.0.2.5/24 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
              Next hop type: Indirect
              Address: 0x9514354
              Next-hop reference count: 6
              Source: ::10.1.1.2
              Next hop type: Router, Next hop index: 924
              Next hop: ::10.1.1.2 via ge-1/2/1.0, selected
              Session Id: 0x500001
              Protocol next hop: ::10.1.1.2
              Indirect next hop: 0x971c000 262147 INH Session ID: 0x500002
              State: <Active Int Ext>
              Local AS: 64510 Peer AS: 64510
              Age: 50:58      Metric2: 0
              Validation State: unverified
              Task: BGP_64510:::10.1.1.2+45824
              Announcement bits (2): 0-KRT 2-Resolve tree 2
AS path: I
              Accepted
              Localpref: 100
              Router ID: 192.0.2.2

::10.1.1.12/126 (1 entry, 1 announced)
```



```

*BGP      Preference: 170/-101
          Next hop type: Indirect
          Address: 0x9514354
          Next-hop reference count: 6
          Source: ::10.1.1.2
          Next hop type: Router, Next hop index: 924
          Next hop: ::10.1.1.2 via ge-1/2/1.0, selected
          Session Id: 0x500001
          Protocol next hop: ::10.1.1.2
          Indirect next hop: 0x971c000 262147 INH Session ID: 0x500002
          State: <Active Int Ext>
          Local AS: 64510 Peer AS: 64510
          Age: 50:58      Metric2: 0
          Validation State: unverified
          Task: BGP_64510::<10.1.1.2+45824
          Announcement bits (2): 0-KRT 2-Resolve tree 2
AS path: I
          Accepted
          Localpref: 100
          Router ID: 192.0.2.2

```

user@CE2> show route protocol bgp detail

```

inet6.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
::192.0.2.1/24 (1 entry, 1 announced)
*BGP      Preference: 170/-101
          Next hop type: Indirect
          Address: 0x9514354
          Next-hop reference count: 6
          Source: ::10.1.1.13
          Next hop type: Router, Next hop index: 914
          Next hop: ::10.1.1.13 via ge-1/2/4.0, selected
          Session Id: 0x400001
          Protocol next hop: ::10.1.1.13
          Indirect next hop: 0x971c000 262150 INH Session ID: 0x400002
          State: <Active Int Ext>
          Local AS: 64510 Peer AS: 64510
          Age: 50:41      Metric2: 0
          Validation State: unverified
          Task: BGP_64510::<10.1.1.13+59329
          Announcement bits (2): 0-KRT 2-Resolve tree 2

```



```

AS path: I
Accepted
Localpref: 100
Router ID: 192.0.2.4

::10.1.1.0/126 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
            Next hop type: Indirect
            Address: 0x9514354
            Next-hop reference count: 6
            Source: ::10.1.1.13
            Next hop type: Router, Next hop index: 914
            Next hop: ::10.1.1.13 via ge-1/2/4.0, selected
            Session Id: 0x400001
            Protocol next hop: ::10.1.1.13
            Indirect next hop: 0x971c000 262150 INH Session ID: 0x400002
            State: <Active Int Ext>
            Local AS: 64510 Peer AS: 64510
            Age: 50:41      Metric2: 0
            Validation State: unverified
            Task: BGP_64510:::10.1.1.13+59329
            Announcement bits (2): 0-KRT 2-Resolve tree 2
AS path: I
Accepted
Localpref: 100
Router ID: 192.0.2.4

```

### Meaning

The output shows that for the BGP routes on the CE devices, the AS path attribute does not include the provider AS 64512.

### SEE ALSO

---

*Configuring the Ingress Router for MPLS-Signaled LSPs*  
*Minimum RSVP Configuration*

### RELATED DOCUMENTATION

---

*Routing Policies, Firewall Filters, and Traffic Policers User Guide*  
*Junos OS Routing Protocols Library*



# Configuring an AS for Layer 3 VPNs

## IN THIS SECTION

- [Configuring Layer 3 VPNs to Carry IBGP Traffic | 267](#)
- [Example: Configuring a Layer 3 VPN with Route Reflection and AS Override | 269](#)
- [Configuring the Algorithm That Determines the Active Route to Evaluate AS Numbers in AS Paths for VPN Routes | 282](#)

## Configuring Layer 3 VPNs to Carry IBGP Traffic

An independent AS domain is separate from the primary routing instance domain. An AS is a set of routers that are under a single technical administration and that generally use a single IGP and metrics to propagate routing information within the set of routers. An AS appears to other ASs to have a single, coherent interior routing plan and presents a consistent picture of what destinations are reachable through it.

Configuring an independent domain allows you to keep the AS paths of the independent domain from being shared with the AS path and AS path attributes of other domains, including the master routing instance domain.

If you are using BGP on the router, you must configure an AS number.

When you configure BGP as the routing protocol between a PE router and a CE router in a Layer 3 VPN, you typically configure external peering sessions between the Layer 3 VPN service provider and the customer network ASs.

If the customer network has several sites advertising routes through an external BGP session to the service provider network and if the same AS is used by all the customer sites, the CE routers reject routes from the other CE routers. They detect a loop in the BGP AS path attribute.

To prevent the CE routers from rejecting each other's routes, you could configure the following:

- PE routers advertising routes received from remote PE routers can remap the customer network AS number to its own AS number.
- AS path loops can be configured.
- The customer network can be configured with different AS numbers at each site.

These types of configurations can work when there are no BGP routing exchanges between the customer network and other networks. However, they do have limitations for customer networks that use BGP



internally for purposes other than carrying traffic between the CE routers and the PE routers. When those routes are advertised outside the customer network, the service provider ASs are present in the AS path.

To improve the transparency of Layer 3 VPN services for customer networks, you can configure the routing instance for the Layer 3 VPN to isolate the customer's network attributes from the service provider's network attributes.

When you include the **independent-domain** statement in the Layer 3 VPN routing instance configuration, BGP attributes received from the customer network (from the CE router) are stored in a BGP attribute (ATTRSET) that functions like a stack. When that route is advertised from the remote PE router to the remote CE router, the original BGP attributes are restored. This is the default behavior for BGP routes that are advertised to Layer 3 VPNs located in different domains.

This functionality is described in the Internet draft *draft-marques-ppvpn-ibgp-version.txt*, *RFC 2547bis Networks Using Internal BGP as PE-CE Protocol*.

To allow a Layer 3 VPN to transport IBGP traffic, include the **independent-domain** statement:

```
independent-domain;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* routing-options autonomous-system *number*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* routing-options autonomous-system *number*]

**NOTE:** All PE routers participating in a Layer 3 VPN with the **independent-domain** statement in its configuration must be running Junos OS Release 6.3 or later.

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

The independent domain uses the transitive path attribute 128 (attribute set) to tunnel the independent domain's BGP attributes through the Internal BGP (IBGP) core. In Junos OS Release 10.3 and later, if BGP receives attribute 128 and you have not configured an independent domain in any routing instance, BGP treats the received attribute 128 as an unknown attribute.

There is a limit of 16 ASs for each domain.

SEE ALSO



[Example: Tunneling Layer 3 VPN IPv6 Islands over an IPv4 Core Using IBGP and Independent Domains | 254](#)

*Disabling Attribute Set Messages on Independent AS Domains for BGP Loop Detection*

## Example: Configuring a Layer 3 VPN with Route Reflection and AS Override

### IN THIS SECTION

- [Requirements | 269](#)
- [Overview | 269](#)
- [Configuration | 270](#)
- [Verification | 280](#)

Suppose that you are a service provider providing a managed MPLS-based Layer 3 VPN service. Your customer has several sites and requires BGP routing to customer edge (CE) devices at each site.

### Requirements

No special configuration beyond device initialization is required before configuring this example.

### Overview


This example has two CE devices, two provider edge (PE) devices, and several provider core devices. The provider network is also using IS-IS to support LDP and BGP loopback reachability. Device P2 is acting as a route reflector (RR). Both CE devices are in autonomous system (AS) 64512. The provider network is in AS 65534.

The **as-override** statement is applied to the PE devices, thus replacing the CE device's AS number with that of the PE device. This prevents the customer AS number from appearing more than once in the AS path attribute.

[Figure 27 on page 270](#) shows the topology used in this example.



Figure 27: AS Override Topology

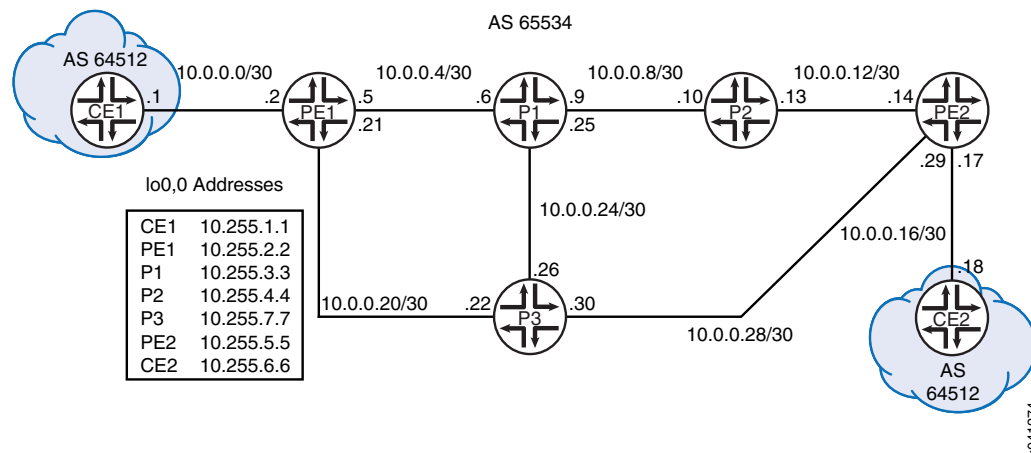

“CLI Quick Configuration” on page 270 shows the configuration for all of the devices in Figure 27 on page 270. The section “Step-by-Step Procedure” on page 275 describes the steps on Device PE1.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level.

#### Device CE1

```
set interfaces ge-1/2/0 unit 0 family inet address 10.0.0.1/30
set interfaces ge-1/2/0 unit 0 family iso
set interfaces lo0 unit 0 family inet address 10.255.1.1/32
set interfaces lo0 unit 0 family iso address 49.0001.0010.0000.0101.00
set protocols bgp group PE type external
set protocols bgp group PE family inet unicast
set protocols bgp group PE export ToBGP
set protocols bgp group PE peer-as 65534
set protocols bgp group PE neighbor 10.0.0.2
set policy-options policy-statement ToBGP term Direct from protocol direct
set policy-options policy-statement ToBGP term Direct then accept
set routing-options router-id 10.255.1.1
set routing-options autonomous-system 64512
```

#### Device P1



```

set interfaces ge-1/2/0 unit 0 family inet address 10.0.0.6/30
set interfaces ge-1/2/0 unit 0 family iso
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.0.0.9/30
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces ge-1/2/2 unit 0 family inet address 10.0.0.25/30
set interfaces ge-1/2/2 unit 0 family iso
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.3.3/32
set interfaces lo0 unit 0 family iso address 49.0001.0010.0000.0303.00
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group l3vpn type internal
set protocols bgp group l3vpn local-address 10.255.3.3
set protocols bgp group l3vpn family inet-vpn unicast
set protocols bgp group l3vpn peer-as 65534
set protocols bgp group l3vpn local-as 65534
set protocols bgp group l3vpn neighbor 10.255.4.4
set protocols isis interface all level 2 metric 10
set protocols isis interface all level 1 disable
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 level 2 metric 0
set protocols ldp deaggregate
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set routing-options router-id 10.255.3.3

```

## Device P2

```

set interfaces ge-1/2/0 unit 0 family inet address 10.0.0.10/30
set interfaces ge-1/2/0 unit 0 family iso
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.0.0.13/30
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.4.4/32
set interfaces lo0 unit 0 family iso address 49.0001.0010.0000.0404.00
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable

```



```

set protocols bgp group Core-RRClients type internal
set protocols bgp group Core-RRClients local-address 10.255.4.4
set protocols bgp group Core-RRClients family inet-vpn unicast
set protocols bgp group Core-RRClients cluster 10.255.4.4
set protocols bgp group Core-RRClients peer-as 65534
set protocols bgp group Core-RRClients neighbor 10.255.3.3
set protocols bgp group Core-RRClients neighbor 10.255.7.7
set protocols bgp group Core-RRClients neighbor 10.255.2.2
set protocols bgp group Core-RRClients neighbor 10.255.5.5
set protocols isis interface all level 2 metric 10
set protocols isis interface all level 1 disable
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 level 2 metric 0
set protocols ldp deaggregate
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set routing-options router-id 10.255.4.4
set routing-options autonomous-system 65534

```

### Device P3

```

set interfaces ge-1/2/0 unit 0 family inet address 10.0.0.22/30
set interfaces ge-1/2/0 unit 0 family iso
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.0.0.26/30
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces ge-1/2/2 unit 0 family inet address 10.0.0.30/30
set interfaces ge-1/2/2 unit 0 family iso
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.7.7/32
set interfaces lo0 unit 0 family iso address 49.0001.0010.0000.0707.00
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group l3vpn type internal
set protocols bgp group l3vpn local-address 10.255.7.7
set protocols bgp group l3vpn family inet-vpn unicast
set protocols bgp group l3vpn peer-as 65534
set protocols bgp group l3vpn local-as 65534
set protocols bgp group l3vpn neighbor 10.255.4.4

```



```

set protocols isis interface all level 2 metric 10
set protocols isis interface all level 1 disable
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 level 2 metric 0
set protocols ldp deaggregate
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set routing-options router-id 10.255.7.7

```

## Device PE1

```

set interfaces ge-1/2/0 unit 0 family inet address 10.0.0.2/30
set interfaces ge-1/2/0 unit 0 family iso
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.0.0.5/30
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces ge-1/2/2 unit 0 family inet address 10.0.0.21/30
set interfaces ge-1/2/2 unit 0 family iso
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.2.2/32
set interfaces lo0 unit 0 family iso address 49.0001.0010.0000.0202.00
set protocols mpls interface ge-1/2/2.0
set protocols mpls interface ge-1/2/1.0
set protocols mpls interface lo0.0
set protocols mpls interface fxp0.0 disable
set protocols bgp group l3vpn type internal
set protocols bgp group l3vpn local-address 10.255.2.2
set protocols bgp group l3vpn family inet-vpn unicast
set protocols bgp group l3vpn peer-as 65534
set protocols bgp group l3vpn local-as 65534
set protocols bgp group l3vpn neighbor 10.255.4.4
set protocols isis interface ge-1/2/1.0 level 2 metric 10
set protocols isis interface ge-1/2/1.0 level 1 disable
set protocols isis interface ge-1/2/2.0 level 2 metric 10
set protocols isis interface ge-1/2/2.0 level 1 disable
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 level 2 metric 0
set protocols ldp deaggregate
set protocols ldp interface ge-1/2/1.0

```



```

set protocols ldp interface ge-1/2/2.0
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
set routing-instances VPN-A instance-type vrf
set routing-instances VPN-A interface ge-1/2/0.0
set routing-instances VPN-A route-distinguisher 65534:1234
set routing-instances VPN-A vrf-target target:65534:1234
set routing-instances VPN-A protocols bgp group CE type external
set routing-instances VPN-A protocols bgp group CE family inet unicast
set routing-instances VPN-A protocols bgp group CE neighbor 10.0.0.1 peer-as 64512
set routing-instances VPN-A protocols bgp group CE neighbor 10.0.0.1 as-override
set routing-options router-id 10.255.2.2
set routing-options autonomous-system 65534

```

## Device PE2

```

set interfaces ge-1/2/0 unit 0 family inet address 10.0.0.14/30
set interfaces ge-1/2/0 unit 0 family iso
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.0.0.17/30
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/2 unit 0 family inet address 10.0.0.29/30
set interfaces ge-1/2/2 unit 0 family iso
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.5.5/32
set interfaces lo0 unit 0 family iso address 49.0001.0010.0000.0505.00
set protocols mpls interface ge-1/2/0.0
set protocols mpls interface ge-1/2/2.0
set protocols mpls interface lo0.0
set protocols mpls interface fxp0.0 disable
set protocols bgp group l3vpn type internal
set protocols bgp group l3vpn local-address 10.255.5.5
set protocols bgp group l3vpn family inet-vpn unicast
set protocols bgp group l3vpn peer-as 65534
set protocols bgp group l3vpn local-as 65534
set protocols bgp group l3vpn neighbor 10.255.4.4
set protocols isis interface ge-1/2/0.0 level 2 metric 10
set protocols isis interface ge-1/2/0.0 level 1 disable
set protocols isis interface ge-1/2/2.0 level 2 metric 10
set protocols isis interface ge-1/2/2.0 level 1 disable

```



```

set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 level 2 metric 0
set protocols ldp deaggregate
set protocols ldp interface ge-1/2/0.0
set protocols ldp interface ge-1/2/2.0
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
set routing-instances VPN-A instance-type vrf
set routing-instances VPN-A interface ge-1/2/1.0
set routing-instances VPN-A route-distinguisher 65534:1234
set routing-instances VPN-A vrf-target target:65534:1234
set routing-instances VPN-A protocols bgp group CE type external
set routing-instances VPN-A protocols bgp group CE family inet unicast
set routing-instances VPN-A protocols bgp group CE neighbor 10.0.0.18 peer-as 64512
set routing-instances VPN-A protocols bgp group CE neighbor 10.0.0.18 as-override
set routing-options router-id 10.255.5.5
set routing-options autonomous-system 65534

```

## Device CE2

```

set interfaces ge-1/2/0 unit 0 family inet address 10.0.0.18/30
set interfaces ge-1/2/0 unit 0 family iso
set interfaces lo0 unit 0 family inet address 10.255.6.6/32
set interfaces lo0 unit 0 family iso address 49.0001.0010.0000.0606.00
set protocols bgp group PE type external
set protocols bgp group PE family inet unicast
set protocols bgp group PE export ToBGP
set protocols bgp group PE peer-as 65534
set protocols bgp group PE neighbor 10.0.0.17
set policy-options policy-statement ToBGP term Direct from protocol direct
set policy-options policy-statement ToBGP term Direct then accept
set routing-options router-id 10.255.6.6
set routing-options autonomous-system 64512

```

## Step-by-Step Procedure



The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure AS override:

1. Configure the interfaces.

To enable MPLS, include the protocol family on the interface so that the interface does not discard incoming MPLS traffic.

```
[edit interfaces]
user@PE1# set ge-1/2/0 unit 0 family inet address 10.0.0.2/30
user@PE1# set ge-1/2/0 unit 0 family iso
user@PE1# set ge-1/2/0 unit 0 family mpls
user@PE1# set ge-1/2/1 unit 0 family inet address 10.0.0.5/30
user@PE1# set ge-1/2/1 unit 0 family iso
user@PE1# set ge-1/2/1 unit 0 family mpls
user@PE1# set ge-1/2/2 unit 0 family inet address 10.0.0.21/30
user@PE1# set ge-1/2/2 unit 0 family iso
user@PE1# set ge-1/2/2 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.2.2/32
user@PE1# set lo0 unit 0 family iso address 49.0001.0010.0000.0202.00
```

2. Add the interface to the MPLS protocol to establish the control plane level connectivity.

Set up the IGP so that the provider devices can communicate with each other.

To establish a mechanism to distribute MPLS labels, enable LDP. Optionally, for LDP, enable forwarding equivalence class (FEC) deaggregation, which results in faster global convergence.

```
[edit protocols]
user@PE1# set mpls interface ge-1/2/2.0
user@PE1# set mpls interface ge-1/2/1.0
user@PE1# set mpls interface lo0.0
user@PE1# set mpls interface fxp0.0 disable
user@PE1# set isis interface ge-1/2/1.0 level 2 metric 10
user@PE1# set isis interface ge-1/2/1.0 level 1 disable
user@PE1# set isis interface ge-1/2/2.0 level 2 metric 10
user@PE1# set isis interface ge-1/2/2.0 level 1 disable
user@PE1# set isis interface fxp0.0 disable
user@PE1# set isis interface lo0.0 level 2 metric 0
user@PE1# set ldp deaggregate
user@PE1# set ldp interface ge-1/2/1.0
user@PE1# set ldp interface ge-1/2/2.0
user@PE1# set ldp interface fxp0.0 disable
user@PE1# set ldp interface lo0.0
```



3. Enable the internal BGP (IBGP) connection to peer with the RR only, using the IPv4 VPN unicast address family.

```
[edit protocols bgp group l3vpn]
user@PE1# set type internal
user@PE1# set local-address 10.255.2.2
user@PE1# set family inet-vpn unicast
user@PE1# set peer-as 65534
user@PE1# set local-as 65534
user@PE1# set neighbor 10.255.4.4
```

4. Configure the routing instance, including the **as-override** statement.

Create the routing-instance (VRF) on the PE device, setting up the BGP configuration to peer with Device CE1.

```
[edit routing-instances VPN-A]
user@PE1# set instance-type vrf
user@PE1# set interface ge-1/2/0.0
user@PE1# set route-distinguisher 65534:1234
user@PE1# set vrf-target target:65534:1234
user@PE1# set protocols bgp group CE type external
user@PE1# set protocols bgp group CE family inet unicast
user@PE1# set protocols bgp group CE neighbor 10.0.0.1 peer-as 64512
user@PE1# set protocols bgp group CE neighbor 10.0.0.1 as-override
```

5. Configure the router ID and the AS number.

```
[edit routing-options]
user@PE1# set router-id 10.255.2.2
user@PE1# set autonomous-system 65534
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
user@PE1# show interfaces
ge-1/2/0 {
  unit 2 {
    family inet {
```



```

        address 10.0.0.2/30;
    }
    family iso;
    family mpls;
}
}
ge-1/2/1 {
    unit 5 {
        family inet {
            address 10.0.0.5/30;
        }
        family iso;
        family mpls;
    }
}
ge-1/2/2 {
    unit 21 {
        family inet {
            address 10.0.0.21/30;
        }
        family iso;
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.2.2/32;
        }
        family iso {
            address 49.0001.0010.0000.0202.00;
        }
    }
}
}

```

user@PE1# **show protocols**

```

mpls {
    interface ge-1/2/2.0;
    interface ge-1/2/1.0;
    interface lo0.0;
    interface fxp0.0 {
        disable;
    }
}

```



```

bgp {
  group l3vpn {
    type internal;
    local-address 10.255.2.2;
    family inet-vpn {
      unicast;
    }
    peer-as 65534;
    local-as 65534;
    neighbor 10.255.4.4;
  }
}
isis {
  interface ge-1/2/1.0 {
    level 2 metric 10;
    level 1 disable;
  }
  interface ge-1/2/2.0 {
    level 2 metric 10;
    level 1 disable;
  }
  interface fxp0.0 {
    disable;
  }
  interface lo0.0 {
    level 2 metric 0;
  }
}
ldp {
  deaggregate;
  interface ge-1/2/1.0;
  interface ge-1/2/2.0;
  interface fxp0.0 {
    disable;
  }
  interface lo0.0;
}

```

user@PE1# **show routing-instances**

```

VPN-A {
  instance-type vrf;
  interface ge-1/2/0.0;
  route-distinguisher 65534:1234;
  vrf-target target:65534:1234;
}

```



```
protocols {  
  bgp {  
    group CE {  
      type external;  
      family inet {  
        unicast;  
      }  
      neighbor 10.0.0.1 {  
        peer-as 64512;  
        as-override;  
      }  
    }  
  }  
}
```

```
user@PE1# show routing-options  
router-id 10.255.2.2;  
autonomous-system 65534;
```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

### IN THIS SECTION

- [Checking AS Path to the CE Devices | 280](#)
- [Checking How the Route to Device CE2 Is Advertised | 281](#)
- [Checking the Route on Device CE1 | 281](#)

Confirm that the configuration is working properly.

### *Checking AS Path to the CE Devices*

#### Purpose

Display information on Device PE1 about the AS path attribute for the route to Device CE2's loopback interface.

#### Action



On Device PE1, from operational mode, enter the **show route table VPN-A.inet.0 10.255.6.6** command.

```
user@PE1> show route table VPN-A.inet.0 10.255.6.6
```

```
VPN-A.inet.0: 5 destinations, 6 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.6.6/32      *[BGP/170] 02:19:35, localpref 100, from 10.255.4.4
                   AS path: 64512 I, validation-state: unverified
                   > to 10.0.0.22 via ge-1/2/2.0, Push 300032, Push 299776(top)
```

### Meaning

The output shows that Device PE1 has an AS path for 10.255.6.6/32 as coming from AS 64512.

### Checking How the Route to Device CE2 Is Advertised

#### Purpose

Make sure the route to Device CE2 is advertised to Device CE1 as if it is coming from the MPLS core.

#### Action

On Device PE1, from operational mode, enter the **show route advertising-protocol bgp 10.0.0.1** command.

```
user@PE1> show route advertising-protocol bgp 10.0.0.1
```

```
VPN-A.inet.0: 5 destinations, 6 routes (5 active, 0 holddown, 0 hidden)
  Prefix                Nexthop          MED      Lclpref    AS path
* 10.0.0.16/30          Self                    I
* 10.255.1.1/32         10.0.0.1              65534 I
* 10.255.6.6/32         Self                    65534 I
```

### Meaning

The output indicates that Device PE1 is advertising only its own AS number in the AS path.

### Checking the Route on Device CE1

#### Purpose

Make sure that Device CE1 contains only the provider AS number in the AS path for the route to Device CE2.

#### Action



From operational mode, enter the `show route table inet.0 terse 10.255.6.6` command.

`user@CE1> show route table inet.0 terse 10.255.6.6`

```
inet.0: 5 destinations, 6 routes (5 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

A V Destination      P Prf    Metric 1    Metric 2    Next hop      AS path
* ? 10.255.6.6/32    B 170      100
unverified                                >10.0.0.2
```

Meaning

The output indicates that Device CE1 has a route to Device CE2. The loop issue is resolved with the use of the **as-override** statement.

One route is hidden on the CE device. This is because Junos OS does not perform a BGP split horizon. Generally, split horizon in BGP is unnecessary, because any routes that might be received back by the originator are less preferred due to AS path length (for EBGP), AS path loop detection (IBGP), or other BGP metrics. Advertising routes back to the neighbor from which they were learned has a negligible effect on the router's performance, and is the correct thing to do.

SEE ALSO

| *Understanding AS Override*

Configuring the Algorithm That Determines the Active Route to Evaluate AS Numbers in AS Paths for VPN Routes

By default, the third step of the algorithm that determines the active route evaluates the length of the AS path but not the contents of the AS path. In some VPN scenarios with BGP multiple path routes, it can also be useful to compare the AS numbers of the AS paths and to have the algorithm select the route whose AS numbers match.



To configure the algorithm that selects the active path to evaluate the AS numbers in AS paths for VPN routes:

- Include the **as-path-compare** statement at the [edit routing-instances *routing-instance-name* routing-options multipath] hierarchy level.

**NOTE:** The **as-path-compare** statement is not supported for the default routing instance.

## Limiting VPN Routes Using Route Resolution

### IN THIS SECTION

- [Example: Configuring Route Resolution on PE Routers | 283](#)
- [Example: Configuring Route Resolution on Route Reflectors | 286](#)
- [Limiting the Number of Paths and Prefixes Accepted from CE Routers in Layer 3 VPNs | 290](#)

This topic describes limiting VPN routes by configuring route resolution on PE routers and route reflectors and by configuring the PE router to accept a limited number of prefix from a CE router.

### Example: Configuring Route Resolution on PE Routers

#### IN THIS SECTION

- [Requirements | 284](#)
- [Overview | 284](#)
- [Configuration | 284](#)
- [Verification | 286](#)



This example shows how to configure a routing table to accept routes from specific routing tables. It also shows how to configure a routing table to use specific import policies to produce a route resolution table to resolve routes.

## Requirements

Before you begin, configure a Layer 3 VPN, as shown in one of the following examples:

- [Example: Configuring Interprovider Layer 3 VPN Option A on page 424](#)
- [Example: Configuring Interprovider Layer 3 VPN Option B on page 451](#)

## Overview

One method to achieve IPv4 route scaling is to modify how BGP routes are added to the forwarding tables. By default, the Routing Protocol Process (rpd) adds all the routes in inet.0 and inet.3 to the resolution tree. Normally, this includes the resolved IPv4 BGP routes, which can increase memory consumption. To achieve better scaling for IPv4 routes, this example shows how to configure the Junos OS so that resolved BGP routes are not added to the resolution tree. This is achieved by applying an import policy on the route resolution table, which ensures it does not accept any BGP routes from inet.0.

You would apply this configuration to all provider edge (PE) routers in the Layer 3 VPN.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

### PE Router

```
set policy-options policy-statement protocol-bgp from protocol bgp
set policy-options policy-statement protocol-bgp then reject
set routing-options resolution rib inet.0 import protocol-bgp
```

### Step-by-Step Procedure



The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure route resolution:

1. Configure the routing policy.

```
[edit policy-options policy-statement protocol-bgp]
user@PE# set from protocol bgp
user@PE# set then reject
```

2. Apply the routing policy.

```
[edit routing-options resolution]
user@PE# set rib inet.0 import protocol-bgp
```

3. If you are done configuring the device, commit the configuration.

```
[edit]
user@PE# commit
```

## Results

Confirm your configuration by issuing the **show policy-options** and **show routing-options** commands.

```
user@PE# show policy-options
policy-statement protocol-bgp {
  from protocol bgp;
  then reject;
}
```

```
user@PE# show routing-options
resolution {
  rib inet.0 {
    import protocol-bgp;
  }
}
```



## Verification

Confirm that the configuration is working properly by running the following commands:

- `show route`
- `show route forwarding-table`
- `show route resolution`

SEE ALSO

| [Example: Configuring Route Resolution on Route Reflectors](#) | 286

## Example: Configuring Route Resolution on Route Reflectors

### IN THIS SECTION

- [Requirements](#) | 286
- [Overview](#) | 287
- [Configuration](#) | 288
- [Verification](#) | 289

This example shows how to change the default resolution behavior on a route reflector (RR) to use inet.0 for next-hop resolution instead of inet.3.

## Requirements

Before you begin, configure a Layer 3 VPN, as shown in one of the following examples:

- [Example: Configuring Interprovider Layer 3 VPN Option A on page 424](#)
- [Example: Configuring Interprovider Layer 3 VPN Option B on page 451](#)



## Overview

One scenario for route resolution is when you have a label-switched path configured from an RR to a provider edge (PE) router, or when the PE routers only peer with the RR. This can result in routes being hidden. To resolve this issue, you can change the default resolution behavior to use `inet.0` for next-hop resolution.

By default, the `bgp.l3vpn.0` routing table stores all VPN-IPv4 unicast routes. This table is present on any router that has Layer 3 VPNs configured, including PE routers and RRs.

When a Layer 3 VPN router receives a route from another Layer 3 VPN router, it places the route into its `bgp.l3vpn.0` routing table. The route is resolved using the information in the `inet.3` routing table. This means that when BGP receives a route destined for table `bgp.l3vpn.0`, the protocol nexthop (received BGP nexthop) has its forwarding nexthop recursively determined from the `inet.3` table. The resulting route is converted into IPv4 format and redistributed to all *routing-instance-name.inet.0* routing tables if it matches the VRF import policy.

On an RR with no attached customer edge (CE) routers, the **`resolution rib bgp.l3vpn.0 resolution-ribs inet.0`** configuration causes routes in `bgp.l3vpn.0` to use the information in `inet.0` instead of `inet.3` to resolve routes. You should not use this configuration on a router that is directly attached to a CE router. In other words, do not use **`resolution rib bgp.l3vpn.0 resolution-ribs inet.0`** on a PE router.

If you want both `inet.0` and `inet.3` to be used, you must configure both, as in **`set resolution rib bgp.l3vpn.0 resolution-ribs [inet.0 inet.3]`**.

In this example, the policy **`POLICY-limit-resolve-routes`** limits the route resolution to only routes learned through IS-IS. If you omit the import policy, all routes in `inet.0` are evaluated and potentially used to resolve the protocol next hop. If you do not want to resolve against all entries, you use a policy to filter for a subset of the routes from the tables that are used for route resolution.

One common example is when you resolve against all routes in `inet.0`, except the default route (0/0).

Although the **`import`** statement is used in this configuration, no routes are imported or copied. Rather, the **`import policy-name`** configuration limits the set of possible routes that can be considered for route resolution.

The **`resolution rib bgp.l3vpn.0 resolution-ribs inet.0`** configuration is useful when a BGP RR is not in the forwarding path. In other words, there are no ingress LSPs at the RR. Consider the case where RSVP is the label signaling protocol, and RSVP is configured full mesh at the edge routers. The RR needs to be able to reflect the routes. To do so, BGP is expected to perform a route resolvability check. If a Layer 3 VPN route is received but the nexthop is not in the `inet.3` table, the route cannot be resolved. Because the router is not in the forwarding path, an effective workaround is to use the information in `inet.0`. The metric information in `inet.0` is useful for choosing the best route, even though it cannot be used for forwarding.

An alternative approach is to make sure that LSPs are provisioned to the RR. This happens automatically if you configure LDP.



## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

### Route Reflector

```
set routing-options resolution rib bgp.l3vpn.0 resolution-ribs inet.0
set routing-options resolution rib inet.0 import POLICY-limit-resolve-routes
set policy-options policy-statement POLICY-limit-resolve-routes term isis from protocol isis
set policy-options policy-statement POLICY-limit-resolve-routes term isis then accept
set policy-options policy-statement POLICY-limit-resolve-routes then reject
```

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure route resolution:

1. Configure bgp.l3vpn.0 to use the information in inet.0 instead of inet.3 to resolve routes.

```
[edit routing-options resolution rib bgp.l3vpn.0]
user@RR# set resolution-ribs inet.0
```

2. (Optional) Configure the routing policy.

```
[edit policy-options policy-statement POLICY-limit-resolve-routes]
user@RR# set term isis from protocol isis
user@RR# set term isis then accept
user@RR# set then reject
```

3. (Optional) Apply the policy.

```
[edit routing-options resolution rib inet.0]
user@RR# set import POLICY-limit-resolve-routes
```

4. If you are done configuring the device, commit the configuration.



```
[edit]
user@RR# commit
```

## Results

Confirm your configuration by issuing the **show policy-options** and **show routing-options** commands.

```
user@RR# show policy-options
policy-statement POLICY-limit-resolve-routes {
  term isis {
    from protocol isis;
    then accept;
  }
  then reject;
}
```

```
user@RR# show routing-options
resolution {
  rib bgp.l3vpn.0 {
    resolution-ribs inet.0;
  }
  rib inet.0 {
    import POLICY-limit-resolve-routes;
  }
}
```

## Verification

Confirm that the configuration is working properly by running the following commands:

- *show route*
- *show route forwarding-table*
- *show route resolution*

## SEE ALSO

*Example: Configuring BGP Route Reflectors*

[Example: Configuring Route Resolution on PE Routers](#) | 283



## Limiting the Number of Paths and Prefixes Accepted from CE Routers in Layer 3 VPNs

You can configure a maximum limit on the number of prefixes and paths that can be installed into the routing tables. Using prefix and path limits, you can curtail the number of prefixes and paths received from a CE router in a VPN. Prefix and path limits apply only to dynamic routing protocols, and are not applicable to static or interface routes.

To limit the number of paths accepted by a PE router from a CE router, include the **maximum-paths** statement:

```
maximum-paths path-limit <log-interval interval | log-only | threshold percentage>;
```

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

Specify the **log-only** option to generate warning messages only (an advisory limit). Specify the **threshold** option to generate warnings before the limit is reached. Specify the **log-interval** option to configure the minimum time interval between log messages.

There are two modes for route limits: advisory and mandatory. An advisory limit triggers warnings. A mandatory limit rejects additional routes after the limit is reached.

**NOTE:** Application of a route limit may result in unpredictable dynamic routing protocol behavior. For example, when the limit is reached and routes are rejected, BGP may not reinstall the rejected routes after the number of routes drops back below the limit. BGP sessions may need to be cleared.

To limit the number of prefixes accepted by a PE router from a CE router, include the **maximum-prefixes** statement:

```
maximum-prefixes prefix-limit <log-interval interval | log-only | threshold percentage>;
```

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

There are two modes for route limits: advisory and mandatory. An advisory limit triggers warnings. A mandatory limit rejects additional routes after the limit is reached.



**NOTE:** Application of a route limit may result in unpredictable dynamic routing protocol behavior. For example, when the limit is reached and routes are rejected, BGP may not reinstall the rejected routes after the number of routes drops back below the limit. BGP sessions may need to be cleared.

A mandatory path or prefix limit, in addition to triggering a warning message, rejects any additional paths or prefixes once the limit is reached.

**NOTE:** Setting a path or prefix limit might result in unpredictable dynamic routing protocol behavior.

You can also configure the following options for both the **maximum-paths** and **maximum-prefixes** statements:

- **log-interval**—Specify the interval at which log messages are sent. This option generates warning messages only (an advisory limit).  
Specify the **log-interval** option to configure the minimum time interval between log messages.
- **log-only**—Generate warning messages only. No limit is placed on the number of paths or prefixes stored in the routing tables.
- **threshold**—Generate warning messages after the specified percentage of the maximum paths or prefixes has been reached.

## Enabling Internet Access for Layer 3 VPNs

### IN THIS SECTION

- [Non-VRF Internet Access Through Layer 3 VPNs | 292](#)
- [Distributed Internet Access Through Layer 3 VPNs | 293](#)
- [Routing VPN and Internet Traffic Through Different Interfaces for Layer 3 VPNs | 294](#)
- [Routing VPN and Outgoing Internet Traffic Through the Same Interface and Routing Return Internet Traffic Through a Different Interface | 303](#)
- [Routing VPN and Internet Traffic Through the Same Interface Bidirectionally \(VPN Has Public Addresses\) | 304](#)



- [Routing VPN and Internet Traffic Through the Same Interface Bidirectionally \(VPN Has Private Addresses\) | 309](#)
- [Routing Internet Traffic Through a Separate NAT Device | 315](#)
- [Centralized Internet Access Through Layer 3 VPNs | 325](#)

This topic provides examples on configuring a provider edge (PE) router to provide Internet access to customer edge (CE) routers in a VPN and configuring a router to route internet traffic to CE routers through a network address translator (NAT). The method you use depends on the needs and specifications of the individual network.

## Non-VRF Internet Access Through Layer 3 VPNs

### IN THIS SECTION

- [CE Router Accesses Internet Independently of the PE Router | 292](#)
- [PE Router Provides Layer 2 Internet Service | 293](#)

Junos OS supports Internet access from a Layer 3 virtual private network (VPN). You also need to configure the **next-table** statement at the `[edit routing-instances routing-instance-name routing-options static route]` hierarchy level. When configured, this statement can point a default route from the VPN table (routing instance) to the main routing table (default instance) inet.0. The main routing table stores all Internet routes and is where final route resolution occurs.


The following sections describe ways to provide Internet access to a CE router in a Layer 3 VPN without using the VPN routing and forwarding (VRF) interface. Because these methods effectively bypass the Layer 3 VPN, they are not discussed in detail.

### CE Router Accesses Internet Independently of the PE Router

In this configuration, the PE router does not provide the Internet access. The CE router sends Internet traffic either to another service provider, or to the same service provider but a different router. The PE router handles Layer 3 VPN traffic only (see [Figure 28 on page 293](#)).




Figure 28: PE Router Does Not Provide Internet Access

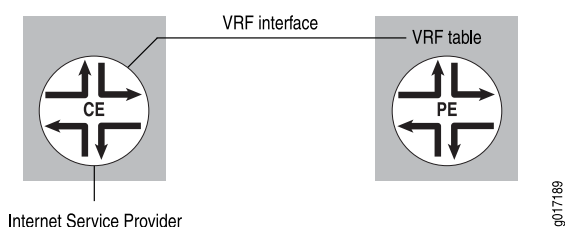

### PE Router Provides Layer 2 Internet Service

In this configuration, the PE router acts as a Layer 2 device, providing a Layer 2 connection (such as circuit cross-connect [CCC]) to another router that has a full set of Internet routes. The CE router can use just one physical interface and two logical interfaces to the PE router, or it can use multiple physical interfaces to the PE router (see [Figure 29 on page 293](#)).

Figure 29: PE Router Connects to a Router Connected to the Internet

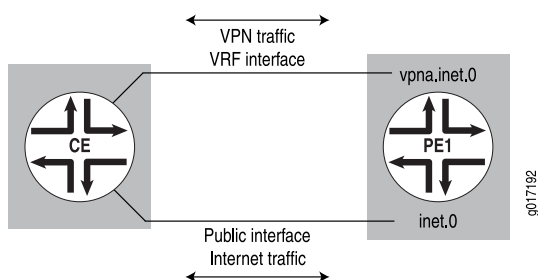

## Distributed Internet Access Through Layer 3 VPNs

In this scenario, the PE routers provide Internet access to the CE routers. In the examples that follow, it is assumed that the Internet routes (or defaults) are present in the `inet.0` table of the PE routers that provide Internet access to selected CE routers.

When accessing the Internet from a VPN, Network Address Translation (NAT) must be performed between the VPN's private addresses and the public addresses used on the Internet unless the VPN is using the public address space. This section includes several examples of how to provide Internet access for VPNs, most of which require that the CE routers perform the address translation. The [“Routing Internet Traffic Through a Separate NAT Device” on page 315](#) example, however, requires that the service provider supply the NAT functionality using a NAT device connected to the PE router.

In all of the examples, the VPN's public IP address pool (whose entries correspond to the translated private addresses) must be added to the `inet.0` table and propagated to the Internet routers to receive reverse traffic from public destinations.




## Routing VPN and Internet Traffic Through Different Interfaces for Layer 3 VPNs

### IN THIS SECTION

- Configuring Interfaces on Router PE1 | 295
- Configuring Routing Options on Router PE1 | 296
- Configuring BGP, IS-IS, and LDP Protocols on Router PE1 | 296
- Configuring a Routing Instance on Router PE1 | 297
- Configuring Policy Options on Router PE1 | 298
- Traffic Routed by Different Interfaces: Configuration Summarized by Router | 299

In this example, VPN and Internet traffic are routed through different interfaces. The CE router sends the VPN traffic through the VPN interface and sends the Internet traffic through a separate interface that is part of the main routing table on Router PE1 (the CE router can use either one physical interface with two logical units or two physical interfaces). NAT also occurs on the CE router (see [Figure 30 on page 294](#)).


**Figure 30: Routing VPN and Internet Traffic Through Different Interfaces**

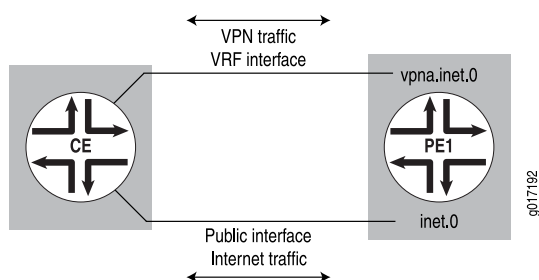

The PE router is configured to install and advertise the public IP address pool for the VPN to other core routers (for return traffic). The VPN traffic is routed normally. [Figure 31 on page 295](#) illustrates the PE router's VPN configuration.



Figure 31: Example of Internet Traffic Routed Through Separate Interfaces

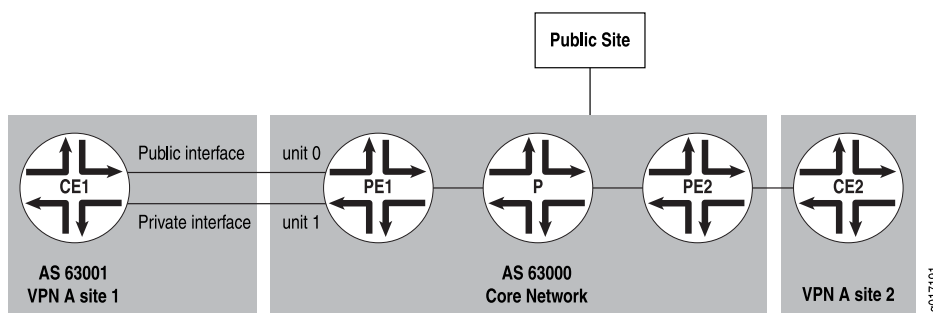

The configuration in this example has the following features:

- Router PE1 uses two logical interfaces to connect to Router CE1 using Frame Relay encapsulation.
- The routing protocol between Router PE1 and Router CE1 is EBGp.
- Router CE1's public IP address pool is **10.12.1.1** through **10.12.1.254 (10.12.1.0/24)**.
- The **next-hop-self** setting is derived from the **fix-nh policy** statement on Router PE1. PE routers are forced to use **next-hop-self** so that next-hop resolution is done only for the PE router's loopback address for non-VPN routes (by default, VPN-Internet Protocol version 4 [IPv4] routes are sent by means of **next-hop-self**).

You can configure Router CE1 with a static default route pointing to its public interface for everything else.

The following sections show how to route VPN and Internet traffic through different interfaces:

## Configuring Interfaces on Router PE1

Configure an interface to handle VPN traffic and an interface to handle Internet traffic:

```
[edit]
interfaces {
  t3-0/2/0 {
    dce;
    encapsulation frame-relay;
    unit 0 {
      description "to CE1 VPN interface";
      dlci 10;
      family inet {
        address 192.168.197.13/30;
      }
    }
    unit 1 {
```



```

        description "to CE1 public interface";
        dlci 20;
        family inet {
            address 192.168.198.201/30;
        }
    }
}

```

## Configuring Routing Options on Router PE1

Configure a static route on Router PE1 to install a route to the CE router's public IP address pool in inet.0:

```

[edit]
routing-options {
    static {
        route 10.12.1.0/24 next-hop 192.168.198.202;
    }
}

```

## Configuring BGP, IS-IS, and LDP Protocols on Router PE1

Configure BGP on Router PE1 to allow non-VPN and VPN peering and to advertise the VPN's public IP address pool:

```

[edit]
protocols {
    bgp {
        group pe-pe {
            type internal;
            local-address 10.255.14.171;
            family inet {
                any;
            }
            family inet-vpn {
                any;
            }
            export [fix-nh redist-static];
            neighbor 10.255.14.177;
            neighbor 10.255.14.179;
        }
    }
}

```



```

    }
}

```

Configure IS-IS on Router PE1 to allow access to internal routes:

```

[edit protocols]
isis {
    level 1 disable;
    interface so-0/0/0.0;
    interface lo0.0;
}

```

Configure LDP on Router PE1 to tunnel VPN routes:

```

[edit protocols]
ldp {
    interface so-0/0/0.0;
}

```

## Configuring a Routing Instance on Router PE1

Configure a routing instance on Router PE1:

```

[edit]
routing-instances {
    vpna {
        instance-type vrf;
        interface t3-0/2/0.0;
        route-distinguisher 10.255.14.171:100;
        vrf-import vpna-import;
        vrf-export vpna-export;
        protocols {
            bgp {
                group to-CE1 {
                    peer-as 63001;
                    neighbor 192.168.197.14;
                }
            }
        }
    }
}

```



## Configuring Policy Options on Router PE1

You need to configure policy options on Router PE1. The **fix-nh** policy statement sets **next-hop-self** for all non-VPN routes:

```
[edit]
policy-options {
  policy-statement fix-nh {
    then {
      next-hop self;
    }
  }
}
```

The **redist-static** policy statement advertises the VPN's public IP address pool:

```
[edit policy-options]
policy-statement redist-static {
  term a {
    from {
      protocol static;
      route-filter 10.12.1.0/24 exact;
    }
    then accept;
  }
  term b {
    then reject;
  }
}
```

Configure import and export policies for **vpna**:

```
[edit policy-options]
policy-statement vpna-import {
  term a {
    from {
      protocol bgp;
      community vpna-comm;
    }
    then accept;
  }
  term b {
    then reject;
  }
}
```



```

    }
}
policy-statement vpn-export {
    term a {
        from protocol bgp;
        then {
            community add vpn-comm;
            accept;
        }
    }
    term b {
        then reject;
    }
}
community vpn-comm members target:63000:100;

```

## Traffic Routed by Different Interfaces: Configuration Summarized by Router

### Router PE1

#### Interfaces

```

interfaces {
    t3-0/2/0 {
        dce;
        encapsulation frame-relay;
        unit 0 {
            description "to CE1 VPN interface";
            dlci 10;
            family inet {
                address 192.168.197.13/30;
            }
        }
        unit 1 {
            description "to CE1 public interface";
            dlci 20;
            family inet {
                address 192.168.198.201/30;
            }
        }
    }
}

```



## Routing Options

```
routing-options {  
  static {  
    route 10.12.1.0/24 next-hop 192.168.198.202;  
  }  
}
```

## BGP Protocol

```
protocols {  
  bgp {  
    group pe-pe {  
      type internal;  
      local-address 10.255.14.171;  
      family inet {  
        any;  
      }  
      family inet-vpn {  
        any;  
      }  
      export [ fix-nh redist-static];  
      neighbor 10.255.14.177;  
      neighbor 10.255.14.179;  
    }  
  }  
}
```

## IS-IS Protocol

```
isis {  
  level 1 disable;  
  interface so-0/0/0.0;  
  interface lo0.0;  
}
```

## LDP Protocol



```
ldp {
  interface so-0/0/0.0;
}
```

## Routing Instance

```
routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpna-import;
    vrf-export vpna-export;
    protocols {
      bgp {
        group to-CE1 {
          peer-as 63001;
          neighbor 192.168.197.14;
        }
      }
    }
  }
}
```

## Policy Options/Policy Statements

```
policy-options {
  policy-statement fix-nh {
    then {
      next-hop self;
    }
  }
  policy-statement redist-static {
    term a {
      from {
        protocol static;
        route-filter 10.12.1.0/24 exact;
      }
    }
  }
}
```



```

    }
    then accept;
  }
  term b {
    then reject;
  }
}

```

### Import and Export Policies

```

policy-statement vpna-import {
  term a {
    from {
      protocol bgp;
      community vpna-comm;
    }
    then accept;
  }
  term b {
    then reject;
  }
}
policy-statement vpna-export {
  term a {
    from protocol bgp;
    then {
      community add vpna-comm;
      accept;
    }
  }
  term b {
    then reject;
  }
}
community vpna-comm members target:63000:100;

```




## Routing VPN and Outgoing Internet Traffic Through the Same Interface and Routing Return Internet Traffic Through a Different Interface

### IN THIS SECTION

- [Configuration for Router PE1 | 303](#)

In this example, the CE router sends VPN and Internet traffic through the same interface but receives return Internet traffic through a different interface. The PE router has a default route in the VRF table pointing to the main routing table inet.0. It routes the VPN public IP address pool (return Internet traffic) through a different interface in inet.0 (see [Figure 32 on page 303](#)). The CE router still performs NAT functions.

**Figure 32: VPN and Outgoing Internet Traffic Routed Through the Same Interface and Return Internet Traffic Routed Through a Different Interface**

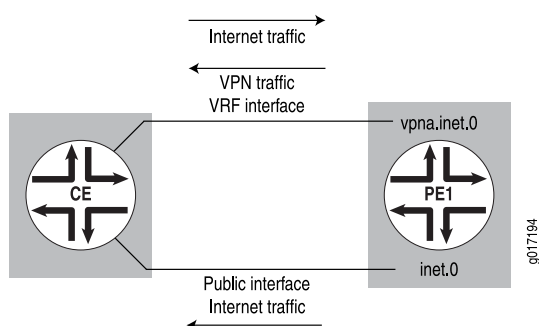

The following section shows how to route VPN and outgoing Internet traffic through the same interface and routing return Internet traffic through a different interface:

### Configuration for Router PE1

This example has the same configuration as Router PE1 in [“Routing VPN and Internet Traffic Through Different Interfaces for Layer 3 VPNs” on page 294](#). It uses the topology shown in [“Routing VPN and Internet Traffic Through Different Interfaces for Layer 3 VPNs” on page 294](#). The default route to the VPN routing table is configured differently. At the `[edit routing-instances routing-instance-name routing-options]` hierarchy level, you configure a default static route that is installed in `vpna.inet.0` and points to `inet.0` for resolution:

```
[edit]
routing-instances {
```



```

vpna {
  instance-type vrf;
  interface t3-0/2/0.0;
  route-distinguisher 10.255.14.171:100;
  vrf-import vpna-import;
  vrf-export vpna-export;
  routing-options {
    static {
      route 0.0.0.0/0 next-table inet.0;
    }
  }
  protocols {
    bgp {
      group to-CE1 {
        peer-as 63001;
        neighbor 192.168.197.14;
      }
    }
  }
}

```

You also need to change the configuration of Router CE1 (from the configuration that works with the configuration for Router PE1 described in [“Routing VPN and Internet Traffic Through Different Interfaces for Layer 3 VPNs” on page 294](#)) to account for the differences in the configuration of the PE routers.

## Routing VPN and Internet Traffic Through the Same Interface Bidirectionally (VPN Has Public Addresses)


### IN THIS SECTION

- [Configuring Routing Options on Router PE1 | 305](#)
- [Configuring Routing Protocols on Router PE1 | 306](#)
- [Configuring the Routing Instance on Router PE1 | 306](#)
- [Traffic Routed Through the Same Interface Bidirectionally: Configuration Summarized by Router | 307](#)



This section shows how to configure a single logical interface to handle VPN and Internet traffic traveling both to and from the Internet and the CE router. This interface can handle both VPN and Internet traffic as long as there are no private addresses in the VPN. The VPN routes received from the CE router are added to the main routing table inet.0 by means of routing table groups. This allows the PE router to attract the return traffic from the Internet (see [Figure 33 on page 305](#)).

**Figure 33: Interface Configured to Carry Both Internet and VPN Traffic**

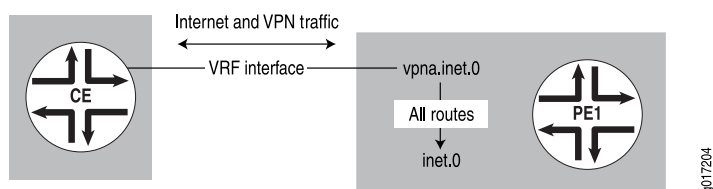

In this example, the CE router does not need to perform NAT, because all the VPN routes are public. The CE router has a single interface to the PE router, to which it advertises VPN routes. The PE router has a default route in the VRF table pointing to the main routing table inet.0. The PE router also imports VPN routes received from the CE router into inet.0 by means of routing table groups.

The following configuration for Router PE1 uses the same topology as in [“Routing VPN and Internet Traffic Through Different Interfaces for Layer 3 VPNs” on page 294](#). This configuration uses a single logical interface (instead of two) between Router PE1 and Router CE1.

The following sections show how to route VPN and Internet traffic through the same interface bidirectionally (VPN has public addresses):

### Configuring Routing Options on Router PE1

Configure a routing table group definition for installing VPN routes in routing table groups vpna.inet.0 and inet.0:

```
[edit]
routing-options {
  rib-groups {
    vpna-to-inet0 {
      import-rib [ vpna.inet.0 inet.0 ];
    }
  }
}
```



## Configuring Routing Protocols on Router PE1

Configure MPLS, BGP, IS-IS, and LDP protocols on Router PE1. This configuration does not include the **policy redistrib-static** statement at the **[edit protocols bgp group pe-pe]** hierarchy level. The VPN routes are sent directly to IBGP.

Configure BGP on Router PE1 to allow non-VPN and VPN peering, and to advertise the VPN's public IP address pool:

```
[edit]
protocols {
  mpls {
    interface so-0/0/0.0;
  }
  bgp {
    group pe-pe {
      type internal;
      local-address 10.255.14.171;
      family inet {
        any;
      }
      family inet-vpn {
        any;
      }
      export fix-nh;
      neighbor 10.255.14.177;
      neighbor 10.255.14.173;
    }
  }
  isis {
    level 1 disable;
    interface so-0/0/0.0;
    interface lo0.0;
  }
  ldp {
    interface so-0/0/0.0;
  }
}
```

## Configuring the Routing Instance on Router PE1

This section describes how to configure the routing instance on Router PE1. The static route defined in the **routing-options** statement directs Internet traffic from the CE router to the inet.0 routing table. The routing table group defined by the **rib-group vpna-to-inet0** statement adds the VPN routes to inet.0.



Configure the routing instance on Router PE1:

```
[edit]
routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        route 0.0.0.0/0 next-table inet.0;
      }
    }
  }
  protocols {
    bgp {
      group to-CE1 {
        family inet {
          unicast {
            rib-group vpna-to-inet0;
          }
        }
      }
      peer-as 63001;
      neighbor 192.168.197.14;
    }
  }
}
```

You must configure Router CE1 to forward all traffic to Router PE1 using a default route. Alternatively, the default route can be advertised from Router PE1 to Router CE1 with EBGp.

### Traffic Routed Through the Same Interface Bidirectionally: Configuration Summarized by Router

#### Router PE1

This example uses the same configuration as in [“Routing VPN and Internet Traffic Through Different Interfaces for Layer 3 VPNs” on page 294](#). This configuration uses a single logical interface (instead of two) between Router PE1 and Router CE1.

#### Routing Options



```

routing-options {
  rib-groups {
    vpna-to-inet0 {
      import-rib [ vpna.inet.0 inet.0 ];
    }
  }
}

```

## Routing Protocols

```

protocols {
  mpls {
    interface so-0/0/0.0;
  }
  bgp {
    group pe-pe {
      type internal;
      local-address 10.255.14.171;
      family inet {
        any;
      }
      family inet-vpn {
        any;
      }
      export fix-nh;
      neighbor 10.255.14.177;
      neighbor 10.255.14.173;
    }
  }
  isis {
    level 1 disable;
    interface so-0/0/0.0;
    interface lo0.0;
  }
  ldp {
    interface so-0/0/0.0;
  }
}

```

## Routing Instance



```

routing-instances {
  vpn {
    instance-type vrf;
    interface t3-0/2/0.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpn-import;
    vrf-export vpn-export;
    routing-options {
      static {
        route 0.0.0.0/0 next-table inet.0;
      }
    }
    protocols {
      bgp {
        group to-CE1 {
          family inet {
            unicast {
              rib-group vpn-to-inet0;
            }
          }
        }
        peer-as 63001;
        neighbor 192.168.197.14;
      }
    }
  }
}

```

## Routing VPN and Internet Traffic Through the Same Interface Bidirectionally (VPN Has Private Addresses)

### IN THIS SECTION

- [Configuring Routing Options for Router PE1 | 310](#)
- [Configuring a Routing Instance for Router PE1 | 311](#)




- [Configuring Policy Options for Router PE1 | 312](#)
- [Traffic Routed by the Same Interface Bidirectionally \(VPN Has Private Addresses\): Configuration Summarized by Router | 313](#)

The example in this section shows how to route VPN and Internet traffic through the same interface in both directions (from the CE router to the Internet and from the Internet to the CE router). The VPN in this example has private addresses. If you can configure EBGp on the CE router, you can configure a PE router using the configuration outlined in [“Routing VPN and Internet Traffic Through the Same Interface Bidirectionally \(VPN Has Public Addresses\)” on page 304](#), even if the VPN has private addresses.

In the example described in this section, the CE router uses separate communities to advertise its VPN routes and public routes. The PE router selectively imports only the public routes into the inet.0 routing table. This configuration ensures that return traffic from the Internet uses the same interface between the PE and CE routers as that used by VPN traffic going out to public Internet addresses (see [Figure 34 on page 310](#)).

**Figure 34: VPN and Internet Traffic Routed Through the Same Interface**

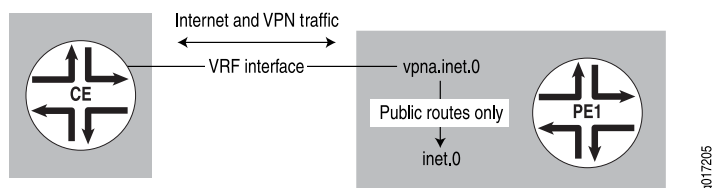

In this example, the CE router has one interface and a BGP session with the PE router, and it tags VPN routes and Internet routes with different communities. The PE router has one interface, selectively imports routes for the VPN's public IP address pool into inet.0, and has a default route in the VRF routing table pointing to inet.0.

The following sections show how to route VPN and Internet traffic through the same interface bidirectionally (VPN has private addresses):

### Configuring Routing Options for Router PE1

On Router PE1, configure a routing table group to install VPN routes in the vpna.inet.0 and inet.0 routing tables:

```
[edit]
routing-options {
  rib-groups {
```



```

    vpna-to-inet0 {
        import-policy import-public-addr-to-inet0;
        import-rib [ vpna.inet.0 inet.0 ];
    }
}

```

## Configuring a Routing Instance for Router PE1

On Router PE1, configure a routing instance. As part of the configuration for the routing instance, configure a static route that is installed in `vpna.inet.0` and is pointed at `inet.0` for resolution.

```

[edit]
routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        route 0.0.0.0/0 next-table inet.0;
      }
    }
  }
}

```

At the `[edit routing-instances vpna protocols bgp]` hierarchy level, configure a policy (**import-public-addr-to-inet0**) to import public routes into `inet.0` and a routing table group (**vpna-to-inet0**) to allow BGP to install routes into multiple routing tables (`vpna.inet.0` and `inet.0`):

```

[edit routing-instances vpna]
protocols {
  bgp {
    group to-CE1 {
      import import-public-addr-to-inet0;
      family inet {
        unicast {
          rib-group vpna-to-inet0;
        }
      }
    }
  }
}

```



```

        peer-as 63001;
        neighbor 192.168.197.14;
    }
}
}

```

## Configuring Policy Options for Router PE1

Configure the policy options for Router PE1 to accept all routes initially (**term a**) and then to install routes with a **public-comm** community into routing table inet.0 (**term b**):

```

[edit]
policy-options {
  policy-statement import-public-addr-to-inet0 {
    term a {
      from {
        protocol bgp;
        rib vpna.inet.0;
        community [ public-comm private-comm ];
      }
      then accept;
    }
    term b {
      from {
        protocol bgp;
        community public-comm;
      }
      to rib inet.0;
      then accept;
    }
    term c {
      then reject;
    }
  }
  community private-comm members target:1:333;
  community public-comm members target:1:111;
  community vpna-comm members target:63000:100;
}

```



## Traffic Routed by the Same Interface Bidirectionally (VPN Has Private Addresses): Configuration Summarized by Router

### Router PE1

#### Routing Options

```
[edit]
routing-options {
  rib-groups {
    vpna-to-inet0 {
      import-policy import-public-addr-to-inet0;
      import-rib [ vpna.inet.0 inet.0 ];
    }
  }
}
```

#### Routing Instances

```
[edit]
routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        route 0.0.0.0/0 next-table inet.0;
      }
    }
  }
}
```

#### Routing Instances Protocols BGP

```
[edit routing-instances vpna]
```



```

protocols {
  bgp {
    group to-CE1 {
      family inet {
        unicast {
          rib-group vpna-to-inet0;
        }
      }
    }
    peer-as 63001;
    neighbor 192.168.197.14;
  }
}

```

## Policy Options

```

[edit]
policy-options {
  policy-statement import-public-addr-to-inet0 {
    term a {
      from {
        protocol bgp;
        rib vpna.inet.0;
        community [ public-comm private-comm ];
      }
      then accept;
    }
    term b {
      from {
        protocol bgp;
        community public-comm;
      }
      to rib inet.0;
      then accept;
    }
    term c {
      then reject;
    }
  }
  community private-comm members target:1:333;
}

```



```

community public-comm members target:1:111;
community vpna-comm members target:63000:100;
}

```


## Routing Internet Traffic Through a Separate NAT Device

### IN THIS SECTION

- Requirements | 316
- Overview | 316
- Configuration | 316

In this example, the CE router does not perform NAT. It sends both VPN and Internet traffic over the same interface to the PE router. The PE router is connected to an NAT device by means of two interfaces. One interface is configured in the PE router's VRF table and points to a VPN interface on the NAT device, which can route Internet traffic for the VPN. The other interface is in a default instance; for example, part of public routing table inet.0. There can be a single physical connection between the PE router and the NAT device and multiple logical connections—one for each VRF table and another interface—as part of the global routing table (see [Figure 35 on page 315](#)).

**Figure 35: Internet Traffic Routed Through a Separate NAT Device**

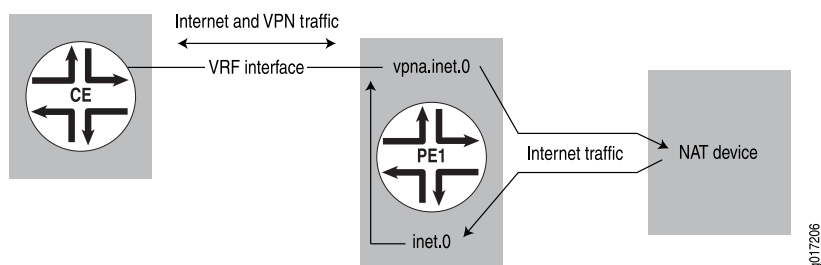



## Requirements

This example uses the following hardware and software components:


- M Series routers
- Junos OS Release 9.3 or later

## Overview

This example's topology expands upon that illustrated in [“Routing VPN and Internet Traffic Through Different Interfaces for Layer 3 VPNs” on page 294](#). The CE router sends both VPN and Internet traffic to Router PE1. VPN traffic is routed based on the VPN routes received by Router PE1. Traffic for everything else is sent to the NAT device using Router PE1's private interface to the NAT device, which then translates the private addresses and sends the traffic back to Router PE1 using that router's public interface (see [Figure 36 on page 316](#)).

## Topology

Figure 36: Internet Traffic Routed Through a NAT Example Topology

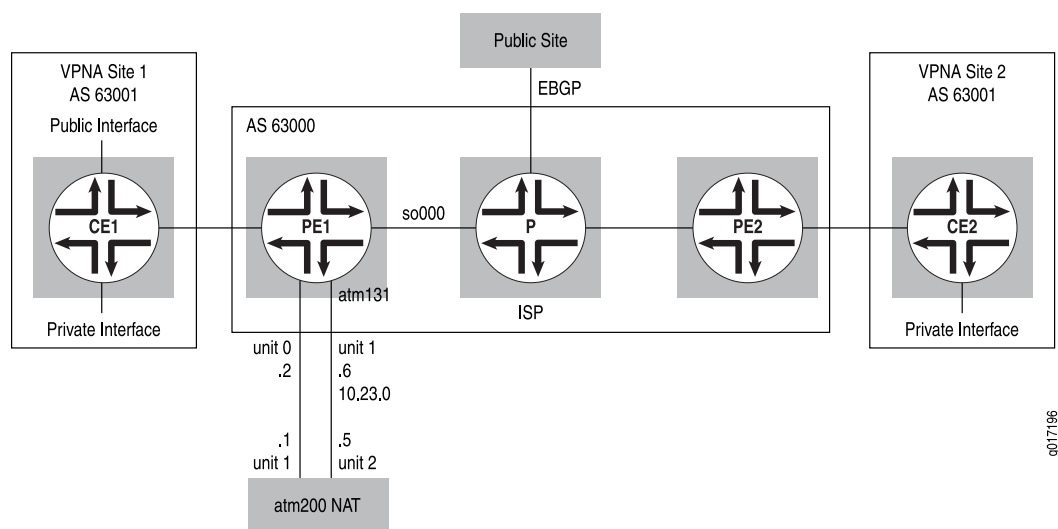

## Configuration

### IN THIS SECTION

- [Configuring Interfaces on Router PE1 | 317](#)
- [Configuring Routing Options for Router PE1 | 318](#)
- [Configuring Routing Protocols on Router PE1 | 318](#)



- [Configuring a Routing Instance on Router PE1 | 320](#)
- [Results | 322](#)

To route Internet traffic through a separate NAT device, perform these tasks:

### ***Configuring Interfaces on Router PE1***

#### **Step-by-Step Procedure**

1. Configure an interface for VPN traffic from Router CE1:

```
[edit]
interfaces {
  t3-0/2/0 {
    dce;
    encapsulation frame-relay;
    unit 0 {
      description "to CE1 VPN interface";
      dlci 10;
      family inet {
        address 192.168.197.13/30;
      }
    }
  }
}
```

2. Configure an interface for VPN traffic to and from the NAT device (unit 0), and an interface for Internet traffic to and from the NAT device (unit 1):

```
[edit]
interfaces {
  at-1/3/1 {
    atm-options {
      vpi 1 maximum-vcs 255;
    }
    unit 0 {
      description "to NAT VPN interface";
      vci 1.100;
      family inet {
        address 10.23.0.2/32 {
          destination 10.23.0.1;
        }
      }
    }
  }
}
```



```

    }
  }
}
unit 1 {
  description "to NAT public interface";
  vci 1.101;
  family inet {
    address 10.23.0.6/32 {
      destination 10.23.0.5;
    }
  }
}
}
}

```

### **Configuring Routing Options for Router PE1**

#### **Step-by-Step Procedure**

1. Configure a static route on Router PE1 to direct Internet traffic to the CE router through the NAT device. Router PE1 distributes this route to the Internet.

```

[edit]
routing-options {
  static {
    route 10.12.1.0/24 next-hop 10.23.0.5;
  }
}

```

### **Configuring Routing Protocols on Router PE1**

#### **Step-by-Step Procedure**

Configure the following routing protocols on Router PE1:

1. Configure MPLS on Router PE1. Include the NAT device's VPN interface in the VRF table.

```

[edit]
protocols {
  mpls {
    interface so-0/0/0.0;
    interface at-1/3/1.0;
  }
}

```



2. Configure BGP on Router PE1. Include a policy to advertise the public IP address pool:

```
[edit]
protocols {
  bgp {
    group pe-pe {
      type internal;
      local-address 10.255.14.171;
      family inet {
        any;
      }
      family inet-vpn {
        any;
      }
      export [ fix-nh redist-static ];
      neighbor 10.255.14.177;
      neighbor 10.255.14.173;
    }
  }
}
```

3. Configure IS-IS on Router PE1:

```
[edit]
protocols {
  isis {
    level 1 disable;
    interface so-0/0/0.0;
    interface lo0.0;
  }
}
```

4. Configure LDP on Router PE1:

```
[edit]
protocols {
  ldp {
    interface so-0/0/0.0;
  }
}
```



## Configuring a Routing Instance on Router PE1

### Step-by-Step Procedure

Configure the Layer 3 VPN routing instance on Router PE1:

1. Configure a routing instance on Router PE1. As part of the routing instance configuration, under **routing-options**, configure a static default route in `vpna.inet.0` pointing to the NAT device's VPN interface (this directs all non-VPN traffic to the NAT device):

```
[edit]
routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
    interface at-1/3/1.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        route 0.0.0.0/0 next-hop 10.23.0.1;
      }
    }
    protocols {
      bgp {
        group to-CE1 {
          peer-as 63001;
          neighbor 192.168.197.14;
        }
      }
    }
  }
}
```

2. Configure the routing policy for the Layer 3 VPN routing instance on Router PE1:

```
policy-options {
  policy-statement fix-nh {
    then {
      next-hop self;
    }
  }
  policy-statement redist-static {
    term a {
```



```

        from {
            protocol static;
            route-filter 10.12.1.0/24 exact;
        }
        then accept;
    }
    term b {
        from protocol bgp;
        then accept;
    }
    term c {
        then accept;
    }
}
policy-statement vpna-import {
    term a {
        from {
            protocol bgp;
            community vpna-comm;
        }
        then accept;
    }
    term b {
        then reject;
    }
}
policy-statement vpna-export {
    term a {
        from protocol bgp;
        then {
            community add vpna-comm;
            accept;
        }
    }
    term b {
        then reject;
    }
}
community vpna-comm members target:63000:100;
}

```



## Results

From configuration mode on Router PE1, confirm your configuration by entering the show interfaces, show routing-options, show protocols, show routing-instances and show policy-options commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
interfaces {
  t3-0/2/0 {
    dce;
    encapsulation frame-relay;
    unit 0 {
      description "to CE1 VPN interface";
      dlci 10;
      family inet {
        address 192.168.197.13/30;
      }
    }
  }
  at-1/3/1 {
    atm-options {
      vpi 1 maximum-vcs 255;
    }
    unit 0 {
      description "to NAT VPN interface";
      vci 1.100;
      family inet {
        address 10.23.0.2/32 {
          destination 10.23.0.1;
        }
      }
    }
    unit 1 {
      description "to NAT public interface";
      vci 1.101;
      family inet {
        address 10.23.0.6/32 {
          destination 10.23.0.5;
        }
      }
    }
  }
}
```



```

user@PE1# show routing-options
routing-options {
  static {
    route 10.12.1.0/24 next-hop 10.23.0.5;
  }
}

```

```

user@PE1# show protocols
protocols {
  mpls {
    interface so-0/0/0.0;
    interface at-1/3/1.0;
  }
  bgp {
    group pe-pe {
      type internal;
      local-address 10.255.14.171;
      family inet {
        any;
      }
      family inet-vpn {
        any;
      }
      export [ fix-nh redist-static ];
      neighbor 10.255.14.177;
      neighbor 10.255.14.173;
    }
  }
  isis {
    level 1 disable;
    interface so-0/0/0.0;
    interface lo0.0;
  }
  ldp {
    interface so-0/0/0.0;
  }
}

```

```

user@PE1# show routing-instances
routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
  }
}

```



```

interface at-1/3/1.0;
route-distinguisher 10.255.14.171:100;
vrf-import vpna-import;
vrf-export vpna-export;
routing-options {
    static {
        route 0.0.0.0/0 next-hop 10.23.0.1;
    }
}
protocols {
    bgp {
        group to-CE1 {
            peer-as 63001;
            neighbor 192.168.197.14;
        }
    }
}
}
}

```

```

user@PE1# show policy-options
policy-options {
    policy-statement fix-nh {
        then {
            next-hop self;
        }
    }
    policy-statement redist-static {
        term a {
            from {
                protocol static;
                route-filter 10.12.1.0/24 exact;
            }
            then accept;
        }
        term b {
            from protocol bgp;
            then accept;
        }
        term c {
            then accept;
        }
    }
    policy-statement vpna-import {

```



```

term a {
  from {
    protocol bgp;
    community vpna-comm;
  }
  then accept;
}
term b {
  then reject;
}
}
policy-statement vpna-export {
  term a {
    from protocol bgp;
    then {
      community add vpna-comm;
      accept;
    }
  }
  term b {
    then reject;
  }
}
community vpna-comm members target:63000:100;
}

```

## Centralized Internet Access Through Layer 3 VPNs

### IN THIS SECTION

- [Routing Internet Traffic Through a Hub CE Router | 326](#)
- [Routing Internet Traffic Through Multiple CE Routers | 331](#)

This section describes several ways to configure a CE router to act as a central site for Internet access. Internet traffic from other sites (CE routers) is routed to the hub CE router (which also performs NAT) using that router's VPN interface. The hub CE router then forwards the traffic to a PE router connected to the Internet through another interface identified in the inet.0 table. The hub CE router can advertise a default route to the spoke CE routers. The disadvantage of this type of configuration is that all traffic has



to go through the central CE router before going to the Internet, causing network delays if this router receives too much traffic. However, in a corporate network, traffic might have to be routed to a central site because most corporate networks separate the VPN from the Internet by means of a single firewall.

This section includes the following examples:


## Routing Internet Traffic Through a Hub CE Router

### IN THIS SECTION

- [Configuring a Routing Instance on Router PE1 | 327](#)
- [Configuring Policy Options on Router PE1 | 328](#)
- [Internet Traffic Routed by a Hub CE Router: Configuration Summarized by Router | 329](#)

In this example, Internet traffic is routed through a hub CE router. The hub CE router has two interfaces to the hub PE router: a VPN interface and a public interface. It performs NAT on traffic forwarded from the hub PE router through the VPN interface and forwards that traffic from its public interface back to the hub PE router. The hub PE router has a static default route in its VRF table pointing to the hub CE router's VPN interface. It announces this default route to the rest of the VPN, attracting all non-VPN traffic to the hub CE route. The hub PE router also installs and distributes the VPN's public IP address space (see [Figure 37 on page 326](#)).


**Figure 37: Internet Access Through a Hub CE Router Performing NAT**

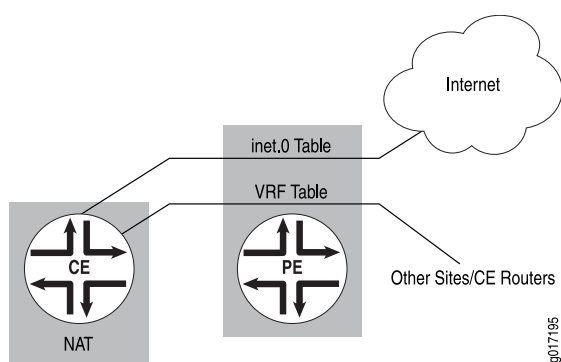

The configuration for this example is almost identical to that described in [“Routing Internet Traffic Through a Separate NAT Device” on page 315](#). The difference is that Router PE1 is configured to announce a static default route to the other CE routers (see [Figure 38 on page 327](#)).



Figure 38: Internet Access Provided Through a Hub CE Router

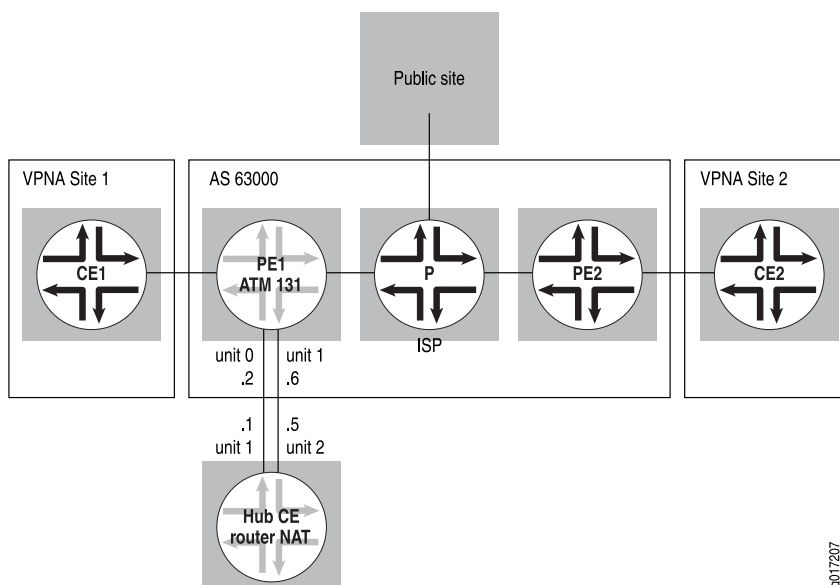

The following sections show how to configure centralized Internet access by routing Internet traffic through a hub CE router:

### Configuring a Routing Instance on Router PE1

Configure a routing instance for Router PE1. As part of this configuration, under **routing-options**, configure a default static route (**route 0.0.0.0/0**) to be installed in **vpna.inet.0**, and point the route to the hub CE router's VPN interface (**10.23.0.1**). Also, configure BGP under the routing instance to export the default route to the local CE router:

```
[edit]
routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
    interface at-1/3/1.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        route 0.0.0.0/0 next-hop 10.23.0.1;
      }
    }
  }
  protocols {
    bgp {
      group to-CE1 {
```



```

        export export-default;
        peer-as 63001;
        neighbor 192.168.197.14;
    }
}
}
}
}

```

### Configuring Policy Options on Router PE1

Configure policy options on Router PE1. As part of this configuration, Router PE1 should export the static default route to all the remote PE routers in **vpna** (configured in the **policy-statement vpna-export** statement under **term b**):

```

[edit]
policy-options {
  policy-statement vpna-export {
    term a {
      from protocol bgp;
      then {
        community add vpna-comm;
        accept;
      }
    }
    term b {
      from {
        protocol static;
        route-filter 0.0.0.0/0 exact;
      }
      then {
        community add vpna-comm;
        accept;
      }
    }
    term c {
      then reject;
    }
  }
  policy-statement export-default {
    term a {
      from {
        protocol static;
        route-filter 0.0.0.0/0 exact;
      }
    }
  }
}

```



```

    }
    then accept;
  }
  term b {
    from protocol bgp;
    then accept;
  }
  term c {
    then reject;
  }
}
}

```

### ***Internet Traffic Routed by a Hub CE Router: Configuration Summarized by Router***

#### **Router PE1**

The configuration for Router PE1 is almost identical to that for the example in [“Routing Internet Traffic Through a Separate NAT Device” on page 315](#). The difference is that Router PE1 is configured to announce a static default route to the other CE routers.

#### **Routing Instance**

```

routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
    interface at-1/3/1.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        route 0.0.0.0/0 next-hop 10.23.0.1;
      }
    }
  }
  protocols {
    bgp {
      group to-CE1 {
        export export-default;
        peer-as 63001;
        neighbor 192.168.197.14;
      }
    }
  }
}

```



```

    }
  }
}
}

```

## Policy Options

```

policy-options {
  policy-statement vpn-export {
    term a {
      from protocol bgp;
      then {
        community add vpn-comm;
        accept;
      }
    }
    term b {
      from {
        protocol static;
        route-filter 0.0.0.0/0 exact;
      }
      then {
        community add vpn-comm;
        accept;
      }
    }
    term c {
      then reject;
    }
  }
  policy-statement export-default {
    term a {
      from {
        protocol static;
        route-filter 0.0.0.0/0 exact;
      }
      then accept;
    }
    term b {
      from protocol bgp;

```



```
        then accept;
    }
    term c {
        then reject;
    }
}
}
```

## Routing Internet Traffic Through Multiple CE Routers


### IN THIS SECTION

- [Configuring a Routing Instance on Router PE1 | 332](#)
- [Configuring Policy Options on Router PE1 | 333](#)
- [Configuring a Routing Instance on Router PE3 | 334](#)
- [Configuring Policy Options on Router PE3 | 334](#)
- [Routing Internet Traffic Through Multiple CE Routers: Configuration Summarized by Router | 336](#)

The example in this section is an extension of that described in [“Centralized Internet Access Through Layer 3 VPNs” on page 325](#). This example provides different exit points for different sites by means of multiple hub CE routers that perform similar functions. Each hub CE router tags the default route with a different route target and allows the spoke CE routers to select the hub site that should be used for Internet access (see [Figure 39 on page 332](#)).



Figure 39: Two Hub CE Routers Handling Internet Traffic and NAT

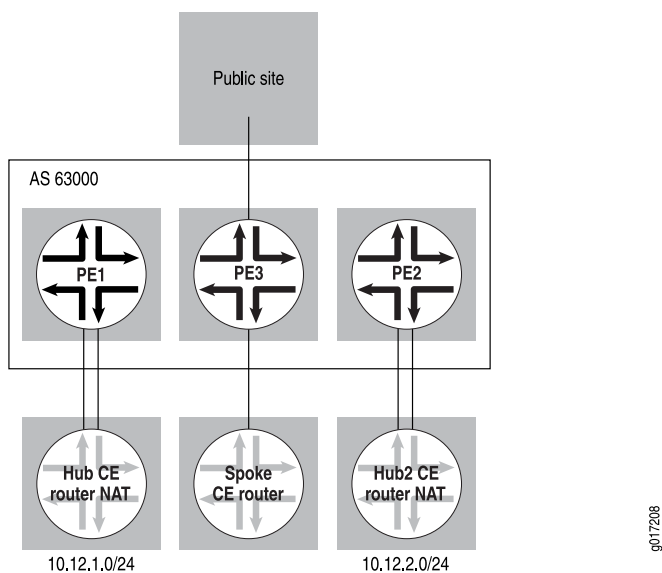

This example uses two hub CE routers that handle NAT and Internet traffic:

- Hub1 CE router tags **0/0** with community **public-comm1** (target: **1:111**)
- Hub2 CE router tags **0/0** with community **public-comm2** (target: **1:112**)

The spoke CE router in this example is configured to have a bias toward Hub2 for Internet access.

The following sections describe how to configure two hub CE routers to handle internet traffic and NAT:

### Configuring a Routing Instance on Router PE1

Configure a routing instance on Router PE1:

```
[edit]
routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
    interface at-1/3/1.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        route 0.0.0.0/0 next-hop 10.23.0.1;
      }
    }
  }
  protocols {
    bgp {
```



```

        group to-CE1 {
            export export-default;
            peer-as 63001;
            neighbor 192.168.197.14;
        }
    }
}
}
}

```

### Configuring Policy Options on Router PE1

The policy options for Router PE1 are the same as in [“Routing Internet Traffic Through a Hub CE Router” on page 326](#), but the configuration in this example includes an additional community, **public-comm1**, in the **export** statement:

```

[edit]
policy-options {
    policy-statement vpna-import {
        term a {
            from {
                protocol bgp;
                community vpna-comm;
            }
            then accept;
        }
        term b {
            then reject;
        }
    }
    policy-statement vpna-export {
        term a {
            from {
                protocol static;
                route-filter 0.0.0.0/0 exact;
            }
            then {
                community add public-comm1;
                community add vpna-comm;
                accept;
            }
        }
        term b {
            from protocol bgp;

```



```

        then {
            community add vpna-comm;
            accept;
        }
    }
    term c {
        then reject;
    }
}
community public-comm1 members target:1:111;
community public-comm2 members target:1:112;
community vpna-comm members target:63000:100;
}

```

The configuration of Router PE2 is identical to that of Router PE1 except that Router PE2 exports the default route through community **public-comm2**.

### ***Configuring a Routing Instance on Router PE3***

Configure routing instance **vpna** on Router PE3:

```

[edit]
routing-instances {
    vpna {
        instance-type vrf;
        interface t1-0/2/0.0;
        route-distinguisher 10.255.14.173:100;
        vrf-import vpna-import;
        vrf-export vpna-export;
        protocols {
            rip {
                group to-vpn12 {
                    export export-CE;
                    neighbor t1-0/2/0.0;
                }
            }
        }
    }
}
}

```

### ***Configuring Policy Options on Router PE3***

Configure the **vrf-import** policy for Router PE3 to select the Internet exit point based on the additional communities specified in [“Configuring Policy Options on Router PE1” on page 333](#):



```

[edit]
policy-options {
  policy-statement vpn-export {
    term a {
      from protocol rip;
      then {
        community add vpn-comm;
        accept;
      }
    }
    term b {
      then reject;
    }
  }
  policy-statement vpn-import {
    term a {
      from {
        protocol bgp;
        community public-comm1;
        route-filter 0.0.0.0/0 exact;
      }
      then reject;
    }
    term b {
      from {
        protocol bgp;
        community vpn-comm;
      }
      then accept;
    }
    term c {
      then reject;
    }
  }
  policy-statement export-CE {
    from protocol bgp;
    then accept;
  }
  community vpn-comm members target:69:100;
  community public-comm1 members target:1:111;
  community public-comm2 members target:1:112;
}

```



## Routing Internet Traffic Through Multiple CE Routers: Configuration Summarized by Router

### Router PE1

This configuration is an extension of the example in [“Routing Internet Traffic Through a Hub CE Router” on page 326](#). It provides different exit points for various sites by using multiple hub CE routers that perform similar functions.

### Routing Instances

```

routing-instances {
  vpna {
    instance-type vrf;
    interface t3-0/2/0.0;
    interface at-1/3/1.0;
    route-distinguisher 10.255.14.171:100;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        route 0.0.0.0/0 next-hop 10.23.0.1;
      }
    }
    protocols {
      bgp {
        group to-CE1 {
          export export-default;
          peer-as 63001;
          neighbor 192.168.197.14;
        }
      }
    }
  }
}

```

### Policy Options

```

policy-options {
  policy-statement vpna-import {
    term a {
      from {

```



```

        protocol bgp;
        community vpna-comm;
    }
    then accept;
}
term b {
    then reject;
}
}
policy-statement vpna-export {
    term a {
        from {
            protocol static;
            route-filter 0.0.0.0/0 exact;
        }
        then {
            community add public-comm1;
            community add vpna-comm;
            accept;
        }
    }
    term b {
        from protocol bgp;
        then {
            community add vpna-comm;
            accept;
        }
    }
    term c {
        then reject;
    }
}
community public-comm1 members target:1:111;
community public-comm2 members target:1:112;
community vpna-comm members target:63000:100;
}

```

### Router PE2

The configuration of Router PE2 is identical to that of Router PE1, except that Router PE2 exports the default route through community **public-comm2** (see [“Policy Options” on page 336](#)).



## Router PE3

### Routing Instances

```
routing-instances {  
  vpn {  
    instance-type vrf;  
    interface t1-0/2/0.0;  
    route-distinguisher 10.255.14.173:100;  
    vrf-import vpn-import;  
    vrf-export vpn-export;  
    protocols {  
      rip {  
        group to-vpn12 {  
          export export-CE;  
          neighbor t1-0/2/0.0;  
        }  
      }  
    }  
  }  
}
```

### Policy Options

```
policy-options {  
  policy-statement vpn-export {  
    term a {  
      from protocol rip;  
      then {  
        community add vpn-comm;  
        accept;  
      }  
    }  
    term b {  
      then reject;  
    }  
  }  
  policy-statement vpn-import {  
    term a {  
      from {  
        protocol bgp;  
      }  
    }  
  }  
}
```



```
        community public-comm1;  
        route-filter 0.0.0.0/0 exact;  
    }  
    then reject;  
}  
term b {  
    from {  
        protocol bgp;  
        community vpna-comm;  
    }  
    then accept;  
}  
term c {  
    then reject;  
}  
}  
policy-statement export-CE {  
    from protocol bgp;  
    then accept;  
}  
community vpna-comm members target:69:100;  
community public-comm1 members target:1:111;  
community public-comm2 members target:1:112;  
}
```

## Connecting Layer 3 VPNs to Layer 2 Circuits

### IN THIS SECTION

- Applications for Interconnecting a Layer 2 Circuit with a Layer 3 VPN | 340
- Example: Interconnecting a Layer 2 Circuit with a Layer 3 VPN | 340



## Applications for Interconnecting a Layer 2 Circuit with a Layer 3 VPN

MPLS-based Layer 2 services are growing in demand among enterprise and service providers. This creates new challenges related to interoperability between Layer 2 and Layer 3 services for service providers who want to provide end-to-end value-added services. There are various reasons to stitch different Layer 2 services to one another and to Layer 3 services. For example, to expand the service offerings and to expand geographically. The Junos OS has various features to address the needs of the service provider.

You can enable pseudowire services and configure a pseudowire service interface as an access point for interconnecting layer 2 circuits to layer 3 VPNs. For more information, see *Pseudowire Subscriber Logical Interfaces Overview*.

Interconnecting a Layer 2 Circuit with a Layer 3 VPN provides the following benefits:

- Interconnecting a Layer 2 Circuit with a Layer 3 VPN enables the sharing of a service provider's core network infrastructure between IP and Layer 2 circuit services, reducing the cost of providing those services. A Layer 2 MPLS circuit allows service providers to create a Layer 2 circuit service over an existing IP and MPLS backbone.
- Service providers do not have to invest in separate Layer 2 equipment to provide Layer 2 circuit service. A service provider can configure a provider edge router to run any Layer 3 protocol in addition to the Layer 2 protocols. Customers who prefer to maintain control over most of the administration of their own networks want Layer 2 circuit connections with their service provider instead of a Layer 3 VPN connection.

## Example: Interconnecting a Layer 2 Circuit with a Layer 3 VPN

### IN THIS SECTION

- [Requirements | 341](#)
- [Overview and Topology | 341](#)
- [Configuration | 342](#)
- [Verifying the Layer 2 Circuit to Layer 3 VPN Interconnection | 355](#)

This example provides a step-by-step procedure and commands for configuring and verifying a Layer 2 circuit to Layer 3 VPN interconnection. It contains the following sections:



## Requirements


This example uses the following hardware and software components:

- Junos OS Release 9.3 or later
- 3 MX Series 5G Universal Routing Platforms
- 1 M Series Multiservice Edge Router
- 1 T Series Core Router
- 1 EX Series Ethernet Switch

## Overview and Topology

The physical topology of a Layer 2 circuit to Layer 3 VPN interconnection is shown in [Figure 40 on page 341](#).


**Figure 40: Physical Topology of a Layer 2 Circuit to Layer 3 VPN Interconnection**

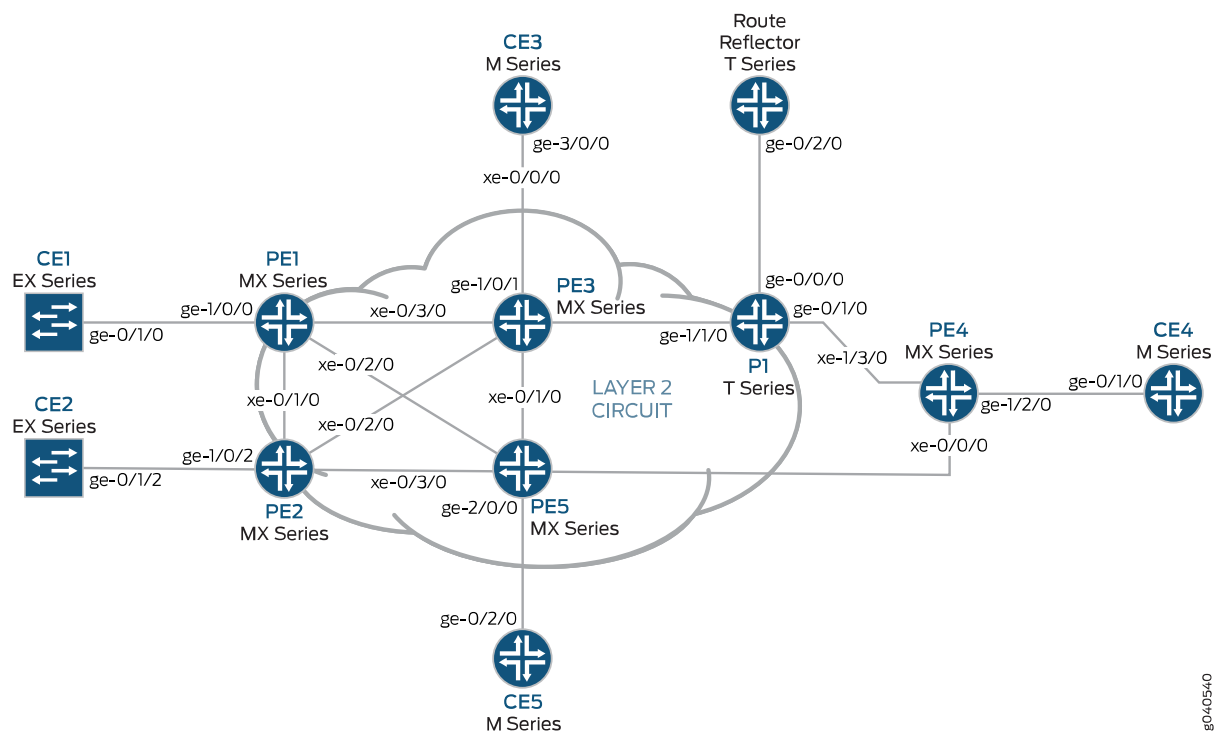

The logical topology of a Layer 2 circuit to Layer 3 VPN interconnection is shown in [Figure 41 on page 342](#).



Figure 41: Logical Topology of a Layer 2 Circuit to Layer 3 VPN Interconnection

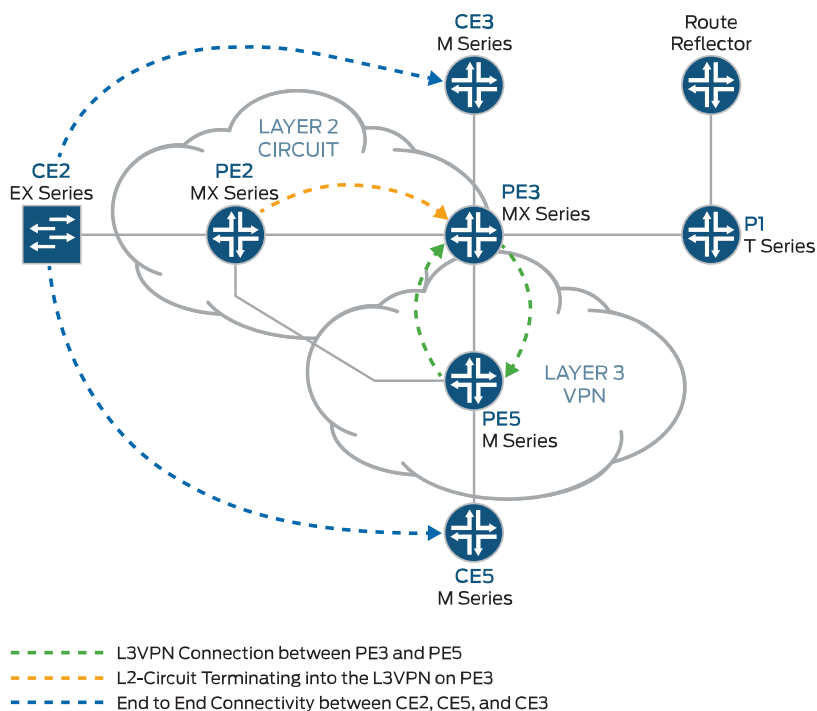

8040544

## Configuration

### IN THIS SECTION

- [Configuring PE Router Customer-facing and Loopback Interfaces | 343](#)
- [Configuring Core-facing Interfaces | 345](#)
- [Configuring Protocols | 347](#)
- [Configuring Routing Instances and Layer 2 Circuits | 350](#)
- [Configuring the Route Reflector | 352](#)
- [Interconnecting the Layer 2 Circuit with the Layer 3 VPN | 354](#)

**NOTE:** In any configuration session, it is good practice to verify periodically that the configuration can be committed using the **commit check** command.



In this example, the router being configured is identified using the following command prompts:

- **CE2** identifies the customer edge 2 (CE2) router
- **PE1** identifies the provider edge 1 (PE1) router
- **CE3** identifies the customer edge 3 (CE3) router
- **PE3** identifies the provider edge 3 (PE3) router
- **CE5** identifies the customer edge 5 (CE5) router
- **PE5** identifies the provider edge 5 (PE5) router

This example contains the following procedures:

### *Configuring PE Router Customer-facing and Loopback Interfaces*

#### **Step-by-Step Procedure**

To begin building the interconnection, configure the interfaces on the PE routers. If your network contains provider (P) routers, configure the interfaces on the P routers also. This example shows the configuration for Router PE2, Router PE3, and Router PE5.

1. On Router PE2, configure the **ge-1/0/2** interface encapsulation. To configure the interface encapsulation, include the **encapsulation** statement and specify the **ethernet-ccc** option (**vlan-ccc** encapsulation is also supported). Configure the **ge-1/0/2.0** logical interface family for circuit cross-connect functionality. To configure the logical interface family, include the **family** statement and specify the **ccc** option. The encapsulation should be configured the same way for all routers in the Layer 2 circuit domain.

```
[edit interfaces]
ge-1/0/2 {
  encapsulation ethernet-ccc;
  unit 0 {
    family ccc;
  }
}
```

2. On Router PE2, configure the **lo0.0** interface. Include the **family** statement and specify the **inet** option. Include the **address** statement and specify **192.0.2.2/24** as the loopback IPv4 address.

```
[edit interfaces]
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.2/24;
    }
  }
}
```



```

    }
  }
}

```

3. On Router PE3, configure the **ge-1/0/1** interface. Include the **family** statement and specify the **inet** option. Include the **address** statement and specify **198.51.100.1/24** as the interface address for this device.

```

[edit interfaces]
ge-1/0/1 {
  unit 0 {
    family inet {
      address 198.51.100.1/24;
    }
  }
}

```

4. On Router PE3, configure the **lo0.0** loopback interface. Include the **family** statement and specify the **inet** option. Include the **address** statement and specify **192.0.2.3/24** as the loopback IPv4 address for this router.

```

[edit interfaces]
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.3/24;
    }
  }
}

```

5. On Router PE5, configure the **ge-2/0/0** interface. Include the **family** statement and specify the **inet** option. Include the **address** statement and specify **198.51.100.8/24** as the interface address.

```

[edit interfaces]
ge-2/0/0 {
  unit 0 {
    family inet {
      address 198.51.100.8/24;
    }
  }
}

```



- On Router PE5, configure the **lo0.0** interface. Include the **family** statement and specify the **inet** option. Include the **address** statement and specify **192.0.2.5/24** as the loopback IPv4 address for this router.

```
[edit interfaces]
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.5/24;
    }
  }
}
```

### Configuring Core-facing Interfaces

#### Step-by-Step Procedure

This procedure describes how to configure the core-facing interfaces on the PE routers. This example does not include all the core-facing interfaces shown in the physical topology illustration. Enable the **mpls** and **inet** address families on the core-facing interfaces.

- On Router PE2, configure the **xe-0/2/0** interface. Include the **family** statement and specify the **inet** address family. Include the **address** statement and specify **10.10.5.1/30** as the interface address. Include the **family** statement and specify the **mpls** address family.

```
[edit interfaces]
xe-0/2/0 {
  unit 0 {
    family inet {
      address 10.10.5.1/30;
    }
    family mpls;
  }
}
```

- On Router PE3, configure the core-facing interfaces. Include the **family** statement and specify the **inet** address family. Include the **address** statement and specify the IPv4 addresses shown in the example as the interface addresses. Include the **family** statement and specify the **mpls** address family. In the example, the **xe-2/1/0** interface is connected to Router PE5, and the **xe-2/2/0** interface is connected to Router PE2.

```
[edit interfaces]
xe-2/0/0 {
  unit 0 {
```



```

        family inet {
            address 10.10.20.2/30;
        }
        family mpls;
    }
}
xe-2/1/0 {
    unit 0 {
        family inet {
            address 10.10.6.1/30;
        }
        family mpls;
    }
}
xe-2/2/0 {
    unit 0 {
        family inet {
            address 10.10.5.2/30;
        }
        family mpls;
    }
}
xe-2/3/0 {
    unit 0 {
        family inet {
            address 10.10.1.2/30;
        }
        family mpls;
    }
}
}

```

3. On Router PE5, configure the **xe-0/1/0** interface. Include the **family** statement and specify the **inet** address family. Include the **address** statement and specify **10.10.6.2/30** as the interface address. Include the **family** statement and specify the **mpls** address family.

```

[edit interfaces]
xe-0/1/0 {
    unit 0 {
        family inet {
            address 10.10.6.2/30;
        }
        family mpls;
    }
}

```



```
}
```

## Configuring Protocols

### Step-by-Step Procedure

This procedure describes how to configure the protocols used in this example. If your network contains P routers, configure the interfaces on the P routers also.

1. On Router PE3, enable OSPF as the IGP. Enable the MPLS, LDP, and BGP protocols on all interfaces except **fxp0.0**. LDP is used as the signaling protocol for the Layer 2 circuit to Router PE2 . The following configuration snippet shows the protocol configuration for Router PE3:

```
[edit]
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    label-switched-path to-RR {
      to 192.0.2.7;
    }
    label-switched-path to-PE2 {
      to 192.0.2.2;
    }
    label-switched-path to-PE5 {
      to 192.0.2.5;
    }
    label-switched-path to-PE4 {
      to 192.0.2.4;
    }
    label-switched-path to-PE1 {
      to 192.0.2.1;
    }
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
```



```

bgp {
  group RR {
    type internal;
    local-address 192.0.2.3;
    family inet-vpn {
      unicast;
    }
    family l2vpn {
      signaling;
    }
    neighbor 192.0.2.7;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
ldp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
}

```

2. On Router PE2, configure the MPLS, OSPF, and LDP protocols.

```

[edit ]
protocols {
  mpls {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {

```



```

        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
}

```

3. On Router PE5, enable OSPF as the IGP. Enable the MPLS, RSVP, and BGP protocols on all interfaces except **fxp0.0**. Enable core-facing interfaces with the **mpls** and **inet** address families.

```

[edit]
protocols {
    rsvp {
        interface all {
            link-protection;
        }
        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        label-switched-path to-RR {
            to 192.0.2.7;
        }
        label-switched-path to-PE2 {
            to 192.0.2.2;
        }
        label-switched-path to-PE3 {
            to 192.0.2.3;
        }
        label-switched-path to-PE4 {
            to 192.0.2.4;
        }
        label-switched-path to-PE1 {
            to 192.0.2.1;
        }
    }
}

```



```

interface all;
interface fxp0.0 {
    disable;
}
}
bgp {
    group to-rr {
        type internal;
        local-address 192.0.2.5;
        family inet-vpn {
            unicast;
        }
        family l2vpn {
            signaling;
        }
        neighbor 192.0.2.7;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
}

```

### Configuring Routing Instances and Layer 2 Circuits

#### Step-by-Step Procedure

This procedure describes how to configure the Layer 2 circuit and the Layer 3 VPN.

1. On Router PE2, configure the Layer 2 circuit. Include the **l2circuit** statement. Include the **neighbor** statement and specify the loopback IPv4 address of Router PE3 as the neighbor. Include the interface statement and specify **ge-1/0/2.0** as the logical interface that is participating in the Layer 2 circuit. Include the **virtual-circuit-id** statement and specify **100** as the identifier. Include the **no-control-word** statement for equipment that does not support the control word.

```

[edit ]
protocols {
    l2circuit {

```



```

neighbor 192.0.2.3 {
  interface ge-1/0/2.0 {
    virtual-circuit-id 100;
    no-control-word;
  }
}

```

2. On Router PE3, configure the Layer 2 circuit to Router PE2. Include the **l2circuit** statement. Include the **neighbor** statement and specify the loopback IPv4 address of Router PE2 as the neighbor. Include the interface statement and specify **lt-1/1/10.0** as the logical tunnel interface that is participating in the Layer 2 circuit. Include the **virtual-circuit-id** statement and specify **100** as the identifier. Include the **no-control-word** statement.

```

[edit]
protocols {
  l2circuit {
    neighbor 192.0.2.2 {
      interface lt-1/1/10.0 {
        virtual-circuit-id 100;
        no-control-word;
      }
    }
  }
}

```

3. On Router PE3, configure the Layer 3 VPN (**L3VPN**) routing instance to Router PE5 at the **[edit routing-instances]** hierarchy level. Also configure the BGP peer group at the **[edit routing-instances L3VPN protocols]** hierarchy level.

```

[edit]
routing-instances {
  L3VPN {
    instance-type vrf;
    interface ge-1/0/1.0;
    interface lt-1/1/10.1;
    route-distinguisher 65000:33;
    vrf-target target:65000:2;
    vrf-table-label;
    protocols {
      bgp {

```



```

        export direct;
        group ce3 {
            neighbor 198.51.100.6 {
                peer-as 100;
            }
        }
    }
}
}
}
}

```

4. On Router PE5, configure the Layer 3 VPN routing instance (**L3VPN**) at the [edit routing-instances] hierarchy level. Also configure the BGP peer group at the [edit routing-instances L3VPN protocols] hierarchy level.

```

[edit]
routing-instances {
    L3VPN {
        instance-type vrf;
        interface ge-2/0/0.0;
        route-distinguisher 65000:5;
        vrf-target target:65000:2;
        vrf-table-label;
        protocols {
            bgp {
                group ce5 {
                    neighbor 198.51.100.10 {
                        peer-as 200;
                    }
                }
            }
        }
    }
}
}

```

### Configuring the Route Reflector

#### Step-by-Step Procedure

Although a route reflector is not required to interconnect a Layer 2 circuit with a Layer 3 VPN, this example uses a route reflector. This procedure shows the relevant portion of the route reflector configuration.

1. Configure the route reflector with RSVP, MPLS, BGP and OSPF. The route reflector is a BGP peer with the PE routers. Notice that the BGP peer group configuration includes the **family** statement and specifies



the **inet-vpn** option The **inet-vpn** option enables BGP to advertise network layer reachability information (NLRI) for the Layer 3 VPN routes. The configuration also includes the **family** statement and specifies the **I2vpn** option. The **I2vpn** option enables BGP to advertise NLRI for the Layer 2 circuit. Layer 2 circuits use the same internal BGP infrastructure as Layer 2 VPNs.

```
[edit ]
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    label-switched-path to-pe3 {
      to 192.0.2.3;
    }
    label-switched-path to-pe5 {
      to 192.0.2.5;
    }
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  bgp {
    group RR {
      type internal;
      local-address 192.0.2.7;
      family inet {
        unicast;
      }
      family inet-vpn {
        unicast;
      }
      family I2vpn {
        signaling;
      }
      cluster 192.0.2.7;
      neighbor 192.0.2.1;
      neighbor 192.0.2.2;
      neighbor 192.0.2.4;
      neighbor 192.0.2.5;
      neighbor 192.0.2.3;
    }
  }
}
```



```

    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface all;
            interface fxp0.0 {
                disable;
            }
        }
    }
}

```

### *Interconnecting the Layer 2 Circuit with the Layer 3 VPN*

#### **Step-by-Step Procedure**

Before you can configure the logical tunnel interface in an MX Series router, you must create the tunnel services interface to be used for tunnel services.

1. Create the tunnel service interface on Router PE3. Include the **bandwidth** statement at the **[edit chassis fpc slot-number pic slot-number tunnel-services]** hierarchy level and specify the amount of bandwidth to reserve for tunnel services in gigabits per second.

```

[edit chassis]
fpc 1 {
    pic 1 {
        tunnel-services {
            bandwidth 1g;
        }
    }
}

```

2. On Router PE3, configure the **lt-1/1/10** logical tunnel interface unit 0.

Router PE3 is the router that is *stitching* the Layer 2 circuit to the Layer 3 VPN using the logical tunnel interface. The configuration of the peer unit interfaces is what makes the interconnection.

Include the **encapsulation** statement and specify the **ethernet-ccc** option. Include the **peer-unit** statement and specify the logical interface unit **1** as the peer tunnel interface. Include the **family** statement and specify the **ccc** option.

Configure the **lt-1/1/10** logical interface unit **1** with **ethernet** encapsulation. Include the **peer-unit** statement and specify the logical interface unit **0** as the peer tunnel interface. Include the **family** statement and specify the **inet** option. Also include the **address** statement and specify **198.51.100.11/24** as the IPv4 address of the interface.



**NOTE:** The peering logical interfaces must belong to the same logical tunnel interface derived from the Tunnel Services PIC.

```
[edit interfaces]
lt-1/1/10 {
  unit 0 {
    encapsulation ethernet-ccc;
    peer-unit 1;
    family ccc;
  }
  unit 1 {
    encapsulation ethernet;
    peer-unit 0;
    family inet {
      address 198.51.100.11/24;
    }
  }
}
```

3. On each router, commit the configuration.

```
user@host> commit check
configuration check succeeds
user@host> commit
```

## Verifying the Layer 2 Circuit to Layer 3 VPN Interconnection

### IN THIS SECTION

- [Verifying That the Layer 2 Circuit Connection to Router PE3 is Up | 356](#)
- [Verifying LDP Neighbors and Targeted LDP LSPs on Router PE2 | 357](#)
- [Verifying the Layer 2 Circuit Routes on Router PE2 | 357](#)
- [Verifying That the Layer 2 Circuit Connection to Router PE2 is Up | 358](#)
- [Verifying LDP Neighbors and Targeted LDP LSPs on Router PE3 | 359](#)
- [Verifying a BGP Peer Session with the Route Reflector on Router PE3 | 360](#)
- [Verifying the Layer 3 VPN Routes on Router PE3 | 360](#)



- [Verifying the Layer 2 Circuit Routes on Router PE3 | 361](#)
- [Verifying the MPLS Routes on Router PE3 | 362](#)
- [Verifying Traffic Flow Between Router CE2 and Router CE3 | 363](#)
- [Verifying Traffic Flow Between Router CE2 and Router CE5 | 364](#)

To verify that the interconnection is working properly, perform these tasks:

### ***Verifying That the Layer 2 Circuit Connection to Router PE3 is Up***

#### **Purpose**

To verify that the Layer 2 circuit connection from Router PE2 to Router PE3 is **Up**. To also document the incoming and outgoing LDP labels and the circuit ID used by this Layer 2 circuit connection.

#### **Action**

Verify that the Layer 2 circuit connection is up, using the **show l2circuit connections** command.

```
user@PE2> show l2circuit connections
```

```
Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch    VC-Dn -- Virtual circuit Down
CM -- control-word mismatch     Up -- operational
VM -- vlan id mismatch         CF -- Call admission control failure
OL -- no outgoing label        IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC  TM -- TDM misconfiguration
BK -- Backup Connection        ST -- Standby Connection
CB -- rcvd cell-bundle size bad SP -- Static Pseudowire
LD -- local site signaled down RS -- remote site standby
RD -- remote site signaled down XX -- unknown

Legend for interface status
Up -- operational
Dn -- down
Neighbor: 192.0.2.3
  Interface          Type  St    Time last up      # Up trans
  ge-1/0/2.0(vc 100)  rmt   Up    Jan  7 02:14:13 2010      1
  Remote PE: 192.0.2.3, Negotiated control-word: No
  Incoming label: 301488, Outgoing label: 315264
```



```
Negotiated PW status TLV: No
Local interface: ge-1/0/2.0, Status: Up, Encapsulation: ETHERNET
```

### Meaning

The output shows that the Layer 2 circuit connection from Router PE2 to Router PE3 is **Up** and the connection is using the **ge-1/0/2.0** interface. Note that the outgoing label is **315264** and the incoming label is **301488**, the virtual circuit (VC) identifier is **100** and the encapsulation is **ETHERNET**.

### Verifying LDP Neighbors and Targeted LDP LSPs on Router PE2

#### Purpose

To verify that Router PE2 has a targeted LDP LSP to Router PE3 and that Router PE2 and Router PE3 are LDP neighbors.

#### Action

Verify that Router PE2 has a targeted LDP LSP to Router PE3 and that Router PE2 and Router PE3 are LDP neighbors, using the **show ldp neighbor** command.

```
user@PE2> show ldp neighbor
```

Address	Interface	Label space ID	Hold time
192.0.2.3	lo0.0	192.0.2.3:0	38

### Meaning

The output shows that Router PE2 has an LDP neighbor with the IPv4 address of **192.0.2.3**. Address 192.0.2.3 is the lo0.0 interface address of Router PE3. Notice that Router PE2 uses the local **lo0.0** interface for the LSP.

Verifying that the routers are LDP neighbors also verifies that the targeted LSP is established.

### Verifying the Layer 2 Circuit Routes on Router PE2

#### Purpose

To verify that Router PE2 has a route for the Layer 2 circuit and that the route uses the LDP MPLS label to Router PE3.

#### Action

Verify that Router PE2 has a route for the Layer 2 circuit and that the route uses the LDP MPLS label to Router PE3, using the **show route table mpls.0** command.

```
user@PE2> show route table mpls.0
```



```
mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
0          *[MPLS/0] 1w3d 05:24:11, metric 1
            Receive
1          *[MPLS/0] 1w3d 05:24:11, metric 1
            Receive
2          *[MPLS/0] 1w3d 05:24:11, metric 1
            Receive
300560      *[LDP/9] 16:12:23, metric 1
            > to 10.10.2.1 via xe-0/1/0.0, Pop
300560(S=0) *[LDP/9] 16:12:23, metric 1
            > to 10.10.2.1 via xe-0/1/0.0, Pop
301008      *[LDP/9] 16:12:23, metric 1
            > to 10.10.4.2 via xe-0/3/0.0, Swap 299856
301488      *[L2CKT/7] 11:07:28
            > via ge-1/0/2.0, Pop
301536      *[LDP/9] 16:12:23, metric 1
            > to 10.10.4.2 via xe-0/3/0.0, Pop
301536(S=0) *[LDP/9] 16:12:23, metric 1
            > to 10.10.4.2 via xe-0/3/0.0, Pop
301712      *[LDP/9] 12:41:22, metric 1
            > to 10.10.5.2 via xe-0/2/0.0, Swap 315184
301728      *[LDP/9] 12:41:22, metric 1
            > to 10.10.5.2 via xe-0/2/0.0, Pop
301728(S=0) *[LDP/9] 12:41:22, metric 1
            > to 10.10.5.2 via xe-0/2/0.0, Pop
ge-1/0/2.0 *[L2CKT/7] 11:07:28, metric2 1
            > to 10.10.5.2 via xe-0/2/0.0, Push 315264
```

### Meaning

The output shows that Router PE2 pushes the **315264** outgoing label on the **L2CKT** route going out interface **ge-1/0/2.0**. The output also shows that Router PE2 pops the **301488** incoming label on the **L2CKT** coming from interface **ge-1/0/2.0**

### Verifying That the Layer 2 Circuit Connection to Router PE2 is Up

#### Purpose

To verify that the Layer 2 circuit connection from Router PE3 to Router PE2 is **Up**, To also document the incoming and outgoing LDP labels and the circuit ID used by this Layer 2 circuit connection.

#### Action



Verify that the Layer 2 circuit connection is up, using the **show l2circuit connections** command.

```
user@PE3> show l2circuit connections
```

```
Layer-2 Circuit Connections:
Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch     VC-Dn -- Virtual circuit Down
CM -- control-word mismatch      Up -- operational
VM -- vlan id mismatch          CF -- Call admission control failure
OL -- no outgoing label         IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC    TM -- TDM misconfiguration
BK -- Backup Connection         ST -- Standby Connection
CB -- rcvd cell-bundle size bad  XX -- unknown

Legend for interface status
Up -- operational
Dn -- down
Neighbor: 192.0.2.2

Interface              Type  St      Time last up          # Up trans
lt-1/1/10.0(vc 100)    rmt   Up      Jan  7 02:15:03 2010          1
Remote PE: 192.0.2.2, Negotiated control-word: No
Incoming label: 315264, Outgoing label: 301488
Local interface: lt-1/1/10.0, Status: Up, Encapsulation: ETHERNET
```

### Meaning

The output shows that the Layer 2 circuit connection from Router PE3 to Router PE2 is **Up** and the connection is using the logical tunnel (**lt**) interface. Note that the incoming label is **315264** and the outgoing label is **301488**, the virtual circuit (VC) identifier is **100**, and that the encapsulation is **ETHERNET**.

### Verifying LDP Neighbors and Targeted LDP LSPs on Router PE3

#### Purpose

To verify that Router PE3 has a targeted LDP LSP to Router PE2 and that Router PE3 and Router PE2 are LDP neighbors.

#### Action

Verify that Router PE2 has a targeted LDP LSP to Router PE3 and that Router PE2 and Router PE3 are LDP neighbors, using the **show ldp neighbor** command.

```
user@PE2> show ldp neighbor
```



Address	Interface	Label space ID	Hold time
192.0.2.2	lo0.0	192.0.2.2:0	43
192.0.2.4	lo0.0	192.0.2.4:0	33

### Meaning

The output shows that Router PE3 has an LDP neighbor with the IPv4 address of **192.0.2.2**. Address 192.0.2.2 is the lo0.0 interface address of Router PE2. The output also shows that the interface used on Router PE3 for the LSP is **lo0.0**. Verifying that the routers are LDP neighbors also verifies that the targeted LSP is established.

### Verifying a BGP Peer Session with the Route Reflector on Router PE3

#### Purpose

To verify that Router PE3 has a peer session established with the route reflector.

#### Action

Verify that Router PE3 has a peer session established with the route reflector, using the **show bgp summary** command.

```
user@PE2> show bgp summary
```

```

Groups: 2 Peers: 2 Down peers: 0
Table          Tot Paths  Act Paths Suppressed    History Damp State   Pending
bgp.l3vpn.0          1          1          0          0          0          0
Peer              AS      InPkt    OutPkt    OutQ   Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
192.0.2.7          65000      1597      1612        0         1  12:03:21 Establ

  bgp.l2vpn.0: 0/0/0/0
  bgp.l3vpn.0: 1/1/1/0
  L3VPN.inet.0: 1/1/1/0

```

### Meaning

The output shows that Router PE3 has a peer session with the router with the IPv4 address of **192.0.2.7**. Address 192.0.2.7 is the lo0.0 interface address of the route reflector. The output also shows that the peer session state is **Establ**, meaning that the session is established.

### Verifying the Layer 3 VPN Routes on Router PE3

#### Purpose

To verify that Router PE3 has Layer 3 VPN routes to Router CE2, Router CE3, and Router CE5.

#### Action



Verify that Router PE3 has routes to Router CE2, Router CE3, and Router CE5 in the Layer 3 VPN route table, using the **show route table L3VPN.inet.0** command. In this example, **L3VPN** is the name configured for the routing instance.

```
user@PE3> show route table L3VPN.inet.0
```

```
L3VPN.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

198.51.100.10/24      *[Direct/0] 11:13:59
                    > via lt-1/1/10.1
198.51.100.11/24      *[Local/0] 11:13:59
                    Local via lt-1/1/10.1
198.51.100.12/24      *[BGP/170] 11:00:41, localpref 100, from 192.0.2.7
                    AS path: I
                    > to 10.10.6.2 via xe-2/1/0.0, Push 16
198.51.100.13/24      *[Direct/0] 11:54:41
                    > via ge-1/0/1.0
198.51.100.1/24       *[Local/0] 11:54:41
                    Local via ge-1/0/1.0
```

### Meaning

The output shows that Router PE3 has a route to the IPv4 subnetwork address of **198.51.100.10**. Address 198.51.100.15 is the interface address of Router CE2. The output shows that Router PE3 has a route to the IPv4 subnetwork address of **198.51.100.12**. Address 198.51.100.10 is the interface address of Router CE5. The output shows that Router PE3 has a route to the IPv4 subnetwork address of **198.51.100.13**. Address 198.51.100.6 is the interface address of Router CE3.

### Verifying the Layer 2 Circuit Routes on Router PE3

#### Purpose

To verify that Router PE3 has a route to Router PE2 in the Layer 2 circuit route table.

#### Action

Verify that Router PE3 has a route to Router PE2 in the Layer 2 circuit route table, using the **show route table l2circuit.0** command.

```
user@PE3> show route table l2circuit.0
```

```
192.0.2.2:NoCtrlWord:5:100:Local/96 (1 entry, 1 announced)
  *L2CKT Preference: 7
      Next hop type: Indirect
      Next-hop reference count: 1
```



```

Next hop type: Router
Next hop: 10.10.5.1 via xe-2/2/0.0, selected
Protocol next hop: 192.0.2.2
Indirect next hop: 8cae0a0 -
State: <Active Int>
Local AS: 65000
Age: 11:16:50   Metric2: 1
Task: l2 circuit
Announcement bits (1): 0-LDP
AS path: I
VC Label 315264, MTU 1500

```

### Meaning

The output shows that Router PE3 has a route to the IPv4 address of **192.0.2.2**. Address 192.0.2.2 is the lo0.0 interface address of Router PE2. Note that the VC label is **315264**. This label is the same as the incoming MPLS label displayed using the **show l2circuit connections** command.

### Verifying the MPLS Routes on Router PE3

#### Purpose

To verify that Router PE3 has a route to Router PE2 in the MPLS route table.

#### Action

Verify Router PE3 has a route to Router PE2 in the MPLS route table, using the **show route table mpls.0** command.

```
user@PE3> show route table mpls.0
```

```

mpls.0: 21 destinations, 21 routes (21 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 1w3d 05:29:02, metric 1
           Receive
1          *[MPLS/0] 1w3d 05:29:02, metric 1
           Receive
2          *[MPLS/0] 1w3d 05:29:02, metric 1
           Receive
16         *[VPN/0] 12:22:45
           to table L3VPN.inet.0, Pop
315184     *[LDP/9] 12:45:14, metric 1
           > to 10.10.20.1 via xe-2/0/0.0, Pop
315184(S=0) *[LDP/9] 12:45:14, metric 1
           > to 10.10.20.1 via xe-2/0/0.0, Pop

```



```

315200          *[LDP/9] 00:03:53, metric 1
                > to 10.10.20.1 via xe-2/0/0.0, Swap 625297
                to 10.10.6.2 via xe-2/1/0.0, Swap 299856
315216          *[LDP/9] 12:45:14, metric 1
                > to 10.10.6.2 via xe-2/1/0.0, Pop
315216(S=0)     *[LDP/9] 12:45:14, metric 1
                > to 10.10.6.2 via xe-2/1/0.0, Pop
315232          *[LDP/9] 12:45:06, metric 1
                > to 10.10.1.1 via xe-2/3/0.0, Pop
315232(S=0)     *[LDP/9] 12:45:06, metric 1
                > to 10.10.1.1 via xe-2/3/0.0, Pop
315248          *[LDP/9] 12:45:14, metric 1
                > to 10.10.5.1 via xe-2/2/0.0, Pop
315248(S=0)     *[LDP/9] 12:45:14, metric 1
                > to 10.10.5.1 via xe-2/2/0.0, Pop
315264         *[L2CKT/7] 11:11:20
                > via lt-1/1/10.0, Pop
315312          *[RSVP/7] 11:26:01, metric 1
                > to 10.10.6.2 via xe-2/1/0.0, label-switched-path to-pe5
315312(S=0)     *[RSVP/7] 11:26:01, metric 1
                > to 10.10.6.2 via xe-2/1/0.0, label-switched-path to-pe5
315328          *[RSVP/7] 11:26:01, metric 1
                > to 10.10.20.1 via xe-2/0/0.0, label-switched-path to-RR
315360          *[RSVP/7] 11:26:01, metric 1
                > to 10.10.20.1 via xe-2/0/0.0, label-switched-path to-RR
316208          *[RSVP/7] 00:03:32, metric 1
                > to 10.10.6.2 via xe-2/1/0.0, label-switched-path
Bypass->10.10.9.1
316208(S=0)     *[RSVP/7] 00:03:32, metric 1
                > to 10.10.6.2 via xe-2/1/0.0, label-switched-path
Bypass->10.10.9.1
lt-1/1/10.0    *[L2CKT/7] 11:11:20, metric2 1
                > to 10.10.5.1 via xe-2/2/0.0, Push 301488

```

### Meaning

The output shows that Router PE3 has a route for the Layer 2 circuit and that the route uses the LDP MPLS label to Router PE2. Notice that the **301488** label is the same as the outgoing label displayed on Router PE2 using the **show l2circuit connections** command.

### Verifying Traffic Flow Between Router CE2 and Router CE3

#### Purpose

To verify that the CE routers can send and receive traffic across the interconnection.



### Action

Verify that Router CE2 can send traffic to and receive traffic from Router CE3 across the interconnection, using the **ping** command.

```
user@CE2>ping 198.51.100.6
```

```
PING 198.51.100.6 (198.51.100.6): 56 data bytes
64 bytes from 198.51.100.6: icmp_seq=0 ttl=63 time=0.708 ms
64 bytes from 198.51.100.6: icmp_seq=1 ttl=63 time=0.610 ms
```

### Meaning

The output shows that Router CE2 can send an ICMP request to and receive a response from Router CE3 across the interconnection.

### Verifying Traffic Flow Between Router CE2 and Router CE5

#### Purpose

To verify that the CE routers can send and receive traffic across the interconnection.

### Action

Verify that Router CE2 can send traffic to and receive traffic from Router CE5 across the interconnection, using the **ping** command.

```
user@CE2>ping 198.51.100.10
```

```
PING 198.51.100.10 (198.51.100.10): 56 data bytes
64 bytes from 198.51.100.10: icmp_seq=0 ttl=62 time=0.995 ms
64 bytes from 198.51.100.10: icmp_seq=1 ttl=62 time=1.005 ms
```

### Meaning

The output shows that Router CE2 can send an ICMP request to and receive a response from Router CE5 across the interconnection.

## RELATED DOCUMENTATION

---

[Understanding Layer 3 VPNs | 37](#)

---

*Pseudowire Subscriber Logical Interfaces Overview*

---

*Configuring a Pseudowire Subscriber Logical Interface*



# Connecting Layer 3 VPNs to Layer 2 VPNs

## IN THIS SECTION

- [Interconnecting Layer 2 VPNs with Layer 3 VPNs Overview | 365](#)
- [Example: Interconnecting a Layer 2 VPN with a Layer 3 VPN | 366](#)

## Interconnecting Layer 2 VPNs with Layer 3 VPNs Overview

As MPLS-based Layer 2 services grow in demand, new challenges arise for service providers to be able to interoperate with Layer 2 and Layer 3 services and give their customers value-added services. Junos OS has various features to address the needs of service providers. One of these features is the use of a logical tunnel interface. This Junos OS functionality makes use of a tunnel PIC to loop packets out and back from the Packet Forwarding Engine to link the Layer 2 network with the Layer 3 network. The solution is limited by the logical tunnel bandwidth constraints imposed by the tunnel PIC.

### Interconnecting Layer 2 VPNs with Layer 3 VPNs Applications

Interconnecting a Layer 2 VPN with a Layer 3 VPN provides the following benefits:

- A single access line to provide multiple services—Traditional VPNs over Layer 2 circuits require the provisioning and maintenance of separate networks for IP and for VPN services. In contrast, Layer 2 VPNs enable the sharing of a provider's core network infrastructure between IP and Layer 2 VPN services, thereby reducing the cost of providing those services.
- Flexibility—Many different types of networks can be accommodated by the service provider. If all sites in a VPN are owned by the same enterprise, this is an intranet. If various sites are owned by different enterprises, the VPN is an extranet. A site can be located in more than one VPN.
- Wide range of possible policies—You can give every site in a VPN a different route to every other site, or you can force traffic between certain pairs of sites routed via a third site and so pass certain traffic through a firewall.
- Scalable network—This design enhances the scalability because it eliminates the need for provider edge (PE) routers to maintain all of the service provider's VPN routes. Each PE router maintains a VRF table for each of its directly connected sites. Each customer connection (such as a Frame Relay PVC, an ATM PVC, or a VLAN) is mapped to a specific VRF table. Thus, it is a port on the PE router and not a site that is associated with a VRF table. Multiple ports on a PE router can be associated with a single VRF table.



It is the ability of PE routers to maintain multiple forwarding tables that supports the per-VPN segregation of routing information.

- Use of route reflectors—Provider edge routers can maintain IBGP sessions to route reflectors as an alternative to a full mesh of IBGP sessions. Deploying multiple route reflectors enhances the scalability of the RFC 2547bis model because it eliminates the need for any single network component to maintain all VPN routes.
- Multiple VPNs are kept separate and distinct from each other—The customer edge routers do not peer with each other. Two sites have IP connectivity over the common backbone only, and only if there is a VPN which contains both sites. This feature keeps the VPNs separate and distinct from each other, even if two VPNs have an overlapping address space.
- Simple for customers to use—Customers can obtain IP backbone services from a service provider, and they do not need to maintain their own backbones.

## Example: Interconnecting a Layer 2 VPN with a Layer 3 VPN

### IN THIS SECTION

- [Requirements | 366](#)
- [Overview and Topology | 367](#)
- [Configuration | 370](#)
- [Verification | 390](#)

This example provides a step-by-step procedure and commands for interconnecting and verifying a Layer 2 VPN with a Layer 3 VPN. It contains the following sections:

### Requirements

This example uses the following hardware and software components:

- Junos OS Release 9.3 or later
- Five MX Series routers
- Three M Series routers
- Two T Series routers



## Overview and Topology

A Layer 2 VPN is a type of virtual private network (VPN) that uses MPLS labels to transport data. The communication occurs between the provider edge (PE) routers.

Layer 2 VPNs use BGP as the signaling protocol and, consequently, have a simpler design and require less provisioning overhead than traditional VPNs over Layer 2 circuits. BGP signaling also enables autodiscovery of Layer 2 VPN peers. Layer 2 VPNs can have either a full-mesh or a hub-and-spoke topology. The tunneling mechanism in the core network is, typically, MPLS. However, Layer 2 VPNs can also use other tunneling protocols, such as GRE.

Layer 3 VPNs are based on RFC 2547bis, *BGP/MPLS IP VPNs*. RFC 2547bis defines a mechanism by which service providers can use their IP backbones to provide VPN services to their customers. A Layer 3 VPN is a set of sites that share common routing information and whose connectivity is controlled by a collection of policies. The sites that make up a Layer 3 VPN are connected over a provider's existing public Internet backbone. RFC 2547bis VPNs are also known as BGP/MPLS VPNs because BGP is used to distribute VPN routing information across the provider's backbone, and MPLS is used to forward VPN traffic across the backbone to remote VPN sites.

Customer networks, because they are private, can use either public addresses or private addresses, as defined in RFC 1918, *Address Allocation for Private Internets*. When customer networks that use private addresses connect to the public Internet infrastructure, the private addresses might overlap with the same private addresses used by other network users. MPLS/BGP VPNs solve this problem by adding a *route distinguisher*. A route distinguisher is a VPN identifier prefix that is added to each address from a particular VPN site, thereby creating an address that is unique both within the VPN and within the Internet.

In addition, each VPN has its own VPN-specific routing table that contains the routing information for that VPN only. To separate a VPN's routes from routes in the public Internet or those in other VPNs, the PE router creates a separate routing table for each VPN called a VPN routing and forwarding (VRF) table. The PE router creates one VRF table for each VPN that has a connection to a customer edge (CE) router. Any customer or site that belongs to the VPN can access only the routes in the VRF tables for that VPN. Every VRF table has one or more extended community attributes associated with it that identify the route as belonging to a specific collection of routers. One of these, the *route target* attribute, identifies a collection of sites (VRF tables) to which a PE router distributes routes. The PE router uses the route target to constrain the import of remote routes into its VRF tables.

When an ingress PE router receives routes advertised from a directly connected CE router, it checks the received route against the VRF export policy for that VPN.


- If it matches, the route is converted to VPN-IPv4 format—that is, the route distinguisher is added to the route. The PE router then announces the route in VPN-IPv4 format to the remote PE routers. It also attaches a route target to each route learned from the directly connected sites. The route target attached to the route is based on the value of the VRF table's configured export target policy. The routes are then distributed using IBGP sessions, which are configured in the provider's core network.







Figure 43: Logical Topology of a Layer 2 VPN Terminating into a Layer 3 VPN

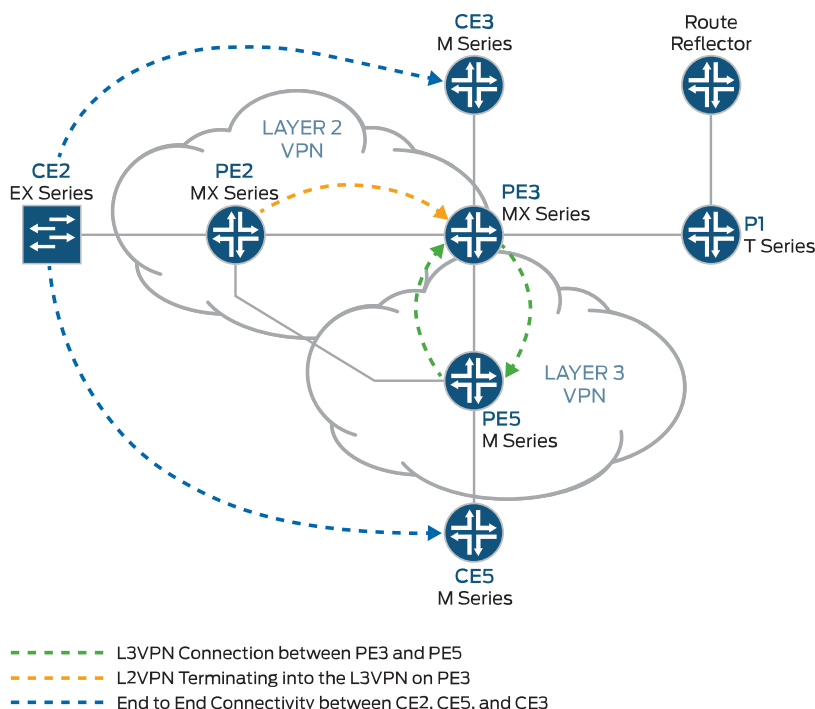

The following definitions describe the meaning of the device abbreviations used in [Figure 42 on page 368](#) and [Figure 43 on page 369](#).

- Customer edge (CE) device—A device at the customer premises that provides access to the service provider's VPN over a data link to one or more provider edge (PE) routers.

Typically the CE device is an IP router that establishes an adjacency with its directly connected PE routers. After the adjacency is established, the CE router advertises the site's local VPN routes to the PE router and learns remote VPN routes from the PE router.

- Provider edge (PE) device—A device, or set of devices, at the edge of the provider network that presents the provider's view of the customer site.

PE routers exchange routing information with CE routers. PE routers are aware of the VPNs that connect through them, and PE routers maintain VPN state. A PE router is only required to maintain VPN routes for those VPNs to which it is directly attached. After learning local VPN routes from CE routers, a PE router exchanges VPN routing information with other PE routers using IBGP. Finally, when using MPLS to forward VPN data traffic across the provider's backbone, the ingress PE router functions as the ingress label-switching router (LSR) and the egress PE router functions as the egress LSR.

- Provider (P) device—A device that operates inside the provider's core network and does not directly interface to any CE.

Although the P device is a key part of implementing VPNs for the service provider's customers and may provide routing for many provider-operated tunnels that belong to different VPNs, it is not itself



VPN-aware and does not maintain VPN state. Its principal role is allowing the service provider to scale its VPN offerings, for example, by acting as an aggregation point for multiple PE routers.

P routers function as MPLS transit LSRs when forwarding VPN data traffic between PE routers. P routers are required only to maintain routes to the provider's PE routers; they are not required to maintain specific VPN routing information for each customer site.

## Configuration

### IN THIS SECTION

- [Configuring the Base Protocols and Interfaces | 370](#)
- [Configuring the VPN Interfaces | 374](#)

To interconnect a Layer 2 VPN with a Layer 3 VPN, perform these tasks:

### *Configuring the Base Protocols and Interfaces*

#### Step-by-Step Procedure

1. On each PE and P router, configure OSPF with traffic engineering extensions on all interfaces. Disable OSPF on the fxp0.0 interface.

```
[edit protocols]
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
```

2. On all the core routers, enable MPLS on all interfaces. Disable MPLS on the fxp0.0 interface.

```
[edit protocols]
mpls {
  interface all;
  interface fxp0.0 {
```



```

        disable;
    }
}

```

3. On all the core routers, create an internal BGP peer group and specify the route reflector address (192.0.2.7) as the neighbor. Also enable BGP to carry Layer 2 VPLS network layer reachability information (NLRI) messages for this peer group by including the **signaling** statement at the **[edit protocols bgp group group-name family l2vpn]** hierarchy level.

```

[edit protocols]
bgp {
  group RR {
    type internal;
    local-address 192.0.2.2;
    family l2vpn {
      signaling;
    }
    neighbor 192.0.2.7;
  }
}

```

4. On Router PE3, create an internal BGP peer group and specify the route reflector IP address (192.0.2.7) as the neighbor. Enable BGP to carry Layer 2 VPLS NLRI messages for this peer group and enable the processing of VPN-IPv4 addresses by including the **unicast** statement at the **[edit protocols bgp group group-name family inet-vpn]** hierarchy level.

```

[edit protocols]
bgp {
  group RR {
    type internal;
    local-address 192.0.2.3;
    family inet-vpn {
      unicast;
    }
    family l2vpn {
      signaling;
    }
    neighbor 192.0.2.7;
  }
}

```



5. For the Layer 3 VPN domain on Router PE3 and Router PE5, enable RSVP on all interfaces. Disable RSVP on the fxp0.0 interface.

```
[edit protocols]
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
```

6. On Router PE3 and Router PE5, create label-switched paths (LSPs) to the route reflector and the other PE routers. The following example shows the configuration on Router PE5.

```
[edit protocols]
mpls {
  label-switched-path to-RR {
    to 192.0.2.7;
  }
  label-switched-path to-PE2 {
    to 192.0.2.2;
  }
  label-switched-path to-PE3 {
    to 192.0.2.3;
  }
  label-switched-path to-PE4 {
    to 192.0.2.4;
  }
  label-switched-path to-PE1 {
    to 192.0.2.1;
  }
}
```

7. On Routers PE1, PE2, PE3, and PE5, configure the core interfaces with an IPv4 address and enable the MPLS address family. The following example shows the configuration of the xe-0/1/0 interface on Router PE2.

```
[edit]
interfaces {
  xe-0/1/0 {
    unit 0 {
      family inet {
```



```

        address 10.10.2.2/30;
    }
    family mpls;
}
}
}

```

8. On Router PE2 and Router PE3, configure LDP for the Layer 2 VPN MPLS signaling protocol for all interfaces. Disable LDP on the fxp0.0 interface. (RSVP can also be used.)

```

[edit protocols]
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}

```

9. On the route reflector, create an internal BGP peer group and specify the PE routers IP addresses as the neighbors.

```

[edit]
protocols {
    bgp {
        group RR {
            type internal;
            local-address 192.0.2.7;
            family inet {
                unicast;
            }
            family inet-vpn {
                unicast;
            }
            family l2vpn {
                signaling;
            }
            cluster 192.0.2.7;
            neighbor 192.0.2.1;
            neighbor 192.0.2.2;
            neighbor 192.0.2.4;
            neighbor 192.0.2.5;
            neighbor 192.0.2.3;

```



```

    }
  }
}

```

10. On the route reflector, configure MPLS LSPs towards Routers PE3 and PE5 to resolve the BGP next hops from inet.3 routing table.

```

[edit]
protocols {
  mpls {
    label-switched-path to-pe3 {
      to 192.0.2.3;
    }
    label-switched-path to-pe5 {
      to 192.0.2.5;
    }
    interface all;
  }
}

```

### Configuring the VPN Interfaces

#### Step-by-Step Procedure

Router PE2 is one end of the Layer 2 VPN. Router PE3 is performing the Layer 2 VPN stitching between the Layer 2 VPN and the Layer 3 VPN. Router PE3 uses the logical tunnel interface (It interface) configured with different logical interface units applied under two different Layer 2 VPN instances. The packet is looped though the It interface configured on Router PE3. The configuration of Router PE5 contains the PE-CE interface.

1. On Router PE2, configure the ge-1/0/2 interface encapsulation. Include the encapsulation statement and specify the **ethernet-ccc** option (**vlan-ccc** encapsulation is also supported) at the **[edit interfaces ge-1/0/2]** hierarchy level. The encapsulation should be the same in a whole Layer 2 VPN domain (Routers PE2 and PE3). Also, configure interface lo0.

```

[edit]
interfaces {
  ge-1/0/2 {
    encapsulation ethernet-ccc;
    unit 0;
  }
  lo0 {
    unit 0 {

```



```

        family inet {
            address 192.0.2.2/24;
        }
    }
}

```

2. On Router PE2, configure the routing instance at the **[edit routing-instances]** hierarchy level. Also, configure the Layer 2 VPN protocol at the **[edit routing-instances *routing-instances-name* protocols]** hierarchy level. Configure the remote site ID as 3. Site ID 3 represents Router PE3 (Hub-PE). The Layer 2 VPN is using LDP as the signaling protocol. Be aware that in the following example, both the routing instance and the protocol are named **l2vpn**.

```

[edit]
routing-instances {
    l2vpn { # routing instance
        instance-type l2vpn;
        interface ge-1/0/2.0;
        route-distinguisher 65000:2;
        vrf-target target:65000:2;
        protocols {
            l2vpn { # protocol
                encapsulation-type ethernet;
                site CE2 {
                    site-identifier 2;
                    interface ge-1/0/2.0 {
                        remote-site-id 3;
                    }
                }
            }
        }
    }
}

```

3. On Router PE5, configure the Gigabit Ethernet interface for the PE-CE link **ge-2/0/0** and configure the **lo0** interface.

```

[edit interfaces]
ge-2/0/0 {
    unit 0 {
        family inet {
            address 198.51.100.8/24;
        }
    }
}

```



```

    }
  }
}
lo0 {
  unit 0 {
  }
}

```

4. On Router PE5, configure the Layer 3 VPN routing instance (**L3VPN**) at the **[edit routing-instances]** hierarchy level. Also configure BGP at the **[edit routing-instances L3VPN protocols]** hierarchy level.

```

[edit]
routing-instances {
  L3VPN {
    instance-type vrf;
    interface ge-2/0/0.0;
    route-distinguisher 65000:5;
    vrf-target target:65000:2;
    vrf-table-label;
    protocols {
      bgp {
        group ce5 {
          neighbor 198.51.100.2 {
            peer-as 200;
          }
        }
      }
    }
  }
}

```

5. In an MX Series router, such as Router PE3, you must create the tunnel services interface to be used for tunnel services. To create the tunnel service interface, include the **bandwidth** statement and specify the amount of bandwidth to reserve for tunnel services in gigabits per second at the **[edit chassis fpc slot-number pic slot-number tunnel-services]** hierarchy level.

```

[edit]
chassis {
  dump-on-panic;
  fpc 1 {
    pic 1 {
      tunnel-services {

```



```

        bandwidth 1g;
    }
}
}
}

```

6. On Router PE3, configure the Gigabit Ethernet interface.

Include the **address** statement at the **[edit interfaces ge-1/0/1.0 family inet]** hierarchy level and specify **198.51.100.9/24** as the IP address.

```

[edit]
interfaces {
  ge-1/0/1 {
    unit 0 {
      family inet {
        address 198.51.100.9/24;
      }
    }
  }
}

```

7. On Router PE3, configure the **lt-1/1/10.0** logical tunnel interface at the **[edit interfaces lt-1/1/10 unit 0]** hierarchy level. Router PE3 is the router that is *stitching* the Layer 2 VPN to the Layer 3 VPN using the logical tunnel interface. The configuration of the peer unit interfaces is what makes the interconnection.

To configure the interface, include the **encapsulation** statement and specify the **ethernet-ccc** option. Include the **peer-unit** statement and specify the logical interface unit **1** as the peer tunnel interface. Include the **family** statement and specify the **ccc** option.

```

[edit]
interfaces {
  lt-1/1/10 {
    unit 0 {
      encapsulation ethernet-ccc;
      peer-unit 1;
      family ccc;
    }
  }
}

```



8. On Router PE3, configure the **lt-1/1/10.1** logical tunnel interface at the **[edit interfaces lt-1/1/10 unit 1]** hierarchy level.

To configure the interface, include the **encapsulation** statement and specify the **ethernet** option. Include the **peer-unit** statement and specify the logical interface unit **0** as the peer tunnel interface. Include the **family** statement and specify the **inet** option. Include the **address** statement at the **[edit interfaces lt-1/1/10 unit 0]** hierarchy level and specify **198.51.100.7/24** as the IPv4 address.

```
[edit]
interfaces {
  lt-1/1/10 {
    unit 1 {
      encapsulation ethernet;
      peer-unit 0;
      family inet {
        address 198.51.100.7/24;
      }
    }
  }
}
```

9. On Router PE3, add the **lt** interface unit 1 to the routing instance at the **[edit routing-instances L3VPN]** hierarchy level. Configure the instance type as **vrf** with **lt** peer-unit 1 as a PE-CE interface to terminate the Layer 2 VPN on Router PE2 into the Layer 3 VPN on Router PE3.

```
[edit]
routing-instances {
  L3VPN {
    instance-type vrf;
    interface ge-1/0/1.0;
    interface lt-1/1/10.1;
    route-distinguisher 65000:33;
    vrf-target target:65000:2;
    vrf-table-label;
    protocols {
      bgp {
        export direct;
        group ce3 {
          neighbor 198.51.100.10 {
            peer-as 100;
          }
        }
      }
    }
  }
}
```



```

    }
}

```

10. On Router PE3, add the **lt** interface unit 0 to the routing instance at the **[edit routing-instances protocols l2vpn]** hierarchy level. Also configure the same vrf target for the Layer 2 VPN and Layer 3 VPN routing instances, so that the routes can be leaked between the instances. The example configuration in the previous step shows the vrf target for the **L3VPN** routing instance. The following example shows the vrf target for the **l2vpn** routing instance.

```

[edit]
routing-instances {
  l2vpn {
    instance-type l2vpn;
    interface lt-1/1/10.0;
    route-distinguisher 65000:3;
    vrf-target target:65000:2;
    protocols {
      l2vpn {
        encapsulation-type ethernet;
        site CE3 {
          site-identifier 3;
          interface lt-1/1/10.0 {
            remote-site-id 2;
          }
        }
      }
    }
  }
}

```

11. On Router PE3, configure the **policy-statement** statement to export the routes learned from the directly connected **lt** interface unit 1 to all the CE routers for connectivity, if needed.

```

[edit]
policy-options {
  policy-statement direct {
    term 1 {
      from protocol direct;
      then accept;
    }
  }
}

```



## Results

The following output shows the full configuration of Router PE2:

### Router PE2

```
interfaces {
  xe-0/1/0 {
    unit 0 {
      family inet {
        address 10.10.2.2/30;
      }
      family mpls;
    }
  }
  xe-0/2/0 {
    unit 0 {
      family inet {
        address 10.10.5.1/30;
      }
      family mpls;
    }
  }
  xe-0/3/0 {
    unit 0 {
      family inet {
        address 10.10.4.1/30;
      }
      family mpls;
    }
  }
  ge-1/0/2 {
    encapsulation ethernet-ccc;
    unit 0;
  }
  fxp0 {
    apply-groups [ re0 re1 ];
  }
  lo0 {
    unit 0 {
      family inet {
        address 192.0.2.2/24;
      }
    }
  }
}
```



```

    }
}
routing-options {
    static {
        route 172.0.0.0/8 next-hop 172.19.59.1;
    }
    autonomous-system 65000;
}
protocols {
    mpls {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
    bgp {
        group RR {
            type internal;
            local-address 192.0.2.2;
            family l2vpn {
                signaling;
            }
            neighbor 192.0.2.7;
        }
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface all;
            interface fxp0.0 {
                disable;
            }
        }
    }
    ldp {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
routing-instances {

```



```

l2vpn {
  instance-type l2vpn;
  interface ge-1/0/2.0;
  route-distinguisher 65000:2;
  vrf-target target:65000:2;
  protocols {
    l2vpn {
      encapsulation-type ethernet;
      site CE2 {
        site-identifier 2;
        interface ge-1/0/2.0 {
          remote-site-id 3;
        }
      }
    }
  }
}

```

The following output shows the final configuration of Router PE5:

#### Router PE5

```

interfaces {
  ge-0/0/0 {
    unit 0 {
      family inet {
        address 10.10.4.2/30;
      }
      family mpls;
    }
  }
  xe-0/1/0 {
    unit 0 {
      family inet {
        address 10.10.6.2/30;
      }
      family mpls;
    }
  }
}

```



```

ge-1/0/0 {
  unit 0 {
    family inet {
      address 10.10.9.1/30;
    }
    family mpls;
  }
}
xe-1/1/0 {
  unit 0 {
    family inet {
      address 10.10.3.2/30;
    }
    family mpls;
  }
}
ge-2/0/0 {
  unit 0 {
    family inet {
      address 198.51.100.8/24;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.5/24;
    }
  }
}
}
routing-options {
  static {
    route 172.0.0.0/8 next-hop 172.19.59.1;
  }
  autonomous-system 65000;
}
protocols {
  rsvp {
    interface all {
      link-protection;
    }
  }
}

```



```

    interface fxp0.0 {
        disable;
    }
}
mpls {
    label-switched-path to-RR {
        to 192.0.2.7;
    }
    label-switched-path to-PE2 {
        to 192.0.2.2;
    }
    label-switched-path to-PE3 {
        to 192.0.2.3;
    }
    label-switched-path to-PE4 {
        to 192.0.2.4;
    }
    label-switched-path to-PE1 {
        to 192.0.2.1;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
}
bgp {
    group to-rr {
        type internal;
        local-address 192.0.2.5;
        family inet-vpn {
            unicast;
        }
        family l2vpn {
            signaling;
        }
        neighbor 192.0.2.7;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all;
    }
}

```



```

        interface fxp0.0 {
            disable;
        }
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
}
routing-instances {
    L3VPN {
        instance-type vrf;
        interface ge-2/0/0.0;
        route-distinguisher 65000:5;
        vrf-target target:65000:2;
        vrf-table-label;
        protocols {
            bgp {
                group ce5 {
                    neighbor 198.51.100.2 {
                        peer-as 200;
                    }
                }
            }
        }
    }
}
}
}

```

The following output shows the final configuration of Router PE3:

### Router PE3

```

chassis {
    dump-on-panic;
    fpc 1 {
        pic 1 {
            tunnel-services {

```



```

        bandwidth 1g;
    }
}
}
network-services ip;
}
interfaces {
    ge-1/0/1 {
        unit 0 {
            family inet {
                address 198.51.100.9/24;
            }
        }
    }
    lt-1/1/10 {
        unit 0 {
            encapsulation ethernet-ccc;
            peer-unit 1;
            family ccc;
        }
        unit 1 {
            encapsulation ethernet;
            peer-unit 0;
            family inet {
                address 198.51.100.7/24;
            }
        }
    }
    xe-2/0/0 {
        unit 0 {
            family inet {
                address 10.10.20.2/30;
            }
            family mpls;
        }
    }
    xe-2/1/0 {
        unit 0 {
            family inet {
                address 10.10.6.1/30;
            }
            family mpls;
        }
    }
}

```



```

    }
}
xe-2/2/0 {
    unit 0 {
        family inet {
            address 10.10.5.2/30;
        }
        family mpls;
    }
}
xe-2/3/0 {
    unit 0 {
        family inet {
            address 10.10.1.2/30;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.0.2.3/24;
        }
    }
}
}
routing-options {
    static {
        route 172.0.0.0/8 next-hop 172.19.59.1;
    }
    autonomous-system 65000;
}
protocols {
    rsvp {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        label-switched-path to-RR {
            to 192.0.2.7;

```



```

    }
    label-switched-path to-PE2 {
        to 192.0.2.2;
    }
    label-switched-path to-PE5 {
        to 192.0.2.5;
    }
    label-switched-path to-PE4 {
        to 192.0.2.4;
    }
    label-switched-path to-PE1 {
        to 192.0.2.1;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
}
bgp {
    group RR {
        type internal;
        local-address 192.0.2.3;
        family inet-vpn {
            unicast;
        }
        family l2vpn {
            signaling;
        }
        neighbor 192.0.2.7;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
ldp {
    interface all;

```



```

        interface fxp0.0 {
            disable;
        }
    }
}
policy-options {
    policy-statement direct {
        term 1 {
            from protocol direct;
            then accept;
        }
    }
}
routing-instances {
    L3VPN {
        instance-type vrf;
        interface ge-1/0/1.0;
        interface lt-1/1/10.1;
        route-distinguisher 65000:33;
        vrf-target target:65000:2;
        vrf-table-label;
        protocols {
            bgp {
                export direct;
                group ce3 {
                    neighbor 198.51.100.10 {
                        peer-as 100;
                    }
                }
            }
        }
    }
    l2vpn {
        instance-type l2vpn;
        interface lt-1/1/10.0;
        route-distinguisher 65000:3;
        vrf-target target:65000:2;
        protocols {
            l2vpn {
                encapsulation-type ethernet;
                site CE3 {
                    site-identifier 3;
                }
            }
        }
    }
}

```



```

        interface lt-1/1/10.0 {
            remote-site-id 2;
        }
    }
}
}
}
}

```

## Verification

### IN THIS SECTION

- [Verifying Router PE2 VPN Interface | 390](#)
- [Verifying Router PE3 VPN Interface | 392](#)
- [Verifying End-to-End connectivity from Router CE2 to Router CE5 and Router CE3 | 395](#)

Verify the Layer 2 VPN-to-Layer 3 VPN interconnection:

### *Verifying Router PE2 VPN Interface*

#### Purpose

Check that the Layer 2 VPN is up and working at the Router PE2 interface and that all the routes are there.

#### Action

1. Use the **show l2vpn connections** command to verify that the connection site ID is 3 for Router PE3 and that the status is **Up**.

```
user@PE2> show l2vpn connections
```

```

Layer-2 VPN connections:
Legend for connection status (St)
EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch     WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down   NP -- interface hardware not present
CM -- control-word mismatch     -> -- only outbound connection is up
CN -- circuit not provisioned   <- -- only inbound connection is up

```



```

OR -- out of range           Up -- operational
OL -- no outgoing label      Dn -- down
LD -- local site signaled down CF -- call admission control failure
RD -- remote site signaled down SC -- local and remote site ID collision
LN -- local site not designated LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated
XX -- unknown connection status IL -- no incoming label
MM -- MTU mismatch          MI -- Mesh-Group ID not available
BK -- Backup connection      ST -- Standby connection
PF -- Profile parse failure   PB -- Profile busy
RS -- remote site standby

```

Legend for interface status

```

Up -- operational
Dn -- down

```

Instance: l2vpn

Local site: CE2 (2)

connection-site	Type	St	Time last up	# Up trans
<b>3</b>	rmt	<b>Up</b>	Jan 7 14:14:37 2010	1

Remote PE: 192.0.2.3, Negotiated control-word: Yes (Null)  
Incoming label: 800000, Outgoing label: 800001  
Local interface: ge-1/0/2.0, Status: Up, Encapsulation: ETHERNET

2. Use the **show route table** command to verify that the Layer 2 VPN route is present and that there is a next hop of **10.10.5.2** through the **xe-0/2/0.0** interface. The following output verifies that the Layer 2 VPN routes are present in the l2vpn.l2vpn.0 table. Similar output should be displayed for Router PE3.

user@PE2> **show route table l2vpn.l2vpn.0**

```

l2vpn.l2vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

65000:2:2:3/96
    *[L2VPN/170/-101] 02:40:35, metric2 1
        Indirect
65000:3:3:1/96
    *[BGP/170] 02:40:35, localpref 100, from 192.0.2.7
        AS path: I
        > to 10.10.5.2 via xe-0/2/0.0

```

3. Verify that Router PE2 has a Layer 2 VPN MPLS label pointing to the LDP label to Router PE3 in both directions (PUSH and POP).



user@PE2> **show route table mpls.0**

```

mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 1w3d 08:57:41, metric 1
           Receive
1          *[MPLS/0] 1w3d 08:57:41, metric 1
           Receive
2          *[MPLS/0] 1w3d 08:57:41, metric 1
           Receive
300560     *[LDP/9] 19:45:53, metric 1
           > to 10.10.2.1 via xe-0/1/0.0, Pop
300560(S=0) *[LDP/9] 19:45:53, metric 1
           > to 10.10.2.1 via xe-0/1/0.0, Pop
301008     *[LDP/9] 19:45:53, metric 1
           > to 10.10.4.2 via xe-0/3/0.0, Swap 299856
301536     *[LDP/9] 19:45:53, metric 1
           > to 10.10.4.2 via xe-0/3/0.0, Pop
301536(S=0) *[LDP/9] 19:45:53, metric 1
           > to 10.10.4.2 via xe-0/3/0.0, Pop
301712     *[LDP/9] 16:14:52, metric 1
           > to 10.10.5.2 via xe-0/2/0.0, Swap 315184
301728     *[LDP/9] 16:14:52, metric 1
           > to 10.10.5.2 via xe-0/2/0.0, Pop
301728(S=0) *[LDP/9] 16:14:52, metric 1
           > to 10.10.5.2 via xe-0/2/0.0, Pop
800000     *[L2VPN/7] 02:40:35
           > via ge-1/0/2.0, Pop   Offset: 4
ge-1/0/2.0  *[L2VPN/7] 02:40:35, metric2 1
           > to 10.10.5.2 via xe-0/2/0.0, Push 800001 Offset: -4

```

### Meaning

The **l2vpn** routing instance is up at interface **ge-1/0/2** and the Layer 2 VPN route is shown in table **l2vpn.l2vpn.0**. Table **mpls.0** shows the Layer 2 VPN routes used to forward the traffic using an LDP label.

### Verifying Router PE3 VPN Interface

#### Purpose

Check that the Layer 2 VPN connection from Router PE2 and Router PE3 is **Up** and working.

#### Action



1. Verify that the BGP session with the route reflector for the family **l2vpn-signaling** and the family **inet-vpn** is established.

```
user@PE3> show bgp summary
```

```
Groups: 2 Peers: 2 Down peers: 0
Table          Tot Paths  Act Paths Suppressed    History Damp State   Pending
bgp.l2vpn.0          1          1          0          0          0          0
bgp.L3VPN.0          1          1          0          0          0          0
Peer            AS    InPkt    OutPkt    OutQ    Flaps Last Up/Dwn    State|#Active
/Received/Accepted/Damped...
192.0.2.7  65000    2063     2084        0        1   15:35:16  Establ
  bgp.l2vpn.0: 1/1/1/0
  bgp.L3VPN.0: 1/1/1/0
  L3VPN.inet.0: 1/1/1/0
  l2vpn.l2vpn.0: 1/1/1/0
```

2. The following output verifies the Layer 2 VPN route and the label associated with it.

```
user@PE3> show route table l2vpn.l2vpn.0 detail
```

```
l2vpn.l2vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
65000:2:2:3/96 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
            Route Distinguisher: 65000:2
            Next hop type: Indirect
            Next-hop reference count: 4
            Source: 192.0.2.7
            Protocol next hop: 192.0.2.2
            Indirect next hop: 2 no-forward
            State: <Secondary Active Int Ext>
            Local AS: 65000 Peer AS: 65000
            Age: 2:45:52 Metric2: 1
            Task: BGP_65000.192.0.2.7+60585
            Announcement bits (1): 0-l2vpn-l2vpn
            AS path: I (Originator) Cluster list: 192.0.2.7
            AS path: Originator ID: 192.0.2.2
            Communities: target:65000:2 Layer2-info: encaps:ETHERNET, control
            flags:Control-Word, mtu: 0, site preference: 100 Accepted
            Label-base: 800000, range: 2, status-vector: 0x0
            Localpref: 100
            Router ID: 192.0.2.7
            Primary Routing Table bgp.l2vpn.0
```

3. The following output show the L2VPN MPLS.0 route in the mpls.0 route table.



user@PE3> show route table mpls.0

```

mpls.0: 21 destinations, 21 routes (21 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 1w3d 09:05:41, metric 1
           Receive
1          *[MPLS/0] 1w3d 09:05:41, metric 1
           Receive
2          *[MPLS/0] 1w3d 09:05:41, metric 1
           Receive
16         *[VPN/0] 15:59:24
           to table L3VPN.inet.0, Pop
315184     *[LDP/9] 16:21:53, metric 1
           > to 10.10.20.1 via xe-2/0/0.0, Pop
315184(S=0) *[LDP/9] 16:21:53, metric 1
           > to 10.10.20.1 via xe-2/0/0.0, Pop
315200     *[LDP/9] 01:13:44, metric 1
           to 10.10.20.1 via xe-2/0/0.0, Swap 625297
           > to 10.10.6.2 via xe-2/1/0.0, Swap 299856
315216     *[LDP/9] 16:21:53, metric 1
           > to 10.10.6.2 via xe-2/1/0.0, Pop
315216(S=0) *[LDP/9] 16:21:53, metric 1
           > to 10.10.6.2 via xe-2/1/0.0, Pop
315232     *[LDP/9] 16:21:45, metric 1
           > to 10.10.1.1 via xe-2/3/0.0, Pop
315232(S=0) *[LDP/9] 16:21:45, metric 1
           > to 10.10.1.1 via xe-2/3/0.0, Pop
315248     *[LDP/9] 16:21:53, metric 1
           > to 10.10.5.1 via xe-2/2/0.0, Pop
315248(S=0) *[LDP/9] 16:21:53, metric 1
           > to 10.10.5.1 via xe-2/2/0.0, Pop
315312     *[RSVP/7] 15:02:40, metric 1
           > to 10.10.6.2 via xe-2/1/0.0, label-switched-path to-pe5
315312(S=0) *[RSVP/7] 15:02:40, metric 1
           > to 10.10.6.2 via xe-2/1/0.0, label-switched-path to-pe5
315328     *[RSVP/7] 15:02:40, metric 1
           > to 10.10.20.1 via xe-2/0/0.0, label-switched-path to-RR
315360     *[RSVP/7] 15:02:40, metric 1
           > to 10.10.20.1 via xe-2/0/0.0, label-switched-path to-RR
316272     *[RSVP/7] 01:13:27, metric 1
           > to 10.10.6.2 via xe-2/1/0.0, label-switched-path
Bypass->10.10.9.1
316272(S=0) *[RSVP/7] 01:13:27, metric 1
           > to 10.10.6.2 via xe-2/1/0.0, label-switched-path

```



```

Bypass->10.10.9.1
800001          *[L2VPN/7] 02:47:33
                 > via lt-1/1/10.0, Pop          Offset: 4
lt-1/1/10.0     *[L2VPN/7] 02:47:33, metric2 1
                 > to 10.10.5.1 via xe-2/2/0.0, Push 800000 Offset: -4

```

4. Use the **show route table mpls.0** command with the **detail** option to see the BGP attributes of the route such as next-hop type and label operations.

```
user@PE5> show route table mpls.0 detail
```

```

lt-1/1/10.0 (1 entry, 1 announced)
  *L2VPN Preference: 7
    Next hop type: Indirect
    Next-hop reference count: 2
    Next hop type: Router, Next hop index: 607
    Next hop: 10.10.5.1 via xe-2/2/0.0, selected
    Label operation: Push 800000 Offset: -4
    Protocol next hop: 192.0.2.2
    Push 800000 Offset: -4
    Indirect next hop: 8cae0a0 1048574
    State: <Active Int>
    Age: 2:46:34 Metric2: 1
    Task: Common L2 VC
    Announcement bits (2): 0-KRT 2-Common L2 VC
    AS path: I
    Communities: target:65000:2 Layer2-info: encaps:ETHERNET, control
    flags:Control-Word, mtu: 0, site preference: 100

```

### Verifying End-to-End connectivity from Router CE2 to Router CE5 and Router CE3

#### Purpose

Check the connectivity between Routers CE2, CE3, and CE5.

#### Action

1. Ping the Router CE3 IP address from Router CE2.

```
user@CE2> ping 198.51.100.10 # CE3 IP address
```

```

PING 198.51.100.10 (198.51.100.10): 56 data bytes
64 bytes from 198.51.100.10: icmp_seq=0 ttl=63 time=0.708 ms
64 bytes from 198.51.100.10: icmp_seq=1 ttl=63 time=0.610 ms

```



## 2. Ping the Router CE5 IP address from Router CE2.

```
user@CE2> ping 198.51.100.2 # CE5 IP address
```

```
PING 198.51.100.2 (198.51.100.2): 56 data bytes  
64 bytes from 198.51.100.2: icmp_seq=0 ttl=62 time=0.995 ms  
64 bytes from 198.51.100.2: icmp_seq=1 ttl=62 time=1.005 ms
```

## RELATED DOCUMENTATION

*Understanding Layer 2 VPNs*

[Understanding Layer 3 VPNs](#) | 37



# 3

CHAPTER

## Interprovider and Carrier-of-Carrier VPNs

---

Interprovider and Carrier-of-Carriers VPNs | **399**

Interprovider VPNs | **403**

Carrier-of-Carrier VPNs | **507**

---







# Interprovider and Carrier-of-Carriers VPNs

## IN THIS SECTION

- [Traditional VPNs, Interprovider VPNs, and Carrier-of-Carriers VPNs | 399](#)
- [Understanding Interprovider and Carrier-of-Carriers VPNs | 400](#)
- [Interprovider and Carrier-of-Carrier VPNs Example Terminology | 401](#)
- [Supported Carrier-of-Carriers and Interprovider VPN Standards | 402](#)

## Traditional VPNs, Interprovider VPNs, and Carrier-of-Carriers VPNs

As VPNs are deployed on the Internet, the customer of a VPN service provider might be another service provider rather than an end customer. The customer service provider depends on the VPN service provider to deliver a VPN transport service between the customer service provider's points of presence (POPs) or regional networks.

If the customer service provider's sites have different autonomous system (AS) numbers, then the VPN transit service provider supports carrier-of-carrier VPN service for the interprovider VPN service. If the customer service provider's sites have the same AS number, then the VPN transit service provider delivers a carrier-of-carriers VPN service.

There are several different methods for enabling interprovider VPNs based on RFC 4364, **BGP/MPLS IP Virtual Private Networks (VPNs)**:

- Interprovider Layer 3 VPN Option A—Interprovider VRF-to-VRF connections at the AS boundary routers (ASBR) (not very scalable).
- Interprovider Layer 3 VPN Option B—Interprovider EBGp redistribution of labeled VPN-IPv4 routes from AS to neighboring AS (somewhat scalable).
- Interprovider Layer 3 VPN Option C—Interprovider multihop EBGp redistribution of labeled VPN-IPv4 routes between source and destination ASs, with EBGp redistribution of labeled IPv4 routes from AS to neighboring AS (very scalable).

In traditional IP routing architectures, there is a clear distinction between internal routes and external routes. From the perspective of an Internet service provider (ISP), internal routes include all the provider's internal links (including BGP next hops) and loopback interfaces. These internal routes are exchanged with other routing platforms in the ISP's network by means of an interior gateway protocol (IGP), such as OSPF or IS-IS. All routes learned at Internet peering points or from customer sites are classified as external routes



and are distributed by means of an exterior gateway protocol (EGP) such as BGP. In traditional IP routing architectures, the number of internal routes is typically much smaller than the number of external routes.

## Understanding Interprovider and Carrier-of-Carriers VPNs

All interprovider and carrier-of-carriers VPNs share the following characteristics:

- Each interprovider or carrier-of-carriers VPN customer must distinguish between internal and external customer routes.
- Internal customer routes must be maintained by the VPN service provider in its PE routers.
- External customer routes are carried only by the customer's routing platforms, not by the VPN service provider's routing platforms.

The key difference between interprovider and carrier-of-carriers VPNs is whether the customer sites belong to the same AS or to separate ASs:

- [“Interprovider VPNs” on page 403](#)—The customer sites belong to different ASs. You need to configure EBGp to exchange the customer's external routes.
- [“Understanding Carrier-of-Carriers VPNs” on page 507](#)—The customer sites belong to the same AS. You need to configure IBGP to exchange the customer's external routes.

In general, each service provider in a VPN hierarchy is required to maintain its own internal routes in its P routers, and the internal routes of its customers in its PE routers. By recursively applying this rule, it is possible to create a hierarchy of VPNs.

The following are definitions of the types of PE routers specific to interprovider and carrier-of-carriers VPNs:

- The AS border router is located at the AS border and handles traffic leaving and entering the AS.
- The end PE router is the PE router in the customer VPN; it is connected to the CE router at the end customer's site.



## Interprovider and Carrier-of-Carrier VPNs Example Terminology

### B

**bgp.l3vpn.0** The table on the provider edge (PE) router in which the VPN-IPv4 routes that are received from another PE router are stored. Incoming routes are checked against the **vrf-import** statements from all the VPNs configured on the PE router. If there is a match, the VPN-Internet Protocol version 4 (IPv4) route is added to the bgp.l3vpn.0 table. To view the bgp.l3vpn.0 table, issue the **show route table bgp.l3vpn.0** command.

### M

**MP-EBGP** The multiprotocol external BGP (MP-EBGP) mechanism is used to export VPN-IPv4 routes across an autonomous system (AS) boundary. To apply this mechanism, use the **labeled-unicast** statement at the **[edit protocols bgp group group-name family inet]** hierarchy level.

### R

**routing-instance-name.  
inet.0**

- The routing table for a specific routing instance. For example, a routing instance called VPN-A has a routing table called VPN-A.inet.0. Routes are added to this table in the following ways:
  - They are sent from a customer edge (CE) router configured within the VPN-A routing instance.
  - They are advertised from a remote PE router that passes the **vrf-import** policy configured within VPN-A (to view the route, run the **show route** command). IPv4 (not VPN-IPv4) routes are stored in this table.

### V

**vrf-export policy-name** An export policy configured on a particular routing instance on a PE router. It is required for the configuration of interprovider and carrier-of-carriers VPNs. It is applied to VPN-IPv4 routes (originally learned from locally connected CE routers as IPv4 routes), which are advertised to another PE router or route reflector.

**vrf-import policy-name** An import policy configured on a particular routing instance on a PE router. This policy is required for the configuration of interprovider and carrier-of-carriers VPNs. It is applied to VPN-IPv4 routes learned from another PE router or a route reflector.



# Supported Carrier-of-Carriers and Interprovider VPN Standards

Junos OS substantially supports the following RFCs, which define standards for carrier-of-carriers and interprovider virtual private networks (VPNs).

- RFC 3107, *Carrying Label Information in BGP-4*
- RFC 3916, *Requirements for Pseudo-Wire Emulation Edge-to-Edge (PWE3)*  
Supported on MX Series routers with the Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP.
- RFC 3985, *Pseudo Wire Emulation Edge-to-Edge (PWE3) Architecture*  
Supported on MX Series routers with the Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP.
- RFC 4364, *BGP/MPLS IP Virtual Private Networks (VPNs)*
- RFC 5601, *Pseudowire (PW) Management Information Base (MIB)*
- RFC 5603, *Ethernet Pseudowire (PW) Management Information Base (MIB)*
- RFC 6368, *Internal BGP as the Provider/Customer Edge Protocol for BGP/MPLS IP Virtual Private Networks (VPNs)*

## SEE ALSO

<i>Supported VPWS Standards</i>
<i>Supported Layer 2 VPN Standards</i>
<a href="#">Supported Layer 3 VPN Standards   41</a>
<a href="#">Supported Multicast VPN Standards   563</a>
<i>Supported VPLS Standards</i>
<i>Supported Standards for BGP</i>
<i>Accessing Standards Documents on the Internet</i>

## RELATED DOCUMENTATION

<a href="#">Understanding Carrier-of-Carriers VPNs   507</a>
<i>MPLS Feature Support on QFX Series and EX4600 Switches</i>



# Interprovider VPNs

## IN THIS SECTION

- [Interprovider VPNs | 403](#)
- [Interprovider VPN Example—MP-EBGP Between ISP Peer Routers | 406](#)
- [Interprovider VPN Example—Multihop MP-EBGP with P Routers | 415](#)
- [Example: Configuring Interprovider Layer 3 VPN Option A | 424](#)
- [Example: Configuring Interprovider Layer 3 VPN Option B | 451](#)
- [Example: Configuring Interprovider Layer 3 VPN Option C | 478](#)

## Interprovider VPNs


## IN THIS SECTION

- [Linking VRF Tables Between Autonomous Systems | 404](#)
- [Configuring Next Generation Layer 3 VPNs Options A, B, and C | 404](#)
- [Configuring Multihop MP-EBGP Between AS Border Routers | 406](#)



Interprovider VPNs provide connectivity between separate ASs. This functionality might be used by a VPN customer who has connections to several different service providers, or different connections to the same service provider in different geographic regions, each of which has a different AS. [Figure 44 on page 404](#) illustrates the type of network topology used by an interprovider VPN.

**Figure 44: Interprovider VPN Network Topology**

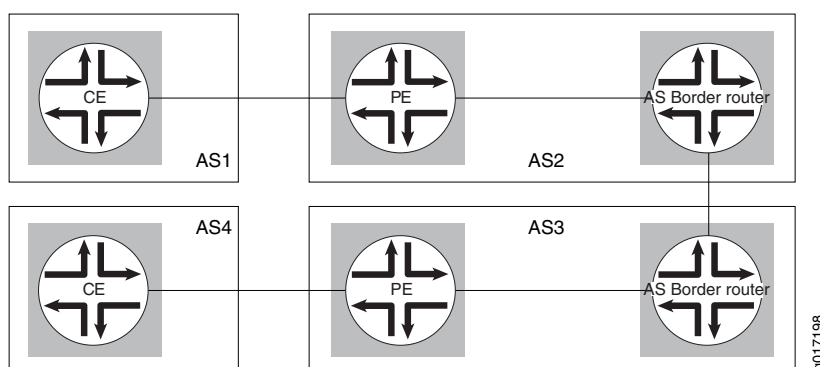

The following sections describe the ways you can configure an interprovider VPN:

### Linking VRF Tables Between Autonomous Systems

You can connect two separate ASs by simply linking the VPN routing and forwarding (VRF) table in the AS border router (ASBR) of one AS to the VRF table in the ASBR in the other AS. Each ASBR must include a VRF routing instance for each VPN configured in both service provider networks. You then configure an IP session between the two ASBRs. In effect, the ASBRs treat each other as customer edge (CE) routers.

Because of the complexity of the configuration, particularly with regard to scaling, this method is not recommended. The details of this configuration are not provided with documentation.

### Configuring Next Generation Layer 3 VPNs Options A, B, and C

For next generation Layer 3 VPNs, the PE routers within an AS use multiprotocol external BGP (MP-EBGP) to distribute labeled VPN–Internet Protocol version 4 (IPv4) routes to an ASBR or to a route reflector of which the ASBR is a client. The ASBR uses multiprotocol external BGP (MP-EBGP) to distribute the labeled VPN-IPv4 routes to its peer ASBR in the neighboring AS. The peer ASBR then uses MP-IBGP to distribute labeled VPN-IPv4 routes to PE routers, or to a route reflector of which the PE routers are a client.



You can configure both unicast (Junos OS Release 9.5 and later) and multicast (Junos OS Release 12.1 and later) next generation Layer 3 VPNs across ASs. The Junos OS software supports next generation Layer 3 VPNs option A, option B, and option C:

- **Option A**—This is simple though less scaleable interprovider VPN solution to the problem of providing VPN services to a customer that has different sites, not all of which can use the same service provider. In this implementation, the VPN routing and forwarding (VRF) table in the ASBR of one AS is linked to the VRF table in the ASBR in the other AS. Each ASBR must include a VRF instance for each VPN configured in both service provider networks. Then an IGP or BGP must be configured between the ASBRs.
- **Option B**—For this interprovider VPN solution, the customer requires VPN services for different sites, yet the same service provider is not available for all of those sites. With option B, the ASBR routers keep all VPN-IPv4 routes in the routing information base (RIB), and the labels associated with the prefixes are kept in the forwarding information base (FIB). Because the RIB and FIB tables can take too much of the respective allocated memory, this solution is not very scalable for an interprovider VPN. If a transit service provider is used between service provider 1 and service provider 2, the transit service provider also has to keep all VPN-IPv4 routes in the RIB and the corresponding labels in the FIB. The ASBRs at the transit service provider have the same functionality as ASBRs at service provider 1 or service provider 2 in this solution. The PE routers within each AS use multiprotocol internal BGP (MP-IBGP) to distribute labeled VPN-IPv4 routes to an ASBR or to a route reflector of which the ASBR is a client. The ASBR uses MP-EBGP to distribute the labeled VPN-IPv4 routes to its peer ASBR router in the neighboring AS. The peer ASBR then uses MP-IBGP to distribute labeled VPN-IPv4 routes to PE routers, or to a route reflector of which the PE routers are a client.
- **Option C**—For this interprovider VPN solution, the customer service provider depends on the VPN service provider to deliver a VPN transport service between the customer service provider's points of presence (POPs) or regional networks. This functionality might be used by a VPN customer who has connections to several different service providers, or different connections to the same service provider in different geographic regions, each of which has a different AS number. For option C, only routes internal to the service provider networks are announced between ASBRs. This is achieved by using the **family inet labeled-unicast** statements in the IBGP and EBGP configuration on the PE routers. Labeled IPv4 (not VPN-IPv4) routes are exchanged by the ASBRs to support MPLS. An MP-EBGP session between the end PE routers is used for the announcement of VPN-IPv4 routes. In this manner, VPN connectivity is provided while keeping VPN-IPv4 routes out of the core network.

#### SEE ALSO

[Example: Configuring Interprovider Layer 3 VPN Option A | 424](#)

[Example: Configuring Interprovider Layer 3 VPN Option B | 451](#)

[Example: Configuring Interprovider Layer 3 VPN Option C | 478](#)

[MPLS Feature Support on QFX Series and EX4600 Switches](#)



## Configuring Multihop MP-EBGP Between AS Border Routers

In this type of interprovider VPN configuration, P routers do not need to store all the routes in all the VPNs. Only the PE routers must have all the VPN routes. The P routers simply forward traffic to the PE routers—they do not store or process any information about the packets' destination. The connections between the AS border routers in separate ASs forward traffic between the ASs, much as a label-switched path (LSP) works.

The following are the basic steps you take to configure an interprovider VPN in this manner:

1. Configure multihop EBGp redistribution of labeled VPN-IPv4 routes between the source and destination ASs.
2. Configure EBGp to redistribute labeled IPv4 routes from its AS to neighboring ASs.
3. Configure MPLS on the end PE routers of the VPNs.

## Interprovider VPN Example—MP-EBGP Between ISP Peer Routers

### IN THIS SECTION

- [Configuration for Router A | 407](#)
- [Configuration for Router B | 408](#)
- [Configuration for Router C | 410](#)
- [Configuration for Router D | 411](#)
- [Configuration for Router E | 412](#)
- [Configuration for Router F | 414](#)

In this example, all routes learned from the CE routers (or switches) are sent over both service provider networks as VPN-IPv4 routes. The routes are initially learned by the PE routers (Router B and Router E) from the CE routers (Router A and Router F) and are announced by the PE routers to the AS border routers (Router C and Router D). The AS border routers are then configured with an MP-EBGP session, enabling them to pass the VPN-IPv4 routes with each other. When an AS border router—Router C for example—learns VPN-IPv4 routes from an IBGP PE, the following events occur:




1. Router C sets itself as the next hop for the route and creates a label for that route.
2. Router C advertises the VPN-IPv4 route to PE Router D in AS 10045.
3. Router D sets the next hop to itself, creates another label, and then forwards the label and the route to its IBGP PE router (Router E).

This example has scaling limitations because of restrictions on the number of labels each PE router needs to allocate at the AS border.

Figure 45 on page 407 illustrates the network topology used in this VPN example.

**Figure 45: Network Topology for the Interprovider VPN Example**

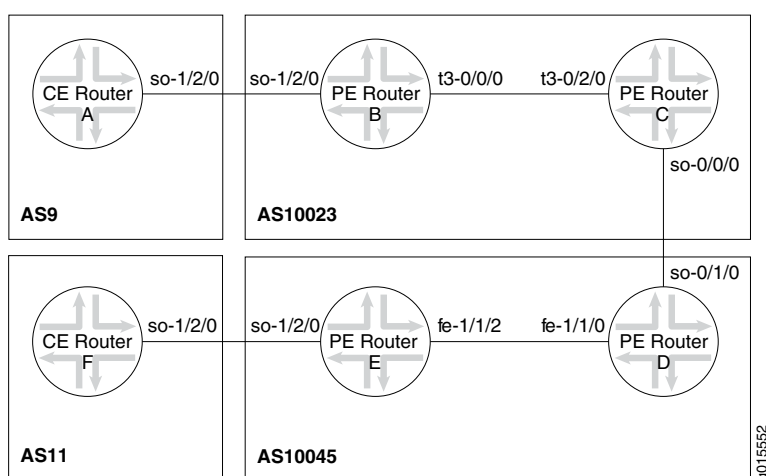

For configuration information see the following sections:

### Configuration for Router A

Configure a family `inet` EBGP session with Router B and export the direct routes:

```
[edit]
protocols {
  bgp {
    group to-provider {
      export attached;
      peer-as 10023;
      neighbor 192.168.198.2;
    }
  }
}
policy-options {
  policy-statement attached {
```



```

    from protocol direct;
    then accept;
  }
}

```

## Configuration for Router B

Router A is configured as a CE router (using the **routing-instances** statement) in the configuration for Router B. Because they exchange VPN-IPv4 routes, Router D and Router C are configured as PE routers.

Configure Router B:

```

[edit]
protocols {
  rsvp {
    interface t3-0/0/0.0;
  }
  mpls {
    label-switched-path to-routerC {
      to 10.255.14.171;
      description "to-routerC for use with VPNs";
    }
    interface t3-0/0/0.0;
    interface so-1/2/0.0;
  }
  bgp {
    group to-ibgp {
      type internal;
      local-address 10.255.14.175;
      family inet-vpn {
        unicast;
      }
      neighbor 10.255.14.171;
    }
  }
  ospf {
    traffic-engineering;
    reference-bandwidth 4g;
    area 0.0.0.0 {
      interface t3-0/0/0.0;
      interface lo0.0 {
        passive;
      }
    }
  }
}

```



```

    }
  }
}
routing-instances {
  vpn {
    instance-type vrf;
    interface so-1/2/0.0;
    route-distinguisher 10.255.14.175:9;
    vrf-import vpn-import;
    vrf-export vpn-export;
    protocols {
      bgp {
        group to-ce {
          peer-as 9;
          neighbor 192.168.198.1;
        }
      }
    }
  }
}
policy-options {
  policy-statement vpn-import {
    term 1 {
      from {
        protocol bgp;
        community vpn-comm;
      }
      then accept;
    }
    term 2 {
      then reject;
    }
  }
  policy-statement vpn-export {
    term 1 {
      from protocol bgp;
      then {
        community add vpn-comm;
        accept;
      }
    }
    term 2 {
      then reject;
    }
  }
}

```



```

    }
    community vpna-comm members target:100:1001;
  }

```

## Configuration for Router C

In the BGP protocol configuration for Router C, include the **keep all** statement. When this statement is included, BGP must store every route learned through BGP.

When you configure **keep all** or **keep none** and the peers support route refresh, the local speaker sends a refresh message and performs an import evaluation. For these peers, the sessions do not restart. To determine if a peer supports refresh, check for **Peer supports Refresh capability** in the output of the **show bgp neighbor** command.



**CAUTION:** If you configure **keep all** or **keep none** and the peer does not support session restart, the associated BGP sessions are restarted (flapped).

Configure two BGP sessions (configure **family inet-vpn** on both sessions):

- IBGP session to Router B (group **to-ibgp** in this example)
- EBGP session to Router D (group **to-ebgp-pe** in this example)

Interface **t3-0/2/0** is added at the **[edit protocols mpls]** hierarchy level, allowing BGP to announce routes with labels over the EBGP session.

Configure Router C:

```

[edit]
protocols {
  rsvp {
    interface t3-0/2/0.0;
  }
  mpls {
    label-switched-path to-routerB {
      to 10.255.14.175;
      description "to-routerB for use with vpns";
    }
    interface t3-0/2/0.0;
    interface so-0/0/0.0;
  }
  bgp {

```



```

keep all;
group to-ibgp {
    type internal;
    local-address 10.255.14.171;
    family inet-vpn {
        unicast;
    }
    neighbor 10.255.14.175;
}
group to-ebgp-pe {
    type external;
    family inet-vpn {
        unicast;
    }
    neighbor 192.168.197.22 {
        peer-as 10045;
    }
}
}
ospf {
    traffic-engineering;
    reference-bandwidth 4g;
    area 0.0.0.0 {
        interface t3-0/2/0.0;
        interface lo0.0 {
            passive;
        }
    }
}
}

```

## Configuration for Router D

The configuration for Router D is almost identical to that of Router C:

```

[edit]
protocols {
    rsvp {
        interface fe-1/1/0.0;
    }
    mpls {
        label-switched-path to-E {
            to 10.255.14.177;
        }
    }
}

```



```

        description "to-routerE for vpna";
    }
    interface fe-1/1/0.0;
    interface so-0/1/0.0;
}
bgp {
    keep all;
    group to-ibgp-pe {
        type internal;
        family inet-vpn {
            unicast;
        }
        neighbor 10.255.14.177;
    }
    group to-ebgp-pe {
        type external;
        family inet-vpn {
            unicast;
        }
        peer-as 10023;
        neighbor 192.168.197.21;
    }
}
ospf {
    traffic-engineering;
    reference-bandwidth 4g;
    area 0.0.0.0 {
        interface fe-1/1/0.0;
        interface lo0.0 {
            passive;
        }
    }
}
}
}

```

## Configuration for Router E

The configuration for Router E is very similar to the configuration for Router B:

```

[edit]
protocols {
    rsvp {
        interface fe-1/1/2.0;
    }
}

```



```

}
mpls {
    label-switched-path to-routerD {
        to 10.255.14.173;
        description "to-routerD for use with VPNa";
    }
    interface fe-1/1/2.0;
    interface so-1/2/0.0;
}
bgp {
    group to-ibgp-pe {
        type internal;
        local-address 10.255.14.177;
        family inet-vpn {
            unicast;
        }
        neighbor 10.255.14.173;
    }
}
ospf {
    traffic-engineering;
    reference-bandwidth 4g;
    area 0.0.0.0 {
        interface fe-1/1/2.0;
        interface lo0.0 {
            passive;
        }
    }
}
}
routing-instances {
    vpn {
        instance-type vrf;
        interface so-1/2/0.0;
        route-distinguisher 10.255.14.177:11;
        vrf-import vpn-import;
        vrf-export vpn-export;
        protocols {
            bgp {
                group to-routerF-ce {
                    neighbor 192.168.198.14 {
                        peer-as 11;
                    }
                }
            }
        }
    }
}

```



```

    }
  }
}
}
policy-options {
  policy-statement vpna-import {
    term 1 {
      from {
        protocol bgp;
        community vpna-comm;
      }
      then accept;
    }
    term 2 {
      then reject;
    }
  }
  policy-statement vpna-export {
    term 1 {
      from protocol bgp;
      then {
        community add vpna-comm;
        accept;
      }
    }
    term 2 {
      then reject;
    }
  }
  community vpna-comm members target:100:1001;
}

```

## Configuration for Router F

Configure Router F as a CE router; the configuration is similar to that for Router A:

```

[edit]
protocols {
  bgp {
    group to-provider {
      type external;
      export attached;
      neighbor 192.168.198.13 {

```



```

        peer-as 10045;
    }
}
}
}
policy-options {
    policy-statement attached {
        from protocol direct;
        then accept;
    }
}
}
}

```

#### SEE ALSO

*MPLS Feature Support on QFX Series and EX4600 Switches*

[Understanding Interprovider and Carrier-of-Carriers VPNs | 400](#)

## Interprovider VPN Example—Multihop MP-EBGP with P Routers

### IN THIS SECTION


- [Configuration for Router A | 416](#)
- [Configuration for Router B | 416](#)
- [Configuration for Router C | 419](#)
- [Configuration for Router D | 420](#)
- [Configuration for Router E | 422](#)
- [Configuration for Router F | 424](#)

In this example, labeled IPv4 (not VPN-IPv4), routes are exchanged by the AS border routers (Router C and Router D) to provide MPLS connectivity between the PE routers. Router G and H are provider routers.

[Figure 46 on page 416](#) illustrates the network topology used in this VPN example.



Figure 46: Network Topology of Interprovider VPN Example—Multihop MP-EBGP

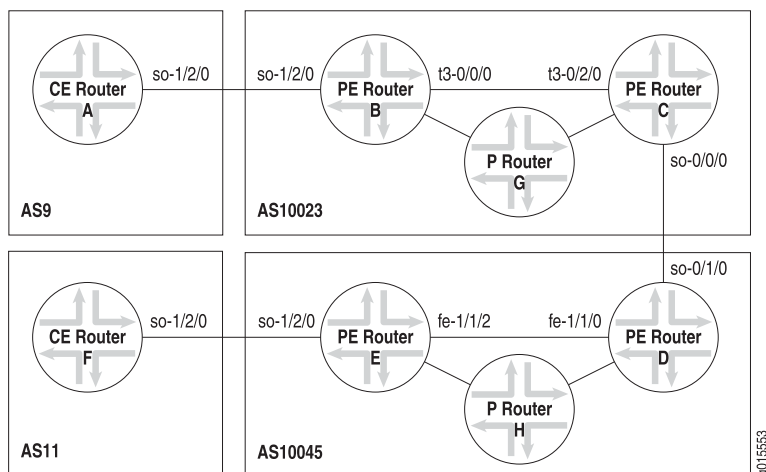

Only routes internal to the service provider networks should be announced between Router C and Router D. Configure this by including the **family inet labeled-unicast** statement in the IBGP and EBGP configuration on the PE routers. When you set

**family inet labeled-unicast**, the local router announces internal routes from inet.0 in the following manner:

- If a label exists for the route, the local router creates a label, performs a swap, and announces the route from inet.0 with the label.
- If a label does not exist for the route, the local router creates a label, performs a pop, and announces the route from inet.0 with the label.

Routes learned from the **labeled-unicast** session are placed into the inet.0 routing table.

In addition, you configure a multihop MP-EBGP session between the end PE routers (Router B and Router E). This additional MP-EBGP session allows the announcement of VPN-IPv4 routes, and allows you to maintain VPN connectivity while keeping VPN-IPv4 routes out of the core of the network.

For configuration information, see the following sections:

### Configuration for Router A

The configuration for Router A in this example is identical to the configuration for Router A in [“Interprovider VPN Example—MP-EBGP Between ISP Peer Routers” on page 406](#). See [“Interprovider VPN Example—MP-EBGP Between ISP Peer Routers” on page 406](#)

### Configuration for Router B

Router A is configured as a CE router (using the **routing-instances** statement) in the configuration for Router B. Because they exchange VPN-IPv4 routes, Router C and Router D are configured as PE routers.



In the BGP group **to-ibgp**, include the **family inet labeled-unicast** statement to pass labeled IPv4 routes, and configure an EBGP multihop session to pass VPN-IPv4 routes:

```
[edit]
protocols {
  bgp {
    group to-ibgp {
      type internal;
      local-address 10.255.14.175;
      family inet {
        labeled-unicast {
          resolve-vpn;
        }
      }
      neighbor 10.255.14.171;
    }
    group to-remote-pe {
      multihop {
        ttl 10;
      }
      family inet-vpn {
        unicast;
      }
      neighbor 10.255.14.177 {
        peer-as 10045;
      }
    }
  }
  mpls {
    label-switched-path to-routerC {
      to 10.255.14.171;
      description "to-routerC for use with VPNs";
    }
    interface t3-0/0/0.0;
    interface so-1/2/0.0;
  }
  ospf {
    traffic-engineering;
    reference-bandwidth 4g;
    area 0.0.0.0 {
      interface t3-0/0/0.0;
      interface lo0.0 {
        passive;
      }
    }
  }
}
```



```

    rsvp {
        interface t3-0/0/0.0;
    }
}
routing-instances {
    vpn {
        instance-type vrf;
        interface so-1/2/0.0;
        route-distinguisher 10.255.14.175:9;
        vrf-import vpn-import;
        vrf-export vpn-export;
        protocols {
            bgp {
                group to-ce {
                    peer-as 9;
                    neighbor 192.168.198.1;
                }
            }
        }
    }
}
policy-options {
    policy-statement vpn-import {
        term 1 {
            from {
                protocol bgp;
                community vpn-comm;
            }
            then accept;
        }
        term 2 {
            then reject;
        }
    }
    policy-statement vpn-export {
        term 1 {
            from protocol bgp;
            then {
                community add vpn-comm;
                accept;
            }
        }
        term 2 {
            then reject;
        }
    }
}

```



```

    }
  }
  community vpna-comm members target:100:1001;
}
}

```

## Configuration for Router C

Configure two BGP sessions (configure **family inet-vpn** on both sessions):

- IBGP session to Router B (group **to-ibgp** in this example)
- EBGP session to Router D (group **to-ebgp-pe** in this example)

Interface **t3-0/2/0** is added at the **[edit protocols mpls]** hierarchy level, allowing BGP to announce routes with labels over the EBGP session.

Configure Router C:

```

[edit]
protocols {
  bgp {
    group to-ibgp {
      type internal;
      local-address 10.255.14.171;
      family inet {
        labeled-unicast;
      }
      neighbor 10.255.14.175;
    }
    group to-ebgp-pe {
      type external;
      family inet {
        labeled-unicast;
      }
      export internal;
      neighbor 192.168.197.22 {
        peer-as 10045;
      }
    }
  }
  mpls {
    label-switched-path to-routerB {
      to 10.255.14.175;
      description "to-routerB for use with vpns";
    }
  }
}

```



```

    }
    interface t3-0/2/0.0;
    interface so-0/0/0.0;
    traffic-engineering bgp-igp;
  }
  rsvp {
    interface t3-0/2/0.0;
  }
  ospf {
    traffic-engineering;
    reference-bandwidth 4g;
    area 0.0.0.0 {
      interface t3-0/2/0.0;
      interface lo0.0 {
        passive;
      }
    }
  }
}
policy-options {
  policy-statement internal {
    term 1 {
      from protocol [ospf direct ldp];
      then accept;
    }
    term 2 {
      then reject;
    }
  }
}
}

```

## Configuration for Router D

Configure Router D:

```

[edit]
protocols {
  bgp {
    group to-ibgp-pe {
      type internal;
      family inet {
        labeled-unicast;
      }
    }
  }
}

```



```

    }
    neighbor 10.255.14.177;
}
group to-ebgp-pe {
    type external;
    family inet {
        labeled-unicast;
    }
    export internal;
    peer-as 10023;
    neighbor 192.168.197.21;
}
mpls {
    label-switched-path to-E {
        to 10.255.14.177;
        description "to-routerE for vpna";
    }
    interface fe-1/1/0.0;
    interface so-0/1/0.0;
    traffic-engineering bgp-igp;
}
ospf {
    traffic-engineering;
    reference-bandwidth 4g;
    area 0.0.0.0 {
        interface fe-1/1/0.0;
        interface lo0.0 {
            passive;
        }
    }
}
rsvp {
    interface fe-1/1/0.0;
}
}
policy-options {
    policy-statement internal {
        term 1 {
            from protocol [ospf direct ldp];
            then accept;
        }
        term 2 {
            then reject;
        }
    }
}

```



```

    }
  }
}

```

## Configuration for Router E

The configuration for Router E is very similar to the configuration for Router B:

```

[edit]
protocols {
  bgp {
    group to-ibgp-pe {
      type internal;
      local-address 10.255.14.177;
      family inet {
        labeled-unicast;
      }
      neighbor 10.255.14.173;
    }
    group to-remote-pe {
      multihop {
        ttl 10;
      }
      family inet-vpn {
        unicast;
      }
      neighbor 10.255.14.175 {
        peer-as 10023;
      }
    }
  }
  mpls {
    label-switched-path to-routerD {
      to 10.255.14.173;
      description "to-routerD for use with VPNa";
    }
    interface fe-1/1/2.0;
    interface so-1/2/0.0;
  }
  ospf {
    traffic-engineering;
    reference-bandwidth 4g;
    area 0.0.0.0 {
      interface fe-1/1/2.0;
    }
  }
}

```



```

        interface lo0.0 {
            passive;
        }
    }
}
rsvp {
    interface fe-1/1/2.0;
}
}
routing-instances {
    vpna {
        instance-type vrf;
        interface so-1/2/0.0;
        route-distinguisher 10.255.14.177:11;
        vrf-import vpna-import;
        vrf-export vpna-export;
        protocols {
            bgp {
                group to-routerF-ce {
                    neighbor 192.168.198.14 {
                        peer-as 11;
                    }
                }
            }
        }
    }
}
policy-options {
    policy-statement vpna-import {
        term 1 {
            from {
                protocol bgp;
                community vpna-comm;
            }
            then accept;
        }
        term 2 {
            then reject;
        }
    }
    policy-statement vpna-export {
        term 1 {
            from protocol bgp;
            then {

```



```

        community add vpnna-comm;
        accept;
    }
}
term 2 {
    then reject;
}
}
community vpnna-comm members target:100:1001;
}
}

```

### Configuration for Router F

The configuration for Router F in this example is identical to the configuration for Router F in [“Interprovider VPN Example—MP-EBGP Between ISP Peer Routers”](#) on page 406. See [“Interprovider VPN Example—MP-EBGP Between ISP Peer Routers”](#) on page 406.

#### SEE ALSO

*MPLS Feature Support on QFX Series and EX4600 Switches*

[Understanding Interprovider and Carrier-of-Carriers VPNs](#) | 400

## Example: Configuring Interprovider Layer 3 VPN Option A

### IN THIS SECTION

- [Requirements](#) | 425
- [Overview and Topology](#) | 425
- [Configuration](#) | 426

Interprovider Layer 3 VPN Option A provides interprovider VRF-to-VRF connections at the AS boundary routers (ASBRs). Compared to Option B and Option C, Option A is the least scalable solution.



This example provides a step-by-step procedure to configure interprovider Layer 3 VPN option A, which is one of the recommended implementations of MPLS VPN when that service is required by a customer that has more than one AS and but not all of the customer's ASs can be serviced by the same service provider. It is organized in the following sections:

## Requirements

This example uses the following hardware and software components:

- Junos OS Release 9.5 or later.
- Eight M Series, T Series, TX Series, or MX Series Juniper Networks routers.

## Overview and Topology

This is the simplest and least scalable interprovider VPN solution to the problem of providing VPN services to a customer that has different sites, not all of which can use the same service provider (SP).

*RFC 4364*, section 10, refers to this method as Interprovider VRF-to-VRF connections at the AS border routers.

In this configuration:


- The virtual routing and forwarding (VRF) table in the ASBR of one AS is linked to the VRF table in the ASBR in the other AS. Each ASBR must contain a VRF instance for every VPN configured in both service provider networks. Then an IGP or BGP must be configured between the ASBRs. This has the disadvantage of limiting scalability.
- In this configuration, the autonomous system boundary routers (ASBRs) at both SPs are configured as regular PE routers, and provide MPLS L3 VPN service to the neighbor SP.
- Each PE router treats the other as if it were a customer edge (CE) router. ASBRs play the role of regular CE routers for the ASBR of the remote SP. ASBRs see each other as CE devices.
- A provider edge (PE) router in one autonomous system (AS) attaches directly to a PE router in another AS.
- The two PE routers are attached by multiple sub-interfaces, at least one for each of the VPNs whose routes need to be passed from AS to AS.
- The PE routers associate each sub-interface with a VPN routing and forwarding (VRF) table, and use EBGp to distribute unlabeled IPv4 addresses to each other.



- In this solution, all common VPNs defined at both PEs must also be defined at one or more ASBRs between the two SPs. This is not a very scalable methodology, especially when a transit SP is used by two regional SPs for interconnection.
- This is a procedure that is simple to configure and it does not require MPLS at the border between ASs. Additionally, it does not scale as well as other recommended procedures.

The topology of the network is shown in [Figure 47 on page 426](#).

**Figure 47: Physical Topology of Interprovider Layer 3 VPN Option A**

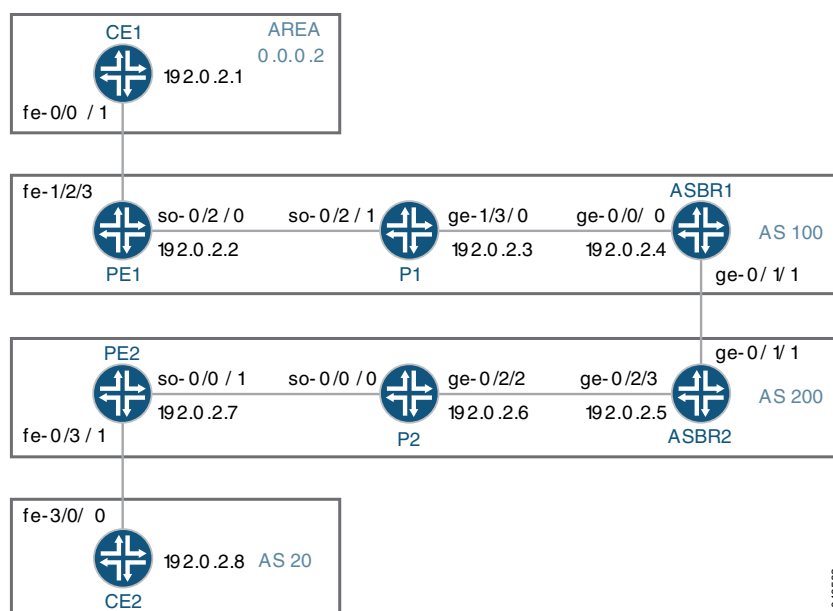

## Configuration

### IN THIS SECTION

- [Configuring Router CE1 | 427](#)
- [Configuring Router PE1 | 428](#)
- [Configuring Router P1 | 431](#)
- [Configuring Router ASBR1 | 433](#)
- [Configuring Router ASBR2 | 435](#)
- [Configuring Router P2 | 437](#)
- [Configuring Router PE2 | 439](#)



- [Configuring Router CE2 | 442](#)
- [Verifying the VPN Operation | 443](#)

**NOTE:** The procedure presented here is written with the assumption that the reader is already familiar with MPLS MVPN configuration. This example focuses on explaining the unique configuration required for carrier-of-carriers solutions for VPN services to different sites.

To configure interprovider layer 3 VPN option A, perform the following tasks:

### **Configuring Router CE1**

#### **Step-by-Step Procedure**

1. On Router CE1, configure the IP address and protocol family on the Fast Ethernet interface for the link between Router CE1 and Router PE1. Specify the **inet** address family type.

```
[edit interfaces fe-0/0/1.0]
family inet {
  address 198.51.100.1/24;
}
```

2. On Router CE1, configure the IP address and protocol family on the loopback interface. Specify the **inet** address family type.

```
[edit interfaces lo0]
unit 0 {
  family inet {
    address 192.0.2.1/32;
  }
}
```

3. On Router CE1, configure a routing protocol. The routing protocol can be a static route, RIP, OSPF, ISIS, or EBGp. In this example we configure OSPF. Include the Fast Ethernet interface for the link between Router CE1 and Router PE1 and the logical loopback interface of Router CE1.

```
[edit protocols]
ospf {
```



```

    area 0.0.0.2 {
        interface fe-0/0/1.0;
        interface lo0.0;
    }
}

```

### Configuring Router PE1

#### Step-by-Step Procedure

1. On Router PE1, configure IPv4 addresses on the SONET, Fast Ethernet, and logical loopback interfaces. Specify the **inet** address family on all of the interfaces. Specify the **mpls** address family on the SONET and Fast Ethernet interfaces.

```

[edit interfaces]
so-0/2/0 {
    unit 0 {
        family inet {
            address 192.168.1.9/24;
        }
        family mpls;
    }
}
fe-1/2/3 {
    unit 0 {
        family inet {
            address 198.51.100.2/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.0.2.2/32;
        }
    }
}

```

2. On Router PE1, configure the routing instance for VPN2. Specify the **vrf** instance type and specify the customer-facing Fast Ethernet interface. Configure a route distinguisher to create a unique VPN-IPv4 address prefix. Apply the VRF import and export policies to enable the sending and receiving of route targets. Configure the OSPF protocol within the VRF. Specify the customer-facing Fast Ethernet interface and specify the export policy to export BGP routes into OSPF.



```
[edit routing-instances]
vpn2CE1 {
  instance-type vrf;
  interface fe-1/2/3.0;
  route-distinguisher 1:100;
  vrf-import vpnimport;
  vrf-export vpnexport;
  protocols {
    ospf {
      export bgp-to-ospf;
      area 0.0.0.2 {
        interface fe-1/2/3.0;
      }
    }
  }
}
```

3. On Router PE1, configure the RSVP and MPLS protocols to support the label-switched path (LSP). Configure the LSP to Router ASBR1 and specify the IP address of the logical loopback interface on Router ASBR1. Configure a BGP group. Specify the group type as **internal**. Specify the local address as the logical loopback interface on Router PE1. Specify the neighbor address as the logical loopback interface on Router ASBR1. Specify the **inet-vpn** address family and **unicast** traffic type to enable BGP to carry IPv4 network layer reachability information (NLRI) for VPN routes. Configure the OSPF protocol. Specify the core-facing SONET interface and specify the logical loopback interface on Router PE1.

```
[edit protocols]
rsvp {
  interface so-0/2/0.0;
  interface lo0.0;
}
mpls {
  label-switched-path To-ASBR1 {
    to 192.0.2.4;
  }
  interface so-0/2/0.0;
  interface lo0.0;
}
bgp {
  group To_ASBR1 {
    type internal;
    local-address 192.0.2.2;
    neighbor 192.0.2.4 {
      family inet-vpn {
```



```

        unicast;
    }
}
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface so-0/2/0.0;
        interface lo0.0;
    }
}

```

4. On Router PE1, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 100;

```

5. On Router PE1, configure a policy to export the BGP routes into OSPF.

```

[edit policy-options]
policy-statement bgp-to-ospf {
    term 1 {
        from protocol bgp;
        then accept;
    }
    term 2 {
        then reject;
    }
}

```

6. On Router PE1, configure a policy to add the VRF route target to the routes being advertised for this VPN.

```

[edit policy-options]
policy-statement vpnexport {
    term 1 {
        from protocol ospf;
        then {
            community add test_comm;
            accept;
        }
    }
}

```



```

    }
  }
  term 2 {
    then reject;
  }
}

```

7. On Router PE1, configure a policy to import routes from BGP that have the **test\_comm** community attached.

```

[edit policy-options]
policy-statement vpnimport {
  term 1 {
    from {
      protocol bgp;
      community test_comm;
    }
    then accept;
  }
  term 2 {
    then reject;
  }
}

```

8. On Router PE1, define the **test\_comm** BGP community with a route target.

```

[edit policy-options]
community test_comm members target:1:100;

```

## Configuring Router P1

### Step-by-Step Procedure

1. On Router P1, configure IP addresses for the SONET and Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** address families. Configure the IP address for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```

[edit interfaces]
so-0/2/1 {
  unit 0 {
    family inet {
      address 192.168.1.4/24;
    }
  }
}

```



```

    }
    family mpls;
  }
}
ge-1/3/0 {
  unit 0 {
    family inet {
      address 192.168.2.5/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.3/32;
    }
  }
}
}

```

2. On Router P1, configure the RSVP and MPLS protocols to support the LSP. Specify the SONET and Gigabit Ethernet interfaces.

Configure the OSPF protocol. Specify the SONET and Gigabit Ethernet interfaces and specify the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```

[edit protocols]
rsvp {
  interface so-0/2/1.0;
  interface ge-1/3/0.0;
  interface lo0.0;
}
mpls {
  interface lo0.0;
  interface ge-1/3/0.0;
  interface so-0/2/1.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-1/3/0.0;
    interface so-0/2/1.0;
    interface lo0.0;
  }
}

```



```
}
```

### Configuring Router ASBR1

#### Step-by-Step Procedure

1. On Router ASBR1, configure IP addresses for the Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** addresses families. Configure the IP addresses for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```
[edit interfaces]
ge-0/0/0 {
  unit 0 {
    family inet {
      address 192.168.2.6/24;
    }
    family mpls;
  }
}
ge-0/1/1 {
  unit 0 {
    family inet {
      address 192.168.3.7/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.4/32;
    }
  }
}
```

2. On Router ASBR1, configure the **To\_ASBR2** routing instance. Specify the **vrf** instance type and specify the core-facing Gigabit Ethernet interface. Configure a route distinguisher to create a unique VPN-IPv4 address prefix. Configure a route target for the VPN. Configure the BGP peer group within the VRF. Specify AS 200 as the peer AS and specify the IP address of the Gigabit Ethernet interface on Router ASBR2 as the neighbor address.

```
[edit routing instances]
To_ASBR2{
```



```

instance-type vrf;
interface ge-0/1/1.0;
route-distinguisher 1:100;
vrf-target target:1:100;
protocols {
  bgp {
    group To_ASBR2 {
      type external;
      neighbor 192.168.3.8 {
        peer-as 200;
      }
    }
  }
}

```

3. On Router ASBR1, configure the RSVP and MPLS protocols to support the LSP by specifying the Gigabit Ethernet interface that is facing the P1 router.

Configure the OSPF protocol by specifying the Gigabit Ethernet interface that is facing the P1 router and the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```

[edit protocols]
rsvp {
  interface ge-0/0/0.0;
  interface lo0.0;
}
mpls {
  label-switched-path To_PE1 {
    to 192.0.2.2;
  }
  interface lo0.0;
  interface ge-0/0/0.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-0/0/0.0;
    interface lo0.0;
  }
}

```



- On Router ASBR1, create the **To-PE1** internal BGP peer group. Specify the local IP peer address as the local **lo0.0** address. Specify the neighbor IP peer address as the **lo0.0** interface address of Router PE1.

```
[edit protocols]
bgp {
  group To-PE1 {
    type internal;
    local-address 192.0.2.4;
    neighbor 192.0.2.2 {
      family inet-vpn {
        unicast;
      }
    }
  }
}
```

- On Router ASBR1, configure the BGP local autonomous system number.

```
[edit routing-options]
autonomous-system 100;
```

### Configuring Router ASBR2

#### Step-by-Step Procedure

- On Router ASBR2, configure IP addresses for the Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** address families. Configure the IP address for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```
[edit interfaces]
ge-0/1/1 {
  unit 0 {
    family inet {
      address 192.168.3.8/24;
    }
    family mpls;
  }
}
ge-0/2/3 {
  unit 0 {
    family inet {
      address 192.168.4.10/24;
    }
  }
}
```



```

        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.0.2.5/32;
        }
    }
}
}

```

2. On Router ASBR2, configure the **To\_ASBR1** routing instance. Specify the **vrf** instance type and specify the core-facing Gigabit Ethernet interface. Configure a route distinguisher to create a unique VPN-IPv4 address prefix. Configure a route target for the VPN. Configure the BGP peer group within the VRF. Specify AS 100 as the peer AS and specify the IP address of the Gigabit Ethernet interface on Router ASBR1 as the neighbor address.

```

[edit routing-instances]
To_ASBR1 {
    instance-type vrf;
    interface ge-0/1/1.0;
    route-distinguisher 1:100;
    vrf-target target:1:100;
    protocols {
        bgp {
            group To_ASBR1 {
                type external;
                neighbor 192.168.3.7 {
                    peer-as 100;
                }
            }
        }
    }
}

```

3. On Router ASBR2, configure the RSVP and MPLS protocols to support the LSP by specifying the Gigabit Ethernet interface that is facing the P2 router.

Configure the OSPF protocol by specifying the Gigabit Ethernet interface that is facing the P2 router and the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```

[edit protocols]

```



```

rsvp {
    interface ge-0/2/3.0;
    interface lo0.0;
}
mpls {
    label-switched-path To_PE2 {
        to 192.0.2.7;
    }
    interface lo0.0;
    interface ge-0/2/3.0;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-0/2/3.0;
        interface lo0.0;
    }
}

```

4. On Router ASBR2, create the **To-PE2** internal BGP peer group. Specify the local IP peer address as the local **lo0.0** address. Specify the neighbor IP peer address as the **lo0.0** interface address of Router PE2.

```

[edit protocols]
bgp {
    group To-PE2 {
        type internal;
        local-address 192.0.2.5;
        neighbor 192.0.2.7 {
            family inet-vpn {
                unicast;
            }
        }
    }
}

```

5. On Router ASBR2, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 200;

```

## Configuring Router P2

### Step-by-Step Procedure



1. On Router P2, configure IP addresses for the SONET and Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** address families. Configure the IP address for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```
[edit interfaces]
so-0/0/0 {
  unit 0 {
    family inet {
      address 192.168.5.11/24;
    }
    family mpls;
  }
}
ge-0/2/2 {
  unit 0 {
    family inet {
      address 192.168.4.12/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.6/32;
    }
  }
}
```

2. On Router P2, configure the RSVP and MPLS protocols to support the LSP. Specify the SONET and Gigabit Ethernet interfaces.

Configure the OSPF protocol. Specify the SONET and Gigabit Ethernet interfaces and specify the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```
[edit protocols]
rsvp {
  interface so-0/0/0.0;
  interface ge-0/2/2.0;
  interface lo0.0;
}
mpls {
  interface lo0.0;
  interface ge-0/2/2.0;
```



```

    interface so-0/0/0.0;
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface ge-0/2/2.0;
      interface so-0/0/0.0;
      interface lo0.0;
    }
  }
}

```

### Configuring Router PE2

#### Step-by-Step Procedure

1. On Router PE2, configure IPv4 addresses on the SONET, Fast Ethernet, and logical loopback interfaces. Specify the **inet** address family on all of the interfaces. Specify the **mpls** address family on the SONET and Fast Ethernet interfaces.

```

[edit interfaces]
so-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.5.12/24;
    }
    family mpls;
  }
}
fe-0/3/1 {
  unit 0 {
    family inet {
      address 192.168.6.13/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.7/32;
    }
  }
}
}

```



2. On Router PE2, configure the routing instance for VPN2. Specify the **vrf** instance type and specify the customer-facing Fast Ethernet interface. Configure a route distinguisher to create a unique VPN-IPv4 address prefix. Apply the VRF import and export policies to enable the sending and receiving of route targets. Configure the BGP peer group within the VRF. Specify AS **20** as the peer AS and specify the IP address of the Fast Ethernet interface on Router CE2 as the neighbor address.

```
[edit routing-instances]
vpn2CE2 {
  instance-type vrf;
  interface fe-0/3/1.0;
  route-distinguisher 1:100;
  vrf-import vpnimport;
  vrf-export vpnexport;
  protocols {
    bgp {
      group To_CE2 {
        peer-as 20;
        neighbor 192.168.6.14;
      }
    }
  }
}
```

3. On Router PE2, configure the RSVP and MPLS protocols to support the LSP. Configure the LSP to ASBR2 and specify the IP address of the logical loopback interface on Router ASBR2. Configure a BGP group. Specify the group type as **internal**. Specify the local address as the logical loopback interface on Router PE2. Specify the neighbor address as the logical loopback interface on the Router ASBR2. Specify the **inet-vpn** address family and **unicast** traffic type to enable BGP to carry IPv4 NLRI for VPN routes. Configure the OSPF protocol. Specify the core-facing SONET interface and specify the logical loopback interface on Router PE2.

```
[edit protocols]
rsvp {
  interface so-0/0/1.0;
  interface lo0.0;
}
mpls {
  label-switched-path To-ASBR2 {
    to 192.0.2.5;
  }
  interface so-0/0/1.0;
  interface lo0.0;
}
```



```

bgp {
  group To_ASBR2 {
    type internal;
    local-address 192.0.2.7;
    neighbor 192.0.2.5 {
      family inet-vpn {
        unicast;
      }
    }
  }
}

ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface so-0/0/1.0;
    interface lo0.0;
  }
}

```

4. On Router PE2, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 200;

```

5. On Router PE2, configure a policy to add the VRF route target to the routes being advertised for this VPN.

```

[edit policy-options]
policy-statement vpnexport {
  term 1 {
    from protocol bgp;
    then {
      community add test_comm;
      accept;
    }
  }
  term 2 {
    then reject;
  }
}

```



6. On Router PE2, configure a policy to import routes from BGP that have the **test\_comm** community attached.

```
[edit policy-options]
  policy-statement vpnimport {
    term 1 {
      from {
        protocol bgp;
        community test_comm;
      }
      then accept;
    }
    term 2 {
      then reject;
    }
  }
```

7. On Router PE2, define the **test\_comm** BGP community with a route target.

```
[edit policy-options]
  community test_comm members target:1:100;
```

## Configuring Router CE2

### Step-by-Step Procedure

1. On Router CE2, configure the IP address and protocol family on the Fast Ethernet interface for the link between Router CE2 and Router PE2. Specify the **inet** address family type.

```
[edit interfaces]
  fe-3/0/0 {
    unit 0 {
      family inet {
        address 192.168.6.14/24;
      }
    }
  }
```

2. On Router CE2, configure the IP address and protocol family on the loopback interface. Specify the **inet** address family type.

```
[edit interfaces lo0]
```



```

lo0 {
  unit 0 {
    family inet {
      address 192.0.2.8/32;
    }
  }
}

```

3. On Router CE2, define a policy named **myroutes** that accepts direct routes.

```

[edit policy-options]
policy-statement myroutes {
  from protocol direct;
  then accept;
}

```

4. On Router CE2, configure a routing protocol. The routing protocol can be a static route, RIP, OSPF, ISIS, or EBGP. In this example, we configure EBGP. Specify AS **200** as the peer AS and specify the BGP neighbor IP address as the Fast Ethernet interface of Router PE2.

```

[edit protocols]
bgp {
  group To_PE2 {
    neighbor 192.168.6.13 {
      export myroutes;
      peer-as 200;
    }
  }
}

```

5. On Router CE2, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 20;

```

## Verifying the VPN Operation

### Step-by-Step Procedure



1. Commit the configuration on each router.

**NOTE:** The MPLS labels shown in this example will be different than the labels used in your configuration.

2. On Router PE1, display the routes for the **vpn2CE1** routing instance using the **show ospf route** command. Verify that the **192.0.2.1** route is learned from OSPF.

```
user@PE1> show ospf route instance vpn2CE1
```

Topology default Route Table:

Prefix	Path	Route	NH	Metric	NextHop	Nexthop
	Type	Type	Type		Interface	addr/label
<b>192.0.2.1</b>	Intra	Router	IP	1	fe-1/2/3.0	198.51.100.1
192.0.2.1/32	Intra	Network	IP	1	fe-1/2/3.0	198.51.100.1
198.51.100.0/24	Intra	Network	IP	1	fe-1/2/3.0	198.51.100.1

3. On Router PE1, use the **show route advertising-protocol** command to verify that Router PE1 advertises the **192.0.2.1** route to Router ASBR1 using MP-BGP with the VPN MPLS label.

```
user@PE1> show route advertising-protocol bgp 192.0.2.4 extensive
```

```
vpn2CE1.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
  BGP group To_PE1 type Internal
    Route Distinguisher: 1:100
    VPN Label: 299856
    Nexthop: Self
    Flags: Nexthop Change
    MED: 1
    Localpref: 100
    AS path: [100] I
    Communities: target:1:100 rte-type:0.0.0.2:1:0
```

4. On Router ASBR1, use the **show route receive-protocol** command to verify that the router receives and accepts the **192.0.2.1** route and places it in the **To\_ASBR2.inet.0** routing table.

```
user@ASBR1> show route receive-protocol bgp 192.0.2.2 extensive
```



```

inet.0: 7 destinations, 7 routes (7 active, 0 holddown, 0 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

To_ASBR2.inet.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
  Route Distinguisher: 1:100
  VPN Label: 299856
  Nexthop: 192.0.2.2
  MED: 1
  Localpref: 100
  AS path: I
  Communities: target:1:100 rte-type:0.0.0.2:1:0

MPLS.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

BGP.13VPN.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

* 1:100:192.0.2.1/32 (1 entry, 0 announced)
  Route Distinguisher: 1:100
  VPN Label: 299856
  Nexthop: 192.0.2.2
  MED: 1
  Localpref: 100
  AS path: I
  Communities: target:1:100 rte-type:0.0.0.2:1:0

```

5. On Router ASBR1, use the **show route advertising-protocol** command to verify that Router ASBR1 advertises the **192.0.2.1** route to Router ASBR2.

```
user@ASBR1> show route advertising-protocol bgp 192.168.3.8 extensive
```

```

To_ASBR2.inet.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
  BGP group To_ASBR2.inet.0 type External
  Nexthop: Self
  AS path: [100] I
  Communities: target:1:100 rte-type:0.0.0.2:1:0

```

6. On Router ASBR2, use the **show route receive-protocol** command to verify that the router receives and accepts the **192.0.2.1** route and places it in the **To\_ASBR1.inet.0** routing table.

```
user@ASBR2> show route receive-protocol bgp 192.168.3.7 extensive
```



```

inet.0: 7 destinations, 7 routes (7 active, 0 holddown, 0 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

To_ASBR1.inet.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
    Accepted
    Nexthop: 192.168.3.7
    AS path: 100 I
    Communities: target:1:100 rte-type:0.0.0.2:1:0

MPLS.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

BGP.l3VPN.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

```

7. On Router ASBR2, use the **show route advertising-protocol** command to verify that Router ASBR2 advertises the **192.0.2.1** route to Router PE2.

```
user@ASBR2> show route advertising-protocol bgp 192.0.2.7 extensive
```

```

To_ASBR1.inet.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
    BGP group To-PE2 type Internal
    Route Distinguisher: 1:100
    VPN Label: 299936
    Nexthop: Self
    Flags: Nexthop Change
    Localpref: 100
    AS path: [200] 100 I
    Communities: target:1:100 rte-type:0.0.0.2:1:0

```

8. On Router PE2, use the **show route receive-protocol** command to verify that the router receives and accepts the **192.0.2.1** route and places it in the **vpn2CE2.inet.0** routing table.

```
user@PE2> show route receive-protocol bgp 192.0.2.5 extensive
```

```

inet.0: 12 destinations, 13 routes (12 active, 0 holddown, 0 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

__juniper_private1__.inet.0: 14 destinations, 14 routes (8 active, 0 holddown,
6 hidden)

```



```
__juniper_private2__.inet.0: 1 destinations, 1 routes (0 active, 0 holddown, 1 hidden)
```

```
vpn2CE2.inet.0: 5 destinations, 6 routes (5 active, 0 holddown, 0 hidden)
```

```
* 192.0.2.1/32 (1 entry, 1 announced)
  Accepted
  Route Distinguisher: 1:100
  VPN Label: 299936
  Nexthop: 192.0.2.5
  Localpref: 100
  AS path: 100 I
  AS path: Recorded
  Communities: target:1:100 rte-type:0.0.0.2:1:0
```

9. On Router PE2, use the **show route advertising-protocol** command to verify that Router PE2 advertises the **192.0.2.1** route to Router CE2 through the **To\_CE2** peer group.

```
user@PE2> show route advertising-protocol bgp 192.168.6.14 extensive
```

```
vpn2CE2.0: 5 destinations, 6 routes (5 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
  BGP group To_CE2 type External
  Nexthop: Self
  AS path: [200] 100 I
  Communities: target:1:100 rte-type:0.0.0.2:1:0
```

10. On Router CE2, use the **show route** command to verify that Router CE2 receives the **192.0.2.1** route from Router PE2.

```
user@CE2> show route 192.0.2.1
```

```
inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.1/32          *[BGP/170] 00:25:36, localpref 100
                     AS path: 200 100 I
                     > to 192.168.6.13 via fe-3/0/0.0
```

11. On Router CE2, use the **ping** command and specify **192.0.2.8** as the source of the ping packets to verify connectivity with Router CE1.

```
user@CE2> ping 192.0.2.1 source 192.0.2.8
```



```
PING 192.0.2.1 (192.0.2.1): 56 data bytes
64 bytes from 192.0.2.1: icmp_seq=0 ttl=58 time=4.672 ms
64 bytes from 192.0.2.1: icmp_seq=1 ttl=58 time=10.480 ms
64 bytes from 192.0.2.1: icmp_seq=2 ttl=58 time=10.560 ms
```

12. On Router PE2, use the **show route** command to verify that the traffic is sent with an inner label of **299936** and a top label of **299776**.

```
user@PE2> show route 192.0.2.1 detail
```

```
vpn2CE2.inet.0: 5 destinations, 6 routes (5 active, 0 holddown, 0 hidden)
192.0.2.1/32 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
                Route Distinguisher: 1:100
                Next hop type: Indirect
                Next-hop reference count: 6
                Source: 192.0.2.5
                Next hop type: Router, Next hop index: 648
                Next hop: via so-0/0/1.0 weight 0x1, selected
                Label-switched-path To-ASBR2
                Label operation: Push 299936, Push 299776(top)
                Protocol next hop: 192.0.2.5
                Push 299984
                Indirect next hop: 8c6109c 262143
                State: <Secondary Active Int Ext>
                Local AS: 200 Peer AS: 200
                Age: 3:37 Metric2: 2
                Task: BGP_200.192.0.2.5+179
                Announcement bits (3): 0-RT 1-KRT 2-BGP RT Background
                AS path: 100 I
                AS path: Recorded
                Communities: target:1:100 rte-type:0.0.0.2:1:0
                Accepted
                VPN Label: 299984
                Localpref: 100
                Router ID: 192.0.2.5
                Primary Routing Table BGP.13VPN.0
```

13. On Router ASBR2, use the **show route table** command to verify that Router ASBR2 receives the traffic.

```
user@ASBR2# show route table mpls.0 detail
```



```

299936 (1 entry, 1 announced)
  *VPN      Preference: 170
            Next hop type: Router, Next hop index: 649
            Next-hop reference count: 2
            Source: 192.168.3.7           Next hop: 192.168.3.7 via
ge-0/1/1.0, selected
            Label operation: Pop
            State: <Active Int Ext>
            Local AS: 200
            Age: 9:54
            Task: BGP RT Background
            Announcement bits (1): 0-KRT
            AS path: 100 I
            Ref Cnt: 1
            Communities: target:1:100 rte-type:0.0.0.2:1:0

```

14. On Router ASBR2, use the **show route table** command to verify that Router ASBR2 receives the traffic.

```
user@ASBR2# show route 192.0.2.1 detail
```

```

To_ASBR1.inet.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
192.0.2.1/32 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
            Next hop type: Router, Next hop index: 576
            Next-hop reference count: 3
            Source: 192.168.3.7
            Next hop: 192.168.3.7 via ge-0/1/1.0, selected
            State: <Active Ext>
            Peer AS: 100
            Age: 13:07
            Task: BGP_192.168.3.7+53372
            Announcement bits (2): 0-KRT 1-BGP RT Background
            AS path: 100 I
            Communities: target:1:100 rte-type:0.0.0.2:1:0
            Accepted
            Localpref: 100
            Router ID: 192.168.3.7

```

15. On Router ASBR1, use the **show route** command to verify that ASBR1 sends traffic toward PE1 with the top label **299792** and VPN label **299856**.

```
user@ASBR1# show route 192.0.2.1 detail
```



```

To_ASBR2.inet.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
192.0.2.1/24 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
                Route Distinguisher: 1:100
                Next hop type: Indirect
                Next-hop reference count: 3
                Source: 192.0.2.2
                Next hop type: Router, Next hop index: 669
                Next hop: 192.168.2.5 via ge-0/0/0.0 weight 0x1, selected
                Label-switched-path To_PE1
                Label operation: Push 299856, Push 299792(top)
                Protocol next hop: 192.0.2.2                      Push 299856
                Indirect next hop: 8af70a0 262143
                State: <Secondary Active Int Ext>
                Local AS:   100 Peer AS:   100
                Age: 12:15      Metric: 1      Metric2: 2
                Task: BGP_100.192.0.2.2+58065
                Announcement bits (2): 0-KRT 1-BGP RT Background
                AS path: I
                Communities: target:1:100 rte-type:0.0.0.2:1:0
                VPN Label: 299856
                Localpref: 100
                Router ID: 192.0.2.2
                Primary Routing Table BGP.13VPN.0

```

16. On Router PE1, use the **show route table** command to verify that Router PE1 receives the traffic with label **299856**, pops the label, and the traffic is sent toward Router CE1 through interface **fe-1/2/3.0**.

```
lab@PE1# show route table mpls.0 detail
```

```

299856 (1 entry, 1 announced)
    *VPN      Preference: 170
                Next hop type: Router, Next hop index: 666
                Next-hop reference count: 2
                Next hop: 198.51.100.8 via fe-1/2/3.0, selected
                Label operation: Pop
                State: <Active Int Ext>
                Local AS:   100
                Age: 17:38
                Task: BGP RT Background
                Announcement bits (1): 0-KRT
                AS path: I

```



```
Ref Cnt: 1
Communities: rte-type:0.0.0.2:1:0
```

17. On Router PE1, use the **show route** command to verify that PE1 receives the traffic after the top label is popped by Router P and the traffic is sent toward Router CE1 through interface **fe-1/2/3.0**.

```
lab@PE1# show route 192.0.2.1 detail
```

```
vpn2CE1.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
192.0.2.1/32 (1 entry, 1 announced)
  *OSPF   Preference: 10
          Next hop type: Router, Next hop index: 634
          Next-hop reference count: 3
          Next hop: 198.51.100.8 via fe-1/2/3.0, selected
          State: <Active Int>
          Age: 18:42      Metric: 1
          Area: 0.0.0.2
          Task: VPN2alice-OSPFv2
          Announcement bits (2): 2-KRT 3-BGP RT Background
          AS path: I
          Communities: rte-type:0.0.0.2:1:0
```

SEE ALSO

## Example: Configuring Interprovider Layer 3 VPN Option B

### IN THIS SECTION

- Requirements | [452](#)
- Configuration Overview and Topology | [452](#)
- Configuration | [454](#)



Interprovider Layer 3 VPN Option B provides interprovider EBGp redistribution of labeled VPN-IPv4 routes from AS to neighboring AS. This solution is considered to be more scalable than Option A, but not as scalable as Option C.

This example provides a step-by-step procedure to configure interprovider layer 3 VPN option B, which is one of the recommended implementations of an MPLS VPN when that service is required by a customer that has more than one AS, but not all of the customer's ASs can be serviced by the same service provider. It is organized in the following sections:

## Requirements

This example uses the following hardware and software components:

- Junos OS Release 9.5 or later.
- Eight M Series, T Series, TX Series, QFX10000, or MX Series Juniper Networks routers.

## Configuration Overview and Topology

Interprovider layer 3 VPN option B is a somewhat scalable solution to the problem of providing VPN services to a customer that has different sites, not all of which can use the same service provider. *RFC 4364*, section 10, refers to this method as interprovider EBGp redistribution of labeled VPN-IPv4 routes from AS to neighboring AS.

In the topology shown in Figure 1, the following events occur:

- The PE routers use IBGP to redistribute labeled VPN-IPv4 routes either to an ASBR, or to a route reflector of which an ASBR is a client.
- The ASBR then uses EBGp to redistribute those labeled VPN-IPv4 routes to an ASBR in another AS, which distributes them to the PE routers in that AS, or to another ASBR for distribution.
- Labeled VPN-IPv4 routes are distributed between ASBR routers on each site. There is no need to define a separate VPN routing and forwarding instance (VRF) for each common VPN that resides on two different SPs.
- Router PE2 distributes VPN-IPv4 routes to Router ASBR2 using MP-IBGP.
- Router ASBR2 distributes these labeled VPN-IPv4 routes to Router ASBR1, using the MP-EBGP session between them.
- Router ASBR1 redistributes those routes to Router PE1, using MP-IBGP. Each time a label is advertised, routers change the next-hop information and labels.
- An MPLS path is established between Router PE1 and Router PE2. This path enables changing of the next-hop attribute for the routes that are learned from the neighbor SP router and map the incoming label for the given routes to the outgoing label advertised to PE routers in the internal network.




- The ingress PE router inserts two labels onto the IP packet coming from the end customer. The inner label is for the VPN-IPv4 routes learned from internal ASBRs and the outer label is for the route to the internal ASBR, obtained through resource reservation protocol (RSVP) or label distribution protocol (LDP).
- When a packet arrives at the ASBR, it removes the outer label (when explicit-null signaling is used; otherwise, penultimate hop-popping (PHP) pops the label) and swaps the inner label with the label obtained from the neighbor ASBR through MP-EBGP label and prefix advertisements.
- The second ASBR swaps the VPN-IPv4 label and pushes another label to reach the PE router in its own AS.
- The remaining process is the same as for a regular VPN.

**NOTE:** In this solution, ASBR routers keep all VPN-IPv4 routes in the routing information base (RIB), and the labels associated with the prefixes are kept in the forwarding information base (FIB). Because the RIB and FIB tables can take occupy much of the respective allocated memory, this solution is not very scalable for an interprovider VPN.

If a transit SP is used between SP1 and SP2, the transit SP also has to keep all VPN-IPv4 routes in the RIB and the corresponding labels in the FIB. The ASBRs at the transit SP have the same functionality as ASBRs in the SP1 or SP2 networks in this solution.

The topology of the network is shown in [Figure 48 on page 453](#).

**Figure 48: Physical Topology of Interprovider Layer 3 VPN Option B**

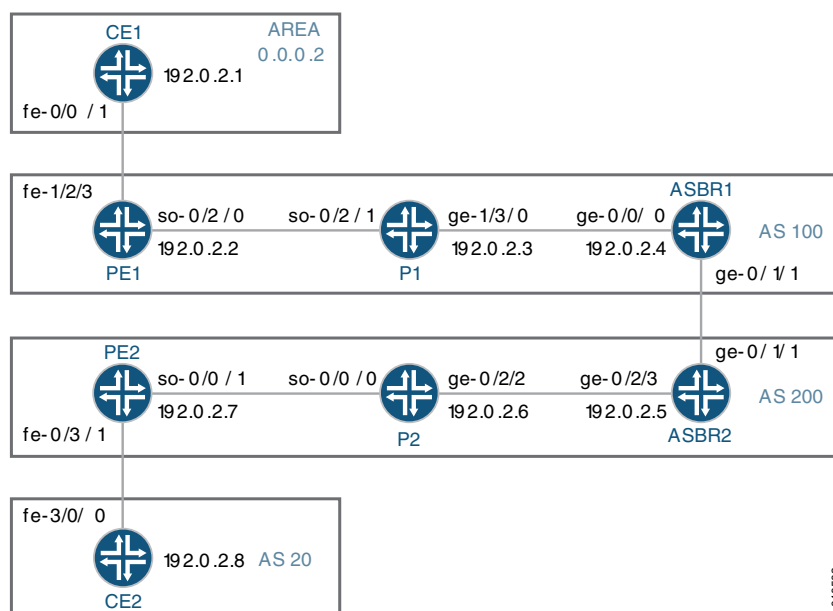



## Configuration

### IN THIS SECTION

- [Configuring Router CE1 | 454](#)
- [Configuring Router PE1 | 455](#)
- [Configuring Router P1 | 459](#)
- [Configuring Router ASBR1 | 460](#)
- [Configuring Router ASBR2 | 462](#)
- [Configuring Router P2 | 465](#)
- [Configuring Router PE2 | 466](#)
- [Configuring Router CE2 | 469](#)
- [Verifying the VPN Operation | 471](#)

**NOTE:** The procedure presented here is written with the assumption that the reader is already familiar with MPLS MVPN configuration. This example focuses on explaining the unique configuration required for carrier-of-carriers solutions for VPN services to different sites.

To configure layer 3 VPN option B, perform the following tasks:

### **Configuring Router CE1**

#### **Step-by-Step Procedure**

1. On Router CE1, configure the IP address and protocol family on the Fast Ethernet interface for the link between Router CE1 and Router PE1. Specify the **inet** address family type.

```
[edit interfaces fe-0/0/1.0]
family inet {
  address 203.0.113.1/24;
}
```

2. On Router CE1, configure the IP address and protocol family on the loopback interface. Specify the **inet** address family type.

```
[edit interfaces lo0]
```



```

unit 0 {
    family inet {
        address 192.0.2.1/32;
    }
}

```

3. On Router CE1, configure a routing protocol. Include the logical interface for the link between Router CE1 and Router PE1 and the logical loopback interface of Router CE1. The routing protocol can be a static route, RIP, OSPF, ISIS, or EBGp. In this example we configure OSPF.

```

[edit protocols]
ospf {
    area 0.0.0.2 {
        interface fe-0/0/1.0;
        interface lo0.0;
    }
}

```

### Configuring Router PE1

#### Step-by-Step Procedure

1. On Router PE1, configure IPv4 addresses on the SONET, Fast Ethernet, and logical loopback interfaces. Specify the **inet** address family on all of the interfaces. Specify the **mpls** address family on the SONET and Fast Ethernet interfaces.

```

[edit interfaces]
so-0/2/0 {
    unit 0 {
        family inet {
            address 192.168.1.2/24;
        }
        family mpls;
    }
}
fe-1/2/3 {
    unit 0 {
        family inet {
            address 203.0.113.3/24;
        }
        family mpls;
    }
}

```



```

lo0 {
  unit 0 {
    family inet {
      address 192.0.2.2/32;
    }
  }
}

```

2. On Router PE1, configure the routing instance for VPN2. Specify the **vrf** instance type and specify the customer-facing Fast Ethernet interface. Configure a route distinguisher to create a unique VPN-IPv4 address prefix. Apply the VRF import and export policies to enable the sending and receiving of route targets. Configure the OSPF protocol within the VRF. Specify the customer-facing Fast Ethernet interface and specify the export policy to export BGP routes into OSPF.

```

[edit routing-instances]
vpn2CE1 {
  instance-type vrf;
  interface fe-1/2/3.0;
  route-distinguisher 1:100;
  vrf-import vpnimport;
  vrf-export vpnexport;
  protocols {
    ospf {
      export bgp-to-ospf;
      area 0.0.0.2 {
        interface fe-1/2/3.0;
      }
    }
  }
}

```

3. On Router PE1, configure the RSVP and MPLS protocols to support the label-switched path (LSP). Configure the LSP to Router ASBR1 and specify the IP address of the logical loopback interface on Router ASBR1. Configure a BGP group. Specify the group type as **internal**. Specify the local address as the logical loopback interface on Router PE1. Specify the neighbor address as the logical loopback interface on Router ASBR1. Specify the **inet-vpn** address family and **unicast** traffic type to enable BGP to carry IPv4 network layer reachability information (NLRI) for VPN routes. Configure the OSPF protocol. Specify the core-facing SONET interface and specify the logical loopback interface on Router PE1.

```

[edit protocols]
rsvp {

```



```

    interface so-0/2/0.0;
    interface lo0.0;
}
mpls {
    label-switched-path To-ASBR1 {
        to 192.0.2.4;
    }
    interface so-0/2/0.0;
    interface lo0.0;
}
bgp {
    group To_ASBR1 {
        type internal;
        local-address 192.0.2.2;
        neighbor 192.0.2.4 {
            family inet-vpn {
                unicast;
            }
        }
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface so-0/2/0.0;
        interface lo0.0;
    }
}

```

4. On Router PE1, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 100;

```

5. On Router PE1, configure a policy to export the BGP routes into OSPF.

```

[edit policy-options]
policy-statement bgp-to-ospf {
    term 1 {
        from protocol bgp;
        then accept;
    }
}

```



```

term 2 {
    then reject;
}
}

```

6. On Router PE1, configure a policy to add the VRF route target to the routes being advertised for this VPN.

```

[edit policy-options]
policy-statement vpnexport {
    term 1 {
        from protocol ospf;
        then {
            community add test_comm;
            accept;
        }
    }
    term 2 {
        then reject;
    }
}

```

7. On Router PE1, configure a policy to import routes from BGP that have the **test\_comm** community attached.

```

[edit policy-options]
policy-statement vpnimport {
    term 1 {
        from {
            protocol bgp;
            community test_comm;
        }
        then accept;
    }
    term 2 {
        then reject;
    }
}

```

8. On Router PE1, define the **test\_comm** BGP community with a route target.



```
[edit policy-options]
community test_comm members target:1:100;
```

## Configuring Router P1

### Step-by-Step Procedure

1. On Router P1, configure IP addresses for the SONET and Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** address families. Configure the IP addresses for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```
[edit interfaces]
so-0/2/1 {
  unit 0 {
    family inet {
      address 192.168.1.4/24;
    }
    family mpls;
  }
}
ge-1/3/0 {
  unit 0 {
    family inet {
      address 192.168.2.5/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.3/32;
    }
  }
}
```

2. On Router P1, configure the RSVP and MPLS protocols to support the LSP. Specify the SONET and Gigabit Ethernet interfaces.

Configure the OSPF protocol. Specify the SONET and Gigabit Ethernet interfaces and specify the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```
[edit protocols]
```



```

rsvp {
    interface so-0/2/1.0;
    interface ge-1/3/0.0;
    interface lo0.0;
}
mpls {
    interface lo0.0;
    interface ge-1/3/0.0;
    interface so-0/2/1.0;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-1/3/0.0;
        interface so-0/2/1.0;
        interface lo0.0;
    }
}

```

### Configuring Router ASBR1

#### Step-by-Step Procedure

1. On Router ASBR1, configure IP addresses for the Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** addresses families. Configure the IP addresses for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```

[edit interfaces]
ge-0/0/0 {
    unit 0 {
        family inet {
            address 192.168.2.7/24;
        }
        family mpls;
    }
}
ge-0/1/1 {
    unit 0 {
        family inet {
            address 192.168.3.8/24;
        }
        family mpls;
    }
}

```



```

lo0 {
  unit 0 {
    family inet {
      address 192.0.2.4/32;
    }
  }
}

```

2. On Router ASBR1, configure the RSVP and MPLS protocols to support the LSP by specifying the Gigabit Ethernet interface facing the P1 router and the **lo0.0** logical loopback interface.

Configure the OSPF protocol by specifying the Gigabit Ethernet interface that is facing the P1 router and the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```

[edit protocols]
rsvp {
  interface ge-0/0/0.0;
  interface lo0.0;
}
mpls {
  label-switched-path To_PE1 {
    to 192.0.2.2;
  }
  interface lo0.0;
  interface ge-0/0/0.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-0/0/0.0;
    interface lo0.0;
  }
}

```

3. On Router ASBR1, create the **To-PE1** internal BGP peer group. Specify the local IP peer address as the local **lo0.0** address. Specify the neighbor IP peer address as the **lo0.0** interface address of Router PE1.

```

[edit protocols]
bgp {
  group To-PE1 {
    type internal;
    local-address 192.0.2.4;
  }
}

```



```

neighbor 192.0.2.2 {
    family inet-vpn {
        unicast;
    }
}

```

4. On Router ASBR1, create the **To\_ASBR2** external BGP peer group. Enable the router to use BGP to advertise NLRI for unicast routes. Specify the neighbor IP peer address as the Gigabit Ethernet interface address of Router ASBR2.

```

[edit protocols]
bgp {
    group To-ASBR2 {
        type external;
        family inet-vpn {
            unicast;
        }
        neighbor 192.168.3.6 {
            peer-as 200;
        }
    }
}

```

5. On Router ASBR1, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 100;

```

### Configuring Router ASBR2

#### Step-by-Step Procedure

1. On Router ASBR2, configure IP addresses for the Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** address families. Configure the IP address for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```

[edit interfaces]
ge-0/1/1 {
    unit 0 {
        family inet {

```



```

        address 192.168.3.6/24;
    }
    family mpls;
}
}
ge-0/2/3 {
    unit 0 {
        family inet {
            address 192.168.4.9/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.0.2.5/32;
        }
    }
}
}

```

2. On Router ASBR2, configure the RSVP and MPLS protocols to support the LSP by specifying the Gigabit Ethernet interface that is facing the P2 router.

Configure the OSPF protocol by specifying the Gigabit Ethernet interface that is facing the P2 router and the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```

[edit protocols]
rsvp {
    interface ge-0/2/3.0;
    interface lo0.0;
}
mpls {
    label-switched-path To_PE2 {
        to 192.0.2.7;
    }
    interface lo0.0;
    interface ge-0/2/3.0;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-0/2/3.0;
        interface lo0.0;
    }
}

```



```

    }
}

```

3. On Router ASBR2, create the **To-PE2** internal BGP peer group. Specify the local IP peer address as the local **lo0.0** address. Specify the neighbor IP peer address as the **lo0.0** interface address of Router PE2.

```

[edit protocols]
bgp {
  group To-PE2 {
    type internal;
    local-address 192.0.2.5;
    neighbor 192.0.2.7 {
      family inet-vpn {
        unicast;
      }
    }
  }
}

```

4. On Router ASBR2, create the **To-ASBR1** external BGP peer group. Enable the router to use BGP to advertise NLRI for unicast routes. Specify the neighbor IP peer address as the Gigabit Ethernet interface on Router ASBR1.

```

[edit protocols]
bgp {
  group To-ASBR1 {
    type external;
    family inet-vpn {
      unicast;
    }
    neighbor 192.168.3.8 {
      peer-as 100;
    }
  }
}

```

5. On Router ASBR2, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 200;

```



## Configuring Router P2

### Step-by-Step Procedure

1. On Router P2, configure IP addresses for the SONET and Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** address families. Configure the IP address for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```
[edit interfaces]
so-0/0/0 {
  unit 0 {
    family inet {
      address 192.168.5.10/24;
    }
    family mpls;
  }
}
ge-0/2/2 {
  unit 0 {
    family inet {
      address 192.168.4.11/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.6/32;
    }
  }
}
```

2. On Router P2, configure the RSVP and MPLS protocols to support the LSP. Specify the SONET and Gigabit Ethernet interfaces.

Configure the OSPF protocol. Specify the SONET and Gigabit Ethernet interfaces and specify the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```
[edit protocols]
rsvp {
  interface so-0/0/0.0;
  interface ge-0/2/2.0;
  interface lo0.0;
}
```



```

mpls {
    interface lo0.0;
    interface ge-0/2/2.0;
    interface so-0/0/0.0;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-0/2/2.0;
        interface so-0/0/0.0;
        interface lo0.0;
    }
}

```

### Configuring Router PE2

#### Step-by-Step Procedure

1. On Router PE2, configure IPv4 addresses on the SONET, Fast Ethernet, and logical loopback interfaces. Specify the **inet** address family on all of the interfaces. Specify the **mpls** address family on the SONET and Fast Ethernet interfaces.

```

[edit interfaces]
so-0/0/1 {
    unit 0 {
        family inet {
            address 192.168.5.12/24;
        }
        family mpls;
    }
}
fe-0/3/1 {
    unit 0 {
        family inet {
            address 192.168.6.13/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.0.2.7/32;
        }
    }
}

```



```

    }
}

```

2. On Router PE2, configure the routing instance for VPN2. Specify the **vrf** instance type and specify the customer-facing Fast Ethernet interface. Configure a route distinguisher to create a unique VPN-IPv4 address prefix. Apply the VRF import and export policies to enable the sending and receiving of route targets. Configure the BGP peer group within the VRF. Specify AS **20** as the peer AS and specify the IP address of the Fast Ethernet interface on Router CE1 as the neighbor address.

```

[edit routing-instances]
vpn2CE2 {
  instance-type vrf;
  interface fe-0/3/1.0;
  route-distinguisher 1:100;
  vrf-import vpnimport;
  vrf-export vpnexport;
  protocols {
    bgp {
      group To_CE2 {
        peer-as 20;
        neighbor 192.168.6.14;
      }
    }
  }
}

```

3. On Router PE2, configure the RSVP and MPLS protocols to support the LSP. Configure the LSP to ASBR2 and specify the IP address of the logical loopback interface on Router ASBR2. Configure a BGP group. Specify the group type as **internal**. Specify the local address as the logical loopback interface on Router PE2. Specify the neighbor address as the logical loopback interface on the Router ASBR2. Specify the **inet-vpn** address family and **unicast** traffic type to enable BGP to carry IPv4 NLRI for VPN routes. Configure the OSPF protocol. Specify the core-facing SONET interface and the logical loopback interface on Router PE2.

```

[edit protocols]
rsvp {
  interface so-0/0/1.0;
  interface lo0.0;
}
mpls {
  label-switched-path To-ASBR2 {

```



```

        to 192.0.2.5;
    }
    interface so-0/0/1.0;
    interface lo0.0;
}
bgp {
    group To_ASBR2 {
        type internal;
        local-address 192.0.2.7;
        neighbor 192.0.2.5 {
            family inet-vpn {
                unicast;
            }
        }
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface so-0/0/1.0;
        interface lo0.0;
    }
}

```

4. On Router PE2, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 200;

```

5. On Router PE2, configure a policy to add the VRF route target to the routes being advertised for this VPN.

```

[edit policy-options]
policy-statement vpnexport {
    term 1 {
        from protocol bgp;
        then {
            community add test_comm;
            accept;
        }
    }
    term 2 {

```



```

        then reject;
    }
}

```

6. On Router PE2, configure a policy to import routes from BGP that have the **test\_comm** community attached.

```

[edit policy-options]
policy-statement vpnimport {
  term 1 {
    from {
      protocol bgp;
      community test_comm;
    }
    then accept;
  }
  term 2 {
    then reject;
  }
}

```

7. On Router PE1, define the **test\_comm** BGP community with a route target.

```

[edit policy-options]
community test_comm members target:1:100;

```

## Configuring Router CE2

### Step-by-Step Procedure

1. On Router CE2, configure the IP address and protocol family on the Fast Ethernet interface for the link between Router CE2 and Router PE2. Specify the **inet** address family type.

```

[edit interfaces]
fe-3/0/0 {
  unit 0 {
    family inet {
      address 192.168.6.14/24;
    }
  }
}

```



2. On Router CE2, configure the IP address and protocol family on the loopback interface. Specify the **inet** address family type.

```
[edit interfaces]
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.8/32;
    }
  }
}
```

3. On Router CE2, define a policy named **myroutes** that accepts direct routes.

```
[edit policy-options]
policy-statement myroutes {
  from protocol direct;
  then accept;
}
```

4. On Router CE2, configure a routing protocol. The routing protocol can be a static route, RIP, OSPF, ISIS, or EBGP. In this example, we configure EBGP. Specify AS **200** as the peer AS and specify the BGP neighbor IP address as the Fast Ethernet interface of Router PE2. Include the **export** statement.

```
[edit protocols]
bgp {
  group To_PE2 {
    neighbor 192.168.6.13 {
      export myroutes;
      peer-as 200;
    }
  }
}
```

5. On Router CE2, configure the BGP local autonomous system number.

```
[edit routing-options]
autonomous-system 20;
```



## Verifying the VPN Operation

### Step-by-Step Procedure

1. Commit the configuration on each router.

**NOTE:** The MPLS labels shown in this example will be different than the labels used in your configuration.

2. On Router PE1, display the routes for the **vpn2CE1** routing instance using the **show ospf route** command. Verify that the **192.0.2.1** route is learned from OSPF.

```
user@PE1> show ospf route instance vpn2CE1
```

Topology default Route Table:

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop addr/label
<b>192.0.2.1</b>	Intra	Router	IP	1	fe-1/2/3.0	203.0.113.1
192.0.2.1/32	Intra	Network	IP	1	fe-1/2/3.0	203.0.113.1

3. On Router PE1, use the **show route advertising-protocol** command to verify that Router PE1 advertises the **192.0.2.1** route to Router ASBR1 using MP-BGP with the VPN MPLS label.

```
user@PE1> show route advertising-protocol bgp 192.0.2.4 extensive
```

```
vpn2CE1.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
  BGP group To_ASBR1 type Internal
    Route Distinguisher: 1:100
    VPN Label: 299952
    Nexthop: Self
    Flags: Nexthop Change
    MED: 1
    Localpref: 100
    AS path: [100] I
    Communities: target:1:100 rte-type:0.0.0.2:1:0
```

4. On Router ASBR1, use the **show route receive-protocol** command to verify that the router receives and accepts the **192.0.2.1** route and places it in the **bgp.l3vpn.0** routing table.

```
user@ASBR1> show route receive-protocol bgp 192.0.2.2 extensive
```



```

inet.0: 9 destinations, 9 routes (9 active, 0 holddown, 0 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
* 1:100:192.0.2.1/32 (1 entry, 1 announced)
  Route Distinguisher: 1:100
  VPN Label: 299952
  Nexthop: 192.0.2.2
  MED: 1
  Localpref: 100
  AS path: I
  Communities: target:1:100 rte-type:0.0.0.2:1:0

```

5. On Router ASBR1, use the **show route advertising-protocol** command to verify that Router ASBR1 advertises the **192.0.2.1** route to Router ASBR2.

```
user@ASBR1> show route advertising-protocol bgp 192.168.3.6 extensive
```

```

bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
* 1:100:192.0.2.1/32 (1 entry, 1 announced)
  BGP group To-ASBR2 type External
  Route Distinguisher: 1:100
  VPN Label: 299984
  Nexthop: Self
  Flags: Nexthop Change
  AS path: [100] I
  Communities: target:1:100 rte-type:0.0.0.2:1:0

```

6. On Router ASBR2, use the **show route receive-protocol** command to verify that the router receives and accepts the **192.0.2.1** route and places it in the **bgp.l3vpn.0** routing table.

```
user@ASBR2> show route receive-protocol bgp 192.168.3.8 extensive
```

```

inet.0: 9 destinations, 9 routes (9 active, 0 holddown, 0 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

```



```
* 1:100:192.0.2.1/32 (1 entry, 1 announced)
  Accepted
  Route Distinguisher: 1:100
  VPN Label: 299984
  Nexthop: 192.168.3.8
  AS path: 100 I
  Communities: target:1:100 rte-type:0.0.0.2:1:0
```

7. On Router ASBR2, use the **show route advertising-protocol** command to verify that Router ASBR2 advertises the **192.0.2.1** route to Router PE2.

```
user@ASBR2> show route advertising-protocol bgp 192.0.2.7 extensive
```

```
bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
* 1:100:192.0.2.1/32 (1 entry, 1 announced)
  BGP group To-PE2 type Internal
  Route Distinguisher: 1:100
  VPN Label: 300048
  Nexthop: Self
  Flags: Nexthop Change
  Localpref: 100
  AS path: [200] 100 I
  Communities: target:1:100 rte-type:0.0.0.2:1:0
```

8. On Router PE2, use the **show route receive-protocol** command to verify that the router receives and accepts the **192.0.2.1** route and places it in the **vpn2CE2.inet.0** routing table.

```
user@PE2> show route receive-protocol bgp 192.0.2.5 extensive
```

```
inet.0: 12 destinations, 13 routes (12 active, 0 holddown, 0 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

__juniper_private1__.inet.0: 14 destinations, 14 routes (8 active, 0 holddown,
6 hidden)

__juniper_private2__.inet.0: 1 destinations, 1 routes (0 active, 0 holddown, 1
hidden)

vpn2CE2.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
  Accepted
  Route Distinguisher: 1:100
```



```

VPN Label: 300048
Nexthop: 192.0.2.5
Localpref: 100
AS path: 100 I
AS path: Recorded
Communities: target:1:100 rte-type:0.0.0.2:1:0

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

bgp.l3vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

* 1:100:192.0.2.1/32 (1 entry, 0 announced)
  Accepted
  Route Distinguisher: 1:100
  VPN Label: 300048
  Nexthop: 192.0.2.5
  Localpref: 100
  AS path: 100 I
  AS path: Recorded
  Communities: target:1:100 rte-type:0.0.0.2:1:0

__juniper_privatel__.inet6.0: 4 destinations, 4 routes (4 active, 0 holddown,
0 hidden)

```

9. On Router PE2, use the **show route advertising-protocol** command to verify that Router PE2 advertises the **192.0.2.1** route to Router CE2 through the **To\_CE2** peer group.

```
user@PE2> show route advertising-protocol bgp 192.168.6.14 extensive
```

```

vpn2CE2.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
  BGP group To_CE2 type External
  Nexthop: Self
  AS path: [200] 100 I
  Communities: target:1:100 rte-type:0.0.0.2:1:0

```

10. On Router CE2, use the **show route** command to verify that Router CE2 receives the **192.0.2.1** route from Router PE2.

```
user@CE2> show route 192.0.2.1
```



```
inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.1/32          *[BGP/170] 00:25:36, localpref 100
                     AS path: 200 100 I
                     > to 192.168.6.13 via fe-3/0/0.0
```

11. On Router CE2, use the **ping** command and specify **192.0.2.8** as the source of the ping packets to verify connectivity with Router CE1.

```
user@CE2> ping 192.0.2.1 source 192.0.2.8
```

```
PING 192.0.2.1 (192.0.2.1): 56 data bytes
64 bytes from 192.0.2.1: icmp_seq=0 ttl=58 time=4.786 ms
64 bytes from 192.0.2.1: icmp_seq=1 ttl=58 time=10.210 ms
64 bytes from 192.0.2.1: icmp_seq=2 ttl=58 time=10.588 ms
```

12. On Router PE2, use the **show route** command to verify that the traffic is sent with an inner label of **300048** and a top label of **299776**.

```
user@PE2> show route 192.0.2.1 detail
```

```
vpn2CE2.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
192.0.2.1/32 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
              Route Distinguisher: 1:100
              Next hop type: Indirect
              Next-hop reference count: 3
              Source: 192.0.2.5
              Next hop type: Router, Next hop index: 653
              Next hop: via so-0/0/1.0 weight 0x1, selected
              Label-switched-path To-PE2
              Label operation: Push 300048, Push 299776(top)
              Protocol next hop: 192.0.2.5
              Push 300048
              Indirect next hop: 8c61138 262143
              State: <Secondary Active Int Ext>
              Local AS: 200 Peer AS: 200
              Age: 27:48 Metric2: 2
              Task: bgp_200.192.0.2.5+60185
              Announcement bits (3): 0-RT 1-KRT 2-BGP RT Background
              AS path: 100 I
              AS path: Recorded
```



```

Communities: target:1:100 rte-type:0.0.0.2:1:0
Accepted
VPN Label: 300048
Localpref: 100
Router ID: 192.0.2.5
Primary Routing Table bgp.l3vpn.0

```

13. On Router ASBR2, use the **show route table** command to verify that Router ASBR2 receives the traffic after the top label is popped by Router P2, that label **300048** is swapped with label **299984**, and that the packet is sent toward Router ASBR1 through interface **ge-0/1/1.0**.

```
user@ASBR2> show route table mpls.0 detail
```

```

300048 (1 entry, 1 announced)
  *VPN      Preference: 170
            Next hop type: Router, Next hop index: 648
            Next-hop reference count: 2
            Source: 192.168.3.8           Next hop: 192.168.3.8 via
ge-0/1/1.0, selected
            Label operation: Swap 299984
            State: <Active Int Ext>
            Local AS: 200
            Age: 30:39
            Task: BGP RT Background
            Announcement bits (1): 0-KRT
            AS path: 100 I
            Ref Cnt: 1
            Communities: target:1:100 rte-type:0.0.0.2:1:0

```

14. On Router ASBR1, use the **show route table** command to verify that Router ASBR1 receives the traffic with label **299984**, swaps the label with **299952**, and pushes a new top label of **299792**.

```
user@ASBR1> show route table mpls.0 detail
```

```

299984 (1 entry, 1 announced)
  *VPN      Preference: 170
            Next hop type: Indirect
            Next-hop reference count: 2
            Source: 192.0.2.2
            Next hop type: Router, Next hop index: 538
            Next hop: 192.168.2.5 via ge-0/0/0.0 weight 0x1, selected
            Label-switched-path To_PE1
            Label operation: Swap 299952, Push 299792(top)

```



```

Protocol next hop: 192.0.2.2
Swap 299952
Indirect next hop: 8af70a0 262142
State: <Active Int Ext>
Local AS: 100
Age: 34:09      Metric2: 2
Task: BGP RT Background
Announcement bits (1): 0-KRT
AS path: I
Ref Cnt: 1
Communities: target:1:100 rte-type:0.0.0.2:1:0

```

15. On Router PE1, use the **show route table** command to verify that Router PE1 receives the traffic with label **299952**, and then pops the inner label.

```
user@PE1> show route route table mpls.0 detail
```

```

299952 (1 entry, 1 announced)
  *VPN      Preference: 170
            Next hop type: Router, Next hop index: 536
            Next-hop reference count: 2
            Next hop: 203.0.113.1 via fe-1/2/3.0, selected
Label operation: Pop
            State: Active Int Ext
            Local AS: 100
            Age: 40:26
            Task: BGP RT Background
            Announcement bits (1): 0-KRT
            AS path: I
            Ref Cnt: 1
            Communities: rte-type:0.0.0.2:1:0

```

SEE ALSO

| [Interprovider VPNs](#) | [403](#)



## Example: Configuring Interprovider Layer 3 VPN Option C

### IN THIS SECTION

- [Requirements | 478](#)
- [Configuration Overview and Topology | 479](#)
- [Configuration | 480](#)

Interprovider Layer 3 VPN Option C provides interprovider multihop EBGp redistribution of labeled VPN-IPv4 routes between source and destination ASs, with EBGp redistribution of labeled IPv4 routes from AS to neighboring AS. Compared to Option A and Option B, Option C is the most scalable solution. To configure an interprovider Layer 3 VPN option C service, you need to configure the AS border routers and the PE routers connected to the end customer's CE routers using multihop EBGp.

This example provides a step-by-step procedure to configure interprovider layer 3 VPN option C, which is one of the recommended implementations of MPLS VPN when that service is required by a customer that has more than one AS but not all of the customer's ASs can be serviced by the same service provider (SP). It is organized in the following sections:

### Requirements

This example requires the following hardware and software components:

- Junos OS Release 9.5 or later.
- Eight Juniper Networks M Series Multiservice Edge Routers, T Series Core Routers, TX Matrix Routers, or MX Series 5G Universal Routing Platforms.



## Configuration Overview and Topology

Interprovider layer 3 VPN option C is a very scalable interprovider VPN solution to the problem of providing VPN services to a customer that has different sites, not all of which can use the same SP.

*RFC 4364* section 10, refers to this method as multihop EBGp redistribution of labeled VPN-IPv4 routes between source and destination ASs, with EBGp redistribution of labeled IPv4 routes from AS to neighboring AS.

This solution is similar to the solution described in *Implementing Interprovider Layer 3 VPN Option B*, except internal IPv4 unicast routes are advertised instead of external VPN-IPv4-unicast routes, using EBGp. Internal routes are internal to leaf SPs (SP1 and SP2 in this example), and external routes are those learned from the end customer requesting VPN services.

In this configuration:

- After the loopback address of Router PE2 is learned by Router PE1 and the loopback address of Router PE1 is learned by Router PE2, the end PE routers establish an MP-EBGP session for exchanging VPN-IPv4 routes.
- Since VPN-IPv4 routes are exchanged among end PE routers, any other router on the path from Router PE1 and Router PE2 does not need to keep or install VPN-IPv4 routes in their routing information base (RIB) or forwarding information base (FIB) tables.
- An MPLS path needs to be established between Router PE1 and Router PE2.

*RFC 4364* describes only one solution that uses a BGP labeled-unicast approach. In this approach, the ASBR routers advertise the loopback addresses of the PE routers and associate each prefix with a label according to *RFC 3107*. Service providers may use RSVP or LDP to establish an LSP between ASBR routers and PE routers in their internal network.

In this network, ASBR2 receives label information associated with the loopback IP address of Router PE1 and advertises another label to Router ASBR1 using MP-EBGP labeled-unicast. Meanwhile, the ASBRs build their own MPLS forwarding table according to the received and advertised routes and labels. Router ASBR1 uses its own IP address as the next-hop information.

Router ASBR2 receives this prefix associated with a label, assigns another label, changes the next-hop address to its own address, and advertises it to Router PE1. Router PE1 now has an update with the label information and next-hop to Router ASBR1. Also, Router PE1 already has a label associated with the IP address of Router ASBR1. If Router PE1 sends an IP packet to Router PE2, it pushes two labels: one for the IP address of Router PE2 (obtained using MP-IBGP labeled-unicast advertisement) and one for the IP address of Router ASBR1 (obtained using LDP or RSVP).

Router ASBR1 then pops the outer label and swaps the inner label with the label learned from a neighbor ASBR for its neighboring PE router. Router ASBR2 performs a similar function and swaps the incoming label (only one) and pushes another label that is associated with the address of Router PE2. Router PE2 pops both labels and passes the remaining IP packet to its own CPU. After the end-to-end connection




among the PE routers is created, the PE routers establish an MP-EBGP session to exchange VPN-IPv4 routes.

In this solution, PE routers push three labels onto the IP packet coming from the VPN end user. The inner-most label, obtained using MP-EBGP, determines the correct VPN routing and forwarding (VRF) routing instance at the remote PE. The middle label is associated with the IP address of the remote PE and is obtained from an ASBR using MP-IBGP labeled-unicast. The outer label is associated with the IP addresses of the ASBRs and is obtained using LDP or RSVP.

The physical topology of the network is shown in [Figure 49 on page 480](#).

**Figure 49: Physical Topology of Interprovider Layer 3 VPN Option C**

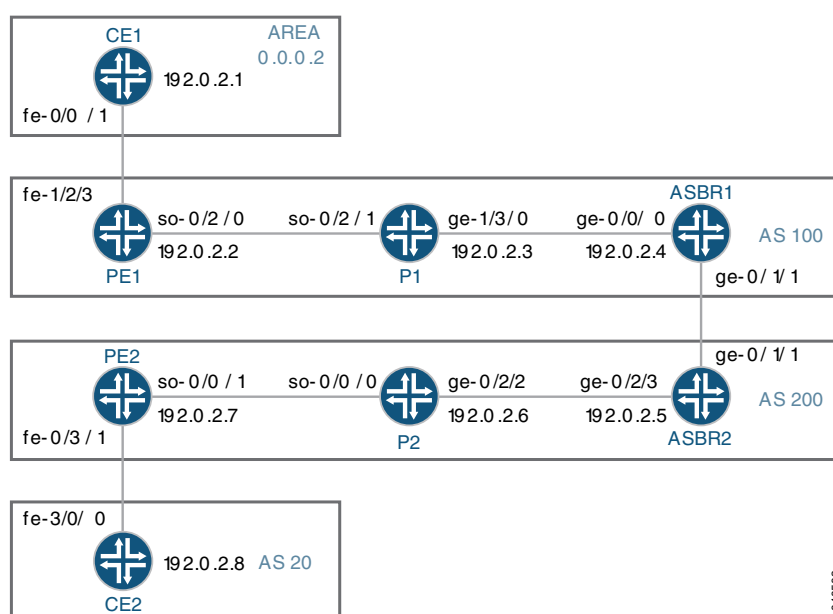

## Configuration

### IN THIS SECTION

- Configuring Router CE1 | 481
- Configuring Router PE1 | 482
- Configuring Router P1 | 486
- Configuring Router ASBR1 | 487
- Configuring Router ASBR2 | 490
- Configuring Router P2 | 494



- [Configuring Router PE2 | 495](#)
- [Configuring Router CE2 | 499](#)
- [Verifying the VPN Operation | 500](#)

**NOTE:** The procedure presented here is written with the assumption that the reader is already familiar with MPLS MVPN configuration. This example focuses on explaining the unique configuration required for carrier-of-carriers solutions for VPN services to different sites.

To configure interprovider layer 3 VPN option C, perform the following tasks:

### **Configuring Router CE1**

#### **Step-by-Step Procedure**

1. On Router CE1, configure the IP address and protocol family on the Fast Ethernet interface for the link between Router CE1 and Router PE1. Specify the **inet** address family type.

```
[edit interfaces fe-0/0/1.0]
family inet {
  address 198.51.100.1/24;
}
```

2. On Router CE1, configure the IP address and protocol family on the loopback interface. Specify the **inet** address family type.

```
[edit interfaces lo0]
unit 0 {
  family inet {
    address 192.0.2.1/32;
  }
}
```

3. On Router CE1, configure a routing protocol. The routing protocol can be a static route, RIP, OSPF, ISIS, or EBGp. In this example we configure OSPF. Include the logical interface for the link between Router CE1 and Router PE1 and the logical loopback interface of Router CE1.

```
[edit protocols]
```



```

ospf {
  area 0.0.0.2 {
    interface fe-0/0/1.0;
    interface lo0.0 {
      passive;
    }
  }
}

```

## Configuring Router PE1

### Step-by-Step Procedure

1. On Router PE1, configure IPv4 addresses on the SONET, Fast Ethernet, and logical loopback interfaces. Specify the **inet** address family on all of the interfaces. Specify the **mpls** address family on the SONET interfaces.

```

[edit interfaces]
so-0/2/0 {
  unit 0 {
    family inet {
      address 192.168.1.2/24;
    }
    family mpls;
  }
}
fe-1/2/3 {
  unit 0 {
    family inet {
      address 198.51.100.3/24;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.2/32;
    }
  }
}

```

2. On Router PE1, configure the routing instance for VPN2. Specify the **vrf** instance type and specify the customer-facing Fast Ethernet interface. Configure a route distinguisher to create a unique VPN-IPv4 address prefix. Apply the VRF import and export policies to enable the sending and receiving of route



targets. Configure the OSPF protocol within the VRF. Specify the customer-facing Fast Ethernet interface and specify the export policy to export BGP routes into OSPF.

```
[edit routing-instances]
vpn2CE1 {
  instance-type vrf;
  interface fe-1/2/3.0;
  route-distinguisher 1:100;
  vrf-import vpnimport;
  vrf-export vpnexport;
  protocols {
    ospf {
      export bgp-to-ospf;
      area 0.0.0.2 {
        interface fe-1/2/3.0;
      }
    }
  }
}
```

3. On Router PE1, configure the RSVP and MPLS protocols to support the LSP. Configure the LSP to Router ASBR1 and specify the IP address of the logical loopback interface on Router ASBR1. Configure the OSPF protocol. Specify the core-facing SONET interface and specify the logical loopback interface on Router PE1.

```
[edit protocols]
rsvp {
  interface so-0/2/0.0;
  interface lo0.0;
}
mpls {
  label-switched-path To-ASBR1 {
    to 192.0.2.4;
  }
  interface so-0/2/0.0;
  interface lo0.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface so-0/2/0.0;
    interface lo0.0 {
      passive;
    }
  }
}
```



```

    }
  }
}

```

4. On Router PE1, configure the **To\_ASBR1** peer BGP group. Specify the group type as **internal**. Specify the local address as the logical loopback interface on Router PE1. Specify the neighbor address as the logical loopback interface on Router ASBR1. Specify the **inet** address family. For a PE router to install a route in the VRF, the next hop must resolve to a route stored within the **inet.3** table. The **labeled-unicast resolve-vpn** statements allow labeled routes to be placed in the **inet.3** routing table for route resolution, which are then resolved for PE router connections where the remote PE is located across another AS.

```

[edit protocols]
bgp {
  group To_ASBR1 {
    type internal;
    local-address 192.0.2.2;
    neighbor 192.0.2.4 {
      family inet {
        labeled-unicast {
          resolve-vpn;
        }
      }
    }
  }
}

```

5. On Router PE1, configure multihop EBGp toward PE2. Specify the **inet-vpn** family.

```

[edit protocols]
bgp {
  group To_PE2 {
    multihop {
      ttl 20;
    }
    local-address 192.0.2.2;
    family inet-VPN {
      unicast;
    }
    neighbor 192.0.2.7 {
      peer-as 200;
    }
  }
}

```



```

    }
}

```

6. On Router PE1, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 100;

```

7. On Router PE1, configure a policy to export the BGP routes into OSPF.

```

[edit policy-options]
policy-statement bgp-to-ospf {
  term 1 {
    from protocol bgp;
    then accept;
  }
  term 2 {
    then reject;
  }
}

```

8. On Router PE1, configure a policy to add the VRF route target to the routes being advertised for this VPN.

```

[edit policy-options]
policy-statement vpnexport {
  term 1 {
    from protocol ospf;
    then {
      community add test_comm;
      accept;
    }
  }
  term 2 {
    then reject;
  }
}

```

9. On Router PE1, configure a policy to import routes from BGP that have the **test\_comm** community attached.



```
[edit policy-options]
  policy-statement vpnimport {
    term 1 {
      from {
        protocol bgp;
        community test_comm;
      }
      then accept;
    }
    term 2 {
      then reject;
    }
  }
}
```

10. On Router PE1, define the **test\_comm** BGP community with a route target.

```
[edit policy-options]
  community test_comm members target:1:100;
```

### Configuring Router P1

#### Step-by-Step Procedure

1. On Router P1, configure IP addresses for the SONET and Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** address families. Configure the IP address for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```
[edit interfaces]
so-0/2/1 {
  unit 0 {
    family inet {
      address 192.168.1.4/24;
    }
    family mpls;
  }
}
ge-1/3/0 {
  unit 0 {
    family inet {
      address 192.168.2.5/24;
    }
    family mpls;
  }
}
```



```

}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.3/32;
    }
  }
}

```

2. On Router P1, configure the RSVP and MPLS protocols to support the LSP. Specify the SONET and Gigabit Ethernet interfaces.

Configure the OSPF protocol. Specify the SONET and Gigabit Ethernet interfaces and specify the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```

[edit protocols]
rsvp {
  interface so-0/2/1.0;
  interface ge-1/3/0.0;
  interface lo0.0;
}
mpls {
  interface lo0.0;
  interface ge-1/3/0.0;
  interface so-0/2/1.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-1/3/0.0;
    interface so-0/2/1.0;
    interface lo0.0 {
      passive;
    }
  }
}

```

### Configuring Router ASBR1

#### Step-by-Step Procedure

1. On Router ASBR1, configure IP addresses for the Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** addresses families. Configure the IP addresses for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.



```

[edit interfaces]
ge-0/0/0 {
  unit 0 {
    family inet {
      address 192.168.2.6/24;
    }
    family mpls;
  }
}
ge-0/1/1 {
  unit 0 {
    family inet {
      address 192.168.3.7/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.4/32;
    }
  }
}

```

2. On Router ASBR1, configure the protocols to support the LSP.

Configure the RSVP protocol by specifying the Gigabit Ethernet interface that is facing the P1 router and the logical loopback interface.

Configure the MPLS protocol by specifying the Gigabit Ethernet interfaces and the logical loopback interface. Include the **traffic-engineering bgp-igp-both-ribs** statement at the **[edit protocols mpls]** hierarchy level.

Configure the OSPF protocol on the Gigabit Ethernet interface facing the P1 router and the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```

[edit protocols]
rsvp {
  interface ge-0/0/0.0;
  interface lo0.0;
}
mpls {
  traffic-engineering bgp-igp-both-ribs;
}

```



```

    label-switched-path To_PE1 {
        to 192.0.2.2;
    }
    interface lo0.0;
    interface ge-0/0/0.0;
    interface ge-0/1/1.0;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-0/0/0.0;
        interface lo0.0 {
            passive;
        }
    }
}
}

```

3. On Router ASBR1, create the **To-PE1** internal BGP peer group. Specify the local IP peer address as the local **lo0.0** address. Specify the neighbor IP peer address as the Gigabit Ethernet interface address of Router PE1.

```

[edit protocols]
bgp {
    group To-PE1 {
        type internal;
        local-address 192.0.2.4;
        neighbor 192.0.2.2 {
            family inet {
                labeled-unicast;
            }
            export next-hop-self;
        }
    }
}

```

4. On Router ASBR1, create the **To-ASBR2** external BGP peer group. Enable the router to use BGP to advertise network layer reachability information (NLRI) for unicast routes. Specify the neighbor IP peer address as the Gigabit Ethernet interface address on Router ASBR2.

```

[edit protocols]
group To-ASBR2 {
    type external;
    family inet {

```



```

        labeled-unicast;
    }
    export To-ASBR2;
    neighbor 192.168.3.8 {
        peer-as 200;
    }
}

```

5. On Router ASBR1, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 100;

```

6. On Router ASBR 1, configure a policy to import routes from BGP that match the 192.0.2.2/24 route.

```

[edit policy-options]
policy-statement To-ASBR2 {
    term 1 {
        from {
            route-filter 192.0.2.2/32 exact;
        }
        then accept;
    }
    term 2 {
        then reject;
    }
}

```

7. On Router ASBR 1, define a next-hop self policy and apply it to the IBGP sessions.

```

[edit policy-options]
policy-statement next-hop-self {
    then {
        next-hop self;
    }
}

```

## Configuring Router ASBR2

### Step-by-Step Procedure



1. On Router ASBR2, configure IP addresses for the Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** address families. Configure the IP address for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```
[edit interfaces]
ge-0/1/1 {
  unit 0 {
    family inet {
      address 192.168.3.8/24;
    }
    family mpls;
  }
}
ge-0/2/3 {
  unit 0 {
    family inet {
      address 192.168.4.9/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.5/32;
    }
  }
}
```

2. On Router ASBR2, configure the protocols to support the LSP.

Configure the RSVP protocol by specifying the Gigabit Ethernet interface facing the P2 router and the logical loopback interface .

Configure the MPLS protocol by specifying the Gigabit Ethernet interfaces and the logical loopback interface. Include the **traffic-engineering bgp-igp-both-ribs** statement at the **[edit protocols mpls]** hierarchy level.

Configure the OSPF protocol on the Gigabit Ethernet interface facing the P2 router and the logical loopback interface . Enable OSPF to support traffic engineering extensions.

```
[edit protocols]
rsvp {
  interface ge-0/2/3.0;
  interface lo0.0;
```



```

}
mpls {
  traffic-engineering bgp-igp-both-ribs;
  label-switched-path To_PE2 {
    to 192.0.2.7;
  }
  interface lo0.0
  interface ge-0/2/3.0;
  interface ge-0/1/1.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-0/2/3.0;
    interface lo0.0 {
      passive;
    }
  }
}
}

```

3. On Router ASBR2, create the **To-PE2** internal BGP peer group. Specify the local IP peer address as the local **lo0.0** address. Specify the neighbor IP peer address as the **lo0.0** interface address of Router PE2.

```

[edit protocols]
bgp {
  group To-PE2 {
    type internal;
    local-address 192.0.2.5;
    export next-hop-self;
    neighbor 192.0.2.7 {
      family inet {
        labeled-unicast;
      }
      export next-hop-self;
    }
  }
}
}

```

4. On Router ASBR2, create the **To-ASBR1** external BGP peer group. Enable the router to use BGP to advertise NLRI for unicast routes. Specify the neighbor IP peer address as the Gigabit Ethernet interface address on Router ASBR1.



```
[edit protocols]
bgp {
  group To-ASBR1 {
    type external;
    family inet {
      labeled-unicast;
    }
    export To-ASBR1;
    neighbor 192.168.3.7 {
      peer-as 100;
    }
  }
}
```

5. On Router ASBR2 configure the BGP local autonomous system number.

```
[edit routing-options]
autonomous-system 200;
```

6. On Router ASBR2, configure a policy to import routes from BGP that match the **192.0.2.7/24** route.

```
[edit policy-options]
policy-statement To-ASBR1 {
  term 1 {
    from {
      route-filter 192.0.2.7/32 exact;
    }
    then accept;
  }
  term 2 {
    then reject;
  }
}
```

7. On Router ASBR 2, define a next-hop self policy.

```
[edit policy-options]
policy-statement next-hop-self {
  then {
    next-hop self;
  }
}
```



```
}
```

## Configuring Router P2

### Step-by-Step Procedure

1. On Router P2, configure IP addresses for the SONET and Gigabit Ethernet interfaces. Enable the interfaces to process the **inet** and **mpls** addresses families. Configure the IP addresses for the **lo0.0** loopback interface and enable the interface to process the **inet** address family.

```
[edit interfaces]
so-0/0/0 {
  unit 0 {
    family inet {
      address 192.168.5.10/24;
    }
    family mpls;
  }
}
ge-0/2/2 {
  unit 0 {
    family inet {
      address 192.168.4.11/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.0.2.6/32;
    }
  }
}
```

2. On Router P2, configure the RSVP and MPLS protocols to support the LSP. Specify the SONET and Gigabit Ethernet interfaces.

Configure the OSPF protocol. Specify the SONET and Gigabit Ethernet interfaces and specify the logical loopback interface. Enable OSPF to support traffic engineering extensions.

```
[edit protocols]
rsvp {
```



```

interface so-0/0/0.0;
interface ge-0/2/2.0;
interface lo0.0;
}
mpls {
  interface lo0.0;
  interface ge-0/2/2.0;
  interface so-0/0/0.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-0/2/2.0;
    interface so-0/0/0.0;
    interface lo0.0 {
      passive;
    }
  }
}
}

```

### Configuring Router PE2

#### Step-by-Step Procedure

1. On Router PE2, configure IPv4 addresses on the SONET, Fast Ethernet, and logical loopback interfaces. Specify the **inet** address family on all of the interfaces. Specify the **mpls** address family on the SONET interface.

```

[edit interfaces]
so-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.5.12/24;
    }
    family mpls;
  }
}
fe-0/3/1 {
  unit 0 {
    family inet {
      address 192.168.6.13/24;
    }
  }
}
}

```



```

lo0 {
  unit 0 {
    family inet {
      address 192.0.2.7/32;
    }
  }
}

```

2. On Router PE2, configure the routing instance for VPN2. Specify the **vrf** instance type and specify the customer-facing Fast Ethernet interface. Configure a route distinguisher to create a unique VPN-IPv4 address prefix. Apply the VRF import and export policies to enable the sending and receiving of route targets. Configure the BGP peer group within the VRF. Specify AS **20** as the peer AS and specify the IP address of the Fast Ethernet interface on Router CE1 as the neighbor address.

```

[edit routing-instances]
vpn2CE2 {
  instance-type vrf;
  interface fe-0/3/1.0;
  route-distinguisher 1:100;
  vrf-import vpnimport;
  vrf-export vpnexport;
  protocols {
    bgp {
      group To_CE2 {
        peer-as 20;
        neighbor 192.168.6.14;
      }
    }
  }
}

```

3. On Router PE2, configure the RSVP and MPLS protocols to support the LSP. Configure the LSP to ASBR2 and specify the IP address of the logical loopback interface on Router ASBR2. Configure the OSPF protocol. Specify the core-facing SONET interface and specify the logical loopback interface on Router PE2.

```

[edit protocols]
rsvp {
  interface so-0/0/1.0;
  interface lo0.0;
}
mpls {

```



```

label-switched-path To-ASBR2 {
    to 192.0.2.5;
}
interface so-0/0/1.0;
interface lo0.0;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface so-0/0/1.0;
        interface lo0.0 {
            passive;
        }
    }
}
}

```

4. On Router PE2, configure the **To\_ASBR2** BGP group. Specify the group type as **internal**. Specify the local address as the logical loopback interface on Router PE2. Specify the neighbor address as the logical loopback interface on the Router ASBR2.

```

[edit protocols]
bgp {
    group To_ASBR2 {
        type internal;
        local-address 192.0.2.7;
        neighbor 192.0.2.5 {
            family inet {
                labeled-unicast {
                    resolve-vpn;
                }
            }
        }
    }
}
}

```

5. On Router PE2, configure multihop EBGp towards Router PE1 Specify the **inet-vpn** address family.

```

[edit protocols]
bgp {
    group To_PE1 {
        type external;
        local-address 192.0.2.7;
    }
}

```



```

    multihop {
        ttl 20;
    }
    family inet-vpn {
        unicast;
    }
    neighbor 192.0.2.2 {
        peer-as 100;
    }
}

```

6. On Router PE2, configure the BGP local autonomous system number.

```

[edit routing-options]
autonomous-system 200;

```

7. On Router PE2, configure a policy to add the VRF route target to the routes being advertised for this VPN.

```

[edit policy-options]
policy-statement vpnexport {
    term 1 {
        from protocol bgp;
        then {
            community add test_comm;
            accept;
        }
    }
    term 2 {
        then reject;
    }
}

```

8. On Router PE2, configure a policy to import routes from BGP that have the **test\_comm** community attached.

```

[edit policy-options]
policy-statement vpnimport {
    term 1 {
        from {

```



```

        protocol bgp;
        community test_comm;
    }
    then accept;
}
term 2 {
    then reject;
}
}

```

9. On Router PE1, define the **test\_comm** BGP community with a route target.

```

[edit policy-options]
community test_comm members target:1:100;

```

### Configuring Router CE2

#### Step-by-Step Procedure

1. On Router CE2, configure the IP address and protocol family on the Fast Ethernet interface for the link between Router CE2 and Router PE2. Specify the **inet** address family type.

```

[edit interfaces]
fe-3/0/0 {
    unit 0 {
        family inet {
            address 192.168.6.14/24;
        }
    }
}

```

2. On Router CE2, configure the IP address and protocol family on the loopback interface. Specify the **inet** address family type.

```

[edit interfaces lo0]
lo0 {
    unit 0 {
        family inet {
            address 192.0.2.8/32;
        }
    }
}

```



3. On Router CE2, define a policy named **myroutes** that accepts direct routes.

```
[edit policy-options]
policy-statement myroutes {
  from protocol direct;
  then accept;
}
```

4. On Router CE2, configure a routing protocol. The routing protocol can be a static route, RIP, OSPF, ISIS, or EBGP. In this example, we configure EBGP. Specify the BGP neighbor IP address as the logical loopback interface of Router PE1. Apply the **myroutes** policy.

```
[edit protocols]
bgp {
  group To_PE2 {
    neighbor 198.51.100.13 {
      export myroutes;
      peer-as 200;
    }
  }
}
```

5. On Router CE2, configure the BGP local autonomous system number.

```
[edit routing-options]
autonomous-system 20;
```

### Verifying the VPN Operation

#### Step-by-Step Procedure

1. Commit the configuration on each router.

**NOTE:** The MPLS labels shown in this example will be different than the labels used in your configuration.

2. On Router PE1, display the routes for the **vpn2CE1** routing instance using the **show ospf route** command. Verify that the **192.0.2.1** route is learned from OSPF.

```
user@PE1> show ospf route instance vpn2CE1
```



Topology default Route Table:

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop addr/label
192.0.2.1	Intra	Router	IP	1	fe-1/2/3.0	198.51.100.1
<b>192.0.2.1/32</b>	Intra	Network	IP	1	fe-1/2/3.0	198.51.100.1
198.51.100.0/24	Intra	Network	IP		1 fe-1/2/3.0	

3. On Router PE1, use the **show route advertising-protocol** command to verify that Router PE1 advertises the **192.0.2.1** route to Router PE2 using MP-BGP with the VPN MPLS label.

```
user@PE1> show route advertising-protocol bgp 192.0.2.7 extensive
```

```
bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
* 1:100:192.0.2.1/32 (1 entry, 1 announced)
  BGP group To_PE2 type External
    Route Distinguisher: 1:100
    VPN Label: 300016
    Nexthop: Self
    Flags: Nexthop Change
    MED: 1
    AS path: [100] I
    Communities: target:1:100 rte-type:0.0.0.2:1:0
```

4. On Router ASBR1, use the **show route advertising-protocol** command to verify that Router ASBR1 advertises the **192.0.2.2** route to Router ASBR2.

```
user@ASBR1> show route advertising-protocol bgp 192.168.3.8 extensive
```

```
inet.0: 14 destinations, 16 routes (14 active, 0 holddown, 0 hidden)
* 192.0.2.2/32 (2 entries, 1 announced)
  BGP group To-PE2 type External
    Route Label: 300172
    Nexthop: Self
    Flags: Nexthop Change
    MED: 2
    AS path: [100] I
```

5. On Router ASBR2, use the **show route receive-protocol** command to verify that the router receives and accepts the **192.0.2.2** route .

```
user@ASBR2> show route receive-protocol bgp 192.168.3.7 extensive
```



```
inet.0: 10 destinations, 11 routes (10 active, 0 holddown, 0 hidden)
* 192.0.2.2/32 (1 entry, 1 announced)
  Accepted
  Route Label: 300172
  Nexthop: 192.168.3.7
  MED: 2
  AS path: 100 I
```

6. On Router ASBR2, use the **show route advertising-protocol** command to verify that Router ASBR2 advertises the **192.0.2.2** route to Router PE2.

```
user@ASBR2> show route advertising-protocol bgp 192.0.2.7 extensive
```

```
inet.0: 10 destinations, 11 routes (10 active, 0 holddown, 0 hidden)
* 192.0.2.2/32 (1 entry, 1 announced)
  BGP group To-PE2 type Internal
  Route Label: 300192
  Nexthop: Self
  Flags: Nexthop Change
  MED: 2
  Localpref: 100
  AS path: [200] 100 I
```

7. On Router PE2, use the **show route receive-protocol** command to verify that Router PE2 receives the route and puts it in the **inet.0** routing table. Verify that Router PE2 also receives the update from Router PE1 and accepts the route.

```
user@PE2> show route receive-protocol bgp 192.0.2.5 extensive
```

```
inet.0: 13 destinations, 14 routes (13 active, 0 holddown, 0 hidden)
* 192.0.2.2/32 (1 entry, 1 announced)
  Accepted
  Route Label: 300192
  Nexthop: 192.0.2.5
  MED: 2
  Localpref: 100
  AS path: 100 I
  AS path: Recorded

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

* 192.0.2.2/32 (1 entry, 1 announced)
  Accepted
```



```

Route Label: 300192
Nexthop: 192.0.2.5
MED: 2
Localpref: 100
AS path: 100 I
AS path: Recorded

```

8. On Router PE2, use the **show route receive-protocol** command to verify that Router PE2 puts the route in the routing table of the **vpn2CE2** routing instance and advertises the route to Router CE2 using EBGp.

```
user@PE2> show route receive-protocol bgp 192.0.2.2 detail
```

```

inet.0: 17 destinations, 18 routes (17 active, 0 holddown, 0 hidden)

inet.3: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)

__juniper_privatel__.inet.0: 14 destinations, 14 routes (8 active, 0 holddown,
6 hidden)

__juniper_private2__.inet.0: 1 destinations, 1 routes (0 active, 0 holddown, 1
hidden)

vpn2CE2.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
  Accepted
  Route Distinguisher: 1:100
  VPN Label: 300016
  Nexthop: 192.0.2.2
  MED: 1
  AS path: 100 I
  AS path: Recorded
  Communities: target:1:100 rte-type:0.0.0.2:1:0

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

* 1:100:192.0.2.1/32 (1 entry, 0 announced)
  Accepted
  Route Distinguisher: 1:100

```



```

VPN Label: 300016
Nexthop: 192.0.2.2
MED: 1
AS path: 100 I
AS path: Recorded
Communities: target:1:100 rte-type:0.0.0.2:1:0

__juniper_privatel__.inet6.0: 4 destinations, 4 routes (4 active, 0 holddown,
0 hidden)

```

9. On Router PE2, use the **show route advertising-protocol** command to verify that Router PE2 advertises the **192.0.2.1** route to Router CE2 through the **vpn2CE2** peer group.

```
user@PE2> show route advertising-protocol bgp 192.168.6.14 extensive
```

```

vpn2CE2.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
* 192.0.2.1/32 (1 entry, 1 announced)
  BGP group vpn2CE2 type External
    Nexthop: Self
    AS path: [200] 100 I
    Communities: target:1:100 rte-type:0.0.0.2:1:0

```

10. On Router CE2, use the **show route** command to verify that Router CE2 receives the **192.0.2.1** route from Router PE2.

```
user@CE2> show route 192.0.2.1
```

```

inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.1/32          *[BGP/170] 00:25:36, localpref 100
                     AS path: 200 100 I
                     > to 192.168.6.13 via fe-3/0/0.0

```

11. On Router CE2, use the **ping** command and specify **192.0.2.8** as the source of the ping packets to verify connectivity with Router CE1.

```
user@CE2> ping 192.0.2.1 source 192.0.2.8
```

```

PING 192.0.2.1 (192.0.2.1): 56 data bytes
64 bytes from 192.0.2.1: icmp_seq=0 ttl=58 time=4.786 ms
64 bytes from 192.0.2.1: icmp_seq=1 ttl=58 time=10.210 ms
64 bytes from 192.0.2.1: icmp_seq=2 ttl=58 time=10.588 ms

```



12. On Router PE2, use the **show route** command to verify that the traffic is sent with an inner label of **300016**, a middle label of **300192**, and a top label of **299776**.

```
user@PE2> show route 192.0.2.1 detail
```

```
vpn2CE2.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
192.0.2.1/32 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
            Route Distinguisher: 1:100
            Next hop type: Indirect
            Next-hop reference count: 3
            Source: 192.0.2.2
            Next hop type: Router, Next hop index: 653
            Next hop: via so-0/0/1.0 weight 0x1, selected
            Label-switched-path To-ASBR2
Label operation: Push 300016, Push 300192, Push 299776(top)
            Protocol next hop: 192.0.2.2
            Push 300016
            Indirect next hop: 8c61138 262142
            State: <Secondary Active Ext>
            Local AS: 200 Peer AS: 100
            Age: 17:33      Metric: 1      Metric2: 2
            Task: BGP_100.192.0.2.2+62319
            Announcement bits (3): 0-RT 1-KRT 2-BGP RT Background
            AS path: 100 I
            AS path: Recorded
            Communities: target:1:100 rte-type:0.0.0.2:1:0
            Accepted
            VPN Label: 300016
            Localpref: 100
            Router ID: 192.0.2.2
            Primary Routing Table bgp.l3vpn.0
```

13. On Router ASBR2, use the **show route table** command to verify that Router ASBR2 receives the traffic after the top label is popped by Router P2. Verify that label **300192** is a swapped with label **300176** and the traffic is sent towards Router ASBR1 using interface ge-0/1/1.0. At this point, the bottom label **300016** is preserved.

```
user@ASBR2# show route table mpls.0 detail
```

```
300192 (1 entry, 1 announced)
  *VPN      Preference: 170
            Next hop type: Router, Next hop index: 660
            Next-hop reference count: 2
```



```

Source: 192.168.3.7                               Next hop: 192.168.3.7 via
ge-0/1/1.0, selected
Label operation: Swap 300176
State: <Active Int Ext>
Local AS: 200
Age: 24:01
Task: BGP RT Background
Announcement bits (1): 0-KRT
AS path: 100 I
Ref Cnt: 1

```

14. On Router ASBR1, use the **show route table** command to verify that when Router ASBR1 receives traffic with label **300176**, it swaps the label with **299824** to reach Router PE1.

```
user@ASBR1> show route table mpls.0 detail
```

```

300176 (1 entry, 1 announced)
  *VPN      Preference: 170
            Next hop type: Router, Next hop index: 651
            Next-hop reference count: 2
            Next hop: 192.168.2.5 via ge-0/0/0.0 weight 0x1, selected
            Label operation: Swap 299824
            State: <Active Int Ext>
            Local AS: 100
            Age: 25:53
            Task: BGP RT Background
            Announcement bits (1): 0-KRT
            AS path: I
            Ref Cnt: 1

```

15. On Router PE1, use the **show route table** command to verify that Router PE1 receives the traffic after the top label is popped by Router P1. Verify that label **300016** is popped and the traffic is sent towards Router CE1 using interface **fe-1/2/3.0**.

```
user@PE1> show route table mpls.0 detail
```

```

300016 (1 entry, 1 announced)
  *VPN      Preference: 170
            Next hop type: Router, Next hop index: 643
            Next-hop reference count: 2
            Next hop: 198.51.100.1 via fe-1/2/3.0, selected
            Label operation: Pop
            State:< Active Int Ext>

```



```

Local AS: 100
Age: 27:37
Task: BGP RT Background
Announcement bits (1): 0-KRT
AS path: I
Ref Cnt: 1
Communities: rte-type:0.0.0.2:1:0

```

SEE ALSO

| [Interprovider VPNs | 403](#)

## Carrier-of-Carrier VPNs

### IN THIS SECTION

- [Understanding Carrier-of-Carriers VPNs | 507](#)
- [Configuring Carrier-of-Carriers VPNs for Customers That Provide Internet Service | 510](#)
- [Carrier-of-Carriers VPN Example—Customer Provides Internet Service | 517](#)
- [Configuring Carrier-of-Carriers VPNs for Customers That Provide VPN Service | 529](#)
- [Carrier-of-Carriers VPN Example—Customer Provides VPN Service | 539](#)
- [Multiple Instances for LDP and Carrier-of-Carriers VPNs | 554](#)

## Understanding Carrier-of-Carriers VPNs

### IN THIS SECTION

- [Internet Service Provider as the Customer | 509](#)
- [VPN Service Provider as the Customer | 509](#)




The customer of a VPN service provider might be a service provider for the end customer. The following are the two main types of carrier-of-carriers VPNs (as described in RFC 4364):

- “Internet Service Provider as the Customer” on page 509—The VPN customer is an ISP that uses the VPN service provider’s network to connect its geographically disparate regional networks. The customer does not have to configure MPLS within its regional networks.
- “VPN Service Provider as the Customer” on page 509—The VPN customer is itself a VPN service provider offering VPN service to its customers. The carrier-of-carriers VPN service customer relies on the backbone VPN service provider for inter-site connectivity. The customer VPN service provider is required to run MPLS within its regional networks.

Figure 50 on page 508 illustrates the network architecture used for a carrier-of-carriers VPN service.

Figure 50: Carrier-of-Carriers VPN Architecture

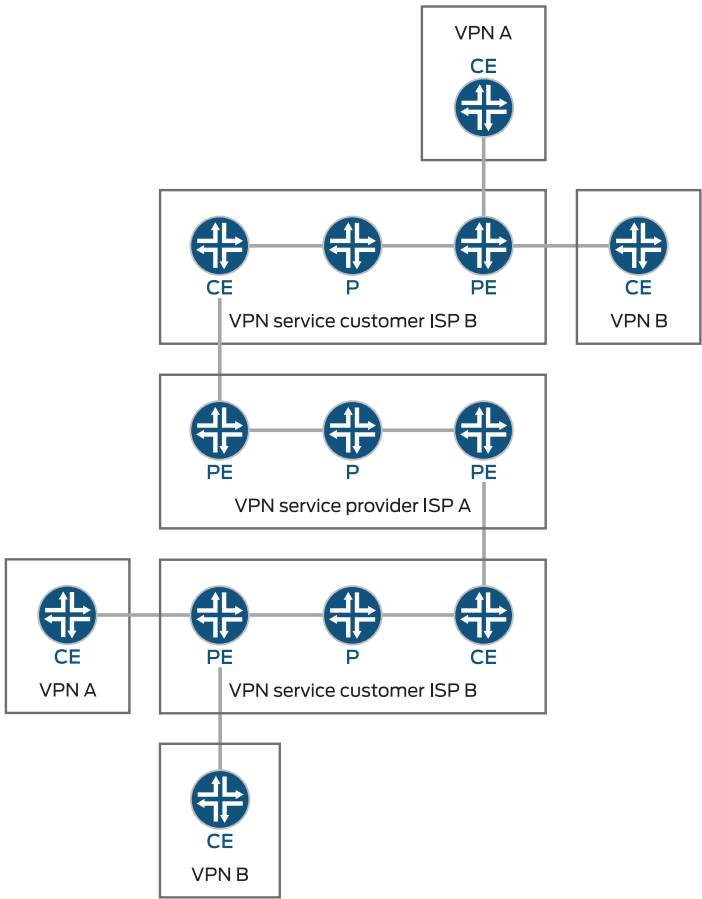

8017197

This topic covers the following:



## Internet Service Provider as the Customer

In this type of carrier-of-carriers VPN configuration, ISP A configures its network to provide Internet service to ISP B. ISP B provides the connection to the customer wanting Internet service, but the actual Internet service is provided by ISP A.

This type of carrier-of-carriers VPN configuration has the following characteristics:

- The carrier-of-carriers VPN service customer (ISP B) does not need to configure MPLS on its network.
- The carrier-of-carriers VPN service provider (ISP A) must configure MPLS on its network.
- MPLS must also be configured on the CE routers and PE routers connected together in the carrier-of-carriers VPN service customer's and carrier-of-carriers VPN service provider's networks.

## VPN Service Provider as the Customer

A VPN service provider can have customers that are themselves VPN service providers. In this type of configuration, also called a hierarchical or recursive VPN, the customer VPN service provider's VPN-IPv4 routes are considered external routes, and the backbone VPN service provider does not import them into its VRF table. The backbone VPN service provider imports only the customer VPN service provider's internal routes into its VRF table.

The similarities and differences between interprovider and carrier-of-carriers VPNs are shown in [Table 9 on page 509](#).

**Table 9: Comparison of Interprovider and Carrier-of-Carriers VPNs**

Feature	ISP Customer	VPN Service Provider Customer
Customer edge device	AS border router	PE router
IBGP sessions	Carry IPv4 routes	Carry external VPN-IPv4 routes with associated labels
Forwarding within the customer network	MPLS is optional	MPLS is required

Support for VPN service as the customer is supported on QFX10000 switches starting with Junos OS Release 17.1R1.

SEE ALSO



## Configuring Carrier-of-Carriers VPNs for Customers That Provide Internet Service

### IN THIS SECTION

- [Configuring the Carrier-of-Carriers VPN Service Customer's CE Router](#) | 510
- [Configuring the Carrier-of-Carriers VPN Service Provider's PE Routers](#) | 513

You can configure a carrier-of-carriers VPN service for customers who want to provide basic Internet service. The carrier-of-carriers VPN service provider must configure MPLS in its network, although this configuration is optional for the carrier service customer. [“Carrier-of-Carriers VPN Architecture” on page 508](#) shows how the routers or switches in this type of service interconnect.

To configure a carrier-of-carriers VPN, perform the tasks described in the following sections:

### Configuring the Carrier-of-Carriers VPN Service Customer's CE Router

#### IN THIS SECTION

- [Configuring MPLS](#) | 510
- [Configuring BGP](#) | 511
- [Configuring OSPF](#) | 512
- [Configuring Policy Options](#) | 512

The carrier-of-carriers VPN service customer's router (or switch) acts as a CE router with respect to the service provider's PE router or switch. The following sections describe how to configure the carrier-of-carriers VPN service customer's CE router or switch:

#### **Configuring MPLS**

To configure MPLS on the customer's CE router or switch, include the **mpls** statement:



```
mpls {
  traffic-engineering bgp-igp;
  interface interface-name;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring BGP

To configure a group to collate the customer's internal routes, include the **bgp** statement:

```
bgp {
  group group-name {
    type internal;
    local-address address;
    neighbor address;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

The customer's CE router (or switch) must be able to send labels to the VPN service provider's router. Enable this by including the **labeled-unicast** statement in the configuration for the BGP group:

```
bgp {
  group group-name {
    export internal;
    peer-as as-number;
    neighbor address {
      family inet {
        labeled-unicast;
      }
    }
  }
}
```



You can include the **bgp** statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring OSPF

To configure OSPF on the customer's CE router or switch, include the **ospf** statement:

```
ospf {
  area area-id {
    interface interface-name {
      passive;
    }
    interface interface-name;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring Policy Options

To configure policy options on the customer's CE router or switch, include the **policy-statement** statement:

```
policy-statement statement-name {
  term term-name {
    from protocol [ospf direct ldp];
    then accept;
  }
  term term-name {
    then reject;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit policy-options]
- [edit logical-systems *logical-system-name* policy-options]



## Configuring the Carrier-of-Carriers VPN Service Provider's PE Routers

### IN THIS SECTION

- [Configuring MPLS | 513](#)
- [Configuring BGP | 513](#)
- [Configuring IS-IS | 514](#)
- [Configuring LDP | 514](#)
- [Configuring a Routing Instance | 515](#)
- [Configuring Policy Options | 515](#)

The service provider's PE routers connect to the customer's CE routers and forward the customer's VPN traffic across the provider's network.

The following sections describe how to configure the carrier-of-carriers VPN service provider's PE routers:

### Configuring MPLS

To configure MPLS on the provider's PE routers or switches include the **mpls** statement:

```
mpls {  
    interface interface-name;  
    interface interface-name;  
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols]**
- **[edit logical-systems *logical-system-name* protocols]**

### Configuring BGP

To configure a BGP session with the provider PE router at the other end of the provider's network, include the **bgp** statement:

```
bgp {  
    group group-name {  
        type internal;  
        local-address address;  
        family inet-vpn {
```



```

        any;
    }
    neighbor address;
}

```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring IS-IS

To configure IS-IS on the provider's PE routers or switches, include the **isis** statement:

```

isis {
    interface interface-name;
    interface interface-name {
        passive;
    }
}

```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring LDP

To configure LDP on the provider's PE routers or switches, include the **ldp** statement:

```

ldp {
    interface interface-name;
}

```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]



### Configuring a Routing Instance

To configure Layer 3 VPN service with the customer's CE router or switch, include the **labeled-unicast** statement in the configuration for the routing instance so the PE router (or switch) can send labels to the customer's CE router or switch:

```

routing-instance-name {
  instance-type vrf;
  interface interface-name;
  route-distinguisher address;
  vrf-import policy-name;
  vrf-export policy-name;
  protocols {
    bgp {
      group group-name {
        peer-as as-number;
        neighbor address {
          family inet {
            labeled-unicast;
          }
        }
      }
    }
  }
}

```

You can include these statements at the following hierarchy levels:

- [edit routing-instances]
- [edit logical-systems *logical-system-name* routing-instances]

### Configuring Policy Options

To configure a policy statement to import routes from the customer's CE router or switch, include the **policy-statement** statement:

```

policy-statement policy-name {
  term term-name {
    from {
      protocol bgp;
      community community-name;
    }
    then accept;
  }
  term term-name {

```



```

        then reject;
    }
}

```

You can include this statement at the following hierarchy levels:

- **[edit policy-options]**
- **[edit logical-systems *logical-system-name* policy-options]**

To configure a policy statement to export routes to the customer's CE router or switch, include the **policy-statement** and **community** statements:

```

policy-statement policy-name {
    term term-name {
        from protocol bgp;
        then {
            community add community-name;
            accept;
        }
    }
    term term-name {
        then reject;
    }
}
community community-name members value;

```

You can include these statements at the following hierarchy levels:

- **[edit policy-options]**
- **[edit logical-systems *logical-system-name* policy-options]**

## SEE ALSO

*MPLS Feature Support on QFX Series and EX4600 Switches*

[Understanding Interprovider and Carrier-of-Carriers VPNs](#) | 400



## Carrier-of-Carriers VPN Example—Customer Provides Internet Service

### IN THIS SECTION

- [Network Topology for Carrier-of-Carriers Service | 517](#)
- [Configuration for Router A | 518](#)
- [Configuration for Router B | 518](#)
- [Configuration for Router C | 519](#)
- [Configuration for Router D | 520](#)
- [Configuration for Router E | 521](#)
- [Configuration for Router F | 523](#)
- [Configuration for Router G | 523](#)
- [Configuration for Router H | 524](#)
- [Configuration for Router I | 526](#)
- [Configuration for Router J | 527](#)
- [Configuration for Router K | 527](#)
- [Configuration for Router L | 529](#)

In this example, the carrier customer is not required to configure MPLS and LDP on its network. However, the carrier provider must configure MPLS and LDP on its network.

For configuration information see the following sections:


### Network Topology for Carrier-of-Carriers Service

A carrier-of-carriers service allows an Internet service provider (ISP) to connect to a transparent outsourced backbone at multiple locations.

[Figure 51 on page 518](#) shows the network topology in this carrier-of-carriers example.



Figure 51: Carrier-of-Carriers VPN Example Network Topology

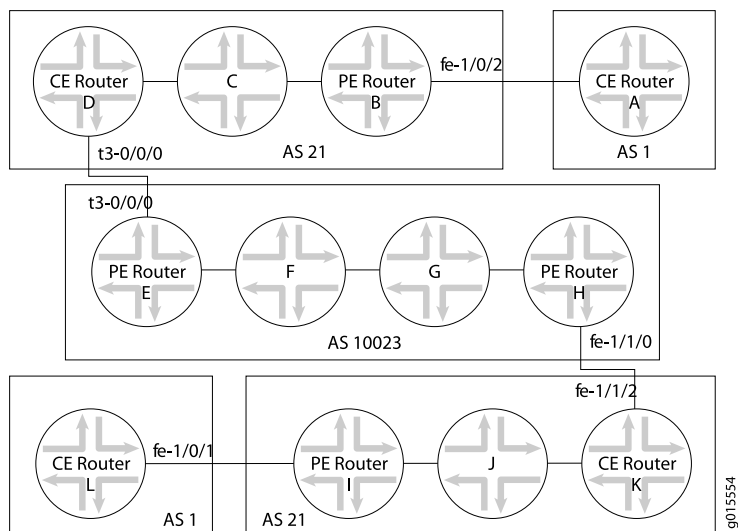

### Configuration for Router A

In this example, Router A represents an end customer. You configure this router as a CE device.

```
[edit]
protocols {
  bgp {
    group to-routerB {
      export attached;
      peer-as 21;
      as-override;
      neighbor 192.168.197.169;
    }
  }
}
policy-options {
  policy-statement attached {
    from protocol direct;
    then accept;
  }
}
```

### Configuration for Router B

Router B can act as the gateway router, responsible for aggregating end customers and connecting them to the network. If a full-mesh IBGP session is configured, you can use route reflectors.



```
[edit]
protocols {
  bgp {
    group int {
      type internal;
      local-address 10.255.14.179;
      neighbor 10.255.14.175;
      neighbor 10.255.14.181;
      neighbor 10.255.14.176;
      neighbor 10.255.14.178;
      neighbor 10.255.14.177;
    }
    group to-vpn-blue {
      peer-as 1;
      neighbor 192.168.197.170;
    }
  }
  ospf {
    area 0.0.0.0 {
      interface lo0.0 {
        passive;
      }
      interface fe-1/0/3.0;
      interface fe-1/0/2.0 {
        passive;
      }
    }
  }
}
```

## Configuration for Router C

Configure Router C:

```
[edit]
protocols {
  bgp {
    group int {
      type internal;
      local-address 10.255.14.176;
      neighbor 10.255.14.179;
      neighbor 10.255.14.175;
      neighbor 10.255.14.177;
```



```

        neighbor 10.255.14.178;
        neighbor 10.255.14.181;
    }
}
ospf {
    area 0.0.0.0 {
        interface lo0.0 {
            passive;
        }
        interface fe-0/3/3.0;
        interface fe-0/3/0.0;
    }
}
}

```

## Configuration for Router D

Router D is the CE router with respect to AS 10023. In a carrier-of-carriers VPN, the CE router must be able to send labels to the carrier provider; this is done with the **labeled-unicast** statement in group **to-isp-red**.

```

[edit]
protocols {
    mpls {
        interface t3-0/0/0.0;
    }
    bgp {
        group int {
            type internal;
            local-address 10.255.14.175;
            neighbor 10.255.14.179;
            neighbor 10.255.14.176;
            neighbor 10.255.14.177;
            neighbor 10.255.14.178;
            neighbor 10.255.14.181;
        }
        group to-isp-red {
            export internal;
            peer-as 10023;
            neighbor 192.168.197.13 {
                family inet {
                    labeled-unicast;
                }
            }
        }
    }
}

```



```

    }
  }
  ospf {
    area 0.0.0.0 {
      interface lo0.0 {
        passive;
      }
      interface fe-0/3/0.0;
      interface t3-0/0/0.0 {
        passive;
      }
    }
  }
}
policy options {
  policy-statement internal {
    term a {
      from protocol [ ospf direct ];
      then accept;
    }
    term b {
      then reject;
    }
  }
}

```

## Configuration for Router E

This configuration sets up the **inet-vpn** IBGP session with Router H and the PE router portion of the VPN with Router D. Because Router D is required to send labels in this example, configure the BGP session with the **labeled-unicast** statement within the virtual routing and forwarding (VRF) table.

```

[edit]
protocols {
  mpls {
    interface t3-0/2/0.0;
    interface at-0/1/0.0;
  }
  bgp {
    group pe-pe {
      type internal;
      local-address 10.255.14.171;
      family inet-vpn {

```



```

        any;
    }
    neighbor 10.255.14.173;
}
}
isis {
    interface at-0/1/0.0;
    interface lo0.0 {
        passive;
    }
}
ldp {
    interface at-0/1/0.0;
}
}
routing-instances {
    vpn-isp1 {
        instance-type vrf;
        interface t3-0/2/0.0;
        route-distinguisher 10.255.14.171:21;
        vrf-import vpn-isp1-import;
        vrf-export vpn-isp1-export;
        protocols {
            bgp {
                group to-isp1 {
                    peer-as 21;
                    neighbor 192.168.197.14 {
                        family inet {
                            labeled-unicast;
                        }
                    }
                }
            }
        }
    }
}
}
policy-options {
    policy-statement vpn-isp1-import {
        term a {
            from {
                protocol bgp;
                community vpn-isp1-comm;
            }
            then accept;
        }
    }
}

```



```

    }
    term b {
        then reject;
    }
}
policy-statement vpn-isp1-export {
    term a {
        from protocol bgp;
        then {
            community add vpn-isp1-comm;
            accept;
        }
    }
    term b {
        then reject;
    }
}
community vpn-isp1-comm members target:69:21;
}

```

### Configuration for Router F

Configure Router F to act as a label-swapping router:

```

[edit]
protocols {
    isis {
        interface so-0/2/0.0;
        interface at-0/3/0.0;
        interface lo0.0 {
            passive;
        }
    }
    ldp {
        interface so-0/2/0.0;
        interface at-0/3/0.0;
    }
}

```

### Configuration for Router G

Configure Router G to act as a label-swapping router:



```
[edit]
protocols {
  isis {
    interface so-0/0/0.0;
    interface so-1/0/0.0;
    interface lo0.0 {
      passive;
    }
  }
  ldp {
    interface so-0/0/0.0;
    interface so-1/0/0.0;
  }
}
```

## Configuration for Router H

Router H acts as the PE router for AS 10023. The configuration that follows is similar to that for Router F:

```
[edit]
protocols {
  mpls {
    interface fe-1/1/0.0;
    interface so-1/0/0.0;
  }
  bgp {
    group pe-pe {
      type internal;
      local-address 10.255.14.173;
      family inet-vpn {
        any;
      }
      neighbor 10.255.14.171;
    }
  }
  isis {
    interface so-1/0/0.0;
    interface lo0.0 {
      passive;
    }
  }
  ldp {
```



```

        interface so-1/0/0.0;
    }
}
routing-instances {
    vpn-isp1 {
        instance-type vrf;
        interface fe-1/1/0.0;
        route-distinguisher 10.255.14.173:21;
        vrf-import vpn-isp1-import;
        vrf-export vpn-isp1-export;
        protocols {
            bgp {
                group to-isp1 {
                    peer-as 21;
                    neighbor 192.168.197.94 {
                        family inet {
                            labeled-unicast;
                        }
                    }
                }
            }
        }
    }
}
policy-options {
    policy-statement vpn-isp1-import {
        term a {
            from {
                protocol bgp;
                community vpn-isp1-comm;
            }
            then accept;
        }
        term b {
            then reject;
        }
    }
    policy-statement vpn-isp1-export {
        term a {
            from protocol bgp;
            then {
                community add vpn-isp1-comm;
                accept;
            }
        }
    }
}

```



```

    }
    term b {
        then reject;
    }
}
community vpn-isp1-comm members target:69:21;
}

```

## Configuration for Router I

Configure Router I to connect to the basic Internet service customer (Router L):

```

[edit]
protocols {
  mpls {
    interface fe-1/0/1.0;
    interface fe-1/1/3.0;
  }
  bgp {
    group int {
      type internal;
      local-address 10.255.14.181;
      neighbor 10.255.14.177;
      neighbor 10.255.14.179;
      neighbor 10.255.14.175;
      neighbor 10.255.14.176;
      neighbor 10.255.14.178;
    }
    group to-vpn-green {
      peer-as 1;
      neighbor 192.168.197.198;
    }
  }
  ospf {
    area 0.0.0.0 {
      interface lo0.0 {
        passive;
      }
      interface fe-1/0/1.0 {
        passive;
      }
      interface fe-1/1/3.0;
    }
  }
}

```



```

    }
}

```

## Configuration for Router J

Configure Router J as a label-swapping router:

```

[edit]
protocols {
  bgp {
    group int {
      type internal;
      local-address 10.255.14.178;
      neighbor 10.255.14.177;
      neighbor 10.255.14.181;
      neighbor 10.255.14.175;
      neighbor 10.255.14.176;
      neighbor 10.255.14.179;
    }
  }
}
ospf {
  area 0.0.0.0 {
    interface lo0.0 {
      passive;
    }
    interface fe-1/0/2.0;
    interface fe-1/0/3.0;
  }
}

```

## Configuration for Router K

Router K acts as the CE router at the end of the connection to the carrier provider. As in the configuration for Router D, include the **labeled-unicast** statement for the EBGp session:

```

[edit]
protocols {
  mpls {
    interface fe-1/1/2.0;
    interface fe-1/0/2.0;
  }
}

```



```

}
bgp {
  group int {
    type internal;
    local-address 10.255.14.177;
    neighbor 10.255.14.181;
    neighbor 10.255.14.178;
    neighbor 10.255.14.175;
    neighbor 10.255.14.176;
    neighbor 10.255.14.179;
  }
  group to-isp-red {
    export internal;
    peer-as 10023;
    neighbor 192.168.197.93 {
      family inet {
        labeled-unicast;
      }
    }
  }
}
ospf {
  area 0.0.0.0 {
    interface lo0.0 {
      passive;
    }
    interface fe-1/0/2.0;
    interface fe-1/1/2.0 {
      passive;
    }
  }
}
policy-options {
  policy-statement internal {
    term a {
      from protocol [ ospf direct ];
      then accept;
    }
    term b {
      then reject;
    }
  }
}

```



## Configuration for Router L

Configure Router L to act as the end customer for the carrier-of-carriers VPN service:

```
[edit]
protocols {
  bgp {
    group to-routerl {
      export attached;
      peer-as 21;
      neighbor 192.168.197.197;
    }
  }
}
policy-options {
  policy-statement attached {
    from protocol direct;
    then accept;
  }
}
```

### SEE ALSO

*MPLS Feature Support on QFX Series and EX4600 Switches*

[Understanding Interprovider and Carrier-of-Carriers VPNs](#) | 400

## Configuring Carrier-of-Carriers VPNs for Customers That Provide VPN Service

### IN THIS SECTION

- [Configuring the Carrier-of-Carriers Customer's PE Router](#) | 530
- [Configuring the Carrier-of-Carriers Customer's CE Router \(or switch\)](#) | 533
- [Configuring the Provider's PE Router or Switch](#) | 536



You can configure a carrier-of-carriers VPN service for customers who want VPN service.

To configure the routers (or switches) in the customer's and provider's networks to enable carrier-of-carriers VPN service, perform the steps in the following sections:

## Configuring the Carrier-of-Carriers Customer's PE Router

### IN THIS SECTION

- [Configuring MPLS | 530](#)
- [Configuring BGP | 531](#)
- [Configuring OSPF | 531](#)
- [Configuring LDP | 532](#)
- [Configuring VPN Service in the Routing Instance | 532](#)
- [Configuring Policy Options | 532](#)

The carrier-of-carriers customer's PE router (or switch) is connected to the end customer's CE router (or switch).

The following sections describe how to configure the carrier-of-carriers customer's PE router (or switch):

### Configuring MPLS

To configure MPLS on the carrier-of-carriers customer's PE router (or switch), include the **mpls** statement:

```
mpls {  
  interface interface-name;  
  interface interface-name;  
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols]**
- **[edit logical-systems *logical-system-name* protocols]**



### Configuring BGP

Include the **labeled-unicast** statement in the configuration for the IBGP session to the carrier-of-carriers customer's CE router (or switch) ), and include the **family-inet-vpn** statement in the configuration for the IBGP session to the carrier-of-carriers PE router (or switch) on the other side of the network:

```

bgp {
  group group-name {
    type internal;
    local-address address;
    neighbor address {
      family inet {
        labeled-unicast;
        resolve-vpn;
      }
    }
  }
  neighbor address {
    family inet-vpn {
      any;
    }
  }
}

```

You can include these statements at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring OSPF

To configure OSPF on the carrier-of-carriers customer's PE router (or switch), include the **ospf** statement:

```

ospf {
  area area-id {
    interface interface-name {
      passive;
    }
    interface interface-name;
  }
}

```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]



### Configuring LDP

To configure LDP on the carrier-of-carriers customer's PE router (or switch), include the **ldp** statement:

```
ldp {
  interface interface-name;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring VPN Service in the Routing Instance

To configure VPN service for the end customer's CE router (or switch) on the carrier-of-carriers customer's PE router (or switch), include the following statements:

```
instance-type vrf;
interface interface-name;
route-distinguisher address;
vrf-import policy-name;
vrf-export policy-name;
protocols {
  bgp {
    group group-name {
      peer-as as-number;
      neighbor address;
    }
  }
}
```

You can include these statements at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

### Configuring Policy Options

To configure policy options to import and export routes to and from the end customer's CE router (or switch), include the **policy-statement** and **community** statements:

```
policy-statement policy-name {
  term term-name {
    from {
```



```

        protocol bgp;
        community community-name;
    }
    then accept;
}
term term-name {
    then reject;
}
}
policy-statement policy-name {
    term term-name {
        from protocol bgp;
        then {
            community add community-name;
            accept;
        }
    }
    term term-name {
        then reject;
    }
}
community community-name members value;

```

You can include these statements at the following hierarchy levels:

- [edit policy-options]
- [edit logical-systems *logical-system-name* policy-options]

## Configuring the Carrier-of-Carriers Customer's CE Router (or switch)

### IN THIS SECTION

- [Configuring MPLS | 534](#)
- [Configuring BGP | 534](#)
- [Configuring OSPF and LDP | 535](#)
- [Configuring Policy Options | 535](#)



The carrier-of-carriers customer's CE router (or switch) connects to the provider's PE router (or switch). Complete the instructions in the following sections to configure the carrier-of-carriers customers' CE router (or switch):

### Configuring MPLS

In the MPLS configuration for the carrier-of-carriers customer's CE router (or switch), include the interfaces to the provider's PE router (or switch) and to a P router (or switch) in the customer's network:

```
mpls {
  traffic-engineering bgp-igp;
  interface interface-name;
  interface interface-name;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring BGP

In the BGP configuration for the carrier-of-carriers customer's CE router (or switch), configure a group that includes the **labeled-unicast** statement to extend VPN service to the PE router (or switch) connected to the end customer's CE router (or switch):

```
bgp {
  group group-name {
    type internal;
    local-address address;
    neighbor address {
      family inet {
        labeled-unicast;
      }
    }
  }
}
```

You can include the **bgp** statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

To configure a group to send labeled internal routes to the provider's PE router (or switch), include the **bgp** statement:



```

bgp {
  group group-name {
    export internal;
    peer-as as-number;
    neighbor address {
      family inet {
        labeled-unicast;
      }
    }
  }
}

```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring OSPF and LDP

To configure OSPF and LDP on the carrier-of-carriers customer's CE router (or switch), include the **ospf** and **ldp** statements:

```

ospf {
  area area-id {
    interface interface-name {
      passive;
    }
    interface interface-name;
  }
}
ldp {
  interface interface-name;
}

```

You can include these statements at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring Policy Options

To configure the policy options on the carrier-of-carriers customer's CE router (or switch), include the **policy-statement** statement:



```

policy-statement policy-statement-name {
  term term-name {
    from protocol [ ospf direct ldp ];
    then accept;
  }
  term term-name {
    then reject;
  }
}

```

You can include this statement at the following hierarchy levels:

- [edit policy-options]
- [edit logical-systems *logical-system-name* policy-options]

## Configuring the Provider's PE Router or Switch

### IN THIS SECTION

- [Configuring MPLS | 536](#)
- [Configuring a PE-to-PE BGP Session | 537](#)
- [Configuring IS-IS and LDP | 537](#)
- [Configuring Policy Options | 538](#)
- [Configuring a Routing Instance to Send Routes to the CE Router | 538](#)

The carrier-of-carriers provider's PE routers (or switches) connect to the carrier customer's CE routers (or switches). Complete the instructions in the following sections to configure the provider's PE router (or switch):

### Configuring MPLS

In the MPLS configuration, specify at least two interfaces—one to the customer's CE router (or switch) and one to connect to the provider's PE router (or switch) on the other side of the provider's network:

```

interface interface-name;
interface interface-name;

```



You can include these statements at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

### Configuring a PE-to-PE BGP Session

To configure a PE-to-PE BGP session on the provider's PE routers (or switches) to allow VPN-IPv4 routes to pass between the PE routers (or switches), include the **bgp** statement:

```
bgp {
  group group-name {
    type internal;
    local-address address;
    family inet-vpn {
      any;
    }
    neighbor address;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Configuring IS-IS and LDP

To configure IS-IS and LDP on the provider's PE routers (or switches), include the **isis** and **ldp** statements:

```
isis {
  interface interface-name;
  interface interface-name {
    passive;
  }
}
ldp {
  interface interface-name;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]



### Configuring Policy Options

To configure policy statements on the provider's PE router (or switch) to export routes to and import routes from the carrier customer's network, include the **policy-statement** and **community** statements:

```

policy-statement statement-name {
  term term-name {
    from {
      protocol bgp;
      community community-name;
    }
    then accept;
  }
  term term-name {
    then reject;
  }
}
policy-statement statement-name {
  term term-name {
    from protocol bgp;
    then {
      community add community-name;
      accept;
    }
  }
  term term-name {
    then reject;
  }
}
community community-name members value;

```

You can include these statements at the following hierarchy levels:

- [edit **policy-options**]
- [edit **logical-systems** *logical-system-name* **policy-options**]

### Configuring a Routing Instance to Send Routes to the CE Router

To configure the routing instance on the provider's PE router (or switch) to send labeled routes to the carrier customer's CE router (or switch), include the following statements:

```

instance-type vrf;
interface interface-name;
route-distinguisher value;
vrf-import policy-name;

```



```

vrf-export policy-name;
protocols {
  bgp {
    group group-name {
      peer-as as-number;
      neighbor address {
        family inet {
          labeled-unicast;
        }
      }
    }
  }
}

```

You can include these statements at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

SEE ALSO

MPLS Feature Support on QFX Series and EX4600 Switches

[Understanding Interprovider and Carrier-of-Carriers VPNs | 400](#)

## Carrier-of-Carriers VPN Example—Customer Provides VPN Service

### IN THIS SECTION

- [Network Topology for Carrier-of-Carriers Service | 540](#)
- [Configuration for Router A | 541](#)
- [Configuration for Router B | 541](#)
- [Configuration for Router C | 543](#)
- [Configuration for Router D | 544](#)
- [Configuration for Router E | 545](#)
- [Configuration for Router F | 547](#)
- [Configuration for Router G | 547](#)



- Configuration for Router H | 548
- Configuration for Router I | 550
- Configuration for Router J | 552
- Configuration for Router K | 552
- Configuration for Router L | 554

In this example, the carrier customer *must* run some form of MPLS (Resource Reservation Protocol [RSVP] or LDP) on its network to provide VPN services to the end customer. In the example below, Router B and Router I act as PE routers (or switches), and a functioning MPLS path is required between these routers if they exchange VPN-IPv4 routes.


For configuration information see the following sections:

### Network Topology for Carrier-of-Carriers Service

A carrier-of-carriers service allows an Internet service provider (ISP) to connect to a transparent outsourced backbone at multiple locations.

Figure 52 on page 540 shows the network topology in this carrier-of-carriers example.

Figure 52: Carrier-of-Carriers VPN Example Network Topology

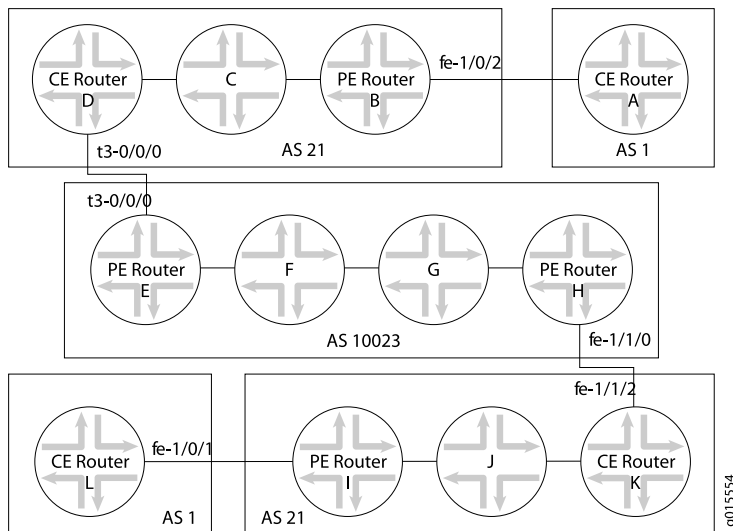



## Configuration for Router A

In this example, Router A acts as the CE router for the end customer. Configure a default **family inet** BGP session on Router A:

```
[edit]
protocols {
  bgp {
    group to-routerB {
      export attached;
      peer-as 21;
      neighbor 192.168.197.169;
    }
  }
}
policy-options {
  policy-statement attached {
    from protocol direct;
    then accept;
  }
}
```

## Configuration for Router B

Because Router B is the PE router for the end customer CE router (Router A), you need to configure a routing instance (**vpna**). Configure the **labeled-unicast** statement on the IBGP session to Router D, and configure **family-inet-vpn** for the IBGP session to the other side of the network with Router I:

```
[edit]
protocols {
  mpls {
    interface fe-1/0/2.0;
    interface fe-1/0/3.0;
  }
  bgp {
    group int {
      type internal;
      local-address 10.255.14.179;
      neighbor 10.255.14.175 {
        family inet {
          labeled-unicast {
            resolve-vpn;
          }
        }
      }
    }
  }
}
```



```

        }
    }
}
neighbor 10.255.14.181 {
    family inet-vpn {
        any;
    }
}
}
ospf {
    area 0.0.0.0 {
        interface lo0.0 {
            passive;
        }
        interface fe-1/0/3.0;
    }
}
ldp {
    interface fe-1/0/3.0;
}
}
routing-instances {
    vpna {
        instance-type vrf;
        interface fe-1/0/2.0;
        route-distinguisher 10.255.14.179:21;
        vrf-import vpna-import;
        vrf-export vpna-export;
        protocols {
            bgp {
                group vpna-06 {
                    peer-as 1;
                    neighbor 192.168.197.170;
                }
            }
        }
    }
}
policy-options {
    policy-statement vpna-import {
        term a {
            from {
                protocol bgp;
                community vpna-comm;
            }
        }
    }
}

```



```

    }
    then accept;
  }
  term b {
    then reject;
  }
}
policy-statement vpna-export {
  term a {
    from protocol bgp;
    then {
      community add vpna-comm;
      accept;
    }
  }
  term b {
    then reject;
  }
}
community vpna-comm members target:100:1001;
}

```

## Configuration for Router C

Configure Router C as a label-swapping router within the local AS:

```

[edit]
protocols {
  mpls {
    traffic-engineering bgp-igp;
  }
  ospf {
    area 0.0.0.0 {
      interface lo0.0 {
        passive;
      }
      interface fe-0/3/3.0;
      interface fe-0/3/0.0;
    }
  }
  ldp {
    interface fe-0/3/0.0;
    interface fe-0/3/3.0;
  }
}

```



```

    }
}

```

## Configuration for Router D

Router D acts as the CE router for the VPN services provided by the AS 10023 network. In the BGP group configuration for group **int**, which handles traffic to Router B (10.255.14.179), you include the **labeled-unicast** statement. You also need to configure the BGP group **to-isp-red** to send labeled internal routes to the PE router (Router E).

```

[edit]
protocols {
  mpls {
    traffic-engineering bgp-igp;
    interface fe-0/3/0.0;
    interface t3-0/0/0.0;
  }
  bgp {
    group int {
      type internal;
      local-address 10.255.14.175;
      neighbor 10.255.14.179 {
        family inet {
          labeled-unicast;
        }
      }
    }
    group to-isp-red {
      export internal;
      peer-as 10023;
      neighbor 192.168.197.13 {
        family inet {
          labeled-unicast;
        }
      }
    }
  }
  ospf {
    area 0.0.0.0 {
      interface lo0.0 {
        passive;
      }
      interface fe-0/3/0.0;
    }
  }
}

```



```

    }
  }
  ldp {
    interface fe-0/3/0.0;
  }
}
policy-options {
  policy-statement internal {
    term a {
      from protocol [ ospf direct ];
      then accept;
    }
    term b {
      then reject;
    }
  }
}
}

```

### Configuration for Router E

Router E and Router H are PE routers. Configure a PE-router-to-PE-router BGP session to allow VPN-IPv4 routes to pass between these two PE routers. Configure the routing instance on Router E to send labeled routes to the CE router (Router D).

Configure Router E:

```

[edit]
protocols {
  mpls {
    interface t3-0/2/0.0;
    interface at-0/1/0.0;
  }
  bgp {
    group pe-pe {
      type internal;
      local-address 10.255.14.171;
      family inet-vpn {
        any;
      }
      neighbor 10.255.14.173;
    }
  }
  isis {

```



```

    interface at-0/1/0.0;
    interface lo0.0 {
        passive;
    }
}
ldp {
    interface at-0/1/0.0;
}
}
policy-options {
    policy-statement vpn-isp1-import {
        term a {
            from {
                protocol bgp;
                community vpn-isp1-comm;
            }
            then accept;
        }
        term b {
            then reject;
        }
    }
    policy-statement vpn-isp1-export {
        term a {
            from protocol bgp;
            then {
                community add vpn-isp1-comm;
                accept;
            }
        }
        term b {
            then reject;
        }
    }
    community vpn-isp1-comm members target:69:21;
}
routing-instances {
    vpn-isp1 {
        instance-type vrf;
        interface t3-0/2/0.0;
        route-distinguisher 10.255.14.171:21;
        vrf-import vpn-isp1-import;
        vrf-export vpn-isp1-export;
        protocols {

```



```

    bgp {
      group to-isp1 {
        peer-as 21;
        neighbor 192.168.197.14 {
          as-override;
          family inet {
            labeled-unicast;
          }
        }
      }
    }
  }
}

```

## Configuration for Router F

Configure Router F to swap labels for routes running through its interfaces:

```

[edit]
protocols {
  isis {
    interface so-0/2/0.0;
    interface at-0/3/0.0;
    interface lo0.0 {
      passive;
    }
  }
  ldp {
    interface so-0/2/0.0;
    interface at-0/3/0.0;
  }
}

```

## Configuration for Router G

Configure Router G:

```

[edit]
protocols {
  isis {

```



```

interface so-0/0/0.0;
interface so-1/0/0.0;
interface lo0.0 {
    passive;
}
}
ldp {
    interface so-0/0/0.0;
    interface so-1/0/0.0;
}
}

```

## Configuration for Router H

The configuration for Router H is similar to the configuration for Router E:

```

[edit]
protocols {
    mpls {
        interface fe-1/1/0.0;
        interface so-1/0/0.0;
    }
    bgp {
        group pe-pe {
            type internal;
            local-address 10.255.14.173;
            family inet-vpn {
                any;
            }
            neighbor 10.255.14.171;
        }
    }
    isis {
        interface so-1/0/0.0;
        interface lo0.0 {
            passive;
        }
    }
    ldp {
        interface so-1/0/0.0;
    }
}
routing-instances {

```



```

vpn-isp1 {
  instance-type vrf;
  interface fe-1/1/0.0;
  route-distinguisher 10.255.14.173:21;
  vrf-import vpn-isp1-import;
  vrf-export vpn-isp1-export;
  protocols {
    bgp {
      group to-isp1 {
        peer-as 21;
        neighbor 192.168.197.94 {
          as-override;
          family inet {
            labeled-unicast;
          }
        }
      }
    }
  }
}

policy-options {
  policy-statement vpn-isp1-import {
    term a {
      from {
        protocol bgp;
        community vpn-isp1-comm;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
  policy-statement vpn-isp1-export {
    term a {
      from protocol bgp;
      then {
        community add vpn-isp1-comm;
        accept;
      }
    }
    term b {
      then reject;
    }
  }
}

```



```

    }
  }
  community vpn-isp1-comm members target:69:21;
}

```

## Configuration for Router I

Router I acts as the PE router for the end customer. The configuration that follows is similar to the configuration for Router B:

```

[edit]
protocols {
  mpls {
    interface fe-1/0/1.0;
    interface fe-1/1/3.0;
  }
  bgp {
    group int {
      type internal;
      local-address 10.255.14.181;
      neighbor 10.255.14.177 {
        family inet {
          labeled-unicast {
            resolve-vpn;
          }
        }
      }
    }
    neighbor 10.255.14.179 {
      family inet-vpn {
        any;
      }
    }
  }
  ospf {
    area 0.0.0.0 {
      interface lo0.0 {
        passive;
      }
      interface fe-1/1/3.0;
    }
  }
  ldp {

```



```

        interface fe-1/1/3.0;
    }
}
routing-instances {
    vpn {
        instance-type vrf;
        interface fe-1/0/1.0;
        route-distinguisher 10.255.14.181:21;
        vrf-import vpn-import;
        vrf-export vpn-export;
        protocols {
            bgp {
                group vpn-0 {
                    peer-as 1;
                    neighbor 192.168.197.198;
                }
            }
        }
    }
}
policy-options {
    policy-statement vpn-import {
        term a {
            from {
                protocol bgp;
                community vpn-comm;
            }
            then accept;
        }
        term b {
            then reject;
        }
    }
    policy-statement vpn-export {
        term a {
            from protocol bgp;
            then {
                community add vpn-comm;
                accept;
            }
        }
        term b {
            then reject;
        }
    }
}

```



```

    }
    community vpna-comm members target:100:1001;
}

```

## Configuration for Router J

Configure Router J to swap labels for routes running through its interfaces:

```

[edit]
protocols {
  mpls {
    traffic-engineering bgp-igp;
  }
  ospf {
    area 0.0.0.0 {
      interface lo0.0 {
        passive;
      }
      interface fe-1/0/2.0;
      interface fe-1/0/3.0;
    }
  }
  ldp {
    interface fe-1/0/2.0;
    interface fe-1/0/3.0;
  }
}

```

## Configuration for Router K

The configuration for Router K is similar to the configuration for Router D:

```

[edit]
protocols {
  mpls {
    traffic-engineering bgp-igp;
    interface fe-1/1/2.0;
    interface fe-1/0/2.0;
  }
  bgp {
    group int {

```



```

    type internal;
    local-address 10.255.14.177;
    neighbor 10.255.14.181 {
        family inet {
            labeled-unicast;
        }
    }
}
group to-isp-red {
    export internal;
    peer-as 10023;
    neighbor 192.168.197.93 {
        family inet {
            labeled-unicast;
        }
    }
}
}
ospf {
    area 0.0.0.0 {
        interface lo0.0 {
            passive;
        }
        interface fe-1/0/2.0;
    }
}
ldp {
    interface fe-1/0/2.0;
}
}
policy-options {
    policy-statement internal {
        term a {
            from protocol [ ospf direct ];
            then accept;
        }
        term b {
            then reject;
        }
    }
}
}

```



## Configuration for Router L

In this example, Router L is the end customer's CE router. Configure a default family **inet** BGP session on Router L:

```
[edit]
protocols {
  bgp {
    group to-l {
      export attached;
      peer-as 21;
      neighbor 192.168.197.197;
    }
  }
}
policy-options {
  policy-statement attached {
    from protocol direct;
    then accept;
  }
}
```

### SEE ALSO

*MPLS Feature Support on QFX Series and EX4600 Switches*

[Understanding Interprovider and Carrier-of-Carriers VPNs | 400](#)

## Multiple Instances for LDP and Carrier-of-Carriers VPNs

By configuring multiple LDP routing instances, you can use LDP to advertise labels in a carrier-of-carriers VPN from a core provider PE router to a customer carrier CE router. Having LDP advertise labels in this manner is especially useful when the carrier customer is a basic ISP and wants to restrict full Internet routes to its PE routers. By using LDP instead of BGP, the carrier customer shields its other internal routers from the Internet at large. Multiple-instance LDP is also useful when a carrier customer wants to provide Layer 3 VPN or Layer 2 VPN services to its customers.

For an example of how to configure multiple LDP routing instances for carrier-of-carriers VPNs, see the *Junos User Guide* on the product documentation page of the Juniper Networks website, located at <https://www.juniper.net/>.



## SEE ALSO

*MPLS Feature Support on QFX Series and EX4600 Switches*

[Understanding Interprovider and Carrier-of-Carriers VPNs](#) | 400



# 4

CHAPTER

## Multicast on Layer 3 VPNs

---

Multicast on Layer 3 VPNs | **559**

MVPN Route Distribution | **684**

Resiliency in Multicast L3 VPNs with Redundant Virtual Tunnels | **719**

MVPN VRF Import and Export Policies | **756**

Configuring Provider Tunnels in MVPNs | **761**

---







# Multicast on Layer 3 VPNs

## IN THIS SECTION

- [Understanding MVPN Concepts and Protocols | 559](#)
- [Supported Multicast VPN Standards | 563](#)
- [Configuring Multicast Layer 3 VPNs | 564](#)
- [Example: Configuring PIM Join Load Balancing on Draft-Rosen Multicast VPN | 565](#)
- [MBGP Multicast VPN Sites | 576](#)
- [Example: Configuring MBGP Multicast VPNs | 577](#)
- [Configuring Point-to-Multipoint LSPs for an MBGP MVPN | 601](#)
- [Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview | 608](#)
- [Configuring Segmented Inter-Area P2MP LSP | 610](#)
- [Example: Configuring Segmented Inter-Area P2MP LSP | 613](#)

You can configure multicast routing over a network running a Layer 3 VPN that complies with RFC 4364. This topic provides an overview of multicast and describes configuring devices to support multicast traffic in a Layer 3 VPN.

## Understanding MVPN Concepts and Protocols

### Multicast over Layer 3 VPNs Overview

In the unicast environment for Layer 3 VPNs, all VPN state information is contained within the PE routers. However, with multicast for Layer 3 VPNs, Protocol Independent Multicast (PIM) adjacencies are established in one of the following ways:

- You can set PIM adjacencies between the CE router and the PE router through a VRF instance at the `[edit routing-instances instance-name protocols pim]` hierarchy level. You must include the **group-address** statement for the provider tunnel, specifying a multicast group. The rendezvous point (RP) listed within the VRF-instance is the VPN customer RP (C-RP).
- You can also set the master PIM instance and the PE's IGP neighbors by configuring statements at the `[edit protocols pim]` hierarchy level. You must add the multicast group specified in the VRF instance to the master PIM instance. The set of master PIM adjacencies throughout the service provider network



makes up the forwarding path that becomes an RP tree rooted at the service provider RP (SP-RP). Therefore, P routers within the provider core must maintain multicast state information for the VPNs.

For this to work properly, you need two types of RP routers for each VPN:

- A C-RP—An RP router located somewhere within the VPN (can be either a service provider router or a customer router).
- An SP-RP—An RP router located within the service provider network.

**NOTE:** A PE router can act as the SP-RP and the C-RP. Moving these multicast configuration tasks to service provider routers helps to simplify the multicast Layer 3 VPN configuration process for customers. However, configuration of both SP-RP and VPN C-RP on the same PE router is not supported.

To configure multicast over a Layer 3 VPN, you must install a Tunnel Services Physical Interface Card (PIC) on the following devices:

- P routers acting as RPs
- PE routers configured to run multicast routing
- CE routers acting as designated routers or as VPN-RPs


For more information about running multicast over Layer 3 VPNs, see the following documents:

- Internet draft draft-rosen-vpn-mcast-02.txt, *Multicast in MPLS/BGP VPNs*
- *Multicast Protocols User Guide*

The sections that follow describe the operation of a multicast VPN. [Figure 53 on page 561](#) illustrates the network topology used.



Figure 53: Multicast Topology Overview

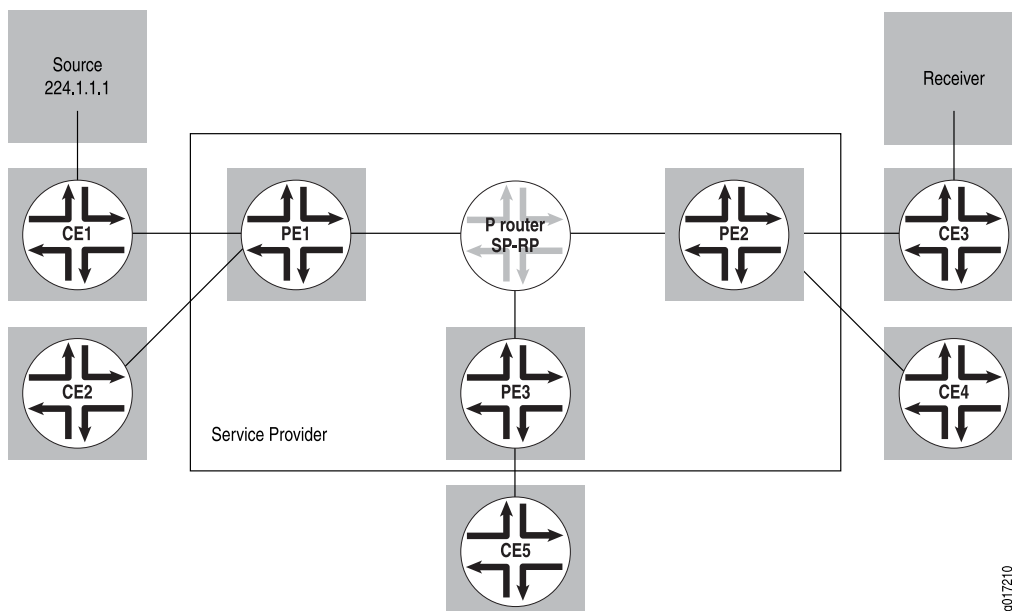

### Sending PIM Hello Messages to the PE Routers

The first step in initializing multicast over a Layer 3 VPN is the distribution of a PIM Hello message from a PE router (called PE3 in this section) to all the other PE routers on which PIM is configured.

You configure PIM on the Layer 3 VPN routing instance on the PE3 router. If a Tunnel Services PIC is installed in the routing platform, a multicast interface is created. This interface is used to communicate between the PIM instance within the VRF routing instance and the master PIM instance.

The following occurs when a PIM Hello message is sent to the PE routers:

1. A PIM Hello message is sent from the VRF routing instance over the multicast interface. A generic routing encapsulation (GRE) header is prepended to the PIM Hello message. The header message includes the VPN group address and the loopback address of the PE3 router.
2. A PIM register header is prepended to the Hello message as the packet is looped through the PIM encapsulation interface. This header contains the destination address of the SP-RP and the loopback address of the PE3 router.
3. The packet is sent to the SP-RP.
4. The SP-RP removes the top header from the packet and sends the remaining GRE-encapsulated Hello message to all the PE routers.
5. The master PIM instance on each PE router handles the GRE encapsulated packet. Because the VPN group address is contained in the packet, the master instance removes the GRE header from the packet and sends the Hello message, which contains the proper VPN group address within the VRF routing instance, over the multicast interface.



## Sending PIM Join Messages to the PE Routers

To receive a multicast broadcast from a multicast network, a CE router must send a PIM Join message to the C-RP. The process described in this section refers to [Figure 53 on page 561](#).

The CE5 router needs to receive a multicast broadcast from multicast source 224.1.1.1. To receive the broadcast, it sends a PIM Join message to the C-RP (the PE3 router):

1. The PIM Join message is sent through the multicast interface, and a GRE header is prepended to the message. The GRE header contains the VPN group ID and the loopback address of the PE3 router.
2. The PIM Join message is then sent through the PIM encapsulation interface and a register header is prepended to the packet. The register header contains the IP address of the SP-RP and the loopback address of the PE3 router.
3. The PIM Join message is sent to the SP-RP by means of unicast routing.
4. On the SP-RP, the register header is stripped off (the GRE header remains) and the packet is sent to all the PE routers.
5. The PE2 router receives the packet, and because the link to the C-RP is through the PE2 router, it sends the packet through the multicast interface to remove the GRE header.
6. Finally, the PIM Join message is sent to the C-RP.

## Receiving the Multicast Transmission

The steps that follow outline how a multicast transmission is propagated across the network:

1. The multicast source connected to the CE1 router sends the packet to group 224.1.1.1 (the VPN group address). The packet is encapsulated into a PIM register.
2. Because this packet already includes the PIM header, it is forwarded by means of unicast routing to the C-RP over the Layer 3 VPN.
3. The C-RP removes the packet and sends it out the downstream interfaces (which include the interface back to the CE3 router). The CE3 router also forwards this to the PE3 router.
4. The packet is sent through the multicast interface on the PE2 router; in the process, the GRE header is prepended to the packet.
5. Next, the packet is sent through the PIM encapsulation interface, where the register header is prepended to the data packet.
6. The packet is then forwarded to the SP-RP, which removes the register header, leaves the GRE header intact, and sends the packet to the PE routers.
7. PE routers remove the GRE header and forward the packet to the CE routers that requested the multicast broadcast by sending the PIM Join message.



**NOTE:** PE routers that have not received requests for multicast broadcasts from their connected CE routers still receive packets for the broadcast. These PE routers drop the packets as they are received.

# Supported Multicast VPN Standards

Junos OS substantially supports the following RFCs and Internet draft, which define standards for multicast virtual private networks (VPNs).

- RFC 6513, *Multicast in MPLS/BGP IP VPNs*
- RFC 6514, *BGP Encodings and Procedures for Multicast in MPLS/BGP IP VPNs*
- RFC 6515, *IPv4 and IPv6 Infrastructure Addresses in BGP Updates for Multicast VPN*
- RFC 6625, *Wildcards in Multicast VPN Auto-Discovery Routes*
- Internet draft draft-morin-l3vpn-mvpn-fast-failover-06.txt, *Multicast VPN Fast Upstream Failover*
- Internet draft draft-raggarwa-l3vpn-bgp-mvpn-extranet-08.txt, *Extranet in BGP Multicast VPN (MVPN)*

## SEE ALSO

[Supported Carrier-of-Carriers and Interprovider VPN Standards | 402](#)

[Supported VPWS Standards](#)

[Supported Layer 2 VPN Standards](#)

[Supported Layer 3 VPN Standards | 41](#)

[Supported VPLS Standards](#)

[Supported MPLS Standards](#)

[Supported Standards for BGP](#)

[Accessing Standards Documents on the Internet](#)



## Configuring Multicast Layer 3 VPNs

You can configure two types of multicast Layer 3 VPNs using the Junos OS:

- Draft Rosen multicast VPNs—Draft Rosen multicast VPNs are described in RFC 4364, *BGP/MPLS IP Virtual Private Networks (VPNs)* and based on Section Two of the IETF Internet draft draft-rosen-vpn-mcast-06.txt, *Multicast in MPLS/BGP VPNs* (expired April 2004).
- Next generation multicast VPNs—Next generation multicast VPNs are described in Internet drafts draft-ietf-l3vpn-2547bis-mcast-bgp-03.txt, *BGP Encodings for Multicast in MPLS/BGP IP VPNs* and draft-ietf-l3vpn-2547bis-mcast-02.txt, *Multicast in MPLS/BGP IP VPNs*.

This section describes how to configure draft Rosen multicast VPNs. This information is provided to you in case you already have dual PIM multicast VPNs configured on your network. For information about BGP MPLS multicast VPNs (also known as next generation multicast VPNs), see [“MBGP Multicast VPN Sites” on page 576](#).

**NOTE:** Draft-rosen multicast VPNs are not supported in a logical system environment even though the configuration statements can be configured under the logical-systems hierarchy.

You can configure a Layer 3 VPN to support multicast traffic using the Protocol Independent Multicast (PIM) routing protocol. To support multicast, you need to configure PIM on routers within the VPN and within the service provider's network.

Each PE router configured to run multicast over Layer 3 VPNs must have a Tunnel Services PIC. A Tunnel Services PIC is also required on the P routers that act as rendezvous points (RPs). Tunnel Services PICs are also needed on all the CE routers acting as designated routers (first-hop/last-hop routers) or as RPs, just as they are in non-VPN PIM environments.

Configure the master PIM instance at the **[edit protocols pim]** hierarchy level on the CE and PE routers. This master PIM instance configuration on the PE router should match the configuration on the service providers core routers.

You also need to configure a PIM instance for the Layer 3 VPN at the **[edit routing-instances routing-instance-name protocols pim]** hierarchy level on the PE router. This creates a PIM instance for the indicated routing instance. The configuration of the PIM instance on the PE router should match the PIM instance configured on the CE router the PE router is connected to.

For information about how to configure PIM, see the *Multicast Protocols User Guide* .

Include the **vpn-apply-export** statement to configure the group address designated for the VPN in the service provider's network. This address must be unique for each VPN and configured on the VRF routing instance of all PE routers connecting to the same VPN. It ensures that multicast traffic is transmitted only to the specified VPN.



Include the **vpn-apply-export** statement:

```
vpn-apply-export address;
```

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols pim]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols pim]

The rest of the Layer 3 VPN configuration for multicast is conventional and is described in other sections of this manual. Most of the specific configuration tasks needed to activate multicast in a VPN environment involve PIM.

SEE ALSO

| *Multicast Protocols User Guide*

## Example: Configuring PIM Join Load Balancing on Draft-Rosen Multicast VPN

### IN THIS SECTION

- Requirements | 566
- Overview and Topology | 566
- Configuration | 570
- Verification | 574

This example shows how to configure multipath routing for external and internal virtual private network (VPN) routes with unequal interior gateway protocol (IGP) metrics, and Protocol Independent Multicast (PIM) join load balancing on provider edge (PE) routers running Draft-Rosen multicast VPN (MVPN). This feature allows customer PIM (C-PIM) join messages to be load-balanced across external and internal BGP (EIBGP) upstream paths when the PE router has both external BGP (EBGP) and internal BGP (IBGP) paths toward the source or rendezvous point (RP).



## Requirements

This example requires the following hardware and software components:

- Three routers that can be a combination of M Series Multiservice Edge Routers, MX Series 5G Universal Routing Platforms, or T Series Core Routers.
- Junos OS Release 12.1 or later running on all the devices.

Before you begin:

1. Configure the device interfaces.
2. Configure the following routing protocols on all PE routers:
  - OSPF
  - MPLS
  - LDP
  - PIM
  - BGP
3. Configure a multicast VPN.

## Overview and Topology

Junos OS Release 12.1 and later support multipath configuration along with PIM join load balancing. This allows C-PIM join messages to be load-balanced across unequal EIBGP routes, if a PE router has EBGp and IBGP paths toward the source (or RP). In previous releases, only the active EBGp path was used to send the join messages. This feature is applicable to IPv4 C-PIM join messages.

During load balancing, if a PE router loses one or more EBGp paths toward the source (or RP), the C-PIM join messages that were previously using the EBGp path are moved to a multicast tunnel interface, and the reverse path forwarding (RPF) neighbor on the multicast tunnel interface is selected based on a hash mechanism.

On discovering the first EBGp path toward the source (or RP), only the new join messages get load-balanced across EIBGP paths, whereas the existing join messages on the multicast tunnel interface remain unaffected.

Though the primary goal for multipath PIM join load balancing is to utilize unequal EIBGP paths for multicast traffic, potential join loops can be avoided if a PE router chooses only the EBGp path when there are one or more join messages for different groups from a remote PE router. If the remote PE router's join message arrives after the PE router has already chosen IBGP as the upstream path, then the potential loops can be broken by changing the selected upstream path to EBGp.



**NOTE:** During a graceful Routing Engine switchover (GRES), the EIBGP path selection for C-PIM join messages can vary, because the upstream interface selection is performed again for the new Routing Engine based on the join messages it receives from the CE and PE neighbors. This can lead to disruption of multicast traffic depending on the number of join messages received and the load on the network at the time of the graceful restart. However, the nonstop active routing feature is not supported and has no impact on the multicast traffic in a Draft-Rosen MVPN scenario.

In this example, PE1 and PE2 are the upstream PE routers for which the multipath PIM join load-balancing feature is configured. Routers PE1 and PE2 have one EBGp path and one IBGP path each toward the source. The Source and Receiver attached to customer edge (CE) routers are Free BSD hosts.

On PE routers that have EIBGP paths toward the source (or RP), such as PE1 and PE2, PIM join load balancing is performed as follows:

1. The existing join-count-based load balancing is performed such that the algorithm first selects the least loaded C-PIM interface. If there is equal or no load on all the C-PIM interfaces, the join messages get distributed equally across the available upstream interfaces.

In [Figure 54 on page 570](#), if the PE1 router receives PIM join messages from the CE2 router, and if there is equal or no load on both the EBGp and IBGP paths toward the source, the join messages get load-balanced on the EIBGP paths.

2. If the selected least loaded interface is a multicast tunnel interface, then there can be a potential join loop if the downstream list of the customer join (C-join) message already contains the multicast tunnel interface. In such a case, the least loaded interface among EBGp paths is selected as the upstream interface for the C-join message.

Assuming that the IBGP path is the least loaded, the PE1 router sends the join messages to PE2 using the IBGP path. If PIM join messages from the PE3 router arrive on PE1, then the downstream list of the C-join messages for PE3 already contains a multicast tunnel interface, which can lead to a potential join loop, because both the upstream and downstream interfaces are multicast tunnel interfaces. In this case, PE1 uses only the EBGp path to send the join messages.

3. If the selected least loaded interface is a multicast tunnel interface and the multicast tunnel interface is not present in the downstream list of the C-join messages, the loop prevention mechanism is not necessary. If any PE router has already advertised data multicast distribution tree (MDT) type, length, and values (TLVs), that PE router is selected as the upstream neighbor.



When the PE1 router sends the join messages to PE2 using the least loaded IBGP path, and if PE3 sends its join messages to PE2, no join loop is created.

4. If no data MDT TLV corresponds to the C-join message, the least loaded neighbor on a multicast tunnel interface is selected as the upstream interface.

On PE routers that have only IBGP paths toward the source (or RP), such as PE3, PIM join load balancing is performed as follows:

1. The PE router only finds a multicast tunnel interface as the RPF interface, and load balancing is done across the C-PIM neighbors on a multicast tunnel interface.

Router PE3 load-balances PIM join messages received from the CE4 router across the IBGP paths to the PE1 and PE2 routers.

2. If any PE router has already advertised data MDT TLVs corresponding to the C-join messages, that PE router is selected as the RPF neighbor.

For a particular C-multicast flow, at least one of the PE routers having EIBGP paths toward the source (or RP) must use only the EIBGP path to avoid or break join loops. As a result of the loop avoidance mechanism, a PE router is constrained to choose among EIBGP paths when a multicast tunnel interface is already present in the downstream list.

In [Figure 54 on page 570](#), assuming that the CE2 host is interested in receiving traffic from the Source and CE2 initiates multiple PIM join messages for different groups (Group 1 with group address 203.0.113.1, and Group 2 with group address 203.0.113.2), the join messages for both groups arrive on the PE1 router.

Router PE1 then equally distributes the join messages between the EIBGP paths toward the Source. Assuming that Group 1 join messages are sent to the CE1 router directly using the EIBGP path, and Group 2 join messages are sent to the PE2 router using the IBGP path, PE1 and PE2 become the RPF neighbors for Group 1 and Group 2 join messages, respectively.

When the CE3 router initiates Group 1 and Group 2 PIM join messages, the join messages for both groups arrive on the PE2 router. Router PE2 then equally distributes the join messages between the EIBGP paths toward the Source. Since PE2 is the RPF neighbor for Group 2 join messages, it sends the Group 2 join messages directly to the CE1 router using the EIBGP path. Group 1 join messages are sent to the PE1 router using the IBGP path.

However, if the CE4 router initiates multiple Group 1 and Group 2 PIM join messages, there is no control over how these join messages received on the PE3 router get distributed to reach the Source. The selection of the RPF neighbor by PE3 can affect PIM join load balancing on EIBGP paths.

- If PE3 sends Group 1 join messages to PE1 and Group 2 join messages to PE2, there is no change in RPF neighbor. As a result, no join loops are created.



- If PE3 sends Group 1 join messages to PE2 and Group 2 join messages to PE1, there is a change in the RPF neighbor for the different groups resulting in the creation of join loops. To avoid potential join loops, PE1 and PE2 do not consider IBGP paths to send the join messages received from the PE3 router. Instead, the join messages are sent directly to the CE1 router using only the EBGp path.


The loop avoidance mechanism in a Draft-Rosen MVPN has the following limitations:

- Because the timing of arrival of join messages on remote PE routers determines the distribution of join messages, the distribution could be sub-optimal in terms of join count.
- Because join loops cannot be avoided and can occur due to the timing of join messages, the subsequent RPF interface change leads to loss of multicast traffic. This can be avoided by implementing the PIM make-before-break feature.

The PIM make-before-break feature is an approach to detect and break C-PIM join loops in a Draft-Rosen MVPN. The C-PIM join messages are sent to the new RPF neighbor after establishing the PIM neighbor relationship, but before updating the related multicast forwarding entry. Though the upstream RPF neighbor would have updated its multicast forwarding entry and started sending the multicast traffic downstream, the downstream router does not forward the multicast traffic (because of RPF check failure) until the multicast forwarding entry is updated with the new RPF neighbor. This helps to ensure that the multicast traffic is available on the new path before switching the RPF interface of the multicast forwarding entry.



Figure 54: PIM Join Load Balancing on Draft-Rosen MVPN

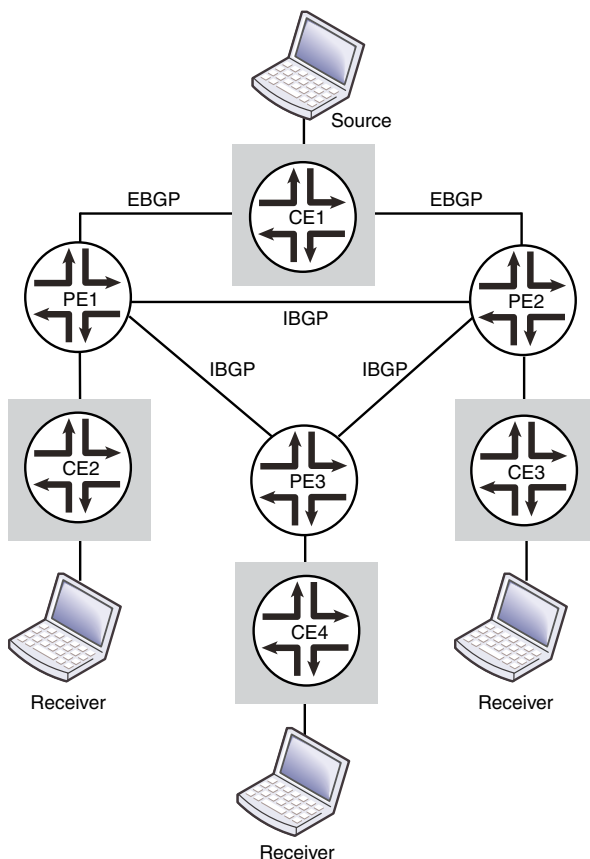

g040919

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### PE1

```
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-5/0/4.0
set routing-instances vpn1 interface ge-5/2/0.0
set routing-instances vpn1 interface lo0.1
set routing-instances vpn1 route-distinguisher 1:1
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 routing-options multipath vpn-unequal-cost equal-external-internal
```



```

set routing-instances vpn1 protocols bgp export direct
set routing-instances vpn1 protocols bgp group bgp type external
set routing-instances vpn1 protocols bgp group bgp local-address 192.0.2.4
set routing-instances vpn1 protocols bgp group bgp family inet unicast
set routing-instances vpn1 protocols bgp group bgp neighbor 192.0.2.5 peer-as 3
set routing-instances vpn1 protocols bgp group bgp1 type external
set routing-instances vpn1 protocols bgp group bgp1 local-address 192.0.2.1
set routing-instances vpn1 protocols bgp group bgp1 family inet unicast
set routing-instances vpn1 protocols bgp group bgp1 neighbor 192.0.2.2 peer-as 4
set routing-instances vpn1 protocols pim group-address 198.51.100.1
set routing-instances vpn1 protocols pim rp static address 10.255.8.168
set routing-instances vpn1 protocols pim interface all
set routing-instances vpn1 protocols pim join-load-balance

```

## PE2

```

set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-2/0/3.0
set routing-instances vpn1 interface ge-4/0/5.0
set routing-instances vpn1 interface lo0.1
set routing-instances vpn1 route-distinguisher 2:2
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 routing-options multipath vpn-unequal-cost equal-external-internal
set routing-instances vpn1 protocols bgp export direct
set routing-instances vpn1 protocols bgp group bgp1 type external
set routing-instances vpn1 protocols bgp group bgp1 local-address 10.90.10.1
set routing-instances vpn1 protocols bgp group bgp1 family inet unicast
set routing-instances vpn1 protocols bgp group bgp1 neighbor 10.90.10.2 peer-as 45
set routing-instances vpn1 protocols bgp group bgp type external
set routing-instances vpn1 protocols bgp group bgp local-address 10.50.10.2
set routing-instances vpn1 protocols bgp group bgp family inet unicast
set routing-instances vpn1 protocols bgp group bgp neighbor 10.50.10.1 peer-as 4
set routing-instances vpn1 protocols pim group-address 198.51.100.1
set routing-instances vpn1 protocols pim rp static address 10.255.8.168
set routing-instances vpn1 protocols pim interface all
set routing-instances vpn1 protocols pim join-load-balance

```

## Step-by-Step Procedure



The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*. To configure the PE1 router:

**NOTE:** Repeat this procedure for every Juniper Networks router in the MVPN domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

1. Configure a VPN routing and forwarding (VRF) instance.

```
[edit routing-instances vpn1]
user@PE1# set instance-type vrf
user@PE1# set interface ge-5/0/4.0
user@PE1# set interface ge-5/2/0.0
user@PE1# set interface lo0.1
user@PE1# set route-distinguisher 1:1
user@PE1# set vrf-target target:1:1
```

2. Enable protocol-independent load balancing for the VRF instance.

```
[edit routing-instances vpn1]
user@PE1# set routing-options multipath vpn-unequal-cost equal-external-internal
```

3. Configure BGP groups and neighbors to enable PE to CE routing.

```
[edit routing-instances vpn1 protocols]
user@PE1# set bgp export direct
user@PE1# set bgp group bgp type external
user@PE1# set bgp group bgp local-address 192.0.2.4
user@PE1# set bgp group bgp family inet unicast
user@PE1# set bgp group bgp neighbor 192.0.2.5 peer-as 3
user@PE1# set bgp group bgp1 type external
user@PE1# set bgp group bgp1 local-address 192.0.2.1
user@PE1# set bgp group bgp1 family inet unicast
user@PE1# set bgp group bgp1 neighbor 192.0.2.2 peer-as 4
```

4. Configure PIM to enable PE to CE multicast routing.

```
[edit routing-instances vpn1 protocols]
user@PE1# set pim group-address 198.51.100.1
user@PE1# set pim rp static address 10.255.8.168
```



5. Enable PIM on all network interfaces.

```
[edit routing-instances vpn1 protocols]
user@PE1# set pim interface all
```

6. Enable PIM join load balancing for the VRF instance.

```
[edit routing-instances vpn1 protocols]
user@PE1# set pim join-load-balance
```

## Results

From configuration mode, confirm your configuration by entering the **show routing-instances** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
routing-instances {
  vpn1 {
    instance-type vrf;
    interface ge-5/0/4.0;
    interface ge-5/2/0.0;
    interface lo0.1;
    route-distinguisher 1:1;
    vrf-target target:1:1;
    routing-options {
      multipath {
        vpn-unequal-cost equal-external-internal;
      }
    }
  }
  protocols {
    bgp {
      export direct;
      group bgp {
        type external;
        local-address 192.0.2.4;
        family inet {
          unicast;
        }
        neighbor 192.0.2.5 {
          peer-as 3;
        }
      }
      group bgp1 {
```



```

        type external;
        local-address 192.0.2.1;
        family inet {
            unicast;
        }
        neighbor 192.0.2.2 {
            peer-as 4;
        }
    }
}
pim {
    group-address 198.51.100.1;
    rp {
        static {
            address 10.255.8.168;
        }
    }
    interface all;
    join-load-balance;
}
}
}
}

```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

### IN THIS SECTION

- [Verifying PIM Join Load Balancing for Different Groups of Join Messages | 574](#)

Confirm that the configuration is working properly.

### *Verifying PIM Join Load Balancing for Different Groups of Join Messages*

#### Purpose

Verify PIM join load balancing for the different groups of join messages received on the PE1 router.

#### Action



From operational mode, run the **show pim join instance extensive** command.

**user@PE1>show pim join instance extensive**

```

Instance: PIM.vpn1 Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 203.0.113.1
  Source: *
  RP: 10.255.8.168
  Flags: sparse,rptree,wildcard
  Upstream interface: ge-5/2/0.1
  Upstream neighbor: 10.10.10.2
  Upstream state: Join to RP
  Downstream neighbors:
    Interface: ge-5/0/4.0
      10.40.10.2 State: Join Flags: SRW Timeout: 207

Group: 203.0.113.2
  Source: *
  RP: 10.255.8.168
  Flags: sparse,rptree,wildcard
  Upstream interface: mt-5/0/10.32768
  Upstream neighbor: 19.19.19.19
  Upstream state: Join to RP
  Downstream neighbors:
    Interface: ge-5/0/4.0
      10.40.10.2 State: Join Flags: SRW Timeout: 207

Group: 203.0.113.3
  Source: *
  RP: 10.255.8.168
  Flags: sparse,rptree,wildcard
  Upstream interface: ge-5/2/0.1
  Upstream neighbor: 10.10.10.2
  Upstream state: Join to RP
  Downstream neighbors:
    Interface: ge-5/0/4.0
      10.40.10.2 State: Join Flags: SRW Timeout: 207

Group: 203.0.113.4
  Source: *
  RP: 10.255.8.168
  Flags: sparse,rptree,wildcard
  Upstream interface: mt-5/0/10.32768

```



```

Upstream neighbor: 19.19.19.19
Upstream state: Join to RP
Downstream neighbors:
    Interface: ge-5/0/4.0
        10.40.10.2 State: Join Flags: SRW Timeout: 207

```

### Meaning

The output shows how the PE1 router has load-balanced the C-PIM join messages for four different groups.

- For Group 1 (group address: 203.0.113.1) and Group 3 (group address: 203.0.113.3) join messages, the PE1 router has selected the EBGp path toward the CE1 router to send the join messages.
- For Group 2 (group address: 203.0.113.2) and Group 4 (group address: 203.0.113.4) join messages, the PE1 router has selected the IBGP path toward the PE2 router to send the join messages.

SEE ALSO

*PIM Join Load Balancing on Multipath MVPN Routes Overview*

[Example: Configuring PIM Join Load Balancing on Next-Generation Multicast VPN | 1136](#)

## MBGP Multicast VPN Sites

The main characteristics of MBGP MVPNs are:

- They extend Layer 3 VPN service (RFC 4364) to support IP multicast for Layer 3 VPN service providers.
- They follow the same architecture as specified by RFC 4364 for unicast VPNs. Specifically, BGP is used as the provider edge (PE) router-to-PE router control plane for multicast VPN.
- They eliminate the requirement for the virtual router (VR) model (as specified in Internet draft draft-rosen-vpn-mcast, *Multicast in MPLS/BGP VPNs*) for multicast VPNs and the RFC 4364 model for unicast VPNs.
- They rely on RFC 4364-based unicast with extensions for intra-AS and inter-AS communication.

An MBGP MVPN defines two types of site sets, a sender site set and a receiver site set. These sites have the following properties:

- Hosts within the sender site set can originate multicast traffic for receivers in the receiver site set.
- Receivers outside the receiver site set should not be able to receive this traffic.



- Hosts within the receiver site set can receive multicast traffic originated by any host in the sender site set.
- Hosts within the receiver site set should not be able to receive multicast traffic originated by any host that is not in the sender site set.

A site can be in both the sender site set and the receiver site set, so hosts within such a site can both originate and receive multicast traffic. For example, the sender site set could be the same as the receiver site set, in which case all sites could both originate and receive multicast traffic from one another.

Sites within a given MBGP MVPN might be within the same organization or in different organizations, which means that an MBGP MVPN can be either an intranet or an extranet. A given site can be in more than one MBGP MVPN, so MBGP MVPNs might overlap. Not all sites of a given MBGP MVPN have to be connected to the same service provider, meaning that an MBGP MVPN can span multiple service providers.

Feature parity for the MVPN extranet functionality or overlapping MVPNs on the Junos Trio chipset is supported in Junos OS Releases 11.1R2, 11.2R2, and 11.4.

Another way to look at an MBGP MVPN is to say that an MBGP MVPN is defined by a set of administrative policies. These policies determine both the sender site set and the receiver site set. These policies are established by MBGP MVPN customers, but implemented by service providers using the existing BGP and MPLS VPN infrastructure.

#### SEE ALSO

*Example: Allowing MBGP MVPN Remote Sources*

*Example: Configuring a PIM-SSM Provider Tunnel for an MBGP MVPN*

## Example: Configuring MBGP Multicast VPNs

### IN THIS SECTION

- [Requirements | 578](#)
- [Overview and Topology | 578](#)
- [Configuration | 579](#)



This example provides a step-by-step procedure to configure multicast services across a multiprotocol BGP (MBGP) Layer 3 virtual private network. (also referred to as next-generation Layer 3 multicast VPNs)

## Requirements

This example uses the following hardware and software components:

- Junos OS Release 9.2 or later
- Five M Series, T Series, TX Series, or MX Series Juniper routers
- One host system capable of sending multicast traffic and supporting the Internet Group Management Protocol (IGMP)
- One host system capable of receiving multicast traffic and supporting IGMP

Depending on the devices you are using, you might be required to configure static routes to:

- The multicast sender
- The Fast Ethernet interface to which the sender is connected on the multicast receiver
- The multicast receiver
- The Fast Ethernet interface to which the receiver is connected on the multicast sender

## Overview and Topology


This example shows how to configure the following technologies:

- IPv4
- BGP
- OSPF
- RSVP
- MPLS
- PIM sparse mode
- Static RP

The topology of the network is shown in [Figure 55 on page 579](#).



Figure 55: Multicast Over Layer 3 VPN Example Topology

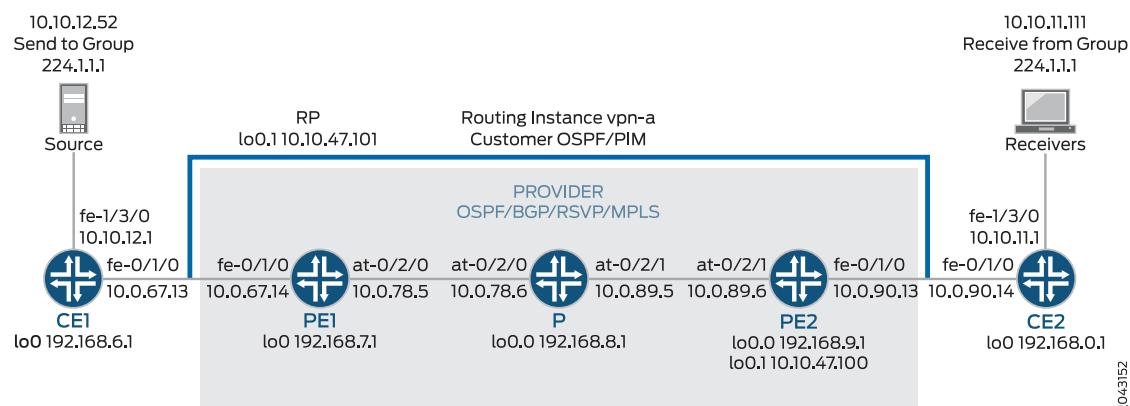

## Configuration

### IN THIS SECTION

- [Configuring Interfaces | 580](#)
- [Configuring OSPF | 581](#)
- [Configuring BGP | 583](#)
- [Configuring RSVP | 584](#)
- [Configuring MPLS | 584](#)
- [Configuring the VRF Routing Instance | 586](#)
- [Configuring PIM | 587](#)
- [Configuring the Provider Tunnel | 588](#)
- [Configuring the Rendezvous Point | 588](#)
- [Results | 589](#)

**NOTE:** In any configuration session, it is a good practice to periodically verify that the configuration can be committed using the **commit check** command.



In this example, the router being configured is identified using the following command prompts:

- **CE1** identifies the customer edge 1 (CE1) router
- **PE1** identifies the provider edge 1 (PE1) router
- **P** identifies the provider core (P) router
- **CE2** identifies the customer edge 2 (CE2) router
- **PE2** identifies the provider edge 2 (PE2) router

To configure MBGP multicast VPNs for the network shown in [Figure 55 on page 579](#), perform the following steps:

### Configuring Interfaces

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

1. On each router, configure an IP address on the loopback logical interface 0 (**lo0.0**).

```
[edit interfaces]
user@CE1# set lo0 unit 0 family inet address 192.168.6.1/32 primary

user@PE1# set lo0 unit 0 family inet address 192.168.7.1/32 primary

user@P# set lo0 unit 0 family inet address 192.168.8.1/32 primary

user@PE2# set lo0 unit 0 family inet address 192.168.9.1/32 primary

user@CE2# set lo0 unit 0 family inet address 192.168.0.1/32 primary
```

Use the **show interfaces terse** command to verify that the IP address is correct on the loopback logical interface.

2. On the PE and CE routers, configure the IP address and protocol family on the Fast Ethernet interfaces. Specify the **inet** protocol family type.

```
[edit interfaces]
user@CE1# set fe-1/3/0 unit 0 family inet address 10.10.12.1/24
user@CE1# set fe-0/1/0 unit 0 family inet address 10.0.67.13/30

[edit interfaces]
user@PE1# set fe-0/1/0 unit 0 family inet address 10.0.67.14/30
```



```
[edit interfaces]
user@PE2# set fe-0/1/0 unit 0 family inet address 10.0.90.13/30
```

```
[edit interfaces]
user@CE2# set fe-0/1/0 unit 0 family inet address 10.0.90.14/30
user@CE2# set fe-1/3/0 unit 0 family inet address 10.10.11.1/24
```

Use the **show interfaces terse** command to verify that the IP address is correct on the Fast Ethernet interfaces.

3. On the PE and P routers, configure the ATM interfaces' VPI and maximum virtual circuits. If the default PIC type is different on directly connected ATM interfaces, configure the PIC type to be the same. Configure the logical interface VCI, protocol family, local IP address, and destination IP address.

```
[edit interfaces]
user@PE1# set at-0/2/0 atm-options pic-type atm1
user@PE1# set at-0/2/0 atm-options vpi 0 maximum-vcs 256
user@PE1# set at-0/2/0 unit 0 vci 0.128
user@PE1# set at-0/2/0 unit 0 family inet address 10.0.78.5/32 destination 10.0.78.6
```

```
[edit interfaces]
user@P# set at-0/2/0 atm-options pic-type atm1
user@P# set at-0/2/0 atm-options vpi 0 maximum-vcs 256
user@P# set at-0/2/0 unit 0 vci 0.128
user@P# set at-0/2/0 unit 0 family inet address 10.0.78.6/32 destination 10.0.78.5
user@P# set at-0/2/1 atm-options pic-type atm1
user@P# set at-0/2/1 atm-options vpi 0 maximum-vcs 256
user@P# set at-0/2/1 unit 0 vci 0.128
user@P# set at-0/2/1 unit 0 family inet address 10.0.89.5/32 destination 10.0.89.6
```

```
[edit interfaces]
user@PE2# set at-0/2/1 atm-options pic-type atm1
user@PE2# set at-0/2/1 atm-options vpi 0 maximum-vcs 256
user@PE2# set at-0/2/1 unit 0 vci 0.128
user@PE2# set at-0/2/1 unit 0 family inet address 10.0.89.6/32 destination 10.0.89.5
```

Use the **show configuration interfaces** command to verify that the ATM interfaces' VPI and maximum VCs are correct and that the logical interface VCI, protocol family, local IP address, and destination IP address are correct.

## Configuring OSPF

### Step-by-Step Procedure



1. On the P and PE routers, configure the provider instance of OSPF. Specify the **lo0.0** and ATM core-facing logical interfaces. The provider instance of OSPF on the PE router forms adjacencies with the OSPF neighbors on the other PE router and Router P.

```

user@PE1# set protocols ospf area 0.0.0.0 interface at-0/2/0.0
user@PE1# set protocols ospf area 0.0.0.0 interface lo0.0

user@P# set protocols ospf area 0.0.0.0 interface lo0.0
user@P# set protocols ospf area 0.0.0.0 interface all
user@P# set protocols ospf area 0.0.0.0 interface fxp0 disable

user@PE2# set protocols ospf area 0.0.0.0 interface lo0.0
user@PE2# set protocols ospf area 0.0.0.0 interface at-0/2/1.0

```

Use the **show ospf interfaces** command to verify that the **lo0.0** and ATM core-facing logical interfaces are configured for OSPF.

2. On the CE routers, configure the customer instance of OSPF. Specify the loopback and Fast Ethernet logical interfaces. The customer instance of OSPF on the CE routers form adjacencies with the neighbors within the VPN routing instance of OSPF on the PE routers.

```

user@CE1# set protocols ospf area 0.0.0.0 interface fe-0/1/0.0
user@CE1# set protocols ospf area 0.0.0.0 interface fe-1/3/0.0
user@CE1# set protocols ospf area 0.0.0.0 interface lo0.0

user@CE2# set protocols ospf area 0.0.0.0 interface fe-0/1/0.0
user@CE2# set protocols ospf area 0.0.0.0 interface fe-1/3/0.0
user@CE2# set protocols ospf area 0.0.0.0 interface lo0.0

```

Use the **show ospf interfaces** command to verify that the correct loopback and Fast Ethernet logical interfaces have been added to the OSPF protocol.

3. On the P and PE routers, configure OSPF traffic engineering support for the provider instance of OSPF. The **shortcuts** statement enables the master instance of OSPF to use a label-switched path as the next hop.

```

user@PE1# set protocols ospf traffic-engineering shortcuts

user@P# set protocols ospf traffic-engineering shortcuts

user@PE2# set protocols ospf traffic-engineering shortcuts

```



Use the **show ospf overview** or **show configuration protocols ospf** command to verify that traffic engineering support is enabled.

## Configuring BGP

### Step-by-Step Procedure

1. On Router P, configure BGP for the VPN. The local address is the local **lo0.0** address. The neighbor addresses are the PE routers' **lo0.0** addresses.

The **unicast** statement enables the router to use BGP to advertise network layer reachability information (NLRI). The **signaling** statement enables the router to use BGP as the signaling protocol for the VPN.

```
user@P# set protocols bgp group group-mvpn type internal
user@P# set protocols bgp group group-mvpn local-address 192.168.8.1
user@P# set protocols bgp group group-mvpn family inet unicast
user@P# set protocols bgp group group-mvpn family inet-mvpn signaling
user@P# set protocols bgp group group-mvpn neighbor 192.168.9.1
user@P# set protocols bgp group group-mvpn neighbor 192.168.7.1
```

Use the **show configuration protocols bgp** command to verify that the router has been configured to use BGP to advertise NLRI.

2. On the PE and P routers, configure the BGP local autonomous system number.

```
user@PE1# set routing-options autonomous-system 0.65010

user@P# set routing-options autonomous-system 0.65010

user@PE2# set routing-options autonomous-system 0.65010
```

Use the **show configuration routing-options** command to verify that the BGP local autonomous system number is correct.

3. On the PE routers, configure BGP for the VPN. Configure the local address as the local **lo0.0** address. The neighbor addresses are the **lo0.0** addresses of Router P and the other PE router, PE2.

```
user@PE1# set protocols bgp group group-mvpn type internal
user@PE1# set protocols bgp group group-mvpn local-address 192.168.7.1
user@PE1# set protocols bgp group group-mvpn family inet-vpn unicast
user@PE1# set protocols bgp group group-mvpn family inet-mvpn signaling
user@PE1# set protocols bgp group group-mvpn neighbor 192.168.9.1
user@PE1# set protocols bgp group group-mvpn neighbor 192.168.8.1
```



```

user@PE2# set protocols bgp group group-mvpn type internal
user@PE2# set protocols bgp group group-mvpn local-address 192.168.9.1
user@PE2# set protocols bgp group group-mvpn family inet-vpn unicast
user@PE2# set protocols bgp group group-mvpn family inet-mvpn signaling
user@PE2# set protocols bgp group group-mvpn neighbor 192.168.7.1
user@PE2# set protocols bgp group group-mvpn neighbor 192.168.8.1

```

Use the **show bgp group** command to verify that the BGP configuration is correct.

4. On the PE routers, configure a policy to export the BGP routes into OSPF.

```

user@PE1# set policy-options policy-statement bgp-to-ospf from protocol bgp
user@PE1# set policy-options policy-statement bgp-to-ospf then accept

user@PE2# set policy-options policy-statement bgp-to-ospf from protocol bgp
user@PE2# set policy-options policy-statement bgp-to-ospf then accept

```

Use the **show policy bgp-to-ospf** command to verify that the policy is correct.

## Configuring RSVP

### Step-by-Step Procedure

1. On the PE routers, enable RSVP on the interfaces that participate in the LSP. Configure the Fast Ethernet and ATM logical interfaces.

```

user@PE1# set protocols rsvp interface fe-0/1/0.0
user@PE1# set protocols rsvp interface at-0/2/0.0

user@PE2# set protocols rsvp interface fe-0/1/0.0
user@PE2# set protocols rsvp interface at-0/2/1.0

```

2. On Router P, enable RSVP on the interfaces that participate in the LSP. Configure the ATM logical interfaces.

```

user@P# set protocols rsvp interface at-0/2/0.0
user@P# set protocols rsvp interface at-0/2/1.0

```

Use the **show configuration protocols rsvp** command to verify that the RSVP configuration is correct.

## Configuring MPLS

### Step-by-Step Procedure



1. On the PE routers, configure an MPLS LSP to the PE router that is the LSP egress point. Specify the IP address of the **lo0.0** interface on the router at the other end of the LSP. Configure MPLS on the ATM, Fast Ethernet, and **lo0.0** interfaces.

To help identify each LSP when troubleshooting, configure a different LSP name on each PE router. In this example, we use the name **to-pe2** as the name for the LSP configured on PE1 and **to-pe1** as the name for the LSP configured on PE2.

```

user@PE1# set protocols mpls label-switched-path to-pe2 to 192.168.9.1
user@PE1# set protocols mpls interface fe-0/1/0.0
user@PE1# set protocols mpls interface at-0/2/0.0
user@PE1# set protocols mpls interface lo0.0

user@PE2# set protocols mpls label-switched-path to-pe1 to 192.168.7.1
user@PE2# set protocols mpls interface fe-0/1/0.0
user@PE2# set protocols mpls interface at-0/2/1.0
user@PE2# set protocols mpls interface lo0.0

```

Use the **show configuration protocols mpls** and **show route label-switched-path to-pe1** commands to verify that the MPLS and LSP configuration is correct.

After the configuration is committed, use the **show mpls lsp name to-pe1** and **show mpls lsp name to-pe2** commands to verify that the LSP is operational.

2. On Router P, enable MPLS. Specify the ATM interfaces connected to the PE routers.

```

user@P# set protocols mpls interface at-0/2/0.0
user@P# set protocols mpls interface at-0/2/1.0

```

Use the **show mpls interface** command to verify that MPLS is enabled on the ATM interfaces.

3. On the PE and P routers, configure the protocol family on the ATM interfaces associated with the LSP. Specify the **mpls** protocol family type.

```

user@PE1# set interfaces at-0/2/0 unit 0 family mpls

user@P# set interfaces at-0/2/0 unit 0 family mpls
user@P# set interfaces at-0/2/1 unit 0 family mpls

user@PE2# set interfaces at-0/2/1 unit 0 family mpls

```

Use the **show mpls interface** command to verify that the MPLS protocol family is enabled on the ATM interfaces associated with the LSP.



## Configuring the VRF Routing Instance

### Step-by-Step Procedure

1. On the PE routers, configure a routing instance for the VPN and specify the **vrf** instance type. Add the Fast Ethernet and **lo0.1** customer-facing interfaces. Configure the VPN instance of OSPF and include the BGP-to-OSPF export policy.

```
user@PE1# set routing-instances vpn-a instance-type vrf
user@PE1# set routing-instances vpn-a interface lo0.1
user@PE1# set routing-instances vpn-a interface fe-0/1/0.0
user@PE1# set routing-instances vpn-a protocols ospf export bgp-to-ospf
user@PE1# set routing-instances vpn-a protocols ospf area 0.0.0.0 interface all

user@PE2# set routing-instances vpn-a instance-type vrf
user@PE2# set routing-instances vpn-a interface lo0.1
user@PE2# set routing-instances vpn-a interface fe-0/1/0.0
user@PE2# set routing-instances vpn-a protocols ospf export bgp-to-ospf
user@PE2# set routing-instances vpn-a protocols ospf area 0.0.0.0 interface all
```

Use the **show configuration routing-instances vpn-a** command to verify that the routing instance configuration is correct.

2. On the PE routers, configure a route distinguisher for the routing instance. A route distinguisher allows the router to distinguish between two identical IP prefixes used as VPN routes. Configure a different route distinguisher on each PE router. This example uses 65010:1 on PE1 and 65010:2 on PE2.

```
user@PE1# set routing-instances vpn-a route-distinguisher 65010:1

user@PE2# set routing-instances vpn-a route-distinguisher 65010:2
```

Use the **show configuration routing-instances vpn-a** command to verify that the route distinguisher is correct.

3. On the PE routers, configure default VRF import and export policies. Based on this configuration, BGP automatically generates local routes corresponding to the route target referenced in the VRF import policies. This example uses 2:1 as the route target.

**NOTE:** You must configure the same route target on each PE router for a given VPN routing instance.



```
user@PE1# set routing-instances vpn-a vrf-target target:2:1
```

```
user@PE2# set routing-instances vpn-a vrf-target target:2:1
```

Use the **show configuration routing-instances vpn-a** command to verify that the route target is correct.

4. On the PE routers, configure the VPN routing instance for multicast support.

```
user@PE1# set routing-instances vpn-a protocols mvpn
```

```
user@PE2# set routing-instances vpn-a protocols mvpn
```

Use the **show configuration routing-instance vpn-a** command to verify that the VPN routing instance has been configured for multicast support.

5. On the PE routers, configure an IP address on loopback logical interface 1 (**lo0.1**) used in the customer routing instance VPN.

```
user@PE1# set interfaces lo0 unit 1 family inet address 10.10.47.101/32
```

```
user@PE2# set interfaces lo0 unit 1 family inet address 10.10.47.100/32
```

Use the **show interfaces terse** command to verify that the IP address on the loopback interface is correct.

## Configuring PIM

### Step-by-Step Procedure

1. On the PE routers, enable PIM. Configure the **lo0.1** and the customer-facing Fast Ethernet interface. Specify the mode as **sparse** and the version as **2**.

```
user@PE1# set routing-instances vpn-a protocols pim interface lo0.1 mode sparse
user@PE1# set routing-instances vpn-a protocols pim interface lo0.1 version 2
user@PE1# set routing-instances vpn-a protocols pim interface fe-0/1/0.0 mode sparse
user@PE1# set routing-instances vpn-a protocols pim interface fe-0/1/0.0 version 2
user@PE2# set routing-instances vpn-a protocols pim interface lo0.1 mode sparse
user@PE2# set routing-instances vpn-a protocols pim interface lo0.1 version 2
user@PE2# set routing-instances vpn-a protocols pim interface fe-0/1/0.0 mode sparse
user@PE2# set routing-instances vpn-a protocols pim interface fe-0/1/0.0 version 2
```

Use the **show pim interfaces instance vpn-a** command to verify that PIM sparse-mode is enabled on the **lo0.1** interface and the customer-facing Fast Ethernet interface.



2. On the CE routers, enable PIM. In this example, we configure all interfaces. Specify the mode as **sparse** and the version as **2**.

```
user@CE1# set protocols pim interface all
user@CE2# set protocols pim interface all mode sparse
user@CE2# set protocols pim interface all version 2
```

Use the **show pim interfaces** command to verify that PIM sparse mode is enabled on all interfaces.

### *Configuring the Provider Tunnel*

#### **Step-by-Step Procedure**

1. On Router PE1, configure the provider tunnel. Specify the multicast address to be used.

The **provider-tunnel** statement instructs the router to send multicast traffic across a tunnel.

```
user@PE1# set routing-instances vpn-a provider-tunnel rsvp-te label-switched-path-template default-template
```

Use the **show configuration routing-instance vpn-a** command to verify that the provider tunnel is configured to use the default LSP template.

2. On Router PE2, configure the provider tunnel. Specify the multicast address to be used.

```
user@PE2# set routing-instances vpn-a provider-tunnel rsvp-te label-switched-path-template default-template
```

Use the **show configuration routing-instance vpn-a** command to verify that the provider tunnel is configured to use the default LSP template.

### *Configuring the Rendezvous Point*

#### **Step-by-Step Procedure**

1. Configure Router PE1 to be the rendezvous point. Specify the **lo0.1** address of Router PE1. Specify the multicast address to be used.

```
user@PE1# set routing-instances vpn-a protocols pim rp local address 10.10.47.101
user@PE1# set routing-instances vpn-a protocols pim rp local group-ranges 224.1.1.1/32
```

Use the **show pim rps instance vpn-a** command to verify that the correct local IP address is configured for the RP.

2. On Router PE2, configure the static rendezvous point. Specify the **lo0.1** address of Router PE1.

```
user@PE2# set routing-instances vpn-a protocols pim rp static address 10.10.47.101
```



Use the **show pim rps instance vpn-a** command to verify that the correct static IP address is configured for the RP.

3. On the CE routers, configure the static rendezvous point. Specify the **lo0.1** address of Router PE1.

```
user@CE1# set protocols pim rp static address 10.10.47.101 version 2
user@CE2# set protocols pim rp static address 10.10.47.101 version 2
```

Use the **show pim rps** command to verify that the correct static IP address is configured for the RP.

4. Use the **commit check** command to verify that the configuration can be successfully committed. If the configuration passes the check, commit the configuration.
5. Start the multicast sender device connected to CE1.
6. Start the multicast receiver device connected to CE2.
7. Verify that the receiver is receiving the multicast stream.
8. Use **show** commands to verify the routing, VPN, and multicast operation.

### Results

The configuration and verification parts of this example have been completed. The following section is for your reference.

The relevant sample configuration for Router CE1 follows.

#### Router CE1

```
interfaces {
  lo0 {
    unit 0 {
      family inet {
        address 192.168.6.1/32 {
          primary;
        }
      }
    }
  }
  fe-0/1/0 {
```



```

        unit 0 {
            family inet {
                address 10.0.67.13/30;
            }
        }
    }
    fe-1/3/0 {
        unit 0 {
            family inet {
                address 10.10.12.1/24;
            }
        }
    }
}
protocols {
    ospf {
        area 0.0.0.0 {
            interface fe-0/1/0.0;
            interface lo0.0;
            interface fe-1/3/0.0;
        }
    }
    pim {
        rp {
            static {
                address 10.10.47.101 {
                    version 2;
                }
            }
        }
        interface all;
    }
}

```

The relevant sample configuration for Router PE1 follows.

#### Router PE1

```

interfaces {
    lo0 {

```



```

    unit 0 {
        family inet {
            address 192.168.7.1/32 {
                primary;
            }
        }
    }
}
fe-0/1/0 {
    unit 0 {
        family inet {
            address 10.0.67.14/30;
        }
    }
}
at-0/2/0 {
    atm-options {
        pic-type atm1;
        vpi 0 {
            maximum-vcs 256;
        }
    }
    unit 0 {
        vci 0.128;
        family inet {
            address 10.0.78.5/32 {
                destination 10.0.78.6;
            }
        }
        family mpls;
    }
}
lo0 {
    unit 1 {
        family inet {
            address 10.10.47.101/32;
        }
    }
}
}
routing-options {
    autonomous-system 0.65010;
}

```



```

}
protocols {
  rsvp {
    interface fe-0/1/0.0;
    interface at-0/2/0.0;
  }
  mpls {
    label-switched-path to-pe2 {
      to 192.168.9.1;
    }
    interface fe-0/1/0.0;
    interface at-0/2/0.0;
    interface lo0.0;
  }
  bgp {
    group group-mvpn {
      type internal;
      local-address 192.168.7.1;
      family inet-vpn {
        unicast;
      }
      family inet-mvpn {
        signaling;
      }
      neighbor 192.168.9.1;
      neighbor 192.168.8.1;
    }
  }
  ospf {
    traffic-engineering {
      shortcuts;
    }
    area 0.0.0.0 {
      interface at-0/2/0.0;
      interface lo0.0;
    }
  }
}
policy-options {
  policy-statement bgp-to-ospf {
    from protocol bgp;
    then accept;
  }
}

```



```

    }
}
routing-instances {
  vpn-a {
    instance-type vrf;
    interface lo0.1;
    interface fe-0/1/0.0;
    route-distinguisher 65010:1;
    provider-tunnel {
      rsvp-te {
        label-switched-path-template {
          default-template;
        }
      }
    }
  }
  vrf-target target:2:1;
  protocols {
    ospf {
      export bgp-to-ospf;
      area 0.0.0.0 {
        interface all;
      }
    }
    pim {
      rp {
        local {
          address 10.10.47.101;
          group-ranges {
            224.1.1.1/32;
          }
        }
      }
      interface lo0.1 {
        mode sparse;
        version 2;
      }
      interface fe-0/1/0.0 {
        mode sparse;
        version 2;
      }
    }
  }
  mvpn;
}

```



```

    }
  }
}

```

The relevant sample configuration for Router P follows.

### Router P

```

interfaces {
  lo0 {
    unit 0 {
      family inet {
        address 192.168.8.1/32 {
          primary;
        }
      }
    }
  }
  at-0/2/0 {
    atm-options {
      pic-type atm1;
      vpi 0 {
        maximum-vcs 256;
      }
    }
    unit 0 {
      vci 0.128;
      family inet {
        address 10.0.78.6/32 {
          destination 10.0.78.5;
        }
      }
      family mpls;
    }
  }
  at-0/2/1 {
    atm-options {
      pic-type atm1;
      vpi 0 {
        maximum-vcs 256;
      }
    }
  }
}

```



```

    }
  }
  unit 0 {
    vci 0.128;
    family inet {
      address 10.0.89.5/32 {
        destination 10.0.89.6;
      }
    }
    family mpls;
  }
}
routing-options {
  autonomous-system 0.65010;
}
protocols {
  rsvp {
    interface at-0/2/0.0;
    interface at-0/2/1.0;
  }
  mpls {
    interface at-0/2/0.0;
    interface at-0/2/1.0;
  }
  bgp {
    group group-mvpn {
      type internal;
      local-address 192.168.8.1;
      family inet {
        unicast;
      }
      family inet-mvpn {
        signaling;
      }
      neighbor 192.168.9.1;
      neighbor 192.168.7.1;
    }
  }
  ospf {
    traffic-engineering {
      shortcuts;
    }
  }
}

```



```

    }
    area 0.0.0.0 {
        interface lo0.0;
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
}
}

```

The relevant sample configuration for Router PE2 follows.

### Router PE2

```

interfaces {
    lo0 {
        unit 0 {
            family inet {
                address 192.168.9.1/32 {
                    primary;
                }
            }
        }
    }
    fe-0/1/0 {
        unit 0 {
            family inet {
                address 10.0.90.13/30;
            }
        }
    }
    at-0/2/1 {
        atm-options {
            pic-type atm1;
            vpi 0 {
                maximum-vcs 256;
            }
        }
        unit 0 {

```



```

    vci 0.128;
    family inet {
        address 10.0.89.6/32 {
            destination 10.0.89.5;
        }
    }
    family mpls;
}
}
lo0 {
    unit 1 {
        family inet {
            address 10.10.47.100/32;
        }
    }
}
}
routing-options {
    autonomous-system 0.65010;
}
protocols {
    rsvp {
        interface fe-0/1/0.0;
        interface at-0/2/1.0;
    }
    mpls {
        label-switched-path to-pe1 {
            to 192.168.7.1;
        }
        interface lo0.0;
        interface fe-0/1/0.0;
        interface at-0/2/1.0;
    }
    bgp {
        group group-mvpn {
            type internal;
            local-address 192.168.9.1;
            family inet-vpn {
                unicast;
            }
            family inet-mvpn {
                signaling;
            }
        }
    }
}

```



```

    }
    neighbor 192.168.7.1;
    neighbor 192.168.8.1;
  }
}
ospf {
  traffic-engineering {
    shortcuts;
  }
  area 0.0.0.0 {
    interface lo0.0;
    interface at-0/2/1.0;
  }
}
}
policy-options {
  policy-statement bgp-to-ospf {
    from protocol bgp;
    then accept;
  }
}
routing-instances {
  vpn-a {
    instance-type vrf;
    interface fe-0/1/0.0;
    interface lo0.1;
    route-distinguisher 65010:2;
    provider-tunnel {
      rsvp-te {
        label-switched-path-template {
          default-template;
        }
      }
    }
  }
  vrf-target target:2:1;
  protocols {
    ospf {
      export bgp-to-ospf;
      area 0.0.0.0 {
        interface all;
      }
    }
  }
}

```



```

    pim {
      rp {
        static {
          address 10.10.47.101;
        }
      }
      interface fe-0/1/0.0 {
        mode sparse;
        version 2;
      }
      interface lo0.1 {
        mode sparse;
        version 2;
      }
    }
    mvpn;
  }
}

```

The relevant sample configuration for Router CE2 follows.

### Router CE2

```

interfaces {
  lo0 {
    unit 0 {
      family inet {
        address 192.168.0.1/32 {
          primary;
        }
      }
    }
  }
  fe-0/1/0 {
    unit 0 {
      family inet {
        address 10.0.90.14/30;
      }
    }
  }
}

```



```

    }
    fe-1/3/0 {
        unit 0 {
            family inet {
                address 10.10.11.1/24;
            }
            family inet6 {
                address fe80::205:85ff:fe88:ccdb/64;
            }
        }
    }
}
protocols {
    ospf {
        area 0.0.0.0 {
            interface fe-0/1/0.0;
            interface lo0.0;
            interface fe-1/3/0.0;
        }
    }
    pim {
        rp {
            static {
                address 10.10.47.101 {
                    version 2;
                }
            }
        }
        interface all {
            mode sparse;
            version 2;
        }
    }
}

```

SEE ALSO



## Configuring Point-to-Multipoint LSPs for an MBGP MVPN

### IN THIS SECTION

- [Configuring RSVP-Signaled Inclusive Point-to-Multipoint LSPs for an MBGP MVPN | 602](#)
- [Configuring Selective Provider Tunnels for an MBGP MVPN | 603](#)

The Junos OS supports point-to-multipoint label-switched paths (LSPs) for MBGP MVPNs. Point-to-multipoint LSPs for multicast VPNs are supported for intra-autonomous system (AS) environments (within an AS), but are not supported for inter-AS environments (between autonomous systems). A point-to-multipoint LSP is an RSVP-signaled LSP with a single source and multiple destinations.

You can configure point-to-multipoint LSPs for MBGP MVPNs as follows:

- Static point-to-multipoint LSPs—Configure static point-to-multipoint LSPs using the standard MPLS LSP statements specified at the **[edit protocols mpls]** hierarchy level. You manually configure each of the leaf nodes for the point-to-multipoint LSP.
- Dynamic point-to-multipoint LSPs using the default template—Configuring dynamic point-to-multipoint LSPs using the **default-template** option causes the leaf nodes to be discovered automatically. The leaf nodes are discovered through BGP intra-AS automatic discovery. The **default-template** option allows you to minimize the amount of configuration needed. However, it does not allow you to configure any of the standard MPLS options.
- Dynamic point-to-multipoint LSPs using a user-configured template—Configuring dynamic point-to-multipoint LSPs using a user-configured template also causes the leaf nodes to be discovered automatically. By creating your own template for the point-to-multipoint LSPs, all of the standard MPLS features (such as bandwidth allocation and traffic engineering) can be configured.

Be aware of the following properties for the egress PE router in a point-to-multipoint LSP configured for a multicast VPN:

- Penultimate hop-popping is not used by point-to-multipoint LSPs for multicast VPNs. Only ultimate hop-popping is used.
- You must configure either the **vrf-table-label** statement or a virtual loopback tunnel interface on the egress PE router.
- If you configure the **vrf-table-label** statement on the egress PE router, and the egress PE router is also a transit router for the point-to-multipoint LSP, the penultimate hop router sends two copies of each packet over the link to the egress PE router.



- If you configure the **vrf-table-label** statement on the egress PE router, and the egress PE router is not a transit router for the point-to-multipoint LSP, the penultimate hop router can send just one copy of each packet over the link to the egress PE router.
- If you configure a virtual loopback tunnel interface on the egress PE router, and the egress PE router is also a transit router for the point-to-multipoint LSP, the penultimate hop router sends just one copy of each packet over the link to the egress PE router. A virtual loopback tunnel interface can perform two lookups on an incoming packet, one for the multicast MPLS lookup and one for the IP lookup.

**NOTE:** Junos OS Release 11.2 and earlier do not support point-to-multipoint LSPs with next-generation multicast VPNs on MX80 routers.

The following sections describe how to configure point-to-multipoint LSPs for MBGP MVPNs:

### Configuring RSVP-Signaled Inclusive Point-to-Multipoint LSPs for an MBGP MVPN

You can configure LDP-signaled or RSVP-signaled inclusive point-to-multipoint LSPs for MBGP MVPNs. Aggregation is not supported, so you need to configure an inclusive point-to-multipoint LSP for each sender PE router in each multicast VPN routing instance. The sender PE router is in the sender site set of the MBGP MVPN.

To configure a static RSVP-signaled inclusive point-to-multipoint LSP, include the **static-lsp** statement:

```
static-lsp lsp-name;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel rsvp-te]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel rsvp-te]

To configure dynamic inclusive point-to-multipoint LSPs, include the **label-switched-path-template** statement:

```
label-switched-path-template (Multicast) {
  (default-template | lsp-template-name);
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel rsvp-te]



- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel rsvp-te]

You can configure either the **default-template** option or manually configure a point-to-multipoint LSP template and specify the template name.

## Configuring Selective Provider Tunnels for an MBGP MVPN

### IN THIS SECTION

- [Configuring the Multicast Group Address for an MBGP MVPN | 605](#)
- [Configuring the Multicast Source Address for an MBGP MVPN | 605](#)
- [Configuring Static Selective Point-to-Multipoint LSPs for an MBGP MVPN | 605](#)
- [Configuring Dynamic Selective Point-to-Multipoint LSPs for an MBGP MVPN | 606](#)
- [Configuring the Threshold for Dynamic Selective Point-to-Multipoint LSPs for an MBGP MVPN | 607](#)
- [Configuring the Tunnel Limit for Dynamic Selective Point-to-Multipoint LSPs for an MBGP MVPN | 607](#)

You can configure LDP-signaled or RSVP-signaled selective point-to-multipoint LSPs (also referred to as selective provider tunnels) for MBGP MVPNs. Selective point-to-multipoint LSPs send traffic only to the receivers configured for the multicast VPNs, helping to minimize flooding in the service provider's network.

As with inclusive point-to-multipoint LSPs, you can configure both dynamic and static selective tunnels for the multicast VPN.

To configure selective point-to-multipoint provider tunnels, include the **selective** statement:

```
selective {
  group multicast--prefix/prefix-length {
    source ip--prefix/prefix-length {
      ldp-p2mp;
      pim-ssm {
        group-range multicast-prefix;
      }
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
      static-lsp point-to-multipoint-lsp-name;
    }
    threshold-rate kbits;
  }
}
```



```

}
wildcard-source {
    ldp-p2mp;
    pim-ssm {
        group-range multicast-prefix;
    }
    rsvp-te {
        label-switched-path-template {
            (default-template | lsp-template-name);
        }
        static-lsp point-to-multipoint-lsp-name;
    }
    threshold-rate kbits;
}
}
tunnel-limit number;
wildcard-group-inet {
    wildcard-source {
        ldp-p2mp;
        pim-ssm {
            group-range multicast-prefix;
        }
        rsvp-te {
            label-switched-path-template {
                (default-template | lsp-template-name);
            }
            static-lsp lsp-name;
        }
        threshold-rate number;
    }
}
wildcard-group-inet6 {
    wildcard-source {
        ldp-p2mp;
        pim-ssm {
            group-range multicast-prefix;
        }
        rsvp-te {
            label-switched-path-template {
                (default-template | lsp-template-name);
            }
            static-lsp lsp-name;
        }
        threshold-rate number;
    }
}

```



```

    }
  }
}

```

You can include these statements at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel]

The following sections describe how to configure selective point-to-multipoint LSPs for MBGP MVPNs:

#### **Configuring the Multicast Group Address for an MBGP MVPN**

To configure a point-to-multipoint LSP for an MBGP MVPN, you need to specify a multicast group address by including the **group** statement:

```
group address { ... }
```

You can include this statements at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel selective]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel selective]

The address must be a valid multicast group address. Multicast uses the Class D IP address range (224.0.0.0 through 239.255.255.255).

#### **Configuring the Multicast Source Address for an MBGP MVPN**

To configure a point-to-multipoint LSP for an MBGP MVPN, specify a multicast source address by including the **source** statement:

```
source address { ... }
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel selective group address]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel selective group address]

#### **Configuring Static Selective Point-to-Multipoint LSPs for an MBGP MVPN**

You can configure a static selective point-to-multipoint LSP for an MBGP MVPN. You need to configure a static LSP using the standard MPLS LSP statements at the [edit protocols mpls] hierarchy level. You then include the static LSP in your selective point-to-multipoint LSP configuration by using the **static-lsp**



statement. Once this functionality is enabled on the source PE router, the static point-to-multipoint LSP is created based on your configuration.

To configure a static selective point-to-multipoint LSP, include the **rsvp-te** and the **static-lsp** statements:

```
rsvp-te static-lsp lsp-name;
```

You can include these statements at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel selective group *address* source *source-address*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel selective group *address* source *source-address*]

### Configuring Dynamic Selective Point-to-Multipoint LSPs for an MBGP MVPN

You can configure a dynamic selective point-to-multipoint LSP for an MBGP MVPN. The leaf nodes for a dynamic point-to-multipoint LSP can be automatically discovered using leaf automatic discovery routes. Selective provider multicast service interface (S-PMSI) automatic discovery routes are also supported.

To configure a dynamic selective point-to-multipoint provider tunnel, include the **rsvp-te** and **label-switched-path-template** statements:

```
rsvp-te label-switched-path-template {
  (default-template | lsp-template-name);
}
```

You can include these statements at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel selective group *address* source *source-address*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel selective group *address* source *source-address*]

The **label-switched-path-template** statement includes the following options:

- **default-template**—Specify that point-to-multipoint LSPs are generated dynamically based on the default template. No user configuration is required for the LSPs. However, the automatically generated LSPs include none of the common LSP features, such as bandwidth allocation and traffic engineering.
- **lsp-template-name**—Specify the name of an LSP template to be used for the point-to-multipoint LSP. You need to configure the LSP template to be used as a basis for the point-to-multipoint LSPs. You can configure any of the common LSP features for this template.



### Configuring the Threshold for Dynamic Selective Point-to-Multipoint LSPs for an MBGP MVPN

To configure a selective point-to-multipoint LSP dynamically, you need to specify the data threshold (in kilobits per second) required before a new tunnel is created using the **threshold-rate** statement:

```
threshold-rate number;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel selective group *address* source *source-address*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel selective group *address* source *source-address*]

### Configuring the Tunnel Limit for Dynamic Selective Point-to-Multipoint LSPs for an MBGP MVPN

To configure a limit on the number of tunnels that can be generated for a dynamic point-to-multipoint LSP, include the **tunnel-limit** statement:

```
tunnel-limit number;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel selective]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel selective]

SEE ALSO

| *Example: Configuring Point-to-Multipoint LDP LSPs as the Data Plane for Intra-AS MBGP MVPNs*



## Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview

Junos OS supports point-to-multipoint (P2MP) label-switched paths (LSPs) for BGP MVPNs. BGP MVPN supports non-segmented intra-autonomous systems (ASs) and segmented inter-autonomous systems (ASs).

In order to connect PE routers that are in different areas but in the same AS and require P2MP connectivity, Junos OS allows you to segment the P2MP LSPs at the area boundary as described in Internet draft *draft-ietf-mpls-seamless-mcast-14.txt*. You can use non-segmented LSPs for low-rate multicast flows, and segmented LSPs for high-rate flows. A segmented P2MP LSP within an AS consists of the following segments:

- Ingress area segment — The ingress area segment is rooted at a PE router or autonomous system boundary router (ASBR). The leaves of this segment are PEs, ASBRs, or area border routers (ABRs).
- Backbone area segment — The backbone area segment is rooted at an ABR that is connected to the ingress area/ingress ABR.
- Egress area segment — The egress area segment is rooted at an ABR in the egress area or egress ABR.

**NOTE:** These areas can be IGP areas or areas based on BGP peer groups, where ABR can be a region border router (RBR). In either case, the transit ABRs/RBRs should be configured on the BGP route reflector (RR).

Each of the intra-area segments can be carried over provider tunnels such as P2MP RSVP-TE LSP, P2MP mLDP LSP, or ingress replication.

Segmentation of inter-area P2MP LSP occurs when the S-PMSI autodiscovery (AD) routes are advertised. This triggers the inclusion of a new BGP extended community or inter-area P2MP segmented next-hop extended community. The segmented inter-area P2MP LSP can be separated into the following three different roles:

- Ingress PE or ASBR — Ingress PE router originates S-PMSI A-D routes. If inter-region segmentation is required, then the PE router generates the S-PMSI A-D routes carrying the inter-area P2MP segmented next-hop router (S-NH) community. The inter-region segmentation can be added for any selective tunnel. The segmentation can happen based on the threshold or fan-out attributes. If the threshold is configured for a selective tunnel, then MVPN starts migrating the flow to a segmented S-PMSI on reaching the threshold rate value. The threshold attribute applies to RSVP, LDP, and IR tunnels. You can trigger the segmentation based on the fan-out attribute, which is the number of leaves. Once the number of leaf A-D routes exceeds the fan-out value, the traffic flow is moved to segmented S-PMSI. The fan-out attribute for LDP tunnels is not applicable at the ingress PE router.  
If the S-PMSI with ingress replication has configured only the threshold, then the threshold is used to trigger the migration to segmented LSP. If fan-out is also set, then the migration is triggered when the traffic rate multiplied by the number of leaf A-D routes exceeds the threshold value. The segmented



threshold and fan-out values are checked based on the existing data threshold checking interval, which by default is every 60 seconds. This prevents the flow from getting migrated too frequently.

- **Transit ABRs** — When the transit ABR (either ingress ABR or egress ABR) receives an S-PMSI A-D route with the segmentation of inter-region configured, the ABR checks if the S-PMSI is carrying a S-NH extended community attribute. If the S-NH attribute is present in the incoming S-PMSI, then the ABR checks for the tunnel-type to be carried by the S-PMSI. The ABR then generates the tunnel-type across the backbone area or the egress area .

**NOTE:** An ABR can set a template to define the provider tunnel type in each region or BGP group. The tunnel type in each region can be incoming, ingress-replication, LDP-P2MP, or RSVP-TE.

If the tunnel type is incoming, then it indicates that the tunnel type across the ABR remains the same. If the tunnel type is different across the ABR, then the transit ABR modifies the S-PMSI tunnel attribute and the S-NH attribute to its router-id and re-advertises the route to its BGP peers. If no template is configured on the ABR then the ABR simply reflects the incoming S-PMSI routes without changing any of the attributes to its BGP peers.

- **Egress PE or ASBR** — Egress PE routers or ASBRs learn the upstream node from the segmented next-hop extended community carried in the received S-PMSI A-D routes and responds with the leaf A-D routes carrying the upstream node IP address in the route target extended community (EC).

You can configure the BGP policy to accept or reject the S-PMSI A-D routes carrying the inter-area P2MP segmented next-hop community.

SEE ALSO

<a href="#">Example: Configuring Segmented Inter-Area P2MP LSP   613</a>
<a href="#">Configuring Segmented Inter-Area P2MP LSP   610</a>
<a href="#">all-regions   1255</a>
<a href="#">inter-region   1308</a>
<a href="#">inter-region-segmented   1309</a>
<a href="#">inter-region-template   1311</a>
<a href="#">region   1361</a>
<a href="#">template   1391</a>



## Configuring Segmented Inter-Area P2MP LSP

In order to connect PE routers that are in different areas but in the same AS and that require P2MP connectivity, Junos OS allows you to segment the P2MP LSPs at the area boundary as described in Internet draft *draft-ietf-mpls-seamless-mcast-14.txt*.

To configure segmented inter-area P2MP LSPs at the ingress area segment, the backbone area segment, and the egress area segment, you must do the following:

1. Configure inter-region-segmented for group, wildcard-group-inet, or wildcard-group-inet6 of selective tunnel.
  - Configure inter-region-segmented fan-out and threshold values for a multicast source or wildcard source belonging to group.
  - Specify fan-out and threshold values for a multicast source.

```
[edit routing-instances instance-name provider-tunnel selective]
user@host# set group multicast IP address source source IP address inter-region-segmented fan-out
fan-out value
user@host# set group multicast IP address source source IP address inter-region-segmented threshold
rate-value
```

- Specify fan-out and threshold values for a wildcard source.

```
[edit routing-instances instance-name provider-tunnel selective]
user@host# set group multicast IP address source wildcard-source inter-region-segmented fan-out
fan-out value
user@host# set group multicast IP address source wildcard-source inter-region-segmented threshold
rate-value
```

- Configure inter-region-segmented fan-out value for wildcard-group-inet belonging to group.

```
[edit routing-instances instance-name provider-tunnel selective]
user@host# set wildcard-group-inet wildcard-source inter-region-segmented fan-out fan-out value
```

- Configure inter-region-segmented fan-out value for wildcard-group-inet6 belonging to group.

```
[edit routing-instances instance-name provider-tunnel selective]
user@host# set wildcard-group-inet6 wildcard-source inter-region-segmented fan-out fan-out value
```

2. Configure the inter-region template on the transit ABR to specify the tunnel type to be used for a specific region or for all regions.



- Configure the inter-region template to specify the tunnel type such as ingress-replication, ldp-p2mp, and rsvp-te for a specific region.
- Specify create-new-ucast-tunnel or label-switched-path for tunnel type ingress-replication for a specific region.

```
[edit protocols mvpn]
user@host# set inter-region-template template template-name region region-name ingress-replication
create-new-ucast-tunnel
user@host# set inter-region-template template template-name region region-name ingress-replication
label-switched-path label-switched-path-template ( default-template | default-template)
```

- Specify tunnel type ldp-p2mp for a specific region.

```
[edit protocols mvpn]
user@host# set inter-region-template template template-name region region-name ldp-p2mp
```

- Specify static lsp or template for label-switched-path-template for tunnel type rsvp-te belonging to a specific region.

```
[edit protocols mvpn]
user@host# set inter-region-template template template-name region region-name rsvp-te
label-switched-path-template (default | lsp-template-name)
user@host# set inter-region-template template template-name region region-name rsvp-te static-lsp
static-lsp
```

- Configure the inter-region template to specify the tunnel type such as ingress-replication, ldp-p2mp, and rsvp-te for all regions.
- Specify create-new-ucast-tunnel or label-switched-path for tunnel type ingress-replication for all regions.

```
[edit protocols mvpn]
user@host# set inter-region-template template template-name all-regions region-name ingress-replication
create-new-ucast-tunnel
user@host# set inter-region-template template template-name all-regions region-name ingress-replication
label-switched-path label-switched-path-template ( default-template | default-template)
```

- Specify tunnel type ldp-p2mp for all regions.

```
[edit protocols mvpn]
user@host# set inter-region-template template template-name all-regions region-name ldp-p2mp
```



- Specify static lsp or template for label-switched-path-template for tunnel type rsvp-te belonging to all regions.

```
[edit protocols mvpn]
user@host# set inter-region-template template template-name all-regions region-name rsvp-te
label-switched-path-template (default | lsp-template-name)
user@host# set inter-region-template template template-name all-regions region-name rsvp-te static-lsp
static-lsp
```

3. Specify the template, which indicates the tunnel types, to be used in inter-region segmentation on the Transit ABRs.

```
[edit routing-instances instance-name provider-tunnel]
user@host# set inter-region template template-name
```

4. Specify no inter-region segmentation if you do not want the ABR to participate in the inter-region segmentation.

```
[edit routing-instances instance-name provider-tunnel]
user@host# set inter-region no-inter-region-segmentation
```

## SEE ALSO

[Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview | 608](#)

[Example: Configuring Segmented Inter-Area P2MP LSP | 613](#)

[all-regions | 1255](#)

[inter-region | 1308](#)

[inter-region-template | 1311](#)

[inter-region-segmented | 1309](#)

[region | 1361](#)

[template | 1391](#)



## Example: Configuring Segmented Inter-Area P2MP LSP

### IN THIS SECTION

- [Requirements | 613](#)
- [Overview | 613](#)
- [Configuration | 615](#)
- [Verification | 681](#)

This example shows how to segment the P2MP LSPs at the area boundary as described in Internet draft *draft-ietf-mpls-seamless-mcast-14.txt*. You can configure policies on the segmented next-hop extended community (S-NH EC) so that S-PMSI A-D routes with the S-NH EC is reflected by the ABR while all other routes are reflected by other route reflectors.

### Requirements

This example uses the following hardware and software components:

- Fourteen MX Series 5G Universal Routing Platforms
- Junos OS Release 15.1 or later running on all the routers

Before you begin:

1. Configure the device interfaces.
2. Configure OSPF.

### Overview

Starting with Junos OS Release 15.1, P2MP LSPs can be segmented at the area boundary. A segmented P2MP LSP consists of ingress area segment (Ingress PE router or ASBR), backbone area segment (Transit ABR), and egress area segment (Egress PE routers or ASBRs). Each of the intra-area segments can be carried over provider tunnels such as P2MP RSVP-TE LSP, P2MP mLDP LSP, or ingress replication. Segmentation of inter-area P2MP LSP occurs when the S-PMSI autodiscovery (AD) routes are advertised, which triggers the inclusion of a new BGP extended community or inter-area P2MP segmented next-hop extended community in the ingress PE router or ASBR, transit ABR, and egress PE routers or ASBRs.

To configure inter-region segmentation at the ingress PE router, configure the **inter-region-segmented** statement at the `[edit routing-instances instance-name provider-tunnel]` hierarchy level. To configure the




inter-region template at the transit ABRs, configure the **inter-region-template** *template-name* statement at the [edit protocols mvpn] hierarchy level. To configure inter-region segmentation at the transit ABR, configure the **inter-region** statement at the [edit routing-instance *instance-name* provider-tunnel] hierarchy level.

### Topology

In the topology shown in Figure 56 on page 614, the segmented tunnel combination is as follows:

- Ingress area tunnel — PE1 to ABR1 with IR as the tunnel.
- Backbone area tunnel — ABR1, ABR2, and ABR3 with RSVP-TE as the tunnel.
- Egress area tunnel — ABR2 to PE2 and PE4, ABR3 to PE3 with RSVP-TE as the tunnel.

Figure 56: Example Segmented Inter-Area P2MP LSP

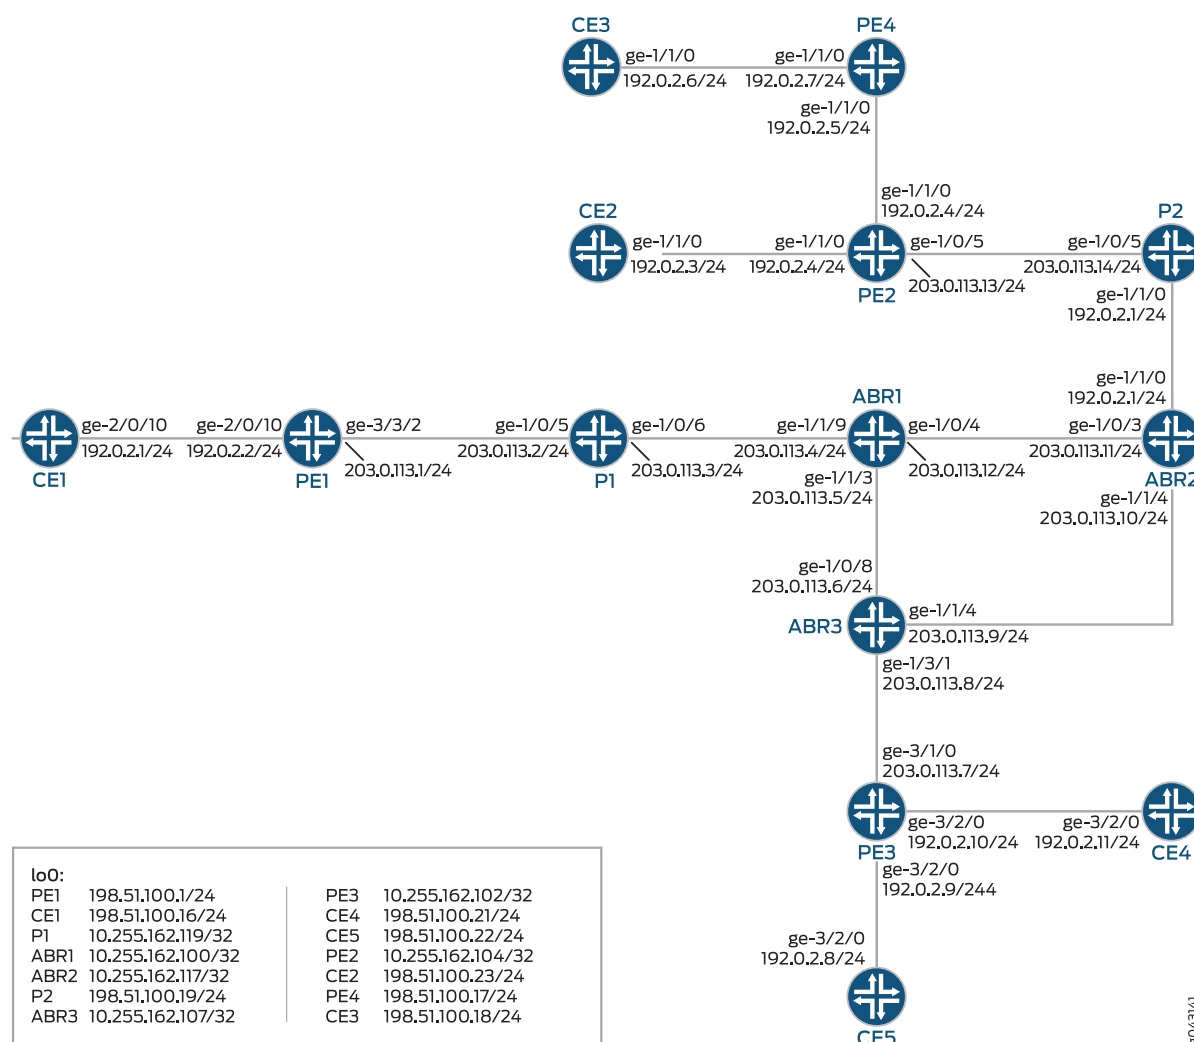



## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

#### PE1

```

set interfaces ge-2/0/10 unit 1 family inet address 192.0.2.2/24
set interfaces ge-2/0/10 unit 1 family inet6 address ::192.0.2.2/120
set interfaces ge-2/0/10 unit 1 family mpls
set interfaces ge-3/3/2 unit 0 family inet address 203.0.113.1/24
set interfaces ge-3/3/2 unit 0 family iso
set interfaces ge-3/3/2 unit 0 family inet6 address ::203.0.113.1/120
set interfaces ge-3/3/2 unit 0 family mpls
set interfaces lo0 unit 201 family inet address 198.51.100.1/24
set routing-options autonomous-system 65550
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface ge-3/3/2.0
set protocols rsvp interface lo0.0
set protocols mpls ipv6-tunneling
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-3/3/2.0
set protocols mpls interface lo0.0
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 10.255.162.109
set protocols bgp group IBGP family inet any
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP family inet-vpn multicast
set protocols bgp group IBGP family inet6 any
set protocols bgp group IBGP family inet6-vpn unicast
set protocols bgp group IBGP family inet6-mvpn signaling
set protocols bgp group IBGP family inet6-mvpn signaling
set protocols bgp group IBGP family inet-mdt signaling
set protocols bgp group IBGP neighbor 10.255.162.100
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.1 interface fxp0.0 disable
set protocols ospf area 0.0.0.1 interface ge-3/3/2.0
set protocols ospf area 0.0.0.1 interface lo0.0
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim interface all

```



```

set protocols pim interface fxp0.0 disable
set protocols pim interface lo0.0
set protocols pim default-vpn-source interface-name lo0.0
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf then accept
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-2/0/10
set routing-instances vpn1 interface lo0.201
set routing-instances vpn1 route-distinguisher 10.255.162.109:100
set routing-instances vpn1 provider-tunnel selective group 192.0.2.2/24 source 172.16.1.2/32
  ingress-replication label-switched-path
set routing-instances vpn1 provider-tunnel selective group 192.0.2.2/24 source 172.16.1.2/32
  threshold-rate 10
set routing-instances vpn1 provider-tunnel selective group 192.0.2.2/24 source 172.16.1.2/32
  inter-region-segmented threshold 0
set routing-instances vpn1 provider-tunnel selective group 192.0.2.1/24 source 172.16.1.2/32
  ingress-replication label-switched-path
set routing-instances vpn1 provider-tunnel selective group 192.0.2.1/24 source 172.16.1.2/32
  threshold-rate 0
set routing-instances vpn1 provider-tunnel selective group 192.0.2.1/24 source 172.16.1.2/32
  inter-region-segmented threshold 10
set routing-instances vpn1 provider-tunnel selective group 192.0.2.3/24 source 172.16.1.2/32
  ingress-replication label-switched-path
set routing-instances vpn1 provider-tunnel selective group 192.0.2.3/24 source 172.16.1.2/32
  threshold-rate 0
set routing-instances vpn1 provider-tunnel selective group 192.0.2.3/24 source 172.16.1.2/32
  inter-region-segmented threshold 0
set routing-instances vpn1 provider-tunnel family inet ingress-replication label-switched-path
set routing-instances vpn1 provider-tunnel family inet6 ingress-replication label-switched-path
set routing-instances vpn1 vrf-target target:123:1
set routing-instances vpn1 vrf-table-label
set routing-instances vpn1 protocols ospf export bgp-to-ospf
set routing-instances vpn1 protocols ospf area 0.0.0.1 interface all
set routing-instances vpn1 protocols ospf area 0.0.0.1 interface lo0.201
set routing-instances vpn1 protocols ospf3 export bgp-to-ospf
set routing-instances vpn1 protocols ospf3 area 0.0.0.1 interface all
set routing-instances vpn1 protocols pim dense-groups 192.0.2.39/24
set routing-instances vpn1 protocols pim dense-groups 192.0.2.40/24
set routing-instances vpn1 protocols pim rp local family inet address 198.51.100.1
set routing-instances vpn1 protocols pim rp static address ::198.51.100.1
set routing-instances vpn1 protocols pim interface all mode sparse-dense

```



```

set interfaces ge-2/0/3 unit 0 family inet address 172.16.1.1/24
set interfaces ge-2/0/3 unit 0 family iso
set interfaces ge-2/0/3 unit 0 family inet6 address 0000:0000:0000:0000:172:2:1:1/120
set interfaces ge-2/0/3 unit 0 family mpls
set interfaces ge-2/0/10 unit 101 family inet address 192.0.2.1/24
set interfaces ge-2/0/10 unit 101 family inet6 address ::192.0.2.1/120
set interfaces lo0 unit 1 family inet address 198.51.100.16/24
set interfaces lo0 unit 1 family inet6 address abcd::198:51:100:16/128
set protocols igmp interface ge-2/0/3.0 version 3
set protocols ospf area 0.0.0.1 interface all
set protocols ospf3 area 0.0.0.1 interface all
set protocols pim dense-groups 192.0.2.39/24
set protocols pim dense-groups 192.0.2.40/24
set protocols pim rp static address 198.51.100.1
set protocols pim rp static address ::198.51.100.1
set protocols pim interface all mode sparse-dense
set protocols pim interface ge-2/0/10.101
set protocols pim interface ge-2/0/3.0
set protocols pim interface lo0.1

```

P1

```

set interfaces ge-1/0/5 unit 0 family inet address 203.0.113.2/24
set interfaces ge-1/0/5 unit 0 family iso
set interfaces ge-1/0/5 unit 0 family inet6 address ::203.0.113.2/120
set interfaces ge-1/0/5 unit 0 family mpls
set interfaces ge-1/0/6 unit 0 family inet address 203.0.113.3/24
set interfaces ge-1/0/6 unit 0 family iso
set interfaces ge-1/0/6 unit 0 family inet6 address ::203.0.113.3/120
set interfaces ge-1/0/6 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 203.0.113.0/24
set interfaces lo0 unit 0 family inet address 10.255.162.119/32 primary
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface ge-1/0/5.0
set protocols rsvp interface ge-1/0/6.0
set protocols rsvp interface lo0.0
set protocols mpls ipv6-tunneling
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-1/0/5.0
set protocols mpls interface ge-1/0/6.0

```



```

set protocols mpls interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.1 interface fxp0.0 disable
set protocols ospf area 0.0.0.1 interface ge-1/0/5.0
set protocols ospf area 0.0.0.1 interface ge-1/0/6.0
set protocols ospf area 0.0.0.1 interface lo0.0
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim interface all
set protocols pim interface fxp0.0 disable
set protocols pim interface lo0.0

```

## ABR1

```

set interfaces ge-1/0/4 unit 0 family inet address 203.0.113.12/24
set interfaces ge-1/0/4 unit 0 family iso
set interfaces ge-1/0/4 unit 0 family inet6 address ::203.0.113.12/120
set interfaces ge-1/0/4 unit 0 family mpls
set interfaces ge-1/1/3 unit 0 family inet address 203.0.113.5/24
set interfaces ge-1/1/3 unit 0 family iso
set interfaces ge-1/1/3 unit 0 family inet6 address ::203.0.113.5/120
set interfaces ge-1/1/3 unit 0 family mpls
set interfaces ge-1/1/9 unit 0 family inet address 203.0.113.4/24
set interfaces ge-1/1/9 unit 0 family iso
set interfaces ge-1/1/9 unit 0 family inet6 address ::203.0.113.4/120
set interfaces ge-1/1/9 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 203.0.113.0/24
set interfaces lo0 unit 0 family inet address 10.255.162.100/32 primary
set routing-options autonomous-system 65550
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface ge-1/1/9.0
set protocols rsvp interface ge-1/0/4.0
set protocols rsvp interface ge-1/1/3.0
set protocols rsvp interface lo0.0
set protocols rsvp interface all
set protocols mpls ipv6-tunneling
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-1/1/9.0
set protocols mpls interface ge-1/0/4.0
set protocols mpls interface ge-1/1/3.0

```



```

set protocols mpls interface lo0.0
set protocols mpls interface all
set protocols bgp group IBGP_1 type internal
set protocols bgp group IBGP_1 local-address 10.255.162.100
set protocols bgp group IBGP_1 family inet any
set protocols bgp group IBGP_1 family inet-vpn unicast
set protocols bgp group IBGP_1 family inet-vpn multicast
set protocols bgp group IBGP_1 family inet6 any
set protocols bgp group IBGP_1 family inet6-vpn unicast
set protocols bgp group IBGP_1 family inet-mvpn signaling
set protocols bgp group IBGP_1 family inet6-mvpn signaling
set protocols bgp group IBGP_1 family inet-mdt signaling
set protocols bgp group IBGP_1 cluster 0.0.0.1
set protocols bgp group IBGP_1 neighbor 10.255.162.109
set protocols bgp group IBGP_0 type internal
set protocols bgp group IBGP_0 local-address 10.255.162.100
set protocols bgp group IBGP_0 family inet any
set protocols bgp group IBGP_0 family inet-vpn unicast
set protocols bgp group IBGP_0 family inet-vpn multicast
set protocols bgp group IBGP_0 family inet6 any
set protocols bgp group IBGP_0 family inet6-vpn unicast
set protocols bgp group IBGP_0 family inet-mvpn signaling
set protocols bgp group IBGP_0 family inet6-mvpn signaling
set protocols bgp group IBGP_0 family inet-mdt signaling
set protocols bgp group IBGP_0 neighbor 10.255.162.117
set protocols bgp group IBGP_0 neighbor 10.255.162.107
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.1 interface fxp0.0 disable
set protocols ospf area 0.0.0.1 interface ge-1/1/9.0
set protocols ospf area 0.0.0.0 interface ge-1/0/4.0
set protocols ospf area 0.0.0.0 interface ge-1/1/3.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim interface all
set protocols pim interface fxp0.0 disable
set protocols pim interface lo0.0
set protocols mvpn inter-region-template template template_1 region IBGP_0 rsvp-te
    label-switched-path-template default-template
set protocols mvpn inter-region-template template template_2 region IBGP_0 ldp-p2mp
set protocols mvpn inter-region-template template template_3 region IBGP_0 ingress-replication
    create-new-ucast-tunnel

```



```

set protocols mvpn inter-region-template template template_3 region IBGP_0 ingress-replication
  label-switched-path label-switched-path-template default-template
set protocols mvpn inter-region-template template template_4 all-regions incoming
set protocols mvpn inter-region-template template template_5 region IBGP_0 rsvp-te static-lsp
  ABR1_to_ABR3
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 route-distinguisher 10.255.162.100:100
set routing-instances vpn1 provider-tunnel inter-region template template_1
set routing-instances vpn1 vrf-target target:123:1
set routing-instances vpn1 vrf-table-label

```

## ABR2

```

set interfaces ge-1/0/3 unit 0 family inet address 203.0.113.11/24
set interfaces ge-1/0/3 unit 0 family iso
set interfaces ge-1/0/3 unit 0 family inet6 address ::203.0.113.11/120
set interfaces ge-1/0/3 unit 0 family mpls
set interfaces ge-1/1/4 unit 0 family inet address 203.0.113.10/24
set interfaces ge-1/1/4 unit 0 family iso
set interfaces ge-1/1/4 unit 0 family inet6 address ::203.0.113.10/120
set interfaces ge-1/1/4 unit 0 family mpls
set interfaces ge-1/1/10 unit 1 family inet address 192.0.2.2/24
set interfaces ge-1/1/10 unit 1 family inet6 address ::192.0.2.2/120
set interfaces ge-1/1/10 unit 1 family mpls
set interfaces lo0 unit 0 family inet address 203.0.113.0/24
set interfaces lo0 unit 0 family inet address 10.255.162.117/32 primary
set routing-options autonomous-system 65550
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface lo0.0
set protocols rsvp interface all
set protocols mpls ipv6-tunneling
set protocols mpls interface fxp0.0 disable
set protocols mpls interface lo0.0
set protocols mpls interface all
set protocols bgp group IBGP_2 type internal
set protocols bgp group IBGP_2 local-address 10.255.162.117
set protocols bgp group IBGP_2 family inet any
set protocols bgp group IBGP_2 family inet-vpn unicast
set protocols bgp group IBGP_2 family inet-vpn multicast
set protocols bgp group IBGP_2 family inet6 any

```



```

set protocols bgp group IBGP_2 family inet6-vpn unicast
set protocols bgp group IBGP_2 family inet-mvpn signaling
set protocols bgp group IBGP_2 family inet6-mvpn signaling
set protocols bgp group IBGP_2 family inet-mdt signaling
set protocols bgp group IBGP_2 cluster 0.0.0.2
set protocols bgp group IBGP_2 neighbor 10.255.162.104
set protocols bgp group IBGP_2 neighbor 198.51.100.17
set protocols bgp group IBGP_0 type internal
set protocols bgp group IBGP_0 local-address 10.255.162.117
set protocols bgp group IBGP_0 family inet any
set protocols bgp group IBGP_0 family inet-vpn unicast
set protocols bgp group IBGP_0 family inet-vpn multicast
set protocols bgp group IBGP_0 family inet6 any
set protocols bgp group IBGP_0 family inet6-vpn unicast
set protocols bgp group IBGP_0 family inet-mvpn signaling
set protocols bgp group IBGP_0 family inet6-mvpn signaling
set protocols bgp group IBGP_0 family inet-mdt signaling
set protocols bgp group IBGP_0 neighbor 10.255.162.100
set protocols bgp group IBGP_0 neighbor 10.255.162.107
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface ge-1/0/3.0
set protocols ospf area 0.0.0.0 interface ge-1/1/4.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.2 interface ge-1/1/10.1
set protocols ldp interface all
set protocols p2mp
set protocols pim interface all
set protocols pim interface fxp0.0 disable
set protocols pim interface lo0.0
set protocols mvpn inter-region-template template template_1 region IBGP_2 rsvp-te
    label-switched-path-template default-template
set protocols mvpn inter-region-template template template_2 region IBGP_2 ldp-p2mp
set protocols mvpn inter-region-template template template_3 region IBGP_2 ingress-replication
    create-new-ucast-tunnel
set protocols mvpn inter-region-template template template_3 region IBGP_2 ingress-replication
    label-switched-path label-switched-path-template default-template
set protocols mvpn inter-region-template template template_4 all-regions incoming
set protocols mvpn inter-region-template template template_5 region IBGP_2 rsvp-te static-lsp
    ABR2_to_PE2_3
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 route-distinguisher 10.255.162.117:100

```



```

set routing-instances vpn1 provider-tunnel inter-region template template_1
set routing-instances vpn1 vrf-target target:123:1
set routing-instances vpn1 vrf-table-label

```

## P2

```

set interfaces ge-1/0/5 unit 0 family inet address 203.0.113.14/24
set interfaces ge-1/0/5 unit 0 family iso
set interfaces ge-1/0/5 unit 0 family inet6 address ::203.0.113.14/120
set interfaces ge-1/0/5 unit 0 family mpls
set interfaces ge-1/1/10 unit 101 family inet address 192.0.2.1/24
set interfaces ge-1/1/10 unit 101 family inet6 address ::192.0.2.1/120
set interfaces ge-1/1/10 unit 101 family mpls
set interfaces lo0 unit 1 family inet address 198.51.100.19/24
set interfaces lo0 unit 1 family inet6 address abcd::198:51:100:19/128
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface all
set protocols rsvp interface lo0.1
set protocols mpls ipv6-tunneling
set protocols mpls interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface lo0.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.2 interface all
set protocols ospf area 0.0.0.2 interface lo0.1
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim dense-groups 192.0.2.39/24
set protocols pim dense-groups 192.0.2.40/24
set protocols pim rp static address 198.51.100.1
set protocols pim rp static address ::198.51.100.1
set protocols pim interface all mode sparse-dense

```

## ABR3

```

set interfaces ge-1/0/8 unit 0 family inet address 203.0.113.6/24
set interfaces ge-1/0/8 unit 0 family iso

```



```

set interfaces ge-1/0/8 unit 0 family inet6 address ::203.0.113.6/120
set interfaces ge-1/0/8 unit 0 family mpls
set interfaces ge-1/1/4 unit 0 family inet address 203.0.113.9/24
set interfaces ge-1/1/4 unit 0 family iso
set interfaces ge-1/1/4 unit 0 family inet6 address ::203.0.113.9/120
set interfaces ge-1/1/4 unit 0 family mpls
set interfaces ge-1/3/1 unit 0 family inet address 203.0.113.8/24
set interfaces ge-1/3/1 unit 0 family iso
set interfaces ge-1/3/1 unit 0 family inet6 address ::203.0.113.8/120
set interfaces ge-1/3/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 203.0.113.0/24
set interfaces lo0 unit 0 family inet address 10.255.162.107/32 primary
set routing-options autonomous-system 65550
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface lo0.0
set protocols mpls ipv6-tunneling
set protocols mpls label-switched-path ABR3_to_PE3 from 10.255.162.107
set protocols mpls label-switched-path ABR3_to_PE3 to 10.255.162.102
set protocols mpls label-switched-path ABR3_to_PE3 p2mp vpn1
set protocols mpls label-switched-path ABR3_to_ABR1 from 10.255.162.107
set protocols mpls label-switched-path ABR3_to_ABR1 to 10.255.162.100
set protocols mpls label-switched-path ABR3_to_ABR1 p2mp vpn1
set protocols mpls label-switched-path ABR3_to_ABR2 from 10.255.162.107
set protocols mpls label-switched-path ABR3_to_ABR2 to 10.255.162.117
set protocols mpls label-switched-path ABR3_to_ABR2 p2mp vpn1
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface lo0.0
set protocols bgp group IBGP_3 type internal
set protocols bgp group IBGP_3 local-address 10.255.162.107
set protocols bgp group IBGP_3 family inet any
set protocols bgp group IBGP_3 family inet-vpn unicast
set protocols bgp group IBGP_3 family inet-vpn multicast
set protocols bgp group IBGP_3 family inet6 any
set protocols bgp group IBGP_3 family inet6-vpn unicast
set protocols bgp group IBGP_3 family inet-mvpn signaling
set protocols bgp group IBGP_3 family inet6-mvpn signaling
set protocols bgp group IBGP_3 family inet-mdt signaling
set protocols bgp group IBGP_3 cluster 0.0.0.3
set protocols bgp group IBGP_3 neighbor 10.255.162.102
set protocols bgp group IBGP_0 type internal

```



```

set protocols bgp group IBGP_0 local-address 10.255.162.107
set protocols bgp group IBGP_0 family inet any
set protocols bgp group IBGP_0 family inet-vpn unicast
set protocols bgp group IBGP_0 family inet-vpn multicast
set protocols bgp group IBGP_0 family inet6 any
set protocols bgp group IBGP_0 family inet6-vpn unicast
set protocols bgp group IBGP_0 family inet-mvpn signaling
set protocols bgp group IBGP_0 family inet6-mvpn signaling
set protocols bgp group IBGP_0 family inet-mdt signaling
set protocols bgp group IBGP_0 neighbor 10.255.162.100
set protocols bgp group IBGP_0 neighbor 10.255.162.117
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface ge-1/0/8.0
set protocols ospf area 0.0.0.0 interface ge-1/1/4.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.3 interface ge-1/3/1.0
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim interface all
set protocols pim interface fxp0.0 disable
set protocols pim interface lo0.0
set protocols mvpn inter-region-template template template_1 region IBGP_3 rsvp-te
    label-switched-path-template default-template
set protocols mvpn inter-region-template template template_2 region IBGP_3 ldp-p2mp
set protocols mvpn inter-region-template template template_3 region IBGP_3 ingress-replication
    create-new-ucast-tunnel
set protocols mvpn inter-region-template template template_3 region IBGP_3 ingress-replication
    label-switched-path label-switched-path-template default-template
set protocols mvpn inter-region-template template template_4 all-regions incoming
set protocols mvpn inter-region-template template template_5 region IBGP_3 rsvp-te static-lsp
    ABR3_to_PE3
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 route-distinguisher 10.255.162.107:100
set routing-instances vpn1 provider-tunnel inter-region template template_1
set routing-instances vpn1 vrf-target target:123:1
set routing-instances vpn1 vrf-table-label

```



```

set interfaces ge-3/0/1 unit 0 family inet address 203.0.113.15/24
set interfaces ge-3/0/1 unit 0 family iso
set interfaces ge-3/0/1 unit 0 family inet6 address ::203.0.113.15/120
set interfaces ge-3/0/1 unit 0 family mpls
set interfaces ge-3/1/0 unit 0 family inet address 203.0.113.7/24
set interfaces ge-3/1/0 unit 0 family iso
set interfaces ge-3/1/0 unit 0 family inet6 address ::203.0.113.7/120
set interfaces ge-3/1/0 unit 0 family mpls
set interfaces ge-3/2/0 unit 1 family inet address 192.0.2.9/24
set interfaces ge-3/2/0 unit 1 family inet6 address ::192.0.2.9/120
set interfaces ge-3/2/0 unit 1 family mpls
set interfaces ge-3/2/0 unit 2 family inet address 192.0.2.10/24
set interfaces ge-3/2/0 unit 2 family inet6 address ::192.0.2.10/120
set interfaces ge-3/2/0 unit 2 family mpls
set interfaces lo0 unit 0 family inet address 203.0.113.0/24
set interfaces lo0 unit 0 family inet address 10.255.162.102/32 primary
set routing-options autonomous-system 65550
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface all
set protocols rsvp interface lo0.0
set protocols mpls ipv6-tunneling
set protocols mpls label-switched-path PE3_to_PE2 from 10.255.162.102
set protocols mpls label-switched-path PE3_to_PE2 to 10.255.162.104
set protocols mpls label-switched-path PE3_to_PE2 p2mp vpn1
set protocols mpls label-switched-path PE3_to_PE4 from 10.255.162.102
set protocols mpls label-switched-path PE3_to_PE4 to 198.51.100.17
set protocols mpls label-switched-path PE3_to_PE4 p2mp vpn1
set protocols mpls label-switched-path PE3_to_PE1 from 10.255.162.102
set protocols mpls label-switched-path PE3_to_PE1 to 10.255.162.109
set protocols mpls label-switched-path PE3_to_PE1 p2mp vpn1
set protocols mpls label-switched-path PE3_to_ABR3 from 10.255.162.102
set protocols mpls label-switched-path PE3_to_ABR3 to 10.255.162.107
set protocols mpls label-switched-path PE3_to_ABR3 p2mp vpn1
set protocols mpls interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface lo0.0
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 10.255.162.102
set protocols bgp group IBGP family inet any
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP family inet-vpn multicast
set protocols bgp group IBGP family inet6 any

```



```

set protocols bgp group IBGP family inet6-vpn unicast
set protocols bgp group IBGP family inet-mvpn signaling
set protocols bgp group IBGP family inet6-mvpn signaling
set protocols bgp group IBGP family inet-mdt signaling
set protocols bgp group IBGP neighbor 10.255.162.107
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.3 interface fxp0.0 disable
set protocols ospf area 0.0.0.3 interface all
set protocols ospf area 0.0.0.3 interface lo0.0
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim interface all
set protocols pim interface fxp0.0 disable
set protocols pim interface lo0.0
set protocols pim default-vpn-source interface-name lo0.0
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf then accept
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-3/2/0.1
set routing-instances vpn1 interface ge-3/2/0.2
set routing-instances vpn1 route-distinguisher 10.255.162.102:100
set routing-instances vpn1 provider-tunnel family inet ingress-replication label-switched-path
set routing-instances vpn1 provider-tunnel family inet6 ingress-replication label-switched-path
set routing-instances vpn1 vrf-target target:123:1
set routing-instances vpn1 vrf-table-label
set routing-instances vpn1 protocols ospf export bgp-to-ospf
set routing-instances vpn1 protocols ospf area 0.0.0.3 interface all
set routing-instances vpn1 protocols ospf3 export bgp-to-ospf
set routing-instances vpn1 protocols ospf3 area 0.0.0.3 interface all
set routing-instances vpn1 protocols pim dense-groups 192.0.2.39/24
set routing-instances vpn1 protocols pim dense-groups 192.0.2.40/24
set routing-instances vpn1 protocols pim rp static address 198.51.100.1
set routing-instances vpn1 protocols pim rp static address ::198.51.100.1
set routing-instances vpn1 protocols pim interface all mode sparse-dense
set routing-instances vpn1 protocols mvpn mvpn-mode spt-only

```

#### CE4

```

set interfaces ge-3/1/1 unit 0 family inet address 172.16.0.1/24
set interfaces ge-3/1/1 unit 0 family iso

```



```

set interfaces ge-3/1/1 unit 0 family inet6 address 0000:0000:0000:0000:172:16:0:1/120
set interfaces ge-3/1/1 unit 0 family mpls
set interfaces ge-3/2/0 unit 102 description "Link to PE3_1 from CE3_2"
set interfaces ge-3/2/0 unit 102 family inet address 192.0.2.11/24
set interfaces ge-3/2/0 unit 102 family inet6 address ::192.0.2.11/120
set interfaces ge-3/2/0 unit 102 family mpls
set interfaces lo0 unit 2 family inet address 198.51.100.21/24
set interfaces lo0 unit 2 family inet6 address abcd::198:51:100:21/128
set protocols igmp interface ge-3/1/1.0 version 3
set protocols mld interface ge-3/1/1.0 version 2
set protocols ospf area 0.0.0.3 interface all
set protocols ospf3 area 0.0.0.3 interface all
set protocols pim dense-groups 192.0.2.39/24
set protocols pim dense-groups 192.0.2.40/24
set protocols pim rp static address 198.51.100.1
set protocols pim rp static address ::198.51.100.1
set protocols pim interface all mode sparse-dense

```

## CE5

```

set interfaces ge-3/2/0 unit 101 family inet address 192.0.2.8/24
set interfaces ge-3/2/0 unit 101 family inet6 address ::192.0.2.8/120
set interfaces ge-3/2/0 unit 101 family mpls
set interfaces lo0 unit 1 family inet address 198.51.100.22/24
set interfaces lo0 unit 1 family inet6 address abcd::198:51:100:22/128
set protocols ospf area 0.0.0.3 interface all
set protocols ospf3 area 0.0.0.3 interface all
set protocols pim dense-groups 192.0.2.39/24
set protocols pim dense-groups 192.0.2.40/24
set protocols pim rp static address 198.51.100.1
set protocols pim rp static address ::198.51.100.1
set protocols pim interface all mode sparse-dense

```

## PE2

```

set interfaces ge-1/0/5 unit 0 family inet address 203.0.113.13/24
set interfaces ge-1/0/5 unit 0 family iso

```



```

set interfaces ge-1/0/5 unit 0 family inet6 address ::203.0.113.13/120
set interfaces ge-1/0/5 unit 0 family mpls
set interfaces ge-1/1/00 unit 1 family inet address 192.0.2.4/24
set interfaces ge-1/1/0 unit 1 family inet6 address ::192.0.2.4/120
set interfaces ge-1/1/0 unit 1 family mpls
set interfaces ge-1/1/0 unit 2 family inet address 192.0.2.12/24
set interfaces ge-1/1/0 unit 2 family inet6 address ::192.0.2.12/120
set interfaces ge-1/1/0 unit 2 family mpls
set interfaces vt-1/1/0 unit 1 family inet
set interfaces vt-1/1/0 unit 1 family inet6
set interfaces lo0 unit 0 family inet address 203.0.113.0/24
set interfaces lo0 unit 0 family inet address 10.255.162.104/24 primary
set interfaces lo0 unit 201 family inet6 address ::198.51.100.1/128
set routing-options autonomous-system 65550
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface all
set protocols rsvp interface lo0.0
set protocols mpls ipv6-tunneling
set protocols mpls label-switched-path PE2_to_PE3 from 10.255.162.104
set protocols mpls label-switched-path PE2_to_PE3 to 10.255.162.102
set protocols mpls label-switched-path PE2_to_PE3 p2mp vpn1
set protocols mpls label-switched-path PE2_to_PE4 from 10.255.162.104
set protocols mpls label-switched-path PE2_to_PE4 to 198.51.100.17
set protocols mpls label-switched-path PE2_to_PE4 p2mp vpn1
set protocols mpls label-switched-path PE2_to_PE1 from 10.255.162.104
set protocols mpls label-switched-path PE2_to_PE1 to 10.255.162.109
set protocols mpls label-switched-path PE2_to_PE1 p2mp vpn1
set protocols mpls label-switched-path PE2_to_ABR2 from 10.255.162.104
set protocols mpls label-switched-path PE2_to_ABR2 to 10.255.162.117
set protocols mpls label-switched-path PE2_to_ABR2 p2mp vpn1
set protocols mpls interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface lo0.0
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 10.255.162.104
set protocols bgp group IBGP family inet any
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP family inet-vpn multicast
set protocols bgp group IBGP family inet6 any
set protocols bgp group IBGP family inet6-vpn unicast
set protocols bgp group IBGP family inet-mvpn signaling
set protocols bgp group IBGP family inet6-mvpn signaling

```



```

set protocols bgp group IBGP family inet-mdt signaling
set protocols bgp group IBGP neighbor 10.255.162.117
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.2 interface fxp0.0 disable
set protocols ospf area 0.0.0.2 interface all
set protocols ospf area 0.0.0.2 interface lo0.0
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim interface all
set protocols pim interface fxp0.0 disable
set protocols pim interface lo0.0
set protocols pim default-vpn-source interface-name lo0.0
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf then accept
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-1/1/0.1
set routing-instances vpn1 interface vt-1/1/0.1 multicast
set routing-instances vpn1 interface lo0.201
set routing-instances vpn1 route-distinguisher 10.255.162.104:100
set routing-instances vpn1 provider-tunnel family inet ingress-replication label-switched-path
set routing-instances vpn1 provider-tunnel family inet6 ingress-replication label-switched-path
set routing-instances vpn1 vrf-target target:123:1
set routing-instances vpn1 vrf-table-label
set routing-instances vpn1 protocols ospf export bgp-to-ospf
set routing-instances vpn1 protocols ospf area 0.0.0.2 interface all
set routing-instances vpn1 protocols ospf area 0.0.0.2 interface lo0.201
set routing-instances vpn1 protocols ospf3 export bgp-to-ospf
set routing-instances vpn1 protocols ospf3 area 0.0.0.2 interface all
set routing-instances vpn1 protocols pim dense-groups 192.0.2.39/24
set routing-instances vpn1 protocols pim dense-groups 192.0.2.40/24
set routing-instances vpn1 protocols pim rp local family inet6 address ::198.51.100.1
set routing-instances vpn1 protocols pim rp static address 198.51.100.1
set routing-instances vpn1 protocols pim interface all mode sparse-dense
set routing-instances vpn1 protocols mvpn mvpn-mode spt-only

```

## CE2

```

set interfaces ge-1/0/0 unit 0 family inet address 172.17.1.1/24
set l interfaces ge-1/0/0 unit 0 family iso
set interfaces ge-1/0/0 unit 0 family inet6 address 0000:0000:0000:0000:172:17:1:1/120

```



```

set interfaces ge-1/0/0 unit 0 family mpls
set interfaces ge-1/1/0 unit 101 family inet address 192.0.2.3/24
set interfaces ge-1/1/0 unit 101 family inet6 address ::192.0.2.3/120
set interfaces ge-1/1/0 unit 101 family mpls
set interfaces lo0 unit 1 family inet address 198.51.100.23/24
set interfaces lo0 unit 1 family inet6 address abcd::198:51:100:23/128
set protocols igmp interface ge-1/0/0.0 version 3
set protocols mld interface ge-1/0/0.0 version 2
set protocols ospf area 0.0.0.2 interface all
set protocols ospf3 area 0.0.0.2 interface all
set protocols pim dense-groups 192.0.2.39/24
set protocols pim dense-groups 192.0.2.40/24
set protocols pim rp static address 198.51.100.1
set protocols pim rp static address ::198.51.100.1
set protocols pim interface all mode sparse-dense

```

#### PE4

```

set interfaces ge-1/1/0 unit 3 family inet address 192.0.2.7/24
set interfaces ge-1/1/0 unit 3 family inet6 address ::192.0.2.7/120
set interfaces ge-1/1/0 unit 3 family mpls
set interfaces ge-1/1/0 unit 102 family inet address 192.0.2.5/24
set interfaces ge-1/1/0 unit 102 family inet6 address ::192.0.2.5/120
set interfaces ge-1/1/0 unit 102 family mpls
set interfaces vt-1/1/0 unit 0 family inet
set interfaces vt-1/1/0 unit 0 family inet6
set interfaces lo0 unit 2 family inet address 198.51.100.17/24
set interfaces lo0 unit 2 family inet6 address abcd::198:51:100:17/128
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface all
set protocols rsvp interface lo0.2
set protocols mpls ipv6-tunneling
set protocols mpls label-switched-path PE4_to_PE3 from 198.51.100.17
set protocols mpls label-switched-path PE4_to_PE3 to 10.255.162.102
set protocols mpls label-switched-path PE4_to_PE2 from 198.51.100.17
set protocols mpls label-switched-path PE4_to_PE2 to 10.255.162.104
set protocols mpls label-switched-path PE4_to_PE1 from 198.51.100.17
set protocols mpls label-switched-path PE4_to_PE1 to 10.255.162.109
set protocols mpls label-switched-path PE4_to_ABR2 from 198.51.100.17
set protocols mpls label-switched-path PE4_to_ABR2 to 10.255.162.117

```



```

set protocols mpls interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface lo0.2
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 198.51.100.17
set protocols bgp group IBGP family inet any
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP family inet-vpn multicast
set protocols bgp group IBGP family inet6 any
set protocols bgp group IBGP family inet6-vpn unicast
set protocols bgp group IBGP family inet-mvpn signaling
set protocols bgp group IBGP family inet6-mvpn signaling
set protocols bgp group IBGP family inet-mdt signaling
set protocols bgp group IBGP neighbor 10.255.162.117
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.2 interface fxp0.0 disable
set protocols ospf area 0.0.0.2 interface all
set protocols ospf area 0.0.0.2 interface lo0.2
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim interface all
set protocols pim interface fxp0.0 disable
set protocols pim interface lo0.2
set protocols pim default-vpn-source interface-name lo0.2
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf then accept
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface vt-1/1/0.0 multicast
set routing-instances vpn1 interface ge-1/1/0.3
set routing-instances vpn1 route-distinguisher 198.51.100.17:100
set routing-instances vpn1 provider-tunnel family inet ingress-replication label-switched-path
set routing-instances vpn1 provider-tunnel family inet6 ingress-replication label-switched-path
set routing-instances vpn1 vrf-target target:123:1
set routing-instances vpn1 vrf-table-label
set routing-instances vpn1 protocols ospf export bgp-to-ospf
set routing-instances vpn1 protocols ospf area 0.0.0.2 interface all
set routing-instances vpn1 protocols ospf3 export bgp-to-ospf
set routing-instances vpn1 protocols ospf3 area 0.0.0.2 interface all
set routing-instances vpn1 protocols pim dense-groups 192.0.2.39/24
set routing-instances vpn1 protocols pim dense-groups 192.0.2.40/24
set routing-instances vpn1 protocols pim rp static address 198.51.100.1
set routing-instances vpn1 protocols pim rp static address ::198.51.100.1

```



```

set routing-instances vpn1 protocols pim interface all mode sparse-dense
set routing-instances vpn1 protocols mvpn mvpn-mode spt-only
set routing-options autonomous-system 65550

```

### CE3

```

set interfaces ge-1/1/0 unit 103 family inet address 192.0.2.6/24
set interfaces ge-1/1/0 unit 103 family inet6 address ::192.0.2.6/120
set interfaces ge-1/1/0 unit 103 family mpls
set interfaces ge-2/1/1 unit 0 family inet address 172.17.2.1/24
set interfaces ge-2/1/1 unit 0 family iso
set interfaces ge-2/1/1 unit 0 family inet6 address 0000:0000:0000:0000:172:17:2:1/120
set interfaces ge-2/1/1 unit 0 family mpls
set interfaces lo0 unit 3 family inet address 198.51.100.18/24
set interfaces lo0 unit 3 family inet6 address abcd::198:51:100:18/128
set protocols igmp interface ge-2/1/1.0 version 3
set protocols mld interface ge-2/1/1.0 version 2
set protocols ospf area 0.0.0.2 interface all
set protocols ospf3 area 0.0.0.2 interface all
set protocols pim dense-groups 192.0.2.39/24
set protocols pim dense-groups 192.0.2.40/24
set protocols pim rp static address 198.51.100.1
set protocols pim rp static address ::198.51.100.1
set protocols pim interface all mode sparse-dense

```

### Configuring PE1

#### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the interfaces.

```

[edit interfaces]
user@PE1# set ge-2/0/10 unit 1 family inet address 192.0.2.2/24
user@PE1# set ge-2/0/10 unit 1 family inet6 address ::192.0.2.2/120
user@PE1# set ge-2/0/10 unit 1 family mpls

```



```

user@PE1# set ge-3/3/2 unit 0 family inet address 203.0.113.1/24
user@PE1# set ge-3/3/2 unit 0 family iso
user@PE1# set ge-3/3/2 unit 0 family inet6 address ::203.0.113.1/120
user@PE1# set ge-3/3/2 unit 0 family mpls

user@PE1# set lo0 unit 201 family inet address 198.51.100.1/24

```

2. Configure the autonomous system number.

```

[edit routing-options]
user@PE1# set autonomous-system 65550

```

3. Disable RSVP on the management interface and enable RSVP on the interfaces.

```

[edit protocols rsvp]
user@PE1# set interface fxp0.0 disable
user@PE1# set interface ge-3/3/2.0
user@PE1# set interface lo0.0

```

4. Enable IPv6 tunneling.

```

[edit protocols mpls]
user@PE1# set ipv6-tunneling

```

5. Disable MPLS on the management interface and enable MPLS on the interfaces.

```

[edit protocols mpls]
user@PE1# set interface fxp0.0 disable
user@PE1# set interface ge-3/3/2.0
user@PE1# set interface lo0.0

```

6. Configure the BGP protocol.

```

[edit protocols bgp]
user@PE1# set group IBGP type internal
user@PE1# set group IBGP local-address 10.255.162.109
user@PE1# set group IBGP family inet any
user@PE1# set group IBGP family inet-vpn unicast
user@PE1# set group IBGP family inet-vpn multicast

```



```

user@PE1# set group IBGP family inet6 any
user@PE1# set group IBGP family inet6-vpn unicast
user@PE1# set group IBGP family inet6-mvpn signaling
user@PE1# set group IBGP family inet6-mvpn signaling
user@PE1# set group IBGP family inet-mdt signaling
user@PE1# set group IBGP neighbor 10.255.162.100

```

7. Configure OSPF traffic engineering attributes and enable OSPF on the interfaces.

```

[edit protocols ospf]
user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.1 interface fxp0.0 disable
user@PE1# set area 0.0.0.1 interface ge-3/3/2.0
user@PE1# set area 0.0.0.1 interface lo0.0

```

8. Enable LDP on all the interfaces and advertise P2MP capability to peers.

```

[edit protocols ldp]
user@PE1# set interface all
user@PE1# set p2mp

```

9. Configure PIM on the interfaces.

```

[edit protocols pim]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
user@PE1# set interface lo0.0
user@PE1# set default-vpn-source interface-name lo0.0

```

10. Configure the routing policy.

```

[edit policy-options policy-statement]
user@PE1# set bgp-to-ospf from protocol bgp
user@PE1# set bgp-to-ospf then accept

```

11. Configure the routing instance type, interface, and the route distinguisher for the routing instance.

```

[edit routing-instances]
user@PE1# set vpn1 instance-type vrf

```



```

user@PE1# set vpn1 interface ge-2/0/10
user@PE1# set vpn1 interface lo0.201
user@PE1# set vpn1 route-distinguisher 10.255.162.109:100

```

12. Configure provider tunnel attributes for the routing instance.

```

[edit routing-instances]
user@PE1# set vpn1 provider-tunnel selective group 192.0.2.2/24 source 172.16.1.2/32 ingress-replication
label-switched-path
user@PE1# set vpn1 provider-tunnel selective group 192.0.2.2/24 source 172.16.1.2/32 threshold-rate 10
user@PE1# set vpn1 provider-tunnel selective group 192.0.2.2/24 source 172.16.1.2/32
inter-region-segmented threshold 0

user@PE1# set vpn1 provider-tunnel selective group 192.0.2.1/24 source 172.16.1.2/32 ingress-replication
label-switched-path
user@PE1# set vpn1 provider-tunnel selective group 192.0.2.1/24 source 172.16.1.2/32 threshold-rate 0
user@PE1# set vpn1 provider-tunnel selective group 192.0.2.1/24 source 172.16.1.2/32
inter-region-segmented threshold 10

user@PE1# set vpn1 provider-tunnel selective group 192.0.2.3/24 source 172.16.1.2/32 ingress-replication
label-switched-path
user@PE1# set vpn1 provider-tunnel selective group 192.0.2.3/24 source 172.16.1.2/32 threshold-rate 0
user@PE1# set vpn1 provider-tunnel selective group 192.0.2.3/24 source 172.16.1.2/32
inter-region-segmented threshold 0

user@PE1# set vpn1 provider-tunnel family inet ingress-replication label-switched-path
user@PE1# set vpn1 provider-tunnel family inet6 ingress-replication label-switched-path

```

13. Configure the VRF target community and advertise a single VPN label for all the routes in the VRF.

```

[edit routing-instances]
user@PE1# set vpn1 vrf-target target:123:1
user@PE1# set vpn1 vrf-table-label

```

14. Enable OSPF for the routing instance.

```

[edit routing-instances]
user@PE1# set vpn1 protocols ospf export bgp-to-ospf
user@PE1# set vpn1 protocols ospf area 0.0.0.1 interface all
user@PE1# set vpn1 protocols ospf area 0.0.0.1 interface lo0.201

```



15. Enable OSPF3 for the routing instance.

```
[edit routing-instances]
user@PE1# set vpn1 protocols ospf3 export bgp-to-ospf
user@PE1# set vpn1 protocols ospf3 area 0.0.0.1 interface all
```

16. Enable PIM attributes for the routing instance.

```
[edit routing-instances]
user@PE1# set vpn1 protocols pim dense-groups 192.0.2.39/24
user@PE1# set vpn1 protocols pim dense-groups 192.0.2.40/24
user@PE1# set vpn1 protocols pim rp local family inet address 198.51.100.1
user@PE1# set vpn1 protocols pim rp static address ::198.51.100.1
user@PE1# set vpn1 protocols pim interface all mode sparse-dense
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show policy-options**, **show protocols**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-2/0/10 {
  unit 1 {
    family inet {
      address 192.0.2.2/24;
    }
    family inet6 {
      address ::192.0.2.2/120;
    }
    family mpls;
  }
}
ge-3/3/2 {
  unit 0 {
    family inet {
      address 203.0.113.1/24;
    }
    family iso;
    family inet6 {
      address ::203.0.113.1/120;
    }
    family mpls;
```



```

    }
}
lo0 {
    unit 201 {
        family inet {
            address 198.51.100.1/24;
        }
    }
}
}

```

```

user@PE1# show policy-options
policy-statement bgp-to-ospf {
    from protocol bgp;
    then accept;
}

```

```

user@PE1# show protocols
rsvp {
    interface fxp0.0 {
        disable;
    }
    interface ge-3/3/2.0;
    interface lo0.0;
}
mpls {
    ipv6-tunneling;
    interface fxp0.0 {
        disable;
    }
    interface ge-3/3/2.0;
    interface lo0.0;
}
bgp {
    group IBGP {
        type internal;
        local-address 10.255.162.109;
        family inet {
            any;
        }
        family inet-vpn {
            unicast;
            multicast;
        }
    }
}

```



```

    family inet6 {
        any;
    }
    family inet6-vpn {
        unicast;
    }
    family inet-mvpn {
        signaling;
    }
    family inet6-mvpn {
        signaling;
    }
    family inet-mdt {
        signaling;
    }
    neighbor 10.255.162.100;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.1 {
        interface fxp0.0 {
            disable;
        }
        interface ge-3/3/2.0;
        interface lo0.0;
    }
}
ldp {
    interface all;
    p2mp;
}
pim {
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
    default-vpn-source {
        interface-name lo0.0;
    }
}
}

```

```
user@PE1# show routing-instances
```



```

vpn1 {
  instance-type vrf;
  interface ge-2/0/10;
  interface lo0.201;
  route-distinguisher 10.255.162.109:100;
  provider-tunnel {
    selective {
      group 192.0.2.2/24 {
        source 172.16.1.2/32 {
          ingress-replication {
            label-switched-path;
          }
          threshold-rate 10;
          inter-region-segmented {
            threshold 0;
          }
        }
      }
      group 192.0.2.1/24 {
        source 172.16.1.2/32 {
          ingress-replication {
            label-switched-path;
          }
          threshold-rate 0;
          inter-region-segmented {
            threshold 10;
          }
        }
      }
      group 192.0.2.3/24 {
        source 172.16.1.2/32 {
          ingress-replication {
            label-switched-path;
          }
          threshold-rate 0;
          inter-region-segmented {
            threshold 0;
          }
        }
      }
    }
  }
  family {
    inet {
      ingress-replication {

```



```

        label-switched-path;
    }
}
inet6 {
    ingress-replication {
        label-switched-path;
    }
}
}
}
vrf-target target:123:1;
vrf-table-label;
protocols {
    ospf {
        export bgp-to-ospf;
        area 0.0.0.1 {
            interface all;
            interface lo0.201;
        }
    }
    ospf3 {
        export bgp-to-ospf;
        area 0.0.0.1 {
            interface all;
        }
    }
    pim {
        dense-groups {
            192.0.2.39/24;
            192.0.2.40/24;
        }
        rp {
            local {
                family inet {
                    address 198.51.100.1;
                }
            }
            static {
                address ::198.51.100.1;
            }
        }
        interface all {
            mode sparse-dense;
        }
    }
}

```



```

    }
  }
}

```

```

user@PE1# show routing-options
autonomous-system 65550;

```

## Verification

### IN THIS SECTION

- [Verifying Inflow at the Ingress PE Router | 641](#)
- [Verifying the Route Table for Segmented Type-3 Traffic Generated from Device ABR1 Toward PE1 Router | 643](#)
- [Verifying the Route Table for Segmented Type-4 Traffic Received from Device ABR1 Toward PE1 Router | 644](#)
- [Verifying the LDP Traffic Statistics | 646](#)

Confirm that the configuration is working properly.

### *Verifying Inflow at the Ingress PE Router*

#### Purpose

Verify the traffic inflow into the ingress PE router for the given routing instance.

#### Action

From operational mode, run the **show multicast route extensive instance vpn1** command for Device PE1.

```
user@PE1> show multicast route extensive instance vpn1
```

```

display-tunnel-name
Instance: vpn1 Family: INET

Group: 192.0.2.2
  Source: 172.16.1.2/32
  Upstream interface: ge-2/0/10.1
  Downstream interface list:
    mvpn:2
  Number of outgoing interfaces: 1

```



```

Session description: Unknown
Statistics: 3002 kBps, 10008 pps, 34124622 packets
Next-hop ID: 0
Upstream protocol: MVPN
Route state: Active
Forwarding state: Pruned
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 00:56:53

```

```

Group: 192.0.2.1
  Source: 172.16.1.2/32
  Upstream interface: ge-2/0/10.1
  Downstream interface list:
    mvpn:4
  Number of outgoing interfaces: 1
  Session description: Unknown
  Statistics: 3002 kBps, 10008 pps, 34125577 packets
  Next-hop ID: 0
  Upstream protocol: MVPN
  Route state: Active
  Forwarding state: Pruned
  Cache lifetime/timeout: forever
  Wrong incoming interface notifications: 0
  Uptime: 00:56:53

```

```

Group: 192.0.2.3
  Source: 172.16.1.2/32
  Upstream interface: ge-2/0/10.1
  Downstream interface list:
    mvpn:3
  Number of outgoing interfaces: 1
  Session description: Unknown
  Statistics: 3002 kBps, 10008 pps, 34124620 packets
  Next-hop ID: 0
  Upstream protocol: MVPN
  Route state: Active
  Forwarding state: Pruned
  Cache lifetime/timeout: forever
  Wrong incoming interface notifications: 0
  Uptime: 00:56:53

```

### Meaning

The output shows the traffic inflow into the ingress Device PE1.



## Verifying the Route Table for Segmented Type-3 Traffic Generated from Device ABR1 Toward PE1 Router

### Purpose

Verify the route table for segmented Type-3 traffic generated from Device ABR1.

### Action

From operational mode, run the **show route table vpn1.mvpn.0 match-prefix 3:\* detail** command.

user@PE1> **show route table vpn1.mvpn.0 match-prefix 3:\* detail**

```
vpn1.mvpn.0: 19 destinations, 22 routes (19 active, 3 holddown, 0 hidden)
3:10.255.162.109:100:32:172.16.1.2:32:20192.0.2.2:10.255.162.109/240 (1 entry, 1
announced)
    *MVPN    Preference: 70
              PMSI: Flags 0x1: Label 0: Type INGRESS-REPLICATION 10.255.162.109

              Next hop type: Indirect, Next hop index: 0
              Address: 0xa5b8690
              Next-hop reference count: 11
              Protocol next hop: 10.255.162.109
              Indirect next hop: 0x0 - INH Session ID: 0x0
              State: <Active Int Ext>
              Age: 1:00:20      Metric2: 1
              Validation State: unverified
              Task: mvpn global task
              Announcement bits (3): 0-PIM.vpn1 1-mvpn global task 2-rt-export
              AS path: I
              Communities: segmented-nh:10.255.162.109:0

3:10.255.162.109:100:32:172.16.1.2:32:20192.0.2.1:10.255.162.109/240 (1 entry, 1
announced)
    *MVPN    Preference: 70
              PMSI: Flags 0x1: Label 0: Type INGRESS-REPLICATION 10.255.162.109

              Next hop type: Indirect, Next hop index: 0
              Address: 0xa5b8690
              Next-hop reference count: 11
              Protocol next hop: 10.255.162.109
              Indirect next hop: 0x0 - INH Session ID: 0x0
              State: <Active Int Ext>
              Age: 59:50      Metric2: 1
              Validation State: unverified
              Task: mvpn global task
```



```

Announcement bits (3): 0-PIM.vpn1 1-mvpn global task 2-rt-export
AS path: I
Communities: segmented-nh:10.255.162.109:0

3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.3:10.255.162.109/240 (1 entry, 1
announced)
    *MVPN    Preference: 70
    PMSI: Flags 0x1: Label 0: Type INGRESS-REPLICATION 10.255.162.109

    Next hop type: Indirect, Next hop index: 0
    Address: 0xa5b8690
    Next-hop reference count: 11
    Protocol next hop: 10.255.162.109
    Indirect next hop: 0x0 - INH Session ID: 0x0
    State: <Active Int Ext>
    Age: 1:00:20    Metric2: 1
    Validation State: unverified
    Task: mvpn global task
    Announcement bits (3): 0-PIM.vpn1 1-mvpn global task 2-rt-export
    AS path: I
    Communities: segmented-nh:10.255.162.109:0

```

### Meaning

The output indicates the route table for the segmented type-3 traffic generated from ABR1.

### *Verifying the Route Table for Segmented Type-4 Traffic Received from Device ABR1 Toward PE1 Router*

#### Purpose

Verify the route table for segmented type-4 traffic received from Device ABR1.

#### Action

From operational mode, run the **show route table vpn1.mvpn.0 match-prefix 4:\* detail** command.

```
user@PE1> show route table vpn1.mvpn.0 match-prefix 4:* detail
```

```

vpn1.mvpn.0: 19 destinations, 22 routes (19 active, 3 holddown, 0 hidden)
4:3:10.255.162.109:100:32:172.16.1.2:32:20192.0.2.2:10.255.162.109:10.255.162.100/240
(1 entry, 1 announced)
    *BGP    Preference: 170/-101
    PMSI: Flags 0x0: Label 300320: Type INGRESS-REPLICATION
10.255.162.100
    Next hop type: Indirect, Next hop index: 0

```



```

Address: 0xa5d11d0
Next-hop reference count: 24
Source: 10.255.162.100
Protocol next hop: 10.255.162.100
Indirect next hop: 0x0 - INH Session ID: 0x0
State: <Secondary Active Int Ext>
Local AS: 65550 Peer AS: 65550
Age: 1:00:29      Metric2: 2
Validation State: unverified
Task: BGP_65550.10.255.162.100
Announcement bits (2): 0-PIM.vpn1 1-mvpn global task
AS path: I
Communities: target:10.255.162.109:0
Import Accepted
Localpref: 100
Router ID: 10.255.162.100
Primary Routing Table bgp.mvpn.0

```

```

4:3:10.255.162.109:100:32:172.16.1.2:32:20192.0.2.1:10.255.162.109:10.255.162.100/240
(1 entry, 1 announced)

```

```

    *BGP      Preference: 170/-101
    PMSI: Flags 0x0: Label 300352: Type INGRESS-REPLICATION

```

```

10.255.162.100

```

```

Next hop type: Indirect, Next hop index: 0
Address: 0xa5d11d0
Next-hop reference count: 24
Source: 10.255.162.100
Protocol next hop: 10.255.162.100
Indirect next hop: 0x0 - INH Session ID: 0x0
State: <Secondary Active Int Ext>
Local AS: 65550 Peer AS: 65550
Age: 59:59      Metric2: 2
Validation State: unverified
Task: BGP_65550.10.255.162.100
Announcement bits (2): 0-PIM.vpn1 1-mvpn global task
AS path: I
Communities: target:10.255.162.109:0
Import Accepted
Localpref: 100
Router ID: 10.255.162.100
Primary Routing Table bgp.mvpn.0

```

```

4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.3:10.255.162.109:10.255.162.100/240
(1 entry, 1 announced)

```



```

      *BGP      Preference: 170/-101
                PMSI: Flags 0x0: Label 300336: Type INGRESS-REPLICATION
10.255.162.100
                Next hop type: Indirect, Next hop index: 0
                Address: 0xa5d11d0
                Next-hop reference count: 24
                Source: 10.255.162.100
                Protocol next hop: 10.255.162.100
                Indirect next hop: 0x0 - INH Session ID: 0x0
                State: <Secondary Active Int Ext>
                Local AS: 65550 Peer AS: 65550
                Age: 1:00:29      Metric2: 2
                Validation State: unverified
                Task: BGP_65550.10.255.162.100
                Announcement bits (2): 0-PIM.vpn1 1-mvpn global task
                AS path: I
                Communities: target:10.255.162.109:0
                Import Accepted
                Localpref: 100
                Router ID: 10.255.162.100
                Primary Routing Table bgp.mvpn.0

```

### Meaning

The output shows the route table for segmented type-4 traffic received from device ABR1.

### Verifying the LDP Traffic Statistics

#### Purpose

Verify the LDP traffic statistics of Device PE1.

#### Action

From operational mode, run the **show ldp traffic-statistics** command.

```
user@PE1> show ldp traffic-statistics
```

```
INET FEC Statistics:
```

FEC	Type	Packets	Bytes	Shared
10.255.162.100/32	Transit	0	0	No
	Ingress	112882983	33864894900	No
10.255.162.102/32	Transit	0	0	No
	Ingress	3884115	1165234500	No



10.255.162.104/32	Transit	0	0	No
	Ingress	3884115	1165234500	No
10.255.162.107/32	Transit	0	0	No
	Ingress	0	0	No
10.255.162.117/32	Transit	0	0	No
	Ingress	0	0	No
10.255.162.119/32	Transit	0	0	No
	Ingress	0	0	No
198.51.100.19/24	Transit	0	0	No
	Ingress	0	0	No
198.51.100.17/24	Transit	0	0	No
	Ingress	3884115	1165234500	No

### Meaning

The output shows the LDP traffic statistics.

### Configuring ABR1

#### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device ABR1:

1. Configure the interfaces.

```
[edit interfaces]
user@ABR1# set ge-1/0/4 unit 0 family inet address 203.0.113.12/24
user@ABR1# set ge-1/0/4 unit 0 family iso
user@ABR1# set ge-1/0/4 unit 0 family inet6 address ::203.0.113.12/120
user@ABR1# set ge-1/0/4 unit 0 family mpls

user@ABR1# set ge-1/1/3 unit 0 family inet address 203.0.113.5/24
user@ABR1# set ge-1/1/3 unit 0 family iso
user@ABR1# set ge-1/1/3 unit 0 family inet6 address ::203.0.113.5/120
user@ABR1# set ge-1/1/3 unit 0 family mpls

user@ABR1# set ge-1/1/9 unit 0 family inet address 203.0.113.4/24
user@ABR1# set ge-1/1/9 unit 0 family iso
user@ABR1# set ge-1/1/9 unit 0 family inet6 address ::203.0.113.4/120
user@ABR1# set ge-1/1/9 unit 0 family mpls

user@ABR1# set lo0 unit 0 family inet address 203.0.113.0/24
```



```
user@ABR1# set lo0 unit 0 family inet address 10.255.162.100/32 primary
```

2. Configure the autonomous system number.

```
[edit routing-options]
user@ABR1# set autonomous-system 65550
```

3. Disable RSVP on the management interface and enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@ABR1# set interface fxp0.0 disable
user@ABR1# set interface ge-1/1/9.0
user@ABR1# set interface ge-1/0/4.0
user@ABR1# set interface ge-1/1/3.0
user@ABR1# set interface lo0.0
user@ABR1# set interface all
```

4. Configure MPLS IPv6 tunneling.

```
[edit protocols mpls]
user@ABR1# set ipv6-tunneling
```

5. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@ABR1# set interface fxp0.0 disable
user@ABR1# set interface ge-1/1/9.0
user@ABR1# set interface ge-1/0/4.0
user@ABR1# set interface ge-1/1/3.0
user@ABR1# set interface lo0.0
user@ABR1# set interface all
```

6. Configure the BGP protocol.

```
[edit protocols bgp]
user@ABR1# set group IBGP_1 type internal
user@ABR1# set group IBGP_1 local-address 10.255.162.100
user@ABR1# set group IBGP_1 family inet any
user@ABR1# set group IBGP_1 family inet-vpn unicast
```



```

user@ABR1# set group IBGP_1 family inet-vpn multicast
user@ABR1# set group IBGP_1 family inet6 any
user@ABR1# set group IBGP_1 family inet6-vpn unicast
user@ABR1# set group IBGP_1 family inet-mvpn signaling
user@ABR1# set group IBGP_1 family inet6-mvpn signaling
user@ABR1# set group IBGP_1 family inet-mdt signaling
user@ABR1# set group IBGP_1 cluster 0.0.0.1
user@ABR1# set group IBGP_1 neighbor 10.255.162.109

user@ABR1# set group IBGP_0 type internal
user@ABR1# set group IBGP_0 local-address 10.255.162.100
user@ABR1# set group IBGP_0 family inet any
user@ABR1# set group IBGP_0 family inet-vpn unicast
user@ABR1# set group IBGP_0 family inet-vpn multicast
user@ABR1# set group IBGP_0 family inet6 any
user@ABR1# set group IBGP_0 family inet6-vpn unicast
user@ABR1# set group IBGP_0 family inet-mvpn signaling
user@ABR1# set group IBGP_0 family inet6-mvpn signaling
user@ABR1# set group IBGP_0 family inet-mdt signaling
user@ABR1# set group IBGP_0 neighbor 10.255.162.117
user@ABR1# set group IBGP_0 neighbor 10.255.162.107

```

7. Configure OSPF traffic engineering attributes and enable OSPF on the interfaces.

```

[edit protocols ospf]
user@ABR1# set traffic-engineering
user@ABR1# set area 0.0.0.1 interface fxp0.0 disable
user@ABR1# set area 0.0.0.1 interface ge-1/1/9.0
user@ABR1# set area 0.0.0.0 interface ge-1/0/4.0
user@ABR1# set area 0.0.0.0 interface ge-1/1/3.0
user@ABR1# set area 0.0.0.0 interface lo0.0

```

8. Enable LDP on all the interfaces and advertise P2MP capability to peers.

```

[edit protocols ldp]
user@ABR1# set interface all
user@ABR1# set p2mp

```

9. Configure PIM on the interfaces.

```

[edit protocols pim]

```



```

user@ABR1# set interface all
user@ABR1# set interface fxp0.0 disable
user@ABR1# set interface lo0.0

```

10. Configure the tunnels of the inter-region template for a specific region or all regions.

```

[edit protocols mvpn inter-region-template]
user@ABR1# set template template_1 region IBGP_0 rsvp-te label-switched-path-template default-template
user@ABR1# set template template_2 region IBGP_0 ldp-p2mp
user@ABR1# set template template_3 region IBGP_0 ingress-replication create-new-ucast-tunnel
user@ABR1# set template template_3 region IBGP_0 ingress-replication label-switched-path
    label-switched-path-template default-template
user@ABR1# set template template_4 all-regions incoming
user@ABR1# set template template_5 region IBGP_0 rsvp-te static-lsp ABR1_to_ABR3

```

11. Configure the routing instance type, route distinguisher, inter-region template of the provider tunnel, and VRF target community, and advertise a single VPN label for all the routes in the VRF for the routing instance.

```

[edit routing-instances]
user@ABR1# set vpn1 instance-type vrf
user@ABR1# set vpn1 route-distinguisher 10.255.162.100:100
user@ABR1# set vpn1 provider-tunnel inter-region template template_1
user@ABR1# set vpn1 vrf-target target:123:1
user@ABR1# set vpn1 vrf-table-label

```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@ABR1# show interfaces
ge-1/0/4 {
  unit 0 {
    family inet {
      address 203.0.113.12/24;
    }
    family iso;
    family inet6 {
      address ::203.0.113.12/120;
    }
  }
}

```



```

    }
    family mpls;
  }
}
ge-1/1/3 {
  unit 0 {
    family inet {
      address 203.0.113.5/24;
    }
    family iso;
    family inet6 {
      address ::203.0.113.5/120;
    }
    family mpls;
  }
}
ge-1/1/9 {
  unit 0 {
    family inet {
      address 203.0.113.4/24;
    }
    family iso;
    family inet6 {
      address ::203.0.113.4/120;
    }
    family mpls;
  }
}
lo0 {
  unit 201 {
    family inet {
      address 203.0.113.0/24;
      address 10.255.162.100/32 {
        primary;
      }
    }
  }
}
}

```

user@ABR1# **show protocols**

```

rsvp {
  interface fxp0.0 {
    disable;
  }
}

```



```

interface ge-1/1/9.0;
interface ge-1/0/4.0;
interface ge-1/1/3.0;
interface lo0.0;
interface all;
}
mpls {
  ipv6-tunneling;
  interface fxp0.0 {
    disable;
  }
  interface ge-1/1/9.0;
  interface ge-1/0/4.0;
  interface ge-1/1/3.0;
  interface lo0.0;
  interface all;
}
bgp {
  group IBGP_1 {
    type internal;
    local-address 10.255.162.100;
    family inet {
      any;
    }
    family inet-vpn {
      unicast;
      multicast;
    }
    family inet6 {
      any;
    }
    family inet6-vpn {
      unicast;
    }
    family inet-mvpn {
      signaling;
    }
    family inet6-mvpn {
      signaling;
    }
    family inet-mdt {
      signaling;
    }
    cluster 0.0.0.1;
  }
}

```



```

    neighbor 10.255.162.109;
}
group IBGP_0 {
    type internal;
    local-address 10.255.162.100;
    family inet {
        any;
    }
    family inet-vpn {
        unicast;
        multicast;
    }
    family inet6 {
        any;
    }
    family inet6-vpn {
        unicast;
    }
    family inet-mvpn {
        signaling;
    }
    family inet6-mvpn {
        signaling;
    }
    family inet-mdt {
        signaling;
    }
    neighbor 10.255.162.117;
    neighbor 10.255.162.107;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.1 {
        interface fxp0.0 {
            disable;
        }
        interface ge-1/1/9.0;
    }
    area 0.0.0.0 {
        interface ge-1/0/4.0;
        interface ge-1/1/3.0;
        interface lo0.0;
    }
}

```



```

}
ldp {
    interface all;
    p2mp;
}
pim {
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}
mvpn {
    inter-region-template {
        template template_1 {
            region IBGP_0 {
                rsvp-te {
                    label-switched-path-template {
                        default-template;
                    }
                }
            }
        }
        template template_2 {
            region IBGP_0 {
                ldp-p2mp;
            }
        }
        template template_3 {
            region IBGP_0 {
                ingress-replication {
                    create-new-ucast-tunnel;
                    label-switched-path {
                        label-switched-path-template {
                            default-template;
                        }
                    }
                }
            }
        }
        template template_4 {
            all-regions {
                incoming;
            }
        }
    }
}

```



```

    }
    template template_5 {
        region IBGP_0 {
            rsvp-te {
                static-lsp ABR1_to_ABR3;
            }
        }
    }
}
}
}

```

```

user@ABR1# show routing-instances
vpn1 {
    instance-type vrf;
    route-distinguisher 10.255.162.100:100;
    provider-tunnel {
        inter-region {
            template template_1;
        }
    }
    vrf-target target:123:1;
    vrf-table-label;
}

```

```

user@ABR1# show routing-options
autonomous-system 65550;

```

### Verification

Confirm that the configuration is working properly.

### Verifying the Segmented Type-3 Traffic Received from the PE1 Router on ABR1 with the Tunnel-Type as IR

#### Purpose

Display the segmented type-3 traffic received from the PE1 router on ABR1 with the tunnel-type as IR.

#### Action

From operational mode, run the **show route table vpn1.mvpn.0 match-prefix 3:\* detail** command.

```
user@ABR1> show route table vpn1.mvpn.0 match-prefix 3:* detail
```

```
vpn1.mvpn.0: 22 destinations, 22 routes (22 active, 0 holddown, 0 hidden)
```



3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.2:10.255.162.109/240 (1 entry, 1 announced)

```
*BGP      Preference: 170/-101
          PMSI: Flags 0x1: Label 0: Type INGRESS-REPLICATION 10.255.162.109

          Next hop type: Indirect, Next hop index: 0
          Address: 0xa5cddb0
          Next-hop reference count: 24
          Source: 10.255.162.109
          Protocol next hop: 10.255.162.109
          Indirect next hop: 0x0 - INH Session ID: 0x0
          State: <Secondary Active Int Ext>

          Local AS: 65550 Peer AS: 65550
          Age: 1:02:45      Metric2: 2
          Validation State: unverified
          Task: BGP_65550.10.255.162.109
          Announcement bits (1): 0-mvpn global task
          AS path: I
          Communities: target:123:1 segmented-nh:10.255.162.109:0
          Import Accepted
          Localpref: 100
          Router ID: 10.255.162.109
          Primary Routing Table bgp.mvpn.0
```

3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.1:10.255.162.109/240 (1 entry, 1 announced)

```
*BGP      Preference: 170/-101
          PMSI: Flags 0x1: Label 0: Type INGRESS-REPLICATION 10.255.162.109

          Next hop type: Indirect, Next hop index: 0
          Address: 0xa5cddb0
          Next-hop reference count: 24
          Source: 10.255.162.109
          Protocol next hop: 10.255.162.109
          Indirect next hop: 0x0 - INH Session ID: 0x0
          State: <Secondary Active Int Ext>

          Local AS: 65550 Peer AS: 65550
          Age: 1:02:15      Metric2: 2
          Validation State: unverified
          Task: BGP_65550.10.255.162.109
          Announcement bits (1): 0-mvpn global task
          AS path: I
```



```

Communities: target:123:1 segmented-nh:10.255.162.109:0
Import Accepted
Localpref: 100
Router ID: 10.255.162.109
Primary Routing Table bgp.mvpn.0

3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.3:10.255.162.109/240 (1 entry, 1
announced)
  *BGP      Preference: 170/-101
            PMSI: Flags 0x1: Label 0: Type INGRESS-REPLICATION 10.255.162.109

            Next hop type: Indirect, Next hop index: 0
            Address: 0xa5cddb0
            Next-hop reference count: 24
            Source: 10.255.162.109
            Protocol next hop: 10.255.162.109
            Indirect next hop: 0x0 - INH Session ID: 0x0
            State: <Secondary Active Int Ext>
            Local AS: 65550 Peer AS: 65550
            Age: 1:02:45      Metric2: 2
            Validation State: unverified
            Task: BGP_65550.10.255.162.109
            Announcement bits (1): 0-mvpn global task
            AS path: I
            Communities: target:123:1 segmented-nh:10.255.162.109:0
            Import Accepted
            Localpref: 100
            Router ID: 10.255.162.109
            Primary Routing Table bgp.mvpn.0

```

### Meaning

The output shows the segmented type-3 traffic received from PE1 with the tunnel-type as IR.

### Configuring ABR2

#### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device ABR2:

1. Configure the interfaces.



```
[edit interfaces]
user@ABR2# set ge-1/0/3 unit 0 family inet address 203.0.113.11/24
user@ABR2# set ge-1/0/3 unit 0 family iso
user@ABR2# set ge-1/0/3 unit 0 family inet6 address ::203.0.113.11/120
user@ABR2# set ge-1/0/3 unit 0 family mpls

user@ABR2# set ge-1/1/4 unit 0 family inet address 203.0.113.10/24
user@ABR2# set ge-1/1/4 unit 0 family iso
user@ABR2# set ge-1/1/4 unit 0 family inet6 address ::203.0.113.10/120
user@ABR2# set ge-1/1/4 unit 0 family mpls

user@ABR2# set ge-1/1/10 unit 1 family inet address 192.0.2.2/24
user@ABR2# set ge-1/1/10 unit 1 family inet6 address ::192.0.2.2/120
user@ABR2# set ge-1/1/10 unit 1 family mpls
```

2. Configure the autonomous system number.

```
[edit routing-options]
user@ABR2# set autonomous-system 65550
```

3. Disable RSVP on the management interface and enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@ABR2# set interface fxp0.0 disable
user@ABR2# set interface lo0.0
user@ABR2# set interface all
```

4. Enable MPLS IPv6 tunneling.

```
[edit protocols mpls]
user@ABR2# set ipv6-tunneling
```

5. Disable MPLS on the management interface and enable RSVP on the interfaces.

```
[edit protocols mpls]
user@ABR2# set interface fxp0.0 disable
user@ABR2# set interface lo0.0
user@ABR2# set interface all
```



6. Configure the BGP protocol.

```
[edit protocols bgp]
user@ABR2# set group IBGP_2 type internal
user@ABR2# set group IBGP_2 local-address 10.255.162.117
user@ABR2# set group IBGP_2 family inet any
user@ABR2# set group IBGP_2 family inet-vpn unicast
user@ABR2# set group IBGP_2 family inet-vpn multicast
user@ABR2# set group IBGP_2 family inet6 any
user@ABR2# set group IBGP_2 family inet6-vpn unicast
user@ABR2# set group IBGP_2 family inet-mvpn signaling
user@ABR2# set group IBGP_2 family inet6-mvpn signaling
user@ABR2# set group IBGP_2 family inet-mdt signaling
user@ABR2# set group IBGP_2 cluster 0.0.0.2
user@ABR2# set group IBGP_2 neighbor 10.255.162.104
user@ABR2# set group IBGP_2 neighbor 198.51.100.17

user@ABR2# set group IBGP_0 type internal
user@ABR2# set group IBGP_0 local-address 10.255.162.117
user@ABR2# set group IBGP_0 family inet any
user@ABR2# set group IBGP_0 family inet-vpn unicast
user@ABR2# set group IBGP_0 family inet-vpn multicast
user@ABR2# set group IBGP_0 family inet6 any
user@ABR2# set group IBGP_0 family inet6-vpn unicast
user@ABR2# set group IBGP_0 family inet-mvpn signaling
user@ABR2# set group IBGP_0 family inet6-mvpn signaling
user@ABR2# set group IBGP_0 family inet-mdt signaling
user@ABR2# set group IBGP_0 neighbor 10.255.162.100
user@ABR2# set group IBGP_0 neighbor 10.255.162.107
```

7. Configure OSPF traffic engineering attributes, and disable OSPF on the management interface and enable OSPF on the interfaces.

```
[edit protocols ospf]
user@ABR2# set traffic-engineering
user@ABR2# set area 0.0.0.0 interface fxp0.0 disable
user@ABR2# set area 0.0.0.0 interface ge-1/0/3.0
user@ABR2# set area 0.0.0.0 interface ge-1/1/4.0
user@ABR2# set area 0.0.0.0 interface lo0.0
user@ABR2# set area 0.0.0.2 interface ge-1/1/10.1
```

8. Enable LDP on all the interfaces and advertise P2MP capability to peers.



```
[edit protocols ldp]
user@ABR2# set interface all
user@ABR2# set p2mp
```

## 9. Configure PIM on the interfaces.

```
[edit protocols pim]
user@ABR2# set interface fxp0.0 all
user@ABR2# set interface fxp0.0 disable
user@ABR2# set interface lo0.0
```

## 10. Configure the tunnels of the inter-region template for a specific region or all regions.

```
[edit protocols mvpn inter-region-template]
user@ABR2# set template template_1 region IBGP_2 rsvp-te label-switched-path-template default-template
user@ABR2# set template template_2 region IBGP_2 ldp-p2mp
user@ABR2# set template template_3 region IBGP_2 ingress-replication create-new-ucast-tunnel
user@ABR2# set template template_3 region IBGP_2 ingress-replication label-switched-path
    label-switched-path-template default-template
user@ABR2# set template template_4 all-regions incoming
user@ABR2# set template template_5 region IBGP_2 rsvp-te static-lsp ABR2_to_PE2_3
```

## 11. Configure the routing instance type, route distinguisher, inter-region template of the provider tunnel, and VRF target community, and advertise a single VPN label for all the routes in the VRF for the routing instance.

```
[edit routing-instances]
user@ABR2# set vpn1 instance-type vrf
user@ABR2# set vpn1 route-distinguisher 10.255.162.117:100
user@ABR2# set vpn1 provider-tunnel inter-region template template_1
user@ABR2# set vpn1 vrf-target target:123:1
user@ABR2# set vpn1 vrf-table-label
```

## Results

```
user@ABR2# show interfaces
ge-1/0/3 {
  unit 0 {
    family inet {
      address 203.0.113.11/24;
```



```

    }
    family iso;
    family inet6 {
        address ::203.0.113.11/120;
    }
    family mpls;
}
}
ge-1/1/4 {
    unit 0 {
        family inet {
            address 203.0.113.10/24;
        }
        family iso;
        family inet6 {
            address ::203.0.113.10/120;
        }
        family mpls;
    }
}
ge-1/1/10 {
    unit 1 {
        family inet {
            address 192.0.2.2/24;
        }
        family inet6 {
            address ::192.0.2.2/120;
        }
        family mpls;
    }
}
lo0 {
    unit 201 {
        family inet {
            address 203.0.113.0/24;
            address 10.255.162.117/32 {
                primary;
            }
        }
    }
}
}

```

```

user@ABR2# show protocols
rsvp {

```



```

interface fxp0.0 {
    disable;
}
interface lo0.0;
interface all;
}
mpls {
    ipv6-tunneling;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
    interface all;
}
bgp {
    group IBGP_2 {
        type internal;
        local-address 10.255.162.117;
        family inet {
            any;
        }
        family inet-vpn {
            unicast;
            multicast;
        }
        family inet6 {
            any;
        }
        family inet6-vpn {
            unicast;
        }
        family inet-mvpn {
            signaling;
        }
        family inet6-mvpn {
            signaling;
        }
        family inet-mdt {
            signaling;
        }
        cluster 0.0.0.2;
        neighbor 10.255.162.104;
        neighbor 198.51.100.17;
    }
}

```



```

group IBGP_0 {
    type internal;
    local-address 10.255.162.117;
    family inet {
        any;
    }
    family inet-vpn {
        unicast;
        multicast;
    }
    family inet6 {
        any;
    }
    family inet6-vpn {
        unicast;
    }
    family inet-mvpn {
        signaling;
    }
    family inet6-mvpn {
        signaling;
    }
    family inet6-mdt {
        signaling;
    }
    neighbor 10.255.162.100;
    neighbor 10.255.162.107;
}

ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface ge-1/0/3.0;
        interface ge-1/1/4.0;
        interface lo0.0;
    }
    area 0.0.0.2 {
        interface ge-1/1/10.1;
    }
}

ldp {
    interface all;

```



```

    p2mp;
}
pim {
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}
mvpn {
    inter-region-template {
        template template_1 {
            region IBGP_2 {
                rsvp-te {
                    label-switched-path-template {
                        default-template;
                    }
                }
            }
        }
        template template_2 {
            region IBGP_2 {
                ldp-p2mp;
            }
        }
        template template_3 {
            region IBGP_2 {
                ingress-replication {
                    create-new-ucast-tunnel;
                    label-switched-path {
                        label-switched-path-template {
                            default-template;
                        }
                    }
                }
            }
        }
        template template_4 {
            all-regions {
                incoming;
            }
        }
        template template_5 {
            region IBGP_2 {

```



```

        rsvp-te {
            static-lsp ABR2_to_PE2_3;
        }
    }
}
}
}

```

```

user@ABR2# show routing-instances
vpn1 {
    instance-type vrf;
    route-distinguisher 10.255.162.100:100;
    provider-tunnel {
        inter-region {
            template template_1;
        }
    }
    vrf-target target:123:1;
    vrf-table-label;
}

```

```

user@ABR2# show routing-options
autonomous-system 65550;

```

## Verification

### IN THIS SECTION

- [Verifying Segmented Type-3 Received from ABR2 | 665](#)
- [Verifying Type-4 Received from Egress PE2 and PE4 and Locally Triggered Type-4 Toward Ingress ABR2 | 668](#)
- [Verifying the Statistics of MPLS LSP | 672](#)

Confirm that the configuration is working properly.

### **Verifying Segmented Type-3 Received from ABR2**

#### **Purpose**

Display the segmented Type-3 received from ABR2 where the tunnel type is RSVP-TE.



## Action

From operational mode, enter the **show route table vpn1.mvpn match-prefix 3:\* detail** command.

```
user@ABR2> show route table vpn1.mvpn match-prefix 3:* detail
```

```
vpn1.mvpn.0: 22 destinations, 22 routes (22 active, 0 holddown, 0 hidden)
3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.2:10.255.162.109/240 (1 entry, 1
announced)
    *BGP      Preference: 170/-101
              PMSI: Flags 0x1: Label 0: RSVP-TE:
Session_13[10.255.162.100:0:6500:10.255.162.100]
    Next hop type: Indirect, Next hop index: 0
    Address: 0xa5bd650
    Next-hop reference count: 24
    Source: 10.255.162.100
    Protocol next hop: 10.255.162.109
    Indirect next hop: 0x0 - INH Session ID: 0x0
    State: <Secondary Active Int Ext>
    Local AS: 65550 Peer AS: 65550
    Age: 1:10:55      Metric2: 1
    Validation State: unverified
    Task: BGP_65550.10.255.162.100
    Announcement bits (1): 0-mvpn global task
    AS path: I (Originator)
    Cluster list: 0.0.0.1
    Originator ID: 10.255.162.109
    Communities: target:123:1 segmented-nh:10.255.162.100:0
    Import Accepted
    Localpref: 100
    Router ID: 10.255.162.100
    Primary Routing Table bgp.mvpn.0

3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.1:10.255.162.109/240 (1 entry, 1
announced)
    *BGP      Preference: 170/-101
              PMSI: Flags 0x1: Label 0: RSVP-TE:
Session_13[10.255.162.100:0:6504:10.255.162.100]
    Next hop type: Indirect, Next hop index: 0
    Address: 0xa5bd650
    Next-hop reference count: 24
    Source: 10.255.162.100
    Protocol next hop: 10.255.162.109
    Indirect next hop: 0x0 - INH Session ID: 0x0
```



```

State: <Secondary Active Int Ext>
Local AS: 65550 Peer AS: 65550
Age: 1:10:25    Metric2: 1
Validation State: unverified
Task: BGP_65550.10.255.162.100
Announcement bits (1): 0-mvpn global task
AS path: I (Originator)
Cluster list: 0.0.0.1
Originator ID: 10.255.162.109
Communities: target:123:1 segmented-nh:10.255.162.100:0
Import Accepted
Localpref: 100
Router ID: 10.255.162.100
Primary Routing Table bgp.mvpn.0

3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.3:10.255.162.109/240 (1 entry, 1
announced)
    *BGP    Preference: 170/-101
            PMSI: Flags 0x1: Label 0: RSVP-TE:
Session_13[10.255.162.100:0:6502:10.255.162.100]
    Next hop type: Indirect, Next hop index: 0
    Address: 0xa5bd650
    Next-hop reference count: 24
    Source: 10.255.162.100
    Protocol next hop: 10.255.162.109
    Indirect next hop: 0x0 - INH Session ID: 0x0
    State: <Secondary Active Int Ext>
    Local AS: 65550 Peer AS: 65550
    Age: 1:10:55    Metric2: 1
    Validation State: unverified
    Task: BGP_65550.10.255.162.100
    Announcement bits (1): 0-mvpn global task
    AS path: I (Originator)
    Cluster list: 0.0.0.1
    Originator ID: 10.255.162.109
    Communities: target:123:1 segmented-nh:10.255.162.100:0
    Import Accepted
    Localpref: 100
    Router ID: 10.255.162.100
    Primary Routing Table bgp.mvpn.0

```

### Meaning

The output displays the segmented Type-3 traffic received from ABR2 where the tunnel type is RSVP-TE.



## Verifying Type-4 Received from Egress PE2 and PE4 and Locally Triggered Type-4 Toward Ingress ABR2

### Purpose

Display the type-4 received from the egress PE2 and PE4 and locally triggered type-4 toward ingress ABR2.

### Action

From operational mode, enter the **show route table vpn1.mvpn match-prefix 4:\* detail** command.

```
user@ABR2> show route table vpn1.mvpn match-prefix 4:* detail
```

```
vpn1.mvpn.0: 22 destinations, 22 routes (22 active, 0 holddown, 0 hidden)
4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.2:10.255.162.109:10.255.162.104/240
(1 entry, 1 announced)
    *BGP      Preference: 170/-101
              Next hop type: Indirect, Next hop index: 0
              Address: 0xa5d1720
              Next-hop reference count: 21
              Source: 10.255.162.104
              Protocol next hop: 10.255.162.104
              Indirect next hop: 0x0 - INH Session ID: 0x0
              State: <Secondary Active Int Ext>
              Local AS: 65550 Peer AS: 65550
              Age: 1:11:05      Metric2: 2
              Validation State: unverified
              Task: BGP_65550.10.255.162.104
              Announcement bits (1): 0-mvpn global task
              AS path: I
              Communities: target:10.255.162.117:0
              Import Accepted
              Localpref: 100
              Router ID: 10.255.162.104
              Primary Routing Table bgp.mvpn.0

4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.2:10.255.162.109:10.255.162.117/240
(1 entry, 1 announced)
    *MVPN     Preference: 70
              Next hop type: Indirect, Next hop index: 0
              Address: 0xa5d31f0
              Next-hop reference count: 11
              Protocol next hop: 10.255.162.117
              Indirect next hop: 0x0 - INH Session ID: 0x0
              State: Active Int Ext
```



```

Age: 1:11:04      Metric2: 1
Validation State: unverified
Task: mvpn global task
Announcement bits (2): 0-mvpn global task 1-rt-export
AS path: I
Communities: target:10.255.162.100:0

```

```

4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.2:10.255.162.109:198.51.100.17/240
(1 entry, 1 announced)

```

```

*BGP      Preference: 170/-101
Next hop type: Indirect, Next hop index: 0
Address: 0xa5cb0f0
Next-hop reference count: 21
Source: 198.51.100.17
Protocol next hop: 198.51.100.17
Indirect next hop: 0x0 - INH Session ID: 0x0
State: <Secondary Active Int Ext>
Local AS: 65550 Peer AS: 65550
Age: 1:11:05      Metric2: 3
Validation State: unverified
Task: BGP_65550.198.51.100.17
Announcement bits (1): 0-mvpn global task
AS path: I
Communities: target:10.255.162.117:0
Import Accepted
Localpref: 100
Router ID: 198.51.100.17
Primary Routing Table bgp.mvpn.0

```

```

4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.1:10.255.162.109:10.255.162.104/240
(1 entry, 1 announced)

```

```

*BGP      Preference: 170/-101
Next hop type: Indirect, Next hop index: 0
Address: 0xa5d1720
Next-hop reference count: 21
Source: 10.255.162.104
Protocol next hop: 10.255.162.104
Indirect next hop: 0x0 - INH Session ID: 0x0
State: <Secondary Active Int Ext>
Local AS: 65550 Peer AS: 65550
Age: 1:10:35      Metric2: 2
Validation State: unverified
Task: BGP_65550.10.255.162.104
Announcement bits (1): 0-mvpn global task

```



```

AS path: I
Communities: target:10.255.162.117:0
Import Accepted
Localpref: 100
Router ID: 10.255.162.104
Primary Routing Table bgp.mvpn.0

```

```

4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.1:10.255.162.109:10.255.162.117/240
(1 entry, 1 announced)

```

```

*MVPN Preference: 70
Next hop type: Indirect, Next hop index: 0
Address: 0xa5d31f0
Next-hop reference count: 11
Protocol next hop: 10.255.162.117
Indirect next hop: 0x0 - INH Session ID: 0x0
State: <Active Int Ext>
Age: 1:10:35 Metric2: 1
Validation State: unverified
Task: mvpn global task
Announcement bits (2): 0-mvpn global task 1-rt-export
AS path: I
Communities: target:10.255.162.100:0

```

```

4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.1:10.255.162.109:198.51.100.17/240
(1 entry, 1 announced)

```

```

*BGP Preference: 170/-101
Next hop type: Indirect, Next hop index: 0
Address: 0xa5cb0f0
Next-hop reference count: 21
Source: 198.51.100.17
Protocol next hop: 198.51.100.17
Indirect next hop: 0x0 - INH Session ID: 0x0
State: Secondary Active Int Ext
Local AS: 65550 Peer AS: 65550
Age: 1:10:35 Metric2: 3
Validation State: unverified
Task: BGP_65550.198.51.100.17
Announcement bits (1): 0-mvpn global task
AS path: I
Communities: target:10.255.162.117:0
Import Accepted
Localpref: 100
Router ID: 198.51.100.17
Primary Routing Table bgp.mvpn.0

```



4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.3:10.255.162.109:10.255.162.104/240  
(1 entry, 1 announced)

```
*BGP      Preference: 170/-101
          Next hop type: Indirect, Next hop index: 0
          Address: 0xa5d1720
          Next-hop reference count: 21
          Source: 10.255.162.104
          Protocol next hop: 10.255.162.104
          Indirect next hop: 0x0 - INH Session ID: 0x0
          State: <Secondary Active Int Ext>
          Local AS: 65550 Peer AS: 65550
          Age: 1:11:04      Metric2: 2
          Validation State: unverified
          Task: BGP_65550.10.255.162.104
          Announcement bits (1): 0-mvpn global task
          AS path: I
          Communities: target:10.255.162.117:0
          Import Accepted
          Localpref: 100
          Router ID: 10.255.162.104
          Primary Routing Table bgp.mvpn.0
```

4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.3:10.255.162.109:10.255.162.117/240  
(1 entry, 1 announced)

```
*MVPN     Preference: 70
          Next hop type: Indirect, Next hop index: 0
          Address: 0xa5d31f0
          Next-hop reference count: 11
          Protocol next hop: 10.255.162.117
          Indirect next hop: 0x0 - INH Session ID: 0x0
          State: <Active Int Ext>
          Age: 1:11:04      Metric2: 1
          Validation State: unverified
          Task: mvpn global task
          Announcement bits (2): 0-mvpn global task 1-rt-export
          AS path: I
          Communities: target:10.255.162.100:0
```

4:3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.3:10.255.162.109:198.51.100.17/240  
(1 entry, 1 announced)

```
*BGP      Preference: 170/-101
          Next hop type: Indirect, Next hop index: 0
          Address: 0xa5cb0f0
```



```

Next-hop reference count: 21
Source: 198.51.100.17
Protocol next hop: 198.51.100.17
Indirect next hop: 0x0 - INH Session ID: 0x0
State: <Secondary Active Int Ext>
Local AS: 65550 Peer AS: 65550
Age: 1:11:04 Metric2: 3
Validation State: unverified
Task: BGP_65550.198.51.100.17
Announcement bits (1): 0-mvpn global task
AS path: I
Communities: target:10.255.162.117:0
Import Accepted
Localpref: 100
Router ID: 198.51.100.17
Primary Routing Table bgp.mvpn.0

```

### Meaning

The output shows that the configured tunnel type on the ABR2 is RSVP-TE. The RSVP tunnel from the ABR1 ends in ABR2 as the egress LSP, and the new LSP is triggered to egress PE2 and PE4.

### Verifying the Statistics of MPLS LSP

#### Purpose

Display the statistics of MPLS LSP.

#### Action

From operational mode, run the **show mpls lsp statistics** command for Device ABR2.

```
user@ABR2> show mpls lsp statistics
```

```

Ingress LSP: 6 sessions

```

To	From	State	Packets	Bytes	LSPname
10.255.162.104	10.255.162.117	Up	0	0	
10.255.162.104:10.255.162.117:100:mv20:vpn1					
10.255.162.104	10.255.162.117	Up	0	0	
10.255.162.104:10.255.162.117:100:mv21:vpn1					
10.255.162.104	10.255.162.117	Up	0	0	
10.255.162.104:10.255.162.117:100:mv22:vpn1					
198.51.100.17	10.255.162.117	Up	0	0	
198.51.100.17:10.255.162.117:100:mv20:vpn1					
198.51.100.17	10.255.162.117	Up	0	0	



```

198.51.100.17:10.255.162.117:100:mv21:vpn1
198.51.100.17      10.255.162.117 Up           0           0
198.51.100.17:10.255.162.117:100:mv22:vpn1
Total 6 displayed, Up 6, Down 0

Egress LSP: 6 sessions

```

To	From	State	Packets	Bytes	LSPname
10.255.162.117	10.255.162.100	Up	NA	NA	
10.255.162.117:10.255.162.100:100:mv45:vpn1					
10.255.162.117	10.255.162.100	Up	NA	NA	
10.255.162.117:10.255.162.100:100:mv47:vpn1					
10.255.162.117	10.255.162.100	Up	NA	NA	
10.255.162.117:10.255.162.100:100:mv49:vpn1					
10.255.162.117	10.255.162.104	Up	NA	NA	PE2_1_to_ABR2
10.255.162.117	10.255.162.107	Up	NA	NA	ABR3_to_ABR2
10.255.162.117	198.51.100.17	Up	NA	NA	PE2_3_to_ABR2

```

Total 6 displayed, Up 6, Down 0

```

## Configuring ABR3

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device ABR3:

1. Configure the interfaces.

```

[edit interfaces]
user@ABR3# set ge-1/0/8 unit 0 family inet address 203.0.113.6/24
user@ABR3# set ge-1/0/8 unit 0 family iso
user@ABR3# set ge-1/0/8 unit 0 family inet6 address ::203.0.113.6/120
user@ABR3# set ge-1/0/8 unit 0 family mpls

user@ABR3# set ge-1/1/4 unit 0 family inet address 203.0.113.9/24
user@ABR3# set ge-1/1/4 unit 0 family iso
user@ABR3# set ge-1/1/4 unit 0 family inet6 address ::203.0.113.9/120
user@ABR3# set ge-1/1/4 unit 0 family mpls

user@ABR3# set ge-1/3/1 unit 0 family inet address 203.0.113.8/24
user@ABR3# set ge-1/3/1 unit 0 family iso
user@ABR3# set ge-1/3/1 unit 0 family inet6 address ::203.0.113.8/120
user@ABR3# set ge-1/3/1 unit 0 family mpls

```



```

user@ABR3# set lo0 unit 0 family inet address 203.0.113.0/24
user@ABR3# set lo0 unit 0 family inet address 10.255.162.107/32 primary

```

2. Configure the autonomous system number.

```

[edit routing-options]
user@ABR3# set autonomous-system 65550

```

3. Configure RSVP on all the interfaces, excluding the management interface.

```

[edit protocols rsvp]
user@ABR3# set interface all
user@ABR3# set interface fxp0.0 disable
user@ABR3# set interface lo0.0

```

4. Configure MPLS IPv6 tunneling, configure the label-switched path, and enable MPLS on all the interfaces, excluding the management interface.

```

[edit protocols mpls]
user@ABR3# set ipv6-tunneling
user@ABR3# set label-switched-path ABR3_to_PE3 from 10.255.162.107
user@ABR3# set label-switched-path ABR3_to_PE3 to 10.255.162.102
user@ABR3# set label-switched-path ABR3_to_PE3 p2mp vpn1
user@ABR3# set label-switched-path ABR3_to_ABR1 from 10.255.162.107
user@ABR3# set label-switched-path ABR3_to_ABR1 to 10.255.162.100
user@ABR3# set label-switched-path ABR3_to_ABR1 p2mp vpn1
user@ABR3# set label-switched-path ABR3_to_ABR2 from 10.255.162.107
user@ABR3# set label-switched-path ABR3_to_ABR2 to 10.255.162.117
user@ABR3# set label-switched-path ABR3_to_ABR2 p2mp vpn1
user@ABR3# set interface all
user@ABR3# set interface fxp0.0 disable
user@ABR3# set interface lo0.0

```

5. Configure the BGP protocol.

```

[edit protocols bgp]
user@ABR3# set group IBGP_3 type internal
user@ABR3# set group IBGP_3 local-address 10.255.162.107
user@ABR3# set group IBGP_3 family inet any
user@ABR3# set group IBGP_3 family inet-vpn unicast

```



```

user@ABR3# set group IBGP_3 family inet-vpn multicast
user@ABR3# set group IBGP_3 family inet6 any
user@ABR3# set group IBGP_3 family inet6-vpn unicast
user@ABR3# set group IBGP_3 family inet-mvpn signaling
user@ABR3# set group IBGP_3 family inet6-mvpn signaling
user@ABR3# set group IBGP_3 family inet-mdt signaling
user@ABR3# set group IBGP_3 cluster 0.0.0.3
user@ABR3# set group IBGP_3 neighbor 10.255.162.102

user@ABR3# set group IBGP_0 type internal
user@ABR3# set group IBGP_0 local-address 10.255.162.107
user@ABR3# set group IBGP_0 family inet any
user@ABR3# set group IBGP_0 family inet-vpn unicast
user@ABR3# set group IBGP_0 family inet-vpn multicast
user@ABR3# set group IBGP_0 family inet6 any
user@ABR3# set group IBGP_0 family inet6-vpn unicast
user@ABR3# set group IBGP_0 family inet6-mvpn signaling
user@ABR3# set group IBGP_0 family inet6-mvpn signaling
user@ABR3# set group IBGP_0 family inet-mdt signaling
user@ABR3# set group IBGP_0 neighbor 10.255.162.100
user@ABR3# set group IBGP_0 neighbor 10.255.162.117

```

6. Configure OSPF traffic engineering attributes, disable OSPF on the management interface, and enable OSPF on the interfaces.

```

[edit protocols ospf]
user@ABR3# set traffic-engineering
user@ABR3# set area 0.0.0.0 interface fxp0.0 disable
user@ABR3# set area 0.0.0.0 interface ge-1/0/8.0
user@ABR3# set area 0.0.0.0 interface ge-1/1/4.0
user@ABR3# set area 0.0.0.0 interface lo0.0
user@ABR3# set area 0.0.0.3 interface ge-1/3/1.0

```

7. Enable LDP on all the interfaces and advertise P2MP capability to peers.

```

[edit protocols ldp]
user@ABR3# set interface all
user@ABR3# set p2mp

```

8. Configure PIM on the interfaces.



```
[edit protocols pim]
user@ABR3# set interface all
user@ABR3# set interface fxp0.0 disable
user@ABR3# set interface lo0.0
```

9. Configure the tunnels of the inter-region template for a specific region or all regions.

```
[edit protocols mvpn inter-region-template]
user@ABR3# set template template_1 region IBGP_3 rsvp-te label-switched-path-template default-template
user@ABR3# set template template_2 region IBGP_3 ldp-p2mp
user@ABR3# set template template_3 region IBGP_3 ingress-replication create-new-ucast-tunnel
user@ABR3# set template template_3 region IBGP_3 ingress-replication label-switched-path
    label-switched-path-template default-template
user@ABR3# set template template_4 all-regions incoming
user@ABR3# set template template_5 region IBGP_3 rsvp-te static-lsp ABR3_to_PE3
```

10. Configure the routing instance type, route distinguisher, inter-region template of the provider tunnel, and VRF target community, and advertise a single VPN label for all the routes in the VRF for the routing instance.

```
[edit routing-instances]
user@ABR3# set vpn1 instance-type vrf
user@ABR3# set vpn1 route-distinguisher 10.255.162.107:100
user@ABR3# set vpn1 provider-tunnel inter-region template template_1
user@ABR3# set vpn1 vrf-target target:123:1
user@ABR3# set vpn1 vrf-table-label
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show policy-options**, **show protocols**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@ABR3# show interfaces
ge-1/0/8 {
  unit 0 {
    family inet {
      address 203.0.113.6/24;
    }
    family iso;
    family inet6 {
```



```

        address ::203.0.113.6/120;
    }
    family mpls;
}
}
ge-1/1/4 {
    unit 0 {
        family inet {
            address 203.0.113.9/24;
        }
        family iso;
        family inet6 {
            address ::203.0.113.9/120;
        }
        family mpls;
    }
}
ge-1/3/1 {
    unit 0 {
        family inet {
            address 203.0.113.8/24;
        }
        family iso;
        family inet6 {
            address ::203.0.113.8/120;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 203.0.113.0/24;
            address 10.255.162.107/32 {
                primary;
            }
        }
    }
}
}

```

```

user@ABR3# show protocols
rsvp {
    interface all;
    interface fxp0.0 {

```



```

        disable;
    }
    interface lo0.0;
}
mpls {
    ipv6-tunneling;
    label-switched-path ABR3_to_PE3{
        from 10.255.162.107;
        to 10.255.162.102;
        p2mp vpn1;
    }
    label-switched-path ABR3_to_ABR1 {
        from 10.255.162.107;
        to 10.255.162.100;
        p2mp vpn1;
    }
    label-switched-path ABR3_to_ABR2 {
        from 10.255.162.107;
        to 10.255.162.117;
        p2mp vpn1;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}
bgp {
    group IBGP_3 {
        type internal;
        local-address 10.255.162.107;
        family inet {
            any;
        }
        family inet-vpn {
            unicast;
            multicast;
        }
        family inet6 {
            any;
        }
        family inet6-vpn {
            unicast;
        }
    }
}

```



```

    family inet-mvpn {
        signaling;
    }
    family inet6-mvpn {
        signaling;
    }
    family inet-mdt {
        signaling;
    }
    cluster 0.0.0.3;
    neighbor 10.255.162.102;
}
group IBGP_0 {
    type internal;
    local-address 10.255.162.107;
    family inet {
        any;
    }
    family inet-vpn {
        unicast;
        multicast;
    }
    family inet6 {
        any;
    }
    family inet6-vpn {
        unicast;
    }
    family inet-mvpn {
        signaling;
    }
    family inet6-mvpn {
        signaling;
    }
    family inet-mdt {
        signaling;
    }
    neighbor 10.255.162.100;
    neighbor 10.255.162.117;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {

```



```

interface fxp0.0 {
    disable;
}
interface ge-1/0/8.0;
interface ge-1/1/4.0;
interface lo0.0;
}
area 0.0.0.3 {
    interface ge-1/3/1.0;
}
}
ldp {
    interface all;
    p2mp;
}
pim {
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}
mvpn {
    inter-region-template {
        template template_1 {
            region IBGP_3 {
                rsvp-te {
                    label-switched-path-template {
                        default-template;
                    }
                }
            }
        }
        template template_2 {
            region IBGP_3 {
                ldp-p2mp;
            }
        }
        template template_3 {
            region IBGP_3 {
                ingress-replication {
                    create-new-ucast-tunnel;
                }
                label-switched-path {
                    label-switched-path-template {

```



```

        default-template;
    }
}
}
}
}
template template_4 {
    all-regions {
        incoming;
    }
}
template template_5 {
    region IBGP_3 {
        rsvp-te {
            static-lsp ABR3_to_PE3_1;
        }
    }
}
}
}
}

```

```

user@ABR3# show routing-instances
vpn1 {
    instance-type vrf;
    route-distinguisher 10.255.162.107:100;
    provider-tunnel {
        inter-region {
            template template_1;
        }
    }
    vrf-target target:123:1;
    vrf-table-label;
}

```

```

user@ABR3# show routing-option
autonomous-system 65550;

```

## Verification

Confirm that the configuration is working properly.



## Verifying Segmented Type-3 Received from ABR1 on ABR3

### Purpose

Display the segmented Type-3 received from ABR1 on ABR3 where the tunnel type is RSVP-TE.

### Action

From operational mode, run the **show route table vpn1.mvpn match-prefix 3:\* detail** command for Device ABR3.

```
user@ABR3> show route table vpn1.mvpn match-prefix 3:* detail
```

```
vpn1.mvpn.0: 22 destinations, 22 routes (22 active, 0 holddown, 0 hidden)
3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.2:10.255.162.109/240 (1 entry, 1
announced)
    *BGP      Preference: 170/-101
              PMSI: Flags 0x1: Label 0: RSVP-TE:
Session_13[10.255.162.100:0:6500:10.255.162.100]
    Next hop type: Indirect, Next hop index: 0
    Address: 0xa5bd650
    Next-hop reference count: 24
    Source: 10.255.162.100
    Protocol next hop: 10.255.162.109
    Indirect next hop: 0x0 - INH Session ID: 0x0
    State: <Secondary Active Int Ext>
    Local AS: 65550 Peer AS: 65550
    Age: 1:10:55      Metric2: 1
    Validation State: unverified
    Task: BGP_65550.10.255.162.100
    Announcement bits (1): 0-mvpn global task
    AS path: I (Originator)
    Cluster list: 0.0.0.1
    Originator ID: 10.255.162.109
    Communities: target:123:1 segmented-nh:10.255.162.100:0
    Import Accepted
    Localpref: 100
    Router ID: 10.255.162.100
    Primary Routing Table bgp.mvpn.0

3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.1:10.255.162.109/240 (1 entry, 1
announced)
    *BGP      Preference: 170/-101
              PMSI: Flags 0x1: Label 0: RSVP-TE:
Session_13[10.255.162.100:0:6504:10.255.162.100]
    Next hop type: Indirect, Next hop index: 0
```



```

Address: 0xa5bd650
Next-hop reference count: 24
Source: 10.255.162.100
Protocol next hop: 10.255.162.109
Indirect next hop: 0x0 - INH Session ID: 0x0
State: <Secondary Active Int Ext>
Local AS: 65550 Peer AS: 65550
Age: 1:10:25    Metric2: 1
Validation State: unverified
Task: BGP_65550.10.255.162.100
Announcement bits (1): 0-mvpn global task
AS path: I (Originator)
Cluster list: 0.0.0.1
Originator ID: 10.255.162.109
Communities: target:123:1 segmented-nh:10.255.162.100:0
Import Accepted
Localpref: 100
Router ID: 10.255.162.100
Primary Routing Table bgp.mvpn.0

```

```

3:10.255.162.109:100:32:172.16.1.2:32:192.0.2.3:10.255.162.109/240 (1 entry, 1
announced)

```

```

    *BGP    Preference: 170/-101
            PMSI: Flags 0x1: Label 0: RSVP-TE:
Session_13[10.255.162.100:0:6502:10.255.162.100]
    Next hop type: Indirect, Next hop index: 0
    Address: 0xa5bd650
    Next-hop reference count: 24
    Source: 10.255.162.100
    Protocol next hop: 10.255.162.109
    Indirect next hop: 0x0 - INH Session ID: 0x0
    State: <Secondary Active Int Ext>
    Local AS: 65550 Peer AS: 65550
    Age: 1:10:55    Metric2: 1
    Validation State: unverified
    Task: BGP_65550.10.255.162.100
    Announcement bits (1): 0-mvpn global task
    AS path: I (Originator)
    Cluster list: 0.0.0.1
    Originator ID: 10.255.162.109
    Communities: target:123:1 segmented-nh:10.255.162.100:0
    Import Accepted
    Localpref: 100

```



```
Router ID: 10.255.162.100
Primary Routing Table bgp.mvpn.0
```

### Meaning

The output displays the segmented Type-3 traffic received from ABR1 where the tunnel type is RSVP-TE.

### SEE ALSO

[Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview | 608](#)

[Configuring Segmented Inter-Area P2MP LSP | 610](#)

[all-regions | 1255](#)

[inter-region | 1308](#)

[inter-region-template | 1311](#)

[inter-region-segmented | 1309](#)

[region | 1361](#)

[template | 1391](#)

## MVPN Route Distribution

### IN THIS SECTION

- [Configuring Routing Instances for an MBGP MVPN | 685](#)
- [Configuring Shared-Tree Data Distribution Across Provider Cores for Providers of MBGP MVPNs | 686](#)
- [Configuring SPT-Only Mode for Multiprotocol BGP-Based Multicast VPNs | 687](#)
- [Configuring Internet Multicast Using Ingress Replication Provider Tunnels | 690](#)
- [Controlling PIM Resources for Multicast VPNs Overview | 694](#)
- [Example: Configuring PIM State Limits | 697](#)
- [Understanding Wildcards to Configure Selective Point-to-Multipoint LSPs for an MBGP MVPN | 710](#)
- [Configuring a Selective Provider Tunnel Using Wildcards | 716](#)
- [Example: Configuring Selective Provider Tunnels Using Wildcards | 717](#)
- [Configuring NLRI Parameters for an MBGP MVPN | 718](#)



This topic provides information and examples on configuring routing instances to support multicast in a Layer 3 VPN.

## Configuring Routing Instances for an MBGP MVPN

To configure MBGP MVPNs, include the **mvpn** statement:

```
mvpn {
  mvpn-mode (rpt-spt | spt-only);
  receiver-site;
  route-target {
    export-target {
      target target-community;
      unicast;
    }
    import-target {
      target {
        target-value;
        receiver target-value;
        sender target-value;
      }
      unicast {
        receiver;
        sender;
      }
    }
  }
  sender-site;
  traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable>;
    flag flag <flag-modifier> <disable>;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols]

By default an MBGP MVPN routing instance is associated with both the multicast sender and the receiver sites. If you configure the **receiver-site** option, the routing instance is associated with only multicast receiver sites. Configuring the **sender-site** option associates the routing instance with only multicast sender sites.



**NOTE:** When you configure the routing instance for the MBGP MVPN, you must configure MPLS LSPs (either RSVP-signaled or LDP-signaled) between the PE routers of the routing instance to ensure VPN unicast connectivity. Point-to-multipoint LSPs are used for multicast data forwarding only.

## Configuring Shared-Tree Data Distribution Across Provider Cores for Providers of MBGP MVPNs

For MBGP MVPNs (also referred to as next-generation Layer 3 multicast VPNs), the default mode of operation supports only intersite shortest-path trees (SPTs) for customer PIM (C-PIM) join messages. It does not support rendezvous-point trees (RPTs) for C-PIM join messages. The default mode of operation provides advantages, but it requires either that the customer rendezvous point (C-RP) be located on a PE router or that the Multicast Source Discovery Protocol (MSDP) be used between the C-RP and a PE router so that the PE router can learn about active sources advertised by other PE routers.

If the default mode is not suitable for your environment, you can configure RPT-SPT mode (also known as *shared-tree data distribution*), as documented in section 13 of the BGP-MVPN draft (draft-ietf-l3vpn-2547bis-mcast-bgp-00.txt). RPT-SPT mode supports the native PIM model of transmitting (\*,G) messages from the receiver to the RP for intersite shared-tree join messages. This means that the type 6 (\*,G) routes get transmitted from one PE router to another. In RPT-SPT mode, the shared-tree multicast routes are advertised from an egress PE router to the upstream router connected to the VPN site with the C-RP. The single-forwarder election is performed for the C-RP rather than for the source. The egress PE router takes the upstream hop to advertise the (\*,G) and sends the type 6 route toward the upstream PE router. To send the data on the RPT, either inclusive or selective provider tunnels can be used. After the data starts flowing on the RPT, the last-hop router switches to SPT mode, unless you include the **spt-threshold infinity** statements in the configuration.

**NOTE:** The MVPN single-forwarder election follows the rule documented in section 9.1.1 of the BGP-MVPN draft (draft-ietf-l3vpn-2547bis-mcast-bgp-00.txt). The single-forwarder election winner is based on the following rules:

- If the active unicast route to the source is through the interface, then this route is used to determine the upstream multicast hop (UMH).
- If the active unicast route to the source is a VPN route, MVPN selects the UMH based on the highest IP address in the route import community for the VPN routes, and the local master loopback address for local VRF routes.



The switch to SPT mode is performed by PIM and not by MVPN type 5 and type 6 routes. After the last-hop router switches to SPT mode, the SPT (S,G) join messages follow the same rules as the SPT-only default mode.

The advantage of RPT-SPT mode is that it provides a method for PE routers to discover sources in the multicast VPN when the C-RP is located on the customer site instead of on a PE router. Because the shared C-tree is established between VPN sites, there is no need to run MSDP between the C-RP and the PE routers. RPT-SPT mode also enables egress PE routers to switch to receiving data from the PE connected to the source after the source information is learned, instead of receiving data from the RP.

In Junos OS Release 15.1 and later, in RPT-SPT mode, PIM SSG Joins are created on the egress PE even if no directly-connected receivers are present.



**CAUTION:** When you configure RPT-SPT mode, receivers or sources directly attached to the PE router are not supported. As a workaround, place a CE router between any receiver or source and the PE router.

To configure RPT-SPT mode:

1. Enable shared-tree data distribution:

```
[edit routing-instances routing-instance-name protocols mvpn mvpn-mode]
user@router# set rpt-spt
```

2. Include the **rpt-spt** statement for all VRFs that make up the VPN.

## Configuring SPT-Only Mode for Multiprotocol BGP-Based Multicast VPNs

For MBGP MVPNs (also referred to as next-generation Layer 3 multicast VPNs), the default mode of operation is shortest path tree only (SPT-only) mode. In SPT-only mode, the active multicast sources are learned through multicast VPN source-active routes. This mode of operation is described in section 14 of the BGP-MVPN draft (draft-ietf-l3vpn-2547bis-mcast-bgp-00.txt).

In contrast to SPT-only mode, rendezvous point tree (RPT)-SPT mode (also known as shared-tree data distribution) supports the native PIM model of transmitting (\*,G) messages from the receiver to the RP for intersite shared-tree join messages.

In SPT-only mode, when a PE router receives a (\*, C-G) join message, the router looks for an active source transmitting data to the customer group. If the PE router has a source-active route for the customer group, the router creates a source tree customer multicast route and sends the route to the PE router connected



to the VPN site with the source. The source is determined by MVPN's single-forwarder election. When a receiver sends a (\*,G) join message in a VPN site, the (\*,G) join message only travels as far as the PE router. After the join message is converted to a type 7 multicast route, which is equivalent to a (S,G) join message, the route is installed with the no-advertise community setting.

**NOTE:** The MVPN single-forwarder election follows the rule documented in section 9.1.1 of the BGP-MVPN draft (draft-ietf-l3vpn-2547bis-mcast-bgp-00.txt). The single-forwarder election winner is based on the following rules:

- If the active unicast route to the source is through the interface, then this route is used to determine the upstream multicast hop (UMH).
- If the active unicast route to the source is a VPN route, MVPN selects the UMH based on the highest IP address in the route import community for the VPN routes, and the local master loopback address for local VRF routes.

Single-forwarder election guarantees selection of a unique forwarder for a given customer source (C-S). The upstream PE router might differ for the source tree and the shared tree because the election is based on the customer source and C-RP, respectively. Although the single-forwarder election is sufficient for SPT-only mode, the alternative RPT-SPT mode involves procedures to prevent duplicate traffic from being sent on the shared tree and the source tree. These procedures might require administrator-configured parameters to reduce duplicate traffic and reduce blackholes during RPT to SPT switch and the reverse.

In SPT-only mode, when a source is active, PIM creates a register state for the source both on the DR and on the C-RP (or on a PE router that is running Multicast Source Discovery Protocol [MSDP] between itself and the C-RP). After the register states are created, MVPN creates a source-active route. These type 5 source-active routes are installed on all PE routers. When the egress PE router with the (\*,G) join message receives the source-active route, it has two routes that it can combine to produce the (S,G) multicast route. The type 7 route informs the PE router that a receiver is interested in group G. The source active route informs the PE router that a source S is transmitting data to group G. MVPN combines this information to produce a multicast join message and advertises this to the ingress PE router, as determined by the single-forwarder election.

For some service providers, the SPT-only implementation is not ideal because it creates a restriction on C-RP configuration. For a PE router to create customer multicast routes from (\*, C-G) join messages, the router must learn about active sources through MVPN type 5 source-active routes. These source-active routes can be originated only by a PE router. This means that a PE router in the MVPN must learn about all PIM register messages sent to the RP, which is possible only in the following cases:

- The C-RP is colocated on one of the PEs in the MVPN.
- MSDP is run between the C-RP and the VRF instance on one of the PE routers in the MVPN.



If this restriction is not acceptable, providers can use RPT-SPT mode instead of the default SPT-only mode. However, because SPT-only mode does not transmit (\*,G) routes between VPN sites, SPT-only mode has the following advantages over RPT-SPT mode:

- Simplified operations by exchanging and processing only source-tree customer multicast routes among PE routers
- Simplified operations by eliminating the need for the service provider to suppress MVPN transient duplicates during the switch from RPT to SPT
- Less control plane overhead in the service provider space by limiting the type of customer multicast routes exchanged, which results in more scalable deployments
- More stable traffic patterns in the backbone without the traffic shifts involved in the RPT-SPT mode
- Easier maintenance in the service provider space due to less state information

To configure SPT-only mode:

1. Explicitly configure SPT-only mode:

```
[edit routing-instances routing-instance-name protocols mvpn mvpn-mode]  
user@router# set spt-only
```

2. Include the **spt-only** statement for all VRFs that make up the VPN.



## Configuring Internet Multicast Using Ingress Replication Provider Tunnels

The routing instance type **mpls-internet-multicast** uses ingress replication provider tunnels to carry IP multicast data between routers through an MPLS cloud, enabling a faster path for multicast traffic between sender and receiver routers in large-scale implementations.


The **mpls-internet-multicast** routing instance is a non-forwarding instance used only for control plane procedures; it does not support any interface configurations. Only one **mpls-internet-multicast** routing instance can be defined for a logical system. All multicast and unicast routes used for Internet multicast are associated only with the master instance (inet.0), not with the routing instance.

Each router participating in Internet multicast must be configured with BGP MPLS-based Internet multicast for control plane procedures and with ingress replication for the data provider tunnel, which forms a full mesh of MPLS point-to-point LSPs. The ingress replication tunnel can be selective or inclusive, matching the configuration of the provider tunnel in the routing instance.

The topology consists of routers on the edge of the IP multicast domain that have a set of IP interfaces and a set of MPLS core-facing interfaces, see [Figure 57 on page 691](#). Internet multicast traffic is carried between the IP routers, through the MPLS cloud, using ingress replication tunnels for the data plane and a full-mesh IGBP session for the control plane.



Figure 57: Internet Multicast Topology

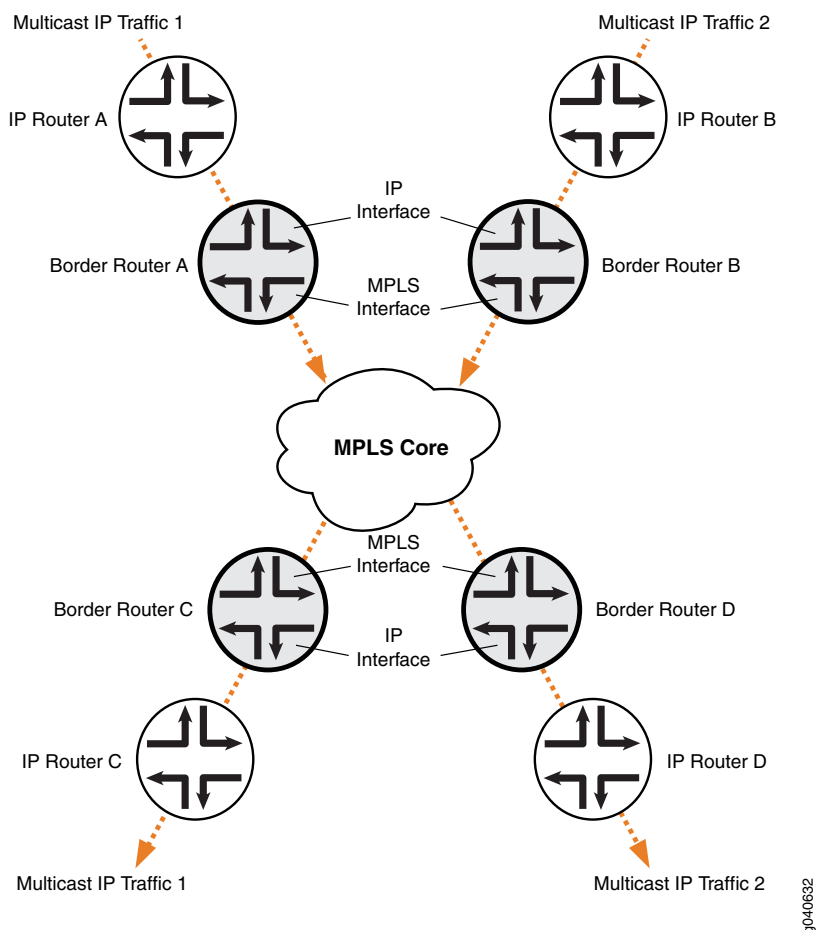

The [mpls-internet-multicast](#) routing instance type is configured for the default master instance on each router to support Internet multicast over MPLS. When using PIM as the multicast protocol, the [mpls-internet-multicast](#) configuration statement is also included at the `[edit protocols pim]` hierarchy level in the master instance. This creates a pseudo-interface that associates PIM with the [mpls-internet-multicast](#) routing instance.

When a new destination needs to be added to the ingress replication provider tunnel, the resulting behavior differs depending on how the ingress replication provider tunnel is configured:

- [create-new-ucast-tunnel](#)—When this statement is configured, a new unicast tunnel to the destination is created, and is deleted when the destination is no longer needed. Use this mode for RSVP LSPs using ingress replication.
- [label-switched-path-template \(Multicast\)](#)—When this statement is configured, an LSP template is used for the point-to-multipoint LSP for ingress replication.



### Example: Configure Internet Multicast Using Ingress Replication Tunnels

This example configures VPN-B with the instance type **mpls-internet-multicast**. This example also uses PIM for the multicast protocol.

1. Configure the routing instance type for VPN-B as **mpls-internet-multicast**:

```
user@host# set routing-instances VPN-B instance-type mpls-internet-multicast
```

2. Configure the ingress replication provider tunnel to create a new unicast tunnel each time an application requests to add a destination:

```
user@host# set routing-instances VPN-B provider-tunnel ingress-replication
create-new-ucast-tunnel
```

3. Configure the point-to-point LSP to use the default template settings.

```
user@host# set routing-instances VPN-B provider-tunnel ingress-replication
label-switched-path label-switched-path-template default-template
```

4. Configure the ingress replication provider tunnel to be selective:

```
user@host# set routing-instances VPN-B provider-tunnel selective group
203.0.113.1/24 source 192.168.195.145/32 ingress-replication
label-switched-path
```

5. Configure MVPN protocol in the routing instance:

```
user@host# set routing-instances VPN-B protocols mvpn
```

6. Commit the configuration:

```
user@host# commit
```

7. Use show command to verify the instance has been created:

```
user@host# run show mvpn instance VPN-B
```

```
MVPN instance:
Legend for provider tunnel I-P-tnl -- inclusive provider tunnel S-P-tnl --
selective provider tunnel
Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance : VPN-B
MVPN Mode : SPT-ONLY
Provider tunnel: I-P-tnl:INGRESS-REPLICATION:MPLS Label 18:10.255.245.6
Neighbor          I-P-tnl
```



```

10.255.245.2          INGRESS-REPLICATION:MPLS Label 22:10.255.245.2
10.255.245.7          INGRESS-REPLICATION:MPLS Label 19:10.255.245.7
C-mcast IPv4 (S:G)    Ptnl                               St
192.168.195.145/32:203.0.113.1/24 INGRESS-REPLICATION:MPLS Label
18:10.255.245.6       RM

```

8. Add the **mpls-internet-multicast** configuration statement under the **[edit protocols pim]** hierarchy level in the master instance:

```
user@host# set protocols pim mpls-internet-multicast
```

9. Commit the configuration:

```
user@host# commit
```

10. Use **show ingress-replication mvpn** command to verify configuration settings:

```
user@host# run show ingress-replication mvpn
```

```

Ingress Tunnel: mvpn:11
Application: MVPN
Unicast tunnels
  Leaf Address      Tunnel-type      Mode      State
  10.255.245.2      P2P LSP         New       Up
  10.255.245.4      P2P LSP         New       Up
Ingress Tunnel: mvpn:2
Application: MVPN
Unicast tunnels
  Leaf Address      Tunnel-type      Mode      State
  10.255.245.2      P2P LSP         Existing  Up

```

11. Use this if you want to configure the ingress replication provider tunnel to be inclusive:

```

user@host# set routing-instances VPN-B provider-tunnel ingress-replication
create-new-ucast-tunnel
user@host# set routing-instances VPN-B provider-tunnel ingress-replication
label-switched-path label-switched-path-template default-template

```

12. Use **show mvpn instance** command to verify tunnel is inclusive:

```
user@host# run show mvpn instance VPN-B
```

```

MVPN instance:
Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

```



```

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance : VPN-A
  MVPN Mode : SPT-ONLY
  Provider tunnel: I-P-tnl:INGRESS-REPLICATION:MPLS Label 18:10.255.245.6
  Neighbor      I-P-tnl
  10.255.245.2   INGRESS-REPLICATION:MPLS Label 22:10.255.245.2
  10.255.245.7   INGRESS-REPLICATION:MPLS Label 19:10.255.245.7
  C-mcast IPv4 (S:G)  Ptnl      St
  192.168.195.145/32:203.0.113.1/24 INGRESS-REPLICATION:MPLS Label 18:10.255.245.6
  RM

```

SEE ALSO

[create-new-ucast-tunnel | 1265](#)

[ingress-replication | 1302](#)

[mpls-internet-multicast | 1330](#)

## Controlling PIM Resources for Multicast VPNs Overview

A service provider network must protect itself from potential attacks from misconfigured or misbehaving customer edge (CE) devices and their associated VPN routing and forwarding (VRF) routing instances. Misbehaving CE devices can potentially advertise a large number of multicast routes toward a provider edge (PE) device, thereby consuming memory on the PE device and using other system resources in the network that are reserved for routes belonging to other VPNs.

To protect against potential misbehaving CE devices and VRF routing instances for specific multicast VPNs (MVPNs), you can control the following Protocol Independent Multicast (PIM) resources:

- Limit the number of accepted PIM join messages for any-source groups (\*,G) and source-specific groups (S,G).

Note how the device counts the PIM join messages:

- Each (\*,G) counts as one group toward the limit.
- Each (S,G) counts as one group toward the limit.
- Limit the number of PIM register messages received for a specific VRF routing instance. Use this configuration if the device is configured as a rendezvous point (RP) or has the potential to become an



RP. When a source in a multicast network becomes active, the source's designated router (DR) encapsulates multicast data packets into a PIM register message and sends them by means of unicast to the RP router.

Note how the device counts PIM register messages:

- Each unique (S,G) join received by the RP counts as one group toward the configured register messages limit.
- Periodic register messages sent by the DR for existing or already known (S,G) entries do not count toward the configured register messages limit.
- Register messages are accepted until either the PIM register limit or the PIM join limit (if configured) is exceeded. Once either limit is reached, any new requests are dropped.
- Limit the number of group-to-RP mappings allowed in a specific VRF routing instance. Use this configuration if the device is configured as an RP or has the potential to become an RP. This configuration can apply to devices configured for automatic RP announce and discovery (Auto-RP) or as a PIM bootstrap router. Every multicast device within a PIM domain must be able to map a particular multicast group address to the same RP. Both Auto-RP and the bootstrap router functionality are the mechanisms used to learn the set of group-to-RP mappings. Auto-RP is typically used in a PIM dense-mode deployment, and the bootstrap router is typically used in a PIM sparse-mode deployment.

**NOTE:** The group-to-RP mappings limit does not apply to static RP or embedded RP configurations.

Some important things to note about how the device counts group-to-RP mappings:

- One group prefix mapped to five RPs counts as five group-to-RP mappings.
- Five distinct group prefixes mapped to one RP count as five group-to-RP mappings.

Once the configured limits are reached, no new PIM join messages, PIM register messages, or group-to-RP mappings are accepted unless one of the following occurs:

- You clear the current PIM join states by using the **clear pim join** command. If you use this command on an RP configured for PIM register message limits, the register limit count is also restarted because the PIM join messages are unknown by the RP.

**NOTE:** On the RP, you can also use the **clear pim register** command to clear all of the PIM registers. This command is useful if the current PIM register count is greater than the newly configured PIM register limit. After you clear the PIM registers, new PIM register messages are received up to the configured limit.



- The traffic responsible for the excess PIM join messages and PIM register messages stops and is no longer present.



**CAUTION:** Never restart any of the software processes unless instructed to do so by a customer support engineer.

You restart the PIM routing process on the device. This restart clears all of the configured limits but disrupts routing and therefore requires a maintenance window for the change.

## System Log Messages for PIM Resources

You can optionally configure a system log warning threshold for each of the PIM resources. With this configuration, you can generate and review system log messages to detect if an excessive number of PIM join messages, PIM register messages, or group-to-RP mappings have been received on the device. The system log warning thresholds are configured per PIM resource and are a percentage of the configured maximum limits of the PIM join messages, PIM register messages, and group-to-RP mappings. You can further specify a log interval for each configured PIM resource, which is the amount of time (in seconds) between the log messages.

The log messages convey when the configured limits have been exceeded, when the configured warning thresholds have been exceeded, and when the configured limits drop below the configured warning threshold. [Table 10 on page 696](#) describes the different types of PIM system messages that you might see depending on your system log warning and log interval configurations.

**Table 10: PIM System Log Messages**

System Log Message	Definition
RPD_PIM_SG_THRESHOLD_EXCEED	Records when the (S,G)/(*,G) routes exceed the configured warning threshold.
RPD_PIM_REG_THRESH_EXCEED	Records when the PIM registers exceed the configured warning threshold.
RPD_PIM_GRP_RP_MAP_THRES_EXCEED	Records when the group-to-RP mappings exceed the configured warning threshold.
RPD_PIM_SG_LIMIT_EXCEED	Records when the (S,G)/(*,G) routes exceed the configured limit, or when the configured log interval has been met and the routes exceed the configured limit.



Table 10: PIM System Log Messages (*continued*)

System Log Message	Definition
RPD_PIM_REGISTER_LIMIT_EXCEED	Records when the PIM registers exceed the configured limit, or when the configured log interval has been met and the registers exceed the configured limit.
RPD_PIM_GRP_RP_MAP_LIMIT_EXCEED	Records when the group-to-RP mappings exceed the configured limit, or when the configured log interval has been met and the mapping exceeds the configured limit.
RPD_PIM_SG_LIMIT_BELOW	Records when the (S,G)/(*,G) routes drop below the configured limit and the configured log interval.
RPD_PIM_REGISTER_LIMIT_BELOW	Records when the PIM registers drop below the configured limit and the configured log interval.
RPD_PIM_GRP_RP_MAP_LIMIT_BELOW	Records when the group-to-RP mappings drop below the configured limit and the configured log interval.

## Example: Configuring PIM State Limits

### IN THIS SECTION

- [Requirements | 697](#)
- [Overview | 698](#)
- [Configuration | 698](#)
- [Verification | 709](#)

This example shows how to set limits on the Protocol Independent Multicast (PIM) state information so that a service provider network can protect itself from potential attacks from misconfigured or misbehaving customer edge (CE) devices and their associated VPN routing and forwarding (VRF) routing instances.

### Requirements

No special configuration beyond device initialization is required before configuring this example.



## Overview

In this example, a multiprotocol BGP-based multicast VPN (next-generation MBGP MVPN) is configured with limits on the PIM state resources.

The **sglimit maximum** statement sets a limit for the number of accepted (\*,G) and (S,G) PIM join states received for the vpn-1 routing instance.

The **rp register-limit maximum** statement configures a limit for the number of PIM register messages received for the vpn-1 routing instance. You configure this statement on the rendezvous point (RP) or on all the devices that might become the RP.


The **group-rp-mapping maximum** statement configures a limit for the number of group-to-RP mappings allowed in the vpn-1 routing instance.

For each configured PIM resource, the **threshold** statement sets a percentage of the maximum limit at which to start generating warning messages in the PIM log file.

For each configured PIM resource, the **log-interval** statement is an amount of time (in seconds) between system log message generation.

Figure 58 on page 698 shows the topology used in this example.

Figure 58: PIM State Limits Topology

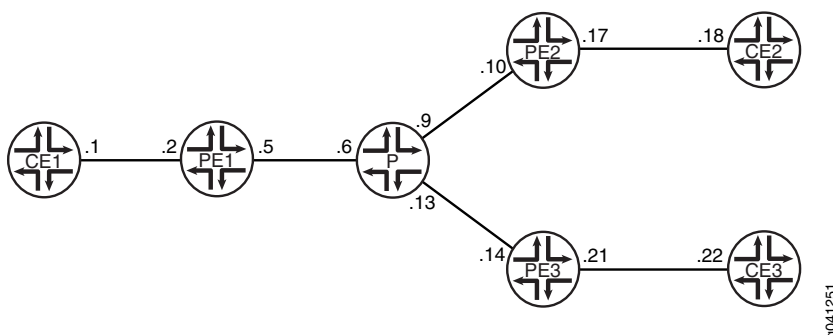

"CLI Quick Configuration" on page 698 shows the configuration for all of the devices in Figure 58 on page 698. The section "Step-by-Step Procedure" on page 703 describes the steps on Device PE1.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level.

#### Device CE1



```

set interfaces ge-1/2/0 unit 1 family inet address 10.1.1.1/30
set interfaces ge-1/2/0 unit 1 family mpls
set interfaces lo0 unit 1 family inet address 192.0.2.1/24
set protocols ospf area 0.0.0.0 interface lo0.1 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.1
set protocols pim rp static address 203.0.113.1
set protocols pim interface all
set routing-options router-id 192.0.2.1

```

## Device PE1

```

set interfaces ge-1/2/0 unit 2 family inet address 10.1.1.2/30
set interfaces ge-1/2/0 unit 2 family mpls
set interfaces ge-1/2/1 unit 5 family inet address 10.1.1.5/30
set interfaces ge-1/2/1 unit 5 family mpls
set interfaces vt-1/2/0 unit 2 family inet
set interfaces lo0 unit 2 family inet address 192.0.2.2/24
set interfaces lo0 unit 102 family inet address 203.0.113.1/24
set protocols mpls interface ge-1/2/1.5
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 192.0.2.2
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp family inet-mvpn signaling
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols bgp group ibgp neighbor 192.0.2.5
set protocols ospf area 0.0.0.0 interface lo0.2 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/1.5
set protocols ldp interface ge-1/2/1.5
set protocols ldp p2mp
set policy-options policy-statement parent_vpn_routes from protocol bgp
set policy-options policy-statement parent_vpn_routes then accept
set routing-instances vpn-1 instance-type vrf
set routing-instances vpn-1 interface ge-1/2/0.2
set routing-instances vpn-1 interface vt-1/2/0.2
set routing-instances vpn-1 interface lo0.102
set routing-instances vpn-1 route-distinguisher 100:100
set routing-instances vpn-1 provider-tunnel ldp-p2mp
set routing-instances vpn-1 vrf-target target:1:1
set routing-instances vpn-1 protocols ospf export parent_vpn_routes
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface lo0.102 passive

```



```

set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface ge-1/2/0.2
set routing-instances vpn-1 protocols pim sglimit family inet maximum 100
set routing-instances vpn-1 protocols pim sglimit family inet threshold 70
set routing-instances vpn-1 protocols pim sglimit family inet log-interval 10
set routing-instances vpn-1 protocols pim rp register-limit family inet maximum 100
set routing-instances vpn-1 protocols pim rp register-limit family inet threshold 80
set routing-instances vpn-1 protocols pim rp register-limit family inet log-interval 10
set routing-instances vpn-1 protocols pim rp group-rp-mapping family inet maximum 100
set routing-instances vpn-1 protocols pim rp group-rp-mapping family inet threshold 80
set routing-instances vpn-1 protocols pim rp group-rp-mapping family inet log-interval 10
set routing-instances vpn-1 protocols pim rp static address 203.0.113.1
set routing-instances vpn-1 protocols pim interface ge-1/2/0.2 mode sparse
set routing-instances vpn-1 protocols mvpn
set routing-options router-id 192.0.2.2
set routing-options autonomous-system 1001

```

#### Device P

```

set interfaces ge-1/2/0 unit 6 family inet address 10.1.1.6/30
set interfaces ge-1/2/0 unit 6 family mpls
set interfaces ge-1/2/1 unit 9 family inet address 10.1.1.9/30
set interfaces ge-1/2/1 unit 9 family mpls
set interfaces ge-1/2/2 unit 13 family inet address 10.1.1.13/30
set interfaces ge-1/2/2 unit 13 family mpls
set interfaces lo0 unit 3 family inet address 192.0.2.3/24
set protocols mpls interface ge-1/2/0.6
set protocols mpls interface ge-1/2/1.9
set protocols mpls interface ge-1/2/2.13
set protocols ospf area 0.0.0.0 interface lo0.3 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.6
set protocols ospf area 0.0.0.0 interface ge-1/2/1.9
set protocols ospf area 0.0.0.0 interface ge-1/2/2.13
set protocols ldp interface ge-1/2/0.6
set protocols ldp interface ge-1/2/1.9
set protocols ldp interface ge-1/2/2.13
set protocols ldp p2mp
set routing-options router-id 192.0.2.3

```

#### Device PE2



```

set interfaces ge-1/2/0 unit 10 family inet address 10.1.1.10/30
set interfaces ge-1/2/0 unit 10 family mpls
set interfaces ge-1/2/1 unit 17 family inet address 10.1.1.17/30
set interfaces ge-1/2/1 unit 17 family mpls
set interfaces vt-1/2/0 unit 4 family inet
set interfaces lo0 unit 4 family inet address 192.0.2.4/24
set interfaces lo0 unit 104 family inet address 203.0.113.4/24
set protocols mpls interface ge-1/2/0.10
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 192.0.2.4
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp family inet-mvpn signaling
set protocols bgp group ibgp neighbor 192.0.2.2
set protocols bgp group ibgp neighbor 192.0.2.5
set protocols ospf area 0.0.0.0 interface lo0.4 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.10
set protocols ldp interface ge-1/2/0.10
set protocols ldp p2mp
set policy-options policy-statement parent_vpn_routes from protocol bgp
set policy-options policy-statement parent_vpn_routes then accept
set routing-instances vpn-1 instance-type vrf
set routing-instances vpn-1 interface vt-1/2/0.4
set routing-instances vpn-1 interface ge-1/2/1.17
set routing-instances vpn-1 interface lo0.104
set routing-instances vpn-1 route-distinguisher 100:100
set routing-instances vpn-1 vrf-target target:1:1
set routing-instances vpn-1 protocols ospf export parent_vpn_routes
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface lo0.104 passive
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface ge-1/2/1.17
set routing-instances vpn-1 protocols pim rp group-rp-mapping family inet maximum 100
set routing-instances vpn-1 protocols pim rp group-rp-mapping family inet threshold 80
set routing-instances vpn-1 protocols pim rp group-rp-mapping family inet log-interval 10
set routing-instances vpn-1 protocols pim rp static address 203.0.113.1
set routing-instances vpn-1 protocols pim interface ge-1/2/1.17 mode sparse
set routing-instances vpn-1 protocols mvpn
set routing-options router-id 192.0.2.4
set routing-options autonomous-system 1001

```

Device PE3



```

set interfaces ge-1/2/0 unit 14 family inet address 10.1.1.14/30
set interfaces ge-1/2/0 unit 14 family mpls
set interfaces ge-1/2/1 unit 21 family inet address 10.1.1.21/30
set interfaces ge-1/2/1 unit 21 family mpls
set interfaces vt-1/2/0 unit 5 family inet
set interfaces lo0 unit 5 family inet address 192.0.2.5/24
set interfaces lo0 unit 105 family inet address 203.0.113.5/24
set protocols mpls interface ge-1/2/0.14
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 192.0.2.5
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp family inet-mvpn signaling
set protocols bgp group ibgp neighbor 192.0.2.2
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols ospf area 0.0.0.0 interface lo0.5 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.14
set protocols ldp interface ge-1/2/0.14
set protocols ldp p2mp
set policy-options policy-statement parent_vpn_routes from protocol bgp
set policy-options policy-statement parent_vpn_routes then accept
set routing-instances vpn-1 instance-type vrf
set routing-instances vpn-1 interface vt-1/2/0.5
set routing-instances vpn-1 interface ge-1/2/1.21
set routing-instances vpn-1 interface lo0.105
set routing-instances vpn-1 route-distinguisher 100:100
set routing-instances vpn-1 vrf-target target:1:1
set routing-instances vpn-1 protocols ospf export parent_vpn_routes
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface lo0.105 passive
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface ge-1/2/1.21
set routing-instances vpn-1 protocols pim rp static address 203.0.113.1
set routing-instances vpn-1 protocols pim interface ge-1/2/1.21 mode sparse
set routing-instances vpn-1 protocols mvpn
set routing-options router-id 192.0.2.5
set routing-options autonomous-system 1001

```

## Device CE2

```

set interfaces ge-1/2/0 unit 18 family inet address 10.1.1.18/30
set interfaces ge-1/2/0 unit 18 family mpls
set interfaces lo0 unit 6 family inet address 192.0.2.6/24

```



```

set protocols sap listen 192.168.0.0
set protocols ospf area 0.0.0.0 interface lo0.6 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.18
set protocols pim rp static address 203.0.113.1
set protocols pim interface all
set routing-options router-id 192.0.2.6

```

### Device CE3

```

set interfaces ge-1/2/0 unit 22 family inet address 10.1.1.22/30
set interfaces ge-1/2/0 unit 22 family mpls
set interfaces lo0 unit 7 family inet address 192.0.2.7/24
set protocols ospf area 0.0.0.0 interface lo0.7 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.22
set protocols pim rp static address 203.0.113.1
set protocols pim interface all
set routing-options router-id 192.0.2.7

```

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure PIM state limits:

1. Configure the network interfaces.

```

[edit interfaces]
user@PE1# set ge-1/2/0 unit 2 family inet address 10.1.1.2/30
user@PE1# set ge-1/2/0 unit 2 family mpls
user@PE1# set ge-1/2/1 unit 5 family inet address 10.1.1.5/30
user@PE1# set ge-1/2/1 unit 5 family mpls
user@PE1# set vt-1/2/0 unit 2 family inet
user@PE1# set lo0 unit 2 family inet address 192.0.2.2/24
user@PE1# set lo0 unit 102 family inet address 203.0.113.1/24

```

2. Configure MPLS on the core-facing interface.

```

[edit protocols mpls]

```



```
user@PE1# set interface ge-1/2/1.5
```

3. Configure internal BGP (IBGP) on the main router.

The IBGP neighbors are the other PE devices.

```
[edit protocols bgp group ibgp]
user@PE1# set type internal
user@PE1# set local-address 192.0.2.2
user@PE1# set family inet-vpn any
user@PE1# set family inet-mvpn signaling
user@PE1# set neighbor 192.0.2.4
user@PE1# set neighbor 192.0.2.5
```

4. Configure OSPF on the main router.

```
[edit protocols ospf area 0.0.0.0]
user@PE1# set interface lo0.2 passive
user@PE1# set interface ge-1/2/1.5
```

5. Configure a signaling protocol (RSVP or LDP) on the main router.

```
[edit protocols ldp]
user@PE1# set interface ge-1/2/1.5
user@PE1# set p2mp
```

6. Configure the BGP export policy.

```
[edit policy-options policy-statement parent_vpn_routes]
user@PE1# set from protocol bgp
user@PE1# set then accept
```

7. Configure the routing instance.

The customer-facing interfaces and the BGP export policy are referenced in the routing instance.

```
[edit routing-instances vpn-1]
user@PE1# set instance-type vrf
user@PE1# set interface ge-1/2/0.2
user@PE1# set interface vt-1/2/0.2
```



```

user@PE1# set interface lo0.102
user@PE1# set route-distinguisher 100:100
user@PE1# set provider-tunnel ldp-p2mp
user@PE1# set vrf-target target:1:1
user@PE1# set protocols ospf export parent_vpn_routes
user@PE1# set protocols ospf area 0.0.0.0 interface lo0.102 passive
user@PE1# set protocols ospf area 0.0.0.0 interface ge-1/2/0.2
user@PE1# set protocols pim rp static address 203.0.113.1
user@PE1# set protocols pim interface ge-1/2/0.2 mode sparse
user@PE1# set protocols mvpn

```

#### 8. Configure the PIM state limits.

```

[edit routing-instances vpn-1 protocols pim]
user@PE1# set sglimit family inet maximum 100
user@PE1# set sglimit family inet threshold 70
user@PE1# set sglimit family inet log-interval 10
user@PE1# set rp register-limit family inet maximum 100
user@PE1# set rp register-limit family inet threshold 80
user@PE1# set rp register-limit family inet log-interval 10
user@PE1# set rp group-rp-mapping family inet maximum 100
user@PE1# set rp group-rp-mapping family inet threshold 80
user@PE1# set rp group-rp-mapping family inet log-interval 10

```

#### 9. Configure the router ID and AS number.

```

[edit routing-options]
user@PE1# set router-id 192.0.2.2
user@PE1# set autonomous-system 1001

```

### Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show policy-options**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```

user@PE1# show interfaces
ge-1/2/0 {
  unit 2 {
    family inet {
      address 10.1.1.2/30;

```



```

    }
    family mpls;
  }
}
ge-1/2/1 {
  unit 5 {
    family inet {
      address 10.1.1.5/30;
    }
    family mpls;
  }
}
vt-1/2/0 {
  unit 2 {
    family inet;
  }
}
lo0 {
  unit 2 {
    family inet {
      address 192.0.2.2/24;
    }
  }
  unit 102 {
    family inet {
      address 203.0.113.1/24;
    }
  }
}
}

```

```

user@PE1# show protocols
mpls {
  interface ge-1/2/1.5;
}
bgp {
  group ibgp {
    type internal;
    local-address 192.0.2.2;
    family inet-vpn {
      any;
    }
    family inet-mvpn {
      signaling;
    }
  }
}

```



```

        neighbor 192.0.2.4;
        neighbor 192.0.2.5;
    }
}
ospf {
    area 0.0.0.0 {
        interface lo0.2 {
            passive;
        }
        interface ge-1/2/1.5;
    }
}
ldp {
    interface ge-1/2/1.5;
    p2mp;
}

```

```

user@PE1# show policy-options
policy-statement parent_vpn_routes {
    from protocol bgp;
    then accept;
}

```

```

user@PE1# show routing-instances
vpn-1 {
    instance-type vrf;
    interface ge-1/2/0.2;
    interface vt-1/2/0.2;
    interface lo0.102;
    route-distinguisher 100:100;
    provider-tunnel {
        ldp-p2mp;
    }
    vrf-target target:1:1;
    protocols {
        ospf {
            export parent_vpn_routes;
            area 0.0.0.0 {
                interface lo0.102 {
                    passive;
                }
                interface ge-1/2/0.2;
            }
        }
    }
}

```



```

    }
    pim {
        sglimit {
            family inet {
                maximum 100;
                threshold 70;
                log-interval 10;
            }
        }
        rp {
            register-limit {
                family inet {
                    maximum 100;
                    threshold 80;
                    log-interval 10;
                }
            }
            group-rp-mapping {
                family inet {
                    maximum 100;
                    threshold 80;
                    log-interval 10;
                }
            }
            static {
                address 203.0.113.1;
            }
        }
        interface ge-1/2/0.2 {
            mode sparse;
        }
    }
    mvpn;
}

```

```

user@PE1# show routing-options
router-id 192.0.2.2;
autonomous-system 1001;

```

If you are done configuring the device, enter **commit** from configuration mode.



Verification

IN THIS SECTION

- [Monitoring the PIM State Information | 709](#)

Confirm that the configuration is working properly.

*Monitoring the PIM State Information*

**Purpose**

Verify that the counters are set as expected and are not exceeding the configured limits.

**Action**

From operational mode, enter the **show pim statistics** command.

```
user@PE1> show pim statistics instance vpn-1
```

PIM Message type	Received	Sent	Rx errors
V2 Hello	393	390	0
...			
V4 (S,G) Maximum		100	
V4 (S,G) Accepted		0	
V4 (S,G) Threshold		70	
V4 (S,G) Log Interval		10	
V4 (grp-prefix, RP) Maximum		100	
V4 (grp-prefix, RP) Accepted		0	
V4 (grp-prefix, RP) Threshold		80	
V4 (grp-prefix, RP) Log Interval		10	
V4 Register Maximum		100	
V4 Register Accepted		0	
V4 Register Threshold		80	
V4 Register Log Interval		10	

**Meaning**

The V4 (S,G) Maximum field shows the maximum number of (S,G) IPv4 multicast routes accepted for the VPN routing instance. If this number is met, additional (S,G) entries are not accepted.

The V4 (S,G) Accepted field shows the number of accepted (S,G) IPv4 multicast routes.



The V4 (S,G) Threshold field shows the threshold at which a warning message is logged (percentage of the maximum number of (S,G) IPv4 multicast routes accepted by the device).

The V4 (S,G) Log Interval field shows the time (in seconds) between consecutive log messages.

The V4 (grp-prefix, RP) Maximum field shows the maximum number of group-to-rendezvous point (RP) IPv4 multicast mappings accepted for the VRF routing instance. If this number is met, additional mappings are not accepted.

The V4 (grp-prefix, RP) Accepted field shows the number of accepted group-to-RP IPv4 multicast mappings.

The V4 (grp-prefix, RP) Threshold field shows the threshold at which a warning message is logged (percentage of the maximum number of group-to-RP IPv4 multicast mappings accepted by the device).

The V4 (grp-prefix, RP) Log Interval field shows the time (in seconds) between consecutive log messages.

The V4 Register Maximum field shows the maximum number of IPv4 PIM registers accepted for the VRF routing instance. If this number is met, additional PIM registers are not accepted. You configure the register limits on the RP.

The V4 Register Accepted field shows the number of accepted IPv4 PIM registers.

The V4 Register Threshold field shows the threshold at which a warning message is logged (percentage of the maximum number of IPv4 PIM registers accepted by the device).

The V4 Register Log Interval field shows the time (in seconds) between consecutive log messages.

## Understanding Wildcards to Configure Selective Point-to-Multipoint LSPs for an MBGP MVPN

### IN THIS SECTION

- [About S-PMSI | 711](#)
- [Scenarios for Using Wildcard S-PMSI | 712](#)
- [Types of Wildcard S-PMSI | 713](#)
- [Differences Between Wildcard S-PMSI and \(S,G\) S-PMSI | 713](#)
- [Wildcard \(\\*,\\*\) S-PMSI and PIM Dense Mode | 713](#)
- [Wildcard \(\\*,\\*\) S-PMSI and PIM-BSR | 714](#)
- [Wildcard Source and the 0.0.0.0/0 Source Prefix | 715](#)



Selective LSPs are also referred to as selective provider tunnels. Selective provider tunnels carry traffic from some multicast groups in a VPN and extend only to the PE routers that have receivers for these groups. You can configure a selective provider tunnel for group prefixes and source prefixes, or you can use wildcards for the group and source, as described in the Internet draft *draft-rekhter-mvpn-wildcard-spmsi-01.txt, Use of Wildcard in S-PMSI Auto-Discovery Routes*.

The following sections describe the scenarios and special considerations when you use wildcards for selective provider tunnels.

## About S-PMSI


The provider multicast service interface (PMSI) is a BGP tunnel attribute that contains the tunnel ID used by the PE router for transmitting traffic through the core of the provider network. A selective PMSI (S-PMSI) autodiscovery route advertises binding of a given MVPN customer multicast flow to a particular provider tunnel. The S-PMSI autodiscovery route advertised by the ingress PE router contains /32 IPv4 or /128 IPv6 addresses for the customer source and the customer group derived from the source-tree customer multicast route.

[Figure 59 on page 712](#) shows a simple MVPN topology. The ingress router, PE1, originates the S-PMSI autodiscovery route. The egress routers, PE2 and PE3, have join state as a result of receiving join messages from CE devices that are not shown in the topology. In response to the S-PMSI autodiscovery route advertisement sent by PE1, PE2, and PE3, elect whether or not to join the tunnel based on the join state. The selective provider tunnel configuration is configured in a VRF instance on PE1.

**NOTE:** The MVPN mode configuration (RPT-SPT or SPT-only) is configured on all three PE routers for all VRFs that make up the VPN. If you omit the MVPN mode configuration, the default mode is SPT-only.



Figure 59: Simple MVPN Topology

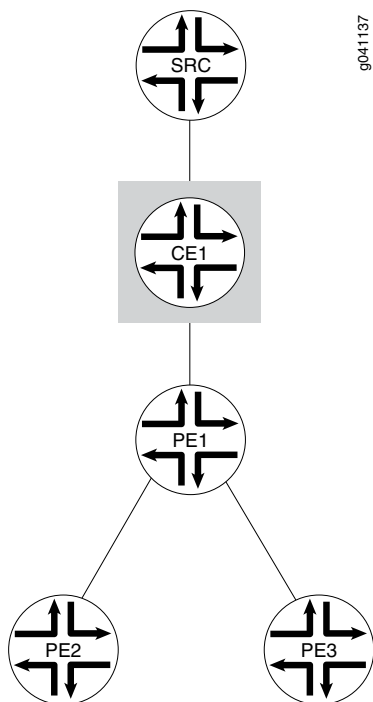

### Scenarios for Using Wildcard S-PMSI

A wildcard S-PMSI has the source or the group (or both the source and the group) field set to the wildcard value of 0.0.0.0/0 and advertises binding of multiple customer multicast flows to a single provider tunnel in a single S-PMSI autodiscovery route.

The scenarios under which you might configure a wildcard S-PMSI are as follows:

- When the customer multicast flows are PIM-SM in ASM-mode flows. In this case, a PE router connected to an MVPN customer's site that contains the customer's RP (C-RP) could bind all the customer multicast flows traveling along a customer's RPT tree to a single provider tunnel.
- When a PE router is connected to an MVPN customer's site that contains multiple sources, all sending to the same group.
- When the customer multicast flows are PIM-bidirectional flows. In this case, a PE router could bind to a single provider tunnel all the customer multicast flows for the same group that have been originated within the sites of a given MVPN connected to that PE, and advertise such binding in a single S-PMSI autodiscovery route.



- When the customer multicast flows are PIM-SM in SSM-mode flows. In this case, a PE router could bind to a single provider tunnel all the customer multicast flows coming from a given source located in a site connected to that PE router.
- When you want to carry in the provider tunnel all the customer multicast flows originated within the sites of a given MVPN connected to a given PE router.

## Types of Wildcard S-PMSI

The following types of wildcard S-PMSI are supported:

- A (\*,G) S-PMSI matches all customer multicast routes that have the group address. The customer source address in the customer multicast route can be any address, including 0.0.0.0/0 for shared-tree customer multicast routes. A (\*, C-G) S-PMSI autodiscovery route is advertised with the source field set to 0 and the source address length set to 0. The multicast group address for the S-PMSI autodiscovery route is derived from the customer multicast joins.
- A (\*,\*) S-PMSI matches all customer multicast routes. Any customer source address and any customer group address in a customer multicast route can be bound to the (\*,\*) S-PMSI. The S-PMSI autodiscovery route is advertised with the source address and length set to 0 and the group address and length set 0. The remaining fields in the S-PMSI autodiscovery route follow the same rule as (C-S, C-G) S-PMSI, as described in section 12.1 of the BGP-MVPN draft (draft-ietf-l3vpn-2547bis-mcast-bgp-00.txt).

## Differences Between Wildcard S-PMSI and (S,G) S-PMSI

For dynamic provider tunnels, each customer multicast stream is bound to a separate provider tunnel, and each tunnel is advertised by a separate S-PMSI autodiscovery route. For static LSPs, multiple customer multicast flows are bound to a single provider tunnel by having multiple S-PMSI autodiscovery routes advertise the same provider tunnel.

When you configure a wildcard (\*,G) or (\*,\*) S-PMSI, one or more matching customer multicast routes share a single S-PMSI. All customer multicast routes that have a matching source and group address are bound to the same (\*,G) or (\*,\*) S-PMSI and share the same tunnel. The (\*,G) or (\*,\*) S-PMSI is established when the first matching remote customer multicast join message is received in the ingress PE router, and deleted when the last remote customer multicast join is withdrawn from the ingress PE router. Sharing a single S-PMSI autodiscovery route improves control plane scalability.

## Wildcard (\*,\*) S-PMSI and PIM Dense Mode

For (S,G) and (\*,G) S-PMSI autodiscovery routes in PIM dense mode (PIM-DM), all downstream PE routers receive PIM-DM traffic. If a downstream PE router does not have receivers that are interested in the group address, the PE router instantiates prune state and stops receiving traffic from the tunnel.



Now consider what happens for (\*,\*) S-PMSI autodiscovery routes. If the PIM-DM traffic is not bound by a longer matching (S,G) or (\*,G) S-PMSI, it is bound to the (\*,\*) S-PMSI. As is always true for dense mode, PIM-DM traffic is flooded to downstream PE routers over the provider tunnel regardless of the customer multicast join state. Because there is no group information in the (\*,\*) S-PMSI autodiscovery route, egress PE routers join a (\*,\*) S-PMSI tunnel if there is any configuration on the egress PE router indicating interest in PIM-DM traffic.

Interest in PIM-DM traffic is indicated if the egress PE router has one of the following configurations in the VRF instance that corresponds to the instance that imports the S-PMSI autodiscovery route:

- At least one interface is configured in dense mode at the `[edit routing-instances instance-name protocols pim interface]` hierarchy level.
- At least one group is configured as a dense-mode group at the `[edit routing-instances instance-name protocols pim dense-groups group-address]` hierarchy level.

### Wildcard (\*,\*) S-PMSI and PIM-BSR

For (S,G) and (\*,G) S-PMSI autodiscovery routes in PIM bootstrap router (PIM-BSR) mode, an ingress PE router floods the PIM bootstrap message (BSM) packets over the provider tunnel to all egress PE routers. An egress PE router does not join the tunnel unless the message has the ALL-PIM-ROUTERS group. If the message has this group, the egress PE router joins the tunnel, regardless of the join state. The group field in the message determines the presence or absence of the ALL-PIM-ROUTERS address.

Now consider what would happen for (\*,\*) S-PMSI autodiscovery routes used with PIM-BSR mode. If the PIM BSM packets are not bound by a longer matching (S,G) or (\*,G) S-PMSI, they are bound to the (\*,\*) S-PMSI. As is always true for PIM-BSR, BSM packets are flooded to downstream PE routers over the provider tunnel to the ALL-PIM-ROUTERS destination group. Because there is no group information in the (\*,\*) S-PMSI autodiscovery route, egress PE routers always join a (\*,\*) S-PMSI tunnel. Unlike PIM-DM, the egress PE routers might have no configuration suggesting use of PIM-BSR as the RP discovery mechanism in the VRF instance. To prevent all egress PE routers from always joining the (\*,\*) S-PMSI tunnel, the (\*,\*) wildcard group configuration must be ignored.

This means that if you configure PIM-BSR, a wildcard-group S-PMSI can be configured for all other group addresses. The (\*,\*) S-PMSI is not used for PIM-BSR traffic. Either a matching (\*,G) or (S,G) S-PMSI (where the group address is the ALL-PIM-ROUTERS group) or an inclusive provider tunnel is needed to transmit data over the provider core. For PIM-BSR, the longest-match lookup is (S,G), (\*,G), and the inclusive provider tunnel, in that order. If you do not configure an inclusive tunnel for the routing instance, you must configure a (\*,G) or (S,G) selective tunnel. Otherwise, the data is dropped. This is because PIM-BSR functions like PIM-DM, in that traffic is flooded to downstream PE routers over the provider tunnel regardless of the customer multicast join state. However, unlike PIM-DM, the egress PE routers might have no configuration to indicate interest or noninterest in PIM-BSR traffic.



## Wildcard Source and the 0.0.0.0/0 Source Prefix

You can configure a 0.0.0.0/0 source prefix and a wildcard source under the same group prefix in a selective provider tunnel. For example, the configuration might look as follows:

```

routing-instances {
  vpna {
    provider-tunnel {
      selective {
        group 203.0.113.0/24 {
          source 0.0.0.0/0 {
            rsvp-te {
              label-switched-path-template {
                sptnl3;
              }
            }
          }
          wildcard-source {
            rsvp-te {
              label-switched-path-template {
                sptnl2;
              }
            }
            static-lsp point-to-multipoint-lsp-name;
          }
          threshold-rate kbps;
        }
      }
    }
  }
}

```

The functions of the **source 0.0.0.0/0** and **wildcard-source** configuration statements are different. The 0.0.0.0/0 source prefix only matches (C-S, C-G) customer multicast join messages and triggers (C-S, C-G) S-PMSI autodiscovery routes derived from the customer multicast address. Because all (C-S, C-G) join messages are matched by the 0.0.0.0/0 source prefix in the matching group, the wildcard source S-PMSI is used only for (\*,C-G) customer multicast join messages. In the absence of a configured 0.0.0.0/0 source prefix, the wildcard source matches (C-S, C-G) and (\*,C-G) customer multicast join messages. In the example, a join message for (10.0.1.0/24, 203.0.113.0/24) is bound to **sptnl3**. A join message for (\*, 203.0.113.0/24) is bound to **sptnl2**.



## Configuring a Selective Provider Tunnel Using Wildcards

When you configure a selective provider tunnel for MBGP MVPNs (also referred to as next-generation Layer 3 multicast VPNs), you can use wildcards for the multicast group and source address prefixes. Using wildcards enables a PE router to use a single route to advertise the binding of multiple multicast streams of a given MVPN customer to a single provider's tunnel, as described in

<http://tools.ietf.org/html/draft-rekhter-mvpn-wildcard-spmsi-00>.

Sharing a single route improves control plane scalability because it reduces the number of S-PMSI autodiscovery routes.

To configure a selective provider tunnel using wildcards:

1. Configure a wildcard group matching any group IPv4 address and a wildcard source for (\*,\*) join messages.

```
[edit routing-instances vpna provider-tunnel selective]
user@router# set wildcard-group-inet wildcard-source
```

2. Configure a wildcard group matching any group IPv6 address and a wildcard source for (\*,\*) join messages.

```
[edit routing-instances vpna provider-tunnel selective]
user@router# set wildcard-group-inet6 wildcard-source
```

3. Configure an IP prefix of a multicast group and a wildcard source for (\*,G) join messages.

```
[edit routing-instances vpna provider-tunnel selective]
user@router# set group 203.0.113/24 wildcard-source
```

4. Map the IPv4 join messages to a selective provider tunnel.

```
[edit routing-instances vpna provider-tunnel selective wildcard-group-inet wildcard-source]
user@router# set rsvp-te (Routing Instances Provider Tunnel Selective) label-switched-path-template
provider-tunnel1
```

5. Map the IPv6 join messages to a selective provider tunnel.

```
[edit routing-instances vpna provider-tunnel selective wildcard-group-inet6 wildcard-source]
user@router# set rsvp-te (Routing Instances Provider Tunnel Selective) label-switched-path-template
provider-tunnel2
```



6. Map the (\*,203.0.113/24) join messages to a selective provider tunnel.

```
[edit routing-instances vpn-a provider-tunnel selective group 203.0.113/24 wildcard-source]
user@router# set rsvp-te (Routing Instances Provider Tunnel Selective) label-switched-path-template
provider-tunnel3
```

## Example: Configuring Selective Provider Tunnels Using Wildcards

With the (\*,G) and (\*,\*) S-PMSI, a customer multicast join message can match more than one S-PMSI. In this case, a customer multicast join message is bound to the longest matching S-PMSI. The longest match is a (S,G) S-PMSI, followed by a (\*,G) S-PMSI and a (\*,\*) S-PMSI, in that order.

Consider the following configuration:

```
routing-instances {
  vpn-a {
    provider-tunnel {
      selective {
        wildcard-group-inet {
          wildcard-source {
            rsvp-te {
              label-switched-path-template {
                sptnl1;
              }
            }
          }
        }
      }
    }
    group 203.0.113.0/24 {
      wildcard-source {
        rsvp-te {
          label-switched-path-template {
            sptnl2;
          }
        }
      }
    }
    source 10.1.1/24 {
      rsvp-te {
        label-switched-path-template {
          sptnl3;
        }
      }
    }
  }
}
```



```

    }
  }
}
}
}
}

```

For this configuration, the longest-match rule works as follows:

- A customer multicast (10.1.1.1, 203.0.113.1) join message is bound to the sptnl3 S-PMSI autodiscovery route.
- A customer multicast (10.2.1.1, 203.0.113.1) join message is bound to the sptnl2 S-PMSI autodiscovery route.
- A customer multicast (10.1.1.1, 203.1.113.1) join message is bound to the sptnl1 S-PMSI autodiscovery route.

When more than one customer multicast route is bound to the same wildcard S-PMSI, only one S-PMSI autodiscovery route is created. An egress PE router always uses the same matching rules as the ingress PE router that advertises the S-PMSI autodiscovery route. This ensures consistent customer multicast mapping on the ingress and the egress PE routers.

## Configuring NLRI Parameters for an MBGP MVPN

To enable VPN signaling where multiprotocol BGP carries multicast VPN NLRI for the IPv4 address family, include the **family inet-mvpn** statement:

```

inet-mvpn {
  signaling {
    accepted-prefix-limit {
      maximum number;
      teardown percentage {
        idle-timeout (forever | minutes);
      }
    }
  }
  loops number;
  prefix-limit {
    maximum number;
    teardown percentage {
      idle-timeout (forever | minutes);
    }
  }
}

```



```

    }
}

```

To enable VPN signaling where multiprotocol BGP carries multicast VPN NLRI for the IPv6 address family, include the **family inet6-mvpn** statement:

```

inet6-mvpn {
  signaling {
    accepted-prefix-limit {
      maximum number;
      teardown percentage {
        idle-timeout (forever | minutes);
      }
    }
  }
  loops number
  prefix-limit {
    maximum number;
    teardown percentage {
      idle-timeout (forever | minutes);
    }
  }
}

```

## Resiliency in Multicast L3 VPNs with Redundant Virtual Tunnels

### IN THIS SECTION

- [Redundant Virtual Tunnels Providing Resiliency in Delivering Multicast Traffic Overview | 720](#)
- [Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic | 721](#)
- [Example: Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic | 723](#)
- [Understanding Redundant Virtual Tunnel Interfaces in MBGP MVPNs | 742](#)
- [Example: Configuring Redundant Virtual Tunnel Interfaces in MBGP MVPNs | 742](#)



## Redundant Virtual Tunnels Providing Resiliency in Delivering Multicast Traffic Overview

In multicast Layer 3 VPNs, virtual tunnel (VT) interfaces are needed to facilitate virtual routing and forwarding (VRF) table lookup based on MPLS labels.

Junos OS supports *redundant VTs* at the Packet Forwarding Engine level to improve resiliency in delivering multicast traffic.

**NOTE:** Redundant VTs are supported only on MX Series routers with MPCs.

To create redundant VTs at the Packet Forwarding Engine level, you add member VTs (vt- interfaces) to a parent VT (rvt interface).

Configuring redundant VT interfaces on MX Series routers with MPCs has the following characteristics:

- When creating a redundant VT, you can add unconfigured VTs as members of the redundant VT. You configure the redundant VT the same way you configure a regular VT, and the member VTs inherit the configuration of the parent redundant VT.
- When a VT with an existing configuration joins a redundant VT, you must configure the redundant VT with the settings from the existing configuration.
- You can create up to 16 redundant VTs.
- You can add up to 32 VTs as members of the redundant VTs.

**NOTE:** The actual number of VTs you can create is determined by the type of chassis and the number of line cards you have.

- When you add more than two VTs to a redundant VT, the members are in active mode by default, and traffic through the redundant VT is load balanced across all members of the redundant VT.
- When you add only two members, you can configure the members in one of two ways:
  - Both members in active mode
  - One member in active mode and the other in backup mode



**BEST PRACTICE:** To set one member to active mode and the other to backup mode, we recommend that the members be hosted on different MPCs. That way, if an MPC fails, it does not bring down the entire rvt interface.

- Class of service and firewall configurations involving VT interfaces work the same on redundant VT interfaces.

**NOTE:** Redundant VTs help to provide resiliency and improve uptime in your network when delivering multicast traffic. When **enhanced-ip** is enabled at the **[edit chassis network-services]** hierarchy level, failure of a VT that is a member of a redundant VT can typically be detected and fail over to another member VT provided within 50 milliseconds.

## Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic

In multicast Layer 3 VPNs, virtual tunnel (VT) interfaces are needed to facilitate virtual routing and forwarding (VRF) table lookup based on MPLS labels.

Junos OS supports *redundant VTs* at the Packet Forwarding Engine level to improve resiliency in delivering multicast traffic.

**NOTE:** Redundant VTs are supported only on MX Series routers with MPCs.

To create redundant VTs at the Packet Forwarding Engine level, add member VTs (vt- interfaces) to a redundant VT (rvt interface), and add that redundant VT interface to a vrf routing instance.

To configure a redundant VT:

1. Enable tunnel services on the MX Series router.

```
[edit chassis]
user@host# set fpc slot-number pic number tunnel-services bandwidth (1g | 10g | 20g | 40g)
```

For example:



```
[edit chassis]
user@host# set fpc 3 pic 0 tunnel-services bandwidth 1g
user@host# set fpc 3 pic 2 tunnel-services bandwidth 10g
```

See *Tunnel Interface Configuration on MX Series Routers Overview* for more information.

2. Create the redundant VT interface type.

```
[edit chassis]
user@host# set redundancy-group interface-type redundant-virtual-tunnel device-count count
```

For example:

```
[edit chassis]
user@host# set redundancy-group interface-type redundant-virtual-tunnel device-count 4
```

3. Enable **enhanced-ip** under network services.

```
[edit chassis network-services]
user@host# set enhanced-ip
```

4. Create the redundant VT interface.

```
[edit interfaces interface-name]
user@host# set redundancy-group member-interface interface-name
```

For example:

```
[edit interfaces rvt0]
user@host# set redundancy-group member-interface vt-3/0/10
user@host# set redundancy-group member-interface vt-3/2/10
```

See [redundancy-group \(Interfaces\)](#) for more information.

**NOTE:** You configure the remaining parameters for a redundant VT (rvt) interface the same way as you configure a VT (vt-) interface.

5. Add the redundant VT to the appropriate routing instance.



```
[edit routing-instances routing-instance-name]
user@host# set interface interface-name
```

For example:

```
[edit routing-instances pe-vrf]
user@host# set interface rvt0.0
```

**NOTE:** Because the rvt interface contains two or more vt- member interfaces, providing redundancy, adding an rvt interface and a vt- interface to the same routing instance is not supported.

See [“Configuring Routing Instances on PE Routers in VPNs” on page 53](#) for detailed information about configuring routing instances.

SEE ALSO

| [Tunnel Interface Configuration on MX Series Routers Overview](#)

## Example: Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic

### IN THIS SECTION

- [Requirements | 724](#)
- [Overview | 724](#)
- [Configuration | 726](#)
- [Verification | 737](#)

This example shows how to configure redundant virtual tunnels (VTs) in a multiprotocol BGP (MBGP) multicast VPN (MVPN). You configure a virtual loopback tunnel to facilitate virtual routing and forwarding



(VRF) table lookup based on MPLS labels. Redundant VTs configured through this method provide near-immediate (less than 50 milliseconds) failover if one of the VTs fails.

## Requirements

This example uses the following hardware and software components:

- MPCs on MX Series routers
- Junos OS Release 15.2

## Overview

When a VT with an existing configuration joins a redundant VT, you must configure the redundant VT with the settings from the existing configuration.

You can add member VTs to a parent VT for redundancy.

On MX Series routers with MPCs, you can configure redundant VTs in these ways:

- You can create up to 16 redundant VTs.
- You can add up to 32 VTs as members of the redundant VTs.

**NOTE:** The actual number of VTs you can create is determined by the type of chassis and the number of line cards you have.

- When you add more than two VTs to a redundant VT, the members are in active mode by default.
- When you add only two members, you can configure the members in one of these ways:
  - Both members in active mode
  - One member in active mode and the other in backup mode


## Topology

In this example, Device PE2 has a redundant VT interface configured in a multicast LDP routing instance. The redundant VT interface in this example contains two member VT interfaces, one in active mode and the other in backup mode.

[Figure 60 on page 725](#) shows the topology used in this example.



Figure 60: Redundant VT Interfaces in MBGP MVPN

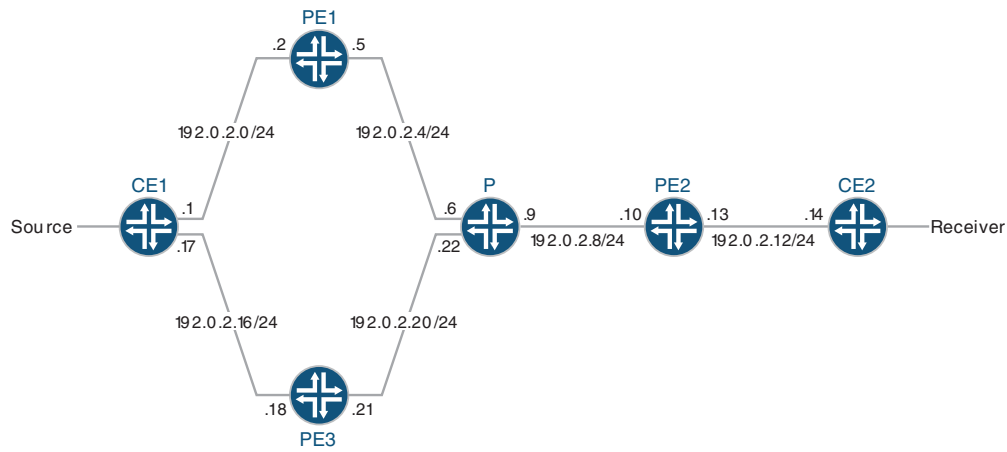

The following example shows the configuration for the customer edge (CE), provider (P), and provider edge (PE) devices in [Figure 60 on page 725](#) . See ["Step-by-Step Procedure" on page 729](#) to configure Device PE2.



## Configuration



## Device P

```

set chassis network-services enhanced-ip
set interfaces ge-0/0/0 description "to PE1"
set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.6/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 description "to PE2"
set interfaces ge-0/0/1 unit 0 family inet address 192.0.2.9/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 description "to PE3"
set interfaces ge-0/0/2 unit 0 family inet address 192.0.2.22/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 198.51.100.3/24
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp local-address 198.51.100.3
set protocols bgp family inet-vpn unicast
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 198.51.100.3
set protocols bgp group ibgp family inet any
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp family inet-mvpn signaling
set protocols bgp group ibgp cluster 198.51.100.3
set protocols bgp group ibgp neighbor 198.51.100.2
set protocols bgp group ibgp neighbor 198.51.100.4
set protocols bgp group ibgp neighbor 198.51.100.6
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols pim interface all
set protocols pim interface fxp0.0 disable
set routing-options router-id 198.51.100.3
set routing-options autonomous-system 10

```

## Device PE2



```

set chassis redundancy-group interface-type redundant-virtual-tunnel device-count 16
set chassis fpc 1 pic 0 tunnel-services bandwidth 1g
set chassis fpc 2 pic 0 tunnel-services bandwidth 1g
set chassis network-services enhanced-ip
set interfaces ge-0/0/0 description "to P"
set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.10/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 description "to CE2"
set interfaces ge-0/0/1 unit 0 family inet address 192.0.2.13/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 198.51.100.4/24
set interfaces rvt0 redundancy-group member-interface vt-1/0/10 active
set interfaces rvt0 redundancy-group member-interface vt-2/0/10 backup
set interfaces rvt0 unit 1000 family inet
set interfaces rvt0 unit 1000 family mpls
set protocols rsvp interface ge-0/0/0.0
set protocols rsvp interface fxp0.0 disable
set protocols mpls label-switched-path PE2-to-PE1 to 198.51.100.2
set protocols mpls label-switched-path PE2-to-PE3 to 198.51.100.6
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface fxp0.0 disable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 198.51.100.4
set protocols bgp group ibgp family inet any
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp family inet-mvpn signaling
set protocols bgp group ibgp neighbor 198.51.100.3
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols pim interface all
set protocols pim interface fxp0.0 disable
set policy-options policy-statement direct from protocol direct
set policy-options policy-statement direct then accept
set routing-instances vpn-1 instance-type vrf
set routing-instances vpn-1 interface ge-0/0/1.0
set routing-instances vpn-1 interface lo0.1
set routing-instances vpn-1 interface rvt0.1000
set routing-instances vpn-1 route-distinguisher 100:100

```



```

set routing-instances vpn-1 vrf-target target:1:1
set routing-instances vpn-1 routing-options multipath
set routing-instances vpn-1 protocols bgp group CE2-PE2 type external
set routing-instances vpn-1 protocols bgp group CE2-PE2 export direct
set routing-instances vpn-1 protocols bgp group CE2-PE2 peer-as 100
set routing-instances vpn-1 protocols bgp group CE2-PE2 neighbor 192.0.2.14 family inet unicast
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface all
set routing-instances vpn-1 protocols pim rp static address 192.168.0.0
set routing-instances vpn-1 protocols pim interface all mode sparse
set routing-instances vpn-1 protocols mvpn mvpn-mode spt-only
set routing-instances vpn-1 protocols mvpn sender-based-rpf
set routing-instances vpn-1 protocols mvpn hot-root-standby source-tree
set routing-options router-id 198.51.100.4
set routing-options autonomous-system 10

```

## Device CE2

```

set interfaces ge-0/0/0 description "upstream to PE2"
set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.14/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 description "Source-facing interface"
set interfaces ge-0/0/1 unit 0 family inet address 203.0.113.2/24
set interfaces lo0 unit 0 family inet address 198.51.100.5/24
set protocols bgp group CE-to-PE type external
set protocols bgp group CE-to-PE export direct
set protocols bgp group CE-to-PE peer-as 10
set protocols bgp group CE-to-PE local-as 100
set protocols bgp group CE-to-PE neighbor 192.0.2.13 family inet unicast
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols pim rp static address 192.168.0.0
set protocols pim interface all
set policy-options policy-statement direct from protocol direct
set policy-options policy-statement direct then accept
set routing-options router-id 198.51.100.5
set routing-options nonstop-routing
set routing-options autonomous-system 100

```

## Step-by-Step Procedure



The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

In this section, the rvt interface is configured on Device PE2.

1. Configure the redundant virtual tunnel redundancy group and tunnel services on the chassis.

```
[edit chassis]
user@PE2# set redundancy-group interface-type redundant-virtual-tunnel device-count 16
user@PE2# set fpc 1 pic 0 tunnel-services bandwidth 1g
user@PE2# set fpc 2 pic 0 tunnel-services bandwidth 1g
user@PE2# set network-services enhanced-ip
```

2. Configure the physical interfaces and loopback interfaces.

```
[edit interfaces]
user@PE2# set ge-0/0/0 description "to P"
user@PE2# set ge-0/0/0 unit 0 family inet address 192.0.2.10/24
user@PE2# set ge-0/0/0 unit 0 family mpls

user@PE2# set ge-0/0/1 description "to CE2"
user@PE2# set ge-0/0/1 unit 0 family inet address 192.0.2.13/24
user@PE2# set ge-0/0/1 unit 0 family mpls

user@PE2# set lo0 unit 0 family inet address 198.51.100.4/24
```

3. Configure the rvt interface.

**NOTE:** In this example, one member of the rvt interface is set to be active and the other interface is set to be the backup. This approach requires member interfaces to be on separate MPCs.

```
[edit interfaces]
user@PE2# set rvt0 redundancy-group member-interface vt-1/0/10 active
user@PE2# set rvt0 redundancy-group member-interface vt-2/0/10 backup
user@PE2# set rvt0 unit 1000 family inet
user@PE2# set rvt0 unit 1000 family mpls
```

4. Configure MPLS.



```
[edit protocols mpls]
user@PE2# set label-switched-path PE2-to-PE1 to 198.51.100.2
user@PE2# set label-switched-path PE2-to-PE3 to 198.51.100.6
user@PE2# set interface ge-0/0/0.0
user@PE2# set interface fxp0.0 disable
```

## 5. Configure BGP.

```
[edit protocols bgp]
user@PE2# set group ibgp type internal
user@PE2# set group ibgp local-address 198.51.100.4
user@PE2# set group ibgp family inet any
user@PE2# set group ibgp family inet-vpn any
user@PE2# set group ibgp family inet-mvpn signaling
user@PE2# set group ibgp neighbor 198.51.100.3
```

## 6. Configure an interior gateway protocol.

```
[edit protocols ospf]
user@PE2# set traffic-engineering
user@PE2# set area 0.0.0.0 interface lo0.0 passive
user@PE2# set area 0.0.0.0 interface ge-0/0/0.0
user@PE2# set area 0.0.0.0 interface fxp0.0 disable
```

## 7. Configure LDP, PIM, and RSVP.

```
[edit protocols]
user@PE2# set ldp interface all
user@PE2# set ldp interface fxp0.0 disable
user@PE2# set pim interface all
user@PE2# set pim interface fxp0.0 disable
user@PE2# set rsvp interface ge-0/0/0.0
user@PE2# set rsvp interface fxp0.0 disable
```

## 8. Configure the routing policy.

```
[edit policy-options policy-statement direct]
user@PE2# set from protocol direct
user@PE2# set then accept
```



9. Configure the routing instance.

```
[edit routing-instances vpn-1]
user@PE2# set instance-type vrf
user@PE2# set interface ge-0/0/1.0
user@PE2# set interface lo0.1
user@PE2# set route-distinguisher 100:100
user@PE2# set vrf-target target:1:1
user@PE2# set routing-options multipath
user@PE2# set protocols bgp group CE2-PE2 type external
user@PE2# set protocols bgp group CE2-PE2 export direct
user@PE2# set protocols bgp group CE2-PE2 peer-as 100
user@PE2# set protocols bgp group CE2-PE2 neighbor 192.0.2.14 family inet unicast
user@PE2# set protocols ospf area 0.0.0.0 interface all
user@PE2# set protocols pim rp static address 192.168.0.0
user@PE2# set protocols pim interface all mode sparse
user@PE2# set protocols mvpn mvpn-mode spt-only
user@PE2# set protocols mvpn sender-based-rpf
user@PE2# set protocols mvpn hot-root-standby source-tree
```

10. Add the rvt interface to the routing instance.

```
[edit routing-instances vpn-1]
user@PE2# set interface rvt0.1000
```

11. Configure the router ID and autonomous system (AS) number.

```
[edit routing-options]
user@PE2# set router-id 198.51.100.4
user@PE2# set autonomous-system 10
```

### Results

From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show protocols**, **show policy-options**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
user@PE2# show chassis
redundancy-group {
  interface-type {
```



```

        redundant-virtual-tunnel {
            device-count 16;
        }
    }
}
fpc 1 {
    pic 0 {
        tunnel-services {
            bandwidth lg;
        }
    }
}
fpc 2 {
    pic 0 {
        tunnel-services {
            bandwidth lg;
        }
    }
}
network-services {
    enhanced-ip;
}

```

```

user@PE2# show interfaces
ge-0/0/0 {
    description "to P";
    unit 0 {
        family inet {
            address 192.0.2.10/24;
        }
        family mpls;
    }
}
ge-0/0/1 {
    description "to CE2";
    unit 0 {
        family inet {
            address 192.0.2.13/24;
        }
        family mpls;
    }
}
lo0 {

```



```

    unit 0 {
        family inet {
            address 198.51.100.4/24;
        }
    }
}
rvt0 {
    redundancy-group {
        member-interface vt-1/0/10 {
            active;
        }
        member-interface vt-2/0/10 {
            backup;
        }
    }
    unit 1000 {
        family inet;
        family mpls;
    }
}

```

```

user@PE2# show protocols
mpls {
    label-switched-path PE2-to-PE1 {
        to 198.51.100.2;
    }
    label-switched-path PE2-to-PE3 {
        to 198.51.100.6;
    }
    interface fxp0.0 {
        disable;
    }
    interface ge-0/0/0.0;
}
bgp {
    group ibgp {
        type internal;
        local-address 198.51.100.4;
        family inet {
            any;
        }
        family inet-vpn {
            any;
        }
    }
}

```



```

    }
    family inet-mvpn {
        signaling;
    }
    neighbor 198.51.100.3;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface lo0.0 {
            passive;
        }
        interface ge-0/0/0.0;
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
pim {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
rsvp {
    interface fxp0.0 {
        disable;
    }
    interface ge-0/0/0.0;
}

```

```

user@PE2# show policy-options
policy-statement direct {
    from protocol direct;
    then accept;
}

```



```

user@PE2# show routing-instances
vpn-1 {
    instance-type vrf;
    interface ge-0/0/1.0;
    interface lo0.1;
    interface rvt0.1000;
    route-distinguisher 100:100;
    vrf-target target:1:1;
    routing-options {
        multipath;
    }
    protocols {
        bgp {
            group CE2-PE2 {
                type external;
                export direct;
                peer-as 100;
                neighbor 192.0.2.14 {
                    family inet {
                        unicast;
                    }
                }
            }
        }
        ospf {
            area 0.0.0.0 {
                interface all;
            }
        }
        pim {
            rp {
                static {
                    address 192.168.0.0;
                }
            }
            interface all {
                mode sparse;
            }
        }
        mvpn {
            mvpn-mode {
                spt-only;
            }
            sender-based-rpf;
        }
    }
}

```



```

        hot-root-standby {
            source-tree;
        }
    }
}

```

```

user@PE2# show routing-options
router-id 198.51.100.4;
autonomous-system 10;

```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

### IN THIS SECTION

- [Verifying the Creation of Virtual Tunnel and Redundant Virtual Tunnel Interfaces | 737](#)
- [Verifying the Inclusion of the rvt Interface in the Multicast Route | 738](#)
- [Verifying Traffic Through the rvt Interface and Its Member Interfaces | 739](#)
- [Verifying Immediate Failover to the Backup Virtual Tunnel | 740](#)

Confirm that the configuration is working properly.

### *Verifying the Creation of Virtual Tunnel and Redundant Virtual Tunnel Interfaces*

#### Purpose

Verify that the rvt interface is created and that the appropriate member vt- interfaces are contained within the rvt interface.

#### Action

From operational mode, enter the **show interfaces terse | match rvt0** command.

```
user@PE2# show interfaces terse | match rvt0
```

```

user@host# run show interfaces terse | match rvt0
vt-1/0/10.1000          up    up    container--> rvt0.1000

```



```
vt-2/0/10.1000      up    up    container--> rvt0.1000
rvt0                 up    up
rvt0.1000            up    up    inet
```

### Meaning

The output shows that **rvt0** was created and that it contains **vt-1/0/10** and **vt-2/0/10** as member interfaces.

### Verifying the Inclusion of the rvt Interface in the Multicast Route

### Purpose

Verify that the **vpn1** multicast routing instance is running and that it contains the **rvt0** interface.

### Action

From operational mode, enter the **show multicast route extensive instance vpn1** command.

```
user@PE2# show multicast route extensive instance vpn1
```

```
Instance: vpn1 Family: INET

Group: 203.0.113.3
  Source: 10.0.0.2/24
  Upstream rpf interface list:
    rvt0.1000 (P)
    Sender Id: Label 299888
  Downstream interface list:
    ge-1/0/5.0
  Number of outgoing interfaces: 1
  Session description: Unknown
  Statistics: 460 kbps, 10000 pps, 4387087 packets
  RPF Next-hop ID: 941
  Next-hop ID: 1048594
  Upstream protocol: MVPN
  Route state: Active
  Forwarding state: Forwarding
  Cache lifetime/timeout: forever
  Wrong incoming interface notifications: 0
  Uptime: 00:07:48
```

### Meaning

The output shows that the **vpn1** routing instance is running and contains **rvt0**.



## Verifying Traffic Through the rvt Interface and Its Member Interfaces

### Purpose

Verify that traffic passes through the **rvt0** interface and its member interfaces as expected. For this section, start streams of unicast and multicast traffic from the source to the receiver.

**NOTE:** In this example, all traffic through the **rvt0** interface is expected to pass through the active **vt-1/0/10** interface, and no traffic is expected to pass through the backup **vt-2/0/10** interface.

### Action

From operational mode, enter the **monitor interface rvt0** command.

```
user@PE2# monitor interface rvt0
```

```
Interface: rvt0, Enabled, Link is Up
Encapsulation: VPN-Loopback-tunnel, Speed: 2000mbps
Traffic statistics:
  Input bytes:          2788575982 (14720096 bps)      [10976152]
  Output bytes:         0 (0 bps)                    [0]
  Input packets:       60621217 (40000 pps)           [238612]
  Output packets:      0 (0 pps)                     [0]
Error statistics:
  Input errors:         0                             [0]
  Input drops:         0                             [0]
  Input framing errors: 0                             [0]
  Carrier transitions:  0                             [0]
  Output errors:        0                             [0]
  Output drops:        0                             [0]
```

From this output, **rvt0** is enabled and up and traffic is flowing through it.

Now enter the **monitor interface vt-1/0/10** command.

```
user@PE2# monitor interface vt-1/0/10
```

```
Interface: vt-1/0/10, Enabled, Link is Up
Encapsulation: VPN-Loopback-tunnel, Speed: 1000mbps
Traffic statistics:
  Input bytes:          2997120202 (14720096 bps)      [3658702]
  Output bytes:         0 (0 bps)                    [0]
```



```

      Input packets:          65154787 (40000 pps)          [79537]
      Output packets:          0 (0 pps)          [0]
Error statistics:
      Input errors:           0          [0]
      Input drops:            0          [0]
      Input framing errors:    0          [0]
      Carrier transitions:     0          [0]
      Output errors:           0          [0]
      Output drops:            0          [0]

```

From this output, all traffic that is passing through the **rvt0** interface is passing through the active **vt-1/0/10** interface, as expected.

Now enter the **monitor interface vt-2/0/10** command.

```
user@PE2# monitor interface vt-2/0/10
```

```

Interface: vt-2/0/10, Enabled, Link is Up
Encapsulation: VPN-Loopback-tunnel, Speed: 1000mbps
Traffic statistics:
      Input bytes:            0 (0 bps)          [0]
      Output bytes:           0 (0 bps)          [0]
      Input packets:          0 (0 pps)          [0]
      Output packets:         0 (0 pps)          [0]
Error statistics:
      Input errors:           0          [0]
      Input drops:            0          [0]
      Input framing errors:    0          [0]
      Carrier transitions:     0          [0]
      Output errors:           0          [0]
      Output drops:            0          [0]

```

From this output, even though **vt-2/0/10** is enabled and up, no traffic is passing through. This is expected, because the interface is set to **backup**.

### Meaning

While everything is running normally, traffic does pass through the redundant virtual interface, **rvt0**, and all of the traffic passes through its active member interface. If neither member interface is set to be **active** or **backup**, the traffic is expected to be load balanced across both interfaces.

### Verifying Immediate Failover to the Backup Virtual Tunnel

#### Purpose



Verify that when the MPC containing the active member interface fails or is restarted, all traffic through the **rvt0** interfaces immediately fails over to the backup member interface.

**BEST PRACTICE:** For this task, we recommend you have one window open showing the live statistics of the backup interface, through the **monitor interface vt-2/0/10** command, and another window from which you can restart the MPC containing the active member interface.

### Action

From operational mode, enter the **request chassis fpc slot 1 restart** command and observe the live statistics of the backup member interface.

user@PE2# **request chassis fpc slot 1 restart**

```
Interface: vt-2/0/10, Enabled, Link is Up
Encapsulation: VPN-Loopback-tunnel, Speed: 1000mbps
Traffic statistics:
    Input bytes:          354964428 (14720248 bps)          [13220676]
    Output bytes:         0 (0 bps)                        [0]
    Input packets:        7716618 (40000 pps)              [287406]
    Output packets:       0 (0 pps)                        [0]
Error statistics:
    Input errors:         0                                [0]
    Input drops:          0                                [0]
    Input framing errors: 0                                [0]
    Carrier transitions:  0                                [0]
    Output errors:        0                                [0]
    Output drops:         0                                [0]
```

### Meaning

The output shows that the traffic through the **rvt0** interface is immediately fully carried by the backup member interface.



## Understanding Redundant Virtual Tunnel Interfaces in MBGP MVPNs

In multiprotocol BGP (MBGP) multicast VPNs (MVPNs), VT interfaces are needed for multicast traffic on routing devices that function as combined provider edge (PE) and provider core (P) routers to optimize bandwidth usage on core links. VT interfaces prevent traffic replication when a P router also acts as a PE router (an exit point for multicast traffic).

Starting in Junos OS Release 12.3, you can configure up to eight VT interfaces in a routing instance, thus providing Tunnel PIC redundancy inside the same multicast VPN routing instance. When the active VT interface fails, the secondary one takes over, and you can continue managing multicast traffic with no duplication.

Redundant VT interfaces are supported with RSVP point-to-multipoint provider tunnels as well as multicast LDP provider tunnels. This feature also works for extranets.

You can configure one of the VT interfaces to be the primary interface. If a VT interface is configured as the primary, it becomes the next hop that is used for traffic coming in from the core on the label-switched path (LSP) into the routing instance. When a VT interface is configured to be primary and the VT interface is used for both unicast and multicast traffic, only the multicast traffic is affected.

If no VT interface is configured to be the primary or if the primary VT interface is unusable, one of the usable configured VT interfaces is chosen to be the next hop that is used for traffic coming in from the core on the LSP into the routing instance. If the VT interface in use goes down for any reason, another usable configured VT interface in the routing instance is chosen. When the VT interface in use changes, all multicast routes in the instance also switch their reverse-path forwarding (RPF) interface to the new VT interface to allow the traffic to be received.

To realize the full benefit of redundancy, we recommend that when you configure multiple VT interfaces, at least one of the VT interfaces be on a different Tunnel PIC from the other VT interfaces. However, Junos OS does not enforce this.

## Example: Configuring Redundant Virtual Tunnel Interfaces in MBGP MVPNs

### IN THIS SECTION

- [Requirements | 743](#)
- [Overview | 743](#)
- [Configuration | 743](#)
- [Verification | 753](#)



This example shows how to configure redundant virtual tunnel (VT) interfaces in multiprotocol BGP (MBGP) multicast VPNs (MVPNs). To configure, include multiple VT interfaces in the routing instance and, optionally, apply the **primary** statement to one of the VT interfaces.

## Requirements


The routing device that has redundant VT interfaces configured must be running Junos OS Release 12.3 or later.

## Overview

In this example, Device PE2 has redundant VT interfaces configured in a multicast LDP routing instance, and one of the VT interfaces is assigned to be the primary interface.

Figure 61 on page 743 shows the topology used in this example.

Figure 61: Multiple VT Interfaces in MBGP MVPN Topology

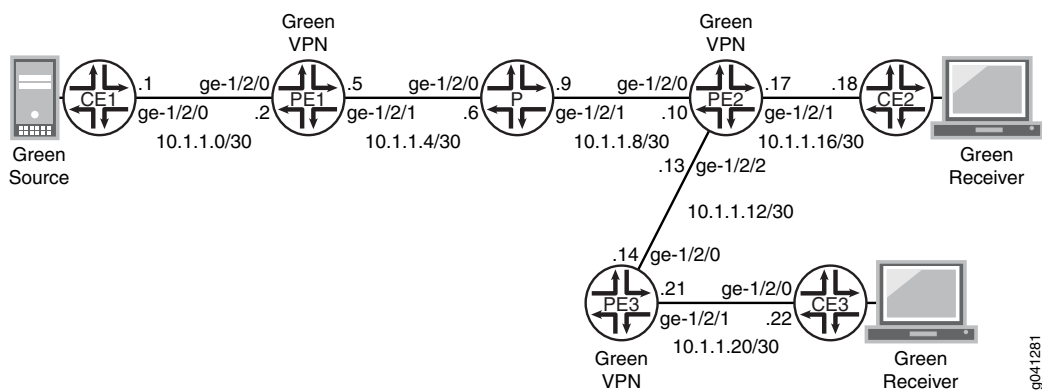

The following example shows the configuration for the customer edge (CE), provider (P), and provider edge (PE) devices in Figure 61 on page 743. The section “Step-by-Step Procedure” on page 748 describes the steps on Device PE2.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device CE1



```

set interfaces ge-1/2/0 unit 0 family inet address 10.1.1.1/30
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.1/24
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0
set protocols pim rp static address 198.51.100.0
set protocols pim interface all
set routing-options router-id 192.0.2.1

```

#### Device CE2

```

set interfaces ge-1/2/0 unit 0 family inet address 10.1.1.18/30
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.6/24
set protocols sap listen 192.168.0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0
set protocols pim rp static address 198.51.100.0
set protocols pim interface all
set routing-options router-id 192.0.2.6

```

#### Device CE3

```

set interfaces ge-1/2/0 unit 0 family inet address 10.1.1.22/30
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.7/24
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0
set protocols pim rp static address 198.51.100.0
set protocols pim interface all
set routing-options router-id 192.0.2.7

```

#### Device P



```

set interfaces ge-1/2/0 unit 0 family inet address 10.1.1.6/30
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.1.1.9/30
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.3/24
set protocols mpls interface ge-1/2/0.0
set protocols mpls interface ge-1/2/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0
set protocols ospf area 0.0.0.0 interface ge-1/2/1.0
set protocols ldp interface ge-1/2/0.0
set protocols ldp interface ge-1/2/1.0
set protocols ldp p2mp
set routing-options router-id 192.0.2.3

```

#### Device PE1

```

set interfaces ge-1/2/0 unit 0 family inet address 10.1.1.2/30
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.1.1.5/30
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces vt-1/2/0 unit 2 family inet
set interfaces lo0 unit 0 family inet address 192.0.2.2/24
set interfaces lo0 unit 1 family inet address 198.51.100.0/24
set protocols mpls interface ge-1/2/1.0
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 192.0.2.2
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp family inet-mvpn signaling
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols bgp group ibgp neighbor 192.0.2.5
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/1.0
set protocols ldp interface ge-1/2/1.0
set protocols ldp p2mp
set policy-options policy-statement parent_vpn_routes from protocol bgp
set policy-options policy-statement parent_vpn_routes then accept
set routing-instances vpn-1 instance-type vrf
set routing-instances vpn-1 interface ge-1/2/0.0
set routing-instances vpn-1 interface vt-1/2/0.2 multicast

```



```

set routing-instances vpn-1 interface lo0.1
set routing-instances vpn-1 route-distinguisher 100:100
set routing-instances vpn-1 provider-tunnel ldp-p2mp
set routing-instances vpn-1 vrf-target target:1:1
set routing-instances vpn-1 protocols ospf export parent_vpn_routes
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface lo0.1 passive
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface ge-1/2/0.0
set routing-instances vpn-1 protocols pim rp static address 198.51.100.0
set routing-instances vpn-1 protocols pim interface ge-1/2/0.0 mode sparse
set routing-instances vpn-1 protocols mvpn
set routing-options router-id 192.0.2.2
set routing-options autonomous-system 1001

```

## Device PE2

```

set interfaces ge-1/2/0 unit 0 family inet address 10.1.1.10/30
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/2 unit 0 family inet address 10.1.1.13/30
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.1.1.17/30
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces vt-1/1/0 unit 0 family inet
set interfaces vt-1/2/1 unit 0 family inet
set interfaces lo0 unit 0 family inet address 192.0.2.4/24
set interfaces lo0 unit 1 family inet address 203.0.113.4/24
set protocols mpls interface ge-1/2/0.0
set protocols mpls interface ge-1/2/2.0
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 192.0.2.4
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp family inet-mvpn signaling
set protocols bgp group ibgp neighbor 192.0.2.2
set protocols bgp group ibgp neighbor 192.0.2.5
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0
set protocols ospf area 0.0.0.0 interface ge-1/2/2.0
set protocols ldp interface ge-1/2/0.0
set protocols ldp interface ge-1/2/2.0
set protocols ldp p2mp
set policy-options policy-statement parent_vpn_routes from protocol bgp

```



```

set policy-options policy-statement parent_vpn_routes then accept
set routing-instances vpn-1 instance-type vrf
set routing-instances vpn-1 interface vt-1/1/0.0 multicast
set routing-instances vpn-1 interface vt-1/1/0.0 primary
set routing-instances vpn-1 interface vt-1/2/1.0 multicast
set routing-instances vpn-1 interface ge-1/2/1.0
set routing-instances vpn-1 interface lo0.1
set routing-instances vpn-1 route-distinguisher 100:100
set routing-instances vpn-1 vrf-target target:1:1
set routing-instances vpn-1 protocols ospf export parent_vpn_routes
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface lo0.1 passive
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface ge-1/2/1.0
set routing-instances vpn-1 protocols pim rp static address 198.51.100.0
set routing-instances vpn-1 protocols pim interface ge-1/2/1.0 mode sparse
set routing-instances vpn-1 protocols mvpn
set routing-options router-id 192.0.2.4
set routing-options autonomous-system 1001

```

### Device PE3

```

set interfaces ge-1/2/0 unit 0 family inet address 10.1.1.14/30
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.1.1.21/30
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces vt-1/2/0 unit 5 family inet
set interfaces lo0 unit 0 family inet address 192.0.2.5/24
set interfaces lo0 unit 1 family inet address 203.0.113.5/24
set protocols mpls interface ge-1/2/0.0
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 192.0.2.5
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp family inet-mvpn signaling
set protocols bgp group ibgp neighbor 192.0.2.2
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0
set protocols ldp interface ge-1/2/0.0
set protocols p2mp
set policy-options policy-statement parent_vpn_routes from protocol bgp
set policy-options policy-statement parent_vpn_routes then accept

```



```

set routing-instances vpn-1 instance-type vrf
set routing-instances vpn-1 interface vt-1/2/0.5 multicast
set routing-instances vpn-1 interface ge-1/2/1.0
set routing-instances vpn-1 interface lo0.1
set routing-instances vpn-1 route-distinguisher 100:100
set routing-instances vpn-1 vrf-target target:1:1
set routing-instances vpn-1 protocols ospf export parent_vpn_routes
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface lo0.1 passive
set routing-instances vpn-1 protocols ospf area 0.0.0.0 interface ge-1/2/1.0
set routing-instances vpn-1 protocols pim rp static address 198.51.100.0
set routing-instances vpn-1 protocols pim interface ge-1/2/1.0 mode sparse
set routing-instances vpn-1 protocols mvpn
set routing-options router-id 192.0.2.5
set routing-options autonomous-system 1001

```

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure redundant VT interfaces in an MBGP MVPN:

1. Configure the physical interfaces and loopback interfaces.

```

[edit interfaces]
user@PE2# set ge-1/2/0 unit 0 family inet address 10.1.1.10/30
user@PE2# set ge-1/2/0 unit 0 family mpls
user@PE2# set ge-1/2/2 unit 0 family inet address 10.1.1.13/30
user@PE2# set ge-1/2/2 unit 0 family mpls
user@PE2# set ge-1/2/1 unit 0 family inet address 10.1.1.17/30
user@PE2# set ge-1/2/1 unit 0 family mpls
user@PE2# set lo0 unit 0 family inet address 192.0.2.4/24
user@PE2# set lo0 unit 1 family inet address 203.0.113.4/24

```

2. Configure the VT interfaces.

Each VT interface is configurable under one routing instance.

```

[edit interfaces]
user@PE2# set vt-1/1/0 unit 0 family inet
user@PE2# set vt-1/2/1 unit 0 family inet

```



3. Configure MPLS on the physical interfaces.

```
[edit protocols mpls]
user@PE2# set interface ge-1/2/0.0
user@PE2# set interface ge-1/2/2.0
```

4. Configure BGP.

```
[edit protocols bgp group ibgp]
user@PE2# set type internal
user@PE2# set local-address 192.0.2.4
user@PE2# set family inet-vpn any
user@PE2# set family inet-mvpn signaling
user@PE2# set neighbor 192.0.2.2
user@PE2# set neighbor 192.0.2.5
```

5. Configure an interior gateway protocol.

```
[edit protocols ospf area 0.0.0.0]
user@PE2# set interface lo0.0 passive
user@PE2# set interface ge-1/2/0.0
user@PE2# set interface ge-1/2/2.0
```

6. Configure LDP.

```
[edit protocols ldp]
user@PE2# set interface ge-1/2/0.0
user@PE2# set interface ge-1/2/2.0
user@PE2# set p2mp
```

7. Configure the routing policy.

```
[edit policy-options policy-statement parent_vpn_routes]
user@PE2# set from protocol bgp
user@PE2# set then accept
```

8. Configure the routing instance.

```
[edit routing-instances vpn-1]
```



```

user@PE2# set instance-type vrf
user@PE2# set interface ge-1/2/1.0
user@PE2# set interface lo0.1
user@PE2# set route-distinguisher 100:100
user@PE2# set vrf-target target:1:1
user@PE2# set protocols ospf export parent_vpn_routes
user@PE2# set protocols ospf area 0.0.0.0 interface lo0.1 passive
user@PE2# set protocols ospf area 0.0.0.0 interface ge-1/2/1.0
user@PE2# set protocols pim rp static address 198.51.100.0
user@PE2# set protocols pim interface ge-1/2/1.0 mode sparse
user@PE2# set protocols mvpn

```

9. Configure redundant VT interfaces in the routing instance.

Make vt-1/1/0.0 the primary interface.

```

[edit routing-instances vpn-1]
user@PE2# set interface vt-1/1/0.0 multicast primary
user@PE2# set interface vt-1/2/1.0 multicast

```

10. Configure the router ID and autonomous system (AS) number.

```

[edit routing-options]
user@PE2# set router-id 192.0.2.4
user@PE2# set autonomous-system 1001

```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show policy-options**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```

user@PE2# show interfaces
ge-1/2/0 {
  unit 0 {
    family inet {
      address 10.1.1.10/30;
    }
    family mpls;
  }
}
ge-1/2/2 {

```



```

unit 0 {
    family inet {
        address 10.1.1.13/30;
    }
    family mpls;
}
}
ge-1/2/1 {
    unit 0 {
        family inet {
            address 10.1.1.17/30;
        }
        family mpls;
    }
}
vt-1/1/0 {
    unit 0 {
        family inet;
    }
}
vt-1/2/1 {
    unit 0 {
        family inet;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.0.2.4/24;
        }
    }
    unit 1 {
        family inet {
            address 203.0.113.4/24;
        }
    }
}
}

```

```

user@PE2# show protocols
mpls {
    interface ge-1/2/0.0;
    interface ge-1/2/2.0;
}
bgp {

```



```

group ibgp {
    type internal;
    local-address 192.0.2.4;
    family inet-vpn {
        any;
    }
    family inet-mvpn {
        signaling;
    }
    neighbor 192.0.2.2;
    neighbor 192.0.2.5;
}
}
ospf {
    area 0.0.0.0 {
        interface lo0.0 {
            passive;
        }
        interface ge-1/2/0.0;
        interface ge-1/2/2.0;
    }
}
ldp {
    interface ge-1/2/0.0;
    interface ge-1/2/2.0;
    p2mp;
}

```

```

user@PE2# show policy-options
policy-statement parent_vpn_routes {
    from protocol bgp;
    then accept;
}

```

```

user@PE2# show routing-instances
vpn-1 {
    instance-type vrf;
    interface vt-1/1/0.0 {
        multicast;
        primary;
    }
    interface vt-1/2/1.0 {
        multicast;
    }
}

```



```

}
interface ge-1/2/1.0;
interface lo0.1;
route-distinguisher 100:100;
vrf-target target:1:1;
protocols {
  ospf {
    export parent_vpn_routes;
    area 0.0.0.0 {
      interface lo0.1 {
        passive;
      }
      interface ge-1/2/1.0;
    }
  }
  pim {
    rp {
      static {
        address 198.51.100.0;
      }
    }
    interface ge-1/2/1.0 {
      mode sparse;
    }
  }
  mvpn;
}
}

```

```

user@PE2# show routing-options
router-id 192.0.2.4;
autonomous-system 1001;

```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

Confirm that the configuration is working properly.



**NOTE:** The **show multicast route extensive instance *instance-name*** command also displays the VT interface in the multicast forwarding table when multicast traffic is transmitted across the VPN.

### Checking the LSP Route

#### Purpose

Verify that the expected LT interface is assigned to the LDP-learned route.

#### Action

1. From operational mode, enter the **show route table mpls** command.

```
user@PE2> show route table mpls
```

```
mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
0          *[MPLS/0] 02:09:36, metric 1
            Receive
1          *[MPLS/0] 02:09:36, metric 1
            Receive
2          *[MPLS/0] 02:09:36, metric 1
            Receive
13         *[MPLS/0] 02:09:36, metric 1
            Receive
299776     *[LDP/9] 02:09:14, metric 1
            > via ge-1/2/0.0, Pop
299776(S=0) *[LDP/9] 02:09:14, metric 1
            > via ge-1/2/0.0, Pop
299792     *[LDP/9] 02:09:09, metric 1
            > via ge-1/2/2.0, Pop
299792(S=0) *[LDP/9] 02:09:09, metric 1
            > via ge-1/2/2.0, Pop
299808     *[LDP/9] 02:09:04, metric 1
            > via ge-1/2/0.0, Swap 299808
299824     *[VPN/170] 02:08:56
            > via ge-1/2/1.0, Pop
299840     *[VPN/170] 02:08:56
            > via ge-1/2/1.0, Pop
299856     *[VPN/170] 02:08:56
            receive table vpn-1.inet.0, Pop
299872     *[LDP/9] 02:08:54, metric 1
```



```
> via vt-1/1/0.0, Pop
   via ge-1/2/2.0, Swap 299872
```

2. From configuration mode, change the primary VT interface by removing the **primary** statement from the vt-1/1/0.0 interface and adding it to the vt-1/2/1.0 interface.

```
[edit routing-instances vpn-1]
user@PE2# delete interface vt-1/1/0.0 primary
user@PE2# set interface vt-1/2/1.0 primary
user@PE2# commit
```

3. From operational mode, enter the **show route table mpls** command.

```
user@PE2> show route table mpls
```

```
mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
0          *[MPLS/0] 02:09:36, metric 1
            Receive
1          *[MPLS/0] 02:09:36, metric 1
            Receive
2          *[MPLS/0] 02:09:36, metric 1
            Receive
13         *[MPLS/0] 02:09:36, metric 1
            Receive
299776     *[LDP/9] 02:09:14, metric 1
            > via ge-1/2/0.0, Pop
299776(S=0) *[LDP/9] 02:09:14, metric 1
            > via ge-1/2/0.0, Pop
299792     *[LDP/9] 02:09:09, metric 1
            > via ge-1/2/2.0, Pop
299792(S=0) *[LDP/9] 02:09:09, metric 1
            > via ge-1/2/2.0, Pop
299808     *[LDP/9] 02:09:04, metric 1
            > via ge-1/2/0.0, Swap 299808
299824     *[VPN/170] 02:08:56
            > via ge-1/2/1.0, Pop
299840     *[VPN/170] 02:08:56
            > via ge-1/2/1.0, Pop
299856     *[VPN/170] 02:08:56
            receive table vpn-1.inet.0, Pop
299872     *[LDP/9] 02:08:54, metric 1
```



```
>    via vt-1/2/1.0, Pop
    via ge-1/2/2.0, Swap 299872
```

### Meaning

With the original configuration, the output shows the vt-1/1/0.0 interface. If you change the primary interface to vt-1/2/1.0, the output shows the vt-1/2/1.0 interface.

## MVPN VRF Import and Export Policies

### IN THIS SECTION

- [Configuring VRF Route Targets for Routing Instances for an MBGP MVPN | 756](#)
- [Limiting Routes to Be Advertised by an MVPN VRF Instance | 760](#)

## Configuring VRF Route Targets for Routing Instances for an MBGP MVPN

### IN THIS SECTION

- [Configuring the Export Target for an MBGP MVPN | 758](#)
- [Configuring the Import Target for an MBGP MVPN | 758](#)

By default, the VPN routing and forwarding (VRF) import and export route targets (configured either using VRF import and export policies or using the **vrf-target** statement) are used for importing and exporting routes with the MBGP MVPN network layer reachability information (NLRI).

You can use the **export-target** and **import-target** statements to override the default VRF import and export route targets. Export and import targets can also be specified specifically for sender sites or receiver sites, or can be borrowed from a configured unicast route target. Note that a sender site export route target is always advertised when security association routes are exported.



**NOTE:** When you configure an MBGP MVPN routing instance, you should not configure a target value for an MBGP MVPN specific route target that is identical to a target value for a unicast route target configured in another routing instance.

Specifying route targets in the MBGP MVPN NLRI for sender and receiver sites is useful when there is a mix of sender only, receiver only, and sender and receiver sites. A sender site route target is used for exporting automatic discovery routes by a sender site and for importing automatic discovery routes by a receiver site. A receiver site route target is used for exporting routes by a receiver site and importing routes by a sender site. A sender and receiver site exports and imports routes with both route targets.

A provider edge (PE) router with sites in a specific MBGP MVPN must determine whether a received automatic discovery route is from a sender site or receiver site based on the following:

- If the PE router is configured to be only in a sender site, route targets are imported only from receiver sites. Imported automatic discovery routes must be from a receiver site.
- If the PE router is configured to be only in a receiver site, route targets are imported only from sender sites. Imported automatic discovery routes must be from a sender site.
- If a PE router is configured to be in both sender sites and receiver sites, these guidelines apply:
  - Along with an import route target, you can optionally configure whether the route target is from a receiver or a sender site.
  - If a configuration is not provided, an imported automatic discovery route is treated as belonging to both the sender site set and the receiver site set.

To configure a route target for the MBGP MVPN routing instance, include the **route-target** statement:

```
route-target {
  export-target {
    target target-community;
    unicast;
  }
  import-target {
    target {
      target-value;
      receiver target-value;
      sender target-value;
    }
    unicast {
      receiver;
      sender;
    }
  }
}
```



You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols mvpn]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols mvpn]

The following sections describes how to configure the export target and the import target for an MBGP MVPN:

### Configuring the Export Target for an MBGP MVPN

To configure an export target, include the **export-target** statement:

```
export-target {
  target target-community;
  unicast;
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols mvpn route-target]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols mvpn route target]

Configure the **target** option to specify the export target community. Configure the **unicast** option to use the same target community that has been specified for unicast.

### Configuring the Import Target for an MBGP MVPN

#### IN THIS SECTION

- [Configuring the Import Target Receiver and Sender for an MBGP MVPN | 759](#)
- [Configuring the Import Target Unicast Parameters for an MBGP MVPN | 759](#)

To configure an import target, include the **import-target** statement:

```
import-target {
  target target-value {
    receiver;
    sender;
```



```

    }
    unicast {
        receiver;
        sender;
    }
}

```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols mvpn route-target]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols mvpn route-target]

The following sections describe how to configure the import target and unicast parameters:

#### **Configuring the Import Target Receiver and Sender for an MBGP MVPN**

To configure the import target community, include the **target** statement and specify the target community. The target community must be in the format **target:x:y**. The **x** value is either an IP address or an AS number followed by an optional **L** to indicate a 4 byte AS number, and **y** is a number (for example, **target:123456L:100**)

```

target target-value {
    receiver;
    sender;
}

```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols mvpn route-target import-target]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols mvpn route-target import-target]

You can specify the target community used when importing either receiver site sets or sender site sets by including one of the following statements:

- **receiver**—Specify the target community used when importing receiver site sets.
- **sender**—Specify the target community used when importing sender site sets.

#### **Configuring the Import Target Unicast Parameters for an MBGP MVPN**

To configure a unicast target community as the import target, include the **unicast** statement:

```

unicast {
    receiver;
}

```



```

    sender;
}

```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols mvpn route-target import-target]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols mvpn route-target import-target]

You can specify the unicast target community used when importing either receiver site sets or sender site sets by including one of the following statements:

- **receiver**—Specify the unicast target community used when importing receiver site sets.
- **sender**—Specify the unicast target community used when importing sender site sets.

## Limiting Routes to Be Advertised by an MVPN VRF Instance

If a hub-and-spoke deployment uses one VPN routing and forwarding (VRF) routing instance for unicast routing and a separate VRF for MVPN routing, you need to limit the PE routers at the hub site to advertise only IPv4 MVPN routes, only IPv6 MVPN routes, or both. This is necessary to prevent the multicast VRF instance from advertising unicast VPN routes to other PE routers.

**NOTE:** This configuration does not prevent the exportation of VPN routes to other VRF instances on the same router if the **auto-export** statement is included in the [edit routing-options] hierarchy.

To configure a VRF routing instance with the name **green** to advertise MVPN routes from both the **inet** and **inet6** address families, perform the following steps:

1. Configure the VRF routing instance to advertise IPv4 routes.

```

user@host# set routing-instances green vrf-advertise-selective family inet-mvpn

```

2. Configure the VRF routing instance to advertise IPv6 routes.

```

user@host# set routing-instances green vrf-advertise-selective family inet6-mvpn

```



After the configuration is committed, only the MVPN routes for the specified address families are advertised from the VRF instance to remote PE routers. To remove the restriction on routes being advertised, delete the **vrf-advertise-selective** statement.

**NOTE:** You cannot include the **vrf-advertise-selective** statement and the **no-vrf-advertise** statement in the same VRF configuration. However, if you configure the **vrf-advertise-selective** statement without any of its options, the router has the same behavior as if you configured the **no-vrf-advertise** statement. VPN routes are prevented from being advertised from a VRF routing instance to the remote PE routers.

#### SEE ALSO

---

[family | 1275](#)

---

[inet-mvpn | 1294](#)

---

[inet6-mvpn | 1297](#)

---

[no-vrf-advertise | 1342](#)

---

[vrf-advertise-selective | 1404](#)

## Configuring Provider Tunnels in MVPNs

#### IN THIS SECTION

- [PIM Sparse Mode, PIM Dense Mode, Auto-RP, and BSR for MBGP MVPNs | 762](#)
- [Configuring PIM Provider Tunnels for an MBGP MVPN | 762](#)
- [Configuring PIM-SSM GRE Selective Provider Tunnels | 763](#)



## PIM Sparse Mode, PIM Dense Mode, Auto-RP, and BSR for MBGP MVPNs

You can configure PIM sparse mode, PIM dense mode, auto-RP, and bootstrap router (BSR) for MBGP MVPN networks:

- PIM sparse mode—Allows a router to use any unicast routing protocol and performs reverse-path forwarding (RPF) checks using the unicast routing table. PIM sparse mode includes an explicit join message, so routers determine where the interested receivers are and send join messages upstream to their neighbors, building trees from the receivers to the rendezvous point (RP).
- PIM dense mode—Allows a router to use any unicast routing protocol and performs reverse-path forwarding (RPF) checks using the unicast routing table. Packets are forwarded to all interfaces except the incoming interface. Unlike PIM sparse mode, where explicit joins are required for packets to be transmitted downstream, packets are flooded to all routers in the routing instance in PIM dense mode.
- Auto-RP—Uses PIM dense mode to propagate control messages and establish RP mapping. You can configure an auto-RP node in one of three different modes: discovery mode, announce mode, and mapping mode.
- BSR—Establishes RPs. A selected router in a network acts as a BSR, which selects a unique RP for different group ranges. BSR messages are flooded using a data tunnel between PE routers.

SEE ALSO

*Example: Allowing MBGP MVPN Remote Sources*

*Example: Configuring a PIM-SSM Provider Tunnel for an MBGP MVPN*

## Configuring PIM Provider Tunnels for an MBGP MVPN

To configure a Protocol Independent Multicast (PIM) sparse mode provider tunnel for a multicast VPN, include the **pim-asm** statement:

```
pim-asm {
  group-address address;
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name* provider-tunnel]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* provider-tunnel]



To complete the PIM sparse mode provider tunnel configuration, you also need to specify the group address using the **group-address** option. The source address for a PIM sparse mode provider tunnel is configured to be the loopback address of the loopback interface in the inet.0 routing table.

## Configuring PIM-SSM GRE Selective Provider Tunnels

This topic describes how to configure a PIM-SSM GRE selective provider tunnel for an MBGP MVPN.

Creating a selective provider tunnel enables you to move high-rate traffic off the inclusive tunnel and deliver the multicast traffic only to receivers that request it. This improves bandwidth utilization.

To configure a PIM-SSM GRE selective provider tunnel for the 203.0.113.1/24 customer multicast group address, the 10.2.2.2/32 customer source address, and a virtual routing instance named **green**:

1. Configure the multicast group address range to be used for creating selective tunnels. The address prefix can be any valid nonreserved IPv4 multicast address range. Whether you configure a range of addresses or a single address, make sure that you configure enough group addresses for all the selective tunnels needed.

```
user@host# set routing-instances green provider-tunnel selective group 203.0.113.1/24 source 10.2.2.2/32
pim-ssm group-range 192.0.2.0/24
```

2. Configure the threshold rate in kilobits per second (Kbps) for triggering the creation of the selective tunnel. If you set the threshold rate to zero Kbps, the selective tunnel is created immediately, and the multicast traffic does not use an inclusive tunnel at all. Optionally, you can leave the threshold rate unconfigured and the result is the same as setting the threshold to zero.

```
user@host# set routing-instances green provider-tunnel selective group 203.0.113.1/24 source 10.2.2.2/32
threshold-rate 0
```

3. Configure the autonomous system number in the global routing options. This is required in MBGP MVPNs.

```
user@host# set routing-options autonomous-system 100
```

When configuring PIM-SSM GRE selective provider tunnels, keep the following in mind:

- Aggregation of multiple customer multicast routes to a single PIM S-PMSI is not supported.



- Provider tunnel multicast group addresses must be IPv4 addresses, even in configurations in which the customer multicast group and source are IPv6 addresses.

#### SEE ALSO

*Multicast VPN Terminology*

---

[pim-ssm](#) | [1346](#)

---

[group-range](#) | [1287](#)

---

[threshold-rate](#) | [1393](#)



# 5

CHAPTER

## Full-Mesh, Hub-and-Spoke, and Overlapping VPNs

---

Full Mesh VPNs | **767**

Hub-and-Spoke VPNs | **788**

Overlapping VPNs | **823**

---







# Full Mesh VPNs

## IN THIS SECTION

- [Configuring a Simple Full-Mesh VPN Topology | 767](#)
- [Configuring a Full-Mesh VPN Topology with Route Reflectors | 787](#)

## Configuring a Simple Full-Mesh VPN Topology

## IN THIS SECTION


- [Enabling an IGP on the PE and P Routers | 769](#)
- [Enabling RSVP and MPLS on the P Router | 769](#)
- [Configuring the MPLS LSP Tunnel Between the PE Routers | 769](#)
- [Configuring IBGP on the PE Routers | 771](#)
- [Configuring Routing Instances for VPNs on the PE Routers | 772](#)
- [Configuring VPN Policy on the PE Routers | 775](#)
- [Simple VPN Configuration Summarized by Router | 778](#)

This example shows how to set up a simple full-mesh service provider VPN configuration, which consists of the following components (see [Figure 62 on page 768](#)):

- Two separate VPNs (VPN-A and VPN-B)
- Two provider edge (PE) routers, both of which service VPN-A and VPN-B
- RSVP as the signaling protocol
- One RSVP label-switched path (LSP) that tunnels between the two PE routers through one provider (P) router



Figure 62: Example of a Simple VPN Topology

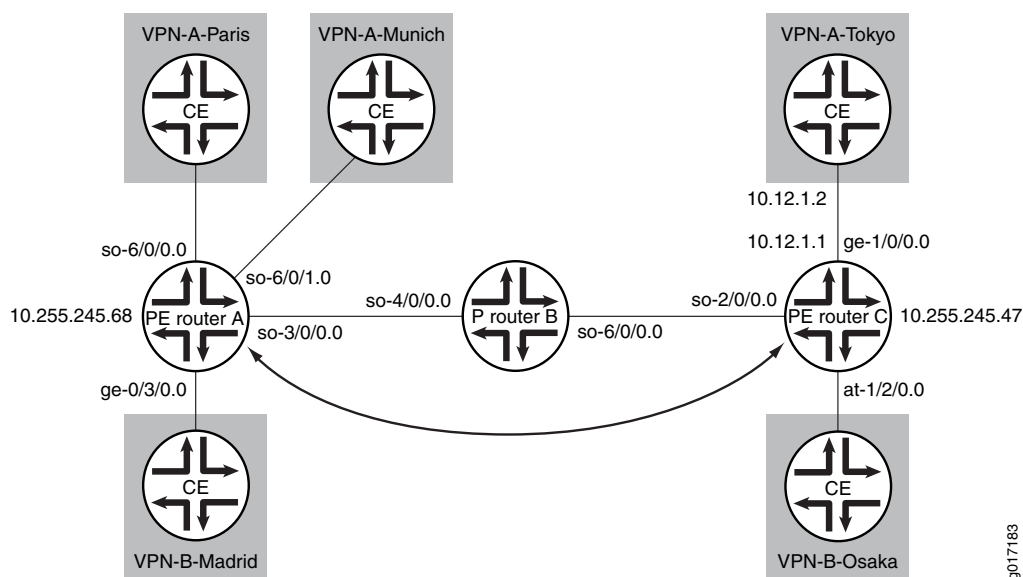

In this configuration, route distribution in VPN A from Router VPN-A-Paris to Router VPN-A-Tokyo occurs as follows:

1. The customer edge (CE) router VPN-A-Paris announces routes to the PE router Router A.
2. Router A installs the received announced routes into its VPN routing and forwarding (VRF) table, VPN-A.inet.0.
3. Router A creates an MPLS label for the interface between it and Router VPN-A-Paris.
4. Router A checks its VRF export policy.
5. Router A converts the Internet Protocol version 4 (IPv4) routes from Router VPN-A-Paris into VPN IPv4 format using its route distinguisher and announces these routes to PE Router C over the IBGP between the two PE routers.
6. Router C checks its VRF import policy and installs all routes that match the policy into its bgp.l3vpn.0 routing table. (Any routes that do not match are discarded.)
7. Router C checks its VRF import policy and installs all routes that match into its VPN-A.inet.0 routing table. The routes are installed in IPv4 format.
8. Router C announces its routes to the CE router Router VPN-A-Tokyo, which installs them into its master routing table. (For routing platforms running Junos OS, the master routing table is inet.0.)
9. Router C uses the LSP between it and Router A to route all packets from Router VPN-A-Tokyo that are destined for Router VPN-A-Paris.

The final section in this example consolidates the statements needed to configure VPN functionality on each of the service P routers shown in [Figure 62 on page 768](#).



**NOTE:** In this example, a private autonomous system (AS) number is used for the route distinguisher and the route target. This number is used for illustration only. When you are configuring VPNs, you should use an assigned AS number.

The following sections explain how to configure the VPN functionality on the PE and P routers. The CE routers have no information about the VPN, so you configure them normally.

### Enabling an IGP on the PE and P Routers

To allow the PE and P routers to exchange routing information among themselves, you must configure an interior gateway protocol (IGP) on all these routers or you must configure static routes. You configure the IGP on the master instance of the routing protocol process (rpd) (that is, at the **[edit protocols]** hierarchy level), not within the VPN routing instance (that is, not at the **[edit routing-instances]** hierarchy level).

You configure the IGP in the standard way. This configuration example does not include this portion of the configuration.

### Enabling RSVP and MPLS on the P Router

On the P router, Router B, you must configure RSVP and MPLS because this router exists on the MPLS LSP path between the two PE routers, Router A and Router C:

```
[edit]
protocols {
  rsvp {
    interface so-4/0/0.0;
    interface so-6/0/0.0;
  }
  mpls {
    interface so-4/0/0.0;
    interface so-6/0/0.0;
  }
}
```

### Configuring the MPLS LSP Tunnel Between the PE Routers

In this configuration example, RSVP is used for VPN signaling. Therefore, in addition to configuring RSVP, you must enable traffic engineering support in an IGP and you must create an MPLS LSP to tunnel the VPN traffic.



On PE Router A, enable RSVP and configure one end of the MPLS LSP tunnel. In this example, traffic engineering support is enabled for OSPF. When configuring the MPLS LSP, include **interface** statements for all interfaces participating in MPLS, including the interfaces to the PE and CE routers. The statements for the interfaces between the PE and CE routers are needed so that the PE router can create an MPLS label for the private interface. In this example, the first **interface** statement configures MPLS on the interface connected to the LSP, and the remaining three configure MPLS on the interfaces that connect the PE router to the CE routers.

```
[edit]
protocols {
  rsvp {
    interface so-3/0/0.0;
  }
  mpls {
    label-switched-path RouterA-to-RouterC {
      to 10.255.245.47;
    }
    interface so-3/0/0.0;
    interface so-6/0/0.0;
    interface so-6/0/1.0;
    interface ge-0/3/0.0;
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface so-3/0/0.0;
    }
  }
}
```

On PE Router C, enable RSVP and configure the other end of the MPLS LSP tunnel. Again, traffic engineering support is enabled for OSPF, and you configure MPLS on the interfaces to the LSP and the CE routers.

```
[edit]
protocols {
  rsvp {
    interface so-2/0/0.0;
  }
  mpls {
    label-switched-path RouterC-to-RouterA {
      to 10.255.245.68;
    }
    interface so-2/0/0.0;
    interface ge-1/0/0.0;
  }
}
```



```

        interface at-1/2/0.0;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface so-2/0/0.0;
        }
    }
}

```

## Configuring IBGP on the PE Routers

On the PE routers, configure an IBGP session with the following properties:

- VPN family—To indicate that the IBGP session is for the VPN, include the **family inet-vpn** statement.
- Loopback address—Include the **local-address** statement, specifying the local PE router's loopback address. The IBGP session for VPNs runs through the loopback address. You must also configure the **lo0** interface at the **[edit interfaces]** hierarchy level. The example does not include this part of the router's configuration.
- Neighbor address—Include the **neighbor** statement, specifying the IP address of the neighboring PE router, which is its loopback (**lo0**) address.

On PE Router A, configure IBGP:

```

[edit]
protocols {
  bgp {
    group PE-RouterA-to-PE-RouterC {
      type internal;
      local-address 10.255.245.68;
      family inet-vpn {
        unicast;
      }
      neighbor 10.255.245.47;
    }
  }
}

```

On PE Router C, configure IBGP:

```

[edit]
protocols {
  bgp {

```



```

group PE-RouterC-to-PE-RouterA {
    type internal;
    local-address 10.255.245.47;
    family inet-vpn {
        unicast;
    }
    neighbor 10.255.245.68;
}
}
}

```

## Configuring Routing Instances for VPNs on the PE Routers

Both PE routers service VPN-A and VPN-B, so you must configure two routing instances on each router, one for each VPN. For each VPN, you must define the following in the routing instance:

- Route distinguisher, which must be unique for each routing instance on the PE router.
- It is used to distinguish the addresses in one VPN from those in another VPN.
- Instance type of **vrf**, which creates the VRF table on the PE router.
- Interfaces connected to the CE routers.
- VRF import and export policies, which must be the same on each PE router that services the same VPN. Unless an import policy contains only a **then reject** statement, it must include reference to a community. Otherwise, when you try to commit the configuration, the commit fails.

**NOTE:** In this example, a private AS number is used for the route distinguisher. This number is used for illustration only. When you are configuring VPNs, you should use an assigned AS number.

- Routing between the PE and CE routers, which is required for the PE router to distribute VPN-related routes to and from connected CE routers. You can configure a routing protocol—BGP, OSPF, or RIP—or you can configure static routing.

On PE Router A, configure the following routing instance for VPN-A. In this example, Router A uses static routes to distribute routes to and from the two CE routers to which it is connected.

```

[edit]
routing-instance {
    VPN-A-Paris-Munich {
        instance-type vrf;
    }
}

```



```

interface so-6/0/0.0;
interface so-6/0/1.0;
route-distinguisher 65535:0;
vrf-import VPN-A-import;
vrf-export VPN-A-export;
routing-options {
    static {
        route 172.16.0.0/16 next-hop so-6/0/0.0;
        route 172.17.0.0/16 next-hop so-6/0/1.0;
    }
}
}
}

```

On PE Router C, configure the following routing instance for VPN-A. In this example, Router C uses BGP to distribute routes to and from the CE router to which it is connected.

```

[edit]
routing-instance {
    VPN-A-Tokyo {
        instance-type vrf;
        interface ge-1/0/0.0;
        route-distinguisher 65535:1;
        vrf-import VPN-A-import;
        vrf-export VPN-A-export;
        protocols {
            bgp {
                group VPN-A-Site2 {
                    peer-as 1;
                    neighbor 10.12.1.2;
                }
            }
        }
    }
}
}

```

On PE Router A, configure the following routing instance for VPN-B. In this example, Router A uses OSPF to distribute routes to and from the CE router to which it is connected.

```

[edit]
policy-options {
    policy-statement bgp-to-ospf {
        from {

```



```

        protocol bgp;
        route-filter 192.168.1.0/24 orlonger;
    }
    then accept;
}
}
routing-instance {
    VPN-B-Madrid {
        instance-type vrf;
        interface ge-0/3/0.0;
        route-distinguisher 65535:2;
        vrf-import VPN-B-import;
        vrf-export VPN-B-export;
        protocols {
            ospf {
                export bgp-to-ospf;
                area 0.0.0.0 {
                    interface ge-0/3/0;
                }
            }
        }
    }
}
}

```

On PE Router C, configure the following routing instance for VPN-B. In this example, Router C uses RIP to distribute routes to and from the CE router to which it is connected.

```

[edit]
policy-options {
    policy-statement bgp-to-rip {
        from {
            protocol bgp;
            route-filter 192.168.2.0/24 orlonger;
        }
        then accept;
    }
}
routing-instance {
    VPN-B-Osaka {
        instance-type vrf;
        interface at-1/2/0.0;
        route-distinguisher 65535:3;
        vrf-import VPN-B-import;
        vrf-export VPN-B-export;
    }
}

```



```

protocols {
  rip {
    group PE-C-to-VPN-B {
      export bgp-to-rip;
      neighbor at-1/2/0;
    }
  }
}

```

## Configuring VPN Policy on the PE Routers

Configure the VPN import and export policies on each PE router so that the appropriate routes are installed in the PE router's VRF tables. The VRF table is used to forward packets within a VPN. For VPN-A, the VRF table is VPN-A.inet.0, and for VPN-B it is VPN-B.inet.0.

In the VPN policy, you also configure VPN target communities.

In the following example, a private AS number is used for the route target. This number is used for illustration only. When you are configuring VPNs, you should use an assigned AS number. The policy qualifiers shown in this example are only those needed for the VPN to function. You can configure additional qualifiers, as needed, for any policies that you configure.

On PE Router A, configure the following VPN import and export policies:

```

[edit]
policy-options {
  policy-statement VPN-A-import {
    term a {
      from {
        protocol bgp;
        community VPN-A;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
  policy-statement VPN-A-export {
    term a {
      from protocol static;

```



```

        then {
            community add VPN-A;
            accept;
        }
    }
    term b {
        then reject;
    }
}
policy-statement VPN-B-import {
    term a {
        from {
            protocol bgp;
            community VPN-B;
        }
        then accept;
    }
    term b {
        then reject;
    }
}
policy-statement VPN-B-export {
    term a {
        from protocol ospf;
        then {
            community add VPN-B;
            accept;
        }
    }
    term b {
        then reject;
    }
}
community VPN-A members target:65535:4;
community VPN-B members target:65535:5;
}

```

On PE Router C, configure the following VPN import and export policies:

```

[edit]
policy-options {
    policy-statement VPN-A-import {
        term a {
            from {

```



```
        protocol bgp;
        community VPN-A;
    }
    then accept;
}
term b {
    then reject;
}
}
policy-statement VPN-A-export {
    term a {
        from protocol bgp;
        then {
            community add VPN-A;
            accept;
        }
    }
    term b {
        then reject;
    }
}
policy-statement VPN-B-import {
    term a {
        from {
            protocol bgp;
            community VPN-B;
        }
        then accept;
    }
    term b {
        then reject;
    }
}
policy-statement VPN-B-export {
    term a {
        from protocol rip;
        then {
            community add VPN-B;
            accept;
        }
    }
    term b {
        then reject;
    }
}
```



```

    }
    community VPN-A members target:65535:4;
    community VPN-B members target:65535:5;
  }

```

To apply the VPN policies on the routers, include the **vrf-export** and **vrf-import** statements when you configure the routing instance. For both VPNs, the VRF import and export policies handle the route distribution across the IBGP session running between the PE routers.

To apply the VPN policies on PE Router A, include the following statements:

```

[edit]
routing-instance {
  VPN-A-Paris-Munich {
    vrf-import VPN-A-import;
    vrf-export VPN-A-export;
  }
  VPN-B-Madrid {
    vrf-import VPN-B-import;
    vrf-export VPN-B-export;
  }
}

```

To apply the VPN policies on PE Router C, include the following statements:

```

[edit]
routing-instance {
  VPN-A-Tokyo {
    vrf-import VPN-A-import;
    vrf-export VPN-A-export;
  }
  VPN-B-Osaka {
    vrf-import VPN-B-import;
    vrf-export VPN-B-export;
  }
}

```

## Simple VPN Configuration Summarized by Router

### Router A (PE Router)

#### Routing Instance for VPN-A



```

routing-instance {
  VPN-A-Paris-Munich {
    instance-type vrf;
    interface so-6/0/0.0;
    interface so-6/0/1.0;
    route-distinguisher 65535:0;
    vrf-import VPN-A-import;
    vrf-export VPN-A-export;
  }
}

```

### Instance Routing Protocol

```

routing-options {
  static {
    route 172.16.0.0/16 next-hop so-6/0/0.0;
    route 172.17.0.0/16 next-hop so-6/0/1.0;
  }
}

```

### Routing Instance for VPN-B

```

routing-instance {
  VPN-B-Madrid {
    instance-type vrf;
    interface ge-0/3/0.0;
    route-distinguisher 65535:2;
    vrf-import VPN-B-import;
    vrf-export VPN-B-export;
  }
}

```

### Instance Routing Protocol



```

protocols {
  ospf {
    area 0.0.0.0 {
      interface ge-0/3/0;
    }
  }
}

```

### Master Protocol Instance

```

protocols {
}

```

### Enable RSVP

```

rsvp {
  interface so-3/0/0.0;
}

```

### Configure an MPLS LSP

```

mpls {
  label-switched-path RouterA-to-RouterC {
    to 10.255.245.47;
  }
  interface so-3/0/0.0;
  interface so-6/0/0.0;
  interface so-6/0/1.0;
  interface ge-0/3/0.0;
}

```

### Configure IBGP



```
bgp {  
  group PE-RouterA-to-PE-RouterC {  
    type internal;  
    local-address 10.255.245.68;  
    family inet-vpn {  
      unicast;  
    }  
    neighbor 10.255.245.47;  
  }  
}
```

### Configure OSPF for Traffic Engineering Support

```
ospf {  
  traffic-engineering;  
  area 0.0.0.0 {  
    interface so-3/0/0.0;  
  }  
}
```

### Configure VPN Policy

```
policy-options {  
  policy-statement VPN-A-import {  
    term a {  
      from {  
        protocol bgp;  
        community VPN-A;  
      }  
      then accept;  
    }  
    term b {  
      then reject;  
    }  
  }  
  policy-statement VPN-A-export {  
    term a {
```



```

        from protocol static;
        then {
            community add VPN-A;
            accept;
        }
    }
    term b {
        then reject;
    }
}
policy-statement VPN-B-import {
    term a {
        from {
            protocol bgp;
            community VPN-B;
        }
        then accept;
    }
    term b {
        then reject;
    }
}
policy-statement VPN-B-export {
    term a {
        from protocol ospf;
        then {
            community add VPN-B;
            accept;
        }
    }
    term b {
        then reject;
    }
}
community VPN-A members target:65535:4;
community VPN-B members target:65535:5;
}

```

### ***Router B (P Router)***

#### **Master Protocol Instance**



```
protocols {  
}
```

### Enable RSVP

```
rsvp {  
  interface so-4/0/0.0;  
  interface so-6/0/0.0;  
}
```

### Enable MPLS

```
mpls {  
  interface so-4/0/0.0;  
  interface so-6/0/0.0;  
}
```

### Router C (PE Router)

#### Routing Instance for VPN-A

```
routing-instance {  
  VPN-A-Tokyo {  
    instance-type vrf;  
    interface ge-1/0/0.0;  
    route-distinguisher 65535:1;  
    vrf-import VPN-A-import;  
    vrf-export VPN-A-export;  
  }  
}
```

### Instance Routing Protocol



```

protocols {
  bgp {
    group VPN-A-Site2 {
      peer-as 1;
      neighbor 10.12.1.2;
    }
  }
}

```

### Routing Instance for VPN-B

```

VPN-B-Osaka {
  instance-type vrf;
  interface at-1/2/0.0;
  route-distinguisher 65535:3;
  vrf-import VPN-B-import;
  vrf-export VPN-B-export;
}

```

### Instance Routing Protocol

```

protocols {
  rip {
    group PE-C-to-VPN-B {
      neighbor at-1/2/0;
    }
  }
}

```

### Master Protocol Instance

```

protocols {
}

```

### Enable RSVP



```

rsvp {
  interface so-2/0/0.0;
}

```

### Configure an MPLS LSP

```

mpls {
  label-switched-path RouterC-to-RouterA {
    to 10.255.245.68;
  }
  interface so-2/0/0.0;
  interface ge-1/0/0.0;
  interface at-1/2/0.0;
}

```

### Configure IBGP

```

bgp {
  group PE-RouterC-to-PE-RouterA {
    type internal;
    local-address 10.255.245.47;
    family inet-vpn {
      unicast;
    }
    neighbor 10.255.245.68;
  }
}

```

### Configure OSPF for Traffic Engineering Support

```

ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface so-2/0/0.0;
  }
}

```



```

    }
}

```

### Configure VPN Policy

```

policy-options {
  policy-statement VPN-A-import {
    term a {
      from {
        protocol bgp;
        community VPN-A;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
  policy-statement VPN-A-export {
    term a {
      from protocol bgp;
      then {
        community add VPN-A;
        accept;
      }
    }
    term b {
      then reject;
    }
  }
  policy-statement VPN-B-import {
    term a {
      from {
        protocol bgp;
        community VPN-B;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
}

```



```

    }
}
policy-statement VPN-B-export {
    term a {
        from protocol rip;
        then {
            community add VPN-B;
            accept;
        }
    }
    term b {
        then reject;
    }
}
community VPN-A members target:65535:4;
community VPN-B members target:65535:5;
}

```

## Configuring a Full-Mesh VPN Topology with Route Reflectors

This example is a variation of the full-mesh VPN topology example (described in [“Configuring a Simple Full-Mesh VPN Topology” on page 767](#)) in which one of the PE routers is a BGP route reflector. In this variation, Router C in [“Configuring a Simple Full-Mesh VPN Topology” on page 767](#) is a route reflector. The only change to its configuration is that you need to include the **cluster** statement when configuring the BGP group:

```

[edit]
protocols {
    bgp {
        group PE-RouterC-to-PE-RouterA {
            type internal;
            local-address 10.255.245.47;
            family inet-vpn {
                unicast;
            }
            neighbor 10.255.245.68;
            cluster 4.3.2.1;
        }
    }
}

```



```
}  
}
```

## Hub-and-Spoke VPNs

### IN THIS SECTION

- [Configuring Hub-and-Spoke VPN Topologies: One Interface | 788](#)
- [Configuring Hub-and-Spoke VPN Topologies: Two Interfaces | 803](#)

## Configuring Hub-and-Spoke VPN Topologies: One Interface

### IN THIS SECTION

- [Configuring Hub CE1 | 790](#)
- [Configuring Hub PE1 | 790](#)
- [Configuring the P Router | 791](#)
- [Configuring Spoke PE2 | 792](#)
- [Configuring Spoke PE3 | 794](#)
- [Configuring Spoke CE2 | 796](#)
- [Configuring Spoke CE3 | 796](#)
- [Enabling Egress Features on the Hub PE Router | 799](#)

Use a one-interface configuration to advertise a default route from a hub or hubs.



Figure 63: Example of a Hub-and-Spoke VPN Topology with One Interface

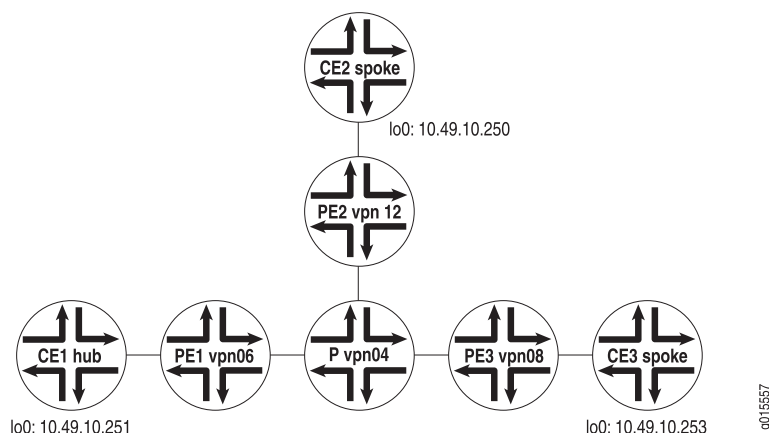


Figure 63 on page 789 illustrates a Layer 3 VPN hub-and-spoke application where there is only one interface between the hub CE (CE1) and the hub PE (PE1). This is the recommended way of configuring hub-and-spoke topologies.

In this configuration, a default route is advertised from the hub to the spokes. If more specific spoke CE routes need to be exchanged between spoke CE routers, then two interfaces are needed between the hub CE and hub PE. See [“Configuring Hub-and-Spoke VPN Topologies: Two Interfaces” on page 803](#) for a two-interface example.

In this configuration example, spoke route distribution is as follows:

1. Spoke CE2 advertises its routes to spoke PE2.
2. Spoke PE2 installs routes from CE2 into its VPN routing and forwarding (VRF) table.
3. Spoke PE2 checks its VRF export policy, adds the route target community, and announces the routes to hub PE1.
4. Hub PE1 checks its VRF import policy and installs routes that match the import policy into table `bgp.l3vpn.0`.
5. Hub PE1 installs routes from table `bgp.l3vpn.0` into the hub VRF table.
6. Hub PE1 announces routes from the hub VRF table to the hub CE1.

In this configuration example, default route distribution is as follows:

1. Hub CE1 announces a default route to hub PE1.
2. Hub PE1 installs the default route into the hub VRF table.
3. Hub PE1 checks its VRF export policy, adds the route target community and announces the default route to spoke PE2 and PE3.
4. Spoke PE2 and PE3 check their VRF import policy and install the default route into table `bgp.l3vpn.0`.



5. Spoke PE2 and PE3 install the routes from table bgp.l3vpn.0 into their spoke VRF tables.
6. Spoke PE2 and PE3 announce the default route from the spoke VRF table to spoke CE2 and CE3.

The following sections describe how to configure a hub-and-spoke topology with one interface based on the topology illustrated in [Figure 63 on page 789](#):

## Configuring Hub CE1

Configure hub CE1 as follows:

```
[edit routing-options]
static {
    route 0.0.0.0/0 discard;
}
autonomous-system 100;
[edit protocols]
bgp {
    group hub {
        type external;
        export default;
        peer-as 200;
        neighbor 10.49.4.1;
    }
}
[edit policy-statement]
default {
    term 1 {
        from {
            protocol static;
            route-filter 0.0.0.0/0 exact;
        }
        then accept;
    }
    term 2 {
        then reject;
    }
}
```

## Configuring Hub PE1

Configure hub PE1 as follows:

```
[edit]
```



```

routing-instances {
  hub {
    instance-type vrf;
    interface t3-0/0/0 {
      encapsulation frame-relay;
      unit 0 {
        dlci 16;
        family inet {
          address 10.49.4.1/30;
        }
      }
    }
  }
  vrf-target {
    import target:200:100;
    export target:200:101;
  }
  protocols {
    bgp {
      group hub {
        type external;
        peer-as 100;
        as-override;
        neighbor 10.49.4.2;
      }
    }
  }
}

```

## Configuring the P Router

Configure the P Router as follows:

```

[edit]
interfaces {
  t3-0/1/1 {
    unit 0 {
      family inet {
        address 10.49.2.1/30;
      }
      family mpls;
    }
  }
}

```



```

t3-0/1/3 {
  unit 0 {
    family inet {
      address 10.49.0.2/30;
    }
    family mpls;
  }
}
t1-0/2/0 {
  unit 0 {
    family inet {
      address 10.49.1.2/30;
    }
    family mpls;
  }
}
[edit]
protocols {
  ospf {
    area 0.0.0.0 {
      interface t3-0/1/3.0;
      interface t1-0/2/0.0;
      interface t3-0/1/1.0;
      interface lo0.0 {
        passive;
      }
    }
  }
  ldp {
    interface t3-0/1/1.0;
    interface t3-0/1/3.0;
    interface t1-0/2/0.0;
  }
}

```

## Configuring Spoke PE2

Configure spoke PE2 as follows:

```

[edit]
interfaces {
  t3-0/0/0 {

```



```

    unit 0 {
        family inet {
            address 10.49.0.1/30;
        }
        family mpls;
    }
}
t1-0/1/2 {
    unit 0 {
        family inet {
            address 10.49.3.1/30;
        }
    }
}
[edit protocols]
bgp {
    group ibgp {
        type internal;
        local-address 10.255.14.182;
        peer-as 200;
        neighbor 10.255.14.176 {
            family inet-vpn {
                unicast;
            }
        }
    }
}
ospf {
    area 0.0.0.0 {
        interface t3-0/0/0.0;
        interface lo0.0 {
            passive;
        }
    }
}
ldp {
    interface t3-0/0/0.0;
}
[edit]
routing-instances {
    spoke {
        instance-type vrf;
        interface t1-0/1/2.0;
    }
}

```



```

vrf-target {
    import target:200:101;
    export target:200:100;
}
protocols {
    bgp {
        group spoke {
            type external;
            peer-as 100;
            as-override;
            neighbor 10.49.3.2;
        }
    }
}
}
}

```

## Configuring Spoke PE3

Configure spoke PE3 as follows:

```

[edit]
interfaces {
    t3-0/0/0 {
        unit 0 {
            family inet {
                address 10.49.6.1/30;
            }
        }
    }
    t3-0/0/1 {
        unit 0 {
            family inet {
                address 10.49.2.2/30;
            }
            family mpls;
        }
    }
}
[edit protocols]
bgp {
    group ibgp {
        type internal;
    }
}

```



```

    local-address 10.255.14.178;
    peer-as 200;
    neighbor 10.255.14.176 {
        family inet-vpn {
            unicast;
        }
    }
}
}
ospf {
    area 0.0.0.0 {
        interface t3-0/0/1.0;
        interface lo0.0 {
            passive;
        }
    }
}
ldp {
    interface t3-0/0/1.0;
}
[edit]
routing-instances {
    spoke {
        instance-type vrf;
        interface t3-0/0/0.0;
        vrf-target {
            import target:200:101;
            export target:200:100;
        }
        protocols {
            bgp {
                group spoke {
                    type external;
                    peer-as 100;
                    as-override;
                    neighbor 10.49.6.2;
                }
            }
        }
    }
}
}

```



## Configuring Spoke CE2

Configure spoke CE2 as follows:

```
[edit routing-options]
autonomous-system 100;
[edit protocols]
bgp {
  group spoke {
    type external;
    export loopback;
    peer-as 200;
    neighbor 10.49.3.1;
  }
}
```

## Configuring Spoke CE3

Configure spoke CE3 as follows:

```
[edit routing-options]
autonomous-system 100;
[edit protocols]
bgp {
  group spoke {
    type external;
    export loopback;
    peer-as 200;
    neighbor 10.49.6.1;
  }
}
```

In this configuration example, traffic forwarding is as follows between spoke CE2 and hub CE1:

1. Spoke CE2 forwards traffic using the default route learned from spoke PE2 through BGP.

```
0.0.0.0/0          *[BGP/170] 02:24:15, localpref 100
                   AS path: 200 200 I
                   > to 10.49.3.1 via t1-3/0/1.0
```

2. Spoke PE2 performs a route lookup in the spoke VRF table and forwards the traffic to hub PE2 (through the P router—PE2 pushes two labels) using the default route learned through BGP.



```
0.0.0.0/0      *[BGP/170] 01:35:45, localpref 100, from 10.255.14.176
                AS path: 100 I
                > via t3-0/0/1.0, Push 100336, Push 100224(top)
```

3. Hub PE1 does a route lookup in the mpls.0 table for the VPN label **100336**.

```
100336         *[VPN/170] 01:37:03
                > to 10.49.4.2 via t3-0/0/0.0, Pop
```

4. Hub PE1 forwards the traffic out the interface **t3-0/0/0.0** to hub CE1.

In this configuration example, traffic forwarding is as follows between hub CE1 and spoke CE2:

1. Hub CE1 forwards traffic to the hub PE1 using the route learned through BGP.

```
10.49.10.250/32  *[BGP/170] 02:28:46, localpref 100
                  AS path: 200 200 I
                  > to 10.49.4.1 via t3-3/1/0.0
```

2. Hub PE1 does a route lookup in the hub VRF table and forwards the traffic to spoke PE2 (through the P router—PE1 pushes two labels).

```
10.49.10.250/32  *[BGP/170] 01:41:05, localpref 100, from 10.255.14.182
                  AS path: 100 I
                  > via t1-0/1/0.0, Push 100352, Push 100208(top)
```

3. Spoke PE2 does a route lookup in the mpls.0 table for the VPN label **100352**.

```
100352         *[VPN/170] 02:31:39
                > to 10.49.3.2 via t1-0/1/2.0, Pop
```

4. Spoke PE2 forwards the traffic out the interface **t1-0/1/2.0** to spoke CE2.

In this configuration example, traffic forwarding is as follows between spoke CE2 and spoke CE3:

1. Spoke CE2 forwards traffic using the default route learned from spoke PE2 through BGP.



```
0.0.0.0/0      *[BGP/170] 02:24:15, localpref 100
                AS path: 200 200 I
                > to 10.49.3.1 via t1-3/0/1.0
```

2. Spoke PE2 does a route lookup in the spoke VRF table and forwards the traffic to hub PE1 (through the P router—PE2 pushes two labels) using the default route learned through BGP.

```
0.0.0.0/0      *[BGP/170] 01:35:45, localpref 100, from 10.255.14.176
                AS path: 100 I
                > via t3-0/0/1.0, Push 100336, Push 100224(top)
```

3. Hub PE1 does a route lookup in the mpls.0 table for the VPN label **100336**.

```
100336         *[VPN/170] 01:37:03
                > to 10.49.4.2 via t3-0/0/0.0, Pop
```

4. Hub PE1 forwards the traffic out the interface **t3-0/0/0.0** to the hub CE1.
5. Hub CE1 forwards the traffic to hub PE1 using the router learned through BGP.

```
10.49.10.253/32 *[BGP/170] 02:40:03, localpref 100
                 AS path: 200 200 I
                 > to 10.49.4.1 via t3-3/1/0.0
```

6. Hub PE1 does a route lookup in the hub VRF table and forwards the traffic to spoke PE3 (through the P router—PE1 pushes two labels).

```
10.49.10.253/32 *[BGP/170] 01:41:05, localpref 100, from 10.255.14.178
                 AS path: 100 I
                 > via t1-0/1/0.0, Push 100128, Push 100192(top)
```

7. Spoke PE3 does a route lookup in the mpls.0 table for VPN label **100128**.

```
100128         *[VPN/170] 02:41:30
                > to 10.49.6.2 via t3-0/0/0.0, Pop
```

8. Spoke PE3 forwards the traffic out the interface **t3-0/0/0.0** to spoke CE3.

If egress features are needed on the hub PE that require an IP forwarding lookup on the hub VRF routing table, see [“Enabling Egress Features on the Hub PE Router” on page 799](#).



## Enabling Egress Features on the Hub PE Router

This example is provided in conjunction with [“Configuring Hub-and-Spoke VPN Topologies: One Interface” on page 788](#). This example also uses the topology illustrated in [Figure 63 on page 789](#).

If egress features are needed on the hub PE that require an IP forwarding lookup on the hub VRF routing table, the configuration detailed in [“Configuring Hub-and-Spoke VPN Topologies: One Interface” on page 788](#) will not work. Applying the **vrf-table-label** statement on the hub routing instance forces traffic from a remote spoke PE to be forwarded to the hub PE and forces an IP lookup to be performed. Because specific spoke routes are in the hub VRF table, traffic will be forwarded to a spoke PE without going through the hub CE.

The hub PE advertises the default route as follows, using VPN label 1028:

```
hub.inet.0: 7 destinations, 7 routes (7 active, 0 holddown, 0 hidden)
* 0.0.0.0/0 (1 entry, 1 announced)
  BGP group ibgp type Internal
    Route Distinguisher: 10.255.14.176:2
    VPN Label: 1028
    Nexthop: Self
    Localpref: 100
    AS path: 100 I
    Communities: target:200:101
```

Incoming traffic is forwarded using VPN label 1028. The mpls.0 table shows that an IP lookup in the table hub.inet.0 is required:

```
1028          *[VPN/0] 00:00:27
              to table hub.inet.0, Pop
```

However, the hub VRF table hub.inet.0 contains specific spoke routes:

```
10.49.10.250/32  *[BGP/170] 00:00:05, localpref 100, from 10.255.14.182
                  AS path: 100 I
                  > via t1-0/1/0.0, Push 100352, Push 100208(top)
10.49.10.253/32  *[BGP/170] 00:00:05, localpref 100, from 10.255.14.178
                  AS path: 100 I
                  > via t1-0/1/0.0, Push 100128, Push 100192(top)
```

Because of this, traffic is forwarded directly to the spoke PEs without going through the hub CE. To prevent this, you must configure a secondary routing instance for downstream traffic in the hub PE1.



## Configuring Hub PE1

Configure hub PE1 as follows:

```
[edit]
routing-instances {
  hub {
    instance-type vrf;
    interface t3-0/0/0.0;
    vrf-target {
      import target:200:100;
      export target:200:101;
    }
    no-vrf-advertise;
    routing-options {
      auto-export;
    }
    protocols {
      bgp {
        group hub {
          type external;
          peer-as 100;
          as-override;
          neighbor 10.49.4.2;
        }
      }
    }
  }
  hub-downstream {
    instance-type vrf;
    vrf-target target:200:101;
    vrf-table-label;
    routing-options {
      auto-export;
    }
  }
}
```

When the **no-vrf-advertise** statement is used at the **[edit routing-instances hub]** hierarchy level, no routing table groups or VRF export policies are required. The **no-vrf-advertise** statement configures the hub PE not to advertise VPN routes from the primary routing-instance **hub**. These routes are instead advertised from the secondary routing instance **hub\_downstream**. See *Junos OS Routing Protocols Library* for more information about the **no-vrf-advertise** statement.

The **auto-export** statement at the **[edit routing-instances hub-downstream routing-options]** hierarchy level identifies routes exported from the hub instance to the hub-downstream instance by looking at the



route targets defined for each routing instance. See *Junos OS Routing Protocols Library* for more information about using the **auto-export** statement. See [“Configuring Overlapping VPNs Using Automatic Route Export” on page 837](#) for more examples of export policy.

With this configuration on hub PE, spoke-to-spoke CE traffic goes through the hub CE and permits egress features (such as filtering) to be enabled on the hub PE.

In this configuration example, traffic forwarding is as follows between spoke CE2 and spoke CE3:

1. Spoke CE2 forwards traffic using the default route learned from spoke PE2 through BGP.

```
0.0.0.0/0          *[BGP/170] 02:24:15, localpref 100
                   AS path: 200 200 I
                   > to 10.49.3.1 via t1-3/0/1.0
```

2. Spoke PE2 does a route lookup in the spoke VRF table and forwards the traffic to hub PE1 (through the P router—PE2 pushes two labels) using the default route learned through BGP.

```
spoke.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0.0.0.0/0          *[BGP/170] 00:00:09, localpref 100, from 10.255.14.176
                   AS path: 100 I
                   > via t3-0/0/0.0, Push 1029, Push 100224(top)
```

3. Hub PE1 does a route lookup in the mpls.0 table for the VPN label **1029**.

```
mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
1029               *[VPN/0] 00:11:49
                   to table hub_downstream.inet.0, Pop
```

The VPN label **1029** is advertised because:

- a. The **vrf-table-label** statement is applied at the **[edit routing-instances hub\_downstream]** hierarchy level in the hub PE1 configuration.
- b. The **no-vrf-advertise** statement is applied at the **[edit routing-instances hub]** hierarchy level, instructing the router to advertise the route from the secondary table.

Therefore, IP lookups are performed in the `hub_downstream.inet.0` table, not in the `hub.inet.0` table.

Issue the **show route advertising-protocol** command on the hub PE to a spoke PE to verify the VPN label **1029** advertisement:



```
user@host> show route advertising-protocol
```

```

hub_downstream.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0
hidden)
* 0.0.0.0/0 (1 entry, 1 announced)
  BGP group ibgp type Internal
    Route Distinguisher: 10.255.14.176:3
    VPN Label: 1029
    Nexthop: Self
    Localpref: 100
    AS path: 100 I
    Communities: target:200:101

```

4. Hub PE1 performs an IP lookup in the **hub\_downstream.inet.0** table and forwards the traffic out interface **t3-0/0/0.0** to hub CE1.

```

hub_downstream.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0
hidden)
0.0.0.0/0 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
            Next-hop reference count: 4
            Source: 10.49.4.2
            Next hop: 10.49.4.2 via t3-0/0/0.0, selected
            State: <Secondary Active Ext>
            Peer AS: 100
            Age: 3:03
            Task: BGP_100.10.49.4.2+1707
            Announcement bits (2): 0-KRT 2-BGP.0.0.0.0+179
            AS path: 100 I
            Communities: target:200:101
            Localpref: 100
            Router ID: 10.49.10.251
            Primary Routing Table hub.inet.0

```

The primary routing table is **hub.inet.0**, indicating that this route was exported from table **hub.inet.0** into this **hub\_downstream.inet.0** table as a result of the **no-vrf-advertise** statement at the **[edit routing-instances hub]** hierarchy level and the **auto-export** statement at the **[edit routing-instances hub-downstream routing-options]** hierarchy level in the hub PE1 configuration.

5. Hub CE1 forwards the traffic back to hub PE1 using the router learned through BGP.



```
10.49.10.253/32    *[BGP/170] 02:40:03, localpref 100
                  AS path: 200 200 I
                  > to 10.49.4.1 via t3-3/1/0.0
```

6. Hub PE1 performs a route lookup in the hub VRF table and forwards the traffic to spoke PE3 (through the P router—PE1 pushes two labels).

```
10.49.10.253/32    *[BGP/170] 01:41:05, localpref 100, from 10.255.14.178
                  AS path: 100 I
                  > via t1-0/1/0.0, Push 100128, Push 100192(top)
```

7. Spoke PE3 performs a route lookup in the mpls.0 table for VPN label **100128**.

```
100128            *[VPN/170] 02:41:30
                  > to 10.49.6.2 via t3-0/0/0.0, Pop
```

8. Spoke PE3 forwards traffic out interface **t3-0/0/0.0** to spoke CE3.

## Configuring Hub-and-Spoke VPN Topologies: Two Interfaces

### IN THIS SECTION

- Enabling an IGP on the Hub-and-Spoke PE Routers | **806**
- Configuring LDP on the Hub-and-Spoke PE Routers | **806**
- Configuring IBGP on the PE Routers | **807**
- Configuring VPN Routing Instances on the Hub-and-Spoke PE Routers | **808**
- Configuring VPN Policy on the PE Routers | **811**
- Hub-and-Spoke VPN Configuration Summarized by Router | **815**




Use a two-interface configuration to propagate routes from spoke to spoke.

The example in this section configures a hub-and-spoke topology with two interfaces using the following components (see [Figure 64 on page 804](#)):

- One hub PE router (Router D).
- One hub CE router connected to the hub PE router. For this hub-and-spoke VPN topology to function properly, there must be two interfaces connecting the hub PE router to the hub CE router, and each interface must have its own VRF table on the PE router:
  - The first interface (here, interface ge-0/0/0.0) is used to announce spoke routes to the hub CE router. The VRF table associated with this interface contains the routes being announced by the spoke PE routers to the hub CE router.
  - The second interface (here, interface ge-0/0/1.0) is used to receive route announcements from the hub CE that are destined for the hub-and-spoke routers. The VRF table associated with this interface contains the routes announced by the hub CE router to the spoke PE routers. For this example, two separate physical interfaces are used. It would also work if you were to configure two separate logical interfaces sharing the same physical interface between the hub PE router and the hub CE router.
- Two spoke PE routers (Router E and Router F).
- Two spoke CE routers (CE1 and CE2), one connected to each spoke PE router.
- LDP as the signaling protocol.

**Figure 64: Example of a Hub-and-Spoke VPN Topology with Two Interfaces**

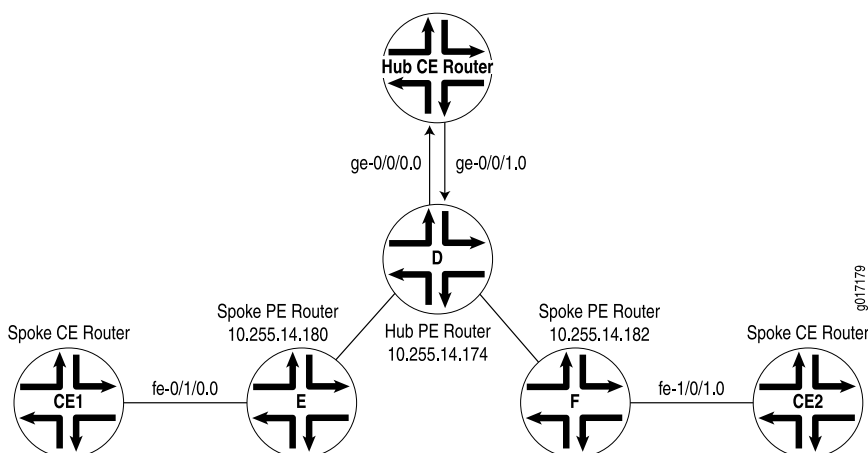

In this configuration, route distribution from spoke CE Router CE1 occurs as follows:

1. Spoke Router CE1 announces its routes to spoke PE Router E.
2. Router E installs the routes from CE1 into its VRF table.




3. After checking its VRF export policy, Router E adds the spoke target community to the routes from Router CE1 that passed the policy and announces them to the hub PE router, Router D.
4. Router D checks the VRF import policy associated with interface ge-0/0/0.0 and places all routes from spoke PE routers that match the policy into its bgp.l3vpn routing table. (Any routes that do not match are discarded.)
5. Router D checks its VRF import policy associated with interface ge-0/0/0.0 and installs all routes that match into its spoke VRF table. The routes are installed with the spoke target community.
6. Router D announces routes to the hub CE over interface ge-0/0/0.
7. The hub CE router announces the routes back to the hub PE Router D over the second interface to the hub router, interface ge-0/0/1.
8. The hub PE router installs the routes learned from the hub CE router into its hub VRF table, which is associated with interface ge-0/0/1.
9. The hub PE router checks the VRF export policy associated with interface ge-0/0/1.0 and announces all routes that match to all spokes after adding the hub target community.

Figure 65 on page 805 illustrates how routes are distributed from this spoke router to the other spoke CE router, Router CE2. The same path is followed if you issue a **traceroute** command from Router CE1 to Router CE2.

The final section in this example, “[Hub-and-Spoke VPN Configuration Summarized by Router](#)” on page 815, consolidates the statements needed to configure VPN functionality for each of the service provider routers shown in [Figure 64 on page 804](#).

**Figure 65: Route Distribution Between Two Spoke Routers**

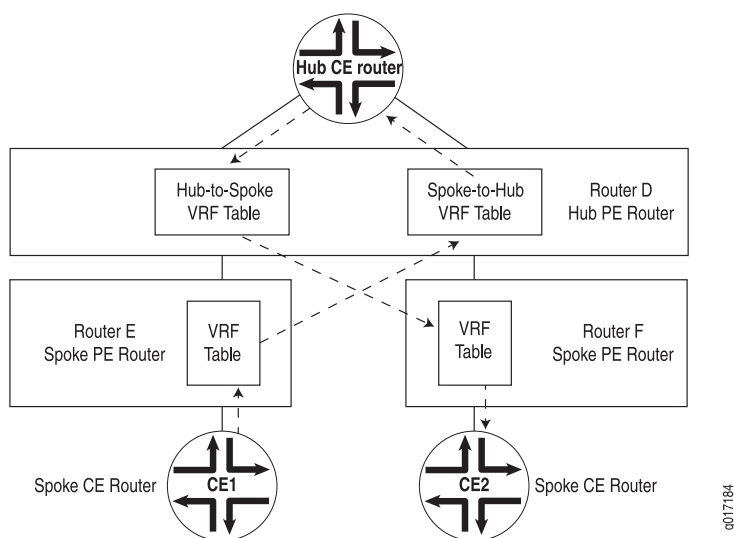



The following sections explain how to configure the VPN functionality for a hub-and-spoke topology on the hub-and-spoke PE routers. The CE routers do not have any information about the VPN, so you configure them normally.

## Enabling an IGP on the Hub-and-Spoke PE Routers

To allow the hub-and-spoke PE routers to exchange routing information, you must configure an IGP on all these routers or you must configure static routes. You configure the IGP on the master instance of the routing protocol process (rpd) (that is, at the **[edit protocols]** hierarchy level), not within the routing instance (that is, not at the **[edit routing-instances]** hierarchy level).

You configure the IGP in the standard way. This configuration example does not include this portion of the configuration.

In the route distribution in a hub-and-spoke topology, if the protocol used between the CE and PE routers at the hub site is BGP, the hub CE router announces all routes received from the hub PE router and the spoke routers back to the hub PE router and all the spoke routers. This means that the hub-and-spoke PE routers receive routes that contain their AS number. Normally, when a route contains this information, it indicates that a routing loop has occurred and the router rejects the routes. However, for the VPN configuration to work, the hub PE router and the spoke routers must accept these routes. To enable this, include the **loops** option when configuring the AS at the **[edit routing-options]** hierarchy level on the hub PE router and all the spoke routers. For this example configuration, you specify a value of 1. You can specify a number from 0 through 10.

```
[edit routing-options]
autonomous-system as-number loops 1;
```

## Configuring LDP on the Hub-and-Spoke PE Routers

Configure LDP on the interfaces between the hub-and-spoke PE routers that participate in the VPN.

On hub PE Router D, configure LDP:

```
[edit protocols]
ldp {
  interface so-1/0/0.0;
  interface t3-1/1/0.0;
}
```

On spoke PE Router E, configure LDP:

```
[edit protocols]
```



```
ldp {
  interface fe-0/1/2.0;
}
```

On spoke PE router Router F, configure LDP:

```
[edit protocols]
ldp {
  interface fe-1/0/0.0;
}
```

## Configuring IBGP on the PE Routers

On the hub-and-spoke PE routers, configure an IBGP session with the following properties:

- VPN family—To indicate that the IBGP session is for the VPN, include the **family inet-vpn** statement.
- Loopback address—Include the **local-address** statement, specifying the local PE router's loopback address. The IBGP session for VPNs runs through the loopback address. You must also configure the **lo0** interface at the **[edit interfaces]** hierarchy level. The example does not include this part of the router's configuration.
- Neighbor address—Include the **neighbor** statement. On the hub router, specify the IP address of each spoke PE router, and on the spoke router, specify the address of the hub PE router.

For the hub router, you configure an IBGP session with each spoke, and for each spoke router, you configure an IBGP session with the hub. There are no IBGP sessions between the two spoke routers.

On hub Router D, configure IBGP. The first **neighbor** statement configures an IBGP session to spoke Router E, and the second configures a session to spoke Router F.

```
[edit protocols]
bgp {
  group Hub-to-Spokes {
    type internal;
    local-address 10.255.14.174;
    family inet-vpn {
      unicast;
    }
    neighbor 10.255.14.180;
    neighbor 10.255.14.182;
  }
}
```

On spoke Router E, configure an IBGP session to the hub router:



```
[edit protocols]
bgp {
  group Spoke-E-to-Hub {
    type internal;
    local-address 10.255.14.180;
    neighbor 10.255.14.174 {
      family inet-vpn {
        unicast;
      }
    }
  }
}
```

On spoke Router F, configure an IBGP session to the hub router:

```
[edit protocols]
bgp {
  group Spoke-F-to-Hub {
    type internal;
    local-address 10.255.14.182;
    neighbor 10.255.14.174 {
      family inet-vpn {
        unicast;
      }
    }
  }
}
```

## Configuring VPN Routing Instances on the Hub-and-Spoke PE Routers

For the hub PE router to be able to distinguish between packets going to and coming from the spoke PE routers, you must configure it with two routing instances:

- One routing instance (in this example, **Spokes-to-Hub-CE**) is associated with the interface that carries packets from the hub PE router to the hub CE router (in this example, interface **ge-0/0/0.0**). Its VRF table contains the routes being announced by the spoke PE routers and the hub PE router to the hub CE router.
- The second routing instance (in this example, **Hub-CE-to-Spokes**) is associated with the interface that carries packets from the hub CE router to the hub PE router (in this example, interface **ge-0/0/1.0**). Its VRF table contains the routes being announced from the hub CE router to the hub-and-spoke PE routers.

On each spoke router, you must configure one routing instance.



You must define the following in the routing instance:

- Route distinguisher, which is used to distinguish the addresses in one VPN from those in another VPN.
- Instance type of **vrf**, which creates the VRF table on the PE router.
- Interfaces that are part of the VPN and that connect the PE routers to their CE routers.
- VRF import and export policies. Both import policies must include reference to a community. Otherwise, when you try to commit the configuration, the commit fails. (The exception to this is if the import policy contains only a **then reject** statement.) In the VRF export policy, spoke PE routers attach the spoke target community.
- Routing between the PE and CE routers, which is required for the PE router to distribute VPN-related routes to and from connected CE routers. You can configure a routing protocol—BGP, OSPF, or RIP—or you can configure static routing.

For a hub-and-spoke topology, you must configure different policies in each routing instance on the hub CE router. For the routing instance associated with the interface that carries packets from the hub PE router to the hub CE router (in this example, **Spokes-to-Hub-CE**), the import policy must accept all routes received on the IBGP session between the hub-and-spoke PE routers, and the export policy must reject all routes received from the hub CE router. For the routing instance associated with the interface that carries packets from the hub CE router to the hub PE router (in this example, **Hub-CE-to-Spokes**), the import policy must reject all routes received from the spoke PE routers, and the export policy must export to all the spoke routers.

On hub PE Router D, configure the following routing instances. Router D uses OSPF to distribute routes to and from the hub CE router.

```
[edit]
routing-instance {
  Spokes-to-Hub-CE {
    instance-type vrf;
    interface ge-0/0/0.0;
    route-distinguisher 10.255.1.174:65535;
    vrf-import spoke;
    vrf-export null;
    protocols {
      ospf {
        domain-id disable;
        export redistribute-vpn;
        domain-vpn-tag 0;
        area 0.0.0.0 {
          interface ge-0/0/0;
        }
      }
    }
  }
}
```



```

}
Hub-CE-to-Spokes {
  instance-type vrf;
  interface ge-0/0/1.0;
  route-distinguisher 10.255.1.174:65534;
  vrf-import null;
  vrf-export hub;
  protocols {
    ospf {
      export redistribute-vpn;
      area 0.0.0.0 {
        interface ge-0/0/1.0;
      }
    }
  }
}
}

```

On spoke PE Router E, configure the following routing instances. Router E uses OSPF to distribute routes to and from spoke CE Router CE1.

```

[edit]
routing-instance {
  Spoke-E-to-Hub {
    instance-type vrf;
    interface fe-0/1/0.0;
    route-distinguisher 10.255.14.80:65035;
    vrf-import hub;
    vrf-export spoke;
    protocols {
      ospf {
        export redistribute-vpn;
        area 0.0.0.0 {
          interface fe-0/1/0.0;
        }
      }
    }
  }
}
}

```

On spoke PE Router F, configure the following routing instances. Router F uses OSPF to distribute routes to and from spoke CE Router CE2.



```
[edit]
routing-instance {
  Spoke-F-to-Hub {
    instance-type vrf;
    interface fe-1/0/1.0;
    route-distinguisher 10.255.14.182:65135;
    vrf-import hub;
    vrf-export spoke;
    protocols {
      ospf {
        export redistribute-vpn;
        area 0.0.0.0 {
          interface fe-1/0/1.0;
        }
      }
    }
  }
}
```

## Configuring VPN Policy on the PE Routers

You must configure VPN import and export policies on each of the hub-and-spoke PE routers so that they install the appropriate routes in the VRF tables, which they use to forward packets within each VPN.

On the spoke routers, you define policies to exchange routes with the hub router.

On the hub router, you define policies to accept routes from the spoke PE routers and distribute them to the hub CE router, and vice versa. The hub PE router has two VRF tables:

- Spoke-to-hub VRF table—Handles routes received from spoke routers and announces these routes to the hub CE router. For this VRF table, the import policy must check that the spoke target name is present and that the route was received from the IBGP session between the hub PE and the spoke PE routers. This VRF table must not export any routes, so its export policy should reject everything.
- Hub-to-spoke VRF table—Handles routes received from the hub CE router and announces them to the spoke routers. For this VRF table, the export policy must add the hub target community. This VRF table must not import any routes, so its import policy should reject everything.

In the VPN policy, you also configure the VPN target communities.

On hub PE Router D, configure the following policies to apply to the VRF tables:



- **spoke**—Accepts routes received from the IBGP session between it and the spoke PE routers that contain the community target **spoke**, and rejects all other routes.
- **hub**—Adds the community target hub to all routes received from OSPF (that is, from the session between it and the hub CE router). It rejects all other routes.
- **null**—Rejects all routes.
- **redistribute-vpn**—Redistributes OSPF routes to neighbors within the routing instance.

```
[edit]
policy-options {
  policy-statement spoke {
    term a {
      from {
        protocol bgp;
        community spoke;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
  policy-statement hub {
    term a {
      from protocol ospf;
      then {
        community add hub;
        accept;
      }
    }
    term b {
      then reject;
    }
  }
  policy-statement null {
    then reject;
  }
  policy-statement redistribute-vpn {
    term a {
      from protocol bgp;
      then accept;
    }
    term b {
      then reject;
    }
  }
}
```



```

    }
  }
  community hub members target:65535:1;
  community spoke members target:65535:2;
}

```

To apply the VRF policies on Router D, include the **vrf-export** and **vrf-import** statements when you configure the routing instances:

```

[edit]
routing-instance {
  Spokes-to-Hub-CE {
    vrf-import spoke;
    vrf-export null;
  }
  Hub-CE-to-Spokes {
    vrf-import null;
    vrf-export hub;
  }
}

```

On spoke PE Router E and Router F, configure the following policies to apply to the VRF tables:

- **hub**—Accepts routes received from the IBGP session between it and the hub PE routers that contain the community target **hub**, and rejects all other routes.
- **spoke**—Adds the community target spoke to all routes received from OSPF (that is, from the session between it and the hub CE router) rejects all other routes.
- **redistribute-vpn**—Redistributes OSPF routes to neighbors within the routing instance.

On spoke PE Router E and Router F, configure the following VPN import and export policies:

```

[edit]
policy-options {
  policy-statement hub {
    term a {
      from {
        protocol bgp;
        community hub;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
}

```



```

    }
  }
  policy-statement spoke {
    term a {
      from protocol ospf;
      then {
        community add spoke;
        accept;
      }
    }
    term b {
      then reject;
    }
  }
  policy-statement redistribute-vpn {
    term a {
      from protocol bgp;
      then accept;
    }
    term b {
      then reject;
    }
  }
  community hub members target:65535:1;
  community spoke members target 65535:2;
}

```

To apply the VRF policies on the spoke routers, include the **vrf-export** and **vrf-import** statements when you configure the routing instances:

```

[edit]
routing-instance {
  Spoke-E-to-Hub {
    vrf-import hub;
    vrf-export spoke;
  }
}
[edit]
routing-instance {
  Spoke-F-to-Hub {
    vrf-import hub;
    vrf-export spoke;
  }
}

```



## Hub-and-Spoke VPN Configuration Summarized by Router

### *Router D (Hub PE Router)*

#### Routing Instance for Distributing Spoke Routes to Hub CE

```
Spokes-to-Hub-CE {
  instance-type vrf;
  interface fe-0/0/0.0;
  route-distinguisher 10.255.1.174:65535;
  vrf-import spoke;
  vrf-export null;
}
```

#### Instance Routing Protocol

```
protocols {
  ospf {
    domain-id disable;
    domain-vpn-tag 0;
    export redistribute-vpn;
    area 0.0.0.0 {
      interface ge-0/0/0.0;
    }
  }
}
```

#### Routing Instance for Distributing Hub CE Routes to Spokes

```
Hub-CE-to-Spokes {
  instance-type vrf;
  interface ge-0/0/1.0;
  route-distinguisher 10.255.1.174:65534;
  vrf-import null;
  vrf-export hub;
}
```

#### Routing Instance Routing Protocols



```

protocols {
  ospf {
    export redistribute-vpn;
    area 0.0.0.0 {
      interface ge-0/0/1.0;
    }
  }
}

```

### Routing Options (Master Instance)

```

routing-options {
  autonomous-system 1 loops 1;
}

```

### Protocols (Master Instance)

```

protocols {
}

```

### Enable LDP

```

ldp {
  interface so-1/0/0.0;
  interface t3-1/1/0.0;
}

```

### Configure IBGP

```

bgp {
  group Hub-to-Spokes {
    type internal;

```



```

    local-address 10.255.14.174;
    family inet-vpn {
        unicast;
    }
    neighbor 10.255.14.180;
    neighbor 10.255.14.182;
}
}

```

### Configure VPN Policy

```

policy-options {
    policy-statement spoke {
        term a {
            from {
                protocol bgp;
                community spoke;
            }
            then accept;
        }
        term b {
            then reject;
        }
    }
    policy-statement hub {
        term a {
            from protocol ospf;
            then {
                community add hub;
                accept;
            }
        }
        term b {
            then reject;
        }
    }
    policy-statement null {
        then reject;
    }
    policy-statement redistribute-vpn {

```



```

    term a {
        from protocol bgp;
        then accept;
    }
    term b {
        then reject;
    }
}
community hub members target:65535:1;
community spoke members target:65535:2;
}

```

### ***Router E (Spoke PE Router)***

#### **Routing Instance**

```

routing-instance {
    Spoke-E-to-Hub {
        instance-type vrf;
        interface fe-0/1/0.0;
        route-distinguisher 10.255.14.80:65035;
        vrf-import hub;
        vrf-export spoke;
    }
}

```

#### **Instance Routing Protocol**

```

protocols {
    ospf {
        export redistribute-vpn;
        area 0.0.0.0 {
            interface fe-0/1/0.0;
        }
    }
}

```

#### **Routing Options (Master Instance)**



```
routing-options {  
    autonomous-system 1 loops 1;  
}
```

### Protocols (Master Instance)

```
protocols {  
}
```

### Enable LDP

```
ldp {  
    interface fe-0/1/2.0;  
}
```

### Configure IBGP

```
bgp {  
    group Spoke-E-to-Hub {  
        type internal;  
        local-address 10.255.14.180;  
        neighbor 10.255.14.174 {  
            family inet-vpn {  
                unicast;  
            }  
        }  
    }  
}
```

### Configure VPN Policy

```
policy-options {
```



```

policy-statement hub {
  term a {
    from {
      protocol bgp;
      community hub;
    }
    then accept;
  }
  term b {
    then reject;
  }
}
policy-statement spoke {
  term a {
    from protocol ospf;
    then {
      community add spoke;
      accept;
    }
  }
  term b {
    then reject;
  }
}
policy-statement redistribute-vpn {
  term a {
    from protocol bgp;
    then accept;
  }
  term b {
    then reject;
  }
}
community hub members target:65535:1;
community spoke members target:65535:2;
}

```

***Router F (Spoke PE Router)***

**Routing Instance**



```

routing-instance {
  Spoke-F-to-Hub {
    instance-type vrf;
    interface fe-1/0/1.0;
    route-distinguisher 10.255.14.182:65135;
    vrf-import hub;
    vrf-export spoke;
  }
}

```

### Instance Routing Protocol

```

protocols {
  ospf {
    export redistribute-vpn;
    area 0.0.0.0 {
      interface fe-1/0/1.0;
    }
  }
}

```

### Routing Options (Master Instance)

```

routing-options {
  autonomous-system 1 loops 1;
}

```

### Protocols (Master Instance)

```

protocols {
}

```

### Enable LDP



```
ldp {
  interface fe-1/0/0.0;
}
```

### Configure IBGP

```
bgp {
  group Spoke-F-to-Hub {
    type internal;
    local-address 10.255.14.182;
    neighbor 10.255.14.174 {
      family inet-vpn {
        unicast;
      }
    }
  }
}
```

### Configure VPN Policy

```
policy-options {
  policy-statement hub {
    term a {
      from {
        protocol bgp;
        community hub;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
  policy-statement spoke {
    term a {
      from protocol ospf;
      then {
```



```
        community add spoke;
        accept;
    }
}
term b {
    then reject;
}
}
policy-statement redistribute-vpn {
    term a {
        from {
            protocol bgp;
        }
        then accept;
    }
    term b {
        then reject;
    }
}
community hub members target:65535:1;
community spoke members target:65535:2;
}
```

## Overlapping VPNs

### IN THIS SECTION

- [Configuring Overlapping VPNs Using Routing Table Groups | 824](#)
- [Configuring Overlapping VPNs Using Automatic Route Export | 837](#)



## Configuring Overlapping VPNs Using Routing Table Groups

### IN THIS SECTION

- [Configuring Routing Table Groups | 825](#)
- [Configuring Static Routes Between the PE and CE Routers | 826](#)
- [Configuring BGP Between the PE and CE Routers | 832](#)
- [Configuring OSPF Between the PE and CE Routers | 834](#)
- [Configuring Static, BGP, and OSPF Routes Between PE and CE Routers | 835](#)

In Layer 3 VPNs, a CE router is often a member of more than one VPN. This example illustrates how to configure PE routers that support CE routers that support multiple VPNs. Support for this type of configuration uses a Junos OS feature called routing table groups (sometimes also called routing information base [RIB] groups), which allows a route to be installed into several routing tables. A routing table group is a list of routing tables into which the protocol should install its routes.

You define routing table groups at the **[edit routing-options]** hierarchy level for the default instance. You cannot configure routing table groups at the **[edit routing-instances routing-options]** hierarchy level; doing so results in a commit error.


After you define a routing table group, it can be used by multiple protocols. You can also apply routing table groups to static routing. The configuration examples in this section include both types of configurations.

[Figure 66 on page 825](#) illustrates the topology for the configuration example in this section. The configurations in this section illustrate local connectivity between CE routers connected to the same PE router. If Router PE1 were connected only to Router CE2 (VPN AB), there would be no need for any extra configuration. The configuration statements in the sections that follow enable VPN AB Router CE2 to communicate with VPN A Router CE1 and VPN B Router CE3, which are directly connected to Router PE1. VPN routes that originate from the remote PE routers (the PE2 router in this case) are placed in a global Layer 3 VPN routing table (bgp.l3vpn.inet.0), and routes with appropriate route targets are imported into the routing tables as dictated by the VRF import policy configuration. The goal is to be able to choose routes from individual VPN routing tables that are locally populated.

Router PE1 is where all the filtering and configuration modification takes place. Therefore only VPN configurations for PE1 are shown. The CE routers do not have any information about the VPN, so you can configure them normally.



Figure 66: Example of an Overlapping VPN Topology

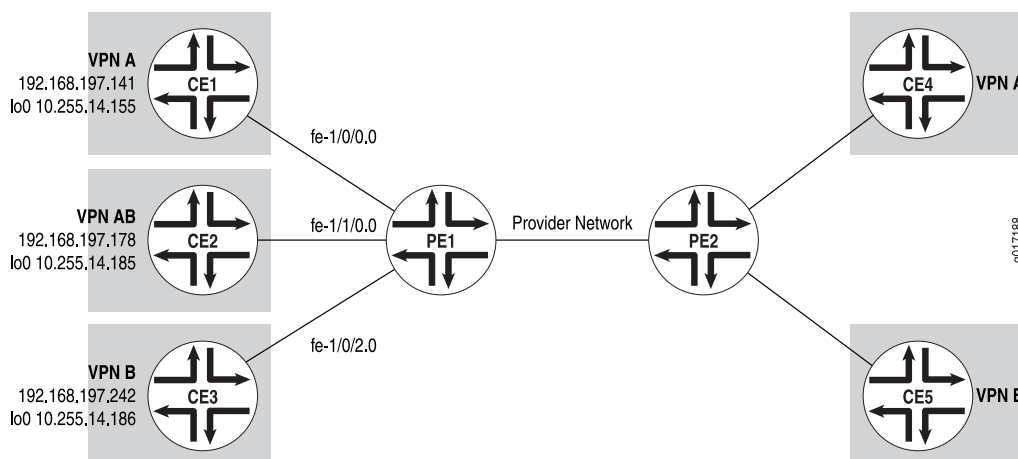

The following sections explain several ways to configure overlapping VPNs.

The following sections illustrate different scenarios for configuring overlapping VPNs, depending on the routing protocol used between the PE and CE routers. For all of these examples, you need to configure routing table groups.

### Configuring Routing Table Groups

In this example, routing table groups are common in the four configuration scenarios. The routing table groups are used to install routes (including interface, static, OSPF, and BGP routes) into several routing tables for the default and other instances. In the routing table group definition, the first routing table is called the primary routing table. (Normally, the primary routing table is the table into which the route would be installed if you did not configure routing table groups. The other routing tables are called secondary routing tables.)

The routing table groups in this configuration install routes as follows:

- **vpna-vpnab** installs routes into routing tables VPN-A.inet.0 and VPN-AB.inet.0.
- **vpnb-vpnab** installs routes into routing tables VPN-B.inet.0 and VPN-AB.inet.0.
- **vpnab-vpna\_and\_vpnab** installs routes into routing tables VPN-AB.inet.0, VPN-A.inet.0, and VPN-B.inet.0.

Configure the routing table groups:

```
[edit]
routing-options {
  rib-groups {
    vpna-vpnab {
      import-rib [ VPN-A.inet.0 VPN-AB.inet.0 ];
    }
  }
}
```



```

vpnb-vpnab {
    import-rib [ VPN-B.inet.0 VPN-AB.inet.0 ];
}
vpnab-vpna_and_vpnab {
    import-rib [ VPN-AB.inet.0 VPN-A.inet.0 VPN-B.inet.0 ];
}
}
}

```

## Configuring Static Routes Between the PE and CE Routers

### IN THIS SECTION

- [Configuring the Routing Instance for VPN A | 826](#)
- [Configuring the Routing Instance for VPN AB | 827](#)
- [Configuring the Routing Instance for VPN B | 828](#)
- [Configuring VPN Policy | 828](#)

To configure static routing between the PE1 router and the CE1, CE2, and CE3 routers, you must configure routing instances for VPN A, VPN B, and VPN AB (you configure static routing under each instance):

### ***Configuring the Routing Instance for VPN A***

On Router PE1, configure VPN A:

```

[edit]
routing-instances {
    VPN-A {
        instance-type vrf;
        interface fe-1/0/0.0;
        route-distinguisher 10.255.14.175:3;
        vrf-import vpna-import;
        vrf-export vpna-export;
        routing-options {
            interface-routes {
                rib-group inet vpna-vpnab;
            }
        }
        static {
            route 10.255.14.155/32 next-hop 192.168.197.141;
        }
    }
}

```



```

        route 10.255.14.185/32 next-hop 192.168.197.178;
    }
}
}
}

```

The **interface-routes** statement installs VPN A's interface routes into the routing tables defined in the routing table group **vpnab-vpnab**.

The **static** statement configures the static routes that are installed in the VPN-A.inet.0 routing table. The first static route is for Router CE1 (VPN A) and the second is for Router CE2 (in VPN AB).

Next hop **192.168.197.178** is not in VPN A. Route **10.255.14.185/32** cannot be installed in VPN-A.inet.0 unless interface routes from routing instance VPN AB are installed in this routing table. Including the **interface-routes** statements in the VPN AB configuration provides this next hop. Similarly, including the **interface-routes** statement in the VPN AB configuration installs **192.168.197.141** into VPN-AB.inet.0.

#### **Configuring the Routing Instance for VPN AB**

On Router PE1, configure VPN AB:

```

[edit]
routing instances {
  VPN-AB {
    instance-type vrf;
    interface fe-1/1/0.0;
    route-distinguisher 10.255.14.175:9;
    vrf-import vpnab-import;
    vrf-export vpnab-export;
    routing-options {
      interface-routes {
        rib-group vpnab-vpna_and_vpnab;
      }
      static {
        route 10.255.14.185/32 next-hop 192.168.197.178;
        route 10.255.14.155/32 next-hop 192.168.197.141;
        route 10.255.14.186/32 next-hop 192.168.197.242;
      }
    }
  }
}
}

```

In this configuration, the following static routes are installed in the VPN-AB.inet.0 routing table:

- **10.255.14.185/32** is for Router CE2 (in VPN AB)



- **10.255.14.155/32** is for Router CE1 (in VPN A)
- **10.255.14.186/32** is for Router CE3 (in VPN B)

Next hops **192.168.197.141** and **192.168.197.242** do not belong to VPN AB. Routes **10.255.14.155/32** and **10.255.14.186/32** cannot be installed in VPN-AB.inet.0 unless interface routes from VPN A and VPN B are installed in this routing table. The interface route configurations in VPN A and VPN B routing instances provide these next hops.

### **Configuring the Routing Instance for VPN B**

On Router PE1, configure VPN B:

```
[edit]
routing instances {
  VPN-B {
    instance-type vrf;
    interface fe-1/0/2.0;
    route-distinguisher 10.255.14.175:10;
    vrf-import vpnb-import;
    vrf-export vpnb-export;
    routing-options {
      interface-routes {
        rib-group inet vpnb-vpnab;
      }
      static {
        route 10.255.14.186/32 next-hop 192.168.197.242;
        route 10.255.14.185/32 next-hop 192.168.197.178;
      }
    }
  }
}
```

When you configure the routing instance for VPN B, these static routes are placed in VPNB.inet.0:

- **10.255.14.186/32** is for Router CE3 (in VPN B)
- **10.255.14.185/32** is for Router CE2 (in VPN AB)

Next hop **192.168.197.178** does not belong to VPN B. Route **10.255.14.185/32** cannot be installed in VPN-B.inet.0 unless interface routes from VPN AB are installed in this routing table. The interface route configuration in VPN AB provides this next hop.

### **Configuring VPN Policy**

The **vrf-import** and **vrf-export** policy statements that you configure for overlapping VPNs are the same as policy statements for regular VPNs, except that you include the **from interface** statement in each VRF export policy. This statement forces each VPN to announce only those routes that originated from that VPN. For example, VPN A has routes that originated in VPN A and VPN AB. If you do not include the **from**



**interface** statement, VPN A announces its own routes as well as VPN AB's routes, so the remote PE router receives multiple announcements for the same routes. Including the **from interface** statement restricts each VPN to announcing only the routes it originated and allows you to filter out the routes imported from other routing tables for local connectivity.

In this configuration example, the **vpnab-import** policy accepts routes from VPN A, VPN B, and VPN AB. The **vpna-export** policy exports only routes that originate in VPN A. Similarly, the **vpnb-export** and **vpnab-export** policies export only routes that originate within the respective VPNs.

On Router PE1, configure the following VPN import and export policies:

```
[edit]
policy-options {
  policy-statement vpna-import {
    term a {
      from {
        protocol bgp;
        community VPNA-comm;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
  policy-statement vpnb-import {
    term a {
      from {
        protocol bgp;
        community VPNB-comm;
      }
      then accept;
    }
    term b {
      then reject;
    }
  }
  policy-statement vpnab-import {
    term a {
      from {
        protocol bgp;
        community [ VPNA-comm VPNB-comm ];
      }
      then accept;
    }
  }
}
```



```

    term b {
        then reject;
    }
}
policy-statement vpna-export {
    term a {
        from {
            protocol static;
            interface fe-1/0/0.0;
        }
        then {
            community add VPNA-comm;
            accept;
        }
    }
    term b {
        then reject;
    }
}
policy-statement vpnb-export {
    term a {
        from {
            protocol static;
            interface fe-1/0/2.0;
        }
        then {
            community add VPNB-comm;
            accept;
        }
    }
    term b {
        then reject;
    }
}
policy-statement vpnab-export {
    term a {
        from {
            protocol static;
            interface fe-1/1/0.0;
        }
        then {
            community add VPNB-comm;
            community add VPNA-comm;
            accept;
        }
    }
}

```



```

    }
  }
  term b {
    then reject;
  }
}
community VPNA-comm members target:69:1;
community VPNB-comm members target:69:2;
}

```

On Router PE1, apply the VPN import and export policies:

```

[edit]
routing-instances {
  VPN-A {
    instance-type vrf;
    interface fe-1/0/0.0;
    route-distinguisher 10.255.14.175:3;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        rib-group vpna-vpnab;
        route 10.255.14.155/32 next-hop 192.168.197.141;
        route 10.255.14.185/32 next-hop 192.168.197.178;
      }
    }
  }
  VPN-AB {
    instance-type vrf;
    interface fe-1/1/0.0;
    route-distinguisher 10.255.14.175:9;
    vrf-import vpnab-import;
    vrf-export vpnab-export;
    routing-options {
      static {
        rib-group vpnab-vpna_and_vpnab;
        route 10.255.14.185/32 next-hop 192.168.197.178;
      }
    }
  }
  VPN-B {
    instance-type vrf;
    interface fe-1/0/2.0;
  }
}

```



```

route-distinguisher 10.255.14.175:10;
vrf-import vpnb-import;
vrf-export vpnb-export;
routing-options {
  static {
    rib-group vpnb-vpnab;
    route 10.255.14.186/32 next-hop 192.168.197.242;
  }
}
}
}

```

For VPN A, include the **routing-options** statement at the **[edit routing-instances *routing-instance-name*]** hierarchy level to install the static routes directly into the routing tables defined in the routing table group **vpna-vpnab**. For VPN AB, the configuration installs the static route directly into the routing tables defined in the routing table group **vpnab-vpna** and **vpnab-vpnb**. For VPN B the configuration installs the static route directly into the routing tables defined in the routing table group **vpnb-vpnab**.

## Configuring BGP Between the PE and CE Routers

In this configuration example, the **vpna-site1** BGP group for VPN A installs the routes learned from the BGP session into the routing tables defined in the **vpna-vpnab** routing table group. For VPN AB, the **vpnab-site1** group installs the routes learned from the BGP session into the routing tables defined in the **vpnab-vpna\_and\_vpnb** routing table group. For VPN B, the **vpnb-site1** group installs the routes learned from the BGP session into the routing tables defined in the **vpnb-vpnab** routing table group. Interface routes are not needed for this configuration.

The VRF import and export policies are similar to those defined in [“Configuring Static Routes Between the PE and CE Routers” on page 826](#), except the export protocol is BGP instead of a static route. On all **vrf-export** policies, you use the **from protocol bgp** statement.

On Router PE1, configure BGP between the PE and CE routers:

```

[edit]
routing-instances {
  VPN-A {
    instance-type vrf;
    interface fe-1/0/0.0;
    route-distinguisher 10.255.14.175:3;
    vrf-import vpna-import;
    vrf-export vpna-export;
    protocols {
      bgp {

```



```

        group vpna-site1 {
            family inet {
                unicast {
                    rib-group vpna-vpnab;
                }
            }
            peer-as 1;
            neighbor 192.168.197.141;
        }
    }
}

VPN-AB {
    instance-type vrf;
    interface fe-1/1/0.0;
    route-distinguisher 10.255.14.175:9;
    vrf-import vpnab-import;
    vrf-export vpnab-export;
    protocols {
        bgp {
            group vpnab-site1 {
                family inet {
                    unicast {
                        rib-group vpnab-vpna_and_vpnab;
                    }
                }
                peer-as 9;
                neighbor 192.168.197.178;
            }
        }
    }
}

VPN-B {
    instance-type vrf;
    interface fe-1/0/2.0;
    route-distinguisher 10.255.14.175:10;
    vrf-import vpnb-import;
    vrf-export vpnb-export;
    protocols {
        bgp {
            group vpnb-site1 {
                family inet {
                    unicast {
                        rib-group vpnb-vpnab;
                    }
                }
            }
        }
    }
}

```



```

    }
  }
  neighbor 192.168.197.242 {
    peer-as 10;
  }
}
}
}
}
}
}
}

```

### Configuring OSPF Between the PE and CE Routers

In this configuration example, routes learned from the OSPF session for VPN A are installed into the routing tables defined in the **vpna-vpnab** routing table group. For VPN AB, routes learned from the OSPF session are installed into the routing tables defined in the **vpnab-vpna\_and\_vpnb** routing table group. For VPN B, routes learned from the OSPF session are installed into the routing tables defined in the **vpnb-vpnab** routing table group.

The VRF import and export policies are similar to those defined in [“Configuring Static Routes Between the PE and CE Routers” on page 826](#) and [“Configuring BGP Between the PE and CE Routers” on page 832](#), except the export protocol is OSPF instead of BGP or a static route. Therefore, on all **vrf-export** policies, you use the **from protocol ospf** statement instead of the **from protocol <static | bgp>** statement.

On Router PE1, configure OSPF between the PE and CE routers:

```

[edit]
routing-instances {
  VPN-A {
    instance-type vrf;
    interface fe-1/0/0.0;
    route-distinguisher 10.255.14.175:3;
    vrf-import vpna-import;
    vrf-export vpna-export;
    protocols {
      ospf {
        rib-group vpna-vpnab;
        export vpna-import;
        area 0.0.0.0 {
          interface fe-1/0/0.0;
        }
      }
    }
  }
}

```



```

}
VPN-AB {
    instance-type vrf;
    interface fe-1/1/0.0;
    route-distinguisher 10.255.14.175:9;
    vrf-import vpnab-import;
    vrf-export vpnab-export;
    protocols {
        ospf {
            rib-group vpnab-vpna_and_vpnab;
            export vpnab-import;
            area 0.0.0.0 {
                interface fe-1/1/0.0;
            }
        }
    }
}
VPN-B {
    instance-type vrf;
    interface fe-1/0/2.0;
    route-distinguisher 10.255.14.175:10;
    vrf-import vpnb-import;
    vrf-export vpnb-export;
    protocols {
        ospf {
            rib-group vpnb-vpnab;
            export vpnb-import;
            area 0.0.0.0 {
                interface fe-1/0/2.0;
            }
        }
    }
}
}

```

## Configuring Static, BGP, and OSPF Routes Between PE and CE Routers

This section shows how to configure the routes between the PE and CE routers by using a combination of static routes, BGP, and OSPF:

- The connection between Router PE1 and Router CE1 uses static routing.
- The connection between Router PE1 and Router CE2 uses BGP.
- The connection between Router PE1 and Router CE3 uses OSPF.



Here, the configuration for VPN AB also includes a static route to CE1.

On Router PE1, configure a combination of static routing, BGP, and OSPF between the PE and CE routers:

```
[edit]
routing-instances {
  VPN-A {
    instance-type vrf;
    interface fe-1/0/0.0;
    route-distinguisher 10.255.14.175:3;
    vrf-import vpna-import;
    vrf-export vpna-export;
    routing-options {
      static {
        rib-group vpna-vpnab;
        route 10.255.14.155/32 next-hop 192.168.197.141;
      }
    }
  }
}
VPN-AB {
  instance-type vrf;
  interface fe-1/1/0.0;
  route-distinguisher 10.255.14.175:9;
  vrf-import vpnab-import;
  vrf-export vpnab-export;
  protocols {
    bgp {
      group vpnab-site1 {
        family inet {
          unicast {
            rib-group vpnab-vpna_and_vpnab;
          }
        }
        export to-vpnab-site1;
        peer-as 9;
        neighbor 192.168.197.178;
      }
    }
  }
}
VPN-B {
  instance-type vrf;
  interface fe-1/0/2.0;
  route-distinguisher 10.255.14.175:10;
  vrf-import vpnb-import;
```



```
vrf-export vpnb-export;  
protocols {  
  ospf {  
    rib-group vpnb-vpna;  
    export vpnb-import;  
    area 0.0.0.1 {  
      interface t3-0/3/3.0;  
    }  
  }  
}  
}  
}  
policy-options {  
  policy-statement to-vpna-site1 {  
    term a {  
      from protocol static;  
      then accept;  
    }  
    term b {  
      from protocol bgp;  
      then accept;  
    }  
    term c {  
      then reject;  
    }  
  }  
}
```

## Configuring Overlapping VPNs Using Automatic Route Export

### IN THIS SECTION

- [Configuring Overlapping VPNs with BGP and Automatic Route Export | 838](#)
- [Configuring Overlapping VPNs and Additional Tables | 840](#)
- [Configuring Automatic Route Export for All VRF Instances | 841](#)



A problem with multiple routing instances is how to export routes between routing instances. You can accomplish this in Junos OS by configuring routing table groups for each routing instance that needs to export routes to other routing tables. For information about how to configure overlapping VPNs by using routing table groups, see [“Configuring Overlapping VPNs Using Routing Table Groups” on page 824](#).

However, using routing table groups has limitations:

- Routing table group configuration is complex. You must define a unique routing table group for each routing instance that will export routes.
- You must also configure a unique routing table group for each protocol that will export routes.

To limit and sometimes eliminate the need to configure routing table groups in multiple routing instance topologies, you can use the functionality provided by the **auto-export** statement.

The **auto-export** statement is particularly useful for configuring overlapping VPNs—VPN configurations where more than one VRF routing instance lists the same community route target in its **vrf-import** policy. The **auto-export** statement finds out which routing tables to export routes from and import routes to by examining the existing policy configuration.

The **auto-export** statement automatically exports routes between the routing instances referencing a given route target community. When the **auto-export** statement is configured, a VRF target tree is constructed based on the **vrf-import** and **vrf-export** policies configured on the system. If a routing instance references a route target in its **vrf-import** policy, the route target is added to the import list for the target. If it references a specific route target in its **vrf-export** policy, the route target is added to the export list for that target. Route targets where there is a single importer that matches a single exporter or with no importers or exporters are ignored.

Changes to routing tables that export route targets are tracked. When a route change occurs, the routing instance’s **vpn-export** policy is applied to the route. If it is allowed, the route is imported to all the import tables (subject to the **vrf-import** policy) of the route targets set by the export policy.

The sections that follow describe how to configure overlapping VPNs by using the **auto-export** statement for inter-instance export in addition to routing table groups:

## Configuring Overlapping VPNs with BGP and Automatic Route Export

The following example provides the configuration for an overlapping VPN where BGP is used between the PE and CE routers.

Configure routing instance **VPN-A**:

```
[edit]
routing-instances {
  VPN-A {
    instance-type vrf;
```



```

interface fe-1/0/0.0;
route-distinguisher 10.255.14.175:3;
vrf-import vpna-import;
vrf-export vpna-export;
routing-options {
    auto-export;
}
protocols {
    bgp {
        group vpna-site1 {
            peer-as 1;
            neighbor 192.168.197.141;
        }
    }
}
}

```

Configure routing instance **VPN-AB**:

```

[edit]
routing-instances {
    VPN-AB {
        instance-type vrf;
        interface fe-1/1/0.0;
        route-distinguisher 10.255.14.175:9;
        vrf-import vpnab-import;
        vrf-export vpnab-export;
        routing-options {
            auto-export;
        }
        protocols {
            bgp {
                group vpnab-site1 {
                    peer-as 9;
                    neighbor 192.168.197.178;
                }
            }
        }
    }
}

```

For this configuration, the **auto-export** statement replaces the functionality that was provided by a routing table group configuration. However, sometimes additional configuration is required.



Since the **vrf-import** policy and the **vrf-export** policy from which the **auto-export** statement deduces the import and export matrix are configured on a per-instance basis, you must be able to enable or disable them for unicast and multicast, in case multicast network layer reachability information (NLRI) is configured.

## Configuring Overlapping VPNs and Additional Tables

You might need to use the **auto-export** statement between overlapping VPNs but require that a subset of the routes learned from a VRF table be installed into the inet.0 table or in routing-instance.inet.2.

To support this type of scenario, where not all of the information needed is present in the **vrf-import** and **vrf-export** policies, you configure an additional list of routing tables by using an additional routing table group.

To add routes from **VPN-A** and **VPN-AB** to inet.0 in the example described, you need to include the following additional configuration statements:

Configure the routing options:

```
[edit]
routing-options {
  rib-groups {
    inet-access {
      import-rib inet.0;
    }
  }
}
```

Configure routing instance **VPN-A**:

```
[edit]
routing-instances {
  VPN-A {
    routing-options {
      auto-export {
        family inet {
          unicast {
            rib-group inet-access;
          }
        }
      }
    }
  }
}
```

Configure routing instance **VPN-AB**:



```
[edit]
routing-instances {
  VPN-AB {
    routing-options {
      auto-export {
        family inet {
          unicast {
            rib-group inet-access;
          }
        }
      }
    }
  }
}
```

Routing table groups are used in this configuration differently from how they are generally used in Junos OS. Routing table groups normally require that the exporting routing table be referenced as the primary import routing table in the routing table group. For this configuration, the restriction does not apply. The routing table group functions as an additional list of tables to which to export routes.

### Configuring Automatic Route Export for All VRF Instances

The following configuration allows you to configure the **auto-export** statement for all of the routing instances in a configuration group:

```
[edit]
groups {
  vrf-export-on {
    routing-instances {
      <*> {
        routing-options {
          auto-export;
        }
      }
    }
  }
}
apply-groups vrf-export-on;
```



# 6

CHAPTER

## Layer 3 VPN Tunnels

---

ES Tunnels for Layer 3 VPNs | **845**

GRE Tunnels for Layer 3 VPNs | **853**

Next-Hop Based Tunnels for Layer 3 VPNs | **873**

---







# ES Tunnels for Layer 3 VPNs

## IN THIS SECTION

- [Configuring an ES Tunnel Interface for Layer 3 VPNs | 845](#)
- [Configuring an ES Tunnel Interface Between a PE and CE Router | 847](#)

## Configuring an ES Tunnel Interface for Layer 3 VPNs

## IN THIS SECTION

- [Configuring the ES Tunnel Interface on the PE Router | 845](#)
- [Configuring the ES Tunnel Interface on the CE Router | 847](#)

An ES tunnel interface allows you to configure an IP Security (IPsec) tunnel between the PE and CE routers of a Layer 3 VPN. The IPsec tunnel can include one or more hops.

The following sections explain how to configure an ES tunnel interface between the PE and CE routers of a Layer 3 VPN:

### Configuring the ES Tunnel Interface on the PE Router

To configure the ES tunnel interface on the PE router, include the **unit** statement:

```
unit logical-unit-number {  
  tunnel {  
    source source-address;  
    destination destination-address;  
  }  
  family inet {  
    address address;  
    ipsec-sa security-association-name;  
  }  
}
```



```
}
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

By default, the tunnel destination address is assumed to be in the default Internet routing table, inet.0. For IPsec tunnels using manual security association (SA), if the tunnel destination address is not in the default inet.0 routing table, you need to specify which routing table to search for the tunnel destination address by configuring the **routing-instance** statement. This is the case if the tunnel encapsulating interface is also configured under the routing instance.

```
unit logical-unit-number {
  tunnel {
    source address;
    destination address;
    routing-instance {
      destination routing-instance-name;
    }
    family inet {
      address address;
      ipsec-sa security-association-name;
    }
    family mpls;
  }
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

**NOTE:** For IPsec tunnels using dynamic SA, the tunnel destination address must be in the default Internet routing table, inet.0.

To complete the ES tunnel interface configuration, include the **interface** statement for the ES interface under the appropriate routing instance:

```
interface interface-name;
```



You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

## Configuring the ES Tunnel Interface on the CE Router

To configure the ES tunnel interface on the CE router, include the **unit** statement:

```
unit 0 {
  tunnel {
    source address;
    destination address;
  }
  family inet {
    address address;
    ipsec-sa security-association-name;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

## Configuring an ES Tunnel Interface Between a PE and CE Router


### IN THIS SECTION

- [Configuring IPsec on Router PE1 | 848](#)
- [Configuring the Routing Instance Without the Encapsulating Interface | 849](#)
- [Configuring the Routing Instance with the Encapsulating Interface | 850](#)
- [Configuring the ES Tunnel Interface on Router CE1 | 852](#)
- [Configuring IPsec on Router CE1 | 852](#)



This example shows how to configure an ES tunnel interface between a PE router and a CE router in a Layer 3 VPN. The network topology used in this example is shown in [Figure 67 on page 848](#).

**Figure 67: ES Tunnel Interface (IPsec Tunnel)**

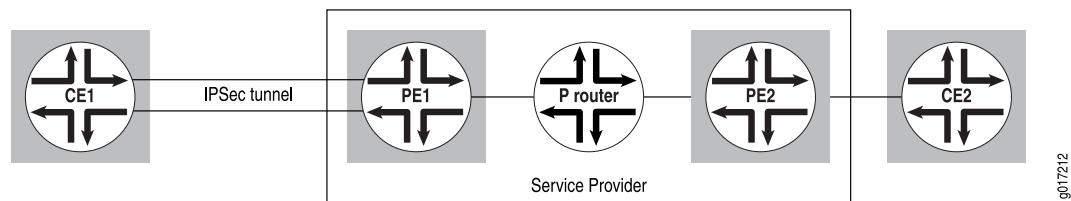

To configure this example, you perform the steps in the following sections:

### Configuring IPsec on Router PE1

Configure IP Security (IPsec) on Router PE1:

```
[edit security]
ipsec {
  security-association sa-esp-manual {
    mode tunnel;
    manual {
      direction bidirectional {
        protocol esp;
        spi 16000;
        authentication {
          algorithm hmac-md5-96;
          key ascii-text "$9$ABULt1heK87dsWLDk.P3nrevM7V24ZHkPaZ/tp0cSvWLNwgZUH";
        }
        encryption {
          algorithm des-cbc;
          key ascii-text "$9$/H8Q90lyrvL7VKMZjHqQzcyleLN";
        }
      }
    }
  }
}
```



## Configuring the Routing Instance Without the Encapsulating Interface

### IN THIS SECTION

- [Configuring the Routing Instance on Router PE1 | 849](#)
- [Configuring the ES Tunnel Interface on Router PE1 | 849](#)
- [Configuring the Encapsulating Interface for the ES Tunnel | 850](#)

You can configure the routing instance on Router PE1 with or without the encapsulating interface (t3-0/1/3 in this example). The following sections explain how to configure the routing instance without it:

### ***Configuring the Routing Instance on Router PE1***

Configure the routing instance on Router PE1:

```
[edit routing-instances]
vpna {
  instance-type vrf;
  interface es-1/2/0.0;
  route-distinguisher 10.255.14.174:1;
  vrf-import vpna-import;
  vrf-export vpna-export;
  protocols {
    bgp {
      group vpna {
        type external;
        peer-as 100;
        as-override;
        neighbor 10.49.2.1;
      }
    }
  }
}
```

### ***Configuring the ES Tunnel Interface on Router PE1***

Configure the ES tunnel interface on Router PE1:

```
[edit interfaces es-1/2/0]
unit 0 {
  tunnel {
```



```

        source 192.168.197.249;
        destination 192.168.197.250;
    }
    family inet {
        address 10.49.2.2/30;
        ipsec-sa sa-esp-manual;
    }
}

```

### **Configuring the Encapsulating Interface for the ES Tunnel**

For this example, interface **t3-0/1/3** is the encapsulating interface for the ES tunnel. Configure interface **t3-0/1/3**:

```

[edit interfaces t3-0/1/3]
unit 0 {
    family inet {
        address 192.168.197.249/30;
    }
}

```

## **Configuring the Routing Instance with the Encapsulating Interface**

### **IN THIS SECTION**

- [Configuring the Routing Instance on Router PE1 | 850](#)
- [Configuring the ES Tunnel Interface on Router PE1 | 851](#)
- [Configuring the Encapsulating Interface on Router PE1 | 851](#)

If the tunnel-encapsulating interface, **t3-0/1/3**, is also configured under the routing instance, you need to specify the routing instance name under the interface definition. The system uses this routing instance to search for the tunnel destination address for the IPsec tunnel using manual security association.

The following sections explain how to configure the routing instance with the encapsulating interface:

### **Configuring the Routing Instance on Router PE1**

Configure the routing instance on Router PE1 (including the tunnel encapsulating interface):

```

[edit routing-instances]

```



```

vpna {
  instance-type vrf;
  interface es-1/2/0.0;
  interface t3-0/1/3.0;
  route-distinguisher 10.255.14.174:1;
  vrf-import vpna-import;
  vrf-export vpna-export;
  protocols {
    bgp {
      group vpna {
        type external;
        peer-as 100;
        as-override;
        neighbor 10.49.2.1;
      }
    }
  }
}

```

### **Configuring the ES Tunnel Interface on Router PE1**

Configure the ES tunnel interface on Router PE1:

```

[edit interfaces es-1/2/0]
unit 0 {
  tunnel {
    source 192.168.197.249;
    destination 192.168.197.250;
    routing-instance {
      destination vpna;
    }
  }
  family inet {
    address 10.49.2.2/30;
    ipsec-sa sa-esp-manual;
  }
}

```

### **Configuring the Encapsulating Interface on Router PE1**

Configure the encapsulating interface on Router PE1:

```

[edit interfaces t3-0/1/3]
unit 0 {
  family inet {

```



```

        address 192.168.197.249/30;
    }
}

```

## Configuring the ES Tunnel Interface on Router CE1

Configure the ES tunnel interface on Router CE1:

```

[edit interfaces es-1/2/0]
unit 0 {
    tunnel {
        source 192.168.197.250;
        destination 192.168.197.249;
    }
    family inet {
        address 10.49.2.1/30;
        ipsec-sa sa-esp-manual;
    }
}

```

## Configuring IPsec on Router CE1

Configure IPsec on Router CE1:

```

[edit security]
ipsec {
    security-association sa-esp-manual {
        mode tunnel;
        manual {
            direction bidirectional {
                protocol esp;
                spi 16000;
                authentication {
                    algorithm hmac-md5-96;
                    key ascii-text "$9$ABULt1heK87dsWLDk.P3nrevM7V24ZHkPaZ/tp0cSvWLNwvZUH";
                }
                encryption {
                    algorithm des-cbc;
                    key ascii-text "$9$/H8Q90IyrvL7VKMZjHqQzcycleLN";
                }
            }
        }
    }
}

```



```

    }
  }
}

```

## GRE Tunnels for Layer 3 VPNs

### IN THIS SECTION

- [Configuring GRE Tunnels for Layer 3 VPNs | 853](#)
- [Configuring a GRE Tunnel Interface Between PE Routers | 858](#)
- [Configuring a GRE Tunnel Interface Between a PE and CE Router | 868](#)

## Configuring GRE Tunnels for Layer 3 VPNs

### IN THIS SECTION

- [Configuring GRE Tunnels Manually Between PE and CE Routers | 854](#)
- [Configuring GRE Tunnels Dynamically | 856](#)

Junos OS allows you to configure a generic routing encapsulation (GRE) tunnel between the PE and CE routers for a Layer 3 VPN. The GRE tunnel can have one or more hops. You can configure the tunnel from the PE router to a local CE router (as shown in [Figure 68 on page 854](#)) or to a remote CE router (as shown in [Figure 69 on page 854](#)).



Figure 68: GRE Tunnel Configured Between the Local CE Router and the PE Router


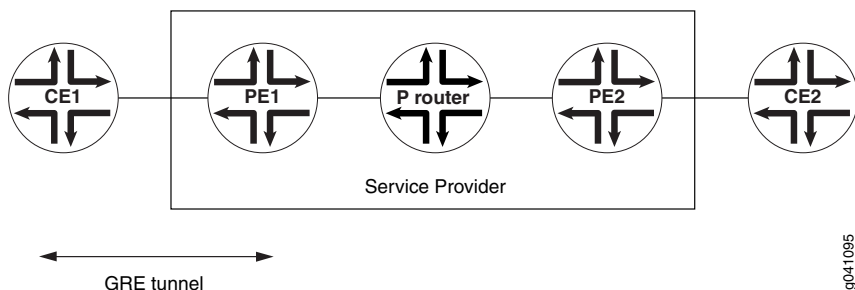


Figure 69: GRE Tunnel Configured Between the Remote CE Router and the PE Router

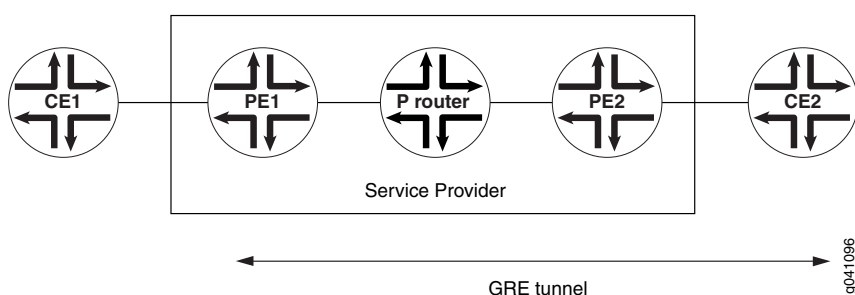

For more information about how to configure tunnel interfaces, see the *Junos OS Services Interfaces Library for Routing Devices*.

You can configure the GRE tunnels manually or configure the Junos OS to instantiate GRE tunnels dynamically.

The following sections describe how to configure GRE tunnels manually and dynamically:

### Configuring GRE Tunnels Manually Between PE and CE Routers

#### IN THIS SECTION

- [Configuring the GRE Tunnel Interface on the PE Router | 855](#)
- [Configuring the GRE Tunnel Interface on the CE Router | 856](#)

You can manually configure a GRE tunnel between a PE router and either a local CE router or a remote CE router for a Layer 3 VPN as explained in the following sections:



### Configuring the GRE Tunnel Interface on the PE Router

You configure the GRE tunnel as a logical interface on the PE router. To configure the GRE tunnel interface, include the **unit** statement:

```
unit logical-unit-number {
  tunnel {
    source source-address;
    destination destination-address;
    routing-instance {
      destination routing-instance-name;
    }
  }
  family inet {
    address address;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

As part of the GRE tunnel interface configuration, you need to include the following statements:

- **source *source-address***—Specify the source or origin of the GRE tunnel, typically the PE router.
- **destination *destination-address***—Specify the destination or end point of the GRE tunnel. The destination can be a Provider router, the local CE router, or the remote CE router.

By default, the tunnel destination address is assumed to be in the default Internet routing table, inet.0. If the tunnel destination address is not in inet.0, you need to specify which routing table to search for the tunnel destination address by configuring the **routing-instance** statement. This is the case if the tunnel encapsulating interface is also configured under the routing instance.

- **destination *routing-instance-name***—Specify the name of the routing instance when configuring the GRE tunnel interface on the PE router.

To complete the GRE tunnel interface configuration, include the **interface** statement for the GRE interface under the appropriate routing instance:

```
interface interface-name;
```

You can include this statement at the following hierarchy levels:

- [edit routing-instances *routing-instance-name*]



- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

### Configuring the GRE Tunnel Interface on the CE Router

You can configure either the local or the remote CE router to act as the endpoint for the GRE tunnel.

To configure the GRE tunnel interface on the CE router, include the **unit** statement:

```
unit logical-unit-number {
  tunnel {
    source address;
    destination address;
  }
  family inet {
    address address;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

### Configuring GRE Tunnels Dynamically

When the router receives a VPN route to a BGP next hop address, but no MPLS path is available, a GRE tunnel can be dynamically generated to carry the VPN traffic across the BGP network. The GRE tunnel is generated and then its routing information is copied into the inet.3 routing table. IPv4 routes are the only type of routes supported for dynamic GRE tunnels. Also, the routing platform must have a tunnel PIC.

**NOTE:** When configuring a dynamic GRE tunnel to a remote CE router, do not configure OSPF over the tunnel interface. It creates a routing loop forcing the router to take the GRE tunnel down. The router attempts to reestablish the GRE tunnel, but will be forced to take it down again when OSPF becomes active on the tunnel interface and discovers a route to the tunnel endpoint. This is not an issue when configuring static GRE tunnels to a remote CE router.

To generate GRE tunnels dynamically, include the **dynamic-tunnels** statement:

```
dynamic-tunnels tunnel-name {
  destination-networks prefix;
  source-address address;
```



```
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

Specify the IPv4 prefix range (for example, 10/8 or 11.1/16) for the destination network by including the **destination-networks** statement. Only tunnels within the specified IPv4 prefix range are allowed to be initiated.

```
destination-networks prefix;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options dynamic-tunnels *tunnel-name*]
- [edit logical-systems *logical-system-name* routing-options dynamic-tunnels *tunnel-name*]

Specify the source address for the GRE tunnels by including the **source-address** statement. The source address specifies the address used as the source for the local tunnel endpoint. This could be any local address on the router (typically the router ID or the loopback address).

```
source-address address;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options dynamic-tunnels *tunnel-name*]
- [edit logical-systems *logical-system-name* routing-options dynamic-tunnels *tunnel-name*]

SEE ALSO

| *Example: Configuring a Two-Tiered Virtualized Data Center for Large Enterprise Networks*




## Configuring a GRE Tunnel Interface Between PE Routers

### IN THIS SECTION

- Configuring the Routing Instance on Router A | 858
- Configuring the Routing Instance on Router D | 859
- Configuring MPLS, BGP, and OSPF on Router A | 860
- Configuring MPLS, BGP, and OSPF on Router D | 860
- Configuring the Tunnel Interface on Router A | 861
- Configuring the Tunnel Interface on Router D | 861
- Configuring the Routing Options on Router A | 862
- Configuring the Routing Options on Router D | 862
- Configuration Summary for Router A | 863
- Configuration Summary for Router D | 865

This example shows how to configure a generic routing encapsulation (GRE) tunnel interface between PE routers to provide VPN connectivity. You can use this configuration to tunnel VPN traffic across a non-MPLS core network. The network topology used in this example is shown in [Figure 70 on page 858](#). The P routers shown in this illustration do not run MPLS.

Figure 70: PE Routers A and D Connected by a GRE Tunnel Interface

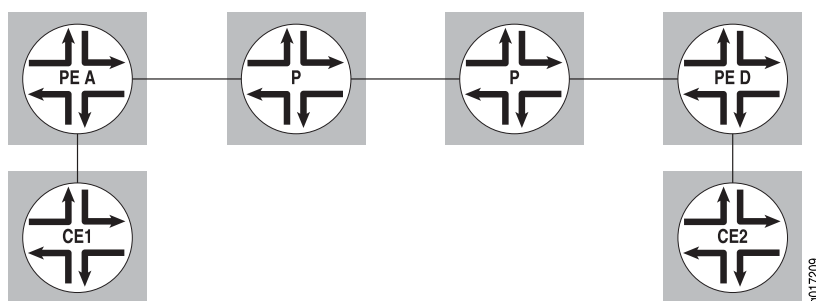

For configuration information, see the following sections:

### Configuring the Routing Instance on Router A

Configure a routing instance on Router A:



```
[edit routing-instances]
gre-config {
  instance-type vrf;
  interface fe-1/0/0.0;
  route-distinguisher 10.255.14.176:69;
  vrf-import import-config;
  vrf-export export-config;
  protocols {
    ospf {
      export import-config;
      area 0.0.0.0 {
        interface all;
      }
    }
  }
}
```

## Configuring the Routing Instance on Router D

Configure a routing instance on Router D:

```
[edit routing-instances]
gre-config {
  instance-type vrf;
  interface fe-1/0/1.0;
  route-distinguisher 10.255.14.178:69;
  vrf-import import-config;
  vrf-export export-config;
  protocols {
    ospf {
      export import-config;
      area 0.0.0.0 {
        interface all;
      }
    }
  }
}
```



## Configuring MPLS, BGP, and OSPF on Router A

Although you do not need to configure MPLS on the P routers in this example, it is needed on the PE routers for the interface between the PE and CE routers and on the GRE interface (**gr-1/1/0.0**) linking the PE routers (Router A and Router D). Configure MPLS, BGP, and OSPF on Router A:

```
[edit protocols]
mpls {
  interface all;
}
bgp {
  group pe-to-pe {
    type internal;
    neighbor 10.255.14.178 {
      family inet-vpn {
        unicast;
      }
    }
  }
}
ospf {
  area 0.0.0.0 {
    interface all;
    interface gr-1/1/0.0 {
      disable;
    }
  }
}
```

## Configuring MPLS, BGP, and OSPF on Router D

Although you do not need to configure MPLS on the P routers in this example, it is needed on the PE routers for the interface between the PE and CE routers and on the GRE interface (**gr-1/1/0.0**) linking the PE routers (Router D and Router A). Configure MPLS, BGP, and OSPF on Router D:

```
[edit protocols]
mpls {
  interface all;
}
bgp {
  group pe-to-pe {
    type internal;
    neighbor 10.255.14.176 {
```



```

        family inet-vpn {
            unicast;
        }
    }
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
        interface gr-1/1/0.0 {
            disable;
        }
    }
}
}

```

### Configuring the Tunnel Interface on Router A

Configure the tunnel interface on Router A (the tunnel is unnumbered):

```

[edit interfaces interface-name]
unit 0 {
    tunnel {
        source 10.255.14.176;
        destination 10.255.14.178;
    }
    family inet;
    family mpls;
}

```

### Configuring the Tunnel Interface on Router D

Configure the tunnel interface on Router D (the tunnel is unnumbered):

```

[edit interfaces interface-name]
unit 0 {
    tunnel {
        source 10.255.14.178;
    }
}

```



```

        destination 10.255.14.176;
    }
    family inet;
    family mpls;
}

```

## Configuring the Routing Options on Router A

As part of the routing options configuration for Router A, you need to configure routing table groups to enable VPN route resolution in the inet.3 routing table.

Configure the routing options on Router A:

```

[edit routing-options]
interface-routes {
    rib-group inet if-rib;
}
rib inet.3 {
    static {
        route 10.255.14.178/32 next-hop gr-1/1/0.0;
    }
}
rib-groups {
    if-rib {
        import-rib [ inet.0 inet.3 ];
    }
}

```

## Configuring the Routing Options on Router D

As part of the routing options configuration for Router D, you need to configure routing table groups to enable VPN route resolution in the inet.3 routing table.

Configure the routing options on Router D:

```

[edit routing-options]
interface-routes {
    rib-group inet if-rib;
}
rib inet.3 {
    static {
        route 10.255.14.176/32 next-hop gr-1/1/0.0;
    }
}

```



```

    }
}
rib-groups {
    if-rib {
        import-rib [ inet.0 inet.3 ];
    }
}

```

## Configuration Summary for Router A

### Configure the Routing Instance

```

gre-config {
    instance-type vrf;
    interface fe-1/0/0.0;
    route-distinguisher 10.255.14.176:69;
    vrf-import import-config;
    vrf-export export-config;
    protocols {
        ospf {
            export import-config;
            area 0.0.0.0 {
                interface all;
            }
        }
    }
}

```

### Configure MPLS

```

mpls {
    interface all;
}

```

### Configure BGP



```

bgp {
  traceoptions {
    file bgp.trace world-readable;
    flag update detail;
  }
  group pe-to-pe {
    type internal;
    neighbor 10.255.14.178 {
      family inet-vpn {
        unicast;
      }
    }
  }
}

```

### Configure OSPF

```

ospf {
  area 0.0.0.0 {
    interface all;
    interface gr-1/1/0.0 {
      disable;
    }
  }
}

```

### Configure the Tunnel Interface

```

interface-name {
  unit 0 {
    tunnel {
      source 10.255.14.176;
      destination 10.255.14.178;
    }
    family inet;
    family mpls;
  }
}

```



```
}
```

## Configure Routing Options

```
interface-routes {
    rib-group inet if-rib;
}
rib inet.3 {
    static {
        route 10.255.14.178/32 next-hop gr-1/1/0.0;
    }
}
rib-groups {
    if-rib {
        import-rib [ inet.0 inet.3 ];
    }
}
```

## Configuration Summary for Router D

### Configure the Routing Instance

```
gre-config {
    instance-type vrf;
    interface fe-1/0/1.0;
    route-distinguisher 10.255.14.178:69;
    vrf-import import-config;
    vrf-export export-config;
    protocols {
        ospf {
            export import-config;
            area 0.0.0.0 {
                interface all;
            }
        }
    }
}
```



```
}
```

### Configure MPLS

```
mpls {
  interface all;
}
```

### Configure BGP

```
bgp {
  group pe-to-pe {
    type internal;
    neighbor 10.255.14.176 {
      family inet-vpn {
        unicast;
      }
    }
  }
}
```

### Configure OSPF

```
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface all;
    interface fxp0.0 {
      disable;
    }
    interface gr-1/1/0.0 {
      disable;
    }
  }
}
```



```
}
```

### Configure the Tunnel Interface

```
interface-name {
  unit 0 {
    tunnel {
      source 10.255.14.178;
      destination 10.255.14.176;
    }
    family inet;
    family mpls;
  }
}
```

### Configure the Routing Options

```
interface-routes {
  rib-group inet if-rib;
}
rib inet.3 {
  static {
    route 10.255.14.176/32 next-hop gr-1/1/0.0;
  }
}
rib-groups {
  if-rib {
    import-rib [ inet.0 inet.3 ];
  }
}
```




## Configuring a GRE Tunnel Interface Between a PE and CE Router

### IN THIS SECTION

- [Configuring the Routing Instance Without the Encapsulating Interface | 868](#)
- [Configuring the Routing Instance with the Encapsulating Interface | 870](#)
- [Configuring the GRE Tunnel Interface on Router CE1 | 873](#)

This example shows how to configure a GRE tunnel interface between a PE router and a CE router. You can use this configuration to tunnel VPN traffic across a non-MPLS core network. The network topology used in this example is shown in [Figure 71 on page 868](#).

Figure 71: GRE Tunnel Between the CE Router and the PE Router

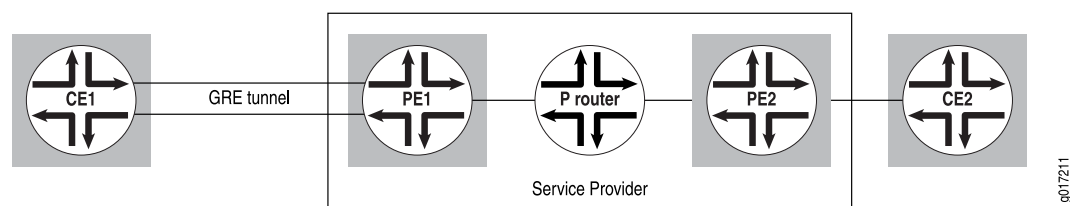

For this example, complete the procedures described in the following sections:

### Configuring the Routing Instance Without the Encapsulating Interface

#### IN THIS SECTION

- [Configuring the Routing Instance on Router PE1 | 868](#)
- [Configuring the GRE Tunnel Interface on Router PE1 | 869](#)
- [Configuring the Encapsulation Interface on Router PE1 | 870](#)

You can configure the routing instance either with or without the encapsulating interface. The following sections explain how to configure the routing instance without it:

#### **Configuring the Routing Instance on Router PE1**

Configure the routing instance on Router PE1:



```
[edit routing-instances]
vpna {
  instance-type vrf;
  interface gr-1/2/0.0;
  route-distinguisher 10.255.14.174:1;
  vrf-import vpna-import;
  vrf-export vpna-export;
  protocols {
    bgp {
      group vpna {
        type external;
        peer-as 100;
        as-override;
        neighbor 10.49.2.1;
      }
    }
  }
}
```

### **Configuring the GRE Tunnel Interface on Router PE1**

Configure the GRE tunnel interface on Router PE1:

```
[edit interfaces gr-1/2/0]
unit 0 {
  tunnel {
    source 192.168.197.249;
    destination 192.168.197.250;
  }
  family inet {
    address 10.49.2.2/30;
  }
}
```

In this example, interface **t3-0/1/3** acts as the encapsulating interface for the GRE tunnel.

When you configure the **clear-dont-fragment-bit** statement on an interface with the MPLS protocol family enabled, you must specify an MTU value. This MTU value must not be greater than the maximum supported value, which is 9192.

For example:

```
user@host# show interfaces gr-1/2/0
unit 0 {
```



```

clear-dont-fragment-bit;
family inet {
    mtu 9100;
    address 10.10.1.1/32;
}
family mpls {
    mtu 9100;
}
}

```

### **Configuring the Encapsulation Interface on Router PE1**

Configure the encapsulation interface on Router PE1:

```

[edit interfaces t3-0/1/3]
unit 0 {
    family inet {
        address 192.168.197.249/30;
    }
}

```

## **Configuring the Routing Instance with the Encapsulating Interface**

### **IN THIS SECTION**

- [Configuring the Routing Instance on Router PE1 | 870](#)
- [Configuring the GRE Tunnel Interface on Router PE1 | 871](#)
- [Configuring the Encapsulation Interface on Router PE1 | 872](#)

If the tunnel-encapsulating interface, **t3-0/1/3**, is also configured under the routing instance, then you need to specify the name of that routing instance under the interface definition. The system uses this routing instance to search for the tunnel destination address.

To configure the routing instance with the encapsulating interface, you perform the steps in the following sections:

### **Configuring the Routing Instance on Router PE1**

If you configure the tunnel-encapsulating interface under the routing instance, then configure the routing instance on Router PE1:



```
[edit routing-instances]
vpna {
  instance-type vrf;
  interface gr-1/2/0.0;
  interface t3-0/1/3.0;
  route-distinguisher 10.255.14.174:1;
  vrf-import vpna-import;
  vrf-export vpna-export;
  protocols {
    bgp {
      group vpna {
        type external;
        peer-as 100;
        as-override;
        neighbor 10.49.2.1;
      }
    }
  }
}
```

### ***Configuring the GRE Tunnel Interface on Router PE1***

Configure the GRE tunnel interface on Router PE1:

```
[edit interfaces gr-1/2/0]
unit 0 {
  tunnel {
    source 192.168.197.249;
    destination 192.168.197.250;
    routing-instance {
      destination vpna;
    }
  }
  family inet {
    address 10.49.2.2/30;
  }
}
```

When you configure the **clear-dont-fragment-bit** statement on an interface with the MPLS protocol family enabled, you must specify an MTU value. This MTU value must not be greater than the maximum supported value, which is 9192.



For example:

```
user@host# show interfaces gr-1/2/0
unit 0 {
  clear-dont-fragment-bit;
  family inet {
    mtu 9100;
    address 10.10.1.1/32;
  }
  family mpls {
    mtu 9100;
  }
}
```

When you configure the **clear-dont-fragment-bit** statement on an interface with the MPLS protocol family enabled, you must specify an MTU value. This MTU value must not be greater than the maximum supported value, which is 9192.

For example:

```
user@host# show interfaces gr-1/2/0
unit 0 {
  clear-dont-fragment-bit;
  family inet {
    mtu 9100;
    address 10.10.1.1/32;
  }
  family mpls {
    mtu 9100;
  }
}
```

### ***Configuring the Encapsulation Interface on Router PE1***

Configure the encapsulation interface on Router PE1:

```
[edit interfaces t3-0/1/3]
unit 0 {
  family inet {
    address 192.168.197.249/30;
  }
}
```



## Configuring the GRE Tunnel Interface on Router CE1

Configure the GRE tunnel interface on Router CE1:

```
[edit interfaces gr-1/2/0]
unit 0 {
  tunnel {
    source 192.168.197.250;
    destination 192.168.197.249;
  }
  family inet {
    address 10.49.2.1/30;
  }
}
```

## Next-Hop Based Tunnels for Layer 3 VPNs

### IN THIS SECTION

- [Example: Configuring a Next-Hop-Based Dynamic GRE Tunnels | 874](#)
- [Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels | 889](#)
- [Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview | 908](#)
- [Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels | 911](#)

This topic describes configuring dynamic generic routing encapsulation (GRE) tunnel and a dynamic MPLS-over-UDP tunnel to support tunnel composite next hop. It also provides information on configuring reverse path forwarding to protect against anti-spoofing.



## Example: Configuring a Next-Hop-Based Dynamic GRE Tunnels

### IN THIS SECTION

- [Requirements | 874](#)
- [Overview | 874](#)
- [Configuration | 877](#)
- [Verification | 884](#)
- [Troubleshooting | 888](#)

This example shows how to configure a dynamic generic routing encapsulation (GRE) tunnel that includes a tunnel composite next hop instead of an interface next hop. The next-hop-based dynamic GRE tunnel has a scaling advantage over the interface-based dynamic GRE tunnels.

### Requirements

This example uses the following hardware and software components:

- Five MX Series routers with MPCs and MICs.
- Junos OS Release 16.2 or later running on the provider edge routers.

Before you begin:

1. Configure the device interfaces, including the loopback interface.
2. Configure the router ID and autonomous system number for the device.
3. Establish an internal BGP (IBGP) session with the remote PE device.
4. Establish OSPF peering among the devices.

### Overview

Starting with Junos OS Release 16.2, a dynamic generic routing encapsulation (GRE) tunnel supports the creation of a tunnel composite next hop for every GRE tunnel configured.

By default, for every new dynamic GRE tunnel configured, a corresponding logical tunnel interface is created. This is called an interface-based dynamic tunnel and is the default mode for creating dynamic tunnels. With the interface-based dynamic tunnel, the number of tunnels that can be configured on a device is dependant on the total number of interfaces supported on the device. The next-hop-based



dynamic GRE tunnel removes the dependency on physical interfaces, and the GRE tunnel encapsulation is implemented as a next-hop instruction without creating a logical tunnel interface. This provides a scaling advantage for the number of dynamic tunnels that can be created on a device.

Starting in Junos OS Release 17.1, on MX Series routers with MPCs and MICs, the scaling limit of next-hop-based dynamic GRE tunnels is increased. The increased scaling values benefits data center networks, where a gateway router is required to communicate with a number of servers over an IP infrastructure; for example, in Contrail networking.

At a given point in time, either the next-hop-based dynamic tunnel or the default interface-based dynamic GRE tunnel can exist on a device. A switchover from one tunnel mode to another deletes the existing tunnels and creates new tunnels in the new tunnel mode according to the supported scaling limits. Similarly, at a given point in time, for the same tunnel destination, the next-hop-based tunnel encapsulation type can either be GRE or UDP.

To enable the next-hop-based dynamic GRE tunnel, include the **next-hop-based-tunnel** statement at the **[edit routing-options dynamic-tunnels gre]** hierarchy level.

The existing dynamic tunnel feature requires complete static configuration. Currently, the tunnel information received from peer devices in advertised routes is ignored. Starting in Junos OS Release 17.4R1, on MX Series routers, the next-hop-based dynamic GRE tunnels are signaled using BGP encapsulation extended community. BGP export policy is used to specify the tunnel types, advertise the sender side tunnel information, and parse and convey the receiver side tunnel information. A tunnel is created according to the received type tunnel community.

Multiple tunnel encapsulations are supported by BGP. On receiving multiple capability, the next-hop-based dynamic tunnel is created based on the configured BGP policy and tunnel preference. The tunnel preference should be consistent across both the tunnel ends for the tunnel to be set up. By default, MPLS-over-UDP (MPLSoUDP) tunnel is preferred over GRE tunnels. If dynamic tunnel configuration exists, it takes precedence over received tunnel community.

When configuring a next-hop-based dynamic GRE tunnel, be aware of the following considerations:

- Dynamic tunnels creation is triggered in the IBGP protocol next-hop resolution process.
- A switchover from the next-hop-based tunnel mode to the interface-based tunnel mode (and vice versa) is allowed, and this can impact network performance in terms of the supported IP tunnel scaling values in each mode.
- RSVP automatic mesh tunnel is not supported with the next-hop-based dynamic tunnel configuration.
- Dynamic GRE tunnel creation based upon new IPv4-mapped-IPv6 next hops is supported with this feature.
- The following features are not supported with the next-hop-based dynamic GRE tunnel configuration:
  - RSVP automatic mesh
  - Logical systems




- Per-tunnel traffic statistics collection on the sender (MX Series) side
- QoS enforcement, such as policing and shaping, at the tunnel interface.
- Path maximum transmission unit discovery
- GRE key feature
- GRE Operation, Administration, and Maintenance (OAM) for GRE keepalive messages.

### Topology

Figure 72 on page 876 illustrates a Layer 3 VPN scenario over dynamic GRE tunnels. The customer edge (CE) devices, CE1 and CE2, connect to provider edge (PE) devices, PE1 and PE2, respectively. The PE devices are connected to a provider device (P1), and an internal BGP (IBGP) session interconnects the two PE devices. Two dynamic GRE tunnels are configured between the PE devices. The dynamic tunnel from Device PE1 to Device PE2 is based on the next hop tunnel mode, and the dynamic tunnel from Device PE2 to Device PE1 is based on the interface tunnel mode.

Figure 72: Layer 3 VPN over Dynamic GRE Tunnels

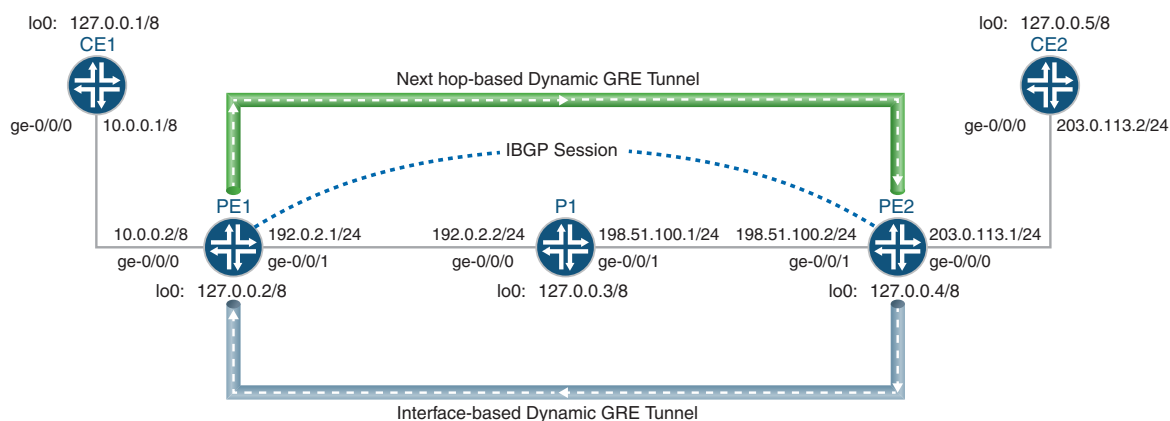



The next-hop-based dynamic GRE tunnel is handled as follows:

1. After a next-hop-based dynamic GRE tunnel is configured, a tunnel destination mask route with a tunnel composite next hop is created for the protocol next hops in the inet.3 routing table. This IP tunnel route is withdrawn only when the dynamic tunnel configuration is deleted.

The tunnel composite next hop attributes include the following:

- When Layer 3 VPN composite next hop is disabled—Source and destination address, encapsulation string, and VPN label.
  - When Layer 3 VPN composite next hop and per-prefix VPN label allocation are enabled—Source address, destination address, and encapsulation string.
  - When Layer 3 VPN composite next hop is enabled and per-prefix VPN label allocation is disabled—Source address, destination address, and encapsulation string. The route in this case is added to the other virtual routing and forwarding instance table with a secondary route.
2. The PE devices are interconnected using an IBGP session. The IBGP route next hop to a remote BGP neighbor is the protocol next hop, which is resolved using the tunnel mask route with the tunnel next hop.
  3. After the protocol next hop is resolved over the tunnel composite next hop, indirect next hops with forwarding next hops are created.
  4. The tunnel composite next hop is used to forward the next hops of the indirect next hops.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

#### CE1

```
set interfaces ge-0/0/0 unit 0 family inet address 10.0.0.1/8
set interfaces lo0 unit 0 family inet address 127.0.0.1/8
set routing-options router-id 127.0.0.1
set routing-options autonomous-system 200
set protocols bgp group ce1-pe1 export export-loopback-direct
set protocols bgp group ce1-pe1 peer-as 100
set protocols bgp group ce1-pe1 neighbor 10.0.0.2
```



```

set policy-options policy-statement export-loopback-direct term term-1 from interface lo0.0
set policy-options policy-statement export-loopback-direct term term-1 from route-filter 127.0.0.1/8
  exact
set policy-options policy-statement export-loopback-direct term term-1 then accept

```

## CE2

```

set interfaces ge-0/0/0 unit 0 family inet address 203.0.113.2/24
set interfaces lo0 unit 0 family inet address 127.0.0.5/8
set routing-options router-id 127.0.0.5
set routing-options autonomous-system 200
set protocols bgp group ce1-pe1 export export-loopback-direct
set protocols bgp group ce1-pe1 peer-as 100
set protocols bgp group ce1-pe1 neighbor 203.0.113.1
set policy-options policy-statement export-loopback-direct term term-1 from interface lo0.0
set policy-options policy-statement export-loopback-direct term term-1 from route-filter 127.0.0.5/8
  exact
set policy-options policy-statement export-loopback-direct term term-1 then accept

```

## PE1

```

set interfaces ge-0/0/0 unit 0 family inet address 10.0.0.2/8
set interfaces ge-0/0/1 unit 0 family inet address 192.0.2.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.2/8
set routing-options static route 33.0.0.0/8 next-hop 192.0.2.2
set routing-options router-id 127.0.0.2
set routing-options autonomous-system 100
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels gre-dyn-tunnel-to-pe2 source-address 127.0.0.2
set routing-options dynamic-tunnels gre-dyn-tunnel-to-pe2 gre
set routing-options dynamic-tunnels gre-dyn-tunnel-to-pe2 destination-networks 127.0.0.0/8
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 127.0.0.2
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 127.0.0.4
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0

```



```

set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-instances L3VPN-Over-GRE-PE1 instance-type vrf
set routing-instances L3VPN-Over-GRE-PE1 interface ge-0/0/0.0
set routing-instances L3VPN-Over-GRE-PE1 route-distinguisher 127.0.0.2:1
set routing-instances L3VPN-Over-GRE-PE1 vrf-target target:600:1
set routing-instances L3VPN-Over-GRE-PE1 protocols bgp group pe1-ce1 peer-as 200
set routing-instances L3VPN-Over-GRE-PE1 protocols bgp group pe1-ce1 neighbor 10.0.0.1 as-override

```

## P1

```

set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.3/8
set routing-options router-id 127.0.0.3
set routing-options autonomous-system 100
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

## PE2

```

set interfaces ge-0/0/0 unit 0 family inet address 203.0.113.1/24
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.2/24
set interfaces lo0 unit 0 family inet address 127.0.0.4/8
set routing-options nonstop-routing
set routing-options router-id 127.0.0.4
set routing-options autonomous-system 100
set routing-options dynamic-tunnels gre-dyn-tunnel-to-pe1 source-address 127.0.0.4
set routing-options dynamic-tunnels gre-dyn-tunnel-to-pe1 gre
set routing-options dynamic-tunnels gre-dyn-tunnel-to-pe1 destination-networks 127.0.0.0/8
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 127.0.0.4
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 127.0.0.2
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0

```



```

set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-instances L3VPN-Over-GRE-PE2 instance-type vrf
set routing-instances L3VPN-Over-GRE-PE2 interface ge-0/0/0.0
set routing-instances L3VPN-Over-GRE-PE2 route-distinguisher 127.0.0.4:1
set routing-instances L3VPN-Over-GRE-PE2 vrf-target target:600:1
set routing-instances L3VPN-Over-GRE-PE2 protocols bgp group ebgp peer-as 200
set routing-instances L3VPN-Over-GRE-PE2 protocols bgp group ebgp neighbor 203.0.113.2 as-override

```

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the device interfaces including the loopback interface of the device.

```

[edit interfaces]
user@PE1# set ge-0/0/0 unit 0 family inet address 10.0.0.2/8
user@PE1# set ge-0/0/1 unit 0 family inet address 192.0.2.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 127.0.0.2/8

```

2. Configure a static route for routes from Device PE1 with Device P1 as the next-hop destination.

```

[edit routing-options]
user@PE1# set static route 33.0.0.0/8 next-hop 192.0.2.2

```

3. Configure the router ID and autonomous system number for Device PE1.

```

[edit routing-options]
user@PE1# set router-id 127.0.0.2
user@PE1# set autonomous-system 100

```

4. Configure IBGP peering between the PE devices.

```

[edit protocols]
user@PE1# set bgp group IBGP type internal
user@PE1# set bgp group IBGP local-address 127.0.0.2

```



```
user@PE1# set bgp group IBGP family inet-vpn unicast
user@PE1# set bgp group IBGP neighbor 127.0.0.4
```

5. Configure OSPF on all the interfaces of Device PE1, excluding the management interface.

```
[edit protocols]
user@PE1# set ospf area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set ospf area 0.0.0.0 interface lo0.0 passive
```

6. Enable next-hop-based dynamic GRE tunnel configuration on Device PE1.

```
[edit routing-options]
user@PE1# set dynamic-tunnels gre next-hop-based-tunnel
```

7. Configure the dynamic GRE tunnel parameters from Device PE1 to Device PE2.

```
[edit routing-options]
user@PE1# set dynamic-tunnels gre-dyn-tunnel-to-pe2 source-address 127.0.0.2
user@PE1# set dynamic-tunnels gre-dyn-tunnel-to-pe2 gre
user@PE1# set dynamic-tunnels gre-dyn-tunnel-to-pe2 destination-networks 55.66.77.0/24
```

8. Export the load-balancing policy to the forwarding table.

```
[edit routing-options]
user@PE1# set forwarding-table export pplb
```

9. Configure a VRF routing instance on Device PE1 and other routing instance parameters.

```
[edit routing-instances]
user@PE1# set L3VPN-Over-GRE-PE1 instance-type vrf
user@PE1# set L3VPN-Over-GRE-PE1 interface ge-0/0/0.0
user@PE1# set L3VPN-Over-GRE-PE1 route-distinguisher 127.0.0.2:1
user@PE1# set L3VPN-Over-GRE-PE1 vrf-target target:600:1
```

10. Enable BGP in the routing instance configuration for peering with Device CE1.

```
[edit routing-instances]
user@PE1# set L3VPN-Over-GRE-PE1 protocols bgp group pe1-ce1 peer-as 200
```



```
user@PE1# set L3VPN-Over-GRE-PE1 protocols bgp group pe1-ce1 neighbor 10.0.0.1 as-override
```

### Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.0.0.2/8;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.0.2.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.0.0.2/8;
    }
  }
}
```

```
user@PE1# show routing-options
static {
  route 33.0.0.0/8 next-hop 192.0.2.2;
}
router-id 127.0.0.2;
autonomous-system 100;
dynamic-tunnels {
  gre next-hop-based-tunnel;
  gre-dyn-tunnel-to-pe2 {
    source-address 127.0.0.2;
  }
}
```



```

    gre;
    destination-networks {
        127.0.0.0/8;
    }
}
}

```

**user@PE1# show protocols**

```

bgp {
    group IBGP {
        type internal;
        local-address 127.0.0.2;
        family inet-vpn {
            unicast;
        }
        neighbor 127.0.0.4;
    }
}
ospf {
    area 0.0.0.0 {
        interface ge-0/0/1.0;
        interface lo0.0 {
            passive;
        }
    }
}
}

```

**user@PE1# show routing-instances**

```

L3VPN-Over-GRE-PE1 {
    instance-type vrf;
    interface ge-0/0/0.0;
    route-distinguisher 127.0.0.2:1;
    vrf-target target:600:1;
    protocols {
        bgp {
            group pe1-ce1 {
                peer-as 200;
                neighbor 10.0.0.1 {
                    as-override;
                }
            }
        }
    }
}

```



```
}
```

If you are done configuring the device, enter **commit** from configuration mode.

### Verification

#### IN THIS SECTION

- [Verifying the Connection Between PE Devices | 884](#)
- [Verify the Dynamic Tunnel Routes on Device PE1 | 885](#)
- [Verify the Dynamic Tunnel Routes on Device PE2 | 886](#)
- [Verifying That the Routes Have the Expected Indirect-Next-Hop Flag | 887](#)

Confirm that the configuration is working properly.

#### *Verifying the Connection Between PE Devices*

##### Purpose

Verify the BGP peering status between Device PE1 and Device PE2, and the BGP routes received from Device PE2.

##### Action

From operational mode, run the **show bgp summary** and **show route receive-protocol bgp ip-address table bgp.l3vpn.0** commands.

```
user@PE1> show bgp summary
```

Groups: 2 Peers: 2 Down peers: 0							
Table	Tot Paths	Act Paths	Suppressed	History	Damp	State	Pending
bgp.l3vpn.0							
	2	2	0	0		0	0
Peer	AS	InPkt	OutPkt	OutQ	Flaps	Last Up/Dwn	
State #Active/Received/Accepted/Damped...							
127.0.0.4	100	139	136	0	0	58:23	Establ
bgp.l3vpn.0: 2/2/2/0							
L3VPN-Over-GRE-PE1.inet.0: 2/2/2/0							
10.0.0.1	200	135	136	0	0	58:53	Establ



```
L3VPN-Over-GRE-PE1.inet.0: 1/1/1/0
```

```
user@PE1> show route receive-protocol bgp 127.0.0.4 table bgp.l3vpn.0
```

```
bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
  Prefix                Nexthop          MED      Lclpref    AS path
  127.0.0.4:1:127.0.0.5/8
  *                    127.0.0.4          100      200 I
  127.0.0.4:1:203.0.113.0/24
  *                    127.0.0.4          100      I
```

### Meaning

- In the first output, the BGP session state is **Establ**, which means that the session is up and the PE devices are peered.
- In the second output, Device PE1 has learned two BGP routes from Device PE2.

### Verify the Dynamic Tunnel Routes on Device PE1

#### Purpose

Verify the routes in the inet.3 routing table and the dynamic tunnel database information on Device PE1.

#### Action

From operational mode, run the **show route table inet.3** and **show dynamic-tunnels database terse** commands.

```
user@PE1> show route table inet.3
```

```
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

127.0.0.0/8      *[Tunnel/300] 01:01:45
                  Tunnel
127.0.0.4/8      *[Tunnel/300] 00:10:24
                  Tunnel Composite
```

```
user@PE1> show dynamic-tunnels database terse
```



Table: inet.3

Destination-network: 127.0.0.0/8

Destination	Source	Next-hop	Type	Status
127.0.0.4/8	127.0.0.2	0xb395e70 <b>nhid 612</b>	gre	<b>Up</b>

### Meaning

- In the first output, because Device PE1 is configured with the next-hop-based dynamic GRE tunnel, a tunnel composite route is created for the inet.3 routing table route entry.
- In the second output, the dynamic GRE tunnel created from Device PE1 to Device PE2 is up and has a next-hop ID assigned to it instead of a next-hop interface.

### Verify the Dynamic Tunnel Routes on Device PE2

#### Purpose

Verify the routes in the inet.3 routing table and the dynamic tunnel database information on Device PE2.

#### Action

From operational mode, run the **show route table inet.3** and **show dynamic-tunnels database terse** commands.

user@PE2> **show route table inet.3**

```
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

127.0.0.0/8      *[Tunnel/300] 01:06:52
                  Tunnel
127.0.0.2/8      *[Tunnel/300] 01:04:45
                  > via gr-0/1/0.32769
```

user@PE1> **show dynamic-tunnels database terse**

Table: inet.3

Destination-network: 127.0.0.0/8

Destination	Source	Next-hop	Type	Status
127.0.0.2/8	127.0.0.4	<b>gr-0/1/0.32769</b>	gre	Up



### Meaning

- In the first output, because Device PE2 has the default interface-based dynamic GRE tunnel configuration, a new interface is created for the inet.3 routing table route entry.
- In the second output, the dynamic GRE tunnel created from Device PE2 to Device PE1 is up, and has the newly created interface name assigned to it.

### Verifying That the Routes Have the Expected Indirect-Next-Hop Flag

#### Purpose

Verify that Device PE1 and Device PE2 are configured to maintain the indirect next hop to forwarding next-hop binding on the Packet Forwarding Engine forwarding table.

#### Action

From operational mode, run the **show krt indirect-next-hop** command on Device PE1 and Device PE2.

user@PE1> **show krt indirect-next-hop**

```
Indirect Nexthop:
Index: 1048574 Protocol next-hop address: 127.0.0.4
  RIB Table: bgp.l3vpn.0
  Label: Push 299792
  Policy Version: 1                      References: 2
  Locks: 3                               0xb2ab630
  Flags: 0x0
  INH Session ID: 0x0
  INH Version ID: 0
  Ref RIB Table: unknown

  Tunnel type: GRE, Reference count: 3, nhid: 612
    Destination address: 127.0.0.4, Source address: 127.0.0.2
    Tunnel id: 1, VPN Label: Push 299792, TTL action: prop-ttl
  IGP FRR Interesting proto count : 2
  Chain IGP FRR Node Num          : 1
    IGP Resolver node(hex)        : 0xb3c6d9c
    IGP Route handle(hex)         : 0xb1ad230      IGP rt_entry protocol
: Tunnel
    IGP Actual Route handle(hex) : 0x0             IGP Actual rt_entry protocol
: Any
```

user@PE2> **show krt indirect-next-hop**

```
Indirect Nexthop:
Index: 1048574 Protocol next-hop address: 127.0.0.2
```



```

RIB Table: bgp.l3vpn.0
Label: Push 299792
Policy Version: 2                      References: 2
Locks: 3                               0xb2ab630
Flags: 0x2
INH Session ID: 0x145
INH Version ID: 0
Ref RIB Table: unknown

  Next hop: via gr-0/1/0.32769
    Label operation: Push 299792
    Label TTL action: prop-ttl
    Load balance label: Label 299792: None;
    Label element ptr: 0xb395d40
    Label parent element ptr: 0x0
    Label element references: 1
    Label element child references: 0
    Label element lsp id: 0
    Session Id: 0x144
    IGP FRR Interesting proto count : 2
    Chain IGP FRR Node Num          : 1
      IGP Resolver node(hex)        : 0xb3d36e8
      IGP Route handle(hex)         : 0xb1af060      IGP rt_entry protocol
: Tunnel
      IGP Actual Route handle(hex) : 0x0              IGP Actual rt_entry protocol
: Any

```

### Meaning

- In the first output, Device PE1 has a next-hop-based dynamic GRE tunnel to Device PE2.
- In the second output, Device PE2 has an interface-based dynamic GRE tunnel to device PE1.

### Troubleshooting

#### IN THIS SECTION

- [Troubleshooting Commands | 889](#)

To troubleshoot the next-hop-based dynamic tunnels, see:



## Troubleshooting Commands

### Problem

The next-hop-based dynamic GRE tunnel configuration is not taking effect.

### Solution

To troubleshoot the next-hop-based GRE tunnel configuration, use the following **traceroute** commands at the **[edit routing-options dynamic-tunnels]** statement hierarchy:

- **traceoptions file *file-name***
- **traceoptions file size *file-size***
- **traceoptions flag *all***

For example:

```
[edit routing-options dynamic-tunnels]
traceoptions {
  file gre_dyn_pe1.wri size 4294967295;
  flag all;
}
```

### SEE ALSO

[Configuring GRE Tunnels for Layer 3 VPNs | 853](#)

[Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels | 889](#)

## Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels

### IN THIS SECTION

- [Requirements | 890](#)
- [Overview | 890](#)
- [Configuration | 894](#)
- [Verification | 902](#)
- [Troubleshooting | 907](#)



This example shows how to configure a dynamic MPLS-over-UDP tunnel that includes a tunnel composite next hop. The MPLS-over-UDP feature provides a scaling advantage on the number of IP tunnels supported on a device.

Starting in Junos OS Release 18.3R1, MPLS-over-UDP tunnels are supported on PTX Series routers and QFX Series switches. For every dynamic tunnel configured on a PTX router or a QFX switch, a tunnel composite next hop, an indirect next hop, and a forwarding next hop is created to resolve the tunnel destination route. You can also use policy control to resolve the dynamic tunnel over select prefixes by including the *forwarding-rib* configuration statement at the **[edit routing-options dynamic-tunnels]** hierarchy level.

## Requirements

This example uses the following hardware and software components:

- Five MX Series routers with MPCs and MICs.
- Junos OS Release 16.2 or later running on the PE routers.

Before you begin:

1. Configure the device interfaces, including the loopback interface.
2. Configure the router ID and autonomous system number for the device.
3. Establish an internal BGP (IBGP) session with the remote PE device.
4. Establish OSPF peering among the devices.

## Overview

Starting with Junos OS Release 16.2, a dynamic UDP tunnel supports the creation of a tunnel composite next hop for every UDP tunnel configured. These next-hop-based dynamic UDP tunnels are referred to as MPLS-over-UDP tunnels. The tunnel composite next hop are enabled by default for the MPLS-over-UDP tunnels.

MPLS-over-UDP tunnels can be bidirectional or unidirectional in nature. When the PE devices are connected over MPLS-over-UDP tunnels in both directions, it is called a bidirectional MPLS-over-UDP tunnel. When two PE devices are connected over MPLS-over-UDP tunnel in one direction, and over MPLS/IGP in the other direction, it is called an unidirectional MPLS-over-UDP tunnel.

Unidirectional MPLS-over-UDP tunnels are used in migration scenarios, or in cases where two PE devices provide connectivity to each other over two disjoint networks. Because reverse direction tunnel does not exist for unidirectional MPLS-over-UDP tunnels, you must configure a filter-based MPLS-over-UDP decapsulation on the remote PE device for forwarding the traffic.



Starting in Junos OS Release 18.2R1, on PTX series routers and QFX10000 with unidirectional MPLS-over-UDP tunnels, you must configure the remote PE device with an input filter for MPLS-over-UDP packets, and an action for decapsulating the IP and UDP headers for forwarding the packets in the reverse tunnel direction.

For example, on the remote PE device, Device PE2, the following configuration is required for unidirectional MPLS-over-UDP tunnels:

## PE2

```
[edit firewall filter]
user@host# set Decap_Filter term udp_decap from protocol udp
user@host# set Decap_Filter term udp_decap from destination-port 6635
user@host# set Decap_Filter term udp_decap then count UDP_PKTS
user@host# set Decap_Filter term udp_decap then decapsulate mpls-in-udp
user@host# set Decap_Filter term def then count def_pkt
user@host# set Decap_Filter term def then accept
```

In the above sample configuration, *Decap\_Filter* is the name of the firewall filter used for MPLS-over-UDP decapsulation. The term *udp\_decap* is the input filter for accepting UDP packets on the core-facing interface of Device PE2, and then decapsulate the MPLS-over-UDP packets to MPLS-over-IP packets for forwarding.

You can use the existing firewall operational mode commands, such as **show firewall filter** to view the filter-based MPLS-over-UDP decapsulation.

For example:

```
user@host >show firewall filter Decap_Filter
```

```
Filter: Decap_Filter
Counters:
Name                               Bytes          Packets
UDP_PKTS                           16744          149
def_pkt                             13049          136
```



**NOTE:**

For unidirectional MPLS-over-UDP tunnels:

- Only IPv4 address is supported as the outer header. Filter-based MPLS-over-UDP decapsulation does not support IPv6 address in the outer header.
- Only the default routing instance is supported after decapsulation.

Starting in Junos OS Release 17.1, on MX Series routers with MPCs and MICs, the scaling limit of MPLS-over-UDP tunnels is increased.

Starting in Junos Release 19.2R1, on MX Series routers with MPCs and MICs, carrier supporting carrier (CSC) architecture can be deployed with MPLS-over-UDP tunnels carrying MPLS traffic over dynamic IPv4 UDP tunnels that are established between supporting carrier's PE devices. With this enhancement, the scaling advantage that the MPLS-over-UDP tunnels provided is further increased. The CSC support with MPLS-over-UDP tunnel is not supported for IPv6 UDP tunnel.

The existing dynamic tunnel feature requires complete static configuration. Currently, the tunnel information received from peer devices in advertised routes is ignored. Starting in Junos OS Release 17.4R1, on MX Series routers, the next-hop-based dynamic MPLS-over-UDP tunnels are signaled using BGP encapsulation extended community. BGP export policy is used to specify the tunnel types, advertise the sender side tunnel information, and parse and convey the receiver side tunnel information. A tunnel is created according to the received type tunnel community.

Multiple tunnel encapsulations are supported by BGP. On receiving multiple capability, the next-hop-based dynamic tunnel is created based on the configured BGP policy and tunnel preference. The tunnel preference should be consistent across both the tunnel ends for the tunnel to be set up. By default, MPLS-over-UDP tunnel is preferred over GRE tunnels. If dynamic tunnel configuration exists, it takes precedence over received tunnel community.

When configuring a next-hop-based dynamic MPLS-over-UDP tunnel, be aware of the following considerations:

- An IBGP session must be configured between the PE devices.
- A switchover between the next-hop-based dynamic tunnel encapsulations (UDP and GRE) is allowed, and this can impact network performance in terms of the supported IP tunnel scaling values in each mode.
- Having both GRE and UDP next-hop-based dynamic tunnel encapsulation types for the same tunnel destination leads to a commit failure.
- For unidirectional MPLS-over-UDP tunnels, you must explicitly configure filter-based MPLS-over-UDP decapsulation on the remote PE device for the packets to be forwarded.



- Graceful Routing Engine switchover (GRES) is supported with MPLS-over-UDP, and the MPLS-over-UDP tunnel type flags are unified ISSU and NSR compliant.
- MPLS-over-UDP tunnels are supported on virtual MX (vMX).
- MPLS-over-UDP tunnels support dynamic GRE tunnel creation based upon new IPv4-mapped-IPv6 next hops.
- MPLS-over-UDP tunnel are supported in interoperability with contrail, wherein the MPLS-over-UDP tunnels are created from the contrail vRouter to an MX gateway. To enable this, the following community is required to be advertised in the route from the MX Series router to the contrail vRouter:

```
[edit policy-options community]
  udp members 0x030c:64512:13;
```

At a given point in time, only one tunnel type is supported on the contrail vRouter—next-hop-based dynamic GRE tunnels, MPLS-over-UDP tunnels, or VXLAN.


- The following features are not supported with the next-hop-based dynamic MPLS-over-UDP tunnel configuration:
  - RSVP automatic mesh
  - Plain IPV6 GRE and UDP tunnel configuration
  - Logical systems

### **Topology**

[Figure 73 on page 894](#) illustrates a Layer 3 VPN scenario over dynamic MPLS-over-UDP tunnels. The customer edge (CE) devices, CE1 and CE2, connect to provider edge (PE) devices, PE1 and PE2, respectively. The PE devices are connected to a provider device (Device P1), and an internal BGP (IBGP) session interconnects the two PE devices. A dynamic next-hop-based bidirectional MPL-over-UDP tunnel is configured between the PE devices.



Figure 73: Dynamic MPLS-over-UDP Tunnels

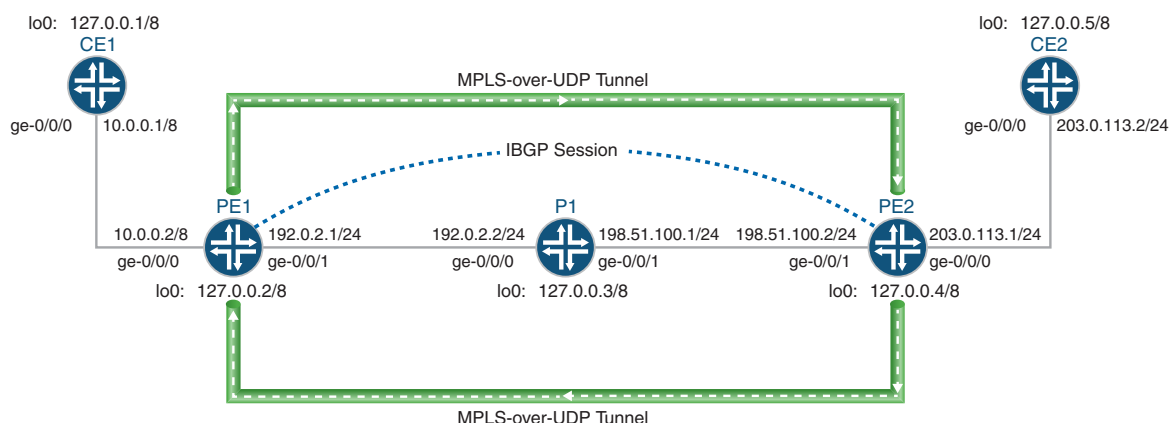

The MPLS-over-UDP tunnel is handled as follows:

1. After a MPLS-over-UDP tunnel is configured, a tunnel destination mask route with a tunnel composite next hop is created for the tunnel in the inet.3 routing table. This IP tunnel route is withdrawn only when the dynamic tunnel configuration is deleted.

The tunnel composite next-hop attributes include the following:

- When Layer 3 VPN composite next hop is disabled—Source and destination address, encapsulation string, and VPN label.
  - When Layer 3 VPN composite next hop and per-prefix VPN label allocation are enabled—Source address, destination address, and encapsulation string.
  - When Layer 3 VPN composite next hop is enabled and per-prefix VPN label allocation is disabled—Source address, destination address, and encapsulation string. The route in this case is added to the other virtual routing and forwarding instance table with a secondary route.
2. The PE devices are interconnected using an IBGP session. The IBGP route next hop to a remote BGP neighbor is the protocol next hop, which is resolved using the tunnel mask route with the tunnel next hop.
  3. After the protocol next hop is resolved over the tunnel composite next hop, indirect next hops with forwarding next hops are created.
  4. The tunnel composite next hop is used to forward the next hops of the indirect next hops.

## Configuration

### CLI Quick Configuration



To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

#### CE1

```
set interfaces ge-0/0/0 unit 0 family inet address 10.0.0.1/8
set interfaces lo0 unit 0 family inet address 127.0.0.1/8
set routing-options router-id 127.0.0.1
set routing-options autonomous-system 200
set protocols bgp group ce1-pe1 export export-loopback-direct
set protocols bgp group ce1-pe1 peer-as 100
set protocols bgp group ce1-pe1 neighbor 10.0.0.2
set policy-options policy-statement export-loopback-direct term term-1 from interface lo0.0
set policy-options policy-statement export-loopback-direct term term-1 from route-filter 127.0.0.1/8
  exact
set policy-options policy-statement export-loopback-direct term term-1 then accept
```

#### CE2

```
set interfaces ge-0/0/0 unit 0 family inet address 203.0.113.2/24
set interfaces lo0 unit 0 family inet address 127.0.0.5/8
set routing-options router-id 127.0.0.5
set routing-options autonomous-system 200
set protocols bgp group ce1-pe1 export export-loopback-direct
set protocols bgp group ce1-pe1 peer-as 100
set protocols bgp group ce1-pe1 neighbor 203.0.113.1
set policy-options policy-statement export-loopback-direct term term-1 from interface lo0.0
set policy-options policy-statement export-loopback-direct term term-1 from route-filter 127.0.0.5/8
  exact
set policy-options policy-statement export-loopback-direct term term-1 then accept
```

#### PE1

```
set interfaces ge-0/0/0 unit 0 family inet address 10.0.0.2/8
set interfaces ge-0/0/1 unit 0 family inet address 192.0.2.1/24
set interfaces ge-0/0/1 unit 0 family mpls
```



```

set interfaces lo0 unit 0 family inet address 127.0.0.2/8
set routing-options static route 33.0.0.0/8 next-hop 192.0.2.2
set routing-options router-id 127.0.0.2
set routing-options autonomous-system 100
set routing-options forwarding-table export pplb
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe2 source-address 127.0.0.2
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe2 udp
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe2 destination-networks 127.0.0.0/8
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 127.0.0.2
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 127.0.0.4
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-instances MPLS-over-UDP-PE1 instance-type vrf
set routing-instances MPLS-over-UDP-PE1 interface ge-0/0/0.0
set routing-instances MPLS-over-UDP-PE1 route-distinguisher 127.0.0.2:1
set routing-instances MPLS-over-UDP-PE1 vrf-target target:600:1
set routing-instances MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 peer-as 200
set routing-instances MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 neighbor 10.0.0.1 as-override

```

P1

```

set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.3/8
set routing-options router-id 127.0.0.3
set routing-options autonomous-system 100
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

PE2



```

set interfaces ge-0/0/0 unit 0 family inet address 203.0.113.1/24
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.4/8
set routing-options nonstop-routing
set routing-options router-id 127.0.0.4
set routing-options autonomous-system 100
set routing-options forwarding-table export pplb
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe1 source-address 127.0.0.4
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe1 udp
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe1 destination-networks 127.0.0.0/8
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 127.0.0.4
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 127.0.0.2
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-instances MPLS-over-UDP-PE2 instance-type vrf
set routing-instances MPLS-over-UDP-PE2 interface ge-0/0/0.0
set routing-instances MPLS-over-UDP-PE2 route-distinguisher 127.0.0.4:1
set routing-instances MPLS-over-UDP-PE2 vrf-target target:600:1
set routing-instances MPLS-over-UDP-PE2 protocols bgp group ebgp peer-as 200
set routing-instances MPLS-over-UDP-PE2 protocols bgp group ebgp neighbor 203.0.113.2 as-override

```

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the device interfaces including the loopback interface of the device.

```

[edit interfaces]
user@PE1# set ge-0/0/0 unit 0 family inet address 10.0.0.2/8
user@PE1# set ge-0/0/1 unit 0 family inet address 192.0.2.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 127.0.0.2/8

```

2. Configure a static route for routes from Device PE1 with Device P1 as the next-hop destination.



```
[edit routing-options]
user@PE1# set static route 33.0.0.0/8 next-hop 192.0.2.2
```

3. Configure the router-ID and autonomous system number for Device PE1.

```
[edit routing-options]
user@PE1# set router-id 127.0.0.2
user@PE1# set autonomous-system 100
```

4. (PTX Series only) Configure policy control to resolve the MPLS-over-UDP dynamic tunnel route over select prefixes.

```
[edit routing-options dynamic-tunnels]
user@PTX-PE1# set forwarding-rib inet.0 inet-import dynamic-tunnel-fwd-route-import
```

5. (PTX Series only) Configure the inet-import policy for resolving dynamic tunnel destination routes over

```
[edit policy-options]
user@PTX-PE1# set policy-statement dynamic-tunnel-fwd-route-import term 1 from route-filter 127.0.0.0/8
exact
user@PTX-PE1# set policy-statement dynamic-tunnel-fwd-route-import term 1 then accept
user@PTX-PE1# set policy-options policy-statement dynamic-tunnel-fwd-route-import then reject
```

6. Configure IBGP peering between the PE devices.

```
[edit protocols]
user@PE1# set bgp group IBGP type internal
user@PE1# set bgp group IBGP local-address 127.0.0.2
user@PE1# set bgp group IBGP family inet-vpn unicast
user@PE1# set bgp group IBGP neighbor 127.0.0.4
```

7. Configure OSPF on all the interfaces of Device PE1, excluding the management interface.

```
[edit protocols]
user@PE1# set ospf area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set ospf area 0.0.0.0 interface lo0.0 passive
```



8. Enable next-hop-based dynamic GRE tunnel configuration on Device PE1.

**NOTE:** This step is required only for illustrating the implementation difference between next-hop-based dynamic GRE tunnels and MPLS-over-UDP tunnels.

```
[edit routing-options]
user@PE1# set dynamic-tunnels gre next-hop-based-tunnel
```

9. Configure the MPLS-over-UDP tunnel parameters from Device PE1 to Device PE2.

```
[edit routing-options]
user@PE1# set dynamic-tunnels udp-dyn-tunnel-to-pe2 source-address 127.0.0.2
user@PE1# set dynamic-tunnels udp-dyn-tunnel-to-pe2 udp
user@PE1# set dynamic-tunnels udp-dyn-tunnel-to-pe2 destination-networks 127.0.0.0/8
```

10. Configure a VRF routing instance on Device PE1 and other routing instance parameters.

```
[edit routing-instances]
user@PE1# set MPLS-over-UDP-PE1 instance-type vrf
user@PE1# set MPLS-over-UDP-PE1 interface ge-0/0/0.0
user@PE1# set MPLS-over-UDP-PE1 route-distinguisher 127.0.0.2:1
user@PE1# set MPLS-over-UDP-PE1 vrf-target target:600:1
```

11. Enable BGP in the routing instance configuration for peering with Device CE1.

```
[edit routing-instances]
user@PE1# set MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 peer-as 200
user@PE1# set MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 neighbor 10.0.0.1 as-override
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  unit 0 {
```



```

        family inet {
            address 10.0.0.2/8;
        }
    }
}
ge-0/0/1 {
    unit 0 {
        family inet {
            address 192.0.2.1/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 127.0.0.2/8;
        }
    }
}

```

```

user@PE1# show routing-options
static {
    route 33.0.0.0/8 next-hop 192.0.2.2;
}
router-id 127.0.0.2;
autonomous-system 100;
forwarding-table {
    export pplb;
}
dynamic-tunnels {
    gre next-hop-based-tunnel;
    udp-dyn-tunnel-to-pe2 {
        source-address 127.0.0.2;
        udp;
        destination-networks {
            127.0.0.0/8;
        }
    }
}

```

```

user@PE1# show protocols
bgp {

```



```

group IBGP {
    type internal;
    local-address 127.0.0.2;
    family inet-vpn {
        unicast;
    }
    neighbor 127.0.0.4;
}
}
ospf {
    area 0.0.0.0 {
        interface ge-0/0/1.0;
        interface lo0.0 {
            passive;
        }
    }
}
}

```

user@PE1# **show routing-instances**

```

MPLS-over-UDP-PE1 {
    instance-type vrf;
    interface ge-0/0/0.0;
    route-distinguisher 127.0.0.2:1;
    vrf-target target:600:1;
    protocols {
        bgp {
            group pe1-ce1 {
                peer-as 200;
                neighbor 10.0.0.1 {
                    as-override;
                }
            }
        }
    }
}
}

```

If you are done configuring the device, enter **commit** from configuration mode.



## Verification

### IN THIS SECTION

- [Verifying the Connection Between PE Devices | 902](#)
- [Verify the Dynamic Tunnel Routes on Device PE1 | 903](#)
- [Verify the Dynamic Tunnel Routes on Device PE2 | 905](#)
- [Verifying That the Routes Have the Expected Indirect-Next-Hop Flag | 905](#)

Confirm that the configuration is working properly.

### *Verifying the Connection Between PE Devices*

#### Purpose

Verify the BGP peering status between Device PE1 and Device PE2, and the BGP routes received from Device PE2.

#### Action

From operational mode, run the **show bgp summary** and **show route receive-protocol bgp ip-address table bgp.l3vpn.0** commands.

```
user@PE1> show bgp summary
```

```
Groups: 2 Peers: 2 Down peers: 0
Table          Tot Paths  Act Paths Suppressed    History  Damp State    Pending
bgp.l3vpn.0
                2          2          0          0          0          0
Peer           AS        InPkt    OutPkt    OutQ     Flaps  Last Up/Dwn
State|#Active/Received/Accepted/Damped...
127.0.0.4      100        139      136       0         0      58:23 Establ

  bgp.l3vpn.0: 2/2/2/0
  MPLS-over-UDP-PE1.inet.0: 2/2/2/0
10.0.0.1       200        135      136       0         0      58:53 Establ

  MPLS-over-UDP-PE1.inet.0: 1/1/1/0
```

```
user@PE1> show route receive-protocol bgp 127.0.0.4 table bgp.l3vpn.0
```



```

bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
  Prefix                Nexthop                MED      Lclpref    AS path
  127.0.0.4:1:127.0.0.5/8
*                   127.0.0.4                   100      200 I
  127.0.0.4:1:200.1.1.0/24
*                   127.0.0.4                   100      I

```

### Meaning

- In the first output, the BGP session state is **Establ**, which means that the session is up and the PE devices are peered.
- In the second output, Device PE1 has learned two BGP routes from Device PE2.

### Verify the Dynamic Tunnel Routes on Device PE1

#### Purpose

Verify the routes in the inet.3 routing table and the dynamic tunnel database information on Device PE1.

#### Action

From operational mode, run the **show route table inet.3**, **show dynamic-tunnels database terse**, **show dynamic-tunnels database**, and **show dynamic-tunnels database summary** commands.

```
user@PE1> show route table inet.3
```

```

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

127.0.0.0/8      *[Tunnel/300] 00:21:18
                  Tunnel
127.0.0.4/8      *[Tunnel/300] 00:21:18
                  Tunnel Composite

```

```
user@PE1> show dynamic-tunnels database terse
```

```

Table: inet.3

Destination-network: 127.0.0.0/8

```



Destination	Source	Next-hop	Type	Status
127.0.0.4/8	127.0.0.2	0xb395b10 nhid 613	udp Up	

user@PE1> **show dynamic-tunnels database**

```
Table: inet.3

Destination-network: 55.0.0.0/8

Destination-network: 55.66.0.0/16

Destination-network: 55.66.77.0/24
Tunnel to: 127.0.0.4/8
Reference count: 2
Next-hop type: UDP
Source address: 127.0.0.2 Tunnel Id: 2
Next hop: tunnel-composite, 0xb395b10, nhid 613
VPN Label: Push 299776 Reference count: 3
Traffic Statistics: Packets 0, Bytes 0
State: Up
```

user@PE1> **show dynamic-tunnels database summary**

```
Dynamic Tunnels, Total 1 displayed
GRE Tunnel:
Active Tunnel Mode, Next Hop Base
IFL Based, Total 0 displayed, Up 0, Down 0
Nexthop Based, Total 0 displayed, Up 0, Down 0
RSVP Tunnel:
Total 0 displayed
UDP Tunnel:
Total 1 displayed, Up 1, Down 0
```

### Meaning

- In the first output, because Device PE1 is configured with the MPLS-over-UDP tunnel, a tunnel composite route is created for the inet.3 routing table route entry.
- In the remaining outputs, the MPLS-over-UDP tunnel is displayed with the tunnel encapsulation type, tunnel next hop parameters, and tunnel status.



### Verify the Dynamic Tunnel Routes on Device PE2

#### Purpose

Verify the routes in the inet.3 routing table and the dynamic tunnel database information on Device PE2.

#### Action

From operational mode, run the **show route table inet.3**, and the **show dynamic-tunnels database terse** commands.

user@PE2> **show route table inet.3**

```
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

127.0.0.0/8      *[Tunnel/300] 00:39:31
                  Tunnel
127.0.0.2/8      *[Tunnel/300] 00:24:53
                  Tunnel Composite
```

user@PE1> **show dynamic-tunnels database terse**

```
Table: inet.3

Destination-network: 127.0.0.0/8
Destination      Source      Next-hop      Type      Status
127.0.0.2/8      127.0.0.4   0xb395450 nhid 615   udp      Up
```

#### Meaning

The outputs show the MPLS-over-UDP tunnel creation and the next-hop ID assigned as the next-hop interface, similar to Device PE1.

### Verifying That the Routes Have the Expected Indirect-Next-Hop Flag

#### Purpose

Verify that Device PE1 and Device PE2 are configured to maintain the indirect next hop to forwarding next-hop binding on the Packet Forwarding Engine forwarding table.

#### Action

From operational mode, run the **show krt indirect-next-hop** command on Device PE1 and Device PE2.

user@PE1> **show krt indirect-next-hop**



```

Indirect Nexthop:
Index: 1048574 Protocol next-hop address: 127.0.0.4
  RIB Table: bgp.l3vpn.0
  Label: Push 299776
  Policy Version: 1                      References: 1
  Locks: 3                               0xb2ab630
  Flags: 0x0
  INH Session ID: 0x0
  INH Version ID: 0
  Ref RIB Table: unknown
    Tunnel type: UDP, Reference count: 3, nhid: 613
    Destination address: 127.0.0.4, Source address: 127.0.0.2
    Tunnel id: 2, VPN Label: Push 299776, TTL action: prop-ttl
    IGP FRR Interesting proto count : 1
    Chain IGP FRR Node Num          : 1
      IGP Resolver node(hex)        : 0xb3c70dc
      IGP Route handle(hex)         : 0xb1ae688      IGP rt_entry protocol
: Tunnel
      IGP Actual Route handle(hex) : 0x0             IGP Actual rt_entry protocol
: Any

```

user@PE2> show krt indirect-next-hop

```

Indirect Nexthop:
Index: 1048575 Protocol next-hop address: 127.0.0.2
  RIB Table: bgp.l3vpn.0
  Label: Push 299776
  Policy Version: 1                      References: 2
  Locks: 3                               0xb2ab740
  Flags: 0x0
  INH Session ID: 0x0
  INH Version ID: 0
  Ref RIB Table: unknown
    Tunnel type: UDP, Reference count: 3, nhid: 615
    Destination address: 127.0.0.2, Source address: 127.0.0.4
    Tunnel id: 1, VPN Label: Push 299776, TTL action: prop-ttl
    IGP FRR Interesting proto count : 2
    Chain IGP FRR Node Num          : 1
      IGP Resolver node(hex)        : 0xb3d3a28
      IGP Route handle(hex)         : 0xb1ae634      IGP rt_entry protocol
: Tunnel
      IGP Actual Route handle(hex) : 0x0             IGP Actual rt_entry protocol
: Any

```



## Meaning

The outputs show that a next-hop-based dynamic MPLS-over-UDP tunnel is created between the PE devices.

## Troubleshooting

### IN THIS SECTION

- [Troubleshooting Commands | 907](#)

To troubleshoot the next-hop-based dynamic tunnels, see:

### *Troubleshooting Commands*

#### Problem

The next-hop-based dynamic MPLS-over-UDP tunnel configuration is not taking effect.

#### Solution

To troubleshoot the next-hop-based MPLS-over-UDP tunnel configuration, use the following **tracertoute** commands at the **[edit routing-options dynamic-tunnels]** statement hierarchy:

- **traceoptions file *file-name***
- **traceoptions file size *file-size***
- **traceoptions flag all**

For example:

```
[edit routing-options dynamic-tunnels]
traceoptions {
  file udp_dyn_pe1.wri size 4294967295;
  flag all;
}
```

#### SEE ALSO

[Configuring GRE Tunnels for Layer 3 VPNs | 853](#)

[Example: Configuring a Next-Hop-Based Dynamic GRE Tunnels | 874](#)



## Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview

With the rise in deployment of high-scale IP tunnels in data centers, there is a need to add security measures that allow users to limit malicious traffic from compromised virtual machines (VMs). One possible attack is the injecting of traffic into an arbitrary customer VPN from a compromised server through the gateway router. In such cases, anti-spoofing checks on IP tunnels ensure that only legitimate sources are injecting traffic into data centers from their designated IP tunnels.


Next-hop-based dynamic IP tunnels create a tunnel composite next hop for every dynamic tunnel created on the device. Because next-hop-based dynamic tunnels remove the dependency on physical interfaces for every new dynamic tunnel configured, configuring next-hop-based dynamic tunnels provides a scaling advantage over the number of dynamic tunnels that can be created on a device. Starting in Junos OS Release 17.1, anti-spoofing capabilities for next-hop-based dynamic IP tunnels is provided for next-hop-based dynamic tunnels. With this enhancement, a security measure is implemented to prevent injecting of traffic into an arbitrary customer VPN from a compromised server through the gateway router.

Anti-spoofing is implemented using reverse path forwarding checks in the Packet Forwarding Engine. The checks are implemented for the traffic coming through the tunnel to the routing instance. Currently, when the gateway router receives traffic from a tunnel, only the destination lookup is done and the packet is forwarded accordingly. When anti-spoofing protection is enabled, the gateway router also does a source address lookup of the encapsulation packet IP header in the VPN, in addition to the tunnel destination lookup. This ensures that legitimate sources are injecting traffic through their designated IP tunnels. As a result, anti-spoofing protection ensures that the tunnel traffic is received from a legitimate source on the designated tunnels.

[Figure 74 on page 909](#) illustrates a sample topology with the requirements for anti-spoofing protection.



Figure 74: Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels

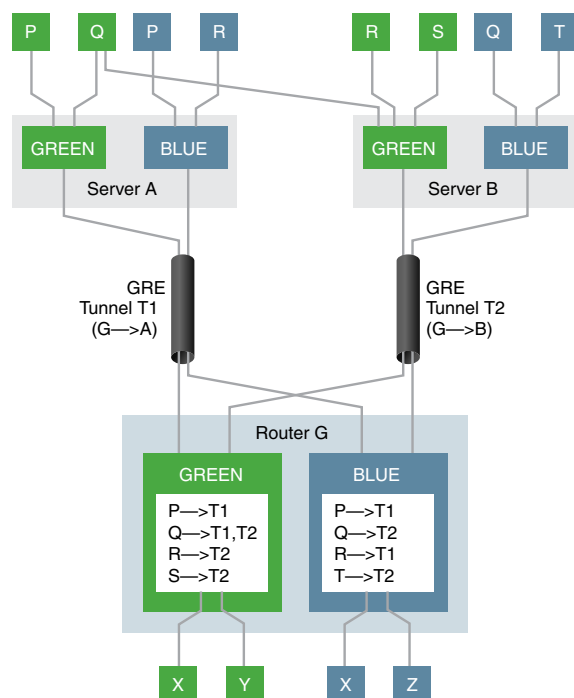

In this example, the gateway router is Router G. Router G has two VPNs—Green and Blue. The two servers, Server A and Server B, can reach the Green and Blue VPNs on Router G through the next-hop-based dynamic tunnels T1 and T2, respectively. Several hosts and virtual machines (P, Q, R, S, and T) connected to the servers can reach the VPNs through the gateway router, Router G. Router G has the virtual routing and forwarding (VRF) tables for Green and Blue VPNs, each populated with the reachability information for the virtual machines in those VPNs.

For example, in VPN Green, Router G uses tunnel T1 to reach host P, tunnel T2 to reach hosts R and S, and load balancing is done between tunnels T1 and T2 to reach the multihomed host Q. In VPN Blue, Router G uses tunnel T1 to reach hosts P and R, and tunnel T2 to reach hosts Q and T.

The check passes for reverse path forwarding when:

- A packet comes from a legitimate source on its designated tunnel.

Host P in VPN Green sends a packet to host X using tunnel T1. Because Router G can reach host P through tunnel T1, it allows the packet to pass and forwards the packet to host X.

- A packet comes from a multihomed source on its designated tunnels.

Host Q in VPN Green is multihomed on servers A and B, and can reach Router G through tunnels T1 and T2. Host Q sends a packet to host Y using tunnel T1, and a packet to host X using tunnel T2. Because Router G can reach host Q through tunnels T1 and T2, it allows the packets to pass and forwards them to hosts Y and X, respectively.



Layer 3 VPNs do not have anti-spoofing protection enabled by default. To enable anti-spoofing for next-hop-based dynamic tunnels, include the **ip-tunnel-rpf-check** statement at the **[edit routing-instances routing-instance-name routing-options forwarding-table]** hierarchy level. The reverse path forwarding check is applied to the VRF routing instance only. The default mode is set to **strict**, where the packet that comes from a source on a nondesignated tunnel does not pass the check. The **ip-tunnel-rpf-check** mode can be set as **loose**, where the reverse path forwarding check fails when the packet comes from a nonexistent source. An optional firewall filter can be configured under the **ip-tunnel-rpf-check** statement to count and log the packets that failed the reverse path forwarding check.

The following sample output shows an anti-spoofing configuration:

```
[edit routing-instances routing-instance-name routing-options forwarding-table]
ip-tunnel-rpf-check {
  mode loose;
  fail-filter filter-name;
}
```

Take the following guidelines under consideration when configuring anti-spoofing protection for next-hop-based dynamic tunnels:

- Anti-spoofing protection can be enabled for IPv4 tunnels and IPv4 data traffic only. The anti-spoofing capabilities are not supported on IPv6 tunnels and IPv6 data traffic.
- Anti-spoofing for next-hop-based dynamic tunnels can detect and prevent a compromised virtual machine (inner source reverse path forwarding check) but not a compromised server that is label-spoofing.
- The next-hop-based IP tunnels can originate and terminate on an inet.0 routing table.
- Anti-spoofing protection is effective when the VRF routing instance has label-switched interfaces (LSIs) (using the **vrf-table-label**), or virtual tunnel (VT) interfaces. With **per-next-hop** label on the VRF routing instance, anti-spoofing protection is not supported.
- The **rpf fail-filter** is applicable only to the inner IP packet.
- Enabling anti-spoofing checks does not affect the scaling limit of the next-hop-based dynamic tunnels on a device.
- The system resource utilization with anti-spoofing protection enabled for the VRF routing instance is slightly higher than the utilization of next-hop-based dynamic tunnels without the anti-spoofing protection enabled.
- Anti-spoofing protection requires additional source IP address checks, which has minimal impact on network performance.
- Graceful Routing Engine switchover (GRES) and in-service software upgrade (ISSU) are supported with anti-spoofing protection.



SEE ALSO

[ip-tunnel-rpf-check | 1304](#)

[Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels | 911](#)

## Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels

### IN THIS SECTION

- [Requirements | 911](#)
- [Overview | 912](#)
- [Configuration | 913](#)
- [Verification | 921](#)

This example shows how to configure reverse path forwarding checks for the virtual routing and forwarding (VRF) routing instance to enable anti-spoofing protection for next-hop-based dynamic tunnels. The checks ensure that legitimate sources are injecting traffic through their designated IP tunnels.

### Requirements

This example uses the following hardware and software components:

- Three MX Series Routers with MICs, each connected to a host device.
- Junos OS Release 17.1 or later running on one or all the routers.

Before you begin:

- Enable tunnel services configuration on the Flexible PIC Concentrator.
- Configure the router interfaces.
- Configure the router-ID and assign an autonomous system number for the router.
- Establish an internal BGP (IBGP) session with the tunnel endpoints.
- Configure RSVP on all the routers.
- Configure OSPF or any other interior gateway protocol on all the routers.



- Configure two dynamic next-hop-based IP tunnels between the two routers.
- Configure a VRF routing instance for every router-to-host connection.

## Overview

Starting in Junos OS Release 17.1, anti-spoofing capabilities are added to next-hop-based dynamic IP tunnels, where checks are implemented for the traffic coming through the tunnel to the routing instance using reverse path forwarding in the Packet Forwarding Engine.

Currently, when the gateway router receives traffic from a tunnel, only the destination address lookup is done before forwarding. With anti-spoofing protection, the gateway router does a source address lookup of the encapsulation packet IP header in the VPN to ensure that legitimate sources are injecting traffic through their designated IP tunnels. This is called the strict mode and is the default behavior of anti-spoofing protection. To pass traffic from nondesignated tunnels, the reverse path forwarding check is enabled in the loose mode. For traffic received from nonexistent sources, the reverse path forwarding check fails for both the strict and loose modes.


Anti-spoofing is supported on VRF routing instances. To enable anti-spoofing for dynamic tunnels, include the **ip-tunnel-rpf-check** statement at the **[edit routing-instances routing-instance-name routing-options forwarding-table]** hierarchy level.

## Topology

[Figure 75 on page 913](#) illustrates a sample network topology enabled with anti-spoofing protection. Routers R0, R1 and R2 are each connected to hosts Host0, Host1, and Host2, respectively. Two generic routing encapsulation (GRE) next-hop-based dynamic tunnels, Tunnel 1 and Tunnel 2 – connect Router R0 with Routers R1 and R2, respectively. The VRF routing instance is running between each router and its connected host devices.



Figure 75: Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels

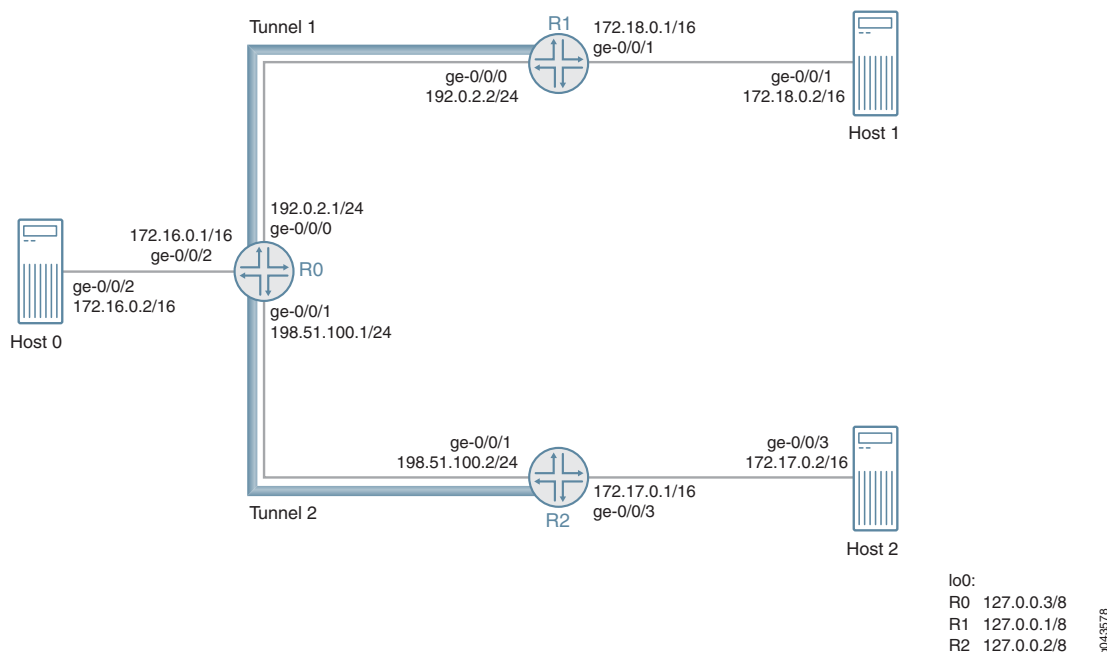

Taking as an example, three packets (Packets A, B, and C) are received on Router 0 from Router R2 through the next-hop-based dynamic GRE tunnel (Tunnel 2). The source IP address of these packets are 172.17.0.2 (Packet A), 172.18.0.2 (Packet B), and 172.20.0.2 (Packet C).

The source IP address of Packets A and B belong to Host 2 and Host 1, respectively. Packet C is a nonexistent source tunnel. The designated tunnel in this example is Tunnel 2, and the nondesignated tunnel is Tunnel 1. Therefore, the packets are processed as follows:

- **Packet A**—Because the source is coming from a designated tunnel (Tunnel 2), Packet A passes the reverse path forwarding check and is processed for forwarding through Tunnel 2.
- **Packet B**—Because the source is coming from Tunnel 1, which is a nondesignated tunnel, by default, Packet B fails the reverse path forwarding check in the strict mode. If loose mode is enabled, Packet B is allowed for forwarding.
- **Packet C**—Because the source is a nonexistent tunnel source, Packet C fails the reverse path forwarding check, and the packet is not forwarded.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.



## Router R0

```
set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.1/24
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.1/24
set interfaces ge-0/0/2 vlan-tagging
set interfaces ge-0/0/2 unit 0 vlan-id 1
set interfaces ge-0/0/2 unit 0 family inet address 172.16.0.1/16
set interfaces lo0 unit 0 family inet address 10.1.1.1/32
set routing-options router-id 10.1.1.1
set routing-options autonomous-system 100
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels T1 source-address 192.0.2.1
set routing-options dynamic-tunnels T1 gre
set routing-options dynamic-tunnels T1 destination-networks 192.0.2.0/24
set routing-options dynamic-tunnels T2 source-address 198.51.100.1
set routing-options dynamic-tunnels T2 gre
set routing-options dynamic-tunnels T2 destination-networks 198.51.100.0/24
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 10.1.1.1
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 20.1.1.1
set protocols bgp group IBGP neighbor 30.1.1.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface all
set routing-instances VPN1 instance-type vrf
set routing-instances VPN1 interface ge-0/0/2.0
set routing-instances VPN1 route-distinguisher 100:100
set routing-instances VPN1 vrf-target target:100:1
set routing-instances VPN1 vrf-table-label
set routing-instances VPN1 routing-options forwarding-table ip-tunnel-rpf-check mode strict
set routing-instances VPN1 protocols bgp group External type external
set routing-instances VPN1 protocols bgp group External family inet unicast
set routing-instances VPN1 protocols bgp group External peer-as 200
set routing-instances VPN1 protocols bgp group External neighbor 172.16.0.1
```

## Router R1



```

set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-0/0/1 vlan-tagging
set interfaces ge-0/0/1 unit 0 vlan-id 2
set interfaces ge-0/0/1 unit 0 family inet address 172.18.0.1/16
set interfaces lo0 unit 0 family inet address 20.1.1.1/32
set routing-options router-id 20.1.1.1
set routing-options autonomous-system 100
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels T1 source-address 192.0.2.2
set routing-options dynamic-tunnels T1 gre
set routing-options dynamic-tunnels T1 destination-networks 192.0.2.0/24
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 20.1.1.1
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 30.1.1.1
set protocols bgp group IBGP neighbor 10.1.1.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface all
set routing-instances VPN2 instance-type vrf
set routing-instances VPN2 interface ge-0/0/1.0
set routing-instances VPN2 route-distinguisher 100:200
set routing-instances VPN2 vrf-target target:200:1
set routing-instances VPN2 vrf-table-label

```

R2

```

set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.2/24
set interfaces ge-0/0/2 vlan-tagging
set interfaces ge-0/0/2 unit 0 vlan-id 3
set interfaces ge-0/0/2 unit 0 family inet address 172.17.0.1/16
set interfaces lo0 unit 0 family inet address 30.1.1.1/32
set routing-options router-id 30.1.1.1
set routing-options autonomous-system 100
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels T2 source-address 198.51.100.2
set routing-options dynamic-tunnels T2 gre
set routing-options dynamic-tunnels T2 destination-networks 198.51.100.0/24

```



```

set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 30.1.1.1
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 20.1.1.1
set protocols bgp group IBGP neighbor 10.1.1.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface all
set routing-instances VPN3 instance-type vrf
set routing-instances VPN3 interface ge-0/0/2.0
set routing-instances VPN3 route-distinguisher 100:300
set routing-instances VPN3 vrf-target target:300:1
set routing-instances VPN3 vrf-table-label

```

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router R0:

1. Configure Router R0's interfaces, including the loopback interface.

```

[edit interfaces]
user@R0# set ge-0/0/0 unit 0 family inet address 192.0.2.1/24
user@R0# set ge-0/0/1 unit 0 family inet address 198.51.100.1/24
user@R0# set ge-0/0/2 vlan-tagging
user@R0# set ge-0/0/2 unit 0 vlan-id 1
user@R0# set ge-0/0/2 unit 0 family inet address 172.16.0.1/16
user@R0# set lo0 unit 0 family inet address 10.1.1.1/32

```

2. Assign the router ID and autonomous system number for Router R0.

```

[edit routing-options]
user@R0# set router-id 10.1.1.1
user@R0# set autonomous-system 100

```

3. Configure IBGP peering between the routers.



```
[edit protocols]
user@R0# set bgp group IBGP type internal
user@R0# set bgp group IBGP local-address 10.1.1.1
user@R0# set bgp group IBGP family inet-vpn unicast
user@R0# set bgp group IBGP neighbor 20.1.1.1
user@R0# set bgp group IBGP neighbor 30.1.1.1
```

4. Configure OSPF on all the interfaces of Router R0, excluding the management interface.

```
[edit protocols]
user@R0# set ospf traffic-engineering
user@R0# set ospf area 0.0.0.0 interface lo0.0 passive
user@R0# set ospf area 0.0.0.0 interface all
```

5. Configure RSVP on all the interfaces of Router R0, excluding the management interface.

```
[edit protocols]
user@R0# set rsvp interface all
user@R0# set rsvp interface fxp0.0 disable
```

6. Enable next-hop-based dynamic GRE tunnel configuration on Router R0.

```
[edit routing-options]
user@R0# set dynamic-tunnels gre next-hop-based-tunnel
```

7. Configure the dynamic GRE tunnel parameters from Router R0 to Router R1.

```
[edit routing-options]
user@R0# set dynamic-tunnels T1 source-address 192.0.2.1
user@R0# set dynamic-tunnels T1 gre
user@R0# set dynamic-tunnels T1 destination-networks 192.0.2.0/24
```

8. Configure the dynamic GRE tunnel parameters from Router R0 to Router R2.

```
[edit routing-options]
user@R0# set dynamic-tunnels T2 source-address 198.51.100.1
user@R0# set dynamic-tunnels T2 gre
user@R0# set dynamic-tunnels T2 destination-networks 198.51.100.0/24
```



9. Configure a virtual routing and forwarding (VRF) routing instance on Router R0, and assign the interface connecting to Host 1 to the VRF instance.

```
[edit routing-instances]
user@R0# set VPN1 instance-type vrf
user@R0# set VPN1 route-distinguisher 100:100
user@R0# set VPN1 vrf-target target:100:1
user@R0# set VPN1 vrf-table-label
user@R0# set VPN1 interface ge-0/0/2.0
```

10. Configure an external BGP session with Host 1 for the VRF routing instance.

```
[edit routing-instances]
user@R0# set VPN1 protocols bgp group External type external
user@R0# set VPN1 protocols bgp group External family inet unicast
user@R0# set VPN1 protocols bgp group External peer-as 200
user@R0# set VPN1 protocols bgp group External neighbor 172.16.0.1
```

11. Configure anti-spoofing protection for the VRF routing instance on Router R0. This enables reverse path forwarding check for the next-hop-based dynamic tunnels, T1 and T2, on Router 0.

```
[edit routing-instances]
user@R0# set VPN1 routing-options forwarding-table ip-tunnel-rpf-check mode strict
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R0# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 192.0.2.1/24;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
```



```

        address 198.51.100.1/24;
    }
}
ge-0/0/2 {
    vlan-tagging;
    unit 0 {
        vlan-id 1;
        family inet {
            address 172.16.0.1/16;
        }
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.1.1.1/32;
        }
    }
}

```

```

user@R0# show routing-options
router-id 10.1.1.1;
autonomous-system 100;
dynamic-tunnels {
    gre next-hop-based-tunnel;
    T1 {
        source-address 192.0.2.1;
        gre;
        destination-networks {
            192.0.2.0/24;
        }
    }
    T2 {
        source-address 198.51.100.1;
        gre;
        destination-networks {
            198.51.100.0/24;
        }
    }
}

```

```

user@R0# show protocols

```



```

rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
bgp {
  group IBGP {
    type internal;
    local-address 10.1.1.1;
    family inet-vpn {
      unicast;
    }
    neighbor 20.1.1.1;
    neighbor 30.1.1.1;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface lo0.0 {
      passive;
    }
    interface all;
  }
}

```

user@R0# **show routing-instances**

```

VPN1 {
  instance-type vrf;
  interface ge-0/0/2.0;
  route-distinguisher 100:100;
  vrf-target target:100:1;
  vrf-table-label;
  routing-options {
    forwarding-table {
      ip-tunnel-rpf-check {
        mode strict;
      }
    }
  }
  protocols {
    bgp {
      group External {

```



```

    type external;
    family inet {
        unicast;
    }
    peer-as 200;
    neighbor 172.16.0.1;
}
}
}
}
```

Verification

IN THIS SECTION

- [Verifying Basic Configuration | 921](#)
- [Verifying Dynamic Tunnel Configuration | 922](#)
- [Verifying Anti-Spoofing Protection Configuration | 923](#)

Confirm that the configuration is working properly.

*Verifying Basic Configuration*

**Purpose**

Verify the OSPF and BGP peering status between the Router R0 and Routers R1 and R2.

**Action**

From operational mode, run the **show ospf neighbor** and **show bgp summary** commands.

user@R0> **show ospf neighbor**

Address	Interface	State	ID	Pri	Dead
192.0.2.2	ge-0/0/0.0	Full	20.1.1.1	128	32
198.51.100.2	ge-0/0/1.0	Full	30.1.1.1	128	32

user@R0> **show bgp summary**



```

Groups: 2 Peers: 3 Down peers: 1
Table          Tot Paths  Act Paths Suppressed    History Damp State    Pending
bgp.l3vpn.0
                0          0          0          0          0          0
Peer           AS        InPkt    OutPkt    OutQ     Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
20.1.1.1        100        182      178        0         0    1:20:27 Establ

    bgp.l3vpn.0: 0/0/0/0
30.1.1.1        100        230      225        0         0    1:41:51 Establ

    bgp.l3vpn.0: 0/0/0/0
172.16.0.1      200         0         0         0         0    1:42:08 Establ

```

### Meaning

The OSPF and BGP sessions are up and running between the Routers R0, R1, and R2.

### Verifying Dynamic Tunnel Configuration

#### Purpose

Verify the status of the next-hop-based dynamic GRE tunnels between the Router R0 and Routers R1 and R2.

#### Action

From operational mode, run the **show route table inet.3**, and the **show dynamic-tunnels database terse** commands.

```
user@R0> show route table inet.3
```

```

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.0/24      *[Tunnel/300] 01:47:57
                  Tunnel
192.0.2.2/24      *[Tunnel/300] 01:47:57
                  Tunnel Composite
198.51.100.0/24   *[Tunnel/300] 01:47:57
                  Tunnel

```



```
198.51.100.2/24    *[Tunnel/300] 01:47:57
                  Tunnel Composite
```

```
user@R0> show dynamic-tunnels database terse
```

```
Table: inet.3

Destination-network: 192.0.2.0/24
Destination      Source      Next-hop      Type      Status
192.0.2.2/24     192.0.2.1   0xb395e70     nhid 612   gre      Up

Destination-network: 198.51.100.0/24
Destination      Source      Next-hop      Type      Status
198.51.100.2     198.51.100.1 0xb395e70     nhid 612   gre      Up
```

### Meaning

The two next-hop-based dynamic GRE tunnels, Tunnel 1 and Tunnel 2, are up.

### Verifying Anti-Spoofing Protection Configuration

#### Purpose

Verify that the reverse path forwarding check has been enabled on the VRF routing instance on Router R0.

#### Action

From the operational mode, run the **show krt table VPN1.inet.0 detail**.

```
user@R0> show krt table VPN1.inet.0 detail
```

```
KRT tables:
VPN1.inet.0          : GF: 1 krt-index: 8      ID: 0 kernel-id: 8
  flags: (null)
  tunnel rpf config data : enable, strict, filter [0], 0x2
  tunnel rpf tlv data : enable, strict, filter [0], 0x4
  unicast reverse path: disabled
  fast-reroute-priority: 0
  Permanent NextHops
    Multicast          : 0 Broadcast : 0
    Receive            : 0 Discard   : 0
    Multicast Discard: 0 Reject     : 0
```



```
Local      : 0   Deny      : 0
Table      : 0
```

**Meaning**

The configured reverse path forwarding check is enabled on the VRF routing instance in the strict mode.

SEE ALSO

- [Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview | 908](#)
- [ip-tunnel-rpf-check | 1304](#)



# 7

CHAPTER

## Protection and Performance Features for Layer 3 VPNs

---

BGP PIC for Layer 3 VPNs | **927**

Egress Protection in Layer 3 VPNs | **945**

Provider Edge Link Protections in Layer 3 VPNs | **1029**

Unicast Reverse Path Forwarding Check for VPNs | **1093**

Load Balancing in Layer 3 VPNs | **1110**

Improving Layer 3 VPN Performance | **1146**

Class of Service for VPNs | **1168**

Graceful Restarts for VPNs | **1172**

---







# BGP PIC for Layer 3 VPNs

## IN THIS SECTION

- [Configuring BGP PIC Edge for MPLS Layer 3 VPNs | 927](#)
- [Example: Configuring BGP PIC Edge for MPLS Layer 3 VPNs | 930](#)

## Configuring BGP PIC Edge for MPLS Layer 3 VPNs

In an MPLS VPN Layer 3 environment, it is common for customers to multihome their networks to provide link redundancy. Although the interior gateway protocol (IGP) can provide fast convergence, in certain instances, the time to resolve a link failure and provide an alternate route can be time consuming. For example, a provider edge (PE) router might be configured with 200,000 or more IP prefixes, and a PE router failure could affect many of those prefixes.

BGP Prefix-Independent Convergence (PIC) Edge allows you to install a Layer 3 VPN route in the forwarding table as an alternate path, enabling fast failover when a PE router fails or you lose connectivity to a PE router. This already installed path is used until global convergence through the IGP is resolved. Using the alternative VPN route for forwarding until global convergence is complete reduces traffic loss.

BGP PIC Edge supports multiprotocol BGP IPv4 or IPv6 VPN network layer reachability information (NLRI) resolved using any of these IGP protocols:

- OSPF
- IS-IS
- LDP
- RSVP

BGP PIC Edge does not support multicast traffic.

Before you begin:

1. Configure LDP or RSVP.
2. Configure an IGP: either OSPF or IS-IS.



3. Configure a Layer 3 VPN.
4. Configure multiprotocol BGP for either an IPv4 VPN or an IPv6 VPN.

To configure BGP PIC Edge in an MPLS Layer 3 VPN:

1. Enable BGP PIC Edge:

```
[edit routing-instances routing-instance-name routing-options]
user@host# set protect core
```

**NOTE:** The BGP PIC edge feature is supported on ACX Universal Metro routers and on MX Series 5G Universal Routing Platforms with MPC interfaces.

2. Configure per-packet load balancing:

```
[edit policy-options]
user@host# set policy-statement policy-name then load-balance per-packet
```

3. Apply the per-packet load balancing policy to routes exported from the routing table to the forwarding table:

```
[edit routing-options forwarding-table]
user@host# set export policy-statement-name
```

4. Verify that BGP PIC Edge is working.

From operational mode, enter the **show route extensive** command:

```
user@host> show route 192.0.2.6 extensive
```

```
ed.inet.0: 6 destinations, 9 routes (6 active, 0 holddown, 0 hidden)
  192.0.2.6/24 (3 entries, 2 announced)
    State: <CalcForwarding>
  TSI:
  KRT in-kernel 192.0.2.6/24 -> {indirect(1048574), indirect(1048577)}
  Page 0 idx 0 Type 1 val 9219e30
    Nexthop: Self
    AS path: [2] 3 I
    Communities: target:2:1
```



```

Path 192.0.2.6 from 192.0.2.4 Vector len 4. Val: 0
..
    #Multipath Preference: 255
        Next hop type: Indirect
        Address: 0x93f4010
        Next-hop reference count: 2
..
    Protocol next hop: 192.0.2.4
    Push 299824
    Indirect next hop: 944c000 1048574 INH Session ID: 0x3
    Indirect next hop: weight 0x1
    Protocol next hop: 192.0.2.5
    Push 299824
    Indirect next hop: 944c1d8 1048577 INH Session ID: 0x4
    Indirect next hop: weight 0x4000
    State: <ForwardingOnly Int Ext>
    Inactive reason: Forwarding use only
    Age: 25          Metric2: 15
    Validation State: unverified
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: 3 I
    Communities: target:2:1

```

The output lines that contain **Indirect next hop: weight** follow next hops that the software can use to repair paths where a link failure occurs. The next-hop weight has one of the following values:

- 0x1 indicates active next hops.
- 0x4000 indicates passive next hops.

#### BEST PRACTICE:

On MX Series 5G Universal Routing Platforms with Modular Port Concentrators (MPCs), we strongly recommend that you enable enhanced IP network services.

To enable enhanced IP network services:

```

[edit chassis]
user@host# set network-services enhanced-ip

```



## Example: Configuring BGP PIC Edge for MPLS Layer 3 VPNs

### IN THIS SECTION

- [Requirements | 930](#)
- [Overview | 930](#)
- [Configuration | 931](#)
- [Verification | 939](#)

This example shows how to configure BGP prefix-independent convergence (PIC) edge, which allows you to install a Layer 3 VPN route in the forwarding table as an alternate path. This enables fast failover when a provider edge (PE) router fails or you lose connectivity to a PE router. This already installed path is used until global convergence through the interior gateway protocol (IGP) is resolved. Using the alternative VPN route for forwarding until global convergence is complete reduces traffic loss.

### Requirements

No special configuration beyond device initialization is required before configuring this example.

This example uses the following hardware and software components:

- One MX Series 5G Universal Routing Platforms with MPC interfaces to configure the BGP PIC edge feature.
- Five routers that can be a combination of M Series Multiservice Edge Routers, MX Series 5G Universal Routing Platforms, or T Series Core Routers.
- Junos OS Release 13.2 or later on the device with BGP PIC edge configured.

### Overview

In an MPLS VPN Layer 3 environment, it is common for customers to multihome their networks to provide link redundancy. Although the interior gateway protocol (IGP) can provide fast convergence, in certain instances, the time to resolve a link failure and provide an alternate route can be time consuming. For example, a provider edge (PE) router might be configured with 200,000 or more IP prefixes, and a PE router failure could affect many of those prefixes.

This example shows two customer edge (CE) routers, Device CE1 and Device CE2. Devices PE1, PE2, and PE3 are PE routers. Device P1 is a provider core router. Only Device PE1 has BGP PIC edge configured. The example uses the P1-PE2 link (P-PE) link to simulate the loss of a section of the network.




For testing, the address 172.16.1.5/24 is added as a loopback interface address on Device CE2. The address is announced to Device PE2 and Device PE3 and is relayed by way of internal BGP (IBGP) IBGP to Device PE1. On Device PE1, there are two paths to the 172.16.1.5/24 network. These are the primary and a backup path.

### Topology

Figure 76 on page 931 shows the sample network.

Figure 76: BGP PIC Edge Scenario

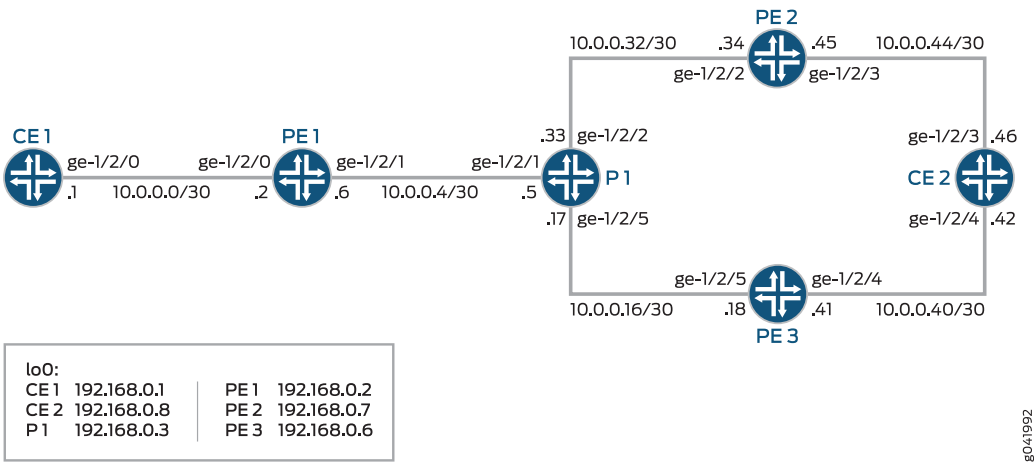

“CLI Quick Configuration” on page 931 shows the configuration for all of the devices in Figure 76 on page 931.

The section “Step-by-Step Procedure” on page 935 describes the steps on Device PE1.

### Configuration

#### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level.

#### Device CE1

```
set interfaces ge-1/2/0 unit 0 family inet address 10.0.0.1/30
set interfaces lo0 unit 0 family inet address 192.168.0.1/32
set protocols bgp group ebgp type external
set protocols bgp group ebgp export send-direct
set protocols bgp group ebgp neighbor 10.0.0.2
set policy-options policy-statement send-direct from protocol direct
```



```
set policy-options policy-statement send-direct then accept
set routing-options autonomous-system 101
```

## Device CE2

```
set interfaces ge-1/2/4 unit 0 family inet address 10.0.0.42/30
set interfaces ge-1/2/3 unit 0 family inet address 10.0.0.46/30
set interfaces lo0 unit 0 family inet address 192.168.0.8/32
set interfaces lo0 unit 0 family inet address 172.16.1.5/24
set protocols bgp group ebgp type external
set protocols bgp group ebgp export send-direct
set protocols bgp group ebgp neighbor 10.0.0.45
set protocols bgp group ebgp neighbor 10.0.0.41
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept
set routing-options autonomous-system 102
```

## Device P1

```
set interfaces ge-1/2/1 unit 0 family inet address 10.0.0.5/30
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces ge-1/2/5 unit 0 family inet address 10.0.0.17/30
set interfaces ge-1/2/5 unit 0 family mpls
set interfaces ge-1/2/2 unit 0 family inet address 10.0.0.33/30
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.168.0.3/32
set protocols mpls interface ge-1/2/1.0
set protocols mpls interface ge-1/2/5.0
set protocols mpls interface ge-1/2/2.0
set protocols ospf area 0.0.0.0 interface ge-1/2/1.0
set protocols ospf area 0.0.0.0 interface ge-1/2/5.0
set protocols ospf area 0.0.0.0 interface ge-1/2/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-1/2/1.0
set protocols ldp interface ge-1/2/5.0
set protocols ldp interface ge-1/2/2.0
set protocols ldp interface lo0.0
```



```
set routing-options autonomous-system 100
```

## Device PE1

```
set interfaces ge-1/2/0 unit 0 family inet address 10.0.0.2/30
set interfaces ge-1/2/1 unit 0 family inet address 10.0.0.6/30
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.168.0.2/32
set protocols mpls interface ge-1/2/1.0
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 192.168.0.2
set protocols bgp group ibgp family inet unicast
set protocols bgp group ibgp family inet-vpn unicast
set protocols bgp group ibgp export nhs
set protocols bgp group ibgp neighbor 192.168.0.7
set protocols bgp group ibgp neighbor 192.168.0.6
set protocols ospf area 0.0.0.0 interface ge-1/2/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-1/2/1.0
set protocols ldp interface lo0.0
set policy-options policy-statement lb then load-balance per-packet
set policy-options policy-statement nhs then next-hop self
set routing-instances customer1 instance-type vrf
set routing-instances customer1 interface ge-1/2/0.0
set routing-instances customer1 route-distinguisher 100:1
set routing-instances customer1 vrf-target target:100:1
set routing-instances customer1 routing-options protect core
set routing-instances customer1 protocols bgp group ebgp type external
set routing-instances customer1 protocols bgp group ebgp neighbor 10.0.0.1
set routing-options router-id 192.168.0.2
set routing-options autonomous-system 100
set routing-options forwarding-table export lb
```

## Device PE2

```
set interfaces ge-1/2/2 unit 0 family inet address 10.0.0.34/30
set interfaces ge-1/2/2 unit 0 family mpls
```



```

set interfaces ge-1/2/3 unit 0 family inet address 10.0.0.45/30
set interfaces lo0 unit 0 family inet address 192.168.0.7/32
set protocols mpls interface ge-1/2/2.0
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 192.168.0.7
set protocols bgp group ibgp family inet unicast
set protocols bgp group ibgp family inet-vpn unicast
set protocols bgp group ibgp export nhs
set protocols bgp group ibgp neighbor 192.168.0.2
set protocols bgp group ibgp neighbor 192.168.0.6
set protocols ospf area 0.0.0.0 interface ge-1/2/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-1/2/2.0
set protocols ldp interface lo0.0
set routing-instances customer1 instance-type vrf
set routing-instances customer1 interface ge-1/2/3.0
set routing-instances customer1 route-distinguisher 100:1
set routing-instances customer1 vrf-target target:100:1
set routing-instances customer1 protocols bgp group ebgp type external
set routing-instances customer1 protocols bgp group ebgp neighbor 10.0.0.46
set routing-options autonomous-system 100

```

### Device PE3

```

set interfaces ge-1/2/5 unit 0 family inet address 10.0.0.18/30
set interfaces ge-1/2/5 unit 0 family mpls
set interfaces ge-1/2/4 unit 0 family inet address 10.0.0.41/30
set interfaces ge-1/2/4 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.168.0.6/32
set protocols mpls interface ge-1/2/5.0
set protocols mpls interface ge-1/2/4.0
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 192.168.0.6
set protocols bgp group ibgp family inet unicast
set protocols bgp group ibgp family inet-vpn unicast
set protocols bgp group ibgp export nhs
set protocols bgp group ibgp neighbor 192.168.0.7
set protocols bgp group ibgp neighbor 192.168.0.2
set protocols ospf area 0.0.0.0 interface ge-1/2/5.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```



```

set protocols ldp interface ge-1/2/5.0
set protocols ldp interface lo0.0
set routing-instances customer1 instance-type vrf
set routing-instances customer1 interface ge-1/2/4.0
set routing-instances customer1 route-distinguisher 100:1
set routing-instances customer1 vrf-target target:100:1
set routing-instances customer1 protocols bgp group ebgp type external
set routing-instances customer1 protocols bgp group ebgp neighbor 10.0.0.42
set routing-options autonomous-system 100

```

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device R1:

1. Configure the device interfaces.

```

[edit interfaces]
user@PE1# set ge-1/2/0 unit 0 family inet address 10.0.0.2/30
user@PE1# set ge-1/2/1 unit 0 family inet address 10.0.0.6/30
user@PE1# set ge-1/2/1 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 192.168.0.2/32

```

2. Configure MPLS and LDP on the core-facing interfaces.

```

[edit protocols]
user@PE1# set mpls interface ge-1/2/1.0
user@PE1# set ldp interface ge-1/2/1.0
user@PE1# set ldp interface lo0.0

```

3. Configure an IGP on the core-facing interfaces.

```

[edit protocols ospf area 0.0.0.0]
user@PE1# set interface ge-1/2/1.0
user@PE1# set interface lo0.0 passive

```

4. Configure IBGP connections with the other PE devices.



```
[edit protocols bgp group ibgp]
user@PE1# set type internal
user@PE1# set local-address 192.168.0.2
user@PE1# set family inet unicast
user@PE1# set family inet-vpn unicast
user@PE1# set export nhs
user@PE1# set neighbor 192.168.0.7
user@PE1# set neighbor 192.168.0.6
```

5. Configure the load-balancing policy.

```
[edit policy-options policy-statement lb]
user@PE1# set then load-balance per-packet
```

6. (Optional) Configure a next-hop self policy.

```
[edit policy-options policy-statement nhs]
user@PE1# set then next-hop self
```

7. Configure the routing-instance to create the CE-PE EBGp connection.

```
[edit routing-instances customer1]
user@PE1# set instance-type vrf
user@PE1# set interface ge-1/2/0.0
user@PE1# set route-distinguisher 100:1
user@PE1# set vrf-target target:100:1
user@PE1# set protocols bgp group ebgp type external
user@PE1# set protocols bgp group ebgp neighbor 10.0.0.1
```

8. Enable the BGP PIC edge feature.

```
[edit routing-instances customer1]
user@PE1# set routing-options protect core
```

9. Apply the load-balancing policy.

```
[edit routing-options forwarding-table]
user@PE1# set export lb
```



10. Assign the router ID and autonomous system (AS) number.

```
[edit routing-options]
user@PE1# set router-id 192.168.0.2
user@PE1# set autonomous-system 100
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show policy-options**, **show routing-instances**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-1/2/0 {
  unit 0 {
    family inet {
      address 10.0.0.2/30;
    }
  }
}
ge-1/2/1 {
  unit 0 {
    family inet {
      address 10.0.0.6/30;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.168.0.2/32;
    }
  }
}
```

```
user@PE1# show protocols
mpls {
  interface ge-1/2/1.0;
}
bgp {
  group ibgp {
    type internal;
```



```

    local-address 192.168.0.2;
    family inet {
        unicast;
    }
    family inet-vpn {
        unicast;
    }
    export nhs;
    neighbor 192.168.0.7;
    neighbor 192.168.0.6;
}
}
ospf {
    area 0.0.0.0 {
        interface ge-1/2/1.0;
        interface lo0.0 {
            passive;
        }
    }
}
}
ldp {
    interface ge-1/2/1.0;
    interface lo0.0;
}

```

```

user@PE1# show policy-options
policy-statement lb {
    then {
        load-balance per-packet;
    }
}
policy-statement nhs {
    then {
        next-hop self;
    }
}

```

```

user@PE1# show routing-instances
customer1 {
    instance-type vrf;
    interface ge-1/2/0.0;
    route-distinguisher 100:1;
    vrf-target target:100:1;
}

```



```
routing-options {  
  protect core;  
}  
protocols {  
  bgp {  
    group ebgp {  
      type external;  
      peer-as 101;  
      neighbor 10.0.0.1;  
    }  
  }  
}
```

```
user@PE1# show routing-options  
router-id 192.168.0.2;  
autonomous-system 100;  
forwarding-table {  
  export lb;  
}
```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

### IN THIS SECTION

- [Displaying Extensive Route Information | 939](#)
- [Displaying the Forwarding Table | 943](#)
- [Displaying the OSPF Routes | 944](#)

Confirm that the configuration is working properly.

### *Displaying Extensive Route Information*

#### **Purpose**

Confirm that BGP PIC Edge is working.

#### **Action**



From Device PE1, run the **show route extensive table customer1.inet.0 172.16.1/24** command.

user@PE1> **show route extensive table customer1.inet.0 172.16.1/24**

```
customer1.inet.0: 7 destinations, 12 routes (7 active, 0 holddown, 0 hidden)
172.16.1.0/24 (3 entries, 2 announced)
    State: <CalcForwarding>
TSI:
KRT in-kernel 172.16.1.0/24 -> {indirect(262146), indirect(262142)}
Page 0 idx 0, (group ebgp type External) Type 1 val 0x950a62c (adv_entry)
    Advertised metrics:
        Nexthop: Self
        AS path: [100] 102 I
        Communities: target:100:1
Path 172.16.1.0 from 192.168.0.6 Vector len 4. Val: 0
    @BGP      Preference: 170/-101
              Route Distinguisher: 100:1
              Next hop type: Indirect
              Address: 0x9514a74
              Next-hop reference count: 7
              Source: 192.168.0.6
              Next hop type: Router, Next hop index: 990
              Next hop: 10.0.0.5 via ge-1/2/1.0, selected
              Label operation: Push 299824, Push 299856(top)
              Label TTL action: prop-ttl, prop-ttl(top)
              Load balance label: Label 299824: None; Label 299856: None;
              Session Id: 0x280002
              Protocol next hop: 192.168.0.6
              Label operation: Push 299824
              Label TTL action: prop-ttl
              Load balance label: Label 299824: None;
              Indirect next hop: 0x96bc104 262146 INH Session ID: 0x280006
              State: <Secondary Active Int Ext ProtectionPath ProtectionCand>
              Local AS: 100 Peer AS: 100
              Age: 1:38:13 Metric2: 1
              Validation State: unverified
              Task: BGP_100.192.168.0.6+45824
              Announcement bits (1): 1-BGP_RT_Background
              AS path: 102 I
              Communities: target:100:1
              Import Accepted
              VPN Label: 299824
              Localpref: 100
              Router ID: 192.168.0.6
```



```

Primary Routing Table bgp.l3vpn.0
Indirect next hops: 1
    Protocol next hop: 192.168.0.6 Metric: 1
    Label operation: Push 299824
    Label TTL action: prop-ttl
    Load balance label: Label 299824: None;
    Indirect next hop: 0x96bc104 262146 INH Session ID: 0x280006

    Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.0.0.5 via ge-1/2/1.0
        Session Id: 0x280002
        192.168.0.6/32 Originating RIB: inet.3
        Metric: 1                      Node path count: 1
        Forwarding nexthops: 1
            Nexthop: 10.0.0.5 via ge-1/2/1.0

BGP   Preference: 170/-101
      Route Distinguisher: 100:1
      Next hop type: Indirect
      Address: 0x9515570
      Next-hop reference count: 7
      Source: 192.168.0.7
      Next hop type: Router, Next hop index: 933
      Next hop: 10.0.0.5 via ge-1/2/1.0, selected
      Label operation: Push 299856, Push 299872(top)
      Label TTL action: prop-ttl, prop-ttl(top)
      Load balance label: Label 299856: None; Label 299872: None;
      Session Id: 0x280002
      Protocol next hop: 192.168.0.7
      Label operation: Push 299856
      Label TTL action: prop-ttl
      Load balance label: Label 299856: None;
      Indirect next hop: 0x96bc000 262142 INH Session ID: 0x280005
      State: <Secondary NotBest Int Ext ProtectionPath ProtectionCand>
      Inactive reason: Not Best in its group - Router ID
      Local AS: 100 Peer AS: 100
      Age: 1:38:13 Metric2: 1
      Validation State: unverified
      Task: BGP_100.192.168.0.7+10985
      AS path: 102 I
      Communities: target:100:1
      Import Accepted
      VPN Label: 299856
      Localpref: 100

```



```

Router ID: 192.168.0.7
Primary Routing Table bgp.l3vpn.0
Indirect next hops: 1
    Protocol next hop: 192.168.0.7 Metric: 1
    Label operation: Push 299856
    Label TTL action: prop-ttl
    Load balance label: Label 299856: None;
Indirect next hop: 0x96bc000 262142 INH Session ID: 0x280005

```

```

Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.0.0.5 via ge-1/2/1.0
    Session Id: 0x280002
192.168.0.7/32 Originating RIB: inet.3
    Metric: 1                      Node path count: 1
    Forwarding nexthops: 1
    Nexthop: 10.0.0.5 via ge-1/2/1.0

```

#### #Multipath Preference: 255

```

Next hop type: Indirect
Address: 0x9578010
Next-hop reference count: 4
Next hop type: Router, Next hop index: 990
Next hop: 10.0.0.5 via ge-1/2/1.0, selected
Label operation: Push 299824, Push 299856(top)
Label TTL action: prop-ttl, prop-ttl(top)
Load balance label: Label 299824: None; Label 299856: None;
Session Id: 0x280002
Next hop type: Router, Next hop index: 933
Next hop: 10.0.0.5 via ge-1/2/1.0
Label operation: Push 299856, Push 299872(top)
Label TTL action: prop-ttl, prop-ttl(top)
Load balance label: Label 299856: None; Label 299872: None;
Session Id: 0x280002
Protocol next hop: 192.168.0.6
Label operation: Push 299824
Label TTL action: prop-ttl
Load balance label: Label 299824: None;

```

```
Indirect next hop: 0x96bc104 262146 INH Session ID: 0x280006 Weight
```

**0x1**

```

Protocol next hop: 192.168.0.7
Label operation: Push 299856
Label TTL action: prop-ttl
Load balance label: Label 299856: None;
Indirect next hop: 0x96bc000 262142 INH Session ID: 0x280005 Weight

```



**0x4000**

```

State: <ForwardingOnly Int Ext>
Inactive reason: Forwarding use only
Age: 1:38:13      Metric2: 1
Validation State: unverified
Task: RT
Announcement bits (1): 0-KRT
AS path: 102 I
Communities: target:100:1

```

**Meaning**

The Indirect next hop output lines that contain weight follow next hops that the software can use to repair paths where a link failure occurs.

The next-hop weight has one of the following values:

- 0x1 indicates active next hops.
- 0x4000 indicates passive next hops.

**Displaying the Forwarding Table****Purpose**

Check the forwarding and kernel routing-table state by using **show route forwarding-table**.

**Action**

From Device PE1, run the **show route forwarding-table table customer1 destination 172.16.1.0/24** command.

```
user@PE1> show route forwarding-table table customer1 destination 172.16.1.0/24
```

```

Routing table: customer1.inet
Internet:
Destination      Type RtRef Next hop      Type Index  NhRef Netif
172.16.1.0/24    user    0                ulst  262147    2
                  indr    262146    3
                  10.0.0.5  Push 299824, Push 299856(top)
    990          2 ge-1/2/1.0
                  indr    262144    3
                  10.0.0.5  Push 300080, Push 299920(top)
   1000          2 ge-1/2/1.0

```



## Meaning

in addition to the forwarding and kernel routing-table state, this command shows the unilist index (262147) used by the Packet Forwarding Engine.

## Displaying the OSPF Routes

### Purpose

Show the OSPF route state.

### Action

From Device PE1, run the **show (ospf | ospf3) route detail** command.

```
user@PE1> show ospf route detail
```

```
betsy@tp0:PE1> show ospf route detail
```

```
Topology default Route Table:
```

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop Address/LSP
192.168.0.3	Intra	Router	IP	1	ge-1/2/1.0	10.0.0.5
area 0.0.0.0, origin 192.168.0.3, optional-capability 0x0						
192.168.0.6	Intra	Router	IP	2	ge-1/2/1.0	10.0.0.5
area 0.0.0.0, origin 192.168.0.6, optional-capability 0x0						
192.168.0.7	Intra	Router	IP	2	ge-1/2/1.0	10.0.0.5
area 0.0.0.0, origin 192.168.0.7, optional-capability 0x0						
10.0.0.4/30	Intra	Network	IP	1	ge-1/2/1.0	
area 0.0.0.0, origin 192.168.0.3, priority low						
10.0.0.16/30	Intra	Network	IP	2	ge-1/2/1.0	10.0.0.5
area 0.0.0.0, origin 192.168.0.6, priority medium						
10.0.0.32/30	Intra	Network	IP	2	ge-1/2/1.0	10.0.0.5
area 0.0.0.0, origin 192.168.0.7, priority medium						
192.168.0.2/32	Intra	Network	IP	0	lo0.0	
area 0.0.0.0, origin 192.168.0.2, priority low						
192.168.0.3/32	Intra	Network	IP	1	ge-1/2/1.0	10.0.0.5
area 0.0.0.0, origin 192.168.0.3, priority medium						
<b>192.168.0.6/32</b>	Intra	Network	IP	2	ge-1/2/1.0	10.0.0.5
area 0.0.0.0, origin 192.168.0.6, priority medium						
<b>session-id: 2621446</b> , version: 1						
<b>192.168.0.7/32</b>	Intra	Network	IP	2	ge-1/2/1.0	10.0.0.5
area 0.0.0.0, origin 192.168.0.7, priority medium						
<b>session-id: 2621450</b> , version: 1						

## Meaning



The output shows the tracked session IDs for the loopback interface addresses on Devices PE2 and PE3.

## RELATED DOCUMENTATION

[Example: Configuring Provider Edge Link Protection in Layer 3 VPNs | 1033](#)

[Example: Load Balancing BGP Traffic](#)

[Network Services Mode Overview](#)

[Firewall Filters and Enhanced Network Services Mode Overview](#)

[Configuring Junos OS to Run a Specific Network Services Mode in MX Series Routers](#)

[Configuring Enhanced IP Network Services for a Virtual Chassis](#)

# Egress Protection in Layer 3 VPNs

## IN THIS SECTION

- [Egress Protection for BGP Labeled Unicast | 946](#)
- [Configuring Egress Protection for BGP Labeled Unicast | 948](#)
- [Example: Configuring Egress Protection for BGP Labeled Unicast | 950](#)
- [Egress Protection for Layer 3 VPN Edge Protection Overview | 968](#)
- [Example: Configuring MPLS Egress Protection for Layer 3 VPN Services | 975](#)
- [Example: Configuring Egress Protection for Layer 3 VPN Services | 976](#)
- [Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP | 986](#)

This topic introduces the concept and components in egress protection in layer 3 VPN. It describes and provides examples on how to configure the protected, protector, and point of local repair (PLR) routers.



## Egress Protection for BGP Labeled Unicast


When network node or link failures occur, it takes some time to restore service using traditional routing table convergence. Local repair procedures can provide much faster restoration by establishing local protection as close to a failure as possible. Fast protection for egress nodes is available to services in which BGP labeled unicast interconnects IGP areas, levels, or autonomous systems (ASs). If a provider router detects that an egress router (AS or area border router) is down, it immediately forwards the traffic destined to that router to a protector router that forwards the traffic downstream to the destination.

To provide egress protection for BGP labeled unicast, the protector node must create a backup state for downstream destinations before the failure happens. The basic idea of the solution is that the protector node constructs a forwarding state associated with the protected node and relays the MPLS labels assigned by the protected node further downstream to the final destination.

This feature supports the applications Inter-AS Option C and Seamless MPLS.

*Inter-AS Option C*—BGP labeled unicast provides end-to-end transport label-switched paths (LSPs) by stitching the intra-AS LSPs together. AS boundary routers run EBGP to other AS boundary routers to exchange labels for /32 PE loopback routes. IBGP runs between the provider edge router and AS boundary routers within each AS. In [Figure 77 on page 946](#), the traffic goes from CE1 to CE2. ASBR1 is the protected AS boundary router, ASBR2 is the protector, and Device P1 is the point of local repair (PLR). The primary path is chosen from PE1 to PE2 over ASBR1 and ASBR3. When ASBR1 fails, Router P1 detects the ASBR1 failure and forwards the traffic to ASBR2, which provides backup service and forwards the traffic downstream.


Figure 77: Inter-AS Option C

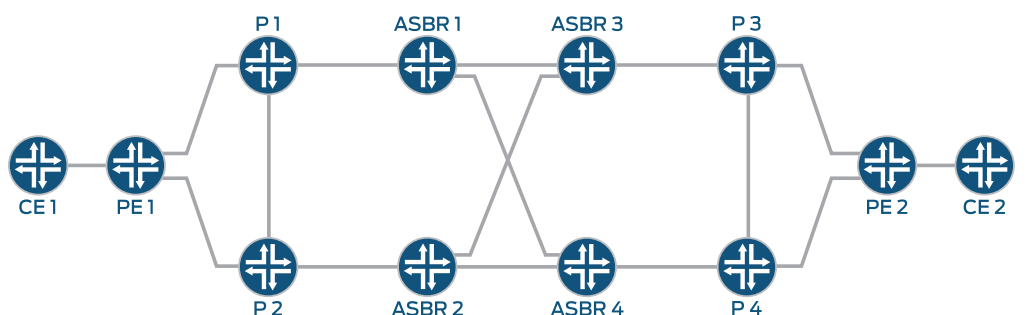

*Seamless MPLS*—BGP labeled unicast provides end-to-end transport LSPs by stitching the intra-area/level LSPs. Area border routers (ABRs) run BGP labeled unicast to other ABRs to exchange labels for /32 PE loopback routes. In [Figure 78 on page 947](#), the traffic goes from Device CE1 to Device CE2. ABR1 is the protected ABR, ABR2 is the protector, and T1 is the PLR. The primary path is chosen from PE1 to PE2 over ABR1 and ABR3. When ABR1 fails, Router T1 detects the ABR1 failure and forwards the traffic to ABR2, which provides backup service and forwards the traffic downstream.



Figure 78: Seamless MPLS

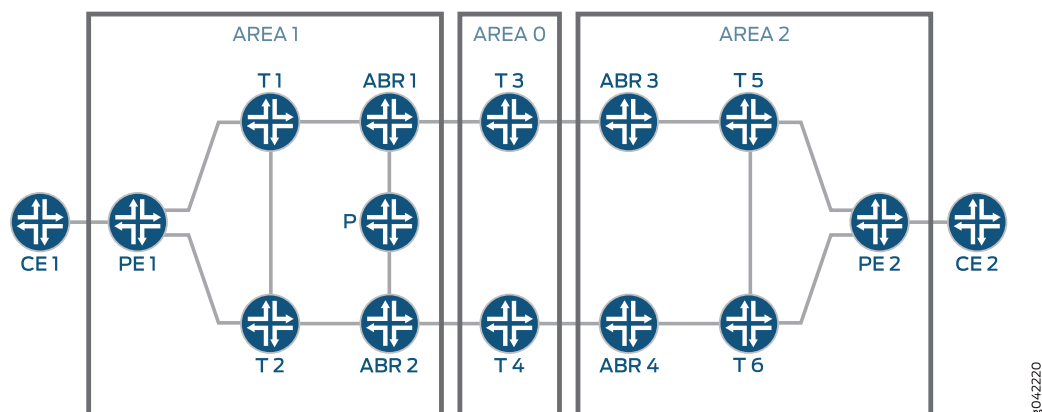

In each of these applications, the protected node advertises a primary BGP labeled unicast route that needs protection. When fast protection is enabled, BGP advertises the label routes with a special address as the next hop. This special address is a context identifier that is configured through the CLI. The protected node also advertises the context identifier in IGP and a NULL label in LDP for the context identifier.

The backup node advertises backup BGP labeled unicast routes for the protected routes. The protector node forwards traffic to the backup node using the labels advertised by the backup node.

The protector node provides the backup service by cross-connecting the labels originated by the protected node and the labels originated by the backup node. The protector node forwards the traffic to the backup node in case of failure of the protected node. The protector node advertises the same context-identifier into IGP with high metric. Also, it advertises a real label in LDP for the context identifier. The protector node listens for the BGP labeled unicast routes advertised by both the protected node and backup node and populates the context label table and backup FIB. When traffic with the real context LDP label arrives, the lookup is done in the context of a protected node. The protector node often acts as the backup node.

The PLR detects the protected node failure and forwards the MPLS traffic to the protector node. The high IGP metric along with the LDP label advertised by the protector node ensure that the PLR uses the protector node as an LDP backup LSP.

There are two supported protection types: collocated protector and centralized protector. In the collocated type, the protector node is also the backup node. In the centralized type, the backup node is different from the protector node.



## Configuring Egress Protection for BGP Labeled Unicast

Fast protection for egress nodes is available to services in which BGP labeled unicast interconnects IGP areas, levels, or ASs. If a provider router detects that an egress router (AS or area border router) is down, it immediately forwards the traffic destined to that router to a protector router that forwards the traffic downstream to the destination.

Before configuring egress protection for BGP labeled unicast, ensure that all routers in the AS or area are running Junos OS 14.1 or a later release.

To configure egress protection for BGP labeled unicast:

1. Add the following configuration to the *protected* router:

```
[edit protocols]
  mpls {
    egress-protection {
      context-identifier context-id {
        primary;
      }
    }
  }
  bgp {
    group group-name {
      type internal;
      family inet {
        labeled-unicast {
          egress-protection {
            context-identifier context-id;
          }
        }
      }
    }
  }
}
```

2. Add the following configuration to the *protector* router:

```
[edit protocols]
  mpls {
    egress-protection {
      context-identifier context-id {
        protector;
      }
    }
  }
```



```

    }
  }
  bgp {
    group group-name {
      type internal;
      family inet {
        labeled-unicast {
          egress-protection;
        }
      }
    }
  }
}

```

3. Add the following configuration to the *PLR* (point of local repair) router:

```

[edit protocols]
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
isis {
  backup-spf-options per-prefix-calculation;
  level 1 disable;
  interface all {
    node-link-protection;
  }
}
ldp {
  track-igp-metric;
  interface all;
  interface fxp0.0 {
    disable;
  }
}

```

4. Run **show bgp neighbor** on the protected router to verify that egress protection is enabled, for example:

```

user@host# run show bgp neighbor
Peer: 192.0.2.2+179 AS 65536 Local: 192.0.2.1+59264 AS 65536
Type: Internal    State: Established    Flags: <ImportEval Sync>

```



```

Last State: OpenConfirm   Last Event: RecvKeepAlive
Last Error: None
Options: <Preference LocalAddress KeepAll AddressFamily Rib-group Refresh>
Address families configured: inet-label-unicast
Local Address: 192.0.2.1 Holdtime: 90 Preference: 170
NLRI configured with egress-protection: inet-label-unicast
Egress-protection NLRI inet-label-unicast
Number of flaps: 0

```

SEE ALSO

| [egress-protection \(MPLS\)](#) | [1271](#)

## Example: Configuring Egress Protection for BGP Labeled Unicast

### IN THIS SECTION

- [Requirements](#) | [950](#)
- [Overview](#) | [951](#)
- [Configuration](#) | [952](#)
- [Verification](#) | [966](#)

This example shows how to configure BGP labeled unicast protection that can be used in case of a PE failure in an Inter-AS Option C topology.

### Requirements

This example uses the following hardware and software components:

- M Series Multiservice Edge Routers, MX Series 5G Universal Routing Platforms, or T Series Core Routers
- Junos OS Release 14.1 or later



## Overview

When network node or link failures occur, it takes some time to restore service using traditional routing table convergence. Local repair procedures can provide much faster restoration by establishing local protection as close to a failure as possible. Fast protection for egress nodes is available to services in which BGP labeled unicast interconnects IGP areas, levels, or autonomous systems (ASs). If a provider router detects that an egress router (AS or area border router) is down, it immediately forwards the traffic destined to that router to a protector router that forwards the traffic downstream to the destination.


This example shows how to configure labeled-unicast egress protection in a Layer 3 VPN.

## Topology

In this example, an Inter-AS Option C topology is set up by configuring two customer edge (CE) devices and six service provider edge (PE) devices in four autonomous systems. The CE devices are configured in AS100 and AS101. The PE devices are configured in AS200 and AS300.

Figure 79 on page 951 shows the topology used in this example.

Figure 79: Egress Protection in a Layer 3 VPN

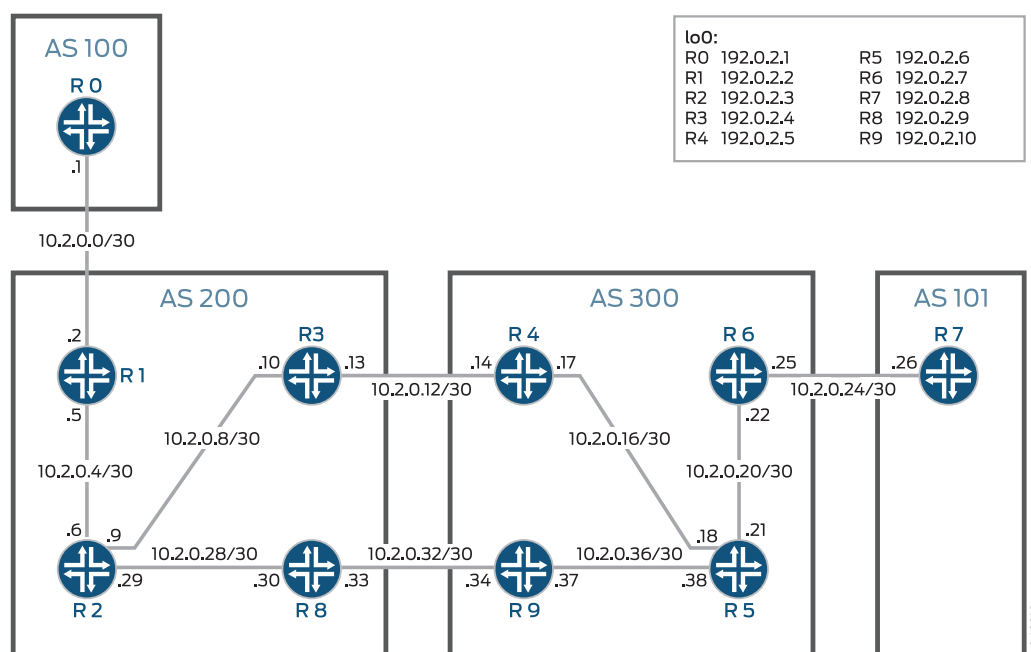

The aim of this example is to protect PE Router R4. Egress protection is configured on Router R4 and Router R9 so that the traffic can be routed through the backup link (R9 to R8) when Router R4 (or the link from R5 to R4) goes down. In this example, Router R4 is the protected router, Router R9 is the protector router, and Router R5 is the point of local repair (PLR).



## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Router R0

```
set interfaces ge-0/0/0 unit 0 description toR1
set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.1/30
set interfaces lo0 unit 0 family inet address 192.0.2.1/24 primary
set routing-options router-id 192.0.2.1
set routing-options autonomous-system 100
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0 metric 10
```

#### Router R1

```
set interfaces ge-0/0/0 unit 0 description toR0
set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.2/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 description toR2
set interfaces ge-0/0/1 unit 0 family inet address 10.2.0.5/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.2/24
set routing-options router-id 192.0.2.2
set routing-options autonomous-system 200
set protocols mpls label-switched-path ToR3 to 192.0.2.4
set protocols mpls label-switched-path ToR8 to 192.0.2.9
set protocols mpls interface all
set protocols bgp group parent-vpn-peers type internal
set protocols bgp group parent-vpn-peers local-address 192.0.2.2
set protocols bgp group parent-vpn-peers family inet unicast
set protocols bgp group parent-vpn-peers family inet labeled-unicast rib inet.3
set protocols bgp group parent-vpn-peers neighbor 192.0.2.4
set protocols bgp group parent-vpn-peers neighbor 192.0.2.9
set protocols bgp group toR6 type external
set protocols bgp group toR6 multihop ttl 10
set protocols bgp group toR6 local-address 192.0.2.2
```



```

set protocols bgp group toR6 family inet-vpn unicast
set protocols bgp group toR6 peer-as 300
set protocols bgp group toR6 neighbor 192.0.2.7
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 metric 10
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0
set policy-options policy-statement child_vpn_routes term 1 from protocol bgp
set policy-options policy-statement child_vpn_routes term 1 then accept
set policy-options policy-statement child_vpn_routes term 2 then reject
set policy-options policy-statement vpnexport term 1 from protocol ospf
set policy-options policy-statement vpnexport term 1 then community add test_comm
set policy-options policy-statement vpnexport term 1 then accept
set policy-options policy-statement vpnexport term 2 then reject
set policy-options policy-statement vpnimport term 1 from protocol bgp
set policy-options policy-statement vpnimport term 1 from community test_comm
set policy-options policy-statement vpnimport term 1 then accept
set policy-options policy-statement vpnimport term 2 then reject
set policy-options community text_comm members target:1:200
set routing-instances customer-provider-vpn instance-type vrf
set routing-instances customer-provider-vpn interface ge-0/0/0.0
set routing-instances customer-provider-vpn route-distinguisher 192.0.2.4:1
set routing-instances customer-provider-vpn vrf-import vpnimport
set routing-instances customer-provider-vpn vrf-export vpnexport
set routing-instances customer-provider-vpn vrf-target target:200:1
set routing-instances customer-provider-vpn protocols ospf export child_vpn_routes
set routing-instances customer-provider-vpn protocols ospf area 0.0.0.0 interface ge-0/0/0.0

```

## Router R2

```

set interfaces ge-0/0/0 unit 0 description toR3
set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.9/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 description toR1
set interfaces ge-0/0/1 unit 0 family inet address 10.2.0.6/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 description toR8
set interfaces ge-0/0/2 unit 0 family inet address 10.2.0.29/30
set interfaces ge-0/0/2 unit 0 family mpls

```



```

set interfaces lo0 unit 0 family inet address 192.0.2.3/24
set routing-options router-id 192.0.2.3
set routing-options autonomous-system 200
set protocols mpls interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0 metric 10
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 metric 10
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0 metric 10
set protocols ldp interface ge-0/0/0.0
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface ge-0/0/2.0
set protocols ldp interface lo0.0

```

### Router R3

```

set interfaces ge-0/0/0 unit 0 description toR2
set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.10/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 description toR4
set interfaces ge-0/0/1 unit 0 family inet address 10.2.0.13/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.4/24
set routing-options router-id 192.0.2.4
set routing-options autonomous-system 200
set protocols mpls traffic-engineering bgp-igp-both-ribs
set protocols mpls label-switched-path ToR1 to 192.0.2.2
set protocols mpls interface all
set protocols bgp group toR4 type external
set protocols bgp group toR4 family inet unicast
set protocols bgp group toR4 family inet labeled-unicast rib inet.3
set protocols bgp group toR4 export send-pe
set protocols bgp group toR4 neighbor 10.2.0.14 peer-as 300
set protocols bgp group parent-vpn-peers type internal
set protocols bgp group parent-vpn-peers local-address 192.0.2.4
set protocols bgp group parent-vpn-peers family inet unicast
set protocols bgp group parent-vpn-peers family inet labeled-unicast rib inet.3
set protocols bgp group parent-vpn-peers export next-hop-self
set protocols bgp group parent-vpn-peers neighbor 192.0.2.2
set protocols bgp group parent-vpn-peers neighbor 192.0.2.9

```



```

set protocols ospf traffic-engineering
set protocols ospf export from-bgp
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0 metric 10
set protocols ldp interface ge-0/0/0.0
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0
set policy-options policy-statement next-hop-self term 1 then next-hop-self
set policy-options policy-statement send-pe from route-filter 192.0.2.2/24 exact
set policy-options policy-statement send-pe then accept

```

#### Router R4

```

set interfaces ge-0/0/0 unit 0 description toR5
set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.17/30
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 description toR3
set interfaces ge-0/0/1 unit 0 family inet address 10.2.0.14/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.5/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2049.00
set routing-options router-id 192.0.2.5
set routing-options autonomous-system 300
set protocols mpls traffic-engineering bgp-igp-both-ribs
set protocols mpls label-switched-path ToR6 to 192.0.2.7
set protocols mpls interface all
set protocols mpls interface fxp.0 disable
set protocols mpls egress-protection context-identifier 203.0.113.1 primary
set protocols bgp group parent-vpn-peers type internal
set protocols bgp group parent-vpn-peers local-address 192.0.2.5
set protocols bgp group parent-vpn-peers family inet unicast
set protocols bgp group parent-vpn-peers family inet labeled-unicast rib inet.3
set protocols bgp group parent-vpn-peers family inet labeled-unicast egress-protection
    context-identifier 203.0.113.1
set protocols bgp group parent-vpn-peers export next-hop-self
set protocols bgp group parent-vpn-peers neighbor 192.0.2.7
set protocols bgp group parent-vpn-peers neighbor 192.0.2.10
set protocols bgp group toR3 type external
set protocols bgp group toR3 family inet labeled-unicast rib inet.3

```



```

set protocols bgp group toR3 export send-pe
set protocols bgp group toR3 peer-as 200
set protocols bgp group toR3 neighbor 10.2.0.13
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface ge-0/0/0.0 level 2 metric 10
set protocols isis interface lo0.0 passive
set protocols ldp interface ge-0/0/0.0
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0
set policy-options policy-statement next-hop-self term 1 then next-hop-self
set policy-options policy-statement send-pe from route-filter 192.0.2.7/24 exact
set policy-options policy-statement send-pe then accept

```

## Router R5

```

set interfaces ge-0/0/0 unit 0 description toR4
set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.18/30
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 description toR6
set interfaces ge-0/0/1 unit 0 family inet address 10.2.0.21/30
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 description toR9
set interfaces ge-0/0/2 unit 0 family inet address 10.2.0.38/30
set interfaces ge-0/0/2 unit 0 family iso
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.6/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2050.00
set routing-options router-id 192.0.2.6
set routing-options autonomous-system 300
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols isis backup-spf-options per-prefix-calculation
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all node-link-protection
set protocols isis interface fxp0.0 disable
set protocols isis interface ge-0/0/0.0 link-protection

```



```

set protocols isis interface ge-0/0/0.0 level 2 metric 10
set protocols isis interface ge-0/0/1.0 link-protection
set protocols isis interface ge-0/0/1.0 level 2 metric 10
set protocols isis interface ge-0/0/2.0 link-protection
set protocols isis interface ge-0/0/2.0 level 2 metric 10
set protocols isis interface lo0.0 passive
set protocols ldp track-igp-metric
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable

```

## Router R6

```

set interfaces ge-0/0/0 unit 0 description toR7
set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.25/30
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 description toR5
set interfaces ge-0/0/1 unit 0 family inet address 10.2.0.22/30
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.7/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2048.00
set routing-options router-id 192.0.2.7
set routing-options autonomous-system 300
set protocols mpls label-switched-path ToR4 to 192.0.2.5
set protocols mpls label-switched-path ToR9 to 192.0.2.10
set protocols mpls interface all
set protocols bgp group parent-vpn-peers type internal
set protocols bgp group parent-vpn-peers local-address 192.0.2.7
set protocols bgp group parent-vpn-peers family inet unicast
set protocols bgp group parent-vpn-peers family inet labeled-unicast rib inet.3
set protocols bgp group parent-vpn-peers neighbor 192.0.2.5
set protocols bgp group parent-vpn-peers neighbor 192.0.2.10
set protocols bgp group toR1 type external
set protocols bgp group toR1 multihop ttl 10
set protocols bgp group toR1 local-address 192.0.2.7
set protocols bgp group toR1 family inet-vpn unicast
set protocols bgp group toR1 peers-as 200
set protocols bgp group toR1 neighbor 192.0.2.2
set protocols isis level 1 disable

```



```

set protocols isis level 2 wide-metrics-only
set protocols isis interface ge-0/0/1.0 level 2 metric 10
set protocols isis interface lo0.0 passive
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0
set policy-options policy-statement child-vpn-routes term 1 from protocol bgp
set policy-options policy-statement child-vpn-routes term 1 then accept
set policy-options policy-statement child-vpn-routes term 2 then reject
set policy-options policy-statement vpnexport term 1 from protocol ospf
set policy-options policy-statement vpnexport term 1 then community add test_comm
set policy-options policy-statement vpnexport term 1 then accept
set policy-options policy-statement vpnexport term 2 then reject
set policy-options policy-statement vpnimport term 1 from protocol bgp
set policy-options policy-statement vpnimport term 1 from community test_comm
set policy-options policy-statement vpnimport term 1 then accept
set policy-options policy-statement vpnimport term 2 then reject
set policy-options community test_comm members target:1:300
set routing-instances customer-provider-vpn instance-type vrf
set routing-instances customer-provider-vpn interface ge-0/0/0.0
set routing-instances customer-provider-vpn route-distinguisher 192.0.2.5:1
set routing-instances customer-provider-vpn vrf-import vpnimport
set routing-instances customer-provider-vpn vrf-export vpnexport
set routing-instances customer-provider-vpn vrf-target target:300:1
set routing-instances customer-provider-vpn protocols ospf export child-vpn-routes
set routing-instances customer-provider-vpn protocols ospf area 0.0.0.0 interface ge-0/0/0.0

```

## Router R7

```

set interfaces ge-0/0/0 unit 0 description toR6
set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.26/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.8/24 primary
set routing-options router-id 192.0.2.8
set routing-options autonomous-system 101
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0 metric 10

```

## Router R8



```

set interfaces ge-0/0/0 unit 0 description toR9
set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.33/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 description toR2
set interfaces ge-0/0/1 unit 0 family inet address 10.2.0.30/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.9/24
set routing-options router-id 192.0.2.9
set routing-options autonomous-system 200
set protocols mpls traffic-engineering bgp-igp-both-ribs
set protocols mpls label-switched-path ToR1 to 192.0.2.2
set protocols mpls interface all
set protocols bgp group toR9 type external
set protocols bgp group toR9 family inet unicast
set protocols bgp group toR9 family inet labeled-unicast rib inet.3
set protocols bgp group toR9 export send-pe
set protocols bgp group toR9 neighbor 10.2.0.34 peer-as 300
set protocols bgp group parent-vpn-peers type internal
set protocols bgp group parent-vpn-peers local-address 192.0.2.9
set protocols bgp group parent-vpn-peers family inet unicast
set protocols bgp group parent-vpn-peers family inet labeled-unicast rib inet.3
set protocols bgp group parent-vpn-peers export next-hop-self
set protocols bgp group parent-vpn-peers neighbor 192.0.2.2
set protocols bgp group parent-vpn-peers neighbor 192.0.2.4
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 metric 10
set protocols ldp interface ge-0/0/0.0
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0
set policy-options policy-statement from-bgp from protocol bgp
set policy-options policy-statement from-bgp then metric add 100
set policy-options policy-statement from-bgp then accept
set policy-options policy-statement next-hop-self term 1 then next-hop-self
set policy-options policy-statement send-pe from route-filter 192.0.2.2/24 exact
set policy-options policy-statement send-pe then accept

```

## Router R9

```

set interfaces ge-0/0/0 unit 0 description toR8

```



```

set interfaces ge-0/0/0 unit 0 family inet address 10.2.0.34/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 description toR5
set interfaces ge-0/0/1 unit 0 family inet address 10.2.0.37/30
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.10/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2062.00
set routing-options router-id 192.0.2.10
set routing-options autonomous-system 300
set protocols mpls traffic-engineering bgp-igp-both-ribs
set protocols mpls label-switched-path ToR6 to 192.0.2.7
set protocols mpls interface all
set protocols mpls egress-protection context-identifier 203.0.113.1 protector
set protocols bgp group parent-vpn-peers type internal
set protocols bgp group parent-vpn-peers local-address 192.0.2.10
set protocols bgp group parent-vpn-peers family inet unicast
set protocols bgp group parent-vpn-peers family inet labeled-unicast rib inet.3
set protocols bgp group parent-vpn-peers family inet labeled-unicast egress-protection
set protocols bgp group parent-vpn-peers export next-hop-self
set protocols bgp group parent-vpn-peers neighbor 192.0.2.7
set protocols bgp group parent-vpn-peers neighbor 192.0.2.5
set protocols bgp group toR8 type external
set protocols bgp group toR8 family inet labeled-unicast rib inet.3
set protocols bgp group toR8 export send-pe
set protocols bgp group toR8 neighbor 10.2.0.33 peer-as 200
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface ge-0/0/1.0 level 2 metric 10
set protocols isis interface lo0.0 passive
set protocols ldp interface ge-0/0/0.0
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0
set policy-options policy-statement next-hop-self term 1 then next-hop-self
set policy-options policy-statement send-pe from route-filter 192.0.2.7/24 exact
set policy-options policy-statement send-pe then accept

```

## *Configuring Egress Protection in Layer 3 VPNs*

### **Step-by-Step Procedure**



The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure labeled unicast egress protection:

1. Configure the interfaces on each router, for example:

```
[edit interfaces]
user@R4# set ge-0/0/0 unit 0 description toR5
user@R4# set ge-0/0/0 unit 0 family inet address 10.2.0.17/30
user@R4# set ge-0/0/0 unit 0 family iso
user@R4# set ge-0/0/0 unit 0 family mpls
```

```
user@R4# set ge-0/0/1 unit 0 description toR3
user@R4# set ge-0/0/1 unit 0 family inet address 10.2.0.14/30
user@R4# set ge-0/0/1 unit 0 family mpls
```

```
user@R4# set lo0 unit 0 family inet address 192.0.2.5/24
user@R4# set lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2049.00
```

2. Configure the router ID and autonomous system (AS) number for each router, for example:

```
[edit routing-options]
user@R4# set router-id 192.0.2.5
user@R4# set autonomous-system 300
```

In this example, the router ID is chosen to be identical to the loopback address configured on the router.

3. Configure the protocols on each router, for example:

```
[edit protocols]
user@R4# set mpls traffic-engineering bgp-igp-both-ribs
user@R4# set mpls label-switched-path ToR6 to 192.0.2.7
user@R4# set mpls interface all
user@R4# set mpls interface fxp.0 disable
user@R4# set bgp group parent-vpn-peers type internal
user@R4# set bgp group parent-vpn-peers local-address 192.0.2.5
user@R4# set bgp group parent-vpn-peers family inet unicast
user@R4# set bgp group parent-vpn-peers family inet labeled-unicast rib inet.3
user@R4# set bgp group parent-vpn-peers export next-hop-self
user@R4# set bgp group parent-vpn-peers neighbor 192.0.2.7
user@R4# set bgp group parent-vpn-peers neighbor 192.0.2.10
```



```

user@R4# set bgp group toR3 type external
user@R4# set bgp group toR3 family inet labeled-unicast rib inet.3
user@R4# set bgp group toR3 export send-pe
user@R4# set bgp group toR3 peer-as 200
user@R4# set bgp group toR3 neighbor 10.2.0.13
user@R4# set isis level 1 disable
user@R4# set isis level 2 wide-metrics-only
user@R4# set isis interface ge-0/0/0.0 level 2 metric 10
user@R4# set isis interface lo0.0 passive
user@R4# set ldp interface ge-0/0/0.0
user@R4# set ldp interface ge-0/0/1.0
user@R4# set ldp interface lo0.0

```

4. Configure routing policies on all PE routers and AS border routers (Routers R1, R3, R4, R6, R8, and R9), for example:

```

user@R4# set policy-options policy-statement next-hop-self term 1 then next-hop-self
user@R4# set policy-options policy-statement send-pe from route-filter 192.0.2.7/24 exact
user@R4# set policy-options policy-statement send-pe then accept

```

5. Configure the VPN routing instance on Routers R1 and R6.

```

user@R1# set routing-instances customer-provider-vpn instance-type vrf
user@R1# set routing-instances customer-provider-vpn interface ge-0/0/0.0
user@R1# set routing-instances customer-provider-vpn route-distinguisher 192.0.2.4:1
user@R1# set routing-instances customer-provider-vpn vrf-import vpnimport
user@R1# set routing-instances customer-provider-vpn vrf-export vpnexport
user@R1# set routing-instances customer-provider-vpn vrf-target target:200:1
user@R1# set routing-instances customer-provider-vpn protocols ospf export child_vpn_routes
user@R1# set routing-instances customer-provider-vpn protocols ospf area 0.0.0.0 interface ge-0/0/0.0

```

and

```

user@R6# set routing-instances customer-provider-vpn instance-type vrf
user@R6# set routing-instances customer-provider-vpn interface ge-0/0/0.0
user@R6# set routing-instances customer-provider-vpn route-distinguisher 192.0.2.5:1
user@R6# set routing-instances customer-provider-vpn vrf-import vpnimport
user@R6# set routing-instances customer-provider-vpn vrf-export vpnexport
user@R6# set routing-instances customer-provider-vpn vrf-target target:300:1
user@R6# set routing-instances customer-provider-vpn protocols ospf export child-vpn-routes
user@R6# set routing-instances customer-provider-vpn protocols ospf area 0.0.0.0 interface ge-0/0/0.0

```



6. Configure egress protection for Router R4, setting Router R4 as the protected router and Router R9 as the protector.

```
user@R4# set protocols mpls egress-protection context-identifier 203.0.113.1 primary
user@R4# set protocols bgp group parent-vpn-peers family inet labeled-unicast egress-protection
context-identifier 203.0.113.1
```

and

```
user@R9# set protocols mpls egress-protection context-identifier 203.0.113.1 protector
user@R9# set protocols bgp group parent-vpn-peers family inet labeled-unicast egress-protection
```

### Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, **show policy-options** (if applicable), and **show routing-instances** (if applicable) commands.

If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

user@R4# **show interfaces**

```
ge-0/0/0 {
  unit 0 {
    description toR5;
    family inet {
      address 10.2.0.17/30;
    }
    family iso;
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    description toR3;
    family inet {
      address 10.2.0.14/30;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
```



```

        address 192.0.2.5/24;
    }
    family iso {
        address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2049.00;
    }
}
}

```

user@R4# **show routing-options**

```

router-id 192.0.2.5;
autonomous-system 300;

```

user@R4# **show protocols**

```

mpls {
    traffic-engineering bgp-igp-both-ribs;
    label-switched-path ToR6 {
        to 192.0.2.7;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
    egress-protection {
        context-identifier 203.0.113.1 {
            primary;
        }
    }
}
bgp {
    group parent-vpn-peers {
        type internal;
        local-address 192.0.2.5;
        family inet {
            unicast;
            labeled-unicast {
                rib {
                    inet.3;
                }
            }
            egress-protection {

```



```

        context-identifier {
            203.0.113.1;
        }
    }
}
export next-hop-self;
neighbor 192.0.2.7;
neighbor 192.0.2.10;
}
group toR3 {
    type external;
    family inet {
        unicast;
        labeled-unicast {
            rib {
                inet.3;
            }
        }
    }
    export send-pe;
    peer-as 200;
    neighbor 10.2.0.13;
}
}
isis {
    level 1 disable;
    level 2 wide-metrics-only;
    interface ge-0/0/0.0 {
        level 2 metric 10;
    }
    interface lo0.0 {
        passive;
    }
}
ldp {
    interface ge-0/0/0.0;
    interface ge-0/0/1.0;
    interface lo0.0;
}

```

user@R4# **show policy-options**



```

policy-statement next-hop-self {
    term 1 {
        then {
            next-hop self;
        }
    }
}
policy-statement send-pe {
    from {
        route-filter 192.0.2.7/24 exact;
    }
    then accept;
}

```

If you are done configuring the router, enter **commit** from configuration mode.

Repeat the procedure for every router in this example, using the appropriate interface names and addresses for each router.

## Verification

### IN THIS SECTION

- [Verifying That Egress Protection Is Enabled | 966](#)
- [Verifying the State of the Protected ASBR as 'primary' | 967](#)
- [Verifying the State of the Protector ASBR as 'protector' | 967](#)

### *Verifying That Egress Protection Is Enabled*

#### Purpose

Verify that egress protection is enabled on the protected router, Router R4.

#### Action

Run **show bgp neighbor** on Router R4 to verify that egress protection is enabled.

```
user@R4> show bgp neighbor
```



```

Peer: 192.0.2.10+45824 AS 300    Local: 192.0.2.5+27630 AS 300
  Type: Internal    State: Established    Flags: <Sync>
  Last State: OpenConfirm    Last Event: RecvKeepAlive
  Last Error: None
  Export: [ next-hop-self ]
  Options: <Preference LocalAddress AddressFamily Refresh>
  Address families configured: inet-unicast inet-labeled-unicast
  Local Address: 192.0.2.5 Holdtime: 90 Preference: 170
NLRI configured with egress-protection: inet-labeled-unicast
Egress-protection NLRI inet-labeled-unicast context-identifier: 203.0.113.1
  Number of flaps: 0
  ...

```

### ***Verifying the State of the Protected ASBR as 'primary'***

#### **Purpose**

Verify that the state of the protected AS border router, Router R4, is 'primary'.

#### **Action**

Run **show mpls context-identifier** on Router R4.

```
user@R4> show mpls context-identifier
```

ID	Type	Metric	ContextTable
203.0.113.1	primary	1	
Total 1, Primary 1, Protector 0			

### ***Verifying the State of the Protector ASBR as 'protector'***

#### **Purpose**

Verify that the state of the protector AS border router, Router R9, is 'protector'.

#### **Action**

Run **show mpls context-identifier** on Router R9.

```
user@R9> show mpls context-identifier
```

ID	Type	Metric	ContextTable
203.0.113.1	protector	16777215	__203.0.113.1__.mpls.0
Total 1, Primary 0, Protector 1			







When Router PE4 detects a PE2 node or link failure, traffic is rerouted from the working path to the protected path. In the normal failover process, the detection of failure and the recovery rely on the control plane and is therefore relatively slow.

Typically, if there is a link or node failure in the core network, the egress PE router would have to rely on the ingress PE router to detect the failure and switch over to the backup path, because a local repair option for egress failure is not available.

To provide a local repair solution for the egress PE link or node failure, a mechanism known as egress protection can be used to repair and restore the connection quickly. If egress protection is configured, the PLR router detects the PE2 link or node failure and reroutes traffic through the protector Router PE3 using the backup LDP-signaled label-switched path (LSP). The PLR router uses per-prefix loop-free alternate routes to program the backup next hop through Router PE3, and traffic is forwarded to Routers CE1 and CE2 using the alternate paths. This restoration is done quickly after the PLR router detects the Router PE2 egress node or link failure.

The dual protection mechanism can also be used for egress protection where the two PE routers can simultaneously act as the primary PE router and the protector PE router for their respective context ID routes or next hops.

## Router Functions

In [Figure 80 on page 968](#), the following routers perform the following functions:

### ***Protected PE Router***

The protected PE, PE2, performs the following functions:

- Updates a context identifier for the BGP next hop for the Layer 3 VPN prefix.
- Advertises the context identifier to the IS-IS domain.

### ***Protector PE Router***

The protector PE router, PE3, performs the following functions:

- Advertises the context identifier to the IS-IS domain with a high metric. The high IGP metric (configurable) along with the LDP label ensures that the PLR router uses the LDP-signaled backup LSP in the event of an egress PE router failure.
- Builds a context-label table for route lookup and a backup forwarding table for the protected PE router (PE2).

**NOTE:** The protector PE router should not be in the forwarding path to the primary PE router.



## PLR Router

The router acting as the point of local repair (PLR) performs the following functions:

- Computes per-prefix loop-free alternate routes. For this computation to work, the configuration of the **node-link-protection** statement and the **backup-spf-options per-prefix-calculation** statement is necessary at the **[edit protocols isis]** hierarchy level.
- Installs backup next hops for the context identifier through the PE3 router (protector PE).
- Detects PE router failure and redirects the transport LSP traffic to the protector.

**NOTE:** The PLR router must be directly connected to the protector router (in this case, PE3). If not, the loop-free alternate route cannot find the backup path to the protector. This limitation is removed in Junos OS Release 13.3 and later.

## Protector and Protection Models

Protector is a new role or function for the restoration of egress PE node failure. This role could be played by a backup egress PE router or any other node that participates in the VPN control plane for VPN prefixes that require egress node protection. There are two protection models based on the location and role of a protector:

- **Co-located protector**—In this model, the protector PE router and the backup PE router configurations are done on the same router. The protector is co-located with the backup PE router for the protected prefix, and it has a direct connection to the multihomed site that originates the protected prefix. In the event of an egress PE failure, the protector receives traffic from the PLR router and routes the traffic to the multihomed site.
- **Centralized protector**—In this model, the protector PE router and the backup PE router are different. The centralized protector might not have a direct connection to the multihomed site. In the event of an egress PE link or node failure, the centralized protector reroutes the traffic to the backup egress PE router with the VPN label advertised for the backup egress PE router that takes over the role of sending traffic to the multihomed site.

A network can use either of the protection models or a combination of both, depending on the requirement.

As a special scenario of egress node protection, if a router is both a Protector and a PLR, it installs backup next hops to protect the transport LSP. In particular, it does not need a bypass LSP for local repair.

In the Co-located protector model, the PLR or the Protector is directly connected to the CE via a backup AC, while in the Centralized protector model, the PLR or the protector has an MPLS tunnel to the backup PE. In either case, the PLR or the Protector will install a backup next hop with a label followed by a lookup in a **context label** table, i.e. **\_\_context\_\_.mpls.0**. When the egress node fails, the PLR or the Protector will switch traffic to this backup next hop in PFE. The outer label (the transport LSP label) of packets is popped,



and the inner label (the layer 3 VPN label allocated by the egress node) is looked up in `__context__.mpls.0`, which results in forwarding the packets directly to the CE (in Collocated protector model) or the backup PE (in Centralized protector model).

For more information about egress PE failure protection, see Internet draft [draft-minto-2547-egress-node-fast-protection-00](#), [2547 egress PE Fast Failure Protection](#).

## IGP Advertisement Model

Egress protection availability is advertised in the interior gateway protocol (IGP). Label protocols along with Constrained Shortest Path First (CSPF) use this information to do egress protection.

For Layer 3 VPNs, the IGP advertisements can be of the following types:

- Context identifier as a stub link (supported in Junos OS 11.4 R3 and later). A link connecting a stub node to a transit node is a stub link.
- Context identifier as a stub alias node (supported in Junos OS 13.3 and later).
- Context identifier as a stub proxy node (supported in Junos OS 13.3 and later).

By default, the stub link is used. To enable enhanced point-of-local-repair (PLR) functionality, in which the PLR reroutes service traffic during an egress failure, configure a stub alias node or a stub proxy node as follows:

```
[edit protocols mpls egress-protection context-identifier 192.0.2.6]
```

```
user@host# set advertise-mode ?
```

Possible completions:

stub-alias	Alias
stub-proxy	Proxy

The two methods offer different advantages, depending on the needs of your network deployment.

### **Context Identifier as a Stub Alias Node**

In the stub alias method, the LSP end-point address has an explicit backup egress node where the backup can be learned or configured on the penultimate hop node of a protected LSP. With this model, the penultimate hop node of a protected LSP sets up the bypass LSP tunnel to back up the egress node by avoiding the primary egress node. This model requires a Junos OS upgrade in core nodes, but is flexible enough to support all traffic engineering constraints.

The PLR learns that the context ID has a protector. When the primary context ID goes down, packets are rerouted to the protector by way of a pre-programmed backup path. The context ID and protector mapping are configured or learned on the PLR and signaled in the IGP from the protector. A routing table called `inet.5` on the PLR provides the configured or IGP-learned details.



IS-IS advertises context IDs into the TED through an IP address TLV. IS-IS imports this TLV into the TED as extended information. IS-IS advertises the protector TLV routes in the inet.5 route for the context ID with protocol next hop being the protector's router ID. If the protector TLV has a label, the label is added to the route in the inet.5 routing table for LDP to use.

CSPF considers the IP address TLV for tunnel endpoint computation.

With the stub alias model, the protector LSP setup does not require any changes in any nodes. But bypass LSP setup for node protection requires changes in the PHN and the protector router.

When RSVP sets up bypass for node protection LSP, RSVP also performs a lookup for the protector if the PLR is the penultimate hop of the LSP. If the protector is available for the LSP destination, it uses CSPF to compute a path with a constraint that excludes the egress PE and sets up a bypass LSP destination to the context ID if one is not already set up. When setting up a bypass LSP to the context ID, the PLR unsets all protection options.

LDP is useful in the case when the network supports 100 percent LFA coverage but does not support 100 percent per-prefix LFA coverage. LDP sets up a backup path with the protector with the context label advertised by the protector to the service point.

In networks in which 100 percent LFA coverage is not available, it is useful to have backup LSP LFAs with RSVP-based tunnels.

In a steady state, the forwarding is the same as on any other protected LSP in the PLR. In the protector, the non-null label that is advertised and signaled for the context ID has the table next hop point to the MPLS context table, where the peers' labels are programmed.

During a failure, the PLR swaps the transport label with the bypass LSP for the context ID or swaps the label context-label (the protector-advertised label for the context ID) and pushes the transport label to the protector lo0 interface address.

### ***Context Identifier as a Stub Proxy Node***

Context identifier as a stub proxy node (supported in Junos OS 13.3 and later). A stub node is one that only appears at the end of an AS path, which means it does not provide transit service. In this mode, known as the virtual or proxy mode, the LSP end-point address is represented as a node with bidirectional links, with the LSP's primary egress node and backup egress node. With this representation, the penultimate hop of the LSP primary egress point can behave like a PLR in setting up a bypass tunnel to back up the egress by avoiding the primary egress node. This model has the advantage that you do not need to upgrade Junos OS on core nodes and will thereby help operators to deploy this technology.

The context ID is represented as a node in the traffic engineering (TE) and IGP databases. The primary PE device advertises the context node into the IGP and TE databases. The primary PE device and the protected PE device support one link to the context node with a bandwidth and a TE metric. Other TE characteristics of TE links are not advertised by Junos OS.



In IS-IS, the primary PE router advertises the proxy node along with links to the primary router and the protector router. The primary and the protector routers advertise links to the proxy node. The proxy node builds the following information.

- System ID—Binary-coded decimal based on the context ID.
- Host name—Protector-name:context ID
- LSP-ID—<System-ID>.00
- PDU type—Level 2 and Level 1, based on the configuration
- LSP attributes:
  - Overload—1
  - IS\_TYPE\_L1(0x01) | IS\_TYPE\_L2(0x02) for the level 2 PDU
  - IS\_TYPE\_L1 for level 1
  - Multiarea—No
  - All other attributes—0

The proxy node only contains area, MT, host name, router ID, protocols and IS reachability TLVs. The area, MT, authentication, and protocols TLV are the same as on the primary. The IS reachability TLVs contains two links called Cnode-primary-link and Cnode-protector-link. Both links include TE TLVs. The following TE-link-TLVs are advertised in context links:

- IPv4 interface or neighbor address
- Maximum bandwidth
- TE default metric
- Link (local or remote) Identifiers

Sub TLV values:

- Bandwidth—zero
- TE metric—Maximum TE metric
- Interface address—context ID
- Protector neighbor address—protector router ID
- Primary neighbor address—protected router ID
- Link local-ID protector—0x80ffff1
- Link local-ID primary—0x80ffff2
- Link remote-ID protector—Learned from protector
- Link remote-ID primary—Learned from primary



Protected PE links to context node (primary advertises the link with the following details):

- Bandwidth—Maximum
- TE metric—1
- Interface address—Router ID
- Context neighbor address—Context ID
- Link local-ID to context node—Automatically generated (similar to a sham link)
- Link remote-ID to context node—0x80fffff2

Protector PE links to context node:

- The protector advertises unnumbered transit links with the maximum routable link metric and the maximum TE metric and zero bandwidth to the context node. Other TE characteristics are not advertised.

Unnumbered links are advertised with the following attributes:

- bandwidth—0
- TE metric—MAX TE metric
- Interface address—Router ID
- Context neighbor address—Context ID
- Link local ID to context node—Autogenerated (similar to a sham link)
- Link remote ID to context node—0x80fffff1

In RSVP, the behavior changes are only in the protector and primary routers. RSVP terminates the LSP and the bypass LSP to the context ID. If the context ID is the protector, a non-null label is signaled. Otherwise, it will be based on the configuration or the requested label type. RSVP verifies the Explicit Route Object (ERO) from the path for itself and the context ID. RSVP sends the Resv message with two Record Route Object (RRO) objects—one for the context ID and one for itself. This simulates the penultimate-hop node (PHN) to do node protection with the protector for the primary for context ID LSP. As the fast reroute (FRR)-required bypass, the LSP has to merge back to the protector LSP PHN setup bypass to context ID through the protector by avoiding the primary.

The protector also terminates the backup LSP for the context ID to keep the protected LSP alive during a failure until the ingress node resigns the LSP. The new LSP is reestablished through the protector, but this LSP is not used for service traffic as service protocol does not use the context ID. The LSP traverses through the protector even if the primary comes up. Only reoptimization resigns the LSP through the primary. In stub proxy mode, the bypass LSP with constraints is not supported.

LDP cannot use the stub proxy method due to the inflated metric advertised in the IGP.

With regard the forwarding state, a PE router that protects one or more segments that are connected to another PE is referred to as a protector PE. A protector PE must learn the forwarding state of the segments that it is protecting from the primary PE that is being protected.



For a given segment, if the protector PE is not directly connected to the CE device associated with the segment, it must also learn the forwarding state from at least one backup PE. This situation might arise only in the case of egress PE failure protection.

A protector PE maintains forwarding state for a given segment in the context of the primary PE. A protector PE might maintain state for only a subset of the segments on the primary PE or for all the segments on the primary PE.

## Example: Configuring MPLS Egress Protection for Layer 3 VPN Services

This example describes a local repair mechanism for protecting Layer 3 VPN services against egress provider edge (PE) router failure in a scenario where the customer edge (CE) routers are multihomed with more than one PE router.

The following terminology is used in this example:

- **Originator PE router**—A PE router with protected routing instances or subnets that distributes the primary Layer 3 VPN route.
- **Backup PE router**—A PE router that announces a backup Layer 3 VPN route.
- **Protector PE router**—A router that cross-connects VPN labels distributed by the originator PE router to the labels originated by the backup PE router. The protector PE router can also be a backup PE router.
- **Transport LSP**—An LDP-signaled label-switched path (LSP) for BGP next hops.
- **PLR**—A router acting as the point of local repair (PLR) that can redirect Layer 3 VPN traffic to a protector PE router to enable fast restoration and reroute.
- **Loop-free alternate routes**—A technology that essentially adds IP fast-reroute capability for the interior gateway protocol (IGP) by precomputing backup routes for all the primary routes of the IGP. In the context of this document, the IGP is IS-IS.
- **Multihoming**—A technology that enables you to connect a CE device to multiple PE routers. In the event that a connection to the primary PE router fails, traffic can be automatically switched to the backup PE router.
- **Context identifier**—An IPv4 address used to identify the VPN prefix that requires protection. The identifier is propagated to the PE and PLR core routers, making it possible for the protected egress PE router to signal the egress protection to the protector PE router.
- **Dual protection**—A protection mechanism where two PE routers can simultaneously act as the primary PE router and the protector PE router for their respective context ID routes or next hops. For example, between the two PE routers PE1 and PE2, PE1 could be a primary PE router for context identifier 203.0.113.1 and protector for context identifier 203.0.113.2. Likewise, the PE2 router could be a protector for context identifier 203.0.113.1 and a primary PE router for context identifier 203.0.113.2.



## Example: Configuring Egress Protection for Layer 3 VPN Services

### IN THIS SECTION

- [Requirements | 976](#)
- [Overview | 976](#)
- [Configuration | 978](#)
- [Verification | 984](#)

This example shows how to configure egress protection for fast restoration of Layer 3 VPN services.

### Requirements

This example uses the following hardware and software components

- MX Series 5G Universal Routing Platforms
- Tunnel PICs or the configuration of the Enhanced IP Network Services mode (using the **network-services enhanced-ip** statement at the **[edit chassis]** hierarchy level).
- Junos OS Release 11.4R3 or later running on the devices

Before you begin:

- Configure the device interfaces. See the *Junos OS Network Interfaces Configuration Guide*.
- Configure the following routing protocols on all the PE and PLR routers.
  - MPLS, LSPs, and LDP. See the *Junos OS MPLS Applications Configuration Guide*.
  - BGP and IS-IS. See the *Junos OS Routing Protocols Configuration Guide*.
- Configure Layer 3 VPNs. See the *Junos OS VPNs Configuration Guide*.

### Overview

Typically, Layer 3 VPN service restoration, in case of egress PE router failure (for multihomed customer edge [CE] routers), depends on the ingress PE router to detect the egress PE node failure and switch traffic to the backup PE router for multihomed CE sites.

Junos OS Release 11.4R3 or later enables you to configure egress protection for Layer 3 VPN services that protects the services from egress PE node failure in a scenario where the CE site is multihomed with more than one PE router. The mechanism enables local repair to be performed immediately upon an egress



node failure. The router acting as the point of local repair (PLR) redirects VPN traffic to a protector PE router for restoring service quickly, achieving fast protection that is comparable to MPLS fast reroute.

The statements used to configure egress protection are:

- **egress-protection**—When configured at the [edit protocols mpls] hierarchy level, this statement specifies protector information and the context identifier for the Layer 3 VPN and edge protection virtual circuit:

```
[edit protocols mpls]
egress-protection {
  context-identifier context-id {
    primary | protector;
    metric igp-metric-value;
  }
}
```

When configured at the [edit protocols bgp group group-name family inet-vpn unicast], [edit protocols bgp group group-name family inet6-vpn unicast], or [edit protocols bgp group group-name family iso-vpn unicast] hierarchy levels, the egress-protection statement specifies the context identifier that enables egress protection for the configured BGP VPN network layer reachability information (NLRI).

```
[edit protocols bgp]
group internal {
  type internal;
  local-address ip-address;
  family <inet-vpn|inet6-vpn|iso-vpn> {
    unicast {
      egress-protection {
        context-identifier {
          context-id-ip-address;
        }
      }
    }
  }
}
```

When configured at the [edit routing-instances] hierarchy level, the **egress-protection** statement holds the context identifier of the protected PE router.

This configuration must be done only in the primary PE router and is used for outbound BGP updates for the next hops.

```
[edit routing-instance]
routing-instance-name {
  egress-protection {
```



```

    context-identifier {
        context-id-ip-address;
    }
}

```

Configuring the **context-identifier** statement at the **[edit routing-instances routing-instance-name]** hierarchy level provides customer edge VRL-level context ID granularity for each VRF instance.

- **context-identifier**—This statement specifies an IPV4 address used to define the pair of PE routers participating in the egress protection LSP. The context identifier is used to assign an identifier to the protector PE router. The identifier is propagated to the other PE routers participating in the network, making it possible for the protected egress PE router to signal the egress protection LSP to the protector PE router.

## Configuration

### CLI Quick Configuration

**NOTE:** This example only shows sample configuration that is relevant to configuring egress PE protection for Layer 3 VPN services on the protected router, PE2, the protector router, PE3, and the PLR router.

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### PE2 (Protected PE Router)

```

set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 192.0.2.6 primary
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.245.194
set protocols bgp group ibgp family inet-vpn unicast egress-protection context-identifier 192.0.2.6

```

#### PE3 (Protector PE Router)



```

set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 192.0.2.6 protector
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.245.196
set protocols bgp group ibgp family inet-vpn unicast egress-protection keep-import remote-vrf
set policy-options policy-statement remote-vrf from community rsite1
set policy-options policy-statement remote-vrf from community rsite24
set policy-options policy-statement remote-vrf then accept
set policy-options community rsite1 members target:1:1
set policy-options community rsite24 members target:100:1023

```

## PLR Router

```

set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols isis level 1 disable
set protocols isis interface all node-link-protection
set protocols isis backup-spf-options per-prefix-calculation
set protocols ldp track-igp-metric
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable

```

## Configuring the Protected PE Router (PE2)

### Step-by-Step Procedure

To configure the protected PE router, PE2:

1. Configure MPLS on the interfaces.

```

[edit protocols mpls]
user@PE2# set interface all
user@PE2#set interface fxp0.0 disable

```

2. Configure egress protection and the context identifier.

**NOTE:** The context identifier type must be set to **primary**.



```
[edit protocols mpls]
user@PE2# set egress-protection context-identifier 192.0.2.6 primary
```

3. Configure egress protection for the configured BGP NRLI.

**NOTE:** The context identifier configured at the **[edit protocols bgp group group-name family inet-vpn]** hierarchy level should match the context identifier configured at the **[edit protocols mpls]** hierarchy level.

```
[edit protocols bgp]
user@PE2# set group ibgp type internal
user@PE2# set group ibgp local-address 10.255.245.194
user@PE2# set group ibgp family inet-vpn unicast egress-protection context-identifier 192.0.2.6
```

**NOTE:** Configuring the context-identifier at the **[edit routing-instances routing-instance-name]** hierarchy level provides CE VRF-level context-id granularity for each virtual routing and forwarding (VRF) instance.

4. After you are done configuring the device, commit the configuration.

```
[edit]
user@PE2# commit
```

## Results

Confirm your configuration by issuing the show protocols command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE2# show protocols
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
  egress-protection {
    context-identifier 192.0.2.6 {
```



```

        primary;
    }
}
}
bgp {
    group ibgp {
        type internal;
        local-address 10.255.245.194;
        family inet-vpn {
            unicast {
                egress-protection {
                    context-identifier {
                        192.0.2.6;
                    }
                }
            }
        }
    }
}
}
}

```

### **Configuring the Protector PE Router (PE3)**

#### **Step-by-Step Procedure**

To configure the protector PE router, PE3:

1. Configure MPLS on the interfaces.

```

[edit protocols mpls]
user@PE3# set interface all
user@PE3# set mpls interface fxp0.0 disable

```

2. Configure egress protection and the context identifier.

```

[edit protocols mpls]
user@PE3# set egress-protection context-identifier 192.0.2.6 protector

```

3. Configure IPv4 Layer 3 VPN NRLI parameters.

```

[edit protocols bgp]
user@PE3# set group ibgp type internal
user@PE3# set group ibgp local-address 10.255.245.196
user@PE3# set group ibgp family inet-vpn unicast egress-protection keep-import remote-vrf

```



#### 4. Configure routing policy options.

```
[edit policy-options]
user@PE3# set policy-statement remote-vrf from community rsite1
user@PE3# set policy-statement remote-vrf from community rsite24
user@PE3# set policy-statement remote-vrf then accept
user@PE3# set community rsite1 members target:1:1
user@PE3# set community rsite24 members target:100:1023
```

#### 5. After you are done configuring the device, commit the configuration.

```
[edit]
user@PE3# commit
```

### Results

Confirm your configuration by issuing the **show protocols** and the **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE3# show protocols
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
  egress-protection {
    context-identifier 192.0.2.6 {
      protector;
    }
  }
}
bgp {
  group ibgp {
    type internal;
    local-address 10.255.245.196;
    family inet-vpn {
      unicast {
        egress-protection {
          keep-import remote-vrf;
        }
      }
    }
  }
}
```



```
}
}
```

```
user@PE3# show policy-options
policy-statement remote-vrf {
  from community [ rsite1 rsite24 ];
  then accept;
}
community rsite1 members target:1:1;
community rsite24 members target:100:1023;
```

### Configuring the PLR Router

#### Step-by-Step Procedure

To configure the router acting as the point of local repair (PLR):

1. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@PLR# set interface all
user@PLR# set interface fxp0.0 disable
```

2. Configure per-prefix-LFA calculation along with link protection.

```
[edit protocols isis]
user@PLR# set backup-spf-options per-prefix-calculation
user@PLR# set level 1 disable
user@PLR# set interface all node-link-protection
user@PLR# set interface fxp0.0 disable
```

3. Configure LDP to use the interior gateway protocol (IGP) route metric instead of the default LDP route metric (the default LDP route metric is 1).

```
[edit protocols ldp]
user@PLR# set track-igp-metric
user@PLR# set interface all
user@PLR# set interface fxp0.0 disable
```

### Results

Confirm your configuration by issuing the **show protocols** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.



```
user@PLR# show protocols
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
isis {
  backup-spf-options per-prefix-calculation;
  level 1 disable;
  interface all {
    node-link-protection;
  }
}
ldp {
  track-igp-metric;
  interface all;
  interface fxp0.0 {
    disable;
  }
}
```

## Verification

### IN THIS SECTION

- [Verifying Egress Protection Details | 984](#)
- [Verifying Routing Instances | 985](#)
- [Verifying BGP NRLI | 986](#)

Confirm that the configuration is working properly.

### *Verifying Egress Protection Details*

#### Purpose

Check the egress protection configuration.

#### Action

```
user@PE3> show mpls egress-protection details
```



```

Instance                Type      Protection-Type
rsite1                  remote-vrf  Protector
  RIB __192.0.2.6-rsite1__.inet.0, Context-Id 192.0.2.6, Enhanced-lookup
  Route Target 1:1
rsite24                  remote-vrf  Protector
  RIB __192.0.2.6-rsite24__.inet.0, Context-Id 192.0.2.6, Enhanced-lookup
  Route Target 100:1023

```

### Meaning

**Instance** indicates the routing-instance name. **Type** shows the type of the VRF. It can be either **local-vrf** or **remote-vrf**. **RIB** (routing information base) indicates the edge-protection created routing table. **Context-Id** shows the context ID associated with the RIB. **Route Target** shows the route target associated with the routing instance.

### Verifying Routing Instances

#### Purpose

Verify the routing instances.

#### Action

```
user@PE3> show route instance site1 detail
```

```

site1:
  Router ID: 198.51.100.1
  Type: vrf              State: Active
  Interfaces:
    lt-1/3/0.8
  Route-distinguisher: 10.255.255.11:150
  Vrf-import: [ site1-import ]
  Vrf-export: [ __vrf-export-site1-internal__ ]
  Vrf-export-target: [ target:100:250 ]
  Fast-reroute-priority: low
  Vrf-edge-protection-id: 192.0.2.6
  Tables:
    site1.inet.0          : 27 routes (26 active, 0 holddown, 0 hidden)
    site1.iso.0           : 0 routes (0 active, 0 holddown, 0 hidden)
    site1.inet6.0         : 0 routes (0 active, 0 holddown, 0 hidden)
    site1.mdt.0           : 0 routes (0 active, 0 holddown, 0 hidden)

```



**Meaning**

**Vrf-edge-protection-id** shows the egress protection configured in the protector PE router with the routing instance.

**Verifying BGP NLRI****Purpose**

Check the details of the BGP VPN network layer reachability information.

**Action**

```
user@PE3> show bgp neighbor
```

```
Peer: 10.255.55.1+179 AS 65535 Local: 10.255.22.1+59264 AS 65535
  Type: Internal      State: Established      Flags: <ImportEval Sync>
  Last State: OpenConfirm  Last Event: RecvKeepAlive
  Last Error: None
  Options: <Preference LocalAddress KeepAll AddressFamily Rib-group Refresh>
  Address families configured: inet-vpn-unicast
  Local Address: 10.255.22.1 Holdtime: 90 Preference: 170
  NLRI configured with egress-protection: inet-vpn-unicast
  Egress-protection NLRI inet-vpn-unicast, keep-import: [ VPN-A-remote ]
  Number of flaps: 0
```

**Meaning**

**NLRI configured with egress-protection** shows the BGP family configured with egress protection.

**egress-protection NLRI inet-vpn-unicast, keep-import: [remote-vrf]** shows the egress protection routing policy for the BGP group.

## Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP

**IN THIS SECTION**

- [Requirements | 987](#)
- [Overview | 987](#)
- [Configuration | 988](#)
- [Verification | 1008](#)



This example shows how to configure fast service restoration at the egress of a Layer 3 VPN when the customer is multihomed to the service provider. Further, this example includes enhanced point-of-local-repair (PLR) functionality, in which the PLR reroutes service traffic during an egress failure.

Starting in Junos OS Release 13.3, enhanced PLR functionality is available, in which the PLR reroutes service traffic during an egress failure. As part of this enhancement, the PLR router no longer needs to be directly connected to the protector router. Previously, if the PLR was not directly connected to the protector router, the loop-free alternate route could not find the backup path to the protector.

## Requirements

No special configuration beyond device initialization is required before configuring this example.

This example requires Junos OS Release 13.3 or later.

## Overview

In this example, the customer edge (CE) devices are part of a VPN where Device CE1 is multihomed with Device PE2 and Device PE3.

Device PE3 acts as the protector for the Layer 3 VPN routing instances or subnets.

Device PE1 is the originator for the context identifier for Device CE1, Device PE2 is the primary router for that context identifier, while Device PE3 is the protector for that context identifier.

Device P1 acts as the point of local repair (PLR). As such, Device P1 can redirect Layer 3 VPN traffic to the protector PE router to enable fast restoration and reroute.

The working path is through P1>PE2. The backup path is through P1>PE3. Traffic flows through the working path under normal circumstances. When a Device PE2 node or link failure is detected, traffic is rerouted from the working path to the protected path. In the normal failover process, the detection of failure and the recovery rely on the control plane and is therefore relatively slow. Typically, if there is a link or node failure in the core network, the egress PE router would have to rely on the ingress PE router to detect the failure and switch over to the backup path, because a local repair option for egress failure is not available. To provide a local repair solution for the egress PE link or node failure, a mechanism known as egress protection is used in this example to repair and restore the connection quickly. Because egress protection is configured, the PLR router detects the Device PE2 link or node failure and reroutes traffic through the protector Device PE3 using the backup LDP-signaled label-switched path (LSP). The PLR router uses per-prefix loop-free alternate routes to program the backup next hop through Device PE3, and traffic is forwarded to Device CE2 using the alternate paths. This restoration is done quickly after the PLR router detects the Device PE2 egress node or link failure. The dual protection mechanism can also be used for egress protection where the two PE routers can simultaneously act as the primary PE router and the protector PE router for their respective context ID routes or next hops.




In addition to egress protection, this example demonstrates an enhanced PLR function, in which the PLR reroutes service traffic during the egress failure. This enhancement is supported in Junos OS Release 13.3 and later. In this example, Device P1 (the PLR) is directly connected to Device PE3 (the protector). A new configuration statement, **advertise-mode**, enables you to set the method for the interior gateway protocol (IGP) to advertise egress protection availability.

### Topology

Figure 81 on page 988 shows the sample network.

Figure 81: Layer 3 VPN Egress Protection with RSVP and LDP

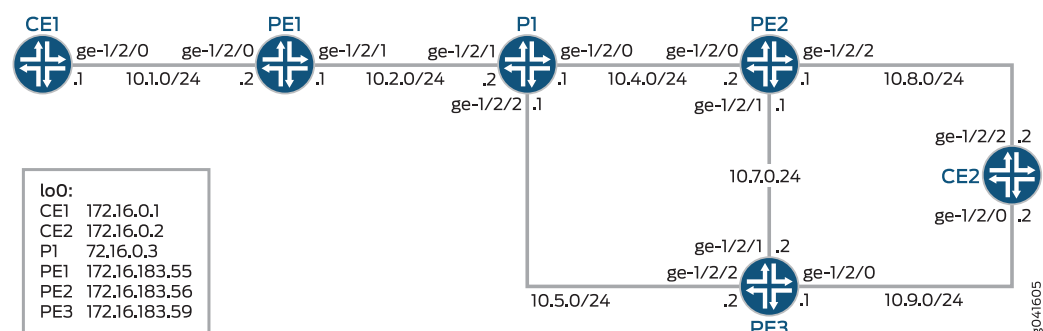

### Configuration

#### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device CE1

```
set interfaces ge-1/2/0 unit 0 description to_PE1
set interfaces ge-1/2/0 unit 0 family inet address 10.1.0.1/24
set interfaces lo0 unit 0 family inet address 172.16.0.1/32
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0
```

#### Device CE2

```
set interfaces ge-1/2/2 unit 0 description to_PE2
set interfaces ge-1/2/2 unit 0 family inet address 10.8.0.2/24
```



```

set interfaces ge-1/2/0 unit 0 description to_PE3
set interfaces ge-1/2/0 unit 0 family inet address 10.9.0.2/24
set interfaces lo0 unit 0 family inet address 172.16.0.2/32
set protocols ospf area 0.0.0.0 interface ge-1/2/2.0
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0

```

## Device P1

```

set interfaces ge-1/2/1 unit 0 description to_PE1
set interfaces ge-1/2/1 unit 0 family inet address 10.2.0.2/24
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces ge-1/2/0 unit 0 description to_PE2
set interfaces ge-1/2/0 unit 0 family inet address 10.4.0.1/24
set interfaces ge-1/2/0 unit 0 family iso
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-1/2/2 unit 0 description to_PE3
set interfaces ge-1/2/2 unit 0 family inet address 10.5.0.1/24
set interfaces ge-1/2/2 unit 0 family iso
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 172.16.0.3/32
set interfaces lo0 unit 0 family iso address 49.0002.0172.0016.0003.00
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols isis backup-spf-options per-prefix-calculation
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all node-link-protection
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0
set protocols ldp track-igp-metric
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable

```

## Device PE1



```

set interfaces ge-1/2/0 unit 0 description to_CE1
set interfaces ge-1/2/0 unit 0 family inet address 10.1.0.2/24
set interfaces ge-1/2/1 unit 0 description to_P1
set interfaces ge-1/2/1 unit 0 family inet address 10.2.0.1/24
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 172.16.183.55/32
set interfaces lo0 unit 0 family iso address 49.0002.1720.1618.3055.00
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls label-switched-path toPrimary192.0.2.6 to 192.0.2.6
set protocols mpls label-switched-path toPrimary192.0.2.6 egress-protection
set protocols mpls interface all
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 172.16.183.55
set protocols bgp group ibgp family inet-vpn unicast
set protocols bgp group ibgp neighbor 172.16.183.56
set protocols bgp group ibgp neighbor 172.16.183.59
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0
set protocols ldp track-igp-metric
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-1/2/0.0
set routing-instances vpn1 route-distinguisher 172.16.183.55:10
set routing-instances vpn1 vrf-target target:10:10
set routing-instances vpn1 routing-options static route 100.0.0.0/24 next-hop 10.1.0.1
set routing-instances vpn1 protocols ospf area 0.0.0.0 interface ge-1/2/0.0
set routing-options autonomous-system 64510

```

## Device PE2

```

set interfaces ge-1/2/0 unit 0 description to_P1
set interfaces ge-1/2/0 unit 0 family inet address 10.4.0.2/24
set interfaces ge-1/2/0 unit 0 family iso
set interfaces ge-1/2/0 unit 0 family mpls

```



```

set interfaces ge-1/2/2 unit 0 description to_CE2
set interfaces ge-1/2/2 unit 0 family inet address 10.8.0.1/24
set interfaces ge-1/2/1 unit 0 description to_PE3
set interfaces ge-1/2/1 unit 0 family inet address 10.7.0.1/24
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 172.16.183.56/32
set interfaces lo0 unit 0 family iso address 49.0002.1720.1618.3056.00
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls label-switched-path toPE1 to 172.16.183.55
set protocols mpls label-switched-path toPrimary192.0.2.6 to 192.0.2.6
set protocols mpls label-switched-path toPrimary192.0.2.6 egress-protection
set protocols mpls interface all
set protocols mpls egress-protection context-identifier 192.0.2.6 primary
set protocols mpls egress-protection context-identifier 192.0.2.6 advertise-mode stub-proxy
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 172.16.183.56
set protocols bgp group ibgp family inet-vpn unicast egress-protection context-identifier 192.0.2.6
set protocols bgp group ibgp neighbor 172.16.183.55
set protocols bgp group ibgp neighbor 172.16.183.59
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0
set protocols ldp track-igp-metric
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set routing-options autonomous-system 64510

```

### Device PE3

```

set interfaces ge-1/2/2 unit 0 description to_P1
set interfaces ge-1/2/2 unit 0 family inet address 10.5.0.2/24
set interfaces ge-1/2/2 unit 0 family iso
set interfaces ge-1/2/2 unit 0 family mpls
set interfaces ge-1/2/0 unit 0 description to_CE2
set interfaces ge-1/2/0 unit 0 family inet address 10.9.0.1/24
set interfaces ge-1/2/1 unit 0 description to_PE2

```



```

set interfaces ge-1/2/1 unit 0 family inet address 10.7.0.2/24
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 172.16.183.59/32
set interfaces lo0 unit 0 family iso address 49.0002.1720.1618.3059.00
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls label-switched-path toPE1 to 172.16.183.55
set protocols mpls interface all
set protocols mpls egress-protection context-identifier 192.0.2.6 protector
set protocols mpls egress-protection context-identifier 192.0.2.6 advertise-mode stub-proxy
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 172.16.183.59
set protocols bgp group ibgp family inet-vpn unicast egress-protection keep-import remote-vrf
set protocols bgp group ibgp neighbor 172.16.183.55
set protocols bgp group ibgp neighbor 172.16.183.56
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0
set protocols ldp track-igp-metric
set protocols ldp interface all
set policy-options policy-statement remote-vrf from community rsite1
set policy-options policy-statement remote-vrf from community rsite24
set policy-options policy-statement remote-vrf then accept
set policy-options community rsite1 members target:1:1
set policy-options community rsite24 members target:100:1023
set routing-options autonomous-system 64510

```

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device P1 (the PLR):

1. Configure the device interfaces.

```

[edit interfaces]
user@P1# set ge-1/2/1 unit 0 description to_PE1
user@P1# set ge-1/2/1 unit 0 family inet address 10.2.0.2/24
user@P1# set ge-1/2/1 unit 0 family iso

```



```

user@P1# set ge-1/2/1 unit 0 family mpls
user@P1# set ge-1/2/0 unit 0 description to_PE2
user@P1# set ge-1/2/0 unit 0 family inet address 10.4.0.1/24
user@P1# set ge-1/2/0 unit 0 family iso
user@P1# set ge-1/2/0 unit 0 family mpls
user@P1# set ge-1/2/2 unit 0 description to_PE3
user@P1# set ge-1/2/2 unit 0 family inet address 10.5.0.1/24
user@P1# set ge-1/2/2 unit 0 family iso
user@P1# set ge-1/2/2 unit 0 family mpls
user@P1# set lo0 unit 0 family inet address 172.16.0.3/32
user@P1# set lo0 unit 0 family iso address 49.0002.0172.0016.0003.00

```

## 2. Configure IS-IS.

Configure per-prefix-LFA calculation along with node link protection.

```

[edit protocols isis]
user@P1# set backup-spf-options per-prefix-calculation
user@P1# set level 1 disable
user@P1# set level 2 wide-metrics-only
user@P1# set interface all node-link-protection
user@P1# set interface fxp0.0 disable
user@P1# set interface lo0.0

```

## 3. Enable MPLS.

```

[edit protocols mpls ]
user@P1# set interface all

```

## 4. Enable RSVP.

```

[edit protocols rsvp]
user@P1# set interface all
user@P1# set interface fxp0.0 disable

```

## 5. Enable LDP.

```

[edit protocols ldp]
user@P1# set track-igp-metric
user@P1# set interface all

```



```
user@PE1# set interface fxp0.0 disable
```

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the device interfaces.

```
[edit interfaces]
user@PE1# set ge-1/2/0 unit 0 description to_CE1
user@PE1# set ge-1/2/0 unit 0 family inet address 10.1.0.2/24
user@PE1# set ge-1/2/1 unit 0 description to_P1
user@PE1# set ge-1/2/1 unit 0 family inet address 10.2.0.1/24
user@PE1# set ge-1/2/1 unit 0 family iso
user@PE1# set ge-1/2/1 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 172.16.183.55/32
user@PE1# set lo0 unit 0 family iso address 49.0002.1720.1618.3055.00
```

2. Enable RSVP.

```
[edit protocols rsvp]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
```

3. Configure MPLS.

```
[edit protocols mpls]
user@PE1# set label-switched-path toPrimary192.0.2.6 to 192.0.2.6
user@PE1# set label-switched-path toPrimary192.0.2.6 egress-protection
user@PE1# set interface all
```

4. Configure IBGP.

```
[edit protocols bgp group ibgp]
user@PE1# set type internal
user@PE1# set local-address 172.16.183.55
user@PE1# set family inet-vpn unicast
user@PE1# set neighbor 172.16.183.56
```



```
user@PE1# set neighbor 172.16.183.59
```

5. Configure IS-IS.

```
[edit protocols isis]
user@PE1# set level 1 disable
user@PE1# set level 2 wide-metrics-only
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
user@PE1# set interface lo0.0
```

6. Enable LDP.

```
[edit protocols ldp]
user@PE1# set track-igp-metric
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
```

7. Configure the routing instance.

```
[edit routing-instances vpn1]
user@PE1# set instance-type vrf
user@PE1# set interface ge-1/2/0.0
user@PE1# set route-distinguisher 172.16.183.55:10
user@PE1# set vrf-target target:10:10
user@PE1# set routing-options static route 100.0.0.0/24 next-hop 10.1.0.1
user@PE1# set protocols ospf area 0.0.0.0 interface ge-1/2/0.0
```

8. Configure the autonomous system (AS) number.

```
[edit routing-options]
user@PE1# set autonomous-system 64510
```

## Step-by-Step Procedure



The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE2:

1. Configure the device interfaces.

```
[edit interfaces]
user@PE2# set ge-1/2/0 unit 0 description to_P1
user@PE2# set ge-1/2/0 unit 0 family inet address 10.4.0.2/24
user@PE2# set ge-1/2/0 unit 0 family iso
user@PE2# set ge-1/2/0 unit 0 family mpls
user@PE2# set ge-1/2/2 unit 0 description to_CE2
user@PE2# set ge-1/2/2 unit 0 family inet address 10.8.0.1/24
user@PE2# set ge-1/2/1 unit 0 description to_PE3
user@PE2# set ge-1/2/1 unit 0 family inet address 10.7.0.1/24
user@PE2# set ge-1/2/1 unit 0 family iso
user@PE2# set ge-1/2/1 unit 0 family mpls
user@PE2# set lo0 unit 0 family inet address 172.16.183.56/32
user@PE2# set lo0 unit 0 family iso address 49.0002.1720.1618.3056.00
```

2. Enable RSVP.

```
[edit protocols rsvp]
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
```

3. Configure MPLS.

```
[edit protocols mpls]
user@PE2# set label-switched-path toPE1 to 172.16.183.55
user@PE2# set label-switched-path toPrimary192.0.2.6 to 192.0.2.6
user@PE2# set label-switched-path toPrimary192.0.2.6 egress-protection
user@PE2# set interface all
user@PE2# set egress-protection context-identifier 192.0.2.6 primary
user@PE2# set egress-protection context-identifier 192.0.2.6 advertise-mode stub-proxy
```

4. Configure IBGP.

```
[edit protocols bgp group ibgp]
user@PE2# set type internal
user@PE2# set local-address 172.16.183.56
```



```

user@PE2# set family inet-vpn unicast egress-protection context-identifier 192.0.2.6
user@PE2# set neighbor 172.16.183.55
user@PE2# set neighbor 172.16.183.59

```

## 5. Configure IS-IS.

```

[edit protocols isis]
user@PE2# set level 1 disable
user@PE2# set level 2 wide-metrics-only
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
user@PE2# set interface lo0.0

```

## 6. Enable LDP.

```

[edit protocols ldp]
user@PE2# set track-igp-metric
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable

```

## 7. Configure the AS number.

```

[edit routing-options]
user@PE2# set autonomous-system 64510

```

## Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE3:

### 1. Configure the device interfaces.

```

[edit interfaces]
user@PE3# set ge-1/2/2 unit 0 description to_P1
user@PE3# set ge-1/2/2 unit 0 family inet address 10.5.0.2/24
user@PE3# set ge-1/2/2 unit 0 family iso
user@PE3# set ge-1/2/2 unit 0 family mpls
user@PE3# set ge-1/2/0 unit 0 description to_CE2
user@PE3# set ge-1/2/0 unit 0 family inet address 10.9.0.1/24

```



```

user@PE3# set ge-1/2/1 unit 0 description to_PE2
user@PE3# set ge-1/2/1 unit 0 family inet address 10.7.0.2/24
user@PE3# set ge-1/2/1 unit 0 family iso
user@PE3# set ge-1/2/1 unit 0 family mpls
user@PE3# set lo0 unit 0 family inet address 172.16.183.59/32
user@PE3# set lo0 unit 0 family iso address 49.0002.1720.1618.3059.00

```

## 2. Enable RSVP.

```

[edit protocols rsvp]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable

```

## 3. Configure MPLS.

```

[edit protocols mpls]
user@PE3# set label-switched-path toPE1 to 172.16.183.55
user@PE3# set interface all
user@PE3# set egress-protection context-identifier 192.0.2.6 protector
user@PE3# set egress-protection context-identifier 192.0.2.6 advertise-mode stub-proxy

```

## 4. Configure IBGP.

```

[edit protocols bgp group ibgp]
user@PE3# set type internal
user@PE3# set local-address 172.16.183.59
user@PE3# set family inet-vpn unicast egress-protection keep-import remote-vrf
user@PE3# set neighbor 172.16.183.55
user@PE3# set neighbor 172.16.183.56

```

## 5. Configure IS-IS.

```

[edit protocols isis]
user@PE3# set level 1 disable
user@PE3# set level 2 wide-metrics-only
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
user@PE3# set interface lo0.0

```

## 6. Enable LDP.



```
[edit protocols ldp]
user@PE3# set track-igp-metric
user@PE3# set interface all
```

## 7. Configure the routing policy.

```
[edit policy-options]
user@PE3# set policy-statement remote-vrf from community rsite1
user@PE3# set policy-statement remote-vrf from community rsite24
user@PE3# set policy-statement remote-vrf then accept
user@PE3# set community rsite1 members target:1:1
user@PE3# set community rsite24 members target:100:1023
```

## 8. Configure the AS number.

```
[edit routing-options]
user@PE3# set autonomous-system 64510
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

## Device P1

```
user@P1# show interfaces
ge-1/2/0 {
  unit 0 {
    description to_PE2;
    family inet {
      address 10.4.0.1/24;
    }
    family iso;
    family mpls;
  }
}
ge-1/2/1 {
  unit 0{
```



```

        description to_PE1;
        family inet {
            address 10.2.0.2/24;
        }
        family iso;
        family mpls;
    }
}
ge-1/2/2 {
    unit 0 {
        description to_PE3;
        family inet {
            address 10.5.0.1/24;
        }
        family iso;
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 172.16.0.3/32;
        }
        family iso {
            address 49.0002.0172.0016.0003.00;
        }
    }
}
}

```

```

user@P1# show protocols
rsvp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
mpls {
    interface all;
}
isis {
    backup-spf-options per-prefix-calculation;
}

```



```

level 1 disable;
level 2 wide-metrics-only;
interface all {
    node-link-protection;
}
interface fxp0.0 {
    disable;
}
interface lo0.0;
}
ldp {
    track-igp-metric;
    interface all;
    interface fxp0.0 {
        disable;
    }
}

```

#### Device PE1

```

user@PE1# show interfaces
ge-1/2/0 {
    unit 0 {
        description to_CE1;
        family inet {
            address 10.1.0.2/24;
        }
    }
}
ge-1/2/1 {
    unit 0 {
        description to_P1;
        family inet {
            address 10.2.0.1/24;
        }
        family iso;
        family mpls;
    }
}

```



```

lo0 {
  unit 0 {
    family inet {
      address 172.16.183.55/32;
    }
    family iso {
      address 49.0002.1720.1618.3055.00;
    }
  }
}

```

user@PE1# **show protocols**

```

rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  label-switched-path toPE2Primary192.0.2.6 {
    to 192.0.2.6;
    egress-protection;
  }
  interface all;
}
bgp {
  group ibgp {
    type internal;
    local-address 172.16.183.55;
    family inet-vpn {
      unicast;
    }
    neighbor 172.16.183.56;
    neighbor 172.16.183.59;
  }
}
isis {
  level 1 disable;
  level 2 wide-metrics-only;
  interface all;
  interface fxp0.0 {
    disable;
  }
  interface lo0.0;
}

```



```

}
ldp {
  track-igp-metric;
  interface all;
  interface fxp0.0 {
    disable;
  }
}

```

```

user@PE1# show routing-instances
vpn1 {
  instance-type vrf;
  interface ge-1/2/0.0;
  route-distinguisher 172.16.183.55:10;
  vrf-target target:10:10;
  routing-options {
    static {
      route 100.0.0.0/24 next-hop 10.1.0.1;
    }
  }
  protocols {
    ospf {
      area 0.0.0.0 {
        interface ge-1/2/0.0;
      }
    }
  }
}

```

```

user@PE1# show routing-options
autonomous-system 64510;

```

## Device PE2

```

user@PE2# show interfaces
ge-1/2/0 {
  unit 0 {
    description to_P1;
  }
}

```



```

    family inet {
        address 10.4.0.2/24;
    }
    family iso;
    family mpls;
}
}
ge-1/2/1 {
    unit 0 {
        description to_PE3;
        family inet {
            address 10.7.0.1/24;
        }
        family iso;
        family mpls;
    }
}
ge-1/2/2 {
    unit 0 {
        description to_CE2;
        family inet {
            address 10.8.0.1/24;
        }
    }
}
lo0 {
    unit 0 {
        family inet {
            address 172.16.183.56/32;
        }
        family iso {
            address 49.0002.1720.1618.3056.00;
        }
    }
}
}

```

user@PE2# **show protocols**

```

rsvp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
mpls {

```



```

label-switched-path toPE1 {
    to 172.16.183.55;
}
label-switched-path toPE2Primary192.0.2.6 {
    to 192.0.2.6;
    egress-protection;
}
interface all;
egress-protection {
    context-identifier 192.0.2.6 {
        primary;
        advertise-mode stub-proxy;
    }
}
}
bgp {
    group ibgp {
        type internal;
        local-address 172.16.183.56;
        family inet-vpn {
            unicast {
                egress-protection {
                    context-identifier {
                        192.0.2.6;
                    }
                }
            }
        }
        neighbor 172.16.183.55;
        neighbor 172.16.183.59;
    }
}
isis {
    level 1 disable;
    level 2 wide-metrics-only;
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}
ldp {
    track-igp-metric;
    interface all;
}

```



```

interface fxp0.0 {
  disable;
}

```

```

user@PE2# show routing-options
autonomous-system 64510;

```

### Device PE3

```

user@PE3# show interfaces
ge-1/2/0 {
  unit 0 {
    description to_CE2;
    family inet {
      address 10.9.0.1/24;
    }
  }
}
ge-1/2/1 {
  unit 0 {
    description to_PE2;
    family inet {
      address 10.7.0.2/24;
    }
    family iso;
    family mpls;
  }
}
ge-1/2/2 {
  unit 0 {
    description to_P1;
    family inet {
      address 10.5.0.2/24;
    }
    family iso;
    family mpls;
  }
}

```



```

lo0 {
  unit 0 {
    family inet {
      address 172.16.183.59/32;
    }
    family iso {
      address 49.0002.1720.1618.3059.00;
    }
  }
}

```

user@PE3# **show protocols**

```

rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  label-switched-path toPE1 {
    to 172.16.183.55;
  }
  interface all;
  egress-protection {
    context-identifier 192.0.2.6 {
      protector;
      advertise-mode stub-proxy;
    }
  }
}
bgp {
  group ibgp {
    type internal;
    local-address 172.16.183.59;
    family inet-vpn {
      unicast {
        egress-protection {
          keep-import remote-vrf;
        }
      }
    }
  }
  neighbor 172.16.183.55;
  neighbor 172.16.183.56;
}

```



```

}
isis {
    level 1 disable;
    level 2 wide-metrics-only;
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}
ldp {
    track-igp-metric;
    interface all;
}

```

```

user@PE3# show policy-options
policy-statement remote-vrf {
    from community [ rsite1 rsite24 ];
    then accept;
}
community rsite1 members target:1:1;
community rsite24 members target:100:1023;

```

```

user@PE3# show routing-options
autonomous-system 64510;

```

If you are done configuring the devices, enter **commit** from configuration mode.

## Verification

### IN THIS SECTION

- [Verifying the Protector Node | 1009](#)
- [Verifying the Primary Node | 1009](#)
- [Checking the Context Identifier Route | 1010](#)
- [Verifying Egress Protection | 1011](#)
- [Verifying the Routing Instance on Device PE1 | 1012](#)
- [Verifying the LSPs | 1012](#)
- [Verifying BGP NRLI | 1019](#)



- [Verifying the Traffic Engineering Database | 1021](#)
- [Verifying the IS-IS Database | 1027](#)

Confirm that the configuration is working properly.

### ***Verifying the Protector Node***

#### **Purpose**

On the protector node (Device PE3), check the information about configured egress protection context identifiers.

#### **Action**

```
user@PE3> show mpls context-identifier detail protector
```

```
ID: 192.0.2.6
  Type: protector, Metric: 16777215, Mode: proxy
  Context table: __PE3:192.0.2.6__.mpls.0
  Context LSPs:
    toPE2Primary192.0.2.6, from: 172.16.183.55
    toPE2Primary192.0.2.6, from: 172.16.183.56

Total 1, Primary 0, Protector 1
```

#### **Meaning**

Device PE3 is the protector node for two LSPs configured from Device PE1 (172.16.183.55) and Device PE2 (172.16.183.56).

### ***Verifying the Primary Node***

#### **Purpose**

On the primary node (Device PE2), check the information about configured egress protection context identifiers.

#### **Action**

```
user@PE2> show mpls context-identifier detail primary
```



```
ID: 192.0.2.6
  Type: primary, Metric: 1, Mode: proxy

Total 1, Primary 1, Protector 0
```

### Meaning

Device PE2 is the primary node.

### Checking the Context Identifier Route

### Purpose

Examine the information about the context identifier (192.0.2.6).

### Action

```
user@PE1> show route 192.0.2.6
```

```
inet.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.6/24          *[IS-IS/18] 00:53:39, metric 21
> to 10.2.0.2 via ge-1/2/1.0

inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.6/24          *[LDP/9] 00:53:39, metric 21
> to 10.2.0.2 via ge-1/2/1.0, Push 299808
```

```
user@PE2> show route 192.0.2.6
```

```
inet.0: 13 destinations, 14 routes (13 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.6/24          *[MPLS/1] 3d 02:53:37, metric 1
                        Receive
                        [IS-IS/18] 00:06:08, metric 16777224
> to 10.7.0.2 via ge-1/2/1.0
```



user@PE3> **show route 192.0.2.6**

```
inet.0: 13 destinations, 14 routes (13 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.6/24          *[MPLS/2] 3d 02:53:36, metric 16777215
                    Receive
                    [IS-IS/18] 3d 02:53:28, metric 11
                    > to 10.7.0.1 via ge-1/2/1.0
```

user@P1> **show route 192.0.2.6**

```
inet.0: 12 destinations, 12 routes (12 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.6/24          *[IS-IS/18] 00:53:40, metric 11
                    > to 10.4.0.2 via ge-1/2/0.0

inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.6/24          *[LDP/9] 00:53:40, metric 11
                    > to 10.4.0.2 via ge-1/2/0.0
```

### Verifying Egress Protection

#### Purpose

On Device PE3, check the routes in the routing table.

#### Action

user@PE3> **show mpls egress-protection detail**

Instance	Type	Protection-Type
rsite1	remote-vrf	Protector
Route Target 1:1		
rsite24	remote-vrf	Protector
Route Target 100:1023		

#### Meaning



**Instance** indicates the community name. **Type** shows the type of the VRF. It can be either **local-vrf** or **remote-vrf**. **Route Target** shows the route target associated with the routing instance.

### **Verifying the Routing Instance on Device PE1**

#### **Purpose**

On Device PE1, check the routes in the routing table.

#### **Action**

```
user@PE1> show route instance vpn1 detail
```

```
vpn1:
  Router ID: 10.1.0.2
  Type: vrf                      State: Active
  Interfaces:
    ge-1/2/0.0
  Route-distinguisher: 172.16.183.55:10
  Vrf-import: [ __vrf-import-vpn1-internal__ ]
  Vrf-export: [ __vrf-export-vpn1-internal__ ]
  Vrf-import-target: [ target:10:10 ]
  Vrf-export-target: [ target:10:10 ]
  Fast-reroute-priority: low
  Tables:
    vpn1.inet.0                : 4 routes (4 active, 0 holddown, 0 hidden)
```

### **Verifying the LSPs**

#### **Purpose**

On all devices, check the LSP information.

#### **Action**

```
user@PE1> show mpls lsp extensive
```

```
Ingress LSP: 1 sessions

192.0.2.6
  From: 172.16.183.55, State: Up, ActiveRoute: 0, LSPname: toPE2Primary192.0.2.6
  ActivePath: (primary)
  LSPTYPE: Static Configured, Penultimate hop popping
  LoadBalance: Random
```



```

Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 16777234)
10.2.0.2 S 10.5.0.2 S 192.0.2.6 S (link-id=2)
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.2.0.2 10.5.0.2
  17 Jun 10 13:13:04.973 CSPF: computation result accepted 10.2.0.2 10.5.0.2
192.0.2.6(link-id=2)
  16 Jun 10 13:12:36.155 CSPF failed: no route toward 192.0.2.6[4 times]
  15 Jun 10 13:11:26.269 CSPF: link down/deleted:
0.0.0.0(172.16.183.59:2147618818)(PE3.00/172.16.183.59)->0.0.0.0(192.0.2.6:2)(PE2-192.0.2.6.00/192.0.2.6)

  14 Jun 10 13:10:11.771 Selected as active path
  13 Jun 10 13:10:11.770 Record Route: 10.2.0.2 10.5.0.2
  12 Jun 10 13:10:11.770 Up
  11 Jun 10 13:10:11.634 Originate Call
  10 Jun 10 13:10:11.634 CSPF: computation result accepted 10.2.0.2 10.5.0.2
192.0.2.6(link-id=2)
  9 Jun 10 13:10:11.623 Clear Call
  8 Jun 10 13:10:11.622 Deselected as active
  7 Jun 7 11:23:08.224 Selected as active path
  6 Jun 7 11:23:08.224 Record Route: 10.2.0.2 10.5.0.2
  5 Jun 7 11:23:08.223 Up
  4 Jun 7 11:23:08.116 Originate Call
  3 Jun 7 11:23:08.116 CSPF: computation result accepted 10.2.0.2 10.5.0.2
192.0.2.6(link-id=2)
  2 Jun 7 11:22:38.132 CSPF failed: no route toward 192.0.2.6
  1 Jun 7 11:22:08.607 CSPF: could not determine self[8 times]
  Created: Fri Jun 7 11:18:46 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 2 sessions

172.16.183.55
  From: 172.16.183.59, LSPstate: Up, ActiveRoute: 0
  LSPname: toPE1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 126, Since: Mon Jun 10 13:10:11 2013
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

```



```

Port number: sender 2 receiver 10941 protocol 0
PATH rcvfrom: 10.2.0.2 (ge-1/2/1.0) 105 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.5.0.2 10.2.0.2 <self>

172.16.183.55
  From: 172.16.183.56, LSPstate: Up, ActiveRoute: 0
  LSPname: toPE1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 156, Since: Mon Jun 10 13:10:11 2013
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 59956 protocol 0
  PATH rcvfrom: 10.2.0.2 (ge-1/2/1.0) 105 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.4.0.2 10.2.0.2 <self>
Total 2 displayed, Up 2, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
-----

```

user@PE2> **show mpls lsp extensive**

```

Ingress LSP: 2 sessions

192.0.2.6
  From: 172.16.183.56, State: Up, ActiveRoute: 0, LSPname: toPE2Primary192.0.2.6
  ActivePath: (primary)
  LSPtype: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 16777224)
    10.7.0.2 S 192.0.2.6 S (link-id=2)
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
    20=Node-ID):

```



```

10.7.0.2
16 Jun 10 13:13:07.220 CSPF: computation result accepted 10.7.0.2
192.0.2.6(link-id=2)
15 Jun 10 13:12:38.250 CSPF failed: no route toward 192.0.2.6[4 times]
14 Jun 10 13:11:26.258 CSPF: link down/deleted:
0.0.0.0(172.16.183.59:2147618818)(PE3.00/172.16.183.59)->0.0.0.0(192.0.2.6:2)(PE2-192.0.2.6.00/192.0.2.6)

13 Jun 10 13:10:11.746 Selected as active path
12 Jun 10 13:10:11.743 Record Route: 10.7.0.2
11 Jun 10 13:10:11.742 Up
10 Jun 10 13:10:11.680 Originate Call
9 Jun 10 13:10:11.680 CSPF: computation result accepted 10.7.0.2
192.0.2.6(link-id=2)
8 Jun 10 13:10:11.674 Clear Call
7 Jun 10 13:10:11.669 Deselected as active
6 Jun 7 11:23:09.370 Selected as active path
5 Jun 7 11:23:09.370 Record Route: 10.7.0.2
4 Jun 7 11:23:09.369 Up
3 Jun 7 11:23:09.349 Originate Call
2 Jun 7 11:23:09.349 CSPF: computation result accepted 10.7.0.2
192.0.2.6(link-id=2)
1 Jun 7 11:22:40.140 CSPF failed: no route toward 192.0.2.6[9 times]
Created: Fri Jun 7 11:18:46 2013

172.16.183.55
From: 172.16.183.56, State: Up, ActiveRoute: 0, LSPname: toPE1
ActivePath: (primary)
LSPTtype: Static Configured, Penultimate hop popping
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up
Priorities: 7 0
SmartOptimizeTimer: 180
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.4.0.1 S 10.2.0.1 S
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
10.4.0.1 10.2.0.1
13 Jun 10 13:10:11.794 Selected as active path
12 Jun 10 13:10:11.793 Record Route: 10.4.0.1 10.2.0.1
11 Jun 10 13:10:11.793 Up
10 Jun 10 13:10:11.679 Originate Call
9 Jun 10 13:10:11.679 CSPF: computation result accepted 10.4.0.1 10.2.0.1
8 Jun 10 13:10:11.660 Clear Call

```



```

7 Jun 10 13:10:11.645 Deselected as active
6 Jun 7 11:22:40.031 Selected as active path
5 Jun 7 11:22:40.024 Record Route: 10.4.0.1 10.2.0.1
4 Jun 7 11:22:40.012 Up
3 Jun 7 11:22:39.687 Originate Call
2 Jun 7 11:22:39.687 CSPF: computation result accepted 10.4.0.1 10.2.0.1
1 Jun 7 11:22:10.235 CSPF failed: no route toward 172.16.183.55[8 times]
Created: Fri Jun 7 11:18:45 2013
Total 2 displayed, Up 2, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

user@PE3> **show mpls lsp extensive**

```

Ingress LSP: 1 sessions

172.16.183.55
  From: 172.16.183.59, State: Up, ActiveRoute: 0, LSPname: toPE1
  ActivePath: (primary)
  LSPTtype: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.5.0.1 S 10.2.0.1 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.5.0.1 10.2.0.1
13 Jun 10 13:10:11.708 Selected as active path
12 Jun 10 13:10:11.703 Record Route: 10.5.0.1 10.2.0.1
11 Jun 10 13:10:11.703 Up
10 Jun 10 13:10:11.599 Originate Call
9 Jun 10 13:10:11.599 CSPF: computation result accepted 10.5.0.1 10.2.0.1
8 Jun 10 13:10:11.558 Clear Call
7 Jun 10 13:10:11.555 Deselected as active
6 Jun 7 11:22:41.829 Selected as active path
5 Jun 7 11:22:41.828 Record Route: 10.5.0.1 10.2.0.1
4 Jun 7 11:22:41.827 Up

```



```

    3 Jun  7 11:22:41.767 Originate Call
    2 Jun  7 11:22:41.767 CSPF: computation result accepted 10.5.0.1 10.2.0.1
    1 Jun  7 11:22:12.289 CSPF failed: no route toward 172.16.183.55[8 times]
Created: Fri Jun  7 11:18:45 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 2 sessions

192.0.2.6
  From: 172.16.183.55, LSPstate: Up, ActiveRoute: 0
  LSPname: toPE2Primary192.0.2.6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 299920, Label out: 3
  Time left: 141, Since: Mon Jun 10 13:10:11 2013
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 17060 protocol 0
  Attrib flags: Non-PHP OOB
  PATH rcvfrom: 10.5.0.1 (ge-1/2/2.0) 105 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.2.0.1 10.5.0.1 <self>

192.0.2.6
  From: 172.16.183.56, LSPstate: Up, ActiveRoute: 0
  LSPname: toPE2Primary192.0.2.6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 299936, Label out: 3
  Time left: 152, Since: Mon Jun 10 13:10:11 2013
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 59957 protocol 0
  Attrib flags: Non-PHP OOB
  PATH rcvfrom: 10.7.0.1 (ge-1/2/1.0) 106 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.7.0.1 <self>
Total 2 displayed, Up 2, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

user@P1> **show mpls lsp extensive**



Ingress LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

Transit LSP: 3 sessions

192.0.2.6

From: 172.16.183.55, LSPstate: Up, ActiveRoute: 0  
LSPname: toPE2Primary192.0.2.6, LSPpath: Primary  
Suggested label received: -, Suggested label sent: -  
Recovery label received: -, Recovery label sent: 299920  
Resv style: 1 FF, Label in: 299904, Label out: 299920  
Time left: 141, Since: Mon Jun 10 13:10:11 2013  
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
Port number: sender 2 receiver 17060 protocol 0  
Attrib flags: Non-PHP OOB  
PATH rcvfrom: 10.2.0.1 (ge-1/2/1.0) 106 pkts  
Adspec: received MTU 1500 sent MTU 1500  
PATH sentto: 10.5.0.2 (ge-1/2/2.0) 105 pkts  
RESV rcvfrom: 10.5.0.2 (ge-1/2/2.0) 105 pkts  
Explct route: 10.5.0.2 192.0.2.6 (link-id=2)  
Record route: 10.2.0.1 <self> 10.5.0.2

172.16.183.55

From: 172.16.183.59, LSPstate: Up, ActiveRoute: 0  
LSPname: toPE1, LSPpath: Primary  
Suggested label received: -, Suggested label sent: -  
Recovery label received: -, Recovery label sent: 3  
Resv style: 1 FF, Label in: 299888, Label out: 3  
Time left: 158, Since: Mon Jun 10 13:10:11 2013  
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
Port number: sender 2 receiver 10941 protocol 0  
PATH rcvfrom: 10.5.0.2 (ge-1/2/2.0) 106 pkts  
Adspec: received MTU 1500 sent MTU 1500  
PATH sentto: 10.2.0.1 (ge-1/2/1.0) 105 pkts  
RESV rcvfrom: 10.2.0.1 (ge-1/2/1.0) 105 pkts  
Explct route: 10.2.0.1  
Record route: 10.5.0.2 <self> 10.2.0.1

172.16.183.55

From: 172.16.183.56, LSPstate: Up, ActiveRoute: 0  
LSPname: toPE1, LSPpath: Primary



```

Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 299920, Label out: 3
Time left: 141, Since: Mon Jun 10 13:10:11 2013
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 2 receiver 59956 protocol 0
PATH rcvfrom: 10.4.0.2 (ge-1/2/0.0) 105 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.2.0.1 (ge-1/2/1.0) 105 pkts
RESV rcvfrom: 10.2.0.1 (ge-1/2/1.0) 105 pkts
Explct route: 10.2.0.1
Record route: 10.4.0.2 <self> 10.2.0.1
Total 3 displayed, Up 3, Down 0

```

## Verifying BGP NRLI

### Purpose

Check the details of the BGP VPN network layer reachability information.

### Action

user@PE3> **show bgp neighbor**

```

Peer: 172.16.183.55+179 AS 64510 Local: 172.16.183.59+61747 AS 64510
Type: Internal      State: Established      Flags: <Sync>
Last State: OpenConfirm  Last Event: RecvKeepAlive
Last Error: None
Options: <Preference LocalAddress AddressFamily Rib-group Refresh>
Address families configured: inet-vpn-unicast
Local Address: 172.16.183.59 Holdtime: 90 Preference: 170
NLRI configured with egress-protection: inet-vpn-unicast
Egress-protection NLRI inet-vpn-unicast, keep-import: [ remote-vrf ]
Number of flaps: 0
Peer ID: 172.16.183.55      Local ID: 172.16.183.59      Active Holdtime: 90
Keepalive Interval: 30      Group index: 0      Peer index: 0
BFD: disabled, down
NLRI for restart configured on peer: inet-vpn-unicast
NLRI advertised by peer: inet-vpn-unicast
NLRI for this session: inet-vpn-unicast
Peer supports Refresh capability (2)
Stale routes from peer are kept for: 300
Peer does not support Restarter functionality

```



```

NLRI that restart is negotiated for: inet-vpn-unicast
NLRI of received end-of-rib markers: inet-vpn-unicast
Peer supports 4 byte AS extension (peer-as 64510)
Peer does not support Addpath
Table bgp.l3vpn.0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: not advertising
  Active prefixes:          0
  Received prefixes:        0
  Accepted prefixes:        0
  Suppressed due to damping: 0
Last traffic (seconds): Received 25   Sent 21   Checked 11
Input messages:  Total 32046  Updates 7       Refreshes 0       Octets 609365
Output messages: Total 32050  Updates 0       Refreshes 5       Octets 609010
Output Queue[0]: 0

Peer: 172.16.183.56+62754 AS 64510 Local: 172.16.183.59+179 AS 64510
  Type: Internal   State: Established   Flags: <Sync>
  Last State: OpenConfirm   Last Event: RecvKeepAlive
  Last Error: None
  Options: <Preference LocalAddress AddressFamily Rib-group Refresh>
  Address families configured: inet-vpn-unicast
  Local Address: 172.16.183.59 Holdtime: 90 Preference: 170
NLRI configured with egress-protection: inet-vpn-unicast
Egress-protection NLRI inet-vpn-unicast, keep-import: [ remote-vrf ]
  Number of flaps: 1
  Last flap event: TransportError
  Peer ID: 172.16.183.56   Local ID: 172.16.183.59   Active Holdtime: 90
  Keepalive Interval: 30   Group index: 0   Peer index: 1
  BFD: disabled, down
  NLRI for restart configured on peer: inet-vpn-unicast
  NLRI advertised by peer: inet-vpn-unicast
  NLRI for this session: inet-vpn-unicast
  Peer supports Refresh capability (2)
  Stale routes from peer are kept for: 300
  Peer does not support Restarter functionality
  NLRI that restart is negotiated for: inet-vpn-unicast
  Peer supports 4 byte AS extension (peer-as 64510)
  Peer does not support Addpath
Table bgp.l3vpn.0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: not advertising

```



```

Active prefixes:          0
Received prefixes:       0
Accepted prefixes:       0
Suppressed due to damping: 0
Last traffic (seconds): Received 19   Sent 8   Checked 34
Input messages:  Total 10025  Updates 0   Refreshes 2   Octets 190523
Output messages: Total 10024  Updates 0   Refreshes 2   Octets 190504
Output Queue[0]: 0

```

## Meaning

**NLRI configured with egress-protection** shows the BGP family configured with egress protection.

**egress-protection NLRI inet-vpn-unicast, keep-import: [remote-vrf]** shows the egress protection routing policy for the BGP group.

## Verifying the Traffic Engineering Database

### Purpose

On all devices, check the TED.

### Action

user@PE1> **show ted database**

```

TED database: 9 ISIS nodes 5 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
P1.00(172.16.0.3)                Rtr   44      3      3 IS-IS(2)
  To: P1.02, Local: 10.2.0.2, Remote: 0.0.0.0
    Local interface index: 149, Remote interface index: 0
  To: PE2.02, Local: 10.4.0.1, Remote: 0.0.0.0
    Local interface index: 150, Remote interface index: 0
  To: PE3.03, Local: 10.5.0.1, Remote: 0.0.0.0
    Local interface index: 133, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
P1.02                            Net   111      2      2 IS-IS(2)
  To: PE1.00(172.16.183.55), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
PE2-192.0.2.6.00(192.0.2.6)     Rtr   345      2      2 IS-IS(2)
  To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 1, Remote interface index: 2147618817

```



```

    To: PE3.00(172.16.183.59), Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 2, Remote interface index: 2147618818
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE1.00(172.16.183.55)      Rtr    487      1      1 IS-IS(2)
    To: P1.02, Local: 10.2.0.1, Remote: 0.0.0.0
      Local interface index: 148, Remote interface index: 0
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE2.00(172.16.183.56)      Rtr    353      3      3 IS-IS(2)
    To: PE2.02, Local: 10.4.0.2, Remote: 0.0.0.0
      Local interface index: 155, Remote interface index: 0
    To: PE3.02, Local: 10.7.0.1, Remote: 0.0.0.0
      Local interface index: 153, Remote interface index: 0
    To: PE2-192.0.2.6.00(192.0.2.6), Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 2147618817, Remote interface index: 1
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE2.02                      Net     59      2      2 IS-IS(2)
    To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 0, Remote interface index: 0
    To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 0, Remote interface index: 0
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE3.00(172.16.183.59)      Rtr    435      3      3 IS-IS(2)
    To: PE3.02, Local: 10.7.0.2, Remote: 0.0.0.0
      Local interface index: 154, Remote interface index: 0
    To: PE3.03, Local: 10.5.0.2, Remote: 0.0.0.0
      Local interface index: 158, Remote interface index: 0
    To: PE2-192.0.2.6.00(192.0.2.6), Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 2147618818, Remote interface index: 2
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE3.02                      Net    706      2      2 IS-IS(2)
    To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 0, Remote interface index: 0
    To: PE3.00(172.16.183.59), Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 0, Remote interface index: 0
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE3.03                      Net    583      2      2 IS-IS(2)
    To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 0, Remote interface index: 0
    To: PE3.00(172.16.183.59), Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 0, Remote interface index: 0

```

user@PE2> **show ted database**



```

TED database: 9 ISIS nodes 5 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
P1.00(172.16.0.3)                Rtr   44    3    3 IS-IS(2)
    To: PE2.02, Local: 10.4.0.1, Remote: 0.0.0.0
        Local interface index: 150, Remote interface index: 0
    To: P1.02, Local: 10.2.0.2, Remote: 0.0.0.0
        Local interface index: 149, Remote interface index: 0
    To: PE3.03, Local: 10.5.0.1, Remote: 0.0.0.0
        Local interface index: 133, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
P1.02                            Net   111    2    2 IS-IS(2)
    To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
    To: PE1.00(172.16.183.55), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
PE2-192.0.2.6.00(192.0.2.6)     Rtr   345    2    2 IS-IS(2)
    To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 1, Remote interface index: 2147618817
    To: PE3.00(172.16.183.59), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 2, Remote interface index: 2147618818
ID                               Type Age(s) LnkIn LnkOut Protocol
PE1.00(172.16.183.55)          Rtr   487    1    1 IS-IS(2)
    To: P1.02, Local: 10.2.0.1, Remote: 0.0.0.0
        Local interface index: 148, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
PE2.00(172.16.183.56)          Rtr   353    3    3 IS-IS(2)
    To: PE2.02, Local: 10.4.0.2, Remote: 0.0.0.0
        Local interface index: 155, Remote interface index: 0
    To: PE3.02, Local: 10.7.0.1, Remote: 0.0.0.0
        Local interface index: 153, Remote interface index: 0
    To: PE2-192.0.2.6.00(192.0.2.6), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 2147618817, Remote interface index: 1
ID                               Type Age(s) LnkIn LnkOut Protocol
PE2.02                            Net    60    2    2 IS-IS(2)
    To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
    To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
PE3.00(172.16.183.59)          Rtr   435    3    3 IS-IS(2)
    To: PE3.02, Local: 10.7.0.2, Remote: 0.0.0.0
        Local interface index: 154, Remote interface index: 0
    To: PE3.03, Local: 10.5.0.2, Remote: 0.0.0.0

```



```
TED database: 9 ISIS nodes 5 INET nodes
```

ID	Type	Age(s)	LnkIn	LnkOut	Protocol
P1.00(172.16.0.3)	Rtr	44	3	3	IS-IS(2)
To: P1.02, Local: 10.2.0.2, Remote: 0.0.0.0					
Local interface index: 149, Remote interface index: 0					
To: PE2.02, Local: 10.4.0.1, Remote: 0.0.0.0					
Local interface index: 150, Remote interface index: 0					
To: PE3.03, Local: 10.5.0.1, Remote: 0.0.0.0					
Local interface index: 133, Remote interface index: 0					

ID	Type	Age(s)	LnkIn	LnkOut	Protocol
P1.02	Net	111	2	2	IS-IS(2)
To: PE1.00(172.16.183.55), Local: 0.0.0.0, Remote: 0.0.0.0					
Local interface index: 0, Remote interface index: 0					
To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0					
Local interface index: 0, Remote interface index: 0					

ID	Type	Age(s)	LnkIn	LnkOut	Protocol
PE2-192.0.2.6.00(192.0.2.6)	Rtr	345	2	2	IS-IS(2)
To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0					
Local interface index: 1, Remote interface index: 2147618817					
To: PE3.00(172.16.183.59), Local: 0.0.0.0, Remote: 0.0.0.0					
Local interface index: 2, Remote interface index: 2147618818					

ID	Type	Age(s)	LnkIn	LnkOut	Protocol
PE1.00(172.16.183.55)	Rtr	487	1	1	IS-IS(2)
To: P1.02, Local: 10.2.0.1, Remote: 0.0.0.0					
Local interface index: 148, Remote interface index: 0					

ID	Type	Age(s)	LnkIn	LnkOut	Protocol
----	------	--------	-------	--------	----------



```

PE2.00(172.16.183.56)      Rtr      353      3      3 IS-IS(2)
  To: PE3.02, Local: 10.7.0.1, Remote: 0.0.0.0
    Local interface index: 153, Remote interface index: 0
  To: PE2.02, Local: 10.4.0.2, Remote: 0.0.0.0
    Local interface index: 155, Remote interface index: 0
  To: PE2-192.0.2.6.00(192.0.2.6), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 2147618817, Remote interface index: 1
ID                          Type Age(s) LnkIn LnkOut Protocol
PE2.02                      Net      59      2      2 IS-IS(2)
  To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                          Type Age(s) LnkIn LnkOut Protocol
PE3.00(172.16.183.59)      Rtr      435      3      3 IS-IS(2)
  To: PE3.02, Local: 10.7.0.2, Remote: 0.0.0.0
    Local interface index: 154, Remote interface index: 0
  To: PE3.03, Local: 10.5.0.2, Remote: 0.0.0.0
    Local interface index: 158, Remote interface index: 0
  To: PE2-192.0.2.6.00(192.0.2.6), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 2147618818, Remote interface index: 2
ID                          Type Age(s) LnkIn LnkOut Protocol
PE3.02                      Net      706      2      2 IS-IS(2)
  To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: PE3.00(172.16.183.59), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                          Type Age(s) LnkIn LnkOut Protocol
PE3.03                      Net      583      2      2 IS-IS(2)
  To: PE3.00(172.16.183.59), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
-----

```

user@P1> **show ted database**

```

TED database: 9 ISIS nodes 5 INET nodes
ID                          Type Age(s) LnkIn LnkOut Protocol
P1.00(172.16.0.3)          Rtr      44      3      3 IS-IS(2)
  To: PE2.02, Local: 10.4.0.1, Remote: 0.0.0.0
    Local interface index: 150, Remote interface index: 0
  To: P1.02, Local: 10.2.0.2, Remote: 0.0.0.0
    Local interface index: 149, Remote interface index: 0

```



```

To: PE3.03, Local: 10.5.0.1, Remote: 0.0.0.0
    Local interface index: 133, Remote interface index: 0
ID                                     Type Age(s) LnkIn LnkOut Protocol
P1.02                                Net    111     2     2 IS-IS(2)
    To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
    To: PE1.00(172.16.183.55), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE2-192.0.2.6.00(192.0.2.6) Rtr    345     2     2 IS-IS(2)
    To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 1, Remote interface index: 2147618817
    To: PE3.00(172.16.183.59), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 2, Remote interface index: 2147618818
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE1.00(172.16.183.55)      Rtr    487     1     1 IS-IS(2)
    To: P1.02, Local: 10.2.0.1, Remote: 0.0.0.0
        Local interface index: 148, Remote interface index: 0
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE2.00(172.16.183.56)      Rtr    353     3     3 IS-IS(2)
    To: PE2.02, Local: 10.4.0.2, Remote: 0.0.0.0
        Local interface index: 155, Remote interface index: 0
    To: PE3.02, Local: 10.7.0.1, Remote: 0.0.0.0
        Local interface index: 153, Remote interface index: 0
    To: PE2-192.0.2.6.00(192.0.2.6), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 2147618817, Remote interface index: 1
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE2.02                                Net    59     2     2 IS-IS(2)
    To: P1.00(172.16.0.3), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
    To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE3.00(172.16.183.59)      Rtr    435     3     3 IS-IS(2)
    To: PE3.02, Local: 10.7.0.2, Remote: 0.0.0.0
        Local interface index: 154, Remote interface index: 0
    To: PE3.03, Local: 10.5.0.2, Remote: 0.0.0.0
        Local interface index: 158, Remote interface index: 0
    To: PE2-192.0.2.6.00(192.0.2.6), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 2147618818, Remote interface index: 2
ID                                     Type Age(s) LnkIn LnkOut Protocol
PE3.02                                Net    706     2     2 IS-IS(2)
    To: PE2.00(172.16.183.56), Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0

```



## Purpose

## Action

```
IS-IS level 1 link-state database:
    0 LSPs
```

```
IS-IS level 2 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime	Attributes
P1.00-00	0x46b	0x1924	590	L1 L2
P1.02-00	0x465	0xe67a	523	L1 L2
PE2-192.0.2.6.00-00	0xd0e	0x6b8d	1086	L1 L2 Overload
PE1.00-00	0x46f	0xa8b	992	L1 L2
PE2.00-00	0x46b	0xefd6	1077	L1 L2
PE2.02-00	0x464	0x4db4	573	L1 L2
PE3.00-00	0x46f	0xb6e8	1016	L1 L2
PE3.02-00	0x465	0x2675	762	L1 L2
PE3.03-00	0x465	0x47b2	797	L1 L2

```
    9 LSPs
```

```
IS-IS level 1 link-state database:
    0 LSPs
```

```
IS-IS level 2 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime	Attributes
P1.00-00	0x46b	0x1924	590	L1 L2



P1.02-00	0x465	0xe67a	523 L1 L2
PE2-192.0.2.6.00-00	0xd0e	0x6b8d	1090 L1 L2 Overload
PE1.00-00	0x46f	0xa8b	988 L1 L2
PE2.00-00	0x46b	0xefd6	1080 L1 L2
PE2.02-00	0x464	0x4db4	576 L1 L2
PE3.00-00	0x46f	0xb6e8	1018 L1 L2
PE3.02-00	0x465	0x2675	763 L1 L2
PE3.03-00	0x465	0x47b2	799 L1 L2
9 LSPs			

user@PE3> **show isis database**

```
IS-IS level 1 link-state database:
  0 LSPs

IS-IS level 2 link-state database:
LSP ID                Sequence Checksum Lifetime Attributes
P1.00-00              0x46b  0x1924      590 L1 L2
P1.02-00              0x465  0xe67a      523 L1 L2
PE2-192.0.2.6.00-00  0xd0e  0x6b8d     1088 L1 L2 Overload
PE1.00-00             0x46f  0xa8b       988 L1 L2
PE2.00-00             0x46b  0xefd6     1079 L1 L2
PE2.02-00             0x464  0x4db4      575 L1 L2
PE3.00-00             0x46f  0xb6e8     1020 L1 L2
PE3.02-00             0x465  0x2675      765 L1 L2
PE3.03-00             0x465  0x47b2      801 L1 L2
  9 LSPs
```

user@P1> **show isis database**

```
IS-IS level 1 link-state database:
  0 LSPs

IS-IS level 2 link-state database:
LSP ID                Sequence Checksum Lifetime Attributes
P1.00-00              0x46b  0x1924      592 L1 L2
P1.02-00              0x465  0xe67a      525 L1 L2
PE2-192.0.2.6.00-00  0xd0e  0x6b8d     1088 L1 L2 Overload
PE1.00-00             0x46f  0xa8b       990 L1 L2
PE2.00-00             0x46b  0xefd6     1079 L1 L2
PE2.02-00             0x464  0x4db4      575 L1 L2
PE3.00-00             0x46f  0xb6e8     1018 L1 L2
PE3.02-00             0x465  0x2675      763 L1 L2
```



PE3.03-00  
9 LSPs

0x465

0x47b2

799 L1 L2

## Provider Edge Link Protections in Layer 3 VPNs

### IN THIS SECTION

- [Understanding Provider Edge Link Protection for BGP Labeled Unicast Paths | 1030](#)
- [Understanding Provider Edge Link Protection in Layer 3 VPNs | 1031](#)
- [Example: Configuring Provider Edge Link Protection in Layer 3 VPNs | 1033](#)
- [Example: Configuring Provider Edge Link Protection for BGP Labeled Unicast Paths | 1054](#)
- [Understanding Host Fast Reroute | 1073](#)
- [Example: Configuring Link Protection with Host Fast Reroute | 1078](#)

This topic describes and provides examples on configuring precomputed protection path, which provides link protection and a backup path between a CE router and an alternative PE router.



## Understanding Provider Edge Link Protection for BGP Labeled Unicast Paths

In MPLS service provider networks, when Layer 3 VPNs are used for carrier-of-carriers deployments, the protocol used to link the customer edge (CE) routers in one autonomous system (AS) and a provider edge (PE) router in another AS is BGP labeled-unicast. Reroute solutions between ASs are essential to help service providers ensure that network outages will have minimal impact on the data flows through the networks. A service provider that is a customer of another service provider can have different CE routers that are connected to the other service provider through different PE routers. This setup enables load balancing of traffic. However, this can lead to disruption in traffic if the link between one CE router and a PE router goes down. Therefore, a precomputed protection path should be configured such that if a link between a CE router and a PE router goes down, the protection path (also known as the backup path) between the other CE router and the alternative PE router can be used.

To configure a labeled-unicast path to be a protection path, use the **protection** statement at the **[edit routing-instances *instance-name* protocols bgp family inet labeled-unicast]** hierarchy level:

```
routing-instances {
  customer {
    instance-type vrf;
    ...
    protocols {
      bgp {
        family inet {
          labeled-unicast {
            protection;
          }
        }
        family inet6 {
          labeled-unicast {
            protection;
          }
        }
        type external;
        ...
      }
    }
  }
}
```

The **protection** statement indicates that protection is desired on prefixes received from the particular neighbor or family. After protection is enabled for a given family, group, or neighbor, protection entries are added for prefixes or next hops received from the given peer.



**NOTE:** A protection path can be selected only if the best path has already been installed by BGP in the forwarding table. This is because a protection path cannot be used as the best path.

To minimize packet loss when the protected path is down, also use the **per-prefix-label** statement at the **[edit routing-instances *instance-name* protocols bgp family inet labeled-unicast]** hierarchy level. Set this statement on every PE router within the AS containing the protected path.

The protection path selection takes place based on the value of two state flags:

- The **ProtectionPath** flag indicates paths desiring protection.
- The **ProtectionCand** flag indicates the route entry that can be used as a protection path.

**NOTE:**

- Provider edge link protection is configured only for external peers.
- If provider edge link protection is configured with the **equal-external-internal** multipath statement, multipath takes precedence over protection.

## Understanding Provider Edge Link Protection in Layer 3 VPNs

In an MPLS service provider network, a customer can have dual-homed CE routers that are connected to the service provider through different PE routers. This setup enables load balancing of traffic in the service provider network. However, this can lead to disruption in traffic if the link between a CE router and a PE router goes down. Hence, a precomputed protection path should be configured such that if a link between a CE router and a PE router goes down, the protection path (also known as the backup path) between the CE router and an alternate PE router can be used.

To configure a path to be a protection path, use the **protection** statement at the **[edit routing-instances *instance-name* protocols bgp family inet unicast]** hierarchy level:

```
routing-instances {
  customer {
    instance-type vrf;
    ...
    protocols {
      bgp {
        type external;
        ...
      }
    }
  }
}
```



```

family inet {
    unicast {
        protection;
    }
}
family inet6 {
    unicast {
        protection;
    }
}
}
}
}
}

```

The **protection** statement indicates that protection is required on prefixes received from the particular neighbor or family. After protection is enabled for a given family, group, or neighbor, protection entries are added for prefixes or next hops received from the given peer.

**NOTE:** A protection path can be selected only if the best path has already been installed by BGP in the forwarding table. This is because a protection path cannot be used as the best path.

**NOTE:** The option **vrf-table-label** must be configured under the **[routing-instances *instance-name*]** hierarchy for the routers that have protected PE-CE links. This applies to Junos OS Releases 12.3 through 13.2 inclusive.

The protection path selection takes place based on the value of two state flags:

- The **ProtectionPath** flag indicates paths requesting protection.
- The **ProtectionCand** flag indicates the route entry that can be used as a protection path.

**NOTE:**

- Provider edge link protection is configured only for external peers.
- If provider edge link protection is configured with the **equal-external-internal** multipath statement, multipath takes precedence over protection.



## Example: Configuring Provider Edge Link Protection in Layer 3 VPNs

### IN THIS SECTION

- [Requirements | 1033](#)
- [Overview | 1033](#)
- [Configuration | 1034](#)
- [Verification | 1048](#)

This example shows how to configure a provider edge protection path that can be used in case of a link failure in an MPLS network.

### Requirements

This example uses the following hardware components, software components and configuration options:

- M Series Multiservice Edge Routers, MX Series 5G Universal Routing Platforms, or T Series Core Routers
- Junos OS Release 12.3 through 13.2 inclusive
- The option **vrf-table-label** must be enabled at the **[routing-instances *instance-name*]** hierarchy level for routers with protected PE-CE links.

### Overview

The following example shows how to configure provider edge link protection in a Layer 3 VPN.


### Topology

In this example, a Layer 3 VPN is set up by configuring three customer edge devices and three service provider edge devices in four autonomous systems. The CE devices are configured in AS 64496, AS 64498, and AS 64499. The PE devices are configured in AS 64497.

[Figure 82 on page 1034](#) shows the topology used in this example.



Figure 82: Provider Edge Link Protection in a Layer 3 VPN

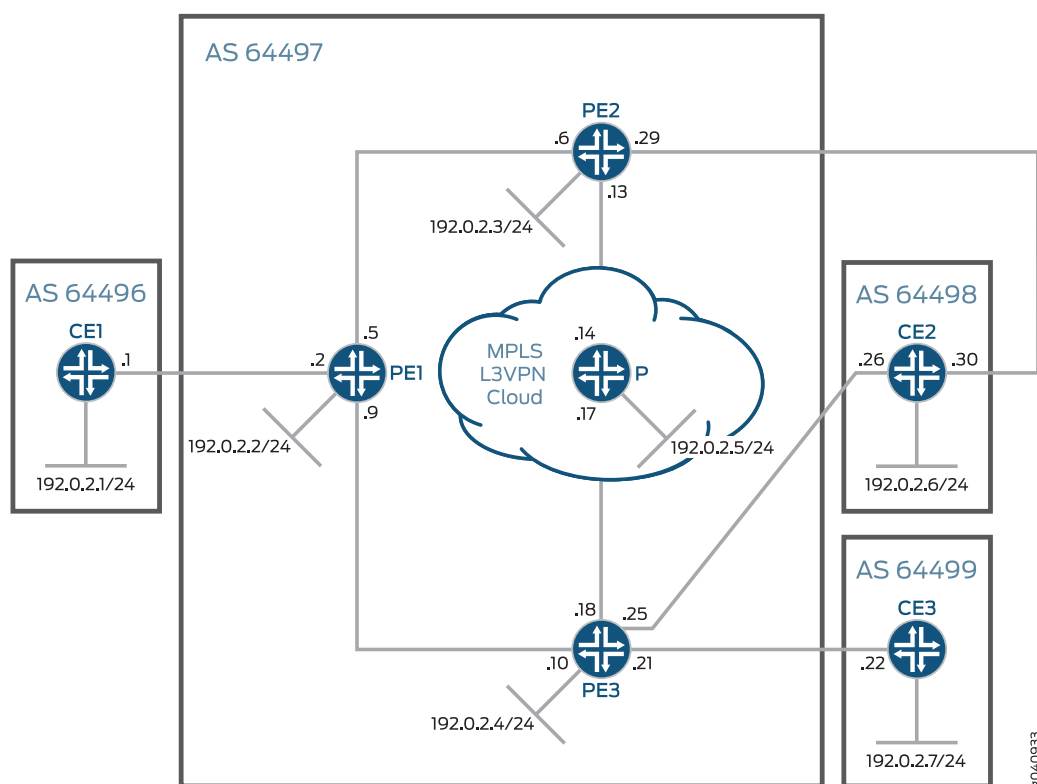

The aim of this example is to protect the provider edge link between Routers PE2 and CE2. Protection is configured on the backup link between Routers PE3 and CE2, such that the traffic can be routed through this link when the PE2-CE2 link goes down.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Router CE1

```
set interfaces ge-2/0/0 unit 0 description toPE1
set interfaces ge-2/0/0 unit 0 family inet address 10.1.1.1/30
set interfaces ge-2/0/0 unit 0 family inet6 address 2001:db8:0:1::/64 eui-64
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.1/24
set interfaces lo0 unit 0 family inet6 address 2001:db8::1/128
```



```

set routing-options router-id 192.0.2.1
set routing-options autonomous-system 64496
set protocols bgp group toPE1 type external
set protocols bgp group toPE1 export send-direct
set protocols bgp group toPE1 peer-as 64497
set protocols bgp group toPE1 neighbor 10.1.1.2
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept

```

## Router PE1

```

set interfaces ge-2/0/0 unit 0 description toCE1
set interfaces ge-2/0/0 unit 0 family inet address 10.1.1.2/30
set interfaces ge-2/0/0 unit 0 family inet6 address 2001:db8:0:1::/64 eui-64
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toPE2
set interfaces ge-2/0/1 unit 0 family inet address 10.1.1.5/30
set interfaces ge-2/0/1 unit 0 family inet6 address 2001:db8:0:5::/64 eui-64
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 description toPE3
set interfaces ge-2/0/2 unit 0 family inet address 10.1.1.9/30
set interfaces ge-2/0/2 unit 0 family inet6 address 2001:db8:0:9::/64 eui-64
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.2/24
set interfaces lo0 unit 0 family inet6 address 2001:db8::2/128
set protocols mpls interface all
set protocols ldp interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/1.0 metric 10
set protocols ospf area 0.0.0.0 interface ge-2/0/2.0 metric 10
set protocols ospf3 area 0.0.0.0 interface lo0.0 passive
set protocols ospf3 area 0.0.0.0 interface ge-2/0/1.0 metric 10
set protocols ospf3 area 0.0.0.0 interface ge-2/0/2.0 metric 10
set protocols bgp group toInternal type internal
set protocols bgp group toInternal family inet-vpn unicast
set protocols bgp group toInternal family inet6-vpn unicast
set protocols bgp group toInternal multipath
set protocols bgp group toInternal local-address 192.0.2.2
set protocols bgp group toInternal neighbor 192.0.2.3
set protocols bgp group toInternal neighbor 192.0.2.4

```



```

set routing-options router-id 192.0.2.2
set routing-options autonomous-system 64497
set routing-options forwarding-table export lb
set routing-instances radium instance-type vrf
set routing-instances radium interface ge-2/0/0.0
set routing-instances radium route-distinguisher 64497:1
set routing-instances radium vrf-target target:64497:1
set routing-instances radium protocols bgp group toCE1 type external
set routing-instances radium protocols bgp group toCE1 peer-as 64496
set routing-instances radium protocols bgp group toCE1 neighbor 10.1.1.1
set policy-options policy-statement lb then load-balance per-packet

```

## Router PE2

```

set interfaces ge-2/0/0 unit 0 description toPE1
set interfaces ge-2/0/0 unit 0 family inet address 10.1.1.6/30
set interfaces ge-2/0/0 unit 0 family inet6 address 2001:db8:0:5::/64 eui-64
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toP
set interfaces ge-2/0/1 unit 0 family inet address 10.1.1.13/30
set interfaces ge-2/0/1 unit 0 family inet6 address 2001:db8:0:13::/64 eui-64
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 description toCE2
set interfaces ge-2/0/2 unit 0 family inet address 10.1.1.29/30
set interfaces ge-2/0/2 unit 0 family inet6 address 2001:db8:0:29::/64 eui-64
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.3/24
set interfaces lo0 unit 0 family inet6 address 2001:db8::3/128
set protocols mpls interface all
set protocols ldp interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 10
set protocols ospf area 0.0.0.0 interface ge-2/0/1.0 metric 5
set protocols ospf3 area 0.0.0.0 interface lo0.0 passive
set protocols ospf3 area 0.0.0.0 interface ge-2/0/0.0 metric 10
set protocols ospf3 area 0.0.0.0 interface ge-2/0/1.0 metric 5
set protocols bgp group toInternal type internal
set protocols bgp group toInternal family inet-vpn unicast
set protocols bgp group toInternal family inet6-vpn unicast
set protocols bgp group toInternal multipath

```



```

set protocols bgp group toInternal local-address 192.0.2.3
set protocols bgp group toInternal neighbor 192.0.2.2
set protocols bgp group toInternal neighbor 192.0.2.4
set routing-options router-id 192.0.2.3
set routing-options autonomous-system 64497
set routing-options forwarding-table export lb
set routing-instances radium instance-type vrf
set routing-instances radium interface ge-2/0/2.0
set routing-instances radium route-distinguisher 64497:1
set routing-instances radium vrf-target target:64497:1
set routing-instances radium protocols bgp group toCE2 type external
set routing-instances radium protocols bgp group toCE2 peer-as 64498
set routing-instances radium protocols bgp group toCE2 neighbor 10.1.1.30
set policy-options policy-statement lb then load-balance per-packet

```

### Router PE3

```

set interfaces ge-2/0/0 unit 0 description toPE1
set interfaces ge-2/0/0 unit 0 family inet address 10.1.1.10/30
set interfaces ge-2/0/0 unit 0 family inet6 address 2001:db8:0:9::/64 eui-64
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toP
set interfaces ge-2/0/1 unit 0 family inet address 10.1.1.18/30
set interfaces ge-2/0/1 unit 0 family inet6 address 2001:db8:0:17::/64 eui-64
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 description toCE2
set interfaces ge-2/0/2 unit 0 family inet address 10.1.1.25/30
set interfaces ge-2/0/2 unit 0 family inet6 address 2001:db8:0:25::/64 eui-64
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces ge-2/0/3 unit 0 description toCE3
set interfaces ge-2/0/3 unit 0 family inet address 10.1.1.21/30
set interfaces ge-2/0/3 unit 0 family inet6 address 2001:db8:0:21::/64 eui-64
set interfaces ge-2/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.4/24
set interfaces lo0 unit 0 family inet6 address 2001:db8::4/128
set protocols mpls interface all
set protocols ldp interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/1.0 metric 5
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 10

```



```

set protocols ospf3 area 0.0.0.0 interface lo0.0 passive
set protocols ospf3 area 0.0.0.0 interface ge-2/0/1.0 metric 5
set protocols ospf3 area 0.0.0.0 interface ge-2/0/0.0 metric 10
set protocols bgp group toInternal type internal
set protocols bgp group toInternal family inet-vpn unicast
set protocols bgp group toInternal family inet6-vpn unicast
set protocols bgp group toInternal multipath
set protocols bgp group toInternal local-address 192.0.2.4
set protocols bgp group toInternal neighbor 192.0.2.2
set protocols bgp group toInternal neighbor 192.0.2.3
set routing-options router-id 192.0.2.4
set routing-options autonomous-system 64497
set routing-options forwarding-table export lb
set routing-instances radium instance-type vrf
set routing-instances radium vrf-table-label
set routing-instances radium interface ge-2/0/2.0
set routing-instances radium interface ge-2/0/3.0
set routing-instances radium route-distinguisher 64497:1
set routing-instances radium vrf-target target:64497:1
set routing-instances radium protocols bgp group toCE2 type external
set routing-instances radium protocols bgp group toCE2 peer-as 64498
set routing-instances radium protocols bgp group toCE2 neighbor 10.1.1.26
set routing-instances radium protocols bgp group toCE2 family inet unicast protection
set routing-instances radium protocols bgp group toCE2 family inet6 unicast protection
set routing-instances radium protocols bgp group toCE3 type external
set routing-instances radium protocols bgp group toCE3 peer-as 64499
set routing-instances radium protocols bgp group toCE3 neighbor 10.1.1.22
set policy-options policy-statement lb then load-balance per-packet

```

## Router P

```

set interfaces ge-2/0/0 unit 0 description toPE2
set interfaces ge-2/0/0 unit 0 family inet address 10.1.1.14/30
set interfaces ge-2/0/0 unit 0 family inet6 address 2001:db8:0:13::/64 eui-64
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toPE3
set interfaces ge-2/0/1 unit 0 family inet address 10.1.1.17/30
set interfaces ge-2/0/1 unit 0 family inet6 address 2001:db8:0:17::/64 eui-64
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.5/24

```



```

set interfaces lo0 unit 0 family inet6 address 2001:db8::5/128
set routing-options router-id 192.0.2.5
set routing-options autonomous-system 64497
set protocols mpls interface all
set protocols ldp interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 5
set protocols ospf area 0.0.0.0 interface ge-2/0/1.0 metric 5
set protocols ospf3 area 0.0.0.0 interface lo0.0 passive
set protocols ospf3 area 0.0.0.0 interface ge-2/0/0.0 metric 5
set protocols ospf3 area 0.0.0.0 interface ge-2/0/1.0 metric 5

```

## Router CE2

```

set interfaces ge-2/0/0 unit 0 description toPE2
set interfaces ge-2/0/0 unit 0 family inet address 10.1.1.30/30
set interfaces ge-2/0/0 unit 0 family inet6 address 2001:db8:0:29::/64 eui-64
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toPE3
set interfaces ge-2/0/1 unit 0 family inet address 10.1.1.26/30
set interfaces ge-2/0/1 unit 0 family inet6 address 2001:db8:0:25::/64 eui-64
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.6/24
set interfaces lo0 unit 0 family inet6 address 2001:db8::6/128
set routing-options router-id 192.0.2.6
set routing-options autonomous-system 64498
set protocols bgp group toAS2 type external
set protocols bgp group toAS2 export send-direct
set protocols bgp group toAS2 peer-as 64497
set protocols bgp group toAS2 neighbor 10.1.1.25
set protocols bgp group toAS2 neighbor 10.1.1.29
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept

```

## Router CE3

```

set interfaces ge-2/0/0 unit 0 description toPE3

```



```

set interfaces ge-2/0/0 unit 0 family inet address 10.1.1.22/30
set interfaces ge-2/0/0 unit 0 family inet6 address 2001:db8:0:21::/64 eui-64
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.7/24
set interfaces lo0 unit 0 family inet6 address 2001:db8::7/128
set routing-options router-id 192.0.2.7
set routing-options autonomous-system 64499
set protocols bgp group toPE3 type external
set protocols bgp group toPE3 export send-direct
set protocols bgp group toPE3 peer-as 64497
set protocols bgp group toPE3 neighbor 10.1.1.21
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept

```

## Configuring Provider Edge Link Protection in Layer 3 VPNs

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure provider edge link protection:

1. Configure the router interfaces.

```

[edit interfaces]
user@PE3# set ge-2/0/0 unit 0 description toPE1
user@PE3# set ge-2/0/0 unit 0 family inet address 10.1.1.10/30
user@PE3# set ge-2/0/0 unit 0 family inet6 address 2001:db8:0:9::/64 eui-64
user@PE3# set ge-2/0/0 unit 0 family mpls

```

```

user@PE3# set ge-2/0/1 unit 0 description toP
user@PE3# set ge-2/0/1 unit 0 family inet address 10.1.1.18/30
user@PE3# set ge-2/0/1 unit 0 family inet6 address 2001:db8:0:17::/64 eui-64
user@PE3# set ge-2/0/1 unit 0 family mpls

```

```

user@PE3# set ge-2/0/2 unit 0 description toCE2
user@PE3# set ge-2/0/2 unit 0 family inet address 10.1.1.25/30
user@PE3# set ge-2/0/2 unit 0 family inet6 address 12001:db8:0:25::/64 eui-64
user@PE3# set ge-2/0/2 unit 0 family mpls

```



```

user@PE3# set ge-2/0/3 unit 0 description toCE3
user@PE3# set ge-2/0/3 unit 0 family inet address 10.1.1.21/30
user@PE3# set ge-2/0/3 unit 0 family inet6 address 2001:db8:0:21::/64 eui-64
user@PE3# set ge-2/0/3 unit 0 family mpls

```

```

user@PE3# set lo0 unit 0 family inet address 192.0.2.4/24
user@PE3# set lo0 unit 0 family inet6 address 2001:db8::4/128

```

Similarly, configure the interfaces on all other routers.

2. Configure the router ID and autonomous system (AS) number.

```

[edit routing-options]
user@PE3# set router-id 192.0.2.4
user@PE3# set autonomous-system 64497

```

Similarly, configure the router ID and AS number for all other routers. In this example, the router ID is chosen to be identical to the loopback address configured on the router.

3. Configure MPLS and LDP on all interfaces of Router PE3.

```

[edit protocols]
user@PE3# set mpls interface all
user@PE3# set ldp interface all

```

Similarly, configure other PE routers.

4. Configure an IGP on the core-facing interfaces of Router PE3.

```

[edit protocols ospf area 0.0.0.0]
user@PE3# set interface lo0.0 passive
user@PE3# set interface ge-2/0/1.0 metric 5
user@PE3# set interface ge-2/0/0.0 metric 10

```

```

[edit protocols ospf3 area 0.0.0.0]
user@PE3# set interface lo0.0 passive
user@PE3# set interface ge-2/0/1.0 metric 5
user@PE3# set interface ge-2/0/0.0 metric 10

```

Similarly, configure other PE routers.



5. Configure a policy that exports the routes from the routing table into the forwarding table on Router PE3.

```
[edit policy-options]
user@PE3# set policy-statement lb then load-balance per-packet
```

```
[edit routing-options]
user@PE3# set forwarding-table export lb
```

Similarly, configure other PE routers.

6. Configure BGP on Router CE2, and include a policy for exporting routes to and from the service provider network.

```
[edit policy-options]
user@CE2# set policy-statement send-direct from protocol direct
user@CE2# set policy-statement send-direct then accept
```

```
[edit protocols bgp group toAS2]
user@CE2# set type external
user@CE2# set export send-direct
user@CE2# set peer-as 64497
user@CE2# set neighbor 10.1.1.25
user@CE2# set neighbor 10.1.1.29
```

Similarly, configure other CE routers.

7. Configure BGP on Router PE3 for routing within the provider core.

```
[edit protocols bgp group toInternal]
user@PE3# set type internal
user@PE3# set family inet-vpn unicast
user@PE3# set family inet6-vpn unicast
user@PE3# set multipath
user@PE3# set local-address 192.0.2.4
user@PE3# set neighbor 192.0.2.2
user@PE3# set neighbor 192.0.2.3
```

Similarly, configure other PE routers.

8. Configure the Layer 3 VPN routing instance on Router PE3.



```
[set routing-instances radium]
user@PE3# set instance-type vrf
user@PE3# set vrf-table-label
user@PE3# set interface ge-2/0/2.0
user@PE3# set interface ge-2/0/3.0
user@PE3# set route-distinguisher 64497:1
user@PE3# set vrf-target target:64497:1
```

```
[edit routing-instances radium protocols bgp group toCE2]
user@PE3# set type external
user@PE3# set peer-as 64498
user@PE3# set neighbor 10.1.1.26
```

```
[edit routing-instances radium protocols bgp group toCE3]
user@PE3# set type external
user@PE3# set peer-as 64499
user@PE3# set neighbor 10.1.1.22
```

Similarly, configure other PE routers.

#### 9. Configure provider edge link protection on the link between Routers PE3 and CE2.

```
[edit routing-instances radium protocols bgp group toCE2]
user@PE3# set family inet unicast protection
user@PE3# set family inet6 unicast protection
```

### Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show policy-options**, **show protocols**, and **show routing-instances** commands.

If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE3# show interfaces
```

```
ge-2/0/0 {
  unit 0 {
    description toPE1;
    family inet {
      address 10.1.1.10/30;
```



```

    }
    family inet6 {
        address 2001:db8:0:9::/64 {
            eui-64;
        }
    }
    family mpls;
}

ge-2/0/1 {
    unit 0 {
        description toP;
        family inet {
            address 10.1.1.18/30;
        }
        family inet6 {
            address 2001:db8:0:17::/64 {
                eui-64;
            }
        }
        family mpls;
    }
}

ge-2/0/2 {
    unit 0 {
        description toCE2;
        family inet {
            address 10.1.1.25/30;
        }
        family inet6 {
            address 2001:db8:0:25::/64 {
                eui-64;
            }
        }
        family mpls;
    }
}

ge-2/0/3 {
    unit 0 {
        description toCE3;
        family inet {

```



```

        address 10.1.1.21/30;
    }
    family inet6 {
        address 2001:db8:0:21::/64 {
            eui-64;
        }
    }
    family mpls;
}
}

lo0 {
    unit 0 {
        family inet {
            address 192.0.2.4/24;
        }
        family inet6 {
            address 2001:db8::4/128;
        }
    }
}
}

```

user@PE3# **show routing-options**

```

router-id 192.0.2.4;
autonomous-system 64497;
forwarding-table {
    export lb;
}

```

user@PE3# **show policy-options**

```

policy-statement lb {
    then {
        load-balance per-packet;
    }
}

```

user@PE3# **show protocols**



```

mpls {
    interface all;
}
bgp {
    group toInternal {
        type internal;
        local-address 192.0.2.4;
        family inet-vpn {
            unicast;
        }
        family inet6-vpn {
            unicast;
        }
        multipath;
        neighbor 192.0.2.2;
        neighbor 192.0.2.3;
    }
}
ospf {
    area 0.0.0.0 {
        interface lo0.0 {
            passive;
        }
        interface ge-2/0/1.0 {
            metric 5;
        }
        interface ge-2/0/0.0 {
            metric 10;
        }
    }
}
ospf3 {
    area 0.0.0.0 {
        interface lo0.0 {
            passive;
        }
        interface ge-2/0/1.0 {
            metric 5;
        }
        interface ge-2/0/0.0 {
            metric 10;
        }
    }
}

```



```
ldp {
    interface all;
}
```

user@PE3# **show routing-instances**

```
radium {
    instance-type vrf;
    interface ge-2/0/2.0;
    interface ge-2/0/3.0;
    route-distinguisher 64497:1;
    vrf-target target:64497:1;
    protocols {
        bgp {
            group toCE2 {
                type external;
                family inet {
                    unicast {
                        protection;
                    }
                }
                family inet6 {
                    unicast {
                        protection;
                    }
                }
                peer-as 64498;
                neighbor 10.1.1.26;
            }
            group toCE3 {
                type external;
                peer-as 64499;
                neighbor 10.1.1.22;
            }
        }
    }
}
```

Run these commands on all other routers to confirm the configurations. If you are done configuring the routers, enter **commit** from configuration mode.



## Verification

### IN THIS SECTION

- [Verifying BGP | 1048](#)
- [Verifying Provider Edge Link Protection | 1050](#)

Confirm that the configuration is working properly.

### Verifying BGP

#### Purpose

Verify that BGP is functional in the Layer 3 VPN.

#### Action

From operational mode on Router PE3, run the **show route protocol bgp** command.

```
user@PE3> show route protocol bgp
```

```
inet.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

radium.inet.0: 9 destinations, 14 routes (9 active, 0 holddown, 0 hidden)
@ = Routing Use Only, # = Forwarding Use Only
+ = Active Route, - = Last Active, * = Both

192.0.2.1/24      *[BGP/170] 00:09:15, localpref 100, from 192.0.2.2
                  AS path: 64496 I, validation-state: unverified
                  > to 10.1.1.9 via ge-2/0/0.0, Push 299792
192.0.2.6/24      @[BGP/170] 00:09:40, localpref 100
                  AS path: 64498 I, validation-state: unverified
                  > to 10.1.1.26 via ge-2/0/2.0
                  [BGP/170] 00:09:07, localpref 100, from 192.0.2.3
                  AS path: 64498 I, validation-state: unverified
                  > to 10.1.1.17 via ge-2/0/1.0, Push 299792, Push 299776(top)
192.0.2.7/24      *[BGP/170] 00:09:26, localpref 100
                  AS path: 64499 I, validation-state: unverified
                  > to 10.1.1.22 via ge-2/0/3.0
10.1.1.0/30      *[BGP/170] 00:09:15, localpref 100, from 192.0.2.2
                  AS path: I, validation-state: unverified
```



```

> to 10.1.1.9 via ge-2/0/0.0, Push 299792
10.1.1.20/30      [BGP/170] 00:09:26, localpref 100
                  AS path: 64499 I, validation-state: unverified
> to 10.1.1.22 via ge-2/0/3.0
10.1.1.24/30      [BGP/170] 00:09:40, localpref 100
                  AS path: 64498 I, validation-state: unverified
> to 10.1.1.26 via ge-2/0/2.0
10.1.1.28/30      *[BGP/170] 00:09:07, localpref 100, from 192.0.2.3
                  AS path: I, validation-state: unverified
> to 10.1.1.17 via ge-2/0/1.0, Push 299792, Push 299776(top)
[BGP/170] 00:09:40, localpref 100
                  AS path: 64498 I, validation-state: unverified
> to 10.1.1.26 via ge-2/0/2.0

mpls.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)

bgp.l3vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

64497:1:192.0.2.1/24
                  *[BGP/170] 00:09:15, localpref 100, from 192.0.2.2
                  AS path: 64496 I, validation-state: unverified
> to 10.1.1.9 via ge-2/0/0.0, Push 299792
64497:1:192.0.2.6/24
                  *[BGP/170] 00:09:07, localpref 100, from 192.0.2.3
                  AS path: 64498 I, validation-state: unverified
> to 10.1.1.17 via ge-2/0/1.0, Push 299792, Push 299776(top)
64497:1:10.1.1.0/30
                  *[BGP/170] 00:09:15, localpref 100, from 192.0.2.2
                  AS path: I, validation-state: unverified
> to 10.1.1.9 via ge-2/0/0.0, Push 299792
64497:1:10.1.1.28/30
                  *[BGP/170] 00:09:07, localpref 100, from 192.0.2.3
                  AS path: I, validation-state: unverified
> to 10.1.1.17 via ge-2/0/1.0, Push 299792, Push 299776(top)

inet6.0: 12 destinations, 13 routes (12 active, 0 holddown, 0 hidden)

radium.inet6.0: 7 destinations, 8 routes (7 active, 0 holddown, 0 hidden)

```

The output shows all the BGP routes in the routing table of Router PE3. This indicates that BGP is functioning as required.

Similarly, run this command on other routers to check if BGP is operational.



## Meaning

BGP is functional in the Layer 3 VPN.

## Verifying Provider Edge Link Protection

### Purpose

Verify that the provider edge link between Routers PE2 and CE2 is protected.

### Action

To verify that provider edge link protection is configured correctly:

1. Confirm that a route on Router CE2 is advertised to Router PE3, directly and through Router PE2.

If the route is advertised correctly, you will see multiple paths for the route.

From operational mode on Router PE3, run the **show route destination-prefix** command.

```
user@PE3> show route 192.0.2.6
```

```
radium.inet.0: 9 destinations, 14 routes (9 active, 0 holddown, 0 hidden)
@ = Routing Use Only, # = Forwarding Use Only
+ = Active Route, - = Last Active, * = Both

192.0.2.6/24      @[BGP/170] 02:55:36, localpref 100
                  AS path: 64498 I, validation-state: unverified
                  > to 10.1.1.26 via ge-2/0/2.0
                  [BGP/170] 00:10:13, localpref 100, from 192.0.2.3
                  AS path: 64498 I, validation-state: unverified
                  > to 10.1.1.17 via ge-2/0/1.0, Push 299840, Push 299776(top)

                  #[Multipath/255] 00:10:13
                  > to 10.1.1.26 via ge-2/0/2.0
                  to 10.1.1.17 via ge-2/0/1.0, Push 299840, Push 299776(top)
```

The output verifies the presence of multiple paths from Router PE3 to the destination route, **192.0.2.6**, on Router CE2. The first path is directly through the PE3-CE2 link (**10.1.1.26**). The second path is through the provider core and PE2 (**10.1.1.17**).

2. Verify that the protection path is correctly configured by confirming that the weight for the active path being protected is **0x1**, and the weight for the protection candidate path is **0x4000**.

From operational mode on Router PE3, run the **show route destination-prefix extensive** command.

```
user@PE3> show route 192.0.2.6 extensive
```



```

radium.inet.0: 9 destinations, 14 routes (9 active, 0 holddown, 0 hidden)
192.0.2.6/24 (3 entries, 2 announced)
    State: <CalcForwarding>
TSI:
KRT in-kernel 192.0.2.6/24 -> {list:10.1.1.26, indirect(1048584)}
Page 0 idx 1 Type 1 val 9229c38
    Nexthop: Self
    AS path: [64497] 64498 I
    Communities:
Page 0 idx 2 Type 1 val 9229cc4
    Flags: Nexthop Change
    Nexthop: Self
    Localpref: 100
    AS path: [64497] 64498 I
    Communities: target:64497:1
Path 192.0.2.6 from 10.1.1.26 Vector len 4. Val: 1 2
    @BGP      Preference: 170/-101
              Next hop type: Router, Next hop index: 994
              Address: 0x9240a74
              Next-hop reference count: 5
              Source: 10.1.1.26
Next hop: 10.1.1.26 via ge-2/0/2.0, selected
              Session Id: 0x200001
              State: <Active Ext ProtectionPath ProtectionCand>
              Peer AS: 64498
              Age: 2:55:54
              Validation State: unverified
              Task: BGP_64498.10.1.1.26+52214
              Announcement bits (1): 2-BGP_RT_Background
              AS path: 64498 I
              Accepted
              Localpref: 100
              Router ID: 192.0.2.6
    BGP      Preference: 170/-101
              Route Distinguisher: 64497:1
              Next hop type: Indirect
              Address: 0x92413a8
              Next-hop reference count: 6
              Source: 192.0.2.3
              Next hop type: Router, Next hop index: 1322
Next hop: 10.1.1.17 via ge-2/0/1.0, selected
              Label operation: Push 299840, Push 299776(top)
              Label TTL action: prop-ttl, prop-ttl(top)
              Session Id: 0x200005

```



**Interior**

Protocol next hop: 192.0.2.3  
 Push 299840  
 Indirect next hop: 94100ec 1048584 INH Session ID: 0x20000b

**State: <Secondary NotBest Int Ext ProtectionCand>**

**Inactive reason: Not Best in its group - Interior > Exterior > Exterior via**

0x20000b

Local AS: 64497 Peer AS: 64497  
 Age: 10:31 Metric2: 1  
 Validation State: unverified  
 Task: BGP\_64497.192.0.2.3+179  
 Local AS: 64497 Peer AS: 64497  
 Age: 10:31 Metric2: 1  
 Validation State: unverified  
 Task: BGP\_64497.192.0.2.3+179  
 AS path: 64498 I  
 Communities: target:64497:1  
 Import Accepted  
 VPN Label: 299840  
 Localpref: 100  
 Router ID: 192.0.2.3  
 Primary Routing Table bgp.l3vpn.0  
 Indirect next hops: 1  
     Protocol next hop: 192.0.2.3 Metric: 1  
     Push 299840  
     Indirect next hop: 94100ec 1048584 INH Session ID:  
  
     Indirect path forwarding next hops: 1  
         Next hop type: Router  
         Next hop: 10.1.1.17 via ge-2/0/1.0  
         Session Id: 0x200005  
     192.0.2.3/24 Originating RIB: inet.3  
         Metric: 1 Node path count: 1  
     Forwarding nexthops: 1  
         **Nexthop: 10.1.1.17 via ge-2/0/1.0**

**#Multipath Preference: 255**

Next hop type: List, Next hop index: 1048585  
 Address: 0x944c154  
 Next-hop reference count: 2  
**Next hop: ELNH Address 0x9240a74 weight 0x1, selected**  
 equal-external-internal-type external  
     Next hop type: Router, Next hop index: 994  
     Address: 0x9240a74  
     Next-hop reference count: 5



```

Next hop: 10.1.1.26 via ge-2/0/2.0
Next hop: ELNH Address 0x92413a8 weight 0x4000
equal-external-internal-type internal
  Next hop type: Indirect
  Address: 0x92413a8
  Next-hop reference count: 6
  Protocol next hop: 192.0.2.3
  Push 299840
  Indirect next hop: 94100ec 1048584 INH Session ID: 0x20000b

  Next hop type: Router, Next hop index: 1322
  Address: 0x9241310
  Next-hop reference count: 4
  Next hop: 10.1.1.17 via ge-2/0/1.0
  Label operation: Push 299840, Push 299776(top)
  Label TTL action: prop-ttl, prop-ttl(top)
State: <ForwardingOnly Int Ext>
Inactive reason: Forwarding use only
Age: 10:31
Validation State: unverified
Task: RT
Announcement bits (1): 0-KRT
AS path: 64498 I

```

The output shows that the weight (**0x4000**) assigned to the PE3-CE2 path is greater than the weight (**0x1**) assigned to the PE2-CE2 path. This confirms that the PE2-CE2 path is protected by the PE3-CE2 path.

### Meaning

The provider edge link between Routers PE2 and CE2 is protected.

SEE ALSO



## Example: Configuring Provider Edge Link Protection for BGP Labeled Unicast Paths

### IN THIS SECTION

- [Requirements | 1054](#)
- [Overview | 1054](#)
- [Configuration | 1055](#)
- [Verification | 1070](#)

This example shows how to configure a labeled unicast protection path that can be used in case of a link failure in a carrier-of-carriers topology.

### Requirements

This example uses the following hardware and software components:

- M Series Multiservice Edge Routers, MX Series 5G Universal Routing Platforms, or T Series Core Routers
- Junos OS Release 13.3 or later

### Overview

This example shows how to configure labeled-unicast link protection in a Layer 3 VPN.

### Topology

In this example, a carrier-of-carriers topology is set up by configuring two customer edge devices and eight service provider edge devices in five autonomous systems. The CE devices are configured in AS100 and AS101. The PE devices are configured in AS200, AS300, and AS201.

[Figure 83 on page 1055](#) shows the topology used in this example.







**NOTE:** Protection is added to the configuration only after the initial configuration is committed and BGP has installed the best path in the forwarding table.

## Router R0

```
set interfaces ge-2/0/0 unit 0 description toR1
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.1/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.1/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2056.00
set routing-options router-id 192.0.2.1
set routing-options autonomous-system 100
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 10
```

## Router R1

```
set interfaces ge-2/0/0 unit 0 description toR0
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.2/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR2
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.5/30
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.2/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2052.00
set routing-options router-id 192.0.2.2
set routing-options autonomous-system 200
set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp interface ge-2/0/1.0
set protocols ldp interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/1.0 metric 10
```



```

set protocols bgp group toR8 local-address 192.0.2.2
set protocols bgp group toR8 type external
set protocols bgp group toR8 multihop ttl 10
set protocols bgp group toR8 family inet-vpn unicast
set protocols bgp group toR8 neighbor 192.0.2.9 peer-as 201
set policy-options policy-statement child_vpn_routes from protocol bgp
set policy-options policy-statement child_vpn_routes then accept
set routing-instances customer-provider-vpn instance-type vrf
set routing-instances customer-provider-vpn interface ge-2/0/0.0
set routing-instances customer-provider-vpn route-distinguisher 192.0.2.4:1
set routing-instances customer-provider-vpn vrf-target target:200:1
set routing-instances customer-provider-vpn protocols ospf export child_vpn_routes
set routing-instances customer-provider-vpn protocols ospf area 0.0.0.0 interface ge-2/0/0.0

```

## Router R2

```

set interfaces ge-2/0/0 unit 0 description toR1
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.6/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR3
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.9/30
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 description toR10
set interfaces ge-2/0/2 unit 0 family inet address 10.1.0.37/30
set interfaces ge-2/0/2 unit 0 family iso
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.3/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2046.00
set routing-options router-id 192.0.2.3
set routing-options autonomous-system 200
set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp interface ge-2/0/0.0
set protocols ldp interface ge-2/0/1.0
set protocols ldp interface ge-2/0/2.0
set protocols ldp interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```



```

set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 10
set protocols ospf area 0.0.0.0 interface ge-2/0/1.0 metric 10
set protocols ospf area 0.0.0.0 interface ge-2/0/2.0 metric 10

```

### Router R3

```

set interfaces ge-2/0/0 unit 0 description toR2
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.10/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR4
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.13/30
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.4/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2045.00
set routing-options router-id 192.0.2.4
set routing-options autonomous-system 200
set protocols mpls traffic-engineering bgp-igp
set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp egress-policy from-bgp
set protocols ldp interface ge-2/0/0.0
set protocols ldp interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf export from-bgp
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 10
set protocols bgp group toR4 type external
set protocols bgp group toR4 import send-local
set protocols bgp group toR4 family inet labeled-unicast
set protocols bgp group toR4 export send-local
set protocols bgp group toR4 neighbor 10.1.0.14 peer-as 300
set policy-options policy-statement from-bgp from protocol bgp
set policy-options policy-statement from-bgp then metric add 100
set policy-options policy-statement from-bgp then accept
set policy-options policy-statement send-local term 2 from metric 100
set policy-options policy-statement send-local term 2 then reject
set policy-options policy-statement send-local then accept

```



## Router R4

```

set interfaces ge-2/0/0 unit 0 description toR3
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.14/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR5
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.17/30
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.5/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2049.00
set policy-options policy-statement 1b then load-balance per-packet
set routing-options router-id 192.0.2.5
set routing-options autonomous-system 300
set routing-options forwarding-table export 1b
set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp interface ge-2/0/1.0
set protocols ldp interface lo0.0
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface ge-2/0/1.0 level 2 metric 10
set protocols isis interface lo0.0 passive
set protocols bgp group parent-vpn-peers type internal
set protocols bgp group parent-vpn-peers local-address 192.0.2.5
set protocols bgp group parent-vpn-peers family inet-vpn unicast
set protocols bgp group parent-vpn-peers neighbor 192.0.2.7
set protocols bgp group parent-vpn-peers neighbor 192.0.2.12
set routing-instances coc-provider-vpn instance-type vrf
set routing-instances coc-provider-vpn interface ge-2/0/0.0
set routing-instances coc-provider-vpn interface ge-2/0/2.0
set routing-instances coc-provider-vpn route-distinguisher 192.0.2.5:1
set routing-instances coc-provider-vpn vrf-target target:300:1
set routing-instances coc-provider-vpn protocols bgp group toR3 type external
set routing-instances coc-provider-vpn protocols bgp group toR3 family inet labeled-unicast
  per-prefix-label
set routing-instances coc-provider-vpn protocols bgp group toR3 neighbor 10.1.0.13 peer-as 200

```

## Router R5



```

set interfaces ge-2/0/0 unit 0 description toR4
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.18/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR6
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.21/30
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 description toR11
set interfaces ge-2/0/2 unit 0 family inet address 10.1.0.46/30
set interfaces ge-2/0/2 unit 0 family iso
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.6/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2050.00
set routing-options router-id 192.0.2.6
set routing-options autonomous-system 300
set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp interface ge-2/0/0.0
set protocols ldp interface ge-2/0/1.0
set protocols ldp interface ge-2/0/2.0
set protocols ldp interface lo0.0
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface ge-2/0/0.0 level 2 metric 10
set protocols isis interface ge-2/0/1.0 level 2 metric 10
set protocols isis interface ge-2/0/2.0 level 2 metric 10
set protocols isis interface lo0.0 passive

```

## Router R6

```

set interfaces ge-2/0/0 unit 0 description toR5
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.22/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR7
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.25/30
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.7/24

```



```

set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2048.00
set routing-options router-id 192.0.2.7
set routing-options autonomous-system 300
set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp interface ge-2/0/0.0
set protocols ldp interface lo0.0
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface ge-2/0/0.0 level 2 metric 10
set protocols isis interface lo0.0 passive
set protocols bgp group parent-vpn-peers type internal
set protocols bgp group parent-vpn-peers local-address 192.0.2.7
set protocols bgp group parent-vpn-peers family inet-vpn unicast
set protocols bgp group parent-vpn-peers neighbor 192.0.2.5
set protocols bgp group parent-vpn-peers neighbor 192.0.2.12
set routing-instances coc-provider-vpn instance-type vrf
set routing-instances coc-provider-vpn interface ge-2/0/1.0
set routing-instances coc-provider-vpn route-distinguisher 192.0.2.7:1
set routing-instances coc-provider-vpn vrf-target target:300:1
set routing-instances coc-provider-vpn protocols bgp group toR7 family inet labeled-unicast
    per-prefix-label
set routing-instances coc-provider-vpn protocols bgp group toR7 type external
set routing-instances coc-provider-vpn protocols bgp group toR7 neighbor 10.1.0.26 peer-as 201

```

## Router R7

```

set interfaces ge-2/0/0 unit 0 description toR6
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.26/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR8
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.29/30
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.8/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2054.00
set routing-options router-id 192.0.2.8
set routing-options autonomous-system 201
set protocols mpls traffic-engineering bgp-igp

```



```

set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp egress-policy from-bgp
set protocols ldp interface ge-2/0/1.0
set protocols ldp interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf export from-bgp
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/1.0 metric 10
set protocols bgp group toR6 type external
set protocols bgp group toR6 import send-all
set protocols bgp group toR6 family inet labeled-unicast
set protocols bgp group toR6 export send-all
set protocols bgp group toR6 neighbor 10.1.0.25 peer-as 300
set policy-options policy-statement from-bgp from protocol bgp
set policy-options policy-statement from-bgp then accept
set policy-options policy-statement send-all then accept

```

#### Router R8

```

set interfaces ge-2/0/0 unit 0 description toR7
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.30/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR9
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.33/30
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.9/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2053.00
set routing-options router-id 192.0.2.9
set routing-options autonomous-system 201
set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp interface ge-2/0/0.0
set protocols ldp interface lo0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 10
set protocols bgp group toR1 local-address 192.0.2.9
set protocols bgp group toR1 type external

```



```

set protocols bgp group toR1 multihop ttl 10
set protocols bgp group toR1 family inet-vpn unicast
set protocols bgp group toR1 neighbor 192.0.2.2 peer-as 200
set policy-options policy-statement child_vpn_routes from protocol bgp
set policy-options policy-statement child_vpn_routes then accept
set routing-instances customer-provider-vpn instance-type vrf
set routing-instances customer-provider-vpn interface ge-2/0/1.0
set routing-instances customer-provider-vpn route-distinguisher 192.0.2.9:1
set routing-instances customer-provider-vpn vrf-target target:200:1
set routing-instances customer-provider-vpn protocols ospf export child_vpn_routes
set routing-instances customer-provider-vpn protocols ospf area 0.0.0.0 interface ge-2/0/1.0

```

#### Router R9

```

set interfaces ge-2/0/0 unit 0 description toR8
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.34/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.10/24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2047.00
set routing-options router-id 192.0.2.10
set routing-options autonomous-system 101
set routing-options static route 198.51.100.1/24 discard
set protocols ospf export statics
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 10
set policy-options policy-statement statics from route-filter 198.51.100.1/24 exact
set policy-options policy-statement statics then accept

```

#### Router R10

```

set interfaces ge-2/0/0 unit 0 description toR2
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.38/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR11
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.41/30

```



```

set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.11.24
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2061.00
set routing-options router-id 192.0.2.11
set routing-options autonomous-system 200
set protocols mpls traffic-engineering bgp-igp
set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp egress-policy from-bgp
set protocols ldp interface ge-2/0/0.0
set protocols ldp interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf export from-bgp
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 10
set protocols bgp group toR4 type external
set protocols bgp group toR4 import send-local
set protocols bgp group toR4 family inet labeled-unicast
set protocols bgp group toR4 export send-local
set protocols bgp group toR4 neighbor 10.1.0.42 peer-as 300
set protocols bgp group toR4 inactive: neighbor 10.1.0.50 peer-as 300
set policy-options policy-statement from-bgp from protocol bgp
set policy-options policy-statement from-bgp then metric add 100
set policy-options policy-statement from-bgp then accept
set policy-options policy-statement send-local term 2 from metric 100
set policy-options policy-statement send-local term 2 then reject
set policy-options policy-statement send-local then accept

```

## Router R11

```

set interfaces ge-2/0/0 unit 0 description toR10
set interfaces ge-2/0/0 unit 0 family inet address 10.1.0.42/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/1 unit 0 description toR5
set interfaces ge-2/0/1 unit 0 family inet address 10.1.0.45/30
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.0.2.12/24

```



```

set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2062.00
set routing-options router-id 192.0.2.12
set routing-options autonomous-system 300
set protocols mpls interface all
set protocols ldp track-igp-metric
set protocols ldp interface ge-2/0/1.0
set protocols ldp interface lo0.0
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface ge-2/0/1.0 level 2 metric 10
set protocols isis interface lo0.0 passive
set protocols bgp group parent-vpn-peers type internal
set protocols bgp group parent-vpn-peers local-address 192.0.2.12
set protocols bgp group parent-vpn-peers family inet-vpn unicast
set protocols bgp group parent-vpn-peers neighbor 192.0.2.7
set protocols bgp group parent-vpn-peers neighbor 192.0.2.12
set routing-instances coc-provider-vpn instance-type vrf
set routing-instances coc-provider-vpn interface ge-2/0/0.0
set routing-instances coc-provider-vpn route-distinguisher 192.0.2.12:1
set routing-instances coc-provider-vpn vrf-target target:300:1
set routing-instances coc-provider-vpn protocols bgp group toR10 family inet labeled-unicast
    per-prefix-label
set routing-instances coc-provider-vpn protocols bgp group toR10 type external
set routing-instances coc-provider-vpn protocols bgp group toR10 neighbor 10.1.0.41 peer-as 200

```

### **Configuring Provider Edge Link Protection in Layer 3 VPNs**

#### **Step-by-Step Procedure**

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure labeled unicast link protection:

1. Configure the router interfaces.

```

[edit interfaces]
user@R4# set ge-2/0/0 unit 0 description toR3
user@R4# set ge-2/0/0 unit 0 family inet address 10.1.0.14/30
user@R4# set ge-2/0/0 unit 0 family iso
user@R4# set ge-2/0/0 unit 0 family mpls

```



```

user@R4# set ge-2/0/1 unit 0 description toR5
user@R4# set ge-2/0/1 unit 0 family inet address 10.1.0.17/30
user@R4# set ge-2/0/1 unit 0 family iso
user@R4# set ge-2/0/1 unit 0 family mpls

```

```

user@R4# set lo0 unit 0 family inet address 192.0.2.5/24
user@R4# set lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2049.00

```

Similarly, configure the interfaces on all other routers.

2. Configure the routing policy options on R4.

```

[edit policy-options]
user@R4# set policy-statement 1b then load-balance per-packet

```

Similarly, configure the policy options on routers R1, R3, R7, R8, R9, and R10 for this example.

3. Configure the router ID, autonomous system (AS) number, and any other routing options.

```

[edit routing-options]
user@R4# set router-id 192.0.2.5
user@R4# set autonomous-system 300
user@R4# set forwarding-table export 1b

```

Similarly, configure the router ID, AS number, and any other routing options for all other routers. In this example, the router ID is chosen to be identical to the loopback address configured on the router.

4. Configure MPLS and LDP on Router R4.

```

[edit protocols]
user@R4# set mpls interface all
user@R4# set ldp track-igp-metric
user@R4# set ldp interface ge-2/0/1.0
user@R4# set ldp interface lo0.0

```

Similarly, configure MPLS and LDP on all other routers except R0 and R9.

5. Configure an IGP on the core-facing interfaces of Router R4.

```

[edit protocols isis]
user@R4# set level 1 disable

```



```

user@R4# set level 2 wide-metrics-only
user@R4# set interface ge-2/0/1.0 level 2 metric 10
user@R4# set interface lo0.0 passive

```

Similarly, configure other routers (IS-IS on R5, R6, and R11 and OSPF on all other routers in this example).

#### 6. Configure BGP on Router R4.

```

[edit protocols bgp group parent-vpn-peers]
user@R4# set type internal
user@R4# set local-address 192.0.2.5
user@R4# set family inet-vpn unicast
user@R4# set neighbor 192.0.2.7
user@R4# set neighbor 192.0.2.12

```

Similarly, configure BGP on routers R1, R3, R6, R7, R8, R10, and R11.

#### 7. Configure a VPN routing and forwarding (VRF) instance on Router R4 to create a Layer 3 VPN.

```

[edit routing-instances coc-provider-vpn]
user@R4# set instance-type vrf
user@R4# set interface ge-2/0/0.0
user@R4# set interface ge-2/0/2.0
user@R4# set route-distinguisher 192.0.2.5:1
user@R4# set vrf-target target:300:1

```

```

[edit routing-instances coc-provider-vpn protocols bgp group toR3]
user@R4# set type external
user@R4# set family inet labeled-unicast per-prefix-label
user@R4# set neighbor 10.1.0.13 peer-as 200

```

Similarly, configure other VRF routing instances on R1, R6, R8, and R11.

### Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show policy-options**, **show routing-options**, **show protocols**, and **show routing-instances** commands.

If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@R4# show interfaces

```



```

ge-2/0/0 {
    unit 0 {
        description toR3;
        family inet {
            address 10.1.0.14/30;
        }
        family iso;
        family mpls;
    }
}
ge-2/0/1 {
    unit 0 {
        description toR5;
        family inet {
            address 10.1.0.17/30;
        }
        family iso;
        family mpls;
    }
}

lo0 {
    unit 0 {
        family inet {
            address 192.0.2.5/24;
        }
        family iso {
            address 47.0005.80ff.f800.0000.0108.0001.0102.5507.2049.00;
        }
    }
}

```

user@R4# **show policy-options**

```

policy-statement 1b {
    then {
        load-balance per-packet;
    }
}

```

user@R4# **show routing-options**



```

router-id 192.0.2.5;
autonomous-system 300;
forwarding-table {
    export lb;
}

```

user@R4# **show protocols**

```

mpls {
    interface all;
}
ldp {
    track-igp-metric;
    interface ge-2/0/1.0;
    interface lo0.0;
}
isis {
    level 1 disable;
    level 2 wide-metrics-only;
    interface ge-2/0/1.0 {
        level 2 metric 10;
    }
    interface lo0.0 {
        passive;
    }
}
bgp {
    group parent-vpn-peers {
        type internal;
        local-address 192.0.2.5;
        family inet-vpn {
            unicast;
        }
        neighbor 192.0.2.7;
        neighbor 192.0.2.12;
    }
}

```

user@R4# **show routing-instances**



```

coc-provider-vpn {
  instance-type vrf;
  interface ge-2/0/0.0;
  interface ge-2/0/2.0;
  route-distinguisher 192.0.2.5:1;
  vrf-target target:300:1;
  protocols {
    bgp {
      group toR3 {
        type external;
        family inet {
          labeled-unicast {
            per-prefix-label;
          }
        }
        neighbor 10.1.0.13 {
          peer-as 200;
        }
      }
    }
  }
}

```

If you are done configuring the router, enter **commit** from configuration mode.

Repeat the procedure for every router in this example, using the appropriate interface names and addresses for each router.

## Verification

### IN THIS SECTION

- [Enabling Protection | 1071](#)
- [Verifying Multipath Entries | 1071](#)
- [Verifying That Multipath Entries Have Different Weights | 1071](#)

Confirm that the configuration is working properly.



### Enabling Protection

#### Purpose

Enable protection on R4 to request protection for the link from R4 to R3.

#### Action

1. Add the **protection** statement at the **[edit routing-instances instance-name protocols bgp group group-name family inet labeled-unicast]** hierarchy level.

```
[edit routing-instances coc-provider-vpn protocols bgp group toR3]
user@R4# set family inet labeled-unicast protection
```

2. Verify and commit the configuration.

```
type external;
family inet {
    labeled-unicast {
        per-prefix-label;
        protection;
    }
}
neighbor 10.1.0.13 {
    peer-as 200;
}
```

### Verifying Multipath Entries

#### Purpose

Verify that R4 has a multipath entry with two entries.

#### Action

From operational mode on Router R4, run the **show route 192.0.2.2** command to check the route to R1.

```
user@R4> show route 192.0.2.2
```

```
#[Multipath/255] 00:02:44, metric 20
  > to 10.1.0.13 via ge-2/0/0.0, Push 408592
  to 10.1.0.18 via ge-2/0/1.0, Push 299856, Push 299792(top)
```

### Verifying That Multipath Entries Have Different Weights

#### Purpose



Verify that the two routes in the multipath entry have different weights, with the first entry having a weight of 0x1 and the second having a weight of 0x4000.

### Action

From operational mode on Router R4, run the **show route 192.0.2.2 detail** command to check the route to R1.

user@R4> **show route 192.0.2.2 detail**

```
#Multipath Preference: 255
  Next hop type: List, Next hop index: 1048609
  Address: 0x92f058c
  Next-hop reference count: 4
  Next hop: ELNH Address 0x92c48ac weight 0x1, selected
  equal-external-internal-type external
    Next hop type: Router, Next hop index: 1603
    Address: 0x92c48ac
    Next-hop reference count: 2
    Next hop: 10.1.0.13 via ge-2/0/0.0
    Label operation: Push 408592
    Label TTL action: prop-ttl
  Next hop: ELNH Address 0x92c548c weight 0x4000
  equal-external-internal-type internal
    Next hop type: Indirect
    Address: 0x92c548c
    Next-hop reference count: 3
    Protocol next hop: 192.0.2.12
    Push 299856
    Indirect next hop: 0x9380f40 1048608 INH Session ID: 0x10001a

    Next hop type: Router, Next hop index: 1586
    Address: 0x92c5440
    Next-hop reference count: 3
    Next hop: 10.1.0.18 via ge-2/0/1.0
    Label operation: Push 299856, Push 299792(top)
    Label TTL action: prop-ttl, prop-ttl(top)
  State: <ForwardingOnly Int Ext>
  Inactive reason: Forwarding use only
  Age: 3:38      Metric: 20
  Validation State: unverified
  Task: RT
  Announcement bits (1): 0-KRT
  AS path: 200 I
```




## Understanding Host Fast Reroute

Host fast reroute (HFRR) adds a precomputed protection path into the Packet Forwarding Engine (PFE), such that if a link between a provider edge device and a server farm becomes unusable for forwarding, the PFE can use another path without having to wait for the router or the protocols to provide updated forwarding information. This precomputed protection path is often called a repair or a backup path.

HFRR is a technology that protects IP endpoints on multipoint interfaces, such as Ethernet. This technology is important in datacenters where fast service restoration for server endpoints is critical. After an interface or a link goes down, HFRR enables the local repair time to be approximately 50 milliseconds.

Consider the network topology shown in [Figure 84 on page 1073](#).

**Figure 84: Host Fast Reroute**

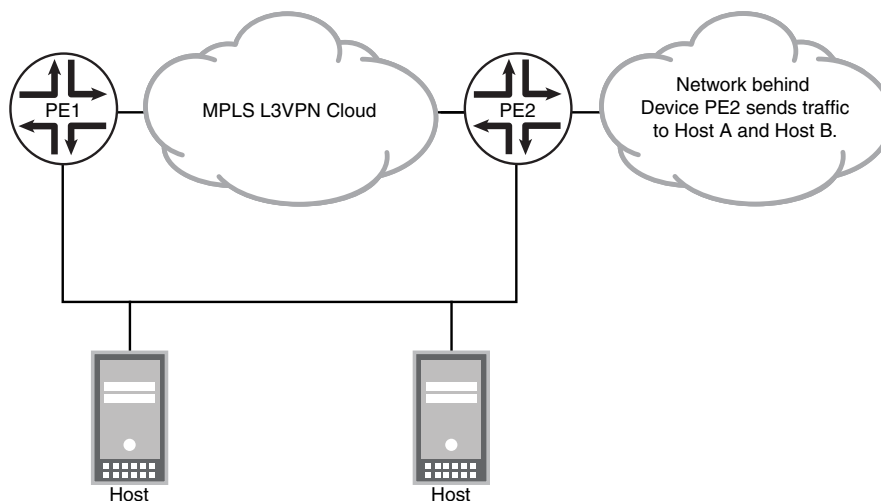

Routing devices create host route forwarding entries triggered by the Address Resolution Protocol (ARP) and IPv6 Neighbor Discovery Protocol (NDP). HFRR augments the host routes with backup next hops supplied by routing protocols. These backup next hops enable arriving traffic to keep flowing while the network reconverges.

Traffic flows from networks connected to the provider edge devices, PE1 and PE2, to host A and host B. This traffic is protected with HFRR. If the link goes down between device PE2 and the host servers, traffic is rerouted through device PE1 to the host servers. In the topology, host A and host B represent LAN PCs, collectively known as a server farm. The PE devices are routers with a Layer 3 VPN configured between them. Device PE1 learns about the directly connected hosts by way of ARP or the IPv6 NDP.

Device PE2 also has information about the server farm network and advertises this information to Device PE1. This advertisement is transmitted through the Layer 3 VPN using internal BGP (IBGP). On Devices PE1 and PE2, this route is considered a direct route to the server farm subnet.



Device PE1 uses the host routes learned through ARP and NDP to send traffic to the host machines in the server farm. If the link between Device PE1 and the server farm is disrupted and if HFRR is not configured, the routing device finds the next best route, which is the IBGP route. This implementation results in traffic loss for an interval until the update occurs and the network reconverges. HFRR configured on Device PE1 resolves this issue by augmenting the ARP and NDP routes with a backup path so that traffic can continue to be forwarded without interruption.

The backup path in this particular topology is the IBGP Layer 3 VPN route. In an actual deployment, Device PE2 can also configure link protection for its directly connected server farm network, and Device PE1 can advertise reachability to the server farm through itself using the Layer 3 VPN routes to Device PE2. Therefore, HFRR should be enabled on both Device PE1 and Device PE2. Also, Device PE1 and Device PE2 should both advertise reachability to the server farm through BGP.

A temporary routing loop can develop between the PE devices if, for example, the link between Device PE1 to the server farm and the link between Device PE2 to the server farm both go down at same time. The loop can continue until BGP on both ends learns that the server farm subnet is down and withdraws the BGP routes.

## ARP Prefix Limit and Blackout Supplementary Timeout

When you configure HFRR profiles, an optional ARP prefix limit sets a maximum for the number of ARP routes and, therefore, FRR routes created for each HFRR profile in the routing table. This limit prevents ARP attacks from exhausting the virtual memory on the routing devices. The ARP prefix limit does not limit ARP routes in the forwarding table. It does, however, limit the number of ARP routes that Junos OS reads for a profile and therefore limits the number of HFRR routes that the routing process (rpd) creates in the routing table and the forwarding table.

The ARP prefix limit is applied to each HFRR profile. It does not limit the total count of all ARP/HFRR routes in the routing table. It only limits the number of ARP/HFRR routes for each HFRR profile.

There are two configuration statements ([global-arp-prefix-limit](#) and [arp-prefix-limit](#)) that set the ARP prefix limit, one at the global `[edit routing-options host-fast-reroute]` hierarchy level and the other at the `[edit routing-instances instance-name routing-options interface interface-name]` hierarchy level, respectively. The global **global-arp-prefix-limit** statement sets a default ARP prefix limit for all HFRR profiles configured on the routing device. The **arp-prefix-limit** statement overrides the **global-arp-prefix-limit** for that HFRR profile for that protected interface.

When the number of ARP routes in an HFRR profile reaches 80% of the configured ARP prefix limit, a warning message is sent to the system log. The warning message is displayed for any subsequent ARP route added to that HFRR profile if the ARP prefixes remain at greater than 80% of the configured value.

When the number of ARP routes in an HFRR profile reaches 100% of the configured ARP prefix limit for an HFRR profile, another warning message is sent to the system log. When the number crosses the 100% threshold, the HFRR profile is deactivated. When this happens, all ARP/FRR routes are deleted from the routing table. FRR routes are deleted from forwarding table as well.



After the HFRR profile is deactivated, a blackout timer is started. The timeout value of this timer is the ARP cache timeout (kernel timeout) + the supplementary blackout timer.

There are global and per-HFRR CLI statements ([global-supplementary-blackout-timer](#) and [supplementary-blackout-timer](#)). The global value is at the `[edit routing-options host-fast-reroute]` hierarchy level and applies to all HFRR profiles on the routing device. The supplementary blackout timer configured for the routing-instance interface at the `[edit routing-instances instance-name routing-options interface interface-name]` hierarchy level overrides the global value for that HFRR profile only.

When the blackout timer expires, the HFRR profile is reactivated, and Junos OS relearns the ARP routes and re-creates the HFRR routes. If the ARP prefix limit is not exceeded again, the HFRR routes will be up.

If an HFRR profile is blacklisted and is in the deactivated state, a reevaluation of the ARP state is performed during every commit operation or whenever the routing process (rpd) is restarted with the **restart routing** command.

## Primary Route and Backup Route Candidates

The primary route for the HFRR next hop is provided by the ARP and IPv6 NDP routes. These are /32 or /128 routes. The backup route is an exact prefix match of the address configured on the local interface. For example, if the local address configured is 10.0.0.5/24, the routing device looks for an exact match of prefix 10.0.0.0 with a prefix length of 24 for selection of backup route.

Constraints for backup route selection are as follows:

- Must be a prefix matching the same subnet address configured on the routing device's HFRR-enabled interface.
- The remote end must not have route aggregation (also known as summarization) configured. For example, if the remote end combines two or more /24 subnets to advertise a subnet with a prefix length smaller than /24, the Junos OS does not select this summarized route to be a backup route.
- If there is another route in the routing table learned by another protocol with a longest-prefix match for the /32 or /128 (ARP or NDP) route, that route is not selected to be a backup candidate. For example, suppose that the local interface address is 10.0.0.5/24. Also suppose that the routing table contains an IBGP route with a prefix of 10.0.0.0/24 and an OSPF route with a prefix of 10.0.0.0/28. Even though the /28 route is a better route for certain prefixes in the subnet, the Junos OS does not consider 10.0.0.0/28 to be a backup candidate. The IBGP route becomes the backup candidate for all host routes. However, after the global repair, the OSPF route is used for forwarding.

In short, the backup candidate must be a route with the same prefix as the subnet local interface that you are protecting with HFRR.



## Backup Path Selection Policy

Only Layer 3 VPN routes are considered for backup selection. HFRR uses the usual BGP path selection algorithm to select one best backup route. Only one backup path is selected. In case there are multiple backup path candidates, the selection algorithm selects the best backup path. HFRR provides only two paths, one primary and one backup at any point in time. If the selected backup path itself has two paths in it, then the first path in that backup next hop is used as the backup next hop for the HFRR route.

The primary path is installed with a weight of one. The backup path is installed with a weight of 0x4000. The backup path obviously must be a path through an interface that is not the same as the primary interface.

The backup route is looked up only in the routing table to which interface belongs. For IPv4, the Junos OS uses *routing-instance-name.inet.0*. For IPv6, the Junos OS looks in *routing-instance-name.inet6.0*.

## Characteristics of HFRR Routes

The HFRR route is a forwarding-only route and is not used for route resolution. HFRR routes have host addresses, meaning that they have /32 or /128 as the prefix length. In the case of platforms with dual Routing Engines, the backup routing process (rpd) also creates HFRR routes. However, the backup routing process (rpd) does not install HFRR routes to a routing table until the backup becomes the master after a Routing Engine switchover.

Also note that if an HFRR route is present in the routing table, the HFRR route is used for the unicast reverse-path-forwarding (uRPF) computation.

## Removal of HFRR Routes

HFRR routes are deleted if the protected interface is deleted or deactivated in the configuration, if HFRR is configured on a routing instance and the routing instance is deactivated or deleted, or when the statement that enables HFRR ([link-protection \(Host Fast Reroute\)](#)) is deleted or deactivated. HFRR routes are deleted and readded when there is a catastrophic operation on routing the instance, such as when the routing process is restarted. HFRR routes are also be removed if all backup routes are deleted. such as when BGP withdraws routes or when BGP is deactivated or deleted.

After a protected interface goes down and if HFRR is deleted or deactivated, a timer starts with a timeout of 20 seconds. The HFRR route deletion occurs after the timer expires. This is to ensure that if the interface is flapping (quickly going up and down), the Junos OS does not unnecessarily perform route deletions and additions that cause traffic loss. This timer is used only when the interface is down or when the HFRR route is deleted or deactivated.

HFRR routes are purged immediately in the following cases:

- A backup route goes down and there are no other potential backup paths.
- An ARP delete message is received.



- The routing process (rpd) terminates.

## Interfaces That Support HFRR

HFRR is allowed only on Ethernet interfaces. The commit operation fails if you configure HFRR on point-to-point interfaces.

Only interfaces configured under routing instance of type VPN routing and forwarding (VRF) are accepted. The commit operation fails if you configure HFRR on other types of routing instances.

When the following requirements are not met, the commit operation does not fail. However, the interface is not protected by HFRR, and the interface is marked inactive in the [show hfrr profiles](#) command output:

- HFRR is allowed only on numbered interfaces, meaning that an address must be assigned to the interface. You cannot, for example, configure IPv4 on the interface with an address and IPv6 without an address.
- Interfaces that are configured for HFRR protection must be configured at the **[edit interfaces]** hierarchy level and also must be attached to the routing instance.
- The routing instance must have a virtual tunnel (VT) interface or the **vrf-table-label** statement included.

Another reason the interface might be marked inactive in the **show hfrr profiles** command output is when the interface is migrating from one instance to another, and the HFRR configuration is in the previous routing instance.

HFRR is not supported on overlapping logical units if they belong to the same routing instance, as shown here:

```
user@host # show interfaces
ge-0/0/2 {
  vlan-tagging;
  unit 0 {
    vlan-id 1;
    family inet {
      address 172.16.0.4/16; # same subnet
    }
  }
  unit 1 {
    vlan-id 2;
    family inet {
      address 172.16.0.5/16; # same subnet
    }
  }
}
```



If you configure overlapping subnets as shown here, and if you enable HFRR on both of the overlapping subnets, the routing protocol process (rpd) generates an RPD\_ASSERT error.

SEE ALSO

| *Understanding BGP Path Selection*

## Example: Configuring Link Protection with Host Fast Reroute

### IN THIS SECTION

- [Requirements | 1078](#)
- [Overview | 1078](#)
- [Configuration | 1080](#)
- [Verification | 1089](#)

This example shows you how to configure host fast reroute (HFRR). HFRR protects IP endpoints on multipoint interfaces, such as Ethernet.

### Requirements

This example uses the following hardware and software components:

- Two provider edge (PE) devices and four provider (P) devices.
- The example assumes that hosts are present, behind the PE devices.
- The example assumes that at least one Layer 3 switch, such as an EX Series switch, is attached to the hosts.
- Junos OS 11.4R2 or later.

### Overview

In this example, traffic flows to server hosts from networks connected to PE devices. This traffic is protected with HFRR. If the link goes down between one PE device and the server farm, traffic is rerouted to the server farm through the other PE device.



You can configure HFRR by adding the **link-protection** statement to the interface configuration in the routing instance.

```
[edit routing-instances cust1 routing-options]  
set interface ge-4/1/0.0 link-protection (Host Fast Reroute)
```

We recommend that you include this statement on all PE devices that are connected to server farms through multipoint interfaces.

In this example, the PE devices advertise reachability to their server farms through Layer 3 VPN routes and BGP.


As optional settings, the PE devices have the high availability features Nonstop Active Routing and Virtual Router Redundancy Protocol (VRRP) configured. Nonstop active routing (NSR) enables a routing platform with redundant Routing Engines to switch from a primary Routing Engine to a backup Routing Engine without alerting peer nodes that a change has occurred and without losing routing and protocol information. VRRP provides for automatic assignment of available routers to participating hosts, thus increasing the availability and reliability of routing paths.

### ***Topology Diagram***

[Figure 85 on page 1080](#) shows the topology used in this example.



Figure 85: Host Fast Reroute Topology

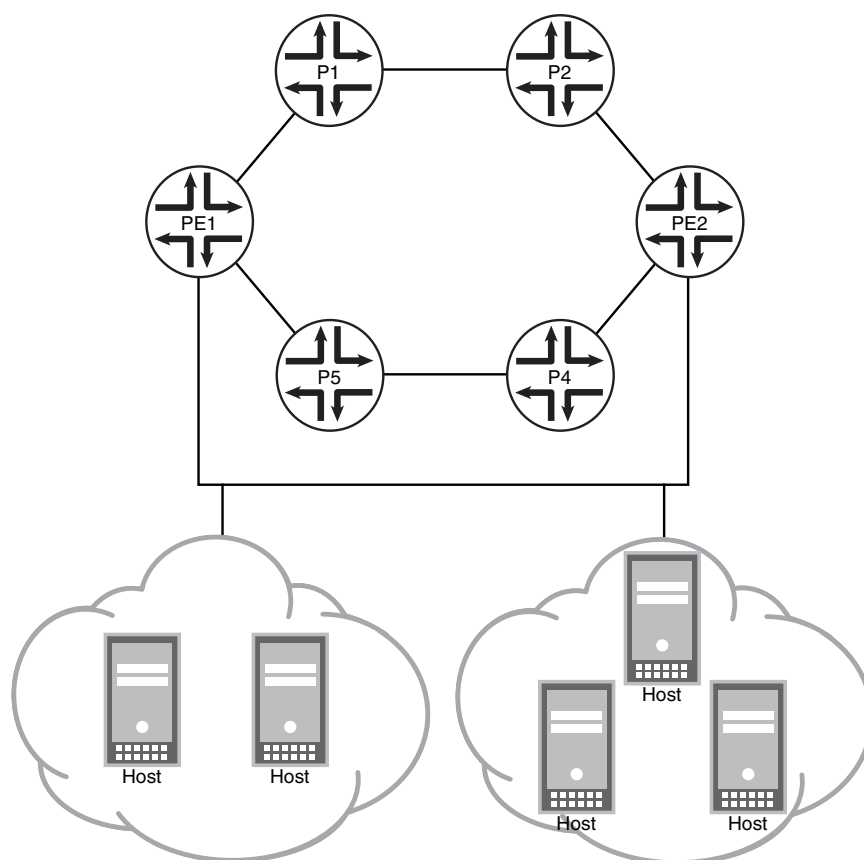

g041180

This example shows the configuration on all of the routing devices and shows the step-by-step procedure on Device PE1.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device PE1

```
set interfaces ge-4/1/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-4/1/0 unit 0 description toPE2
set interfaces ge-0/2/0 unit 0 family inet address 10.10.10.1/30
set interfaces ge-0/2/0 unit 0 description toP1
```



```

set interfaces ge-0/2/0 unit 0 family mpls
set interfaces ge-0/2/4 unit 0 family inet address 10.10.15.2/30
set interfaces ge-0/2/4 unit 0 description toP5
set interfaces ge-0/2/4 unit 0 family mpls
set interfaces ge-4/1/0 unit 0 family inet address 192.0.2.2/24 vrrp-group 1 virtual-address 192.0.2.5
set interfaces ge-4/1/0 unit 0 family inet address 192.0.2.2/24 vrrp-group 1 priority 240
set interfaces ge-4/1/0 unit 0 family inet address 192.0.2.2/24 vrrp-group 1 fast-interval 100
set interfaces ge-4/1/0 unit 0 family inet address 192.0.2.2/24 vrrp-group 1 preempt
set interfaces ge-4/1/0 unit 0 family inet address 192.0.2.2/24 vrrp-group 1 accept-data
set interfaces lo0 unit 0 family inet address 10.255.8.207/32
set protocols mpls interface ge-0/2/0.0
set protocols mpls interface ge-0/2/4.0
set protocols bgp group pe-ce type internal
set protocols bgp group pe-ce local-address 10.255.8.207
set protocols bgp group pe-ce family inet-vpn unicast
set protocols bgp group pe-ce neighbor 10.255.8.86
set protocols bgp group pe-ce export send-routes
set protocols ospf area 0.0.0.0 interface ge-0/2/0.0
set protocols ospf area 0.0.0.0 interface ge-0/2/4.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-0/2/0.0
set protocols ldp interface ge-0/2/4.0
set policy-options policy-statement send-routes term 1 from protocol direct
set policy-options policy-statement send-routes term 1 from protocol local
set policy-options policy-statement send-routes term 1 then accept
set routing-options nonstop-routing
set routing-options autonomous-system 100
set routing-instances cust1 instance-type vrf
set routing-instances cust1 interface ge-4/1/0.0
set routing-instances cust1 route-distinguisher 100:100
set routing-instances cust1 vrf-target target:100:100
set routing-instances cust1 vrf-table-label
set routing-instances cust1 routing-options interface ge-4/1/0.0 link-protection

```

## Device PE2

```

set interfaces ge-0/0/2 unit 0 family inet address 10.10.12.2/30
set interfaces ge-0/0/2 unit 0 description toP2
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/1/2 unit 0 family inet address 10.10.13.1/30

```



```

set interfaces ge-0/1/2 unit 0 description toP4
set interfaces ge-0/1/2 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 family inet address 192.0.2.3/24
set interfaces ge-2/0/2 unit 0 description toPE1
set interfaces ge-2/0/2 unit 0 family inet address 192.0.2.3/24 vrrp-group 1 virtual-address 192.0.2.5
set interfaces ge-2/0/2 unit 0 family inet address 192.0.2.3/24 vrrp-group 1 fast-interval 100
set interfaces ge-2/0/2 unit 0 family inet address 192.0.2.3/24 vrrp-group 1 preempt
set interfaces ge-2/0/2 unit 0 family inet address 192.0.2.3/24 vrrp-group 1 accept-data
set interfaces lo0 unit 0 family inet address 10.255.8.86/32
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/1/2.0
set protocols bgp group pe-ce type internal
set protocols bgp group pe-ce export send-routes
set protocols bgp group pe-ce local-address 10.255.8.86
set protocols bgp group pe-ce family inet-vpn unicast
set protocols bgp group pe-ce neighbor 10.255.8.207
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/1/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-0/0/2.0
set protocols ldp interface ge-0/1/2.0
set policy-options policy-statement send-routes term 1 from protocol direct
set policy-options policy-statement send-routes term 1 from protocol local
set policy-options policy-statement send-routes term 1 then accept
set routing-options nonstop-routing
set routing-options autonomous-system 100
set routing-instances cust1 instance-type vrf
set routing-instances cust1 interface ge-2/0/2.0
set routing-instances cust1 route-distinguisher 100:100
set routing-instances cust1 vrf-target target:100:100
set routing-instances cust1 vrf-table-label
set routing-instances cust1 routing-options interface ge-2/0/2.0 link-protection

```

## Device P1

```

set interfaces ge-0/0/3 unit 0 family inet address 10.10.11.1/30
set interfaces ge-0/0/3 unit 0 description toP2
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 10.10.10.2/30
set interfaces ge-0/0/4 unit 0 description toPE1

```



```

set interfaces ge-0/0/4 unit 0 family mpls
set protocols mpls interface ge-0/0/4.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-0/0/3.0
set protocols ldp interface ge-0/0/4.0
set routing-options autonomous-system 100

```

#### Device P2

```

set interfaces ge-0/2/1 unit 0 family inet address 10.10.12.1/30
set interfaces ge-0/2/1 unit 0 description toPE2
set interfaces ge-0/2/1 unit 0 family mpls
set interfaces ge-1/2/1 unit 0 family inet address 10.10.11.2/30
set interfaces ge-1/2/1 unit 0 description toP1
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.8.246/32
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set routing-options autonomous-system 100

```

#### Device P4

```

set interfaces ge-0/2/3 unit 0 family inet address 10.10.13.2/30
set interfaces ge-0/2/3 unit 0 description toPE2
set interfaces ge-0/2/3 unit 0 family mpls
set interfaces ge-1/3/3 unit 0 family inet address 10.10.14.1/30
set interfaces ge-1/3/3 unit 0 description toP5
set interfaces ge-1/3/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.8.4/32
set protocols mpls interface ge-0/2/3.0

```



```

set protocols mpls interface ge-1/3/3.0
set protocols ospf area 0.0.0.0 interface ge-0/2/3.0
set protocols ospf area 0.0.0.0 interface ge-1/3/3.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-0/2/3.0
set protocols ldp interface ge-1/3/3.0
set routing-options autonomous-system 100

```

## Device P5

```

set interfaces ge-0/1/2 unit 0 family inet address 10.10.15.1/30
set interfaces ge-0/1/2 unit 0 description toPE1
set interfaces ge-0/1/2 unit 0 family mpls
set interfaces ge-0/1/5 unit 0 family inet address 10.10.14.2/30
set interfaces ge-0/1/5 unit 0 description toP4
set interfaces ge-0/1/5 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.8.5/32
set protocols mpls interface ge-0/1/5.0
set protocols mpls interface ge-0/1/2.0
set protocols ospf area 0.0.0.0 interface ge-0/1/5.0
set protocols ospf area 0.0.0.0 interface ge-0/1/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-0/1/2.0
set protocols ldp interface ge-0/1/5.0
set routing-options autonomous-system 100

```

## Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure HFRR:

1. Configure the interfaces.

```

[edit interfaces]
user@PE1# set ge-4/1/0 unit 0 family inet address 192.0.2.2/24
user@PE1# set ge-4/1/0 unit 0 description toPE2
user@PE1# set ge-0/2/0 unit 0 family inet address 10.10.10.1/30
user@PE1# set ge-0/2/0 unit 0 description toP1

```



```

user@PE1# set ge-0/2/0 unit 0 family mpls
user@PE1# set ge-0/2/4 unit 0 family inet address 10.10.15.2/30
user@PE1# set ge-0/2/4 unit 0 description toP5
user@PE1# set ge-0/2/4 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.8.207/32

```

2. (Optional) Configure VRRP on the interface to Device PE2.

```

[edit interfaces ge-4/1/0 unit 0 family inet address 192.0.2.2/24]
user@PE1# set vrrp-group 1 virtual-address 192.0.2.5
user@PE1# set vrrp-group 1 priority 240
user@PE1# set vrrp-group 1 fast-interval 100
user@PE1# set vrrp-group 1 preempt
user@PE1# set vrrp-group 1 accept-data

```

3. Configure MPLS on the interfaces.

```

[edit protocols mpls]
user@PE1# set interface ge-0/2/0.0
user@PE1# set interface ge-0/2/4.0

```

4. Configure BGP.

```

[edit protocols bgp group pe-ce]
user@PE1# set type internal
user@PE1# set local-address 10.255.8.207
user@PE1# set family inet-vpn unicast
user@PE1# set neighbor 10.255.8.86
user@PE1# set export send-routes

```

5. Configure a policy that advertises direct and local interface routes.

```

[edit policy-options policy-statement send-routes term 1]
user@PE1# set from protocol direct
user@PE1# set from protocol local
user@PE1# set then accept

```

6. Configure an interior gateway protocol, such as IS-IS or OSPF.



```
[edit protocols ospf area 0.0.0.0]
user@PE1# set interface ge-0/2/0.0
user@PE1# set interface ge-0/2/4.0
user@PE1# set interface lo0.0 passive
```

7. Configure a signaling protocol, such as RSVP or LDP.

```
[edit protocols ldp]
user@PE1# set interface ge-0/2/0.0
user@PE1# set interface ge-0/2/4.0
```

8. (Optional) Configure nonstop active routing.

```
[edit routing-options]
user@PE1# set nonstop-routing
```

9. Configure the autonomous system (AS).

```
[edit routing-options]
user@PE1# set routing-options autonomous-system 100
```

10. Configure the Layer 3 VPN routing instance.

```
[edit routing-instances cust1]
user@PE1# set instance-type vrf
user@PE1# set interface ge-4/1/0.0
user@PE1# set route-distinguisher 100:100
user@PE1# set vrf-target target:100:100
user@PE1# set vrf-table-label
```

11. Configure HFRR link protection.

```
[edit routing-instances cust1 routing-options]
user@PE1# set interface ge-4/1/0.0 link-protection (Host Fast Reroute)
```



12. If you are done configuring the device, commit the configuration.

```
[edit]
user@PE1# commit
```

### Results

Confirm your configuration by issuing the **show interfaces**, **show protocols**, **show policy-options**, **show routing-options**, and **show routing-instances** commands.

```
user@PE1# show interfaces
ge-4/1/0 {
  unit 0 {
    description toPE2;
    family inet {
      address 192.0.2.2/24 {
        vrrp-group 1 {
          virtual-address 192.0.2.5;
          priority 240;
          fast-interval 100;
          preempt;
          accept-data;
        }
      }
    }
  }
}
ge-0/2/0 {
  unit 0 {
    description toP1;
    family inet {
      address 10.10.10.1/30;
    }
    family mpls;
  }
}
ge-0/2/4 {
  unit 0 {
    description toP5;
    family inet {
      address 10.10.15.2/30;
    }
    family mpls;
  }
}
```



```

}
lo0 {
  unit 0 {
    family inet {
      address 10.255.8.207/32;
    }
  }
}

```

user@PE1# **show protocols**

```

mpls {
  interface ge-0/2/0.0;
  interface ge-0/2/4.0;
}
bgp {
  group pe-ce {
    export-send-routes;
    type internal;
    local-address 10.255.8.207;
    family inet-vpn {
      unicast;
    }
    neighbor 10.255.8.86;
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-0/2/0.0;
    interface ge-0/2/4.0;
    interface lo0.0 {
      passive;
    }
  }
}
ldp {
  interface ge-0/2/0.0;
  interface ge-0/2/4.0;
}

```

user@PE1# **show policy-options**

```

policy-statement send-routes {
  term 1 {
    from protocol [ direct local ];
  }
}

```



```
    then accept;
  }
}
```

```
user@PE1# show routing-options
nonstop-routing;
autonomous-system 100;
```

```
user@PE1# show routing-instances
cust1 {
  instance-type vrf;
  interface ge-4/1/0.0;
  route-distinguisher 100:100;
  vrf-target target:100:100;
  vrf-table-label;
  routing-options {
    interface {
      ge-4/1/0.0 {
        link-protection;
      }
    }
  }
}
```

## Verification

### IN THIS SECTION

- [Verifying HFRR | 1089](#)
- [Verifying ARP Routes | 1090](#)
- [Verifying Fast Reroute Routes | 1091](#)
- [Verifying Forwarding | 1092](#)

Confirm that the configuration is working properly.

### Verifying HFRR

#### Purpose



Make sure that HFRR is enabled.

### Action

user@PE1> **show hfrr profiles**

```
HFRR pointer: 0x9250000
HFRR Current State: HFRR_ACTIVE
HFRR Protected IFL Name: ge-4/1/0.0
HFRR Protected IFL Handle: 0x921086c
HFRR Routing Instance Name: cust1
HFRR Routing Instance Handle: 0x9129740
HFRR Sync BG Sceduled: NO
HFRR RTS Filter On: YES
HFRR Delete BG Scheduled: NO
HFRR Num ARP Routes learnt: 100
HFRR Num FRR Routes Created: 100
```

### Meaning

The output shows that the HFRR is enabled on interface ge-4/1/0.0.

### Verifying ARP Routes

### Purpose

Make sure that the expected ARP routes are learned.

### Action

user@PE1> **show route protocol arp**

```
inet.0: 43 destinations, 43 routes (42 active, 0 holddown, 1 hidden)

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

cust1.inet.0: 1033 destinations, 2043 routes (1033 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.3/24      @[ARP/4294967293] 00:04:35, from 192.0.2.1
                  Unusable
192.0.2.4/24      @[ARP/4294967293] 00:04:35, from 192.0.2.1
                  Unusable
192.0.2.5/24      @[ARP/4294967293] 00:04:32, from 192.0.2.1
                  Unusable
192.0.2.6/24      @[ARP/4294967293] 00:04:34, from 192.0.2.1
```



```

Unusable
192.0.2.7/24      @[ARP/4294967293] 00:04:35, from 192.0.2.1
Unusable
192.0.2.8/24      @[ARP/4294967293] 00:04:35, from 192.0.2.1
Unusable
192.0.2.9/24      @[ARP/4294967293] 00:04:35, from 192.0.2.1
Unusable
192.0.2.10/24     @[ARP/4294967293] 00:04:35, from 192.0.2.1
Unusable
192.0.2.11/24     @[ARP/4294967293] 00:04:33, from 192.0.2.1
Unusable
192.0.2.12/24     @[ARP/4294967293] 00:04:33, from 192.0.2.1
Unusable
192.0.2.13/24     @[ARP/4294967293] 00:04:33, from 192.0.2.1
Unusable
...
```

### Verifying Fast Reroute Routes

#### Purpose

Make sure that the expected fast reroute (FRR) routes are learned.

#### Action

```
user@PE1> show route protocol frr
```

```

inet.0: 43 destinations, 43 routes (42 active, 0 holddown, 1 hidden)

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

cust1.inet.0: 1033 destinations, 2043 routes (1033 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.3/24      #[FRR/200] 00:05:38, from 192.0.2.1
> to 192.0.2.3 via ge-4/1/0.0
  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
192.0.2.4/24      #[FRR/200] 00:05:38, from 192.0.2.1
> to 192.0.2.4 via ge-4/1/0.0
  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
192.0.2.5/24      #[FRR/200] 00:05:35, from 192.0.2.1
> to 192.0.2.5 via ge-4/1/0.0
  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
192.0.2.6/24      #[FRR/200] 00:05:37, from 192.0.2.1
```



```

> to 192.0.2.6 via ge-4/1/0.0
  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
192.0.2.7/24 #[FRR/200] 00:05:38, from 192.0.2.1
> to 192.0.2.7 via ge-4/1/0.0
  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
192.0.2.8/24 #[FRR/200] 00:05:38, from 192.0.2.1
> to 192.0.2.8 via ge-4/1/0.0
  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
192.0.2.9/24 #[FRR/200] 00:05:38, from 192.0.2.1
> to 192.0.2.9 via ge-4/1/0.0
  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
192.0.2.10/24 #[FRR/200] 00:05:38, from 192.0.2.1
...

```

## Verifying Forwarding

### Purpose

Make sure that the expected routes appear in the forwarding table.

### Action

user@PE1> **show route forwarding-table destination 192.0.2.3**

```

Routing table: default.inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm    0                               rjct   36    1

Routing table: default-switch.inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm    0                               rjct   554    1

Routing table: __master.anon__.inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm    0                               rjct   532    1

Routing table: cust1.inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
192.0.2.3/24     user    0                               ulst 1048575    2
                  0:0:14:14:1:3      ucst   767    3 ge-4/1/0.0

```



```

                                10.10.15.1      indr 1048574 1001
                                Push 16, Push 299792(top) 1262
2 ge-0/2/4.0
192.0.2.3/24      dest      0 0:0:14:14:1:3      ucst      767      3 ge-4/1/0.0
...

```

## Unicast Reverse Path Forwarding Check for VPNs

### IN THIS SECTION

- [Understanding Unicast RPF \(Switches\) | 1093](#)
- [Example: Configuring Unicast RPF \(On a Router\) | 1099](#)

## Understanding Unicast RPF (Switches)

### IN THIS SECTION

- [Unicast RPF for Switches Overview | 1094](#)
- [Unicast RPF Implementation | 1095](#)
- [When to Enable Unicast RPF | 1096](#)
- [When Not to Enable Unicast RPF | 1097](#)
- [Limitations of the Unicast RPF Implementation on EX3200, EX4200, and EX4300 Switches | 1098](#)



To protect against IP spoofing, and some types of denial-of-service (DoS) and distributed denial-of-service (DDoS) attacks, unicast reverse-path-forwarding (RPF) verifies that packets are arriving from a legitimate path. It does this by checking the source address of each packet that arrives on an untrusted ingress interface and, comparing it to the forwarding-table entry for its source address. If the packet is from a valid path, that is, one that the sender would use to reach the destination, the device forwards the packet to the destination address. If it is not from a valid path, the device discards the packet. Unless it is protected against, IP spoofing can be an effective way for intruders to pass IP packets to a destination as genuine traffic, when in fact the packets are not actually meant for the destination.

Unicast RPF is supported for the IPv4 and IPv6 protocol families, as well as for the virtual private network (VPN) address family. Unicast RPF is not supported on interfaces configured as tunnel sources. This affects only the transit packets exiting the tunnel.

There are two modes of unicast RPF, *strict mode*, and *loose mode*. The default is strict mode, which means the switch forwards a packet only if the receiving interface is the best return path to the packet's unicast source address. Strict mode is especially useful on untrusted interfaces (where untrusted users or processes can place packets on the network segment), and for symmetrically routed interfaces (see [“When to Enable Unicast RPF” on page 1096](#).) For more information about strict unicast RPF, see RFC 3704, *Ingress Filtering for Multihomed Networks* at <http://www.ietf.org/rfc/rfc3704.txt>.

To enable strict mode unicast RPF on a selected customer-edge interface:

[edit interfaces]

```
user@switch# set interface-name unit 0 family inet rpf-check
```

The other mode is loose mode, which means the system checks to see if the packet has a source address with a corresponding prefix in the routing table, but it does not check whether the receiving interface is the best return path to the packet's unicast source address.

To enable unicast RPF loose mode, enter:

[edit interfaces]

```
user@switch# set interface-name unit 0 family inet rpf-check mode loose
```

**NOTE:** On Juniper Networks EX3200, EX4200, and EX4300 Ethernet Switches, the switch applies unicast RPF *globally* to all interfaces when unicast RPF is configured on any interface. For additional information, see [“Limitations of the Unicast RPF Implementation on EX3200, EX4200, and EX4300 Switches” on page 1098](#).

## Unicast RPF for Switches Overview



Unicast RPF functions as an ingress filter that reduces the forwarding of IP packets that might be spoofing an address. By default, unicast RPF is disabled on the switch interfaces. The switch supports only the active paths method of determining the best return path back to a unicast source address. The active paths method looks up the best reverse path entry in the forwarding table. It does not consider alternate routes specified using routing-protocol-specific methods when determining the best return path.

If the forwarding table lists the receiving interface as the interface to use to forward the packet back to its unicast source, it is the best return path interface.

## Unicast RPF Implementation

### IN THIS SECTION

- [Unicast RPF Packet Filtering | 1095](#)
- [Bootstrap Protocol \(BOOTP\) and DHCP Requests | 1095](#)
- [Default Route Handling | 1095](#)

### ***Unicast RPF Packet Filtering***

When you enable unicast RPF on the switch, the switch handles traffic in the following manner:

- If the switch receives a packet on the interface that is the best return path to the unicast source address of that packet, the switch forwards the packet.
- If the best return path from the switch to the packet's unicast source address is not the receiving interface, the switch discards the packet.
- If the switch receives a packet that has a source IP address that does not have a routing entry in the forwarding table, the switch discards the packet.

### ***Bootstrap Protocol (BOOTP) and DHCP Requests***

Bootstrap protocol (BOOTP) and DHCP request packets are sent with a broadcast MAC address and therefore the switch does not perform unicast RPF checks on them. The switch forwards all BOOTP packets and DHCP request packets without performing unicast RPF checks.

### ***Default Route Handling***

If the best return path to the source is the default route (0.0.0.0) and the default route points to **reject**, the switch discards the packets. If the default route points to a valid network interface, the switch performs a normal unicast RPF check on the packets.



**NOTE:** On the EX4300, the default route is not used when the switch is configured in unicast RPF strict mode.


## When to Enable Unicast RPF

Enable unicast RPF when you want to ensure that traffic arriving on a network interface comes from a source that resides on a network that interface can reach. You can enable unicast RPF on untrusted interfaces to filter spoofed packets. For example, a common application for unicast RPF is to help defend an enterprise network from DoS/DDoS attacks coming from the Internet.

Enable unicast RPF only on symmetrically routed interfaces, and as close as possible to the traffic source stops spoofed traffic before it can proliferate or reach interfaces that do not have unicast RPF enabled. Because unicast RPF is enabled globally on EX3200, EX4200, and EX4300 switches, ensure that *all* interfaces are symmetrically routed before you enable unicast RPF on these switches, as shown in [Figure 86 on page 1096](#). Enabling unicast RPF on asymmetrically routed interfaces results in packets from legitimate sources being filtered. A symmetrically routed interface uses the same route in both directions between the source and the destination.

Unicast RPF is enabled globally on EX3200, EX4200, and EX4300 switches, so with these devices, be sure that *all* interfaces are symmetrically routed before you enable unicast RPF on these switches. Enabling unicast RPF on asymmetrically routed interfaces results in packets from legitimate sources being filtered.

**Figure 86: Symmetrically Routed Interfaces**

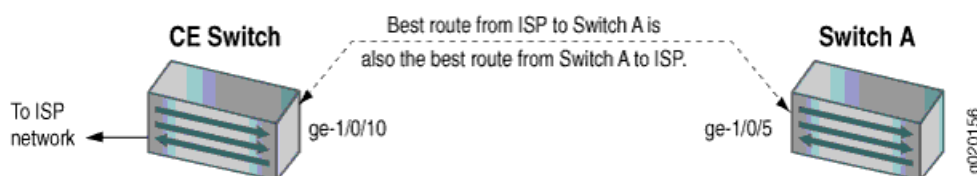

The following switch interfaces are most likely to be symmetrically routed and thus are candidates for unicast RPF enabling:

- The service provider edge to a customer
- The customer edge to a service provider
- A single access point out of the network (usually on the network perimeter)
- A terminal network that has only one link

On EX3200, EX4200, and EX4300 switches, we recommend that you enable unicast RPF explicitly on either all interfaces or only one interface. To avoid possible confusion, do not enable it on only some interfaces:



- Enabling unicast RPF explicitly on only one interface makes it easier if you choose to disable it in the future because you must explicitly disable unicast RPF on every interface on which you explicitly enabled it. If you explicitly enable unicast RPF on two interfaces and you disable it on only one interface, unicast RPF is still implicitly enabled globally on the switch. The drawback of this approach is that the switch displays the flag that indicates that unicast RPF is enabled only on interfaces on which unicast RPF is explicitly enabled, so even though unicast RPF is enabled on all interfaces, this status is not displayed.
- Enabling unicast RPF explicitly on all interfaces makes it easier to know whether unicast RPF is enabled on the switch because every interface shows the correct status. (Only interfaces on which you explicitly enable unicast RPF display the flag that indicates that unicast RPF is enabled.) The drawback of this approach is that if you want to disable unicast RPF, you must explicitly disable it on every interface. If unicast RPF is enabled on any interface, it is implicitly enabled on all interfaces.


## When Not to Enable Unicast RPF

Typically, you will not enable unicast RPF if:

- Switch interfaces are multihomed.
- Switch interfaces are trusted interfaces.
- BGP is carrying prefixes and some of those prefixes are not advertised or are not accepted by the ISP under its policy. (The effect in this case is the same as filtering an interface by using an incomplete access list.)
- Switch interfaces face the network core. Core-facing interfaces are usually asymmetrically routed.

An asymmetrically routed interface uses different paths to send and receive packets between the source and the destination, as shown in [Figure 87 on page 1097](#). This means that if an interface receives a packet, that interface does not match the forwarding table entry as the best return path back to the source. If the receiving interface is not the best return path to the source of a packet, unicast RPF causes the switch to discard the packet even though it comes from a valid source.

Figure 87: Asymmetrically Routed Interfaces

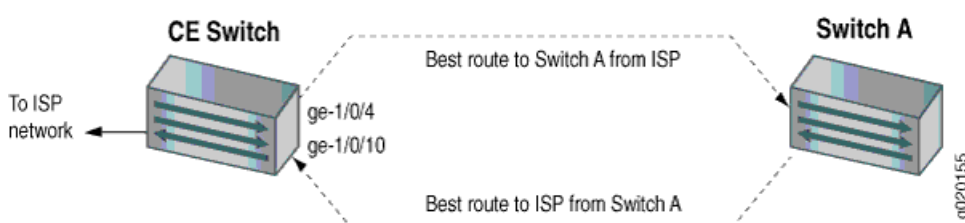



**NOTE:** Do not enable unicast RPF on EX3200, EX4200, and EX4300 switches if any switch interfaces are asymmetrically routed, because unicast RPF is enabled globally on all interfaces of these switches. All switch interfaces must be symmetrically routed for you to enable unicast RPF without the risk of the switch discarding traffic that you want to forward.

## Limitations of the Unicast RPF Implementation on EX3200, EX4200, and EX4300 Switches

On EX3200, EX4200, and EX4300 switches, the switch implements unicast RPF on a global basis. You cannot enable unicast RPF on a per-interface basis. Unicast RPF is globally disabled by default.

- When you enable unicast RPF on any interface, it is automatically enabled on all switch interfaces, including link aggregation groups (LAGs), integrated routing and bridging (IRB) interfaces, and routed VLAN interfaces (RVIs).
- When you disable unicast RPF on the interface (or interfaces) on which you enabled unicast RPF, it is automatically disabled on all switch interfaces.

**NOTE:** You must explicitly disable unicast RPF on every interface on which it was explicitly enabled or unicast RPF remains enabled on all switch interfaces.

QFX switches, OCX switches, and EX3200 and EX4200 switches do not perform unicast RPF filtering on equal-cost multipath (ECMP) traffic. The unicast RPF check examines only one best return path to the packet source, but ECMP traffic employs an address block consisting of multiple paths. Using unicast RPF to filter ECMP traffic on these switches can result in the switch discarding packets that you want to forward because the unicast RPF filter does not examine the entire ECMP address block.

### SEE ALSO

*Example: Configuring Unicast RPF (On a Switch)*

*Troubleshooting Unicast RPF*



## Example: Configuring Unicast RPF (On a Router)

### IN THIS SECTION

- [Requirements | 1099](#)
- [Overview | 1099](#)
- [Configuration | 1100](#)
- [Verification | 1107](#)

This example shows how to help defend ingress interfaces against denial-of-service (DoS) and distributed denial-of-service (DDoS) attacks by configuring unicast RPF on a customer-edge interface to filter incoming traffic.

### Requirements

No special configuration beyond device initialization is required.

### Overview

In this example, Device A is using OSPF to advertise a prefix for the link that connects to Device D. Device B has unicast RPF configured. OSPF is enabled on the links between Device B and Device C and the links between Device A and Device C, but not on the links between Device A and Device B. Therefore, Device B learns about the route to Device D through Device C.


If ingress filtering is used in an environment where DHCP or BOOTP is used, it should be ensured that the packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255 are allowed to reach the relay agent in routers when appropriate.

This example also includes a fail filter. When a packet fails the unicast RPF check, the fail filter is evaluated to determine if the packet should be accepted anyway. The fail filter in this example allows Device B's interfaces to accept Dynamic Host Configuration Protocol (DHCP) packets. The filter accepts all packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255.

[Figure 88 on page 1100](#) shows the sample network.



Figure 88: Unicast RPF Sample Topoolgy

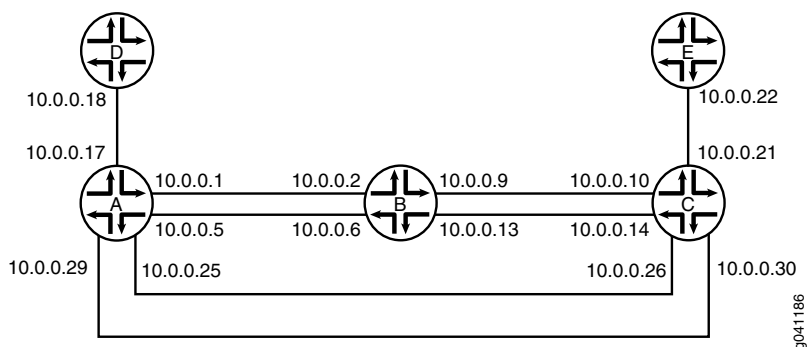

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device A

```
set interfaces fe-1/2/0 unit 1 family inet address 10.0.0.1/30
set interfaces fe-0/0/2 unit 5 family inet address 10.0.0.5/30
set interfaces fe-0/0/1 unit 17 family inet address 10.0.0.17/30
set interfaces fe-0/1/1 unit 25 family inet address 10.0.0.25/30
set interfaces fe-1/1/1 unit 29 family inet address 10.0.0.29/30
set protocols ospf export send-direct
set protocols ospf area 0.0.0.0 interface fe-0/1/1.25
set protocols ospf area 0.0.0.0 interface fe-1/1/1.29
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct from route-filter 10.0.0.16/30 exact
set policy-options policy-statement send-direct then accept
```

#### Device B

```
set interfaces fe-1/2/0 unit 2 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-1/2/0 unit 2 family inet address 10.0.0.2/30
set interfaces fe-1/1/1 unit 6 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-1/1/1 unit 6 family inet address 10.0.0.6/30
```



```
set interfaces fe-0/1/1 unit 9 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-0/1/1 unit 9 family inet address 10.0.0.9/30
set interfaces fe-0/1/0 unit 13 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-0/1/0 unit 13 family inet address 10.0.0.13/30
set protocols ospf area 0.0.0.0 interface fe-0/1/1.9
set protocols ospf area 0.0.0.0 interface fe-0/1/0.13
set routing-options forwarding-table unicast-reverse-path active-paths
set firewall filter rpf-special-case-dhcp term allow-dhcp from source-address 0.0.0.0/32
set firewall filter rpf-special-case-dhcp term allow-dhcp from destination-address 255.255.255.255/32
set firewall filter rpf-special-case-dhcp term allow-dhcp then count rpf-dhcp-traffic
set firewall filter rpf-special-case-dhcp term allow-dhcp then accept
set firewall filter rpf-special-case-dhcp term default then log
set firewall filter rpf-special-case-dhcp term default then reject
```

#### Device C

```
set interfaces fe-1/2/0 unit 10 family inet address 10.0.0.10/30
set interfaces fe-0/0/2 unit 14 family inet address 10.0.0.14/30
set interfaces fe-1/0/2 unit 21 family inet address 10.0.0.21/30
set interfaces fe-1/2/2 unit 26 family inet address 10.0.0.26/30
set interfaces fe-1/2/1 unit 30 family inet address 10.0.0.30/30
set protocols ospf area 0.0.0.0 interface fe-1/2/0.10
set protocols ospf area 0.0.0.0 interface fe-0/0/2.14
set protocols ospf area 0.0.0.0 interface fe-1/2/2.26
set protocols ospf area 0.0.0.0 interface fe-1/2/1.30
```

#### Device D

```
set interfaces fe-1/2/0 unit 18 family inet address 10.0.0.18/30
```

#### Device E

```
set interfaces fe-1/2/0 unit 22 family inet address 10.0.0.22/30
```



## Configuring Device A

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device A:

1. Configure the interfaces.

```
[edit interfaces]
user@A# set fe-1/2/0 unit 1 family inet address 10.0.0.1/30
user@A# set fe-0/0/2 unit 5 family inet address 10.0.0.5/30
user@A# set fe-0/0/1 unit 17 family inet address 10.0.0.17/30
user@A# set fe-0/1/1 unit 25 family inet address 10.0.0.25/30
user@A# set fe-1/1/1 unit 29 family inet address 10.0.0.29/30
```

2. Configure OSPF.

```
[edit protocols ospf]
user@A# set export send-direct
user@A# set area 0.0.0.0 interface fe-0/1/1.25
user@A# set area 0.0.0.0 interface fe-1/1/1.29
```

3. Configure the routing policy.

```
[edit policy-options policy-statement send-direct]
user@A# set from protocol direct
user@A# set from route-filter 10.0.0.16/30 exact
user@A# set then accept
```

4. If you are done configuring Device A, commit the configuration.

```
[edit]
user@A# commit
```

## Configuring Device B

### Step-by-Step Procedure



The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device B:

1. Configure the interfaces.

```
[edit interfaces]
user@B# set fe-1/2/0 unit 2 family inet address 10.0.0.2/30
user@B# set fe-1/1/1 unit 6 family inet address 10.0.0.6/30
user@B# set fe-0/1/1 unit 9 family inet address 10.0.0.9/30
user@B# set fe-0/1/0 unit 13 family inet address 10.0.0.13/30
```

2. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@B# set interface fe-0/1/1.9
user@B# set interface fe-0/1/0.13
```

3. Configure unicast RPF, and apply the optional fail filter.

```
[edit interfaces]
user@B# set fe-1/2/0 unit 2 family inet rpf-check fail-filter rpf-special-case-dhcp
user@B# set fe-1/1/1 unit 6 family inet rpf-check fail-filter rpf-special-case-dhcp
user@B# set fe-0/1/1 unit 9 family inet rpf-check fail-filter rpf-special-case-dhcp
user@B# set fe-0/1/0 unit 13 family inet rpf-check fail-filter rpf-special-case-dhcp
```

4. (Optional) Configure the fail filter that gets evaluated if a packet fails the RPF check.

```
[edit firewall filter rpf-special-case-dhcp]
user@B# set term allow-dhcp from source-address 0.0.0.0/32
user@B# set term allow-dhcp from destination-address 255.255.255.255/32
user@B# set term allow-dhcp then count rpf-dhcp-traffic
user@B# set term allow-dhcp then accept
user@B# set term default then log
user@B# set term default then reject
```

5. (Optional) Configure only active paths to be considered in the RPF check.

This is the default behavior.



```
[edit routing-options forwarding-table]
user@B# set unicast-reverse-path active-paths
```

6. If you are done configuring Device B, commit the configuration.

```
[edit]
user@B# commit
```

### Results

Confirm your configuration by issuing the **show firewall**, **show interfaces**, **show protocols**, **show routing-options**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

### Device A

```
user@A# show interfaces
fe-1/2/0 {
  unit 1 {
    family inet {
      address 10.0.0.1/30;
    }
  }
}
fe-0/0/2 {
  unit 5 {
    family inet {
      address 10.0.0.5/30;
    }
  }
}
fe-0/0/1 {
  unit 17 {
    family inet {
      address 10.0.0.17/30;
    }
  }
}
fe-0/1/1 {
  unit 25 {
```



```

        family inet {
            address 10.0.0.25/30;
        }
    }
}
fe-1/1/1 {
    unit 29 {
        family inet {
            address 10.0.0.29/30;
        }
    }
}

```

user@A# **show protocols**

```

ospf {
    export send-direct;
    area 0.0.0.0 {
        interface fe-0/1/1.25;
        interface fe-1/1/1.29;
    }
}

```

user@A# **show policy-options**

```

policy-statement send-direct {
    from {
        protocol direct;
        route-filter 10.0.0.16/30 exact;
    }
    then accept;
}

```

## Device B

user@B# **show firewall**

```

filter rpf-special-case-dhcp {
    term allow-dhcp {
        from {
            source-address {

```



```

        0.0.0.0/32;
    }
    destination-address {
        255.255.255.255/32;
    }
}
then {
    count rpf-dhcp-traffic;
    accept;
}
}
term default {
    then {
        log;
        reject;
    }
}
}
}
user@B# show interfaces
fe-1/2/0 {
    unit 2 {
        family inet {
            rpf-check fail-filter rpf-special-case-dhcp;
            address 10.0.0.2/30;
        }
    }
}
fe-1/1/1 {
    unit 6 {
        family inet {
            rpf-check fail-filter rpf-special-case-dhcp;
            address 10.0.0.6/30;
        }
    }
}
fe-0/1/1 {
    unit 9 {
        family inet {
            rpf-check fail-filter rpf-special-case-dhcp;
            address 10.0.0.9/30;
        }
    }
}

```



```

    }
    fe-0/1/0 {
        unit 13 {
            family inet {
                rpf-check fail-filter rpf-special-case-dhcp;
                address 10.0.0.13/30;
            }
        }
    }
}

```

```

user@B# show protocols
ospf {
    area 0.0.0.0 {
        interface fe-0/1/1.9;
        interface fe-0/1/0.13;
    }
}

```

```

user@B# show routing-options
forwarding-table {
    unicast-reverse-path active-paths;
}

```

Enter the configurations on Device C, Device D, and Device E, as shown in [“CLI Quick Configuration” on page 288](#).

## Verification

### IN THIS SECTION

- [Confirm That Unicast RPF Is Enabled | 1108](#)
- [Confirm That the Source Addresses Are Blocked | 1108](#)
- [Confirm That the Source Addresses Are Unblocked | 1109](#)

Confirm that the configuration is working properly.



### Confirm That Unicast RPF Is Enabled

#### Purpose

Make sure that the interfaces on Device B have unicast RPF enabled.

#### Action

user@B> **show interfaces fe-0/1/0.13 extensive**

```
Logical interface fe-0/1/0.13 (Index 73) (SNMP ifIndex 553) (Generation 208)
  Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
  Traffic statistics:
    Input  bytes :           999390
    Output bytes :          1230122
    Input  packets:           12563
    Output packets:          12613
  Local statistics:
    Input  bytes :           998994
    Output bytes :          1230122
    Input  packets:           12563
    Output packets:          12613
  Transit statistics:
    Input  bytes :             396           0 bps
    Output bytes :              0           0 bps
    Input  packets:             0           0 pps
    Output packets:             0           0 pps
  Protocol inet, MTU: 1500, Generation: 289, Route table: 22
    Flags: Sendbcast-pkt-to-re, uRPF
    RPF Failures: Packets: 0, Bytes: 0
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.0.0.12/30, Local: 10.0.0.13, Broadcast: 10.0.0.15,
  Generation: 241
```

#### Meaning

The **uRPF** flag confirms that unicast RPF is enabled on this interface.

### Confirm That the Source Addresses Are Blocked

#### Purpose

Use the **ping** command to make sure that Device B blocks traffic from unexpected source addresses.

#### Action

From Device A, ping Device B's interfaces, using 10.0.0.17 as the source address.



```
user@A> ping 10.0.0.6 source 10.0.0.17
```

```
PING 10.0.0.6 (10.0.0.6): 56 data bytes
^C
--- 10.0.0.6 ping statistics ---
3 packets transmitted, 0 packets received, 100% packet loss
```

### Meaning

As expected, the ping operation fails.

### Confirm That the Source Addresses Are Unblocked

#### Purpose

Use the **ping** command to make sure that Device B does not block traffic when the RPF check is deactivated.

#### Action

1. Deactivate the RPF check on one of the interfaces.
2. Rerun the ping operation.

```
user@B> deactivate interfaces fe-1/1/1.6 family inet rpf-check
```

```
user@A> ping 10.0.0.6 source 10.0.0.17
```

```
PING 10.0.0.2 (10.0.0.2): 56 data bytes
64 bytes from 10.0.0.2: icmp_seq=0 ttl=63 time=1.316 ms
64 bytes from 10.0.0.2: icmp_seq=1 ttl=63 time=1.263 ms
^C
--- 10.0.0.2 ping statistics ---
2 packets transmitted, 2 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.263/1.289/1.316/0.027 ms
```

### Meaning

As expected, the ping operation succeeds.

## RELATED DOCUMENTATION

*Example: Configuring Unicast RPF (On a Switch)*

*Troubleshooting Unicast RPF*



# Load Balancing in Layer 3 VPNs

## IN THIS SECTION

- [VPN Per-Packet Load Balancing | 1110](#)
- [Load Balancing and IP Header Filtering for Layer 3 VPNs | 1112](#)
- [Layer 3 VPN Load Balancing Overview | 1112](#)
- [Example: Load Balancing Layer 3 VPN Traffic While Simultaneously Using IP Header Filtering | 1113](#)
- [Configuring Protocol-Independent Load Balancing in Layer 3 VPNs | 1132](#)
- [Example: Configuring PIM Join Load Balancing on Next-Generation Multicast VPN | 1136](#)

## VPN Per-Packet Load Balancing

By default, when there are multiple equal-cost paths to the same destination for the active route, the Junos OS software uses a hash algorithm to select one of the next-hop addresses to install in the forwarding table. Whenever the set of next hops for a destination changes, this selection process (using the same hash algorithm) is repeated to choose the best single next-hop address using the same hash algorithm.

Alternatively, you can configure the Junos OS software to spread the VPN traffic across the multiple valid paths between PE devices. This feature is called per-packet load balancing. VPN traffic load balancing is only possible when more than one valid path is available. You can configure Junos OS so that, for the active route, all next-hop addresses for a destination are installed in the forwarding table. In addition to increasing the volume of traffic you can send between VPN devices, you can configure per-packet load balancing to optimize traffic flows across multiple paths.

Traffic is distributed across multiple valid paths by running a hash algorithm on various elements of the route, such as the MPLS label or the destination address. The following tables describe how the load balancing hash algorithm is run on routes at the ingress router and at the transit and egress routers. The route elements used by the hash algorithm vary depending on VPN application. If Junos OS encounters an S-bit set to 1 (indicating the bottom of the stack), it does not apply the hash algorithm any further.



Table 11: Ingress Router Hashing

Application	Ingress Logical Interface	MPLS Labels	Source and Destination MAC Addresses	Reordering and Flow Separation Risk	Disable Control Word	IP (Source/Destination Address and Port, Protocol)
Layer 2 VPNs and Layer 2 Circuits configured with CCC	Yes	Yes	No	Yes (if the data is variable, for example ATM)	Yes	N/A
Layer 2 VPNs and Layer 2 Circuits configured with TCC	Yes	Yes	No	Yes (if the data is variable, for example ATM)	Yes	N/A
Layer 3 VPNs and IPv4 or IPv6 RIBs	Yes	No	No	No	No	Yes
VPLS	Yes	No	Yes	No	No	Yes

Table 12: Transit and Egress Router Hashing

Application	Ingress Logical Interface	MPLS Labels (up to 3 and the S-bit is set to 1)	Reordering and Flow Separation Risk	IP (Source/Destination Address and Port, Protocol)
Layer 2 VPNs and Layer 2 Circuits configured with CCC	Yes	Yes	No	No
Layer 2 VPNs and Layer 2 Circuits configured with TCC	Yes	Yes	No	Yes
Layer 3 VPNs and IPv4 or IPv6 RIBs	Yes	Yes	No	Yes
VPLS	Yes	Yes for known unicast traffic  No for broadcast, unicast unknown, and multicast traffic	No	No



## Load Balancing and IP Header Filtering for Layer 3 VPNs

You can now simultaneously enable both load balancing of traffic across both internal and external BGP paths and filtering of traffic based on the IP header. This enables you to configure filters and policers at the egress PE router for traffic that is simultaneously being load-balanced across both internal and external BGP paths. This feature is available only on the M120 router, M320 router, MX Series routers, and T Series routers.

To enable these features on a Layer 3 VPN routing instance, include the **vpn-unequal-cost equal-external-internal** statement at the **[edit routing-instances routing-instance-name routing-options multipath]** hierarchy level and the **vrf-table-label** statement at the **[edit routing-instances routing-instance-name]** hierarchy level.

If you issue the **show route detail** command, you can discover whether or not a route is being load-balanced (equal-external-internal) and what its interface index is.

If you have also configured fast reroute, please be aware of the following behavior:

- If an IBGP path goes down, it could be replaced by either an active EBGp path or an active IBGP path.
- If an EBGp path goes down, it can only be replaced by another active EBGp path. This prevents the forwarding of core-facing interface traffic to an IBGP destination.

**NOTE:** You can include the **vpn-unequal-cost equal-external-internal** statement and the **l3vpn** statement at the **[edit routing-options forwarding-options chained-composite-next-hop ingress]** hierarchy level simultaneously. However, if you do this, EBGp does not work. This means that when there are both paths with chained nexthops and paths with nonchained nexthops as candidates for EBGp equal-cost multipath (ECMP), the paths using chained nexthops are excluded. In a typical case, the excluded paths are the internal paths.

## Layer 3 VPN Load Balancing Overview

The load balancing feature allows a device to divide incoming and outgoing traffic along multiple paths in order to reduce congestion in the network. Load balancing improves the utilization of various network paths, and provides more effective network bandwidth.

When multiple protocols are in use, the device uses the route preference value (also known as the administrative distance value) to select a route. While using a single routing protocol, the router chooses the path with the lowest cost (or metric) to the destination. If the device receives and installs multiple paths with the same route preference and same cost to a destination, load balancing must be configured.



In a network with both internal and external BGP paths installed among devices in different autonomous systems, BGP selects only a single best path by default, and does not perform load balancing. A Layer 3 VPN with internal and external BGP paths uses the **multipath** statement for protocol-independent load balancing. When you include the **multipath** statement in a routing instance, protocol-independent load balancing is applied to the default routing table for that routing instance. By using the **vpn-unequal-cost** statement, protocol-independent load balancing is applied to VPN routes. By using the **equal-external-internal** statement, protocol-independent load balancing is applied to both internal and external BGP paths and can be configured in conjunction with IP header filtering (enabled with the **vrf-table-label** statement).

## Example: Load Balancing Layer 3 VPN Traffic While Simultaneously Using IP Header Filtering

### IN THIS SECTION

- [Requirements | 1113](#)
- [Overview | 1113](#)
- [Configuration | 1116](#)
- [Verification | 1126](#)

This example shows how to configure load balancing in a Layer 3 VPN (with internal and external BGP paths) while simultaneously using IP header filtering.

### Requirements

This example requires the following hardware and software components:

- M Series Multiservice Edge Routers (M120 and M320 only), MX Series 5G Universal Routing Platforms, T Series Core Routers, or PTX Series Transport Routers.
- Junos OS Release 12.1 or later

### Overview

The following example shows how to configure load balancing while simultaneously using IP header filtering in a Layer 3 VPN.



**NOTE:** This example demonstrates how load balancing and IP header filtering work together. The testing of IP header filtering is out of the scope of this example.

The Junos OS BGP provides a multipath feature that allows load balancing between peers in the same or different autonomous systems (ASs). This example uses the **equal-external-internal** statement at the **[edit routing-instances instance-name routing-options multipath vpn-unequal-cost]** hierarchy level to perform load balancing. The **vrf-table-label** statement is configured at the **[edit routing-instances instance-name]** hierarchy level to enable IP header filtering.

```
[edit]
routing-instances {
  instance-name {
    vrf-table-label;
    routing-options {
      multipath {
        vpn-unequal-cost {
          equal-external-internal;
        }
      }
    }
  }
}
```

**NOTE:** These statements are available only in the context of a routing instance.

In this example, Device CE1 is in AS1 and connected to Device PE1. Devices PE1, PE2, PE3, and P are in AS2. Device CE2 is connected to Devices PE2 and PE3 and is in AS3. Device CE3 is connected to Device PE3 and is in AS4. BGP and MPLS are configured through the network. OSPF is the interior gateway protocol (IGP) that is used in this network.

The configuration for Devices PE1, PE2, and PE3 includes the **equal-external-internal** statement at the **[edit routing-instances instance-name routing-options multipath vpn-unequal-cost]** hierarchy level to enable load balancing in the network. IP header filtering is enabled when the **vrf-table-label** statement is configured at the **[edit routing-instances instance-name]** hierarchy level on the PE devices.

Figure 89 on page 1115 shows the topology used in this example.



Figure 89: Layer 3 VPN Load Balancing Using IP Header Filtering

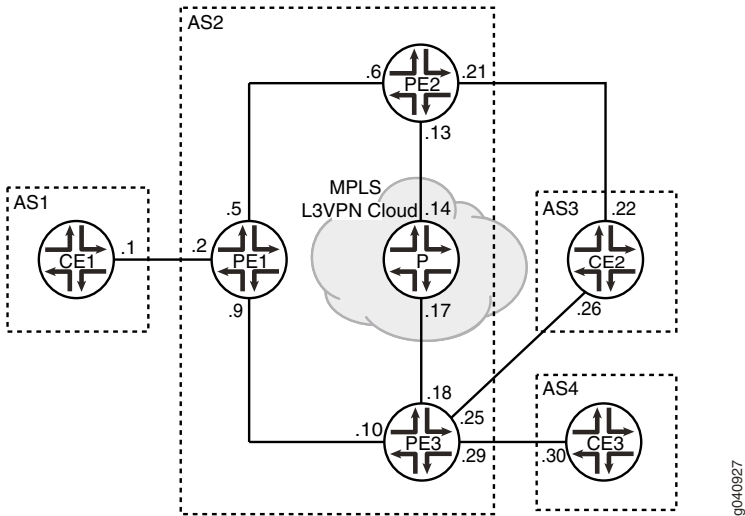


Table 13 on page 1115 shows the list of IP addresses used in this example for quick reference.

Table 13: Device IP Address Quick Reference

Device	AS	Device ID	Device Interface Units	Device Interface Unit IPs
CE1	1	192.0.2.1/24	Unit 1	10.1.1.1/30
PE1	2	192.0.2.2/24	Unit 2	10.1.1.2/30
			Unit 5	10.1.2.5/30
			Unit 9	10.1.3.9/30
PE2	2	192.0.2.3/24	Unit 6	10.1.2.6/30
			Unit 13	10.1.4.13/30
			Unit 21	10.1.6.21/30



Table 13: Device IP Address Quick Reference (*continued*)

Device	AS	Device ID	Device Interface Units	Device Interface Unit IPs
PE3	2	192.0.2.4/24	Unit 10	10.1.3.10/30
			Unit 18	10.1.5.18/30
			Unit 25	10.1.7.25/30
			Unit 29	10.1.8.29/30
P	2	192.0.2.5/24	Unit 14	10.1.4.14/30
			Unit 17	10.1.5.17/30
CE2	3	192.0.2.6/24	Unit 22	10.1.6.22/30
			Unit 26	10.1.7.26/30
CE3	4	192.0.2.7/24	Unit 30	10.1.8.30/30

**NOTE:** This example was tested using logical systems (logical routers). Therefore all the physical interfaces in the example are the same and the configuration is done on separate logical interfaces. In an non-test network, you will use separate physical routers and separate physical interfaces for the connections to other devices.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device CE1

```
set interfaces ge-2/1/10 unit 1 family inet address 10.1.1.1/30
set interfaces ge-2/1/10 unit 1 family mpls
set interfaces ge-2/1/10 unit 1 description toPE1
set interfaces lo0 unit 4 family inet address 192.0.2.1/24
```



```

set routing-options router-id 192.0.2.1
set routing-options autonomous-system 1
set protocols bgp group toPE1 type external
set protocols bgp group toPE1 export send-direct
set protocols bgp group toPE1 peer-as 2
set protocols bgp group toPE1 neighbor 10.1.1.2
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept

```

## Device PE1

```

set interfaces ge-2/1/10 unit 2 family inet address 10.1.1.2/30
set interfaces ge-2/1/10 unit 2 family mpls
set interfaces ge-2/1/10 unit 2 description toCE1
set interfaces ge-2/1/10 unit 5 family inet address 10.1.2.5/30
set interfaces ge-2/1/10 unit 5 family mpls
set interfaces ge-2/1/10 unit 5 description toPE2
set interfaces ge-2/1/10 unit 9 family inet address 10.1.3.9/30
set interfaces ge-2/1/10 unit 9 family mpls
set interfaces ge-2/1/10 unit 9 description toPE3
set interfaces lo0 unit 5 family inet address 192.0.2.2/24
set protocols mpls interface all
set protocols ldp interface all
set protocols ospf area 0.0.0.0 interface lo0.5 passive
set protocols ospf area 0.0.0.0 interface ge-2/1/10.5 metric 10
set protocols ospf area 0.0.0.0 interface ge-2/1/10.9 metric 10
set protocols bgp group toInternal type internal
set protocols bgp group toInternal family inet-vpn unicast
set protocols bgp group toInternal local-address 192.0.2.2
set protocols bgp group toInternal neighbor 192.0.2.3
set protocols bgp group toInternal neighbor 192.0.2.4
set routing-options router-id 192.0.2.2
set routing-options autonomous-system 2
set routing-options forwarding-table export lb
set routing-instances purple instance-type vrf
set routing-instances purple interface ge-2/1/10.2
set routing-instances purple route-distinguisher 2:1
set routing-instances purple vrf-target target:2:1
set routing-instances purple vrf-table-label
set routing-instances purple protocols bgp group toCE1 type external
set routing-instances purple protocols bgp group toCE1 peer-as 1
set routing-instances purple protocols bgp group toCE1 neighbor 10.1.1.1
set routing-instances purple routing-options multipath vpn-unequal-cost equal-external-internal
set policy-options policy-statement lb then load-balance per-packet

```



## Device PE2

```

set interfaces ge-2/1/10 unit 6 family inet address 10.1.2.6/30
set interfaces ge-2/1/10 unit 6 family mpls
set interfaces ge-2/1/10 unit 6 description toPE1
set interfaces ge-2/1/10 unit 13 family inet address 10.1.4.13/30
set interfaces ge-2/1/10 unit 13 family mpls
set interfaces ge-2/1/10 unit 13 description toP
set interfaces ge-2/1/10 unit 21 family inet address 10.1.6.21/30
set interfaces ge-2/1/10 unit 21 family mpls
set interfaces ge-2/1/10 unit 21 description toCE2
set interfaces lo0 unit 6 family inet address 192.0.2.3/24
set protocols mpls interface all
set protocols ldp interface all
set protocols ospf area 0.0.0.0 interface lo0.6 passive
set protocols ospf area 0.0.0.0 interface ge-2/1/10.6 metric 10
set protocols ospf area 0.0.0.0 interface ge-2/1/10.13 metric 5
set protocols bgp group toInternal type internal
set protocols bgp group toInternal family inet-vpn unicast
set protocols bgp group toInternal local-address 192.0.2.3
set protocols bgp group toInternal neighbor 192.0.2.2
set protocols bgp group toInternal neighbor 192.0.2.4
set routing-options router-id 192.0.2.3
set routing-options autonomous-system 2
set routing-options forwarding-table export lb
set routing-instances purple instance-type vrf
set routing-instances purple interface ge-2/1/10.21
set routing-instances purple route-distinguisher 2:1
set routing-instances purple vrf-target target:2:1
set routing-instances purple vrf-table-label
set routing-instances purple protocols bgp group toCE2 type external
set routing-instances purple protocols bgp group toCE2 peer-as 3
set routing-instances purple protocols bgp group toCE2 neighbor 10.1.6.22
set routing-instances purple routing-options multipath vpn-unequal-cost equal-external-internal
set policy-options policy-statement lb then load-balance per-packet

```

## Device PE3

```

set interfaces ge-2/1/10 unit 10 family inet address 10.1.3.10/30
set interfaces ge-2/1/10 unit 10 family mpls
set interfaces ge-2/1/10 unit 10 description toPE1
set interfaces ge-2/1/10 unit 18 family inet address 10.1.5.18/30
set interfaces ge-2/1/10 unit 18 family mpls
set interfaces ge-2/1/10 unit 18 description toP

```



```

set interfaces ge-2/1/10 unit 25 family inet address 10.1.7.25/30
set interfaces ge-2/1/10 unit 25 family mpls
set interfaces ge-2/1/10 unit 25 description toCE2
set interfaces ge-2/1/10 unit 29 family inet address 10.1.8.29/30
set interfaces ge-2/1/10 unit 29 family mpls
set interfaces ge-2/1/10 unit 29 description toCE3
set interfaces lo0 unit 7 family inet address 192.0.2.4/24
set protocols mpls interface all
set protocols ldp interface all
set protocols ospf area 0.0.0.0 interface lo0.7 passive
set protocols ospf area 0.0.0.0 interface ge-2/1/10.10 metric 10
set protocols ospf area 0.0.0.0 interface ge-2/1/10.18 metric 5
set protocols bgp group toInternal type internal
set protocols bgp group toInternal local-address 192.0.2.4
set protocols bgp group toInternal family inet-vpn unicast
set protocols bgp group toInternal family route-target
set protocols bgp group toInternal neighbor 192.0.2.2
set protocols bgp group toInternal neighbor 192.0.2.3
set routing-options router-id 192.0.2.4
set routing-options autonomous-system 2
set routing-options forwarding-table export lb
set routing-instances purple instance-type vrf
set routing-instances purple interface ge-2/1/10.25
set routing-instances purple interface ge-2/1/10.29
set routing-instances purple route-distinguisher 2:1
set routing-instances purple vrf-target target:2:1
set routing-instances purple vrf-table-label
set routing-instances purple protocols bgp group toCE2 type external
set routing-instances purple protocols bgp group toCE2 peer-as 3
set routing-instances purple protocols bgp group toCE2 neighbor 10.1.7.26
set routing-instances purple protocols bgp group toCE3 type external
set routing-instances purple protocols bgp group toCE3 peer-as 4
set routing-instances purple protocols bgp group toCE3 neighbor 10.1.8.30
set routing-instances purple routing-options multipath vpn-unequal-cost equal-external-internal
set policy-options policy-statement lb then load-balance per-packet

```

#### Device P

```

set interfaces ge-2/1/10 unit 14 family inet address 10.1.4.14/30
set interfaces ge-2/1/10 unit 14 family mpls
set interfaces ge-2/1/10 unit 14 description toPE2
set interfaces ge-2/1/10 unit 17 family inet address 10.1.5.17/30
set interfaces ge-2/1/10 unit 17 family mpls
set interfaces ge-2/1/10 unit 17 description toPE3

```



```

set interfaces lo0 unit 8 family inet address 192.0.2.5/24
set protocols mpls interface all
set protocols ldp interface all
set protocols ospf area 0.0.0.0 interface lo0.8 passive
set protocols ospf area 0.0.0.0 interface ge-2/1/10.14 metric 5
set protocols ospf area 0.0.0.0 interface ge-2/1/10.17 metric 5
set routing-options router-id 192.0.2.5
set routing-options autonomous-system 2

```

## Device CE2

```

set interfaces ge-2/1/10 unit 22 family inet address 10.1.6.22/30
set interfaces ge-2/1/10 unit 22 family mpls
set interfaces ge-2/1/10 unit 22 description toPE2
set interfaces ge-2/1/10 unit 26 family inet address 10.1.7.26/30
set interfaces ge-2/1/10 unit 26 family mpls
set interfaces ge-2/1/10 unit 26 description toPE3
set interfaces lo0 unit 6 family inet address 192.0.2.6/24
set routing-options router-id 192.0.2.6
set routing-options autonomous-system 3
set protocols bgp group toAS2 type internal
set protocols bgp group toAS2 export send-direct
set protocols bgp group toAS2 peer-as 2
set protocols bgp group toAS2 neighbor 10.1.6.21
set protocols bgp group toAS2 neighbor 10.1.7.25
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept

```

## Device CE3

```

set interfaces ge-2/1/10 unit 30 family inet address 10.1.8.30/30
set interfaces ge-2/1/10 unit 30 family mpls
set interfaces ge-2/1/10 unit 30 description toPE3
set interfaces lo0 unit 7 family inet address 192.0.2.7/24
set routing-options router-id 192.0.2.7
set routing-options autonomous-system 4
set protocols bgp group toPE3 type internal
set protocols bgp group toPE3 export send-direct
set protocols bgp group toPE3 peer-as 2
set protocols bgp group toPE3 neighbor 10.1.8.29
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct then accept

```



## Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure unequal-cost load balancing across the VPN setup:

1. Configure the router ID on Device CE1, and assign the device to its autonomous system.

```
[edit routing-options]
user@CE1# set router-id 192.0.2.1
user@CE1# set autonomous-system 1
```

Similarly, configure all other devices.

2. Configure BGP groups for traffic through the entire network.
  - a. Configure the BGP group for traffic to and from the MPLS network (CE devices).

```
[edit protocols bgp group toPE1]
user@CE1# set type external
user@CE1# set peer-as 2
user@CE1# set neighbor 10.1.1.2
```

- b. Configure similar BGP groups (**toAS2** and **toPE3**) on Devices CE2 and CE3 by modifying the **peer-as** and **neighbor** statements accordingly.
- c. Configure the BGP group for traffic through the MPLS network (PE devices).

```
[edit protocols bgp group toInternal]
user@PE1# set type internal
user@PE1# set family inet-vpn unicast
user@PE1# set local-address 192.0.2.2
user@PE1# set neighbor 192.0.2.3
user@PE1# set neighbor 192.0.2.4
```

- d. Configure the same BGP group (**toInternal**) on Devices PE2 and PE3 by modifying the **local-address** and **neighbor** statements accordingly.
3. Configure a routing policy for exporting routes to and from the MPLS network (**send-direct** policy) and a policy for load balancing traffic network across the MPLS network (**lb** policy).
    - a. Configure a policy (**send-direct**) for exporting routes from the routing table into BGP on Device CE1.

```
[edit policy-options policy-statement send-direct]
user@CE1# set from protocol direct
```



```
user@CE1# set then accept
```

```
[edit protocols bgp group toPE1]
user@CE1# set export send-direct
```

Similarly, configure the **send-direct** policy on Devices CE2 and CE3.

- b. Configure a policy (**lb**) for exporting routes from the routing table into the forwarding table on Device PE1.

The **lb** policy configures per-packet load balancing, which ensures that all next-hop addresses for a destination are installed in the forwarding table.

```
[edit policy-options policy-statement lb]
user@PE1# set then load-balance per-packet
```

```
[edit routing-options]
user@PE1# set forwarding-table export lb
```

Similarly, configure the **lb** policy on Devices PE2, and PE3.

#### 4. Configure the following:

- a. Configure the routing instance on the PE devices for exporting routes through the autonomous systems.
- b. Include the **equal-external-internal** statement at the **[edit routing-instances instance-name routing-options multipath vpn-unequal-cost]** hierarchy level to enable load balancing in the network.
- c. Include the **vrf-table-label** statement at the **[edit routing-instances instance-name]** hierarchy level for filtering traffic prior to exiting the egress device (Device CE3).

#### Device PE1

```
[edit routing-instances purple]
user@PE1# set instance-type vrf
user@PE1# set interface ge-2/1/10.2
user@PE1# set route-distinguisher 2:1
user@PE1# set vrf-target target:2:1
user@PE1# set vrf-table-label
user@PE1# set protocols bgp group toCE1 type external
user@PE1# set protocols bgp group toCE1 peer-as 1
user@PE1# set protocols bgp group toCE1 neighbor 10.1.1.1
user@PE1# set routing-options multipath vpn-unequal-cost equal-external-internal
```



## Device PE2

```
[edit routing-instances purple]
user@PE2# set instance-type vrf
user@PE2# set interface ge-2/1/10.21
user@PE2# set route-distinguisher 2:1
user@PE2# set vrf-target target:2:1
user@PE2# set vrf-table-label
user@PE2# set protocols bgp group toCE2 type external
user@PE2# set protocols bgp group toCE2 peer-as 3
user@PE2# set protocols bgp group toCE2 neighbor 10.1.6.22
user@PE2# set routing-options multipath vpn-unequal-cost equal-external-internal
```

## Device PE3

```
[edit routing-instances purple]
user@PE3# set instance-type vrf
user@PE3# set interface ge-2/1/10.25
user@PE3# set interface ge-2/1/10.29
user@PE3# set route-distinguisher 2:1
user@PE3# set vrf-target target:2:1
user@PE3# set vrf-table-label
user@PE3# set protocols bgp group toCE2 type external
user@PE3# set protocols bgp group toCE2 peer-as 3
user@PE3# set protocols bgp group toCE2 neighbor 10.1.7.26
user@PE3# set protocols bgp group toCE3 type external
user@PE3# set protocols bgp group toCE3 peer-as 4
user@PE3# set protocols bgp group toCE3 neighbor 10.1.8.30
user@PE3# set routing-options multipath vpn-unequal-cost equal-external-internal
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show policy-options**, **show routing-options**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE3# show interfaces
ge-2/1/10 {
  unit 10 {
    description toPE1;
    family inet {
      address 10.1.3.10/30;
    }
    family mpls
```



```

}
unit 18 {
    description toP;
    family inet {
        address 10.1.5.18/30;
    }
    family mpls
}
unit 25 {
    description toCE2;
    family inet {
        address 10.1.7.25/30;
    }
    family mpls
}
unit 29 {
    description toCE3;
    family inet {
        address 10.1.8.29/30;
    }
    family mpls
}
}
lo0 {
    unit 7 {
        family inet {
            address 192.0.2.4/24;
        }
    }
}
}

```

```

user@PE3# show protocols
mpls {
    interface all;
}
bgp {
    group toInternal {
        type internal;
        local-address 192.0.2.4;
        family inet {
            unicast;
        }
        family inet-vpn {
            unicast;
        }
    }
}

```



```

    }
    family route-target;
    neighbor 192.0.2.2;
    neighbor 192.0.2.3;
  }
}
ospf {
  area 0.0.0.0 {
    interface lo0.7 {
      passive;
    }
    interface ge-2/1/10.10 {
      metric 10;
    }
    interface ge-2/1/10.18 {
      metric 5;
    }
  }
}
ldp {
  interface all;
}

```

```

user@PE3# show policy-options
policy-statement lb {
  then {
    load-balance per-packet;
  }
}

```

```

user@PE3# show routing-instances
purple {
  instance-type vrf;
  interface ge-2/1/10.25;
  interface ge-2/1/10.29;
  route-distinguisher 2:1;
  vrf-target target:2:1;
  vrf-table-label;
  routing-options {
    multipath {
      vpn-unequal-cost equal-external-internal;
    }
  }
}

```



```

protocols {
  bgp {
    group toCE2 {
      type external;
      peer-as 3;
      neighbor 10.1.7.26;
    }
    group toCE3 {
      type external;
      peer-as 4;
      neighbor 10.1.8.30;
    }
  }
}

```

```

user@PE3# show routing-options
router-id 192.0.2.4;
autonomous-system 2;
forwarding-table {
  export lb;
}

```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

### IN THIS SECTION

- [Verifying BGP | 1126](#)
- [Verifying Load Balancing | 1128](#)
- [Verifying Load Balancing While Using IP Header Filtering | 1131](#)

Confirm that the configuration is working properly.

### Verifying BGP

#### Purpose

Verify that BGP is working.



## Action

From operational mode, run the **show route protocol bgp** command.

```
user@PE3> show route protocol bgp
```

```
inet.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

purple.inet.0: 9 destinations, 14 routes (9 active, 0 holddown, 0 hidden)
@ = Routing Use Only, # = Forwarding Use Only
+ = Active Route, - = Last Active, * = Both

192.0.2.1/24      *[BGP/170] 04:47:14, localpref 100, from 192.0.2.2
                  AS path: 1 I
                  > to 10.1.3.9 via ge-2/1/10.10, Push 16
192.0.2.6/24      @[BGP/170] 00:13:28, localpref 100
                  AS path: 3 I
                  > to 10.1.7.26 via ge-2/1/10.25
                  [BGP/170] 00:10:36, localpref 100, from 192.0.2.3
                  AS path: 3 I
                  > to 10.1.5.17 via ge-2/1/10.18, Push 16, Push 299776(top)
192.0.2.7/24      *[BGP/170] 00:10:56, localpref 100
                  AS path: 4 I
                  > to 10.1.8.30 via ge-2/1/10.29
10.1.1.0/30       *[BGP/170] 04:47:14, localpref 100, from 192.0.2.2
                  AS path: I
                  > to 10.1.3.9 via ge-2/1/10.10, Push 16
10.1.6.20/30      *[BGP/170] 04:47:03, localpref 100, from 192.0.2.3
                  AS path: I
                  > to 10.1.5.17 via ge-2/1/10.18, Push 16, Push 299776(top)
                  [BGP/170] 00:13:28, localpref 100
                  AS path: 3 I
                  > to 10.1.7.26 via ge-2/1/10.25
10.1.7.24/30      [BGP/170] 00:13:28, localpref 100
                  AS path: 3 I
                  > to 10.1.7.26 via ge-2/1/10.25
10.1.8.28/30      [BGP/170] 00:10:56, localpref 100
                  AS path: 4 I
                  > to 10.1.8.30 via ge-2/1/10.29

mpls.0: 9 destinations, 9 routes (9 active, 0 holddown, 0 hidden)
```



```

bgp.l3vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2:1:192.0.2.1/24
    *[BGP/170] 04:47:14, localpref 100, from 192.0.2.2
        AS path: 1 I
        > to 10.1.3.9 via ge-2/1/10.10, Push 16
2:1:192.0.2.6/24
    *[BGP/170] 00:10:36, localpref 100, from 192.0.2.3
        AS path: 3 I
        > to 10.1.5.17 via ge-2/1/10.18, Push 16, Push 299776(top)
2:1:10.1.1.0/30
    *[BGP/170] 04:47:14, localpref 100, from 192.0.2.2
        AS path: I
        > to 10.1.3.9 via ge-2/1/10.10, Push 16
2:1:10.1.6.20/30
    *[BGP/170] 04:47:03, localpref 100, from 192.0.2.3

```

The output lists the BGP routes installed into the routing table. The lines of output that start with **192.0.2.1/24**, **10.1.1.0/30**, and **2:1:192.0.2.1/24** show the BGP routes to Device CE1, which is in AS1. The lines of output that start with **192.0.2.6/24**, **2:1:192.0.2.6/24**, and **2:1:10.1.6.20/30** show the BGP routes to Device CE2, which is in AS3. The line of output that starts with **192.0.2.7/24** shows the BGP route to Device CE3, which is in AS4.

### Meaning

BGP is functional in the network.

### Verifying Load Balancing

#### Purpose

Verify that forwarding is taking place in both directions by checking:

- If both next hops are installed in the forwarding table for a route.
- If external BGP routes are installed in the forwarding table for a route.

#### Action

From operational mode, run the **show route forwarding-table** and **show route forwarding-table destination <destination IP>** commands.

```
user@PE3> show route forwarding-table
```



Router: PE3

Routing table: default.inet

Internet:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	593	1	
0.0.0.0/32	perm	0		dscd	579	1	
192.0.2.2/24	user	1	10.1.3.9	ucst	999	8	ge-2/1/10.10
192.0.2.3/24	user	1	10.1.5.17	ucst	1243	12	ge-2/1/10.18
192.0.2.4/24	intf	0	192.0.2.4	loc1	895	1	
192.0.2.5/24	user	1	10.1.5.17	ucst	1243	12	ge-2/1/10.18
10.1.2.4/30	user	0		ulst	1048580	2	
			10.1.3.9	ucst	999	8	ge-2/1/10.10
			10.1.5.17	ucst	1243	12	ge-2/1/10.18
10.1.3.8/30	intf	0		rslv	899	1	ge-2/1/10.10
10.1.3.8/32	dest	0	10.1.3.8	recv	897	1	ge-2/1/10.10
10.1.3.9/32	dest	0	0.6.80.3.0.21.59.d.c5.d9.0.21.59.d.c5.da.8.0	ucst	999	8	ge-2/1/10.10
10.1.3.10/32	intf	0	10.1.3.10	loc1	898	2	
10.1.3.10/32	dest	0	10.1.3.10	loc1	898	2	
10.1.3.11/32	dest	0	10.1.3.11	bcst	896	1	ge-2/1/10.10
10.1.4.12/30	user	0	10.1.5.17	ucst	1243	12	ge-2/1/10.18
10.1.5.16/30	intf	0		rslv	903	1	ge-2/1/10.18
10.1.5.16/32	dest	0	10.1.5.16	recv	901	1	ge-2/1/10.18
10.1.5.17/32	dest	0	0.e.80.3.0.21.59.d.c5.d9.0.21.59.d.c5.da.8.0	ucst	1243	12	ge-2/1/10.18
10.1.5.18/32	intf	0	10.1.5.18	loc1	902	2	
10.1.5.18/32	dest	0	10.1.5.18	loc1	902	2	
10.1.5.19/32	dest	0	10.1.5.19	bcst	900	1	ge-2/1/10.18
203.0.113.0/24	perm	2		mdsc	592	1	
203.0.113.1/24	perm	0	203.0.0.1	mcst	576	3	
203.0.113.5/24	user	1	203.0.0.5	mcst	576	3	
255.255.255.255/32	perm	0		bcst	577	1	

Router: PE3

Routing table: \_\_master.anon\_\_.inet

Internet:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	909	1	
0.0.0.0/32	perm	0		dscd	907	1	
203.0.113.0/24	perm	0		mdsc	908	1	
203.0.113.1/24	perm	0	203.0.0.1	mcst	904	1	
255.255.255.255/32	perm	0		bcst	905	1	



```

Router: PE3
Routing table: purple.inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0          rjct  918    1
0.0.0.0/32       perm  0          dscd  916    1
192.0.2.1/24     user  0          indr 1048576 3
                  10.1.3.9   Push 16 1187 2 ge-2/1/10.10
192.0.2.6/24     user  0          ulst 1048587 2
                  10.1.7.26  ucst 1239 4 ge-2/1/10.25
                  10.1.5.17  indr 1048579 3
                  10.1.5.17  Push 16, Push 299776(top) 1306
                  2 ge-2/1/10.18
192.0.2.7/24     user  0 10.1.8.30   ucst 1299 4 ge-2/1/10.29
299808(S=0)      user  0 10.1.5.17   Pop  1304 2 ge-2/1/10.18
...

```

In the **default.inet** routing table, which is the forwarding table, the line of output that starts with **10.1.2.4/30** shows that for a route to Device PE2 in the same AS, two next hops are installed in the table: **10.1.3.9** and **10.1.5.17**.

In the **purple.inet** routing table, which is the external routing table, the line of output that starts with **192.0.2.6/24** shows that for a route to Device CE2 in AS3, an internal next hop of **10.1.5.17** and an external next hop of **10.1.7.26** are installed in the table. This indicates that both internal and external BGP routes are operational in the network.

user@PE3> **show route forwarding-table destination 10.1.2.6**

```

Router: PE3
Routing table: default.inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
10.1.2.4/30      user  0          10.1.3.9   ucst  999    8 ge-2/1/10.10
                  10.1.5.17  ucst 1243 12 ge-2/1/10.18

Router: PE3
Routing table: __master.anon__.inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0          rjct  909    1

```



```

Router: PE3
Routing table: purple.inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0               rjct   918   1

```

The line of output that starts with **10.1.2.4/30** shows that for a route from Device PE3 to Device PE2 in the same AS, two next hops are installed in the table: **10.1.3.9** through the **ge-2/1/10.10** interface, and **10.1.5.17** through the **ge-2/1/10.18** interface.

### Meaning

Multiple next hops for a route, including external BGP routes, are installed in the forwarding tables.

### Verifying Load Balancing While Using IP Header Filtering

#### Purpose

Verify that filtered traffic reaches the egress CE devices after load balancing has been configured on the PE devices.

#### Action

Configure a firewall filter on Device PE3 on the interface connecting to Device CE2.

```

[edit firewall family inet filter filterPE3 term a]
user@PE3# set from protocol tcp
user@PE3# set from source-port-except bgp
user@PE3# set from destination-port-except bgp
user@PE3# set then count filterPE3
user@PE3# set then accept

```

```

[edit firewall family inet filter filterPE3 term b]
user@PE3# set then accept

```

```

[edit interfaces ge-2/1/10 unit 25]
user@PE3# set family inet filter output filterPE3

```

Similarly, configure a firewall filter on Device PE3 on the interface facing Device CE3, and another on Device PE2 on the interface facing Device CE2.

Count the packets exiting the egress interfaces on Devices PE2 and PE3 by using the **show firewall filter <filter name> counter <counter name>** operational mode command. The output confirms if load balancing takes place with IP header filtering configured (enabled by the **vrf-table-label** statement). If all transmitted



packets have been load-balanced between the paths PE3->CE2, PE3->CE3, and PE2->CE2, then it means that the IP header filtering feature works in a load-balanced Layer 3 network.

You can clear the counter by using the **clear firewall filter <filter name> counter <counter name>** operational mode command.

### Meaning

Load balancing takes place with IP header filtering configured.

### SEE ALSO

| *Example: Load Balancing BGP Traffic*

## Configuring Protocol-Independent Load Balancing in Layer 3 VPNs

### IN THIS SECTION

- [Configuring Load Balancing for Layer 3 VPNs | 1133](#)
- [Configuring Load Balancing and Routing Policies | 1134](#)

Protocol-independent load balancing for Layer 3 VPNs allows the forwarding next hops of both the active route and alternative paths to be used for load balancing. Protocol-independent load balancing works in conjunction with Layer 3 VPNs. It supports the load balancing of VPN routes independently of the assigned route distinguisher. When protocol-independent load balancing is enabled, both routes to other PE routers and routes to directly connected CE routers are load-balanced.

When load-balancing information is created for a given route, the active path is marked as **Routing Use Only** in the output of the **show route table** command.

The following sections describe how to configure protocol-independent load balancing and how this configuration can affect routing policies:



## Configuring Load Balancing for Layer 3 VPNs

The configuration of protocol-independent load balancing for Layer 3 VPNs is a little different for IPv4 versus IPv6:

- IPv4—You only need to configure the **multipath** statement at either the [edit routing-instances *routing-instance-name* routing-options] hierarchy level or the [edit routing-instances *routing-instance-name* routing-options rib *routing-table-name*] hierarchy level.
- IPv6—You need to configure the **multipath** statement at both the [edit routing-instances *routing-instance-name* routing-options] hierarchy level and the [edit routing-instances *routing-instance-name* routing-options rib *routing-table-name*] hierarchy level.

**NOTE:** You cannot configure the **multipath** statement and sub-statements at the same time that you have configured the **l3vpn** statement.

To configure protocol-independent load balancing for Layer 3 VPNs, include the **multipath** statement:

```
multipath {
  vpn-unequal-cost equal-external-internal;
}
```

When you include the **multipath** statement at the following hierarchy levels, protocol-independent load balancing is applied to the default routing table for that routing instance (*routing-instance-name.inet.0*):

- [edit routing-instances *routing-instance-name* routing-options]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* routing-options]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

When you include the **multipath** statement at the following hierarchy levels, protocol-independent load balancing is applied to the specified routing table:

- [edit routing-instances *routing-instance-name* routing-options rib *routing-table-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* routing-options rib *routing-table-name*]

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.



The **vpn-unequal-cost** statement is optional:

- When you include it, protocol-independent load balancing is applied to VPN routes that are equal until the IGP metric with regard to route selection.
- When you do not include it, protocol-independent load balancing is applied to VPN routes that are equal until the router identifier with regard to route selection.

**NOTE:** The **vpn-unequal-cost** statement is not applicable in ACX Series routers.

The **equal-external-internal** statement is also optional. When you include it, protocol-independent load balancing is applied to both internal and external BGP paths. You can configure this in conjunction with egress IP header filtering (enabled with the **vrf-table-label** statement). For more information, see [“Load Balancing and IP Header Filtering for Layer 3 VPNs” on page 1112](#).

**NOTE:** You can include the **vpn-unequal-cost equal-external-internal** statement and the **l3vpn** statement at the **[edit routing-options forwarding-options chained-composite-next-hop ingress]** hierarchy level simultaneously. However, if you do this, EBGp does not work. This means that when there are both paths with chained next hops and paths with nonchained next hops as candidates for EBGp equal-cost multipath (ECMP), the paths using chained next hops are excluded. In a typical case, the excluded paths are the internal paths.

## Configuring Load Balancing and Routing Policies

If you enable protocol-independent load balancing for Layer 3 VPNs by including the **multipath** statement and if you also include the **load-balance per-packet** statement in the routing policy configuration, packets are not load-balanced.

For example, a PE router has the following VRF routing instance configured:

```
[edit routing-instances]
load-balance-example {
  instance-type vrf;
  interface fe-0/1/1.0;
  interface fe-0/1/1.1;
  route-distinguisher 2222:2;
  vrf-target target:2222:2;
  routing-options {
    multipath;
  }
}
```



```

protocols {
  bgp {
    group group-example {
      import import-policy;
      family inet {
        unicast;
      }
      export export-policy;
      peer-as 4444;
      local-as 3333;
      multipath;
      as-override;
      neighbor 10.12.33.22;
    }
  }
}

```

The PE router also has the following policy statement configured:

```

[edit policy-options policy-statement export-policy]
from protocol bgp;
then {
  load-balance per-packet;
}

```

When you include the **multipath** statement in the VRF routing instance configuration, the paths are no longer marked as BGP paths but are instead marked as multipath paths. Packets from the PE router are not load-balanced.

To ensure that VPN load-balancing functions as expected, do not include the **from protocol** statement in the policy statement configuration. The policy statement should be configured as follows:

```

[edit policy-options policy-statement export-policy]
then {
  load-balance per-packet;
}

```

For more information about how to configure per-packet load balancing, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.



## Example: Configuring PIM Join Load Balancing on Next-Generation Multicast VPN

### IN THIS SECTION

- [Requirements | 1136](#)
- [Overview and Topology | 1137](#)
- [Configuration | 1139](#)
- [Verification | 1144](#)

This example shows how to configure multipath routing for external and internal virtual private network (VPN) routes with unequal interior gateway protocol (IGP) metrics and Protocol Independent Multicast (PIM) join load balancing on provider edge (PE) routers running next-generation multicast VPN (MVPN). This feature allows customer PIM (C-PIM) join messages to be load-balanced across available internal BGP (IBGP) upstream paths when there is no external BGP (EBGP) path present, and across available EBGP upstream paths when external and internal BGP (EIBGP) paths are present toward the source or rendezvous point (RP).

### Requirements

This example uses the following hardware and software components:

- Three routers that can be a combination of M Series, MX Series, or T Series routers.
- Junos OS Release 12.1 running on all the devices.

Before you begin:

1. Configure the device interfaces.
2. Configure the following routing protocols on all PE routers:
  - OSPF
  - MPLS
  - LDP
  - PIM
  - BGP
3. Configure a multicast VPN.



## Overview and Topology

Junos OS Release 12.1 and later support multipath configuration along with PIM join load balancing. This allows C-PIM join messages to be load-balanced across all available IBGP paths when there are only IBGP paths present, and across all available upstream EBGP paths when EIBGP paths are present toward the source (or RP). Unlike Draft-Rosen MVPN, next-generation MVPN does not utilize unequal EIBGP paths to send C-PIM join messages. This feature is applicable to IPv4 C-PIM join messages.

By default, only one active IBGP path is used to send the C-PIM join messages for a PE router having only IBGP paths toward the source (or RP). When there are EIBGP upstream paths present, only one active EBGP path is used to send the join messages.

In a next-generation MVPN, C-PIM join messages are translated into (or encoded as) BGP customer multicast (C-multicast) MVPN routes and advertised with the BGP MCAST-VPN address family toward the sender PE routers. A PE router originates a C-multicast MVPN route in response to receiving a C-PIM join message through its PE router to customer edge (CE) router interface. The two types of C-multicast MVPN routes are:

- Shared tree join route (C-\*, C-G)
  - Originated by receiver PE routers.
  - Originated when a PE router receives a shared tree C-PIM join message through its PE-CE router interface.
- Source tree join route (C-S, C-G)
  - Originated by receiver PE routers.
  - Originated when a PE router receives a source tree C-PIM join message (C-S, C-G), or originated by the PE router that already has a shared tree join route and receives a source active autodiscovery route.

The upstream path in a next-generation MVPN is selected using the Bytewise-XOR hash algorithm as specified in Internet draft draft-ietf-l3vpn-2547bis-mcast, *Multicast in MPLS/BGP IP VPNs*. The hash algorithm is performed as follows:

1. The PE routers in the candidate set are numbered from lower to higher IP address, starting from 0.
2. A bitwise exclusive-or of all the bytes is performed on the C-root (source) and the C-G (group) address.
3. The result is taken modulo  $n$ , where  $n$  is the number of PE routers in the candidate set. The result is  $N$ .
4.  $N$  represents the IP address of the upstream PE router as numbered in Step 1.



During load balancing, if a PE router with one or more upstream IBGP paths toward the source (or RP) discovers a new IBGP path toward the same source (or RP), the C-PIM join messages distributed among previously existing IBGP paths get redistributed due to the change in the candidate PE router set.

In this example, PE1, PE2, and PE3 are the PE routers that have the multipath PIM join load-balancing feature configured. Router PE1 has two EBGp paths and one IBGP upstream path, PE2 has one EBGp path and one IBGP upstream path, and PE3 has two IBGP upstream paths toward the Source. Router CE4 is the customer edge (CE) router attached to PE3. Source and Receiver are the Free BSD hosts.

On PE routers that have EIBGP paths toward the source (or RP), such as PE1 and PE2, PIM join load balancing is performed as follows:

1. The C-PIM join messages are sent using EBGp paths only. IBGP paths are not used to propagate the join messages.

In [Figure 90 on page 1139](#), the PE1 router distributes the join messages between the two EBGp paths to the CE1 router, and PE2 uses the EBGp path to CE1 to send the join messages.

2. If a PE router loses one or more EBGp paths toward the source (or RP), the RPF neighbor on the multicast tunnel interface is selected based on a hash mechanism.

On discovering the first EBGp path, only new join messages get load-balanced across available EBGp paths, whereas the existing join messages on the multicast tunnel interface are not redistributed.

If the EBGp path from the PE2 router to the CE1 router goes down, PE2 sends the join messages to PE1 using the IBGP path. When the EBGp path to CE1 is restored, only new join messages that arrive on PE2 use the restored EBGp path, whereas join messages already sent on the IBGP path are not redistributed.

On PE routers that have only IBGP paths toward the source (or RP), such as the PE3 router, PIM join load balancing is performed as follows:

1. The C-PIM join messages from CE routers get load-balanced only as BGP C-multicast data messages among IBGP paths.

In [Figure 90 on page 1139](#), assuming that the CE4 host is interested in receiving traffic from the Source, and CE4 initiates source join messages for different groups (Group 1 [C-S,C-G1] and Group 2 [C-S,C-G2]), the source join messages arrive on the PE3 router.


Router PE3 then uses the Bitwise-XOR hash algorithm to select the upstream PE router to send the C-multicast data for each group. The algorithm first numbers the upstream PE routers from lower to higher IP address starting from 0.

Assuming that Router PE1 router is numbered 0 and Router PE2 is 1, and the hash result for Group 1 and Group 2 join messages is 0 and 1, respectively, the PE3 router selects PE1 as the upstream PE router to send Group 1 join messages, and PE2 as the upstream PE router to send the Group 2 join messages to the Source.

2. The shared join messages for different groups [C-\*,C-G] are also treated in a similar way to reach the destination.



Figure 90: PIM Join Load Balancing on Next-Generation MVPN

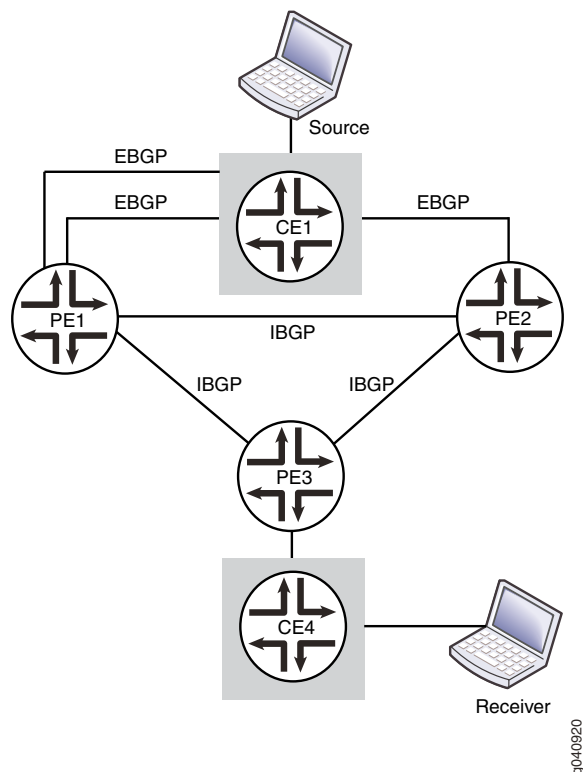

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

#### PE1

```
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-3/0/1.0
set routing-instances vpn1 interface ge-3/3/2.0
set routing-instances vpn1 interface lo0.1
set routing-instances vpn1 route-distinguisher 1:1
set routing-instances vpn1 provider-tunnel rsvp-te label-switched-path-template default-template
set routing-instances vpn1 vrf-target target:1:1
```



```

set routing-instances vpn1 vrf-table-label
set routing-instances vpn1 routing-options multipath vpn-unequal-cost equal-external-internal
set routing-instances vpn1 protocols bgp export direct
set routing-instances vpn1 protocols bgp group bgp type external
set routing-instances vpn1 protocols bgp group bgp local-address 10.40.10.1
set routing-instances vpn1 protocols bgp group bgp family inet unicast
set routing-instances vpn1 protocols bgp group bgp neighbor 10.40.10.2 peer-as 3
set routing-instances vpn1 protocols bgp group bgp1 type external
set routing-instances vpn1 protocols bgp group bgp1 local-address 10.10.10.1
set routing-instances vpn1 protocols bgp group bgp1 family inet unicast
set routing-instances vpn1 protocols bgp group bgp1 neighbor 10.10.10.2 peer-as 3
set routing-instances vpn1 protocols pim rp static address 10.255.10.119
set routing-instances vpn1 protocols pim interface all
set routing-instances vpn1 protocols pim join-load-balance
set routing-instances vpn1 protocols mvpn mvpn-mode rpt-spt
set routing-instances vpn1 protocols mvpn mvpn-join-load-balance bitwise-xor-hash

```

## PE2

```

set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-1/0/9.0
set routing-instances vpn1 interface lo0.1
set routing-instances vpn1 route-distinguisher 2:2
set routing-instances vpn1 provider-tunnel rsvp-te label-switched-path-template default-template
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 vrf-table-label
set routing-instances vpn1 routing-options multipath vpn-unequal-cost equal-external-internal
set routing-instances vpn1 protocols bgp export direct
set routing-instances vpn1 protocols bgp group bgp local-address 10.50.10.2
set routing-instances vpn1 protocols bgp group bgp family inet unicast
set routing-instances vpn1 protocols bgp group bgp neighbor 10.50.10.1 peer-as 3
set routing-instances vpn1 protocols pim rp static address 10.255.10.119
set routing-instances vpn1 protocols pim interface all
set routing-instances vpn1 protocols mvpn mvpn-mode rpt-spt
set routing-instances vpn1 protocols mvpn mvpn-join-load-balance bitwise-xor-hash

```

## PE3



```

set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-0/0/8.0
set routing-instances vpn1 interface lo0.1
set routing-instances vpn1 route-distinguisher 3:3
set routing-instances vpn1 provider-tunnel rsvp-te label-switched-path-template default-template
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 vrf-table-label
set routing-instances vpn1 routing-options multipath vpn-unequal-cost equal-external-internal
set routing-instances vpn1 routing-options autonomous-system 1
set routing-instances vpn1 protocols bgp export direct
set routing-instances vpn1 protocols bgp group bgp type external
set routing-instances vpn1 protocols bgp group bgp local-address 10.80.10.1
set routing-instances vpn1 protocols bgp group bgp family inet unicast
set routing-instances vpn1 protocols bgp group bgp neighbor 10.80.10.2 peer-as 2
set routing-instances vpn1 protocols pim rp static address 10.255.10.119
set routing-instances vpn1 protocols pim interface all
set routing-instances vpn1 protocols mvpn mvpn-mode rpt-spt
set routing-instances vpn1 protocols mvpn mvpn-join-load-balance bitwise-xor-hash

```

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*. To configure the PE1 router:

**NOTE:** Repeat this procedure for every Juniper Networks router in the MVPN domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

1. Configure a VPN routing forwarding (VRF) routing instance.

```

[edit routing-instances vpn1]
user@PE1# set instance-type vrf
user@PE1# set interface ge-3/0/1.0
user@PE1# set interface ge-3/3/2.0
user@PE1# set interface lo0.1
user@PE1# set route-distinguisher 1:1
user@PE1# set provider-tunnel rsvp-te label-switched-path-template default-template
user@PE1# set vrf-target target:1:1
user@PE1# set vrf-table-label

```



2. Enable protocol-independent load balancing for the VRF instance.

```
[edit routing-instances vpn1]
user@PE1# set routing-options multipath vpn-unequal-cost equal-external-internal
```

3. Configure BGP groups and neighbors to enable PE to CE routing.

```
[edit routing-instances vpn1 protocols]
user@PE1# set bgp export direct
user@PE1# set bgp group bgp type external
user@PE1# set bgp group bgp local-address 10.40.10.1
user@PE1# set bgp group bgp family inet unicast
user@PE1# set bgp group bgp neighbor 10.40.10.2 peer-as 3
user@PE1# set bgp group bgp1 type external
user@PE1# set bgp group bgp1 local-address 10.10.10.1
user@PE1# set bgp group bgp1 family inet unicast
user@PE1# set bgp group bgp1 neighbor 10.10.10.2 peer-as 3
```

4. Configure PIM to enable PE to CE multicast routing.

```
[edit routing-instances vpn1 protocols]
user@PE1# set pim rp static address 10.255.10.119
```

5. Enable PIM on all network interfaces.

```
[edit routing-instances vpn1 protocols]
user@PE1# set pim interface all
```

6. Enable PIM join load balancing for the VRF instance.

```
[edit routing-instances vpn1 protocols]
user@PE1# set pim join-load-balance
```

7. Configure the mode for C-PIM join messages to use rendezvous-point trees, and switch to the shortest-path tree after the source is known.

```
[edit routing-instances vpn1 protocols]
user@PE1# set mvpn mvpn-mode rpt-spt
```



8. Configure the VRF instance to use the Byte-wise-XOR hash algorithm.

```
[edit routing-instances vpn1 protocols]
user@PE1# set mvpn mvpn-join-load-balance bitwise-xor-hash
```

### Results

From configuration mode, confirm your configuration by entering the **show routing-instances** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show routing-instances
routing-instances {
  vpn1 {
    instance-type vrf;
    interface ge-3/0/1.0;
    interface ge-3/3/2.0;
    interface lo0.1;
    route-distinguisher 1:1;
    provider-tunnel {
      rsvp-te {
        label-switched-path-template {
          default-template;
        }
      }
    }
    vrf-target target:1:1;
    vrf-table-label;
    routing-options {
      multipath {
        vpn-unequal-cost equal-external-internal;
      }
    }
    protocols {
      bgp {
        export direct;
        group bgp {
          type external;
          local-address 10.40.10.1;
          family inet {
            unicast;
          }
          neighbor 10.40.10.2 {
            peer-as 3;
          }
        }
      }
    }
  }
}
```



```

    }
  }
  group bgp1 {
    type external;
    local-address 10.10.10.1;
    family inet {
      unicast;
    }
    neighbor 10.10.10.2 {
      peer-as 3;
    }
  }
}
pim {
  rp {
    static {
      address 10.255.10.119;
    }
  }
  interface all;
  join-load-balance;
}
mvpn {
  mvpn-mode {
    rpt-spt;
  }
  mvpn-join-load-balance {
    bitwise-xor-hash;
  }
}
}
}

```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

### IN THIS SECTION

- [Verifying MVPN C-Multicast Route Information for Different Groups of Join Messages](#) | 1145



Confirm that the configuration is working properly.

### **Verifying MVPN C-Multicast Route Information for Different Groups of Join Messages**

#### **Purpose**

Verify MVPN C-multicast route information for different groups of join messages received on the PE3 router.

#### **Action**

From operational mode, run the **show mvpn c-multicast** command.

**user@PE3>**

```
MVPN instance:
Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel
Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Family : INET

Instance : vpn1
MVPN Mode : RPT-SPT
C-mcast IPv4 (S:G)          Ptnl          St
0.0.0.0/0:203.0.113.1/24    RSVP-TE P2MP:10.255.10.2, 5834,10.255.10.2
192.0.2.2/24:203.0.113.1/24  RSVP-TE P2MP:10.255.10.2, 5834,10.255.10.2
0.0.0.0/0:203.0.113.2/24    RSVP-TE P2MP:10.255.10.14, 47575,10.255.10.14
192.0.2.2/24:203.0.113.2/24  RSVP-TE P2MP:10.255.10.14, 47575,10.255.10.14
```

#### **Meaning**

The output shows how the PE3 router has load-balanced the C-multicast data for the different groups.

- For source join messages (S,G):
  - 192.0.2.2/24:203.0.113.1/24 (S,G1) toward the PE1 router (10.255.10.2 is the loopback address of Router PE1).
  - 192.0.2.2/24:203.0.113.2/24 (S,G2) toward the PE2 router (10.255.10.14 is the loopback address of Router PE2).
- For shared join messages (\*,G):
  - 0.0.0.0/0:203.0.113.1/24 (\*,G1) toward the PE1 router (10.255.10.2 is the loopback address of Router PE1).



- 0.0.0.0/0:203.0.113.2/24 (\*,G2) toward the PE2 router (10.255.10.14 is the loopback address of Router PE2).

SEE ALSO

| [PIM Join Load Balancing on Multipath MVPN Routes Overview](#)

## Improving Layer 3 VPN Performance

### IN THIS SECTION

- [Chained Composite Next Hops for VPNs and Layer 2 Circuits | 1146](#)
- [Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs | 1147](#)
- [Example: Configuring Chained Composite Next Hops for Direct PE-PE Connections in VPNs | 1152](#)

This topic introduces chained composite next hops (CNHs) and provides an example of how to enable chained CNH on back-to-back PE routers.

### Chained Composite Next Hops for VPNs and Layer 2 Circuits

The Juniper Networks PTX Series Packet Transport Routers, MX Series 5G Universal Routing Platforms with MIC and MPC interfaces, and T4000 Core Routers are principally designed to handle large volumes of traffic in the core of large networks. Chained CNHs help to facilitate this capability by allowing the router to process much larger volumes of routes. A chained CNH allows the router to direct sets of routes sharing the same destination to a common forwarding next hop, rather than having each route also include the destination. In the event that a network destination is changed, rather than having to update all of the routes sharing that destination with the new information, only the shared forwarding next hop is updated with the new information. The chained CNHs continue to point to this forwarding next hop, which now contains the new destination.

When the next hops for MPLS LSPs are created on the routers, the tag information corresponding to the innermost MPLS label is extracted into a chained CNH. The chained CNH is stored in the ingress Packet Forwarding Engine. The chained CNH points to a next hop called the forwarding next hop that resides on



the egress Packet Forwarding Engine. The forwarding next hop contains all the other information (all of the labels except for the inner-most labels as well as the IFA/IP information corresponding to the actual next-hop node). Many chained composite next hops can share the same forwarding next hop. Additionally, separating the inner-most label (that is the VPN label) from the forwarding next hop and storing it on the ingress PFE (within the chained composite next hop) helps to conserve egress Packet Forwarding Engine memory by reducing the number of rewrite strings stored on the egress Packet Forwarding Engine.

[Table 14 on page 1147](#) shows support for chained CNHs for ingress or transit routers on the MPLS network.

**Table 14: Support for Chained Composite Next Hops**

Platform	L2 VPN	L3 VPN	L2 CKT
PTX Series	Ingress and transit	Ingress and transit	Ingress only
MX Series	Ingress only	Ingress only	Ingress only

To enable chained CNHs on a T4000 router, the chassis must be configured to use the **enhanced-mode** option in network services mode.

**Benefits of chained composite next hops**

Chained CNH optimizes the memory and performance of the router by reducing the size of the forwarding table. The router can use the same next-hop entry in the forwarding table for routes with different destinations when the next-hop is the same. This reduces the number of entries in the forwarding table and reduces the number of changes when the next hop entry has to be modified.

**Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs**

**IN THIS SECTION**

- [Accepting Up to One Million Layer 3 VPN Route Updates | 1148](#)
- [Accepting More Than One Million Layer 3 VPN Route Updates | 1150](#)
- [Enabling Chained Composite Next Hops for IPv6-Labeled Unicast Routes | 1152](#)

For Layer 3 VPNs configured on Juniper Networks routers, Junos OS normally allocates one inner VPN label for each customer edge (CE)-facing virtual routing and forwarding (VRF) interface of a provider edge (PE) router. However, other vendors allocate one VPN label for each route learned over the CE-facing



interfaces of a PE router. This practice increases the number of VPN labels exponentially, which leads to slow system processing and slow convergence time.

Chained CNHs is a composition function that concatenates the partial rewrite strings associated with individual next hops to form a larger rewrite string that is added to a packet. By using this function, the number of routes with unique inner VPN labels that can be processed by a Juniper Networks router is increased substantially. Common route update elements associated with Layer 3 VPNs are combined, reducing the number of route updates and individual states the Juniper Networks router must maintain, and leading to enhanced scaling and convergence performance.

**NOTE:** ACX Series routers supports the **chained-composite-next-hop ingress** CLI statement at the **[edit routing-options forwarding-table]** hierarchy level only for Layer 3 VPNs. The **chained-composite-next-hop ingress** CLI statement for Layer 2 services is not supported.

You can configure the router based on the number of VPN labels you want to manage and on whether or not you want to create chained CNHs for IPv6-labeled routes:

### Accepting Up to One Million Layer 3 VPN Route Updates

For Juniper Networks routers participating in a mixed vendor network with up to one million Layer 3 VPN labels, include the **l3vpn** statement at the **[edit routing-options forwarding-table chained-composite-next-hop ingress]** hierarchy level. The **l3vpn** statement is disabled by default.

**NOTE:** ACX Series routers do not support the **chained-composite-next-hop ingress** CLI statement at the **[edit routing-options forwarding-table]** hierarchy level.

**BEST PRACTICE:** We recommend that you configure the **l3vpn** statement whenever you have deployed Juniper Networks routers in mixed vendor networks of up to one million routes to support Layer 3 VPNs.

Because using this statement can also enhance the Layer 3 VPN performance of Juniper Networks routers in networks where only Juniper Networks routers are deployed, we recommend configuring the statements in these networks as well.

You can configure the **l3vpn** statement on the following routers:

- ACX Series routers
- MX Series routers



- M120 routers
- M320 routers with one or more Enhanced III FPCs
- T Series routers (for Junos OS Release 10.4 and later)

To accept up to one million Layer 3 VPN route updates with unique inner VPN labels, configure the **l3vpn** statement. This statement is supported on indirectly connected PE routers only. Configuring this statement on a router that is directly connected to a PE router provides no benefit. You can configure the **l3vpn** statement on a router with a mix of links to both directly connected and indirectly connected PE routers.

**NOTE:** You cannot configure the **l3vpn** statement and sub-statements at same time that you have configured the **vpn-unequal-cost** statement.

To configure the router to accept up to one million Layer 3 VPN route updates with unique inner VPN labels:

1. Include the **l3vpn** statement.

```
[edit routing-options forwarding-table chained-composite-next-hop ingress]
user@host>set l3vpn
```

2. To enhance memory allocation to support a larger number of Layer 3 VPN labels, include the **vpn-label** statement.

```
[edit chassis memory-enhanced]
user@host>set vpn-label
```

**NOTE:** The **vpn-label** statement does not provide any functional changes when used on the MX Series routers. You can omit the configuration of this statement on MX Series routers.

For more information about configuring more memory for Layer 3 VPN labels, see the *Junos OS Administration Library*.

After you have configured the **l3vpn** statement, you can determine whether or not a Layer 3 VPN route is a part of a chained CNH by examining the display output of the following commands:

- **show route route-value extensive**
- **show route forwarding-table destination destination-value extensive**



## Accepting More Than One Million Layer 3 VPN Route Updates

For Juniper Networks routers participating in a mixed vendor network with more than one million Layer 3 VPN labels, include the **extended-space** statement at the **[edit routing-options forwarding-table chained-composite-next-hop ingress l3vpn]** hierarchy level. The **extended-space** statement is disabled by default.

**NOTE:** The **chained-composite-next-hop ingress** and **extended-space** statements are not supported on ACX Series routers.

**BEST PRACTICE:** We recommend that you configure the **extended-space** statement in mixed vendor networks containing more than one million routes to support Layer 3 VPNs.

Because using this statements can also enhance the Layer 3 VPN performance of Juniper Networks routers in networks where only Juniper Networks routers are deployed, we recommend configuring the statement in these networks as well.

Using the **extended-space** statement can double the number of routes with unique inner VPN labels that can be processed by a Juniper Networks router. However, when configuring such very large-scale Layer 3 VPN scenarios, keep the following guidelines in mind:

- The **extended-space** statement is supported only on MX Series routers containing only MPCs.
- The chassis must be configured to use the **enhanced-ip** option in network services mode.

For more information about configuring chassis network services, see the *Junos OS Administration Library*.

- Ensure that you configure per-packet load balancing for associated policies.

For more information about configuring policies, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

**BEST PRACTICE:** We strongly recommend using 64-bit routing engines running 64-bit Junos OS to support Layer 3 VPN prefixes with unique inner VPN labels at higher scale.

To configure the router to accept more than one million Layer 3 VPN route updates with unique inner VPN labels:

1. Include the **l3vpn** statement.



```
[edit routing-options forwarding-table chained-composite-next-hop ingress]  
user@host> set l3vpn
```

2. Include the **extended-space** statement.

```
[edit routing-options forwarding-table chained-composite-next-hop ingress l3vpn]  
user@host> set extended-space
```

3. Configure chassis network services for enhanced mode.

```
[edit chassis]  
user@host> set network-services enhanced-ip
```

**NOTE:** A router reboot might be required. See *Network Services Mode Overview* in the *Junos OS Administration Library* for details.

After you have completed the configuration, you can determine whether or not a Layer 3 VPN route is a part of a CNH by examining the display output of the following commands:

- **show route *route-value* extensive**
- **show route forwarding-table destination *destination-value* extensive**



## Enabling Chained Composite Next Hops for IPv6-Labeled Unicast Routes

You can enable chained CNHs for IPv6-labeled unicast routes by configuring the `labeled-bgp` and `inet6` statements:

- To enable chained composite next hops for inet6 labeled unicast routes, include the `inet6` statement at the `[edit routing-options forwarding-table chained-composite-next-hop ingress labeled-bgp]` hierarchy level. This statement is disabled by default.

## Example: Configuring Chained Composite Next Hops for Direct PE-PE Connections in VPNs

### IN THIS SECTION

- [Requirements | 1152](#)
- [Overview | 1153](#)
- [Configuration | 1154](#)
- [Verification | 1165](#)

This example shows how to enable back-to-back Provider Edge (PE) router Layer 3 Virtual Private Network (VPN) connections with chained CNHs for MIC and MPC interfaces on MX Series and T4000 routers.

### Requirements

This example uses the following hardware and software components:

- Six routers that can be a combination of MX240, MX480, MX960, or T4000 routers.
- Junos OS Release 13.3 running on all the devices.

Before you begin:

1. Configure the device interfaces.
2. Configure the following routing protocols on all the routers:
  - a. MPLS
  - b. BGP



- c. LDP LSPs as tunnels between the PE devices
- d. OSPF or any other IGP protocol

## Overview

Prior to Junos OS Release 13.3, in a degenerated Layer 3 VPN case without the presence of an MPLS core router, previous behavior of flattened out indirect next hop and unicast next hop was utilized because there was no outer label available in the back-to-back PE-PE connection, and the ingress PE device only pushed single VPN labels. In a Layer 3 VPN multipath scenario with mixed PE-PE and PE-P-PE paths, chained CNHs could not be used either.

On platforms that support only MIC and MPC interfaces, chained CNHs are enabled by default. On platforms that support both DPC and MPC interfaces, the Layer 3 VPN configuration required the **pe-pe-connection** statement to support chained CNHs for PE-PE connections. However, the **pe-pe-connection** statement was not supported on platforms with MIC and FPC interfaces only.

As a solution to these limitations, starting with Junos OS Release 13.3, the support for chained CNHs is enhanced to automatically identify the underlying platform capability on chained CNHs at startup time, without relying on user configuration, and to decide the next-hop type (composite or indirect) to embed in the Layer 3 VPN label. This enhances the support for back-to-back PE-PE connections in Layer 3 VPN with chained CNHs, and eliminates the need for the **pe-pe-connection** statement.


To enable chained CNHs for directly connected PE devices, in addition to including the **l3vpn** statement at the **[edit routing-options forwarding-table chained-composite-next-hop ingress]** hierarchy level, make the following changes:

- On MX Series 5G Universal Routing Platforms containing both DPC and MPC FPCs, chained CNHs are disabled by default. To enable chained CNHs on the MX240, MX480, and MX960, the chassis must be configured to use the **enhanced-ip** option in network services mode.
- On T4000 Core Routers containing MPC and FPCs, chained CNHs are disabled by default. To enable chained CNHs on a T4000 router, the chassis must be configured to use the **enhanced-mode** option in network services mode.



## Topology

Figure 91: Chained Composite Next Hops for PE-PE Connections

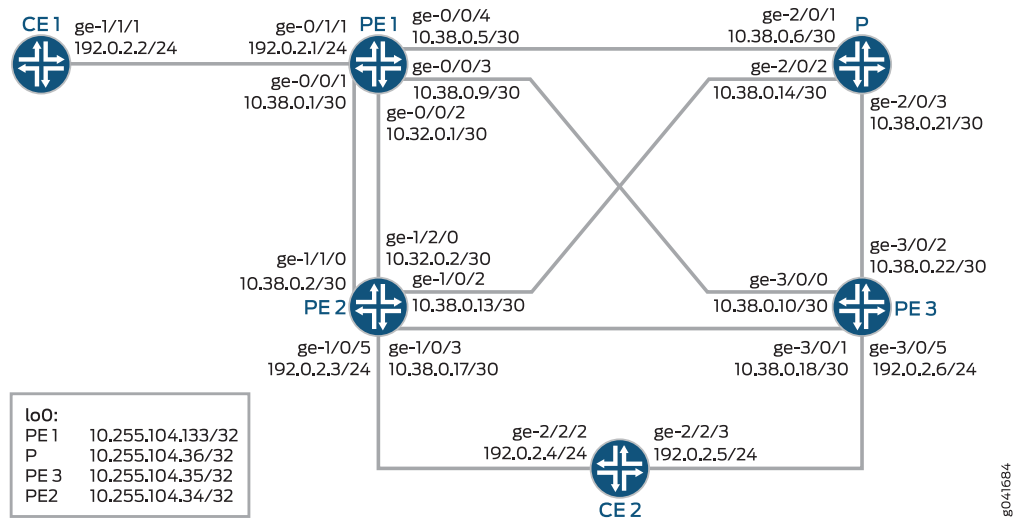

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### CE1

```
set interfaces ge-1/1/1 unit 0 family inet address 192.0.2.2/24
set interfaces ge-1/1/1 unit 0 family iso
set interfaces ge-1/1/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 198.51.100.1/24
set protocols bgp group PE type external
set protocols bgp group PE peer-as 200
set protocols bgp group PE neighbor 192.0.2.1
set routing-options autonomous-system 100
```

#### PE1



```

set interfaces ge-0/0/1 unit 0 family inet address 10.38.0.1/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 10.38.0.5/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 10.38.0.9/30
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 10.32.0.1/30
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces ge-0/1/1 unit 0 family inet address 192.0.2.1/24
set interfaces ge-0/1/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.104.133/32
set chassis network-services enhanced-ip
set routing-options forwarding-table chained-composite-next-hop ingress l3vpn
set routing-options autonomous-system 200
set routing-options forwarding-table export lbpp
set protocols mpls interface 10.38.0.1/30
set protocols mpls interface 10.32.0.1/30
set protocols mpls interface 10.38.0.5/30
set protocols mpls interface 10.38.0.9/30
set protocols bgp group PEs type internal
set protocols bgp group PEs local-address 10.255.104.133
set protocols bgp group PEs family inet unicast
set protocols bgp group PEs family inet-vpn unicast
set protocols bgp group PEs neighbor 10.255.104.134 local-preference 200
set protocols bgp group PEs neighbor 10.255.104.135
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set policy-options policy-statement lbpp then load-balance per-packet
set routing-instances vpn-a instance-type vrf
set routing-instances vpn-a interface ge-0/1/1.0
set routing-instances vpn-a route-distinguisher 200:1
set routing-instances vpn-a vrf-target target:200:1
set routing-instances vpn-a vrf-table-label
set routing-instances vpn-a protocols bgp group CE type external
set routing-instances vpn-a protocols bgp group CE peer-as 100
set routing-instances vpn-a protocols bgp group CE neighbor 192.0.2.2

```



```

set interfaces ge-1/0/2 unit 0 family inet address 10.38.0.13/30
set interfaces ge-1/0/2 unit 0 family mpls
set interfaces ge-1/0/3 unit 0 family inet address 10.32.0.17/30
set interfaces ge-1/0/3 unit 0 family mpls
set interfaces ge-1/0/5 unit 0 family inet address 192.0.2.3/24
set interfaces ge-1/0/5 unit 0 family mpls
set interfaces ge-1/1/0 unit 0 family inet address 10.38.0.2/30
set interfaces ge-1/1/0 unit 0 family mpls
set interfaces ge-1/2/0 unit 0 family inet address 10.32.0.2/30
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.104.134/32
set chassis network-services enhanced-ip
set routing-options forwarding-table chained-composite-next-hop ingress l3vpn
set routing-instances vpn-a instance-type vrf
set routing-instances vpn-a interface ge-1/0/5.0
set routing-instances vpn-a route-distinguisher 200:2
set routing-instances vpn-a vrf-target target:200:1
set routing-instances vpn-a protocols bgp group CE type external
set routing-instances vpn-a protocols bgp group CE peer-as 300
set routing-instances vpn-a protocols bgp group CE neighbor 192.0.2.3
set protocols mpls interface 10.38.0.2/30
set protocols mpls interface 10.32.0.2/30
set protocols mpls interface 10.38.0.13/30
set protocols mpls interface 10.38.0.17/30
set protocols bgp group PEs type internal
set protocols bgp group PEs local-address 10.255.104.134
set protocols bgp group PEs family inet unicast
set protocols bgp group PEs family inet-vpn unicast
set protocols bgp group PEs neighbor 10.255.104.133
set protocols bgp group PEs neighbor 10.255.104.135
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set routing-options autonomous-system 200

```

P

```

set interfaces ge-2/0/1 unit 0 family inet address 10.38.0.6/30

```



```

set interfaces ge-2/0/1 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 family inet address 10.38.0.14/30
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces ge-2/0/3 unit 0 family inet address 10.38.0.21/30
set interfaces ge-2/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.104.136/32
set protocols mpls interface 10.38.0.6/30
set protocols mpls interface 10.38.0.14/30
set protocols mpls interface 10.38.0.21/30
set protocols bgp group PEs type internal
set protocols bgp group PEs local-address 10.255.104.136
set protocols bgp group PEs family inet unicast
set protocols bgp group PEs family inet-vpn unicast
set protocols bgp group PEs neighbor 10.255.104.133
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set routing-options autonomous-system 200

```

### PE3

```

set interfaces ge-3/0/0 unit 0 family inet address 10.38.0.10/30r0-r3
set interfaces ge-3/0/0 unit 0 family mpls
set interfaces ge-3/0/1 unit 0 family inet address 10.38.0.18/30r0-r1-2
set interfaces ge-3/0/1 unit 0 family mpls
set interfaces ge-3/0/2 unit 0 family inet address 10.38.0.22/30
set interfaces ge-3/0/2 unit 0 family mpls
set interfaces ge-3/0/5 unit 0 family inet address 192.0.2.6/24r0-r1-1
set interfaces ge-3/0/5 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.104.135/32
set chassis network-services enhanced-mode
set routing-options forwarding-table chained-composite-next-hop ingress l3vpn
set routing-options autonomous-system 200
set routing-instances vpn-a instance-type vrf
set routing-instances vpn-a interface ge-3/0/5.0
set routing-instances vpn-a route-distinguisher 200:3
set routing-instances vpn-a vrf-target target:200:1
set routing-instances vpn-a protocols bgp group CE type external

```



```

set routing-instances vpn-a protocols bgp group CE peer-as 300
set routing-instances vpn-a protocols bgp group CE neighbor 192.0.2.5
set protocols mpls interface 10.38.0.10/30
set protocols mpls interface 10.38.0.18/30
set protocols mpls interface 10.38.0.22/30
set protocols bgp group PEs type internal
set protocols bgp group PEs local-address 10.255.104.135
set protocols bgp group PEs family inet unicast
set protocols bgp group PEs family inet-vpn unicast
set protocols bgp group PEs neighbor 10.255.104.133
set protocols bgp group PEs neighbor 10.255.104.134
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable

```

## CE2

```

set interfaces ge-2/2/2 unit 0 family inet address 192.0.2.4/24
set interfaces ge-2/2/2 unit 0 family mpls
set interfaces ge-2/2/3 unit 0 family inet address 192.0.2.5/24
set interfaces ge-2/2/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 198.51.100.2/24
set protocols bgp group PE type external
set protocols bgp group PE metric-out 50
set protocols bgp group PE peer-as 200
set protocols bgp group PE export s2b
set protocols bgp group PE neighbor 192.0.2.4
set protocols bgp group PE neighbor 192.0.2.5
set policy-options policy-statement s2b from protocol direct
set policy-options policy-statement s2b then accept
set routing-options autonomous-system 300

```

## *Configuring Multipath Layer 3 VPN with Chained Composite Next Hops*

### Step-by-Step Procedure



The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure basic Layer 3 VPN with chained CNH on the PE1 router:

**NOTE:** Repeat this procedure for the PE2 and PE3 routers in the MPLS domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

1. Configure the interfaces on the PE1 router.

#### PE1 to CE1

```
[edit interfaces]
user@PE1 # set ge-0/1/1 unit 0 family inet address 192.0.2.1/24
user@PE1 # set ge-0/1/1 unit 0 family mpls
```

#### PE1 to PE2

```
[edit interfaces]
user@PE1 # set ge-0/0/1 unit 0 family inet address 10.38.0.1/30
user@PE1 # set ge-0/0/1 unit 0 family mpls
user@PE1 # set ge-0/0/2 unit 0 family inet address 10.38.0.5/30
user@PE1 # set ge-0/0/2 unit 0 family mpls
```

#### PE1 to P

```
[edit interfaces]
user@PE1 # set ge-0/0/4 unit 0 family inet address 10.32.0.1/30
user@PE1 # set ge-0/0/4 unit 0 family mpls
```

#### PE1 to PE3

```
[edit interfaces]
user@PE1 # set ge-0/0/3 unit 0 family inet address 10.38.0.9/30
user@PE1 # set ge-0/0/3 unit 0 family mpls
```

#### Loopback interface

```
[edit interfaces]
user@PE1 # set lo0 unit 0 family inet address 10.255.104.133/32
```



2. Enable enhanced IP mode on the PE1 chassis.

```
[edit chassis]
user@PE1# set network-services enhanced-ip
```

3. Enable chained CNH on the global Layer 3 VPN.

```
[edit routing-options]
user@PE1# set forwarding-table chained-composite-next-hop ingress l3vpn
```

4. Configure the autonomous system for PE1.

```
[edit routing-options]
user@PE1# set autonomous-system 200
```

5. Export the policy configured for load balancing.

```
[edit routing-options]
user@PE1# set forwarding-table export lbpp
```

6. Configure MPLS on the PE1 interfaces connecting to the P router and other PE routers.

```
[edit protocols]
user@PE1# set mpls interface 10.38.0.1/30
user@PE1# set mpls interface 10.32.0.1/30
user@PE1# set mpls interface 10.38.0.5/30
user@PE1# set mpls interface 10.38.0.9/30
```

7. Configure the IBGP group for PE1 to peer with the PE2 and PE3 routers.

```
[edit protocols]
user@PE1# set bgp group PEs type internal
user@PE1# set bgp group PEs local-address 10.255.104.133
user@PE1# set bgp group PEs family inet unicast
user@PE1# set bgp group PEs family inet-vpn unicast
user@PE1# set bgp group PEs neighbor 10.255.104.134 local-preference 200
user@PE1# set bgp group PEs neighbor 10.255.104.135
```



8. Configure OSPF with traffic engineering capability on all the interfaces of PE1, excluding the management interface.

```
[edit protocols]
user@PE1# set ospf area 0.0.0.0 interface all
user@PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
user@PE1# set ospf area 0.0.0.0 interface lo0.0 passive
```

9. Configure LDP on all the interfaces of PE1, excluding the management interface.

```
[edit protocols]
user@PE1# set ldp interface all
user@PE1# set ldp interface fxp0.0 disable
```

10. Configure a policy to load-balance traffic on a per packet basis.

```
[edit policy-options]
user@PE1# set policy-statement lbpp then load-balance per-packet
```

11. Configure a VRF routing instance on the CE1-facing interface of PE1.

```
[edit routing-instances]
user@PE1# set vpn-a instance-type vrf
user@PE1# set vpn-a interface ge-0/1/1.0
```

12. Configure the routing instance parameters.

```
[edit routing-instances]
user@PE1# set vpn-a route-distinguisher 200:1
user@PE1# set vpn-a vrf-target target:200:1
user@PE1# set vpn-a vrf-table-label
```

13. Configure an EBGp group for the routing instance, so PE1 can peer with CE1.

```
[edit routing-instances]
user@PE1# set vpn-a protocols bgp group CE type external
user@PE1# set vpn-a protocols bgp group CE peer-as 100
user@PE1# set vpn-a protocols bgp group CE neighbor 192.0.2.2
```



## Results

From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show protocols**, **show routing-options**, **show routing-instances**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

### PE1

```
user@PE1# show chassis
network-services enhanced-ip;
```

```
user@PE1# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 10.38.0.1/30;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 10.38.0.5/30;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 10.38.0.9/30;
    }
    family mpls;
  }
}
ge-0/0/4 {
  unit 0 {
    family inet {
      address 10.32.0.1/30;
    }
  }
}
```



```

        family mpls;
    }
}
ge-0/1/1 {
    unit 0 {
        family inet {
            address 192.0.2.1/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.104.133/32;
        }
    }
}
}

```

```

user@PE1# show protocols
mpls {
    interface 10.38.0.1/30;
    interface 10.32.0.1/30;
    interface 10.38.0.5/30;
    interface 10.38.0.9/30;
}
bgp {
    group PEs {
        type internal;
        local-address 10.255.104.133;
        family inet {
            unicast;
        }
        family inet-vpn {
            unicast;
        }
        neighbor 10.255.104.134 {
            local-preference 200;
        }
        neighbor 10.255.104.135;
    }
}
ospf {
    area 0.0.0.0 {

```



```

    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0 {
        passive;
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}

```

user@PE1# **show routing-options**

```

autonomous-system 200;
forwarding-table {
    export lbpp;
    chained-composite-next-hop {
        ingress {
            l3vpn;
        }
    }
}

```

user@PE1# **show routing-instances**

```

vpn-a {
    instance-type vrf;
    interface ge-0/1/1.0;
    route-distinguisher 200:1;
    vrf-target target:200:1;
    vrf-table-label;
    protocols {
        bgp {
            group CE {
                type external;
                peer-as 100;
                neighbor 192.0.2.2;
            }
        }
    }
}

```



```
}
```

```
user@PE1# show policy-options
policy-statement lbpp {
  then {
    load-balance per-packet;
  }
}
```

## Verification

### IN THIS SECTION

- [Verifying the Routes | 1165](#)
- [Verifying Chained Next Hops on Direct PE-PE Connection | 1168](#)

Confirm that the configuration is working properly.

### *Verifying the Routes*

#### Purpose

Verify that the Layer 3 VPN prefixes toward PE1-PE2 point to chained CNHs.

#### Action

From operational mode, run the **show route 198.51.100.2 table vpn-a extensive** command.

```
user@PE1> show route 198.51.100.2 table vpn-a extensive
```

```
vpn-a.inet.0: 7 destinations, 10 routes (7 active, 0 holddown, 0 hidden)
198.51.100.2/24 (2 entries, 1 announced)
TSI:
KRT in-kernel 198.51.100.2/3 -> {composite(720)}
Page 0 idx 0, (group CE type External) Type 1 val 938eaa8 (adv_entry)
  Advertised metrics:
    Nexthop: Self
    AS path: [200] 300 I
```



```

Communities: target:200:1
Path 198.51.100.2 from 10.255.104.133 Vector len 4. Val: 0
  *BGP    Preference: 170/-101
          Route Distinguisher: 200:2
          Next hop type: Indirect
          Address: 0x9391654
          Next-hop reference count: 12
          Source: 10.255.104.133
          Next hop type: Router, Next hop index: 1048580
          Next hop: 10.32.0.2 via ge-0/0/2.0
          Session Id: 0x1
          Next hop: 10.38.0.2 via ge-0/0/1.0, selected
          Session Id: 0x3
          Protocol next hop: 10.255.104.133
          Push 300192
          Composite next hop: 0x93918a4 718 INH Session ID: 0x9
          Indirect next hop: 0x941c000 1048581 INH Session ID: 0x9
          State: <Secondary Active Int Ext ProtectionCand>
          Local AS: 200 Peer AS: 200
          Age: 28 Metric: 50 Metric2: 1
          Validation State: unverified
          Task: BGP_203.0.113.1.133+57173
          Announcement bits (2): 0-KRT 1-BGP_RT_Background
          AS path: 300 I
          Communities: target:200:1
          Import Accepted
          VPN Label: 300192
          Localpref: 100
          Router ID: 10.255.104.133
          Primary Routing Table bgp.l3vpn.0
          Composite next hops: 1
            Protocol next hop: 10.255.104.133 Metric: 1
            Push 300192
            Composite next hop: 0x93918a4 718 INH Session ID: 0x9
            Indirect next hop: 0x941c000 1048581 INH Session ID: 0x9

            Indirect path forwarding next hops: 2
              Next hop type: Router
              Next hop: 10.32.0.2 via ge-1/0/0.0
              Session Id: 0x1
              Next hop: 10.38.0.2 via ge-1/1/2.0
              Session Id: 0x3
          10.255.104.133/32 Originating RIB: inet.3
          Metric: 1 Node path count: 1

```



```

        Forwarding nexthops: 2
            Nexthop: 10.32.0.2 via ge-0/0/2.0
BGP   Preference: 170/-101
      Route Distinguisher: 200:3
      Next hop type: Indirect
      Address: 0x9391608
      Next-hop reference count: 9
      Source: 10.255.104.131
      Next hop type: Router, Next hop index: 722
      Next hop: 10.38.0.10 via ge-0/0/1.0, selected
      Session Id: 0x4
      Protocol next hop: 10.255.104.131
      Push 299936
      Composite next hop: 0x9391690 723 INH Session ID: 0xb
      Indirect next hop: 0x941c0fc 1048583 INH Session ID: 0xb
      State: <Secondary NotBest Int Ext ProtectionCand>
      Inactive reason: Not Best in its group - Router ID
      Local AS: 200 Peer AS: 200
      Age: 28 Metric: 50 Metric2: 1
      Validation State: unverified
      Task: BGP_203.0.113.1.131+63797
      AS path: 300 I
      Communities: target:200:1
      Import Accepted
      VPN Label: 299936
      Localpref: 100
      Router ID: 10.255.104.131
      Primary Routing Table bgp.l3vpn.0
      Composite next hops: 1
          Protocol next hop: 10.255.104.131 Metric: 1
          Push 299936
          Composite next hop: 0x9391690 723 INH Session ID: 0xb
          Indirect next hop: 0x941c0fc 1048583 INH Session ID: 0xb

      Indirect path forwarding next hops: 1
          Next hop type: Router
          Next hop: 10.38.0.10 via ge-1/0/2.0
          Session Id: 0x4
      10.255.104.131/32 Originating RIB: inet.3
      Metric: 1 Node path count: 1
      Forwarding nexthops: 1
          Nexthop: 10.38.0.10 via ge-1/0/2.0

```

Meaning



The PE2 router is the CNH for PE1 to reach CE2.

### Verifying Chained Next Hops on Direct PE-PE Connection

#### Purpose

Verify that chained next hop is generated for direct PE-PE connection on CE1.

#### Action

From operational mode, run the **ping** command.

```
user@CE1> ping 192.0.2.4
```

```
!!!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

#### Meaning

Chained CNH is enabled for the PE1 to PE2 connection.

### RELATED DOCUMENTATION

*Chained Composite Next Hops for Transit Devices for VPNs*

*Allocating More Memory for Routing Tables, Firewall Filters, and Layer 3 VPN Labels*

*Network Services Mode Overview*

*Configuring Junos OS to Run a Specific Network Services Mode in MX Series Routers*

[chained-composite-next-hop](#) | **1261**

*transit (Chained Composite Next Hops)*

[ingress](#) | **1300**

## Class of Service for VPNs

### IN THIS SECTION

- [VPNs and Class of Service](#) | **1169**
- [Rewriting Class of Service Markers and VPNs](#) | **1169**



- [Configuring Traffic Policing in Layer 3 VPNs | 1169](#)
- [Applying Custom MPLS EXP Classifiers to Routing Instances in Layer 3 VPNs | 1170](#)

## VPNs and Class of Service

You can configure Junos class-of-service (CoS) features to provide multiple classes of service for VPNs. The CoS features are supported on Layer2 VPNs, Layer 3 VPNs, and VPLS. On the router, you can configure multiple forwarding classes for transmitting packets, define which packets are placed into each output queue, schedule the transmission service level for each queue, and manage congestion using a random early detection (RED) algorithm.

VPNs use the standard CoS configuration.

## Rewriting Class of Service Markers and VPNs

A marker reads the current forwarding class and loss priority information associated with a packet and finds the chosen code point from a table. It then writes the code point information into the packet header. Entries in a marker configuration represent the mapping of the current forwarding class into a new forwarding class, to be written into the header.

You define markers in the rewrite rules section of the class-of-service (CoS) configuration hierarchy and reference them in the logical interface configuration. You can configure different rewrite rules to handle VPN traffic and non-VPN traffic. The rewrite rule can be applied to MPLS and IPv4 packet headers simultaneously, making it possible to initialize MPLS experimental (EXP) and IP precedence bits at LSP ingress.

For a detailed example of how to configure rewrite rules for MPLS and IPv4 packets and for more information about how to configure statements at the **[edit class-of-service]** hierarchy level, see the *Class of Service User Guide (Routers and EX9200 Switches)*.

## Configuring Traffic Policing in Layer 3 VPNs

You can use policing to control the amount of traffic flowing over the interfaces servicing a Layer 3 VPN. If policing is disabled on an interface, all the available bandwidth on a Layer 3 VPN tunnel can be used by a single CCC or TCC interface.



For more information about the **policer** statement, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

To enable Layer 3 VPN policing on an interface, include the **policer** statement:

```
policer {
    input policer-template-name;
    output policer-template-name;
}
```

If you configure CCC encapsulation, you can include the **policer** statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family ccc]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family ccc]

If you configure TCC encapsulation, you can include the **policer** statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family tcc]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family tcc]

SEE ALSO

| *Routing Policies, Firewall Filters, and Traffic Policers User Guide*

## Applying Custom MPLS EXP Classifiers to Routing Instances in Layer 3 VPNs

When you include the **vrf-table-label** statement in the configuration for a routing instance (as described in “[Filtering Packets in Layer 3 VPNs Based on IP Headers](#)” on page 85) but do not explicitly apply a classifier to the routing instance, the default MPLS EXP classifier is applied.

For PICs that are installed on Enhanced FPCs, you can apply a custom classifier to override the default MPLS EXP classifier for the routing instance. For detailed instructions, see the *Class of Service User Guide (Routers and EX9200 Switches)*. The following instructions serve as a summary:

1. Filter traffic based on the IP header by including the **vrf-table-label** statement at the [edit routing-instances *routing-instance-name*] hierarchy level:

```
[edit routing-instances routing-instance-name]
vrf-table-label;
```



2. Configure a custom MPLS EXP classifier by including the appropriate statements at the **[edit class-of-service]** hierarchy level. For instructions, see the *Class of Service User Guide (Routers and EX9200 Switches)*.
3. Configure the routing instance for CoS by including the **routing-instances** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
routing-instances routing-instance-name {
  classifiers {
    exp (classifier-name | default);
  }
}
```

4. Configure the routing instance to use the custom MPLS EXP classifier by including the **classifiers** statement at the **[edit class-of-service routing-instances routing-instance-name]** hierarchy level:

```
[edit class-of-service routing-instances routing-instance-name]
classifiers {
  exp classifier-name;
}
```

To display the MPLS EXP classifiers associated with all routing instances, issue the **show class-of-service routing-instances** command.

**NOTE:** The following caveats apply to custom MPLS EXP classifiers for routing instances:

- An Enhanced FPC is required.
- Logical systems are not supported.

## RELATED DOCUMENTATION

| *Class of Service User Guide (Routers and EX9200 Switches)*



# Graceful Restarts for VPNs

## IN THIS SECTION

- [VPN Graceful Restart | 1172](#)
- [Configuring Graceful Restart for VPNs | 1173](#)
- [Configuring Nonstop Active Routing for BGP Multicast VPN | 1176](#)

## VPN Graceful Restart

With routing protocols, any service interruption requires that an affected router recalculate adjacencies with neighboring routers, restore routing table entries, and update other protocol-specific information. An unprotected restart of the router results in forwarding delays, route flapping, wait times stemming from protocol reconvergence, and even dropped packets. Graceful restart allows a routing device undergoing a restart to inform its adjacent neighbors and peers of its condition. During a graceful restart, the restarting device and its neighbors continue forwarding packets without disrupting network performance.

For VPN graceful restart to function properly, the following items need to be configured on the PE router:

- BGP graceful restart must be active on the PE-to-PE sessions carrying any service-signaling data in the session's network layer reachability information (NLRI).
- OSPF, IS-IS, LDP, and RSVP graceful restart must be active, because routes added by these protocols are used to resolve VPN NLRIs.
- For other protocols (static, Routing Information Protocol [RIP], and so on), graceful restart functionality must also be active when these protocols are run between the PE and CE routers. Layer 2 VPNs do not rely on this, because protocols are not configured between the PE and CE routers.

In VPN graceful restart, a restarting router completes the following procedures:

- Waits for all the BGP NLRI information from other PE routers before it starts advertising routes to its CE routers.
- Waits for all protocols in all routing instances to converge (or finish graceful restart) before sending CE router information to the other PE routers.



- Waits for all routing instance information (whether it is local configuration or advertisements from a remote peer router) to be processed before sending it to the other PE routers.
- Preserves all forwarding state information in the MPLS routing tables until new labels and transit routes are allocated and then advertises them to other PE routers (and CE routers in carrier-of-carriers VPNs).

Graceful restart is supported on Layer 2 VPNs, Layer 3 VPNs, and virtual-router routing instances.

### **Benefit of a VPN graceful restart**

The main benefit of a VPN graceful restart is that it allows a router whose VPN control plane is undergoing a restart to continue to forward traffic while recovering its state from neighboring routers. It temporarily suppresses all routing protocol updates and enables a router to pass through intermediate convergence states that are hidden from the rest of the network. Without graceful restart, a control plane restart disrupts the VPN services provided by the router.

## **Configuring Graceful Restart for VPNs**

You can configure graceful restart to enable a router to pass through intermediate convergence states that are hidden from the rest of the network. Graceful restart allows a router whose VPN control plane is undergoing a restart (restarting router) to continue to forward traffic while recovering its state from neighboring routers (helper routers).

The restarting router requests a grace period from the neighbor or peer, which can then cooperate with the restarting router. When a restart event occurs and graceful restart is enabled, the restarting router can still forward traffic during the restart period, and convergence in the network is not disrupted. The helper routers hide the restart event from other devices not directly connected to the restarting router. In other words, the restart is not visible to the rest of the network, and the restarting router is not removed from the network topology.

Without graceful restart, a control plane restart disrupts any VPN services provided by the router. Graceful restart is supported on Layer 2 VPNs, Layer 3 VPNs, virtual-router routing instances, and VPLS.

The graceful restart request occurs only if the following conditions are met:

- The network topology is stable.
- The neighbor or peer routers cooperate.
- The restarting router is not already cooperating with another restart already in progress.
- The grace period does not expire.

Before you begin:

- Configure the devices for network communication.



- Configure the device interfaces.

Graceful restart is disabled by default. To enable VPN graceful restart:

1. Configure graceful restart globally.

```
[edit routing-options]
user@host# set graceful-restart
```

**NOTE:**

- Graceful restart can be enabled on logical systems. To configure graceful restart globally, include the **graceful-restart** statement at the **[edit logical-systems *logical-system-name* routing-options]** or the **[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* routing-options]** hierarchy levels.
- To disable graceful restart globally, include the **disable** statement at the **[edit routing-options graceful-restart]** hierarchy level.

For example:

```
[edit routing-options]
user@host# set graceful-restart disable
```

2. Enable or disable graceful restart on a per-protocol, per-group, or per-neighbor basis, depending on the specific protocol, where the most specific definition is used.

```
[edit protocols]
user@host# set bgp graceful-restart
user@host# set bgp group group-name type internal local-address local-ip-address neighbor neighbor1-address
user@host# set bgp group group-name type internal local-address local-ip-address neighbor neighbor2-address
graceful-restart disable
```

3. Configure graceful restart for Layer 3 VPNS for all routing and MPLS-related protocols within a routing instance. Because you can configure multi-instance BGP and multi-instance LDP, graceful restart for a carrier-of-carriers scenario is supported.

```
[edit routing-instance]
user@host# set routing-instance-name routing-options graceful-restart
```



**NOTE:**

- To disable graceful restart globally, include the **disable** statement at the **[edit routing-instances routing-instance-name routing-options graceful-restart]** hierarchy level.

For example:

```
[edit routing-instances]
user@host# set instance1 routing-options graceful-restart disable
```

- To disable graceful restart for individual protocols, include the **disable** statement at the **[edit routing-instances routing-instance-name protocols protocol-name graceful-restart]** hierarchy level.

For example:

```
[edit routing-instances]
user@host# set instance1 protocols ospf graceful-restart disable
```

#### 4. Configure the duration of the graceful restart period for the routing instance.

```
[edit routing-options]
user@host# set graceful-restart restart-duration seconds
```

The **restart-duration** option sets the period of time that the router waits for a graceful restart to be completed. You can configure a time between 1 through 600 seconds. The default value is 300 seconds. At the end of the configured time period, the router performs a standard restart without recovering its state from the neighboring routers. This disrupts VPN services, but is probably necessary if the router is not functioning normally.

**NOTE:** You can include the **restart-duration** option at either the global or routing instance level.



## Configuring Nonstop Active Routing for BGP Multicast VPN

BGP multicast virtual private network (MVPN) is a Layer 3 VPN application that is built on top of various unicast and multicast routing protocols such as Protocol Independent Multicast (PIM), BGP, RSVP, and LDP. Enabling nonstop active routing (NSR) for BGP MVPN requires that NSR support is enabled for all these protocols.

The state maintained by MVPN includes MVPN routes, cmcast, provider-tunnel, and forwarding information. BGP MVPN NSR synchronizes this MVPN state between the master and backup Routing Engines. While some of the state on the backup Routing Engine is locally built based on the configuration, most of it is built based on triggers from other protocols that MVPN interacts with. The triggers from these protocols are in turn the result of state replication performed by these modules. This includes route change notifications by unicast protocols, join and prune triggers from PIM, remote MVPN route notification by BGP, and provider-tunnel related notifications from RSVP and LDP.

Configuring NSR and unified in-service software upgrade (ISSU) support to the BGP MVPN protocol provides features such as various provider tunnel types, different MVPN modes (source tree, shared-tree), and PIM features. As a result, at the ingress PE, replication is turned on for dynamic LSPs. Thus, when NSR is configured, the state for dynamic LSPs is also replicated to the backup Routing Engine. After the state is resolved on the backup Routing Engine, RSVP sends required notifications to MVPN.

To enable BGP MVPN NSR support, the [advertise-from-main-vpn-tables](#) configuration statement needs to be configured at the `[edit protocols bgp]` hierarchy level.

Nonstop active routing configurations include two Routing Engines that share information so that routing is not interrupted during Routing Engine failover. When NSR is configured on a dual Routing Engine platform, the PIM control state is replicated on both Routing Engines.

This PIM state information includes:

- Neighbor relationships
- Join and prune information
- RP-set information
- Synchronization between routes and next hops and the forwarding state between the two Routing Engines

Junos OS supports NSR in the following PIM scenarios:

- Dense mode
- Sparse mode
- SSM
- Static RP
- Auto-RP (for IPv4 only)



- Bootstrap router
- Embedded RP on the non-RP router (for IPv6 only)
- BFD support
- Draft Rosen multicast VPNs and BGP multicast VPNs
- Policy features such as neighbor policy, bootstrap router export and import policies, scope policy, flow maps, and reverse path forwarding (RPF) check policies

Before you begin:

- Configure the router interfaces. See *Interfaces Fundamentals for Routing Devices*.
- Configure an interior gateway protocol or static routing. See the *Junos OS Routing Protocols Library*.
- Configure a multicast group membership protocol (IGMP or MLD). See *Understanding IGMP* and *Understanding MLD*.
- For this feature to work with IPv6, the routing device must be running Junos OS Release 10.4 or later.

To configure nonstop active routing:

1. Because NSR requires you to configure graceful Routing Engine switchover (GRES), to enable GRES, include the **graceful-switchover** statement at the **[edit chassis redundancy]** hierarchy level.

```
[edit]
user@host# set chassis redundancy graceful-switchover
```

2. Include the **synchronize** statement at the **[edit system]** hierarchy level so that configuration changes are synchronized on both Routing Engines.

```
[edit system]
user@host# set synchronize
user@host# exit
```

3. Configure PIM settings on the designated router with *sparse mode* and *version*, and *static* address pointing to the rendezvous points.

```
[edit protocols pim]
user@host# set rp static address address
user@host# set interface interface-name mode sparse
user@host# set interface interface-name version 2
```

For example, to set sparse mode, version 2 and static address:



```
[edit protocols pim]
user@host# set rp static address 10.210.255.202
user@host# set interface fe-0/1/3.0 mode sparse
user@host# set interface fe-0/1/3.0 version 2
```

4. Configure per-packet load balancing on the designated router.

```
[edit policy-options policy-statement policy-name]
user@host# set then policy-name per-packet
```

For example, to set load-balance policy:

```
[edit policy-options policy-statement load-balance]
user@host# set then load-balance per-packet
```

5. Apply the load-balance policy on the designated router.

```
[edit]
user@host# set routing-options forwarding-table export load-balance
```

6. Configure nonstop active routing on the designated router.

```
[edit]
user@host# set routing-options nonstop-routing
user@host# set routing-options router-id address
```

For example, to set nonstop active routing on the designated router with address 10.210.255.201:

```
[edit]
user@host# set routing-options router-id 10.210.255.201
```

## SEE ALSO

*Configuring Basic PIM Settings*

*Understanding Nonstop Active Routing for PIM*



RELATED DOCUMENTATION

<i>Graceful Restart and Layer 2 and Layer 3 VPNs</i>
<i>Graceful Restart System Requirements</i>
<i>Graceful Restart Concepts</i>
<i>Verifying Graceful Restart Operation</i>



# 8

CHAPTER

## Troubleshooting Layer 3 VPNs

---

Pinging VPNs | **1183**

Troubleshooting Layer 3 VPNs | **1185**

---







# Pinging VPNs

## IN THIS SECTION

- [Pinging VPNs, VPLS, and Layer 2 Circuits | 1183](#)
- [Setting the Forwarding Class of the Ping Packets | 1184](#)
- [Pinging a VPLS Routing Instance | 1184](#)
- [Pinging a Layer 3 VPN | 1185](#)

## Pinging VPNs, VPLS, and Layer 2 Circuits

For testing purposes, you can ping Layer 2 VPNs, Layer 3 VPNs, and Layer 2 circuits by using the **ping mpls** command. The **ping mpls** command helps to verify that a VPN or circuit has been enabled and tests the integrity of the VPN or Layer 2 circuit connection between the PE routers. It does not test the connection between a PE router and a CE router. To ping a VPLS routing instance, you issue a **ping vpls instance** command (see [“Pinging a VPLS Routing Instance” on page 1184](#)).

You issue the **ping mpls** command from the ingress PE router of the VPN or Layer 2 circuit to the egress PE router of the same VPN or Layer 2 circuit. When you execute the **ping mpls** command, echo requests are sent as MPLS packets.

The payload is a User Datagram Protocol (UDP) packet forwarded to the address **127.0.0.1**. The contents of this packet are defined in RFC 4379, *Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures*. The label and interface information for building and sending this information as an MPLS packet is the same as for standard VPN traffic, but the time-to-live (TTL) of the innermost label is set to 1.

When the echo request arrives at the egress PE router, the contents of the packet are checked, and then a reply that contains the correct return is sent by means of UDP. The PE router sending the echo request waits to receive an echo reply after a timeout of 2 seconds (you cannot configure this value).

You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the egress PE router (the router receiving the MPLS echo packets) to be able to ping the VPN or Layer 2 circuit. You must also configure the address **127.0.0.1/32** on the egress PE router's **lo0** interface. If this is not configured, the egress PE router does not have this forwarding entry and therefore simply drops the incoming MPLS pings.

The **ping mpls** command has the following limitations:

- You cannot ping an IPv6 destination prefix.



- You cannot ping a VPN or Layer 2 circuit from a router that is attempting a graceful restart.
- You cannot ping a VPN or Layer 2 circuit from a logical system.

You can also determine whether an LSP linking two PE routers in a VPN is up by pinging the end point address of the LSP. The command you use to ping an MPLS LSP end point is **ping mpls lsp-end-point address**. This command tells you what type of LSP (RSVP or LDP) terminates at the address specified and whether that LSP is up or down.

For a detailed description of this command, see the *Junos Routing Protocols and Policies Command Reference*.

## Setting the Forwarding Class of the Ping Packets

When you execute the **ping mpls** command, the ping packets forwarded to the destination include MPLS labels. It is possible to set the value of the forwarding class for these ping packets by using the **exp** option with the **ping mpls** command. For example, to set the forwarding class to 5 when pinging a Layer 3 VPN, issue the following command:

```
ping mpls l3vpn westcoast source 192.0.2.0 prefix 192.0.2.1 exp 5 count 20 detail
```

This command would make the router attempt to ping the Layer 3 VPN **westcoast** using ping packets with an EXP forwarding class of 5. The default forwarding class used for the **ping mpls** command packets is 7.

## Pinging a VPLS Routing Instance

The **ping vpls instance** command uses a different command structure and operates in a different fashion than the **ping mpls** command used for VPNs and Layer 2 circuits. The **ping vpls instance** command is only supported on MX Series routers, the M120 router, the M320 router, and the T1600 router.

To ping a VPLS routing instance, use the following command:

```
ping vpls instance instance-name destination-mac address source-ip address <count number> <data-plane-response>
<detail> <learning-vlan-id number> <logical-system logical-system-name>
```

Pinging a VPLS routing instance requires using the **ping vpls instance** command with a combination of the routing instance name, the destination MAC address, and the source IP address (IP address of the outgoing interface).

When you run this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received.



within the timeout period. An **x** indicates that an echo reply was received with an error code these packets are not counted in the received packets count. They are accounted for separately.

For more details, including argument descriptions and additional options, see [ping vpls instance](#).

## Pinging a Layer 3 VPN

To ping a Layer 3 VPN, use the following command:

```
ping mpls l3vpn l3vpn-name prefix prefix <count count>
```

You ping a combination of an IPv4 destination prefix and a Layer 3 VPN name on the egress PE router to test the integrity of the VPN connection between the ingress and egress PE routers. The destination prefix corresponds to a prefix in the Layer 3 VPN. However, the ping tests only whether the prefix is present in a PE router's VRF table. It does not test the connection between a PE router and a CE router.

# Troubleshooting Layer 3 VPNs

### IN THIS SECTION

- [Diagnosing Common Layer 3 VPN Problems | 1185](#)
- [Example: Troubleshooting Layer 3 VPNs | 1190](#)
- [Example: Diagnosing Networking Problems Related to Layer 3 VPNs by Disabling TTL Decrementing | 1201](#)

## Diagnosing Common Layer 3 VPN Problems

### Problem

**Description:** To troubleshoot problems in the Layer 3 VPN configuration, start at one end of the VPN (the local customer edge [CE] router) and follow the routes to the other end of the VPN (the remote CE router).

### Solution



The following troubleshooting steps should help you diagnose common problems:

1. If you configured a routing protocol between the local provider edge (PE) and CE routers, check that the peering and adjacency are fully operational. When you do this, be sure to specify the name of the routing instance. For example, to check OSPF adjacencies, enter the **show ospf neighbor instance *routing-instance-name*** command on the PE router.

If the peering and adjacency are not fully operational, check the routing protocol configuration on the CE router and check the routing protocol configuration for the associated VPN routing instance on the PE router.

2. Check that the local CE and PE routers can ping each other.

To check that the local CE router can ping the VPN interface on the local PE router, use a **ping** command in the following format, specifying the IP address or name of the PE router:

```
user@host> ping (ip-address | host-name)
```

To check that the local PE router can ping the CE router, use a **ping** command in the following format, specifying the IP address or name of the CE router, the name of the interface used for the VPN, and the source IP address (the local address) in outgoing echo request packets:

```
user@host> ping ip-address interface interface local echo-address
```

Often, the peering or adjacency between the local CE and local PE routers must come up before a **ping** command is successful. To check that a link is operational in a lab setting, remove the interface from the VPN routing and forwarding (VRF) by deleting the **interface** statement from the **[edit routing-instance *routing-instance-name*]** hierarchy level and recommitting the configuration. Doing this removes the interface from the VPN. Then try the **ping** command again. If the command is successful, configure the interface back into the VPN and check the routing protocol configuration on the local CE and PE routers again.

3. On the local PE router, check that the routes from the local CE router are in the VRF table (*routing-instance-name.inet.0*):

```
user@host> show route table routing-instance-name.inet.0 <detail>
```

The following example shows the routing table entries. Here, the loopback address of the CE router is **10.255.14.155/32** and the routing protocol between the PE and CE routers is BGP. The entry looks like any ordinary BGP announcement.

```
10.255.14.155/32 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
```



```

Nextthop: 192.168.197.141 via fe-1/0/0.0, selected
State: <Active Ext>
Peer AS:      1
Age: 45:46
Task: BGP_1.192.168.197.141+179
Announcement bits (2): 0-BGP.0.0.0.0+179 1-KRT
AS path: 1 I
Localpref: 100
Router ID: 10.255.14.155

```

If the routes from the local CE router are not present in the VRF routing table, check that the CE router is advertising routes to the PE router. If static routing is used between the CE and PE routers, make sure the proper static routes are configured.

4. On a remote PE router, check that the routes from the local CE router are present in the `bgp.l3vpn.0` routing table:

```
user@host> show route table bgp.l3vpn.0 extensive
```

```

10.255.14.175:3:10.255.14.155/32 (1 entry, 0 announced)
  *BGP      Preference: 170/-101
            Route Distinguisher: 10.255.14.175:3
            Source: 10.255.14.175
            Nextthop: 192.168.192.1 via fe-1/1/2.0, selected
            label-switched-path vpn07-vpn05
            Push 100004, Push 100005(top)
            State: <Active Int Ext>
            Local AS:      69 Peer AS:      69
            Age: 15:27      Metric2: 338
            Task: BGP_69.10.255.14.175+179
            AS path: 1 I
            Communities: target:69:100
            BGP next hop: 10.255.14.175
            Localpref: 100
            Router ID: 10.255.14.175
            Secondary tables: VPN-A.inet.0

```

The output of the `show route table bgp.l3vpn.0 extensive` command contains the following information specific to the VPN:



- In the prefix name (the first line of the output), the route distinguisher is added to the route prefix of the local CE router. Because the route distinguisher is unique within the Internet, the concatenation of the route distinguisher and IP prefix provides unique VPN-IP version 4 (IPv4) routing entries.
- The **Route Distinguisher** field lists the route distinguisher separately from the VPN-IPv4 address.
- The **label-switched-path** field shows the name of the label-switched path (LSP) used to carry the VPN traffic.
- The **Push** field shows both labels being carried in the VPN-IPv4 packet. The first label is the inner label, which is the VPN label that was assigned by the PE router. The second label is the outer label, which is an RSVP label.
- The **Communities** field lists the target community.
- The **Secondary tables** field lists other routing tables on this router into which this route has been installed.

If routes from the local CE router are not present in the `bgp.l3vpn.0` routing table on the remote PE router, do the following:

- Check the VRF import filter on the remote PE router, which is configured in the **vrf-import** statement. (On the local PE router, you check the VRF export filter, which is configured with the **vrf-export** statement.)
- Check that there is an operational LSP or an LDP path between the PE routers. To do this, check that the IBGP next-hop addresses are in the `inet.3` table.
- Check that the IBGP session between the PE routers is established and configured properly.
- Check for “hidden” routes, which usually means that routes were not labeled properly. To do this, use the **show route table bgp.l3vpn.0 hidden** command.
- Check that the inner label matches the inner VPN label that is assigned by the local PE router. To do this, use the **show route table mpls** command.

The following example shows the output of this command on the remote PE router. Here, the inner label is **100004**.

```
...
Push 100004, Push 10005 (top)
```

The following example shows the output of this command on the local PE router, which shows that the inner label of **100004** matches the inner label on the remote PE router:

```
...
100004          *[VPN/7] 06:56:25, metric 1
> to 192.168.197.141 via fe-1/0/0.0, Pop
```



5. On the remote PE router, check that the routes from the local CE router are present in the VRF table (*routing-instance-name.inet.0*):

```
user@host> show route table routing-instance-name.inet.0 detail
```

```
10.255.14.155/32 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
            Route Distinguisher: 10.255.14.175:3
            Source: 10.255.14.175
            Nexthop: 192.168.192.1 via fe-1/1/2.0, selected
            label-switched-path vpn07-vpn05
            Push 100004, Push 100005(top)
            State: <Secondary Active Int Ext>
            Local AS: 69 Peer AS: 69
            Age: 1:16:22 Metric2: 338
            Task: BGP_69.10.255.14.175+179
            Announcement bits (2): 1-KRT 2-VPN-A-RIP
            AS path: 1 I
            Communities: target:69:100
            BGP next hop: 10.255.14.175
            Localpref: 100
            Router ID: 10.255.14.175
            Primary Routing Table bgp.l3vpn.0
```

In this routing table, the route distinguisher is no longer prepended to the prefix. The last line, **Primary Routing Table**, lists the table from which this route was learned.

If the routes are not present in this routing table, but were present in the `bgp.l3vpn.0` routing table on the local CE router, the routes might have not passed the VRF import policy on the remote PE router.

If a VPN-IPv4 route matches no **vrf-import** policy, the route does not show up in the `bgp.l3vpn` table at all and hence is not present in the VRF table. If this occurs, it might indicate that on the PE router, you have configured another **vrf-import** statement on another VPN (with a common target), and the routes show up in the `bgp.l3vpn.0` table, but are imported into the wrong VPN.

6. On the remote CE router, check that the routes from the local CE router are present in the routing table (`inet.0`):

```
user@host> show route
```



If the routes are not present, check the routing protocol configuration between the remote PE and CE routers, and make sure that peers and adjacencies (or static routes) between the PE and CE routers are correct.

7. If you determine that routes originated from the local CE router are correct, check the routes originated from the remote CE router by repeating this procedure.

## Example: Troubleshooting Layer 3 VPNs

### IN THIS SECTION

- [Requirements | 1190](#)
- [Overview | 1191](#)
- [Pinging the CE Router from Another CE Router | 1191](#)
- [Pinging the Remote PE and CE Routers from the Local CE Router | 1193](#)
- [Pinging a CE Router from a Multiaccess Interface | 1194](#)
- [Pinging the Directly Connected PE Routers from the CE Routers | 1196](#)
- [Pinging the Directly Connected CE Routers from the PE Routers | 1198](#)
- [Pinging the Remote CE Router from the Local PE Router | 1200](#)
- [Troubleshooting Inconsistently Advertised Routes from Gigabit Ethernet Interfaces | 1201](#)

This example shows how to use the **ping** command to check the accessibility of various routers in a VPN topology, and how to use the **tracert** command to check the path that packets travel between the VPN routers.

### Requirements

This example uses the following hardware and software components:

- M Series routers
- Junos OS Release 10.0R1 and later




Overview

Topology

The topology shown in [Figure 92 on page 1191](#) illustrates the network used in this example to demonstrate how to employ the ping and traceroute commands to test connectivity between the routers participating in a Layer 3 VPN.

Figure 92: Layer 3 VPN Topology for ping and traceroute Examples

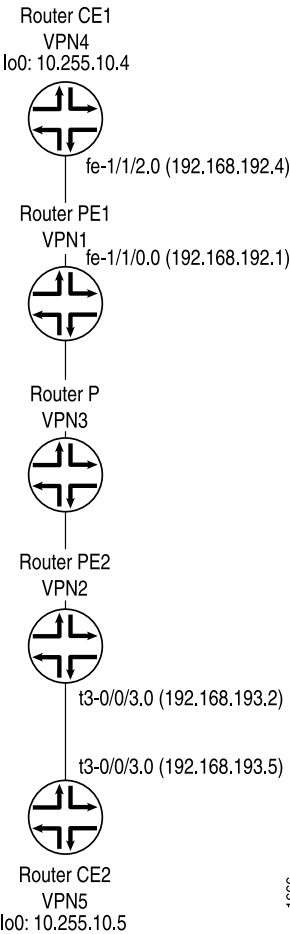

1666

Pinging the CE Router from Another CE Router

Step-by-Step Procedure



The following describes how to use the **ping** and **tracert** commands to troubleshoot Layer 3 VPN topologies. You can ping one CE router from the other by specifying the other CE router's loopback address as the IP address in the **ping** command. This **ping** command succeeds if the loopback addresses have been announced by the CE routers to their directly connected PE routers. The success of these **ping** commands also means that Router CE1 can ping any network devices beyond Router CE2, and vice versa.

[Figure 92 on page 1191](#) shows the topology referenced in the following steps:

1. Ping Router CE2 (VPN5) from Router CE1 (VPN4):

```
user@vpn4> ping 10.255.10.5 local 10.255.10.4 count 3
```

```
PING 10.255.10.5 (10.255.10.5): 56 data bytes
64 bytes from 10.255.10.5: icmp_seq=0 ttl=253 time=1.086 ms
64 bytes from 10.255.10.5: icmp_seq=1 ttl=253 time=0.998 ms
64 bytes from 10.255.10.5: icmp_seq=2 ttl=253 time=1.140 ms
--- 10.255.10.5 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.998/1.075/1.140/0.059 ms
```

2. To determine the path from Router CE1's loopback interface to Router CE2's loopback interface, use the **tracert** command:

```
user@vpn4> tracert 10.255.10.5 source 10.255.10.4
```

```
tracert to 10.255.10.5 (10.255.10.5) from 10.255.10.4, 30 hops max, 40 byte
packets
 1  vpn1-fe-110.isp-core.net (192.168.192.1)  0.680 ms  0.491 ms  0.456 ms
 2  vpn2-t3-001.isp-core.net (192.168.192.110)  0.857 ms  0.766 ms  0.754 ms
    MPLS Label=100005 CoS=0 TTL=1 S=1
 3  vpn5.isp-core.net (10.255.10.5)  0.825 ms  0.886 ms  0.732 ms
```

3. When you use the **tracert** command to examine the path used by a Layer 3 VPN, the provider (P) routers in the service provider's network are not displayed. As shown above, the jump from Router VPN1 to Router VPN2 is displayed as a single hop. The P router (VPN3) shown in [Figure 92 on page 1191](#) is not displayed.
4. Ping Router CE1 (VPN4) from Router CE2 (VPN5):

```
user@vpn5> ping 10.255.10.4 local 10.255.10.5 count 3
```

```
PING 10.255.10.4 (10.255.10.4): 56 data bytes
64 bytes from 10.255.10.4: icmp_seq=0 ttl=253 time=1.042 ms
64 bytes from 10.255.10.4: icmp_seq=1 ttl=253 time=0.998 ms
64 bytes from 10.255.10.4: icmp_seq=2 ttl=253 time=0.954 ms
```



```

--- 10.255.10.4 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.954/0.998/1.042/0.036 ms

```

5. To determine the path from Router CE2 to Router CE1, use the **traceroute** command:

```
user@vpn5> traceroute 10.255.10.4 source 10.255.10.5
```

```

traceroute to 10.255.10.4 (10.255.10.4) from 10.255.10.5, 30 hops max, 40 byte
packets
 1  vpn-08-t3-003.isp-core.net (192.168.193.2)  0.686 ms  0.519 ms  0.548 ms
 2  vpn1-so-100.isp-core.net (192.168.192.100)  0.918 ms  0.869 ms  0.859 ms
    MPLS Label=100021 CoS=0 TTL=1 S=1
 3  vpn4.isp-core.net (10.255.10.4)  0.878 ms  0.760 ms  0.739 ms

```

## Pinging the Remote PE and CE Routers from the Local CE Router

### Step-by-Step Procedure

From the local CE router, you can ping the VPN interfaces on the remote PE and CE routers, which are point-to-point interfaces. [Figure 92 on page 1191](#) shows the topology referenced in the following examples:

1. Ping router CE2 from router CE1.

```
user@vpn4> ping 192.168.193.5 local 10.255.10.4 count 3
```

```

PING 192.168.193.5 (192.168.193.5): 56 data bytes
64 bytes from 192.168.193.5: icmp_seq=0 ttl=253 time=1.040 ms
64 bytes from 192.168.193.5: icmp_seq=1 ttl=253 time=0.891 ms
64 bytes from 192.168.193.5: icmp_seq=2 ttl=253 time=0.944 ms
--- 192.168.193.5 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.891/0.958/1.040/0.062 ms

```

2. To determine the path from Router CE1's loopback interface to Router CE2's directly connected interface, use the **traceroute** command:

```
user@vpn4> traceroute 192.168.193.5 source 10.255.10.4
```

```

traceroute to 192.168.193.5 (192.168.193.5) from 10.255.10.4, 30 hops max,
40 byte packets
 1  vpn1-fe-110.isp-core.net (192.168.192.1)  0.669 ms  0.508 ms  0.457 ms
 2  vpn2-t3-001.isp-core.net (192.168.192.110)  0.851 ms  0.769 ms  0.750 ms

```



```
MPLS Label=100000 CoS=0 TTL=1 S=1
3  vpn5-t3-003.isp-core.net (192.168.193.5)  0.829 ms  0.838 ms  0.731 ms
```

3. Ping Router PE2 (VPN2) from Router CE1 (VPN4). In this case, packets that originate at Router CE1 go to Router PE2, then to Router CE2, and back to Router PE2 before Router PE2 can respond to Internet Control Message Protocol (ICMP) requests. You can verify this by using the **tracert** command.

```
user@vpn4> ping 192.168.193.2 local 10.255.10.4 count 3
```

```
PING 192.168.193.2 (192.168.193.2): 56 data bytes
64 bytes from 192.168.193.2: icmp_seq=0 ttl=254 time=1.080 ms
64 bytes from 192.168.193.2: icmp_seq=1 ttl=254 time=0.967 ms
64 bytes from 192.168.193.2: icmp_seq=2 ttl=254 time=0.983 ms
--- 192.168.193.2 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.967/1.010/1.080/0.050 ms
```

4. To determine the path from Router CE1 to Router PE2, use the **tracert** command:

```
user@vpn4> tracert 192.168.193.2 source 10.255.10.4
```

```
tracert to 192.168.193.2 (192.168.193.2) from 10.255.10.4, 30 hops max,
40 byte packets
1  vpn1-fe-110.isp-core.net (192.168.192.1)  0.690 ms  0.490 ms  0.458 ms
2  vpn2-t3-003.isp-core.net (192.168.193.2)  0.846 ms  0.768 ms  0.749 ms
   MPLS Label=100000 CoS=0 TTL=1 S=1
3  vpn5-t3-003.isp-core.net (192.168.193.5)  0.643 ms  0.703 ms  0.600 ms
4  vpn-08-t3-003.isp-core.net (192.168.193.2)  0.810 ms  0.739 ms  0.729 ms
```

## Pinging a CE Router from a Multiaccess Interface

### Step-by-Step Procedure

You cannot ping one CE router from the other if the VPN interface is a multiaccess interface, such as the **fe-1/1/2.0** interface on Router CE1. To ping Router CE1 from Router CE2, you must either include the **vrf-table-label** statement at the **[edit routing-instances routing-instance-name]** hierarchy level on Router PE1 or configure a static route on Router PE1 to the VPN interface of Router CE1. If you include the **vrf-table-label** statement to ping a router, you cannot configure a static route.

1. If you configure a static route on Router PE1 to the VPN interface of Router CE1, its next hop must point to Router CE1 (at the **[edit routing-instance routing-instance-name]** hierarchy level), and this route must be announced from Router PE1 to Router PE2 as shown in the following configuration:



```

[edit]
routing-instances {
  direct-multipoint {
    instance-type vrf;
    interface fe-1/1/0.0;
    route-distinguisher 69:1;
    vrf-import direct-import;
    vrf-export direct-export;
    routing-options {
      static {
        route 192.168.192.4/32 next-hop 192.168.192.4;
      }
    }
  }
  protocols {
    bgp {
      group to-vpn4 {
        peer-as 1;
        neighbor 192.168.192.4;
      }
    }
  }
}
policy-options {
  policy-statement direct-export {
    term a {
      from protocol bgp;
      then {
        community add direct-comm;
        accept;
      }
    }
    term b {
      from {
        protocol static;
        route-filter 192.168.192.4/32 exact;
      }
      then {
        community add direct-comm;
        accept;
      }
    }
    term d {
      then reject;
    }
  }
}

```



```

    }
  }
}

```

2. Now you can ping Router CE1 from Router CE2:

```
user@vpn5> ping 192.168.192.4 local 10.255.10.5 count 3
```

```

PING 192.168.192.4 (192.168.192.4): 56 data bytes
64 bytes from 192.168.192.4: icmp_seq=0 ttl=253 time=1.092 ms
64 bytes from 192.168.192.4: icmp_seq=1 ttl=253 time=1.019 ms
64 bytes from 192.168.192.4: icmp_seq=2 ttl=253 time=1.031 ms
--- 192.168.192.4 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.019/1.047/1.092/0.032 ms

```

3. To determine the path between these two interfaces, use the **traceroute** command:

```
user@vpn5> traceroute 192.168.192.4 source 10.255.10.5
```

```

traceroute to 192.168.192.4 (192.168.192.4) from 10.255.10.5, 30 hops max,
40 byte packets
 1  vpn-08-t3003.isp-core.net (192.168.193.2)  0.678 ms  0.549 ms  0.494 ms
 2  vpn1-so-100.isp-core.net (192.168.192.100)  0.873 ms  0.847 ms  0.844 ms
    MPLS Label=100021 CoS=0 TTL=1 S=1
 3  vpn4-fe-112.isp-core.net (192.168.192.4)  0.825 ms  0.743 ms  0.764 ms

```

## Pinging the Directly Connected PE Routers from the CE Routers

### Step-by-Step Procedure



From the loopback interfaces on the CE routers, you can ping the VPN interface on the directly connected PE router. [Figure 92 on page 1191](#) shows the topology referenced in this procedure:

1. From the loopback interface on Router CE1 (VPN4), ping the VPN interface, **fe-1/1/0.0**, on Router PE1:

```
user@vpn4> ping 192.168.192.1 local 10.255.10.4 count 3
```

```
PING 192.168.192.1 (192.168.192.1): 56 data bytes
64 bytes from 192.168.192.1: icmp_seq=0 ttl=255 time=0.885 ms
64 bytes from 192.168.192.1: icmp_seq=1 ttl=255 time=0.757 ms
64 bytes from 192.168.192.1: icmp_seq=2 ttl=255 time=0.734 ms
--- 192.168.192.1 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.734/0.792/0.885/0.066 ms
```

2. From the loopback interface on Router CE2 (VPN5), ping the VPN interface, **t3-0/0/3.0**, on Router PE2:

```
user@vpn5> ping 192.168.193.2 local 10.255.10.5 count 3
```

```
PING 192.168.193.2 (192.168.193.2): 56 data bytes
64 bytes from 192.168.193.2: icmp_seq=0 ttl=255 time=0.998 ms
64 bytes from 192.168.193.2: icmp_seq=1 ttl=255 time=0.834 ms
64 bytes from 192.168.193.2: icmp_seq=2 ttl=255 time=0.819 ms
--- 192.168.193.2 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.819/0.884/0.998/0.081 ms
```

3. From the loopback interface on Router CE2 (VPN5), ping the VPN interface, **t3-0/0/3.0**, on Router PE2:

```
user@vpn5> ping 192.168.193.2 local 10.255.10.5 count 3
```

```
PING 192.168.193.2 (192.168.193.2): 56 data bytes
64 bytes from 192.168.193.2: icmp_seq=0 ttl=255 time=0.998 ms
64 bytes from 192.168.193.2: icmp_seq=1 ttl=255 time=0.834 ms
64 bytes from 192.168.193.2: icmp_seq=2 ttl=255 time=0.819 ms
--- 192.168.193.2 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.819/0.884/0.998/0.081 ms
```

4. To determine the path from the loopback interface on Router CE2 to the VPN interfaces on Router PE2, use the **traceroute** command:

```
user@vpn5> traceroute 192.168.193.2 source 10.255.10.5
```



```
tracert to 192.168.193.2 (192.168.193.2) from 10.255.10.5, 30 hops max,
40 byte packets
 1  vpn-08-t3003.isp-core.net (192.168.193.2)  0.852 ms  0.670 ms  0.656 ms
```

## Pinging the Directly Connected CE Routers from the PE Routers

### Step-by-Step Procedure

From the VPN and loopback interfaces on the PE routers, you can ping the VPN interface on the directly connected CE router. [Figure 92 on page 1191](#) shows the topology referenced in this procedure:

1. From the VPN interface on the PE router (router PE1), you can ping the VPN or loopback interface on the directly connected CE router (router CE1).

From the VPN interface on Router PE1 (VPN1), ping the VPN interface, **fe-1/1/0.0**, on Router CE1:

```
user@vpn1> ping 192.168.192.4 interface fe-1/1/0.0 local 192.168.192.1 count 3
```

```
PING 192.168.192.4 (192.168.192.4): 56 data bytes
64 bytes from 192.168.192.4: icmp_seq=0 ttl=255 time=0.866 ms
64 bytes from 192.168.192.4: icmp_seq=1 ttl=255 time=0.728 ms
64 bytes from 192.168.192.4: icmp_seq=2 ttl=255 time=0.753 ms
--- 192.168.192.4 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.728/0.782/0.866/0.060 ms
```

2. From the VPN interface on Router PE1 (VPN1), ping the loopback interface, **10.255.10.4**, on Router CE1:

```
user@vpn1> ping 10.255.10.4 interface fe-1/1/0.0 local 192.168.192.1 count 3
```

```
PING 10.255.10.4 (10.255.10.4): 56 data bytes
64 bytes from 10.255.10.4: icmp_seq=0 ttl=255 time=0.838 ms
64 bytes from 10.255.10.4: icmp_seq=1 ttl=255 time=0.760 ms
64 bytes from 10.255.10.4: icmp_seq=2 ttl=255 time=0.771 ms
--- 10.255.10.4 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.760/0.790/0.838/0.034 ms
```

3. To determine the path from the VPN interface on Router PE1 to the VPN and loopback interfaces on Router CE1, respectively, use the following **tracert** commands:

```
user@vpn1> tracert 10.255.10.4 interface fe-1/1/0.0 source 192.168.192.1
```



```

traceroute to 10.255.10.4 (10.255.10.4) from 192.168.192.1, 30 hops max, 40 byte
  packets
  1  vpn4.isp-core.net (10.255.10.4)  0.842 ms  0.659 ms  0.621 ms
user@vpn1> traceroute 192.168.192.4 interface fe-1/1/0.0 source 192.168.192.1

traceroute to 192.168.192.4 (192.168.192.4) from 192.168.192.1, 30 hops max,
  40 byte packets
  1  vpn4-fe-112.isp-core.net (192.168.192.4)  0.810 ms  0.662 ms  0.640 ms

```

4. From the VPN interface on Router PE2 (VPN2), ping the VPN interface, **t3-0/0/3.0**, on Router CE2:

```

user@vpn2> ping 192.168.193.5 interface t3-0/0/3.0 local 192.168.193.2 count 3

```

```

PING 192.168.193.5 (192.168.193.5): 56 data bytes
64 bytes from 192.168.193.5: icmp_seq=0 ttl=255 time=0.852 ms
64 bytes from 192.168.193.5: icmp_seq=1 ttl=255 time=0.909 ms
64 bytes from 192.168.193.5: icmp_seq=2 ttl=255 time=0.793 ms
--- 192.168.193.5 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.793/0.851/0.909/0.047 ms

```

5. From the VPN interface on Router PE2 (VPN2), ping the loopback interface, **10.255.10.5**, on Router CE2:

```

user@vpn2> ping 10.255.10.5 interface t3-0/0/3.0 local 192.168.193.2 count 3

```

```

PING 10.255.10.5 (10.255.10.5): 56 data bytes
64 bytes from 10.255.10.5: icmp_seq=0 ttl=255 time=0.914 ms
64 bytes from 10.255.10.5: icmp_seq=1 ttl=255 time=0.888 ms
64 bytes from 10.255.10.5: icmp_seq=2 ttl=255 time=1.066 ms
--- 10.255.10.5 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.888/0.956/1.066/0.079 ms

```

6. To determine the path from the VPN interface on Router PE2 to the VPN and loopback interfaces on Router CE2, respectively, use the following **traceroute** commands:

```

user@vpn2> traceroute 10.255.10.5 interface t3-0/0/3.0 source 192.168.193.2

```

```

traceroute to 10.255.10.5 (10.255.10.5) from 192.168.193.2, 30 hops max, 40 byte
  packets
  1  vpn5.isp-core.net (10.255.10.5)  1.009 ms  0.677 ms  0.633 ms
user@vpn2> traceroute 192.168.193.5 interface t3-0/0/3.0 source 192.168.193.2

```



```
tracert to 192.168.193.5 (192.168.193.5) from 192.168.193.2, 30 hops max,
40 byte packets
 1  vpn5-t3-003.isp-core.net (192.168.193.5)  0.974 ms  0.665 ms  0.619 ms
```

## Pinging the Remote CE Router from the Local PE Router

### Step-by-Step Procedure

The following procedure is effective for Layer 3 VPNs only. To ping a remote CE router from a local PE router in a Layer 3 VPN, you need to configure the following interfaces:

1. Configure a logical unit for the loopback interface.

To configure an additional logical unit on the loopback interface of the PE router, configure the **unit** statement at the **[edit interfaces lo0]** hierarchy level:

```
[edit interfaces]
lo0 {
  unit number {
    family inet {
      address address;
    }
  }
}
```

2. Configure the loopback interface for the Layer 3 VPN routing instance on the local PE router. You can associate one logical loopback interface with each Layer 3 VPN routing instance, enabling you to ping a specific routing instance on a router.

Specify the loopback interface you configured in Step 1 using the **interface** statement at the **[edit routing-instances routing-instance-name]** hierarchy level:

```
[edit routing-instances routing-instance-name]
interface interface-name;
```

The **interface-name** is the logical unit on the loopback interface (for example, **lo0.1**).

3. From the VPN interface on PE router, you can now ping the logical unit on the loopback interface on the remote CE router:

```
user@host> ping interface interface host
```



Use **interface** to specify the new logical unit on the loopback interface (for example, **lo0.1**). For more information about how to use the **ping interface** command, see the *Junos Interfaces Command Reference*.

## Troubleshooting Inconsistently Advertised Routes from Gigabit Ethernet Interfaces

### Step-by-Step Procedure

For direct routes on a LAN in a Layer 3 VPN, the Junos OS attempts to locate a CE router that can be designated as the next hop. If this cannot be done, advertised routes from Gigabit Ethernet interfaces are dropped.

In such instances:

1. Use the **static** statement at the **[edit routing-options]** or **[edit logical-systems *logical-system-name* routing-options]** hierarchy levels in the VRF routing instance to a CE router on the LAN subnet, configuring the CE router as the next hop. All traffic to directly destinations on this LAN will go to the CE router. You can add two static routes to two CE routers on the LAN for redundancy.
2. Configure the **vrf-table-label** statement at the **[edit routing-instances *routing-instance-name*]** hierarchy levels to map the inner label of a packet to a specific VRF routing table. This allows the examination of the encapsulated IP header to force IP lookups on the VRF routing instance for all traffic.

**NOTE:** The **vrf-table-label** statement is not available for every core-facing interface; for example, channelized interfaces are not supported. See [“Filtering Packets in Layer 3 VPNs Based on IP Headers” on page 85](#) for information about support for the **vrf-table-label** statement over Ethernet and SONET/SDH interfaces.

## Example: Diagnosing Networking Problems Related to Layer 3 VPNs by Disabling TTL Decrementing

### IN THIS SECTION

- [Requirements | 1202](#)
- [Overview | 1202](#)
- [Configuration | 1203](#)
- [Verification | 1210](#)



This example shows how to disable TTL decrementing in a single VRF routing instance in a Layer 3 VPN scenario.

## Requirements

Before you begin:

- Configure the router interfaces. See the *Network Interfaces Configuration Guide*.

## Overview

To diagnose networking problems related to VPNs, it can be useful to disable normal time-to-live (TTL) decrementing. The IP header includes a TTL field that serves as a hop counter. At every routed hop, the TTL is decremented by one; if the TTL reaches zero before the packet reaches its destination, the packet is discarded and (optionally) an ICMP TTL exceeded message is sent to the source. MPLS labels also have a TTL field. MPLS routers copy the TTL of an IP packet when it enters a label-switched path (LSP). An IP packet with a TTL of 27 receives an MPLS label with a TTL of 27. Junos OS decrements the MPLS TTL of an MPLS-encapsulated packet in place of the IP TTL, at every label-switched hop. Because the MPLS TTL is copied (or propagated) from the IP TTL, a traceroute lists every hop in the path, be it routed or label-switched. When the packet exits the LSP, the decremented MPLS TTL is propagated back into the IP TTL field.

By default, TTL propagation is enabled. The global **no-propagate-ttl** statement disables TTL propagation at the router level and affects all RSVP-signalled or LDP-signalled LSPs. When a router acts as an ingress router for an LSP and the router configuration includes the **no-propagate-ttl** statement, the router pushes an MPLS header with a TTL value of 255, regardless of the IP packet TTL. When a router acts as the penultimate router, it pops the MPLS header without propagating the MPLS TTL into the IP packet. Thus the IP packet TTL value is preserved, regardless of the hop count of the LSP.

Instead of configuring TTL propagation behavior at the router level, you can configure the behavior for the routes in a VRF routing instance. This example shows how to disable TTL propagation for the routes in a single VRF routing instance instead of at the global router level.

The per-VRF configuration takes precedence over the global router configuration. If you disable TTL propagation on the router and explicitly enable TTL propagation for a single VRF routing instance, TTL propagation is in effect for that routing instance. To explicitly enable TTL propagation on a VRF routing instance, include the **vrf-propagate-ttl** statement in the routing instance.

When you change the TTL propagation behavior, old next hops for VRF routes are deleted from the inet.3 routing table and new next hops are added.


You need only configure the **vrf-propagate-ttl** or **no-vrf-propagate-ttl** statement on the ingress routers.



## Topology Diagram

Figure 93 on page 1203 shows the topology used in this example. Router PE1 and Router PE2 have two VPNs---VPN-A and VPN-B. Devices CE1 and CE4 belong to VPN-A. Devices CE2 and CE5 belong to VPN-B. In this example, Router PE1 has TTL propagation disabled on VPN-A but not on VPN-B. Packets received by PE1 on the interface connected to CE1 have TTL propagation disabled. This example shows the configuration on Router PE1. You do not need to include the **no-vrf-propagate-ttl** statement on the egress router (PE2).

Figure 93: Disabling TTL Propagation for a Single VPN

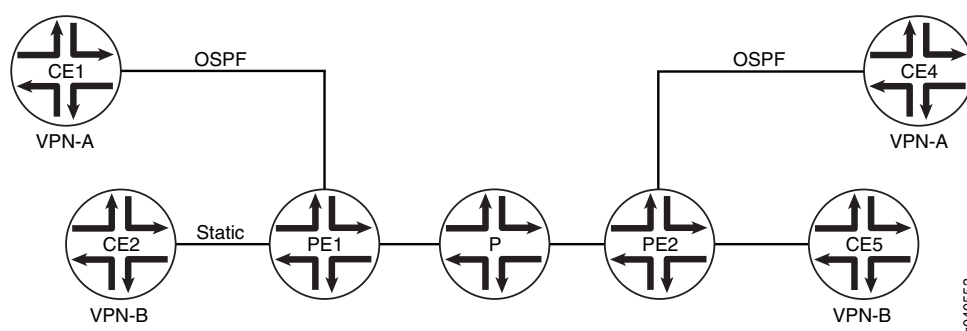

## Configuration

### CLI Quick Configuration

To quickly disable TTL propagation in a VRF routing instance, copy the following commands and paste the commands into the CLI.

```
[edit]
set interfaces lo0 unit 0 family inet address 10.255.179.45/32 primary
set protocols mpls interface all
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.179.45
set protocols bgp group ibgp family inet-vpn unicast
set protocols bgp group ibgp neighbor 10.255.179.71
set protocols ospf area 0.0.0.0 interface fe-1/1/2.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ldp interface all
set policy-options policy-statement VPN-A-export term a from protocol ospf
set policy-options policy-statement VPN-A-export term a from interface ge-1/2/0.0
set policy-options policy-statement VPN-A-export term a then community add VPN-A
set policy-options policy-statement VPN-A-export term a then accept
set policy-options policy-statement VPN-A-export term b then reject
set policy-options policy-statement VPN-A-import term a from protocol bgp
```



```

set policy-options policy-statement VPN-A-import term a from community VPN-A
set policy-options policy-statement VPN-A-import term a then accept
set policy-options policy-statement VPN-A-import term b then reject
set policy-options policy-statement VPN-B-export term a from protocol static
set policy-options policy-statement VPN-B-export term a then community add VPN-B
set policy-options policy-statement VPN-B-export term a then accept
set policy-options policy-statement VPN-B-export term b then reject
set policy-options policy-statement VPN-B-import term a from protocol bgp
set policy-options policy-statement VPN-B-import term a from community VPN-B
set policy-options policy-statement VPN-B-import term a then accept
set policy-options policy-statement VPN-B-import term b then reject
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf then accept
set policy-options community VPN-A members target:1:100
set policy-options community VPN-B members target:1:200
set routing-instances VPN-A instance-type vrf
set routing-instances VPN-A interface ge-1/2/0.0
set routing-instances VPN-A route-distinguisher 10.255.179.45:100
set routing-instances VPN-A interface ge-1/2/0.0
set routing-instances VPN-A no-vrf-propagate-ttl
set routing-instances VPN-A vrf-import VPN-A-import
set routing-instances VPN-A vrf-export VPN-A-export
set routing-instances VPN-A protocols ospf export bgp-to-ospf
set routing-instances VPN-A protocols ospf area 0.0.0.0 interface ge-1/2/0.0
set routing-instances VPN-B instance-type vrf
set routing-instances VPN-B interface so-0/1/0.0
set routing-instances VPN-B route-distinguisher 10.255.179.45:300
set routing-instances VPN-B vrf-import VPN-B-import
set routing-instances VPN-B vrf-export VPN-B-export
set routing-instances VPN-B routing-options static route 10.255.179.15/32 next-hop so-0/1/0.0
set routing-options autonomous-system 1

```

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure a flow map:

1. Configure the loopback interface.

```

[edit]
user@PE1# edit interfaces
[edit interfaces]
user@PE1# set lo0 unit 0 family inet address 10.255.179.45/32 primary

```



```
user@PE1# exit
```

## 2. Configure the routing protocols.

The internal BGP neighbor address is the loopback interface address of Router PE2 in [Figure 93 on page 1203](#).

```
[edit]
user@PE1# edit protocols
[edit protocols]
user@PE1# set mpls interface all
user@PE1# set bgp group ibgp type internal
user@PE1# set bgp group ibgp local-address 10.255.179.45
user@PE1# set bgp group ibgp family inet-vpn unicast
user@PE1# set bgp group ibgp neighbor 10.255.179.71
user@PE1# set ospf area 0.0.0.0 interface fe-1/1/2.0
user@PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
user@PE1# set ospf area 0.0.0.0 interface lo0.0
user@PE1# set ldp interface all
user@PE1# exit
```

## 3. Configure routing policies for VPN-A and VPN-B.

```
[edit]
user@PE1# edit policy-options
[edit policy-options]
user@PE1# set policy-statement VPN-A-export term a from protocol ospf
user@PE1# set policy-statement VPN-A-export term a from interface ge-1/2/0.0
user@PE1# set policy-statement VPN-A-export term a then community add VPN-A
user@PE1# set policy-statement VPN-A-export term a then accept
user@PE1# set policy-statement VPN-A-export term b then reject
user@PE1# set policy-statement VPN-A-import term a from protocol bgp
user@PE1# set policy-statement VPN-A-import term a from community VPN-A
user@PE1# set policy-statement VPN-A-import term a then accept
user@PE1# set policy-statement VPN-A-import term b then reject
user@PE1# set policy-statement VPN-B-export term a from protocol static
user@PE1# set policy-statement VPN-B-export term a then community add VPN-B
user@PE1# set policy-statement VPN-B-export term a then accept
user@PE1# set policy-statement VPN-B-export term b then reject
user@PE1# set policy-statement VPN-B-import term a from protocol bgp
user@PE1# set policy-statement VPN-B-import term a from community VPN-B
user@PE1# set policy-statement VPN-B-import term a then accept
```



```

user@PE1# set policy-statement VPN-B-import term b then reject
user@PE1# set policy-statement bgp-to-ospf from protocol bgp
user@PE1# set policy-statement bgp-to-ospf then accept
user@PE1# set community VPN-A members target:1:100
user@PE1# set community VPN-B members target:1:200
user@PE1# exit

```

4. Configure the VPN-A and VPN-B routing instances, including the **no-vrf-propagate-ttl** statement in VPN-A.

```

[edit]
user@PE1# edit routing-instances
[edit routing-instances]
user@PE1# set VPN-A instance-type vrf
user@PE1# set VPN-A interface ge-1/2/0.0
user@PE1# set VPN-A route-distinguisher 10.255.179.45:100
user@PE1# set VPN-A interface ge-1/2/0.0
user@PE1# set VPN-A no-vrf-propagate-ttl
user@PE1# set VPN-A vrf-import VPN-A-import
user@PE1# set VPN-A vrf-export VPN-A-export
user@PE1# set VPN-A protocols ospf export bgp-to-ospf
user@PE1# set VPN-A protocols ospf area 0.0.0.0 interface ge-1/2/0.0
user@PE1# set VPN-B instance-type vrf
user@PE1# set VPN-B interface so-0/1/0.0
user@PE1# set VPN-B route-distinguisher 10.255.179.45:300
user@PE1# set VPN-B vrf-import VPN-B-import
user@PE1# set VPN-B vrf-export VPN-B-export
user@PE1# set VPN-B routing-options static route 10.255.179.15/32 next-hop so-0/1/0.0
user@PE1# exit

```

5. Define the local autonomous system.

```

[edit]
user@PE1# edit routing-options
[edit routing-options]
user@PE1# set autonomous-system 1
user@PE1# exit

```



6. If you are done configuring the device, commit the configuration.

```
[edit]
user@PE1# commit
```

### Results

Confirm your configuration by entering the **show interfaces**, **show policy-options**, **show protocols**, **show routing-instances**, and **show routing-options** commands.

```
user@PE1# show interfaces
lo0 {
  unit 0 {
    family inet {
      address 10.255.179.45/32 {
        primary;
      }
    }
  }
}
```

```
user@PE1# show policy-options
policy-statement VPN-A-export {
  term a {
    from {
      protocol ospf;
      interface ge-1/2/0.0;
    }
    then {
      community add VPN-A;
      accept;
    }
  }
  term b {
    then reject;
  }
}
policy-statement VPN-A-import {
  term a {
    from {
      protocol bgp;
      community VPN-A;
    }
  }
}
```



```

        then accept;
    }
    term b {
        then reject;
    }
}
policy-statement VPN-B-export {
    term a {
        from protocol static;
        then {
            community add VPN-B;
            accept;
        }
    }
    term b {
        then reject;
    }
}
policy-statement VPN-B-import {
    term a {
        from {
            protocol bgp;
            community VPN-B;
        }
        then accept;
    }
    term b {
        then reject;
    }
}
policy-statement bgp-to-ospf {
    from protocol bgp;
    then accept;
}
community VPN-A members target:1:100;
community VPN-B members target:1:200;

```

```

user@PE1# show protocols
mpls {
    interface all;
}
bgp {
    group ibgp {
        type internal;
    }
}

```



```

    local-address 10.255.179.45;
    family inet-vpn {
        unicast;
    }
    neighbor 10.255.179.71;
}
}
ospf {
    area 0.0.0.0 {
        interface fe-1/1/2.0;
        interface fxp0.0 {
            disable;
        }
        interface lo0.0;
    }
}
ldp {
    interface all;
}

```

user@PE1# **show routing-instances**

```

VPN-A {
    instance-type vrf;
    interface ge-1/2/0.0;
    no-vrf-propagate-ttl;
    route-distinguisher 10.255.179.45:100;
    vrf-import VPN-A-import;
    vrf-export VPN-A-export;
    protocols {
        ospf {
            export bgp-to-ospf;
            area 0.0.0.0 {
                interface ge-1/2/0.0;
            }
        }
    }
}
VPN-B {
    instance-type vrf;
    interface so-0/1/0.0;
    route-distinguisher 10.255.179.45:300;
    vrf-import VPN-B-import;
    vrf-export VPN-B-export;
    routing-options {

```



```
static {  
    route 10.255.179.15/32 next-hop so-0/1/0.0;  
}  
}  
}
```

```
user@PE1# show routing-options  
autonomous-system 1;
```

## Verification

To verify the operation, run the following commands:

- See the **TTL Action** field in the output of the **show route extensive table VPN-A** command.
- See the **TTL Action** field in the output of the **show route extensive table VPN-B** command.
- On Device CE1, run the **traceroute** command to Device CE4's loopback address.
- On Device CE4, run the **traceroute** command to Device CE1's loopback address.

## SEE ALSO

| *Disabling Normal TTL Decrementing*



# 1

PART

## Configuration Statements and Operational Commands

---

Configuration Statements (All VPNs) | **1213**

Configuration Statements (Layer 3 VPNs) | **1247**

Operational Commands | **1415**

---







## Configuration Statements (All VPNs)

### IN THIS CHAPTER

- aggregate-label | 1214
- backup-neighbor | 1215
- description (Routing Instances) | 1217
- family route-target | 1218
- graceful-restart (Enabling Globally) | 1220
- instance-type | 1222
- interface (Routing Instances) | 1225
- no-forwarding | 1226
- forward-policy-mismatch (Security Group VPN Member) | 1227
- proxy-generate | 1228
- revert-time (Protocols Layer 2 Circuits) | 1229
- route-distinguisher | 1231
- route-distinguisher-id | 1235
- route-target-filter | 1236
- switchover-delay | 1238
- unicast-reverse-path | 1239
- vpn-apply-export | 1240
- vrf-export | 1241
- vrf-import | 1243
- vrf-mtu-check | 1244
- vrf-target | 1245



## aggregate-label

### Syntax

```
aggregate-label {
    community community-name;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp family inet labeled-unicast],
[edit logical-systems logical-system-name protocols bgp family inet6 labeled-unicast],
[edit logical-systems logical-system-name protocols bgp family inet-vpn unicast],
[edit logical-systems logical-system-name protocols bgp family inet-vpn6 unicast],
[edit protocols bgp family inet labeled-unicast],
[edit protocols bgp family inet6 labeled-unicast],
[edit protocols bgp family inet-vpn unicast],
[edit protocols bgp family inet6-vpn unicast]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

### Description

Specify matching criteria (in the form of a community) such that all routes which match are assigned the same VPN label, selected from one of the several routes in the set defined by this criteria. This reduces the number of VPN labels that the router must consider, and aggregates the received labels.

### Options

**community *community-name***—Specify the name of the community to which to apply the aggregate label.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring Aggregate Labels for VPNs](#) | 97



## backup-neighbor

### Syntax

```
backup-neighbor address {  
    community name;  
    mtu number;  
    hot-standby;  
    psn-tunnel-endpoint address;  
    standby;  
    static;  
    virtual-circuit-id number;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols l2circuit local-switching interface interface-name],  
[edit logical-systems logical-system-name protocols l2circuit neighbor address interface interface-name],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls neighbor address],  
[edit protocols l2circuit local-switching interface interface-name],  
[edit protocols l2circuit neighbor address interface interface-name],  
[edit routing-instances routing-instance-name protocols vpls neighbor address]
```

### Release Information

Statement introduced in Junos OS Release 9.2.

Statement introduced in Junos OS Release 12.2 for ACX Series routers.

Statement introduced in Junos OS Release 12.3 at the **[edit protocols l2circuit local-switching interface *interface-name*]** hierarchy level.

### Description

Configure pseudowire redundancy for Layer 2 circuits and VPLS. A redundant pseudowire can act as a backup connection and can be configured between a PE router and a CE device or between PE routers, maintaining Layer 2 circuit and VPLS services after certain types of failures. This feature can help improve the reliability of certain types of networks where a single point of failure could interrupt service for customers.

**NOTE:** VPLS is not supported on ACX Series routers. The **psn-tunnel-endpoint** statement is not supported at the **[edit protocols l2circuit local-switching interface *interface-name* end-interface *interface-name*]** hierarchy level.



**Options**

*address*—Specifies the address for the backup neighbor.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

<i>Configuring Pseudowire Redundancy on the PE Router</i>
<i>Example: Configuring Layer 2 Circuit Switching Protection</i>
<i>community (Protocols Layer 2 Circuit)</i>
<i>psn-tunnel-endpoint</i>
<i>virtual-circuit-id</i>



## description (Routing Instances)

### Syntax

```
description text;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit routing-instances routing-instance-name]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

### Description

Provide a text description for the routing instance. If the text includes one or more spaces, enclose it in quotation marks (" "). Any descriptive text you include is displayed in the output of the **show route instance detail** command and has no effect on the operation of the routing instance.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## family route-target

### Syntax

```
family route-target {
    advertise-default;
    external-paths number;
    prefix-limit number;
    proxy-generate <route-target-policy route-target-policy-name>;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp group group-name],
[edit logical-systems logical-system-name protocols bgp group group-name neighbor address],
[edit protocols bgp group group-name],
[edit protocols bgp group group-name neighbor address]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

### Description

Enable BGP route target filtering on the VPN.

The **family route-target** statement is useful for filtering VPN routes before they are sent. Provider edge (PE) routers inform the route reflector (RR) which routes to send, using **family route-target** to provide the route-target-interest information. The RR then sends to the PE router only the advertisements containing the specified route target.

### Options

**advertise-default**—Cause the router to advertise the default route target route (**0:0:0/0**) and suppress all routes that are more specific. This can be used by a route reflector on BGP groups consisting of neighbors that act as provider edge (PE) routers only. PE routers often need to advertise all routes to the route reflector. Suppressing all route target advertisements other than the default route reduces the amount of information exchanged between the route reflector and the PE routers. The Junos OS further helps to reduce route target advertisement overhead by not maintaining dependency information unless a nondefault route is received.

**external-paths *number***—Cause the router to advertise the VPN routes that reference a given route target. The number you specify with the **external-paths** statement determines the number of external peer routers (currently advertising that route target) that receive the VPN routes. The default value is **1**.

**prefix-limit *number***—The number of prefixes that can be received from a peer router.



The remaining statement is described separately.

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

---

[Configuring BGP Route Target Filtering for VPNs | 116](#)

---

[Understanding Proxy BGP Route Target Filtering for VPNs | 159](#)

---

[Example: Configuring an Export Policy for BGP Route Target Filtering for VPNs | 132](#)



## graceful-restart (Enabling Globally)

### Syntax

```
graceful-restart {  
  disable;  
  helper-disable;  
  maximum-helper-recovery-time seconds;  
  maximum-helper-restart-time seconds;  
  notify-duration seconds;  
  recovery-time seconds;  
  restart-duration seconds;  
  stale-routes-time seconds;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options],  
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],  
[edit routing-options],  
[edit routing-instances routing-instance-name routing-options]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 12.1 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

### Description

You configure the graceful restart routing option globally to enable the feature, but not to enable graceful restart for all routing protocols in a routing instance. To enable graceful restart globally, include the graceful-restart statement under the **[edit routing options]** hierarchy level. This enables graceful restart globally for all routing protocols. You can, optionally, modify the global settings at the individual protocol level.



**NOTE:**

- For VPNs, the **graceful-restart** statement allows a router whose VPN control plane is undergoing a restart to continue to forward traffic while recovering its state from neighboring routers.
- For BGP, if you configure graceful restart after a BGP session has been established, the BGP session restarts and the peers negotiate graceful restart capabilities.
- LDP sessions flap when **graceful-restart** configurations change.

**Default**

Graceful restart is disabled by default.

**Options**

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

---

[Enabling Graceful Restart](#)

---

[Configuring Routing Protocols Graceful Restart](#)

---

[Configuring Graceful Restart for MPLS-Related Protocols](#)

---

[Configuring VPN Graceful Restart](#)

---

[Configuring Logical System Graceful Restart](#)

---

[Configuring Graceful Restart for QFabric Systems](#)



## instance-type

### Syntax

```
instance-type type;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit routing-instances routing-instance-name]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

**virtual-switch** and **layer2-control** options introduced in Junos OS Release 8.4.

Statement introduced in Junos OS Release 9.2 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

**mpls-internet-multicast** option introduced in Junos OS Release 11.1 for the EX Series, M Series, MX Series, and T Series.

**evpn** option introduced in Junos OS Release 13.2 for MX 3D Series routers.

**evpn** option introduced in Junos OS Release 17.3 for the QFX Series.

**forwarding** option introduced in Junos OS Release 14.2 for the PTX Series.

**mpls-forwarding** option introduced in Junos OS Release 16.1 for the MX Series.

**evpn-vpws** option introduced in Junos OS Release 17.1 for MX Series routers.

Support for logical systems on MX Series routers added in Junos OS Release 17.4R1.

### Description

Define the type of routing instance.

### Options

**NOTE:** On ACX Series routers, you can configure only the forwarding, virtual router, and VRF routing instances.

**type**—Can be one of the following:

- **evpn**—(MX 3D Series routers, QFX switches and EX9200 switches)—Enable an Ethernet VPN (EVPN) on the routing instance.  
hierarchy level.
- **evpn-vpws**—Enable an Ethernet VPN (EVPN) Virtual Private Wire Service (VPWS) on the routing instance.



- **forwarding**—Provide support for filter-based forwarding, where interfaces are not associated with instances. All interfaces belong to the default instance. Other instances are used for populating RPD learned routes. For this instance type, there is no one-to-one mapping between an interface and a routing instance. All interfaces belong to the default instance inet.0.
- **l2backhaul-vpn**—Provide support for Layer 2 wholesale VLAN packets with no existing corresponding logical interface. When using this instance, the router learns both the outer tag and inner tag of the incoming packets, when the **instance-role** statement is defined as **access**, or the outer VLAN tag only, when the **instance-role** statement is defined as **nni**.
- **l2vpn**—Enable a Layer 2 VPN on the routing instance. You must configure the **interface**, **route-distinguisher**, **vrf-import**, and **vrf-export** statements for this type of routing instance.
- **layer2-control**—(MX Series routers only) Provide support for RSTP or MSTP in customer edge interfaces of a VPLS routing instance. This instance type cannot be used if the customer edge interface is multihomed to two provider edge interfaces. If the customer edge interface is multihomed to two provider edge interfaces, use the default BPDU tunneling.
- **mpls-forwarding**—(MX Series routers only) Allow filtering and translation of route distinguisher (RD) values in IPv4 and IPv6 VPN address families on both routes received and routes sent for selected BGP sessions. In particular, for Inter-AS VPN Option-B networks, this option can prevent the malicious injection of VPN labels from one peer AS boundary router to another.
- **mpls-internet-multicast**—(EX Series, M Series, MX Series, and T Series routers only) Provide support for ingress replication provider tunnels to carry IP multicast data between routers through an MPLS cloud, using MBGP or next-generation MVPN.
- **no-forwarding**—This is the default routing instance. Do not create a corresponding forwarding instance. Use this routing instance type when a separation of routing table information is required. There is no corresponding forwarding table. All routes are installed into the default forwarding table. IS-IS instances are strictly nonforwarding instance types.
- **virtual-router**—Enable a virtual router routing instance. This instance type is similar to a VPN routing and forwarding instance type, but used for non-VPN-related applications. You must configure the **interface** statement for this type of routing instance. You do not need to configure the **route-distinguisher**, **vrf-import**, and **vrf-export** statements.
- **virtual-switch**—(MX Series routers, EX9200 switches, and QFX switches only) Provide support for Layer 2 bridging. Use this routing instance type to isolate a LAN segment with its Spanning Tree Protocol (STP) instance and to separate its VLAN identifier space.



- **vpls**—Enable VPLS on the routing instance. Use this routing instance type for point-to-multipoint LAN implementations between a set of sites in a VPN. You must configure the **interface**, **route-distinguisher**, **vrf-import**, and **vrf-export** statements for this type of routing instance.
- **vrf**—VPN routing and forwarding (VRF) instance. Provides support for Layer 3 VPNs, where interface routes for each instance go into the corresponding forwarding table only. Required to create a Layer 3 VPN. Create a VRF table (**instance-name.inet.0**) that contains the routes originating from and destined for a particular Layer 3 VPN. For this instance type, there is a one-to-one mapping between an interface and a routing instance. Each VRF instance corresponds with a forwarding table. Routes on an interface go into the corresponding forwarding table. You must configure the **interface**, **route-distinguisher**, **vrf-import**, and **vrf-export** statements for this type of routing instance.

#### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

#### RELATED DOCUMENTATION

[Configuring the Instance Type | 55](#)

[Configuring EVPN Routing Instances](#)

[Configuring EVPN Routing Instances on EX9200 Switches](#)

[Configuring Virtual Router Routing Instances](#)

[Example: Configuring Filter-Based Forwarding on the Source Address](#)

[Example: Configuring Filter-Based Forwarding on Logical Systems](#)



## interface (Routing Instances)

### Syntax

```
interface interface-name {
    description text;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],
[edit routing-instances routing-instance-name]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.2 for EX Series switches.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 13.2 for MX 3D Series routers.

### Description

Specify the interface over which the VPN traffic travels between the PE device and CE device. You configure the interface on the PE device. If the value **vrf** is specified for the **instance-type** statement included in the routing instance configuration, this statement is required.

### Options

***interface-name***—Name of the interface.

The remaining statement is explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring Interfaces for VPN Routing | 56](#)

[Configuring EVPN Routing Instances](#)

[Configuring EVPN Routing Instances on EX9200 Switches](#)

[interface \(VPLS Routing Instances\)](#)



## no-forwarding

### Syntax

```
no-forwarding;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

### Description

Do not add ingress routes to the inet.0 routing table even if **traffic-engineering bgp-igp** (configured at the **[edit protocols mpls]** hierarchy level) is enabled.

### Default

The **no-forwarding** statement is disabled. Ingress routes are added to the inet.0 routing table instead of the inet.3 routing table when **traffic-engineering bgp-igp** is enabled.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

*Preventing Addition of Ingress Routes to the inet.0 Routing Table*

[Configuring Virtual-Router Routing Instances in VPNs](#) | 59



## forward-policy-mismatch (Security Group VPN Member)

### Syntax

```
vpn vpn-name {  
    ike-gateway gateway-number;  
    group group-number;  
    match-direction (input);  
    tunnel mtu mtu-size;  
}
```

### Hierarchy Level

```
[edit security group-vpn member ipsec]
```

### Release Information

Statement introduced in Junos OS Release 18.2R1.

### Description

Configure the forward policy mismatch for group VPN member.

### Required Privilege Level

security—To view this statement in the configuration.

security-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| [Group VPNv2 Overview](#)



## proxy-generate

### Syntax

```
proxy-generate <route-target-policy route-target-policy-name>;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp group group-name family route-target],
[edit logical-systems logical-system-name protocols bgp group group-name neighbor address family route-target],
[edit protocols bgp group group-name family route-target],
[edit protocols bgp group group-name neighbor address family route-target]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Enable proxy BGP route target filtering (also known as proxy route target constrain, or proxy RTC). This feature is useful if you have a network environment where route target filtering is not widely deployed or fully supported. When configured for proxy BGP route target filtering, the device creates route target membership (RT membership) on behalf of its peers that do not have the route target filtering functionality. The device then distributes the RT membership advertisements from incoming BGP VPN routes to other devices in the network that need them.

### Options

**route-target-policy *route-target-policy-name***—(Optional) Apply a routing policy that defines a subset of VPN routes to be used in your proxy BGP route target filter. The subset of VPN routes control which proxy BGP route targets are used to create the proxy BGP route target routes.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Configuring Proxy BGP Route Target Filtering for VPNs | 159](#)

[Example: Configuring an Export Policy for BGP Route Target Filtering for VPNs | 132](#)

[Configuring BGP Route Target Filtering for VPNs | 116](#)

[family route-target | 1218](#)

[rtf-prefix-list](#)



## revert-time (Protocols Layer 2 Circuits)

### Syntax

```
revert-time seconds maximum seconds;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols l2circuit neighbor address interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls neighbor address],
[edit protocols l2circuit neighbor address interface interface-name],
[edit routing-instances routing-instance-name protocols vpls neighbor address]
```

### Release Information

Statement introduced in Junos OS Release 10.2.

**maximum** option introduced in Junos OS Release 13.2.

### Description

Specify a revert time for redundant Layer 2 circuits and VPLS pseudowires. When you have configured redundant pseudowires for Layer 2 circuits or VPLS, traffic is switched to the backup connection in the event that the primary connection fails. If you configure a revert time, when the configured time expires traffic is reverted to the primary path, assuming the primary path has been restored.

With the **maximum** option, specify a maximum reversion interval to add after the **revert-time** delay. If a revert-time delay is defined but a maximum timer is not defined, VCs are restored upon the revert-timer's expiration.

To reduce as much as possible the amount of traffic discarded, and potential data-path asymmetries observed during primary-to-backup transition periods, you can use this restoration timer. This restoration timer is activated when the backup path is performing as active, and then the primary path is restored. The goal is to avoid moving traffic back to the primary path right away, to make sure that the control plane's related tasks (such as IGP, LDP, RSVP, and internal BGP) have enough time to complete their updating cycle.

By enabling a gradual return of traffic to the primary path, you can ensure that the relatively-slow control-plane processing and updating does not have a negative impact on the restoration process.

The **maximum** option extends the revert timer's functionality to provide a jittered interval over which a certain number of circuits can be transitioned back to the primary path. By making use of this maximum value, you can define a time interval during which circuits are expected to switch over. As a consequence, circuits' effective transitions are scattered during restoration periods.



When making use of **revert-time x maximum y** statement, you can ensure that the corresponding circuit that is active is moved to the primary path within a time-slot ( $t_1$ ) such as that:  $x \leq t_1 \leq y$ . In other words, by activating this statement, you can ensure the following:

- VCs stay in the backup path for at least  $x$  seconds after the primary path comes back up.
- VCs are moved back to the primary path before  $y$  seconds have elapsed.
- $y$  maximum value =  $x$  maximum value \* 2 = 1200 seconds.

The ideal values for  $x$  and  $y$  will be conditioned to internal aspects of your network. For this reason, there are no default values for these settings. If no revert-time is set, the default behavior is non-revertive. That is, circuits are not returned to the primary path upon restoration. They are kept on the backup path.

### Default

Without the **revert-time** statement, virtual circuit (VC) traffic is not transitioned to the primary path upon restoration of the primary path.

### Options

*seconds*—Revert time in seconds.

**Range:** 0 through 600 seconds

maximum *seconds*—Number of seconds to delay path restoration after the **revert-time** delay.

**Range:** 0 through 1200 seconds

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| *Configuring Redundant Pseudowires for Layer 2 Circuits and VPLS*



## route-distinguisher

### Syntax

```
route-distinguisher (as-number:id | ip-address:id);
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn mesh-group
  mesh-group-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls mesh-group
  mesh-group-name],
[edit routing-instances routing-instance-name],
[edit routing-instances routing-instance-name protocols l2vpn mesh-group mesh-group-name],
[edit routing-instances routing-instance-name protocols vpls mesh-group mesh-group-name]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Support at **[edit routing-instances *routing-instance-name* protocols vpls mesh-group *mesh-group-name*]**

hierarchy level introduced in Junos OS Release 11.2.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Support at **[edit routing-instances *routing-instance-name* protocols l2vpn mesh-group *mesh-group-name*]**

hierarchy level introduced in Junos OS Release 13.2.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Series switches.

Statement introduced in cRPD Release 19.4R1.

### Description

Specify an identifier attached to a route, enabling you to distinguish to which VPN or virtual private LAN service (VPLS) the route belongs. Each routing instance must have a unique route distinguisher (RD) associated with it. The RD is used to place bounds around a VPN so that the same IP address prefixes can be used in different VPNs without having them overlap. If the instance type is **vrf**, the **route-distinguisher** statement is required.

For Layer 2 VPNs and VPLS, if you configure the **l2vpn-use-bgp-rules** statement, you must configure a unique RD for each PE router participating in the routing instance.

For other types of VPNs, we recommend that you use a unique RD for each provider edge (PE) router participating in specific routing instance. Although you can use the same RD on all PE routers for the same VPN routing instance, if you use a unique RD, you can determine the customer edge (CE) router from which a route originated within the VPN.

For Layer 2 VPNs and VPLSs, if you configure mesh groups, the RD in each mesh group must be unique.





**CAUTION:** We strongly recommend that if you change an RD that has already been configured, or change the routing-instance type from **virtual-router** to **vrf**, make the change during a maintenance window, as follows:

1. Deactivate the routing instance.
2. Change the RD.
3. Activate the routing instance.

This is not required if you are configuring the RD for the first time.



## Options

**as-number:number—as-number** is an assigned AS number, and **number** is any 2-byte or 4-byte value. The AS number can be from 1 through 4,294,967,295. If the AS number is a 2-byte value, the administrative number is a 4-byte value. If the AS number is 4-byte value, the administrative number is a 2-byte value. An RD consisting of a 4-byte AS number and a 2-byte administrative number is defined as a type 2 RD in RFC 4364 *BGP/MPLS IP VPNs*.

**NOTE:** In Junos OS Release 9.1 and later, the numeric range for AS numbers is extended to provide BGP support for 4-byte AS numbers, as defined in RFC 4893, *BGP Support for Four-octet AS Number Space*. All releases of Junos OS support 2-byte AS numbers. To configure an RD that includes a 4-byte AS number, append the letter “L” to the end of the AS number. For example, an RD with the 4-byte AS number 7,765,000 and an administrative number of 1,000 is represented as **77765000L:1000**.

In Junos OS Release 9.2 and later, you can also configure a 4-byte AS number using the AS dot notation format of two integer values joined by a period: *<16-bit high-order value in decimal>.<16-bit low-order value in decimal>*. For example, the 4-byte AS number of 65,546 in the plain-number format is represented as 1.10 in AS dot notation format.

**ip-address:id**—IP address (**ip-address** is a 4-byte value) within your assigned prefix range and a 2-byte value for the **id**. The IP address can be any globally unique unicast address.

**Range:** 0 through 4,294,967,295 ( $2^{32} - 1$ ). If the router you are configuring is a BGP peer of a router that does not support 4-byte AS numbers, you need to configure a local AS number. For more information, see *Using 4-Byte Autonomous System Numbers in BGP Networks Technology Overview*.

**NOTE:** For Ethernet VPN (EVPN), an RD that includes zero as the **id** value is reserved for the default EVPN routing instance by default. Because the same RD cannot be assigned for two routing instances, using a **ip-address:id** RD for another routing instance (default-switch), where the **id** value is zero, throws a commit error.

## Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



RELATED DOCUMENTATION

<a href="#">Example: Configuring BGP Route Target Filtering for VPNs   121</a>
<a href="#">Example: Configuring FEC 129 BGP Autodiscovery for VPWS</a>
<a href="#">Configuring EVPN Routing Instances</a>
<a href="#">Configuring Routing Instances on PE Routers in VPNs   53</a>
<a href="#">Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)</a>
<a href="#">Configuring an MPLS-Based Layer 3 VPN (CLI Procedure)</a>
<a href="#">path-selection</a>



## route-distinguisher-id

### Syntax

```
route-distinguisher-id ip-address;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options],  
[edit routing-options]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

### Description

Automatically assign a route distinguisher to the routing instance.

If you configure the **route-distinguisher** statement in addition to the **route-distinguisher-id** statement, the value configured for **route-distinguisher** supersedes the value generated from **route-distinguisher-id**.

**NOTE:** To avoid a conflict in the two route distinguisher values, it is recommended to ensure that the first half of the route distinguisher obtained by configuring the **route-distinguisher** statement is different from the first half of the route distinguisher obtained by configuring the **route-distinguisher-id** statement.

### Options

***ip-address***—Address for routing instance.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Configuring BGP Route Target Filtering for VPNs | 121](#)

[Configuring Routing Instances on PE Routers in VPNs | 53](#)



## route-target-filter

### Syntax

```
route-target-filter destination {
    group group-name;
    local;
    neighbor address;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options rib bgp.rtarget.0 static],
[edit routing-options rib bgp.rtarget.0 static]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

### Description

Statically configure route target filtering. Route target filtering allows you to distribute VPN routes to only the routers that need them. In VPN networks without route target filtering configured, BGP distributes all static VPN routes to all of the VPN peer routers. You can add static routes to the bgp.rtarget.0 routing table with specific NLRI-imposed constraints.

### Options

**destination**—Allows you to specify the static route destination. This value must be in the format x:y/len.

The x value is either an IP address or an AS number followed by an optional L to indicate a 4 byte AS number, and y is a number (for example, 123456L:100/64).

**group group-name(s)**—Installs an RT-Constrain filter for the destination for all peers in the specified BGP group. The route and corresponding BGP group are displayed in the output of the **show bgp group rtf detail** command.

**local**—Causes the router to originate the route target constrain NLRI, but does not install any filtering state for the prefix. This behavior can be useful when the router should always receive VPN routes with this route-target regardless of the state of a given BGP peering session or group status. The route is not displayed in the output of the **show bgp group rtf detail** command unless it is also included in either the BGP neighbor or BGP group configuration.

**neighbor address**—Installs an RT-Constrain filter for the destination for this BGP neighbor. The route is displayed in the output of the **show bgp group rtf detail** command. Specify the BGP neighbor using the router's IP address.



**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

---

[Configuring Static Route Target Filtering for VPNs | 115](#)

[Reducing Network Resource Use with Static Route Target Filtering for VPNs | 116](#)



## switchover-delay

### Syntax

```
switchover-delay milliseconds;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols l2circuit neighbor address interface interface-name],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls neighbor address],  
[edit protocols l2circuit neighbor address interface interface-name],  
[edit routing-instances routing-instance-name protocols vpls neighbor address]
```

### Release Information

Statement introduced in Junos OS Release 9.2.

### Description

After the primary pseudowire goes down, specifies the delay (in milliseconds) to wait before the backup pseudowire takes over. You configure this statement for each backup neighbor configuration to adjust the switchover time after a failure is detected.

### Options

***milliseconds***—Specify the time to wait before switching to the backup pseudowire after the primary pseudowire fails.

**Default:** 10,000 milliseconds

**Range:** 0 through 180,000 milliseconds

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| *Configuring the Switchover Delay for the Pseudowires*



## unicast-reverse-path

### Syntax

```
unicast-reverse-path (active-paths | feasible-paths);
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options forwarding-table],  
[edit routing-instances routing-instance-name instance-type name routing-options forwarding-table],  
[edit routing-options forwarding-table]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Support for routing instances added in Junos OS Release 8.3.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 11.3 for QFX Series switches.

**NOTE:** This feature is not supported on the EX4300 switch, even though it is available on the device.

### Description

Control the operation of unicast reverse-path-forwarding check. This statement enables the RPF check to be used when routing is asymmetrical.

### Options

**active-paths**—Consider only active paths during the unicast reverse-path check.

**feasible-paths**—Consider all feasible paths during the unicast reverse-path check.

**Default:** If you omit the **unicast-reverse-path** statement, only the active paths to a particular destination are considered.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Configuring Unicast RPF \(On a Router\)](#) | 1099



## vpn-apply-export

### Syntax

```
vpn-apply-export;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp],  
[edit logical-systems logical-system-name protocols bgp group group-name],  
[edit logical-systems logical-system-name protocols bgp group group-name neighbor neighbor],  
[edit protocols bgp],  
[edit protocols bgp group group-name],  
[edit protocols bgp group group-name neighbor neighbor]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

### Description

Apply both the VRF export and BGP group or neighbor export policies (VRF first, then BGP) before routes from the **vrf** or **I2vpn** routing tables are advertised to other PE routers.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[Configuring Policies for the VRF Table on PE Routers in VPNs](#) | 102



## vrf-export

### Syntax

```
vrf-export [ policy-names ];
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls mesh-group
  mesh-group-name]
[edit routing-instances routing-instance-name]
[edit routing-instances routing-instance-name protocols vpls mesh-group mesh-group-name]
[edit switch-options]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Series switches.

Statement introduced in cRPD Release 19.4R1.

### Description

Specify how routes are exported from the local PE router's VRF table (*routing-instance-name*.inet.0) to the remote PE router. If the value **vrf** is specified for the **instance-type** statement included in the routing instance configuration, this statement is required.

You can configure multiple export policies on the PE router or PE switch.

### Default

If the instance-type is **vrf**, **vrf-export** is a required statement. The default action is to reject.

### Options

***policy-names***— Names for the export policies.

### Required Privilege Level

routing— To view this statement in the configuration.

routing-control— To add this statement to the configuration.

## RELATED DOCUMENTATION

Implementing EVPN-VXLAN for Data Centers



[instance-type](#) | [1222](#)

---

[Configuring Policies for the VRF Table on PE Routers in VPNs](#) | [102](#)



## vrf-import

### Syntax

```
vrf-import [ policy-names ];
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls mesh-group
  mesh-group-name]
[edit routing-instances routing-instance-name]
[edit routing-instances routing-instance-name protocols vpls mesh-group mesh-group-name]
[edit switch-options]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Series switches.

Statement introduced in cRPD Release 19.4R1.

### Description

Specify how routes are imported into the virtual routing and forwarding (VRF) table (***routing-instance-name*.inet.0**) of the local provider edge (PE) router or switch from the remote PE router. If the value **vrf** is specified for the **instance-type** statement included in the routing instance configuration, this statement is required.

You can configure multiple import policies on the PE router or switch.

### Default

If the instance type is **vrf**, **vrf-import** is a required statement. The default action is to accept.

### Options

***policy-names***—Names for the import policies.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

Implementing EVPN-VXLAN for Data Centers



[instance-type | 1222](#)[Configuring Policies for the VRF Table on PE Routers in VPNs | 102](#)

## vrf-mtu-check

### Syntax

```
vrf-mtu-check;
```

### Hierarchy Level

```
[edit chassis]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

### Description

On M Series routers (except the M120 and M320 router) and on EX Series 8200 switches, configure path maximum transmission unit (MTU) checks on the outgoing interface for unicast traffic routed on a virtual private network (VPN) routing and forwarding (VRF) instance.

### Default

Disabled.

### Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring Path MTU Checks for VPN Routing Instances | 61](#)[Configuring the Junos OS to Enable MTU Path Check for a Routing Instance on M Series Routers](#)



## vrf-target

### Syntax

```
vrf-target {
    community;
    auto
    import community-name;
    export community-name;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn mesh-group
mesh-group-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls mesh-group
mesh-group-name],
[edit routing-instances routing-instance-name protocols evpn vni-options],
[edit routing-instances routing-instance-name protocols l2vpn mesh-group mesh-group-name],
[edit routing-instances routing-instance-name protocols vpls mesh-group mesh-group-name],
[edit switch-options]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Series switches. **auto option** was also added at this time.

**auto option** added in Junos OS Release 19.1R1 for MX series.

Statement introduced in cRPD Release 19.4R1.

### Description

Specify a virtual routing and forwarding (VRF) target community. If you configure the **community** option only, default VRF import and export policies are generated that accept and tag routes with the specified target community. The purpose of the **vrf-target** statement is to simplify the configuration by allowing you to configure most statements at the **[edit routing-instances]** hierarchy level. In effect, this statement configures a single policy for import and a single policy for export to replace the per-VRF policies for every community.

You can still create more complex policies by explicitly configuring VRF import and export policies using the **import** and **export** options.



## Options

**community**—Community name.

**auto**—Automatically derives the route target (RT). The auto-derived route targets have higher precedence over manually configured RT in vrf-target, vrf-export policies, and vrf-import policies.

**NOTE:** Auto-derived route targets are supported only in virtual switch and EVPN routing instances.

**import community-name**—Allowed communities accepted from neighbors.

**export community-name**—Allowed communities sent to neighbors.

## Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring Policies for the VRF Table on PE Routers in VPNs | 102](#)

*Example: Configuring FEC 129 BGP Autodiscovery for VPWS*



## Configuration Statements (Layer 3 VPNs)

### IN THIS CHAPTER

- [advertise-from-main-vpn-tables](#) | 1251
- [advertise-mode \(MPLS\)](#) | 1253
- [all-regions](#) | 1255
- [allow-l3vpn-traceroute-src-select](#) | 1257
- [arp-prefix-limit \(Host Fast Reroute\)](#) | 1258
- [as-path-compare](#) | 1260
- [chained-composite-next-hop](#) | 1261
- [classifiers](#) | 1264
- [create-new-ucast-tunnel](#) | 1265
- [domain-id](#) | 1266
- [domain-vpn-tag](#) | 1267
- [dynamic-tunnels](#) | 1268
- [egress-protection \(BGP\)](#) | 1270
- [egress-protection \(MPLS\)](#) | 1271
- [egress-protection \(Routing Instances\)](#) | 1272
- [export-target](#) | 1273
- [extended-space](#) | 1274
- [family \(VRF Advertisement\)](#) | 1275
- [forwarding-table](#) | 1276
- [forwarding-context \(Protocols BGP\)](#) | 1277
- [forward-policy-mismatch \(Security Group VPN Member\)](#) | 1278
- [global-arp-prefix-limit \(Host Fast Reroute\)](#) | 1279
- [global-supplementary-blackout-timer \(Host Fast Reroute\)](#) | 1281
- [group \(Routing Instances\)](#) | 1283
- [group-address \(Routing Instances VPN\)](#) | 1285
- [group-range \(MBGP MVPN Tunnel\)](#) | 1287
- [group-rp-mapping](#) | 1288
- [host-fast-reroute](#) | 1289



- [import-target](#) | 1290
- [independent-domain](#) | 1291
- [inet-mvpn \(BGP\)](#) | 1293
- [inet-mvpn \(VRF Advertisement\)](#) | 1294
- [inet6](#) | 1295
- [inet6-mvpn \(BGP\)](#) | 1296
- [inet6-mvpn \(VRF Advertisement\)](#) | 1297
- [inet6-vpn](#) | 1298
- [ingress \(Chained Composite Next Hop\)](#) | 1300
- [ingress-replication](#) | 1302
- [interface \(Host Fast Reroute\)](#) | 1303
- [ip-tunnel-rpf-check](#) | 1304
- [interface \(Virtual Tunnel in Routing Instances\)](#) | 1306
- [inter-region](#) | 1308
- [inter-region-segmented](#) | 1309
- [inter-region-template](#) | 1311
- [l3vpn \(ingress\)](#) | 1313
- [l3vpn \(transit\)](#) | 1315
- [label](#) | 1316
- [label-switched-path \(Protocols MVPN\)](#) | 1317
- [label-switched-path-template \(Multicast\)](#) | 1318
- [labeled-bgp](#) | 1320
- [labeled-unicast](#) | 1321
- [link-protection \(Host Fast Reroute\)](#) | 1323
- [localized-fib](#) | 1324
- [maximum-paths](#) | 1325
- [maximum-prefixes](#) | 1327
- [metric \(Protocols OSPF Sham Link\)](#) | 1329
- [mpls-internet-multicast](#) | 1330
- [multicast \(Virtual Tunnel in Routing Instances\)](#) | 1331
- [multihop](#) | 1332
- [multipath \(Routing Options\)](#) | 1337
- [mvpn](#) | 1339
- [mvpn-mode](#) | 1341



- no-vrf-advertise | 1342
- no-vrf-propagate-ttl | 1343
- per-group-label | 1344
- pim-asm | 1345
- pim-ssm (Selective Tunnel) | 1346
- primary (Virtual Tunnel in Routing Instances) | 1347
- protect core | 1349
- protection (Protocols BGP) | 1350
- provider-tunnel | 1351
- redundancy-group (Chassis - MX Series) | 1357
- redundancy-group (Interfaces) | 1358
- redundant-logical-tunnel | 1359
- redundant-virtual-tunnel | 1360
- region | 1361
- register-limit | 1363
- route-target (Protocols MVPN) | 1365
- routing-instances (CoS) | 1367
- rpt-spt | 1368
- rsvp-te (Routing Instances Provider Tunnel Selective) | 1369
- rsvp-te (Protocols MVPN) | 1371
- selective | 1373
- sglimit | 1376
- sham-link | 1378
- sham-link-remote | 1380
- source (Routing Instances Provider Tunnel Selective) | 1382
- source-class-usage | 1384
- spt-only | 1385
- static-lsp | 1386
- supplementary-blackout-timer (Host Fast Reroute) | 1388
- target (Routing Instances MVPN) | 1390
- template(Protocols MVPN) | 1391
- threshold-rate | 1393
- traceoptions (Protocols MVPN) | 1394
- traffic-statistics (Protocols BGP) | 1397



- tunnel-limit (Routing Instances Provider Tunnel Selective) | **1399**
- unicast (Route Target Community) | **1400**
- unicast (Virtual Tunnel in Routing Instances) | **1401**
- vpn-localization | **1402**
- vpn-unequal-cost | **1403**
- vrf-advertise-selective | **1404**
- vrf-propagate-ttl | **1405**
- vrf-table-label | **1406**
- wildcard-group-inet | **1408**
- wildcard-group-inet6 | **1410**
- wildcard-source (Selective Provider Tunnels) | **1412**



## advertise-from-main-vpn-tables

### Syntax

```
advertise-from-main-vpn-tables;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp],  
[edit protocols bgp],  
[edit routing-instances routing-instance-name protocols bgp],
```

### Release Information

Statement introduced in Junos OS Release 12.3.

### Description

Advertise VPN routes from the main VPN tables in the master routing instance (for example, `bgp.l3vpn.0`, `bgp.mvpn.0`) instead of advertising VPN routes from the tables in the VPN routing instances (for example, `instance-name.inet.0`, `instance-name.mvpn.0`). Enable nonstop active routing (NSR) support for BGP multicast VPN (MVPN).

When this statement is enabled, before advertising a route for a VPN prefix, the path selection algorithm is run on all routes (local and received) that have the same route distinguisher (RD).

**NOTE:** Adding or removing this statement causes all BGP sessions that have VPN address families to be removed and then added again. On the other hand, having this statement in the configuration prevents BGP sessions from going down when route reflector (RR) or autonomous system border router (ASBR) functionality is enabled or disabled on a routing device that has VPN address families configured.

### Default

If you do not include this statement, VPN routes are advertised from the tables in the VPN routing instances.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION







## advertise-mode (MPLS)

### Syntax

```
advertise-mode (stub-alias | stub-proxy);
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls egress-protection context-identifier context-id],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name egress-protection
context-identifier context-id],
[edit protocols mpls egress-protection context-identifier context-id],
[edit protocols mpls label-switched-path lsp-name egress-protection context-identifier context-id]
```

### Release Information

Statement introduced in Junos OS Release 13.3.

### Description

Configure the method for the interior gateway protocol (IGP) to advertise egress protection availability.

Egress protection availability is advertised in the IGP. Label protocols along with CSPF use this information to do egress protection.

### Options

**stub-alias**—Context identifier has an alias.

In the alias method, the LSP end-point address has an explicit backup egress node where the backup node can be learned or configured on the penultimate hop node (PHN) of a protected LSP. With this model, the PHN of a protected LSP sets up the bypass LSP tunnel to back up the egress node by avoiding the primary egress node. This model requires a Junos OS upgrade in core nodes, but is flexible enough to support all traffic engineering constraints.

**stub-proxy**—Context-identifier has a stub proxy node.

A stub node is one that only appears at the end of an AS path, which means it does not provide transit service. In this mode, known as the virtual or proxy mode, the LSP end-point address is represented as a node with bidirectional links, with the LSP's primary egress node and backup egress node. With this representation, the penultimate hop of the LSP primary egress point can behave like a PLR in setting up a bypass tunnel to back up the egress by avoiding the primary egress node. This model has the advantage that you do not need to upgrade Junos OS on core nodes and thereby helps operators to deploy this technology.

### Required Privilege Level

routing—To view this statement in the configuration.



routing-control—To add this statement to the configuration.

#### RELATED DOCUMENTATION

[Egress Protection for Layer 3 VPN Edge Protection Overview | 968](#)

[Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP | 986](#)



## all-regions

### Syntax

```
all-regions {
  incoming;
  ingress-replication {
    create-new-ucast-tunnel;
    label-switched-path {
      label-switched-path-template (Multicast) {
        (default-template | lsp-template-name);
      }
    }
  }
  ldp-p2mp;
  rsvp-te {
    label-switched-path-template (Multicast) {
      (default-template | lsp-template-name);
    }
    static-lsp static-lsp;
  }
}
```

### Hierarchy Level

```
[edit protocols mvpn inter-region-template template template-name]
```

### Release Information

Statement introduced in Junos OS Release 15.1.

### Description

Specify the tunnel support for all regions that are not defined in the more specific regions. The **all-regions** statement supports different tunnel types such as incoming, ingress replication, ldp-p2mp, or rsvp-te. The incoming tunnel indicates that the tunnel type across the area boundary router (ABR) is not changed.

### Options

**incoming**— Specify the tunnel type to be the same across the ABR.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



RELATED DOCUMENTATION

Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview		608
Example: Configuring Segmented Inter-Area P2MP LSP		613
Configuring Segmented Inter-Area P2MP LSP		610
inter-region		1308
inter-region-segmented		1309
inter-region-template		1311
region		1361
template		1391



## allow-l3vpn-traceroute-src-select

### Syntax

```
allow-l3vpn-traceroute-src-select;
```

### Hierarchy Level

```
[edit system]
```

### Release Information

Statement introduced in Junos OS Release 18.4R1 on ACX Series, EX Series, QFX Series, MX Series, PTX Series, SRX Series.

### Description

Select best source address for ICMP time-to-live (TTL) expiry error in case of Layer 3 VPNs. When a traceroute occurs over Layer 3 VPN and the TTL expired traffic is generated, the traceroute returns to the source through the routing instance. **allow-l3vpn-traceroute-src-select** determines the correct IP source address by reviewing the destination routing instance and destination IP address for Layer 3 VPN provider edge (PE) routers.

### Required Privilege Level

admin—To view this statement in the configuration.

admin-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[vrf-table-label](#) | [1406](#)

[Pinging a Layer 3 VPN](#) | [1185](#)



## arp-prefix-limit (Host Fast Reroute)

### Syntax

```
arp-prefix-limit number;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances instance-name routing-options interface interface-name],  
[edit routing-instances instance-name routing-options interface interface-name]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Override the ARP prefix limit for the specified host fast-reroute (HFRR) profile.

When you configure HFRR, an optional ARP prefix limit sets a maximum for the number of ARP routes and, therefore FRR routes created for each HFRR profile in the routing table. This limit prevents ARP attacks from exhausting the virtual memory on the routing devices.

There are two configuration statements ([global-arp-prefix-limit](#) and **arp-prefix-limit**) that set the ARP prefix limit, one at the global **[edit routing-options host-fast-reroute]** hierarchy level and the other at the **[edit routing-instances *instance-name* routing-options interface *interface-name*]** hierarchy level, respectively. The global **global-arp-prefix-limit** statement sets a default ARP prefix limit for all HFRR profiles configured on the routing device. The **arp-prefix-limit** statement overrides the **global-arp-prefix-limit** for that HFRR profile for that protected interface.

Warning system log messages begin when the ARP routes in an HFRR profile reaches 80% of the configured limit. When the number crosses the 100% threshold, the HFRR profile is deactivated. When this happens, all ARP/FRR routes are deleted from the routing table. FRR routes are deleted from forwarding table as well.

After the HFRR profile is deactivated, a blackout timer is started. The timeout value of this timer is the ARP cache timeout (kernel timeout) + the supplementary blackout timer.

There are global and per-HFRR CLI statements ([global-supplementary-blackout-timer](#) and [supplementary-blackout-timer](#)) to configure the supplementary blackout timer. The global value is at the **[edit routing-options host-fast-reroute]** hierarchy level and applies to all HFRR profiles on the routing device. The value for the routing-instance interface is at the **[edit routing-instances *instance-name* routing-options interface *interface-name*]** hierarchy level, and overrides the global value for that HFRR profile only.



When the blackout timer expires, the HFRR profile is reactivated, and the Junos OS relearns the ARP routes and re-creates the HFRR routes. If the ARP prefix limit is not exceeded again, the HFRR routes will be up.

If an HFRR profile is in the deactivated state, a reevaluation of the ARP state is performed during every commit operation or whenever the routing process (rpd) is restarted with the **restart routing** command.

### Default

If you omit the **arp-prefix-limit** statement, the **global-arp-prefix-limit** takes effect for all HFRR profiles on the device. If you omit both of these statements, there is no ARP prefix limit for host fast reroute.

### Options

**number**—Maximum number of ARP HFRR routes allowed.

**Range:** 1 through 10,000 HFRR routes

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| [Example: Configuring Link Protection with Host Fast Reroute](#) | 1078



## as-path-compare

### Syntax

```
as-path-compare;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options multipath],  
[edit routing-instances routing-instance-name routing-options multipath]
```

### Release Information

Statement introduced in Junos OS Release 10.1.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

### Description

Specify to have the algorithm that is used to determine the active path compare the AS numbers in the AS path. In a VPN scenario with multiple BGP paths, the algorithm selects as the active path the route whose AS numbers match. By default, the algorithm evaluates only the length and not the contents of the AS path.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[Configuring the Algorithm That Determines the Active Route to Evaluate AS Numbers in AS Paths for VPN Routes](#) | 282



## chained-composite-next-hop

### Syntax

```
chained-composite-next-hop {  
    ingress;  
    transit;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options forwarding-table],  
[edit routing-options forwarding-table]
```

**NOTE:** The [edit logical-systems] hierarchy level is not supported on the QFX10000 switches.

### Release Information

Statement introduced in Junos OS Release 12.1.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 15.1 for QFX10000 Series switches.

### Description

Allows you to configure the chained composite next hops for devices handling ingress or transit traffic in the network.

Chained composite next hops help to facilitate the handling of large volumes of transit traffic in the core of large networks by allowing the router to process much larger volumes of routes. A chained composite next hop allows the router to direct sets of routes sharing the same destination to a common forwarding next hop, rather than having each route also include the destination. In the event that a network destination is changed, rather than having to update all of the routes sharing that destination with the new information, just the shared forwarding next hop is updated with the new information. The chained composite next hops continue to point to this forwarding next hop which now contains the new destination.

On platforms containing only MPCs, such as PTX Series Packet Transport Routers, the MX80 router, the MX2020 router, and the QFX10000 switches, chained composite next hops are enabled by default. On MX Series 5G Universal Routing Platforms containing both DPC and MPC FPCs and on T4000 Core Routers containing MPC and FPCs, chained composite next hops are disabled by default and need to be explicitly configured.



To explicitly configure chained composite next hops, include the **enhanced-ip** statement at the **[edit chassis network-services]** hierarchy level. However, take the following into consideration when enabling the **enhanced-ip** mode:

- Non-service DPCs do not work with enhanced network services mode options. Only MPCs, MS-DPCs, and MS-MPCs provide support for the **enhanced-ip** configuration.
- If you configure chained composite next hops on MX Series routers with both MPCs, and DPCs or DPCEs, the network services mode must be changed from **enhanced-ip** to **ethernet** for the DPC or DPCE to come online.

You can verify the FPC status in such cases, using the **show chassis fpc** command output, where the DPCs and DPCEs are marked as **FPC misconfiguration**.

#### NOTE:

- When chained composite next hops are enabled on a device, the BGP connections are reset.
- On MX Series routers with DPCs or DPCEs, only the **l3vpn** option is supported under the **ingress** configuration statement; all other configuration options and functionality are not supported.
- The **transit** statement and the associated functionality is supported only on PTX Packet Transport Routers and QFX10000 switches.
- On MX Series routers, removing the **chained-composite-next-hop** statement from a PE device configuration causes all IBGP sessions to be torn down and triggers the BGP session to flap as well. A similar change on a router configured as a route reflector does not have any effect, however.

The following is a sample system log message that is generated to record such an event:

```
Nov  6 15:16:21.670 host PE1: rpd[6947]: bgp_peer_mgmt_clear:5995:
NOTIFICATION sent to 10.0.100.2 (External AS 100): code 6 (Cease) subcode
  4 (Administratively Reset), Reason: Management session cleared BGP
neighbor
```

- Starting with Junos OS Release 17.2, you cannot configure **chained-composite-next-hop ingress l3vpn extended-space** on a logical system.

The remaining statements are explained separately. See [CLI Explorer](#).

#### Default

This statement is disabled by default.



### Options

**ingress**—Enable or disable composite chained next hop for ingress traffic.

**transit**—(PTX and QFX10000) Enable or disable composite chained next hop for transit traffic. Starting in Junos OS Release 14.1, the **transit l3vpn** statement is enabled by default on PTX Series Packet Transport Routers only.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

---

[Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs | 1147](#)

---

*Chained Composite Next Hops for Transit Devices for VPNs*

---

[Example: Configuring Chained Composite Next Hops for Direct PE-PE Connections in VPNs | 1152](#)

---

[ingress | 1300](#)

---

*transit (Chained Composite Next Hops)*



## classifiers

### Syntax

```
classifiers {  
  exp (classifier-name | default);  
}
```

### Hierarchy Level

```
[edit class-of-service routing-instances routing-instance-name]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

### Description

For routing instances with VRF table labels enabled, apply a custom MPLS EXP classifier to the routing instance. You can apply the default MPLS EXP classifier or one that is previously defined.

### Default

If you do not include this statement, the default MPLS EXP classifier is applied to the routing instance.

### Options

**classifier-name**—Name of the behavior aggregate MPLS EXP classifier.

### Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Applying Custom MPLS EXP Classifiers to Routing Instances in Layer 3 VPNs | 1170](#)

*Junos OS Network Interfaces Library for Routing Devices*



## create-new-ucast-tunnel

### Syntax

```
create-new-ucast-tunnel;
```

### Hierarchy Level

```
[edit routing-instances routing-instance-name provider-tunnel ingress-replication],  
[edit routing-instances routing-instance-name provider-tunnel selective group address source source-address  
  ingress-replication]
```

### Release Information

Statement introduced in Junos OS Release 10.4.

### Description

One of two modes for building unicast tunnels when ingress replication is configured for the provider tunnel. When this statement is configured, each time a new destination is added to the multicast distribution tree, a new unicast tunnel to the destination is created in the ingress replication tunnel. The new tunnel is deleted if the destination is no longer needed. Use this mode for RSVP LSPs using ingress replication.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

*Example: Configuring Ingress Replication for IP Multicast Using MBGP MVPNs*

[mpls-internet-multicast](#) | **1330**

[ingress-replication](#) | **1302**



## domain-id

### Syntax

```
domain-id domain-id;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3)],  
[edit routing-instances routing-instance-name protocols (ospf | ospf3)]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

### Description

Specify a domain ID for a route. The domain ID identifies the OSPF domain from which the route originated.

### Options

***domain-id***—You can specify either an IP address or an IP address and a local identifier using the following format: ***ip-address:local-identifier***. If you do not specify a local identifier with the IP address, the identifier is assumed to have a value of 0.

**Default:** If the router ID is not configured in the routing instance, the router ID is derived from an interface address belonging to the routing instance.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| [Configuring Routing Between PE and CE Routers in Layer 3 VPNs](#) | 181



## domain-vpn-tag

### Syntax

```
domain-vpn-tag number;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3)],  
[edit routing-instances routing-instance-name protocols (ospf | ospf3)]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

### Description

Set a virtual private network (VPN) tag for OSPFv2 external routes generated by the provider edge (PE) routing device.

### Options

*number*—VPN tag.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring Routing Between PE and CE Routers in Layer 3 VPNs](#) | 181



## dynamic-tunnels

### Syntax

```
dynamic-tunnels tunnel-name {
  destination-networks prefix;
  gre;
  rsvp-te entry-name {
    destination-networks network-prefix;
    label-switched-path-template (Multicast) {
      default-template;
      template-name;
    }
  }
  source-address address;
  spring-te;
  traceoptions;
  tunnel-attributes name {
    dynamic-tunnel-anchor-pfe dynamic-tunnel-anchor-pfe;
    dynamic-tunnel-anti-spoof (off | on);
    dynamic-tunnel-mtu dynamic-tunnel-mtu;
    dynamic-tunnel-source-prefix dynamic-tunnel-source-prefix;
    dynamic-tunnel-type V4oV6;
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],
[edit logical-systems logical-system-name routing-options],
[edit routing-instances routing-instance-name routing-options],
[edit routing-options]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

### Description

Configure a dynamic tunnel between two PE routers.

**NOTE:** ACX Series routers do not support the **gre** statement.



Configure dynamic IPv4-over-IPv6 tunnels and define their attributes to forward IPv4 traffic over an IPv6-only network. IPv4 traffic is tunneled from customer premises equipment to IPv4-over-IPv6 gateways. You must also configure **extended-nexthop** option at **[edit protocols bgp family inet unicast]** hierarchy level to allow BGP to route IPv4 address families over an IPv6 session.

**Options**

**gre**—Enable dynamic generic routing encapsulation type tunnel mode for IPv4

**Values:**

- **next-hop-based-tunnel**—Enable next hop base dynamic-tunnel for steering IPv4 traffic with IPv6 next hop address.

**source-address**—Specify the source address of the tunnel.

**tunnel-name**—Name of the dynamic tunnel.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

<i>extended-nexthop</i>
<i>tunnel-attributes</i>
<i>Example: Configuring a Two-Tiered Virtualized Data Center for Large Enterprise Networks</i>
<i>Understanding Redistribution of IPv4 Routes with IPv6 Next Hop into BGP</i>



## egress-protection (BGP)

### Syntax

```
egress-protection {
  context-identifier context-id-ip-address;
  keep-import policy-name;
}
```

### Hierarchy Level

```
[edit protocols bgp group group-name family inet labeled-unicast],
[edit protocols bgp group group-name family inet-vpn unicast],
[edit protocols bgp group group-name family inet6-vpn unicast],
[edit protocols bgp group group-name family iso-vpn unicast]
```

### Release Information

Statement introduced in Junos OS Release 11.4R3.

Statement introduced for labeled unicast in Junos OS Release 14.1.

### Description

Enable egress protection for the configured BGP Network Layer Reachability Information (NLRI).

### Options

**context-identifier** *context-id-ip-address*—(Optional) The IPv4 address of the context identifier.

**keep-import** *policy-name*—The import policy that contains routes with the configured route target community. BGP keeps all these routes in the VPN routing table. The protector PE router scans the policy and builds the remote instance with the configured community name from the policy.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Configuring Egress Protection for Layer 3 VPN Services | 976](#)

[Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP | 986](#)

[Example: Configuring Egress Protection for BGP Labeled Unicast | 950](#)



## egress-protection (MPLS)

### Syntax

```
egress-protection {
  context-identifier context-id {
    primary | protector;
    metric igp-metric-value;
    advertise-mode (stub-alias | stub-proxy);
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name]
```

### Release Information

Statement introduced in Junos OS Release 10.4.

Options **primary**, **protector**, and **metric** introduced in Junos OS Release 11.4R3.

Option **advertise-mode** introduced in Junos OS Release 13.3.

### Description

Enables an Edge Protection Virtual Circuit (EPVC) for the MPLS protocol.

### Options

**context-identifier** *context-id-ip-address*—(Optional) The context identifier IPv4 address.

**metric** *igp-metric-value*—(Optional) The IGP metric value ranging from **2** through **16777215**.

**(primary | protector)**—On the primary PE router, configure as type **primary**. On the protector PE router, configure as type **protector**.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Configuring Egress Protection for Layer 3 VPN Services](#) | 976



## egress-protection (Routing Instances)

### Syntax

```
egress-protection {  
  context-identifier context-id-ip-address;  
}  
}
```

### Hierarchy Level

```
[edit routing-instances routing-instance-name].
```

### Release Information

Statement introduced in Junos OS Release 11.4R3.

### Description

Enable egress instance protection and provides customer edge (CE) VRF-level context-id granularity for each virtual routing and forwarding (VRF) instance.

### Options

**context-identifier *context-id-ip-address***—(Optional) The IPv4 address for the context identifier of the protected PE router.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION



## export-target

### Syntax

```
export-target {  
    target target-community;  
    unicast;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols mvpn route-target],  
[edit routing-instances routing-instance-name protocols mvpn route-target]
```

### Release Information

Statement introduced in Junos OS Release 8.4.

### Description

Enable you to override the Layer 3 VPN import and export route targets used for importing and exporting routes for the MBGP MVPN network layer reachability information (NLRI).

### Options

**target** *target-community*—Specify the export target community.

**unicast**—Use the same target community as specified for unicast.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## extended-space

### Syntax

```
extended-space;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options forwarding-table chained-composite-next-hop ingress  
  l3vpn],  
[edit routing-options forwarding-table chained-composite-next-hop ingress l3vpn]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

### Description

Accept more than one million Layer 3 VPN BGP updates with unique inner VPN labels. The neighboring PE routers are typically from other vendors and configured to assign a unique inner label to each Layer 3 VPN BGP route.

**NOTE:** This statement is supported on Juniper Networks routers containing only MPCs and MICs and with chassis network services configured with the **enhanced-ip** setting.



**WARNING:** You cannot configure the **extended-space** statement on a MX system with a MS-DPC unless you have also configured FIB localization with the MS-DPC set as a FIB-remote. This is because the MS-DPC cannot install nexthop in **extended-space** so the use of a default nexthop pointing to a FIB-local FPC is necessary to ensure proper data forwarding.

### Default

This statement is disabled by default.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## RELATED DOCUMENTATION

[Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs | 1147](#)

## family (VRF Advertisement)

### Syntax

```
family {  
  inet-mvpn;  
  inet6-mvpn;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name vrf-advertise-selective],  
[edit routing-instances routing-instance-name vrf-advertise-selective],
```

### Release Information

Statement introduced in Junos OS Release 10.1.

### Description

Explicitly enable IPv4 or IPv6 MVPN routes to be advertised from the VRF instance while preventing all other route types from being advertised.

The options are explained separately.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring PIM-SSM GRE Selective Provider Tunnels | 763](#)

[inet-mvpn | 1294](#)

[inet6-mvpn | 1297](#)



## forwarding-table

### Syntax

```
forwarding-table {
  chained-composite-next-hop;
  ecmp-fast-reroute,
  export [ policy-name ];
  (indirect-next-hop | no-indirect-next-hop);
  (indirect-next-hop-change-acknowledgements | no-indirect-next-hop-change-acknowledgements);
  krt-nexthop-ack-timeout interval;
  unicast-reverse-path (active-paths | feasible-paths);
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options],
[edit routing-options]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series.

### Description

Configure information about the routing device's forwarding table.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| *Example: Load Balancing BGP Traffic*



## forwarding-context (Protocols BGP)

### Syntax

```
forwarding-context;
```

### Hierarchy Level

```
[edit logical-systems name protocols bgp],
[edit logical-systems name routing-instances name protocols bgp],
[edit logical-systems name tenants name routing-instances name protocols bgp],
[edit protocols bgp],
[edit routing-instances name protocols bgp],
[edit tenants name routing-instances name protocols bgp]
```

### Release Information

Statement introduced in Junos OS Release 16.1 for the M Series, MX Series, and T Series.

### Description

The MPLS-forwarding type routing-instance can be used for segregating Inter-AS BGP neighbors that require MPLS spoof-protection to ensure the packets remain distinct from other peers.

Setting a forwarding context on a neighbor interface can be useful, for example, when configuring a common AS boundary router so that it only accepts MPLS packets from a peer AS boundary router whose labels were explicitly advertised to the common AS boundary router.

Use this statement in conjunction with **mpls-forwarding** to protect against label spoofing across AS boundary routers in the context of Inter-AS VPN Option B for AS boundary routers. Option B peers are reachable thru local interfaces that are configured as part of the MPLS forwarding type routing instance.

If **forwarding-context** is not set for a VPN BGP peer both the routing instance and forwarding context are provided by the master routing instance. The master instance is the Junos default, global routing-instance, that contains the **protocols bgp** configuration.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

*Example: Preventing BGP Session Resets*

*Junos OS Administration Library*



## forward-policy-mismatch (Security Group VPN Member)

### Syntax

```
vpn vpn-name {  
    ike-gateway gateway-number;  
    group group-number;  
    match-direction (input);  
    tunnel mtu mtu-size;  
}
```

### Hierarchy Level

```
[edit security group-vpn member ipsec]
```

### Release Information

Statement introduced in Junos OS Release 18.2R1.

### Description

Configure the forward policy mismatch for group VPN member.

### Required Privilege Level

security—To view this statement in the configuration.

security-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| [Group VPNv2 Overview](#)



## global-arp-prefix-limit (Host Fast Reroute)

### Syntax

```
global-arp-prefix-limit number;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options host-fast-reroute],  
[edit routing-options host-fast-reroute]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Set the ARP prefix limit for all host fast-reroute (HFRR) profiles on the routing device.

When you configure HFRR, an optional ARP prefix limit sets a maximum for the number of ARP routes and, therefore FRR routes created for each HFRR profile in the routing table. This limit prevents ARP attacks from exhausting the virtual memory on the routing devices.

There are two configuration statements (**global-arp-prefix-limit** and **arp-prefix-limit**) that set the ARP prefix limit, one at the global **[edit routing-options host-fast-reroute]** hierarchy level and the other at the **[edit routing-instances *instance-name* routing-options interface *interface-name*]** hierarchy level, respectively. The global **global-arp-prefix-limit** statement sets a default ARP prefix limit for all HFRR profiles configured on the routing device. The **arp-prefix-limit** statement overrides the **global-arp-prefix-limit** for that HFRR profile for that protected interface.

Warning system log messages begin when the ARP routes in an HFRR profile reaches 80% of the configured limit. When the number crosses the 100% threshold, the HFRR profile is deactivated. When this happens, all ARP/FRR routes are deleted from the routing table. FRR routes are deleted from forwarding table as well.

After the HFRR profile is deactivated, a blackout timer is started. The timeout value of this timer is the ARP cache timeout (kernel timeout) + the supplementary blackout timer.

There are global and per-HFRR CLI statements (**global-supplementary-blackout-timer** and **supplementary-blackout-timer**) to configure the supplementary blackout timer. The global value is at the **[edit routing-options host-fast-reroute]** hierarchy level and applies to all HFRR profiles on the routing device. The value for the routing-instance interface is at the **[edit routing-instances *instance-name* routing-options interface *interface-name*]** hierarchy level, and overrides the global value for that HFRR profile only.



When the blackout timer expires, the HFRR profile is reactivated, and the Junos OS relearns the ARP routes and re-creates the HFRR routes. If the ARP prefix limit is not exceeded again, the HFRR routes will be up.

If an HFRR profile is in the deactivated state, a reevaluation of the ARP state is performed during every commit operation or whenever the routing process (rpd) is restarted with the **restart routing** command.

### Default

If you omit the **arp-prefix-limit** statement, the **global-arp-prefix-limit** takes effect for all HFRR profiles on the device. If you omit both of these statements, there is no ARP prefix limit for host fast reroute.

### Options

**number**—Maximum number of ARP HFRR routes allowed.

**Range:** 1 through 10,000 HFRR routes

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| [Example: Configuring Link Protection with Host Fast Reroute](#) | 1078



## global-supplementary-blackout-timer (Host Fast Reroute)

### Syntax

```
global-supplementary-blackout-timer minutes;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options host-fast-reroute],  
[edit routing-options host-fast-reroute]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Set the blackout timer for all host fast-reroute (HFRR) profiles on the routing device.

When you configure HFRR, an optional ARP prefix limit sets a maximum for the number of ARP routes and, therefore FRR routes created for each HFRR profile in the routing table. This limit prevents ARP attacks from exhausting the virtual memory on the routing devices.

There are two configuration statements ([global-arp-prefix-limit](#) and [arp-prefix-limit](#)) that set the ARP prefix limit, one at the global **[edit routing-options host-fast-reroute]** hierarchy level and the other at the **[edit routing-instances *instance-name* routing-options interface *interface-name*]** hierarchy level, respectively. The global **global-arp-prefix-limit** statement sets a default ARP prefix limit for all HFRR profiles configured on the routing device. The **arp-prefix-limit** statement overrides the **global-arp-prefix-limit** for that HFRR profile for that protected interface.

Warning system log messages begin when the ARP routes in an HFRR profile reaches 80% of the configured limit. When the number crosses the 100% threshold, the HFRR profile is deactivated. When this happens, all ARP/FRR routes are deleted from the routing table. FRR routes are deleted from forwarding table as well.

After the HFRR profile is deactivated, a blackout timer is started. The timeout value of this timer is the ARP cache timeout (kernel timeout) + the supplementary blackout timer.

There are global and per-HFRR CLI statements (**global-supplementary-blackout-timer** and [supplementary-blackout-timer](#)) to configure the supplementary blackout timer. The global value is at the **[edit routing-options host-fast-reroute]** hierarchy level and applies to all HFRR profiles on the routing device. The value for the routing-instance interface is at the **[edit routing-instances *instance-name* routing-options interface *interface-name*]** hierarchy level, and overrides the global value for that HFRR profile only.



When the blackout timer expires, the HFRR profile is reactivated, and the Junos OS relearns the ARP routes and re-creates the HFRR routes. If the ARP prefix limit is not exceeded again, the HFRR routes will be up.

If an HFRR profile is in the deactivated state, a reevaluation of the ARP state is performed during every commit operation or whenever the routing process (rpd) is restarted with the **restart routing** command.

### Default

If you omit the **-supplementary-blackout-timer** statement, the **global-supplementary-blackout-timer** takes effect for all HFRR profiles on the device. If you omit both of these statements, the blackout timeout value is set to the ARP cache timeout value, which by default is 20 minutes and is configurable with the **aging-timer** statement at the **[edit system arp]** hierarchy level.

### Options

**minutes**—Number of minutes, in addition to the ARP cache timeout value, before all HFRR profiles on the routing device are reactivated after the ARP prefix limit is exceeded.

**Range:** 1 through 15 minutes

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| [Example: Configuring Link Protection with Host Fast Reroute](#) | 1078



## group (Routing Instances)

### Syntax

```
group address {
  source source-address {
    inter-region-segmented {
      fan-out fan-out value;
      threshold rate-value;
    }
    ldp-p2mp;
    pim-ssm {
      group-range multicast-prefix;
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
      static-lsp lsp-name;
    }
    threshold-rate number;
  }
  wildcard-source {
    inter-region-segmented {
      fan-out fan-out value;
    }
    ldp-p2mp;
    pim-ssm {
      group-range multicast-prefix;
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
      static-lsp lsp-name;
    }
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective],
[edit routing-instances routing-instance-name provider-tunnel selective]
```

### Release Information



Statement introduced in Junos OS Release 8.5.

The **inter-region-segmented** statement added in Junos OS Release 15.1.

### Description

Specify the IP address for the multicast group configured for point-to-multipoint label-switched paths (LSPs) and PIM-SSM GRE selective provider tunnels.

### Options

**address**—Specify the IP address for the multicast group. This address must be a valid multicast group address.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

---

[Configuring Point-to-Multipoint LSPs for an MBGP MVPN | 601](#)

[Configuring PIM-SSM GRE Selective Provider Tunnels | 763](#)



## group-address (Routing Instances VPN)

### Syntax

```
group-address address;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel pim-asm],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel pim-asm family
  inet],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel pim-asm family
  inet6],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel pim-ssm],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel pim-ssm family
  inet],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel pim-ssm family
  inet6],
[edit routing-instances routing-instance-name provider-tunnel pim-asm],
[edit routing-instances routing-instance-name provider-tunnel pim-asm family inet],
[edit routing-instances routing-instance-name provider-tunnel pim-asm family inet6],
[edit routing-instances routing-instance-name provider-tunnel pim-ssm],
[edit routing-instances routing-instance-name provider-tunnel pim-ssm family inet],
[edit routing-instances routing-instance-name provider-tunnel pim-ssm family inet6]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Starting with Junos OS Release 11.4, to provide consistency with draft-rosen 7 and next-generation BGP-based multicast VPNs, configure the provider tunnels for draft-rosen 6 anysource multicast VPNs at the **[edit routing-instances *routing-instance-name* provider-tunnel]** hierarchy level. The **mdt**, **vpn-tunnel-source**, and **vpn-group-address** statements are deprecated at the **[edit routing-instances *routing-instance-name* protocols pim]** hierarchy level. Use **group-address** in place of **vpn-group-address**.

### Description

Specify a group address on which to encapsulate multicast traffic from a virtual private network (VPN) instance.

**NOTE:** IPv6 provider tunnels are not currently supported for draft-rosen MVPNs. They are supported for MBGP MVPNs.

### Options



**address**—For IPv4, IP address whose high-order bits are 1110, giving an address range from 224.0.0.0 through 239.255.255.255, or simply 224.0.0.0/4. For IPv6, IP address whose high-order bits are FF00 (FF00::/8).

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

*Example: Configuring Any-Source Multicast for Draft-Rosen VPNs*

[Configuring Multicast Layer 3 VPNs | 564](#)

*Multicast Protocols User Guide*



## group-range (MBGP MVPN Tunnel)

### Syntax

```
group-range multicast-prefix;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  group-address source source-address pim-ssm],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  group-address wildcard-source pim-ssm],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet wildcard-source pim-ssm],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet6 wildcard-source pim-ssm],
[edit routing-instances routing-instance-name provider-tunnel selective group group-address source source-address
  pim-ssm],
[edit routing-instances routing-instance-name provider-tunnel selective group group-address wildcard-source pim-ssm],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet wildcard-source pim-ssm],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet6 wildcard-source
  pim-ssm]
```

### Release Information

Statement introduced in Junos OS Release 10.1.

### Description

Establish the multicast group address range to use for creating MBGP MVPN source-specific multicast selective PMSI tunnels.

### Options

***multicast-prefix***—Multicast group address range to be used to create MBGP MVPN source-specific multicast selective PMSI tunnels.

**Range:** Any valid, nonreserved IPv4 multicast address range

**Default:** None

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## group-rp-mapping

### Syntax

```
group-rp-mapping {
  family (inet | inet6) {
    log-interval seconds;
    maximum limit;
    threshold value;
  }
  log-interval seconds;
  maximum limit;
  threshold value;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols pim rp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols pim rp],
[edit protocols pim rp],
[edit routing-instances routing-instance-name protocols pim rp]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Configure a limit for the number of incoming group-to-RP mappings.

**NOTE:** The maximum limit settings that you configure with the **maximum** and the **family (inet | inet6) maximum** statements are mutually exclusive. For example, if you configure a global maximum group-to-RP mapping limit, you cannot configure a limit at the family level for IPv4 or IPv6. If you attempt to configure a limit at both the global level and the family level, the device will not accept the configuration.

### Options

**family (inet | inet6)**—(Optional) Specify either IPv4 or IPv6 messages to be counted towards the configured group-to-RP mapping limit.

**Default:** Both IPv4 and IPv6 messages are counted towards the configured group-to-RP limit.

The remaining statements are described separately.



**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

| [Example: Configuring PIM State Limits](#)

**host-fast-reroute****Syntax**

```
host-fast-reroute {
  global-arp-prefix-limit number;
  global-supplementary-blackout-timer minutes;
}
```

**Hierarchy Level**

```
[edit logical-systems logical-system-name routing-options],
[edit routing-options]
```

**Release Information**

Statement introduced in Junos OS Release 12.2.

**Description**

Configure global settings for all host fast reroute (HFRR) profiles configured on a routing device.

The remaining statements are described separately.

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

| [Example: Configuring Link Protection with Host Fast Reroute](#) | **1078**



## import-target

### Syntax

```
import-target {  
  target {  
    target-value;  
    receiver target-value;  
    sender target-value;  
  }  
  unicast {  
    receiver;  
    sender;  
  }  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols mvpn route-target],  
[edit routing-instances routing-instance-name protocols mvpn route-target]
```

### Release Information

Statement introduced in Junos OS Release 8.4.

### Description

Enable you to override the Layer 3 VPN import and export route targets used for importing and exporting routes for the MBGP MVPN NLRI.

### Options

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## independent-domain

### Syntax

```
independent-domain <no-attrset>;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options autonomous-system
autonomous-system],
[edit routing-instances routing-instance-name routing-options autonomous-system autonomous-system]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

**no-attrset** option introduced in Junos OS Release 10.4.

### Description

Configure an independent AS domain.

The independent domain uses transitive path attribute 128 (attribute set) messages to tunnel the independent domain's BGP attributes through the internal BGP (IBGP) core.

This improves the transparency of Layer 3 VPN services for customer networks by preventing the IBGP routes that originate within an autonomous system (AS) in the customer network from being sent to a service provider's AS. Similarly, IBGP routes that originate within an AS in the service provider's network are prevented from being sent to a customer AS.

**NOTE:** In Junos OS Release 10.3 and later, if BGP receives attribute 128 and you have not configured an independent domain in any routing instance, BGP treats the received attribute 128 as an unknown attribute.

**NOTE:** The **[edit logical-systems]** hierarchy level is not applicable in ACX Series routers.

### Options

**no-attrset**—(Optional) Disables attribute set messages on the independent AS domain.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## RELATED DOCUMENTATION

[Example: Tunneling Layer 3 VPN IPv6 Islands over an IPv4 Core Using IBGP and Independent Domains | 254](#)

[Configuring Layer 3 VPNs to Carry IBGP Traffic | 267](#)

*autonomous-system*



## inet-mvpn (BGP)

### Syntax

```
inet-mvpn {  
  signaling {  
    accepted-prefix-limit {  
      maximum number;  
      teardown percentage {  
        idle-timeout (forever | minutes);  
      }  
    }  
  }  
  damping;  
  loops number;  
  prefix-limit {  
    maximum number;  
    teardown percentage {  
      idle-timeout (forever | minutes);  
    }  
  }  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp family],  
[edit protocols bgp family],  
[edit logical-systems logical-system-name protocols bgp group group-name family],  
[edit protocols bgp group group-name family]
```

### Release Information

Statement introduced in Junos OS Release 8.4.

### Description

Enable the **inet-mvpn** address family in BGP.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## inet-mvpn (VRF Advertisement)

### Syntax

```
inet-mvpn;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name vrf-advertise-selective family],  
[edit routing-instances routing-instance-name vrf-advertise-selective family]
```

### Release Information

Statement introduced in Junos OS Release 10.1.

### Description

Enable IPv4 MVPN routes to be advertised from the VRF instance.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

| [Limiting Routes to Be Advertised by an MVPN VRF Instance](#) | 760



## inet6

### Syntax

```
inet6;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options forwarding-table chained-composite-next-hop ingress  
  labeled-bgp],  
[edit routing-options forwarding-table chained-composite-next-hop ingress labeled-bgp]
```

### Release Information

This statement was introduced in Junos OS Release 12.3.

### Description

Allows you to configure chained composite next hops for IPv6 labeled-unicast routes.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

| [Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs](#) | 1147



## inet6-mvpn (BGP)

### Syntax

```
inet6-mvpn {
  signaling {
    accepted-prefix-limit {
      maximum number;
      teardown percentage {
        idle-timeout (forever | minutes);
      }
    }
  }
  loops number
  prefix-limit {
    maximum number;
    teardown percentage {
      idle-timeout (forever | minutes);
    }
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp family],
[edit protocols bgp family],
[edit logical-systems logical-system-name protocols bgp group group-name family],
[edit protocols bgp group group-name family]
```

### Release Information

Statement introduced in Junos OS Release 10.0.

### Description

Enable the **inet6-mvpn** address family in BGP.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| [BGP Configuration Overview](#)



## inet6-mvpn (VRF Advertisement)

### Syntax

```
inet6-mvpn;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name vrf-advertise-selective family],  
[edit routing-instances routing-instance-name vrf-advertise-selective family],
```

### Release Information

Statement introduced in Junos OS Release 10.1.

### Description

Enable IPv6 MVPN routes to be advertised from the VRF instance.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## inet6-vpn

### Syntax

```
inet6-vpn (any | multicast | unicast) {
    aggregate-label;
    prefix-limit maximum;
    rib-group rib-group-name;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp family],
[edit logical-systems logical-system-name protocols bgp group group-name family],
[edit protocols bgp family],
[edit protocols bgp group group-name family]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.3 for QFX Series switches.

### Description

Enable IP version 6 (IPv6) on the provider edge (PE) router for the Layer 3 VPN.

**NOTE:** The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

### Options

**any**—Configure the family type to be both multicast and unicast.

**multicast**—Configure the family type to be multicast. This means that the BGP peers are being used only to carry the unicast routes that are being used by multicast for resolving the multicast routes.

**prefix-limit *maximum***—Maximum prefix limit.

**Range:** 1 through 4,294,967,295

**Default:** 1

**rib-group *rib-group-name***—The name of the routing table group.

**unicast**—Configure the family type to be unicast. This means that the BGP peers only carry the unicast routes that are being used for unicast forwarding purposes.

### Required Privilege Level



routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring Layer 3 VPNs to Carry IPv6 Traffic | 250](#)

*Junos OS Routing Protocols Library*



## ingress (Chained Composite Next Hop)

### Syntax

```
ingress {
    (evpn | no-evpn);
    (fec129-vpws | no-fec129-vpws);
    (l2ckt | no-l2ckt);
    (l2vpn | no-l2vpn);
    l3vpn ;
    labeled-bgp;
}
```

### Hierarchy Level

[edit logical-systems *logical-system-name* routing-options forwarding-table **chained-composite-next-hop**],  
[edit routing-options forwarding-table **chained-composite-next-hop**]

### Release Information

This statement was introduced in Junos OS Release 12.1.

**labeled-bgp** option was introduced in Junos OS Release 12.3.

**l2ckt**, **l2vpn**, **no-l2ckt**, and **no-l2vpn** options were introduced in Junos OS Release 13.3.

**evpn**, **fec129-vpws**, **no-evpn**, and **no-fec129-vpws** options were introduced in Junos OS Release 14.1.

### Description

Allows you to configure chained composite next hops for devices handling ingress traffic in the network.

#### NOTE:

- On MX Series routers containing both DPC and MPC FPCs, the chassis must be configured with **enhanced-ip** option for enabling chained composite next hops. Only the **l3vpn** option under the **ingress** statement is supported on DPC and DPCE-based MX Series routers. All other statements and functionality under the **ingress** statement are not supported on MX routers with DPC linecards.
- The **extended-space** statement is not supported in ACX Series routers.
- The [edit logical-systems] hierarchy level is not applicable in ACX Series routers.

### Default

This statement is disabled by default.

### Options



**evpn | no-evpn**—Enable or disable composite chained next hop for ingress EVPN label-switched paths (LSPs).

**fec129-vpws | no-fec129-vpws**—Enable or disable composite chained next hop for ingress FEC 129 virtual private wire service (VPWS) LSPs.

**l2ckt | no-l2ckt**—Enable or disable composite chained next hop for ingress Layer 2 circuit LSPs.

**l2vpn | no-l2vpn**—Enable or disable composite chained next hop for ingress Layer 2 virtual private network (VPN) LSPs.

The remaining statements are explained separately. See [CLI Explorer](#).

#### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

#### RELATED DOCUMENTATION

[Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs | 1147](#)

[chained-composite-next-hop | 1261](#)



## ingress-replication

### Syntax

```
ingress-replication {
  create-new-ucast-tunnel;
  label-switched-path {
    label-switched-path-template {
      (template-name | default-template);
    }
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel],
[edit protocols mvpn inter-region-template template template-name all-regions],
[edit protocols mvpn inter-region-template template template-name region region-name],
[edit routing-instances routing-instance-name provider-tunnel],
[edit routing-instances routing-instance-name provider-tunnel selective group address source source-address]
```

### Release Information

Statement introduced in Junos OS Release 10.4.

### Description

A provider tunnel type used for passing multicast traffic between routers through the MPLS cloud, or between PE routers when using MVPN. The ingress replication provider tunnel uses MPLS point-to-point LSPs to create the multicast distribution tree.

Optionally, you can specify a label-switched path template. If you configure **ingress-replication label-switched-path** and do not include **label-switched-path-template**, ingress replication works with existing LDP or RSVP tunnels. If you include **label-switched-path-template**, the tunnels must be RSVP.

### Options

**existing-unicast-tunnel**—An existing tunnel to the destination is used for ingress replication. If an existing tunnel is not available, the destination is not added. Default mode if no option is specified.

**create-new-ucast-tunnel**—When specified, a new unicast tunnel to the destination is created and used for ingress replication. The unicast tunnel is deleted later if the destination is no longer included in the multicast distribution tree.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## RELATED DOCUMENTATION

Example: Configuring Ingress Replication for IP Multicast Using MBGP MVPNs

[create-new-ucast-tunnel](#) | 1265

[mpls-internet-multicast](#) | 1330

## interface (Host Fast Reroute)

### Syntax

```
interface interface-name {  
    arp-prefix-limit number;  
    link-protection;  
    supplementary-blackout-timer minutes;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],  
[edit routing-instances routing-instance-name routing-options]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Configure host fast reroute settings, including link protection for the interface and an ARP prefix limit.

The remaining statements are described separately.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

Example: Configuring Link Protection with Host Fast Reroute | 1078



## ip-tunnel-rpf-check

### Syntax

```
ip-tunnel-rpf-check {  
    mode (strict | loose);  
    fail-filter filter-name;  
}
```

### Hierarchy Level

```
[edit routing-instances routing-instance-name routing-options forwarding-table]
```

### Release Information

Statement introduced in Junos OS Release 17.1 for MX Series Routers with MICs.

### Description

Configure the system to enable anti-spoofing protection for next-hop-based dynamic tunnels, where reverse path forwarding checks are placed to ensure that the tunnel traffic is received from a legitimate source through designated IP tunnel, where the source is reachable on the same tunnel on which the packet was received.

When a packet comes from a nondesignated source, the reverse path forwarding check fails in the strict mode, and passes in the loose mode. When a packet comes from a nonexistent source, the reverse path forwarding check fails.

By default, the reverse path forwarding check is in strict mode, where the packets are not forwarded if the source of the packet is from a nondesignated tunnel.

### Options

**mode (strict | loose)**—(Optional) Specify the mode of the reverse path forwarding check to enable anti-spoofing protection for next-hop-based dynamic tunnels.

In the strict mode (default), the reverse path forwarding check fails when the packet is received from a nondesignated tunnel source. The check passes only for packets from designated tunnels.

In the loose mode, the reverse path forwarding check passes even if the packet is received from a nondesignated tunnel source.

When the packet is from a nonexistent tunnel source, the reverse path forwarding check fails in both the strict and loose modes.

**Default:** If you omit the mode statement, the default behavior is strict mode.



**fail-filter** *filter-name*—(Optional) Attach a filter to the Layer 3 VPN to log packets that failed the reverse path forwarding check.

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

[Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview | 908](#)

[Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels | 911](#)



## interface (Virtual Tunnel in Routing Instances)

### Syntax

```
interface vt-fpc/pic/port.unit-number {
  multicast;
  primary;
  unicast;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],
[edit routing-instances routing-instance-name]
```

### Release Information

Statement introduced in Junos OS Release 9.4.

### Description

In a multiprotocol BGP (MBGP) multicast VPN (MVPN), configure a virtual tunnel (VT) interface.

VT interfaces are needed for multicast traffic on routing devices that function as combined provider edge (PE) and provider core (P) routers to optimize bandwidth usage on core links. VT interfaces prevent traffic replication when a P router also acts as a PE router (an exit point for multicast traffic).

In an MBGP MVPN extranet, if there is more than one VRF routing instance on a PE router that has receivers interested in receiving multicast traffic from the same source, VT interfaces must be configured on all instances.

Starting in Junos OS Release 12.3, you can configure multiple VT interfaces in each routing instance. This provides redundancy. A VT interface can be used in only one routing instance.

### Options

**vt-fpc/pic/port.unit-number**—Name of the VT interface.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION



[Example: Configuring Redundant Virtual Tunnel Interfaces in MBGP MVPNs](#) | 742

---

*Example: Configuring MBGP MVPN Extranets*



## inter-region

### Syntax

```
inter-region [
    template template-name;
    no-inter-region-segmentation;
]
```

### Hierarchy Level

```
[edit routing-instances instance-name provider-tunnel]
```

### Release Information

Statement introduced in Junos OS Release 15.1.

### Description

Specify template to be used in inter-region segmentation. The tunnels types used will be based on the template mentioned. If a virtual routing and forwarding (VRF) in the area boundary router (ABR) does not want to participate in the inter-region segmentation then **no-inter-region-segmentation** can be specified.

### Options

**no-inter-region-segmentation**— Specify to avoid the template mapping an ABR that is not involved in the inter-region segmentation.

**template *template-name***— Specify the template to be used in the inter-region segmentation.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview | 608](#)

[Example: Configuring Segmented Inter-Area P2MP LSP | 613](#)

[Configuring Segmented Inter-Area P2MP LSP | 610](#)

[inter-region-segmented | 1309](#)

[inter-region-template | 1311](#)

[region | 1361](#)

[template | 1391](#)



## inter-region-segmented

### Syntax

```
inter-region-segmented {
    fan-out fan-out value;
    threshold rate-value;
}
```

### Hierarchy Level

```
[edit routing-instances instance-name provider-tunnel selective group multicast IP address source source IP-address],
[edit routing-instances instance-name provider-tunnel selective group multicast IP address wildcard-source],
[edit routing-instances instance-name provider-tunnel selective wildcard-group-inet wildcard-source],
[edit routing-instances instance-name provider-tunnel selective wildcard-group-inet6 wildcard-source]
```

### Release Information

Statement introduced in Junos OS Release 15.1.

### Description

Configure segmentation of inter-region on an ingress PE router or transit area boundary routers (ABRs) by specifying only a fan-out factor or threshold rate or both. The inter-region segmentation allows the PE router to signal segmented S-PMSI A-D routes. If the segmentation is based on the threshold, then the MVPN starts migrating the traffic flow to a segmented S-PMSI when the threshold configured for the selective tunnel reaches the threshold rate. The threshold value can be configured for S-PMSI with LDP-P2MP, IR, and RSVP-TE tunnel types. If the fan-out value is configured, then the traffic flow is moved to segmented S-PMSI when the number of leaf A-D routes per S-PMSI meets the configured fan-out value. The fan-out value can be configured for wildcard S-PMSI, and S-PMSI.

If both threshold and fan-out values are set for S-PMSI with LDP-P2MP, IR, and RSVP-TE tunnel types, then the traffic flow to the segmented inter-region happens only when the traffic rate multiplied by the number of leaf A-D routes exceeds the threshold value.

### Options

**fan-out** *fan-out-value*— Specify the number of remote leaf A-D route values for fan-out. Once the number of leaf A-D routes per S-PMSI meets the configured fan-out value, the inter-region segmentation is triggered and the traffic flow is directed to segmented S-PMSI.

**Range:** 1 through 10000

**threshold** *rate-value*— Specify the data threshold rate to trigger inter-region segmentation.



**NOTE:** This option is available only at the following hierarchy levels:

```
[edit routing-instances instance-name provider-tunnel selective group multicast IP address source
  source IP-address],
[edit routing-instances instance-name provider-tunnel selective group multicast IP address
  wildcard-source]
```

**Range:** 0 through 1000000 Kilobits

**Required Privilege Level**

- routing—To view this statement in the configuration.
- routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

<a href="#">Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview   608</a>
<a href="#">Example: Configuring Segmented Inter-Area P2MP LSP   613</a>
<a href="#">Configuring Segmented Inter-Area P2MP LSP   610</a>
<a href="#">all-regions   1255</a>
<a href="#">inter-region   1308</a>
<a href="#">inter-region-template   1311</a>
<a href="#">region   1361</a>
<a href="#">template   1391</a>



## inter-region-template

### Syntax

```

inter-region-template {
  template template-name {
    all-regions {
      incoming;
      ingress-replication {
        create-new-ucast-tunnel;
        label-switched-path {
          label-switched-path-template (Multicast) {
            (default-template | lsp-template-name);
          }
        }
      }
    }
    ldp-p2mp;
    rsvp-te {
      label-switched-path-template (Multicast) {
        (default-template | lsp-template-name);
      }
      static-lsp static-lsp;
    }
    region region-name {
      incoming;
      ingress-replication {
        create-new-ucast-tunnel;
        label-switched-path {
          label-switched-path-template (Multicast) {
            (default-template | lsp-template-name);
          }
        }
      }
    }
    ldp-p2mp;
    rsvp-te {
      label-switched-path-template (Multicast) {
        (default-template | lsp-template-name);
      }
      static-lsp static-lsp;
    }
  }
}

```

### Hierarchy Level



[edit protocols mvpn]

### Release Information

Statement introduced in Junos OS Release 15.1.

### Description

Define MVPN inter-region tunnel mapping template. A template is configured on a transit area boundary router (ABR) to define the tunnel type to be used for a given region. There are four types of tunnels that can be used:

- Incoming — Indicates that the tunnel type used across the ABR remains unchanged.
- Ingress-replication — A tunnel type used for passing multicast traffic between routers through the MPLS cloud, or between PE routers when using MVPN. The ingress replication provider tunnel uses MPLS point-to-point LSPs to create the multicast distribution tree.
- Ldp-p2mp — Specify a point-to-multipoint provider tunnel with LDP signaling for an MBGP MVPN.
- Rsvp-te — Configure RSVP tunnels to multicast traffic flooding using point-to-multipoint LSPs.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview | 608](#)

[Example: Configuring Segmented Inter-Area P2MP LSP | 613](#)

[Configuring Segmented Inter-Area P2MP LSP | 610](#)

[all-regions | 1255](#)

[inter-region-segmented | 1309](#)

[region | 1361](#)

[template | 1391](#)



## I3vpn (ingress)

### Syntax

```
I3vpn {
    extended-space;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options forwarding-table chained-composite-next-hop ingress],
[edit routing-options forwarding-table chained-composite-next-hop ingress]
```

### Release Information

Statement introduced in Junos OS Release 12.1.

Statement introduced in Junos OS Release 12.3X52 for ACX Series routers.

Statement introduced in Junos OS Release 11.3 for QFX Series switches.


### Description

(M120 routers, M320 routers with Enhanced III FPCs, and MX Series routers only) Accept larger numbers of Layer 3 VPN BGP updates with unique inner VPN labels (up to one million). The neighboring provider edge (PE) routers are typically from other vendors and are configured to assign a unique inner label to each Layer 3 VPN BGP route.

#### NOTE:

- On MX Series routers, this statement is not supported when the router has both DPCs and MPCs installed. You must remove one or the other type of card to successfully use this statement.
- On MX Series routers containing both DPC and MPC FPCs, the chassis must be configured with **enhanced-ip** option for enabling chained composite next hops. Only the **I3vpn** option under the **ingress** statement is supported on DPC and DPCE-based MX Series routers. All other statements and functionality under the **ingress** statement are not supported on MX routers with DPC linecards.
- In Junos OS Release 11.4 and earlier, the **I3vpn** statement was titled as **I3vpn-composite-nexthop**, and the statement was available at the **[edit logical-systems *logical-system-name* routing-options]** and **[edit routing-options]** hierarchy levels.
- On ACX Series routers, the **extended-space** statement is not supported.





**NOTE:** The **[edit logical-systems]** hierarchy level is not applicable in ACX Series routers.

The remaining statement is explained separately.

**Default**

This statement is disabled by default.

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

---

[Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs | 1147](#)  
[extended-space | 1274](#)



## I3vpn (transit)

### Syntax

```
transit  
  l3vpn;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options forwarding-table chained-composite-next-hop transit]  
[edit routing-options forwarding-table chained-composite-next-hop transit]
```

### Release Information

Statement introduced in Junos OS Release 12.1.

### Description

Configure Layer 3 VPN settings on the transit router.

This statement and the associated functionality is available on PTX Packet Transport Routers and QFX10000 switches.

**NOTE:** You can configure **transit l3vpn** only after configuring the **enhanced-ip** operation mode. See *network-services* to configure the **enhanced-ip** mode.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[chained-composite-next-hop](#) | [1261](#)



## label

### Syntax

```
label {  
    allocation label-allocation-policy;  
    substitution label-substitution-policy;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options]  
[edit routing-instances routing-instance-name routing-options]
```

### Release Information

Statement introduced in Junos OS Release 10.0.

### Description

Specify label allocation and substitution policies on a per-route basis.

### Options

**allocation *label-allocation-policy***—Specify a policy to generate labels on a per-route basis.

**substitution *label-substitution-policy***—Specify a policy to substitute labels on a per-route basis. The label substitution policy is used to determine whether or not a label should be substituted on an AS border router. The results of the policy operation are either accept (label substitution is performed) or reject (label substitution is not performed).

**Default:** accept

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

| [Configuring a Label Allocation and Substitution Policy for VPNs](#) | 93



## label-switched-path (Protocols MVPN)

### Syntax

```
label-switched-path {
  label-switched-path-template (Multicast){
    (default-template | lsp-template-name);
  }
}
```

### Hierarchy Level

```
[edit protocols mvpn inter-region-template template template-name region region-name ingress-replication]
[edit protocols mvpn inter-region-template template template-name all-regions ingress-replication]
```

### Release Information

Statement introduced in Junos OS Release 15.1.

### Description

Specify point-to-point LSP unicast tunnel at the ABRs. Optionally, you can specify a label-switched path template. If you configure **ingress-replication label-switched-path** and do not include **label-switched-path-template**, ingress replication works with existing LDP or RSVP tunnels. If you include **label-switched-path-template**, then the RSVP tunnels should be enabled across the ABR regions.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview | 608](#)

[all-regions | 1255](#)

[inter-region | 1308](#)

[inter-region-template | 1311](#)

[inter-region-segmented | 1309](#)

[region | 1361](#)

[template | 1391](#)

[Example: Configuring Segmented Inter-Area P2MP LSP | 613](#)

[Configuring Segmented Inter-Area P2MP LSP | 610](#)



## label-switched-path-template (Multicast)

### Syntax

```
label-switched-path-template {
  (default-template | lsp-template-name);
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel rsvp-te],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel ingress-replication
  label-switched-path],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  address source source-address rsvp-te],
[edit logical-systems logical-system-name routing-options dynamic-tunnels tunnel-name rsvp-te entry-name],
[edit protocols mvpn inter-region-segmented template template-name region region-name ingress-replication
  label-switched-path],
[edit protocols mvpn inter-region-segmented template template-name region region-name rsvpe-te],
[edit protocols mvpn inter-region-template template template-name all-regions ingress-replication
  label-switched-path],
[edit protocols mvpn inter-region-template template template-name all-regions rsvp-te],
[edit routing-instances routing-instance-name provider-tunnel ingress-replication label-switched-path],
[edit routing-instances routing-instance-name provider-tunnel rsvp-te],
[edit routing-instances routing-instance-name provider-tunnel selective group address source source-address rsvp-te],
[edit routing-options dynamic-tunnels tunnel-name rsvp-te entry-name]
[edit routing-instances instance-name provider-tunnel]
```

### Release Information

Statement introduced in Junos OS Release 8.5.

Statement introduced in Junos OS Release 18.2. under the heirarchy level [edit routing-instances *instance-name* provider-tunnel]

### Description

Specify the LSP template. An LSP template is used as the basis for other dynamically generated LSPs. This feature can be used for a number of applications, including point-to-multipoint LSPs, flooding VPLS traffic, configuring ingress replication for IP multicast using MBGP MVPNs, and to enable RSVP automatic mesh. There is no default setting for the **label-switched-path-template** statement, so you must configure either the default-template using the **default-template** option, or you must specify the name of your preconfigured LSP template.

### Options

**default-template**—Specify that the default LSP template be used for the dynamically generated LSPs.



***lsp-template-name***—Specify the name of an LSP to be used as a template for the dynamically generated LSPs.

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

*Example: Configuring Ingress Replication for IP Multicast Using MBGP MVPNs*

[Configuring Point-to-Multipoint LSPs for an MBGP MVPN | 601](#)

*Configuring Dynamic Point-to-Multipoint Flooding LSPs*

*Configuring RSVP Automatic Mesh*



## labeled-bgp

### Syntax

```
labeled-bgp {  
  inet6;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-options forwarding-table chained-composite-next-hop ingress],  
[edit routing-options forwarding-table chained-composite-next-hop ingress]
```

### Release Information

This statement was introduced in Junos OS Release 12.3.

### Description

Allows you to configure chained composite next hops for IPv6 labeled-unicast routes.

The other statement is explained separately.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

| [Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs](#) | 1147



## labeled-unicast

### Syntax

```
labeled-unicast {
  aggregate-label {
    community community-name;
  }
  explicit-null {
    connected-only;
  }
  per-group-label;
  resolve-vpn;
  traffic-statistics {
    file filename <world-readable | no-world-readable>;
    interval seconds;
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp family inet],
[edit logical-systems logical-system-name protocols bgp group group-name family inet],
[edit protocols bgp family inet],
[edit protocols bgp group group-name family inet]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

Statement introduced in Junos OS Release 17.1 for QFX10000 switches.


### Description

Advertise labeled routes from the inet.0 VPN, and place labeled routes into the inet.0 VPN. When the **labeled-unicast** statement is used, the local router automatically performs a next hop to self on all routes advertised into EBGp from IBGP and into IBGP from EBGp.

### Options

**resolve-vpn**—(Optional) Store labeled routes in the inet.3 or inet6.3 routing table to resolve routes for a provider edge (PE) router located in a different autonomous system (AS). For a PE router to install a route in the virtual routing and forwarding (VRF) table, the next hop must resolve to a route stored in the inet.3 or inet6.3 routing table. This option is also used to configure inter-AS VPLS with MAC operations.





**NOTE:** VPLS is not supported by QFX Series switches.

The other statements are explained separately.

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

[Configuring Carrier-of-Carriers VPNs for Customers That Provide Internet Service | 510](#)

[Configuring Carrier-of-Carriers VPNs for Customers That Provide VPN Service | 529](#)

*Configuring Inter-AS VPLS with MAC Processing at the ASBR*



## link-protection (Host Fast Reroute)

### Syntax

```
link-protection;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options interface  
  interface-name],  
[edit routing-instances routing-instance-name routing-options interface interface-name]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Enable link protection on a specified interface in a routing instance.

Configuring link protection on an interface ensures that traffic is rerouted to the destination device through alternate loop-free paths that traverse the protected interface.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Configuring Link Protection with Host Fast Reroute](#) | 1078



## localized-fib

### Syntax

```
localized-fib {  
    fpc-slot fpc-slot-number;  
}
```

### Hierarchy Level

```
[edit routing-instances instance-name routing-options]
```

### Release Information

Statement introduced in Junos OS Release 14.2.

### Description

Localize the VRF routing instance routes to a specific FPC of CE-facing physical interfaces, or specify an FPC slot number if the CE-facing interfaces are logical interfaces like AE or RSQL or IRB.

### Options

**fpc-slot *fpc-slot-number***— Specify the FPC slot number to localize the VRF routing instance for logical interfaces like AE or RSQL or IRB.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

---

[Understanding VRF Localization in Layer 3 VPNs | 67](#)

---

[Example: Improving Scalability Using VRF Localization for Layer 3 VPNs | 70](#)

---

[vpn-localization | 1402](#)



## maximum-paths

### Syntax

```
maximum-paths path-limit <log-interval seconds> <log-only | threshold value>;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],
[edit logical-systems logical-system-name routing-options],
[edit routing-instances routing-instance-name routing-options],
[edit routing-options]
```

### Release Information

Statement introduced in Junos OS Release 8.0.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

### Description

Configure a limit for the number of routes installed in a routing table based upon the route path.

**NOTE:** The **maximum-paths** statement is similar to the **maximum-prefixes** statement. The **maximum-prefixes** statement limits the number of unique destinations in a routing instance. For example, suppose a routing instance has the following routes:

```
OSPF 10.10.10.0/24
ISIS 10.10.10.0/24
```

These are two routes, but only one destination (prefix). The **maximum-paths** limit applies the total number of routes (two). The **maximum-prefixes** limit applies to the total number of unique prefixes (one).

### Options

**log-interval *seconds***—(Optional) Minimum time interval (in seconds) between log messages.

**Range:** 5 through 86,400

**log-only**—(Optional) Sets the route limit as an advisory limit. An advisory limit triggers only a warning, and additional routes are not rejected.



***path-limit***—Maximum number of routes. If this limit is reached, a warning is triggered and additional routes are rejected.

**Range:** 1 through 4,294,967,295 ( $2^{32} - 1$ )

**Default:** No default

***threshold value***—(Optional) Percentage of the maximum number of routes that starts triggering a warning. You can configure a percentage of the ***path-limit*** value that starts triggering the warnings.

**Range:** 1 through 100

**NOTE:** When the number of routes reaches the ***threshold*** value, routes are still installed into the routing table while warning messages are sent. When the number of routes reaches the ***path-limit*** value, then additional routes are rejected.

#### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

#### RELATED DOCUMENTATION

| [Limiting the Number of Paths and Prefixes Accepted from CE Routers in Layer 3 VPNs](#) | 290



## maximum-prefixes

### Syntax

```
maximum-prefixes prefix-limit <log-interval seconds> <log-only | threshold percentage>;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],
[edit logical-systems logical-system-name routing-options],
[edit routing-instances routing-instance-name routing-options],
[edit routing-options]
```

### Release Information

Statement introduced in Junos OS Release 8.0.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

### Description

Configure a limit for the number of routes installed in a routing table based upon the route prefix.

Using a prefix limit, you can curtail the number of prefixes received from a CE router in a VPN. Prefix limits apply only to dynamic routing protocols and are not applicable to static or interface routes.

**NOTE:** The **maximum-prefixes** statement is similar to the **maximum-paths** statement. The **maximum-prefixes** statement limits the number of unique destinations in a routing instance. For example, suppose a routing instance has the following routes:

```
OSPF 10.10.10.0/24
ISIS 10.10.10.0/24
```

These are two routes, but only one destination (prefix). The **maximum-paths** limit applies the total number of routes (two). The **maximum-prefixes** limit applies to the total number of unique prefixes (one).

### Options

**log-interval *seconds***—(Optional) Minimum time interval (in seconds) between log messages.

**Range:** 5 through 86,400



**log-only**—(Optional) Sets the prefix limit as an advisory limit. An advisory limit triggers only a warning, and additional routes are not rejected.

**prefix-limit**—Maximum number of route prefixes. If this limit is reached, a warning is triggered and any additional routes are rejected.

**Range:** 1 through 4,294,967,295

**Default:** No default

**threshold value**—(Optional) Percentage of the maximum number of prefixes that starts triggering a warning. You can configure a percentage of the **prefix-limit** value that starts triggering the warnings.

**Range:** 1 through 100

**NOTE:** When the number of routes reaches the **threshold** value, routes are still installed into the routing table while warning messages are sent. When the number of routes reaches the **prefix-limit** value, then additional routes are rejected.

#### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

#### RELATED DOCUMENTATION

| [Limiting the Number of Paths and Prefixes Accepted from CE Routers in Layer 3 VPNs](#) | 290



## metric (Protocols OSPF Sham Link)

### Syntax

```
metric number;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf area area-id
  sham-link-remote address],
[edit routing-instances routing-instance-name protocols ospf area area-id sham-link-remote address]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

### Description

Specify the cost of using the OSPF sham link.

### Default

*number*—1

### Options

*number*—1 through 65,535

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| *Example: Giving VPN Backbones Priority with OSPFv2 Sham Links for Layer 3 VPNs*



## mpls-internet-multicast

### Syntax

```
mpls-internet-multicast;
```

### Hierarchy Level

```
[edit routing-instances routing-instance-name instance-type]  
[edit protocols pim]
```

### Release Information

Statement introduced in Junos OS Release 11.1.

### Description

A nonforwarding routing instance type that supports Internet multicast over an MPLS network for the default master instance. No interfaces can be configured for it. Only one **mpls-internet-multicast** instance can be configured for each logical system.

The **mpls-internet-multicast** configuration statement is also explicitly required under PIM in the master instance.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

*Example: Configuring Ingress Replication for IP Multicast Using MBGP MVPNs*

[ingress-replication](#) | **1302**



## multicast (Virtual Tunnel in Routing Instances)

### Syntax

```
multicast;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name interface vt-fpc/pic/port.unit-number],  
[edit routing-instances routing-instance-name interface vt-fpc/pic/port.unit-number]
```

### Release Information

Statement introduced in Junos OS Release 9.4.

### Description

In a multiprotocol BGP (MBGP) multicast VPN (MVPN), configure the virtual tunnel (VT) interface to be used for multicast traffic only.

### Default

If you omit this statement, the VT interface can be used for both multicast and unicast traffic.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Configuring Redundant Virtual Tunnel Interfaces in MBGP MVPNs | 742](#)

[Example: Configuring MBGP MVPN Extranets](#)



## multihop

### Syntax

```
multihop {
  no-nexthop-change; no-nexthop-self;
  ttl ttl-value;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp],
[edit logical-systems logical-system-name protocols bgp group group-name],
[edit logical-systems logical-system-name protocols bgp group group-name neighbor address],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name
  neighbor address],
[edit protocols bgp],
[edit protocols bgp group group-name],
[edit protocols bgp group group-name neighbor address],
[edit routing-instances routing-instance-name protocols bgp],
[edit routing-instances routing-instance-name protocols bgp group group-name],
[edit routing-instances routing-instance-name protocols bgp group group-name neighbor address]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Support for setting the TTL on single-hop external BGP (EBGP) peers introduced in Junos OS Release 13.3.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

### Description

Configure an EBGP multihop session.

For Layer 3 VPNs, you configure the EBGP multihop session between the PE and CE routing devices. This allows you to configure one or more routing devices between the PE and CE routing devices.

An external confederation peer is a special case that allows unconnected third-party next hops. You do not need to configure multihop sessions explicitly in this particular case because multihop behavior is implied.

If you have external BGP confederation peer-to-loopback addresses, you still need the multihop configuration.





**NOTE:** You cannot configure the **accept-remote-nexthop** statement at the same time.

**Default**

If you omit this statement, all EBGP peers are assumed to be directly connected (that is, you are establishing a nonmultihop, or “regular,” BGP session), and the default time-to-live (TTL) value is 1.



## Options

**no-nexthop-change** **no-nexthop-self**—Specify that the BGP next-hop value not be changed. For route advertisements, specify the **no-nexthop-self** option.

An external confederation peer is a special case that allows unconnected third-party next hops. You do not need to configure multihop sessions explicitly in this particular case; multihop behavior is implied.

If you have external BGP confederation peer-to-loopback addresses, you still need the multihop configuration.

**NOTE:** You cannot configure the **accept-remote-nexthop** statement at the same time.

**Default:** If you omit this statement, all EBGp peers are assumed to be directly connected (that is, you are establishing a nonmultihop, or “regular,” BGP session), and the default time-to-live (TTL) value is 1.

**ttl** **ttl-value**—Configure the maximum time-to-live (TTL) value for the TTL in the IP header of BGP packets.

Configure the maximum time-to-live (TTL) value for the TTL in the IP header of BGP packets.

For BGP multihop scenarios, in which EBGp peers are not directly connected to each other, setting a TTL is optional. The default setting is 64.

For BGP single-hop scenarios, in which external EBGp peers are directly connected to each other, you can, optionally, set the TTL to 255 and configure an inbound firewall filter to allow only BGP control packets with the TTL set to 255. This is in accordance with RFC 3682, *The Generalized TTL Security Mechanism (GTSM)*. For example:

Send all BGP control packets with the TTL set to 255:

```
user@host# show protocols
bgp {
  group toAS2 {
    type external;
    peer-as 2;
    ttl 255;
    neighbor 10.1.2.3;
    neighbor 10.3.4.5;
    neighbor 10.5.6.7;
  }
}
```

Accept only BGP control packets that have the TTL set to 255:



```

user@host# show firewall
filter ttl-security {
  term gt-sm {
    from {
      source-address {
        10.1.2.3/32;
        10.3.4.5/32;
        10.5.6.7/32;
      }
      protocol tcp;
      ttl-except 255;
      port 179;
    }
    then {
      discard;
    }
  }
  term else {
    then {
      accept;
    }
  }
}

```

Apply the firewall filter to the inbound interface for the EBGP single-hop peer:

```

user@host# show interfaces
ge-1/0/0 {
  unit 0 {
    family inet {
      filter {
        input gt-sm;
      }
    }
  }
}

```

**Range:** 1 through 255, for multihop peers

**Default:** 64 (for multihop EBGP sessions, confederations, and IBGP sessions)

**Range:** 1 or 255, for single-hop peers

**Default:** 1 (for single-hop EBGP sessions)



**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

*Example: Configuring EBGP Multihop Sessions*

---

[Configuring EBGP Multihop Sessions Between PE and CE Routers in Layer 3 VPNs | 213](#)

---

*accept-remote-nexthop*

---

<https://www.juniper.net/us/en/community/junos/script-automation/library/configuration/ttl-security/>



## multipath (Routing Options)

### Syntax

```
multipath {
  vpn-unequal-cost equal-external-internal;
  as-path-compare;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options rib
  routing-table-name],
[edit routing-instances routing-instance-name routing-options],
[edit routing-instances routing-instance-name routing-options rib routing-table-name]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

**equal-external-internal** option added in Junos OS Release 8.4.

**as-path-compare** option introduced in Junos OS Release 10.1

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 11.3 for QFX Series switches.

### Description

Enable protocol-independent load balancing for Layer 3 VPNs. This allows the forwarding next hops for both the active route and alternative paths to be used for load balancing. For IPv6, you must configure the **multipath** statement at both the **[edit routing-instances *routing-instance-name* routing-options]** hierarchy level and the **[edit routing-instances *routing-instance-name* routing-options rib *routing-table-name*]** hierarchy level.

Protocol-independent load balancing is applied to VPN routes that are equal up to their router identifiers (**router-id**) with regard to route selection.

The options are explained separately.

**NOTE:** ACX Series routers do not support **vpn-unequal-cost** statement.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## RELATED DOCUMENTATION

| [Configuring Protocol-Independent Load Balancing in Layer 3 VPNs](#) | 1132



## mvpn

### Syntax

```

mvpn {
  inter-region-template{
    template template-name {
      all-regions {
        incoming;
        ingress-replication {
          create-new-ucast-tunnel;
          label-switched-path {
            label-switched-path-template (Multicast) {
              (default-template | lsp-template-name);
            }
          }
        }
      }
    }
    ldp-p2mp;
    rsvp-te {
      label-switched-path-template (Multicast) {
        (default-template | lsp-template-name);
      }
    }
    static-lsp static-lsp;
    region region-name{
      incoming;
      ingress-replication {
        create-new-ucast-tunnel;
        label-switched-path {
          label-switched-path-template (Multicast){
            (default-template | lsp-template-name);
          }
        }
      }
    }
    ldp-p2mp;
    rsvp-te {
      label-switched-path-template (Multicast) {
        (default-template | lsp-template-name);
      }
    }
    static-lsp static-lsp;
  }
}
}
mvpn-mode (rpt-spt | spt-only);
receiver-site;

```



```

sender-site;
route-target {
  export-target {
    target target-community;
    unicast;
  }
  import-target {
    target {
      target-value;
      receiver target-value;
      sender target-value;
    }
    unicast {
      receiver;
      sender;
    }
  }
}
}
}

```

## Hierarchy Level

```

[edit logical-systems logical-system-name protocols],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols],
[edit protocols],
[edit routing-instances routing-instance-name protocols]

```

## Release Information

Statement introduced in Junos OS Release 8.4.

Support for the **traceoptions** statement at the **[edit protocols mvpn]** hierarchy level introduced in Junos OS Release 13.3.

Support for the **inter-region-template** statement at the **[edit protocols mvpn]** hierarchy level introduced in Junos OS Release 15.1.

## Description

Enable next-generation multicast VPNs in a routing instance.

## Options

**receiver-site**—Allow sites with multicast receivers.

**sender-site**—Allow sites with multicast senders.

The remaining statements are explained separately. See [CLI Explorer](#).



**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

[Configuring Routing Instances for an MBGP MVPN | 685](#)

## mvpn-mode

**Syntax**

```
mvpn-mode (rpt-spt | spt-only);
```

**Hierarchy Level**

```
[edit logical-systems profile-name routing-instances instance-name protocols mvpn],  
[edit routing-instances instance-name protocols mvpn]
```

**Release Information**

Statement introduced in Junos OS Release 10.0.

**Description**

Configure the mode for customer PIM (C-PIM) join messages. Mixing MVPN modes within the same VPN is not supported. For example, you cannot have spt-only mode on a source PE and rpt-spt mode on the receiver PE.

**Default**

spt-only

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

[Configuring Shared-Tree Data Distribution Across Provider Cores for Providers of MBGP MVPNs | 686](#)

[Configuring SPT-Only Mode for Multiprotocol BGP-Based Multicast VPNs | 687](#)



## no-vrf-advertise

### Syntax

```
no-vrf-advertise;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit routing-instances routing-instance-name]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in cRPD Release 19.4R1

### Description

Prevent advertising VPN routes from a VRF routing instance to remote PE routers.

Within a hub-and-spoke configuration, you can configure a PE router to not advertise VPN routes from the primary (hub) routing instance. Instead, these routes are advertised from the secondary (downstream) routing instance. You can do this without configuring routing table groups, by using the **no-vrf-advertise** statement.

**NOTE:** This statement does not prevent the exportation of VPN routes to other VRF routing instances on the same router by configuring the **[edit routing-options auto-export]** statement.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[Configuring Policies for the VRF Table on PE Routers in VPNs | 102](#)

[Configuring Hub-and-Spoke VPN Topologies: One Interface | 788](#)

[Limiting Routes to Be Advertised by an MVPN VRF Instance | 760](#)

[vrf-advertise-selective | 1404](#)



## no-vrf-propagate-ttl

### Syntax

```
no-vrf-propagate-ttl;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit protocols routing-instances routing-instance-name]
```

### Release Information

Statement introduced in Junos OS Release 10.4.

### Description

Disable normal time-to-live (TTL) decrementing in a VRF routing instance. You configure this statement once per routing instance, and it affects only RSVP-signaled or LDP-signaled LSPs in the routing instance. When this router acts as an ingress router for an LSP, it pushes an MPLS header with a TTL value of 255, regardless of the IP packet TTL. When the router acts as the penultimate router, it pops the MPLS header without writing the MPLS TTL into the IP packet.

### Default

Normal TTL decrementing enabled; the TTL field value is decremented by 1 as the packet passes through each label-switched router in the LSP.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Diagnosing Networking Problems Related to Layer 3 VPNs by Disabling TTL Decrementing](#) | **1201**

---

*Disabling Normal TTL Decrementing*



## per-group-label

### Syntax

```
per-group-label;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp family inet labeled-unicast],  
[edit logical-systems logical-system-name protocols bgp group group-name family inet labeled-unicast],  
[edit protocols bgp family inet labeled-unicast],  
[edit protocols bgp group group-name family inet labeled-unicast]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series.

### Description

Account for traffic from each customer separately by advertising separate labels for the same prefix to the peer routers in the BGP groups.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

*Configuring BGP to Gather Interprovider and Carrier-of-Carriers VPNs Statistics*

[Understanding Interprovider and Carrier-of-Carriers VPNs](#) | 400



## pim-asm

### Syntax

```
pim-asm {  
  group-address (Routing Instances) address;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel],  
[edit routing-instances routing-instance-name provider-tunnel]
```

### Release Information

Statement introduced in Junos OS Release 8.3.

### Description

Specify a Protocol Independent Multicast (PIM) sparse mode provider tunnel for an MBGP MVPN or for a draft-rosen MVPN.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## pim-ssm (Selective Tunnel)

### Syntax

```
pim-ssm {
  group-range multicast-prefix;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  group-address source source-address],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  group-address wildcard-source],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet wildcard-source],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet6 wildcard-source],
[edit routing-instances routing-instance-name provider-tunnel selective group group-address source source-address],
[edit routing-instances routing-instance-name provider-tunnel selective group group-address wildcard-source],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet wildcard-source],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet6 wildcard-source]
```

### Release Information

Statement introduced in Junos OS Release 10.1.

### Description

Establish the multicast group address range to use for creating MBGP MVPN source-specific multicast selective PMSI tunnels.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## primary (Virtual Tunnel in Routing Instances)

### Syntax

```
primary;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name interface vt-fpc/pic/port.unit-number],  
[edit routing-instances routing-instance-name interface vt-fpc/pic/port.unit-number]
```

### Release Information

Statement introduced in Junos OS Release 12.3.

### Description

In a multiprotocol BGP (MBGP) multicast VPN (MVPN), configure the virtual tunnel (VT) interface to be used as the primary interface for multicast traffic.

Junos OS supports up to eight VT interfaces configured for multicast in a routing instance to provide redundancy for MBGP (next-generation) MVPNs. This support is for RSVP point-to-multipoint provider tunnels as well as multicast Label Distribution Protocol (MLDP) provider tunnels. This feature works for extranets as well.

This statement allows you to configure one of the VT interfaces to be the primary interface, which is always used if it is operational. If a VT interface is configured as the primary, it becomes the nexthop that is used for traffic coming in from the core on the label-switched path (LSP) into the routing instance. When a VT interface is configured to be primary and the VT interface is used for both unicast and multicast traffic, only the multicast traffic is affected.

If no VT interface is configured to be the primary or if the primary VT interface is unusable, one of the usable configured VT interfaces is chosen to be the nexthop that is used for traffic coming in from the core on the LSP into the routing instance. If the VT interface in use goes down for any reason, another usable configured VT interface in the routing instance is chosen. When the VT interface in use changes, all multicast routes in the instance also switch their reverse-path forwarding (RPF) interface to the new VT interface to allow the traffic to be received.

To realize the full benefit of redundancy, we recommend that when you configure multiple VT interfaces, at least one of the VT interfaces be on a different Tunnel PIC from the other VT interfaces. However, Junos OS does not enforce this.

### Default

If you omit this statement, Junos OS chooses a VT interface to be the active interface for multicast traffic.

### Required Privilege Level



routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Configuring Redundant Virtual Tunnel Interfaces in MBGP MVPNs | 742](#)

*Example: Configuring MBGP MVPN Extranets*



## protect core

### Syntax

```
protect core;
```

### Hierarchy Level

```
[edit routing-instances routing-instance-name routing-options]
```

### Release Information

Statement introduced in Junos OS Release 13.2.

Support in Layer 3 VPN routers is extended to BGP PIC with multiple routes in the global tables such as inet and inet6 unicast, and inet and inet6 labeled unicast in Junos OS Release 15.1.

Support for Resource Reservation Protocol (RSVP) introduced in Junos OS Release 16.1.

### Description

In an MPLS VPN Core network, enable BGP Prefix-Independent Convergence (PIC) Edge to install a VPN route in the forwarding table for use as an alternate path when a provider edge (PE) router fails or connectivity to a PE router is lost. This alternate link is used until global convergence through the interior gateway protocol (IGP) occurs. Both OSPF with LDP or RSVP, and IS-IS with LDP or RSVP are supported.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring BGP PIC Edge for MPLS Layer 3 VPNs | 927](#)

[Example: Configuring Provider Edge Link Protection in Layer 3 VPNs | 1033](#)

[Introduction to Configuring Layer 3 VPNs | 45](#)

[LDP Operation](#)

[Understanding Multiprotocol BGP](#)



## protection (Protocols BGP)

### Syntax

```
protection;
```

### Hierarchy Level

```
[edit routing-instances instance-name protocols bgp family inet unicast],  
[edit routing-instances instance-name protocols bgp family inet6 unicast],  
[edit routing-instances instance-name protocols bgp family inet labeled-unicast],  
[edit routing-instances instance-name protocols bgp family inet6 labeled-unicast]
```

### Description

Configure the backup path to protect the active provider edge path in a Layer 3 VPN or a BGP labeled unicast path.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[Example: Configuring Provider Edge Link Protection in Layer 3 VPNs | 1033](#)

[Example: Configuring Provider Edge Link Protection for BGP Labeled Unicast Paths | 1054](#)



## provider-tunnel

### Syntax

```

provider-tunnel {
  external-controller pccd;
  family {
    inet {
      ingress-replication {
        create-new-ucast-tunnel;
        label-switched-path-template {
          (default-template | lsp-template-name);
        }
      }
      ldp-p2mp;
      mdt {
        data-mdt-reuse;
        group-range multicast-prefix;
        threshold {
          group group-address {
            source source-address {
              rate threshold-rate;
            }
          }
        }
        tunnel-limit limit;
      }
      pim-asm {
        group-address (Routing Instances) address;
      }
      pim-ssm {
        group-address (Routing Instances) address;
      }
      rsvp-te {
        label-switched-path-template {
          (default-template | lsp-template-name);
        }
        static-lsp lsp-name;
      }
    }
    inet6 {
      ingress-replication {
        create-new-ucast-tunnel;
        label-switched-path-template {
          (default-template | lsp-template-name);

```



```

    }
  }
  ldp-p2mp;
  mdt {
    data-mdt-reuse;
    group-range multicast-prefix;
    threshold {
      group group-address {
        source source-address {
          rate threshold-rate;
        }
      }
    }
  }
  tunnel-limit limit;
}
}
pim-asm {
  group-address (Routing Instances) address;
}
pim-ssm {
  group-address (Routing Instances) address;
}
rsvp-te {
  label-switched-path-template {
    (default-template | lsp-template-name);
  }
  static-lsp lsp-name;
}
ingress-replication {
  create-new-ucast-tunnel;
  label-switched-path-template {
    (default-template | lsp-template-name);
  }
}

```



```

inter-as{
  ingress-replication {
    create-new-ucast-tunnel;
    label-switched-path-template {
      (default-template | lsp-template-name);
    }
  }
  inter-region-segmented {
    fan-out| <leaf-AD routes>;
    threshold| <kilobits>;
  }
  ldp-p2mp;
  rsvp-te {
    label-switched-path-template {
      (default-template | lsp-template-name);
    }
  }
}
ldp-p2mp;
pim-asm {
  group-address (Routing Instances) address;
}
pim-ssm {
  group-address (Routing Instances) address;
}
rsvp-te {
  label-switched-path-template {
    (default-template | lsp-template-name);
  }
  static-lsp lsp-name;
}

```



```

selective {
  group multicast--prefix/prefix-length {
    source ip--prefix/prefix-length {
      ldp-p2mp;
      create-new-ucast-tunnel;
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
    }
    pim-ssm {
      group-range multicast-prefix;
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
      static-lsp point-to-multipoint-lsp-name;
    }
    threshold-rate kbps;
  }
  wildcard-source {
    pim-ssm {
      group-range multicast-prefix;
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
      static-lsp point-to-multipoint-lsp-name;
    }
    threshold-rate kbps;
  }
}
tunnel-limit number;
wildcard-group-inet {
  wildcard-source {
    pim-ssm {
      group-range multicast-prefix;
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
      static-lsp lsp-name;
    }
  }
}

```



```

    }
    threshold-rate number;
  }
}
wildcard-group-inet6 {
  wildcard-source {
    pim-ssm {
      group-range multicast-prefix;
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
      static-lsp lsp-name;
    }
    threshold-rate number;
  }
}
}
}

```

## Hierarchy Level

```

[edit logical-systems logical-system-name routing-instances routing-instance-name],
[edit routing-instances routing-instance-name]

```

## Release Information

Statement introduced in Junos OS Release 8.3.

The **selective** statement and substatements added in Junos OS Release 8.5.

The **ingress-replication** statement and substatements added in Junos OS Release 10.4.

In Junos OS Release 17.3R1, the **mdt** hierarchy was moved from **provider-tunnel** to the **provider-tunnel family inet** and **provider-tunnel family inet6** hierarchies as part of an upgrade to add IPv6 support for default MDT in Rosen 7, and data MDT for Rosen 6 and Rosen 7. The **provider-tunnel mdt** hierarchy is now hidden for backward compatibility with existing scripts.

The **inter-as** statement and its substatements were added in Junos OS Release 19.1R1 to support next generation MVPN inter-AS option B.

**external-controller** option introduced in Junos OS Release 19.4R1 on all platforms.

## Description

Configure virtual private LAN service (VPLS) flooding of unknown unicast, broadcast, and multicast traffic using point-to-multipoint LSPs. Also configure point-to-multipoint LSPs for MBGP MVPNs.



### Options

**external-controller *pccd***—(Optional) Specifies that point-to-multipoint LSP and (S,G) for MVPN can be provided by an external controller.

This option enables an external controller to dynamically configure (S,G) and point-to-multipoint LSP for MVPN. This is for only selective types. When not configured for a particular MVPN routing-instance, the external controller is not allowed to configure (S,G) and map point-to-multipoint LSP to that (S,G).

The remaining statements are explained separately.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

---

*Flooding Unknown Traffic Using Point-to-Multipoint LSPs in VPLS*

---

[Configuring Point-to-Multipoint LSPs for an MBGP MVPN | 601](#)

---

*Example: Configuring Data MDTs and Provider Tunnels Operating in Source-Specific Multicast Mode*



## redundancy-group (Chassis - MX Series)

### Syntax

```
redundancy-group {  
  interface-type {  
    redundant-logical-tunnel {  
      device count;  
    }  
    redundant-virtual-tunnel {  
      device count;  
    }  
  }  
}
```

### Hierarchy Level

[edit chassis]

### Release Information

Statement introduced in Junos OS Release 13.3.

### Description

Configure redundant logical tunnels, redundant virtual tunnels, or both on MX Series 5G Universal Routing Platforms.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[Redundant Virtual Tunnels Providing Resiliency in Delivering Multicast Traffic Overview](#) | 720

[Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic](#) | 721

[Example: Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic](#) | 723

[redundancy-group \(Interfaces\)](#) | 1358



## redundancy-group (Interfaces)

### Syntax

```
redundancy-group {
  member-interface interface-name {
    (active | backup);
  }
}
```

### Hierarchy Level

```
[edit interfaces interface-name]
```

### Release Information

Statement introduced in Junos OS Release 13.3.

### Description

Configure member tunnels of redundant logical or virtual tunnels only on MX Series 5G Universal Routing Platforms.

### Options

**active**—Set the interface to the active mode.

**backup**—Set the interface to the backup mode.

The remaining statement is explained separately. See [CLI Explorer](#).

### Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To view this statement in the configuration.

## RELATED DOCUMENTATION

[Redundant Virtual Tunnels Providing Resiliency in Delivering Multicast Traffic Overview | 720](#)

[Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic | 721](#)

[Example: Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic | 723](#)

[Example: Configuring Redundant Logical Tunnels](#)

[Configuring Redundant Logical Tunnels](#)

[Redundant Logical Tunnels Overview](#)



## redundant-logical-tunnel

### Syntax

```
redundant-logical-tunnel {  
    device-count count;  
}
```

### Hierarchy Level

```
[edit chassis redundancy-group interface-type]
```

### Release Information

Statement introduced in Junos OS Release 13.3.

Support for up to 255 redundant logical tunnels added to Junos OS Release 13.3R3 and 14.1R2.

### Description

Configure redundant logical tunnels on MX Series 5G Universal Routing Platforms.

### Options

**count**—Specify the number of the redundant logical tunnels. For Junos OS Release 13.3R1, 13.3R2, and 14.1R1 the valid range is from 1 through 16. For Junos OS Release 13.3R3 and 14.1R2 and later releases the valid range is from 1 through 255.

### Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To view this statement in the configuration.

## RELATED DOCUMENTATION

*Example: Configuring Redundant Logical Tunnels*

*Configuring Redundant Logical Tunnels*

*Redundant Logical Tunnels Overview*

[redundancy-group \(Interfaces\)](#) | 1358

[redundancy-group \(Chassis - MX Series\)](#) | 1357



## redundant-virtual-tunnel

### Syntax

```
redundant-virtual-tunnel {
  device-count count;
}
```

### Hierarchy Level

```
[edit chassis redundancy-group interface-type]
```

### Release Information

Statement introduced in Junos OS Release 15.2.

### Description

Configure redundant virtual tunnels on MX Series 5G Universal Routing Platforms.

### Options

**device-count *count***—Specify the number of redundant virtual tunnels.

**Range:** 1 through 16

### Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Redundant Virtual Tunnels Providing Resiliency in Delivering Multicast Traffic Overview | 720](#)

[Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic | 721](#)

[Example: Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic | 723](#)

[redundancy-group \(Interfaces\) | 1358](#)

[redundancy-group \(Chassis - MX Series\) | 1357](#)



## region

### Syntax

```

region region-name{
  incoming;
  ingress-replication {
    create-new-ucast-tunnel;
    label-switched-path {
      llabel-switched-path-template (Multicast){
        (default-template | lsp-template-name);
      }
    }
  }
  ldp-p2mp;
  rsvp-te {
    label-switched-path-template (Multicast) {
      (default-template | lsp-template-name);
    }
    static-lsp static-lsp;
  }
}

```

### Hierarchy Level

```
[edit protocols mvpn inter-region-template template template-name]
```

### Release Information

Statement introduced in Junos OS Release 15.1.

### Description

Specify the regions based on the BGP peer groups. The regions support different tunnel types such as incoming, ingress replication, ldp-p2mp, or rsvp-te. The incoming tunnel indicates that the tunnel type across the area boundary router (ABR) is not changed. A template is used to define the tunnel type for each region.

### Options

**incoming**— Specify the tunnel type to be same across area boundary router (ABR).

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



RELATED DOCUMENTATION

Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview	608
Example: Configuring Segmented Inter-Area P2MP LSP	613
Configuring Segmented Inter-Area P2MP LSP	610
all-regions	1255
inter-region	1308
inter-region-segmented	1309
inter-region-template	1311
template	1391



## register-limit

### Syntax

```
register-limit {
  family (inet | inet6) {
    log-interval seconds;
    maximum limit;
    threshold value;
  }
  log-interval seconds;
  maximum limit;
  threshold value;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols pim rp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols pim rp],
[edit protocols pim rp],
[edit routing-instances routing-instance-name protocols pim rp]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Configure a limit for the number of incoming (S,G) PIM registers.

**NOTE:** The maximum limit settings that you configure with the **maximum** and the **family (inet | inet6) maximum** statements are mutually exclusive. For example, if you configure a global maximum PIM register message limit, you cannot configure a limit at the family level for IPv4 or IPv6. If you attempt to configure a limit at both the global level and the family level, the device will not accept the configuration.

### Options

**family (inet | inet6)**—(Optional) Specify either IPv4 or IPv6 messages to be counted towards the configured register message limit.

**Default:** Both IPv4 and IPv6 messages are counted towards the configured register message limit.

The remaining statements are described separately.



**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

---

*Example: Configuring PIM State Limits*

---

*clear pim join*

---

*clear pim register*



## route-target (Protocols MVPN)

### Syntax

```
route-target {
  export-target {
    target target-community;
    unicast;
  }
  import-target {
    target {
      target-value;
      receiver target-value;
      sender target-value;
    }
    unicast {
      receiver;
      sender;
    }
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols mvpn],
[edit routing-instances routing-instance-name protocols mvpn]
```

### Release Information

Statement introduced in Junos OS Release 8.4.

### Description

Enable you to override the Layer 3 VPN import and export route targets used for importing and exporting routes for the MBGP MVPN NLRI.

### Default

The multicast VPN routing instance uses the import and export route targets configured for the Layer 3 VPN.

### Options

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## RELATED DOCUMENTATION

| [Configuring VRF Route Targets for Routing Instances for an MBGP MVPN | 756](#)



## routing-instances (CoS)

### Syntax

```
routing-instances routing-instance-name {
  classifiers {
    dscp (classifier-name | default);
    dscp-ipv6 (classifier-name | default);
    exp (classifier-name | default);
    ieee-802.1 (classifier-name | default);
    no-default;
  }
  policy-map policy-map-name{
  }
}
```

### Hierarchy Level

[edit class-of-service]

### Release Information

Statement introduced before Junos OS Release 7.4.

**no-default** and **policy-map** options added for MX Series devices only in Junos OS Release 16.1.

### Description

For routing instances with VRF table labels enabled, apply a DSCP, MPLS EXP, or IEEE 802.1 classifier to the routing instance. You can apply the default classifier or one that is previously defined.

Apply the **no-default** option to disable the application of any default classifier to the routing instance.

You can also apply a policy map that defines the rewrite rules for a routing instance.

### Default

If you do not include this statement with the **classifiers** option, the default MPLS EXP classifier is applied to the routing instance. When no DSCP classifier is configured, the default MPLS EXP classifier is applied.

### Options

***routing-instance-name***—Name of the routing instance.

***classifier-name***—Name of the behavior aggregate MPLS EXP classifier or DSCP classifier.

***policy-map-name***—Name of the policy map that defines the rewrite rules for a routing instance.

### Required Privilege Level

routing—To view this statement in the configuration.



routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring a Custom Forwarding Class for Each Queue](#)

[Applying Custom MPLS EXP Classifiers to Routing Instances in Layer 3 VPNs](#) | 1170

## rpt-spt

### Syntax

```
rpt-spt;
```

### Hierarchy Level

```
[edit logical-systems profile-name routing-instances instance-name protocols mvpn mvpn-mode],  
[edit routing-instances instance-name protocols mvpn mvpn-mode]
```

### Release Information

Statement introduced in Junos OS Release 10.0.

### Description

Use rendezvous-point trees for customer PIM (C-PIM) join messages, and switch to the shortest-path tree after the source is known.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.



## rsvp-te (Routing Instances Provider Tunnel Selective)

### Syntax

```
rsvp-te {
  label-switched-path-template {
    (default-template | lsp-template-name);
  }
  static-lsp lsp-name;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  address source source-address],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  address wildcard-source],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet wildcard-source],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet6 wildcard-source],
[edit routing-instances routing-instance-name provider-tunnel],
[edit routing-instances routing-instance-name provider-tunnel selective group address source source-address],
[edit routing-instances routing-instance-name provider-tunnel selective group address wildcard-source],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet wildcard-source],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet6 wildcard-source]
```

### Release Information

Statement introduced in Junos OS Release 8.5.

### Description

Configure the properties of the RSVP traffic-engineered point-to-multipoint LSP for MBGP MVPNs.

The remaining statements are explained separately. See [CLI Explorer](#).

**NOTE:** Junos OS Release 11.2 and earlier do not support point-to-multipoint LSPs with next-generation multicast VPNs on MX80 routers.

### Required Privilege Level

routing—To view this statement in the configuration.



routing-control—To add this statement to the configuration.

#### RELATED DOCUMENTATION

| [Configuring Point-to-Multipoint LSPs for an MBGP MVPN](#) | 601



## rsvp-te (Protocols MVPN)

### Syntax

```
rsvp-te{
  label-switched-path-template (Multicast){
    (default-template | lsp-template-name);
  }
  static-lsp static-lsp;
}
```

### Hierarchy Level

```
[edit protocols mvpn inter-region-template template template-name all-regions],
[edit protocols mvpn inter-region-template template template-name region region-name]
```

### Release Information

Statement introduced in Junos OS Release 15.1.

### Description

Configure to unicast, broadcast, and multicast traffic flooding using point-to-multipoint LSPs.

### Options

**static-lsp** *static-lsp*— Create a static point-to-multipoint LSP and automatically include all of the neighbors in the routing instance.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview](#) | 608

[all-regions](#) | 1255

[inter-region](#) | 1308

[inter-region-template](#) | 1311

[inter-region-segmented](#) | 1309

[region](#) | 1361



[template](#) | [1391](#)

---

[Example: Configuring Segmented Inter-Area P2MP LSP](#) | [613](#)

---

[Configuring Segmented Inter-Area P2MP LSP](#) | [610](#)



## selective

### Syntax

```
selective {
  group multicast-prefix/prefix-length {
    source ip-prefix/prefix-length {
      ingress-replication {
        create-new-ucast-tunnel;
        label-switched-path-template {
          (default-template | lsp-template-name);
        }
      }
      ldp-p2mp;
      pim-ssm {
        group-range multicast-prefix;
      }
      rsvp-te {
        label-switched-path-template {
          (default-template | lsp-template-name);
        }
        static-lsp point-to-multipoint-lsp-name;
      }
      threshold-rate kbps;
    }
  }
  wildcard-source {
    ldp-p2mp;
    pim-ssm {
      group-range multicast-prefix;
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
    }
    static-lsp point-to-multipoint-lsp-name;
  }
  threshold-rate kbps;
}

tunnel-limit number;
wildcard-group-inet {
  wildcard-source {
    ldp-p2mp;
    pim-ssm {
```



```

        group-range multicast-prefix;
    }
    rsvp-te {
        label-switched-path-template {
            (default-template | lsp-template-name);
        }
        static-lsp lsp-name;
    }
    threshold-rate number;
}
}
wildcard-group-inet6 {
    wildcard-source {
        ldp-p2mp;
        pim-ssm {
            group-range multicast-prefix;
        }
        rsvp-te {
            label-switched-path-template {
                (default-template | lsp-template-name);
            }
            static-lsp lsp-name;
        }
        threshold-rate number;
    }
}
}

```

### Hierarchy Level

```

[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel],
[edit routing-instances routing-instance-name provider-tunnel]

```

### Release Information

Statement introduced in Junos OS Release 8.5.

The **ingress-replication** statement and substatements added in Junos OS Release 10.4.

### Description

Configure selective point-to-multipoint LSPs for an MBGP MVPN. Selective point-to-multipoint LSPs send traffic only to the receivers configured for the MBGP MVPNs, helping to minimize flooding in the service provider's network.

The remaining statements are explained separately. See [CLI Explorer](#).



**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

[Configuring Point-to-Multipoint LSPs for an MBGP MVPN | 601](#)

[Configuring PIM-SSM GRE Selective Provider Tunnels | 763](#)



## sglimit

### Syntax

```
sglimit {
  family (inet | inet6) {
    log-interval seconds;
    maximum limit;
    threshold value;
  }
  log-interval seconds;
  maximum limit;
  threshold value;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols pim],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols pim],
[edit protocols pim ],
[edit routing-instances routing-instance-name protocols pim]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Configure a limit for the number of accepted (\*,G) and (S,G) PIM join states.

**NOTE:** The maximum limit settings that you configure with the **maximum** and the **family (inet | inet6) maximum** statements are mutually exclusive. For example, if you configure a global maximum PIM join state limit, you cannot configure a limit at the family level for IPv4 or IPv6 joins. If you attempt to configure a limit at both the global level and the family level, the device will not accept the configuration.

### Options

**family (inet | inet6)**—(Optional) Specify either IPv4 or IPv6 join states to be counted towards the configured join state limit.

**Default:** Both IPv4 and IPv6 join states are counted towards the configured join state limit.

The remaining statements are described separately.



**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

*Example: Configuring PIM State Limits*

---

*clear pim join*



## sham-link

### Syntax

```
sham-link {  
    local address;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf],  
[edit routing-instances routing-instance-name protocols ospf]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

### Description

Configure the local endpoint of a sham link.

You can create an intra-area link or sham link between two provider edge (PE) routing devices so that the VPN backbone is preferred over the back-door link. A back-door link is a backup link that connects customer edge (CE) devices in case the VPN backbone is unavailable. When such a backup link is available and the CE devices are in the same OSPF area, the default behavior is to prefer this backup link over the VPN backbone. This is because the backup link is considered an intra-area link, while the VPN backbone is always considered an inter-area link. Intra-area links are always preferred over inter-area links.

The sham link is an unnumbered point-to-point intra-area link between PE devices. When the VPN backbone has a sham intra-area link, this sham link can be preferred over the backup link if the sham link has a lower OSPF metric than the backup link.

The sham link is advertised using Type 1 link-state advertisements (LSAs). Sham links are valid only for routing instances and OSPFv2.

Each sham link is identified by the combination of a local endpoint address and a remote endpoint address.

### Options

**local *address***—The address for the local endpoint of the sham link.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration

### RELATED DOCUMENTATION



Example: Configuring OSPFv2 Sham Links | 201

---

sham-link-remote | 1380



## sham-link-remote

### Syntax

```
sham-link-remote address {  
    demand-circuit;  
    ipsec-sa name;  
    metric metric;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf area area-id],  
[edit routing-instances routing-instance-name protocols ospf area area-id]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Support for **ipsec-sa** statement added in Junos OS Release 8.3.

### Description

Configure the remote endpoint of a sham link.

You can create an intra-area link or sham link between two provider edge (PE) routing devices so that the VPN backbone is preferred over the back-door link. A back-door link is a backup link that connects customer edge (CE) devices in case the VPN backbone is unavailable. When such a backup link is available and the CE devices are in the same OSPF area, the default behavior is to prefer this backup link over the VPN backbone. This is because the backup link is considered an intra-area link, while the VPN backbone is always considered an inter-area link. Intra-area links are always preferred over inter-area links.

The sham link is an unnumbered point-to-point intra-area link between PE devices. When the VPN backbone has a sham intra-area link, this sham link can be preferred over the backup link if the sham link has a lower OSPF metric than the backup link.

The sham link is advertised using Type 1 link-state advertisements (LSAs). Sham links are valid only for routing instances and OSPFv2.

Each sham link is identified by the combination of a local endpoint address and a remote endpoint address.

### Options

**address**—Address for the remote end point of the sham link.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.



routing-control—To add this statement to the configuration.

#### RELATED DOCUMENTATION

[Example: Configuring OSPFv2 Sham Links](#) | 201

[sham-link](#) | 1378



## source (Routing Instances Provider Tunnel Selective)

### Syntax

```
source source-address {
  ldp-p2mp;
  pim-ssm {
    group-range multicast-prefix;
  }
  rsvp-te {
    label-switched-path-template {
      (default-template | lsp-template-name);
    }
    static-lsp lsp-name;
  }
  threshold-rate number;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  address],
[edit routing-instances routing-instance-name provider-tunnel selective group address]
```

### Release Information

Statement introduced in Junos OS Release 8.5.

### Description

Specify the IP address for the multicast source. This statement is a part of the point-to-multipoint LSP and PIM-SSM GRE selective provider tunnel configuration for MBGP MVPNs.

### Options

**source-address**—IP address for the multicast source.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION



Configuring Point-to-Multipoint LSPs for an MBGP MVPN | 601

---

Configuring PIM-SSM GRE Selective Provider Tunnels | 763



## source-class-usage

### Syntax

```
source-class-usage {
    direction;
}
```

### Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number family inet accounting],
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet accounting],
[edit routing-instances routing-instance-name vrf-table-label]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Support for the **vrf-table-label** statement added in Junos OS Release 9.3.

### Description

Enable packet counters on an interface that count packets that arrive from specific prefixes on the provider core router and are destined for specific prefixes on the customer edge router.

### Options

**direction** can be one of the following:

**input**—Configure at least one expected ingress point.

**output**—Configure at least one expected egress point.

**input output**—On a single interface, configure at least one expected ingress point and one expected egress point.

### Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

*Enabling Source Class and Destination Class Usage*

*accounting*

*destination-class-usage*

*Junos OS Services Interfaces Library for Routing Devices*



## spt-only

### Syntax

```
spt-only;
```

### Hierarchy Level

```
[edit logical-systems profile-name routing-instances instance-name protocols mvpn mvpn-mode],  
[edit routing-instances instance-name protocols mvpn mvpn-mode]
```

### Release Information

Statement introduced in Junos OS Release 10.0.

### Description

Set the MVPN mode to learn about active multicast sources using multicast VPN source-active routes. This is the default mode.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| [Configuring SPT-Only Mode for Multiprotocol BGP-Based Multicast VPNs](#) | 687



## static-lsp

### Syntax

```
static-lsp lsp-name;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel rsvp-te],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  address source source-address rsvp-te],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  address wildcard-source rsvp-te],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet wildcard-source rsvp-te],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet6 wildcard-source rsvp-te],
[edit routing-instances routing-instance-name provider-tunnel rsvp-te],
[edit routing-instances routing-instance-name provider-tunnel selective group address source source-address rsvp-te],
[edit routing-instances routing-instance-name provider-tunnel selective group address wildcard-source rsvp-te],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet wildcard-source rsvp-te],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet6 wildcard-source rsvp-te]
```

### Release Information

Statement introduced in Junos OS Release 8.5.

### Description

Specify the name of the static point-to-multipoint (P2MP) LSP used for a specific MBGP MVPN; static P2MP LSP cannot be shared by multiple VPNs. Use this statement to specify the static LSP for both inclusive and selective point-to-multipoint LSPs.

Use a static P2MP LSP when you know all the egress PE router endpoints (receiver nodes) and you want to avoid the setup delay incurred by dynamically created P2MP LSPs (configured with the **label-switched-path-template**). These static LSPs are signaled before the MVPN requires or uses them, consequently avoiding any signaling latency and minimizing traffic loss due to latency.

If you add new endpoints after the static P2MP LSP is established, you must update the configuration on the ingress PE router. In contrast, a dynamic P2MP LSP learns new endpoints without any configuration changes.



**BEST PRACTICE:** Multiple multicast flows can share the same static P2MP LSP; this is the preferred configuration when the set of egress PE router endpoints on the LSP are all interested in the same set of multicast flows. When the set of relevant flows is different between endpoints, we recommend that you create a new static P2MP LSP to associate endpoints with flows of interest.

#### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

#### RELATED DOCUMENTATION

---

*Point-to-Multipoint LSPs Overview*

---

*Configuring Static LSPs*

---

[Configuring Point-to-Multipoint LSPs for an MBGP MVPN | 601](#)

---

*Example: Configuring an RSVP-Signaled Point-to-Multipoint LSP on Logical Systems*



## supplementary-blackout-timer (Host Fast Reroute)

### Syntax

```
supplementary-blackout-timer minutes;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances instance-name routing-options interface interface-name],  
[edit routing-instances instance-name routing-options interface interface-name]
```

### Release Information

Statement introduced in Junos OS Release 12.2.

### Description

Override the global supplementary blackout timer for the specified host fast-reroute (HFRR) profile.

When you configure HFRR, an optional ARP prefix limit sets a maximum for the number of ARP routes and, therefore FRR routes created for each HFRR profile in the routing table. This limit prevents ARP attacks from exhausting the virtual memory on the routing devices.

There are two configuration statements ([global-arp-prefix-limit](#) and [arp-prefix-limit](#)) that set the ARP prefix limit, one at the global **[edit routing-options host-fast-reroute]** hierarchy level and the other at the **[edit routing-instances *instance-name* routing-options interface *interface-name*]** hierarchy level, respectively. The global **global-arp-prefix-limit** statement sets a default ARP prefix limit for all HFRR profiles configured on the routing device. The **arp-prefix-limit** statement overrides the **global-arp-prefix-limit** for that HFRR profile for that protected interface.

Warning system log messages begin when the ARP routes in an HFRR profile reaches 80% of the configured limit. When the number crosses the 100% threshold, the HFRR profile is deactivated. When this happens, all ARP/FRR routes are deleted from the routing table. FRR routes are deleted from forwarding table as well.

After the HFRR profile is deactivated, a blackout timer is started. The timeout value of this timer is the ARP cache timeout (kernel timeout) + the supplementary blackout timer.

There are global and per-HFRR CLI statements ([global-supplementary-blackout-timer](#) and **supplementary-blackout-timer**) to configure the supplementary blackout timer. The global value is at the **[edit routing-options host-fast-reroute]** hierarchy level and applies to all HFRR profiles on the routing device. The value for the routing-instance interface is at the **[edit routing-instances *instance-name* routing-options interface *interface-name*]** hierarchy level, and overrides the global value for that HFRR profile only.



When the blackout timer expires, the HFRR profile is reactivated, and the Junos OS relearns the ARP routes and re-creates the HFRR routes. If the ARP prefix limit is not exceeded again, the HFRR routes will be up.

If an HFRR profile is in the deactivated state, a reevaluation of the ARP state is performed during every commit operation or whenever the routing process (rpd) is restarted with the **restart routing** command.

### Default

If you omit the **-supplementary-blackout-timer** statement, the **global-supplementary-blackout-timer** takes effect for all HFRR profiles on the device. If you omit both of these statements, the blackout timeout value is set to the ARP cache timeout value, which by default is 20 minutes and is configurable with the **aging-timer** statement at the **[edit system arp]** hierarchy level.

### Options

**minutes**—Number of minutes, in addition to the ARP cache timeout value, before an HFRR profile is reactivated after the ARP prefix limit is exceeded.

**Range:** 1 through 15 minutes

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

| [Example: Configuring Link Protection with Host Fast Reroute](#) | 1078



## target (Routing Instances MVPN)

### Syntax

```
target target-value {
    receiver target-value;
    sender target-value;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols mvpn route-target
  import-target],
[edit routing-instances routing-instance-name protocols mvpn route-target import-target]
```

### Release Information

Statement introduced in Junos OS Release 8.4.

### Description

Specify the target value when importing sender and receiver site routes.

### Options

**target-value**—Specify the target value when importing sender and receiver site routes.

**receiver**—Specify the target community used when importing receiver site routes.

**sender**—Specify the target community used when importing sender site routes.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

| [Configuring VRF Route Targets for Routing Instances for an MBGP MVPN](#) | 756



## template(Protocols MVPN)

### Syntax

```

template template-name {
  all-regions {
    incoming;
    ingress-replication {
      create-new-ucast-tunnel;
      label-switched-path {
        label-switched-path-template (Multicast) {
          (default-template | lsp-template-name);
        }
      }
    }
    ldp-p2mp;
    rsvp-te {
      label-switched-path-template (Multicast) {
        (default-template | lsp-template-name);
      }
      static-lsp static-lsp;
    }
  }
  region region-name{
    incoming;
    ingress-replication {
      create-new-ucast-tunnel;
      label-switched-path {
        label-switched-path-template (Multicast){
          (default-template | lsp-template-name);
        }
      }
    }
    ldp-p2mp;
    rsvp-te {
      label-switched-path-template (Multicast) {
        (default-template | lsp-template-name);
      }
      static-lsp static-lsp;
    }
  }
}

```

### Hierarchy Level



```
[edit protocols mvpn inter-region-template]
```

### Release Information

Statement introduced in Junos OS Release 15.1.

### Description

A template is configured on a transit area boundary router (ABR) to define the tunnel type for each region. If a template is not configured on the ABR then the ABR simply reflects the routes without performing any inter-region segmentation.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Segmented Inter-Area Point-to-Multipoint Label-Switched Paths Overview | 608](#)

[Example: Configuring Segmented Inter-Area P2MP LSP | 613](#)

[Configuring Segmented Inter-Area P2MP LSP | 610](#)

[all-regions | 1255](#)

[inter-region | 1308](#)

[inter-region-template | 1311](#)

[inter-region-segmented | 1309](#)

[region | 1361](#)



## threshold-rate

### Syntax

```
threshold-rate kbps;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  address source source-address],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  group-address wildcard-source],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet wildcard-source],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
  wildcard-group-inet6 wildcard-source],
[edit routing-instances routing-instance-name provider-tunnel selective group address source source-address]
[edit routing-instances routing-instance-name provider-tunnel selective group address wildcard-source]
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet wildcard-source],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet6 wildcard-source]
```

### Release Information

Statement introduced in Junos OS Release 8.5.

### Description

Specify the data threshold required before a new tunnel is created for a dynamic selective point-to-multipoint LSP. This statement is part of the configuration for point-to-multipoint LSPs for MBGP MVPNs and PIM-SSM GRE or RSVP-TE selective provider tunnels.

### Options

***number***—Specify the data threshold required before a new tunnel is created.

**Range:** 0 through 1,000,000 kilobits per second. Specifying 0 is equivalent to not including the statement.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[Configuring Point-to-Multipoint LSPs for an MBGP MVPN | 601](#)

[Configuring PIM-SSM GRE Selective Provider Tunnels | 763](#)



## traceoptions (Protocols MVPN)

### Syntax

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag <flag-modifier> <disable>;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols mvpn],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols mvpn],
[edit protocols mvpn],
[edit routing-instances routing-instance-name protocols mvpn]
```

### Release Information

Statement introduced in Junos OS Release 8.4.

Support at the [\[edit protocols mvpn\]](#) hierarchy level introduced in Junos OS Release 13.3.

### Description

Trace traffic flowing through a Multicast BGP (MBGP) MVPN.

### Options

**disable**—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as **all**.

**file *filename***—Name of the file to receive the output of the tracing operation. Enclose the name in quotation marks (" ").

**files *number***—(Optional) Maximum number of trace files. When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum number of files, you also must specify a maximum file size with the **size** option.

**Range:** 2 through 1000 files

**Default:** 2 files

**flag *flag***—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements. You can specify any of the following flags:

- **all**—All multicast VPN tracing options
- **cmcast-join**—Multicast VPN C-multicast join routes



- **error**—Error conditions
- **general**—General events
- **inter-as-ad**—Multicast VPN inter-AS automatic discovery routes
- **intra-as-ad**—Multicast VPN intra-AS automatic discovery routes
- **leaf-ad**—Multicast VPN leaf automatic discovery routes
- **mdt-safi-ad**—Multicast VPN MDT SAFI automatic discovery routes
- **nlri**—Multicast VPN advertisements received or sent by means of the BGP
- **normal**—Normal events
- **policy**—Policy processing
- **route**—Routing information
- **source-active**—Multicast VPN source active routes
- **spmsi-ad**—Multicast VPN SPMSI auto discovery active routes
- **state**—State transitions
- **task**—Routing protocol task processing
- **timer**—Routing protocol timer processing
- **tunnel**—Provider tunnel events
- **umh**—Upstream multicast hop (UMH) events

**flag-modifier**—(Optional) Modifier for the tracing flag. You can specify the following modifiers:

- **detail**—Provide detailed trace information
- **disable**—Disable the tracing flag
- **receive**—Trace received packets
- **send**—Trace sent packets

**no-world-readable**—Do not allow any user to read the log file.

**size size**—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.



If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option.

**Syntax:** **xk** to specify kilobytes, **xm** to specify megabytes, or **xg** to specify gigabytes

**Range:** 10 KB through the maximum file size supported on your system

**Default:** 1 MB

**world-readable**—Allow any user to read the log file.

#### **Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

#### **RELATED DOCUMENTATION**

| *Tracing MBGP MVPN Traffic and Operations*



## traffic-statistics (Protocols BGP)

### Syntax

```
traffic-statistics {
  labeled-path
  file filename <world-readable | no-world-readable>;
  interval seconds;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp family (inet | inet6) labeled-unicast],
[edit logical-systems logical-system-name protocols bgp group group-name family (inet | inet6) labeled-unicast],
[edit protocols bgp family (inet | inet6) labeled-unicast],
[edit protocols bgp group group-name family (inet | inet6) labeled-unicast]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

**labeled-path** introduced in Junos OS Release 18.1R1 for the MX Series.

### Description

Enable the collection of traffic statistics for interprovider or carrier-of-carriers VPNs.

### Options

**file *filename***—Specify a filename for the BGP labeled-unicast traffic statistics file. If you do not specify a filename, statistics are still collected but can only be viewed by using the **show bgp group traffic statistics *group-name*** command.

**interval *seconds***—Specify how often BGP labeled-unicast traffic statistics are collected.

**labeled-path**—Specify this option to collect labeled path traffic statistics of ingress BGP nodes.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

*Configuring BGP to Gather Interprovider and Carrier-of-Carriers VPNs Statistics*

*MPLS Feature Support on QFX Series and EX4600 Switches*







## tunnel-limit (Routing Instances Provider Tunnel Selective)

### Syntax

```
tunnel-limit number;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective],  
[edit routing-instances routing-instance-name provider-tunnel selective]
```

### Release Information

Statement introduced in Junos OS Release 8.5.

### Description

Specify a limit on the number of selective tunnels that can be created for an LSP. This limit can be applied to the following types of selective tunnels:

- Ingress replication tunnels
- LDP-signaled LSP
- LDP point-to-multipoint LSP
- PIM-SSM provider tunnel
- RSVP-signaled LSP
- RSVP-signaled point-to-multipoint LSP

### Options

***number***—Specify the tunnel limit.

**Range:** 0 through 1024

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring Point-to-Multipoint LSPs for an MBGP MVPN](#) | 601

[selective](#) | 1373

[wildcard-source](#) | 1412



## unicast (Route Target Community)

### Syntax

```
unicast {  
    receiver;  
    sender;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols mvpn route-target  
    import-target],  
[edit routing-instances routing-instance-name protocols mvpn route-target import-target]
```

### Release Information

Statement introduced in Junos OS Release 8.4.

### Description

Specify the same target community configured for unicast.

### Options

**receiver**—Specify the unicast target community used when importing receiver site routes.

**sender**—Specify the unicast target community used when importing sender site routes.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION

[Configuring VRF Route Targets for Routing Instances for an MBGP MVPN | 756](#)



## unicast (Virtual Tunnel in Routing Instances)

### Syntax

```
unicast;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name interface vt-fpc/pic/port.unit-number],  
[edit routing-instances routing-instance-name interface vt-fpc/pic/port.unit-number]
```

### Release Information

Statement introduced in Junos OS Release 9.4.

### Description

In a multiprotocol BGP (MBGP) multicast VPN (MVPN), configure the virtual tunnel (VT) interface to be used for unicast traffic only.

### Default

If you omit this statement, the VT interface can be used for both multicast and unicast traffic.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Configuring Redundant Virtual Tunnel Interfaces in MBGP MVPNs | 742](#)

[Example: Configuring MBGP MVPN Extranets](#)



## vpn-localization

### Syntax

```
vpn-localization {  
  vpn-core-facing-default;  
  vpn-core-facing-only;  
}
```

### Hierarchy Level

```
[edit chassis fpc fpc-slot-number]
```

### Release Information

Statement introduced in Junos OS Release 14.2.

### Description

Configure FPC as either core-facing default or core-facing only in order to localize the routes.

### Options

**vpn-core-facing-default**— The core-facing FPC installs all the routes and next hops of the CE-facing interfaces.

**vpn-core-facing-only**— The core-facing FPC installs all the routes and does not store next hops of the CE-facing interfaces.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

---

[Understanding VRF Localization in Layer 3 VPNs | 67](#)

---

[Example: Improving Scalability Using VRF Localization for Layer 3 VPNs | 70](#)

---

[localized-fib | 1324](#)



## vpn-unequal-cost

### Syntax

```
vpn-unequal-cost {
    equal-external-internal;
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options multipath],
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options rib
    routing-table-name multipath],
[edit routing-instances routing-instance-name routing-options multipath],
[edit routing-instances routing-instance-name routing-options rib routing-table-name multipath]
```

### Release Information

Statement introduced before Junos OS Release 7.4. The **equal-external-internal** option was added for Junos OS Release 8.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

### Description

When the **vpn-unequal-cost** statement is configured, protocol-independent load balancing is applied to VPN routes that are equal to interior gateway protocol (IGP) metrics. If the **vpn-unequal-cost** statement is not configured, then protocol-independent load balancing is applied to VPN routes that are equal to the router identifier.

### Options

**equal-external-internal**—Specifies that both external and internal BGP paths can be selected for multipath.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Configuring Protocol-Independent Load Balancing in Layer 3 VPNs | 1132](#)

[Load Balancing and IP Header Filtering for Layer 3 VPNs | 1112](#)



## vrf-advertise-selective

### Syntax

```
vrf-advertise-selective {  
    family {  
        inet-mvpn;  
        inet6-mvpn;  
    }  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit routing-instances routing-instance-name]
```

### Release Information

Statement introduced in Junos OS Release 10.1.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

### Description

Explicitly enable IPv4 or IPv6 MVPN routes to be advertised from the VRF instance while preventing all other route types from being advertised.

If you configure the **vrf-advertise-selective** statement without any of its options, the router or switch has the same behavior as if you configured the **no-vrf-advertise** statement. All VPN routes are prevented from being advertised from a VRF routing instance to the remote PE routers. This behavior is useful for hub-and-spoke configurations, enabling you to configure a PE router to not advertise VPN routes from the primary (hub) instance. Instead, these routes are advertised from the secondary (downstream) instance.

The options are explained separately.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Limiting Routes to Be Advertised by an MVPN VRF Instance | 760](#)

[no-vrf-advertise | 1342](#)



## vrf-propagate-ttl

### Syntax

```
vrf-propagate-ttl;
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit routing-instances routing-instance-name]
```

### Release Information

Statement introduced in Junos OS Release 10.4.

### Description

Enable normal time-to-live (TTL) decrementing in a VRF routing instance. You configure this statement once per routing instance, and it affects only RSVP-signaled or LDP-signaled LSPs in the routing instance. When this router acts as an ingress router for an LSP, it pushes an MPLS copies the TTL value from the IP packet header. When the router acts as the penultimate router, it pops the MPLS header and writes the MPLS TTL into the IP packet.

### Default

Normal TTL decrementing enabled; the TTL field value is decremented by 1 as the packet passes through each label-switched router in the LSP. This statement explicitly configures the default behavior for the VRF routing instance and is useful for overriding the **no-propagate-ttl** configured globally on the router at the **[edit protocols mpls]** hierarchy level.

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

## RELATED DOCUMENTATION

[Example: Diagnosing Networking Problems Related to Layer 3 VPNs by Disabling TTL Decrementing](#) | 1201

*Disabling Normal TTL Decrementing*



## vrf-table-label

### Syntax

```
vrf-table-label {  
    source-class-usage;  
    static;  
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit routing-instances routing-instance-name]
```

### Release Information

Statement introduced before Junos OS Release 7.4.

Support for the **source-class-usage** statement added in Junos OS Release 9.3.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 15.1F5 and 16.1R2 for PTX5000 routers with third-generation FPCs installed.

Statement introduced in Junos OS Release 15.1F6 and 16.1R2 for PTX3000 routers with third-generation FPCs.

Statement introduced in Junos OS Release 16.1X65 and 17.2R1 for PTX1000 routers.

Statement introduced in cRPD Release 19.4R1.

Support for the **static** statement added in Junos OS Release 17.2.

### Description

Map the inner label of a packet to a specific VPN routing and forwarding (VRF) instance. This allows the examination of the encapsulated IP header. The first lookup is done on the VPN label to determine which VRF instance to refer to, and the second lookup is done on the IP header to determine how to forward packets to the correct end hosts.

When you include the **vrf-table-label** statement in the configuration of a VRF routing instance, a label-switched interface (LSI) logical interface label is created and mapped to the VRF routing table. Any routes in the VRF routing table are advertised with the LSI logical interface label allocated for the VRF routing table. When packets destined for the VRF routing instance arrive on a core-facing interface, they are treated as if the enclosed IP packet arrived on the LSI interface and are then forwarded and filtered based on the correct table.

All routes in a VRF routing instance configured with this option are advertised with one label allocated per VRF.



**NOTE:**

- The **vrf-table-label** statement is supported on PTX5000 and PTX3000 routers only when third-generation FPCs are installed on the router and **enhanced-ip** command is configured on the chassis.
- Starting in Junos OS Release 17.2, you can configure the **enhanced-ip** command, which is supported on platforms using Modular Port Concentrators (MPCs) equipped with Junos Trio chipsets. You can also separate the MPLS labels used for different label spaces which provides more flexibility and scalability. The **vrf-table-label** space is increased to at least 16,000, if the platform can support the scale.

**Options**

The remaining statements are explained separately.

**Range:** 16 through 1,048,575 for static label value.

**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

---

[Filtering Packets in Layer 3 VPNs Based on IP Headers | 85](#)

---

*Configuring EXP-Based Traffic Classification for VPLS*

---

[Load Balancing and IP Header Filtering for Layer 3 VPNs | 1112](#)



## wildcard-group-inet

### Syntax

```
wildcard-group-inet {
  wildcard-source {
    inter-region-segmented{
      fan-out fan-out value;
    }
    ldp-p2mp;
    pim-ssm {
      group-range multicast-prefix;
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
      static-lsp lsp-name;
    }
    threshold-rate number;
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective],
[edit routing-instances routing-instance-name provider-tunnel selective]
```

### Release Information

Statement introduced in Junos OS Release 10.0.

The **inter-region-segmented** statement added in Junos OS Release 15.1.

### Description

Configure a wildcard group matching any group IPv4 address.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION



wildcard-group-inet6 | 1410

---

Example: Configuring Selective Provider Tunnels Using Wildcards | 717

---

Understanding Wildcards to Configure Selective Point-to-Multipoint LSPs for an MBGP MVPN | 710

---

Configuring a Selective Provider Tunnel Using Wildcards | 716



## wildcard-group-inet6

### Syntax

```
wildcard-group-inet6 {
  wildcard-source {
    inter-region-segmented{
      fan-out fan-out value;
    }
    ldp-p2mp;
    pim-ssm {
      group-range multicast-prefix;
    }
    rsvp-te {
      label-switched-path-template {
        (default-template | lsp-template-name);
      }
      static-lsp lsp-name;
    }
    threshold-rate number;
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective],
[edit routing-instances routing-instance-name provider-tunnel selective]
```

### Release Information

Statement introduced in Junos OS Release 10.0.

The **inter-region-segmented** statement added in Junos OS Release 15.1.

### Description

Configure a wildcard group matching any group IPv6 address.

The remaining statements are explained separately. See [CLI Explorer](#).

### Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

### RELATED DOCUMENTATION



wildcard-group-inet | 1408

---

Example: Configuring Selective Provider Tunnels Using Wildcards | 717

---

Understanding Wildcards to Configure Selective Point-to-Multipoint LSPs for an MBGP MVPN | 710

---

Configuring a Selective Provider Tunnel Using Wildcards | 716



## wildcard-source (Selective Provider Tunnels)

### Syntax

```
wildcard-source {
  inter-region-segmented {
    fan-out fan-out value;
  }
  ldp-p2mp;
  pim-ssm {
    group-range multicast-prefix;
  }
  rsvp-te {
    label-switched-path-template {
      (default-template | lsp-template-name);
    }
    static-lsp lsp-name;
  }
}
```

### Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
group-prefix],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
wildcard-group-inet],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
wildcard-group-inet6],
[edit routing-instances routing-instance-name provider-tunnel selective group group-prefix],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
wildcard-group-inet],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective
wildcard-group-inet6],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet],
[edit routing-instances routing-instance-name provider-tunnel selective wildcard-group-inet6]
```

### Release Information

Statement introduced in Junos OS Release 10.0.

The **inter-region-segmented** statement added in Junos OS Release 15.1.

### Description

Configure a selective provider tunnel for a shared tree using a wildcard source.

The remaining statements are explained separately. See [CLI Explorer](#).



**Required Privilege Level**

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

**RELATED DOCUMENTATION**

---

[wildcard-group-inet | 1408](#)

---

[wildcard-group-inet6 | 1410](#)

---

[Example: Configuring Selective Provider Tunnels Using Wildcards | 717](#)

---

[Understanding Wildcards to Configure Selective Point-to-Multipoint LSPs for an MBGP MVPN | 710](#)

---

[Configuring a Selective Provider Tunnel Using Wildcards | 716](#)



# Operational Commands

## IN THIS CHAPTER

- ping mpls l3vpn | 1416
- show hfrr profiles | 1419
- show ingress-replication mvpn | 1422
- show mvpn c-multicast | 1424
- show mvpn instance | 1428
- show mvpn neighbor | 1433
- show route vpn-localization | 1439



## ping mpls l3vpn

### Syntax

```
ping mpls l3vpn prefix prefix-name
<l3vpn-name>
<bottom-label-ttl>
<count count>
<destination address>
<detail>
<exp forwarding-class>
<logical-system (all | logical-system-name)>
<size bytes>
<source source-address>
<sweep>
```

### Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

The **size** and **sweep** options were introduced in Junos OS Release 9.6.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Virtual Chassis and Virtual Chassis Fabric.

### Description

Check the operability of a MPLS Layer 3 virtual private network (VPN) connection. Type Ctrl+c to interrupt a **ping mpls l3vpn** command.

### Options

**bottom-label-ttl**—(Optional) Display the time-to-live value for the bottom label in the label stack.

**count *count***—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is **1** through **1,000,000**. The default value is **5**.

**destination *address***—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

**detail**—(Optional) Display detailed information about the echo requests sent and received.

**exp *forwarding-class***—(Optional) Value of the forwarding class for the MPLS ping packets.

**l3vpn-name**—(Optional) Layer 3 VPN name.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on the specified logical system.



**prefix *prefix-name***—Ping to test whether a prefix is present in a provider edge (PE) router's or switch's VPN routing and forwarding (VRF) table, by means of a Layer 3 VPN destination prefix. This option does not test the connection between a PE router or switch and a customer edge (CE) router or switch.

**size *bytes***—(Optional) Size of the label-switched path (LSP) ping request packet (96 through 65468 bytes). Packets are 4-byte aligned. For example, If you enter a size of 97, 98, 99, or 100, the router or switch uses a size value of 100 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 96-byte minimum.

**source *source-address***—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (lo.0).

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

### Additional Information

You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the egress PE router or switch (the router or switch receiving the MPLS echo packets) to ping a Layer 2 circuit.

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

If the Layer 3 VPN traffic transits a route reflector within the network, the **ping mpls l3vpn** command does not work.

### Required Privilege Level

network

### List of Sample Output

[ping mpls l3vpn on page 1417](#)

[ping mpls l3vpn detail on page 1418](#)

### Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code these packets are not counted in the received packets count. They are accounted for separately.

## Sample Output

**ping mpls l3vpn**

```
user@host> ping mpls l3vpn vpn1 prefix 10.255.245.122/32
```



```
!!!!!  
--- lsping statistics ---  
5 packets transmitted, 5 packets received, 0% packet loss
```

### ping mpls l3vpn detail

user@host> ping mpls l3vpn vpn1 prefix 10.255.245.122/32 detail

```
Request for seq 1, to interface 68, labels <100128, 100112>  
Reply for seq 1, return code: Egress-ok  
Request for seq 2, to interface 68, labels <100128, 100112>  
Reply for seq 2, return code: Egress-ok  
Request for seq 3, to interface 68, labels <100128, 100112>  
Reply for seq 3, return code: Egress-ok  
Request for seq 4, to interface 68, labels <100128, 100112>  
Reply for seq 4, return code: Egress-ok  
Request for seq 5, to interface 68, labels <100128, 100112>  
Reply for seq 5, return code: Egress-ok  
--- lsping statistics ---  
5 packets transmitted, 5 packets received, 0% packet loss
```



# show hfrr profiles

## Syntax

```
show hfrr profiles
<brief |extensive>
```

## Release Information

Command introduced in Junos OS Release 12.2.

## Description

Display host fast reroute (HFRR) profile information.

HFRR adds a precomputed protection path into the Packet Forwarding Engine, such that if a link between a provider edge device and a server farm becomes unusable for forwarding, the Packet Forwarding Engine can use another path without having to wait for the router or the protocols to provide updated forwarding information.

## Options

**none**—Display information about HRFF profiles.

**brief | extensive**—(Optional) Display the specified level of output.

## Required Privilege Level

view

## RELATED DOCUMENTATION

[Example: Configuring Link Protection with Host Fast Reroute | 1078](#)

## List of Sample Output

[show hfrr profiles on page 1420](#)

## Output Fields

[Table 15 on page 1419](#) describes the output fields for the **show hfrr profiles** command. Output fields are listed in the approximate order in which they appear.

Table 15: show hfrr profiles Output Fields

Field Name	Field Description
HFRR	



Table 15: show hfrr profiles Output Fields (continued)

Field Name	Field Description
HFRR current state	Status of the HFRR profile: HFRR_ACTIVE, HFRR_INACTIVE, HFRR_IFLH-NOT-CONF, and so on.
HFRR Prefix limit blackout timer expiry (in secs)	Time interval between an HFRR profile becoming inactive on exceeding the ARP prefix limit, and the profile starting the SYNC process.
HFRR prefix limit hit count	Number of times that an HFRR profile becomes inactive on exceeding the ARP prefix limit.
HFRR protected IFL name	Interface configured for the HFRR feature.
HFRR protected IFL handle	
HFRR routing instance name	The routing instance in which the HFRR interface is configured.
HFRR routing instance handle	
HFRR sync BG scheduled	
HFRR RTS filter on	
HFRR delete BG scheduled	
HFRR ARP prefix limit	Configured ARP prefix limit.
HFRR ARP supplementary blackout timeout (in mins)	Supplementary time-out value configured for profile to be inactive when it hits ARP prefix limit.
HFRR number of ARP routes learned	Number of ARP routes learned on the configured interface.
HFRR number of FRR routes created	Number of ARP routes created on the configured interface.

## Sample Output

show hfrr profiles

```
user@host> show hfrr profiles
```



```
HFRR pointer: 0x9254000
HFRR current state: HFRR_ACTIVE
HFRR Prefix limit blackout timer expiry (in secs): 0
HFRR prefix limit hit count: 0
HFRR protected IFL name: ge-4/1/0.0
HFRR protected IFL handle: 0x9248738
HFRR routing instance name: test
HFRR routing instance handle: 0x9145740
HFRR sync BG scheduled: NO
HFRR RTS filter on: YES
HFRR delete BG scheduled: NO
HFRR ARP prefix limit: 0
HFRR ARP supplementary blackout timeout (in mins): 1
HFRR number of ARP routes learned: 4
HFRR number of FRR routes created: 2
```



# show ingress-replication mvpn

## Syntax

show ingress-replication mvpn

## Release Information

Command introduced in Junos OS Release 10.4.

## Description

Display the state and configuration of the ingress replication tunnels created for the MVPN application when using the **mpls-internet-multicast** routing instance type.

## Required Privilege Level

View

## List of Sample Output

[show ingress-replication mvpn on page 1423](#)

## Output Fields

[Table 16 on page 1422](#) lists the output fields for the **show ingress-replication mvpn** command. Output fields are listed in the approximate order in which they appear.

Table 16: show ingress-replication mvpn Output Fields

Field Name	Field Description
Ingress tunnel	Identifies the MVPN ingress replication tunnel.
Application	Identifies the application (MVPN).
Unicast tunnels	List of unicast tunnels in use.
Leaf address	Address of the tunnel.
Tunnel type	Identifies the unicast tunnel type.
Mode	Indicates whether the tunnel was created as a new tunnel for the ingress replication, or if an existing tunnel was used.
State	Indicates whether the tunnel is Up or Down.



## Sample Output

**show ingress-replication mvpn**

user@host> **show ingress-replication mvpn**

```
Ingress Tunnel: mvpn:1
  Application: MVPN
  Unicast tunnels
    Leaf Address      Tunnel-type      Mode      State
    10.255.245.2      P2P LSP         New       Up
    10.255.245.4      P2P LSP         New       Up
Ingress Tunnel: mvpn:2
  Application: MVPN
  Unicast tunnels
    Leaf Address      Tunnel-type      Mode      State
    10.255.245.2      P2P LSP         Existing  Up
```



## show mvpn c-multicast

### Syntax

```
show mvpn c-multicast
<extensive | summary>
<instance-name instance-name>
<source-pe>
```

### Release Information

Command introduced in Junos OS Release 8.4.

Option to show **source-pe** introduced in Junos OS Release 15.1.

### Description

Display the multicast VPN customer multicast route information.

### Options

**extensive | summary**—(Optional) Display the specified level of output.

**instance-name** *instance-name*—(Optional) Display output for the specified routing instance.

**source-pe**—(Optional) Display source-pe output for the specified c-multicast entries.

### Required Privilege Level

view

### List of Sample Output

[show mvpn c-multicast on page 1425](#)

[show mvpn c-multicast summary on page 1426](#)

[show mvpn c-multicast extensive on page 1426](#)

[show mvpn c-multicast source-pe on page 1427](#)

### Output Fields

[Table 17 on page 1424](#) lists the output fields for the **show mvpn c-multicast** command. Output fields are listed in the approximate order in which they appear.

Table 17: show mvpn c-multicast Output Fields

Field Name	Field Description	Level of Output
Instance	Name of the VPN routing instance.	summary extensive none
C-mcast IPv4 (S:G)	Customer router IPv4 multicast address.	extensive none



Table 17: show mvpn c-multicast Output Fields (*continued*)

Field Name	Field Description	Level of Output
Ptnl	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group.</i>	extensive none
St	State: <ul style="list-style-type: none"> <li>• DS—Represents (S,G) and is created due to (*,G)</li> <li>• RM—Remote VPN route learned from the remote PE router</li> <li>• St display blank—SSM group join</li> </ul>	extensive none
MVPN instance	Name of the multicast VPN routing instance	extensive none
C-multicast IPv4 route count	Number of customer multicast IPv4 routes associated with the multicast VPN routing instance.	summary
C-multicast IPv6 route count	Number of customer multicast IPv6 routes associated with the multicast VPN routing instance.	summary

## Sample Output

### show mvpn c-multicast

user@host> show mvpn c-multicast

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (\*, c-g) RM -- remote VPN route

Instance: VPN-A

C-mcast IPv4 (S:G)	Ptnl	St	
192.168.195.78/32:203.0.113.1/24	PIM-SM:10.255.14.144, 198.51.100.1		RM

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)



```

DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
  C-mcast IPv4 (S:G)                Ptnl                St
  192.168.195.94/32:203.0.113.0/24 PIM-SM:10.255.14.144, 198.51.100.2      RM

```

### show mvpn c-multicast summary

```
user@host> show mvpn c-multicast summary
```

```

MVPN Summary:
Family: INET
Family: INET6

Instance: mvpn1
  C-multicast IPv6 route count: 1

```

### show mvpn c-multicast extensive

```
user@host> show mvpn c-multicast extensive
```

```

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
  C-mcast IPv4 (S:G)                Ptnl                St
  192.168.195.78/32:203.0.113.1/24 PIM-SM:10.255.14.144, 198.51.100.1      RM
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
  C-mcast IPv4 (S:G)                Ptnl                St
  192.168.195.94/32:203.0.113.0/24 PIM-SM:10.255.14.144, 198.51.100.2      RM

```



**show mvpn c-multicast source-pe**

user@host> **show mvpn c-multicast source-pe**

```
Family : INET
Family : INET6

Instance : mvpn1
  MVPN Mode : RPT-SPT
    C-Multicast route address: ::/0:ff05::1/128
      MVPN Source-PE1:
        extended-community: no-advertise target:10.1.0.0:9
        Route Distinguisher: 10.1.0.0:1
        Autonomous system number: 1
        Interface: ge-0/0/9.1 Index: 343
      PIM Source-PE1:
        extended-community: target:10.1.0.0:9
        Route Distinguisher: 10.1.0.0:1
        Autonomous system number: 1
        Interface: ge-0/0/9.1 Index: 343
```



## show mvpn instance

### Syntax

```
show mvpn instance
<instance-name>
<display-tunnel-name>
<extensive | summary>
<inet | inet6>
<logical-system>
```

### Release Information

Command introduced in Junos OS Release 8.4.

Additional details in output for extensive option introduced in Junos OS Release 15.1.

### Description

Display the multicast VPN routing instance information according the options specified.

### Options

**instance-name**—(Optional) Display statistics for the specified routing instance, or press Enter without specifying an instance name to show output for all instances.

**display-tunnel-name**—(Optional) Display the ingress provider tunnel name rather than the attribute.

**extensive | summary**—(Optional) Display the specified level of output.

**inet | inet6**—(Optional) Display output for the specified IP type.

**inet | inet6**—(Optional) Display output for the specified IP type.

**logical-system**—(Optional) Display details for the specified logical system, or type “all”.

### Required Privilege Level

view

### List of Sample Output

[show mvpn instance on page 1429](#)

[show mvpn instance summary on page 1430](#)

[show mvpn instance extensive on page 1431](#)

[show mvpn instance summary \(IPv6\) on page 1432](#)

### Output Fields

[Table 18 on page 1429](#) lists the output fields for the **show mvpn instance** command. Output fields are listed in the approximate order in which they appear.



Table 18: show mvpn instance Output Fields

Field Name	Field Description	Level of Output
MVPN instance	Name of the multicast VPN routing instance	extensive none
Instance	Name of the VPN routing instance.	summary extensive none
Provider tunnel	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none
Neighbor	Address, type of provider tunnel (I-P-tnl, inclusive provider tunnel and S-P-tnl, selective provider tunnel) and provider tunnel for each neighbor.	extensive none
C-mcast IPv4 (S:G)	Customer IPv4 router multicast address.	extensive none
C-mcast IPv6 (S:G)	Customer IPv6 router multicast address.	extensive none
Ptnl	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none
St	State: <ul style="list-style-type: none"> <li>• DS—Represents (S,G) and is created due to (*,G)</li> <li>• RM—Remote VPN route learned from the remote PE router</li> <li>• St display blank—SSM group join</li> </ul>	extensive none
Neighbor count	Number of neighbors associated with the multicast VPN routing instance.	summary
C-multicast IPv4 route count	Number of customer multicast IPv4 routes associated with the multicast VPN routing instance.	summary
C-multicast IPv6 route count	Number of customer multicast IPv6 routes associated with the multicast VPN routing instance.	summary

## Sample Output

```
show mvpn instance
```

```
user@host> show mvpn instance
```



MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (\*, c-g) RM -- remote VPN route

Instance: VPN-A

Provider tunnel: I-P-tnl:PIM-SM:10.255.14.144, 198.51.100.1

Neighbor I-P-tnl

10.255.14.160 PIM-SM:10.255.14.160, 198.51.100.1

10.255.70.17 PIM-SM:10.255.70.17, 198.51.100.1

C-mcast IPv4 (S:G) Ptnl St

192.168.195.78/32:203.0.113.0/24 PIM-SM:10.255.14.144, 198.51.100.1 RM

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (\*, c-g) RM -- remote VPN route

Instance: VPN-B

Provider tunnel: I-P-tnl:PIM-SM:10.255.14.144, 198.51.100.2

Neighbor I-P-tnl

10.255.14.160 PIM-SM:10.255.14.160, 198.51.100.2

10.255.70.17 PIM-SM:10.255.70.17, 198.51.100.2

C-mcast IPv4 (S:G) Ptnl St

192.168.195.94/32:203.0.113.1/24 PIM-SM:10.255.14.144, 198.51.100.2 RM

## Sample Output

**show mvpn instance summary**

user@host> **show mvpn instance summary**

MVPN Summary:

Family: INET

Family: INET6

Instance: mvpn1

Sender-Based RPF: Disabled. Reason: Not enabled by configuration.

Hot Root Standby: Disabled. Reason: Not enabled by configuration.



```
Neighbor count: 3
C-multicast IPv6 route count: 1
```

## Sample Output

**show mvpn instance extensive**

```
user@host> show mvpn instance extensive
```

```
MVPN instance:
Family : INET

Instance : vpn_blue
  Customer Source: 10.1.1.1
    RT-Import Target: 192.168.1.1:100
    Route-Distinguisher: 192.168.1.1:100
    Source-AS: 65000
    Via unicast route: 10.1.0.0/16 in vpn-blue.inet.0
    Candidate Source PE Set:
      RT-Import 192.168.1.1:100, RD 1111:22222, Source-AS 65000
      RT-Import 192.168.2.2:100, RD 1111:22222, Source-AS 65000
      RT-Import 192.168.3.3:100, RD 1111:22222, Source-AS 65000

'Extensive' output will show everything in 'detail' output and add the list of
bound c-multicast routes.

> show mvpn source 10.1.1.1 instance vpn_blue extensive

Family : INET

Instance : vpn_blue
  Customer Source: 10.1.1.1
    RT-Import Target: 192.168.1.1:100
    Route-Distinguisher: 192.168.1.1:100
    Source-AS: 65000
    Via unicast route: 10.1.0.0/16 in vpn-blue.inet.0
    Candidate Source PE Set:
      RT-Import 192.168.1.1:100, RD 1111:22222, Source-AS 65000
      RT-Import 192.168.2.2:100, RD 1111:22222, Source-AS 65000
      RT-Import 192.168.3.3:100, RD 1111:22222, Source-AS 65000
    Customer-Multicast Routes:
```



```
10.1.1.1/32:198.51.100.3/24
10.1.1.1/32:198.51.100.3/24
```

### **show mvpn instance summary (IPv6)**

user@host> **show mvpn instance summary**

```
MVPN Summary:
Instance: VPN-A
  C-multicast IPv6 route count: 2
Instance: VPN-B
  C-multicast IPv6 route count: 2
```



## show mvpn neighbor

### Syntax

```
show mvpn neighbor
<extensive | summary>
<inet | inet6>
<instance instance-name | neighbor-address address>
<logical-system logical-system-name>
```

### Release Information

Command introduced in Junos OS Release 8.4.

### Description

Display multicast VPN neighbor information.

### Options

**extensive | summary**—(Optional) Display the specified level of output for all multicast VPN neighbors.

**inet | inet6**—(Optional) Display IPv4 or IPv6 information for all multicast VPN neighbors.

**instance *instance-name* | neighbor-address *address***—(Optional) Display multicast VPN neighbor information for the specified instance or the specified neighbor.

**logical-system *logical-system-name***—(Optional) Display multicast VPN neighbor information for the specified logical system.

### Required Privilege Level

view

### List of Sample Output

[show mvpn neighbor on page 1434](#)

[show mvpn neighbor extensive on page 1435](#)

[show mvpn neighbor extensive on page 1435](#)

[show mvpn neighbor instance-name on page 1436](#)

[show mvpn neighbor neighbor-address on page 1436](#)

[show mvpn neighbor neighbor-address summary on page 1437](#)

[show mvpn neighbor neighbor-address extensive on page 1437](#)

[show mvpn neighbor neighbor-address instance-name on page 1438](#)

[show mvpn neighbor summary on page 1438](#)

### Output Fields

[Table 19 on page 1434](#) lists the output fields for the **show mvpn neighbor** command. Output fields are listed in the approximate order in which they appear.



Table 19: show mvpn neighbor Output Fields

Field Name	Field Description	Level of Output
<b>MVPN instance</b>	Name of the multicast VPN routing instance	<b>extensive</b> none
<b>Instance</b>	Name of the VPN routing instance.	<b>summary extensive</b> none
<b>Neighbor</b>	Address, type of provider tunnel ( <b>I-P-tnl</b> , inclusive provider tunnel and <b>S-P-tnl</b> , selective provider tunnel) and provider tunnel for each neighbor.	<b>extensive</b> none
<b>Provider tunnel</b>	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	<b>extensive</b> none

## Sample Output

**show mvpn neighbor**

user@host> **show mvpn neighbor**

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (\*, c-g) RM -- remote VPN route

Instance: VPN-A

Neighbor

10.255.14.160

10.255.70.17

I-P-tnl

PIM-SM:10.255.14.160, 192.0.2.1

PIM-SM:10.255.70.17, 192.0.2.1

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (\*, c-g) RM -- remote VPN route

Instance: VPN-B

Neighbor

10.255.14.160

10.255.70.17

I-P-tnl

PIM-SM:10.255.14.160, 192.0.2.2

PIM-SM:10.255.70.17, 192.0.2.2



## Sample Output

### show mvpn neighbor extensive

user@host> show mvpn neighbor extensive

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (\*, c-g) RM -- remote VPN route

Instance: VPN-A

Neighbor	I-P-tnl
10.255.14.160	PIM-SM:10.255.14.160, 192.0.2.1
10.255.70.17	PIM-SM:10.255.70.17, 192.0.2.1

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (\*, c-g) RM -- remote VPN route

Instance: VPN-B

Neighbor	I-P-tnl
10.255.14.160	PIM-SM:10.255.14.160, 192.0.2.2
10.255.70.17	PIM-SM:10.255.70.17, 192.0.2.2

### show mvpn neighbor extensive

user@host> show mvpn neighbor extensive

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (\*, c-g) RM -- remote VPN route

Instance: mvpn-a

Neighbor	I-P-tnl
----------	---------



```

10.255.72.45
10.255.72.50                                LDP P2MP:10.255.72.50, lsp-id 1

```

## Sample Output

**show mvpn neighbor instance-name**

**user@host> show mvpn neighbor instance-name VPN-A**

```

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
Neighbor                               I-P-tnl
10.255.14.160                          PIM-SM:10.255.14.160, 192.0.2.1
10.255.70.17                          PIM-SM:10.255.70.17, 192.0.2.1

```

## Sample Output

**show mvpn neighbor neighbor-address**

**user@host> show mvpn neighbor neighbor-address 10.255.14.160**

```

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
Neighbor                               I-P-tnl
10.255.14.160                          PIM-SM:10.255.14.160, 192.0.2.1
MVPN instance:

```



```

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
    Neighbor                        I-P-tnl
    10.255.14.160                  PIM-SM:10.255.14.160, 192.0.2.2

```

## Sample Output

**show mvpn neighbor neighbor-address summary**

user@host> **show mvpn neighbor neighbor-address 10.255.70.17 summary**

```

MVPN Summary:
Instance: VPN-A
Instance: VPN-B

```

## Sample Output

**show mvpn neighbor neighbor-address extensive**

user@host> **show mvpn neighbor neighbor-address 10.255.70.17 extensive**

```

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
    Neighbor                        I-P-tnl
    10.255.70.17                  PIM-SM:10.255.70.17, 192.0.2.1
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

```



```

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
Neighbor                               I-P-tnl
10.255.70.17                          PIM-SM:10.255.70.17, 192.0.2.2

```

## Sample Output

**show mvpn neighbor neighbor-address instance-name**

user@host> **show mvpn neighbor neighbor-address 10.255.70.17 instance-name VPN-A**

```

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
Neighbor                               I-P-tnl
10.255.70.17                          PIM-SM:10.255.70.17, 192.0.2.1

```

## Sample Output

**show mvpn neighbor summary**

user@host> **show mvpn neighbor summary**

```

MVPN Summary:
Family: INET
Family: INET6

Instance: mvpn1
Neighbor count: 3

```



# show route vpn-localization

## Syntax

```
show route vpn-localization
<brief | detail | terse>
<family (inet| inet6)>
<vpn-name vpn-name>
```

## Release Information

Command introduced in Junos OS Release 14.2.

## Description

Display the localization information of all the VRFs in the system.

## Options

**none**— Display the localization information of all the VRFs in the system.

**brief | detail | terse**—(Optional) Display the specified level of output.

**family (inet | inet6)**—(Optional) Display the localized information of all the VRFs in the system for inet or inet6 family.

**vpn-name vpn-name**—(Optional) Display the localized information of the specific VPN.

## Required Privilege Level

view

## List of Sample Output

[show route vpn-localization on page 1441](#)

[show route vpn-localization vpn-name vpn-name family inet on page 1443](#)

[show route vpn-localization vpn-name vpn-name family inet detail on page 1443](#)

[show route vpn-localization terse on page 1443](#)

## Output Fields

[Table 20 on page 1439](#) describes the output fields for the **show route vpn-localization** command. Output fields are listed in the approximate order in which they appear.

Table 20: show route vpn-localization Output Fields

Field Name	Field Description	Level of Output
Routing table	Name of the routing table	none <b>detail</b>



Table 20: show route vpn-localization Output Fields (*continued*)

Field Name	Field Description	Level of Output
Index	Index of the routing table.	none <b>detail</b>
Address Family	Address family of the routing table (inet/inet6).	none <b>detail</b>
Localization status	<p>Localization status of the routing table and can be one of the following:</p> <ul style="list-style-type: none"> <li>• Complete - The routing table successfully installed on all the local FPCs.</li> <li>• Pending - The localization change on this routing table is yet to be processed in the pending state. The routing table might not be present on all the local FPCs or can be present on the non-local FPCs.</li> <li>• Replaying - The routing table is being installed on the local FPCs. A localization change involving the addition of new local FPCs requires the system to replay the routing table for newly added FPCs.</li> </ul>	none <b>detail</b>
Local FPC's	List of FPCs on which the routing table should be installed, as per the configuration.	none
Local FPC (configured)	List of FPCs on which the routing table should be installed, as per the configuration.	<b>detail</b>
Local FPC (Current state)	List of FPCs on which the routing table is currently installed.	<b>detail</b>
Table Name	Name of the routing table.	<b>terse</b>
Local'd	The localization status of VRF. If VRF is localized, then the status is Yes; otherwise, it is No.	<b>terse</b>
Table Index	Index of the routing table.	<b>terse</b>
Local FPC's Configured	List of FPCs, in hexadecimal, on which the routing table should be installed as per the configuration.	<b>terse</b>
Local FPC's Actual	List of FPCs, in hexadecimal, on which the routing table is currently installed.	<b>terse</b>



Table 20: show route vpn-localization Output Fields (*continued*)

Field Name	Field Description	Level of Output
State	<p>Localization status of the routing table and can be one of the following:</p> <ul style="list-style-type: none"> <li>• Complete - The routing table successfully installed on the local FPCs.</li> <li>• Pending - The localization change on this routing table is yet to be processed in the pending state. The routing table might not be present on all the local FPCs or can be present on the non-local FPCs.</li> <li>• Replaying - The routing table is being installed on the local FPCs. A localization change involving addition of new local FPCs requires the system to replay the routing table for the newly added FPCs.</li> </ul>	terse

## Sample Output

**show route vpn-localization**

user@host> **show route vpn-localization**

```

Routing table: CE-1.inet, Localized
  Index: 7, Address Family: inet, Localization status: Complete
  Local FPC's: 4 5 13 18

Routing table: CE-1.inet6, Localized
  Index: 7, Address Family: inet6, Localization status: Complete
  Local FPC's: 4 5 13 18

Routing table: CE-10.inet, Localized
  Index: 8, Address Family: inet, Localization status: Complete
  Local FPC's: 4 5 13

Routing table: CE-10.inet6, Localized
  Index: 8, Address Family: inet6, Localization status: Complete
  Local FPC's: 4 5 13

Routing table: CE-2.inet, Localized
  Index: 9, Address Family: inet, Localization status: Complete
  Local FPC's: 4 5 10 13

Routing table: CE-2.inet6, Localized

```



Index: 9, Address Family: inet6, Localization status: Complete  
Local FPC's: 4 5 10 13

Routing table: CE-3.inet, Localized

Index: 10, Address Family: inet, Localization status: Complete  
Local FPC's: 4 5 9 13

Routing table: CE-3.inet6, Localized

Index: 10, Address Family: inet6, Localization status: Complete  
Local FPC's: 4 5 9 13

Routing table: CE-4.inet, Localized

Index: 11, Address Family: inet, Localization status: Complete  
Local FPC's: 3 4 5 13

Routing table: CE-4.inet6, Localized

Index: 11, Address Family: inet6, Localization status: Complete  
Local FPC's: 3 4 5 13

Routing table: CE-5.inet, Localized

Index: 12, Address Family: inet, Localization status: Complete  
Local FPC's: 4 5 13

Routing table: CE-5.inet6, Localized

Index: 12, Address Family: inet6, Localization status: Complete  
Local FPC's: 4 5 13

Routing table: CE-6.inet, Localized

Index: 13, Address Family: inet, Localization status: Complete  
Local FPC's: 4 5 13 18

Routing table: CE-6.inet6, Localized

Index: 13, Address Family: inet6, Localization status: Complete  
Local FPC's: 4 5 13 18

Routing table: CE-7.inet, Localized

Index: 14, Address Family: inet, Localization status: Complete  
Local FPC's: 4 5 10 13

Routing table: CE-7.inet6, Localized

Index: 14, Address Family: inet6, Localization status: Complete  
Local FPC's: 4 5 10 13

Routing table: CE-8.inet, Localized



```
Index: 15, Address Family: inet, Localization status: Complete
Local FPC's: 4 5 9 13
```

```
Routing table: CE-8.inet6, Localized
```

```
Index: 15, Address Family: inet6, Localization status: Complete
Local FPC's: 4 5 9 13
```

```
Routing table: CE-9.inet, Localized
```

```
Index: 16, Address Family: inet, Localization status: Complete
Local FPC's: 3 4 5 13
```

```
Routing table: CE-9.inet6, Localized
```

```
Index: 16, Address Family: inet6, Localization status: Complete
Local FPC's: 3 4 5 13
```

### **show route vpn-localization vpn-name vpn-name family inet**

```
user@host> show route vpn-localization vpn-name vpn-m200 family inet
```

```
Routing table: vpn-m200.inet, Localized
Index: 7, Address Family: inet, Localization status: Complete
Local FPC's: 0 1
```

### **show route vpn-localization vpn-name vpn-name family inet detail**

```
user@host> show route vpn-localization vpn-name vpn-m200 family inet detail
```

```
Routing table: vpn-m200.inet, Non-localized
Index: 7, Address Family: inet
Localization status: Complete
Local FPC (configured):
List: All
Local FPC (Current state):
List: All
```

### **show route vpn-localization terse**

```
user@host> show route vpn-localization terse
```



Table Name	Local'd	Table Index	Local FPC's Configured	Actual	State
vpn-m200.inet	Yes	7	0000000000000003	0000000000000003	Complete
vpn-m200.inet6	Yes	7	0000000000000003	0000000000000003	Complete
vpn-m300.inet	Yes	8	0000000000000005	0000000000000005	Complete
vpn-m300.inet6	Yes	8	0000000000000005	0000000000000005	Complete
vpn-m500.inet	Yes	9	0000000000000021	0000000000000021	Complete
vpn-m500.inet6	Yes	9	0000000000000021	0000000000000021	Complete