

Junos[®] OS

MPLS Applications User Guide

Published
2020-03-27

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos[®] OS MPLS Applications User Guide

Copyright © 2020 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

About the Documentation | xlv

Documentation and Release Notes | xlv

Using the Examples in This Manual | xlv

Merging a Full Example | xlvii

Merging a Snippet | xlviii

Documentation Conventions | xlviii

Documentation Feedback | li

Requesting Technical Support | li

Self-Help Online Tools and Resources | lii

Creating a Service Request with JTAC | lii

1

Overview

Understanding MPLS | 2

MPLS Overview | 2

MPLS Overview | 2

Why Use MPLS? | 3

Why Not Use MPLS? | 4

How Do I Configure MPLS? | 4

What Does the MPLS Protocol Do? | 5

How Does MPLS Interface to Other Protocols? | 5

If I Have Used Cisco MPLS, What Do I Need to Know? | 6

TTL Processing on Incoming MPLS Packets | 6

Link-Layer Support in MPLS | 8

MPLS Overview for ACX Series Universal Metro Routers | 8

MPLS for EX Series Switches Overview | 9

Benefits of MPLS | 10

Additional Benefits of MPLS and Traffic Engineering | 10

MPLS Feature Support on QFX Series and EX4600 Switches | 11

Supported Features | 11

MPLS Limitations on QFX Series and EX4600 Switches | 22

MPLS Limitations on QFX10000 Switches | 23

MPLS Limitations on EX4600, EX4650, QFX5100, QFX5110, QFX5120, QFX5200, and QFX5210 Switches | 23

MPLS Limitations on QFX5100 Virtual Chassis and Virtual Chassis Fabric Switches | 25

MPLS Limitations on QFX3500 Switches | 26

Supported Standards | 27

Supported MPLS Standards | 27

Supported MPLS Standards | 27

Supported RSVP Standards | 30

Supported LDP Standards | 31

DiffServ-Aware Traffic Engineering Standards | 32

Supported GMPLS Standards | 32

Supported PCEP Standards | 33

MPLS Configuration

Configuring MPLS | 36

Basic MPLS Configuration | 36

- MPLS Configuration Overview | 36

- MPLS Configuration Guidelines | 37

- Configuring MPLS | 38

- Example: Enabling MPLS | 38

- Example: Configuring MPLS on EX8200 and EX4500 Switches | 41

MPLS on Provider and Provider Edge Devices Configuration | 61

- Configuring MPLS on Provider Switches | 62

- Configuring MPLS on Provider Edge Switches | 63

 - Configuring the Ingress PE Switch | 63

 - Configuring the Egress PE Switch | 65

- Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS | 67

 - Configuring the Ingress PE Switch | 67

 - Configuring the Egress PE Switch | 70

- Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect | 73

- Configuring MPLS on EX8200 and EX4500 Provider Switches | 77

Configuring MPLS Tunnels | 79

IPv6-over-Ipv4 Tunnels | 79

- Configuring IPv6 Tunneling for MPLS | 79

- Example: Tunneling IPv6 Traffic over MPLS IPv4 Networks | 81

Next-Hop-Based Dynamic Tunnels | 92

- Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels | 93

- Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview | 111

- Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels | 114

- Next-Hop-Based Dynamic Tunnel Localization Overview | 126

 - Benefits of Next-Hop-Based Dynamic Tunnel Localization | 127

 - Use Cases for Next-Hop-Based Dynamic Tunnel Localization | 127

 - Traffic Handling with Localization of Next-Hop-Based Dynamic Tunnels | 127

 - Configuring Next-Hop-Based Dynamic Tunnels Localization | 128

 - Troubleshooting Localized Next-Hop-Based Dynamic Tunnels | 131

MPLS Traffic

Managing MPLS Traffic | 135

Bidirectional Forwarding Detection (BFD) for MPLS | 135

Configuring Bidirectional Forwarding Detection for MPLS (CLI Procedure) | 135

Configuring BFD on Provider Edge and Provider Switches for an LDP-Based LSP | 136

Configuring BFD on Provider Edge and Provider Switches for an RSVP-Based LSP | 139

BFD-Triggered Local Repair for Rapid Convergence | 140

Understanding BFD-Triggered Local Protection | 140

Configuring BFD for MPLS IPv4 LSPs | 142

Configuring BFD for RSVP-Signaled LSPs | 143

Configuring a Failure Action for the BFD Session on an RSVP LSP | 145

Firewall Filters for MPLS | 146

Configuring MPLS Firewall Filters and Policers on Routers | 146

Configuring MPLS Firewall Filters | 147

Examples: Configuring MPLS Firewall Filters | 147

Configuring Policers for LSPs | 148

Example: Configuring an LSP Policer | 150

Configuring Automatic Policers | 151

Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets | 155

Overview of MPLS Firewall Filters on Loopback Interface | 155

Benefits of Adding MPLS Firewall Filters on the Loopback Interface | 155

Guidelines and Limitations | 155

Configuring MPLS Firewall Filters and Policers on Switches | 156

Configuring an MPLS Firewall Filter | 156

Applying an MPLS Firewall Filter to an MPLS Interface | 157

Applying an MPLS Firewall Filter to a Loopback Interface | 157

Configuring Policers for LSPs | 158

System Log Messages and SNMP Traps for MPLS | 159

Load Balancing MPLS Traffic | 161

Configuring Load Balancing Based on MPLS Labels | 161

Example: Load-Balanced MPLS Network | 166

Router Configurations for the Load-Balanced MPLS Network | 167

Configuring Load Balancing Based on MPLS Labels on ACX Series Routers | 182

MPLS Encapsulated Payload Load-balancing Overview | 186

Configuring MPLS Encapsulated Payload for Load Balancing | 187

Policy-Based Multipath Routes Overview | 187

Understanding Policy-Based Multipath Routes | 188

Benefits of Policy-Based Multipath Routes | 188

Policy-Based Multipath Routes for Route Resolution | 189

Sample Route Resolution Using Policy-Based Multipath Routes | 189

Enhancement to Class-of-Service (CoS) Forwarding-Policy | 191

Enhancements to Policy Match Protocol | 192

Impact of Configuring Policy-Based Multipath Route on Network Performance | 193

Understanding IP-Based Filtering and Selective Port Mirroring of MPLS Traffic | 193

IP-Based Filtering of MPLS Traffic | 193

Selective Port Mirroring of MPLS Traffic | 194

Sample Configurations | 195

Shared Risk Link Groups for MPLS | 199

SRLG Overview | 199

Example: Configuring SRLG | 200

Example: Excluding SRLG Links Completely for the Secondary LSP | 213

Example: Configuring SRLG with Link Protection | 220

Example: Configuring SRLG with Link Protection with the exclude-srlg Option | 247

Protecting MPLS Traffic | 275**Node and Path Protection for MPLS LSPs | 275**

MPLS and Traffic Protection | 276

Node-Link Protection Overview | 277

Path Protection Overview | 278

Configuring Path Protection in an MPLS Network (CLI Procedure) | 279

Configuring the Primary Path | 280

Configuring the Secondary Path | 282

Configuring the Revert Timer	282
Preventing Use of a Path That Previously Failed	283
Configuring MPLS Inter-AS Link-Node Protection with Labeled BGP	283
Understanding MPLS Inter-AS Link Protection	283
Example: Configuring MPLS Inter-AS Link-Node Protection	285
Configuring Egress Protection Service Mirroring for BGP Signaled Layer 2 Services	303
Example: Configuring MPLS Egress Protection Service Mirroring for BGP Signaled Layer 2 Services	307
Example: Configuring Layer 3 VPN Egress Protection with PLR as Protector	329
Understanding MPLS and Path Protection on EX Series Switches	365
Verifying Path Protection in an MPLS Network	365
Verifying the Primary Path	365
Verifying the RSVP-Enabled Interfaces	367
Verifying a Secondary Path	367
Link Protection for MPLS LSPs	369
Link Protection	369
Multiple Bypass LSPs for Link Protection	370
Node Protection	371
Fast Reroute, Node Protection, and Link Protection	372
LSP Protection Overview	372
LSP Protection Types Comparison	373
One-to-One Backup Implementation	373
Facility Backup Implementation	374
Configuring Link Protection on Interfaces Used by LSPs	376
Configuring Bypass LSPs	378
Configuring Administrative Groups for Bypass LSPs	378
Configuring the Bandwidth for Bypass LSPs	379
Configuring Class of Service for Bypass LSPs	380
Configuring the Hop Limit for Bypass LSPs	380
Configuring the Maximum Number of Bypass LSPs	380
Disabling CSPF for Bypass LSPs	381
Disabling Node Protection for Bypass LSPs	381
Configuring the Optimization Interval for Bypass LSPs	382
Configuring an Explicit Path for Bypass LSPs	382

Configuring the Amount of Bandwidth Subscribed for Bypass LSPs | 383

Configuring Priority and Preemption for Bypass LSPs | 383

Configuring Node Protection or Link Protection for LSPs | 384

Configuring Inter-AS Node and Link Protection | 385

Measuring MPLS Traffic | 386

Gather Statistics on MPLS Sessions | 386

Configuring MPLS to Gather Statistics | 386

On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview | 387

Importance of Measuring Packet Loss and Delay | 388

Defining Packet Loss, Delay, and Throughput | 388

Packet Loss and Delay Measurement Mechanisms | 389

Packet Loss and Delay Metrics | 389

Packet Loss and Delay Measurement Concepts | 390

Packet Loss and Delay Measurement Functionality | 392

Packet Loss and Delay Features | 393

Example: Configuring On-Demand Loss and Delay Measurement | 394

Example: Configuring Pro-active Loss and Delay Measurements for Bidirectional MPLS LSPs | 406

Configuring On-Demand Loss and Delay Measurement | 415

Configuring Pro-Active Loss and Delay Measurements | 416

4

MPLS LSPs

Understanding MPLS LSPs | 419

LSP Overview | 419

How a Packet Travels Along an LSP | 419

Types of LSPs | 420

Scope of LSPs | 420

LSP Labels | 421

MPLS Label Overview | 421

MPLS Label Allocation | 421

Operations on MPLS Labels | 423

Understanding MPLS Label Operations | 423

MPLS Label-Switched Paths and MPLS Labels | 424

Reserved Labels | 425

MPLS Label Operations | 425

Penultimate-Hop Popping and Ultimate-Hop Popping | 426

Understanding MPLS Label Manager | 427

Special MPLS Labels | 427

Entropy Label Support in Mixed Mode Overview | 428

Abstract Hops for MPLS LSPs Overview | 428

Understanding Abstract Hops | 429

Benefits of Using Abstract Hops | 430

Junos OS Implementation of Abstract Hops | 432

Example: Configuring Abstract Hops for MPLS LSPs | 441

Configuring the Maximum Number of MPLS Labels | 461

Configuring MPLS to Pop the Label on the Ultimate-Hop Router | 463

Advertising Explicit Null Labels to BGP Peers | 464

Understanding MPLS Label Operations on EX Series Switches | 465

MPLS Label-Switched Paths and MPLS Labels on the Switches | 465

Reserved Labels | 466

MPLS Label Operations on the Switches | 467

Penultimate-Hop Popping and Ultimate-Hop Popping | 468

LSP Routes | 468

MPLS and Routing Tables | 469

Fast Reroute Overview | 471

Configuring Fast Reroute | 473

Detour Merging Process | 474

Detour Computations | 475

Fast Reroute Path Optimization | 475

Configuring the Optimization Interval for Fast Reroute Paths | 476

Adding LSP-Related Routes to the inet.3 or inet6.3 Routing Table | 476

LSP Computation | 478

Constrained-Path LSP Computation | 478

How CSPF Selects a Path | 480

CSPF Path Selection Tie-Breaking | 480

Computing CSPF Paths Offline | 481

Configuring CSPF Tie Breaking | 481

Disabling Constrained-Path LSP Computation | 482

LSP Routers | 483

Routers in an LSP | 484

Configuring the Ingress and Egress Router Addresses for LSPs | 484

Configuring the Ingress Router Address for LSPs | 484

Configuring the Egress Router Address for LSPs | 485

Preventing the Addition of Egress Router Addresses to Routing Tables | 485

Configuring the Ingress Router for MPLS-Signaled LSPs | 486

Creating Named Paths | 487

Configuring Alternate Backup Paths Using Fate Sharing | 489

Configuring the Intermediate and Egress Routers for MPLS-Signaled LSPs | 492

Configuring the Connection Between Ingress and Egress Routers | 492

Pinging LSPs | 493

Pinging MPLS LSPs | 493

Pinging Point-to-Multipoint LSPs | 494

Pinging the Endpoint Address of MPLS LSPs | 494

Pinging CCC LSPs | 494

Pinging Layer 3 VPNs | 494

Support for LSP Ping and Traceroute Commands Based on RFC 4379 | 494

Configuring MPLS LSPs | 495

Basic LSP Configuration | 495

Configuring LSP Metrics | 496

Configuring Dynamic LSP Metrics | 497

Configuring Static LSP Metrics | 497

Configuring a Text Description for LSPs | 498

Configuring MPLS Soft Preemption | 500

Configuring Priority and Preemption for LSPs | 501

Configuring Administrative Groups for LSPs | 502

Configuring Extended Administrative Groups for LSPs | 504

Configuring Preference Values for LSPs | 506

Disabling Path Route Recording by LSPs | 507

Achieving a Make-Before-Break, Hitless Switchover for LSPs | 507

Specifying the Amount of Time the Router Waits to Switch Over to New Paths | 508

Specifying the Amount of Time to Delay the Tear Down of Old Paths | 509

Achieving a Hitless, MBB Switchover Without Artificial Delays	509
Optimizing Signaled LSPs	510
Configuring the Smart Optimize Timer for LSPs	514
Limiting the Number of Hops in LSPs	515
Configuring the Bandwidth Value for LSPs	515
Automatic Bandwidth Allocation for LSPs	515
Configuring Automatic Bandwidth Allocation for LSPs	516
Configuring Automatic Bandwidth Allocation on LSPs	517
Requesting Automatic Bandwidth Allocation Adjustment	523
Configuring Reporting of Automatic Bandwidth Allocation Statistics for LSPs	524
Configuring an LSP Across ASs	528
Damping Advertisement of LSP State Changes	529
Configuring Corouted Bidirectional LSPs	530
Configuring the Entropy Label for LSPs	533
Example: Configuring an Entropy Label for a BGP Labeled Unicast LSP	534
Configuring Ultimate-Hop Popping for LSPs	559
Configuring Explicit-Path LSPs	563
Example: Configuring an Explicit-Path LSP	564
LSP Bandwidth Oversubscription Overview	565
LSP Size Oversubscription	566
LSP Link Size Oversubscription	566
Class Type Oversubscription and Local Oversubscription Multipliers	566
Configuring the Bandwidth Subscription Percentage for LSPs	567
Constraints on Configuring Bandwidth Subscription	567
Primary, Secondary, and Static LSP Configuration	569
Configuring Primary and Secondary LSPs	569
Configuring Primary and Secondary Paths for an LSP	570
Configuring the Revert Timer for LSPs	570
Specifying the Conditions for Path Selection	571
Configuring Hot Standby of Secondary Paths for LSPs	572
Configuring Static LSPs	573
Configuring the Ingress Router for Static LSPs	574
Configuring the Intermediate (Transit) and Egress Routers for Static LSPs	577
Configuring a Bypass LSP for the Static LSP	580

Configuring the Protection Revert Timer for Static LSPs	580
Configuring Static Unicast Routes for Point-to-Multipoint LSPs	581
Configuring Static Label Switched Paths for MPLS (CLI Procedure)	582
Configuring the Ingress PE Switch	583
Configuring the Provider and the Egress PE Switch	584
Configuring Static Label Switched Paths for MPLS	585
Configuring the Ingress PE Switch	586
Configuring the Provider and the Egress PE Switch	586
Adaptive LSP Configuration	587
Container LSP Configuration	589
Dynamic Bandwidth Management Using Container LSP Overview	589
Understanding RSVP Multipath Extensions	589
Junos OS RSVP Multipath Implementation	590
Current Traffic Engineering Challenges	591
Using Container LSP as a Solution	594
Junos OS Container LSP Implementation	596
Configuration Statements Supported for Container LSPs	613
Impact of Configuring Container LSPs on Network Performance	617
Supported and Unsupported Features	618
Example: Configuring Dynamic Bandwidth Management Using Container LSP	619
Configuring Dynamic Bandwidth Management Using Container LSP	650
Multiclass LSP Configuration	654
Multiclass LSP Overview	654
Multiclass LSPs	655
Establishing a Multiclass LSP on the Differentiated Services Domain	655

Point-to-Multipoint LSP Configuration | 656

- Point-to-Multipoint LSPs Overview | 656

- Understanding Point-to-Multipoint LSPs | 658

- Point-to-Multipoint LSP Configuration Overview | 660

- Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP | 660

- Configuring Primary and Branch LSPs for Point-to-Multipoint LSPs | 685

 - Configuring the Primary Point-to-Multipoint LSP | 686

 - Configuring a Branch LSP for Point-to-Multipoint LSPs | 686

- Configuring Inter-Domain Point-to-Multipoint LSPs | 687

- Configuring Link Protection for Point-to-Multipoint LSPs | 689

- Configuring Graceful Restart for Point-to-Multipoint LSPs | 689

- Configuring a Multicast RPF Check Policy for Point-to-Multipoint LSPs | 690

 - Example: Configuring Multicast RPF Check Policy for a Point-to-Multipoint LSP | 691

- Configuring Ingress PE Router Redundancy for Point-to-Multipoint LSPs | 691

- Enabling Point-to-Point LSPs to Monitor Egress PE Routers | 692

- Preserving Point-to-Multipoint LSP Functioning with Different Junos OS Releases | 693

Pop-and-Forward LSP Configuration | 693

- Benefits of RSVP-TE Pop-and-Forward LSP Tunnels | 694

- Pop-and-Forward LSP Tunnel Terminology | 694

- Pop-and-Forward LSP Tunnel Label and Signaling | 695

- Pop-and-Forward LSP Tunnel Label Stacking | 696

 - Construction of Label Stack at the Ingress | 696

 - Auto-Delegation of Label Stack | 696

- Pop-and-Forward LSP Tunnel Link Protection | 697

- RSVP-TE Pop-and-Forward LSP Tunnel Supported and Unsupported Features | 698

Segment Routing LSP Configuration | 699

- Enabling Distributed CSPF for Segment Routing LSPs | 700

 - Distributed CSPF Computation Constraints | 700

 - Distributed CSPF Computation Algorithm | 701

 - Distributed CSPF Computation Database | 702

 - Configuring Distributed CSPF Computation Constraints | 702

 - Distributed CSPF Computation | 703

 - Interaction Between Distributed CSPF Computation and SRTE Features | 703

Distributed CSPF Computation Sample Configurations | 704

Static Segment Routing Label Switched Path | 706

Understanding Static Segment Routing LSP in MPLS Networks | 707

Example: Configuring Static Segment Routing Label Switched Path | 731

Routing Engine-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution | 750

Understanding RE-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution | 751

Configuring RE-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution | 752

Example | 755

Verify That LSPs Are Configured for Static Segment-Routing Tunnels and That S-BFD Session Status Is Visible | 756

Verify the Segment-Routing Tunnel Route with a Primary Next Hop and a Secondary Next Hop | 758

Verify the S-BFD Session of the Primary Path | 758

Configuring Static Adjacency Segment Identifier for Aggregate Ethernet Member Links Using Single-Hop Static LSP | 759

5

MPLS Signalling Protocols

RSVP | 764

RSVP Overview | 764

RSVP Overview | 765

RSVP Operation Overview | 765

Understanding the RSVP Signaling Protocol | 766

RSVP Fundamentals | 766

Bandwidth Reservation Requirement | 767

Explicit Route Objects | 767

Constrained Shortest Path First | 768

Link Coloring | 769

RSVP-TE protocol extensions for FRR | 769

Junos OS RSVP Protocol Implementation | 771

RSVP Authentication | 771

RSVP and IGP Hello Packets and Timers | 772

RSVP Message Types | 772

- Path Messages | 773

- Resv Messages | 773

- PathTear Messages | 773

- ResvTear Messages | 773

- PathErr Messages | 773

- ResvErr Messages | 774

- ResvConfirm Messages | 774

Understanding RSVP Automatic Mesh | 774

RSVP Reservation Styles | 775

RSVP Refresh Reduction | 776

MTU Signaling in RSVP | 777

How the Correct MTU Is Signaled in RSVP | 777

Determining an Outgoing MTU Value | 778

MTU Signaling in RSVP Limitations | 778

RSVP Configuration | 779

Minimum RSVP Configuration | 780

Configuring RSVP and MPLS | 781

- Example: Configuring RSVP and MPLS | 782

Configuring RSVP Interfaces | 782

- Configuring RSVP Refresh Reduction | 783

- Configuring the RSVP Hello Interval | 785

- Configuring RSVP Authentication | 786

- Configuring the Bandwidth Subscription for Class Types | 786

- Configuring the RSVP Update Threshold on an Interface | 786

- Configuring RSVP for Unnumbered Interfaces | 788

Configuring RSVP Node-ID Hellos | 788

Example: Configuring RSVP-Signaled LSPs | 789

Example: Configuring RSVP Automatic Mesh | 794

Configuring Hello Acknowledgments for Nonsession RSVP Neighbors | 798

Switching LSPs Away from a Network Node | 799

Configuring RSVP Setup Protection | 800

Configuring Load Balancing Across RSVP LSPs | 801

Configuring RSVP Automatic Mesh | 802

Configuring Timers for RSVP Refresh Messages	803
Preempting RSVP Sessions	804
Configuring MTU Signaling in RSVP	804
Enabling MTU Signaling in RSVP	805
Enabling Packet Fragmentation	805
Configuring Ultimate-Hop Popping for LSPs	806
Configuring RSVP to Pop the Label on the Ultimate-Hop Router	810
Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs	810
Tracing RSVP Protocol Traffic	811
Examples: Tracing RSVP Protocol Traffic	812
RSVP Graceful Restart	815
RSVP Graceful Restart Terminology	815
RSVP Graceful Restart Operation	816
Processing the Restart Cap Object	817
Configuring RSVP Graceful Restart	817
Enabling Graceful Restart for All Routing Protocols	818
Disabling Graceful Restart for RSVP	818
Disabling RSVP Helper Mode	818
Configuring the Maximum Helper Recovery Time	819
Configuring the Maximum Helper Restart Time	819
RSVP LSP Tunnels Overview	819
Example: RSVP LSP Tunnel Configuration	821
Verifying Your Work	838
Configuring Link Management Protocol Peers	845
Configuring Link Management Protocol Traffic Engineering Links	846
Configuring Peer Interfaces in OSPF and RSVP	846
Defining Label-Switched Paths for the FA-LSP	847
Establishing FA-LSP Path Information	848

Option: Tearing Down RSVP LSPs Gracefully | 848

LDP | 850

LDP Overview | 850

LDP Introduction | 850

Understanding the LDP Signaling Protocol | 851

Example: Configuring LDP-Signaled LSPs | 851

Junos OS LDP Protocol Implementation | 854

LDP Operation | 855

LDP Message Types | 855

Discovery Messages | 856

Session Messages | 856

Advertisement Messages | 856

Notification Messages | 856

Tunneling LDP LSPs in RSVP LSPs | 857

Tunneling LDP LSPs in RSVP LSPs Overview | 857

Benefits of Tunneling LDP LSPs in RSVP LSPs | 857

Label Operations | 858

LDP Session Protection | 859

LDP Native IPv6 Support Overview | 860

Longest Match Support for LDP Overview | 861

LDP Configuration | 861

Minimum LDP Configuration | 863

Enabling and Disabling LDP | 863

Configuring the LDP Timer for Hello Messages | 864

Configuring the LDP Timer for Link Hello Messages | 864

Configuring the LDP Timer for Targeted Hello Messages | 864

Configuring the Delay Before LDP Neighbors Are Considered Down | 865

Configuring the LDP Hold Time for Link Hello Messages | 865

Configuring the LDP Hold Time for Targeted Hello Messages | 866

Enabling Strict Targeted Hello Messages for LDP | 866

Configuring the Interval for LDP Keepalive Messages | 866

Configuring the LDP Keepalive Timeout	867
Configuring Longest Match for LDP	867
Example: Configuring Longest Match for LDP	868
Configuring LDP Route Preferences	887
LDP Graceful Restart	887
Configuring LDP Graceful Restart	888
Enabling Graceful Restart	889
Disabling LDP Graceful Restart or Helper Mode	889
Configuring Reconnect Time	890
Configuring Recovery Time and Maximum Recovery Time	890
Filtering Inbound LDP Label Bindings	891
Examples: Filtering Inbound LDP Label Bindings	892
Filtering Outbound LDP Label Bindings	894
Examples: Filtering Outbound LDP Label Bindings	895
Specifying the Transport Address Used by LDP	896
Control Transport Address Used for Targeted-LDP Session	897
Benefits of Controlling Transport Address Used for Targeted-LDP Session	897
Targeted-LDP Transport Address Overview	897
Transport Address Preference	897
Troubleshooting Transport Address Configuration	898
Configuring the Prefixes Advertised into LDP from the Routing Table	899
Example: Configuring the Prefixes Advertised into LDP	900
Configuring FEC Deaggregation	900
Configuring Policers for LDP FECs	901
Configuring LDP IPv4 FEC Filtering	902
Configuring BFD for LDP LSPs	903
Configuring ECMP-Aware BFD for LDP LSPs	906
Configuring a Failure Action for the BFD Session on an LDP LSP	907
Configuring the Holddown Interval for the BFD Session	908
Configuring LDP Link Protection	908
Example: Configuring LDP Link Protection	910
LDP Link Protection Overview	910
Example: Configuring LDP Link Protection	929

Understanding Multicast-Only Fast Reroute | 940

- PIM Functionality | 942

- Multipoint LDP Functionality | 943

- Packet Forwarding | 944

- Limitations and Caveats | 945

Configuring Multicast-Only Fast Reroute | 946

Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain | 949

Example: Configuring LDP Downstream on Demand | 971

Configuring LDP Native IPv6 Support | 977

Example: Configuring LDP Native IPv6 Support | 979

Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs | 996

- Understanding Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs | 996

- Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs | 1006

LDP Mapping Server for Interoperability of Segment Routing with LDP Overview | 1033

- Interoperability of Segment Routing with LDP Using OSPF | 1033

- Interoperability of Segment Routing with LDP Using ISIS | 1035

Configuring Miscellaneous LDP Properties | 1038

- Configuring LDP to Use the IGP Route Metric | 1038

- Preventing Addition of Ingress Routes to the inet.0 Routing Table | 1039

- Multiple-Instance LDP and Carrier-of-Carriers VPNs | 1039

- Configuring MPLS and LDP to Pop the Label on the Ultimate-Hop Router | 1039

- Enabling LDP over RSVP-Established LSPs | 1040

- Enabling LDP over RSVP-Established LSPs in Heterogeneous Networks | 1040

- Configuring the TCP MD5 Signature for LDP Sessions | 1041

- Configuring LDP Session Protection | 1043

- Disabling SNMP Traps for LDP | 1043

- Configuring LDP Synchronization with the IGP on LDP Links | 1043

- Configuring LDP Synchronization with the IGP on the Router | 1044

- Configuring the Label Withdrawal Timer | 1044

- Ignoring the LDP Subnet Check | 1045

Configuring LDP LSP Traceroute | 1045

Collecting LDP Statistics | 1046

- LDP Statistics Output | 1047

- Disabling LDP Statistics on the Penultimate-Hop Router | 1048

LDP Statistics Limitations | 1048

Tracing LDP Protocol Traffic | 1049

Tracing LDP Protocol Traffic at the Protocol and Routing Instance Levels | 1049

Tracing LDP Protocol Traffic Within FECs | 1050

Examples: Tracing LDP Protocol Traffic | 1051

MPLS Traffic Engineering

Configuring MPLS Traffic Engineering | 1055

MPLS Traffic Engineering Configuration | 1055

MPLS and Traffic Engineering | 1056

MPLS Traffic Engineering and Signaling Protocols Overview | 1056

Traffic Engineering Capabilities | 1057

Components of Traffic Engineering | 1057

Configuring Traffic Engineering for LSPs | 1058

Using LSPs for Both BGP and IGP Traffic Forwarding | 1058

Using LSPs for Forwarding in Virtual Private Networks | 1059

Using RSVP and LDP Routes for Forwarding but Not Route Selection | 1059

Advertising the LSP Metric in Summary LSAs | 1060

Enabling Interarea Traffic Engineering | 1061

Enabling Inter-AS Traffic Engineering for LSPs | 1062

Inter-AS Traffic Engineering Requirements | 1062

Inter-AS Traffic Engineering Limitations | 1063

Configuring OSPF Passive TE Mode | 1063

Packet Forwarding Component | 1064

Packet Forwarding Based on Label Swapping | 1065

How a Packet Traverses an MPLS Backbone | 1065

Information Distribution Component | 1066

Path Selection Component | 1066

Signaling Component | 1067

Offline Path Planning and Analysis | 1067

Flexible LSP Calculation and Configuration | 1067

Link-State Distribution Using BGP Overview | 1068

Role of an Interior Gateway Protocol | 1069

Limitations of an Interior Gateway Protocol | 1069

Need for Spanning Link-State Distribution	1070
Using BGP as a Solution	1070
Supported and Unsupported Features	1076
BGP Link-State Extensions for Source Packet Routing in Networking (SPRING)	1077
Verifying NLRI Node Learned Through BGP with OSPF as IGP	1080
Verifying the Prefix NLRI Learned Through BGP with OSPF as IGP	1081
Example: Configuring Link State Distribution Using BGP	1082
Configuring Link State Distribution Using BGP	1105
Improving Traffic Engineering Database Accuracy with RSVP PathErr Messages	1108
PathErr Messages	1109
Identifying the Problem Link	1109
Configuring the Router to Improve Traffic Engineering Database Accuracy	1110
DiffServ-Aware Traffic Engineering Configuration	1111
DiffServ-Aware Traffic Engineering Introduction	1111
DiffServ-Aware Traffic Engineering Terminology	1111
DiffServ-Aware Traffic Engineering Features	1112
Configuring Link Down Notification for Optics Options Alarm or Warning	1113
DiffServ-Aware Traffic Engineered LSPs Overview	1113
DiffServ-Aware Traffic Engineered LSPs Operation	1114
Configuring Routers for DiffServ-Aware Traffic Engineering	1115
Configuring the Bandwidth Model	1116
Configuring Traffic Engineering Classes	1117
Configuring Class of Service for DiffServ-Aware Traffic Engineering	1119
Configuring LSPs for DiffServ-Aware Traffic Engineering	1119
Configuring Class of Service for the Interfaces	1120
Configuring IGP	1120
Configuring Traffic-Engineered LSPs	1121
Configuring Policing for LSPs	1121
Configuring Fast Reroute for Traffic-Engineered LSPs	1122

MPLS Transport Profile

Operation, Administration, and Maintenance (OAM) for MPLS | 1124

MPLS OAM Configuration | 1124

Configuring the MPLS Transport Profile for OAM | 1124

MPLS Transport Profile Overview | 1124

Example: Configuring the MPLS Transport Profile for OAM | 1125

Configuring OAM Ingress Policies for LDP | 1141

Tracing MPLS and LSP Packets and Operations | 1142

MPLS Pseudowires | 1144

MPLS Pseudowires Configuration | 1144

Ethernet Pseudowire Overview | 1144

Example: Ethernet Pseudowire Base Configuration | 1145

Pseudowire Overview for ACX Series Universal Metro Routers | 1149

Understanding Multisegment Pseudowire for FEC 129 | 1150

Understanding Multisegment Pseudowire | 1150

Using FEC 129 for Multisegment Pseudowire | 1152

Establishing a Multisegment Pseudowire Overview | 1152

Pseudowire Status Support for Multisegment Pseudowire | 1153

Pseudowire TLV Support for MS-PW | 1154

Supported and Unsupported Features | 1154

Example: Configuring a Multisegment Pseudowire | 1155

MPLS Stitching For Virtual Machine Connection | 1201

When Would I Use Stitching? | 1202

How Does MPLS Stitching Work? | 1202

How Do I Configure Stitching? | 1203

Which Switches Support Stitching? | 1203

Q&A | 1203

TDM Pseudowires Overview | 1203

Example: TDM Pseudowire Base Configuration | 1204

Configuring Load Balancing for Ethernet Pseudowires | 1208

Configuring Load Balancing Based on MAC Addresses | 1210

Class-of-Service (CoS) for MPLS | 1212

MPLS Class-of-Service Configuration | 1212

Configuring Class of Service for MPLS LSPs | 1213

Class of Service for MPLS Overview | 1213

Configuring the MPLS CoS Values | 1213

Rewriting IEEE 802.1p Packet Headers with the MPLS CoS Value | 1216

Configuring MPLS Rewrite Rules | 1216

Rewriting the EXP Bits of All Three Labels of an Outgoing Packet | 1216

Rewriting MPLS and IPv4 Packet Headers | 1217

Configuring CoS Bits for an MPLS Network | 1218

Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS | 1218

Configuring CoS | 1219

Configuring an LSP Policer | 1220

Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect | 1221

Configuring CoS | 1221

Configuring an LSP Policer | 1222

Configuring CoS on Provider Switches of an MPLS Network | 1223

Understanding Using CoS with MPLS Networks on EX Series Switches | 1224

EXP Classifiers and EXP rewrite Rules | 1224

Guidelines for Using CoS Classifiers on CCCs | 1225

Using CoS Classifiers with IP over MPLS | 1225

Setting CoS Bits in an MPLS Header | 1226

EXP Rewrite Rules | 1227

Policer | 1227

Schedulers | 1228

Example: Combining CoS with MPLS on EX Series Switches | 1228

Understanding CoS MPLS EXP Classifiers and Rewrite Rules | 1243

EXP Classifiers | 1244

EXP Rewrite Rules | 1246

Schedulers | 1246

Configuring Rewrite Rules for MPLS EXP Classifiers | 1247

Configuring CoS Bits for an MPLS Network | 1249

Configuring a Global MPLS EXP Classifier | 1250

Generalized MPLS (GMPLS) | 1251

GMPLS Configuration | 1251

Introduction to GMPLS | 1251

GMPLS Terms and Acronyms | 1253

GMPLS Operation | 1253

GMPLS and OSPF | 1254

GMPLS and CSPF | 1254

GMPLS Features | 1255

Configuring MPLS Paths for GMPLS | 1255

Tracing LMP Traffic | 1256

Configuring MPLS LSPs for GMPLS | 1257

Configuring the Encoding Type | 1257

Configuring the GPID | 1258

Configuring the Signal Bandwidth Type | 1258

Configuring GMPLS Bidirectional LSPs | 1259

Allowing Nonpacket GMPLS LSPs to Establish Paths Through Routers Running Junos OS | 1259

Gracefully Tearing Down GMPLS LSPs | 1260

Temporarily Deleting GMPLS LSPs | 1260

Permanently Deleting GMPLS LSPs | 1260

Configuring the Graceful Deletion Timeout Interval | 1261

GMPLS RSVP-TE VLAN LSP Signaling Overview | 1261

Understanding GMPLS RSVP-TE Signaling | 1262

Need for GMPLS RSVP-TE VLAN LSP Signaling | 1262

GMPLS RSVP-TE VLAN LSP Signaling Functionality | 1264

LSP Hierarchy with GMPLS RSVP-TE VLAN LSP | 1264

Path Specification for GMPLS RSVP-TE VLAN LSP | 1264

GMPLS RSVP-TE VLAN LSP Configuration | 1265

Associated Bidirectional Packet LSP | 1266

Make-Before-Break for Associated Bidirectional Packet and GMPLS RSVP-TE VLAN LSP | 1266

Supported and Unsupported Features | 1267

Example: Configuring GMPLS RSVP-TE VLAN LSP Signaling | 1268

MPLS VPNs and Circuits

CCC, TCC, and Layer 2.5 Switching | 1297

CCC, TCC, and Layer 2.5 Switching Configuration | 1297

TCC and Layer 2.5 Switching Overview | 1298

Configuring VLAN TCC Encapsulation | 1298

Configuring Translation Cross-Connect Interface Switching | 1300

CCC Overview | 1302

Understanding Carrier-of-Carriers VPNs | 1303

Internet Service Provider as the Customer | 1305

VPN Service Provider as the Customer | 1305

Understanding Interprovider and Carrier-of-Carriers VPNs | 1305

Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit | 1307

VLAN CCC Encapsulation on Transport Side of Pseudowire Client Logical Interfaces Overview | 1310

Pseudowire Configuration from Access Node | 1310

Pseudowire Configuration from Aggregation Node | 1311

Transmitting Nonstandard BPDUs | 1313

TCC Overview | 1313

Configuring Layer 2 Switching Cross-Connects Using CCC | 1314

Configuring the CCC Encapsulation for Layer 2 Switching Cross-Connects | 1315

Configuring the CCC Connection for Layer 2 Switching Cross-Connects | 1320

Configuring MPLS for Layer 2 Switching Cross-Connects | 1320

Example: Configuring a Layer 2 Switching Cross-Connect | 1321

Configuring Layer 2 Switching Cross-Connect on ACX5440 | 1323

Configuring MPLS LSP Tunnel Cross-Connects Using CCC | 1324

Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects | 1325

Configuring the CCC Connection for LSP Tunnel Cross-Connects | 1327

Example: Configuring an LSP Tunnel Cross-Connect | 1327

Configuring TCC | 1329

Configuring the Encapsulation for Layer 2 Switching TCCs | 1329

Configuring the Connection for Layer 2 Switching TCCs | 1333

Configuring MPLS for Layer 2 Switching TCCs | 1334

CCC and TCC Graceful Restart | 1335

- Configuring CCC and TCC Graceful Restart | 1335
- Configuring an MPLS-Based VLAN CCC Using the Connection Method (CLI Procedure) | 1336
- Configuring CCC Switching for Point-to-Multipoint LSPs | 1338
 - Configuring the Point-to-Multipoint LSP Switch on Ingress PE Routers | 1339
 - Configuring Local Receivers on a Point-to-Multipoint CCC LSP Switch on Ingress PE Routers | 1339
 - Configuring the Point-to-Multipoint LSP Switch on Egress PE Routers | 1339
- Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN (CLI Procedure) | 1340

MPLS for Software Defined Networking (SDN)

Path Computatoin Element Protocol (PCEP) | 1347

- PCEP Configuration | 1347
 - PCEP Overview | 1347
 - Support of the Path Computation Element Protocol for RSVP-TE Overview | 1349
 - Understanding MPLS RSVP-TE | 1349
 - Current MPLS RSVP-TE Limitations | 1351
 - Use of an External Path Computing Entity | 1352
 - Components of External Path Computing | 1353
 - Interaction Between a PCE and a PCC Using PCEP | 1355
 - LSP Behavior with External Computing | 1358
 - Configuration Statements Supported for External Computing | 1360
 - PCE-Controlled LSP Protection | 1360
 - PCE-Controlled LSP ERO | 1360
 - PCE-Controlled Point-to-Multipoint RSVP-TE LSPs | 1361
 - PCE-Initiated Point-to-Point LSPs | 1362
 - PCE-Initiated Bypass LSP | 1363
 - PCE-Initiated Point-to-Multipoint LSPs | 1364
 - Auto-Bandwidth and PCE-Controlled LSP | 1364
 - TCP-MD5 Authentication for PCEP Sessions | 1364
 - Impact of Client-Side PCE Implementation on Network Performance | 1366
- Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE | 1367
- Example: Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support of PCE-Initiated Point-to-Point LSPs | 1384
- Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support of PCE-Initiated Point-to-Point LSPs | 1395

Example: Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support for PCE-Controlled Point-to-Multipoint LSPs | **1399**

Understanding Path Computation Element Protocol for MPLS RSVP-TE with Support for PCE-Initiated Point-to-Multipoint LSPs | **1420**

Benefits of PCE-Initiated Point-to-Multipoint LSPs | **1420**

Signaling of PCE-Initiated Point-to-Multipoint LSPs | **1420**

Behavior of PCE-Initiated Point-to-Multipoint LSPs After PCEP Session Failure | **1421**

Configuring PCE-Initiated Point-to-Multipoint LSP Capability | **1421**

Supported and Unsupported Features for PCE-Initiated Point-to-Multipoint LSPs | **1421**

Mapping PCE-initiated Point-To-Multipoint LSPs to MVPN | **1422**

How to Configure Segment Routing for the Path Computation Element Protocol | **1424**

Segment Routing for the Path Computation Element Protocol Overview | **1424**

Static Segment Routing Label Switched Path | **1432**

Understanding Static Segment Routing LSP in MPLS Networks | **1432**

Example: Configuring Static Segment Routing Label Switched Path | **1457**

Enabling Distributed CSPF for Segment Routing LSPs | **1476**

Distributed CSPF Computation Constraints | **1477**

Distributed CSPF Computation Algorithm | **1477**

Distributed CSPF Computation Database | **1478**

Configuring Distributed CSPF Computation Constraints | **1478**

Distributed CSPF Computation | **1480**

Interaction Between Distributed CSPF Computation and SRTE Features | **1480**

Distributed CSPF Computation Sample Configurations | **1481**

Example: Configuring CoS-Based Forwarding and Policy-Based Routing For SR-TE LSPs | **1483**

CoS-Based Forwarding and Policy-Based Routing For SR-TE LSPs Overview | **1483**

Configure CoS-Based Forwarding and Policy-Based Routing for SR-TE LSPs | **1484**

MPLS Troubleshooting

Troubleshooting MPLS | **1495**

Troubleshooting MPLS | **1495**

Verify MPLS Interfaces | **1496**

Verify the MPLS Configuration | **1498**

Checking the MPLS Layer | **1501**

Verify the LSP | **1503**

Verify the LSP Route on the Transit Router | **1507**

Verify the LSP Route on the Ingress Router	1509
Verify MPLS Labels with the traceroute Command	1511
Verify MPLS Labels with the ping Command	1512
Take Appropriate Action	1514
Verify the LSP Again	1515
Verify That Node-Link Protection Is Up	1519
Verify That Link Protection Is Up	1526
Verify One-to-One Backup	1531
Verify That the Primary Path Is Operational	1539
Verify That the Secondary Path Is Established	1541
Verifying the Physical Layer	1544
Verify the LSP	1545
Verify Router Connection	1547
Verify Interfaces	1548
Take Appropriate Action	1549
Verify the LSP Again	1550
Checking the Data Link Layer	1552
Verify the LSP	1554
Verify Interfaces	1555
Take Appropriate Action	1560
Verify the LSP Again	1561
Verifying the IP and IGP Layers	1566
Verifying the IP Layer	1568
Verify the LSP	1569
Verify IP Addressing	1570
Verify Neighbors or Adjacencies at the IP Layer	1572
Take Appropriate Action	1577
Verify the LSP Again	1578
Verify the LSP Again	1582
Checking the RSVP Layer	1585
Verify the LSP	1587
Verify RSVP Sessions	1589
Verify RSVP Neighbors	1592
Verify RSVP Interfaces	1593

Verify the RSVP Protocol Configuration | 1595

Take Appropriate Action | 1596

Verify the LSP Again | 1598

Determining LSP Statistics | 1602

Verifying LSP Use in Your Network | 1604

Verifying an LSP on the Ingress Router | 1605

Verifying an LSP on a Transit Router | 1606

Verify That Load Balancing Is Working | 1608

Verify the Operation of Uneven Bandwidth Load Balancing | 1612

Use the traceroute Command to Verify MPLS Labels | 1614

Troubleshooting GMPLS and GRE Tunnel | 1615

Determining LSP Status | 1638

Check the Status of the LSP | 1639

Display Extensive Status About the LSP | 1640

Checking That RSVP Path Messages Are Sent and Received | 1644

Configuration Statements

MPLS Configuration Statements | 1649

abstract-hop | 1656

adaptive | 1658

adjust-interval | 1659

adjust-threshold | 1660

adjust-threshold-absolute | 1661

adjust-threshold-activate-bandwidth | 1662

adjust-threshold-overflow-limit | 1663

adjust-threshold-underflow-limit | 1664

admin-down | 1665

admin-group (for Interfaces) | 1666

admin-group (for LSPs) | 1667

admin-group-extended | 1668

admin-groups | 1670

admin-groups-extended | 1671

admin-groups-extended-range | 1673

advertise-mode (MPLS) | 1675

advertisement-hold-time | **1676**

allow-fragmentation | **1677**

always-mark-connection-protection-tlv | **1678**

associate-backup-pe-groups | **1679**

associate-lsp | **1680**

auto-bandwidth (MPLS Tunnel) | **1681**

auto-bandwidth (MPLS Statistics) | **1683**

auto-policing | **1684**

backup-pe-group | **1685**

bandwidth (Fast Reroute, Signaled, and Multiclass LSPs) | **1686**

bandwidth (Static LSP) | **1688**

bandwidth-model | **1689**

bandwidth-percent | **1690**

bfd-liveness-detection (Protocols MPLS) | **1691**

bfd-liveness-detection (LSP) | **1693**

class-of-service (Protocols MPLS) | **1695**

compute-options | **1696**

compute-profile | **1697**

connections (MPLS) | **1699**

constituent-list | **1700**

container-label-switched-path | **1701**

corouted-bidirectional | **1702**

corouted-bidirectional-passive | **1703**

credibility | **1704**

database | **1706**

delay (querier) | **1707**

delay (responder) | **1708**

description (Protocols MPLS) | **1709**

description (Protocols Layer 2 VPN) | **1710**

deselect-on-bandwidth-failure | **1711**

diffserv-te | **1712**

disable (Protocols MPLS) | **1713**

dual-transport | **1714**

dynamic (Source Packet Routing) | **1715**

dynamic-tunnels | **1717**

egress-protection (MPLS) | **1719**

encapsulation-type (Layer 2 VPNs) | **1721**

encoding-type | **1723**

entropy-label | **1724**

entropy-label | **1725**

ethernet-vlan (Protocols Link Management) | **1726**

ether-pseudowire | **1727**

exclude (for Administrative Groups) | **1728**

exclude (for Fast Reroute) | **1729**

exclude-srlg | **1730**

exp | **1731**

expand-loose-hop | **1732**

explicit-null (Protocols MPLS) | **1733**

export (MPLS Traffic engineering database) | **1734**

failure-action (Protocols MPLS) | **1735**

family | **1736**

family mpls | **1737**

fast-reroute (Protocols MPLS) | **1741**

fate-sharing | **1742**

forwarding-rib | **1744**

forwarding-table | **1745**

from (Protocols MPLS) | **1746**

gpip | **1747**

gre (Routing Options) | **1749**

hop-limit | **1750**

import (MPLS Traffic Engineering Database) | **1752**

ip-tunnel-rpf-check | **1754**

ipv4 (Family MPLS) | **1756**

ipv6 (Family MPLS) | **1758**

ip-version (Family MPLS) | **1759**

include-all (for Administrative Groups) | **1760**

include-all (for Fast Reroute) | **1761**

include-any (for Administrative Groups) | **1762**

include-any (for Fast Reroute) | 1763

ingress (LSP) | 1764

install (Protocols MPLS) | 1766

ingress-policy | 1769

interface (Protocols MPLS) | 1770

interface (MPLS) | 1771

inter-domain | 1772

ip-tunnel-rpf-check | 1773

ipv6-tunneling | 1774

label-switched-path (Protocols MPLS) | 1775

label-switched-path | 1781

label-switched-path-template (Container LSP) | 1782

ldp-tunneling | 1783

least-fill | 1783

link-protection (Dynamic LSPs) | 1784

link-protection (Static LSPs) | 1785

load-balance-label-capability | 1786

log-updown (Protocols MPLS) | 1787

longest-match | 1789

loss (querier) | 1790

loss (responder) | 1791

loss-delay (querier) | 1792

lsp-attributes | 1793

lsping-channel-type | 1794

l2vpn | 1795

maximum-bandwidth (Protocols MPLS) | 1798

maximum-helper-recovery-time | 1799

maximum-helper-restart-time (RSVP) | 1800

maximum-labels | 1801

minimum-bandwidth-adjust-interval | 1802

minimum-bandwidth-adjust-threshold-change | 1803

minimum-bandwidth-adjust-threshold-value | 1804

metric (Protocols MPLS) | 1805

minimum-bandwidth | 1806

monitor-bandwidth | **1807**

most-fill | **1807**

mpls (Protocols) | **1808**

mpls | **1809**

mpls-tp-mode | **1812**

mtu-signaling | **1813**

neighbor (Protocols Layer 2 Circuit) | **1814**

next-hop (Protocols MPLS) | **1816**

no-bfd-triggered-local-repair | **1817**

no-cspf | **1818**

no-decrement-ttl | **1820**

graceful-restart (Enabling Globally) | **1822**

helper-disable (Multiple Protocols) | **1824**

no-install-to-address | **1825**

no-load-balance-label-capability | **1826**

no-mcast-replication | **1827**

no-propagate-ttl | **1828**

no-transit-statistics | **1829**

no-trap | **1830**

node-protection (Static LSP) | **1831**

normalization | **1832**

oam (Protocols MPLS) | **1834**

optimize-adaptive-teardown | **1837**

optimize-aggressive | **1838**

optimize-hold-dead-delay | **1839**

optimize-switchover-delay | **1840**

optimize-timer (Protocols MPLS) | **1841**

p2mp (Protocols MPLS) | **1843**

p2mp-lsp-next-hop | **1844**

path (Protocols MPLS) | **1845**

path | **1847**

path-mtu | **1848**

per-prefix-label | **1849**

performance-monitoring (Protocols MPLS) | **1851**

policing (Protocols MPLS) | 1853
policing | 1854
policy-multipath | 1855
policy-statement | 1857
pop | 1863
pop-and-forward (Protocols MPLS) | 1864
preference (Protocols MPLS) | 1865
primary (Protocols MPLS) | 1867
primary | 1868
priority (Protocols MPLS) | 1869
protection-revert-time | 1870
push | 1871
random | 1872
record | 1873
remote-interface-switch | 1874
remote-site-id | 1876
retry-limit | 1877
retry-timer | 1878
revert-timer | 1879
revert-timer | 1880
resignal-minimum-bandwidth | 1881
resolution-map | 1882
responder (performance-monitoring) | 1883
rpf-check-policy (Routing Options) | 1884
rsvp-error-hold-time | 1885
sampling (Protocols MPLS) | 1886
sbfd | 1888
secondary (Protocols MPLS) | 1889
secondary | 1891
segment | 1892
segment-list | 1894
select | 1899
signal-bandwidth | 1900
signaling | 1901

site (Layer 2 Circuits) | 1902
site-identifier (Layer 2 Circuits) | 1903
smart-optimize-timer | 1904
soft-preemption (Protocols MPLS) | 1905
source-routing-path | 1906
source-routing-path-template | 1909
splitting-merging | 1911
spring-te (Dynamic Tunnels) | 1913
srgb-label-range | 1914
srlg | 1915
srlg-cost | 1916
srlg-value | 1917
standby | 1918
standby | 1919
static-label-switched-path | 1920
statistics (Protocols MPLS) | 1922
swap | 1924
switch-away-lsps | 1925
switching-type | 1926
sync-active-path-bandwidth | 1927
te-class-matrix | 1929
to | 1931
traceoptions (Protocols MPLS) | 1932
traffic-class (delay) | 1935
traffic-class (loss) | 1937
traffic-class (loss-delay) | 1939
traffic-engineering (Protocols MPLS) | 1941
traffic-engineering | 1943
traffic-engineering (Protocols BGP) | 1944
transit-lsp-association | 1946
ultimate-hop-popping | 1947

vrf-table-label | 1949

RSVP Configuration Statements | 1951

admin-group | 1953

aggregate (Protocols RSVP) | 1954

authentication-key (Protocols RSVP) | 1956

bandwidth (Protocols RSVP) | 1957

bypass (Signaled LSP) | 1959

bypass (Static LSP) | 1961

chained-composite-next-hop | 1962

class-of-service (Protocols RSVP) | 1965

destination-networks | 1966

devices | 1967

disable (Protocols RSVP) | 1968

dynamic-bidirectional-transport | 1969

fast-reroute (Protocols RSVP) | 1970

graceful-deletion-timeout | 1971

graceful-restart (Protocols RSVP) | 1972

hello-acknowledgements | 1973

hello-interval (Protocols RSVP) | 1974

hop-limit | 1975

interface (Protocols RSVP) | 1977

keep-multiplier | 1979

label-switched-path-template (Multicast) | 1981

link-protection (RSVP) | 1983

load-balance (Protocols RSVP) | 1985

max-bypasses | 1986

no-local-reversion | 1987

node-hello | 1989

no-adjacency-down-notification (Protocols IS-IS) | 1991

no-authentication-check (Protocols RSVP) | 1992

no-cspf (Protocols RSVP) | 1993

no-interface-hello | 1994

no-neighbor-down-notification | 1995

no-node-id-subobject | 1996
no-p2mp-sublsp | 1997
no-enhanced-frr-bypass (Protocols RSVP) | 1998
node-link-protection (Protocols MPLS) | 1999
optimize-timer (Protocols RSVP) | 2000
path (Protocols RSVP) | 2001
peer-interface (Protocols RSVP) | 2002
pop-and-forward (Protocols RSVP) | 2003
preemption | 2004
priority (Protocols RSVP) | 2006
refresh-time | 2007
reliable | 2008
rsvp | 2009
rsvp-te (Routing Options) | 2010
setup-protection | 2011
soft-preemption (Protocols RSVP) | 2012
static-label-switched-path | 2013
subscription | 2015
traceoptions (Protocols RSVP) | 2017
transit | 2020
tunnel-services (RSVP) | 2022
ultimate-hop-popping | 2023
update-threshold | 2025

LDP Configuration Statements | 2027

allow-subnet-mismatch | 2030
authentication-algorithm | 2031
authentication-key (Protocols LDP) | 2034
authentication-key-chain (Protocols LDP) | 2035
auto-targeted-session | 2037
bfd-liveness-detection (Protocols LDP) | 2039
deaggregate | 2041
disable (Protocols LDP) | 2042
dod-request-policy | 2043

downstream-on-demand | 2044

ecmp | 2045

egress-policy | 2046

explicit-null (Protocols LDP) | 2047

export (Protocols LDP) | 2048

failure-action (Protocols LDP) | 2049

fec | 2050

graceful-restart (Protocols LDP) | 2052

hello-interval (Protocols LDP) | 2053

helper-disable (LDP) | 2054

holddown-interval | 2055

hold-time (Protocols LDP) | 2056

ignore-lsp-metrics | 2057

igp-synchronization | 2058

import (Protocols LDP) | 2059

ingress-policy | 2060

interface (Protocols LDP) | 2061

keepalive-interval | 2062

keepalive-timeout | 2063

l2-smart-policy | 2064

label-withdrawal-delay | 2065

ldp | 2066

ldp-synchronization | 2068

log-updown (Protocols LDP) | 2069

make-before-break (LDP) | 2070

mapping-server-entry | 2071

maximum-neighbor-recovery-time | 2072

mldp-inband-signalling (Protocols Multipoint LDP) | 2073

mofrr-asm-starg (Multicast-Only Fast Reroute in a PIM Domain) | 2074

mofrr-disjoint-upstream-only (Multicast-Only Fast Reroute in a PIM Domain) | 2076

mofrr-no-backup-join (Multicast-Only Fast Reroute in a PIM Domain) | 2077

mofrr-primary-path-selection-by-routing (Multicast-Only Fast Reroute) | 2078

neighbor (Protocols LDP) | 2080

no-forwarding | 2081

oam (Protocols LDP) | 2082

p2mp (Protocols LDP) | 2084

p2mp-ldp-next-hop | 2086

periodic-traceroute | 2087

policing (Protocols LDP) | 2089

policy (Multicast-Only Fast Reroute) | 2090

policy (Protocols Multipoint LDP) | 2093

preference (Protocols LDP) | 2094

prefix-segment (Routing Options) | 2095

prefix-segment-range | 2096

reconnect-time | 2098

recovery-time | 2099

session (Protocols LDP) | 2100

session-group | 2102

session-protection | 2104

source-packet-routing | 2105

stream-protection (Multicast-Only Fast Reroute) | 2106

strict-targeted-hellos | 2107

targeted-hello | 2108

traceoptions (Protocols LDP) | 2109

track-igp-metric | 2112

track-igp-metric (LSP) | 2113

traffic-statistics (Protocols LDP) | 2114

transport-address | 2116

version (BFD) | 2118

CCC and TCC Configuration Statements | 2120

connections (Circuits) | 2121

encapsulation (Logical Interface) | 2123

encapsulation | 2128

interface-switch | 2135

l2circuit-control-passthrough | 2136

lsp-switch | 2137

output-interface (CCC) | 2138

p2mp-receive-switch | 2139
p2mp-transmit-switch | 2140
remote-interface-switch | 2141

GMPLS Configuration Statements | 2142

address (Peer) | 2143
control-channel (Protocols Link Management Peer) | 2144
dead-interval | 2145
disable (GMPLS) | 2146
disable (OSPF) | 2147
export (Protocols BGP) | 2149
hello-dead-interval | 2150
hello-interval (LMP) | 2151
hello-interval (Protocols OSPF) | 2152
import | 2154
instance-type | 2156
interface (Protocols Link Management) | 2159
label-switched-path (Protocols Link Management) | 2160
link-management | 2161
lmp-control-channel | 2163
lmp-protocol | 2164
local-address (Protocols Link Management) | 2165
l2circuit | 2166
passive (Protocols Link Management) | 2168
peer (Protocols LMP) | 2169
peer-interface (Protocols OSPF) | 2170
remote-address (for LMP Control Channel) | 2171
remote-address (for LMP Traffic Engineering) | 2172
remote-id | 2173
retransmission-interval | 2174
retransmit-interval (OSPF) | 2175
retry-limit (Protocols Link Management) | 2177
route-distinguisher | 2178
te-link | 2182

traceoptions (Protocols Link Management) | 2184

transit-delay (OSPF) | 2186

upstream-label | 2188

vrf-target | 2189

PCEP Configuration Statements | 2191

pcep | 2192

delegation-cleanup-timeout | 2193

delegation-priority | 2195

destination-ipv4-address | 2196

destination-port | 2197

label-switched-path-template | 2198

lsp-cleanup-timer | 2199

lsp-external-controller | 2201

max-unknown-messages | 2202

max-unknown-requests | 2203

message-rate-limit | 2204

pce | 2205

pce-group (PCE) | 2208

pce-group (Protocols PCEP) | 2209

pce-type | 2210

querier (performance-monitoring) | 2211

traceoptions (PCE) | 2213

traceoptions (Protocols PCEP) | 2215

update-rate-limit | 2217

Operational Commands

MPLS Operational Commands | 2219

clear mpls lsp | 2221

clear mpls container-lsp | 2223

clear performance-monitoring mpls lsp | 2225

monitor mpls delay rsvp | 2226

monitor mpls loss rsvp | 2232

monitor mpls loss-delay rsvp | 2238

ping mpls bgp | 2243

ping mpls lsp-end-point | 2246

ping mpls l2circuit | 2249

ping mpls l2vpn | 2252

ping mpls l3vpn | 2255

request mpls container-lsp | 2258

request mpls lsp adjust-autobandwidth | 2260

show connections | 2262

show dynamic-tunnels database | 2266

show link-management | 2271

show link-management peer | 2275

show link-management routing | 2278

show link-management statistics | 2282

show link-management te-link | 2285

show mpls abstract-hop-membership | 2288

show mpls admin-groups | 2290

show mpls association | 2292

show mpls call-admission-control | 2294

show mpls container-lsp | 2297

show mpls context-identifier | 2306

show mpls correlation label | 2309

show mpls correlation nexthop-id | 2310

show mpls cspf | 2312

show mpls diffserv-te | 2315

show mpls interface | 2317

show mpls egress-protection | 2319

show mpls interface | 2322

show mpls label usage | 2325

show mpls label usage label-range | 2329

show mpls lsp | 2332

show mpls lsp abstract-computation | 2358

show mpls lsp autobandwidth | 2361

show mpls path | 2364

show mpls srlg | 2366

show mpls static-lsp | 2368
show performance-monitoring mpls lsp | 2372
show route forwarding-table | 2380
show route table | 2391
show ted database | 2447
show ted link | 2459
show ted protocol | 2464
traceroute mpls bgp | 2466
transit (Chained Composite Next Hops) | 2470

RSVP Operational Commands | 2473

clear rsvp session | 2474
clear rsvp statistics | 2476
monitor label-switched-path | 2478
ping mpls rsvp | 2482
show rsvp interface | 2489
show rsvp neighbor | 2497
show rsvp route-session-id | 2503
show rsvp pop-and-forward | 2505
show rsvp session | 2508
show rsvp session | 2523
show rsvp statistics | 2529
show rsvp version | 2537
traceroute mpls rsvp | 2541

LDP Operational Commands | 2546

clear ldp neighbor | 2547
clear ldp session | 2548
clear ldp statistics | 2550
ping mpls ldp | 2551
ping mpls segment routing ospf | 2554
ping mpls segment routing isis | 2557
show ldp database | 2560
show ldp fec-filters | 2571

show ldp interface | 2573
show ldp neighbor | 2575
show ldp overview | 2578
show ldp p2mp tunnel | 2583
show ldp path | 2584
show ldp route | 2586
show ldp session | 2597
show ldp statistics | 2605
show ldp traffic-statistics | 2611
show security keychain | 2616
traceroute mpls ldp | 2619
traceroute mpls segment-routing ospf | 2624
traceroute mpls segment-routing isis | 2628

CCC and TCC Operational Commands | 2632

show connections | 2633
show route ccc | 2637
show route forwarding-table | 2639

PCEP Operational Commands | 2663

clear path-computation-client statistics | 2664
request path-computation-client active-pce | 2666
show isis spring sensor info | 2667
show path-computation-client active-pce | 2670
show path-computation-client lsp | 2675
show path-computation-client statistics | 2681
show path-computation-client status | 2689
show spring-traffic-engineering | 2692

About the Documentation

IN THIS SECTION

- Documentation and Release Notes | xlv
- Using the Examples in This Manual | xlv
- Documentation Conventions | xlviii
- Documentation Feedback | li
- Requesting Technical Support | li

Use this guide to understand the MPLS technology and MPLS applications functions, and to configure MPLS and other feature modules deploying the MPLS applications.

Documentation and Release Notes

To obtain the most current version of all Juniper Networks[®] technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xsl;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {  
    file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]  
user@host# edit system scripts  
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]  
user@host# load merge relative /var/tmp/ex-script-snippet.conf  
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

Documentation Conventions

[Table 1 on page xlix](#) defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xlix defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none">• To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level.• The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
; (semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		


Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

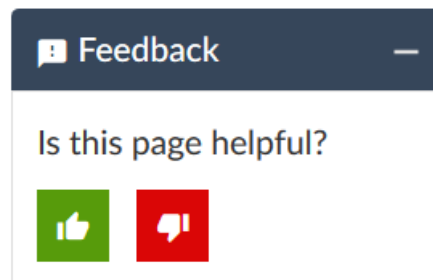

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are

covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.

1

PART

Overview

Understanding MPLS | 2

Supported Standards | 27

Understanding MPLS

IN THIS CHAPTER

- [MPLS Overview | 2](#)

MPLS Overview

IN THIS SECTION

- [MPLS Overview | 2](#)
- [TTL Processing on Incoming MPLS Packets | 6](#)
- [Link-Layer Support in MPLS | 8](#)
- [MPLS Overview for ACX Series Universal Metro Routers | 8](#)
- [MPLS for EX Series Switches Overview | 9](#)
- [MPLS Feature Support on QFX Series and EX4600 Switches | 11](#)
- [MPLS Limitations on QFX Series and EX4600 Switches | 22](#)

MPLS Overview

IN THIS SECTION

- [Why Use MPLS? | 3](#)
- [Why Not Use MPLS? | 4](#)
- [How Do I Configure MPLS? | 4](#)
- [What Does the MPLS Protocol Do? | 5](#)
- [How Does MPLS Interface to Other Protocols? | 5](#)
- [If I Have Used Cisco MPLS, What Do I Need to Know? | 6](#)

Multiprotocol Label Switching (MPLS) is a protocol that uses labels to route packets instead of using IP addresses. In a traditional network, each switch performs an IP routing lookup, determines a next-hop based on its routing table, and then forwards a packet to that next-hop. With MPLS, only the first device does a routing lookup, and, instead of finding the next-hop, finds the ultimate destination along with a path to that destination. The path of an MPLS packet is called a label-switched path (LSP).

MPLS applies one or more labels to a packet so it can follow the LSP to the destination. Each switch pops off its label and sends the packet to the next switch label in the sequence.

The Junos OS includes everything you need to configure MPLS. You do not need to install any additional programs or protocols. MPLS is supported on switches with a subset of the commands supported on routers. The Junos MPLS-configured switches can interact with each other and with Junos MPLS-configured routers.

MPLS has the following advantages over conventional packet forwarding:

- Packets arriving on different ports can be assigned different labels.
- A packet arriving at a particular provider edge (PE) switch can be assigned a label that is different from that of the same packet entering the network at a different PE switch. As a result, forwarding decisions that depend on the ingress PE switch can be easily made.
- Sometimes it is desirable to force a packet to follow a particular route that is explicitly chosen at or before the time the packet enters the network, rather than letting it follow the route chosen by the normal dynamic routing algorithm as the packet travels through the network. In MPLS, a label can be used to represent the route so that the packet need not carry the identity of the explicit route.

This topic describes:

Why Use MPLS?

MPLS reduces the use of the forwarding table by using labels instead of the forwarding table. The size of forwarding tables on a switch are limited by silicon and using exact matching for forwarding to destination devices is cheaper than buying more sophisticated hardware. In addition, MPLS allows you to control where and how traffic is routed on your network – this is called traffic engineering.

Some reasons to use MPLS instead of another switching solution are:

- MPLS can connect different technologies that would not otherwise be compatible---service providers have this compatibility issue when connecting clients with different autonomous systems in their networks. In addition, MPLS has a feature called Fast Reroute that provides alternate backups for paths – this prevents network degradation in case of a switch failure.
- • Other IP-based encapsulations such as Generic Route Encapsulation (GRE) or Virtual Extensible Local Area Networks (VXLAN) support only two levels of hierarchy, one for the transport tunnel and one piece of metadata. Using virtual servers means that you need multiple hierarchy levels. For example, one label is needed for top-of-rack (ToR), one label for the egress port that identifies the server, and one for the virtual server.

Why Not Use MPLS?

There are no protocols to auto-discover MPLS enabled nodes. MPLS protocol just exchanges label values for an LSP. They do not create the LSPs.

You must build the MPLS mesh, switch by switch. We recommend using scripts for this repetitive process.

MPLS hides suboptimal topologies from BGP where multiple exits may exist for the same route.

Large LSPs are limited by the circuits they traverse. You can work around this by creating multiple, parallel LSPs.

How Do I Configure MPLS?

There are three types of switches you must set up for MPLS:

- Label Edge Router/Switch (LER) or ingress node to the MPLS network. This switch encapsulates the packets.
- Label Switching Routers/Switches (LSR). One or more switches that transfer MPLS packets in the MPLS network.
- Egress router/switch is the final MPLS device that removes the last label before packets leave the MPLS network.

Service providers (SP) use the term provider router (P) for a backbone router/switch doing label switching only. The customer-facing router at the SP is called a provider edge router (PE). Each customer needs a customer edge router (CE) to communicate with the PE. Customer facing routers typically can terminate IP addresses, L3VPNs, L2VPNs/ pseudowires, and VPLS before packets are transferred to the CE.

Configure the MPLS LER (Ingress) Switch and the Egress Switch

To configure MPLS, you must first create one or more named paths on the ingress and egress routers. For each path, you can specify some or all transit routers in the path, or you can leave it empty. See [“Configuring the Ingress and Egress Router Addresses for LSPs” on page 484](#) and [“Configuring the Connection Between Ingress and Egress Routers” on page 492](#).

Configure LSRs for MPLS

Configure one or more MPLS LSRs by following these steps:

1. Configure interfaces on each switch to transmit and receive MPLS packets using the usual interface command with MPLS appended. For example:

```
[edit interfaces ge-0/0/0 unit 0] family mpls;
```

2. Add those same interfaces under [edit protocols mpls]. For example:

```
[edit protocols mpls]
```

```
interface ge-0/0/0;
```

3. Configure the interfaces on each switch to handle MPLS labels with a protocol. For example, for LDP:

```
[edit protocols ldp]
  Interface ge-0/0/0.0;
```

To watch a demo of these configurations, see <https://www.youtube.com/watch?v=xegWBCUJ4tE>.

What Does the MPLS Protocol Do?

Multiprotocol Label Switching (MPLS) is an Internet Engineering Task Force (IETF)-specified framework that provides for the designation, routing, forwarding and switching of traffic flows through the network. In addition, MPLS:

- Specifies mechanisms to manage traffic flows of various granularities, such as flows between different hardware, machines, or even flows between different applications.
- Remains independent of the layer-2 and layer-3 protocols.
- Provides a means to map IP addresses to simple, fixed-length labels used by different packet-forwarding and packet-switching technologies.
- Interfaces to existing routing protocols, such as Resource ReSerVation Protocol (RSVP) and Open Shortest PathFirst (OSPF).
- Supports IP, ATM, and Frame Relay layer-2 protocols.
- Uses these additional technologies:
 - FRR: MPLS Fast Reroute improves convergence during a failure by mapping out alternate LSPs in advance.
 - Link Protection/ Next-hop backup: A bypass LSP is created for every possible link failure.
 - Node Protection/ Next-hop backup: A bypass LSP is created for every possible switch (node) failure.
 - VPLS: Creates Ethernet multipoint switching service over MPLS and emulates functions of an L2 switch.
 - L3VPN: IP-based VPN customers get individual virtual routing domains.

How Does MPLS Interface to Other Protocols?

Some of the protocols that work with MPLS are:

- RSVP-TE: Resource Reservation Protocol - Traffic Engineering reserves bandwidth for LSPs.
- LDP: Label Distribution Protocol is the defacto protocol used for distribution of MPLS packets and is usually configured to tunnel inside RSVP-TE.

- **IGP:** Interior Gateway Protocol is a routing protocol. Edge routers (PE-routers) run BGP between themselves to exchange external (customer) prefixes. Edge and core (P) routers run IGP (usually OSPF or IS-IS) to find optimum path toward BGP next hops. P- and PE-routers use LDP to exchange labels for known IP prefixes (including BGP next hops). LDP indirectly builds end-to-end LSPs across the network core.
- **BGP:** Border Gateway Protocol (BGP) allows policy-based routing to take place, using TCP as its transport protocol on port 179 to establish connections. The Junos OS routing protocol software includes BGP version 4. You do not configure BGP---configuring interfaces with MPLS and LDP/RSVP establishes the labels and the ability to transmit packets. BGP automatically determines the routes packets take.
- **OSPF and ISIS:** These protocols are used for routing between the MPLS PE and CE. Open Shortest Path First (OSPF) is perhaps the most widely used interior gateway protocol (IGP) in large enterprise networks. IS-IS, another link-state dynamic routing protocol, is more common in large service provider networks. Assuming you're running L3VPN to your customers, on the SP edge between the PE and the CE you can run any protocol that your platform supports as a VRF aware instance.

If I Have Used Cisco MPLS, What Do I Need to Know?

Cisco Networks and Juniper Networks use different MPLS terminology.

What Cisco Calls:	Juniper Calls:
affinities	admin-groups
autoroute announce	TE shortcuts
forwarding adjacency	LSP-advertise
tunnel	LSP
make-before-break	adaptive
application-window	adjust-interval
shared risk link groups	fate-sharing

TTL Processing on Incoming MPLS Packets

The flow chart on [Figure 1 on page 7](#) illustrates TTL processing on incoming MPLS packets. On a transit LSR or an egress LER, MPLS pops one or more labels and can push one or more labels. The incoming TTL of the packet is determined by the configured TTL processing tunnel model.

When all of the following conditions are met, the incoming TTL is set to the TTL value found in the immediate inner header:


- The outer label is popped as opposed to being swapped
- The TTL processing model is configured to pipe
- The inner header is MPLS or IP

If any of those conditions is not met, then the incoming TTL is set to the TTL value found in the outermost label. In all cases, the TTL values of any further inner labels are ignored.

When an IP packet is exposed after MPLS pops all the labels that should be popped, MPLS passes the packet to IP for further processing, including TTL checking. When the uniform tunnel model for TTL processing is in effect, MPLS sets the TTL value of the IP packet to the incoming TTL value that was just set. In other words, the TTL value is copied from the outermost label to the IP packet. When the pipe model for TTL processing is in effect, the TTL value in the IP header is left unchanged.

If an IP packet is not exposed by the label popping, then MPLS performs the TTL validation. If the incoming TTL is less than 2, the packet is dropped. If innermost packet is IP, an ICMP packet is built and sent. If the TTL does not expire and the packet needs to be sent out, the outgoing TTL is determined by the rules for outgoing MPLS packets.

Figure 1: TTL Processing on Incoming MPLS Packets

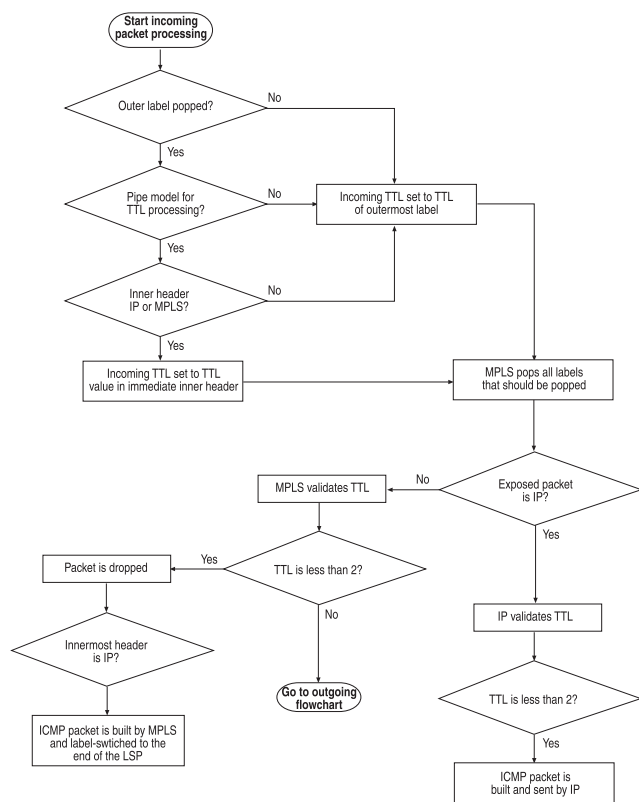

9/1/13/89

SEE ALSO

Link-Layer Support in MPLS

MPLS supports the following link-layer protocols, which are all supported in the Junos OS MPLS implementation:

- Point-to-Point Protocol (PPP)—Protocol ID 0x0281, Network Control Protocol (NCP) protocol ID 0x8281.
- Ethernet/Cisco High-level Data Link Control (HDLC)—Ethernet type 0x8847.
- Asynchronous Transfer Mode (ATM)—Subnetwork attachment point encoded (SNAP-encoded) Ethernet type 0x8847. Support is included for both point-to-point mode or nonbroadcast multiaccess (NBMA) mode. Support is not included for encoding MPLS labels as part of ATM virtual path identifier/virtual circuit identifier (VPI/VCI).
- Frame Relay—SNAP-encoded, Ethernet type 0x8847. Support is not included for encoding MPLS labels as part of Frame Relay data-link connection identifier (DLCI).
- Generic routing encapsulation (GRE) tunnel—Ethernet type 0x8847.

MPLS Overview for ACX Series Universal Metro Routers

Multiprotocol Label Switching (MPLS) provides a mechanism for engineering network traffic patterns that is independent of routing tables by assigning short labels to network packets, which describe how to forward them through the network. MPLS is independent of any routing protocol and can be used for unicast packets. On the ACX Series routers, the following MPLS features are supported:

- The configuration of a label-switching router (LSR) for processing of label-switched packets and forwarding of packets based on their labels.
- The configuration of an ingress label edge router (LER) where IP packets are encapsulated within MPLS packets and forwarded to the MPLS domain, and as an egress LER where MPLS packets are decapsulated and the IP packets contained within the MPLS packets are forwarded using information in the IP forwarding table. Configuring MPLS on the LER is the same as configuring an LSR.
- Uniform and pipe mode configuration providing different types of visibility in the MPLS network. Uniform mode makes all the nodes that a label-switched path (LSP) traverses visible to nodes outside the LSP tunnel. Uniform mode is the default. Pipe mode makes only the LSP ingress and egress points visible to nodes outside the LSP tunnel. Pipe mode acts like a circuit and must be enabled with the global **no-propagate-ttl** statement at the **[edit protocols mpls]** hierarchy level on each router that is in the path of the LSP. The **no-propagate-ttl** statement disables time-to-live (TTL) propagation at the router level and affects all RSVP-signalled or LDP-signalled LSPs. Only the global configuration of TTL propagation is supported.

- Exception packet handling of IP packets not processed by the normal packet flow through the Packet Forwarding Engine. The following types of exception packet handling are supported:
 - Router alert
 - Time-to-live (TTL) expiry value
 - Virtual circuit connection verification (VCCV)
- LSP hot standby for secondary paths configuration to maintain a path in a hot-standby state enabling swift cut over to the secondary path when downstream routers on the current active path indicate connectivity problems.
- Redundancy for a label-switched path (LSP) path with the configuration of fast reroute.
- Configuration of link protection to ensure that traffic traversing a specific interface from one router to another can continue to reach its destination in the event that this interface fails.

MPLS for EX Series Switches Overview

IN THIS SECTION

- [Benefits of MPLS | 10](#)
- [Additional Benefits of MPLS and Traffic Engineering | 10](#)

You can configure Junos OS MPLS on Juniper Networks EX Series Ethernet Switches to increase transport efficiency in the network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as voice over IP (VoIP) and other business-critical functions.

NOTE: MPLS configurations on EX Series switches are compatible with configurations on other Juniper Networks devices that support MPLS and MPLS-based circuit cross-connect (CCC). MPLS features available on the switches depend upon which switch you are using. For information about the software features on the EX Series switches, see [Feature Explorer](#).

NOTE: MPLS configurations on the switches do not support:

- Q-in-Q tunneling

This topic describes:

Benefits of MPLS

MPLS has the following advantages over conventional packet forwarding:

- Packets arriving on different ports can be assigned different labels.
- A packet arriving at a particular provider edge (PE) switch can be assigned a label that is different from that of the same packet entering the network at a different PE switch. As a result, forwarding decisions that depend on the ingress PE switch can be easily made.
- Sometimes it is desirable to force a packet to follow a particular route that is explicitly chosen at or before the time the packet enters the network, rather than letting it follow the route chosen by the normal dynamic routing algorithm as the packet travels through the network. In MPLS, a label can be used to represent the route so that the packet need not carry the identity of the explicit route.

Additional Benefits of MPLS and Traffic Engineering

MPLS is the packet-forwarding component of the Junos OS traffic engineering architecture. Traffic engineering provides the capabilities to do the following:

- Route primary paths around known bottlenecks or points of congestion in the network.
- Provide precise control over how traffic is rerouted when the primary path is faced with single or multiple failures.
- Provide efficient use of available aggregate bandwidth and long-haul fiber by ensuring that certain subsets of the network are not overutilized while other subsets of the network along potential alternate paths are underutilized.
- Maximize operational efficiency.

- Enhance the traffic-oriented performance characteristics of the network by minimizing packet loss, minimizing prolonged periods of congestion, and maximizing throughput.
- Enhance statistically bound performance characteristics of the network (such as loss ratio, delay variation, and transfer delay) required to support a multiservice Internet.

MPLS Feature Support on QFX Series and EX4600 Switches

IN THIS SECTION

- Supported Features | 11

This topic describes the MPLS features that are supported on the QFX Series, EX4600, EX4650 switches. Be sure to check for any exceptions to this support in [“MPLS Limitations on QFX Series and EX4600 Switches” on page 22](#). Configuring unsupported statements on the switch does not affect its operation.

NOTE: EX4600 and EX4650 switches use the same chipset as QFX5100 switches—this is why EX Series switches are included here along with QFX Series switches. Other EX Series switches also support MPLS but with a different feature set.

Supported Features

The tables in this section lists the MPLS features that are supported on the QFX Series, EX4600, EX4650 switches, and the Junos OS release in which they were introduced. [Table 3 on page 11](#) lists the features for QFX10000 switches. [Table 4 on page 14](#) lists the features for QFX3500, QFX5100, QFX5120, QFX5110, QFX5200, QFX5210 switches. [Table 5 on page 20](#) lists the features for EX4600 and EX4650 switches.

Table 3: QFX10000 MPLS Features

Feature	QFX10002	QFX10008	QFX10016
QFX10000 standalone switch as an MPLS provider edge (PE) switch or provider switch	15.1X53-D10	15.1X53-D30	15.1X53-D60
Label edge router (LER)	15.1X53-D10	15.1X53-D30	15.1X53-D60
Label-switching router (LSR)	15.1X53-D10	15.1X53-D30	15.1X53-D60
BGP MPLS Ethernet VPN (EVPN)	17.4R1	17.4R1	17.4R1

Table 3: QFX10000 MPLS Features (continued)

Feature	QFX10002	QFX10008	QFX10016
BGP route reflectors	15.1X53-D10	15.1X53-D30	15.1X53-D60
Automatic bandwidth and dynamic label-switched path (LSP) count sizing	15.1X53-D60	15.1X53-D60, 17.2R1	15.1X53-D60, 17.2R1
BGP labeled unicast	15.1X53-D10	15.1X53-D30	15.1X53-D60
BGP link state distribution	17.1R1	17.1R1	17.1R1
Carrier-of-carriers and interprovider Layer 3 VPNs	17.1R1	17.1R1	17.1R1
Entropy labels	17.2R1	17.2R1	17.2R1
Ethernet-over-MPLS (L2 circuit)	15.1X53-D60	15.1X53-D60	15.1X53-D60
Fast reroute, one-to-one local protection and many-to-one local protection	15.1X53-D10	15.1X53-D30	15.1X53-D60
Fast reroute using detours and secondary LSP	15.1X53-D10	15.1X53-D30	15.1X53-D60
Flexible Ethernet services	17.3R1	17.3R1	17.3R1
Firewall filters	15.1X53-D30	15.1X53-D30	15.1X53-D60
RSVP graceful restart for OSPF	15.1X53-D10	15.1X53-D30	15.1X53-D60
IP-over-MPLS LSPs, both static and dynamic links	15.1X53-D10	15.1X53-D30	15.1X53-D60
IPv6 tunneling over an IPv4 network (6PE)	15.1X53-D10	15.1X53-D30	15.1X53-D60
LDP tunneling over RSVP	15.1X53-D10	15.1X53-D30	15.1X53-D60
L2 Circuit on aggregated interfaces	17.3R1	17.3R1	17.3R1
L3VPNs for both IPv4 and IPv6	15.1X53-D10	15.1X53-D30	15.1X53-D60

Table 3: QFX10000 MPLS Features (continued)

Feature	QFX10002	QFX10008	QFX10016
MPLS over integrated bridging and routing (IRB) interfaces	15.1X53-D10	15.1X53-D30	15.1X53-D60
MPLS over UDP	18.3R1	18.3R1	18.3R1
MTU signaling in RSVP	15.1X53-D10	15.1X53-D30	15.1X53-D60
Operation, Administration, and Maintenance (OAM) including ping, traceroute and Bidirectional Forwarding Detection (BFD)	15.1X53-D10	15.1X53-D30	15.1X53-D60
OSPF TE	15.1X53-D10	15.1X53-D30	15.1X53-D60
OSPFv2 as an interior gateway protocol (IGP)	15.1X53-D10	15.1X53-D30	15.1X53-D60
Path Computation Element Protocol for RSVP-TE	16.3R1	16.3R1	16.3R1
Pseudowire-over-aggregated Ethernet interfaces (core-facing interface)	15.1X53-D60 (supported only on network-to-network (NNI) interfaces)	15.1X53-D60 (supported only on NNI interfaces)	15.1X53-D60 (supported only on NNI interfaces)
RSVP support, including bandwidth allocation and traffic engineering	15.1X53-D10	15.1X53-D30	15.1X53-D60
RSVP fast reroute (FRR), including link-protection, node-link-protection, fast reroute using detours, and secondary LSP	15.1X53-D10	15.1X53-D30	15.1X53-D60
SNMP MIB support	15.1X53-D10	15.1X54-D30	15.1X53-D60
Static and dynamic LSPs	15.1X53-D10	15.1X53-D30	15.1X53-D60
Traffic engineering extensions (OSPF-TE, IS-IS-TE)	15.1X53-D10	15.1X53-D30	15.1X53-D60

Table 3: QFX10000 MPLS Features (continued)

Feature	QFX10002	QFX10008	QFX10016
Traffic engineering (TE)	15.1X53-D10	15.1X53-D30	15.1X53-D60
Automatic bandwidth allocation and RSVP bandwidth			
Dynamic bandwidth management using ingress LSP splitting and merging			
Virtual routing and forwarding (VRF) label support	15.1X53-D10	15.1X53-D30	15.1X53-D60

Table 4: QFX3500, QFX5100, QFX5110, QFX5120, QFX5200, QFX5210 MPLS Features

Feature	QFX3500	QFX5100	QFX5110	QFX5120	QFX5200	QFX5210
QFX Series standalone switches as MPLS provider edge (PE) switches or provider switches	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Label edge router (LER)	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Label-switching router (LSR)	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Automatic bandwidth allocation on LSPs	Not supported	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
BGP labeled unicast	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1

Table 4: QFX3500, QFX5100, QFX5110, QFX5120, QFX5200, QFX5210 MPLS Features (continued)

Feature	QFX3500	QFX5100	QFX5110	QFX5120	QFX5200	QFX5210
BGP link state distribution	Not supported	17.1R1	17.1R1	18.3R1	17.1R1	18.1R1
BGP route reflector	15.1X53-D10	15.1X53-D30	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Carrier-to-carrier and interprovider BGP Layer 3 VPNs	14.1X53-D15	14.1X53-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Class of service (CoS or QoS) for MPLS traffic	12.3X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Dynamic label-switched path (LSP) count sizing: TE++	Not supported	17.2R1 VC/VCF 17.2R1	17.2R1 VC/VCF 17.2R1	18.3R1	17.2R1	18.1R1
Equal-cost multipath (ECMP) at LSRs: <ul style="list-style-type: none"> • SWAP • PHP • L3VPN • L2 Circuit 	Not supported	14.1X53-D35 (Supported only on label stack. Not supported on flow label, entropy label, or ECMP label)	15.1X53-D210 (Supported only on label stack. Not supported on flow label, entropy label, or ECMP label)	18.3R1 (Supported only on label stack. Not supported on flow label, entropy label, or ECMP label)	15.1X53-D30	18.1R1
Entropy labels	Not supported	Not supported	Not supported	Not supported	Not supported	18.1R1
Bandwidth over MPLS (L2 Circuit)	14.1X53-D10	14.1X53-D10 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1

Table 4: QFX3500, QFX5100, QFX5110, QFX5120, QFX5200, QFX5210 MPLS Features (continued)

Feature	QFX3500	QFX5100	QFX5110	QFX5120	QFX5200	QFX5210
Fast reroute (FRR), one-to-one local protection and many-to-one local protection	14.1X53-D10	14.1X53-D10	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
FRR using detours and secondary LSP	Not supported	Not supported	Not supported	Not supported	Not supported	18.1R1
Firewall filters	12.3X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Flow-aware transport of pseudowires (FAT) flow labels	Not supported	Not supported	Not supported	Not supported	Not supported	18.1R1
RSVP graceful restart for OSPF	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Traffic engineering extensions (OSPF-TE, IS-IS-TE)	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
IP-over-MPLS LSPs, both static and dynamic links	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1

Table 4: QFX3500, QFX5100, QFX5110, QFX5120, QFX5200, QFX5210 MPLS Features (continued)

Feature	QFX3500	QFX5100	QFX5110	QFX5120	QFX5200	QFX5210
IPv6 tunneling over an MPLS IPv4 network (6PE)	12.3X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
IPv6 over an MPLS core network	Not supported	Not supported	Not supported	Not supported	Not supported	Not supported
LDP tunneling over RSVP	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Layer 3 VPNs for both IPv4 and IPv6	12.3X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Loop-free alternate (LFA)	Not supported	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	18.1R1	18.1R1
MPLS over integrated bridging and routing (IRB) interfaces	Not supported	14.1X53-D40	18.1R1	18.3R1	18.1R1	18.1R1
MTU signaling in RSVP	12.3X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1

Table 4: QFX3500, QFX5100, QFX5110, QFX5120, QFX5200, QFX5210 MPLS Features (continued)

Feature	QFX3500	QFX5100	QFX5110	QFX5120	QFX5200	QFX5210
Operation, Administration, and Maintenance (OAM) including MPLS ping, traceroute, and BFD	12.3X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
OSPF TE	12.3X50-D10	13.2X51-D15	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
OSPFv2 as an interior gateway protocol	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Path Computation Element Protocol for RSVP-TE	Not supported	17.4R1	17.4R1	18.3R1	17.4R1	18.1R1
Public-facing Ethernet interfaces (core-facing interface)	14.1X53-D10	14.1X53-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
RSVP automatic bandwidth	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1

Table 4: QFX3500, QFX5100, QFX5110, QFX5120, QFX5200, QFX5210 MPLS Features (continued)

Feature	QFX3500	QFX5100	QFX5110	QFX5120	QFX5200	QFX5210
RSVP fast reroute (FRR), including link-protection, node-link-protection, fast reroute using detours, and secondary LSP	14.1X53-D15	14.1X53-D15	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
RSVP-TE extensions (IS-IS and OSPF)	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
SNMP MIB support	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Static and dynamic LSPs	12.2X50-D10	13.2X51-D10 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Traffic engineering (TE) automatic bandwidth allocation on LSPs	13.1X51-D10	13.1X51-D10 VC/VCF (13.2X51-D10)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
Virtual routing and forwarding (VRF) label support	12.2X50-D10	13.2X51-D15 VC/VCF (14.1X53-D30)	15.1X53-D210	18.3R1	15.1X53-D30	18.1R1
VRF support in IRB Interfaces in a Layer 3 VPN	Not supported	17.3R1	17.3R1	18.3R1	17.3R1	18.1R1

Table 5: EX4600 and EX4650 MPLS Features

Feature	EX4600	EX4650
EX4600 and EX4650 standalone switches as MPLS provider edge (PE) switches or provider switches	14.1X53-D15	18.3R1
Label edge router (LER)	14.1X53-D15	18.3R1
Label-switching router (LSR)	14.1X53-D15	18.3R1
Automatic bandwidth allocation on LSPs	Not supported	18.3R1
BGP labeled unicast	14.1X53-D15	18.3R1
BGP link state distribution	Not supported	18.3R1
BGP route reflector	14.1X53-D15	18.3R1
Carrier-to-carrier and interprovider BGP Layer 3 VPNs	14.1X53-D15	18.3R1
Class of service (CoS or QoS) for MPLS traffic	14.1X53-D15	18.3R1
Dynamic label-switched path (LSP) count sizing: TE++	Not supported	18.3R1
Equal-cost multipath (ECMP) at LSRs: <ul style="list-style-type: none"> • SWAP • PHP • L3VPN • L2 Circuit 	Not supported	18.3R1 (Supported only on label stack. Not supported on flow label, entropy label, or ECMP label)
Entropy labels	Not supported	Not supported
Ethernet-over-MPLS (L2 Circuit)	14.1X53-D15	18.3R1
Fast reroute (FRR), one-to-one local protection and many-to-one local protection	14.1X53-D15	18.3R1

Table 5: EX4600 and EX4650 MPLS Features (*continued*)

Feature	EX4600	EX4650
FRR using detours and secondary LSP	Not supported	Not supported
Firewall filters	14.1X53-D15	18.3R1
Flow-aware transport of pseudowires (FAT) flow labels	Not supported	Not supported
RSVP graceful restart for OSPF	13.2X51-D25	18.3R1
Traffic engineering extensions (OSPF-TE, IS-IS-TE)	14.1X53-D15	18.3R1
IP-over-MPLS LSPs, both static and dynamic links	14.1X53-D15	18.3R1
IPv6 tunneling over an MPLS IPv4 network (6PE)	14.1X53-D15	18.3R1
IPv6 over an MPLS core network	Not supported	Not supported
LDP tunneling over RSVP	14.1X53-D15	18.3R1
Layer 3 VPNs for both IPv4 and IPv6	14.1X53-D15	18.3R1
Loop-free alternate (LFA)	Not supported	Not supported
MPLS over integrated bridging and routing (IRB) interfaces	Not supported	18.3R1
MTU signaling in RSVP	14.1X53-D15	18.3R1
Operation, Administration, and Maintenance (OAM) including MPLS ping, traceroute, and BFD	14.1X53-D15	18.3R1
OSPF TE	14.1X53-D15	18.3R1
OSPFv2 as an interior gateway protocol	13.2X51-D25	18.3R1

Table 5: EX4600 and EX4650 MPLS Features (continued)

Feature	EX4600	EX4650
Path Computation Element Protocol for RSVP-TE	Not supported	18.3R1
Pseudowire-over-aggregated Ethernet interfaces (core-facing interface)	14.1X53-D15	18.3R1
RSVP automatic bandwidth	14.1X53-D15	18.3R1
RSVP fast reroute (FRR), including link-protection, node-link-protection, fast reroute using detours, and secondary LSP	14.1X53-D15	18.3R1
RSVP-TE extensions (IS-IS and OSPF)	14.1X53-D15	18.3R1
SNMP MIB support	14.1X53-D15	18.3R1
Static and dynamic LSPs	14.1X53-D15	18.3R1
Traffic engineering (TE) automatic bandwidth allocation on LSPs	14.1X53-D15	18.3R1
Virtual routing and forwarding (VRF) label support	14.1X53-D15	18.3R1
VRF support in IRB Interfaces in a Layer 3 VPN	Not supported	18.3R1

MPLS Limitations on QFX Series and EX4600 Switches

IN THIS SECTION

- [MPLS Limitations on QFX10000 Switches | 23](#)
- [MPLS Limitations on EX4600, EX4650, QFX5100, QFX5110, QFX5120, QFX5200, and QFX5210 Switches | 23](#)
- [MPLS Limitations on QFX5100 Virtual Chassis and Virtual Chassis Fabric Switches | 25](#)
- [MPLS Limitations on QFX3500 Switches | 26](#)

MPLS is a fully implemented protocol on routers, while switches support a subset of the MPLS features. The limitations of each switch are listed in a separate section here, although many of the limitations are duplicates that apply to more than one switch.

MPLS Limitations on QFX10000 Switches

- Configuring an MPLS firewall filter on a switch that is deployed as an egress provider edge (PE) switch has no effect.
- Configuring the **revert-timer** statement at the **[edit protocols mpls]** hierarchy level has no effect.
- These LDP features are not supported on the QFX10000 switches:
 - LDP multipoint
 - LDP link protection
 - LDP Bidirectional Forwarding Detection (BFD)
 - LDP Operation Administration and Management (OAM)
 - LDP multicast-only fast reroute (MoFRR)
- Pseudowire-over-aggregated Ethernet interfaces on UNI are not supported.
- MPLS-over-UDP tunnels are not supported on the following:
 - MPLS TTL propagation
 - IP fragmentation at the tunnel start point
 - CoS rewrite rules and priority propagation for RSVP LSP labels (ingress tunnels only)
 - Plain IPv6
 - Multicast traffic
 - Firewall filters on tunnel start and endpoints
 - CoS tunnel endpoints

NOTE: MPLS-over-UDP tunnels are created only if corresponding RSVP-TE, LDP, or BGP-LU tunnels are not available for the destination route.

MPLS Limitations on EX4600, EX4650, QFX5100, QFX5110, QFX5120, QFX5200, and QFX5210 Switches

- MPLS support differs on the various switches. EX4600 switches support only basic MPLS functionality while the QFX5100, QFX5110, QFX5120, QFX5200, and QFX5210 switches support some of the more advanced features. See [“MPLS Feature Support on QFX Series and EX4600 Switches” on page 11](#) for details.
- On a QFX5100 switch, configuring integrated bridging and routing (IRB) interfaces on the MPLS core is implemented on the switch by using TCAM rules. This is the result of a chip limitation on the switch,

which only allows for a limited amount of TCAM space. There is 1K TCAM space is allocated for IRB. If multiple IRBs exist, make sure that you have enough available TCAM space on the switch. To check the TCAM space, see [TCAM Filter Space Allocation and Verification in QFX Devices from Junos OS 12.2x50-D20 Onward](#).

- (QFX5100, QFX5110, QFX5120, QFX5200, QFX5210, EX4600) When VLAN bridge encapsulation is enabled on a CE connected interface, the switch drops packets if both flexible Ethernet services and VLAN CCC encapsulations are configured on the same logical interface. Only one can be configured, not both. For example:

set interfaces xe-0/0/18 encapsulation flexible-ethernet-services, or set interfaces xe-0/0/18 encapsulation vlan-ccc.
- Layer 2 circuits on aggregated Ethernet (AE) interfaces are not supported on QFX5100, QFX5110, QFX5120, QFX5200, and QFX5210 switches.
- Layer 2 circuit local switching is not supported on the EX4600, EX4650, and QFX5100 switches.
- The QFX5100, QFX5110, QFX5120, QFX5200, and QFX5210 switches do not depend on the VRF match for loopback filters configured at different routing instances. Loopback filters per routing instance (such as lo0.100, lo0.103, lo0.105) are not supported and may cause unpredictable behavior. We recommend that you only apply the loopback filter (lo0.0) to the master routing instance
- On EX4600 and EX4650 switches, when loopback filters with both accept and deny terms for the same IP address are configured and if RSVP packets have that IP address in either source IP or destination IP, then those RSVP packets will be dropped even if accept terms have higher priority than deny terms. As per design, if the switch receives an RSVP packet with IP OPTION, the packet is copied to the CPU and then the original packet is dropped. Because RSVP packets are marked for drop, the accept term will not process these packets and the deny term will drop the packets.
- On a link-protected, fast reroute Layer 2 circuit, you might see a traffic convergence delay of 200 to 300 milliseconds.
- Layer 2 circuit local switching is not supported on the EX4600, EX4650, and QFX5100 switches.
- If you configure the BGP labeled unicast address family (using the **labeled-unicast** statement at the **[edit protocols bgp family inet]** hierarchy level) on a QFX Series switch or on an EX4600 switch deployed as a route reflector for BGP labeled routes, path selection will occur at the route reflector, and a single best path will be advertised. This will result in loss of BGP multipath informaton.
- Although fast reroute (FRR) on regular interfaces is supported, the **include-all** and **include-any** options for FRR are not supported. See [“Fast Reroute Overview” on page 471](#).
- FRR is not supported on MPLS over IRB interfaces.
- MPLS-based circuit cross-connects (CCC) are not supported—only circuit-based pseudowires are supported.
- Configuring link aggregation groups (LAGs) on user-to-network interface (UNI) ports for L2 circuits is not supported.

- MTU signaling in RSVP and discovery is supported in the control plane. However, this cannot be enforced in the data plane.
- With L2 circuit-based pseudowires, if multiple equal-cost RSVP LSPs are available to reach an L2 circuit neighbor, one LSP is randomly used for forwarding. Use this feature to specify LSPs for specific L2 circuit traffic to load-share the traffic in the MPLS core.
- Configuring an MPLS firewall filter on a switch that is deployed as an egress provider edge (PE) switch has no effect.
- Firewall filters and policers on **family mpls** are only supported on QFX5100 switches that act as pure label-switching routers (LSRs) in an MPLS network. A pure LSR is a transit router that switches paths solely on the incoming label's instructions. Firewall filters and policers on **family mpls** are not supported on QFX5100 ingress and egress provider edge (PE) switches. This includes switches that perform penultimate hop popping (PHP).
- Configuring the **revert-timer** statement at the **[edit protocols mpls]** hierarchy level has no effect.
- These are the hardware limitations for EX4600, EX4650, QFX5100, QFX5110, QFX5120, QFX5200, and QFX5210 switches:
 - Push of a maximum of three labels is supported in the MPLS edge switch if label swap is not done.
 - Push of a maximum of two labels is supported in the MPLS edge switch if label swap is done.
 - Pop at line rate is supported for a maximum of two labels.
 - Global label space is supported but interface-specific label space is not supported.
 - MPLS ECMP on PHY node with BOS=1 is not supported for single labels.
 - QFX Series switches with Broadcom chips do not support separate next hops for the same label with different S bits (S-0 and S-1). This includes the QFX3500, QFX3600, EX4600, QFX5100, and QFX5200 switches.
 - On EX4600, EX4650, QFX5100, QFX5110, QFX5120, QFX5200, and QFX5210 switches, the MPLS MTU command can cause unexpected behavior—this is due to SDK chipset limitations on this platform.
- These LDP features are not supported on the EX4600, EX4650, QFX5100, QFX5110, QFX5120, QFX5200, and QFX5210 switches:
 - LDP multipoint
 - LDP link protection
 - LDP Bidirectional Forwarding Detection (BFD)
 - LDP Operation Administration and Management (OAM)
 - LDP multicast-only fast reroute (MoFRR)

MPLS Limitations on QFX5100 Virtual Chassis and Virtual Chassis Fabric Switches

The following MPLS features are not supported by the QFX5100 VC and QFX5100 VCF switches:

- Next-hop LSP
- BFD including BFD triggered FRR
- L2 VPN based on BGP (See [RFC 6624](#))
- VPLS
- Extended VLAN CCC
- Pseudowire protection using Ethernet OAM
- Local switching of pseudo-wire
- Pseudowire fault detection based on VCCV
- QFX Series switches with Broadcom chipsets do not support separate next hops for the same label with different S bits (S-0 and S-1). This includes QFX3500, QFX3600, EX4600, QFX5100, and QFX5200 switches.

MPLS Limitations on QFX3500 Switches

- If you configure the BGP labeled unicast address family (using the **labeled-unicast** statement at the **[edit protocols bgp family inet]** hierarchy level) on a QFX Series switch or on an EX4600 switch deployed as a route reflector for BGP labeled routes, path selection will occur at the route reflector, and a single best path will be advertised. This will result in loss of BGP multipath information.
- Although fast reroute is supported, the **include-all** and **include-any** options for fast reroute are not supported. See [“Fast Reroute Overview” on page 471](#) for details.
- MPLS-based circuit cross-connects (CCC) are not supported—only circuit-based pseudowires are supported.
- MTU signaling in RSVP and discovery is supported in the control plane. However, this cannot be enforced in the data plane.
- With Layer 2 (L2) circuit-based pseudowires, if multiple equal-cost RSVP label-switched paths (LSPs) are available to reach a L2 circuit neighbor, one LSP is randomly used for forwarding. Use this feature to specify LSPs for specific L2 circuit traffic to load-share the traffic in the MPLS core.
- Configuring an MPLS firewall filter on a switch that is deployed as an egress provider edge (PE) switch has no effect.
- Configuring the **revert-timer** statement at the **[edit protocols mpls]** hierarchy level has no effect.

RELATED DOCUMENTATION

[Understanding MPLS Label Operations | 423](#)

[MPLS Configuration Guidelines | 37](#)

[FAQ: MPLS on EX Series Switches](#)

Supported Standards

IN THIS CHAPTER

- [Supported MPLS Standards | 27](#)

Supported MPLS Standards

IN THIS SECTION

- [Supported MPLS Standards | 27](#)
- [Supported RSVP Standards | 30](#)
- [Supported LDP Standards | 31](#)
- [DiffServ-Aware Traffic Engineering Standards | 32](#)
- [Supported GMPLS Standards | 32](#)
- [Supported PCEP Standards | 33](#)

Supported MPLS Standards

Junos OS substantially supports the following RFCs and Internet drafts, which define standards for MPLS and traffic engineering.

- RFC 2858, *Multiprotocol Extensions for BGP-4*
- RFC 3031, *Multiprotocol Label Switching Architecture*
- RFC 3032, *MPLS Label Stack Encoding*
- RFC 3140, *Per Hop Behavior Identification Codes*
- RFC 3270, *Multi-Protocol Label Switching (MPLS) Support of Differentiated Services*

Only E-LSPs are supported.

- RFC 3443, *Time To Live (TTL) Processing in Multi-Protocol Label Switching (MPLS) Networks*

- RFC 3478, *Graceful Restart Mechanism for Label Distribution Protocol*
- RFC 3906, *Calculating Interior Gateway Protocol (IGP) Routes Over Traffic Engineering Tunnels*
- RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*

Node protection in facility backup is not supported.

- RFC 4124, *Protocol Extensions for Support of Diffserv-aware MPLS Traffic Engineering*
- RFC 4182, *Removing a Restriction on the use of MPLS Explicit NULL*
- RFC 4364, *BGP/MPLS IP Virtual Private Networks (VPNs)*
- RFC 4379, *Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures*
- RFC 4385, *Pseudowire Emulation Edge-to-Edge (PWE3) Control Word for Use over an MPLS PSN.*

Supported on MX Series routers with the Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP.

- RFC 4875, *Extensions to RSVP-TE for Point-to-Multipoint TE LSPs*
- RFC 4950, *ICMP Extensions for Multiprotocol Label Switching*
- RFC 5317, *Joint Working Team (JWT) Report on MPLS Architectural Considerations for a Transport Profile*
- RFC 5586, *MPLS Generic Associated Channel*
- RFC 5654, *Requirements of an MPLS Transport Profile*

The following capabilities are supported in the Junos OS implementation of MPLS Transport Profile (MPLS-TP):

- MPLS-TP OAM can send and receive packets with GAL and G-Ach, without IP encapsulation.
- Two unidirectional RSVP LSPs between a pair of routers can be associated with each other to create an associated bidirectional LSP for binding a path for the GAL and G-Ach OAM messages. A single Bidirectional Forwarding Detection (BFD) session is established for the associated bidirectional LSP.
- RFC 5712, *MPLS Traffic Engineering Soft Preemption*
- RFC 5718, *An In-Band Data Communication Network For the MPLS Transport Profile*
- RFC 5860, *Requirements for Operations, Administration, and Maintenance (OAM) in MPLS Transport Networks*
- RFC 5884, *Bidirectional Forwarding Detection (BFD) for MPLS Label Switched Paths (LSPs)*
- RFC 5921, *A Framework for MPLS in Transport Networks*
- RFC 5950, *Network Management Framework for MPLS-based Transport Networks*
- RFC 5951, *Network Management Requirements for MPLS-based Transport Networks*
- RFC 5960, *MPLS Transport Profile Data Plane Architecture*
- RFC 6215, *MPLS Transport Profile User-to-Network and Network-to-Network Interfaces*
- RFC 6291, *Guidelines for the Use of the "OAM" Acronym in the IETF.*

- RFC 6370, *MPLS Transport Profile (MPLS-TP) Identifiers*
- RFC 6371, *Operations, Administration, and Maintenance Framework for MPLS-Based Transport Networks*.
- RFC 6372, *MPLS Transport Profile (MPLS-TP) Survivability Framework*
- RFC 6373, *MPLS-TP Control Plane Framework*
- RFC 6388, *Label Distribution Protocol Extensions for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*

Only Point-to-Multipoint LSPs are supported.

- RFC 6424, *Mechanism for Performing Label Switched Path Ping (LSP Ping) over MPLS Tunnels*
- RFC 6425, *Detecting Data-Plane Failures in Point-to-Multipoint MPLS - Extensions to LSP Ping*
- RFC 6426, *MPLS On-Demand Connectivity Verification and Route Tracing*
- RFC 6428, *Proactive Connectivity Verification, Continuity Check, and Remote Defect Indication for the MPLS Transport Profile*
- RFC 6510, *Resource Reservation Protocol (RSVP) Message Formats for Label Switched Path (LSP) Attributes Objects*
- RFC 7746, *Label Switched Path (LSP) Self-Ping*
- Internet draft draft-ietf-mpls-rsvp-te-no-php-oob-mapping-01.txt, *Non PHP behavior and Out-of-Band Mapping for RSVP-TE LSPs*

The following RFCs and Internet drafts do not define standards, but provide information about MPLS, traffic engineering, and related technologies. The IETF classifies them variously as “Experimental,” “Historic,” or “Informational.”

- RFC 2547, *BGP/MPLS VPNs*
- RFC 2702, *Requirements for Traffic Engineering Over MPLS*
- RFC 2917, *A Core MPLS IP VPN Architecture*
- RFC 3063, *MPLS Loop Prevention Mechanism*
- RFC 3208, *PGM Reliable Transport Protocol Specification*

Only the network element is supported.

- RFC 3469, *Framework for Multi-Protocol Label Switching (MPLS)-based Recovery*
- RFC 3564, *Requirements for Support of Differentiated Services-aware MPLS Traffic Engineering*
- RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*
- RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*
- Internet draft draft-martini-l2circuit-encap-mpls-11.txt, *Encapsulation Methods for Transport of Layer 2 Frames Over IP and MPLS Networks*

Junos OS differs from the Internet draft in the following ways:

- A packet with a sequence number of 0 is treated as out of sequence.
- Any packet that does not have the next incremental sequence number is considered out of sequence.
- When out-of-sequence packets arrive, the expected sequence number for the neighbor is set to the sequence number in the Layer 2 circuit control word.
- Internet draft draft-martini-l2circuit-trans-mpls-19.txt, *Transport of Layer 2 Frames Over MPLS*
- Internet draft draft-raggarwa-mpls-p2mp-te-02.txt, *Establishing Point to Multipoint MPLS TE LSPs*

The features discussed in the indicated sections of the draft are not supported:

- Nonadjacent signaling for branch LSPs (section 7.1)
- Make-before-break and fast reroute (section 9)
- LSP hierarchy using point-to-point LSPs (section 10)

Supported RSVP Standards

Junos OS substantially supports the following RFCs and Internet drafts, which define standards for RSVP.

- RFC 2205, *Resource ReSerVation Protocol (RSVP)—Version 1 Functional Specification*
- RFC 2210, *The Use of RSVP with IETF Integrated Services*
- RFC 2211, *Specification of the Controlled-Load Network Element Service*
- RFC 2212, *Specification of Guaranteed Quality of Service*
- RFC 2215, *General Characterization Parameters for Integrated Service Network Elements*
- RFC 2745, *RSVP Diagnostic Messages*
- RFC 2747, *RSVP Cryptographic Authentication* (updated by RFC 3097)
- RFC 2750, *RSVP Extensions for Policy Control* (RFC is not supported. Fully compliant with devices that support this RFC).
- RFC 2961, *RSVP Refresh Overhead Reduction Extensions*
- RFC 3097, *RSVP Cryptographic Authentication—Updated Message Type Value*
- RFC 3209, *RSVP-TE: Extensions to RSVP for LSP Tunnels*

The Null Service Object for maximum transmission unit (MTU) signaling in RSVP is not supported.

- RFC 3473, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Resource ReserVation Protocol-Traffic Engineering (RSVP-TE) Extensions*

Only Section 9, “Fault Handling,” is supported.

- RFC 3477, *Signalling Unnumbered Links in Resource ReSerVation Protocol - Traffic Engineering (RSVP-TE)*

- RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*
- RFC 4203, *OSPF Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*
(OSPF extensions can carry traffic engineering information over unnumbered links.)
- RFC 4558, *Node-ID Based Resource Reservation Protocol (RSVP) Hello: A Clarification Statement*
- RFC 4561, *Definition of a Record Route Object (RRO) Node-Id Sub-Object*
The RRO node ID subobject is for use in inter-AS link and node protection configurations.
- RFC 4875, *Extensions to RSVP-TE for Point-to-Multipoint TE LSPs*
- RFC 5420, *Encoding of Attributes for MPLS LSP Establishment Using Resource Reservation Protocol Traffic Engineering (RSVP-TE)*
Only the LSP_ATTRIBUTES object is supported.
- RFC 7570, *Label Switched Path (LSP) Attribute in the Explicit Route Object (ERO)*
- RFC 8370, *Techniques to Improve the Scalability of RSVP-TE Deployments*
- draft-ietf-mpls-ri-rsvp-frr-05, *Refresh Interval Independent FRR Facility Protection*
- draft-ietf-mpls-rsvp-shared-labels-09, *Signaling RSVP-TE tunnels on a shared MPLS forwarding plane*

The following RFCs do not define standards, but provide information about RSVP and related technologies. The IETF classifies them variously as “Experimental” or “Informational.”

- RFC 2209, *Resource ReSerVation Protocol (RSVP)—Version 1 Message Processing Rules*
- RFC 2216, *Network Element Service Specification Template*
- RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*
- RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*

Supported LDP Standards

Junos OS substantially supports the following RFCs and Internet drafts, which define standards for LDP.

- RFC 3212, *Constraint-Based LSP Setup using LDP*
- RFC 3478, *Graceful Restart Mechanism for Label Distribution Protocol*
- Internet draft draft-napierala-mpls-targeted-mldp-01.txt, *Using LDP Multipoint Extensions on Targeted LDP Sessions*

The following RFCs do not define standards, but provide information about LDP. The IETF classifies them as “Informational.”

- RFC 3215, *LDP State Machine*
- RFC 5036, *LDP Specification*

For the following features described in the indicated sections of the RFC, Junos OS supports one of the possible modes but not the others:

- Label distribution control (section 2.6.1): Ordered mode is supported, but not Independent mode.
- Label retention (section 2.6.2): Liberal mode is supported, but not Conservative mode.
- Label advertisement (section 2.6.3): Both Downstream Unsolicited mode and Downstream on Demand mode are supported.
- RFC 5283, *LDP Extension for Inter-Area Label Switched Paths (LSPs)*
- RFC 5443, *LDP IGP Synchronization*
- RFC 5561, *LDP Capabilities*
- RFC 6826, *Multipoint LDP In-Band Signaling for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*

Junos OS support limited to point-to-multipoint extensions for LDP.

DiffServ-Aware Traffic Engineering Standards

The following RFCs provide information on DiffServ-aware traffic engineering and multiclass LSPs:

- RFC 3270, *Multi-Protocol Label Switching (MPLS) Support of Differentiated Services*
- RFC 3564, *Requirements for Support of Differentiated Services-aware MPLS Traffic Engineering*
- RFC 4124, *Protocol Extensions for Support of Differentiated-Service-Aware MPLS Traffic Engineering*
- RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diff-Serv-aware MPLS Traffic Engineering*
- RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diff-Serv-aware MPLS*

These RFCs are available on the IETF website at <http://www.ietf.org/>.

Supported GMPLS Standards

Junos OS substantially supports the following RFCs and Internet drafts, which define standards for Generalized MPLS (GMPLS).

- RFC 3471, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Functional Description*

Only the following features are supported:

- Bidirectional LSPs (upstream label only)
- Control channel separation
- Generalized label (suggested label only)
- Generalized label request (bandwidth encoding only)

- RFC 3473, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Resource ReserVation Protocol-Traffic Engineering (RSVP-TE) Extensions*

Only Section 9, "Fault Handling," is supported.

- RFC 4202, *Routing Extensions in Support of Generalized Multi-Protocol Label Switching*

Only interface switching is supported.

- RFC 4206, *Label Switched Paths (LSP) Hierarchy with Generalized Multi-Protocol Label Switching (GMPLS) Traffic Engineering (TE)*

- Internet draft draft-ietf-ccamp-gmpls-rsvp-te-ason-02.txt, *Generalized MPLS (GMPLS) RSVP-TE Signalling in support of Automatically Switched Optical Network (ASON)* (expires January 2005)

- Internet draft draft-ietf-ccamp-gmpls-sonet-sdh-08.txt, *Generalized Multi-Protocol Label Switching Extensions for SONET and SDH Control*

Only S,U,K,L,M-format labels and SONET traffic parameters are supported.

- Internet draft draft-ietf-ccamp-lmp-10.txt, *Link Management Protocol (LMP)*

- Internet draft draft-ietf-ccamp-ospf-gmpls-extensions-12.txt, *OSPF Extensions in Support of Generalized Multi-Protocol Label Switching*

The following sub-TLV types for the Link type, link, value (TLV) are not supported:

- Link Local/Remote Identifiers (type 11)
- Link Protection Type (type 14)
- Shared Risk Link Group (SRLG) (type 16)

The features described in Section 2 of the draft, "Implications on Graceful Restart," are also not supported.

The Interface Switching Capability Descriptor (type 15) sub-TLV type is implemented, but only for packet switching.

- Internet draft draft-ietf-mpls-bundle-04.txt, *Link Bundling in MPLS Traffic Engineering*

Supported PCEP Standards

Junos OS substantially supports the following RFCs and Internet drafts, which define standards for PCEP.

- RFC 5440, *Path Computation Element (PCE) Communication Protocol (PCEP)—Stateful PCE*
- RFC 8231, *Path Computation Element Communication Protocol (PCEP)—Extensions for Stateful PCE*
- RFC 8281, *Path Computation Element Communication Protocol (PCEP)—Extensions PCE-Initiated LSP Setup in a Stateful PCE Model*
- Internet draft-ietf-pce-stateful-pce-07.txt, *PCEP Extensions for Stateful PCE*

- Internet draft-crabbe-pce-pce-initiated-lsp-03.txt, *PCEP Extensions for PCE-initiated LSP Setup in a Stateful PCE Model*
- Internet draft-ietf-pce-segment-routing-06.txt, *PCEP Extensions for Segment Routing*
- Internet draft-ietf-pce-stateful-pce-p2mp-02.txt, *Path Computation Element (PCE) Protocol Extensions for Stateful PCE usage for Point-to-Multipoint Traffic Engineering Label Switched Paths*
- Internet draft-draft-cbrt-pce-stateful-local-protection-01, *PCEP Extensions for RSVP-TE Local-Protection with PCE-Stateful* (excluding support for bypass LSP mapping)
- Internet draft-draft-ietf-pce-pcep-flowspec-05, *PCEP Extension for Flow Specification*

The current implementation of this feature does not implement the following sections of the draft:

- Section 3.1.2—Advertising PCE capabilities in IGP
- Section 3.2—PCReq and PCRep message
- Section 7—Most of the flow specifications, except route distinguisher and IPv4 Multicast Flow specifications, are not supported.

RELATED DOCUMENTATION

| *Accessing Standards Documents on the Internet*

2

PART

MPLS Configuration

Configuring MPLS | 36

Configuring MPLS Tunnels | 79

Configuring MPLS

IN THIS CHAPTER

- Basic MPLS Configuration | 36
- MPLS on Provider and Provider Edge Devices Configuration | 61

Basic MPLS Configuration

IN THIS SECTION

- MPLS Configuration Overview | 36
- MPLS Configuration Guidelines | 37
- Configuring MPLS | 38
- Example: Enabling MPLS | 38
- Example: Configuring MPLS on EX8200 and EX4500 Switches | 41

MPLS Configuration Overview

When you first install Junos OS on your device, MPLS is disabled by default. You must explicitly configure your device to allow MPLS traffic to pass through. Complete the following steps for all devices in your MPLS network that are running Junos OS.

To enable MPLS:

1. Delete all configured security services from the device. If you do not complete this step, you will get a commit failure. See *Example: Deleting Security Services*.
2. Enable MPLS on the device. See [“Example: Enabling MPLS” on page 38](#).
3. Commit the configuration.

4. Reboot the device.
5. Configure MPLS features such as traffic engineering, VPNs, and VPLS. See:
 - [MPLS Traffic Engineering and Signaling Protocols Overview on page 1056](#)
 - *MPLS VPN Overview*
 - *CLNS Overview*
 - *VPLS Overview*



CAUTION: When packet forwarding mode is changed to MPLS, all flow-based security features are deactivated, and the device performs packet-based processing only. Flow-based services such as security policies, zones, NAT, ALGs, chassis clustering, screens, firewall authentication, and IPsec VPNs are unavailable on the device. However, MPLS can be enabled in flow-based packet forwarding mode for selected traffic using firewall filters.

MPLS Configuration Guidelines

When configuring MPLS on QFX Series devices or on EX4600, note that the number of IP prefixes supported depends on the specific platform being used. See the scale specifications in the data sheet of your device for additional information.

- We recommend the following:
 - If your ingress provider edge (PE) switch needs to support more than 8000 external IP prefixes, use a larger capacity device as an ingress PE switch.
 - If you use a switch as a route reflector for BGP labeled routes, use it as a dedicated route reflector (that is, the switch must not participate in managing data traffic).
 - If you use a switch as a PE switch or as a route reflector for BGP labeled routes, configure routing policies on the PE switch and the route reflector to filter external IP routes from the routing table.

The configuration example for a routing policy named `fib_policy` (at the **[edit policy-options]** and **[edit routing-options]** hierarchy levels) to filter BGP labeled routes from the `inet.0` routing table is given below:

```
user@switch# show policy-options
policy-statement fib_policy {
  from {
    protocol bgp;
    rib inet.0;
```

```

    }
    then reject;
  }

```

```

user@switch# show routing-options
forwarding-table {
    export fib_policy;
}

```

- Packet fragmentation using the **allow-fragmentation** statement at the **[edit protocols mpls path-mtu]** hierarchy level is not supported on QFX Series devices or on the EX4600 switch. Therefore, you must ensure that the maximum transmission unit (MTU) values configured on every MPLS interface is sufficient to handle MPLS packets. The packets whose size exceeds the MTU value of an interface will be dropped.

Configuring MPLS

You must also configure MPLS for a Layer 2 cross-connect to work. The following is a minimal MPLS configuration:

```

[edit]
interfaces {
    interface-name {
        unit logical-unit-number;
    }
}
protocols {
    mpls {
        interface all;
    }
}

```

Example: Enabling MPLS

This example shows how to enable MPLS for packet-based processing. It also shows how to enable the MPLS family and MPLS process on all of the transit interfaces in the network.

NOTE: When MPLS is enabled, all flow-based security features are deactivated and the device performs packet-based processing. Flow-based services such as security policies, zones, NAT, ALGs, chassis clustering, screens, firewall authentication, IP packets, and IPsec VPNs are unavailable on the device.

Before changing from flow mode to packet mode, you must remove all security policies remaining under flow mode. To prevent management connection loss, you must bind the management interface to zones and enable host-inbound traffic to prevent the device from losing connectivity.

For information about configuring zones, see *Security Policies User Guide for Security Devices*.

Requirements

Before you begin, delete all configured security services. See *Example: Deleting Security Services*.

Overview

The instructions in this topic describe how to enable MPLS on the device. You must enable MPLS on the device before including a device running Junos OS in an MPLS network.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```
set security forwarding-options family mpls mode packet-based
set interfaces ge-1/0/0 unit 0 family mpls
set protocols mpls ge-1/0/0 unit 0
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode*.

To enable MPLS:

1. Enable MPLS for packet-based processing.

```
[edit security forwarding-options]
user@host# set family mpls mode packet-based
```

2. Enable the MPLS family on each transit interface that you want to include in the MPLS network.

```
[edit interfaces]
user@host# set interfaces ge-1/0/0 unit 0 family mpls
```

3. Enable the MPLS process on all of the transit interfaces in the MPLS network.

```
[edit protocols mpls]
user@host# set interface ge-1/0/0 unit 0
```

Results

From configuration mode, confirm your configuration by entering the **show security forwarding-options** command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

NOTE: If you enable MPLS for packet-based processing by using the command **set security forward-option family mpls mode packet**, the mode will not change immediately and the system will display the following messages:

warning: Reboot may required when try reset flow inet mode

warning: Reboot may required when try reset mpls flow mode please check security flow status for detail.

You need to reboot your device for the configuration to take effect.



CAUTION: If you disable MPLS and switch back to using the security services (flow-based processing), the mode will not change immediately and the system will display warning messages instructing you to restart your device. You must reboot your device for the configuration to take effect. This will also result in management sessions being reset and transit traffic getting interrupted.

```
[edit]
user@host# show security forwarding-options
family {
  mpls {
    mode packet-based;
  }
}
```


If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Verifying MPLS Is Enabled at the Protocols Level | 41](#)
- [Verifying MPLS Is Enabled at the Interfaces Level | 41](#)

Confirm that the configuration is working properly.

Verifying MPLS Is Enabled at the Protocols Level

Purpose

Verify that MPLS is enabled at the protocols level.

Action

From operational mode, enter the **show protocols** command.

Verifying MPLS Is Enabled at the Interfaces Level

Purpose

Verify that MPLS is enabled at the interfaces level.

Action

From operational mode, enter the **show interfaces** command.

Example: Configuring MPLS on EX8200 and EX4500 Switches

IN THIS SECTION

- [Requirements | 42](#)
- [Overview and Topology | 42](#)
- [Configuring the Local PE Switch | 47](#)
- [Configuring the Remote PE Switch | 51](#)
- [Configuring the Provider Switch | 54](#)
- [Verification | 57](#)

You can configure MPLS on switches to increase transport efficiency in your network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as voice over IP (VoIP) and other business-critical functions.

To implement MPLS on the switches, you must configure two provider edge (PE) switches—an ingress PE switch and an egress PE switch— and at least one provider (transit) switch. You can configure the customer edge (CE) interfaces on the PE switches of the MPLS network as either circuit cross-connect (CCC) or IP (**family inet**) interfaces.

This example shows how to configure an MPLS tunnel using a simple interface as a CCC:

NOTE: This example shows how to configure MPLS using a simple interface as a CCC. For information on configuring a tagged VLAN interface as a CCC, see [“Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN \(CLI Procedure\)” on page 1340](#) or [“Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit” on page 1307](#).

Requirements

This example uses the following hardware and software components:

- Junos OS Release 10.1 or later for switches
- Three EX Series switches

Before you begin configuring MPLS, ensure that you have configured the routing protocol (OSPF or IS-IS) on the core interface and the loopback interface on all the switches. This example includes the configuration of OSPF on all the switches. For information on configuring IS-IS as the routing protocol, see the [Junos OS Routing Protocols Configuration Guide](#).

Overview and Topology

This example includes an ingress or local PE switch, an egress or remote PE switch, and one provider switch. It includes CCCs that tie the customer edge interface of the local PE switch (PE-1) to the customer edge interface of the remote PE switch (PE-2). It also describes how to configure the core interfaces of the PE switches and the provider switch to support the transmission of the MPLS packets. In this example, the core interfaces that connect the local PE switch and the provider switch are individual interfaces, while the core interfaces that connect the remote PE switch and the provider switch are aggregated Ethernet interfaces.

NOTE:

- Core interfaces cannot be tagged VLAN interfaces.
- Core interfaces can be aggregated Ethernet interfaces. This example includes a LAG between the provider switch and the remote PE switch because this type of configuration is another option you can implement. For information on configuring LAGs, see *Configuring Aggregated Ethernet Links (CLI Procedure)*.

Figure 2 on page 43 shows the topology used in this example.

Figure 2: Configuring MPLS on EX Series Switches

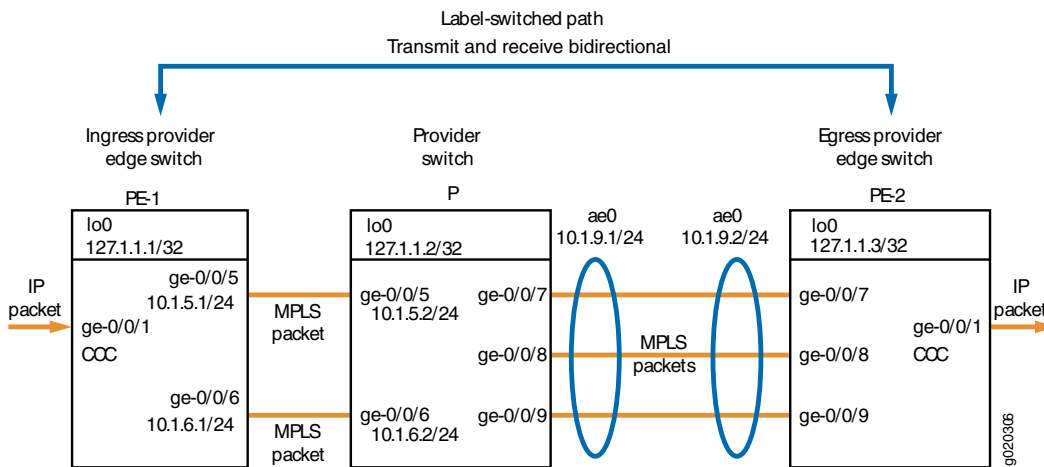


Table 6 on page 43 shows the MPLS configuration components used for the ingress PE switch in this example.

Table 6: Components of the Ingress PE Switch in the Topology for MPLS with Interface-Based CCC

Property	Settings	Description
Local PE switch hardware	EX Series switch	PE-1
Loopback address	lo0 127.1.1.1/32	Identifies PE-1 for interswitch communications.
Routing protocol	ospf traffic-engineering	Indicates that this switch is using OSPF as the routing protocol and that traffic engineering is enabled.

Table 6: Components of the Ingress PE Switch in the Topology for MPLS with Interface-Based CCC (*continued*)

Property	Settings	Description
MPLS protocol and definition of label-switched path	mpls label-switched-path lsp_to_pe2_ge1 to 127.1.13	Indicates that this PE switch is using the MPLS protocol with the specified LSP to reach the other PE switch (specified by the loopback address). The statement must also specify the core interfaces to be used for MPLS traffic.
RSVP	rsvp	Indicates that this switch is using RSVP. The statement must specify the loopback address and the core interfaces that will be used for the RSVP session.
Interface family	family inet family mpls family ccc	The logical units of the core interfaces are configured to belong to both family inet and family mpls . The logical unit of the customer edge interface is configured to belong to family ccc .
Customer edge interface	ge-0/0/1	Interface that connects this network to devices outside the network.
Core interfaces	ge-0/0/5.0 and ge-0/0/6.0 with IP addresses 10.1.5.1/24 and 10.1.6.1/24	Interfaces that connect to other switches within the MPLS network.
CCC definition	connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/1.0 transmit-lsp lsp_to_pe2_ge1 receive-lsp lsp_to_pe1_ge1	Associates the circuit cross-connect (CCC), ge-0/0/1 , with the LSPs that have been defined on the local and remote PE switches.

Table 7 on page 45 shows the MPLS configuration components used for the egress PE switch in this example.

Table 7: Components of the Egress PE Switch in the Topology for MPLS with Interface-Based CCC

Property	Settings	Description
Remote PE switch hardware	EX Series switch	PE-2
Loopback address	lo0 127.1.1.3/32	Identifies PE-2 for interswitch communications.
Routing protocol	ospf traffic-engineering	Indicates that this switch is using OSPF as the routing protocol and that traffic engineering is enabled.
MPLS protocol and definition of label-switched path	mpls label-switched-path lsp_to_pe1_ge1 to 127.1.1.1	Indicates that this PE switch is using the MPLS protocol with the specified label-switched path (LSP) to reach the other PE switch. The statement must also specify the core interfaces to be used for MPLS traffic.
RSVP	rsvp	Indicates that this switch is using RSVP. The statement must specify the loopback address and the core interfaces that will be used for the RSVP session.
Interface family	family inet family mpls family ccc	The logical unit of the core interface is configured to belong to both family inet and family mpls . The logical unit of the customer edge interface is configured to belong to family ccc .
Customer edge interface	ge-0/0/1	Interface that connects this network to devices outside the network.
Core interface	ae0 with IP address 10.1.9.2/24	Aggregated Ethernet interface on PE-2 that connects to aggregated Ethernet interface ae0 of the provider switch and belongs to family mpls .

Table 7: Components of the Egress PE Switch in the Topology for MPLS with Interface-Based CCC (continued)

Property	Settings	Description
CCC definition	connections remote-interface-switch ge-1-to-pe1 interface ge-0/0/1.0 transmit-lsp lsp_to_pe1_ge1; receive-lsp lsp_to_pe2_ge1;	Associates the CCC, ge-0/0/1 , with the LSPs that have been defined on the local and remote PE switches.

[Table 8 on page 46](#) shows the MPLS configuration components used for the provider switch in this example.

Table 8: Components of the Provider Switch in the Topology for MPLS with Interface-Based CCC

Property	Settings	Description
Provider switch hardware	EX Series switch	Transit switch within the MPLS network configuration.
Loopback address	lo0 127.1.1.2/32	Identifies provider switch for interswitch communications.
Routing protocol	ospf traffic-engineering	Indicates that this switch is using OSPF as the routing protocol and that traffic engineering is enabled.
MPLS protocol	mpls	<p>Indicates that this switch is using the MPLS protocol.</p> <p>The statement must specify the core interfaces that will be used for MPLS traffic.</p>
RSVP	rsvp	Indicates that this switch is using RSVP. The statement must specify the loopback and the core interfaces that will be used for the RSVP session.

Table 8: Components of the Provider Switch in the Topology for MPLS with Interface-Based CCC (*continued*)

Property	Settings	Description
Interface family	family inet family mpls	The logical units for the loopback interface and the core interfaces belong to family inet . The logical units of the core interfaces are also configured to belong to family mpls .
Core interfaces	ge-0/0/5.0 and ge-0/0/6.0 with IP addresses 10.1.5.1/24 and 10.1.6.1/24 and ae0 with IP address 10.1.9.1/24	Interfaces that connect the provider switch (P) to PE-1. Aggregated Ethernet interface on P that connects to aggregated Ethernet interface ae0 of PE-2.

Configuring the Local PE Switch

CLI Quick Configuration

To quickly configure the local ingress PE switch, copy the following commands and paste them into the switch terminal window of PE-1:

```
[edit]
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/0/6.0
set protocols mpls label-switched-path lsp_to_pe2_ge1 to 127.1.1.3
set protocols mpls interface ge-0/0/5.0
set protocols mpls interface ge-0/0/6.0
set protocols rsvp interface lo0.0
set protocols rsvp interface ge-0/0/5.0
set protocols rsvp interface ge-0/0/6.0
set interfaces lo0 unit 0 family inet address 127.1.1.1/32
set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/0/6 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family ccc
set protocols connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/1.0
```

```
set protocols connections remote-interface-switch ge-1-to-pe2 transmit-lsp lsp_to_pe2_ge1
set protocols connections remote-interface-switch ge-1-to-pe2 receive-lsp lsp_to_pe1_ge1
```

Step-by-Step Procedure

To configure the local ingress PE switch:

1. Configure OSPF with traffic engineering enabled:

```
[edit protocols]
user@switchPE-1# set ospf traffic-engineering
```

2. Configure OSPF on the loopback address and the core interfaces:

```
[edit protocols]
user@switchPE-1# set ospf area 0.0.0.0 interface lo0.0
user@switchPE-1# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switchPE-1# set ospf area 0.0.0.0 interface ge-0/0/6.0
```

3. Configure MPLS on this PE switch (PE-1) with a label-switched path (LSP) to the other PE switch (PE-2):

```
[edit protocols]
user@switchPE-1# set mpls label-switched-path lsp_to_pe2_ge1 to 127.1.1.3
```

4. Configure MPLS on the core interfaces:

```
[edit protocols]
user@switchPE-1# set mpls interface ge-0/0/5.0
user@switchPE-1# set mpls interface ge-0/0/6.0
```

5. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switchPE-1# set rsvp interface lo0.0
user@switchPE-1# set rsvp interface ge-0/0/5.0
user@switchPE-1# set rsvp interface ge-0/0/6.0
```

6. Configure IP addresses for the loopback interface and the core interfaces:

```
[edit]
user@switchPE-1# set interfaces lo0 unit 0 family inet address 127.1.1.1/32
user@switchPE-1# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switchPE-1# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
```

7. Configure **family mpls** on the logical unit of the core interface addresses:


```
[edit]
user@switchPE-1# set interfaces ge-0/0/5 unit 0 family mpls
user@switchPE-1# set interfaces ge-0/0/6 unit 0 family mpls
```

8. Configure the logical unit of the customer edge interface as a CCC:

```
[edit interfaces ge-0/0/1 unit 0]
-user@PE-1# set family ccc
```

9. Configure the interface-based CCC from PE-1 to PE-2:

NOTE: You can also configure a tagged VLAN interface as a CCC. See [“Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN \(CLI Procedure\)” on page 1340](#) or [“Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit” on page 1307](#).

```
[edit protocols]
user@PE-1# set connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/1.0
user@PE-1# set connections remote-interface-switch ge-1-to-pe2 transmit-lsp lsp_to_pe2_ge1
user@PE-1# set connections remote-interface-switch ge-1-to-pe2 receive-lsp lsp_to_pe1_ge1
```

Results

Display the results of the configuration:

```
user@switchPE-1> show configuration
```

```
interfaces {
  ge-0/0/1 {
    unit 0 {
      family ccc;
    }
  }
  ge-0/0/5 {
    unit 0 {
      family inet {
        address 10.1.5.1/24;
      }
      family mpls;
    }
  }
}
```

```

ge-0/0/6 {
  unit 0 {
    family inet {
      address 10.1.6.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.1.1.1/32;
    }
  }
}
protocols {
  rsvp {
    interface lo0.0;
    interface ge-0/0/5.0;
    interface ge-0/0/6.0;
  }
  mpls {
    label-switched-path lsp_to_pe2_ge1 {
      to 127.1.1.3;
    }
    interface ge-0/0/5.0;
    interface ge-0/0/6.0;
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface lo0.0;
      interface ge-0/0/5.0;
      interface ge-0/0/6.0;
    }
  }
}
connections {
  remote-interface-switch ge-1-to-pe2 {
    interface ge-0/0/1.0;
    transmit-lsp lsp_to_pe2_ge1;
    receive-lsp lsp_to_pe1_ge1;
  }
}

```

Configuring the Remote PE Switch

CLI Quick Configuration

To quickly configure the remote PE switch, copy the following commands and paste them into the switch terminal window of PE-2:

```
[edit]
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ae0
set protocols mpls label-switched-path lsp_to_pe1_ge1 to 127.1.1.1
set protocols mpls interface ae0
set protocols rsvp interface lo0.0
set protocols rsvp interface ae0
set interfaces lo0 unit 0 family inet address 127.1.1.3/32
set interfaces ae0 unit 0 family inet address 10.1.9.2/24
set interfaces ae0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family ccc
set protocols connections remote-interface-switch ge-1-to-pe1 interface ge-0/0/1.0
set protocols connections remote-interface-switch ge-1-to-pe1 transmit-lsp lsp_to_pe1_ge1
set protocols connections remote-interface-switch ge-1-to-pe1 receive-lsp lsp_to_pe2_ge1
```

Step-by-Step Procedure

To configure the remote PE switch (PE-2):

1. Configure OSPF with traffic engineering enabled:

```
[edit protocols]
user@switchPE-2# set ospf traffic-engineering
```

2. Configure OSPF on the loopback interface and the core interface:

```
[edit protocols]
user@switchPE-2# set ospf area 0.0.0.0 interface lo0.0
user@switchPE-2# set ospf area 0.0.0.0 interface ae0
```

3. Configure MPLS on this switch (PE-2) with a label-switched path (LSP) to the other PE switch (PE-1):

```
[edit protocols]
user@switchPE-2# set mpls label-switched-path lsp_to_pe1_ge1 to 127.1.1.1
```

4. Configure MPLS on the core interface:

```
[edit protocols]
user@switchPE-2# set mpls interface ae0
```

5. Configure RSVP on the loopback interface and the core interface:

```
[edit protocols]
ser@switchPE-2# set rsvp interface lo0.0
user@switchPE-2# set rsvp interface ae0
```

6. Configure IP addresses for the loopback interface and the core interface:

```
[edit]
user@switchPE-2# set interfaces lo0 unit 0 family inet address 127.1.1.3/32
user@switchPE-2# set interfaces ae0 unit 0 family inet address 10.1.9.2/24
```

7. Configure **family mpls** on the logical unit of the core interface:

```
[edit]
user@switchPE-2# set interfaces ae0 unit 0 family mpls
```

8. Configure the logical unit of the customer edge interface as a CCC:

```
[edit interfaces ge-0/0/1 unit 0]
user@PE-2# set family ccc
```

9. Configure the interface-based CCC from PE-2 to PE-1:

```
[edit protocols]
user@PE-2# set connections remote-interface-switch ge-1-to-pe1 interface ge-0/0/1.0
user@PE-2# set connections remote-interface-switch ge-1-to-pe1 transmit-lsp lsp_to_pe1_ge1
user@PE-2# set connections remote-interface-switch ge-1-to-pe1 receive-lsp lsp_to_pe2_ge1
```

Results

Display the results of the configuration:

```
user@switchPE-2> show configuration
```

```
interfaces {
  ge-0/0/1 {
    unit 0 {
      family ccc;
    }
  }
}
```

```

    }
    ae0 {
        unit 0 {
            family inet {
                address 10.1.9.2/24;
            }
            family mpls;
        }
    }
    lo0 {
        unit 0 {
            family inet {
                address 127.1.1.3/32;
            }
        }
    }
}
protocols {
    rsvp {
        interface lo0.0;
        interface ae0.0;
    }
    mpls {
        label-switched-path lsp_to_pe1_ge1 {
            to 127.1.1.1;
        }
        interface ae0.0;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface ae0.0;
        }
    }
    connections {
        remote-interface-switch ge-1-to-pe1 {
            interface ge-0/0/1.0;
            transmit-lsp lsp_to_pe1_ge1;
            receive-lsp lsp_to_pe2_ge1;
        }
    }
}

```

Configuring the Provider Switch

CLI Quick Configuration

To quickly configure the provider switch, copy the following commands and paste them into the switch terminal window:

```
[edit]
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/0/6.0
set protocols ospf area 0.0.0.0 interface ae0
set protocols mpls interface ge-0/0/5.0
set protocols mpls interface ge-0/0/6.0
set protocols mpls interface ae0
set protocols rsvp interface lo0.0
set protocols rsvp interface ge-0/0/5.0
set protocols rsvp interface ge-0/0/6.0
set protocols rsvp interface ae0
set interfaces lo0 unit 0 family inet address 127.1.1.2/32
set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
set interfaces ae0 unit 0 family inet address 10.1.9.1/24
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/0/6 unit 0 family mpls
set interfaces ae0 unit 0 family mpls
```

Step-by-Step Procedure

To configure the provider switch:

1. Configure OSPF with traffic engineering enabled:

```
[edit protocols]
user@switchP# set ospf traffic-engineering
```

2. Configure OSPF on the loopback interface and the core interfaces:

```
[edit protocols]
user@switchP# set ospf area 0.0.0.0 interface lo0.0
user@switchP# set ospf area 0.0.0.0 interface ge-0/0/5
user@switchP# set ospf area 0.0.0.0 interface ge-0/0/6
```

```
user@switchP# set ospf area 0.0.0.0 interface ae0
```

3. Configure MPLS on the core interfaces on the switch:

```
[edit protocols]
user@switchP# set mpls interface ge-0/0/5
user@switchP# set mpls interface ge-0/0/6
user@switchP# set mpls interface ae0
```

4. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switchP# set rsvp interface lo0.0
user@switchP# set rsvp interface ge-0/0/5
user@switchP# set rsvp interface ge-0/0/6
user@switchP# set rsvp interface ae0
```

5. Configure IP addresses for the loopback interface and the core interfaces:

```
[edit]
user@switchP# set interfaces lo0 unit 0 family inet address 127.1.1.2/32
user@switchP# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switchP# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
user@switchP# set interfaces ae0 unit 0 family inet address 10.1.9.1/24
```

6. Configure **family mpls** on the logical unit of the core interface addresses:

```
[edit]
user@switchP# set interfaces ge-0/0/5 unit 0 family mpls
user@switchP# set interfaces ge-0/0/6 unit 0 family mpls
user@switchP# set interfaces ae0 unit 0 family mpls
```

Results

Display the results of the configuration:

```
user@switchP> show configuration
```

```
interfaces {
  ge-0/0/5 {
    unit 0 {
      family inet {
```

```

        address 10.1.5.1/24;
    }
    family mpls;
}
}
ge-0/0/6 {
    unit 0 {
        family inet {
            address 10.1.6.1/24;
        }
        family mpls;
    }
}
ae0 {
    unit 0 {
        family inet {
            address 10.1.9.1/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 127.1.1.2/32;
        }
    }
}
protocols {
    rsvp {
        interface lo0.0;
        interface ge-0/0/5.0;
        interface ge-0/0/6.0;
        interface ae0.0;
    }
    mpls {
        interface ge-0/0/5.0;
        interface ge-0/0/6.0;
        interface ae0.0;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {

```



```

interface lo0.0;
interface ge-0/0/5.0;
interface ge-0/0/6.0;
interface ae0.0;
}
}

```

Verification

IN THIS SECTION

- [Verifying the Physical Layer on the Switches | 57](#)
- [Verifying the Routing Protocol | 58](#)
- [Verifying the Core Interfaces Being Used for MPLS Traffic | 58](#)
- [Verifying the Status of the RSVP Sessions | 59](#)
- [Verifying the Assignment of Interfaces for MPLS Label Operations | 59](#)
- [Verifying the Status of the CCC | 60](#)

To confirm that the configuration is working properly, perform these tasks:

Verifying the Physical Layer on the Switches

Purpose

Verify that the interfaces are up. Perform this verification task on each of the switches.

Action

user@switchPE-1> **show interfaces terse**

Interface	Admin	Link	Proto	Local	Remote
ge-0/0/0	up	up			
ge-0/0/0.0	up	up	eth-switch		
ge-0/0/1	up	up			
ge-0/0/1.0	up	up	ccc		
ge-0/0/2	up	up			
ge-0/0/2.0	up	up	eth-switch		
ge-0/0/3	up	up			
ge-0/0/3.0	up	up	eth-switch		
ge-0/0/4	up	up			

```

ge-0/0/4.0          up    up eth-switch
ge-0/0/5            up    up
ge-0/0/5.0          up    up inet    10.1.5.1/24
                        mpls
ge-0/0/6            up    up
ge-0/0/6.0          up    up inet    10.1.6.1/24
                        mpls

```

Meaning

The **show interfaces terse** command displays status information about the Gigabit Ethernet interfaces on the switch. This output verifies that the interfaces are **up**. The output for the protocol family (**Proto** column) shows that interface **ge-0/0/1.0** is configured as a circuit cross-connect. The output for the protocol family of the core interfaces (**ge-0/0/5.0** and **ge-0/0/6.0**) shows that these interfaces are configured as both **inet** and **mpls**. The **Local** column for the core interfaces shows the IP address configured for these interfaces.

Verifying the Routing Protocol

Purpose

Verify the state of the configured routing protocol. Perform this verification task on each of the switches. The state must be **Full**.

Action

```
user@switchPE-1> show ospf neighbor
```

Address	Interface	State	ID	Pri	Dead
127.1.1.2	ge-0/0/5	Full	10.10.10.10	128	39

Meaning

The **show ospf neighbor** command displays the status of the routing protocol. This output shows that the state is **Full**, meaning that the routing protocol is operating correctly—that is, hello packets are being exchanged between directly connected neighbors.

Verifying the Core Interfaces Being Used for MPLS Traffic

Purpose

Verify that the state of the MPLS interface is **Up**. Perform this verification task on each of the switches.

Action

```
user@switchPE-1> show mpls interface
```

Interface	State	Administrative groups
ge-0/0/5	Up	<none>
ge-0/0/6	Up	<none>

Meaning

The **show mpls interface** command displays the status of the core interfaces that have been configured to belong to **family mpls**. This output shows that the interface configured to belong to **family mpls** is **Up**.

Verifying the Status of the RSVP Sessions

Purpose

Verify the status of the RSVP sessions. Perform this verification task on each of the switches.

Action

user@switchPE-1> **show rsvp session**

```
Ingress RSVP: 1 sessions
To          From          State   Rt  Style Labelin Labelout LSPname
127.1.13    127.1.1.1    Up      0   1 FF      -    300064 lsp_to_pe2_ge1
Total 1 displayed, Up 1, Down 0

Egress RSVP: 1 sessions
To          From          State   Rt  Style Labelin Labelout LSPname
127.1.1.1    127.1.1.3    Up      0   1 FF    299968   lsp_to_pe1_ge1
Total 1 displayed, Up 1, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Meaning

This output confirms that the RSVP sessions are **Up**.

Verifying the Assignment of Interfaces for MPLS Label Operations

Purpose

Verify which interface is being used as the beginning of the CCC and which interface is being used to push the MPLS packet to the next hop. Perform this task only on the PE switches.

Action

```
user@switchPE-1> show route forwarding-table family mpls
```

```
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm    0              dscd   50    1
0                user    0              recv   49    3
1                user    0              recv   49    3
2                user    0              recv   49    3
299776           user    0              Pop    541    2      ge-0/0/1.0
ge-0/0/1.0 (CCC) user    0 2.0.0.1        Push 299792 540 2      ge-0/0/5.0
```

Meaning

This output shows that the CCC has been set up on interface **ge-0/0/1.0**. The switch receives ingress traffic on **ge-0/0/1.0** and pushes label **299792** onto the packet, which goes out through interface **ge-0/0/5.0**. The output also shows when the switch receives an MPLS packet with label 29976, it pops the label and sends the packet out through interface **ge-0/0/1.0**.

After you have checked the local PE switch, run the same command on the remote PE switch.

Verifying the Status of the CCC

Purpose

Verify the status of the CCC. Perform this task only on the PE switches.

Action

```
user@switchPE-1> show connections
```

```
CCC and TCC connections [Link Monitoring On]
Legend for status (St)          Legend for connection types
UN -- uninitialized            if-sw:  interface switching
NP -- not present              rmt-if: remote interface switching
WE -- wrong encapsulation      lsp-sw: LSP switching
DS -- disabled                 tx-p2mp-sw: transmit P2MP switching
Dn -- down                    rx-p2mp-sw: receive P2MP switching
-> -- only outbound conn is up
<- -- only inbound conn is up
Up -- operational
RmtDn -- remote CCC down
Restart -- restarting

Legend for circuit types
intf -- interface
tlsp -- transmit LSP
rlsp -- receive LSP
```

Connection/Circuit	Type	St	Time last up	# Up trans
ge1-to-pe2	rmt-if	Up	Feb 17 05:00:09	1
ge-0/0/1.0	intf	Up		
lsp_to_pe1_ge1	tlsp	Up		
lsp_to_pe2_ge1	rlsp	Up		

Meaning

The **show connections** command displays the status of the CCC connections. This output verifies that the CCC interface and its associated transmit and receive LSPs are **Up**. After you have checked the local PE switch, run the same command on the remote PE switch.

RELATED DOCUMENTATION

[MPLS Overview | 2](#)

MPLS on Provider and Provider Edge Devices Configuration

IN THIS SECTION

- [Configuring MPLS on Provider Switches | 62](#)
- [Configuring MPLS on Provider Edge Switches | 63](#)
- [Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS | 67](#)
- [Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect | 73](#)
- [Configuring MPLS on EX8200 and EX4500 Provider Switches | 77](#)

Configuring MPLS on Provider Switches

To implement MPLS, you must configure at least one provider switch as a transit switch for the MPLS packets.

MPLS requires the configuration of an interior gateway protocol (OSPF) and a signaling protocol (RSVP) on the core interfaces and the loopback interface of all the switches. This procedure includes the configuration of OSPF on the provider switch.

To configure the provider switch, complete the following tasks:

1. Configure OSPF on the loopback and core interfaces:

NOTE: You can use the switch address as an alternative to the loopback interface.

```
[edit protocols ospf]
user@switch# set area 0.0.0.0 interface lo0.0
user@switch# set area 0.0.0.0 interface xe-0/0/5.0
user@switch# set area 0.0.0.0 interface xe-0/0/6.0
user@switch# set area 0.0.0.0 interface ae0
```

2. Configure MPLS on the core interfaces:

```
[edit protocols mpls]
user@switch# set interface xe-0/0/5.0
user@switch# set interface xe-0/0/6.0
user@switch# set interface ae0
```

3. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols rsvp]
user@switch# set interface lo0.0
user@switch# set interface xe-0/0/5.0
user@switch# set interface xe-0/0/6.0
user@switch# set interface ae0
```

4. Configure an IP address for the loopback interface and the core interfaces:

```
[edit interfaces]
user@switch# set lo0 unit 0 family inet address 127.1.1.1/32
user@switch# set xe-0/0/5 unit 0 family inet address 10.1.5.1/24
```

```
user@switch# set xe-0/0/6 unit 0 family inet address 10.1.6.1/24
```

```
user@switch# set ae0 unit 0 family inet address 10.1.9.2/24
```

5. Configure **family mpls** on the logical units of the core interfaces, thereby identifying the interfaces that will be used for forwarding MPLS packets:

```
[edit interfaces]
```

```
user@switch# set xe-0/0/5 unit 0 family mpls
```

```
user@switch# set xe-0/0/6 unit 0 family mpls
```

```
user@switch# set ae0 unit 0 family mpls
```

Configuring MPLS on Provider Edge Switches

To implement MPLS, you must configure two provider edge (PE) switches—an ingress PE switch and an egress PE switch—and at least one provider switch. You can configure the customer edge (CE) interfaces on the PE switches of the MPLS network using IP over MPLS.

This topic describes how to configure an ingress PE switch and an egress PE switch using IP over MPLS:

1. [Configuring the Ingress PE Switch | 63](#)
2. [Configuring the Egress PE Switch | 65](#)

Configuring the Ingress PE Switch

To configure the ingress PE switch:

1. Configure an IP address for the loopback interface and the core interfaces:

```
[edit interfaces]
```

```
user@switch# set lo0 unit 0 family inet address 192.168.10.1/32
```

```
user@switch# set xe-0/0/5 unit 0 family inet address 10.1.5.1/24
```

```
user@switch# set xe-0/0/6 unit 0 family inet address 10.1.6.1/24
```

NOTE: You cannot use routed VLAN interfaces (RVIs) or Layer 3 subinterfaces as core interfaces.

2. Configure OSPF on the loopback interface and the core interfaces:

NOTE: You can use the switch address as an alternative to the loopback interface.

```
[edit protocols ospf]
user@switch# set area 0.0.0.0 interface lo0.0
user@switch# set area 0.0.0.0 interface xe-0/0/5.0
user@switch# set area 0.0.0.0 interface xe-0/0/6.0
```

3. Configure OSPF traffic engineering:

```
[edit protocols ospf]
user@switch# set traffic-engineering
```

4. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols rsvp]
user@switch# set interface lo0.0
user@switch# set interface xe-0/0/5.0
user@switch# set interface xe-0/0/6.0
```

5. Configure MPLS traffic engineering.

```
[edit protocols mpls]
user@switch# set traffic-engineering
```

6. Configure MPLS on the core interfaces:

```
[edit protocols mpls]
user@switch# set interface xe-0/0/5.0
user@switch# set interface xe-0/0/6.0
```

7. Configure **family mpls** on the logical units of the core interfaces, thereby identifying the interfaces that will be used for forwarding MPLS packets:

```
[edit interfaces]
user@switch# set xe-0/0/5 unit 0 family mpls
user@switch# set xe-0/0/6 unit 0 family mpls
```

8. Configure a customer edge interface as a Layer 3 routed interface, specifying an IP address:

```
[edit interfaces]
user@switch# set xe-0/0/3 unit 0 family inet address 121.100.10.1/16
```

9. Configure this Layer 3 customer edge interface for the routing protocol:

```
[edit]
user@switch# set protocols ospf area 0.0.0 interface xe-0/0/3.0
```


10. Configure an LSP on the ingress PE switch (192.168.10.1) to send IP packets over MPLS to the egress PE switch (192.168.12.1):

```
[edit protocols mpls]
user@switch# set label-switched-path lsp_1 to 192.168.12.1
```

11. Disable constrained-path LSP computation for this LSP:

```
[edit protocols mpls]
user@switch# set label-switched-path lsp_1 no-cspf
```

12. Configure a static route from the ingress PE switch to the egress PE switch, thereby indicating to the routing protocol that the packets will be forwarded over the MPLS LSP that has been set up to that destination:

```
[edit routing-options]
user@switch# set static route 2.2.2.0/24 next-hop 192.168.10.1
user@switch# set static route 2.2.2.0/24 resolve
```

Configuring the Egress PE Switch

To configure the egress PE switch:

1. Configure an IP address for the loopback interface and the core interfaces:

```
[edit interfaces]
user@switch# set lo0 unit 0 family inet address 192.168.12.1/32
user@switch# set xe-0/0/5 unit 0 family inet address 10.1.20.1/24
user@switch# set xe-0/0/6 unit 0 family inet address 10.1.21.1/24
```

NOTE: You cannot use routed VLAN interfaces (RVIs) or Layer 3 subinterfaces as core interfaces.

2. Configure OSPF on the loopback interface and the core interfaces:

NOTE: You can use the switch address as an alternative to the loopback interface.

```
[edit protocols ospf]
user@switch# set area 0.0.0.0 interface lo0.0
user@switch# set area 0.0.0.0 interface xe-0/0/5.0
```

```
user@switch# set area 0.0.0.0 interface xe-0/0/6.0
```

3. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols rsvp]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface xe-0/0/5.0
user@switch# set rsvp interface xe-0/0/6.0
```

4. Configure MPLS on the core interfaces:

```
[edit protocols mpls]
user@switch# set interface xe-0/0/5.0
user@switch# set interface xe-0/0/6.0
```

5. Configure **family mpls** on the logical units of the core interfaces, thereby identifying the interfaces that will be used for forwarding MPLS packets:

```
[edit interfaces]
user@switch# set xe-0/0/5 unit 0 family mpls
user@switch# set xe-0/0/6 unit 0 family mpls
```

6. Configure a customer edge interface as a Layer 3 routed interface, specifying an IP address:

```
[edit interfaces]
user@switch# set xe-0/0/3 unit 0 family inet address 2.2.2.1/16
```

7. Configure this Layer 3 customer edge interface for the routing protocol:

```
[edit]
user@switch# set protocols ospf area 0.0.0 interface xe-0/0/3
```

8. Configure an LSP on the egress PE switch (192.168.12.1) to send IP packets over MPLS to the ingress PE switch (192.168.10.1):

```
[edit protocols mpls]
user@switch# set label-switched-path lsp_2 to 192.168.10.1
```

9. Disable constrained-path LSP computation for this LSP:

```
[edit protocols mpls]
```

```
user@switch# set label-switched-path lsp_2 no-cspf
```

10. Configure a static route from the ingress PE switch to the egress PE switch, thereby indicating to the routing protocol that the packets will be forwarded over the MPLS LSP that has been set up to that destination:

```
[edit routing-options]
user@switch# set static route 121.121.121.0/24 next-hop 192.168.12.1
user@switch# set static route 121.121.121.0/24 resolve
```

Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS

You can configure MPLS on EX Series switches to increase transport efficiency in your network. MPLS services can be used to connect various sites to a backbone network or to ensure better performance for low-latency applications such as VoIP and other business-critical functions.

To implement MPLS on switches, you must configure two provider edge (PE) switches—an ingress PE switch and an egress PE switch—and at least one provider switch. You can configure customer edge (CE) interfaces on the PE switches of the MPLS network by using either IP over MPLS or MPLS over circuit cross-connect (CCC).

The main differences between configuring IP over MPLS and configuring MPLS over CCC are that for IP over MPLS you configure the customer edge interfaces to belong to **family inet** (rather than **family ccc**) and you configure a static route for the label-switched path (LSP). The configuration of the provider switch is the same regardless of whether you have used IP over MPLS or MPLS over CCC. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches” on page 77](#).

This topic describes how to configure an ingress PE switch and an egress PE switch using IP over MPLS:

1. [Configuring the Ingress PE Switch | 67](#)
2. [Configuring the Egress PE Switch | 70](#)

Configuring the Ingress PE Switch

To configure the ingress PE switch:

1. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit 0 family inet address 100.100.100.100/32
user@switch# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switch# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
```

2. Configure OSPF on the loopback and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/6.0
```

NOTE: If you want to use routed VLAN interfaces (RVIs) or Layer 3 subinterfaces as the core interfaces, replace ge-0/0/5.0 and ge-0/0/6 each with an RVI name (for example, *vlan.logical-interface-number*) or a subinterface name (for example, *interface-name.logical-unit-number*).

RVIs function as logical routers, eliminating the need to have both a switch and a router. Layer 3 subinterfaces allow you to route traffic among multiple VLANs along a single trunk line that connects an EX Series switch to a Layer 2 switch.

3. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

4. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface ge-0/0/5.0
user@switch# set rsvp interface ge-0/0/6.0
```

5. Configure MPLS traffic engineering:

```
[edit protocols]
user@switch# set protocols mpls traffic-engineering bgp-igp
```

6. Configure MPLS on the core interfaces:

```
[edit protocols]
user@switch# set mpls interface ge-0/0/5.0
user@switch# set mpls interface ge-0/0/6.0
```

7. Configure **family mpls** on the logical units of the core interfaces, thereby identifying the interfaces that will be used for forwarding MPLS packets:

```
[edit]
user@switch# set interfaces ge-0/0/5 unit 0 family mpls
```

```
user@switch# set interfaces ge-0/0/6 unit 0 family mpls
```

8. Configure a customer edge interface as a Layer 3 routed interface, specifying an IP address:

```
[edit]
```

```
user@switch# set interfaces ge-2/0/3 unit 0 family inet 121.121.121.1/16
```

9. Configure this Layer 3 customer edge interface for the routing protocol:

```
[edit]
```

```
user@switch# set protocols ospf area 0.0.0 interface ge-2/0/3.0
```

10. Configure an LSP on the ingress PE switch (100.100.100.100) to send IP packets over MPLS to the egress PE switch (208.208.208.208):

```
[edit protocols mpls]
```

```
user@switch# set label-switched-path ip_lspjavae_29 from 100.100.100.100
```

```
user@switch# set label-switched-path ip_lspjavae_29 to 208.208.208.208
```

11. Disable constrained-path LSP computation for this LSP:

```
[edit protocols mpls]
```

```
user@switch# set label-switched-path ip_lspjavae_29 no-cspf
```

12. Configure a static route from the ingress PE switch to the egress PE switch, thereby indicating to the routing protocol that the packets will be forwarded over the MPLS LSP that has been set up to that destination:

NOTE: Do not configure a static route if you are using this procedure to configure an MPLS-based Layer 3 VPN.

```
[edit]
```

```
user@switch# set routing-options static route 2.2.2.0/24 next-hop 100.100.100.100
```

```
user@switch# set routing-options static route 2.2.2.0/24 resolve
```

Configuring the Egress PE Switch

To configure the egress PE switch:

1. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit 0 family inet address 208.208.208.208/32
user@switch# set interfaces ge-0/0/5 unit 0 family inet address 10.1.20.1/24
user@switch# set interfaces ge-0/0/6 unit 0 family inet address 10.1.21.1/24
```

2. Configure OSPF on the loopback interface (or switch address) and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/6.0
```

NOTE: If you want to use routed VLAN interfaces (RVIs) or Layer 3 subinterfaces as the core interfaces, replace ge-0/0/5.0 and ge-0/0/6 each with an RVI name (for example, *vlan.logical-interface-number*) or a subinterface name (for example, *interface-name.logical-unit-number*).

RVIs function as logical routers, eliminating the need to have both a switch and a router. Layer 3 subinterfaces allow you to route traffic among multiple VLANs along a single trunk line that connects an EX Series switch to a Layer 2 switch.

3. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

4. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface ge-0/0/5.0
user@switch# set rsvp interface ge-0/0/6.0
```

5. Configure MPLS traffic engineering on both BGP and IGP destinations:

```
[edit protocols]
user@switch# set protocols mpls traffic-engineering bgp-igp
```

6. Configure MPLS on the core interfaces:

```
[edit protocols]
user@switch# set mpls interface ge-0/0/5.0
user@switch# set mpls interface ge-0/0/6.0
```

7. Configure **family mpls** on the logical units of the core interfaces, thereby identifying the interfaces that will be used for forwarding MPLS packets:

```
[edit]
user@switch# set interfaces ge-0/0/5 unit 0 family mpls
user@switch# set interfaces ge-0/0/6 unit 0 family mpls
```

8. Configure a customer edge interface as a Layer 3 routed interface, specifying an IP address:

```
[edit]
user@switch# set interfaces ge-2/0/3 unit 0 family inet address 2.2.2.1/16
```

9. Configure this Layer 3 customer edge interface for the routing protocol:

```
[edit]
user@switch# set protocols ospf area 0.0.0 interface ge-2/0/3
```

10. Configure an LSP on the egress PE switch (208.208.208.208) to send IP packets over MPLS to the ingress PE switch (100.100.100.100):

```
[edit protocols mpls]
user@switch# set label-switched-path ip_lsp29_javae from 208.208.208.208
user@switch# set label-switched-path ip_lsp29_javae to 100.100.100.100
```

11. Disable constrained-path LSP computation for this LSP:

```
[edit protocols mpls]
user@switch# set label-switched-path ip_lsp29_javae no-cspf
```

12. Configure a static route from the ingress PE switch to the egress PE switch, thereby indicating to the routing protocol that the packets will be forwarded over the MPLS LSP that has been set up to that destination:

NOTE: Do not configure a static route if you are using this procedure to configure an MPLS-based Layer 3 VPN.

```
[edit]
```

```
user@switch# set routing-options static route 121.121.121.0/24 next-hop 208.208.208.208
user@switch# set routing-options static route 121.121.121.0/24 resolve
```


Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect

Junos OS MPLS for EX8200 and EX4500 switches supports Layer 2 protocols and Layer 2 virtual private networks (VPNs). You can configure MPLS on switches to increase transport efficiency in your network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as VoIP and other business-critical functions.

This topic describes configuring provider edge (PE) switches in an MPLS network using a circuit cross-connect (CCC). The customer edge interface can be either a simple interface or a tagged VLAN interface.

NOTE: If you are configuring a CCC on a tagged VLAN interface, you do not specify **family ccc**. See [Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN](#) and [Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit](#).

NOTE: If you are going through this procedure in preparation for configuring an MPLS-based Layer 2 VPN, you do not need to configure the association of the label-switched path (LSP) with the customer edge interface. The BGP signaling automates the connections, so manual configuration of the **connections** is not required.

The following guidelines apply to CCC configurations:

- When an interface is configured to belong to **family ccc**, it cannot belong to any other family.
- You can send any kind of traffic over a CCC, including nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment.
- If you are configuring a CCC on a tagged VLAN interface, you must explicitly enable VLAN tagging and specify a VLAN ID. The VLAN ID cannot be configured on logical interface unit **0**. The logical unit number must be **1** or higher. See [Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN](#) and [Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit](#).

This procedure shows how to set up two CCCs:

- If you are configuring a CCC on a simple interface (**ge-0/0/1**), you do not need to enable VLAN tagging or specify a VLAN ID, so you skip those steps.
- If you are configuring a CCC on a tagged VLAN interface (**ge-0/0/2**), include all the steps in this procedure.

To configure a PE switch with a CCC:

1. Configure OSPF (or IS-IS) on the loopback (or switch address) and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/6.0
user@switch# set ospf area 0.0.0.0 interface ae0
```

2. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit 0 family inet address 127.1.1.1/32
user@switch# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switch# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
user@switch# set interfaces ae0 unit 0 family inet address 10.1.9.1/24
```

4. Enable MPLS and define the LSP:

```
[edit protocols]
user@switch# set mpls label-switched-path lsp_to_pe2_ge1 to 127.1.1.3
```

TIP: `lsp_to_pe2_ge1` is the LSP name. You will need to use the specified name again when configuring the CCC.

5. Configure MPLS on the core interfaces:

```
[edit protocols]
user@switch# set mpls interface ge-0/0/5.0
user@switch# set mpls interface ge-0/0/6.0
user@switch# set mpls interface ae0
```

6. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface ge-0/0/5.0
```

```
user@switch# set rsvp interface ge-0/0/6.0
user@switch# set rsvp interface ae0
```

7. Configure **family mpls** on the logical units of the core interfaces:

```
[edit]
user@switch# set interfaces ge-0/0/5 unit 0 family mpls
user@switch# set interfaces ge-0/0/6 unit 0 family mpls
user@switch# set interfaces ae0 unit 0 family mpls
```

NOTE: You can enable **family mpls** on either individual interfaces or aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

8. If you are configuring a CCC on a tagged VLAN interface, enable VLAN tagging on the customer edge interface **ge-0/0/2** of the local PE switch:

```
[edit interfaces ge-0/0/2]
user@switch# set vlan-tagging
```

If you are configuring a CCC on a simple interface (**ge-0/0/1**), omit this step.

9. If you are configuring a CCC on a tagged VLAN interface, configure the logical unit of the customer edge interface with a VLAN ID:

```
[edit interfaces ge-0/0/2 unit 1]
user@switch# set vlan-id 100
```

If you are configuring a CCC on a simple interface (**ge-0/0/1**), omit this step.

10. Configure the logical unit of the customer edge interface to belong to **family ccc**:

- On a simple interface:

```
[edit interfaces ge-0/0/1 unit 0]
user@switch# set family ccc
```

- On a tagged VLAN interface:

```
[edit interfaces ge-0/0/2 unit 1]
```

```
user@switch# set family ccc
```

11. Associate the CCC interface with two LSPs, one for transmitting MPLS packets and the other for receiving MPLS packets:

NOTE: If you are configuring a Layer 2 VPN, omit this step. The BGP signaling automates the connections, so manual configuration of the **connections** is not required.

- On a simple interface:

```
[edit protocols]
user@switch# set connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/1.0
user@switch# set connections remote-interface-switch ge-1-to-pe2 transmit-lsp lsp_to_pe2_ge1
user@switch# set connections remote-interface-switch ge-1-to-pe2 receive-lsp lsp_to_pe1_ge1
```

- On a tagged VLAN interface:

```
[edit protocols]
user@switch# set connections remote-interface-switch ge-1-to-pe2 interface ge-0/0/2.1
user@switch# set connections remote-interface-switch ge-1-to-pe2 transmit-lsp lsp_to_pe2_ge1
user@switch# set connections remote-interface-switch ge-1-to-pe2 receive-lsp lsp_to_pe1_ge1
```

TIP: The **transmit-lsp** option specifies the LSP name that was configured on PE-1 (the local PE switch) by the **label-switched-path** statement within the **[edit protocols mpls]** hierarchy. The **receive-lsp** option specifies the LSP name that was configured on PE-2 (the remote PE switch) by the **label-switched-path** statement within the **[edit protocols mpls]** hierarchy.

When you have completed configuring one PE switch, follow the same procedures to configure the other PE switch.

Configuring MPLS on EX8200 and EX4500 Provider Switches

You can configure MPLS on EX8200 and EX4500 switches to increase transport efficiency in your network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as VoIP and other business-critical functions.

To implement MPLS on EX Series switches, you must configure at least one provider switch as a transit switch for the MPLS packets. The configuration of all the provider switches remains the same regardless of whether the provider edge (PE) switches are using circuit cross-connect (CCC) or using MPLS over IP for the customer edge interfaces. Likewise, you do not need to change the configuration of the provider switches if you implement an MPLS-based Layer 2 VPN, Layer 3 VPN, or a Layer 2 circuit configuration.

MPLS requires the configuration of a routing protocol (OSPF or IS-IS) on the core interfaces and the loopback interface of all the switches. This procedure includes the configuration of OSPF on the provider switch. For information on configuring IS-IS as the routing protocol, see [Junos OS Routing Protocols Configuration Guide](#).

To configure the provider switch, complete the following tasks:

1. Enable the routing protocol (OSPF or IS-IS) on the loopback interface and on the core interfaces:

NOTE: You can use the switch address as an alternative to the loopback interface.

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/6.0
user@switch# set ospf area 0.0.0.0 interface ae0
```

2. Enable traffic engineering for the routing protocol (traffic engineering must be explicitly enabled for OSPF):

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Enable MPLS within the **protocols** stanza and apply it to the core interfaces:

```
[edit protocols]
user@switch# set mpls interface ge-0/0/5.0
user@switch# set mpls interface ge-0/0/6.0
user@switch# set mpls interface ae0
```

4. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface ge-0/0/5.0
user@switch# set rsvp interface ge-0/0/6.0
user@switch# set rsvp interface ae0
```

5. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit 0 family inet address 127.1.1.1/32
user@switch# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switch# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
user@switch# set interfaces ae0 unit 0 family inet address 10.1.9.2/24
```

6. Configure **family mpls** on the logical units of the core interfaces:

```
[edit]
user@switch# set interfaces ge-0/0/5 unit 0 family mpls
user@switch# set interfaces ge-0/0/6 unit 0 family mpls
user@switch# set interfaces ae0 unit 0 family mpls
```

NOTE: You can enable **family mpls** on either individual interfaces or aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

RELATED DOCUMENTATION

| [MPLS Overview](#) | 2

Configuring MPLS Tunnels

IN THIS CHAPTER

- [IPv6-over-Ipv4 Tunnels | 79](#)
- [Next-Hop-Based Dynamic Tunnels | 92](#)

IPv6-over-Ipv4 Tunnels

IN THIS SECTION

- [Configuring IPv6 Tunneling for MPLS | 79](#)
- [Example: Tunneling IPv6 Traffic over MPLS IPv4 Networks | 81](#)

Configuring IPv6 Tunneling for MPLS

You can configure the IPv6 tunneling for MPLS to tunnel IPv6 traffic over an MPLS-based IPv4 network. This configuration allows you to interconnect a number of smaller IPv6 networks over an IPv4-based network core, giving you the ability to provide IPv6 service without having to upgrade the switches in your core network. BGP is configured to exchange routes between the IPv6 networks, and data is tunneled between these IPv6 networks by means of IPv4-based MPLS.

To configure IPv6 tunneling for MPLS on your EX Series switch:

1. Configure IPv4 and IPv6 IP addresses for all the core interfaces:

```
[edit]
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
```

2. Configure the number assigned to you by the Network Information Center (NIC) as the autonomous system (AS) number

```
[edit routing-options]
```

```
user@switch# set autonomous-system number
```

3. Advertise label 0 to the egress router of the LSP:

```
[edit protocols]
user@switch# set mpls explicit-null
```

4. Configure the LSP to allow IPv6 routes to be resolved over an MPLS network by converting all routes stored in the inet3 routing table to IPv4-mapped IPv6 addresses and then copying them into the inet6.3 routing table:

```
[edit protocols]
user@switch# set mpls ipv6-tunneling
```

5. Set the local AS number:

```
[edit protocols bgp]
user@switch# set local-as local-autonomous-system-number
```

6. Configure the default import and export policies:

```
[edit protocols bgp]
user@switch# set local-address address
user@switch# set import default-import
user@switch# set family inet6 labeled-unicast explicit-null
user@switch# set export default-export
```

7. Configure a BGP group that recognizes only the specified BGP systems as peers. Define a group name, group type, local end of a BGP session, and a neighbor (peer). To configure multiple BGP peers, include multiple neighbor statements:

```
[edit protocols bgp]
user@switch# set group group-name type internal
user@switch# set group group-name local-address address-of-the-local-end-of-a-bgp-session
user@switch# set group group-name family inet6 labeled-unicast explicit-null
user@switch# set group group-name peer-as peer-autonomous-system-number
user@switch# set group group-name neighbor address family inet6 labeled-unicast explicit-null
```

8. Configure routing options to accept the default import and export policies:

```
[edit policy-options]
user@switch# set policy-statement default-import then accept
user@switch# set policy-statement default-export then accept
```


Example: Tunneling IPv6 Traffic over MPLS IPv4 Networks

IN THIS SECTION

- Requirements | 81
- Overview | 81
- Configuration | 84
- Verification | 91

This example shows how to configure the Junos OS to tunnel IPv6 over an MPLS-based IPv4 network. External BGP (EBGP) is used between the customer edge (CE) and provider edge (PE) devices. The remote CE devices have different AS numbers for loop detection.

Requirements

No special configuration beyond device initialization is required before you configure this example.

Overview

Detailed information about the Juniper Networks implementation of IPv6 over MPLS is described in the following Internet drafts:


- Internet draft draft-ietf-l3vpn-bgp-ipv6-07.txt, *BGP-MPLS IP VPN extension for IPv6 VPN* (expires January 2006)
- Internet draft draft-ooms-v6ops-bgp-tunnel-06.txt, *Connecting IPv6 Islands over IPv4 MPLS using IPv6 Provider Edge Routers* (expires July 2006)

These Internet drafts are available on the IETF website at <http://www.ietf.org/>.

This example shows you how to interconnect a two IPv6 networks over an IPv4-based network core, giving you the ability to provide IPv6 service without having to upgrade the routers in your core network. Multiprotocol Border Gateway Protocol (MP-BGP) is configured to exchange routes between the IPv6 networks, and data is tunneled between these IPv6 networks by means of IPv4-based MPLS.

In [Figure 3 on page 82](#), Routers PE1 and PE2 are dual-stack BGP routers, meaning they have both IPv4 and IPv6 stacks. The PE routers link the IPv6 networks through the customer edge (CE) routers to the IPv4 core network. The CE routers and the PE routers connect through a link layer that can carry IPv6 traffic. The PE routers use IPv6 on the CE router-facing interfaces and use IPv4 and MPLS on the core-facing interfaces. Note that one of the connected IPv6 networks could be the global IPv6 Internet.

Figure 3: IPv6 Networks Linked by MPLS IPv4 Tunnels

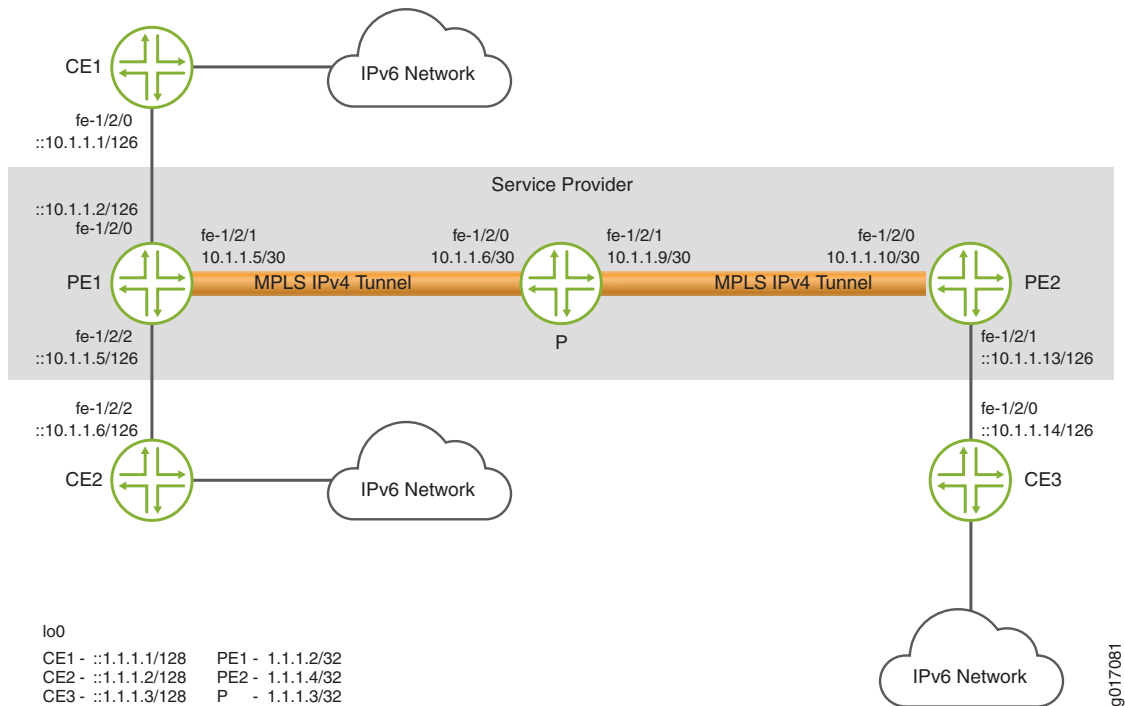

The two PE routers are linked through an MP-BGP session using IPv4 addresses. They use the session to exchange IPv6 routes with an IPv6 (value 2) address family indicator (AFI) and a subsequent AFI (SAFI) (value 4). Each PE router sets the next hop for the IPv6 routes advertised on this session to its own IPv4 address. Because MP-BGP requires the BGP next hop to correspond to the same address family as the network layer reachability information (NLRI), this IPv4 address needs to be embedded within an IPv6 format.

The PE routers can learn the IPv6 routes from the CE routers connected to them using routing protocols Routing Information Protocol next generation (RIPng) or MP-BGP, or through static configuration. Note that if BGP is used as the PE-router-to-CE-router protocol, the MP-BGP session between the PE router and CE router could occur over an IPv4 or IPv6 Transmission Control Protocol (TCP) session. Also, the BGP routes exchanged on that session would have SAFI unicast. You must configure an export policy to pass routes between IBGP and EBGP, and between BGP and any other protocol.

The PE routers have MPLS LSPs routed to each others' IPv4 addresses. IPv4 provides signaling for the LSPs by means of either LDP or RSVP. These LSPs are used to resolve the next-hop addresses of the IPv6 routes learned from MP-BGP. The next hops use IPv4-mapped IPv6 addresses, while the LSPs use IPv4 addresses.

The PE routers always advertise IPv6 routes to each other using a label value of 2, the explicit null label for IPv6 as defined in RFC 3032, *MPLS Label Stack Encoding*. As a consequence, each of the forwarding next hops for the IPv6 routes learned from remote PE routers normally push two labels. The inner label

is 2 (this label could be different if the advertising PE router is not a Juniper Networks routing platform), and the outer label is the LSP label. If the LSP is a single-hop LSP, then only Label 2 is pushed.

It is also possible for the PE routers to exchange plain IPv6 routes using SAFI unicast. However, there is one major advantage in exchanging labeled IPv6 routes. The penultimate-hop router for an MPLS LSP can pop the outer label and then send the packet with the inner label as an MPLS packet. Without the inner label, the penultimate-hop router would need to discover whether the packet is an IPv4 or IPv6 packet to set the protocol field in the Layer 2 header correctly.

When the PE1 router in [Figure 3 on page 82](#) receives an IPv6 packet from the CE1 router, it performs a lookup in the IPv6 forwarding table. If the destination matches a prefix learned from the CE2 router, then no labels need to be pushed and the packet is simply sent to the CE2 router. If the destination matches a prefix that was learned from the PE2 router, then the PE1 router pushes two labels onto the packet and sends it to the provider router. The inner label is 2 and the outer label is the LSP label for the PE2 router.

Each provider router in the service provider's network handles the packet as it would any MPLS packet, swapping labels as it passes from provider router to provider router. The penultimate-hop provider router for the LSP pops the outer label and sends the packet to the PE2 router. When the PE2 router receives the packet, it recognizes the IPv6 explicit null label on the packet (Label 2). It pops this label and treats it as an IPv6 packet, performing a lookup in the IPv6 forwarding table and forwarding the packet to the CE3 router.

This example includes the following settings:

- In addition to configuring the **family inet6** statement on all the CE router-facing interfaces, you must also configure the statement on all the core-facing interfaces running MPLS. Both configurations are necessary because the router must be able to process any IPv6 packets it receives on these interfaces. You should not see any regular IPv6 traffic arrive on these interfaces, but you will receive MPLS packets tagged with Label 2. Even though Label 2 MPLS packets are sent in IPv4, these packets are treated as native IPv6 packets.
- You enable IPv6 tunneling by including the **ipv6-tunneling** statement in the configuration for the PE routers. This statement allows IPv6 routes to be resolved over an MPLS network by converting all routes stored in the inet.3 routing table to IPv4-mapped IPv6 addresses and then copying them into the inet6.3 routing table. This routing table can be used to resolve next hops for both inet6 and inet6-vpn routes.

NOTE: BGP automatically runs its import policy even when copying routes from a primary routing table group to a secondary routing table group. If IPv4 labeled routes arrive from a BGP session (for example, when you have configured the **labeled-unicast** statement at the **[edit protocols bgp family inet]** hierarchy level on the PE router), the BGP neighbor's import policy also accepts IPv6 routes, since the neighbor's import policy is run while doing the copy operation to the inet6.3 routing table.

- When you configure MP-BGP to carry IPv6 traffic, the IPv4 MPLS label is removed at the destination PE router. The remaining IPv6 packet without a label can then be forwarded to the IPv6 network. To enable this, include the **explicit-null** statement in the BGP configuration.

Configuration

IN THIS SECTION

- [Configuring Device PE1 | 87](#)

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Device PE1

```
set interfaces fe-1/2/0 unit 2 family inet6 address ::10.1.1.2/126
set interfaces fe-1/2/0 unit 2 family mpls
set interfaces fe-1/2/1 unit 5 family inet address 10.1.1.5/30
set interfaces fe-1/2/1 unit 5 family inet6
set interfaces fe-1/2/1 unit 5 family mpls
set interfaces lo0 unit 2 family inet address 1.1.1.2/32
set protocols mpls ipv6-tunneling
set protocols mpls interface fe-1/2/0.2
set protocols mpls interface fe-1/2/1.5
set protocols bgp group toCE1 type external
set protocols bgp group toCE1 local-address ::10.1.1.2
set protocols bgp group toCE1 family inet6 unicast
set protocols bgp group toCE1 export send-bgp6
set protocols bgp group toCE1 peer-as 1
set protocols bgp group toCE1 neighbor ::10.1.1.1
set protocols bgp group toPE2 type internal
set protocols bgp group toPE2 local-address 1.1.1.2
set protocols bgp group toPE2 family inet6 labeled-unicast explicit-null
set protocols bgp group toPE2 export next-hop-self
set protocols bgp group toPE2 export send-v6
set protocols bgp group toPE2 neighbor 1.1.1.4
set protocols ospf area 0.0.0.0 interface fe-1/2/1.5
set protocols ospf area 0.0.0.0 interface lo0.2 passive
set protocols ldp interface fe-1/2/1.5
```

```

set policy-options policy-statement next-hop-self then next-hop self
set policy-options policy-statement send-bgp6 from family inet6
set policy-options policy-statement send-bgp6 from protocol bgp
set policy-options policy-statement send-bgp6 then accept
set policy-options policy-statement send-v6 from family inet6
set policy-options policy-statement send-v6 from protocol bgp
set policy-options policy-statement send-v6 from protocol direct
set policy-options policy-statement send-v6 then accept
set routing-options router-id 1.1.1.2
set routing-options autonomous-system 2

```

Device PE2

```

set interfaces fe-1/2/0 unit 10 family inet address 10.1.1.10/30
set interfaces fe-1/2/0 unit 10 family inet6
set interfaces fe-1/2/0 unit 10 family mpls
set interfaces fe-1/2/1 unit 13 family inet6 address ::10.1.1.13/126
set interfaces fe-1/2/1 unit 13 family mpls
set interfaces lo0 unit 4 family inet address 1.1.1.4/32
set protocols mpls ipv6-tunneling
set protocols mpls interface fe-1/2/0.10
set protocols mpls interface fe-1/2/1.13
set protocols bgp group toPE1 type internal
set protocols bgp group toPE1 local-address 1.1.1.4
set protocols bgp group toPE1 family inet6 labeled-unicast explicit-null
set protocols bgp group toPE1 export next-hop-self
set protocols bgp group toPE1 export send-v6
set protocols bgp group toPE1 neighbor 1.1.1.2
set protocols bgp group toCE3 type external
set protocols bgp group toCE3 local-address ::10.1.1.13
set protocols bgp group toCE3 family inet6 unicast
set protocols bgp group toCE3 export send-bgp6
set protocols bgp group toCE3 peer-as 3
set protocols bgp group toCE3 neighbor ::10.1.1.14
set protocols ospf area 0.0.0.0 interface fe-1/2/0.10
set protocols ospf area 0.0.0.0 interface lo0.4 passive
set protocols ldp interface fe-1/2/0.10
set policy-options policy-statement next-hop-self then next-hop self
set policy-options policy-statement send-bgp6 from family inet6
set policy-options policy-statement send-bgp6 from protocol bgp

```

```

set policy-options policy-statement send-bgp6 then accept
set policy-options policy-statement send-v6 from family inet6
set policy-options policy-statement send-v6 from protocol bgp
set policy-options policy-statement send-v6 from protocol direct
set policy-options policy-statement send-v6 then accept
set routing-options router-id 1.1.1.4
set routing-options autonomous-system 2

```

Device P

```

set interfaces fe-1/2/0 unit 6 family inet address 10.1.1.6/30
set interfaces fe-1/2/0 unit 6 family inet6
set interfaces fe-1/2/0 unit 6 family mpls
set interfaces fe-1/2/1 unit 9 family inet address 10.1.1.9/30
set interfaces fe-1/2/1 unit 9 family inet6
set interfaces fe-1/2/1 unit 9 family mpls
set interfaces lo0 unit 3 family inet address 1.1.1.3/32
set protocols mpls interface fe-1/2/0.6
set protocols mpls interface fe-1/2/1.9
set protocols ospf area 0.0.0.0 interface fe-1/2/0.6
set protocols ospf area 0.0.0.0 interface fe-1/2/1.9
set protocols ospf area 0.0.0.0 interface lo0.3 passive
set protocols ldp interface fe-1/2/0.6
set protocols ldp interface fe-1/2/1.9
set routing-options router-id 1.1.1.3
set routing-options autonomous-system 2

```

Device CE1

```

set interfaces fe-1/2/0 unit 1 family inet6 address ::10.1.1.1/126
set interfaces lo0 unit 1 family inet6 address ::1.1.1.1/128
set protocols bgp group toPE1 type external
set protocols bgp group toPE1 local-address ::10.1.1.1
set protocols bgp group toPE1 family inet6 unicast
set protocols bgp group toPE1 export send-v6
set protocols bgp group toPE1 peer-as 2
set protocols bgp group toPE1 neighbor ::10.1.1.2

```

```

set policy-options policy-statement send-v6 from family inet6
set policy-options policy-statement send-v6 from protocol direct
set policy-options policy-statement send-v6 then accept
set routing-options router-id 1.1.1.1
set routing-options autonomous-system 1

```

Device CE3

```

set interfaces fe-1/2/0 unit 14 family inet6 address ::10.1.1.14/126
set interfaces lo0 unit 5 family inet6 address ::1.1.1.5/128
set protocols bgp group toPE2 type external
set protocols bgp group toPE2 local-address ::10.1.1.14
set protocols bgp group toPE2 family inet6 unicast
set protocols bgp group toPE2 export send-v6
set protocols bgp group toPE2 peer-as 2
set protocols bgp group toPE2 neighbor ::10.1.1.13
set policy-options policy-statement send-v6 from family inet6
set policy-options policy-statement send-v6 from protocol direct
set policy-options policy-statement send-v6 then accept
set routing-options router-id 1.1.1.5
set routing-options autonomous-system 3

```

Configuring Device PE1

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the interfaces.

```

[edit interfaces]
user@PE1# set fe-1/2/0 unit 2 family inet6 address ::10.1.1.2/126
user@PE1# set fe-1/2/0 unit 2 family mpls
user@PE1# set fe-1/2/1 unit 5 family inet address 10.1.1.5/30
user@PE1# set fe-1/2/1 unit 5 family inet6
user@PE1# set fe-1/2/1 unit 5 family mpls
user@PE1# set lo0 unit 2 family inet address 1.1.1.2/32

```

2. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@PE1# set ipv6-tunneling
user@PE1# set interface fe-1/2/0.2
user@PE1# set interface fe-1/2/1.5
```

3. Configure BGP.

```
[edit protocols bgp]
user@PE1# set group toCE1 type external
user@PE1# set group toCE1 local-address ::10.1.1.2
user@PE1# set group toCE1 family inet6 unicast
user@PE1# set group toCE1 export send-bgp6
user@PE1# set group toCE1 peer-as 1
user@PE1# set group toCE1 neighbor ::10.1.1.1
user@PE1# set group toPE2 type internal
user@PE1# set group toPE2 local-address 1.1.1.2
user@PE1# set group toPE2 family inet6 labeled-unicast explicit-null
user@PE1# set group toPE2 export next-hop-self
user@PE1# set group toPE2 export send-v6
user@PE1# set group toPE2 neighbor 1.1.1.4
```

4. Configure OSPF

```
[edit protocols ospf area 0.0.0.0]
user@PE1# set interface fe-1/2/1.5
user@PE1# set interface lo0.2 passive
```

5. Configure a signaling protocol.

```
[edit protocols]
user@PE1# set ldp interface fe-1/2/1.5
```

6. Configure the routing policies.

```
[edit policy-options]
user@PE1# set policy-statement next-hop-self then next-hop self
user@PE1# set policy-statement send-bgp6 from family inet6
user@PE1# set policy-statement send-bgp6 from protocol bgp
```



```

user@PE1# set policy-statement send-bgp6 then accept
user@PE1# set policy-statement send-v6 from family inet6
user@PE1# set policy-statement send-v6 from protocol bgp
user@PE1# set policy-statement send-v6 from protocol direct
user@PE1# set policy-statement send-v6 then accept

```

7. Configure the router ID and the autonomous system (AS) number.

```

[edit routing-options]
user@PE1# set router-id 1.1.1.2
user@PE1# set autonomous-system 2

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show policy-options**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@R1# show interfaces
fe-1/2/0 {
  unit 2 {
    family inet6 {
      address ::10.1.1.2/126;
    }
    family mpls;
  }
}
fe-1/2/1 {
  unit 5 {
    family inet {
      address 10.1.1.5/30;
    }
    family inet6;
    family mpls;
  }
}
lo0 {
  unit 2 {
    family inet {
      address 1.1.1.2/32;
    }
  }
}

```

```

user@R1# show policy-options
policy-statement next-hop-self {
    then {
        next-hop self;
    }
}
policy-statement send-bgp6 {
    from {
        family inet6;
        protocol bgp;
    }
    then accept;
}
policy-statement send-v6 {
    from {
        family inet6;
        protocol [ bgp direct ];
    }
    then accept;
}

```

```

user@R1# show protocols
mpls {
    ipv6-tunneling;
    interface fe-1/2/0.2;
    interface fe-1/2/1.5;
}
bgp {
    group toCE1 {
        type external;
        local-address ::10.1.1.2;
        family inet6 {
            unicast;
        }
        export send-bgp6;
        peer-as 1;
        neighbor ::10.1.1.1;
    }
    group toPE2 {
        type internal;
        local-address 1.1.1.2;
        family inet6 {
            labeled-unicast {
                explicit-null;
            }
        }
    }
}

```

```

    }
  }
  export [ next-hop-self send-v6 ];
  neighbor 1.1.1.4;
}
}
ospf {
  area 0.0.0.0 {
    interface fe-1/2/1.5;
    interface lo0.2 {
      passive;
    }
  }
}
ldp {
  interface fe-1/2/1.5;
}

```

```

user@R1# show routing-options
router-id 1.1.1.2;
autonomous-system 2;

```

If you are done configuring the device, enter **commit** from configuration mode.
 Configure the other devices in the topology, as shown in [“CLI Quick Configuration” on page 84](#).

Verification

IN THIS SECTION

- [Verifying That the CE Devices Have Connectivity | 91](#)

Confirm that the configuration is working properly.

Verifying That the CE Devices Have Connectivity

Purpose

Make sure that the tunnel is operating.

Action

From operational mode, enter the **ping** command.

```
user@CE1> ping ::10.1.1.14
```

```
PING6(56=40+8+8 bytes) ::10.1.1.1 --> ::10.1.1.14
16 bytes from ::10.1.1.14, icmp_seq=0 hlim=61 time=10.687 ms
16 bytes from ::10.1.1.14, icmp_seq=1 hlim=61 time=9.239 ms
16 bytes from ::10.1.1.14, icmp_seq=2 hlim=61 time=1.842 ms
```

user@CE3> **ping ::10.1.1.1**

```
PING6(56=40+8+8 bytes) ::10.1.1.14 --> ::10.1.1.1
16 bytes from ::10.1.1.1, icmp_seq=0 hlim=61 time=1.484 ms
16 bytes from ::10.1.1.1, icmp_seq=1 hlim=61 time=1.338 ms
16 bytes from ::10.1.1.1, icmp_seq=2 hlim=61 time=1.351 ms
```

Meaning

The IPv6 CE devices can communicate over the core IPv4 network.

RELATED DOCUMENTATION

[Basic MPLS Configuration](#) | 36

Next-Hop-Based Dynamic Tunnels

IN THIS SECTION

- [Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels](#) | 93
- [Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview](#) | 111
- [Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels](#) | 114
- [Next-Hop-Based Dynamic Tunnel Localization Overview](#) | 126

Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels

IN THIS SECTION

- [Requirements | 93](#)
- [Overview | 93](#)
- [Configuration | 97](#)
- [Verification | 105](#)
- [Troubleshooting | 110](#)

This example shows how to configure a dynamic MPLS-over-UDP tunnel that includes a tunnel composite next hop. The MPLS-over-UDP feature provides a scaling advantage on the number of IP tunnels supported on a device.

Starting in Junos OS Release 18.3R1, MPLS-over-UDP tunnels are supported on PTX Series routers and QFX Series switches. For every dynamic tunnel configured on a PTX router or a QFX switch, a tunnel composite next hop, an indirect next hop, and a forwarding next hop is created to resolve the tunnel destination route. You can also use policy control to resolve the dynamic tunnel over select prefixes by including the [forwarding-rib](#) configuration statement at the `[edit routing-options dynamic-tunnels]` hierarchy level.

Requirements

This example uses the following hardware and software components:

- Five MX Series routers with MPCs and MICs.
- Junos OS Release 16.2 or later running on the PE routers.

Before you begin:

1. Configure the device interfaces, including the loopback interface.
2. Configure the router ID and autonomous system number for the device.
3. Establish an internal BGP (IBGP) session with the remote PE device.
4. Establish OSPF peering among the devices.

Overview

Starting with Junos OS Release 16.2, a dynamic UDP tunnel supports the creation of a tunnel composite next hop for every UDP tunnel configured. These next-hop-based dynamic UDP tunnels are referred to as MPLS-over-UDP tunnels. The tunnel composite next hop are enabled by default for the MPLS-over-UDP tunnels.

MPLS-over-UDP tunnels can be bidirectional or unidirectional in nature. When the PE devices are connected over MPLS-over-UDP tunnels in both directions, it is called a bidirectional MPLS-over-UDP tunnel. When two PE devices are connected over MPLS-over-UDP tunnel in one direction, and over MPLS/IGP in the other direction, it is called an unidirectional MPLS-over-UDP tunnel.

Unidirectional MPLS-over-UDP tunnels are used in migration scenarios, or in cases where two PE devices provide connectivity to each other over two disjoint networks. Because reverse direction tunnel does not exist for unidirectional MPLS-over-UDP tunnels, you must configure a filter-based MPLS-over-UDP decapsulation on the remote PE device for forwarding the traffic.

Starting in Junos OS Release 18.2R1, on PTX series routers and QFX10000 with unidirectional MPLS-over-UDP tunnels, you must configure the remote PE device with an input filter for MPLS-over-UDP packets, and an action for decapsulating the IP and UDP headers for forwarding the packets in the reverse tunnel direction.

For example, on the remote PE device, Device PE2, the following configuration is required for unidirectional MPLS-over-UDP tunnels:

PE2

```
[edit firewall filter]
user@host# set Decap_Filter term udp_decap from protocol udp
user@host# set Decap_Filter term udp_decap from destination-port 6635
user@host# set Decap_Filter term udp_decap then count UDP_PKTS
user@host# set Decap_Filter term udp_decap then decapsulate mpls-in-udp
user@host# set Decap_Filter term def then count def_pkt
user@host# set Decap_Filter term def then accept
```

In the above sample configuration, *Decap_Filter* is the name of the firewall filter used for MPLS-over-UDP decapsulation. The term *udp_decap* is the input filter for accepting UDP packets on the core-facing interface of Device PE2, and then decapsulate the MPLS-over-UDP packets to MPLS-over-IP packets for forwarding.

You can use the existing firewall operational mode commands, such as **show firewall filter** to view the filter-based MPLS-over-UDP decapsulation.

For example:

```
user@host >show firewall filter Decap_Filter
```

```
Filter: Decap_Filter
Counters:
Name                                     Bytes                                     Packets
```

UDP_PKTS	16744	149
def_pkt	13049	136

NOTE:

For unidirectional MPLS-over-UDP tunnels:

- Only IPv4 address is supported as the outer header. Filter-based MPLS-over-UDP decapsulation does not support IPv6 address in the outer header.
- Only the default routing instance is supported after decapsulation.

Starting in Junos OS Release 17.1, on MX Series routers with MPCs and MICs, the scaling limit of MPLS-over-UDP tunnels is increased.

Starting in Junos Release 19.2R1, on MX Series routers with MPCs and MICs, carrier supporting carrier (CSC) architecture can be deployed with MPLS-over-UDP tunnels carrying MPLS traffic over dynamic IPv4 UDP tunnels that are established between supporting carrier's PE devices. With this enhancement, the scaling advantage that the MPLS-over-UDP tunnels provided is further increased. The CSC support with MPLS-over-UDP tunnel is not supported for IPv6 UDP tunnel.

The existing dynamic tunnel feature requires complete static configuration. Currently, the tunnel information received from peer devices in advertised routes is ignored. Starting in Junos OS Release 17.4R1, on MX Series routers, the next-hop-based dynamic MPLS-over-UDP tunnels are signaled using BGP encapsulation extended community. BGP export policy is used to specify the tunnel types, advertise the sender side tunnel information, and parse and convey the receiver side tunnel information. A tunnel is created according to the received type tunnel community.

Multiple tunnel encapsulations are supported by BGP. On receiving multiple capability, the next-hop-based dynamic tunnel is created based on the configured BGP policy and tunnel preference. The tunnel preference should be consistent across both the tunnel ends for the tunnel to be set up. By default, MPLS-over-UDP tunnel is preferred over GRE tunnels. If dynamic tunnel configuration exists, it takes precedence over received tunnel community.

When configuring a next-hop-based dynamic MPLS-over-UDP tunnel, be aware of the following considerations:

- An IBGP session must be configured between the PE devices.
- A switchover between the next-hop-based dynamic tunnel encapsulations (UDP and GRE) is allowed, and this can impact network performance in terms of the supported IP tunnel scaling values in each mode.
- Having both GRE and UDP next-hop-based dynamic tunnel encapsulation types for the same tunnel destination leads to a commit failure.

- For unidirectional MPLS-over-UDP tunnels, you must explicitly configure filter-based MPLS-over-UDP decapsulation on the remote PE device for the packets to be forwarded.
- Graceful Routing Engine switchover (GRES) is supported with MPLS-over-UDP, and the MPLS-over-UDP tunnel type flags are unified ISSU and NSR compliant.
- MPLS-over-UDP tunnels are supported on virtual MX (vMX).
- MPLS-over-UDP tunnels support dynamic GRE tunnel creation based upon new IPv4-mapped-IPv6 next hops.
- MPLS-over-UDP tunnel are supported in interoperability with contrail, wherein the MPLS-over-UDP tunnels are created from the contrail vRouter to an MX gateway. To enable this, the following community is required to be advertised in the route from the MX Series router to the contrail vRouter:

```
[edit policy-options community]
  udp members 0x030c:64512:13;
```


At a given point in time, only one tunnel type is supported on the contrail vRouter—next-hop-based dynamic GRE tunnels, MPLS-over-UDP tunnels, or VXLAN.

- The following features are not supported with the next-hop-based dynamic MPLS-over-UDP tunnel configuration:
 - RSVP automatic mesh
 - Plain IPV6 GRE and UDP tunnel configuration
 - Logical systems

Topology

[Figure 4 on page 97](#) illustrates a Layer 3 VPN scenario over dynamic MPLS-over-UDP tunnels. The customer edge (CE) devices, CE1 and CE2, connect to provider edge (PE) devices, PE1 and PE2, respectively. The PE devices are connected to a provider device (Device P1), and an internal BGP (IBGP) session interconnects the two PE devices. A dynamic next-hop-based bidirectional MPL-over-UDP tunnel is configured between the PE devices.

Figure 4: Dynamic MPLS-over-UDP Tunnels

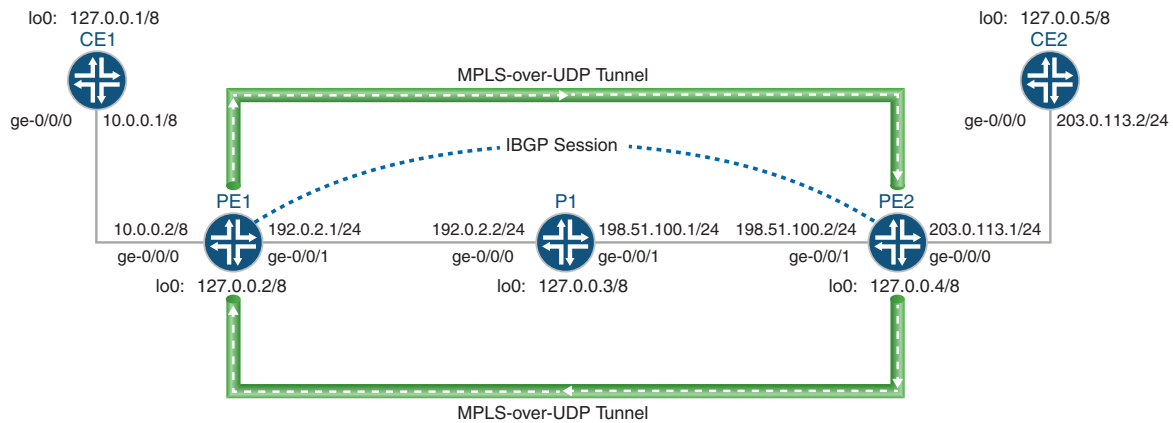

The MPLS-over-UDP tunnel is handled as follows:

1. After a MPLS-over-UDP tunnel is configured, a tunnel destination mask route with a tunnel composite next hop is created for the tunnel in the inet.3 routing table. This IP tunnel route is withdrawn only when the dynamic tunnel configuration is deleted.

The tunnel composite next-hop attributes include the following:

- When Layer 3 VPN composite next hop is disabled—Source and destination address, encapsulation string, and VPN label.
 - When Layer 3 VPN composite next hop and per-prefix VPN label allocation are enabled—Source address, destination address, and encapsulation string.
 - When Layer 3 VPN composite next hop is enabled and per-prefix VPN label allocation is disabled—Source address, destination address, and encapsulation string. The route in this case is added to the other virtual routing and forwarding instance table with a secondary route.
2. The PE devices are interconnected using an IBGP session. The IBGP route next hop to a remote BGP neighbor is the protocol next hop, which is resolved using the tunnel mask route with the tunnel next hop.
 3. After the protocol next hop is resolved over the tunnel composite next hop, indirect next hops with forwarding next hops are created.
 4. The tunnel composite next hop is used to forward the next hops of the indirect next hops.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

CE1

```
set interfaces ge-0/0/0 unit 0 family inet address 10.0.0.1/8
set interfaces lo0 unit 0 family inet address 127.0.0.1/8
set routing-options router-id 127.0.0.1
set routing-options autonomous-system 200
set protocols bgp group ce1-pe1 export export-loopback-direct
set protocols bgp group ce1-pe1 peer-as 100
set protocols bgp group ce1-pe1 neighbor 10.0.0.2
set policy-options policy-statement export-loopback-direct term term-1 from interface lo0.0
set policy-options policy-statement export-loopback-direct term term-1 from route-filter 127.0.0.1/8
  exact
set policy-options policy-statement export-loopback-direct term term-1 then accept
```

CE2

```
set interfaces ge-0/0/0 unit 0 family inet address 203.0.113.2/24
set interfaces lo0 unit 0 family inet address 127.0.0.5/8
set routing-options router-id 127.0.0.5
set routing-options autonomous-system 200
set protocols bgp group ce1-pe1 export export-loopback-direct
set protocols bgp group ce1-pe1 peer-as 100
set protocols bgp group ce1-pe1 neighbor 203.0.113.1
set policy-options policy-statement export-loopback-direct term term-1 from interface lo0.0
set policy-options policy-statement export-loopback-direct term term-1 from route-filter 127.0.0.5/8
  exact
set policy-options policy-statement export-loopback-direct term term-1 then accept
```

PE1

```
set interfaces ge-0/0/0 unit 0 family inet address 10.0.0.2/8
set interfaces ge-0/0/1 unit 0 family inet address 192.0.2.1/24
set interfaces ge-0/0/1 unit 0 family mpls
```

```

set interfaces lo0 unit 0 family inet address 127.0.0.2/8
set routing-options static route 33.0.0.0/8 next-hop 192.0.2.2
set routing-options router-id 127.0.0.2
set routing-options autonomous-system 100
set routing-options forwarding-table export pplib
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe2 source-address 127.0.0.2
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe2 udp
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe2 destination-networks 127.0.0.0/8
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 127.0.0.2
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 127.0.0.4
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-instances MPLS-over-UDP-PE1 instance-type vrf
set routing-instances MPLS-over-UDP-PE1 interface ge-0/0/0.0
set routing-instances MPLS-over-UDP-PE1 route-distinguisher 127.0.0.2:1
set routing-instances MPLS-over-UDP-PE1 vrf-target target:600:1
set routing-instances MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 peer-as 200
set routing-instances MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 neighbor 10.0.0.1 as-override

```

P1

```

set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.3/8
set routing-options router-id 127.0.0.3
set routing-options autonomous-system 100
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

PE2

```

set interfaces ge-0/0/0 unit 0 family inet address 203.0.113.1/24
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.4/8
set routing-options nonstop-routing
set routing-options router-id 127.0.0.4
set routing-options autonomous-system 100
set routing-options forwarding-table export pplb
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe1 source-address 127.0.0.4
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe1 udp
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe1 destination-networks 127.0.0.0/8
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 127.0.0.4
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 127.0.0.2
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-instances MPLS-over-UDP-PE2 instance-type vrf
set routing-instances MPLS-over-UDP-PE2 interface ge-0/0/0.0
set routing-instances MPLS-over-UDP-PE2 route-distinguisher 127.0.0.4:1
set routing-instances MPLS-over-UDP-PE2 vrf-target target:600:1
set routing-instances MPLS-over-UDP-PE2 protocols bgp group ebgp peer-as 200
set routing-instances MPLS-over-UDP-PE2 protocols bgp group ebgp neighbor 203.0.113.2 as-override

```

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the device interfaces including the loopback interface of the device.

```

[edit interfaces]
user@PE1# set ge-0/0/0 unit 0 family inet address 10.0.0.2/8
user@PE1# set ge-0/0/1 unit 0 family inet address 192.0.2.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 127.0.0.2/8

```

2. Configure a static route for routes from Device PE1 with Device P1 as the next-hop destination.

```
[edit routing-options]
user@PE1# set static route 33.0.0.0/8 next-hop 192.0.2.2
```

3. Configure the router-ID and autonomous system number for Device PE1.

```
[edit routing-options]
user@PE1# set router-id 127.0.0.2
user@PE1# set autonomous-system 100
```

4. (PTX Series only) Configure policy control to resolve the MPLS-over-UDP dynamic tunnel route over select prefixes.

```
[edit routing-options dynamic-tunnels]
user@PTX-PE1# set forwarding-rib inet.0 inet-import dynamic-tunnel-fwd-route-import
```

5. (PTX Series only) Configure the inet-import policy for resolving dynamic tunnel destination routes over

```
[edit policy-options]
user@PTX-PE1# set policy-statement dynamic-tunnel-fwd-route-import term 1 from route-filter 127.0.0.0/8
exact
user@PTX-PE1# set policy-statement dynamic-tunnel-fwd-route-import term 1 then accept
user@PTX-PE1# set policy-options policy-statement dynamic-tunnel-fwd-route-import then reject
```

6. Configure IBGP peering between the PE devices.

```
[edit protocols]
user@PE1# set bgp group IBGP type internal
user@PE1# set bgp group IBGP local-address 127.0.0.2
user@PE1# set bgp group IBGP family inet-vpn unicast
user@PE1# set bgp group IBGP neighbor 127.0.0.4
```

7. Configure OSPF on all the interfaces of Device PE1, excluding the management interface.

```
[edit protocols]
user@PE1# set ospf area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set ospf area 0.0.0.0 interface lo0.0 passive
```

8. Enable next-hop-based dynamic GRE tunnel configuration on Device PE1.

NOTE: This step is required only for illustrating the implementation difference between next-hop-based dynamic GRE tunnels and MPLS-over-UDP tunnels.

```
[edit routing-options]
user@PE1# set dynamic-tunnels gre next-hop-based-tunnel
```

9. Configure the MPLS-over-UDP tunnel parameters from Device PE1 to Device PE2.

```
[edit routing-options]
user@PE1# set dynamic-tunnels udp-dyn-tunnel-to-pe2 source-address 127.0.0.2
user@PE1# set dynamic-tunnels udp-dyn-tunnel-to-pe2 udp
user@PE1# set dynamic-tunnels udp-dyn-tunnel-to-pe2 destination-networks 127.0.0.0/8
```

10. Configure a VRF routing instance on Device PE1 and other routing instance parameters.

```
[edit routing-instances]
user@PE1# set MPLS-over-UDP-PE1 instance-type vrf
user@PE1# set MPLS-over-UDP-PE1 interface ge-0/0/0.0
user@PE1# set MPLS-over-UDP-PE1 route-distinguisher 127.0.0.2:1
user@PE1# set MPLS-over-UDP-PE1 vrf-target target:600:1
```

11. Enable BGP in the routing instance configuration for peering with Device CE1.

```
[edit routing-instances]
user@PE1# set MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 peer-as 200
user@PE1# set MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 neighbor 10.0.0.1 as-override
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  unit 0 {
```

```

        family inet {
            address 10.0.0.2/8;
        }
    }
}
ge-0/0/1 {
    unit 0 {
        family inet {
            address 192.0.2.1/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 127.0.0.2/8;
        }
    }
}

```

```

user@PE1# show routing-options
static {
    route 33.0.0.0/8 next-hop 192.0.2.2;
}
router-id 127.0.0.2;
autonomous-system 100;
forwarding-table {
    export pplb;
}
dynamic-tunnels {
    gre next-hop-based-tunnel;
    udp-dyn-tunnel-to-pe2 {
        source-address 127.0.0.2;
        udp;
        destination-networks {
            127.0.0.0/8;
        }
    }
}

```

```

user@PE1# show protocols
bgp {

```

```

group IBGP {
  type internal;
  local-address 127.0.0.2;
  family inet-vpn {
    unicast;
  }
  neighbor 127.0.0.4;
}
}
ospf {
  area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface lo0.0 {
      passive;
    }
  }
}
}

```

user@PE1# **show routing-instances**

```

MPLS-over-UDP-PE1 {
  instance-type vrf;
  interface ge-0/0/0.0;
  route-distinguisher 127.0.0.2:1;
  vrf-target target:600:1;
  protocols {
    bgp {
      group pe1-ce1 {
        peer-as 200;
        neighbor 10.0.0.1 {
          as-override;
        }
      }
    }
  }
}
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- Verifying the Connection Between PE Devices | 105
- Verify the Dynamic Tunnel Routes on Device PE1 | 106
- Verify the Dynamic Tunnel Routes on Device PE2 | 108
- Verifying That the Routes Have the Expected Indirect-Next-Hop Flag | 108

Confirm that the configuration is working properly.

Verifying the Connection Between PE Devices

Purpose

Verify the BGP peering status between Device PE1 and Device PE2, and the BGP routes received from Device PE2.

Action

From operational mode, run the **show bgp summary** and **show route receive-protocol bgp ip-address table bgp.l3vpn.0** commands.

```
user@PE1> show bgp summary
```

```
Groups: 2 Peers: 2 Down peers: 0
Table          Tot Paths  Act Paths Suppressed    History  Damp State   Pending
bgp.l3vpn.0
                2          2          0          0          0          0
Peer           AS      InPkt   OutPkt   OutQ   Flaps  Last Up/Dwn
State|#Active/Received/Accepted/Damped...
127.0.0.4      100      139     136      0       0      58:23 Establ

  bgp.l3vpn.0: 2/2/2/0
  MPLS-over-UDP-PE1.inet.0: 2/2/2/0
10.0.0.1       200      135     136      0       0      58:53 Establ

  MPLS-over-UDP-PE1.inet.0: 1/1/1/0
```

```
user@PE1> show route receive-protocol bgp 127.0.0.4 table bgp.l3vpn.0
```

```

bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
  Prefix                Nexthop          MED      Lclpref    AS path
  127.0.0.4:1:127.0.0.5/8
*                   127.0.0.4                100        200 I
  127.0.0.4:1:200.1.1.0/24
*                   127.0.0.4                100        I

```

Meaning

- In the first output, the BGP session state is **Establ**, which means that the session is up and the PE devices are peered.
- In the second output, Device PE1 has learned two BGP routes from Device PE2.

Verify the Dynamic Tunnel Routes on Device PE1

Purpose

Verify the routes in the inet.3 routing table and the dynamic tunnel database information on Device PE1.

Action

From operational mode, run the **show route table inet.3**, **show dynamic-tunnels database terse**, **show dynamic-tunnels database**, and **show dynamic-tunnels database summary** commands.

```
user@PE1> show route table inet.3
```

```

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

127.0.0.0/8      *[Tunnel/300] 00:21:18
                  Tunnel
127.0.0.4/8      *[Tunnel/300] 00:21:18
                  Tunnel Composite

```

```
user@PE1> show dynamic-tunnels database terse
```

```

Table: inet.3

Destination-network: 127.0.0.0/8

```

Destination	Source	Next-hop	Type	Status
127.0.0.4/8	127.0.0.2	0xb395b10 nhid 613	udp	Up

user@PE1> **show dynamic-tunnels database**

```
Table: inet.3

Destination-network: 55.0.0.0/8

Destination-network: 55.66.0.0/16

Destination-network: 55.66.77.0/24
Tunnel to: 127.0.0.4/8
Reference count: 2
Next-hop type: UDP
Source address: 127.0.0.2 Tunnel Id: 2
Next hop: tunnel-composite, 0xb395b10, nhid 613
VPN Label: Push 299776 Reference count: 3
Traffic Statistics: Packets 0, Bytes 0
State: Up
```

user@PE1> **show dynamic-tunnels database summary**

```
Dynamic Tunnels, Total 1 displayed
GRE Tunnel:
Active Tunnel Mode, Next Hop Base
IFL Based, Total 0 displayed, Up 0, Down 0
Nexthop Based, Total 0 displayed, Up 0, Down 0
RSVP Tunnel:
Total 0 displayed
UDP Tunnel:
Total 1 displayed, Up 1, Down 0
```

Meaning

- In the first output, because Device PE1 is configured with the MPLS-over-UDP tunnel, a tunnel composite route is created for the inet.3 routing table route entry.
- In the remaining outputs, the MPLS-over-UDP tunnel is displayed with the tunnel encapsulation type, tunnel next hop parameters, and tunnel status.

Verify the Dynamic Tunnel Routes on Device PE2

Purpose

Verify the routes in the inet.3 routing table and the dynamic tunnel database information on Device PE2.

Action

From operational mode, run the **show route table inet.3**, and the **show dynamic-tunnels database terse** commands.

```
user@PE2> show route table inet.3
```

```
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

127.0.0.0/8      *[Tunnel/300] 00:39:31
                  Tunnel
127.0.0.2/8      *[Tunnel/300] 00:24:53
                  Tunnel Composite
```

```
user@PE1> show dynamic-tunnels database terse
```

```
Table: inet.3

Destination-network: 127.0.0.0/8
Destination      Source      Next-hop      Type      Status
127.0.0.2/8      127.0.0.4   0xb395450 nhid 615   udp      Up
```

Meaning

The outputs show the MPLS-over-UDP tunnel creation and the next-hop ID assigned as the next-hop interface, similar to Device PE1.

Verifying That the Routes Have the Expected Indirect-Next-Hop Flag

Purpose

Verify that Device PE1 and Device PE2 are configured to maintain the indirect next hop to forwarding next-hop binding on the Packet Forwarding Engine forwarding table.

Action

From operational mode, run the **show krt indirect-next-hop** command on Device PE1 and Device PE2.

```
user@PE1> show krt indirect-next-hop
```

```

Indirect Nexthop:
Index: 1048574 Protocol next-hop address: 127.0.0.4
  RIB Table: bgp.l3vpn.0
  Label: Push 299776
  Policy Version: 1                      References: 1
  Locks: 3                               0xb2ab630
  Flags: 0x0
  INH Session ID: 0x0
  INH Version ID: 0
  Ref RIB Table: unknown

    Tunnel type: UDP, Reference count: 3, nhid: 613
      Destination address: 127.0.0.4, Source address: 127.0.0.2
      Tunnel id: 2, VPN Label: Push 299776, TTL action: prop-ttl
      IGP FRR Interesting proto count : 1
      Chain IGP FRR Node Num          : 1
        IGP Resolver node(hex)        : 0xb3c70dc
        IGP Route handle(hex)          : 0xb1ae688      IGP rt_entry protocol
      : Tunnel
        IGP Actual Route handle(hex) : 0x0              IGP Actual rt_entry protocol
      : Any

```

user@PE2> **show krt indirect-next-hop**

```

Indirect Nexthop:
Index: 1048575 Protocol next-hop address: 127.0.0.2
  RIB Table: bgp.l3vpn.0
  Label: Push 299776
  Policy Version: 1                      References: 2
  Locks: 3                               0xb2ab740
  Flags: 0x0
  INH Session ID: 0x0
  INH Version ID: 0
  Ref RIB Table: unknown

    Tunnel type: UDP, Reference count: 3, nhid: 615
      Destination address: 127.0.0.2, Source address: 127.0.0.4
      Tunnel id: 1, VPN Label: Push 299776, TTL action: prop-ttl
      IGP FRR Interesting proto count : 2
      Chain IGP FRR Node Num          : 1
        IGP Resolver node(hex)        : 0xb3d3a28
        IGP Route handle(hex)          : 0xb1ae634      IGP rt_entry protocol
      : Tunnel
        IGP Actual Route handle(hex) : 0x0              IGP Actual rt_entry protocol
      : Any

```

Meaning

The outputs show that a next-hop-based dynamic MPLS-over-UDP tunnel is created between the PE devices.

Troubleshooting

IN THIS SECTION

- [Troubleshooting Commands | 110](#)

To troubleshoot the next-hop-based dynamic tunnels, see:

Troubleshooting Commands

Problem

The next-hop-based dynamic MPLS-over-UDP tunnel configuration is not taking effect.

Solution

To troubleshoot the next-hop-based MPLS-over-UDP tunnel configuration, use the following **traceroute** commands at the **[edit routing-options dynamic-tunnels]** statement hierarchy:

- **traceoptions file *file-name***
- **traceoptions file size *file-size***
- **traceoptions flag all**

For example:

```
[edit routing-options dynamic-tunnels]
traceoptions {
  file udp_dyn_pe1.wri size 4294967295;
  flag all;
}
```

Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview


With the rise in deployment of high-scale IP tunnels in data centers, there is a need to add security measures that allow users to limit malicious traffic from compromised virtual machines (VMs). One possible attack is the injecting of traffic into an arbitrary customer VPN from a compromised server through the gateway router. In such cases, anti-spoofing checks on IP tunnels ensure that only legitimate sources are injecting traffic into data centers from their designated IP tunnels.

Next-hop-based dynamic IP tunnels create a tunnel composite next hop for every dynamic tunnel created on the device. Because next-hop-based dynamic tunnels remove the dependency on physical interfaces for every new dynamic tunnel configured, configuring next-hop-based dynamic tunnels provides a scaling advantage over the number of dynamic tunnels that can be created on a device. Starting in Junos OS Release 17.1, anti-spoofing capabilities for next-hop-based dynamic IP tunnels is provided for next-hop-based dynamic tunnels. With this enhancement, a security measure is implemented to prevent injecting of traffic into an arbitrary customer VPN from a compromised server through the gateway router.

Anti-spoofing is implemented using reverse path forwarding checks in the Packet Forwarding Engine. The checks are implemented for the traffic coming through the tunnel to the routing instance. Currently, when the gateway router receives traffic from a tunnel, only the destination lookup is done and the packet is forwarded accordingly. When anti-spoofing protection is enabled, the gateway router also does a source address lookup of the encapsulation packet IP header in the VPN, in addition to the tunnel destination lookup. This ensures that legitimate sources are injecting traffic through their designated IP tunnels. As a result, anti-spoofing protection ensures that the tunnel traffic is received from a legitimate source on the designated tunnels.

[Figure 5 on page 112](#) illustrates a sample topology with the requirements for anti-spoofing protection.

Figure 5: Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels

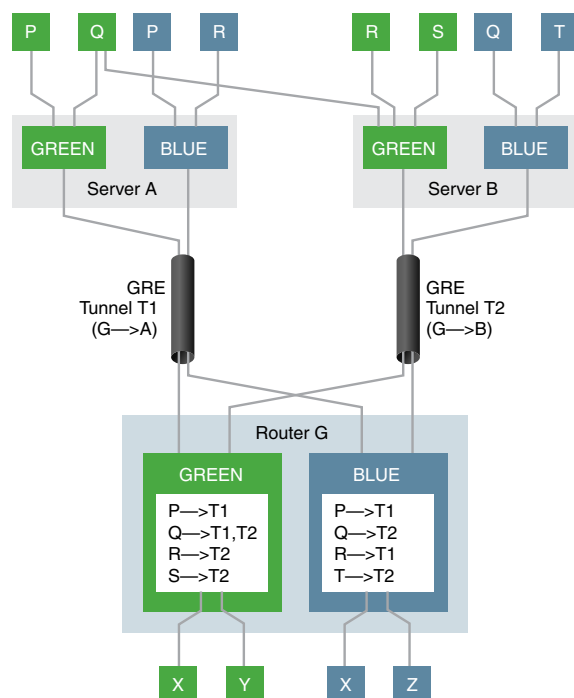

In this example, the gateway router is Router G. Router G has two VPNs—Green and Blue. The two servers, Server A and Server B, can reach the Green and Blue VPNs on Router G through the next-hop-based dynamic tunnels T1 and T2, respectively. Several hosts and virtual machines (P, Q, R, S, and T) connected to the servers can reach the VPNs through the gateway router, Router G. Router G has the virtual routing and forwarding (VRF) tables for Green and Blue VPNs, each populated with the reachability information for the virtual machines in those VPNs.

For example, in VPN Green, Router G uses tunnel T1 to reach host P, tunnel T2 to reach hosts R and S, and load balancing is done between tunnels T1 and T2 to reach the multihomed host Q. In VPN Blue, Router G uses tunnel T1 to reach hosts P and R, and tunnel T2 to reach hosts Q and T.

The check passes for reverse path forwarding when:

- A packet comes from a legitimate source on its designated tunnel.

Host P in VPN Green sends a packet to host X using tunnel T1. Because Router G can reach host P through tunnel T1, it allows the packet to pass and forwards the packet to host X.

- A packet comes from a multihomed source on its designated tunnels.

Host Q in VPN Green is multihomed on servers A and B, and can reach Router G through tunnels T1 and T2. Host Q sends a packet to host Y using tunnel T1, and a packet to host X using tunnel T2. Because Router G can reach host Q through tunnels T1 and T2, it allows the packets to pass and forwards them to hosts Y and X, respectively.

Layer 3 VPNs do not have anti-spoofing protection enabled by default. To enable anti-spoofing for next-hop-based dynamic tunnels, include the **ip-tunnel-rpf-check** statement at the **[edit routing-instances routing-instance-name routing-options forwarding-table]** hierarchy level. The reverse path forwarding check is applied to the VRF routing instance only. The default mode is set to **strict**, where the packet that comes from a source on a nondesignated tunnel does not pass the check. The **ip-tunnel-rpf-check** mode can be set as **loose**, where the reverse path forwarding check fails when the packet comes from a nonexistent source. An optional firewall filter can be configured under the **ip-tunnel-rpf-check** statement to count and log the packets that failed the reverse path forwarding check.

The following sample output shows an anti-spoofing configuration:

```
[edit routing-instances routing-instance-name routing-options forwarding-table]
ip-tunnel-rpf-check {
  mode loose;
  fail-filter filter-name;
}
```

Take the following guidelines under consideration when configuring anti-spoofing protection for next-hop-based dynamic tunnels:

- Anti-spoofing protection can be enabled for IPv4 tunnels and IPv4 data traffic only. The anti-spoofing capabilities are not supported on IPv6 tunnels and IPv6 data traffic.
- Anti-spoofing for next-hop-based dynamic tunnels can detect and prevent a compromised virtual machine (inner source reverse path forwarding check) but not a compromised server that is label-spoofing.
- The next-hop-based IP tunnels can originate and terminate on an inet.0 routing table.
- Anti-spoofing protection is effective when the VRF routing instance has label-switched interfaces (LSIs) (using the **vrf-table-label**), or virtual tunnel (VT) interfaces. With **per-next-hop** label on the VRF routing instance, anti-spoofing protection is not supported.
- The **rpf fail-filter** is applicable only to the inner IP packet.
- Enabling anti-spoofing checks does not affect the scaling limit of the next-hop-based dynamic tunnels on a device.
- The system resource utilization with anti-spoofing protection enabled for the VRF routing instance is slightly higher than the utilization of next-hop-based dynamic tunnels without the anti-spoofing protection enabled.
- Anti-spoofing protection requires additional source IP address checks, which has minimal impact on network performance.
- Graceful Routing Engine switchover (GRES) and in-service software upgrade (ISSU) are supported with anti-spoofing protection.

Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels

IN THIS SECTION

- [Requirements | 114](#)
- [Overview | 114](#)
- [Configuration | 116](#)
- [Verification | 123](#)

This example shows how to configure reverse path forwarding checks for the virtual routing and forwarding (VRF) routing instance to enable anti-spoofing protection for next-hop-based dynamic tunnels. The checks ensure that legitimate sources are injecting traffic through their designated IP tunnels.

Requirements

This example uses the following hardware and software components:

- Three MX Series Routers with MICs, each connected to a host device.
- Junos OS Release 17.1 or later running on one or all the routers.

Before you begin:

- Enable tunnel services configuration on the Flexible PIC Concentrator.
- Configure the router interfaces.
- Configure the router-ID and assign an autonomous system number for the router.
- Establish an internal BGP (IBGP) session with the tunnel endpoints.
- Configure RSVP on all the routers.
- Configure OSPF or any other interior gateway protocol on all the routers.
- Configure two dynamic next-hop-based IP tunnels between the two routers.
- Configure a VRF routing instance for every router-to-host connection.

Overview

Starting in Junos OS Release 17.1, anti-spoofing capabilities are added to next-hop-based dynamic IP tunnels, where checks are implemented for the traffic coming through the tunnel to the routing instance using reverse path forwarding in the Packet Forwarding Engine.

Currently, when the gateway router receives traffic from a tunnel, only the destination address lookup is done before forwarding. With anti-spoofing protection, the gateway router does a source address lookup of the encapsulation packet IP header in the VPN to ensure that legitimate sources are injecting traffic


through their designated IP tunnels. This is called the strict mode and is the default behavior of anti-spoofing protection. To pass traffic from nondesignated tunnels, the reverse path forwarding check is enabled in the loose mode. For traffic received from nonexistent sources, the reverse path forwarding check fails for both the strict and loose modes.

Anti-spoofing is supported on VRF routing instances. To enable anti-spoofing for dynamic tunnels, include the `ip-tunnel-rpf-check` statement at the `[edit routing-instances routing-instance-name routing-options forwarding-table]` hierarchy level.

Topology

Figure 6 on page 115 illustrates a sample network topology enabled with anti-spoofing protection. Routers R0, R1 and R2 are each connected to hosts Host0, Host1, and Host2, respectively. Two generic routing encapsulation (GRE) next-hop-based dynamic tunnels, Tunnel 1 and Tunnel 2 – connect Router R0 with Routers R1 and R2, respectively. The VRF routing instance is running between each router and its connected host devices.

Figure 6: Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels

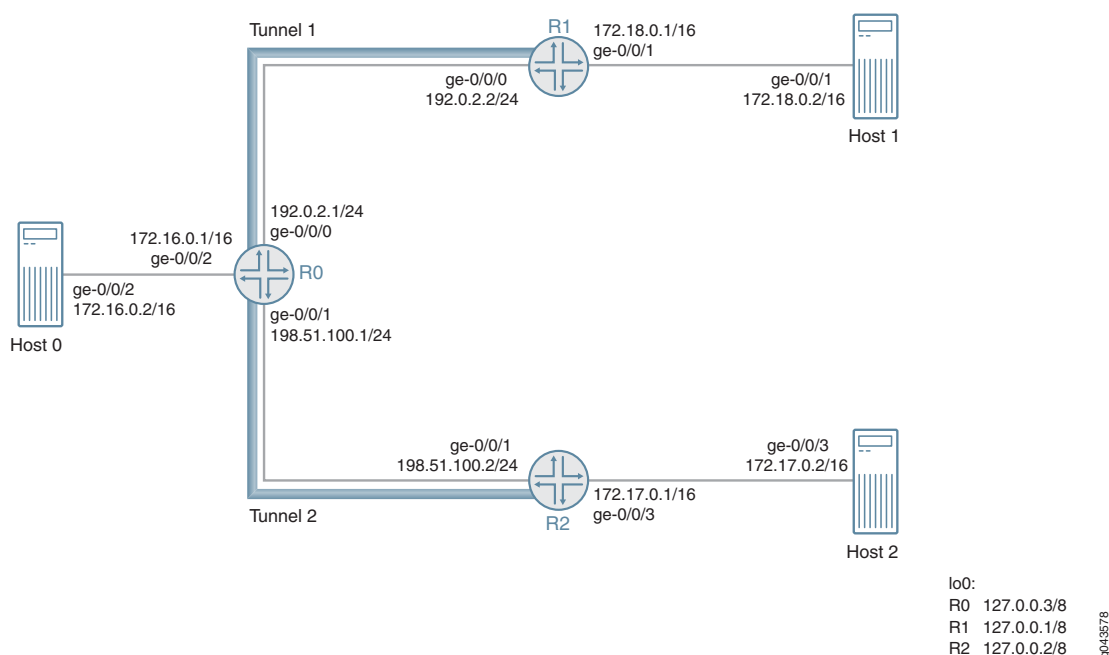

Taking as an example, three packets (Packets A, B, and C) are received on Router 0 from Router R2 through the next-hop-based dynamic GRE tunnel (Tunnel 2). The source IP address of these packets are 172.17.0.2 (Packet A), 172.18.0.2 (Packet B), and 172.20.0.2 (Packet C).

The source IP address of Packets A and B belong to Host 2 and Host 1, respectively. Packet C is a nonexistent source tunnel. The designated tunnel in this example is Tunnel 2, and the nondesignated tunnel is Tunnel 1. Therefore, the packets are processed as follows:

- **Packet A**—Because the source is coming from a designated tunnel (Tunnel 2), Packet A passes the reverse path forwarding check and is processed for forwarding through Tunnel 2.
- **Packet B**—Because the source is coming from Tunnel 1, which is a nondesignated tunnel, by default, Packet B fails the reverse path forwarding check in the strict mode. If loose mode is enabled, Packet B is allowed for forwarding.
- **Packet C**—Because the source is a nonexistent tunnel source, Packet C fails the reverse path forwarding check, and the packet is not forwarded.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

Router R0

```
set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.1/24
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.1/24
set interfaces ge-0/0/2 vlan-tagging
set interfaces ge-0/0/2 unit 0 vlan-id 1
set interfaces ge-0/0/2 unit 0 family inet address 172.16.0.1/16
set interfaces lo0 unit 0 family inet address 10.1.1.1/32
set routing-options router-id 10.1.1.1
set routing-options autonomous-system 100
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels T1 source-address 192.0.2.1
set routing-options dynamic-tunnels T1 gre
set routing-options dynamic-tunnels T1 destination-networks 192.0.2.0/24
set routing-options dynamic-tunnels T2 source-address 198.51.100.1
set routing-options dynamic-tunnels T2 gre
set routing-options dynamic-tunnels T2 destination-networks 198.51.100.0/24
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
```

```

set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 10.1.1.1
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 20.1.1.1
set protocols bgp group IBGP neighbor 30.1.1.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface all
set routing-instances VPN1 instance-type vrf
set routing-instances VPN1 interface ge-0/0/2.0
set routing-instances VPN1 route-distinguisher 100:100
set routing-instances VPN1 vrf-target target:100:1
set routing-instances VPN1 vrf-table-label
set routing-instances VPN1 routing-options forwarding-table ip-tunnel-rpf-check mode strict
set routing-instances VPN1 protocols bgp group External type external
set routing-instances VPN1 protocols bgp group External family inet unicast
set routing-instances VPN1 protocols bgp group External peer-as 200
set routing-instances VPN1 protocols bgp group External neighbor 172.16.0.1

```

Router R1

```

set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-0/0/1 vlan-tagging
set interfaces ge-0/0/1 unit 0 vlan-id 2
set interfaces ge-0/0/1 unit 0 family inet address 172.18.0.1/16
set interfaces lo0 unit 0 family inet address 20.1.1.1/32
set routing-options router-id 20.1.1.1
set routing-options autonomous-system 100
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels T1 source-address 192.0.2.2
set routing-options dynamic-tunnels T1 gre
set routing-options dynamic-tunnels T1 destination-networks 192.0.2.0/24
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 20.1.1.1
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 30.1.1.1
set protocols bgp group IBGP neighbor 10.1.1.1
set protocols ospf traffic-engineering

```

```

set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface all
set routing-instances VPN2 instance-type vrf
set routing-instances VPN2 interface ge-0/0/1.0
set routing-instances VPN2 route-distinguisher 100:200
set routing-instances VPN2 vrf-target target:200:1
set routing-instances VPN2 vrf-table-label

```

R2

```

set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.2/24
set interfaces ge-0/0/2 vlan-tagging
set interfaces ge-0/0/2 unit 0 vlan-id 3
set interfaces ge-0/0/2 unit 0 family inet address 172.17.0.1/16
set interfaces lo0 unit 0 family inet address 30.1.1.1/32
set routing-options router-id 30.1.1.1
set routing-options autonomous-system 100
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels T2 source-address 198.51.100.2
set routing-options dynamic-tunnels T2 gre
set routing-options dynamic-tunnels T2 destination-networks 198.51.100.0/24
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 30.1.1.1
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 20.1.1.1
set protocols bgp group IBGP neighbor 10.1.1.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface all
set routing-instances VPN3 instance-type vrf
set routing-instances VPN3 interface ge-0/0/2.0
set routing-instances VPN3 route-distinguisher 100:300
set routing-instances VPN3 vrf-target target:300:1
set routing-instances VPN3 vrf-table-label

```

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router R0:

1. Configure Router R0's interfaces, including the loopback interface.

```
[edit interfaces]
user@R0# set ge-0/0/0 unit 0 family inet address 192.0.2.1/24
user@R0# set ge-0/0/1 unit 0 family inet address 198.51.100.1/24
user@R0# set ge-0/0/2 vlan-tagging
user@R0# set ge-0/0/2 unit 0 vlan-id 1
user@R0# set ge-0/0/2 unit 0 family inet address 172.16.0.1/16
user@R0# set lo0 unit 0 family inet address 10.1.1.1/32
```

2. Assign the router ID and autonomous system number for Router R0.

```
[edit routing-options]
user@R0# set router-id 10.1.1.1
user@R0# set autonomous-system 100
```

3. Configure IBGP peering between the routers.

```
[edit protocols]
user@R0# set bgp group IBGP type internal
user@R0# set bgp group IBGP local-address 10.1.1.1
user@R0# set bgp group IBGP family inet-vpn unicast
user@R0# set bgp group IBGP neighbor 20.1.1.1
user@R0# set bgp group IBGP neighbor 30.1.1.1
```

4. Configure OSPF on all the interfaces of Router R0, excluding the management interface.

```
[edit protocols]
user@R0# set ospf traffic-engineering
user@R0# set ospf area 0.0.0.0 interface lo0.0 passive
user@R0# set ospf area 0.0.0.0 interface all
```

5. Configure RSVP on all the interfaces of Router R0, excluding the management interface.

```
[edit protocols]
user@R0# set rsvp interface all
```

```
user@R0# set rsvp interface fxp0.0 disable
```

6. Enable next-hop-based dynamic GRE tunnel configuration on Router R0.

```
[edit routing-options]
user@R0# set dynamic-tunnels gre next-hop-based-tunnel
```

7. Configure the dynamic GRE tunnel parameters from Router R0 to Router R1.

```
[edit routing-options]
user@R0# set dynamic-tunnels T1 source-address 192.0.2.1
user@R0# set dynamic-tunnels T1 gre
user@R0# set dynamic-tunnels T1 destination-networks 192.0.2.0/24
```

8. Configure the dynamic GRE tunnel parameters from Router R0 to Router R2.

```
[edit routing-options]
user@R0# set dynamic-tunnels T2 source-address 198.51.100.1
user@R0# set dynamic-tunnels T2 gre
user@R0# set dynamic-tunnels T2 destination-networks 198.51.100.0/24
```

9. Configure a virtual routing and forwarding (VRF) routing instance on Router R0, and assign the interface connecting to Host 1 to the VRF instance.

```
[edit routing-instances]
user@R0# set VPN1 instance-type vrf
user@R0# set VPN1 route-distinguisher 100:100
user@R0# set VPN1 vrf-target target:100:1
user@R0# set VPN1 vrf-table-label
user@R0# set VPN1 interface ge-0/0/2.0
```

10. Configure an external BGP session with Host 1 for the VRF routing instance.

```
[edit routing-instances]
user@R0# set VPN1 protocols bgp group External type external
user@R0# set VPN1 protocols bgp group External family inet unicast
user@R0# set VPN1 protocols bgp group External peer-as 200
user@R0# set VPN1 protocols bgp group External neighbor 172.16.0.1
```


11. Configure anti-spoofing protection for the VRF routing instance on Router R0. This enables reverse path forwarding check for the next-hop-based dynamic tunnels, T1 and T2, on Router 0.

```
[edit routing-instances]
user@R0# set VPN1 routing-options forwarding-table ip-tunnel-rpf-check mode strict
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R0# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 192.0.2.1/24;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 198.51.100.1/24;
    }
  }
}
ge-0/0/2 {
  vlan-tagging;
  unit 0 {
    vlan-id 1;
    family inet {
      address 172.16.0.1/16;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.1.1.1/32;
    }
  }
}
```

```

user@R0# show routing-options
router-id 10.1.1.1;
autonomous-system 100;
dynamic-tunnels {
  gre next-hop-based-tunnel;
  T1 {
    source-address 192.0.2.1;
    gre;
    destination-networks {
      192.0.2.0/24;
    }
  }
  T2 {
    source-address 198.51.100.1;
    gre;
    destination-networks {
      198.51.100.0/24;
    }
  }
}

```

```

user@R0# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
bgp {
  group IBGP {
    type internal;
    local-address 10.1.1.1;
    family inet-vpn {
      unicast;
    }
    neighbor 20.1.1.1;
    neighbor 30.1.1.1;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface lo0.0 {
      passive;
    }
  }
}

```

```

    }
    interface all;
  }
}

```

user@R0# **show routing-instances**

```

VPN1 {
  instance-type vrf;
  interface ge-0/0/2.0;
  route-distinguisher 100:100;
  vrf-target target:100:1;
  vrf-table-label;
  routing-options {
    forwarding-table {
      ip-tunnel-rpf-check {
        mode strict;
      }
    }
  }
  protocols {
    bgp {
      group External {
        type external;
        family inet {
          unicast;
        }
        peer-as 200;
        neighbor 172.16.0.1;
      }
    }
  }
}

```

Verification

IN THIS SECTION

- [Verifying Basic Configuration | 124](#)
- [Verifying Dynamic Tunnel Configuration | 124](#)
- [Verifying Anti-Spoofing Protection Configuration | 125](#)

Confirm that the configuration is working properly.

Verifying Basic Configuration

Purpose

Verify the OSPF and BGP peering status between the Router R0 and Routers R1 and R2.

Action

From operational mode, run the **show ospf neighbor** and **show bgp summary** commands.

```
user@R0> show ospf neighbor
```

Address	Interface	State	ID	Pri	Dead
192.0.2.2	ge-0/0/0.0	Full	20.1.1.1	128	32
198.51.100.2	ge-0/0/1.0	Full	30.1.1.1	128	32

```
user@R0> show bgp summary
```

Groups: 2 Peers: 3 Down peers: 1							
Table	Tot Paths	Act Paths	Suppressed	History	Damp	State	Pending
bgp.13vpn.0	0	0	0	0	0	0	0
Peer	AS	InPkt	OutPkt	OutQ	Flaps	Last Up/Dwn	
State #Active/Received/Accepted/Damped...							
20.1.1.1	100	182	178	0	0	1:20:27	Establ
bgp.13vpn.0: 0/0/0/0							
30.1.1.1	100	230	225	0	0	1:41:51	Establ
bgp.13vpn.0: 0/0/0/0							
172.16.0.1	200	0	0	0	0	1:42:08	Establ

Meaning

The OSPF and BGP sessions are up and running between the Routers R0, R1, and R2.

Verifying Dynamic Tunnel Configuration

Purpose

Verify the status of the next-hop-based dynamic GRE tunnels between the Router R0 and Routers R1 and R2.

Action

From operational mode, run the **show route table inet.3**, and the **show dynamic-tunnels database terse** commands.

user@R0> **show route table inet.3**

```
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.0/24      *[Tunnel/300] 01:47:57
                  Tunnel
192.0.2.2/24      *[Tunnel/300] 01:47:57
                  Tunnel Composite

198.51.100.0/24   *[Tunnel/300] 01:47:57
                  Tunnel
198.51.100.2/24   *[Tunnel/300] 01:47:57
                  Tunnel Composite
```

user@R0> **show dynamic-tunnels database terse**

```
Table: inet.3

Destination-network: 192.0.2.0/24
Destination      Source      Next-hop      Type      Status
192.0.2.2/24     192.0.2.1   0xb395e70     nhid 612  gre      Up

Destination-network: 198.51.100.0/24
Destination      Source      Next-hop      Type      Status
198.51.100.2     198.51.100.1 0xb395e70     nhid 612  gre      Up
```

Meaning

The two next-hop-based dynamic GRE tunnels, Tunnel 1 and Tunnel 2, are up.

Verifying Anti-Spoofing Protection Configuration

Purpose

Verify that the reverse path forwarding check has been enabled on the VRF routing instance on Router R0.

Action

From the operational mode, run the **show krt table VPN1.inet.0 detail**.

user@R0> **show krt table VPN1.inet.0 detail**

```
KRT tables:
VPN1.inet.0          : GF: 1 krt-index: 8      ID: 0 kernel-id: 8
  flags: (null)
  tunnel rpf config data : enable, strict, filter [0], 0x2
  tunnel rpf tlv data : enable, strict, filter [0], 0x4
  unicast reverse path: disabled
  fast-reroute-priority: 0
  Permanent NextHops
    Multicast      : 0 Broadcast : 0
    Receive        : 0 Discard   : 0
    Multicast Discard: 0 Reject   : 0
    Local          : 0 Deny      : 0
    Table          : 0
```

Meaning

The configured reverse path forwarding check is enabled on the VRF routing instance in the strict mode.

Next-Hop-Based Dynamic Tunnel Localization Overview

IN THIS SECTION

- [Benefits of Next-Hop-Based Dynamic Tunnel Localization | 127](#)
- [Use Cases for Next-Hop-Based Dynamic Tunnel Localization | 127](#)
- [Traffic Handling with Localization of Next-Hop-Based Dynamic Tunnels | 127](#)
- [Configuring Next-Hop-Based Dynamic Tunnels Localization | 128](#)
- [Troubleshooting Localized Next-Hop-Based Dynamic Tunnels | 131](#)
- [Unsupported Features for Next-Hop-Based Dynamic Tunnels Localization | 132](#)

Next-hop-based dynamic tunnels include generic routing encapsulation (GRE) tunnels and MPLS-over-UDP tunnels. These tunnels provide a scaling advantage over the interface-based tunnels. However, unlike the interface-based tunnels, the next-hop-based dynamic tunnels are anchorless in nature, where the forwarding information of the tunnels is distributed to the Packet Forwarding Engines (PFEs) on every line card on

the device. This limits the maximum number of tunnels supported on the device to the tunnel capacity of a single line card. With the support for localization, you can configure next-hop-based dynamic tunnel localization to create the forwarding information only on the PFE of a line card that is designated as the anchor PFE. The PFEs on the other line cards on the device have state forwarding information to steer the packets to the anchor PFE. This provides a scaling advantage by increasing the maximum number of tunnels supported on a device.

Benefits of Next-Hop-Based Dynamic Tunnel Localization

Provides a scaling advantage by increasing the maximum number of tunnels supported on a device.

Use Cases for Next-Hop-Based Dynamic Tunnel Localization

- The IPsec gateway devices that host a number of MS-MPC are used to terminate IPsec tunnels and are required to support moderate load. This support is affected with the use of next-hop-based dynamic tunnels when the scaling limit of the device is reached. With the localization of next-hop-based dynamic tunnels, the maximum number of the tunnels supported is increased, allowing the device to accommodate more tunnels at the cost of an extra fabric hop.
- For Internet or VPN gateway devices, such as a virtual public cloud data center, there is a need for the gateway devices to communicate with a large number of servers. The data center servers are reachable through next-hop-based dynamic tunnels. The anchorless property of the dynamic tunnels limits the overall scaling numbers of the device. The gateway devices host multiple MPCs, with increased traffic demands. With the localization of the next-hop-based dynamic tunnels, the tunnels can be spread across the MPCs, thereby facilitating an increase in the tunnel scaling numbers.

Traffic Handling with Localization of Next-Hop-Based Dynamic Tunnels

With support for localization, the next-hop-based dynamic tunnel state is localized to an anchor Packet Forwarding Engine, and the other Packet Forwarding Engine has the tunnel state for steering traffic to the tunnel anchor.

Figure 7 on page 127 illustrates the forwarding path of next-hop-based dynamic tunnels without localization.

Figure 7: Forwarding Path of Next-Hop-Based Dynamic Tunnels Without Localization


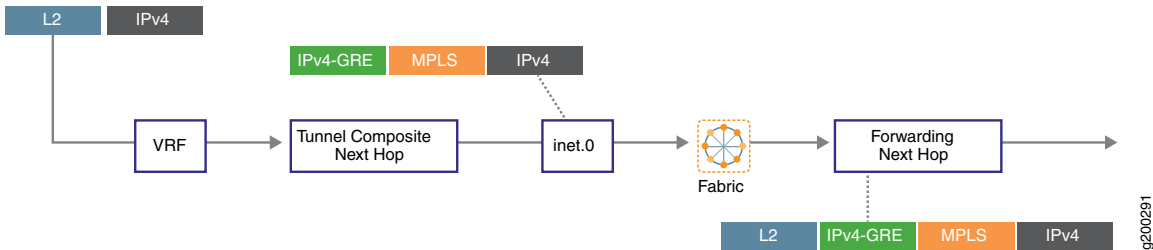


Figure 8 on page 128 illustrates the forwarding path of next-hop-based dynamic tunnels with localization.

Figure 8: Forwarding Path of Next-Hop-Based Dynamic Tunnels With Localization

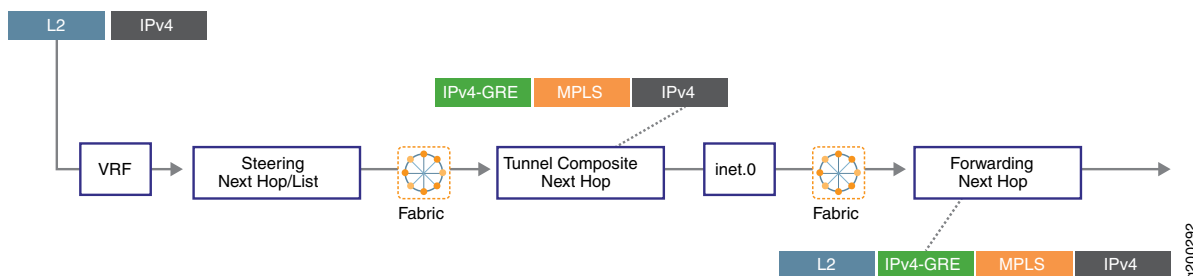

Configuring Next-Hop-Based Dynamic Tunnels Localization

IN THIS SECTION

- [Configuring Localization for New Next-Hop-Based Dynamic Tunnels | 128](#)
- [Configuring Localization for Existing Next-Hop-Based Dynamic Tunnels | 130](#)

Localization support can be configured for newly created next-hop-based dynamic tunnels, or for existing non-local dynamic tunnels.

Configuring Localization for New Next-Hop-Based Dynamic Tunnels

The localization of next-hop-based dynamic tunnels uses a policy-based approach to specify prefix groups. In other words, route policies are used to apply the localization properties to the next-hop-based dynamic tunnels. Dynamic tunnel attribute profiles are created and configured under routing options for association with the prefix group using the policy.

1. Creating dynamic tunnel profiles.

The dynamic tunnel profile specifies the tunnel type and the anchor Packet Forwarding Engine information. Multiple dynamic tunnel profiles can be created for localization of the dynamic tunnels.

The values for the dynamic tunnel type can be GRE, UDP, or BGP-SIGNAL.

Although BGP-SIGNAL is not a valid tunnel type, on assigning BGP-SIGNAL as the tunnel type, the tunnels created from the BGP-signalled attributes are localized. When using BGP-SIGNAL, the tunnel type is decided based on the type advertised by BGP in its TLV. BGP-SIGNAL tunnels are always next-hop-based tunnels. The GRE tunnels created dynamically by BGP-SIGNAL are always next-hop-based, even if the user has manually configured tunnels created by GRE to use IFLs.

The anchor Packet Forwarding Engine value is the line card of the anchor Packet Forwarding Engine, for example, pfe-x/y/0. This information can be viewed from the **show interfaces terse pfe*** command output.

Sample Configuration:

```
[edit routing-options]
dynamic-tunnels {
  dynamic-tunnel-attributes attribute-1 {
    dynamic-tunnel-type <GRE | UDP | BGP-SIGNAL>;
    dynamic-tunnel-anchor-pfe pfe-1/0/0;
  }
}
```

2. Associating dynamic tunnel profile to prefix list.

Configuring a policy with **dynamic-tunnel-attributes** as the action associates the dynamic tunnel to the prefix list. The policy **from** action allows the creation of tunnel with specified attributes for any matching condition, such as a prefix range, community, or source address of BGP routes, and so on.

Sample configuration:

```
[edit policy-options]
policy-statement policy-name {
  term term {
    from {
      <route-filter | next-hop | community>;
    }
    then {
      dynamic-tunnel-attributes <attribute-name>;
    }
  }
}
```

3. Including the tunnel policy under the forwarding table export policy.

After the policy is configured, it is included in the forwarding table export policy for the parsing of the policy.

Using the export-policy, the tunnel attributes get associated with the route. Whenever a route from BGP is queued for resolution, the forwarding table export policy is evaluated, and the tunnel attributes are obtained from the policy module based on the applied filters. The obtained tunnel attributes are then attached to the next hop in form of a tunnel composite next hop. The corresponding anchor forwarding structures, based on the Packet Forwarding Engine name and tunnel type, are created and sent to the forwarding table before a tunnel composite next hop is sent. However, if none of the attributes map to the tunnel composite next hop, then the forwarding structure is created on every Packet Forwarding Engine, similar to the non-localized dynamic tunnels.

Sample configuration:

```
[edit routing-options]
forwarding-table {
    export dynamic-tunnel;
}
```

Configuring Localization for Existing Next-Hop-Based Dynamic Tunnels



CAUTION: Making on the fly changes to dynamic tunnel attributes can result in an FPC crash due to high memory utilization. Hence, we recommend deactivating the dynamic-tunnels configuration before configuring localization.

To update tunnel attributes for existing next-hop-based dynamic tunnels, the following should be performed:

1. Deactivate **dynamic-tunnels** configuration under the **[edit routing-options]** hierarchy level.

Sample configuration:

```
[edit routing-options]
user@host# deactivate dynamic-tunnels
user@host# commit
```

2. Change tunnel attributes as required.
3. Activate **dynamic-tunnels** configuration under the **[edit routing-options]** hierarchy level.

Sample configuration:

```
[edit routing-options]
user@host# activate dynamic-tunnels
user@host# commit
```

To configure localization for existing non-local next-hop-based dynamic tunnels:



CAUTION: Making on the fly changes to configure localization for existing non-local next-hop-based dynamic tunnels can result in an FPC crash due to high memory utilization. Hence, we recommend deactivating the dynamic-tunnels configuration before configuring localization.

1. Deactivate the **dynamic-tunnels** configuration at the **[edit routing-options]** hierarchy level.

2. Create tunnel-attributes profile and add policy for localizing the dynamic tunnels, similar to new next-hop-based dynamic tunnels.
3. Activate the **dynamic-tunnels** configuration.

Troubleshooting Localized Next-Hop-Based Dynamic Tunnels

With localization of next-hop-based dynamic tunnels, the tunnel composite next hops are associated with anchor Packet Forwarding Engine IDs. The following traceroute configuration statements at the **[edit routing-options]** hierarchy level help in troubleshooting the localized dynamic tunnels:

- **dynamic-tunnels traceoptions flag all**—Tracking creation and deletion of tunnel in DTM.
- **resolution traceoptions flag tunnel**—Tracking resolver operations on BGP route.
- **forwarding-table traceoptions flag all**—Tracking tunnels sent to the kernel.
- **traceoptions flag all**—Tracking of route learning process.

The following commands can be used to check if a route is using a localized next-hop-based dynamic tunnel:

1. **show route prefix extensive**—To obtain the indirect next hop.

For example:

```
user@host> show route 1.2.3.4 extensive
```

```
MPLS-over-UDP-PE1.inet.0: 24 destinations, 26 routes (24 active, 0 holddown, 0
  hidden)
1.2.3.4/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 1.2.3.4/32 -> {indirect(1048577)}
Page 0 idx 1, (group pel-cel type External) Type 1 val 0xb209a78 (adv_entry)
  Advertised metrics:
  Nexthop: Self
  AS path: [100] I
  Communities: target:600:1 encapsulation:mpls-in-udp(0xd)
```

2. **show krt indirect-next-hop index indirect-next-hop detail**—To check for anchor Packet Forwarding Engine field in the detailed output of the indirect next hop.

For example:

```
user@host> show krt indirect-next-hop index 1048577 detail
```

```
Indirect Nexthop detail:
Index: 1048577 Protocol next-hop address: 1.1.1.6
```

```

RIB Table: bgp.l3vpn.0          Label: Push 299808
Policy Version: 2              References: 11
Locks: 3                      0xb227980
Flags: 0x0
INH Session ID: 0x0
Ref RIB Table: unknown
Export policy detail:
(Dynamic tunnel hash : 309985522)
  Tunnel type: UDP, Reference count: 4, nhid: 1016
  Destination address: 1.1.1.6, Source address: 1.1.1.2
Anchored-PFE: pfe-1/0/0
  VPN Label: Push 299808, TTL action: prop-ttl
IGP FRR Interesting proto count : 11
Chain IGP FRR Node Num      : 1
  IGP Resolver node(hex)    : 0xc838b94
  IGP Route handle(hex)     : 0xb1d7674   IGP rt_entry protocol      : Tunnel

  IGP Actual Route handle(hex) : 0x0          IGP Actual rt_entry protocol
: Any

```

Unsupported Features for Next-Hop-Based Dynamic Tunnels Localization

Junos OS does not support the following functionality with localization for next-hop-based dynamic tunnels:

- Chained composite next hops at the **[edit routing-options forwarding-table chained-composite-next-hop ingress l3vpn]** hierarchy level.
- Anchor Packet Forwarding Engine resiliency.

There is no resiliency support for next-hop-based dynamic tunnels with localization. After localization of the next-hop-based dynamic tunnels, the anchor Packet Forwarding Engine becomes the single entity for processing any given tunnel on the device. Although anchor Packet Forwarding Engine resiliency is not supported, for gateway devices, redundancy at the gateway device ensures that when the Packet Forwarding Engine to which the tunnel composite next hop is delegated goes down, the traffic must be rerouted to the redundant gateway device. The routing protocol process monitors the state of the Packet Forwarding Engine, and withdraws BGP advertisement of all the routes pointing to the tunnel composite next hops anchored on that Packet Forwarding Engine.

Only the anchored Packet Forwarding Engine has the full-fledged tunnel composite next hop and all the other Packet Forwarding Engines have only steering entries to forward traffic to the anchor Packet Forwarding Engine. These steering entries are not withdrawn, when an anchor FPC goes down.

- Localization of next-hop-based dynamic tunnels is not supported on logical systems.

- IPv6 is not supported with localization of next-hop-based dynamic tunnels.
- With localization, the **show dynamic-tunnels database summary** command does not display accurate tunnels summary when the state of the anchor Packet Forwarding Engine line card is not up. As a workaround, use the **show dynamic-tunnels database** and **show dynamic-tunnels database terse** command output.

Release History Table

Release	Description
19.2R1	Starting in Junos Release 19.2R1, on MX Series routers with MPCs and MICs, carrier supporting carrier (CSC) architecture can be deployed with MPLS-over-UDP tunnels carrying MPLS traffic over dynamic IPv4 UDP tunnels that are established between supporting carrier's PE devices.
18.3R1	Starting in Junos OS Release 18.3R1, MPLS-over-UDP tunnels are supported on PTX Series routers and QFX Series switches.
18.2R1	Starting in Junos OS Release 18.2R1, on PTX series routers and QFX10000 with unidirectional MPLS-over-UDP tunnels, you must configure the remote PE device with an input filter for MPLS-over-UDP packets, and an action for decapsulating the IP and UDP headers for forwarding the packets in the reverse tunnel direction.
17.4R1	Starting in Junos OS Release 17.4R1, on MX Series routers, the next-hop-based dynamic MPLS-over-UDP tunnels are signaled using BGP encapsulation extended community.
17.1R1	Starting in Junos OS Release 17.1, on MX Series routers with MPCs and MICs, the scaling limit of MPLS-over-UDP tunnels is increased.

RELATED DOCUMENTATION

Configuring GRE Tunnels for Layer 3 VPNs

[ip-tunnel-rpf-check](#) | **1754**

3

PART

MPLS Traffic

Managing MPLS Traffic | **135**

Protecting MPLS Traffic | **275**

Measuring MPLS Traffic | **386**

Managing MPLS Traffic

IN THIS CHAPTER

- Bidirectional Forwarding Detection (BFD) for MPLS | 135
- Firewall Filters for MPLS | 146
- System Log Messages and SNMP Traps for MPLS | 159
- Load Balancing MPLS Traffic | 161
- Shared Risk Link Groups for MPLS | 199

Bidirectional Forwarding Detection (BFD) for MPLS

IN THIS SECTION

- Configuring Bidirectional Forwarding Detection for MPLS (CLI Procedure) | 135
- BFD-Triggered Local Repair for Rapid Convergence | 140
- Configuring BFD for MPLS IPv4 LSPs | 142

Configuring Bidirectional Forwarding Detection for MPLS (CLI Procedure)

IN THIS SECTION

- Configuring BFD on Provider Edge and Provider Switches for an LDP-Based LSP | 136
- Configuring BFD on Provider Edge and Provider Switches for an RSVP-Based LSP | 139

You can configure the Bidirectional Forwarding Detection (BFD) protocol on EX8200 standalone switches and EX8200 Virtual Chassis to detect failures in the MPLS label-switch path (LSP). The BFD protocol is a

simple hello mechanism that detects failures in a network. Hello packets are sent at a specified, regular interval. A neighbor failure is detected when the routing device stops receiving a reply from the neighbor after a specified interval. BFD works with a wide variety of network environments and topologies. The failure detection timers for BFD have shorter time limits than those of the failure detection mechanisms for static routes, and thus provide faster detection. These timers are also adaptive. For example, a timer can adapt to a higher value if an adjacency fails, or a neighbor can negotiate a higher value than the one configured.

This topic describes configuring the provider edge (PE) switches and the provider switches to support for LDP-based LSPs and RSVP-based LSPs.

This topic includes:

Configuring BFD on Provider Edge and Provider Switches for an LDP-Based LSP

You can enable BFD for the LDP-based LSPs or RSVP-based LSPs associated with a specific forwarding equivalence class (FEC). Alternatively, you can configure an Operation Administration and Maintenance (OAM) ingress policy to enable BFD on a range of FEC addresses.

Before you configure BFD for an LDP-based based LSP, you must configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS” on page 67](#).
- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches” on page 77](#).

To configure BFD on PE and provider switches:

1. Define an OAM policy:

```
[edit]
user@switch# set protocols ldp oam ingress-policy policy-name
```

2. Specify the FEC on which you want to enable OAM:

```
[edit]
user@switch# set protocols ldp oam fec address
```

3. Specify the minimum transmit and receive interval for the BFD configuration:

NOTE: If you configure the **minimum-interval** statement, you do not need to configure the **minimum-receive-interval** statement or the **minimum-transmit-interval** statement.


```
[edit]
```

```
user@switch# set protocols ldp oam bfd-liveness-detection minimum-interval time
```

or

```
[edit]
```

```
user@switch# set protocols ldp oam bfd-liveness-detection minimum-receive-interval time
```

```
user@switch# set protocols ldp oam bfd-liveness-detection minimum-transmit-interval time
```

4. Specify the detection time multiplier. The negotiated transmit interval multiplied by this value gives the detection time for the receiving system in Asynchronous mode:

```
[edit]
```

```
user@switch# set protocols ldp oam bfd-liveness-detection multiplier multiplier
```

5. Specify the minimum transmit interval (or the minimum receive interval).

```
[edit]
```

```
user@switch# set protocols ldp oam bfd-liveness-detection transmit-interval minimum-interval time
```

6. Specify a threshold for detecting the adaptation of the detection time:

```
[edit]
```

```
user@switch# set protocols ldp oam bfd-liveness-detection detection-time threshold time
```

7. Configure route and next-hop action in the event of a BFD session failure event on the LDP-based LSP:

```
[edit]
```

```
user@switch# set protocols ldp oam bfd-liveness-detection failure-action action
```

NOTE: When a BFD session goes down, you can configure the Junos OS to resignal the LSP path or to simply disable the LSP path. You can configure a standby LSP path to handle traffic while the primary LSP path is unavailable. The switch can automatically recover from LSP failures that can be detected by BFD. By default, if a BFD session fails, the event is simply logged.

8. Specify how long the BFD session must be up before adding the route or next hop. Specifying a time of 0 seconds causes the route or next hop to be added as soon as the BFD session comes back up.

```
[edit]
```

```
user@switch# set protocols ldp oam bfd-liveness-detection holddown-interval time
```

9. Enable tracing of FECs for LDP-based LSPs and specify a source address for sending probes. Then, specify a wait interval, after which to send the probe packet.

```
[edit]
```

```
user@switch# set protocols ldp oam periodic-traceroute source address
```

```
user@switch# set protocols ldp oam periodic-traceroute wait time
```

10. Specify the duration of the LSP ping interval in seconds:

```
[edit]
```

```
user@switch# set protocols ldp oam lsp-ping-interval time
```

11. Specify the action to be taken for the OAM policy:

```
[edit]
```

```
user@switch# set policy-options policy-statement policy-name then accept
```

12. Apply the BFD configurations at the MPLS hierarchy level for the configuration to inherit the statements in the configuration group:

```
[edit]
```

```
user@switch# set apply-groups MPLS
```

Configuring BFD on Provider Edge and Provider Switches for an RSVP-Based LSP

When BFD is configured for an RSVP-based LSP on the ingress switch, it is enabled on the primary path and on all standby secondary paths for that LSP. You can enable BFD for all LSPs on a switch or for specific LSPs. If you configure BFD for a specific LSP, whatever values configured globally for BFD are overridden on that LSP. The BFD sessions originate only at the ingress switch and terminate at the egress switch.

Before you configure BFD for an RSVP-based LSP, you must configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS” on page 67](#).
- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches” on page 77](#).

To configure BFD on PE and provider switches:

1. Specify the minimum transmit and receive interval for the BFD configuration:

NOTE: If you configure the **minimum-interval** statement, you do not need to configure the **minimum-receive-interval** statement or the **minimum-transmit-interval** statement.

```
[edit]
```

```
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection  
minimum-interval time
```

or

```
[edit]
```

```
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection  
minimum-receive-interval time
```

```
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection  
minimum-transmit-interval time
```

2. Specify the detection time multiplier. The negotiated transmit interval multiplied by this value gives the detection time for the receiving system in Asynchronous mode:

```
[edit]
```

```
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection multiplier  
multiplier
```

3. Specify the minimum transmit interval (or the minimum receive interval):

```
[edit]
```

```
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection  
transmit-interval minimum-interval time
```

4. Configure route and next-hop actions in the event of a BFD session failure event on the RSVP-based LSP:

```
[edit]
```

```
user@switch# set protocols mpls label-switched-path lsp-name oam bfd-liveness-detection  
failure-action action
```

NOTE: When a BFD session goes down, you can configure the Junos OS to resignal the LSP path or to simply disable the LSP path. You can configure a standby LSP path to handle traffic while the primary LSP path is unavailable. The switch can automatically recover from LSP failures that can be detected by BFD. By default, if a BFD session fails, the event is simply logged if you do not specifically configure a failure action.

BFD-Triggered Local Repair for Rapid Convergence

IN THIS SECTION

- [Understanding BFD-Triggered Local Protection | 140](#)

Understanding BFD-Triggered Local Protection

IN THIS SECTION

- [Purpose of BFD-Triggered Local Repair | 141](#)
- [Configuring BFD-Triggered Local Repair | 142](#)
- [Disabling BFD-Triggered Local Repair | 142](#)

The time it takes for a network to converge following a link or node failure can vary dramatically based on a number of factors, including network size, the protocols used, and network design. However, while

each particular convergence event is different, the process of convergence is essentially consistent. The failure is detected, the failure is reported (flooded) in the network, an alternate path is found for traffic, and the forwarding plane is updated to pass traffic on a new path.

This overview discusses how Bidirectional Forwarding Detection (BFD)-triggered local repair contributes to a quicker restoration time for rapid convergence in an MPLS network.


Purpose of BFD-Triggered Local Repair

In Junos OS, general MPLS traffic protection for RSVP-signaled label-switched path (LSP) failures is provided by several complementary mechanisms. These protection mechanisms include local protection (fast reroute, link protection, and node-link protection) and path protection (primary and secondary paths). Local protection in conjunction with path protection can provide minimum packet loss for an LSP, and control the way the LSP is rerouted after a failure. Traditionally, both types of protection rely on fast detection of connectivity failure at the physical level. However, for transmission media without fast physical level detection, Junos OS supports BFD and MPLS ping for fast failure detection.

With links between routers, when a route goes down, the routing protocol process recalculates the next best path. When MPLS fast reroute (FRR) is enabled, ifl messages are flooded to all Flexible PIC Concentrators (FPCs). The edge FPC enables the bypass MPLS LSP tunnel. Lastly, all routes are repaired and sent through the bypass MPLS LSP tunnel. The amount of time it takes to repair all routes is proportional to the number of routes.

This repair scenario becomes more difficult when a switch lies between two links. See [Figure 9 on page 141](#).

Figure 9: Topology with BFD-Triggered Local Repair

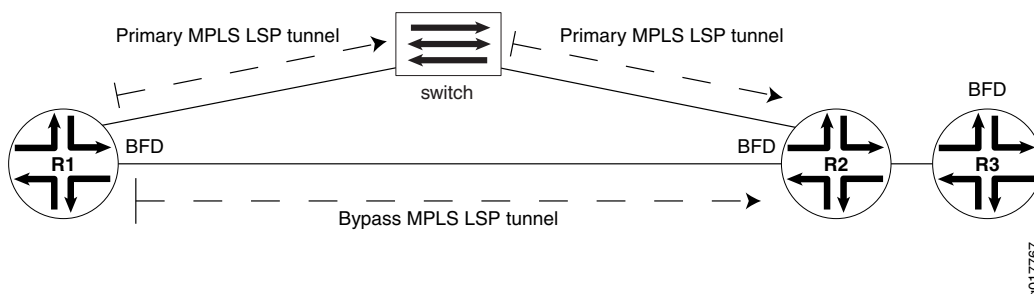

When a link goes down at the remote end, the failure is not detected at the local end until the interior gateway protocol (IGP) goes down. To wait for the routing protocol process to recalculate the next best path takes too much time.

With BFD-triggered local repair enabled, the Packet Forwarding Engine completes the repair first, using the bypass MPLS LSP tunnel (that is preconfigured and installed), then informs the routing protocol process to recalculate a new route. By doing this, when the primary MPLS LSP tunnel goes down, the FPC can intermittently and immediately divert traffic to the FPC with the bypass MPLS LSP tunnel.

Using local repair in this way achieves a faster restoration time of less than 50 ms.

Configuring BFD-Triggered Local Repair

BFD-triggered local repair is not configurable, but is part of the default configuration.

BFD-triggered local repair works within the legacy Junos OS features MPLS-FRR, BFD for IGP, and loop-free alternates (LFAs).

Disabling BFD-Triggered Local Repair

By default, BFD-triggered local repair is enabled for all routing interfaces. If desired, you can disable BFD-triggered local repair at the **[edit routing-options]** hierarchy level.

To explicitly disable BFD-triggered local repair:

1. Include the **no-bfd-triggered-local-repair** statement at the **[edit routing-options]** hierarchy level:

```
user@host# set no-bfd-triggered-local-repair
```

2. (Optional) Verify your configuration settings before committing them by using the **show routing-options** command.

```
user@host# run show routing-options
```

Confirm your configuration by issuing the **show routing-options** command.

```
user@host# show routing-options
...
no-bfd-triggered-local-repair;
}
```

NOTE: When you disable this feature, you must also restart routing by including the **graceful-restart** statement for the IGP. For example, for OSPF, this is accomplished by including the **graceful-restart** statement at the **[edit protocols ospf]** hierarchy level.

Configuring BFD for MPLS IPv4 LSPs

You can configure Bidirectional Forwarding Detection (BFD) protocol on MPLS IPv4 LSPs as outlined in the Internet draft draft-ietf-bfd-mpls-02.txt, *BFD for MPLS LSPs*. BFD is used as a periodic Operation, Administration, and Maintenance (OAM) feature for LSPs to detect LSP data plane faults. You can configure BFD for LSPs that use either LDP or RSVP as the signaling protocol.

NOTE: BFD for MPLS IPv4 LSP is based on the Routing Engine and is not distributed. As a result, the minimum supported BFD timer interval is $(100 \text{ ms} * 3)$ per one LSP session, and for scaled LSP sessions, the minimum supported BFD timer interval is $(300 \text{ ms} * 3)$. As you increase the number of LSP sessions with BFD, you must also increase (scale) the interval timers to support the network.

For Routing Engine switchover instances with nonstop active routing (NSR) support, the minimum supported BFD timer interval is $(2.5 \text{ seconds} * 3)$.

You can also use the LSP **ping** commands to detect LSP data plane faults. However, BFD has a couple of benefits: it requires less computer processing than LSP **ping** commands and can quickly detect faults in large numbers of LSPs (LSP **ping** commands must be issued for each LSP individually). On the other hand, BFD cannot be used to verify the control plane against the data plane at the egress LSR, which is possible when an LSP **ping** echo request is associated with a forwarding equivalence class (FEC).

The BFD failure detection timers are adaptive and can be adjusted to be more or less aggressive. For example, the timers can adapt to a higher value if the adjacency fails, or a neighbor can negotiate a higher value for a timer than the configured value. The timers adapt to a higher value when a BFD session flap occurs more than three times in a span of 15 seconds. A back-off algorithm increases the receive (Rx) interval by two if the local BFD instance is the reason for the session flap. The transmission (Tx) interval is increased by two if the remote BFD instance is the reason for the session flap. You can use the **clear bfd adaptation** command to return BFD interval timers to their configured values. The **clear bfd adaptation** command is hitless, meaning that the command does not affect traffic flow on the routing device.

Starting from Junos OS Release 13.2R4, 13.3R2, and 14.1, you can set the time interval between LSP ping messages and the number of LSP ping responses, respectively, after which the Bidirectional Forwarding Detection (BFD) session is brought down. To do so, you configure the **lsp-ping-interval** statement and the **lsp-ping-multiplier** statement at the **[edit protocols mpls oam]** hierarchy level.

For configuration instructions for LDP-signaled LSPs, see [“Configuring BFD for LDP LSPs” on page 903](#). For configuration instructions for RSVP-signaled LSPs, see the following section.

Configuring BFD for RSVP-Signaled LSPs

BFD for RSVP supports unicast IPv4 LSPs. When BFD is configured for an RSVP LSP on the ingress router, it is enabled on the primary path and on all standby secondary paths for that LSP. The source IP address for outgoing BFD packets from the egress side of an MPLS BFD session is based on the outgoing interface IP address. You can enable BFD for all LSPs on a router or for specific LSPs. If you configure BFD for a specific LSP, whatever values configured globally for BFD are overridden. The BFD sessions originate only at the ingress router and terminate at the egress router.

An error is logged whenever a BFD session for a path fails. The following example shows how BFD for RSVP LSP log messages might appear:

```
RPD_MPLS_PATH_BFD_UP: MPLS BFD session for path path1 up on LSP R0_to_R3
RPD_MPLS_PATH_BFD_DOWN: MPLS BFD session for path path1 down on LSP R0_to_R3
```

You can configure BFD for all of the RSVP LSPs on the router, a specific LSP, or the primary path of a specific LSP. To configure BFD for RSVP LSPs, include the **oam** and **bfd-liveness-detection** statements.

```
oam {
  bfd-liveness-detection {
    failure-action {
      make-before-break teardown-timeout seconds;
      teardown;
    }
    failure-action teardown;
    minimum-interval milliseconds;
    minimum-receive-interval milliseconds;
    minimum-transmit-interval milliseconds;
    multiplier detection-time-multiplier;
  }
  lsp-ping-interval time-interval;
  lsp-ping-multiplier multiplier;
}
```

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **label-switched-path** *lsp-name* **primary** *path-name*]

The **bfd-liveness-detection** statement includes the following options:

- **minimum-interval**—Specifies the minimum transmit and receive interval.
- **minimum-receive-interval**—Specifies the minimum receive interval. The range is from 1 through 255,000 milliseconds.
- **minimum-transmit-interval**—Specifies the minimum transmit interval. The range is from 1 through 255,000 milliseconds.
- **lsp-ping-multiplier**—Specifies the detection time multiplier. The range is from 1 through 255.

NOTE: To avoid triggering false negatives, configure a BFD fault detection time that is longer than the fast reroute time.

You can also configure the **lsp-ping-interval** option to adjust the time interval between LSP pings. The LSP ping command for RSVP-signaled LSPs is **ping mpls rsvp**. For more information on the **ping mpls rsvp** command, see the [CLI Explorer](#).

Configuring a Failure Action for the BFD Session on an RSVP LSP

When the BFD session for an RSVP LSP goes down, the LSP is torn down and resignaled. Traffic can be switched to a standby LSP, or you can simply tear down the LSP path. Any actions performed are logged.

When a BFD session for an RSVP LSP path goes down, you can configure the Junos OS to resignal the LSP path or to simply disable the LSP path. A standby LSP path could be configured to handle traffic while the primary LSP path is unavailable. The router can automatically recover from LSP failures that can be detected by BFD. By default, if a BFD session fails, the event is simply logged.

To enable the Junos OS to tear down an RSVP LSP path in the event of a BFD event, include the **failure-action** statement:

```
failure-action {
  make-before-break teardown-timeout seconds;
  teardown;
}
```

For a list of the hierarchy levels at which you can include this statement, see the statement summary section for this statement.

You can configure either the **teardown** or **make-before-break** options:

- **teardown**—Causes the LSP path to be taken down and resignaled immediately.
- **make-before-break**—Causes the Junos OS to attempt to signal a new LSP path before tearing down the old LSP path. You can also configure the **teardown-timeout** option to automatically tear down the LSP after the time period specified if the attempt to resignal the LSP fails within the **teardown-timeout** interval. If you specify a value of 0 for the **teardown-timeout** interval, the LSP is taken down and resignaled immediately (the same behavior as when you configure the **teardown** option).

To configure a failure action for all of the RSVP LSPs, include the **failure-action** statement at the **[edit protocols mpls oam bfd-liveness-detection]** hierarchy level. To configure a failure action for a specific RSVP LSP, include the **failure-action** statement at the **[edit protocols mpls label-switched-path lsp-name oam bfd-liveness-detection]** hierarchy level.

To configure a failure action for a specific primary path, include the **failure-action** statement at the **[edit protocols mpls label-switched path lsp-name primary path-name oam bfd-liveness-detection]** hierarchy

level. To configure a failure action for a specific secondary LSP path, include the **failure-action** statement at the `[edit protocols mpls label-switched-path lsp-name secondary path-name oam bfd-liveness-detection]` hierarchy level.

Release History Table

Release	Description
13.2R4	Starting from Junos OS Release 13.2R4, 13.3R2, and 14.1, you can set the time interval between LSP ping messages and the number of LSP ping responses, respectively, after which the Bidirectional Forwarding Detection (BFD) session is brought down.

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | 36

Firewall Filters for MPLS

IN THIS SECTION

- [Configuring MPLS Firewall Filters and Policers on Routers](#) | 146
- [Overview of MPLS Firewall Filters on Loopback Interface](#) | 155
- [Configuring MPLS Firewall Filters and Policers on Switches](#) | 156

Configuring MPLS Firewall Filters and Policers on Routers

IN THIS SECTION

- [Configuring MPLS Firewall Filters](#) | 147
- [Examples: Configuring MPLS Firewall Filters](#) | 147
- [Configuring Policers for LSPs](#) | 148
- [Example: Configuring an LSP Policer](#) | 150
- [Configuring Automatic Policers](#) | 151
- [Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets](#) | 155

You can configure an MPLS firewall filter to count packets based on the EXP bits for the top-level MPLS label in a packet. You can also configure policers for MPLS LSPs.

The following sections discuss MPLS firewall filters and policers:

Configuring MPLS Firewall Filters

You can configure an MPLS firewall filter to count packets based on the EXP bits for the top-level MPLS label in a packet. You can then apply this filter to a specific interface. You can also configure a policer for the MPLS filter to police (that is, rate-limit) the traffic on the interface to which the filter is attached. You cannot apply MPLS firewall filters to Ethernet (fxp0) or loopback (lo0) interfaces.

You can configure the following match criteria attributes for MPLS filters at the **[edit firewall family mpls filter filter-name term term-name from]** hierarchy level:

- **exp**
- **exp-except**

These attributes can accept EXP bits in the range 0 through 7. You can configure the following choices:

- A single EXP bit—for example, **exp 3**;
- Several EXP bits—for example, **exp 0, 4**;
- A range of EXP bits—for example, **exp [0-5]**;

If you do not specify a match criterion (that is, you do not configure the **from** statement and use only the **then** statement with the **count** action keyword), all the MPLS packets passing through the interface on which the filter is applied will be counted.

You also can configure any of the following action keywords at the **[edit firewall family mpls filter filter-name term term-name then]** hierarchy level:

- **count**
- **accept**
- **discard**
- **next**
- **policer**

For more information about how to configure firewall filters, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*. For more information about how to configure interfaces, see the *Junos OS Network Interfaces Library for Routing Devices* and the *Junos OS Services Interfaces Library for Routing Devices*.

Examples: Configuring MPLS Firewall Filters

The following examples illustrate how you might configure an MPLS firewall filter and then apply the filter to an interface. This filter is configured to count MPLS packets with EXP bits set to either 0 or 4.

The following shows a configuration for an MPLS firewall filter:

```
[edit firewall]
family mpls {
  filter expf {
    term expt0 {
      from {
        exp 0,4;
      }
      then {
        count counter0;
        accept;
      }
    }
  }
}
```

The following shows how to apply the MPLS firewall filter to an interface:

```
[edit interfaces]
so-0/0/0 {
  mtu 4474;
  encapsulation ppp;
  sonet-options {
    fcs 32;
  }
  unit 0 {
    point-to-point;
    family mpls {
      filter {
        input expf;
        output expf;
      }
    }
  }
}
```

The MPLS firewall filter is applied to the input and output of an interface (see the **input** and **output** statements in the preceding example).

Configuring Policers for LSPs

MPLS LSP policing allows you to control the amount of traffic forwarded through a particular LSP. Policing helps to ensure that the amount of traffic forwarded through an LSP never exceeds the requested bandwidth allocation. LSP policing is supported on regular LSPs, LSPs configured with DiffServ-aware traffic engineering, and multiclass LSPs. You can configure multiple policers for each multiclass LSP. For regular LSPs, each

LSP policer is applied to all of the traffic traversing the LSP. The policer's bandwidth limitations become effective as soon as the total sum of traffic traversing the LSP exceeds the configured limit.

NOTE: The PTX10003 router only supports regular LSPs.

You configure the multiclass LSP and DiffServ-aware traffic engineering LSP policers in a filter. The filter can be configured to distinguish between the different class types and apply the relevant policer to each class type. The policers distinguish between class types based on the EXP bits.

You configure LSP policers under the **family any** filter. The **family any** filter is used because the policer is applied to traffic entering the LSP. This traffic might be from different families: IPv6, MPLS, and so on. You do not need to know what sort of traffic is entering the LSP, as long as the match conditions apply to all types of traffic.

You can configure only those match conditions that apply across all types of traffic. The following are the supported match conditions for LSP policers:

- **forwarding-class**
- **packet-length**
- **interface**
- **interface-set**

To enable a policer on an LSP, first you need to configure a policing filter and then include it in the LSP configuration. For information about how to configure policers, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

To configure a policer for an LSP, specify a filter by including the **filter** option to the **policing** statement:

```
policing {
    filter filter-name;
}
```

You can include the **policing** statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **static-label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **static-label-switched-path** *lsp-name*]

LSP Policer Limitations

When configuring MPLS LSP policers, be aware of the following limitations:

- LSP policers are supported for packet LSPs only.
- LSP policers are supported for unicast next hops only. Multicast next hops are not supported.
- LSP policers are not supported on aggregated interfaces.
- The LSP policer runs before any output filters.
- Traffic sourced from the Routing Engine (for example, ping traffic) does not take the same forwarding path as transit traffic. This type of traffic cannot be policed.
- LSP policers work on all T Series routers and on M Series routers that have the Internet Processor II application-specific integrated circuit (ASIC).

NOTE: Starting with Junos OS Release 12.2R2, on T Series routers only, you can configure an LSP policer for a specific LSP to be shared across different protocol family types. To do so, you must configure the *logical-interface-policer* statement at the **[edit firewall policer *policer-name*]** hierarchy level.

Example: Configuring an LSP Policer

The following example shows how you can configure a policing filter for an LSP:

```
[edit firewall]
policer police-ct1 {
  if-exceeding {
    bandwidth-limit 50m;
    burst-size-limit 1500;
  }
  then {
    discard;
  }
}
policer police-ct0 {
  if-exceeding {
    bandwidth-limit 200m;
    burst-size-limit 1500;
  }
  then {
    discard;
  }
}
family any {
  filter bar {
    term discard-ct0 {
```

```

        then {
            policer police-ct0;
            accept;
        }
    }
}
term discard-ct1 {
    then {
        policer police-ct1;
        accept;
    }
}
}

```

Configuring Automatic Policers

IN THIS SECTION

- [Configuring Automatic Policers for LSPs | 152](#)
- [Configuring Automatic Policers for DiffServ-Aware Traffic Engineering LSPs | 153](#)
- [Configuring Automatic Policers for Point-to-Multipoint LSPs | 153](#)
- [Disabling Automatic Policing on an LSP | 154](#)
- [Example: Configuring Automatic Policing for an LSP | 154](#)

Automatic policing of LSPs allows you to provide strict service guarantees for network traffic. Such guarantees are especially useful in the context of Differentiated Services for traffic engineered LSPs, providing better emulation for ATM wires over an MPLS network. For more information about Differentiated Services for LSPs, see [“DiffServ-Aware Traffic Engineering Introduction” on page 1111](#).

Differentiated Services for traffic engineered LSPs allow you to provide differential treatment to MPLS traffic based on the EXP bits. To ensure these traffic guarantees, it is insufficient to simply mark the traffic appropriately. If traffic follows a congested path, the requirements might not be met.

LSPs are guaranteed to be established along paths where enough resources are available to meet the requirements. However, even if the LSPs are established along such paths and are marked properly, these requirements cannot be guaranteed unless you ensure that no more traffic is sent to an LSP than there is bandwidth available.

It is possible to police LSP traffic by manually configuring an appropriate filter and applying it to the LSP in the configuration. However, for large deployments it is cumbersome to configure thousands of different filters. Configuration groups cannot solve this problem either, since different LSPs might have different

bandwidth requirements, requiring different filters. To police traffic for numerous LSPs, it is best to configure automatic policers.

When you configure automatic policers for LSPs, a policer is applied to all of the LSPs configured on the router. However, you can disable automatic policing on specific LSPs.

NOTE: When you configure automatic policers for DiffServ-aware traffic engineering LSP, GRES is not supported.

NOTE: You cannot configure automatic policing for LSPs carrying CCC traffic.

The following sections describe how to configure automatic policers for LSPs:

Configuring Automatic Policers for LSPs

To configure automatic policers for standard LSPs (neither DiffServ-aware traffic engineered LSPs nor multiclass LSPs), include the **auto-policing** statement with either the **class all *policer-action*** option or the **class ct0 *policer-action*** option:

```
auto-policing {
  class all policer-action;
  class ct0 policer-action;
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

You can configure the following policer actions for automatic policers:

- **drop**—Drop all packets.
- **loss-priority-high**—Set the packet loss priority (PLP) to high.
- **loss-priority-low**—Set the PLP to low.

These policer actions are applicable to all types of LSPs. The default policer action is to do nothing.

Automatic policers for LSPs police traffic based on the amount of bandwidth configured for the LSPs. You configure the bandwidth for an LSP using the **bandwidth** statement at the **[edit protocols mpls label-switched-path *lsp-path-name*]** hierarchy level. If you have enabled automatic policers on a router, change the bandwidth configured for an LSP, and commit the revised configuration, the change does not

take affect on the active LSPs. To force the LSPs to use the new bandwidth allocation, issue a **clear mpls lsp** command.

NOTE: You cannot configure automatic policers for LSPs that traverse aggregated interfaces or Multilink Point-to-Point Protocol (MLPPP) interfaces.

Configuring Automatic Policers for DiffServ-Aware Traffic Engineering LSPs

To configure automatic policers for DiffServ-aware traffic engineering LSPs and for multiclass LSPs, include the **auto-policing** statement:

```
auto-policing {
  class all policer-action;
  class ctnumber policer-action;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

You include either the **class all policer-action** statement or a **class ctnumber policer-action** statement for each of one or more classes (you can configure a different policer action for each class). For a list of the actions that you can substitute for the **policer-action** variable, see [“Configuring Automatic Policers for LSPs” on page 152](#). The default policer action is to do nothing.

NOTE: You cannot configure automatic policers for LSPs that traverse aggregated interfaces or MLPPP interfaces.

Configuring Automatic Policers for Point-to-Multipoint LSPs

You can configure automatic policers for point-to-multipoint LSPs by including the **auto-policing** statement with either the **class all policer-action** option or the **class ct0 policer-action** option. You only need to configure the **auto-policing** statement on the primary point-to-multipoint LSP (for more information on primary point-to-multipoint LSPs, see [“Configuring the Primary Point-to-Multipoint LSP” on page 686](#)). No additional configuration is required on the subLSPs for the point-to-multipoint LSP. Point-to-multipoint automatic policing is applied to all branches of the point-to-multipoint LSP. In addition, automatic policing is applied to any local VRF interfaces that have the same forwarding entry as a point-to-multipoint branch. Feature parity for automatic policers for MPLS point-to-multipoint LSPs on the Junos Trio chipset is supported in Junos OS Releases 11.1R2, 11.2R2, and 11.4.

The automatic policer configuration for point-to-multipoint LSPs is identical to the automatic policer configuration for standard LSPs. For more information, see [“Configuring Automatic Policers for LSPs” on page 152](#).

Disabling Automatic Policing on an LSP

When you enable automatic policing, all of the LSPs on the router or logical system are affected. To disable automatic policing on a specific LSP on a router where you have enabled automatic policing, include the **policing** statement with the **no-auto-policing** option:

```
policing no-auto-policing;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls [label-switched-path](#) *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls [label-switched-path](#) *lsp-name*]

Example: Configuring Automatic Policing for an LSP

Configure automatic policing for a multiclass LSP, specifying different actions for class types **ct0**, **ct1**, **ct2**, and **ct3**.

```
[edit protocols mpls]
diffserv-te {
  bandwidth-model extended-mam;
}
auto-policing {
  class ct1 loss-priority-low;
  class ct0 loss-priority-high;
  class ct2 drop;
  class ct3 loss-priority-low;
}
traffic-engineering bgp-igp;
label-switched-path sample-lsp {
  to 3.3.3.3;
  bandwidth {
    ct0 11;
    ct1 1;
    ct2 1;
    ct3 1;
  }
}
interface fxp0.0 {
  disable;
}
```

```
interface t1-0/5/3.0;
interface t1-0/5/4.0;
```

Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets

You can selectively set the DiffServ code point (DSCP) field of MPLS-tagged IPv4 and IPv6 packets to 0 without affecting output queue assignment, and continue to set the MPLS EXP field according to the configured rewrite table, which is based on forwarding classes. You can accomplish this by configuring a firewall filter for the MPLS-tagged packets.

Overview of MPLS Firewall Filters on Loopback Interface

Although all interfaces are important, the loopback interface might be the most important because it is the link to the Routing Engine, which runs and manages all the routing protocols. The loopback interface is a gateway for all the control traffic that enters the Routing Engine of the switch. You can control this traffic by configuring a firewall filter on the loopback interface (lo0) on **family mpls**. Loopback firewall filters affect only traffic destined for the Routing Engine CPU. You can apply a loopback firewall filter only in the *ingress* direction (packets entering the interface). Starting with Junos OS Release 19.2R1, you can apply an MPLS firewall filter to a loopback interface on a label switch router (LSR) on QFX5100, QFX5110, QFX5200, and QFX5210 switches.

When you configure an MPLS firewall filter, you define filtering criteria (*terms, with match conditions*) for the packets and an *action* for the switch to take if the packets match the filtering criteria. Because you apply the filter to a loopback interface, you must explicitly specify the time to live (TTL) match condition under **family mpls** and set its TTL value to 1 (**ttl=1**). The TTL is an 8-bit (IPv4) header field that signifies the remaining time an IP packet has left before its life ends and is dropped. You can also match packets with other MPLS qualifiers such as **label**, **exp**, Layer 4 **source port**, and Layer 4 **destination port**. For more information, see *Firewall Filter Match Conditions for MPLS Traffic*.

Benefits of Adding MPLS Firewall Filters on the Loopback Interface

- Protects the Routing Engine by ensuring that it accepts traffic only from trusted networks.
- Helps protect the Routing Engine from denial-of-service attacks.
- Gives you the flexibility to match packets on the source port and destination port. For example, if you run a traceroute, you can selectively filter traffic by choosing either TCP or UDP.

Guidelines and Limitations

- You can apply a loopback firewall filter only in the *ingress* direction
- Only MPLS fields **label**, **exp**, **ttl=1** and Layer 4 fields **tcp** and **udp** port numbers are supported.
- Only **accept**, **discard**, and **count** actions are supported.
- You must explicitly specify **ttl=1** under **family mpls** to match on TLL packets.

- Filters applied on the loopback interface cannot be matched on the destination port (inner payload) of an IPv6 packet.
- You cannot apply a filter on packets that have more than two MPLS labels.
- You cannot specify a port range for TCP or UDP match conditions.
- Only 255 firewall terms are supported.

Configuring MPLS Firewall Filters and Policers on Switches

IN THIS SECTION

- [Configuring an MPLS Firewall Filter | 156](#)
- [Applying an MPLS Firewall Filter to an MPLS Interface | 157](#)
- [Applying an MPLS Firewall Filter to a Loopback Interface | 157](#)
- [Configuring Policers for LSPs | 158](#)

You can configure firewall filters to filter MPLS traffic. To use an MPLS firewall filter, you must first configure the filter and then apply it to an interface you have configured for forwarding MPLS traffic. You can also configure a policer for the MPLS filter to police (that is, rate-limit) the traffic on the interface to which the filter is attached.

When you configure an MPLS firewall filter, you define the filtering criteria (terms, with match conditions) and an action for the switch to take if the packets match the filtering criteria.

NOTE: You can only configure MPLS filters in the ingress direction. Egress MPLS firewall filters are not supported.

Configuring an MPLS Firewall Filter

To configure an MPLS firewall filter:

1. Configure the filter name, term name, and at least one match condition—for example, match on MPLS packets with EXP bits set to either 0 or 4:

```
[edit firewall family mpls]
user@switch# set filter ingress-exp-filter term term-one from exp 0,4
```

2. In each firewall filter term, specify the actions to take if the packet matches all the conditions in that term—for example, count MPLS packets with EXP bits set to either 0 or 4:

```
[edit firewall family mpls filter ingress-exp-filter term term-one then]
user@switch# set count counter0
user@switch# set accept
```

3. When you are finished, follow the steps below to apply the filter to an interface.

Applying an MPLS Firewall Filter to an MPLS Interface

To apply the MPLS firewall filter to an interface you have configured for forwarding MPLS traffic (using the **family mpls** statement at the **[edit interfaces interface-name unit unit-number]** hierarchy level):

NOTE: You can apply firewall filters only to filter MPLS packets that enter an interface.

1. Apply the firewall filter to an MPLS interface—for example, apply the firewall filter to interface xe-0/0/5:

```
[edit interfaces]
user@switch# set xe-0/0/5 unit 0 family mpls filter input ingress-exp-filter
```

2. Review your configuration and issue the **commit** command:

```
[edit interfaces]
user@switch# commit
commit complete
```

Applying an MPLS Firewall Filter to a Loopback Interface

To apply an MPLS firewall filter to a loopback interface (lo0):

1. First, specify the packet format by using the *packet-format-match* command. You must restart the PFE every time you configure this command.
2. Configure the firewall filter match conditions and actions as described in [“Configuring an MPLS Firewall Filter” on page 156](#). You must explicitly set the TTL match condition to (**ttl=1**). You can also match packets with other MPLS qualifiers such as **label**, **exp**, and Layer 4 **source port**, and **destination port**.
3. Apply the filter to the loopback interface as an input filter.

```
[edit interfaces]
user@switch# set lo0 unit 0 family mpls filter input ingress-exp-filter
```

4. Review your configuration and issue the **commit** command:

```
[edit interfaces]
user@switch# commit
commit complete
```

The following is an example configuration.

```
set groups lo_mpls_filter interfaces lo0 unit 0 family mpls filter input mpls_lo
set groups lo_mpls_filter firewall family mpls filter mpls_lo term mpls_lo_term from ttl 1
set groups lo_mpls_filter firewall family mpls filter mpls_lo term mpls_lo_term from ip-version ipv4 protocol
  udp source-port 10
set groups lo_mpls_filter firewall family mpls filter mpls_lo term mpls_lo_term from ip-version ipv4 protocol
  udp destination-port 11
set groups lo_mpls_filter firewall family mpls filter mpls_lo term mpls_lo_term then count c1
set groups lo_mpls_filter firewall family mpls filter mpls_lo term mpls_lo_term then accept
```

Configuring Policers for LSPs

Starting with Junos OS 13.2X51-D15, you can send traffic matched by an MPLS filter to a two-color policer or three-color policer. MPLS LSP policing allows you to control the amount of traffic forwarded through a particular LSP. Policing helps to ensure that the amount of traffic forwarded through an LSP never exceeds the requested bandwidth allocation. LSP policing is supported on regular LSPs, LSPs configured with DiffServ-aware traffic engineering, and multiclass LSPs. You can configure multiple policers for each multiclass LSP. For regular LSPs, each LSP policer is applied to all of the traffic traversing the LSP. The policer's bandwidth limitations become effective as soon as the total sum of traffic traversing the LSP exceeds the configured limit.

You configure the multiclass LSP and DiffServ-aware traffic engineering LSP policers in a filter. The filter can be configured to distinguish between the different class types and apply the relevant policer to each class type. The policers distinguish between class types based on the EXP bits.

You configure LSP policers under the **family any** filter. The **family any** filter is used because the policer is applied to traffic entering the LSP. This traffic might be from different families: IPv6, MPLS, and so on. You do not need to know what sort of traffic is entering the LSP, as long as the match conditions apply to all types of traffic.

When configuring MPLS LSP policers, be aware of the following limitations:

- LSP policers are supported for packet LSPs only.
- LSP policers are supported for unicast next hops only. Multicast next hops are not supported.
- The LSP policer runs before any output filters.
- Traffic sourced from the Routing Engine (for example, ping traffic) does not take the same forwarding path as transit traffic. This type of traffic cannot be policed.

Release History Table

Release	Description
19.2R1	Starting with Junos OS Release 19.2R1, you can apply an MPLS firewall filter to a loopback interface on a label switch router (LSR) on QFX5100, QFX5110, QFX5200, and QFX5210 switches.

System Log Messages and SNMP Traps for MPLS

Whenever an LSP makes a transition from up to down, or down to up, and whenever an LSP switches from one active path to another, the ingress router generates a system log message and sends an SNMP trap. The following shows a sample system log message:

```
RPD_MPLS_LSP_UP: MPLS LSP sheep1 up on primary(any) Route 192.168.1.1 192.168.1.2
192.168.1.3
RPD_MPLS_LSP_CHANGE: MPLS LSP sheep1 change on primary(any) Route 192.168.1.1
192.168.1.2 192.168.1.3
RPD_MPLS_LSP_DOWN: MPLS LSP sheep1 down on primary(any)
```

For information about the MPLS SNMP traps and the proprietary MPLS MIBs, see the *Network Management and Monitoring Guide*.

System log messages for LSPs are generated by default. To disable the default logging of messages for LSPs, configure the **no-syslog** option under the **log-updown** statement:

```
log-updown {
  no-syslog;
}
```

To generate SNMP traps for LSPs, include the **trap** option to the **log-updown** statement:

```
log-updown {
    trap;
}
```

To generate SNMP traps whenever an LSP path goes down, include the **trap-path-down** option to the **log-updown** statement:

```
log-updown {
    trap-path-down;
}
```

To generate SNMP traps whenever an LSP path comes up, include the **trap-path-up** option to the **log-updown** statement:

```
log-updown {
    trap-path-up;
}
```

To disable the generation of system log messages, include the **no-syslog** option to the **log-updown** statement:

```
log-updown {
    no-syslog;
}
```

To disable the generation of SNMP traps, include the **no-trap** statement:

```
no-trap {
    mpls-lsp-traps;
    rfc3812-traps;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls [log-updown](#)]
- [edit logical-systems *logical-system-name* protocols mpls [log-updown](#)]

For scalability reasons, only the ingress router generates SNMP traps. By default, MPLS issues traps for all configured LSPs. If you have many LSPs, the number of traps can become quite large. To disable the generation of SNMP traps, configure the **no-trap** statement.

The **no-trap** statement also includes the following options which allow you to block certain categories of MPLS SNMP traps:

- **mpls-lsp-traps**—Blocks the MPLS LSP traps defined in the **jnx-mpls.mib**, but allows the **rfc3812.mib** traps.
- **rfc-3812-traps**—Blocks the traps defined in the **rfc3812.mib**, but allows the MPLS LSP traps defined in the **jnx-mpls.mib**.

Load Balancing MPLS Traffic

IN THIS SECTION

- [Configuring Load Balancing Based on MPLS Labels | 161](#)
- [Example: Load-Balanced MPLS Network | 166](#)
- [Router Configurations for the Load-Balanced MPLS Network | 167](#)
- [Configuring Load Balancing Based on MPLS Labels on ACX Series Routers | 182](#)
- [MPLS Encapsulated Payload Load-balancing Overview | 186](#)
- [Configuring MPLS Encapsulated Payload for Load Balancing | 187](#)
- [Policy-Based Multipath Routes Overview | 187](#)
- [Understanding IP-Based Filtering and Selective Port Mirroring of MPLS Traffic | 193](#)

Configuring Load Balancing Based on MPLS Labels

Load balancing occurs on a per-packet basis for MPLS flows on supported platforms. Entropy, or random distribution, is essential for the uniform distribution of packets to their next hops. By default, when load balancing is used to help distribute traffic, Junos OS employs a hash algorithm to select a next-hop address to install into the forwarding table. Whenever the set of next hops for a destination changes, the next-hop address is reselected by means of the hash algorithm. You can configure how the hash algorithm is used to load-balance traffic across a set of equal-cost label switched paths (LSPs).

To ensure entropy for VPLS & VPWS traffic, Junos OS can create a hash based on data from the IP header and as many as three MPLS labels (the so-called top labels).

In some cases, as the number of network feature that use labels grows (such as MPLS Fast Reroute, and RFC 3107, RSVP and VPN) data in the top three labels can become static and thus not a sufficient source for entropy. Load balancing can become skewed as a result, or the incidence of out-of-order packet delivery

may rise. For these cases, labels from the bottom of the label stack can be used (see Table 1, below for qualifications). Top labels and bottom labels cannot be used at the same time.

NOTE: MPC cards do not support the regular hash key configuration. For the MPC-based hash key configuration to be effective, you need an **enhanced-hash-key** configuration.

Load balancing is used to evenly distribute traffic when the following conditions apply:

- There are multiple equal-cost next hops over different interfaces to the same destination.
- There is a single next hop over an aggregated interface.

An LSP tends to load-balance its placement by randomly selecting one of the equal-cost next hops and using it exclusively. The random selection is made independently at each transit router, which compares Interior Gateway Protocol (IGP) metrics alone. No consideration is given to bandwidth or congestion levels.

This feature applies to aggregated Ethernet and aggregated SONET/SDH interfaces as well as multiple equal-cost MPLS next hops. In addition, on the T Series, MX Series, M120, and M320 routers only, you can configure load balancing for IPv4 traffic over Layer 2 Ethernet pseudowires. You can also configure load balancing for Ethernet pseudowires based on IP information. The option to include IP information in the hash key provides support for Ethernet circuit cross-connect (CCC) connections.

To load-balance based on the MPLS label information, configure the **family mpls** statement:

```
[edit forwarding-options hash-key]
family mpls {
  all-labels;
  bottom-label-1;
  bottom-label-2;
  bottom-label-3;
  label-1;
  label-2;
  label-3;
  no-labels;
  no-label-1-exp;
  payload {
    ether-pseudowire;
    ip {
      disable;
      layer-3-only;
      port-data {
        destination-lsb;
        destination-msb;
        source-lsb;
      }
    }
  }
}
```

```

        source-msb;
    }
}
}
}

```

You can include this statement at the following hierarchy levels:

- [edit forwarding-options hash-key]

Table 9 on page 163 provides detailed information about all of the possible MPLS LSP load-balancing options.

Table 9: MPLS LSP Load Balancing Options

Statement	Supported Platforms	MPLS LSP Load Balancing Options
all-labels	MX Series and PTX Series	<p>Prior to Junos OS Release 19.1R1, up to eight MPLS labels were included in the hash key to identify the uniqueness of a flow in the Packet Forwarding Engine. On PTX Series routers, this value is set by default.</p> <p>Starting in Junos OS Release 19.1R1, for MX Series routers with MPC and MIC interfaces, up to sixteen incoming MPLS labels are included in the hash key.</p>
bottom-label H	MX Series with DPC (I-Chip). Not supported on M10i, M7i, and M120.	Uses the bottom-most label for calculating the hash key, for example if the top labels do not provide sufficient variable for the required level of entropy.
bottom-label 2	MX Series with DPC (I-Chip). Not supported on M10i, M7i, and M120.	Uses the second label from the bottom for calculating the hash key, for example if the top labels do not provide sufficient variable for the required level of entropy.
bottom-label 3	MX Series with DPC (I-Chip). Not supported on M10i, M7i, and M120.	Uses the third label from the bottom for calculating the hash key, for example if the top labels do not provide sufficient variable for the required level of entropy.
label-1	M Series, MX Series, T Series	Include the first label in the hash key. Use this option for single label packets.
label-2	M Series, MX Series, T Series	Include the second label in the hash key. You must also configure the label-1 option. The entire first label and the first 16 bits of the second label are used in the hash key.

Table 9: MPLS LSP Load Balancing Options (*continued*)

Statement	Supported Platforms	MPLS LSP Load Balancing Options
label-3	M Series, MX Series, T Series	Include the third label in the hash key. You must also configure the label-1 option and the label-2 option.
no-labels	All	Excludes MPLS labels from the hash key.
no-label-1-exp	M Series, MX Series, T Series	Excludes the EXP bit of the top label from the hash key. You must also configure the label-1 option. For Layer 2 VPNs, the router could encounter a packet reordering problem. When a burst of traffic pushes the customer traffic bandwidth to exceed its limits, the traffic might be affected in mid flow. Packets might be reordered as a result. By excluding the EXP bit from the hash key, you can avoid this reordering problem.
payload	All	Allows you to configure which parts of the IP packet payload to include in the hash key. For the PTX Series Packet Transport Router, this value is set by default.
disable	PTX Series	Exclude IP payload from the hash key.
eth-pseudowire	M120, M320, MX Series, T Series	Load-balance IPv4 traffic over Layer 2 Ethernet pseudowires.
ip	All	Include the IPv4 or IPv6 address in the hash key. You must also configure either label-1 or no-labels .
layer-3-only	All	Include only the Layer 3 IP information in the hash key. Excludes all of the port-data bytes from the hash key.
port-data	M Series, MX Series, T Series	Include the source and destination port field information. By default, the most significant byte and least significant byte of the source and destination port fields are used in the hash key. To select specific bytes to use in the hash key, include one or more of the source-msb , source-lsb , destination-msb , and destination-lsb options at the [edit forwarding-options hash-key family mpls payload ip port-data] hierarchy level. To prevent all four bytes from being hashed, include the layer-3-only statement at the [edit forwarding-options hash-key family mpls payload ip] hierarchy level.
destination-lsb	M Series, MX Series, T Series	Include the least significant byte of the destination port in the hash key. Can be combined with any of the other port-data options.
destination-msb	M Series, MX Series, T Series	Include the most significant byte of the destination port in the hash key. Can be combined with any of the other port-data options.

Table 9: MPLS LSP Load Balancing Options (*continued*)

Statement	Supported Platforms	MPLS LSP Load Balancing Options
source-lsb	M Series, MX Series, T Series	Include the least significant byte of the source port in the hash key. Can be combined with any of the other port-data options.
source-msb	M Series, MX Series, T Series	Include the most significant byte of the source port in the hash key. Can be combined with any of the other port-data options.

The following examples illustrate ways in which you can configure MPLS LSP load balancing:

- To include the IP address as well as the first label in the hash key:
 - For M Series, MX Series, and T Series routers, configure the **label-1** statement and the **ip** option for the **payload** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-1;
payload {
  ip;
}
```

- For PTX Series Packet Transport Routers, the **all-labels** and **ip payload** options are configured by default, so no configuration is necessary.
- (M320 and T Series routers only) To include the IP address as well as both the first and second labels in the hash key, configure the **label-1** and **label-2** options and the **ip** option for the **payload** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-1;
label-2;
payload {
  ip;
}
```

NOTE: You can include this combination of statements on M320 and T Series routers only. If you include them on an M Series Multiservice Edge Router, only the first MPLS label and the IP payload are used in the hash key.

- For T Series routers, ensure proper load balancing by including the **label-1**, **label-2**, and **label-3** options at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-1;
label-2;
label-3;
```

- (M Series, MX Series, and T Series routers only) For Layer 2 VPNs, the router could encounter a packet reordering problem. When a burst of traffic pushes the customer traffic bandwidth to exceed its limits, the traffic might be affected in mid flow. Packets might be reordered as a result. By excluding the EXP bit from the hash key, you can avoid this reordering problem. To exclude the EXP bit of the first label from the hash calculations, include the **no-label-1-exp** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level:


```
[edit forwarding-options hash-key family mpls]
label-1;
no-label-1-exp;
payload {
    ip;
}
```

Example: Load-Balanced MPLS Network

When you configure several RSVP LSPs to the same egress router, the LSP with the lowest metric is selected and carries all traffic. If all of the LSPs have the same metric, one of the LSPs is selected at random and all traffic is forwarded over it. To distribute traffic equally across all LSPs, you can configure load balancing on the ingress or transit routers, depending on the type of load balancing configured.

[Figure 10 on page 167](#) illustrates an MPLS network with four LSPs configured to the same egress router (**R0**). Load balancing is configured on ingress router **R1**. The example network uses Open Shortest Path First (OSPF) as the interior gateway protocol (IGP) with OSPF area **0.0.0.0**. An IGP is required for the Constrained Shortest Path First (CSPF) LSP, which is the default for the Junos OS. In addition, the example network uses a policy to create BGP traffic.

Figure 10: Load-Balancing Network Topology

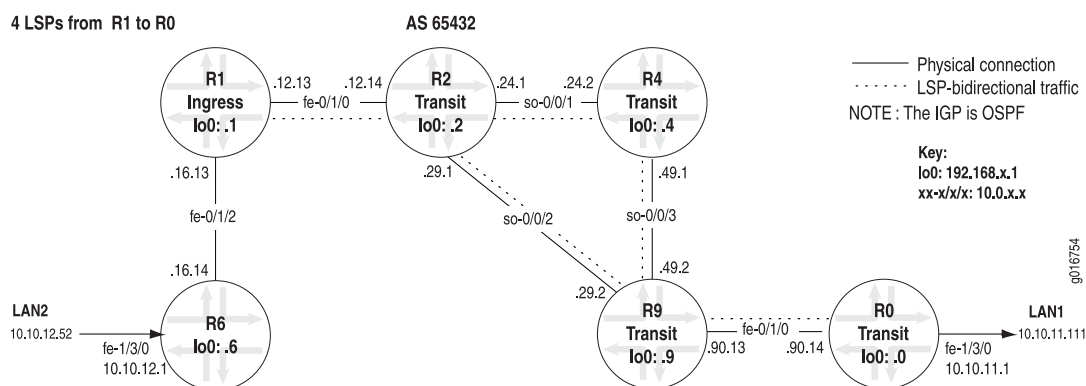

The network shown in [Figure 10 on page 167](#) consists of the following components:

- A full-mesh interior BGP (IBGP) topology, using AS 65432
- MPLS and RSVP enabled on all routers
- A send-statics policy on routers **R1** and **R0** that allows a new route to be advertised into the network
- Four unidirectional LSPs between **R1** and **R0**, and one reverse direction LSP between **R0** and **R1**, which allows for bidirectional traffic
- Load balancing configured on ingress router **R1**

The network shown in [Figure 10 on page 167](#) is a BGP full-mesh network. Since route reflectors and confederations are not used to propagate BGP learned routes, each router must have a BGP session with every other router running BGP.

Router Configurations for the Load-Balanced MPLS Network

Purpose

The configurations in this topic are for the six routers in the example network illustrated in [“Load-Balancing Network Topology” on page 166](#).

Action

To display the configuration of a router, use the following Junos OS CLI operational mode command:

```
user@host> show configuration | no-more
```

Sample Output 1

The following configuration output is for edge router **R6**.

```

user@R6> show configuration | no-more
[...Output truncated...]
interfaces {
    fe-0/1/2 {
        unit 0 {
            family inet {
                address 10.0.16.14/30;
            }
            family mpls; #MPLS enabled on relevant interfaces
        }
    }
    fe-1/3/0 {
        unit 0 {
            family inet {
                address 10.10.12.1/24;
            }
        }
    }
    fxp0 {
        unit 0 {
            family inet {
                address 192.168.70.148/21;
            }
        }
    }
    lo0 {
        unit 0 {
            family inet {
                address 192.168.6.1/32;
            }
        }
    }
}
routing-options {
    static {
[...Output truncated...]
        router-id 192.168.6.1; #Manually configured RID
        autonomous-system 65432; #Full mesh IBGP
    }
}
protocols {
    rsvp {
        interface fe-0/1/2.0;
        interface fxp0.0 {

```



```

        disable;
    }
}
mpls {
    interface fe-0/1/2.0;
    interface fxp0.0 {
        disable;
    }
}
bgp {
    group internal {
        type internal;
        local-address 192.168.6.1;
        neighbor 192.168.1.1;
        neighbor 192.168.2.1;
        neighbor 192.168.4.1;
        neighbor 192.168.9.1;
        neighbor 192.168.0.1;
    }
}
ospf { #IGP enabled
    traffic-engineering;
    area 0.0.0.0 {
        interface fe-0/1/2.0;
        interface fe-1/3/0.0;
        interface lo0.0 {
            passive; #Ensures protocols do not run over this interface
        }
    }
}
}

```

Sample Output 2

The following configuration output is for ingress router **R1**.

```

user@R1> show configuration | no-more
[...Output truncated...]
interfaces {
    fe-0/1/0 {
        unit 0 {
            family inet {

```

```

        address 10.0.12.13/30;
    }
    family mpls; #MPLS enabled on relevant interfaces
}
}
fe-0/1/2 {
    unit 0 {
        family inet {
            address 10.0.16.13/30;
        }
        family mpls;
    }
}
fxp0 {
    unit 0 {
        family inet {
            address 192.168.70.143/21;
        }
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.168.1.1/32;
        }
    }
}
}
routing-options {
    static {
        [...Output truncated...]
        route 100.100.1.0/24 reject; #Static route for send-statics policy
    }

    router-id 192.168.1.1; #Manually configured RID
    autonomous-system 65432; #Full mesh IBGP
    forwarding-table {
        export lbpp; #Routes exported to forwarding table
    }
}
protocols {
    rsvp {
        interface fe-0/1/0.0;
        interface fe-0/1/2.0;
        interface fxp0.0 {

```

```

        disable;
    }
}
mpls {
    label-switched-path lsp 1 { #First LSP
        to 192.168.0.1; # Destination of the LSP
        install 10.0.90.14/32 active; # The prefix is installed in the
        primary via-r4; # inet.0 routing table
    }
    label-switched-path lsp2 {
        to 192.168.0.1;
        install 10.0.90.14/32 active;
        primary via-r2;
    }
    label-switched-path lsp3 {
        to 192.168.0.1;
        install 10.0.90.14/32 active;
        primary via-r2;
    }
    label-switched-path lsp4 {
        to 192.168.0.1;
        install 10.0.90.14/32 active;
        primary via-r4;
    }
    path via-r2 { #Primary path to spread traffic across interfaces
        10.0.29.2 loose;
    }
    path via-r4 {
        10.0.24.2 loose;
    }
    interface fe-0/1/0.0;
    interface fe-0/1/2.0;
    interface fxp0.0 {
        disable;
    }
}
bgp {
    export send-statics; #Allows advertising of a new route
    group internal {
        type internal;
        local-address 192.168.1.1;
        neighbor 192.168.2.1;
        neighbor 192.168.4.1;
    }
}

```

```

        neighbor 192.168.9.1;
        neighbor 192.168.6.1;
        neighbor 192.168.0.1;
    }
}

ospf { #IGP enabled
    traffic-engineering;
    area 0.0.0.0 {
        interface fe-0/1/0.0;
        interface fe-0/1/2.0;
        interface lo0.0 {
            passive; #Ensures protocols do not run over this interface
        }
    }
}

policy-options { #Load balancing policy
    policy-statement lbpp {
        then {
            load-balance per-packet;
        }
    }
    policy-statement send-statics { #Static route policy
        term statics {
            from {
                route-filter 100.100.1.0/24 exact;
            }
            then accept;
        }
    }
}
}

```

Sample Output 3

The following configuration output is for transit router **R2**.

```

user@R2> show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/1 {
        unit 0 {
            family inet {

```

```

        address 10.0.24.1/30;
    }
    family mpls; #MPLS enabled on relevant interfaces
}
}
so-0/0/2 {
    unit 0 {
        family inet {
            address 10.0.29.1/30;
        }
        family mpls;
    }
}
fe-0/1/0 {
    unit 0 {
        family inet {
            address 10.0.12.14/30;
        }
        family mpls;
    }
}
fxp0 {
    unit 0 {
        family inet {
            address 192.168.70.144/21;
        }
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.168.2.1/32;
        }
    }
}
}
routing-options {
    static {
        [...Output truncated...]
        router-id 192.168.2.1; #Manually configured RID
        autonomous-system 65432; #Full mesh IBGP
    }
}
}
protocols {

```

```

    rsvp {
        interface so-0/0/1.0;
        interface fe-0/1/0.0;
        interface so-0/0/2.0;
        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        interface fe-0/1/0.0;
        interface so-0/0/1.0;
        interface so-0/0/2.0;
        interface fxp0.0 {
            disable;
        }
    }
    bgp {
        group internal {
            type internal;
            local-address 192.168.2.1;
            neighbor 192.168.1.1;
            neighbor 192.168.4.1;
            neighbor 192.168.9.1;
            neighbor 192.168.6.1;
            neighbor 192.168.0.1;
        }
    }
    ospf { #IGP enabled
        traffic-engineering;
        area 0.0.0.0 {
            interface fe-0/1/0.0;
            interface so-0/0/1.0;
            interface so-0/0/2.0;
            interface lo0.0 {
                passive; #Ensures protocols do not run over this interface
            }
        }
    }
}

```

Sample Output 4

The following configuration output is for transit router **R4**.

```

user@R4> show configuration | no-more
[...Output truncated...]
interfaces {
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.0.24.2/30;
      }
      family mpls; # MPLS enabled on relevant interfaces
    }
  }
  so-0/0/3 {
    unit 0 {
      family inet {
        address 10.0.49.1/30;
      }
      family mpls;
    }
  }
  fxp0 {
    unit 0 {
      family inet {
        address 192.168.70.146/21;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 192.168.4.1/32;
      }
    }
  }
}
routing-options {
  static {
    [...Output truncated...]
    router-id 192.168.4.1; #Manually configured RID
    autonomous-system 65432; #Full mesh IBGP
  }
}
protocols {
  rsvp {
    interface so-0/0/1.0;
    interface so-0/0/3.0;
  }
}

```

```

        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        interface so-0/0/1.0;
        interface so-0/0/3.0;
        interface fxp0.0 {
            disable;
        }
    }
    bgp {
        group internal {
            type internal;
            local-address 192.168.4.1;
            neighbor 192.168.1.1;
            neighbor 192.168.2.1;
            neighbor 192.168.9.1;
            neighbor 192.168.6.1;
            neighbor 192.168.0.1;
        }
    }
    ospf { #IGP enabled
        traffic-engineering;
        area 0.0.0.0 {
            interface so-0/0/1.0;
            interface so-0/0/3.0;
            interface lo0.0 {
                passive; #Ensures protocols do not run over this interface
            }
        }
    }
}

```

Sample Output 5

The following configuration output is for transit router **R9**.

```

user@R9> show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/2 {

```



```

    unit 0 {
        family inet {
            address 10.0.29.2/30;
        }
        family mpls; #MPLS enabled on relevant interfaces
    }
}
so-0/0/3 {
    unit 0 {
        family inet {
            address 10.0.49.2/30;
        }
        family mpls;
    }
}
fe-0/1/0 {
    unit 0 {
        family inet {
            address 10.0.90.13/30;
        }
        family mpls;
    }
}
fxp0 {
    unit 0 {
        family inet {
            address 192.168.69.206/21;
        }
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.168.9.1/32;
        }
    }
}
}
routing-options {
    static {
        [...Output truncated...]
        router-id 192.168.9.1; #Manually configured RID
        autonomous-system 65432; #Full mesh IBGP
    }
}

```

```

protocols {
    rsvp {
        interface so-0/0/2.0;
        interface so-0/0/3.0;
        interface fe-0/1/0.0;
        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        interface so-0/0/2.0;
        interface so-0/0/3.0;
        interface fe-0/1/0.0;
        interface fxp0.0 {
            disable;
        }
    }
    bgp {
        group internal {
            type internal;
            local-address 192.168.9.1;
            neighbor 192.168.1.1;
            neighbor 192.168.2.1;
            neighbor 192.168.4.1;
            neighbor 192.168.0.1;
            neighbor 192.168.6.1;
        }
    }
    ospf { #IGP enabled
        traffic-engineering;
        area 0.0.0.0 {
            interface so-0/0/2.0;
            interface so-0/0/3.0;
            interface fe-0/1/0.0;
            interface lo0.0 {
                passive; #Ensures protocols do not run over this interface
            }
        }
    }
}

```

Sample Output 6

The following configuration output is for egress router **R0**.

```

user@R0> show configuration | no-more
[...Output truncated...]
interfaces {
    fe-0/1/0 {
        unit 0 {
            family inet {
                address 10.0.90.14/30;
            }
            family mpls; #MPLS enabled on relevant interfaces
        }
    }
    fe-1/3/0 {
        unit 0 {
            family inet {
                address 10.10.11.1/24;
            }
        }
    }
    fxp0 {
        unit 0 {
            family inet {
                address 192.168.69.207/21;
            }
        }
    }
    lo0 {
        unit 0 {
            family inet {
                address 192.168.0.1/32;
            }
        }
    }
}
routing-options {
    static {
        [...Output truncated...]
        route 100.100.10.0/24 reject; #Static route for send-statics policy
    }
    router-id 192.168.0.1; #Manually configured RID
    autonomous-system 65432; #Full mesh IBGP
}
protocols {
    rsvp {
        interface fe-0/1/0.0;
        interface fe-1/3/0.0;
    }
}

```

```

        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        label-switched-path r0-r6 {
            to 192.168.6.1;
        }
        interface fe-0/1/0.0;
        interface fe-1/3/0.0;
        interface fxp0.0 {
            disable;
        }
    }
    bgp {
        group internal {
            type internal;
            local-address 192.168.0.1;
            export send-statics; #Allows advertising of a new route
            neighbor 192.168.9.1;
            neighbor 192.168.6.1;
            neighbor 192.168.1.1;
            neighbor 192.168.2.1;
            neighbor 192.168.4.1;
        }
    }
    ospf { #IGP enabled
        traffic-engineering;
        area 0.0.0.0 {
            interface fe-0/1/0.0;
            interface fe-1/3/0.0;
            interface lo0.0 {
                passive; #Ensures protocols do not run over this interface
            }
        }
    }
}
policy-options {
    policy-statement send-statics {
        term statics {
            from {
                route-filter 100.100.10.0/24 exact;
            }
        }
    }
}

```

```

        then accept;
    }
}
}

```

Meaning

Sample Outputs 1 through 6 show the base interfaces, routing options, protocols, and policy options configurations for all six routers in the example network illustrated in [“Example: Load-Balanced MPLS Network” on page 166](#).

All routers in the network have MPLS, RSVP, and BGP enabled. OSPF is configured as the IGP, and relevant interfaces have basic IP information and MPLS support.

In addition, all routers have the router ID (RID) configured manually at the **[edit routing-options]** hierarchy level to avoid duplicate RID problems. The **passive** statement is included in the OSPF configuration to ensure that protocols are not run over the loopback (**lo0**) interface and that the loopback (**lo0**) interface is advertised correctly throughout the network.

Sample Outputs 1, 3, 4, and 5 for **R6**, **R2**, **R4**, and **R9** show the base configuration for transit label-switched routers. The base configuration includes all interfaces enabled for MPLS, the RID manually configured, and the relevant protocols (RSVP, MPLS, BGP, and OSPF).

Sample Output 2 from ingress router **R1** shows the base configuration plus four LSPs (**lsp1** through **lsp4**) configured to **R0**. The four LSPs are configured with different primary paths that specify a loose hop through **R4** for **lsp1** and **lsp4**, and through **R2** for **lsp2** and **lsp3**.

To create traffic, **R1** has a static route (**100.100.1.0/24**) configured at the **[edit routing-options static route]** hierarchy level. The prefix is included in the send-statics policy at the **[edit policy-options send statics]** hierarchy level so the routes can become BGP routes.

In addition, on the ingress router **R1**, load balancing is configured using the **per-packet** option, and the policy is exported at the **[edit routing-options forwarding-table]** hierarchy level.

Sample Output 6 from egress router **R0** shows one LSP (**r0-r6**) to **R6** used to create bidirectional traffic. OSPF requires bidirectional LSP reachability before it will advertise the LSP into the IGP. Although the LSP is advertised into the IGP, no hello messages or routing updates occur over the LSP—only user traffic is sent over the LSP. The router uses its local copy of the IGP database to verify bidirectional reachability.

In addition, **R0** has a static route (**100.100.10.0/24**) configured at the **[edit routing-options static route]** hierarchy level. The prefix is included in the send-statics policy at the **[edit policy-options send statics]** hierarchy level so the routes can become BGP routes.

Configuring Load Balancing Based on MPLS Labels on ACX Series Routers

ACX Series routers can load-balance on a per-packet basis in MPLS. Load balancing can be performed on information in both the IP header and on up to three MPLS labels, providing a more uniform distribution of MPLS traffic to next hops. This feature is enabled on supported platforms by default and requires no configuration.

Load balancing is used to evenly distribute traffic when there is a single next hop over an aggregated interface or a LAG bundle. Load balancing using MPLS labels is supported only for LAG interfaces and not for equal-cost multipath (ECMP) links.

By default, when load balancing is used to help distribute traffic, Junos OS employs a hash algorithm to select a next-hop address to install into the forwarding table. Whenever the set of next hops for a destination changes in any way, the next-hop address is reselected by means of the hash algorithm. You can configure how the hash algorithm is used to load-balance traffic across interfaces in an aggregated Ethernet (ae) interface.

An LSP tends to load-balance its placement by randomly selecting one of the interfaces in an **ae**- interface bundle and using it exclusively. The random selection is made independently at each transit router, which compares Interior Gateway Protocol (IGP) metrics alone. No consideration is given to bandwidth or congestion levels.

To load-balance based on the MPLS label information, configure the **family mpls** statement:

```
[edit forwarding-options hash-key]
family mpls {
  all-labels;
  label-1;
  label-2;
  label-3;
  no-labels;
  payload {
    ether-pseudowire;
    ip {
      layer-3-only;
      port-data {
        destination-lsb;
        destination-msb;
        source-lsb;
        source-msb;
      }
    }
  }
}
```

You can include this statement at the **[edit forwarding-options hash-key]** hierarchy level.

NOTE: When you configure payload ip (**user@host# set forwarding-options hash-key family mpls payload ip**), configuring **layer-3-only** and **port-data** is mandatory.

Load balancing functionality, without proper hash-keys configuration, may result in an unpredictable behavior.

For Layer 2 VPN/pseudowire tunnel termination, upto two labels are used for hashing and payload MAC destination and source addresses can be optionally selected. These controls can be used to support ether-pseudowire knob in family mpls under hash-key configuration shown above. However, since ACX2000 and ACX4000 also support TDM pseudowires, the ether-pseudowire knobs needs to be used only when TDM pseudowires are not being used.

For Layer 3 VPN tunnel termination, upto two labels are used for hashing and payload IP source and destination addresses and Layer 4 source and destination ports can be optionally selected. These controls can be used for supporting ip port-data knobs in family mpls under hash-key configuration shown above. However, since Layer 4 port MSB and LSB cannot be individually selected, one of destination-lsb or destination-msb knobs or one of source-lsb or source-msb knobs would select Layer 4 destination or source ports, respectively.

For LSR case, upto three labels are used for hashing. If a BOS is seen when parsing the first three labels, BCM examines the first nibble of payload - if the nibble is 4, the payload is treated as IPv4 and if the first nibble is 6, the payload is treated as IPv6 and in such cases payload source and destination IP addresses can be speculatively used for hashing. These controls can be used for supporting ip port-data knobs in family mpls under hash-key configuration. However, Layer 4 ports cannot be used for hashing in LSR case, and only layer-3-only knob is applicable. BCM does not claim support for hashing on fields beyond the three MPLS labels. Load Balancing for a single pseudowire session does not take place in case of LSR as all the traffic specific to that session will carry the same set of MPLS labels.

Load balancing on LSR AE interfaces can be achieved for a higher number of MPLS sessions, that is minimum of 10 sessions. This is applicable for CCC/VPLS/L3VPN. In case of Layer 3 VPN, the traffic may not be equally distributed across the member links as the layer 3 addresses also get accounted for (along with the labels) for the hash input function.

For LER scenarios, in case of ACX5048 and ACX5096, hashing based on Layer 3 and Layer 4 fields is possible by configuring the payload option under the “family mpls” hierarchy. Hashing on the LER is not be based on Labels. For Layer 3 service, it is mandatory to mention the payload as “layer-3-only” and specify “port-data” in case of Layer 4 service. You can also mention the label count while configuring hash-keys on LER routers.

NOTE: LER and LSR load balancing behavior is applicable for CCC/VPLS/Layer 3 VPN and other IP MPLS scenarios.

This feature applies to aggregated Ethernet and aggregated SONET/SDH interfaces. In addition, you can configure load balancing for IPv4 traffic over Layer 2 Ethernet pseudowires. You can also configure load balancing for Ethernet pseudowires based on IP information. The option to include IP information in the hash key provides support for Ethernet circuit cross-connect (CCC) connections.

[Table 10 on page 184](#) provides detailed information about all of the possible MPLS LSP load-balancing options.

Table 10: MPLS LSP Load Balancing Options

Statement	MPLS LSP Load Balancing Options
label-1	Include the first label in the hash key. Use this option for single label packets.
label-2	Include the second label in the hash key. You must also configure the label-1 option. The entire first label and the first 16 bits of the second label are used in the hash key.
label-3	Include the third label in the hash key. You must also configure the label-1 option and the label-2 option.
no-labels	Excludes MPLS labels from the hash key.
payload	Allows you to configure which parts of the IP packet payload to include in the hash key. For the PTX Series Packet Transport Switch, this value is set by default.
disable	Exclude IP payload from the hash key.
ether-pseudowire	Load-balance IPv4 traffic over Layer 2 Ethernet pseudowires.
ip	Include the IPv4 or IPv6 address in the hash key. You must also configure either label-1 or no-labels .
layer-3-only	Include only the Layer 3 IP information in the hash key. Excludes all of the port-data bytes from the hash key.

Table 10: MPLS LSP Load Balancing Options (*continued*)

Statement	MPLS LSP Load Balancing Options
port-data	Include the source and destination port field information. By default, the most significant byte and least significant byte of the source and destination port fields are used in the hash key. To select specific bytes to use in the hash key, include one or more of the source-msb , source-lsb , destination-msb , and destination-lsb options at the [edit forwarding-options hash-key family mpls payload ip port-data] hierarchy level. To prevent all four bytes from being hashed, include the layer-3-only statement at the [edit forwarding-options hash-key family mpls payload ip] hierarchy level.
destination-lsb	Include the least significant byte of the destination port in the hash key. Can be combined with any of the other port-data options.
destination-msb	Include the most significant byte of the destination port in the hash key. Can be combined with any of the other port-data options.
source-lsb	Include the least significant byte of the source port in the hash key. Can be combined with any of the other port-data options.
source-msb	Include the most significant byte of the source port in the hash key. Can be combined with any of the other port-data options.

To include the IP address as well as the first label in the hash key, configure the **label-1** statement and the **ip** option for the **payload** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-1;
payload {
  ip;
}
```

To include the IP address as well as both the first and second labels in the hash key, configure the **label-1** and **label-2** options and the **ip** option for the **payload** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-1;
label-2;
payload {
  ip;
}
```

Ensure proper load balancing by including the **label-1**, **label-2**, and **label-3** options at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-1;
label-2;
label-3;
```

MPLS Encapsulated Payload Load-balancing Overview

Routers can load-balance on a per-packet basis in MPLS. Load balancing can be performed on the information in both the IP header and on up to three MPLS labels, providing a more uniform distribution of MPLS traffic to next hops.

Load balancing is used to evenly distribute traffic when the following conditions apply:

- There are multiple equal-cost next hops over different interfaces to the same destination.
- There is a single next hop over an aggregated interface.

By default, when load balancing is used to help distribute traffic, a hash algorithm is used to select a next-hop address to install into the forwarding table. Whenever the set of next hops for a destination changes in any way, the next-hop address is reselected by means of the hash algorithm.

In case of multiple transport layer networks such as Ethernet over MPLS or Ethernet pseudowire, the hash algorithm needs to look beyond the outer header of the payload and into the inner headers to generate an even distribution. To determine the inner encapsulation, the PFE relies on the presence of certain codes or numbers at fixed payload offsets; for example the presence of payload type 0X800 or the presence of protocol number 4 for an IPv4 packet. In Junos OS, you can configure **zero-control-word** option to indicate the start of an Ethernet frame in an MPLS ether-pseudowire payload. On seeing this control word, which is four bytes having a numerical value of all zeros, the hash generator assumes the start of an Ethernet frame at the end of the control word in an MPLS ether-pseudowire packet.

NOTE: For DPC I-chip-based cards, configure the **zero-control-word** option at the **[edit forwarding-options hash-key family mpls ether-pseudowire]** hierarchy level; and for MPC cards, configure the **zero-control-word** option at the **[edit forwarding-options enhanced-hash-key family mpls ether-pseudowire]** hierarchy level.

Configuring MPLS Encapsulated Payload for Load Balancing

By default, when load balancing is used to help distribute traffic, a hash algorithm is used to select a next-hop address to install into the forwarding table. Whenever the set of next hops for a destination changes in any way, the next-hop address is reselected by means of the hash algorithm. Configure the **zero-control-word** option to indicate the start of an Ethernet frame in an MPLS ether-pseudowire payload. On seeing this control word, four bytes having a numerical value of all zeros, the hash generator assumes the start of the Ethernet frame at the end of the control word in an MPLS ether-pseudowire packet.

Before you begin to configure MPLS encapsulated payload for load balancing, configure routing and signaling protocols.

To configure MPLS encapsulated payload for load balancing:

1. Configure the **zero-control-word** option to indicate the start of an Ethernet frame in an MPLS ether-pseudowire payload.
 - For DPC I-chip-based cards, configure the **zero-control-word** option at the **[edit forwarding-options hash-key family mpls ether-pseudowire]** hierarchy level.

```
[edit forwarding-options hash-key family mpls ether-pseudowire]
user@host# set zero-control-word
```

- For MPC cards, configure the **zero-control-word** option at the **[edit forwarding-options enhanced-hash-key family mpls ether-pseudowire]** hierarchy level.

```
[edit forwarding-options enhanced-hash-key family mpls ether-pseudowire]
user@host# set zero-control-word
```

Policy-Based Multipath Routes Overview

IN THIS SECTION

- [Understanding Policy-Based Multipath Routes | 188](#)
- [Benefits of Policy-Based Multipath Routes | 188](#)
- [Policy-Based Multipath Routes for Route Resolution | 189](#)
- [Sample Route Resolution Using Policy-Based Multipath Routes | 189](#)
- [Enhancement to Class-of-Service \(CoS\) Forwarding-Policy | 191](#)
- [Enhancements to Policy Match Protocol | 192](#)
- [Impact of Configuring Policy-Based Multipath Route on Network Performance | 193](#)

Segment routing networks can have multiple transport protocols in the core. You can combine segment routing SR-TE LDP or RSVP routes and SR-TE IP routes and install a multipath route in the routing information base (also known as routing table). You can then steer selective service traffic using the multipath route through policy configuration.

Understanding Policy-Based Multipath Routes

There are different transport protocols in a network, such as IGP, labelled IGP, RSVP, LDP, and segment routing traffic-engineering (SR-TE) protocols, that are used to resolve service traffic. However, you could not use a combination of the transport protocols to resolve the service traffic. With the introduction of the policy-based multipath feature, you can combine segment routing traffic-engineered (SR-TE) LDP or RSVP routes and SR-TE IP routes to create a multipath route that is installed in the routing information base. You can resolve BGP service routes over the multipath route through policy configuration and steer traffic differently for different prefixes.

A multipath route has combined next hops of route entries that are used for load balancing. All the supporting routes of the multipath route entry must be in same routing information base. When the supporting routes are under different routing information base, you can use the **rib-group** configuration statement to add route entries to a particular routing information base.

You can configure a multipath route using a policy to select the list of routes whose next hops is to be combined together. When you include the **policy-multipath** statement along with the **policy** statement at the **[edit routing-options rib routing-table-name]** hierarchy level, a policy-based multipath route is created.

The policy-based multipath feature is supported for both IP and IPv6 protocols, and can be configured under the **[edit routing-instances]** hierarchy level.

For example:

```
[edit routing-options]
user@host# set rib inet.3 policy-multipath policy example-policy
[edit policy-options]
user@host# set policy-statement example-policy from example-conditions
user@host# set policy-options policy-statement example-policy then accept
```

The configured policy is applied to each route entry for a given prefix. The multipath route is created only when more than one route (including active route) passes the policy. Any action commands configured in the policy, such as apply, is evaluated using the active route. For non-active routes, the policy is applied to check if the routes can participate in the multipath route or not. Multipath routes inherit all attributes of the active route. These attributes can be modified using the multipath policy configuration.

Benefits of Policy-Based Multipath Routes

- Provides flexibility to combine core network protocols to steer selective traffic.
- Optimizes network performance with weighted equal-cost multipath using multipath routes.

Policy-Based Multipath Routes for Route Resolution

You can combine segment routing traffic-engineered (SR-TE) LDP or RSVP routes and SR-TE IP routes and install a multipath route in the routing information base. The policy-based multipath routes are not active entries in the routing information base. When a multipath route is generated by configuration of policy, it is used for resolving protocol next hops instead of active routes. A multipath route next hop is created by merging gateways of next hops of each constituent route.

Take the following into consideration when configuring policy-based multipath routes for route resolution:

- If the member route of a multipath route points to a next hop other than the router next hop or an indirect next hop with forwarding next hop to the router next hop, such next hops are ignored.
- If the constituent routes point to indirect next hop, then gateways from the forwarding-next hop are merged and the indirect next hop is ignored.
- If total number of gateways exceeds the **maximum-ecmp** supported on the device, then only the **maximum-ecmp** gateways are retained and all other gateways are ignored.
- Gateways with lower weights are given preference. When one of the member route has unilist of indirect next hops and each of the next hop is pointing to a forwarding next hop, there can be weight values both at the indirect next hop and at forwarding next hop. In such cases, weight value of gateways is updated to reflect the combined effect of weights at both levels.

Sample Route Resolution Using Policy-Based Multipath Routes

Taking as an example, let us assume there are segment routing traffic-engineered LSPs, label IS-IS routes, and LDP LSPs for a destination 1.1.1.1/32, as displayed in the output below:

```
1.1.1.1/32          *[SPRING-TE/8] 00:00:58, metric 1, metric2 30
> to 13.1.1.2 via ge-0/0/1.1, Push 33333, Push 801005, Push
801006(top)

[L-ISIS/14] 1w0d 00:15:57, metric 10
> to 12.1.1.1 via ge-0/0/0.1
  to 12.22.1.1 via ge-0/0/0.2
  to 12.23.1.1 via ge-0/0/0.3
  to 12.24.1.1 via ge-0/0/0.4
  to 12.25.1.1 via ge-0/0/0.5
  to 13.1.1.2 via ge-0/0/1.1, Push 801001, Push 801005(top)
[LDP/19] 1w0d 00:09:27, metric 1
> to 12.1.1.1 via ge-0/0/0.1
  to 12.22.1.1 via ge-0/0/0.2
  to 12.23.1.1 via ge-0/0/0.3
  to 12.24.1.1 via ge-0/0/0.4
  to 12.25.1.1 via ge-0/0/0.5
  to 13.1.1.2 via ge-0/0/1.1, Push 801001, Push 801005(top)
```

Here, segment routing LSP is the active route entry to the 1.1.1.1 destination, and by default, only this route is used to resolve any services resolving over 1.1.1.1.

When there is a requirement to use more than one protocols for resolving service routes, you can achieve this by configuring **policy-multipath** to combine the protocols. For instance, if segment routing and LDP paths are required for service resolution, you must configure **policy-multipath** combining the segment routing and LDP routes for prefix 1.1.1.1.

For example:

```
[edit policy-options]
user@host# set rib inet.3 policy-multipath policy example-policy
user@host# set policy-statement abc term 1 from protocol spring-te
user@host# set policy-statement abc term 1 from protocol ldp
user@host# set policy-statement abc term 1 from route-filter 1.1.1.1/32 exact
user@host# set policy-statement abc term 1 then accept
```

With this configuration, you create a policy-based multipath route for prefix 1.1.1.1/32 that uses constituent route entries of segment routing and LDP protocols.

You can view the multipath route using the **show route** command output, as follows:

```
1.1.1.1/32          *[SPRING-TE/8] 00:10:28, metric 1, metric2 30
                    > to 13.1.1.2 via ge-0/0/1.1, Push 33333, Push 801005, Push
801006(top)

                    [L-ISIS/14] 1w0d 00:25:27, metric 10
                    > to 12.1.1.1 via ge-0/0/0.1
                      to 12.22.1.1 via ge-0/0/0.2
                      to 12.23.1.1 via ge-0/0/0.3
                      to 12.24.1.1 via ge-0/0/0.4
                      to 12.25.1.1 via ge-0/0/0.5
                      to 13.1.1.2 via ge-0/0/1.1, Push 801001, Push 801005(top)
                    [LDP/19] 1w0d 00:18:57, metric 1
                    > to 12.1.1.1 via ge-0/0/0.1
                      to 12.22.1.1 via ge-0/0/0.2
                      to 12.23.1.1 via ge-0/0/0.3
                      to 12.24.1.1 via ge-0/0/0.4
                      to 12.25.1.1 via ge-0/0/0.5
                      to 13.1.1.2 via ge-0/0/1.1, Push 801001, Push 801005(top)
                    [Multipath/8] 00:03:13, metric 1, metric2 30
                    > to 12.1.1.1 via ge-0/0/0.1
                      to 12.22.1.1 via ge-0/0/0.2
                      to 12.23.1.1 via ge-0/0/0.3
                      to 12.24.1.1 via ge-0/0/0.4
```

```

to 12.25.1.1 via ge-0/0/0.5
to 13.1.1.2 via ge-0/0/1.1, Push 33333, Push 801005, Push
801006(top)
to 13.1.1.2 via ge-0/0/1.1, Push 801001, Push 801005(top)

```

You can see from the command output that the multipath route combines next hops of segment routing and LDP paths. The multipath route is not active, and by default, the route preference and metric is the same as that of active route.

NOTE:

You can use the following combinations for the policy-based multipath route: However we cannot create multipath of LDP/L-ISIS as active-route is not part of multipath.

- Segment routing traffic-engineered LSPs and LDP LSPs.
- Segment routing traffic-engineered LSPs, and label IS-IS paths.
- Segment routing traffic-engineered LSPs, LDP LSPs, and label IS-IS paths.

However, you cannot create multipath route of LDP and label IS-IS, as the active route is not part of the multipath route.

With the same configuration, assuming that there is a static route 1.2.3.4/32 configured with a protocol next hop of 1.1.1.1, this route is resolved using the multipath route over both segment routing traffic-engineered LSPs and LDP LSPs.

For example:

```

1.2.3.4/32      *[Static/5] 00:00:12, metric2 1
                 to 12.1.1.1 via ge-0/0/0.1
                 > to 12.22.1.1 via ge-0/0/0.2
                 to 12.23.1.1 via ge-0/0/0.3
                 to 12.24.1.1 via ge-0/0/0.4
                 to 12.25.1.1 via ge-0/0/0.5
                 to 13.1.1.2 via ge-0/0/1.1, Push 33333, Push 801005, Push
801006(top)
                 to 13.1.1.2 via ge-0/0/1.1, Push 801001, Push 801005(top)

```

Enhancement to Class-of-Service (CoS) Forwarding-Policy

For class-of-service-based forwarding, you must use the **forwarding-policy next-hop-map** configuration statement.

Prior to Junos OS Release 19.1R1, the match conditions supported under class-of-service-based forwarding included:

- **next-hop**—Match next hop based on outgoing interface or next hop address.
- **lsp-next-hop**—Match named LSPs using regular expression of LSP name.
- **non-lsp-next-hop**—Match all LSPs without an LSP name.

With the policy-based multipath route feature, you can also match all next hops without a label for certain prefixes. To do this, you must enable the **non-labelled-next-hop** option at the **[edit class-of-service forwarding-policy next-hop-map map-name forwarding-class forwarding-class-name]** hierarchy level.

For example:

```
[edit]
class-of-service {
  forwarding-policy {
    next-hop-map abc {
      forwarding-class best-effort {
        non-labelled-next-hop;
      }
    }
  }
}
```

Enhancements to Policy Match Protocol

Prior to Junos OS Release 19.1R1, when you used a policy to match protocol using the **from protocol** statement at the **[edit policy-options policy-statement statement-name]** hierarchy level, all protocol routes (labeled and unlabeled) were matched. With the policy-based multipath route feature, you can match labeled protocol routes specifically.

The options for matching labeled protocols are:

- **l-isis**—Match labeled IS-IS routes. The **isis** option matches IS-IS routes, excluding label IS-IS routes.
- **l-ospf**—Match labeled OSPF routes. The **ospf** option matches all OSPF routes, including OSPFv2, OSPFv3 and label OSPF.

For example:

```
[edit]
policy-options {
  policy-statement abc {
    from protocol [ l-ospf l-isis ];
  }
}
```


Impact of Configuring Policy-Based Multipath Route on Network Performance

When you configure policy-based multipath route, a change of route in the routing information base results in the evaluation of the policy to check if a multipath route needs to be created. Because this feature requires that member routes must be in the same routing information base, the **rib-group** statement is used to merge routes from different routing information base. Configuring the **rib-group** statement at the application level increases number of routes in the system.

When there are a number of routes in the routing information base, constant change of routes leads to reevaluation of the multipath policy. This could impact network performance. It is recommended to configure the policy-based multipath route feature only when required.

Understanding IP-Based Filtering and Selective Port Mirroring of MPLS Traffic

IN THIS SECTION

- [IP-Based Filtering of MPLS Traffic | 193](#)
- [Selective Port Mirroring of MPLS Traffic | 194](#)
- [Sample Configurations | 195](#)

In an MPLS packet, the IP header comes immediately after the MPLS header. The IP-based filtering feature provides a deep inspection mechanism, where a maximum of upto eight MPLS labels of the inner payload can be inspected to enable filtering of MPLS traffic based on IP parameters. The filtered MPLS traffic can also be port mirrored to a monitoring device to offer network-based services in the core MPLS network.

IP-Based Filtering of MPLS Traffic

Prior to Junos OS Release 18.4R1, filtering based on IP parameters was not supported for MPLS family filter. With the introduction of the IP-based filtering feature, you can apply inbound and outbound filters for MPLS-tagged IPv4 and IPv6 packets based on IP parameters, such as source and destination addresses, Layer 4 protocol type, and source and destination ports.

The IP-based filtering feature enables you to filter MPLS packets at the ingress of an interface, where the filtering is done using match conditions on the inner payload of the MPLS packet. The selective MPLS traffic can then be port mirrored to a remote monitoring device using logical tunnels.

To support IP-based filtering, additional match conditions are added that allow MPLS packets to be deep inspected to parse the inner payload with Layer 3 and Layer 4 headers before the appropriate filters are applied.

NOTE: The IP-based filtering feature is supported only for MPLS-tagged IPv4 and IPv6 packets. In other words, the MPLS filters match IP parameters only when the IP payload comes immediately after the MPLS labels.

In other scenarios, where the MPLS payload includes pseudowires, protocols other than inet and inet6, or other encapsulations like Layer 2 VPN or VPLS, the IP-based filtering feature is not supported.

The following match conditions are added for the IP-based filtering of MPLS traffic:

- IPv4 source address
- IPv4 destination address
- IPv6 source address
- IPv6 destination address
- Protocol
- Source port
- Destination port
- Source IPv4 prefix list
- Destination IPv4 prefix list
- Source IPv6 prefix list
- Destination IPv6 prefix list

NOTE: The following match combinations are supported for the IP-based filtering of MPLS traffic:

- Source and destination address match conditions with IPv4 and IPv6 prefix lists.
- Source and destination port address and protocol types match conditions with IPv4 and IPv6 prefix lists.

Selective Port Mirroring of MPLS Traffic

Port mirroring is the capability of mirroring a packet to a configured destination, in addition to the normal processing and forwarding of the packets. Port mirroring is applied as an action for a firewall filter, which is applied at the ingress or egress of any interface. Similarly, the selective port mirroring feature provides the capability to mirror MPLS traffic, which is filtered based on IP parameters, to a mirrored destination using logical tunnels.

To enable selective port mirroring, additional actions are configured at the **[edit firewall family mpls filter filter-name term term-name then]** hierarchy level, in addition to the existing **counter**, **accept**, and **discard** actions:

- **port-mirror**
- **port-mirror-instance**

Port Mirroring

The **port-mirror** action enables port mirroring globally on the device, which applies to all Packet Forwarding Engines (PFEs) and associated interfaces.

For MPLS family filter, the **port-mirror** action is enabled for global port mirroring.

Port Mirroring Instance

The **port-mirror-instance** action enables you to customize each instance with different properties for input sampling and port mirroring output destinations, instead of having to use a single system-wide configuration for port mirroring.

You can configure only two port mirroring instances per Flexible PIC Concentrator (FPC) by including the **instance port-mirror-instance-name** statement at the **[edit forwarding-options port-mirror]** hierarchy level. You can then associate individual port mirroring instances with an FPC, PIC, or (Forwarding Engine Board (FEB) depending on the device hardware.

For MPLS family filter, the **port-mirror-instance** action is enabled only for the port-mirroring instance.

NOTE: For both **port-mirror** and **port-mirror-instance** actions, the output interface must be enabled with Layer 2 family and not family MPLS (Layer 3) for the selective port mirroring feature to work.

Sample Configurations

IN THIS SECTION

- [IP-Based Filtering Configuration | 196](#)
- [Selective Port Mirroring Configuration | 197](#)
- [Mirrored Destination Configuration | 198](#)

IP-Based Filtering Configuration

```

[edit firewall family mpls filter mpls-filter]
term ipv4-term {
  from {
    ip-version {
      ipv4 {
        source-address {
          10.10.10.10/24;
        }
        destination-address {
          20.20.20.20/24;
        }
        protocol tcp {
          source-port 100;
          destination-port 200;
        }
        source-prefix-list ipv4-source-users;
        destination-prefix-list ipv4-destination-users;
      }
    }
    exp 1;
  }
  then port-mirror;
  then accept;
  then count;
}
term ipv6-term {
  from {
    ip-version {
      ipv6 {
        source-address {
          2000::1/128;
        }
        destination-address {
          3000::1/128;
        }
        protocol tcp {
          source-port 100;
          destination-port 200;
        }
        source-prefix-list ipv6-source-users;
        destination-prefix-list ipv6-destination-users;
      }
    }
  }
}

```

```

        exp 1;
    }
    then port-mirror-instance port-mirror-instance1;
    then accept;
    then count;
}

```

```

[edit policy-options]
prefix-list ipv4-source-users {
    172.16.1.16/28;
    172.16.2.16/28;
}
prefix-list ipv6-source-users {
    2001::1/128;
    3001::1/128;
}

```

```

[edit interfaces]
xe-0/0/1 {
    unit 0 {
        family inet {
            address 100.100.100.1/30;
        }
        family mpls {
            filter {
                input mpls-filter;
            }
        }
    }
}

```

Selective Port Mirroring Configuration

```

[edit forwarding-options]
port-mirroring {
    input {
        rate 2;
        run-length 4;
        maximum-packet-length 500;
    }
    family any {
        output {

```

```

        interface xe-2/0/2.0;
    }
}

```

```

[edit forwarding-options]
port-mirroring {
  instance {
    port-mirror-instance1 {
      input {
        rate 3;
        run-length 5;
        maximum-packet-length 500;
      }
      family any {
        output {
          interface xe-2/0/2.0;
        }
      }
    }
  }
}

```

NOTE: The output interface **xe-2/0/2.0** is configured for Layer 2 family and not family MPLS.

For both **port-mirror** and **port-mirror-instance** actions, the output interface must be enabled with Layer 2 family and not family MPLS (Layer 3) for the selective port mirroring feature to work.

Mirrored Destination Configuration

```

[edit interfaces]
xe-2/0/2 {
  vlan-tagging;
  encapsulation extended-vlan-bridge;
  unit 0 {
    vlan-id 600;
  }
}

```

```
[edit bridge-domains]
bd {
  domain-type bridge;
  interface xe-2/0/2.0;
}
```

Release History Table

Release	Description
19.1R1	Starting in Junos OS Release 19.1R1, for MX Series routers with MPC and MIC interfaces, up to sixteen incoming MPLS labels are included in the hash key.

RELATED DOCUMENTATION

| [Configuring Load Balancing for Ethernet Pseudowires](#) | 1208

Shared Risk Link Groups for MPLS

IN THIS SECTION

- [SRLG Overview](#) | 199
- [Example: Configuring SRLG](#) | 200
- [Example: Excluding SRLG Links Completely for the Secondary LSP](#) | 213
- [Example: Configuring SRLG with Link Protection](#) | 220
- [Example: Configuring SRLG with Link Protection with the exclude-srlg Option](#) | 247

SRLG Overview

In MPLS traffic engineering, a Shared Risk Link Group (SRLG) is a set of links sharing a common resource, which affects all links in the set if the common resource fails. These links share the same risk of failure and are therefore considered to belong to the same SRLG. For example, links sharing a common fiber are said to be in the same SRLG because a fault with the fiber might cause all links in the group to fail.

An SRLG is represented by a 32-bit number unique within an IGP (OSPFv2 and IS-IS) domain. A link might belong to multiple SRLGs. The SRLG of a path in a label-switched path (LSP) is the set of SRLGs for all the links in the path. When computing the secondary path for an LSP, it is preferable to find a path such that the secondary and primary paths do not have any links in common in case the SRLGs for the primary and secondary paths are disjoint. This ensures that a single point of failure on a particular link does not bring down both the primary and secondary paths in the LSP.

When the SRLG is configured, the device uses the Constrained Shortest Path First (CSPF) algorithm and tries to keep the links used for the primary and secondary paths mutually exclusive. If the primary path goes down, the CSPF algorithm computes the secondary path by trying to avoid links that share any SRLG with the primary path. In addition, when computing the path for a bypass LSP, CSPF tries to avoid links that share any SRLG with the protected links.

When the SRLG is not configured, CSPF only takes into account the costs of the links when computing the secondary path.

Any change in link SRLG information triggers the IGP to send LSP updates for the new link SRLG information. CSPF recomputes the paths during the next round of reoptimization.

Junos OS Release 11.4 and later supports SRLG based on the following RFCs:

- RFC 4203, *OSPF Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*.
- RFC 5307, *IS-IS Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*.

NOTE: Currently, the “Fate Sharing” feature continues to be supported with the SRLG feature.

Example: Configuring SRLG

IN THIS SECTION

- [Requirements | 201](#)
- [Overview | 201](#)
- [Configuration | 202](#)
- [Verification | 210](#)

This example shows how to configure Shared Risk Link Groups (SRLGs) on a device.

Requirements

This example uses the following hardware and software components:

- Seven routers that can be a combination of M Series, MX Series, or T Series routers
- Junos OS Release 11.4 or later running on all the devices

Overview

Junos OS Release 11.4 and later support SRLG configuration in an IGP (OSPFv2 and IS-IS) domain. In this example, you configure SRLG and associate it with the MPLS interface on a device.

The device uses the SRLG cost parameter for the Constrained Shortest Path First (CSPF) algorithm and tries to keep the links used for the primary and secondary paths mutually exclusive by avoiding links that share any SRLG with the primary path.


To configure the SRLG, you first define the SRLG parameters at the **[edit routing-options srlg srlg-name]** hierarchy level and then associate the SRLG with an MPLS interface at the **[edit mpls interface interface-name]** hierarchy level.

The **srlg srlg-name** statement has the following options:

- **srlg-cost**—Include a cost for the SRLG ranging from 1 through 65535. The cost of the SRLG determines the level of impact this SRLG has on the CSPF algorithm for path computations. The higher the cost, the less likely it is for a secondary path to share the same SRLG as the primary path. By default, the **srlg-cost** is 1.
- **srlg-value**—Include a group ID for the SRLG ranging from 1 through 4294967295.

In this example, PE1 is the ingress router and PE2 is the egress router. P1, P2, and P3, P4, and P5 are transit routers. OSPF is configured on all the routers as the interior gateway protocol (IGP). SRLG is configured on all seven routers. The primary path includes SRLG **srlg-a**. For the standby secondary path,

the link P2>PE2 belongs to SRLG **srlg-a**. The effective link metric, with the added **srlg-cost** of 10, becomes 11. Therefore, the computed secondary path is PE1>P3>P4>P5>PE2 with a CSPF link metric of 4.

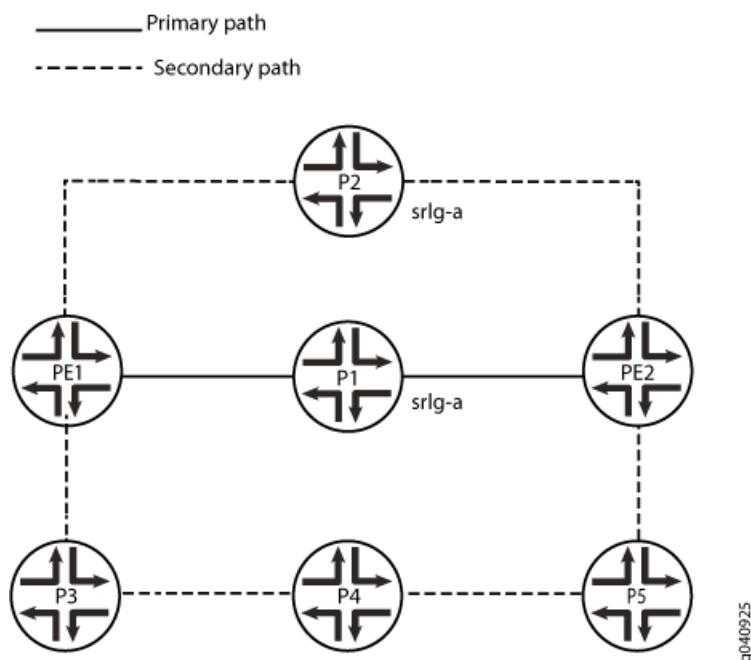

Configuration

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Router PE1

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.13.1/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.14.1/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.1/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
  
```

```

set protocols mpls optimize-timer 120
set protocols mpls label-switched-path pe1-pe2 to 10.255.0.7
set protocols mpls label-switched-path pe1-pe2 primary via-p1
set protocols mpls label-switched-path pe1-pe2 secondary path2 standby
set protocols mpls path via-p1 10.255.0.2 strict
set protocols mpls path path2
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P1

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.27.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.2/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P2

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.13.3/24
set interfaces ge-0/0/1 unit 0 family mpls

```

```

set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.3/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.3/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P3

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.14.4/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.45.4/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.4/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P4

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.45.5/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.56.5/24

```

```

set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.5/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P5

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.56.6/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.67.6/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.6/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router PE2

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.27.7/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.7/24
set interfaces ge-0/0/2 unit 0 family mpls

```

```

set interfaces ge-0/0/3 unit 0 family inet address 192.168.67.7/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.7/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure the ingress router PE1:

1. Configure the device interfaces.

```

[edit interfaces]
user@PE1# set ge-0/0/1 unit 0 family inet address 192.168.12.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 192.168.13.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls
user@PE1# set ge-0/0/3 unit 0 family inet address 192.168.14.1/24
user@PE1# set ge-0/0/3 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.0.1/32

```

2. Configure OSPF on the interfaces.

```

[edit protocols ospf]
user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set area 0.0.0.0 interface ge-0/0/2.0

```

```
user@PE1# set area 0.0.0.0 interface ge-0/0/3.0
user@PE1# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@PE1# set srlg srlg-a srlg-value 101
user@PE1# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS and the LSPs.

```
[edit protocols mpls]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
user@PE1# set optimize-timer 120
user@PE1# set label-switched-path pe1-pe2 to 10.255.0.7
user@PE1# set label-switched-path pe1-pe2 primary via-p1
user@PE1# set label-switched-path pe1-pe2 secondary path2 standby
user@PE1# set path via-p1 10.255.0.2 strict
user@PE1# set path path2
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show routing-options**, **show protocols mpls**, and **show protocols rsvp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
```

```

        address 192.168.12.1/24;
    }
    family mpls;
}
}
ge-0/0/2 {
    unit 0 {
        family inet {
            address 192.168.13.1/24;
        }
        family mpls;
    }
}
ge-0/0/3 {
    unit 0 {
        family inet {
            address 192.168.14.1/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.0.1/32;
        }
    }
}
}
}

```

```

user@PE1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

```

```

user@PE1# show protocols mpls
optimize-timer 120;
label-switched-path pe1-pe2 {
    to 10.255.0.7;
}

```



```

primary via-p1;
secondary path2 {
    standby;
}
}
path via-p1 {
    10.255.0.2 strict;
}
path path2;
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE1# show routing-options
routing-options {
    srlg {
        srlg-a {
            srlg-value 101;
            srlg-cost 10;
        }
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

NOTE: Repeat this procedure for every Juniper Networks router in the IGP domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

Verification

IN THIS SECTION

- [Verifying SRLG Definitions | 210](#)
- [Verify TE-Link SRLG | 210](#)
- [Verify Standby Secondary Path | 211](#)

Confirm that the configuration is working properly.

Verifying SRLG Definitions

Purpose

Verify SRLG-to-value mappings and SRLG cost.

Action

```
user@PE1> show mpls srlg
```

SRLG	Value	Cost
srlg-a	101	10

Verify TE-Link SRLG

Purpose

Verify the traffic engineering link SRLG association.

Action

```
user@PE1> show ted link detail
```

...
10.255.0.2->192.168.27.7-1, Local: 192.168.27.2, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
LocalPath: 1, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
Color: 0 <none>
SRLGs: srlg-a
localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps

```

...
10.255.0.3->192.168.37.7-1, Local: 192.168.37.3, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
    Color: 0 <none>
  SRLGs: srlg-a
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
...

```

Meaning

Links P1-PE2 and P2-PE2 are associated with SRLG **srlg-a**.

Verify Standby Secondary Path

Purpose

Check the SRLG link cost and its impact on the CSPF computation of the standby secondary path link.

Action

user@PE1> **show mpls lsp ingress extensive**

```

Ingress LSP: 1 sessions

10.255.0.7
  From: 10.255.0.1, State: Up, ActiveRoute: 0, LSPname: pe1-pe2
  ActivePath: via-p1 (primary)
  LSPTYPE: Static Configured
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary   via-p1           State: Up
    Priorities: 7 0
    OptimizeTimer: 120
    SmartOptimizeTimer: 180
    SRLG: srlg-a
    Reoptimization in 110 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
192.168.12.2 S 192.168.27.7 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    192.168.12.2 192.168.27.7

```

```

7 Oct 13 15:17:11.310 CSPF: computation result ignored, new path no benefit
6 Oct 13 15:15:14.959 Selected as active path
5 Oct 13 15:15:14.958 Record Route: 192.168.12.2 192.168.27.7
4 Oct 13 15:15:14.954 Up
3 Oct 13 15:15:14.793 Originate Call
2 Oct 13 15:15:14.793 CSPF: computation result accepted 192.168.12.2
192.168.27.7
1 Oct 13 15:14:46.214 CSPF failed: no route toward 10.255.0.2
Standby path2 State: Up
Priorities: 7 0
OptimizeTimer: 120
SmartOptimizeTimer: 180
Reoptimization in 115 second(s).
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 4)
192.168.14.4 S 192.168.45.5 S 192.168.56.6 S 192.168.67.7 S
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
192.168.14.4 192.168.45.5 192.168.56.6 192.168.67.7
10 Oct 13 15:17:11.929 Record Route: 192.168.14.4 192.168.45.5 192.168.56.6
192.168.67.7
9 Oct 13 15:17:11.929 Up
8 Oct 13 15:17:11.729 Originate Call
7 Oct 13 15:17:11.729 Clear Call
6 Oct 13 15:17:11.729 CSPF: computation result accepted 192.168.14.4
192.168.45.5 192.168.56.6 192.168.67.7
5 Oct 13 15:17:11.729 CSPF: Reroute due to re-optimization
4 Oct 13 15:15:14.984 Record Route: 192.168.13.3 192.168.37.7
3 Oct 13 15:15:14.984 Up
2 Oct 13 15:15:14.830 Originate Call
1 Oct 13 15:15:14.830 CSPF: computation result accepted 192.168.13.3
192.168.37.7
Created: Thu Oct 13 15:13:46 2011
Total 1 displayed, Up 1, Down 0

```

Meaning

Check the standby secondary path. The effective link cost for P2>PE2 is 11 (with the added **srfg-cost** of 10). CSPF computes the secondary path as PE1>P3>P4>P5>PE2 with a CSPF link metric of 4.

Example: Excluding SRLG Links Completely for the Secondary LSP

IN THIS SECTION

- [Requirements | 213](#)
- [Overview | 213](#)
- [Configuration | 214](#)
- [Verification | 218](#)

This example shows how to configure the **exclude-srlg** option to exclude Shared Risk Link Group (SRLG) links for the secondary label-switched path (LSP).

Requirements

This example uses the following hardware and software components:

- M Series, MX Series, or T Series devices
- Junos OS Release 11.4 or later running on all the devices

Overview

For critical links where it is imperative to keep the secondary and primary paths completely disjoint from any common SRLG, you can optionally configure the **exclude-srlg** statement at the **[edit protocols mpls]** or **[edit protocols mpls label-switched-path path-name]** hierarchy levels. For logical systems, you configure the **exclude-srlg** statement at the **edit logical-systems protocols mpls[edit logical-systems logical-system-name protocols mpls label-switched-path path-name]** hierarchy level.

If **exclude-srlg** is configured, the Constrained Shortest Path First (CSPF) algorithm excludes any link belonging to the set of SRLGs in the primary path. If **exclude-srlg** is not configured, and if a link belongs to the set of SRLGs in the primary path, CSPF adds the SRLG cost to the metric, but still accepts the link for computing the path.

In this example, PE1 is the ingress router and PE2 is the egress router. P1, P2, and P3, P4, and P5 are transit routers. OSPF is configured on all the routers as the interior gateway protocol (IGP). SRLG is configured on all seven routers. The primary path includes SRLG **srlg-a**. For the standby secondary path, the link P2>PE2 belongs to SRLG **srlg-a**. Because **exclude-srlg** is configured, CSPF rejects link P2>PE2 as


```

set protocols mpls exclude-srlg
set protocols mpls label-switched-path pe1-pe2 to 10.255.0.7
set protocols mpls label-switched-path pe1-pe2 primary via-p1
set protocols mpls label-switched-path pe1-pe2 secondary path2 standby
set protocols mpls path via-p1 10.255.0.2 strict
set protocols mpls path path2
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

1. Configure the device interfaces.

```

[edit interfaces]
user@PE1# set ge-0/0/1 unit 0 family inet address 192.168.12.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 192.168.13.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls
user@PE1# set ge-0/0/3 unit 0 family inet address 192.168.14.1/24
user@PE1# set ge-0/0/3 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.0.1/32

```

2. Configure OSPF on the interfaces.

```

[edit protocols ospf]
user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set area 0.0.0.0 interface ge-0/0/2.0
user@PE1# set area 0.0.0.0 interface ge-0/0/3.0
user@PE1# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@PE1# set routing-options srlg srlg-a srlg-value 101
```

4. Configure MPLS and the LSPs.

```
[edit protocols mpls]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
user@PE1# set optimize-timer 120
user@PE1# set exclude-srlg
user@PE1# set label-switched-path pe1-pe2 to 10.255.0.7
user@PE1# set label-switched-path pe1-pe2 primary via-p1
user@PE1# set label-switched-path pe1-pe2 secondary path2 standby
user@PE1# set path via-p1 10.255.0.2 strict
user@PE1# set path path2
```

5. Configure the **exclude-srlg** statement to forcibly keep the links for the secondary path completely disjoint from the primary LSP path.

```
user@PE1 set protocols mpls exclude-srlg
```

6. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show routing-options**, **show protocols mpls**, and **show protocols rsvp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
```



```

        address 192.168.12.1/24;
    }
    family mpls;
}
}
ge-0/0/2 {
    unit 0 {
        family inet {
            address 192.168.13.1/24;
        }
        family mpls;
    }
}
ge-0/0/3 {
    unit 0 {
        family inet {
            address 192.168.14.1/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.0.1/32;
        }
    }
}
}
}

```

```

user@PE1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

```

```

user@PE1# show protocols mpls
optimize-timer 120;
label-switched-path pe1-pe2 {
    to 10.255.0.7;
}

```

```

primary via-p1;
secondary path2 {
    standby;
}
}
path via-p1 {
    10.255.0.2 strict;
}
path path2;
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE1# show routing-options
routing-options {
    srlg {
        srlg-a srlg-value 101;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

NOTE: Repeat this procedure for every Juniper Networks router in the IGP domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

Verification

Confirm that the configuration is working properly.

Verifying the Secondary Path Link for the LSP

Purpose

Verify that the link for the secondary path is completely disjoint from the primary path.

Action

```

user@PE1> show mpls lsp detail

```

```

Ingress LSP: 1 sessions

10.255.0.7
  From: 10.255.0.1, State: Up, ActiveRoute: 0, LSPname: pe1-pe2
  ActivePath: via-p1 (primary)
  LSPTYPE: Static Configured
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary   via-p1           State: Up
  Priorities: 7 0
  OptimizeTimer: 120
  SmartOptimizeTimer: 180
  SRLG: srlg-a
  Reoptimization in 77 second(s).
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
192.168.12.2 S 192.168.27.7 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
      192.168.12.2 192.168.27.7
Standby   path2           State: Up
  Priorities: 7 0
  OptimizeTimer: 120
  SmartOptimizeTimer: 180
  Reoptimization in 106 second(s).
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 4)
192.168.14.4 S 192.168.45.5 S 192.168.56.6 S 192.168.67.7 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
      192.168.14.4 192.168.45.5 192.168.56.6 192.168.67.7
Total 1 displayed, Up 1, Down 0

Link P1->PE2: SRLG srlg-a
Link P2->PE2: SRLG srlg-a

Primary path:      PE1-P1-PE2          (CSPF metric: 2)
Standby secondary: PE1-P3-P4-P5-PE2 (CSPF metric: 4)

```

Meaning

Primary path includes SRLG **srlg-a**. For the standby secondary path, the link P2>PE2 belongs to SRLG **srlg-a**. CSPF rejects link P2>PE2 because the link belongs to the SRLG **srlg-a**.

Example: Configuring SRLG with Link Protection

IN THIS SECTION

- [Requirements | 220](#)
- [Overview | 220](#)
- [Configuration | 221](#)
- [Verification | 245](#)

This example shows how to configure SRLG with link protection without the **exclude-srlg** option.

Requirements

This example uses the following hardware and software components:


- M Series, MX Series, or T Series devices
- Junos OS Release 11.4 or later running on all the devices

Overview

In this example, PE1 is the ingress router and PE2 is the egress router. P1, P2, and P3, P4, and P5 are transit routers. OSPF is configured on all the routers as the interior gateway protocol (IGP). SRLG is configured on all seven routers. The link P1>PE2 (primary path) and the link P2>PE2 belong to SRLG srlg-a.

You configure link protection for the interface P1>PE2 by including the **link-protection** statement.

When SRLG srlg-a is configured on the link P1>PE2 and P2>PE2, the bypass takes the longer path P1>P4>P5>PE2, not selecting the link P2>PE2 because of the added SRLG cost for srlg-a.

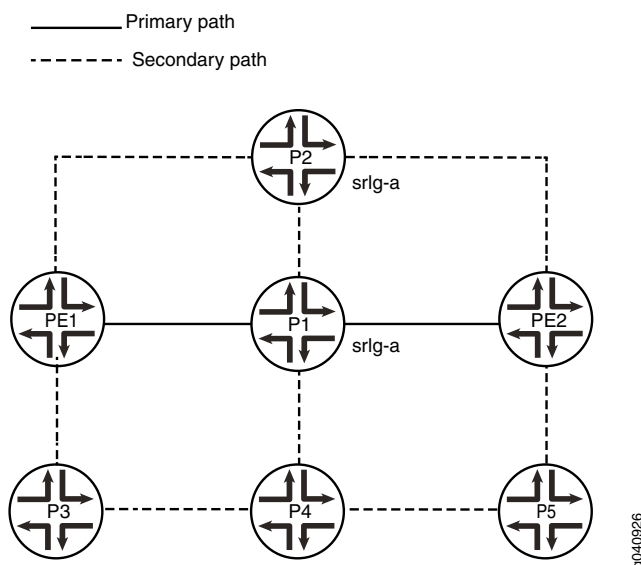

Configuration

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Router PE1

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.13.1/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.14.1/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.1/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
```

```

set protocols rsvp interface ge-0/0/3.0
set protocols mpls optimize-timer 120
set protocols mpls label-switched-path pe1-pe2 to 10.255.0.7
set protocols mpls label-switched-path pe1-pe2 link-protection
set protocols mpls label-switched-path pe1-pe2 primary via-p1
set protocols mpls label-switched-path pe1-pe2 secondary path2 standby
set protocols mpls path via-p1 10.255.0.2 strict
set protocols mpls path path2
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P1

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.27.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.23.2/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 192.168.25.2/24
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.2/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0 link-protection
set protocols rsvp interface ge-0/0/3.0
set protocols rsvp interface ge-0/0/4.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols mpls interface ge-0/0/3.0
set protocols mpls interface ge-0/0/4.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0

```

```

set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P2

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.13.3/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.3/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.23.3/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.3/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P3

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.14.4/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.45.4/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.4/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10

```

```

set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P4

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.45.5/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.56.5/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.25.5/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.5/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P5

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.56.6/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.67.6/24

```



```

set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.6/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router PE2

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.27.7/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.7/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.67.7/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.7/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Configuring Device PE1

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure the ingress router PE1:

1. Configure the device interfaces.

```
[edit interfaces]
user@PE1# set ge-0/0/1 unit 0 family inet address 192.168.12.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 192.168.13.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls
user@PE1# set ge-0/0/3 unit 0 family inet address 192.168.14.1/24
user@PE1# set ge-0/0/3 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.0.1/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set area 0.0.0.0 interface ge-0/0/2.0
user@PE1# set area 0.0.0.0 interface ge-0/0/3.0
user@PE1# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@PE1# set srlg srlg-a srlg-value 101
user@PE1# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS and the LSPs and configure link protection for the **pe1-pe2** LSP.

```
[edit protocols mpls]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
user@PE1# set optimize-timer 120
user@PE1# set label-switched-path pe1-pe2 to 10.255.0.7
user@PE1# set protocols mpls label-switched-path pe1-pe2 link-protection
user@PE1# set label-switched-path pe1-pe2 primary via-p1
user@PE1# set label-switched-path pe1-pe2 secondary path2 standby
```

```
user@PE1# set path via-p1 10.255.0.2 strict
user@PE1# set path path2
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show routing-options**, **show protocols mpls**, and **show protocols rsvp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.12.1/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.13.1/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.14.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
```

```

        family inet {
            address 10.255.0.1/32;
        }
    }
}
}

```

```

user@PE1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

```

```

user@PE1# show protocols mpls
optimize-timer 120;
label-switched-path pe1-pe2 {
    to 10.255.0.7;
    link-protection;
    primary via-p1;
    secondary path2 {
        standby;
    }
}
path via-p1 {
    10.255.0.2 strict;
}
path path2;
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE1# show routing-options
srfg {

```

```

    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P1

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure device P1:

1. Configure the device interfaces.

[edit interfaces]

```

user@P1# set ge-0/0/1 unit 0 family inet address 192.168.12.2/24
user@P1# set ge-0/0/1 unit 0 family mpls
user@P1# set ge-0/0/2 unit 0 family inet address 192.168.27.2/24
user@P1# set ge-0/0/2 unit 0 family mpls
user@P1# set ge-0/0/3 unit 0 family inet address 192.168.23.2/24
user@P1# set ge-0/0/3 unit 0 family mpls
user@P1# set ge-0/0/4 unit 0 family inet address 192.168.25.2/24
user@P1# set ge-0/0/4 unit 0 family mpls
user@P1# set lo0 unit 0 family inet address 10.255.0.2/32

```

2. Configure OSPF on the interfaces.

[edit protocols ospf]

```

user@P1# set traffic-engineering
user@P1# set area 0.0.0.0 interface ge-0/0/1.0
user@P1# set area 0.0.0.0 interface ge-0/0/2.0
user@P1# set area 0.0.0.0 interface ge-0/0/3.0
user@P1# set area 0.0.0.0 interface ge-0/0/4.0
user@P1# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

[edit routing-options]

```

user@P1# set srlg srlg-a srlg-value 101

```

```
user@P1# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces and associate the SRLG **srlg-a** with interface **ge-0/0/2.0** for the P1>PE2 link.

```
[edit protocols mpls]
user@P1# set interface ge-0/0/1.0
user@P1# set interface ge-0/0/2.0 srlg srlg-a
user@P1# set interface ge-0/0/3.0
user@P1# set interface ge-0/0/4.0
```

5. Enable RSVP on the interfaces and configure **link-protection** for interface **ge-0/0/2.0**.

```
[edit protocols rsvp]
user@P1# set interface ge-0/0/1.0
user@P1# set interface ge-0/0/2.0 link-protection
user@P1# set interface ge-0/0/3.0
user@P1# set interface ge-0/0/4.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P1# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.12.2/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.27.2/24;
    }
    family mpls;
  }
}
```

```

}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.23.2/24;
    }
    family mpls;
  }
}
ge-0/0/4 {
  unit 0 {
    family inet {
      address 192.168.25.2/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.2/32;
    }
  }
}
}

```

```

user@P1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
  interface ge-0/0/4.0;
  interface lo0.0;
}

```

```

user@P1# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
  srlg srlg-a;
}
interface ge-0/0/3.0;
interface ge-0/0/4.0;

```

```

user@P1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
    link-protection;
}
interface ge-0/0/3.0;
interface ge-0/0/4.0;

```

```

user@P1# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P2

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P2:

1. Configure the device interfaces.

[edit interfaces]

```

user@P2# set ge-0/0/1 unit 0 family inet address 192.168.13.3/24
user@P2# set ge-0/0/1 unit 0 family mpls
user@P2# set ge-0/0/2 unit 0 family inet address 192.168.37.3/24
user@P2# set ge-0/0/2 unit 0 family mpls
user@P2# set ge-0/0/3 unit 0 family inet address 192.168.23.3/24
user@P2# set ge-0/0/3 unit 0 family mpls
user@P2# set lo0 unit 0 family inet address 10.255.0.3/32

```

2. Configure OSPF on the interfaces.

[edit protocols ospf]

```

user@P2# set traffic-engineering
user@P2# set area 0.0.0.0 interface ge-0/0/1.0
user@P2# set area 0.0.0.0 interface ge-0/0/2.0

```



```
user@P2# set area 0.0.0.0 interface ge-0/0/3.0
user@P2# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@P2# set srlg srlg-a srlg-value 101
user@P2# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces and associate the SRLG **srlg-a** with interface **ge-0/0/2.0** for the P2>PE2 link.

```
[edit protocols mpls]
user@P2# set interface ge-0/0/1.0
user@P2# set interface ge-0/0/2.0 srlg srlg-a
user@P2# set interface ge-0/0/3.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@P2# set interface ge-0/0/1.0
user@P2# set interface ge-0/0/2.0
user@P2# set interface ge-0/0/3.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P2# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.13.3/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
```

```

unit 0 {
    family inet {
        address 192.168.37.3/24;
    }
    family mpls;
}
}
ge-0/0/3 {
    unit 0 {
        family inet {
            address 192.168.23.3/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.0.3/32;
        }
    }
}
}
}

```

```

user@P2# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

```

```

user@P2# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
    srlg srlg-a;
}
interface ge-0/0/3.0;
}

```

```

user@P2# show protocols rsvp

```

```
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;
```

```
user@P2# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P3

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P3:

1. Configure the device interfaces.

```
[edit interfaces]
user@P3# set ge-0/0/1 unit 0 family inet address 192.168.14.4/24
user@P3# set ge-0/0/1 unit 0 family mpls
user@P3# set ge-0/0/2 unit 0 family inet address 192.168.45.4/24
user@P3# set ge-0/0/2 unit 0 family mpls
user@P3# set lo0 unit 0 family inet address 10.255.0.4/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@P3# set traffic-engineering
user@P3# set area 0.0.0.0 interface ge-0/0/1.0
user@P3# set area 0.0.0.0 interface ge-0/0/2.0
user@P3# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
```

```
user@P3# set srlg srlg-a srlg-value 101
user@P3# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@P3# set interface ge-0/0/1.0
user@P3# set interface ge-0/0/2.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@P3# set interface ge-0/0/1.0
user@P3# set interface ge-0/0/2.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P3# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.14.4/24;
      }
      family mpls;
    }
  }
  ge-0/0/2 {
    unit 0 {
      family inet {
        address 192.168.45.4/24;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
```

```

        family inet {
            address 10.255.0.4/32;
        }
    }
}

```

```

user@P3# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface lo0.0;
}

```

```

user@P3# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;

```

```

user@P3# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;

```

```

user@P3# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P4

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P4:

1. Configure the device interfaces.

[edit interfaces]

```

user@P4# set ge-0/0/1 unit 0 family inet address 192.168.45.5/24
user@P4# set ge-0/0/1 unit 0 family mpls
user@P4# set ge-0/0/2 unit 0 family inet address 192.168.56.5/24
user@P4# set ge-0/0/2 unit 0 family mpls
user@P4# set ge-0/0/3 unit 0 family inet address 192.168.25.5/24
user@P4# set ge-0/0/3 unit 0 family mpls
user@P4# set lo0 unit 0 family inet address 10.255.0.5/32

```

2. Configure OSPF on the interfaces.

[edit protocols ospf]

```

user@P4# set traffic-engineering
user@P4# set area 0.0.0.0 interface ge-0/0/1.0
user@P4# set area 0.0.0.0 interface ge-0/0/2.0
user@P4# set area 0.0.0.0 interface ge-0/0/3.0
user@P4# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

[edit routing-options]

```

user@P4# set srlg srlg-a srlg-value 101
user@P4# set srlg srlg-a srlg-cost 10

```

4. Configure MPLS on the interfaces.

[edit protocols mpls]

```

user@P4# set interface ge-0/0/1.0
user@P4# set interface ge-0/0/2.0
user@P4# set interface ge-0/0/3.0

```

5. Enable RSVP on the interfaces.

[edit protocols rsvp]

```

user@P4# set interface ge-0/0/1.0
user@P4# set interface ge-0/0/2.0
user@P4# set interface ge-0/0/3.0

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P4# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.45.5/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.56.5/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.25.5/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.5/32;
    }
  }
}
```

```
user@P4# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
  interface lo0.0;
```

```
}
```

```
user@P4# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;
```

```
user@P4# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;
```

```
user@P4# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P5

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P5:

1. Configure the device interfaces.

```
[edit interfaces]
user@P5# set ge-0/0/1 unit 0 family inet address 192.168.56.6/24
user@P5# set ge-0/0/1 unit 0 family mpls
user@P5# set ge-0/0/2 unit 0 family inet address 192.168.67.6/24
user@P5# set ge-0/0/2 unit 0 family mpls
user@P5# set lo0 unit 0 family inet address 10.255.0.6/32
```

2. Configure OSPF on the interfaces.


```
[edit protocols ospf]
user@P5# set traffic-engineering
user@P5# set area 0.0.0.0 interface ge-0/0/1.0
user@P5# set area 0.0.0.0 interface ge-0/0/2.0
user@P5# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@P5# set srlg srlg-a srlg-value 101
user@P5# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@P5# set interface ge-0/0/1.0
user@P5# set interface ge-0/0/2.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@P5# set interface ge-0/0/1.0
user@P5# set interface ge-0/0/2.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P5# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.56.6/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
```

```

unit 0 {
    family inet {
        address 192.168.67.6/24;
    }
    family mpls;
}
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.0.6/32;
        }
    }
}
}

```

```

user@P5# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface lo0.0;
}

```

```

user@P5# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;

```

```

user@P5# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;

```

```

user@P5# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device PE2

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure PE2:

1. Configure the device interfaces.

```
[edit interfaces]
user@PE2# set ge-0/0/1 unit 0 family inet address 192.168.27.7/24
user@PE2# set ge-0/0/1 unit 0 family mpls
user@PE2# set ge-0/0/2 unit 0 family inet address 192.168.37.7/24
user@PE2# set ge-0/0/2 unit 0 family mpls
user@PE2# set ge-0/0/3 unit 0 family inet address 192.168.67.7/24
user@PE2# set ge-0/0/3 unit 0 family mpls
user@PE2# set lo0 unit 0 family inet address 10.255.0.7/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@PE2# set traffic-engineering
user@PE2# set area 0.0.0.0 interface ge-0/0/1.0
user@PE2# set area 0.0.0.0 interface ge-0/0/2.0
user@PE2# set area 0.0.0.0 interface ge-0/0/3.0
user@PE2# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@PE2# set srlg srlg-a srlg-value 101
user@PE2# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@PE2# set interface ge-0/0/1.0
user@PE2# set interface ge-0/0/2.0
user@PE2# set interface ge-0/0/3.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE2# set interface ge-0/0/1.0
user@PE2# set interface ge-0/0/2.0
user@PE2# set interface ge-0/0/3.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE2# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.27.7/24;
      }
      family mpls;
    }
  }
  ge-0/0/2 {
    unit 0 {
      family inet {
        address 192.168.37.7/24;
      }
      family mpls;
    }
  }
  ge-0/0/3 {
    unit 0 {
      family inet {
        address 192.168.67.7/24;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.0.7/32;
      }
    }
  }
}
```

```
}
```

```
user@PE2# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}
```

```
user@PE2# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;
```

```
user@PE2# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;
```

```
user@PE2# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

Confirm that the configuration is working properly.

Verifying the SRLG Cost Is Added to the TE Link

Purpose

Verify that the SRLG cost is added to the TE link if it belongs to the SRLG of the protected link. Issue the **show ted link detail** and **show rsvp session extensive bypass** commands on device P1.

Action

user@P1> **show ted link detail**

```
...
10.255.0.2->192.168.27.7-1, Local: 192.168.27.2, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
[...]
```

```
10.255.0.3->192.168.37.7-1, Local: 192.168.37.3, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
...
```

user@P1> **show rsvp session extensive bypass**

```
Ingress RSVP: 1 sessions

10.255.0.7
  From: 10.255.0.2, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->192.168.27.7
  LSPTYPE: Static Configured
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 299776
  Resv style: 1 SE, Label in: -, Label out: 299776
  Time left:    -, Since: Fri Oct 21 13:19:21 2011
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 52081 protocol 0
  Type: Bypass LSP
    Number of data route tunnel through: 1
    Number of RSVP session tunnel through: 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
```

```

Path MTU: received 1500
PATH sentto: 192.168.25.5 (ge-0/0/4.0) 26 pkts
RESV rcvfrom: 192.168.25.5 (ge-0/0/4.0) 26 pkts
Explot route: 192.168.25.5 192.168.56.6 192.168.67.7
Record route: <self> 192.168.25.5 192.168.56.6 192.168.67.7
Total 1 displayed, Up 1, Down 0

```

Meaning

The shortest path for the bypass protecting the link P1->PE2 would have been P1->P2->PE2. Because the links P1>PE2 and P2>PE2 both belong to SRLG **srlg-a**, the SRLG cost of 10 for **srlg-a** is added to the metric for the link P2>PE2. This makes the metric for the link P2>PE2 too high to be selected for the shortest path. Therefore, the CSPF result for the computed path for the bypass becomes P1>P4>P5>PE2.

Example: Configuring SRLG with Link Protection with the `exclude-srlg` Option

IN THIS SECTION

- [Requirements | 247](#)
- [Overview | 247](#)
- [Configuration | 248](#)
- [Verification | 272](#)

This example shows how to configure SRLG with link protection with the **exclude-srlg** option.

Requirements

This example uses the following hardware and software components:


- M Series, MX Series, or T Series devices
- Junos OS Release 11.4 or later running on all the devices

Overview

In this example, PE1 is the ingress router and PE2 is the egress router. P1, P2, and P3, P4, and P5 are transit routers. OSPF is configured on all the routers as the interior gateway protocol (IGP). SRLG is configured on all seven routers. The link P1>PE2 (primary path) and the link P2>PE2 belong to SRLG **srlg-a**.

You configure link protection for the interface P1>PE2 by including the **link-protection** statement along with the **exclude-srlg** option. This makes the bypass LSP and the protected link completely disjoint in any SRLG.

When SRLG **srlg-a** is configured on the link P1>PE2 and P2>PE2, the link P2>PE2 is rejected for CSPF consideration due to the **exclude-srlg** configuration. Therefore, the computed path for the bypass becomes P1>P4>P5>PE2.

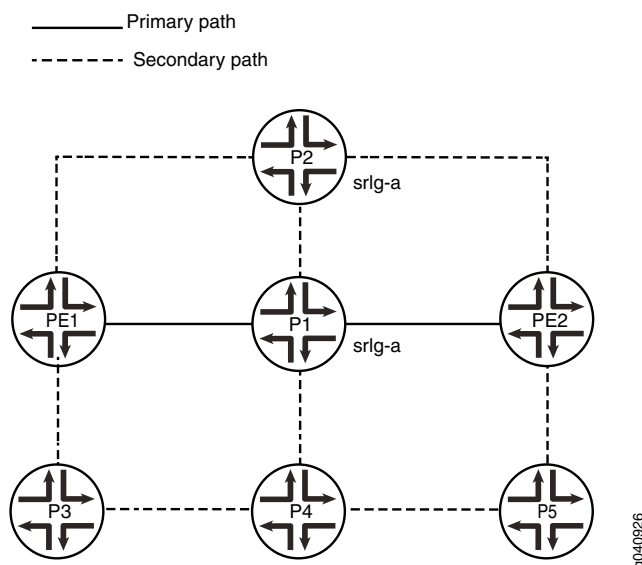

Configuration

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Router PE1

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.13.1/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.14.1/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.1/32
set routing-options srlg srlg-a srlg-value 101
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
```



```

set protocols rsvp interface ge-0/0/3.0
set protocols mpls optimize-timer 120
set protocols mpls label-switched-path pe1-pe2 to 10.255.0.7
set protocols mpls label-switched-path pe1-pe2 link-protection
set protocols mpls label-switched-path pe1-pe2 primary via-p1
set protocols mpls label-switched-path pe1-pe2 secondary path2 standby
set protocols mpls path via-p1 10.255.0.2 strict
set protocols mpls path path2
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P1

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.27.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.23.2/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 192.168.25.2/24
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.2/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0 link-protection exclude-srlg
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols mpls interface ge-0/0/3.0
set protocols mpls interface ge-0/0/4.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0

```

```
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

Router P2

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.13.3/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.3/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.23.3/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.3/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

Router P3

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.14.4/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.45.4/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.4/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
```

```

set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P4

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.45.5/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.56.5/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.25.5/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.5/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P5

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.56.6/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.67.6/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.6/32

```

```

set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router PE2

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.27.7/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.7/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.67.7/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.7/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Configuring Device PE1

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure the ingress router PE1:

1. Configure the device interfaces.

```
[edit interfaces]
user@PE1# set ge-0/0/1 unit 0 family inet address 192.168.12.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 192.168.13.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls
user@PE1# set ge-0/0/3 unit 0 family inet address 192.168.14.1/24
user@PE1# set ge-0/0/3 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.0.1/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set area 0.0.0.0 interface ge-0/0/2.0
user@PE1# set area 0.0.0.0 interface ge-0/0/3.0
user@PE1# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@PE1# set routing-options srlg srlg-a srlg-value 101
user@PE1# set routing-options srlg srlg-a srlg-cost 10
```

4. Configure MPLS and the LSPs and configure link protection for the **pe1-pe2** LSP.

```
[edit protocols mpls]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
user@PE1# set optimize-timer 120
user@PE1# set label-switched-path pe1-pe2 to 10.255.0.7
user@PE1# set protocols mpls label-switched-path pe1-pe2 link-protection
user@PE1# set label-switched-path pe1-pe2 primary via-p1
user@PE1# set label-switched-path pe1-pe2 secondary path2 standby
```

```
user@PE1# set path via-p1 10.255.0.2 strict
user@PE1# set path path2
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show routing-options**, **show protocols mpls**, and **show protocols rsvp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.12.1/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.13.1/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.14.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
```

```

        family inet {
            address 10.255.0.1/32;
        }
    }
}
}

```

```

user@PE1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

```

```

user@PE1# show protocols mpls
optimize-timer 120;
label-switched-path pe1-pe2 {
    to 10.255.0.7;
    link-protection;
    primary via-p1;
    secondary path2 {
        standby;
    }
}
path via-p1 {
    10.255.0.2 strict;
}
path path2;
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE1# show routing-options
srfg {

```

```

    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P1

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure device P1:

1. Configure the device interfaces.

[edit interfaces]

```

user@P1# set ge-0/0/1 unit 0 family inet address 192.168.12.2/24
user@P1# set ge-0/0/1 unit 0 family mpls
user@P1# set ge-0/0/2 unit 0 family inet address 192.168.27.2/24
user@P1# set ge-0/0/2 unit 0 family mpls
user@P1# set ge-0/0/3 unit 0 family inet address 192.168.23.2/24
user@P1# set ge-0/0/3 unit 0 family mpls
user@P1# set ge-0/0/4 unit 0 family inet address 192.168.25.2/24
user@P1# set ge-0/0/4 unit 0 family mpls
user@P1# set lo0 unit 0 family inet address 10.255.0.2/32

```

2. Configure OSPF on the interfaces.

[edit protocols ospf]

```

user@P1# set traffic-engineering
user@P1# set area 0.0.0.0 interface ge-0/0/1.0
user@P1# set area 0.0.0.0 interface ge-0/0/2.0
user@P1# set area 0.0.0.0 interface ge-0/0/3.0
user@P1# set area 0.0.0.0 interface ge-0/0/4.0
user@P1# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

[edit routing-options]

```

user@P1# set routing-options srlg srlg-a srlg-value 101

```



```
user@P1# set routing-options srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces and associate the SRLG with interface **ge-0/0/2.0** for the P1>PE2 link.

```
[edit protocols mpls]
user@P1# set interface ge-0/0/1.0
user@P1# set interface ge-0/0/2.0 srlg srlg-a
user@P1# set interface ge-0/0/3.0
user@P1# set interface ge-0/0/4.0
```

5. Enable RSVP on the interfaces and include the **link-protection** statement with the **exclude-srlg** option for interface **ge-0/0/2.0**.

```
[edit protocols rsvp]
user@P1# set interface ge-0/0/1.0
user@P1# set interface ge-0/0/2.0 link-protection exclude-srlg
user@P1# set interface ge-0/0/3.0
user@P1# set interface ge-0/0/4.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P1# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.12.2/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.27.2/24;
    }
    family mpls;
```

```

    }
}
ge-0/0/3 {
    unit 0 {
        family inet {
            address 192.168.23.2/24;
        }
        family mpls;
    }
}
ge-0/0/4 {
    unit 0 {
        family inet {
            address 192.168.25.2/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.0.2/32;
        }
    }
}
}

```

```

user@P1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface ge-0/0/4.0;
    interface lo0.0;
}

```

```

user@P1# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
    srlg srlg-a;
}
interface ge-0/0/3.0;
interface ge-0/0/4.0;

```

```

user@P1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
    link-protection {
        exclude-srlg;
    }
interface ge-0/0/3.0;
interface ge-0/0/4.0;
}

```

```

user@P1# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P2

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P2:

1. Configure the device interfaces.

```

[edit interfaces]
user@P2# set ge-0/0/1 unit 0 family inet address 192.168.13.3/24
user@P2# set ge-0/0/1 unit 0 family mpls
user@P2# set ge-0/0/2 unit 0 family inet address 192.168.37.3/24
user@P2# set ge-0/0/2 unit 0 family mpls
user@P2# set ge-0/0/3 unit 0 family inet address 192.168.23.3/24
user@P2# set ge-0/0/3 unit 0 family mpls
user@P2# set lo0 unit 0 family inet address 10.255.0.3/32

```

2. Configure OSPF on the interfaces.

```

[edit protocols ospf]
user@P2# set traffic-engineering

```

```

user@P2# set area 0.0.0.0 interface ge-0/0/1.0
user@P2# set area 0.0.0.0 interface ge-0/0/2.0
user@P2# set area 0.0.0.0 interface ge-0/0/3.0
user@P2# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

```

[edit routing-options]
user@P2# set routing-options srlg srlg-a srlg-value 101
user@P2# set routing-options srlg srlg-a srlg-cost 10

```

4. Configure MPLS on the interfaces and associate the SRLG with interface **ge-0/0/2.0** for the P2>PE2 link.

```

[edit protocols mpls]
user@P2# set interface ge-0/0/1.0
user@P2# set interface ge-0/0/2.0 srlg srlg-a
user@P2# set interface ge-0/0/3.0

```

5. Enable RSVP on the interfaces.

```

[edit protocols rsvp]
user@P2# set interface ge-0/0/1.0
user@P2# set interface ge-0/0/2.0
user@P2# set interface ge-0/0/3.0

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@P2# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.13.3/24;
    }
    family mpls;
  }
}

```

```

}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.37.3/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.23.3/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.3/32;
    }
  }
}
}
}

```

```

user@P2# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
  interface lo0.0;
}

```

```

user@P2# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
  srlg srlg-a;
}
interface ge-0/0/3.0;
}

```

```
user@P2# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;
```

```
user@P2# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P3

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P3:

1. Configure the device interfaces.

[edit interfaces]

```
user@P3# set ge-0/0/1 unit 0 family inet address 192.168.14.4/24
user@P3# set ge-0/0/1 unit 0 family mpls
user@P3# set ge-0/0/2 unit 0 family inet address 192.168.45.4/24
user@P3# set ge-0/0/2 unit 0 family mpls
user@P3# set lo0 unit 0 family inet address 10.255.0.4/32
```

2. Configure OSPF on the interfaces.

[edit protocols ospf]

```
user@P3# set traffic-engineering
user@P3# set area 0.0.0.0 interface ge-0/0/1.0
user@P3# set area 0.0.0.0 interface ge-0/0/2.0
user@P3# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@P3# set routing-options srlg srlg-a srlg-value 101
user@P3# set routing-options srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@P3# set interface ge-0/0/1.0
user@P3# set interface ge-0/0/2.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@P3# set interface ge-0/0/1.0
user@P3# set interface ge-0/0/2.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P3# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.14.4/24;
      }
      family mpls;
    }
  }
  ge-0/0/2 {
    unit 0 {
      family inet {
        address 192.168.45.4/24;
      }
      family mpls;
    }
  }
  lo0 {
```

```

    unit 0 {
      family inet {
        address 10.255.0.4/32;
      }
    }
  }
}

```

```

user@P3# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface lo0.0;
}

```

```

user@P3# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;

```

```

user@P3# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;

```

```

user@P3# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P4

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P4:

1. Configure the device interfaces.

```
[edit interfaces]
user@P4# set ge-0/0/1 unit 0 family inet address 192.168.45.5/24
user@P4# set ge-0/0/1 unit 0 family mpls
user@P4# set ge-0/0/2 unit 0 family inet address 192.168.56.5/24
user@P4# set ge-0/0/2 unit 0 family mpls
user@P4# set ge-0/0/3 unit 0 family inet address 192.168.25.5/24
user@P4# set ge-0/0/3 unit 0 family mpls
user@P4# set lo0 unit 0 family inet address 10.255.0.5/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@P4# set traffic-engineering
user@P4# set area 0.0.0.0 interface ge-0/0/1.0
user@P4# set area 0.0.0.0 interface ge-0/0/2.0
user@P4# set area 0.0.0.0 interface ge-0/0/3.0
user@P4# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@P4# set routing-options srlg srlg-a srlg-value 101
user@P4# set routing-options srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@P4# set interface ge-0/0/1.0
user@P4# set interface ge-0/0/2.0
user@P4# set interface ge-0/0/3.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
```

```

user@P4# set interface ge-0/0/1.0
user@P4# set interface ge-0/0/2.0
user@P4# set interface ge-0/0/3.0

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@P4# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.45.5/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.56.5/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.25.5/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.5/32;
    }
  }
}

```

```

user@P4# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

```

```

user@P4# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@P4# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@P4# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device P5

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P5:

1. Configure the device interfaces.

```

[edit interfaces]
user@P5# set ge-0/0/1 unit 0 family inet address 192.168.56.6/24
user@P5# set ge-0/0/1 unit 0 family mpls

```

```

user@P5# set ge-0/0/2 unit 0 family inet address 192.168.67.6/24
user@P5# set ge-0/0/2 unit 0 family mpls
user@P5# set lo0 unit 0 family inet address 10.255.0.6/32

```

2. Configure OSPF on the interfaces.

```

[edit protocols ospf]
user@P5# set traffic-engineering
user@P5# set area 0.0.0.0 interface ge-0/0/1.0
user@P5# set area 0.0.0.0 interface ge-0/0/2.0
user@P5# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

```

[edit routing-options]
user@P5# set routing-options srlg srlg-a srlg-value 101
user@P5# set routing-options srlg srlg-a srlg-cost 10

```

4. Configure MPLS on the interfaces.

```

[edit protocols mpls]
user@P5# set interface ge-0/0/1.0
user@P5# set interface ge-0/0/2.0

```

5. Enable RSVP on the interfaces.

```

[edit protocols rsvp]
user@P5# set interface ge-0/0/1.0
user@P5# set interface ge-0/0/2.0

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@P5# show interfaces
ge-0/0/1 {
  unit 0 {

```

```

        family inet {
            address 192.168.56.6/24;
        }
        family mpls;
    }
}
ge-0/0/2 {
    unit 0 {
        family inet {
            address 192.168.67.6/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.0.6/32;
        }
    }
}
}

```

```

user@P5# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface lo0.0;
}

```

```

user@P5# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;

```

```

user@P5# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;

```

```

user@P5# show routing-options
srlg {
    srlg-a {

```

```

    srlg-value 101;
    srlg-cost 10;
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Device PE2

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure PE2:

1. Configure the device interfaces.

```

[edit interfaces]
user@PE2# set ge-0/0/1 unit 0 family inet address 192.168.27.7/24
user@PE2# set ge-0/0/1 unit 0 family mpls
user@PE2# set ge-0/0/2 unit 0 family inet address 192.168.37.7/24
user@PE2# set ge-0/0/2 unit 0 family mpls
user@PE2# set ge-0/0/3 unit 0 family inet address 192.168.67.7/24
user@PE2# set ge-0/0/3 unit 0 family mpls
user@PE2# set lo0 unit 0 family inet address 10.255.0.7/32

```

2. Configure OSPF on the interfaces.

```

[edit protocols ospf]
user@PE2# set traffic-engineering
user@PE2# set area 0.0.0.0 interface ge-0/0/1.0
user@PE2# set area 0.0.0.0 interface ge-0/0/2.0
user@PE2# set area 0.0.0.0 interface ge-0/0/3.0
user@PE2# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

```

[edit routing-options]
user@PE2# set routing-options srlg srlg-a srlg-value 101
user@PE2# set routing-options srlg srlg-a srlg-cost 10

```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@PE2# set interface ge-0/0/1.0
user@PE2# set interface ge-0/0/2.0
user@PE2# set interface ge-0/0/3.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE2# set interface ge-0/0/1.0
user@PE2# set interface ge-0/0/2.0
user@PE2# set interface ge-0/0/3.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE2# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.27.7/24;
      }
      family mpls;
    }
  }
  ge-0/0/2 {
    unit 0 {
      family inet {
        address 192.168.37.7/24;
      }
      family mpls;
    }
  }
  ge-0/0/3 {
    unit 0 {
      family inet {
        address 192.168.67.7/24;
      }
      family mpls;
    }
  }
}
```

```

    }
    lo0 {
        unit 0 {
            family inet {
                address 10.255.0.7/32;
            }
        }
    }
}

```

```

user@PE2# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

```

```

user@PE2# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE2# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@PE2# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

Confirm that the configuration is working properly.

Verifying the SRLG Cost Is Added to the TE Link

Purpose

Verify that the TE link is excluded if it belongs to the SRLG of the protected link when **link-protection** is configured with **exclude-srlg**. Issue the **show ted link detail** and **show rsvp session extensive bypass** commands on device P1.

Action

user@P1> **show ted link detail**

```
...
10.255.0.2->192.168.27.7-1, Local: 192.168.27.2, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
[...]
```

```
10.255.0.3->192.168.37.7-1, Local: 192.168.37.3, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
...
```

user@P1> **show rsvp session extensive bypass**

```
Ingress RSVP: 1 sessions

10.255.0.7
  From: 10.255.0.2, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->192.168.27.7
  LSPtype: Static Configured
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 299776
  Resv style: 1 SE, Label in: -, Label out: 299776
  Time left:    -, Since: Fri Oct 21 13:19:21 2011
```

```

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 52081 protocol 0
Type: Bypass LSP
  Number of data route tunnel through: 1
  Number of RSVP session tunnel through: 0
PATH rcvfrom: localclient
Adspec: sent MTU 1500
Path MTU: received 1500
PATH sentto: 192.168.25.5 (ge-0/0/4.0) 63 pkts
RESV rcvfrom: 192.168.25.5 (ge-0/0/4.0) 63 pkts
Explct route: 192.168.25.5 192.168.56.6 192.168.67.7
Record route: <self> 192.168.25.5 192.168.56.6 192.168.67.7
Total 1 displayed, Up 1, Down 0

```

Meaning

The shortest path for the bypass protecting the link P1>PE2 would have been P1>P2>PE2. Because the links P1>PE2 and P2>PE2 both belong to SRLG **srlg-a**, the link P2>PE2 is rejected for CSPF consideration due to the **exclude-srlg** constraint. Therefore, the computed path for the bypass becomes P1>P4>P5>PE2.

RELATED DOCUMENTATION

[Basic MPLS Configuration](#) | 36

Protecting MPLS Traffic

IN THIS CHAPTER

- [Node and Path Protection for MPLS LSPs | 275](#)
- [Link Protection for MPLS LSPs | 369](#)

Node and Path Protection for MPLS LSPs

IN THIS SECTION

- [MPLS and Traffic Protection | 276](#)
- [Node-Link Protection Overview | 277](#)
- [Path Protection Overview | 278](#)
- [Configuring Path Protection in an MPLS Network \(CLI Procedure\) | 279](#)
- [Preventing Use of a Path That Previously Failed | 283](#)
- [Configuring MPLS Inter-AS Link-Node Protection with Labeled BGP | 283](#)
- [Configuring Egress Protection Service Mirroring for BGP Signaled Layer 2 Services | 303](#)
- [Example: Configuring MPLS Egress Protection Service Mirroring for BGP Signaled Layer 2 Services | 307](#)
- [Example: Configuring Layer 3 VPN Egress Protection with PLR as Protector | 329](#)
- [Understanding MPLS and Path Protection on EX Series Switches | 365](#)
- [Verifying Path Protection in an MPLS Network | 365](#)

MPLS and Traffic Protection

Typically, when an LSP fails, the router immediately upstream from the failure signals the outage to the ingress router. The ingress router calculates a new path to the egress router, establishes the new LSP, and then directs the traffic from the failed path to the new path. This rerouting process can be time-consuming and prone to failure. For example, the outage signals to the ingress router might get lost, or the new path might take too long to come up, resulting in significant packet drops. The Junos OS provides several complementary mechanisms for protecting against LSP failures:

- Standby secondary paths—You can configure primary and secondary paths. You configure secondary paths with the **standby** statement. To activate traffic protection, you need to configure these standby paths only on the ingress router. If the primary path fails, the ingress router immediately reroutes traffic from the failed path to the standby path, thereby eliminating the need to calculate a new route and signal a new path. For information about configuring standby LSPs, see [“Configuring Hot Standby of Secondary Paths for LSPs” on page 572](#).
- Fast reroute—You configure fast reroute on an LSP to minimize the effect of a failure in the LSP. Fast reroute enables a router upstream from the failure to route around the failure quickly to the router downstream of the failure. The upstream router then signals the outage to the ingress router, thereby maintaining connectivity before a new LSP is established. For a detailed overview of fast reroute, see [“Fast Reroute Overview” on page 471](#). For information about configuring fast reroute, see [“Configuring Fast Reroute” on page 473](#).
- Link protection—You can configure link protection to help ensure that traffic traversing a specific interface from one router to another can continue to reach its destination in the event that this interface fails. When link protection is configured for an interface and configured for an LSP that traverses this interface, a bypass LSP is created that handles this traffic if the interface fails. The bypass LSP uses a different interface and path to reach the same destination. For information about configuring link protection, see [“Configuring Link Protection on Interfaces Used by LSPs” on page 376](#).

When standby secondary path, and fast reroute or link protection are configured on an LSP, full traffic protection is enabled. When a failure occurs in an LSP, the router upstream from the failure routes traffic around the failure and notifies the ingress router of the failure. This rerouting keeps the traffic flowing while waiting for the notification to be processed at the ingress router. After receiving the failure notification, the ingress router immediately reroutes the traffic from the patched primary path to the more optimal standby path.

Fast reroute and link protection provide a similar type of traffic protection. Both features provide a quick transfer service and employ a similar design. Fast reroute and link protection are both described in RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*. However, you need to configure only one or the other. Although you can configure both, there is little, if any, benefit in doing so.

Node-Link Protection Overview


Node-link protection (many-to-one or facility backup) extends the capabilities of link protection and provides slightly different protection from fast reroute. While link protection is useful for selecting an alternate path to the same router when a specific link fails, and fast reroute protects interfaces or nodes along the entire path of an LSP, node-link protection establishes a bypass path that avoids a particular node in the LSP path.

When you enable node-link protection for an LSP, you must also enable link protection on all RSVP interfaces in the path. Once enabled, the following types of bypass paths are established:

- Next-hop bypass LSP—Provides an alternate route for an LSP to reach a neighboring router. This type of bypass path is established when you enable either node-link protection or link protection.
- Next-next-hop bypass LSP—Provides an alternate route for an LSP through a neighboring router en route to the destination router. This type of bypass path is established exclusively when node-link protection is configured.

Figure 11 on page 277 illustrates the example MPLS network topology used in this topic. The example network uses OSPF as the interior gateway protocol (IGP) and a policy to create traffic.

Figure 11: Node-Link Protection

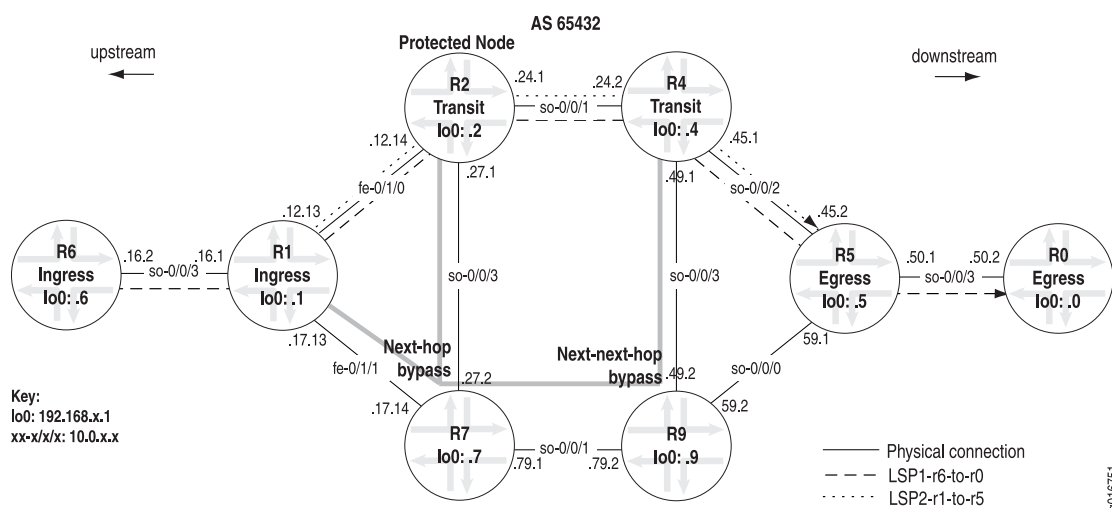

The MPLS network in Figure 11 on page 277 illustrates a router-only network that consists of unidirectional LSPs between R1 and R5, (lsp2-r1-to-r5) and between R6 and R0 (lsp1-r6-to-r0). Both LSPs have strict paths configured that go through interface fe-0/1/0.

In the network shown in Figure 11 on page 277, both types of bypass paths are preestablished around the protected node (R2). A next-hop bypass path avoids interface fe-0/1/0 by going through R7, and a next-next-hop bypass path avoids R2 altogether by going through R7 and R9 to R4. Both bypass paths are shared by all protected LSPs traversing the failed link or node (many LSPs protected by one bypass path).

Node-link protection (many-to-one or facility backup) allows a router immediately upstream from a node failure to use an alternate node to forward traffic to its downstream neighbor. This is accomplished by preestablishing a bypass path that is shared by all protected LSPs traversing the failed link.

When an outage occurs, the router immediately upstream from the outage switches protected traffic to the bypass node, and then signals the failure to the ingress router. Like fast reroute, node-link protection provides local repair, restoring connectivity faster than the ingress router can establish a standby secondary path or signal a new primary LSP.

Node-link protection is appropriate in the following situations:


- Protection of the downstream link and node is required.
- The number of LSPs to be protected is large.
- Satisfying path selection criteria (priority, bandwidth, and link coloring) for bypass paths is less critical.
- Control at the granularity of individual LSPs is not required.

Path Protection Overview

The main advantages of path protection are control over where the traffic goes after a failure and minimum packet loss when combined with fast reroute (one-to-one backup or link protection). Path protection is the configuration, within a label-switched path (LSP), of two types of paths: a primary path, used in normal operations, and a secondary path used when the primary fails, as shown in [Figure 12 on page 278](#).

In [Figure 12 on page 278](#), an MPLS network consisting of eight routers has a primary path between **R1** and **R5** which is protected by the secondary path between **R1** and **R5**. When a failure is detected, such as an interface down event, an Resource Reservation Protocol (RSVP) error message is sent to the ingress router which switches traffic to the secondary path, maintaining traffic flow.

Figure 12: Path Protection

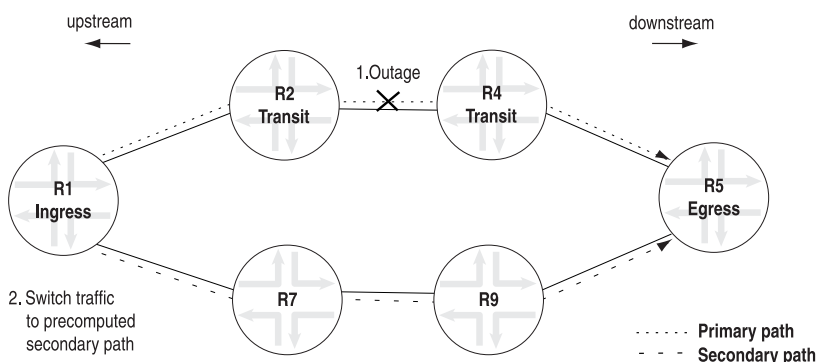

If the secondary path is pre-sigaled or on standby, recovery time from a failure is faster than if the secondary path is not pre-sigaled. When the secondary path is not pre-sigaled a call-setup delay occurs during which the new physical path for the LSP is established, extending the recovery time. If the failure in the primary path is corrected, and after a few minutes of hold time, the ingress router switches traffic back from the secondary path to the primary path.

Because path protection is provided by the ingress router for the entire path, there can be some disadvantages, for example, double-booking of resources and unnecessary protection of links. By protecting a single resource at a time, local protection can remedy these disadvantages.

Configuring Path Protection in an MPLS Network (CLI Procedure)

The Junos OS implementation of MPLS on EX Series switches provides path protection as a mechanism for protecting against label switched path (LSP) failures. Path protection reduces the time required to recalculate a route in case of a failure within the MPLS tunnel. You configure path protection on the ingress provider edge switch in your MPLS network. You do not configure the egress provider edge switch or the provider switches for path protection. You can explicitly specify which provider switches are used for the primary and secondary paths, or you can let the software calculate the paths automatically.

Before you configure path protection, be sure you have:

- Configured an ingress provider edge switch and an egress provider edge switch. See [“Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS” on page 67](#) or [“Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect” on page 73](#).
- Configured at least one provider (transit) switch. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches” on page 77](#).
- Verified the configuration of your MPLS network.

To configure path protection, complete the following tasks on the ingress provider edge switch:

1. [Configuring the Primary Path | 280](#)
2. [Configuring the Secondary Path | 282](#)
3. [Configuring the Revert Timer | 282](#)

Configuring the Primary Path

The **primary** statement creates the primary path, which is the LSP's preferred path. The **secondary** statement creates an alternative path if the primary path can no longer reach the egress provider edge switch.

In the tasks described in this topic, the **lsp-name** has already been configured on the ingress provider edge switch as **lsp_to_240** and the loopback interface address on the remote provider edge switch has already been configured as **127.0.0.8**.

When the software switches from the primary to the secondary path, it continuously attempts to revert to the primary path, switching back to it when it is again reachable but no sooner than the retry time specified in the **revert-timer** statement.

You can configure zero primary paths or one primary path. If you do not configure a primary path, the first secondary path (if a secondary path has been configured) is selected as the path. If you do not specify any named paths, or if the path that you specify is empty, the software makes all routing decisions necessary for the packets to reach the egress provider edge switch.

To configure a primary path:

1. Create the primary path for the LSP:

```
[edit protocols mpls label-switched-path lsp_to_240 to 127.0.0.8]
user@switch# set primary primary_path_lsp_to_240
```

2. Configure an explicit route for the primary path by specifying the IP address of the loopback interface or the switch IP address or hostname of each switch used in the MPLS tunnel. You can specify the link types as either **strict** or **loose** in each **path** statement. If the link type is **strict**, the LSP must go to the next address specified in the **path** statement without traversing other switches. If the link type is **loose**, the LSP can traverse through other switches before reaching this switch. This configuration uses the default **strict** designation for the paths.

NOTE: You can enable path protection without specifying which provider switches are used. If you do not list the specific provider switches to be used for the MPLS tunnel, the switch calculates the route.

TIP: Do not include the ingress provider edge switch in these statements. List the IP address of the loopback interface or switch address or hostname of all other switch hops in sequence, ending with the egress provider edge switch.

```
[edit protocols mpls label-switched-path lsp_to_240 to 127.0.0.8]
user@switch# set path primary_path_lsp_to_240 127.0.0.2
user@switch# set path primary_path_lsp_to_240 127.0.0.3
```

```
user@switch# set path primary_path_lsp_to_240 127.0.0.8
```

Configuring the Secondary Path

You can configure zero or more secondary paths. All secondary paths are equal, and the software tries them in the order that they are listed in the configuration. The software does not attempt to switch among secondary paths. If the first secondary path in the configuration is not available, the next one is tried, as so on. To create a set of equal paths, specify secondary paths without specifying a primary path. If you do not specify any named paths, or if the path that you specify is empty, the software makes all routing decisions necessary to reach the egress provider edge switch.

To configure the secondary path:

1. Create a secondary path for the LSP:

```
[edit protocols mpls label-switched-path lsp_to_240 to 127.0.0.8]
user@switch# set secondary secondary_path_lsp_to_240 standby
```

2. Configure an explicit route for the secondary path by specifying the IP address of the loopback interface or the switch IP address or hostname of each switch used in the MPLS tunnel. You can specify the link types as either **strict** or **loose** in each **path** statement. This configuration uses the default **strict** designation for the paths.

TIP: Do not include the ingress provider edge switch in these statements. List the IP address of the loopback interface or switch address or hostname of all other switch hops in sequence, ending with the egress provider edge switch.

```
[edit protocols mpls label-switched-path lsp_to_240 to 127.0.0.8]
user@switch# set path secondary_path_lsp_to_240 127.0.0.4
user@switch# set path primary_path_lsp_to_240 127.0.0.8
```

Configuring the Revert Timer

For LSPs configured with both primary and secondary paths, you can optionally configure a revert timer. If the primary path goes down and traffic is switched to the secondary path, the revert timer specifies the amount of time (in seconds) that the LSP must wait before it can revert traffic back to the primary path. If the primary path experiences any connectivity problems or stability problems during this time, the timer is restarted.

TIP: If you do not explicitly configure the revert timer, it is set by default to 60 seconds.

To configure the revert timer for LSPs configured with primary and secondary paths:

- For all LSPs on the switch:

```
[edit protocols mpls]
user@switch# set revert-timer 120
```

- For a specific LSP on the switch:

```
[edit protocols mpls label-switched-path]
user@switch# set lsp_to_240 revert-timer 120
```

Preventing Use of a Path That Previously Failed

If you configure an alternate path through the network in case the active path fails, you may not want traffic to revert back to the failed path, even if it is no longer failing. When you configure a primary path, the traffic switches over to the secondary path during a failure, and reverts back to the primary path when it returns.

At times, switching traffic back to a primary path that has previously failed may not be a particularly sound idea. In this case, only configure secondary paths, resulting in the next configured secondary path establishing when the first secondary path fails. Later, if the first secondary path becomes operational, the Junos OS will not revert to it, but will continue using the second secondary path.

Configuring MPLS Inter-AS Link-Node Protection with Labeled BGP

IN THIS SECTION

- [Understanding MPLS Inter-AS Link Protection | 283](#)
- [Example: Configuring MPLS Inter-AS Link-Node Protection | 285](#)

Understanding MPLS Inter-AS Link Protection

Link protection is essential in an MPLS network to ensure traffic restoration in case of an interface failure. The ingress router chooses an alternate link through another interface to send traffic to its destination.


In [Figure 13 on page 284](#), autonomous system border routers (ASBRs) run external BGP (EBGP) to ASBRs in another autonomous system (AS) to exchange labels for /32 IPv4 routes. Inside the ASs, internal BGP (IBGP) propagates the routes to provider edge (PE) devices. If the link from Device ASBR3 to Device ASBR1 goes down, until Device ASBR3 reinstalls the new next hop, all traffic going toward AS 64510 from AS 64511 through the ASBR3-ASBR1 link is dropped. A fast traffic restoration can be achieved if Device

ASBR3 preprograms a backup path either through Device ASBR4 or through a direct path to Device ASBR2 if one exists (not shown in the diagram). This assumes that Device ASBR3 learns a loop-free MPLS path for routes that need to be protected either through IBGP or EBGP.

This solution does not handle a failure on Device ASBR3 for traffic going toward AS 64511 from AS 64510 through the ASBR3-ASBR1 link. This solution is limited to downstream inter-AS link-node protection with labeled BGP. This solution does not support service restoration between provider (P) and ASBR routers when there is an ASBR failure. For example, this solution does not handle a failure on the P3-ASBR3 link.

This supported functionality is similar to BGP multipath, except only one next hop is used for active forwarding, and a second path is in protected mode.

Figure 13: MPLS Inter-AS Link-Node Protection Conceptual Topology

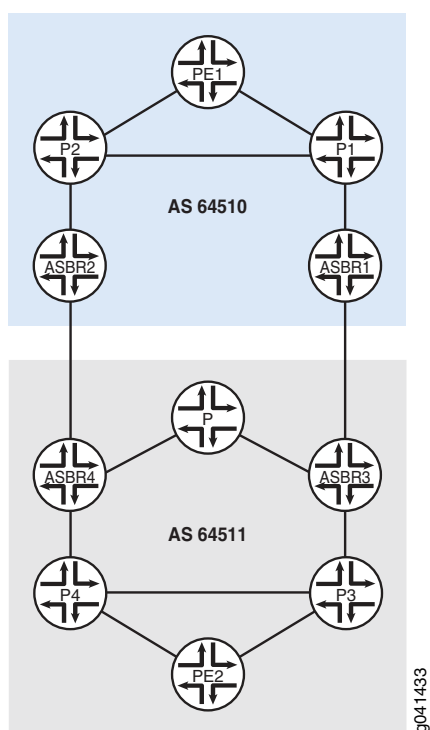

In an MPLS inter-AS environment, link protection can be enabled when **labeled-unicast** is used to send traffic between ASs. Hence, MPLS inter-AS link protection is configured on the link between two routers in different ASs.

To configure link protection on an interface, use the **protection** statement at the **[edit protocols bgp group group-name family inet labeled-unicast]** hierarchy level:

```
protocols {
  bgp {
    group test1 {
```

```

type external;
local-address 192.168.1.2;
family inet {
    labeled-unicast {
        protection;
    }
}
}
}
}

```

NOTE: MPLS inter-AS link protection is supported only with **labeled-unicast** and external peers in a master routing instance.

The link on which protection is configured is known as the protection path. A protection path is selected only after the best path selection and is not selected in the following cases:

- The best path is a non-BGP path.
- Multiple next hops are active, as in BGP multipath.

SEE ALSO

[Example: Configuring MPLS Inter-AS Link-Node Protection | 285](#)

Example: Configuring MPLS Inter-AS Link-Node Protection

IN THIS SECTION

- [Requirements | 285](#)
- [Overview | 286](#)
- [Configuration | 287](#)
- [Verification | 299](#)

This example shows how to configure tail-end protection in an inter-AS deployment with Layer 3 VPNs.

Requirements

No special configuration beyond device initialization is required before configuring this example.

Overview


In [Figure 14 on page 286](#), autonomous system border routers (ASBRs) run external BGP (EBGP) to ASBRs in another autonomous system (AS) to exchange labels for /32 IPv4 routes. Inside the ASs, internal BGP (IBGP) propagates the routes to provider edge (PE) devices.

If the link from Device ASBR3 to Device ASBR1 goes down, until ASBR3 reinstalls the new next hop, all traffic going toward AS 64510 from AS 64511 through the ASBR3-ASBR1 link is dropped.

This example shows how to achieve fast traffic restoration by configuring Device ASBR3 to preprogram a backup path through Device ASBR2.

NOTE: This solution does not handle the Device P3 to Device ASBR3 failure. Nor does it handle a failure on Device ASBR3 for traffic going toward AS 64511 from AS 64510 through the ASBR3-ASBR1 link. This traffic is dropped.

Figure 14: MPLS Inter-AS Link-Node Protection Example Topology

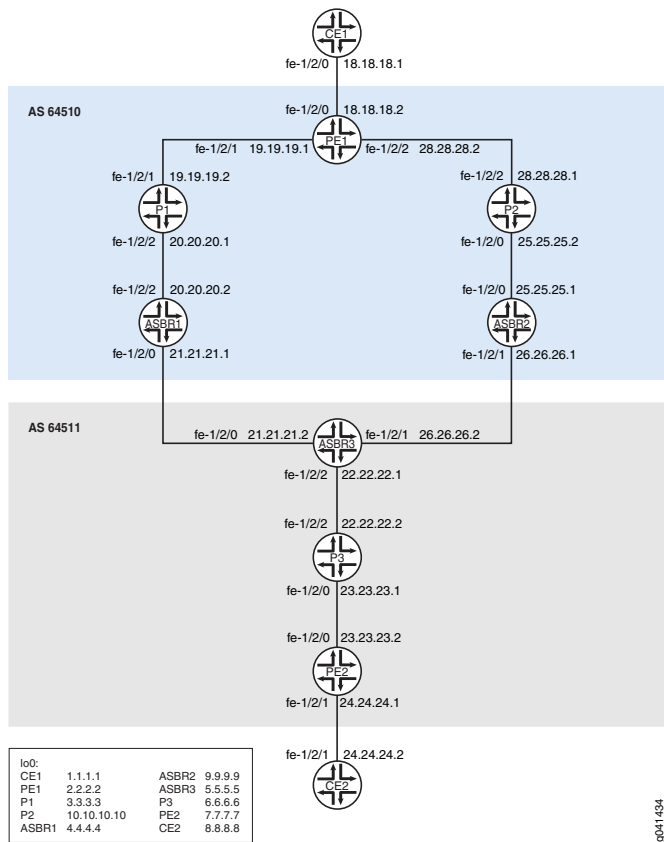

g041434

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Device ASBR1

```

set interfaces fe-1/2/2 unit 0 family inet address 20.20.20.2/30
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces fe-1/2/0 unit 0 family inet address 21.21.21.1/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 4.4.4.4/32
set protocols rsvp interface fe-1/2/2.0
set protocols rsvp interface lo0.0
set protocols mpls traffic-engineering bgp-igp-both-ribs
set protocols mpls label-switched-path To_PE1 to 2.2.2.2
set protocols mpls interface fe-1/2/2.0
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface lo0.0
set protocols bgp group To-PE1 type internal
set protocols bgp group To-PE1 local-address 4.4.4.4
set protocols bgp group To-PE1 family inet unicast
set protocols bgp group To-PE1 family inet labeled-unicast
set protocols bgp group To-PE1 export next-hop-self
set protocols bgp group To-PE1 neighbor 2.2.2.2 family inet labeled-unicast
set protocols bgp group To-ASBR3 type external
set protocols bgp group To-ASBR3 family inet labeled-unicast
set protocols bgp group To-ASBR3 export To-ASBR3
set protocols bgp group To-ASBR3 neighbor 21.21.21.2 peer-as 64511
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set policy-options policy-statement To-ASBR3 term 1 from route-filter 2.2.2.2/32 exact
set policy-options policy-statement To-ASBR3 term 1 then accept
set policy-options policy-statement To-ASBR3 term 2 then reject
set policy-options policy-statement next-hop-self then next-hop self
set routing-options autonomous-system 64510

```

Device ASBR2

```

set interfaces fe-1/2/0 unit 0 description to-P2
set interfaces fe-1/2/0 unit 0 family inet address 25.25.25.1/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 description to-ASBR3
set interfaces fe-1/2/1 unit 0 family inet address 26.26.26.1/30
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 9.9.9.9/32
set protocols rsvp interface fe-1/2/0.0
set protocols rsvp interface lo0.0
set protocols mpls traffic-engineering bgp-igp-both-ribs
set protocols mpls label-switched-path To_PE1 to 2.2.2.2
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface fe-1/2/1.0
set protocols mpls interface lo0.0
set protocols bgp group To-PE1 type internal
set protocols bgp group To-PE1 local-address 9.9.9.9
set protocols bgp group To-PE1 family inet unicast
set protocols bgp group To-PE1 family inet labeled-unicast
set protocols bgp group To-PE1 export next-hop-self
set protocols bgp group To-PE1 neighbor 2.2.2.2 family inet labeled-unicast
set protocols bgp group To-ASBR3 type external
set protocols bgp group To-ASBR3 family inet labeled-unicast
set protocols bgp group To-ASBR3 export To-ASBR3
set protocols bgp group To-ASBR3 neighbor 26.26.26.2 peer-as 64511
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set policy-options policy-statement To-ASBR3 term 1 from route-filter 2.2.2.2/32 exact
set policy-options policy-statement To-ASBR3 term 1 then accept
set policy-options policy-statement To-ASBR3 term 2 then reject
set policy-options policy-statement next-hop-self then next-hop self
set routing-options autonomous-system 64510

```

Device ASBR3

```

set interfaces fe-1/2/0 unit 0 description to-ASBR1
set interfaces fe-1/2/0 unit 0 family inet address 21.21.21.2/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/2 unit 0 description to-P3
set interfaces fe-1/2/2 unit 0 family inet address 22.22.22.1/30

```



```

set interfaces fe-1/2/2 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 description to-ASBR2
set interfaces fe-1/2/1 unit 0 family inet address 26.26.26.2/30
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 5.5.5.5/32
set protocols rsvp interface fe-1/2/2.0
set protocols rsvp interface lo0.0
set protocols rsvp interface fe-1/2/0.0
set protocols rsvp interface fe-1/2/1.0
set protocols mpls traffic-engineering bgp-igp-both-ribs
set protocols mpls label-switched-path To_PE2 to 7.7.7.7
set protocols mpls interface lo0.0
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface fe-1/2/2.0
set protocols mpls interface fe-1/2/1.0
set protocols bgp group To-PE2 type internal
set protocols bgp group To-PE2 local-address 5.5.5.5
set protocols bgp group To-PE2 family inet unicast
set protocols bgp group To-PE2 export next-hop-self
set protocols bgp group To-PE2 neighbor 7.7.7.7 family inet labeled-unicast
set protocols bgp group To-ASBR1 type external
set protocols bgp group To-ASBR1 family inet labeled-unicast protection
set protocols bgp group To-ASBR1 family inet labeled-unicast per-prefix-label
set protocols bgp group To-ASBR1 export To-ASBR1
set protocols bgp group To-ASBR1 neighbor 21.21.21.1 peer-as 64510
set protocols bgp group To-ASBR2 type external
set protocols bgp group To-ASBR2 family inet labeled-unicast protection
set protocols bgp group To-ASBR2 family inet labeled-unicast per-prefix-label
set protocols bgp group To-ASBR2 export To-ASBR2
set protocols bgp group To-ASBR2 neighbor 26.26.26.1 peer-as 64510
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface fe-1/2/1.0
set policy-options policy-statement To-ASBR1 term 1 from route-filter 7.7.7.7/32 exact
set policy-options policy-statement To-ASBR1 term 1 then accept
set policy-options policy-statement To-ASBR1 term 2 then reject
set policy-options policy-statement To-ASBR2 term 1 from route-filter 7.7.7.7/32 exact
set policy-options policy-statement To-ASBR2 term 1 then accept
set policy-options policy-statement To-ASBR2 term 2 then reject
set policy-options policy-statement next-hop-self then next-hop self
set routing-options autonomous-system 64511

```

Device CE1

```
set interfaces fe-1/2/0 unit 0 family inet address 18.18.18.1/30
set interfaces lo0 unit 0 family inet address 1.1.1.1/32
set protocols ospf area 0.0.0.2 interface fe-1/2/0.0
set protocols ospf area 0.0.0.2 interface lo0.0 passive
```

Device CE2

```
set interfaces fe-1/2/1 unit 0 family inet address 24.24.24.2/30
set interfaces lo0 unit 0 family inet address 8.8.8.8/32
set protocols bgp group To_PE2 neighbor 24.24.24.1 export myroutes
set protocols bgp group To_PE2 neighbor 24.24.24.1 peer-as 64511
set policy-options policy-statement myroutes from protocol direct
set policy-options policy-statement myroutes then accept
set routing-options autonomous-system 64509
```

Device P1

```
set interfaces fe-1/2/1 unit 0 family inet address 19.19.19.2/30
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces fe-1/2/2 unit 0 family inet address 20.20.20.1/30
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 3.3.3.3/32
set protocols rsvp interface fe-1/2/1.0
set protocols rsvp interface fe-1/2/2.0
set protocols rsvp interface lo0.0
set protocols mpls interface fe-1/2/1.0
set protocols mpls interface fe-1/2/2.0
set protocols mpls interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/1.0
set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
```

Device P2

```

set interfaces fe-1/2/0 unit 0 description to-ASBR2
set interfaces fe-1/2/0 unit 0 family inet address 25.25.25.2/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/2 unit 0 description to-PE1
set interfaces fe-1/2/2 unit 0 family inet address 28.28.28.1/30
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.10.10.10/32
set protocols rsvp interface fe-1/2/0.0
set protocols rsvp interface fe-1/2/2.0
set protocols rsvp interface lo0.0
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface fe-1/2/2.0
set protocols mpls interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

Device P3

```

set interfaces fe-1/2/2 unit 0 family inet address 22.22.22.2/30
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces fe-1/2/0 unit 0 family inet address 23.23.23.1/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 6.6.6.6/32
set protocols rsvp interface fe-1/2/2.0
set protocols rsvp interface fe-1/2/0.0
set protocols rsvp interface lo0.0
set protocols mpls interface fe-1/2/2.0
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

Device PE1

```

set interfaces fe-1/2/0 unit 0 family inet address 18.18.18.2/30
set interfaces fe-1/2/1 unit 0 family inet address 19.19.19.1/30
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces fe-1/2/2 unit 0 description to-P2
set interfaces fe-1/2/2 unit 0 family inet address 28.28.28.2/30
set interfaces lo0 unit 0 family inet address 2.2.2.2/32
set protocols rsvp interface fe-1/2/0.0
set protocols rsvp interface lo0.0
set protocols rsvp interface fe-1/2/2.0
set protocols mpls label-switched-path To-ASBR1 to 4.4.4.4
set protocols mpls label-switched-path To-ASBR2 to 9.9.9.9
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface lo0.0
set protocols mpls interface fe-1/2/2.0
set protocols bgp group To_ASBR1 type internal
set protocols bgp group To_ASBR1 local-address 2.2.2.2
set protocols bgp group To_ASBR1 family inet labeled-unicast
set protocols bgp group To_ASBR1 neighbor 4.4.4.4 family inet labeled-unicast resolve-vpn
set protocols bgp group To_PE2 type external
set protocols bgp group To_PE2 multihop ttl 20
set protocols bgp group To_PE2 local-address 2.2.2.2
set protocols bgp group To_PE2 family inet-vpn unicast
set protocols bgp group To_PE2 neighbor 7.7.7.7 peer-as 64511
set protocols bgp group To_ASBR2 type internal
set protocols bgp group To_ASBR2 local-address 2.2.2.2
set protocols bgp group To_ASBR2 family inet labeled-unicast
set protocols bgp group To_ASBR2 neighbor 9.9.9.9 family inet labeled-unicast resolve-vpn
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
set policy-options policy-statement bgp-to-ospf term 1 from protocol bgp
set policy-options policy-statement bgp-to-ospf term 1 then accept
set policy-options policy-statement bgp-to-ospf term 2 then reject
set policy-options policy-statement vpnexport term 1 from protocol ospf
set policy-options policy-statement vpnexport term 1 then community add test_comm
set policy-options policy-statement vpnexport term 1 then accept
set policy-options policy-statement vpnexport term 2 then reject
set policy-options policy-statement vpnimport term 1 from protocol bgp
set policy-options policy-statement vpnimport term 1 from community test_comm
set policy-options policy-statement vpnimport term 1 then accept
set policy-options policy-statement vpnimport term 2 then reject

```

```

set policy-options community test_comm members target:1:64510
set routing-instances vpn2CE1 instance-type vrf
set routing-instances vpn2CE1 interface fe-1/2/0.0
set routing-instances vpn2CE1 route-distinguisher 1:64510
set routing-instances vpn2CE1 vrf-import vpnimport
set routing-instances vpn2CE1 vrf-export vpnexport
set routing-instances vpn2CE1 protocols ospf export bgp-to-ospf
set routing-instances vpn2CE1 protocols ospf area 0.0.0.2 interface fe-1/2/0.0
set routing-options autonomous-system 64510

```

Device PE2

```

set interfaces fe-1/2/0 unit 0 family inet address 23.23.23.2/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 24.24.24.1/30
set interfaces lo0 unit 0 family inet address 7.7.7.7/32
set protocols rsvp interface fe-1/2/0.0
set protocols rsvp interface lo0.0
set protocols mpls label-switched-path To-ASBR3 to 5.5.5.5
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface lo0.0
set protocols bgp group To_ASBR3 type internal
set protocols bgp group To_ASBR3 local-address 7.7.7.7
set protocols bgp group To_ASBR3 family inet labeled-unicast
set protocols bgp group To_ASBR3 neighbor 5.5.5.5 family inet labeled-unicast resolve-vpn
set protocols bgp group To_PE1 type external
set protocols bgp group To_PE1 multihop ttl 20
set protocols bgp group To_PE1 local-address 7.7.7.7
set protocols bgp group To_PE1 family inet-vpn unicast
set protocols bgp group To_PE1 neighbor 2.2.2.2 peer-as 64510
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set policy-options policy-statement vpnexport term 1 from protocol bgp
set policy-options policy-statement vpnexport term 1 then community add test_comm
set policy-options policy-statement vpnexport term 1 then accept
set policy-options policy-statement vpnexport term 2 then reject
set policy-options policy-statement vpnimport term 1 from protocol bgp
set policy-options policy-statement vpnimport term 1 from community test_comm
set policy-options policy-statement vpnimport term 1 then accept

```

```

set policy-options policy-statement vpnimport term 2 then reject
set policy-options community test_comm members target:1:64510
set routing-instances vpn2CE2 instance-type vrf
set routing-instances vpn2CE2 interface fe-1/2/1.0
set routing-instances vpn2CE2 route-distinguisher 1:64510
set routing-instances vpn2CE2 vrf-import vpnimport
set routing-instances vpn2CE2 vrf-export vpnexport
set routing-instances vpn2CE2 protocols bgp group To_CE2 peer-as 64509
set routing-instances vpn2CE2 protocols bgp group To_CE2 neighbor 24.24.24.2
set routing-options autonomous-system 64511

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure the EBGp scenario:

1. Configure the router interfaces.

```

[edit interfaces]
user@ASBR3# set fe-1/2/0 unit 0 description to-ASBR1
user@ASBR3# set fe-1/2/0 unit 0 family inet address 21.21.21.2/30
user@ASBR3# set fe-1/2/0 unit 0 family mpls
user@ASBR3# set fe-1/2/2 unit 0 description to-P3
user@ASBR3# set fe-1/2/2 unit 0 family inet address 22.22.22.1/30
user@ASBR3# set fe-1/2/2 unit 0 family mpls
user@ASBR3# set fe-1/2/1 unit 0 description to-ASBR2
user@ASBR3# set fe-1/2/1 unit 0 family inet address 26.26.26.2/30
user@ASBR3# set fe-1/2/1 unit 0 family mpls
user@ASBR3# set lo0 unit 0 family inet address 5.5.5.5/32

```

2. Configure an interior gateway protocol (IGP), such as OSPF or IS-IS.

```

[edit protocols ospf]
user@ASBR3# set traffic-engineering
[edit protocols ospf area 0.0.0.0]
user@ASBR3# set interface fe-1/2/2.0
user@ASBR3# set interface lo0.0 passive
user@ASBR3# set interface fe-1/2/1.0

```

3. Configure the autonomous system (AS) number.

```
[edit routing-options]
user@ASBR3# set autonomous-system 64511
```

4. Configure the routing policy.

```
[edit policy-options policy-statement To-ASBR1]
user@ASBR3# set term 1 from route-filter 7.7.7.7/32 exact
user@ASBR3# set term 1 then accept
user@ASBR3# set term 2 then reject
[edit policy-options policy-statement To-ASBR2]
user@ASBR3# set term 1 from route-filter 7.7.7.7/32 exact
user@ASBR3# set term 1 then accept
user@ASBR3# set term 2 then reject
[edit policy-options policy-statement next-hop-self]
user@ASBR3# set then next-hop self
```

5. Configure the EBGP sessions.

```
[edit protocols bgp group To-ASBR1]
user@ASBR3# set type external
user@ASBR3# set family inet labeled-unicast protection
user@ASBR3# set family inet labeled-unicast per-prefix-label
user@ASBR3# set export To-ASBR1
user@ASBR3# set neighbor 21.21.21.1 peer-as 64510
[edit protocols bgp group To-ASBR2]
user@ASBR3# set type external
user@ASBR3# set family inet labeled-unicast protection
user@ASBR3# set family inet labeled-unicast per-prefix-label
user@ASBR3# set export To-ASBR2
user@ASBR3# set neighbor 26.26.26.1 peer-as 64510
```

6. Configure the IBGP sessions.

```
[edit protocols bgp group To-PE2]
user@ASBR3# set type internal
user@ASBR3# set local-address 5.5.5.5
user@ASBR3# set family inet unicast
user@ASBR3# set export next-hop-self
user@ASBR3# set neighbor 7.7.7.7 family inet labeled-unicast
```

7. Configure MPLS.

```
[edit protocols mpls]
user@ASBR3# set traffic-engineering bgp-igp-both-ribs
user@ASBR3# set label-switched-path To_PE2 to 7.7.7.7
user@ASBR3# set interface lo0.0
user@ASBR3# set interface fe-1/2/0.0
user@ASBR3# set interface fe-1/2/2.0
user@ASBR3# set interface fe-1/2/1.0
```

8. Configure a signaling protocol.

```
[edit protocols rsvp]
user@ASBR3# set interface fe-1/2/2.0
user@ASBR3# set interface lo0.0
user@ASBR3# set interface fe-1/2/0.0
user@ASBR3# set interface fe-1/2/1.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show policy-options**, and **show routing-options**, commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@ASBR3# show interfaces
fe-1/2/0 {
  unit 0 {
    description to-ASBR1;
    family inet {
      address 21.21.21.2/30;
    }
    family mpls;
  }
}
fe-1/2/1 {
  unit 0 {
    description to-ASBR2;
    family inet {
      address 26.26.26.2/30;
    }
    family mpls;
  }
}
```



```

fe-1/2/2 {
  unit 0 {
    description to-P3;
    family inet {
      address 22.22.22.1/30;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 5.5.5.5/32;
    }
  }
}

```

```

user@ASBR3# show protocols
rsvp {
  interface fe-1/2/2.0;
  interface lo0.0;
  interface fe-1/2/0.0;
  interface fe-1/2/1.0;
}
mpls {
  traffic-engineering bgp-igp-both-ribs;
  label-switched-path To_PE2 {
    to 7.7.7.7;
  }
  interface lo0.0;
  interface fe-1/2/0.0;
  interface fe-1/2/2.0;
  interface fe-1/2/1.0;
}
bgp {
  group To-PE2 {
    type internal;
    local-address 5.5.5.5;
    family inet {
      unicast;
    }
    export next-hop-self;
    neighbor 7.7.7.7 {
      family inet {

```

```

        labeled-unicast;
    }
}
}
group To-ASBR1 {
    type external;
    family inet {
        labeled-unicast {
            protection;
        }
    }
    export To-ASBR1;
    neighbor 21.21.21.1 {
        peer-as 64510;
    }
}
group To-ASBR2 {
    type external;
    family inet {
        labeled-unicast {
            protection;
        }
    }
    export To-ASBR2;
    neighbor 26.26.26.1 {
        peer-as 64510;
    }
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fe-1/2/2.0;
        interface lo0.0 {
            passive;
        }
        interface fe-1/2/1.0;
    }
}
}

```

```

user@ASBR3# show policy-options
policy-statement To-ASBR1 {
    term 1 {
        from {

```

```

        route-filter 7.7.7.7/32 exact;
    }
    then accept;
}
term 2 {
    then reject;
}
}
policy-statement To-ASBR2 {
    term 1 {
        from {
            route-filter 7.7.7.7/32 exact;
        }
        then accept;
    }
    term 2 {
        then reject;
    }
}
policy-statement next-hop-self {
    then {
        next-hop self;
    }
}

```

```

user@ASBR3# show routing-options
autonomous-system 64511;

```

If you are done configuring the devices, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Checking the BGP Neighbor Sessions | 299](#)
- [Checking the Routes | 302](#)

Confirm that the configuration is working properly.

Checking the BGP Neighbor Sessions

Purpose

Verify that BGP protection is enabled.

Action

user@ASBR3# **show bgp neighbor 21.21.21.1**

```

Peer: 21.21.21.1+58259 AS 64510 Local: 21.21.21.2+179 AS 64511
  Type: External      State: Established      Flags: <ImportEval Sync>
  Last State: OpenConfirm  Last Event: RecvKeepAlive
  Last Error: None
  Export: [ To-ASBR1 ]
  Options: <Preference AddressFamily PeerAS Refresh>
  Options: <Protection>
  Address families configured: inet-labeled-unicast
  Holdtime: 90 Preference: 170
NLRI configured with protection: inet-labeled-unicast
  Number of flaps: 0
  Peer ID: 4.4.4.4      Local ID: 5.5.5.5      Active Holdtime: 90
  Keepalive Interval: 30      Group index: 4      Peer index: 0
  BFD: disabled, down
  Local Interface: fe-1/2/0.0
  NLRI for restart configured on peer: inet-labeled-unicast
  NLRI advertised by peer: inet-labeled-unicast
  NLRI for this session: inet-labeled-unicast
  Peer supports Refresh capability (2)
  Stale routes from peer are kept for: 300
  Peer does not support Restarter functionality
  NLRI that restart is negotiated for: inet-labeled-unicast
  NLRI of received end-of-rib markers: inet-labeled-unicast
  NLRI of all end-of-rib markers sent: inet-labeled-unicast
  Peer supports 4 byte AS extension (peer-as 64510)
  Peer does not support Addpath
  Table inet.0 Bit: 10001
    RIB State: BGP restart is complete
    Send state: in sync
    Active prefixes:          2
    Received prefixes:        1
    Accepted prefixes:        1
    Suppressed due to damping: 0
    Advertised prefixes:      1
  Last traffic (seconds): Received 7      Sent 20      Checked 32
  Input messages:  Total 170      Updates 2      Refreshes 0      Octets 3326

```

```

Output messages: Total 167      Updates 1      Refreshes 0      Octets 3288
Output Queue[0]: 0

```

user@ASBR3# **show bgp neighbor 26.26.26.1**

```

Peer: 26.26.26.1+61072 AS 64510 Local: 26.26.26.2+179 AS 64511
  Type: External      State: Established      Flags: <ImportEval Sync>
  Last State: OpenConfirm      Last Event: RecvKeepAlive
  Last Error: None
  Export: [ To-ASBR2 ]
  Options: <Preference AddressFamily PeerAS Refresh>
  Options: <Protection>
  Address families configured: inet-labeled-unicast
  Holdtime: 90 Preference: 170
NLRI configured with protection: inet-labeled-unicast
  Number of flaps: 0
  Peer ID: 9.9.9.9      Local ID: 5.5.5.5      Active Holdtime: 90
  Keepalive Interval: 30      Group index: 5      Peer index: 0
  BFD: disabled, down
  Local Interface: fe-1/2/1.0
  NLRI for restart configured on peer: inet-labeled-unicast
  NLRI advertised by peer: inet-labeled-unicast
  NLRI for this session: inet-labeled-unicast
  Peer supports Refresh capability (2)
  Stale routes from peer are kept for: 300
  Peer does not support Restarter functionality
  NLRI that restart is negotiated for: inet-labeled-unicast
  NLRI of received end-of-rib markers: inet-labeled-unicast
  NLRI of all end-of-rib markers sent: inet-labeled-unicast
  Peer supports 4 byte AS extension (peer-as 64510)
  Peer does not support Addpath
  Table inet.0 Bit: 10002
    RIB State: BGP restart is complete
    Send state: in sync
    Active prefixes:      1
    Received prefixes:    1
    Accepted prefixes:    1
    Suppressed due to damping: 0
    Advertised prefixes:  1
  Last traffic (seconds): Received 21      Sent 9      Checked 42
  Input messages: Total 170      Updates 2      Refreshes 0      Octets 3326
  Output messages: Total 168      Updates 1      Refreshes 0      Octets 3307
  Output Queue[0]: 0

```

Meaning

The output shows that the **Protection** option is enabled for the EBGp peers, Device ASBR1 and Device ASBR2.

This is also shown with the **NLRI configured with protection: inet-labeled-unicast** screen output.

Checking the Routes

Purpose

Make sure that the backup path is installed in the routing table.

Action

user@ASBR3> **show route 2.2.2.2**

```
inet.0: 12 destinations, 14 routes (12 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2.2.2.2/32          *[BGP/170] 01:36:25, MED 2, localpref 100
                   AS path: 64510 I, validation-state: unverified
                   > to 21.21.21.1 via fe-1/2/0.0, Push 299824
                   to 26.26.26.1 via fe-1/2/1.0, Push 299808
                   [BGP/170] 01:36:25, MED 2, localpref 100
                   AS path: 64510 I, validation-state: unverified
                   > to 26.26.26.1 via fe-1/2/1.0, Push 299808
```

Meaning

The **show route** command displays active as well as backup paths to Device PE1.

SEE ALSO

[Understanding MPLS Inter-AS Link Protection | 283](#)

Example: Preventing BGP Session Resets


Examples: Configuring BGP Flap Damping

Configuring Egress Protection Service Mirroring for BGP Signaled Layer 2 Services

Starting in Junos OS Release 14.2, Junos OS supports the restoration of egress traffic when there is a link or node failure in the egress PE node. If there is a link or node failure in the core network, a protection mechanism such as MPLS fast reroute can be triggered on the transport LSPs between the PE routers to repair the connection within tens of milliseconds. An egress protection LSP addresses the problem of a node-link failure at the edge of the network (for example, a failure of a PE router).

Figure 1 shows a simplified topology of the use case that explains this feature.

Figure 15: Egress Protection LSP Configured from Router PE1 to Router PE2

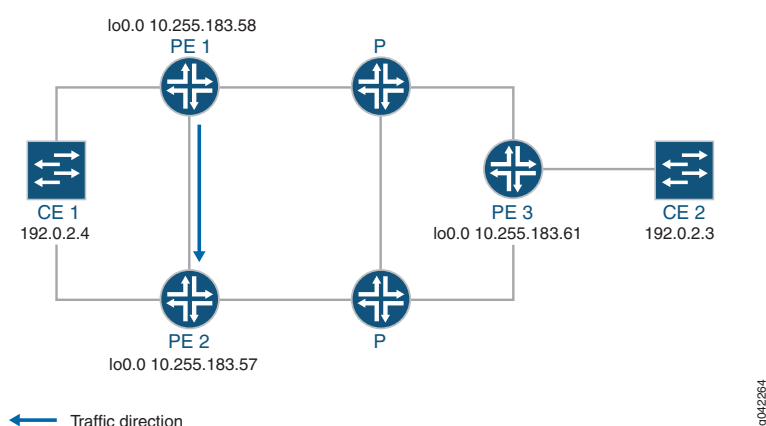

CE1 is multihomed to PE1 and PE2. There are two paths connecting CE1 and CE2. The working path is CE2-PE3-P-PE1-CE1, via pseudowire PW21. The protecting path is CE2-PE3-P-PE2-CE1, via pseudowire PW22. Traffic is flowing through the working path under normal circumstances. When the end-to-end OAM between CE1 and CE2 detects failure on the working path, traffic will be switched from the working path to the protecting path. The end-to-end failure detection and recovery relies on control plane hence should be relatively slow. To achieve faster protection, local repair mechanisms similar to those used by MPLS fast reroute should be used. In Figure 1 above, if link or node failed in the core network (like link failure on P-PE1, P-PE3, or node failure on P), the MPLS fast reroute will happen on the transport LSPs between PE1 and PE3. The failure could be locally repaired within tens of milliseconds. However, if link or node failure happens at the edge (like link failure on PE3-CE2 or node failure on PE3), there is no local repair currently so we have to rely on the CE1-CE2 end-to-end protection to repair the failure.

- Device CE2—Traffic origin
- Router PE3—Ingress PE router
- Router PE1— (Primary) Egress PE router
- Router PE2—Protector PE router
- Device CE1—Traffic destination

When the link between CE1– PE1 goes down, PE1 will briefly redirect that traffic towards CE1, to PE2. PE2 forwards it to CE1 until ingress router PE3 recalculates to forward the traffic to PE2.

Initially the traffic direction was; CE2 – PE3 – P – PE1 – CE1.

When the link between CE1– PE1 goes down, the traffic will be; CE2 – PE3 – P – PE1 – PE2 – CE1. PE3 then recalculates the path; CE2 – PE3 – P – PE2 – CE1.

1. Configure RSVP on PE1, PE2, and PE3.

```
[edit protocols]
user@PE1# set interface all
user@PE2# set interface all
user@PE3# set interface all
```

2. Configure MPLS.

```
[edit protocols mpls]
user@PE1# set interface all
user@PE2# set interface all
user@PE3# set interface all
```

3. Set PE1 as **primary** and PE2 as **protector** nodes.

```
[edit protocols mpls]
user@PE1# set egress-protection context-identifier address primary
user@PE2# set egress-protection context-identifier address protector
```

4. Enable **egress-protection** on PE1 and PE2.

```
[edit protocols bgp]
user@PE1# set group ibgp family l2vpn egress-protection
user@PE2# set group ibgp family l2vpn egress-protection
```

5. Configure LDP and ISIS on PE1, PE2, and PE3.

```
[edit protocols ldp]
user@PE1# set interface all
user@PE2# set interface all
user@PE3# set interface all
```



```
[edit protocols isis]
user@PE1# set interface all point-to-point
user@PE2# set interface all point-to-point
user@PE3# set interface all point-to-point
```

6. Configure a load balancing policy at PE1, PE2, and PE3.

```
[edit]
user@PE1# set policy-options policy-statement lb then load-balance per-packet
user@PE2# set policy-options policy-statement lb then load-balance per-packet
user@PE3# set policy-options policy-statement lb then load-balance per-packet
```

7. Configure the routing options at PE1, PE2, and PE3, to export routes based on the load balancing policy.

```
[edit]
user@PE1# set routing-options traceoptions file ro.log
user@PE1# set routing-options traceoptions flag normal
user@PE1# set routing-options traceoptions flag route
user@PE1# set routing-options autonomous-system 100
user@PE1# set routing-options forwarding-table export lb
```

```
[edit]
user@PE2# set routing-options traceoptions file ro.log
user@PE2# set routing-options traceoptions flag normal
user@PE2# set routing-options traceoptions flag route
user@PE2# set routing-options autonomous-system 100
user@PE2# set routing-options forwarding-table export lb
```

```
[edit]
user@PE3# set routing-options traceoptions file ro.log
user@PE3# set routing-options traceoptions flag normal
user@PE3# set routing-options traceoptions flag route
user@PE3# set routing-options autonomous-system 100
user@PE3# set routing-options forwarding-table export lb
```

8. Configure BGP at PE1 to advertise nrli from the routing instance with context-ID as next-hop.

```
[edit]
user@PE1# set routing-instances foo egress-protection context-identifier context-identifier
```

9. Configure l2vpn at PE1, PE2, and PE3

At PE1:

```
[edit routing-instances]
foo {
  instance-type l2vpn;
  egress-protection {
    context-identifier {
      198.51.100.0;
    }
  }
  interface ge-2/0/2.0;
  route-distinguisher 10.255.183.58:1;
  vrf-target target:9000:1;
  protocols {
    l2vpn {
      encapsulation-type ethernet-vlan;
      site foo {
        site-identifier 1;
        multi-homing;
        site-preference primary;
        interface ge-2/0/2.0 {
          remote-site-id 2;
        }
      }
    }
  }
}
```

At PE2:

```
[edit routing-instances]
foo {
  instance-type l2vpn;
  egress-protection {
    protector;
  }
  interface ge-2/0/2.0;
  route-distinguisher 10.255.183.57:1;
  vrf-target target:9000:1;
  protocols {
    l2vpn {
      encapsulation-type ethernet-vlan;
      site foo{
```

```

        site-identifier 1;
        multi-homing;
        site-preference backup;
        interface ge-2/0/2.0 {
            remote-site-id 2;
        }
    }
}
}
}

```

At PE3:

```

[edit routing-instances]
foo {
    instance-type l2vpn;
    interface ge-2/1/2.0;
    route-distinguisher 10.255.183.61:1;
    vrf-target target:9000:1;
    protocols {
        l2vpn {
            encapsulation-type ethernet-vlan;
            site foo {
                site-identifier 2;
                interface ge-2/1/2.0;
            }
        }
    }
}
}

```

Example: Configuring MPLS Egress Protection Service Mirroring for BGP Signaled Layer 2 Services

IN THIS SECTION

- [Requirements | 308](#)
- [Overview | 308](#)
- [Configuration | 309](#)
- [Verification | 326](#)

Starting in Junos OS Release 14.2, Junos OS supports the restoration of egress traffic when there is a link or node failure in the egress PE node. If there is a link or node failure in the core network, a protection mechanism such as MPLS fast reroute can be triggered on the transport LSPs between the PE routers to repair the connection within tens of milliseconds. An egress protection LSP addresses the problem of a node-link failure at the edge of the network (for example, a failure of a PE router).

This example shows how to configure link protection for BGP signaled Layer 2 services.

Requirements

MX Series Routers running Junos OS Release 14.2 or later.


Overview

If there is a link or node failure in the core network, a protection mechanism such as MPLS fast reroute can be triggered on the transport LSPs between the PE routers to repair the connection within tens of milliseconds. An egress protection LSP addresses the problem of a node-link failure at the edge of the network (for example, a failure of a PE router).

This example includes the following configuration concepts and statements that are unique to the configuration of an egress protection LSP:

- **context-identifier**—Specifies an IPv4 or IPv6 address used to define the pair of PE routers participating in the egress protection LSP. It is assigned to each ordered pair of primary PE and the protector to facilitate protection establishment. This address is globally unique, or unique in the address space of the network where the primary PE and the protector reside.
- **egress-protection**—Configures the protector information for the protected Layer 2 circuit and configures the protector Layer 2 circuit at the **[edit protocols mpls]** hierarchy level. Configures an LSP as an egress protection LSP at the **[edit protocols mpls]** hierarchy level.
- **protector**—Configures the creation of standby pseudowires on the backup PE for link or node protection for the instance.

Figure 16: Egress Protection LSP Configured from Router PE1 to Router PE2

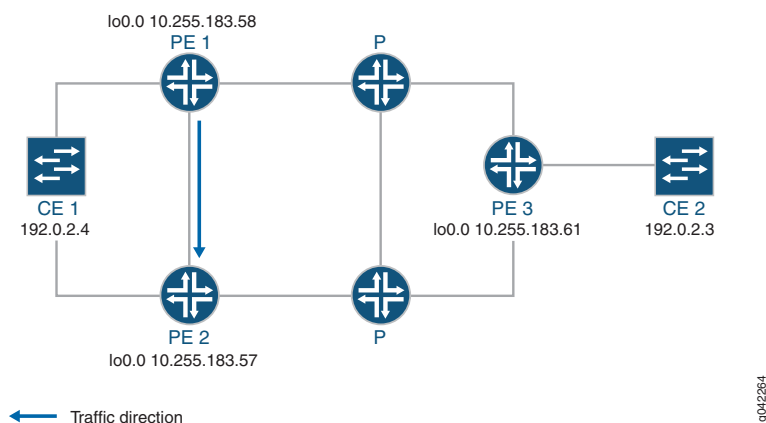

In the event of a failure of the egress PE Router PE1, traffic is switched to the egress protection LSP configured between Router PE1 and Router PE2 (the protector PE router):

- Device CE2—Traffic origin
- Router PE3—Ingress PE router
- Router PE1— (Primary) Egress PE router
- Router PE2—Protector PE router
- Device CE1—Traffic destination

When the link between CE1- PE1 goes down, PE1 will briefly redirect that traffic toward CE1, to PE2. PE2 forwards it to CE1 until ingress router PE3 recalculates to forward the traffic to PE2.

Initially the traffic direction was: CE2 – PE3 – P – PE1 – CE1.

When the link between CE1- PE1 goes down, the traffic will be: CE2 – PE3 – P – PE1 – PE2 – CE1. PE3 then recalculates the path: CE2 – PE3 – P – PE2 – CE1.

This example shows how to configure routers PE1, PE2, and PE3.

Configuration

IN THIS SECTION

- [Step-by-Step Procedure | 312](#)
- [Results | 318](#)

CLI Quick Configuration

To quickly configure an egress protection LSP, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configurations, copy and then paste the commands into the CLI and enter **commit** from configuration mode.

PE1

```

set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 198.51.100.3 primary
set protocols mpls egress-protection context-identifier 198.51.100.3 advertise-mode stub-alias
set protocols mpls egress-protection traceoptions file ep size 100m
set protocols mpls egress-protection traceoptions flag all
set protocols bgp traceoptions file bgp.log world-readable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.183.58
set protocols bgp group ibgp family inet unicast
set protocols bgp group ibgp family l2vpn signaling egress-protection
set protocols bgp group ibgp neighbor 192.0.2.3
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols isis traceoptions file isis-edge size 10m world-readable
set protocols isis traceoptions flag error
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all point-to-point
set protocols isis interface all level 2 metric 10
set protocols isis interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set policy-options policy-statement lb then load-balance per-packet
set routing-options traceoptions file ro.log
set routing-options traceoptions flag all
set routing-options traceoptions flag route
set routing-options autonomous-system 100
set routing-options forwarding-table export lb
set routing-instances foo instance-type l2vpn
set routing-instances foo egress-protection context-identifier 198.51.100.3
set routing-instances foo interface ge-2/0/2.0
set routing-instances foo route-distinguisher 10.255.183.58:1
set routing-instances foo vrf-target target:9000:1
set routing-instances foo protocols l2vpn encapsulation-type ethernet-vlan
set routing-instances foo protocols l2vpn site foo site-identifier 1
set routing-instances foo protocols l2vpn site foo site-preference primary
set routing-instances foo protocols l2vpn site foo interface ge-2/0/2.0 remote-site-id 2

```

PE2

```

set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 198.51.100.3 protector
set protocols mpls egress-protection context-identifier 198.51.100.3 advertise-mode stub-alias
set protocols mpls egress-protection traceoptions file ep size 100m
set protocols mpls egress-protection traceoptions flag all
set protocols bgp traceoptions file bgp.log world-readable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.183.57
set protocols bgp group ibgp family inet unicast
set protocols bgp group ibgp family l2vpn signaling egress-protection
set protocols bgp group ibgp neighbor 192.0.2.3
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols isis traceoptions file isis-edge size 10m world-readable
set protocols isis traceoptions flag error
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all point-to-point
set protocols isis interface all level 2 metric 10
set protocols isis interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set policy-options policy-statement lb then load-balance per-packet
set routing-options traceoptions file ro.log
set routing-options traceoptions flag normal
set routing-options traceoptions flag route
set routing-options autonomous-system 100
set routing-options forwarding-table export lb
set routing-instances foo instance-type l2vpn
set routing-instances foo egress-protection protector
set routing-instances foo interface ge-2/0/2.0
set routing-instances foo route-distinguisher 10.255.183.57:1
set routing-instances foo vrf-target target:9000:1
set routing-instances foo protocols l2vpn encapsulation-type ethernet-vlan
set routing-instances foo protocols l2vpn site foo hot-standby
set routing-instances foo protocols l2vpn site foo site-identifier 1
set routing-instances foo protocols l2vpn site foo site-preference backup
set routing-instances foo protocols l2vpn site foo interface ge-2/0/2.0 remote-site-id 2

```

PE3

```

set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp traceoptions file bgp.log world-readable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.183.61
set protocols bgp group ibgp family inet unicast
set protocols bgp group ibgp family l2vpn signaling
set protocols bgp group ibgp neighbor 192.0.2.3
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols isis traceoptions file isis-edge size 10m world-readable
set protocols isis traceoptions flag error
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all point-to-point
set protocols isis interface all level 2 metric 10
set protocols isis interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set policy-options policy-statement lb then load-balance per-packet
set routing-options traceoptions file ro.log
set routing-options traceoptions flag normal
set routing-options traceoptions flag route
set routing-options autonomous-system 100
set routing-options forwarding-table export lb
set routing-instances foo instance-type l2vpn
set routing-instances foo interface ge-2/1/2.0
set routing-instances foo route-distinguisher 10.255.183.61:1
set routing-instances foo vrf-target target:9000:1
set routing-instances foo protocols l2vpn encapsulation-type ethernet-vlan
set routing-instances foo protocols l2vpn site foo site-identifier 2
set routing-instances foo protocols l2vpn site foo interface ge-2/1/2.0 remote-site-id 1

```

Step-by-Step Procedure

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure an egress protection LSP for router PE1:

1. Configure RSVP.

```
[edit protocols rsvp]
```



```

user@PE1# set interface all
user@PE1# set interface fxp0.0 disable

```

2. Configure MPLS to use the egress protection LSP to protect against a link failure to Device CE1.

```

[edit protocols mpls]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
user@PE1# set egress-protection context-identifier 198.51.100.3 primary
user@PE1# set egress-protection context-identifier 198.51.100.3 advertise-mode stub-alias
user@PE1# set egress-protection traceoptions file ep size 100m
user@PE1# set egress-protection traceoptions flag all

```

3. Configure BGP.

```

[edit protocols bgp]
user@PE1# set traceoptions file bgp.log world-readable
user@PE1# set group ibgp type internal
user@PE1# set group ibgp local-address 10.255.183.58
user@PE1# set group ibgp family inet unicast
user@PE1# set group ibgp family l2vpn signaling egress-protection
user@PE1# set group ibgp neighbor 192.0.2.3
user@PE1# set group ibgp neighbor 192.0.2.4

```

4. Configure IS-IS.

```

[edit protocols isis]
user@PE1# set traceoptions file isis-edge size 10m world-readable
user@PE1# set traceoptions flag error
user@PE1# set level 1 disable
user@PE1# set level 2 wide-metrics-only
user@PE1# set interface all point-to-point
user@PE1# set interface all level 2 metric 10
user@PE1# set interface fxp0.0 disable

```

5. Configure LDP.

```

[edit protocols ldp]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable

```

6. Configure a load-balancing policy.

```
[edit]
user@PE1# set policy-options policy-statement lb then load-balance per-packet
```

7. Configure the routing options to export routes based on the load-balancing policy.

```
[edit routing-options]
user@PE1# set traceoptions file ro.log
user@PE1# set traceoptions flag all
user@PE1# set autonomous-system 100
user@PE1# set forwarding-table export lb
```

8. Configure BGP to advertise nrli from the routing instance with context-ID as next-hop.

```
[edit routing-instances]
user@PE1# set foo instance-type l2vpn
user@PE1# set foo egress-protection context-identifier 198.51.100.3
user@PE1# set foo interface ge-2/0/2.0
user@PE1# set foo route-distinguisher 10.255.183.58:1
user@PE1# set foo vrf-target target:9000:1
```

9. Configure l2vpn instance to use the egress LSP configured.

```
[edit routing-instances]
user@PE1# set foo protocols l2vpn encapsulation-type ethernet-vlan
user@PE1# set foo protocols l2vpn site foo site-identifier 1
user@PE1# set foo protocols l2vpn site foo site-preference primary
user@PE1# set foo protocols l2vpn site foo interface ge-2/0/2.0 remote-site-id 2
```

10. If you are done configuring the device, enter **commit** from configuration mode.

Step-by-Step Procedure

To configure an egress protection LSP for Router PE2:

1. Configure RSVP.

```
[edit protocols rsvp]
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
```

2. Configure MPLS and the LSP that acts as the egress protection LSP.

```
[edit protocols mpls]
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
user@PE2# set egress-protection context-identifier 198.51.100.3 protector
user@PE2# set egress-protection context-identifier 198.51.100.3 advertise-mode stub-alias
user@PE2# set egress-protection traceoptions file ep size 100m
user@PE2# set egress-protection traceoptions flag all
```

3. Configure BGP.

```
[edit protocols bgp]
user@PE2# set traceoptions file bgp.log world-readable
user@PE2# set group ibgp type internal
user@PE2# set group ibgp local-address 10.255.183.57
user@PE2# set group ibgp family inet unicast
user@PE2# set group ibgp family l2vpn signaling
user@PE2# set group ibgp family l2vpn egress-protection
user@PE2# set group ibgp neighbor 192.0.2.3
user@PE2# set group ibgp neighbor 192.0.2.4
```

4. Configure IS-IS.

```
[edit protocols isis]
user@PE2# set traceoptions file isis-edge size 10m world-readable
user@PE2# set traceoptions flag error
user@PE2# set level 1 disable
user@PE2# set level 2 wide-metrics-only
user@PE2# set interface all point-to-point
user@PE2# set interface all level 2 metric 10
user@PE2# set interface fxp0.0 disable
```

5. Configure LDP.

```
[edit protocols ldp]
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
```

6. Configure a load-balancing policy.

```
[edit]
user@PE2# set policy-options policy-statement lb then load-balance per-packet
```

7. Configure the routing options to export routes based on the load-balancing policy.

```
[edit routing-options]
user@PE2# set traceoptions file ro.log
user@PE2# set traceoptions flag all
user@PE2# set autonomous-system 100
user@PE2# set forwarding-table export lb
```

8. Configure BGP to advertise nrli from the routing instance with context-ID as next-hop.

```
[edit routing-instances]
user@PE2# set foo instance-type l2vpn
user@PE2# set foo egress-protection protector
user@PE2# set foo interface ge-2/0/2.0
user@PE2# set foo route-distinguisher 10.255.183.57:1
user@PE2# set foo vrf-target target:9000:1
```

9. Configure l2vpn instance to use the egress LSP configured.

```
[edit routing-instances]
user@PE2# set foo protocols l2vpn encapsulation-type ethernet-vlan
user@PE2# set foo protocols l2vpn site foo hot-standby
user@PE2# set foo protocols l2vpn site foo site-identifier 1
user@PE2# set foo protocols l2vpn site foo site-preference backup
user@PE2# set foo protocols l2vpn site foo interface ge-2/0/2.0 remote-site-id 2
```

10. If you are done configuring the device, enter **commit** from configuration mode.

Step-by-Step Procedure

To configure an egress protection LSP for Router PE3:

1. Configure RSVP.

```
[edit protocols rsvp]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
```

2. Configure MPLS.

```
[edit protocols mpls]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
```

3. Configure BGP.

```
[edit protocols bgp]
user@PE3# set traceoptions file bgp.log world-readable
user@PE3# set group ibgp type internal
user@PE3# set group ibgp local-address 10.255.183.61
user@PE3# set group ibgp family inet unicast
user@PE3# set group ibgp family l2vpn signaling
user@PE3# set group ibgp neighbor 192.0.2.3
user@PE3# set group ibgp neighbor 192.0.2.4
```

4. Configure IS-IS.

```
[edit protocols isis]
user@PE3# set traceoptions file isis-edge size 10m world-readable
user@PE3# set traceoptions flag error
user@PE3# set level 1 disable
user@PE3# set level 2 wide-metrics-only
user@PE3# set protocols isis interface all point-to-point
[edit protocols isis]
user@PE3# set protocols isis interface all level 2 metric 10
[edit protocols isis]
user@PE3# set protocols isis interface fxp0.0 disable
```

5. Configure LDP.

```
[edit protocols ldp]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
```

6. Configure a load-balancing policy.

```
[edit]
user@PE3# set policy-options policy-statement lb then load-balance per-packet
```

7. Configure the routing options to export routes based on the load-balancing policy.

```
[edit routing-options]
user@PE3# set traceoptions file ro.log
user@PE3# set traceoptions flag normal
user@PE3# set traceoptions flag route
user@PE3# set autonomous-system 100
user@PE3# set forwarding-table export lb
```

8. Configure BGP to advertise nlri from the routing instance with context-ID as next-hop.

```
[edit]
user@PE3# set routing-instances foo instance-type l2vpn
user@PE3# set routing-instances foo interface ge-2/1/2.0
user@PE3# set routing-instances foo route-distinguisher 10.255.183.61:1
user@PE3# set routing-instances foo vrf-target target:9000:1
```

9. Configure l2vpn to specify the interface that connects to the site and the remote interface to which you want the specified interface to connect.

```
[edit routing-instances]
user@PE3# set foo protocols l2vpn encapsulation-type ethernet-vlan
user@PE3# set foo protocols l2vpn site foo site-identifier 2
user@PE3# set foo protocols l2vpn site foo interface ge-2/1/2.0 remote-site-id 1
```

10. If you are done configuring the device, enter **commit** from configuration.

Results

From configuration mode, confirm your configuration on Router PE1 by entering the **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
[edit]
user@PE1# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
```

```

mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
  egress-protection {
    context-identifier 198.51.100.3 {
      primary;
      advertise-mode stub-alias;
    }
    traceoptions {
      file ep size 100m;
      flag all;
    }
  }
}
bgp {
  traceoptions {
    file bgp.log world-readable;
  }
  group ibgp {
    type internal;
    local-address 10.255.183.58;
    family inet {
      unicast;
    }
    family l2vpn {
      signaling {
        egress-protection;
      }
    }
    neighbor 192.0.2.3;
    neighbor 192.0.2.4;
  }
}
isis {
  traceoptions {
    file isis-edge size 10m world-readable;
    flag error;
  }
  level 1 disable;
  level 2 wide-metrics-only;
  interface all {
    point-to-point;
  }
}

```

```

        level 2 metric 10;
    }
    interface fxp0.0 {
        disable;
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}

[edit]
user@PE1# show policy-options
policy-statement lb {
    then {
        load-balance per-packet;
    }
}
[edit]
user@PE1# show routing-options
traceoptions {
    file ro.log;
    flag all;
}
autonomous-system 100;
forwarding-table {
    export lb;
}

[edit]
user@PE1# show routing-instances
foo {
    instance-type l2vpn;
    egress-protection {
        context-identifier {
            198.51.100.3;
        }
    }
    interface ge-2/0/2.0;
    route-distinguisher 10.255.183.58:1;
    vrf-target target:9000:1;
    protocols {

```



```

l2vpn {
    encapsulation-type ethernet-vlan;
    site foo {
        site-identifier 1;
        site-preference primary;
        interface ge-2/0/2.0 {
            remote-site-id 2;
        }
    }
}

```

From configuration mode, confirm your configuration on Router PE2 by entering the **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

[edit]
user@PE2# show protocols
rsvp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
mpls {
    interface all;
    interface fxp0.0 {
        disable;
    }
    egress-protection {
        context-identifier 198.51.100.3 {
            protector;
            advertise-mode stub-alias;
        }
        traceoptions {
            file ep size 100m;
            flag all;
        }
    }
}
bgp {
    traceoptions {
        file bgp.log world-readable;
    }
}

```

```

}
group ibgp {
  type internal;
  local-address 10.255.183.57;
  family inet {
    unicast;
  }
  family l2vpn {
    signaling {
      egress-protection;
    }
  }
  neighbor 192.0.2.3;
  neighbor 192.0.2.4;
}
}
isis {
  traceoptions {
    file isis-edge size 10m world-readable;
    flag error;
  }
  level 1 disable;
  level 2 wide-metrics-only;
  interface all {
    point-to-point;
    level 2 metric 10;
  }
  interface fxp0.0 {
    disable;
  }
}
ldp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}

[edit]
user@PE2# show policy-options
policy-statement lb {
  then {
    load-balance per-packet;
  }
}

```

```

}

[edit]
user@PE2# show routing-options
traceoptions {
  file ro.log;
  flag normal;
  flag route;
}
autonomous-system 100;
forwarding-table {
  export lb;
}

[edit]
user@PE2# show routing-instances
foo {
  instance-type l2vpn;
  egress-protection {
    protector;
  }
  interface ge-2/0/2.0;
  route-distinguisher 10.255.183.57:1;
  vrf-target target:9000:1;
  protocols {
    l2vpn {
      encapsulation-type ethernet-vlan;
      site foo {
        hot-standby;
        site-identifier 1;
        site-preference backup;
        interface ge-2/0/2.0 {
          remote-site-id 2;
        }
      }
    }
  }
}
}

```

From configuration mode, confirm your configuration on Router PE3 by entering the **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
[edit]
```

```
user@PE3# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
bgp {
  traceoptions {
    file bgp.log world-readable;
  }
  group ibgp {
    type internal;
    local-address 10.255.183.61;
    family inet {
      unicast;
    }
    family l2vpn {
      signaling;
    }
    neighbor 192.0.2.3;
    neighbor 192.0.2.4;
  }
}
isis {
  traceoptions {
    file isis-edge size 10m world-readable;
    flag error;
  }
  level 1 disable;
  level 2 wide-metrics-only;
  interface all {
    point-to-point;
    level 2 metric 10;
  }
  interface fxp0.0 {
    disable;
  }
}
```

```

}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}

[edit]
user@PE3# show policy-options
policy-statement lb {
    then {
        load-balance per-packet;
    }
}

[edit]
user@PE3# show routing-options
traceoptions {
    file ro.log;
    flag normal;
    flag route;
}
autonomous-system 100;
forwarding-table {
    export lb;
}

[edit]
user@PE3# show routing-instances
foo {
    instance-type l2vpn;
    interface ge-2/1/2.0;
    route-distinguisher 10.255.183.61:1;
    vrf-target target:9000:1;
    protocols {
        l2vpn {
            encapsulation-type ethernet-vlan;
            site foo {
                site-identifier 2;
                interface ge-2/1/2.0 {
                    remote-site-id 1;
                }
            }
        }
    }
}

```

```

    }
  }
}

```

Verification

IN THIS SECTION

- [Verifying the L2VPN Configuration | 326](#)
- [Verifying the Routing Instance Details | 327](#)
- [Verifying the IS-IS Configuration | 328](#)
- [Verifying the MPLS Configuration | 328](#)

Confirm that the configuration is working properly.

Verifying the L2VPN Configuration

Purpose

Verify that LSP is protected by the connection protection logic.

Action

From operational mode, run the **show l2vpn connections extensive** command.

```
user@PE2> show l2vpn connections extensive
```

```

Layer-2 VPN connections:
Legend for connection status (St)
EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch     WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down   NP -- interface hardware not present
CM -- control-word mismatch     -> -- only outbound connection is up
CN -- circuit not provisioned   <- -- only inbound connection is up
OR -- out of range             Up -- operational
OL -- no outgoing label        Dn -- down
LD -- local site signaled down  CF -- call admission control failure
RD -- remote site signaled down SC -- local and remote site ID collision
LN -- local site not designated LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated

```

```

XX -- unknown connection status  IL -- no incoming label
MM -- MTU mismatch                MI -- Mesh-Group ID not available
BK -- Backup connection           ST -- Standby connection
PF -- Profile parse failure        PB -- Profile busy
RS -- remote site standby          SN -- Static Neighbor
LB -- Local site not best-site     RB -- Remote site not best-site
VM -- VLAN ID mismatch

Legend for interface status
Up -- operational
Dn -- down
Instance: foo
Local site: foo (1)
  connection-site      Type  St  Time last up      # Up trans
    2                  rmt   Up   Aug  3 00:08:14 2001          1
    Local circuit: ge-2/0/2.0, Status: Up
    Remote PE: 192.0.2.3
    Incoming label: 32769, Outgoing label: 32768
    Egress Protection: Yes
      Time              Event              Interface/Lbl/PE
    Aug  3 00:08:14 2001  PE route up
    Aug  3 00:08:14 2001  Out lbl Update          32768
    Aug  3 00:08:14 2001  In lbl Update           32769
    Aug  3 00:08:14 2001  ckt0 up                 fe-0/0/0.0

```

Meaning

The **Egress Protection: Yes** output shows that the given PVC is protected by connection protection logic.

Verifying the Routing Instance Details

Purpose

Verify the routing instance information and the context identifier configured on the primary, which is used as the next-hop address in case of node-link failure.

Action

From operational mode, run the **show route foo detail** command.

```
user@PE2> show route foo detail
```

```

foo:
  Router ID: 0.0.0.0
  Type: l2vpn non-forwarding State: Active
  Interfaces:

```

```

lt-1/2/0.56
Route-distinguisher: 10.255.255.11:1
Vrf-import: [ __vrf-import-foo-internal__ ]
Vrf-export: [ __vrf-export-foo-internal__ ]
Vrf-import-target: [ target:100:200 ]
Vrf-export-target: [ target:100:200 ]
Fast-reroute-priority: low
Vrf-edge-protection-id: 198.51.100.3
Tables:
  foo.l2vpn.0          : 5 routes (3 active, 0 holddown, 0 hidden)
  foo.l2id.0           : 6 routes (2 active, 0 holddown, 0 hidden)

```

Meaning

The context-id is set to **198.51.100.3** and the **Vrf-import: [__vrf-import-foo-internal__]** in the output mentions the policy used for rewriting the next-hop address.

Verifying the IS-IS Configuration

Purpose

Verify the IS-IS context identifier information.

Action

From operational mode, run the **show isis context-identifier detail** command.

```
user@PE2> show isis context-identifier detail
```

```

IS-IS context database:
Context          L  Owner   Role      Primary      Metric
198.51.100.3      2  MPLS    Protector  pro17-b-lr-R1 0
  Advertiser pro17-b, Router ID 10.255.107.49, Level 2, tlv protector
  Advertiser pro17-b-lr-R1, Router ID 10.255.255.11, Metric 1, Level 2, tlv prefix

```

Meaning

Router PE2 is the protector and the configured context identifier is in use for the MPLS protocol.

Verifying the MPLS Configuration

Purpose

Verify the context identifier details on the primary and protector PEs.

Action

From operational mode, run the **show mpls context-identifier detail** command.


```
user@PE1> show mpls context-identifier detail
```

```
ID: 198.51.100.3
  Type: primary, Metric: 1, Mode: alias

Total 1, Primary 1, Protector 0
```

```
user@PE2> show mpls context-identifier detail
```

```
ID: 198.51.100.3
  Type: protector, Metric: 16777215, Mode: alias
  Context table: __198.51.100.3__.mpls.0, Label out: 299968
```

```
user@PE2> show mpls egress-protection detail
```

Instance	Type	Protection-Type
foo	local-l2vpn	Protector
Route Target	100:200	

Meaning

Context-id is **198.51.100.3**, advertise-mode is **alias**, the MPLS table created for egress protection is **__198.51.100.3__.mpls.0**, and the egress instance name is **foo**, which is of type **local-l2vpn**.

Example: Configuring Layer 3 VPN Egress Protection with PLR as Protector

IN THIS SECTION

- [Requirements | 330](#)
- [Overview | 330](#)
- [Configuration | 331](#)
- [Verification | 353](#)

This example shows how to configure fast service restoration at the egress of a Layer 3 VPN when the customer is multihomed to the service provider.

Starting in Junos OS Release 15.1, the enhanced point of local repair (PLR) functionality addresses a special scenario of egress node protection, where the PLR and the protector are co-located as one router. In this case, there is no need to have a bypass LSP reroute traffic during local repair. Instead, the PLR or the protector can send the traffic directly to the target CE (in Co-located protector model where the PLR or the protector is also the backup PE that is directly connected to the CE) or to the backup PE (in Centralized protector model where the backup PE is a separate router).

Requirements

No special configuration beyond device initialization is required before configuring this example.

This example requires Junos OS Release 15.1 or later.

Overview


As a special scenario of egress node protection, if a router is both a Protector and a PLR, it installs backup next hops to protect the transport LSP. In particular, it does not need a bypass LSP for local repair.

In the Co-located protector model, the PLR or the Protector is directly connected to the CE via a backup AC, while in the Centralized protector model, the PLR or the protector has an MPLS tunnel to the backup PE. In either case, the PLR or the Protector will install a backup next hop with a label followed by a lookup in a **context label** table, i.e. `__context__.mpls.0`. When the egress node fails, the PLR or the Protector will switch traffic to this backup next hop in PFE. The outer label (the transport LSP label) of packets is popped, and the inner label (the layer 3 VPN label allocated by the egress node) is looked up in `__context__.mpls.0`, which results in forwarding the packets directly to the CE (in Collocated protector model) or the backup PE (in Centralized protector model).

Topology

Figure 17 on page 330 shows the sample network.

Figure 17: Co-located PLR and protector in collocated protector model

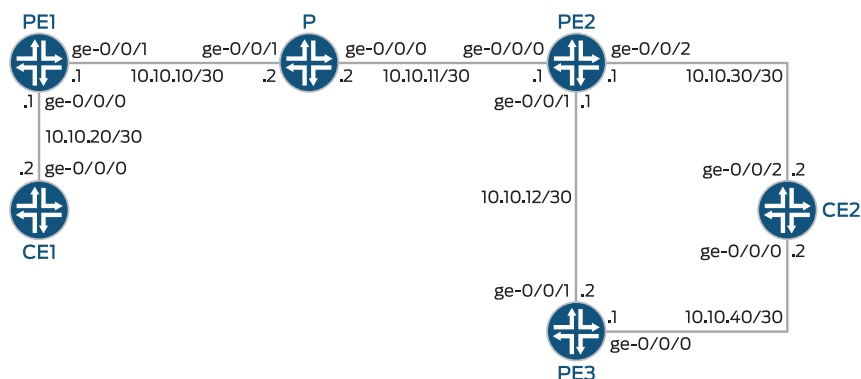

Configuration

IN THIS SECTION

- [Configuring Device CE1 | 336](#)
- [Configuring Device PE1 | 336](#)
- [Configuring Device P | 338](#)
- [Configuring Device PE2 | 339](#)
- [Configuring Device PE3 | 342](#)
- [Configuring Device CE2 | 344](#)
- [Results | 344](#)

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Device CE1

```
set interfaces ge-0/0/0 unit 0 family inet address 10.10.20.2/30
set interfaces lo0 unit 0 family inet address 10.255.162.87/32
```

Device PE1

```
set interfaces ge-0/0/0 unit 0 family inet address 10.10.20.1/30
set interfaces ge-0/0/1 unit 0 family inet address 10.10.10.1/30
set interfaces ge-0/0/1 unit 0 family inet6
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.1/32
set interfaces lo0 unit 0 family inet address 10.255.162.84/32 primary
set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:84/128 primary
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2084.00
set policy-options policy-statement vpn-exp term 1 from protocol direct
set policy-options policy-statement vpn-exp term 1 from route filter 10.10.20.0/24 exact
set policy-options policy-statement vpn-exp term 1 then community add vpn
```

```

set policy-options policy-statement vpn-exp term 1 then accept
set policy-options policy-statement vpn-imp term 1 from community vpn
set policy-options policy-statement vpn-imp term 1 then accept
set policy-options policy-statement vpn-imp term 2 then reject
set policy-options community vpn members traget:1:1
set routing-options autonomous-system 65000
set protocols rsvp interface all link-protection
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp vpn-apply-export
set protocols bgp group vpn type internal
set protocols bgp group vpn local-address 10.255.162.84
set protocols bgp group vpn family inet-vpn unicast
set protocols bgp group vpn neighbor 10.255.162.91
set protocols bgp group vpn neighbor 10.255.162.89
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 passive
set routing-instances vpn instance-type vrf
set routing-instances vpn interface ge-1/0/0.0
set routing-instances vpn route-distinguisher 100:100
set routing-instances vpn vrf-import vpn-imp
set routing-instances vpn vrf-export vpn-exp
set routing-instances vpn vrf-table-label
set routing-instances vpn protocols bgp group vpn type external
set routing-instances vpn protocols bgp group vpn family inet unicast
set routing-instances vpn protocols bgp group vpn family inet6 unicast
set routing-instances vpn protocols bgp group vpn peer-as 65001
set routing-instances vpn protocols bgp group vpn as-override
set routing-instances vpn protocols bgp group vpn neighbor 10.10.20.2

```

Device P

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.11.2/30
set interfaces ge-0/0/0 unit 0 family inet6
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 10.10.10.2/30
set interfaces ge-0/0/1 unit 0 family inet6

```

```

set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.1/32
set interfaces lo0 unit 0 family inet address 10.255.162.86/32 primary
set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:86/128 primary
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2086.00
set protocols rsvp interface all link-protection
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable

```

Device PE2

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.11.1/30
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family inet6
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 10.10.12.1/30
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family inet6
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 10.10.30.1/30
set interfaces lo0 unit 0 family inet address 127.0.0.1/32
set interfaces lo0 unit 0 family inet address 10.255.162.91/32 primary
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2091.00
set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:91/128 primary
set routing-options graceful-restart
set routing-options autonomous-system 65000
set routing-options forwarding-table export pplb
set protocols rsvp interface all link-protection
set protocols rsvp interface fxp0.0 disable
set protocols mpls label-switched-path to_PE1 to 10.255.162.84
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 1.1.1.1 protector
set protocols mpls egress-protection context-identifier 1.1.1.1 advertise-mode stub-alias
set protocols bgp vpn-apply-export
set protocols bgp group vpn type internal

```

```

set protocols bgp group vpn local-address 10.255.162.91
set protocols bgp group vpn family inet-vpn unicast egress-protection
set protocols bgp group vpn neighbor 10.255.162.84
set protocols bgp group vpn neighbor 10.255.162.89
set protocols isis traceoptions file isis.log
set protocols isis traceoptions flag all detail
set protocols isis level 2 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 passive
set policy-options policy-statement pplb term 1 then load-balance per-packet
set policy-options policy-statement vpn-exp term 1 from protocol bgp
set policy-options policy-statement vpn-exp term 1 then community add vpn
set policy-options policy-statement vpn-exp term 1 then accept
set policy-options policy-statement vpn-imp term 1 from community vpn
set policy-options policy-statement vpn-imp term 1 then accept
set policy-options policy-statement vpn-imp term 2 then reject
set policy-options community vpn members target:1:1
set routing-instances vpn instance-type vrf
set routing-instances vpn interface ge-3/2/4.0
set routing-instances vpn route-distinguisher 100:100
set routing-instances vpn vrf-import vpn-imp
set routing-instances vpn vrf-export vpn-exp
set routing-instances vpn vrf-table-label
set routing-instances vpn protocols bgp group vpn type external
set routing-instances vpn protocols bgp group vpn family inet unicast
set routing-instances vpn protocols bgp group vpn family inet6 unicast
set routing-instances vpn protocols bgp group vpn peer-as 65001
set routing-instances vpn protocols bgp group vpn as-override
set routing-instances vpn protocols bgp group vpn neighbor 10.10.30.2

```

Device PE3

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.40.1/30
set interfaces ge-0/0/1 unit 0 family inet address 10.10.12.2/30
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family inet6
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.1/32
set interfaces lo0 unit 0 family inet address 10.255.162.89/32 primary

```

```

set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2089.00
set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:89/128 primary
set routing-options graceful-restart
set routing-options autonomous-system 65000
set routing-options forwarding-table export pplb
set protocols rsvp interface all link-protection
set protocols rsvp interface fxp0.0 disable
set protocols mpls label-switched-path to_PE2 to 10.255.162.91
set protocols mpls label-switched-path to_PE1 to 10.255.162.84
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 1.1.1.1 primary
set protocols mpls egress-protection context-identifier 1.1.1.1 advertise-mode stub-alias
set protocols bgp vpn-apply-export
set protocols bgp group vpn type internal
set protocols bgp group vpn local-address 10.255.162.89
set protocols bgp group vpn family inet-vpn unicast
set protocols bgp group vpn neighbor 10.255.162.84 local-preference 300
set protocols bgp group vpn neighbor 10.255.162.91
set protocols isis level 2 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 passive
set routing-instances vpn instance-type vrf
set routing-instances vpn egress-protection context-identifier 1.1.1.1
set routing-instances vpn interface ge-1/1/0.0
set routing-instances vpn route-distinguisher 100:100
set routing-instances vpn vrf-import vpn-imp
set routing-instances vpn vrf-export vpn-exp
set routing-instances vpn vrf-table-label
set routing-instances vpn protocols bgp group vpn type external
set routing-instances vpn protocols bgp group vpn family inet unicast
set routing-instances vpn protocols bgp group vpn family inet6 unicast
set routing-instances vpn protocols bgp group vpn peer-as 65001
set routing-instances vpn protocols bgp group vpn as-override
set routing-instances vpn protocols bgp group vpn neighbor 10.10.40.2

```

Device CE2

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.40.2/30

```

```

set interfaces ge-0/0/2 unit 0 family inet address 10.10.30.2/30
set interfaces lo0 unit 0 family inet address 127.0.0.1/32
set interfaces lo0 unit 0 family inet address 10.255.162.88/32 primary
set interfaces lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2088.00
set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:88/128 primary

```

Configuring Device CE1

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

1. Configure interfaces.

```

[edit interfaces]
user@CE1# set ge-0/0/0 unit 0 family inet address 10.10.20.2/30
user@CE1# set lo0 unit 0 family inet address 10.255.162.87/32

```

Configuring Device PE1

Step-by-Step Procedure

1. Configure the interfaces.

```

[edit interfaces]
user@PE1# set ge-0/0/0 unit 0 family inet address 10.10.20.1/30
user@PE1# set ge-0/0/1 unit 0 family inet address 10.10.10.1/30
user@PE1# set ge-0/0/1 unit 0 family iso
user@PE1# set ge-0/0/1 unit 0 family inet6
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 127.0.0.1/32
user@PE1# set lo0 unit 0 family inet address 10.255.162.84/32 primary
user@PE1# set lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2084.00
user@PE1# set lo0 unit 0 family inet6 address abcd::10:255:162:84/128 primary

```

2. Configure the autonomous system (AS) number.

```

[edit routing-options]
user@PE1# set autonomous-system 65000
user@PE1# set forwarding-table export pplb

```


3. Configure RSVP.

```
[edit protocols rsvp]
user@PE1# set interface all link-protection
user@PE1# set interface fxp0.0 disable
```

4. Enable MPLS.

```
[edit protocols mpls]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
```

5. Configure BGP.

```
[edit protocols bgp]
user@PE1# set group vpn type internal
user@PE1# set group vpn local-address 10.255.162.84
user@PE1# set group vpn family inet-vpn unicast
user@PE1# set group vpn neighbor 10.255.162.91
user@PE1# set group vpn neighbor 10.255.162.89
user@PE1# set vpn-apply-export
```

6. Enable IS-IS.

```
[edit protocols isis]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
user@PE1# set interface lo0.0 passive
```

7. (Optional) Configure OSPF

```
[edit protocols ospf]
user@PE1# set area 0.0.0.0 interface all
user@PE1# set area 0.0.0.0 interface fxp0.0 disable
user@PE1# set area 0.0.0.0 interface lo0.0 passive
user@PE1# set traffic-engineering
```

8. Configure the routing instance.

```
[edit routing-instances]
user@PE1# set vpn instance-type vrf
user@PE1# set vpn interface ge-1/0/0.0
user@PE1# set vpn route-distinguisher 100:100
user@PE1# set vpn vrf-import vpn-imp
user@PE1# set vpn vrf-export vpn-exp
user@PE1# set vpn vrf-table-label
user@PE1# set vpn protocols bgp group vpn type external
user@PE1# set vpn protocols bgp group vpn family inet unicast
user@PE1# set vpn protocols bgp group vpn family inet6 unicast
user@PE1# set vpn protocols bgp group vpn peer-as 65001
user@PE1# set vpn protocols bgp group vpn as-override
user@PE1# set vpn protocols bgp group vpn neighbor 10.10.20.2
```

9. Configure the routing policy.

```
[edit]
user@PE1# set policy-options policy-statement vpn-exp term 1 from protocol direct
user@PE1# set policy-options policy-statement vpn-exp term 1 from route filter 10.10.20.0/24 exact
user@PE1# set policy-options policy-statement vpn-exp term 1 then community add vpn
user@PE1# set policy-options policy-statement vpn-exp term 1 then accept
user@PE1# set policy-options policy-statement vpn-imp term 1 from community vpn
user@PE1# set policy-options policy-statement vpn-imp term 1 then accept
user@PE1# set policy-options policy-statement vpn-imp term 2 then reject
user@PE1# set policy-options community vpn members traget:1:1
```

Configuring Device P

Step-by-Step Procedure

1. Configure the device interfaces.

```
[edit interfaces]
user@P# set ge-0/0/0 unit 0 family inet address 10.10.11.2/30
user@P# set ge-0/0/0 unit 0 family inet6
user@P# set ge-0/0/0 unit 0 family iso
user@P# set ge-0/0/0 unit 0 family mpls
user@P# set ge-0/0/1 unit 0 family inet address 10.10.10.2/30
user@P# set ge-0/0/1 unit 0 family inet6
user@P# set ge-0/0/1 unit 0 family iso
user@P# set ge-0/0/1 unit 0 family mpls
user@P# set lo0 unit 0 family inet address 127.0.0.1/32
user@P# set lo0 unit 0 family inet address 10.255.162.86/32 primary
```

```

user@P# set lo0 unit 0 family inet6 address abcd::10:255:162:86/128 primary
user@P# set lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2086.00

```

2. Enable IS-IS.

```

[edit protocols isis]
user@P# set interface all
user@P# set interface fxp0.0 disable

```

3. Enable MPLS.

```

[edit protocols mpls ]
user@P# set interface all
user@P# set interface fxp0.0 disable

```

4. Configure RSVP.

```

[edit protocols rsvp]
user@P# set interface all link-protection
user@P# set interface fxp0.0 disable

```

5. (Optional) Configure OSPF.

```

[edit protocols ospf]
user@P# set area 0.0.0.0 interface all
user@P# set area 0.0.0.0 interface fxp0.0 disable
user@P# set area 0.0.0.0 interface lo0.0 passive
user@P# set traffic-engineering

```

Configuring Device PE2

Step-by-Step Procedure

1. Configure the interfaces.

```

[edit interfaces]
user@PE2# set ge-0/0/0 unit 0 family inet address 10.10.11.1/30
user@PE2# set ge-0/0/0 unit 0 family iso
user@PE2# set ge-0/0/0 unit 0 family inet6
user@PE2# set ge-0/0/0 unit 0 family mpls

```

```

user@PE2# set ge-0/0/1 unit 0 family inet address 10.10.12.1/30
user@PE2# set ge-0/0/1 unit 0 family iso
user@PE2# set ge-0/0/1 unit 0 family inet6
user@PE2# set ge-0/0/1 unit 0 family mpls
user@PE2# set ge-0/0/2 unit 0 family inet address 10.10.30.1/30
user@PE2# set lo0 unit 0 family inet address 127.0.0.1/32
user@PE2# set lo0 unit 0 family inet address 10.255.162.91/32 primary
user@PE2# set lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2091.00
user@PE2# set lo0 unit 0 family inet6 address abcd::10:255:162:91/128 primary

```

2. Configure autonomous number(AS).

```

[edit routing-options]
user@PE2# set autonomous-system 65000
user@PE2# set forwarding-table export pplb

```

3. Configure RSVP.

```

[edit protocols rsvp]
user@PE2# set interface all link-protection
user@PE2# set interface fxp0.0 disable

```

4. Configure MPLS.

```

[edit protocols mpls]
user@PE2# set label-switched-path to_PE1 to 10.255.162.84
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
user@PE2# set egress-protection context-identifier 1.1.1.1 protector
user@PE2# set egress-protection context-identifier 1.1.1.1 advertise-mode stub-alias

```

5. Configure BGP.

```

[edit protocols bgp]
user@PE2# set group vpn family inet-vpn unicast egress-protection
user@PE2# set group vpn local-address 10.255.162.91
user@PE2# set group vpn neighbor 10.255.162.84
user@PE2# set group vpn neighbor 10.255.162.89
user@PE2# set group vpn type internal
user@PE2# set vpn-apply-export

```

6. Configure IS-IS.

```
[edit protocols isis]
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
user@PE2# set interface lo0.0 passive
user@PE2# set level 2 disable
user@PE2# set traceoptions file isis.log
user@PE2# set traceoptions flag all detail
```

7. (Optional) Configure OSPF.

```
[edit protocols ospf]
user@PE2# set area 0.0.0.0 interface all
user@PE2# set area 0.0.0.0 interface fxp0.0 disable
user@PE2# set area 0.0.0.0 interface lo0.0 passive
user@PE2# set traffic-engineering
```

8. Configure the routing policy.

```
[edit policy-options]
user@PE2# set community vpn members target:1:1
user@PE2# set policy-statement pplb term 1 then load-balance per-packet
user@PE2# set policy-statement vpn-exp term 1 from protocol bgp
user@PE2# set policy-statement vpn-exp term 1 then community add vpn
user@PE2# set policy-statement vpn-exp term 1 then accept
user@PE2# set policy-statement vpn-imp term 1 from community vpn
user@PE2# set policy-statement vpn-imp term 1 then accept
user@PE2# set policy-statement vpn-imp term 2 then reject
```

9. Configure the routing instance.

```
[edit routing-instances]
user@PE2# set vpn instance-type vrf
user@PE2# set vpn interface ge-3/2/4.0
user@PE2# set vpn route-distinguisher 100:100
user@PE2# set vpn vrf-import vpn-imp
user@PE2# set vpn vrf-export vpn-exp
user@PE2# set vpn vrf-table-label
user@PE2# set vpn protocols bgp group vpn type external
user@PE2# set vpn protocols bgp group vpn family inet unicast
```

```

user@PE2# set vpn protocols bgp group vpn family inet6 unicast
user@PE2# set vpn protocols bgp group vpn peer-as 65001
user@PE2# set vpn protocols bgp group vpn as-override
user@PE2# set vpn protocols bgp group vpn neighbor 10.10.30.2

```

Configuring Device PE3

Step-by-Step Procedure

1. Configure the interfaces.

```

[edit interfaces]
user@PE3# set ge-0/0/0 unit 0 family inet address 10.10.40.1/30
user@PE3# set ge-0/0/1 unit 0 family inet address 10.10.12.2/30
user@PE3# set ge-0/0/1 unit 0 family iso
user@PE3# set ge-0/0/1 unit 0 family inet6
user@PE3# set ge-0/0/1 unit 0 family mpls
user@PE3# set lo0 unit 0 family inet address 127.0.0.1/32
user@PE3# set lo0 unit 0 family inet address 10.255.162.89/32 primary
user@PE3# set lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2089.00
user@PE3# set lo0 unit 0 family inet6 address abcd::10:255:162:89/128 primary

```

2. Configure the autonomous number (AS).

```

[edit routing-options]
user@PE3# set autonomous-system 65000
user@PE3# set forwarding-table export pplb

```

3. Configure RSVP.

```

[edit protocols rsvp]
user@PE3# set interface all link-protection
user@PE3# set interface fxp0.0 disable

```

4. Configure MPLS.

```

[edit protocols mpls]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
user@PE3# set egress-protection context-identifier 1.1.1.1 primary
user@PE3# set egress-protection context-identifier 1.1.1.1 advertise-mode stub-alias

```

```

user@PE3# set label-switched-path to_PE2 to 10.255.162.91
user@PE3# set label-switched-path to_PE1 to 10.255.162.84

```

5. Configure BGP.

```

[edit protocols bgp]
user@PE3# set group vpn type internal
user@PE3# set group vpn local-address 10.255.162.89
user@PE3# set group vpn family inet-vpn unicast
user@PE3# set group vpn neighbor 10.255.162.84 local-preference 300
user@PE3# set group vpn neighbor 10.255.162.91
user@PE3# set vpn-apply-export

```

6. Configure IS-IS.

```

[edit protocols isis]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
user@PE3# set interface lo0.0 passive
user@PE3# set level 2 disable

```

7. (Optional) Configure OSPF.

```

[edit protocols ospf]
user@PE3# set area 0.0.0.0 interface all
user@PE3# set area 0.0.0.0 interface fxp0.0 disable
user@PE3# set area 0.0.0.0 interface lo0.0 passive
user@PE3# set traffic-engineering

```

8. Configure the routing instance.

```

[edit routing-instances]
user@PE3# set vpn egress-protection context-identifier 1.1.1.1
user@PE3# set vpn instance-type vrf
user@PE3# set vpn interface ge-1/1/0.0
user@PE3# set vpn protocols bgp group vpn type external
user@PE3# set vpn protocols bgp group vpn family inet unicast
user@PE3# set vpn protocols bgp group vpn family inet6 unicast
user@PE3# set vpn protocols bgp group vpn peer-as 65001
user@PE3# set vpn protocols bgp group vpn as-override

```

```

user@PE3# set vpn protocols bgp group vpn neighbor 10.10.40.2
user@PE3# set vpn route-distinguisher 100:100
user@PE3# set vpn vrf-export vpn-exp
user@PE3# set vpn vrf-import vpn-imp
user@PE3# set vpn vrf-table-label

```

Configuring Device CE2

Step-by-Step Procedure

1. Configure the interfaces.

```

[edit interfaces]
user@CE2# set ge-0/0/0 unit 0 family inet address 10.10.40.2/30
user@CE2# set ge-0/0/2 unit 0 family inet address 10.10.30.2/30
user@CE2# set lo0 unit 0 family inet address 127.0.0.1/32
user@CE2# set lo0 unit 0 family inet address 10.255.162.88/32 primary
user@CE2# set lo0 unit 0 family iso address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2088.00
user@CE2# set lo0 unit 0 family inet6 address abcd::10:255:162:88/128 primary

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

Device CE1

```

user@CE1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.10.20.2/30;
    }
  }
}

```

Device PE1


```
user@PE1# show interfaces
```

```
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.10.20.1/30;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 10.10.10.1/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.0.0.1/32;
      address 10.255.162.84/32 {
        primary;
      }
    }
    family iso {
      address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2084.00;
    }
    family inet6 {
      address abcd::10:255:162:84/128 {
        primary;
      }
    }
  }
}
```

```
user@PE1# show protocols
```

```
rsvp {
  interface all {
    link-protection;
```

```

    }
    interface fxp0.0 {
        disable;
    }
}
mpls {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
bgp {
    vpn-apply-export;
    group vpn {
        type internal;
        local-address 10.255.162.84;
        family inet-vpn {
            unicast;
        }
        neighbor 10.255.162.91;
        neighbor 10.255.162.89;
    }
}
isis {
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0 {
        passive;
    }
}
}

```

Device P

```

user@P# show interfaces
ge-0/0/0 {
    unit 0 {
        family inet {
            address 10.10.11.2/30;
        }
        family iso;
    }
}

```

```

        family inet6;
        family mpls;
    }
}
ge-0/0/1 {
    unit 0 {
        family inet {
            address 10.10.10.2/30;
        }
        family iso;
        family inet6;
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 127.0.0.1/32;
            address 10.255.162.86/32 {
                primary;
            }
        }
        family iso {
            address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2086.00;
        }
        family inet6 {
            address abcd::10:255:162:86/128 {
                primary;
            }
        }
    }
}

```

user@P# **show protocols**

```

rsvp {
    interface all {
        link-protection;
    }
    interface fxp0.0 {
        disable;
    }
}

```

```

}
mpls {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
isis {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
}

```

Device PE2

```

user@PE2# show interfaces
ge-0/0/0 {
    unit 0 {
        family inet {
            address 10.10.11.1/30;
        }
        family iso;
        family inet6;
        family mpls;
    }
}
ge-0/0/1 {
    unit 0 {
        family inet {
            address 10.10.12.1/30;
        }
        family iso;
        family inet6;
        family mpls;
    }
}
ge-0/0/2 {
    unit 0 {
        family inet {
            address 10.10.30.1/30;
        }
    }
}

```

```

    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 127.0.0.1/32;
        address 10.255.162.91/32 {
          primary;
        }
      }
      family iso {
        address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2091.00;
      }
      family inet6 {
        address abcd::10:255:162:91/128 {
          primary;
        }
      }
    }
  }
}

```

user@PE2# **show protocols**

```

rsvp {
  interface all {
    link-protection;
  }
  interface fxp0.0 {
    disable;
  }
}
mpls {
  label-switched-path to_PE1 {
    to 10.255.162.84;
  }
  interface all;
  interface fxp0.0 {
    disable;
  }
  egress-protection {
    context-identifier 1.1.1.1 {
      protector;
    }
  }
}

```

```

        advertise-mode stub-alias;
    }
}
}
bgp {
    vpn-apply-export;
    group vpn {
        type internal;
        local-address 10.255.162.91;
        family inet-vpn {
            unicast {
                egress-protection;
            }
        }
        neighbor 10.255.162.84;
        neighbor 10.255.162.89;
    }
}
isis {
    traceoptions {
        file isis.log;
        flag all detail;
    }
    level 2 disable;
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0 {
        passive;
    }
}
}

```

Device PE3

```

user@PE3# show interfaces
ge-0/0/0 {
    unit 0 {
        family inet {
            address 10.10.40.1/30;
        }
    }
}

```

```

}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 10.10.12.2/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.0.0.1/32;
      address 10.255.162.89/32 {
        primary;
      }
    }
    family iso {
      address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2089.00;
    }
    family inet6 {
      address abcd::10:255:162:89/128 {
        primary;
      }
    }
  }
}
}

```

```

user@PE3# show protocols
rsvp {
  interface all {
    link-protection;
  }
  interface fxp0.0 {
    disable;
  }
}
mpls {
  label-switched-path to_PE2 {

```

```

        to 10.255.162.91;
    }
    label-switched-path to_PE1 {
        to 10.255.162.84;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
    egress-protection {
        context-identifier 1.1.1.1 {
            primary;
            advertise-mode stub-alias;
        }
    }
}
bgp {
    vpn-apply-export;
    group vpn {
        type internal;
        local-address 10.255.162.89;
        family inet-vpn {
            unicast;
        }
        neighbor 10.255.162.84 {
            local-preference 300;
        }
        neighbor 10.255.162.91;
    }
}
isis {
    level 2 disable;
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0 {
        passive;
    }
}

```

Device CE2


```

user@CE2# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.10.40.2/30;
    }
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 10.10.30.2/30;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.0.0.1/32;
      address 10.255.162.88/32 {
        primary;
      }
    }
    family iso {
      address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2088.00;
    }
    family inet6 {
      address abcd::10:255:162:88/128 {
        primary;
      }
    }
  }
}

```

Verification

IN THIS SECTION

- [Verifying the Routing Instance | 354](#)
- [Checking the Context Identifier Route | 362](#)

Verifying the Routing Instance

Purpose

Check the routes in the routing table.

Action

user@PE1> **show route 10.10.50 table vpn.inet.0**

```
vpn.inet.0: 6 destinations, 7 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.10.50.0/24      *[BGP/170] 00:01:26, localpref 100, from 10.255.162.96
                   AS path: 65001 I, validation-state: unverified
                   > to 10.10.10.2 via ge-2/0/2.0, Push 16, Push 300064(top)
                   [BGP/170] 00:06:22, localpref 50, from 10.255.162.91
                   AS path: 65001 I, validation-state: unverified
                   > to 10.10.10.2 via ge-2/0/2.0, Push 17, Push 299920(top)
```

user@PE1>**show route 10.10.50 extensive table vpn.inet.0**

```
vpn.inet.0: 6 destinations, 7 routes (6 active, 0 holddown, 0 hidden)
10.10.50.0/24 (2 entries, 1 announced)
TSI:
KRT in-kernel 10.10.50.0/24 -> {indirect(1048575)}
Page 0 idx 1, (group vpn type External) Type 1 val 0x9e33490 (adv_entry)
  Advertised metrics:
    Nexthop: Self
    AS path: [65000] 65000 I
    Communities: target:1:1
Path 10.10.50.0 from 10.255.162.96 Vector len 4. Val: 1
  *BGP      Preference: 170/-101
            Route Distinguisher: 200:100
            Next hop type: Indirect, Next hop index: 0
            Address: 0x9db63f0
            Next-hop reference count: 6
            Source: 10.255.162.96
            Next hop type: Router, Next hop index: 635
            Next hop: 10.10.10.2 via ge-2/0/2.0, selected
            Label operation: Push 16, Push 300064(top)
            Label TTL action: prop-ttl, prop-ttl(top)
            Load balance label: Label 16: None; Label 300064: None;
            Label element ptr: 0x9db60e0
```

```

Label parent element ptr: 0x9db5e40
Label element references: 1
Label element child references: 0
Label element lsp id: 0
Session Id: 0x146
Protocol next hop: 1.1.1.1
Label operation: Push 16
Label TTL action: prop-ttl
Load balance label: Label 16: None;
Indirect next hop: 0x9e55440 1048575 INH Session ID: 0x14d
State: < Secondary Active Int Ext ProtectionCand >
Local AS: 65000 Peer AS: 65000
Age: 1:28 Metric2: 1
Validation State: unverified
Task: BGP_65000.10.255.162.96
Announcement bits (2): 0-KRT 1-BGP_RT_Background
AS path: 65001 I
Communities: target:1:1
Import Accepted
VPN Label: 16
Localpref: 100
Router ID: 10.255.162.96
Primary Routing Table bgp.l3vpn.0
Indirect next hops: 1
    Protocol next hop: 1.1.1.1 Metric: 1
    Label operation: Push 16
    Label TTL action: prop-ttl
    Load balance label: Label 16: None;
    Indirect next hop: 0x9e55440 1048575 INH Session ID: 0x14d

    Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.10.10.2 via ge-2/0/2.0
        Session Id: 0x146
1.1.1.1/32 Originating RIB: inet.3
Metric: 1 Node path count: 1
Forwarding nexthops: 1
Nexthop: 10.10.10.2 via ge-2/0/2.0
BGP Preference: 170/-51
Route Distinguisher: 100:100
Next hop type: Indirect, Next hop index: 0
Address: 0x9db6390
Next-hop reference count: 5
Source: 10.255.162.91

```

```

Next hop type: Router, Next hop index: 636
Next hop: 10.10.10.2 via ge-2/0/2.0, selected
Label operation: Push 17, Push 299920(top)
Label TTL action: prop-ttl, prop-ttl(top)
Load balance label: Label 17: None; Label 299920: None;
Label element ptr: 0x9db62c0
Label parent element ptr: 0x9dc0d00
Label element references: 1
Label element child references: 0
Label element lsp id: 0
Session Id: 0x146
Protocol next hop: 10.255.162.91
Label operation: Push 17
Label TTL action: prop-ttl
Load balance label: Label 17: None;
Indirect next hop: 0x9e55580 1048574 INH Session ID: 0x14c
State: < Secondary Int Ext ProtectionCand >
Inactive reason: Local Preference
Local AS: 65000 Peer AS: 65000
Age: 6:24 Metric2: 1
Validation State: unverified
Task: BGP_65000.10.255.162.91
AS path: 65001 I
Communities: target:1:1
Import Accepted
VPN Label: 17
Localpref: 50
Router ID: 10.255.162.91
Primary Routing Table bgp.l3vpn.0
Indirect next hops: 1
    Protocol next hop: 10.255.162.91 Metric: 1
    Label operation: Push 17
    Label TTL action: prop-ttl
    Load balance label: Label 17: None;
    Indirect next hop: 0x9e55580 1048574 INH Session ID: 0x14c

    Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.10.10.2 via ge-2/0/2.0
        Session Id: 0x146
10.255.162.91/32 Originating RIB: inet.3
Metric: 1      Node path count: 1

```

```
Forwarding nexthops: 1
Nexthop: 10.10.10.2 via ge-2/0/2.0
```

user@PE2> **show route table mpls.0**

```
mpls.0: 15 destinations, 15 routes (15 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 00:23:33, metric 1
           to table inet.0
0(S=0)     *[MPLS/0] 00:23:33, metric 1
           to table mpls.0
1          *[MPLS/0] 00:23:33, metric 1
           Receive
2          *[MPLS/0] 00:23:33, metric 1
           to table inet6.0
2(S=0)     *[MPLS/0] 00:23:33, metric 1
           to table mpls.0
13         *[MPLS/0] 00:23:33, metric 1
           Receive
17         *[VPN/0] 00:23:33
           to table vpn.inet.0, Pop
299856(S=0) *[MPLS/0] 00:23:33
           to table __1.1.1.1__.mpls.0
299904     *[LDP/9] 00:01:50, metric 1
           > to 10.10.11.2 via xe-8/2/5.0, Pop
299904(S=0) *[LDP/9] 00:01:50, metric 1
           > to 10.10.11.2 via xe-8/2/5.0, Pop
299920     *[LDP/9] 00:01:50, metric 1
           > to 10.10.11.2 via xe-8/2/5.0, Swap 299904
300016     *[LDP/9] 00:01:50, metric 1
           > to 10.10.12.1 via ge-3/0/2.0, Pop
           to table __1.1.1.1__.mpls.0
300016(S=0) *[LDP/9] 00:01:50, metric 1
           > to 10.10.12.1 via ge-3/0/2.0, Pop
           to table __1.1.1.1__.mpls.0
300048     *[LDP/9] 00:01:50, metric 1
           > to 10.10.12.1 via ge-3/0/2.0, Pop
300048(S=0) *[LDP/9] 00:01:50, metric 1
           > to 10.10.12.1 via ge-3/0/2.0, Pop
```

user@PE2> show route table __1.1.1.1__mpls.0

```
__1.1.1.1__mpls.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

16          *[Egress-Protection/170] 00:22:57
            to table __1.1.1.1-vpn__inet.0
```

user@PE2> show route table __1.1.1.1__mpls.0 extensive

```
__1.1.1.1__mpls.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
16  (1 entry, 1 announced)
    State: < CalcForwarding >
TSI:
KRT in-kernel 16      /52 -> {Table}
    *Egress-Protection Preference: 170
      Next table: __1.1.1.1-vpn__inet.0
      Next-hop index: 649
      Address: 0x9dc2690
      Next-hop reference count: 2
      State: < Active NoReadvrt ForwardingOnly Int Ext >
      Local AS: 65000
      Age: 22:59
      Validation State: unverified
      Task: Protection
      Announcement bits (1): 0-KRT
      AS path: I
      Protecting 2 routes
```

user@PE2> show route table __1.1.1.1-vpn__inet.0

```
__1.1.1.1-vpn__inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.10.30.0/24      *[Egress-Protection/170] 00:02:11
                  to table vpn.inet.0
```

```
10.10.50.0/24      *[Egress-Protection/170] 00:02:11
                  > to 10.10.30.2 via ge-3/2/4.0
```

user@PE2> **show route table __1.1.1.1-vpn__inet.0 extensive**

```
__1.1.1.1-vpn__inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.10.30.0/24 (1 entry, 1 announced)
    State: < CalcForwarding >
TSI:
KRT in-kernel 10.10.30.0/24 -> {Table}
    *Egress-Protection Preference: 170
        Next table: vpn.inet.0
        Next-hop index: 592
        Address: 0x9dc2630
        Next-hop reference count: 2
        State: < Active NoReadvrt ForwardingOnly Int Ext >
        Local AS: 65000
        Age: 2:13
        Validation State: unverified
        Task: Protection
        Announcement bits (1): 0-KRT
        AS path: I
        Backup route 10.10.30.0 table vpn.inet.0

10.10.50.0/24 (1 entry, 1 announced)
    State: < CalcForwarding >
TSI:
KRT in-kernel 10.10.50.0/24 -> {10.10.30.2}
    *Egress-Protection Preference: 170
        Next hop type: Router, Next hop index: 630
        Address: 0x9dc1d90
        Next-hop reference count: 7
        Next hop: 10.10.30.2 via ge-3/2/4.0, selected
        Session Id: 0x147
        State: < Active NoReadvrt ForwardingOnly Int Ext >
        Local AS: 65000
        Age: 2:13
        Validation State: unverified
        Task: Protection
        Announcement bits (1): 0-KRT
```

```
AS path: I
Backup route 10.10.50.0 table vpn.inet.0
```

user@PE2> **show route table mpls.0 label 17**

```
mpls.0: 15 destinations, 15 routes (15 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

17                *[VPN/0] 00:25:06
                  to table vpn.inet.0, Pop
```

user@PE2> **show route table mpls.0 label 17 extensive**

```
mpls.0: 15 destinations, 15 routes (15 active, 0 holddown, 0 hidden)
17 (1 entry, 0 announced)
    *VPN      Preference: 0
              Next table: vpn.inet.0
              Next-hop index: 0
              Label operation: Pop
              Load balance label: None;
              Label element ptr: 0x9db3920
              Label parent element ptr: 0x0
              Label element references: 1
              Label element child references: 0
              Label element lsp id: 0
              Address: 0x9db3990
              Next-hop reference count: 1
              State: < Active NotInstall Int Ext >
    Age: 25:30
          Validation State: unverified
          Task: RT
          AS path: I
```

user@PE3> **show route table mpls.0**

```
mpls.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                *[MPLS/0] 00:24:16, metric 1
```



```

                                to table inet.0
0(S=0)                        *[MPLS/0] 00:24:16, metric 1
                                to table mpls.0
1                             *[MPLS/0] 00:24:16, metric 1
                                Receive
2                             *[MPLS/0] 00:24:16, metric 1
                                to table inet6.0
2(S=0)                        *[MPLS/0] 00:24:16, metric 1
                                to table mpls.0
13                             *[MPLS/0] 00:24:16, metric 1
                                Receive
16                             *[VPN/0] 00:24:15
                                to table vpn.inet.0, Pop
300096                        *[LDP/9] 00:02:33, metric 1
                                > to 10.10.12.2 via ge-1/1/4.0, Swap 299920
300112                        *[LDP/9] 00:02:33, metric 1
                                > to 10.10.12.2 via ge-1/1/4.0, Swap 299904
300128                        *[LDP/9] 00:02:33, metric 1
                                > to 10.10.12.2 via ge-1/1/4.0, Pop
300128(S=0)                  *[LDP/9] 00:02:33, metric 1
                                > to 10.10.12.2 via ge-1/1/4.0, Pop

```

user@PE3> show route table mpls.0 label 16

```

mpls.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

16                             *[VPN/0] 00:24:22
                                to table vpn.inet.0, Pop

```

user@PE3> show route table mpls.0 label 16 extensive

```

mpls.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)
16  (1 entry, 0 announced)
    *VPN      Preference: 0
              Next table: vpn.inet.0
              Next-hop index: 0
              Label operation: Pop
              Load balance label: None;

```

```

Label element ptr: 0x31d1ec0
Label parent element ptr: 0x0
Label element references: 1
Label element child references: 0
Label element lsp id: 0
Address: 0x31d1f30
Next-hop reference count: 1
State: < Active NotInstall Int Ext >
Age: 24:24
Validation State: unverified
Task: RT
AS path: I

```

Checking the Context Identifier Route

Purpose

Examine the information about the context identifier (1.1.1.1).

Action

user@PE1> **show route 1.1.1.1**

```

inet.0: 47 destinations, 47 routes (46 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[IS-IS/15] 00:04:08, metric 31
                   > to 10.10.10.2 via ge-2/0/2.0

inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[LDP/9] 00:04:08, metric 1
                   > to 10.10.10.2 via ge-2/0/2.0, Push 300064

inet.5: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[IS-IS/15] 00:04:08, metric 31, metric2 1
                   > to 10.10.10.2 via ge-2/0/2.0, Push 299856, Push 299920(top)

```

user@PE2> **show route 1.1.1.1**

```
inet.0: 48 destinations, 49 routes (47 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
1.1.1.1/32          *[MPLS/2] 00:26:00, metric 16777215
                    Receive
                    [IS-IS/15] 00:04:17, metric 11
                    > to 10.10.12.1 via ge-3/0/2.0
```

```
inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
1.1.1.1/32          *[LDP/9] 00:04:17, metric 1
                    > to 10.10.12.1 via ge-3/0/2.0
```

user@PE2> **show mpls context-identifier**

ID	Type	Metric	ContextTable
1.1.1.1	protector	16777215	__1.1.1.1__.mpls.0
Total 1, Primary 0, Protector 1			

user@PE2> **show mpls context-identifier detail**

```
ID: 1.1.1.1
Type: protector, Metric: 16777215, Mode: alias
Context table: __1.1.1.1__.mpls.0, Label out: 299856

Total 1, Primary 0, Protector 1
```

user@PE3> **show route 1.1.1.1**

```
inet.0: 47 destinations, 47 routes (46 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
1.1.1.1/32          *[MPLS/1] 00:26:09, metric 1
                    Receive
```

```
inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
1.1.1.1/32          *[MPLS/1] 00:26:09, metric 1
```

Receive

```
inet.5: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[IS-IS/15] 00:04:27, metric 1, metric2 1
                    > to 10.10.12.2 via ge-1/1/4.0, Push 299856
```

user@PE3> **show mpls context-identifier**

ID	Type	Metric	ContextTable
1.1.1.1	primary	1	
Total 1, Primary 1, Protector 0			

user@PE3> **show mpls context-identifier detail**

```
ID: 1.1.1.1
  Type: primary, Metric: 1, Mode: alias

Total 1, Primary 1, Protector 0
```

Understanding MPLS and Path Protection on EX Series Switches

Junos OS MPLS for Juniper Networks EX Series Ethernet Switches provides path protection to protect your MPLS network from label switched path (LSP) failures.

By default, an LSP routes itself hop-by-hop from the ingress provider edge switch through the provider switches toward the egress provider edge switch. The LSP generally follows the shortest path as dictated by the local routing table, usually taking the same path as destination-based, best-effort traffic. These paths are “soft” in nature because they automatically reroute themselves whenever a change occurs in a routing table or in the status of a node or link.

Typically, when an LSP fails, the switch immediately upstream from the failure signals the outage to the ingress provider edge switch. The ingress provider edge switch calculates a new path to the egress provider edge switch, establishes the new LSP, and then directs traffic from the failed path to the new path. This rerouting process can be time-consuming and prone to failure. For example, the outage signals to the ingress switch might get lost or the new path might take too long to come up, resulting in significant packet drops.

You can configure path protection by configuring primary and secondary paths on the ingress switch. If the primary path fails, the ingress switch immediately reroutes traffic from the failed path to the standby path, eliminating the need for the ingress switch to calculate a new route and signal a new path. For information about configuring standby LSPs, see [“Configuring Path Protection in an MPLS Network \(CLI Procedure\)” on page 279](#).

Verifying Path Protection in an MPLS Network

To verify that path protection is working correctly on EX Series switches, perform the following tasks:

1. [Verifying the Primary Path | 365](#)
2. [Verifying the RSVP-Enabled Interfaces | 367](#)
3. [Verifying a Secondary Path | 367](#)

Verifying the Primary Path

Purpose

Verify that the primary path is operational.

Action

```
user@switch> show mpls lsp extensive ingress
```

```
Ingress LSP: 2 sessions
```

```

127.1.8.8
  From: 127.1.9.9, State: Up, ActiveRoute: 0, LSPname: lsp_to_240
  ActivePath: primary_path_lsp_to_240 (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary  primary_path_lsp_to_240 State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Exclude: red
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
10.3.3.2 S 10.3.4.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.3.3.2 10.3.4.2
    6 Mar 11 23:58:01.684 Selected as active path: due to 'primary'
    5 Mar 11 23:57:00.750 Record Route:  10.3.3.2 10.3.4.2
    4 Mar 11 23:57:00.750 Up
    3 Mar 11 23:57:00.595 Originate Call
    2 Mar 11 23:57:00.595 CSPF: computation result accepted 10.3.3.2 10.3.4.2
    1 Mar 11 23:56:31.135 CSPF failed: no route toward 10.3.2.2[25 times]
Standby  secondary_path_lsp_to_240 State: Up
Standby  secondary_path_lsp_to_240 State: Up
  Priorities: 7 0
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 1)
10.3.5.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.3.5.2
    7 Mar 11 23:58:01.684 Deselected as active: due to 'primary'
    6 Mar 11 23:46:17.298 Selected as active path
    5 Mar 11 23:46:17.295 Record Route:  5.5.5.2
    4 Mar 11 23:46:17.287 Up
    3 Mar 11 23:46:16.760 Originate Call
    2 Mar 11 23:46:16.760 CSPF: computation result accepted 10.3.5.2
    1 Mar 11 23:45:48.095 CSPF failed: no route toward 10.5.5.5[2 times]
  Created: Wed Mar 11 23:44:37 2009
  [Output truncated]

```

Meaning

As indicated by the **ActivePath** in the output, the LSP **primary_path_lsp_to_240** is active.

Verifying the RSVP-Enabled Interfaces

Purpose

Verify the status of Resource Reservation Protocol (RSVP)-enabled interfaces and packet statistics.

Action

```
user@switch> show rsvp interfaces
```

```
RSVP interface: 1 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
ge-0/0/20.0	Up	2	100%	1000Mbps	1000Mbps	0bps	0bps

Meaning

This output verifies that RSVP is enabled and operational on interface **ge-0/0/20.0**.

Verifying a Secondary Path

Purpose

Verify that a secondary path is established.

Action

Deactivate a switch that is critical to the primary path and then issue the following command:

```
user@switch> show mpls lsp extensive
```

```
Ingress LSP: 1 sessions
```

```
127.0.0.8
  From: 127.0.0.1, State: Up, ActiveRoute: 0, LSPname: lsp_to_240
  ActivePath: secondary_path_lsp_to_240 (secondary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary   primary_path_lsp_to_240 State: Dn
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Exclude: red
    Will be enqueued for recomputation in 8 second(s).
  51 Mar  8 12:23:31.268 CSPF failed: no route toward 127.0.0.11[11420 times]
  50 Mar  4 15:35:25.610 Clear Call: CSPF computation failed
  49 Mar  4 15:35:25.610 CSPF: link down/deleted:
```

```

127.0.0.2(127.0.0.1:0)(127.0.0.1)->
0.0.0.0(127.0.0.20:0)(127.0.0.20)
  48 Mar  4 15:35:25.576 Deselected as active
  47 Mar  4 15:35:25.550 No Route toward dest
  46 Mar  4 15:35:25.550 ??????
  45 Mar  4 15:35:25.549 127.0.0.12: Down
  44 Mar  4 15:33:29.839 Selected as active path
  43 Mar  4 15:33:29.837 Record Route:  127.0.0.20 127.0.0.40
  42 Mar  4 15:33:29.835 Up
  41 Mar  4 15:33:29.756 Originate Call
  40 Mar  4 15:33:29.756 CSPF: computation result accepted  127.0.0.20 127.0.0.40

  39 Mar  4 15:33:00.395 CSPF failed: no route toward 127.0.0.11[7 times]
  38 Mar  4 15:30:31.412 Clear Call: CSPF computation failed
  37 Mar  4 15:30:31.412 CSPF: link down/deleted:
127.0.0.2(127.0.0.1:0)(127.0.0.1)->
0.0.0.0(127.0.0.20:0)(127.0.0.20)
  36 Mar  4 15:30:31.379 Deselected as active
  35 Mar  4 15:30:31.350 No Route toward dest
  34 Mar  4 15:30:31.350 ??????
  33 Mar  4 15:30:31.349 127.0.0.12: Down
  32 Mar  4 15:29:05.802 Selected as active path
  31 Mar  4 15:29:05.801 Record Route:  127.0.0.20 127.0.0.40
  30 Mar  4 15:29:05.801 Up
  29 Mar  4 15:29:05.686 Originate Call
  28 Mar  4 15:29:05.686 CSPF: computation result accepted  127.0.0.20 127.0.0.40

  27 Mar  4 15:28:35.852 CSPF failed: no route toward 127.0.0.11[132 times]
  26 Mar  4 14:25:12.113 Clear Call: CSPF computation failed
  25 Mar  4 14:25:12.113 CSPF: link down/deleted:
0.0.0.0(127.0.0.20:0)(127.0.0.20)->
0.0.0.0(10.10.10.10:0)(10.10.10.10)
  *Standby    secondary_path_lsp_to_240 State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 1)
[Output truncated]

```

Meaning

As indicated by the **ActivePath** in the output, the LSP **secondary_path_lsp_to_240** is active.

Release History Table

Release	Description
15.1	Starting in Junos OS Release 15.1, the enhanced point of local repair (PLR) functionality addresses a special scenario of egress node protection, where the PLR and the protector are co-located as one router. In this case, there is no need to have a bypass LSP reroute traffic during local repair.
14.2	Starting in Junos OS Release 14.2, Junos OS supports the restoration of egress traffic when there is a link or node failure in the egress PE node.
14.2	Starting in Junos OS Release 14.2, Junos OS supports the restoration of egress traffic when there is a link or node failure in the egress PE node.

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | [36](#)

Link Protection for MPLS LSPs

IN THIS SECTION

- [Link Protection](#) | [369](#)
- [Multiple Bypass LSPs for Link Protection](#) | [370](#)
- [Node Protection](#) | [371](#)
- [Fast Reroute, Node Protection, and Link Protection](#) | [372](#)
- [Configuring Link Protection on Interfaces Used by LSPs](#) | [376](#)
- [Configuring Node Protection or Link Protection for LSPs](#) | [384](#)
- [Configuring Inter-AS Node and Link Protection](#) | [385](#)

Link Protection


Link protection helps to ensure that traffic going over a specific interface to a neighboring router or switch can continue to reach this router (switch) if that interface fails. When link protection is configured for an interface and an LSP that traverses this interface, a bypass LSP is created that will handle this traffic if the

interface fails. The bypass LSP uses a different interface and path to reach the same destination. The path used can be configured explicitly, or you can rely on CSPF. The RSVP metric for the bypass LSP is set in the range of 20,000 through 29,999 (this value is not user configurable).

If a link-protected interface fails, traffic is quickly switched to the bypass LSP. Note that a bypass LSP cannot share the same egress interface with the LSPs it monitors.

In [Figure 18 on page 370](#), link protection is enabled on Interface B between Router 1 and Router 2. It is also enabled on LSP A, an LSP that traverses the link between Router 1 and Router 2. If the link between Router 1 and Router 2 fails, traffic from LSP A is quickly switched to the bypass LSP generated by link protection.

Figure 18: Link Protection Creating a Bypass LSP for the Protected Interface

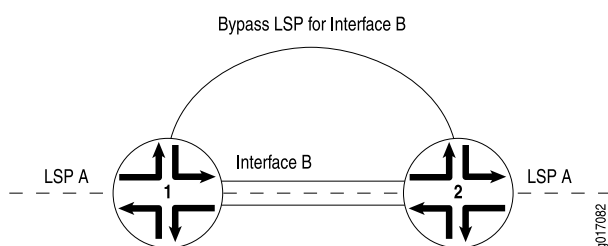

Although LSPs traversing an interface can be configured to take advantage of link protection, it is important to note that it is specifically the interface that benefits from link protection. If link protection is enabled on an interface but not on a particular LSP traversing that interface, then if the interface fails, that LSP will also fail.

NOTE: Link protection does not work on unnumbered interfaces.

To protect traffic over the entire route taken by an LSP, you should configure fast reroute. For more information, see [“Configuring Fast Reroute” on page 473](#).

Multiple Bypass LSPs for Link Protection

By default, link protection relies on a single bypass LSP to provide path protection for an interface. However, you can also specify multiple bypass LSPs to provide link protection for an interface. You can individually configure each of these bypass LSPs or create a single configuration for all of the bypass LSPs. If you do not configure the bypass LSPs individually, they all share the same path and bandwidth constraints.

The following algorithm describes how and when an additional bypass LSP is activated for an LSP:

1. If any currently active bypass can satisfy the requirements of the LSP (bandwidth, link protection, or node-link protection), the traffic is directed to that bypass.

2. If no active bypass LSP is available, scan through the manual bypass LSPs in first-in, first-out (FIFO) order, skipping those that are already active (each manual bypass can only be activated once). The first inactive manual bypass that can satisfy the requirements is activated and traffic is directed to that bypass.
3. If no manual bypass LSPs are available and if the **max-bypasses** statement activates multiple bypass LSPs for link protection, determine whether an automatically configured bypass LSP can satisfy the requirements. If an automatically configured bypass LSP is available and if the total number of active automatically configured bypass LSPs does not exceed the maximum bypass LSP limit (configured with the **max-bypasses** statement), activate another bypass LSP.

For information about how to configure multiple bypass LSPs for link protection, see [“Configuring Bypass LSPs” on page 378](#).

Node Protection


Node protection extends the capabilities of link protection. Link protection helps to ensure that traffic going over a specific interface to a neighboring router can continue to reach this router if that interface fails. Node protection ensures that traffic from an LSP traversing a neighboring router can continue to reach its destination even if the neighboring router fails.

When you enable node protection for an LSP, you must also enable link protection. Once enabled, node protection and link protection establish the following types of bypass LSPs:

- Next-hop bypass LSP—Provides an alternate route for an LSP to reach a neighboring router. This type of bypass LSP is established when you enable either node protection or link protection.
- Next-next-hop bypass LSP—Provides an alternate route for an LSP to get around a neighboring router en route to the destination router. This type of bypass LSP is established exclusively when node protection is configured. If a next-next-hop bypass LSP cannot be created, an attempt is made to signal a next-hop bypass LSP.

In [Figure 19 on page 371](#), node protection is enabled on Interface B on Router 1. Node protection is also enabled on LSP A, an LSP that traverses the link transiting Router 1, Router 2, and Router 3. If Router 2 suffers a hardware or software failure, traffic from LSP A is switched to the next-next-hop bypass LSP generated by node protection.

Figure 19: Node Protection Creating a Next-Next-Hop Bypass LSP

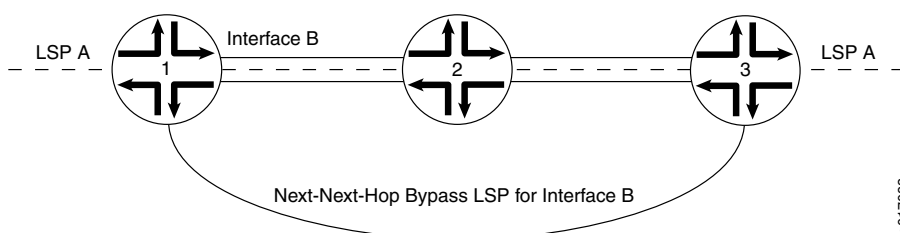

The time needed by node protection to switch traffic to a next-next-hop bypass LSP can be significantly longer than the time needed by link protection to switch traffic to a next-hop bypass LSP. Link protection relies on a hardware mechanism to detect a link failure, allowing it to quickly switch traffic to a next-hop bypass LSP.

Node failures are often due to software problems on the node router. Node protection relies on the receipt of hello messages from a neighboring router to determine whether it is still functioning. The time it takes node protection to divert traffic partly depends on how often the node router sends hello messages and how long it takes the node-protected router to react to having not received a hello message. However, once the failure is detected, traffic can be quickly diverted to the next-next-hop bypass LSP.

NOTE:

Node protection provides traffic protection in the event of an error or interruption of the physical link between two routers. It does not provide protection in the event of control plane errors. The following provides an example of a control plane error:

- A transit router changes the label of a packet due to a control plane error.
- When the ingress router receives the packet, it considers the label change to be a catastrophic event and deletes both the primary LSP and the associated bypass LSP.

Fast Reroute, Node Protection, and Link Protection

IN THIS SECTION

- [LSP Protection Overview | 372](#)
- [LSP Protection Types Comparison | 373](#)
- [One-to-One Backup Implementation | 373](#)
- [Facility Backup Implementation | 374](#)

This document discusses the following sections:

LSP Protection Overview

RSVP-TE extensions establish backup label-switched path (LSP) tunnels for local repair of LSP tunnels. These mechanisms enable immediate re-direction of traffic onto backup LSP tunnels, in the event of a failure.

RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*, describes two different types of traffic protection for RSVP-signaled LSPs:

- One-to-one backup—In this method, detour LSPs for each protected LSP is created at each potential point of local repair.
- Facility backup—In this method, a bypass tunnel is created to protect a set of LSPs that have similar backup constraints at a potential failure point, by taking advantage of the MPLS label stacking.

The one-to-one backup and the facility backup methods protect links and nodes during network failure, and can co-exist in a mixed network.

LSP Protection Types Comparison

In the Junos OS, the one-to-one backup of traffic protection is provided by fast reroute. Each LSP requires a protecting LSP to be signaled at each hop except the egress router. This method of LSP protection cannot be shared.

In the facility backup method, the LSP traffic protection is provided on the node and link. Unlike fast reroute, this protecting LSP can be shared by other LSPs.

[Table 11 on page 373](#) summarizes the traffic protection types.

Table 11: One-to-One Backup Compared with Facility Backup

Comparison	One-to-One Backup	Facility Backup
Name of the protecting LSP	Detour LSP	Bypass LSP
Sharing of the protecting LSP	Cannot be shared	Can be shared by multiple LSPs
Junos configuration statements	fast-reroute	node-link-protection and link-protection

One-to-One Backup Implementation

In the one-to-one backup method, the points of local repair maintain separate backup paths for each LSP passing through a facility. The backup path terminates by merging back with the primary path at a node called the merge point. In this approach, the merge point can be any node downstream from the protected facility.

In the one-to-one backup method, an LSP is established that intersects the original LSP downstream of the point of link or node failure. A separate backup LSP is established for each LSP that is backed up.


One-to-one backup is appropriate under the following circumstances:

- Protection of a small number of LSPs relative to the total number of LSPs.
- Path selection criteria, such as bandwidth, priority, and link coloring for detour paths is critical.

- Control of individual LSPs is important.

In [Figure 20 on page 374](#), Routers R1 and R5 are the ingress and egress routers, respectively. A protected LSP is established between the two routers transiting Routers R2, R3, and R4. Router R2 provides user traffic protection by creating a partial backup LSP that merges with the protected LSP at Router R4. This partial one-to-one backup LSP is called a detour. Detours are always calculated to avoid the immediate downstream link and node, providing against both link and node failure.

Figure 20: One-to-One Backup

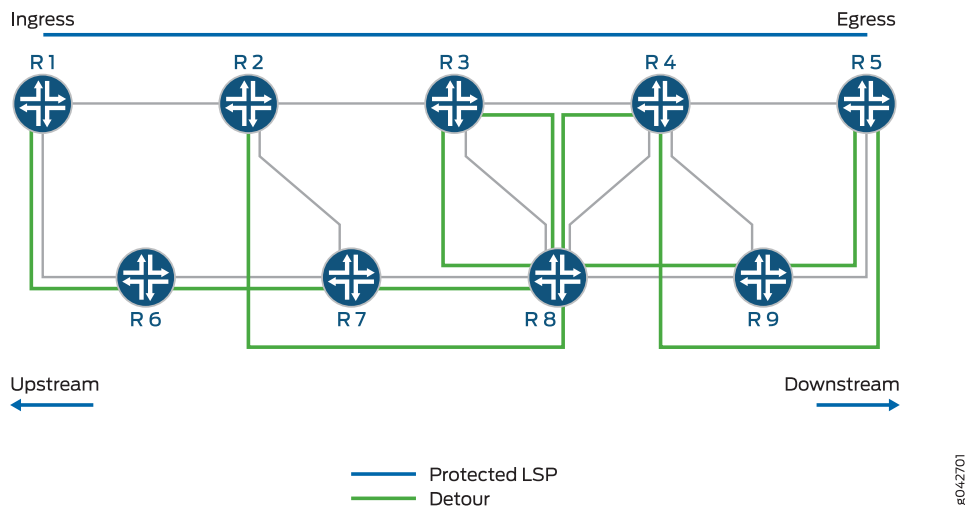

In the example, the protected LSP is **R1-R2-R3-R4-R5**, and the following detours are established:

- Router R1—**R1-R6-R7-R8-R3**
- Router R2—**R2-R7-R8-R4**
- Router R3—**R3-R8-R9-R5**
- Router R4—**R4-R9-R5**

To protect an LSP that traverses **N** nodes fully, there can be as many as **(N - 1)** detours. The point of local repair sends periodic refresh messages to maintain each backup path, as a result maintaining state information for backup paths protecting individual LSPs is a significant resource burden for the point of local repair. To minimize the number of LSPs in the network, it is desirable to merge a detour back to its protected LSP, when feasible. When a detour LSP intersects its protected LSP at an LSR with the same outgoing interface, it is merged.

Facility Backup Implementation

In the facility backup approach, a point of local repair maintains a single backup path to protect a set of primary LSPs traversing the point of local repair, the facility, and the merge point. The facility backup is based on interface rather than on LSP. While fast reroute protects interfaces or nodes along the entire

path of a LSP, the facility backup protection can be applied on interfaces as needed. As a result, fewer states need to be maintained and refreshed which results in a scalable solution. The facility backup method is also called many-to-one backup.

The facility backup method takes advantage of the MPLS label stack. Instead of creating a separate LSP for every backed-up LSP, a single LSP is created that serves to back up a set of LSPs. Such an LSP tunnel is called a bypass tunnel. In this method, a router immediately upstream from a link failure uses an alternate interface to forward traffic to its downstream neighbor, and the merge point should be the node immediately downstream to the facility. This is accomplished by preestablishing a bypass path that is shared by all protected LSPs traversing the failed link. A single bypass path can safeguard a set of protected LSPs. When an outage occurs, the router immediately upstream from the link outage switches protected traffic to the bypass link, then signals the link failure to the ingress router.


The bypass tunnel must intersect the path of the original LSP(s) somewhere downstream of the point of local repair. This constrains the set of LSPs being backed up through that bypass tunnel to those that pass through some common downstream nodes. All LSPs that pass through the point of local repair and through this common node, and that do not also use the facilities involved in the bypass tunnel are candidates for this set of LSPs.

The facility backup method is appropriate in the following situations:

- The number of LSPs to be protected is large.
- Satisfying path selection criteria (priority, bandwidth, and link coloring) for bypass paths is less critical.
- Control at the granularity of individual LSPs is not required.

In [Figure 21 on page 376](#), Routers R1 and R5 are the ingress and egress routers, respectively. Router R2 has established a bypass tunnel that protects against the failure of Router R2-R3 link and Router R3 node. A bypass tunnel is established between Routers R6 and R7. There are three different protected LSPs that are using the same bypass tunnel for protection.

Figure 21: Facility Backup

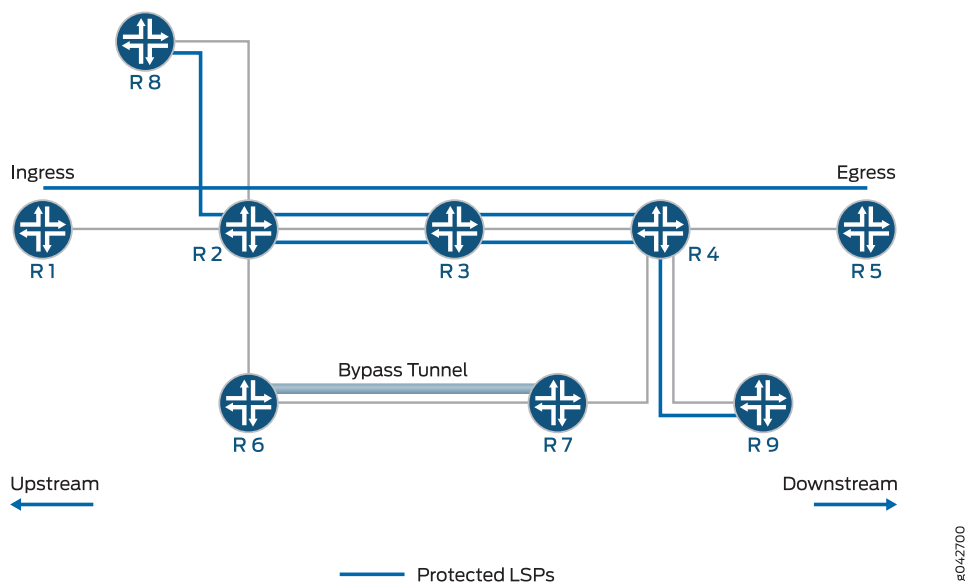

The facility backup method provides a scalability improvement, wherein the same bypass tunnel is also used to protect LSPs from any of Routers R1, R2, or R8 to any of Routers R4, R5, or R9.

Configuring Link Protection on Interfaces Used by LSPs

IN THIS SECTION

- [Configuring Bypass LSPs | 378](#)
- [Configuring Administrative Groups for Bypass LSPs | 378](#)
- [Configuring the Bandwidth for Bypass LSPs | 379](#)
- [Configuring Class of Service for Bypass LSPs | 380](#)
- [Configuring the Hop Limit for Bypass LSPs | 380](#)
- [Configuring the Maximum Number of Bypass LSPs | 380](#)
- [Disabling CSPF for Bypass LSPs | 381](#)
- [Disabling Node Protection for Bypass LSPs | 381](#)
- [Configuring the Optimization Interval for Bypass LSPs | 382](#)
- [Configuring an Explicit Path for Bypass LSPs | 382](#)
- [Configuring the Amount of Bandwidth Subscribed for Bypass LSPs | 383](#)
- [Configuring Priority and Preemption for Bypass LSPs | 383](#)

When you configure node protection or link protection on a router for LSPs as described in [“Configuring Node Protection or Link Protection for LSPs”](#) on page 384, you also must configure the **link-protection** statement on the RSVP interfaces used by the LSPs.

To configure link protection on the interfaces used by the LSPs, include the **link-protection** statement:

```
link-protection {
  disable;
  admin-group
    exclude group-names;
    include-all group-names;
    include-any group-names;
  }
  bandwidth bps;
  bypass bypass-name {
    bandwidth bps;
    description text;
    hop-limit number;
    no-cspf;
    path address <strict | loose>;
    priority setup-priority reservation-priority;
    to address;
  }
  class-of-service cos-value;
  hop-limit number;
  max-bypasses number;
  no-cspf;
  no-node-protection;
  optimize-timer seconds;
  path address <strict | loose>;
  priority setup-priority reservation-priority;
  subscription percent {
    ct0 percent;
    ct1 percent;
    ct2 percent;
    ct3 percent;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

All the statements under **link-protection** are optional.

The following sections describe how to configure link protection:

Configuring Bypass LSPs

You can configure specific bandwidth and path constraints for a bypass LSP. Each manual bypass LSP on a router should have a unique “to” IP address. You can also individually configure each bypass LSP generated when you enable multiple bypass LSPs. If you do not configure the bypass LSPs individually, they all share the same path and bandwidth constraints (if any).

If you specify the **bandwidth**, **hop-limit**, and **path** statements for the bypass LSP, these values take precedence over the values configured at the [edit protocols rsvp interface *interface-name* link-protection] hierarchy level. The other attributes (**subscription**, **no-node-protection**, and **optimize-timer**) are inherited from the general constraints.

To configure a bypass LSP, specify a name for the bypass LSP using the **bypass** statement. The name can be up to 64 characters in length.

```
bypass bypass-name {
  bandwidth bps;
  description text;
  class-of-service cos-value;
  hop-limit number;
  no-cspf;
  path address <strict | loose>;
  priority setup-priority reservation-priority;
  to address;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

Configuring the Next-Hop or Next-Next-Hop Node Address for Bypass LSPs

If you configure a bypass LSP, you must also configure the **to** statement. The **to** statement specifies the address for the interface of the immediate next-hop node (for link protection) or the next-next-hop node (for node-link protection). The address specified determines whether this is a link protection bypass or a node-link protection bypass. On multiaccess networks (for example, a LAN), this address is also used to specify which next-hop node is being protected.

Configuring Administrative Groups for Bypass LSPs

Administrative groups, also known as link coloring or resource class, are manually assigned attributes that describe the “color” of links, such that links with the same color conceptually belong to the same class. You can use administrative groups to implement a variety of policy-based LSP setups. You can configure

administrative groups for bypass LSPs. For more information about configuring administrative groups, see [“Configuring Administrative Groups for LSPs” on page 502](#).

To configure administrative groups for bypass LSPs, include the **admin-group** statement:

```
admin-group {
    exclude group-names;
    include-all group-names;
    include-any group-names;
}
```

To configure an administrative group for all of the bypass LSPs, include the **admin-group** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

To configure an administrative groups for a specific bypass LSP, include the **admin-group** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

Configuring the Bandwidth for Bypass LSPs

You can specify the amount of bandwidth allocated for automatically generated bypass LSPs or you can individually specify the amount of bandwidth allocated for each LSP.

If you have enabled multiple bypass LSPs, this statement is required.

To specify the bandwidth allocation, include the **bandwidth** statement:

```
bandwidth bps;
```

For automatically generated bypass LSPs, include the **bandwidth** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

For individually configured bypass LSPs, include the **bandwidth** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

Configuring Class of Service for Bypass LSPs

You can specify the class-of-service value for bypass LSPs by including the **class-of-service** statement:

```
class-of-service cos-value;
```

To apply a class-of-service value to all the automatically generated bypass LSPs, include the **class-of-service** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

To configure a class-of-service value for a specific bypass LSPs, include the **class-of-service** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

Configuring the Hop Limit for Bypass LSPs

You can specify the maximum number of hops a bypass can traverse. By default, each bypass can traverse a maximum of 255 hops (the ingress and egress routers count as one hop each, so the minimum hop limit is two).

To configure the hop limit for bypass LSPs, include the **hop-limit** statement:

```
hop-limit number;
```

For automatically generated bypass LSPs, include the **hop-limit** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

For individually configured bypass LSPs, include the **hop-limit** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

Configuring the Maximum Number of Bypass LSPs

You can specify the maximum number of dynamic bypass LSPs permitted for protecting an interface using the **max-bypasses** statement at the [edit protocols rsvp **interface** *interface-name* link-protection] hierarchy level. When this statement is configured, multiple bypasses for link protection are enabled. Call admission control (CAC) is also enabled.

By default, this option is disabled and only one bypass is enabled for each interface. You can configure a value of between **0** through **99** for the **max-bypasses** statement. Configuring a value of **0** prevents the creation of any dynamic bypass LSPs for the interface. If you configure a value of **0** for the **max-bypasses** statement, you need to configure one or more static bypass LSPs to enable link protection on the interface.

If you configure the **max-bypasses** statement, you must also configure the **bandwidth** statement (discussed in [“Configuring the Bandwidth for Bypass LSPs” on page 379](#)).

To configure the maximum number of bypass LSPs for a protected interface, include the **max-bypasses** statement:

```
max-bypasses number;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

Disabling CSPF for Bypass LSPs

Under certain circumstances, you might need to disable CSPF computation for bypass LSPs and use the configured Explicit Route Object (ERO) if available. For example, a bypass LSP might need to traverse multiple OSPF areas or IS-IS levels, preventing the CSPF computation from working. To ensure that link and node protection function properly in this case, you have to disable CSPF computation for the bypass LSP.

You can disable CSPF computation for all bypass LSPs or for specific bypass LSPs.

To disable CSPF computation for bypass LSPs, include the **no-cspf** statement:

```
no-cspf;
```

For a list of hierarchy levels where you can include this statement, see the statement summary for this statement.

Disabling Node Protection for Bypass LSPs

You can disable node protection on the RSVP interface. Link protection remains active. When this option is configured, the router can only initiate a next-hop bypass, not a next-next-hop bypass.

To disable node protection for bypass LSPs, include the **no-node-protection** statement:

```
no-node-protection;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]

- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

Configuring the Optimization Interval for Bypass LSPs

You can configure an optimization interval for bypass LSPs using the **optimize-timer** statement. At the end of this interval, an optimization process is initiated that attempts to either minimize the number of bypasses currently in use, minimize the total amount of bandwidth reserved for all of the bypasses, or both. You can configure an optimization interval from 1 through 65,535 seconds. A default value of 0 disables bypass LSP optimization.

When you configure the **optimize-timer** statement, bypass LSPs are reoptimized automatically when you configure or change the configuration of any of the following:

- Administrative group for a bypass LSP—The configuration for an administrative group has been changed on a link along the path used by the bypass LSP. Configure an administrative group using the **admin-group** statement at the [edit protocols rsvp **interface** *interface-name* link-protection] hierarchy level.
- Fate sharing group—The configuration for a fate sharing group has been changed. Configure a fate sharing group using the **group** statement at the [edit routing-options fate-sharing] hierarchy level.
- IS-IS overload—The configuration for IS-IS overload has been changed on a router along the path used by the bypass LSP. Configure IS-IS overload using the **overload** statement at the [edit protocols isis] hierarchy level.
- IGP metric—The IGP metric has been changed on a link along the path used by the bypass LSP.

To configure the optimization interval for bypass LSPs, include the **optimize-timer** statement:

```
optimize-timer seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

Configuring an Explicit Path for Bypass LSPs

By default, when you establish a bypass LSP to an adjacent neighbor, CSPF is used to discover the least-cost path. The **path** statement allows you to configure an explicit path (a sequence of strict or loose routes), giving you control over where and how the bypass LSP is established. To configure an explicit path, include the **path** statement:

```
path address <strict | loose>;
```

For automatically generated bypass LSPs, include the **path** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]

- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

For individually configured bypass LSPs, include the **path** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

Configuring the Amount of Bandwidth Subscribed for Bypass LSPs

You can configure the amount of bandwidth subscribed to bypass LSPs. You can configure the bandwidth subscription for the whole bypass LSP or for each class type that might traverse the bypass LSP. You can configure any value between 1 percent and 65,535 percent. By configuring a value less than 100 percent, you are undersubscribing the bypass LSPs. By configuring a value greater than 100 percent, you are oversubscribing the bypass LSPs.

The ability to oversubscribe the bandwidth for the bypass LSPs makes it possible to more efficiently use network resources. You can configure the bandwidth for the bypass LSPs based on the average network load as opposed to the peak load.

To configure the amount of bandwidth subscribed for bypass LSPs, include the **subscription** statement:

```
subscription percentage {
  ct0 percentage;
  ct1 percentage;
  ct2 percentage;
  ct3 percentage;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

Configuring Priority and Preemption for Bypass LSPs

When there is insufficient bandwidth to establish a more important LSP, you might want to tear down a less important existing LSP to release the bandwidth. You do this by preempting the existing LSP.

For more detailed information on configuring setup priority and reservation priority for LSPs, see [“Configuring Priority and Preemption for LSPs” on page 501](#).

To configure the bypass LSP’s priority and preemption properties, include the **priority** statement:

```
priority setup-priority reservation-priority;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Configuring Node Protection or Link Protection for LSPs

When you configure node protection or link protection on a router or switch, bypass LSPs are created to the next-hop or next-next-hop routers (switches) for the LSPs traversing the router (switch). You must configure node protection or link protection for each LSP that you want protected. To extend protection along the entire path used by an LSP, you must configure protection on each router that the LSP traverses.

You can configure node protection or link protection for both static and dynamic LSPs.

To configure node protection on a router for a specified LSP, include the **node-link-protection** statement:

```
node-link-protection;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

To configure link protection on a router for a specified LSP, include the **link-protection** statement:

```
link-protection;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

NOTE: To complete the configuration of node or link protection, you must also configure link protection on all unidirectional RSVP interfaces that the LSPs traverse, as described in [“Configuring Link Protection on Interfaces Used by LSPs”](#) on page 376.

Configuring Inter-AS Node and Link Protection

To interoperate with other vendors' equipment, the Junos OS supports the record route object (RRO) node ID subobject for use in inter-AS link and node protection configurations. The RRO node ID subobject is defined in RFC 4561, *Definition of a Record Route Object (RRO) Node-Id Sub-Object*. This functionality is enabled by default in Junos OS Release 9.4 and later.

If you have Juniper Networks routers running Junos OS Release 9.4 and later releases in the same MPLS-TE network as routers running Junos OS Release 8.4 and earlier releases, you might need to disable the RRO node ID subobject by configuring the **no-node-id-subobject** statement:

```
no-node-id-subobject;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | 36

Measuring MPLS Traffic

IN THIS CHAPTER

- [Gather Statistics on MPLS Sessions | 386](#)

Gather Statistics on MPLS Sessions

IN THIS SECTION

- [Configuring MPLS to Gather Statistics | 386](#)
- [On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview | 387](#)
- [Example: Configuring On-Demand Loss and Delay Measurement | 394](#)
- [Example: Configuring Pro-active Loss and Delay Measurements for Bidirectional MPLS LSPs | 406](#)
- [Configuring On-Demand Loss and Delay Measurement | 415](#)
- [Configuring Pro-Active Loss and Delay Measurements | 416](#)

Configuring MPLS to Gather Statistics

You can configure MPLS so that it periodically gathers traffic statistics about all MPLS sessions, including transit sessions, by configuring the **statistics** statement. You must configure the **statistics** statement if you want to collect MPLS traffic statistics using SNMP polling of MPLS Management Information Bases (MIBs).

To enable or disable MPLS statistics collection, include the **statistics** statement:

```
statistics {  
  auto-bandwidth (MPLS Statistics);  
  file filename <files number> <size size> <world-readable | no-world-readable>;  
  interval seconds;  
  no-transit-statistics;
```

```
transit-statistics-polling;
}
```

You can configure these statements at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

The default interval is 300 seconds.

If you configure the **file** option, the statistics are placed in a file, with one entry per LSP. During the specified interval, the following information is recorded in this file:

- The number of packets, number of bytes, packets per second, and bytes per second transmitted by each LSP. Feature parity for the display of packet and byte statistics for sub-LSPs of a point-to-multipoint LSP on the Junos Trio chipset is supported in Junos OS Releases 11.1R2, 11.2R2, and 11.4.
- The percent of bandwidth transmitted over a given LSP in relation to the bandwidth percentage configured for that LSP. If no bandwidth is configured for an LSP, 0 percent is recorded in the percentage column.

At the end of each periodic report, a summary shows the current time, total number of sessions, number of sessions read, number of sessions ignored, and read errors, if any. Ignored sessions are typically those not in the up state or those with a reserved (0 through 15) incoming label (typically the egress point of an LSP). The reason for a read error appears on the same line as the entry for the LSP on which the error occurred. Gathering statistics is an unreliable process; occasional read errors might affect their accuracy. Sample output follows:

lsp6	0 pkt	0 Byte	0 pps	0 Bps	0
lsp5	0 pkt	0 Byte	0 pps	0 Bps	0
lsp6.1	34845 pkt	2926980 Byte	1049 pps	88179 Bps	132
lsp5.1	0 pkt	0 Byte	0 pps	0 Bps	0
lsp4	0 pkt	0 Byte	0 pps	0 Bps	0
Dec 7 17:28:38 Total 6 sessions: 5 success, 0 fail, 1 ignored					

On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview

IN THIS SECTION

- Importance of Measuring Packet Loss and Delay | 388
- Defining Packet Loss, Delay, and Throughput | 388
- Packet Loss and Delay Measurement Mechanisms | 389

- [Packet Loss and Delay Metrics | 389](#)
- [Packet Loss and Delay Measurement Concepts | 390](#)
- [Packet Loss and Delay Measurement Functionality | 392](#)
- [Packet Loss and Delay Features | 393](#)

This topic describes methods for measuring packet loss, delay, and throughput for point-to-point ultimate hop popping (UHP) label-switched paths (LSPs) in MPLS networks to enable monitoring of network performance.

Importance of Measuring Packet Loss and Delay

The rise of bandwidth-consuming applications, such as IPTV and mobile video, coupled with the pressure to minimize the cost per bit and maximize the value per bit, is forcing carriers to transition their transport networks from circuit-based technologies to packet-based technologies. MPLS is a widely successful, connection-oriented packet transport technology that is ideally suited for packet-based transport networks.

With the emergence of new applications on data networks, it is becoming increasingly important for service providers to accurately predict the impact of new application rollouts. Understanding and modelling network performance in the network is especially relevant for deployment of new-world applications to ensure successful implementations. In packet networks, packet loss and delay are two of the most fundamental measures of performance. Their role is even more central when it comes to end-to-end measurements.

The traffic belonging to most of the end-to-end user applications is either loss sensitive (file transfer), delay sensitive (voice or video applications), or both (interactive computing applications). The service-level agreements (SLAs) of service providers depend on the ability to measure and monitor these network performance metrics, as the SLAs are directly or indirectly dependent on the loss and delay the customer traffic experiences in the service provider network.

To ensure compliance to the SLA, service providers need tools to measure and monitor the performance metrics for packet loss, one-way delay and two-way delay, and related metrics, such as delay variation and channel throughput. This measurement capability provides service providers with greater visibility into the performance characteristics of their networks, thereby facilitating planning, troubleshooting, and network performance evaluation.

Defining Packet Loss, Delay, and Throughput

In packet networks, packet loss and delay are two of the most fundamental measures of performance.

- **Loss**—Packet loss is the failure of one or more transmitted packets to arrive at their destination. Packet loss refers to the packets of data that are dropped by the network to manage congestion.

Data applications are very tolerant to packet loss, as they are generally not time sensitive and can retransmit the packets that were dropped. However, in video conference environments and pure audio communications, such as VoIP, packet loss can create jitter.

- **Delay**—Packet delay (also called latency) is the amount of time it takes for a packet of data to get from one designated point to another, depending on the speed of the transmission medium, such as copper wire, optical fiber, or radio waves, and the delays in transmission by devices along the way, such as routers and modems.

A low latency indicates a high network efficiency.

- **Throughput**—Packet delay measures the amount of time between the start of an action and its completion, whereas throughput is the total number of such actions that occur in a given amount of time.

Packet Loss and Delay Measurement Mechanisms

Packet delay and loss are two fundamental measures of network performance. Junos OS provides an on-demand mechanism to measure packet loss and delay over associated bidirectional MPLS ultimate hop popping (UHP) label-switched paths (LSPs).

The on-demand delay and packet loss measurement mechanism is initiated using the following CLI commands:

- **monitor mpls loss rsvp**—Performs an on-demand loss measurement for associated bidirectional UHP LSPs.
- **monitor mpls delay rsvp**—Performs an on-demand delay measurement for associated bidirectional UHP LSPs.
- **monitor mpls loss-delay rsvp**—Performs an on-demand combined loss and delay measurement for associated bidirectional UHP LSPs.

For initiating the delay and packet loss measuring mechanism, the desired parameters for measurement, such as the type of measurement and LSP name, need to be entered. On receiving the parameters, a summary of the performance monitoring data is displayed and the mechanism is terminated.

Packet Loss and Delay Metrics

The following performance metrics are measured using the on-demand packet loss and delay mechanisms:

- Loss measurement (packet and octet)
- Throughput measurement (packet and octet)
- Two-way channel delay
- Round-trip delay
- Inter-packet delay variation (IPDV)

The **monitor mpls loss rsvp** command performs the loss and throughput measurement, and the **monitor mpls delay rsvp** command performs the two-way channel delay, round-trip delay, and IPDV measurements.

The **monitor mpls loss-delay rsvp** command performs a combined loss and delay measurement and measures all of the above-mentioned performance metrics simultaneously.

Packet Loss and Delay Measurement Concepts

The following concepts help to better understand the functionality of packet loss and delay:

- **Querier**—A querier is the ingress provider edge (PE) router, which originates the query message for loss or delay measurement.
- **Responder**—A responder is the egress PE router, which receives and responds to the query messages from a querier.
- **Associated bidirectional LSP**—An associated bidirectional LSP consists of two unidirectional LSPs that are tied together (or associated with each other) through configuration on both of the LSP end points.

The on-demand loss and delay measurement can be carried out only on associated bidirectional UHP LSPs.

- **Generic associated channel (G-Ach)**—The performance monitoring messages for the on-demand loss and delay measurement flow over the MPLS G-Ach. This type of channel supports only in-band responses, and does not provide support for out-of-band or no-response modes.
- **Measurement point (MP)**—MP is the location at which a condition is described for the measurement.

The MP for packet loss on the transmit side is between the switching fabric and the transmit interface. The counter value is stamped in the loss measurement message in the hardware before it is queued for transmission.

The MP for packet loss on the receive side is between the receive interface and the switching fabric. The MP is distributed on the receive side. Furthermore, when the transmit interface is an aggregate interface, the MP is distributed as well.

- **Query rate**—Query rate is the interval between two queries sent for loss and delay measurement.

Because the loss and delay measurement messages originate from the Routing Engine, a high query rate for multiple channels puts a heavy burden on the Routing Engine. The minimum query interval supported is 1 second.

The query rate should be high for 32-bit counters, because the counters might wrap quickly when data traffic rate is very high. The query rate can be low when 64-bit counters are in use at all the four measurement point locations involved in loss measurement. Junos OS supports only 64-bit counters.

- **Traffic class**—By default, loss measurement is supported for the whole channel. Junos OS also supports traffic class scoped packet loss measurement, where counters that maintain data traffic statistics per traffic class have to be created.

Per traffic class counters are not created by default. To configure traffic class scoped loss measurement, include the **traffic-class-statistics** statement at the **[edit protocols mpls statistics]** hierarchy level.

When **traffic-class-statistics** is configured, control packets flowing over the G-Ach are not counted in the transmit and receive counters.

NOTE: Enabling and disabling of traffic class statistics results in the resetting of all counters (aggregate counter and per-class counters) for the LSPs.

- **Loss measurement mode**—Junos OS supports the direct-mode of on-demand loss measurement, and does not provide support for the inferred-mode.

Direct loss measurement requires data traffic statistics to be maintained at the ingress and egress of two unidirectional LSPs of the associated bidirectional LSP. When an MX Series router is using only MPCs and MICs, counters to maintain data traffic statistics are created by default at the ingress of all types of LSPs and egress of UHP LSPs.

However, the direct-mode of loss measurement is not fully accurate due to the following reasons:

- Parallel forwarding nature of the hardware.
- Presence of equal cost multipath (ECMP) in the network, such as aggregated Ethernet interfaces, which can result in re-ordering of data packets relative to the loss measurement messages.
- Control packets that do not flow over G-Ach are not counted at the LSP ingress, but are counted at the LSP egress.
- Data traffic re-ordering relative to the loss measurement message when a Diffserv is implemented in the MPLS network and loss measurement scope is the complete channel and not traffic class scoped.

To overcome this limitation, perform traffic class scoped loss measurement when a Diffserv is implemented.

NOTE: Direct mode loss measurement is vulnerable to disruption when the ingress or egress interface associated with the LSP changes.

- **Loss measurement synchronization**—The synchronization conditions specified in section 2.9.8 of RFC 6374 do not hold true in the absolute sense. However, as the loss measurement counters are stamped in hardware, the errors introduced due to not satisfying the synchronization conditions are relatively small. These errors need to be quantified.

When the transmit or receive interface of the LSP is an aggregate interface, more errors are introduced as compared to when the interfaces are non-aggregate interfaces. In any case, the loss measurement counters are stamped in hardware, and the error needs to be quantified.

- **Delay measurement accuracy**—When the transmit and receive interfaces reside on different Packet Forwarding Engines, the clock must be synchronized on these Packet Forwarding Engines for two-way delay measurements. This condition holds true for the platform on which the on-demand delay measurement feature is implemented.

When there are aggregate interfaces or ECMP, the delay is measured for only one of the potential paths.

When a combined loss and delay message is used for delay calculation, the accuracy of delay is lower compared to when the delay measurement message is used in some cases, such as when the transmit or receive interface is an aggregate interface.


Delay measurement is always performed on a per-traffic-class basis, and the accuracy of the measurement needs to be quantified after testing.

- **Timestamp format**—Junos OS supports only the IEEE 1588 Precision Time Protocol (PTP) [IEEE1588] format for recording delay measurement messages. Network Time Format (NTP) is not supported.
- **Operations, administration, and maintenance (OAM)**—To indicate that all the OAM messages for MPLS LSPs flow over the MPLS G-Ach, and to enable the MPLS performance monitoring messages to be carried over the MPLS G-Ach, the `oam mpls-tp-mode` statement must be included at the `[edit protocols mpls label-switched-path lsp-name]` hierarchy level.

Packet Loss and Delay Measurement Functionality

Figure 22 on page 392 illustrates the basic methods used for the bidirectional measurement of packet loss and delay. A bidirectional channel exists between the two routers, Router A and Router B. The temporal reference points – T1, T2, T3, and T4 – are associated with a measurement operation that takes place at Router A. The operation consists of Router A sending a query message to Router B, and Router B sending back a response. Each reference point indicates the point of time at which either the query or the response message is transmitted or received over the channel.

Figure 22: Basic Bidirectional Measurement

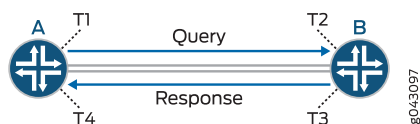

In Figure 22 on page 392, Router A can arrange to measure the packet loss over the channel in the forward and reverse directions by sending loss measurement query messages to Router B. Each of the forward and reverse messages contain the count of packets transmitted prior to time T1 over the channel to Router B (A_TxP).

When the message reaches Router B, two values are appended to the message and the message is reflected back to Router A. The two values are the count of packets received prior to time T2 over the channel from Router A (B_RxP) and the count of packets transmitted prior to time T3 over the channel to Router A (B_TxP).

When the response reaches Router A, a fourth value is appended to the message – the count of packets received prior to time T4 over the channel from Router B (A_RxP).

These four counter values – (A_TxP), (B_RxP), (B_TxP), and (A_RxP) – enable Router A to compute the desired loss statistics. Because the transmit count at Router A and the receive count at Router B (and vice

versa) might not be synchronized at the time of the first message, and to limit the effects of counter wrap, the loss is computed in the form of a delta between the messages.

The transmit loss ($A_TxLoss[n-1,n]$) and receive loss ($A_RxLoss[n-1,n]$) within the measurement interval marked by the messages $LM[n-1]$ and $LM[n]$ are computed by Router A as follows:

$$A_TxLoss[n-1,n] = (A_TxP[n] - A_TxP[n-1]) - (B_RxP[n] - B_RxP[n-1])$$

$$A_RxLoss[n-1,n] = (B_TxP[n] - B_TxP[n-1]) - (A_RxP[n] - A_RxP[n-1])$$

The arithmetic is modulo the counter size.

To measure at Router A the delay over the channel to Router B, a delay measurement query message is sent from Router A to Router B containing a timestamp recording the instant at which it is transmitted. In [Figure 22 on page 392](#), the timestamp is recorded in T1.

When the message reaches Router B, a timestamp is added, recording the instant at which it is received (T2). The message can now be reflected from Router B to Router A, with Router B adding its transmit timestamp (T3) and Router A adding its receive timestamp (T4).

These four timestamps – T1, T2, T3, and T4 – enable Router A to compute the one-way delay in each direction, as well as the two-way delay for the channel. The one-way delay computations require that the clocks of Routers A and B be synchronized.

At this point, Router A can compute the two-way channel delay and round-trip delay associated with the channel as follows:

$$\text{Two-way channel delay} = (T4 - T1) - (T3 - T2)$$

$$\text{Round-trip delay} = T4 - T1$$

Packet Loss and Delay Features

Supported Features of Packet Loss and Delay

Junos OS supports the following features with on-demand loss and delay measurement:

- Performance monitoring for associated bidirectional MPLS point-to-point UHP LSPs only
- Loss measurement
- Throughput measurement
- Two-way delay measurement (channel delay and round-trip delay)
- Inter-packet delay variation (IPDV)
- Direct-mode loss measurement
- Aggregated Ethernet and aggregated SONET interfaces
- Multichassis support
- 64-bit compatible

Unsupported Features of Packet Loss and Delay

Junos OS does not support the following on-demand loss and delay measurement functionality:

- Loss and delay measurement for pseudowires (section 2.9.1 of RFC 6374)
- Unidirectional measurement (section 2.6 of RFC 6374)
- Dyadic measurement (section 2.7 of RFC 6374)
- Loss and delay measurement in loopback mode (section 2.8 of RFC 6374)
- Loss and delay measurement to an intermediate node from an LSP endpoint (section 2.9.5 of RFC 6374)
- External post-processing (section 2.9.7 of RFC 6374)
- Inferred-mode loss measurement (section 2.9.8 of RFC 6374)
- Pro-active mode
- Logical systems
- SNMP

Example: Configuring On-Demand Loss and Delay Measurement

IN THIS SECTION

- [Requirements | 394](#)
- [Overview | 395](#)
- [Configuration | 395](#)
- [Verification | 400](#)

This example shows how to enable on-demand loss and delay measurement for point-to-point ultimate hop popping (UHP) label-switched paths (LSPs) in MPLS networks to monitor network performance.

Requirements

This example uses the following hardware and software components:

- Two MX Series 5G Universal Routing Platforms that contain MPC/MICs only
- Junos OS Release 14.2 or later running on all the routers

Before you begin:

1. Configure the device interfaces.

2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
 - RSVP
 - MPLS
 - OSPF

Overview

Starting with Junos OS Release 14.2, an on-demand tool to monitor and measure packet loss, packet delay, or both for associated bidirectional MPLS ultimate hop popping (UHP) point-to-point label-switched paths (LSPs) is introduced. The tool can be enabled using the following CLI commands – **monitor mpls loss rsvp**, **monitor mpls delay rsvp**, and **monitor mpls loss-delay rsvp**.


These commands provide an on-demand summary of performance metrics for direct mode packet loss, two-way packet delay, and related metrics, such as inter-packet delay variation and channel throughput measurement.

This functionality provides real-time visibility into network performance, thereby facilitating network performance planning, troubleshooting, and evaluation.

Topology

Figure 23 on page 395 illustrates the on-demand loss and delay measurement using a simple two-router topology.

Figure 23: Configuring On-Demand Loss and Delay Measurement

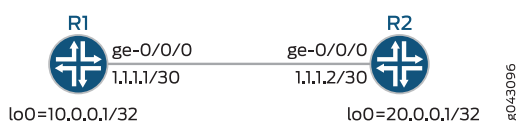

In this example, an associated bidirectional LSP is configured between Routers R1 and R2, for which the performance metrics is measured.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

R1

```

set chassis fpc 0 pic 3 tunnel-services bandwidth 1g
set chassis network-services enhanced-ip
set interfaces ge-0/0/0 unit 0 family inet address 1.1.1.1/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.0.0.1/32
set interfaces lo0 unit 0 family mpls
set routing-options router-id 10.0.0.1
set protocols rsvp interface ge-0/0/0.0
set protocols rsvp interface lo0.0
set protocols rsvp interface fxp0.0 disable
set protocols mpls statistics traffic-class-statistics
set protocols mpls label-switched-path R1-R2 to 20.0.0.1
set protocols mpls label-switched-path R1-R2 oam mpls-tp-mode
set protocols mpls label-switched-path R1-R2 ultimate-hop-popping
set protocols mpls label-switched-path R1-R2 associate-lsp R2-R1
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface lo0.0
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

R2

```

set chassis fpc 0 pic 3 tunnel-services bandwidth 1g
set chassis network-services enhanced-ip
set interfaces ge-0/0/0 unit 0 family inet address 1.1.1.2/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 20.0.0.1/32
set interfaces lo0 unit 0 family mpls
set routing-options router-id 20.0.0.1
set protocols rsvp interface ge-0/0/0.0
set protocols rsvp interface lo0.0
set protocols rsvp interface fxp0.0 disable
set protocols mpls statistics traffic-class-statistics
set protocols mpls label-switched-path R2-R1 to 10.0.0.1
set protocols mpls label-switched-path R2-R1 oam mpls-tp-mode
set protocols mpls label-switched-path R2-R1 ultimate-hop-popping
set protocols mpls label-switched-path R2-R1 associate-lsp R1-R2

```

```

set protocols mpls interface ge-0/0/0.0
set protocols mpls interface lo0.0
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0.interface fxp0.0 disable

```

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router R1:

1. Enable the chassis with tunnel services and enhanced IP network services configuration.

```

[edit chassis]
user@R1# set fpc 0 pic 3 tunnel-services bandwidth 1g
user@R1# set network-services enhanced-ip

```

2. Configure the interfaces for Router R1.

```

[edit interfaces]
user@R1# set ge-0/0/0 unit 0 family inet address 1.1.1.1/30
user@R1# set ge-0/0/0 unit 0 family mpls
user@R1# set lo0 unit 0 family inet address 10.0.0.1/32
user@R1# set lo0 unit 0 family mpls

```

3. Configure the router ID for Router R1.

```

[edit routing-options]
user@R1# set router-id 10.0.0.1

```

4. Enable RSVP on all the interfaces of Router R1, excluding the management interface.

```

[edit protocols]
user@R1# set rsvp interface ge-0/0/0.0
user@R1# set rsvp interface lo0.0

```

```
user@R1# set rsvp interface fxp0.0 disable
```

5. Enable MPLS on all the interfaces of Router R1, excluding the management interface.

```
[edit protocols]
user@R1# set mpls interface ge-0/0/0.0
user@R1# set mpls interface lo0.0
user@R1# set mpls interface fxp0.0 disable
```

6. Configure an associated bidirectional LSP to Router R2.

```
[edit protocols]
user@R1# set mpls label-switched-path R1-R2 to 20.0.0.1
user@R1# set mpls label-switched-path R1-R2 oam mpls-tp-mode
user@R1# set mpls label-switched-path R1-R2 ultimate-hop-popping
user@R1# set mpls label-switched-path R1-R2 associate-lsp R2-R1
```

7. Create traffic classes for maintaining data traffic statistics per traffic class.

This enables traffic class scoped loss measurement.

```
[edit protocols]
user@R1# set mpls statistics traffic-class-statistics
```

8. Configure OSPF with traffic engineering capabilities, and enable OSPF on all the interfaces of Router R1, excluding the management interface.

```
[edit protocols]
user@R1# set ospf traffic-engineering
user@R1# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@R1# set ospf area 0.0.0.0 interface lo0.0
user@R1# set ospf interface fxp0.0 disable
```

Results

From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show routing-options**, and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@R1# show chassis
fpc 0 {
  pic 3 {
    tunnel-services {
      bandwidth 1g;
    }
  }
}
network-services enhanced-ip;

```

```

user@R1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 1.1.1.1/30;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.0.0.1/32;
    }
    family mpls;
  }
}

```

```

user@R1# show routing-options
router-id 10.0.0.1;

```

```

user@R1# show protocols
rsvp {
  interface ge-0/0/0.0;
  interface lo0.0;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  statistics {
    traffic-class-statistics;
  }
}

```

```
    }  
    label-switched-path R1-R2 {  
        to 20.0.0.1;  
        oam mpls-tp-mode;  
        ultimate-hop-popping;  
        associate-lsp R2-R1;  
    }  
    interface ge-0/0/0.0;  
    interface lo0.0;  
    interface fxp0.0 {  
        disable;  
    }  
}  
ospf {  
    traffic-engineering;  
    area 0.0.0.0 {  
        interface ge-0/0/0.0;  
        interface lo0.0;  
        interface fxp0.0 {  
            disable;  
        }  
    }  
}
```

Verification

IN THIS SECTION

- [Verifying the LSP Status | 400](#)
- [Verifying Packet Loss Measurement | 401](#)
- [Verifying Packet Delay Measurement | 403](#)
- [Verifying Packet Loss-Delay Measurement | 404](#)

Confirm that the configuration is working properly.

Verifying the LSP Status

Purpose

Verify that the associated bidirectional LSP between Routers R1 and R2 is up.

Action

From operational mode, run the **show mpls lsp** command.

```
user@R1> show mpls lsp
```

```
Ingress LSP: 1 sessions
To           From           State Rt P      ActivePath      LSPname
20.0.0.1      10.0.0.1      Up      0  *              R1-R2 Assoc-Bidir
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
To           From           State  Rt Style Labelin Labelout LSPname
10.0.0.1     20.0.0.1      Up      0  1 FF  299776      - R2-R1 Assoc-Bidir
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Meaning

The associated bidirectional LSP R1-R2 is up and active.

Verifying Packet Loss Measurement

Purpose

Verify the on-demand loss measurement result.

Action

From operational mode, run the **monitor mpls loss rsvp R1-R2 count 2 detail** command.

```
user@R1> monitor mpls loss rsvp R1-R2 count 2 detail
```

```
(0)
Response code                : Success
Origin timestamp             : 1404129082 secs, 905571890 nsecs
Forward transmit count       : 83040
Forward receive count        : 83040
Reverse transmit count       : 83100
Reverse receive count        : 83100
(1)
Response code                : Success
Origin timestamp             : 1404129083 secs, 905048410 nsecs
Forward transmit count       : 83841
```

```

Forward receive count           : 83841
Reverse transmit count          : 83904
Reverse receive count           : 83904
Current forward transmit count   : 801
Current forward receive count    : 801
Current forward loss             : 0 packets
Current forward loss ratio       : 0.000000
Current forward throughput       : 0.801 kpps
Current reverse transmit count   : 804
Current reverse receive count    : 804
Current reverse loss             : 0 packets
Current reverse loss ratio       : 0.000000
Current reverse throughput       : 0.804 kpps
(2)
Response code                   : Success
Origin timestamp                 : 1404129084 secs, 904828715 nsecs
Forward transmit count          : 84423
Forward receive count           : 84423
Reverse transmit count          : 84487
Reverse receive count           : 84487
Current forward transmit count   : 582
Current forward receive count    : 582
Current forward loss             : 0 packets
Current forward loss ratio       : 0.000000
Current forward throughput       : 0.582 kpps
Current reverse transmit count   : 583
Current reverse receive count    : 583
Current reverse loss             : 0 packets
Current reverse loss ratio       : 0.000000
Current reverse throughput       : 0.583 kpps

Cumulative forward transmit count : 1383
Cumulative forward loss           : 0 packets
Average forward loss ratio        : 0.000000
Average forward throughput        : 0.692 kpps
Cumulative reverse transmit count : 1387
Cumulative reverse loss           : 0 packets
Average reverse loss ratio        : 0.000000
Average reverse throughput        : 0.694 kpps

LM queries sent                  : 3
LM responses received            : 3
LM queries timedout              : 0
LM responses dropped due to errors : 0

```

Meaning

The packet loss measurement for two counts is displayed.

Verifying Packet Delay Measurement

Purpose

Verify the on-demand delay measurement result.

Action

From operational mode, run the **monitor mpls delay rsvp R1-R2 count 2 detail** command.

```
user@R1> monitor mpls delay rsvp R1-R2 count 2 detail
```

```
(1)
Response code                : Success
Querier transmit timestamp    : 1404129122 secs, 479955401 nsecs
Responder receive timestamp   : 1404129122 secs, 468519022 nsecs
Responder transmit timestamp  : 1404129122 secs, 470255123 nsecs
Querier receive timestamp     : 1404129122 secs, 481736403 nsecs
Current two-way channel delay : 44 usecs
Current round-trip-time       : 1781 usecs

(2)
Response code                : Success
Querier transmit timestamp    : 1404129123 secs, 480926210 nsecs
Responder receive timestamp   : 1404129123 secs, 469488696 nsecs
Responder transmit timestamp  : 1404129123 secs, 471130706 nsecs
Querier receive timestamp     : 1404129123 secs, 482613911 nsecs
Current two-way channel delay : 45 usecs
Current round-trip-time       : 1687 usecs

Best two-way channel delay    : 44 usecs
Worst two-way channel delay   : 45 usecs
Average two-way channel delay : 45 usecs
Best round-trip-time          : 1687 usecs
Worst round-trip-time         : 1781 usecs
Average round-trip-time       : 1734 usecs
Average forward delay variation : 1 usecs
Average reverse delay variation : 1 usecs

DM queries sent               : 2
DM responses received         : 2
DM queries timedout           : 0
DM responses dropped due to errors : 0
```

Meaning

The packet delay measurement for two counts is displayed.

Verifying Packet Loss-Delay Measurement

Purpose

Verify the on-demand loss and delay measurement result.

Action

From operational mode, run the **monitor mpls loss-delay rsvp R1-R2 count 2 detail** command.

```
user@R1> monitor mpls loss-delay rsvp R1-R2 count 2 detail
```

```
(0)
Response code                : Success
Forward transmit count       : 142049
Forward receive count        : 142049
Reverse transmit count       : 142167
Reverse receive count        : 142167
Querier transmit timestamp   : 1404129161 secs, 554422723 nsecs
Responder receive timestamp  : 1404129161 secs, 542877570 nsecs
Responder transmit timestamp : 1404129161 secs, 546004545 nsecs
Querier receive timestamp    : 1404129161 secs, 557599327 nsecs

(1)
Response code                : Success
Forward transmit count       : 143049
Forward receive count        : 143049
Reverse transmit count       : 143168
Reverse receive count        : 143168
Current forward transmit count : 1000
Current forward receive count  : 1000
Current forward loss          : 0 packets
Current forward loss ratio    : 0.000000
Current forward throughput    : 1.000 kpps
Current reverse transmit count : 1001
Current reverse receive count  : 1001
Current reverse loss          : 0 packets
Current reverse loss ratio    : 0.000000
Current reverse throughput    : 1.001 kpps
Querier transmit timestamp   : 1404129162 secs, 554465742 nsecs
Responder receive timestamp  : 1404129162 secs, 542919166 nsecs
Responder transmit timestamp : 1404129162 secs, 545812736 nsecs
Querier receive timestamp    : 1404129162 secs, 557409175 nsecs
Current two-way channel delay : 49 usecs
```

```

Current round-trip-time           : 2943 usecs
(2)
Response code                     : Success
Forward transmit count            : 143677
Forward receive count             : 143677
Reverse transmit count            : 143799
Reverse receive count             : 143799
Current forward transmit count    : 628
Current forward receive count     : 628
Current forward loss              : 0 packets
Current forward loss ratio        : 0.000000
Current forward throughput        : 0.627 kpps
Current reverse transmit count    : 631
Current reverse receive count     : 631
Current reverse loss              : 0 packets
Current reverse loss ratio        : 0.000000
Current reverse throughput        : 0.630 kpps
Querier transmit timestamp        : 1404129163 secs, 556698575 nsecs
Responder receive timestamp       : 1404129163 secs, 545150128 nsecs
Responder transmit timestamp      : 1404129163 secs, 546918408 nsecs
Querier receive timestamp         : 1404129163 secs, 558515047 nsecs
Current two-way channel delay     : 48 usecs
Current round-trip-time           : 1816 usecs

Cumulative forward transmit count : 1628
Cumulative forward loss           : 0 packets
Average forward loss ratio        : 0.000000
Average forward throughput        : 0.813 kpps
Cumulative reverse transmit count : 1632
Cumulative reverse loss           : 0 packets
Average reverse loss ratio        : 0.000000
Average reverse throughput        : 0.815 kpps

Best two-way channel delay        : 48 usecs
Worst two-way channel delay       : 49 usecs
Average two-way channel delay     : 49 usecs
Best round-trip-time              : 1816 usecs
Worst round-trip-time             : 3176 usecs
Average round-trip-time           : 2645 usecs
Average forward delay variation   : 1 usecs
Average reverse delay variation   : 0 usecs

LDM queries sent                  : 3
LDM responses received            : 3

```

```
LDM queries timedout           : 0
LDM responses dropped due to errors : 0
```

Meaning

The packet loss and delay measurement for two counts is displayed.

Example: Configuring Pro-active Loss and Delay Measurements for Bidirectional MPLS LSPs

IN THIS SECTION

- [Requirements | 406](#)
- [Overview | 407](#)
- [Configuration | 407](#)
- [Verification | 413](#)

This example shows how to configure pro-active loss and delay measurements for point-to-point ultimate-hop popping label-switched paths (LSPs) in MPLS networks to monitor network performance.

Requirements

This example uses the following hardware and software components:

- Two MX Series 5G Universal Routing Platforms that contain MPC/MICs only
- Junos OS Release 15.1 or later running on all the routers

Before you begin:

1. Configure the device interfaces.
2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
 - a. MPLS
 - b. OSPF
 - c. RSVP

Overview

Starting with Junos OS Release 15.1, a pro-active tool to monitor and measure packet loss, packet delay, or both for associated bidirectional MPLS ultimate-hop popping point-to-point label-switched paths (LSPs) is introduced.

This feature provides the following performance metrics:


- Inter-packet delay variation (IPDV)
- Loss measurement
- Round-trip delay (RTT)
- Throughput measurement
- Two-way channel delay

This functionality provides real-time visibility into network performance, thereby facilitating network performance planning, troubleshooting, and evaluation.

Topology

Figure 24 on page 407 illustrates the pro-active loss and delay measurements using a simple two-router topology.

Figure 24: Configuring Pro-Active Loss and Delay Measurements



In this example, an associated bidirectional LSP is configured between Routers R1 and R2, for which the performance metrics are measured.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

R1

```

set chassis network-services enhanced-ip
set interfaces ge-0/0/0 unit 0 family inet address 1.1.1.1/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.0.0.1/32

```

```

set interfaces lo0 unit 0 family mpls
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface lo0.0
set protocols mpls interface fxp0.0 disable
set protocols mpls label-switched-path R1-R2 associate-lsp R2-R1
set protocols mpls label-switched-path R1-R2 install 20.10.30.0/24 active
set protocols mpls label-switched-path R1-R2 oam mpls-tp-mode
set protocols mpls label-switched-path R1-R2 oam performance-monitoring querier delay traffic-class
    tc-0 query-interval 1000
set protocols mpls label-switched-path R1-R2 oam performance-monitoring querier loss traffic-class
    none query-interval 1000
set protocols mpls label-switched-path R1-R2 oam performance-monitoring querier loss-delay
    traffic-class tc-0 query-interval 1000
set protocols mpls label-switched-path R1-R2 oam performance-monitoring responder delay
    min-query-interval 1000
set protocols mpls label-switched-path R1-R2 oam performance-monitoring responder loss
    min-query-interval 1000
set protocols mpls label-switched-path R1-R2 to 20.0.0.1
set protocols mpls label-switched-path R1-R2 ultimate-hop-popping
set protocols mpls statistics traffic-class-statistics
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols rsvp interface ge-0/0/0.0
set protocols rsvp interface lo0.0
set protocols rsvp interface fxp0.0 disable
set routing-options router-id 10.0.0.1

```

R2

```

set chassis network-services enhanced-ip
set interfaces ge-0/0/0 unit 0 family inet address 1.1.1.2/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 20.0.0.1/32
set interfaces lo0 unit 0 family mpls
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface lo0.0
set protocols mpls interface fxp0.0 disable
set protocols mpls label-switched-path R2-R1 associate-lsp R1-R2

```



```

set protocols mpls label-switched-path R2-R1 install 10.10.20.0/24 active
set protocols mpls label-switched-path R2-R1 oam mpls-tp-mode
set protocols mpls label-switched-path R2-R1 oam performance-monitoring responder delay
    min-query-interval 1000
set protocols mpls label-switched-path R2-R1 oam performance-monitoring responder loss
    min-query-interval 1000
set protocols mpls label-switched-path R2-R1 oam performance-monitoring querier delay traffic-class
    tc-0 query-interval 1000
set protocols mpls label-switched-path R2-R1 oam performance-monitoring querier loss traffic-class
    none query-interval 1000
set protocols mpls label-switched-path R2-R1 oam performance-monitoring querier loss-delay
    traffic-class tc-0 query-interval 1000
set protocols mpls label-switched-path R2-R1 to 10.0.0.1
set protocols mpls label-switched-path R2-R1 ultimate-hop-popping
set protocols mpls statistics traffic-class-statistics
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols rsvp interface ge-0/0/0.0
set protocols rsvp interface lo0.0
set protocols rsvp interface fxp0.0 disable
set routing-options router-id 20.0.0.1

```

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router R1:

1. Enable the enhanced IP network services configuration.

```

[edit chassis]
user@R1# set network-services enhanced-ip

```

2. Configure the interfaces for Router R1.

```

[edit interfaces]
user@R1# set ge-0/0/0 unit 0 family inet address 1.1.1.1/30
user@R1# set ge-0/0/0 unit 0 family mpls

```

```
user@R1# set lo0 unit 0 family inet address 10.0.0.1/32
user@R1# set lo0 unit 0 family mpls
```

3. Configure the router ID for Router R1.

```
[edit routing-options]
user@R1# set router-id 10.0.0.1
```

4. Enable RSVP on all the interfaces of Router R1, excluding the management interface.

```
[edit protocols]
user@R1# set rsvp interface ge-0/0/0.0
user@R1# set rsvp interface lo0.0
user@R1# set rsvp interface fxp0.0 disable
```

5. Enable MPLS on all the interfaces of Router R1, excluding the management interface.

```
[edit protocols]
user@R1# set mpls interface ge-0/0/0.0
user@R1# set mpls interface lo0.0
user@R1# set mpls interface fxp0.0 disable
```

6. Configure an associated bidirectional LSP to Router R2.

```
[edit protocols]
user@R1# set mpls label-switched-path R1-R2 to 20.0.0.1
user@R1# set mpls label-switched-path R1-R2 install 20.10.30.0/24 active
user@R1# set mpls label-switched-path R1-R2 oam mpls-tp-mode
user@R1# set mpls label-switched-path R1-R2 ultimate-hop-popping
user@R1# set mpls label-switched-path R1-R2 associate-lsp R2-R1
```

7. Create traffic classes for maintaining data traffic statistics per traffic class.

This enables traffic class scoped loss and delay measurement.

```
[edit protocols]
user@R1# set mpls statistics traffic-class-statistics
```

8. Configure performance monitoring at the querier side.

```
[edit protocols]
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring querier delay traffic-class tc-0
      query-interval 1000
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring querier loss traffic-class none
      query-interval 1000
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring querier loss-delay traffic-class
      tc-0 query-interval 1000
```

9. Configure performance monitoring at the responder side.

```
[edit protocols]
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring responder delay
      min-query-interval 1000
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring responder loss min-query-interval
      1000
```

10. Configure OSPF with traffic engineering capabilities, and enable OSPF on all the interfaces of Router R1, excluding the management interface.

```
[edit protocols]
user@R1# set ospf traffic-engineering
user@R1# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@R1# set ospf area 0.0.0.0 interface lo0.0
user@R1# set ospf interface fxp0.0 disable
```

Results

From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show routing-options**, and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show chassis
network-services enhanced-ip;
```

```
user@R1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 1.1.1.1/30;
    }
  }
}
```

```

        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.0.0.1/32;
        }
        family mpls;
    }
}

```

```

user@R1# show routing-options
router-id 10.0.0.1;

```

```

user@R1# show protocols
rsvp {
    interface ge-0/0/0.0;
    interface lo0.0;
    interface fxp0.0 {
        disable;
    }
}
mpls {
    label-switched-path R1-R2 {
        to 20.0.0.1;
        install 20.10.30.0/24 active;
        oam {
            mpls-tp-mode;
            performance-monitoring {
                querier {
                    loss {
                        traffic-class none {
                            query-interval 1000;
                        }
                    }
                }
                delay {
                    traffic-class tc-0 {
                        query-interval 1000;
                    }
                }
                loss-delay {
                    traffic-class none {

```

```

        query-interval 1000;
    }
}
}
responder {
    loss {
        min-query-interval 1000;
    }
    delay {
        min-query-interval 1000;
    }
}
}
ultimate-hop-popping;
associate-lsp R2-R1;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-0/0/0.0;
        interface lo0.0;
        interface fxp0.0 {
            disable;
        }
    }
}
}

```

Verification

Verifying Loss and Delay Measurement

Purpose

Verify the loss and delay measurement.

Action

From operational mode, run the **show performance-monitoring mpls lsp** command.

```
user@R1> show performance-monitoring mpls lsp
```

```

Session Total: 3 Up: 3 Down: 0
  LSP name:R1-R2, PM State:Up
    Loss measurement Data:

```

```

Duration: 00:04:43
Traffic-class: None
Queries sent: 282
Responses received: 282
Responses dropped due to errors: 0
Queries timeout: 0
Forward loss measurement:
    Average packet loss: 0
    Average packet throughput: 554338
Reverse loss measurement:
    Average packet loss: 0
    Average packet throughput: 1352077
LSP name:R1-R2, PM State:Up
Delay measurement Data:
    Duration: 00:04:43
    Traffic-class: 0
    Queries sent: 282
    Responses received: 282
    Responses dropped due to errors: 0
    Queries timeout: 0
    Best 2-way channel delay: 72 usecs
    Worst 2-way channel delay: 365 usecs
    Best round trip time: 843 usecs
    Worst round trip time: 105523 usecs
    Avg absolute fw delay variation: 1619 usecs
    Avg absolute rv delay variation: 1619 usecs
LSP name:R1-R2, PM State:Up
Loss measurement Data:
    Duration: 00:04:43
    Traffic-class: None
    Queries sent: 282
    Responses received: 282
    Responses dropped due to errors: 0
    Queries timeout: 0
    Forward loss measurement:
        Average packet loss: 0
        Average packet throughput: 553927
    Reverse loss measurement:
        Average packet loss: 0
        Average packet throughput: 1351531
Delay measurement Data:
    Best 2-way channel delay: 76 usecs
    Worst 2-way channel delay: 368 usecs
    Best round trip time: 1082 usecs

```

```
Worst round trip time: 126146 usecs
Avg absolute fw delay variation: 1618 usecs
Avg absolute rv delay variation: 1619 usecs
```

Meaning

The packet loss and delay measurement metrics for LSP are displayed.

Configuring On-Demand Loss and Delay Measurement

You can configure an on-demand loss and delay measurement for point-to-point ultimate hop popping (UHP) label-switched paths (LSPs) in MPLS networks to monitor network performance. The **monitor mpls loss rsvp**, **monitor mpls delay rsvp**, and **monitor mpls loss-delay rsvp** CLI commands provide an on-demand summary of performance metrics for direct mode packet loss, two-way packet delay, and related metrics, such as inter-packet delay variation and channel throughput measurement.

This functionality provides real-time visibility into network performance, thereby facilitating network performance planning, troubleshooting, and evaluation.

Before you begin:

1. Configure the device interfaces.
2. Configure the device router ID.
3. Configure the following protocols:
 - RSVP
 - OSPF
 - Enable traffic engineering capabilities.
 - MPLS

To configure the PE device:

1. Enable the chassis with tunnel services and enhanced IP network services configuration.

```
[edit chassis]
user@R1# set fpc fpc-slot pic pic-slot tunnel-services bandwidth bandwidth
user@R1# set network-services enhanced-ip
```

2. Configure an associated bidirectional LSP to the remote router.

```
[edit protocols]
```

```

user@R1# set mpls label-switched-path lsp-name to remote-router-ip-address
user@R1# set mpls label-switched-path lsp-name oam mpls-tp-mode
user@R1# set mpls label-switched-path lsp-name ultimate-hop-popping
user@R1# set mpls label-switched-path lsp-name associate-lsp lsp-name

```

3. Create traffic classes for maintaining data traffic statistics per traffic class.

This enables traffic class scoped loss measurement.

```

[edit protocols]
user@R1# set mpls statistics traffic-class-statistics

```

Configuring Pro-Active Loss and Delay Measurements

You can configure pro-active loss and delay measurements for point-to-point ultimate-hop popping label-switched paths (LSPs) in MPLS networks to monitor network performance. The **show performance-monitoring mpls lsp** CLI command provides a summary of performance metrics for direct mode packet loss, two-way packet delay, and related metrics, such as inter-packet delay variation and channel throughput measurement.

This functionality provides real-time visibility into network performance, thereby facilitating network performance planning, troubleshooting, and evaluation.

This feature provides the following performance metrics:

- Inter-packet delay variation (IPDV)
- Loss measurement
- Round-trip delay (RTT)
- Throughput measurement
- Two-way channel delay

Before you begin:

1. Configure the device interfaces.
2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
 - MPLS
 - OSPF
 - RSVP

To configure pro-active loss and delay measurements on the PE device:

1. Configure an associated bidirectional LSP to Router R2.

```
[edit protocols]
user@host# set mpls label-switched-path lsp-name to remote-router-ip-address
user@host# set mpls label-switched-path lsp-name install destination-prefix/prefix-length active
user@host# set mpls label-switched-path lsp-name oam mpls-tp-mode
user@host# set mpls label-switched-path lsp-name ultimate-hop-popping
user@host# set mpls label-switched-path lsp-name associate-lsp remote-lsp-name
```

2. Create traffic classes for maintaining data traffic statistics per traffic class.

This enables traffic class scoped loss and delay measurements.

```
[edit protocols]
user@host# set mpls statistics traffic-class-statistics
```

3. Configure performance monitoring at the querier side.

```
[edit protocols]
user@host# set mpls label-switched-path lsp-name oam performance-monitoring querier delay traffic-class
    tc-value query-interval milliseconds
user@host# set mpls label-switched-path lsp-name oam performance-monitoring querier loss traffic-class
    tc-value query-interval milliseconds
user@host# set mpls label-switched-path lsp-name oam performance-monitoring querier loss-delay traffic-class
    tc-value query-interval milliseconds
```

4. Configure performance monitoring at the responder side.

```
[edit protocols]
user@host# set mpls label-switched-path lsp-name oam performance-monitoring responder delay
    min-query-interval milliseconds
user@host# set mpls label-switched-path lsp-name oam performance-monitoring responder loss
    min-query-interval milliseconds
```

RELATED DOCUMENTATION

Basic MPLS Configuration | 36

4

PART

MPLS LSPs

Understanding MPLS LSPs | **419**

Configuring MPLS LSPs | **495**

Understanding MPLS LSPs

IN THIS CHAPTER

- [LSP Overview | 419](#)
- [LSP Labels | 421](#)
- [LSP Routes | 468](#)
- [LSP Computation | 478](#)
- [LSP Routers | 483](#)

LSP Overview

IN THIS SECTION

- [How a Packet Travels Along an LSP | 419](#)
- [Types of LSPs | 420](#)
- [Scope of LSPs | 420](#)

How a Packet Travels Along an LSP

When an IP packet enters an LSP, the ingress router examines the packet and assigns it a label based on its destination, placing the label in the packet's header. The label transforms the packet from one that is forwarded based on its IP routing information to one that is forwarded based on information associated with the label.

The packet is then forwarded to the next router in the LSP. This router and all subsequent routers in the LSP do not examine any of the IP routing information in the labeled packet. Rather, they use the label to look up information in their label forwarding table. They then replace the old label with a new label and forward the packet to the next router in the path.

When the packet reaches the egress router, the label is removed, and the packet again becomes a native IP packet and is again forwarded based on its IP routing information.

Types of LSPs

There are three types of LSPs:

- Static LSPs—For static paths, you must manually assign labels on all routers involved (ingress, transit, and egress). No signaling protocol is needed. This procedure is similar to configuring static routes on individual routers. Like static routes, there is no error reporting, liveliness detection, or statistics reporting.
- LDP-signaled LSPs—See [“LDP Introduction” on page 850](#).
- RSVP-signaled LSPs—For signaled paths, RSVP is used to set up the path and dynamically assign labels. (RSVP signaling messages are used to set up signaled paths.) You configure only the ingress router. The transit and egress routers accept signaling information from the ingress router, and they set up and maintain the LSP cooperatively. Any errors encountered while establishing an LSP are reported to the ingress router for diagnostics. For signaled LSPs to work, a version of RSVP that supports tunnel extensions must be enabled on all routers.

There are two types of RSVP-signaled LSPs:

- Explicit-path LSPs—All intermediate hops of the LSP are manually configured. The intermediate hops can be strict, loose, or any combination of the two. Explicit path LSPs provide you with complete control over how the path is set up. They are similar to static LSPs but require much less configuration.
- Constrained-path LSPs—The intermediate hops of the LSP are automatically computed by the software. The computation takes into account information provided by the topology information from the IS-IS or OSPF link-state routing protocol, the current network resource utilization determined by RSVP, and the resource requirements and constraints of the LSP. For signaled constrained-path LSPs to work, either the IS-IS or OSPF protocol and the IS-IS or OSPF traffic engineering extensions must be enabled on all routers.

Scope of LSPs

For constrained-path LSPs, the LSP computation is confined to one IGP domain, and cannot cross any AS boundary. This prevents an AS from extending its IGP into another AS.

Explicit-path LSPs, however, can cross as many AS boundaries as necessary. Because intermediate hops are manually specified, the LSP does not depend on the IGP topology or a local forwarding table.

RELATED DOCUMENTATION

LSP Labels

IN THIS SECTION

- [MPLS Label Overview | 421](#)
- [MPLS Label Allocation | 421](#)
- [Operations on MPLS Labels | 423](#)
- [Understanding MPLS Label Operations | 423](#)
- [Understanding MPLS Label Manager | 427](#)
- [Special MPLS Labels | 427](#)
- [Entropy Label Support in Mixed Mode Overview | 428](#)
- [Abstract Hops for MPLS LSPs Overview | 428](#)
- [Example: Configuring Abstract Hops for MPLS LSPs | 441](#)
- [Configuring the Maximum Number of MPLS Labels | 461](#)
- [Configuring MPLS to Pop the Label on the Ultimate-Hop Router | 463](#)
- [Advertising Explicit Null Labels to BGP Peers | 464](#)
- [Understanding MPLS Label Operations on EX Series Switches | 465](#)

MPLS Label Overview

Packets traveling along an LSP are identified by a label—a 20-bit, unsigned integer in the range 0 through 1,048,575. For push labels on ingress routers, no labels in this range are restricted. For incoming labels on the transit static LSP, the label value is restricted to 1,000,000 through 1,048,575.

On MX Series, PTX Series, and T Series routers, the value for entropy and flow labels is restricted to 16 through 1,048,575.

MPLS Label Allocation

In the Junos OS, label values are allocated per router or switch—the rest of this explanation uses router to cover both. The display output shows only the label (for example, **01024**). Labels for multicast packets are independent of those for unicast packets. Currently, the Junos OS does not support multicast labels.

Labels are assigned by downstream routers relative to the flow of packets. A router receiving labeled packets (the next-hop router) is responsible for assigning incoming labels. A received packet containing a label that is unrecognized (unassigned) is dropped. For unrecognized labels, the router does not attempt

to unwrap the label to analyze the network layer header, nor does it generate an Internet Control Message Protocol (ICMP) destination unreachable message.

A packet can carry a number of labels, organized as a last-in, first-out stack. This is referred to as a *label stack*. At a particular router, the decision about how to forward a labeled packet is based exclusively on the label at the top of the stack.

Figure 25 on page 422 shows the encoding of a single label. The encoding appears after data link layer headers, but before any network layer header.

Figure 25: Label Encoding


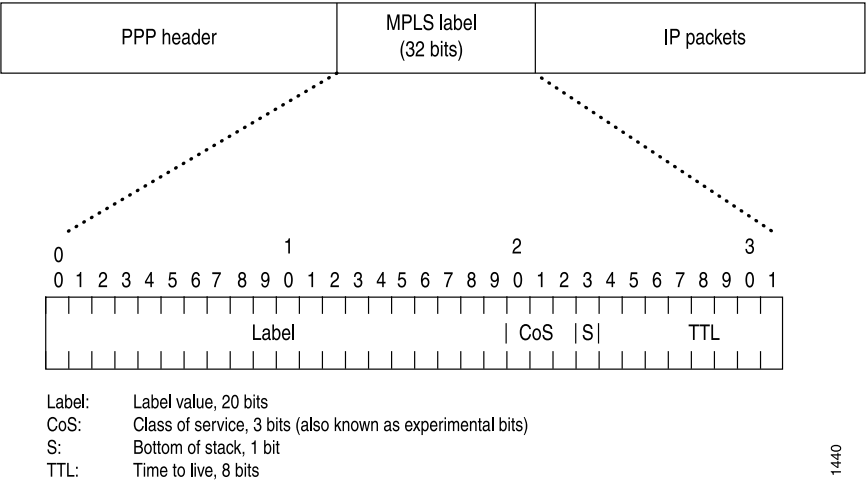


Figure 26 on page 422 illustrates the purpose of the class-of-service bits (also known as the EXP or experimental bits). Bits 20 and 21 specify the queue number. Bit 22 is the packet loss priority (PLP) bit used to specify the random early detection (RED) drop profile. For more information about class of service and the class-of-service bits, see “Configuring Class of Service for MPLS LSPs” on page 1213.

Figure 26: Class-of-Service Bits

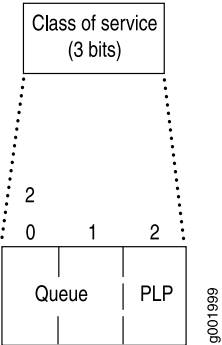

Operations on MPLS Labels

The router supports the following label operations:

- **Push**—Add a new label to the top of the packet. For IPv4 packets, the new label is the first label. The time-to-live (TTL) and s bits are derived from the IP packet header. The MPLS class of service (CoS) is derived from the queue number. If the push operation is performed on an existing MPLS packet, you will have a packet with two or more labels. This is called label stacking. The top label must have its s bit set to 0, and might derive CoS and TTL from lower levels. The new top label in a label stack always initializes its TTL to 255, regardless of the TTL value of lower labels.
- **Pop**—Remove the label from the beginning of the packet. Once the label is removed, the TTL is copied from the label into the IP packet header, and the underlying IP packet is forwarded as a native IP packet. In the case of multiple labels in a packet (label stacking), removal of the top label yields another MPLS packet. The new top label might derive CoS and TTL from a previous top label. The popped TTL value from the previous top label is not written back to the new top label.
- **Swap**—Replace the label at the top of the label stack with a new label. The S and CoS bits are copied from the previous label, and the TTL value is copied and decremented (unless the **no-decrement-ttl** or **no-propagate-ttl** statement is configured). A transit router supports a label stack of any depth.
- **Multiple Push**—Add multiple labels (up to three) on top of existing packets. This operation is equivalent to pushing multiple times.
- **Swap and Push**—Replace the existing top of the label stack with a new label, and then push another new label on top.

Understanding MPLS Label Operations

IN THIS SECTION

- [MPLS Label-Switched Paths and MPLS Labels | 424](#)
- [Reserved Labels | 425](#)
- [MPLS Label Operations | 425](#)
- [Penultimate-Hop Popping and Ultimate-Hop Popping | 426](#)

In the traditional packet-forwarding paradigm, as a packet travels from one switch to the next, an independent forwarding decision is made at each hop. The IP network header is analyzed and the next hop is chosen based on this analysis and on the information in the routing table. In an MPLS environment, the analysis of the packet header is made only once, when a packet enters the MPLS tunnel (that is, the path used for MPLS traffic).

When an IP packet enters a label-switched path (LSP), the ingress provider edge (PE) switch examines the packet and assigns it a label based on its destination, placing the label in the packet's header. The label transforms the packet from one that is forwarded based on its IP routing information to one that is forwarded based on information associated with the label. The packet is then forwarded to the next provider switch in the LSP. This switch and all subsequent switches in the LSP do not examine any of the IP routing information in the labeled packet. Rather, they use the label to look up information in their label forwarding table. They then replace the old label with a new label and forward the packet to the next switch in the path. When the packet reaches the egress PE switch, the label is removed, and the packet again becomes a native IP packet and is forwarded based on its IP routing information.


This topic describes:

MPLS Label-Switched Paths and MPLS Labels

When a packet enters the MPLS network, it is assigned to an LSP. Each LSP is identified by a label, which is a short (20-bit), fixed-length value at the front of the MPLS label (32 bits). Labels are used as lookup indexes for the label forwarding table. For each label, this table stores forwarding information. Because no additional parsing or lookup is done on the encapsulated packet, MPLS supports the transmission of any other protocols within the packet payload.

Figure 27 on page 424 shows the encoding of a single label. The encoding appears after data link layer headers, but before any network layer header.

Figure 27: Label Encoding

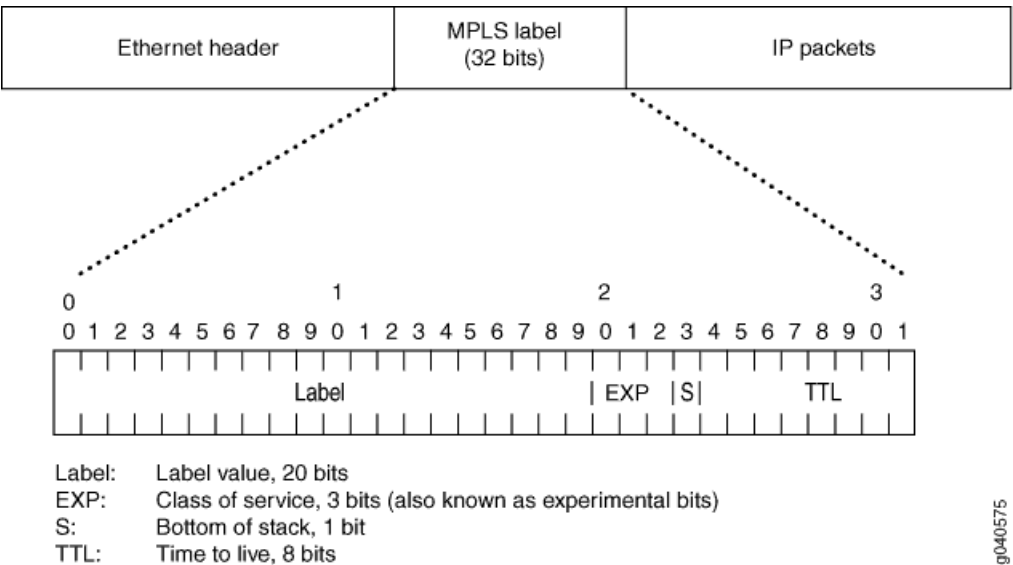

Reserved Labels

Labels range from 0 through 1,048,575. Labels 0 through 999,999 are for internal use.

Some of the reserved labels (in the range 0 through 15) have well-defined meanings. The following reserved labels are used by QFX Series and EX4600 devices:

- 0, IPv4 Explicit Null label—This value is valid only when it is the sole label entry (no label stacking). It indicates that the label must be popped on receipt. Forwarding continues based on the IP version 4 (IPv4) packet.
- 1, Router Alert label—When a packet is received with a top label value of 1, it is delivered to the local software module for processing.
- 3, Implicit Null label—This label is used in the signaling protocol (RSVP) only to request label popping by the downstream switch. It never actually appears in the encapsulation. Labels with a value of 3 must not be used in the data packet as real labels. No payload type (IPv4 or IPv6) is implied with this label.

MPLS Label Operations

QFX Series and EX4600 devices support the following MPLS label operations:

- Push
- Pop
- Swap

NOTE: There is a limit with regard to the number of labels that QFX and EX4600 devices can affix (push operations) to the label stack or remove (pop operations) from the label stack.

- For Push operations—As many as three labels are supported.
- For Pop operations—As many as three labels are supported.

The push operation affixes a new label to the top of the IP packet. For IPv4 packets, the new label is the first label. The time to live (TTL) field value in the packet header is derived from the IP packet header. The push operation cannot be applied to a packet that already has an MPLS label.

The pop operation removes a label from the beginning of the packet. Once the label is removed, the TTL is copied from the label into the IP packet header, and the underlying IP packet is forwarded as a native IP packet.

The swap operation removes an existing MPLS label from an IP packet and replaces it with a new MPLS label, based on the following:

- Incoming interface
- Label

- Label forwarding table

Figure 28 on page 426 shows an IP packet without a label arriving on the customer edge interface (ge-0/0/1) of the ingress PE switch. The ingress PE switch examines the packet and identifies that packet's destination as the egress PE switch. The ingress PE switch applies label 100 to the packet and sends the MPLS packet to its outgoing MPLS core interface (ge-0/0/5). The MPLS packet is transmitted on the MPLS tunnel through the provider switch, where it arrives at interface ge-0/0/5 with label 100. The provider switch swaps label 100 with label 200 and forwards the MPLS packet through its core interface (ge-0/0/7) to the next hop on the tunnel, which is the egress PE switch. The egress PE switch receives the MPLS packet through its core interface (ge-0/0/7), removes the MPLS label, and sends the IP packet out of its customer edge interface (ge-0/0/1) to a destination that is beyond the tunnel.

Figure 28: MPLS Label Swapping

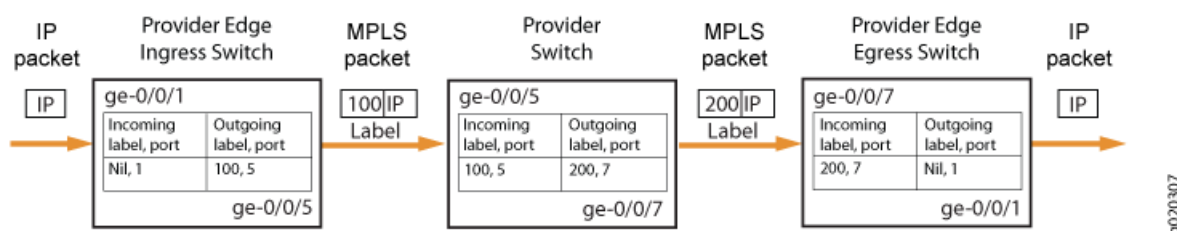


Figure 28 on page 426 shows the path of a packet as it passes in one direction from the ingress PE switch to the egress PE switch. However, the MPLS configuration also allows traffic to travel in the reverse direction. Thus, each PE switch operates as both an ingress switch and an egress switch.

Penultimate-Hop Popping and Ultimate-Hop Popping

The switches enable penultimate-hop popping (PHP) by default with IP over MPLS configurations. With PHP, the penultimate provider switch is responsible for popping the MPLS label and forwarding the traffic to the egress PE switch. The egress PE switch then performs an IP route lookup and forwards the traffic. This reduces the processing load on the egress PE switch, because it is not responsible for popping the MPLS label.

- The default advertised label is label 3 (Implicit Null label). If label 3 is advertised, the penultimate-hop switch removes the label and sends the packet to the egress PE switch.
- If ultimate-hop popping is enabled, label 0 (IPv4 Explicit Null label) is advertised and the egress PE switch of the LSP removes the label.

Understanding MPLS Label Manager

MPLS label manager is used to manage different label types such as LSI, dynamic, block, and static, which are supported on platforms using Modular Port Concentrators (MPCs) equipped with Junos Trio chipsets. These line cards provide more flexibility and scalability, when the **enhanced-ip** command is configured on the device.

The existing behavior of **label-space** command is retained, which is *not recommended*. To provide additional functionality such as multiple ranges for each type of label, **label-range** command is introduced under the **[edit protocols mpls label usage]** hierarchy, which is independent of **label-space** configuration. You can choose either style if only one range is needed for each type of label.

The following features are optimized with the **enhanced-ip** command configured on the device:

- Allows you to define the system wide global label pool to be used by segment-routing global block (SRGB) through IS-IS routing protocol.
- Increases the **vrf-table-label** space to at least 16,000, if the platform can support the scale.
- Allows you to specify the label value to be used by static VRF table label.
- Allows you to specify the label value range to be used by supported label application types.
- Allows you to change dynamically the SRGB and label type ranges.

Special MPLS Labels

Some of the reserved labels (in the 0 through 15 range) have well-defined meanings. For more complete details, see RFC 3032, *MPLS Label Stack Encoding*.

- 0, IPv4 Explicit Null label—This value is legal only when it is the sole label entry (no label stacking). It indicates that the label must be popped upon receipt. Forwarding continues based on the IP version 4 (IPv4) packet.
- 1, Router Alert label—When a packet is received with a top label value of 1, it is delivered to the local software module for processing.
- 2, IPv6 Explicit Null label—This value is legal only when it is the sole label entry (no label stacking). It indicates that the label must be popped on receipt. Forwarding continues based on the IP version 6 (IPv6) packet.
- 3, Implicit Null label—This label is used in the control protocol (LDP or RSVP) only to request label popping by the downstream router. It never actually appears in the encapsulation. Labels with a value of 3 should not be used in the data packet as real labels. No payload type (IPv4 or IPv6) is implied with this label.
- 4 through 6—Unassigned.

- 7, Entropy label indicator—This label is used when an Entropy label is in the label stack and precedes the Entropy label.
- 8 through 15—Unassigned.

Special labels are commonly used between the egress and penultimate routers of an LSP. If the LSP is configured to carry IPv4 packets only, the egress router might signal the penultimate router to use 0 as a final-hop label. If the LSP is configured to carry IPv6 packets only, the egress router might signal the penultimate router to use 2 as a final-hop label.

The egress router might simply signal the penultimate router to use 3 as the final label, which is a request to perform penultimate-hop label popping. The egress router will not process a labeled packet; rather, it receives the payload (IPv4, IPv6, or others) directly, reducing one MPLS lookup at egress.

For label-stacked packets, the egress router receives an MPLS label packet with its top label already popped by the penultimate router. The egress router cannot receive label-stacked packets that use label 0 or 2. It typically requests label 3 from the penultimate router.

Entropy Label Support in Mixed Mode Overview

Starting with Junos OS Release 14.2, entropy label is supported in mixed mode chassis where the entropy label can be configured without enhanced-ip configuration. The entropy label helps transit routers load-balance MPLS traffic across ECMP paths or link aggregation groups. The entropy label introduces a load-balancing label to be used by routers to load balance traffic rather than relying on deep packet inspection, reducing the packet processing requirements in the forwarding plane at the expense of increased label stack depth. Junos OS supports the entropy label only for MX Series routers with MPCs or MICs and can be enabled with enhanced-ip mode. But, this leads to a packet drop if the core-facing interface has an entropy label configured on the MPC or MIC and the other end of this core-facing connection has a DPC line card. In order to avoid this, the entropy label is now supported in mixed mode where the entropy label can be configured without enhanced-ip configuration. This allows MX Series router DPCs to support a pop out entropy label. However, this does not support a flow label.

Abstract Hops for MPLS LSPs Overview

IN THIS SECTION

- [Understanding Abstract Hops | 429](#)
- [Benefits of Using Abstract Hops | 430](#)
- [Junos OS Implementation of Abstract Hops | 432](#)

An abstract hop is a logical combination of the existing traffic engineering constraints, such as administrative groups, extended administrative groups, and Shared Risk Link Groups (SRLGs), which results in a user-defined group or cluster of routers that can be sequenced and used as constraints for setting up an MPLS label-switched path (LSP). Abstract hops overcome the limitations of existing path constraint specifications and provide several benefits to the traffic engineering capabilities of MPLS.

Understanding Abstract Hops

The path constraint for setting up of an MPLS LSP can be specified as either individual routers in the form of real hops or as a set of routers by way of administrative group or color specification. When a path constraint uses real hops (strict or loose), the LSP is set up along a specified sequence of routers (for example, R1, R2, ... Rn). When a path constraint uses an administrative group or color specification, a group of routers that meet the specified criteria is used to set up the LSP without picking a specific router, and unlike real-hop constraint, there is no sequence among the different groups of routers used in the constraint.

The drawback of real-hop constraint is that in a failure scenario, if any of the router hops goes down or the bandwidth utilization of the attached interface gets saturated, the path goes down (or relies on local or end-to-end protection). Although other alternative routers might be available to recover or set up the LSP, the LSP remains down until the operator configures another router hop sequence as the path constraint to bring the path up again or to disengage the protection path.

The administrative group or color specification constraint overcomes this limitation of a real-hop constraint to a certain extent. Here, when one of the routers in the group goes down or has its link capacity saturated, setting up of the LSP is not affected. This is because the next hop router to be used in the path constraint is not picked beforehand, and the LSP is set up along other routers that have the same administrative group or color without operator intervention. However, the drawback with router group constraints is that a sequence cannot be specified among the hop constraints.

Abstract hops overcome these drawbacks by creating user-defined router groups, where each member router meets a user-defined constraint. The user-defined constraint is a logical combination of the existing traffic engineering constraints, such as administrative groups, extended administrative groups, and Shared Risk Link Groups (SRLGs). Ordering is achieved among the router groups by specifying a sequence of abstract hops used in a path constraint. As a result, abstract hops combine the ordering property of real-hop constraint specification and the resilience that comes with the other traffic engineering constraints.

A path can use a combination of real and abstract hops as constraints. When using abstract hops, instead of specifying a sequence of routers (R1, R2, ... Rn) as with real hops, you specify an ordered set of router groups or abstract hops (G1, G2, ... Gn) as the path constraint. Each specified router group, Gi for example, consists of some user-defined set of routers—R1, R2, Rj, ... Rn. When one of the routers in the group goes down, say Router Rj in group Gi, another router, say Router Rk, from the same group Gi is picked up by path computation to replace the router that went down (that is, Router Rj). This is because the path constraint is sequenced and has to go through a sequence of abstract hops, instead of a sequence of individual routers.

Benefits of Using Abstract Hops

IN THIS SECTION

- [Specifying a Sequence of Constraint Combinations | 430](#)
- [Avoiding New Network Configuration on Transit Nodes | 430](#)
- [Combining Centralized and Distributed Path Computation Paradigms | 431](#)

Abstract hops are user-defined router groups. Similar to real-hop constraints that use a sequence of individual routers, a sequence of abstract hops can be used for setting up a label-switched path (LSP). The use of abstract hops provides resiliency to sequenced path constraints. The other benefits of using abstract hops include:

Specifying a Sequence of Constraint Combinations

Currently, it is possible to specify a path that can go through links that satisfy multiple attributes. Such a path constraint is called a compound constraint combination; for example, a constraint (C_i) that includes low latency links of green color and also excludes SRLG north.

However, there is no support for specifying a path with a sequence of compound constraint combinations. For example, a sequenced constraint ($C_1, C_2, C_i, \dots C_n$) that includes low latency green links, no latency blue links, and then low latency red links.

The need for such a sequenced compound constraint combination arises when there is a requirement to establish paths through a sequence of geographical regions with a different link affinity (attributes) requirement in each region. Abstract hops meet this requirement by allowing computing nodes to map each constraint combination (C_i , for example) with the user-defined group of routers—that is, the abstract hops.

Avoiding New Network Configuration on Transit Nodes

With current path constraint specification capabilities, it is possible to include or exclude links of certain attributes along an entire path; for example, excluding SRLG west from a path. However, there is no support to either conditionally exclude or include attributes, or to apply different exclude or include attributes in different parts of the path; for example, excluding SRLG west only when traversing red links.

As a workaround, a new administrative group can be created to identify all such red links that do not have SRLG west, and configure all the relevant links appropriately with that administrative group. The drawback of this approach is that configuration changes are required throughout the network to reflect the new administrative group membership.

Instead, by using abstract hops, the configuration changes can be contained on the ingress router only. At the ingress router, the constraint combination is mapped to the abstract hop, thereby meeting the aforementioned requirement without the need for any new configuration on the transit nodes.

Combining Centralized and Distributed Path Computation Paradigms

Traffic engineering of MPLS paths can be achieved by distributed computing or with a centralized controller for computing paths. A combination of both the computation types is called the hybrid computation paradigm. The key feature of the hybrid computation approach is the ability of the centralized controller—referred to as a Path Computation Element (PCE)—to loosely specify the path computation directives, per path, to the ingress router—referred to as a Path Computation Client (PCC)—and the ability of the ingress router to use it as input for path computation.

A sequence of abstract hops serves the purpose of acting as the guideline from the centralized controller. Abstract hops provide the flexibility to the controller to weave into the path constraint and attributes. This also enables the controller to build in the element of sequence in the constraint. The controller does not have to specify each hop the path needs to take, leaving room for the ingress router to act within the limits of the guideline or directive.

[Table 12 on page 431](#) lists the key features of the hybrid computation paradigm and provides a comparison of this approach with the current path computation methods.

Table 12: Hybrid Computation for Abstract Hops

Features	Distributed Constrained Shortest Path First	Centralized Constrained Shortest Path First	Hybrid Constrained Shortest Path First
React to frequent changes in a large network	Yes		Yes
Sophisticated path computation with global view		Yes	Yes
Incorporation of business logic in path computation		Yes	Yes
Resilience (no single point of failure)	Yes		Yes
Predictability		Yes	Yes
React to network load in (close to) real time	Yes		Yes
Field tested (versus early adoption)	Yes		Yes

Junos OS Implementation of Abstract Hops

IN THIS SECTION

- [Defining Abstract Hops | 432](#)
- [Using Abstract Hops in Path Constraint | 436](#)
- [Path Computation and Backtracking | 440](#)
- [Sample Backtracking | 440](#)

The order-aware abstract hops feature is introduced in Junos OS Release 17.1. The following sections describe the implementation of abstract hops in Junos OS:

Defining Abstract Hops

An abstract hop is a group of routers that users can define to be used in setting up a label-switched path (LSP). The user can control which routers to include in the group by defining a logical combination of heterogeneous link attributes or constraints called constituent attributes. The routers with links that satisfy the defined constituent attributes make it to the group of routers representing the abstract hop.

The mapping of constituent attributes with the abstract hop is local to the computing node or the ingress of the LSP being setup. As a result, abstract hops do not have associated interior gateway protocol updates or signaling protocol extensions, and implementing abstract hops in a network does not require new configuration on the transit nodes.

A constituent list enables defining of a set of constituent traffic engineering attributes, that is identified by a user-defined name. Constituent lists are used in an abstract hop definition by using any of the following configuration statements:

- **include-any-list**—Link satisfies the constituent-list if any of the specified constituent attributes are true for the link.
- **include-all-list**—Link satisfies the constituent-list if all the specified constituent attributes are true for the link.
- **exclude-all-list**—Link satisfies the constituent-list if none of the specified constituent attributes are true for the link.
- **exclude-any-list**—Link satisfies the constituent-list if at least one of the specified constituent attributes is not true for the link.

An abstract hop is defined as a logical combination of constituent-list references that can belong to any of the aforementioned categories. To achieve this, logical operators **AND** and **OR** are included in the abstract hop definition, and applied to the constituent list.

- **OR**—At least one of the constituent-list references in the abstract hop definition must be satisfied by a link for the attached node to be part of the abstract hop.
- **AND**—All of the constituent-list references in the abstract hop definition must be satisfied by a link for the attached node to be part of the abstract hop.

Sample Abstract Hop Definition

Taking as an example, the definition of abstract hops hopA is as follows:

Abstract hops hopA must include all routers whose emanating links satisfy the logical combination of the following link attributes, respectively:

- **hopA**—((administrative group red && Srlg south) || (administrative group green || Srlg north)), where:
 - *administrative group red* and *Srlg south* belong to include-all constituent list (listA1, in this example).
 - *administrative group green* and *Srlg north* belong to include-any constituent list (listA2, in this example).
 - || is the OR operator.

The configuration for abstract hops hopA is as follows:

• **hopA configuration**

```
[edit protocols mpls]
Constituent-list listA1 {
  administrative-group red;
  Srlg south;
}
Constituent-list listA2 {
  administrative-group green;
  Srlg north;
}
Abstract-hop hopA{
  Operator OR;
  Constituent-list listA1 include-all-list;
  Constituent-list listA2 include-any-list;
}
```

Verifying Abstract Hop Configuration

The **show mpls abstract hop membership** *<abstract hop name>* command is used to view members of an abstract hop. The command output provides the abstract hop to traffic engineering database node mapping.

```
user@host> show mpls abstract-hop-membership
```

```
Abstract hop: hop1A
  Credibility: 0
Address: 128.102.165.105
Address: 128.102.166.237
Address: 128.102.168.0
Address: 128.102.173.123
```

```
Abstract hop: hopB
  Credibility: 0
Address: 128.102.160.211
Address: 128.102.165.5
Address: 128.102.166.237
Address: 128.102.172.157
Address: 128.102.172.196
```

Here, the output field **Credibility** indicates the credibility associated with interior gateway protocol in use.

The output of the **show ted database extensive local** command provides the view captured in traffic engineering database. A keyword **local** is added to indicate that the output would include any local instrumentation. The command output shows the abstract hop as an attribute of links that satisfy the associated logical combination of link attributes.

```
user@host> show ted database extensive local
```

```
TED database: 0 ISIS nodes 8 INET nodes
NodeID: 128.102.173.123
Type: Rtr, Age: 3098 secs, LinkIn: 4, LinkOut: 3
Protocol: OSPF(0.0.0.0)
To: 128.102.168.0, Local: 1.3.0.1, Remote: 1.3.0.2
Local interface index: 332, Remote interface index: 0
Color: 0x2 green
Abstract hops: hopA
Metric: 1
Static BW: 1000Mbps
Reservable BW: 1000Mbps
Available BW [priority] bps:
    [0] 970Mbps    [1] 970Mbps    [2] 970Mbps    [3] 970Mbps
    [4] 970Mbps    [5] 970Mbps    [6] 970Mbps    [7] 970Mbps
```

```


Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 970Mbps      [1] 970Mbps      [2] 970Mbps      [3] 970Mbps
    [4] 970Mbps      [5] 970Mbps      [6] 970Mbps      [7] 970Mbps
To: 128.102.165.105, Local: 1.1.0.1, Remote: 1.1.0.2
Local interface index: 330, Remote interface index: 0
Srlg: south

Abstract hops: hopB
Metric: 1
Static BW: 1000Mbps
Reservable BW: 1000Mbps
Available BW [priority] bps:
  [0] 960Mbps      [1] 960Mbps      [2] 960Mbps      [3] 960Mbps
  [4] 960Mbps      [5] 960Mbps      [6] 960Mbps      [7] 960Mbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 960Mbps      [1] 960Mbps      [2] 960Mbps      [3] 960Mbps
    [4] 960Mbps      [5] 960Mbps      [6] 960Mbps      [7] 960Mbps

```

Abstract hop hopA is for low latency AND SRLG west, and abstract hop hopB is for excluding SRLG west. [Figure 29 on page 435](#) displays the ingress view of these abstract hops.

Figure 29: Ingress View of Abstract Hops

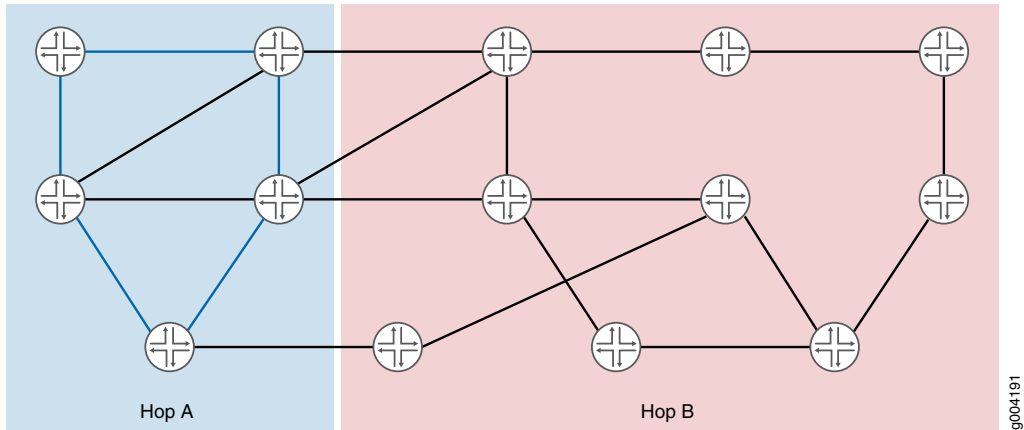

g004191

Using Abstract Hops in Path Constraint

The user associates a unique identifier with each abstract hop definition. This identifier is used for referring to the abstract hop in the path constraint. A sequence of abstract hops can be specified as the path constraint, similar to how real IP hops are used. The path constraint could also be a sequence of abstract hops interleaved by real IP hops.

Using abstract hops or real hops in a path constraint requires more than one Constrained Shortest Path First pass to the destination, typically one pass per hop. When real hops are provided as the path constraint, the constraint computation involves as many passes as the number of hops in the path constraint, where each pass ends on reaching a hop in the constraint list. The starting point for each pass is the destination of the previous pass, with the first pass using the ingress router as the start.

Alternatively, when path constraint uses strict or loose abstract hops, constraint computation comprises passes where each pass processes the subsequent abstract hop in the constraint list. In such a case, more than one node qualifies to be the destination for the pass. The set of nodes is called the viable router set for the pass.

An abstract hop traverses member nodes by using the following:

- Links that satisfy the logical combination of defined constituent attributes
- Any kind of links

The means of abstract hops traversing the member nodes is controlled by the use of the abstract hop qualifiers—strict, loose, and loose-link—in defining the path constraint. Taking for example, abstract hop hopA is processed differently with different qualifiers:

- **Strict**—After the last processed hop in the constraint list, the path traverses only links or nodes having membership of abstract hop hopA, before reaching a node with hopA's membership that is a feasible starting point for processing the next abstract hop.
- **Loose**—After the last processed hop in the constraint list, the path can traverse any real nodes that do not have abstract hop membership of hopA, before reaching a node with abstract hop membership hopA, which is a feasible starting point for processing the next abstract hop.
- **Loose-link**—After the last processed hop in the constraint list, the path can traverse any real nodes that do not have abstract hop membership of hopA, before reaching a node with abstract hop membership hopA, which is a feasible starting point for processing the next abstract hop. But the path should have traversed at least one link of abstract hop hopA membership in the course of the same.

In other words, the abstract hop of type loose-link is said to be processed only if any of the viable routers in the constraint is reachable through a link of associated abstract hop membership.

Sample Abstract Hops Specification

[Table 13 on page 437](#) provides sample use case for using abstract hops in path constraints.

Table 13: Using Abstract Hops in Path Constraints

Purpose of Path Constraint	Abstract Hop Qualifier	Configuration	Viable Router Set	Affinity
Traverse nodes that are members of hopA taking only links that satisfy hopA.	Strict	[edit protocols mpls] Path path_hopA_s { hopA abstract strict; }	All members of abstract hopA. That is, A1, A2...An.	hopA (pick only links that satisfy abstract hopA).
Traverse nodes that are members of hopA but not necessarily links that satisfy hopA	Loose	[edit protocols mpls] Path path_hopA_l { hopA abstract loose; }	All members of abstract hopA. That is, A1, A2...An.	None (any kind of links).
Traverse nodes that are members of hopA by taking at least one link that satisfies hopA.	Loose-link NOTE: The loose-link qualifier is viewed as loose followed by strict for the same abstract hop. In other words, hopA loose-link is the same as hopA loose and hopA strict.	[edit protocols mpls] Path path_hopA_ll { hopA abstract loose-link; }	In this case, there are two computation passes associated with hopA in the path constraint. The viable router set for both passes is: All members of abstract hopA. That is, A1, A2...An. NOTE: During path computation, a router is traversed only once.	In this case, there are two computation passes associated with hopA in the path constraint. The affinity for the two passes is: <ul style="list-style-type: none"> • Pass 1—None (any kind of links). • Pass 2—hopA (pick only links that satisfy abstract hopA).

Table 13: Using Abstract Hops in Path Constraints (*continued*)


Purpose of Path Constraint	Abstract Hop Qualifier	Configuration	Viable Router Set	Affinity
Traverse nodes that are members of hopA, taking only links that satisfy hopA, followed by nodes that are members of hopB taking only links that satisfy hopB.	Strict	[edit protocols mpls] Path path_hopA_hopB_s { hopA abstract strict; hopB abstract strict; }	<ul style="list-style-type: none"> hopA—Intersection of member set of hopA and hopB. <p>NOTE: When an abstract hop is followed by a strict abstract hop, the intersection of the two member sets is considered as viable router set.</p> <ul style="list-style-type: none"> hopB—All members of abstract hopB. That is, B1, B2...Bn. 	<ul style="list-style-type: none"> hopA—hopA (pick only links that satisfy abstract hopA). hopB—hopB (pick only links that satisfy abstract hopB).
Traverse nodes that are members of hopA taking only links that satisfy hopA, followed by nodes that are members of hopB taking any kind of links.	Strict and loose	[edit protocols mpls] Path path_hopA_s_hopB_l { hopA abstract strict; hopB abstract loose; }	<ul style="list-style-type: none"> hopA—All members of abstract hopA. That is, A1, A2...An. hopB—All members of abstract hopB. That is, B1, B2...Bn. 	<ul style="list-style-type: none"> hopA—hopA (pick only links that satisfy abstract hopA). hopB—None (pick any links).
Traverse nodes that are members of hopA by taking any kinds of links, followed by nodes that are members of hopB taking any kind of links.	Loose	[edit protocols mpls] Path path_hopA_l_hopB_l { hopA abstract loose; hopB abstract loose; }	<ul style="list-style-type: none"> hopA—All members of abstract hopA. That is, A1, A2...An. hopB—All members of abstract hopB. That is, B1, B2...Bn. 	None (pick any links).

Table 13: Using Abstract Hops in Path Constraints (continued)

Purpose of Path Constraint	Abstract Hop Qualifier	Configuration	Viable Router Set	Affinity
Traverse nodes that are members of hopA by taking any kinds of links, followed by nodes that are members of hopB taking only links that satisfy hopB.	Loose and strict	[edit protocols mpls] Path path_hopA_l_hopB_s { hopA abstract loose; hopB abstract strict; }	<ul style="list-style-type: none"> hopA—Intersection of the members of hopA and hopB. When an abstract hop is followed by a strict abstract hop, the intersection of the two member sets is considered as viable router set. hopB—All members of abstract hopB. That is, B1, B2...Bn. 	<ul style="list-style-type: none"> hopA—None (pick any links). hopB—hopB (pick only links that satisfy abstract hopB).

Figure 30 on page 439 displays path constraints for abstract hops hopA, hopB, and hopC with loose, strict, and loose abstract hop qualifiers, respectively.

Figure 30: Sample Path Constraints for Abstract Hops

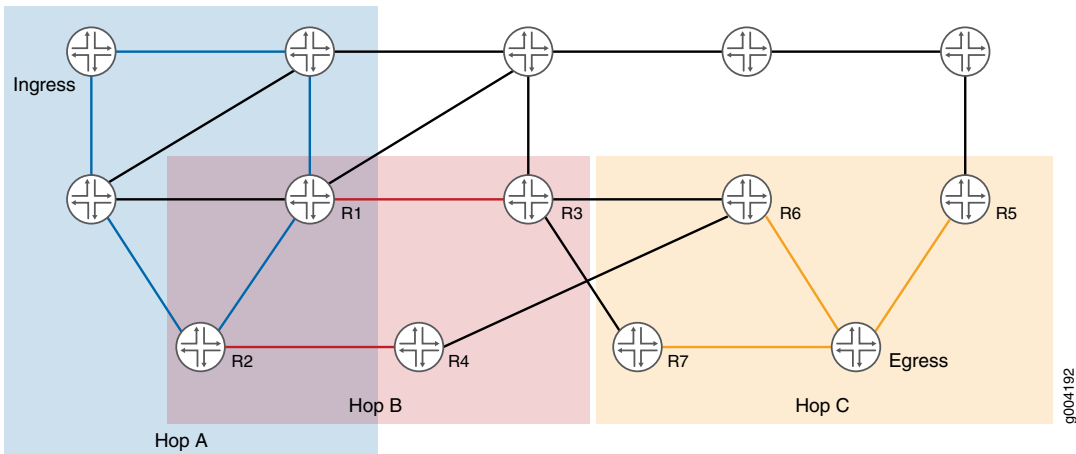

The Constrained Shortest Path First passes for the abstract hops are as follows:

- Pass 1 associated with hopA
 - Viable routers—Routers R1 and R2 (intersection of hopA and hopB, as hopB is a strict abstract hop).
 - Affinity—None (as hopA is loose).

- Pass 2 associated with hopB
 - Viable routers—Routers R1, R2, R3, and R4
 - Affinity—Pick only hopB-compliant links (as hopB is a strict abstract hop).
- Pass 3 associated with hopC
 - Viable routers—Routers R5, R6, R7, and the egress router.
 - Affinity—None (as hopC is a loose abstract hop).

Path Computation and Backtracking

In each Constrained Shortest Path First pass, when the nearest router from a viable router set is reached using links satisfying the affinity figured for the pass, the abstract hop associated with the pass is said to be processed. The viable router thus reached serves as the start for the next constraint pass. If any constraint pass fails, and it is not the one with the ingress router as start router, then the pass is backtracked to the previous pass and the process is repeated.

Sample Backtracking

When a Constrained Shortest Path First pass p (other than the first one) fails, the exit router of the previous pass ($p - 1$) that served as start for the current pass p is disqualified in the viable router set of the previous pass ($p - 1$). Then the previous pass ($p - 1$) is re-executed to find the next best exit router or destination for the pass $p - 1$ from the viable router set.

The router thus determined serves as the new start router for the pass p . This procedure is repeated as long as there are failures and there are viable routers that are not explored.

The **show mpls lsp abstract-hop-computation name *lsp-name*** command provides the various computation passes involved per LSP and the qualifying exit routers for each pass. The command output also gives the affinity per pass, and shows the current start router chosen for the pass. For each viable router, the state of backtracking is displayed, where it can be either valid or disqualified.

```
user@host> show mpls lsp abstract-computation
```

```
Path computation using abstract hops for LSP: lsp1
Path type: Primary, Path name: path1

Credibility: 0, Total no of CSPF passes: 2
CSPF pass no: 0 Start address of the pass: 128.102.173.123
Affinity: hopA
CSPF pass no: 1 Start address of the pass: 0.0.0.0
Destination: 128.102.172.157, , State: VALID

Path type: Standby, Path name: path2
```



```

Credibility: 0, Total no of CSPF passes: 3
CSPF pass no: 0 Start address of the pass: 128.102.173.123
Destination: 128.102.166.237, , State: VALID
Affinity: hopA
CSPF pass no: 1 Start address of the pass: 128.102.166.237
Destination: 128.102.160.211, , State: VALID
Destination: 128.102.165.5, , State: VALID
Destination: 128.102.166.237, , State: VALID
Destination: 128.102.172.157, , State: VALID
Destination: 128.102.172.196, , State: VALID
Affinity: hopB
CSPF pass no: 2 Start address of the pass: 128.102.172.196
Destination: 128.102.172.157, , State: VALID

```

The output field **Credibility** indicates the credibility associated with the interior gateway protocol in use.

Example: Configuring Abstract Hops for MPLS LSPs

IN THIS SECTION

- [Requirements | 441](#)
- [Overview | 442](#)
- [Configuration | 444](#)
- [Verification | 459](#)

This example shows how to configure abstract hops for MPLS label-switched paths (LSPs). Abstract hops combine the key features of existing traffic engineering constraints that enables the user to specify an order-aware and resilient path constraint for MPLS LSPs.

Requirements

This example uses the following hardware and software components:

- Six devices that can be a combination of M Series Multiservice Edge Routers, MX Series 5G Universal Routing Platforms, T Series Core Routers, and PTX Series Packet Transport Routers.
- Junos OS Release 17.1 or later running on all the devices.

Before you begin:

- Configure the device interfaces.
- Configure the device router ID and assign an autonomous system (AS) number.
- Configure RSVP on all the devices.
- Configure OSPF or any other interior gateway protocol on all the devices.
- Configure administrative groups, extended administrative groups, and Shared Risk Link Groups (SRLGs) on all the devices.

Overview

Junos OS Release 17.1 introduces abstract hops, which are user-defined router clusters or groups. Similar to the sequence of real-hop constraints (strict or loose), a sequence of abstract hops can be used for setting up a label-switched path (LSP). A path can use a combination of real and abstract hops as constraints.

An abstract hop is a logical combination of the existing traffic engineering constraints, such as administrative groups, extended administrative groups, and SRLGs, along with the ordering property of real hops. As a result, when a sequence of abstract hops is used in a path constraint, ordering is achieved among the groups of routers that meet a logical combination of link or node attributes called constituent attributes.

To configure abstract hops:

- Create constituent lists with constituent traffic engineering attributes by including the **constituent-list list-name** statement at the **[edit protocols mpls]** hierarchy level.
- Include the constituent lists in the abstract hop definition at the **[edit protocols mpls abstract-hop abstract-hop-name]** hierarchy level.
- Define path constraints that use abstract hops at the **[edit protocols mpls path path-name]** hierarchy level.

Take the following guidelines under consideration when configuring abstract hops for MPLS LSPs:

- Abstract hops are supported only in the master routing instance of a device.
- IPv6 destinations are not supported in abstract hop constraints (only IPv4 destinations work).
- Abstract hops can be strict or loose constraints.
- Abstract hops support in Junos OS Release 17.1 is provided only for intra-area MPLS LSPs and not for inter-domain, or inter-area LSPs.
- Abstract hop constraints is enabled for regular point-to-point LSPs only. Other types of MPLS LSPs, such as point-to-multipoint LSPs, externally controlled bidirectional LSPs, dynamic container LSPs, RSVP automesh LSPs, and inter-area LSPs are not supported with abstract hops configuration.
- Abstract hops do not enable computation of overall shortest path for LSPs.
- An abstract hop must not be referred to more than once in the same path constraint.

- Abstract hop constraint specifications do not affect the support for Graceful Routing Engine switchover (GRES), unified in-service software upgrade (ISSU), and nonstop routing (NSR).
- Abstract hop constraint specifications do not affect overall network performance. However, the time taken for constrained shortest path first computation increases with abstract hop configuration. The setup time for an abstract hop LSP is more than the time taken to set up an LSP without abstract hop configuration.


Topology

Figure 31 on page 443 illustrates a sample network topology configured with abstract hops. Devices R0 and R3 are each connected to hosts (Host 1 and Host 2). Devices R4 and R5 are each connected to Devices R0, R1, R2, and R3. Devices R1 and R2 are also directly connected to each other.

Devices R0 and R3 are configured under the same autonomous system—AS 64496. An MPLS LSP is configured from Device R0 through Device R3 with one primary path and two secondary paths (standby and nonstandby secondary paths).

Four constituent lists—c1, c2, c3, and c4—are created using three SRLGs (g1, g2, and g3), three administrative groups (green, blue, and red), and one extended administrative group (gold). Three abstract hops (ah1, ah2, and ah3) are defined using the configured constituent lists, and are specified as path constraints. Abstract hop ah1 is specified as constraint for the primary path, while abstract hops ah2 and ah3 are specified as constraints for the secondary standby path and the secondary nonstandby path, respectively.

Figure 31: Configuring Abstract Hop Path Constraint

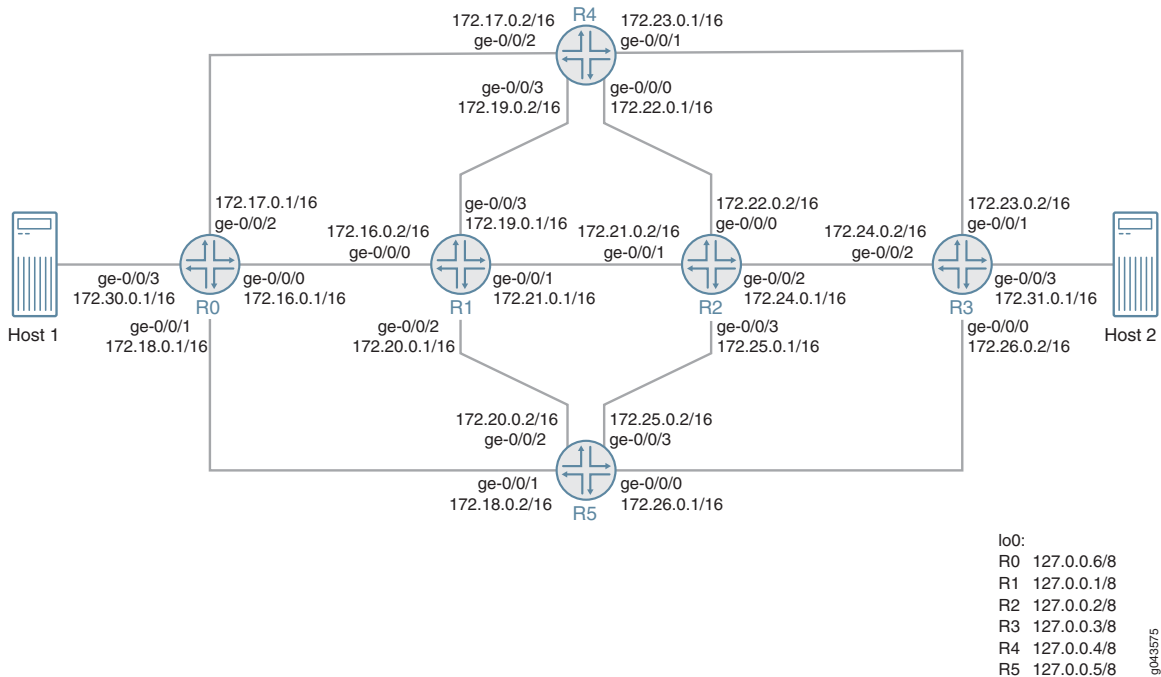

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

Device R0

```

set chassis network-services ip
set interfaces ge-0/0/0 unit 0 family inet address 172.16.0.1/16
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 172.18.0.1/16
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 172.17.0.1/16
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 172.30.0.1/16
set interfaces lo0 unit 0 family inet address 127.0.0.6/8
set routing-options srlg g1 srlg-value 100
set routing-options srlg g1 srlg-cost 1000
set routing-options srlg g2 srlg-value 200
set routing-options srlg g2 srlg-cost 2000
set routing-options srlg g3 srlg-value 300
set routing-options srlg g3 srlg-cost 3000
set routing-options administrative-groups-extended-range minimum 50000
set routing-options administrative-groups-extended-range maximum 60000
set routing-options administrative-groups-extended gold group-value 50000
set routing-options router-id 127.0.0.6
set routing-options autonomous-system 64496
set routing-options forwarding-table export test
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface ge-0/0/0.0 bandwidth 80m
set protocols rsvp interface ge-0/0/2.0 bandwidth 200m
set protocols rsvp interface ge-0/0/1.0 bandwidth 500m
set protocols mpls administrative-groups green 0
set protocols mpls administrative-groups blue 1
set protocols mpls administrative-groups red 2
set protocols mpls label-switched-path R0-R31 to 127.0.0.3
set protocols mpls label-switched-path R0-R31 primary prim
set protocols mpls label-switched-path R0-R31 secondary stdby standby
set protocols mpls label-switched-path R0-R31 secondary nonstdby
set protocols mpls path path_primary 172.16.0.2 strict

```

```

set protocols mpls path path_primary 172.21.0.2 strict
set protocols mpls path path_primary 172.24.0.2 strict
set protocols mpls path path_ter_nonstdby 172.18.0.1 strict
set protocols mpls path path_ter_nonstdby 172.26.0.2 strict
set protocols mpls path path_sec_stdby 172.17.0.2 strict
set protocols mpls path path_sec_stdby 172.23.0.2 strict
set protocols mpls path prim ah1 abstract
set protocols mpls path prim ah1 strict
set protocols mpls path stdby ah2 abstract
set protocols mpls path stdby ah2 strict
set protocols mpls path nonstdby ah3 abstract
set protocols mpls path nonstdby ah3 strict
set protocols mpls constituent-list c1 srlg g1
set protocols mpls constituent-list c1 administrative-group green
set protocols mpls constituent-list c2 administrative-group green
set protocols mpls constituent-list c2 administrative-group-extended gold
set protocols mpls constituent-list c3 srlg g2
set protocols mpls constituent-list c3 administrative-group red
set protocols mpls constituent-list c3 administrative-group-extended gold
set protocols mpls constituent-list c4 srlg g3
set protocols mpls constituent-list c4 administrative-group blue
set protocols mpls constituent-list c4 administrative-group-extended gold
set protocols mpls abstract-hop ah1 operator AND
set protocols mpls abstract-hop ah1 constituent-list c1 include-all-list
set protocols mpls abstract-hop ah1 constituent-list c2 include-all-list
set protocols mpls abstract-hop ah2 operator AND
set protocols mpls abstract-hop ah2 constituent-list c3 include-all-list
set protocols mpls abstract-hop ah3 operator AND
set protocols mpls abstract-hop ah3 constituent-list c4 include-all-list
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-0/0/0.0 srlg g1
set protocols mpls interface ge-0/0/0.0 administrative-group green
set protocols mpls interface ge-0/0/0.0 administrative-group-extended gold
set protocols mpls interface ge-0/0/2.0 srlg g2
set protocols mpls interface ge-0/0/2.0 administrative-group red
set protocols mpls interface ge-0/0/2.0 administrative-group-extended gold
set protocols mpls interface ge-0/0/1.0 srlg g3
set protocols mpls interface ge-0/0/1.0 administrative-group blue
set protocols mpls interface ge-0/0/1.0 administrative-group-extended gold
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all

```

```
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set policy-options policy-statement test then load-balance per-packet
```

Device R1

```
set interfaces ge-0/0/0 unit 0 family inet address 172.16.0.2/16
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 172.21.0.1/16
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 172.20.0.1/16
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 172.19.0.1/16
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.1/8
set routing-options srlg g1 srlg-value 100
set routing-options srlg g1 srlg-cost 1000
set routing-options srlg g2 srlg-value 200
set routing-options srlg g2 srlg-cost 2000
set routing-options srlg g3 srlg-value 300
set routing-options srlg g3 srlg-cost 3000
set routing-options administrative-groups-extended-range minimum 50000
set routing-options administrative-groups-extended-range maximum 60000
set routing-options administrative-groups-extended gold group-value 50000
set routing-options router-id 127.0.0.1
set protocols rsvp interface fxp0.0 disable
set protocols mpls administrative-groups green 0
set protocols mpls administrative-groups blue 1
set protocols mpls administrative-groups red 2
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-0/0/0.0 srlg g1
set protocols mpls interface ge-0/0/0.0 administrative-group green
set protocols mpls interface ge-0/0/0.0 administrative-group-extended gold
set protocols mpls interface ge-0/0/1.0 srlg g1
set protocols mpls interface ge-0/0/1.0 administrative-group green
set protocols mpls interface ge-0/0/1.0 administrative-group-extended gold
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
```

Device R2

```

set interfaces ge-0/0/0 unit 0 family inet address 172.22.0.2/16
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 172.21.0.2/16
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 172.24.0.1/16
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 172.25.0.1/16
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.2/8
set routing-options srlg g1 srlg-value 100
set routing-options srlg g1 srlg-cost 1000
set routing-options srlg g2 srlg-value 200
set routing-options srlg g2 srlg-cost 2000
set routing-options srlg g3 srlg-value 300
set routing-options srlg g3 srlg-cost 3000
set routing-options administrative-groups-extended-range minimum 50000
set routing-options administrative-groups-extended-range maximum 60000
set routing-options administrative-groups-extended gold group-value 50000
set routing-options router-id 127.0.0.2
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols mpls administrative-groups green 0
set protocols mpls administrative-groups blue 1
set protocols mpls administrative-groups red 2
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-0/0/1.0 srlg g1
set protocols mpls interface ge-0/0/1.0 administrative-group green
set protocols mpls interface ge-0/0/1.0 administrative-group-extended gold
set protocols mpls interface ge-0/0/2.0 srlg g1
set protocols mpls interface ge-0/0/2.0 administrative-group green
set protocols mpls interface ge-0/0/2.0 administrative-group-extended gold
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

Device R3

```

set interfaces ge-0/0/0 unit 0 family inet address 172.26.0.2/16
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 172.23.0.2/16
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 172.24.0.2/16
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 172.31.0.1/16
set interfaces lo0 unit 0 family inet address 127.0.0.3/8
set routing-options srlg g1 srlg-value 100
set routing-options srlg g1 srlg-cost 1000
set routing-options srlg g2 srlg-value 200
set routing-options srlg g2 srlg-cost 2000
set routing-options srlg g3 srlg-value 300
set routing-options srlg g3 srlg-cost 3000
set routing-options administrative-groups-extended-range minimum 50000
set routing-options administrative-groups-extended-range maximum 60000
set routing-options administrative-groups-extended gold group-value 50000
set routing-options router-id 127.0.0.3
set routing-options autonomous-system 64496
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols mpls administrative-groups green 0
set protocols mpls administrative-groups blue 1
set protocols mpls administrative-groups red 2
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-0/0/2.0 srlg g1
set protocols mpls interface ge-0/0/2.0 administrative-group green
set protocols mpls interface ge-0/0/2.0 administrative-group-extended gold
set protocols mpls interface ge-0/0/1.0 srlg g2
set protocols mpls interface ge-0/0/1.0 administrative-group red
set protocols mpls interface ge-0/0/1.0 administrative-group-extended gold
set protocols mpls interface ge-0/0/0.0 srlg g3
set protocols mpls interface ge-0/0/0.0 administrative-group blue
set protocols mpls interface ge-0/0/0.0 administrative-group-extended gold
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

Device R4


```

set interfaces ge-0/0/0 unit 0 family inet address 172.22.0.1/16
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 172.23.0.1/16
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 172.17.0.2/16
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 172.19.0.2/16
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.4/32
set routing-options srlg g1 srlg-value 100
set routing-options srlg g1 srlg-cost 1000
set routing-options srlg g2 srlg-value 200
set routing-options srlg g2 srlg-cost 2000
set routing-options srlg g3 srlg-value 300
set routing-options srlg g3 srlg-cost 3000
set routing-options administrative-groups-extended-range minimum 50000
set routing-options administrative-groups-extended-range maximum 60000
set routing-options administrative-groups-extended gold group-value 50000
set routing-options router-id 127.0.0.4
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols mpls administrative-groups green 0
set protocols mpls administrative-groups blue 1
set protocols mpls administrative-groups red 2
set protocols mpls icmp-tunneling
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-0/0/2.0 srlg g2
set protocols mpls interface ge-0/0/2.0 administrative-group red
set protocols mpls interface ge-0/0/2.0 administrative-group-extended gold
set protocols mpls interface ge-0/0/1.0 srlg g2
set protocols mpls interface ge-0/0/1.0 administrative-group red
set protocols mpls interface ge-0/0/1.0 administrative-group-extended gold
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

Device R5

```

set interfaces ge-0/0/0 unit 0 family inet address 172.26.0.1/16

```

```

set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 172.18.0.2/16
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 172.20.0.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 172.25.0.2/16
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.5/8
set routing-options srlg g1 srlg-value 100
set routing-options srlg g1 srlg-cost 1000
set routing-options srlg g2 srlg-value 200
set routing-options srlg g2 srlg-cost 2000
set routing-options srlg g3 srlg-value 300
set routing-options srlg g3 srlg-cost 3000
set routing-options administrative-groups-extended-range minimum 50000
set routing-options administrative-groups-extended-range maximum 60000
set routing-options administrative-groups-extended gold group-value 50000
set routing-options router-id 127.0.0.5
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols mpls administrative-groups green 0
set protocols mpls administrative-groups blue 1
set protocols mpls administrative-groups red 2
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-0/0/1.0 srlg g3
set protocols mpls interface ge-0/0/1.0 administrative-group blue
set protocols mpls interface ge-0/0/1.0 administrative-group-extended gold
set protocols mpls interface ge-0/0/0.0 srlg g3
set protocols mpls interface ge-0/0/0.0 administrative-group blue
set protocols mpls interface ge-0/0/0.0 administrative-group-extended gold
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device R0:

1. Enable enhanced IP network services on Device R0.

```
[edit chassis]
user@R0# set network-services ip
```

2. Configure the interfaces on Device R0, including the loopback interface.

```
[edit interfaces]
user@R0# set ge-0/0/0 unit 0 family inet address 172.16.0.1/16
user@R0# set ge-0/0/0 unit 0 family mpls
user@R0# set ge-0/0/1 unit 0 family inet address 172.18.0.1/16
user@R0# set ge-0/0/1 unit 0 family mpls
user@R0# set ge-0/0/2 unit 0 family inet address 172.17.0.1/16
user@R0# set ge-0/0/2 unit 0 family mpls
user@R0# set ge-0/0/3 unit 0 family inet address 172.30.0.1/16
user@R0# set lo0 unit 0 family inet address 127.0.0.6/8
```

3. Assign the router ID and autonomous system number for Device R0.

```
[edit routing-options]
user@R0# set router-id 127.0.0.6
user@R0# set autonomous-system 64496
```

4. Configure the SRLG definitions.

```
[edit routing-options]
user@R0# set srlg g1 srlg-value 100
user@R0# set srlg g1 srlg-cost 1000
user@R0# set srlg g2 srlg-value 200
user@R0# set srlg g2 srlg-cost 2000
user@R0# set srlg g3 srlg-value 300
user@R0# set srlg g3 srlg-cost 3000
```

5. Configure the extended administrative group definitions.

```
[edit routing-options]
user@R0# set administrative-groups-extended-range minimum 50000
user@R0# set administrative-groups-extended-range maximum 60000
user@R0# set administrative-groups-extended gold group-value 50000
```

6. Configure the administrative group definitions.

```
[edit protocols]
user@R0# set mpls administrative-groups green 0
user@R0# set mpls administrative-groups blue 1
user@R0# set mpls administrative-groups red 2
```

7. Configure MPLS on all the interfaces of Device R0, excluding the management interface.

```
[edit protocols]
user@R0# set mpls interface all
user@R0# set mpls interface fxp0.0 disable
```

8. Assign the interfaces of Device R0 with the configured traffic engineering attributes.

```
[edit protocols]
user@R0# set mpls interface ge-0/0/0.0 srlg g1
user@R0# set mpls interface ge-0/0/0.0 administrative-group green
user@R0# set mpls interface ge-0/0/0.0 administrative-group-extended gold
user@R0# set mpls interface ge-0/0/2.0 srlg g2
user@R0# set mpls interface ge-0/0/2.0 administrative-group red
user@R0# set mpls interface ge-0/0/2.0 administrative-group-extended gold
user@R0# set mpls interface ge-0/0/1.0 srlg g3
user@R0# set mpls interface ge-0/0/1.0 administrative-group blue
user@R0# set mpls interface ge-0/0/1.0 administrative-group-extended gold
```

9. Configure an LSP connecting Device R0 with Device R3, and assign primary and secondary path attributes to the LSP.

```
[edit protocols]
user@R0# set mpls label-switched-path R0-R31 to 127.0.0.3
user@R0# set mpls label-switched-path R0-R31 primary prim
user@R0# set mpls label-switched-path R0-R31 secondary stdby standby
user@R0# set mpls label-switched-path R0-R31 secondary nonstdby
```

10. Define the primary and secondary paths for the R0-R31 LSP.

```
[edit protocols]
user@R0# set mpls path path_primary 172.16.0.2 strict
user@R0# set mpls path path_primary 172.21.0.2 strict
user@R0# set mpls path path_primary 172.24.0.2 strict
user@R0# set mpls path path_ter_nonstdby 172.18.0.1 strict
```

```

user@R0# set mpls path path_ter_nonstdby 172.26.0.2 strict
user@R0# set mpls path path_sec_stdby 172.17.0.2 strict
user@R0# set mpls path path_sec_stdby 172.23.0.2 strict

```

11. Create constituent lists with constituent traffic engineering attributes for abstract-hop definitions.

```

[edit protocols]
user@R0# set mpls constituent-list c1 srlg g1
user@R0# set mpls constituent-list c1 administrative-group green
user@R0# set mpls constituent-list c2 administrative-group green
user@R0# set mpls constituent-list c2 administrative-group-extended gold
user@R0# set mpls constituent-list c3 srlg g2
user@R0# set mpls constituent-list c3 administrative-group red
user@R0# set mpls constituent-list c3 administrative-group-extended gold
user@R0# set mpls constituent-list c4 srlg g3
user@R0# set mpls constituent-list c4 administrative-group blue
user@R0# set mpls constituent-list c4 administrative-group-extended gold

```

12. Define abstract hops by assigning the configured constituent lists and respective operators.

```

[edit protocols]
user@R0# set mpls abstract-hop ah1 operator AND
user@R0# set mpls abstract-hop ah1 constituent-list c1 include-all-list
user@R0# set mpls abstract-hop ah1 constituent-list c2 include-all-list
user@R0# set mpls abstract-hop ah2 operator AND
user@R0# set mpls abstract-hop ah2 constituent-list c3 include-all-list
user@R0# set mpls abstract-hop ah3 operator AND
user@R0# set mpls abstract-hop ah3 constituent-list c4 include-all-list

```

13. Define constraints for the configured paths by including abstract hop definitions.

```

[edit protocols]
user@R0# set mpls path prim ah1 abstract
user@R0# set mpls path prim ah1 strict
user@R0# set mpls path stdby ah2 abstract
user@R0# set mpls path stdby ah2 strict
user@R0# set mpls path nonstdby ah3 abstract
user@R0# set mpls path nonstdby ah3 strict

```

14. Configure RSVP on Device R0. Enable RSVP on all the interfaces of Device R0, excluding the management interface and interface connecting to Host1, and assign bandwidth values.

```
[edit protocols]
user@R0# set rsvp interface all aggregate
user@R0# set rsvp interface fxp0.0 disable
user@R0# set rsvp interface ge-0/0/0.0 bandwidth 80m
user@R0# set rsvp interface ge-0/0/2.0 bandwidth 200m
user@R0# set rsvp interface ge-0/0/1.0 bandwidth 500m
```

15. Configure OSPF on all the interfaces of Device R0, excluding the management interface, and assign traffic engineering capabilities.

```
[edit protocols]
user@R0# set ospf traffic-engineering
user@R0# set ospf area 0.0.0.0 interface all
user@R0# set ospf area 0.0.0.0 interface fxp0.0 disable
```

16. Configure a policy on Device R0 to enable load balancing on a per-packet basis.

```
[edit policy-options]
user@R0# set forwarding-table export test
```

17. Export the load-balancing policy to the forwarding table.

```
[edit policy-options]
user@R0# set policy-statement test then load-balance per-packet
```

Results

From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show routing-options**, **show protocols**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R0# show chassis
network-services ip;
```

```
user@R0# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 172.16.0.1/16;
```

```

    }
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 172.18.0.1/16;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 172.17.0.1/16;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 172.30.0.1/16;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.0.0.6/8;
    }
  }
}

```

user@R0# show routing-options

```

srlg {
  g1 {
    srlg-value 100;
    srlg-cost 1000;
  }
  g2 {
    srlg-value 200;
    srlg-cost 2000;
  }
}

```

```

    }
    g3 {
        srlg-value 300;
        srlg-cost 3000;
    }
}
administrative-groups-extended-range {
    minimum 50000;
    maximum 60000;
}
administrative-groups-extended {
    gold group-value 50000;
}

```

```

user@R0# show protocols
rsvp {
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface ge-0/0/0.0 {
        bandwidth 80m;
    }
    interface ge-0/0/2.0 {
        bandwidth 200m;
    }
    interface ge-0/0/1.0 {
        bandwidth 500m;
    }
}
mpls {
    administrative-groups {
        green 0;
        blue 1;
        red 2;
    }
    label-switched-path R0-R31 {
        to 127.0.0.3;
        adaptive;
        auto-bandwidth {
            adjust-interval 300;
            adjust-threshold 5;
            minimum-bandwidth 10m;
            maximum-bandwidth 1g;
        }
    }
}

```



```

    }
    primary prim;
    secondary stdby {
        standby;
    }
    secondary nonstdby;
}
path path_primary {
    172.16.0.2 strict;
    172.21.0.2 strict;
    172.24.0.2 strict;
}
path path_ter_nonstdby {
    172.18.0.1 strict;
    172.26.0.2 strict;
}
path path_sec_stdby {
    172.17.0.2 strict;
    172.23.0.2 strict;
}
path prim {
    ah1 abstract strict;
}
path stdby {
    ah2 abstract strict;
}
path nonstdby {
    ah3 abstract strict;
}
constituent-list c1 {
    srlg g1;
    administrative-group green;
}
constituent-list c2 {
    administrative-group green;
    administrative-group-extended gold;
}
constituent-list c3 {
    srlg g2;
    administrative-group red;
    administrative-group-extended gold;
}
constituent-list c4 {
    srlg g3;

```

```

    administrative-group blue;
    administrative-group-extended gold;
}
abstract-hop ah1 {
    operator AND;
    constituent-list {
        c1 include-all-list;
        c2 include-all-list;
    }
}
abstract-hop ah2 {
    operator AND;
    constituent-list {
        c3 include-all-list;
    }
}
abstract-hop ah3 {
    operator AND;
    constituent-list {
        c4 include-all-list;
    }
}
interface all;
interface fxp0.0 {
    disable;
}
interface ge-0/0/0.0 {
    srlg g1;
    administrative-group green;
    administrative-group-extended gold;
}
interface ge-0/0/2.0 {
    srlg g2;
    administrative-group red;
    administrative-group-extended gold;
}
interface ge-0/0/1.0 {
    srlg g3;
    administrative-group blue;
    administrative-group-extended gold;
}
}
ospf {
    traffic-engineering;

```

```

area 0.0.0.0 {
  interface all;
  interface fxp0.0 {
    disable;
  }
}

```

```

user@R0# show policy-options
policy-statement test {
  then {
    load-balance per-packet;
  }
}

```

Verification

IN THIS SECTION

- [Verifying Abstract Hop Configuration | 459](#)
- [Verifying Abstract Hop Path Computation | 460](#)

Confirm that the configuration is working properly.

Verifying Abstract Hop Configuration

Purpose

Verify the members of the abstract hop definition on Device R0 by issuing the **show mpls abstract-hop-membership** command, which displays the abstract hop membership tables.

Action

From operational mode, run the **show mpls abstract-hop-membership** command.

```
user@R0> show mpls abstract-hop-membership
```

Abstract hop: ah1

```

  Credibility: 0
Address: 127.0.0.6
Address: 127.0.0.1

```

```
Address: 127.0.0.2
Address: 127.0.0.3
```

Abstract hop: ah2

```
Credibility: 0
Address: 127.0.0.6
Address: 127.0.0.3
Address: 127.0.0.4
```

Abstract hop: ah3

```
Credibility: 0
Address: 127.0.0.6
Address: 127.0.0.3
Address: 127.0.0.5
```

Meaning

The **show mpls abstract-hop-membership** command output provides the abstract hop to traffic engineering database node mapping. The **Credibility** field displays the credibility value associated with the interior gateway protocol in use (OSPF).

Verifying Abstract Hop Path Computation

Purpose

Verify the abstract computation preprocessing for LSPs on Device R0 by issuing the **show mpls lsp abstract-computation** command.

Action

From operational mode, run the **show mpls lsp abstract-computation** command.

```
user@R0> show mpls lsp abstract-computation
```

```
Path computation using abstract hops for LSP: R0-R31
```

```
Path type: Primary, Path name: prim
```

```
Credibility: 0, Total no of CSPF passes: 2
```

```
CSPF pass no: 0
```

```
Start address of the pass: 127.0.0.6
```

```
Destination: 127.0.0.1, State: VALID
```

```
Destination: 127.0.0.2, State: VALID
```

```
Destination: 127.0.0.3, State: VALID
```

```
Affinity: ah1
```

```
CSPF pass no: 1
```

```

    Start address of the pass: 127.0.0.1
      Destination: 127.0.0.3, State: VALID
Path type: Secondary, Path name: nonstdby
Path type: Standby, Path name: stdby

Credibility: 0, Total no of CSPF passes: 2
  CSPF pass no: 0
    Start address of the pass: 127.0.0.6
      Destination: 127.0.0.3, State: VALID
      Destination: 127.0.0.4, State: VALID
      Affinity: ah2
  CSPF pass no: 1
    Start address of the pass: 127.0.0.4
      Destination: 127.0.0.3, State: VALID

```

Meaning

The **show mpls lsp abstract-hop-computation** command output provides the various computation passes involved per LSP, and the qualifying exit devices for each pass. The command output also gives the affinity per pass, and shows the current start device chosen for the pass. For each viable router (device), the state of backtracking is displayed, where it can either be valid or disqualified.

The **Credibility** field indicates the credibility value associated with the interior gateway protocol in use (OSPF).

Configuring the Maximum Number of MPLS Labels

For interfaces that you configure for MPLS applications, you can set the maximum number of labels upon which MPLS can operate.

By default, the maximum number of labels is three. You can change the maximum to four labels or five labels for applications that require four or five labels.

Starting in Junos OS Release 19.1R1, the maximum number of labels that can be pushed by the egress Packet Forwarding Engine (PFE) can be leveraged, wherein the number of labels that can be pushed for an MPLS next hop is the number of labels the device is capable of pushing, or the [maximum-labels](#) configured under **family mpls** of the outgoing interface, whichever is smaller. This support is enabled on MX Series routers with MPC and MIC interfaces, and PTX Series routers with third-generation FPCs.

The increased label push capability is useful for features, such as segment routing traffic-engineering LSPs and RSVP-TE pop-and-forward LSPs. All existing functionality of applications using MPLS next hops continue to work with the increased label push capability. This includes:

- All OAM utilities, such as lsping, traceroute, and BFD for MPLS LSPs.

- Monitoring utilities, such as `lspmon`, and `LM DM` for MPLS LSPs.

The **`show route table`** and **`show route forwarding-table`** command outputs are enhanced to display up to 16 labels per next hop component.

For example:

```
user@host> show route table inet.3

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

11.0.0.17/32          *[SPRING-TE/8] 00:02:16, metric 1
                    > to 192.1.2.2 via ge-0/0/2.0, Push 1000115, Push 1000114,
Push 1000113, Push 1000112, Push 1000111, Push 1000110, Push 1000109, Push 1000108,
Push 1000107, Push 1000106, Push 1000105, Push 1000104, Push 1000103, Push 1000102,
Push 1000101(top)
                    to 192.1.3.2 via ge-0/0/4.0, Push 1000115, Push 1000114,
Push 1000113, Push 1000112, Push 1000111, Push 1000110, Push 1000109, Push 1000108,
Push 1000107, Push 1000106, Push 1000105, Push 1000104, Push 1000103, Push 1000102,
Push 1000101(top)
```

NOTE: When the maximum number of MPLS labels of an interface is modified, the MPLS interface is bounced. All LDP and RSVP sessions on that interface are restarted, resulting in all LSPs over that interface to flap.

For example, suppose you configure a two-tier carrier-of-carriers VPN service for customers who provide VPN service. A carrier-of-carrier VPN is a two-tiered relationship between a provider carrier (Tier 1 ISP) and a customer carrier (Tier 2 ISP). In a carrier-of-carrier VPN, the provider carrier provides a VPN backbone network for the customer carrier. The customer carrier in turn provides Layer 3 VPN service to its end customers. The customer carrier sends labeled traffic to the provider carrier to deliver it to the next hop on the other side of the provider carrier's network. This scenario requires a three-label stack: one label for the provider carrier VPN, another label for the customer carrier VPN, and a third label for the transport route.

If you add fast reroute service, the PE routers in the provider carrier's network must be configured to support a fourth label (the reroute label). If the customer carrier is using LDP as its signaling protocol and the provider carrier is using RSVP, the provider carrier must support LDP over RSVP tunnel service. This additional service requires an additional label, for a total of five labels.

To the customer carrier, the router it uses to connect to the provider carrier's VPN is a PE router. However, the provider carrier views this device as a CE router.

Table 14 on page 463 summarizes the label requirements.

Table 14: Sample Scenarios for Using 3, 4, or 5 MPLS Labels

Number of Labels Required	Scenarios
3	Carrier-of-carriers VPN or a VPN with two labels and fast reroute
4	Combination of carrier-of-carriers and fast reroute
5	Carrier-of-carriers with fast reroute and the customer carrier running LDP, with the provider carrier running RSVP

To configure and monitor the maximum number of labels:

1. Specify the maximum on the logical interface. Apply this configuration to the carrier's PE routers.

```
[edit interfaces ge-0/1/3 unit 0 family mpls]
user@switch# set maximum-labels maximum-limit
```

2. Verify the configuration.

```
[edit system]
user@switch# show interfaces ge-0/1/3.0

Logical interface ge-0/1/3.0 (Index 77) (SNMP ifIndex 507)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 0
  Output packets: 0
  Protocol mpls, MTU: 1480, Maximum labels: 8
  Flags: Is-Primary
```

The command output includes the **Maximum labels: 5** field under the logical interface unit 0.

Configuring MPLS to Pop the Label on the Ultimate-Hop Router

You can control the label value advertised on the egress router of a label-switched path (LSP). The default advertised label is label 3 (Implicit Null Label). If label 3 is advertised, the penultimate-hop router removes the label and sends the packet to the egress router. By enabling ultimate-hop popping, label 0 (IPv4 Explicit Null Label) is advertised. Ultimate-hop popping ensures that any packets traversing an MPLS network include a label.

NOTE: Juniper Networks routers queue packets based on the incoming label. Routers from other vendors might queue packets differently. Keep this in mind when working with networks containing routers from multiple vendors.

To configure MPLS to pop the label on the ultimate-hop router, include the **explicit-null** statement:

```
explicit-null;
```

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

Advertising Explicit Null Labels to BGP Peers

For the IPv4 (**inet**) family only, BGP peers in a routing group can send an explicit NULL label for a set of connected routes (direct and loopback routes) for the inet labeled-unicast and inet6 labeled-unicast NLRI. By default, peers advertise label 3 (implicit NULL). If the **explicit-null** statement is enabled, peers advertise label 0 (explicit NULL). The explicit NULL labels ensures that labels are always present on packets traversing an MPLS network. If the implicit NULL label is used, the penultimate hop router removes the label and sends the packet as a plain IP packet to the egress router. This might cause issues in queuing the packet properly on the penultimate hop router if the penultimate hop is another vendor's router. Some other vendors queue packets based on the CoS bits in the outgoing label rather than the incoming label.

To advertise an explicit null label, include the following statements in the configuration:

```
family inet {
  labeled-unicast {
    aggregate-label {
      community community-name;
    }
    explicit-null {
      connected-only;
    }
  }
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The **connected-only** statement is required to advertise explicit null labels.

To verify that the explicit NULL label is being advertised for connected routes, use the **show route advertising-protocol bgp *neighbor-address*** command.

Understanding MPLS Label Operations on EX Series Switches

IN THIS SECTION

- [MPLS Label-Switched Paths and MPLS Labels on the Switches | 465](#)
- [Reserved Labels | 466](#)
- [MPLS Label Operations on the Switches | 467](#)
- [Penultimate-Hop Popping and Ultimate-Hop Popping | 468](#)

In the traditional packet-forwarding paradigm, as a packet travels from one switch to the next, an independent forwarding decision is made at each hop. The IP network header is analyzed and the next hop is chosen based on this analysis and on the information in the routing table. In an MPLS environment, the analysis of the packet header is made only once, when a packet enters the MPLS tunnel (that is, the path used for MPLS traffic).

When an IP packet enters a label-switched path (LSP), the ingress provider edge (PE) switch examines the packet and assigns it a label based on its destination, placing the label in the packet's header. The label transforms the packet from one that is forwarded based on its IP routing information to one that is forwarded based on information associated with the label. The packet is then forwarded to the next provider switch in the LSP. This switch and all subsequent switches in the LSP do not examine any of the IP routing information in the labeled packet. Rather, they use the label to look up information in their label forwarding table. They then replace the old label with a new label and forward the packet to the next switch in the path. When the packet reaches the egress PE switch, the label is removed, and the packet again becomes a native IP packet and is again forwarded based on its IP routing information.

This topic describes:


MPLS Label-Switched Paths and MPLS Labels on the Switches

When a packet enters the MPLS network, it is assigned to an LSP. Each LSP is identified by a label, which is a short (20-bit), fixed-length value at the front of the MPLS label (32 bits). Labels are used as lookup indexes for the label forwarding table. For each label, this table stores forwarding information. Because no additional parsing or lookup is done on the encapsulated packet, MPLS supports the transmission of any other protocols within the packet payload.

NOTE: The implementation of MPLS on Juniper Networks EX3200 and EX4200 Ethernet Switches supports only single-label packets. However, MPLS on Juniper Networks EX8200 Ethernet Switches supports packets with as many as three labels.

Figure 32 on page 466 shows the encoding of a single label. The encoding appears after data link layer headers, but before any network layer header.

Figure 32: Label Encoding

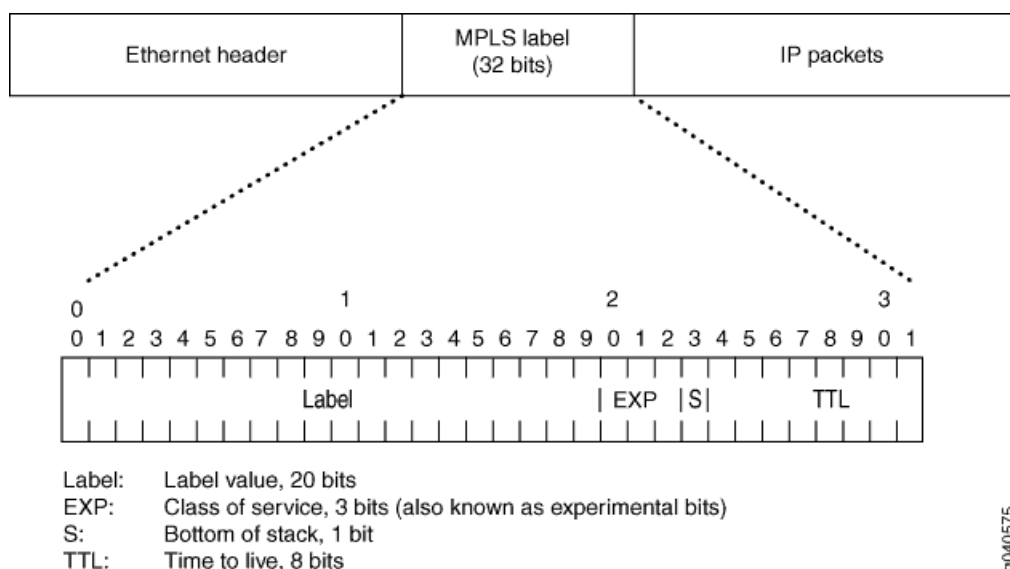

Reserved Labels

Labels range from 0 through 1,048,575. Labels 0 through 999,999 are for internal use.

Some of the reserved labels (in the range 0 through 15) have well-defined meanings. The following reserved labels are used by the switches:

- 0, IPv4 Explicit Null label—This value is valid only when it is the sole label entry (no label stacking). It indicates that the label must be popped on receipt. Forwarding continues based on the IP version 4 (IPv4) packet.
- 1, Router Alert label—When a packet is received with a top label value of 1, it is delivered to the local software module for processing.
- 2, IPv6 Explicit Null label—This value is legal only when it is the sole label entry (no label stacking). It indicates that the label must be popped on receipt.
- 3, Implicit Null label—This label is used in the signaling protocol (RSVP) only to request label popping by the downstream switch. It never actually appears in the encapsulation. Labels with a value of 3 must not be used in the data packet as real labels. No payload type (IPv4 or IPv6) is implied with this label.

MPLS Label Operations on the Switches

EX Series switches support the following label operations:

- Push
- Pop
- Swap

The push operation affixes a new label to the top of the IP packet. For IPv4 packets, the new label is the first label. The time to live (TTL) field value in the packet header is derived from the IP packet header. The push operation cannot be applied to a packet that already has an MPLS label.

The pop operation removes a label from the beginning of the packet. Once the label is removed, the TTL is copied from the label into the IP packet header, and the underlying IP packet is forwarded as a native IP packet

The swap operation removes an existing MPLS label from an IP packet and replaces it with a new MPLS label, based on the following:

- Incoming interface
- Label
- Label forwarding table

Figure 28 on page 426 shows an IP packet without a label arriving on the customer edge interface (**ge-0/0/1**) of the ingress PE switch. The ingress PE switch examines the packet and identifies that packet's destination as the egress PE switch. The ingress PE switch applies label 100 to the packet and sends the MPLS packet to its outgoing MPLS core interface (**ge-0/0/5**). The MPLS packet is transmitted on the MPLS tunnel through the provider switch, where it arrives at interface **ge-0/0/5** with label 100. The provider switch swaps label 100 to label 200 and forwards the MPLS packet through its core interface (**ge-0/0/7**) to the next hop on the tunnel, which is the egress PE switch. The egress PE switch receives the MPLS packet through its core interface (**ge-0/0/7**), removes the MPLS label, and sends the IP packet out of its customer edge interface (**ge-0/0/1**) to a destination that is beyond the tunnel.

Figure 33: MPLS Label Swapping

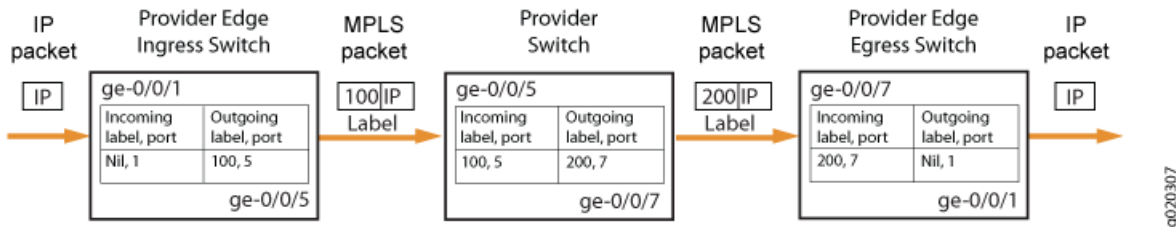


Figure 33 on page 467 shows the path of a packet as it passes in one direction from the ingress PE switch to the egress PE switch. However, the MPLS configuration also allows traffic to travel in the reverse direction. Thus, each PE switch operates as both an ingress switch and an egress switch.

Penultimate-Hop Popping and Ultimate-Hop Popping

The switches enable penultimate-hop popping (PHP) by default with IP over MPLS configurations. With PHP, the penultimate provider switch is responsible for popping the MPLS label and forwarding the traffic to the egress PE switch. The egress PE switch then performs an IP route lookup and forwards the traffic. This reduces the processing load on the egress PE switch, because it is not responsible for popping the MPLS label.

On EX8200 switches, you can choose to use either the default, PHP, or to configure ultimate-hop popping.

- The default advertised label is label 3 (Implicit Null label). If label 3 is advertised, the penultimate-hop switch removes the label and sends the packet to the egress PE switch.
- If ultimate-hop popping is enabled, label 0 (IPv4 Explicit Null label) is advertised and the egress PE switch of the LSP removes the label.

Release History Table

Release	Description
19.1R1	Starting in Junos OS Release 19.1R1, the maximum number of labels that can be pushed by the egress Packet Forwarding Engine (PFE) can be leveraged, wherein the number of labels that can be pushed for an MPLS next hop is the number of labels the device is capable of pushing, or the maximum-labels configured under family mpls of the outgoing interface, whichever is smaller. This support is enabled on MX Series routers with MPC and MIC interfaces, and PTX Series routers with third-generation FPCs.
14.2	Starting with Junos OS Release 14.2, entropy label is supported in mixed mode chassis where the entropy label can be configured without enhanced-ip configuration.

RELATED DOCUMENTATION

[MPLS Overview](#) | [2](#)

LSP Routes

IN THIS SECTION


- [MPLS and Routing Tables](#) | [469](#)
- [Fast Reroute Overview](#) | [471](#)
- [Configuring Fast Reroute](#) | [473](#)

- Detour Merging Process | 474
- Detour Computations | 475
- Fast Reroute Path Optimization | 475
- Configuring the Optimization Interval for Fast Reroute Paths | 476
- Adding LSP-Related Routes to the inet.3 or inet6.3 Routing Table | 476

MPLS and Routing Tables

The IGP and BGP store their routing information in the inet.0 routing table, the main IP routing table. If the **traffic-engineering bgp** command is configured, thereby allowing only BGP to use MPLS paths for forwarding traffic, MPLS path information is stored in a separate routing table, inet.3. Only BGP accesses the inet.3 routing table. BGP uses both inet.0 and inet.3 to resolve next-hop addresses. If the **traffic-engineering bgp-igp** command is configured, thereby allowing the IGP to use MPLS paths for forwarding traffic, MPLS path information is stored in the inet.0 routing table. (Figure 34 on page 469 and Figure 35 on page 470 illustrate the routing tables in the two traffic engineering configurations.)

Figure 34: Routing and Forwarding Tables, traffic-engineering bgp

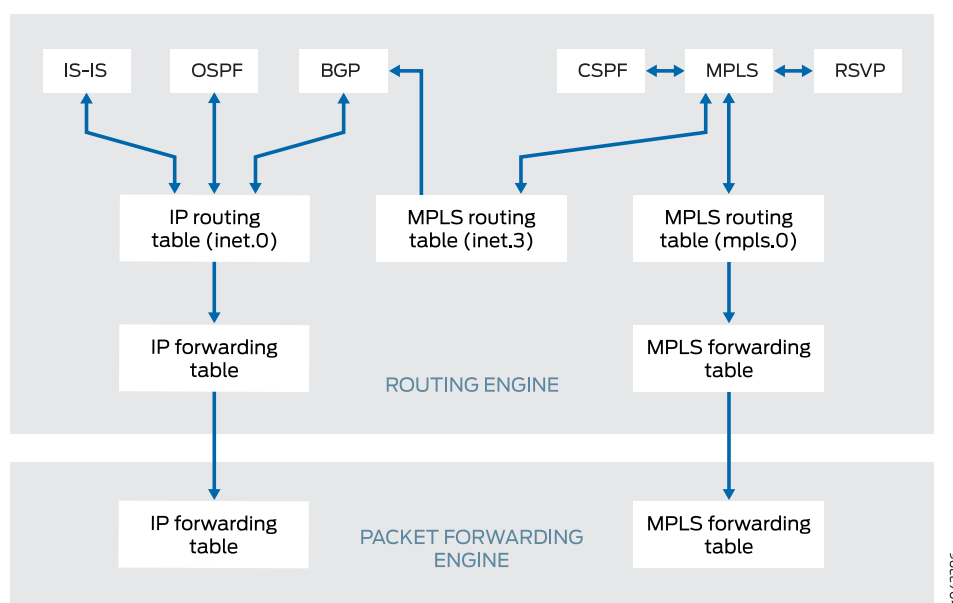


The inet.3 routing table contains the host address of each LSP's egress router. This routing table is used on ingress routers to route packets to the destination egress router. BGP uses the inet.3 routing table on the ingress router to help in resolving next-hop addresses.

Fast Reroute Overview

Fast reroute provides redundancy for an LSP path. When you enable fast reroute, detours are precomputed and preestablished along the LSP. In case of a network failure on the current LSP path, traffic is quickly routed to one of the detours. [Figure 36 on page 471](#) illustrates an LSP from Router A to Router F, showing the established detours. Each detour is established by an upstream node to avoid the link toward the immediate downstream node and the immediate downstream node itself. Each detour might traverse through one or more label-switched routers (or switches) that are not shown in the figure.


Fast reroute protects traffic against any single point of failure between the ingress and egress routers (or switches). If there is a failure in a scaled fast reroute scenario, the devices lose reachability to all the peers that were connected through the failed link. This leads to traffic interruption, as the BGP session among the devices goes down. If there are multiple failures along an LSP, fast reroute itself might fail. Also, fast reroute does not protect against failure of the ingress or egress routers.

Figure 36: Detours Established for an LSP Using Fast Reroute

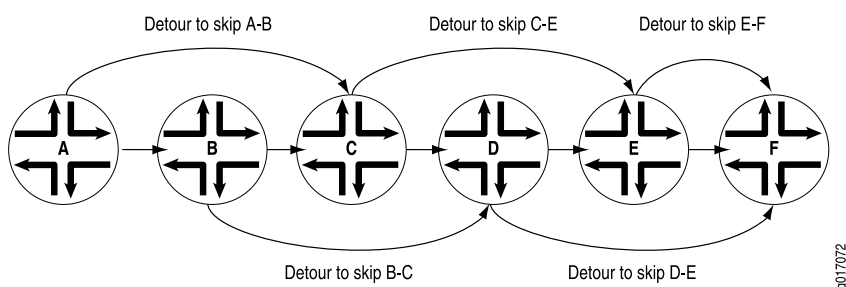

If a node detects that a downstream link has failed (using a link-layer-specific liveness detection mechanism) or that a downstream node has failed (for example, using the RSVP neighbor hello protocol), the node quickly switches the traffic to the detour and, at the same time, signals the ingress router about the link or node failure. [Figure 37 on page 471](#) illustrates the detour taken when the link between Router B and Router C fails.

Figure 37: Detour After the Link from Router B to Router C Fails

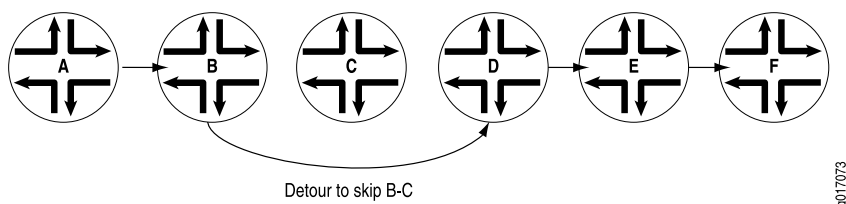

If the network topology is not rich enough (there are not enough routers with sufficient links to other routers), some of the detours might not succeed. For example, the detour from Router A to Router C in [Figure 36 on page 471](#) cannot traverse link A-B and Router B. If such a path is not possible, the detour does not occur.

Note that after the node switches traffic to the detour, it might switch the traffic again to a newly calculated detour soon after. This is because the initial detour route might not be the best route. To make rerouting as fast as possible, the node switches traffic onto the initial detour without first verifying that the detour is valid. Once the switch is made, the node recomputes the detour. If the node determines that the initial detour is still valid, traffic continues to flow over this detour. If the node determines that the initial detour is no longer valid, it again switches the traffic to a newly computed detour.

NOTE: If you issue **show** commands after the node has switched traffic to the initial detour, the node might indicate that the traffic is still flowing over the original LSP. This situation is temporary and should correct itself quickly.

The time required for a fast-rerouting detour to take effect depends on two independent time intervals:


- Amount of time to detect that there is a link or node failure—This interval depends greatly on the link layer in use and the nature of the failure. For example, failure detection on an SONET/SDH link typically is much faster than on a Gigabit Ethernet link, and both are much faster than detection of a router failure.
- Amount of time required to splice the traffic onto the detour—This operation is performed by the Packet Forwarding Engine, which requires little time to splice traffic onto the detour. The time needed can vary depending on the number of LSPs being switched to detours.

Fast reroute is a short-term patch to reduce packet loss. Because detour computation might not reserve adequate bandwidth, the detours might introduce congestion on the alternate links. The ingress router is the only router that is fully aware of LSP policy constraints and, therefore, is the only router able to come up with adequate long-term alternate paths.

Detours are created by use of RSVP and, like all RSVP sessions, they require extra state and overhead in the network. For this reason, each node establishes at most one detour for each LSP that has fast reroute enabled. Creating more than one detour for each LSP increases the overhead, but serves no practical purpose.

To reduce network overhead further, each detour attempts to merge back into the LSP as soon as possible after the failed node or link. If you can consider an LSP that travels through n router nodes, it is possible to create $n - 1$ detours. For instance, in [Figure 38 on page 473](#), the detour tries to merge back into the LSP at Router D instead of at Router E or Router F. Merging back into the LSP makes the detour scalability problem more manageable. If topology limitations prevent the detour from quickly merging back into the LSP, detours merge with other detours automatically.

Figure 38: Detours Merging into Other Detours

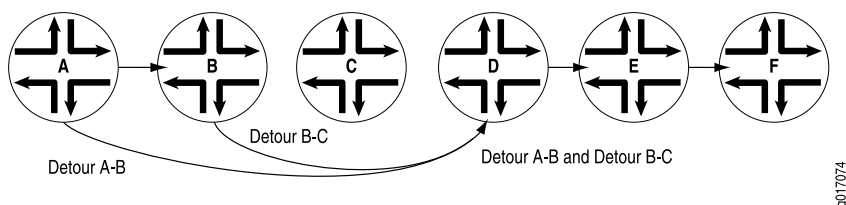

Configuring Fast Reroute

Fast reroute provides a mechanism for automatically rerouting traffic on an LSP if a node or link in an LSP fails, thus reducing the loss of packets traveling over the LSP.

To configure fast reroute on an LSP, include the **fast-reroute** statement on the ingress router (or switch):

```
fast-reroute {
  (bandwidth bps | bandwidth-percent percentage);
  (exclude [ group-names ] | no-exclude );
  hop-limit number;
  (include-all [ group-names ] | no-include-all);
  (include-any [ group-names ] | no-include-any);
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

You do not need to configure fast reroute on the LSP's transit and egress routers (or switches). Once fast reroute is enabled, the ingress router (or switch) signals all the downstream routers (or switches) that fast reroute is enabled on the LSP, and each downstream router does its best to set up detours for the LSP. If a downstream router does not support fast reroute, it ignores the request to set up detours and continues to support the LSP. A router that does not support fast reroute will cause some of the detours to fail, but otherwise has no impact on the LSP.

NOTE: To enable PFE fast reroute, configure a routing policy statement with the **load-balance per-packet** statement at the [edit policy-options policy-statement *policy-name* then] hierarchy level on each of the routers where traffic might be rerouted. See also [“Configuring Load Balancing Across RSVP LSPs” on page 801](#).

By default, no bandwidth is reserved for the rerouted path. To allocate bandwidth for the rerouted path, include either the **bandwidth** statement or the **bandwidth-percent** statement. You can only include one

of these statements at a time. If you do not include either the **bandwidth** statement or the **bandwidth-percent** statement, the default setting is to not reserve bandwidth for the detour path.

When you include the **bandwidth** statement, you can specify the specific amount of bandwidth (in bits per second [bps]) you want to reserve for the detour path. The bandwidth does not need to be identical to that allocated for the LSP.

When you specify a bandwidth percent using the **bandwidth-percent** statement, the detour path bandwidth is computed by multiplying the bandwidth percentage by the bandwidth configured for the main traffic-engineered LSP. For information about how to configure the bandwidth for a traffic-engineered LSP, see [“Configuring Traffic-Engineered LSPs” on page 1121](#).

Hop-limit constraints define how many more routers a detour is allowed to traverse compared with the LSP itself. By default, the hop limit is set to 6. For example, if an LSP traverses 4 routers, any detour for the LSP can be up to 10 (that is, 4 + 6) router hops, including the ingress and egress routers.

By default, a detour inherits the same administrative (coloring) group constraints as its parent LSP when CSPF is determining the alternate path. Administrative groups, also known as link coloring or resource class, are manually assigned attributes that describe the “color” of links, such that links with the same color conceptually belong to the same class. If you specify the **include-any** statement when configuring the parent LSP, all links traversed by the alternate session must have at least one color found in the list of groups. If you specify the **include-all** statement when configuring the parent LSP, all links traversed by the alternate session must have all of the colors found in the list of groups. If you specify the **exclude** statement when configuring the parent LSP, none of the links must have a color found in the list of groups. For more information about administrative group constraints, see [“Configuring Administrative Groups for LSPs” on page 502](#).

Detour Merging Process

This section describes the process used by a router to determine which LSP to select when the router receives path messages from different interfaces with identical Session and Sender Template objects. When this occurs, the router needs to merge the path states.

The router employs the following process to determine when and how to merge path states:

- When all the path messages do not include a fast reroute or a detour object, or when the router is the egress of the LSP, no merging is required. The messages are processed according to RSVP traffic engineering.
- Otherwise, the router *must* record the path state in addition to the incoming interface. If the path messages do not share the same outgoing interface and next-hop router, the router considers them to be independent LSPs and does not merge them.
- For all the path messages that share the same outgoing interface and next-hop router, the router uses the following process to select the final LSP:

- If only one LSP originates from this node, select it as the final LSP.
- If only one LSP contains a fast reroute object, select it as the final LSP.
- If there are several LSPs and some of them have a detour object, eliminate those containing a detour object from the final LSP selection process.
- If several final LSP candidates remain (that is, there are still both detour and protected LSPs), select the LSPs with fast reroute objects.
- If none of the LSPs have fast reroute objects, select the ones without detour objects. If all the LSPs have detour objects, select them all.
- Of the remaining LSP candidates, eliminate from consideration those that traverse nodes that other LSPs avoid.
- If several candidate LSPs still remain, select the one with the shortest explicit route object (ERO) path length. If more than one LSP has the same path length, select one randomly.
- Once the final LSP has been identified, the router must transmit only the path messages that correspond to this LSP. All other LSPs are considered merged at this node.

Detour Computations

Computing and setting up detours is done independently at each node. On a node, if an LSP has fast reroute enabled and if a downstream link or node can be identified, the router performs a Constrained Shortest Path First (CSPF) computation using the information in the local traffic engineering database. For this reason, detours rely on your IGP supporting traffic engineering extensions. Without the traffic engineering database, detours cannot be established.

CSPF initially attempts to find a path that skips the next downstream node. Attempting to find this path provides protection against downstream failures in either nodes or links. If a node-skipping path is not available, CSPF attempts to find a path on an alternate link to the next downstream node. Attempting to find an alternate link provides protection against downstream failures in links only. Detour computations might not succeed the first time. If a computation fails, the router recomputes detours approximately once every refresh interval until the computation succeeds. The RSVP metric for each detour is set to a value in the range from 10,000 through 19,999.

Fast Reroute Path Optimization

A fast reroute protection path is nondeterministic. The actual protection path of a particular node depends on the history of the LSP and the network topology when the fast reroute path was computed. The lack of deterministic behavior can lead to operational difficulties and poorly optimized paths after multiple link flaps in a network. Even in a small network, after a few link flaps fast reroute paths can traverse an arbitrarily large number of nodes and can remain in that state indefinitely. This is inefficient and makes the network less predictable.

Fast reroute optimization addresses this deficiency. It provides a global path optimization timer, allowing you to optimize all LSPs that have fast reroute enabled and a detour path up and running. The timer value can be varied depending on the expected RE processing load.

The fast reroute optimization algorithm is based on the IGP metric only. As long as the new path's IGP metric is lower than the old path's, the CSPF result is accepted, even if the new path might be more congested (higher bandwidth utilization) or traverses more hops.

In conformance with RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*, when a new path is computed and accepted for fast reroute optimization, the existing detour is destroyed first and then the new detour is established. To prevent traffic loss, detours actively protecting traffic are not optimized.

Configuring the Optimization Interval for Fast Reroute Paths

You can enable path optimization for fast reroute by configuring the fast reroute optimize timer. The optimize timer triggers a periodic optimization process that recomputes the fast reroute detour LSPs to use network resources more efficiently.

To enable fast reroute path optimization, specify the number of seconds using the `optimize-timer` option for the **fast-reroute** statement:

```
fast-reroute seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

Adding LSP-Related Routes to the inet.3 or inet6.3 Routing Table

By default, a host route toward the egress router is installed in the inet.3 or inet6.3 routing table. (The host route address is the one you configure in the **to** statement.) Installing the host route allows BGP to perform next-hop resolution. It also prevents the host route from interfering with prefixes learned from dynamic routing protocols and stored in the inet.0 or inet6.0 routing table.

Unlike the routes in the inet.0 or inet6.0 table, routes in the inet.3 or inet6.3 table are not copied to the Packet Forwarding Engine, and hence they cause no changes in the system forwarding table directly. You cannot use the **ping** or **traceroute** command through these routes. The only use for inet.3 or inet6.3 is to permit BGP to perform next-hop resolution. To examine the inet.3 or inet6.3 table, use the **show route table inet.3** or **show route table inet6.3** command.

To inject additional routes into the inet.3 or inet6.3 routing table, include the **install** statement:

```
install {
    destination-prefix <active>;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **static-label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **static-label-switched-path** *lsp-name*]

The specified routes are installed as aliases into the routing table when the LSP is established. Installing additional routes allows BGP to resolve next hops within the specified prefix and to direct additional traffic for these next hops to a particular LSP.

Including the **active** option with the **install** statement installs the specified prefix into the inet.0 or inet6.0 routing table, which is the primary forwarding table. The result is a route that is installed in the forwarding table any time the LSP is established, which means you can ping or trace the route. Use this option with care, because this type of prefix is very similar to a static route.

You use alias routes for routers that have multiple addresses being used as BGP next hops, or for routers that are not MPLS capable. In either of these cases, the LSP can be configured to another MPLS capable system within the local domain, which then acts as a “border” router. The LSP then terminates on the border router and, from that router, Layer 3 forwarding takes the packet to the true next-hop router.

In the case of an interconnect, the domain’s border router can act as the proxy router and can advertise the prefix for the interconnect if the border router is not setting the BGP next hop to itself.

In the case of a point of presence (POP) that has routers that do not support MPLS, one router (for example, a core router) that supports MPLS can act as a proxy for the entire POP and can inject a set of prefixes that cover the POP. Thus, all routers within the POP can advertise themselves as interior BGP (IBGP) next hops, and traffic can follow the LSP to reach the core router. This means that normal IGP routing would prevail within the POP.

You cannot use the **ping** or **traceroute** commands on routes in the inet.3 or inet6.3 routing table.

For BGP next-hop resolution, it makes no difference whether a route is in inet.0/inet6.0 or inet.3/inet6.3; the route with the best match (longest mask) is chosen. Among multiple best-match routes, the one with the highest preference value is chosen.

NOTE: The `install destination-prefix active` statement is not supported on static LSPs. When the `install destination-prefix active` statement is configured for a static LSP, the MPLS routes do not get installed into the inet.0 routing table.

RELATED DOCUMENTATION

| [MPLS Overview | 2](#)

LSP Computation

IN THIS SECTION

- [Constrained-Path LSP Computation | 478](#)
- [How CSPF Selects a Path | 480](#)
- [CSPF Path Selection Tie-Breaking | 480](#)
- [Computing CSPF Paths Offline | 481](#)
- [Configuring CSPF Tie Breaking | 481](#)
- [Disabling Constrained-Path LSP Computation | 482](#)

Constrained-Path LSP Computation

The Constrained Shortest Path First (CSPF) algorithm is an advanced form of the shortest-path-first (SPF) algorithm used in OSPF and IS-IS route computations. CSPF is used in computing paths for LSPs that are subject to multiple constraints. When computing paths for LSPs, CSPF considers not only the topology of the network, but also the attributes of the LSP and the links, and it attempts to minimize congestion by intelligently balancing the network load.

The constraints that CSPF considers include:


- LSP attributes
 - Administrative groups (that is, link color requirements)
 - Bandwidth requirements

- Explicit route (strict or loose)
- Hop limitations
- Priority (setup and hold)
- Link attributes
 - Administrative groups (that is, link colors assigned to the link)
 - Reservable bandwidth of the links (static bandwidth minus the currently reserved bandwidth)

The data that CSPF considers comes from the following sources:

- Traffic engineering database—Provides CSPF with up-to-date topology information, the current reservable bandwidth of links, and the link colors. For the CSPF algorithm to perform its computations, a link-state IGP (such as OSPF or IS-IS) with special extensions is needed. For CSPF to be effective, the link-state IGP on all routers must support the special extensions. While building the topology database, the extended IGP must take into consideration the current LSPs and must flood the route information everywhere. Because changes in the reserved link bandwidth and link color cause database updates, an extended IGP tends to flood more frequently than a normal IGP. See [Figure 39 on page 479](#) for a diagram of the relationships between these components.
- Currently active LSPs—Includes all the LSPs that should originate from the router and their current operational status (up, down, or timeout).

Figure 39: CSPF Computation Process

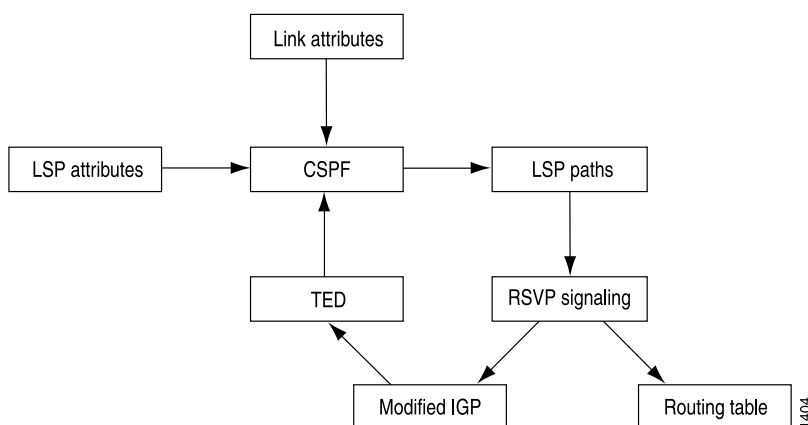

This section discusses the following topics:

- [How CSPF Selects a Path on page 480](#)
- [CSPF Path Selection Tie-Breaking on page 480](#)
- [Computing CSPF Paths Offline on page 481](#)

How CSPF Selects a Path

To select a path, CSPF follows certain rules. The rules are as follows:

1. Computes LSPs one at a time, beginning with the highest priority LSP (the one with the lowest setup priority value). Among LSPs of equal priority, CSPF services the LSPs in alphabetical order of the LSP names.
2. Prunes the traffic engineering database of all the links that are not full duplex and do not have sufficient reservable bandwidth.
3. If the LSP configuration includes the **include** statement, prunes all links that do not share any included colors.
4. If the LSP configuration includes the **exclude** statement, prunes all links that contain excluded colors. If the link does not have a color, it is accepted.
5. If several paths have equal cost, chooses the one whose last-hop address is the same as the LSP's destination.
6. If several equal cost paths remain, selects the one with the fewest number of hops.
7. If several equal-cost paths remain, applies the CSPF load-balancing rule configured on the LSP (least fill, most fill, or random).

CSPF finds the shortest path toward the LSP's egress router, taking into account explicit-path constraints. For example, if the path must pass through Router A, two separate SPFs are computed, one from the ingress router to Router A, the other from Router A to the egress router. All CSPF rules are applied to both computations.

CSPF Path Selection Tie-Breaking

If more than one path is still available after the CSPF rules (["How CSPF Selects a Path" on page 480](#)) have been applied, a tie-breaking rule is applied to choose the path for the LSP. The rule used depends on the configuration. There are three tie-breaking rules:

- **Random**—One of the remaining paths is picked at random. This rule tends to place an equal number of LSPs on each link, regardless of the available bandwidth ratio. This is the default behavior.
- **Least fill**—The path with the largest minimum available bandwidth ratio is preferred. This rule tries to equalize the reservation on each link.
- **Most fill**—The path with the smallest minimum available bandwidth ratio is preferred. This rule tries to fill a link before moving on to alternative links.

The following definitions describe how a figure for minimum available bandwidth ratio is derived for the least fill and most fill rules:

- Reservable bandwidth = bandwidth of link x subscription factor of link
- Available bandwidth = reservable bandwidth – (sum of the bandwidths of the LSPs traversing the link)
- Available bandwidth ratio = available bandwidth/reservable bandwidth
- Minimum available bandwidth ratio (for a path) = the smallest available bandwidth ratio of the links in a path

NOTE: For the least fill or most fill behaviors to be used, the paths must have their bandwidth (specified using the **bandwidth** statement at the **[edit protocols mpls label-switched-path lsp-name]** hierarchy level) or minimum bandwidth (specified using the **minimum-bandwidth** statement at the **[edit protocols mpls label-switched-path lsp-name auto-bandwidth]** hierarchy level) configured to a value greater than 0. If the bandwidth or minimum bandwidth for the paths is either not configured or configured as 0, the minimum available bandwidth cannot be calculated and the random path selection behavior is used instead.

Computing CSPF Paths Offline

The Junos OS provides online, real-time CSPF computation only; each router performs CSPF calculations independent of the other routers in the network. These calculations are based on currently available topology information—information that is usually recent, but not completely accurate. LSP placements are locally optimized, based on current network status.

To optimize links globally across the network, you can use an offline tool to perform the CSPF calculations and determine the paths for the LSPs. You can create such a tool yourself, or you can modify an existing network design tool to perform these calculations. You should run the tool periodically (daily or weekly) and download the results into the router. An offline tool should take the following into account when performing the optimized calculations:

- All the LSP's requirements
- All link attributes
- Complete network topology

Configuring CSPF Tie Breaking

When selecting a path for an LSP, CSPF uses a tie-breaking process if there are several equal-cost paths. For information about how CSPF selects a path, see [“How CSPF Selects a Path” on page 480](#).

You can configure one of the following statements (you can only configure one of these statements at a time) to alter the behavior of CSPF tie-breaking:

- By default, a random tie-breaking rule for CSPF is used to select a path from the set of equal-cost paths. However, you can also explicitly configure this behavior using the **random** statement:

```
random;
```

- To prefer the path with the least-utilized links, include the **least-fill** statement:

```
least-fill;
```

- To prefer the path with the most-utilized links, include the **most-fill** statement:

```
most-fill;
```

You can include each of these statements at the following hierarchy levels:

- [edit protocols mpls label-switched-path *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name*]

Disabling Constrained-Path LSP Computation

If the IGP is a link-state protocol (such as IS-IS or OSPF) and supports extensions that allow the current bandwidth reservation on each router's link to be reported, constrained-path LSPs are computed by default.

The Junos implementations of IS-IS and OSPF include the extensions that support constrained-path LSP computation.

- IS-IS—These extensions are enabled by default. To disable this support, include the **disable** statement at the [edit protocols isis traffic-engineering] hierarchy level, as discussed in the *Junos OS Routing Protocols Library*.
- OSPF—These extensions are disabled by default. To enable this support, include the **traffic-engineering** statement in the configurations of all routers running OSPF, as described in the *Junos OS Routing Protocols Library*.

If IS-IS is enabled on a router or you enable OSPF traffic engineering extensions, MPLS performs the constrained-path LSP computation by default. For information about how constrained-path LSP computation works, see [“Constrained-Path LSP Computation” on page 478](#).

Constrained-path LSPs have a greater chance of being established quickly and successfully for the following reasons:

- The LSP computation takes into account the current bandwidth reservation.
- Constrained-path LSPs reroute themselves away from node failures and congestion.

When constrained-path LSP computation is enabled, you can configure the LSP so that it is periodically reoptimized, as described in [“Optimizing Signaled LSPs” on page 510](#).

When an LSP is being established or when an existing LSP fails, the constrained-path LSP computation is repeated periodically at the interval specified by the retry timer until the LSP is set up successfully. Once the LSP is set up, no recomputation is done. For more information about the retry timer, see [“Configuring the Connection Between Ingress and Egress Routers” on page 492](#).

By default, constrained-path LSP computation is enabled. You might want to disable constrained-path LSP computation when all nodes do not support the necessary traffic engineering extensions. To disable constrained-path LSP computation, include the **no-cspf** statement:

```
no-cspf;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

If you disable constrained-path LSP computation on LSPs by configuring the **no-cspf** statement and then attempt to advertise other LSPs with lower metrics than the IGPs from this router in either IS-IS or OSPF, new LSPs cannot be established.

RELATED DOCUMENTATION

| [MPLS Overview | 2](#)

LSP Routers

IN THIS SECTION

- [Routers in an LSP | 484](#)
- [Configuring the Ingress and Egress Router Addresses for LSPs | 484](#)
- [Configuring the Ingress Router for MPLS-Signaled LSPs | 486](#)
- [Configuring the Intermediate and Egress Routers for MPLS-Signaled LSPs | 492](#)
- [Configuring the Connection Between Ingress and Egress Routers | 492](#)
- [Pinging LSPs | 493](#)

Routers in an LSP

Each router in an LSP performs one of the following functions:

- Ingress router—The router at the beginning of an LSP. This router encapsulates IP packets with an MPLS Layer 2 frame and forwards it to the next router in the path. Each LSP can have only one ingress router.
- Egress router—The router at the end of an LSP. This router removes the MPLS encapsulation, thus transforming it from an MPLS packet to an IP packet, and forwards the packet to its final destination using information in the IP forwarding table. Each LSP can have only one egress router. The ingress and egress routers in an LSP cannot be the same router.
- Transit router—Any intermediate router in the LSP between the ingress and egress routers. A transit router forwards received MPLS packets to the next router in the MPLS path. An LSP can contain zero or more transit routers, up to a maximum of 253 transit routers in a single LSP.

A single router can be part of multiple LSPs. It can be the ingress or egress router for one or more LSPs, and it also can be a transit router in one or more LSPs. The functions that each router supports depend on your network design.

Configuring the Ingress and Egress Router Addresses for LSPs

IN THIS SECTION

- [Configuring the Ingress Router Address for LSPs | 484](#)
- [Configuring the Egress Router Address for LSPs | 485](#)
- [Preventing the Addition of Egress Router Addresses to Routing Tables | 485](#)

The following sections describe how to specify the addresses of an LSP's ingress and egress routers:

Configuring the Ingress Router Address for LSPs

The local router always is considered to be the ingress router, which is the beginning of the LSP. The software automatically determines the proper outgoing interface and IP address to use to reach the next router in an LSP.

By default, the router ID is chosen as the address of the ingress router. To override the automatic selection of the source address, specify a source address in the **from** statement:

```
from address;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

The outgoing interface used by the LSP is not affected by the source address that you configure.

Configuring the Egress Router Address for LSPs

When configuring an LSP, you must specify the address of the egress router by including the **to** statement:

```
to address;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **static-label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **static-label-switched-path** *lsp-name*]

When you are setting up a signaled LSP, the **to** statement is the only required statement. All other statements are optional.

After the LSP is established, the address of the egress router is installed as a host route in the routing table. This route can then be used by BGP to forward traffic.

To have the software send BGP traffic over an LSP, the address of the egress router is the same as the address of the BGP next hop. You can specify the egress router's address as any one of the router's interface addresses or as the BGP router ID. If you specify a different address, even if the address is on the same router, BGP traffic is not sent over the LSP.

To determine the address of the BGP next hop, use the **show route detail** command. To determine the destination address of an LSP, use the **show mpls lsp** command. To determine whether a route has gone through an LSP, use the **show route** or **show route forwarding-table** command. In the output of these last two commands, the **label-switched-path** or **push** keyword included with the route indicates it has passed through an LSP. Also, use the **traceroute** command to trace the actual path to which the route leads. This is another indication whether a route has passed through an LSP.

You also can manipulate the address of the BGP next hop by defining a BGP import policy filter that sets the route's next-hop address.

Preventing the Addition of Egress Router Addresses to Routing Tables

You must configure an address using the **to** statement for all LSPs. This address is always installed as a /32 prefix in the inet.3 or inet.0 routing tables. You can prevent the egress router address configured using the **to** statement from being added to the inet.3 and inet.0 routing tables by including the **no-install-to-address** statement.

Some reasons not to install the **to** statement address in the inet.3 and inet.0 routing tables include the following:

- Allow Constrained Shortest Path First (CSPF) RSVP LSPs to be mapped to traffic intended for secondary loopback addresses. If you configure an RSVP tunnel, including the **no-install-to-address** statement, and then configure an **install pfx/ <active>** policy later, you can do the following:
 - Verify that the LSP was set up correctly without impacting traffic.
 - Map traffic to the LSP in incremental steps.
 - Map traffic to the destination loopback address (the BGP next hop) by removing the **no-install-to-address** statement once troubleshooting is complete.
- Prevent CCC connections from losing IP traffic. When an LSP determines that it does not belong to a connection, it installs the address specified with the **to** statement in the inet.3 routing table. IP traffic is then forwarded to the CCC remote endpoint, which can cause some types of PICs to fail.

To prevent the egress router address configured using the **to** statement from being added to the inet.3 and inet.0 routing tables, include the **no-install-to-address** statement:

```
no-install-to-address;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **static-label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **static-label-switched-path** *lsp-name*]

Configuring the Ingress Router for MPLS-Signaled LSPs

IN THIS SECTION

- [Creating Named Paths | 487](#)
- [Configuring Alternate Backup Paths Using Fate Sharing | 489](#)

MPLS-signaled label-switched paths (LSPs) run from a specific ingress router to a specific egress router. For basic MPLS-signaled LSP function, you must configure the ingress router, but do not have to configure any other routers.

To configure signaled LSPs, perform the following tasks on the ingress router:

Creating Named Paths

To configure signaled LSPs, you must first create one or more named paths on the ingress router. For each path, you can specify some or all transit routers in the path, or you can leave it empty.

Each pathname can contain up to 32 characters and can include letters, digits, periods, and hyphens. The name must be unique within the ingress router. Once a named path is created, you can use the named path with the **primary** or **secondary** statement to configure LSPs at the **[edit protocols mpls label-switched-path label-path-name]** hierarchy level. You can specify the same named path on any number of LSPs.

To determine whether an LSP is associated with the primary or secondary path in an RSVP session, issue the **show rsvp session detail** command.

To create an empty path, create a named path by including the following form of the **path** statement. This form of the **path** statement is empty, which means that any path between the ingress and egress routers is accepted. In actuality, the path used tends to be the same path as is followed by destination-based, best-effort traffic.

```
path path-name;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems logical-system-name protocols mpls]**

To create a path in which you specify some or all transit routers in the path, include the following form of the **path** statement, specifying one address for each transit router:

```
path path-name {
    (address | hostname) <strict | loose>;
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems logical-system-name protocols mpls]**

In this form of the **path** statement, you specify one or more transit router addresses. Specifying the ingress or egress routers is optional. You can specify the address or hostname of each transit router, although you do not need to list each transit router if its type is **loose**. Specify the addresses in order, starting with the ingress router (optional) or the first transit router, and continuing sequentially along the path up to the egress router (optional) or the router immediately before the egress router. You need to specify only one

address per router hop. If you specify more than one address for the same router, only the first address is used; the additional addresses are ignored and truncated.

For each router address, you specify the type, which can be one of the following:

- **strict**—(Default) The route taken from the previous router to this router is a direct path and cannot include any other routers. If **address** is an interface address, this router also ensures that the incoming interface is the one specified. Ensuring that the incoming interface is the one specified is important when there are parallel links between the previous router and this router. It also ensures that routing can be enforced on a per-link basis.

For strict addresses, you must ensure that the router immediately preceding the router you are configuring has a direct connection to that router. The address can be a loopback interface address, in which case the incoming interface is not checked.

- **loose**—The route taken from the previous router to this router need not be a direct path, can include other routers, and can be received on any interface. The address can be any interface address or the address of the loopback interface.

Examples: Creating Named Paths

Configure a path, **to-hastings**, to specify the complete strict path from the ingress to the egress routers through **14.1.1.1**, **13.1.1.1**, **12.1.1.1**, and **11.1.1.1**, in that order. There cannot be any intermediate routers except the ones specified. However, there can be intermediate routers between **11.1.1.1** and the egress router because the egress router is not specifically listed in the **path** statement. To prevent intermediate routers before egress, configure the egress router as the last router, with a **strict** type.

```
[edit protocols mpls]
path to-hastings {
  14.1.1.1 strict;
  13.1.1.1 strict;
  12.1.1.1 strict;
  11.1.1.1 strict;
}
```

Create a path, **alt-hastings**, to allow any number of intermediate routers between routers **14.1.1.1** and **11.1.1.1**. In addition, intermediate routers are permitted between **11.1.1.1** and the egress router.

```
[edit protocols mpls]
path alt-hastings {
  14.1.1.1 strict;
  11.1.1.1 loose;
}
```


Configuring Alternate Backup Paths Using Fate Sharing

IN THIS SECTION

- [Configuring Fate Sharing | 489](#)
- [Implications for CSPF | 490](#)
- [Implications for CSPF When Fate Sharing with Bypass LSPs | 491](#)
- [Example: Configuring Fate Sharing | 491](#)

You can create a database of information that Constrained Shortest Path First (CSPF) uses to compute one or more backup paths in case the primary path becomes unstable. The database describes the relationships between elements of the network, such as routers and links. Because these network elements share the same fate, this relationship is called fate sharing.

You can configure backup paths that minimize the number of shared links and fiber paths with the primary paths as much as possible to ensure that, if a fiber is cut, the minimum amount of data is lost and a path still exists to the destination.

For a backup path to work optimally, it must not share links or physical fiber paths with the primary path. This ensures that a single point of failure will not affect the primary and backup paths at the same time.

The following sections describe how to configure fate sharing and how it affects CSPF, and provides a fate sharing configuration example:

Configuring Fate Sharing

To configure fate sharing, include the **fate-sharing** statement:

```
fate-sharing {  
  group group-name {  
    cost value;  
    from address <to address>;  
  }  
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Each fate-sharing group must have a name, which can be up to 32 characters long and can contain letters, digits, periods (.) and hyphens (-). You can define up to 512 groups.

Fate-sharing groups contain three types of objects:

- Point-to-point links—Identified by the IP addresses at each end of the link. Unnumbered point-to-point links are typically identified by borrowing IP addresses from other interfaces. Order is not important; **from 1.2.3.4 to 1.2.3.5** and **from 1.2.3.5 to 1.2.3.4** have the same meaning.
- Non-point-to-point links—Include links on a LAN interface (such as Gigabit Ethernet interfaces) or nonbroadcast multiaccess (NBMA) interfaces (such as Asynchronous Transfer Mode [ATM] or Frame Relay). You identify these links by their individual interface address. For example, if the LAN interface **192.168.200.0/24** has four routers attached to it, each router link is individually identified:

```
from 192.168.200.1; # LAN interface of router 1
from 192.168.200.2; # LAN interface of router 2
from 192.168.200.3; # LAN interface of router 3
from 192.168.200.4; # LAN interface of router 4
```

You can list the addresses in any order.

- A router node—Identified by its configured router ID.

All objects in a group share certain similarities. For example, you can define a group for all fibers that share the same fiber conduit, all optical channels that share the same fiber, all links that connect to the same LAN switch, all equipment that shares the same power source, and so on. All objects are treated as /32 host addresses.

For a group to be meaningful, it should contain at least two objects. You can configure groups with zero or one object; these groups are ignored during processing.

An object can be in any number of groups, and a group can contain any number of objects. Each group has a configurable cost attributed to it, which represents the level of impact this group has on CSPF computations. The higher the cost, the less likely a backup path will share with the primary path any objects in the group. The cost is directly comparable to traffic engineering metrics. By default, the cost is 1. Changing the fate-sharing database does not affect established LSPs until the next reoptimization of CSPF. The fate-sharing database does influence fast-reroute computations.

Implications for CSPF

When CSPF computes the primary paths of an LSP (or secondary paths when the primary path is not active), it ignores the fate-sharing information. You always want to find the best possible path (least IGP cost) for the primary path.

When CSPF computes a secondary path while the primary path (of the same LSP) is active, the following occurs:

1. CSPF identifies all fate-sharing groups that are associated with the primary path. CSPF does this by identifying all links and nodes that the primary path traverses and compiling group lists that contain at least one of the links or nodes. CSPF ignores the ingress and egress nodes in the search.
2. CSPF checks each link in the traffic engineering database against the compiled group list. If the link is a member of a group, the cost of the link is increased by the cost of the group. If a link is a member of multiple groups, all group costs are added together.
3. CSPF performs the check for every node in the traffic engineering database, except the ingress and egress node. Again, a node can belong to multiple groups, so costs are additive.
4. The router performs regular CSPF computation with the adjusted topology.

Implications for CSPF When Fate Sharing with Bypass LSPs

When fate sharing is enabled with link protection or link-node protection, CSPF operates as follows when calculating the bypass LSP path:

- CSPF identifies the fate-sharing groups that are associated with the primary LSP path. CSPF does this by identifying the immediate downstream link and immediate downstream nodes that the bypass is trying to protect. CSPF compiles group lists that contain the immediate downstream link and immediate downstream nodes.
- CSPF checks each link (from ingress to the immediate downstream node) in the traffic engineering database against the compiled group list. If the link is a member of a group, the cost of the link is increased by the cost of the group.
- CSPF identifies the downstream link that is not in the fate-shared path.

This calculation prevents bypasses from using the same physical link as the primary LSP path when viable alternatives are available.

Example: Configuring Fate Sharing

Configure fate-sharing groups **east** and **west**. Because **west** has no objects, it is ignored during processing.

```
[edit routing-options]
fate-sharing {
  group east {
    cost 20; # Optional, default value is 1
    from 1.2.3.4 to 1.2.3.5; # A point-to-point link
    from 192.168.200.1; # LAN interface
    from 192.168.200.2; # LAN interface
    from 192.168.200.3; # LAN interface
    from 192.168.200.4; # LAN interface
    from 10.168.1.220; # Router ID of a router node
    from 10.168.1.221; # Router ID of a router node
  }
  group west {
```

```

.....
}
}

```

Configuring the Intermediate and Egress Routers for MPLS-Signaled LSPs

To configure signaled LSPs on all MPLS routers that should participate in MPLS, you need to enable MPLS and RSVP on these routers.

Configuring the Connection Between Ingress and Egress Routers

The ingress router might make many attempts to connect and reconnect to the egress router using the primary path. You can control how often the ingress router tries to establish a connection using the primary path and how long it waits between retry attempts.

The retry timer configures how long the ingress router waits before trying to connect again to the egress router using the primary path. The default retry time is 30 seconds. The time can be from 1 through 600 seconds. To modify this value, include the **retry-timer** statement:

```
retry-timer seconds;
```

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

By default, no limit is set to the number of times an ingress router attempts to establish or reestablish a connection to the egress router using the primary path. To limit the number of attempts, include the **retry-limit** statement:

```
retry-limit number;
```

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

The limit can be a value up to 10,000. When the retry limit is exceeded, no more attempts are made to establish a path connection. At this point, intervention is required to restart the primary path.

If you set a retry limit, it is reset to 1 each time a successful primary path is created.

Pinging LSPs

IN THIS SECTION

- Pinging MPLS LSPs | 493
- Pinging Point-to-Multipoint LSPs | 494
- Pinging the Endpoint Address of MPLS LSPs | 494
- Pinging CCC LSPs | 494
- Pinging Layer 3 VPNs | 494
- Support for LSP Ping and Traceroute Commands Based on RFC 4379 | 494

The following sections describe how to use the **ping mpls** command to confirm LSP functioning.

Pinging MPLS LSPs

You can ping a specific LSP. Echo requests are sent over the LSP as MPLS packets. The payload is a User Datagram Protocol (UDP) packet forwarded to an address in the 127/8 range (127.0.0.1 by default, this address is configurable) and port 3503. The label and interface information for building and sending this information as an MPLS packet is the same as for standard LSP traffic.

When the echo request arrives at the egress node, the receiver checks the contents of the packet and sends a reply containing the correct return value, by using UDP. The router sending the echo request waits to receive an echo reply after a timeout of 2 seconds (you cannot configure this value).

You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router to be able to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

To ping an MPLS LSP use the **ping mpls <count count> <ldp <fec>> <rsvp <exp forwarding-class> <lsp-name>>** command. To ping a secondary MPLS LSP, use the **ping mpls <count count> <rsvp <lsp-name>> standby path-name** command. For a detailed description of this command, see the [CLI Explorer](#).

NOTE: The **ping mpls** command is not supported within routing instances.

NOTE: Self-ping is supported for the master instance and not supported for VLAN-based LSPs or LSPs used in CCC. The message is displayed for each LSP and reduces the readability of the configuration.

Pinging Point-to-Multipoint LSPs

To ping a point-to-multipoint LSP, use the **ping mpls rsvp *lsp-name* multipoint** or **ping mpls rsvp egress *address*** commands. The **ping mpls rsvp *lsp-name* multipoint** command returns a list of all of the egress router identifiers and the current status of the point-to-multipoint LSP egress routers. The **ping mpls rsvp *lsp-name* multipoint egress *address*** command returns the current status of the specified egress router.

Pinging the Endpoint Address of MPLS LSPs

To determine whether an LSP between two provider edge (PE) routers is up and running, you can ping the endpoint address of the LSP. To ping an MPLS LSP endpoint, use the **ping mpls *lsp-end-point address*** command. This command tells you what type of LSP (RSVP or LDP) terminates at the address specified and whether that LSP is up or down.

For a detailed description of this command, see the [CLI Explorer](#).

Pinging CCC LSPs

You can ping a specific CCC LSP. The CCC LSP ping command is identical to the one used for MPLS LSPs. The command you use is **ping mpls <count *count*> <rsvp <*lsp-name*>>**. You can also ping a secondary standby CCC LSP by using the **ping mpls <count *count*> <rsvp <*lsp-name*>> standby *path-name*** command.

For a detailed description of this command, see the [CLI Explorer](#).

Pinging Layer 3 VPNs

You can use a similar command, **ping mpls l3vpn *vpn-name* prefix *prefix* <count *count*>**, to ping a Layer 3 VPN. For more information about this command, see the *Junos OS VPNs Library for Routing Devices* and the [CLI Explorer](#).

Support for LSP Ping and Traceroute Commands Based on RFC 4379

The Junos OS supports LSP **ping** and **traceroute** commands based on RFC 4379, *Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures*.

LSP **ping** and **traceroute** commands based on RFC 4379 attempt to trace the path taken by an LSP by relying on MPLS TTL expiration. An LSP can take multiple paths from ingress to egress. This occurs in particular with Equal Cost Multipath (ECMP). The LSP **traceroute** command can trace all possible paths to an LSP node.

RELATED DOCUMENTATION

Configuring MPLS LSPs

IN THIS CHAPTER

- Basic LSP Configuration | 495
- Primary, Secondary, and Static LSP Configuration | 569
- Adaptive LSP Configuration | 587
- Container LSP Configuration | 589
- Multiclass LSP Configuration | 654
- Point-to-Multipoint LSP Configuration | 656
- Pop-and-Forward LSP Configuration | 693
- Segment Routing LSP Configuration | 699

Basic LSP Configuration

IN THIS SECTION

- Configuring LSP Metrics | 496
- Configuring a Text Description for LSPs | 498
- Configuring MPLS Soft Preemption | 500
- Configuring Priority and Preemption for LSPs | 501
- Configuring Administrative Groups for LSPs | 502
- Configuring Extended Administrative Groups for LSPs | 504
- Configuring Preference Values for LSPs | 506
- Disabling Path Route Recording by LSPs | 507
- Achieving a Make-Before-Break, Hitless Switchover for LSPs | 507
- Optimizing Signaled LSPs | 510
- Configuring the Smart Optimize Timer for LSPs | 514
- Limiting the Number of Hops in LSPs | 515
- Configuring the Bandwidth Value for LSPs | 515

- [Automatic Bandwidth Allocation for LSPs | 515](#)
- [Configuring Automatic Bandwidth Allocation for LSPs | 516](#)
- [Configuring Reporting of Automatic Bandwidth Allocation Statistics for LSPs | 524](#)
- [Configuring an LSP Across ASs | 528](#)
- [Damping Advertisement of LSP State Changes | 529](#)
- [Configuring Corouted Bidirectional LSPs | 530](#)
- [Configuring the Entropy Label for LSPs | 533](#)
- [Example: Configuring an Entropy Label for a BGP Labeled Unicast LSP | 534](#)
- [Configuring Ultimate-Hop Popping for LSPs | 559](#)
- [Configuring Explicit-Path LSPs | 563](#)
- [Example: Configuring an Explicit-Path LSP | 564](#)
- [LSP Bandwidth Oversubscription Overview | 565](#)
- [LSP Size Oversubscription | 566](#)
- [LSP Link Size Oversubscription | 566](#)
- [Class Type Oversubscription and Local Oversubscription Multipliers | 566](#)
- [Configuring the Bandwidth Subscription Percentage for LSPs | 567](#)

Configuring LSP Metrics

IN THIS SECTION

- [Configuring Dynamic LSP Metrics | 497](#)
- [Configuring Static LSP Metrics | 497](#)

The LSP metric is used to indicate the ease or difficulty of sending traffic over a particular LSP. Lower LSP metric values (lower cost) increase the likelihood of an LSP being used. Conversely, high LSP metric values (higher cost) decrease the likelihood of an LSP being used.

The LSP metric can be specified dynamically by the router or explicitly by the user as described in the following sections:

Configuring Dynamic LSP Metrics

If no specific metric is configured, an LSP attempts to track the IGP metric toward the same destination (the **to** address of the LSP). IGP includes OSPF, IS-IS, Routing Information Protocol (RIP), and static routes. BGP and other RSVP or LDP routes are excluded.

For example, if the OSPF metric toward a router is 20, all LSPs toward that router automatically inherit metric 20. If the OSPF toward a router later changes to a different value, all LSP metrics change accordingly. If there are no IGP routes toward the router, the LSP raises its metric to 65,535.

Note that in this case, the LSP metric is completely determined by IGP; it bears no relationship to the actual path the LSP is currently traversing. If LSP reroutes (such as through reoptimization), its metric does not change, and thus it remains transparent to users. Dynamic metric is the default behavior; no configuration is required.

Configuring Static LSP Metrics

You can manually assign a fixed metric value to an LSP. Once configured with the **metric** statement, the LSP metric is fixed and cannot change:

```
metric number;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **static-label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **static-label-switched-path** *lsp-name*]

The LSP metric has several uses:

- When there are parallel LSPs with the same egress router, the metrics are compared to determine which LSP has the lowest metric value (the lowest cost) and therefore the preferred path to the destination. If the metrics are the same, the traffic is shared.

Adjusting the metric values can force traffic to prefer some LSPs over others, regardless of the underlying IGP metric.

- When an IGP shortcut is enabled (see *Using Labeled-Switched Paths to Augment SPF to Compute IGP Shortcuts*), an IGP route might be installed in the routing table with an LSP as the next hop, if the LSP is on the shortest path to the destination. In this case, the LSP metric is added to the other IGP metrics to determine the total path metric. For example, if an LSP whose ingress router is X and egress router is Y is on the shortest path to destination Z, the LSP metric is added to the metric for the IGP route from Y to Z to determine the total cost of the path. If several LSPs are potential next hops, the total metrics of the paths are compared to determine which path is preferred (that is, has the lowest total metric). Or, IGP paths and LSPs leading to the same destination could be compared by means of the metric value to determine which path is preferred.

By adjusting the LSP metric, you can force traffic to prefer LSPs, prefer the IGP path, or share the load among them.

- If router X and Y are BGP peers and if there is an LSP between them, the LSP metric represents the total cost to reach Y from X. If for any reason the LSP reroutes, the underlying path cost might change significantly, but X's cost to reach Y remains the same (the LSP metric), which allows X to report through a BGP multiple exit discriminator (MED) a stable metric to downstream neighbors. As long as Y remains reachable through the LSP, no changes are visible to downstream BGP neighbors.

It is possible to configure IS-IS to ignore the configured LSP metric by including the **ignore-lsp-metrics** statement at the **[edit protocols isis traffic-engineering shortcuts]** hierarchy level. This statement removes the mutual dependency between IS-IS and MPLS for path computation. For more information, see the *Junos OS Routing Protocols Library*.

Configuring a Text Description for LSPs

You can provide a textual description for an LSP by enclosing any descriptive text that includes spaces within quotation marks (" "). The descriptive text you include is displayed in the detail output of the **show mpls lsp** or the **show mpls container-lsp** command.

Adding a text description for an LSP has no effect on the operation of the LSP. The LSP text description can be no more than 80 characters in length.

To provide a textual description for an LSP, include the **description** statement at any of the following hierarchy levels:

- **[edit protocols mpls label-switched-path lsp-name]**
- **[edit protocols mpls container-label-switched-path lsp-name]**
- **[edit protocols mpls static-label-switched-path lsp-name]**
- **[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name]**
- **[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name]**

Before you begin:

- Configure the device interfaces.
- Configure the device for network communication.
- Enable MPLS on the device interfaces.
- Configure an LSP in the MPLS domain.

To add a text description for an LSP:

1. Enter any text describing the LSP.

```
[edit protocols mpls lsp lsp-name]
user@host# set description text
```

For example:

```
[edit protocols mpls lsp LSP1]
user@host# set description "Connecting remote device"
```

2. Verify and commit the configuration.

For example:

```
[edit protocols mpls lsp]
user@host# set protocols mpls label-switched-path LSP1 to 1.1.1.1
user@host# set protocols mpls label-switched-path LSP1 description "Connecting remote device"
user@host# set protocols mpls interface ge-1/0/8.0
```

```
[edit]
user@host# commit
commit complete
```

3. View the description of an LSP using the **show mpls lsp detail** or **show mpls container-lsp detail** command, depending on the type of LSP configured.

```
user@host> show mpls lsp detail
```

```
Ingress LSP: 1 sessions

1.1.1.1
  From: 0.0.0.0, State: Up, ActiveRoute: 1, LSPname: LSP1
  Description: Connecting remote device
  ActivePath: (none)
  LSPtype: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    No computed ERO.
Total 1 displayed, Up 1, Down 0
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Configuring MPLS Soft Preemption

Soft preemption attempts to establish a new path for a preempted LSP before tearing down the original LSP. The default behavior is to tear down a preempted LSP first, signal a new path, and then reestablish the LSP over the new path. In the interval between when the path is taken down and the new LSP is established, any traffic attempting to use the LSP is lost. Soft preemption prevents this type of traffic loss. The trade-off is that during the time when an LSP is being soft preempted, two LSPs with their corresponding bandwidth requirements are used until the original path is torn down.

MPLS soft preemption is useful for network maintenance. For example, you can move all LSPs away from a particular interface, then take the interface down for maintenance without interrupting traffic. MPLS soft preemption is described in detail in RFC 5712, *MPLS Traffic Engineering Soft Preemption*.

Soft preemption is a property of the LSP and is disabled by default. You configure it at the ingress of an LSP by including the **soft-preemption** statement:

```
soft-preemption;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

You can also configure a timer for soft preemption. The timer designates the length of time the router should wait before initiating a hard preemption of the LSP. At the end of the time specified, the LSP is torn down and resigaled. The soft-preemption cleanup timer has a default value of 30 seconds; the range of permissible values is 0 through 180 seconds. A value of 0 means that soft preemption is disabled. The soft-preemption cleanup timer is global for all LSPs.

Configure the timer by including the **cleanup-timer** statement:

```
cleanup-timer seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **preemption soft-preemption**]
- [edit logical-systems *logical-system-name* protocols rsvp **preemption soft-preemption**]

NOTE: Soft preemption cannot be configured on LSPs for which fast reroute has been configured. The configuration fails to commit. However, you can enable soft preemption in conjunction with node and link protection.

NOTE: The counter value for *SoftPreemptionCnt* initializes with a value of 0 (zero), visible in the command **show rsvp interface detail** output.

Configuring Priority and Preemption for LSPs

When there is insufficient bandwidth to establish a more important LSP, you might want to tear down a less important existing LSP to free the bandwidth. You do this by preempting the existing LSP.

Whether an LSP can be preempted is determined by two properties associated with the LSP:

- Setup priority—Determines whether a new LSP that preempts an existing LSP can be established. For preemption to occur, the setup priority of the new LSP must be higher than that of the existing LSP. Also, the act of preempting the existing LSP must produce sufficient bandwidth to support the new LSP. That is, preemption occurs only if the new LSP can be set up successfully.
- Reservation priority—Determines the degree to which an LSP holds on to its session reservation after the LSP has been set up successfully. When the reservation priority is high, the existing LSP is less likely to give up its reservation, and hence it is unlikely that the LSP can be preempted.

You cannot configure an LSP with a high setup priority and a low reservation priority, because permanent preemption loops might result if two LSPs are allowed to preempt each other. You must configure the reservation priority to be higher than or equal to the setup priority.

The setup priority also defines the relative importance of LSPs on the same ingress router. When the software starts, when a new LSP is established, or during fault recovery, the setup priority determines the order in which LSPs are serviced. Higher-priority LSPs tend to be established first and hence enjoy more optimal path selection.

To configure the LSP's preemption properties, include the **priority** statement:

```
priority setup-priority reservation-priority;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Both **setup-priority** and **reservation-priority** can be a value from 0 through 7. The value 0 corresponds to the highest priority, and the value 7 to the lowest. By default, an LSP has a setup priority of 7 (that is, it cannot preempt any other LSPs) and a reservation priority of 0 (that is, other LSPs cannot preempt it). These defaults are such that preemption does not happen. When you are configuring these values, the setup priority should always be less than or equal to the hold priority.

Configuring Administrative Groups for LSPs

Administrative groups, also known as link coloring or resource class, are manually assigned attributes that describe the “color” of links, such that links with the same color conceptually belong to the same class. You can use administrative groups to implement a variety of policy-based LSP setups.

Administrative groups are meaningful only when constrained-path LSP computation is enabled.

You can assign up to 32 names and values (in the range 0 through 31), which define a series of names and their corresponding values. The administrative names and values must be identical across all routers within a single domain.

NOTE: The administrative value is distinct from the priority. You configure the priority for an LSP using the **priority** statement. See [“Configuring Priority and Preemption for LSPs” on page 501](#).

To configure administrative groups, follow these steps:

1. Define multiple levels of service quality by including the **admin-groups** statement:

```
admin-groups {
    group-name group-value;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

The following configuration example illustrates how you might configure a set of administrative names and values for a domain:

```
[edit protocols mpls]
admin-groups {
```

```

gold 1;
silver 2;
copper 3;
best-effort 4;
}

```

2. Define the administrative groups to which an interface belongs. You can assign multiple groups to an interface. Include the **interface** statement:

```

interface interface-name {
  admin-group [ group-names ];
}

```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

If you do not include the **admin-group** statement, an interface does not belong to any group.

IGPs use the group information to build link-state packets, which are then flooded throughout the network, providing information to all nodes in the network. At any router, the IGP topology, as well as administrative groups of all the links, is available.

Changing the interface's administrative group affects only new LSPs. Existing LSPs on the interface are not preempted or recomputed to keep the network stable. If LSPs need to be removed because of a group change, issue the **clear rsvp session** command.

NOTE: When configuring administrative groups and extended administrative groups together for a link, both the types of administrative groups must be configured on the interface.

3. Configure an administrative group constraint for each LSP or for each primary or secondary LSP path. Include the **label-switched-path** statement:

```

label-switched-path lsp-name {
  to address;
  ...
  admin-group {
    exclude [ group-names ];
    include-all [ group-names ];
    include-any [ group-names ];
  }
  primary path-name {

```

```

admin-group {
    exclude [ group-names ];
    include-all [ group-names ];
    include-any [ group-names ];
}
}
secondary path-name {
    admin-group {
        exclude [ group-names ];
        include-all [ group-names ];
        include-any [ group-names ];
    }
}
}

```

You can include the **label-switched-path** statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

If you omit the **include-all**, **include-any**, or **exclude** statements, the path computation proceeds unchanged. The path computation is based on the constrained-path LSP computation. For information about how the constrained-path LSP computation is calculated, see [“How CSPF Selects a Path” on page 480](#).

NOTE: Changing the LSP’s administrative group causes an immediate recomputation of the route; therefore, the LSP might be rerouted.

Configuring Extended Administrative Groups for LSPs

In MPLS traffic engineering, a link can be configured with a set of administrative groups (also known as colors or resource classes). Administrative groups are carried in the interior gateway protocol (IGP) (OSPFv2 and IS-IS) as a 32-bit value assigned to each link. Juniper Networks routers normally interpret this 32-bit value as a bit mask with each bit representing a group, limiting each network to a total of 32 distinct administrative groups (value range 0 through 31).

You configure extended administrative groups, represented by a 32-bit value, expanding the number of administrative groups supported in the network beyond just 32. The original range of values available for administrative groups is still supported for backwards compatibility.

The extended administrative groups configuration accepts a set of interfaces with a corresponding set of extended administrative group names. It converts the names into a set of 32-bit values and propagates

this information into the IGP. The extended administrative group values are global and must be identically configured on all the supported routers participating in the network. The domain-wide extended administrative groups database, learned from other routers through IGP flooding, is used by Constrained Shortest Path First (CSPF) for path computation.

The following procedure describes how to configure extended administrative groups:

1. Configure the **admin-groups-extended-range** statement:

```
admin-groups-extended-range {  
    maximum maximum-number;  
    minimum minimum-number;  
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

The **admin-groups-extended-range** statement includes the **minimum** and **maximum** options. The range maximum must be greater than the range minimum.

2. Configure the **admin-groups-extended** statement:

```
admin-groups-extended group-name {  
    group-value group-identifier;  
}
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

The **admin-groups-extended** statement enables you to configure a group name and group value for the administrative group. The group value must be within the range of values configured using the **admin-groups-extended-range** statement.

3. The extended administrative groups for an MPLS interface consist of the set of extended administrative group names assigned for the interface. The interface extended administrative group names must be configured for the global extended administrative groups.

To configure an extended administrative group for an MPLS interface, specify the administrative group name within the MPLS interface configuration using the **admin-groups-extended** statement:

```
admin-groups-extended group-name;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls interface *interface-name*]
 - [edit logical-systems *logical-system-name* protocols mpls interface *interface-name*]
4. The LSP extended administrative groups define the set of include and exclude constraints for an LSP and for a path's primary and secondary paths. The extended administrative group names must be configured for the global extended administrative groups.

To configure extended administrative groups for an LSP, include the **admin-group-extended** statement at an LSP hierarchy level:

```
admin-group-extended {
  apply-groups group-value;
  apply-groups-except group-value;
  exclude group-value;
  include-all group-value;
  include-any group-value;
}
```

The **admin-group-extended** statement includes the following options: **apply-groups**, **apply-groups-except**, **exclude**, **include-all**, and **include-any**. Each option enables you to configure one or more extended administrative groups.

For the list of the hierarchy levels at which you can configure this statement, see the statement summary for this statement.

5. To display the currently configured extended administrative groups, issue the **show mpls admin-groups-extended** command.

NOTE: When configuring administrative groups and extended administrative groups together for a link, both the types of administrative groups must be configured on the interface.

Configuring Preference Values for LSPs

As an option, you can configure multiple LSPs between the same pair of ingress and egress routers. This is useful for balancing the load among the LSPs because all LSPs, by default, have the same preference level. To prefer one LSP over another, set different preference levels for individual LSPs. The LSP with the

lowest preference value is used. The default preference for RSVP LSPs is 7 and for LDP LSPs is 9. These preference values are lower (more preferred) than all learned routes except direct interface routes.

To change the default preference value, include the **preference** statement:

```
preference preference;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Disabling Path Route Recording by LSPs

The Junos implementation of RSVP supports the Record Route object, which allows an LSP to actively record the routers through which it transits. You can use this information for troubleshooting and to prevent routing loops. By default, path route information is recorded. To disable recording, include the **no-record** statement:

```
no-record;
```

For a list of hierarchy levels at which you can include the **record** and **no-record** statements, see the statement summary section for the statement.

Achieving a Make-Before-Break, Hitless Switchover for LSPs

IN THIS SECTION

- [Specifying the Amount of Time the Router Waits to Switch Over to New Paths | 508](#)
- [Specifying the Amount of Time to Delay the Tear Down of Old Paths | 509](#)
- [Achieving a Hitless, MBB Switchover Without Artificial Delays | 509](#)

Adaptive label-switched paths (LSPs) might need to establish a new LSP instance and transfer traffic from an old LSP instance onto the new LSP instance before tearing down the old one. This type of configuration is referred to as a *make before break* (MBB).

RSVP-TE is a protocol used to establish LSPs in MPLS networks. The Junos OS implementation of RSVP-TE to achieve a hitless (no traffic loss) MBB switchover has relied on configuring the timer values in the following configuration statements:

- **optimize-switchover-delay**—Amount of time to wait before switching to the new LSP instance.

- **optimize-hold-dead-delay**—Amount of time to wait after switchover and before deletion of the old LSP instance.

Both the **optimize-switchover-delay** and **optimize-hold-dead-delay** statements apply to all LSPs that use the make-before-break behavior for LSP setup and teardown, not just for LSPs for which the **optimize-timer** statement has also been configured. The following MPLS features cause LSPs to be set up and torn down using make-before-break behavior:

- Adaptive LSPs
- Automatic bandwidth allocation
- BFD for LSPs
- Graceful Routing Engine switchover
- Link and node protection
- Nonstop active routing
- Optimized LSPs
- Point-to-multipoint (P2MP) LSPs
- Soft preemption
- Standby secondary paths

Both the **optimize-switchover-delay** and **optimize-hold-dead-delay** statements when configured add an artificial delay to the MBB process. The value of the **optimize-switchover-delay** statement varies with the size of the Explicit Route Objects (EROs). An ERO is an extension to RSVP that allows an RSVP PATH message to traverse an explicit sequence of routers that is independent of conventional shortest-path IP routing. The value of the **optimize-switchover-delay** statement also depends on the CPU load on each of the routers on the path. Customers set the **optimize-switchover-delay** statement by trial and error.

The value of the **optimize-hold-dead-delay** statement depends on how fast the ingress router moves all application prefixes to point to the new LSP. This is determined by the Packet Forwarding Engine load, which can vary from platform to platform. Customers have to set the **optimize-hold-dead-delay** statement by trial and error.

However, as of Release 15.1, Junos OS is able to achieve a hitless MBB switchover without configuring the artificial delays that such timer values introduce.

This topic summarizes the three methods of achieving a MBB switchover from an old LSP to a new LSP using Junos OS:

Specifying the Amount of Time the Router Waits to Switch Over to New Paths

To specify the amount of time the router waits to switch over LSP instances to newly optimized paths, use the **optimize-switchover-delay** statement. You only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). The timer in this statement helps to ensure that the new optimized paths have been established

before traffic is switched over from the old paths. This timer can only be enabled or disabled for all of the LSPs configured on the router.

To configure the amount of time the router waits to switch over LSP instances to newly optimized paths, specify the time in seconds by using the **optimize-switchover-delay** statement:

```
optimize-switchover-delay seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

Specifying the Amount of Time to Delay the Tear Down of Old Paths

To specify the amount of time to delay the tear down of old paths after the router has switched traffic to new optimized paths, use the **optimize-hold-dead-delay** statement. You only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). The timer in this statement helps to ensure that old paths are not torn down before all routes have been switched over to the new optimized paths. This timer can be enabled for specific LSPs or for all of the LSPs configured on the router.

To configure the amount of time in seconds to delay the tear down of old paths after the router has switched traffic to new optimized paths, use the **optimize-hold-dead-delay** statement:

```
optimize-hold-dead-delay seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Achieving a Hitless, MBB Switchover Without Artificial Delays

As of Junos OS Release 15.1, there is another way to relinquish the old LSP instances after MBB switchover without relying on the arbitrary time intervals set up by the **optimize-switchover-delay** or **optimize-hold-dead-delay** statement. For example, if you use the **optimize-hold-dead-delay** statement, you configure a time you think it is safe to wait before tearing down the old LSP instance after MBB. However, some routes might still be in the process of shifting to the new instance. Tearing down the old LSP instance prematurely results in one of the transit nodes dropping the traffic for those routes that have not shifted to the new LSP instance.

To avoid traffic loss, instead of using the **optimize-switchover-delay** statement, you can use MPLS-OAM (lsp ping), which confirms that the LSP data plane is established end-to-end. Instead of using the **optimize-hold-dead-delay** statement, you can use a feedback mechanism from the rpd infrastructure that confirms that all prefixes referring to the old LSP have been switched over. The feedback mechanism is sourced from the Tag library and relies on the routing protocol process (rpd) infrastructure to determine

when all the routes using the old LSP instance have fully shifted to the new LSP instance after MBB switchover.

The feedback mechanism is always in place, and it is optional. Configure the **optimize-adaptive-teardown** statement to have the feedback mechanism used during MBB switchover. This feature is not supported for RSVP point-to-multipoint (P2MP) LSP instances. Global configuration of the **optimize-adaptive-teardown** statement only affects the point-to-point LSPs that are configured in the system.

You only need to configure the **optimize-adaptive-teardown** statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). This feedback mechanism ensures that old paths are not torn down before all routes have been switched over to the new optimized paths. The global configuration of this configuration statement affects only the point-to-point LSPs that are configured in the system.

```
optimize-adaptive-teardown {
  p2p:
}
```

You can include this statement at the **[edit protocols mpls]** hierarchy level.

Optimizing Signaled LSPs

Once an LSP has been established, topology or resources changes might, over time, make the path suboptimal. A new path might have become available that is less congested, has a lower metric, and traverses fewer hops. You can configure the router to recompute paths periodically to determine whether a more optimal path has become available.

If reoptimization is enabled, an LSP can be rerouted through different paths by constrained-path recomputations. However, if reoptimization is disabled, the LSP has a fixed path and cannot take advantage of newly available network resources. The LSP is fixed until the next topology change breaks the LSP and forces a recomputation.

Reoptimization is not related to failover. A new path is always computed when topology failures occur that disrupt an established path.

Because of the potential system overhead involved, you need to carefully control the frequency of reoptimization. Network stability might suffer when reoptimization is enabled. By default, the **optimize-timer** statement is set to 0 (that is, it is disabled).

LSP optimization is meaningful only when constrained-path LSP computation is enabled, which is the default behavior. For more information about constrained-path LSP computation, see [“Disabling Constrained-Path LSP Computation” on page 482](#). Also, LSP optimization is only applicable to ingress LSPs, so it is only necessary to configure the **optimize-timer** statement on the ingress router. The transit and egress routers require no specific configuration to support LSP optimization (other than to have MPLS enabled).

To enable path reoptimization, include the **optimize-timer** statement:

```
optimize-timer seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Once you have configured the **optimize-timer** statement, the reoptimization timer continues its countdown to the configured value even if you delete the **optimize-timer** statement from the configuration. The next optimization uses the new value. You can force the Junos OS to use a new value immediately by deleting the old value, committing the configuration, configuring the new value for the **optimize-timer** statement, and then committing the configuration again.

After reoptimization is run, the result is accepted only if it meets the following criteria:

1. The new path is not higher in IGP metric. (The metric for the old path is updated during computation, so if a recent link metric changed somewhere along the old path, it is accounted for.)
2. If the new path has the same IGP metric, it is not more hops away.
3. The new path does not cause preemption. (This is to reduce the ripple effect of preemption causing more preemption.)
4. The new path does not worsen congestion overall.

The relative congestion of the new path is determined as follows:


- a. The percentage of available bandwidth on each link traversed by the new path is compared to that for the old path, starting from the most congested links.
- b. For each current (old) path, the software stores the four smallest values for bandwidth availability for the links traversed in ascending order.
- c. The software also stores the four smallest bandwidth availability values for the new path, corresponding to the links traversed in ascending order.
- d. If any of the four new available bandwidth values are smaller than any of the corresponding old bandwidth availability values, the new path has at least one link that is more congested than the link used by the old path. Because using the link would cause more congestion, traffic is not switched to this new path.
- e. If none of the four new available bandwidth values is smaller than the corresponding old bandwidth availability values, the new path is less congested than the old path.

When all the above conditions are met, then:

5. If the new path has a lower IGP metric, it is accepted.
6. If the new path has an equal IGP metric and lower hop count, it is accepted.
7. If you choose **least-fill** as a load balancing algorithm, LSPs are load balanced as follows:
 - a. The LSP is moved to a new path that is utilized at least 10% less than the current path. This might reduce congestion on the current path by only a small amount. For example, if an LSP with 1 MB of bandwidth is moved off a path carrying a minimum of 200 MB, congestion on the original path is reduced by less than 1%.
 - b. For **random** or **most-fill** algorithms, this rule does not apply.

The following example illustrates how the **least-fill** load balancing algorithm works.

Figure 40: least-fill Load Balancing Algorithm Example



As shown in [Figure 40 on page 512](#), there are two potential paths for an LSP to traverse from router A to router H, the odd links from L1 through L13 and the even links from L2 through L14. Currently, the router is using the even links as the active path for the LSP. Each link between the same two routers (for example, router A and router B) has the same bandwidth:

- L1, L2 = 10GE
- L3, L4 = 1GE
- L5, L6 = 1GE
- L7, L8 = 1GE
- L9, L10 = 1GE
- L11, L12 = 10GE
- L13, L14 = 10GE

The 1GE links are more likely to be congested. In this example, the odd 1GE links have the following available bandwidth:

- L3 = 41%
- L5 = 56%
- L7 = 66%
- L9 = 71%

The even 1GE links have the following available bandwidth:

- L4 = 37%
- L6 = 52%
- L8 = 61%
- L10 = 70%

Based on this information, the router would calculate the difference in available bandwidth between the odd links and the even links as follows:

- $L4 - L3 = 41\% - 37\% = 4\%$
- $L6 - L5 = 56\% - 52\% = 4\%$
- $L8 - L7 = 66\% - 61\% = 5\%$
- $L10 - L9 = 71\% - 70\% = 1\%$

The total additional bandwidth available over the odd links is 14% ($4\% + 4\% + 5\% + 1\%$). Since 14% is greater than 10% (the least-fill algorithm minimum threshold), the LSP is moved to the new path over the odd links from the original path using the even links.

8. Otherwise, the new path is rejected.

You can disable the following reoptimization criteria (a subset of the criteria listed previously):

- If the new path has the same IGP metric, it is not more hops away.
- The new path does not cause preemption. (This is to reduce the ripple effect of preemption causing more preemption.)
- The new path does not worsen congestion overall.
- If the new path has an equal IGP metric and lower hop count, it is accepted.

To disable them, either issue the **clear mpls lsp optimize-aggressive** command or include the **optimize-aggressive** statement:

```
optimize-aggressive;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

Including the **optimize-aggressive** statement in the configuration causes the reoptimization procedure to be triggered more often. Paths are rerouted more frequently. It also limits the reoptimization algorithm to the IGP metric only.

Configuring the Smart Optimize Timer for LSPs

Because of network and router resource constraints, it is typically inadvisable to configure a short interval for the optimize timer. However, under certain circumstances, it might be desirable to reoptimize a path sooner than would normally be provided by the optimize timer.

For example, an LSP is traversing a preferred path that subsequently fails. The LSP is then switched to a less desirable path to reach the same destination. Even if the original path is quickly restored, it could take an excessively long time for the LSP to use it again, because it has to wait for the optimize timer to reoptimize the network paths. For such situations, you might want to configure the smart optimize timer.

When you enable the smart optimize timer, an LSP is switched back to its original path so long as the original path has been restored within 3 minutes of going down. Also, if the original path goes down again within 60 minutes, the smart optimize timer is disabled, and path optimization behaves as it normally does when the optimize timer alone is enabled. This prevents the router from using a flapping link.

The smart optimize timer is dependant on other MPLS features to function properly. For the scenario described here in which an LSP is switched to an alternate path in the event of a failure on the original path, it is assumed that you have configured one or more of the MPLS traffic protection features, including fast reroute, link protection, and standby secondary paths. These features help to ensure that traffic can reach its destination in the event of a failure.

At the least, you must configure a standby secondary path for the smart optimize timer feature to work properly. Fast reroute and link protection are more temporary solutions to a network outage. A secondary path ensures that there is a stable alternate path in the event the primary path fails. If you have not configured any sort of traffic protection for an LSP, the smart optimize timer by itself does not ensure that traffic can reach its destination. For more information about MPLS traffic protection, see [“MPLS and Traffic Protection” on page 276](#).

When a primary path fails and the smart optimize timer switches traffic to the secondary path, the router might continue to use the secondary path even after the primary path has been restored. If the ingress router completes a CSPF calculation, it might determine that the secondary path is the better path.

This might be undesirable if the primary path should be the active path and the secondary path should be used as a backup only. Also, if the secondary path is being used as the active path (even though the primary path has been reestablished) and the secondary path fails, the smart optimize timer feature will not automatically switch traffic back to the primary path. However, you can enable protection for the secondary path by configuring node and link protection or an additional standby secondary path, in which case, the smart optimize timer can be effective.

Specify the time in seconds for the smart optimize timer using the **smart-optimize-timer** statement:

```
smart-optimize-timer seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

Limiting the Number of Hops in LSPs

By default, each LSP can traverse a maximum of 255 hops, including the ingress and egress routers. To modify this value, include the **hop-limit** statement:

```
hop-limit number;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The number of hops can be from 2 through 255. (A path with two hops consists of the ingress and egress routers only.)

Configuring the Bandwidth Value for LSPs

Each LSP has a bandwidth value. This value is included in the sender's Tspec field in RSVP path setup messages. You can specify a bandwidth value in bits per second. If you configure more bandwidth for an LSP, it should be able to carry a greater volume of traffic. The default bandwidth is 0 bits per second.

A nonzero bandwidth requires that transit and egress routers reserve capacity along the outbound links for the path. The RSVP reservation scheme is used to reserve this capacity. Any failure in bandwidth reservation (such as failures at RSVP policy control or admission control) might cause the LSP setup to fail. If there is insufficient bandwidth on the interfaces for the transit or egress routers, the LSP is not established.

To specify a bandwidth value for a signaled LSP, include the **bandwidth** statement:

```
bandwidth bps;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Automatic Bandwidth Allocation for LSPs

Automatic bandwidth allocation allows an MPLS tunnel to automatically adjust its bandwidth allocation based on the volume of traffic flowing through the tunnel. You can configure an LSP with minimal bandwidth; this feature can dynamically adjust the LSP's bandwidth allocation based on current traffic patterns. The bandwidth adjustments do not interrupt traffic flow through the tunnel.

You set a sampling interval on an LSP configured with automatic bandwidth allocation. The average bandwidth is monitored during this interval. At the end of the interval, an attempt is made to signal a new path for the LSP with the bandwidth allocation set to the maximum average value for the preceding sampling interval. If the new path is successfully established and the original path is removed, the LSP is switched over to the new path. If a new path is not created, the LSP continues to use its current path until the end of the next sampling interval, when another attempt is made to establish a new path. Note that you can set minimum and maximum bandwidth values for the LSP.

During the automatic bandwidth allocation interval, the router might receive a steady increase in traffic (increasing bandwidth utilization) on an LSP, potentially causing congestion or packet loss. To prevent this, you can define a second trigger to prematurely expire the automatic bandwidth adjustment timer before the end of the current adjustment interval.

Configuring Automatic Bandwidth Allocation for LSPs

IN THIS SECTION

- [Configuring Automatic Bandwidth Allocation on LSPs | 517](#)
- [Requesting Automatic Bandwidth Allocation Adjustment | 523](#)

Automatic bandwidth allocation allows an MPLS tunnel to automatically adjust its bandwidth allocation based on the volume of traffic flowing through the tunnel. You can configure an LSP with minimal bandwidth, and this feature can dynamically adjust the LSP's bandwidth allocation based on current traffic patterns. The bandwidth adjustments do not interrupt traffic flow through the tunnel.

At the end of the automatic bandwidth allocation time interval, the current maximum average bandwidth usage is compared with the allocated bandwidth for the LSP. If the LSP needs more bandwidth, an attempt is made to set up a new path where bandwidth is equal to the current maximum average usage. If the attempt is successful, the LSP's traffic is routed through the new path and the old path is removed. If the attempt fails, the LSP continues to use its current path.

NOTE: In calculating the value for **Max AvgBW** (relative to the ingress LSP), the sample collected during make before break (MBB) is ignored to prevent inaccurate results. The first sample after a bandwidth adjustment, or after a change in the LSP ID (regardless of path change), is also ignored.

If you have configured link and node protection for the LSP and traffic has been switched to the bypass LSP, the automatic bandwidth allocation feature continues to operate and take bandwidth samples from

the bypass LSP. For the first bandwidth adjustment cycle, the maximum average bandwidth usage taken from the original link and node-protected LSP is used to resignal the bypass LSP if more bandwidth is needed. (Link and node protection are not supported on QFX Series switches.)

If you have configured fast-reroute for the LSP, you might not be able to use this feature to adjust the bandwidth. Because the LSPs use a fixed filter (FF) reservation style, when a new path is signaled, the bandwidth might be double-counted. Double-counting can prevent a fast-reroute LSP from ever adjusting its bandwidth when automatic bandwidth allocation is enabled. (Fast reroute is not supported on QFX Series switches.)

To configure automatic bandwidth allocation, complete the steps in the following sections:

NOTE: On the QFX10000 switches, you can only configure automatic bandwidth allocation at the **edit protocols mpls** hierarchy level. Logical systems are not supported.

Configuring Automatic Bandwidth Allocation on LSPs

IN THIS SECTION

- [Configuring the Automatic Bandwidth Allocation Interval | 518](#)
- [Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth | 519](#)
- [Configuring the Automatic Bandwidth Adjustment Threshold | 520](#)
- [Configuring a Limit on Bandwidth Overflow and Underflow Samples | 520](#)
- [Configuring Passive Bandwidth Utilization Monitoring | 522](#)

To enable automatic bandwidth allocation on an LSP, include the **auto-bandwidth** statement:

If an LSP has an automatic bandwidth configuration, you can disable automatic bandwidth adjustments on a particular path (either primary or secondary) by configuring a static bandwidth value and by disabling the CSPF computation (using the **no-cspf** statement).

For example:

```
user@host> show protocols mpls
label-switched-path primary-path {
  to 192.168.0.1;
  ldp-tunneling;
  optimize-timer 3571;
```

```

least-fill;
link-protection;
adaptive;
auto-bandwidth {
    adjust-interval 7177;
    adjust-threshold 5;
    minimum-bandwidth 1m;
    maximum-bandwidth 2500000000;
    adjust-threshold-overflow-limit 2;
    resignal-minimum-bandwidth;
}
primary primary-path;
secondary secondary-path {
    bandwidth 0;
    no-cspf;
    priority 0 0;
}
}

```

The statements configured at the **[edit protocols mpls label-switched-path *label-switched-path-name* auto-bandwidth]** hierarchy level are optional and explained in the following sections:

Configuring the Automatic Bandwidth Allocation Interval

At the end of the automatic bandwidth allocation interval, the automatic bandwidth computation and new path setup process is triggered.

NOTE: To prevent unnecessary resignaling of LSPs, it is best to configure an LSP adjustment interval that is at least three times longer than the MPLS automatic bandwidth statistics interval. For example, if you configure a value of 30 seconds for the MPLS automatic bandwidth statistics interval (**interval** statement at the **[edit protocols mpls statistics]** hierarchy level), you should configure a value of at least 90 seconds for the LSP adjustment interval (**adjust-interval** statement at the **[edit protocols mpls label-switched-path *label-switched-path-name* auto-bandwidth]** hierarchy level). See also [“Configuring Reporting of Automatic Bandwidth Allocation Statistics for LSPs” on page 524](#).

To specify the bandwidth reallocation interval in seconds for a specific LSP, include the **adjust-interval** statement:

```
adjust-interval seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls label-switched-path *lsp-name* **auto-bandwidth**]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name* **auto-bandwidth**]

Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth

You can maintain the LSP's bandwidth between minimum and maximum bounds by specifying values for the **minimum-bandwidth** and **maximum-bandwidth** statements.

NOTE: For a label-switched path (LSP) that has both **bandwidth** and **minimum-bandwidth** for autobandwidth configured under the [edit protocols mpls label-switched-path *lsp-name*] hierarchy level, the LSP bandwidth is adjusted differently.

The LSP is initiated with the bandwidth value configured under the **bandwidth** statement at the [edit protocols mpls label-switched-path *lsp-name*] hierarchy level. At the expiry of the **adjust-interval** timer, the LSP bandwidth gets adjusted based on the traffic flow.

If the bandwidth to be signaled is less than the value configured under the **minimum-bandwidth** statement at the [edit protocols mpls label-switched-path *lsp-name* **autobandwidth**] hierarchy level, then the LSP is signaled only using the minimum bandwidth.

If the bandwidth to be signaled is greater than the value configured under the **maximum-bandwidth** statement at the [edit protocols mpls label-switched-path *lsp-name* **autobandwidth**] hierarchy level, then the LSP is signaled only using the maximum bandwidth.

To specify the minimum amount of bandwidth allocated for a specific LSP, include the **minimum-bandwidth** statement:

```
minimum-bandwidth bps;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]

To specify the maximum amount of bandwidth allocated for a specific LSP, include the **maximum-bandwidth** statement:

```
maximum-bandwidth bps;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]

Configuring the Automatic Bandwidth Adjustment Threshold

Use the **adjust-threshold** statement to specify the sensitivity of the automatic bandwidth adjustment of an LSP to changes in bandwidth utilization. You can set the threshold for when to trigger automatic bandwidth adjustments. When configured, bandwidth demand for the current interval is determined and compared to the LSP's current bandwidth allocation. If the percentage difference in bandwidth is greater than or equal to the specified **adjust-threshold** percentage, the LSP's bandwidth is adjusted to the current bandwidth demand.

For example, assume that the current bandwidth allocation is 100 megabits per second (Mbps) and that the percentage configured for the **adjust-threshold** statement is 15 percent. If the bandwidth demand increases to 110 Mbps, the bandwidth allocation is not adjusted. However, if the bandwidth demand increases to 120 Mbps (20 percent over the current allocation) or decreases to 80 Mbps (20 percent under the current allocation), the bandwidth allocation is increased to 120 Mbps or decreased to 80 Mbps, respectively.

To configure the threshold for automatic bandwidth adjustment, include the **adjust-threshold** statement:

```
adjust-threshold percent;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]

Configuring a Limit on Bandwidth Overflow and Underflow Samples

The automatic bandwidth adjustment timer is a periodic timer which is triggered every adjust interval to determine whether any bandwidth adjustments are required on the LSP's active path. This interval is typically configured as a long period of time, usually hours. If, at the end of adjust interval, the change in bandwidth is above a certain adjust threshold, the LSP is resigaled with the new bandwidth.

During the automatic bandwidth adjustment interval, the router might receive a steady increase in traffic (increasing bandwidth utilization) on an LSP, potentially causing congestion or packet loss. To prevent this, you can define a second trigger to prematurely expire the automatic bandwidth adjustment timer before the end of the current adjustment interval.

Every statistics interval, the router samples the average bandwidth utilization of an LSP and if this has exceeded the current maximum average bandwidth utilization, the maximum average bandwidth utilization is updated.

During each sample period, the following conditions are also checked:

- Is the current average bandwidth utilization above the active bandwidth of the path?
- Has the difference between the average bandwidth utilization and the active bandwidth exceeded the adjust threshold (bandwidth utilization has changed significantly)?

If these conditions are true, it is considered to be one bandwidth overflow sample. Using the **adjust-threshold-overflow-limit** statement, you can define a limit on the number of bandwidth overflow samples such that when the limit is reached, the current automatic bandwidth adjustment timer is expired and a bandwidth adjustment is triggered. Once this adjustment is complete, the normal automatic bandwidth adjustment timer is reset to expire after the periodic adjustment interval.

To specify a limit on the number of bandwidth overflow samples before triggering an automatic bandwidth allocation adjustment, configure the **adjust-threshold-overflow-limit** statement:

```
adjust-threshold-overflow-limit number;
```

Similarly, if the current average bandwidth utilization is below the active bandwidth of the path by the configured adjusted threshold (meaning that bandwidth utilization has gone down significantly), the sample is considered to be an underflow sample. The adjusted (new signaling) bandwidth after an adjustment due to underflow is the maximum average bandwidth among the underflow samples. Starting in Junos OS Release 14.1R9, 15.1R7, 16.1R5, 16.1X2, 16.2R3, and 17.2R2, all zero value bandwidth samples are considered as underflow samples, except for the zero value samples that arrive after an LSP comes up for the first time, and the zero value samples that arrive first after a Routing Engine switchover.

You can specify a limit on the number of bandwidth underflow samples before triggering an automatic bandwidth allocation adjustment by configuring the **adjust threshold-underflow-limit** statement:

```
adjust-threshold-underflow-limit number;
```

These statements can be configured at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]

You must configure the **adjust-threshold** and **minimum-bandwidth** statements whenever you configure the **adjust-threshold-underflow-limit** statement. You must configure the **adjust-threshold** and **maximum-bandwidth** statements whenever you configure the **adjust-threshold-overflow-limit** statement

- You must configure a nonzero value for the **adjust-threshold** statement if you configure the **adjust-threshold-overflow-limit** or **adjust-threshold-underflow-limit** statement.
- Any bandwidth increase or decrease below the value configured for the **adjust-threshold** statement does not constitute an overflow or underflow condition.
- To prevent unlimited increases in LSP bandwidth (to limit overflow beyond a certain bandwidth), you must also configure the **maximum-bandwidth** statement when you configure the **adjust-threshold-overflow-limit** statement.

The following describes the other aspects of the **adjust-threshold-overflow-limit** statement:

- It only applies to bandwidth overflows. If the bandwidth is decreasing, the normal automatic bandwidth adjustment interval is used.
- It does not affect manually triggered automatic bandwidth adjustment.
- It applies to single-class DiffServ-TE LSPs.
- Because the **adjust-threshold-overflow-limit** statement can trigger a bandwidth adjustment, it cannot be enabled at the same time as the **monitor-bandwidth** statement (for information about that statement, see [“Configuring Passive Bandwidth Utilization Monitoring” on page 522](#)).
- You cannot configure automatic bandwidth adjustments to occur more often than every 300 seconds. The **adjust-threshold-overflow-limit** statement is subject to the same minimum value with regard to the minimum frequency of adjustment allowed. Overflow condition based adjustments can occur no sooner than 300 seconds from the start of the overflow condition. Therefore it is required that:

sample interval x adjust-threshold-overflow-limit >= 300s

These values are checked during the commit operation. An error is returned if the value is less than 300 seconds.

- If you change the value of the **adjust-threshold-overflow-limit** statement on a working router, you can expect the following behavior:
 - If you increase the current value of the **adjust-threshold-overflow-limit** statement, the old value is replaced with the new one.
 - If you decrease the current value of the **adjust-threshold-overflow-limit** statement and the current bandwidth overflow count is less than the new value, the old value is replaced with the new one.
 - If you decrease the current value of the **adjust-threshold-overflow-limit** statement and the current bandwidth overflow count is greater than the new value, the adjustment timer is immediately expired and a bandwidth adjustment is initiated.

Configuring Passive Bandwidth Utilization Monitoring

Use the **monitor-bandwidth** statement to switch to a passive bandwidth utilization monitoring mode. In this mode, no automatic bandwidth adjustments are made, but the maximum average bandwidth utilization is continuously monitored and recorded.

To configure passive bandwidth utilization monitoring, include the **monitor-bandwidth** statement:

```
monitor-bandwidth;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth**]

If you have configured an LSP with primary and secondary paths, the automatic bandwidth allocation statistics are carried over to the secondary path if the primary path fails. For example, consider a primary path whose adjustment interval is half complete and whose maximum average bandwidth usage is currently calculated as 50 Mbps. If the primary path suddenly fails, the time remaining for the next adjustment and the maximum average bandwidth usage are carried over to the secondary path.

Requesting Automatic Bandwidth Allocation Adjustment

For MPLS LSP automatic bandwidth allocation adjustment, the minimum value for the adjustment interval is 5 minutes (300 seconds). You might find it necessary to trigger a bandwidth allocation adjustment manually, for example in the following circumstances:

- When you are testing automatic bandwidth allocation in a network lab.
- When the LSP is configured for automatic bandwidth allocation in monitor mode (the **monitor-bandwidth** statement is included in the configuration as described in [“Configuring Passive Bandwidth Utilization Monitoring” on page 522](#)), and want to initiate an immediate bandwidth adjustment.

To use the **request mpls lsp adjust-autobandwidth** command, the following must be true:

- Automatic bandwidth allocation must be enabled on the LSP.
- The criteria required to trigger a bandwidth adjustment have been met (the difference between the adjust bandwidth and the current LSP path bandwidth is greater than the threshold limit).

A manually triggered bandwidth adjustment operates only on the active LSP path. Also, if you have enabled periodic automatic bandwidth adjustment, the periodic automatic bandwidth adjustment parameters (the adjustment interval and the maximum average bandwidth) are not reset after a manual adjustment.

For example, suppose the periodic adjust interval is 10 hours and there are currently 5 hours remaining before an automatic bandwidth adjustment is triggered. If you initiate a manual adjustment with the **request mpls lsp adjust-autobandwidth** command, the adjust timer is not reset and still has 5 hours remaining.

To manually trigger a bandwidth allocation adjustment, you need to use the **request mpls lsp adjust-autobandwidth** command. You can trigger the command for all affected LSPs on the router, or you can specify a particular LSP:

```
user@host> request mpls lsp adjust-autobandwidth
```

Once you execute this command, the automatic bandwidth adjustment validation process is triggered. If all the criteria for adjustment are met, the LSP's active path bandwidth is adjusted to the adjusted bandwidth value determined during the validation process.

Configuring Reporting of Automatic Bandwidth Allocation Statistics for LSPs

Automatic bandwidth allocation allows an MPLS tunnel to automatically adjust its bandwidth allocation based on the volume of traffic flowing through the tunnel. You can configure the device to collect statistics related to automatic bandwidth allocation by completing the following steps:

1. To collect statistics related to automatic bandwidth allocation, configure the **auto-bandwidth** option for the **statistics** statement at the **[edit protocols mpls]** hierarchy level. These settings apply to all LSPs configured on the router on which you have also configured the **auto-bandwidth** statement at the **[edit protocols mpls label-switched-path label-switched-path-name]** hierarchy level.

```
statistics {
  auto-bandwidth (MPLS Statistics);
  file filename <files number> <size size> <world-readable | no-world-readable>;
  interval seconds;
  no-transit-statistics;
  transit-statistics-polling;
}
```

2. Specify the **filename** for the files used to store the MPLS trace operation output using the **file** option. All files are placed in the directory **/var/log**. We recommend that you place MPLS tracing output in the file **mpls-log**.
3. Specify the maximum number of trace files using the **files number** option. When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**, then **trace-file.1**, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.
4. Specify the interval for calculating the average bandwidth usage by configuring a time in seconds using the **interval** option. You can also set the adjustment interval on a specific LSP by configuring the **interval** option at the **[edit protocols mpls label-switch-path label-switched-path-name statistics]** hierarchy level.

NOTE: To prevent unnecessary resignaling of LSPs, it is best to configure an LSP adjustment interval that is at least three times longer than the MPLS automatic bandwidth statistics interval. For example, if you configure a value of 30 seconds for the MPLS automatic bandwidth statistics interval (**interval** statement at the **[edit protocols mpls statistics]** hierarchy level), you should configure a value of at least 90 seconds for the LSP adjustment interval (**adjust-interval** statement at the **[edit protocols mpls label-switched-path label-switched-path-name auto-bandwidth]** hierarchy level).

5. To trace automatic bandwidth allocation, include the **autobw-state** flag for the MPLS **traceoptions** statement at the **[edit protocols mpls]** hierarchy level.

The following configuration enables the MPLS traceoptions for automatic bandwidth allocation. The trace records are stored in a file called **auto-band-trace** (the filename is user configurable):

```
[edit protocols mpls]
traceoptions {
  file auto-band-trace size 10k files 10 world-readable;
  flag autobw-state;
}
```

6. Using the **show log** command, you can display the automatic bandwidth allocation statistics file generated when you configure the **auto-bandwidth (MPLS Statistics)** statement. The following shows sample log file output taken from an MPLS statistics file named **auto-band-stats** on a router configured with an LSP named **E-D**. The log file shows that LSP **E-D** is operating over its reserved bandwidth limit initially. Before **Oct 30 17:14:57**, the router triggered an automatic bandwidth adjustment (you might see two sessions for an LSP undergoing an automatic bandwidth adjustment). By **Oct 30 17:16:57**, the LSP has been reestablished at a higher bandwidth and is now shown using less than 100 percent of its **Reserved Bw** (reserved bandwidth).

```
user@host> show log auto-band-stats
E-D          (LSP ID 5, Tunnel ID 6741)          209 pkt          17094 Byte
  1 pps      90 Bps Util 240.01% Reserved Bw      37 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 10Oct 30 17:13:57
Total 1 sessions: 1 success, 0 fail, 0 ignored
E-D          (LSP ID 5, Tunnel ID 6741)          241 pkt          19737 Byte
  1 pps      88 Bps Util 234.67% Reserved Bw      37 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 10Oct 30 17:14:27
Total 1 sessions: 1 success, 0 fail, 0 ignored
E-D          (LSP ID 5, Tunnel ID 6741)          276 pkt          22607 Byte
  1 pps      95 Bps Util 253.34% Reserved Bw      37 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 10Oct 30 17:14:57
Total 1 sessions: 1 success, 0 fail, 0 ignored
E-D          (LSP ID 5, Tunnel ID 6741)           0 pkt           0 Byte
  0 pps       0 Bps Util  0.00% Reserved Bw      37 Bps
E-D          (LSP ID 6, Tunnel ID 6741)           0 pkt           0 Byte
  0 pps       0 Bps Util  0.00% Reserved Bw     101 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 1decr nh
0x952c308, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 10Oct 30 17:15:27 Total
  2 sessions: 2 success, 0 fail, 0 ignored
E-D          (LSP ID 5, Tunnel ID 6741)           0 pkt           0 Byte
```

```

    0 pps          0 Bps Util  0.00% Reserved Bw          37 Bps
E-D              (LSP ID 6, Tunnel ID 6741)              33 pkt          2695 Byte
    1 pps          89 Bps Util 87.69% Reserved Bw          101 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 1decr nh
0x952c308, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 1Oct 30 17:15:57 Total
  2 sessions: 2 success, 0 fail, 0 ignored
E-D              (LSP ID 5, Tunnel ID 6741)              0 pkt          0 Byte
    0 pps          0 Bps Util  0.00% Reserved Bw          37 Bps
E-D              (LSP ID 6, Tunnel ID 6741)              65 pkt          5338 Byte
    1 pps          88 Bps Util 86.70% Reserved Bw          101 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 1decr nh
0x952c308, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 1Oct 30 17:16:27 Total
  2 sessions: 2 success, 0 fail, 0 ignored
E-D              (LSP ID 6, Tunnel ID 6741)              97 pkt          7981 Byte
    1 pps          88 Bps Util 86.70% Reserved Bw          101 Bps
decr nh 0x952c308, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 1Oct 30 17:16:57
Total 1 sessions: 1 success, 0 fail, 0 ignored

```

7. Issue the `show mpls lsp autobandwidth` command to display current information about automatic bandwidth allocation. The following shows sample output from the `show mpls lsp autobandwidth` command taken at about the same time as the log file shown previously:

```

user@host> show mpls lsp autobandwidth
Lspname          Last          Requested    Reserved    Highwater
AdjustTime LastAdjust
                BW          BW          BW          mark          Left
(sec)
E-D              300bps       812.005bps  812bps      1.56801kbps  294 sec
Wed Oct 30 17:15:26 2013

```

8. Issue the `file show` command to display the MPLS trace file. You need to specify the file location and file name (the file is located in `/var/log/`). The following shows sample trace file output is taken from an MPLS trace file named `auto-band-trace.0.gz` on a router configured with an LSP named `E-D`. The trace file shows that LSP `E-D` is operating over its reserved bandwidth limit initially. At **Oct 30 17:15:26**, the router triggers an automatic bandwidth adjustment (you might see two sessions for an LSP undergoing an automatic bandwidth adjustment). By **Oct 30 17:15:57**, the LSP has been reestablished at a higher bandwidth and is now shown using less than 100 percent of its **Reserved Bw** (reserved bandwidth).

```

user@host> file show /var/log/auto-band-trace.0.gz
Oct 30 17:13:57 trace_on: Tracing to "/var/log/E/auto-band-trace" started
Oct 30 17:13:57.466825 LSP E-D (id 5) new bytes arrived          2714 in 29

```

```

sec
Oct 30 17:14:27.466713 E-D (LSP ID 5, Tunnel ID 6741) 241 pkt
      19737 Byte      1 pps      88 Bps Util 234.67% Reserved Bw      37
Bps
Oct 30 17:14:27.466962 LSP E-D (id 5, old id 5); sampled bytes      19737 >
bytes recorded      17094
Oct 30 17:14:27.467035 LSP E-D (id 5) new bytes arrived      2643 in 29
sec
Oct 30 17:14:57.466599 E-D (LSP ID 5, Tunnel ID 6741) 276 pkt
      22607 Byte      1 pps      95 Bps Util 253.34% Reserved Bw      37
Bps
Oct 30 17:14:57.466758 LSP E-D (id 5, old id 5); sampled bytes      22607 >
bytes recorded      19737
Oct 30 17:14:57.466825 LSP E-D (id 5) new bytes arrived      2870 in 29
sec
Oct 30 17:15:26.265816 Adjust Autobw: LSP E-D (id 5) curr adj bw 300bps updated
with 812.005bps
Oct 30 17:15:26.266064 mpls LSP E-D Autobw change 512.005bps >= threshold 75bps
Oct 30 17:15:26.363372 Autobw Success: LSP E-D ( ) (old id 5 new id 6) update
prev active bw 300 bps with 812 bps
Oct 30 17:15:26.363686 RPD_MPLS_PATH_BANDWIDTH_CHANGE: MPLS path (lsp E-D)
bandwidth changed, path bandwidth 812 bps
Oct 30 17:15:27.364751 RPD_MPLS_LSP_BANDWIDTH_CHANGE: MPLS LSP E-D bandwidth
changed, lsp bandwidth 812 bps
Oct 30 17:15:27.466849 E-D (LSP ID 5, Tunnel ID 6741) 0 pkt
      0 Byte      0 pps      0 Bps Util 0.00% Reserved Bw      37
Bps
Oct 30 17:15:27.467050 E-D (LSP ID 6, Tunnel ID 6741) 0 pkt
      0 Byte      0 pps      0 Bps Util 0.00% Reserved Bw      101
Bps
Oct 30 17:15:57.466858 E-D (LSP ID 5, Tunnel ID 6741) 0 pkt
      0 Byte      0 pps      0 Bps Util 0.00% Reserved Bw      37
Bps
Oct 30 17:15:57.467106 E-D (LSP ID 6, Tunnel ID 6741) 33 pkt
      2695 Byte      1 pps      89 Bps Util 87.69% Reserved Bw      101
Bps
Oct 30 17:15:57.467201 LSP E-D (id 6, old id 5); LSP up after autobw adjustment
and active for 30 sec
Oct 30 17:15:57.467398 LSP E-D (id 6) psb bytes      2695 < bytes recorded
      22607 total bytes      2695 in 30 sec
Oct 30 17:15:57.467461 First sample of the adjust interval after automatic bw
adjustment
Oct 30 17:15:57.467594 Update curr max avg bw 0bps of LSP E-D with new bw
716.225bps

```

```

Oct 30 17:16:27.466830 E-D (LSP ID 5, Tunnel ID 6741) 0 pkt
0 Byte 0 pps 0 Bps Util 0.00% Reserved Bw 37
Bps
Oct 30 17:16:27.467079 E-D (LSP ID 6, Tunnel ID 6741) 65 pkt
5338 Byte 1 pps 88 Bps Util 86.70% Reserved Bw 101
Bps
Oct 30 17:16:27.467171 LSP E-D (id 6, old id 6); sampled bytes 5338 >
bytes recorded 2695
Oct 30 17:16:27.467237 LSP E-D (id 6) new bytes arrived 2643 in 29
sec
Oct 30 17:16:57.466712 E-D (LSP ID 6, Tunnel ID 6741) 97 pkt
7981 Byte 1 pps 88 Bps Util 86.70% Reserved Bw 101
Bps
Oct 30 17:16:57.466870 LSP E-D (id 6, old id 6); sampled bytes 7981 >
bytes recorded 5338

```

Configuring an LSP Across ASs

You can configure an LSP to traverse multiple areas in a network by including the **inter-domain** statement as a part of the LSP configuration. This statement allows the router to search for routes in the IGP database. You need to configure this statement on routers that might be unable to locate a path using intra-domain CSPF (by looking in the traffic engineering database (TED)). When you configure inter-area LSPs, the **inter-domain** statement is required.

Before you begin:

- Configure the device interfaces with family MPLS.
- Configure the device router ID and autonomous system number.
- Enable MPLS and RSVP on the router and transit interfaces.
- Configure your IGP to support traffic engineering.
- Set up an LSP from the ingress to the egress router.

To configure an LSP across multiple ASs on the ingress label-switched router (LER):

1. Enable MPLS on all the interfaces (excluding the management interface).

```

[edit protocols]
user@LER# set mpls interface all
user@LER# set mpls interface fxp0.0 disable

```

2. Enable RSVP on all the interfaces (excluding the management interface).


```
[edit protocols]
user@LER# set rsvp interface all
user@LER# set rsvp interface fxp0.0 disable
```

3. Configure the inter-area LSP.

```
[edit protocols]
user@LER# set mpls label-switched-path inter-area-LSP-name to egress-LER-ip-address
user@LER# set mpls label-switched-path inter-area-LSP-name inter-domain
```

4. Verify and commit the configuration.

```
[edit protocols]
user@LER# set rsvp interface ge-0/0/0.0
user@LER# set rsvp interface lo0.0
user@LER# set rsvp interface fxp0.0 disable
user@LER# set mpls statistics traffic-class-statistics
user@LER# set mpls label-switched-path R1-R2 to 20.0.0.1
user@LER# set mpls label-switched-path R1-R2 inter-domain
user@LER# set mpls interface ge-0/0/0.0
user@LER# set mpls interface lo0.0
user@LER# set mpls interface fxp0.0 disable
user@LER# set ospf traffic-engineering
user@LER# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@LER# set ospf area 0.0.0.0 interface lo0.0
```

Damping Advertisement of LSP State Changes

When an LSP changes from being up to being down, or from down to up, this transition takes effect immediately in the router software and hardware. However, when advertising LSPs into IS-IS and OSPF, you may want to damp LSP transitions, thereby not advertising the transition until a certain period of time has transpired (known as the hold time). In this case, if the LSP goes from up to down, the LSP is not advertised as being down until it has remained down for the hold-time period. Transitions from down to up are advertised into IS-IS and OSPF immediately. Note that LSP damping affects only the IS-IS and OSPF advertisements of the LSP; other routing software and hardware react immediately to LSP transitions.

To damp LSP transitions, include the **advertisement-hold-time** statement:

```
advertisement-hold-time seconds;
```

seconds can be a value from 0 through 65,535 seconds. The default is 5 seconds.

You can include this statement at the following hierarchy levels:


- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

Configuring Corouted Bidirectional LSPs

A corouted bidirectional packet LSP is a combination of two LSPs sharing the same path between a pair of ingress and egress nodes, as shown in [Figure 41 on page 530](#). It is established using the GMPLS extensions to RSVP-TE. This type of LSP can be used to carry any of the standard types of MPLS-based traffic, including Layer 2 VPNs, Layer 2 circuits, and Layer 3 VPNs. You can configure a single BFD session for the bidirectional LSP (you do not need to configure a BFD session for each LSP in each direction). You can also configure a single standby bidirectional LSP to provide a backup for the primary bidirectional LSP. Corouted bidirectional LSPs are supported for both penultimate hop popping (PHP) and ultimate hop popping (UHP).

High availability is available for bidirectional LSPs. You can enable graceful restart and nonstop active routing. Graceful restart and nonstop active routing are supported when the restarting router is the ingress, egress, or transit router for the bidirectional LSP.

Figure 41: Corouted Bidirectional LSP

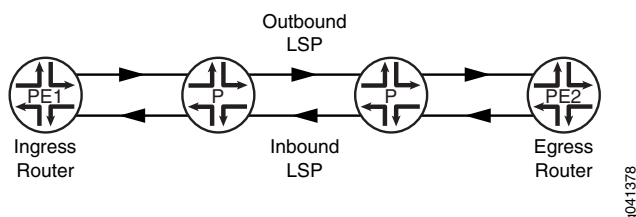

To configure a corouted bidirectional LSP:

1. In configuration mode, configure the ingress router for the LSP and include the **corouted-bidirectional** statement to specify that the LSP be established as a corouted bidirectional LSP.

The path is computed using CSPF and initiated using RSVP signaling (just like a unidirectional RSVP signaled LSP). Both the path to the egress router and the reverse path from the egress router are created when this configuration is committed.

```
[edit protocols mpls]
user@PE1# set label-switched-path sample-lsp corouted-bidirectional
```

2. (Optional) For a reverse path, configure an LSP on the egress router and include the **corouted-bidirectional-passive** statement to associate the LSP with another LSP.

No path computation or signaling is used for this LSP since it relies on the path computation and signaling provided by the ingress LSP. You cannot configure both the **corouted-bidirectional** statement and the **corouted-bidirectional-passive** statement on the same LSP.

```
[edit protocols mpls]
user@PE1# set label-switched-path sample-lsp-reverse-path corouted-bidirectional-passive
```

This statement also makes it easier to debug corouted bidirectional LSPs. If you configure the **corouted-bidirectional-passive** statement (again, on the egress router), you can issue **ping mpls lsp-end-point**, **ping mpls ldp**, **ping mpls rsvp**, **traceroute mpls ldp**, and **traceroute mpls rsvp** commands to test the corouted bidirectional LSP from the egress router.

3. Use the **show mpls lsp extensive** and the **show rsvp session extensive** commands to display information about the bidirectional LSP.

The following shows output for the **show rsvp session extensive** command when run on an ingress router with a bidirectional LSP configured:

```
user@PE1> show rsvp session extensive
```

```
Ingress RSVP: 2 sessions

10.255.14.39
  From: 10.255.14.43, LSPstate: Up, ActiveRoute: 0
  LSPname: l-to-h, LSPpath: Primary
  LSPTtype: Static Configured
  Bidirectional, Upstream label in: 3, Upstream label out: -
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 300032
  Resv style: 1 FF, Label in: -, Label out: 300032
  Time left: -, Since: Tue May 31 08:49:25 2011
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 24617 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.1.1.2 (ge-0/0/0.0) 3396 pkts
  RESV rcvfrom: 10.1.1.2 (ge-0/0/0.0) 3394 pkts
  PATH notifyto: localclient
  RESV notifyto: 10.255.14.39
  Protection attributes: primary, working, 1:N protection
  Association attributes: recovery, src 10.255.14.43, id 1
  Explct route: 10.1.1.2 10.1.2.2 10.1.3.2
  Record route: 10.1.1.2 10.1.2.2 10.1.3.2
```

10.255.14.39

From: 10.255.14.43, LSPstate: Up, ActiveRoute: 0
 LSPname: l-to-h, LSPpath: Secondary
 LSPtype: Static Configured
 Bidirectional, Upstream label in: 3, Upstream label out: -
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 300032
 Resv style: 1 FF, Label in: -, Label out: 300032
 Time left: -, Since: Tue May 31 08:49:25 2011
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 2 receiver 24617 protocol 0
 PATH rcvfrom: localclient
 Adspec: sent MTU 1500
 Path MTU: received 1500
 PATH sentto: 10.1.1.2 (ge-0/0/0.0) 3396 pkts
 RESV rcvfrom: 10.1.1.2 (ge-0/0/0.0) 3394 pkts
 Protection attributes: primary, protecting
 Association attributes: recovery, src 10.255.14.43, id 1
 Explct route: 10.2.1.2 10.2.2.2 10.2.3.2
 Record route: 10.2.1.2 10.2.2.2 10.2.3.2

Total 2 displayed, Up 2, Down 0

Egress RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

Configuring the Entropy Label for LSPs

The insertion of entropy labels for an LSP enables transit routers to load-balance MPLS traffic across ECMP paths or Link Aggregation groups using just the MPLS label stack as a hash input without having to rely on deep packet inspection. Deep packet inspection requires more of the router's processing power and different routers have differing deep-packet inspection capabilities.

To configure the entropy label for an LSP, complete the following steps:

1. On the ingress router, include the **entropy-label** statement at the **[edit protocols mpls labeled-switched-path *labeled-switched-path-name*]** hierarchy level or at the **[edit protocols mpls static-labeled-switched-path *labeled-switched-path-name* ingress]** hierarchy level. The entropy label is added to the MPLS label stack and can be processed in the forwarding plane.

```
entropy-label;
```

NOTE: This is only applicable for RSVP and static LSPs.

2. On the ingress router, you can configure an ingress policy for LDP-signaled LSPs:

```
entropy-label {
  ingress-policy policy-name;
}
```

Configure the ingress policy at the **[edit policy-options]** hierarchy level:

```
policy-options {
  policy-statement policy-name {
    term term-name {
      from {
        prefix-list prefix-list-name;
      }
      then actions;
    }
  }
}
```

The following shows an example of an entropy label ingress policy.

```
policy-options {
```

```

policy-statement entropy-policy {
  term no-insert-entropy-label {
    from {
      prefix-list no-entropy-label-fec;
    }
    then accept;
  }
}

```

3. (Optional) By default, routers that support the pushing and popping of entropy labels are configured with the **load-balance-label-capability** statement at the **[edit forwarding-options]** hierarchy level to signal the labels on a per-LSP basis. If the peer router is not equipped to handle load-balancing labels, you can prevent the provider edge (PE) router from signaling the entropy label capability by configuring the **no-load-balance-label-capability** statement at the **[edit forwarding-options]** hierarchy level.

```

[edit forwarding-options]
user@PE no-load-balance-label-capability;

```

Transit routers require no configuration. The presence of the entropy label indicates to the transit router to load balance based solely on the MPLS label stack.

Penultimate hop routers pop the entropy label by default.

Example: Configuring an Entropy Label for a BGP Labeled Unicast LSP

IN THIS SECTION

- [Requirements | 535](#)
- [Overview | 535](#)
- [Configuration | 537](#)
- [Verification | 555](#)

This example shows how to configure an entropy label for a BGP labeled unicast to achieve end-to-end load balancing using entropy labels. When an IP packet has multiple paths to reach its destination, Junos OS uses certain fields of the packet headers to hash the packet to a deterministic path. This requires an entropy label, a special load-balancing label that can carry the flow information. LSRs in the core simply

use the entropy label as the key to hash the packet to the correct path. An entropy label can be any label value between 16 to 1048575 (regular 20-bit label range). Since this range overlaps with the existing regular label range, a special label called entropy label indicator (ELI) is inserted before the entropy label. ELI is a special label assigned by IANA with the value of 7.

BGP labeled unicasts generally concatenate RSVP or LDP LSPs across multiple IGP areas or multiple autonomous systems. RSVP or LDP entropy labels are popped at the penultimate hop node, together with the RSVP or LDP label. This feature enables the use of entropy labels at the stitching points to bridge the gap between the penultimate hop node and the stitching point, in order to achieve end-to-end entropy label load balancing for BGP traffic.

Requirements

This example uses the following hardware and software components:

- Seven MX Series routers with MPCs
- Junos OS Release 15.1 or later running on all the devices

Before you configure an entropy label for BGP labeled unicast, make sure you:

1. Configure the device interfaces.
2. Configure OSPF or any other IGP protocol.
3. Configure BGP.
4. Configure RSVP.
5. Configure MPLS.

Overview

When BGP labeled unicasts concatenate RSVP or LDP LSPs across multiple IGP areas or multiple autonomous systems, RSVP or LDP entropy labels are popped at the penultimate hop node, together with the RSVP or LDP label. However, there are no entropy labels at the stitching points, that is, the routers between two areas. Therefore, the routers at the stitching points used the BGP labels to forward packets.

Beginning with Junos OS Release 15.1, you can configure an entropy label for BGP labeled unicast to achieve end-to-end entropy label load balancing. This feature enables the use of an entropy label at the stitching points in order to achieve end-to-end entropy label load balancing for BGP traffic. Junos OS allows the insertion of entropy labels at the BGP labeled unicast LSP ingress.

By default, routers that support entropy labels are configured with the **load-balance-label-capability** statement at the **[edit forwarding-options]** hierarchy level to signal the labels on a per-LSP basis. If the peer router is not equipped to handle load-balancing labels, you can prevent the signaling of entropy label

capability by configuring the **no-load-balance-label-capability** at the **[edit forwarding-options]** hierarchy level.

```
[edit forwarding-options]
user@PE# no-load-balance-label-capability
```


NOTE: You can explicitly disable advertising entropy label capability at egress for routes specified in the policy with the **no-entropy-label-capability** option at the **[edit policy-options policy-statement *policy name* then]** hierarchy level.

```
[edit policy-options policy-statement policy-name then]
user@PE# no-entropy-label-capability
```

Topology

In [Figure 42 on page 537](#), Router PE1 is the ingress router and Router PE2 is the egress router. Routers P1 and P2 are the transit routers. Router ABR is the area bridge router between Area 0 and Area 1. LAG is configured on the provider routers for load balancing the traffic. Entropy label capability for BGP labeled unicast is enabled on the ingress Router PE1.

Figure 42: Configuring an Entropy Label for BGP Labeled Unicast

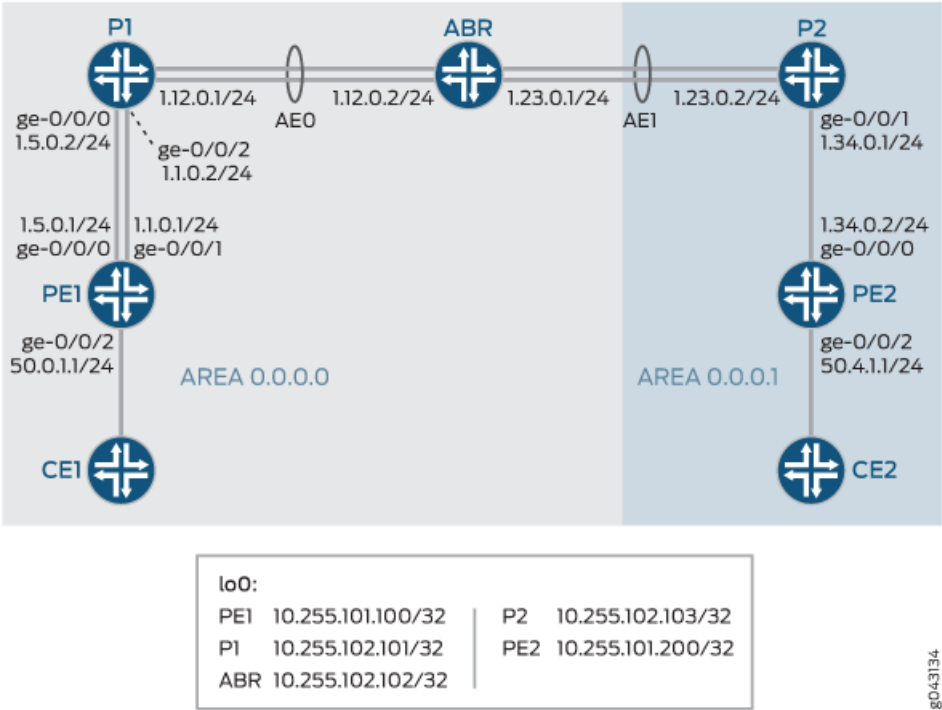

Configuration

IN THIS SECTION

- [Configuring Router PE1 | 543](#)
- [Configuring Router P1 | 547](#)
- [Configuring Router ABR | 549](#)
- [Results | 551](#)

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

Router PE1

```
set interfaces ge-0/0/0 unit 0 family inet address 1.5.0.1/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family inet6 address 2000::1:5:0:1/120
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 1.1.0.1/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family inet6 address 2000::1:1:0:1/120
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 50.0.1.1/24
set interfaces ge-0/0/2 unit 0 family inet6 address 2000::1:34:0:2/120
set interfaces ge-0/0/3 vlan-tagging
set interfaces ge-0/0/3 unit 0 vlan-id 520
set interfaces ge-0/0/3 unit 0 family inet address 1.0.0.2/16
set interfaces lo0 unit 0 family inet address 10.255.101.100/32 primary
set routing-options router-id 10.255.101.100
set routing-options autonomous-system 1
set protocols rsvp interface all
set protocols mpls icmp-tunneling
set protocols mpls no-cspf
set protocols mpls label-switched-path r0-r2 to 10.255.102.102
set protocols mpls label-switched-path r0-r2 entropy-label
set protocols mpls interface all
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.101.100
set protocols bgp group ibgp family inet labeled-unicast entropy-label
set protocols bgp group ibgp neighbor 10.255.102.102 family inet labeled-unicast rib inet.3
set protocols bgp group ibgp neighbor 10.255.101.200 family inet-vpn unicast
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set policy-options prefix-list el-fec 10.255.101.200/32
set policy-options prefix-list el-fec-2 10.255.102.102/32
set policy-options policy-statement EL from prefix-list el-fec
set policy-options policy-statement EL then accept
set policy-options policy-statement EL-2 from prefix-list el-fec-2
set policy-options policy-statement EL-2 then accept
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf then accept
set policy-options policy-statement ospf-to-bgp from protocol ospf
set policy-options policy-statement ospf-to-bgp then accept
set policy-options policy-statement stat-to-bgp from protocol static
```

```

set policy-options policy-statement stat-to-bgp then accept
set policy-options community VPN members target:100:1
set routing-instances VPN-l3vpn instance-type vrf
set routing-instances VPN-l3vpn interface ge-0/0/2.0
set routing-instances VPN-l3vpn interface ge-0/0/3.0
set routing-instances VPN-l3vpn route-distinguisher 100.100.100.100:100
set routing-instances VPN-l3vpn vrf-target target:100:1
set routing-instances VPN-l3vpn routing-options static route 5.0.0.0/16 next-hop 1.0.0.1
set routing-instances VPN-l3vpn protocols ospf export bgp-to-ospf
set routing-instances VPN-l3vpn protocols ospf area 0.0.0.0 interface ge-0/0/2.0

```

Router P1

```

set interfaces ge-0/0/0 unit 0 family inet address 1.5.0.2/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family inet6 address 2000::1:5:0:2/120
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 gigether-options 802.3ad ae0
set interfaces ge-0/0/2 unit 0 family inet address 1.1.0.2/24
set interfaces ge-0/0/2 unit 0 family iso
set interfaces ge-0/0/2 unit 0 family inet6 address 2000::1:1:0:2/120
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 gigether-options 802.3ad ae0
set interfaces ae0 unit 0 family inet address 1.12.0.1/24
set interfaces ae0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.102.101/32 primary
set forwarding-options hash-key family mpls label-1
set forwarding-options hash-key family mpls label-2
set forwarding-options hash-key family mpls label-3
set forwarding-options enhanced-hash-key family mpls no-payload
set routing-options router-id 10.255.102.101
set routing-options autonomous-system 1
set routing-options forwarding-table export pplb
set protocols rsvp interface all
set protocols mpls icmp-tunneling
set protocols mpls interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface all

```

```

set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set policy-options policy-statement pplb then load-balance per-packet

```

Router ABR

```

set interfaces ge-0/0/0 gigether-options 802.3ad ae0
set interfaces ge-0/0/1 gigether-options 802.3ad ae1
set interfaces ge-0/0/2 gigether-options 802.3ad ae0
set interfaces ge-0/0/3 gigether-options 802.3ad ae1
set interfaces ae0 unit 0 family inet address 1.12.0.2/24
set interfaces ae0 unit 0 family mpls
set interfaces ae1 unit 0 family inet address 1.23.0.1/24
set interfaces ae1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.102.102/32 primary
set forwarding-options hash-key family mpls label-1
set forwarding-options hash-key family mpls label-2
set forwarding-options hash-key family mpls label-3
set forwarding-options enhanced-hash-key family mpls no-payload
set routing-options router-id 10.255.102.102
set routing-options autonomous-system 1
set routing-options forwarding-table export pplb
set protocols rsvp interface all
set protocols mpls icmp-tunneling
set protocols mpls label-switched-path r2-r0 to 10.255.101.100
set protocols mpls label-switched-path r2-r0 entropy-label
set protocols mpls label-switched-path r2-r4 to 10.255.101.200
set protocols mpls label-switched-path r2-r4 entropy-label
set protocols mpls interface all
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.102.102
set protocols bgp group ibgp family inet labeled-unicast rib inet.3
set protocols bgp group ibgp neighbor 10.255.101.100 export send-inet3-R4
set protocols bgp group ibgp neighbor 10.255.101.200 export send-inet3-R0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ae0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

```

set protocols ospf area 0.0.0.1 interface ge-0/0/3.0
set protocols ospf area 0.0.0.1 interface ge-0/0/1.0
set protocols ospf area 0.0.0.1 interface ae1.0
set protocols ldp interface all
set policy-options policy-statement pplb then load-balance per-packet
set policy-options policy-statement send-inet3-R0 from route-filter 10.255.101.100/32 exact
set policy-options policy-statement send-inet3-R0 then accept
set policy-options policy-statement send-inet3-R4 from route-filter 10.255.101.200/32 exact
set policy-options policy-statement send-inet3-R4 then accept

```

Router P2

```

set chassis aggregated-devices ethernet device-count 3
set interfaces ge-0/0/0 gigether-options 802.3ad ae0
set interfaces ge-0/0/1 unit 0 family inet address 1.34.0.1/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family inet6 address 2000::1:34:0:1/120
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 gigether-options 802.3ad ae0
set interfaces ae1 unit 0 family inet address 1.23.0.2/24
set interfaces ae1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.102.103/32 primary
set forwarding-options enhanced-hash-key family mpls no-payload
set routing-options router-id 10.255.102.103
set routing-options autonomous-system 1
set routing-options forwarding-table export pplb
set protocols rsvp interface all
set protocols mpls icmp-tunneling
set protocols mpls interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.1 interface lo0.0 passive
set protocols ospf area 0.0.0.1 interface fxp0.0 disable
set protocols ospf area 0.0.0.1 interface all
set policy-options policy-statement pplb then load-balance per-packet

```

Router PE2

```

set interfaces ge-0/0/0 unit 0 family inet address 1.34.0.2/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family inet6 address 2000::1:34:0:2/120
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 vlan-tagging
set interfaces ge-0/0/1 unit 0 vlan-id 520
set interfaces ge-0/0/1 unit 0 family inet address 2.0.0.2/16
set interfaces ge-0/0/2 unit 0 family inet address 50.4.1.1/24
set interfaces ge-0/0/2 unit 0 family inet6 address 2000::1:34:0:2/120
set interfaces lo0 unit 0 family inet address 10.255.101.200/32 primary
set routing-options router-id 10.255.101.200
set routing-options autonomous-system 1
set protocols rsvp interface all
set protocols mpls icmp-tunneling
set protocols mpls no-cspf
set protocols mpls label-switched-path r4-r2 to 10.255.102.102
set protocols mpls label-switched-path r4-r2 entropy-label
set protocols mpls interface all
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.101.200
set protocols bgp group ibgp neighbor 10.255.102.102 family inet labeled-unicast rib inet.3
set protocols bgp group ibgp neighbor 10.255.101.100 family inet-vpn unicast
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.1 interface all
set protocols ospf area 0.0.0.1 interface fxp0.0 disable
set protocols ospf area 0.0.0.1 interface lo0.0 passive
set policy-options prefix-list el-fec 10.255.101.100/32
set policy-options policy-statement EL term el from prefix-list el-fec
set policy-options policy-statement EL term el then accept
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf then accept
set policy-options policy-statement ospf-to-bgp from protocol ospf
set policy-options policy-statement ospf-to-bgp then accept
set policy-options policy-statement stat-to-bgp from protocol static
set policy-options policy-statement stat-to-bgp then accept
set policy-options community VPN members target:100:1
set routing-instances VPN-l3vpn instance-type vrf
set routing-instances VPN-l3vpn interface ge-0/0/1.0
set routing-instances VPN-l3vpn interface ge-0/0/2.0
set routing-instances VPN-l3vpn route-distinguisher 100.100.100.100:104
set routing-instances VPN-l3vpn vrf-target target:100:1
set routing-instances VPN-l3vpn routing-options static route 6.0.0.0/16 next-hop 2.0.0.1

```

```

set routing-instances VPN-l3vpn protocols ospf export bgp-to-ospf
set routing-instances VPN-l3vpn protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set routing-instances VPN-l3vpn protocols ospf area 0.0.0.0 interface ge-0/0/1.0

```

Configuring Router PE1

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router PE1:

NOTE: Repeat this procedure for Router PE2 after modifying the appropriate interface names, addresses, and other parameters.

1. Configure the interfaces with IPv4 and IPv6 addresses.

```

[edit interfaces]
user@PE1# set ge-0/0/0 unit 0 family inet address 1.5.0.1/24
user@PE1# set ge-0/0/0 unit 0 family iso
user@PE1# set ge-0/0/0 unit 0 family inet6 address 2000::1:5:0:1/120
user@PE1# set ge-0/0/0 unit 0 family mpls

user@PE1# set ge-0/0/1 unit 0 family inet address 1.1.0.1/24
user@PE1# set ge-0/0/1 unit 0 family iso
user@PE1# set ge-0/0/1 unit 0 family inet6 address 2000::1:1:0:1/120
user@PE1# set ge-0/0/1 unit 0 family mpls

user@PE1# set ge-0/0/2 unit 0 family inet address 50.0.1.1/24
user@PE1# set ge-0/0/2 unit 0 family inet6 address 2000::1:34:0:2/120

user@PE1# set ge-0/0/3 vlan-tagging
user@PE1# set ge-0/0/3 unit 0 vlan-id 520
user@PE1# set ge-0/0/3 unit 0 family inet address 1.0.0.2/16

```

2. Configure the loopback interface.

```

[edit interfaces]

```

```
user@PE1# set lo0 unit 0 family inet address 10.255.101.100/32 primary
```

3. Set the router ID and the autonomous system number.

```
[edit routing-options]
user@PE1# set router-id 10.255.101.100
user@PE1# set autonomous-system 1
```

4. Configure RSVP protocol for all interfaces.

```
[edit protocols]
user@PE1# set protocols rsvp interface all
```

5. Enable MPLS on all the interfaces of Router PE1 and specify the LSP.

```
[edit protocols]
user@PE1# set mpls icmp-tunneling
user@PE1# set mpls no-cspf
user@PE1# set mpls label-switched-path r0-r2 to 10.255.102.102
user@PE1# set mpls label-switched-path r0-r2 entropy-label
user@PE1# set mpls interface all
```

6. Configure IBGP on the internal routers.

```
[edit protocols]
user@PE1# set bgp group ibgp type internal
user@PE1# set bgp group ibgp local-address 10.255.101.100
```

7. Enable entropy label capability for BGP labeled unicast for internal BGP group ibgp.

```
user@PE1# set bgp group ibgp family inet labeled-unicast entropy-label
user@PE1# set bgp group ibgp neighbor 10.255.102.102 family inet labeled-unicast rib inet.3
user@PE1# set bgp group ibgp neighbor 10.255.101.200 family inet-vpn unicast
```

8. Enable the OSPF protocol on all the interfaces of the area border router (ABR).

```
[edit protocols]
user@PE1# set ospf traffic-engineering
```



```

user@PE1# set ospf area 0.0.0.0 interface all
user@PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
user@PE1# set ospf area 0.0.0.0 interface lo0.0 passive

```

9. Define prefix lists to specify the routes with entropy label capability.

```

[edit policy-options ]
user@PE1# set policy-options prefix-list el-fec 10.255.101.200/32
user@PE1# set policy-options prefix-list el-fec-2 10.255.102.102/32

```

10. Define a policy EL to specify the routes with entropy label capability.

```

[edit policy-options ]
user@PE1# set policy-statement EL from prefix-list el-fec
user@PE1# set policy-statement EL then accept

```

11. Define another policy EL-2 to specify the routes with entropy label capability.

```

[edit policy-options ]
user@PE1# set policy-statement EL-2 from prefix-list el-fec-2
user@PE1# set policy-statement EL-2 then accept

```

12. Define a policy to export BGP routes to the OSPF routing table.

```

[edit policy-options ]
user@PE1# set policy-statement bgp-to-ospf from protocol bgp
user@PE1# set policy-statement bgp-to-ospf then accept

```

13. Define a policy to export OSPF routes to the BGP routing table.

```

[edit policy-options ]
user@PE1# set policy-statement ospf-to-bgp from protocol ospf
user@PE1# set policy-statement ospf-to-bgp then accept

```

14. Define a policy to export static routes to the BGP routing table.

```

[edit policy-options ]
user@PE1# set policy-statement stat-to-bgp from protocol static

```

```
user@PE1# set policy-statement stat-to-bgp then accept
```

15. Configure a VPN target for the VPN community.

```
[edit policy-options ]
user@PE1# set community VPN members target:100:1
```

16. Configure the Layer 3 VPN routing instance VPN-I3vpn.

```
[edit routing-instances]
user@PE1# set VPN-I3vpn instance-type vrf
```

17. Assign the interfaces for the VPN-I3vpn routing instance.

```
[edit routing-instances]
user@PE1# set VPN-I3vpn interface ge-0/0/2.0
user@PE1# set VPN-I3vpn interface ge-0/0/3.0
```

18. Configure the route distinguisher for the VPN-I3vpn routing instance.

```
[edit routing-instances]
user@PE1# set VPN-I3vpn route-distinguisher 100.100.100.100:100
```

19. Configure a VPN routing and forwarding (VRF) target for the VPN-I3vpn routing instance.

```
[edit routing-instances]
user@PE1# set VPN-I3vpn vrf-target target:100:1
```

20. Configure a static route to Device CE1 using the Layer 3 VPN protocol for the VPN-I3vpn routing instance.

```
[edit routing-instances]
user@PE1# set VPN-I3vpn routing-options static route 5.0.0.0/16 next-hop 1.0.0.1
```

21. Export the BGP routes to the OSPF routing table for the VPN-I3vpn routing instance.

```
[edit routing-instances]
user@PE1# set VPN-I3vpn protocols ospf export bgp-to-ospf
```

22. Assign the OSPF interface for the VPN-I3vpn routing instance.

```
[edit routing-instances]
user@PE1# set VPN-I3vpn protocols ospf area 0.0.0.0 interface ge-0/0/2.0
```

Configuring Router P1

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router P1:

NOTE: Repeat this procedure for Router P2 after modifying the appropriate interface names, addresses, and other parameters.

1. Configure the interfaces with IPv4 and IPv6 addresses.

```
[edit interfaces]
user@P1# set ge-0/0/0 unit 0 family inet address 1.5.0.2/24
user@P1# set ge-0/0/0 unit 0 family iso
user@P1# set ge-0/0/0 unit 0 family inet6 address 2000::1:5:0:2/120
user@P1# set ge-0/0/0 unit 0 family mpls

user@P1# set ge-0/0/2 unit 0 family inet address 1.1.0.2/24
user@P1# set ge-0/0/2 unit 0 family iso
user@P1# set ge-0/0/2 unit 0 family inet6 address 2000::1:1:0:2/120
user@P1# set ge-0/0/2 unit 0 family mpls

user@P1# set ge-0/0/1 gigether-options 802.3ad ae0

user@P1# set ge-0/0/3 gigether-options 802.3ad ae0
```

2. Configure link aggregation on the interfaces.

```
user@P1# set ae0 unit 0 family inet address 1.12.0.1/24
```

```
user@P1# set ae0 unit 0 family mpls
```

3. Configure the loopback interface.

```
[edit interfaces]
user@P1# set lo0 unit 0 family inet address 10.255.102.101/32 primary
```

4. Configure MPLS labels that the router uses for hashing the packets to its destination for load balancing.

```
[edit forwarding-options]
user@P1# set hash-key family mpls label-1
user@P1# set hash-key family mpls label-2
user@P1# set hash-key family mpls label-3
user@P1# set enhanced-hash-key family mpls no-payload
```

5. Set the router ID and the autonomous system number.

```
[edit routing-options]
user@P1# set router-id 10.255.102.101
user@P1# set autonomous-system 1
```

6. Enable per packet load balancing.

```
[edit routing-options]
user@P1# set forwarding-table export pplb
```

7. Configure the RSVP protocol for all interfaces.

```
[edit protocols]
user@P1# set protocols rsvp interface all
```

8. Enable MPLS on all the interfaces of Router P1 and specify the LSP.

```
[edit protocols]
user@P1# set protocols mpls icmp-tunneling
user@P1# set protocols mpls interface all
```

9. Enable the OSPF protocol on all the interfaces of Router P1 excluding the management interface.

```
[edit protocols]
user@P1# set protocols ospf traffic-engineering
user@P1# set protocols ospf area 0.0.0.0 interface lo0.0 passive
user@P1# set protocols ospf area 0.0.0.0 interface fxp0.0 disable
user@P1# set protocols ospf area 0.0.0.0 interface all
user@P1# set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
user@P1# set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
```

10. Define a policy for per packet load balancing.

```
[edit policy-options]]
user@P1# set policy-statement pplb then load-balance per-packet
```

Configuring Router ABR

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router ABR:

1. Configure the interfaces with IPv4 and IPv6 addresses.

```
[edit interfaces]
user@ABR# set ge-0/0/0 gigether-options 802.3ad ae0

user@ABR# set ge-0/0/1 gigether-options 802.3ad ae1

user@ABR# set ge-0/0/2 gigether-options 802.3ad ae0

user@ABR# set ge-0/0/3 gigether-options 802.3ad ae1
```

2. Configure the loopback interface.

```
[edit interfaces]
user@ABR# set lo0 unit 0 family inet address 10.255.102.102/32 primary
```

3. Configure link aggregation on the interfaces.

```
[edit interfaces]
user@ABR# set ae0 unit 0 family inet address 1.12.0.2/24
user@ABR# set ae0 unit 0 family mpls
user@ABR# set ae1 unit 0 family inet address 1.23.0.1/24
user@ABR# set ae1 unit 0 family mpls
```

4. Configure MPLS labels that the router uses for hashing the packets to its destination for load balancing.

```
[edit forwarding-options]
user@ABR# set hash-key family mpls label-1
user@ABR# set hash-key family mpls label-2
user@ABR# set hash-key family mpls label-3
user@ABR# set enhanced-hash-key family mpls no-payload
```

5. Set the router ID and the autonomous system number.

```
[edit routing-options]
user@ABR# set router-id 10.255.102.102
user@ABR# set autonomous-system 1
```

6. Enable per packet load balancing.

```
[edit routing-options]
user@ABR# set forwarding-table export pplib
```

7. Configure the RSVP protocol for all interfaces.

```
[edit protocols]
user@ABR# set protocols rsvp interface all
```

8. Enable MPLS on all the interfaces of Router P1 and specify the LSP.

```
[edit protocols]
user@ABR# set mpls icmp-tunneling
user@ABR# set mpls label-switched-path r2-r0 to 10.255.101.100
user@ABR# set mpls label-switched-path r2-r0 entropy-label
user@ABR# set mpls label-switched-path r2-r4 to 10.255.101.200
user@ABR# set mpls label-switched-path r2-r4 entropy-label
user@ABR# set mpls interface all
```

9. Configure IBGP on the internal routers.

```
[edit protocols ]
user@ABR# set bgp group ibgp type internal
user@ABR# set bgp group ibgp local-address 10.255.102.102
user@ABR# set bgp group ibgp family inet labeled-unicast rib inet.3
user@ABR# set bgp group ibgp neighbor 10.255.101.100 export send-inet3-R4
user@ABR# set bgp group ibgp neighbor 10.255.101.200 export send-inet3-R0
```

10. Enable the OSPF protocol on all the interfaces of ABR.

```
[edit protocols ]
user@ABR# set ospf traffic-engineering
user@ABR# set ospf area 0.0.0.0 interface lo0.0 passive
user@ABR# set ospf area 0.0.0.0 interface ge-0/0/2.0
user@ABR# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@ABR# set ospf area 0.0.0.0 interface ae0.0
user@ABR# set ospf area 0.0.0.0 interface fxp0.0 disable
user@ABR# set ospf area 0.0.0.1 interface ge-0/0/3.0
user@ABR# set ospf area 0.0.0.1 interface ge-0/0/1.0
user@ABR# set ospf area 0.0.0.1 interface ae1.0
```

11. Define a policy to specify the routes with entropy label capability.

```
[edit policy-options ]
user@ABR# set policy-statement pplb then load-balance per-packet
user@ABR# set policy-statement send-inet3-R0 from route-filter 10.255.101.100/32 exact
user@ABR# set policy-statement send-inet3-R0 then accept
user@ABR# set policy-statement send-inet3-R4 from route-filter 10.255.101.200/32 exact
user@ABR# set policy-statement send-inet3-R4 then accept
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show routing-options**, **show forwarding options**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
[edit]
user@ABR# show interfaces
ge-0/0/0 {
  gigether-options {
    802.3ad ae0;
```

```

    }
}
ge-0/0/1 {
    gether-options {
        802.3ad ae1;
    }
}
ge-0/0/2 {
    gether-options {
        802.3ad ae0;
    }
}
ge-0/0/3 {
    gether-options {
        802.3ad ae1;
    }
}
ae0 {
    unit 0 {
        family inet {
            address 1.12.0.2/24;
        }
        family mpls;
    }
}
ae1 {
    unit 0 {
        family inet {
            address 1.23.0.1/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.102.102/32 {
                primary;
            }
        }
    }
}

```

[edit]


```
user@ABR# show protocols
rsvp {
  interface all;
}
mpls {
  icmp-tunneling;
  label-switched-path r2-r0 {
    to 10.255.101.100;
    entropy-label;
  }
  label-switched-path r2-r4 {
    to 10.255.101.200;
    entropy-label;
  }
  interface all;
}
bgp {
  group ibgp {
    type internal;
    local-address 10.255.102.102;
    family inet {
      labeled-unicast {
        rib {
          inet.3;
        }
      }
    }
    neighbor 10.255.101.100 {
      export send-inet3-R4;
    }
    neighbor 10.255.101.200 {
      export send-inet3-R0;
    }
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface lo0.0 {
      passive;
    }
    interface ge-0/0/2.0;
    interface ge-0/0/0.0;
    interface ae0.0;
```

```

        interface fxp0.0 {
            disable;
        }
    }
    area 0.0.0.1 {
        interface ge-0/0/3.0;
        interface ge-0/0/1.0;
        interface ae1.0;
    }
}

```

```

[edit]
user@ABR# show routing-options
router-id 10.255.102.102;
autonomous-system 1;
forwarding-table {
    export pplb;
}

```

```

[edit]
user@ABR# show forwarding-options
hash-key {
    family mpls {
        label-1;
        label-2;
        label-3;
    }
}
enhanced-hash-key {
    family mpls {
        no-payload;
    }
}

```

```

[edit]
user@ABR# show policy-options
policy-statement pplb {
    then {
        load-balance per-packet;
    }
}
policy-statement send-inet3-R0 {

```

```

    from {
        route-filter 10.255.101.100/32 exact;
    }
    then accept;
}
policy-statement send-inet3-R4 {
    from {
        route-filter 10.255.101.200/32 exact;
    }
    then accept;
}

```

Verification

IN THIS SECTION

- [Verifying That the Entropy Label Capability Is Being Advertised from Router PE2 | 555](#)
- [Verifying That Router ABR Receives the Entropy Label Advertisement | 556](#)
- [Verifying That the Entropy Label Flag Is Set | 558](#)

Confirm that the configuration is working properly.

Verifying That the Entropy Label Capability Is Being Advertised from Router PE2

Purpose

Verify that the entropy label capability path attribute is being advertised from the upstream Router PE2 at egress.

Action

From operational mode, run the **show route 10.255.101.200 advertising-protocol bgp 10.255.102.102** command on Router PE2.

```
user@PE2> show route 10.255.101.200 advertising-protocol bgp 10.255.102.102
```

```

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
* 10.255.101.200/32 (1 entry, 1 announced)
  BGP group ibgp type Internal
    Route Label: 299920
    Nexthop: Self

```

```

Flags: Nexthop Change
MED: 2
Localpref: 4294967294
AS path: [1] I
Entropy label capable

```

Meaning

The output shows that the host PE2 with the IP address of 10.255.101.200 has the entropy label capability. The host is advertising the entropy label capability to its BGP neighbors.

Verifying That Router ABR Receives the Entropy Label Advertisement

Purpose

Verify that Router ABR receives the entropy label advertisement at ingress from Router PE2.

Action

From operational mode, run the **show route 10.255.101.200 receiving-protocol bgp 10.255.101.200** command on Router ABR.

```
user@ABR> show route 10.255.101.200 receiving-protocol bgp 10.255.101.200
```

```

inet.0: 63 destinations, 63 routes (63 active, 0 holddown, 0 hidden)

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
* 10.255.101.100/32 (1 entry, 1 announced)
  Accepted
  Route Label: 299920
  Nexthop: 10.255.102.102
  MED: 2
  Localpref: 4294967294
  AS path: I
  Entropy label capable

VPN-l3vpn.inet.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)

iso.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

inet6.0: 7 destinations, 7 routes (7 active, 0 holddown, 0 hidden)

```

```

VPN-l3vpn.inet6.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

user@PE1> show route protocol bgp detail

inet.0: 64 destinations, 64 routes (64 active, 0 holddown, 0 hidden)

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.255.101.200/32 (1 entry, 1 announced)
    *BGP      Preference: 170/1
              Next hop type: Indirect, Next hop index: 0
              Address: 0xa533c10
              Next-hop reference count: 2
              Source: 10.255.102.102
              Next hop type: Router, Next hop index: 0
              Next hop: 1.1.0.2 via ge-0/0/1.0, selected
              Label-switched-path r0-r2
              Label operation: Push 299904, Push 300096(top)
              Label TTL action: prop-ttl, prop-ttl(top)
              Load balance label: Label 299904: Entropy label; Label 300096: None;
              Label element ptr: 0xa5335a0
              Label parent element ptr: 0xa5338a0
              Label element references: 2
              Label element child references: 1
              Label element lsp id: 0
              Session Id: 0x0
              Protocol next hop: 10.255.102.102
              Label operation: Push 299904
              Label TTL action: prop-ttl
              Load balance label: Label 299904: Entropy label;
              Indirect next hop: 0xaa18540 - INH Session ID: 0x0
              State: <Active Int Ext>
              Local AS:      1 Peer AS:      1
              Age: 12:39      Metric: 2      Metric2: 2
              Validation State: unverified
              Task: BGP_1.10.255.102.102
              Announcement bits (2): 0-Resolve tree 1 3-Resolve_IGP_FRR task

              AS path: I
              Accepted
              Route Label: 299904
              Localpref: 4294967294
              Router ID: 10.255.102.102

VPN-l3vpn.inet.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)

```

Meaning

Router ABR receives the entropy label capability advertisement from its BGP neighbor PE2.

Verifying That the Entropy Label Flag Is Set

Purpose

Verify that the entropy label flag is set for the label elements at the ingress.

Action

From operational mode, run the **show route protocol bgp detail** command on Router PE1.

```
user@PE1> show route protocol bgp detail
```

```
inet.0: 64 destinations, 64 routes (64 active, 0 holddown, 0 hidden)

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.255.101.200/32 (1 entry, 1 announced)
    *BGP      Preference: 170/1
              Next hop type: Indirect, Next hop index: 0
              Address: 0xa533c10
              Next-hop reference count: 2
              Source: 10.255.102.102
              Next hop type: Router, Next hop index: 0
              Next hop: 1.1.0.2 via ge-0/0/1.0, selected
              Label-switched-path r0-r2
              Label operation: Push 299904, Push 300096(top)
              Label TTL action: prop-ttl, prop-ttl(top)
              Load balance label: Label 299904: Entropy label; Label 300096: None;
              Label element ptr: 0xa5335a0
              Label parent element ptr: 0xa5338a0
              Label element references: 2
              Label element child references: 1
              Label element lsp id: 0
              Session Id: 0x0
              Protocol next hop: 10.255.102.102
              Label operation: Push 299904
              Label TTL action: prop-ttl
              Load balance label: Label 299904: Entropy label;
              Indirect next hop: 0xaa18540 - INH Session ID: 0x0
              State:      <Active Int Ext>
              Local AS:      1 Peer AS:      1
              Age: 12:39      Metric: 2      Metric2: 2
              Validation State: unverified
              Task: BGP_1.10.255.102.102
              Announcement bits (2): 0-Resolve tree 1 3-Resolve_IGP_FRR task
```

```

AS path: I
Accepted
Route Label: 299904
Localpref: 4294967294
Router ID: 10.255.102.102
VPN-l3vpn.inet.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)

```


Meaning

An entropy label is enabled on Router PE1. The output shows that the entropy label is being used for the BGP labeled unicast to achieve end-to-end load balancing.

Configuring Ultimate-Hop Popping for LSPs


By default, RSVP-signaled LSPs use penultimate-hop popping (PHP). [Figure 43 on page 559](#) illustrates a penultimate-hop popping LSP between Router PE1 and Router PE2. Router CE1 forwards a packet to its next hop (Router PE1), which is also the LSP ingress. Router PE1 pushes label 1 on the packet and forwards the labeled packet to Router P1. Router P1 completes the standard MPLS label swapping operation, swapping label 1 for label 2, and forwards the packet to Router P2. Since Router P2 is the penultimate-hop router for the LSP to Router PE2, it first pops the label and then forwards the packet to Router PE2. When Router PE2 receives it, the packet can have a service label, an explicit-null label, or just be a plain IP or VPLS packet. Router PE2 forwards the unlabeled packet to Router CE2.

Figure 43: Penultimate-Hop Popping for an LSP

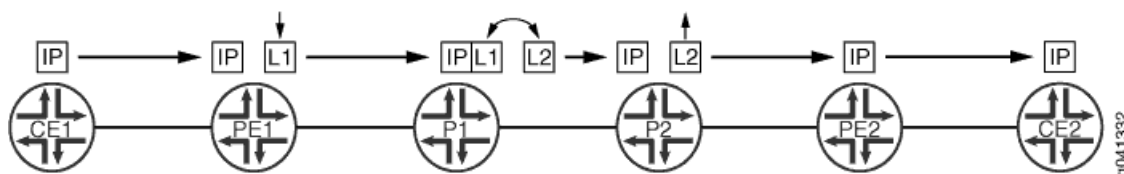

You can also configure ultimate-hop popping (UHP) (as shown in [Figure 44 on page 560](#)) for RSVP-signaled LSPs. Some network applications can require that packets arrive at the egress router (Router PE2) with a non-null outer label. For an ultimate-hop popping LSP, the penultimate router (Router P2 in [Figure 44 on page 560](#)) performs the standard MPLS label swapping operation (in this example, label 2 for label 3) before forwarding the packet to egress Router PE2. Router PE2 pops the outer label and performs a second lookup of the packet address to determine the end destination. It then forwards the packet to the appropriate destination (either Router CE2 or Router CE4).

Figure 44: Ultimate-Hop Popping for an LSP

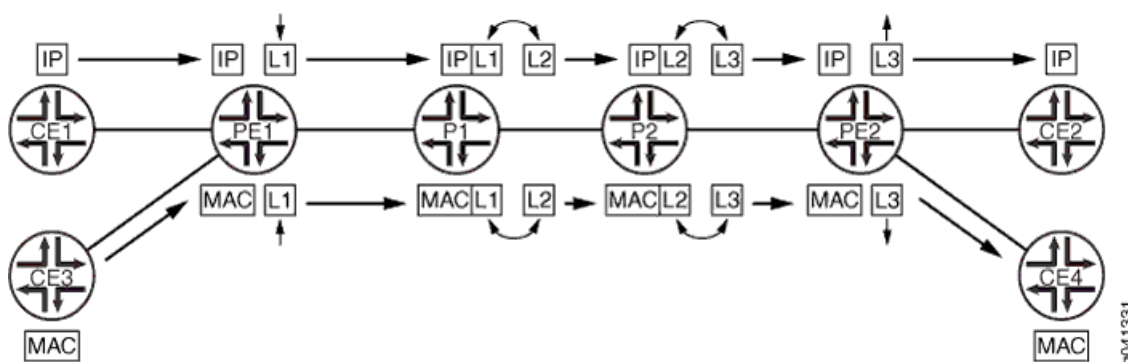

The following network applications require that you configure UHP LSPs:

- MPLS-TP for performance monitoring and in-band OAM
- Edge protection virtual circuits

The following features do not support the UHP behavior:

- LDP-signaled LSPs
- Static LSPs
- Point-to-multipoint LSPs
- CCC
- **traceroute** command

For more information about UHP behavior, see Internet draft [draft-ietf-mpls-rsvp-te-no-php-oob-mapping-01.txt](#), *Non PHP behavior and Out-of-Band Mapping for RSVP-TE LSPs*.

For point-to-point RSVP-signaled LSPs, UHP behavior is signaled from the LSP ingress. Based on the ingress router configuration, RSVP can signal the UHP LSP with the non-PHP flag set. RSVP PATH messages carry the two flags in the LSP-ATTRIBUTES object. When the egress router receives the PATH message, it assigns a non-null label to the LSP. RSVP also creates and installs two routes in the mpls.0 routing table. S refers to the S bit of the MPLS label, which indicates whether or not the bottom of the label stack has been reached.

- Route S=0—Indicates that there are more labels in the stack. The next hop for this route points to the mpls.0 routing table, triggering a chained MPLS label lookup to discover the remaining MPLS labels in the stack.
- Route S=1—Indicates that there are no more labels. The next hop points to the inet.0 routing table if the platform supports chained and multi-family lookup. Alternatively, the label route can point to a VT interface to initiate IP forwarding.

If you enable UHP LSPs, MPLS applications such as Layer 3 VPNs, VPLS, Layer 2 VPNs, and Layer 2 circuits can use the UHP LSPs. The following explains how UHP LSPs affect the different types of MPLS applications:

- **Layer 2 VPNs and Layer 2 circuits**—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label (S=0) is the UHP label, and the inner label (S=1) is the VC label. A lookup based on the transport label results in a table handle for the mpls.0 routing table. There is an additional route in the mpls.0 routing table corresponding to the inner label. A lookup based on the inner label results in the CE router next hop.
- **Layer 3 VPN**—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label (S=0) is the UHP label, and the inner label is the VPN label (S=1). A lookup based on the transport label results in the table handle for the mpls.0 routing table. There are two cases in this scenario. By default, Layer 3 VPNs advertise the per-next hop label. A lookup based on the inner label results in the next hop toward the CE router. However, if you have configured the **vrf-table-label** statement for the Layer 3 VPN routing instance, the inner LSI label points to the VRF routing table. An IP lookup is also completed for the VRF routing table.

NOTE: UHP for Layer 3 VPNs configured with the **vrf-table-label** statement is supported on MX Series 5G Universal Routing Platforms only.

- **VPLS**—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label is the transport label (S=0) and the inner label is the VPLS label (S=1). A lookup based on the transport label results in the table handle for the mpls.0 routing table. A lookup based on the inner label in mpls.0 routing table results in the LSI tunnel interface of the VPLS routing instance if tunnel-services is not configured (or a VT interface not available). MX 3D Series routers support chained lookup and multi-family lookup.

NOTE: UHP for VPLS configured with the **no-tunnel-service** statement is supported on MX 3D Series routers only.

- **IPv4 over MPLS**—A packet arrives at the PE router (egress of the UHP LSP) with one label (S=1). A lookup based on this label returns a VT tunnel interface. Another IP lookup is completed on the VT interface to determine where to forward the packet. If the routing platform supports multi-family and chained lookups (for example, MX 3D routers and PTX Series Packet Transport Routers), lookup based on label route (S=1) points to the inet.0 routing table.
- **IPv6 over MPLS**—For IPv6 tunneling over MPLS, PE routers advertise IPv6 routes to each other with a label value of 2. This is the explicit null label for IPv6. As a result, the forwarding next hops for IPv6 routes that are learned from remote PE routers normally push two labels. The inner label is 2 (it could be different if the advertising PE router is from another vendor), and the router label is the LSP label. Packets arrive at the PE router (egress of the UHP LSP) with two labels. The outer label is the transport label (S=0), and the inner label is the IPv6 explicit-null label (label 2). Lookup based on the inner label in

the mpls.0 routing table redirects back to the mpls.0 routing table. On MX 3D Series routers, the inner label (label 2) is stripped off and an IPv6 lookup is done using the inet6.0 routing table.

- Enabling both PHP and UHP LSPs—You can configure both PHP and UHP LSPs over the same network paths. You can separate PHP and UHP traffic by selecting forwarding LSP next hops using a regular expression with the **install-nexthop** statement. You can also separate traffic by simply naming the LSPs appropriately.

The following statements enable ultimate-hop popping for an LSP. You can enable this feature on a specific LSP or for all of the ingress LSPs configured on the router. Configure these statements on the router at the LSP ingress.

1. To enable ultimate-hop popping, include the **ultimate-hop-popping** statement:

```
ultimate-hop-popping;
```

Include this statement at the **[edit protocols mpls label-switched-path label-switched-path-name]** hierarchy level to enable ultimate-hop popping on a specific LSP. Include this statement at the **[edit protocols mpls]** hierarchy level to enable ultimate-hop popping on all of the ingress LSPs configured on the router. You can also configure the **ultimate-hop-popping** statement under the equivalent **[edit logical-routers]** hierarchy levels.

NOTE: When you enable ultimate-hop popping, RSVP attempts to resignal existing LSPs as ultimate-hop popping LSPs in a make-before-break fashion. If an egress router does not support ultimate-hop popping, the existing LSP is torn down (RSVP sends a PathTear message along an LSP's path, removing the path state and dependent reservation state and releasing the associated networking resources).

If you disable ultimate-hop popping, RSVP resignals existing LSPs as penultimate-hop popping LSPs in a make-before-break fashion.

2. If you want to enable both ultimate-hop-popping and chained next hops on MX 3D Series routers only, you also need to configure the **enhanced-ip** option for the **network-services** statement:

```
network-services enhanced-ip;
```

You configure this statement at the **[edit chassis]** hierarchy level. Once you have configured the **network-services** statement, you need to reboot the router to enable UHP behavior.

Configuring Explicit-Path LSPs

If you disable constrained-path label-switched path (LSP) computation, as described in [“Disabling Constrained-Path LSP Computation” on page 482](#), you can configure LSPs manually or allow the LSPs to follow the IGP path.

When explicit-path LSPs are configured, the LSP is established along the path you specified. If the path is topologically not feasible, either because the network is partitioned or insufficient resources are available along some parts of the path, the LSP will fail. No alternative paths can be used. If the setup succeeds, the LSP stays on the defined path indefinitely.

To configure an explicit-path LSP, follow these steps:

1. Configure the path information in a named path, as described in [“Creating Named Paths” on page 487](#). To configure complete path information, specify every router hop between the ingress and egress routers, preferably using the **strict** attribute. To configure incomplete path information, specify only a subset of router hops, using the **loose** attribute in places where the path is incomplete.

For incomplete paths, the MPLS routers complete the path by querying the local routing table. This query is done on a hop-by-hop basis, and each router can figure out only enough information to reach the next explicit hop. It might be necessary to traverse a number of routers to reach the next (loose) explicit hop.

Configuring incomplete path information creates portions of the path that depend on the current routing table, and this portion of the path can reroute itself as the topology changes. Therefore, an explicit-path LSP that contains incomplete path information is not completely fixed. These types of LSPs have only a limited ability to repair themselves, and they tend to create loops or flaps depending on the contents of the local routing table.

2. To configure the LSP and point it to the named path, use either the **primary** or **secondary** statement, as described in [“Configuring Primary and Secondary LSPs” on page 569](#).
3. Disable constrained-path LSP computation by including the **no-cspf** statement either as part of the LSP or as part of a **primary** or **secondary** statement. For more information, see [“Disabling Constrained-Path LSP Computation” on page 482](#).
4. Configure any other LSP properties.

Using explicit-path LSPs has the following drawbacks:

- More configuration effort is required.
- Configured path information cannot take into account dynamic network bandwidth reservation, so the LSPs tend to fail when resources become depleted.
- When an explicit-path LSP fails, you might need to manually repair it.

Because of these limitations, we recommend that you use explicit-path LSPs only in controlled situations, such as to enforce an optimized LSP placement strategy resulting from computations with an offline simulation software package.

Example: Configuring an Explicit-Path LSP

On the ingress router, create an explicit-path LSP, and specify the transit routers between the ingress and egress routers. In this configuration, no constrained-path computation is performed. For the primary path, all intermediate hops are strictly specified so that its route cannot change. The secondary path must travel through router 14.1.1.1 first, then take whatever route is available to reach the destination. The remaining route taken by the secondary path is typically the shortest path computed by the IGP.

```
[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family mpls;
    }
  }
}
protocols {
  rsvp {
    interface so-0/0/0;
  }
  mpls {
    path to-hastings {
      14.1.1.1 strict;
      13.1.1.1 strict;
      12.1.1.1 strict;
      11.1.1.1 strict;
    }
    path alt-hastings {
      14.1.1.1 strict;
      11.1.1.1 loose; # Any IGP route is acceptable
    }
    label-switched-path hastings {
      to 11.1.1.1;
      hop-limit 32;
      bandwidth 10m; # Reserve 10 Mbps
      no-cspf; # do not perform constrained-path computation
      primary to-hastings;
      secondary alt-hastings;
    }
  }
  interface so-0/0/0;
```

```
}
}
```

LSP Bandwidth Oversubscription Overview

LSPs are established with bandwidth reservations configured for the maximum amount of traffic you expect to traverse the LSP. Not all LSPs carry the maximum amount of traffic over their links at all times. For example, even if the bandwidth for link A has been completely reserved, actual bandwidth might still be available but not currently in use. This excess bandwidth can be used by allowing other LSPs to also use link A, oversubscribing the link. You can oversubscribe the bandwidth configured for individual class types or specify a single value for all of the class types using an interface.

You can use oversubscription to take advantage of the statistical nature of traffic patterns and to permit higher utilization of links.

The following examples describe how you might use bandwidth oversubscription and undersubscription:

- Use oversubscription on class types where peak periods of traffic do not coincide in time.
- Use oversubscription of class types carrying best-effort traffic. You take the risk of temporarily delaying or dropping traffic in exchange for making better utilization of network resources.
- Give different degrees of oversubscription or undersubscription of traffic for the different class types. For instance, you configure the subscription for classes of traffic as follows:
 - Best effort—**ct0 1000**
 - Voice—**ct3 1**

When you undersubscribe a class type for a multiclass LSP, the total demand of all RSVP sessions is always less than the actual capacity of the class type. You can use undersubscription to limit the utilization of a class type.

The bandwidth oversubscription calculation occurs on the local router only. Because no signaling or other interaction is required from other routers in the network, the feature can be enabled on individual routers without being enabled or available on other routers which might not support this feature. Neighboring routers do not need to know about the oversubscription calculation, they rely on the IGP.

The following sections describe the types of bandwidth oversubscription available in the Junos OS:

- [LSP Size Oversubscription on page 566](#)
- [LSP Link Size Oversubscription on page 566](#)
- [Class Type Oversubscription and Local Oversubscription Multipliers on page 566](#)

LSP Size Oversubscription

For LSP size oversubscription, you simply configure less bandwidth than the peak rate expected for the LSP. You also might need to adjust the configuration for automatic policers. Automatic policers manage the traffic assigned to an LSP, ensuring that it does not exceed the configured bandwidth values. LSP size oversubscription requires that the LSP can exceed its configured bandwidth allocation.

Policing is still possible. However, the policer must be manually configured to account for the maximum bandwidth planned for the LSP, rather than for the configured value.

LSP Link Size Oversubscription

You can increase the maximum reservable bandwidth on the link and use the inflated values for bandwidth accounting. Use the **subscription** statement to oversubscribe the link. The configured value is applied to all class type bandwidth allocations on the link. For more information about link size oversubscription, see [“Configuring the Bandwidth Subscription Percentage for LSPs” on page 567](#).

Class Type Oversubscription and Local Oversubscription Multipliers

Local oversubscription multipliers (LOMs) allow different oversubscription values for different class types. LOMs are useful for networks where the oversubscription ratio needs to be configured differently on different links and where oversubscription values are required for different classes. You might use this feature to oversubscribe class types handling best-effort traffic, but use no oversubscription for class types handling voice traffic. An LOM is calculated locally on the router. No information related to an LOM is signaled to other routers in the network.

An LOM is configurable on each link and for each class type. The per-class type LOM allows you to increase or decrease the oversubscription ratio. The per-class-type LOM is factored into all local bandwidth accounting for admission control and IGP advertisement of unreserved bandwidths.

The LOM calculation is tied to the bandwidth model (MAM, extended MAM, and Russian dolls) used, because the effect of oversubscription across class types must be accounted for accurately.

NOTE: All LOM calculations are performed by the Junos OS and require no user intervention.

The formulas related to the oversubscription of class types are described in the following sections:

- *Class Type Bandwidth and the LOM*
- *LOM Calculation for the MAM and Extended MAM Bandwidth Models*
- *LOM Calculation for the Russian Dolls Bandwidth Model*
- *Example: LOM Calculation*

Configuring the Bandwidth Subscription Percentage for LSPs

By default, RSVP allows all of a class type's bandwidth (100 percent) to be used for RSVP reservations. When you oversubscribe a class type for a multiclass LSP, the aggregate demand of all RSVP sessions is allowed to exceed the actual capacity of the class type.

If you want to oversubscribe or undersubscribe all of the class types on an interface using the same percentage bandwidth, configure the percentage using the **subscription** statement:

```
subscription percentage;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

To undersubscribe or oversubscribe the bandwidth for each class type, configure a percentage for each class type (**ct0**, **ct1**, **ct2**, and **ct3**) option for the **subscription** statement. When you oversubscribe a class type, an LOM is applied to calculate the actual bandwidth reserved. See [“Class Type Oversubscription and Local Oversubscription Multipliers” on page 566](#) for more information.

```
subscription {
  ct0 percentage;
  ct1 percentage;
  ct2 percentage;
  ct3 percentage;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

percentage is the percentage of class type bandwidth that RSVP allows to be used for reservations. It can be a value from 0 through 65,000 percent. If you specify a value greater than 100, you are oversubscribing the interface or class type.

The value you configure when you oversubscribe a class type is a percentage of the class type bandwidth that can actually be used. The default subscription value is 100 percent.

You can use the **subscription** statement to disable new RSVP sessions for one or more class types. If you configure a percentage of 0, no new sessions (including those with zero bandwidth requirements) are permitted for the class type.

Existing RSVP sessions are not affected by changing the subscription factor. To clear an existing session, issue the **clear rsvp session** command. For more information on the **clear rsvp session** command, see the [CLI Explorer](#).

Constraints on Configuring Bandwidth Subscription

Be aware of the following issues when configuring bandwidth subscription:

- If you configure bandwidth constraints at the **[edit class-of-service interface *interface-name*]** hierarchy level, they override any bandwidth configuration you specify at the **[edit protocols rsvp interface *interface-name* bandwidth]** hierarchy level for Diffserv-TE. Also note that either of the CoS or RSVP bandwidth constraints can override the interface hardware bandwidth constraints.
- If you configure a bandwidth subscription value for a specific interface that differs from the value configured for all interfaces (by including different values for the **subscription** statement at the **[edit protocols rsvp interface *interface-name*]** and **[edit protocols rsvp interface all]** hierarchy levels), the interface-specific value is used for that interface.
- You can configure subscription for each class type only if you also configure a bandwidth model. If no bandwidth model is configured, the commit operation fails with the following error message:

user@host# **commit check**

```
[edit protocols rsvp interface all]
  'subscription'
RSVP: Must have a diffserv-te bandwidth model configured when configuring
subscription per traffic class.
error: configuration check-out failed
```

- You cannot include the **subscription** statement both in the configuration for a specific class type and the configuration for the entire interface. The commit operation fails with the following error message:

user@host# **commit check**

```
[edit protocols rsvp interface all]
  'subscription'
    RSVP: Cannot configure both link subscription and per traffic class
subscription.
error: configuration check-out failed
```

Release History Table

Release	Description
14.1R9	Starting in Junos OS Release 14.1R9, 15.1R7, 16.1R5, 16.1X2, 16.2R3, and 17.2R2, all zero value bandwidth samples are considered as underflow samples, except for the zero value samples that arrive after an LSP comes up for the first time, and the zero value samples that arrive first after a Routing Engine switchover.

RELATED DOCUMENTATION

Primary, Secondary, and Static LSP Configuration

IN THIS SECTION

- [Configuring Primary and Secondary LSPs | 569](#)
- [Configuring Hot Standby of Secondary Paths for LSPs | 572](#)
- [Configuring Static LSPs | 573](#)
- [Configuring Static Label Switched Paths for MPLS \(CLI Procedure\) | 582](#)
- [Configuring Static Label Switched Paths for MPLS | 585](#)

Configuring Primary and Secondary LSPs

IN THIS SECTION

- [Configuring Primary and Secondary Paths for an LSP | 570](#)
- [Configuring the Revert Timer for LSPs | 570](#)
- [Specifying the Conditions for Path Selection | 571](#)

By default, an LSP routes itself hop-by-hop toward the egress router. The LSP tends to follow the shortest path as dictated by the local routing table, usually taking the same path as destination-based, best-effort traffic. These paths are “soft” in nature because they automatically re-route themselves whenever a change occurs in a routing table or in the status of a node or link.

To configure the path so that it follows a particular route, create a named path using the **path** statement, as described in [“Creating Named Paths” on page 487](#). Then apply the named path by including the **primary** or **secondary** statement. A named path can be referenced by any number of LSPs.

To configure primary and secondary paths for an LSP, complete the steps in the following sections:

Configuring Primary and Secondary Paths for an LSP

The **primary** statement creates the primary path, which is the LSP's preferred path. The **secondary** statement creates an alternative path. If the primary path can no longer reach the egress router, the alternative path is used.

To configure primary and secondary paths, include the **primary** and **secondary** statements:

```
primary path-name {
    ...
}
secondary path-name {
    ...
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

When the software switches from the primary to a secondary path, it continuously attempts to revert to the primary path, switching back to it when it is again reachable, but no sooner than the retry time specified in the **retry-timer** statement. (For more information, see [“Configuring the Connection Between Ingress and Egress Routers” on page 492.](#))

You can configure zero or one primary path. If you do not configure a primary path, the first secondary path that is established is selected as the path.

You can configure zero or more secondary paths. All secondary paths are equal. The software does not attempt to switch among secondary paths. If the current secondary path is not available, the next one is tried in no particular order. To create a set of equal paths, specify secondary paths without specifying a primary path.

If you do not specify any named paths, or if the path that you specify is empty, the software makes all routing decisions necessary to reach the egress router.

Configuring the Revert Timer for LSPs

For LSPs configured with both primary and secondary paths, it is possible to configure the revert timer. If a primary path goes down and traffic is switched to the secondary path, the revert timer specifies the amount of time (in seconds) that the LSP must wait before it can revert traffic back to a primary path. If during this time, the primary path experiences any connectivity problems or stability problems, the timer is restarted. You can configure the revert timer for both static and dynamic LSPs.

The Junos OS also makes a determination as to which path is the preferred path. The preferred path is the path that has not encountered any difficulty in the last revert timer period. If both the primary and

secondary paths have encountered difficulty, neither path is considered preferred. However, if one of the paths is dynamic and the other static, the dynamic path is selected as the preferred path.

If you have configured BFD on the LSP, Junos OS waits until the BFD session comes up on the primary path before starting the revert timer counter.

The range of values you can configure for the revert timer is 0 through 65,535 seconds. The default value is 60 seconds.

If you configure a value of 0 seconds, the traffic on the LSP, once switched from the primary path to the secondary path, remains on the secondary path permanently (until the network operator intervenes or until the secondary path goes down).

You can configure the revert timer for all LSPs on the router at the `[edit protocols mpls]` hierarchy level or for a specific LSP at the `[edit protocols mpls label-switched-path lsp-name]` hierarchy level.

To configure the revert timer, include the **revert-timer** statement:

```
revert-timer seconds;
```

For a list of hierarchy levels at which you can include this statement, see the summary section for this statement.

Specifying the Conditions for Path Selection

When you have configured both primary and secondary paths for an LSP, you may need to ensure that only a specific path is used.

The **select** statement is optional. If you do not include it, MPLS uses an automatic path selection algorithm.

The **manual** and **unconditional** options do the following:

- **manual**—The path is immediately selected for carrying traffic as long as it is up and stable. Traffic is sent to other working paths if the current path is down or degraded (receiving errors). This parameter overrides all other path attributes except the **select unconditional** statement.
- **unconditional**—The path is selected for carrying traffic unconditionally, regardless of whether the path is currently down or degraded (receiving errors). This parameter overrides all other path attributes.

Because the **unconditional** option switches to a path without regard to its current status, be aware of the following potential consequences of specifying it:

- If a path is not currently up when you enable the **unconditional** option, traffic can be disrupted. Ensure that the path is functional before specifying the **unconditional** option.
- Once a path is selected because it has the **unconditional** option enabled, all other paths for the LSP are gradually cleared, including the primary and standby paths. No path can act as a standby to an unconditional path, so signaling those paths serves no purpose.

For a specific path, the **manual** and **unconditional** options are mutually exclusive. You can include the **select** statement with the **manual** option in the configuration of only one of an LSP's paths, and the **select** statement with the **unconditional** option in the configuration of only one other of its paths.

Enabling or disabling the **manual** and **unconditional** options for the **select** statement while LSPs and their paths are up does not disrupt traffic.

To specify that a path be selected for carrying traffic if it is up and stable for at least the revert timer window, include the **select** statement with the **manual** option:

```
select manual;
```

To specify that a path should always be selected for carrying traffic, even if it is currently down or degraded, include the **select** statement with the **unconditional** option:

```
select unconditional;
```

You can include the **select** statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* (**primary** | **secondary**) *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* (**primary** | **secondary**) *path-name*]

Configuring Hot Standby of Secondary Paths for LSPs

By default, secondary paths are set up only as needed. To have the system maintain a secondary path in a hot-standby state indefinitely, include the **standby** statement:

```
standby;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **secondary**]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **secondary**]

The hot-standby state is meaningful only on secondary paths. Maintaining a path in a hot-standby state enables swift cutover to the secondary path when downstream routers on the current active path indicate connectivity problems. Although it is possible to configure the **standby** statement at the [edit protocols mpls **label-switched-path** *lsp-name* **primary** *path-name*] hierarchy level, it has no effect on router behavior.

If you configure the **standby** statement at the following hierarchy levels, the hot-standby state is activated on all secondary paths configured beneath that hierarchy level:

- [edit protocols mpls]
- [edit protocols mpls [label-switched-path lsp-name](#)]
- [edit logical-systems *logical-system-name* protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls [label-switched-path lsp-name](#)]

The hot-standby state has two advantages:

- It eliminates the call-setup delay during network topology changes. Call setup can suffer from significant delays when network failures trigger large numbers of LSP reroutes at the same time.
- A cutover to the secondary path can be made before RSVP learns that an LSP is down. There can be significant delays between the time the first failure is detected by protocol machinery (which can be an interface down, a neighbor becoming unreachable, a route becoming unreachable, or a transient routing loop being detected) and the time an LSP actually fails (which requires a timeout of soft state information between adjacent RSVP routers). When topology failures occur, hot-standby secondary paths can usually achieve the smallest cutover delays with minimal disruptions to user traffic.

When the primary path is considered to be stable again, traffic is automatically switched from the standby secondary path back to the primary path. The switch is performed no faster than twice the retry-timer interval and only if the primary path exhibits stability throughout the entire switch interval.

The drawback of the hot-standby state is that more state information must be maintained by all the routers along the path, which requires overhead from each of the routers.

NOTE: When viewed with **inet.3**, the same LSP may appear to be shown twice as the active route (both primary and secondary), even though traffic actually is being forwarded over the primary path LSP only. This is normal output, and reflects only that the secondary standby path is available.

Configuring Static LSPs

IN THIS SECTION

- [Configuring the Ingress Router for Static LSPs | 574](#)
- [Configuring the Intermediate \(Transit\) and Egress Routers for Static LSPs | 577](#)
- [Configuring a Bypass LSP for the Static LSP | 580](#)
- [Configuring the Protection Revert Timer for Static LSPs | 580](#)
- [Configuring Static Unicast Routes for Point-to-Multipoint LSPs | 581](#)

To configure static LSPs, configure the ingress router and each router along the path up to and including the egress router.

To configure static MPLS, perform the following tasks:

Configuring the Ingress Router for Static LSPs

The ingress router checks the IP address in the incoming packet's destination address field and, if it finds a match in the routing table, applies the label associated with that address to the packets. The label has forwarding information associated with it, including the address of the next-hop router, and the route preference and CoS values.

To configure static LSPs on the ingress router, include the **ingress** statement:

```
ingress {
  bandwidth bps;
  class-of-service cos-value;
  description string;
  install {
    destination-prefix <active>;
  }
  link-protection bypass-name name;
  metric metric;
  next-hop (address | interface-name | address/interface-name);
  no-install-to-address;
  node-protection bypass-name name next-next-label label;
  policing {
    filter filter-name;
    no-auto-policing;
  }
  preference preference;
  push out-label;
  to address;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols mpls static-label-switched-path *static-lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls static-label-switched-path *static-lsp-name*]

When you configure a static LSP on the ingress router, the **next-hop**, **push**, and **to** statements are required; the other statements are optional.

The configuration for a static LSP on the ingress router requires you to configure the following parts:

- Criteria for analyzing an incoming packet:
 - The **install** statement creates an LSP that handles IPv4 packets. All static MPLS routes created using the **install** statement are installed in inet.3 routing table, and the creating protocol is identified as static. This process is no different from creating static IPv4 routes at the **[edit routing-options static]** hierarchy level.
 - In the **to** statement, you configure the IP destination address to check when incoming packets are analyzed. If the address matches, the specified outgoing label (**push out-label**) is assigned to the packet, and the packet enters an LSP. Manually assigned outgoing labels can have values from 0 through 1,048,575. Each prefix that you specify is installed as a static route in the routing table.
- The **next-hop** statement, which supplies the IP address of the next hop to the destination. You can specify this as the IP address of the next hop, the interface name (for point-to-point interfaces only), or as **address/interface-name** to specify an IP address on an operational interface. When the next hop is on a directly attached interface, the route is installed in the routing table. You cannot configure a LAN or nonbroadcast multiaccess (NBMA) interface as a next-hop interface.
- Properties to apply to the LSP (all are optional):
 - Bandwidth reserved for this LSP (**bandwidth bps**)
 - Link protection and node protection to apply to the LSP (**bypass bypass-name, link-protection bypass-name name, node-protection bypass-name next-next-label label**)
 - Metric value to apply to the LSP (**metric**)
 - Class-of-service value to apply to the LSP (**class-of-service**)
 - Preference value to apply to the LSP (**preference**)
 - Traffic policing to apply to the LSP (**policing**)
 - Text description to apply to the LSP (**description**)
 - Install or no-install policy (**install** or **no-install-to-address**)


To determine whether a static ingress route is installed, use the command **show route table inet.3 protocol static**. Sample output follows. The **push** keyword denotes that a label is to be added in front of an IP packet.

```
10.0.0.0      *[Static/5] 00:01:48
> to 11.1.1.1 via so-0/0/0, push 1000123
```

Example: Configuring the Ingress Router

Configure the ingress router for a static LSP that consists of three routers (see [Figure 45 on page 576](#)).

Figure 45: Static MPLS Configuration

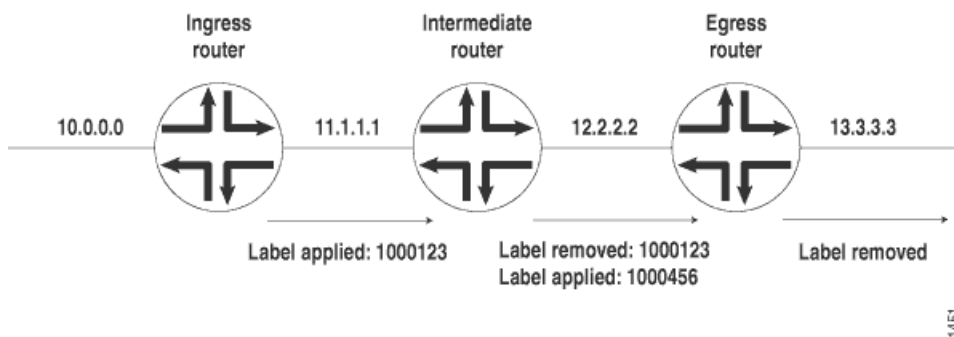

For packets addressed to **10.0.0.0**, assign label **1000123** and transmit them to the next-hop router at **11.1.1.1**:

```
[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family mpls;
    }
  }
}
protocols {
  mpls {
    static-label-switched-path path1 {
      ingress {
        next-hop 11.1.1.1;
        to 10.0.0.0;
        push 1000123;
      }
    }
    interface so-0/0/0.0;
  }
}
routing-options {
  static {
    route 10.0.0.0/8 {
      static-lsp-next-hop path1;
    }
  }
}
```

To determine whether the static ingress route is installed, use the following command:

```
user@host> show route table inet.0 protocol static
```


Sample output follows. The **push 1000123** keyword identifies the route.

```
10.0.0.0/8          *[Static/5] 00:01:48
> to 11.1.1.1 via so-0/0/0.0, push 1000123
```

Configuring the Intermediate (Transit) and Egress Routers for Static LSPs

Intermediate (transit) and egress routers perform similar functions—they modify the label that has been applied to a packet. An intermediate router can change the label. An egress router removes the label (if the packet still contains a label) and continues forwarding the packet to its destination.

To configure static LSPs on intermediate and egress routers, include the **transit** statement:

```
static-label-switched-path lsp-name {
  transit incoming-label {
    bandwidth bps;
    description string;
    link-protection bypass-name name;
    next-hop (address | interface-name | address/interface-name);
    node-protection bypass-name name next-next-label label;
    pop;
    swap out-label;
  }
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols mpls static-label-switched-path *static-lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls static-label-switched-path *static-lsp-name*]

For the **transit** statement configuration, the **next-hop** and **pop | swap** statements are required. The remaining statements are optional.

Each statement within the **transit** statement consists of the following parts:

- Packet label (specified in the **transit** statement)
- The **next-hop** statement, which supplies the IP address of the next hop to the destination. The address is specified as the IP address of the next hop, or the interface name (for point-to-point interfaces only), or **address** and **interface-name** to specify an IP address on an operational interface. When the specified next hop is on a directly attached interface, this route is installed in the routing table. You cannot configure a LAN or NBMA interface as a next-hop interface.

- Operation to perform on the labeled packet:
 - For egress routers, you generally just remove the packet's label altogether (**pop**) and continue forwarding the packet to the next hop. However, if the previous router removed the label, the egress router examines the packet's IP header and forwards the packet toward its IP destination.
 - For intermediate (transit) routers only, exchange the label for another label (**swap out-label**). Manually assigned incoming labels can have values from 1,000,000 through 1,048,575. Manually assigned outgoing labels can have values from 0 through 1,048,575.
- Label properties to apply to the packet (all are optional):
 - Bandwidth reserved for this route (**bandwidth bps**).
 - Link-protection and node-protection to apply to the LSP (**bypass bypass-name, link-protection bypass-name name, node-protection bypass-name next-next-label label**).
 - Text description to apply to the LSP (specified in the **description** statement).

The static routes are installed in the default MPLS routing table, `mpls.0`, and the creating protocol is identified as static. To verify that a static route is properly installed, use the command **show route table mpls.0 protocol static**. Sample output follows:

```
1000123      *[Static/5] 00:00:38
> to 12.2.2.2 via so-5/0/0.0, swap 1000456
```

You can configure a revert timer for a static LSP transiting an intermediate router. After traffic has been switched to a bypass static LSP, it is typically switched back to the primary static LSP when it comes back up. There is a configurable delay in the time (called the revert timer) between when the primary static LSP comes up and when traffic is reverted back to it from the bypass static LSP. This delay is needed because when the primary LSP comes back up, it is not certain whether all of the interfaces on the downstream node of the primary path have come up yet. You can display the revert timer value for an interface using the **show mpls interface detail** command. For more information, see [“Configuring the Revert Timer for LSPs” on page 570](#).

Example: Configuring an Intermediate Router

For packets labeled **1000123** arriving on interface **so-0/0/0**, assign the label **1000456**, and transmit them to the next-hop router at **12.2.2.2**:

```
[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family mpls;
    }
  }
}
```

```

    }
}
protocols {
  mpls {
    static-label-switched-path path1 {
      transit 1000123 {
        next-hop 12.2.2.2;
        swap 1000456;
      }
    }
  }
  interface so-0/0/0.0;
}
}

```

To determine whether the static intermediate route is installed, use the following command:

```
user@host> show route table mpls.0 protocol static
```

Sample output follows. The **swap 1000456** keyword identifies the route.

```

1000123      *[Static/5] 00:01:48
> to 12.2.2.2 via so-0/0/0, swap 1000456

```

Example: Configuring an Egress Router

For packets labeled **1000456** arriving on interface **so-0/0/0**, remove the label and transmit the packets to the next-hop router at **13.3.3.3**:

```

[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family mpls;
    }
  }
}
protocols {
  mpls {
    static-label-switched-path path1 {
      transit 1000456 {
        next-hop 13.3.3.3;
        pop;
      }
    }
  }
}

```

```

    }
  }
  interface so-0/0/0.0;
}
}

```

To determine whether the static egress route is installed, use the following command:

```
user@host> show route table mpls.0 protocol static
```

Sample output follows. The **pop** keyword identifies the egress route.

```

1000456          *[Static/5] 00:01:48
> to 13.3.3.3 via so-0/0/0, pop

```

Configuring a Bypass LSP for the Static LSP

To enable a bypass LSP for the static LSP, configure the **bypass** statement:

```

bypass bypass-name {
  bandwidth bps;
  description string;
  next-hop (address | interface-name | address/interface-name);
  push out-label;
  to address;
}

```

Configuring the Protection Revert Timer for Static LSPs

For static LSPs configured with a bypass static LSP, it is possible to configure the protection revert timer. If a static LSP goes down and traffic is switched to the bypass LSP, the protection revert timer specifies the amount of time (in seconds) that the LSP must wait before it can revert back to the original static LSP.

The range of values you can configure for the protection revert timer is 0 through 65,535 seconds. The default value is 5 seconds.

If you configure a value of 0 seconds, the traffic on the LSP, once switched from the original static LSP to the bypass static LSP, remains on the bypass LSP permanently (until the network operator intervenes or until the bypass LSP goes down).

You can configure the protection revert timer for all LSPs on the router at the **[edit protocols mpls]** hierarchy level or for a specific LSP at the **[edit protocols mpls label-switched-path lsp-name]** hierarchy level.

To configure the protection revert timer for static LSPs include the **protection-revert-time** statement:

```
protection-revert-time seconds;
```

For a list of hierarchy levels at which you can include this statement, see the summary section for this statement.

Configuring Static Unicast Routes for Point-to-Multipoint LSPs

You can configure a static unicast IP route with a point-to-multipoint LSP as the next hop. For more information about point-to-multipoint LSPs, see [“Point-to-Multipoint LSPs Overview” on page 656](#), [“Configuring Primary and Branch LSPs for Point-to-Multipoint LSPs” on page 685](#), and [“Configuring CCC Switching for Point-to-Multipoint LSPs” on page 1338](#).

To configure a static unicast route for a point-to-multipoint LSP, complete the following steps:

1. On the ingress PE router, configure a static IP unicast route with the point-to-multipoint LSP name as the next hop by including the **p2mp-lsp-next-hop** statement:

```
p2mp-lsp-next-hop point-to-multipoint-lsp-next-hop;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options static route *route-name*]
 - [edit logical-systems *logical-system-name* routing-options static route *route-name*]
2. On the egress PE router, configure a static IP unicast route with the same destination address configured in Step 1 (the address configured at the [edit routing-options static route] hierarchy level) by including the **next-hop** statement:

```
next-hop address;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options static route *route-name*]
- [edit logical-systems *logical-system-name* routing-options static route *route-name*]

NOTE: CCC and static routes cannot use the same point-to-multipoint LSP.

For more information on static routes, see the *Junos OS Routing Protocols Library*.

The following **show route** command output displays a unicast static route pointing to a point-to-multipoint LSP on the ingress PE router where the LSP has two branch next hops:

```
user@host> show route 5.5.5.5 detail
```

```
inet.0: 29 destinations, 30 routes (28 active, 0 holddown, 1 hidden)
5.5.5.5/32 (1 entry, 1 announced)
  *Static Preference: 5
    Next hop type: Flood
    Next hop: via so-0/3/2.0 weight 1
    Label operation: Push 100000
    Next hop: via tl-0/1/1.0 weight 1
    Label operation: Push 100064
    State: <Active Int Ext>
    Local AS: 10458
    Age: 2:41:15
    Task: RT
    Announcement bits (2): 0-KRT 3-BGP.0.0.0.0+179
    AS path: I
```

Configuring Static Label Switched Paths for MPLS (CLI Procedure)

Configuring static label-switched paths (LSPs) for MPLS is similar to configuring static routes on individual switches. As with static routes, there is no error reporting, liveliness detection, or statistics reporting.

To configure static LSPs, configure the ingress switch and each provider switch along the path up to and including the egress switch.

For the ingress switch, configure which packets to tag (based on the packet's destination IP address), configure the next switch in the LSP, and the tag to apply to the packet. Manually assigned labels can have values from 0 through 1,048,575. Optionally, you can apply preference, class-of-service (CoS) values, node protection, and link protection to the packets.

For the transit switches in the path, configure the next switch in the path and the tag to apply to the packet. Manually assigned labels can have values from 1,000,000 through 1,048,575. Optionally, you can apply node protection and link protection to the packets.

For the egress switch, you generally just remove the label and continue forwarding the packet to the IP destination. However, if the previous switch removed the label, the egress switch examines the packet's IP header and forwards the packet toward its IP destination.

Before you configure an LSP, you must configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect”](#) on page 73.

- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches” on page 77](#).

This topic describes how to configure an ingress PE switch, one or more provider switches, and an egress PE switch for static LSP:

1. [Configuring the Ingress PE Switch | 583](#)
2. [Configuring the Provider and the Egress PE Switch | 584](#)

Configuring the Ingress PE Switch

To configure the ingress PE switch:

1. Configure an IP address for the core interfaces:

```
[edit]
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
```

2. Configure the name and the traffic rate associated with the LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name ingress bandwidth rate
```

3. Configure the next hop switch for the LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name ingress next-hop
address-of-next-hop
```

4. Enable link protection on the specified static LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path lsp-name ingress link-protection
bypass-name name
```

5. Specify the address of the egress switch for the LSP:

```
[edit]
user@switch# set protocols mpls static-label-switched-path path1 ingress to address-of-egress-switch
```

6. Configure the new label that you want to add to the top of the label stack:

```
[edit]
```

```
user@switch# set protocols mpls static-label-switched-path path1 ingress push out-label
```

7. Optionally, configure the next hop address and the egress router address that you want to bypass, for the static LSP:

```
[edit]
```

```
user@switch# set protocols mpls static-label-switched-path lsp-name by bypass next-hop  
address-of-next-hop
```

```
user@switch# set protocols mpls static-label-switched-path lsp-name by bypass to  
address-of-the-egress-switch
```

```
user@switch# set protocols mpls static-label-switched-path lsp-name bypass push out-label
```

Configuring the Provider and the Egress PE Switch

To configure a static LSP for MPLS on the provider and egress provider edge switch:

1. Configure a transit static LSP:

```
[edit]
```

```
user@switch# set protocols mpls static-label-switched-path path1 transit incoming-label
```

2. Configure the next hop switch for the LSP:

```
[edit]
```

```
user@switch# set protocols mpls static-label-switched-path lsp-name transit incoming-label next-hop  
address-of-next-hop
```

3. Only for provider switches, remove the label at the top of the label stack and replace it with the specified label:

```
[edit]
```

```
user@switch# set protocols mpls static-label-switched-path lsp-name transit incoming-label swap  
out-label
```

4. Only for the egress provider edge switch, remove the label at the top of the label stack:

NOTE: If there is another label in the stack, that label becomes the label at the top of the label stack. Otherwise, the packet is forwarded as a native protocol packet (typically, as an IP packet).

```
[edit]
```

```
user@switch# set protocols mpls static-label-switched-path lsp-name transit incoming-label pop
```


Configuring Static Label Switched Paths for MPLS

Configuring static label-switched paths (LSPs) for MPLS is similar to configuring static routes on individual switches. As with static routes, there is no error reporting, liveliness detection, or statistics reporting.

To configure static LSPs, configure the ingress PE switch and each provider switch along the path up to and including the egress PE switch.

For the ingress PE switch, configure which packets to tag (based on the packet's destination IP address), configure the next switch in the LSP, and the tag to apply to the packet. Manually assigned labels can have values from 0 through 1,048,575.

For the transit switches in the path, configure the next switch in the path and the tag to apply to the packet. Manually assigned labels can have values from 1,000,000 through 1,048,575.

The egress PE switch removes the label and forwards the packet to the IP destination. However, if the previous switch removed the label, the egress switch examines the packet's IP header and forwards the packet toward its IP destination.

Before you configure a static LSP, you must configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge Switches” on page 63](#).

NOTE: Do not configure LSPs at the `[edit protocols mpls label-switched-path]` hierarchy level on the PE switches.

- Configure one or more provider switches. See [“Configuring MPLS on Provider Switches” on page 62](#).

This topic describes how to configure an ingress PE switch, one or more provider switches, and an egress PE switch for static LSP:

1. [Configuring the Ingress PE Switch | 586](#)
2. [Configuring the Provider and the Egress PE Switch | 586](#)

Configuring the Ingress PE Switch

To configure the ingress PE switch:

1. Configure an IP address for every core interface:

```
[edit interfaces]
user@switch# set interface-name unit logical-unit-number family inet address address
```

NOTE: You cannot use routed VLAN interfaces (RVIs) or Layer 3 subinterfaces as core interfaces.

2. Configure the name associated with the static LSP:

```
[edit protocols mpls]
user@switch# set static-label-switched-path lsp-name
```

3. Configure the next hop switch for the LSP:

```
[edit protocols mpls]
user@switch# set static-label-switched-path lsp-name ingress next-hop address-of-next-hop
```

4. Specify the address of the egress switch for the LSP:

```
[edit protocols mpls]
user@switch# set static-label-switched-path lsp-name ingress to address-of-egress-switch
```

5. Configure the new label that you want to add to the top of the label stack:

```
[edit protocols mpls]
user@switch# set static-label-switched-path lsp-name ingress push out-label
```

Configuring the Provider and the Egress PE Switch

To configure a static LSP for MPLS on the provider and egress PE switch:

1. Configure a transit static LSP:

```
[edit protocols mpls]
user@switch# set static-label-switched-path lsp-name transit incoming-label
```

2. Configure the next hop switch for the LSP:

```
[edit protocols mpls]
```

```
user@switch# set static-label-switched-path lsp-name transit incoming-label next-hop
address-of-next-hop
```

3. Only for provider switches, remove the label at the top of the label stack and replace it with the specified label:

```
[edit protocols mpls]
user@switch# set static-label-switched-path lsp-name transit incoming-label swap out-label
```

4. Only for the egress PE switch, remove the label at the top of the label stack:

NOTE: If there is another label in the stack, that label becomes the label at the top of the label stack. Otherwise, the packet is forwarded as a native protocol packet (typically, as an IP packet).

```
[edit protocols mpls]
user@switch# set static-label-switched-path lsp-name transit incoming-label pop
```

RELATED DOCUMENTATION

[MPLS Overview | 2](#)

Adaptive LSP Configuration

An LSP occasionally might need to reroute itself for these reasons:

- The continuous reoptimization process is configured with the **optimize-timer** statement.
- The current path has connectivity problems.
- The LSP is preempted by another LSP configured with the **priority** statement and is forced to reroute.
- The explicit-path information for an active LSP is modified, or the LSP's bandwidth is increased.

You can configure an LSP to be *adaptive* when it is attempting to reroute itself. When it is adaptive, the LSP holds onto existing resources until the new path is successfully established and traffic has been cut over to the new LSP. To retain its resources, an adaptive LSP does the following:

- Maintains existing paths and allocated bandwidths—This ensures that the existing path is not torn down prematurely and allows the current traffic to continue flowing while the new path is being set up.

- Avoids double-counting for links that share the new and old paths—Double-counting occurs when an intermediate router does not recognize that the new and old paths belong to the same LSP and counts them as two separate LSPs, requiring separate bandwidth allocations. If some links are close to saturation, double-counting might cause the setup of the new path to fail.

By default, adaptive behavior is disabled. You can include the **adaptive** statement in two different hierarchy levels.

If you specify the **adaptive** statement at the LSP hierarchy levels, the adaptive behavior is enabled on all primary/secondary paths of the LSP. This means both the primary and secondary paths share the same bandwidth on common links.

To configure adaptive behavior for all LSP paths, include the **adaptive** statement in the LSP configuration:

```
adaptive;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

If you specify the **adaptive** statement at the [edit protocols mpls **label-switched-path** *lsp-name* (primary | secondary) *path-name*] hierarchy level, adaptive behavior is enabled only on the path on which it is specified. Bandwidth double-counting occurs between different paths. However, if you also have the **adaptive** statement configured at the [edit protocols mpls **label-switched-path** *lsp-name*] hierarchy level, it overrides the adaptive behavior of each individual path.

To configure adaptive behavior for either the primary or secondary level, include the **adaptive** statement:

```
adaptive;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* (primary | secondary) *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* (primary | secondary) *path-name*]

Container LSP Configuration

IN THIS SECTION

- [Dynamic Bandwidth Management Using Container LSP Overview | 589](#)
- [Example: Configuring Dynamic Bandwidth Management Using Container LSP | 619](#)
- [Configuring Dynamic Bandwidth Management Using Container LSP | 650](#)

Dynamic Bandwidth Management Using Container LSP Overview

IN THIS SECTION

- [Understanding RSVP Multipath Extensions | 589](#)
- [Junos OS RSVP Multipath Implementation | 590](#)
- [Current Traffic Engineering Challenges | 591](#)
- [Using Container LSP as a Solution | 594](#)
- [Junos OS Container LSP Implementation | 596](#)
- [Configuration Statements Supported for Container LSPs | 613](#)
- [Impact of Configuring Container LSPs on Network Performance | 617](#)
- [Supported and Unsupported Features | 618](#)

RSVP LSPs with the autobandwidth feature are increasingly deployed in networks to meet traffic engineering needs. However, the current traffic engineering solutions for point-to-point LSPs are inefficient in terms of network bandwidth utilization, mainly because the ingress routers originating the RSVP LSPs either try to fit the LSPs along a particular path without creating parallel LSPs, or do not interact with the other routers in the network and probe for additional available bandwidth.

This feature provides an ingress router with the capability of acquiring as much network bandwidth as possible by creating parallel LSPs dynamically.

Understanding RSVP Multipath Extensions

The RSVP multipath extensions proposed in the IETF [KOMPELLA-MLSP] allow the setup of traffic engineered multipath label-switched paths (container LSPs). The container LSPs, in addition to conforming to traffic engineering constraints, use multiple independent paths from a source to a destination, thereby

facilitating load balancing of traffic. The multipath extensions require changes to the RSVP-TE protocol and allow for merging of labels at the downstream nodes (similar to LDP), which also helps in preserving forwarding resources.

The multipath extensions to RSVP provide the following benefits:

- Ease of configuration. Typically, multiple RSVP LSPs are configured for either load balancing or bin packing. With a container LSP, there is a single entity to provision, manage, and monitor LSPs. Changes in topology are handled easily and autonomously by the ingress LSP, by adding, changing, or removing member LSPs to rebalance traffic, while maintaining the same traffic engineering constraints.
- RSVP equal-cost multipath (ECMP) inherits the standard benefits of ECMP by absorbing traffic surges.
- Multipath traffic engineering allows for better and complete usage of network resources.
- Knowing the relationship among LSPs helps in computing diverse paths with constraint-based routing. It allows adjustment of member LSPs while other member LSPs continue to carry traffic.
- The intermediate routers have an opportunity to merge the labels of member LSPs. This reduces the number of labels that need to get added to the forwarding plane and in turn reduces the convergence time.

If the number of independent ECMP paths is huge, label merging overcomes the platform limitations on maximum (ECMP) next hops. With point-to-point RSVP LSPs that require link or node protection, the next hops are doubled as each LSP is programmed with both primary and backup next hops. RSVP multipath (or ECMP) obviates the need for backup next hops.

- When there is a link failure, the router upstream to the link failure can distribute traffic from the failed link to the remaining ECMP branches, obviating the need for bypass LSPs. The bypass LSP approach not only requires more state when signaling backup LSPs, but also suffers from scaling issues that result in merge-point timing out a protected path state block (PSB) before point of local repair (PLR) gets a chance to signal the backup LSP.

Junos OS RSVP Multipath Implementation

In order to deploy RSVP multipath (ECMP) in a network, all the nodes through which ECMP LSPs pass must understand RSVP ECMP protocol extensions. This can be a challenge, especially in a multivendor networks.


Junos OS implements the RSVP multipath extensions without the need for protocol extensions. A single container LSP, which has the characteristics of ECMP and RSVP TE, is provisioned. A container LSP consists of several member LSPs and is set up between the ingress and egress routing device. Each member LSP takes a different path to the same destination. The ingress routing device is configured with all the required parameters to compute the RSVP ECMP LSP. The parameters configured to compute a set of RSVP point-to-point LSPs can be used by the ingress routing device to compute the container LSP as well.

Current Traffic Engineering Challenges

The main challenge for traffic engineering is to cope with the dynamics of both topology and traffic demands. Mechanisms are needed that can handle traffic load dynamics in scenarios with sudden changes in traffic demand and dynamically distribute traffic to benefit from available resources.

Figure 46 on page 591 illustrates a sample network topology with all the LSPs having the same hold and setup priorities, and admission control restricted on the ingress router. All the links are annotated with a tuple (cost and capacity).

Figure 46: Sample Topology

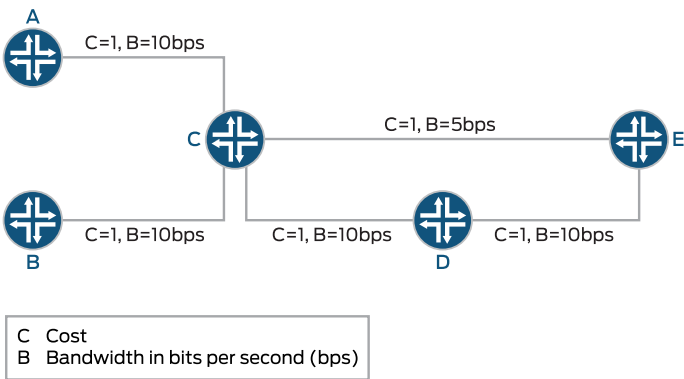

8042458

Some of the traffic engineering problems seen in [Figure 46 on page 591](#) are listed here:

- **Bin Packing**

This problem arises because of a particular order in which LSPs are signaled. The ingress routers might not be able to signal some LSPs with required demands although bandwidth is available in the network, leading to under-utilization of link capacity.

For example, the following LSPs arrive in the sequence mentioned in [Table 15 on page 592](#).

Table 15: LSP Sequence Order for Bin Packing

Time	Source	Destination	Demand	ERO
1	A	E	5	A-C-D-E
2	B	E	10	No ERO

The LSP originating at Router B is not routable as constraint-based routing fails to find a feasible path. However, if Router B is signaled first, both the LSPs are routable. Bin packing happens because of lack of visibility of individual per-LSP, per-device bandwidth demands at the ingress routing device.

Bin packing can also happen when there is no requirement for ordering of LSPs. For example, if there is an LSP with demand X and there are two different paths to the destination from the ingress router with available bandwidths Y1 and Y2, such that Y1 is less than X, Y2 is less than X, and Y1 plus Y2 is greater than or equal to X.

In this case, even though there are enough network resources in terms of available bandwidth to satisfy the aggregate LSP demand X, the LSP might not be signaled or re-optimized with the new demand. In [Figure 46 on page 591](#), with container LSP support, the ingress B creates two LSPs each of size 5 when demand 10 is posed. One LSP is routed along B-C-E and another one along B-C-D-E.

- **Deadlock**

Considering [Figure 46 on page 591](#), the LSPs follow the sequence mentioned in [Table 16 on page 592](#).

Table 16: LSP Sequence Order for Deadlock

Time	Source	Destination	Demand	ERO	Event
1	A	E	2	A-C-D-E	Constraint-based routing with RSVP signaling
2	B	E	2	B-C-D-E	Constraint-based routing with RSVP signaling
3	A	E	2 to 20	A-C-D-E	Constraint-based routing fails, no RSVP signaling

At time 3, the demand on LSP from A to E increases from 2 to 20. If autobandwidth is configured, the change does not get detected until the adjustment timer expires. In the absence of admission control at A, the increased traffic demand might cause traffic to drop on other LSPs that share common links with the mis-behaving LSP.

This happens due to the following reasons:

- Lack of global state at all the ingress routers
- Signaling of mis-behaving demands
- Tearing down of mis-behaving demands

With container LSP configured, ingress A has more chances of splitting the load (even incrementally if not fully) across multiple LSPs. So, LSP from A is less likely to see prolonged traffic loss.

• Latency Inflation

Latency inflation is caused by the autobandwidth and other LSPs parameters. Some of the other factors that contribute to latency inflation include:

- LSP priority

LSPs choose longer paths because shorter paths between data centers located in the same city can be congested. The bandwidth on the shorter paths can get exhausted by equal or higher priority LSPs. Due to periodic LSP optimization by autobandwidth, LSP can get rerouted to a higher delay path. When many LSPs undergo less than optimal path selection, they can potentially form a chain of dependencies. Modifying the LSP priorities dynamically is a workaround to the issue; however, dynamically adjusting LSP priorities to find shorter paths is a challenging task.

- All or Nothing policy

When the demand on an LSP increases and at least one of the links along the shorter path is close to its reservation limit, LSP optimization can force the LSP to move to a longer latency path. LSP has to traverse a long path even though the short path is capable of carrying most of the traffic.

- Minimum and maximum bandwidth

Minimum and maximum bandwidth specify the boundaries for LSP sizes. If minimum bandwidth is small, an LSP is more prone to autobandwidth adjustment because a small change in bandwidth is enough to cross the threshold limits. LSPs might reroute although bandwidth is available. On the other hand, if the minimum bandwidth is large, network bandwidth might be wasted. If the maximum bandwidth value is small, a large number of LSPs might be needed at the ingress router to accommodate the application demand. If the maximum bandwidth is large, the LSPs can grow larger in size. Such LSPs can suffer because of an all or nothing policy.

- Autobandwidth adjustment threshold

Bandwidth threshold dictates if LSPs need to be re-optimized and resized. If the value is small, LSPs are frequently re-optimized and rerouted. That might cause CPU spike because applications or protocols, such as BGP resolving over the LSPs, might keep the Routing Engine busy doing next-hop resolution.

A large value might make an LSP immobile. With container LSP configured, an LSP is less likely to get subjected to one or no policy. An ingress router originates multiple LSPs, although not all LSPs potentially traverse high latency paths.

• **Predictability**

Service providers often want predictable behavior in terms of how LSPs get signaled and routed. Currently, without any global coordination, it is difficult to set up the same set of LSPs in a predictable way. Consider the two different orderings in [Table 17 on page 594](#) and [Table 18 on page 594](#). The ERO that an LSP uses depends on its signaling time.

Table 17: LSP Sequence Order for Predictability

Time	Source	Destination	Demand	ERO
1	A	E	5	A-C-D-E
2	B	E	5	B-C-E

Table 18: LSP Sequence Order for Predictability

Time	Source	Destination	Demand	ERO
1	B	E	5	B-C-E
2	A	E	5	A-C-D-E

Container LSP does not directly help LSPs find predictable EROs. If LSPs are getting rerouted because of an all or no policy without container LSP configured, such LSPs might see less churn if container LSPs are configured, because smaller LSPs have better chances of finding a shorter or same path.

Using Container LSP as a Solution

IN THIS SECTION

- [Accommodating the New Demand X | 595](#)
- [Creating New LSPs to Meet Demand X | 595](#)
- [Assigning Bandwidth to the New LSPs | 595](#)
- [Controlling the LSP Paths | 595](#)

A container LSP can be used as a solution to the challenges faced by the current traffic engineering features. Considering [Figure 46 on page 591](#), when the demand X on a container LSP increases with the network

capacity (max-flow) being more than the demand, the following approaches come into effect with a container LSP:

Accommodating the New Demand X

In the current implementation, autobandwidth attempts to re-signal an LSP with the new demand X and follows the all or nothing policy as mentioned earlier.

The container LSP approach computes several small (smaller than demand X) bandwidth LSPs such that the aggregate bandwidth is not less than X, and the ingress router performs this adjustment periodically. One of the triggers to create new LSPs or to delete old LSPs can be changed in aggregate bandwidth. The ingress router then load-balances the incoming traffic across the newly created LSPs.

Creating New LSPs to Meet Demand X

Although the number of new LSPs created can be a maximum of the allowed configurable limit, there is not much benefit from these LSPs once the number of LSPs exceeds the number of possible diverse paths or equal-cost multipaths (ECMPs). The benefit of creating the smaller LSPs is seen when an ingress router uses the newly created LSPs for load-balancing traffic. This, however, depends on the network topology and state.

Creating multiple parallel LSPs by all the ingress routers in the network can lead to scaling issues at the transit routers. Thus, the number of new LSPs to be created depends on the size of the individual LSPs and the given aggregate demand, X in this case.

Assigning Bandwidth to the New LSPs

In general, there can be a number of heuristics to allocate bandwidths to the newly created LSPs. An ingress router can solve an optimization problem in which it can maximize a given utility function. The output of an optimization problem is assigning optimal bandwidth values. However, to solve an optimization problem, the number of newly created LSPs has to be fixed. Therefore, it is complex to optimize the number and size of each LSP. Thus, to simplify the problem, the same amount of bandwidth is assumed for all the newly created LSPs, and then the number of required LSPs is computed.

Controlling the LSP Paths

The flexibility to control the LSP paths is expressed in terms of the configuration for point-to-point LSPs and container LSPs. Controlling the LSP paths using the configuration parameters can be applied under two different aspects:

- **Topology**—There are no topology constraints with this feature. Each member LSP is treated like a point-to-point LSP and is re-optimized individually. An ingress router does not try to compute equal IGP cost paths for all its LSPs, but instead it computes paths for all the LSPs using current traffic engineering database information. While computing a path, constraint-based routing adheres to any constraints specified through the configuration, although there is no change in the constraint-based routing method for path computation.
- **When to create a new LSP**—When to create a new LSP can be explicitly specified. By default, an ingress router periodically computes the aggregate traffic rate by adding up the traffic rate of all the individual LSPs. Looking at the aggregate bandwidth and configuration, the ingress router recomputes the number

of LSPs and the bandwidths of the LSPs. The new LSPs are then signaled or the existing LSPs are re-signaled with the updated bandwidth. Instead of looking at the instantaneous aggregate rate, the ingress routers can compute an average (of aggregates) over some duration by removing outlier samples (of aggregates). Managing the LSPs that remain outstanding and active by considering aggregate bandwidth is more scalable than creating the new LSPs based on the usage of a particular LSP. The intervals and thresholds can be configured to track the aggregate traffic and trigger adjustment. These dynamic LSPs co-exist and interoperate with per-LSP autobandwidth configuration.

Junos OS Container LSP Implementation

IN THIS SECTION

- [Container LSP Terminology | 596](#)
- [LSP Splitting | 597](#)
- [LSP Merging | 600](#)
- [Node and Link Protection | 601](#)
- [Naming Convention | 602](#)
- [Normalization | 602](#)
- [Constraint-Based Routing Path Computation | 608](#)
- [Sampling | 609](#)
- [Support for NSR, IPG-FA, and Static Routes | 609](#)

A container LSP is an ECMP TE LSP that acts like a container LSP consisting of one or more member LSPs. A point-to-point TE LSP is equivalent to a container LSP with a single member LSP. Member LSPs are added to the container LSP through a process called splitting, and removed from the container LSP through a process called merging.

Container LSP Terminology

The following terms are defined in the context of a container LSP:

- **Normalization**—An event occurring periodically when an action is taken to adjust the member LSPs, either to adjust their bandwidths, their number, or both. A normalization process is associated with a sampling process and periodically estimates aggregate utilization of a container LSP.
- **Nominal LSP**—The instance of a container LSP that is always present.
- **Supplementary LSP**—The instances or sub-LSPs of a container LSP, which are dynamically created or removed.

Autobandwidth is run over each of the member LSPs, and each LSP is resized according to the traffic it carries and the autobandwidth configuration parameters. The aggregate demand on a container LSP is tracked by adding up the bandwidth across all the member LSPs.

- **Minimum signaling-bandwidth**—The minimum bandwidth with which a member LSP is signaled at the time of normalization or initialization. This could be different from the minimum-bandwidth defined under autobandwidth.
- **Maximum signaling-bandwidth** —The maximum bandwidth with which a member LSP is signaled at the time of normalization or initialization. This could be different from the maximum-bandwidth defined under autobandwidth.
- **Merging-bandwidth** —Specifies the lower bandwidth threshold on the aggregate bandwidth usage, such that if the aggregate usage falls below this value, the ingress router merges the member LSPs at the time of normalization.
- **Splitting-bandwidth** —Specifies the upper bandwidth threshold on the aggregate bandwidth usage, such that if the aggregate usage exceeds this value, the ingress router splits the member LSPs at the time of normalization.
- **Aggregate minimum-bandwidth** —Sum of merging-bandwidth of the current active member LSPs. This minimum bandwidth is different from the autobandwidth minimum-bandwidth.
- **Aggregate maximum-bandwidth**—Sum of the splitting-bandwidth of the current active member LSPs. This maximum bandwidth is different from the autobandwidth maximum-bandwidth.

LSP Splitting

IN THIS SECTION

- [Operational Overview | 597](#)
- [Operational Constraints | 598](#)
- [Supported Criteria | 598](#)
- [Splitting Triggers | 599](#)

Operational Overview

The LSP splitting mechanism enables an ingress router to create new member LSPs or to re-signal existing LSPs with different bandwidths within a container LSP when a demand X is placed on the container LSP. With LSP splitting enabled, an ingress router periodically creates a number of LSPs (by signaling new ones or re-signaling existing ones) to accommodate a new aggregate demand X. In the current implementation, an ingress router tries to find an LSP path satisfying a demand X and other constraints. If no path is found, either the LSP is not signaled or it remains up, but with the old reserved bandwidth.

Between two normalization events (splitting or merging), individual LSPs might get re-signaled with different bandwidths due to the autobandwidth adjustments. If a container LSP is not configured with autobandwidth, then the member LSPs are signaled with the static bandwidth value, if configured. There is no dynamic splitting in this case, as there is no dynamic estimation of aggregate bandwidth. The splitting adjustments with a specific bandwidth value can be manually triggered.

NOTE:

Be aware of the following considerations for LSP splitting:

- After LSP splitting, the ingress router continues to inject one forwarding adjacency. Forwarding adjacencies are not supported in IGP for this feature.
- Between two normalization events, two LSPs might have different bandwidths subjected to autobandwidth constraints.
- After LSPs are split (or merged), make-before-break uses the fixed filter (FF) style sharing unless the **adaptive** option is configured. However, two different LSPs do not do the shared explicit (SE) style sharing for this feature.
- When LSPs are re-signaled with modified bandwidths, some of the LSPs might not get signaled successfully, leading to failover options.

Operational Constraints

LSP splitting has the following operational constraints:

- LSP bandwidth—Although there are a number of ways to allocate bandwidth values to the LSPs, the Junos OS implementation supports only an equal-bandwidth allocation policy when normalization is done, wherein all the member LSPs are signaled or re-signaled with equal bandwidth.
- Number of LSPs—If an ingress router is configured to have a minimum number of LSPs, it maintains the minimum number of LSPs even if the demand can be satisfied with less than the minimum number of LSPs. In case the ingress router is unable to do constraint-based routing for computations on the sufficient number of LSPs or signal sufficient number of LSPs, the ingress router resorts to a number of fallback options.

By default, an incremental approach is supported as a fallback option (unless configured differently), where an ingress router makes attempts to bring up the sufficient number of LSPs, such that the new aggregate bandwidth exceeds the old aggregate bandwidth (and is as close to the desired demand as possible). The ingress router then load-balances traffic using the LSPs. The LSPs that could not be brought up are removed by the ingress router.

Supported Criteria

When a container LSP signals a member LSP, the member LSP gets signaled with minimum-signaling-bandwidth. Since each member LSP is configured with autobandwidth, between two

normalization events, each LSP can undergo autobandwidth adjustment multiple times. As the traffic demand increases, the ingress router creates additional supplementary LSPs. All member LSPs are used for ECMP, so they should roughly have the same reserved bandwidth after normalization.

For example, if there are K LSPs signaled after normalization, each LSP is signaled with equal bandwidth B. The total aggregate bandwidth reserved is B.K, where B satisfies the following condition:

- Minimum signaling-bandwidth is less than or equal to B, which in turn is less than or equal to the maximum signaling-bandwidth

$$(\text{minimum-signaling-bandwidth} \leq B \leq \text{maximum-signaling-bandwidth})$$

Until the next normalization event, each member LSP undergoes several autobandwidth adjustments. After any autobandwidth adjustment, if there are N LSPs with reserved bandwidths b_i , where $i=1,2,\dots, N$, each b_i should satisfy the following condition:

- Minimum bandwidth is less than or equal to b_i , which in turn is less than or equal to the maximum bandwidth

$$(\text{minimum-bandwidth} \leq b_i \leq \text{maximum-bandwidth})$$

Both the above-mentioned conditions are applicable for per member LSP (nominal and supplementary), and essentially have the reserved bandwidth to exist within a range.

Splitting Triggers

Every time the normalization timer expires, the ingress router decides if LSP splitting is required. The ingress router works with the aggregate bandwidth instead of the individual LSP bandwidths. The following two variables are defined for aggregate bandwidth:

- **Current-Aggr-Bw**—Sum of reserved bandwidths of all current member LSPs.
- **New-Aggr-Bw**—Sum of traffic rates on all current member LSPs based on sampling.

Taking for example, if there are N member LSPs in the network at the time of normalization, the two approaches to trigger LSP splitting are as follows:

- **Absolute trigger**—LSP splitting is performed when **New-Aggr-Bw** is greater than **Aggregate-maximum-bandwidth**.

$$(\text{New-Aggr-Bw} > \text{Aggregate-maximum-bandwidth})$$

- **Relative trigger**—The **Current-Aggr-Bw** is compared with **New-Aggr-Bw** at the ingress routing device. LSP splitting is performed when the difference in the bandwidth amount is off by a threshold.

$$([1-a] \times \text{Current-Aggr-Bw} < \text{New-Aggr-Bw} < [1+a] \times \text{Current-Aggr-Bw}, \text{ where } 0 \leq a \leq 1)$$

When **New-Aggr-Bw** is greater than or equal to $[1+a]$ multiplied by **Current-Aggr-Bw**, the ingress routing device does not perform normalization, but instead LSP splitting is done. However, when both LSP splitting and LSP merging are configured on the ingress router, LSP splitting is triggered on the ingress router when one of the two conditions is satisfied.

LSP Merging

IN THIS SECTION

- [Operational Overview | 600](#)
- [Operational Constraints | 600](#)
- [Merging Triggers | 601](#)

Operational Overview

Junos OS supports two kinds of LSPs – CLI-configured LSPs and dynamically created LSPs. The CLI-configured LSPs are created manually and remain in the system until the configuration is modified. The dynamic LSPs are created dynamically by next generation MVPN, BGP virtual private LAN service (VPLS), or LDP, based on a template configuration, and are removed from the system when not used by any application for a certain duration. LSP merging follows a similar approach as dynamic LSPs.

LSP merging enables an ingress routing device to dynamically eliminate some member LSPs of the container LSP so less state information is maintained in the network. If an ingress router provisions several member LSPs between the ingress and egress routers, and there is an overall reduction in aggregate bandwidth (resulting in some LSPs being under-utilized), the ingress router distributes the new traffic load among fewer LSPs.

Although there are a number of ways to merge the member LSPs, Junos OS supports only overall-merge when normalization is being performed. An ingress router considers the aggregate demand and the minimum (or maximum) number of LSPs and revises the number of LSPs that should be active at an ingress routing device. As a result, the following can take place periodically as the normalization timer fires:

- Re-signaling some of the existing LSPs with updated bandwidth
- Creating new LSPs
- Removing some of the existing LSPs

Operational Constraints

If a container LSP is not configured with autobandwidth, then the member LSPs are signaled with the static bandwidth value, if configured. LSP merging does not happen because there is no dynamic estimation of aggregate bandwidth. However, a manual trigger for splitting and adjusting with a specific bandwidth value can be configured.

NOTE:

- Nominal LSPs are never deleted as part of LSP merging.
- Before deleting an LSP, the LSP is made inactive, so that traffic shifts to other LSPs before removing the LSP. This is because RSVP sends PathTear before deleting routes and next hops from the Packet Forwarding Engine.
- When member LSPs are re-signaled with modified bandwidth, it might happen that some LSPs do not get signaled successfully.

Merging Triggers

Every time the normalization timer expires, the ingress router decides if LSP merging is required. The ingress router works with the aggregate bandwidth instead of the individual LSP bandwidths. The following two variables are defined for aggregate bandwidth:

- **Current-Aggr-Bw**—Sum of reserved bandwidths of all current member LSPs.
- **New-Aggr-Bw**—Sum of traffic rates on all current member LSPs based on sampling.

For example, if there are N member LSPs in the network at the time of normalization, the two approaches to trigger LSP merging are as follows:

- Absolute trigger—LSP merging is performed when **New-Aggr-Bw** is less than **Aggregate-minimum-bandwidth**.

(New-Aggr-Bw < Aggregate-maximum-bandwidth)

- Relative trigger—The **Current-Aggr-Bw** is compared with **New-Aggr-Bw** at the ingress routing device. LSP merging is performed when the difference in the bandwidth amount is off by a threshold.

([1-a] x Current-Aggr-Bw < New-Aggr-Bw < [1+a] x Current-Aggr-Bw, where 0 <= a <= 1)

When the **New-Aggr-Bw** value is less than or equal to [1+a] multiplied by the **Current-Aggr-Bw** value, the ingress routing device does not perform normalization, but instead LSP merging is done. However, when both LSP splitting and LSP merging are configured on the ingress router, LSP splitting is triggered on the ingress router when one of the two conditions is satisfied.

Node and Link Protection

Junos OS supports the following mechanisms for node and link protection:

- Fast-reroute
- Link protection
- Node-link protection

Only one of the above-mentioned modes of protection can be configured on an ingress routing device at any given time. All member LSPs (nominal and supplementary) use the same mode of protection that is configured.

Naming Convention

While configuring a container LSP, a name is assigned to the LSP. The name of a nominal and a supplementary LSP is formed by adding the configured-name suffix and an auto-generated suffix to the name of the container LSP. The name of the container LSP is unique and is checked for accuracy during the configuration parsing. The container LSP name should uniquely identify parameters, such as the ingress and egress router names.

NOTE: A container LSP member LSP and a point-to-point LSP on an ingress routing device cannot have the same LSP name.

The container LSPs follow a number-based LSP naming convention. For example, if the nominal LSP's configured name is **bob** and the number of member LSPs is N, the member LSPs are named **bob-*<configured-suffix>-1***, **bob-*<configured-suffix>-2***, ..., and **bob-*<configured-suffix>-N***.

After a normalization event, the number of member LSPs can change. For example, if the number of member LSPs increases from six to eight, then the ingress routing device keeps the first six LSPs named **bob-*<configured-suffix>-1***, **bob-*<configured-suffix>-2***, ..., and **bob-*<configured-suffix>-6***. The two additional LSPs are named **bob-7** and **bob-8**. The original LSPs might need to be re-optimized if their signaled bandwidth changes.

Similarly, if the number of member LSPs reduces from eight to six, the ingress routing device re-signals the member LSPs in such a way that the remaining active LSPs in the system are named **bob-*<configured-suffix>-1***, **bob-*<configured-suffix>-2***, ..., and **bob-*<configured-suffix>-6***.

In the process of creating new LSPs, an RSVP LSP named **bob-*<configured-suffix>-7*** can be configured.

Normalization

IN THIS SECTION

- [Operational Overview | 603](#)
- [Operational Constraints | 603](#)
- [Inter-Operation with Autobandwidth | 604](#)

Operational Overview

Normalization is an event that happens periodically. When it happens, a decision is made on the number of member LSPs that should remain active and their respective bandwidths in a container LSP. More specifically, the decision is made on whether new supplementary LSPs are to be created, or any existing LSPs are required to be re-signaled or deleted during the normalization event.

Between two normalization events, a member LSP can undergo several autobandwidth adjustments. A normalization timer, similar to re-optimization timer, is configured. The normalization timer interval should be no less than the adjustment interval or optimization timer.

NOTE: Normalization is not triggered based on network events, such as topology changes.

Operational Constraints

Normalization has the following operational constraints:

- Normalization happens only when none of the member LSPs are undergoing re-optimization or make-before-break. Normalization starts when all the member LSPs complete their ongoing make-before-break. If normalization is pending, new optimization should not be attempted until the normalization is complete.
- After normalization, an ingress routing device first computes a set of bandwidth-feasible paths using constraint-based routing computations. If enough constraint-based routing computed paths are not brought up with an aggregate bandwidth value that exceeds the desired bandwidth, several failover actions are taken.
- After a set of bandwidth-feasible paths are available, the ingress routing device signals those paths while keeping the original set of paths up with the old bandwidth values. The make-before-break is done with shared explicit (SE) sharing style, and when some of the LSPs do not get successfully re-signaled, a bounded number of retries is attempted for a specified duration. Only when all the LSPs are successfully signaled does the ingress router switch from the old instance of the container LSP to the newer instance. If all LSPs could not be successfully signaled, the ingress router keeps those instances of members that are up with higher bandwidth values.

For example, if the bandwidth of an old instance of a member LSP (LSP-1) is 1G, the LSP is split into LSP-1 with bandwidth 2G and LSP-2 with bandwidth 2G. If the signaling of LSP-1 with bandwidth 2G fails, the ingress router keeps LSP-1 with bandwidth 1G and LSP-2 with bandwidth 2G.

When there is a signaling failure, the ingress routing device stays in the error state, where some LSPs have updated bandwidth values only if the aggregate bandwidth has increased. The ingress router makes an attempt to bring up those LSPs that could not be successfully signaled, resulting in minimum traffic loss.

- If an LSP goes down between two normalization events, it can increase the load on other LSPs that are up. In order to prevent overuse of other LSPs, premature normalization can be configured in case of LSP

failure. LSPs can go down because of pre-emption or lack of node or link protection. It might not be necessary to bring up the LSPs that are down because the normalization process re-runs the constraint-based routing path computations.

Inter-Operation with Autobandwidth

IN THIS SECTION

- [Changes in Per-LSP Autobandwidth Adjustments | 604](#)
- [Changes in Traffic Growth | 606](#)
- [Computed Range and Configured Feasible Ranges | 606](#)

Taking as an example, there is one nominal LSP named LSP-1 configured with the following parameters:

- Splitting-bandwidth and maximum-signaling-bandwidth of 1G
- Merging-bandwidth and minimum-signaling-bandwidth of 0.8G
- Autobandwidth

Normalization is performed differently in the following scenarios:

Changes in Per-LSP Autobandwidth Adjustments

[Table 19 on page 604](#) illustrates how normalization splits and merges member LSPs as autobandwidth adjustments change per-LSP bandwidth with unconditional normalization.

Table 19: Normalization with Per-LSP Autobandwidth Adjustment Changes

Normalization Time	Current State	Events	Adjusted State
T0	No state.	Initialization	LSP-1 is signaled with bandwidth of 0.8G
T1	LSP-1 usage increases to 1.5G	<ul style="list-style-type: none"> • Multiple autobandwidth adjustments since T0 is possible. • The ingress router decides to split LSP-1 into two LSPs, and creates LSP-2. 	LSP-1 = 0.8G LSP-2 = 0.8G
T2	LSP-1 usage increase to 2G LSP-2 usage increases to 0.9G (within limits)	<ul style="list-style-type: none"> • Aggregate bandwidth is 2.9G, which exceeds aggregate splitting maximum of 2G. • The ingress router decides to split LSP-1 into three LSPs, and creates LSP-3. 	LSP-1 = 1G LSP-2 = 1G LSP-3 = 1G

Table 19: Normalization with Per-LSP Autobandwidth Adjustment Changes (*continued*)

Normalization Time	Current State	Events	Adjusted State
T3	LSP-3 usage increases to 1.5G	<ul style="list-style-type: none"> Aggregate bandwidth is 3.5G with a maximum aggregate splitting of 3G. The ingress router decides to split LSP-1 into four LSPs, and creates LSP-4. 	LSP-1 = 1G LSP-2 = 1G LSP-3 = 1G LSP-4 = 1G
T4	LSP-2 usage drops to 0.5G	<ul style="list-style-type: none"> Aggregate bandwidth is 3G. The ingress router decides to merge LSP-1 and removes LSP-4. 	LSP-1 = 1G LSP-2 = 1G LSP-3 = 1G

Because autobandwidth is configured on a per-LSP basis, every time there is an autobandwidth adjustment, the ingress router re-signals each LSP with **Max Avg Bw**.

Another approach to handling the changes in per-LSP autobandwidth adjustments is to not allow individual LSPs to run autobandwidth on the ingress router, but to run autobandwidth in passive (monitor) mode. This way, sampling is done at every statistics interval for member LSPs only, and normalization is performed for the container LSP alone instead of acting on individual LSPs adjustment timer expiry.

As a result, the number of re-signaling attempts and bandwidth fluctuations for a given member LSP is reduced. Only the computed bandwidth-values per-member LSP is used by the ingress router to find an aggregate bandwidth to be used during normalization. Configuring autobandwidth adjustment followed by normalization (adjustments and normalization intervals are comparable) can lead to considerable overhead because of re-signaling.

Taking the same example, and applying the second approach, LSP-1 goes from 0.8G to 1.5G and then back to 0.8G. If the normalization timer is of the same order as the adjustment interval, the ingress router leaves LSP-1 alone with its original 0.8G and only signals LSP-2 with 0.8G. This helps achieve the final result of normalization, thus avoiding the extra signaling attempt on LSP-1 with 1.5G at adjustment timer expiry.

Because member LSPs always use equal bandwidth, any adjustment done on member LSPs is undone. The member LSPs are re-signaled with reduced bandwidth when compared to the reserved capacity in adjustment trigger with normalization trigger. Therefore, avoiding adjustment trigger for member LSPs might be useful assuming that normalization and adjustment intervals are of the same order.

NOTE: We recommend that the normalization timer be higher than the autobandwidth adjustment interval and regular optimization duration, as the traffic trends are observed at a longer time scale and normalization is performed one-to-three times per day. An LSP can undergo optimization for the following reasons:

- Normal optimization
- Autobandwidth adjustment
- Normalization

Changes in Traffic Growth

Table 20 on page 606 illustrates how normalization is performed when traffic grows in large factor.

Table 20: Normalization with Traffic Growth

Normalization Time	Current State	Events	Adjusted State
T0	No state		LSP-1 is signaled with bandwidth of 0.8G
T1	LSP-1 usage increase to 3G	<ul style="list-style-type: none"> • Aggregate usage exceeds maximum splitting bandwidth • The ingress router decides to split LSP-1, and creates two more supplementary LSPs 	LSP-1 = 1G LSP-2 = 1G LSP-3 = 1G

Having fewer LSPs is preferred over signaling four LSPs each with 0.8G bandwidth, unless there is a constraint on the minimum number of LSPs.

Computed Range and Configured Feasible Ranges

When an ingress router is configured with the minimum and maximum number of LSPs, and per LSP splitting-bandwidth and merging-bandwidth values, the bandwidth thresholds are used for splitting and merging. For this, the number of LSPs (N) should satisfy the following constraints:

$$\text{minimum-member-lsps} \leq N \leq \text{maximum-member-lsps}$$

At the time of normalization, based on the aggregate demand X:

$$[X/\text{splitting-bandwidth}] \leq N \leq [X/\text{merging-bandwidth}]$$

The above-mentioned constraints provide two ranges for N to work from. If the two ranges for N are overlapping, N will be selected from the overlapping interval (lowest possible N) to keep the number of LSPs small in the network.

Otherwise, if maximum-member-lsps is less than $\lceil X/\text{splitting-bandwidth} \rceil$, the ingress router keeps (at maximum) the maximum-member-lsps in the system, and the bandwidth of each LSP is $\lceil X/\text{maximum-member-lsps} \rceil$ or the maximum-signaling-bandwidth, whichever is less. It is possible that some LSPs might not get signaled successfully.

Similarly, if minimum-member-lsps is greater than $\lceil X/\text{merging-bandwidth} \rceil$, the ingress router keeps (at minimum) the minimum-member-lsps in the system, and the bandwidth of each LSP is $\lceil X/\text{minimum-member-lsps} \rceil$ or the minimum-signaling-bandwidth, whichever is less.

Taking as an example, normalization is performed as following in these cases:

- Case 1

- minimum-member-lsps = 2
- maximum-member-lsps = 10
- aggregate demand = 10G
- merging-bandwidth = 1G
- splitting-bandwidth = 2.5G

In this case, the ingress routing device signals four member LSPs each with a bandwidth of 2G.

- Case 2

- minimum-member-lsps = 5
- maximum-member-lsps = 10
- aggregate demand = 10G
- merging-bandwidth = 2.5G
- splitting-bandwidth = 10G

In this case, the ingress routing device signals five member LSPs each with a bandwidth of 2G. Here, the static configuration on the number of member LSPs takes precedence.

- Case 3

- minimum-signaling-bandwidth = 5G
- maximum-signaling-bandwidth = 40G
- merging-bandwidth = 10G
- splitting-bandwidth = 50G

When a container LSP comes up, the nominal LSP is signaled with minimum-signaling-bandwidth. At the time of normalization, the new-aggregate-bandwidth is 100G. To find N and the bandwidth of each LSP, N should satisfy the following constraint:

$$100/50 \leq N \leq 100/10, \text{ which gives } 2 \leq N \leq 10$$

Therefore, N is equal to:

- N = 2, bandwidth = $\min \{100/2G, 40G\} = 40G$

This option does not satisfy the new aggregate of 100G.

- N = 3, bandwidth = $\min \{100/3G, 40G\} = 33.3G$

This option makes the aggregate bandwidth equal to 100G.

In this case, the ingress routing device signals three LSPs each with a bandwidth of 33.3G.

NOTE: The ingress router does not signal an LSP smaller than the minimum-signaling-bandwidth.

Constraint-Based Routing Path Computation

Although there are no changes in the general constraint-based routing path computation, with a container LSP, there is a separate module that oversees the normalization process, schedules constraint-based routing events, and schedules switchover from an old instance to a new instance, when appropriate. An ingress routing device has to handle the constraint-based routing path computation periodically. When normalization occurs, an ingress router has to compute constraint-based routing paths, if the number of LSPs or the bandwidth of the LSPs needs to be changed.

For example, there are K LSPs at the ingress router with bandwidth values X-1, X-2, ..., and X-K. The current aggregate bandwidth value is Y, which is the sum of X-1 plus X-2 plus X-K. If there is a new demand of W, the ingress router first computes how many LSPs are required. If the ingress router only needs N LSPs (LSP-1, LSP-2, ..., and LSP-N) each with bandwidth value B, the task of the constraint-based routing module is to provide a set of bandwidth-feasible LSPs that can accommodate the new aggregate demand which is not less than Y.

The ingress router then tries to see if the constraint-based routing paths can be computed successfully for all N LSPs. If the paths for all the LSPs are found successfully, the constraint-based routing module returns the set to the normalization module.

It is possible that the constraint-based routing computation is not successful for some LSPs. In this case, the ingress routing device takes the following action:

- If the configuration allows for incremental-normalization, implying if the ingress router has enough LSPs whose aggregate exceeds Y, the constraint-based routing module returns that set of paths.

- Whether increment-normalization is configured or not, if constraint-based routing paths could not be computed for a sufficient number of LSPs, the ingress router has to repeat the process of finding a new set of LSPs. Initially, the ingress router starts with the lowest value of N from the feasible region. Every time, the ingress router has to revise the number, it linearly increases it by 1. As a result, per LSP bandwidth becomes less and therefore, there is a greater chance of successful signaling. The process is repeated for all feasible values of N (or some bounded number of times or duration as configured).

The ingress router signals the LSPs after successful computations of the constraint-based routing path computation. It might happen that when the LSPs are signaled, signaling of many LSPs fail. In addition to the constraint-based routing path computations to be successful, the RSVP signaling should also succeed, such that the new aggregate is not less than the old aggregate bandwidth.

Sampling

Sampling is important for normalization to function. With sampling configured, an ingress routing device is able to make a statistical estimate of the aggregate traffic demands. Every time the sampling timer fires, the ingress routing device can consider traffic rates on different LSPs and compute an aggregate bandwidth sample. This sampling timer is different from the statistics sampling done periodically by RSVP on all LSPs. The aggregate bandwidth is a sample to be used at the time of normalization. An ingress routing device can save past samples to compute an average (or some other statistical measure) and use it the next time normalization happens.

To remove any outlier samples, a sampling token is configured. In other words, from all the aggregate samples collected during the configured time, the bottom and top outliers are ignored before computing a statistical measure from the remaining samples.

The following two methods of computing an aggregate bandwidth value are supported:

- Average—All the aggregate bandwidth samples are considered by the ingress routing device, and then all the outlier samples are removed. The average bandwidth value is computed from the remaining samples to be used during normalization.
- Max—All the aggregate bandwidth samples are considered by the ingress routing device, and then all the outlier samples are removed. The maximum bandwidth value is picked from the remaining samples to be used during normalization.

The time duration, the number of past aggregate samples to store, the percentile value to determine, and the ignore outliers are user-configurable parameters.

Support for NSR, IPG-FA, and Static Routes

IN THIS SECTION

- [NSR Support | 610](#)
- [IPG-FA Support | 611](#)
- [Static Route Support | 612](#)

Starting with Junos OS Release 15.1, container label-switched paths (LSPs) provide support for nonstop active routing (NSR), IGP forwarding adjacency (FA), and static routes to address the requirements of wider business cases.

NSR Support

A container LSP has the characteristics of ECMP and RSVP traffic engineering. Because a container LSP consists of several member LSPs between an ingress and an egress router, with each member LSP taking a different path to the same destination, the ingress router is configured with all the parameters necessary to compute an RSVP ECMP LSP. These parameters along with the forwarding state information have to be synchronized between the master and backup Routing Engines to enable the support for nonstop active routing (NSR) for container LSPs. While some of the forwarding state information on the backup Routing Engine is locally built based on the configuration, most of it is built based on periodic updates from the master Routing Engine. The container LSPs are created dynamically using the replicated states on the backup Routing Engine.

By default, normalization occurs once in every 6 hours and during this time, a number of autobandwidth adjustments happen over each member LSP. A member LSP is resized according to the traffic it carries and the configured autobandwidth configuration parameters. The aggregate demand on a container LSP is tracked by summing up the bandwidth across all the member LSPs.

For RSVP point-to-point LSPs, a Routing Engine switchover can be under any one of the following:

- **Steady state**

In the steady state, the LSP state is up and forwards traffic; however, no other event, such as the make-before-break (MBB), occurs on the LSP. At this stage, the RPD runs on both the Routing Engines, and the switchover event toggles between the master and backup Routing Engine. The backup Routing Engine has the LSP information replicated already. After the switchover, the new master uses the information of the replicated structure to construct the container LSP and en-queues the path (ERO) of LSP in the retrace mode. RSVP signals and checks if the path mentioned in the ERO is reachable. If the RSVP checks fail, then the LSP is restarted. If the RSVP checks succeed, the LSP state remains up.

- **Action leading to make-before-break (MBB)**

A container LSP can be optimized with updated bandwidth, and this change is done in a MBB fashion. During an MBB process, there are two path instances for a given LSP, and the LSP switches from one instance to another. For every Routing Engine switchover, the path is checked to find out where in the MBB process the path is. If the path is in the middle of the MBB process, with the main instance being down and the re-optimized path being up, then MBB can switch over to the new instance. The **show mpls lsp extensive** command output, in this case, is as follows:

```
13 Dec  3 01:33:38.941 Make-before-break: Switched to new instance
12 Dec  3 01:33:37.943 Record Route:  10.1.1.1
11 Dec  3 01:33:37.942 Up
10 Dec  3 01:33:37.942 Automatic Autobw adjustment succeeded: BW changes from
```

```

100 bps to 281669 bps
 9 Dec  3 01:33:37.932 Originate make-before-break call
 8 Dec  3 01:33:37.931 CSPF: computation result accepted 10.1.1.1
 7 Dec  3 01:28:44.228 CSPF: ERO retrace was successful 10.1.1.1
 6 Dec  3 01:19:39.931 10.1.1.2 Down: mbb/reopt
 5 Dec  3 01:18:29.286 Up: mbb/reopt
 4 Dec  3 01:14:47.119 10.1.1.2 Down: mbb/reopt
 3 Dec  3 01:13:29.285 Up: mbb/reopt
 2 Dec  3 01:10:59.755 Selected as active path: selected by master RE

```

A similar behavior is retained for member LSPs during bandwidth optimization.

A Routing Engine switchover under the steady state (when normalization is not in progress), keeps the container LSPs up and running without any traffic loss. Events, such as an MBB due to autobandwidth adjustments, link status being down, or double failure, in the steady state are similar to a normal RSVP point-to-point LSP.

If the container LSP is in the process of normalization, and the normalization event is triggered either manually or periodically, it goes through the computation and execution phase. In either of the cases, zero percent traffic loss is not guaranteed.

- Normalization in the computation phase

During the computation phase, the master Routing Engine calculates the targeted member LSP count and bandwidth with which each member LSP should be re-signaled. The backup Routing Engine has limited information about the container LSP, such as the LSP name, LSP ID, current bandwidth of its member LSP, member LSP count, and the normalization retry count. If the switchover happens during the computation phase, then the backup Routing Engine is not aware of the targeted member LSP count and the bandwidth to be signaled. Since traffic statistics are not copied to the backup Routing Engine, it cannot compute the targeted member count and bandwidth. In this case, the new master Routing Engine uses the old data stored in the targeted member LSP count and the targeted bandwidth to signal the LSPs.

- Normalization in the execution phase

During the execution phase, RSVP of the master Routing Engine tries to signal the LSPs with the newly calculated bandwidth. If the switchover occurs during the signaling of LSPs with greater bandwidth or during LSP splitting or merging, then the new master Routing Engine uses the information of the targeted member count and bandwidth value to be signaled with, to bring up the LSPs.

IPG-FA Support

A forwarding adjacency (FA) is a traffic engineering label-switched path (LSP) that is configured between two nodes and used by an interior gateway protocol (IGP) to forward traffic. By default, an IGP does not consider MPLS traffic-engineering tunnels between sites, for traffic forwarding. Forwarding adjacency treats a traffic engineering LSP tunnel as a link in an IGP topology, thus allowing the nodes in the network

also to forward the IP traffic to reach the destination over this FA LSP. A forwarding adjacency can be created between routing devices regardless of their location in the network.

To advertise a container LSP as an IGP-FA, the LSP name needs to be configured either under IS-IS or OSPF. For example:

IS-IS

```
[edit]
protocols {
  isis {
    label-switched-path container-lsp-name;
  }
}
```

OSPF

```
[edit]
protocols {
  ospf {
    area 0.0.0.0 {
      label-switched-path container-lsp-name;
    }
  }
}
```

NOTE: The IGP-FA is applied to both container LSPs and regular point-to-point LSPs. If a container LSP and a point-to-point LSP share the same name, the point-to-point LSP is given preference for FA.

Static Route Support

Static routes often include only one or very few paths to a destination and generally do not change. These routes are used for stitching services when policies and other protocols are not configured.

To advertise a container LSP as a static route, the LSP name needs to be configured under the static route configuration. For example:

Static Route

```
[edit]
routing-options {
  static {
    route destination {
      lsp-next-hop container-lsp-name;
    }
  }
}
```

NOTE: The static route support is applied to both container LSPs and regular point-to-point LSPs. If a container LSP and a point-to-point LSP share the same name, the point-to-point LSP is given preference for static routing.

Configuration Statements Supported for Container LSPs

Table 21 on page 613 lists the MPLS LSP configuration statements that apply to RSVP LSP and a container LSP (nominal and supplementary).

The configuration support is defined using the following terms:

- Yes—The configuration statement is supported for this type of LSP.
- No—The configuration statement is not supported for this type of LSP.
- N/A—The configuration statement is not applicable for this type of LSP.

Table 21: Applicability of RSVP LSPs Configuration to a Container LSP

Configuration Statement	RSVP LSP (Ingress)	Member LSP (Ingress)
adaptive (Default: non-adaptive)	Yes	Yes
admin-down	Yes	Yes
admin-group	Yes	Yes
admin-groups-except	Yes	Yes
apply-groups	Yes	Yes

Table 21: Applicability of RSVP LSPs Configuration to a Container LSP (*continued*)

Configuration Statement	RSVP LSP (Ingress)	Member LSP (Ingress)
apply-groups-except	Yes	Yes
associate-backup-pe-groups	Yes	No
associate-lsp (No bidirectional support)	Yes	No
auto-bandwidth	Yes	Yes
backup	Yes	No
bandwidth	Yes	Yes
class-of-service	Yes	Yes
corouted-bidirectional (No bidirectional support)	Yes	No
corouted-bidirectional-passive (No bidirectional support)	Yes	No
description	Yes	Yes
disable	Yes	Yes
egress-protection	Yes	No
exclude-srlg	Yes	Yes
fast-reroute (Same fast reroute for all member LSPs)	Yes	Yes
from	Yes	Yes
hop-limit	Yes	Yes
install	Yes	Yes

Table 21: Applicability of RSVP LSPs Configuration to a Container LSP (*continued*)

Configuration Statement	RSVP LSP (Ingress)	Member LSP (Ingress)
inter-domain (Same termination router)	Yes	Yes
secondary (All LSPs are primary)	Yes	No
ldp-tunneling (All LSPs do tunneling)	Yes	Yes
least-fill	Yes	Yes
link-protection (All LSPs share same link protection mechanism)	Yes	Yes
lsp-attributes	Yes	Yes
lsp-external-controller	Yes	No
metric (All LSPs are same)	Yes	Yes
most-fill	Yes	Yes
no-cspf (LSPs use IGP)	Yes	Yes
no-decrement-ttl (All LSPs share same TTL behavior)	Yes	Yes
no-install-to-address	Yes	Yes
no-record	Yes	Yes
node-link-protection (All LSPs share same node-link protection mechanism)	Yes	Yes

Table 21: Applicability of RSVP LSPs Configuration to a Container LSP (*continued*)

Configuration Statement	RSVP LSP (Ingress)	Member LSP (Ingress)
oam	Yes	Yes
optimize-hold-dead-delay (All LSPs have same value)	Yes	Yes
optimize-switchover-delay (All LSPs have same value)	Yes	Yes
optimize-timer (All LSPs have same value)	Yes	Yes
p2mp	Yes	N/A
policing (Variable traffic)	Yes	No
preference	Yes	Yes
primary (All paths are primary)	Yes	No
random	Yes	Yes
record	Yes	Yes
retry-limit (Applicable to members)	Yes	Yes
retry-timer (Applicable to members)	Yes	Yes
revert-timer (No secondary LSP)	Yes	No

Table 21: Applicability of RSVP LSPs Configuration to a Container LSP (*continued*)

Configuration Statement	RSVP LSP (Ingress)	Member LSP (Ingress)
secondary (All LSPs are primary)	Yes	No
soft-preemption	Yes	Yes
standby (All LSPs are standby)	Yes	No
template	Yes	No
to	Yes	Yes
traceoptions	Yes	Yes
ultimate-hop-popping	Yes	Yes

Impact of Configuring Container LSPs on Network Performance

A container LSP is a container LSP that allows multiple member LSPs to co-exist and be managed as a bundle. The member LSPs are similar to independent point-to-point RSVP LSPs. As a result, resource consumption is similar to the sum of resources consumed by each point-to-point RSVP LSP. However, provisioning a container LSP is more efficient, as under-utilized member LSPs are dynamically removed, thus saving memory and CPU resources.

The container LSP features are dependent on the presence of a functional base MPLS RSVP implementation. As a result, a container LSP does not introduce any security considerations beyond the existing considerations for the base MPLS RSVP functionality. The categories of possible attacks and countermeasures are as follows:

- Interaction with processes and router configuration

No new communication mechanisms with external hosts are required for a container LSP. Data arrives at the RSVP module through local software processes and router configuration, other than RSVP neighbor adjacency. Junos OS provides security controls on access to the router and router configuration.

- Communication with external RSVP neighbors

RSVP signaled MPLS LSPs depend on the services of RSVP and IGP to communicate RSVP messages among neighboring routers across the network. Because the RSVP sessions involve communication outside of the local router, they are subject to many forms of attack, such as spoofing of peers, injection

of falsified RSVP messages and route updates, and attacks on the underlying TCP/UDP transport for sessions. Junos OS provides countermeasures for such attack vectors.

- Resource limits and denial of service

Junos OS provides several mechanisms through policers and filters to protect against denial-of-service attacks based on injecting higher than the expected traffic demands. At the MPLS LSP level, Junos OS allows operators to configure limits on the LSP bandwidth and the number of LSPs. However, like point-to-point RSVP LSPs, container LSPs do not enforce limits on the volume of traffic forwarded over these LSPs.

Supported and Unsupported Features

Junos OS supports the following container LSP features:

- Equal-bandwidth-based LSP splitting mechanism
- Aggregate-bandwidth-based LSP splitting and merging in a make-before-break way
- LSP-number-based naming mechanism for dynamically created member LSPs
- Periodic sampling mechanisms to estimate aggregate bandwidth
- Interoperability with auto-bandwidth feature
- ECMP using the dynamically created LSPs
- LDP-tunneling on the dynamically created LSP
- Configuring container LSP using IGP shortcuts
- Aggregated Ethernet links
- Logical systems

Junos OS does **not** support the following container LSP functionality:

- Node and link disjoint paths for different LSPs between an ingress and an egress routing device
- Bandwidth allocation policy different from equal bandwidth policy at the normalization event
- Constraint-based routing path computation to find equal IGP cost paths for different LSPs
- RSVP objects, such as **MLSP_TUNNEL Sender Template**, and **MLSP_TUNNEL Filter Specification** defined in [KOMPELLA-MLSP]
- Change in topology as a trigger for LSP splitting and merging
- Change in topology and link failure as a trigger for normalization, unless member LSPs go down
- Egress protection on container LSP
- Container LSP as a backup LSP for IGP interface
- Container LSP as provider tunnel for multicast VPNs
- Dynamic LSPs for normalization

- CCC using container LSP
- Secondary paths for container LSP
- Bidirectional container LSP
- Policing
- Static routes using container LSPs as next hops on a best-effort basis
- External path computing entity, such as PCE
- Multichassis
- IPv6

Example: Configuring Dynamic Bandwidth Management Using Container LSP

IN THIS SECTION

- Requirements | 619
- Overview | 620
- Configuration | 620
- Verification | 632

This example shows how to enable dynamic bandwidth management by configuring container label-switched paths (LSPs) that enable load balancing across multiple point-to-point member LSPs.

Requirements

This example uses the following hardware and software components:

- Five routers that can be a combination of M Series, MX Series, or T Series routers, out of which two routers are provider edge (PE) routers and three routers are provider (P) routers
- Junos OS Release 14.2 or later running on all the routers

Before you begin:

1. Configure the device interfaces.
2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
 - RSVP
 - MPLS

- BGP
- OSPF

Overview


Starting with Junos OS Release 14.2, a new type of LSP, called a container LSP, is introduced to enable load balancing across multiple point-to-point LSPs. A container LSP includes one or more member LSPs between the same ingress and egress routing devices. The member LSPs are similar to independent point-to-point LSPs, and each member LSP takes a different path to the same destination and can be routed along a different IGP cost path.

A container LSP provides support for dynamic bandwidth management by enabling the ingress router to dynamically add and remove member LSPs through a process called LSP splitting and LSP merging, respectively, based on configuration and aggregate traffic. Besides addition and deletion, member LSPs can also be re-optimized with different bandwidth values in a make-before-break way.

Topology

Figure 47 on page 620 is a sample topology configured with container LSPs.

Figure 47: Dynamic Bandwidth Management Using Container LSP

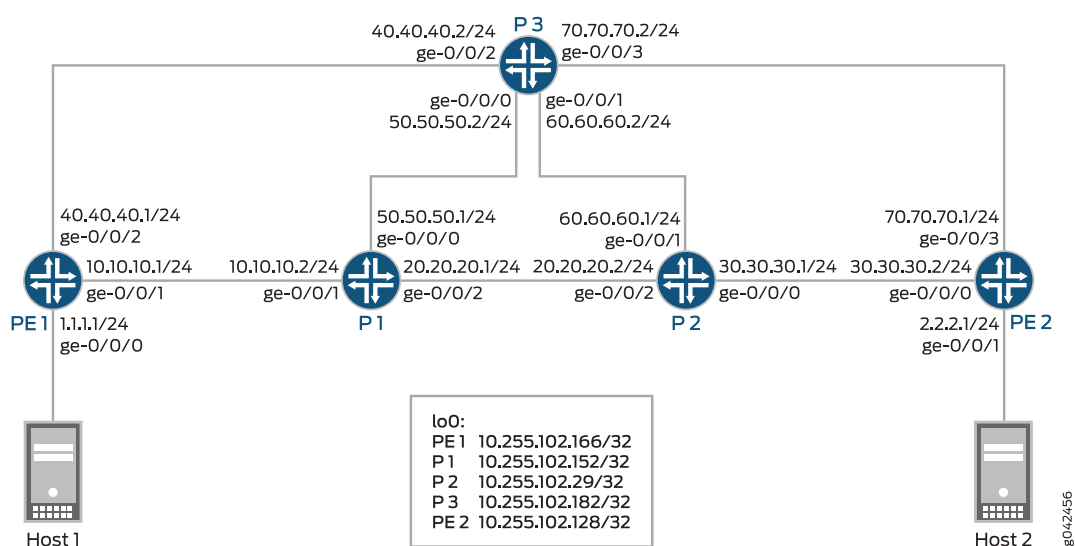

In this example, Routers PE1 and PE2 are the PE routers connected to hosts Host1 and Host2, respectively. The core routers, Routers P1, and P2, and P3 connect to the PE routers.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

PE1

```

set interfaces ge-0/0/0 unit 0 family inet address 1.1.1.1/24
set interfaces ge-0/0/1 unit 0 family inet address 10.10.10.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 40.40.40.1/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.102.166/32
set interfaces lo0 unit 0 family mpls
set routing-options router-id 10.255.102.166
set routing-options autonomous-system 1234
set routing-options forwarding-table export pplib
set protocols rsvp preemption aggressive
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls statistics file auto-bw
set protocols mpls statistics file size 10m
set protocols mpls statistics interval 10
set protocols mpls statistics auto-bandwidth
set protocols mpls label-switched-path PE1-to-PE2-template1 template
set protocols mpls label-switched-path PE1-to-PE2-template1 optimize-timer 30
set protocols mpls label-switched-path PE1-to-PE2-template1 link-protection
set protocols mpls label-switched-path PE1-to-PE2-template1 adaptive
set protocols mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth adjust-interval 300
set protocols mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth adjust-threshold 5
set protocols mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth minimum-bandwidth
    10m
set protocols mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth maximum-bandwidth
    10m
set protocols mpls container-label-switched-path PE1-PE2-container-100 label-switched-path-template
    PE1-to-PE2-template1
set protocols mpls container-label-switched-path PE1-PE2-container-100 to 10.255.102.128
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
    maximum-member-lsps 20
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
    minimum-member-lsps 2

```

```

set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
  splitting-bandwidth 40m
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
  merging-bandwidth 6m
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
  maximum-signaling-bandwidth 10m
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
  minimum-signaling-bandwidth 10m
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
  normalization normalize-interval 400
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
  normalization failover-normalization
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
  normalization normalization-retry-duration 20
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
  normalization normalization-retry-limits 3
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging sampling
  cut-off-threshold 1
set protocols mpls container-label-switched-path PE1-PE2-container-100 splitting-merging sampling
  use-percentile 90
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group to-PE2 type internal
set protocols bgp group to-PE2 local-address 10.255.102.166
set protocols bgp group to-PE2 family inet-vpn unicast
set protocols bgp group to-PE2 export direct
set protocols bgp group to-PE2 neighbor 10.255.102.128
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0 metric 100
set policy-options policy-statement direct term 1 from protocol direct
set policy-options policy-statement direct term 1 then accept
set policy-options policy-statement pplb then load-balance per-packet
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-0/0/0.0
set routing-instances vpn1 route-distinguisher 10.255.102.166:1
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 vrf-table-label

```

```

set interfaces ge-0/0/0 unit 0 family inet address 50.50.50.1/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 10.10.10.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 20.20.20.1/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.102.152/32
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0 metric 100

```

P2

```

set interfaces ge-0/0/0 unit 0 family inet address 30.30.30.1/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 60.60.60.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 20.20.20.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.102.29/32
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols mpls statistics file auto_bw
set protocols mpls statistics file size 10m
set protocols mpls statistics interval 5
set protocols mpls statistics auto-bandwidth
set protocols mpls icmp-tunneling
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 metric 100

```

P3

```

set interfaces ge-0/0/0 unit 0 family inet address 50.50.50.2/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 60.60.60.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 40.40.40.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 70.70.70.2/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.102.182/32
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols mpls icmp-tunneling
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

PE2

```

set interfaces ge-0/0/0 unit 0 family inet address 30.30.30.2/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 2.2.2.1/24
set interfaces ge-0/0/3 unit 0 family inet address 70.70.70.1/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.102.128/32
set interfaces lo0 unit 0 family mpls
set routing-options router-id 10.255.102.128
set routing-options autonomous-system 1234
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group to-PE1 type internal
set protocols bgp group to-PE1 local-address 10.255.102.128
set protocols bgp group to-PE1 family inet-vpn unicast
set protocols bgp group to-PE1 neighbor 10.255.102.166
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```



```

set policy-options policy-statement direct from protocol direct
set policy-options policy-statement direct then accept
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-0/0/1.0
set routing-instances vpn1 route-distinguisher 10.255.102.128:1
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 vrf-table-label

```

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router PE1:

1. Configure the Router PE1 interfaces.

```

[edit interfaces]
user@PE1# set ge-0/0/0 unit 0 family inet address 1.1.1.1/24
user@PE1# set ge-0/0/1 unit 0 family inet address 10.10.10.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 40.40.40.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.102.166/32
user@PE1# set lo0 unit 0 family mpls

```

2. Configure the router ID and autonomous system number for Router PE1.

```

[edit routing-options]
user@PE1# set router-id 10.255.102.166
user@PE1# set autonomous-system 1234

```

3. Enable the policy to load-balance traffic.

```

[edit routing-options]
user@PE1# set forwarding-table export pplb

```

4. Enable RSVP on all Router PE1 interfaces (excluding the management interface).

```
[edit protocols]
user@PE1# set rsvp preemption aggressive
user@PE1# set rsvp interface all aggregate
user@PE1# set rsvp interface fxp0.0 disable
user@PE1# set rsvp interface ge-0/0/1.0
user@PE1# set rsvp interface ge-0/0/2.0
```

5. Enable MPLS on all the interfaces of Router PE1 (excluding the management interface).

```
[edit protocols]
user@PE1# set mpls interface all
user@PE1# set mpls interface fxp0.0 disable
```

6. Configure the MPLS statistics parameters.

```
[edit protocols]
user@PE1# set mpls statistics file auto-bw
user@PE1# set mpls statistics file size 10m
user@PE1# set mpls statistics interval 10
user@PE1# set mpls statistics auto-bandwidth
```

7. Configure the label-switched path (LSP) template parameters.

```
[edit protocols]
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 template
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 optimize-timer 30
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 link-protection
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 adaptive
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth adjust-interval 300
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth adjust-threshold 5
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth minimum-bandwidth 10m
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth maximum-bandwidth 10m
```

8. Configure a container LSP between Router PE1 and Router PE2, and assign the PE1-to-PE2-template1 LSP template.

```
[edit protocols]
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 to 10.255.102.128
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 label-switched-path-template
    PE1-to-PE2-template1
```

9. Configure the container LSP parameters.

```
[edit protocols]
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
maximum-member-lsps 20
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
minimum-member-lsps 2
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
splitting-bandwidth 40m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
merging-bandwidth 6m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
maximum-signaling-bandwidth 10m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
minimum-signaling-bandwidth 10m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging normalization
normalize-interval 400
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging normalization
failover-normalization
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging normalization
normalization-retry-duration 20
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging normalization
normalization-retry-limits 3
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging sampling
cut-off-threshold 1
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging sampling
use-percentile 90
```

10. Configure the BGP group, and assign the local and neighbor IP addresses.

```
[edit protocols]
user@PE1# set bgp group to-PE2 type internal
user@PE1# set bgp group to-PE2 local-address 10.255.102.166
user@PE1# set bgp group to-PE2 neighbor 10.255.102.128
user@PE1# set bgp group to-PE2 family inet-vpn unicast
user@PE1# set bgp group to-PE2 export direct
```

11. Enable OSPF on all the interfaces of Router PE1 (excluding the management interface) along with traffic engineering capabilities.

```
[edit protocols]
user@PE1# set ospf traffic-engineering
user@PE1# set ospf area 0.0.0.0 interface all
```

```
user@PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
user@PE1# set ospf area 0.0.0.0 interface ge-0/0/2.0 metric 100
```

12. Configure the policy statement to load-balance traffic.

```
[edit policy-options]
user@PE1# set policy-statement direct term 1 from protocol direct
user@PE1# set policy-statement direct term 1 then accept
user@PE1# set policy-statement pplb then load-balance per-packet
```

13. Configure a routing instance on Router PE1, and assign the routing instance interface.

```
[edit routing-instances]
user@PE1# set vpn1 instance-type vrf
user@PE1# set vpn1 interface ge-0/0/0.0
```

14. Configure the route distinguisher, vrf target, and vrf-table label values for the VRF routing instance.

```
[edit routing-instances]
user@PE1# set vpn1 route-distinguisher 10.255.102.166:1
user@PE1# set vpn1 vrf-target target:1:1
user@PE1# set vpn1 vrf-table-label
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, **show policy-options**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 1.1.1.1/24;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
```

```

        address 10.10.10.1/24;
    }
    family mpls;
}
}
ge-0/0/2 {
    unit 0 {
        family inet {
            address 40.40.40.1/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.102.166/32;
        }
        family mpls;
    }
}
}

```

```

user@PE1# show routing-options
router-id 10.255.102.166;
autonomous-system 1234;
forwarding-table {
    export pplb;
}

```

```

user@PE1# show protocols
rsvp {
    preemption aggressive;
    interface all {
        aggregate;
    }
    interface fxp0.0 {
        disable;
    }
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
}
mpls {
    statistics {

```

```

    file auto-bw size 10m;
    interval 10;
    auto-bandwidth;
}
label-switched-path PE1-to-PE2-template1 {
    template;
    optimize-timer 30;
    link-protection;
    adaptive;
    auto-bandwidth {
        adjust-interval 300;
        adjust-threshold 5;
        minimum-bandwidth 10m;
        maximum-bandwidth 10m;
    }
}
container-label-switched-path PE1-PE2-container-100 {
    label-switched-path-template {
        PE1-to-PE2-template1;
    }
    to 10.255.102.128;
    splitting-merging {
        maximum-member-lsps 20;
        minimum-member-lsps 2;
        splitting-bandwidth 40m;
        merging-bandwidth 6m;
        maximum-signaling-bandwidth 10m;
        minimum-signaling-bandwidth 10m;
        normalization {
            normalize-interval 400;
            failover-normalization;
            normalization-retry-duration 20;
            normalization-retry-limits 3;
        }
        sampling {
            cut-off-threshold 1;
            use-percentile 90;
        }
    }
}
interface all;
interface fxp0.0 {
    disable;
}

```

```

}
bgp {
  group to-PE2 {
    type internal;
    local-address 10.255.102.166;
    family inet-vpn {
      unicast;
    }
    export direct;
    neighbor 10.255.102.128;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface all;
    interface fxp0.0 {
      disable;
    }
    interface ge-0/0/2.0 {
      metric 100;
    }
  }
}
}

```

user@PE1# show policy-options

```

policy-statement direct {
  term 1 {
    from protocol direct;
    then accept;
  }
}
policy-statement pplb {
  then load-balance {
    per-packet;
  }
}

```

user@PE1# show routing-instances

```

vpn1 {
  instance-type vrf;
  interface ge-0/0/0.0;
  route-distinguisher 10.255.102.166:1;
}

```

```
vrf-target target:1:1;
vrf-table-label;
}
```

Verification

IN THIS SECTION

- [Verifying the Container LSP Status Without Bandwidth | 632](#)
- [Verifying the Container LSP Status with Increased Bandwidth \(Before Normalization\) | 636](#)
- [Verifying the Container LSP Status with Increased Bandwidth \(After Normalization\) | 638](#)
- [Verifying the Container LSP Splitting Process | 643](#)
- [Verifying the Container LSP Statistics | 643](#)
- [Verifying the Container LSP Status with Decreased Bandwidth \(Before Normalization\) | 644](#)
- [Verifying the Container LSP Status with Decreased Bandwidth \(After Normalization\) | 644](#)
- [Verifying the Container LSP Merging Process | 645](#)
- [Verifying Failover Normalization | 646](#)
- [Verifying Incremental Normalization | 647](#)

Confirm that the configuration is working properly.

Verifying the Container LSP Status Without Bandwidth

Purpose

Verify the status of the container LSP.

Action

From operational mode, run the **show mpls container-lsp extensive** command.

```
user@PE1> show mpls container-lsp extensive
```

```
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 2
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 20Mbps, Sampled Aggregate bandwidth: 0bps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
```



```

BW: 6Mbps
Mode: incremental-normalization, failover-normalization
Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
Normalization in 143 second(s)
  36 Jun  5 04:12:17.497 Clear history and statistics: on container
(PE1-PE2-container-100)
  35 Jun  5 04:12:17.497 Avoid normalization: not needed with bandwidth 0 bps
  34 Jun  5 04:05:37.484 Clear history and statistics: on container
(PE1-PE2-container-100)
  33 Jun  5 04:05:37.484 Avoid normalization: not needed with bandwidth 0 bps
  32 Jun  5 03:58:57.470 Clear history and statistics: on container
(PE1-PE2-container-100)
  31 Jun  5 03:58:57.470 Avoid normalization: not needed with bandwidth 0 bps
  30 Jun  5 03:52:17.455 Clear history and statistics: on container
(PE1-PE2-container-100)
  29 Jun  5 03:52:17.455 Avoid normalization: not needed with bandwidth 0 bps
  28 Jun  5 03:45:37.440 Clear history and statistics: on container
(PE1-PE2-container-100)
  27 Jun  5 03:45:37.440 Avoid normalization: not needed with bandwidth 0 bps
  26 Jun  5 03:38:59.013 Normalization complete: container (PE1-PE2-container-100)
with 2 members
  25 Jun  5 03:38:57.423 Delete member LSPs: PE1-PE2-container-100-3 through
PE1-PE2-container-100-7
  24 Jun  5 03:38:57.423 Normalize: container (PE1-PE2-container-100) create 2
LSPs, min bw 10000000bps, member count 7
  23 Jun  5 03:38:57.423 Normalize: normalization with aggregate bandwidth 0 bps

  22 Jun  5 03:32:19.019 Normalization complete: container (PE1-PE2-container-100)
with 7 members
  21 Jun  5 03:32:17.404 Clear history and statistics: on container
(PE1-PE2-container-100)
  20 Jun  5 03:32:17.403 Normalize: container (PE1-PE2-container-100) into 7
members - each with bandwidth 10000000 bps
  19 Jun  5 03:32:17.403 Normalize: normalization with aggregate bandwidth 62914560
bps
  18 Jun  5 03:32:17.403 Normalize: normalizaton with 62914560 bps
  17 Jun  5 03:32:09.219 Normalization complete: container (PE1-PE2-container-100)
with 7 members
  16 Jun  5 03:32:07.600 Clear history and statistics: on container
(PE1-PE2-container-100)
  15 Jun  5 03:32:07.600 Normalize: container (PE1-PE2-container-100) into 7
members - each with bandwidth 10000000 bps
  14 Jun  5 03:32:07.599 Normalize: normalization with aggregate bandwidth 62914560
bps

```

```

13 Jun  5 03:32:07.599 Normalize: normalizaton with 62914560 bps
12 Jun  5 03:26:57.295 Clear history and statistics: on container
(PE1-PE2-container-100)
11 Jun  5 03:26:57.295 Avoid normalization: not needed with bandwidth 0 bps
10 Jun  5 03:20:18.297 Normalization complete: container (PE1-PE2-container-100)
with 2 members
9 Jun  5 03:20:17.281 Normalize: container (PE1-PE2-container-100) create 2
LSPs, min bw 10000000bps, member count 0
8 Jun  5 03:20:17.281 Normalize: normalization with aggregate bandwidth 0 bps

7 Jun  5 03:17:43.218 Clear history and statistics: on container
(PE1-PE2-container-100)
6 Jun  5 03:17:43.218 Avoid normalization: not needed with bandwidth 0 bps
5 Jun  5 03:17:43.212 Normalize: container (PE1-PE2-container-100) received
PathErr on member PE1-PE2-container-100-2
4 Jun  5 03:17:43.212 Normalize: container (PE1-PE2-container-100) received
PathErr on member PE1-PE2-container-100-1
3 Jun  5 03:12:47.323 Normalization complete: container (PE1-PE2-container-100)
with 2 members
2 Jun  5 03:12:16.555 Normalize: container (PE1-PE2-container-100) create 2
LSPs, min bw 10000000bps, member count 0
1 Jun  5 03:12:16.555 Normalize: normalization with aggregate bandwidth 0 bps

10.255.102.128
From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-1

ActivePath: (primary)
LSPTtype: Dynamic Configured, Penultimate hop popping
LoadBalance: Random
Autobandwidth
MinBW: 10Mbps, MaxBW: 10Mbps
AdjustTimer: 300 secs
Max AvgBW util: 0bps, Bandwidth Adjustment in 12 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up
Priorities: 7 0
Bandwidth: 10Mbps
SmartOptimizeTimer: 180
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):

```

```

10.10.10.2 20.20.20.2 30.30.30.2
17 Jun  5 03:38:59.013 Make-before-break: Switched to new instance
16 Jun  5 03:38:58.003 Record Route:  10.10.10.2 20.20.20.2 30.30.30.2
15 Jun  5 03:38:58.003 Up
14 Jun  5 03:38:57.423 Originate make-before-break call
13 Jun  5 03:38:57.423 CSPF: computation result accepted  10.10.10.2 20.20.20.2
30.30.30.2
12 Jun  5 03:33:30.400 CSPF: computation result ignored, new path no benefit
11 Jun  5 03:32:17.403 Pending old path instance deletion
10 Jun  5 03:32:09.218 Make-before-break: Switched to new instance
 9 Jun  5 03:32:08.202 Record Route:  10.10.10.2 20.20.20.2 30.30.30.2
 8 Jun  5 03:32:08.202 Up
 7 Jun  5 03:32:07.603 Originate make-before-break call
 6 Jun  5 03:32:07.603 CSPF: computation result accepted  10.10.10.2 20.20.20.2
30.30.30.2
 5 Jun  5 03:20:18.278 Selected as active path
 4 Jun  5 03:20:18.277 Record Route:  10.10.10.2 20.20.20.2 30.30.30.2
 3 Jun  5 03:20:18.277 Up
 2 Jun  5 03:20:17.281 Originate Call
 1 Jun  5 03:20:17.281 CSPF: computation result accepted  10.10.10.2 20.20.20.2
30.30.30.2
Created: Thu Jun  5 03:20:16 2014

10.255.102.128
From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-2

ActivePath:  (primary)
LSPTtype: Dynamic Configured, Penultimate hop popping
LoadBalance: Random
Autobandwidth
MinBW: 10Mbps, MaxBW: 10Mbps
AdjustTimer: 300 secs
Max AvgBW util: 0bps, Bandwidth Adjustment in 76 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  Bandwidth: 10Mbps
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):

```

```

10.10.10.2 20.20.20.2 30.30.30.2
17 Jun  5 03:38:59.013 Make-before-break: Switched to new instance
16 Jun  5 03:38:58.002 Record Route:  10.10.10.2 20.20.20.2 30.30.30.2
15 Jun  5 03:38:58.002 Up
14 Jun  5 03:38:57.423 Originate make-before-break call
13 Jun  5 03:38:57.423 CSPF: computation result accepted  10.10.10.2 20.20.20.2
30.30.30.2
12 Jun  5 03:33:26.189 CSPF: computation result ignored, new path no benefit
11 Jun  5 03:32:17.403 Pending old path instance deletion
10 Jun  5 03:32:09.219 Make-before-break: Switched to new instance
 9 Jun  5 03:32:08.204 Record Route:  10.10.10.2 20.20.20.2 30.30.30.2
 8 Jun  5 03:32:08.204 Up
 7 Jun  5 03:32:07.603 Originate make-before-break call
 6 Jun  5 03:32:07.603 CSPF: computation result accepted  10.10.10.2 20.20.20.2
30.30.30.2
 5 Jun  5 03:20:18.297 Selected as active path
 4 Jun  5 03:20:18.295 Record Route:  10.10.10.2 20.20.20.2 30.30.30.2
 3 Jun  5 03:20:18.295 Up
 2 Jun  5 03:20:17.281 Originate Call
 1 Jun  5 03:20:17.281 CSPF: computation result accepted  10.10.10.2 20.20.20.2
30.30.30.2
Created: Thu Jun  5 03:20:16 2014
Total 2 displayed, Up 2, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The container LSP is established between Routers PE1 and PE2.

Verifying the Container LSP Status with Increased Bandwidth (Before Normalization)

Purpose

Verify the status of the container LSP with increased bandwidth before normalization happens.

Action

From operational mode, run the **show mpls container-lsp extensive** command.

```
user@PE1> show mpls container-lsp extensive
```

```

Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 2
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 20Mbps, Sampled Aggregate bandwidth: 42.6984Mbps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 321 second(s)
    3 Jun  5 21:22:34.731 Normalization complete: container (PE1-PE2-container-100)
    with 2 members
    2 Jun  5 21:22:15.503 Normalize: container (PE1-PE2-container-100) create 2
    LSPs, min bw 10000000bps, member count 0
    1 Jun  5 21:22:15.503 Normalize: normalization with aggregate bandwidth 0 bps

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-1

  ActivePath: (primary)
  Link protection desired
  LSPTtype: Dynamic Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 10Mbps, MaxBW: 10Mbps
  AdjustTimer: 300 secs AdjustThreshold: 5%
  Max AvgBW util: 23.9893Mbps, Bandwidth Adjustment in 221 second(s).
  Overflow limit: 0, Overflow sample count: 6
  Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  Bandwidth: 10Mbps
  OptimizeTimer: 30
  SmartOptimizeTimer: 180
  Reoptimization in 9 second(s).
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.255.102.166(flag=0x20) 10.10.10.2(Label=303440)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302144) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

```

```

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-2

  ActivePath: (primary)
  Link protection desired
  LSPTtype: Dynamic Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 10Mbps, MaxBW: 10Mbps
  AdjustTimer: 300 secs AdjustThreshold: 5%
  Max AvgBW util: 22.1438Mbps, Bandwidth Adjustment in 221 second(s).
  Overflow limit: 0, Overflow sample count: 6
  Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  Bandwidth: 10Mbps
  OptimizeTimer: 30
  SmartOptimizeTimer: 180
  Reoptimization in 9 second(s).
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.255.102.166(flag=0x20) 10.10.10.2(Label=303456)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302160) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

Total 2 displayed, Up 2, Down 0

```

Meaning

Because normalization has not happened, the member LSP count remains at 2.

Verifying the Container LSP Status with Increased Bandwidth (After Normalization)

Purpose

Verify the status of the container LSP with increased bandwidth after normalization happens.

Action

From operational mode, run the **show mpls container-lsp extensive** command.

```
user@PE1> show mpls container-lsp extensive
```

```

Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 5
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 50Mbps, Sampled Aggregate bandwidth: 45.8873Mbps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 169 second(s)
    7 Jun  5 21:29:02.921 Normalization complete: container (PE1-PE2-container-100)
    with 5 members
    6 Jun  5 21:28:55.505 Clear history and statistics: on container
    (PE1-PE2-container-100)
    5 Jun  5 21:28:55.505 Normalize: container (PE1-PE2-container-100) into 5
    members - each with bandwidth 10000000 bps
    4 Jun  5 21:28:55.504 Normalize: normalization with aggregate bandwidth 45281580
    bps
    3 Jun  5 21:22:34.731 Normalization complete: container (PE1-PE2-container-100)
    with 2 members
    2 Jun  5 21:22:15.503 Normalize: container (PE1-PE2-container-100) create 2
    LSPs, min bw 10000000bps, member count 0
    1 Jun  5 21:22:15.503 Normalize: normalization with aggregate bandwidth 0 bps

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-1

  ActivePath: (primary)
  Link protection desired
  LSPtype: Dynamic Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 10Mbps, MaxBW: 10Mbps
  AdjustTimer: 300 secs AdjustThreshold: 5%
  Max AvgBW util: 11.0724Mbps, Bandwidth Adjustment in 129 second(s).
  Overflow limit: 0, Overflow sample count: 1
  Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    OptimizeTimer: 30
    SmartOptimizeTimer: 180

```

```

    Reoptimization in 12 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
        10.255.102.166(flag=0x20) 10.10.10.2(Label=303488)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302224) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

10.255.102.128
    From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-2

    ActivePath: (primary)
    Link protection desired
    LSPTtype: Dynamic Configured, Penultimate hop popping
    LoadBalance: Random
    Autobandwidth
    MinBW: 10Mbps, MaxBW: 10Mbps
    AdjustTimer: 300 secs AdjustThreshold: 5%
    Max AvgBW util: 8.50751Mbps, Bandwidth Adjustment in 189 second(s).
    Overflow limit: 0, Overflow sample count: 0
    Underflow limit: 0, Underflow sample count: 11, Underflow Max AvgBW: 8.50751Mbps

    Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    OptimizeTimer: 30
    SmartOptimizeTimer: 180
    Reoptimization in 6 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
        10.255.102.166(flag=0x20) 10.10.10.2(Label=303504)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302240) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

10.255.102.128
    From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-3

    ActivePath: (primary)
    Link protection desired
    LSPTtype: Dynamic Configured, Penultimate hop popping

```



```

LoadBalance: Random
Autobandwidth
MinBW: 10Mbps, MaxBW: 10Mbps
AdjustTimer: 300 secs AdjustThreshold: 5%
Max AvgBW util: 9.59422Mbps, Bandwidth Adjustment in 249 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 5, Underflow Max AvgBW: 9.59422Mbps

Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    OptimizeTimer: 30
    SmartOptimizeTimer: 180
    Reoptimization in 25 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
        10.255.102.166(flag=0x20) 10.10.10.2(Label=303472)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302176) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

10.255.102.128
From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-4

ActivePath: (primary)
Link protection desired
LSPTtype: Dynamic Configured, Penultimate hop popping
LoadBalance: Random
Autobandwidth
MinBW: 10Mbps, MaxBW: 10Mbps
AdjustTimer: 300 secs AdjustThreshold: 5%
Max AvgBW util: 9.16169Mbps, Bandwidth Adjustment in 9 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 29, Underflow Max AvgBW: 9.16169Mbps

Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    OptimizeTimer: 30
    SmartOptimizeTimer: 180
    Reoptimization in 1 second(s).

```

```

    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
        10.255.102.166(flag=0x20) 10.10.10.2(Label=303520)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302192) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

10.255.102.128
    From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-5

    ActivePath: (primary)
    Link protection desired
    LSPTYPE: Dynamic Configured, Penultimate hop popping
    LoadBalance: Random
    Autobandwidth
    MinBW: 10Mbps, MaxBW: 10Mbps
    AdjustTimer: 300 secs AdjustThreshold: 5%
    Max AvgBW util: 8.39908Mbps, Bandwidth Adjustment in 69 second(s).
    Overflow limit: 0, Overflow sample count: 0
    Underflow limit: 0, Underflow sample count: 23, Underflow Max AvgBW: 8.39908Mbps

    Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    OptimizeTimer: 30
    SmartOptimizeTimer: 180
    Reoptimization in 17 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
        10.255.102.166(flag=0x20) 10.10.10.2(Label=303536)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302208) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)
Total 5 displayed, Up 5, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

At the expiry of the normalization timer, the container LSP is split into five member LSPs, each with 10 Mbps (minimum and maximum signaling bandwidth). As a result, the aggregate bandwidth is 50 Mbps.

Verifying the Container LSP Splitting Process

Purpose

Verify the container LSP splitting process after normalization happens.

Action

From operational mode, run the **show route 2.2.2** command.

```
user@PE1> show route 2.2.2
```

```
vpn1.inet.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2.2.2.0/24          *[BGP/170] 00:12:14, localpref 100, from 10.255.102.128
                    AS path: I, validation-state: unverified
>to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-1
to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-2
to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-3
to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-4
to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-5
```

Meaning

After LSP splitting, Router PE1 has injected the forwarding adjacency.

Verifying the Container LSP Statistics

Purpose

Verify the container LSP statistics after normalization happens.

Action

From operational mode, run the **show mpls container-lsp statistics** command.

```
user@PE1> show mpls container-lsp statistics
```

```
Ingress LSP: 1 sessions
Container LSP name          State      Member LSP count
PE1-PE2-container-100      Up         5
To          From          State    Packets    Bytes LSPname
10.255.102.128  10.255.102.166 Up    15166271   2062612856
```

```

PE1-PE2-container-100-1
10.255.102.128  10.255.102.166  Up    12289912      1671428032
PE1-PE2-container-100-2
10.255.102.128  10.255.102.166  Up    13866911      1885899896
PE1-PE2-container-100-3
10.255.102.128  10.255.102.166  Up    12558707      1707984152
PE1-PE2-container-100-4
10.255.102.128  10.255.102.166  Up    11512151      1565652536
PE1-PE2-container-100-5

```

Meaning

Traffic is load-balanced across the newly created member LSPs.

Verifying the Container LSP Status with Decreased Bandwidth (Before Normalization)

Purpose

Verify the status of the container LSP with decreased bandwidth before normalization happens.

Action

From operational mode, run the **show mpls container-lsp detail** command.

```
user@PE1> show mpls container-lsp detail
```

```

Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 5
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 50Mbps, Sampled Aggregate bandwidth: 2.0215Mbps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 384 second(s)
---Output truncated---

```

Meaning

Because normalization has not happened, the member LSP count remains at 5.

Verifying the Container LSP Status with Decreased Bandwidth (After Normalization)

Purpose

Verify the status of the container LSP with decreased bandwidth after normalization happens.

Action

From operational mode, run the **show mpls container-lsp detail** command.

```
user@PE1> show mpls container-lsp detail
```

```
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 2
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 20Mbps, Sampled Aggregate bandwidth: 0bps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 397 second(s)
    22 Jun  5 22:30:37.094 Clear history and statistics: on container
    (PE1-PE2-container-100)
    21 Jun  5 22:30:37.094 Delete member LSPs: PE1-PE2-container-100-3 through
    PE1-PE2-container-100-5
    20 Jun  5 22:30:37.090 Normalize: container (PE1-PE2-container-100) into 2
    members - each with bandwidth 10000000 bps
    19 Jun  5 22:30:37.090 Normalize: normalization with aggregate bandwidth 2037595
    bps
    18 Jun  5 22:30:37.090 Normalize: normalizaton with 2037595 bps
    ---Output truncated---
```

Meaning

At the expiry of the normalization timer, the container LSP merging takes place because there is an overall reduction in bandwidth. The member LSPs are merged, and the member LSP count is 2 after normalization.

Verifying the Container LSP Merging Process

Purpose

Verify the container LSP splitting process after normalization happens.

Action

From operational mode, run the **show route 2.2.2** command.

```
user@PE1> show route 2.2.2
```

```

vpn1.inet.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2.2.2.0/24          *[BGP/170] 01:09:45, localpref 100, from 10.255.102.128
                    AS path: I, validation-state: unverified
                    > to 10.10.10.2 via ge-0/0/1.0, label-switched-path
PE1-PE2-container-100-1
                    to 10.10.10.2 via ge-0/0/1.0, label-switched-path
PE1-PE2-container-100-2

```

Meaning

After LSP merging, Router PE1 has deleted the merged member LSPs.

Verifying Failover Normalization

Purpose

Verify load redistribution when traffic is sent at 35 Mbps and the link between Routers P1 and P2 is disabled. Arrival of PathErr on link failure triggers immediate normalization.

To enable failover normalization, include the **failover-normalization** configuration statement at the **[edit protocols mpls container-label-switched-path container-lsp-name splitting-merging normalization]** hierarchy level.

Action

From operational mode, run the **show mpls container-lsp** command.

```
user@PE1> show mpls container-lsp
```

```

Ingress LSP: 1 sessions
Container LSP name          State      Member LSP count
PE1-PE2-container-100      Up         2
To          From          State Rt P    ActivePath    LSPname
10.255.102.128  10.255.102.166 Up    0 *
PE1-PE2-container-100-1
10.255.102.128  10.255.102.166 Up    0 *
PE1-PE2-container-100-2
Total 2 displayed, Up 2, Down 0

```

After the ge-0/0/2 link between Routers P1 and P2 goes down, normalization is immediately triggered.

From operational mode, run the **show mpls container-lsp detail** command.

```
user@PE1> show mpls container-lsp detail
```

```

Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 4
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 40Mbps, Sampled Aggregate bandwidth: 34.5538Mbps
  NormalizeTimer: 3000 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 2970 second(s)
  11 Jun 5 19:28:27.564 Normalization complete: container (PE1-PE2-container-100)
  with 4 members
  10 Jun 5 19:28:20.315 Normalize: container (PE1-PE2-container-100) received PathErr on member
  PE1-PE2-container-100-2[2 times]
  9 Jun 5 19:28:20.315 Normalize: container (PE1-PE2-container-100) received
  PathErr on member PE1-PE2-container-100-1[2 times]
  8 Jun 5 19:28:20.311 Clear history and statistics: on container
  (PE1-PE2-container-100)
  7 Jun 5 19:28:20.311 Normalize: container (PE1-PE2-container-100) into 4 members
  - each with bandwidth 10000000 bps
  6 Jun 5 19:28:20.311 Normalize: normalization with aggregate bandwidth 33665020
  bps
  5 Jun 5 19:28:20.308 Normalize: container (PE1-PE2-container-100) received
  PathErr on member PE1-PE2-container-100-2
  4 Jun 5 19:28:20.308 Normalize: container (PE1-PE2-container-100) received
  PathErr on member PE1-PE2-container-100-1
  3 Jun 5 19:27:48.574 Normalization complete: container (PE1-PE2-container-100)
  with 2 members
  2 Jun 5 19:27:28.644 Normalize: container (PE1-PE2-container-100) create 2
  LSPs, min bw 10000000bps, member count 0
  1 Jun 5 19:27:28.644 Normalize: normalization with aggregate bandwidth 0 bps
  ----Output truncated----

```

Meaning

Arrival of PathErr message on link failure triggers immediate normalization.

Verifying Incremental Normalization

Purpose

Verify incremental normalization when enough bandwidth is not available.

On Router PE1, the RSVP interfaces static bandwidth is restricted to 22 Mbps each.

Action

From operational mode, run the **show rsvp interface** command.

```
user@PE1> show rsvp interface
```

```

RSVP interface: 4 active
      Active Subscr-  Static
Interface  State resv  iption  BW      Available  Reserved  Highwater
          ge-0/0/2.0  Up        0   100%  22Mbps   22Mbps    0bps      21.4031Mbps
          ge-0/0/1.0  Up        2   100%  22Mbps   12Mbps    10Mbps    21.7011Mbps

```

Before normalization happens:

From operational mode, run the **show mpls container-lsp** command.

```
user@PE1> show mpls container-lsp
```

```

Ingress LSP: 1 sessions
Container LSP name                State      Member LSP count
PE1-PE2-container-100            Up          2
To          From          State Rt P    ActivePath      LSPname
10.255.102.128  10.255.102.166  Up    0  *
PE1-PE2-container-100-1
10.255.102.128  10.255.102.166  Up    0  *
PE1-PE2-container-100-2

```

After normalization happens:

From operational mode, run the **show mpls container-lsp** command.

```
user@PE1> show mpls container-lsp
```

```

Ingress LSP: 1 sessions
Container LSP name                State      Member LSP count
PE1-PE2-container-100            Up          7
To          From          State Rt P    ActivePath      LSPname
10.255.102.128  10.255.102.166  Up    0  *    PE1-PE2-container-100-1
10.255.102.128  10.255.102.166  Up    0  *    PE1-PE2-container-100-2
10.255.102.128  10.255.102.166  Up    0  *    PE1-PE2-container-100-3
10.255.102.128  10.255.102.166  Up    0  *    PE1-PE2-container-100-4
10.255.102.128  10.255.102.166  Up    0  *    PE1-PE2-container-100-5
10.255.102.128  10.255.102.166  Up    0  *    PE1-PE2-container-100-6

```



```
10.255.102.128  0.0.0.0      Dn      0      -      PE1-PE2-container-100-7
Total 7 displayed, Up 6, Down 1
```

From operational mode, run the **show mpls container-lsp detail** command.

```
user@PE1> show mpls container-lsp detail
```

```
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 7
Normalization
Min LSPs: 2, Max LSPs: 10
Aggregate bandwidth: 40.8326Mbps, Sampled Aggregate bandwidth: 50.129Mbps
NormalizeTimer: 9000 secs, NormalizeThreshold: 10%
Max Signaling BW: 10Mbps, Min Signaling BW: 5Mbps, Splitting BW: 40Mbps, Merging
BW: 5Mbps
Mode: incremental-normalization, failover-normalization
Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
Normalization in 8072 second(s)
10 Jun 5 18:40:17.812 Normalization complete: container (PE1-PE2-container-100)
with 7 members, retry-limit reached
9 Jun 5 18:40:08.028 Normalize: container (PE1-PE2-container-100) for target
member count 7, member bandwidth 6805439 bps
8 Jun 5 18:39:58.301 Normalize: container (PE1-PE2-container-100) for target
member count 6, member bandwidth 7939679 bps
7 Jun 5 18:39:48.470 Clear history and statistics: on container
(PE1-PE2-container-100)
6 Jun 5 18:39:48.470 Normalize: container (PE1-PE2-container-100) into 5 members
- each with bandwidth 9527615 bps
5 Jun 5 18:39:48.469 Normalize: normalization with aggregate bandwidth 47638076
bps
4 Jun 5 18:39:48.469 Normalize: normalizaton with 47638076 bps
3 Jun 5 18:39:09.471 Normalization complete: container (PE1-PE2-container-100)
with 2 members
2 Jun 5 18:38:59.822 Normalize: container (PE1-PE2-container-100) create 2
LSPs, min bw 5000000bps, member count 0
1 Jun 5 18:38:59.822 Normalize: normalization with aggregate bandwidth 0 bps
```

Meaning

After normalization, the aggregate bandwidth after three retries is 40.8326 Mbps.

Configuring Dynamic Bandwidth Management Using Container LSP

You can configure a container LSP to enable load balancing across multiple point-to-point LSPs dynamically. A container LSP includes one or more member LSPs between the same ingress and egress routing devices. The member LSPs are similar to independent point-to-point LSPs, and each member LSP takes a different path to the same destination and can be routed along a different IGP cost path.

A container LSP provides support for dynamic bandwidth management by enabling the ingress router to dynamically add and remove member LSPs through a process called LSP splitting and LSP merging, respectively, based on configuration and aggregate traffic. Besides addition and deletion, member LSPs can also be re-optimized with different bandwidth values in a make-before-break way.

Before you begin:

1. Configure the device interfaces.
2. Configure the device router ID and autonomous system number.
3. Configure the following protocols:
 - RSVP
 - BGP
 - Configure a BGP group to peer device with remote provider edge (PE) device.
 - OSPF
 - Enable traffic engineering capabilities.
4. Configure a VRF routing instance.

To configure the PE device:

1. Enable MPLS on all the interfaces (excluding the management interface).

```
[edit protocols]
user@PE1# set mpls interface all
user@PE1# set mpls interface fxp0.0 disable
```

2. Configure the MPLS statistics parameters.

```
[edit protocols]
user@PE1# set mpls statistics file file-name
user@PE1# set mpls statistics file size size
user@PE1# set mpls statistics interval seconds
user@PE1# set mpls statistics auto-bandwidth
```

3. Configure the label-switched path (LSP) template parameters.

```
[edit protocols]
user@PE1# set mpls label-switched-path template-name template
user@PE1# set mpls label-switched-path template-name optimize-timer seconds
user@PE1# set mpls label-switched-path template-name link-protection
user@PE1# set mpls label-switched-path template-name adaptive
user@PE1# set mpls label-switched-path template-name auto-bandwidth adjust-interval seconds
user@PE1# set mpls label-switched-path template-name auto-bandwidth adjust-threshold seconds
user@PE1# set mpls label-switched-path template-name auto-bandwidth minimum-bandwidth mbps
user@PE1# set mpls label-switched-path template-name auto-bandwidth maximum-bandwidth mbps
```

4. Configure a container LSP between the two PE routers, and assign the LSP template.

```
[edit protocols]
user@PE1# set mpls container-label-switched-path container-lsp-name to remote-PE-ip-address
user@PE1# set mpls container-label-switched-path container-lsp-name label-switched-path-template
template-name
```

5. Configure the container LSP parameters.

```
[edit protocols]
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging
    maximum-member-lsps number
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging
    minimum-member-lsps number
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging splitting-bandwidth
    mbps
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging merging-bandwidth
    mbps
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging
    maximum-signaling-bandwidth mbps
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging
    minimum-signaling-bandwidth mbps
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging normalization
    normalize-interval seconds
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging normalization
    failover-normalization
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging normalization
    normalization-retry-duration seconds
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging normalization
    normalization-retry-limits number
```

```

user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging sampling
cut-off-threshold number
user@PE1# set mpls container-label-switched-path container-lsp-name splitting-merging sampling
use-percentile number

```

6. Configure the policy statement to load-balance traffic.

```

[edit policy-options]
user@PE1# set policy-statement first-policy-name term 1 from protocol direct
user@PE1# set policy-statement first-policy-name term 1 then accept
user@PE1# set policy-statement second-policy-name then load-balance per-packet

```

NOTE: The policy to load-balance traffic should be assigned to the forwarding table configuration under the [edit routing-options] hierarchy level.

```

user@PE1# set forwarding-table export pplb

```

7. Verify and commit the configuration.

For example:

```

[edit protocols]
user@PE1# set rsvp preemption aggressive
user@PE1# set rsvp interface all aggregate
user@PE1# set rsvp interface fxp0.0 disable
user@PE1# set rsvp interface ge-0/0/1.0
user@PE1# set rsvp interface ge-0/0/2.0
user@PE1# set mpls statistics file auto-bw
user@PE1# set mpls statistics file size 10m
user@PE1# set mpls statistics interval 10
user@PE1# set mpls statistics auto-bandwidth
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 template
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 optimize-timer 30
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 link-protection
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 adaptive
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth adjust-interval 300
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth adjust-threshold 5
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth minimum-bandwidth 10m
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth maximum-bandwidth 10m

```

```

user@PE1# set mpls label-switched-path PE1-PE2-template-1 template
user@PE1# set mpls label-switched-path PE1-PE2-template-1 auto-bandwidth adjust-interval 8000
user@PE1# set mpls label-switched-path PE1-PE2-template-1 auto-bandwidth minimum-bandwidth 5m
user@PE1# set mpls label-switched-path PE1-PE2-template-1 auto-bandwidth maximum-bandwidth 10m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 label-switched-path-template
    PE1-to-PE2-template1
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 to 10.255.102.128
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
    maximum-member-lsps 20
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
    minimum-member-lsps 2
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
    splitting-bandwidth 40m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
    merging-bandwidth 6m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
    maximum-signaling-bandwidth 10m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging
    minimum-signaling-bandwidth 10m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging normalization
    normalize-interval 400
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging normalization
    failover-normalization
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging normalization
    normalization-retry-duration 20
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging normalization
    normalization-retry-limits 3
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging sampling
    cut-off-threshold 1
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 splitting-merging sampling
    use-percentile 90
user@PE1# set mpls interface all
user@PE1# set mpls interface fxp0.0 disable
user@PE1# set bgp group to-PE2 type internal
user@PE1# set bgp group to-PE2 local-address 10.255.102.166
user@PE1# set bgp group to-PE2 family inet-vpn unicast
user@PE1# set bgp group to-PE2 export direct
user@PE1# set bgp group to-PE2 neighbor 10.255.102.128
user@PE1# set ospf traffic-engineering
user@PE1# set ospf area 0.0.0.0 interface all
user@PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
user@PE1# set ospf area 0.0.0.0 interface ge-0/0/2.0 metric 100

```

[edit policy-options]

```

user@PE1# set policy-statement direct term 1 from protocol direct
user@PE1# set policy-statement direct term 1 then accept
user@PE1# set policy-statement pplb then load-balance per-packet

```

```

[edit]
user@PE1# commit
commit complete

```

RELATED DOCUMENTATION

[MPLS Overview](#) | 2

Multiclass LSP Configuration

IN THIS SECTION

- [Multiclass LSP Overview](#) | 654
- [Multiclass LSPs](#) | 655
- [Establishing a Multiclass LSP on the Differentiated Services Domain](#) | 655

Multiclass LSP Overview

A multiclass LSP is an LSP that can carry several class types. One multiclass LSP can be used to support up to four class types. On the packets, the class type is specified by the EXP bits (also known as the class-of-service bits) and the per-hop behavior (PHB) associated with the EXP bits. The mapping between the EXP bits and the PHB is static, rather than being signaled in RSVP.

Once a multiclass LSP is configured, traffic from all of the class types can:

- Follow the same path
- Be rerouted along the same path
- Be taken down at the same time

Class types must be configured consistently across the Differentiated Services domain, meaning the class type configuration must be consistent from router to router in the network.

You can unambiguously map a class type to a queue. On each node router, the CoS queue configuration for an interface translates to the available bandwidth for a particular class type on that link.

The combination of a class type and a priority level forms a traffic engineering class. The IGPs can advertise up to eight traffic engineering classes for each link.

For more information about the EXP bits, see [“MPLS Label Allocation” on page 421](#).

For more information about forwarding classes, see the *Class of Service User Guide (Routers and EX9200 Switches)*.

Multiclass LSPs

Multiclass LSPs function like standard LSPs, but they also allow you to configure multiple class types with guaranteed bandwidth. The EXP bits of the MPLS header are used to distinguish between class types. Multiclass LSPs can be configured for a variety of purposes. For example, you can configure a multiclass LSP to emulate the behavior of an ATM circuit. An ATM circuit can provide service-level guarantees to a class type. A multiclass LSP can provide a similar guaranteed level of service.

The following sections discuss multiclass LSPs:

- [Multiclass LSP Overview on page 654](#)
- [Establishing a Multiclass LSP on the Differentiated Services Domain on page 655](#)

Establishing a Multiclass LSP on the Differentiated Services Domain

The following occurs when a multiclass LSP is established on the differentiated services domain:

1. The IGPs advertise how much unreserved bandwidth is available for the traffic engineering classes.
2. When calculating the path for a multiclass LSP, CSPF is used to ensure that the constraints are met for all the class types carried by the multiclass LSP (a set of constraints instead of a single constraint).
3. Once a path is found, RSVP signals the LSP using an RSVP object in the path message. At each node in the path, the available bandwidth for the class types is adjusted as the path is set up. The RSVP object is a hop-by-hop object. Multiclass LSPs cannot be established through routers that do not understand this object. Preventing routers that do not understand the RSVP object from carrying traffic helps to ensure consistency throughout the differentiated services domain by preventing the multiclass LSP from using a router that is incapable of supporting differentiated services.

By default, multiclass LSPs are signaled with setup priority 7 and holding priority 0. A multiclass LSP configured with these values cannot preempt another LSP at setup time and cannot be preempted.

It is possible to have both multiclass LSPs and regular LSPs configured at the same time on the same physical interfaces. For this type of heterogeneous environment, regular LSPs carry best-effort traffic by default. Traffic carried in the regular LSPs must have the correct EXP settings.

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | 36

Point-to-Multipoint LSP Configuration

IN THIS SECTION

- [Point-to-Multipoint LSPs Overview](#) | 656
- [Understanding Point-to-Multipoint LSPs](#) | 658
- [Point-to-Multipoint LSP Configuration Overview](#) | 660
- [Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP](#) | 660
- [Configuring Primary and Branch LSPs for Point-to-Multipoint LSPs](#) | 685
- [Configuring Inter-Domain Point-to-Multipoint LSPs](#) | 687
- [Configuring Link Protection for Point-to-Multipoint LSPs](#) | 689
- [Configuring Graceful Restart for Point-to-Multipoint LSPs](#) | 689
- [Configuring a Multicast RPF Check Policy for Point-to-Multipoint LSPs](#) | 690
- [Configuring Ingress PE Router Redundancy for Point-to-Multipoint LSPs](#) | 691
- [Enabling Point-to-Point LSPs to Monitor Egress PE Routers](#) | 692
- [Preserving Point-to-Multipoint LSP Functioning with Different Junos OS Releases](#) | 693

Point-to-Multipoint LSPs Overview


A point-to-multipoint MPLS LSP is an LSP with a single source and multiple destinations. By taking advantage of the MPLS packet replication capability of the network, point-to-multipoint LSPs avoid unnecessary packet replication at the ingress router. Packet replication takes place only when packets are forwarded to two or more different destinations requiring different network paths.

This process is illustrated in [Figure 48 on page 657](#). Router PE1 is configured with a point-to-multipoint LSP to Routers PE2, PE3, and PE4. When Router PE1 sends a packet on the point-to-multipoint LSP to

Routers P1 and P2, Router P1 replicates the packet and forwards it to Routers PE2 and PE3. Router P2 sends the packet to Router PE4.

This feature is described in detail in the Internet drafts draft-raggarwa-mpls-p2mp-te-02.txt (expired February 2004), *Establishing Point to Multipoint MPLS TE LSPs*, draft-ietf-mpls-rsvp-te-p2mp-02.txt, *Extensions to Resource Reservation Protocol-Traffic Engineering (RSVP-TE) for Point-to-Multipoint TE Label-Switched Paths (LSPs)*, and RFC 6388, *Label Distribution Protocol Extensions for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths* (only point-to-multipoint LSPs are supported).

Figure 48: Point-to-Multipoint LSPs

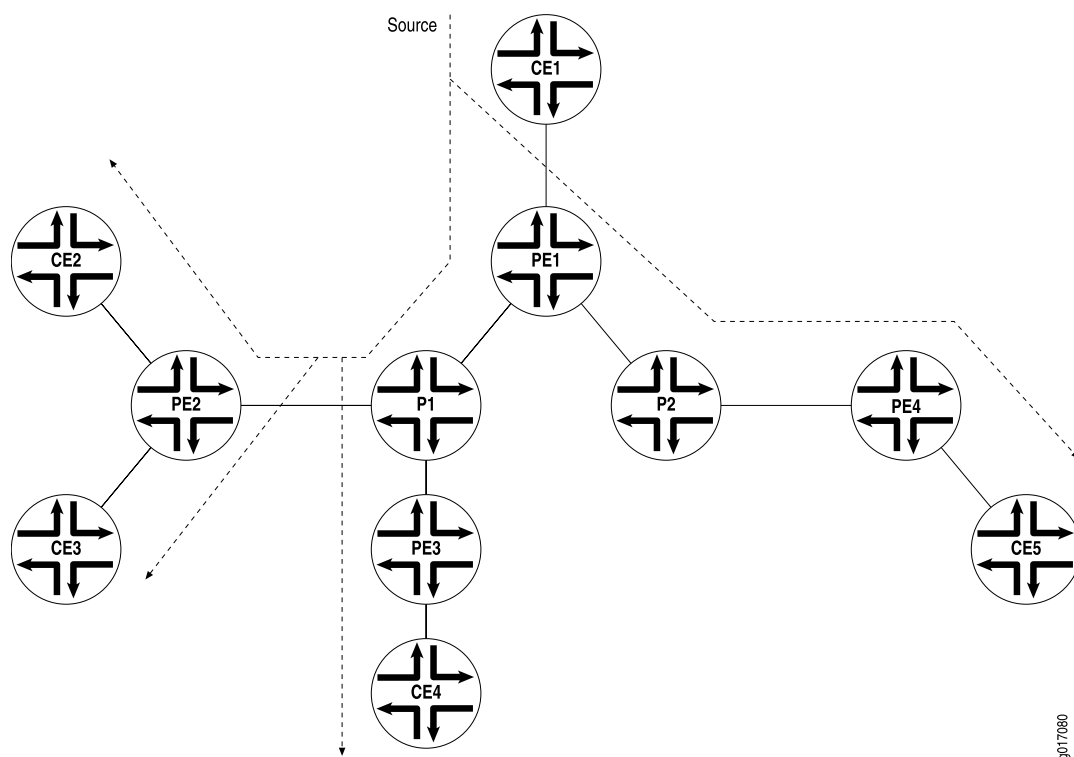

The following are some of the properties of point-to-multipoint LSPs:

- A point-to-multipoint LSP enables you to use MPLS for point-to-multipoint data distribution. This functionality is similar to that provided by IP multicast.
- You can add and remove branch LSPs from a main point-to-multipoint LSP without disrupting traffic. The unaffected parts of the point-to-multipoint LSP continue to function normally.
- You can configure a node to be both a transit and an egress router for different branch LSPs of the same point-to-multipoint LSP.
- You can enable link protection on a point-to-multipoint LSP. Link protection can provide a bypass LSP for each of the branch LSPs that make up the point-to-multipoint LSP. If any of the primary paths fail, traffic can be quickly switched to the bypass.


- You can configure branch LSPs either statically, dynamically, or as a combination of static and dynamic LSPs.
- You can enable graceful Routing Engine switchover (GRES) and graceful restart for point-to-multipoint LSPs at ingress and egress routers. The point-to-multipoint LSPs must be configured using either static routes or circuit cross-connect (CCC). GRES and graceful restart allow the traffic to be forwarded at the Packet Forwarding Engine based on the old state while the control plane recovers. Feature parity for GRES and graceful restart for MPLS point-to-multipoint LSPs on the Junos Trio chipset is supported in Junos OS Releases 11.1R2, 11.2R2, and 11.4.

Understanding Point-to-Multipoint LSPs

A point-to-multipoint MPLS label-switched path (LSP) is an LDP-signaled or RSVP-signaled LSP with a single source and multiple destinations. By taking advantage of the MPLS packet replication capability of the network, point-to-multipoint LSPs avoid unnecessary packet replication at the inbound (ingress) router. Packet replication takes place only when packets are forwarded to two or more different destinations requiring different network paths.

This process is illustrated in [Figure 49 on page 659](#). Device PE1 is configured with a point-to-multipoint LSP to Routers PE2, PE3, and PE4. When Device PE1 sends a packet on the point-to-multipoint LSP to Routers P1 and P2, Device P1 replicates the packet and forwards it to Routers PE2 and PE3. Device P2 sends the packet to Device PE4.

Figure 49: Point-to-Multipoint LSPs

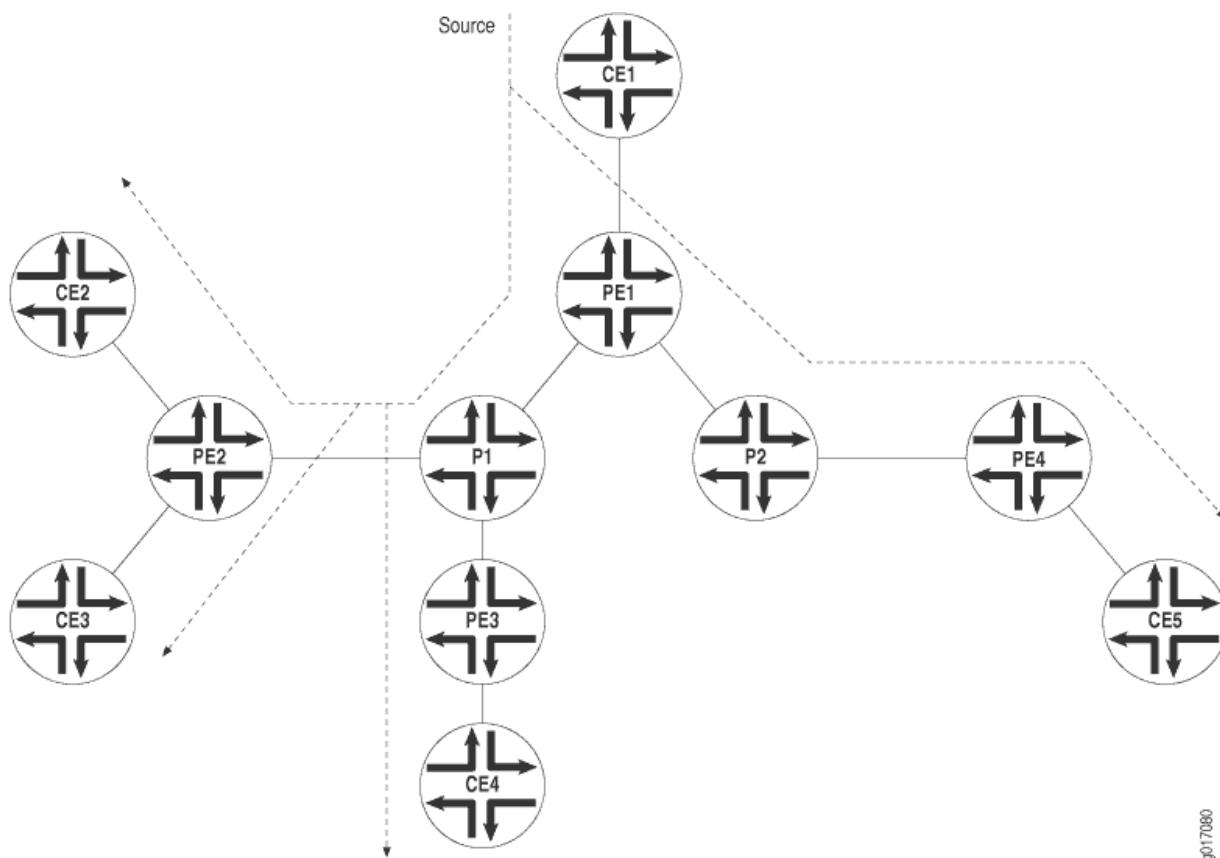

Following are some of the properties of point-to-multipoint LSPs:

- A point-to-multipoint LSP allows you to use MPLS for point-to-multipoint data distribution. This functionality is similar to that provided by IP multicast.
- You can add and remove branch LSPs from a main point-to-multipoint LSP without disrupting traffic. The unaffected parts of the point-to-multipoint LSP continue to function normally.
- You can configure a node to be both a transit and an outbound (egress) router for different branch LSPs of the same point-to-multipoint LSP.
- You can enable link protection on a point-to-multipoint LSP. Link protection can provide a bypass LSP for each of the branch LSPs that make up the point-to-multipoint LSP. If any primary paths fail, traffic can be quickly switched to the bypass.
- You can configure subpaths either statically or dynamically.
- You can enable graceful restart on point-to-multipoint LSPs.

Point-to-Multipoint LSP Configuration Overview

To set up a point-to-multipoint LSP:

1. Configure the primary LSP from the ingress router and the branch LSPs that carry traffic to the egress routers.
2. Specify a pathname on the primary LSP and this same path name on each branch LSP.

NOTE: By default, the branch LSPs are dynamically signaled by means of Constrained Shortest Path First (CSPF) and require no configuration. You can alternatively configure the branch LSPs as static paths.

Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP

IN THIS SECTION

- Requirements | 660
- Overview | 660
- Configuration | 661
- Verification | 683

This example shows how to configure a collection of paths to create an RSVP-signaled point-to-multipoint label-switched path (LSP).

Requirements

In this example, no special configuration beyond device initialization is required.

Overview

In this example, multiple routing devices serve as the transit, branch, and leaf nodes of a single point-to-multipoint LSP. On the provider edge (PE), Device PE1 is the ingress node. The branches go from PE1 to PE2, PE1 to PE3, and PE1 to PE4. Static unicast routes on the ingress node (PE1) point to the egress nodes.


This example also demonstrates static routes with a next hop that is a point-to-multipoint LSP, using the [p2mp-lsp-next-hop](#) statement. This is useful when implementing filter-based forwarding.

NOTE: Another option is to use the **lsp-next-hop** statement to configure a regular point-to-point LSP to be the next hop. Though not shown in this example, you can optionally assign an independent preference and metric to the next hop.

Topology Diagram

Figure 50 on page 661 shows the topology used in this example.

Figure 50: RSVP-Signaled Point-to-Multipoint LSP

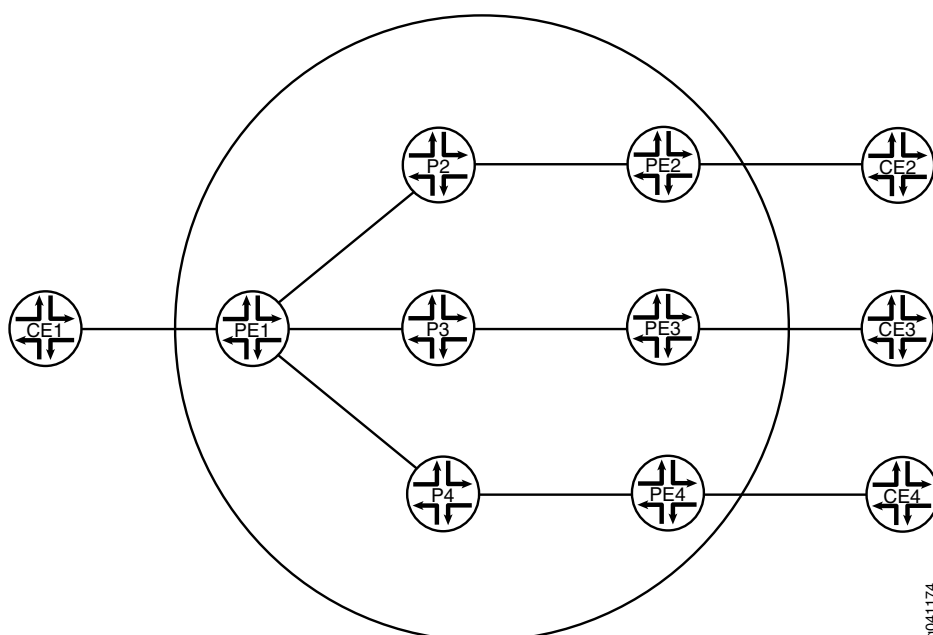

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Device PE1

```
set interfaces ge-2/0/2 unit 0 description PE1-to-CE1
set interfaces ge-2/0/2 unit 0 family inet address 10.0.244.10/30
set interfaces fe-2/0/10 unit 1 description PE1-to-P2
set interfaces fe-2/0/10 unit 1 family inet address 2.2.2.1/24
```

```

set interfaces fe-2/0/10 unit 1 family mpls
set interfaces fe-2/0/9 unit 8 description PE1-to-P3
set interfaces fe-2/0/9 unit 8 family inet address 6.6.6.1/24
set interfaces fe-2/0/9 unit 8 family mpls
set interfaces fe-2/0/8 unit 9 description PE1-to-P4
set interfaces fe-2/0/8 unit 9 family inet address 3.3.3.1/24
set interfaces fe-2/0/8 unit 9 family mpls
set interfaces lo0 unit 1 family inet address 100.10.10.10/32
set protocols rsvp interface fe-2/0/10.1
set protocols rsvp interface fe-2/0/9.8
set protocols rsvp interface fe-2/0/8.9
set protocols rsvp interface lo0.1
set protocols mpls traffic-engineering bgp-igp
set protocols mpls label-switched-path PE1-PE2 to 100.50.50.50
set protocols mpls label-switched-path PE1-PE2 link-protection
set protocols mpls label-switched-path PE1-PE2 p2mp p2mp1
set protocols mpls label-switched-path PE1-PE3 to 100.70.70.70
set protocols mpls label-switched-path PE1-PE3 link-protection
set protocols mpls label-switched-path PE1-PE3 p2mp p2mp1
set protocols mpls label-switched-path PE1-PE4 to 100.40.40.40
set protocols mpls label-switched-path PE1-PE4 link-protection
set protocols mpls label-switched-path PE1-PE4 p2mp p2mp1
set protocols mpls interface fe-2/0/10.1
set protocols mpls interface fe-2/0/9.8
set protocols mpls interface fe-2/0/8.9
set protocols mpls interface lo0.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-2/0/2.0
set protocols ospf area 0.0.0.0 interface fe-2/0/10.1
set protocols ospf area 0.0.0.0 interface fe-2/0/9.8
set protocols ospf area 0.0.0.0 interface fe-2/0/8.9
set protocols ospf area 0.0.0.0 interface lo0.1
set routing-options static route 5.5.5.0/24 p2mp-lsp-next-hop p2mp1
set routing-options static route 7.7.7.0/24 p2mp-lsp-next-hop p2mp1
set routing-options static route 4.4.4.0/24 p2mp-lsp-next-hop p2mp1
set routing-options router-id 100.10.10.10

```

Device CE1

```

set interfaces ge-1/3/2 unit 0 family inet address 10.0.244.9/30

```

```

set interfaces ge-1/3/2 unit 0 description CE1-to-PE1
set routing-options static route 10.0.104.8/30 next-hop 10.0.244.10
set routing-options static route 10.0.134.8/30 next-hop 10.0.244.10
set routing-options static route 10.0.224.8/30 next-hop 10.0.244.10

```

Device CE2

```

set interfaces ge-1/3/3 unit 0 family inet address 10.0.224.9/30
set interfaces ge-1/3/3 unit 0 description CE2-to-PE2
set routing-options static route 10.0.244.8/30 next-hop 10.0.224.10

```

Device CE3

```

set interfaces ge-2/0/1 unit 0 family inet address 10.0.134.9/30
set interfaces ge-2/0/1 unit 0 description CE3-to-PE3
set routing-options static route 10.0.244.8/30 next-hop 10.0.134.10

```

Device CE4

```

set interfaces ge-3/1/3 unit 0 family inet address 10.0.104.10/30
set interfaces ge-3/1/3 unit 0 description CE4-to-PE4
set routing-options static route 10.0.244.8/30 next-hop 10.0.104.9

```

Configuring the Ingress Label-Switched Router (LSR) (Device PE1)

Step-by-Step Procedure

To configure Device PE1:

1. Configure the interfaces, interface encapsulation, and protocol families.

```

[edit interfaces]
user@PE1# set ge-2/0/2 unit 0 description PE1-to-CE1
user@PE1# set ge-2/0/2 unit 0 family inet address 10.0.244.10/30
user@PE1# set fe-2/0/10 unit 1 description PE1-to-P2

```

```

user@PE1# set fe-2/0/10 unit 1 family inet address 2.2.2.1/24
user@PE1# set fe-2/0/10 unit 1 family mpls
user@PE1# set fe-2/0/9 unit 8 description PE1-to-P3
user@PE1# set fe-2/0/9 unit 8 family inet address 6.6.6.1/24
user@PE1# set fe-2/0/9 unit 8 family mpls
user@PE1# set fe-2/0/8 unit 9 description PE1-to-P4
user@PE1# set fe-2/0/8 unit 9 family inet address 3.3.3.1/24
user@PE1# set fe-2/0/8 unit 9 family mpls
user@PE1# set lo0 unit 1 family inet address 100.10.10.10/32

```

2. Enable RSVP, MPLS, and OSPF on the interfaces.

```

[edit protocols]
user@PE1# set rsvp interface fe-2/0/10.1
user@PE1# set rsvp interface fe-2/0/9.8
user@PE1# set rsvp interface fe-2/0/8.9
user@PE1# set rsvp interface lo0.1
user@PE1# set mpls interface fe-2/0/10.1
user@PE1# set mpls interface fe-2/0/9.8
user@PE1# set mpls interface fe-2/0/8.9
user@PE1# set mpls interface lo0.1
user@PE1# set ospf area 0.0.0.0 interface ge-2/0/2.0
user@PE1# set ospf area 0.0.0.0 interface fe-2/0/10.1
user@PE1# set ospf area 0.0.0.0 interface fe-2/0/9.8
user@PE1# set ospf area 0.0.0.0 interface fe-2/0/8.9
user@PE1# set ospf area 0.0.0.0 interface lo0.1

```

3. Configure the MPLS point-to-multipoint LSPs.

```

[edit protocols]
user@PE1# set mpls label-switched-path PE1-PE2 to 100.50.50.50
user@PE1# set mpls label-switched-path PE1-PE2 p2mp p2mp1
user@PE1# set mpls label-switched-path PE1-PE3 to 100.70.70.70
user@PE1# set mpls label-switched-path PE1-PE3 p2mp p2mp1
user@PE1# set mpls label-switched-path PE1-PE4 to 100.40.40.40
user@PE1# set mpls label-switched-path PE1-PE4 p2mp p2mp1

```

4. (Optional) Enable link protection on the LSPs.

Link protection helps to ensure that traffic sent over a specific interface to a neighboring router can continue to reach the router if that interface fails.


```
[edit protocols]
user@PE1# set mpls label-switched-path PE1-PE2 link-protection
user@PE1# set mpls label-switched-path PE1-PE3 link-protection
user@PE1# set mpls label-switched-path PE1-PE4 link-protection
```

5. Enable MPLS to perform traffic engineering for OSPF.

```
[edit protocols]
user@PE1# set mpls traffic-engineering bgp-igp
```

This causes the ingress routes to be installed in the inet.0 routing table. By default, MPLS performs traffic engineering for BGP only. You need to enable MPLS traffic engineering on the ingress LSR only.

6. Enable traffic engineering for OSPF.

```
[edit protocols]
user@PE1# set ospf traffic-engineering
```

This causes the shortest-path first (SPF) algorithm to take into account the LSPs configured under MPLS.

7. Configure the router ID.

```
[edit routing-options]
user@PE1# set router-id 100.10.10.10
```

8. Configure static IP unicast routes with the point-to-multipoint LSP name as the next hop for each route.

```
[edit routing-options]
user@PE1# set static route 5.5.5.0/24 p2mp-lsp-next-hop p2mp1
user@PE1# set static route 7.7.7.0/24 p2mp-lsp-next-hop p2mp1
user@PE1# set static route 4.4.4.0/24 p2mp-lsp-next-hop p2mp1
```

9. If you are done configuring the device, commit the configuration.

```
[edit]
user@PE1# commit
```

Configuring the Transit and Egress LSRs (Devices P2, P3, P4, PE2, PE3, and PE4)

Step-by-Step Procedure

To configure the transit and egress LSRs:

1. Configure the interfaces, interface encapsulation, and protocol families.

```
[edit]
user@P2# set interfaces fe-2/0/10 unit 2 description P2-to-PE1
user@P2# set interfaces fe-2/0/10 unit 2 family inet address 2.2.2.2/24
user@P2# set interfaces fe-2/0/10 unit 2 family mpls
user@P2# set interfaces fe-2/0/9 unit 10 description P2-to-PE2
user@P2# set interfaces fe-2/0/9 unit 10 family inet address 5.5.5.1/24
user@P2# set interfaces fe-2/0/9 unit 10 family mpls
user@P2# set interfaces lo0 unit 2 family inet address 100.20.20.20/32
user@PE2# set interfaces ge-2/0/3 unit 0 description PE2-to-CE2
user@PE2# set interfaces ge-2/0/3 unit 0 family inet address 10.0.224.10/30
user@PE2# set interfaces fe-2/0/10 unit 5 description PE2-to-P2
user@PE2# set interfaces fe-2/0/10 unit 5 family inet address 5.5.5.2/24
user@PE2# set interfaces fe-2/0/10 unit 5 family mpls
user@PE2# set interfaces lo0 unit 5 family inet address 100.50.50.50/32
user@P3# set interfaces fe-2/0/10 unit 6 description P3-to-PE1
user@P3# set interfaces fe-2/0/10 unit 6 family inet address 6.6.6.2/24
user@P3# set interfaces fe-2/0/10 unit 6 family mpls
user@P3# set interfaces fe-2/0/9 unit 11 description P3-to-PE3
user@P3# set interfaces fe-2/0/9 unit 11 family inet address 7.7.7.1/24
user@P3# set interfaces fe-2/0/9 unit 11 family mpls
user@P3# set interfaces lo0 unit 6 family inet address 100.60.60.60/32
user@PE3# set interfaces ge-2/0/1 unit 0 description PE3-to-CE3
user@PE3# set interfaces ge-2/0/1 unit 0 family inet address 10.0.134.10/30
user@PE3# set interfaces fe-2/0/10 unit 7 description PE3-to-P3
user@PE3# set interfaces fe-2/0/10 unit 7 family inet address 7.7.7.2/24
user@PE3# set interfaces fe-2/0/10 unit 7 family mpls
user@PE3# set interfaces lo0 unit 7 family inet address 100.70.70.70/32
user@P4# set interfaces fe-2/0/10 unit 3 description P4-to-PE1
user@P4# set interfaces fe-2/0/10 unit 3 family inet address 3.3.3.2/24
user@P4# set interfaces fe-2/0/10 unit 3 family mpls
user@P4# set interfaces fe-2/0/9 unit 12 description P4-to-PE4
user@P4# set interfaces fe-2/0/9 unit 12 family inet address 4.4.4.1/24
user@P4# set interfaces fe-2/0/9 unit 12 family mpls
user@P4# set interfaces lo0 unit 3 family inet address 100.30.30.30/32
user@PE4# set interfaces ge-2/0/0 unit 0 description PE4-to-CE4
user@PE4# set interfaces ge-2/0/0 unit 0 family inet address 10.0.104.9/30
user@PE4# set interfaces fe-2/0/10 unit 4 description PE4-to-P4
user@PE4# set interfaces fe-2/0/10 unit 4 family inet address 4.4.4.2/24
```

```

user@PE4# set interfaces fe-2/0/10 unit 4 family mpls
user@PE4# set interfaces lo0 unit 4 family inet address 100.40.40.40/32

```

2. Enable RSVP, MPLS, and OSPF on the interfaces.

```

[edit]
user@P2# set protocols rsvp interface fe-2/0/10.2
user@P2# set protocols rsvp interface fe-2/0/9.10
user@P2# set protocols rsvp interface lo0.2
user@P2# set protocols mpls interface fe-2/0/10.2
user@P2# set protocols mpls interface fe-2/0/9.10
user@P2# set protocols mpls interface lo0.2
user@P2# set protocols ospf area 0.0.0.0 interface fe-2/0/10.2
user@P2# set protocols ospf area 0.0.0.0 interface fe-2/0/9.10
user@P2# set protocols ospf area 0.0.0.0 interface lo0.2
user@PE2# set protocols rsvp interface fe-2/0/10.5
user@PE2# set protocols rsvp interface lo0.5
user@PE2# set protocols mpls interface fe-2/0/10.5
user@PE2# set protocols mpls interface lo0.5
user@PE2# set protocols ospf area 0.0.0.0 interface ge-2/0/3.0
user@PE2# set protocols ospf area 0.0.0.0 interface fe-2/0/10.5
user@PE2# set protocols ospf area 0.0.0.0 interface lo0.5
user@P3# set protocols rsvp interface fe-2/0/10.6
user@P3# set protocols rsvp interface fe-2/0/9.11
user@P3# set protocols rsvp interface lo0.6
user@P3# set protocols mpls interface fe-2/0/10.6
user@P3# set protocols mpls interface fe-2/0/9.11
user@P3# set protocols mpls interface lo0.6
user@P3# set protocols ospf area 0.0.0.0 interface fe-2/0/10.6
user@P3# set protocols ospf area 0.0.0.0 interface fe-2/0/9.11
user@P3# set protocols ospf area 0.0.0.0 interface lo0.6
user@PE3# set protocols rsvp interface fe-2/0/10.7
user@PE3# set protocols rsvp interface lo0.7
user@PE3# set protocols mpls interface fe-2/0/10.7
user@PE3# set protocols mpls interface lo0.7
user@PE3# set protocols ospf area 0.0.0.0 interface ge-2/0/1.0
user@PE3# set protocols ospf area 0.0.0.0 interface fe-2/0/10.7
user@PE3# set protocols ospf area 0.0.0.0 interface lo0.7
user@P4# set protocols rsvp interface fe-2/0/10.3
user@P4# set protocols rsvp interface fe-2/0/9.12
user@P4# set protocols rsvp interface lo0.3
user@P4# set protocols mpls interface fe-2/0/10.3
user@P4# set protocols mpls interface fe-2/0/9.12

```

```

user@P4# set protocols mpls interface lo0.3
user@P4# set protocols ospf area 0.0.0.0 interface fe-2/0/10.3
user@P4# set protocols ospf area 0.0.0.0 interface fe-2/0/9.12
user@P4# set protocols ospf area 0.0.0.0 interface lo0.3
user@PE4# set protocols rsvp interface fe-2/0/10.4
user@PE4# set protocols rsvp interface lo0.4
user@PE4# set protocols mpls interface fe-2/0/10.4
user@PE4# set protocols mpls interface lo0.4
user@PE4# set protocols ospf area 0.0.0.0 interface ge-2/0/0.0
user@PE4# set protocols ospf area 0.0.0.0 interface fe-2/0/10.4
user@PE4# set protocols ospf area 0.0.0.0 interface lo0.4

```

3. Enable traffic engineering for OSPF.

```

[edit]
user@P2# set protocols ospf traffic-engineering
user@P3# set protocols ospf traffic-engineering
user@P4# set protocols ospf traffic-engineering
user@PE2# set protocols ospf traffic-engineering
user@PE3# set protocols ospf traffic-engineering
user@PE4# set protocols ospf traffic-engineering

```

This causes the shortest-path first (SPF) algorithm to take into account the LSPs configured under MPLS.

4. Configure the router IDs.

```

[edit]
user@P2# set routing-options router-id 100.20.20.20
user@P3# set routing-options router-id 100.60.60.60
user@P4# set routing-options router-id 100.30.30.30
user@PE2# set routing-options router-id 100.50.50.50
user@PE3# set routing-options router-id 100.70.70.70
user@PE4# set routing-options router-id 100.40.40.40

```

5. If you are done configuring the devices, commit the configuration.

```

[edit]
user@host# commit

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

Device PE1

```
user@PE1# show interfaces
ge-2/0/2 {
  unit 0 {
    description R1-to-CE1;
    family inet {
      address 10.0.244.10/30;
    }
  }
}
fe-2/0/10 {
  unit 1 {
    description PE1-to-P2;
    family inet {
      address 2.2.2.1/24;
    }
    family mpls;
  }
}
fe-2/0/9 {
  unit 8 {
    description PE1-to-P2;
    family inet {
      address 6.6.6.1/24;
    }
    family mpls;
  }
}
fe-2/0/8 {
  unit 9 {
    description PE1-to-P3;
    family inet {
      address 3.3.3.1/24;
    }
    family mpls;
  }
}
```

```

}
lo0 {
  unit 1 {
    family inet {
      address 100.10.10.10/32;
    }
  }
}
}

```

user@PE1# **show protocols**

```

rsvp {
  interface fe-2/0/10.1;
  interface fe-2/0/9.8;
  interface fe-2/0/8.9;
  interface lo0.1;
}
mpls {
  traffic-engineering bgp-igp;
  label-switched-path PE1-to-PE2 {
    to 100.50.50.50;
    link-protection;
    p2mp p2mp1;
  }
  label-switched-path PE1-to-PE3 {
    to 100.70.70.70;
    link-protection;
    p2mp p2mp1;
  }
  label-switched-path PE1-to-PE4 {
    to 100.40.40.40;
    link-protection;
    p2mp p2mp1;
  }
  interface fe-2/0/10.1;
  interface fe-2/0/9.8;
  interface fe-2/0/8.9;
  interface lo0.1;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {

```

```

interface ge-2/0/2.0;
interface fe-2/0/10.1;
interface fe-2/0/9.8;
interface fe-2/0/8.9;
interface lo0.1;
}
}

```

```

user@PE1# show routing-options
static {
  route 5.5.5.0/24 {
    p2mp-lsp-next-hop p2mp1;
  }
  route 7.7.7.0/24 {
    p2mp-lsp-next-hop p2mp1;
  }
  route 4.4.4.0/24 {
    p2mp-lsp-next-hop p2mp1;
  }
}
router-id 100.10.10.10;

```

Device P2

```

user@P2# show interfaces
fe-2/0/10 {
  unit 2 {
    description P2-to-PE1;
    family inet {
      address 2.2.2.2/24;
    }
    family mpls;
  }
fe-2/0/9 {
  unit 10 {
    description P2-to-PE2;
    family inet {
      address 5.5.5.1/24;
    }
    family mpls;
  }
}

```

```

    }
    lo0 {
        unit 2 {
            family inet {
                address 100.20.20.20/32;
            }
        }
    }
}

```

user@P2# **show protocols**

```

rsvp {
    interface fe-2/0/10.2;
    interface fe-2/0/9.10;
    interface lo0.2;
}
mpls {
    interface fe-2/0/10.2;
    interface fe-2/0/9.10;
    interface lo0.2;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fe-2/0/10.2;
        interface fe-2/0/9.10;
        interface lo0.2;
    }
}

```

user@P2# **show routing-options**

```

router-id 100.20.20.20;

```

Device P3

user@P3# **show interfaces**

```

fe-2/0/10 {
    unit 6 {
        description P3-to-PE1;
    }
}

```



```

        family inet {
            address 6.6.6.2/24;
        }
        family mpls;
    }
}
fe-2/0/9 {
    unit 11 {
        description P3-to-PE3;
        family inet {
            address 7.7.7.1/24;
        }
        family mpls;
    }
}
lo0 {
    unit 6 {
        family inet {
            address 100.60.60.60/32;
        }
    }
}
}

```

user@P3# **show protocols**

```

rsvp {
    interface fe-2/0/10.6;
    interface fe-2/0/9.11;
    interface lo0.6;
}
mpls {
    interface fe-2/0/10.6;
    interface fe-2/0/9.11;
    interface lo0.6;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fe-2/0/10.6;
        interface fe-2/0/9.11;
        interface lo0.6;
    }
}

```

```
}
```

```
user@P2# show routing-options
router-id 100.60.60.60;
```

Device P4

```
user@P4# show interfaces
fe-2/0/10 {
  unit 3 {
    description P4-to-PE1;
    family inet {
      address 3.3.3.2/24;
    }
    family mpls;
  }
}
fe-2/0/9 {
  unit 12 {
    description P4-to-PE4;
    family inet {
      address 4.4.4.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 3 {
    family inet {
      address 100.30.30.30/32;
    }
  }
}
```

```
user@P4# show protocols
rsvp {
  interface fe-2/0/10.3;
  interface fe-2/0/9.12;
  interface lo0.3;
}
```

```

mpls {
    interface fe-2/0/10.3;
    interface fe-2/0/9.12;
    interface lo0.3;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fe-2/0/10.3;
        interface fe-2/0/9.12;
        interface lo0.3;
    }
}

```

```

user@P3# show routing-options
router-id 100.30.30.30;

```

Device PE2

```

user@PE2# show interfaces
ge-2/0/3 {
    unit 0 {
        description PE2-to-CE2;
        family inet {
            address 10.0.224.10/30;
        }
    }
}
fe-2/0/10 {
    unit 5 {
        description PE2-to-P2;
        family inet {
            address 5.5.5.2/24;
        }
        family mpls;
    }
}
lo0 {
    unit 5 {
        family inet {
            address 100.50.50.50/32;
        }
    }
}

```

```

    }
  }
}
}

```

user@PE2# show protocols

```

rsvp {
  interface fe-2/0/10.5;
  interface lo0.5;
}
mpls {
  interface fe-2/0/10.5;
  interface lo0.5;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-2/0/3.0;
    interface fe-2/0/10.5;
    interface lo0.5;
  }
}

```

user@PE2# show routing-options

```

router-id 100.50.50.50;

```

Device PE3

user@PE3# show interfaces

```

ge-2/0/1 {
  unit 0 {
    description PE3-to-CE3;
    family inet {
      address 10.0.134.10/30;
    }
  }
}
fe-2/0/10 {

```

```

        unit 7 {
            description PE3-to-P3;
            family inet {
                address 7.7.7.2/24;
            }
            family mpls;
        }
    }
    lo0 {
        unit 7 {
            family inet {
                address 100.70.70.70/32;
            }
        }
    }
}

```

user@PE3# show protocols

```

rsvp {
    interface fe-2/0/10.7;
    interface lo0.7;
}
mpls {
    interface fe-2/0/10.7;
    interface lo0.7;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-2/0/1.0;
        interface fe-2/0/10.7;
        interface lo0.7;
    }
}

```

user@PE3# show routing-options

```

router-id 100.70.70.70;

```

Device PE4

```

user@PE4# show interfaces
ge-2/0/0 {
  unit 0 {
    description PE4-to-CE4;
    family inet {
      address 10.0.104.9/30;
    }
  }
}
fe-2/0/10 {
  unit 4 {
    description PE4-to-P4;
    family inet {
      address 4.4.4.2/24;
    }
    family mpls;
  }
}
lo0 {
  unit 4 {
    family inet {
      address 100.40.40.40/32;
    }
  }
}
}

```

```

user@PE4# show protocols
rsvp {
  interface fe-2/0/10.4;
  interface lo0.4;
}
mpls {
  interface fe-2/0/10.4;
  interface lo0.4;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-2/0/0.0;
    interface fe-2/0/10.4;
  }
}

```

```

    interface lo0.4;
  }
}

```

```

user@PE4# show routing-options
router-id 100.40.40.40;

```

Configuring Device CE1

Step-by-Step Procedure

To configure Device CE1:

1. Configure an interface to Device PE1.

```

[edit interfaces]
user@CE1# set ge-1/3/2 unit 0 family inet address 10.0.244.9/30
user@CE1# set ge-1/3/2 unit 0 description CE1-to-PE1

```

2. Configure static routes from Device CE1 to the three other customer networks, with Device PE1 as the next hop.

```

[edit routing-options]
user@CE1# set static route 10.0.104.8/30 next-hop 10.0.244.10
user@CE1# set static route 10.0.134.8/30 next-hop 10.0.244.10
user@CE1# set static route 10.0.224.8/30 next-hop 10.0.244.10

```

3. If you are done configuring the device, commit the configuration.

```

[edit]
user@CE1# commit

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@CE1# show interfaces
ge-1/3/2 {
  unit 0 {

```

```

family inet {
    address 10.0.244.9/30;
    description CE1-to-PE1;
}
}
}

```

```

user@CE1# show routing-options
static {
    route 10.0.104.8/30 next-hop 10.0.244.10;
    route 10.0.134.8/30 next-hop 10.0.244.10;
    route 10.0.224.8/30 next-hop 10.0.244.10;
}

```

Configuring Device CE2

Step-by-Step Procedure

To configure Device CE2:

1. Configure an interface to Device PE2.

```

[edit interfaces]
user@CE2# set ge-1/3/3 unit 0 family inet address 10.0.224.9/30
user@CE2# set ge-1/3/3 unit 0 description CE2-to-PE2

```

2. Configure a static route from Device CE2 to CE1, with Device PE2 as the next hop.

```

[edit routing-options]
user@CE2# set static route 10.0.244.8/30 next-hop 10.0.224.10

```

3. If you are done configuring the device, commit the configuration.

```

[edit]
user@CE2# commit

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.


```

user@CE2# show interfaces
ge-1/3/3 {
  unit 0 {
    family inet {
      address 10.0.224.9/30;
      description CE2-to-PE2;
    }
  }
}

```

```

user@CE2# show routing-options
static {
  route 10.0.244.8/30 next-hop 10.0.224.10;
}

```

Configuring Device CE3

Step-by-Step Procedure

To configure Device CE3:

1. Configure an interface to Device PE3.

```

[edit interfaces]
user@CE3# set ge-2/0/1 unit 0 family inet address 10.0.134.9/30
user@CE3# set ge-2/0/1 unit 0 description CE3-to-PE3

```

2. Configure a static route from Device CE3 to CE1, with Device PE3 as the next hop.

```

[edit routing-options]
user@CE3# set static route 10.0.244.8/30 next-hop 10.0.134.10

```

3. If you are done configuring the device, commit the configuration.

```

[edit]
user@CE3# commit

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@CE3# show interfaces
ge-2/0/1 {
  unit 0 {
    family inet {
      address 10.0.134.9/30;
      description CE3-to-PE3;
    }
  }
}

```

```

user@CE3# show routing-options
static {
  route 10.0.244.8/30 next-hop 10.0.134.10;
}

```

Configuring Device CE4

Step-by-Step Procedure

To configure Device CE4:

1. Configure an interface to Device PE4.

```

[edit interfaces]
user@CE4# set ge-3/1/3 unit 0 family inet address 10.0.104.10/30
user@CE4# set ge-3/1/3 unit 0 description CE4-to-PE4

```

2. Configure a static route from Device CE4 to CE1, with Device PE4 as the next hop.

```

[edit routing-options]
user@CE4# set static route 10.0.244.8/30 next-hop 10.0.104.9

```

3. If you are done configuring the device, commit the configuration.

```

[edit]
user@CE4# commit

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@CE4# show interfaces
ge-3/1/3 {
  unit 0 {
    family inet {
      address 10.0.104.10/30;
      description CE4-to-PE4;
    }
  }
}
```

```
user@CE4# show routing-options
static {
  route 10.0.244.8/30 next-hop 10.0.104.9;
}
```

Verification

IN THIS SECTION

- [Verifying Connectivity | 683](#)
- [Verifying the State of the Point-to-Multipoint LSP | 684](#)
- [Checking the Forwarding Table | 685](#)

Confirm that the configuration is working properly.

Verifying Connectivity

Purpose

Make sure that the devices can ping each other.

Action

Run the **ping** command from CE1 to the interface on CE2 connecting to PE2.

```
user@CE1> ping 10.0.224.9
```

```
PING 10.0.224.9 (10.0.224.9): 56 data bytes
64 bytes from 10.0.224.9: icmp_seq=0 ttl=61 time=1.387 ms
64 bytes from 10.0.224.9: icmp_seq=1 ttl=61 time=1.394 ms
64 bytes from 10.0.224.9: icmp_seq=2 ttl=61 time=1.506 ms
```

```
^C
--- 10.0.224.9 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.387/1.429/1.506/0.055 ms
```

Run the **ping** command from CE1 to the interface on CE3 connecting to PE3.

```
user@CE1> ping 10.0.134.9
```

```
PING 10.0.134.9 (10.0.134.9): 56 data bytes
64 bytes from 10.0.134.9: icmp_seq=0 ttl=61 time=1.068 ms
64 bytes from 10.0.134.9: icmp_seq=1 ttl=61 time=1.062 ms
64 bytes from 10.0.134.9: icmp_seq=2 ttl=61 time=1.053 ms
^C
--- 10.0.134.9 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.053/1.061/1.068/0.006 ms
```

Run the **ping** command from CE1 to the interface on CE4 connecting to PE4.

```
user@CE1> ping 10.0.104.10
```

```
PING 10.0.104.10 (10.0.104.10): 56 data bytes
64 bytes from 10.0.104.10: icmp_seq=0 ttl=61 time=1.079 ms
64 bytes from 10.0.104.10: icmp_seq=1 ttl=61 time=1.048 ms
64 bytes from 10.0.104.10: icmp_seq=2 ttl=61 time=1.070 ms
^C
--- 10.0.104.10 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.048/1.066/1.079/0.013 ms
```

Verifying the State of the Point-to-Multipoint LSP

Purpose

Make sure that the ingress, transit, and egress LSRs are in the Up state.

Action

Run the **show mpls lsp p2mp** command on all of the LSRs. Only the ingress LSR is shown here.

```
user@PE1> show mpls lsp p2mp
```

```

Ingress LSP: 1 sessions
P2MP name: p2mpl1, P2MP branch count: 3
To           From           State Rt P      ActivePath      LSPname
100.40.40.40 100.10.10.10 Up      0 *          PE1-PE4
100.70.70.70 100.10.10.10 Up      0 *          PE1-PE3
100.50.50.50 100.10.10.10 Up      0 *          PE1-PE2
Total 3 displayed, Up 3, Down 0
...

```

Checking the Forwarding Table

Purpose

Make sure that the routes are set up as expected by running the `show route forwarding-table` command. Only the routes to the remote customer networks are shown here.

Action

```
user@PE1> show route forwarding-table
```

```

Routing table: default.inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
...
10.0.104.8/30    user      0 3.3.3.2      ucst  1006    6 fe-2/0/8.9
10.0.134.8/30    user      0 6.6.6.2      ucst  1010    6 fe-2/0/9.8
10.0.224.8/30    user      0 2.2.2.2      ucst  1008    6 fe-2/0/10.1
...

```

Configuring Primary and Branch LSPs for Point-to-Multipoint LSPs

IN THIS SECTION

- [Configuring the Primary Point-to-Multipoint LSP | 686](#)
- [Configuring a Branch LSP for Point-to-Multipoint LSPs | 686](#)

A point-to-multipoint MPLS label-switched path (LSP) is an RSVP LSP with multiple destinations. By taking advantage of the MPLS packet replication capability of the network, point-to-multipoint LSPs avoid

unnecessary packet replication at the ingress router. For more information about point-to-multipoint LSPs, see [“Point-to-Multipoint LSPs Overview” on page 656](#).

To configure a point-to-multipoint LSP, you need to configure the primary LSP from the ingress router and the branch LSPs that carry traffic to the egress routers, as described in the following sections:

Configuring the Primary Point-to-Multipoint LSP

A point-to-multipoint LSP must have a configured primary point-to-multipoint LSP to carry traffic from the ingress router. The configuration of the primary point-to-multipoint LSP is similar to a signaled LSP. See [“Configuring the Ingress Router for MPLS-Signaled LSPs” on page 486](#) for more information. In addition to the conventional LSP configuration, you need to specify a path name for the primary point-to-multipoint LSP by including the **p2mp** statement:

```
p2mp p2mp-lsp-name;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls [label-switched-path lsp-name](#)]
- [edit logical-systems *logical-system-name* protocols mpls [label-switched-path lsp-name](#)]

You can enable the optimization timer for point-to-multipoint LSPs. See [“Optimizing Signaled LSPs” on page 510](#) for more information.

Configuring a Branch LSP for Point-to-Multipoint LSPs

IN THIS SECTION

- [Configuring the Branch LSP as a Dynamic Path | 687](#)
- [Configuring the Branch LSP as a Static Path | 687](#)

The primary point-to-multipoint LSP sends traffic to two or more branch LSPs carrying traffic to each of the egress provider edge (PE) routers. In the configuration for each of these branch LSPs, the point-to-multipoint LSP path name you specify must be identical to the path name configured for the primary point-to-multipoint LSP. See [“Configuring the Primary Point-to-Multipoint LSP” on page 686](#) for more information.

To associate a branch LSP with the primary point-to-multipoint LSP, specify the point-to-multipoint LSP name by including the **p2mp** statement:

```
p2mp p2mp-lsp-name;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

NOTE: Any change in any of the branch LSPs of a point-to-multipoint LSP, either due to a user action or an automatic adjustment made by the router, causes the primary and branch LSPs to be resigned. The new point-to-multipoint LSP is signaled first before the old path is taken down.

The following sections describe how you can configure the branch LSP as a dynamically signaled path using Constrained Shortest Path First (CSPF), as a static path, or as a combination of dynamic and static paths:

Configuring the Branch LSP as a Dynamic Path

By default, the branch LSP for a point-to-multipoint LSP is signaled dynamically using CSPF and requires no configuration.

When a point-to-multipoint LSP is changed, either by the addition or deletion of new destinations or by the recalculation of the path to existing destinations, certain nodes in the tree might receive data from more than one incoming interface. This can happen under the following conditions:

- Some of the branch LSPs to destinations are statically configured and might intersect with statically or dynamically calculated paths to other destinations.
- When a dynamically calculated path for a branch LSP results in a change of incoming interface for one of the nodes in the network, the older path is not immediately torn down after the new one has been signaled. This ensures that any data in transit relying on the older path can reach its destination. However, network traffic can potentially use either path to reach the destination.
- A faulty router at the ingress calculates the paths to two different branch destinations such that a different incoming interface is chosen for these branch LSPs on a router node common to these branch LSPs.

Configuring the Branch LSP as a Static Path

You can configure the branch LSP for a point-to-multipoint LSP as a static path. See [“Configuring Static LSPs” on page 573](#) for more information.

Configuring Inter-Domain Point-to-Multipoint LSPs

An inter-domain P2MP LSP is a P2MP LSP that has one or more sub-LSPs (branches) that span multiple domains in a network. Examples of such domains include IGP areas and autonomous systems (ASs). A

sub-LSP of an inter-domain P2MP LSP may be intra-area, inter-area, or inter-AS, depending on the location of the egress node (leaf) with respect to the ingress node (source).

On the ingress node, a name is assigned to the inter-domain P2MP LSP and shared by all constituent sub-LSPs. Each sub-LSP is configured separately, with its own egress node and optionally an explicit path. The location of the egress node of the sub-LSP with respect to the ingress node determines whether the sub-LSP is intra-area, inter-area, or inter-AS.

Inter-domain P2MP LSPs can be used to transport traffic in the following applications in a multi-area or multi-AS network:

- Layer 2 broadcast and multicast over MPLS
- Layer 3 BGP/MPLS VPN
- VPLS

On each domain boundary node (ABR or ASBR) along the path of the P2MP LSP, the **expand-loose-hop** statement must be configured at the **[edit protocols mpls]** hierarchy level so that CSPF can extend a loose-hop ERO (usually the first entry of the ERO list carried by RSVP Path message) towards the egress node or the next domain boundary node.

CSPF path computation for inter-domain P2MP LSPs:

- CSPF path computation is supported on each sub-LSP for inter-domain P2MP LSPs. A sub-LSP may be intra-area, inter-area, or inter-AS. CSPF treats an inter-area or inter-AS sub-LSP in the same manner as an inter-domain P2P LSP.
- On an ingress node or a domain boundary node (ABR or ASBR), CSPF can perform an Explicit Route Object (ERO) expansion per-RSVP query. The destination queried could be an egress node or a received loose-hop ERO. If the destination resides in a neighboring domain that the node is connected to, CSPF generates either a sequence of strict-hop EROs towards it or a sequence of strict-hop EROs towards another domain boundary node that can reach the destination.
- If RSVP fails to signal a path through a previously selected domain boundary node, RSVP attempts to signal a path through other available domain boundary nodes in a round-robin fashion.
- When a sub-LSP is added or removed to or from an inter-domain P2MP LSP, causing its path (branch) to be merged or pruned with or from the current P2MP tree, the paths being taken by the other sub-LSPs should not be affected, helping to prevent traffic disruption on those sub-LSPs.

Be aware of the following when deploying inter-domain P2MP LSPs in your network:

- Periodic path re-optimization is supported for inter-domain P2MP LSPs on ingress nodes. It can be turned on for an inter-domain P2MP LSP by configuring the **optimize-timer** statement at the **[edit protocols mpls label-switched-path lsp-name]** hierarchy level with the same interval for every sub-LSP.
- Only link protection bypass LSPs are supported for inter-domain P2MP LSPs. To enable it for an inter-domain P2MP LSP, link-protection must be configured for all sub-LSPs and on all of the RSVP interfaces that the P2MP LSP might travel through.

- Only OSPF areas are supported for inter-domain P2MP LSPs. IS-IS levels are not supported.

Configuring Link Protection for Point-to-Multipoint LSPs

Link protection helps to ensure that traffic going over a specific interface to a neighboring router can continue to reach this router if that interface fails. When link protection is configured for an interface and a point-to-multipoint LSP that traverses this interface, a bypass LSP is created that handles this traffic if the interface fails. The bypass LSP uses a different interface and path to reach the same destination.

To extend link protection to all of the paths used by a point-to-multipoint LSP, link protection must be configured on each router that each branch LSP traverses. If you enable link protection on a point-to-multipoint LSP, you must enable link protection on all of the branch LSPs.

The Internet draft [draft-ietf-mpls-rsvp-te-p2mp-01.txt](#), *Extensions to RSVP-TE for Point to Multipoint TE LSPs*, describes link protection for point-to-multipoint LSPs.

To enable link protection on point-to-multipoint LSPs, complete the following steps:

1. Configure link protection on each branch LSP. To configure link protection, include the **link-protection** statement:

```
link-protection;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *branch-lsp-name*]
 - [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *branch-lsp-name*]
2. Configure link protection for each RSVP interface on each router that the branch LSP traverses. For information about how to configure link protection on RSVP interfaces, see [“Configuring Link Protection on Interfaces Used by LSPs” on page 376](#).

For more information on how to configure link protection, see [“Configuring Node Protection or Link Protection for LSPs” on page 384](#).

Configuring Graceful Restart for Point-to-Multipoint LSPs

You can configure graceful restart on point-to-multipoint LSPs. Graceful restart allows a router undergoing a restart to inform its adjacent neighbors of its condition. The restarting router requests a grace period from the neighbor or peer, which can then cooperate with the restarting router. The restarting router can still forward MPLS traffic during the restart period; convergence in the network is not disrupted. The restart is not apparent to the rest of the network, and the restarting router is not removed from the network topology. RSVP graceful restart can be enabled on both transit routers and ingress routers.

To enable graceful restart on a router handling point-to-multipoint LSP traffic, include the **graceful-restart** statement:

```
graceful-restart;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

The graceful restart configuration for point-to-multipoint LSPs is identical to that of point-to-point LSPs. For more information on how to configure graceful restart, see [“Configuring RSVP Graceful Restart” on page 817](#).

Configuring a Multicast RPF Check Policy for Point-to-Multipoint LSPs

You can control whether a reverse path forwarding (RPF) check is performed for a source and group entry before installing a route in the multicast forwarding cache. This makes it possible to use point-to-multipoint LSPs to distribute multicast traffic to PIM islands situated downstream from the egress routers of the point-to-multipoint LSPs.

By configuring the **rpf-check-policy** statement, you can disable RPF checks for a source and group pair. You would typically configure this statement on the egress routers of a point-to-multipoint LSP, because the interface receiving the multicast traffic on a point-to-multipoint LSP egress router might not always be the RPF interface.

You can also configure a routing policy to act upon a source and group pair. This policy behaves like an import policy, so if no policy term matches the input data, the default policy action is “acceptance.” An accept policy action enables RPF checks. A reject policy action (applied to all source and group pairs that are not accepted) disables RPF checks for the pair.

To configure a multicast RPF check policy for a point-to-multipoint LSP, specify the RPF check policy using the **rpf-check-policy** statement:

```
rpf-check-policy policy;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options multicast]
- [edit logical-systems *logical-system-name* routing-options multicast]

You also must configure a policy for the multicast RPF check. You configure policies at the [edit **policy-options**] hierarchy level. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

NOTE: When you configure the **rpf-check-policy** statement, the Junos OS cannot perform RPF checks on incoming traffic and therefore cannot detect traffic arriving on the wrong interface. This might cause routing loops to form.

Example: Configuring Multicast RPF Check Policy for a Point-to-Multipoint LSP

Configure a policy to ensure that an RPF check is not performed for sources with prefix **128.83/16** or longer that belong to groups having a prefix of **228/8** or longer:

```
[edit]
policy-options {
  policy-statement rpf-sg-policy {
    from {
      route-filter 228.0.0.0/8 orlonger;
      source-address-filter 128.83.0.0/16 orlonger;
    }
    then {
      reject;
    }
  }
}
```

Configuring Ingress PE Router Redundancy for Point-to-Multipoint LSPs

You can configure one or more PE routers as part of a backup PE router group to enable ingress PE router redundancy. You accomplish this by configuring the IP addresses of the backup PE routers (at least one backup PE router is required) and the local IP address used by the local PE router.

You must also configure a full mesh of point-to-point LSPs between the primary and backup PE routers. You also need to configure BFD on these LSPs. See [“Configuring BFD for RSVP-Signaled LSPs” on page 143](#) and [“Configuring BFD for LDP LSPs” on page 903](#) for more information.

To configure ingress PE router redundancy for point-to-multipoint LSPs, include the **backup-pe-group** statement:

```
backup-pe-group pe-group-name {
  backups [addresses];
  local-address address;
}
```

For a list of hierarchy levels at which you can include these statements, see the statement summary sections for these statements.

After you configure the ingress PE router redundancy backup group, you must also apply the group to a static route on the PE router. This ensures that the static route is active (installed in the forwarding table) when the local PE router is the designated forwarder for the backup PE group. You can only associate a backup PE router group with a static route that also has the **p2mp-lsp-next-hop** statement configured. For more information, see [“Configuring Static Unicast Routes for Point-to-Multipoint LSPs” on page 581](#).

Enabling Point-to-Point LSPs to Monitor Egress PE Routers

Configuring an LSP with the **associate-backup-pe-groups** statement enables it to monitor the status of the PE router to which it is configured. You can configure multiple backup PE router groups using the same router's address. A failure of this LSP indicates to all of the backup PE router groups that the destination PE router is down. The **associate-backup-pe-groups** statement is not tied to a specific backup PE router group. It applies to all groups that are interested in the status of the LSP to that address.

To allow an LSP to monitor the status of the egress PE router, include the **associate-backup-pe-groups** statement:

```
associate-backup-pe-groups;
```

This statement can be configured at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

If you configure the **associate-backup-pe-groups** statement, you must configure BFD for the point-to-point LSP. For information about how to configure BFD for an LSP, see [“Configuring BFD for MPLS IPv4 LSPs” on page 142](#) and [“Configuring BFD for LDP LSPs” on page 903](#).

You also must configure a full mesh of point-to-point LSPs between the PE routers in the backup PE router group. A full mesh is required so that each PE router within the group can independently determine the status of the other PE routers, allowing each router to independently determine which PE router is currently the designated forwarder for the backup PE router group.

If you configure multiple LSPs with the **associate-backup-pe-groups** statement to the same destination PE router, the first LSP configured is used to monitor the forwarding state to that PE router. If you configure multiple LSPs to the same destination, make sure to configure similar parameters for the LSPs. With this configuration scenario, a failure notification might be triggered even though the remote PE router is still up.

Preserving Point-to-Multipoint LSP Functioning with Different Junos OS Releases

In Junos OS Release 9.1 and earlier, Resv messages that include the S2L_SUB_LSP object are rejected by default. In Junos OS Release 9.2 and later, such messages are accepted by default. To ensure proper functioning of point-to-multipoint LSPs in a network that includes both devices running Junos OS Release 9.1 and earlier and devices running Junos 9.2 and later, you must include the **no-p2mp-sublsp** statement in the configuration of the devices running Junos 9.2 and later:

```
no-p2mp-sublsp;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | 36

Pop-and-Forward LSP Configuration

IN THIS SECTION

- [Benefits of RSVP-TE Pop-and-Forward LSP Tunnels](#) | 694
- [Pop-and-Forward LSP Tunnel Terminology](#) | 694
- [Pop-and-Forward LSP Tunnel Label and Signaling](#) | 695
- [Pop-and-Forward LSP Tunnel Label Stacking](#) | 696
- [Pop-and-Forward LSP Tunnel Link Protection](#) | 697
- [RSVP-TE Pop-and-Forward LSP Tunnel Supported and Unsupported Features](#) | 698

Pop-and-forward LSPs introduces the notion of pre-installed per traffic engineering link pop labels that are shared by RSVP-TE LSPs that traverse these links and significantly reducing the required forwarding plane state . A transit label-switching router (LSR) allocates a unique pop label per traffic engineering link with a forwarding action to pop the label and forward the packet over that traffic engineering link should the label appear at the top of the packet. These pop labels are sent back in the RESV message of the LSP

at each LSR and further recorded in the record route object (RRO). The label stack is constructed from the recorded labels in the RRO and pushed by the ingress label edge router (LER), as each transit hop performs a pop-and-forward action on its label. The pop-and-forward tunnels enhances the RSVP-TE control plane feature benefits with the simplicity of the shared MPLS forwarding plane.

Benefits of RSVP-TE Pop-and-Forward LSP Tunnels

- **Scaling advantage of RSVP-TE**—Any platform-specific label space limit on an LSR is prevented from being a constraint to the control plane scaling on that interface.
- **Reduced forwarding plane state**—The transit labels on a traffic engineering link are shared across RSVP-TE tunnels traversing the link, and are used independent of the ingress and egress devices of the LSPs, thereby significantly reducing the required forwarding plane state.
- **Reduced transit data plane state**—Because the pop labels are allocated per traffic engineering link and shared across LSPs, the total label state in the forwarding plane is reduced to a function of the number of RSVP neighbors on that interface.
- **Faster LSP setup time**—The forwarding plane state is not programmed during the LSP setup and teardown. As a result, the control plane need not wait sequentially at each hop for the forwarding plane to be programmed prior to sending the label upstream in the RESV message, resulting in reduced LSP setup time.
- **Backward compatibility**—This allows backward compatibility with transit LSRs that provide regular labels in RESV messages. Labels can be mixed across transit hops in a single MPLS RSVP-TE LSP. Certain LSRs can use traffic engineering link labels and others can use regular labels. The ingress can construct a label stack appropriately based on what type of label is recorded from every transit LSR.

Pop-and-Forward LSP Tunnel Terminology

The following terminology is used in the implementation of RSVP-TE pop-and-forward LSP tunnels:

- **Pop label**—An incoming label at an LSR that is popped and forwarded over a specific traffic-engineering link to a neighbor.
- **Swap label**—An incoming label at an LSR that is swapped to an outgoing label and forwarded over a specific downstream traffic engineering link.
- **Delegation label**—An incoming label at an LSR that is popped. A new set of labels is pushed before the packet is forwarded.
- **Delegation hop**— A transit hop that allocates a delegation label.
- **Application label depth (AppLD)**—Maximum number of application or service labels (for example, VPN, LDP, or IPv6 explicit-null labels) that can be beneath the RSVP transport labels. It is configured on a per-node basis, and is equally applicable for all LSPs, and is neither signaled nor advertised.

- **Outbound label depth (OutLD)**—Maximum number of labels that can be pushed before a packet is forwarded. This is local to the node, and is neither signaled nor advertised.
- **Additional transport label depth (AddTLD)**—Maximum number of other transport labels that can be added (for example, bypass label). This is a per-LSP parameter that is neither signaled or advertised. The value is discerned by checking if the LSP has been signaled with link protection (AddTLD=1) or without link protection (AddTLD=0).
- **Effective transport label depth (ETLD)**— Number of transport labels that the LSP hop can potentially send to its downstream hop. This value is signaled per LSP in the hop attributes subobject. The hop attributes subobject is added to the record route object (RRO) in the path message.

Pop-and-Forward LSP Tunnel Label and Signaling


Every traffic engineering link is allocated a pop label that is installed in the mpls.0 routing table with a forwarding action to pop the label and forward the packet over the traffic engineering link to the downstream neighbor of the RSVP-TE tunnel.

For pop-and-forward LSP tunnels, the pop label for the traffic engineering link is allocated when the first RESV message for a pop-and-forward transit LSP arrives over that traffic engineering link. This is done to avoid preallocating pop labels and installing them in networks where pop-and-forward LSPs are not configured.

NOTE: For the pop-and-forward LSP tunnels to function effectively, we recommend that you configure the **maximum-labels** statement on all the interfaces in the RSVP-TE network.

Figure 51 on page 695 displays pop labels at all interfaces for neighboring devices.

Figure 51: Pop-and-Forward LSP Tunnel Labels

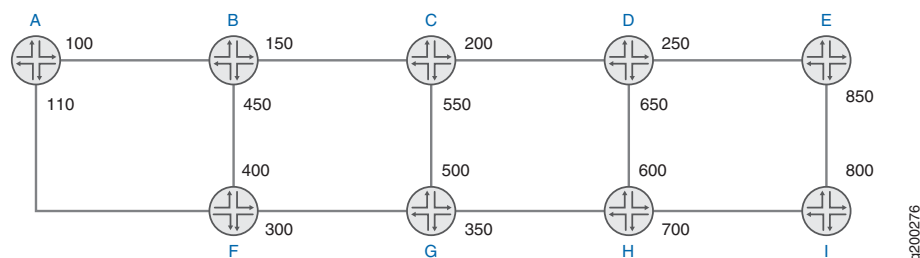

There are two pop-and-forward LSP tunnels—T1 and T2. Tunnel T1 is from Device A to Device E on path A-B-C-D-E. Tunnel T2 is from Device F to Device E on path F-B-C-D-E. Both the tunnels, T1 and T2, share the same traffic engineering links B-C, C-D, and D-E.

As RSVP-TE signals the setup of the pop-and-forward tunnel T1, the LSR D receives the RESV message from the egress E. Device D checks the next-hop traffic engineering link (D-E) and provides the pop label (250) in the RESV message for the tunnel. The label is sent in the label object and is also recorded in the label subobject (with the pop label bit set) carried in the RRO. Similarly, Device C provides the pop label (200) for the next-hop traffic engineering link C-D and Device B provides the pop label (150) for the next-hop traffic engineering link B-C. For the tunnel T2, the transit LSRs provide the same pop labels as described for tunnel T1.

Both the label edge routers (LERs), Device A and Device F, push the same stack of labels [150(top), 200, 250] for tunnels T1 and T2, respectively. The recorded labels in the RRO are used by the ingress LER to construct a stack of labels.

The pop-and-forward LSP tunnel labels are compatible with transit interfaces that use swap labels. Labels can be mixed across transit hops in a single MPLS RSVP-TE LSP, where certain LSRs can use pop labels and others can use swap labels. The ingress device constructs the appropriate label stack based on the label type recorded from every transit LSR.

Pop-and-Forward LSP Tunnel Label Stacking

Construction of Label Stack at the Ingress

The ingress LER checks the type of label received from each transit hop as recorded in the RRO in the RESV message and generates the appropriate label stack to use for the pop-and-forward tunnel.

The following logic is used by the ingress LER while constructing the label stack:

- Each RRO label subobject is processed starting with the label subobject from the first downstream hop.
- Any label provided by the first downstream hop is always pushed on the label stack. If the label type is a pop label, then any label from the succeeding downstream hop is also pushed on the constructed label stack.
- If the label type is a swap label, then any label from the succeeding downstream hop is not pushed on the constructed label stack.

Auto-Delegation of Label Stack


The ingress device runs the Constrained Shortest Path First (CSPF) to compute the path, and if the hop length is greater than the OutLD-AppLD-AddTLD, the ingress device cannot impose the entire label stack to reach the egress device.

When requesting RSVP-TE to signal the path, the ingress device always requests autodelegation for the LSP, where one or more transit hops automatically select themselves as delegation hops to push the label stack to reach the next delegation hop. Junos OS uses an algorithm based on the received Effective Transport Label-Stack Depth (ETLD), that each transit executes to decide whether it should autoselect itself as a delegation hop. This algorithm is based on the section on ETLD in the Internet draft draft-ietf-mpls-rsvp-shared-labels-00.txt (expires September 11 2017), *Signaling RSVP-TE Tunnels on a Shared MPLS Forwarding Plane*.

The label stack imposed by the ingress device delivers the packet up to the first delegation hop. Each delegation hop's label stack also includes the delegation label of the next delegation hop at the bottom of the stack.

Figure 52 on page 697 displays labels at every device interface, where Device D and Device I are delegation hops, [Label] P is the pop label, and [Label] D is the delegation label. The RSVP-TE pop-and-forward LSP tunnel is A-B-C-D-E-F-G-H-I-J-K-L. Delegation label 1250 represents (300, 350, 400, 450, 1500); Delegation label 1500 represents (550, 600).

Figure 52: Pop-and-Forward LSP Tunnel Pop and Delegation Labels

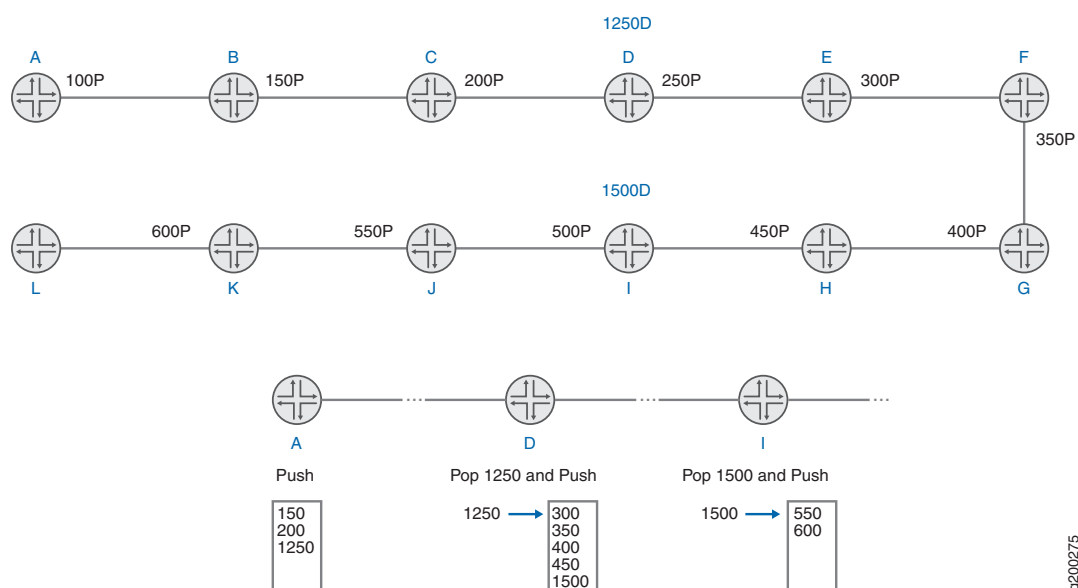

In this approach, for the tunnel, the ingress LER Device A pushes (150, 200, 1250). At LSR Device D, the delegation label 1250 gets popped and labels 300, 350, 400, 450, and 1500 get pushed. At LSR Device I, the delegation label 1500 gets popped and the remaining set of labels (550, 600) get pushed. In Junos OS, the pop and push action occurs as a swap to the bottom label of the outgoing stack and push the remaining labels.

A delegation label and the LSP segment that it covers can be shared by multiple pop-and-forward LSPs. A LSP delegation segment consist of an ordered set of hops (IP addresses and labels) as seen in the RESV RRO. The delegation label (and the segment that it covers) is not owned by a particular LSP, but can be shared. When all LSPs using a delegation label are deleted, the delegation label (and route) is deleted.


Pop-and-Forward LSP Tunnel Link Protection

To provide link protection at a point of local repair (PLR) with a pop-and-forward data plane, the LSR allocates a separate pop label for the traffic engineering link that is used for the RSVP-TE tunnels that

request link protection from the ingress device. No signaling extensions are required to support link protection for the RSVP-TE tunnels over the pop-and-forward data plane.

Figure 53 on page 698 displays pop labels at every device interface; labels marked with P are pop labels that offer link protection for the traffic-engineering link.

Figure 53: Pop-and Forward LSP Tunnel Link Protection

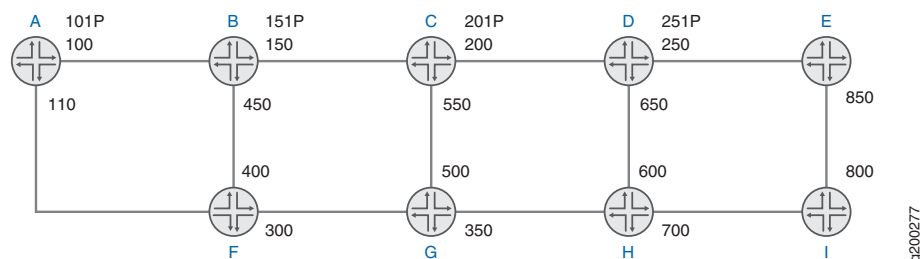

At each LSR, link-protected pop labels can be allocated for each traffic engineering link, and a link-protecting facility bypass LSP (which is not a pop-and-forward LSP, but rather a normal bypass LSP) can be created to protect the traffic engineering link. These labels can be sent in the RESV message by the LSR for LSPs requesting link protection over the specific traffic engineering link. Because the facility bypass terminates at the next hop (merge point), the incoming pop label on the packet at the PLR is what the merge point expects.

For example, LSR Device B can install a facility bypass LSP for the link-protected pop label 151. When the traffic engineering link B-C is up, LSR Device B pops 151 and sends the packet to C. If the traffic engineering link B-C is down, the LSR can pop 151 and send the packet through the facility backup to Device C.

RSVP-TE Pop-and-Forward LSP Tunnel Supported and Unsupported Features

Junos OS supports the following features with RSVP-TE pop-and-forward LSP tunnels:

- Pop labels per RSVP neighbor for unprotected LSP.
- Pop labels per RSVP neighbor for LSPs requesting link protection using facility bypass
- Autodelegation of LSP segment.
- Mixed label mode, where certain transit LSRs do not support pop-and-forward LSP tunnels
- LSP ping and traceroute
- All existing CSPF constraint.
- Load balancing of traffic between pop-and-forward LSPs and regular point-to-point RSVP-TE LSP.
- Autobandwidth, LDP tunneling, and TE++ container LSP.
- Aggregated Ethernet interface.

- Virtual platforms support, such as Juniper Networks vMX Virtual Router.
- 64-bit support
- Logical systems

Junos OS does not support the following functionality for RSVP-TE pop-and-forward LSP tunnels:

- Node link protection
- Detour protection for MPLS fast reroute
- Point-to-multipoint LSPs.
- Switch-away LSP.
- Generalized MPLS (GMPLS) LSPs (including bidirectional LSPs, associated LSPs, VLAN user-to-network interface [UNI] and so on)
- IP Flow Information Export (protocol) (IPFIX) inline flow sampling for MPLS template
- RFC 3813, *Multiprotocol Label Switching (MPLS) Label Switching Router (LSR) Management Information Base (MIB)*
- IPv4 Explicit-null (Inserting label 0 at the bottom of the label stack is not supported. If there are service labels beneath the RSVP-TE pop-and-forward label stack, because the penultimate hop for the LSP copies the EXP value to the service label, this can allow continuity of class of service (CoS) across the MPLS forwarding plane).
- Ultimate-hop popping (UHP)
- Graceful Routing Engine switchover (GRES)
- Nonstop active routing (NSR)

Segment Routing LSP Configuration

IN THIS SECTION

- [Enabling Distributed CSPF for Segment Routing LSPs | 700](#)
- [Static Segment Routing Label Switched Path | 706](#)
- [Routing Engine-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution | 750](#)
- [Configuring Static Adjacency Segment Identifier for Aggregate Ethernet Member Links Using Single-Hop Static LSP | 759](#)

Enabling Distributed CSPF for Segment Routing LSPs

IN THIS SECTION

- [Distributed CSPF Computation Constraints | 700](#)
- [Distributed CSPF Computation Algorithm | 701](#)
- [Distributed CSPF Computation Database | 702](#)
- [Configuring Distributed CSPF Computation Constraints | 702](#)
- [Distributed CSPF Computation | 703](#)
- [Interaction Between Distributed CSPF Computation and SRTE Features | 703](#)
- [Distributed CSPF Computation Sample Configurations | 704](#)

Prior to Junos OS Release 19.2R1S1, for traffic engineering of segment routing paths, you could either explicitly configure static paths, or use computed paths from an external controller. With the distributed Constrained Shortest Path First (CSPF) for segment routing LSP feature, you can compute a segment routing LSP locally on the ingress device according to the constraints you have configured. With this feature, the LSPs are optimized based on the configured constraints and metric type (traffic-engineering or IGP). The LSPs are computed to utilize the available ECMP paths to the destination with segment routing label stack compression enabled or disabled.

Distributed CSPF Computation Constraints

Segment routing LSP paths are computed when all the configured constraints are met.

The distributed CSPF computation feature supports the following subset of constraints specified in the Internet draft, draft-ietf-spring-segment-routing-policy-03.txt, *Segment Routing Policy for Traffic Engineering*:

- Inclusion and exclusion of administrative groups.
- Inclusion of loose or strict hop IP addresses.

NOTE: You can specify only router IDs in the loose or strict hop constraints. Labels and other IP addresses cannot be specified as loose or strict hop constraints in Junos OS Release 19.2R1-S1.

- Maximum number of segment IDs (SIDs) in the segment list.
- Maximum number of segment lists per candidate segment routing path.

The distributed CSPF computation feature for segment routing LSPs does not support the following types of constraints and deployment scenarios:

- IPv6 addresses.
- Inter domain segment routing traffic engineering (SRTE) LSPs.
- Unnumbered interfaces.
- Multiple protocols routing protocols such as, OSPF, ISIS, and BGP-LS, enabled at the same time.
- Computation with prefixes or anycast addresses as destinations.
- Including and excluding interface IP addresses as constraints.

Distributed CSPF Computation Algorithm

IN THIS SECTION

- [Label Stack Compression Enabled | 701](#)
- [Label Stack Compression Disabled | 701](#)

The distributed CSPF computation feature for segment routing LSPs uses the label stack compression algorithm with CSPF.

Label Stack Compression Enabled

A compressed label stack represents a set of paths from a source to a destination. It generally consists of node SIDs and adjacency SIDs. When label stack compression is enabled, the result of the computation is a set of paths that maximize ECMP to the destination, with minimum number of SIDs in the stack, while conforming to constraints.

Label Stack Compression Disabled

The multipath CSPF computation with label stack compression disabled finds up to N segment lists to destination, where:

- The cost of all segment lists is equal to and the same as the shortest traffic-engineering metric to reach the destination.
- Each segment list is comprised of adjacency SIDs.
- The value of N is the maximum number of segment lists allowed for the candidate path by configuration.
- No two segment lists are identical.
- Each segment list satisfies all the configured constraints.

Distributed CSPF Computation Database

The database used for SRTE computation has all links, nodes, prefixes and their characteristics irrespective of whether traffic-engineering is enabled in those advertising nodes. In other words, it is the union of the traffic-engineering database (TED) and the IGP link state database of all domains that the computing node has learnt from.

Configuring Distributed CSPF Computation Constraints

You can use a compute profile to logically group the computation constraints. These compute profiles are referenced by the segment routing paths for computing the primary and secondary segment routing LSPs.

To configure a compute profile, include the **compute-profile** statement at the **[edit protocols source-packet-routing]** hierarchy level.

The configuration for the supported computation constraints include:

- **Administrative groups**

You can configure **admin-groups** under the **[edit protocols mpls]** hierarchy level. Junos OS applies the administrative group configuration to the segment routing traffic-engineering (SRTE) interfaces.

To configure the computation constraints you can specify three categories for a set of administrative groups. The computation constraint configuration can be common to all candidate segment routing paths, or it can be under individual candidate paths.

- **include-any**—Specifies that any link with at least one of the configured administrative groups in the list is acceptable for the path to traverse.
- **include-all**—Specifies that any link with all of the configured administrative groups in the list is acceptable for the path to traverse.
- **exclude**—Specifies that any link which does not have any of the configured administrative groups in the list is acceptable for the path to traverse.

- **Explicit path**

You can specify a series of router IDs in the compute profile as a constraint for computing the SRTE candidate paths. Each hop has to be an IPv4 address and can be of type strict or loose. If the type of a hop is not configured, strict is used. You must include the **compute** option under the **segment-list** statement when specifying the explicit path constraint.

- **Maximum number of segment lists (ECMP paths)**

You can associate a candidate path with a number of dynamic segment-lists. The paths are ECMP paths, where each segment-list translates into a next hop gateway with active weight. These paths are a result of path computation with or without compression.

You can configure this attribute using the **maximum-computed-segment-lists** **maximum-computed-segment-lists** option under the **compute-profile** configuration statement. This configuration determines the maximum number of such segment lists computed for a given primary and secondary LSP.

- **Maximum segment list depth**

The maximum segment list depth computation parameter ensures that amongst the ECMP paths that satisfy all other constraints such as administrative group, only the paths that have segment lists less than or equal to the maximum segment list depth are used. When you configure this parameter as a constraint under the compute-profile, it overrides the **maximum-segment-list-depth** configuration under the **[edit protocols source-packet-routing]** hierarchy level, if present.

You can configure this attribute using the **maximum-segment-list-depth** *maximum-segment-list-depth* option under the **compute-profile** configuration statement.

- **Protected or unprotected adjacency SIDs**

You can configure protected or unprotected adjacency SID as a constraint under the **compute-profile** to avoid links with the specified SID type.

- **Metric type**

You can specify the type of metric on the link to be used for computation. By default, SR-TE LSPs use traffic-engineering metrics of the links for computation. The traffic-engineering metric for links is advertised by traffic-engineering extensions of IGP protocols. However, you may also choose to use the IGP-metric for computation by using the metric-type configuration in the compute profile.

You can configure this attribute using the **metric-type (igp | te)** option under the **compute-profile** configuration statement.

Distributed CSPF Computation

The SRTE candidate paths are computed locally such that they satisfy the configured constraints. When label stack compression is disabled, the multi-path CSPF computation result is a set of adjacency SID stacks. When label stack compression is enabled, the result is a set of compressed label stacks (composed of adjacent SIDs and node SIDs).

When secondary paths are computed, the links, nodes and SRLGs taken by the primary paths are not avoided for computation. For more information on primary and secondary paths, see [“Configuring Primary and Secondary LSPs” on page 569](#).

For any LSPs with unsuccessful computation result, the computation is retried as traffic-engineering database (TED) changes.

Interaction Between Distributed CSPF Computation and SRTE Features

IN THIS SECTION

- [Weights Associated With Paths of an SRTE Policy | 704](#)
- [BFD Liveliness Detection | 704](#)
- [inherit-label-nexthops | 704](#)
- [Auto-Translate Feature | 704](#)

Weights Associated With Paths of an SRTE Policy

You can configure weights against computed and static SRTE paths, which contribute to the next hops of the route. However, a single path that has computation enabled can result in multiple segment lists. These computed segment lists are treated as ECMP amongst themselves. You can assign hierarchical ECMP weights to these segments, considering the weights assigned to each of the configured primaries.

BFD Liveliness Detection

You can configure BFD liveliness detection for the computed primary or secondary paths. Every computed primary or secondary path can result in multiple segment lists, as a result, the BFD parameters configured against the segment lists are applied to all the computed segment lists. If all the active primary paths go down, the pre-programmed secondary path (if provided) becomes active.

inherit-label-nexthops

You are not required to explicitly enable the **inherit-label-nexthops** configuration under the **[edit protocols source-packet-routing [segment-list segment-list-name](#)]** hierarchy for the computed primary or secondary paths, as it is a default behavior.

Auto-Translate Feature

You can configure the auto-translate feature on the segment lists, and the primary or secondary paths with the auto-translate feature reference these segment lists. On the other hand, the primary or secondary on which compute feature is enabled cannot reference any segment list. As a result, you cannot enable both the compute feature and the auto-translate feature for a given primary or secondary path. However, you could have an LSP configured with a primary path with compute type and another with auto-translate type.

Distributed CSPF Computation Sample Configurations

IN THIS SECTION

- [Example 1 | 704](#)
- [Example 2 | 705](#)
- [Example 3 | 706](#)

Example 1

In Example 1,

- The non-computed primary path references a configured segment-list. In this example, the configured segment list *static_sl1* is referenced, and it also serves as the name for this primary path.
- A computed primary should have a name configured, and this name should not reference any configured segment list. In this example, *compute_segment1* is not a configured segment list.

- The *compute_profile_red* compute-profile is applied to the primary path with the name *compute_segment1*.
- The *compute_profile_red* compute-profile includes a segment list of type **compute**, which is used to specify the explicit path constraint for the computation.

```
[edit protocols source-packet-routing]
segment-list static_sl1{
  hop1 label 80000
}
segment-list exp_path1 {
  hop1 ip-address 10.1.1.1 loose
  hop2 ip-address 2.2.2.2
  compute
}
compute-profile compute_profile_red {
  include-any red
  segment-list exp_path1
  maximum-segment-list-depth 5
}
```

The weights for computed path next-hops and static next-hops are 2 and 3, respectively. Assuming the next-hops for computed paths are *comp_nh1*, *comp_nh2*, and *comp_nh3*, and the next-hop for static path is *static_nh*, the weights are applied as follows:

Next-Hop	Weight
comp_nh1	2
comp_nh2	2
comp_nh3	2
static_nh	9

Example 2

In Example 2, both the primary and secondary paths can be of compute type and can have their own compute-profiles.

```
[edit protocols source-packet-routing]
compute-profile compute_profile_green{
  include-any green
  maximum-segment-list-depth 5
}
```

```
compute-profile compute_profile_red{
  include-any red
  maximum-segment-list-depth 8
}
```

Example 3

In Example 3, when compute is mentioned under a primary or secondary path, it results in local computation of a path to the destination without any constraints or other parameters for the computation.

```
[edit protocols source-packet-routing]
source-routing-path srte_colored_policy1 {
  to 5.5.5.5
  color 5
  binding-sid 10001
  primary {
    compute_segment1 {
      compute
    }
  }
}
```

Static Segment Routing Label Switched Path

IN THIS SECTION

- [Understanding Static Segment Routing LSP in MPLS Networks | 707](#)
- [Example: Configuring Static Segment Routing Label Switched Path | 731](#)

The segment routing architecture enables the ingress devices in a core network to steer traffic through explicit paths. You can configure these paths using segment lists to define the paths that the incoming traffic should take. The incoming traffic may be labeled or IP traffic, causing the forwarding operation at the ingress device to be either a label swap, or a destination-based lookup.

Understanding Static Segment Routing LSP in MPLS Networks

IN THIS SECTION

- [Introduction to Segment Routing LSPs | 707](#)
- [Benefits of using Segment Routing LSPs | 708](#)
- [Colored Static Segment Routing LSP | 708](#)
- [Non-Colored Static Segment Routing LSP | 709](#)
- [Static Segment Routing LSP Provisioning | 716](#)
- [Static Segment Routing LSP Limitations | 716](#)
- [Dynamic Creation of Segment Routing LSPs | 717](#)
- [Color-Based Mapping of VPN Services | 723](#)
- [Tunnel Templates for PCE-Initiated Segment Routing LSPs | 730](#)

Source packet routing or segment routing is a control-plane architecture that enables an ingress router to steer a packet through a specific set of nodes and links in the network without relying on the intermediate nodes in the network to determine the actual path it should take.

Introduction to Segment Routing LSPs

Segment routing leverages the source routing paradigm. A device steers a packet through an ordered list of instructions, called segments. A segment can represent any instruction, topological or service-based. A segment can have a local semantic to a segment routing node or to a global node within a segment routing domain. Segment routing enforces a flow through any topological path and service chain while maintaining per-flow state only at the ingress device to the segment routing domain. Segment routing can be directly applied to the MPLS architecture with no change on the forwarding plane. A segment is encoded as an MPLS label. An ordered list of segments is encoded as a stack of labels. The segment to process is on the top of the stack. Upon completion of a segment, the related label is popped from the stack.

Segment routing LSPs can either be dynamic or static in nature.

Dynamic segment routing LSPs—When a segment routing LSP is created either by an external controller and downloaded to an ingress device through Path Computation Element Protocol (PCEP) extensions, or from a BGP segment routing policy through BGP segment routing extensions, the LSP is dynamically provisioned. The segment list of the dynamic segment routing LSP is contained in the PCEP Explicit Route Object (ERO), or the BGP segment routing policy of the LSP.

Static segment routing LSPs—When a segment routing LSP is created on the ingress device through local configuration, the LSP is statically provisioned.

A static segment routing LSP can further be classified as colored and non-colored LSPs based on the configuration of the **color** statement at the **[edit protocols source-packet-routing source-routing-path *lsp-name*]** hierarchy level.

For example:

```
[edit protocols]
  source-packet-routing {
    source-routing-path lsp_name {
      to destination_address;
      color color_value;
      binding-sid binding-label;
      primary segment_list_1_name weight weight;
      ...
      primary segment_list_n_name weight weight;
      secondary segment_list_n_name;
      sr-preference sr_preference_value;
    }
  }
```

Here, each primary and secondary statement refers to a segment list.

```
[edit protocols]
  source-packet-routing {
    segment-list segment_list_name {
      hop_1_name label sid_label;
      ...
      hop_n_name label sid_label;
    }
  }
```

Benefits of using Segment Routing LSPs

- Static segment routing does not rely on per LSP forwarding state on transit routers. Hence, removing the need of provisioning and maintaining per LSP forwarding state in the core.
- Provide higher scalability to MPLS networks.

Colored Static Segment Routing LSP

IN THIS SECTION

- [Understanding Colored Static Segment Routing LSPs | 709](#)
- [Segment List of Colored Segment Routing LSPs | 709](#)

A static segment routing LSP configured with the **color** statement is called a colored LSP.

Understanding Colored Static Segment Routing LSPs

Similar to a BGP segment routing policy, the ingress route of the colored LSP is installed in the **inetcolor.0** or **inet6color.0** routing tables, with **destination-ip-address, color** as key for mapping IP traffic.

A static colored segment routing LSP may have a binding SID, for which a route is installed in the **mpls.0** routing table. This binding SID label is used to map labeled traffic to the segment routing LSP. The gateways of the route are derived from the segment list configurations under the primary and secondary paths.

Segment List of Colored Segment Routing LSPs

The colored static segment routing LSPs already provide support for first hop label mode of resolving an LSP. However, first hop IP mode is not supported for colored segment routing LSPs. Starting in Junos OS Release 19.1R1, a commit check feature is introduced to ensure that all the segment lists contributing to the colored routes have the minimum label present for all hops. If this requirement is not met, the commit is blocked.

Non-Colored Static Segment Routing LSP

IN THIS SECTION

- [Understanding Non-Colored Segment Routing LSPs | 709](#)
- [Segment List of Non-Colored Segment Routing LSPs | 710](#)

A static segment routing LSP that is configured without the **color** statement is a non-colored LSP. Similar to PCEP segment routing tunnels, the ingress route is installed in the **inet.3** or **inet6.3** routing tables.

Junos OS supports non-colored static segment routing LSPs on ingress routers. You can provision non-colored static segment routing LSP by configuring one source routed path and one or more segment lists. These segment lists can be used by multiple non-colored segment routing LSPs.

Understanding Non-Colored Segment Routing LSPs

The non-colored segment routing LSP has a unique name and a destination IP address. An ingress route to the destination is installed in the **inet.3** routing table with a default preference of 8 and a metric of 1. This route allows non-colored services to be mapped to the segment routing LSP pertaining to the destination. In case the non-colored segment routing LSP does not require an ingress route then the ingress route can be disabled. A non-colored segment routing LSP uses binding SID label to achieve segment routing LSP stitching. This label that can be used to model the segment routing LSP as a segment that may be further used to construct other segment routing LSPs in a hierarchical manner. The transit of the binding SID label, by default, has a preference of 8 and a metric of 1.

Starting in Junos OS Release 18.2R1, statically configured non-colored segment routing LSPs on the ingress device are reported to the Path Computation Element (PCE) through a Path Computation Element Protocol

(PCEP) session. These non-colored segment routing LSPs may have binding service identifier (SID) labels associated with them. With this feature, the PCE can use this binding SID label in the label stack to provision PCE-initiated segment routing LSP paths.

A non-colored segment routing LSP can have a maximum of 8 primary paths. If there are multiple operational primary paths then the packet forwarding engine (PFE) distributes traffic over the paths based on the load balancing factors like the weight configured on the path. This is equal cost multi path (ECMP) if none of the paths have a weight configured on them or weighted ECMP if at least one of the paths has a non-zero weight configured on the paths. In both the cases, when one or some of the paths fail, the PFE rebalances the traffic over the remaining paths that automatically leads to achieving path protection. A non-colored segment routing LSP can have a secondary path for dedicated path protection. Upon failure of a primary path, the PFE rebalances the traffic to the remaining functional primary paths. Otherwise, the PFE switches the traffic to the backup path, hence achieving path protection. A non-colored segment routing LSP may specify a metric at `[edit protocols source-packet-routing source-routing-path lsp-name]` for its ingress and binding-SID routes. Multiple non-colored segment routing LSPs have the same destination address that contribute to the next hop of the ingress route.

Multiple non-colored segment routing LSPs have the same destination address that contribute to the next hop of the ingress route. Each path, either primary or secondary, of each segment routing LSP is considered as a gateway candidate, if the path is functional and the segment routing LSP has the best preference of all these segment routing LSPs. However, the maximum number of gateways that the next-hop can hold cannot exceed the RPD multi-path limit, which is 128 by default. Extra paths are pruned, firstly secondary paths and then primary paths. A given segment list may be referred multiple times as primary or secondary paths by these segment routing LSPs. In this case, there are multiple gateways, each having a unique segment routing LSP tunnel ID. These gateways are distinct, although they have identical outgoing label stack and interface. A non-colored segment routing LSP and a colored segment routing LSP may also have the same destination address. However, they correspond to different destination addresses for ingress routes, as the colored segment routing LSP's destination address is constructed with both its destination address and color.

NOTE: In the case where a static non-colored segment routing LSP and a PCEP-created segment routing LSP co-exist and have the same to address that contributes to the same ingress route, if they also have the same preference. Otherwise, the segment routing LSP with the best preference is installed for the route.

Segment List of Non-Colored Segment Routing LSPs

A segment list consists of a list of hops. These hops are based on the SID label or an IP address. The number of SID labels in the segment list should not exceed the maximum segment list limit. You can configure the maximum segment list limit at the `[edit protocols source-packet-routing]` hierarchy level.

Prior to Junos OS Release 19.1R1, for a non-colored static segment routing LSP to be usable, the first hop of the segment list had to be an IP address of an outgoing interface and the second to *n*th hops could be

SID labels. Starting in Junos OS Release 19.1R1, this requirement does not apply, as the first hop of the non-colored static LSPs now provides support for SID labels, in addition to IP addresses. With the first hop label support, MPLS fast reroute (FRR) and weighted equal-cost multipath is enabled for resolving the static non-colored segment routing LSPs, similar to colored static LSPs.

For the first-hop label mode to take effect, you must include the **inherit-label-nexthops** statement globally or individually for a segment list, and the first hop of the segment list must include both IP address and label. If the first hop includes only IP address, the **inherit-label-nexthops** statement does not have any effect.

You can configure **inherit-label-nexthops** at any one of the following hierarchies. The **inherit-label-nexthops** statement takes effect only if the segment list first hop includes both IP address and label.

- **Segment list level**—At the `[edit protocols source-packet-routing segment-list segment-list-name]` hierarchy level.
- **Globally**—At the `[edit protocols source-packet-routing]` hierarchy level.

When the **inherit-label-nexthops** statement is configured globally, it takes precedence over the segment-list level configuration, and the **inherit-label-nexthops** configuration is applied to all the segment lists. When the **inherit-label-nexthops** statement is not configured globally, only segment lists with both labels and IP address present in the first hop, and configured with **inherit-label-nexthops** statement are resolved using SID labels.

For dynamic non-colored static LSPs, that is the PCEP-driven segment routing LSPs, the **inherit-label-nexthops** statement must be enabled globally, as the segment-level configuration is not applied.

[Table 22 on page 711](#) describes the mode of segment routing LSP resolution based on the first hop specification.

Table 22: Non-Colored Static LSP Resolution Based on First Hop Specification

First Hop Specification	Mode of LSP Resolution
IP address only For example: <pre> segment-list path-1 { hop-1 ip-address 172.0.12.2; hop-2 label 1000012; hop-3 label 1000013; hop-4 label 1000014; }</pre>	The segment list is resolved using the IP address.

Table 22: Non-Colored Static LSP Resolution Based on First Hop Specification (*continued*)

First Hop Specification	Mode of LSP Resolution
<p>SID only</p> <p>For example:</p> <pre>segment-list path-2 { hop-1 label 1000011; hop-2 label 1000012; hop-3 label 1000013; hop-4 label 1000014; }</pre>	<p>The segment list is resolved using SID labels.</p>
<p>IP address and SID (without the inherit-label-nexthops configuration)</p> <p>For example:</p> <pre>segment-list path-3 { hop1 { label 801006; ip-address 172.24.1.2; } hop-2 label 1000012; hop-3 label 1000013; hop-4 label 1000014; }</pre>	<p>By default, the segment list is resolved using IP address.</p>
<p>IP address and SID (with the inherit-label-nexthops configuration)</p> <p>For example:</p> <pre>segment-list path-3 { inherit-label-nexthops; hop1 { label 801006; ip-address 172.24.1.2; } hop-2 label 1000012; hop-3 label 1000013; hop-4 label 1000014; }</pre>	<p>The segment list is resolved using SID labels.</p>

You can use the **show route *ip-address* protocol spring-te active-path table inet.3** command to view the non-colored segment routing traffic-engineered LSPs having multiple segment lists installed in the inet.3 routing table.

For example:

user@host> **show route 7.7.7.7 protocol spring-te active-path table inet.3**

```
inet.3: 42 destinations, 59 routes (41 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

7.7.7.7/32          *[SPRING-TE/8] 00:01:25, metric 1, metric2 0
> to 11.1.1.2 via et-0/0/0.1, Push 801007
  to 21.1.1.2 via et-0/0/2.1, Push 801007
  to 11.102.1.2 via et-0/0/0.2, Push 801007, Push 801002(top)

  to 21.202.1.2 via et-0/0/2.2, Push 801007, Push 801005(top)

  to 11.103.1.2 via et-0/0/0.3, Push 801007, Push 801003(top)

  to 21.203.1.2 via et-0/0/2.3, Push 801007, Push 801006(top)

  to 11.104.1.2 via et-0/0/0.4, Push 801007, Push 801003, Push
801002(top)

  to 21.204.1.2 via et-0/0/2.4, Push 801007, Push 801006, Push
801005(top)
```


NOTE:

The first hop type of segment lists of a static segment routing LSP can cause a commit to fail, if:

- Different segment lists of a tunnel have different first hop resolution types. This is applicable to both colored and non-colored static segment routing LSPs. However, this does not apply for PCEP-driven LSPs; a system log message is generated for the mismatch in the first hop resolution type at the time of computing the path.

For example:

```
segment-list path-1 {
  hop-1 ip-address 172.0.12.2;
  hop-2 label 1000012;
  hop-3 label 1000013;
  hop-4 label 1000014;
}
segment-list path-2 {
  hop-1 label 1000011;
  hop-2 label 1000012;
  hop-3 label 1000013;
  hop-4 label 1000014;
}
source-routing-path lsp1 {
  to 172.10.10.1;
  primary {
    path-1;
    path-2;
  }
}
```

The commit of tunnel *lsp1* fails, as path-1 is of IP address mode and path-2 is of label mode.

- The binding SID is enabled for the static non-colored LSP whose segment list type is SID label.

For example:

```
segment-list path-3 {
  hop-1 label 1000011;
  hop-2 label 1000012;
  hop-3 label 1000013;
  hop-4 label 1000014;
}
source-routing-path lsp1 {
```

```

to 172.10.10.1;
binding-sid 333;
primary {
    path-3;
}
}

```

Configuring binding SID over label segment list is supported only for colored static LSPs and not for no-colored static LSPs.

Static Segment Routing LSP Provisioning

Segment provisioning is performed on per-router basis. For a given segment on a router, a unique service identifier (SID) label is allocated from a desired label pool which may be from the dynamic label pool for an adjacency SID label or from the segment routing global block (SRGB) for a prefix SID or node SID. The adjacency SID label can be dynamically allocated, which is the default behavior, or be allocated from a local static label pool (SRLB). A route for the SID label is then installed in the mpls.0 table.

Junos OS allows static segment routing LSPs by configuring the **segment** statement at the **[edit protocols mpls static-label-switched-path static-label-switched-path]** hierarchy level. A static segment LSP is identified by a unique SID label that falls under Junos OS static label pool. You can configure the Junos OS static label pool by configuring the **static-label-range static-label-range** statement at the **[edit protocols mpls label-range]** hierarchy level.

Static Segment Routing LSP Limitations

- Junos OS currently has a limitation that the next hop cannot be built to push more than the maximum segment list depth labels. So, a segment list with more than the maximum SID labels (excluding the SID label of the first hop which is used to resolve forwarding next-hop) is not usable for colored or non-colored segment routing LSPs. Also, the actual number allowed for a given segment routing LSP may be even lower than the maximum limit, if an MPLS service is on the segment routing LSP or the segment routing LSP is on a link or a node protection path. In all cases, the total number of service labels, SID labels, and link or node protection labels must not exceed the maximum segment list depth. You can configure the maximum segment list limit at **[edit protocols source-packet-routing]** hierarchy level. Multiple non-colored segment routing LSPs with less than or equal to the maximum SID labels can be stitched together to construct a longer segment routing LSP. This is called segment routing LSP stitching. It can be achieved using binding-SID label.
- The segment routing LSP stitching is actually performed at path level. If a non-colored segment routing LSP has multiple paths that is multiple segment lists, each path can be independently stitched to another non-colored segment routing LSP at a stitching point. A non-colored segment routing LSP which is dedicated to stitching may disable ingress route installation by configuring **no-ingress** statement at **[edit protocols source-packet-routing source-routing-path lsp-name]** hierarchy level.

- A maximum of 8 primary paths and 1 secondary path are supported per non-colored static segment routing LSP. If there is a violation in configuration, commit check fails with an error.
- If any segment-list is configured with more labels than the maximum segment list depth, the configuration commit check fails with an error.

Dynamic Creation of Segment Routing LSPs

IN THIS SECTION

- [Configuring Dynamic Segment Routing LSP Template | 717](#)
- [Resolving Dynamic Segment Routing LSPs | 718](#)
- [Considerations for Configuring Dynamic Creation of Segment Routing LSPs | 722](#)
- [Services Supported over Dynamic Segment Routing LSPs | 722](#)
- [Behavior With Multiple Tunnel Sources in Segment Routing | 723](#)
- [Dynamic Segment Routing LSPs Limitations | 723](#)

In segment routing networks that have each provider edge (PE) device connected to every other PE device, a large amount of configuration is required for setting up the segment routing label-switched paths (LSPs), although only a few segment routing traffic-engineered (SR-TE) paths may be used. You can enable BGP-triggered dynamic creation of these LSPs to reduce the amount of configuration in such deployments.

Configuring Dynamic Segment Routing LSP Template

To configure the template for enabling dynamic creation of segment routing LSPs, you must include the [spring-te](#) statement at the `[edit routing-options dynamic-tunnels]` hierarchy.

- The following is a sample configuration for color dynamic segment routing LSP template:

```
[edit routing-options]
dynamic-tunnels {
  <dynamic-tunnel-name> {
    spring-te {
      source-routing-path-template {
        <template-name1> color [c1 c2];
        <template-name2> color [c3];
        <template-name3> color-any;
      }
      destination-networks {
        <dest1>;
        <dest2>;
      }
    }
  }
}
```

```

    }
  }
}

```

- The following is a sample configuration for non-color dynamic segment routing LSP template:

```

dynamic-tunnels {
  <dynamic-tunnel-name> {
    spring-te {
      source-routing-path-template {
        <template-name1>;
      }
      destination-networks {
        <dest1>;
        <dest2>;
      }
    }
  }
}

```

Resolving Dynamic Segment Routing LSPs

IN THIS SECTION

- [Resolving Colored Dynamic Segment Routing LSP | 718](#)
- [Resolving Uncolored Dynamic Segment Routing LSPs | 719](#)
- [Dynamic Segment Routing LSP Sample Configuration | 719](#)

Resolving Colored Dynamic Segment Routing LSP

When the BGP prefixes are assigned with color community, they initially get resolved over the catch-all-route-for-that-particular-color policy, and in turn, the SR-TE template on which the BGP prefix should be resolved onto is identified. The destinations SID is then derived from the BGP payload prefix next-hop attribute. For example, if the next hop of the BGP payload prefix is an IP address that belongs to Device A, then the node-SID of Device A is taken and a corresponding label is prepared and pushed to the bottom of the stack. The BGP payload prefix is resolved in a color-only mode, where the node-SID of Device A is at the bottom of the final label stack, and the SR-TE path labels are on top.

The final LSP template name is a combination of prefix, color, and tunnel name; for example, **<prefix>:<color>:dt-srte-<tunnel-name>**. The color in the LSP name is displayed in hexadecimal format, and the format of the tunnel name is similar to that of RSVP-triggered tunnel LSP names.

To successfully resolve a colored destination network, the color should have a valid template mapping, either to a specific color, or through the **color-any** template. Without a valid mapping, the tunnel is not created and the BGP route requesting for resolution remains unresolved.

Resolving Uncolored Dynamic Segment Routing LSPs

The catch-all routes for non-colored LSPs are added to the inet.3 routing table. The non-colored tunnel destination must be configured in a different **spring-te** configuration with only one template name in the mapping list. This template name is used for all the tunnel routes matching any of the destination networks configured under the same **spring-te** configuration. These tunnels are similar to RSVP tunnels in functionality.

The final LSP template name is a combination of prefix and tunnel name; for example, **<prefix>:dt-srte-<tunnel-name>**.

Dynamic Segment Routing LSP Sample Configuration

IN THIS SECTION

- [Colored Dynamic Segment Routing LSPs | 719](#)
- [Non-Colored Dynamic Segment Routing LSPs | 720](#)
- [Unresolved Dynamic Segment Routing LSP | 721](#)

The dynamic segment routing LSP template always carries a partial path. The last hop node SID is derived automatically at the tunnel creation time depending on the protocol next-hop address (PNH) node SID. The same template can be used by multiple tunnels to different destinations. In such cases, the partial path remains the same, and only the last hop changes depending on the PNH. Dynamic segment routing LSP templates are not common to a single tunnel, as a result a full path cannot be carried on it. You can use a segment list if a full path is to be used.

Colored Dynamic Segment Routing LSPs

Sample configuration for colored dynamic segment routing LSPs:

```
protocols source-packet-routing {
  source-routing-path-template sr_lsp1 {
    primary sr_sl1
    primary sr_sl2 weight 2
    sr-preference 180;
  }
}
dynamic-tunnels tunnel1 {
  spring-te {
    source-routing-path-template {
```

```

        sr_lsp1 color [ 123 124 125 ];
        sr_lsp2 color-any
    }
    destination-networks {
        22.33.44.0/24;
    }
}
}
}

```

For the above-mentioned sample configuration, the route entries are as follows:

inetcolor.0 tunnel route: 22.33.44.0-0/24 --> RT_NH_TUNNEL

inetcolor6.0 tunnel route: ffff::22.33.44.0-0/120 --> RT_NH_TUNNEL

BGP prefix to tunnel mapping:

R1(prefix) -> 22.33.44.55-101(PNH) LSP tunnel name = 22.33.44.55:65:dt-srte-tunnel1

R1(prefix) -> ffff::22.33.44.55-101(PNH) LSP tunnel name = 22.33.44.55:65:dt-srte-tunnel1

R1(prefix) -> ffff::22.33.44.55-124(PNH) LSP tunnel name = 22.33.44.55:7c:dt-srte-tunnel1

inetcolor.0 tunnel route:

22.33.44.55-101/64 --> <next-hop>

22.33.44.55-124/64 --> <next-hop>

inetcolor6.0 tunnel route:

ffff::22.33.44.55-101/160 --> <next-hop>

ffff::22.33.44.55-124/160 --> <next-hop>

Non-Colored Dynamic Segment Routing LSPs

Sample configuration for non-colored dynamic segment routing LSPs:

```

protocols source-packet-routing {
    source-routing-path-template sr_lsp1 {
        primary sr_sl1
        primary sr_sl2 weight 2
        sr-preference 180;
    }
}
dynamic-tunnels {
    tunnel1 {
        spring-te {
            source-routing-path-template {

```



```

source-routing-path-template {
    sr_lsp1 color [120 121 122 123];
}
destination-networks {
    22.33.44.0/24;
    1.1.1.0/24;
}
}
}

```

For the above-mentioned sample configuration, the route entries are as follows:

inetcolor.0 tunnel route: 22.33.44.0 - 0/24 --> RT_NH_TUNNEL 1.1.1.0 - 0 /24 --> RT_NH_TUNNEL

inetcolor6.0 tunnel route: ffff::22.33.44.0 - 0/120 --> RT_NH_TUNNEL ffff::1.1.1.0 - 0 /24 --> RT_NH_TUNNEL

BGP prefix to tunnel mapping: R1(prefix) -> 22.33.44.55-124(PNH) Tunnel will not be created. (Template not found for the color).

Considerations for Configuring Dynamic Creation of Segment Routing LSPs

When configuring the dynamic creation of segment routing LSPs, take the following into consideration:

- A template can be assigned with a color object. When the dynamic tunnel **spring-te** configuration includes a template with a color object, you must configure all other templates with color objects as well. All destinations are assumed to be colored within that configuration.
- A template can have a list of colors defined on it, or can be configured with the **color-any** option. Both these options can coexist in the same **spring-te** configuration. In such cases, templates assigned with specific colors have a higher preference.
- In a **spring-te** configuration, only one template can be defined with the **color-any** option.
- The color-to-template mapping is done on a one-to-one basis. One color cannot map to multiple templates.
- The template name should be configured in the **spring-te** statement under the **[edit protocols]** hierarchy, and should have the **primary** option enabled.
- Colored and non-colored destinations cannot co-exist in the same **spring-te** configuration.
- You cannot configure same destination networks, with or without color, under different **spring-te** configuration statements.
- In non-colored **spring-te** configuration, only one template can be configured without color object.

Services Supported over Dynamic Segment Routing LSPs

The following services are supported over colored dynamic segment routing LSPs:

- Layer 3 VPN

- BGP EVPN
- Export policy services

The following services are supported over non-colored dynamic segment routing LSPs:

- Layer 3 VPN
- Layer 2 VPN
- Multipath configurations

Behavior With Multiple Tunnel Sources in Segment Routing

When two sources download routes to the same destination from segment routing (for example static and dynamic sourced tunnels), then the segment routing preference is used for choosing the active route entry. A higher value has greater preference. In case the preference remains the same, then the tunnel source is used to determine the route entry.

Dynamic Segment Routing LSPs Limitations

The dynamic SR-TE LSPs do not support the following features and functionalities:

- IPv6 segment routing tunnels.
- Static tunnels.
- 6PE is not supported.
- Distributed CSPF.
- sBFD and LDP tunnelling is not supported for dynamic SR-TE LSPs and in a template.
- Install and B-SID routes in a template.

Color-Based Mapping of VPN Services

IN THIS SECTION

- [VPN Service Coloring | 724](#)
- [Specifying VPN Service Mapping Mode | 727](#)
- [Color-IP Protocol Next Hop Resolution | 728](#)
- [Fallback to IP Protocol Next Hop Resolution | 729](#)
- [Supported and Unsupported Features for Color-Based Mapping of VPN Services | 729](#)

You can specify color as a protocol next hop constraint (in addition to the IPv4 or IPv6 address) for resolving transport tunnels over static colored and BGP segment routing traffic-engineered (SRTE) LSPs. This is called the color-IP protocol next hop resolution, where you are required to configure a resolution-map

and apply to the VPN services. With this feature, you can enable color-based traffic steering of Layer 2 and Layer 3 VPN services.

Junos OS supports colored SRTE LSPs associated with a single color. The color-based mapping of VPN services feature is supported on static colored LSPs and BGP SRTE LSPs.

VPN Service Coloring

IN THIS SECTION

- [Egress Color Assignment | 724](#)
- [Ingress Color Assignment | 726](#)

In general, a VPN service may be assigned a color on the egress router where the VPN NLRI is advertised, or on an ingress router where the VPN NLRI is received and processed.

You can assign a color to the VPN services at different levels:

- Per routing instance.
- Per BGP group.
- Per BGP neighbor.
- Per prefix.

Once you assign a color, the color is attached to a VPN service in the form of BGP color extended community.

You can assign multiple colors to a VPN service, referred to as multi-color VPN services. In such cases, the last color attached is considered as the color of the VPN service, and all other colors are ignored.

Multiple colors are assigned by egress and/or ingress devices through multiple policies in the following order:

- BGP export policy on the egress device.
- BGP import policy on the ingress device.
- VRF import policy on the ingress device.

The two modes of VPN service coloring are:

Egress Color Assignment

In this mode, the egress device (that is, the advertiser of the VPN NLRI) is responsible for coloring the VPN service. To enable this mode, you can define a routing policy, and apply it in the VPN service's

routing-instance **vrf-export**, group export, or group neighbor export at the **[edit protocols bgp]** hierarchy level. The VPN NLRI is advertised by BGP with the specified color extended community.

For example:

```
[edit routing-options]
community red-comm {
  members color:0:50;
}
```

```
[edit policy-options]
policy-statement pol-color {
  term t1 {
    from {
      [any match conditions];
    }
    then {
      community add red-comm;
      accept;
    }
  }
}
```

```
[edit routing-instances]
vpn-X {
  ...
  vrf-export pol-color ...;
}
```

Or

NOTE: When you apply the routing policy as an export policy of a BGP group or BGP neighbor, you must include the **vpn-apply-export** statement at the BGP, BGP group, or BGP neighbor level in order for the policy to take an effect on the VPN NLRI.

```
[edit protocols bgp]
group PEs {
  ...
  neighbor PE-A {
    export pol-color ...;
```

```

        vpn-apply-export;
    }
}

```

The routing policies are applied to Layer 3 VPN prefix NLRIs, Layer 2 VPN NLRIs, and EVPN NLRIs. The color extended community is inherited by all the VPN routes, imported, and installed in the target VRFs on one or multiple ingress devices.

Ingress Color Assignment

In this mode, the ingress device (that is, the receiver of the VPN NLRI) is responsible for coloring the VPN service. To enable this mode, you can define a routing policy, and apply it to the VPN service's routing-instance **vrf-import**, group import, or group neighbor import at the **[edit protocols bgp]** hierarchy level. All the VPN routes matching the routing policy is attached with the specified color extended community.

For example:

```

[edit routing-options]
community red-comm {
    members color:0:50;
}

```

```

[edit policy-options]
policy-statement pol-color {
    term t1 {
        from {
            [any match conditions];
        }
        then {
            community add red-comm;
            accept;
        }
    }
}

```

```

[edit routing-instances]
vpn-Y {
    ...
    vrf-import pol-color ...;
}

```

Or

```
[edit protocols bgp]
group PEs {
  ...
  neighbor PE-B {
    import pol-color ...;
  }
}
```

Specifying VPN Service Mapping Mode

To specify flexible VPN service mapping modes, you must define a policy using the **resolution-map** statement, and refer the policy in a VPN service's routing-instance **vrf-import**, group import, or group neighbor import at the **[edit protocols bgp]** hierarchy level. All the VPN routes matching the routing policy are attached with the specified resolution-map.

For example:

```
[edit policy-options]
resolution-map map-A {
  <mode-1>;
  <mode-2>;
  ...
}
policy-statement pol-resolution {
  term t1 {
    from {
      [any match conditions];
    }
    then {
      resolution-map map-A;
      accept;
    }
  }
}
```

You can apply import policy to the VPN service's routing-instance.

```
[edit routing-instances]
vpn-Y {
  ...
  vrf-import pol-resolution ...;
}
```

You can also apply the import policy to a BGP group or BGP neighbor.

```
[edit protocols bgp]
group PEs {
  ...
  neighbor PE-B {
    import pol-resolution ...;
  }
}
```

NOTE: Each VPN service mapping mode should have a unique name defined in the resolution-map. Only a single entry of IP-color is supported in the resolution-map, where the VPN route(s) are resolved using a colored-IP protocol next hop in the form of **ip-address:color**.

Color-IP Protocol Next Hop Resolution

The protocol next hop resolution process is enhanced to support colored-IP protocol next hop resolution. For a colored VPN service, the protocol next hop resolution process takes a color and a resolution-map, builds a colored-IP protocol next hop in the form of *IP-address:color*, and resolves the protocol next hop in the inet6color.0 routing table.

You must configure a policy to support multipath resolution of colored Layer 2 VPN, Layer 3 VPN, or EVPN services over colored LSPs. The policy must then be applied with the relevant RIB table as the resolver import policy.

For example:

```
[edit policy-options]
policy-statement mpath {
  then multipath-resolve;
}
```

```
[edit routing-options]
resolution {
  rib bgp.l3vpn.0 {
    inetcolor-import mpath;
  }
}
resolution {
  rib bgp.l3vpn-inet6.0 {
    inet6color-import mpath;
  }
}
```



```

resolution {
  rib bgp.l2vpn.0 {
    inetcolor-import mpath;
  }
}
resolution {
  rib mpls.0 {
    inetcolor-import mpath;
  }
}
resolution {
  rib bgp.evpn.0 {
    inetcolor-import mpath;
  }
}

```

Fallback to IP Protocol Next Hop Resolution

If a colored VPN service does not have a resolution-map applied to it, the VPN service ignores its color and falls back to the IP protocol next hop resolution. Conversely, if a non-colored VPN service has a resolution-map applied to it, the resolution-map is ignored, and the VPN service uses the IP protocol next hop resolution.

The fallback is a simple process from colored SRTE LSPs to LDP LSPs, by using a RIB group for LDP to install routes in inet{6}color.0 routing tables. A longest prefix match for a colored-IP protocol next hop ensures that if a colored SRTE LSP route does not exist, an LDP route with a matching IP address should be returned.

Supported and Unsupported Features for Color-Based Mapping of VPN Services

The following features and functionality are supported with color-based mapping of VPN services:

- BGP Layer 3 VPN
- BGP Layer 2 VPN (Kompella Layer 2 VPN)
- BGP EVPN
- Resolution-map with a single IP-color option.
- Colored IPv4 and IPv6 protocol next hop resolution.
- Routing information base (also known as routing table) group based fallback to LDP LSP in inetcolor.0 routing table.
- Colored SRTE LSP.
- Virtual platforms.

- 64-bit Junos OS.
- Logical systems.

The following features and functionality are not supported with color-based mapping of VPN services:

- Colored MPLS LSPs, such as RSVP, LDP, BGP-LU, static.
- Layer 2 circuit
- FEC-129 BGP auto-discovered and LDP-signaled Layer 2 VPN.
- VPLS
- MVPN
- IPv4 and IPv6 using resolution-map.
- BGP labeled unicast.

Tunnel Templates for PCE-Initiated Segment Routing LSPs

You can configure a tunnel template for PCE-initiated segment routing LSPs to pass down two additional parameters for these LSPs - Bidirectional forwarding detection (BFD) and LDP tunneling.

When a PCE-Initiated segment routing LSP is being created, the LSP is checked against policy statements (if any) and if there is a match, the policy applies the configured template for that LSP. The template configuration is inherited only if it is not provided by the LSP source (PCEP); for example, metric.

To configure a template:

1. Include the [source-routing-path-template](#) statement at the **[edit protocols source-packet-routing]** hierarchy level. You can configure the additional BFD and LDP tunneling parameters here.
2. Include the *source-routing-path-template-map* statement at the **[edit protocols source-packet-routing]** hierarchy level to list the policy statements against which the PCE-initiated LSP should be checked.
3. Define a policy to list the LSPs on which the template should be applied.

The **from** statement can include either the LSP name or LSP regular expression using the **lsp** and **lsp-regex** match conditions. These options are mutually exclusive, so you can specify only one option at a given point in time.

The **then** statement must include the **sr-te-template** option with an accept action. This applies the template to the PCE-initiated LSP.

Take the following into consideration when configuring a template for PCE-initiated LSPs:

- Template configuration is not applicable to statically configured segment routing LSPs, or any other client's segment routing LSP.
- PCEP-provided configuration has precedence over template configuration.

- PCEP LSP does not inherit template segment-list configuration.

Example: Configuring Static Segment Routing Label Switched Path

IN THIS SECTION

- [Requirements | 731](#)
- [Overview | 731](#)
- [Configuration | 732](#)
- [Verification | 745](#)

This example shows how to configure static segment routing label switched paths (LSPs) in MPLS networks. This configuration helps to bring higher scalability to MPLS networks.

Requirements

This example uses the following hardware and software components:

- Seven MX Series 5G Universal Routing Platforms
- Junos OS Release 18.1 or later running on all the routers

Before you begin, be sure you configure the device interfaces.


Overview

Junos OS a set of explicit segment routing paths are configured on the ingress router of a non-colored static segment routing tunnel by configuring the **segment-list** statement at the **[edit protocols source-packet-routing]** hierarchy level. You can configure segment routing tunnel by configuring the **source-routing-path** statement at **[edit protocols source-packet-routing]** hierarchy level. The segment routing tunnel has a destination address and one or more primary paths and optionally secondary paths that refer to the segment list. Each segment list consists of a sequence of hops. For non-colored static segment routing tunnel, the first hop of the segment list specifies an immediate next hop IP address and the second to Nth hop specifies the segment identifies (SID) labels corresponding to the link or node which the path traverses. The route to the destination of the segment routing tunnel is installed in inet.3 table.

Topology

In this example, configure layer 3 VPN on the provider edge routers PE1 and PE5. Configure the MPLS protocol on all the routers. The segment routing tunnel is configured from router PE1 to router PE5 with a primary path configured on router PE1 and router PE5 . Router PE1 is also configured with secondary path for path protection. The transit routers PE2 to PE4 are configured with adjacency SID labels with label pop and an outgoing interface.

Figure 54: Static Segment Routing Label Switched Path

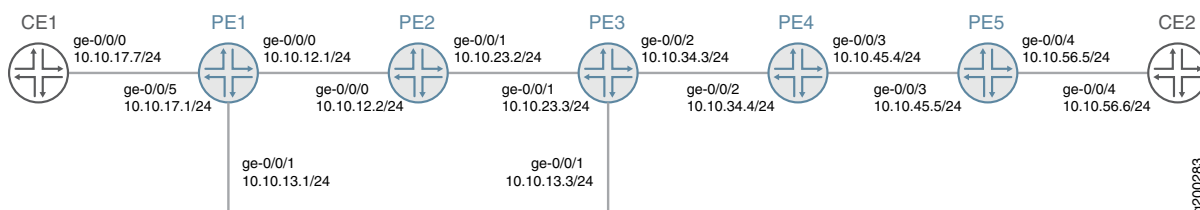

Configuration

IN THIS SECTION

- [Configuring Device PE1 | 736](#)
- [Configuring Device PE2 | 742](#)
- [Results | 743](#)

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

PE1

```
set interfaces ge-0/0/0 unit 0 family inet address 10.10.12.1/24
set interfaces ge-0/0/0 unit 0 family mpls maximum-labels 5
set interfaces ge-0/0/1 unit 0 family inet address 10.10.13.1/24
set interfaces ge-0/0/1 unit 0 family mpls maximum-labels 5
set interfaces ge-0/0/5 unit 0 family inet address 10.10.17.1/24
set routing-options autonomous-system 65000
set routing-options forwarding-table export load-balance-policy
set routing-options forwarding-table chained-composite-next-hop ingress l3vpn
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols bgp group pe type internal
set protocols bgp group pe local-address 192.168.147.211
set protocols bgp group pe family inet-vpn unicast
set protocols bgp group pe neighbor 192.168.146.181
```

```

set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols source-packet-routing segment-list sl-15-primary hop-1 ip-address 10.10.13.3
set protocols source-packet-routing segment-list sl-15-primary hop-2 label 1000134
set protocols source-packet-routing segment-list sl-15-primary hop-3 label 1000145
set protocols source-packet-routing segment-list sl-15-backup hop-1 ip-address 10.10.12.2
set protocols source-packet-routing segment-list sl-15-backup hop-2 label 1000123
set protocols source-packet-routing segment-list sl-15-backup hop-3 label 1000134
set protocols source-packet-routing segment-list sl-15-backup hop-4 label 1000145
set protocols source-packet-routing source-routing-path lsp-15 to 192.168.146.181
set protocols source-packet-routing source-routing-path lsp-15 binding-sid 1000999
set protocols source-packet-routing source-routing-path lsp-15 primary sl-15-primary
set protocols source-packet-routing source-routing-path lsp-15 secondary sl-15-backup
set policy-options policy-statement VPN-A-export term a from protocol ospf
set policy-options policy-statement VPN-A-export term a from protocol direct
set policy-options policy-statement VPN-A-export term a then community add VPN-A
set policy-options policy-statement VPN-A-export term a then accept
set policy-options policy-statement VPN-A-export term b then reject
set policy-options policy-statement VPN-A-import term a from protocol bgp
set policy-options policy-statement VPN-A-import term a from community VPN-A
set policy-options policy-statement VPN-A-import term a then accept
set policy-options policy-statement VPN-A-import term b then reject
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf from route-filter 10.10.0.0/16 orlonger
set policy-options policy-statement bgp-to-ospf then accept
set policy-options policy-statement load-balance-policy then load-balance per-packet
set policy-options community VPN-A members target:65000:1
set routing-instances VRF1 instance-type vrf
set routing-instances VRF1 interface ge-0/0/5.0
set routing-instances VRF1 route-distinguisher 192.168.147.211:1
set routing-instances VRF1 vrf-import VPN-A-import
set routing-instances VRF1 vrf-export VPN-A-export
set routing-instances VRF1 vrf-table-label
set routing-instances VRF1 protocols ospf export bgp-to-ospf
set routing-instances VRF1 protocols ospf area 0.0.0.0 interface ge-0/0/5.0

```

PE2

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.12.2/24

```

```

set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 10.10.23.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set protocols mpls static-label-switched-path adj-23 segment 1000123
set protocols mpls static-label-switched-path adj-23 segment next-hop 10.10.23.3
set protocols mpls static-label-switched-path adj-23 segment pop
set protocols mpls static-label-switched-path adj-21 segment 1000221
set protocols mpls static-label-switched-path adj-21 segment next-hop 10.10.12.1
set protocols mpls static-label-switched-path adj-21 segment pop
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0

```

PE3

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.13.3/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 10.10.23.3/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 10.10.34.3/24
set interfaces ge-0/0/2 unit 0 family mpls
set protocols mpls static-label-switched-path adj-34 segment 1000134
set protocols mpls static-label-switched-path adj-34 segment next-hop 10.10.34.4
set protocols mpls static-label-switched-path adj-34 segment pop
set protocols mpls static-label-switched-path adj-32 segment 1000232
set protocols mpls static-label-switched-path adj-32 segment next-hop 10.10.23.2
set protocols mpls static-label-switched-path adj-32 segment pop
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0

```

PE4

```

set interfaces ge-0/0/2 unit 0 family inet address 10.10.34.4/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 10.10.45.4/24
set interfaces ge-0/0/3 unit 0 family mpls
set protocols mpls static-label-switched-path adj-45 segment 1000145
set protocols mpls static-label-switched-path adj-45 segment next-hop 10.10.45.5
set protocols mpls static-label-switched-path adj-45 segment pop
set protocols mpls static-label-switched-path adj-43 segment 1000243
set protocols mpls static-label-switched-path adj-43 segment next-hop 10.10.34.3
set protocols mpls static-label-switched-path adj-43 segment pop
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0

```

PE5

```

set interfaces ge-0/0/3 unit 0 family inet address 10.10.45.5/24
set interfaces ge-0/0/3 unit 0 family mpls maximum-labels 5
set interfaces ge-0/0/4 unit 0 family inet address 10.10.56.5/24
set routing-options autonomous-system 65000
set protocols mpls interface ge-0/0/3.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols bgp group pe type internal
set protocols bgp group pe local-address 192.168.146.181
set protocols bgp group pe family inet-vpn unicast
set protocols bgp group pe neighbor 192.168.147.211
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols bfd sbfd local-discriminator 0.0.0.32 minimum-receive-interval 1000
set protocols source-packet-routing segment-list sl-51 hop-1 ip-address 10.10.45.4
set protocols source-packet-routing segment-list sl-51 hop-2 label 1000243
set protocols source-packet-routing segment-list sl-51 hop-3 label 1000232
set protocols source-packet-routing segment-list sl-51 hop-4 label 1000221
set protocols source-packet-routing source-routing-path lsp-51 to 192.168.147.211
set protocols source-packet-routing source-routing-path lsp-51 primary sl-51
set policy-options policy-statement VPN-A-export term a from protocol ospf
set policy-options policy-statement VPN-A-export term a from protocol direct
set policy-options policy-statement VPN-A-export term a then community add VPN-A

```

```

set policy-options policy-statement VPN-A-export term a then accept
set policy-options policy-statement VPN-A-export term b then reject
set policy-options policy-statement VPN-A-import term a from protocol bgp
set policy-options policy-statement VPN-A-import term a from community VPN-A
set policy-options policy-statement VPN-A-import term a then accept
set policy-options policy-statement VPN-A-import term b then reject
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf from route-filter 10.10.0.0/16 orlonger
set policy-options policy-statement bgp-to-ospf then accept
set policy-options community VPN-A members target:65000:1
set routing-instances VRF1 instance-type vrf
set routing-instances VRF1 interface ge-0/0/4.0
set routing-instances VRF1 route-distinguisher 192.168.146.181:1
set routing-instances VRF1 vrf-import VPN-A-import
set routing-instances VRF1 vrf-export VPN-A-export
set routing-instances VRF1 vrf-table-label
set routing-instances VRF1 protocols ospf export bgp-to-ospf
set routing-instances VRF1 protocols ospf area 0.0.0.0 interface ge-0/0/4.0

```

CE1

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.17.7/24
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0

```

CE2

```

set interfaces ge-0/0/4 unit 0 family inet address 10.10.56.6/24
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0

```

Configuring Device PE1

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the interfaces.


```
[edit interfaces]
set ge-0/0/0 unit 0 family inet address 10.10.12.1/24
set ge-0/0/0 unit 0 family mpls maximum-labels 5

set ge-0/0/1 unit 0 family inet address 10.10.13.1/24
set ge-0/0/1 unit 0 family mpls maximum-labels 5

set ge-0/0/5 unit 0 family inet address 10.10.17.1/24
```

2. Configure autonomous system number and options to control packet forwarding routing options.

```
[edit routing-options]
set autonomous-system 65000
set forwarding-table export load-balance-policy
set forwarding-table chained-composite-next-hop ingress l3vpn
```

3. Configure the interfaces with the MPLS protocol and configure the MPLS label range.

```
[edit protocols mpls]
set interface ge-0/0/0.0
set interface ge-0/0/1.0
set label-range static-label-range 1000000 1000999
```

4. Configure the type of peer group, local address, protocol family for NLRI in updates, and IP address of a neighbor for the peer group.

```
[edit protocols bgp]
set group pe type internal
set group pe local-address 192.168.147.211
set group pe family inet-vpn unicast
set group pe neighbor 192.168.146.181
```

5. Configure the protocol area interfaces.

```
[edit protocols ospf]
set area 0.0.0.0 interface ge-0/0/0.0
set area 0.0.0.0 interface lo0.0
set area 0.0.0.0 interface ge-0/0/1.0
```

6. Configure the IPv4 address and labels of primary and secondary paths for source routing-traffic engineering (TE) policies of protocol source packet routing (SPRING).

```
[edit protocols source-packet-routing segment-list]
set sl-15-primary hop-1 ip-address 10.10.13.3
set sl-15-primary hop-2 label 1000134
set sl-15-primary hop-3 label 1000145
set sl-15-backup hop-1 ip-address 10.10.12.2
set sl-15-backup hop-2 label 1000123
set sl-15-backup hop-3 label 1000134
set sl-15-backup hop-4 label 1000145
```

7. Configure destination IPv4 address, binding SID label, primary, and secondary source routing path for protocol SPRING.

```
[edit protocols source-packet-routing source-routing-path]
set lsp-15 to 192.168.146.181
set lsp-15 binding-sid 1000999
set lsp-15 primary sl-15-primary
set lsp-15 secondary sl-15-backup
```

8. Configure policy options.

```
[edit policy-options policy-statement]
set VPN-A-export term a from protocol ospf
set VPN-A-export term a from protocol direct
set VPN-A-export term a then community add VPN-A
set VPN-A-export term a then accept
set VPN-A-export term b then reject
set VPN-A-import term a from protocol bgp
set VPN-A-import term a from community VPN-A
set VPN-A-import term a then accept
set VPN-A-import term b then reject
set bgp-to-ospf from protocol bgp
set bgp-to-ospf from route-filter 10.10.0.0/16 orlonger
set bgp-to-ospf then accept
set load-balance-policy then load-balance per-packet
```

9. Configure BGP community information.

```
[edit policy-options]
```

```
set community VPN-A members target:65000:1
```

10. Configure routing instance VRF1 with instance type, interface, router distinguisher, VRF import, export and table label. Configure export policy and interface of area for protocol OSPF.

```
[edit routing-instances VRF1]
set instance-type vrf
set interface ge-0/0/5.0
set route-distinguisher 192.168.147.211:1
set vrf-import VPN-A-import
set vrf-export VPN-A-export
set vrf-table-label
set protocols ospf export bgp-to-ospf
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show policy-options**, **show protocols**, **show routing-options**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 55.1.12.1/24;
    }
    family mpls {
      maximum-labels 5;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 55.1.13.1/24;
    }
    family mpls {
      maximum-labels 5;
    }
  }
}
```

```

ge-0/0/5 {
  unit 0 {
    family inet {
      address 55.1.17.1/24;
    }
  }
}

```

user@PE1# show routing-options

```

autonomous-system 65000;
forwarding-table {
export load-balance-policy;
  chained-composite-next-hop {
    ingress {
      l3vpn;
    }
  }
}

```

user@PE1# show protocols

```

mpls {
  interface ge-0/0/0.0;
  interface ge-0/0/1.0;
  label-range {
    static-label-range 1000000 1000999;
  }
}
bgp {
  group pe {
    type internal;
    local-address 128.9.147.211;
    family inet-vpn {
      unicast;
    }
    neighbor 128.9.146.181;
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-0/0/0.0;
    interface lo0.0;
    interface ge-0/0/1.0;
  }
}

```

```

    }
}
bfd {
}
source-packet-routing {
    segment-list sl-15-primary {
        hop-1 ip-address 55.1.13.3;
        hop-2 label 1000134;
        hop-3 label 1000145;
    }
    segment-list sl-15-backup {
        hop-1 ip-address 55.1.12.2;
        hop-2 label 1000123;
        hop-3 label 1000134;
        hop-4 label 1000145;
    }
    source-routing-path lsp-15 {
        to 128.9.146.181;
        binding-sid 1000999;
        primary {
            sl-15-primary;
        }
        secondary {
            sl-15-backup;
        }
    }
}
}

```

```

user@PE1# show policy-options
policy-statement VPN-A-export {
    term a {
        from protocol [ ospf direct ];
        then {
            community add VPN-A;
            accept;
        }
    }
    term b {
        then reject;
    }
}
policy-statement VPN-A-import {
    term a {
        from {

```

```

        protocol bgp;
        community VPN-A;
    }
    then accept;
}
term b {
    then reject;
}
}
policy-statement bgp-to-ospf {
    from {
        protocol bgp;
        route-filter 55.1.0.0/16 orlonger;
    }
    then accept;
}
policy-statement load-balance-policy {
    then {
        load-balance per-packet;
    }
}
community VPN-A members target:65000:1;

```

```

user@PE1# show routing-instances
VRF1 {
    instance-type vrf;
    interface ge-0/0/5.0;
    route-distinguisher 128.9.147.211:1;
    vrf-import VPN-A-import;
    vrf-export VPN-A-export;
    vrf-table-label;
    protocols {
        ospf {
            export bgp-to-ospf;
            area 0.0.0.0 {
                interface ge-0/0/5.0;
            }
        }
    }
}

```

Configuring Device PE2

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

1. Configure the interfaces.

```
[edit interfaces]
set ge-0/0/0 unit 0 family inet address 10.10.12.2/24
set ge-0/0/0 unit 0 family mpls

set ge-0/0/1 unit 0 family inet address 10.10.23.2/24
set ge-0/0/1 unit 0 family mpls
```

2. Configure the static LSP for protocol MPLS.

```
[edit protocols mpls static-label-switched-path]
set adj-23 segment 1000123
set adj-23 segment next-hop 10.10.23.3
set adj-23 segment pop
set adj-21 segment 1000221
set adj-21 segment next-hop 10.10.12.1
set adj-21 segment pop
```

3. Configure interfaces and static label range for protocol MPLS.

```
[edit protocols mpls]
set interface ge-0/0/0.0
set interface ge-0/0/1.0
set label-range static-label-range 1000000 1000999
```

4. Configure interfaces for protocol OSPF.

```
[edit protocols ospf area 0.0.0.0]
set interface ge-0/0/0.0
set interface ge-0/0/1.0
```

Results

From configuration mode on router PE2, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

user@PE2# **show interfaces**

```
ge-0/0/0 {
  unit 0 {
    family inet {
      address 55.1.12.2/24;
    }
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 55.1.23.2/24;
    }
    family mpls;
  }
}
```

user@PE2# **show protocols**

```
mpls {
  static-label-switched-path adj-23 {
    segment {
      1000123;
      next-hop 55.1.23.3;
      pop;
    }
  }
  static-label-switched-path adj-21 {
    segment {
      1000221;
      next-hop 55.1.12.1;
      pop;
    }
  }
  interface ge-0/0/0.0;
  interface ge-0/0/1.0;
  label-range {
    static-label-range 1000000 1000999;
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-0/0/0.0;
    interface ge-0/0/1.0;
```



```
}
}
```

Verification

IN THIS SECTION

- Verifying Route Entry of Routing Table inet.3 of Router PE1 | 745
- Verifying Route Table Entries of Routing Table mpls.0 of Router PE1 | 746
- Verifying SPRING Traffic Engineered LSP of Router PE1 | 746
- Verifying SPRING Traffic Engineered LSPs on the Ingress Router of Router PE1 | 747
- Verifying the Routing Table Entries of Routing Table mpls.0 of Router PE2 | 748
- Verifying the Status of Static MPLS LSP Segments of Router PE2 | 749

Confirm that the configuration is working properly.

Verifying Route Entry of Routing Table inet.3 of Router PE1

Purpose

Verify the route entry of routing table inet.3 of router PE1.

Action

From operational mode, enter the **show route table inet.3** command.

```
user@PE1> show route table inet.3
```

```
inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.146.181/32    *[SPRING-TE/8] 03:09:26, metric 1
                    > to 10.10.13.3 via ge-0/0/1.0, Push 1000145, Push 1000134(top)

                    to 10.10.12.2 via ge-0/0/0.0, Push 1000145, Push 1000134,
                    Push 1000123(top)
```

Meaning

The output displays the ingress routes of segment routing tunnels.

Verifying Route Table Entries of Routing Table mpls.0 of Router PE1

Purpose

Verify the route entries of routing table mpls.0

Action

From operational mode, enter the **show route table mpls.0** command.

user@PE1> **show route table mpls.0**

```
mpls.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 03:25:52, metric 1
           Receive
1          *[MPLS/0] 03:25:52, metric 1
           Receive
2          *[MPLS/0] 03:25:52, metric 1
           Receive
13         *[MPLS/0] 03:25:52, metric 1
           Receive
16         *[VPN/0] 03:25:52
           > via lsi.0 (VRF1), Pop
1000999    *[SPRING-TE/8] 03:04:03, metric 1
           > to 10.10.13.3 via ge-0/0/1.0, Swap 1000145, Push 1000134(top)

           to 10.10.12.2 via ge-0/0/0.0, Swap 1000145, Push 1000134,
           Push 1000123(top)
```

Meaning

The output displays the SID labels of segment routing tunnels.

Verifying SPRING Traffic Engineered LSP of Router PE1

Purpose

Verify SPRING traffic engineered LSPs on the ingress routers.

Action

From operational mode, enter the **show spring-traffic-engineering overview** command.

user@PE1> **show spring-traffic-engineering overview**

```

Overview of SPRING-TE:
  Route preference: 8
  Number of LSPs: 1 (Up: 1, Down: 0)
  External controllers:
    < Not configured >

```

Meaning

The output displays the overview of SPRING traffic engineered LSPs on the ingress router.

Verifying SPRING Traffic Engineered LSPs on the Ingress Router of Router PE1

Purpose

Verify SPRING traffic engineered LSPs on the ingress router.

Action

From operational mode, enter the **show spring-traffic-engineering lsp detail** command.

```
user@PE1# show spring-traffic-engineering lsp detail
```

```

Name: lsp-15
To: 192.168.146.181
State: Up
  Path: sl-15-primary
  Outgoing interface: ge-0/0/1.0
  BFD status: N/A (Up: 0, Down: 0)
  SR-ERO hop count: 3
    Hop 1 (Strict):
      NAI: IPv4 Adjacency ID, 0.0.0.0 -> 10.10.13.3
      SID type: None
    Hop 2 (Strict):
      NAI: None
      SID type: 20-bit label, Value: 1000134
    Hop 3 (Strict):
      NAI: None
      SID type: 20-bit label, Value: 1000145
  Path: sl-15-backup
  Outgoing interface: ge-0/0/0.0
  BFD status: N/A (Up: 0, Down: 0)
  SR-ERO hop count: 4
    Hop 1 (Strict):
      NAI: IPv4 Adjacency ID, 0.0.0.0 -> 10.10.12.2
      SID type: None

```

```

Hop 2 (Strict):
  NAI: None
  SID type: 20-bit label, Value: 1000123
Hop 3 (Strict):
  NAI: None
  SID type: 20-bit label, Value: 1000134
Hop 4 (Strict):
  NAI: None
  SID type: 20-bit label, Value: 1000145

Total displayed LSPs: 1 (Up: 1, Down: 0)

```

Meaning

The output displays details of SPRING traffic engineered LSPs on the ingress router

Verifying the Routing Table Entries of Routing Table mpls.0 of Router PE2

Purpose

Verify the routing table entries of routing table mpls.0 of router PE2.

Action

From operational mode, enter the **show route table mpls.0** command.

```
user@PE2> show route table mpls.0
```

```

mpls.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 03:22:29, metric 1
            Receive
1          *[MPLS/0] 03:22:29, metric 1
            Receive
2          *[MPLS/0] 03:22:29, metric 1
            Receive
13         *[MPLS/0] 03:22:29, metric 1
            Receive
1000123    *[MPLS/6] 03:22:29, metric 1
            > to 10.10.23.3 via ge-0/0/1.0, Pop
1000123(S=0) *[MPLS/6] 03:22:29, metric 1
            > to 10.10.23.3 via ge-0/0/1.0, Pop
1000221    *[MPLS/6] 03:22:29, metric 1
            > to 10.10.12.1 via ge-0/0/0.0, Pop

```

```
1000221(S=0)          *[MPLS/6] 03:22:29, metric 1
                      > to 10.10.12.1 via ge-0/0/0.0, Pop
```

Verifying the Status of Static MPLS LSP Segments of Router PE2

Purpose

Verify the status of MPLS LSP segments of router PE2.

Action

From operational mode, enter the **show mpls static-lsp** command.

```
user@PE2> show mpls static-lsp
```

```
Ingress LSPs:
Total 0, displayed 0, Up 0, Down 0

Transit LSPs:
Total 0, displayed 0, Up 0, Down 0

Bypass LSPs:
Total 0, displayed 0, Up 0, Down 0

Segment LSPs:
LSPname                SID-label    State
adj-21                 1000221      Up
adj-23                 1000123      Up
Total 2, displayed 2, Up 2, Down 0
```

Meaning

The output displays the status of static MPLS LSP segments of router PE2.

Release History Table

Release	Description
19.4R1	You can configure a tunnel template for PCE-initiated segment routing LSPs to pass down two additional parameters for these LSPs - Bidirectional forwarding detection (BFD) and LDP tunneling.
19.1R1	Starting in Junos OS Release 19.1R1, a commit check feature is introduced to ensure that all the segment lists contributing to the colored routes have the minimum label present for all hops.
19.1R1	Starting in Junos OS Release 19.1R1, this requirement does not apply, as the first hop of the non-colored static LSPs now provides support for SID labels, in addition to IP addresses. With the first hop label support, MPLS fast reroute (FRR) and weighted equal-cost multipath is enabled for resolving the static non-colored segment routing LSPs, similar to colored static LSPs.
18.2R1	Starting in Junos OS Release 18.2R1, statically configured non-colored segment routing LSPs on the ingress device are reported to the Path Computation Element (PCE) through a Path Computation Element Protocol (PCEP) session.

Routing Engine-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution

IN THIS SECTION

- [Understanding RE-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution | 751](#)
- [Configuring RE-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution | 752](#)
- [Example | 755](#)
- [Verify That LSPs Are Configured for Static Segment-Routing Tunnels and That S-BFD Session Status Is Visible | 756](#)
- [Verify the Segment-Routing Tunnel Route with a Primary Next Hop and a Secondary Next Hop | 758](#)
- [Verify the S-BFD Session of the Primary Path | 758](#)

You can run seamless Bidirectional Forwarding Detection (S-BFD) over non-colored and colored label-switched paths (LSPs) with first-hop label resolution, using S-BFD as a fast mechanism to detect path failures.

Understanding RE-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution

IN THIS SECTION

- [S-BFD Static Segment-Routing Tunnels for First-Hop Labels | 751](#)
- [Limitations | 752](#)

S-BFD Static Segment-Routing Tunnels for First-Hop Labels

IN THIS SECTION

- [LSP-level S-BFD | 752](#)
- [S-BFD Parameters | 752](#)

Segment-routing architecture enables ingress nodes in a core network to steer traffic through explicit paths through the network. The segment-routing traffic engineering (TE) next hop is a list or lists of segment identifiers (SIDs). These segment lists represent paths in the network that you want incoming traffic to take. The incoming traffic may be labeled or IP traffic and the forwarding operation at the ingress node may be a label swap or a destination-based lookup to steer the traffic onto these segment-routing TE paths in the forwarding path.

You can run seamless BFD (S-BFD) over non-colored and colored static segment-routing LSPs with first-hop label resolution and use S-BFD as a fast mechanism to detect path failures and to trigger global convergence. S-BFD requires fewer state changes than BFD requires, thus speeding up the reporting of path failures.

Given a segment-routing tunnel with one or multiple primary LSPs and optionally a secondary LSP, you can enable S-BFD on any of those LSPs. If an S-BFD session goes down, the software updates the segment-routing tunnel's route by deleting the next hops of the failed LSPs. If the first-hop label of the LSP points to more than one immediate next hop, the kernel continues to send S-BFD packets if *at least* one next hop is available (underlying next-hop reachability failure detection must be faster than the duration of the S-BFD detection timer).

NOTE: This model is supported for auto-translate-derived LSPs.

LSP-level S-BFD

An S-BFD session is created for each unique label-stack+address-family combination. You can configure identical segment lists and enable S-BFD for all of them. The segment lists that have identical label-stack+address-family combinations share the same S-BFD session. The source address for the S-BFD session is set to the least configured loopback address (except the special addresses) under the main instance.

NOTE: Ensure that the chosen source address is routable.

The address family of an LSP is derived based on the address family of the “to” address in the segment-routing TE tunnel. The state of the LSP with S-BFD configured also depends on whether BFD is up—if S-BFD is configured for an LSP, the LSP route isn’t calculated until S-BFD reports the path is alive.

S-BFD Parameters

The following S-BFD parameters are supported for segment-routing TE paths:

- Remote discriminator
- Minimum interval
- Multiplier
- No router alert option

In S-BFD, each responder may have multiple discriminators. The discriminators may be advertised by IGP to other routers, or they may be statically configured on these routers. On an initiator, a particular discriminator is chosen as the remote discriminator for an S-BFD session by static configuration, based on the decision or resolution made by you or by a central controller. When multiple LSPs are created with the same key label stack and S-BFD is enabled on each of them with different parameters, the aggressive value of each parameter is used in the shared S-BFD session. For the discriminator parameter, the lowest value is considered as most aggressive. Similarly for the router alert option, if one of the configurations no router alert is configured, the derived S-BFD parameter will have no router alert option.

Limitations

- Only global repair is supported.
- Even though S-BFD detects failures depending on the configured timer values, convergence time depends on the global repair time (*seconds*).

Configuring RE-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution

To enable LSP-level S-BFD for a segment list, you configure the **bfd-liveness-detection** configuration statement at the **[edit protocols source-packet-routing source-routing-path *lsp-path-name* primary segment-list-name]** hierarchy and the **[edit protocols source-packet-routing source-routing-path *lsp-path-name* secondary segment-list-name]** hierarchy.

The following steps give the basic configuration and then operation of S-BFD with first-hop label resolution:

- The steps immediately below describe the outlines of the basic *configuration*:
 1. On an ingress router, you configure one or more segment lists with first-hop labels for a static segment-routing tunnel to use as primary and secondary paths.
 2. On the ingress router, you configure the static segment-routing tunnel, with either multiple primary paths (for load balancing), or one primary path and one secondary path (for path protection). Each primary or secondary path (LSP) refers to one of the segment lists you configured already, creating routes using the next hops derived from the first-hop labels from contributing LSPs.
 3. On the ingress router, you enable per-packet load-balancing so that routes resolving over ingress routes and the binding-SID route (which all have first-hop labels) install all active paths in the Packet Forwarding Engine. An S-BFD session under an LSP protects all routes that use that LSP.
 4. On the egress router of the segment-routing tunnel, you configure S-BFD responder mode with a local discriminator D, creating a distributed S-BFD listener session for D on each FPC.
 5. On the ingress router, you configure S-BFD for any LSP for which you want to see path-failure detection. You specify a remote-discriminator D to match the local S-BFD discriminator of the egress router. An S-BFD initiator session is created with the LSP label-stack+address-family combination as the key, if an initiator session doesn't already exist for the current LSP key. The S-BFD parameters in the case of a matching BFD session are reevaluated with the new shared LSPs taken into consideration. When the S-BFD parameters are derived, the aggressive value of each parameter is chosen.

The steps immediately below describe basic *operation* :

1. The S-BFD initiator session runs in a centralized mode on the Routing Engine. The software tracks S-BFD session up and down states.
2. When the S-BFD state moves to UP, the LSP is considered for the relevant routes.
3. On the ingress router, if the software detects an S-BFD session DOWN, a session-down notification is sent to the routing daemon (RPD), and RPD deletes the next hop of the failed LSPs from the segment-routing tunnel's route.
4. The total traffic loss in the procedure is bound to the S-BFD failure detection time and the global repair time. The S-BFD failure detection time is determined by the S-BFD minimum-interval and multiplier parameters. The global repair time depends on the segment-routing TE process time and the redownload of the routes to forwarding.

LSP label stacks are changed as follows:

1. The particular LSP is detached from the existing S-BFD session. If the existing S-BFD session has at least one LSP referring to it, the old BFD session is preserved, but the S-BFD parameters are re-evaluated so that the aggressive parameter values among the existing LSP sessions is chosen. Also, the name of the S-BFD session is updated to the least one if there is a change. If the old S-BFD session has no more LSPs attached to it, that S-BFD session is removed.

2. The software attempts to find an existing BFD session that matches the `new-label-stack+address-family` combination value; if such a match exists, the LSP refers to that existing S-BFD session. The S-BFD session is re-evaluated for any change in parameters or session name similarly to the re-evaluations in step 1.
3. If there is no matching BFD session in the system, a new BFD session is created, and the S-BFD parameters are derived from this LSP.

NOTE: An S-BFD session's minimum interval and multiplier determine the failure detection time for the session. The repair time additionally depends on the global repair time.

The following output shows configuration statements you would use for a colored LSP with primary LSPs:

```
[edit protocols]
source-packet-routing {
  source-routing-path lsp_name {
    to destination_address;
    color color_value;
    binding-sid binding-label;
    primary segment_list_1_name weight weight;
    ... {
      bfd-liveness-detection {
        sbfd {
          remote-discriminator value;
        }
      }
    }
  }
}
```

At the responder side, you must configure the correct discriminator:

```
[edit protocols bfd]
sbfd {
  local-discriminator value;
}
```

By default, router alerts are configured for S-BFD packets. When the MPLS header is removed at the responder end, the packet is sent to the host for processing without a destination address lookup for the packet. If you enable the `no-router-alert` option on the ingress router, the `router-alert` option is removed from the IP options and hence from the egress side. You must configure the destination address explicitly in `lo0`; otherwise the packet is discarded, and S-BFD remains down.

```
[edit interfaces lo0 unit 0 family inet]
address 127.0.0.1/32;
```

You can use a new trace flag, **bfd**, to trace BFD activities:

```
user@host# set protocols source-packet-routing traceoptions flag bfd
```

Example

The following configuration is an example of a non-colored static segment-routing tunnel with LSP protection.

```
protocols {
  source-packet-routing {
    source-routing-path ncsrlsp5 {
      to 10.10.10.10;
      primary {
        ncsrpath12 {
          weight 1;
          bfd-liveness-detection {
            sbfd {
              remote-discriminator 100;
            }
            minimum-interval 100;
          }
        }
      }
      ncsrpath13 {
        weight 2;
        bfd-liveness-detection {
          sbfd {
            remote-discriminator 100;
          }
          minimum-interval 100;
        }
      }
      ncsrpath14 {
        weight 3;
        bfd-liveness-detection {
          sbfd {
            remote-discriminator 100;
          }
          minimum-interval 100;
        }
      }
    }
  }
}
```

```

ncsrpath15 {
  weight 4;
  bfd-liveness-detection {
    sbfd {
      remote-discriminator 100;
    }
    minimum-interval 100;
  }
}
segment-list ncsrpath12 {
  hop1 label 50191;
  hop2 label 801000;
}
segment-list ncsrpath13 {
  hop1 label 50191;
  hop2 label 801001;
  hop3 label 801000;
}
segment-list ncsrpath14 {
  hop1 label 801000;
}
segment-list ncsrpath15 {
  hop1 label 801002;
  hop2 label 801000;
}
}
}
}
}

```

Verify That LSPs Are Configured for Static Segment-Routing Tunnels and That S-BFD Session Status Is Visible

Purpose

Use the **show spring-traffic-engineering lsp detail** command to show LSPs for static segment-routing tunnels, with S-BFD session status.

Action

```

user@host> show spring-traffic-engineering lsp detail

Name: abc
To: 77.77.77.77
State: Up
  Path: s11

```

```

Outgoing interface: NA
BFD status: Up BFD name: V4-sl1
SR-ERO hop count: 3
  Hop 1 (Strict):
    NAI: None
    SID type: 20-bit label, Value: 801007
  Hop 2 (Strict):
    NAI: None
    SID type: 20-bit label, Value: 22222
  Hop 3 (Strict):
    NAI: None
    SID type: 20-bit label, Value: 3333
Path: sl2
Outgoing interface: NA
BFD status: Up BFD name: V4-sl2
SR-ERO hop count: 2
  Hop 1 (Strict):
    NAI: None
    SID type: 20-bit label, Value: 801006
  Hop 2 (Strict):
    NAI: None
    SID type: 20-bit label, Value: 121212
Path: sl2
Outgoing interface: NA
BFD status: Up BFD name: V4-sl2
SR-ERO hop count: 2
  Hop 1 (Strict):
    NAI: None
    SID type: 20-bit label, Value: 801006
  Hop 2 (Strict):
    NAI: None
    SID type: 20-bit label, Value: 121212

Total displayed LSPs: 1 (Up: 1, Down: 0)

```

Because many LSPs can share the same BFD session, when the first LSP with a unique label-stack+address-family combination comes up, the name of the S-BFD session uses address-family+lsp-name. If more LSPs later share the same session, the name of the session can change to address-family+least-lsp-name, without affecting the state of the S-BFD session. The name of the S-BFD session appears in output from the **show bfd session extensive** command as well. Output for each LSP shows the S-BFD status as well as the S-BFD name it is referring to as shown in the preceding example

as **BFD status: Up BFD name: V4-sl2**. Because there might not be one S-BFD session per LSP, the LSP-level S-BFD counters are not displayed.

Verify the Segment-Routing Tunnel Route with a Primary Next Hop and a Secondary Next Hop

Purpose

On the Routing Engine of the ingress router, verify the segment-routing tunnel route with a primary next hop and a secondary next hop.

Action

```
user@host> show route table inet.3

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

128.9.146.157/32    *[SPRING-TE/8] 00:43:16, metric 1
                   > to 55.1.12.2 via ge-0/0/0.0, Push 1000145, Push 1000134,
Push 1000123(top)
                   to 55.1.12.2 via ge-0/0/1.0, Push 1000934, Push 1000923(top)
```

Verify the S-BFD Session of the Primary Path

Purpose

On the Routing Engine of the ingress router, verify the S-BFD session of the primary path.

Action

```
user@host> show bfd session extensive

Address          State      Interface    Detect    Transmit
Time           Interval  Multiplier
127.0.0.1        Up         Up           4.000    1.000    4
Client SPRING-TE, TX interval 1.000, RX interval 1.000
Session up time 00:40:53, previous down time 00:02:08
Local diagnostic None, remote diagnostic None
Remote state Up, version 1
Session type: Multi hop BFD (Seamless)
Min async interval 1.000, min slow interval 1.000
Adaptive async TX interval 1.000, RX interval 1.000
Local min TX interval 1.000, minimum RX interval 1.000, multiplier 4
Remote min TX interval 1.000, min RX interval 0.001, multiplier 4
Local discriminator 28, remote discriminator 32
Echo mode disabled/inactive
Remote is control-plane independent
```

```

Path-Name V4-s1-1

1 sessions, 1 clients
Cumulative transmit rate 1.0 pps, cumulative receive rate 1.0 pps

```

NOTE: On the Routing Engine of the ingress router, verify the S-BFD session of the secondary path also similarly.

Configuring Static Adjacency Segment Identifier for Aggregate Ethernet Member Links Using Single-Hop Static LSP

In a network where aggregate Ethernet (AE) bundles are in use, an aggregate link could be bundle of any number of physical links. The traffic sent over these AE bundle interfaces are forwarded on any of the member links of an AE interface. The traffic can take any physical link based on the hash defined for load-balancing the traffic, which makes it difficult to isolate which links have gone bad or are dropping the traffic. One way to test the forwarding path available in the network is to add a single-hop static label switched path (LSP) with the next hop pointing to a specific member link of the AE interface.

The default label operation for the static LSPs must be pop and forward. When a packet hits these labeled routes, the packet is forwarded on to a specific member link. A unique label is used to identify the member link. These labels are referred to as adjacency segment identifiers (SID) and are statically provisioned.

You can control the flow of the packets in the network by constructing a label stack in controller, which includes the labels allocated by all transit static LSP. Operation, Administration, and Maintenance (OAM) packets are crafted and injected into the network with entire label-stack.

When a packet hits this label route the label is popped and traffic is forwarded on the member link specified in the configuration. A destination MAC is chosen while forwarding the packet, the destination Mac is the aggregate interface MAC address (selected based on nexthop address configured).

When the member link goes down and aggregate interface is up, then the route corresponding to that member link is deleted. When an aggregate interface goes down, then all the routes corresponding to member links of the aggregate interface are deleted. When the child physical interface is LACP detached but the child physical interface is up, the labeled route for the child link is deleted. In the case of LACP detach, if the member link is up and invalid forwarding state, then the OAM packets is dropped in the PFE when the child physical interface is detached.

Use the following example to configure single-hop static LSP for an AE member link.

1. Define a static label range.

```
user@host# set protocols mpls label-range static-label-range 1000000 1048575;
```

NOTE: We recommend configuring the default static label range of 1000000-1048575 for the static LSP. If you wish to configure a label range other than the default static label range, configure multiple ranges.

2. Create a static LSP for the AE member link from the segment routing local block (SRLB) pool of the static label range.

```
user@host# set protocols mpls static-label-switched-path static-lsp transit 1000001 pop next-hop
10.1.1.1 member-interface ge-0/0/0
```

In this configuration, a transit labelled router is installed in mpls.0, pops the label, and forwards the packet down the next hop. The next hop address is mandatory for broadcast interfaces (such as ge-, xe-, ae-) and the if-name is used for P2P interfaces (such as so-). The address is required for broadcast interfaces because the next hop IP address is used to pick the destination MAC address. The source MAC address for the packet is the AE's MAC address.

The sample outputs display the member link name in the next hop output:

show mpls static-lsp extensive

```
user@host> show mpls static-lsp extensive
```

```
Ingress LSPs:
Total 0, displayed 0, Up 0, Down 0

Transit LSPs:
LSpname: static-lsp1, Incoming-label: 1000001
  Description: verify-static-lsp-behavior
  State: Up, Sub State: Traffic via primary but unprotected
  Nexthop: 10.2.1.1 Via ae0.0 -> ge-0/0/0
  LabelOperation: Pop
  Created: Thu May 25 15:31:26 2017
  Bandwidth: 0 bps
  Statistics: Packets 0, Bytes 0
```

show route label label-name extensive

```
user@host> show route label 1000001 extensive
```



```

mpls.0: 14 destinations, 14 routes (14 active, 0 holddown, 0 hidden)
1000001 (1 entry, 1 announced)
TSI:
KRT in-kernel 1000001/52 -> {Pop      }
    *MPLS   Preference: 6
            Next hop type: Router, Next hop index: 611
            Address: 0xb7a17b0
            Next-hop reference count: 2
            Next hop: 10.2.1.1 via ae0.0 -> ge-0/0/0 weight 0x1, selected
            Label operation: Pop
            Load balance label: None;
            Label element ptr: 0xb7a1800
            Label parent element ptr: 0x0
            Label element references: 1
            Label element child references: 0
            Label element lsp id: 0
            Session Id: 0x15d
            State: <Active Int>
            Age: 3:13:15      Metric: 1
            Validation State: unverified
            Task: MPLS
            Announcement bits (1): 1-KRT
            AS path: I
            Label 188765184

```

Release History Table

Release	Description
19.4R1	You can configure a tunnel template for PCE-initiated segment routing LSPs to pass down two additional parameters for these LSPs - Bidirectional forwarding detection (BFD) and LDP tunneling.
19.1R1	Starting in Junos OS Release 19.1R1, a commit check feature is introduced to ensure that all the segment lists contributing to the colored routes have the minimum label present for all hops.
19.1R1	Starting in Junos OS Release 19.1R1, this requirement does not apply, as the first hop of the non-colored static LSPs now provides support for SID labels, in addition to IP addresses. With the first hop label support, MPLS fast reroute (FRR) and weighted equal-cost multipath is enabled for resolving the static non-colored segment routing LSPs, similar to colored static LSPs.
18.2R1	Starting in Junos OS Release 18.2R1, statically configured non-colored segment routing LSPs on the ingress device are reported to the Path Computation Element (PCE) through a Path Computation Element Protocol (PCEP) session.

RELATED DOCUMENTATION

| [MPLS Overview](#) | 2

5

PART

MPLS Signalling Protocols

RSVP | 764

LDP | 850

RSVP

IN THIS CHAPTER

- [RSVP Overview | 764](#)
- [RSVP Configuration | 779](#)

RSVP Overview

IN THIS SECTION


- [RSVP Overview | 765](#)
- [RSVP Operation Overview | 765](#)
- [Understanding the RSVP Signaling Protocol | 766](#)
- [RSVP-TE protocol extensions for FRR | 769](#)
- [Junos OS RSVP Protocol Implementation | 771](#)
- [RSVP Authentication | 771](#)
- [RSVP and IGP Hello Packets and Timers | 772](#)
- [RSVP Message Types | 772](#)
- [Understanding RSVP Automatic Mesh | 774](#)
- [RSVP Reservation Styles | 775](#)
- [RSVP Refresh Reduction | 776](#)
- [MTU Signaling in RSVP | 777](#)
- [How the Correct MTU Is Signaled in RSVP | 777](#)
- [Determining an Outgoing MTU Value | 778](#)
- [MTU Signaling in RSVP Limitations | 778](#)

RSVP Overview

The RSVP protocol is used by routers to deliver quality-of-service (QoS) requests to all nodes along data flow path(s) and to establish and maintain state for the requested service. RSVP requests generally result in resource reservations in each node along the data path. RSVP has the following attributes:

- Makes resource reservations for unidirectional data flows.
- Allows the receiver of a data flow to initiate and maintain the resource reservation used for that flow, as shown in [Figure 55 on page 765](#).
- Maintains a soft state in routers and hosts, providing graceful support for dynamic membership changes and automatic adaptation to routing changes.
- Depends upon present and future routing protocols, but is not a routing protocol itself.
- Provides several reservation models or styles to fit a variety of applications.
- Supports both IPv4 and IPv6 packets that can be sent over RSVP-signaled LSPs.

Figure 55: RSVP Reservation Request and Data Flow

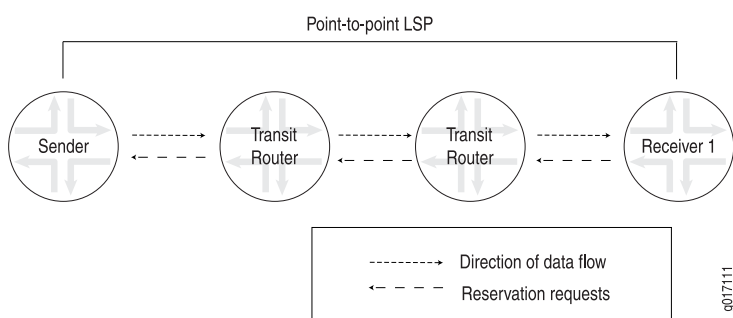

RSVP Operation Overview

RSVP creates independent sessions to handle each data flow. A session is identified by a combination of the destination address, an optional destination port, and a protocol. Within a session, there can be one or more senders. Each sender is identified by a combination of its source address and source port. An out-of-band mechanism, such as a session announcement protocol or human communication, is used to communicate the session identifier to all senders and receivers.

A typical RSVP session involves the following sequence of events:

1. A potential sender starts sending RSVP path messages to the session address.
2. A receiver, wanting to join the session, registers itself if necessary. For example, a receiver in a multicast application would register itself with IGMP.
3. The receiver receives the path messages.

4. The receiver sends appropriate Resv messages toward the sender. These messages carry a flow descriptor, which is used by routers along the path to make reservations in their link-layer media.
5. The sender receives the Resv message and then starts sending application data.

This sequence of events is not necessarily strictly synchronized. For example, receivers can register themselves before receiving path messages from the sender, and application data can flow before the sender receives Resv messages. Application data that is delivered before the actual reservation contained in the Resv message typically is treated as best-effort, non-real-time traffic with no CoS guarantee.

Understanding the RSVP Signaling Protocol

IN THIS SECTION

- [RSVP Fundamentals | 766](#)
- [Bandwidth Reservation Requirement | 767](#)
- [Explicit Route Objects | 767](#)
- [Constrained Shortest Path First | 768](#)
- [Link Coloring | 769](#)

RSVP is a signaling protocol that handles bandwidth allocation and true traffic engineering across an MPLS network. Like LDP, RSVP uses discovery messages and advertisements to exchange LSP path information between all hosts. However, RSVP also includes a set of features that control the flow of traffic through an MPLS network. Whereas LDP is restricted to using the configured IGP's shortest path as the transit path through the network, RSVP uses a combination of the Constrained Shortest Path First (CSPF) algorithm and Explicit Route Objects (EROs) to determine how traffic is routed through the network.

Basic RSVP sessions are established in exactly the same way that LDP sessions are established. By configuring both MPLS and RSVP on the appropriate transit interfaces, you enable the exchange of RSVP packets and the establishment of LSPs. However, RSVP also lets you configure link authentication, explicit LSP paths, and link coloring.

This topic contains the following sections:

RSVP Fundamentals

RSVP uses unidirectional and simplex flows through the network to perform its function. The inbound router initiates an RSVP path message and sends it downstream to the outbound router. The path message contains information about the resources needed for the connection. Each router along the path begins to maintain information about a reservation.

When the path message reaches the outbound router, resource reservation begins. The outbound router sends a reservation message upstream to the inbound router. Each router along the path receives the reservation message and sends it upstream, following the path of the original path message. When the inbound router receives the reservation message, the unidirectional network path is established.

The established path remains open as long as the RSVP session is active. The session is maintained by the transmission of additional path and reservation messages that report the session state every 30 seconds. If a router does not receive the maintenance messages for 3 minutes, it terminates the RSVP session and reroutes the LSP through another active router.

Bandwidth Reservation Requirement

When a bandwidth reservation is configured, reservation messages propagate the bandwidth value throughout the LSP. Routers must reserve the bandwidth specified across the link for the particular LSP. If the total bandwidth reservation exceeds the available bandwidth for a particular LSP segment, the LSP is rerouted through another LSR. If no segments can support the bandwidth reservation, LSP setup fails and the RSVP session is not established.

Explicit Route Objects

Explicit Route Objects (EROs) limit LSP routing to a specified list of LSRs. By default, RSVP messages follow a path that is determined by the network IGP's shortest path. However, in the presence of a configured ERO, the RSVP messages follow the path specified.


EROs consist of two types of instructions: loose hops and strict hops. When a loose hop is configured, it identifies one or more transit LSRs through which the LSP must be routed. The network IGP determines the exact route from the inbound router to the first loose hop, or from one loose hop to the next. The loose hop specifies only that a particular LSR be included in the LSP.

When a strict hop is configured, it identifies an exact path through which the LSP must be routed. Strict-hop EROs specify the exact order of the routers through which the RSVP messages are sent.

You can configure loose-hop and strict-hop EROs simultaneously. In this case, the IGP determines the route between loose hops, and the strict-hop configuration specifies the exact path for particular LSP path segments.

[Figure 56 on page 768](#) shows a typical RSVP-signaled LSP that uses EROs.

Figure 56: Typical RSVP-Signaled LSP with EROs

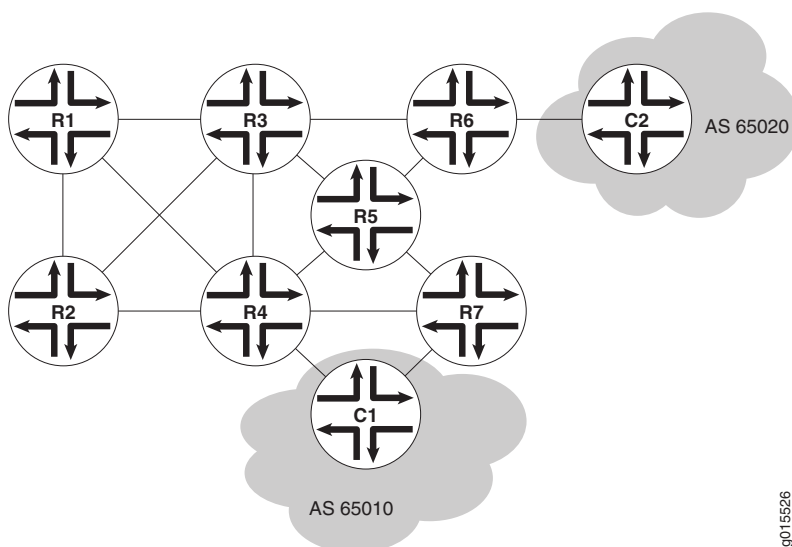

In the topology shown in [Figure 56 on page 768](#), traffic is routed from Host C1 to Host C2. The LSP can pass through Routers R4 or Router R7. To force the LSP to use R4, you can set up either a loose-hop or strict-hop ERO that specifies R4 as a hop in the LSP. To force a specific path through Router R4, R3, and R6, configure a strict-hop ERO through the three LSRs.

Constrained Shortest Path First

Whereas IGPs use the Shortest Path First (SPF) algorithm to determine how traffic is routed within a network, RSVP uses the Constrained Shortest Path First (CSPF) algorithm to calculate traffic paths that are subject to the following constraints:

- LSP attributes—Administrative groups such as link coloring, bandwidth requirements, and EROs
- Link attributes—Colors on a particular link and available bandwidth

These constraints are maintained in the traffic engineering database (TED). The database provides CSPF with up-to-date topology information, the current reservable bandwidth of links, and the link colors.

In determining which path to select, CSPF follows these rules:

- Computes LSPs one at a time, beginning with the highest priority LSP—the one with the lowest setup priority value. Among LSPs of equal priority, CSPF starts with those that have the highest bandwidth requirement.
- Prunes the traffic engineering database of links that are not full duplex and do not have sufficient reservable bandwidth.
- If the LSP configuration includes the **include** statement, prunes all links that do not share any included colors.
- If the LSP configuration includes the **exclude** statement, prunes all links that contain excluded colors. If a link does not have a color, it is accepted.

- Finds the shortest path toward the LSP's outbound router, taking into account any EROs. For example, if the path must pass through Router A, two separate SPF algorithms are computed: one from the inbound router to Router A and one from Router A to the outbound router.
- If several paths have equal cost, chooses the one with a last-hop address the same as the LSP's destination.
- If several equal-cost paths remain, selects the path with the least number of hops.
- If several equal-cost paths remain, applies CSPF load-balancing rules configured on the LSP.

Link Coloring

RSVP allows you to configure administrative groups for CSPF path selection. An administrative group is typically named with a color, assigned a numeric value, and applied to the RSVP interface for the appropriate link. Lower numbers indicate higher priority.

After configuring the administrative group, you can either exclude, include, or ignore links of that color in the TED:

- If you exclude a particular color, all segments with an administrative group of that color are excluded from CSPF path selection.
- If you include a particular color, only those segments with the appropriate color are selected.
- If you neither exclude nor include the color, the metrics associated with the administrative groups and applied on the particular segments determine the path cost for that segment.

The LSP with the lowest total path cost is selected into the TED.

RSVP-TE protocol extensions for FRR

Starting with Junos OS Release 16.1, RSVP Traffic Engineering (TE) protocol extensions to support Refresh-interval Independent RSVP (RI-RSVP) defined RFC 8370 for fast reroute (FRR) facility protection were introduced to allow greater scalability of label-switched paths (LSPs) faster convergence times and decrease RSVP signaling message overhead from periodic refreshes. Junos RSVP-TE runs in enhanced FRR aka RI-RSVP mode by default that includes protocol extensions to support RI-RSVP for FRR facility bypass originally specified in RFC 4090.

The RI-RSVP protocol extensions implemented in Junos are fully backward compatible. In mixed environments, where a subset of LSPs traverse nodes that do not include this feature, Junos RSVP-TE running in enhanced FRR mode will automatically turn off the new protocol extensions in its signaling exchanges with nodes that do not support the new extensions.

As part of enhanced FRR profile, a number of changes were made and new defaults adopted. These are listed here.

- RSVP-TE runs “enhanced” FRR, or RI-RSVP mode, by default, which includes enhancements to facilitate scaled up scenarios. These new protocol extensions can be disabled on a router with the `no-enhanced-frr-bypass` command.
- RSVP refresh reduction extensions defined in RFC 2961 are enabled by default. The user can disable them with the `no-reliable` command (see below).

NOTE: Node-id based Hellos are enabled by default as enhanced FRR or RI-RSVP extensions require the exchange of Node-id based Hello messages. Node-id based Hellos can be disabled with `node-hello` command. As refresh-reduction extensions and node-id based Hello messages are essential for enhanced FRR or RI-RSVP extensions, disabling either of them will automatically turn off enhanced FRR extensions on the node.

- The default refresh time for RSVP messages has increased from 30 seconds to 20 minutes.
- The default value for `keep-multiplier`, which is 3, is applied to the new default refresh time.
- Local reversion is disabled by default. The existing CLI configuration for node Hellos, `[edit protocols rsvp node-hello]`, is still available but the action is redundant. If enabled, a message is displayed to indicate that the configuration is not necessary in conjunction with enhanced FRR.
- The existing commands to disable message reliability are now used to disable RSVP refresh reduction. To revert back to the previous default enabling refresh reduction, use the **delete** version of the following commands:
 - Set **no-reliable** on a given interface to disable FRR scalability enhancements automatically for all LSPs traversing the interface. Likewise, to run RSVP-TE without FRR facility protection enhancements, and without refresh-reduction, disable refresh reduction on each interface. Use one of the commands shown here:
 - `[edit protocols rsvp interface name no-reliable]`
 - `[edit logical-systems name protocols rsvp interface name no-reliable]`
- Graceful restart and nonstop active routing (NSR) are not supported while the LSP undergoes local repair or while the LSP is refreshed during backup LSP signaling. This limitation exists already in the implementation because GR or NSR switchover during FRR local-repair makes for multiple failure scenario.
- The following operational commands have been updated to include new information about the new procedures introduced for the RSVP TE protocol extensions for FRR facility protection.
 - `show rsvp version` displays whether enhanced FRR procedures are enabled.
 - `show rsvp neighbor detail` displays whether enhanced FRR procedures are enabled on the neighbor.
 - `show rsvp interface detail` displays conditional PathTear statistics.

- **show rsvp statistics** displays sent and received statistics for conditional PathTear, along with other statistics.
- **show rsvp session extensive** displays whether the node is a merge point, and if it is, shows the Point of Local Repair (PLR) address.
- The previous CLI configuration options for enabling or disabling message bundling have been deprecated (the existing configurations are accepted, but a warning is displayed in the show configuration output). These commands are the following:
 - **[edit protocols rsvp interface *name* aggregate]**
 - **[edit logical-systems *name* protocols rsvp interface *name* aggregate]**
 - **[edit protocols rsvp interface *name* no-aggregate]**
 - **[edit logical-systems *name* protocols rsvp interface *name* no-aggregate]**
- The following CLI configuration options have been made redundant by the current changes (the existing configurations are accepted, but a warning is displayed in the show configuration output):
 - **[edit protocols rsvp interface *name* reliable]**
 - **[edit logical-systems *name* protocols rsvp interface *name* reliable]**

Junos OS RSVP Protocol Implementation

The Junos implementation of RSVP supports RSVP version 1. The software includes support for all mandatory objects and RSVP message types, and supports message integrity and node authentications through the Integrity object.

The primary purpose of the Junos RSVP software is to support dynamic signaling within MPLS label-switched paths (LSPs). Supporting resource reservations over the Internet is only a secondary purpose of the Junos OS implementation. Since supporting resource reservations is secondary, the Junos RSVP software does not support the following features:

- IP multicasting sessions.
- Traffic control. The software cannot make resource reservations for real-time video or audio sessions.

With regard to the protocol mechanism, packet processing, and RSVP objects supported, the Junos OS implementation of the software is interoperable with other RSVP implementations.

RSVP Authentication

The Junos OS supports both the RSVP authentication style described in RFC 2747 (allowing for multivendor compatibility) and the RSVP authentication style described in Internet draft draft-ietf-rsvp-md5-03.txt. The Junos OS uses the authentication style described in Internet draft draft-ietf-rsvp-md5-08.txt by default. If the router receives an RFC 2747-style RSVP authentication from a neighbor, it switches to this style of

authentication for that neighbor. The RSVP authentication style for each neighboring router is determined separately.

RSVP and IGP Hello Packets and Timers

RSVP monitors the status of the interior gateway protocol (IGP) (IS-IS or OSPF) neighbors and relies on the IGP protocols to detect when a node fails. If an IGP protocol declares a neighbor down (because hello packets are no longer being received), RSVP also brings down that neighbor. However, the IGP protocols and RSVP still act independently when bringing a neighbor up.

In the Junos OS, RSVP typically relies on IGP hello packet detection to check for node failures. Configuring a short time for the IS-IS or OSPF hello timers allows these protocols to detect node failures quickly. When the node fails or a node failure is detected, a path error message is generated, and although the RSVP session goes down, the IGP neighbors remain up.

RSVP hellos can be relied on when the IGP does not recognize a particular neighbor (for example, if IGP is not enabled on the interface) or if the IGP is RIP (not IS-IS or OSPF). Also, the equipment of other vendors might be configured to monitor RSVP sessions based on RSVP hello packets. This equipment might also take an RSVP session down due to a loss of RSVP hello packets.

We do not recommend configuring a short RSVP hello timer. If quick discovery of a failed neighbor is needed, configure short IGP (OSPF or IS-IS) hello timers.

OSPF and IS-IS have infrastructure to manage rapid hello message sending and receiving reliably, even if the routing protocols or some other process are straining the processing capability of the router. Under the same circumstances, RSVP hellos might time out prematurely even though the neighbor is functioning normally.

RSVP Message Types

IN THIS SECTION

- [Path Messages | 773](#)
- [Resv Messages | 773](#)
- [PathTear Messages | 773](#)
- [ResvTear Messages | 773](#)
- [PathErr Messages | 773](#)
- [ResvErr Messages | 774](#)
- [ResvConfirm Messages | 774](#)

RSVP uses the following types of messages to establish and remove paths for data flows, establish and remove reservation information, confirm the establishment of reservations, and report errors:

Path Messages

Each sender host transmits path messages downstream along the routes provided by the unicast and multicast routing protocols. Path messages follow the exact paths of application data, creating path states in the routers along the way, thus enabling routers to learn the previous-hop and next-hop node for the session. Path messages are sent periodically to refresh path states.

The refresh interval is controlled by a variable called the ***refresh-time***, which is the periodical refresh timer expressed in seconds. A path state times out if a router does not receive a specified number of consecutive path messages. This number is specified by a variable called ***keep-multiplier***. Path states are kept for $((\text{keep-multiplier} + 0.5) \times 1.5 \times \text{refresh-time})$ seconds.

Resv Messages

Each receiver host sends reservation request (Resv) messages upstream toward senders and sender applications. Resv messages must follow exactly the reverse path of path messages. Resv messages create and maintain a reservation state in each router along the way.

Resv messages are sent periodically to refresh reservation states. The refresh interval is controlled by the same refresh time variable, and reservation states are kept for $((\text{keep-multiplier} + 0.5) \times 1.5 \times \text{refresh-time})$ seconds.

PathTear Messages

PathTear messages remove (tear down) path states as well as dependent reservation states in any routers along a path. PathTear messages follow the same path as path messages. A PathTear typically is initiated by a sender application or by a router when its path state times out.

PathTear messages are not required, but they enhance network performance because they release network resources quickly. If PathTear messages are lost or not generated, path states eventually time out when they are not refreshed, and the resources associated with the path are released.

ResvTear Messages

ResvTear messages remove reservation states along a path. These messages travel upstream toward senders of the session. In a sense, ResvTear messages are the reverse of Resv messages. ResvTear messages typically are initiated by a receiver application or by a router when its reservation state times out.

ResvTear messages are not required, but they enhance network performance because they release network resources quickly. If ResvTear messages are lost or not generated, reservation states eventually time out when they are not refreshed, and the resources associated with the reservation are released.

PathErr Messages

When path errors occur (usually because of parameter problems in a path message), the router sends a unicast PathErr message to the sender that issued the path message. PathErr messages are advisory; these messages do not alter any path state along the way.

ResvErr Messages

When a reservation request fails, a ResvErr error message is delivered to all the receivers involved. ResvErr messages are advisory; these messages do not alter any reservation state along the way.

ResvConfirm Messages

Receivers can request confirmation of a reservation request, and this confirmation is sent with a ResvConfirm message. Because of the complex RSVP flow-merging rules, a confirmation message does not necessarily provide end-to-end confirmation of the entire path. Therefore, ResvConfirm messages are an indication, not a guarantee, of potential success.

Juniper Networks routers never request confirmation using the ResvConfirm message; however, a Juniper Networks router can send a ResvConfirm message if it receives a request from another vendor's equipment.

Understanding RSVP Automatic Mesh

When adding sites to BGP and MPLS VPNs that use RSVP signaling, more configuration is needed to add provider edge (PE) routers than is needed to add customer edge (CE) devices. RSVP automatic mesh helps to reduce this configuration burden.

Service providers often use BGP and MPLS VPNs to efficiently scale the network while delivering revenue-generating services. In these environments, BGP is used to distribute the VPN routing information across the service provider's network, while MPLS is used to forward that VPN traffic from one VPN site to another. BGP and MPLS VPNs are based on a peer model. To add a new CE device (site) to an existing VPN, you need to configure the CE router at the new site and the PE router connected to the CE router. You do not have to modify the configuration of all of the other PE routers participating in the VPN. The other PE routers automatically learn about the routes associated with the new site, a process called automatic discovery (AD).

The requirements are a bit different if you need to add a new PE router to the network. A BGP and MPLS VPN requires that the BGP session be fully meshed and that there also be a full mesh of PE router-to-PE router MPLS label-switched paths (LSPs) between all of the PE routers in the network. When you add a new PE router to the network, all of the existing PE routers must be reconfigured to peer with the new PE router. Much of the configuration effort can be reduced if you configure BGP route reflectors (mitigating the full mesh requirement for BGP) and if you configure (LDP) as the signaling protocol for MPLS.

However, if you need to add a new PE router to a network configured with a full mesh of RSVP-signaled LSPs, you must reconfigure each of the PE routers to have a peer relationship with the new PE router. You can configure RSVP automatic mesh to address this particular operational scenario. When you enable RSVP automatic mesh, RSVP LSPs are dynamically created between a new PE router and the existing PE routers, eliminating the need to reconfigure all of the PE routers manually. For dynamic LSP creation to function properly, BGP must be configured to exchange routes between all of the participating PE routers. If two BGP peers do not exchange routes, it is not possible to configure a dynamic LSP between them. The local router's inet.0 routing table must include a labeled route to each potential IBGP next-hop (future potential PE routers or LSP destinations).

RSVP includes numerous capabilities that are not available in LDP, including fast reroute, end-point control, and link management. RSVP automatic mesh helps to reduce the operation and maintenance requirements for RSVP, making it possible to deploy RSVP in larger and more complicated networks.

Every PE router can reach every other PE router in the network because this information is distributed by the IGP. A PE router can set up a point-to-point RSVP LSP to any other PE router in the network as long as it knows that such an LSP is required. To build a full mesh of LSPs between the PE routers requires that each PE router know which of the other PE routers make up the full mesh.

NOTE: In Junos OS, RSVP automatic mesh is configured using the **rsvp-te** configuration statement at the **[edit routing-options dynamic-tunnels *dynamic-tunnel-name*]** hierarchy level. The **rsvp-te** configuration statement is also available for use in routing instances as a provider-tunnel option. When implemented as a provider-tunnel option, **rsvp-te** is used to configure the RSVP point-to-multipoint LSPs for multiprotocol BGP multicast VPNs, not to configure RSVP automatic mesh.

RSVP Reservation Styles

A reservation request includes options for specifying the reservation style. The reservation styles define how reservations for different senders within the same session are treated and how senders are selected.

Two options specify how reservations for different senders within the same session are treated:

- Distinct reservation—Each receiver establishes its own reservation with each upstream sender.
- Shared reservation—All receivers make a single reservation that is shared among many senders.

Two options specify how senders are selected:

- Explicit sender—List all selected senders.
- Wildcard sender—Select all senders, which then participate in the session.

The following reservation styles, formed by a combination of these four options, currently are defined:

- Fixed filter (FF)—This reservation style consists of distinct reservations among explicit senders. Examples of applications that use fixed-filter-style reservations are video applications and unicast applications, which both require flows that have a separate reservation for each sender. The fixed filter reservation style is enabled on RSVP LSPs by default.
- Wildcard filter (WF)—This reservation style consists of shared reservations among wildcard senders. This type of reservation reserves bandwidth for any and all senders, and propagates upstream toward all senders, automatically extending to new senders as they appear. A sample application for wildcard filter reservations is an audio application in which each sender transmits a distinct data stream. Typically,

only a few senders are transmitting at any one time. Such a flow does not require a separate reservation for each sender; a single reservation is sufficient.

- **Shared explicit (SE)**—This reservation style consists of shared reservations among explicit senders. This type of reservation reserves bandwidth for a limited group of senders. A sample application is an audio application similar to that described for wildcard filter reservations.

RSVP Refresh Reduction

RSVP relies on soft-state to maintain the path and reservation states on each router. If the corresponding refresh messages are not sent periodically, the states eventually time out and reservations are deleted. RSVP also sends its control messages as IP datagrams with no reliability guarantee. It relies on periodic refresh messages to handle the occasional loss of Path or Resv messages.

The RSVP refresh reduction extensions, based on RFC 2961, addresses the following problems that result from relying on periodic refresh messages to handle message loss:

- **Scalability**—The scaling problem arises from the periodic transmission and processing overhead of refresh messages, which increases as the number of RSVP sessions increases.
- **Reliability and latency**—The reliability and latency problem stems from the loss of nonrefresh RSVP messages or one-time RSVP messages such as PathTear or PathErr. The time to recover from such a loss is usually tied to refresh interval and the keepalive timer.

The RSVP refresh reduction capability is advertised by enabling the refresh reduction (RR) capable bit in the RSVP common header. This bit is only significant between RSVP neighbors.

RSVP refresh reduction includes the following features:

- RSVP message bundling using the bundle message
- RSVP Message ID to reduce message processing overhead
- Reliable delivery of RSVP messages using Message ID, Message Ack, and Message Nack
- Summary refresh to reduce the amount of information transmitted every refresh interval

The RSVP refresh reduction specification (RFC 2961) allows you to enable some or all of the above capabilities on a router. It also describes various procedures that a router can use to detect the refresh reduction capabilities of its neighbor.

The Junos OS supports all of the refresh reduction extensions, some of which can be selectively enabled or disabled. The Junos OS supports Message ID and therefore can perform reliable message delivery only for Path and Resv messages.

For information about how to configure RSVP refresh reduction, see [“Configuring RSVP Refresh Reduction” on page 783](#).

MTU Signaling in RSVP

The maximum transmission unit (MTU) is the largest size packet or frame, in bytes, that can be sent in a network. An MTU that is too large might cause retransmissions. Too small an MTU might cause the router to send and handle relatively more header overhead and acknowledgments. There are default values for MTUs associated with various protocols. You can also explicitly configure an MTU on an interface.

When an LSP is created across a set of links with different MTU sizes, the ingress router does not know what the smallest MTU is on the LSP path. By default, the MTU for an LSP is 1,500 bytes.

If this MTU is larger than the MTU of one of the intermediate links, traffic might be dropped, because MPLS packets cannot be fragmented. Also, the ingress router is not aware of this type of traffic loss, because the control plane for the LSP would still function normally.

To prevent this type of packet loss in MPLS LSPs, you can configure MTU signaling in RSVP. This feature is described in RFC 3209. Juniper Networks supports the Integrated Services object for MTU signaling in RSVP. The Integrated Services object is described in RFCs 2210 and 2215. MTU signaling in RSVP is disabled by default.

To avoid packet loss due to MTU mismatches, the ingress router needs to do the following:

- Signal the MTU on the RSVP LSP—To prevent packet loss from an MTU mismatch, the ingress router needs to know what the smallest MTU value is along the path taken by the LSP. Once this MTU value is obtained, the ingress router can assign it to the LSP.
- Fragment packets—Using the assigned MTU value, packets that exceed the size of the MTU can be fragmented into smaller packets on the ingress router before they are encapsulated in MPLS and sent over the RSVP-signaled LSP.

Once both MTU signaling and packet fragmentation have been enabled on an ingress router, any route resolving to an RSVP LSP on this router uses the signaled MTU value. For information about how to configure this feature, see [“Configuring MTU Signaling in RSVP” on page 804](#).

The following sections describe how MTU signaling in RSVP works:

- [How the Correct MTU Is Signaled in RSVP on page 777](#)
- [Determining an Outgoing MTU Value on page 778](#)
- [MTU Signaling in RSVP Limitations on page 778](#)

How the Correct MTU Is Signaled in RSVP

How the correct MTU is signaled in RSVP varies depending on whether the network devices (for example, routers) explicitly support MTU signaling in RSVP or not.

If the network devices support MTU signaling in RSVP, the following occur when you enable MTU signaling:

- The MTU is signaled from the ingress router to the egress router by means of the Adspec object. Before forwarding this object, the ingress router enters the MTU value associated with the interface over which the path message is sent. At each hop in the path, the MTU value in the Adspec object is updated to the minimum of the received value and the value of the outgoing interface.
- The ingress router uses the traffic specification (Tspec) object to specify the parameters for the traffic it is going to send. The MTU value signaled for the Tspec object at the ingress router is the maximum MTU value (9192 bytes for M Series and T Series routers, 9500 bytes for PTX Series Packet Transport Routers). This value does not change en route to the egress router.
- When the Adspec object arrives at the egress router, the MTU value is correct for the path (meaning it is the smallest MTU value discovered). The egress router compares the MTU value in the Adspec object to the MTU value in the Tspec object. It signals the smaller MTU using the Flowspec object in the Resv message.
- When the Resv object arrives at the ingress router, the MTU value in this object is used as the MTU for the next hops that use the LSP.

In a network where there are devices that do not support MTU signaling in RSVP, you might have the following behaviors:

- If the egress router does not support MTU signaling in RSVP, the MTU is set to 1,500 bytes by default.
- A Juniper Networks transit router that does not support MTU signaling in RSVP sets an MTU value of 1,500 bytes in the Adspec object by default.

Determining an Outgoing MTU Value

The outgoing MTU value is the smaller of the values received in the Adspec object compared to the MTU value of the outgoing interface. The MTU value of the outgoing interface is determined as follows:

- If you configure an MTU value under the **[family mpls]** hierarchy level, this value is signaled.
- If you do not configure an MTU, the **inet** MTU is signaled.

MTU Signaling in RSVP Limitations

The following are limitations to MTU signaling in RSVP:

- Changes in the MTU value might cause a temporary loss of traffic in the following situations:
 - For link protection and node protection, the MTU of the bypass is only signaled at the time the bypass becomes active. During the time it takes for the new path MTU to be propagated, packet loss might occur because of an MTU mismatch.

- For fast reroute, the MTU of the path is updated only after the detour becomes active, causing a delay in an update to the MTU at the ingress router. Until the MTU is updated, packet loss might occur if there is an MTU mismatch.

In both cases, only packets that are larger than the detour or bypass MTU are lost.

- When an MTU is updated, it triggers a change in the next hop. Any change in the next hop causes the route statistics to be lost.
- The minimum MTU supported for MTU signaling in RSVP is 1,488 bytes. This value prevents a false or incorrectly configured value from being used.
- For single-hop LSPs, the MTU value displayed by the **show** commands is the RSVP-signaled value. However, this MPLS value is ignored and the correct IP value is used.

Release History Table

Release	Description
16.1	Starting with Junos OS Release 16.1, RSVP Traffic Engineering (TE) protocol extensions to support Refresh-interval Independent RSVP (RI-RSVP) defined RFC 8370 for fast reroute (FRR) facility protection were introduced to allow greater scalability of label-switched paths (LSPs) faster convergence times and decrease RSVP signaling message overhead from periodic refreshes.

RELATED DOCUMENTATION

[RSVP Configuration](#) | [779](#)

[Basic MPLS Configuration](#) | [36](#)

RSVP Configuration

IN THIS SECTION

- [Minimum RSVP Configuration](#) | [780](#)
- [Configuring RSVP and MPLS](#) | [781](#)
- [Configuring RSVP Interfaces](#) | [782](#)
- [Configuring RSVP Node-ID Hellos](#) | [788](#)
- [Example: Configuring RSVP-Signaled LSPs](#) | [789](#)
- [Example: Configuring RSVP Automatic Mesh](#) | [794](#)

- [Configuring Hello Acknowledgments for Nonsession RSVP Neighbors | 798](#)
- [Switching LSPs Away from a Network Node | 799](#)
- [Configuring RSVP Setup Protection | 800](#)
- [Configuring Load Balancing Across RSVP LSPs | 801](#)
- [Configuring RSVP Automatic Mesh | 802](#)
- [Configuring Timers for RSVP Refresh Messages | 803](#)
- [Preempting RSVP Sessions | 804](#)
- [Configuring MTU Signaling in RSVP | 804](#)
- [Configuring Ultimate-Hop Popping for LSPs | 806](#)
- [Configuring RSVP to Pop the Label on the Ultimate-Hop Router | 810](#)
- [Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs | 810](#)
- [Tracing RSVP Protocol Traffic | 811](#)
- [RSVP Graceful Restart | 815](#)
- [RSVP Graceful Restart Terminology | 815](#)
- [RSVP Graceful Restart Operation | 816](#)
- [Processing the Restart Cap Object | 817](#)
- [Configuring RSVP Graceful Restart | 817](#)
- [RSVP LSP Tunnels Overview | 819](#)
- [Example: RSVP LSP Tunnel Configuration | 821](#)
- [Configuring Link Management Protocol Peers | 845](#)
- [Configuring Link Management Protocol Traffic Engineering Links | 846](#)
- [Configuring Peer Interfaces in OSPF and RSVP | 846](#)
- [Defining Label-Switched Paths for the FA-LSP | 847](#)
- [Establishing FA-LSP Path Information | 848](#)
- [Option: Tearing Down RSVP LSPs Gracefully | 848](#)

Minimum RSVP Configuration

To enable RSVP on a single interface, include the **rsvp** statement and specify the interface using the **interface** statement. This is the minimum RSVP configuration. All other RSVP configuration statements are optional.

```
rsvp {
```

```
interface interface-name;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

To enable RSVP on all interfaces, substitute **all** for the *interface-name* variable.

If you have configured interface properties on a group of interfaces and want to disable RSVP on one of the interfaces, include the **disable** statement:

```
interface interface-name {
  disable;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface interface-name**]
- [edit logical-systems *logical-system-name* protocols rsvp **interface interface-name**]

Configuring RSVP and MPLS

The primary purpose of the Junos RSVP software is to support dynamic signaling within label-switched paths (LSPs). When you enable both MPLS and RSVP on a router, MPLS becomes a client of RSVP. No additional configuration is required to bind MPLS and RSVP.

You can configure MPLS to set up signaled paths by using the **label-switched-path** statement at the [edit protocols mpls] hierarchy level. Each LSP translates into a request for RSVP to initiate an RSVP session. This request is passed through the internal interface between label switching and RSVP. After examining the request information, checking RSVP states, and checking the local routing tables, RSVP initiates one session for each LSP. The session is sourced from the local router and is destined for the target of the LSP.

When an RSVP session is successfully created, the LSP is set up along the paths created by the RSVP session. If the RSVP session is unsuccessful, RSVP notifies MPLS of its status. It is up to MPLS to initiate backup paths or continue retrying the initial path.

To pass label-switching signaling information, RSVP supports four additional objects: Label Request object, Label object, Explicit Route object, and Record Route object. For an LSP to be set up successfully, all routers along the path must support MPLS, RSVP, and the four objects. Of the four objects, the Record Route object is not mandatory.

To configure MPLS and make it a client of RSVP, do the following:

- Enable MPLS on all routers that will participate in the label switching (this is, on all routers that might be part of a label-switching path).
- Enable RSVP on all routers and on all router interfaces that form the LSP.
- Configure the routers at the beginning of the LSP.

Example: Configuring RSVP and MPLS

The following shows a sample configuration for a router at the beginning of an LSP:

```
[edit]
protocols {
  mpls {
    label-switched-path sf-to-london {
      to 192.168.1.4;
    }
  }
  rsvp {
    interface so-0/0/0;
  }
}
```

The following shows a sample configuration for all the other routers that form the LSP:

```
[edit]
protocols {
  mpls {
    interface so-0/0/0;
  }
  rsvp {
    interface so-0/0/0;
  }
}
```

Configuring RSVP Interfaces

IN THIS SECTION

- [Configuring RSVP Refresh Reduction | 783](#)
- [Configuring the RSVP Hello Interval | 785](#)
- [Configuring RSVP Authentication | 786](#)

- [Configuring the Bandwidth Subscription for Class Types | 786](#)
- [Configuring the RSVP Update Threshold on an Interface | 786](#)
- [Configuring RSVP for Unnumbered Interfaces | 788](#)

The following sections describe how to configure RSVP interfaces:

Configuring RSVP Refresh Reduction

You can configure RSVP refresh reduction on each interface by including the following statements in the interface configuration:

- **aggregate** and **reliable**—Enable all RSVP refresh reduction features: RSVP message bundling, RSVP message ID, reliable message delivery, and summary refresh.

In order to have refresh reduction and reliable delivery, you must include the **aggregate** and **reliable** statements.

- **no-aggregate**—Disable RSVP message bundling and summary refresh.
- **no-reliable**—Disable RSVP message ID, reliable message delivery, and summary refresh.

For more information on RSVP refresh reduction, see [“RSVP Refresh Reduction” on page 776](#).

If the **no-reliable** statement is configured on the router (reliable message delivery is disabled), the router accepts RSVP messages that include the Message ID object but ignores the Message ID object and continues performing standard message processing. No error is generated in this case, and RSVP operates normally.

However, not all combinations between two neighbors with different refresh reduction capabilities function correctly. For example, a router is configured with either the **aggregate** statement and **no-reliable** statement or with the **reliable** and **no-aggregate** statements. If an RSVP neighbor sends a Summary Refresh object to this router, no error is generated, but the Summary Refresh object cannot be processed. Consequently, RSVP states can time out on this router if the neighbor is relying only on Summary Refresh to refresh those RSVP states.

We recommend, unless there are specific requirements, that you configure RSVP refresh reduction in a similar manner on each RSVP neighbor.

To enable all RSVP refresh reduction features on an interface, include the **aggregate** statement:

```
aggregate;
```

You can include this statement at the following hierarchy levels:

- `[edit protocols rsvp interface interface-name]`

- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

To disable RSVP message bundling and summary refresh, include the **no-aggregate** statement:

```
no-aggregate;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

To enable RSVP message ID and reliable message delivery on an interface, include the **reliable** statement:

```
reliable;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

To disable RSVP message ID, reliable message delivery, and summary refresh, include the **no-reliable** statement:

```
no-reliable;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

Determining the Refresh Reduction Capability of RSVP Neighbors

To determine the RSVP refresh reduction capability of an RSVP neighbor, you need the following information:

- The RR bit advertised by the neighbor
- The local configuration of RSVP refresh reduction
- The actual RSVP messages received from the neighbor

To obtain this information, you can issue a **show rsvp neighbor detail** command. Sample output follows:

```
user@host> show rsvp neighbor detail
```



```

RSVP neighbor: 6 learned
  Address: 192.168.224.178 via: fxp1.0 status: Up
    Last changed time: 10:06, Idle: 5 sec, Up cnt: 1, Down cnt: 0
    Message received: 36
    Hello: sent 69, received: 69, interval: 9 sec
    Remote instance: 0x60b8feba, Local instance: 0x74bc7a8d
    Refresh reduction: not operational

  Address: 192.168.224.186 via: fxp2.0 status: Down
    Last changed time: 10:17, Idle: 40 sec, Up cnt: 0, Down cnt: 0
    Message received: 6
    Hello: sent 20, received: 0, interval: 9 sec
    Remote instance: 0x0, Local instance: 0x2aelb339
    Refresh reduction: incomplete
      Remote end: disabled, Ack-extension: enabled

  Address: 192.168.224.188 via: fxp2.0 status: Up
    Last changed time: 4:15, Idle: 0 sec, Up cnt: 1, Down cnt: 0
    Message received: 55
    Hello: sent 47, received: 31, interval: 9 sec
    Remote instance: 0x6436a35b, Local instance: 0x663849f0
    Refresh reduction: operational
      Remote end: enabled, Ack-extension: enabled

```

For more information on the [show rsvp neighbor detail](#) command.

Configuring the RSVP Hello Interval

RSVP monitors the status of the interior gateway protocol (IGP) (IS-IS or OSPF) neighbors and relies on the IGP protocols to detect when a node fails. If an IGP protocol declares a neighbor down (because hello packets are no longer being received), RSVP also brings down that neighbor. However, the IGP protocols and RSVP still act independently when bringing a neighbor up.

For Juniper Networks routers, configuring a shorter or longer RSVP hello interval has no impact on whether or not an RSVP session is brought down. RSVP sessions are kept up even if RSVP hello packets are no longer being received. RSVP sessions are maintained until either the router stops receiving IGP hello packets or the RSVP Path and Resv messages time out. However, starting from Junos OS Release 16.1, when RSVP hello messages time-out, the RSVP sessions are brought down.

The RSVP hello interval might also be impacted when another vendor's equipment brings down an RSVP session. For example, a neighboring non-Juniper Networks router might be configured to monitor RSVP hello packets.

To modify how often RSVP sends hello packets, include the **hello-interval** statement:

```
hello-interval seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

Configuring RSVP Authentication

All RSVP protocol exchanges can be authenticated to guarantee that only trusted neighbors participate in setting up reservations. By default, RSVP authentication is disabled.

RSVP authentication uses a Hashed Message Authentication Code (HMAC)-MD5 message-based digest. This scheme produces a message digest based on a secret authentication key and the message contents. (The message contents also include a sequence number.) The computed digest is transmitted with RSVP messages. Once you have configured authentication, all received and transmitted RSVP messages with all neighbors are authenticated on this interface.

MD5 authentication provides protection against forgery and message modification. It also can prevent replay attacks. However, it does not provide confidentiality, because all messages are sent in clear text.

By default, authentication is disabled. To enable authentication, configure a key on each interface by including the **authentication-key** statement:

```
authentication-key key;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

Configuring the Bandwidth Subscription for Class Types

By default, RSVP allows 100 percent of the bandwidth for a class type to be used for RSVP reservations. When you oversubscribe a class type for a multiclass LSP, the aggregate demand of all RSVP sessions is allowed to exceed the actual capacity of the class type.

For detailed instructions on how to configure the bandwidth subscription for class types, see [“Configuring the Bandwidth Subscription Percentage for LSPs” on page 567](#).

Configuring the RSVP Update Threshold on an Interface

The interior gateway protocols (IGPs) maintain the traffic engineering database, but the current available bandwidth on the traffic engineering database links originates from RSVP. When a link's bandwidth changes, RSVP informs the IGPs, which can then update the traffic engineering database and forward the new bandwidth information to all network nodes. The network nodes then know how much bandwidth is available on the traffic engineering database link (local or remote), and CSPF can correctly compute the paths.

However, IGP updates can consume excessive system resources. Depending on the number of nodes in a network, it might not be desirable to perform an IGP update for small changes in bandwidth. By configuring the **update-threshold** statement at the **[edit protocols rsvp]** hierarchy level, you can adjust the threshold at which a change in the reserved bandwidth triggers an IGP update.

You can configure a value of from 0.001 percent through 20 percent (the default is 10 percent) for when to trigger an IGP update. If the change in the reserved bandwidth is greater than or equal to the configured threshold percentage of the static bandwidth on that interface, then an IGP update occurs. For example, if you have configured the **update-threshold** statement to be 15 percent and the router discovers that the reserved bandwidth on a link has changed by 10 percent of the link bandwidth, RSVP does not trigger an IGP update. However, if the reserved bandwidth on a link changes by 20 percent of the link bandwidth, RSVP triggers an IGP update.

You can also configure the threshold as an absolute value using the **threshold-value** option under the **update-threshold** statement.

If the **threshold-value** is configured to greater than 20% of bandwidth on that link, the **threshold-value** is capped at 20% of bandwidth.

For instance, if bandwidth on an interface is 1Gbps, and the **threshold-value** is configured greater than 200Mbps, the **threshold-value** is capped at 200Mbps. The *threshold-percent* is displayed as 20.000% and the **threshold-value** as 200Mbps.

NOTE: The two options, *threshold-percent* and **threshold-value**, are mutually exclusive. You can configure only one option at a given point in time to generate an IGP update for lower bandwidth reservations. As a result, when one option is configured, the other option is calculated and displayed on the CLI.

For instance, on a link of 1Gbps, if the *threshold-percent* is configured to 5%, the **threshold-value** is calculated and displayed as 50Mbps. Similarly, if the **threshold-value** is configured to 50m, then the *threshold-percent* is calculated and displayed as 5%.

To adjust the threshold at which a change in the reserved bandwidth triggers an IGP update, include the **update-threshold** statement. Because of the update threshold, it is possible for Constrained Shortest Path First (CSPF) to compute a path using outdated traffic engineering database bandwidth information on a link. If RSVP attempts to establish an LSP over that path, it might find that there is insufficient bandwidth on that link. When this happens, RSVP triggers an IGP traffic engineering database update, flooding the updated bandwidth information on the network. CSPF can then recompute the path by using the updated bandwidth information, and attempt to find a different path, avoiding the congested link. Note that this functionality is the default and does not need any additional configuration.

You can configure the **rsvp-error-hold-time** statement at the **[edit protocols mpls]** hierarchy level or the **[edit logical-systems logical-system-name protocols mpls]** hierarchy level to improve the accuracy of the

traffic engineering database (including the accuracy of bandwidth estimates for LSPs) using information provided by PathErr messages. See [“Improving Traffic Engineering Database Accuracy with RSVP PathErr Messages” on page 1108](#).

Configuring RSVP for Unnumbered Interfaces

The Junos OS supports RSVP traffic engineering over unnumbered interfaces. Traffic engineering information about unnumbered links is carried in the IGP traffic engineering extensions for OSPF and IS-IS as described in RFC 4203, *OSPF Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*, and RFC 4205, *Intermediate System to Intermediate System (IS-IS) Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*. Unnumbered links can also be specified in the MPLS traffic engineering signaling as described in RFC 3477, *Signalling Unnumbered Links in Resource ReSerVation Protocol - Traffic Engineering (RSVP-TE)*. This feature allows you avoid having to configure IP addresses for each interface participating in the RSVP-signaled network.

To configure RSVP for unnumbered interfaces, you must configure the router with a router ID using the **router-id** statement specified at the **[edit routing-options]** hierarchy level. The router ID must be available for routing (you can typically use the loopback address). The RSVP control messages for the unnumbered links are sent using the router ID address (rather than a randomly selected address).

To configure link protection and fast reroute on a router with unnumbered interfaces enabled, you must configure at least two addresses. We recommend that you configure a secondary interface on the loopback in addition to configuring the router ID.

Configuring RSVP Node-ID Hellos

You can configure node-ID based RSVP hellos to ensure that Juniper Networks routers can interoperate with the equipment of other vendors. By default, Junos OS uses interface-based RSVP hellos. Node-ID based RSVP hellos are specified in RFC 4558, *Node-ID Based Resource Reservation Protocol (RSVP) Hello: A Clarification Statement*. RSVP node-ID hellos are useful if you have configured BFD to detect problems over RSVP interfaces, allowing you to disable interface hellos for these interfaces. You can also use node-ID hellos for graceful restart procedures.

Node-ID hellos can be enabled globally for all RSVP neighbors. By default, node-ID hello support is disabled. If you have not enabled RSVP node IDs on the router, the Junos OS does not accept any node-ID hello packets.

To enable RSVP node-ID hellos globally on the router, include the **node-hello** statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-systems-name* protocols rsvp]**

You can also explicitly disable RSVP interface hellos globally. This type of configuration might be necessary in networks where the Juniper Networks router has numerous RSVP connections with equipment from other vendors. However, if you disable RSVP interface hellos globally, you can also configure a hello interval on an RSVP interface using the [hello-interval](#) statement. This configuration disables RSVP interface hellos globally, but enables RSVP interface hellos on the specified interface (the RSVP interface you configure the [hello-interval](#) statement on). This configuration might be necessary in a heterogeneous network in which some devices support RSVP node-ID hellos and other devices support RSVP interface hellos.

To disable RSVP interface hellos globally on the router, include the [no-interface-hello](#) statement at the following hierarchy levels:

- [\[edit protocols rsvp\]](#)
- [\[edit logical-systems *logical-systems-name* protocols rsvp\]](#)

Example: Configuring RSVP-Signaled LSPs

IN THIS SECTION

- [Requirements | 789](#)
- [Overview and Topology | 789](#)
- [Configuration | 790](#)
- [Verification | 792](#)

This example shows how to create an LSP between routers in an IP network using RSVP as the signaling protocol.


Requirements

Before you begin, delete security services from the device. See *Example: Deleting Security Services*.

Overview and Topology

Using RSVP as a signaling protocol, you can create LSPs between routers in an IP network. In this example, you configure a sample network as shown in [Figure 57 on page 790](#).

Figure 57: Typical RSVP-Signaled LSP

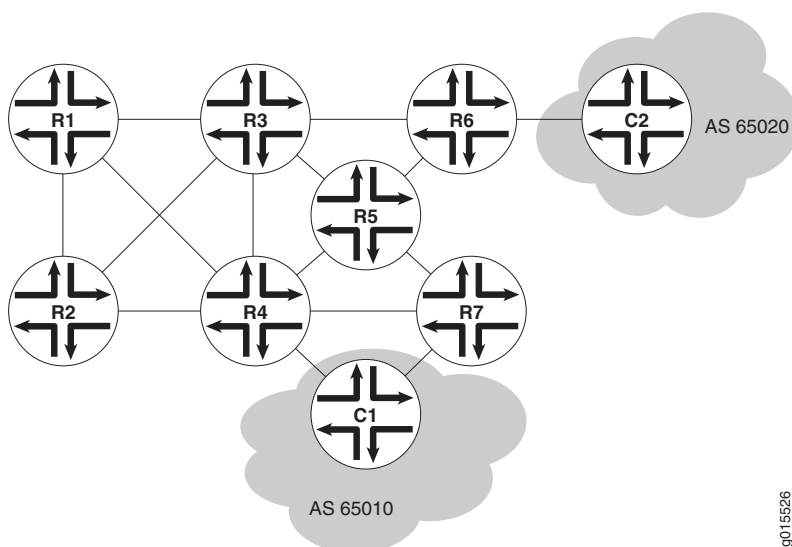

To establish an LSP between routers, you must individually enable the MPLS family and configure RSVP on each of the transit interfaces in the MPLS network. This example shows how to enable MPLS and configure RSVP on the ge-0/0/0 transit interface. Additionally, you must enable the MPLS process on all of the MPLS interfaces in the network.

This example shows how to define an LSP from R1 to R7 on the ingress router (R1) using R7's loopback address (10.0.9.7). The configuration reserves 10 Mbps of bandwidth. Additionally, the configuration disables the CSPF algorithm, ensuring that Hosts C1 and C2 use the RSVP-signaled LSP that correspond to the network IGP's shortest path.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set interfaces ge-0/0/0 unit 0 family mpls
set protocols rsvp interface ge-0/0/0.0
set protocols mpls label-switched-path r1-r7 to 10.0.9.7
set protocols mpls label-switched-path r1-r7 bandwidth 10m
set protocols mpls interface all
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the [CLI User Guide](#).

To configure RSVP:

1. Enable the MPLS family on all transit interfaces in the MPLS network.

```
[edit]
user@host# set interfaces ge-0/0/0 unit 0 family mpls
```

2. Enable RSVP on each transit interface in the MPLS network.

```
[edit]
user @host# set protocols rsvp interface ge-0/0/0
```

3. Enable the MPLS process on the transit interface in the MPLS network.

```
[edit]
user@host# set protocols mpls interface ge-0/0/0
```

4. Define the LSP on the ingress router.

```
[edit protocols mpls]
user@host# set label-switched-path r1-r7 to 10.0.9.7
```

5. Reserve 10 Mbps of bandwidth on the LSP.

```
[edit protocols mpls]
user @host# set label-switched-path r1-r7 bandwidth 10m
```

Results

Confirm your configuration by entering the **show** command from configuration mode. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

For brevity, this **show** command output includes only the configuration that is relevant to this example. Any other configuration on the system has been replaced with ellipses (...).

```
user@host# show
...
```

```

interfaces {
  ge-0/0/0 {
    family mpls;
  }
}
...
protocols {
  rsvp {
    interface ge-0/0/0.0;
  }
  mpls {
    label-switched-path r1-r7 {
      to 10.0.9.7;
      bandwidth 10m;
    }
    interface all;
  }
}
...

```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Verifying RSVP Neighbors | 792](#)
- [Verifying RSVP Sessions | 793](#)
- [Verifying the Presence of RSVP-Signaled LSPs | 794](#)

To confirm that the configuration is working properly, perform these tasks:

Verifying RSVP Neighbors

Purpose

Verify that each device shows the appropriate RSVP neighbors—for example, that Router R1 in [Figure 57 on page 790](#) lists both Router R3 and Router R2 as RSVP neighbors.

Action

From the CLI, enter the **show rsvp neighbor** command.

```
user@r1> show rsvp neighbor
```

```

RSVP neighbor: 2 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx
10.0.6.2         0   3/2      13:01         3    366/349
10.0.3.3         0   1/0      22:49         3    448/448

```

The output shows the IP addresses of the neighboring routers. Verify that each neighboring RSVP router loopback address is listed.

Verifying RSVP Sessions

Purpose

Verify that an RSVP session has been established between all RSVP neighbors. Also, verify that the bandwidth reservation value is active.

Action

From the CLI, enter the **show rsvp session detail** command.

```
user@r1> show rsvp session detail
```

```

Ingress RSVP: 1 sessions

10.0.9.7
  From: 10.0.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r1-r7, LSPpath: Primary
  Bidirectional, Upstream label in: -, Upstream label out: -
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100000
  Resv style: 1 FF, Label in: -, Label out: 100000
  Time left:    -, Since: Thu Jan 26 17:57:45 2002
  Tspec: rate 10Mbps size 10Mbps peak Infbps m 20 M 1500
  Port number: sender 3 receiver 17 protocol 0
  PATH rcvfrom: localclient
  PATH sentto: 10.0.4.13 (ge-0/0/1.0) 1467 pkts
  RESV rcvfrom: 10.0.4.13 (ge-0/0/1.0) 1467 pkts
  Record route: <self> 10.0.4.13 10.0.2.1 10.0.8.10

```

The output shows the detailed information, including session IDs, bandwidth reservation, and next-hop addresses, for each established RSVP session. Verify the following information:

- Each RSVP neighbor address has an entry for each neighbor, listed by loopback address.
- The state for each LSP session is **Up**.
- For **Tspec**, the appropriate bandwidth value, **10Mbps**, appears.

Verifying the Presence of RSVP-Signaled LSPs

Purpose

Verify that the routing table of the entry (ingress) router has a configured LSP to the loopback address of the other router. For example, verify that the **inet.3** routing table of the R1 entry router in [Figure 57 on page 790](#) has a configured LSP to the loopback address of Router R7.

Action

From the CLI, enter the **show route table inet.3** command.

```
user@r1> show route table inet.3
```

```
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.9.7/32          *[RSVP/7] 00:05:29, metric 10
                    > to 10.0.4.17 via ge-0/0/0.0, label-switched-path r1-r7
```

The output shows the RSVP routes that exist in the **inet.3** routing table. Verify that an RSVP-signaled LSP is associated with the loopback address of the exit (egress) router, R7, in the MPLS network.

Example: Configuring RSVP Automatic Mesh

IN THIS SECTION

- Requirements | [795](#)
- Overview | [795](#)
- Configuration | [796](#)
- Verification | [797](#)

Service providers often use BGP and MPLS VPNs to efficiently scale the network while delivering revenue-generating services. In these environments, BGP is used to distribute the VPN routing information across the service provider's network, while MPLS is used to forward that VPN traffic from one VPN site to another.

When adding a new PE router that will participate in BGP and MPLS VPNs, all of the previously existing PE routers must be configured to peer with the new PE router for both BGP and MPLS. As each new PE router is added to the service provider's network, the configuration burden soon becomes too much to handle.

The configuration requirements for BGP peering can be reduced with the use of route reflectors. In RSVP signaled MPLS networks, RSVP automatic mesh can minimize the configuration burden for the MPLS portion of the network. Configuring **rsvp-te** on all PE routers allows RSVP to automatically create the needed LSPs when a new PE router is added.

Requirements

This example uses the following hardware and software components:

- A router running Junos OS Release 10.1 or later.
- A BGP and MPLS VPN using RSVP as the MPLS label-switched path (LSP) signaling protocol.

Overview


This example shows how to configure RSVP automatic mesh on a PE router using the **rsvp-te** configuration statement. In order for RSVP automatic mesh to function properly, all of the PE routers in the full mesh configuration must have the **rsvp-te** statement configured. This ensures that any new PE routers that are added later will also benefit from the automatic mesh feature, provided that they too are configured with the **rsvp-te** statement.

Given this requirement, this example only shows the configuration on the newly added PE router. It is assumed that RSVP automatic mesh has already been configured on the existing PE routers.

Topology

In [Figure 58 on page 795](#), there are three existing PE routers, PE1, PE2, and PE3, in the topology. PE4 has been added, and RSVP automatic mesh will be configured. The cloud represents the service provider network, and the network address, 192.0.2.0/24, is shown in the center of the figure.

Figure 58: Service Provider Network with PE Routers

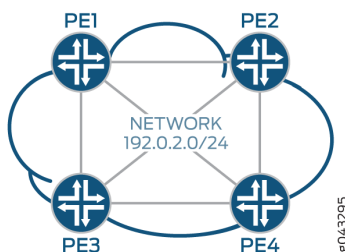

Configuration

IN THIS SECTION

- [Configuring RSVP Automatic Mesh | 796](#)
- [Results | 797](#)

Configuring RSVP automatic mesh involves performing these tasks:

- Enabling the **rsvp-te** configuration statement at the **[edit routing-options dynamic-tunnels dynamic-tunnel-name]** hierarchy level.
- Configuring the required **destination-networks** element.

This configuration element specifies the IPv4 prefix range for the destination network. Only tunnels within the specified prefix range can be created.

- Configuring the required **label-switched-path-template** element.

This configuration element takes either **default-template** or the name of a preconfigured LSP template as an argument. The **default-template** is a system-defined template that requires no user configuration.

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

PE4 Router

```
set routing-options dynamic-tunnels dt-1 rsvp-te rsvp-te-1 label-switched-path-template
  default-template
set routing-options dynamic-tunnels dt-1 rsvp-te rsvp-te-1 destination-networks 192.0.2.0/24
```

Configuring RSVP Automatic Mesh

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To enable RSVP automatic mesh:

1. Configure **rsvp-te** at the **[edit routing-options dynamic-tunnels]** hierarchy level.

```
[edit routing-options dynamic-tunnels]
user@PE4# set dt-1 rsvp-te rsvp-te-1 label-switched-path-template default-template
```

2. Configure **destination-networks** at the **[edit routing-options dynamic-tunnels]** hierarchy level.

```
[edit routing-options dynamic-tunnels]
user@PE4# set dt-1 rsvp-te rsvp-te-1 destination-networks 192.0.2.0/24
```

Results

Issue the **show** command from the **[edit routing-options dynamic-tunnels]** hierarchy level to see the results of your configuration:

```
[edit routing-options dynamic-tunnels]
user@PE4#show
dt-1 {
  rsvp-te rsvp-te-1 {
    label-switched-path-template {
      default-template;
    }
    destination-networks {
      192.0.2.0/24;
    }
  }
}
```

Verification

IN THIS SECTION

- [Verifying the Existence of RSVP Automatic Mesh Tunnels on Router PE4 | 797](#)
- [Verifying the Existence of MPLS LSPs on Router PE4 | 798](#)

Verifying the Existence of RSVP Automatic Mesh Tunnels on Router PE4

Purpose

To verify the operation of the newly configured PE4 router, issue the **show dynamic-tunnels database** command from operational mode. This command will show the destination network to which dynamic tunnels can be created.

Action

```
user@PE4> show dynamic-tunnels database
Table: inet.3
Destination-network: 192.0.2.0/24
```

Verifying the Existence of MPLS LSPs on Router PE4

Purpose

To verify the existence of MPLS LSPs on the PE4 router, issue the **show mpls lsp** command from operational mode. This command will show the state of the MPLS LSPs.

Action

```
user@PE4> show mpls lsp
```

```
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
Egress LSP: 3 sessions
To From State Rt Style Labelin Labelout LSPname
192.0.2.104 192.0.2.103 Up 0 1 FF 3 - PE2-PE4
192.0.2.104 192.0.2.102 Up 0 1 FF 3 - PE2-PE4
192.0.2.104 192.0.2.101 Up 0 1 FF 3 - PE1-PE4
Total 3 displayed, Up 3, Down 0
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Configuring Hello Acknowledgments for Nonsession RSVP Neighbors

The **hello-acknowledgements** statement controls the hello acknowledgment behavior between RSVP neighbors regardless of whether or not they are in the same session.

Hello messages received from RSVP neighbors that are not part of a common RSVP session are discarded. If you configure the **hello-acknowledgements** statement at the **[edit protocols rsvp]** hierarchy level, hello messages from nonsession neighbors are acknowledged with a hello acknowledgment message. When hellos are received from nonsession neighbors, an RSVP neighbor relationship is created and periodic hello messages can now be received from the nonsession neighbor. The **hello-acknowledgements** statement is disabled by default. Configuring this statement allows RSVP-capable routers to be discovered using hello packets and verifies that the interface is able to receive RSVP packets before sending any MPLS LSP setup messages.

Once you enable hello acknowledgments for nonsession RSVP neighbors, the router continues to acknowledge hello messages from any nonsession RSVP neighbors unless the interface itself goes down or you change the configuration. Interface-based neighbors are not automatically aged out.

```
hello-acknowledgements;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

Switching LSPs Away from a Network Node

You can configure the router to switch active LSPs away from a network node using a bypass LSP enabled for an interface. This feature might be used to maintain active networks when a device needs to be replaced without interrupting traffic transiting the network. The LSPs can be either static or dynamic.

1. You first need to configure either link or node protection for the traffic that needs to pass around the network device you intend to disable. To function properly, the bypass LSP must use a different logical interface than the protected LSP.
2. To prepare the router to begin switching traffic away from a network node, configure the **always-mark-connection-protection-tlv** statement:

```
always-mark-connection-protection-tlv;
```

The router then marks all OAM traffic transiting this interface in preparation for switching the traffic to an alternate path based on the OAM functionality.

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls interface *interface-name*]
 - [edit logical-systems *logical-system-name* protocols mpls interface *interface-name*]
3. You then need to configure the **switch-away-lsps** statement to switch the traffic from the protected LSP to the bypass LSP, effectively bypassing the default downstream network device. The actual link itself is not brought down by this configuration.

To configure the router to switch traffic away from a network node, configure the **switch-away-lsps** statement:

```
switch-away-lsps;
```

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls interface *interface-name*]
- [edit logical-systems *logical-system-name* protocols mpls interface *interface-name*]

Note the following limitations related to switching active LSPs away from a network node:

- The switch-away feature is supported on MX Series routers only.
- The switch-away feature is not supported for switching traffic from primary point-to-multipoint LSPs to bypass point-to-multipoint LSPs. If you configure the **switch-away-lsps** statement for a point-to-multipoint LSP, traffic is not switched to the bypass point-to-multipoint LSP.
- If you configure the switch-away feature on an interface along the path of a dynamic LSP, new dynamic LSPs cannot be established over that path. The switch-away feature prevents the make-before-break behavior of RSVP-signaled LSPs. The make-before-break behavior normally causes the router to first attempt to re-signal a dynamic LSP before tearing down the original.

Configuring RSVP Setup Protection

You can configure the facility-backup fast reroute mechanism to provide setup protection for LSPs which are in the process of being signaled. Both point-to-point LSPs and point-to-multipoint LSPs are supported. This feature is applicable in the following scenario:

1. A failed link or node is present on the strict explicit path of an LSP before the LSP is signaled.
2. There is also a bypass LSP protecting the link or node.
3. RSVP signals the LSP through the bypass LSP. The LSP appears as if it was originally set up along its primary path and then failed over to the bypass LSP because of the link or node failure.
4. When the link or node has recovered, the LSP can be automatically reverted to the primary path.

You should configure the **setup-protection** statement at the [edit protocols rsvp] on each of the routers along the LSP path on which you want to enable LSP setup protection. You should also configure IGP traffic engineering on all of the routers on the LSP path. You can issue a **show rsvp session** command to determine whether or not the LSP has setup protection enabled on a router acting as a point of local repair (PLR) or a merge point.

To enable RSVP setup protection, include the **setup-protection** statement

```
setup-protection;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

Configuring Load Balancing Across RSVP LSPs

By default, when you have configured several RSVP LSPs to the same egress router, the LSP with the lowest metric is selected and carries all traffic. If all of the LSPs have the same metric, one of the LSPs is selected at random and all traffic is forwarded over it.

Alternatively, you can load-balance traffic across all of the LSPs by enabling per-packet load balancing.

To enable per-packet load balancing on an ingress LSP, configure the **policy-statement** statement as follows:

```
[edit policy-options]
policy-statement policy-name {
  then {
    load-balance per-packet;
  }
  accept;
}
```

You then need to apply this statement as an export policy to the forwarding table.

Once per-packet load balancing is applied, traffic is distributed equally between the LSPs (by default).

You need to configure per-packet load balancing if you want to enable PFE fast reroute. To enable PFE fast reroute, include the **policy-statement** statement for per-packet load balancing shown in this section in the configuration of each of the routers where a reroute might take place. See also [“Configuring Fast Reroute” on page 473](#).

You can also load-balance the traffic between the LSPs in proportion to the amount of bandwidth configured for each LSP. This capability can better distribute traffic in networks with asymmetric bandwidth capabilities across external links, since the configured bandwidth of an LSP typically reflects the traffic capacity of that LSP.

To configure RSVP LSP load balancing, include the **load-balance** statement with the **bandwidth** option:

```
load-balance {
  bandwidth;
}
```

You can configure this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

Keep the following information in mind when you use the **load-balance** statement:

- If you configure the **load-balance** statement, the behavior of currently running LSPs is not altered. To force currently running LSPs to use the new behavior, you can issue a **clear mpls lsp** command.
- The **load-balance** statement only applies to ingress LSPs that have per-packet load balancing enabled.
- For Differentiated Services-aware traffic engineered LSPs, the bandwidth of an LSP is calculated by summing the bandwidth of all of the class types.

Configuring RSVP Automatic Mesh

You can configure RSVP to establish point-to-point label-switched paths (LSPs) automatically for any new PE router added to a full mesh of LSPs. To enable this feature, you must configure the **rsvp-te** statement on all of the PE routers in the full mesh.

NOTE: You cannot configure RSVP automatic mesh in conjunction with CCC. CCC cannot use the dynamically generated LSPs.

To configure RSVP automatic mesh, include the **rsvp-te** statement:

```
rsvp-te {
  destination-networks network-prefix;
  label-switched-path-template (Multicast) {
    default-template;
    template-name;
  }
}
```

You can configure these statements at the following hierarchy levels:

- [edit routing-options dynamic-tunnels *tunnel-name*]
- [edit logical-systems *logical-system-name* routing-options dynamic-tunnels *tunnel-name*]

You must also configure the following statements to enable RSVP automatic mesh:

- **destination-networks**—Specify the IP version 4 (IPv4) prefix range for the destination network. Dynamic tunnels within the specified IPv4 prefix range can be initiated.
- **label-switched-path-template (Multicast)**—You can configure either the default template explicitly using the **default-template** option, or you can configure an LSP template of your own using the **template-name** option. The LSP template acts as a model configuration for the dynamically generated LSPs.

Configuring Timers for RSVP Refresh Messages

RSVP uses two related timing parameters:

- **refresh-time**—The refresh time controls the interval between the generation of successive refresh messages. The default value for the refresh time is 45 seconds. This number is derived from the **refresh-time** statement's default value of 30, multiplied by a fixed value of 1.5. This computation differs from RFC 2205, which states that the refresh time should be multiplied by a random value in the range from 0.5 through 1.5.

Refresh messages include path and Resv messages. Refresh messages are sent periodically so that reservation states in neighboring nodes do not time out. Each path and Resv message carries the refresh timer value, and the receiving node extracts this value from the messages.

- **keep-multiplier**—The keep multiplier is a small, locally configured integer from 1 through 255. The default value is 3. It indicates the number of messages that can be lost before a particular state is declared stale and must be deleted. The keep multiplier directly affects the lifetime of an RSVP state.

To determine the lifetime of a reservation state, use the following formula:

$$lifetime = (keep-multiplier + 0.5) \times (1.5 \times refresh-time)$$

In the worst case, $(keep-multiplier - 1)$ successive refresh messages must be lost before a reservation state is deleted.

We do not recommend configuring a short RSVP hello timer. If quick discovery of a failed neighbor is needed, configure short IGP (OSPF or IS-IS) hello timers.

By default, the refresh timer value is 30 seconds. To modify this value, include the **refresh-time** statement:

```
refresh-time seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

The default value of the keep multiplier is 3. To modify this value, include the **keep-multiplier** statement:

```
keep-multiplier number;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

Preempting RSVP Sessions

Whenever bandwidth is insufficient to handle all RSVP sessions, you can control the preemption of RSVP sessions. By default, an RSVP session is preempted only by a new higher-priority session.

To always preempt a session when the bandwidth is insufficient, include the **preemption** statement with the **aggressive** option:

```
preemption aggressive;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

To disable RSVP session preemption, include the **preemption** statement with the **disabled** option:

```
preemption disabled;
```

To return to the default (that is, preempt a session only for a new higher-priority session), include the **preemption** statement with the **normal** option:

```
preemption normal;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

Configuring MTU Signaling in RSVP

IN THIS SECTION

- [Enabling MTU Signaling in RSVP | 805](#)
- [Enabling Packet Fragmentation | 805](#)

To configure maximum transmission unit (MTU) signaling in RSVP, you need to configure MPLS to allow IP packets to be fragmented before they are encapsulated in MPLS. You also need to configure MTU

signaling in RSVP. For troubleshooting purposes, you can configure MTU signaling alone without enabling packet fragmentation.

To configure MTU signaling in RSVP, include the **path-mtu** statement:

```
path-mtu {
  allow-fragmentation;
  rsvp {
    mtu-signaling;
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

The following sections describe how to enable packet fragmentation and MTU signaling in RSVP:

Enabling MTU Signaling in RSVP

To enable MTU signaling in RSVP, include the **rsvp mtu-signaling** statement:

```
rsvp mtu-signaling;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls path-mtu]
- [edit logical-systems *logical-system-name* protocols mpls path-mtu]

Once you have committed the configuration, changes in the MTU signaling behavior for RSVP take effect the next time the path is refreshed.

You can configure the **mtu-signaling** statement by itself at the [edit protocols mpls path-mtu rsvp] hierarchy level. This can be useful for troubleshooting. If you configure just the **mtu-signaling** statement, you can use the **show rsvp session detail** command to determine what the smallest MTU is on an LSP. The **show rsvp session detail** command displays the MTU value received and sent in the Adspec object.

Enabling Packet Fragmentation

To allow IP packets to be fragmented before they are encapsulated in MPLS, include the **allow-fragmentation** statement:

```
allow-fragmentation;
```

You can include this statement at the following hierarchy levels:


- [edit protocols mpls path-mtu]
- [edit logical-systems *logical-system-name* protocols mpls path-mtu]

NOTE: Do not configure the **allow-fragmentation** statement alone. Always configure it in conjunction with the **mtu-signaling** statement.

Configuring Ultimate-Hop Popping for LSPs


By default, RSVP-signaled LSPs use penultimate-hop popping (PHP). [Figure 43 on page 559](#) illustrates a penultimate-hop popping LSP between Router PE1 and Router PE2. Router CE1 forwards a packet to its next hop (Router PE1), which is also the LSP ingress. Router PE1 pushes label 1 on the packet and forwards the labeled packet to Router P1. Router P1 completes the standard MPLS label swapping operation, swapping label 1 for label 2, and forwards the packet to Router P2. Since Router P2 is the penultimate-hop router for the LSP to Router PE2, it first pops the label and then forwards the packet to Router PE2. When Router PE2 receives it, the packet can have a service label, an explicit-null label, or just be a plain IP or VPLS packet. Router PE2 forwards the unlabeled packet to Router CE2.

Figure 59: Penultimate-Hop Popping for an LSP

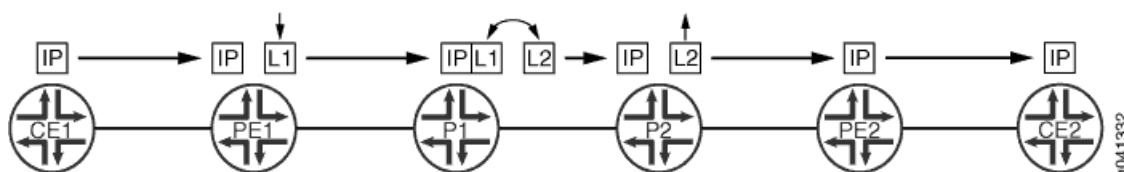

You can also configure ultimate-hop popping (UHP) (as shown in [Figure 44 on page 560](#)) for RSVP-signaled LSPs. Some network applications can require that packets arrive at the egress router (Router PE2) with a non-null outer label. For an ultimate-hop popping LSP, the penultimate router (Router P2 in [Figure 44 on page 560](#)) performs the standard MPLS label swapping operation (in this example, label 2 for label 3) before forwarding the packet to egress Router PE2. Router PE2 pops the outer label and performs a second lookup of the packet address to determine the end destination. It then forwards the packet to the appropriate destination (either Router CE2 or Router CE4).

Figure 60: Ultimate-Hop Popping for an LSP

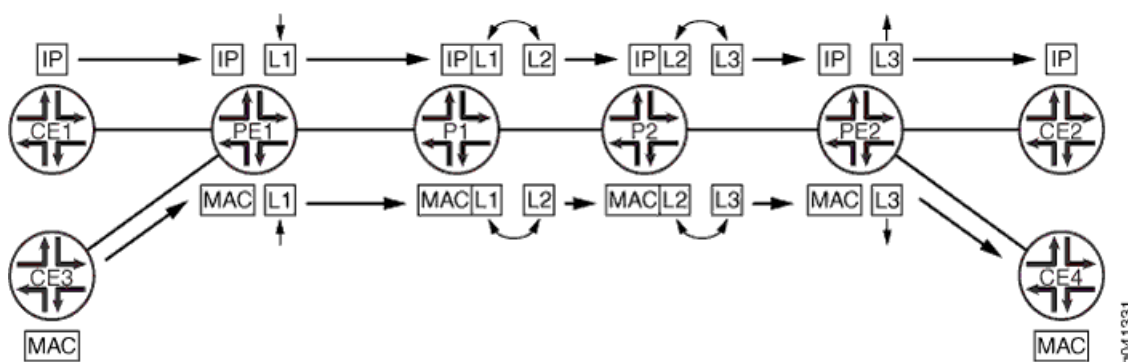

The following network applications require that you configure UHP LSPs:

- MPLS-TP for performance monitoring and in-band OAM
- Edge protection virtual circuits

The following features do not support the UHP behavior:

- LDP-signaled LSPs
- Static LSPs
- Point-to-multipoint LSPs
- CCC
- **traceroute** command

For more information about UHP behavior, see Internet draft [draft-ietf-mpls-rsvp-te-no-php-oob-mapping-01.txt](#), *Non PHP behavior and Out-of-Band Mapping for RSVP-TE LSPs*.

For point-to-point RSVP-signaled LSPs, UHP behavior is signaled from the LSP ingress. Based on the ingress router configuration, RSVP can signal the UHP LSP with the non-PHP flag set. RSVP PATH messages carry the two flags in the LSP-ATTRIBUTES object. When the egress router receives the PATH message, it assigns a non-null label to the LSP. RSVP also creates and installs two routes in the mpls.0 routing table. S refers to the S bit of the MPLS label, which indicates whether or not the bottom of the label stack has been reached.

- Route S=0—Indicates that there are more labels in the stack. The next hop for this route points to the mpls.0 routing table, triggering a chained MPLS label lookup to discover the remaining MPLS labels in the stack.
- Route S=1—Indicates that there are no more labels. The next hop points to the inet.0 routing table if the platform supports chained and multi-family lookup. Alternatively, the label route can point to a VT interface to initiate IP forwarding.

If you enable UHP LSPs, MPLS applications such as Layer 3 VPNs, VPLS, Layer 2 VPNs, and Layer 2 circuits can use the UHP LSPs. The following explains how UHP LSPs affect the different types of MPLS applications:

- Layer 2 VPNs and Layer 2 circuits—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label (S=0) is the UHP label, and the inner label (S=1) is the VC label. A lookup based on the transport label results in a table handle for the mpls.0 routing table. There is an additional route in the mpls.0 routing table corresponding to the inner label. A lookup based on the inner label results in the CE router next hop.
- Layer 3 VPN—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label (S=0) is the UHP label, and the inner label is the VPN label (S=1). A lookup based on the transport label results in the table handle for the mpls.0 routing table. There are two cases in this scenario. By default, Layer 3 VPNs advertise the per-next hop label. A lookup based on the inner label results in the next hop toward the CE router. However, if you have configured the **vrf-table-label** statement for the Layer 3 VPN routing instance, the inner LSI label points to the VRF routing table. An IP lookup is also completed for the VRF routing table.

NOTE: UHP for Layer 3 VPNs configured with the **vrf-table-label** statement is supported on MX Series 5G Universal Routing Platforms only.

- VPLS—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label is the transport label (S=0) and the inner label is the VPLS label (S=1). A lookup based on the transport label results in the table handle for the mpls.0 routing table. A lookup based on the inner label in mpls.0 routing table results in the LSI tunnel interface of the VPLS routing instance if tunnel-services is not configured (or a VT interface not available). MX 3D Series routers support chained lookup and multi-family lookup.

NOTE: UHP for VPLS configured with the **no-tunnel-service** statement is supported on MX 3D Series routers only.

- IPv4 over MPLS—A packet arrives at the PE router (egress of the UHP LSP) with one label (S=1). A lookup based on this label returns a VT tunnel interface. Another IP lookup is completed on the VT interface to determine where to forward the packet. If the routing platform supports multi-family and chained lookups (for example, MX 3D routers and PTX Series Packet Transport Routers), lookup based on label route (S=1) points to the inet.0 routing table.
- IPv6 over MPLS—For IPv6 tunneling over MPLS, PE routers advertise IPv6 routes to each other with a label value of 2. This is the explicit null label for IPv6. As a result, the forwarding next hops for IPv6 routes that are learned from remote PE routers normally push two labels. The inner label is 2 (it could be different if the advertising PE router is from another vendor), and the router label is the LSP label. Packets arrive at the PE router (egress of the UHP LSP) with two labels. The outer label is the transport label (S=0), and the inner label is the IPv6 explicit-null label (label 2). Lookup based on the inner label in

the mpls.0 routing table redirects back to the mpls.0 routing table. On MX 3D Series routers, the inner label (label 2) is stripped off and an IPv6 lookup is done using the inet6.0 routing table.

- Enabling both PHP and UHP LSPs—You can configure both PHP and UHP LSPs over the same network paths. You can separate PHP and UHP traffic by selecting forwarding LSP next hops using a regular expression with the **install-nexthop** statement. You can also separate traffic by simply naming the LSPs appropriately.

The following statements enable ultimate-hop popping for an LSP. You can enable this feature on a specific LSP or for all of the ingress LSPs configured on the router. Configure these statements on the router at the LSP ingress.

1. To enable ultimate-hop popping, include the **ultimate-hop-popping** statement:

```
ultimate-hop-popping;
```

Include this statement at the **[edit protocols mpls label-switched-path label-switched-path-name]** hierarchy level to enable ultimate-hop popping on a specific LSP. Include this statement at the **[edit protocols mpls]** hierarchy level to enable ultimate-hop popping on all of the ingress LSPs configured on the router. You can also configure the **ultimate-hop-popping** statement under the equivalent **[edit logical-routers]** hierarchy levels.

NOTE: When you enable ultimate-hop popping, RSVP attempts to resignal existing LSPs as ultimate-hop popping LSPs in a make-before-break fashion. If an egress router does not support ultimate-hop popping, the existing LSP is torn down (RSVP sends a PathTear message along an LSP's path, removing the path state and dependent reservation state and releasing the associated networking resources).

If you disable ultimate-hop popping, RSVP resignals existing LSPs as penultimate-hop popping LSPs in a make-before-break fashion.

2. If you want to enable both ultimate-hop-popping and chained next hops on MX 3D Series routers only, you also need to configure the **enhanced-ip** option for the **network-services** statement:

```
network-services enhanced-ip;
```

You configure this statement at the **[edit chassis]** hierarchy level. Once you have configured the **network-services** statement, you need to reboot the router to enable UHP behavior.

Configuring RSVP to Pop the Label on the Ultimate-Hop Router

You can control the label value advertised on the egress router of an LSP. The default advertised label is label 3 (Implicit Null label). If label 3 is advertised, the penultimate-hop router removes the label and sends the packet to the egress router. When ultimate-hop popping is enabled, label 0 (IP version 4 [IPv4] Explicit Null label) is advertised. Ultimate-hop popping ensures that any packets traversing an MPLS network include a label.

NOTE: Juniper Networks routers queue packets based on the incoming label. Routers from other vendors might queue packets differently. Keep this in mind when working with networks containing routers from multiple vendors.

To configure ultimate-hop popping for RSVP, include the **explicit-null** statement:

```
explicit-null;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs

By default, for both point-to-point and point-to-multipoint LSPs, penultimate-hop popping is used for MPLS traffic. MPLS labels are removed from packets on the router just before the egress router of the LSP. The plain IP packets are then forwarded to the egress router. For ultimate-hop popping, the egress router is responsible for both removing the MPLS label and processing the plain IP packet.

It can be beneficial to enable ultimate-hop popping on point-to-multipoint LSPs, particularly when transit traffic is traversing the same egress device. If you enable ultimate-hop popping, a single copy of traffic can be sent over the incoming link, saving significant bandwidth. By default, ultimate-hop popping is disabled.

You enable ultimate-hop popping for point-to-multipoint LSPs by configuring the **tunnel-services** statement. When you enable ultimate-hop popping, the Junos OS selects one of the available virtual loopback tunnel (VT) interfaces to loop back the packets to the PFE for IP forwarding. By default, the VT interface selection process is performed automatically. Bandwidth admission control is used to limit the number of LSPs that can be used on one VT interface. Once all the bandwidth is consumed on one interface, the Junos OS selects another VT interface with sufficient bandwidth for admission control.

If an LSP requires more bandwidth than is available from any of the VT interfaces, ultimate-hop popping cannot be enabled and penultimate-hop popping is enabled instead.

For ultimate-hop popping on point-to-multipoint LSPs to function properly, the egress router must have a PIC that provides tunnel services, such as the tunnel services PIC or the adaptive services PIC. Tunnel services are needed for popping the final MPLS label and for returning packets for IP address lookups.

You can explicitly configure which VT interfaces handle the RSVP traffic by including the **devices** option for the **tunnel-services** statement. The **devices** option allows you to specify which VT interfaces are to be used by RSVP. If you do not configure this option, all of the VT interfaces available to the router can be used.

To enable ultimate-hop popping for the egress point-to-multipoint LSPs on a router, configure the **tunnel-services** statement:

```
tunnel-services {
  devices device-names;
}
```

You can configure this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

To enable ultimate-hop popping for egress point-to-multipoint LSPs, you must also configure the **interface** statement with the **all** option:

```
interface all;
```

You must configure this statement at the [edit protocols rsvp] hierarchy level.

Tracing RSVP Protocol Traffic

To trace RSVP protocol traffic, include the **traceoptions** statement:

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag <flag-modifier> <disable>;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

You can specify the following RSVP-specific flags in the RSVP **traceoptions** statement:

Use the **file** statement to specify the name of the file that receives the output of the tracing operation. All files are placed in the directory **/var/log**. We recommend that you place RSVP tracing output in the file **rsvp-log**.

- **all**—All tracing operations.
- **error**—All detected error conditions
- **event**—RSVP-related events (helps to trace events related to RSVP graceful restart)
- **lmp**—RSVP-Link Management Protocol (LMP) interactions
- **packets**—All RSVP packets
- **path**—All path messages
- **pathtear**—PathTear messages
- **resv**—Resv messages
- **resvtear**—ResvTear messages
- **route**—Routing information
- **state**—Session state transitions, including when RSVP-signaled LSPs come up and go down.

NOTE: Use the **all** trace flag and the **detail** flag modifier with caution because these might cause the CPU to become very busy.

To view the log file generated when you enable RSVP traceoptions, issue the **show log file-name** command, where **file-name** is the file you specified using the **traceoptions** statement.

For general information about tracing and global tracing options, see the *Junos OS Routing Protocols Library*.

Examples: Tracing RSVP Protocol Traffic

Trace RSVP path messages in detail:

```
[edit]
protocols {
  rsvp {
    traceoptions {
      file rsvp size 10m files 5;
      flag path;
    }
  }
}
```

Trace all RSVP messages:

```
[edit]
protocols {
  rsvp {
    traceoptions {
      file rsvp size 10m files 5;
      flag packets;
    }
  }
}
```

Trace all RSVP error conditions:

```
[edit]
protocols {
  rsvp {
    traceoptions {
      file rsvp size 10m files 5;
      flag error;
    }
  }
}
```

Trace RSVP state transitions:

```
[edit]
protocols {
  rsvp {
    traceoptions {
      file rsvp-data;
      flag state;
    }
  }
}
```

RSVP Log File Output

The following is sample output generated by issuing the **show log file-name** command on a router on which RSVP traceoptions have been enabled with the **state** flag configured. The RSVP-signaled LSP E-D is shown being torn down on Mar 11 14:04:36.707092. On Mar 11 14:05:30.101492, it is shown coming back up.

```

user@host> show log rsvp-data
Mar 11 13:58:51 trace_on: Tracing to "/var/log/E/rsvp-data" started
Mar 11 13:58:51.286413 rsvp_iflchange for vt ifl vt-1/2/0.69206016
Mar 11 13:58:51.286718 RSVP add interface vt-1/2/0.69206016, ifindex 101, ifaddr
(null), family 1, is_appl_vt 0, already known
Mar 11 13:58:51.286818 RSVP Peer vt-1/2/0.69206016 TE-link __rpd:vt-1/2/0.69206016
Up
Mar 11 13:58:51.286978 RSVP add interface vt-1/2/0.69206016, ifindex 101, ifaddr
(null), family 3, is_appl_vt 0, already known
Mar 11 13:58:51.287962 RSVP add interface lt-1/2/0.2, ifindex 113, ifaddr (null),
family 2, is_appl_vt 0, already known
Mar 11 13:58:51.288629 RSVP add interface lt-1/2/0.2, ifindex 113, ifaddr 10.0.0.2,
family 1, is_appl_vt 0, already known
Mar 11 13:58:51.288996 RSVP add interface lt-1/2/0.17, ifindex 114, ifaddr (null),
family 2, is_appl_vt 0, already known
Mar 11 13:58:51.289593 RSVP add interface lt-1/2/0.17, ifindex 114, ifaddr (null),
family 3, is_appl_vt 0, already known
Mar 11 13:58:51.289949 RSVP add interface lt-1/2/0.17, ifindex 114, ifaddr
10.0.0.17, family 1, is_appl_vt 0, already known
Mar 11 13:58:51.290049 RSVP Peer lt-1/2/0.17 TE-link __rpd:lt-1/2/0.17 Up
Mar 11 13:59:05.042034 RSVP new bypass Bypass->10.0.0.18 on interface lt-1/2/0.17
to 10.0.0.18 avoid 0.0.0.0
Mar 11 14:04:36.707092 LSP "E-D" is Down (Reason: Reservation state deleted)
      Session: 192.168.0.4(port/tunnel ID 10321 Ext-ID 192.168.0.5) Proto 0
Sender: 192.168.0.5(port/lsp ID 1)
Mar 11 14:04:36.707661 RSVP delete resv state, session 192.168.0.4(port/tunnel ID
10321 Ext-ID 192.168.0.5) Proto 0
Mar 11 14:04:36.781185 RSVP delete path state, session 192.168.0.4(port/tunnel ID
10321 Ext-ID 192.168.0.5) Proto 0
Mar 11 14:04:36.781440 RSVP delete session 192.168.0.4(port/tunnel ID 10321 Ext-ID
192.168.0.5) Proto 0
Mar 11 14:05:30.101492 RSVP new Session 192.168.0.4(port/tunnel ID 10321 Ext-ID
192.168.0.5) Proto 0, session ID 3
Mar 11 14:05:30.101722 RSVP new path state, session 192.168.0.4(port/tunnel ID
10321 Ext-ID 192.168.0.5) Proto 0
Mar 11 14:05:30.179124 RSVP new resv state, session 192.168.0.4(port/tunnel ID
10321 Ext-ID 192.168.0.5) Proto 0
Mar 11 14:05:30.179395 RSVP PSB E-D, allocating psb resources for label 4294967295
Mar 11 14:05:30.180353 LSP "E-D" is Up
      Session: 192.168.0.4(port/tunnel ID 10321 Ext-ID 192.168.0.5) Proto 0
Sender: 192.168.0.5(port/lsp ID 2)

```

RSVP Graceful Restart

RSVP graceful restart allows a router undergoing a restart to inform its adjacent neighbors of its condition. The restarting router requests a grace period from the neighbor or peer, which can then cooperate with the restarting router. The restarting router can still forward MPLS traffic during the restart period; convergence in the network is not disrupted. The restart is not visible to the rest of the network, and the restarting router is not removed from the network topology. RSVP graceful restart can be enabled on both transit routers and ingress routers. It is available for both point-to-point LSPs and point-to-multipoint LSPs.

RSVP graceful restart is described in the following sections:

- *RSVP Graceful Restart Standard*
- [RSVP Graceful Restart Terminology on page 815](#)
- [RSVP Graceful Restart Operation on page 816](#)
- [Processing the Restart Cap Object on page 817](#)

RSVP Graceful Restart Terminology

R

Recovery time (in milliseconds)	<p>Applies only when the control channel is up (the hello exchange is complete) before the restart time.</p> <p>Applies only to nodal faults.</p> <p>When a graceful restart is in progress, the time left to complete a recovery is advertised. At other times, this value is zero. The maximum advertised recovery time is 2 minutes (120,000 milliseconds).</p> <p>During the recovery time, a restarting node attempts to recover its lost states with assistance from its neighbors. The neighbor of the restarting node must send the path messages with the recovery labels to the restarting node within a period of one-half the recovery time. The restarting node considers its graceful restart complete after its advertised recovery time.</p>
Restart time (in milliseconds)	<p>The default value is 60,000 milliseconds (1 minute). The restart time is advertised in the hello message.</p> <p>The time indicates how long a neighbor should wait to receive a hello message from a restarting router before declaring that router dead and purging states.</p> <p>The Junos OS can override a neighbor's advertised restart time if the time is greater than one-third the local restart time. For example, given the default restart time of 60 seconds, a router would wait 20 seconds or less to receive a hello message from a restarting neighbor. If the restart time is zero, the restarting neighbor can immediately be declared dead.</p>

RSVP Graceful Restart Operation

For RSVP graceful restart to function, the feature must be enabled on the global routing instance. RSVP graceful restart can be disabled at the protocol level (for RSVP alone) or at the global level for all protocols.

RSVP graceful restart requires the following of a restarting router and the router's neighbors:

- For the restarting router, RSVP graceful restart attempts to maintain the routes installed by RSVP and the allocated labels, so that traffic continues to be forwarded without disruption. RSVP graceful restart is done quickly enough to reduce or eliminate the impact on neighboring nodes.
- The neighboring routers must have RSVP graceful restart helper mode enabled, thus allowing them to assist a router attempting to restart RSVP.

An object called Restart Cap that is sent in RSVP hello messages advertises a node's restart capability. The neighboring node sends a Recover Label object to the restarting node to recover its forwarding state. This object is essentially the old label that the restarting node advertised before the node went down.

The following lists the RSVP graceful restart behaviors, which vary depending on the configuration and on which features are enabled:

- If you disable helper mode, the Junos OS does not attempt to help a neighbor restart RSVP. Any information that arrives with a Restart Cap object from a neighbor is ignored.
- When you enable graceful restart under the routing instance configuration, the router can restart gracefully with the help of its neighbors. RSVP advertises a Restart Cap object (RSVP RESTART) in hello messages in which restart and recovery times are specified (neither value is 0).
- If you explicitly disable RSVP graceful restart under the **[protocols rsvp]** hierarchy level, the Restart Cap object is advertised with restart and recovery times specified as 0. The restart of neighboring routers is supported (unless helper mode is disabled), but the router itself does not preserve the RSVP forwarding state and cannot recover its control state.
- If after a restart RSVP realizes that no forwarding state has been preserved, the Restart Cap object is advertised with restart and recovery times specified as 0.
- If graceful restart and helper mode are disabled, RSVP graceful restart is completely disabled. The router neither recognizes nor advertises the RSVP graceful restart objects.

You cannot explicitly configure values for the restart and recovery times.

Unlike other protocols, there is no way for RSVP to determine that it has completed a restart procedure, other than a fixed timeout. All RSVP graceful restart procedures are timer-based. A **show rsvp version** command might indicate that the restart is still in progress even if all RSVP sessions are back up and the routes are restored.

Processing the Restart Cap Object

The following assumptions are made about a neighbor based on the Restart Cap object (assuming that a control channel failure can be distinguished unambiguously from a node restart):

- A neighbor that does not advertise the Restart Cap object in its hello messages cannot assist a router with state or label recovery, nor can it perform an RSVP graceful restart.
- After a restart, a neighbor advertising a Restart Cap object with a restart time equal to any value and a recovery time equal to 0 has not preserved its forwarding state. When a recovery time equals 0, the neighbor is considered dead and any states related to this neighbor are purged, regardless of the value of the restart time.
- After a restart, a neighbor advertising its recovery time with a value other than 0 can keep or has kept the forwarding state. If the local router is helping its neighbor with restart or recovery procedures, it sends a Recover Label object to this neighbor.

Configuring RSVP Graceful Restart

IN THIS SECTION

- [Enabling Graceful Restart for All Routing Protocols | 818](#)
- [Disabling Graceful Restart for RSVP | 818](#)
- [Disabling RSVP Helper Mode | 818](#)
- [Configuring the Maximum Helper Recovery Time | 819](#)
- [Configuring the Maximum Helper Restart Time | 819](#)

The following RSVP graceful restart configurations are possible:

- Graceful restart and helper mode are both enabled (the default).
- Graceful restart is enabled but helper mode is disabled. A router configured in this way can restart gracefully, but cannot help a neighbor with its restart and recovery procedures.
- Graceful restart is disabled but helper mode is enabled. A router configured in this way cannot restart gracefully, but can help a restarting neighbor.
- Graceful restart and helper mode both are disabled. This configuration completely disables RSVP graceful restart (including restart and recovery procedures and helper mode). The router behaves like a router that does not support RSVP graceful restart.

NOTE: In order to turn on RSVP graceful restart, you must set the global graceful restart timer to at least 180 seconds.

The following sections describe how to configure RSVP graceful restart:

Enabling Graceful Restart for All Routing Protocols

To enable graceful restart for RSVP, you need to enable graceful restart for all the protocols that support graceful restart on the router. For more information about graceful restart, see the *Junos OS Routing Protocols Library*.

To enable graceful restart on the router, include the **graceful-restart** statement:

```
graceful-restart;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

Disabling Graceful Restart for RSVP

By default, RSVP graceful restart and RSVP helper mode are enabled when you enable graceful restart. However, you can disable one or both of these capabilities.

To disable RSVP graceful restart and recovery, include the **disable** statement at the [edit protocols rsvp graceful-restart] hierarchy level:

```
disable;
```

Disabling RSVP Helper Mode

To disable RSVP helper mode, include the **helper-disable** statement at the [edit protocols rsvp graceful-restart] hierarchy level:

```
helper-disable;
```

Configuring the Maximum Helper Recovery Time

To configure the amount of time the router retains the state of its RSVP neighbors while they undergo a graceful restart, include the **maximum-helper-recovery-time** statement at the **[edit protocols rsvp graceful-restart]** hierarchy level. This value is applied to all neighboring routers, so it should be based on the time required by the slowest RSVP neighbor to recover.

```
maximum-helper-recovery-time seconds;
```

Configuring the Maximum Helper Restart Time

To configure the delay between when the router discovers that a neighboring router has gone down and when it declares the neighbor down, include the **maximum-helper-restart-time** statement at the **[edit protocols rsvp graceful-restart]** hierarchy level. This value is applied to all neighboring routers, so it should be based on the time required by the slowest RSVP neighbor to restart.

```
maximum-helper-restart-time seconds;
```

RSVP LSP Tunnels Overview

A Resource Reservation Protocol (RSVP) label-switched path (LSP) tunnel enables you to send RSVP LSPs inside other RSVP LSPs. This enables a network administrator to provide traffic engineering from one end of the network to the other. A useful application for this feature is to connect customer edge (CE) routers with provider edge (PE) routers by using an RSVP LSP, and then tunnel this edge LSP inside a second RSVP LSP traveling across the network core.

You should have a general understanding of MPLS and label switching concepts. For more information about MPLS, see the *Junos MPLS Applications Configuration Guide*.

An RSVP LSP tunnel adds the concept of a forwarding adjacency, similar to the one used for generalized Multiprotocol Label Switching (GMPLS). (For more information about GMPLS, see *Junos GMPLS User Guide*.)

The forwarding adjacency creates a tunneled path for sending data between peer devices in an RSVP LSP network. Once a forwarding adjacency LSP (FA-LSP) has been established, other LSPs can be sent over the FA-LSP by using Constrained Shortest Path First (CSPF), Link Management Protocol (LMP), Open Shortest Path First (OSPF), and RSVP.

To enable an RSVP LSP tunnel, the Junos OS uses the following mechanisms:

- LMP—Originally designed for GMPLS, LMP establishes forwarding adjacencies between RSVP LSP tunnel peers, and maintains and allocates resources for traffic engineering links.
- OSPF extensions—OSPF was designed to route packets to physical and logical interfaces related to a Physical Interface Card (PIC). This protocol has been extended to route packets to virtual peer interfaces defined in an LMP configuration.

- RSVP-TE extensions—RSVP-TE was designed to signal the setup of packet LSPs to physical interfaces. The protocol has been extended to request path setup for packet LSPs traveling to virtual peer interfaces defined in an LMP configuration.

NOTE: Beginning with Junos OS Release 15.1, multi-instance support is extended to MPLS RSVP-TE. This support is available only for virtual router instance type. A router can create and participate in multiple independent TE topology partitions, which allows each partitioned TE domain to scale independently. Multi-instance RSVP-TE provides the flexibility to hand pick the control-plane entities that need to be instance-aware, for example, a router can participate in multiple TE instances while still running a single BGP instance.

The Junos OS implementation of MPLS RSVP-TE is scaled to enhance the usability, visibility, configuration, and troubleshooting of LSPs in Junos OS Release 16.1.

These enhancements make the RSVP-TE configuration easier at scale by:

- Ensuring the LSP data-plane readiness during LSP resignaling before traffic traverses the LSP with the RSVP-TE LSP self-ping mechanism.

An LSP should not start to carry traffic unless it is known to have been programmed in the data plane. Data exchange in the LSP data plane, such as LSP ping requests, happens at the ingress router before switching traffic to an LSP, or to its MBB instance. In large networks, this traffic can overwhelm an LSP egress router, as the egress LSP needs to respond to the LSP ping requests. The LSP self-ping mechanism enables the ingress LER to create LSP ping response messages and send them over the LSP data plane. On receiving these messages, the egress LER forwards them to the ingress, indicating the liveness of the LSP data plane. This ensures that the LSP does not start to carry traffic before the data plane has been programmed.

- Removing the current hard limit of 64K LSPs on an ingress router and scaling the total number of LSPs with RSVP-TE signaled LSPs. There can be up to 64K LSPs configured on a per-egress basis. Earlier, this limit was the aggregate number of LSPs that could be configured on the ingress LER.
- Preventing abrupt tearing down of LSPs by the ingress router because of delay in signaling the LSP at the transit routers.
- Enabling a flexible view of LSP data-sets to facilitate LSP characteristic data visualization.

NOTE: Starting with Junos OS Release 17.4, a default timer of 1800 seconds for self-ping is introduced.

The following limitations exist for LSP hierarchies:

- Circuit cross-connect (CCC)-based LSPs are not supported.
- Graceful restart is not supported.
- Link protection is not available for FA-LSPs or at the egress point of the forwarding adjacency.
- Point-to-multipoint LSPs are not supported across FA-LSPs.

Example: RSVP LSP Tunnel Configuration

Figure 61: RSVP LSP Tunnel Topology Diagram

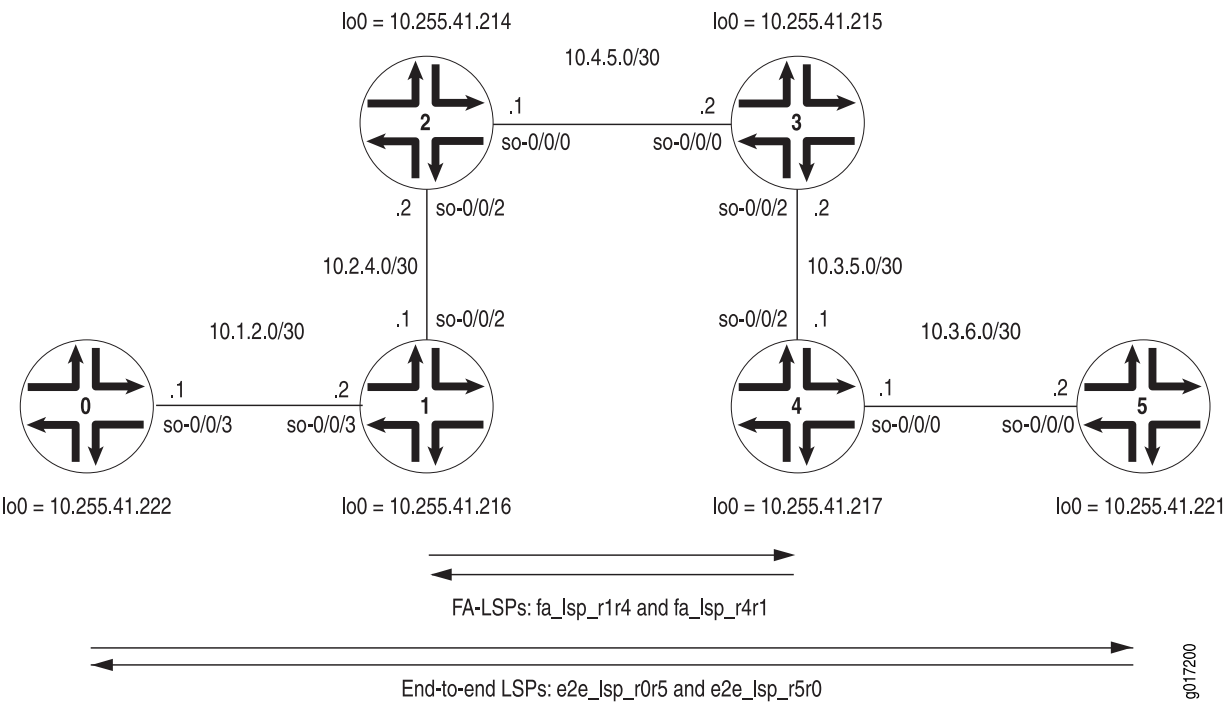


Figure 61 on page 821 shows an end-to-end RSVP LSP called **e2e_lsp_r0r5** that originates on Router 0 and terminates on Router 5. In transit, this LSP traverses the FA-LSP **fa_lsp_r1r4**. The return path is represented by the end-to-end RSVP LSP **e2e_lsp_r5r0** that travels over the FA-LSP **fa_lsp_r4r1**.

On Router 0, configure the end-to-end RSVP LSP that travels to Router 5. Use a strict path that traverses Router 1 and the LMP traffic engineering link traveling from Router 1 to Router 4.

Router 0

[edit]

```

interfaces {
  so-0/0/3 {
    unit 0 {
      family inet {
        address 10.1.2.1/30;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.41.222/32;
      }
      family mpls;
    }
  }
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    admin-groups {
      fa 1;
      backup 2;
      other 3;
    }
    label-switched-path e2e_lsp_r0r5 { # An end-to-end LSP traveling to Router 5.
      to 10.255.41.221;
      bandwidth 30k;
      primary path-fa; # Reference the requested path here.
    }
    path path-fa { # Configure the strict path here.

```

```

    10.1.2.2 strict;
    172.16.30.2 strict; # This traverses the TE link heading to Router 4.
  }
  interface all;
  interface fxp0.0 {
    disable;
  }
  interface so-3/2/1.0 {
    admin-group other;
  }
  interface so-0/0/3.0 {
    admin-group other;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface fxp0.0 {
      disable;
    }
    interface all;
  }
}
}
policy-options {
  policy-statement pplb {
    then {
      load-balance per-packet;
    }
  }
}
}

```

On Router 1, configure an FA-LSP to reach Router 4. Establish an LMP traffic engineering link and LMP peer relationship with Router 4. Reference the FA-LSP in the traffic engineering link and add the peer interface into both OSPF and RSVP.

When the return path end-to-end LSP arrives at Router 1, the routing platform performs a routing lookup and can forward traffic to Router 0. Make sure you configure OSPF correctly between Routers 0 and 1.

Router 1

```
[edit]
interfaces {
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.2.3.1/30;
      }
      family mpls;
    }
  }
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.2.4.1/30;
      }
      family mpls;
    }
  }
  so-0/0/3 {
    unit 0 {
      family inet {
        address 10.1.2.2/30;
      }
      family mpls;
    }
  }
  fe-0/1/2 {
    unit 0 {
      family inet {
        address 10.2.5.1/30;
      }
      family mpls;
    }
  }
  at-1/0/0 {
    atm-options {
      vpi 1;
    }
    unit 0 {
      vci 1.100;
      family inet {
        address 10.2.3.5/30;
      }
    }
  }
}
```



```

    }
    family mpls;
  }
}
routing-options {
  forwarding-table {
    export [ pplb choose_lsp ];
  }
}
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
    peer-interface r4; # Apply the LMP peer interface here.
  }
  mpls {
    admin-groups {
      fa 1;
      backup 2;
      other 3;
    }
    label-switched-path fa_lsp_r1r4 { # Configure your FA-LSP to Router 4 here.
      to 10.255.41.217;
      bandwidth 400k;
      primary path_r1r4; # Apply the FA-LSP path here.
    }
    path path_r1r4 { # Configure the FA-LSP path here.
      10.2.4.2;
      10.4.5.2;
      10.3.5.1;
    }
    interface so-0/0/3.0 {
      admin-group other;
    }
    interface so-0/0/1.0 {
      admin-group fa;
    }
    interface at-1/0/0.0 {
      admin-group backup;
    }
  }
}

```

```

    }
    interface fe-0/1/2.0 {
        admin-group backup;
    }
    interface so-0/0/2.0 {
        admin-group fa;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
        peer-interface r4; # Apply the LMP peer interface here.
    }
}
link-management { # Configure LMP statements here.
    te-link link_r1r4 { # Assign a name to the TE link here.
        local-address 172.16.30.1; # Configure a local address for the TE link.
        remote-address 172.16.30.2; # Configure a remote address for the TE link.
        te-metric 1; # Manually set a metric here if you are not relying on CSPF.
        label-switched-path fa_lsp_r1r4; # Reference the FA-LSP here.
    }
    peer r4 { # Configure LMP peers here.
        address 10.255.41.217; # Configure the loopback address of your peer here.
        te-link link_r1r4; # Apply the LMP TE link here.
    }
}
}
policy-options {
    policy-statement choose_lsp {
        term A {
            from community choose_e2e_lsp;
            then {
                install-nexthop strict lsp e2e_lsp_r1r4;
                accept;
            }
        }
        term B {
            from community choose_fa_lsp;

```

```

        then {
            install-nexthop strict lsp fa_lsp_r1r4;
            accept;
        }
    }
}
policy-statement pplb {
    then {
        load-balance per-packet;
    }
}
community choose_e2e_lsp members 1000:1000;
community choose_fa_lsp members 2000:2000;
community set_e2e_lsp members 1000:1000;
community set_fa_lsp members 2000:2000;
}

```

On Router 2, configure OSPF, MPLS, and RSVP on all interfaces that transport the FA-LSPs across the core network.

Router 2

```

[edit]
interfaces {
    so-0/0/0 {
        unit 0 {
            family inet {
                address 10.4.5.1/30;
            }
            family mpls;
        }
    }
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.1.4.2/30;
            }
            family mpls;
        }
    }
}

```

```

so-0/0/2 {
  unit 0 {
    family inet {
      address 10.2.4.2/30;
    }
    family mpls;
  }
}
fe-0/1/2 {
  unit 0 {
    family inet {
      address 10.3.4.2/30;
    }
    family mpls;
  }
}
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
}
protocols { # OSPF, MPLS, and RSVP form the core backbone for the FA-LSPs.
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    admin-groups {
      fa 1;
      backup 2;
      other 3;
    }
    path path_r1 {
      10.2.4.1;
    }
    path path_r3r4 {
      10.4.5.2;
      10.3.5.1;
    }
  }
}

```

```

interface all;
interface fxp0.0 {
    disable;
}
interface so-0/0/1.0 {
    admin-group other;
}
interface fe-0/1/2.0 {
    admin-group backup;
}
interface so-0/0/2.0 {
    admin-group fa;
}
interface so-0/0/0.0 {
    admin-group fa;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
    }
}
}
policy-options {
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
}
}

```

On Router 3, configure OSPF, MPLS, and RSVP on all interfaces that transport the FA-LSPs across the core network.

Router 3

```

[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        address 10.4.5.2/30;
      }
      family mpls;
    }
  }
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.5.6.1/30;
      }
      family mpls;
    }
  }
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.3.5.2/30;
      }
      family mpls;
    }
  }
  fe-0/1/2 {
    unit 0 {
      family inet {
        address 10.2.5.2/30;
      }
      family mpls;
    }
  }
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
protocols { # OSPF, MPLS, and RSVP form the core backbone for the FA-LSPs.
  rsvp {

```

```

interface all;
interface fxp0.0 {
    disable;
}
}
mpls {
    admin-groups {
        fa 1;
        backup 2;
        other 3;
    }
    path path_r4 {
        10.3.5.1;
    }
    path path_r2r1 {
        10.4.5.1;
        10.2.4.1;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface so-0/0/2.0 {
        admin-group fa;
    }
    interface fe-0/1/2.0 {
        admin-group backup;
    }
    interface so-0/0/1.0 {
        admin-group other;
    }
    interface so-0/0/0.0 {
        admin-group fa;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;

```

```

    }
  }
}
policy-options {
  policy-statement pplb {
    then {
      load-balance per-packet;
    }
  }
}

```

On Router 4, configure a return path FA-LSP to reach Router 1. Establish an LMP traffic engineering link and LMP peer relationship with Router 1. Reference the FA-LSP in the traffic engineering link and add the peer interface into both OSPF and RSVP.

When the initial end-to-end LSP arrives at Router 4, the routing platform performs a routing lookup and can forward traffic to Router 5. Make sure you configure OSPF correctly between Router 4 and Router 5.

Router 4

```

[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        address 10.3.6.1/30;
      }
      family mpls;
    }
  }
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.2.3.2/30;
      }
      family mpls;
    }
  }
  so-0/0/2 {
    unit 0 {

```



```

        family inet {
            address 10.3.5.1/30;
        }
        family mpls;
    }
}
fe-0/1/2 {
    unit 0 {
        family inet {
            address 10.3.4.1/30;
        }
        family mpls;
    }
}
at-1/0/0 {
    atm-options {
        vpi 1;
    }
    unit 0 {
        vci 1.100;
        family inet {
            address 10.2.3.6/30;
        }
        family mpls;
    }
}
}
routing-options {
    forwarding-table {
        export [ pplb choose_lsp ];
    }
}
protocols {
    rsvp {
        interface all;
        interface fxp0.0 {
            disable;
        }
        peer-interface r1; # Apply the LMP peer interface here.
    }
}
mpls {
    admin-groups {

```

```

    fa 1;
    backup 2;
    other 3;
}
label-switched-path fa_lsp_r4r1 { # Configure your FA-LSP here.
    to 10.255.41.216;
    bandwidth 400k;
    primary path_r4r1; # Apply the FA-LSP path here.
}
path path_r4r1 { # Configure the FA-LSP path here.
    10.3.5.2;
    10.4.5.1;
    10.2.4.1;
}
interface all;
interface fxp0.0 {
    disable;
}
interface at-1/0/0.0 {
    admin-group backup;
}
interface so-0/0/2.0 {
    admin-group fa;
}
interface fe-0/1/2.0 {
    admin-group backup;
}
interface so-0/0/0.0 {
    admin-group other;
}
interface so-0/0/1.0 {
    admin-group fa;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
        peer-interface r1; # Apply the LMP peer interface here.
    }
}

```

```

    }
}
link-management { # Configure LMP statements here.
    te-link link_r4r1 { # Assign a name to the TE link here.
        local-address 172.16.30.2; # Configure a local address for the TE link.
        remote-address 172.16.30.1; # Configure a remote address for the TE link.
        te-metric 1; # Manually set a metric here if you are not relying on CSPF.
        label-switched-path fa_lsp_r4r1; # Reference the FA-LSP here.
    }
    peer r1 { # Configure LMP peers here.
        address 10.255.41.216; # Configure the loopback address of your peer here.
        te-link link_r4r1; # Apply the LMP TE link here.
    }
}
}
policy-options {
    policy-statement choose_lsp {
        term A {
            from community choose_e2e_lsp;
            then {
                install-nexthop strict lsp e2e_lsp_r4r1;
                accept;
            }
        }
        term B {
            from community choose_fa_lsp;
            then {
                install-nexthop strict lsp fa_lsp_r4r1;
                accept;
            }
        }
    }
}
policy-statement pplb {
    then {
        load-balance per-packet;
    }
}
community choose_e2e_lsp members 1000:1000;
community choose_fa_lsp members 2000:2000;
community set_e2e_lsp members 1000:1000;
community set_fa_lsp members 2000:2000;
}

```

On Router 5, configure the return path end-to-end RSVP LSP that travels to Router 0. Use a strict path that traverses Router 4 and the LMP traffic engineering link traveling from Router 4 to Router 1.

Router 5

```
[edit]
interfaces {
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.3.6.2/30;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.41.221/32;
      }
    }
  }
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    admin-groups {
      fa 1;
      backup 2;
      other 3;
    }
    label-switched-path e2e_lsp_r5r0 { # An end-to-end LSP returning to Router 0.
      to 10.255.41.222;
```

```

    bandwidth 30k;
    primary path-fa; # Reference the requested path here.
  }
  path path-fa { # Configure the strict path here.
    10.3.6.1 strict;
    172.16.30.1 strict; # This traverses the TE link heading to Router 1.
  }
  interface all;
  interface fxp0.0 {
    disable;
  }
  interface so-0/0/2.0 {
    admin-group other;
  }
  interface so-0/0/1.0 {
    admin-group other;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface fxp0.0 {
      disable;
    }
    interface all;
  }
}
}
policy-options {
  policy-statement pplb {
    then {
      load-balance per-packet;
    }
  }
}
}

```

IN THIS SECTION

- Router 0 | 838
- Router 1 | 844

To verify that your RSVP LSP tunnel is working correctly, issue the following commands:

- show ted database (extensive)
- show rsvp session name (extensive)
- show link-management
- show link-management te-link name (detail)

To see these commands used with the configuration example, see the following sections:

Router 0

On Router 0, you can verify that the FA-LSPs appear as valid paths in the traffic engineering database. In this case, look for the paths from Router 1 (**10.255.41.216**) and Router 4 (**10.255.41.217**) that reference the LMP traffic engineering link addresses of **172.16.30.1** and **172.16.30.2**. You can also issue the **show** **rsvp session extensive** command to look for the path of the end-to-end LSP as it travels to Router 5 over the FA-LSP.

```
user@router0> show ted database
```

```
TED database: 0 ISIS nodes 8 INET nodes
```

ID	Type	Age(s)	LnkIn	LnkOut	Protocol
10.255.41.214	Rtr	486	4	4	OSPF(0.0.0.0)
To: 10.255.41.222, Local: 10.1.4.2, Remote: 10.1.4.1					
To: 10.255.41.216, Local: 10.2.4.2, Remote: 10.2.4.1					
To: 10.255.41.215, Local: 10.4.5.1, Remote: 10.4.5.2					
To: 10.3.4.1-1, Local: 10.3.4.2, Remote: 0.0.0.0					
ID	Type	Age(s)	LnkIn	LnkOut	Protocol
10.255.41.215	Rtr	187	4	4	OSPF(0.0.0.0)
To: 10.255.41.214, Local: 10.4.5.2, Remote: 10.4.5.1					
To: 10.255.41.217, Local: 10.3.5.2, Remote: 10.3.5.1					
To: 10.255.41.221, Local: 10.5.6.1, Remote: 10.5.6.2					
To: 10.2.5.1-1, Local: 10.2.5.2, Remote: 0.0.0.0					
ID	Type	Age(s)	LnkIn	LnkOut	Protocol
10.255.41.216	Rtr	396	6	6	OSPF(0.0.0.0)

To: 10.255.41.222, Local: 10.1.2.2, Remote: 10.1.2.1
 To: 10.255.41.214, Local: 10.2.4.1, Remote: 10.2.4.2
 To: 10.255.41.217, Local: 10.2.3.1, Remote: 10.2.3.2

To: 10.255.41.217, Local: 172.16.30.1, Remote: 172.16.30.2

To: 10.255.41.217, Local: 10.2.3.5, Remote: 10.2.3.6
 To: 10.2.5.1-1, Local: 10.2.5.1, Remote: 0.0.0.0

ID	Type	Age(s)	LnkIn	LnkOut	Protocol
10.255.41.217	Rtr	404	6	6	OSPF(0.0.0.0)

To: 10.255.41.216, Local: 10.2.3.2, Remote: 10.2.3.1

To: 10.255.41.216, Local: 172.16.30.2, Remote: 172.16.30.1

To: 10.255.41.216, Local: 10.2.3.6, Remote: 10.2.3.5
 To: 10.255.41.215, Local: 10.3.5.1, Remote: 10.3.5.2
 To: 10.255.41.221, Local: 10.3.6.1, Remote: 10.3.6.2
 To: 10.3.4.1-1, Local: 10.3.4.1, Remote: 0.0.0.0

ID	Type	Age(s)	LnkIn	LnkOut	Protocol
10.255.41.221	Rtr	481	2	2	OSPF(0.0.0.0)

To: 10.255.41.215, Local: 10.5.6.2, Remote: 10.5.6.1

To: 10.255.41.217, Local: 10.3.6.2, Remote: 10.3.6.1

ID	Type	Age(s)	LnkIn	LnkOut	Protocol
10.255.41.222	Rtr	2883	2	2	OSPF(0.0.0.0)

To: 10.255.41.216, Local: 10.1.2.1, Remote: 10.1.2.2

To: 10.255.41.214, Local: 10.1.4.1, Remote: 10.1.4.2

user@router0> **show ted database 10.255.41.216 extensive**

TED database: 0 ISIS nodes 8 INET nodes

NodeID: 10.255.41.216

Type: Rtr, Age: 421 secs, LinkIn: 6, LinkOut: 6

Protocol: OSPF(0.0.0.0)

To: 10.255.41.222, Local: 10.1.2.2, Remote: 10.1.2.1

Color: 0x8 other

Metric: 1

Static BW: 155.52Mbps

Reservable BW: 155.52Mbps

Available BW [priority] bps:

[0] 155.4Mbps	[1] 155.4Mbps	[2] 155.4Mbps	[3] 155.4Mbps
[4] 155.4Mbps	[5] 155.4Mbps	[6] 155.4Mbps	[7] 155.4Mbps

Interface Switching Capability Descriptor(1):

Switching type: Packet

Encoding type: Packet

Maximum LSP BW [priority] bps:

[0] 155.4Mbps	[1] 155.4Mbps	[2] 155.4Mbps	[3] 155.4Mbps
[4] 155.4Mbps	[5] 155.4Mbps	[6] 155.4Mbps	[7] 155.4Mbps

To: 10.255.41.214, Local: 10.2.4.1, Remote: 10.2.4.2

Color: 0x2 fa

```

Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.12Mbps    [1] 155.12Mbps    [2] 155.12Mbps    [3] 155.12Mbps
    [4] 155.12Mbps    [5] 155.12Mbps    [6] 155.12Mbps    [7] 155.12Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 155.12Mbps    [1] 155.12Mbps    [2] 155.12Mbps    [3] 155.12Mbps
        [4] 155.12Mbps    [5] 155.12Mbps    [6] 155.12Mbps    [7] 155.12Mbps
To: 10.255.41.217, Local: 10.2.3.1, Remote: 10.2.3.2
Color: 0x2 fa
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
    [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
To: 10.255.41.217, Local: 172.16.30.1, Remote: 172.16.30.2
Metric: 1
Static BW: 400kbps
Reservable BW: 400kbps
Available BW [priority] bps:
    [0] 370kbps      [1] 370kbps      [2] 370kbps      [3] 370kbps
    [4] 370kbps      [5] 370kbps      [6] 370kbps      [7] 370kbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 370kbps      [1] 370kbps      [2] 370kbps      [3] 370kbps
        [4] 370kbps      [5] 370kbps      [6] 370kbps      [7] 370kbps
To: 10.255.41.217, Local: 10.2.3.5, Remote: 10.2.3.6
Color: 0x4 backup
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps

```



```

Available BW [priority] bps:
  [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
  [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
    [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
To: 10.2.5.1-1, Local: 10.2.5.1, Remote: 0.0.0.0
Color: 0x4 backup
Metric: 1
Static BW: 100Mbps
Reservable BW: 100Mbps
Available BW [priority] bps:
  [0] 100Mbps      [1] 100Mbps      [2] 100Mbps      [3] 100Mbps
  [4] 100Mbps      [5] 100Mbps      [6] 100Mbps      [7] 100Mbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 100Mbps     [1] 100Mbps     [2] 100Mbps     [3] 100Mbps
    [4] 100Mbps     [5] 100Mbps     [6] 100Mbps     [7] 100Mbps

user@router0> show ted database 10.255.41.217 extensive
TED database: 0 ISIS nodes 8 INET nodes
NodeID: 10.255.41.217
  Type: Rtr, Age: 473 secs, LinkIn: 6, LinkOut: 6
  Protocol: OSPF(0.0.0.0)
  To: 10.255.41.216, Local: 10.2.3.2, Remote: 10.2.3.1
  Color: 0x2 fa
  Metric: 1
  Static BW: 155.52Mbps
  Reservable BW: 155.52Mbps
  Available BW [priority] bps:
    [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
    [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
  Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
      [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
      [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
  To: 10.255.41.216, Local: 172.16.30.2, Remote: 172.16.30.1

```

```

Metric: 1
Static BW: 400kbps
Reservable BW: 400kbps
Available BW [priority] bps:
    [0] 370kbps    [1] 370kbps    [2] 370kbps    [3] 370kbps
    [4] 370kbps    [5] 370kbps    [6] 370kbps    [7] 370kbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 370kbps    [1] 370kbps    [2] 370kbps    [3] 370kbps
        [4] 370kbps    [5] 370kbps    [6] 370kbps    [7] 370kbps
To: 10.255.41.216, Local: 10.2.3.6, Remote: 10.2.3.5
Color: 0x4 backup
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
    [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
To: 10.255.41.215, Local: 10.3.5.1, Remote: 10.3.5.2
Color: 0x2 fa
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.12Mbps    [1] 155.12Mbps    [2] 155.12Mbps    [3] 155.12Mbps
    [4] 155.12Mbps    [5] 155.12Mbps    [6] 155.12Mbps    [7] 155.12Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 155.12Mbps    [1] 155.12Mbps    [2] 155.12Mbps    [3] 155.12Mbps
        [4] 155.12Mbps    [5] 155.12Mbps    [6] 155.12Mbps    [7] 155.12Mbps
To: 10.255.41.221, Local: 10.3.6.1, Remote: 10.3.6.2
Color: 0x8 other
Metric: 1
Static BW: 155.52Mbps

```

```

Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
    [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
To: 10.3.4.1-1, Local: 10.3.4.1, Remote: 0.0.0.0
Color: 0x4 backup
Metric: 1
Static BW: 100Mbps
Reservable BW: 100Mbps
Available BW [priority] bps:
    [0] 100Mbps        [1] 100Mbps        [2] 100Mbps        [3] 100Mbps
    [4] 100Mbps        [5] 100Mbps        [6] 100Mbps        [7] 100Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 100Mbps        [1] 100Mbps        [2] 100Mbps        [3] 100Mbps
        [4] 100Mbps        [5] 100Mbps        [6] 100Mbps        [7] 100Mbps

```

```
user@router0> show rsvp session name e2e_lsp_r0r5 extensive
```

```

Ingress RSVP: 1 sessions
10.255.41.221
    From: 10.255.41.222, LSPstate: Up, ActiveRoute: 2
    LSPname: e2e_lsp_r0r5, LSPpath: Primary
    Suggested label received: -, Suggested label sent: -
    Recovery label received: -, Recovery label sent: 101584
    Resv style: 1 FF, Label in: -, Label out: 101584
    Time left:    -, Since: Wed Sep  7 19:02:56 2005
    Tspec: rate 30kbps size 30kbps peak Infbps m 20 M 1500
    Port number: sender 2 receiver 29458 protocol 0
    PATH rcvfrom: localclient
    Adspec: sent MTU 1500
    Path MTU: received 1500
    PATH sentto: 10.1.2.2 (so-0/0/3.0) 15 pkts
    RESV rcvfrom: 10.1.2.2 (so-0/0/3.0) 16 pkts
Explt route: 10.1.2.2 172.16.30.2 10.3.6.2
Record route: <self> 10.1.2.2 172.16.30.2 10.3.6.2
Total 1 displayed, Up 1, Down 0

```

```
Egress RSVP: 1 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Router 1

On Router 1, verify that your LMP traffic engineering link configuration is working and that the end-to-end LSP is traversing the traffic engineering link by issuing the **show link-management** set of commands. You can also issue the **show rsvp session extensive** command to confirm that the FA-LSP is operational.

```
user@router1> show link-management
```

```
Peer name: r4 , System identifier: 10758
State: Up, Control address: 10.255.41.217
  TE links:
    link_r1r4

TE link name: link_r1r4, State: Up
  Local identifier: 16299, Remote identifier: 0, Local address: 172.16.30.1, Remote address:
172.16.30.2,
  Encoding: Packet, Switching: Packet, Minimum bandwidth: 0bps, Maximum bandwidth:
400kbps,
  Total bandwidth: 400kbps, Available bandwidth: 370kbps
    Name          State Local ID Remote ID      Bandwidth Used LSP-name
    fa_lsp_r1r4 Up    22642    0    400kbps Yes e2e_lsp_r0r5
```

```
user@router1> show link-management te-link name link_r1r4 detail
TE link name: link_r1r4, State: Up
  Local identifier: 16299, Remote identifier: 0, Local address: 172.16.30.1, Remote address:
172.16.30.2,
  Encoding: Packet, Switching: Packet, Minimum bandwidth: 0bps, Maximum bandwidth:
400kbps,
  Total bandwidth: 400kbps, Available bandwidth: 370kbps
    Resource: fa_lsp_r1r4, Type: LSP, System identifier: 2147483683, State: Up,
Local identifier: 22642,
  Remote identifier: 0
  Total bandwidth: 400kbps, Unallocated bandwidth: 370kbps
  Traffic parameters: Encoding: Packet, Switching: Packet, Granularity: Unknown
```

Number of allocations: 1, In use: Yes

LSP name: e2e_lsp_r0r5, Allocated bandwidth: 30kbps

```

user@router1> show rsvp session name fa_lsp_r1r4 extensive
Ingress RSVP: 1 sessions
10.255.41.217
  From: 10.255.41.216, LSPstate: Up, ActiveRoute: 0
  LSPname: fa_lsp_r1r4, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100816
  Resv style: 1 FF, Label in: -, Label out: 100816
  Time left:    -, Since: Wed Sep  7 19:02:33 2005
  Tspec: rate 400kbps size 400kbps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 5933 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.2.4.2 (so-0/0/2.0) 28 pkts
  RESV rcvfrom: 10.2.4.2 (so-0/0/2.0) 26 pkts
  Explct route: 10.2.4.2 10.4.5.2 10.3.5.1
  Record route: <self> 10.2.4.2 10.4.5.2 10.3.5.1
Total 1 displayed, Up 1, Down 0

Egress RSVP: 1 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 2 sessions
Total 0 displayed, Up 0, Down 0

```

Configuring Link Management Protocol Peers

After you set up traffic engineering links, configure LMP network peers with the **peer *peer-name*** statement at the **[edit protocols link-management]** hierarchy level. A peer is the network device with which your routing platform communicates and establishes an FA-LSP. Designate a peer name, configure the peer router ID as the address (often a loopback address), and apply the traffic engineering link to be associated with this peer. Remember to configure both sides of a peering relationship to enable bidirectional communication.

Unlike GMPLS, you must not configure a control channel for a peer. If you include a control channel, the commit operation fails.

```
[edit]
protocols {
  link-management {
    peer peer-name { # Configure the name of your network peer.
      address ip-address; # Include the router ID of the peer.
      te-link te-link-name; # Assign a TE link to this peer.
    }
  }
}
```

Configuring Link Management Protocol Traffic Engineering Links

To begin your RSVP LSP tunnel configuration, configure LMP traffic engineering links on both the ingress and egress routing platforms. Because traffic engineering links define a unidirectional connection between peer devices, you must configure traffic engineering links in both directions between peers to enable the bidirectional transport of packets.

To configure traffic engineering links in LMP, include the **te-link *te-link-name*** statement at the **[edit protocols link-management]** hierarchy level. Define the traffic engineering link options shown below, especially the label-switched path to be used as the FA-LSP to reach the peer. Optionally, you can specify the traffic engineering metric for the traffic engineering link (TE link). By default, the traffic engineering metric is derived from the CSPF computation.

```
[edit]
protocols {
  link-management {
    te-link te-link-name { # Name of the TE link.
      label-switched-path lsp-name; # LSP used for the forwarding adjacency.
      local-address ip-address; # Local IP address associated with the TE link.
      remote-address ip-address; # Remote IP address mapped to the TE link.
      te-metric value; # Traffic engineering metric used for the TE link.
    }
  }
}
```

Configuring Peer Interfaces in OSPF and RSVP

After you establish LMP peers, you must add peer interfaces to OSPF and RSVP. A peer interface is a virtual interface used to support the control adjacency between two peers.

The peer interface name must match the **peer *peer-name*** statement configured in LMP at the **[edit protocols link-management]** hierarchy level. Because actual protocol packets are sent and received by peer interfaces,

the peer interfaces can be signaled and advertised to peers like any other physical interface configured for OSPF and RSVP. To configure OSPF routing for LMP peers, include the **peer-interface** statement at the **[edit protocols ospf area *area-number*]** hierarchy level. To configure RSVP signaling for LMP peers, include the **peer-interface** statement at the **[edit protocols rsvp]** hierarchy level.

```
[edit]
protocols {
  rsvp {
    peer-interface peer-name { # Configure the name of your LMP peer.
    }
    ospf {
      area area-number {
        peer-interface peer-name { # Configure the name of your LMP peer.
        }
      }
    }
  }
}
```

Defining Label-Switched Paths for the FA-LSP

Next, define your FA-LSP by including the **label-switched-path** statement at the **[edit protocols mpls]** hierarchy level. Include the router ID of the peer in the **to** statement at the **[edit protocols mpls label-switched-path]** hierarchy level. Because packet LSPs are unidirectional, you must create one FA-LSP to reach the peer and a second FA-LSP to return from the peer.

```
[edit]
protocols {
  mpls {
    label-switched-path lsp-name {
      from ip-address;
      to ip-address;
      primary path-name;
      secondary path-name;
      no-cspf; # This statement to disable CSPF is optional.
    }
  }
}
```

Establishing FA-LSP Path Information

When you configure explicit LSP paths for an FA-LSP, you must use the traffic engineering link remote address as your next-hop address. When CSPF is supported, you can use any path option you wish. However, when CSPF is disabled with the **no-cspf** statement at the **[edit protocols mpls label-switched-path lsp-name]** hierarchy level, you must use strict paths.

```
[edit]
protocols {
  mpls {
    path path-name {
      next-hop-address (strict | loose);
    }
  }
}
```

NOTE: If the end-to-end LSP originates on the same routing platform as the FA-LSP, you must disable CSPF and use strict paths.

Option: Tearing Down RSVP LSPs Gracefully

You can tear down an RSVP LSP in a two-step process that gracefully withdraws the RSVP session used by the LSP. For all neighbors that support graceful teardown, a request for the teardown is sent by the routing platform to the destination endpoint for the LSP and all RSVP neighbors in the path. The request is included within the **ADMIN_STATUS** field of the RSVP packet. When neighbors receive the request, they prepare for the RSVP session to be withdrawn. A second message is sent by the routing platform to complete the teardown of the RSVP session. If a neighbor does not support graceful teardown, the request is handled as a standard session teardown rather than a graceful one.

To perform a graceful teardown of an RSVP session, issue the **clear rsvp session gracefully** command. Optionally, you can specify the source and destination address of the RSVP session, the LSP identifier of the RSVP sender, and the tunnel identifier of the RSVP session. To use these qualifiers, include the **connection-source**, **connection-destination**, **lsp-id**, and **tunnel-id** options when you issue the **clear rsvp session gracefully** command.

You can also configure the amount of time that the routing platform waits for neighbors to receive the graceful teardown request before initiating the actual teardown by including the **graceful-deletion-timeout** statement at the **[edit protocols rsvp]** hierarchy level. The default graceful deletion timeout value is 30 seconds, with a minimum value of 1 second and a maximum value of 300 seconds. To view the current value configured for graceful deletion timeout, issue the **show rsvp version** operational mode command.

Release History Table

Release	Description
19.4R1	
16.1	However, starting from Junos OS Release 16.1, when RSVP hello messages time-out, the RSVP sessions are brought down.

RELATED DOCUMENTATION

[Basic MPLS Configuration](#) | 36

LDP

IN THIS CHAPTER

- [LDP Overview | 850](#)
- [LDP Configuration | 861](#)

LDP Overview

IN THIS SECTION

- [LDP Introduction | 850](#)
- [Understanding the LDP Signaling Protocol | 851](#)
- [Example: Configuring LDP-Signaled LSPs | 851](#)
- [Junos OS LDP Protocol Implementation | 854](#)
- [LDP Operation | 855](#)
- [LDP Message Types | 855](#)
- [Tunneling LDP LSPs in RSVP LSPs | 857](#)
- [Tunneling LDP LSPs in RSVP LSPs Overview | 857](#)
- [Label Operations | 858](#)
- [LDP Session Protection | 859](#)
- [LDP Native IPv6 Support Overview | 860](#)
- [Longest Match Support for LDP Overview | 861](#)

LDP Introduction

The Label Distribution Protocol (LDP) is a protocol for distributing labels in non-traffic-engineered applications. LDP allows routers to establish label-switched paths (LSPs) through a network by mapping network-layer routing information directly to data link layer-switched paths.

These LSPs might have an endpoint at a directly attached neighbor (comparable to IP hop-by-hop forwarding), or at a network egress node, enabling switching through all intermediary nodes. LSPs established by LDP can also traverse traffic-engineered LSPs created by RSVP.

LDP associates a forwarding equivalence class (FEC) with each LSP it creates. The FEC associated with an LSP specifies which packets are mapped to that LSP. LSPs are extended through a network as each router chooses the label advertised by the next hop for the FEC and splices it to the label it advertises to all other routers. This process forms a tree of LSPs that converge on the egress router.

Understanding the LDP Signaling Protocol

LDP is a signaling protocol that runs on a device configured for MPLS support. The successful configuration of both MPLS and LDP initiates the exchange of TCP packets across the LDP interfaces. The packets establish TCP-based LDP sessions for the exchange of MPLS information within the network. Enabling both MPLS and LDP on the appropriate interfaces is sufficient to establish LSPs.

LDP is a simple, fast-acting signaling protocol that automatically establishes LSP adjacencies within an MPLS network. Routers then share LSP updates such as hello packets and LSP advertisements across the adjacencies. Because LDP runs on top of an IGP such as IS-IS or OSPF, you must configure LDP and the IGP on the same set of interfaces. After both are configured, LDP begins transmitting and receiving LDP messages through all LDP-enabled interfaces. Because of LDP's simplicity, it cannot perform the true traffic engineering which RSVP can perform. LDP does not support bandwidth reservation or traffic constraints.

When you configure LDP on a label-switching router (LSR), the router begins sending LDP discovery messages out all LDP-enabled interfaces. When an adjacent LSR receives LDP discovery messages, it establishes an underlying TCP session. An LDP session is then created on top of the TCP session. The TCP three-way handshake ensures that the LDP session has bidirectional connectivity. After they establish the LDP session, the LDP neighbors maintain, and terminate, the session by exchanging messages. LDP advertisement messages allow LSRs to exchange label information to determine the next hops within a particular LSP. Any topology changes, such as a router failure, generate LDP notifications that can terminate the LDP session or generate additional LDP advertisements to propagate an LSP change.

Example: Configuring LDP-Signaled LSPs

IN THIS SECTION

- [Requirements | 852](#)
- [Overview | 852](#)
- [Configuration | 852](#)

This example shows how to create and configure LDP instances within an MPLS network.

Requirements

Before you begin:

- Configure network interfaces. See *Interfaces User Guide for Security Devices*.
- Configure an IGP across your network. (The LDP configuration is added to the existing IGP configuration and included in the MPLS configuration.)
- Configure a network to use LDP for LSP establishment by enabling MPLS on all transit interfaces in the MPLS network.


NOTE: Because LDP runs on top of an IGP such as IS-IS or OSPF, you must configure LDP and the IGP on the same set of interfaces.

Overview

To configure LDP-signaled LSPs, you must enable the MPLS family on all transit interfaces in the MPLS network and include all the transit interfaces under the `[protocols mpls]` and `[protocols ldp]` hierarchy levels.

In this example, you enable the MPLS family and create an LDP instance on all the transit interfaces. Additionally, you enable the MPLS process on all the transit interfaces in the MPLS network. In this example, you configure a sample network as shown in [Figure 62 on page 852](#).

Figure 62: Typical LDP-Signaled LSP

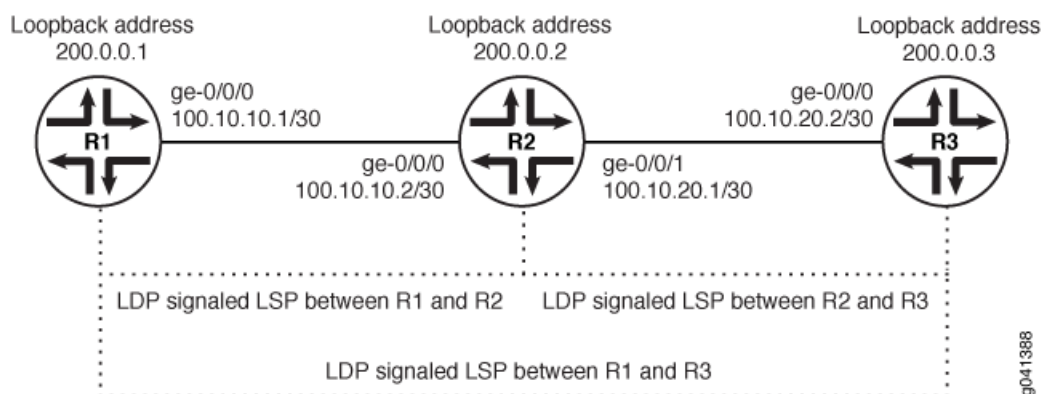

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level and then enter **commit** from configuration mode.

For Router R1, perform the following:

```
set interfaces ge-0/0/0 unit 0 family mpls
set protocols mpls ge-0/0/0 unit 0
set protocols ldp interface ge-0/0/0.0 unit 0
```

For Router R2, perform the following:

```
set interfaces ge-0/0/0 unit 0 family mpls
set protocols mpls ge-0/0/0 unit 0
set protocols ldp interface ge-0/0/0.0 unit 0
set interfaces ge-0/0/1 unit 0 family mpls
set protocols mpls ge-0/0/1 unit 0
set protocols ldp interface ge-0/0/0.1 unit 0
```

For Router R3, perform the following:

```
set interfaces ge-0/0/0 unit 0 family mpls
set protocols mpls ge-0/0/0 unit 0
set protocols ldp interface ge-0/0/0.0 unit 0
```

Step-by-Step Procedure

To enable LDP instances within an MPLS network:

1. Enable the MPLS family on the transit interface on Router R1.

```
[edit]
user@R1# set interfaces ge-0/0/0 unit 0 family mpls
```

2. Enable the MPLS process on the transit interface.

```
[edit]
user@R1# set protocols mpls interface ge-0/0/0 unit 0
```

3. Create the LDP instance on the transit interface.

```
[edit]
```

```
user@R1# set protocols ldp interface ge-0/0/0 unit 0
```

Results

Confirm your configuration by entering the **show** command from configuration mode. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

For brevity, this **show** output includes only the configuration that is relevant to this example. Any other configuration on the system has been replaced with ellipses (...).

```
user@R1# show
...
interfaces {
  ge-0/0/0 {
    unit 0 {
      family inet {
        address 10.100.37.20/24;
      }
      family mpls;
    }
  }
}
...
protocols {
  mpls {
    interface all;
  }
  ldp {
    interface ge-0/0/0.0;
  }
}
```

If you are done configuring the device, enter the **commit** command from the configuration mode to activate the configuration.

Junos OS LDP Protocol Implementation

The Junos OS implementation of LDP supports LDP version 1. The Junos OS supports a simple mechanism for tunneling between routers in an interior gateway protocol (IGP), to eliminate the required distribution of external routes within the core. The Junos OS allows an MPLS tunnel next hop to all egress routers in the network, with only an IGP running in the core to distribute routes to egress routers. Edge routers run BGP but do not distribute external routes to the core. Instead, the recursive route lookup at the edge resolves to an LSP switched to the egress router. No external routes are necessary on the transit LDP routers.

LDP Operation

You must configure LDP for each interface on which you want LDP to run. LDP creates LSP trees rooted at each egress router for the router ID address that is the subsequent BGP next hop. The ingress point is at every router running LDP. This process provides an inet.3 route to every egress router. If BGP is running, it will attempt to resolve next hops by using the inet.3 table first, which binds most, if not all, of the BGP routes to MPLS tunnel next hops.

Two adjacent routers running LDP become neighbors. If the two routers are connected by more than one interface, they become neighbors on each interface. When LDP routers become neighbors, they establish an LDP session to exchange label information. If per-router labels are in use on both routers, only one LDP session is established between them, even if they are neighbors on multiple interfaces. For this reason, an LDP session is not related to a particular interface.

LDP operates in conjunction with a unicast routing protocol. LDP installs LSPs only when both LDP and the routing protocol are enabled. For this reason, you must enable both LDP and the routing protocol on the same set of interfaces. If this is not done, LSPs might not be established between each egress router and all ingress routers, which might result in loss of BGP-routed traffic.

You can apply policy filters to labels received from and distributed to other routers through LDP. Policy filters provide you with a mechanism to control the establishment of LSPs.

For LDP to run on an interface, MPLS must be enabled on a logical interface on that interface. For more information, see the *Logical Interfaces*.

LDP Message Types

IN THIS SECTION

- [Discovery Messages | 856](#)
- [Session Messages | 856](#)
- [Advertisement Messages | 856](#)
- [Notification Messages | 856](#)

LDP uses the message types described in the following sections to establish and remove mappings and to report errors. All LDP messages have a common structure that uses a type, length, and value (TLV) encoding scheme.

Discovery Messages

Discovery messages announce and maintain the presence of a router in a network. Routers indicate their presence in a network by sending hello messages periodically. Hello messages are transmitted as UDP packets to the LDP port at the group multicast address for all routers on the subnet.

LDP uses the following discovery procedures:

- **Basic discovery**—A router periodically sends LDP link hello messages through an interface. LDP link hello messages are sent as UDP packets addressed to the LDP discovery port. Receipt of an LDP link hello message on an interface identifies an adjacency with the LDP peer router.
- **Extended discovery**—LDP sessions between routers not directly connected are supported by LDP extended discovery. A router periodically sends LDP targeted hello messages to a specific address. Targeted hello messages are sent as UDP packets addressed to the LDP discovery port at the specific address. The targeted router decides whether to respond to or ignore the targeted hello message. A targeted router that chooses to respond does so by periodically sending targeted hello messages to the initiating router.

Session Messages

Session messages establish, maintain, and terminate sessions between LDP peers. When a router establishes a session with another router learned through the hello message, it uses the LDP initialization procedure over TCP transport. When the initialization procedure is completed successfully, the two routers are LDP peers and can exchange advertisement messages.

Advertisement Messages

Advertisement messages create, change, and delete label mappings for forwarding equivalence classes (FECs). Requesting a label or advertising a label mapping to a peer is a decision made by the local router. In general, the router requests a label mapping from a neighboring router when it needs one and advertises a label mapping to a neighboring router when it wants the neighbor to use a label.

Notification Messages

Notification messages provide advisory information and signal error information. LDP sends notification messages to report errors and other events of interest. There are two kinds of LDP notification messages:

- **Error notifications**, which signal fatal errors. If a router receives an error notification from a peer for an LDP session, it terminates the LDP session by closing the TCP transport connection for the session and discarding all label mappings learned through the session.
- **Advisory notifications**, which pass information to a router about the LDP session or the status of some previous message received from the peer.

Tunneling LDP LSPs in RSVP LSPs

You can tunnel LDP LSPs over RSVP LSPs. The following sections describe how tunneling of LDP LSPs in RSVP LSPs works:

- [Tunneling LDP LSPs in RSVP LSPs Overview on page 857](#)
- [Label Operations on page 858](#)

Tunneling LDP LSPs in RSVP LSPs Overview

If you are using RSVP for traffic engineering, you can run LDP simultaneously to eliminate the distribution of external routes in the core. The LSPs established by LDP are tunneled through the LSPs established by RSVP. LDP effectively treats the traffic-engineered LSPs as single hops.

When you configure the router to run LDP across RSVP-established LSPs, LDP automatically establishes sessions with the router at the other end of the LSP. LDP control packets are routed hop-by-hop, rather than carried through the LSP. This routing allows you to use simplex (one-way) traffic-engineered LSPs. Traffic in the opposite direction flows through LDP-established LSPs that follow unicast routing rather than through traffic-engineered tunnels.

If you configure LDP over RSVP LSPs, you can still configure multiple OSPF areas and IS-IS levels in the traffic engineered core and in the surrounding LDP cloud.

Beginning with Junos OS Release 15.1, multi-instance support is extended to LDP over RSVP tunneling for a virtual router routing instance. This allows splitting of a single routing and MPLS domain into multiple domains so that each domain can be scaled independently. BGP labeled unicast can be used to stitch these domains for service forwarding equivalence classes (FECs). Each domain uses intra-domain LDP-over-RSVP LSP for MPLS forwarding.

NOTE: With the introduction of the multi-instance support for LDP-over-RSVP LSPs, you cannot enable MPLS on an interface that is already assigned to another routing instance. Adding an interface that is part of another routing instance at the **[edit protocols mpls]** hierarchy level, throws a configuration error at the time of commit.

Benefits of Tunneling LDP LSPs in RSVP LSPs

Tunneling LDP LSPs in RSVP LSPs provides the following benefits:

- Provides convergence of different traffic types such as IPv4, IPv6, unicast, and multicast across Layer 2 and Layer 3 VPNs.
- Enables flexible access connectivity options that can accommodate multiple topologies, different protocols, and multiple administrative boundaries.

- Enables secure interworking among multiple providers.
- Enables provision of differentiated services on a per customer basis because RSVP-TE supports traffic engineering, bandwidth guarantees, and link and node redundancy capabilities.
- Reduces the number of LSPs required in the core, which reduces the resource requirements of the protocols and routers as well as reducing convergence time.
- Provides cost-efficient rollouts with minimal network disruption because the LSPs are built using point-to-point TE tunnels to directly attached neighbors. These TE tunnels only go to the next hop, not end to end. Then when LDP is run over those tunnels, the sessions are built to the directly connected neighbor. When there is a change in the network, such as adding a new node, the directly connected neighbors of the new node have RSVP and LDP sessions. Thus, the RSVP LSPs are only to the next hop, and LDP takes care of advertising labels for the new addresses.

Label Operations

[Figure 63 on page 859](#) depicts an LDP LSP being tunneled through an RSVP LSP. (For definitions of label operations, see [“MPLS Label Overview” on page 421](#).) The shaded inner oval represents the RSVP domain, whereas the outer oval depicts the LDP domain. RSVP establishes an LSP through routers B, C, D, and E, with the sequence of labels L3, L4. LDP establishes an LSP through Routers A, B, E, F, and G, with the sequence of labels L1, L2, L5. LDP views the RSVP LSP between Routers B and E as a single hop.

When the packet arrives at Router A, it enters the LSP established by LDP, and a label (L1) is pushed onto the packet. When the packet arrives at Router B, the label (L1) is swapped with another label (L2). Because the packet is entering the traffic-engineered LSP established by RSVP, a second label (L3) is pushed onto the packet.

This outer label (L3) is swapped with a new label (L4) at the intermediate router (C) within the RSVP LSP tunnel, and when the penultimate router (D) is reached, the top label is popped. Router E swaps the label (L2) with a new label (L5), and the penultimate router for the LDP-established LSP (F) pops the last label.

Figure 63: Swap and Push When LDP LSPs Are Tunneled Through RSVP LSPs


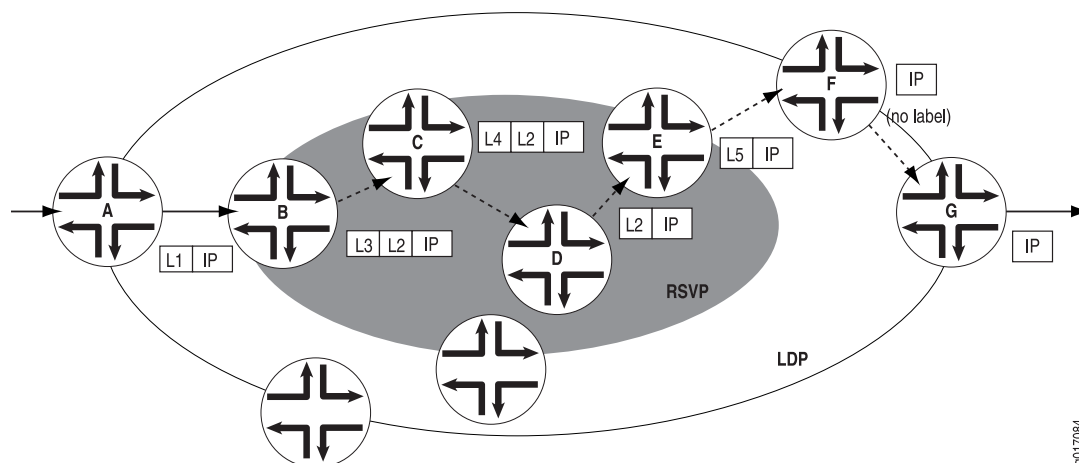


Figure 64 on page 859 depicts a double push label operation (L1L2). A double push label operation is used when the ingress router (A) for both the LDP LSP and the RSVP LSP tunneled through it is the same device. Note that Router D is the penultimate hop for the LDP-established LSP, so L2 is popped from the packet by Router D.

Figure 64: Double Push When LDP LSPs Are Tunneled Through RSVP LSPs

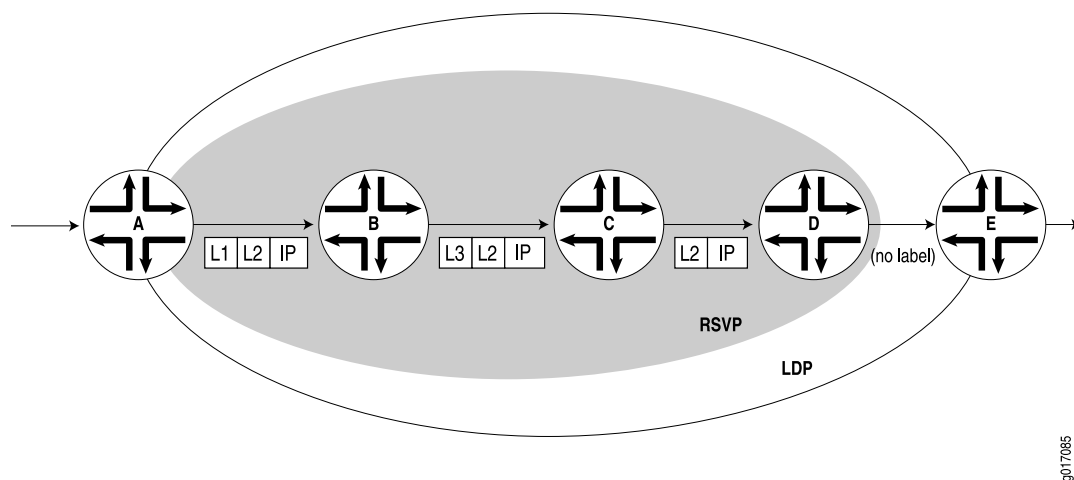

LDP Session Protection

LDP session protection is based on the LDP targeted hello functionality defined in RFC 5036, *LDP Specification*, and is supported by the Junos OS as well as the LDP implementations of most other vendors. It involves sending unicast User Datagram Protocol (UDP) hello packets to a remote neighbor address and receiving similar packets from the neighbor router.

If you configure LDP session protection on a router, the LDP sessions are maintained as follows:

1. An LDP session is established between a router and a remote neighboring router.
2. If all of the direct links between the routers go down, the LDP session remains up so long as there is IP connectivity between the routers based on another connection over the network.
3. When the direct link between the routers is reestablished, the LDP session is not restarted. The routers simply exchange LDP hellos with each other over the direct link. They can then begin forwarding LDP-signaled MPLS packets using the original LDP session.

By default, LDP targeted hellos are set to the remote neighbor so long as the LDP session is up, even if there are no more link neighbors to that router. You can also specify the duration you would like to maintain the remote neighbor connection in the absence of link neighbors. When the last link neighbor for a session goes down, the Junos OS starts an LDP session protection timer. If this timer expires before any of the link neighbors come back up, the remote neighbor connection is taken down and the LDP session is terminated. If you configure a different value for the timer while it is currently running, the Junos OS updates the timer to the specified value without disrupting the current state of the LDP session.

LDP Native IPv6 Support Overview

IPv6 connectivity often relies on tunneling IPv6 over an IPv4 MPLS core with IPv4-signaled MPLS label-switched paths (LSPs). This requires the IPv4-signaled LSPs to be configured statically or established dynamically by IPv6 provider edge routers. Because of the growing demand of IPv6, it has become imperative to deploy an IPv6 MPLS core with an IPv6-signaled LSP to provide IPv6 connectivity. In Junos OS, LDP is supported in an IPv6 network only, and in an IPv6/IPv4 dual-stack network as described in *RFC 7552*. Apart from providing a single session for both IPv4 and IPv6 networks, Junos OS LDP supports separate IPv4 sessions for IPv4 only, and IPv6 sessions for IPv6 only.

You can configure the address family as **inet** for IPv4 or **inet6** for IPv6, or both. If the family address is not configured, then the default address of family inet is enabled. When both IPv4 and IPv6 are configured, you can use the **transport-preference** statement to configure the preferred transport to be either **IPv4** or **IPv6**. Based on the preference, LDP attempts to establish a TCP connection using IPv4 or IPv6. By default, IPv6 is selected. The **dual-transport** statement allows Junos OS LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. The **inet-lsr-id** and **inet6-lsr-id** IDs are the two LSR IDs that have to be configured to establish an LDP session over IPv4 and IPv6 TCP transport. These two IDs should be non-zero and must be configured with different values.

Longest Match Support for LDP Overview

LDP is often used to establish MPLS label-switched paths (LSPs) throughout a complete network domain using an IGP such as OSPF or IS-IS. In such a network, all links in the domain have IGP adjacencies as well as LDP adjacencies. LDP establishes the LSPs on the shortest path to a destination as determined by IGP. In Junos OS, the LDP implementation does an exact match lookup on the IP address of the forwarding equivalence class (FEC) in the routing information base (RIB) or IGP routes for label mapping. This exact mapping requires MPLS end-to-end LDP endpoint IP addresses to be configured in all the label edge routers (LERs). This defeats the purpose of IP hierarchical design or default routing in access devices. Configuring **longest-match** allows LDP to set up LSP based on the routes aggregated or summarized across OSPF areas or IS-IS levels in the inter-domain.

Release History Table

Release	Description
15.1	Beginning with Junos OS Release 15.1, multi-instance support is extended to LDP over RSVP tunneling for a virtual router routing instance.

RELATED DOCUMENTATION

[Basic MPLS Configuration](#) | [36](#)

LDP Configuration

IN THIS SECTION

- [Minimum LDP Configuration](#) | [863](#)
- [Enabling and Disabling LDP](#) | [863](#)
- [Configuring the LDP Timer for Hello Messages](#) | [864](#)
- [Configuring the Delay Before LDP Neighbors Are Considered Down](#) | [865](#)
- [Enabling Strict Targeted Hello Messages for LDP](#) | [866](#)
- [Configuring the Interval for LDP Keepalive Messages](#) | [866](#)
- [Configuring the LDP Keepalive Timeout](#) | [867](#)
- [Configuring Longest Match for LDP](#) | [867](#)
- [Example: Configuring Longest Match for LDP](#) | [868](#)

- [Configuring LDP Route Preferences | 887](#)
- [LDP Graceful Restart | 887](#)
- [Configuring LDP Graceful Restart | 888](#)
- [Filtering Inbound LDP Label Bindings | 891](#)
- [Filtering Outbound LDP Label Bindings | 894](#)
- [Specifying the Transport Address Used by LDP | 896](#)
- [Control Transport Address Used for Targeted-LDP Session | 897](#)
- [Configuring the Prefixes Advertised into LDP from the Routing Table | 899](#)
- [Configuring FEC Deaggregation | 900](#)
- [Configuring Policers for LDP FECs | 901](#)
- [Configuring LDP IPv4 FEC Filtering | 902](#)
- [Configuring BFD for LDP LSPs | 903](#)
- [Configuring ECMP-Aware BFD for LDP LSPs | 906](#)
- [Configuring a Failure Action for the BFD Session on an LDP LSP | 907](#)
- [Configuring the Holddown Interval for the BFD Session | 908](#)
- [Configuring LDP Link Protection | 908](#)
- [Example: Configuring LDP Link Protection | 910](#)
- [Understanding Multicast-Only Fast Reroute | 940](#)
- [Configuring Multicast-Only Fast Reroute | 946](#)
- [Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain | 949](#)
- [Example: Configuring LDP Downstream on Demand | 971](#)
- [Configuring LDP Native IPv6 Support | 977](#)
- [Example: Configuring LDP Native IPv6 Support | 979](#)
- [Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs | 996](#)
- [LDP Mapping Server for Interoperability of Segment Routing with LDP Overview | 1033](#)
- [Configuring Miscellaneous LDP Properties | 1038](#)
- [Configuring LDP LSP Traceroute | 1045](#)
- [Collecting LDP Statistics | 1046](#)
- [Tracing LDP Protocol Traffic | 1049](#)

Minimum LDP Configuration

To enable LDP with minimal configuration:

1. Enable all relevant interfaces under family MPLS. In the case of directed LDP, the loopback interface needs to be enabled with family MPLS.
2. (Optional) Configure the relevant interfaces under the **[edit protocol mpls]** hierarchy level.
3. Enable LDP on a single interface, include the **ldp** statement and specify the interface using the **interface** statement.

This is the minimum LDP configuration. All other LDP configuration statements are optional.

```
ldp {
  interface interface-name;
}
```

To enable LDP on all interfaces, specify **all** for *interface-name*.

For a list of hierarchy levels at which you can include these statements, see the statement summary sections.

Enabling and Disabling LDP

LDP is routing-instance-aware. To enable LDP on a specific interface, include the following statements:

```
ldp {
  interface interface-name;
}
```

For a list of hierarchy levels at which you can include these statements, see the statement summary sections.

To enable LDP on all interfaces, specify **all** for *interface-name*.

If you have configured interface properties on a group of interfaces and want to disable LDP on one of the interfaces, include the **interface** statement with the **disable** option:

```
interface interface-name {
  disable;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

Configuring the LDP Timer for Hello Messages

LDP hello messages enable LDP nodes to discover one another and to detect the failure of a neighbor or the link to the neighbor. Hello messages are sent periodically on all interfaces where LDP is enabled.

There are two types of LDP hello messages:

- Link hello messages—Sent through the LDP interface as UDP packets addressed to the LDP discovery port. Receipt of an LDP link hello message on an interface identifies an adjacency with the LDP peer router.
- Targeted hello messages—Sent as UDP packets addressed to the LDP discovery port at a specific address. Targeted hello messages are used to support LDP sessions between routers that are not directly connected. A targeted router determines whether to respond or ignore a targeted hello message. A targeted router that chooses to respond does so by periodically sending targeted hello messages back to the initiating router.

By default, LDP sends hello messages every 5 seconds for link hello messages and every 15 seconds for targeted hello messages. You can configure the LDP timer to alter how often both types of hello messages are sent. However, you cannot configure a time for the LDP timer that is greater than the LDP hold time. For more information, see [“Configuring the Delay Before LDP Neighbors Are Considered Down” on page 865](#).

Configuring the LDP Timer for Link Hello Messages

To modify how often LDP sends link hello messages, specify a new link hello message interval for the LDP timer using the **hello-interval** statement:

```
hello-interval seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Configuring the LDP Timer for Targeted Hello Messages

To modify how often LDP sends targeted hello messages, specify a new targeted hello message interval for the LDP timer by configuring the **hello-interval** statement as an option for the **targeted-hello** statement:

```
targeted-hello {
  hello-interval seconds;
}
```

For a list of hierarchy levels at which you can include these statements, see the statement summary sections for these statements.

Configuring the Delay Before LDP Neighbors Are Considered Down

The hold time determines how long an LDP node should wait for a hello message before declaring a neighbor to be down. This value is sent as part of a hello message so that each LDP node tells its neighbors how long to wait. The values sent by each neighbor do not have to match.

The hold time should normally be at least three times the hello interval. The default is 15 seconds for link hello messages and 45 seconds for targeted hello messages. However, it is possible to configure an LDP hold time that is close to the value for the hello interval.

NOTE: By configuring an LDP hold time close to the hello interval (less than three times the hello interval), LDP neighbor failures might be detected more quickly. However, this also increases the possibility that the router might declare an LDP neighbor down that is still functioning normally. For more information, see [“Configuring the LDP Timer for Hello Messages” on page 864](#).

The LDP hold time is also negotiated automatically between LDP peers. When two LDP peers advertise different LDP hold times to one another, the smaller value is used. If an LDP peer router advertises a shorter hold time than the value you have configured, the peer router’s advertised hold time is used. This negotiation can affect the LDP keepalive interval as well.

If the local LDP hold time is not shortened during LDP peer negotiation, the user-configured keepalive interval is left unchanged. However, if the local hold time is reduced during peer negotiation, the keepalive interval is recalculated. If the LDP hold time has been reduced during peer negotiation, the keepalive interval is reduced to one-third of the new hold time value. For example, if the new hold-time value is 45 seconds, the keepalive interval is set to 15 seconds.

This automated keepalive interval calculation can cause different keepalive intervals to be configured on each peer router. This enables the routers to be flexible in how often they send keepalive messages, because the LDP peer negotiation ensures they are sent more frequently than the LDP hold time.

When you reconfigure the hold-time interval, changes do not take effect until after the session is reset. The hold time is negotiated when the LDP peering session is initiated and cannot be renegotiated as long as the session is up (required by RFC 5036, *LDP Specification*). To manually force the LDP session to reset, issue the **clear ldp session** command.

Configuring the LDP Hold Time for Link Hello Messages

To modify how long an LDP node should wait for a link hello message before declaring the neighbor down, specify a new time in seconds using the **hold-time** statement:

```
hold-time seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Configuring the LDP Hold Time for Targeted Hello Messages

To modify how long an LDP node should wait for a targeted hello message before declaring the neighbor down, specify a new time in seconds using the **hold-time** statement as an option for the **targeted-hello** statement:

```
targeted-hello {
  hold-time seconds;
}
```

For a list of hierarchy levels at which you can include these statements, see the statement summary sections for these statements.

Enabling Strict Targeted Hello Messages for LDP

Use strict targeted hello messages to prevent LDP sessions from being established with remote neighbors that have not been specifically configured. If you configure the **strict-targeted-hellos** statement, an LDP peer does not respond to targeted hello messages coming from a source that is not one of its configured remote neighbors. Configured remote neighbors can include:

- Endpoints of RSVP tunnels for which LDP tunneling is configured
- Layer 2 circuit neighbors

If an unconfigured neighbor sends a hello message, the LDP peer ignores the message and logs an error (with the **error** trace flag) indicating the source. For example, if the LDP peer received a targeted hello from the Internet address 10.0.0.1 and no neighbor with this address is specifically configured, the following message is printed to the LDP log file:

```
LDP: Ignoring targeted hello from 10.0.0.1
```

To enable strict targeted hello messages, include the **strict-targeted-hellos** statement:

```
strict-targeted-hellos;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Configuring the Interval for LDP Keepalive Messages

The keepalive interval determines how often a message is sent over the session to ensure that the keepalive timeout is not exceeded. If no other LDP traffic is sent over the session in this much time, a keepalive message is sent. The default is 10 seconds. The minimum value is 1 second.

The value configured for the keepalive interval can be altered during LDP session negotiation if the value configured for the LDP hold time on the peer router is lower than the value configured locally. For more information, see [“Configuring the Delay Before LDP Neighbors Are Considered Down” on page 865](#).

To modify the keepalive interval, include the **keepalive-interval** statement:

```
keepalive-interval seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Configuring the LDP Keepalive Timeout

After an LDP session is established, messages must be exchanged periodically to ensure that the session is still working. The keepalive timeout defines the amount of time that the neighbor LDP node waits before deciding that the session has failed. This value is usually set to at least three times the keepalive interval. The default is 30 seconds.

To modify the keepalive interval, include the **keepalive-timeout** statement:

```
keepalive-timeout seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The value configured for the **keepalive-timeout** statement is displayed as the hold time when you issue the **show ldp session detail** command.

Configuring Longest Match for LDP

In order to allow LDP to learn the routes aggregated or summarized across OSPF areas or ISIS levels in inter-domain, Junos OS allows you to configure longest match for LDP based on *RFC5283*.

Before you configure longest match for LDP, you must do the following:

1. Configure the device interfaces.
2. Configure the MPLS protocol.
3. Configure the OSPF protocol.

To configure longest match for LDP, you must do the following:

1. Configure longest match for the LDP protocol.

```
[edit protocols ldp]
user@host# set longest-match
```

2. Configure the LDP protocol on the interface.

```
[edit protocols ldp]
user@host# set interface interface-name
```

For example, to configure the interfaces:

```
[edit protocols ldp]
user@host# set interface ge-0/0/2.0
user@host# set interface lo0.0
```

Example: Configuring Longest Match for LDP

IN THIS SECTION

- [Requirements | 868](#)
- [Overview | 869](#)
- [Configuration | 869](#)
- [Verification | 876](#)

This example shows how to configure longest match for LDP based on *RFC5283*. This allows LDP to learn the routes aggregated or summarized across OSPF areas or ISIS levels in inter-domain.. The longest match policy provides per prefix granularity.

Requirements

This example uses the following hardware and software components:

- Six MX Series routers with OSPF protocol, and LDP enabled on the connected interfaces.
- Junos OS Release 16.1 or later running on all devices.

Before you begin:

- Configure the device interfaces.
- Configure OSPF.


Overview

LDP is often used to establish MPLS label-switched paths (LSPs) throughout a complete network domain using an IGP such as OSPF or IS-IS. In such a network, all links in the domain have IGP adjacencies as well as LDP adjacencies. LDP establishes the LSPs on the shortest path to a destination as determined by IP forwarding. In Junos OS, the LDP implementation does an exact match lookup on the IP address of the FEC in the RIB or IGP routes for label mapping. This exact mapping requires MPLS end-to-end LDP endpoint IP addresses to be configured in all the LERs. This defeats the purpose of IP hierarchical design or default routing in access devices. Configuring **longest-match** helps to overcome this by suppressing the exact match behaviour and setup LSP based on the longest matching route on per-prefix basis.

Topology

In the topology, [Figure 65 on page 869](#) shows the longest match for LDP is configured on Device R0.

Figure 65: Example Longest Match for LDP

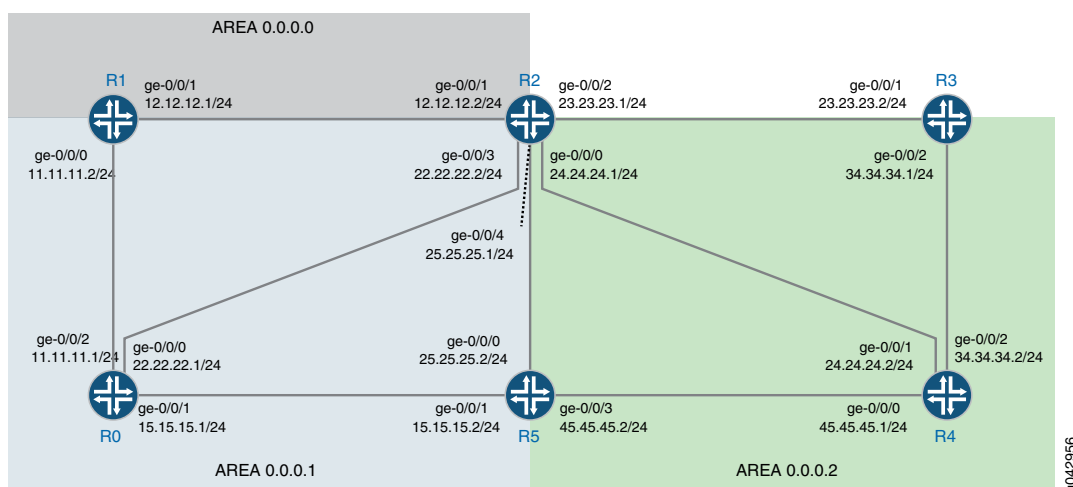

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

R0

```
set interfaces ge-0/0/0 unit 0 family inet address 22.22.22.1/24
set interfaces ge-0/0/1 unit 0 family inet address 15.15.15.1/24
set interfaces ge-0/0/2 unit 0 family inet address 11.11.11.1/24
```

```

set interfaces ge-0/0/2 unit 0 family iso
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.112.1/32 primary
set interfaces lo0 unit 0 family inet address 10.255.112.1/32 preferred
set interfaces lo0 unit 0 family iso address 49.0002.0192.0168.0001.00
set routing-options router-id 10.255.112.1
set protocols mpls interface ge-0/0/2.0
set protocols ospf area 0.0.0.1 interface ge-0/0/2.0
set protocols ospf area 0.0.0.1 interface lo0.0 passive
set protocols ldp longest-match
set protocols ldp interface ge-0/0/2.0
set protocols ldp interface lo0.0

```

R1

```

set interfaces ge-0/0/0 unit 0 family inet address 11.11.11.2/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 12.12.12.1/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.112.2/32 primary
set interfaces lo0 unit 0 family inet address 10.255.112.2/32 preferred
set interfaces lo0 unit 0 family iso address 49.0002.0192.0168.0002.00
set routing-options router-id 10.255.112.2
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.1 interface ge-0/0/0.0
set protocols ldp longest-match
set protocols ldp interface ge-0/0/0.0
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0

```

R2

```

set interfaces ge-0/0/0 unit 0 family inet address 24.24.24.1/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 12.12.12.2/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 23.23.23.1/24
set interfaces ge-0/0/2 unit 0 family iso
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 22.22.22.2/24
set interfaces ge-0/0/4 unit 0 family inet address 25.25.25.1/24
set interfaces ge-0/0/4 unit 0 family iso
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.111.4/32 primary
set interfaces lo0 unit 0 family inet address 10.255.111.4/32 preferred
set interfaces lo0 unit 0 family iso address 49.0003.0192.0168.0003.00
set routing-options router-id 10.255.111.4
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface ge-0/0/4.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.2 area-range 10.255.111.0/24
set protocols ospf area 0.0.0.2 interface ge-0/0/2.0
set protocols ospf area 0.0.0.2 interface ge-0/0/0.0
set protocols ospf area 0.0.0.2 interface ge-0/0/4.0
set protocols ldp interface ge-0/0/0.0
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface ge-0/0/2.0
set protocols ldp interface ge-0/0/4.0
set protocols ldp interface lo0.0

```

R3

```

set interfaces ge-0/0/0 unit 0 family inet address 35.35.35.1/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 23.23.23.2/24
set interfaces ge-0/0/1 unit 0 family iso

```

```

set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 34.34.34.1/24
set interfaces ge-0/0/2 unit 0 family iso
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.111.1/32 primary
set interfaces lo0 unit 0 family inet address 10.255.111.1/32 preferred
set interfaces lo0 unit 0 family iso address 49.0003.0192.0168.0004.00
set routing-options router-id 10.255.111.1
set protocols mpls interface ge-0/0/1.0
set protocols ospf area 0.0.0.2 interface ge-0/0/1.0
set protocols ospf area 0.0.0.2 interface fxp0.0 disable
set protocols ospf area 0.0.0.2 interface lo0.0 passive
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0

```

R4

```

set interfaces ge-0/0/0 unit 0 family inet address 45.45.45.1/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 24.24.24.2/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 34.34.34.2/24
set interfaces ge-0/0/2 unit 0 family iso
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.111.2/32 primary
set interfaces lo0 unit 0 family inet address 10.255.111.2/32 preferred
set interfaces lo0 unit 0 family iso address 49.0003.0192.0168.0005.00
set routing-options router-id 10.255.111.2
set protocols mpls interface ge-0/0/1.0
set protocols ospf area 0.0.0.2 interface ge-0/0/1.0
set protocols ospf area 0.0.0.2 interface fxp0.0 disable
set protocols ospf area 0.0.0.2 interface lo0.0 passive
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0

```

R5


```

set interfaces ge-0/0/0 unit 0 family inet address 25.25.25.2/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 15.15.15.2/24
set interfaces ge-0/0/2 unit 0 family inet address 35.35.35.2/24
set interfaces ge-0/0/3 unit 0 family inet address 45.45.45.2/24
set interfaces ge-0/0/3 unit 0 family iso
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.111.3/32 primary
set interfaces lo0 unit 0 family inet address 10.255.111.3/32 preferred
set interfaces lo0 unit 0 family iso address 49.0003.0192.0168.0006.00
set routing-options router-id 10.255.111.3
set protocols mpls interface ge-0/0/0.0
set protocols ospf area 0.0.0.2 interface ge-0/0/0.0
set protocols ospf area 0.0.0.2 interface fxp0.0 disable
set protocols ospf area 0.0.0.2 interface lo0.0 passive
set protocols ldp interface ge-0/0/0.0
set protocols ldp interface lo0.0

```

Configuring Device R0

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device R0:

1. Configure the interfaces.

```

[edit interfaces]
set ge-0/0/0 unit 0 family inet address 22.22.22.1/24

set ge-0/0/1 unit 0 family inet address 15.15.15.1/24

set ge-0/0/2 unit 0 family inet address 11.11.11.1/24
set ge-0/0/2 unit 0 family iso
set ge-0/0/2 unit 0 family mpls

```

2. Assign the loopback addresses to the device.

```
[edit interfaces lo0 unit 0 family]
set inet address 10.255.112.1/32 primary
set inet address 10.255.112.1/32 preferred
set iso address 49.0002.0192.0168.0001.00
```

3. Configure the router ID.

```
[edit routing-options]
set router-id 10.255.112.1
```

4. Configure the MPLS protocol on the interface.

```
[edit protocols mpls]
set interface ge-0/0/2.0
```

5. Configure the OSPF protocol on the interface.

```
[edit protocols ospf]
set area 0.0.0.1 interface ge-0/0/2.0
set area 0.0.0.1 interface lo0.0 passive
```

6. Configure longest match for the LDP protocol.

```
[edit protocols ldp]
set longest-match
```

7. Configure the LDP protocol on the interface.

```
[edit protocols ldp]
set interface ge-0/0/2.0
set interface lo0.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R0# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 22.22.22.1/24;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 15.15.15.1/24;
    }
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 11.11.11.1/24;
    }
    family iso;
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.112.1/32 {
        primary;
        preferred;
      }
    }
    family iso {
      address 49.0002.0192.0168.0001.00;
    }
  }
}
```

```
user@R0# show protocols
mpls {
  interface ge-0/0/2.0;
}
ospf {
  area 0.0.0.1 {
```

```

interface ge-0/0/2.0;
interface lo0.0 {
    passive;
}
}
ldp {
    longest-match;
    interface ge-0/0/2.0;
    interface lo0.0;
}

```

```

user@R0# show routing-options
router-id 10.255.112.1;

```

If you are done configuring the device, enter **commit** from the configuration mode.

Verification

IN THIS SECTION

- [Verifying the Routes | 876](#)
- [Verifying LDP Overview Information | 881](#)
- [Verify the LDP Entries in the Internal Topology Table | 883](#)
- [Verify Only FEC Information of LDP Route | 884](#)
- [Verify FEC and Shadow Routes of LDP | 885](#)

Confirm that the configuration is working properly.

Verifying the Routes

Purpose

Verify that the expected routes are learned.

Action

On Device R0, from operational mode, run the **show route** command to display the routes in the routing table.

```
user@R0> show route
```

```
inet.0: 62 destinations, 62 routes (62 active, 0 holddown, 0 hidden)
```

```
+ = Active Route, - = Last Active, * = Both
```

```
10.4.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.5.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.6.128.0/17    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.9.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.10.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.13.4.0/23     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.13.10.0/23    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.82.0.0/15     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.84.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.85.12.0/22    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.92.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.92.16.0/20    *[Direct/0] 10:08:01
                  > via fxp0.0
10.92.20.175/32  *[Local/0] 10:08:01
                  Local via fxp0.0
10.94.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.99.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.102.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.150.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.155.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.157.64.0/19   *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.160.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
```

```

10.204.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.205.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.206.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.207.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.209.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.212.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.213.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.214.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.215.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.216.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.218.13.0/24     *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.218.14.0/24     *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.218.16.0/20     *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.218.32.0/20     *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.227.0.0/16      *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
10.255.111.0/24    *[OSPF/10] 09:52:14, metric 3
                   > to 11.11.11.2 via ge-0/0/2.0
10.255.111.4/32    *[OSPF/10] 09:54:10, metric 2
                   > to 11.11.11.2 via ge-0/0/2.0
10.255.112.1/32    *[Direct/0] 09:55:05
                   > via lo0.0
10.255.112.2/32    *[OSPF/10] 09:54:18, metric 1
                   > to 11.11.11.2 via ge-0/0/2.0
11.11.11.0/24      *[Direct/0] 09:55:05
                   > via ge-0/0/2.0
11.11.11.1/32      *[Local/0] 09:55:05
                   Local via ge-0/0/2.0
12.12.12.0/24      *[OSPF/10] 09:54:18, metric 2
                   > to 11.11.11.2 via ge-0/0/2.0

```

```

15.15.15.0/24      *[Direct/0] 09:55:05
                   > via ge-0/0/1.0
15.15.15.1/32     *[Local/0] 09:55:05
                   Local via ge-0/0/1.0
22.22.22.0/24     *[Direct/0] 09:55:05
                   > via ge-0/0/0.0
22.22.22.1/32     *[Local/0] 09:55:05
                   Local via ge-0/0/0.0
23.23.23.0/24     *[OSPF/10] 09:54:10, metric 3
                   > to 11.11.11.2 via ge-0/0/2.0
24.24.24.0/24     *[OSPF/10] 09:54:10, metric 3
                   > to 11.11.11.2 via ge-0/0/2.0
25.25.25.0/24     *[OSPF/10] 09:54:10, metric 3
                   > to 11.11.11.2 via ge-0/0/2.0
128.92.17.45/32   *[OSPF/10] 09:54:05, metric 3
                   > to 11.11.11.2 via ge-0/0/2.0
128.92.20.175/32  *[Direct/0] 10:08:01
                   > via lo0.0
128.92.21.186/32  *[OSPF/10] 09:54:10, metric 3
                   > to 11.11.11.2 via ge-0/0/2.0
128.92.25.135/32  *[OSPF/10] 09:54:10, metric 3
                   > to 11.11.11.2 via ge-0/0/2.0
128.92.27.91/32   *[OSPF/10] 09:54:18, metric 1
                   > to 11.11.11.2 via ge-0/0/2.0
128.92.28.70/32   *[OSPF/10] 09:54:10, metric 2
                   > to 11.11.11.2 via ge-0/0/2.0
172.16.0.0/12     *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
192.168.0.0/16    *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
192.168.102.0/23  *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
207.17.136.0/24   *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
207.17.136.192/32 *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
207.17.137.0/24   *[Static/5] 10:08:01
                   > to 10.92.31.254 via fxp0.0
224.0.0.5/32      *[OSPF/10] 09:55:05, metric 1
                   MultiRecv

inet.3: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

```

```

10.255.111.1/32    *[LDP/9] 09:41:03, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0, Push 300128
10.255.111.2/32    *[LDP/9] 09:41:03, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0, Push 300144
10.255.111.3/32    *[LDP/9] 09:41:03, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0, Push 300160
10.255.111.4/32    *[LDP/9] 09:54:10, metric 2, tag 0
                  > to 11.11.11.2 via ge-0/0/2.0, Push 300000
10.255.112.2/32    *[LDP/9] 09:54:48, metric 1, tag 0
                  > to 11.11.11.2 via ge-0/0/2.0

iso.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

47.0005.80ff.f800.0000.0108.0001.1280.9202.0175/152
      *[Direct/0] 10:08:01
      > via lo0.0
49.0002.0192.0168.0001/72
      *[Direct/0] 09:55:05
      > via lo0.0

mpls.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 09:55:05, metric 1
           Receive
1          *[MPLS/0] 09:55:05, metric 1
           Receive
2          *[MPLS/0] 09:55:05, metric 1
           Receive
13         *[MPLS/0] 09:55:05, metric 1
           Receive
300064     *[LDP/9] 09:54:48, metric 1
           > to 11.11.11.2 via ge-0/0/2.0, Pop
300064(S=0) *[LDP/9] 09:54:48, metric 1
           > to 11.11.11.2 via ge-0/0/2.0, Pop
300112     *[LDP/9] 09:54:10, metric 2, tag 0
           > to 11.11.11.2 via ge-0/0/2.0, Swap 300000
300192     *[LDP/9] 09:41:03, metric 3
           > to 11.11.11.2 via ge-0/0/2.0, Swap 300128
300208     *[LDP/9] 09:41:03, metric 3
           > to 11.11.11.2 via ge-0/0/2.0, Swap 300144
300224     *[LDP/9] 09:41:03, metric 3
           > to 11.11.11.2 via ge-0/0/2.0, Swap 300160

```



```

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

abcd::128:92:20:175/128
          *[Direct/0] 10:08:01
            > via lo0.0
fe80::5668:a50f:fcc1:1f9c/128
          *[Direct/0] 10:08:01
            > via lo0.0

```

Meaning

The output shows all the routes in the routing table of Device R0.

Verifying LDP Overview Information

Purpose

Display LDP overview information.

Action

On Device R0, from operational mode, run the **show ldp overview** command to display the overview of the LDP.

```
user@R0> show ldp overview
```

```

Instance: master
  Reference count: 2
  Router ID: 10.255.112.1
  Message id: 8
  Configuration sequence: 6
  Deaggregate: disabled
  Explicit null: disabled
  IPv6 tunneling: disabled
  Strict targeted hellos: disabled
  Loopback if added: yes
  Route preference: 9
  Unicast transit LSP chaining: disabled
  P2MP transit LSP chaining: disabled
  Transit LSP statistics based on route statistics: disabled
  LDP route acknowledgement: enabled
  LDP mtu discovery: disabled
  Longest Match: enabled
  Capabilities enabled: none

```

```

Egress FEC capabilities enabled: entropy-label-capability
Downstream unsolicited Sessions:
  Operational: 1
  Retention: liberal
  Control: ordered
Auto targeted sessions:
  Auto targeted: disabled
Timers:
  Keepalive interval: 10, Keepalive timeout: 30
  Link hello interval: 5, Link hello hold time: 15
  Targeted hello interval: 15, Targeted hello hold time: 45
  Label withdraw delay: 60, Make before break timeout: 30
  Make before break switchover delay: 3
  Link protection timeout: 120
Graceful restart:
  Restart: disabled, Helper: enabled, Restart in process: false
  Reconnect time: 60000, Max neighbor reconnect time: 120000
  Recovery time: 160000, Max neighbor recovery time: 240000
Traffic Engineering:
  Bgp igp: disabled
  Both ribs: disabled
  Mpls forwarding: disabled
IGP:
  Tracking igp metric: disabled
  Sync session up delay: 10
Session protection:
  Session protection: disabled
  Session protection timeout: 0
Interface addresses advertising:
  11.11.11.1
  10.255.112.1
  128.92.20.175
Label allocation:
  Current number of LDP labels allocated: 5
  Total number of LDP labels allocated: 11
  Total number of LDP labels freed: 6
  Total number of LDP label allocation failure: 0
  Current number of labels allocated by all protocols: 5

```

Meaning

The output displays the LDP overview information of Device R0

Verify the LDP Entries in the Internal Topology Table

Purpose

Display the route entries in the Label Distribution Protocol (LDP) internal topology table.

Action

On Device R0, from operational mode, run the **show ldp route** command to display the internal topology table of LDP.

```
user@R0> show ldp route
```

Destination	Next-hop intf/lsp/table	Next-hop address
10.4.0.0/16	fxp0.0	10.92.31.254
10.5.0.0/16	fxp0.0	10.92.31.254
10.6.128.0/17	fxp0.0	10.92.31.254
10.9.0.0/16	fxp0.0	10.92.31.254
10.10.0.0/16	fxp0.0	10.92.31.254
10.13.4.0/23	fxp0.0	10.92.31.254
10.13.10.0/23	fxp0.0	10.92.31.254
10.82.0.0/15	fxp0.0	10.92.31.254
10.84.0.0/16	fxp0.0	10.92.31.254
10.85.12.0/22	fxp0.0	10.92.31.254
10.92.0.0/16	fxp0.0	10.92.31.254
10.92.16.0/20	fxp0.0	
10.92.20.175/32		
10.94.0.0/16	fxp0.0	10.92.31.254
10.99.0.0/16	fxp0.0	10.92.31.254
10.102.0.0/16	fxp0.0	10.92.31.254
10.150.0.0/16	fxp0.0	10.92.31.254
10.155.0.0/16	fxp0.0	10.92.31.254
10.157.64.0/19	fxp0.0	10.92.31.254
10.160.0.0/16	fxp0.0	10.92.31.254
10.204.0.0/16	fxp0.0	10.92.31.254
10.205.0.0/16	fxp0.0	10.92.31.254
10.206.0.0/16	fxp0.0	10.92.31.254
10.207.0.0/16	fxp0.0	10.92.31.254
10.209.0.0/16	fxp0.0	10.92.31.254
10.212.0.0/16	fxp0.0	10.92.31.254
10.213.0.0/16	fxp0.0	10.92.31.254
10.214.0.0/16	fxp0.0	10.92.31.254
10.215.0.0/16	fxp0.0	10.92.31.254
10.216.0.0/16	fxp0.0	10.92.31.254
10.218.13.0/24	fxp0.0	10.92.31.254

10.218.14.0/24	fxp0.0	10.92.31.254
10.218.16.0/20	fxp0.0	10.92.31.254
10.218.32.0/20	fxp0.0	10.92.31.254
10.227.0.0/16	fxp0.0	10.92.31.254
10.255.111.0/24	ge-0/0/2.0	11.11.11.2
10.255.111.4/32	ge-0/0/2.0	11.11.11.2
10.255.112.1/32	lo0.0	
10.255.112.2/32	ge-0/0/2.0	11.11.11.2
11.11.11.0/24	ge-0/0/2.0	
11.11.11.1/32		
12.12.12.0/24	ge-0/0/2.0	11.11.11.2
15.15.15.0/24	ge-0/0/1.0	
15.15.15.1/32		
22.22.22.0/24	ge-0/0/0.0	
22.22.22.1/32		
23.23.23.0/24	ge-0/0/2.0	11.11.11.2
24.24.24.0/24	ge-0/0/2.0	11.11.11.2
25.25.25.0/24	ge-0/0/2.0	11.11.11.2
128.92.17.45/32	ge-0/0/2.0	11.11.11.2
128.92.20.175/32	lo0.0	
128.92.21.186/32	ge-0/0/2.0	11.11.11.2
128.92.25.135/32	ge-0/0/2.0	11.11.11.2
128.92.27.91/32	ge-0/0/2.0	11.11.11.2
128.92.28.70/32	ge-0/0/2.0	11.11.11.2
172.16.0.0/12	fxp0.0	10.92.31.254
192.168.0.0/16	fxp0.0	10.92.31.254
192.168.102.0/23	fxp0.0	10.92.31.254
207.17.136.0/24	fxp0.0	10.92.31.254
207.17.136.192/32	fxp0.0	10.92.31.254
207.17.137.0/24	fxp0.0	10.92.31.254
224.0.0.5/32		

Meaning

The output displays the route entries in the Label Distribution Protocol (LDP) internal topology table of Device R0.

Verify Only FEC Information of LDP Route**Purpose**

Display only the FEC information of LDP route.

Action

On Device R0, from operational mode, run the **show ldp route fec-only** command to display the routes in the routing table.

```
user@R0> show ldp route fec-only
```

Destination	Next-hop intf/lsp/table	Next-hop address
10.255.111.1/32	ge-0/0/2.0	11.11.11.2
10.255.111.2/32	ge-0/0/2.0	11.11.11.2
10.255.111.3/32	ge-0/0/2.0	11.11.11.2
10.255.111.4/32	ge-0/0/2.0	11.11.11.2
10.255.112.1/32	lo0.0	
10.255.112.2/32	ge-0/0/2.0	11.11.11.2

Meaning

The output displays only the FEC routes of LDP protocol available for Device R0.

Verify FEC and Shadow Routes of LDP

Purpose

Display the FEC and the shadow routes in the routing table.

Action

On Device R0, from operational mode, run the **show ldp route fec-and-route** command to display the FEC and shadow routes in the routing table.

```
user@R0> show ldp route fec-and-route
```

Destination	Next-hop intf/lsp/table	Next-hop address
10.4.0.0/16	fxp0.0	10.92.31.254
10.5.0.0/16	fxp0.0	10.92.31.254
10.6.128.0/17	fxp0.0	10.92.31.254
10.9.0.0/16	fxp0.0	10.92.31.254
10.10.0.0/16	fxp0.0	10.92.31.254
10.13.4.0/23	fxp0.0	10.92.31.254
10.13.10.0/23	fxp0.0	10.92.31.254
10.82.0.0/15	fxp0.0	10.92.31.254
10.84.0.0/16	fxp0.0	10.92.31.254
10.85.12.0/22	fxp0.0	10.92.31.254
10.92.0.0/16	fxp0.0	10.92.31.254

10.92.16.0/20	fxp0.0	
10.92.20.175/32		
10.94.0.0/16	fxp0.0	10.92.31.254
10.99.0.0/16	fxp0.0	10.92.31.254
10.102.0.0/16	fxp0.0	10.92.31.254
10.150.0.0/16	fxp0.0	10.92.31.254
10.155.0.0/16	fxp0.0	10.92.31.254
10.157.64.0/19	fxp0.0	10.92.31.254
10.160.0.0/16	fxp0.0	10.92.31.254
10.204.0.0/16	fxp0.0	10.92.31.254
10.205.0.0/16	fxp0.0	10.92.31.254
10.206.0.0/16	fxp0.0	10.92.31.254
10.207.0.0/16	fxp0.0	10.92.31.254
10.209.0.0/16	fxp0.0	10.92.31.254
10.212.0.0/16	fxp0.0	10.92.31.254
10.213.0.0/16	fxp0.0	10.92.31.254
10.214.0.0/16	fxp0.0	10.92.31.254
10.215.0.0/16	fxp0.0	10.92.31.254
10.216.0.0/16	fxp0.0	10.92.31.254
10.218.13.0/24	fxp0.0	10.92.31.254
10.218.14.0/24	fxp0.0	10.92.31.254
10.218.16.0/20	fxp0.0	10.92.31.254
10.218.32.0/20	fxp0.0	10.92.31.254
10.227.0.0/16	fxp0.0	10.92.31.254
10.255.111.0/24	ge-0/0/2.0	11.11.11.2
10.255.111.1/32	ge-0/0/2.0	11.11.11.2
10.255.111.2/32	ge-0/0/2.0	11.11.11.2
10.255.111.3/32	ge-0/0/2.0	11.11.11.2
10.255.111.4/32	ge-0/0/2.0	11.11.11.2
10.255.111.4/32	ge-0/0/2.0	11.11.11.2
10.255.112.1/32	lo0.0	
10.255.112.1/32	lo0.0	
10.255.112.2/32	ge-0/0/2.0	11.11.11.2
10.255.112.2/32	ge-0/0/2.0	11.11.11.2
11.11.11.0/24	ge-0/0/2.0	
11.11.11.1/32		
12.12.12.0/24	ge-0/0/2.0	11.11.11.2
15.15.15.0/24	ge-0/0/1.0	
15.15.15.1/32		
22.22.22.0/24	ge-0/0/0.0	
22.22.22.1/32		
23.23.23.0/24	ge-0/0/2.0	11.11.11.2
24.24.24.0/24	ge-0/0/2.0	11.11.11.2
25.25.25.0/24	ge-0/0/2.0	11.11.11.2

128.92.17.45/32	ge-0/0/2.0	11.11.11.2
128.92.20.175/32	lo0.0	
128.92.21.186/32	ge-0/0/2.0	11.11.11.2
128.92.25.135/32	ge-0/0/2.0	11.11.11.2
128.92.27.91/32	ge-0/0/2.0	11.11.11.2
128.92.28.70/32	ge-0/0/2.0	11.11.11.2
172.16.0.0/12	fxp0.0	10.92.31.254
192.168.0.0/16	fxp0.0	10.92.31.254
192.168.102.0/23	fxp0.0	10.92.31.254
207.17.136.0/24	fxp0.0	10.92.31.254
207.17.136.192/32	fxp0.0	10.92.31.254
207.17.137.0/24	fxp0.0	10.92.31.254
224.0.0.5/32		

Meaning

The output displays the FEC and the shadow routes of Device R0

Configuring LDP Route Preferences

When several protocols calculate routes to the same destination, route preferences are used to select which route is installed in the forwarding table. The route with the lowest preference value is selected. The preference value can be a number in the range 0 through 255. By default, LDP routes have a preference value of 9.

To modify the route preferences, include the **preference** statement:

```
preference preference;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

LDP Graceful Restart

LDP graceful restart enables a router whose LDP control plane is undergoing a restart to continue to forward traffic while recovering its state from neighboring routers. It also enables a router on which helper mode is enabled to assist a neighboring router that is attempting to restart LDP.

During session initialization, a router advertises its ability to perform LDP graceful restart or to take advantage of a neighbor performing LDP graceful restart by sending the graceful restart TLV. This TLV contains two fields relevant to LDP graceful restart: the reconnect time and the recovery time. The values of the reconnect and recovery times indicate the graceful restart capabilities supported by the router.

When a router discovers that a neighboring router is restarting, it waits until the end of the recovery time before attempting to reconnect. The recovery time is the length of time a router waits for LDP to restart gracefully. The recovery time period begins when an initialization message is sent or received. This time period is also typically the length of time that a neighboring router maintains its information about the restarting router, allowing it to continue to forward traffic.

You can configure LDP graceful restart in both the master instance for the LDP protocol and for a specific routing instance. You can disable graceful restart at the global level for all protocols, at the protocol level for LDP only, and on a specific routing instance. LDP graceful restart is disabled by default, because at the global level, graceful restart is disabled by default. However, helper mode (the ability to assist a neighboring router attempting a graceful restart) is enabled by default.

The following are some of the behaviors associated with LDP graceful restart:

- Outgoing labels are not maintained in restarts. New outgoing labels are allocated.
- When a router is restarting, no label-map messages are sent to neighbors that support graceful restart until the restarting router has stabilized (label-map messages are immediately sent to neighbors that do not support graceful restart). However, all other messages (keepalive, address-message, notification, and release) are sent as usual. Distributing these other messages prevents the router from distributing incomplete information.
- Helper mode and graceful restart are independent. You can disable graceful restart in the configuration, but still allow the router to cooperate with a neighbor attempting to restart gracefully.

Configuring LDP Graceful Restart

IN THIS SECTION

- [Enabling Graceful Restart | 889](#)
- [Disabling LDP Graceful Restart or Helper Mode | 889](#)
- [Configuring Reconnect Time | 890](#)
- [Configuring Recovery Time and Maximum Recovery Time | 890](#)

When you alter the graceful restart configuration at either the **[edit routing-options graceful-restart]** or **[edit protocols ldp graceful-restart]** hierarchy levels, any running LDP session is automatically restarted to apply the graceful restart configuration. This behavior mirrors the behavior of BGP when you alter its graceful restart configuration.

By default, graceful restart helper mode is enabled, but graceful restart is disabled. Thus, the default behavior of a router is to assist neighboring routers attempting a graceful restart, but not to attempt a graceful restart itself.

To configure LDP graceful restart, see the following sections:

Enabling Graceful Restart

To enable LDP graceful restart, you also need to enable graceful restart on the router. To enable graceful restart, include the **graceful-restart** statement:

```
graceful-restart;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

NOTE: ACX Series routers do not support [edit logical-systems *logical-system-name* routing-options] hierarchy level.

The **graceful-restart** statement enables graceful restart for all protocols supporting this feature on the router. For more information about graceful restart, see the *Junos OS Routing Protocols Library*.

By default, LDP graceful restart is enabled when you enable graceful restart at both the LDP protocol level and on all the routing instances. However, you can disable both LDP graceful restart and LDP graceful restart helper mode.

Disabling LDP Graceful Restart or Helper Mode

To disable LDP graceful restart and recovery, include the **disable** statement:

```
ldp {
  graceful-restart {
    disable;
  }
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

You can disable helper mode at the LDP protocols level only. You cannot disable helper mode for a specific routing instance. To disable LDP helper mode, include the **helper-disable** statement:

```
ldp {
  graceful-restart {
    helper-disable;
  }
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The following LDP graceful restart configurations are possible:

- LDP graceful restart and helper mode are both enabled.
- LDP graceful restart is disabled but helper mode is enabled. A router configured in this way cannot restart gracefully but can help a restarting neighbor.
- LDP graceful restart and helper mode are both disabled. The router does not use LDP graceful restart or the graceful restart type, length, and value (TLV) sent in the initialization message. The router behaves as a router that cannot support LDP graceful restart.

A configuration error is issued if you attempt to enable graceful restart and disable helper mode.

Configuring Reconnect Time

After the LDP connection between neighbors fails, neighbors wait a certain amount of time for the gracefully restarting router to resume sending LDP messages. After the wait period, the LDP session can be reestablished. You can configure the wait period in seconds. This value is included in the fault tolerant session TLV sent in LDP initialization messages when LDP graceful restart is enabled.

Suppose that Router A and Router B are LDP neighbors. Router A is the restarting Router. The reconnect time is the time that Router A tells Router B to wait after Router B detects that Router A restarted.

To configure the reconnect time, include the **reconnect-time** statement:

```
graceful-restart {
  reconnect-time seconds;
}
```

You can set the reconnect time to a value in the range from 30 through 300 seconds. By default, it is 60 seconds.

For a list of hierarchy levels at which you can configure these statements, see the statement summary sections for these statements.

Configuring Recovery Time and Maximum Recovery Time

The recovery time is the amount of time a router waits for LDP to restart gracefully. The recovery time period begins when an initialization message is sent or received. This period is also typically the amount

of time that a neighboring router maintains its information about the restarting router, allowing it to continue to forward traffic.

To prevent a neighboring router from being adversely affected if it receives a false value for the recovery time from the restarting router, you can configure the maximum recovery time on the neighboring router. A neighboring router maintains its state for the shorter of the two times. For example, Router A is performing an LDP graceful restart. It has sent a recovery time of 900 seconds to neighboring Router B. However, Router B has its maximum recovery time configured at 400 seconds. Router B will only wait for 400 seconds before it purges its LDP information from Router A.

To configure recovery time, include the **recovery-time** statement and the **maximum-neighbor-recovery-time** statement:

```
graceful-restart {
  maximum-neighbor-recovery-time seconds;
  recovery-time seconds;
}
```

For a list of hierarchy levels at which you can configure these statements, see the statement summary sections for these statements.

Filtering Inbound LDP Label Bindings

You can filter received LDP label bindings, applying policies to accept or deny bindings advertised by neighboring routers. To configure received-label filtering, include the **import** statement:

```
import [ policy-names ];
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The named policy (configured at the **[edit policy-options]** hierarchy level) is applied to all label bindings received from all LDP neighbors. All filtering is done with **from** statements. [Table 23 on page 891](#) lists the only **from** operators that apply to LDP received-label filtering.

Table 23: from Operators That Apply to LDP Received-Label Filtering

from Operator	Description
interface	Matches on bindings received from a neighbor that is adjacent over the specified interface
neighbor	Matches on bindings received from the specified LDP router ID

Table 23: from Operators That Apply to LDP Received-Label Filtering (*continued*)

from Operator	Description
next-hop	Matches on bindings received from a neighbor advertising the specified interface address
route-filter	Matches on bindings with the specified prefix

If a binding is filtered, it still appears in the LDP database, but is not considered for installation as part of a label-switched path (LSP).

Generally, applying policies in LDP can be used only to block the establishment of LSPs, not to control their routing. This is because the path that an LSP follows is determined by unicast routing, and not by LDP. However, when there are multiple equal-cost paths to the destination through different neighbors, you can use LDP filtering to exclude some of the possible next hops from consideration. (Otherwise, LDP chooses one of the possible next hops at random.)

LDP sessions are not bound to interfaces or interface addresses. LDP advertises only per-router (not per-interface) labels; so if multiple parallel links exist between two routers, only one LDP session is established, and it is not bound to a single interface. When a router has multiple adjacencies to the same neighbor, take care to ensure that the filter does what is expected. (Generally, using **next-hop** and **interface** is not appropriate in this case.)

If a label has been filtered (meaning that it has been rejected by the policy and is not used to construct an LSP), it is marked as filtered in the database:

```
user@host> show ldp database
```

```
Input label database, 10.10.255.1:0-10.10.255.6:0
Label Prefix
3 10.10.255.6/32 (Filtered)
Output label database, 10.10.255.1:0-10.10.255.6:0
Label Prefix
3 10.10.255.1/32 (Filtered)
```

For more information about how to configure policies for LDP, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

Examples: Filtering Inbound LDP Label Bindings

Accept only /32 prefixes from all neighbors:

```
[edit]
```

```

protocols {
  ldp {
    import only-32;
    ...
  }
}
policy-options {
  policy-statement only-32 {
    term first {
      from {
        route-filter 0.0.0.0/0 upto /31;
      }
      then reject;
    }
    then accept;
  }
}

```

Accept **131.108/16** or longer from router ID **10.10.255.2** and accept all prefixes from all other neighbors:

```

[edit]
protocols {
  ldp {
    import nosy-neighbor;
    ...
  }
}
policy-options {
  policy-statement nosy-neighbor {
    term first {
      from {
        neighbor 10.10.255.2;
        route-filter 131.108.0.0/16 orlonger accept;
        route-filter 0.0.0.0/0 orlonger reject;
      }
    }
    then accept;
  }
}

```

Filtering Outbound LDP Label Bindings

You can configure export policies to filter LDP outbound labels. You can filter outbound label bindings by applying routing policies to block bindings from being advertised to neighboring routers. To configure outbound label filtering, include the **export** statement:

```
export [policy-name];
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The named export policy (configured at the **[edit policy-options]** hierarchy level) is applied to all label bindings transmitted to all LDP neighbors. The only **from** operator that applies to LDP outbound label filtering is **route-filter**, which matches bindings with the specified prefix. The only **to** operators that apply to outbound label filtering are the operators in [Table 24 on page 894](#).

Table 24: to Operators for LDP Outbound-Label Filtering

to Operator	Description
interface	Matches on bindings sent to a neighbor that is adjacent over the specified interface
neighbor	Matches on bindings sent to the specified LDP router ID
next-hop	Matches on bindings sent to a neighbor advertising the specified interface address

If a binding is filtered, the binding is not advertised to the neighboring router, but it can be installed as part of an LSP on the local router. You can apply policies in LDP to block the establishment of LSPs, but not to control their routing. The path an LSP follows is determined by unicast routing, not by LDP.

LDP sessions are not bound to interfaces or interface addresses. LDP advertises only per-router (not per-interface) labels. If multiple parallel links exist between two routers, only one LDP session is established, and it is not bound to a single interface.

Do not use the **next-hop** and **interface** operators when a router has multiple adjacencies to the same neighbor.

Filtered labels are marked in the database:

```
user@host> show ldp database
```

```
Input label database, 10.10.255.1:0-10.10.255.3:0
Label Prefix
```

```

100007 10.10.255.2/32
3 10.10.255.3/32
Output label database, 10.10.255.1:0-10.10.255.3:0
Label Prefix
3 10.10.255.1/32
100001 10.10.255.6/32 (Filtered)

```

For more information about how to configure policies for LDP, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

Examples: Filtering Outbound LDP Label Bindings

Block transmission of the route for **10.10.255.6/32** to any neighbors:

```

[edit protocols]
ldp {
    export block-one;
}
policy-options {
    policy-statement block-one {
        term first {
            from {
                route-filter 10.10.255.6/32 exact;
            }
            then reject;
        }
        then accept;
    }
}

```

Send only **131.108/16** or longer to router ID **10.10.255.2**, and send all prefixes to all other routers:

```

[edit protocols]
ldp {
    export limit-lsps;
}
policy-options {
    policy-statement limit-lsps {
        term allow-one {
            from {
                route-filter 131.108.0.0/16 orlonger;
            }
            to {

```

```

        neighbor 10.10.255.2;
    }
    then accept;
}
term block-the-rest {
    to {
        neighbor 10.10.255.2;
    }
    then reject;
}
then accept;
}
}

```

Specifying the Transport Address Used by LDP

Routers must first establish a TCP session between each other before they can establish an LDP session. The TCP session enables the routers to exchange the label advertisements needed for the LDP session. To establish the TCP session, each router must learn the other router's transport address. The transport address is an IP address used to identify the TCP session over which the LDP session will run.

To configure the LDP transport address, include the `transport-address` statement:

```
transport-address (router-id | interface);
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

If you specify the **router-id** option, the address of the router identifier is used as the transport address (unless otherwise configured, the router identifier is typically the same as the loopback address). If you specify the **interface** option, the interface address is used as the transport address for any LDP sessions to neighbors that can be reached over that interface. Note that the router identifier is used as the transport address by default.

You cannot specify the **interface** option when there are multiple parallel links to the same LDP neighbor, because the LDP specification requires that the same transport address be advertised on all interfaces to the same neighbor. If LDP detects multiple parallel links to the same neighbor, it disables interfaces to that neighbor one by one until the condition is cleared, either by disconnecting the neighbor on an interface or by specifying the **router-id** option.

Control Transport Address Used for Targeted-LDP Session

IN THIS SECTION

- [Benefits of Controlling Transport Address Used for Targeted-LDP Session | 897](#)
- [Targeted-LDP Transport Address Overview | 897](#)
- [Transport Address Preference | 897](#)
- [Troubleshooting Transport Address Configuration | 898](#)

To establish a TCP session between two devices, each device must learn the other device's transport address. The transport address is an IP address used to identify the TCP session over which the LDP session operates. Earlier, this transport address could only be the router-ID or an interface address. With the LDP transport-address feature, you can explicitly configure any IP address as the transport address for targeted LDP neighbors for Layer 2 circuit, MPLS, and VPLS adjacencies. This enables you to control the targeted-LDP sessions using transport-address configuration.

Benefits of Controlling Transport Address Used for Targeted-LDP Session

Configuring transport address for establishing targeted-LDP sessions has the following benefits:

- **Flexible interface configurations**—Provides the flexibility of configuring multiple IP addresses for one loopback interface without interrupting the creation of LDP session between the targeted-LDP neighbors.
- **Ease of operation**—Transport address configured at the interface-level, allows you to use more than one protocol in the IGP backbone for LDP. This enables smooth and easy operations.

Targeted-LDP Transport Address Overview

Prior to Junos OS Release 19.1R1, LDP provided support only for router-ID or the interface address as the transport address on any LDP interface. The adjacencies formed on that interface used one of the IP addresses assigned to the interface or the router-ID. In case of targeted adjacency, the interface is the loopback interface. When multiple loopback addresses were configured on the device, the transport address could not be derived for the interface, and as a result, the LDP session could not be established.

Starting in Junos OS Release 19.1R1, in addition to the default IP addresses used for transport address of targeted-LDP sessions, you can configure any other IP address as the transport address under the **session**, **session-group**, and **interface** configuration statements. The transport address configuration is applicable for configured neighbors only including Layer 2 circuits, MPLS, and VPLS adjacencies. This configuration does not apply to discovered adjacencies (targeted or not).

Transport Address Preference

You can configure transport address for targeted-LDP sessions at the session, session-group, and interface level.

After the transport address is configured, the targeted-LDP session is established based on the transport address preference of LDP.

The order of preference of transport address for targeted neighbor (configured through Layer 2 circuit, MPLS, VPLS, and LDP configuration) is as follows:

1. Under **[edit protocols ldp session]** hierarchy.
2. Under **[edit protocols ldp session-group]** hierarchy.
3. Under **[edit protocols ldp interface lo0]** hierarchy.
4. Under **[edit protocols ldp]** hierarchy.
5. Default address.

The order of preference of transport address for the discovered neighbors is as follows:

1. Under **[edit protocols ldp interface]** hierarchy.
2. Under **[edit protocols ldp]** hierarchy.
3. Default address.

The order of preference of transport address for auto-targeted neighbors where LDP is configured to accept hello packets is as follows:

1. Under **[edit protocols ldp interface lo0]** hierarchy.
2. Under **[edit protocols ldp]** hierarchy.
3. Default address.

Troubleshooting Transport Address Configuration

You can use the following show command outputs to troubleshoot targeted-LDP sessions:

- **show ldp session**
- **show ldp neighbor**

The **detail** level of output of the **show ldp neighbor** command displays the transport address sent in the hello messages to the targeted neighbor. If this address is not reachable from the neighbor, the LDP session does not come up.

- **show configuration protocols ldp**

You can also enable LDP traceoptions for further troubleshooting.

- If the configuration is changed from using a transport address that is invalid (non reachable) to transport address that is valid, the following traces can be observed:

```

May 29 10:47:11.569722 Incoming connect from 10.55.1.4
May 29 10:47:11.570064 Connection 10.55.1.4 state Closed -> Open
May 29 10:47:11.570727 Session 10.55.1.4 state Nonexistent -> Initialized
May 29 10:47:11.570768 Session 10.55.1.4 state Initialized -> OpenRec
May 29 10:47:11.570799 LDP: Session param Max PDU length 4096 from 10.55.1.4,
negotiated 4096
May 29 10:47:11.570823 Session 10.55.1.4 GR state Nonexistent -> Operational
May 29 10:47:11.669295 Session 10.55.1.4 state OpenRec -> Operational
May 29 10:47:11.669387 RPD_LDP_SESSIONUP: LDP session 10.55.1.4 is up

```

- If the configuration is changed from using a transport address that is valid to transport address that is invalid (non reachable), the following traces can be observed:

```

May 29 10:42:36.317942 Session 10.55.1.4 GR state Operational -> Nonexistent
May 29 10:42:36.318171 Session 10.55.1.4 state Operational -> Closing
May 29 10:42:36.318208 LDP session 10.55.1.4 is down, reason: received notification
from peer
May 29 10:42:36.318236 RPD_LDP_SESSIONDOWN: LDP session 10.55.1.4 is down, reason:
received notification from peer
May 29 10:42:36.320081 Connection 10.55.1.4 state Open -> Closed
May 29 10:42:36.322411 Session 10.55.1.4 state Closing -> Nonexistent

```

In case of faulty configuration, perform the following troubleshooting tasks:

- Check the **address family**. The transport address that is configured under the **session** statement must belong to the same address family as the neighbor or session.
- The address that is configured as the transport address under a **neighbor** or **session** statement must be local to the router for the targeted hello messages to start. You can check if the address is configured. If the address is not configured under any interface, the configuration is rejected.

Configuring the Prefixes Advertised into LDP from the Routing Table

You can control the set of prefixes that are advertised into LDP and cause the router to be the egress router for those prefixes. By default, only the loopback address is advertised into LDP. To configure the set of prefixes from the routing table to be advertised into LDP, include the **egress-policy** statement:

```
egress-policy policy-name;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

NOTE: If you configure an egress policy for LDP that does not include the loopback address, it is no longer advertised in LDP. To continue to advertise the loopback address, you need to explicitly configure it as a part of the LDP egress policy.

The named policy (configured at the **[edit policy-options]** or **[edit logical-systems *logical-system-name* policy-options]** hierarchy level) is applied to all routes in the routing table. Those routes that match the policy are advertised into LDP. You can control the set of neighbors to which those prefixes are advertised by using the **export** statement. Only **from** operators are considered; you can use any valid **from** operator. For more information, see the *Junos OS Routing Protocols Library*.

NOTE: ACX Series routers do not support **[edit logical-systems]** hierarchy level.

Example: Configuring the Prefixes Advertised into LDP

Advertise all connected routes into LDP:

```
[edit protocols]
ldp {
  egress-policy connected-only;
}
policy-options {
  policy-statement connected-only {
    from {
      protocol direct;
    }
    then accept;
  }
}
```

Configuring FEC Deaggregation

When an LDP egress router advertises multiple prefixes, the prefixes are bound to a single label and aggregated into a single forwarding equivalence class (FEC). By default, LDP maintains this aggregation as the advertisement traverses the network.

Normally, because an LSP is not split across multiple next hops and the prefixes are bound into a single LSP, load-balancing across equal-cost paths does not occur. You can, however, load-balance across equal-cost paths if you configure a load-balancing policy and deaggregate the FECs.

Deaggregating the FECs causes each prefix to be bound to a separate label and become a separate LSP.

To configure deaggregated FECs, include the **deaggregate** statement:

```
deaggregate;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

For all LDP sessions, you can configure deaggregated FECs only globally.

Deaggregating a FEC allows the resulting multiple LSPs to be distributed across multiple equal-cost paths and distributes LSPs across the multiple next hops on the egress segments but installs only one next hop per LSP.

To aggregate FECs, include the **no-deaggregate** statement:

```
no-deaggregate;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

For all LDP sessions, you can configure aggregated FECs only globally.

Configuring Policers for LDP FECs

You can configure the Junos OS to track and police traffic for LDP FECs. LDP FEC policers can be used to do any of the following:

- Track or police the ingress traffic for an LDP FEC.
- Track or police the transit traffic for an LDP FEC.
- Track or police LDP FEC traffic originating from a specific forwarding class.
- Track or police LDP FEC traffic originating from a specific virtual routing and forwarding (VRF) site.
- Discard false traffic bound for a specific LDP FEC.

To police traffic for an LDP FEC, you must first configure a filter. Specifically, you need to configure either the **interface** statement or the **interface-set** statement at the **[edit firewall family protocol-family filter filter-name term term-name from]** hierarchy level. The **interface** statement allows you to match the filter to a single interface. The **interface-set** statement allows you to match the filter to multiple interfaces.

For more information on how to configure the **interface** statement, the **interface-set** statement, and policers for LDP FECs, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

Once you have configured the filters, you need to include them in the **policing** statement configuration for LDP. To configure policers for LDP FECs, include the **policing** statement:

```

policing {
  fec fec-address {
    ingress-traffic filter-name;
    transit-traffic filter-name;
  }
}

```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The **policing** statement includes the following options:

- **fec**—Specify the FEC address for the LDP FEC you want to police.
- **ingress-filter**—Specify the name of the ingress traffic filter.
- **transit-traffic**—Specify the name of the transit traffic filter.

Configuring LDP IPv4 FEC Filtering

By default, when a targeted LDP session is established, the Junos OS always exchanges both the IPv4 forwarding equivalence classes (FECs) and the Layer 2 circuit FECs over the targeted LDP session. For an LDP session to an indirectly connected neighbor, you might only want to export Layer 2 circuit FECs to the neighbor if the session was specifically configured to support Layer 2 circuits or VPLS.

In a mixed vendor network where all non-BGP prefixes are advertised into LDP, the LDP database can become large. For this type of environment, it can be useful to prevent the advertisement of IPv4 FECs over LDP sessions formed because of Layer 2 circuit or LDP VPLS configuration. Similarly, it can be useful to filter any IPv4 FECs received in this sort of environment.

If all the LDP neighbors associated with an LDP session are Layer 2 only, you can configure the Junos OS to advertise only Layer 2 circuit FECs by configuring the **l2-smart-policy** statement. This feature also automatically filters out the IPv4 FECs received on this session. Configuring an explicit export or import policy that is activated for **l2-smart-policy** disables this feature in the corresponding direction.

If one of the LDP session's neighbors is formed because of a discovered adjacency or if the adjacency is formed because of an LDP tunneling configuration on one or more RSVP LSPs, the IPv4 FECs are advertised and received using the default behavior.

To prevent LDP from exporting IPv4 FECs over LDP sessions with Layer 2 neighbors only and to filter out IPv4 FECs received over such sessions, include the **l2-smart-policy** statement:

```

l2-smart-policy;

```

For a list of hierarchy levels at which you can configure this statement, see the statement summary for this statement.

Configuring BFD for LDP LSPs

You can configure Bidirectional Forwarding Detection (BFD) for LDP LSPs. The BFD protocol is a simple hello mechanism that detects failures in a network. Hello packets are sent at a specified, regular interval. A neighbor failure is detected when the router stops receiving a reply after a specified interval. BFD works with a wide variety of network environments and topologies. The failure detection timers for BFD have shorter time limits than the failure detection mechanisms of static routes, providing faster detection.

An error is logged whenever a BFD session for a path fails. The following shows how BFD for LDP LSP log messages might appear:

```
RPD_LDP_BFD_UP: LDP BFD session for FEC 10.255.16.14/32 is up
RPD_LDP_BFD_DOWN: LDP BFD session for FEC 10.255.16.14/32 is down
```

You can also configure BFD for RSVP LSPs, as described in [“Configuring BFD for RSVP-Signaled LSPs” on page 143](#).

The BFD failure detection timers are adaptive and can be adjusted to be more or less aggressive. For example, the timers can adapt to a higher value if the adjacency fails, or a neighbor can negotiate a higher value for a timer than the configured value. The timers adapt to a higher value when a BFD session flap occurs more than three times in a span of 15 seconds. A back-off algorithm increases the receive (Rx) interval by two if the local BFD instance is the reason for the session flap. The transmission (Tx) interval is increased by two if the remote BFD instance is the reason for the session flap. You can use the **clear bfd adaptation** command to return BFD interval timers to their configured values. The **clear bfd adaptation** command is hitless, meaning that the command does not affect traffic flow on the routing device.

To enable BFD for LDP LSPs, include the **oam** and **bfd-liveness-detection** statements:

```
oam {
  bfd-liveness-detection {
    detection-time threshold milliseconds;
    ecmp;
    failure-action {
      remove-nexthop;
      remove-route;
    }
    holddown-interval seconds;
    ingress-policy ingress-policy-name;
    minimum-interval milliseconds;
  }
}
```

```

    minimum-receive-interval milliseconds;
    minimum-transmit-interval milliseconds;
    multiplier detection-time-multiplier;
    no-adaptation;
    transmit-interval {
        minimum-interval milliseconds;
        threshold milliseconds;
    }
    version (0 | 1 | automatic);
}
fec fec-address {
    bfd-liveness-detection {
        detection-time threshold milliseconds;
        ecmp;
        failure-action {
            remove-nexthop;
            remove-route;
        }
        holddown-interval milliseconds;
        ingress-policy ingress-policy-name;
        minimum-interval milliseconds;
        minimum-receive-interval milliseconds;
        minimum-transmit-interval milliseconds;
        multiplier detection-time-multiplier;
        no-adaptation;
        transmit-interval {
            minimum-interval milliseconds;
            threshold milliseconds;
        }
        version (0 | 1 | automatic);
    }
    no-bfd-liveness-detection;
    periodic-traceroute {
        disable;
        exp exp-value;
        fanout fanout-value;
        frequency minutes;
        paths number-of-paths;
        retries retry-attempts;
        source address;
        ttl ttl-value;
        wait seconds;
    }
}

```



```

lsp-ping-interval seconds;
periodic-traceroute {
    disable;
    exp exp-value;
    fanout fanout-value;
    frequency minutes;
    paths number-of-paths;
    retries retry-attempts;
    source address;
    ttl ttl-value;
    wait seconds;
}
}

```

You can enable BFD for the LDP LSPs associated with a specific forwarding equivalence class (FEC) by configuring the FEC address using the **fec** option at the **[edit protocols ldp]** hierarchy level. Alternatively, you can configure an Operation Administration and Management (OAM) ingress policy to enable BFD on a range of FEC addresses. For more information, see [“Configuring OAM Ingress Policies for LDP” on page 1141](#).

You cannot enable BFD LDP LSPs unless their equivalent FEC addresses are explicitly configured or OAM is enabled on the FECs using an OAM ingress policy. If BFD is not enabled for any FEC addresses, the BFD session will not come up.

You can configure the **oam** statement at the following hierarchy levels:

- **[edit protocols ldp]**
- **[edit logical-systems *logical-system-name* protocols ldp]**

NOTE: ACX Series routers do not support **[edit logical-systems]** hierarchy level.

The **oam** statement includes the following options:

- **fec**—Specify the FEC address. You must either specify a FEC address or configure an OAM ingress policy to ensure that the BFD session comes up.
- **lsp-ping-interval**—Specify the duration of the LSP ping interval in seconds. To issue a ping on an LDP-signaled LSP, use the **ping mpls ldp** command. For more information, see the [CLI Explorer](#).

The **bfd-liveness-detection** statement includes the following options:

- **ecmp**—Cause LDP to establish BFD sessions for all ECMP paths configured for the specified FEC. If you configure the **ecmp** option, you must also configure the **periodic-traceroute** statement for the specified FEC. If you do not do so, the commit operation fails. You can configure the **periodic-traceroute** statement at the global hierarchy level (**[edit protocols ldp oam]**) while only configuring the **ecmp** option for a specific FEC (**[edit protocols ldp oam fec address bfd-liveness-detection]**).
- **holddown-interval**—Specify the duration the BFD session should remain up before adding the route or next hop. Specifying a time of 0 seconds causes the route or next hop to be added as soon as the BFD session comes back up.
- **minimum-interval**—Specify the minimum transmit and receive interval. If you configure the **minimum-interval** option, you do not need to configure the **minimum-receive-interval** option or the **minimum-transmit-interval** option.
- **minimum-receive-interval**—Specify the minimum receive interval. The range is from 1 through 255,000 milliseconds.
- **minimum-transmit-interval**—Specify the minimum transmit interval. The range is from 1 through 255,000 milliseconds.
- **multiplier**—Specify the detection time multiplier. The range is from 1 through 255.
- **version**—Specify the BFD version. The options are BFD version 0 or BFD version 1. By default, the Junos OS software attempts to automatically determine the BFD version.

Configuring ECMP-Aware BFD for LDP LSPs

When you configure BFD for a FEC, a BFD session is established for only one active local next-hop for the router. However, you can configure multiple BFD sessions, one for each FEC associated with a specific equal-cost multipath (ECMP) path. For this to function properly, you also need to configure LDP LSP periodic traceroute. (See [“Configuring LDP LSP Traceroute” on page 1045](#).) LDP LSP traceroute is used to discover ECMP paths. A BFD session is initiated for each ECMP path discovered. Whenever a BFD session for one of the ECMP paths fails, an error is logged.

LDP LSP traceroute is run periodically to check the integrity of the ECMP paths. The following might occur when a problem is discovered:

- If the latest LDP LSP traceroute for a FEC differs from the previous traceroute, the BFD sessions associated with that FEC (the BFD sessions for address ranges that have changed from previous run) are brought down and new BFD sessions are initiated for the destination addresses in the altered ranges.
- If the LDP LSP traceroute returns an error (for example, a timeout), all the BFD sessions associated with that FEC are torn down.

To configure LDP to establish BFD sessions for all ECMP paths configured for the specified FEC, include the **ecmp** statement.

```
ecmp;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Along with the **ecmp** statement, you must also include the **periodic-traceroute** statement, either in the global LDP OAM configuration (at the **[edit protocols ldp oam]** or **[edit logical-systems logical-system-name protocols ldp oam]** hierarchy level) or in the configuration for the specified FEC (at the **[edit protocols ldp oam fec address]** or **[edit logical-systems logical-system-name protocols ldp oam fec address]** hierarchy level). Otherwise, the commit operation fails.

NOTE: ACX Series routers do not support **[edit logical-systems]** hierarchy level.

Configuring a Failure Action for the BFD Session on an LDP LSP

You can configure route and next-hop properties in the event of a BFD session failure event on an LDP LSP. The failure event could be an existing BFD session that has gone down or could be a BFD session that never came up. LDP adds back the route or next hop when the relevant BFD session comes back up.

You can configure one of the following failure action options for the **failure-action** statement in the event of a BFD session failure on the LDP LSP:

- **remove-nexthop**—Removes the route corresponding to the next hop of the LSP's route at the ingress node when a BFD session failure event is detected.
- **remove-route**—Removes the route corresponding to the LSP from the appropriate routing tables when a BFD session failure event is detected. If the LSP is configured with ECMP and a BFD session corresponding to any path goes down, the route is removed.

To configure a failure action in the event of a BFD session failure on an LDP LSP, include either the **remove-nexthop** option or the **remove-route** option for the **failure-action** statement:

```
failure-action {
  remove-nexthop;
  remove-route;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Configuring the Holddown Interval for the BFD Session

You can specify the duration the BFD session should be up before adding a route or next hop by configuring the **holddown-interval** statement at either the **[edit protocols ldp oam bfd-liveness-detection]** hierarchy level or at the **[edit protocols ldp oam fec address bfd-liveness-detection]** hierarchy level. Specifying a time of 0 seconds causes the route or next hop to be added as soon as the BFD session comes back up.

```
holddown-interval seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Configuring LDP Link Protection

You can configure Label Distribution Protocol (LDP) link protection for both unicast and multicast LDP label-switched paths (LSPs) to provide resiliency during link or node failure.

Before you begin:

1. Configure the device interfaces.
2. Configure the router ID and autonomous system number for the device.
3. Configure the following protocols:
 - a. RSVP
 - b. MPLS with traffic engineering capability.
 - c. OSPF with traffic engineering capability.

NOTE: For multicast LDP link protection with loop-free alternative (LFA), enable link protection.

```
[edit protocols]
user@R0# set ospf area 0 interface all link-protection
```

To configure LDP link protection:

1. Enable point-to-multipoint LDP LSPs.

```
[edit protocols]
user@R0# set ldp p2mp
```

2. Enable LDP on all the interfaces of Router R0 (excluding the management interface) and configure link protection with dynamic RSVP bypass LSP.

```
[edit protocols]
user@R0# set ldp interface all link-protection dynamic-rsvp-lsp
user@R0# set ldp interface fxp0.0 disable
```

3. Verify and commit the configuration.

For example:

```
[edit protocols]
user@R0# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  traffic-engineering;
  interface all;
  interface fxp0.0 {
    disable;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface all {
      metric 1;
    }
    interface fxp0.0 {
      disable;
    }
  }
}
ldp {
  interface all {
    link-protection {
      dynamic-rsvp-lsp;
    }
  }
  interface fxp0.0 {
```

```

        disable;
    }
    p2mp;
}

```

```

[edit]
user@R0# commit
commit complete

```

Example: Configuring LDP Link Protection

IN THIS SECTION

- [LDP Link Protection Overview | 910](#)
- [Example: Configuring LDP Link Protection | 929](#)

LDP Link Protection Overview

IN THIS SECTION

- [Introduction to LDP | 911](#)
- [Junos OS LDP Protocol Implementation | 911](#)
- [Understanding Multipoint Extensions to LDP | 911](#)
- [Using Multipoint Extensions to LDP on Targeted LDP Sessions | 911](#)
- [Current Limitations of LDP Link Protection | 913](#)
- [Using RSVP LSP as a Solution | 914](#)
- [Understanding Multicast LDP Link Protection | 916](#)
- [Different Modes for Providing LDP Link Protection | 917](#)
- [Label Operation for LDP Link Protection | 918](#)
- [Sample Multicast LDP Link Protection Configuration | 925](#)
- [Make-Before-Break | 927](#)
- [Caveats and Limitations | 928](#)

Introduction to LDP

The Label Distribution Protocol (LDP) is a protocol for distributing labels in non-traffic-engineered applications. LDP allows routers to establish label-switched paths (LSPs) through a network by mapping network-layer routing information directly to the data link LSPs.

These LSPs might have an endpoint at a directly attached neighbor (comparable to IP hop-by-hop forwarding) or at a network egress node, enabling switching through all intermediary nodes. LSPs established by LDP can also traverse traffic-engineered LSPs created by RSVP.

LDP associates a forwarding equivalence class (FEC) with each LSP it creates. The FEC associated with an LSP specifies which packets are mapped to that LSP. LSPs are extended through a network as each router chooses the label advertised by the next hop for the FEC and splices it to the label it advertises to all other routers. This process forms a tree of LSPs that converge on the egress router.

Junos OS LDP Protocol Implementation

The Junos OS implementation of LDP supports LDP version 1. Junos OS supports a simple mechanism for tunneling between routers in an interior gateway protocol (IGP), to eliminate the required distribution of external routes within the core. Junos OS allows an MPLS tunnel next hop to all egress routers in the network, with only an IGP running in the core to distribute routes to egress routers. Edge routers run BGP but do not distribute external routes to the core. Instead, the recursive route lookup at the edge resolves to an LSP switched to the egress router. No external routes are necessary on the transit LDP routers.

Understanding Multipoint Extensions to LDP

An LDP defines mechanisms for setting up point-to-point, multipoint-to-point, point-to-multipoint, and multipoint-to-multipoint LSPs in the network. The point-to-multipoint and multipoint-to-multipoint LSPs are collectively referred to as multipoint LSPs, where traffic flows from a single source to multiple destinations, and from multiple sources to multiple destinations, respectively. The destination or egress routers are called leaf nodes, and traffic from the source traverses one or more transit nodes before reaching the leaf nodes.

NOTE: Junos OS does not provide support for multipoint-to-multipoint LSPs.

By taking advantage of the MPLS packet replication capability of the network, multipoint LSPs avoid unnecessary packet replication at the ingress router. Packet replication takes place only when packets are forwarded to two or more different destinations requiring different network paths.


Using Multipoint Extensions to LDP on Targeted LDP Sessions

The specification for the multipoint extensions to LDP requires that the two endpoints of an LDP session are directly connected by a Layer 2 medium, or are considered to be neighbors by the network's IGP. This is referred to as an LDP link session. When the two endpoints of an LDP session are not directly connected, the session is referred to as a targeted LDP session.

Past Junos OS implementations support multicast LDP for link sessions only. With the introduction of the LDP link protection feature, the multicast LDP capabilities are extended to targeted LDP sessions.

[Figure 66 on page 912](#) shows a sample topology.

Figure 66: Multicast LDP Support for Targeted LDP Session

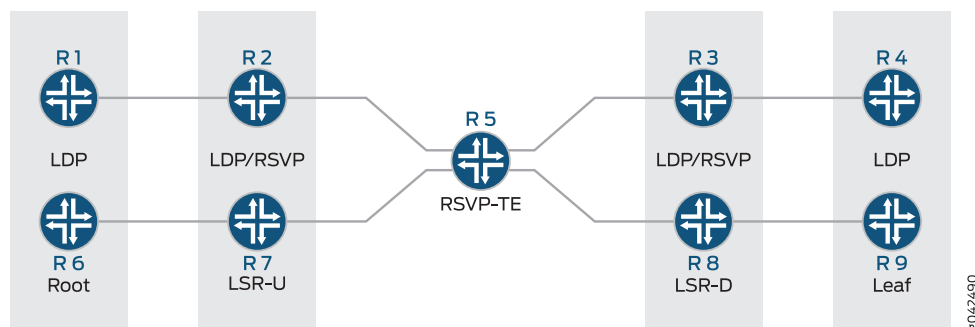

Routers R7 and R8 are the upstream (LSR-U) and downstream (LSR-D) label-switched routers (LSRs), respectively, and deploy multicast LDP. The core router, Router R5, has RSVP-TE enabled.

When LSR-D is setting up the point-to-multipoint LSP with root and LSP ID attributes, it determines the upstream LSR-U as a next-hop on the best path to the root (currently, this next-hop is assumed to be an IGP next hop).

With the multicast LDP support on targeted LDP sessions, you can determine if there is an LSP next hop to LSR-U which is on LSR-D's path to root, where LSR-D and LSR-U are not directly connected neighbors, but targeted LDP peers. The point-to-multipoint label advertised on the targeted LDP session between LSR-D and LSR-U is not used unless there is an LSP between LSR-D and LSR-U. Therefore, a corresponding LSP in the reverse direction from LSR-U to LSR-D is required.

Data is transmitted on the point-to-multipoint LSP using unicast replication of packets, where LSR-U sends one copy to each downstream LSR of the point-to-multipoint LSP.

The data transmission is implemented in the following ways:

1. The point-to-multipoint capabilities on the targeted LDP session are negotiated.
2. The algorithm to select the upstream LSR is changed, where if IGP next hops are unavailable, or in other words, there is no LDP link session between LSR-D and LSR-U, an RSVP LSP is used as the next hop to reach LSR-U.
3. The incoming labels received over the targeted LDP sessions are installed as a branch next hop for this point-to-multipoint FEC route with the LDP label as the inner label and the RSVP label as the outer label.

Current Limitations of LDP Link Protection

When there is a link or node failure in an LDP network deployment, fast traffic recovery should be provided to recover impacted traffic flows for mission-critical services. In the case of multipoint LSPs, when one of the links of the point-to-multipoint tree fails, the subtrees might get detached until the IGP reconverges and the multipoint LSP is established using the best path from the downstream router to the new upstream router.


In fast reroute using local repair for LDP traffic, a backup path (repair path) is pre-installed in the Packet Forwarding Engine. When the primary path fails, traffic is rapidly moved to the backup path without having to wait for the routing protocols to converge. Loop-free alternate (LFA) is one of the methods used to provide IP fast reroute capability in the core and service provider networks.

Without LFA, when a link or a router fails or is returned to service, the distributed routing algorithms compute the new routes based on the changes in the network. The time during which the new routes are computed is referred to as routing transition. Until the routing transition is completed, the network connectivity is interrupted because the routers adjacent to a failure continue to forward the data packets through the failed component until an alternative path is identified.

However, LFA does not provide full coverage in all network deployments because of the IGP metrics. As a result, this is a limitation to the current LDP link protection schemes.

[Figure 67 on page 913](#) illustrates a sample network with incomplete LFA coverage, where traffic flows from the source router (S) to the destination router (D) through Router R1. Assuming that each link in the network has the same metric, if the link between the Router S and Router R1 fails, Router R4 is not an LFA that protects the S-R1 link, so traffic resiliency is lost. Thus, full coverage is not achieved by using plain LFA. In typical networks, there is always some percentage of LFA coverage gap with plain LFA.

Figure 67: Incomplete Coverage Problem with LFA

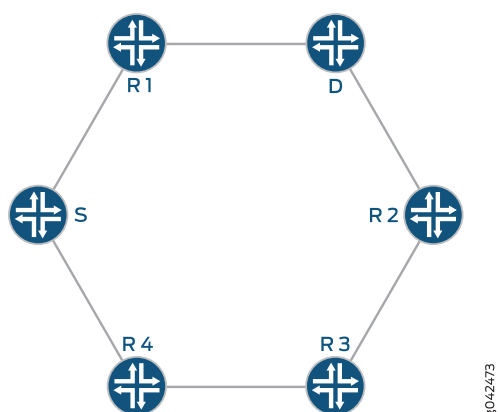

Using RSVP LSP as a Solution

IN THIS SECTION

- [Manually Configured RSVP LSPs | 914](#)
- [Dynamically Configured RSVP LSPs | 915](#)


The key to protect the traffic flowing through LDP LSPs is to have an explicit tunnel to re-route the traffic in the event of a link or node failure. The explicit path has to terminate on the next downstream router, and the traffic needs to be accepted on the explicit path, where the RPF check should pass.

RSVP LSPs help overcome the current limitations of loop-free alternate (LFA) for both point-to-point and point-to-multipoint LDP LSPs by extending the LFA coverage in the following methods:

Manually Configured RSVP LSPs

Considering the example used in [Figure 67 on page 913](#), when the S-R1 link fails, and Router R4 is not an LFA for that particular link, a manually created RSVP LSP is used as a patch to provide complete LFA coverage. The RSVP LSP is pre-sigaled and pre-installed in the Packet Forwarding Engine of Router S, so that it can be used as soon as Router S detects that the link has failed.

Figure 68: Manually Configured RSVP LSP Coverage

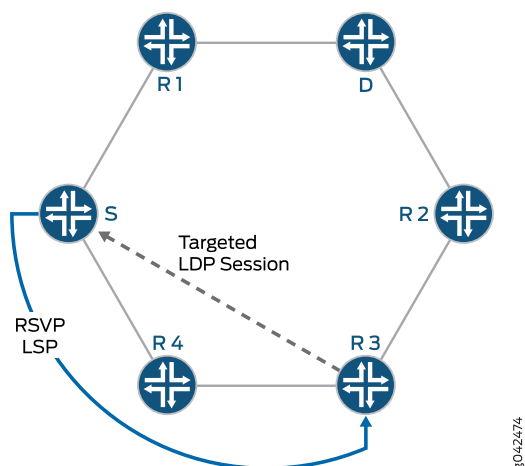

In this case, an RSVP LSP is created between Routers S, R4, and R3 as illustrated in [Figure 68 on page 914](#). A targeted LDP session is created between Router S and Router R3, as a result of which, when the S-R1 link fails, traffic reaches Router R3. Router R3 forwards the traffic to Router R2, as it is the shortest path to reach the destination, Router D.

Dynamically Configured RSVP LSPs

In this method, the RSVP LSPs are created automatically and pre-installed in the system so that they can be used immediately when there is a link failure. Here, the egress is the node on the other side of the link being protected, thereby improving the LFA coverage.


Benefits of Enabling Dynamic RSVP LSPs

- Ease of configuration.
- 100 percent coverage against link failure as long as there is an alternate path to the far end of the link being protected.
- Setting up and tearing down of the RSVP bypass LSP is automatic.
- RSVP LSP only used for link protection and not for forwarding traffic while the link being protected is up.
- Reduces the total number of RSVP LSPs required on the system.

Considering the example used in [Figure 67 on page 913](#), in order to protect traffic against the potential failure of the S-R1 link, because Router R4 is not an LFA for that particular link, an RSVP bypass LSP is automatically created to Router R1, which is the node on the far side of the protected link as illustrated in [Figure 69 on page 915](#). From Router R1, traffic is forwarded to its original destination, Router D.

The RSVP LSP is pre-signaled and pre-installed in the Packet Forwarding Engine of Router S so that it can be used as soon as Router S detects that the link has failed.

Figure 69: Dynamically Configured RSVP LSP Coverage

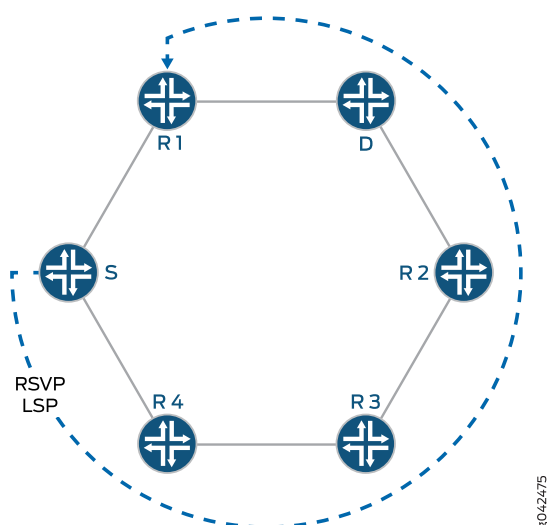

An alternative mode of operation is not to use LFA at all, and to always have the RSVP LSP created to cover all link failures.

To enable dynamic RSVP LSPs, include the **dynamic-rsvp-lsp** statement at the **[edit protocols ldp interface interface-name link-protection]** hierarchy level, in addition to enabling the RSVP protocol on the appropriate interfaces.

Understanding Multicast LDP Link Protection

A point-to-multipoint LDP label-switched path (LSP) is an LDP-signaled LSP that is point-to-multipoint, and is referred to as multicast LDP.

A multicast LDP LSP can be used to send traffic from a single root or ingress node to a number of leaf or egress nodes traversing one or more transit nodes. Multicast LDP link protection enables fast reroute of traffic carried over point-to-multipoint LDP LSPs in case of a link failure. When one of the links of the point-to-multipoint tree fails, the subtrees might get detached until the IGP reconverges and the multipoint LSP is established using the best path from the downstream router to the new upstream router.

To protect the traffic flowing through the multicast LDP LSP, you can configure an explicit tunnel to re-route the traffic in the event of link failure. The explicit path has to terminate on the next downstream router. The reverse path forwarding for the traffic should be successful.

Multicast LDP link protection introduces the following features and functionality:

- Use of dynamic RSVP LSP as bypass tunnels

The RSVP LSP's Explicit Route Object (ERO) is calculated using Constrained Shortest Path First (CSPF) with the constraint as the link to avoid. The LSP is signaled and torn down dynamically whenever link protection is necessary.

- Make-before-break

The make-before-break feature ensures that there is minimum packet loss when attempting to signal a new LSP path before tearing down the old LSP path for the multicast LDP LSP.

- Targeted LDP session

A targeted adjacency to the downstream label-switching router (LSR) is created for two reasons:

- To keep the session up after link failure.
- To use the point-to-multipoint label received from the session to send traffic to the downstream LSR on the RSVP LSP bypass tunnel.

When the downstream LSR sets up the multicast LDP LSP with the root node and LSP ID, it uses that upstream LSR, which is on the best path toward the root.

NOTE: Multicast LDP link protection is not required when there are multiple link adjacencies (parallel links) to the downstream LSR.

Different Modes for Providing LDP Link Protection

Following are three different modes of operation available for unicast and multicast LDP link protection:

- **Case A: LFA only**

Under this mode of operation, multicast LDP link protection is provided using an existing viable loop-free alternate (LFA). In the absence of a viable LFA, link protection is not provided for the multicast LDP LSP.

- **Case B: LFA and Dynamic RSVP LSP**


Under this mode of operation, multicast LDP link protection is provided using an existing viable LFA. In the absence of a viable LFA, an RSVP bypass LSP is created automatically to provide link protection for the multicast LDP LSP.

- **Case C: Dynamic RSVP LSP only**

Under this mode of operation, LFA is not used for link protection. Multicast LDP link protection is provided by using automatically created RSVP bypass LSP.

Figure 70 on page 917 is a sample topology illustrating the different modes of operation for multicast LDP link protection. Router R5 is the root connecting to two leaf nodes, Routers R3 and R4. Router R0 and Router R1 are the upstream and downstream label-switched routers (LSRs), respectively. A multicast LDP LSP runs among the root and leaf nodes.

Figure 70: Multicast LDP Link Protection Sample Topology

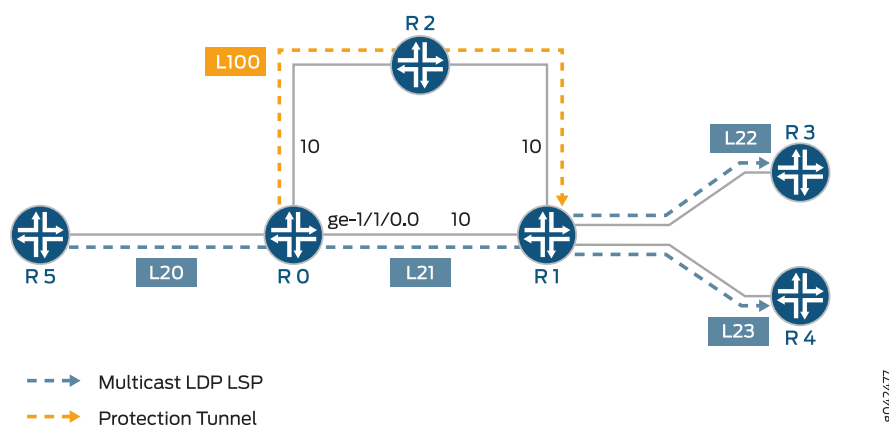

Considering that Router R0 needs to protect the multicast LDP LSP in the case that the R0-R1 link fails, the different modes of link protection operate in the following manner:

- **Case A: LFA only**

Router R0 checks if a viable LFA path exists that can avoid the R0-R1 link to reach Router R1. Based on the metrics, Router R2 is a valid LFA path for the R0-R1 link and is used to forward unicast LDP traffic. If multiple multicast LDP LSPs use the R0-R1 link, the same LFA (Router R2) is used for multicast LDP link protection.

When the R0-R1 link fails, the multicast LDP LSP traffic is moved onto the LFA path by Router R0, and the unicast LDP label to reach Router R1 (L100) is pushed on top of the multicast LDP label (L21).

- **Case B: LFA and Dynamic RSVP LSP**

Router R0 checks if a viable LFA path exists that can avoid the R0-R1 link to reach Router R1. Based on the metrics, Router R2 is a valid LFA path for the R0-R1 link and is used to forward unicast LDP traffic. If multiple multicast LDP LSPs use the R0-R1 link, the same LFA (Router R2) is used for multicast LDP link protection. When the R0-R1 link fails, the multicast LDP LSP traffic is moved onto the LFA path by Router R0.

However, if the metric on the R2-R1 link was 50 instead of 10, Router 2 is not a valid LFA for the R0-R1 link. In this case, an RSVP LSP is automatically created to protect the multicast LDP traffic traveling between Routers R0 and R1.

- **Case C: Dynamic RSVP LSP only**

An RSVP LSP is signaled automatically from Router R0 to Router R1 through Router R2, avoiding interface ge-1/1/0. If multiple multicast LDP LSPs use the R0-R1 link, the same RSVP LSP is used for multicast LDP link protection.

When the R0-R1 link fails, the multicast LDP LSP traffic is moved onto the RSVP LSP by Router R0, and the RSVP label to reach Router R1 (L100) is pushed on top of the multicast LDP label (L21).


Label Operation for LDP Link Protection

IN THIS SECTION

- Case A: LFA Only | 919
- Case B: LFA and Dynamic RSVP LSP | 923
- Case C: Dynamic RSVP LSP Only | 925

Using the same network topology as in Figure 5, [Figure 71 on page 919](#) illustrates the label operation for unicast and multicast LDP link protection.

Figure 71: LDP Label Operation Sample Topology

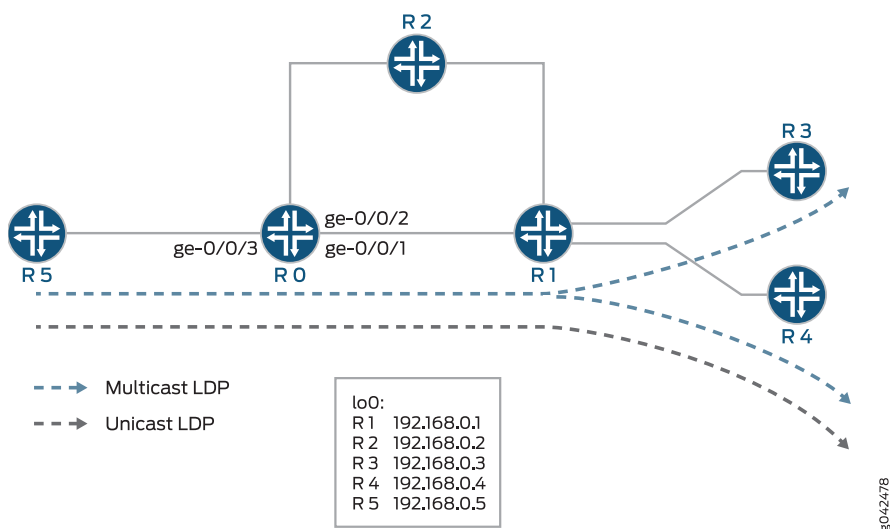

Router R5 is the root connecting to two leaf nodes, Routers R3 and R4. Router R0 and Router R1 are the upstream and downstream label-switched routers (LSRs), respectively. A multicast LDP LSP runs among the root and leaf nodes. A unicast LDP path connects Router R1 to Router R5.

The label operation is performed differently under the following modes of LDP link protection:

Case A: LFA Only

Using the **show route detail** command output on Router R0, the unicast LDP traffic and multicast LDP traffic can be derived.

```
user@R0> show route detail
```

```
299840 (1 entry, 1 announced)
  *LDP      Preference: 9
            Next hop type: Router
            Address: 0x93bc22c
            Next-hop reference count: 1
            Next hop: 11.0.0.6 via ge-0/0/1.0 weight 0x1, selected
            Label operation: Swap 299824
            Session Id: 0x1
            Next hop: 11.0.0.10 via ge-0/0/2.0 weight 0xf000
            Label operation: Swap 299808
            Session Id: 0x3
            State: <Active Int>
            Age: 3:16      Metric: 1
            Validation State: unverified
            Task: LDP
```

```

Announcement bits (1): 0-KRT
AS path: I
Prefixes bound to route: 192.168.0.4/32

299856 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Flood
          Address: 0x9340e04
          Next-hop reference count: 3
          Next hop type: Router, Next hop index: 262143
          Address: 0x93bc3dc
          Next-hop reference count: 2
          Next hop: 11.0.0.6 via ge-0/0/1.0 weight 0x1
          Label operation: Swap 299888
          Next hop: 11.0.0.10 via ge-0/0/2.0 weight 0xf000
          Label operation: Swap 299888, Push 299776(top)
          Label TTL action: prop-ttl, prop-ttl(top)
          State: <Active Int AckRequest>
          Age: 3:16          Metric: 1
          Validation State: unverified
          Task: LDP
          Announcement bits (1): 0-KRT
          AS path: I
          FECs bound to route: P2MP root-addr 192.168.0.5, lsp-id 99

```

Label 299840 is traffic arriving at Router R0 that corresponds to unicast LDP traffic to Router R1. Label 299856 is traffic arriving at Router 0 that corresponds to multicast LDP traffic from the root node R5 to the leaf egress nodes, R3 and R4.

The main path for both unicast and multicast LDP LSPs is through interface ge-0/0/1 (the link to Router R1), and the LFA path is through interface ge-0/0/2 (the link to Router R2). The LFA path is not used unless the ge-0/0/1 interface goes down.


In the label operation for Case A, the LFA-only mode of operation is different for unicast and multicast LDP traffic:

- Unicast label operation

For unicast LDP traffic, the FECs and associated labels are advertised on all the links in the network on which LDP is enabled. This means that in order to provide LFA action for the unicast LDP traffic to Router R4, instead of swapping the incoming label for label 299824 advertised by Router R1 for FEC R4, Router R0 simply swaps the incoming label for label 299808 advertised by Router R2 for FEC R4. This is the standard Junos OS LFA operation for unicast LDP traffic.

Figure 72 on page 921 illustrates the label operation for unicast traffic when the R0-R1 link fails. The grey boxes show the label operation for unicast LDP traffic under normal condition, and the dotted boxes show the label operation for unicast LDP traffic when the R0-R1 link fails.

Figure 72: Unicast LDP Label Operation

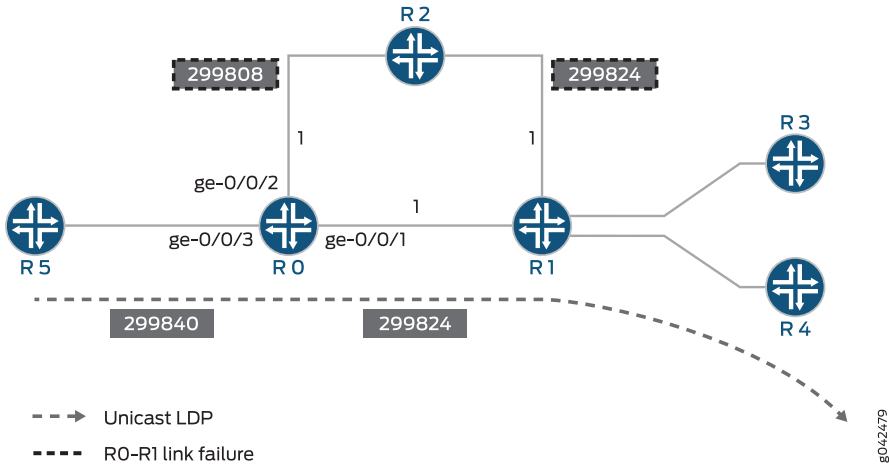

- Multicast label operation

The label operation for multicast LDP traffic differs from the unicast LDP label operation, because multipoint LSP labels are only advertised along the best path from the leaf node to the ingress node. As a result, Router R2 has no knowledge of the multicast LDP. To overcome this, the multicast LDP LSP traffic is simply tunneled inside the unicast LDP LSP path through Router R2 that terminates at Router R1.

In order to achieve this, Router R0 first swaps the incoming multicast LDP LSP label 299856 to label 299888 advertised by Router R1. Label 299776 is then pushed on top, which is the LDP label advertised by Router R2 for FEC R1. When the packet arrives at Router R2, the top label is popped out due to penultimate hop-popping. This means that the packet arrives at Router R1 with the multicast LDP label 299888 that Router R1 had originally advertised to Router R0.

Figure 73 on page 922 illustrates the label operation for multicast LDP traffic when the R0-R1 link fails. The blue boxes show the label operation for multicast LDP traffic under normal condition, and the dotted boxes show the label operation for multicast LDP traffic when the R0-R1 link fails.


```

299856 (1 entry, 1 announced)
  *LDP      Preference: 9
            Next hop type: Flood
            Address: 0x9340e04
            Next-hop reference count: 3
            Next hop type: Router, Next hop index: 579
            Address: 0x93407c8
            Next-hop reference count: 2
            Next hop: 11.0.0.6 via ge-0/0/1.0
            Label operation: Swap 299888
            State: <Active Int AckRequest>
            Age: 5:38      Metric: 1
            Validation State: unverified
            Task: LDP
            Announcement bits (1): 0-KRT
            AS path: I
            FECs bound to route: P2MP root-addr 192.168.0.5, lsp-id 99

```

Case B: LFA and Dynamic RSVP LSP

In this mode of operation, if there is a viable LFA neighbor, the label operation behavior is similar to that of Case A, LFA only mode. However, if there is no viable LFA neighbor, an RSVP bypass tunnel is automatically created.

If the metric on the link R2-R1 is set to 1000 instead of 1, Router R2 is not an LFA for Router R0. On learning that there are no LFA paths to protect the R0-R1 link failure, an RSVP bypass tunnel is automatically created with Router R1 as the egress node and follows a path that avoids the R0-R1 link (for instance, R0-R2-R1).

If the R0-R1 link fails, the unicast LDP and multicast LDP traffic is tunneled through the RSVP bypass tunnel. The RSVP bypass tunnel is not used for normal forwarding and is used only to provide link protection to LDP traffic in the case of R0-R1 link failure.

Using the **show route detail** command, the unicast and multicast LDP traffic can be derived.

```
user@host> show route detail
```

```

299840 (1 entry, 1 announced)
  *LDP      Preference: 9
            Next hop type: Router
            Address: 0x940c3dc
            Next-hop reference count: 1
            Next hop: 11.0.0.6 via ge-0/0/1.0 weight 0x1, selected
            Label operation: Swap 299824

```

```

Session Id: 0x1
Next hop: 11.0.0.10 via ge-0/0/2.0 weight 0x8001
Label-switched-path ge-0/0/1.0:BypassLSP->192.168.0.1
Label operation: Swap 299824, Push 299872(top)
Label TTL action: prop-ttl, prop-ttl(top)
Session Id: 0x3
State: <Active Int NhAckRequest>
Age: 19          Metric: 1
Validation State: unverified
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
Prefixes bound to route: 192.168.0.4/32

299856 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Flood
          Address: 0x9340e04
          Next-hop reference count: 3
          Next hop type: Router, Next hop index: 262143
          Address: 0x940c154
          Next-hop reference count: 2
          Next hop: 11.0.0.6 via ge-0/0/1.0 weight 0x1
          Label operation: Swap 299888
          Next hop: 11.0.0.10 via ge-0/0/2.0 weight 0x8001
          Label-switched-path ge-0/0/1.0:BypassLSP->192.168.0.1
          Label operation: Swap 299888, Push 299872(top)
          Label TTL action: prop-ttl, prop-ttl(top)
          State: < Active Int AckRequest>
          Age: 20          Metric: 1
          Validation State: unverified
          Task: LDP
          Announcement bits (1): 0-KRT
          AS path: I
          FECs bound to route: P2MP root-addr 192.168.0.5, lsp-id 99

```


The main path for both unicast and multicast LDP LSP is through interface ge-0/0/1 (the link to Router R1), and the LFA path is through interface ge-0/0/2 (the link to Router R2). The LFA path is not used unless the ge-0/0/1 interface goes down.

Label 299840 is traffic arriving at Router R0 that corresponds to unicast LDP traffic to Router R4. Label 299856 is traffic arriving at Router 0 that corresponds to multicast LDP traffic from the root node R5 to the leaf egress nodes, R3 and R4.

As seen in the **show route detail** command output, the label operations for the protection path are the same for unicast LDP and multicast LDP traffic. The incoming LDP label at Router R0 is swapped to the LDP label advertised by Router R1 to Router R0. The RSVP label 299872 for the bypass tunnel is then pushed onto the packet. Penultimate hop-popping is used on the bypass tunnel, causing Router R2 to pop that label. Thus the packet arrives at Router R1 with the LDP label that it had originally advertised to Router R0.

Figure 74 on page 925 illustrates the label operation for unicast LDP and multicast LDP traffic protected by the RSVP bypass tunnel. The grey and blue boxes represent label values used under normal conditions for unicast and multicast LDP traffic, respectively. The dotted boxes represent label values used when the R0-R1 link fails.

Figure 74: LDP Link Protection Label Operation

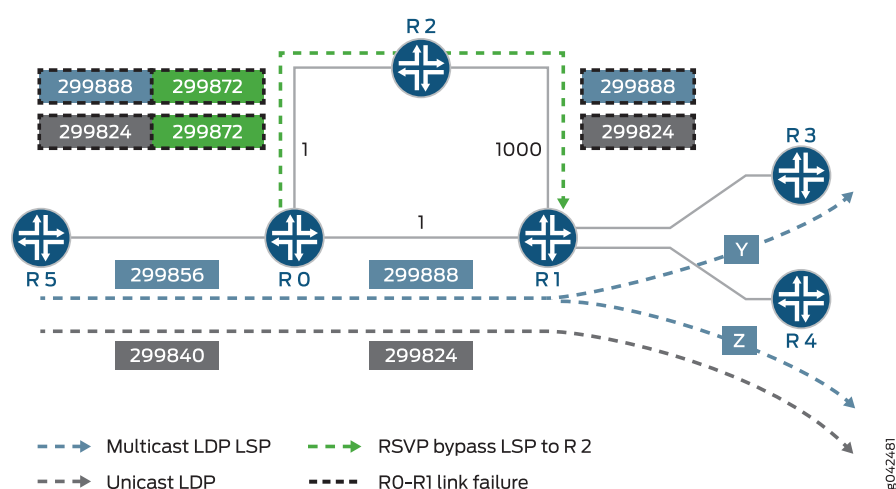

Case C: Dynamic RSVP LSP Only

In this mode of operation, LFA is not used at all. A dynamic RSVP bypass LSP is automatically created in order to provide link protection. The output from the **show route detail** command and the label operations are similar to Case B, LFA and dynamic RSVP LSP mode.

Sample Multicast LDP Link Protection Configuration

To enable multicast LDP link protection, the following configuration is required on Router R0:

NOTE: In this sample, multicast LDP link protection is enabled on the ge-1/0/0 interface of Router R0 that connects to Router R1, although typically all the interfaces need to be configured for link protection.

Router R0

```

protocols {
  rsvp {
    interface all;
    interface ge-0/0/0.0 {
      disable;
    }
  }
  mpls {
    interface all;
    interface ge-0/0/0.0 {
      disable;
    }
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface lo0.0;
      interface ge-0/0/1.0 {
        link-protection;
      }
      interface ge-0/0/2.0;
      interface ge-0/0/3.0;
    }
  }
  ldp {
    make-before-break {
      timeout seconds;
      switchover-delay seconds;
    }
    interface ge-1/1/0.0 {
      link-protection {
        disable;
        dynamic-rsvp-lsp;
      }
    }
  }
}

```

The following configuration statements apply to the different modes of multicast LDP protection as follows:

- **link-protection** statement at [edit protocols ospf interface ge-0/0/1.0]

This configuration is applied only for Case A (LFA only) and Case B (LFA and dynamic RSVP LSP) modes of multicast LDP link protection. Configuring link protection under an IGP is not required for Case C (dynamic RSVP LSP only).

- **link-protection** statement at **[edit protocols ldp interface ge-0/0/1.0]**

This configuration is required for all modes of multicast LDP protection. However, if the only LDP traffic present is unicast, and dynamic RSVP bypasses are not required, then this configuration is not required, as the **link-protection** statement at the **[edit protocols ospf interface ge-0/0/1.0]** hierarchy level results in LFA action for the LDP unicast traffic.

- **dynamic-rsvp-lsp** statement at **[edit protocols ldp interface ge-0/0/1.0 link-protection]**

This configuration is applied only for Case B (LFA and dynamic RSVP LSP) and Case C (dynamic RSVP LSP only) modes of LDP link protection. Dynamic RSVP LSP configuration does not apply to Case A (LFA only).

Make-Before-Break

The make-before-break feature is enabled by default on Junos OS and provides some benefits for point-to-multipoint LSPs.

For a point-to-multipoint LSP, a label-switched router (LSR) selects the LSR that is its next hop to the root of the LSP as its upstream LSR. When the best path to reach the root changes, the LSR chooses a new upstream LSR. During this period, the LSP might be temporarily broken, resulting in packet loss until the LSP reconverges to a new upstream LSR. The goal of make-before-break in this case is to minimize the packet loss. In cases where the best path from the LSR to the root changes but the LSP continues to forward traffic to the previous next hop to the root, a new LSP should be established before the old LSP is withdrawn to minimize the duration of packet loss.

Taking for example, after a link failure, a downstream LSR (for instance, LSR-D) still receives and/or forwards packets to the other downstream LSRs, as it continues to receive packets from the one hop RSVP LSP. Once routing converges, LSR-D selects a new upstream LSR (LSR-U) for this point-to-multipoint LSP's FEC (FEC-A). The new LSR might already be forwarding packets for FEC-A to the downstream LSRs other than LSR-D. After LSR-U receives a label for FEC-A from LSR-D, it notifies LSR-D when it has learnt that LSP for FEC-A has been established from the root to itself. When LSR-D receives such a notification, it changes its next hop for the LSP root to LSR-U. This is a route delete and add operation on LSR-D. At this point, LSR-D does an LSP switchover, and traffic tunneled through RSVP LSP or LFA is dropped, and traffic from LSR-U is accepted. The new transit route for LSR-U is added. The RPF check is changed to accept traffic from LSR-U and to drop traffic from the old upstream LSR, or the old route is deleted and the new route is added.

The assumption is that LSR-U has received a make-before-break notification from its upstream router for the FEC-A point-to-multipoint LSP and has installed a forwarding state for the LSP. At that point it should signal LSR-D by means of make-before-break notification that it has become part of the tree identified by FEC-A and that LSR-D should initiate its switchover to the LSP. Otherwise, LSR-U should remember that it needs to send notification to LSR-D when it receives a make-before-break notification from the upstream

LSR for FEC-A and installs a forwarding state for this LSP. LSR-D continues to receive traffic from the old next hop to the root node using one hop RSVP LSP or LFA path until it switches over to the new point-to-multipoint LSP to LSR-U.

The make-before-break functionality with multicast LDP link protection includes the following features:

- **Make-before-break capability**

An LSR advertises that it is capable of handling make-before-break LSPs using the capability advertisement. If the peer is not make-before-break capable, the make-before-break parameters are not sent to this peer. If an LSR receives a make-before-break parameter from a downstream LSR (LSR-D) but the upstream LSR (LSR-U) is not make-before-break capable, the LSR immediately sends a make-before-break notification to LSR-D, and the make-before-break capable LSP is not established. Instead, the normal LSP is established.

- **Make-before-break status code**

The make-before-break status code includes:

- 1—make-before-break request
- 2—make-before-break acknowledgment

When a downstream LSR sends a label-mapping message for point-to-multipoint LSP, it includes the make-before-break status code as 1 (request). When the upstream LSR updates the forwarding state for the point-to-multipoint LSP, it informs the downstream LSR with a notification message containing the make-before-break status code as 2 (acknowledgment). At that point, the downstream LSR does an LSP switchover.

Caveats and Limitations

The Junos OS implementation of the LDP link protection feature has the following caveats and limitations:

- Make-before-break is not supported for the following point-to-multipoint LSPs on an egress LSR:
 - Next-generation multicast virtual private network (MVPN) with virtual routing and forwarding (VRF) label
 - Static LSP
- The following features are not supported:
 - Nonstop active routing for point-to-multipoint LSP in Junos OS Releases 12.3, 13.1 and 13.2
 - Graceful restart switchover point-to-multipoint LSP
 - Link protection for routing instance

Example: Configuring LDP Link Protection

IN THIS SECTION

- [Requirements | 929](#)
- [Overview | 929](#)
- [Configuration | 931](#)
- [Verification | 937](#)

This example shows how to configure Label Distribution Protocol (LDP) link protection for both unicast and multicast LDP label-switched paths (LSPs).

Requirements

This example uses the following hardware and software components:

- Six routers that can be a combination of M Series, MX Series, or T Series routers with one root node and two leaf nodes running a point-to-multipoint LDP LSP.
- Junos OS Release 12.3 or later running on all the routers.

Before you begin:

1. Configure the device interfaces.
2. Configure the following protocols:
 - a. RSVP
 - b. MPLS
 - c. OSPF or any other IGP
 - d. LDP

Overview


LDP link protection enables fast reroute of traffic carried over LDP LSPs in case of a link failure. LDP point-to-multipoint LSPs can be used to send traffic from a single root or ingress node to a number of leaf nodes or egress nodes traversing one or more transit nodes. When one of the links of the point-to-multipoint tree fails, the subtrees can get detached until the IGP reconverges and multicast LDP initiates label mapping using the best path from the downstream router to the new upstream router. To protect the traffic in the event of a link failure, you can configure an explicit tunnel so that traffic can be rerouted using the tunnel. Junos OS supports make-before-break capabilities to ensure minimum packet loss when attempting to signal a new LSP path before tearing down the old LSP path. This feature also adds targeted LDP support for multicast LDP link protection.

When configuring LDP link protection, be aware of the following considerations:

- Configure traffic engineering under IGP (if it is not supported by default), and include the interfaces configured for MPLS and RSVP so that constrained-based link protected dynamic RSVP LSP is signaled by RSVP using Constrained Shortest Path First (CSPF). When this condition is not satisfied, RSVP LSP might not come up and LDP cannot use it as a protected next hop.
- Configure a path between two label-switched routers (LSRs) to provide IP connectivity between the routers when there is a link failure. This enables CSPF to calculate an alternate path for link protection. When the connectivity between the routers is lost, the LDP targeted adjacency does not come up and dynamic RSVP LSP cannot be signaled, resulting in no protection for the LDP forwarding equivalence class (FEC) for which the peer is the downstream LSR.
- If link protection is active only on one LSR, then the other LSR should not be configured with the **strict-targeted-hellos** statement. This enables the LSR without link protection to allow asymmetric remote neighbor discovery and send periodic targeted hellos to the LSR that initiated the remote neighbor. When this condition is not satisfied, LDP targeted adjacency is not formed.
- LDP must be enabled on the loopback interface of the LSR to create remote neighbors based on LDP tunneling, LDP-based virtual private LAN service (VPLS), Layer 2 circuits, or LDP session protection. When this condition is not satisfied, LDP targeted adjacency is not formed.
- For unicast LDP LSP, loop-free alternate (LFA) should be configured in IGP.
- The ingress route to merge point should have at least one next hop avoiding the primary link between the merge point and the point of local repair for unicast LDP LSP.
- Point of local repair should have a unicast LDP label for the backup next hop to reach the merge point.

Topology

Figure 75: LDP Link Protection

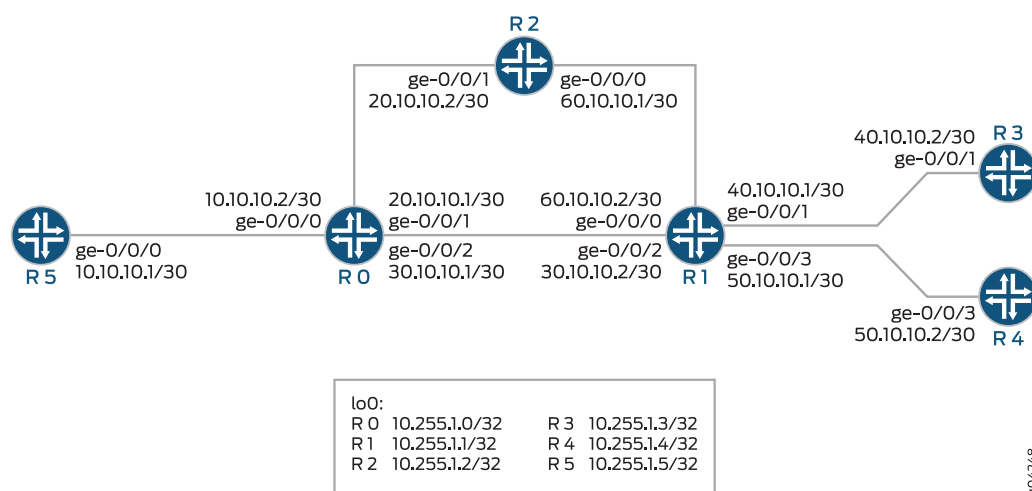

In this example, Router R5 is the root connecting to two leaf nodes, Routers R3 and R4. Router R0 is the point of local repair.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

R5

```
set interfaces ge-0/0/0 unit 0 family inet address 10.10.10.1/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.1.5/32
set routing-options router-id 10.255.1.5
set routing-options autonomous-system 100
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all metric 1
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all link-protection dynamic-rsvp-lsp
set protocols ldp interface fxp0.0 disable
set protocols ldp p2mp
```

R0

```
set interfaces ge-0/0/0 unit 0 family inet address 10.10.10.2/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 20.10.10.1/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 30.10.10.1/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.1.0/32
set routing-options router-id 10.255.1.0
set routing-options autonomous-system 100
```

```

set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all metric 1
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all link-protection dynamic-rsvp-lsp
set protocols ldp interface fxp0.0 disable
set protocols ldp p2mp

```

R1

```

set interfaces ge-0/0/0 unit 0 family inet address 60.10.10.2/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 40.10.10.1/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 30.10.10.2/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 50.10.10.1/30
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.1.1/32
set routing-options router-id 10.255.1.1
set routing-options autonomous-system 100
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all metric 1
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all link-protection dynamic-rsvp-lsp
set protocols ldp interface fxp0.0 disable
set protocols ldp p2mp

```

R2

```

set interfaces ge-0/0/0 unit 0 family inet address 60.10.10.1/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 20.10.10.2/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.1.2/32
set routing-options router-id 10.255.1.2
set routing-options autonomous-system 100
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all link-protection dynamic-rsvp-lsp
set protocols ldp interface fxp0.0 disable
set protocols ldp p2mp

```

R3

```

set interfaces ge-0/0/1 unit 0 family inet address 40.10.10.2/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.1.3/32
set routing-options router-id 10.255.1.3
set routing-options autonomous-system 100
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all metric 1
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all link-protection dynamic-rsvp-lsp
set protocols ldp interface fxp0.0 disable
set protocols ldp p2mp root-address 10.255.1.5 lsp-id 1

```

R4

```

set interfaces ge-0/0/3 unit 0 family inet address 50.10.10.2/30
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.1.4/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all metric 1
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all link-protection dynamic-rsvp-lsp
set protocols ldp interface fxp0.0 disable
set protocols ldp p2mp root-address 10.255.1.5 lsp-id 1

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Router R0:

1. Configure the Router R0 interfaces.

```

[edit interfaces]
user@R0# set ge-0/0/0 unit 0 family inet address 10.10.10.2/30
user@R0# set ge-0/0/0 unit 0 family mpls
user@R0# set ge-0/0/1 unit 0 family inet address 20.10.10.1/30
user@R0# set ge-0/0/1 unit 0 family mpls
user@R0# set ge-0/0/2 unit 0 family inet address 30.10.10.1/30
user@R0# set ge-0/0/2 unit 0 family mpls
user@R0# set lo0 unit 0 family inet address 10.255.1.0/32

```

2. Configure the router ID and autonomous system of Router R0.

```

[edit routing-options]
user@R0# set router-id 10.255.1.0
user@R0# set autonomous-system 100

```

3. Enable RSVP on all the interfaces of Router R0 (excluding the management interface).

```
[edit protocols]
user@R0# set rsvp interface all
user@R0# set rsvp interface fxp0.0 disable
```

4. Enable MPLS on all the interfaces of Router R0 (excluding the management interface) along with traffic engineering capabilities.

```
[edit protocols]
user@R0# set mpls traffic-engineering
user@R0# set mpls interface all
user@R0# set mpls interface fxp0.0 disable
```

5. Enable OSPF on all the interfaces of Router R0 (excluding the management interface), assign equal cost metric for the links, and enable traffic engineering capabilities.

```
[edit protocols]
user@R0# set ospf traffic-engineering
user@R0# set ospf area 0.0.0.0 interface all metric 1
user@R0# set ospf area 0.0.0.0 interface fxp0.0 disable
```

NOTE: For multicast LDP link protection with loop-free alternative (LFA), enable the following configuration under the **[edit protocols]** hierarchy level:

```
set ospf area 0 interface all link-protection
```

6. Enable LDP on all the interfaces of Router R0 (excluding the management interface) and configure link protection with dynamic RSVP bypass LSP.

```
[edit protocols]
user@R0# set ldp interface all link-protection dynamic-rsvp-lsp
user@R0# set ldp interface fxp0.0 disable
user@R0# set ldp p2mp
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R0# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.10.10.2/30;
    }
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 20.10.10.1/30;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 30.10.10.1/30;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.1.0/32;
    }
  }
}
```

```
user@R0# show routing-options
router-id 10.255.1.0;
autonomous-system 100;
```

```
user@R0# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
```



```
}
mpls {
    traffic-engineering;
    interface all;
    interface fxp0.0 {
        disable;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all {
            metric 1;
        }
        interface fxp0.0 {
            disable;
        }
    }
}
ldp {
    interface all {
        link-protection {
            dynamic-rsvp-lsp;
        }
    }
    interface fxp0.0 {
        disable;
    }
    p2mp;
}
```

Verification

IN THIS SECTION

- [Verifying the Bypass RSVP LSP Path | 938](#)
- [Verifying Label Operation | 939](#)

Verify that the configuration is working properly.

Verifying the Bypass RSVP LSP Path

Purpose

Verify that the bypass RSVP LSP path has been created on the point of local repair (PLR).

Action

From operational mode, run the **show route table mpls.0** command.

user@R0> **show route table mpls.0**

```
mpls.0: 17 destinations, 17 routes (17 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 05:28:13, metric 1
            Receive
1          *[MPLS/0] 05:28:13, metric 1
            Receive
2          *[MPLS/0] 05:28:13, metric 1
            Receive
13         *[MPLS/0] 05:28:13, metric 1
            Receive
299792     *[LDP/9] 00:41:41, metric 1
            > to 30.10.10.2 via ge-0/0/2.0, Pop
299792(S=0) *[LDP/9] 00:41:41, metric 1
            > to 30.10.10.2 via ge-0/0/2.0, Pop
299808     *[LDP/9] 00:41:41, metric 1
            > to 20.10.10.2 via ge-0/0/1.0, Pop
299808(S=0) *[LDP/9] 00:41:41, metric 1
            > to 20.10.10.2 via ge-0/0/1.0, Pop
299920     *[RSVP/7/1] 01:51:43, metric 1
            > to 30.10.10.2 via ge-0/0/2.0, label-switched-path
ge-0/0/0.0:BypassLSP->10.255.1.1
299920(S=0) *[RSVP/7/1] 01:51:43, metric 1
            > to 30.10.10.2 via ge-0/0/2.0, label-switched-path
ge-0/0/0.0:BypassLSP->10.255.1.1
299936     *[RSVP/7/1] 01:51:25, metric 1
            > to 20.10.10.2 via ge-0/0/1.0, label-switched-path
ge-0/0/0.0:BypassLSP->10.255.1.2
299936(S=0) *[RSVP/7/1] 01:51:25, metric 1
            > to 20.10.10.2 via ge-0/0/1.0, label-switched-path
ge-0/0/0.0:BypassLSP->10.255.1.2
299952     *[LDP/9] 00:06:11, metric 1
            > to 10.10.10.1 via ge-0/0/0.0, Pop
```

```

299952(S=0)      *[LDP/9] 00:06:11, metric 1
                  > to 10.10.10.1 via ge-0/0/0.0, Pop
299968           *[LDP/9] 00:05:39, metric 1
                  > to 30.10.10.2 via ge-0/0/2.0, Swap 299984
299984           *[LDP/9] 00:05:38, metric 1
                  > to 30.10.10.2 via ge-0/0/2.0, Swap 300000
300000           *[LDP/9] 00:05:15, metric 1
                  > to 30.10.10.2 via ge-0/0/2.0, Swap 300016

```

Meaning

When the R0-R1 link goes down, the RSVP bypass LSP is used to route traffic.

Verifying Label Operation

Purpose

Verify the label swapping at the PLR.

Action

From operational mode, run the **show route table mpls.0 label label extensive** command.

user@R0> show route table mpls.0 label 300000 extensive

```

mpls.0: 17 destinations, 17 routes (17 active, 0 holddown, 0 hidden)
300000 (1 entry, 1 announced)
TSI:
KRT in-kernel 300000 /52 -> {Swap 300016}
    *LDP      Preference: 9
              Next hop type: Router, Next hop index: 589
              Address: 0x9981610
              Next-hop reference count: 2
              Next hop: 30.10.10.2 via ge-0/0/2.0, selected
              Label operation: Swap 300016
              Load balance label: Label 300016: None;
              Session Id: 0x2
              State: <Active Int>
              Local AS: 100
              Age: 12:50      Metric: 1
              Validation State: unverified
              Task: LDP
              Announcement bits (1): 1-KRT
              AS path: I
              Prefixes bound to route: 10.255.1.4/32

```

Meaning

The label is bound to reach Router R4, which is a leaf node.

Understanding Multicast-Only Fast Reroute

Starting in Junos OS Release 14.1, Multicast-only fast reroute (MoFRR) functionality is available, in which packet loss is minimized in PIM and multipoint LDP domains. MoFRR minimizes packet loss in a network when there is a link failure. It works by enhancing multicast routing protocols like Protocol Independent Multicast (PIM) and multipoint Label Distribution Protocol (multipoint LDP). MoFRR is supported on MX Series routers with MPC line cards. As a prerequisite, the router must be set to **network-services enhanced-ip** mode, and all the line-cards in the router must be MPCs.

With MoFRR enabled, join messages are sent on primary and backup upstream paths. Data packets are received from both the primary path and the backup paths. The redundant packets are discarded based on priority (weights that are assigned to the primary and backup paths). When a failure is detected on the primary path, the repair is made by changing the interface on which packets are accepted to the secondary interface. Because the repair is local, it is fast—greatly improving convergence times in the event of a link failure on the primary path.

Currently, the most likely real-world application for MoFRR is streaming IPTV. IPTV streams are multicast as UDP streams. Therefore, any lost packets are not retransmitted, and this can result in a less-than-satisfactory user experience. MoFRR can be used to improve this situation.

When fast reroute is applied to unicast streams, an upstream router preestablishes MPLS label-switched paths (LSPs) or precomputes an IP loop-free alternate (LFA) fast reroute backup path to handle failure of a segment in the downstream path.

In multicast routing, the traffic distribution graphs are usually originated by the receiver. This is unlike unicast routing, which usually establishes the path from the source to the receiver. Protocols that are capable of establishing multicast distribution graphs are PIM (for IP), multipoint LDP (for MPLS), and RSVP-TE (for MPLS). Of these, PIM and multipoint LDP receivers initiate the distribution graph setup, and therefore these are the two multicast protocols for which MoFRR is supported.


In a multicast tree, performing a reactive repair upon detection of a network-component failure can lead to significant traffic loss due to delay in setting up the alternative path. MoFRR reduces traffic loss in a multicast distribution tree when a network component fails. With MoFRR, one of the downstream routers that supports this feature sets up an alternative path toward the source to receive a backup live stream of the same multicast traffic. When a failure is detected on the primary stream, the MoFRR router switches to the backup stream.

With MoFRR enabled, for each (S,G) entry, two of the available upstream interfaces are used to send a join message and to receive multicast traffic. The protocol attempts to select two disjoint paths if two such paths are available. If disjoint paths are not available, the protocol selects two non-disjoint paths. If two non-disjoint paths are not available, only a primary path is selected with no backup. MoFRR is supported for both IPv4 and IPv6 protocol families.

In the context of load balancing, MoFRR prioritizes the disjoint backup in favor of load balancing the available paths.

Figure 76 on page 941 shows two paths from the egress provider edge (PE) router to the ingress PE router.

Figure 76: MoFRR Sample Topology

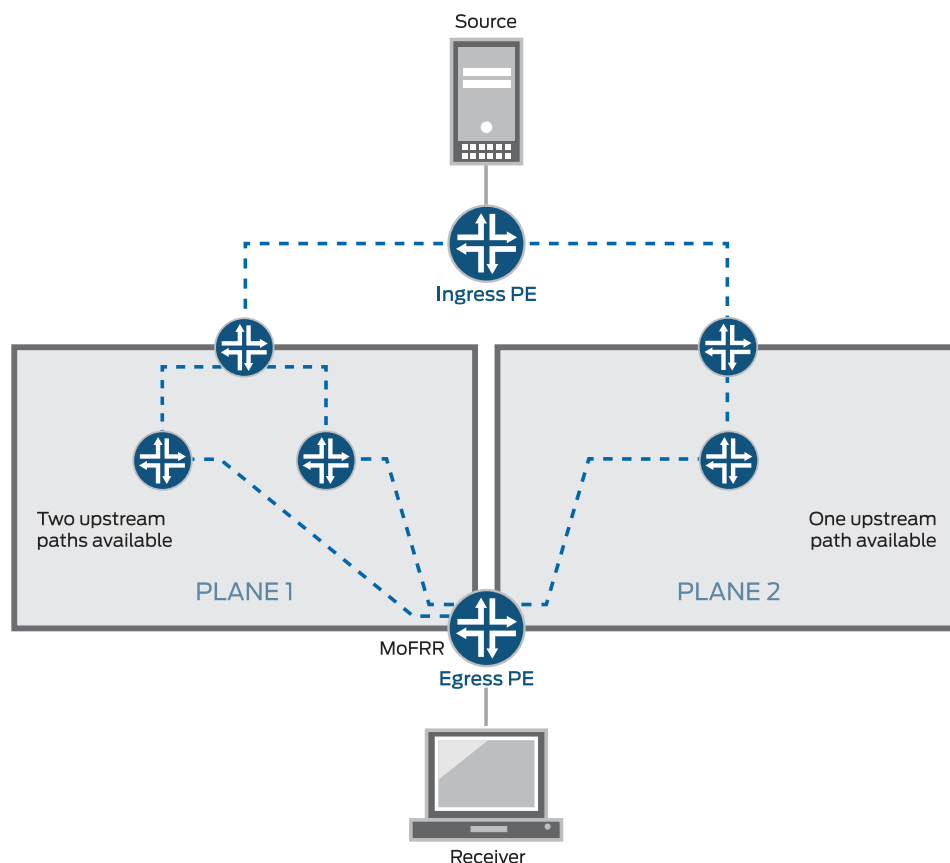

When enabled with MoFRR functionality, the egress router sets up two multicast trees, a primary path and a backup path, toward the multicast source for each (S,G). In other words, the egress router propagates the same (S,G) join messages toward two different upstream neighbors, thus creating two multicast trees.

One of the multicast trees goes through plane 1 and the other through plane 2, as shown in Figure 76 on page 941. For each (S,G), the egress PE router forwards traffic received on the primary path and drops traffic received on the backup path.

MoFRR is supported on both equal-cost multipath (ECMP) paths and non-ECMP paths. Unicast loop-free alternate (LFA) routes need to be enabled to support MoFRR on non-ECMP paths. LFA routes are enabled with the **link-protection** statement in the interior gateway protocol (IGP) configuration. When you enable link protection on an OSPF or IS-IS interface, Junos OS creates a backup LFA path to the primary next hop for all destination routes that traverse the protected interface.

Junos OS implements MoFRR in the IP network for IP MoFRR and at the MPLS label-edge router (LER) for multipoint LDP MoFRR.

Multipoint LDP MoFRR is used at the egress node of an MPLS network, where the packets are forwarded to an IP network. In the case of multipoint LDP MoFRR, the two paths toward the upstream PE router are established for receiving two streams of MPLS packets at the LER. One of the streams (the primary) is accepted, and the other one (the backup) is dropped at the LER. The backup stream is accepted if the primary path fails. A prerequisite for this feature is inband signaling support, as described in [“Understanding Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs” on page 996](#).

PIM Functionality

Junos OS supports MoFRR for shortest-path tree (SPT) joins in PIM source-specific multicast (SSM) and any-source multicast (ASM). MoFRR is supported for both SSM and ASM ranges. To enable MoFRR for (*,G) joins, the `mofrr-asm-starg` configuration statement needs to be included. For each group G, either (S,G) or (*,G) (not both) will undergo MoFRR. (S,G) always takes precedence over (*,G).

With MoFRR enabled, a PIM router propagates join messages on two upstream RPF interfaces to receive multicast traffic on both links for the same join request. Preference is given to two paths that do not converge to the same immediate upstream router. PIM installs appropriate multicast routes with upstream RPF next hops with two (primary and backup) interfaces.

When the primary path fails, the backup path is upgraded to primary, and traffic is forwarded accordingly. If there are alternate paths available, a new backup path is calculated and the appropriate multicast route is updated or installed.

MoFRR can be enabled along with PIM join load balancing (with the `join-load-balance automatic` statement). However, in such cases the distribution of join messages among the links might not be even. When a new ECMP link is added, join messages on the primary path are redistributed and load-balanced. The join messages on the backup path might still follow the same path and might not be evenly redistributed.

MoFRR is enabled with a `[edit routing-options multicast stream-protection]` configuration and is managed by a set of filter policies. When an egress PIM router receives a join message or an IGMP report, the router checks for the MoFRR configuration.

If the MoFRR configuration is not present, PIM sends a join message upstream toward one upstream neighbor (for example, plane 2 in [Figure 76 on page 941](#)).

If the MoFRR configuration is present, Junos OS checks for a policy configuration.

If a policy is not present, Junos OS checks for primary and backup paths (upstream interfaces), and takes the following actions:

- If primary and backup paths are not available—PIM sends a join message upstream toward one upstream neighbor (for example, plane 2 in [Figure 76 on page 941](#)).

- If primary and backup paths are available—PIM sends the join message upstream toward two of the available upstream neighbors. Junos OS sets up primary and secondary multicast paths to receive multicast traffic (for example, plane 1 in [Figure 76 on page 941](#)).

If a policy is present, Junos OS checks whether the policy allows MoFRR for this (S,G), and takes the following actions:

- If the policy check fails—PIM sends a join message upstream toward one upstream neighbor (for example, plane 2 in [Figure 76 on page 941](#)).
- If the policy check passes—Junos OS checks for primary and backup paths (upstream interfaces).
 - If the primary and backup paths are not available, PIM sends a join message upstream toward one upstream neighbor (for example, plane 2 in [Figure 76 on page 941](#)).
 - If the primary and backup paths are available, PIM sends the join message upstream toward two of the available upstream neighbors. Junos OS sets up primary and secondary multicast paths to receive multicast traffic (for example, plane 1 in [Figure 76 on page 941](#)).

Multipoint LDP Functionality

To avoid MPLS traffic duplication, the usual implementation of multipoint LDP selects only one upstream path. (See section 2.4.1.1. Determining One's 'upstream LSR' in RFC 6388, *Label Distribution Protocol Extensions for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*.)

For multipoint LDP MoFRR, the multipoint LDP node selects two separate upstream peers and sends two separate labels, one to each upstream peer. The same algorithm described in RFC 6388 is used to select the primary upstream path. The backup upstream path selection again uses the same algorithm but excludes the primary upstream LSR as a candidate. Two streams of MPLS traffic are sent to the egress node from the two different upstream peers. The MPLS traffic from only one of the upstream neighbors is selected as the primary path to accept the traffic, and the other path becomes the backup path. The traffic on the backup path is dropped. When the primary upstream path fails, the traffic from the backup path is then accepted. The multipoint LDP node selects the two upstream paths based on the interior gateway protocol (IGP) root node next hop.

A forwarding equivalency class (FEC) is a group of IP packets that are forwarded in the same manner, over the same path, and with the same forwarding treatment. Normally, the label that is put on a particular packet represents the FEC to which that packet is assigned. In MoFRR, two routes are placed into the mpls.0 table for each FEC—one route for the primary label and the other route for the backup label.

If there are parallel links toward the same immediate upstream node, both parallel links are considered to be the primary. At any point in time, the upstream node sends traffic on only one of the multiple parallel links.

A bud node is an LSR that is an egress LSR, but also has one or more directly connected downstream LSRs. In the case of a bud node, the traffic from the primary upstream path is forwarded to a downstream LSR. If the primary upstream path fails, the MPLS traffic from the backup upstream path is forwarded to the

downstream LSR. This means that the downstream LSR next hop is added to both MPLS routes along with the egress next hop.

MoFRR for multipoint LDP is enabled with a `[edit routing-options multicast stream-protection]` configuration and is managed by a set of filter policies.

If the multipoint LDP point-to-multipoint FEC is enabled for MoFRR, the following additional considerations are factored into upstream path selection:

- The targeted LDP sessions are skipped if there is a nontargeted LDP session. If there is a single targeted LDP session, the targeted LDP session is selected, but the corresponding point-to-multipoint FEC loses the MoFRR capability because there is no interface associated with the targeted LDP session.
- All interfaces that belong to the same upstream LSR are considered to be the primary path.
- For any root-node route updates, the upstream path is changed based on the latest next hops from the IGP. If a better path is available, multipoint LDP attempts to switch to the better path.


Packet Forwarding

For both PIM and multipoint LDP, multicast source stream selection is performed at the incoming interface. This prevents duplicate streams from being sent across the fabric and prevents multiple route lookups that result in drops, thus preserving fabric bandwidth and maximizing forwarding performance.

For PIM, each IP multicast stream contains the same destination address. Regardless of the interface on which the packets arrive, the packets have the same route. An interface list is attached to the route. Junos OS checks the interface upon which each packet arrives and forwards only those that are from the primary interface. If the interface matches a secondary interface, the packets are dropped. If no match is found, the packets are handled as exceptions in the control plane.

This process is shown in [Figure 77 on page 944](#).


Figure 77: MoFRR IP Route Lookup in the Packet Forwarding Engine

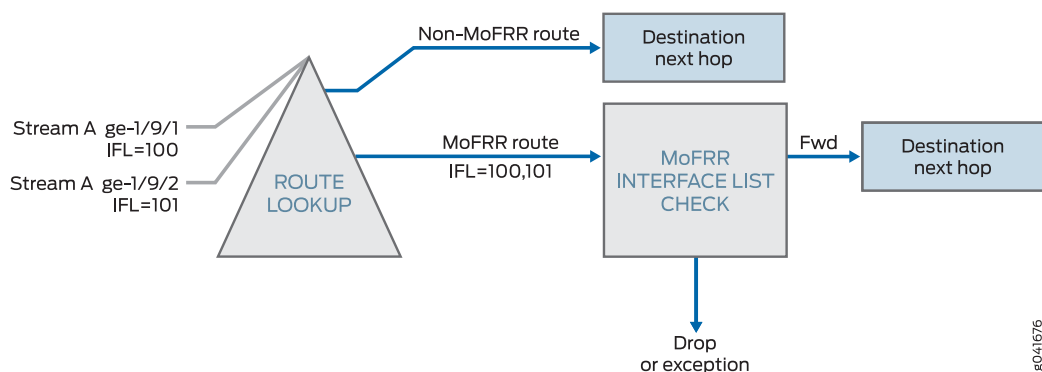

For multipoint LDP, multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.

This process is shown in [Figure 78 on page 945](#).

Figure 78: MoFRR MPLS Route Lookup in the Packet Forwarding Engine

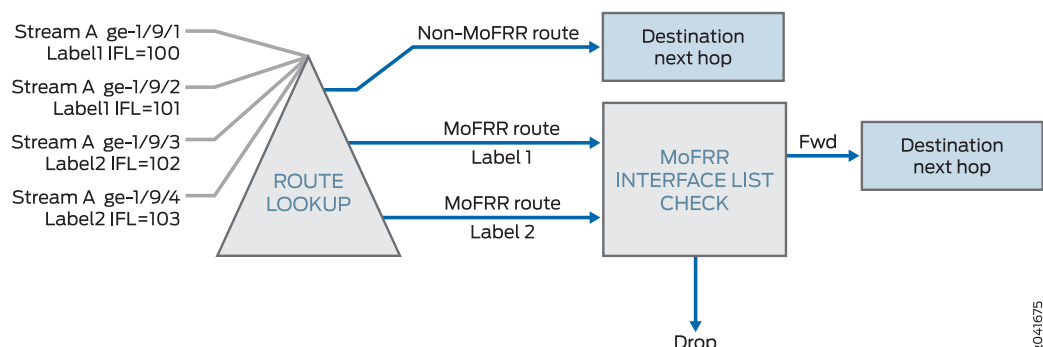

Limitations and Caveats

MoFRR has the following limitations and caveats:

- MoFRR failure detection is supported for immediate link protection of the router on which MoFRR is enabled and not on all the links (end-to-end) in the multicast traffic path.
- MoFRR supports FRR on two selected disjoint paths toward the source. Two of the selected upstream neighbors cannot be on the same interface—in other words, two upstream neighbors on a LAN segment. The same is true if the upstream interface happens to be a multicast tunnel interface.
- Detection of the maximum end-to-end disjoint upstream paths is not supported. The egress router only makes sure that there is a disjoint upstream node (the immediate previous hop). PIM and multipoint LDP do not support the equivalent of explicit route objects (EROs). Hence, disjoint upstream path detection is limited to control over the immediately previous hop node. Because of this limitation, the path to the upstream node of the previous hop selected as primary and backup might be shared.
- MoFRR does not apply to multipoint LDP traffic received on an RSVP tunnel because the RSVP tunnel is not associated with any interface.
- Some traffic loss is seen in the following scenarios:
 - A better upstream path becomes available on an egress node.
 - MoFRR is enabled or disabled on the egress node while there is an active traffic stream flowing.
- PIM join load balancing for join messages for backup paths are not supported.
- For a multicast group G, MoFRR is not allowed for both (S,G) and (*,G) join messages. (S,G) join messages have precedence over (*,G).
- MoFRR is not supported for multicast traffic streams that use two different multicast groups. Each (S,G) combination is treated as a unique multicast traffic stream.
- The bidirectional PIM range is not supported for MoFRR.
- PIM dense-mode is not supported for MoFRR.

- Mixed upstream MoFRR is not supported. This refers to PIM multipoint LDP in-band signaling, wherein one upstream path is through multipoint LDP and the second upstream path is through PIM.
- Multicast statistics for the backup traffic stream are not maintained by PIM and therefore are not available in the operational output of **show** commands.
- Multipoint LDP labels as inner labels are not supported.
- If the source is reachable through multiple ingress provider edge (PE) routers, multipoint LDP MoFRR is not supported.
- Targeted upstream sessions are not selected as the upstream node for MoFRR.
- Rate monitoring is not supported.
- Multipoint LDP link protection on the backup path is not supported because there is no support for MoFRR inner labels.

Configuring Multicast-Only Fast Reroute

You can configure multicast-only fast reroute (MoFRR) to minimize packet loss in a network when there is a link failure.

When fast reroute is applied to unicast streams, an upstream router preestablishes MPLS label-switched paths (LSPs) or precomputes an IP loop-free alternate (LFA) fast reroute backup path to handle failure of a segment in the downstream path.

In multicast routing, the traffic distribution graphs are usually originated by the receiver. This is unlike unicast routing, which usually establishes the path from the source to the receiver. Protocols that are capable of establishing multicast distribution graphs are PIM (for IP), multipoint LDP (for MPLS) and RSVP-TE (for MPLS). Of these, PIM and multipoint LDP receivers initiate the distribution graph setup, and therefore:

- On the QFX series, MoFRR is supported in PIM domains.
- On the MX Series and SRX Series, MoFRR is supported in PIM and multipoint LDP domains.

The configuration steps are the same for enabling MoFRR for PIM on all devices that support this feature, unless otherwise indicated. Configuration steps that are not applicable to multipoint LDP MoFRR are also indicated.

(For MX Series routers only) MoFRR is supported on MX Series routers with MPC line cards. As a prerequisite, all the line cards in the router must be MPCs.

To configure MoFRR on routers or switches:

1. (For MX Series and SRX Series routers only) Set the router to enhanced IP mode.

[edit chassis]

```
user@host# set network-services enhanced-ip
```

2. Enable MoFRR.

```
[edit routing-options multicast]
user@host# set stream-protection
```

3. (Optional) Configure a routing policy that filters for a restricted set of multicast streams to be affected by your MoFRR configuration.

You can apply filters that are based on source or group addresses.

For example:

```
[edit policy-options]
policy-statement mofrr-select {
  term A {
    from {
      source-address-filter 225.1.1.1/32 exact;
    }
    then {
      accept;
    }
  }
  term B {
    from {
      source-address-filter 226.0.0.0/8 orlonger;
    }
    then {
      accept;
    }
  }
  term C {
    from {
      source-address-filter 227.1.1.0/24 orlonger;
      source-address-filter 227.4.1.0/24 orlonger;
      source-address-filter 227.16.1.0/24 orlonger;
    }
    then {
      accept;
    }
  }
  term D {
```

```

    from {
        source-address-filter 227.1.1.1/32 exact
    }
    then {
        reject; #MoFRR disabled
    }
}
...
}

```

4. (Optional) If you configured a routing policy to filter the set of multicast groups to be affected by your MoFRR configuration, apply the policy for MoFRR stream protection.

```

[edit routing-options multicast stream-protection]
user@host# set policy policy-name

```

For example:

```

routing-options {
    multicast {
        stream-protection {
            policy mofrr-select
        }
    }
}

```

5. (Optional) In a PIM domain with MoFRR, allow MoFRR to be applied to any-source multicast (ASM) (*,G) joins.

This is not supported for multipoint LDP MoFRR.

```

[edit routing-options multicast stream-protection]
user@host# set mofrr-asm-starg

```

6. (Optional) In a PIM domain with MoFRR, allow only a disjoint RPF (an RPF on a separate plane) to be selected as the backup RPF path.

This is not supported for multipoint LDP MoFRR. In a multipoint LDP MoFRR domain, the same label is shared between parallel links to the same upstream neighbor. This is not the case in a PIM domain, where each link forms a neighbor. The **mofrr-disjoint-upstream-only** statement does not allow a backup RPF path to be selected if the path goes to the same upstream neighbor as that of the primary RPF path. This ensures that MoFRR is triggered only on a topology that has multiple RPF upstream neighbors.

```
[edit routing-options multicast stream-protection]
user@host# set mofrr-disjoint-upstream-only
```

7. (Optional) In a PIM domain with MoFRR, prevent sending join messages on the backup path, but retain all other MoFRR functionality.

This is not supported for multipoint LDP MoFRR.

```
[edit routing-options multicast stream-protection]
user@host# set mofrr-no-backup-join
```

8. (Optional) In a PIM domain with MoFRR, allow new primary path selection to be based on the unicast gateway selection for the unicast route to the source and to change when there is a change in the unicast selection, rather than having the backup path be promoted as primary. This ensures that the primary RPF hop is always on the best path.

When you include the **mofrr-primary-selection-by-routing** statement, the backup path is not guaranteed to get promoted to be the new primary path when the primary path goes down.

This is not supported for multipoint LDP MoFRR.

```
[edit routing-options multicast stream-protection]
user@host# set mofrr-primary-path-selection-by-routing
```

Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain

IN THIS SECTION

- [Requirements | 950](#)
- [Overview | 950](#)
- [CLI Quick Configuration | 951](#)
- [Configuration | 959](#)
- [Verification | 965](#)

This example shows how to configure multicast-only fast reroute (MoFRR) to minimize packet loss in a network when there is a link failure.

Multipoint LDP MoFRR is used at the egress node of an MPLS network, where the packets are forwarded to an IP network. In the case of multipoint LDP MoFRR, the two paths toward the upstream provider edge (PE) router are established for receiving two streams of MPLS packets at the label-edge router (LER). One of the streams (the primary) is accepted, and the other one (the backup) is dropped at the LER. The backup stream is accepted if the primary path fails.

Requirements

No special configuration beyond device initialization is required before configuring this example.

In a multipoint LDP domain, for MoFRR to work, only the egress PE router needs to have MoFRR enabled. The other routers do not need to support MoFRR.

MoFRR is supported on MX Series platforms with MPC line cards. As a prerequisite, the router must be set to **network-services enhanced-ip** mode, and all the line-cards in the platform must be MPCs.

This example requires Junos OS Release 14.1 or later on the egress PE router.

Overview

In this example, Device R3 is the egress edge router. MoFRR is enabled on this device only.

OSPF is used for connectivity, though any interior gateway protocol (IGP) or static routes can be used.

For testing purposes, routers are used to simulate the source and the receiver. Device R4 and Device R8 are configured to statically join the desired group by using the **set protocols igmp interface interface-name static group group** command. In the case when a real multicast receiver host is not available, as in this example, this static IGMP configuration is useful. On the receivers, to make them listen to the multicast group address, this example uses **set protocols sap listen group**.


MoFRR configuration includes a policy option that is not shown in this example, but is explained separately. The option is configured as follows:

```
stream-protection {
  policy policy-name;
}
```

Topology

[Figure 79 on page 951](#) shows the sample network.

Figure 79: MoFRR in a Multipoint LDP Domain

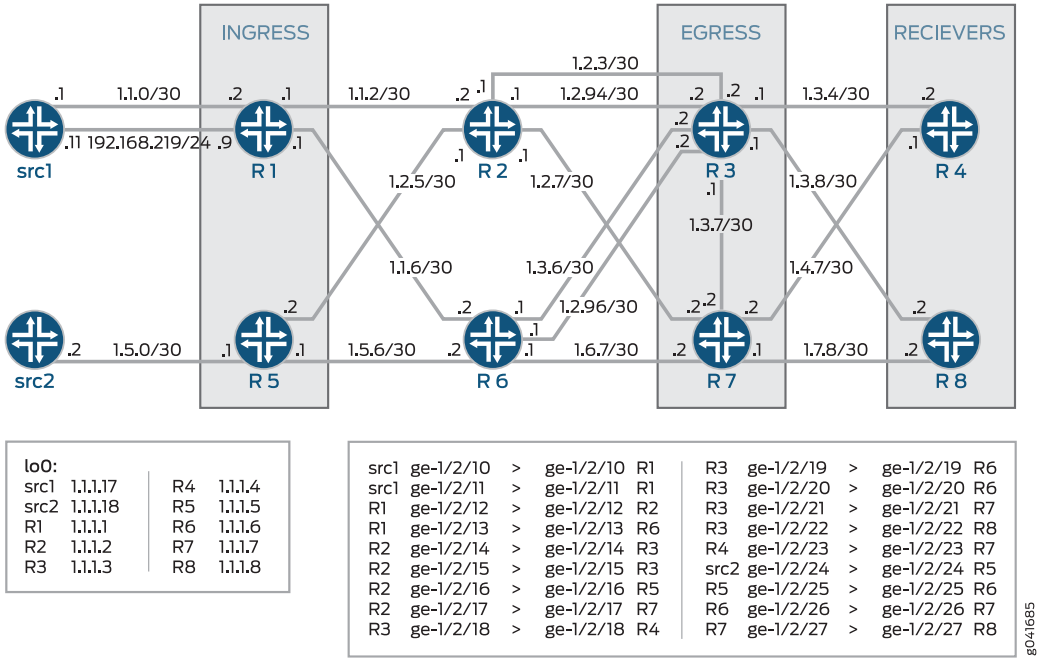

"CLI Quick Configuration" on page 951 shows the configuration for all of the devices in Figure 79 on page 951.

The section "Configuration" on page 959 describes the steps on Device R3.

CLI Quick Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level.

Device src1

```
set interfaces ge-1/2/10 unit 0 description src1-to-R1
set interfaces ge-1/2/10 unit 0 family inet address 1.1.0.1/30
set interfaces ge-1/2/11 unit 0 description src1-to-R1
set interfaces ge-1/2/11 unit 0 family inet address 192.168.219.11/24
set interfaces lo0 unit 0 family inet address 1.1.1.17/32
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
```

Device src2

```

set interfaces ge-1/2/24 unit 0 description src2-to-R5
set interfaces ge-1/2/24 unit 0 family inet address 1.5.0.2/30
set interfaces lo0 unit 0 family inet address 1.1.1.18/32
set protocols rsvp interface all
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

Device R1

```

set interfaces ge-1/2/12 unit 0 description R1-to-R2
set interfaces ge-1/2/12 unit 0 family inet address 1.1.2.1/30
set interfaces ge-1/2/12 unit 0 family mpls
set interfaces ge-1/2/13 unit 0 description R1-to-R6
set interfaces ge-1/2/13 unit 0 family inet address 1.1.6.1/30
set interfaces ge-1/2/13 unit 0 family mpls
set interfaces ge-1/2/10 unit 0 description R1-to-src1
set interfaces ge-1/2/10 unit 0 family inet address 1.1.0.2/30
set interfaces ge-1/2/11 unit 0 description R1-to-src1
set interfaces ge-1/2/11 unit 0 family inet address 192.168.219.9/30
set interfaces lo0 unit 0 family inet address 1.1.1.1/32
set protocols rsvp interface all
set protocols mpls interface all
set protocols bgp group ibgp local-address 1.1.1.1
set protocols bgp group ibgp export static-route-tobgp
set protocols bgp group ibgp peer-as 10
set protocols bgp group ibgp neighbor 1.1.1.3
set protocols bgp group ibgp neighbor 1.1.1.7
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-1/2/12.0
set protocols ldp interface ge-1/2/13.0
set protocols ldp interface lo0.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim rp static address 1.1.1.5
set protocols pim interface lo0.0
set protocols pim interface ge-1/2/10.0
set protocols pim interface ge-1/2/11.0

```



```

set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
  orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
  orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address 1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter 1.1.1.7/32 orlonger
set policy-options policy-statement mldppim-ex term A from source-address-filter 1.1.0.0/30 orlonger
set policy-options policy-statement mldppim-ex term A then accept
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept
set routing-options autonomous-system 10

```

Device R2

```

set interfaces ge-1/2/12 unit 0 description R2-to-R1
set interfaces ge-1/2/12 unit 0 family inet address 1.1.2.2/30
set interfaces ge-1/2/12 unit 0 family mpls
set interfaces ge-1/2/14 unit 0 description R2-to-R3
set interfaces ge-1/2/14 unit 0 family inet address 1.2.3.1/30
set interfaces ge-1/2/14 unit 0 family mpls
set interfaces ge-1/2/16 unit 0 description R2-to-R5
set interfaces ge-1/2/16 unit 0 family inet address 1.2.5.1/30
set interfaces ge-1/2/16 unit 0 family mpls
set interfaces ge-1/2/17 unit 0 description R2-to-R7
set interfaces ge-1/2/17 unit 0 family inet address 1.2.7.1/30
set interfaces ge-1/2/17 unit 0 family mpls
set interfaces ge-1/2/15 unit 0 description R2-to-R3
set interfaces ge-1/2/15 unit 0 family inet address 1.2.94.1/30
set interfaces ge-1/2/15 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.2/32
set interfaces lo0 unit 0 family mpls
set protocols rsvp interface all
set protocols mpls interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp p2mp

```

```

set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
  orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
  orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address 1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set routing-options autonomous-system 10

```

Device R3

```

set chassis network-services enhanced-ip
set interfaces ge-1/2/14 unit 0 description R3-to-R2
set interfaces ge-1/2/14 unit 0 family inet address 1.2.3.2/30
set interfaces ge-1/2/14 unit 0 family mpls
set interfaces ge-1/2/18 unit 0 description R3-to-R4
set interfaces ge-1/2/18 unit 0 family inet address 1.3.4.1/30
set interfaces ge-1/2/18 unit 0 family mpls
set interfaces ge-1/2/19 unit 0 description R3-to-R6
set interfaces ge-1/2/19 unit 0 family inet address 1.3.6.2/30
set interfaces ge-1/2/19 unit 0 family mpls
set interfaces ge-1/2/21 unit 0 description R3-to-R7
set interfaces ge-1/2/21 unit 0 family inet address 1.3.7.1/30
set interfaces ge-1/2/21 unit 0 family mpls
set interfaces ge-1/2/22 unit 0 description R3-to-R8
set interfaces ge-1/2/22 unit 0 family inet address 1.3.8.1/30
set interfaces ge-1/2/22 unit 0 family mpls
set interfaces ge-1/2/15 unit 0 description R3-to-R2
set interfaces ge-1/2/15 unit 0 family inet address 1.2.94.2/30
set interfaces ge-1/2/15 unit 0 family mpls
set interfaces ge-1/2/20 unit 0 description R3-to-R6
set interfaces ge-1/2/20 unit 0 family inet address 1.2.96.2/30
set interfaces ge-1/2/20 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.3/32 primary
set routing-options autonomous-system 10
set routing-options multicast stream-protection
set protocols rsvp interface all
set protocols mpls interface all
set protocols bgp group ibgp local-address 1.1.1.3
set protocols bgp group ibgp peer-as 10
set protocols bgp group ibgp neighbor 1.1.1.1

```

```

set protocols bgp group ibgp neighbor 1.1.1.5
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim interface lo0.0
set protocols pim interface ge-1/2/18.0
set protocols pim interface ge-1/2/22.0
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
  orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
  orlonger
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter 1.1.0.1/30 orlonger
set policy-options policy-statement mldppim-ex term A then accept
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept

```

Device R4

```

set interfaces ge-1/2/18 unit 0 description R4-to-R3
set interfaces ge-1/2/18 unit 0 family inet address 1.3.4.2/30
set interfaces ge-1/2/18 unit 0 family mpls
set interfaces ge-1/2/23 unit 0 description R4-to-R7
set interfaces ge-1/2/23 unit 0 family inet address 1.4.7.1/30
set interfaces lo0 unit 0 family inet address 1.1.1.4/32
set protocols igmp interface ge-1/2/18.0 version 3
set protocols igmp interface ge-1/2/18.0 static group 232.1.1.1 group-count 2
set protocols igmp interface ge-1/2/18.0 static group 232.1.1.1 source 192.168.219.11
set protocols igmp interface ge-1/2/18.0 static group 232.2.2.2 source 1.2.7.7
set protocols sap listen 232.1.1.1
set protocols sap listen 232.2.2.2
set protocols rsvp interface all
set protocols mpls interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all

```

```

set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim interface ge-1/2/23.0
set protocols pim interface ge-1/2/18.0
set protocols pim interface lo0.0
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
  orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
  orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address 1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set routing-options autonomous-system 10

```

Device R5

```

set interfaces ge-1/2/24 unit 0 description R5-to-src2
set interfaces ge-1/2/24 unit 0 family inet address 1.5.0.1/30
set interfaces ge-1/2/16 unit 0 description R5-to-R2
set interfaces ge-1/2/16 unit 0 family inet address 1.2.5.2/30
set interfaces ge-1/2/16 unit 0 family mpls
set interfaces ge-1/2/25 unit 0 description R5-to-R6
set interfaces ge-1/2/25 unit 0 family inet address 1.5.6.1/30
set interfaces ge-1/2/25 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.5/32
set protocols rsvp interface all
set protocols mpls interface all
set protocols bgp group ibgp local-address 1.1.1.5
set protocols bgp group ibgp export static-route-tobgp
set protocols bgp group ibgp peer-as 10
set protocols bgp group ibgp neighbor 1.1.1.7
set protocols bgp group ibgp neighbor 1.1.1.3
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-1/2/16.0
set protocols ldp interface ge-1/2/25.0
set protocols ldp p2mp

```

```

set protocols pim interface lo0.0
set protocols pim interface ge-1/2/24.0
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept
set routing-options autonomous-system 10

```

Device R6

```

set interfaces ge-1/2/13 unit 0 description R6-to-R1
set interfaces ge-1/2/13 unit 0 family inet address 1.1.6.2/30
set interfaces ge-1/2/13 unit 0 family mpls
set interfaces ge-1/2/19 unit 0 description R6-to-R3
set interfaces ge-1/2/19 unit 0 family inet address 1.3.6.1/30
set interfaces ge-1/2/19 unit 0 family mpls
set interfaces ge-1/2/25 unit 0 description R6-to-R5
set interfaces ge-1/2/25 unit 0 family inet address 1.5.6.2/30
set interfaces ge-1/2/25 unit 0 family mpls
set interfaces ge-1/2/26 unit 0 description R6-to-R7
set interfaces ge-1/2/26 unit 0 family inet address 1.6.7.1/30
set interfaces ge-1/2/26 unit 0 family mpls
set interfaces ge-1/2/20 unit 0 description R6-to-R3
set interfaces ge-1/2/20 unit 0 family inet address 1.2.96.1/30
set interfaces ge-1/2/20 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.6/30
set protocols rsvp interface all
set protocols mpls interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp p2mp

```

Device R7

```

set interfaces ge-1/2/17 unit 0 description R7-to-R2
set interfaces ge-1/2/17 unit 0 family inet address 1.2.7.2/30

```

```

set interfaces ge-1/2/17 unit 0 family mpls
set interfaces ge-1/2/21 unit 0 description R7-to-R3
set interfaces ge-1/2/21 unit 0 family inet address 1.3.7.2/30
set interfaces ge-1/2/21 unit 0 family mpls
set interfaces ge-1/2/23 unit 0 description R7-to-R4
set interfaces ge-1/2/23 unit 0 family inet address 1.4.7.2/30
set interfaces ge-1/2/23 unit 0 family mpls
set interfaces ge-1/2/26 unit 0 description R7-to-R6
set interfaces ge-1/2/26 unit 0 family inet address 1.6.7.2/30
set interfaces ge-1/2/26 unit 0 family mpls
set interfaces ge-1/2/27 unit 0 description R7-to-R8
set interfaces ge-1/2/27 unit 0 family inet address 1.7.8.1/30
set interfaces ge-1/2/27 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.7/32
set protocols rsvp interface all
set protocols mpls interface all
set protocols bgp group ibgp local-address 1.1.1.7
set protocols bgp group ibgp export static-route-tobgp
set protocols bgp group ibgp peer-as 10
set protocols bgp group ibgp neighbor 1.1.1.5
set protocols bgp group ibgp neighbor 1.1.1.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-1/2/17.0
set protocols ldp interface ge-1/2/21.0
set protocols ldp interface ge-1/2/26.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim interface lo0.0
set protocols pim interface ge-1/2/27.0
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
    orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
    orlonger
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter 1.1.0.1/30 orlonger
set policy-options policy-statement mldppim-ex term A then accept
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept
set routing-options autonomous-system 10

```

```
set routing-options multicast stream-protection policy mldppim-ex
```

Device R8

```
set interfaces ge-1/2/22 unit 0 description R8-to-R3
set interfaces ge-1/2/22 unit 0 family inet address 1.3.8.2/30
set interfaces ge-1/2/22 unit 0 family mpls
set interfaces ge-1/2/27 unit 0 description R8-to-R7
set interfaces ge-1/2/27 unit 0 family inet address 1.7.8.2/30
set interfaces ge-1/2/27 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.8/32
set protocols igmp interface ge-1/2/22.0 version 3
set protocols igmp interface ge-1/2/22.0 static group 232.1.1.1 group-count 2
set protocols igmp interface ge-1/2/22.0 static group 232.1.1.1 source 192.168.219.11
set protocols igmp interface ge-1/2/22.0 static group 232.2.2.2 source 1.2.7.7
set protocols sap listen 232.1.1.1
set protocols sap listen 232.2.2.2
set protocols rsvp interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim interface ge-1/2/27.0
set protocols pim interface ge-1/2/22.0
set protocols pim interface lo0.0
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
  orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
  orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address 1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set routing-options autonomous-system 10
```

Configuration

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device R3:

1. Enable enhanced IP mode.

```
[edit chassis]
user@R3# set network-services enhanced-ip
```

2. Configure the device interfaces.

```
[edit interfaces]
user@R3# set ge-1/2/14 unit 0 description R3-to-R2
user@R3# set ge-1/2/14 unit 0 family inet address 1.2.3.2/30
user@R3# set ge-1/2/14 unit 0 family mpls
user@R3# set ge-1/2/18 unit 0 description R3-to-R4
user@R3# set ge-1/2/18 unit 0 family inet address 1.3.4.1/30
user@R3# set ge-1/2/18 unit 0 family mpls
user@R3# set ge-1/2/19 unit 0 description R3-to-R6
user@R3# set ge-1/2/19 unit 0 family inet address 1.3.6.2/30
user@R3# set ge-1/2/19 unit 0 family mpls
user@R3# set ge-1/2/21 unit 0 description R3-to-R7
user@R3# set ge-1/2/21 unit 0 family inet address 1.3.7.1/30
user@R3# set ge-1/2/21 unit 0 family mpls
user@R3# set ge-1/2/22 unit 0 description R3-to-R8
user@R3# set ge-1/2/22 unit 0 family inet address 1.3.8.1/30
user@R3# set ge-1/2/22 unit 0 family mpls
user@R3# set ge-1/2/15 unit 0 description R3-to-R2
user@R3# set ge-1/2/15 unit 0 family inet address 1.2.94.2/30
user@R3# set ge-1/2/15 unit 0 family mpls
user@R3# set ge-1/2/20 unit 0 description R3-to-R6
user@R3# set ge-1/2/20 unit 0 family inet address 1.2.96.2/30
user@R3# set ge-1/2/20 unit 0 family mpls
user@R3# set lo0 unit 0 family inet address 1.1.1.3/32 primary
```

3. Configure the autonomous system (AS) number.

```
user@R3# set routing-options autonomous-system 10
```

4. Configure the routing policies.


```
[edit policy-options policy-statement mldppim-ex]
user@R3# set term B from source-address-filter 192.168.0.0/24 orlonger
user@R3# set term B from source-address-filter 192.168.219.11/32 orlonger
user@R3# set term B then accept
user@R3# set term A from source-address-filter 1.1.0.1/30 orlonger
user@R3# set term A then accept
[edit policy-options policy-statement static-route-tobgp]
user@R3# set term static from protocol static
user@R3# set term static from protocol direct
user@R3# set term static then accept
```

5. Configure PIM.

```
[edit protocols pim]
user@R3# set mldp-inband-signalling policy mldppim-ex
user@R3# set interface lo0.0
user@R3# set interface ge-1/2/18.0
user@R3# set interface ge-1/2/22.0
```

6. Configure LDP.

```
[edit protocols ldp]
user@R3# set interface all
user@R3# set p2mp
```

7. Configure an IGP or static routes.

```
[edit protocols ospf]
user@R3# set traffic-engineering
user@R3# set area 0.0.0.0 interface all
user@R3# set area 0.0.0.0 interface fxp0.0 disable
user@R3# set area 0.0.0.0 interface lo0.0 passive
```

8. Configure internal BGP.

```
[edit protocols bgp group ibgp]
user@R3# set local-address 1.1.1.3
user@R3# set peer-as 10
user@R3# set neighbor 1.1.1.1
user@R3# set neighbor 1.1.1.5
```

9. Configure MPLS and, optionally, RSVP.

```
[edit protocols mpls]
user@R3# set interface all
[edit protocols rsvp]
user@R3# set interface all
```

10. Enable MoFRR.

```
[edit routing-options multicast]
user@R3# set stream-protection
```

Results

From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R3# show chassis
network-services enhanced-ip;
```

```
user@R3# show interfaces
ge-1/2/14 {
  unit 0 {
    description R3-to-R2;
    family inet {
      address 1.2.3.2/30;
    }
    family mpls;
  }
}
ge-1/2/18 {
  unit 0 {
    description R3-to-R4;
    family inet {
      address 1.3.4.1/30;
    }
    family mpls;
  }
}
ge-1/2/19 {
  unit 0 {
```

```

        description R3-to-R6;
        family inet {
            address 1.3.6.2/30;
        }
        family mpls;
    }
}
ge-1/2/21 {
    unit 0 {
        description R3-to-R7;
        family inet {
            address 1.3.7.1/30;
        }
        family mpls;
    }
}
ge-1/2/22 {
    unit 0 {
        description R3-to-R8;
        family inet {
            address 1.3.8.1/30;
        }
        family mpls;
    }
}
ge-1/2/15 {
    unit 0 {
        description R3-to-R2;
        family inet {
            address 1.2.94.2/30;
        }
        family mpls;
    }
}
ge-1/2/20 {
    unit 0 {
        description R3-to-R6;
        family inet {
            address 1.2.96.2/30;
        }
        family mpls;
    }
}
lo0 {

```

```

unit 0 {
    family inet {
        address 192.168.15.1/32;
        address 1.1.1.3/32 {
            primary;
        }
    }
}

```

user@R3# **show protocols**

```

rsvp {
    interface all;
}
mpls {
    interface all;
}
bgp {
    group ibgp {
        local-address 1.1.1.3;
        peer-as 10;
        neighbor 1.1.1.1;
        neighbor 1.1.1.5;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
        interface lo0.0 {
            passive;
        }
    }
}
ldp {
    interface all;
    p2mp;
}
pim {
    mldp-inband-signalling {
        policy mldppim-ex;
    }
}

```

```

}
interface lo0.0;
interface ge-1/2/18.0;
interface ge-1/2/22.0;
}

```

```

user@R3# show policy-options
policy-statement mldppim-ex {
  term B {
    from {
      source-address-filter 192.168.0.0/24 orlonger;
      source-address-filter 192.168.219.11/32 orlonger;
    }
    then accept;
  }
  term A {
    from {
      source-address-filter 1.1.0.1/30 orlonger;
    }
    then accept;
  }
}
policy-statement static-route-tobgp {
  term static {
    from protocol [ static direct ];
    then accept;
  }
}

```

```

user@R3# show routing-options
autonomous-system 10;
multicast {
  stream-protection;
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Checking the LDP Point-to-Multipoint Forwarding Equivalency Classes | 966](#)
- [Examining the Label Information | 966](#)

- [Checking the Multicast Routes | 968](#)
- [Checking the LDP Point-to-Multipoint Traffic Statistics | 970](#)

Confirm that the configuration is working properly.

Checking the LDP Point-to-Multipoint Forwarding Equivalency Classes

Purpose

Make sure the MoFRR is enabled, and determine what labels are being used.

Action

```
user@R3> show ldp p2mp fec
```

```
LDP P2MP FECs:
P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src: 192.168.219.11
  MoFRR enabled
  Fec type: Egress (Active)
  Label: 301568
P2MP root-addr 1.1.1.1, grp: 232.1.1.2, src: 192.168.219.11
  MoFRR enabled
  Fec type: Egress (Active)
  Label: 301600
```

Meaning

The output shows that MoFRR is enabled, and it shows that the labels 301568 and 301600 are being used for the two multipoint LDP point-to-multipoint LSPs.

Examining the Label Information

Purpose

Make sure that the egress device has two upstream interfaces for the multicast group join.

Action

```
user@R3> show route label 301568 detail
```

```
mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
```

```

301568 (1 entry, 1 announced)
  *LDP      Preference: 9
            Next hop type: Flood
            Address: 0x2735208
            Next-hop reference count: 3
            Next hop type: Router, Next hop index: 1397
            Address: 0x2735d2c
            Next-hop reference count: 3
            Next hop: 1.3.8.2 via ge-1/2/22.0
            Label operation: Pop
            Load balance label: None;
            Next hop type: Router, Next hop index: 1395
            Address: 0x2736290
            Next-hop reference count: 3
            Next hop: 1.3.4.2 via ge-1/2/18.0
            Label operation: Pop
            Load balance label: None;
            State: <Active Int AckRequest MulticastRPF>
            Local AS:      10
            Age: 54:05      Metric: 1
            Validation State: unverified
            Task: LDP
            Announcement bits (1): 0-KRT
            AS path: I
            FECs bound to route: P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src:
192.168.219.11
Primary Upstream : 1.1.1.3:0--1.1.1.2:0
  RPF Nexthops :
    ge-1/2/15.0, 1.2.94.1, Label: 301568, weight: 0x1
    ge-1/2/14.0, 1.2.3.1, Label: 301568, weight: 0x1
Backup Upstream : 1.1.1.3:0--1.1.1.6:0
  RPF Nexthops :
    ge-1/2/20.0, 1.2.96.1, Label: 301584, weight: 0xfffe
    ge-1/2/19.0, 1.3.6.1, Label: 301584, weight: 0xfffe

```

user@R3> show route label 301600 detail

```

mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
301600 (1 entry, 1 announced)
  *LDP      Preference: 9
            Next hop type: Flood

```

```

Address: 0x27356b4
Next-hop reference count: 3
Next hop type: Router, Next hop index: 1520
Address: 0x27350f4
Next-hop reference count: 3
Next hop: 1.3.8.2 via ge-1/2/22.0
Label operation: Pop
Load balance label: None;
Next hop type: Router, Next hop index: 1481
Address: 0x273645c
Next-hop reference count: 3
Next hop: 1.3.4.2 via ge-1/2/18.0
Label operation: Pop
Load balance label: None;
State: <Active Int AckRequest MulticastRPF>
Local AS: 10
Age: 54:25 Metric: 1
Validation State: unverified
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 1.1.1.1, grp: 232.1.1.2, src:
192.168.219.11
Primary Upstream : 1.1.1.3:0--1.1.1.6:0
RPF Nexthops :
    ge-1/2/20.0, 1.2.96.1, Label: 301600, weight: 0x1
    ge-1/2/19.0, 1.3.6.1, Label: 301600, weight: 0x1
Backup Upstream : 1.1.1.3:0--1.1.1.2:0
RPF Nexthops :
    ge-1/2/15.0, 1.2.94.1, Label: 301616, weight: 0xffff
    ge-1/2/14.0, 1.2.3.1, Label: 301616, weight: 0xffff

```

Meaning

The output shows the primary upstream paths and the backup upstream paths. It also shows the RPF next hops.

Checking the Multicast Routes

Purpose

Examine the IP multicast forwarding table to make sure that there is an upstream RPF interface list, with a primary and a backup interface.

Action

user@R3> show ldp p2mp path

```
P2MP path type: Transit/Egress
  Output Session (label): 1.1.1.2:0 (301568) (Primary)
  Egress Nexthops: Interface ge-1/2/18.0
                  Interface ge-1/2/22.0
  RPF Nexthops:   Interface ge-1/2/15.0, 1.2.94.1, 301568, 1
                  Interface ge-1/2/20.0, 1.2.96.1, 301584, 65534
                  Interface ge-1/2/14.0, 1.2.3.1, 301568, 1
                  Interface ge-1/2/19.0, 1.3.6.1, 301584, 65534
  Attached FECs:  P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src: 192.168.219.11
(Active)
P2MP path type: Transit/Egress
  Output Session (label): 1.1.1.6:0 (301584) (Backup)
  Egress Nexthops: Interface ge-1/2/18.0
                  Interface ge-1/2/22.0
  RPF Nexthops:   Interface ge-1/2/15.0, 1.2.94.1, 301568, 1
                  Interface ge-1/2/20.0, 1.2.96.1, 301584, 65534
                  Interface ge-1/2/14.0, 1.2.3.1, 301568, 1
                  Interface ge-1/2/19.0, 1.3.6.1, 301584, 65534
  Attached FECs:  P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src: 192.168.219.11
(Active)
P2MP path type: Transit/Egress
  Output Session (label): 1.1.1.6:0 (301600) (Primary)
  Egress Nexthops: Interface ge-1/2/18.0
                  Interface ge-1/2/22.0
  RPF Nexthops:   Interface ge-1/2/15.0, 1.2.94.1, 301616, 65534
                  Interface ge-1/2/20.0, 1.2.96.1, 301600, 1
                  Interface ge-1/2/14.0, 1.2.3.1, 301616, 65534
                  Interface ge-1/2/19.0, 1.3.6.1, 301600, 1
  Attached FECs:  P2MP root-addr 1.1.1.1, grp: 232.1.1.2, src: 192.168.219.11
(Active)
P2MP path type: Transit/Egress
  Output Session (label): 1.1.1.2:0 (301616) (Backup)
  Egress Nexthops: Interface ge-1/2/18.0
                  Interface ge-1/2/22.0
  RPF Nexthops:   Interface ge-1/2/15.0, 1.2.94.1, 301616, 65534
                  Interface ge-1/2/20.0, 1.2.96.1, 301600, 1
                  Interface ge-1/2/14.0, 1.2.3.1, 301616, 65534
                  Interface ge-1/2/19.0, 1.3.6.1, 301600, 1
  Attached FECs:  P2MP root-addr 1.1.1.1, grp: 232.1.1.2, src: 192.168.219.11
(Active)
```

Meaning

The output shows primary and backup sessions, and RPF next hops.

Checking the LDP Point-to-Multipoint Traffic Statistics

Purpose

Make sure that both primary and backup statistics are listed.

Action

user@R3> **show ldp traffic-statistics p2mp**

P2MP FEC Statistics:			
FEC(root_addr:lsp_id/grp,src)	Nexthop	Packets	Bytes
Shared			
1.1.1.1:232.1.1.1,192.168.219.11, Label: 301568	1.3.8.2	0	0
No	1.3.4.2	0	0
No			
1.1.1.1:232.1.1.1,192.168.219.11, Label: 301584, Backup route	1.3.4.2	0	0
No	1.3.8.2	0	0
No			
1.1.1.1:232.1.1.2,192.168.219.11, Label: 301600	1.3.8.2	0	0
No	1.3.4.2	0	0
No			
1.1.1.1:232.1.1.2,192.168.219.11, Label: 301616, Backup route	1.3.4.2	0	0
No	1.3.8.2	0	0
No			

Meaning

The output shows both primary and backup routes with the labels.

Example: Configuring LDP Downstream on Demand

IN THIS SECTION

- [Requirements | 971](#)
- [Overview | 971](#)
- [Configuration | 971](#)
- [Verification | 976](#)

This example shows how to configure LDP downstream on demand. LDP is commonly configured using downstream unsolicited advertisement mode, meaning label advertisements for all routes are received from all LDP peers. As service providers integrate the access and aggregation networks into a single MPLS domain, LDP downstream on demand is needed to distribute the bindings between the access and aggregation networks and to reduce the processing requirements for the control plane.

Downstream nodes could potentially receive tens of thousands of label bindings from upstream aggregation nodes. Instead of learning and storing all label bindings for all possible loopback addresses within the entire MPLS network, the downstream aggregation node can be configured using LDP downstream on demand to only request the label bindings for the FECs corresponding to the loopback addresses of those egress nodes on which it has services configured.

Requirements

This example uses the following hardware and software components:

- M Series router
- Junos OS 12.2

Overview

You can enable LDP downstream on demand label advertisement for an LDP session by including the [downstream-on-demand](#) statement at the `[edit protocols ldp session]` hierarchy level. If you have configured downstream on demand, the Juniper Networks router advertises the downstream on demand request to its peer routers. For a downstream on demand session to be established between two routers, both have to advertise downstream on demand mode during LDP session establishment. If one router advertises downstream unsolicited mode and the other advertises downstream on demand, downstream unsolicited mode is used.

Configuration

Configuring LDP Downstream on Demand

Step-by-Step Procedure

To configure a LDP downstream on demand policy and then configure that policy and enable LDP downstream on demand on the LDP session:

1. Configure the downstream on demand policy (DOD-Request-Loopbacks in this example).

This policy causes the router to forward label request messages only to the FECs that are matched by the DOD-Request-Loopbacks policy.

```
[edit policy-options]
user@host# set prefix-list Request-Loopbacks 10.1.1.1/32
user@host# set prefix-list Request-Loopbacks 10.1.1.2/32
user@host# set prefix-list Request-Loopbacks 10.1.1.3/32
user@host# set prefix-list Request-Loopbacks 10.1.1.4/32
user@host# set policy-statement DOD-Request-Loopbacks term 1 from prefix-list Request-Loopbacks
user@host# set policy-statement DOD-Request-Loopbacks term 1 then accept
```

2. Specify the DOD-Request-Loopbacks policy using the **dod-request-policy** statement at the **[edit protocols ldp]** hierarchy level.

The policy specified with the **dod-request-policy** statement is used to identify the prefixes to send label request messages. This policy is similar to an egress policy or an import policy. When processing routes from the inet.0 routing table, the Junos OS software checks for routes matching the **DOD-Request-Loopbacks** policy (in this example). If the route matches the policy and the LDP session is negotiated with DOD advertisement mode, label request messages are sent to the corresponding downstream LDP session.

```
[edit protocols ldp]
user@host# set dod-request-policy DOD-Request-Loopbacks
```

3. Include the **downstream-on-demand** statement in the configuration for the LDP session to enable downstream on demand distribution mode.

```
[edit protocols ldp]
user@host# set session 1.1.1.1 downstream-on-demand
```

Distributing LDP Downstream on Demand Routes into Labeled BGP

Step-by-Step Procedure

To distribute LDP downstream on demand routes into labeled BGP, use a BGP export policy.

1. Configure the LDP route policy (**redistribute_ldp** in this example).

```
[edit policy-options]
user@host# set policy-statement redistribute_ldp term 1 from protocol ldp
user@host# set policy-statement redistribute_ldp term 1 from tag 1000
user@host# set policy-statement redistribute_ldp term 1 then accept
```

2. Include the LDP route policy, **redistribute_ldp** in the BGP configuration (as a part of the BGP group configuration **ebgp-to-abr** in this example).

BGP forwards the LDP routes based on the **redistribute_ldp** policy to the remote PE router

```
[edit protocols bgp]
user@host# set group ebgp-to-abr type external
user@host# set group ebgp-to-abr local-address 192.168.0.1
user@host# set group ebgp-to-abr peer-as 65319
user@host# set group ebgp-to-abr local-as 65320
user@host# set group ebgp-to-abr neighbor 192.168.6.1 family inet unicast
user@host# set group ebgp-to-abr neighbor 192.168.6.1 family inet labeled-unicast rib inet.3
user@host# set group ebgp-to-abr neighbor 192.168.6.1 export redistribute_ldp
```

Step-by-Step Procedure

To restrict label propagation to other routers configured in downstream unsolicited mode (instead of downstream on demand), configure the following policies:

1. Configure the **dod-routes** policy to accept routes from LDP.

```
user@host# set policy-options policy-statement dod-routes term 1 from protocol ldp
user@host# set policy-options policy-statement dod-routes term 1 from tag 1145307136
user@host# set policy-options policy-statement dod-routes term 1 then accept
```

2. Configure the **do-not-propagate-du-sessions** policy to not forward routes to neighbors **1.1.1.1**, **2.2.2.2**, and **3.3.3.3**.

```
user@host# set policy-options policy-statement do-not-propagate-du-sessions term 1 to neighbor 1.1.1.1
user@host# set policy-options policy-statement do-not-propagate-du-sessions term 1 to neighbor 2.2.2.2
user@host# set policy-options policy-statement do-not-propagate-du-sessions term 1 to neighbor 3.3.3.3
user@host# set policy-options policy-statement do-not-propagate-du-sessions term 1 then reject
```

3. Configure the **filter-dod-on-du-sessions** policy to prevent the routes examined by the **dod-routes** policy from being forwarded to the neighboring routers defined in the **do-not-propagate-du-sessions** policy.

```
user@host# set policy-options policy-statement filter-dod-routes-on-du-sessions term 1 from policy
dod-routes
user@host# set policy-options policy-statement filter-dod-routes-on-du-sessions term 1 to policy
do-not-propagate-du-sessions
```

4. Specify the **filter-dod-routes-on-du-session** policy as the export policy for BGP group **ebgp-to-abr**.

```
[edit protocols bgp]
user@host# set group ebgp-to-abr neighbor 192.168.6.2 export filter-dod-routes-on-du-sessions
```

Results

From configuration mode, confirm your configuration by entering the **show policy-options** and **show protocols ldp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@host#
```

```
show policy-options
```

```
prefix-list Request-Loopbacks {
  10.1.1.1/32;
  10.1.1.2/32;
  10.1.1.3/32;
  10.1.1.4/32;
}
policy-statement DOD-Request-Loopbacks {
  term 1 {
    from {
      prefix-list Request-Loopbacks;
    }
    then accept;
  }
}
policy-statement redistribute_ldp {
  term 1 {
    from {
      protocol ldp;
    }
  }
}
```

```

        tag 1000;
    }
    then accept;
}
}

```

```
user@host#
```

```
show protocols ldp
```

```

dod-request-policy DOD-Request-Loopbacks;
session 1.1.1.1 {
    downstream-on-demand;
}

```

```
user@host#
```

```
show protocols bgp
```

```

group ebgp-to-abr {
    type external;
    local-address 192.168.0.1;
    peer-as 65319;
    local-as 65320;
    neighbor 192.168.6.1 {
        family inet {
            unicast;
            labeled-unicast {
                rib {
                    inet.3;
                }
            }
        }
        export redistribute_ldp;
    }
}

```

Verification

Verifying Label Advertisement Mode

Purpose

Confirm that the configuration is working properly.

Use the **show ldp session** command to verify the status of the label advertisement mode for the LDP session.

Action

Issue the **show ldp session** and **show ldp session detail** commands:

- The following command output for the **show ldp session** command indicates that the **Adv. Mode** (label advertisement mode) is **DOD** (meaning the LDP downstream on demand session is operational):

user@host> **show ldp session**

Address	State	Connection	Hold time	Adv. Mode
1.1.1.2	Operational	Open	22	DOD

- The following command output for the **show ldp session detail** command indicates that the **Local Label Advertisement mode** is **Downstream unsolicited**, the default value (meaning downstream on demand is not configured on the local session). Conversely, the **Remote Label Advertisement mode** and the **Negotiated Label Advertisement mode** both indicate that **Downstream on demand** is configured on the remote session

user@host> **show ldp session detail**

```
Address: 1.1.1.2, State: Operational, Connection: Open, Hold time: 24
Session ID: 1.1.1.1:0--1.1.1.2:0
Next keepalive in 4 seconds
Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
Neighbor types: configured-tunneled
Keepalive interval: 10, Connect retry interval: 1
Local address: 1.1.1.1, Remote address: 1.1.1.2
Up for 17:54:52
Capabilities advertised: none
Capabilities received: none
Protection: disabled
Local - Restart: disabled, Helper mode: enabled,
Remote - Restart: disabled, Helper mode: enabled
Local maximum neighbor reconnect time: 120000 msec
Local maximum neighbor recovery time: 240000 msec
Local Label Advertisement mode: Downstream unsolicited
Remote Label Advertisement mode: Downstream on demand
Negotiated Label Advertisement mode: Downstream on demand
Nonstop routing state: Not in sync
Next-hop addresses received:
    1.1.1.2
```

Configuring LDP Native IPv6 Support

LDP is supported in an IPv6-only network, and in an IPv6 or IPv4 dual-stack network as described in *RFC 7552*. Configure the address family as **inet** for IPv4 or **inet6** for IPv6 or both, and the transport preference to be either **IPv4** or **IPv6**. The **dual-transport** statement allows Junos OS LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. The **inet-lsr-id** and **inet6-lsr-id** IDs are the two LSR IDs that have to be configured to establish an LDP session over IPv4 and IPv6 TCP transport. These two IDs should be non-zero and must be configured with different values.

Before you configure IPv6 as dual-stack, be sure you configure the routing and signaling protocols.

To configure LDP native IPv6 support, you must do the following:

1. Enable forwarding equivalence class (FEC) deaggregation in order to use different labels for different address families.

```
[edit protocols ldp]  
set deaggregate
```

2. Configure LDP address families.

```
[edit protocols ldp]  
set family inet6  
set family inet
```

3. Configure the **transport-preference** statement to select the preferred transport for the TCP connection when both IPv4 and IPv6 are enabled. By default, IPv6 is used as the TCP transport for establishing an LDP connection.

```
[edit protocols ldp]  
set transport-preference ipv4
```

4. (Optional) Configure dual-transport to allow LDP to establish a separate IPv4 session with an IPv4 neighbor, and an IPv6 session with an IPv6 neighbor. Configure **inet-lsr-id** as the LSR ID for IPv4, and **inet6-lsr-id** as the LSR ID for IPv6.

```
[edit protocols ldp dual-transport]  
set inet-lsr-id inet-lsr-id  
set inet6-lsr-id inet6-lsr-id
```

For example, configure **inet-lsr-id** as 10.255.0.1, and **inet6-lsr-id** as 1.1.1.1.

```
[edit protocols ldp dual-transport]  
set inet-lsr-id 10.255.0.1  
set inet6-lsr-id 1.1.1.1
```

Example: Configuring LDP Native IPv6 Support

IN THIS SECTION

- Requirements | 979
- Overview | 979
- Configuration | 980

This example shows how to allow the Junos OS Label Distribution Protocol (LDP) to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. This helps avoid tunneling of IPv6 over IPv4 MPLS core with IPv4-signaled MPLS label-switched paths (LSPs).

Requirements

This example uses the following hardware and software components:

- Two MX Series routers
- Junos OS Release 16.1 or later running on all devices

Before you configure IPv6 as dual-stack, be sure you configure the routing and signaling protocols.

Overview

LDP is supported in an IPv6 only network, and in an IPv6 or IPv4 dual-stack network as described in *RFC 7552*. Configure the address family as **inet** for IPv4 or **inet6** for IPv6. By default, IPv6 is used as the TCP transport for the LDP session with its peers when both IPv4 and IPv6 are enabled. The dual-transport statement allows Junos LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. The **inet-lsr-id** and **inet6-lsr-id** are the two LSR IDs that have to be configured to establish an LDP session over IPv4 and IPv6 TCP transport. These two IDs should be non-zero and must be configured with different values.

Topology

Figure 80 on page 979 shows the LDP IPv6 configured as dual-stack on Device R1 and Device R2.

Figure 80: Example LDP Native IPv6 Support



Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

R1

```
set interfaces ge-1/0/0 unit 0 family inet address 192.168.12.1/24
set interfaces ge-1/0/0 unit 0 family iso
set interfaces ge-1/0/0 unit 0 family inet6 address 2001:db8:0:12::/64 eui-64
set interfaces ge-1/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.1/32
set interfaces lo0 unit 0 family iso address 49.0001.1720.1600.1010.00
set interfaces lo0 unit 0 family inet6 address 2001:db8::1/128
set protocols isis interface ge-1/0/0.0
set protocols isis interface lo0.0
set protocols mpls interface ge-1/0/0.0
set protocols ldp deaggregate
set protocols ldp interface ge-1/0/0.0
set protocols ldp interface lo0.0
set protocols ldp family inet6
set protocols ldp family inet
```

R2

```
set interfaces ge-1/0/1 unit 0 family inet address 192.168.12.2/24
set interfaces ge-1/0/1 unit 0 family iso
set interfaces ge-1/0/1 unit 0 family inet6 address 2001:db8:0:12::/64 eui-64
set interfaces ge-1/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.2/32
set interfaces lo0 unit 0 family iso address 49.0001.1720.1600.2020.00
set interfaces lo0 unit 0 family inet6 address 2001:db8::2/128
set protocols isis interface ge-1/0/1.0
set protocols isis interface lo0.0
set protocols mpls interface ge-1/0/1.0
set protocols ldp deaggregate
set protocols ldp interface ge-1/0/1.0
set protocols ldp interface lo0.0
```

```
set protocols ldp family inet6
set protocols ldp family inet
```

Configuring R1

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see “Using the CLI Editor in Configuration Mode” in the *CLI User Guide*.

To configure Device R1:

1. Configure the interfaces.

```
[edit interfaces]
set ge-1/0/0 unit 0 family inet address 192.168.12.1/24
set ge-1/0/0 unit 0 family iso
set ge-1/0/0 unit 0 family inet6 address 2001:db8:0:12::/64 eui-64
set ge-1/0/0 unit 0 family mpls
```

2. Assign a loopback address to the device.

```
[edit interfaces lo0 unit 0]
set family inet address 10.255.0.1/32
set family iso address 49.0001.1720.1600.1010.00
set family inet6 address 2001:db8::1/128
```

3. Configure the IS-IS interfaces.

```
[edit protocols isis]
set interface ge-1/0/0.0
set interface lo0.0
```

4. Configure MPLS to use LDP interfaces on the device.

```
[edit protocols mpls]
set protocols mpls interface ge-1/0/0.0
set interface ge-1/0/0.0
set interface lo0.0
```

5. Enable forwarding equivalence class (FEC) deaggregation in order to use different labels for different address families.

```
[edit protocols ldp]
set deaggregate
```

6. Configure LDP address families.

```
[edit protocols ldp]
set family inet6
set family inet
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show interfaces
ge-1/0/0 {
  unit 0 {
    family inet {
      address 192.168.12.1/24;
    }
    family iso;
    family inet6 {
      address 2001:db8:0:12::/64 {
        eui-64;
      }
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.1/32;
    }
    family iso {
      address 49.0001.1720.1600.1010.00
```

```

    }
    family inet6 {
        address 2001:db8::1/128;
    }
}
}

```

user@R1# **show protocols**

```

mpls {
    interface ge-1/0/0.0;
}
isis {
    interface ge-1/0/0.0;
    interface lo0.0;
}
ldp {
    deaggregate;
    interface ge-1/0/0.0;
    interface lo0.0;
    family {
        inet6;
        inet;
    }
}

```

Verification

IN THIS SECTION

- [Verifying the Route Entries in the mpls.0 Table | 984](#)
- [Verifying the Route Entries in the inet.3 Table | 984](#)
- [Verifying the Route Entries in the inet6.3 Table | 985](#)
- [Verifying the LDP Database | 985](#)
- [Verifying the LDP Neighbor Information | 986](#)
- [Verifying the LDP Session Information | 987](#)

Confirm that the configuration is working properly.

Verifying the Route Entries in the mpls.0 Table

Purpose

Display mpls.0 route table information.

Action

On Device R1, from operational mode, run the **show route table mpls.0** command to display mpls.0 route table information.

```
user@R1> show route table mpls.0
```

```
mpls.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 05:19:58, metric 1
            Receive
1          *[MPLS/0] 05:19:58, metric 1
            Receive
2          *[MPLS/0] 05:19:58, metric 1
            Receive
13         *[MPLS/0] 05:19:58, metric 1
            Receive
299824     *[LDP/9] 04:28:45, metric 1
            > to fe80::21f:1200:cb6:4c8d via ge-1/0/0.0, Pop
299824(S=0) *[LDP/9] 04:28:45, metric 1
            > to fe80::21f:1200:cb6:4c8d via ge-1/0/0.0, Pop
299888     *[LDP/9] 00:56:12, metric 1
            > to 192.168.12.2 via ge-1/0/0.0, Pop
299888(S=0) *[LDP/9] 00:56:12, metric 1
            > to 192.168.12.2 via ge-1/0/0.0, Pop
```

Meaning

The output shows the mpls.0 route table information.

Verifying the Route Entries in the inet.3 Table

Purpose

Display inet.3 route table information.

Action

On Device R1, from operational mode, run the **show route table inet.3** command to display inet.3 route table information.

```
user@R1> show route table inet.3
```



```
inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.0.2/32      *[LDP/9] 00:58:38, metric 1
                  > to 192.168.12.2 via ge-1/0/0.0
```

Meaning

The output shows the inet.3 route table information.

Verifying the Route Entries in the inet6.3 Table

Purpose

Display inet6.3 route table information.

Action

On Device R1, from operational mode, run the **show route table inet6.3** command to display inet6.3 route table information.

```
user@R1> show route table inet6.3
```

```
inet6.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2001:db8::2/128   *[LDP/9] 04:31:17, metric 1
                  > to fe80::21f:1200:cb6:4c8d via ge-1/0/0.0
```

Meaning

The output shows the inet6.3 route table information.

Verifying the LDP Database

Purpose

Display the LDP database information.

Action

On Device R1, from operational mode, run the **show ldp database** command to display LDP database information.

```
user@R1> show ldp database
```

```
Input label database, 10.255.0.1:0--10.255.0.2:0
```

```
Labels received: 3
```

Label	Prefix
299840	10.255.0.1/32
3	10.255.0.2/32
299808	2001:db8::1/128
3	2001:db8::2/128

```
Output label database, 10.255.0.1:0--10.255.0.2:0
```

```
Labels advertised: 3
```

Label	Prefix
3	10.255.0.1/32
299888	10.255.0.2/32
3	2001:db8::1/128
299824	2001:db8::2/128

Meaning

The output shows the entries in the LDP database.

Verifying the LDP Neighbor Information

Purpose

Display the LDP neighbor information.

Action

On Device R1, from operational mode, run the **show ldp neighbor** and **show ldp neighbor extensive** commands to display LDP neighbor information.

```
user@R1> show ldp neighbor
```

Address	Interface	Label space ID	Hold time
fe80::21f:1200:cb6:4c8d	ge-1/0/0.0	10.255.0.2:0	12
192.168.12.2	ge-1/0/0.0	10.255.0.2:0	11

```
user@R1> show ldp neighbor extensive
```

Address	Interface	Label space ID	Hold time
192.168.12.2	ge-1/0/0.0	10.255.0.2:0	11

Transport address: 10.255.0.2, Transport preference: IPv6, Configuration sequence:

```

10
  Up for 00:04:35
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered
Address                Interface      Label space ID    Hold time
fe80::21f:1200:cb6:4c8d  ge-1/0/0.0    10.255.0.2:0      14
  Transport address: 2001:db8::2, Transport preference: IPv6, Configuration
sequence: 10
  Up for 00:04:35
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered

```

Meaning

The output shows LDP neighbor information of both IPv4 and IPv6 addresses.

Verifying the LDP Session Information

Purpose

Display the LDP session information.

Action

On Device R1, from operational mode, run the **show ldp session** and **show ldp session extensive** commands to display LDP session information.

```
user@R1> show ldp session
```

```

session
  Address                State      Connection  Hold time  Adv. Mode
2001:db8::2             Operational Open         20         DU

```

```
user@R1> show ldp session extensive
```

```

Address: 2001:db8::2, State: Operational, Connection: Open, Hold time: 29
  Session ID: 10.255.0.1:0--10.255.0.2:0
  Next keepalive in 9 seconds

```

```

Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
Neighbor types: discovered
Keepalive interval: 10, Connect retry interval: 1
Local address: 2001:db8::1, Remote address: 2001:db8::2
Up for 00:05:31
Capabilities advertised: none
Capabilities received: none
Protection: disabled
Session flags: none
Local - Restart: disabled, Helper mode: enabled
Remote - Restart: disabled, Helper mode: enabled
Local maximum neighbor reconnect time: 120000 msec
Local maximum neighbor recovery time: 240000 msec
Local Label Advertisement mode: Downstream unsolicited
Remote Label Advertisement mode: Downstream unsolicited
Negotiated Label Advertisement mode: Downstream unsolicited
MTU discovery: disabled
Nonstop routing state: Not in sync
Next-hop addresses received:
    10.255.0.2
    192.168.12.2
    2001:db8::2
    fe80::21f:1200:cb6:4c8d
Queue depth: 0

```

Message type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Initialization	1	1	0	0
Keepalive	34	34	0	0
Notification	0	0	0	0
Address	1	1	0	0
Address withdraw	0	0	0	0
Label mapping	3	3	0	0
Label request	0	0	0	0
Label withdraw	0	0	0	0
Label release	0	0	0	0
Label abort	0	0	0	0

Meaning

The output displays information for the LDP session using IPv6 as the TCP transport.

Configure transport-preference to Select the Preferred Transport

CLI Quick Configuration

You can configure the **transport-preference** statement to select the preferred transport for a TCP connection when both IPv4 and IPv6 are enabled. By default, IPv6 is used as TCP transport for establishing an LDP connection.

- (Optional) Configure the transport preference for an LDP connection.

```
[edit protocols ldp]  
set transport-preference ipv4
```

Results

From configuration mode, confirm your configuration by entering the **show protocols** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show protocols  
mpls {  
  interface ge-1/0/0.0;  
}  
isis {  
  interface ge-1/0/0.0;  
  interface lo0.0;  
}  
ldp {  
  deaggregate;  
  interface ge-1/0/0.0;  
  interface lo0.0;  
  family {  
    inet6;  
    inet;  
  }  
  transport-preference ipv4;  
}
```

Verification

IN THIS SECTION

- [Verifying the LDP Neighbor Information | 990](#)
- [Verifying the LDP Session Information | 990](#)

Confirm that the configuration is working properly.

Verifying the LDP Neighbor Information

Purpose

Display the LDP neighbor information.

Action

On Device R1, from operational mode, run the **show ldp neighbor extensive** command to display LDP neighbor information.

```
user@R1> show ldp neighbor extensive
```

```

Address                Interface      Label space ID      Hold time
192.168.12.2           ge-1/0/0.0    10.255.0.2:0        14
  Transport address: 10.255.0.2, Transport preference: IPv4, Configuration sequence:
  9
  Up for 00:00:14
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered
Address                Interface      Label space ID      Hold time
fe80::21f:1200:cb6:4c8d ge-1/0/0.0    10.255.0.2:0        14
  Transport address: 2001:db8::2, Transport preference: IPv4, Configuration
sequence: 9
  Up for 00:00:14
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered
```

Meaning

The output shows LDP neighbor information for both the IPv4 and IPv6 addresses.

Verifying the LDP Session Information

Purpose

Display the LDP session information.

Action

On Device R1, from operational mode, run the **show ldp session extensive** command to display LDP session information.

user@R1> show ldp session extensive

```

Address: 10.255.0.2, State: Operational, Connection: Open, Hold time: 24
  Session ID: 10.255.0.1:0--10.255.0.2:0
  Next keepalive in 4 seconds
  Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 2
  Neighbor types: discovered
  Keepalive interval: 10, Connect retry interval: 1
  Local address: 10.255.0.1, Remote address: 10.255.0.2
  Up for 00:05:26
  Capabilities advertised: none
  Capabilities received: none
  Protection: disabled
  Session flags: none
  Local - Restart: disabled, Helper mode: enabled
  Remote - Restart: disabled, Helper mode: enabled
  Local maximum neighbor reconnect time: 120000 msec
  Local maximum neighbor recovery time: 240000 msec
  Local Label Advertisement mode: Downstream unsolicited
  Remote Label Advertisement mode: Downstream unsolicited
  Negotiated Label Advertisement mode: Downstream unsolicited
  MTU discovery: disabled
  Nonstop routing state: Not in sync
  Next-hop addresses received:
    10.255.0.2
    192.168.12.2
    2001:db8::2
    fe80::21f:1200:cb6:4c8d
  Queue depth: 0

```

Message type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Initialization	1	1	0	0
Keepalive	33	33	1	1
Notification	0	0	0	0
Address	2	2	0	0
Address withdraw	0	0	0	0
Label mapping	6	6	0	0
Label request	0	0	0	0
Label withdraw	0	0	0	0
Label release	0	0	0	0
Label abort	0	0	0	0

Meaning

The output displays information for the LDP session using IPv6 as the TCP transport.

Configure dual-transport to Establish Separate Sessions for IPv4 with an IPv4 Neighbor and IPv6 with an IPv6 Neighbor

Step-by-Step Procedure

You can configure the **dual-transport** statement to allow LDP to establish a separate IPv4 session with an IPv4 neighbor, and an IPv6 session with an IPv6 neighbor. This requires the configuration of **inet-lsr-id** as the LSR ID for IPv4, and **inet6-lsr-id** as the LSR ID for IPv6.

- (Optional) Configure dual-transport to allow LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR.

```
[edit protocols ldp dual-transport]
set inet-lsr-id 10.255.0.1
set inet6-lsr-id 1.1.1.1
```

Results

From configuration mode, confirm your configuration by entering the **show protocols** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show protocols
mpls {
  interface ge-1/0/0.0;
}
isis {
  interface ge-1/0/0.0;
  interface lo0.0;
}
ldp {
  deaggregate;
  interface ge-1/0/0.0;
  interface lo0.0;
  family {
    inet6;
    inet;
  }
  dual-transport {
    inet-lsr-id 10.255.0.1;
    inet6-lsr-id 1.1.1.1;
  }
}
```


Verification

IN THIS SECTION

- [Verifying the LDP Neighbor Information | 993](#)
- [Verifying the LDP Session Information | 994](#)

Confirm that the configuration is working properly.

Verifying the LDP Neighbor Information

Purpose

Display the LDP neighbor information.

Action

On Device R1, from operational mode, run the **show ldp neighbor extensive** command to display LDP neighbor information.

```
user@R1> show ldp neighbor extensive
```

```

Address                Interface      Label space ID      Hold time
192.168.12.2           ge-1/0/0.0    10.255.0.2:0        11
  Transport address: 10.255.0.2, Configuration sequence: 10
  Up for 00:04:35
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered
Address                Interface      Label space ID      Hold time
fe80::21f:1200:cb6:4c8d ge-1/0/0.0    10.255.0.2:0        14
  Transport address: 2001:db8::2, Configuration sequence: 10
  Up for 00:04:35
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered

```

Meaning

The output shows LDP neighbor information for both the IPv4 and IPv6 addresses.

Verifying the LDP Session Information

Purpose

Display the LDP session information.

Action

On Device R1, from operational mode, run the **show ldp session extensive** command to display LDP neighbor information.

```
user@R1> show ldp session extensive
```

```
Address: 2001:db8::2, State: Operational, Connection: Open, Hold time: 29
  Session ID: 1.1.1.1:0--10.255.0.2:0
  Next keepalive in 9 seconds
  Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
  Neighbor types: discovered
  Keepalive interval: 10, Connect retry interval: 1
  Local address: 2001:db8::1, Remote address: 2001:db8::2
  Up for 00:05:31
  Capabilities advertised: none
  Capabilities received: none
  Protection: disabled
  Session flags: none
  Local - Restart: disabled, Helper mode: enabled
  Remote - Restart: disabled, Helper mode: enabled
  Local maximum neighbor reconnect time: 120000 msec
  Local maximum neighbor recovery time: 240000 msec
  Local Label Advertisement mode: Downstream unsolicited
  Remote Label Advertisement mode: Downstream unsolicited
  Negotiated Label Advertisement mode: Downstream unsolicited
  MTU discovery: disabled
  Nonstop routing state: Not in sync
  Next-hop addresses received:
    2001:db8::2
    fe80::21f:1200:cb6:4c8d
  Queue depth: 0
```

Message type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Initialization	1	1	0	0
Keepalive	34	34	0	0
Notification	0	0	0	0
Address	1	1	0	0
Address withdraw	0	0	0	0
Label mapping	3	3	0	0

Label request	0	0	0	0
Label withdraw	0	0	0	0
Label release	0	0	0	0
Label abort	0	0	0	0

Address: 10.255.0.2, State: Operational, Connection: Open, Hold time: 29

Session ID: 10.255.0.1:0--10.255.0.2:0

Next keepalive in 9 seconds

Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1

Neighbor types: discovered

Keepalive interval: 10, Connect retry interval: 1

Local address: 10.255.0.1, Remote address: 10.255.0.2

Up for 00:05:31

Capabilities advertised: none

Capabilities received: none

Protection: disabled

Session flags: none

Local - Restart: disabled, Helper mode: enabled

Remote - Restart: disabled, Helper mode: enabled

Local maximum neighbor reconnect time: 120000 msec

Local maximum neighbor recovery time: 240000 msec

Local Label Advertisement mode: Downstream unsolicited

Remote Label Advertisement mode: Downstream unsolicited

Negotiated Label Advertisement mode: Downstream unsolicited

MTU discovery: disabled

Nonstop routing state: Not in sync

Next-hop addresses received:

10.255.0.2

192.168.12.2

Queue depth: 0

Message type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Initialization	1	1	0	0
Keepalive	34	34	0	0
Notification	0	0	0	0
Address	1	1	0	0
Address withdraw	0	0	0	0
Label mapping	3	3	0	0
Label request	0	0	0	0
Label withdraw	0	0	0	0
Label release	0	0	0	0
Label abort	0	0	0	0

Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs

IN THIS SECTION

- [Understanding Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs | 996](#)
- [Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs | 1006](#)

Understanding Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs

IN THIS SECTION

- [How M-LDP Works | 997](#)
- [Terminology | 1002](#)
- [Ingress Join Translation and Pseudo Interface Handling | 1003](#)
- [Ingress Splicing | 1003](#)
- [Reverse Path Forwarding | 1003](#)
- [LSP Root Detection | 1004](#)
- [Egress Join Translation and Pseudo Interface Handling | 1004](#)
- [Egress Splicing | 1004](#)
- [Supported Functionality | 1004](#)
- [Unsupported Functionality | 1005](#)
- [LDP Functionality | 1005](#)
- [Egress LER Functionality | 1005](#)
- [Transit LSR Functionality | 1006](#)
- [Ingress LER Functionality | 1006](#)

The Multipoint Label Distribution Protocol (M-LDP) for point-to-multipoint label-switched paths (LSPs) with in-band signaling is useful in a deployment with an existing IP/MPLS backbone, in which you need to carry multicast traffic, for IPTV for example.

For years, the most widely used solution for transporting multicast traffic has been to use native IP multicast in the service provider core with multipoint IP tunneling to isolate customer traffic. A multicast routing protocol, usually Protocol Independent Multicast (PIM), is deployed to set up the forwarding paths. IP multicast routing is used for forwarding, using PIM signaling in the core. For this model to work, the core network has to be multicast enabled. This allows for effective and stable deployments even in inter-autonomous system (AS) scenarios.

However, in an existing IP/MPLS network, deploying PIM might not be the first choice. Some service providers are interested in replacing IP tunneling with MPLS label encapsulation. The motivations for moving to MPLS label switching is to leverage MPLS traffic engineering and protection features and to reduce the amount of control traffic overhead in the provider core.

To do this, service providers are interested in leveraging the extension of the existing deployments to allow multicast traffic to pass through. The existing multicast extensions for IP/MPLS are point-to-multipoint extensions for RSVP-TE and point-to-multipoint and multipoint-to-multipoint extensions for LDP. These deployment scenarios are discussed in RFC 6826, *Multipoint LDP In-Band Signaling for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*. This feature overview is limited to point-to-multipoint extensions for LDP.

How M-LDP Works

IN THIS SECTION


- [Label Bindings in M-LDP Signaling | 997](#)
- [M-LDP in PIM-Free MPLS Core | 998](#)
- [M-LDP in PIM-Enabled MPLS Core | 1000](#)

Label Bindings in M-LDP Signaling

The multipoint extension to LDP uses point-to-multipoint and multipoint-to-multipoint forwarding equivalence class (FEC) elements (defined in RFC 5036, *LDP Specification*) along with capability advertisements, label mapping, and signaling procedures. The FEC elements include the idea of the LSP root, which is an IP address, and an “opaque” value, which is a selector that groups together the leaf nodes sharing the same opaque value. The opaque value is transparent to the intermediate nodes, but has meaning for the LSP root. Every LDP node advertises its local incoming label binding to the upstream LDP node on the shortest path to the root IP address found in the FEC. The upstream node receiving the label bindings creates its own local label and outgoing interfaces. This label allocation process might result in packet replication, if there are multiple outgoing branches. As shown in [Figure 81 on page 998](#), an LDP node merges

the label bindings for the same opaque value if it finds downstream nodes sharing the same upstream node. This allows for effective building of point-to-multipoint LSPs and label conservation.


Figure 81: Label Bindings in M-LDP Signaling

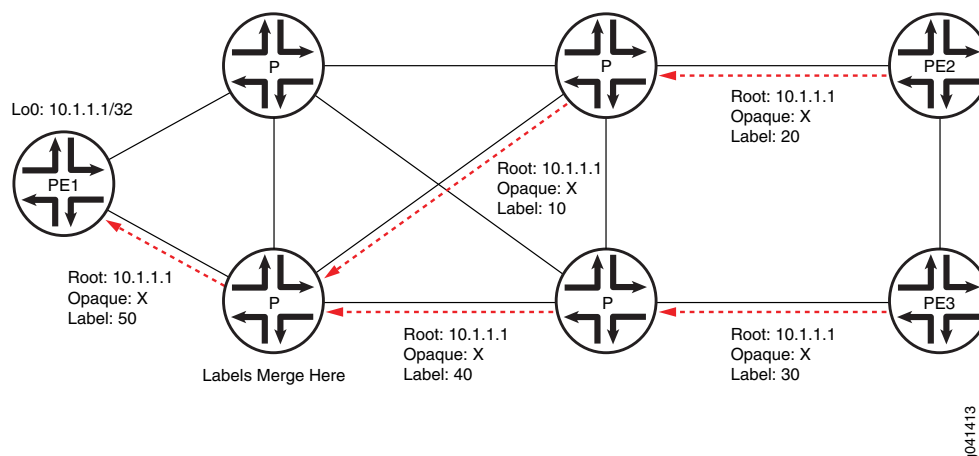

M-LDP in PIM-Free MPLS Core

Figure 82 on page 999 shows a scaled-down deployment scenario. Two separate PIM domains are interconnected by a PIM-free core site. The border routers in this core site support PIM on the border interfaces. Further, these border routers collect and distribute the routing information from the adjacent sites to the core network. The edge routers in Site C run BGP for root-node discovery. Interior gateway protocol (IGP) routes cannot be used for ingress discovery because in most cases the forwarding next hop provided by the IGP would not provide information about the ingress device toward the source. M-LDP inband signaling has a one-to-one mapping between the point-to-multipoint LSP and the (S,G) flow. With in-band signaling, PIM messages are directly translated into M-LDP FEC bindings. In contrast, out-of-band signaling is based on manual configuration. One application for M-LDP inband signaling is to carry IPTV multicast traffic in an MPLS backbone.

Figure 82: Sample M-LDP Topology in PIM-Free MPLS Core

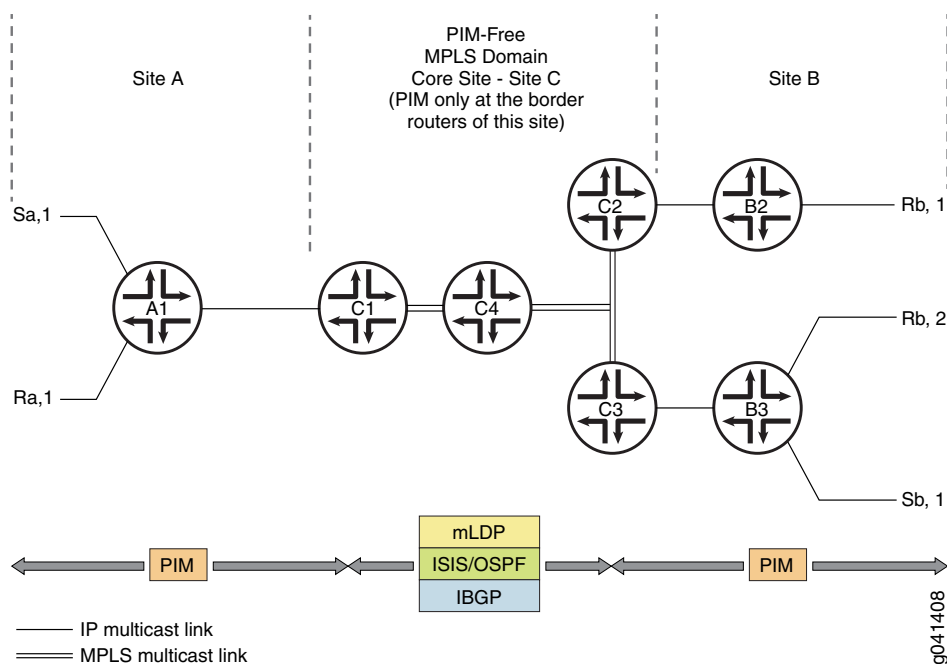

Configuration

The configuration statement **mldp-inband-signalling** on the label-edge router (LER) enables PIM to use M-LDP in-band signaling for the upstream neighbors when the LER does not detect a PIM upstream neighbor. Static configuration of the MPLS LSP root is included in the PIM configuration, using policy. This is needed when IBGP is not available in the core site or to override IBGP-based LSP root detection.

For example:

```
protocols {
  pim {
    mldp-inband-signalling {
      policy lsp-mapping-policy-example;
    }
  }
}
```

```
policy-options {
  policy-statement lsp-mapping-policy-example {
    term channel1 {
      from {
        source-address-filter ip-prefix</prefix-length>; #policy filter for channel1
      }
      then {
```

```


p2mp-lsp-root {
    # Statically configured ingress address of edge
    # used by channel1
    address ip-address;
}
accept;
}
}
}
}
}

```

M-LDP in PIM-Enabled MPLS Core

Starting in Junos OS Release 14.1, in order to migrate existing IPTV services from native IP multicast to MPLS multicast, you need to smoothly transition from PIM to M-LDP point-to-multipoint LSPs with minimal outage. [Figure 83 on page 1000](#) shows a similar M-LDP topology as [Figure 82 on page 999](#), but with a different scenario. The core is enabled with PIM, with one source streaming all the IPTV channels. The TV channels are sent as ASM streams with each channel identified by its group address. Previously, these channels were streamed on the core as IP streams and signaled using PIM.

Figure 83: Sample M-LDP Topology in PIM-Enabled MPLS Core

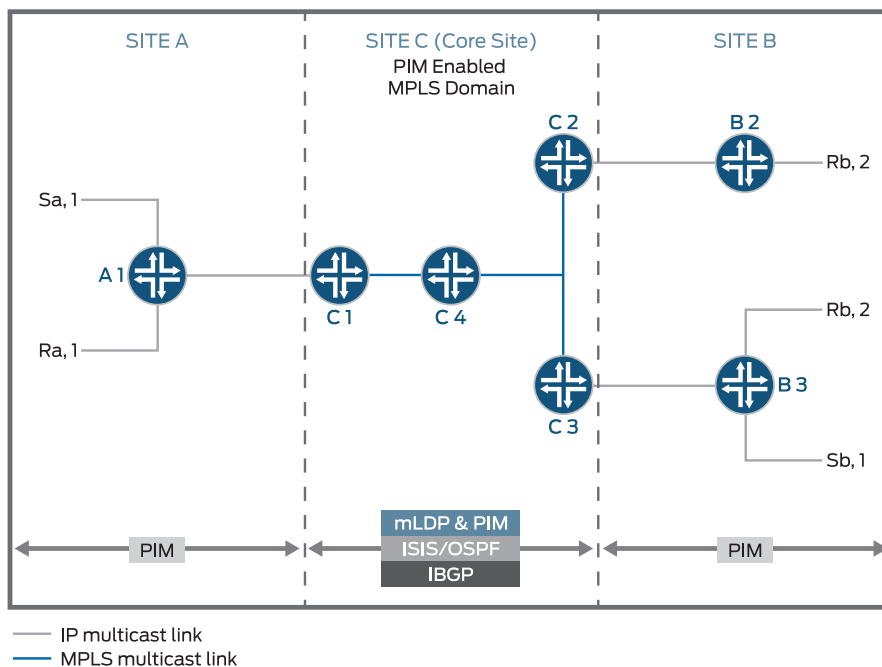

By configuring the **mldp-inband-signaling** in this scenario, M-LDP signaling is initiated only when there is no PIM neighbor towards the source. However, because there is always a PIM neighbor towards the source

unless PIM is deactivated on the upstream interfaces of the egress PE, PIM takes precedence over M-LDP and M-LDP does not take effect.

Configuration

To progressively migrate channel by channel to M-LDP MPLS core with few streams using M-LDP upstream and other streams using existing PIM upstream, include the **selected-mldp-egress** configuration statement along with group based filters in the policy filter for M-LDP inband signaling.

NOTE: The M-LDP inband signaling policy filter can include either the **source-address-filter** statement or the **route-filter** statement, or a combination of both.

For example:

```
protocols {
  pim {
    mldp-inband-signalling {
      policy lsp-mapping-policy-example;
    }
  }
}
```

```
policy-options {
  policy-statement lsp-mapping-policy-example {
    term channel1 {
      from {
        source-address-filter ip-prefix</prefix-length>; #policy filter for channel1
      }
      then {
        selected-mldp-egress;
        accept;
      }
    }
    term channel2 {
      from {
        source-address-filter ip-prefix</prefix-length>; #policy filter for channel2
        route-filter ip-prefix</prefix-length>; #policy filter on multicast group address
      }
      then {
        selected-mldp-egress;
        p2mp-lsp-root {
          # Statically configured ingress address of edge
        }
      }
    }
  }
}
```

```

        # used by channel2
        address ip-address;
    }
    accept;
}
}
term channel3 {
    from {
        route-filter ip-prefix</prefix-length>; #policy filter on multicast group address
    }
    then {
        selected-mldp-egress;
        accept;
    }
}
}
}

```

NOTE:

Some of the limitations of the above configuration are as follows:

- The **selected-mldp-egress** statement should be configured only on the LER. Configuring the **selected-mldp-egress** statement on non-egress PIM routers can cause path setup failures.
- When policy changes are made to switch traffic from PIM upstream to M-LDP upstream and vice-versa, packet loss can be expected as break-and-make mechanism is performed at the control plane.

Terminology

The following terms are important for an understanding of M-LDP in-band signaling for multicast traffic.

Point-to-point LSP—An LSP that has one ingress label-switched router (LSR) and one egress LSR.

Multipoint LSP—Either a point-to-multipoint or a multipoint-to-multipoint LSP.

Point-to-multipoint LSP—An LSP that has one ingress LSR and one or more egress LSRs.

Multipoint-to-point LSP—An LSP that has one or more ingress LSRs and one unique egress LSR.

Multipoint-to-multipoint LSP—An LSP that connects a set of nodes, such that traffic sent by any node in the LSP is delivered to all others.

Ingress LSR—An ingress LSR for a particular LSP is an LSR that can send a data packet along the LSP.

Multipoint-to-multipoint LSPs can have multiple ingress LSRs. Point-to-multipoint LSPs have only one, and that node is often referred to as the root node.

Egress LSR—An egress LSR for a particular LSP is an LSR that can remove a data packet from that LSP for further processing. Point-to-point and multipoint-to-point LSPs have only a single egress node.

Point-to-multipoint and multipoint-to-multipoint LSPs can have multiple egress nodes.

Transit LSR—An LSR that has reachability to the root of the multipoint LSP through a directly connected upstream LSR and one or more directly connected downstream LSRs.

Bud LSR—An LSR that is an egress but also has one or more directly connected downstream LSRs.

Leaf node—Either an egress or bud LSR in the context of a point-to-multipoint LSP. In the context of a multipoint-to-multipoint LSP, an LSR is both ingress and egress for the same multipoint-to-multipoint LSP and can also be a bud LSR.

Ingress Join Translation and Pseudo Interface Handling

At the ingress LER, LDP notifies PIM about the (S,G) messages that are received over the in-band signaling. PIM associates each (S,G) message with a pseudo interface. Subsequently, a shortest-path-tree (SPT) join message is initiated toward the source. PIM treats this as a new type of local receiver. When the LSP is torn down, PIM removes this local receiver based on notification from LDP.

Ingress Splicing

LDP provides PIM with a next hop to be associated with each (S,G) entry. PIM installs a PIM (S,G) multicast route with the LDP next hop and other PIM receivers. The next hop is a composite next hop of local receivers + the list of PIM downstream neighbors + a sub-level next hop for the LDP tunnel.

Reverse Path Forwarding

PIM's reverse-path-forwarding (RPF) calculation is performed at the egress node.

PIM performs M-LDP in-band signaling when all of the following conditions are true:

- There are no PIM neighbors toward the source.
- The M-LDP in-band signaling statement is configured.
- The next hop is learned through BGP, or is present in the static mapping (specified in an M-LDP in-band signaling policy).

Otherwise, if LSP root detection fails, PIM retains the (S,G) entry with an RPF state of unresolved.

PIM RPF registers this source address each time unicast routing information changes. Therefore, if the route toward the source changes, the RPF recalculation recurs. BGP protocol next hops toward the source too are monitored for changes in the LSP root. Such changes might cause traffic disruption for short durations.

LSP Root Detection

If the RPF operation detects the need for M-LDP in-band signaling upstream, the LSP root (ingress) is detected. This root is a parameter for LDP LSP signaling.

The root node is detected as follows:

1. If the existing static configuration specifies the source address, the root is taken as given in configuration.
2. A lookup is performed in the unicast routing table. If the source address is found, the protocol next hop toward the source is used as the LSP root.

Prior to Junos OS Release 16.1, M-LDP point-to-multipoint LSP is signaled from an egress to ingress using the root address of the ingress LSR. This root address is reachable through IGP only, thereby confining the M-LDP point-to-multipoint LSP to a single autonomous system. If the root address is not reachable through an IGP, but reachable through BGP, and if that BGP route is recursively resolved over an MPLS LSP, then the point-to-multipoint LSP is not signaled further from that point towards the ingress LSR root address.

There is a need for these non-segmented point-to-multipoint LSPs to be signaled across multiple autonomous systems, which can be used for the following applications:

- Inter-AS MVPN with non-segmented point-to-multipoint LSPs.
- Inter-AS M-LDP inband signaling between client networks connected by an MPLS core network.
- Inter-area MVPN or M-LDP inband signaling with non-segmented point-to-multipoint LSPs (seamless MPLS multicast).

Starting from Junos OS Release 16.1, M-LDP can signal point-to-multipoint LSPs at ASBR or transit or egress when root address is a BGP route which is further recursively resolved over an MPLS LSP.

Egress Join Translation and Pseudo Interface Handling

At the egress LER, PIM notifies LDP of the (S,G) message to be signaled along with the LSP root. PIM creates a pseudo interface as the upstream interface for this (S,G) message. When an (S,G) prune message is received, this association is removed.

Egress Splicing

At the egress node of the core network, where the (S,G) join message from the downstream site is received, this join message is translated to M-LDP in-band signaling parameters and LDP is notified. Further, LSP teardown occurs when the (S,G) entry is lost, when the LSP root changes, or when the (S,G) entry is reachable over a PIM neighbor.

Supported Functionality

For M-LDP in-band signaling, Junos OS supports the following functionality:

- Egress splicing of the PIM next hop with the LDP route
- Ingress splicing of the PIM route with the LDP next hop

- Translation of PIM join messages to LDP point-to-multipoint LSP setup parameters
- Translation of M-LDP in-band LSP parameters to set up PIM join messages
- Statically configured and BGP protocol next hop-based LSP root detection
- PIM (S,G) states in the PIM source-specific multicast (SSM) and anysource multicast (ASM) ranges
- Configuration statements on ingress and egress LERs to enable them to act as edge routers
- IGMP join messages on LERs
- Carrying IPv6 source and group address as opaque information toward an IPv4 root node
- Static configuration to map an IPv6 (S,G) to an IPv4 root address

Unsupported Functionality

For M-LDP in-band signaling, Junos OS does *not* support the following functionality:

- Full support for PIM ASM
- The **mpls lsp point-to-multipoint ping** command with an (S,G) option
- Nonstop active routing (NSR)
- Make-before-break (MBB) for PIM
- IPv6 LSP root addresses (LDP does not support IPv6 LSPs.)
- Neighbor relationship between PIM speakers that are not directly connected
- Graceful restart
- PIM dense mode
- PIM bidirectional mode

LDP Functionality

The PIM (S,G) information is carried as M-LDP opaque type-length-value (TLV) encodings. The point-to-multipoint FEC element consists of the root-node address. In the case of next-generation multicast VPNs (NGEN MVPNs), the point-to-multipoint LSP is identified by the root node address and the LSP ID.

Egress LER Functionality

On the egress LER, PIM triggers LDP with the following information to create a point-to-multipoint LSP:

- Root node
- (S,G)
- Next hop

PIM finds the root node based on the source of the multicast tree. If the root address is configured for this (S,G) entry, the configured address is used as the point-to-multipoint LSP root. Otherwise, the routing table is used to look up the route to the source. If the route to the source of the multicast tree is a

BGP-learned route, PIM retrieves the BGP next hop address and uses it as the root node for the point-to-multipoint LSP.

LDP finds the upstream node based on the root node, allocates a label, and sends the label mapping to the upstream node. LDP does not use penultimate hop popping (PHP) for in-band M-LDP signaling.

If the root addresses for the source of the multicast tree changes, PIM deletes the point-to-multipoint LSP and triggers LDP to create a new point-to-multipoint LSP. When this happens, the outgoing interface list becomes NULL, PIM triggers LDP to delete the point-to-multipoint LSP, and LDP sends a label withdraw message to the upstream node.

Transit LSR Functionality

The transit LSR advertises a label to the upstream LSR toward the source of the point-to-multipoint FEC and installs the necessary forwarding state to forward the packets. The transit LSR can be any M-LDP capable router.

Ingress LER Functionality

On the ingress LER, LDP provides the following information to PIM upon receiving the label mapping:

- (S,G)
- Flood next hop

Then PIM installs the forwarding state. If the new branches are added or deleted, the flood next hop is updated accordingly. If all branches are deleted due to a label being withdrawn, LDP sends updated information to PIM. If there are multiple links between the upstream and downstream neighbors, the point-to-multipoint LSP is not load balanced.

SEE ALSO

| [Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs](#) | 1006

Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs

IN THIS SECTION

- [Requirements](#) | 1007
- [Overview](#) | 1007
- [Configuration](#) | 1008
- [Verification](#) | 1020

This example shows how to configure multipoint LDP (M-LDP) in-band signaling for multicast traffic, as an extension to the Protocol Independent Multicast (PIM) protocol or as a substitute for PIM.

Requirements

This example can be configured using the following hardware and software components:

- Junos OS Release 13.2 or later
- MX Series 5G Universal Routing Platforms or M Series Multiservice Edge Routers for the Provider Edge (PE) Routers
- PTX Series Packet Transport Routers acting as transit label-switched routers
- T Series Core Routers for the Core Routers


NOTE: The PE routers could also be T Series Core Routers but that is not typical. Depending on your scaling requirements, the core routers could also be MX Series 5G Universal Routing Platforms or M Series Multiservice Edge Routers. The Customer Edge (CE) devices could be other routers or switches from Juniper Networks or another vendor.

No special configuration beyond device initialization is required before configuring this example.

Overview

[“CLI Quick Configuration” on page 1008](#) shows the configuration for all of the devices in [Figure 84 on page 1008](#). The section [“Step-by-Step Procedure” on page 1013](#) describes the steps on Device EgressPE.

Figure 84: M-LDP In-Band Signaling for Point-to-Multipoint LSPs Example Topology

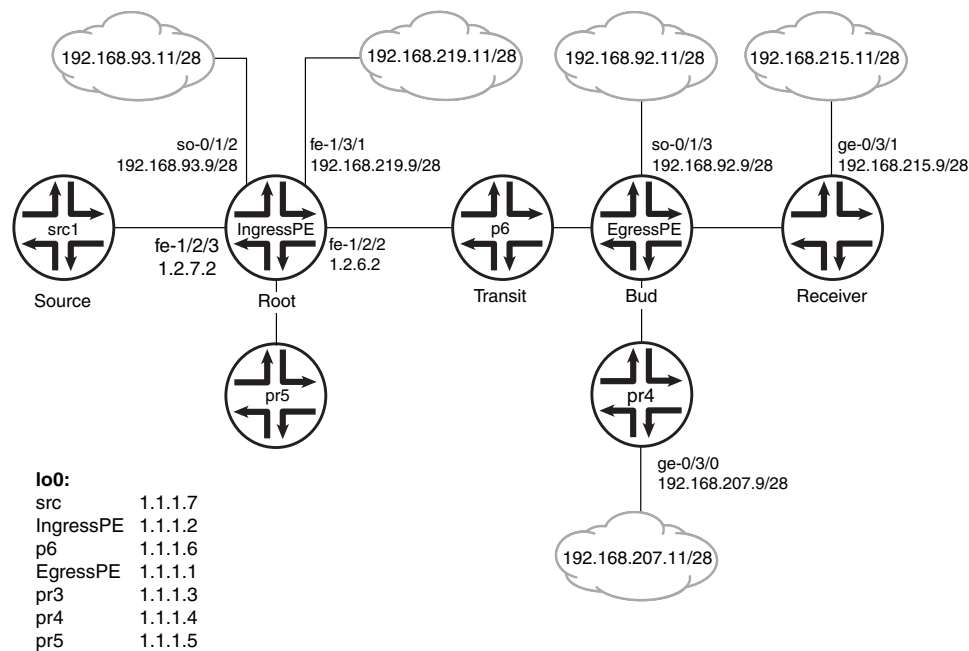

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Device src1

```
set logical-systems src1 interfaces fe-1/2/0 unit 0 family inet address 1.2.7.7/24
set logical-systems src1 interfaces lo0 unit 0 family inet address 1.1.1.7/32
set logical-systems src1 protocols ospf area 0.0.0.0 interface all
```

Device IngressPE

```
set interfaces so-0/1/2 unit 0 family inet address 192.168.93.9/28
set interfaces fe-1/2/0 unit 0 family inet address 1.2.3.2/24
set interfaces fe-1/2/0 unit 0 family mpls
```



```

set interfaces fe-1/2/1 unit 0 family inet address 1.2.5.2/24
set interfaces fe-1/2/2 unit 0 family inet address 1.2.6.2/24
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces fe-1/2/3 unit 0 family inet address 1.2.7.2/24
set interfaces fe-1/3/1 unit 0 family inet address 192.168.219.9/28
set interfaces lo0 unit 0 family inet address 1.1.1.2/32
set protocols igmp interface fe-1/2/1.0 version 3
set protocols igmp interface fe-1/2/1.0 static group 232.1.1.1 source 192.168.219.11
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 1.1.1.2
set protocols bgp group ibgp family inet any
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp neighbor 1.1.1.3
set protocols bgp group ibgp neighbor 1.1.1.4
set protocols bgp group ibgp neighbor 1.1.1.1
set protocols ospf area 0.0.0.0 interface all
set protocols ldp interface fe-1/2/0.0
set protocols ldp interface fe-1/2/2.0
set protocols ldp interface lo0.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim rp static address 1.1.1.5
set protocols pim interface fe-1/3/1.0
set protocols pim interface lo0.0
set protocols pim interface fe-1/2/0.21
set protocols pim interface fe-1/2/3.0
set protocols pim interface fe-1/2/1.0
set protocols pim interface so-0/1/2.0
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
    orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
    orlonger
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter 1.1.1.7/32 orlonger
set policy-options policy-statement mldppim-ex term A from source-address-filter 1.2.7.0/24 orlonger
set policy-options policy-statement mldppim-ex term A then accept
set routing-options autonomous-system 64510

```

Device EgressPE

```
set interfaces so-0/1/3 unit 0 point-to-point
set interfaces so-0/1/3 unit 0 family inet address 192.168.92.9/28
set interfaces fe-1/2/0 unit 0 family inet address 1.1.3.1/24
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 1.1.4.1/24
set interfaces fe-1/2/2 unit 0 family inet address 1.1.6.1/24
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces fe-1/3/0 unit 0 family inet address 192.168.209.9/28
set interfaces lo0 unit 0 family inet address 1.1.1.1/32
set routing-options autonomous-system 64510
set protocols igmp interface fe-1/3/0.0 version 3
set protocols igmp interface fe-1/3/0.0 static group 232.1.1.1 group-count 3
set protocols igmp interface fe-1/3/0.0 static group 232.1.1.1 source 192.168.219.11
set protocols igmp interface fe-1/3/0.0 static group 227.1.1.1
set protocols igmp interface so-0/1/3.0 version 3
set protocols igmp interface so-0/1/3.0 static group 232.1.1.1 group-count 2
set protocols igmp interface so-0/1/3.0 static group 232.1.1.1 source 192.168.219.11
set protocols igmp interface so-0/1/3.0 static group 232.2.2.2 source 1.2.7.7
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface fe-1/2/2.0
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 1.1.1.1
set protocols bgp group ibgp family inet any
set protocols bgp group ibgp neighbor 1.1.1.2
set protocols msdp local-address 1.1.1.1
set protocols msdp peer 1.1.1.5
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface fe-1/2/0.0
set protocols ldp interface fe-1/2/2.0
set protocols ldp interface lo0.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim rp local address 1.1.1.1
set protocols pim rp local group-ranges 227.0.0.0/8
set protocols pim rp static address 1.1.1.4
set protocols pim rp static address 1.2.7.7 group-ranges 226.0.0.0/8
set protocols pim interface lo0.0
set protocols pim interface fe-1/3/0.0
set protocols pim interface fe-1/2/0.0
set protocols pim interface fe-1/2/1.0
set protocols pim interface so-0/1/3.0
```

```

set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
  orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
  orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address 1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter 1.2.7.0/24 orlonger
set policy-options policy-statement mldppim-ex term A then accept

```

Device p6

```

set interfaces fe-1/2/0 unit 0 family inet address 1.1.6.6/24
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 1.2.6.6/24
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.6/32
set interfaces lo0 unit 0 family mpls
set protocols ospf area 0.0.0.0 interface all
set protocols ldp interface fe-1/2/0.0
set protocols ldp interface fe-1/2/1.0
set protocols ldp interface lo0.0
set protocols ldp p2mp

```

Device pr3

```

set interfaces ge-0/3/1 unit 0 family inet address 192.168.215.9/28
set interfaces fe-1/2/0 unit 0 family inet address 1.1.3.3/24
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 1.2.3.3/24
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.3/32
set protocols igmp interface ge-0/3/1.0 version 3
set protocols igmp interface ge-0/3/1.0 static group 232.1.1.2 source 192.168.219.11
set protocols igmp interface ge-0/3/1.0 static group 232.2.2.2 source 1.2.7.7
set protocols bgp group ibgp local-address 1.1.1.3
set protocols bgp group ibgp type internal
set protocols bgp group ibgp neighbor 1.1.1.2

```

```

set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fe-1/2/1.0 metric 2
set protocols ldp interface fe-1/2/0.0
set protocols ldp interface fe-1/2/1.0
set protocols ldp interface lo0.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim interface fe-0/3/1.0
set protocols pim interface lo0.0
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
  orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
  orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address 1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.0.0/24
  orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 192.168.219.11/32
  orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter 1.2.7.7/32 orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address 1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set routing-options autonomous-system 64510

```

Device pr4

```

set interfaces ge-0/3/0 unit 0 family inet address 192.168.207.9/28
set interfaces fe-1/2/0 unit 0 family inet address 1.1.4.4/24
set interfaces fe-1/2/0 unit 0 family iso
set interfaces lo0 unit 0 family inet address 1.1.1.4/32
set protocols igmp interface ge-0/3/0.0 version 3
set protocols igmp interface ge-0/3/0.0 static group 232.1.1.2 source 192.168.219.11
set protocols igmp interface ge-0/3/0.0 static group 225.1.1.1
set protocols bgp group ibgp local-address 1.1.1.4
set protocols bgp group ibgp type internal
set protocols bgp group ibgp neighbor 1.1.1.2
set protocols msdp local-address 1.1.1.4
set protocols msdp peer 1.1.1.5
set protocols ospf area 0.0.0.0 interface all
set protocols pim rp local address 1.1.1.4

```

```

set protocols pim interface ge-0/3/0.0
set protocols pim interface lo0.0
set protocols pim interface fe-1/2/0.0
set routing-options autonomous-system 64510

```

Device pr5

```

set interfaces fe-1/2/0 unit 0 family inet address 1.2.5.5/24
set interfaces lo0 unit 0 family inet address 1.1.1.5/24
set protocols igmp interface lo0.0 version 3
set protocols igmp interface lo0.0 static group 232.1.1.1 source 192.168.219.11
set protocols msdp local-address 1.1.1.5
set protocols msdp peer 1.1.1.4
set protocols msdp peer 1.1.1.1
set protocols ospf area 0.0.0.0 interface all
set protocols pim rp local address 1.1.1.5
set protocols pim interface all

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device EgressPE:

1. Configure the interfaces.

Enable MPLS on the core-facing interfaces. On the egress next hops, you do not need to enable MPLS.

```

[edit interfaces]
user@EgressPE# set fe-1/2/0 unit 0 family inet address 1.1.3.1/24
user@EgressPE# set fe-1/2/0 unit 0 family mpls
user@EgressPE# set fe-1/2/2 unit 0 family inet address 1.1.6.1/24
user@EgressPE# set fe-1/2/2 unit 0 family mpls
user@EgressPE# set so-0/1/3 unit 0 point-to-point
user@EgressPE# set so-0/1/3 unit 0 family inet address 192.168.92.9/28
user@EgressPE# set fe-1/2/1 unit 0 family inet address 1.1.4.1/24
user@EgressPE# set fe-1/3/0 unit 0 family inet address 192.168.209.9/28
user@EgressPE# set lo0 unit 0 family inet address 1.1.1.1/32

```

2. Configure IGMP on the egress interfaces.

For testing purposes, this example includes static group and source addresses.

```
[edit protocols igmp]
user@EgressPE# set interface fe-1/3/0.0 version 3
user@EgressPE# set interface fe-1/3/0.0 static group 232.1.1.1 group-count 3
user@EgressPE# set interface fe-1/3/0.0 static group 232.1.1.1 source 192.168.219.11
user@EgressPE# set interface fe-1/3/0.0 static group 227.1.1.1
user@EgressPE# set interface so-0/1/3.0 version 3
user@EgressPE# set interface so-0/1/3.0 static group 232.1.1.1 group-count 2
user@EgressPE# set interface so-0/1/3.0 static group 232.1.1.1 source 192.168.219.11
user@EgressPE# set interface so-0/1/3.0 static group 232.2.2.2 source 1.2.7.7
```

3. Configure MPLS on the core-facing interfaces.

```
[edit protocols mpls]
user@EgressPE# set interface fe-1/2/0.0
user@EgressPE# set interface fe-1/2/2.0
```

4. Configure BGP.

BGP is a policy-driven protocol, so also configure and apply any needed routing policies.

For example, you might want to export static routes into BGP.

```
[edit protocols bgp group ibgp]
user@EgressPE# set type internal
user@EgressPE# set local-address 1.1.1.1
user@EgressPE# set family inet any
user@EgressPE# set neighbor 1.1.1.2
```

5. (Optional) Configure an MSDP peer connection with Device pr5 in order to interconnect the disparate PIM domains, thus enabling redundant RPs.

```
[edit protocols msdp]
user@EgressPE# set local-address 1.1.1.1
user@EgressPE# set peer 1.1.1.5
```

6. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
```

```

user@EgressPE# set interface all
user@EgressPE# set interface fxp0.0 disable

```

7. Configure LDP on the core-facing interfaces and on the loopback interface.

```

[edit protocols ldp]
user@EgressPE# set interface fe-1/2/0.0
user@EgressPE# set interface fe-1/2/2.0
user@EgressPE# set interface lo0.0

```

8. Enable point-to-multipoint MPLS LSPs.

```

[edit protocols ldp]
user@EgressPE# set p2mp

```

9. Configure PIM on the downstream interfaces.

```

[edit protocols pim]
user@EgressPE# set interface lo0.0
user@EgressPE# set interface fe-1/3/0.0
user@EgressPE# set interface fe-1/2/1.0
user@EgressPE# set interface so-0/1/3.0

```

10. Configure the RP settings because this device serves as the PIM rendezvous point (RP).

```

[edit protocols pim]
user@EgressPE# set rp local address 1.1.1.1
user@EgressPE# set rp local group-ranges 227.0.0.0/8
user@EgressPE# set rp static address 1.1.1.4
user@EgressPE# set rp static address 1.2.7.7 group-ranges 226.0.0.0/8

```

11. Enable M-LDP in-band signaling and set the associated policy.

```

[edit protocols pim]
user@EgressPE# set mldp-inband-signalling policy mldppim-ex

```

12. Configure the routing policy that specifies the root address for the point-to-multipoint LSP and the associated source addresses.

```
[edit policy-options policy-statement mldppim-ex]
user@EgressPE# set term B from source-address-filter 192.168.0.0/24 orlonger
user@EgressPE# set term B from source-address-filter 192.168.219.11/32 orlonger
user@EgressPE# set term B then p2mp-lsp-root address 1.1.1.2
user@EgressPE# set term B then accept
user@EgressPE# set term A from source-address-filter 1.2.7.0/24 orlonger
user@EgressPE# set term A then accept
```

13. Configure the autonomous system (AS) ID.

```
[edit routing-options]
user@EgressPE# set autonomous-system 64510
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

Device EgressPE

```
user@EgressPE# show interfaces
so-0/1/3 {
  unit 0 {
    point-to-point;
    family inet {
      address 192.168.92.9/28;
    }
  }
}
fe-1/2/0 {
  unit 0 {
    family inet {
      address 1.1.3.1/24;
    }
    family mpls;
  }
}
fe-1/2/1 {
  unit 0 {
    family inet {
```



```

        address 1.1.4.1/24;
    }
}
fe-1/2/2 {
    unit 0 {
        family inet {
            address 1.1.6.1/24;
        }
        family mpls;
    }
}
fe-1/3/0 {
    unit 0 {
        family inet {
            address 192.168.209.9/28;
        }
    }
}
lo0 {
    unit 0 {
        family inet {
            address 1.1.1.1/32;
        }
    }
}

```

user@EgressPE# **show protocols**

```

igmp {
    interface fe-1/3/0.0 {
        version 3;
        static {
            group 232.1.1.1 {
                group-count 3;
                source 192.168.219.11;
            }
            group 227.1.1.1;
        }
    }
}
interface so-0/1/3.0 {
    version 3;
}

```

```

static {
    group 232.1.1.1 {
        group-count 2;
        source 192.168.219.11;
    }
    group 232.2.2.2 {
        source 1.2.7.7;
    }
}
}
mpls {
    interface fe-1/2/0.0;
    interface fe-1/2/2.0;
}
bgp {
    group ibgp {
        type internal;
        local-address 1.1.1.1;
        family inet {
            any;
        }
        neighbor 1.1.1.2;
    }
}
msdp {
    local-address 1.1.1.1;
    peer 1.1.1.5;
}
ospf {
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
ldp {
    interface fe-1/2/0.0;
    interface fe-1/2/2.0;
    interface lo0.0;
    p2mp;
}
pim {

```

```

mldp-inband-signalling {
    policy mldppim-ex;
}
rp {
    local {
        address 1.1.1.1;
        group-ranges {
            227.0.0.0/8;
        }
    }
    static {
        address 1.1.1.4;
        address 1.2.7.7 {
            group-ranges {
                226.0.0.0/8;
            }
        }
    }
}
interface lo0.0;
interface fe-1/3/0.0;
interface fe-1/2/0.0;
interface fe-1/2/1.0;
interface so-0/1/3.0;
}

```

```

user@EgressPE# show policy-options
policy-statement mldppim-ex {
    term B {
        from {
            source-address-filter 192.168.0.0/24 orlonger;
            source-address-filter 192.168.219.11/32 orlonger;
        }
        then {
            p2mp-lsp-root {
                address 1.1.1.2;
            }
            accept;
        }
    }
    term A {
        from {
            source-address-filter 1.2.7.0/24 orlonger;
        }
    }
}

```

```

    then accept;
  }
}

```

```

user@EgressPE# show routing-options
autonomous-system 64510;

```

Similarly, configure the other egress devices.

If you are done configuring the devices, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Checking the PIM Join States | 1020](#)
- [Checking the PIM Sources | 1025](#)
- [Checking the LDP Database | 1027](#)
- [Looking Up the Route Information for the MPLS Label | 1031](#)
- [Checking the LDP Traffic Statistics | 1032](#)

Confirm that the configuration is working properly.

Checking the PIM Join States

Purpose

Display information about PIM join states to verify the M-LDP in-band upstream and downstream details. On the ingress device, the **show pim join extensive** command displays **Pseudo-MLDP** for the downstream interface. On the egress, the **show pim join extensive** command displays **Pseudo-MLDP** for the upstream interface.

Action

From operational mode, enter the **show pim join extensive** command.

```
user@IngressPE> show pim join extensive
```

```

Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

```

Group: 232.1.1.1
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 1d 23:00:12
  Downstream neighbors:
    Interface: Pseudo-MLDP
    Interface: fe-1/2/1.0
      1.2.5.2 State: Join Flags: S   Timeout: Infinity
      Uptime: 1d 23:00:12 Time since last Join: 1d 23:00:12

Group: 232.1.1.2
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 1d 22:59:59
  Downstream neighbors:
    Interface: Pseudo-MLDP

Group: 232.1.1.3
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 1d 22:07:31
  Downstream neighbors:
    Interface: Pseudo-MLDP

Group: 232.2.2.2
  Source: 1.2.7.7
  Flags: sparse,spt
  Upstream interface: fe-1/2/3.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 1d 22:59:59

```

```
Downstream neighbors:
  Interface: Pseudo-MLDP
```

```
user@EgressPE> show pim join extensive
```

```
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 227.1.1.1
  Source: *
  RP: 1.1.1.1
  Flags: sparse,rptree,wildcard
  Upstream interface: Local
  Upstream neighbor: Local
  Upstream state: Local RP
  Uptime: 1d 23:14:21
  Downstream neighbors:
    Interface: fe-1/3/0.0
      192.168.209.9 State: Join Flags: SRW Timeout: Infinity
      Uptime: 1d 23:14:21 Time since last Join: 1d 20:12:35

Group: 232.1.1.1
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream protocol: MLDP
  Upstream interface: Pseudo MLDP
  Upstream neighbor: MLDP LSP root <1.1.1.2>
  Upstream state: Join to Source
  Keepalive timeout:
  Uptime: 1d 23:14:22
  Downstream neighbors:
    Interface: so-0/1/3.0
      192.168.92.9 State: Join Flags: S Timeout: Infinity
      Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35
    Downstream neighbors:
      Interface: fe-1/3/0.0
        192.168.209.9 State: Join Flags: S Timeout: Infinity
        Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35

Group: 232.1.1.2
  Source: 192.168.219.11
  Flags: sparse,spt
```

```

Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <1.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 1d 23:14:22
Downstream neighbors:
  Interface: so-0/1/3.0
    192.168.92.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35
Downstream neighbors:
  Interface: fe-1/2/1.0
    1.1.4.4 State: Join Flags: S Timeout: 198
    Uptime: 1d 22:59:59 Time since last Join: 00:00:12
Downstream neighbors:
  Interface: fe-1/3/0.0
    192.168.209.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35

```

```

Group: 232.1.1.3
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <1.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 1d 20:12:35
Downstream neighbors:
  Interface: fe-1/3/0.0
    192.168.209.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35

```

```

Group: 232.2.2.2
Source: 1.2.7.7
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <1.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 1d 20:12:35
Downstream neighbors:
  Interface: so-0/1/3.0

```

```
192.168.92.9 State: Join Flags: S   Timeout: Infinity
Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35
```

user@pr3> **show pim join extensive**

```
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard
```

```
Group: 232.1.1.2
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream protocol: MLDP
  Upstream interface: Pseudo MLDP
  Upstream neighbor: MLDP LSP root <1.1.1.2>
  Upstream state: Join to Source
  Keepalive timeout:
  Uptime: 1d 20:14:40
  Downstream neighbors:
    Interface: Pseudo-GMP
    ge-0/3/1.0
```

```
Group: 232.2.2.2
  Source: 1.2.7.7
  Flags: sparse,spt
  Upstream protocol: MLDP
  Upstream interface: Pseudo MLDP
  Upstream neighbor: MLDP LSP root <1.1.1.2>
  Upstream state: Join to Source
  Keepalive timeout:
  Uptime: 1d 20:14:40
  Downstream neighbors:
    Interface: Pseudo-GMP
    ge-0/3/1.0
```

user@pr4> **show pim join extensive**

```
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard
```

```
Group: 225.1.1.1
  Source: *
```



```

RP: 1.1.1.4
Flags: sparse,rptree,wildcard
Upstream interface: Local
Upstream neighbor: Local
Upstream state: Local RP
Uptime: 1d 23:13:43
Downstream neighbors:
  Interface: ge-0/3/0.0
    192.168.207.9 State: Join Flags: SRW Timeout: Infinity
    Uptime: 1d 23:13:43 Time since last Join: 1d 23:13:43

Group: 232.1.1.2
Source: 192.168.219.11
Flags: sparse,spt
Upstream interface: fe-1/2/0.0
Upstream neighbor: 1.1.4.1
Upstream state: Local RP, Join to Source
Keepalive timeout: 0
Uptime: 1d 23:13:43
Downstream neighbors:
  Interface: ge-0/3/0.0
    192.168.207.9 State: Join Flags: S Timeout: Infinity
    Uptime: 1d 23:13:43 Time since last Join: 1d 23:13:43

```

user@pr5> **show pim join extensive**

```

ge-0/3/1.0

Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

Checking the PIM Sources

Purpose

Verify that the PIM sources have the expected M-LDP in-band upstream and downstream details.

Action

From operational mode, enter the **show pim source** command.

user@IngressPE> **show pim source**

```
Instance: PIM.master Family: INET

Source 1.1.1.1
  Prefix 1.1.1.1/32
  Upstream interface Local
  Upstream neighbor Local

Source 1.2.7.7
  Prefix 1.2.7.0/24
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor MLDP LSP root <1.1.1.2>

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor MLDP LSP root <1.1.1.2>
```

user@EgressPE> **show pim source**

```
Instance: PIM.master Family: INET

Source 1.2.7.7
  Prefix 1.2.7.0/24
  Upstream interface fe-1/2/3.0
  Upstream neighbor 1.2.7.2

Source 1.2.7.7
  Prefix 1.2.7.0/24
  Upstream interface fe-1/2/3.0
  Upstream neighbor Direct

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream interface fe-1/3/1.0
  Upstream neighbor 192.168.219.9
```

```

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream interface fe-1/3/1.0
  Upstream neighbor Direct

```

user@pr3> **show pim source**

```

Instance: PIM.master Family: INET

Source 1.2.7.7
  Prefix 1.2.7.0/24
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor MLDP LSP root <1.1.1.2>

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor MLDP LSP root <1.1.1.2>

```

user@pr4> **show pim source**

```

Instance: PIM.master Family: INET

Source 1.1.1.4
  Prefix 1.1.1.4/32
  Upstream interface Local
  Upstream neighbor Local

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream interface fe-1/2/0.0
  Upstream neighbor 1.1.4.1

```

Checking the LDP Database

Purpose

Make sure that the `show ldp database` command displays the expected root-to-(S,G) bindings.

Action

user@IngressPE> `show ldp database`

Input label database, 10.255.2.227:0--1.1.1.3:0

Label	Prefix
300096	1.1.1.2/32
3	1.1.1.3/32
299856	1.1.1.6/32
299776	10.255.2.227/32

Output label database, 10.255.2.227:0--1.1.1.3:0

Label	Prefix
300144	1.1.1.2/32
299776	1.1.1.3/32
299856	1.1.1.6/32
3	10.255.2.227/32

Input label database, 10.255.2.227:0--1.1.1.6:0

Label	Prefix
299936	1.1.1.2/32
299792	1.1.1.3/32
3	1.1.1.6/32
299776	10.255.2.227/32

Output label database, 10.255.2.227:0--1.1.1.6:0

Label	Prefix
300144	1.1.1.2/32
299776	1.1.1.3/32
299856	1.1.1.6/32
3	10.255.2.227/32
300432	P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
300288	P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
300160	P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11
300480	P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11

user@EgressPE> `show ldp database`

Input label database, 1.1.1.2:0--1.1.1.3:0

Label	Prefix
-------	--------

```

300096      1.1.1.2/32
      3      1.1.1.3/32
299856      1.1.1.6/32
299776      10.255.2.227/32
300144      P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
300128      P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11

```

Output label database, 1.1.1.2:0--1.1.1.3:0

```

Label      Prefix
      3      1.1.1.2/32
299776      1.1.1.3/32
299808      1.1.1.6/32
299792      10.255.2.227/32

```

Input label database, 1.1.1.2:0--1.1.1.6:0

```

Label      Prefix
299936      1.1.1.2/32
299792      1.1.1.3/32
      3      1.1.1.6/32
299776      10.255.2.227/32
300128      P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
299984      P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
299952      P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11
300176      P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11
300192      P2MP root-addr 1.1.1.2, grp: ff3e::1:2, src: abcd::1:2:7:7

```

Output label database, 1.1.1.2:0--1.1.1.6:0

```

Label      Prefix
      3      1.1.1.2/32
299776      1.1.1.3/32
299808      1.1.1.6/32
299792      10.255.2.227/32

```

logical-system: default

Input label database, 10.255.2.227:0--1.1.1.3:0

```

Label      Prefix
300096      1.1.1.2/32
      3      1.1.1.3/32
299856      1.1.1.6/32
299776      10.255.2.227/32

```

Output label database, 10.255.2.227:0--1.1.1.3:0

Label	Prefix
300144	1.1.1.2/32
299776	1.1.1.3/32
299856	1.1.1.6/32
3	10.255.2.227/32

Input label database, 10.255.2.227:0--1.1.1.6:0

Label	Prefix
299936	1.1.1.2/32
299792	1.1.1.3/32
3	1.1.1.6/32
299776	10.255.2.227/32

Output label database, 10.255.2.227:0--1.1.1.6:0

Label	Prefix
300144	1.1.1.2/32
299776	1.1.1.3/32
299856	1.1.1.6/32
3	10.255.2.227/32
300432	P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
300288	P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
300160	P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11
300480	P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11
300496	P2MP root-addr 1.1.1.2, grp: ff3e::1:2, src: abcd::1:2:7:7

user@p6> show ldp database

Input label database, 1.1.1.6:0--1.1.1.2:0

Label	Prefix
3	1.1.1.2/32
299776	1.1.1.3/32
299808	1.1.1.6/32

Output label database, 1.1.1.6:0--1.1.1.2:0

Label	Prefix
299776	1.1.1.2/32
299792	1.1.1.3/32
3	1.1.1.6/32

user@pr3> show ldp database

Input label database, 1.1.1.3:0--1.1.1.2:0

Label	Prefix
3	1.1.1.2/32
299776	1.1.1.3/32
299808	1.1.1.6/32
299792	10.255.2.227/32

Output label database, 1.1.1.3:0--1.1.1.2:0

Label	Prefix
300096	1.1.1.2/32
3	1.1.1.3/32
299856	1.1.1.6/32
299776	10.255.2.227/32
300144	P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
300128	P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11

Input label database, 1.1.1.3:0--10.255.2.227:0

Label	Prefix
300144	1.1.1.2/32
299776	1.1.1.3/32
299856	1.1.1.6/32
3	10.255.2.227/32

Output label database, 1.1.1.3:0--10.255.2.227:0

Label	Prefix
300096	1.1.1.2/32
3	1.1.1.3/32
299856	1.1.1.6/32
299776	10.255.2.227/32

Looking Up the Route Information for the MPLS Label

Purpose

Display the point-to-multipoint FEC information.

Action

user@EgressPE> **show route label 299808 detail**

```
mpls.0: 14 destinations, 14 routes (14 active, 0 holddown, 0 hidden)
299808 (1 entry, 1 announced)
```

```

*LDP      Preference: 9
          Next hop type: Flood
          Address: 0x931922c
          Next-hop reference count: 3
          Next hop type: Router, Next hop index: 1109
          Address: 0x9318b0c
          Next-hop reference count: 2
          Next hop: via so-0/1/3.0
          Label operation: Pop
          Next hop type: Router, Next hop index: 1110
          Address: 0x93191e0
          Next-hop reference count: 2
          Next hop: 192.168.209.11 via fe-1/3/0.0
          Label operation: Pop
          State: **Active Int AckRequest>
          Local AS:      10
          Age: 13:08:15   Metric: 1
          Validation State: unverified
          Task: LDP
          Announcement bits (1): 0-KRT
          AS path: I
FECs bound to route: P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src:
192.168.219.11

```

Checking the LDP Traffic Statistics

Purpose

Monitor the data traffic statistics for the point-to-multipoint LSP.

Action

```
user@EgressPE> show ldp traffic-statistics p2mp
```

P2MP FEC Statistics:

FEC(root_addr:lsp_id/grp,src)	Nexthop	Packets	Bytes
Shared			
1.1.1.2:232.2.2.2,1.2.7.7	so-0/1/3.0	0	0
No			
1.1.1.2:232.1.1.1,192.168.219.11	so-0/1/3.0	0	0
No			
	fe-1/3/0.0	0	0
No			

1.1.1.2:232.1.1.2,192.168.219.11	so-0/1/3.0	0	0
No			
	fe-1/3/0.0	0	0
No			
	lt-1/2/0.14	0	0
No			
1.1.1.2:232.1.1.3,192.168.219.11	fe-1/3/0.0	0	0
No			
1.1.1.2:ff3e::1:2,abcd::1:2:7:7	fe-1/3/0.0	0	0
No			

SEE ALSO

Understanding Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs | 996

LDP Mapping Server for Interoperability of Segment Routing with LDP Overview

IN THIS SECTION

- Interoperability of Segment Routing with LDP Using OSPF | 1033
- Interoperability of Segment Routing with LDP Using ISIS | 1035

In an LDP network with gradual deployment of segment routing, there can be islands of devices that support either only LDP, or only segment routing. For the devices to interwork, the LDP mapping server feature is required to be configured on any device in the segment routing network.


The LDP mapping server feature is implemented using either OSPF or ISIS.

Interoperability of Segment Routing with LDP Using OSPF

To implement interoperability of segment routing with LDP using OSPF, an extended prefix link-state advertisement (LSA) with Range type, length, and value (TLV) for all the LDP prefixes is generated, and mapping routes corresponding to the prefix is installed in the inet.3 and mpls.0 routing tables.

Figure 85 on page 1034 is a simple LDP network topology used to illustrate the interoperability of segment routing devices with LDP devices using OSPF. The topology has six devices (Devices R1, R2, R3, R4, R5, and R6) with LDP-to-segment routing migration.

Figure 85: Sample LDP Topology with Interoperability of Segment Routing with LDP Using OSPF

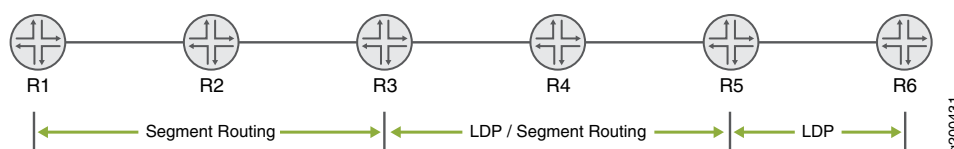

In the above topology, Devices R1, R2, and R3 are capable of only segment routing, Devices R5 and R6 are capable of only LDP, and Device R4 supports both LDP and segment routing. Here, Device R1 cannot interwork with Device R6 because of interoperability issues.

To enable interoperability between the LDP-capable devices and segment routing devices, any one interface of the device in the segment routing network segment is configured as the LDP mapping server. Currently, the mapping server configures prefixes under the **[edit routing-options source-packet-routing]** hierarchy level. With this feature, the LDP mapping server configuration if applied under the **[edit protocols ospf]** hierarchy level, where a new extended prefix LSA with range TLV for all LDP prefixes is advertised by OSPF. The device capable of segment routing analyze the extended prefix range TLV and mapping routes corresponding to the prefix are installed in the inet.3 and mpls.0 routing tables.

For example, in [Figure 85 on page 1034](#), if Device R2 (in the segment routing network) is the LDP mapping server, the following configuration is included:

```
[edit routing-options]
user@R2# set source-packet-routing mapping-server-entry mapping-server-nameprefix-segment-range prefix-range
start-prefix loopback-address
user@R2# set source-packet-routing mapping-server-entry mp1 prefix-segment-range rg1 start-index 5
user@R2# set source-packet-routing mapping-server-entry mp1 prefix-segment-range rg1 size 1
```

NOTE: The IP address used as the **start-prefix** is the loopback address of the device in the LDP network (Device R5, in this example).

```
[edit protocols]
user@R2# set ospf source-packet-routing mapping-server mapping-server-name
```

When the LDP mapping server configuration is committed on Device R2, the extended prefix range TLV is flooded across the OSPF area. The devices capable of segment routing (Devices R1, R2, and R3) install OSPF segment routing routes for the specified loopback address with a segment ID (SID) index. The SID index is also updated in the mpls.0 routing table by the segment routing devices.

Starting in Junos OS Release 19.1R1, segment routing-LDP border router can stitch segment routing traffic to LDP next-hop and vice versa.

Unsupported Features and Functionality for Interoperability of Segment Routing with LDP using OSPF


- Prefix conflict is only detected at the source configuration. When there is a prefix range conflict, the prefix SID from the lower router ID prevails. In such cases, a system log error message—`RPD_OSPF_PFX_SID_RANGE_CONFLICT`—is generated.
- IPv6 prefixes are not supported.
- Flooding of the OSPF Extended Prefix Opaque LSA generated by the segment routing mapping server for autonomous systems (ASs) is not supported.
- Inter-area LDP mapping server functionality is not supported.
- ABR functionality of Extended Prefix Opaque LSA is not supported.
- ASBR functionality of Extended Prefix Opaque LSA is not supported.
- Segment routing mapping server Preference TLV is not supported.

Interoperability of Segment Routing with LDP Using ISIS

To implement interoperability of segment routing with LDP using ISIS, a server-client configuration is required under protocols ISIS and LDP, respectively, and routes from the `inet.3` or `inet.0` routing tables are used for stitching of segment routing LSP with an LDP LSP and vice-versa.

Figure 86 on page 1035 is a simple LDP network topology used to illustrate the interoperability of segment routing devices with LDP devices using an LDP mapping server-client feature. The topology has four provider edge (PE) devices (Devices PE1, PE2, PE3, and PE4) and four provider (P) devices (Devices P5, P6, P7, and P8).

Figure 86: Sample LDP Topology with Interoperability of Segment Routing with LDP Using ISIS

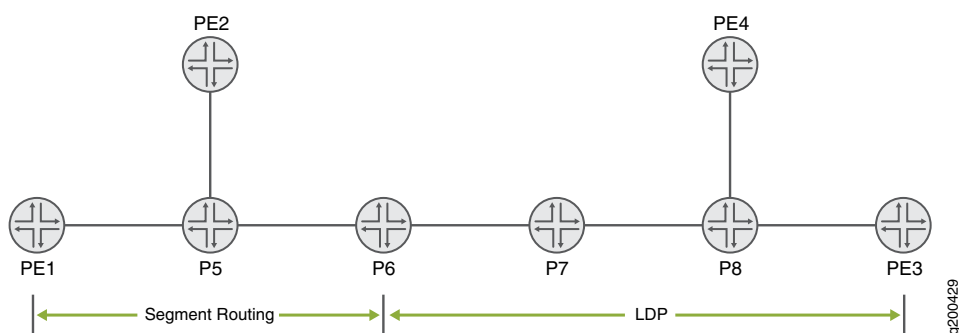

Devices PE3, PE4, P6, P7 and P8 are the LDP capable devices. Devices PE1, PE2, P5 and P6 are capable of segment routing with segment routing global block (SRGB) value of 100 and 200, and node segment IDs (SIDs) value of 101, 102, 105 and 106, respectively.

For a service flow to be tunneled to-and-from Device PE3 and Device PE1 using a continuous MPLS tunnel, the islands of devices supporting segment routing and LDP must interoperate.

LDP Mapping Client Functionality (LDP to Segment Routing)

The LDP client functionality is the LDP-to-segment routing mapping, that is the right-to-left traffic flow in [Figure 86 on page 1035](#). On Device P6, an LDP egress policy is configured to advertise all node SIDs and prefix SIDs from the segment routing network on the left. As a result, on Device P6, LDP advertises Devices PE1, PE2 and P5 as the egress FEC label bindings to Device P7.

Device PE3 has learned a service route with Device PE1 as the protocol next hop. Device PE3 has an LDP label binding from the P8 next hop for the PE1 FEC. As a result, Device PE3 sends its service packet to Device P8 as per classic LDP behavior. Device P8 has an LDP label binding from its P7 next hop for the PE1 FEC, therefore Device P8 forwards to Device P7 as per classic LDP behavior.

Device P7 has an LDP label binding from its P6 next hop the PE1 FEC, as a result, Device P7 forwards to Device P6 as per classic LDP behavior.

Device P6 that is acting as an LDP egress for the PE1 FEC, stitches and swaps the incoming egress LDP label for the PE1 FEC with an equivalent segment routing node SID (101 in this example) to forward the traffic to Device P5.

Device P5 pops 101 SID assuming that Device PE1 advertised its node segment 101 with the penultimate-pop flag set, and then forwards traffic to Device PE1. Device PE1 receives the tunneled packet and processes the service label.

As a result, the end-to-end MPLS tunnel is built from an LDP LSP from Device PE3 to Device P6, and the related node segment from Device P6 to Device PE1.

LDP Mapping Server Functionality (Segment Routing to LDP)

The LDP server functionality is the mapping of segment routing to LDP, that is the left-to-right traffic flow in [Figure 86 on page 1035](#). On Device P6 the mapping server prefixes configuration is included under the **[edit routing-options source-packet-routing]** hierarchy level. When the configuration is applied under the specific IGP, the label binding type, length, and value (TLV) for all the LDP FEC-label bindings from the LDP network are advertised as inet.3 LDP routes.

Here, Device P6 acts as a Segment Routing Mapping Server (SRMS) and advertises the following mappings – (P7, 107), (P8, 108), (PE3, 103), (PE4, 104), and (P7, 107). If segment routing was supported on Device PE3, the node SID 103 would have been configured on Device PE3. Because Device PE3 does not support segment routing, the policy is configured at the SRMS on Device P6, and Device P6 is responsible for advertising the mappings.

These mapping server advertisements are only understood by the segment routing devices. The segment routing devices install the related node SIDs in the MPLS data plane exactly how the node segments had been advertised by the nodes themselves. For instance, Device PE1 installs the node SID 103 with P5 next hop exactly as if Device PE3 had advertised SID 103.

Device PE1 has a service route with PE3 as its protocol next hop. Device PE1 has a node segment for that IGP route – 103 with P5 next hop. As a result, Device PE1 sends its service packet to Device P5 with two

labels – the bottom label, which is the service label, and the top label, which is SID 103. Device P5 swaps 103 for 103 and forwards to Device P6. The next-hop for Device P6 is the IGP route PE3, which is not capable of segment routing. (Device P7 does not advertise the segment routing capability). However, Device P6 has an LDP label binding from that next hop for the same FEC (for example, LDP label 1037). As a result, on Device P6, the IGP swaps 103 for 1037 and forwards to Device P7.

Device P7 swaps this label with the LDP-label received from Device P8, and then forwards it to Device P8. The LDP label is popped by Device P8 and forwarded to Device PE3.


Device PE3 receives the tunneled packet and processes the service label. The end-to-end MPLS tunnel is built from a segment routing node from Devices PE1 to P6, and an LDP LSP from Devices P6 to PE3.

Segment Routing to LDP Stitching

When the IGP segment routing LSP's IP next hop does not support segment routing, the IGP looks at the inet.3 routing table to see if there is an LDP LSP to the same prefix. If the LDP LSP is present, the IGP stitches the segment routing LSP to the LDP LSP by programming a MPLS transit route that swaps the segment routing label with the LDP label to switch traffic from segment routing domain to the LDP domain.

Figure 87 on page 1037 illustrates the stitching of segment routing and LDP LSPs for enabling interoperability.

Figure 87: Stitching Segment Routing and LDP LSPs

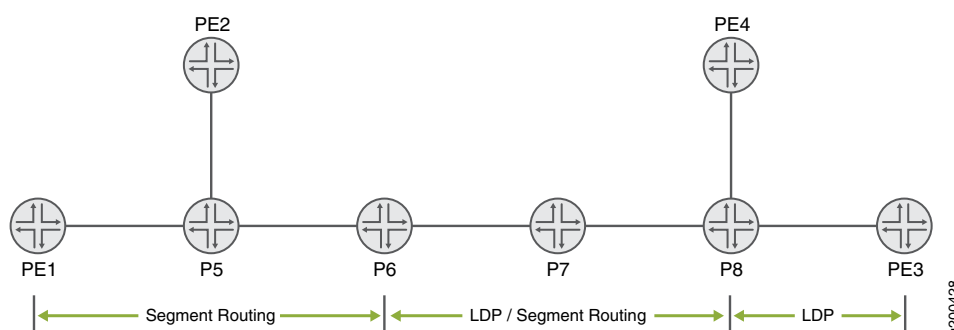

In the topology, Device PE3 is LDP-capable and does not support segment routing. The mapping server in the segment routing domain can advertise label binding TLV for devices P7, P8 and PE4. In such a scenario, Device PE1 can have both prefix SID and remote label binding TLV and SID to reach Device PE4. However, Device PE1 prefers prefix SID over remote label binding TLV while programming its ingress segment routing route for Device PE4. As a result, Device PE1 uses the segment routing LSP end-to-end to send traffic to Device PE4, and uses the segment routing-to-LDP stitching while sending traffic to Device PE3.

Unsupported Features and Functionality for Interoperability of Segment Routing with LDP using ISIS

- Penultimate-hop popping behaviour for label binding TLV is not supported.
- Advertising of range of prefixes in label binding TLV is not supported.

- Segment Routing Conflict Resolution is not supported.
- LDP traffic statistics does not work.
- Nonstop active routing (NSR) and graceful Routing Engine switchover (GRES) is not supported.
- ISIS inter-level is not supported.
- RFC 7794, *IS-IS Prefix Attributes for Extended IPv4* is not supported.
- Redistributing LDP route as a prefix-sid at the stitching node is not supported.

Configuring Miscellaneous LDP Properties

IN THIS SECTION

- [Configuring LDP to Use the IGP Route Metric | 1038](#)
- [Preventing Addition of Ingress Routes to the inet.0 Routing Table | 1039](#)
- [Multiple-Instance LDP and Carrier-of-Carriers VPNs | 1039](#)
- [Configuring MPLS and LDP to Pop the Label on the Ultimate-Hop Router | 1039](#)
- [Enabling LDP over RSVP-Established LSPs | 1040](#)
- [Enabling LDP over RSVP-Established LSPs in Heterogeneous Networks | 1040](#)
- [Configuring the TCP MD5 Signature for LDP Sessions | 1041](#)
- [Configuring LDP Session Protection | 1043](#)
- [Disabling SNMP Traps for LDP | 1043](#)
- [Configuring LDP Synchronization with the IGP on LDP Links | 1043](#)
- [Configuring LDP Synchronization with the IGP on the Router | 1044](#)
- [Configuring the Label Withdrawal Timer | 1044](#)
- [Ignoring the LDP Subnet Check | 1045](#)

The following sections describe how to configure a number of miscellaneous LDP properties:

Configuring LDP to Use the IGP Route Metric

Use the **track-igp-metric** statement if you want the interior gateway protocol (IGP) route metric to be used for the LDP routes instead of the default LDP route metric (the default LDP route metric is 1).

To use the IGP route metric, include the **track-igp-metric** statement:

```
track-igp-metric;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Preventing Addition of Ingress Routes to the inet.0 Routing Table

By configuring the **no-forwarding** statement, you can prevent ingress routes from being added to the inet.0 routing table instead of the inet.3 routing table even if you enabled the **traffic-engineering bgp-igp** statement at the **[edit protocols mpls]** or the **[edit logical-systems *logical-system-name* protocols mpls]** hierarchy level. By default, the **no-forwarding** statement is disabled.

NOTE: ACX Series routers do not support **[edit logical-systems]** hierarchy level.

To omit ingress routes from the inet.0 routing table, include the **no-forwarding** statement:

```
no-forwarding;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Multiple-Instance LDP and Carrier-of-Carriers VPNs

By configuring multiple LDP routing instances, you can use LDP to advertise labels in a carrier-of-carriers VPN from a service provider provider edge (PE) router to a customer carrier customer edge (CE) router. This is especially useful when the carrier customer is a basic Internet service provider (ISP) and wants to restrict full Internet routes to its PE routers. By using LDP instead of BGP, the carrier customer shields its other internal routers from the Internet. Multiple-instance LDP is also useful when a carrier customer wants to provide Layer 2 or Layer 3 VPN services to its customers.

For an example of how to configure multiple LDP routing instances for carrier-of-carriers VPNs, see the *Multiple Instances for Label Distribution Protocol User Guide*.

Configuring MPLS and LDP to Pop the Label on the Ultimate-Hop Router

The default advertised label is label 3 (Implicit Null label). If label 3 is advertised, the penultimate-hop router removes the label and sends the packet to the egress router. If ultimate-hop popping is enabled, label 0 (IPv4 Explicit Null label) is advertised. Ultimate-hop popping ensures that any packets traversing an MPLS network include a label.

To configure ultimate-hop popping, include the **explicit-null** statement:

```
explicit-null;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

NOTE: Juniper Networks routers queue packets based on the incoming label. Routers from other vendors might queue packets differently. Keep this in mind when working with networks containing routers from multiple vendors.

For more information about labels, see [“MPLS Label Overview” on page 421](#) and [“MPLS Label Allocation” on page 421](#).

Enabling LDP over RSVP-Established LSPs

You can run LDP over LSPs established by RSVP, effectively tunneling the LDP-established LSP through the one established by RSVP. To do so, enable LDP on the lo0.0 interface (see [“Enabling and Disabling LDP” on page 863](#)). You must also configure the LSPs over which you want LDP to operate by including the `ldp-tunneling` statement at the `[edit protocols mpls label-switched-path lsp-name]` hierarchy level:

```
[edit]
protocols {
  mpls {
    label-switched-path lsp-name {
      from source;
      to destination;
      ldp-tunneling;
    }
  }
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

SEE ALSO

[Tunneling LDP LSPs in RSVP LSPs Overview | 857](#)

Enabling LDP over RSVP-Established LSPs in Heterogeneous Networks

Some other vendors use an OSPF metric of 1 for the loopback address. Juniper Networks routers use an OSPF metric of 0 for the loopback address. This might require that you manually configure the RSVP metric when deploying LDP tunneling over RSVP LSPs in heterogeneous networks.

When a Juniper Networks router is linked to another vendor's router through an RSVP tunnel, and LDP tunneling is also enabled, by default the Juniper Networks router might not use the RSVP tunnel to route traffic to the LDP destinations downstream of the other vendor's egress router if the RSVP path has a metric of 1 larger than the physical OSPF path.

To ensure that LDP tunneling functions properly in heterogeneous networks, you can configure OSPF to ignore the RSVP LSP metric by including the **ignore-lsp-metrics** statement:

```
ignore-lsp-metrics;
```

You can configure this statement at the following hierarchy levels:

- [edit protocols ospf traffic-engineering shortcuts]
- [edit logical-systems *logical-system-name* protocols ospf traffic-engineering shortcuts]

NOTE: ACX Series routers do not support [edit logical-systems] hierarchy level.

To enable LDP over RSVP LSPs, you also still need to complete the procedure in Section [“Enabling LDP over RSVP-Established LSPs” on page 1040](#).

Configuring the TCP MD5 Signature for LDP Sessions

You can configure an MD5 signature for an LDP TCP connection to protect against the introduction of spoofed TCP segments into LDP session connection streams.

A router using the MD5 signature option is configured with a password for each peer for which authentication is required. The password is stored encrypted.

LDP hello adjacencies can still be created even when peering interfaces are configured with different security signatures. However, the TCP session cannot be authenticated and is never established.

Starting in Junos OS Release 16.1R1, support for Hashed Message Authentication Code (HMAC) and MD5 authentication for LDP sessions is extended from a per-session configuration to a subnet-match (that is, longest-prefix-match) configuration.

The support for subnet-match authentication provides flexibility in configuring authentication for automatically targeted LDP (TLDP) sessions, making the deployment of remote loop-free alternate (LFA) and FEC 129 pseudowires easy.

To configure an MD5 signature for an LDP TCP connection, include the **session-group** and **authentication-key** statement:

```
session-group prefix-length {
  authentication-key authentication-key;
}
```

Use the **session-group** statement to configure the address for the remote end of the LDP session.

The **md5-authentication-key** (password) can be up to 69 characters long. Characters can include any ASCII strings. If you include spaces, enclose all characters in quotation marks.

You can also configure an authentication key update mechanism for the LDP routing protocol. This mechanism allows you to update authentication keys without interrupting associated routing and signaling protocols such as Open Shortest Path First (OSPF) and Resource Reservation Setup Protocol (RSVP).

To configure the authentication key update mechanism, include the **key-chain** statement at the **[edit security authentication-key-chains]** hierarchy level, and specify the **key** option to create a keychain consisting of several authentication keys.

```
[edit security authentication-key-chains]
key-chain key-chain-name {
  key key {
    secret secret-data;
    start-time yyyy-mm-dd.hh:mm:ss;
  }
}
```

To configure the authentication key update mechanism for the LDP routing protocol, include the **authentication-key-chain** statement at the **[edit protocols ldp]** hierarchy level to associate the protocol with the **[edit security authentication-key-chains]** authentication keys. You must also configure the authentication algorithm by including the **authentication-algorithm *algorithm*** statement the **[edit protocols ldp]** hierarchy level.

```
[edit protocols ldp]
group group-name {
  neighbor address {
    authentication-algorithm algorithm;
    authentication-key-chain key-chain-name;
  }
}
```

For more information about the authentication key update feature, see *Configuring the Authentication Key Update Mechanism for BGP and LDP Routing Protocols*.

Configuring LDP Session Protection

An LDP session is normally created between a pair of routers that are connected by one or more links. The routers form one hello adjacency for every link that connects them and associate all the adjacencies with the corresponding LDP session. When the last hello adjacency for an LDP session goes away, the LDP session is terminated. You might want to modify this behavior to prevent an LDP session from being unnecessarily terminated and reestablished.

You can configure the Junos OS to leave the LDP session between two routers up even if there are no hello adjacencies on the links connecting the two routers by configuring the **session-protection** statement. You can optionally specify a time in seconds using the **timeout** option. The session remains up for the duration specified as long as the routers maintain IP network connectivity.

```
session-protection {
    timeout seconds;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

Disabling SNMP Traps for LDP

Whenever an LDP LSP makes a transition from up to down, or down to up, the router sends an SNMP trap. However, it is possible to disable the LDP SNMP traps on a router, logical system, or routing instance.

For information about the LDP SNMP traps and the proprietary LDP MIB, see the [SNMP MIB Explorer](#)..

To disable SNMP traps for LDP, specify the **trap disable** option for the **log-updown** statement:

```
log-updown {
    trap disable;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Configuring LDP Synchronization with the IGP on LDP Links

LDP is a protocol for distributing labels in non-traffic-engineered applications. Labels are distributed along the best path determined by the IGP. If synchronization between LDP and the IGP is not maintained, the LSP goes down. When LDP is not fully operational on a given link (a session is not established and labels are not exchanged), the IGP advertises the link with the maximum cost metric. The link is not preferred but remains in the network topology.

LDP synchronization is supported only on active point-to-point interfaces and LAN interfaces configured as point-to-point under the IGP. LDP synchronization is not supported during graceful restart.

To advertise the maximum cost metric until LDP is operational for synchronization, include the **ldp-synchronization** statement:

```
ldp-synchronization {
  disable;
  hold-time seconds;
}
```

To disable synchronization, include the **disable** statement. To configure the time period to advertise the maximum cost metric for a link that is not fully operational, include the **hold-time** statement.

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

Configuring LDP Synchronization with the IGP on the Router

You can configure the time the LDP waits before informing the IGP that the LDP neighbor and session for an interface are operational. For large networks with numerous FECs, you might need to configure a longer value to allow enough time for the LDP label databases to be exchanged.

To configure the time the LDP waits before informing the IGP that the LDP neighbor and session are operational, include the **igp-synchronization** statement and specify a time in seconds for the **holddown-interval** option:

```
igp-synchronization holddown-interval seconds;
```

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

Configuring the Label Withdrawal Timer

The label withdrawal timer delays sending a label withdrawal message for a FEC to a neighbor. When an IGP link to a neighbor fails, the label associated with the FEC has to be withdrawn from all the upstream routers if the neighbor is the next hop for the FEC. After the IGP converges and a label is received from a new next hop, the label is readvertised to all the upstream routers. This is the typical network behavior. By delaying label withdrawal by a small amount of time (for example, until the IGP converges and the router receives a new label for the FEC from the downstream next hop), the label withdrawal and sending a label mapping soon could be avoided. The **label-withdrawal-delay** statement allows you to configure this delay time. By default, the delay is 60 seconds.

If the router receives the new label before the timer runs out, the label withdrawal timer is canceled. However, if the timer runs out, the label for the FEC is withdrawn from all of the upstream routers.

By default, LDP waits for 60 seconds before withdrawing labels to avoid resignaling LSPs multiple times while the IGP is reconverging. To configure the label withdrawal delay time in seconds, include the **label-withdrawal-delay** statement:

```
label-withdrawal-delay seconds;
```

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

Ignoring the LDP Subnet Check

In Junos OS Release 8.4 and later releases, an LDP source address subnet check is performed during the neighbor establishment procedure. The source address in the LDP link hello packet is matched against the interface address. This causes an interoperability issue with some other vendors' equipment.

To disable the subnet check, include the **allow-subnet-mismatch** statement:

```
allow-subnet-mismatch;
```

This statement can be included at the following hierarchy levels:

- [edit protocols ldp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols ldp **interface** *interface-name*]

NOTE: ACX Series routers do not support [edit logical-systems] hierarchy level.

Configuring LDP LSP Traceroute

You can trace the route followed by an LDP-signaled LSP. LDP LSP traceroute is based on RFC 4379, *Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures*. This feature allows you to periodically trace all paths in a FEC. The FEC topology information is stored in a database accessible from the CLI.

A topology change does not automatically trigger a trace of an LDP LSP. However, you can manually initiate a traceroute. If the traceroute request is for an FEC that is currently in the database, the contents of the database are updated with the results.

The periodic traceroute feature applies to all FECs specified by the **oam** statement configured at the [edit protocols ldp] hierarchy level. To configure periodic LDP LSP traceroute, include the **periodic-traceroute** statement:

```
periodic-traceroute {
  disable;
  exp exp-value;
  fanout fanout-value;
  frequency minutes;
  paths number-of-paths;
  retries retry-attempts;
  source address;
```

```
ttl ttl-value;
wait seconds;
}
```

You can configure this statement at the following hierarchy levels:

- **[edit protocols ldp oam]**
- **[edit protocols ldp oam fec address]**

You can configure the **periodic-traceroute** statement by itself or with any of the following options:

- **exp**—Specify the class of service to use when sending probes.
- **fanout**—Specify the maximum number of next hops to search per node.
- **frequency**—Specify the interval between traceroute attempts.
- **paths**—Specify the maximum number of paths to search.
- **retries**—Specify the number of attempts to send a probe to a specific node before giving up.
- **source**—Specify the IPv4 source address to use when sending probes.
- **ttl**—Specify the maximum time-to-live value. Nodes that are beyond this value are not traced.
- **wait**—Specify the wait interval before resending a probe packet.

Collecting LDP Statistics

IN THIS SECTION

- [LDP Statistics Output | 1047](#)
- [Disabling LDP Statistics on the Penultimate-Hop Router | 1048](#)
- [LDP Statistics Limitations | 1048](#)

LDP traffic statistics show the volume of traffic that has passed through a particular FEC on a router.

When you configure the **traffic-statistics** statement at the **[edit protocols ldp]** hierarchy level, the LDP traffic statistics are gathered periodically and written to a file. You can configure how often statistics are collected (in seconds) by using the **interval** option. The default collection interval is 5 minutes. You must configure an LDP statistics file; otherwise, LDP traffic statistics are not gathered. If the LSP goes down, the LDP statistics are reset.

To collect LDP traffic statistics, include the **traffic-statistics** statement:

```

traffic-statistics {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  interval interval;
  no-penultimate-hop;
}

```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

This section includes the following topics:

LDP Statistics Output

The following sample output is from an LDP statistics file:

FEC	Type	Packets	Bytes	Shared
10.255.350.448/32	Transit	0	0	No
	Ingress	0	0	No
10.255.350.450/32	Transit	0	0	Yes
	Ingress	0	0	No
10.255.350.451/32	Transit	0	0	No
	Ingress	0	0	No
220.220.220.1/32	Transit	0	0	Yes
	Ingress	0	0	No
220.220.220.2/32	Transit	0	0	Yes
	Ingress	0	0	No
220.220.220.3/32	Transit	0	0	Yes
	Ingress	0	0	No
May 28 15:02:05, read 12 statistics in 00:00:00 seconds				

The LDP statistics file includes the following columns of data:

- **FEC**—FEC for which LDP traffic statistics are collected.
- **Type**—Type of traffic originating from a router, either **Ingress** (originating from this router) or **Transit** (forwarded through this router).
- **Packets**—Number of packets passed by the FEC since its LSP came up.
- **Bytes**—Number of bytes of data passed by the FEC since its LSP came up.
- **Shared**—A **Yes** value indicates that several prefixes are bound to the same label (for example, when several prefixes are advertised with an egress policy). The LDP traffic statistics for this case apply to all the prefixes and should be treated as such.
- **read**—This number (which appears next to the date and time) might differ from the actual number of the statistics displayed. Some of the statistics are summarized before being displayed.

Disabling LDP Statistics on the Penultimate-Hop Router

Gathering LDP traffic statistics at the penultimate-hop router can consume excessive system resources, on next-hop routes in particular. This problem is exacerbated if you have configured the **deaggregate** statement in addition to the **traffic-statistics** statement. For routers reaching their limit of next-hop route usage, we recommend configuring the **no-penultimate-hop** option for the **traffic-statistics** statement:

```
traffic-statistics {
  no-penultimate-hop;
}
```

For a list of hierarchy levels at which you can configure the **traffic-statistics** statement, see the statement summary section for this statement.

NOTE: When you configure the **no-penultimate-hop** option, no statistics are available for the FECs that are the penultimate hop for this router.

Whenever you include or remove this option from the configuration, the LDP sessions are taken down and then restarted.

The following sample output is from an LDP statistics file showing routers on which the **no-penultimate-hop** option is configured:

FEC	Type	Packets	Bytes	Shared
10.255.245.218/32	Transit	0	0	No
	Ingress	4	246	No
10.255.245.221/32	Transit	statistics disabled		
	Ingress	statistics disabled		
13.1.1.0/24	Transit	statistics disabled		
	Ingress	statistics disabled		
13.1.3.0/24	Transit	statistics disabled		
	Ingress	statistics disabled		

LDP Statistics Limitations

The following are issues related to collecting LDP statistics by configuring the **traffic-statistics** statement:

- You cannot clear the LDP statistics.
- If you shorten the specified interval, a new LDP statistics request is issued only if the statistics timer expires later than the new interval.

- A new LDP statistics collection operation cannot start until the previous one has finished. If the interval is short or if the number of LDP statistics is large, the time gap between the two statistics collections might be longer than the interval.

When an LSP goes down, the LDP statistics are reset.

Tracing LDP Protocol Traffic

IN THIS SECTION

- [Tracing LDP Protocol Traffic at the Protocol and Routing Instance Levels | 1049](#)
- [Tracing LDP Protocol Traffic Within FECs | 1050](#)
- [Examples: Tracing LDP Protocol Traffic | 1051](#)

The following sections describe how to configure the trace options to examine LDP protocol traffic:

Tracing LDP Protocol Traffic at the Protocol and Routing Instance Levels

To trace LDP protocol traffic, you can specify options in the global **traceoptions** statement at the **[edit routing-options]** hierarchy level, and you can specify LDP-specific options by including the **traceoptions** statement:

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag <flag-modifier> <disable>;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Use the **file** statement to specify the name of the file that receives the output of the tracing operation. All files are placed in the directory `/var/log`. We recommend that you place LDP-tracing output in the file **ldp-log**.

The following trace flags display the operations associated with the sending and receiving of various LDP messages. Each can carry one or more of the following modifiers:

- **address**—Trace the operation of address and address withdrawal messages.
- **binding**—Trace label-binding operations.
- **error**—Trace error conditions.
- **event**—Trace protocol events.

- **initialization**—Trace the operation of initialization messages.
- **label**—Trace the operation of label request, label map, label withdrawal, and label release messages.
- **notification**—Trace the operation of notification messages.
- **packets**—Trace the operation of address, address withdrawal, initialization, label request, label map, label withdrawal, label release, notification, and periodic messages. This modifier is equivalent to setting the **address**, **initialization**, **label**, **notification**, and **periodic** modifiers.

You can also configure the **filter** flag modifier with the **match-on address** sub-option for the **packets** flag. This allows you to trace based on the source and destination addresses of the packets.

- **path**—Trace label-switched path operations.
- **path**—Trace label-switched path operations.
- **periodic**—Trace the operation of hello and keepalive messages.
- **route**—Trace the operation of route messages.
- **state**—Trace protocol state transitions.

Tracing LDP Protocol Traffic Within FECs

LDP associates a forwarding equivalence class (FEC) with each LSP it creates. The FEC associated with an LSP specifies which packets are mapped to that LSP. LSPs are extended through a network as each router chooses the label advertised by the next hop for the FEC and splices it to the label it advertises to all other routers.

You can trace LDP protocol traffic within a specific FEC and filter LDP trace statements based on an FEC. This is useful when you want to trace or troubleshoot LDP protocol traffic associated with an FEC. The following trace flags are available for this purpose: **route**, **path**, and **binding**.

The following example illustrates how you might configure the LDP **traceoptions** statement to filter LDP trace statements based on an FEC:

```
[edit protocols ldp traceoptions]
set flag route filter match-on fec policy "filter-policy-for-ldp-fec";
```

This feature has the following limitations:

- The filtering capability is only available for FECs composed of IP version 4 (IPv4) prefixes.
- Layer 2 circuit FECs cannot be filtered.
- When you configure both route tracing and filtering, MPLS routes are not displayed (they are blocked by the filter).

- Filtering is determined by the policy and the configured value for the **match-on** option. When configuring the policy, be sure that the default behavior is always **reject**.
- The only **match-on** option is **fec**. Consequently, the only type of policy you should include is a route-filter policy.

Examples: Tracing LDP Protocol Traffic

Trace LDP path messages in detail:

```
[edit]
protocols {
  ldp {
    traceoptions {
      file ldp size 10m files 5;
      flag path;
    }
  }
}
```

Trace all LDP outgoing messages:

```
[edit]
protocols {
  ldp {
    traceoptions {
      file ldp size 10m files 5;
      flag packets;
    }
  }
}
```

Trace all LDP error conditions:

```
[edit]
protocols {
  ldp {
    traceoptions {
      file ldp size 10m files 5;
      flag error;
    }
  }
}
```

Trace all LDP incoming messages and all label-binding operations:

```
[edit]
protocols {
  ldp {
    traceoptions {
      file ldp size 10m files 5 world-readable;
      flag packets receive;
      flag binding;
    }
    interface all {
    }
  }
}
```

Trace LDP protocol traffic for an FEC associated with the LSP:

```
[edit]
protocols {
  ldp {
    traceoptions {
      flag route filter match-on fec policy filter-policy-for-ldp-fec;
    }
  }
}
```

Release History Table

Release	Description
19.1	Starting in Junos OS Release 19.1R1, segment routing-LDP border router can stitch segment routing traffic to LDP next-hop and vice versa.
16.1R1	Starting in Junos OS Release 16.1R1, support for Hashed Message Authentication Code (HMAC) and MD5 authentication for LDP sessions is extended from a per-session configuration to a subnet-match (that is, longest-prefix-match) configuration.
16.1	Starting from Junos OS Release 16.1, M-LDP can signal point-to-multipoint LSPs at ASBR or transit or egress when root address is a BGP route which is further recursively resolved over an MPLS LSP.
14.1	Starting in Junos OS Release 14.1, Multicast-only fast reroute (MoFRR) functionality is available, in which packet loss is minimized in PIM and multipoint LDP domains.
14.1	Starting in Junos OS Release 14.1, in order to migrate existing IPTV services from native IP multicast to MPLS multicast, you need to smoothly transition from PIM to M-LDP point-to-multipoint LSPs with minimal outage.

RELATED DOCUMENTATION

[LDP Overview](#) | [850](#)



MPLS Traffic Engineering

Configuring MPLS Traffic Engineering | **1055**

Configuring MPLS Traffic Engineering

IN THIS CHAPTER

- [MPLS Traffic Engineering Configuration | 1055](#)
- [DiffServ-Aware Traffic Engineering Configuration | 1111](#)

MPLS Traffic Engineering Configuration

IN THIS SECTION

- [MPLS and Traffic Engineering | 1056](#)
- [MPLS Traffic Engineering and Signaling Protocols Overview | 1056](#)
- [Traffic Engineering Capabilities | 1057](#)
- [Components of Traffic Engineering | 1057](#)
- [Configuring Traffic Engineering for LSPs | 1058](#)
- [Enabling Interarea Traffic Engineering | 1061](#)
- [Enabling Inter-AS Traffic Engineering for LSPs | 1062](#)
- [Packet Forwarding Component | 1064](#)
- [Offline Path Planning and Analysis | 1067](#)
- [Flexible LSP Calculation and Configuration | 1067](#)
- [Link-State Distribution Using BGP Overview | 1068](#)
- [Example: Configuring Link State Distribution Using BGP | 1082](#)
- [Configuring Link State Distribution Using BGP | 1105](#)
- [Improving Traffic Engineering Database Accuracy with RSVP PathErr Messages | 1108](#)

MPLS and Traffic Engineering

Traffic engineering allows you to control the path that data packets follow, bypassing the standard routing model, which uses routing tables. Traffic engineering moves flows from congested links to alternate links that would not be selected by the automatically computed destination-based shortest path. With traffic engineering, you can:

- Make more efficient use of expensive long-haul fibers.
- Control how traffic is rerouted in the face of single or multiple failures.
- Classify critical and regular traffic on a per-path basis.

The core of the traffic engineering design is based on building label-switched paths (LSPs) among routers. An LSP is connection-oriented, like a virtual circuit in Frame Relay or ATM. LSPs are not reliable: Packets entering an LSP do not have delivery guarantees, although preferential treatment is possible. LSPs also are similar to unidirectional tunnels in that packets entering a path are encapsulated in an envelope and switched across the entire path without being touched by intermediate nodes. LSPs provide fine-grained control over how packets are forwarded in a network. To provide reliability, an LSP can use a set of primary and secondary paths.

LSPs can be configured for BGP traffic only (traffic whose destination is outside of an autonomous system [AS]). In this case, traffic within the AS is not affected by the presence of LSPs. LSPs can also be configured for both BGP and interior gateway protocol (IGP) traffic; therefore, both intra-AS and inter-AS traffic is affected by the LSPs.

MPLS Traffic Engineering and Signaling Protocols Overview

Traffic engineering facilitates efficient and reliable network operations while simultaneously optimizing network resources and traffic performance. Traffic engineering provides the ability to move traffic flow away from the shortest path selected by the interior gateway protocol (IGP) to a potentially less congested physical path across a network. To support traffic engineering, besides source routing, the network must do the following:

- Compute a path at the source by taking into account all the constraints, such as bandwidth and administrative requirements.
- Distribute the information about network topology and link attributes throughout the network once the path is computed.
- Reserve network resources and modify link attributes.

When transit traffic is routed through an IP network, MPLS is often used to engineer its passage. Although the exact path through the transit network is of little importance to either the sender or the receiver of the traffic, network administrators often want to route traffic more efficiently between certain source and destination address pairs. By adding a short label with specific routing instructions to each packet, MPLS switches packets from router to router through the network rather than forwarding packets based on

next-hop lookups. The resulting routes are called *label-switched paths (LSPs)*. LSPs control the passage of traffic through the network and speed traffic forwarding.

You can create LSPs manually, or through the use of signaling protocols. Signaling protocols are used within an MPLS environment to establish LSPs for traffic across a transit network. Junos OS supports two signaling protocols—LDP and the Resource Reservation Protocol (RSVP).

MPLS traffic engineering uses the following components:

- MPLS LSPs for packet forwarding
- IGP extensions for distributing information about the network topology and link attributes
- Constrained Shortest Path First (CSPF) for path computation and path selection
- RSVP extensions to establish the forwarding state along the path and to reserve resources along the path

Junos OS also supports traffic engineering across different OSPF regions.

Traffic Engineering Capabilities

The task of mapping traffic flows onto an existing physical topology is called *traffic engineering*. Traffic engineering provides the ability to move traffic flow away from the shortest path selected by the interior gateway protocol (IGP) and onto a potentially less congested physical path across a network.

Traffic engineering provides the capabilities to do the following:

- Route primary paths around known bottlenecks or points of congestion in the network.
- Provide precise control over how traffic is rerouted when the primary path is faced with single or multiple failures.
- Provide more efficient use of available aggregate bandwidth and long-haul fiber by ensuring that subsets of the network do not become overutilized while other subsets of the network along potential alternate paths are underutilized.
- Maximize operational efficiency.
- Enhance the traffic-oriented performance characteristics of the network by minimizing packet loss, minimizing prolonged periods of congestion, and maximizing throughput.
- Enhance statistically bound performance characteristics of the network (such as loss ratio, delay variation, and transfer delay) required to support a multiservices Internet.

Components of Traffic Engineering

In the Junos[®] operating system (OS), traffic engineering is implemented with MPLS and RSVP. Traffic engineering is composed of four functional components:

- [Packet Forwarding Component on page 1064](#)
- *Information Distribution Component*
- *Path Selection Component*
- *Signaling Component*

Configuring Traffic Engineering for LSPs

IN THIS SECTION

- [Using LSPs for Both BGP and IGP Traffic Forwarding | 1058](#)
- [Using LSPs for Forwarding in Virtual Private Networks | 1059](#)
- [Using RSVP and LDP Routes for Forwarding but Not Route Selection | 1059](#)
- [Advertising the LSP Metric in Summary LSAs | 1060](#)

When you configure an LSP, a host route (a 32-bit mask) is installed in the ingress router toward the egress router; the address of the host route is the destination address of the LSP. The **bgp** option for the **traffic-engineering** statement at the **[edit protocols mpls]** hierarchy level is enabled by default (you can also explicitly configure the **bgp** option), allowing only BGP to use LSPs in its route calculations. The other **traffic-engineering** statement options allow you to alter this behavior in the master routing instance. This functionality is not available for specific routing instances. Also, you can enable only one of the **traffic-engineering** statement options (**bgp**, **bgp-igp**, **bgp-igp-both-ribs**, or **mpls-forwarding**) at a time.

NOTE: Enabling or disabling any of the **traffic-engineering** statement options causes all the MPLS routes to be removed and then reinserted into the routing tables.

You can configure OSPF and traffic engineering to advertise the LSP metric in summary link-state advertisements (LSAs) as described in the section [“Advertising the LSP Metric in Summary LSAs” on page 1060](#).

The following sections describe how to configure traffic engineering for LSPs:

Using LSPs for Both BGP and IGP Traffic Forwarding

You can configure BGP and the IGPs to use LSPs for forwarding traffic destined for egress routers by including the **bgp-igp** option for the **traffic-engineering** statement. The **bgp-igp** option causes all inet.3 routes to be moved to the inet.0 routing table.

On the ingress router, include **bgp-igp** option for the **traffic-engineering** statement:

```
traffic-engineering bgp-igp;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

NOTE: The **bgp-igp** option for the **traffic-engineering** statement cannot be configured for VPN). VPNs require that routes be in the inet.3 routing table.

Using LSPs for Forwarding in Virtual Private Networks

VPNs require that routes remain in the inet.3 routing table to function properly. For VPNs, configure the **bgp-igp-both-ribs** option of the **traffic-engineering** statement to cause BGP and the IGPs to use LSPs for forwarding traffic destined for egress routers. The **bgp-igp-both-ribs** option installs the ingress routes in both the inet.0 routing table (for IPv4 unicast routes) and the inet.3 routing table (for MPLS path information).

On the ingress router, include the **traffic-engineering bgp-igp-both-ribs** statement:

```
traffic-engineering bgp-igp-both-ribs;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

When you use the **bgp-igp-both-ribs** statement, the routes from the inet.3 table get copied into the inet.0 table. The copied routes are LDP-signaled or RSVP-signaled, and are likely to have a lower preference than other routes in inet.0. Routes with a lower preference are more likely to be chosen as the active routes. This can be a problem because routing policies only act upon active routes. To prevent this problem, use the **mpls-forwarding** option instead.

Using RSVP and LDP Routes for Forwarding but Not Route Selection

If you configure the **bgp-igp** or **bgp-igp-both-ribs** options for the **traffic-engineering** statement, high-priority LSPs can supersede IGP routes in the inet.0 routing table. IGP routes might no longer be redistributed since they are no longer the active routes.

If you configure the **mpls-forwarding** option for the **traffic-engineering** statement, LSPs are used for forwarding but are excluded from route selection. These routes are added to both the inet.0 and inet.3 routing tables. LSPs in the inet.0 routing table are given a low preference when the active route is selected.

However, LSPs in the inet.3 routing table are given a normal preference and are therefore used for selecting forwarding next hops.

When you activate the **mpls-forwarding** option, routes whose state is **ForwardingOnly** are preferred for forwarding even if their preference is lower than that of the currently active route. To examine the state of a route, execute a **show route detail** command.

To use LSPs for forwarding but exclude them from route selection, include the **mpls-forwarding** option for the **traffic-engineering** statement:

```
traffic-engineering mpls-forwarding;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

When you configure the **mpls-forwarding** option, IGP shortcut routes are copied to the inet.0 routing table only.

Unlike the **bgp-igp-both-ribs** option, the **mpls-forwarding** option allows you to use the LDP-signaled and RSVP-signaled routes for forwarding, and keep the BGP and IGP routes active for routing purposes so that routing policies can act upon them.

For example, suppose a router is running BGP and it has a BGP route of 10.10.10.1/32 that it needs to send to another BGP speaker. If you use the **bgp-igp-both-ribs** option, and your router also has a label-switched-path (LSP) to 10.10.10.1, the MPLS route for 10.10.10.1 becomes active in the inet.0 routing table. This prevents your router from advertising the 10.10.10.1 route to the other BGP router. On the other hand, if you use the **mpls-forwarding** option instead of the **bgp-igp-both-ribs** option, the 10.10.10.1/32 BGP route is advertised to the other BGP speaker, and the LSP is still used to forward traffic to the 10.10.10.1 destination.

Advertising the LSP Metric in Summary LSAs

You can configure MPLS and OSPF to treat an LSP as a link. This configuration allows other routers in the network to use this LSP. To accomplish this goal, you need to configure MPLS and OSPF traffic engineering to advertise the LSP metric in summary LSAs.

For MPLS, include the **traffic-engineering bgp-igp** and **label-switched-path** statements:

```
traffic-engineering bgp-igp;
label-switched-path lsp-name {
    to address;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

For OSPF, include the **lsp-metric-into-summary** statement:

```
lsp-metric-into-summary;
```

You can include this statement at the following hierarchy levels:

- [edit protocols ospf traffic-engineering shortcuts]
- [edit logical-systems *logical-system-name* protocols ospf traffic-engineering shortcuts]

For more information about OSPF traffic engineering, see the *Junos OS Routing Protocols Library*.

Enabling Interarea Traffic Engineering

The Junos OS can signal a contiguous traffic-engineered LSP across multiple OSPF areas. The LSP signaling must be done using either nesting or contiguous signaling, as described in RFC 4206, *Label-Switched Paths (LSP) Hierarchy with Generalized Multi-Protocol Label Switching (GMPLS) Traffic Engineering (TE)*. However, contiguous signaling support is limited to just basic signaling. Reoptimization is not supported with contiguous signaling.

The following describes some of the interarea traffic engineering features:

- Interarea traffic engineering can be enabled when the loose-hop area border routers (ABRs) are configured on the ingress router using CSPF for the Explicit Route Object (ERO) calculation within an OSPF area. ERO expansion is completed on the ABRs.
- Interarea traffic engineering can be enabled when CSPF is enabled, but without ABRs specified in the LSP configuration on the ingress router (ABRs can be automatically designated).
- Differentiated Services (DiffServ) traffic engineering is supported as long as the class type mappings are uniform across multiple areas.

To enable interarea traffic engineering, include the **expand-loose-hop** statement in the configuration for each LSP transit router:

```
expand-loose-hop;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

Enabling Inter-AS Traffic Engineering for LSPs

IN THIS SECTION

- [Inter-AS Traffic Engineering Requirements | 1062](#)
- [Inter-AS Traffic Engineering Limitations | 1063](#)
- [Configuring OSPF Passive TE Mode | 1063](#)

Generally, traffic engineering is possible for LSPs that meet the following conditions:

- Both ends of the LSP are in the same OSPF area or at the same IS-IS level.
- The two ends of the LSP are in different OSPF areas within the same autonomous system (AS). LSPs that end in different IS-IS levels are not supported.
- The two ends of an explicit-path LSP are in different OSPF ASs and the autonomous system border routers (ASBRs) are configured statically as the loose hops supported on the explicit-path LSP. For more information, see [“Configuring Explicit-Path LSPs” on page 563](#).

Without statically defined ASBRs on LSPs, traffic engineering is not possible between one routing domain, or AS, and another. However, when the ASs are under the control of single service provider, it is possible in some cases to have traffic engineered LSPs span the ASs and dynamically discover the OSPF ASBRs linking them (IS-IS is not supported with this feature).

Inter-AS traffic engineered LSPs are possible as long as certain network requirements are met, none of the limiting conditions apply, and OSPF passive mode is configured with EGBP. Details are provided in the following sections:

Inter-AS Traffic Engineering Requirements

The proper establishment and functioning of inter-AS traffic engineered LSPs depend on the following network requirements, all of which must be met:

- All ASs are under control of a single service provider.
- OSPF is used as the routing protocol within each AS, and EGBP is used as the routing protocol between the ASs.
- ASBR information is available inside each AS.
- EGBP routing information is distributed by OSPF, and an IBGP full mesh is in place within each AS.

- Transit LSPs are *not* configured on the inter-AS links, but *are* configured between entry and exit point ASBRs on each AS.
- The EBGP link between ASBRs in different ASs is a direct link and must be configured as a passive traffic engineering link under OSPF. The remote link address itself, not the loopback or any other link address, is used as the remote node identifier for this passive link. For more information about OSPF passive traffic engineering mode configuration, see [“Configuring OSPF Passive TE Mode” on page 1063](#).

In addition, the address used for the remote node of the OSPF passive traffic engineering link must be the same as the address used for the EBGP link. For more information about OSPF and BGP in general, see the *Junos OS Routing Protocols Library*.

Inter-AS Traffic Engineering Limitations

Only LSP hierarchical, or nested, signaling is supported for inter-AS traffic engineered LSPs. Only point-to-point LSPs are supported (there is no point-to-multipoint support).

In addition, the following limitations apply. Any one of these conditions is sufficient to render inter-AS traffic engineered LSPs impossible, even if the above requirements are met.

- The use of multihop BGP is not supported.
- The use of policers or topologies that prevent BGP routes from being known inside the AS is not supported.
- Multiple ASBRs on a LAN between EBGP peers are not supported. Only one ASBR on a LAN between EBGP peers is supported (others ASBRs can exist on the LAN, but cannot be advertised).
- Route reflectors or policies that hide ASBR information or prevent ASBR information from being distributed inside the ASs are not supported.
- Bidirectional LSPs are not supported (LSPs are unidirectional from the traffic engineering perspective).
- Topologies with both inter-AS and intra-AS paths to the same destination are not supported.

In addition, several features that are routine with all LSPs are not supported with inter-AS traffic engineering:

- Admin group link colors are not supported.
- Secondary standby is not supported.
- Reoptimization is not supported.
- Crankback on transit routers is not supported.
- Diverse path calculation is not supported.
- Graceful restart is not supported.

These lists of limitations or unsupported features with inter-AS traffic engineered LSPs are not exhaustive.

Configuring OSPF Passive TE Mode

Ordinarily, interior routing protocols such as OSPF are not run on links between ASs. However, for inter-AS traffic engineering to function properly, information about the inter-AS link, in particular, the address on

the remote interface, must be made available inside the AS. This information is not normally included either in EBGP reachability messages or in OSPF routing advertisements.

To flood this link address information within the AS and make it available for traffic engineering calculations, you must configure OSPF passive mode for traffic engineering on each inter-AS interface. You must also supply the remote address for OSPF to distribute and include in the traffic engineering database.

To configure OSPF passive mode for traffic engineering on an inter-AS interface, include the **passive** statement for the link at the **[edit protocols ospf area *area-id* interface *interface-name*]** hierarchy level:

```
passive {
  traffic-engineering {
    remote-node-id ip-address; /* IP address at far end of inter-AS link */
  }
}
```

OSPF must be properly configured on the router. The following example configures the inter-AS link **so-1/1/0** to distribute traffic engineering information with OSPF within the AS. The remote IP address is **192.168.207.2**.

```
[edit protocols ospf area 0.0.0.0]
interface so-1/1/0 {
  unit 0 {
    passive {
      traffic-engineering {
        remote-node-id 192.168.207.2;
      }
    }
  }
}
```

Packet Forwarding Component

IN THIS SECTION

- [Packet Forwarding Based on Label Swapping | 1065](#)
- [How a Packet Traverses an MPLS Backbone | 1065](#)
- [Information Distribution Component | 1066](#)
- [Path Selection Component | 1066](#)
- [Signaling Component | 1067](#)

The packet forwarding component of the Junos traffic engineering architecture is MPLS, which is responsible for directing a flow of IP packets along a predetermined path across a network. This path is called a *label-switched path (LSP)*. LSPs are simplex; that is, the traffic flows in one direction from the head-end (ingress) router to a tail-end (egress) router. Duplex traffic requires two LSPs: one LSP to carry traffic in each direction. An LSP is created by the concatenation of one or more label-switched hops, allowing a packet to be forwarded from one router to another across the MPLS domain.

When an ingress router receives an IP packet, it adds an MPLS header to the packet and forwards it to the next router in the LSP. The labeled packet is forwarded along the LSP by each router until it reaches the tail end of the LSP, the egress router. At this point the MPLS header is removed, and the packet is forwarded based on Layer 3 information such as the IP destination address. The value of this scheme is that the physical path of the LSP is not limited to what the IGP would choose as the shortest path to reach the destination IP address.

Packet Forwarding Based on Label Swapping

The packet forwarding process at each router is based on the concept of label swapping. This concept is similar to what occurs at each Asynchronous Transfer Mode (ATM) switch in a permanent virtual circuit (PVC). Each MPLS packet carries a 4-byte encapsulation header that contains a 20-bit, fixed-length label field. When a packet containing a label arrives at a router, the router examines the label and copies it as an index to its MPLS forwarding table. Each entry in the forwarding table contains an interface-inbound label pair mapped to a set of forwarding information that is applied to all packets arriving on the specific interface with the same inbound label.

How a Packet Traverses an MPLS Backbone

This section describes how an IP packet is processed as it traverses an MPLS backbone network.

At the entry edge of the MPLS backbone, the IP header is examined by the ingress router. Based on this analysis, the packet is classified, assigned a label, encapsulated in an MPLS header, and forwarded toward the next hop in the LSP. MPLS provides a high degree of flexibility in the way that an IP packet can be assigned to an LSP. For example, in the Junos traffic engineering implementation, all packets arriving at the ingress router that are destined to exit the MPLS domain at the same egress router are forwarded along the same LSP.

Once the packet begins to traverse the LSP, each router uses the label to make the forwarding decision. The MPLS forwarding decision is made independently of the original IP header: the incoming interface and label are used as lookup keys into the MPLS forwarding table. The old label is replaced with a new label, and the packet is forwarded to the next hop along the LSP. This process is repeated at each router in the LSP until the packet reaches the egress router.

When the packet arrives at the egress router, the label is removed and the packet exits the MPLS domain. The packet is then forwarded based on the destination IP address contained in the packet's original IP header according to the traditional shortest path calculated by the IP routing protocol.

Information Distribution Component

Traffic engineering requires detailed knowledge about the network topology as well as dynamic information about network loading. To implement the information distribution component, simple extensions to the IGPs are defined. Link attributes are included as part of each router's link-state advertisement. IS-IS extensions include the definition of new type length values (TLVs), whereas OSPF extensions are implemented with opaque link-state advertisements (LSAs). The standard flooding algorithm used by the link-state IGPs ensures that link attributes are distributed to all routers in the routing domain. Some of the traffic engineering extensions to be added to the IGP link-state advertisement include maximum link bandwidth, maximum reserved link bandwidth, current bandwidth reservation, and link coloring.

Each router maintains network link attributes and topology information in a specialized traffic engineering database. The traffic engineering database is used exclusively for calculating explicit paths for the placement of LSPs across the physical topology. A separate database is maintained so that the subsequent traffic engineering computation is independent of the IGP and the IGP's link-state database. Meanwhile, the IGP continues its operation without modification, performing the traditional shortest-path calculation based on information contained in the router's link-state database.

Path Selection Component

After network link attributes and topology information are flooded by the IGP and placed in the traffic engineering database, each ingress router uses the traffic engineering database to calculate the paths for its own set of LSPs across the routing domain. The path for each LSP can be represented by either a strict or loose explicit route. An explicit route is a preconfigured sequence of routers that should be part of the physical path of the LSP. If the ingress router specifies all the routers in the LSP, the LSP is said to be identified by a strict explicit route. If the ingress router specifies only some of the routers in the LSP, the LSP is described as a loose explicit route. Support for strict and loose explicit routes allows the path selection process to be given broad latitude whenever possible, but to be constrained when necessary.

The ingress router determines the physical path for each LSP by applying a Constrained Shortest Path First (CSPF) algorithm to the information in the traffic engineering database. CSPF is a shortest-path-first algorithm that has been modified to take into account specific restrictions when the shortest path across the network is calculated. Input into the CSPF algorithm includes:

- Topology link-state information learned from the IGP and maintained in the traffic engineering database
- Attributes associated with the state of network resources (such as total link bandwidth, reserved link bandwidth, available link bandwidth, and link color) that are carried by IGP extensions and stored in the traffic engineering database
- Administrative attributes required to support traffic traversing the proposed LSP (such as bandwidth requirements, maximum hop count, and administrative policy requirements) that are obtained from user configuration

As CSPF considers each candidate node and link for a new LSP, it either accepts or rejects a specific path component based on resource availability or whether selecting the component violates user policy constraints. The output of the CSPF calculation is an explicit route consisting of a sequence of router addresses that provides the shortest path through the network that meets the constraints. This explicit

route is then passed to the signaling component, which establishes the forwarding state in the routers along the LSP.

Signaling Component

An LSP is not known to be workable until it is actually established by the signaling component. The signaling component, which is responsible for establishing LSP state and distributing labels, relies on a number of extensions to RSVP:

- The Explicit Route object allows an RSVP path message to traverse an explicit sequence of routers that is independent of conventional shortest-path IP routing. The explicit route can be either strict or loose.
- The Label Request object permits the RSVP path message to request that intermediate routers provide a label binding for the LSP that it is establishing.
- The Label object allows RSVP to support the distribution of labels without changing its existing mechanisms. Because the RSVP Resv message follows the reverse path of the RSVP path message, the Label object supports the distribution of labels from downstream nodes to upstream nodes.

Offline Path Planning and Analysis

Despite the reduced management effort resulting from online path calculation, an offline planning and analysis tool is still required to optimize traffic engineering globally. Online calculation takes resource constraints into account and calculates one LSP at a time. The challenge with this approach is that it is not deterministic. The order in which LSPs are calculated plays a critical role in determining each LSP's physical path across the network. LSPs that are calculated early in the process have more resources available to them than LSPs calculated later in the process because previously calculated LSPs consume network resources. If the order in which the LSPs are calculated is changed, the resulting set of physical paths for the LSPs also can change.

An offline planning and analysis tool simultaneously examines each link's resource constraints and the requirements of each LSP. Although the offline approach can take several hours to complete, it performs global calculations, compares the results of each calculation, and then selects the best solution for the network as a whole. The output of the offline calculation is a set of LSPs that optimizes utilization of network resources. After the offline calculation is completed, the LSPs can be established in any order because each is installed according to the rules for the globally optimized solution.

Flexible LSP Calculation and Configuration

Traffic engineering involves mapping traffic flow onto a physical topology. You can determine the paths online using constraint-based routing. Regardless of how the physical path is calculated, the forwarding state is installed across the network through RSVP.

The Junos OS supports the following ways to route and configure an LSP:

- You can calculate the full path for the LSP offline and individually configure each router in the LSP with the necessary static forwarding state. This is analogous to the way some Internet service providers (ISPs) configure their IP-over-ATM cores.
- You can calculate the full path for the LSP offline and statically configure the ingress router with the full path. The ingress router then uses RSVP as a dynamic signaling protocol to install a forwarding state in each router along the LSP.
- You can rely on constraint-based routing to perform dynamic online LSP calculation. You configure the constraints for each LSP; then the network itself determines the path that best meets those constraints. Specifically, the ingress router calculates the entire LSP based on the constraints and then initiates signaling across the network.
- You can calculate a partial path for an LSP offline and statically configure the ingress router with a subset of the routers in the path; then you can permit online calculation to determine the complete path.

For example, consider a topology that includes two east-west paths across the United States: one in the north through Chicago and one in the south through Dallas. If you want to establish an LSP between a router in New York and one in San Francisco, you can configure the partial path for the LSP to include a single loose-routed hop of a router in Dallas. The result is an LSP routed along the southern path. The ingress router uses CSPF to compute the complete path and RSVP to install the forwarding state along the LSP.

- You can configure the ingress router with no constraints whatsoever. In this case, normal IGP shortest-path routing is used to determine the path of the LSP. This configuration does not provide any value in terms of traffic engineering. However, it is easy and might be useful in situations when services such as virtual private networks (VPNs) are needed.

In all these cases, you can specify any number of LSPs as backups for the primary LSP, thus allowing you to combine more than one configuration approach. For example, you might explicitly compute the primary path offline, set the secondary path to be constraint-based, and have the tertiary path be unconstrained. If a circuit on which the primary LSP is routed fails, the ingress router notices the outage from error notifications received from a downstream router or by the expiration of RSVP soft-state information. Then the router dynamically forwards traffic to a hot-standby LSP or calls on RSVP to create a forwarding state for a new backup LSP.

Link-State Distribution Using BGP Overview

IN THIS SECTION

- [Role of an Interior Gateway Protocol | 1069](#)
- [Limitations of an Interior Gateway Protocol | 1069](#)
- [Need for Spanning Link-State Distribution | 1070](#)
- [Using BGP as a Solution | 1070](#)

- [Supported and Unsupported Features | 1076](#)
- [BGP Link-State Extensions for Source Packet Routing in Networking \(SPRING\) | 1077](#)
- [Verifying NLRI Node Learned Through BGP with OSPF as IGP | 1080](#)
- [Verifying the Prefix NLRI Learned Through BGP with OSPF as IGP | 1081](#)

Role of an Interior Gateway Protocol

An interior gateway protocol (IGP) is a type of protocol used for exchanging routing information between devices within an autonomous system (AS). Based on the method of computing the best path to a destination, the IGPs are divided into two categories:

- Link-state protocols—Advertise information about the network topology (directly connected links and the state of those links) to all routers using multicast addresses and triggered routing updates until all the routers running the link-state protocol have identical information about the internetwork. The best path to a destination is calculated based on constraints such as maximum delay, minimum available bandwidth, and resource class affinity.

OSPF and IS-IS are examples of link-state protocols.

- Distance vector protocols—Advertise complete routing table information to directly connected neighbors using a broadcast address. The best path is calculated based on the number of hops to the destination network.

RIP is an example of a distance vector protocol.

As the name implies, the role of an IGP is to provide routing connectivity within or internal to a given routing domain. A routing domain is a set of routers under common administrative control that share a common routing protocol. An AS can consist of multiple routing domains, where IGP functions to advertise and learn network prefixes (routes) from neighboring routers to build a route table that ultimately contains entries for all sources advertising reachability for a given prefix. IGP executes a route selection algorithm to select the best path between the local router and each destination, and provides full connectivity among the routers making up a routing domain.

In addition to advertising internal network reachability, IGPs are often used to advertise routing information that is external to that IGP's routing domain through a process known as route redistribution. Route redistribution is the process of exchanging routing information among distinct routing protocols to tie multiple routing domains together when intra-AS connectivity is desired.

Limitations of an Interior Gateway Protocol

While each individual IGP has its own advantages and limitations, the biggest limitations of IGP in general are performance and scalability.

IGPs are designed to handle the task of acquiring and distributing network topology information for traffic engineering purposes. While this model has served well, IGPs have inherent scaling limitations when it comes to distributing large databases. IGPs can autodetect neighbors, with which they acquire intra-area network topology information. However, the link-state database or a traffic engineering database has the scope of a single area or AS, thereby limiting applications, such as end-to-end traffic engineering, the benefit of having external visibility to make better decisions.

For label-switched networks, such as MPLS and Generalized MPLS (GMPLS), most existing traffic engineering solutions work in a single routing domain. These solutions do not work when a route from the ingress node to the egress node leaves the routing area or AS of the ingress node. In such cases, the path computation problem becomes complicated because of the unavailability of the complete routing information throughout the network. This is because service providers usually choose not to leak routing information beyond the routing area or AS for scalability constraints and confidentiality concerns.

Need for Spanning Link-State Distribution

One of the limitations of IGP is its inability to span link-state distribution outside a single area or AS. However, spanning link-state information acquired by an IGP across multiple areas or ASs has the following needs:

- LSP path computation—This information is used to compute the path for MPLS LSPs across multiple routing domains, for example an inter-area TE LSP.
- External path computing entities—External path computing entities, such as Application Layer Traffic Optimization (ALTO) and Path Computation Elements (PCE), perform path computations based on the network topology and current state of connections within the network, including traffic engineering information. This information is typically distributed by IGPs within the network.

However, because the external path computing entities cannot extract this information from the IGPs, they perform network monitoring to optimize network services.

Using BGP as a Solution

IN THIS SECTION

- [Overview | 1070](#)
- [Implementation | 1071](#)

Overview

To meet the needs for spanning link-state distribution across multiple domains, an exterior gateway protocol (EGP) is required to collect link-state and traffic engineering information from an IGP area, share it with external component, and use it for computing paths for interdomain MPLS LSPs.

BGP is a standardized EGP designed to exchange routing and reachability information between autonomous systems (ASs). BGP is a proven protocol that has better scaling properties because it can distribute millions of entries (for example, VPN prefixes) in a scalable fashion. BGP is the only routing protocol in use today that is suited to carry all of the routes in the Internet. This is largely because BGP runs on top of TCP and can make use of TCP flow control. In contrast, the internal gateway protocols (IGPs) do not have flow control. When IGPs have too much route information, they begin to churn. When BGP has a neighboring speaker that is sending information too quickly, BGP can throttle down the neighbor by delaying TCP acknowledgments.

Another benefit of BGP is that it uses type, length, value (TLV) tuples and network layer reachability information (NLRI) that provide seemingly endless extensibility without the need for the underlying protocol to be altered.

The distribution of link-state information across domains is regulated using policies to protect the interests of the service provider. This requires a control over the topology distribution using policies. BGP with its implemented policy framework serves well in the interdomain route distribution. In Junos OS, BGP is completely policy driven. The operator must explicitly configure neighbors to peer with and explicitly accept routes into BGP. Furthermore, routing policy is used to filter and modify routing information. Thus, routing policies provide complete administrative control over the routing tables.

Although, within an AS, both IGP-TE and BGP-TE provide the same set of information, BGP-TE has better scaling characteristics that are inherited from the standard BGP protocol. This makes BGP-TE a more scalable choice for acquiring multi-area/multi-AS topology information.

By using BGP as a solution, the IGP-acquired information is used for distribution into BGP. The ISPs can selectively expose this information with other ISPs, service providers, and content distribution networks (CDNs) through normal BGP peering. This allows for aggregation of the IGP-acquired information across multiple areas and ASs, such that an external path computing entity can access the information by passively listening to a route reflector.


Implementation

IN THIS SECTION

- [Traffic Engineering Database Import | 1072](#)
- [Traffic Engineering Database Export | 1073](#)
- [Assigning Credibility Values | 1073](#)
- [Cross-Credibility Path Computation | 1074](#)
- [BGP-TE NLRIs and TLVs | 1074](#)

In Junos OS, the IGP's install topology information into a database called the traffic engineering database. The traffic engineering database contains the aggregated topology information. To install IGP topology information into traffic engineering database, use the **set igp-topology** configuration statement at the **[edit protocols isis traffic-engineering]** and **[edit protocols ospf traffic-engineering]** hierarchy levels. The mechanism to distribute link-state information using BGP includes the process of advertising the traffic engineering database into BGP-TE (import), and installing entries from BGP-TE into the traffic engineering database (export).

Figure 88: Junos OS Implementation of BGP Link-State Distribution

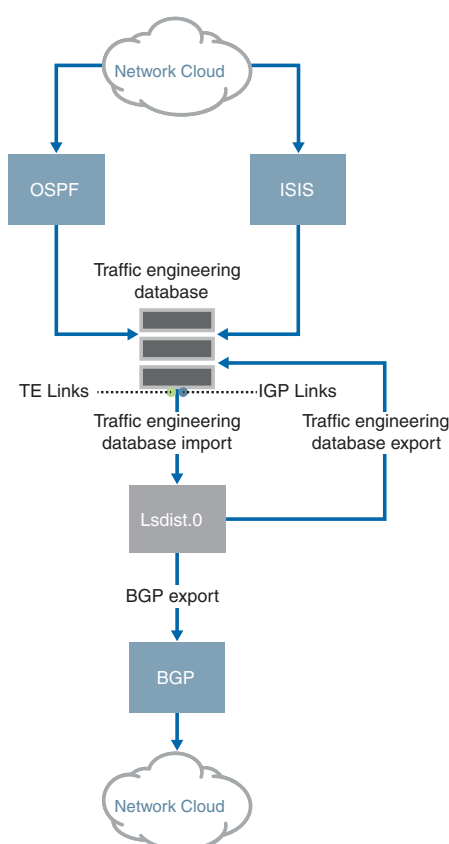

Traffic Engineering Database Import

To advertise the traffic engineering database into BGP-TE, the link and node entries in the traffic engineering database are converted in the form of routes. These converted routes are then installed by the traffic engineering database on behalf of the corresponding IGP, into a user-visible routing table called **Lsdist.0**, on conditions subject to route policies. The procedure of leaking entries from the traffic engineering database into **Lsdist.0** is called traffic engineering database import as illustrated in [Figure 88 on page 1072](#).

There are policies to govern the traffic engineering database import process. By default, no entries are leaked from the traffic engineering database into the **Lsdist.0** table.

Starting in Junos OS Release 17.4R1, the traffic engineering database installs interior gateway protocol (IGP) topology information in addition to RSVP-TE topology information in the **Isdist.0** routing table as illustrated in [Figure 88 on page 1072](#). Prior to Junos OS Release 17.4R1, the traffic engineering database only exported RSVP-TE topology information. Now you can monitor both IGP and traffic engineering topology information. The BGP-LS reads IGP entries from **Isdist.0** and advertises these entries to the BGP peers. To import IGP topology information into BGP-LS from **Isdist.0**, use the **set bgp-ls** configuration statement at the **[edit protocols mpls traffic-engineering database import igp-topology]** hierarchy level.

Traffic Engineering Database Export

BGP can be configured to export or advertise routes from the **Isdist.0** table, subject to policy. This is common for any kind of route origination in BGP. In order to advertise BGP-TE into the traffic engineering database, BGP needs to be configured with the BGP-TE address family, and an export policy that selects routes for redistribution into BGP.

BGP then propagates these routes like any other NLRI. BGP peers that have the BGP-TE family configured and negotiated receive BGP-TE NLRIs. BGP stores the received BGP-TE NLRIs in the form of routes in the **Isdist.0** table, which is the same table that stores locally originated BGP-TE routes. The BGP-installed routes in **Isdist.0** are then distributed to other peers like any other route. Thus, the standard route selection procedure applies to BGP-TE NLRIs received from multiple speakers.

To achieve interdomain TE, the routes in **Isdist.0** are leaked into the traffic engineering database through a policy. This process is called traffic engineering database export as illustrated in [Figure 88 on page 1072](#).

There are policies to govern the traffic engineering database export process. By default, no entries are leaked from the **Isdist.0** table into the traffic engineering database.

NOTE: For SDN applications, such as PCE and ALTO, the BGP-TE advertised information cannot leak into the traffic engineering database of a router. In such cases, an external server that peers with the routers using BGP-TE is used to move topology information up into the sky/orchestration system that spans the network. These external servers can be deemed as BGP-TE consumers, where they receive BGP-TE routes, but do not advertise them.

Assigning Credibility Values

Once the entries are installed in the traffic engineering database, the BGP-TE learned information is made available for CSPF path computation. The traffic engineering database uses a protocol preference scheme that is based on credibility values. A protocol with a higher credibility value is preferred over a protocol with a lower credibility value. BGP-TE has the capability to advertise information learned from multiple protocols at the same time, and so in addition to the IGP-installed entries in the traffic engineering database, there can be BGP-TE installed entries that correspond to more than one protocol. The traffic engineering database export component creates a traffic engineering database protocol and credibility level for each protocol that BGP-TE supports. These credibility values are configurable in the CLI.

The credibility order for the BGP-TE protocols is as follows:

- Unknown—80
- OSPF—81
- ISIS Level 1—82
- ISIS Level 2—83
- Static—84
- Direct—85

Cross-Credibility Path Computation

After you assign credibility values, each credibility level is treated as an individual plane. The Constrained Shorted Path First algorithm starts with the highest assigned credibility to the lowest, finding a path within that credibility level.

With BGP-TE, it is essential to compute paths across credibility levels to compute inter-AS paths. For example, different credibility settings are seen on a device from area 0 that computes the path through area 1, because area 0 entries are installed by OSPF, and area 1 entries are installed by BGP-TE.

To enable path computation across credibility levels, include the **cross-credibility-cspf** statement at the **edit protocols mpls**, **[edit protocols mpls label-switched-path lsp-name]**, and **[edit protocols rsvp]** hierarchy levels. At the **[edit protocols rsvp]** hierarchy level, enabling **cross-credibility-cspf** impacts bypass LSPs and loose hop expansion in transit.

Configuring **cross-credibility-cspf** enables path computation across credibility levels using the Constrained Shortest Path First algorithm, wherein the constraint is not performed on a credibility-by-credibility basis, but as a single constraint ignoring the assigned credibility values.

BGP-TE NLRIs and TLVs

Like other BGP routes, BGP-TE NLRIs can also be distributed through a route reflector that speaks BGP-TE NLRI. Junos OS implements the route reflection support for the BGP-TE family.

The following is a list of supported NLRIs:

- Link NLRI
- Node NLRI
- IPv4 Prefix NLRI (receive and propagate)
- IPv6 Prefix NLRI (receive and propagate)

NOTE: Junos OS does not provide support for the route-distinguisher form of the above NLRIs.

The following is a list of supported fields in link and node NLRIs:

- Protocol-ID—NLRI originates with the following protocol values:
 - ISIS-L1
 - ISIS-L2
 - OSPF
- Identifier—This value is configurable. By default, the identifier value is set to 0.
- Local/Remote node descriptor—These include:
 - Autonomous system
 - BGP-LS Identifier—This value is configurable. By default, the BGP-LS identifier value is set to 0
 - Area-ID
 - IGP router-ID
- Link descriptors (Only for link NLRI)—This includes:
 - Link Local/Remote Identifiers
 - IPv4 interface address
 - IPv4 neighbor address
 - IPv6 neighbor/interface address—The IPv6 neighbor and interface addresses are not originated, but only stored and propagated when received.
 - Multi-topology ID—This value is not originated, but stored and propagated when received.

The following is a list of supported LINK_STATE attribute TLVs:

- Link attributes:
 - Administrative group
 - Max link bandwidth
 - Max reservable bandwidth
 - Unreserved bandwidth
 - TE default metric
 - SRLG
- The following TLVs, which are not originated, but only stored and propagated when received:
 - Opaque link attributes
 - MPLS protocol mask
 - Metric

- Link protection type
- Link name attribute
- Node attributes:
 - IPv4 Router-ID
 - Node flag bits—Only the overload bit is set.
 - The following TLVs, which are not originated, but only stored and propagated when received:
 - Multi-topology
 - OSPF-specific node properties
 - Opaque node properties
 - Node name
 - IS-IS area identifier
 - IPv6 Router-ID
 - Prefix attributes—These TLVs are stored and propagated like any other unknown TLVs.

Supported and Unsupported Features

Junos OS supports the following features with link-state distribution using BGP:

- Advertisement of multiprotocol assured forwarding capability
- Transmission and reception of node and link-state BGP and BGP-TE NLRIs
- Nonstop active routing for BGP-TE NLRIs
- Policies

Junos OS does **not** support the following functionality for link-state distribution using BGP:

- Aggregated topologies, links, or nodes
- Route distinguisher support for BGP-TE NLRIs
- Multi-topology identifiers
- Multi-instance identifiers (excluding the default instance ID 0)
- Advertisement of the link and node area TLV
- Advertisement of MPLS signaling protocols
- Importing node and link information with overlapping address

BGP Link-State Extensions for Source Packet Routing in Networking (SPRING)

IN THIS SECTION

- [Source Packet Routing in Networking \(SPRING\) | 1077](#)
- [Flow of BGP Link-State SPRING Data | 1078](#)
- [Supported BGP Link-State Attributes and TLVs, and Unsupported Features for BGP Link-State with SPRING | 1079](#)

IN THIS SECTION

- [Source Packet Routing in Networking \(SPRING\) | 1077](#)
- [Flow of BGP Link-State SPRING Data | 1078](#)
- [Supported BGP Link-State Attributes and TLVs, and Unsupported Features for BGP Link-State with SPRING | 1079](#)

Starting in Junos OS Release 17.2R1, the BGP link-state address family is extended to distribute the source packet routing in networking (SPRING) topology information to software-defined networking (SDN) controllers. BGP typically learns the link-state information from IGP and distributes it to BGP peers. Besides BGP, the SDN controller can get link-state information directly from IGP if the controller is a part of an IGP domain. However, BGP link-state distribution provides a scalable mechanism to export the topology information. BGP link-state extensions for SPRING is supported on interdomain networks.

Source Packet Routing in Networking (SPRING)

SPRING is a control-plane architecture that enables an ingress router to steer a packet through a specific set of nodes and links in the network without relying on the intermediate nodes in the network to decide the actual path it must take. SPRING engages IGPs, such as IS-IS and OSPF, for advertising network segments. Network segments can represent any instruction, topological or service-based. Within IGP topologies, IGP segments are advertised by the link-state routing protocols. There are two types of IGP segments:

Adjacency segment—A one-hop path over a specific adjacency between two nodes in the IGP

Prefix segment—A multi-hop, equal-cost, multipath-aware shortest-path to a prefix, as per the state of the IGP topology


When SPRING is enabled in a BGP network, BGP link-state address family learns the SPRING information from the IGP link-state routing protocols and advertises segments in the form of segment identifiers (SIDs).

BGP link-state address family has been extended to carry SIDs and other SPRING-related information to BGP peers. The route reflector can steer a packet through a desired set of nodes and links by prepending the packet with an appropriate combination of tunnels. This feature allows BGP link-state address family to also advertise the SPRING information to BGP peers.

Flow of BGP Link-State SPRING Data

Figure 89 on page 1078 depicts the data flow of BGP link-state SPRING data that IS-IS pushes to the traffic engineering database.

Figure 89: BGP Link-State Source Packet Routing in Networking (SPRING)

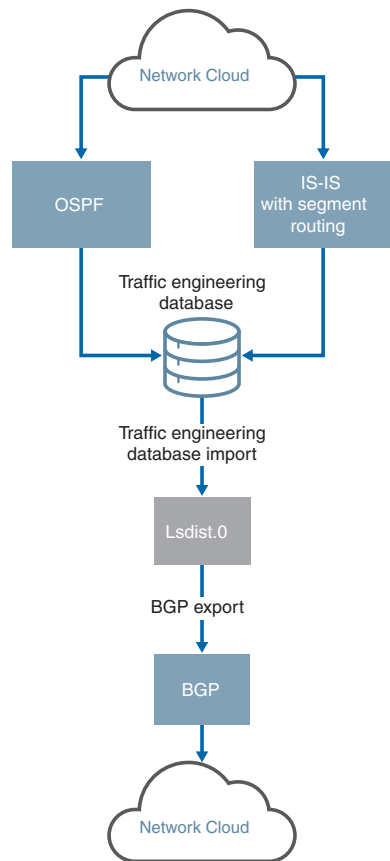

- IGP pushes the SPRING attributes to the traffic engineering database.
- SPRING capabilities and algorithm information are carried forward as node attributes into the traffic engineering database.
- Adjacent SID and LAN adjacent SID information are carried as link attributes.
- Prefix SID or node-SID information is carried as prefix attributes.
- A new set or a change to existing attributes triggers IGP updates to the traffic engineering database with new data.

- RSVP is a prerequisite for link attributes.



CAUTION: If traffic engineering is disabled at the IGP level, none of the attributes are pushed to the traffic engineering database.

- All parameters in the BGP traffic engineering NLRI, including the link, node, and prefix descriptors are derived from entries in the traffic engineering database.
- The traffic engineering database imports route entries into the **Isdist.0** routing table from IGP subject to policy.
- The default policy of BGP is to export routes, which are known to BGP only. You configure an export policy for non-BGP routes in the **Isdis.0** routing table. This policy advertises an entry learned from the traffic engineering database.

Supported BGP Link-State Attributes and TLVs, and Unsupported Features for BGP Link-State with SPRING

BGP link-state with SPRING supports the following attributes and type, length, and values (TLVs) that are originated, received, and propagated in the network:

Node attributes

- Segment routing Capabilities
- Segment routing Algorithm

Link attributes

- Adjacent-SID
- LAN Adjacent-SID

Prefix descriptors

- IP reachability information

Prefix attributes

- Prefix SID

The following list supports TLVs that are not originated, but only received and propagated in the network:

Prefix descriptors

- Multitopology ID
- OSPF route type

Prefix attributes

- Range

- Binding SID

Junos OS does not support the following features with BGP link-state with SPRING extensions:

- IPv6 prefix origination
- Multitopology identifiers
- Traffic engineering database export for SPRING parameters
- New TLVs with tcpdump (existing TLVs are also not supported).
- SPRING over IPv6

Verifying NLRI Node Learned Through BGP with OSPF as IGP

The following is a sample output to verify the NLRI node learned through BGP with OSPF as the IGP:

Purpose

Verify the lsdist.0 routing table entries.

Action

From operational mode, run the **show route table lsdist.0** command.

user@host> **show route table lsdist.0 te-node-ip 7.7.7.7 extensive**

```
lsdist.0: 216 destinations, 216 routes (216 active, 0 holddown, 0 hidden)
NODE { AS:100 Area:0.0.0.1 IPv4:7.7.7.7 OSPF:0 }/1536 (1 entry, 1 announced)
TSI:
LINK-STATE attribute handle 0x61d5da0
    *BGP      Preference: 170/-101
              Next hop type: Indirect, Next hop index: 0
              Address: 0x61b07cc
              Next-hop reference count: 216
              Source: 2.2.2.2
              Protocol next hop: 2.2.2.2
              Indirect next hop: 0x2 no-forward INH Session ID: 0x0
              State:<Active Int Ext>
              Local AS:   100 Peer AS:   100
              Age: 30:22      Metric2: 2
              Validation State: unverified
              Task: BGP_100.2.2.2.2
              Announcement bits (1): 0-TED Export
              AS path: I
              Accepted
              Area border router: No
              External router: No
```



```

Attached: No
Overload: No
SPRING-Capabilities:
  - SRGB block [Start: 900000, Range: 90000, Flags: 0x00]
SPRING-Algorithms:
  - Algo: 0
Localpref: 100
Router ID: 2.2.2.2
Indirect next hops: 1
  Protocol next hop: 2.2.2.2 Metric: 2
  Indirect next hop: 0x2 no-forward INH Session ID: 0x0
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 11.1.1.2 via et-0/0/0.1 weight 0x1
    Session Id: 0x143
    2.2.2.2/32 Originating RIB: inet.0
    Metric: 2      Node path count: 1
    Forwarding nexthops: 1
      Nexthop: 11.1.1.2 via et-0/0/0.1
      Session Id: 143

```

Meaning

The routes are appearing in the lsdist.0 routing table.

Verifying the Prefix NLRI Learned Through BGP with OSPF as IGP

The following is a sample output to verify the prefix NLRI learned through BGP with OSPF as the IGP:

Purpose

Verify the lsdist.0 routing table entries.

Action

From operational mode, run the **show route table lsdist.0** command.

user@host> **show route table lsdist.0 te-ipv4-prefix-node-ip 7.7.7.7 extensive**

```

lsdist.0: 216 destinations, 216 routes (216 active, 0 holddown, 0 hidden)
PREFIX { Node { AS:100 Area:0.0.0.1 IPv4:7.7.7.7 } { IPv4:7.7.7.7/32 } OSPF:0
}/1536 (1 entry, 0 announced)
  *BGP      Preference: 170/-101
            Next hop type: Indirect, Next hop index: 0
            Address: 0x61b07cc
            Next-hop reference count: 216

```

```

Source: 2.2.2.2
Protocol next hop: 2.2.2.2
Indirect next hop: 0x2 no-forward INH Session ID: 0x0
State: <Active Int Ext>
Local AS: 100 Peer AS: 100
Age: 30:51 Metric2: 2
Validation State: unverified
Task: BGP_100.2.2.2.2
AS path: I
Accepted
Prefix Flags: 0x00, Prefix SID: 1007, Flags: 0x50, Algo: 0
Localpref: 100
Router ID: 2.2.2.2
Indirect next hops: 1
    Protocol next hop: 2.2.2.2 Metric: 2
    Indirect next hop: 0x2 no-forward INH Session ID: 0x0
    Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 11.1.1.2 via et-0/0/0.1 weight 0x1
        Session Id: 0x143
        2.2.2.2/32 Originating RIB: inet.0
        Metric: 2 Node path count: 1
        Forwarding nexthops: 1
            Nexthop: 11.1.1.2 via et-0/0/0.1
            Session Id: 143

```

Meaning

The routes are appearing in the lsdist.0 routing table.

Example: Configuring Link State Distribution Using BGP

IN THIS SECTION

- Requirements | 1083
- Overview | 1083
- Configuration | 1084
- Verification | 1098

This example shows how to configure BGP to carry link-state information across multiple domains, which is used for computing paths for MPLS LSPs spanning multiple domains, such as inter-area TE LSP, and providing a scalable and policy-controlled means for external path computing entities, such as ALTO and PCE, to acquire network topology.

Requirements

This example uses the following hardware and software components:

- Four routers that can be a combination of M Series, MX Series, or T Series routers
- Junos OS Release 14.2 or later running on all the routers

Before you begin:

1. Configure the device interfaces.
2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
 - RSVP
 - MPLS
 - BGP
 - IS-IS
 - OSPF


Overview

Starting with Junos OS Release 14.2, a new mechanism to distribute topology information across multiple areas and autonomous systems (ASs) is introduced by extending the BGP protocol to carry link -state information, which was initially acquired using IGP. The IGP protocols have scaling limitations when it comes to distributing large databases. BGP is not only a more scalable vehicle for carrying multi-area and multi-AS topology information, but also provides the policy controls that can be useful for multi-AS topology distribution. The BGP link-state topology information is used for computing paths for MPLS label-switched paths (LSPs) spanning multiple domains, such as inter-area TE LSP, and providing a scalable and policy-controlled means for external path computing entities, such as ALTO and PCE, to acquire network topology.

Starting with Junos OS Release 17.1R1, link state distribution using BGP is supported on QFX10000 switches.

Topology

Figure 90: Link-State Distribution Using BGP

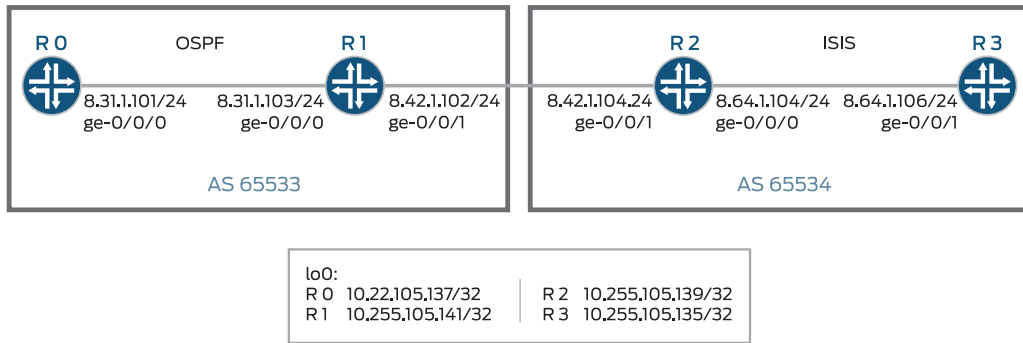

In [Figure 90 on page 1084](#), Routers R0 and R1 and Routers R2 and R3 belong to different autonomous systems. Routers R0 and R1 run OSPF, and Routers R2 and R3 run IS-IS.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

R0

```
set interfaces ge-0/0/0 unit 0 family inet address 8.31.1.101/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.105.137/32
set routing-options router-id 10.255.105.137
set routing-options autonomous-system 65533
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering database export policy accept-all
set protocols mpls cross-credibility-cspf
set protocols mpls label-switched-path to-R3-inter-as to 10.255.105.135
set protocols mpls label-switched-path to-R3-inter-as bandwidth 40m
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.105.137
```

```

set protocols bgp group ibgp family traffic-engineering unicast
set protocols bgp group ibgp neighbor 10.255.105.141
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set policy-options policy-statement accept-all from family traffic-engineering
set policy-options policy-statement accept-all then accept

```

R1

```

set interfaces ge-0/0/0 unit 0 family inet address 8.31.1.103/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 8.42.1.102/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.105.141/32
set routing-options router-id 10.255.105.141
set routing-options autonomous-system 65533
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.105.141
set protocols bgp group ibgp family traffic-engineering unicast
set protocols bgp group ibgp export nlri2bgp
set protocols bgp group ibgp neighbor 10.255.105.137
set protocols bgp group ebgp type external
set protocols bgp group ebgp family traffic-engineering unicast
set protocols bgp group ebgp neighbor 8.42.1.104 local-address 8.42.1.102
set protocols bgp group ebgp neighbor 8.42.1.104 peer-as 65534
set protocols isis interface ge-0/0/1.0 passive remote-node-iso 0102.5502.4211
set protocols isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.104
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-id
  8.42.1.104

```

```

set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-router-id
  10.255.105.139
set policy-options policy-statement accept-all from family traffic-engineering
set policy-options policy-statement accept-all then accept
set policy-options policy-statement nlri2bgp term 1 from family traffic-engineering
set policy-options policy-statement nlri2bgp term 1 then accept

```

R2

```

set interfaces ge-0/0/0 unit 0 family inet address 8.64.1.104/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 8.42.1.104/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.105.139/32
set interfaces lo0 unit 0 family iso
set routing-options router-id 10.255.105.139
set routing-options autonomous-system 65534
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering database import policy ted2nlri
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group ebgp type external
set protocols bgp group ebgp family traffic-engineering unicast
set protocols bgp group ebgp export nlri2bgp
set protocols bgp group ebgp peer-as 65533
set protocols bgp group ebgp neighbor 8.42.1.102
set protocols isis level 1 disable
set protocols isis interface ge-0/0/0.0
set protocols isis interface ge-0/0/1.0 passive remote-node-iso 0102.5501.8181
set protocols isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.102
set protocols isis interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-id
  8.42.1.102
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-router-id
  10.255.105.141
set policy-options policy-statement accept-all from family traffic-engineering

```

```

set policy-options policy-statement accept-all then accept
set policy-options policy-statement nlri2bgp term 1 from family traffic-engineering
set policy-options policy-statement nlri2bgp term 1 then accept
set policy-options policy-statement ted2nlri term 1 from protocol isis
set policy-options policy-statement ted2nlri term 1 from protocol ospf
set policy-options policy-statement ted2nlri term 1 then accept
set policy-options policy-statement ted2nlri term 2 then reject

```

R3

```

set interfaces ge-0/0/0 unit 0 family inet address 8.64.1.106/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.105.135/32
set interfaces lo0 unit 0 family iso
set routing-options router-id 10.255.105.135
set routing-options autonomous-system 65534
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering database export policy accept-all
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.105.135
set protocols bgp group ibgp family traffic-engineering unicast
set protocols bgp group ibgp neighbor 10.255.105.139
set protocols isis interface ge-0/0/0.0 level 1 disable
set protocols isis interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set policy-options policy-statement accept-all from family traffic-engineering
set policy-options policy-statement accept-all then accept

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Router R1:

1. Configure the Router R1 interfaces.

```
[edit interfaces]
user@R1# set ge-0/0/0 unit 0 family inet address 8.31.1.103/24
user@R1# set ge-0/0/0 unit 0 family iso
user@R1# set ge-0/0/0 unit 0 family mpls
user@R1# set ge-0/0/1 unit 0 family inet address 8.42.1.102/24
user@R1# set ge-0/0/1 unit 0 family iso
user@R1# set ge-0/0/1 unit 0 family mpls
user@R1# set lo0 unit 0 family inet address 10.255.105.141/32
```

2. Configure the router ID and autonomous system of Router R1.

```
[edit routing-options]
user@R1# set router-id 10.255.105.141
user@R1# set autonomous-system 65533
```

3. Enable RSVP on all the interfaces of Router R1 (excluding the management interface).

```
[edit protocols]
user@R1# set rsvp interface all
user@R1# set rsvp interface fxp0.0 disable
```

4. Enable MPLS on all the interfaces of Router R1 (excluding the management interface).

```
[edit protocols]
user@R1# set mpls interface all
user@R1# set mpls interface fxp0.0 disable
```

5. Configure the BGP group for Router R1 to peer with Router R0, and assign the local address and neighbor address.

```
[edit protocols]
user@R1# set bgp group ibgp type internal
user@R1# set bgp group ibgp local-address 10.255.105.141
user@R1# set bgp group ibgp neighbor 10.255.105.137
```


6. Include the BGP-TE signaling network layer reachability information (NLRI) to the ibgp BGP group.

```
[edit protocols]
user@R1# set bgp group ibgp family traffic-engineering unicast
```

7. Enable export of policy nlri2bgp on Router R1.

```
[edit protocols]
user@R1# set bgp group ibgp export nlri2bgp
```

8. Configure the BGP group for Router R1 to peer with Router R2, and assign the local address and neighbor autonomous system to the ebgp BGP group.

```
[edit protocols]
user@R1# set bgp group ebgp type external
user@R1# set bgp group ebgp neighbor 8.42.1.104 local-address 8.42.1.102
user@R1# set bgp group ebgp neighbor 8.42.1.104 peer-as 65534
```

9. Include the BGP-TE signaling NLRI to the ebgp BGP group.

```
[edit protocols]
user@R1# set bgp group ebgp family traffic-engineering unicast
```

10. Enable passive traffic-engineering on the inter-AS link.

```
[edit protocols]
user@R1# set isis interface ge-0/0/1.0 passive remote-node-iso 0102.5502.4211
user@R1# set isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.104
```

11. Enable OSPF on the interface connecting Router R1 to Router R0 and on the loopback interface of Router R1, and enable traffic engineering capabilities.

```
[edit protocols]
user@R1# set ospf traffic-engineering
user@R1# set ospf area 0.0.0.0 interface lo0.0
user@R1# set ospf area 0.0.0.0 interface ge-0/0/0.0
```

12. Enable passive traffic-engineering on the inter-AS link.

```
[edit protocols]
```

```
user@R1# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-id 8.42.1.104
```

```
user@R1# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-router-id
10.255.105.139
```

13. Configure policies to accept traffic from BGP-TE NLRI.

```
[edit policy-options]
```

```
user@R1# set policy-statement accept-all from family traffic-engineering
```

```
user@R1# set policy-statement accept-all then accept
```

```
user@R1# set policy-statement nlri2bgp term 1 from family traffic-engineering
```

```
user@R1# set policy-statement nlri2bgp term 1 then accept
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show interfaces
```

```
ge-0/0/0 {
```

```
  unit 0 {
```

```
    family inet {
```

```
      address 8.31.1.103/24;
```

```
    }
```

```
    family iso;
```

```
    family mpls;
```

```
  }
```

```
}
```

```
ge-0/0/1 {
```

```
  unit 0 {
```

```
    family inet {
```

```
      address 8.42.1.102/24;
```

```
    }
```

```
    family iso;
```

```
    family mpls;
```

```
  }
```

```
}
```

```
lo0 {
```

```
  unit 0 {
```

```
    family inet {
```

```
      address 10.255.105.141/32;
```

```
    }
```

```

    }
}

```

```

user@R1# show routing-options
router-id 10.255.105.141;
autonomous-system 65533;

```

```

user@R1# show protocols
rsvp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
mpls {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
bgp {
    group ibgp {
        type internal;
        local-address 10.255.105.141;
        family traffic-engineering {
            unicast;
        }
        export nlri2bgp;
        neighbor 10.255.105.137;
    }
    group ebgp {
        type external;
        family traffic-engineering {
            unicast;
        }
        neighbor 8.42.1.104 {
            local-address 8.42.1.102;
            peer-as 65534;
        }
    }
}
isis {
    interface ge-0/0/1.0 {

```

```

    passive {
        remote-node-iso 0102.5502.4211;
        remote-node-id 8.42.1.104;
    }
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface lo0.0;
        interface ge-0/0/0.0;
        interface ge-0/0/1.0 {
            passive {
                traffic-engineering {
                    remote-node-id 8.42.1.104;
                    remote-node-router-id 10.255.105.139;
                }
            }
        }
    }
}
}

```

```

user@R1# show policy-options
policy-statement accept-all {
    from family traffic-engineering;
    then accept;
}
policy-statement nlri2bgp {
    term 1 {
        from family traffic-engineering;
        then {
            accept;
        }
    }
}

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Router R2:

1. Configure the Router R2 interfaces.

```
[edit interfaces]
user@R2# set ge-0/0/0 unit 0 family inet address 8.64.1.104/24
user@R2# set ge-0/0/0 unit 0 family iso
user@R2# set ge-0/0/0 unit 0 family mpls
user@R2# set ge-0/0/1 unit 0 family inet address 8.42.1.104/24
user@R2# set ge-0/0/1 unit 0 family iso
user@R2# set ge-0/0/1 unit 0 family mpls
user@R2# set lo0 unit 0 family inet address 10.255.105.139/32
user@R2# set lo0 unit 0 family iso
```

2. Configure the router ID and autonomous system of Router R2.

```
[edit routing-options]
user@R2# set router-id 10.255.105.139
user@R2# set autonomous-system 65534
```

3. Enable RSVP on all the interfaces of Router R2 (excluding the management interface).

```
[edit routing-options]
user@R2# set rsvp interface all
user@R2# set rsvp interface fxp0.0 disable
```

4. Enable MPLS on all the interfaces of Router R2 (excluding the management interface).

```
[edit routing-options]
user@R2# set mpls interface all
user@R2# set mpls interface fxp0.0 disable
```

5. Enable import of traffic engineering database parameters using the ted2nlri policy.

```
[edit protocols]
user@R2# set mpls traffic-engineering database import policy ted2nlri
```

6. Configure the BGP group for Router R2 to peer with Router R1.

```
[edit protocols]
user@R2# set bgp group ebgp type external
```

7. Include the BGP-TE signaling NLRI to the ebgp BGP group.

```
[edit protocols]
user@R2# set bgp group ebgp family traffic-engineering unicast
```

8. Assign the local address and neighbor autonomous system to the ebgp BGP group.

```
[edit protocols]
user@R2# set bgp group ebgp peer-as 65533
user@R2# set bgp group ebgp neighbor 8.42.1.102
```

9. Enable export of policy nlri2bgp on Router R2.

```
[edit protocols]
user@R2# set bgp group ebgp export nlri2bgp
```

10. Enable IS-IS on the interface connecting Router R2 with Router R3 and the loopback interface of Router R2.

```
[edit protocols]
user@R2# set isis level 1 disable
user@R2# set isis interface ge-0/0/0.0
user@R2# set isis interface lo0.0
```

11. Enable only IS-IS advertising on the interface connecting Router R2 with Router R1.

```
[edit protocols]
user@R2# set isis interface ge-0/0/1.0 passive remote-node-iso 0102.5501.8181
user@R2# set isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.102
```

12. Configure traffic engineering capability on Router R2.

```
[edit protocols]
user@R2# set ospf traffic-engineering
```

13. Enable only OSPF advertisements on the interface connecting Router R2 with Router R1.

```
[edit protocols]
```

```

user@R2# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-id 8.42.1.102
user@R2# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-router-id
10.255.105.141

```

14. Configure policies to accept traffic from the BGP-TE NLRI.

```

[edit policy-options]
user@R2# set policy-statement accept-all from family traffic-engineering
user@R2# set policy-statement accept-all then accept
user@R2# set policy-statement nlri2bgp term 1 from family traffic-engineering
user@R2# set policy-statement nlri2bgp term 1 then accept
user@R2# set policy-statement ted2nlri term 1 from protocol isis
user@R2# set policy-statement ted2nlri term 1 from protocol ospf
user@R2# set policy-statement ted2nlri term 1 then accept
user@R2# set policy-statement ted2nlri term 2 then reject

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@R2# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 8.64.1.104/24;
    }
    family iso;
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 8.42.1.104/24;
    }
    family iso;
    family mpls;
  }
}
lo0 {
  unit 0 {

```

```

    family inet {
        address 10.255.105.139/32;
    }
    family iso;
}
}

```

```

user@R2# show routing-options
router-id 10.255.105.139;
autonomous-system 65534;

```

```

user@R2# show protocols
rsvp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
mpls {
    traffic-engineering {
        database {
            import {
                policy ted2nlri;
            }
        }
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
}
bgp {
    group ebgp {
        type external;
        family traffic-engineering {
            unicast;
        }
        export nlri2bgp;
        peer-as 65533;
        neighbor 8.42.1.102;
    }
}
isis {

```



```

level 1 disable;
interface ge-0/0/0.0;
interface ge-0/0/1.0 {
    passive {
        remote-node-iso 0102.5501.8181;
        remote-node-id 8.42.1.102;
    }
}
interface lo0.0;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-0/0/1.0 {
            passive {
                traffic-engineering {
                    remote-node-id 8.42.1.102;
                    remote-node-router-id 10.255.105.141;
                }
            }
        }
    }
}
}

```

```

user@R2# show policy-options
policy-statement accept-all {
    from family traffic-engineering;
    then accept;
}
policy-statement nlri2bgp {
    term 1 {
        from family traffic-engineering;
        then {
            accept;
        }
    }
}
policy-statement ted2nlri {
    term 1 {
        from protocol [ isis ospf ];
        then accept;
    }
    term 2 {
        then reject;
    }
}

```

```
}  
}
```

Verification

IN THIS SECTION

- [Verifying the BGP Summary Status | 1098](#)
- [Verifying the MPLS LSP Status | 1099](#)
- [Verifying the Isdist.0 Routing Table Entries | 1099](#)
- [Verifying the Traffic Engineering Database Entries | 1103](#)

Verify that the configuration is working properly.

Verifying the BGP Summary Status

Purpose

Verify that BGP is up and running on Routers R0 and R1.

Action

From operational mode, run the **show bgp summary** command.

```
user@R0> show bgp summary
```

```
Groups: 1 Peers: 1 Down peers: 0  
Table          Tot Paths  Act Paths Suppressed    History Damp State    Pending  
lsdist.0  
              10         10         0         0         0         0  
Peer          AS      InPkt   OutPkt   OutQ   Flaps Last Up/Dwn  
State|#Active/Received/Accepted/Damped...  
10.255.105.141 65533      20      14       0       79      5:18  
Establ  
lsdist.0: 10/10/10/0
```

From operational mode, run the **show bgp summary** command.

```
user@R1> show bgp summary
```

```

Groups: 2 Peers: 2 Down peers: 0
Table          Tot Paths  Act Paths Suppressed    History Damp State    Pending
lsdist.0
              10         10         0         0         0         0
Peer          AS         InPkt    OutPkt    OutQ    Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
8.42.1.104      65534         24         17         0         70         6:43
Establ
  lsdist.0: 10/10/10/0
10.255.105.137  65533         15         23         0         79         6:19
Establ
  lsdist.0: 0/0/0/0

```

Meaning

Router R0 is peered with Router R1.

Verifying the MPLS LSP Status

Purpose

Verify the status of the MPLS LSP on Router R0.

Action

From operational mode, run the **show mpls lsp** command.

```
user@R0> show mpls lsp
```

```

Ingress LSP: 1 sessions
To          From          State Rt P    ActivePath    LSPname
10.255.105.135 10.255.105.137 Up      0 *           to-R3-inter-as
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The MPLS LSP from Router R0 to Router R3 is established.

Verifying the lsdist.0 Routing Table Entries

Purpose

Verify the Isdist.0 routing table entries on Routers R0, R1, and R2.

Action

From operational mode, run the **show route table Isdist.0** command.

user@R0> **show route table Isdist.0**

```
Isdist.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

NODE { AS:65534 ISO:0102.5502.4211.00 ISIS-L2:0 }/1152
    *[BGP/170] 00:17:32, localpref 100, from 10.255.105.141
    AS path: 65534 I, validation-state: unverified
    > to 8.31.1.103 via ge-0/0/0.0
NODE { AS:65534 ISO:0102.5502.4250.00 ISIS-L2:0 }/1152
    *[BGP/170] 00:17:32, localpref 100, from 10.255.105.141
    AS path: 65534 I, validation-state: unverified
    > to 8.31.1.103 via ge-0/0/0.0
NODE { AS:65534 ISO:0102.5502.4250.02 ISIS-L2:0 }/1152
    *[BGP/170] 00:17:32, localpref 100, from 10.255.105.141
    AS path: 65534 I, validation-state: unverified
    > to 8.31.1.103 via ge-0/0/0.0
NODE { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 OSPF:0 }/1152
    *[BGP/170] 00:17:32, localpref 100, from 10.255.105.141
    AS path: 65534 I, validation-state: unverified
    > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.42.1.104 } Remote {
AS:65534 ISO:0102.5501.8181.00 }.{ IPv4:8.42.1.102 } ISIS-L2:0 }/1152
    *[BGP/170] 00:17:32, localpref 100, from 10.255.105.141
    AS path: 65534 I, validation-state: unverified
    > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.64.1.104 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
    *[BGP/170] 00:02:03, localpref 100, from 10.255.105.141
    AS path: 65534 I, validation-state: unverified
    > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4250.00 }.{ IPv4:8.64.1.106 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
    *[BGP/170] 00:17:32, localpref 100, from 10.255.105.141
    AS path: 65534 I, validation-state: unverified
    > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4211.00 }.{ } ISIS-L2:0 }/1152
```

```

        *[BGP/170] 00:17:32, localpref 100, from 10.255.105.141
        AS path: 65534 I, validation-state: unverified
        > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4250.00 }.{ } ISIS-L2:0 }/1152
        *[BGP/170] 00:17:32, localpref 100, from 10.255.105.141
        AS path: 65534 I, validation-state: unverified
        > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 }.{ IPv4:8.42.1.104 }
Remote { AS:65534 Area:0.0.0.0 IPv4:10.255.105.141 }.{ IPv4:8.42.1.102 } OSPF:0
}/1152
        *[BGP/170] 00:17:32, localpref 100, from 10.255.105.141
        AS path: 65534 I, validation-state: unverified
        > to 8.31.1.103 via ge-0/0/0.0

```

From operational mode, run the **show route table lsdist.0** command.

user@R1> **show route table lsdist.0**

```

lsdist.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

NODE { AS:65534 ISO:0102.5502.4211.00 ISIS-L2:0 }/1152
        *[BGP/170] 00:18:00, localpref 100
        AS path: 65534 I, validation-state: unverified
        > to 8.42.1.104 via ge-0/0/1.0
NODE { AS:65534 ISO:0102.5502.4250.00 ISIS-L2:0 }/1152
        *[BGP/170] 00:18:00, localpref 100
        AS path: 65534 I, validation-state: unverified
        > to 8.42.1.104 via ge-0/0/1.0
NODE { AS:65534 ISO:0102.5502.4250.02 ISIS-L2:0 }/1152
        *[BGP/170] 00:18:00, localpref 100
        AS path: 65534 I, validation-state: unverified
        > to 8.42.1.104 via ge-0/0/1.0
NODE { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 OSPF:0 }/1152
        *[BGP/170] 00:18:00, localpref 100
        AS path: 65534 I, validation-state: unverified
        > to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.42.1.104 } Remote {
AS:65534 ISO:0102.5501.8181.00 }.{ IPv4:8.42.1.102 } ISIS-L2:0 }/1152

        *[BGP/170] 00:18:00, localpref 100
        AS path: 65534 I, validation-state: unverified

```

```

> to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.64.1.104 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
*[BGP/170] 00:02:19, localpref 100
AS path: 65534 I, validation-state: unverified
> to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4250.00 }.{ IPv4:8.64.1.106 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
*[BGP/170] 00:18:00, localpref 100
AS path: 65534 I, validation-state: unverified
> to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4211.00 }.{ } ISIS-L2:0 }/1152
*[BGP/170] 00:18:00, localpref 100
AS path: 65534 I, validation-state: unverified
> to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4250.00 }.{ } ISIS-L2:0 }/1152
*[BGP/170] 00:18:00, localpref 100
AS path: 65534 I, validation-state: unverified
> to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 }.{ IPv4:8.42.1.104 }
Remote { AS:65534 Area:0.0.0.0 IPv4:10.255.105.141 }.{ IPv4:8.42.1.102 } OSPF:0
}/1152
*[BGP/170] 00:18:00, localpref 100
AS path: 65534 I, validation-state: unverified
> to 8.42.1.104 via ge-0/0/1.0

```

From operational mode, run the **show route table lsdist.0** command.

user@R2> **show route table lsdist.0**

```

lsdist.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

NODE { AS:65534 ISO:0102.5502.4211.00 ISIS-L2:0 }/1152
*[IS-IS/18] 1d 00:24:39
Fictitious
NODE { AS:65534 ISO:0102.5502.4250.00 ISIS-L2:0 }/1152
*[IS-IS/18] 00:20:45
Fictitious
NODE { AS:65534 ISO:0102.5502.4250.02 ISIS-L2:0 }/1152
*[IS-IS/18] 00:20:45

```

```

Fictitious
NODE { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 OSPF:0 }/1152
      *[OSPF/10] 1d 00:24:39
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.42.1.104 } Remote {
AS:65534 ISO:0102.5501.8181.00 }.{ IPv4:8.42.1.102 } ISIS-L2:0 }/1152

      *[IS-IS/18] 00:20:58
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.64.1.104 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
      *[IS-IS/18] 00:02:34
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4250.00 }.{ IPv4:8.64.1.106 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
      *[IS-IS/18] 00:20:45
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4211.00 }.{ } ISIS-L2:0 }/1152
      *[IS-IS/18] 00:20:45
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4250.00 }.{ } ISIS-L2:0 }/1152
      *[IS-IS/18] 00:20:45
Fictitious
LINK { Local { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 }.{ IPv4:8.42.1.104 }
Remote { AS:65534 Area:0.0.0.0 IPv4:10.255.105.141 }.{ IPv4:8.42.1.102 } OSPF:0
}/1152
      *[OSPF/10] 00:20:57
Fictitious

```

Meaning

The routes are appearing in the lsdist.0 routing table.

Verifying the Traffic Engineering Database Entries

Purpose

Verify the traffic engineering database entries on Router R0.

Action

From operational mode, run the **show ted database** command.

```
user@R0> show ted database
```

```

TED database: 5 ISIS nodes 5 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
0102.5501.8168.00(10.255.105.137) Rtr   1046    1    1 OSPF(0.0.0.0)
    To: 8.31.1.101-1, Local: 8.31.1.101, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
0102.5501.8181.00                ---   1033    1    0
0102.5502.4211.00(10.255.105.139) Rtr   3519    2    3 Exported ISIS-L2(1)
    To: 0102.5502.4250.02, Local: 8.64.1.104, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: 0102.5501.8181.00, Local: 8.42.1.104, Remote: 8.42.1.102
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
                                Exported OSPF(2)
    To: 10.255.105.141, Local: 8.42.1.104, Remote: 8.42.1.102
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
0102.5502.4250.00(10.255.105.135) Rtr   1033    1    1 Exported ISIS-L2(1)
    To: 0102.5502.4250.02, Local: 8.64.1.106, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
0102.5502.4250.02                Net   1033    2    2 Exported ISIS-L2(1)
    To: 0102.5502.4211.00(10.255.105.139), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: 0102.5502.4250.00(10.255.105.135), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
8.31.1.101-1                     Net   1046    2    2 OSPF(0.0.0.0)
    To: 0102.5501.8168.00(10.255.105.137), Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: 10.255.105.141, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.105.141                   Rtr   1045    2    2 OSPF(0.0.0.0)
    To: 0102.5502.4211.00(10.255.105.139), Local: 8.42.1.102, Remote: 8.42.1.104
    Local interface index: 0, Remote interface index: 0
    To: 8.31.1.101-1, Local: 8.31.1.103, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0

```

Meaning

The routes are appearing in the traffic engineering database.

Configuring Link State Distribution Using BGP

You can enable distribution of topology information across multiple areas and autonomous systems (ASs) by extending the BGP protocol to carry link-state information, which was initially acquired using IGP. The IGP protocols have scaling limitations when it comes to distributing large databases. BGP is not only a more scalable vehicle for carrying multi-area and multi-AS topology information, but also provides the policy controls that can be useful for multi-AS topology distribution. The BGP link-state topology information is used for computing paths for MPLS LSPs spanning multiple domains, such as inter-area TE LSP, and providing a scalable and policy-controlled means for external path computing entities, such as ALTO and PCE, to acquire network topology.

Before you begin:

1. Configure the device interfaces.
2. Configure the router ID and autonomous system number for the device.
3. Configure the following protocols:
 - RSVP
 - MPLS
 - IS-IS
 - OSPF

To enable link-state distribution using BGP:

1. Configure an internal BGP group, and assign the local address and neighbor address for the group.

```
[edit protocols]
user@R1# set bgp group internal-group-name type internal
user@R1# set bgp group internal-group-name local-address ip-address
user@R1# set bgp group internal-group-name neighbor ip-address
```

2. Include the BGP-TE signaling network layer reachability information (NLRI) to the internal BGP group.

```
[edit protocols]
user@R1# set bgp group internal-group-name family traffic-engineering unicast
```

3. Enable export of policy on the device.

```
[edit protocols]
user@R1# set bgp group internal-group-name export second-policy-name
```

4. Configure an external BGP group, and assign the local address and neighbor autonomous system to the group.

```
[edit protocols]
user@R1# set bgp group external-group-name type external
user@R1# set bgp group external-group-name neighbor ip-address local-address ip-address
user@R1# set bgp group external-group-name neighbor ip-address peer-as as-number
```

5. Include the BGP-TE signaling NLRI to the external BGP group.

```
[edit protocols]
user@R1# set bgp group external-group-name family traffic-engineering unicast
```

6. In configuration mode, go to the following hierarchy level:

```
[edit]
user@R1# edit policy-options
```

7. Configure policies to accept traffic from the BGP-TE NLRI.

```
[edit policy-options]
user@R1# set policy-statement policy-name from family traffic-engineering
user@R1# set policy-statement policy-name then accept
user@R1# set policy-statement bgp-import-policy term 1 from family traffic-engineering
user@R1# set policy-statement bgp-import-policy term 1 then next-hop self
user@R1# set policy-statement bgp-import-policy term 1 then accept
```

8. On the remote connecting device, configure policy to accept the OSPF and IS-IS traffic.

```
[edit policy-options]
user@R2# set policy-statement bgp-export-policy term 1 from protocol isis
user@R2# set policy-statement bgp-export-policy term 1 from protocol ospf
user@R2# set policy-statement bgp-export-policy term 1 then accept
user@R2# set policy-statement bgp-export-policy term 2 then reject
```

9. Verify and commit the configuration.

For example:

R1

[edit protocols]

```

user@R1# set rsvp interface all
user@R1# set rsvp interface fxp0.0 disable
user@R1# set mpls interface all
user@R1# set mpls interface fxp0.0 disable
user@R1# set bgp group ibgp type internal
user@R1# set bgp group ibgp local-address 10.255.105.141
user@R1# set bgp group ibgp family traffic-engineering unicast
user@R1# set bgp group ibgp export nlri2bgp
user@R1# set bgp group ibgp neighbor 10.255.105.137
user@R1# set bgp group ebgp type external
user@R1# set bgp group ebgp family traffic-engineering unicast
user@R1# set bgp group ebgp neighbor 8.42.1.104 local-address 8.42.1.102
user@R1# set bgp group ebgp neighbor 8.42.1.104 peer-as 65534
user@R1# set isis interface ge-0/0/1.0 passive remote-node-iso 0102.5502.4211
user@R1# set isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.104
user@R1# set ospf traffic-engineering
user@R1# set ospf area 0.0.0.0 interface lo0.0
user@R1# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@R1# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-id 8.42.1.104
user@R1# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering remote-node-router-id
10.255.105.139

```

[edit policy-options]

```

user@R1# set policy-statement accept-all from family traffic-engineering
user@R1# set policy-statement accept-all then accept
user@R1# set policy-statement nlri2bgp term 1 from family traffic-engineering
user@R1# set policy-statement nlri2bgp term 1 then next-hop self
user@R1# set policy-statement nlri2bgp term 1 then accept

```

[edit]

```

user@R1# commit
commit complete

```

R2

[edit policy-options]

```

user@R2# set policy-statement accept-all from family traffic-engineering
user@R2# set policy-statement accept-all then accept
user@R2# set policy-statement nlri2bgp term 1 from family traffic-engineering

```

```

user@R2# set policy-statement nlri2bgp term 1 then next-hop self
user@R2# set policy-statement nlri2bgp term 1 then accept
user@R2# set policy-statement ted2nlri term 1 from protocol isis
user@R2# set policy-statement ted2nlri term 1 from protocol ospf
user@R2# set policy-statement ted2nlri term 1 then accept
user@R2# set policy-statement ted2nlri term 2 then reject

```

```

[edit]
user@R2# commit
commit complete

```

Improving Traffic Engineering Database Accuracy with RSVP PathErr Messages

IN THIS SECTION

- [PathErr Messages | 1109](#)
- [Identifying the Problem Link | 1109](#)
- [Configuring the Router to Improve Traffic Engineering Database Accuracy | 1110](#)

An essential element of RSVP-based traffic engineering is the traffic engineering database. The traffic engineering database contains a complete list of all network nodes and links participating in traffic engineering, and a set of attributes each of those links can hold. (For more information about the traffic engineering database, see [“Constrained-Path LSP Computation” on page 478](#).) One of the most important link attributes is bandwidth.

Bandwidth availability on links changes quickly as RSVP LSPs are established and terminated. It is likely that the traffic engineering database will develop inconsistencies relative to the real network. These inconsistencies cannot be fixed by increasing the rate of IGP updates.

Link availability can share the same inconsistency problem. A link that becomes unavailable can break all existing RSVP LSPs. However, its unavailability might not readily be known by the network.

When you configure the **rsvp-error-hold-time** statement, a source node (ingress of an RSVP LSP) learns from the failures of its LSP by monitoring PathErr messages transmitted from downstream nodes. Information from the PathErr messages is incorporated into subsequent LSP computations, which can improve the accuracy and speed of LSP setup. Some PathErr messages are also used to update traffic engineering database bandwidth information, reducing inconsistencies between the traffic engineering database and the network.

You can control the frequency of IGP updates by using the **update-threshold** statement. See [“Configuring the RSVP Update Threshold on an Interface” on page 786](#).

This section discusses the following topics:

PathErr Messages

PathErr messages report a wide variety of problems by means of different code and subcode numbers. You can find a complete list of these PathErr messages in RFC 2205, *Resource Reservation Protocol (RSVP), Version 1, Functional Specification* and RFC 3209, *RSVP-TE: Extensions to RSVP for LSP Tunnels*.

When you configure the **rsvp-error-hold-time** statement, two categories of PathErr messages, which specifically represent link failures, are examined:

- Link bandwidth is low for this LSP: Requested bandwidth unavailable—code 1, subcode 2

This type of PathErr message represents a global problem that affects all LSPs transiting the link. They indicate that the actual link bandwidth is lower than that required by the LSP, and that it is likely that the bandwidth information in the traffic engineering database is an overestimate.

When this type of error is received, the available link bandwidth is reduced in the local traffic engineering database, affecting all future LSP computations.

- Link unavailable for this LSP:
 - Admission Control failure—code 1, any subcode except 2
 - Policy Control failures—code 2
 - Service Preempted—code 12
 - Routing problem—no route available toward destination—code 24, subcode 5

These types of PathErr messages are generally pertinent to the specified LSP. The failure of this LSP does not necessarily imply that other LSPs could also fail. These errors can indicate maximum transfer unit (MTU) problems, service preemption (either manually initiated by the operator or by another LSP with a higher priority), that a next-hop link is down, that a next-hop neighbor is down, or service rejection because of policy considerations. It is best to route this particular LSP away from the link.

Identifying the Problem Link

Each PathErr message includes the sender's IP address. This information is propagated unchanged toward the ingress router. A lookup in the traffic engineering database can identify the node that originated the PathErr message.

Each PathErr message carries enough information to identify the RSVP session that triggered the message. If this is a transit router, it simply forwards the message. If this router is the ingress router (for this RSVP session), it has the complete list of all nodes and links the session should traverse. Coupled with the originating node information, the link can be uniquely identified.

Configuring the Router to Improve Traffic Engineering Database Accuracy

To improve the accuracy of the traffic engineering database, configure the **rsvp-error-hold-time** statement. When this statement is configured, a source node (ingress of an RSVP LSP) learns from the failures of its LSP by monitoring PathErr messages transmitted from downstream nodes. Information from the PathErr messages is incorporated into subsequent LSP computations, which can improve the accuracy and speed of LSP setup. Some PathErr messages also are used to update traffic engineering database bandwidth information, reducing inconsistencies between the traffic engineering database and the network.

To configure how long MPLS should remember RSVP PathErr messages and consider them in CSPF computation, include the **rsvp-error-hold-time** statement:

```
rsvp-error-hold-time seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

The time can be a value from 1 to 240 seconds. The default is 25 seconds. Configuring a value of 0 disables the monitoring of PathErr messages.

Release History Table

Release	Description
17.4R1	Starting in Junos OS Release 17.4R1, the traffic engineering database installs interior gateway protocol (IGP) topology information in addition to RSVP-TE topology information in the lsdist.0 routing table
17.2R1	Starting in Junos OS Release 17.2R1, the BGP link-state address family is extended to distribute the source packet routing in networking (SPRING) topology information to software-defined networking (SDN) controllers.
17.1R1	Starting with Junos OS Release 17.1R1, link state distribution using BGP is supported on QFX10000 switches.

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | 36

DiffServ-Aware Traffic Engineering Configuration

IN THIS SECTION

- [DiffServ-Aware Traffic Engineering Introduction | 1111](#)
- [DiffServ-Aware Traffic Engineering Terminology | 1111](#)
- [DiffServ-Aware Traffic Engineering Features | 1112](#)
- [Configuring Link Down Notification for Optics Options Alarm or Warning | 1113](#)
- [DiffServ-Aware Traffic Engineered LSPs Overview | 1113](#)
- [DiffServ-Aware Traffic Engineered LSPs Operation | 1114](#)
- [Configuring Routers for DiffServ-Aware Traffic Engineering | 1115](#)
- [Configuring LSPs for DiffServ-Aware Traffic Engineering | 1119](#)

DiffServ-Aware Traffic Engineering Introduction

Differentiated Services (DiffServ)-aware traffic engineering provides a way to guarantee a specified level of service over an MPLS network. The routers providing DiffServ-aware traffic engineering are part of a differentiated services network domain. All routers participating in a differentiated services domain must have DiffServ-aware traffic engineering enabled.

To help ensure that the specified service level is provided, it is necessary to ensure that no more than the amount of traffic specified is sent over the differentiated services domain. You can accomplish this goal by configuring a policer to police or rate-limit the volume of traffic transiting the differentiated service domain. For more information about how to configure policers for label-switched paths (LSPs), see [“Configuring Policers for LSPs” on page 148](#).

This feature can help to improve the quality of Internet services such as voice over IP (VoIP). It also makes it possible to better emulate an Asynchronous Transfer Mode (ATM) circuit over an MPLS network.

DiffServ-Aware Traffic Engineering Terminology

B

Bandwidth model The bandwidth model determines the values of the available bandwidth advertised by the interior gateway protocols (IGPs).

C

CAC Call admission control (CAC) checks to ensure there is adequate bandwidth on the path before the LSP is established. If the bandwidth is insufficient, the LSP is not established and an error is reported.

Class type	A collection of traffic flows that is treated equivalently in a differentiated services domain. A class type maps to a queue and is much like a class-of-service (CoS) forwarding class in concept. It is also known as a traffic class.
D	
Differentiated Services	Differentiated Services make it possible to give different treatment to traffic based on the EXP bits in the MPLS header. Traffic must be marked appropriately and CoS must be configured.
Differentiated Services domain	The routers in a network that have Differentiated Services enabled.
DiffServ-aware traffic engineering	A type of constraint-based routing. It can enforce different bandwidth constraints for different classes of traffic. It can also do CAC on each traffic engineering class when an LSP is established.
M	
MAM	The maximum allocation bandwidth constraint model divides the available bandwidth between the different classes. Sharing of bandwidth between the class types is not allowed.
Multiclass LSP	A multiclass LSP functions like a standard LSP, but it also allows you to reserve bandwidth from multiple class types. The EXP bits of the MPLS header are used to distinguish between class types.
R	
RDM	The Russian dolls bandwidth constraint model makes efficient use of bandwidth by allowing the class types to share bandwidth.
T	
Traffic engineering class	A paired class type and priority.
Traffic engineering class map	A map between the class types, priorities, and traffic engineering classes. The traffic engineering class mapping must be consistent across the Differentiated Services domain.

DiffServ-Aware Traffic Engineering Features

DiffServ-aware traffic engineering provides the following features:

- Traffic engineering at a per-class level rather than at an aggregate level
- Different bandwidth constraints for different class types (traffic classes)
- Different queuing behaviors per class, allowing the router to forward traffic based on the class type

In comparison, standard traffic engineering does not consider CoS, and it completes its work on an aggregate basis across all Differentiated Service classes.

DiffServ-aware traffic engineering provides the following advantages:

- Traffic engineering can be performed on a specific class type instead of at the aggregate level.
- Bandwidth constraints can be enforced on each specific class type.
- It forwards traffic based on the EXP bits.

This makes it possible to guarantee service and bandwidth across an MPLS network. With DiffServ-aware traffic engineering, among other services, you can provide ATM circuit emulation, VoIP, and a guaranteed bandwidth service.

The following describes how the IGP, Constrained Shortest Path First (CSPF), and RSVP participate in DiffServ-aware traffic engineering:

- The IGP can advertise the unreserved bandwidth for each traffic engineering class to the other members of the differentiated services domain. The traffic engineering database stores this information.
- A CSPF calculation is performed considering the bandwidth constraints for each class type. If all the constraints are met, the CSPF calculation is considered successful.
- When RSVP signals an LSP, it requests bandwidth for specified class types.

Configuring Link Down Notification for Optics Options Alarm or Warning

To configure this option, include the **alarm** or **warning** statement at the **[edit interfaces ge- fpc/pic/port optics-options]** hierarchy level:

```
[edit interfaces]
ge-fpc/pic/port {
  optics-options {
    alarm alarm-name {
      (syslog | link-down);
    }
    warning warning-name {
      (syslog | link-down);
    }
  }
}
```

DiffServ-Aware Traffic Engineered LSPs Overview

A DiffServ-aware traffic engineered LSP is an LSP configured with a bandwidth reservation for a specific class type. This LSP can carry traffic for a single class type. On the packets, the class type is specified by the EXP bits (also known as the class-of-service bits) and the per-hop behavior (PHB) associated with the EXP bits. The mapping between the EXP bits and the PHB is static, rather than being signaled in RSVP.

The class type must be configured consistently across the Differentiated Services domain, meaning the class type configuration must be consistent from router to router in the network. You can unambiguously map a class type to a queue. On each node router, the class-of-service queue configuration for an interface translates to the available bandwidth for a particular class type on that link.

For more information about topics related to LSPs and DiffServ-aware traffic engineering, see the following:

- For forwarding classes and class of service, see the *Class of Service User Guide (Routers and EX9200 Switches)*.
- For EXP bits, see [“MPLS Label Allocation” on page 421](#).
- For differentiated services, see RFC 3270, *Multi-Protocol Label Switching (MPLS) Support of Differentiated Services*.
- For information about how the IGP and RSVP have been modified to support Differentiated Services-aware MPLS traffic engineering, see RFC 4124, *Protocol Extensions for Support of Differentiated-Service-Aware MPLS Traffic Engineering*.

DiffServ-Aware Traffic Engineered LSPs Operation

When configuring a DiffServ-aware traffic engineered LSP, you specify the class type and the bandwidth associated with it. The following occurs when an LSP is established with bandwidth reservation from a specific class type:

1. The IGPs advertise how much unreserved bandwidth is available for the traffic engineering classes.
2. When calculating the path for an LSP, CSPF is used to ensure that the bandwidth constraints are met for the class type carried by the LSP at the specified priority level.

CSPF also checks to ensure that the bandwidth model is configured consistently on each router participating in the LSP. If the bandwidth model is inconsistent, CSPF does not compute the path (except for LSPs from class type ct0).

3. Once a path is found, RSVP signals the LSP using the Classtype object in the path message. At each node in the path, the available bandwidth for the class types is adjusted as the path is set up.

An LSP that requires bandwidth from a particular class (except class type ct0) cannot be established through routers that do not understand the Classtype object. Preventing the use of routers that do not understand the Classtype object helps to ensure consistency throughout the Differentiated Services domain by preventing the LSP from using a router that cannot support Differentiated Services.

By default, LSPs are signaled with setup priority 7 and holding priority 0. An LSP configured with these values cannot preempt another LSP at setup time and cannot be preempted.

It is possible to have both LSPs configured for DiffServ-aware traffic engineering and regular LSPs configured at the same time on the same physical interfaces. For this type of heterogeneous environment, regular LSPs carry best-effort traffic by default. Traffic carried in the regular LSPs must have the correct EXP

settings (either by remarking the EXP settings or by assuming that the traffic arrived with the correct EXP settings from the upstream router).

Configuring Routers for DiffServ-Aware Traffic Engineering

IN THIS SECTION

- [Configuring the Bandwidth Model | 1116](#)
- [Configuring Traffic Engineering Classes | 1117](#)
- [Configuring Class of Service for DiffServ-Aware Traffic Engineering | 1119](#)

To configure DiffServ-aware traffic engineering, include the **diffserv-te** statement:

```
diffserv-te {
  bandwidth-model {
    extended-mam;
    mam;
    rdm;
  }
  te-class-matrix {
    traffic-class {
      tnumber {
        priority priority;
        traffic-class cnumber priority priority;
      }
    }
  }
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

You must include the **diffserv-te** statement in the configuration on all routers participating in the Differentiated Services domain. However, you are not required to configure the traffic engineering class matrix (by including the **te-class-matrix** statement at the **[edit protocols mpls diffserv-te]** or **[edit logical-systems *logical-system-name* protocols mpls diffserv-te]** hierarchy level).

NOTE: To prevent the possibility of an incorrect configuration when migrating to Diffserv-aware traffic engineering, a policy control failure error might be triggered if there is conflict between the old LSPs and the newly configured TE-class matrix.

An old node might request an LSP with setup and hold priorities in such a way that the combination of the ct0 class and the priority does not match with the configured TE-class matrix. All LSPs on the router that are configured prior to configuring diffserv-aware traffic engineering are designated as being from class ct0.

The error appears in the RSVP tracing logs as a **Session preempted** error. For the router where the error originates, the error could appear as follows:

```
Jun 17 16:35:59 RSVP error for session 10.255.245.6(port/tunnel ID 31133)
  Proto 0: (class ct0, priority 2) is not a valid TE-class Jun 17 16:35:59
  RSVP originate PathErr 192.168.37.22->192.168.37.23 Session preempted
```

For the router receiving the error, the error can appear as follows:

```
Jun 17 16:37:51 RSVP recv PathErr 192.168.37.22->192.168.37.23 Session
preempted LSP to-f(2/31133)
```

To configure DiffServ-aware traffic engineering, complete the procedures in the following sections:

Configuring the Bandwidth Model

You must configure a bandwidth model on all routers participating in the Differentiated Services domain. The bandwidth models available are MAM, extended MAM, and RDM:

- Maximum allocation bandwidth constraints model (MAM)—Defined in RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*.
- Extended MAM—A proprietary bandwidth model that behaves much like standard MAM. If you configure multiclass LSPs, you must configure the extended MAM bandwidth model.
- Russian-dolls bandwidth allocation model (RDM)—Makes efficient use of bandwidth by allowing the class types to share bandwidth. RDM is defined in RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*.

To configure a bandwidth model, include the **bandwidth-model** statement and specify one of the bandwidth model options:

```
bandwidth-model {
```

```

extended-mam;
mam;
rdm;
}

```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls [diffserv-te](#)]
- [edit logical-systems *logical-system-name* protocols mpls [diffserv-te](#)]

NOTE: If you change the bandwidth model on an ingress router, all the LSPs enabled on the router are taken down and resigaled.

Configuring Traffic Engineering Classes

Configuring traffic engineering classes is optional. [Table 25 on page 1117](#) shows the default values for everything in the traffic engineering class matrix. The default mapping is expressed in terms of the default forwarding classes defined in the CoS configuration.

Table 25: Default Values for the Traffic Engineering Class Matrix

Traffic Engineering Class	Class Type	Queue	Priority
te0	ct0	0	7
te1	ct1	1	7
te2	ct2	2	7
te3	ct3	3	7
te4	ct0	0	0
te5	ct1	1	0
te6	ct2	2	0
te7	ct3	3	0

If you want to override the default mappings, you can configure traffic engineering classes 0 through 7. For each traffic engineering class, you configure a class type (or queue) from 0 through 3. For each class type, you configure a priority from 0 through 7.

To configure traffic engineering classes explicitly, include the **te-class-matrix** statement:

```
te-class-matrix {
  tnumber {
    priority priority;
    traffic-class {
      ctnumber priority priority;
    }
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls [diffserv-te](#)]
- [edit logical-systems *logical-system-name* protocols mpls [diffserv-te](#)]

The following example shows how to configure traffic engineering class **te0** with class type **ct1** and a priority of 4:

```
[edit protocols mpls diffserv-te]
te-class-matrix {
  te0 traffic-class ct1 priority 4;
}
```

NOTE: If you explicitly configure a value for one of the traffic engineering classes, all the default values in the traffic engineering class matrix are dropped.

When you explicitly configure traffic engineering classes, you must also configure a bandwidth model; otherwise, the configuration commit operation fails.

Requirements and Limitations for the Traffic Engineering Class Matrix

When you configure a traffic engineering class matrix, be aware of the following requirements and limitations:

- A mapping configuration is local and affects only the router on which it is configured. It does not affect other systems participating in the differentiated services domain. However, for a Differentiated Services domain to function properly, you need to configure the same traffic engineering class matrix on all the routers participating in the same domain.
- When explicitly configuring traffic engineering classes, you must configure the classes in sequence (**te0**, **te1**, **te2**, **te3**, and so on); otherwise, the configuration commit operation fails.

The first traffic engineering class you configure must be **te0**; otherwise, the configuration commit operation fails.

Configuring Class of Service for DiffServ-Aware Traffic Engineering

To configure DiffServ-aware traffic engineering, you must also configure class of service. The following example illustrates a class-of-service configuration that would allocate 25 percent of the link bandwidth to each class:

```
class-of-service {
  interfaces {
    all {
      scheduler-map simple-map;
    }
  }
  scheduler-maps {
    simple-map {
      forwarding-class assured-forwarding scheduler simple_sched;
      forwarding-class best-effort scheduler simple_sched;
      forwarding-class network-control scheduler simple_sched;
      forwarding-class expedited-forwarding scheduler simple_sched;
    }
  }
  schedulers {
    simple_sched {
      transmit-rate percent 25;
      buffer-size percent 25;
    }
  }
}
```

Configuring LSPs for DiffServ-Aware Traffic Engineering

IN THIS SECTION

- [Configuring Class of Service for the Interfaces | 1120](#)
- [Configuring IGP | 1120](#)
- [Configuring Traffic-Engineered LSPs | 1121](#)
- [Configuring Policing for LSPs | 1121](#)
- [Configuring Fast Reroute for Traffic-Engineered LSPs | 1122](#)

You must configure the Differentiated Services domain (see [“Configuring Routers for DiffServ-Aware Traffic Engineering” on page 1115](#)) before you can enable DiffServ-aware traffic engineering for LSPs. The Differentiated Services domain provides the underlying class types and corresponding traffic engineering classes that you reference in the LSP configuration. The traffic engineering classes must be configured consistently on each router participating in the Differentiated Services domain for the LSP to function properly.

NOTE: You must configure either MAM or RDM as the bandwidth model when you configure DiffServ-aware traffic engineering for LSPs. See [“Configuring the Bandwidth Model” on page 1116](#).

The actual data transmitted over this Differentiated Services domain is carried by an LSP. Each LSP relies on the EXP bits of the MPLS packets to enable DiffServ-aware traffic engineering. Each LSP can carry traffic for a single class type.

All the routers participating in the LSP must be Juniper Networks routers running Junos OS Release 6.3 or later. The network can include routers from other vendors and Juniper Networks routers running earlier versions of the Junos OS. However, the DiffServ-aware traffic engineering LSP cannot traverse these routers.

NOTE: You cannot simultaneously configure multiclass LSPs and DiffServ-aware traffic engineering LSPs on the same router.

To enable DiffServ-aware traffic engineering for LSPs, you need to configure the following:

Configuring Class of Service for the Interfaces

The existing class-of-service (CoS) infrastructure ensures that traffic that is consistently marked receives the scheduling guarantees for its class. The classification, marking, and scheduling necessary to accomplish this are configured using the existing Junos OS CoS features.

NOTE: The Junos OS does not support CoS on ATM interfaces.

For information about how to configure CoS, see the *Class of Service User Guide (Routers and EX9200 Switches)*.

Configuring IGP

You can configure either IS-IS or OSPF as the IGP. The IS-IS and OSPF configurations for routers supporting LSPs are standard. For information about how to configure these protocols, see the *Junos OS Routing Protocols Library*.

Configuring Traffic-Engineered LSPs

You configure an LSP by using the standard LSP configuration statements and procedures. To configure DiffServ-aware traffic engineering for the LSP, specify a class type bandwidth constraint by including the **bandwidth** statement:

```
label-switched-path lsp-name {
  bandwidth {
    ctnumber bps;
  }
}
```

For a list of hierarchy levels at which you can include the **bandwidth** statement, see the statement summary sections for this statement.

If you do not specify a bandwidth for a class type, **ct0** is automatically specified as the queue for the LSP. You can configure only one class type for each LSP, unlike multiclass LSPs.

The class type statements specify bandwidth (in bits per second) for the following classes:

- **ct0**—Bandwidth reserved for class 0
- **ct1**—Bandwidth reserved for class 1
- **ct2**—Bandwidth reserved for class 2
- **ct3**—Bandwidth reserved for class 3

You can configure setup and holding priorities for an LSP, but the following restrictions apply:

- The combination of class and priority must be one of the configured traffic engineering classes. The default setup priority is 7 and the default holding priority is 0.
- Configuring an invalid combination of class type and priority causes the commit operation to fail.
- Automatic bandwidth allocation is not supported. If you configure automatic bandwidth allocation, the commit operation fails.
- LSPs configured with the **bandwidth** statement but without specifying a class type use the default class type **ct0**.
- For migration issues, see Internet draft draft-ietf-tewg-diff-te-proto-07.txt.

Configuring Policing for LSPs

Policing allows you to control the amount of traffic forwarded through a particular LSP. Policing helps to ensure that the amount of traffic forwarded through an LSP never exceeds the requested bandwidth allocation. You can configure multiple policers for each LSP.

For information about how to configure a policer for an LSP, see [“Configuring Policers for LSPs” on page 148](#).

Configuring Fast Reroute for Traffic-Engineered LSPs

You can configure fast reroute for traffic engineered LSPs (LSPs carrying a single class of traffic). It is also possible to reserve bandwidth on the detour path for the class of traffic when fast reroute is enabled. The same class type number is used for both the traffic engineered LSP and its detour.

If you configure the router to reserve bandwidth for the detour path, a check is made to ensure that the link is capable of handling DiffServ-aware traffic engineering and for CoS capability before accepting it as a potential detour path. Unsupported links are not used.

You can configure the amount of bandwidth to reserve for detours using either the **bandwidth** statement or the **bandwidth-percent** statement. You can only configure one these statements at a time. If you do not configure either the **bandwidth** statement or the **bandwidth-percent** statement, the default setting is to not reserve bandwidth for the detour path (the bandwidth guarantee will be lost if traffic is switched to the detour).

When you configure the **bandwidth** statement, you can specify the specific amount of bandwidth (in bits per second [bps]) you want to reserve for the detour path. For information, see [“Configuring Fast Reroute” on page 473](#).

The **bandwidth-percent** statement allows you to specify the bandwidth of the detour path as a percentage of the bandwidth configured for the protected path. For example, if you configure 100 millions bps of bandwidth for the protected path and configure 20 for the **bandwidth-percent** statement, the detour path will have 20 million bps of bandwidth reserved for its use.

To configure the percent of bandwidth used by the detour path based on the bandwidth of the protected path, include the **bandwidth-percent** statement:

```
bandwidth-percent percentage;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **fast-reroute**]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **fast-reroute**]

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | 36

7

PART

MPLS Transport Profile

Operation, Administration, and Maintenance (OAM) for MPLS | **1124**

MPLS Pseudowires | **1144**

Class-of-Service (CoS) for MPLS | **1212**

Generalized MPLS (GMPLS) | **1251**

Operation, Administration, and Maintenance (OAM) for MPLS

IN THIS CHAPTER

- [MPLS OAM Configuration | 1124](#)

MPLS OAM Configuration

IN THIS SECTION

- [Configuring the MPLS Transport Profile for OAM | 1124](#)
- [Configuring OAM Ingress Policies for LDP | 1141](#)
- [Tracing MPLS and LSP Packets and Operations | 1142](#)

Configuring the MPLS Transport Profile for OAM

IN THIS SECTION

- [MPLS Transport Profile Overview | 1124](#)
- [Example: Configuring the MPLS Transport Profile for OAM | 1125](#)

MPLS Transport Profile Overview

RFC 5654, *Requirements of an MPLS Transport Profile*, describes the requirements for the MPLS Transport Profile (MPLS-TP) that extends capabilities for Operation, Administration, and Maintenance (OAM) when MPLS is used for transport services and transport network operations. These capabilities help in troubleshooting and maintenance of a pseudowire or label-switched path (LSP).

MPLS-TP mechanisms for OAM contain two main components:

- Generic Associated Channel Label (GAL)—A special label that enables an exception mechanism that informs the egress label-switching router (LSR) that a packet it receives on an LSP belongs to an associated control channel or the control plane.
- Generic Associated Channel Header (G-Ach)—A special header field that identifies the type of payload contained in the MPLS label-switched paths (LSPs). G-Ach has the same format as a pseudowire associated control channel header.

For more information about MPLS-TP, see RFC 5654, *Requirements of an MPLS Transport Profile*. For specific information about GAL and G-Ach, see RFC 5586, *MPLS Generic Associated Channel*.

The following capabilities are supported in the Junos OS implementation of MPLS-TP:

- MPLS-TP OAM can send and receive packets with GAL and G-Ach, without IP encapsulation.
- Two unidirectional RSVP LSPs between a pair of routers can be associated with each other to create an associated bidirectional LSP for binding a path for the GAL and G-Ach OAM messages. A single Bidirectional Forwarding Detection (BFD) session is established for the associated bidirectional LSP.

Example: Configuring the MPLS Transport Profile for OAM

IN THIS SECTION

- [Requirements | 1125](#)
- [Overview | 1125](#)
- [Configuration | 1128](#)
- [Verification | 1139](#)

This example shows how to configure the MPLS Transport Profile (MPLS-TP) for sending and receiving of OAM GAL and G-Ach messages across a label-switched path (LSP).

Requirements

This example uses the following hardware and software components:

- Six devices that can be a combination of M Series, MX Series, and T Series routers
- Junos OS Release 12.1 or later running on the devices

Overview

Junos OS Release 12.1 and later support MPLS Transport Profile (MPLS-TP) Operation, Administration, and Maintenance (OAM) capabilities. MPLS-TP introduces new capabilities for OAM when MPLS is used

for transport services and transport network operations. This includes configuring Generic Associated Channel Label (GAL) and Generic Associated Channel Header (G-Ach) for OAM messages.

This example shows how to configure MPLS-TP OAM capability to send and receive GAL and G-Ach OAM messages without IP encapsulation. In addition, it also shows how to associate two unidirectional RSVP label-switched paths (LSPs) between a pair of routers to create an associated bidirectional LSP for binding a path for the GAL and G-Ach OAM messages.

Junos OS Release 12.1 and later support the following MPLS-TP capabilities:

- MPLS-TP OAM capability and the infrastructure required for MPLS applications to send and receive packets with GAL and G-Ach, without IP encapsulation.
- LSP-ping and Bidirectional Forwarding Detection (BFD) applications to send and receive packets using GAL and G-Ach, without IP encapsulation on transport LSPs.
- The association of two unidirectional RSVP LSPs, between a pair of routers, with each other to create an associated bidirectional LSP for binding a path for the GAL and G-Ach OAM messages. The associated bidirectional LSP model is supported only for associating the primary paths. A single BFD session is established for the associated bidirectional LSP.

Junos OS Release 12.1 and later does not support the following MPLS-TP capabilities:

- Point-to-multipoint RSVP LSPs and BGP LSPs
- Loss Measurement and Delay Measurement

You can enable GAL and G-Ach OAM operation using the following configuration statements:

- **mpls-tp-mode**—Include this statement at the **[edit protocols mpls oam]** hierarchy level to enable GAL and G-Ach OAM operation, without IP encapsulation, on all LSPs in the MPLS network.

```
[edit protocols mpls oam]
mpls-tp-mode;
```

Include this statement at the **[edit protocols mpls label-switched-path *lsp-name* oam]** hierarchy level to enable GAL and G-Ach OAM operation without IP encapsulation on a specific LSP in the network.

```
[edit protocols mpls label-switched-path lsp-name oam]
mpls-tp-mode;
```

NOTE: Starting with Junos OS Release 16.1, MPLS-TP supports two additional channel types for the default LSPING (0x0008) channel type under the `mpls-tp-mode` statement. These additional channel types provide on-demand connectivity verification (CV) with and without IP/UDP encapsulation.

- On-demand CV (0x0025)—This channel type is a new pseudowire channel type and is used for on-demand CV without IP/UDP encapsulation, where IP addressing is not available or non-IP encapsulation is preferred.
- IPv4 (0x0021)—This channel type uses the IP/UDP encapsulation and provides interoperability support with other vendor devices using IP addressing.

The GACH-TLV is used along with the default LSPING channel type. As per RFC 7026, GACH-TLV is deprecated for 0x0021 and 0x0025 channel types.

To configure a channel type for MPLS-TP, include the `lsping-channel-type channel-type` statement at the `[edit protocols mpls label-switched-path lsp-name oam mpls-tp-mode]` and `[edit protocols mpls oam mpls-tp-mode]` hierarchy levels.

- **associate-lsp *lsp-name* from *from-ip-address***—Include this statement at the `[edit protocols mpls label-switched-path lsp-name]` hierarchy level to configure associated bidirectional LSPs on the two ends of the LSP.

```
[edit protocols mpls label-switched-path lsp-name ]
associate-lsp lsp-name {
    from from-ip-address;
}
```

The **from *from-ip-address*** configuration for the LSP is optional. If omitted, it is derived from the **to** address of the ingress LSP configuration.

- **transit-lsp-association**—Include this statement at the `[edit protocols mpls]` hierarchy level to associate two LSPs at a transit router.


```
[edit protocols mpls]
transit-lsp-association transit-association-lsp-group-name {
    lsp-name-1 name-of-associated-lsp-1;
    from-1 address-of-associated-lsp-1;
    lsp-name-2 name-of-associated-lsp-2;
    from-2 address-of-associated-lsp-2;
}
```

The association of the LSPs in the transit nodes is useful for the return LSP path for TTL-expired LSP ping packets or traceroute.

In this example, R0 is the ingress router and R4 is the egress router. R1, R2, R3, and R5 are transit routers. The associated bidirectional LSP is established between the transit routers for sending and receiving the GAL and G-Ach OAM messages.

Figure 91 on page 1128 shows the topology used in this example.

Figure 91: MPLS-TP OAM Associated Bidirectional LSPs

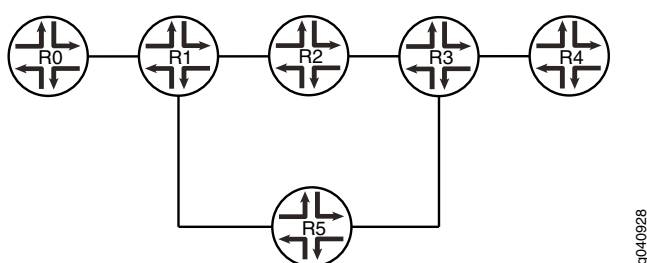

Configuration

CLI Quick Configuration

NOTE: This example shows the configuration on all devices and shows step-by-step procedures for configuring the ingress router, R0, and transit router R1. Repeat the step-by-step procedure described for the ingress router, R0, on the egress router, R4. Repeat the step-by-step procedure for the transit router, R1, on the other transit routers, R2, R3, and R5. Be sure to modify the appropriate interface names, addresses, and other parameters appropriately.

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Router R0

```

set interfaces ge-4/1/1 unit 0 family inet address 10.10.11.1/30
set interfaces ge-4/1/1 unit 0 family iso
set interfaces ge-4/1/1 unit 0 family inet6
set interfaces ge-4/1/1 unit 0 family mpls
set interfaces ge-5/0/0 unit 0 family inet address 10.10.10.1/30
set interfaces ge-5/0/0 unit 0 family iso
set interfaces ge-5/0/0 unit 0 family inet6
set interfaces ge-5/0/0 unit 0 family mpls
set protocols rsvp interface ge-5/0/0.0
set protocols rsvp interface ge-4/1/1.0
set protocols mpls label-switched-path r0-to-r4 to 10.255.8.86
set protocols mpls label-switched-path r0-to-r4 oam mpls-tp-mode
set protocols mpls label-switched-path r0-to-r4 associate-lsp r4-to-r0 from 10.255.8.86
set protocols mpls interface ge-5/0/0.0
set protocols mpls interface ge-4/1/1.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-5/0/0.0
set protocols ospf area 0.0.0.0 interface ge-4/1/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

Router R1

```

set interfaces ge-0/0/5 unit 0 family inet address 10.10.10.2/30
set interfaces ge-0/0/5 unit 0 family iso
set interfaces ge-0/0/5 unit 0 family inet6
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/2/2 unit 0 family inet address 10.10.12.2/30
set interfaces ge-0/2/2 unit 0 family iso
set interfaces ge-0/2/2 unit 0 family inet6
set interfaces ge-0/2/2 unit 0 family mpls
set interfaces ge-1/0/2 unit 0 family inet address 10.10.13.2/30
set interfaces ge-1/0/2 unit 0 family iso
set interfaces ge-1/0/2 unit 0 family inet6
set interfaces ge-1/0/2 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 family inet address 10.10.11.2/30
set interfaces ge-2/0/2 unit 0 family iso
set interfaces ge-2/0/2 unit 0 family inet6
set interfaces ge-2/0/2 unit 0 family mpls

```

```

set protocols rsvp interface ge-0/2/2.0
set protocols rsvp interface ge-0/0/5.0
set protocols rsvp interface ge-1/0/2.0
set protocols rsvp interface ge-2/0/2.0
set protocols mpls transit-lsp-association trace1 lsp-name-1 r0-to-r4
set protocols mpls transit-lsp-association trace1 from-1 10.255.8.207
set protocols mpls transit-lsp-association trace1 lsp-name-2 r4-to-r0
set protocols mpls transit-lsp-association trace1 from-2 10.255.8.86
set protocols mpls interface ge-0/0/5.0
set protocols mpls interface ge-2/0/2.0
set protocols mpls interface ge-1/0/2.0
set protocols mpls interface ge-0/2/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/2/2.0 metric 100
set protocols ospf area 0.0.0.0 interface ge-1/0/2.0
set protocols ospf area 0.0.0.0 interface ge-2/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

Router R2

```

set interfaces ge-0/2/3 unit 0 family inet address 10.10.13.1/30
set interfaces ge-0/2/3 unit 0 family iso
set interfaces ge-0/2/3 unit 0 family inet6
set interfaces ge-0/2/3 unit 0 family mpls
set interfaces ge-1/3/2 unit 0 family inet address 10.10.14.1/30
set interfaces ge-1/3/2 unit 0 family iso
set interfaces ge-1/3/2 unit 0 family inet6
set interfaces ge-1/3/2 unit 0 family mpls
set interfaces ge-1/3/4 unit 0 family inet address 10.10.15.1/30
set interfaces ge-1/3/4 unit 0 family iso
set interfaces ge-1/3/4 unit 0 family inet6
set interfaces ge-1/3/4 unit 0 family mpls
set protocols rsvp interface ge-0/2/3.0
set protocols rsvp interface ge-1/3/2.0
set protocols rsvp interface ge-1/3/4.0
set protocols mpls transit-lsp-association trace1 lsp-name-1 r0-to-r4
set protocols mpls transit-lsp-association trace1 from-1 10.255.8.207
set protocols mpls transit-lsp-association trace1 lsp-name-2 r4-to-r0
set protocols mpls transit-lsp-association trace1 from-2 10.255.8.86

```

```

set protocols mpls interface ge-0/2/3.0
set protocols mpls interface ge-1/3/2.0
set protocols mpls interface ge-1/3/4.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/2/3.0
set protocols ospf area 0.0.0.0 interface ge-1/3/2.0
set protocols ospf area 0.0.0.0 interface ge-1/3/4.0 metric 100
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

Router R3

```

set interfaces ge-1/2/1 unit 0 family inet address 10.10.16.2/30
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family inet6
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces ge-2/0/7 unit 0 family inet address 10.10.17.2/30
set interfaces ge-2/0/7 unit 0 family iso
set interfaces ge-2/0/7 unit 0 family inet6
set interfaces ge-2/0/7 unit 0 family mpls
set interfaces ge-2/2/0 unit 0 family inet address 10.10.14.2/30
set interfaces ge-2/2/0 unit 0 family iso
set interfaces ge-2/2/0 unit 0 family inet6
set interfaces ge-2/2/0 unit 0 family mpls
set protocols rsvp interface ge-2/2/0.0
set protocols rsvp interface ge-1/2/1.0
set protocols rsvp interface ge-2/0/7.0
set protocols mpls transit-lsp-association trace1 lsp-name-1 r0-to-r4
set protocols mpls transit-lsp-association trace1 from-1 10.255.8.207
set protocols mpls transit-lsp-association trace1 lsp-name-2 r4-to-r0
set protocols mpls transit-lsp-association trace1 from-2 10.255.8.86
set protocols mpls interface ge-2/2/0.0
set protocols mpls interface ge-1/2/1.0
set protocols mpls interface ge-2/0/7.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-2/2/0.0
set protocols ospf area 0.0.0.0 interface ge-1/2/1.0
set protocols ospf area 0.0.0.0 interface ge-2/0/7.0 metric 100
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

Router R4

```

set interfaces ge-0/0/3 unit 0 family inet address 10.10.16.1/30
set interfaces ge-0/0/3 unit 0 family iso
set interfaces ge-0/0/3 unit 0 family inet6
set interfaces ge-0/0/3 unit 0 family mpls
set protocols rsvp interface ge-0/0/3.0
set protocols mpls label-switched-path r4-to-r0 to 10.255.8.207
set protocols mpls label-switched-path r4-to-r0 oam mpls-tp-mode
set protocols mpls label-switched-path r4-to-r0 associate-lsp r0-to-r4 from 10.255.8.207
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

Router R5

```

set interfaces ge-1/2/0 unit 0 family inet address 10.10.15.2/30
set interfaces ge-1/2/0 unit 0 family iso
set interfaces ge-1/2/0 unit 0 family inet6
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-2/0/0 unit 0 family inet address 10.10.12.1/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family inet6
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-4/0/7 unit 0 family inet address 10.10.17.1/30
set interfaces ge-4/0/7 unit 0 family iso
set interfaces ge-4/0/7 unit 0 family inet6
set interfaces ge-4/0/7 unit 0 family mpls
set protocols rsvp interface ge-2/0/0.0
set protocols rsvp interface ge-1/2/0.0
set protocols rsvp interface ge-4/0/7.0
set protocols mpls transit-lsp-association trace1 lsp-name-1 r0-to-r4
set protocols mpls transit-lsp-association trace1 from-1 10.255.8.207
set protocols mpls transit-lsp-association trace1 lsp-name-2 r4-to-r0
set protocols mpls transit-lsp-association trace1 from-2 10.255.8.86
set protocols mpls interface ge-2/0/0.0
set protocols mpls interface ge-1/2/0.0
set protocols mpls interface ge-4/0/7.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 100
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0 metric 100

```

```
set protocols ospf area 0.0.0.0 interface ge-4/0/7.0 metric 100
set protocols ospf area 0.0.0.0 interface lo0.0 passive
```

Configuring Device R0

Step-by-Step Procedure

To configure the ingress router, R0:

1. Configure the interfaces.

```
[edit interfaces]
user@R0# set ge-4/1/1 unit 0 family inet address 10.10.11.1/30
user@R0# set ge-4/1/1 unit 0 family iso
user@R0# set ge-4/1/1 unit 0 family inet6
user@R0# set ge-4/1/1 unit 0 family mpls
user@R0# set ge-5/0/0 unit 0 family inet address 10.10.10.1/30
user@R0# set ge-5/0/0 unit 0 family iso
user@R0# set ge-5/0/0 unit 0 family inet6
user@R0# set ge-5/0/0 unit 0 family mpls
```

2. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@R0# set interface ge-5/0/0.0
user@R0# set interface ge-4/1/1.0
```

3. Configure an interior gateway protocol, such as OSPF.

```
[edit protocols ospf]
user@R0# set traffic-engineering
user@R0# set area 0.0.0.0 interface ge-5/0/0.0
user@R0# set area 0.0.0.0 interface ge-4/1/1.0
user@R0# set area 0.0.0.0 interface lo0.0 passive
```

4. Configure a signaling protocol, such as RSVP.

```
[edit protocols rsvp]
user@R0# set interface ge-5/0/0.0
user@R0# set interface ge-4/1/1.0
```

5. Configure the LSP.

```
[edit protocols mpls]
user@R0# set label-switched-path r0-to-r4 to 10.255.8.86
```

6. Enable GAL and G-Ach OAM operation without IP encapsulation on the LSPs.

```
[edit protocols mpls]
user@R0# set label-switched-path r0-to-r4 oam mpls-tp-mode
```

7. Configure associated bidirectional LSPs on the two ends of the LSP.

```
[edit protocols mpls]
user@R0# set label-switched-path r0-to-r4 associate-lsp to-r0 from 10.255.8.86
```

8. After you are done configuring the device, commit the configuration.

```
[edit]
user@R0# commit
```

Results

Confirm your configuration by issuing the **show interfaces** and **show protocols** commands.

```
user@R0# show interfaces
ge-4/1/1 {
  unit 0 {
    family inet {
      address 10.10.11.1/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
ge-5/0/0 {
  unit 0 {
    family inet {
      address 10.10.10.1/30;
    }
    family iso;
```

```

    family inet6;
    family mpls;
  }
}

```

```

user@R0# show protocols
rsvp {
  interface ge-5/0/0.0;
  interface ge-4/1/1.0;
}
mpls {
  label-switched-path r0-to-r4 {
    to 10.255.8.86;
    oam mpls-tp-mode;
    associate-lsp r4-to-r0 {
      from 10.255.8.86;
    }
  }
  interface ge-4/1/1.0;
  interface ge-5/0/0.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-5/0/0.0;
    interface ge-4/1/1.0;
    interface lo0.0 {
      passive;
    }
  }
}
}

```

Configuring Device R1

Step-by-Step Procedure

To configure the transit router, R1:

1. Configure the interfaces.

```

[edit interfaces]
user@R1# set ge-0/0/5 unit 0 family inet address 10.10.10.2/30
user@R1# set ge-0/0/5 unit 0 family iso
user@R1# set ge-0/0/5 unit 0 family inet6
user@R1# set ge-0/0/5 unit 0 family mpls

```

```

user@R1# set ge-0/2/2 unit 0 family inet address 10.10.12.2/30
user@R1# set ge-0/2/2 unit 0 family iso
user@R1# set ge-0/2/2 unit 0 family inet6
user@R1# set ge-0/2/2 unit 0 family mpls
user@R1# set ge-2/0/2 unit 0 family inet address 10.10.11.2/30
user@R1# set ge-2/0/2 unit 0 family iso
user@R1# set ge-2/0/2 unit 0 family inet6
user@R1# set ge-2/0/2 unit 0 family mpls
user@R1# set ge-1/0/2 unit 0 family inet address 10.10.13.2/30
user@R1# set ge-1/0/2 unit 0 family iso
user@R1# set ge-1/0/2 unit 0 family inet6
user@R1# set ge-1/0/2 unit 0 family mpls

```

2. Configure MPLS on the interfaces.

```

[edit protocols mpls]
user@R1# set interface ge-0/0/5.0
user@R1# set interface ge-2/0/2.0
user@R1# set interface ge-1/0/2.0
user@R1# set interface ge-0/2/2.0

```

3. Configure an interior gateway protocol, such as OSPF.

```

[edit protocols ospf]
user@R1# set traffic-engineering
user@R1# set area 0.0.0.0 interface ge-0/0/5.0
user@R1# set area 0.0.0.0 interface ge-2/0/2.0
user@R1# set area 0.0.0.0 interface ge-1/0/2.0
user@R1# set area 0.0.0.0 interface ge-0/2/2.0 metric 100
user@R1# set area 0.0.0.0 interface lo0.0 passive

```

4. Configure a signaling protocol, such as RSVP.

```

[edit protocols rsvp]
user@R1# set interface ge-0/0/5.0
user@R1# set interface ge-2/0/2.0
user@R1# set interface ge-1/0/2.0
user@R1# set interface ge-0/2/2.0

```

5. Configure the association of the two LSPs on the transit router.


```
[edit protocols mpls]
```

```
user@R1# set transit-lsp-association trace1 lsp-name-1 r0-to-r4
```

```
user@R1# set transit-lsp-association trace1 from-1 10.255.8.207
```

```
user@R1# set transit-lsp-association trace1 lsp-name-2 r4-to-r0
```

```
user@R1# set transit-lsp-association trace1 from-2 10.255.8.86
```

6. If you are done configuring the device, commit the configuration.

```
[edit]
```

```
user@R1# commit
```

Results

Confirm your configuration by issuing the **show interfaces** and **show protocols** commands.

```
user@R1# show interfaces
ge-0/0/5 {
  unit 0 {
    family inet {
      address 10.10.10.2/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
ge-0/2/2 {
  unit 0 {
    family inet {
      address 10.10.12.2/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
ge-2/0/2 {
  unit 0 {
    family inet {
      address 10.10.11.2/30;
    }
    family iso;
    family inet6;
```

```

        family mpls;
    }
}
ge-1/0/2 {
    unit 0 {
        family inet {
            address 10.10.13.2/30;
        }
        family iso;
        family inet6;
        family mpls;
    }
}

```

```

user@R1# show protocols
rsvp {
    interface ge-0/0/5.0;
    interface ge-2/0/2.0;
    interface ge-1/0/2.0;
    interface ge-0/2/2.0;
}
mpls {
    transit-lsp-association trace1 {
        lsp-name-1 r0-to-r4;
        from-1 10.255.8.207;
        lsp-name-2 r4-to-r0;
        from-2 10.255.8.86;
    }
    interface ge-0/0/5.0;
    interface ge-2/0/2.0;
    interface ge-1/0/2.0;
    interface ge-0/2/2.0;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-0/0/5.0;
        interface ge-1/0/2.0;
        interface ge-2/0/2.0;
        interface ge-0/2/2.0 {
            metric 100;
        }
        interface lo0.0 {
            passive;

```

```

    }
  }
}

```

Verification

Confirm that the configuration is working properly.

Verifying Associated Bidirectional LSPs

Purpose

Verify that the associated bidirectional LSP configuration is working properly.

Action

```
user@host> show mpls lsp
```

```

Ingress LSP: 1 sessions
To          From          State Rt P    ActivePath  LSPname
10.10.11.1  10.255.8.86      Up    0 *           r0-to-r4 Assoc-Bidir
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.10.16.1  10.255.8.207  Up    0  1 FF        3          r4-to-r0 Assoc-Bidir
Total 2 displayed, Up 2, Down 0

Transit LSP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.10.10.2  10.255.8.168  Up    1  1 FF    301264      3 r0-to-r4 Assoc-Bidir
Total 3 displayed, Up 3, Down 0

```

```
user@host> show mpls lsp detail
```

```

Ingress LSP: 1 sessions

10.10.11.1
  From: 10.255.8.86, State: Up, ActiveRoute: 0, LSPname: r0-to-r4
  Associated Bidirectional
  Associated LSP: r0-to-r4, 10.255.8.86
  ActivePath: (primary)
  LSPtype: Static Configured
  LoadBalance: Random

```

```

    Encoding type: Packet, Switching type: PSC-1, GPID: Unknown
    *Primary                               State: Up

Egress LSP: 1 sessions

10.255.102.29
  From: 10.255.102.172, LSPstate: Up, ActiveRoute: 0
    LSPname: r4-to-r0, LSPpath: Primary
    Associated Bidirectional
    Associated LSP: 10.10.16.1, to-r0>
    Suggested label received: -, Suggested label sent: -
    Recovery label received: -, Recovery label sent: -
    Resv style: 1 FF, Label in: 3, Label out: -
    Time left: 144, Since: Fri Jun 17 21:41:05 2011
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Port number: sender 6 receiver 14468 protocol 0
    PATH rcvfrom: 10.10.13.1 (ge-2/0/0.0) 84 pkts
    Adspec: received MTU 1500
    PATH sentto: localclient
    RESV rcvfrom: localclient
    Record route: 10.10.14.2 10.10.13.1 <self>

Transit LSP: 1 sessions

10.255.102.30
  From: 10.255.102.172, LSPstate: Up, ActiveRoute: 1
    LSPname: to_airstream, LSPpath: Primary
    Associated Bidirectional
    Associated LSP: r0-to-r4, 10.255.8.168
    Suggested label received: -, Suggested label
    Recovery label received: -, Recovery label sent: 3
    Resv style: 1 FF, Label in: 301264, Label out: 3
    Time left: 132, Since: Fri Jun 17 21:40:56 2011
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Port number: sender 28 receiver 14465 protocol 0
    PATH rcvfrom: 10.10.13.1 (ge-2/0/0.0) 84 pkts
    Adspec: received MTU 1500 sent MTU 1500
    PATH sentto: 10.10.10.1 (ge-3/0/0.0) 84 pkts
    RESV rcvfrom: 10.10.10.1 (ge-3/0/0.0) 84 pkts
    Explct route: 10.10.10.1
    Record route: 10.10.16.1 10.10.15.2 10.10.13.1 <self> 10.10.10.1

```

```
user@host> show mpls lsp bidirectional
```

```

Ingress LSP: 1 session
To          From          State Rt P      ActivePath      LSPname
10.255.8.86  10.255.8.207    Up    0 *              r0-to-r4
  Assoc-Bidir
Total 1 displayed, Up 1, Down 0
Aug 28 06:56:26 [TRACE] [R0 coleman re0]
Egress LSP: 1 session
To          From          State  Rt Style Labelin Labelout LSPname
10.255.8.207  10.255.8.86    Up      0  1 FF      3      - to-r0
  Assoc-Bidir
Total 1 displayed, Up 1, Down 0
Aug 28 06:56:26 [TRACE] [R0 coleman re0]
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The output of the **show mpls lsp**, **show mpls detail**, and **show mpls bidirectional** commands displays the details of the associated bidirectional LSPs and the LSP association information.

Release History Table

Release	Description
16.1	Starting with Junos OS Release 16.1, MPLS-TP supports two additional channel types for the default LSPING (0x0008) channel type under the <code>mpls-tp-mode</code> statement.

Configuring OAM Ingress Policies for LDP

Using the **ingress-policy** statement, you can configure an Operation, Administration, and Management (OAM) policy to choose which forwarding equivalence classes (FECs) need to have OAM enabled. If the FEC passes through the policy or if the FEC is explicitly configured, OAM is enabled for a FEC. For FECs chosen using a policy, the BFD parameters configured under **[edit protocols ldp oam bfd-liveness-detection]** are applied.

You configure the OAM ingress policy at the **[edit policy-options]** hierarchy level. To configure an OAM ingress policy, include the **ingress-policy** statement:

```
ingress-policy ingress-policy-name;
```

You can configure this statement at the following hierarchy levels:

- **[edit protocols ldp oam]**

- [edit logical-systems *logical-system-name* protocols ldp [oam](#)]

NOTE: ACX Series routers do not support [edit logical-systems] hierarchy level.

Tracing MPLS and LSP Packets and Operations

To trace MPLS and LSP packets and operations, include the **traceoptions** statement:

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

You can specify the following MPLS-specific flags in the MPLS **traceoptions** statement:

- **all**—Trace all operations.
- **connection**—Trace all circuit cross-connect (CCC) activity.
- **connection-detail**—Trace detailed CCC activity.
- **cspf**—Trace CSPF computations.
- **cspf-link**—Trace links visited during CSPF computations.
- **cspf-node**—Trace nodes visited during CSPF computations.
- **error**—Trace MPLS error conditions.
- **graceful-restart**—Trace MPLS graceful restart events.
- **lsping**—Trace LSP ping packets and return codes.
- **nsr-synchronization**—Trace nonstop routing (NSR) synchronization events.
- **nsr-synchronization-detail**—Trace NSR synchronization events in detail.
- **state**—Trace all LSP state transitions.
- **static**—Trace static label-switched path.

When you configure trace options to track an MPLS LSP using the **cspf** option, the CSPF log displays information about the MPLS LSP using the term “generalized MPLS” (GMPLS). For example, a message in the CSPF log might state that the “link passes GMPLS constraints”. Generalized MPLS (GMPLS) is a superset of MPLS, so this message is normal and does not affect proper MPLS LSP operation.

Release History Table

Release	Description
16.1	Starting with Junos OS Release 16.1, MPLS-TP supports two additional channel types for the default LSPING (0x0008) channel type under the mpls-tp-mode statement.

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | 36

MPLS Pseudowires

IN THIS CHAPTER

- [MPLS Pseudowires Configuration | 1144](#)

MPLS Pseudowires Configuration

IN THIS SECTION

- [Ethernet Pseudowire Overview | 1144](#)
- [Example: Ethernet Pseudowire Base Configuration | 1145](#)
- [Pseudowire Overview for ACX Series Universal Metro Routers | 1149](#)
- [Understanding Multisegment Pseudowire for FEC 129 | 1150](#)
- [Example: Configuring a Multisegment Pseudowire | 1155](#)
- [MPLS Stitching For Virtual Machine Connection | 1201](#)
- [TDM Pseudowires Overview | 1203](#)
- [Example: TDM Pseudowire Base Configuration | 1204](#)
- [Configuring Load Balancing for Ethernet Pseudowires | 1208](#)
- [Configuring Load Balancing Based on MAC Addresses | 1210](#)

Ethernet Pseudowire Overview

Starting in Junos OS Release 14.1X53 and Junos OS Release 16.1, an Ethernet pseudowire is used to carry Ethernet or 802.3 Protocol Data Units (PDUs) over an MPLS network enabling service providers to offer emulated Ethernet services over existing MPLS networks. Ethernet or 802.3 PDUs are encapsulated within the pseudowire to provide a point-to-point Ethernet service. For the point-to-point Ethernet service, the following fault management features are supported:

- The IEEE 802.3ah standard for Operation, Administration, and Management (OAM). You can configure IEEE 802.3ah OAM link-fault management on Ethernet point-to-point direct links or links across Ethernet repeaters.

Ethernet OAM link-fault management can be used for physical link-level fault detection and management. It uses a new, optional sublayer in the data link layer of the OSI model. Ethernet OAM can be implemented on any full-duplex point-to-point or emulated point-to-point Ethernet link. A system-wide implementation is not required; OAM can be deployed on particular interfaces of a router. Transmitted Ethernet OAM messages or OAM PDUs are of standard length, untagged Ethernet frames within the normal frame length limits in the range 64–1518 bytes.

- Ethernet connectivity fault management (CFM) to monitor the physical link between two routers.
 - Connection protection using the continuity check protocol for fault monitoring . The continuity check protocol is a neighbor discovery and health check protocol that discovers and maintains adjacencies at the VLAN or link level.
 - Path protection using the linktrace protocol for path discovery and fault verification . Similar to IP traceroute, the linktrace protocol maps the path taken to a destination MAC address through one or more bridged networks between the source and destination.

Example: Ethernet Pseudowire Base Configuration

IN THIS SECTION

- [Requirements | 1145](#)
- [Overview of an Ethernet Pseudowire Base Configuration | 1145](#)
- [Configuring an Ethernet Pseudowire | 1146](#)

Requirements

The following is a list of the hardware and software requirements for this configuration.

- One ACX Series router
- Junos OS Release 12.2 or later

Overview of an Ethernet Pseudowire Base Configuration

The configuration shown here is the base configuration of an Ethernet pseudowire with Ethernet cross-connect for physical interface encapsulation on an ACX Series router. This configuration is for one provider edge router. To complete the configuration of an Ethernet pseudowire, you need to repeat this configuration on an other provider edge router in the Multiprotocol Label Switched (MPLS) network.

Configuring an Ethernet Pseudowire

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them in a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level:

```
set interfaces ge-0/1/1 encapsulation ethernet-ccc
set interfaces ge-0/1/1 unit 0
set interfaces ge-0/2/0 unit 0 family inet address 20.1.1.2/24
set interfaces ge-0/2/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 70.1.1.1/32
set protocols rsvp interface ge-0/2/0.0
set protocols mpls no-cspf
set protocols mpls label-switched-path PE1-to-PE2 to 40.1.1.1
set protocols mpls interface ge-0/2/0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/2/0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-0/2/0.0
set protocols ldp interface lo0.0
set protocols l2circuit neighbor 40.1.1.1 interface ge-0/1/1.0 virtual-circuit-id
1
```

NOTE: To configure an Ethernet pseudowire with 802.1Q tagging for cross-connect logical interface encapsulation, include the **vlan-ccc** statement at the [edit interfaces ge-0/1/1 unit 0 encapsulation] hierarchy level instead of the **ethernet-ccc** statement shown in this example.

Step-by-Step Procedure

1. Create two Gigabit Ethernet interfaces, set the encapsulation mode on one interface and MPLS on the other interface. Create the loopback (lo0) interface:

```
[edit]
user@host# edit interfaces
[edit interfaces]
user@host# set ge-0/1/1 encapsulation ethernet-ccc
user@host# set ge-0/1/1 unit 0
user@host# set ge-0/2/0 unit 0 family inet address 20.1.1.2/24
user@host# set ge-0/2/0 unit 0 family mpls
user@host# set lo0 unit 0 family inet address 70.1.1.1/32
```

2. Enable the MPLS and RSVP protocols on the interface configured with MPLS—**ge-0/2/0.0**:

```
[edit]
user@host# edit protocols
[edit protocols]
user@host# set rsvp interface ge-0/2/0.0
user@host# set mpls interface ge-0/2/0.0
```

3. Configure LDP. If you configure RSVP for a pseudowire, you must also configure LDP:

```
[edit protocols]
user@host# set protocols ldp interface ge-0/2/0.0
user@host# set protocols ldp interface lo0.0
```

4. Configure a point-to-point label-switched path (LSP) and disable constrained-path LSP computation:

```
[edit protocols]
user@host# set mpls label-switched-path PE1-to-PE2 to 40.1.1.1
user@host# set mpls no-cspf
```

5. Configure OSPF and enable traffic engineering on the MPLS interface—**ge-0/2/0.0**, and on the loopback (**lo0**) interface:

```
[edit protocols]
user@host# set ospf traffic-engineering
user@host# set ospf area 0.0.0.0 interface ge-0/2/0.0
user@host# set ospf area 0.0.0.0 interface lo0.0 passive
```

6. Uniquely identify a Layer 2 circuit for the Ethernet pseudowire:

```
[edit protocols]
user@host# set l2circuit neighbor 40.1.1.1 interface ge-0/1/1.0 virtual-circuit-id 1
```

Results

```
[edit]
user@host# show
interfaces {
```

```

ge-0/1/1 {
    encapsulation ethernet-ccc;
    unit 0;
}
ge-0/2/0 {
    unit 0 {
        family inet {
            address 20.1.1.2/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 70.1.1.1/32;
        }
    }
}
}
protocols {
    rsvp {
        interface ge-0/2/0.0;
    }
    mpls {
        no-cspf;
        label-switched-path PE1-to-PE2 {
            to 40.1.1.1;
        }
        interface ge-0/2/0.0;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface ge-0/2/0.0;
            interface lo0.0 {
                passive;
            }
        }
    }
}
ldp {
    interface ge-0/2/0.0;
    interface lo0.0;
}

```

```

l2circuit {
  neighbor 40.1.1.1 {
    interface ge-0/1/1.0 {
      virtual-circuit-id 1;
    }
  }
}

```

Pseudowire Overview for ACX Series Universal Metro Routers

A pseudowire is a Layer 2 circuit or service, which emulates the essential attributes of a telecommunications service—such as a T1 line, over an MPLS packet-switched network. The pseudowire is intended to provide only the minimum necessary functionality to emulate the wire with the required degree of faithfulness for the given service definition. On the ACX Series routers, Ethernet, Asynchronous Transfer Mode (ATM), and time-division multiplexing (TDM) pseudowires are supported. The following pseudowire features are supported:

- Pseudowire transport service carrying Layer 1 and Layer 2 information over an IP and MPLS network infrastructure. Only similar end points are supported on the ACX Series—for example, T1 to T1, ATM to ATM, and Ethernet to Ethernet.
- Redundant pseudowires backup connections between PE routers and CE devices, maintaining Layer 2 circuits and services after certain types of failures. Pseudowire redundancy improves the reliability of certain types of networks (metro for example) where a single point of failure could interrupt service for multiple customers. The following pseudowire redundancy features are supported:
 - Maintenance of Layer 2 circuit services after certain types of failures with a standby pseudowire, which backs up the connection between PE routers and CE devices.
 - In case of failure, a protect interface, which backs up the primary interface. Network traffic uses the primary interface only so long as the primary interface functions. If the primary interface fails, traffic is switched to the protect interface.
 - Hot and cold standby enabling swift cut over to the backup or standby pseudowire.
- Ethernet connectivity fault management (CFM), which can be used to monitor the physical link between two routers. The following major features of CFM for Ethernet pseudowires only are supported:
 - Connection protection using the continuity check protocol for fault monitoring. The continuity check protocol is a neighbor discovery and health check protocol that discovers and maintains adjacencies at the VLAN or link level.

- Path protection using the linktrace protocol for path discovery and fault verification. Similar to IP traceroute, the linktrace protocol maps the path taken to a destination MAC address through one or more bridged networks between the source and destination.

Understanding Multisegment Pseudowire for FEC 129

IN THIS SECTION


- [Understanding Multisegment Pseudowire | 1150](#)
- [Using FEC 129 for Multisegment Pseudowire | 1152](#)
- [Establishing a Multisegment Pseudowire Overview | 1152](#)
- [Pseudowire Status Support for Multisegment Pseudowire | 1153](#)
- [Pseudowire TLV Support for MS-PW | 1154](#)
- [Supported and Unsupported Features | 1154](#)

Understanding Multisegment Pseudowire

A pseudowire is a Layer 2 circuit or service that emulates the essential attributes of a telecommunications service, such as a T1 line, over an MPLS packet-switched network (PSN). The pseudowire is intended to provide only the minimum necessary functionality to emulate the wire with the required resiliency requirements for the given service definition.

When a pseudowire originates and terminates on the edge of the same PSN, the pseudowire label is unchanged between the originating and terminating provider edge (T-PE) devices. This is called a single-segment pseudowire (SS-PW). [Figure 92 on page 1151](#) illustrates an SS-PW established between two PE routers. The pseudowires between the PE1 and PE2 routers are located within the same autonomous system (AS).

Figure 92: L2VPN Pseudowire

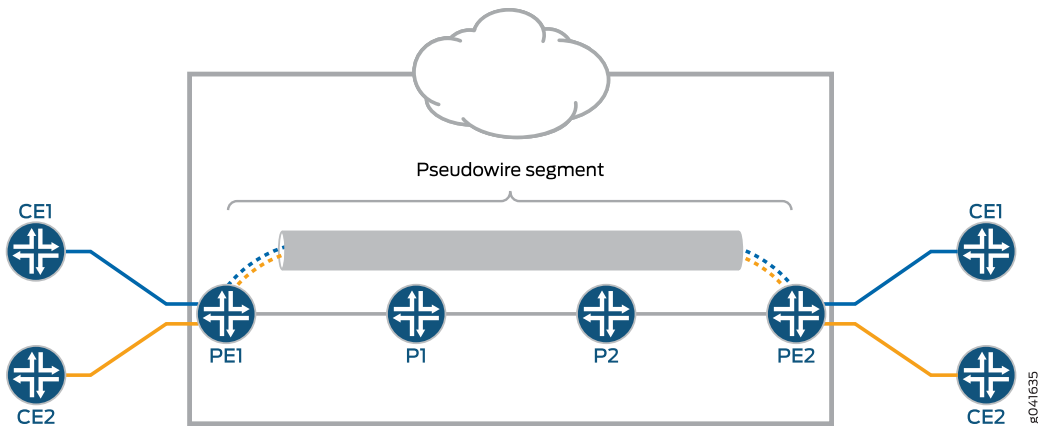


In cases where it is impossible to establish a single pseudowire from a local to a remote PE, either because it is unfeasible or undesirable to establish a single control plane between the two PEs, a multisegment pseudowire (MS-PW) is used.

An MS-PW is a set of two or more contiguous SS-PWs that are made to function as a single point-to-point pseudowire. It is also known as switched pseudowire. MS-PWs can go across different regions or network domains. A region can be considered as an interior gateway protocol (IGP) area or a BGP autonomous system that belongs to the same or different administrative domain. An MS-PW spans multiple cores or ASs of the same or different carrier networks. A Layer 2 VPN MS-PW can include up to 254 pseudowire segments.

[Figure 93 on page 1152](#) illustrates a set of two or more pseudowire segments that function as a single pseudowire. The end routers are called terminating PE (T-PE) routers, and the switching routers are called switching PE (S-PE) routers. The S-PE router terminates the tunnels of the preceding and succeeding pseudowire segments in an MS-PW. The S-PE router can switch the control and data planes of the preceding and succeeding pseudowire segments of the MS-PW. An MS-PW is declared to be up when all the single-segment pseudowires are up.

Figure 93: Multisegment Pseudowire

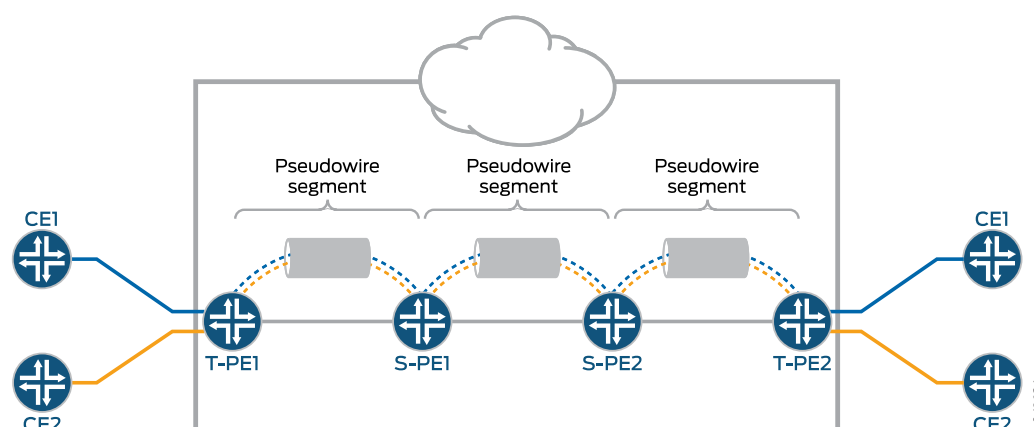

Using FEC 129 for Multisegment Pseudowire

Currently, there are two types of attachment circuit identifiers (AIs) defined under FEC 129:

- Type 1 AI
- Type 2 AI

The support of an MS-PW for FEC 129 uses type 2 AI. A type 2 AI is globally unique by definition of RFC 5003.

Single-segment pseudowires (SS-PWs) using FEC 129 on an MPLS PSN can use both type 1 and type 2 AI. For an MS-PW using FEC 129, a pseudowire itself is identified as a pair of endpoints. This requires that the pseudowire endpoints be uniquely identified.

In the case of a dynamically placed MS-PW, there is a requirement for the identifiers of attachment circuits to be globally unique, for the purposes of reachability and manageability of the pseudowire. Thus, individual globally unique addresses are allocated to all the attachment circuits and S-PEs that make up an MS-PW.

Type 2 AI is composed of three fields:

- Global_ID—Global identification, which is usually the AS number.
- Prefix—IPv4 address, which is usually the router ID.
- AC_ID—Local attachment circuit, which is a user-configurable value.

Since type 2 AI already contains the T-PE's IP address and it is globally unique, from the FEC 129 pseudowire signaling point of view, the combination (AGI, SAI, TAI) uniquely identifies an MS-PW across all interconnected pseudowire domains.

Establishing a Multisegment Pseudowire Overview

An MS-PW is established by dynamically and automatically selecting the predefined S-PEs and placing the MS-PW between two T-PE devices.

When S-PEs are dynamically selected, each S-PE is automatically discovered and selected using the BGP autodiscovery feature, without the requirement of provisioning the FEC 129 pseudowire-related information on all the S-PEs. BGP is used to propagate pseudowire address information throughout the PSN.

Since there is no manual provisioning of FEC 129 pseudowire information on the S-PEs, the Attachment Group Identifier (AGI) and Attachment Individual Identifier (AII) are reused automatically, and choosing the same set of S-PEs for the pseudowire in both the forwarding and reverse direction is achieved through the active and passive role of each T-PE device.

- Active—The T-PE initiates an LDP label mapping message.
- Passive—The T-PE does not initiate an LDP label mapping message until it receives a label mapping message initiated by the active T-PE. The passive T-PE sends its label mapping message to the same S-PE from where it received the label mapping message originated from its active T-PE. This ensures that the same set of S-PEs are used in the reverse direction.

Pseudowire Status Support for Multisegment Pseudowire

Pseudowire Status Behavior on T-PE

The following pseudowire status messages are relevant on the T-PE:

- 0x00000010—Local PSN-facing pseudowire (egress) transmit fault.
- 0x00000001—Generic nonforwarding fault code. This is set as the local fault code. The local fault code is set at the local T-PE, and LDP sends a pseudowire status TLV message with the same fault code to the remote T-PE.
- Fault codes are bit-wise OR'ed and stored as remote pseudowire status codes.

Pseudowire Status Behavior on S-PE

The S-PE initiates the pseudowire status messages that indicate the pseudowire faults. The SP-PE in the pseudowire notification message hints where the fault was originated.

- When a local fault is detected by the S-PE, a pseudowire status message is sent in both directions along the pseudowire. Since there are no attachment circuits on an S-PE, only the following status messages are relevant:
 - 0x00000008—Local PSN-facing pseudowire (ingress) receive fault.
 - 0x00000010—Local PSN-facing pseudowire (egress) transmit fault.
- To indicate which SS-PW is at fault, an LDP SP-PE TLV is attached with the pseudowire status code in the LDP notification message. The pseudowire status is passed along from one pseudowire to another unchanged by the control plane switching function.
- If an S-PE initiates a pseudowire status notification message with one particular pseudowire status bit, then for the pseudowire status code an S-PE receives, the same bit is processed locally and not forwarded until the S-PE's original status error is cleared.

- An S-PE keeps only two pseudowire status codes for each SS-PW it is involved in – local pseudowire status code and remote pseudowire status code. The value of the remote pseudowire status code is the result of logic or operation of the pseudowire status codes in the chain of SS-PWs preceding this segment. This status code is incrementally updated by each S-PE upon receipt and communicated to the next S-PE. The local pseudowire status is generated locally based on its local pseudowire status.
- Only transmit fault is detected at the SP-PE. When there is no MPLS LSP to reach the next segment, a local transmit fault is detected. The transmit fault is sent to the next downstream segment, and the receive fault is sent to the upstream segment.
- Remote failures received on an S-PE are just passed along the MS-PW unchanged. Local failures are sent to both segments of the pseudowire that the S-PE is involved in.

Pseudowire TLV Support for MS-PW

MS-PW provides the following support for the LDP SP-PE TLV [RFC 6073]:

- The LDP SP-PE TLVs for an MS-PW include:
 - Local IP address
 - Remote IP address
- An SP-PE adds the LDP SP-PE TLV to the label mapping message. Each SP-PE appends the local LDP SP-PE TLV to the SP-PE list it received from the other segment.
- The pseudowire status notification message includes the LDP SP-PE TLV when the notification is generated at the SP-PE.

Supported and Unsupported Features

Junos OS supports the following features with MS-PW:

- MPLS PSN for each SS-PW that builds up the MS-PW.
- The same pseudowire encapsulation for each SS-PW in an MS-PW – Ethernet or VLAN-CCC.
- The generalized PWid FEC with T-LDP as an end-to-end pseudowire signaling protocol to set up each SS-PW.
- MP-BGP to autodiscover the two endpoint PEs for each SS-PW associated with the MS-PW.
- Standard MPLS operation to stitch two side-by-side SS-PWs to form an MS-PW.
- Automatic discovery of S-PE so that the MS-PW can be dynamically placed.
- Minimum provisioning of S-PE.
- Operation, administration, and maintenance (OAM) mechanisms, including end-to-end MPLS ping or end-to-any-S-PE MPLS ping, MPLS path trace, end-to-end VCCV, and Bidirectional Forwarding Detection (BFD).
- Pseudowire swithing point (SP) PE TLV for the MS-PW.

- Composite next hop on MS-PW.
- Pseudowire status TLV for MS-PW.

Junos OS does not support the following MS-PW functionality:

- Mix of LDP FEC 128 and LDP FEC 129.
- Static pseudowire where each label is provisioned statically.
- Graceful Routing Engine switchover.
- Nonstop active routing.
- Multihoming.
- Partial connectivity verification (originating from an S-PE) in OAM.

Example: Configuring a Multisegment Pseudowire

IN THIS SECTION

- [Requirements | 1155](#)
- [Overview | 1156](#)
- [Configuration | 1162](#)
- [Verification | 1188](#)
- [Troubleshooting | 1199](#)

This example shows how to configure a dynamic multisegment pseudowire (MS-PW), where the stitching provider edge (S-PE) devices are automatically and dynamically discovered by BGP, and pseudowires are signaled by LDP using FEC 129. This arrangement requires minimum provisioning on the S-PEs, thereby reducing the configuration burden that is associated with statically configured Layer 2 circuits while still using LDP as the underlying signaling protocol.

Requirements

This example uses the following hardware and software components:

- Six routers that can be a combination of M Series Multiservice Edge Routers, MX Series 5G Universal Routing Platforms, T Series Core Routers, or PTX Series Packet Transport Routers.
 - Two remote PE devices configured as terminating PEs (T-PEs).
 - Two S-PEs configured as:
 - Route reflectors, in the case of interarea configuration.

- AS boundary routers or route reflectors, in the case of inter-AS configuration.
- Junos OS Release 13.3 or later running on all the devices.

Before you begin:

1. Configure the device interfaces.
2. Configure OSPF or any other IGP protocol.
3. Configure BGP.
4. Configure LDP.
5. Configure MPLS.

Overview

Starting with Junos OS Release 13.3, you can configure an MS-PW using FEC 129 with LDP signaling and BGP autodiscovery in an MPLS packet-switched network (PSN). The MS-PW feature also provides operation, administration, and management (OAM) capabilities, such as ping, traceroute, and BFD, from the T-PE devices.

To enable autodiscovery of S-PEs in an MS-PW, include the **auto-discovery-mspw** statement at the **[edit protocols bgp group group-name family l2vpn]** hierarchy level.

```
family l2vpn {
  auto-discovery-mspw;
}
```

The automatic selection of S-PE and dynamic setting up of an MS-PW rely heavily on BGP. BGP network layer reachability information (NLRI) constructed for the FEC 129 pseudowire to autodiscover the S-PE is called an MS-PW NLRI [draft-ietf-pwe3-dynamic-ms-pw-15.txt]. The MS-PW NLRI is essentially a prefix consisting of a route distinguisher (RD) and FEC 129 source attachment identifier (SAII). It is referred to as a BGP autodiscovery (BGP-AD) route and is encoded as **RD:SAII**.

Only T-PEs that are provisioned with type 2 AIs initiate their own MS-PW NLRI respectively. Since a type 2 AI is globally unique, an MS-PW NLRI is used to identify a PE device to which the type 2 AI is provisioned. The difference between a type 1 AI and a type 2 AI requires that a new address family indicator (AFI) and subsequent address family identifier (SAFI) be defined in BGP to support an MS-PW. The proposed AFI and SAFI value pair used to identify the MS-PW NLRI is 25 and 6, respectively (pending IANA allocation).

The AFI and SAFI values support autodiscovery of S-PEs and should be configured on both T-PEs that originate the routes, and the S-PEs that participate in the signaling.

[Figure 94 on page 1157](#) illustrates an inter-area MS-PW setup between two remote PE routers—T-PE1 and T-PE2. The Provider (P) routers are P1 and P2, and the S-PE routers are S-PE1 and S-PE2. The MS-PW is established between T-PE1 and T-PE2, and all the devices belong to the same AS—AS 100. Since S-PE1

and S-PE2 belong to the same AS, they act as route reflectors and are also known as RR 1 and RR 2, respectively.

Figure 95 on page 1157 illustrates an inter-AS MS-PW setup. The MS-PW is established between T-PE1 and T-PE2, where T-PE1, P1, and S-PE1 belong to AS 1, and S-PE2, P2, and T-PE2 belong to AS 2. Since S-PE1 and S-PE2 belong to different ASs, they are configured as ASBR routers and are also known as ASBR 1 and ASBR 2, respectively.

Figure 94: Interarea Multisegment Pseudowire


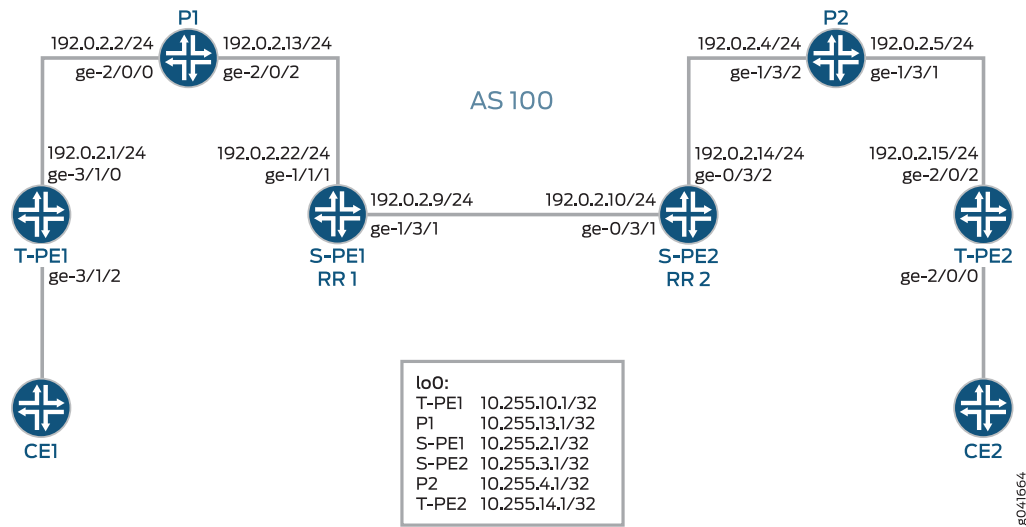


Figure 95: Inter-AS Multisegment Pseudowire

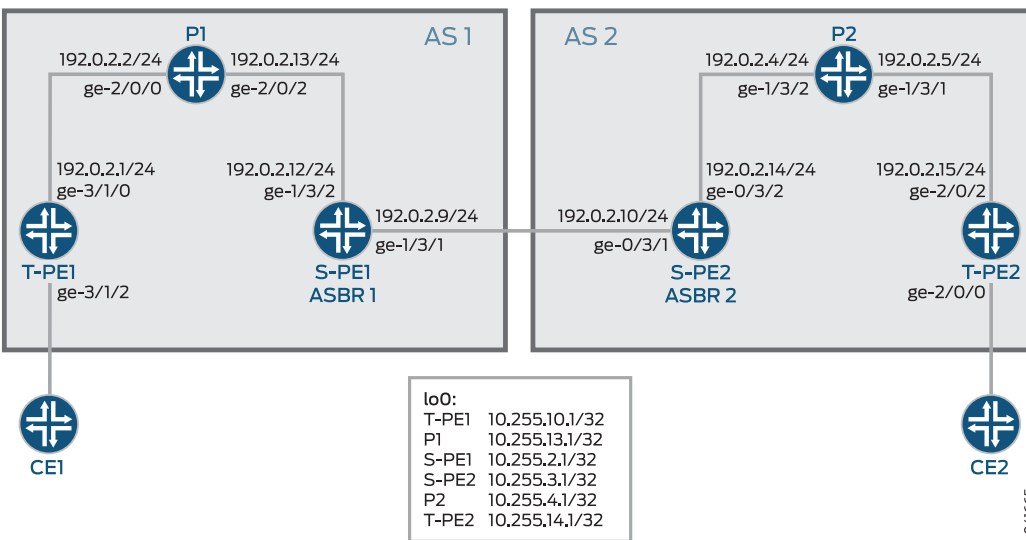

The following sections provide information about how an MS-PW is established in an interarea and inter-AS scenario.

Minimum Configuration Requirements on S-PE

In order to dynamically discover both ends of an SS-PW and set up a T-LDP session dynamically, the following is required:

- For interarea MS-PW, each S-PE plays both an ABR and BGP route reflector role.

In the interarea case, as seen in [Figure 94 on page 1157](#), the S-PE plays a BGP route reflector role and reflects the BGP-AD route to its client. A BGP-AD route advertised by one T-PE eventually reaches its remote T-PE. Because of the next-hop-self set by each S-PE, the S-PE or T-PE that receives a BGP-AD route can always discover the S-PE that advertises the BGP-AD in its local AS or local area through the BGP next hop.

- For inter-AS MS-PW, each S-PE plays either an ASBR or a BGP route reflector role.

In an MS-PW, the two T-PEs initiate a BGP-AD route respectively. When the S-PE receives the BGP-AD route through either the IBGP session with the T-PE or through a regular BGP-RR, it sets the next-hop-self before re-advertising the BGP-AD route to one or more of its EBGP peers in the inter-AS case, as seen in [Figure 95 on page 1157](#).

- Each S-PE must set next-hop-self when re-advertising or reflecting a BGP-AD route for the MS-PW.

Active and Passive Role of T-PE

To ensure that the same set of S-PEs are being used for a MS-PW in both directions, the two T-PEs play different roles in terms of FEC 129 signaling. This is to avoid different paths being chosen by T-PE1 and T-PE2 when each S-PE is dynamically selected for an MS-PW.

When an MS-PW is signaled using FEC 129, each T-PE might independently start signaling the MS-PW. The signaling procedure can result in an attempt to set up each direction of the MS-PW through different S-PEs.

To avoid this situation, one of the T-PEs must start the pseudowire signaling (active role), while the other waits to receive the LDP label mapping before sending the respective pseudowire LDP label mapping message (passive role). When the MS-PW path is dynamically placed, the active T-PE (the Source T-PE) and the passive T-PE (the Target T-PE) must be identified before signaling is initiated for a given MS-PW. The determination of which T-PE assumes the active role is done based on the SAll value, where the T-PE that has a larger SAll value plays the active role.

In this example, the SAll values of T-PE1 and T-PE 2 are **800:800:800** and **700:700:700**, respectively. Since T-PE1 has a higher SAll value, it assumes the active role and T-PE2 assumes the passive role.

Directions for Establishing an MS-PW

The directions used by the S-PE for setting up the MS-PW are:

- Forwarding direction—From an active T-PE to a passive T-PE.

In this direction, the S-PEs perform a BGP-AD route lookup to determine the next-hop S-PE to send the label mapping message.

- Reverse direction—From a passive T-PE to an active T-PE.

In this direction, the S-PEs do not perform a BGP-AD route lookup, because the label mapping messages are received from the T-PEs, and the stitching routes are installed in the S-PEs.

In this example, the MS-PW is established in the forwarding direction from T-PE1 to T-PE2. When the MS-PW is placed from T-PE2 to T-PE1, the MS-PW is established in the reverse direction.

Autodiscovery and Dynamic Selection of S-PE

A new AFI and SAFI value is defined in BGP to support the MS-PWs based on type 2 All. This new address family supports autodiscovery of S-PEs. This address family must be configured on both the TPEs and SPEs.

It is the responsibility of the Layer 2 VPN component to dynamically select the next S-PE to use along the MS-PW in the forwarding direction.

- In the forwarding direction, the selection of the next S-PE is based on the BGP-AD route advertised by the BGP and pseudowire FEC information sent by the LDP. The BGP-AD route is initiated by the passive T-PE (T-PE2) in the reverse direction while the pseudowire FEC information is sent by LDP from the active T-PE (T-PE1) in the forwarding direction.
- In the reverse direction, the next S-PE (S-PE2) or the active T-PE (T-PE1) is obtained by looking up the S-PE (S-PE1) that it used to set up the pseudowire in the forwarding direction.

Provisioning a T-PE

To support FEC 129 type 2 All, the T-PE needs to configure its remote T-PE's IP address, a global ID, and an attachment circuit ID. Explicit paths where a set of S-PEs to use is explicitly specified on a T-PE is not supported. This eliminates the need to provision each S-PE with a type 2 All.

Stitching an MS-PW

An S-PE performs the following MPLS label operations before forwarding the received label mapping message to the next S-PE:

1. Pops the MPLS tunnel label.
2. Pops the VC label.
3. Pushes a new VC label.
4. Pushes an MPLS tunnel label used for the next segment.

Establishing an MS-PW

After completing the necessary configuration, an MS-PW is established in the following manner:

1. The SAll values are exchanged between T-PE1 and T-PE2 using BGP.
T-PE1 assumes the active T-PE role, because it is configured with a higher SAll value. T-PE2 becomes the passive T-PE.
2. T-PE1 receives the BGP-AD route originated by T-PE2. It compares the All values obtained from T-PE2 in the received BGP-AD route against the All values provisioned locally.
3. If the All values match, T-PE1 performs a BGP-AD route lookup to elect the first S-PE (S-PE1).
4. T-PE1 sends an LDP label mapping message to S-PE1.
5. Using the BGP-AD route originated from T-PE2, and the LDP label mapping message received from T-PE1, S-PE1 selects the next S-PE (S-PE2) in the forwarding direction.
To do this, S-PE1 compares SAll obtained from the BGP-AD route against the TAI from the LDP label mapping message.
6. If the All values match, S-PE1 finds S-PE2 through the BGP next hop associated with the BGP-AD route.
7. The process of selecting S-PE goes on until the last S-PE establishes a T-LDP session with T-PE2. When T-PE2 receives the LDP label mapping message from the last S-PE (S-PE2), it initiates its own label mapping message and sends it back to S-PE2.
8. When all the label mapping messages are received on S-PE1 and S-PE2, the S-PEs install the stitching routes. Thus, when the MS-PW is established in the reverse direction, the S-PEs need not perform BGP-AD route lookup to determine its next hop as it did in the forwarding direction.

OAM Support for an MS-PW

After the MS-PW is established, the following OAM capabilities can be executed from the T-PE devices:

- Ping
 - End-to-End Connectivity Verification Between T-PEs

If T-PE1, S-PEs, and T-PE2 support Control Word (CW), the pseudowire control plane automatically negotiates the use of the CW. Virtual Circuit Connectivity Verification (VCCV) Control Channel (CC) Type 3 will function correctly whether or not the CW is enabled on the pseudowire. However, VCCV Type 1, which is used for end-to-end verification only, is only supported if the CW is enabled.

The following is a sample:


```
user@T-PE1> ping mpls l2vpn fec129 instance instance-name local-id SAll of T-PE1 remote-pe-address  
address of T-PE2 remote-id TAll of T-PE2
```

or

```
user@T-PE1> ping mpls l2vpn fec129 interface CE1-facing interface
```

- Partial Connectivity Verification from T-PE to Any S-PE

To trace part of an MS-PW, the TTL of the pseudowire label can be used to force the VCCV message to pop out at an intermediate node. When the TTL expires, the S-PE can determine that the packet is a VCCV packet either by checking the CW or by checking for a valid IP header with UDP destination port 3502 (if the CW is not in use). The packet should then be diverted to VCCV processing.

If T-PE1 sends a VCCV message with the TTL of the pseudowire label equal to 1, the TTL expires at the S-PE. T-PE1 can thus verify the first segment of the pseudowire.

The VCCV packet is built according to RFC 4379. All the information necessary to build the VCCV LSP ping packet is collected by inspecting the S-PE TLVs. This use of the TTL is subject to the caution expressed in RFC 5085. If a penultimate LSR between S-PEs or between an S-PE and a T-PE manipulates the pseudowire label TTL, the VCCV message might not emerge from the MS-PW at the correct S-PE.

The following is a sample:

```
user@T-PE1> ping mpls l2vpn fec129 interface CE1-facing interface bottom-label-ttl segment
```

The **bottom-label-ttl** value is 1 for S-PE1 and 2 for S-PE2.

The **bottom-label-ttl** statement sets the correct VC label TTL, so the packets are popped to the correct SS-PW for VCCV processing.

NOTE: Junos OS supports VCCV Type 1 and Type 3 for the MS-PW OAM capability. VCCV Type 2 is not supported.

- Traceroute

Traceroute tests each S-PE along the path of the MS-PW in a single operation similar to LSP trace. This operation is able to determine the actual data path of the MS-PW, and is used for dynamically signaled MS-PWs.

```
user@T-PE1> traceroute mpls l2vpn fec129 interface CE1-facing interface
```

- Bidirectional Forwarding Detection

Bidirectional Forwarding Detection (BFD) is a detection protocol designed to provide fast forwarding path failure detection times for all media types, encapsulations, topologies, and routing protocols. In addition to fast forwarding path failure detection, BFD provides a consistent failure detection method

for network administrators. The router or switch can be configured to log a system log (syslog) message when BFD goes down.

```
user@T-PE1> show bfd session extensive
```

Configuration

IN THIS SECTION

- [Configuring an Interarea MS-PW | 1162](#)
- [Configuring an Inter-AS MS-PW | 1175](#)

Configuring an Interarea MS-PW

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

T-PE1

```
set interfaces ge-3/1/0 unit 0 family inet address 192.0.2.1/24
set interfaces ge-3/1/0 unit 0 family mpls
set interfaces ge-3/1/2 encapsulation ethernet-ccc
set interfaces ge-3/1/2 unit 0
set interfaces lo0 unit 0 family inet address 10.255.10.1/32 primary
set routing-options autonomous-system 100
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp family l2vpn auto-discovery-mspw
set protocols bgp group mspw type internal
set protocols bgp group mspw local-address 10.255.10.1
set protocols bgp group mspw neighbor 10.255.2.1
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
```

```

set routing-instances ms-pw instance-type l2vpn
set routing-instances ms-pw interface ge-3/1/2.0
set routing-instances ms-pw route-distinguisher 10.10.10.10:15
set routing-instances ms-pw l2vpn-id l2vpn-id:100:15
set routing-instances ms-pw vrf-target target:100:115
set routing-instances ms-pw protocols l2vpn site CE1 source-attachment-identifier 800:800:800
set routing-instances ms-pw protocols l2vpn site CE1 interface ge-3/1/2.0 target-attachment-identifier
    700:700:700
set routing-instances ms-pw protocols l2vpn pseudowire-status-tlv
set routing-instances ms-pw protocols l2vpn oam bfd-liveness-detection minimum-interval 300

```

P1

```

set interfaces ge-2/0/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 family inet address 192.0.2.13/24
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.13.1/32 primary
set routing-options autonomous-system 100
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0

```

S-PE1 (RR 1)

```

set interfaces ge-1/3/1 unit 0 family inet address 192.0.2.9/24
set interfaces ge-1/3/1 unit 0 family mpls
set interfaces ge-1/3/2 unit 0 family inet address 192.0.2.22/24
set interfaces ge-1/3/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.2.1/32 primary
set routing-options autonomous-system 100
set protocols mpls interface all

```

```

set protocols mpls interface fxp0.0 disable
set protocols bgp family l2vpn auto-discovery-mspw
set protocols bgp group mspw type internal
set protocols bgp group mspw local-address 10.255.2.1
set protocols bgp group mspw export next-hop-self
set protocols bgp group mspw cluster 203.0.113.0
set protocols bgp group mspw neighbor 10.255.10.1
set protocols bgp group mspw neighbor 10.255.3.1
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
set policy-options policy-statement next-hop-self then next-hop self
set policy-options policy-statement send-inet0 from protocol bgp
set policy-options policy-statement send-inet0 then accept

```

S-PE2 (RR 2)

```

set interfaces ge-0/3/1 unit 0 family inet address 192.0.2.10/24
set interfaces ge-0/3/1 unit 0 family mpls
set interfaces ge-0/3/2 unit 0 family inet address 192.0.2.14/24
set interfaces ge-0/3/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.3.1/32 primary
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp family l2vpn auto-discovery-mspw
set protocols bgp group mspw type internal
set protocols bgp group mspw local-address 10.255.3.1
set protocols bgp group mspw export next-hop-self
set protocols bgp group mspw cluster 198.51.100.0
set protocols bgp group mspw neighbor 10.255.2.1
set protocols bgp group mspw neighbor 10.255.14.1
set protocols bgp group int type internal
set protocols bgp group int local-address 10.255.3.1
set protocols bgp group int neighbor 10.255.2.1
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

```

set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
set policy-options policy-statement next-hop-self then next-hop self
set policy-options policy-statement send-inet0 from protocol bgp
set policy-options policy-statement send-inet0 then accept

```

P2

```

set interfaces ge-1/3/1 unit 0 family inet address 192.0.2.5/24
set interfaces ge-1/3/1 unit 0 family mpls
set interfaces ge-1/3/2 unit 0 family inet address 192.0.2.4/24
set interfaces ge-1/3/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.4.1/32 primary
set routing-options autonomous-system 100
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0

```

T-PE2

```

set interfaces ge-2/0/0 encapsulation ethernet-ccc
set interfaces ge-2/0/0 unit 0
set interfaces ge-2/0/2 unit 0 family inet address 192.0.2.15/24
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.14.1/32 primary
set routing-options autonomous-system 100
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp family l2vpn auto-discovery-mspw
set protocols bgp group mspw type internal
set protocols bgp group mspw local-address 10.255.14.1

```

```

set protocols bgp group mspw neighbor 10.255.3.1
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
set routing-instances ms-pw instance-type l2vpn
set routing-instances ms-pw interface ge-2/0/0.0
set routing-instances ms-pw route-distinguisher 10.10.10.10:15
set routing-instances ms-pw l2vpn-id l2vpn-id:100:15
set routing-instances ms-pw vrf-target target:100:115
set routing-instances ms-pw protocols l2vpn site CE2 source-attachment-identifier 700:700:700
set routing-instances ms-pw protocols l2vpn site CE2 interface ge-2/0/0.0 target-attachment-identifier
    800:800:800
set routing-instances ms-pw protocols l2vpn pseudowire-status-tlv
set routing-instances ms-pw protocols l2vpn oam bfd-liveness-detection minimum-interval 300

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure T-PE1 in the interarea scenario:

NOTE: Repeat this procedure for the T-PE2 device in the MPLS domain, after modifying the appropriate interface names, addresses, and other parameters.

1. Configure the T-PE1 interfaces.

```

[edit interfaces]
user@T-PE1# set ge-3/1/0 unit 0 family inet address 192.0.2.1/24
user@T-PE1# set ge-3/1/0 unit 0 family mpls
user@T-PE1# set ge-3/1/2 encapsulation ethernet-ccc
user@T-PE1# set ge-3/1/2 unit 0
user@T-PE1# set lo0 unit 0 family inet address 10.255.10.1/32 primary

```

2. Set the autonomous system number.

```
[edit routing-options]
user@T-PE1# set autonomous-system 100
```

3. Enable MPLS on all the interfaces of T-PE1, excluding the management interface.

```
[edit protocols]
user@T-PE1# set mpls interface all
user@T-PE1# set mpls interface fxp0.0 disable
```

4. Enable autodiscovery of intermediate S-PEs that make up the MS-PW using BGP.

```
[edit protocols]
user@T-PE1# set bgp family l2vpn auto-discovery-mspw
```

5. Configure the BGP group for T-PE1.

```
[edit protocols]
user@T-PE1# set bgp group mspw type internal
```

6. Assign local and neighbor addresses to the mspw group for T-PE1 to peer with S-PE1.

```
[edit protocols]
user@T-PE1# set bgp group mspw local-address 10.255.10.1
user@T-PE1# set bgp group mspw neighbor 10.255.2.1
```

7. Configure OSPF on all the interfaces of T-PE1, excluding the management interface.

```
[edit protocols]
user@T-PE1# set ospf area 0.0.0.0 interface lo0.0
user@T-PE1# set ospf area 0.0.0.0 interface all
user@T-PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
```

8. Configure LDP on all the interfaces of T-PE1, excluding the management interface.

```
[edit protocols]
user@T-PE1# set ldp interface all
user@T-PE1# set ldp interface fxp0.0 disable
user@T-PE1# set ldp interface lo0.0
```

9. Configure the Layer 2 VPN routing instance on T-PE1.

```
[edit routing-instances]
user@T-PE1# set ms-pw instance-type l2vpn
```

10. Assign the interface name for the mspw routing instance.

```
[edit routing-instances]
user@T-PE1# set ms-pw interface ge-3/1/2.0
```

11. Configure the route distinguisher for the mspw routing instance.

```
[edit routing-instances]
user@T-PE1# set ms-pw route-distinguisher 10.10.10.15
```

12. Configure the Layer 2 VPN ID community for FEC 129 MS-PW.

```
[edit routing-instances]
user@T-PE1# set ms-pw l2vpn-id l2vpn-id:100:15
```

13. Configure a VPN routing and forwarding (VRF) target for the mspw routing instance.

```
[edit routing-instances]
user@T-PE1# set ms-pw vrf-target target:100:115
```

14. Configure the source attachment identifier (SAI) value using Layer 2 VPN as the routing protocol for the mspw routing instance.

```
[edit routing-instances]
user@T-PE1# set ms-pw protocols l2vpn site CE1 source-attachment-identifier 800:800:800
```

15. Assign the interface name that connects the CE1 site to the VPN, and configure the target attachment identifier (TAI) value using Layer 2 VPN as the routing protocol for the mspw routing instance.

```
[edit routing-instances]
user@T-PE1# set ms-pw protocols l2vpn site CE1 interface ge-3/1/2.0 target-attachment-identifier
700:700:700
```


16. (Optional) Configure T-PE1 to send MS-PW status TLVs.

```
[edit routing-instances]
user@T-PE1# set ms-pw protocols l2vpn pseudowire-status-tlv
```

17. (Optional) Configure OAM capabilities for the VPN.

```
[edit routing-instances]
user@T-PE1# set ms-pw protocols l2vpn oam bfd-liveness-detection minimum-interval 300
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure S-PE1 (RR 1) in the interarea scenario:

NOTE: Repeat this procedure for the S-PE2 (RR 2) device in the MPLS domain, after modifying the appropriate interface names, addresses, and other parameters.

1. Configure the S-PE1 interfaces.

```
[edit interfaces]
user@S-PE1# set ge-1/3/1 unit 0 family inet address 192.0.2.9/24
user@S-PE1# set ge-1/3/1 unit 0 family mpls
user@S-PE1# set ge-1/3/2 unit 0 family inet address 192.0.2.22/24
user@S-PE1# set ge-1/3/2 unit 0 family mpls
user@S-PE1# set lo0 unit 0 family inet address 10.255.2.1/32 primary
```

2. Set the autonomous system number.

```
[edit routing-options]
user@S-PE1# set autonomous-system 100
```

3. Enable MPLS on all the interfaces of T-PE1, excluding the management interface.

```
[edit protocols]
user@S-PE1# set mpls interface all
user@S-PE1# set mpls interface fxp0.0 disable
```

4. Enable autodiscovery of S-PE using BGP.

```
[edit protocols]
user@S-PE1# set bgp family l2vpn auto-discovery-mspw
```

5. Configure the BGP group for S-PE1.

```
[edit protocols]
user@S-PE1# set bgp group mspw type internal
```

6. Configure S-PE1 to act as a route reflector.

```
[edit protocols]
user@S-PE1# set bgp group mspw export next-hop-self
user@S-PE1# set bgp group mspw cluster 203.0.113.0
```

7. Assign local and neighbor addresses to the mspw group for S-PE1 to peer with T-PE1 and S-PE2.

```
[edit protocols]
user@S-PE1# set bgp group mspw local-address 10.255.2.1
user@S-PE1# set bgp group mspw neighbor 10.255.10.1 (to T-PE1)
user@S-PE1# set bgp group mspw neighbor 10.255.3.1 (to S-PE2)
```

8. Configure OSPF on all the interfaces of S-PE1, excluding the management interface.

```
[edit protocols]
user@S-PE1# set ospf area 0.0.0.0 interface all
user@S-PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
user@S-PE1# set ospf area 0.0.0.0 interface lo0.0
```

9. Configure LDP on all the interfaces of S-PE1, excluding the management interface.

```
[edit protocols]
user@S-PE1# set ldp interface all
user@S-PE1# set ldp interface fxp0.0 disable
user@S-PE1# set ldp interface lo0.0
```

10. Define the policy for enabling next-hop-self and accepting BGP traffic on S-PE1.

```
[edit policy-options]
user@S-PE1# set policy-statement next-hop-self then next-hop self
user@S-PE1# set policy-statement send-inet0 from protocol bgp
user@S-PE1# set policy-statement send-inet0 then accept
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show routing-instances**, **show routing-options**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

T-PE1

```
user@T-PE1# show interfaces
ge-3/1/0 {
  unit 0 {
    family inet {
      address 192.0.2.1/24;
    }
    family mpls;
  }
}
ge-3/1/2 {
  encapsulation ethernet-ccc;
  unit 0;
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.10.1/32 {
        primary;
      }
    }
  }
}
```

```
user@T-PE1# show routing-options
autonomous-system 100;
```

```
user@T-PE1# show protocols
```

```

mpls {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
bgp {
    family l2vpn {
        auto-discovery-mspw;
    }
    group mspw {
        type internal;
        local-address 10.255.10.1;
        neighbor 10.255.2.1;
    }
}
ospf {
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
        interface lo0.0;
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}

```

```

user@T-PE1# show routing-instances
ms-pw {
    instance-type l2vpn;
    interface ge-3/1/2.0;
    route-distinguisher 10.10.10.10:15;
    l2vpn-id l2vpn-id:100:15;
    vrf-target target:100:115;
    protocols {
        l2vpn {
            site CE1 {
                source-attachment-identifier 800:800:800;
            }
        }
    }
}

```

```
user@S-PE1# show interfaces
ge-1/3/1 {
  unit 0 {
    family inet {
      address 192.0.2.9/24;
    }
    family mpls;
  }
}
ge-1/3/2 {
  unit 0 {
    family inet {
      address 192.0.2.22/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.2.1/32 {
        primary;
      }
    }
  }
}
```

```
user@S-PE1# show routing-options
autonomous-system 100;
```

```
user@S-PE1# show protocols
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
bgp {
  family l2vpn {
    auto-discovery-mspw;
  }
  group mspw {
    type internal;
    local-address 10.255.2.1;
    export next-hop-self;
    cluster 203.0.113.0;
    neighbor 10.255.10.1;
    neighbor 10.255.3.1;
  }
}
ospf {
  area 0.0.0.0 {
    interface lo0.0;
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
ldp {
  interface all;
  interface fxp0.0 {
    disable;
  }
  interface lo0.0;
}
```

```
user@S-PE1# show policy-options
policy-statement next-hop-self {
  then {
```

```

        next-hop self;
    }
}
policy-statement send-inet0 {
    from protocol bgp;
    then accept;
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring an Inter-AS MS-PW

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

T-PE1

```

set interfaces ge-3/1/0 unit 0 family inet address 192.0.2.1/24
set interfaces ge-3/1/0 unit 0 family mpls
set interfaces ge-3/1/2 encapsulation ethernet-ccc
set interfaces ge-3/1/2 unit 0
set interfaces lo0 unit 0 family inet address 10.255.10.1/32 primary
set routing-options autonomous-system 1
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp family l2vpn auto-discovery-mspw
set protocols bgp group mspw type internal
set protocols bgp group mspw local-address 10.255.10.1
set protocols bgp group mspw neighbor 10.255.2.1
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
set routing-instances ms-pw instance-type l2vpn
set routing-instances ms-pw interface ge-3/1/2.0
set routing-instances ms-pw route-distinguisher 10.10.10.10:15
set routing-instances ms-pw l2vpn-id l2vpn-id:100:15
set routing-instances ms-pw vrf-target target:100:115

```

```

set routing-instances ms-pw protocols l2vpn site CE1 source-attachment-identifier 800:800:800
set routing-instances ms-pw protocols l2vpn site CE1 interface ge-3/1/2.0 target-attachment-identifier
  700:700:700
set routing-instances ms-pw protocols l2vpn pseudowire-status-tlv
set routing-instances ms-pw protocols l2vpn oam bfd-liveness-detection minimum-interval 300

```

P1

```

set interfaces ge-2/0/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 family inet address 192.0.2.13/24
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.13.1/32 primary
set routing-options autonomous-system 1
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0

```

S-PE1 (ASBR 1)

```

set interfaces ge-1/3/1 unit 0 family inet address 192.0.2.9/24
set interfaces ge-1/3/1 unit 0 family mpls
set interfaces ge-1/3/2 unit 0 family inet address 192.0.2.22/24
set interfaces ge-1/3/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.2.1/32 primary
set routing-options autonomous-system 1
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp family l2vpn auto-discovery-mspw
set protocols bgp group to_T-PE1 type internal
set protocols bgp group to_T-PE1 local-address 10.255.2.1
set protocols bgp group to_T-PE1 export next-hop-self

```



```

set protocols bgp group to_T-PE1 neighbor 10.255.10.1
set protocols bgp group to_S-PE2 type external
set protocols bgp group to_S-PE2 local-address 10.255.2.1
set protocols bgp group to_S-PE2 peer-as 2
set protocols bgp group to_S-PE2 neighbor 10.255.3.1 multihop ttl 1
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
set policy-options policy-statement next-hop-self then next-hop self

```

S-PE2 (ASBR 2)

```

set interfaces ge-0/3/1 unit 0 family inet address 192.0.2.10/24
set interfaces ge-0/3/1 unit 0 family mpls
set interfaces ge-0/3/2 unit 0 family inet address 192.0.2.14/24
set interfaces ge-0/3/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.3.1/32 primary
set routing-options autonomous-system 2
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp family l2vpn auto-discovery-mspw
set protocols bgp group to_T-PE2 type internal
set protocols bgp group to_T-PE2 local-address 10.255.3.1
set protocols bgp group to_T-PE2 export next-hop-self
set protocols bgp group to_T-PE2 neighbor 10.255.14.1
set protocols bgp group to_S-PE1 type external
set protocols bgp group to_S-PE1 local-address 10.255.3.1
set protocols bgp group to_S-PE1 peer-as 1
set protocols bgp group to_S-PE1 neighbor 10.255.2.1 multihop ttl 1
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
set policy-options policy-statement next-hop-self then next-hop self

```

P2

```

set interfaces ge-1/3/1 unit 0 family inet address 192.0.2.5/24
set interfaces ge-1/3/1 unit 0 family mpls
set interfaces ge-1/3/2 unit 0 family inet address 192.0.2.4/24
set interfaces ge-1/3/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.4.1/32 primary
set routing-options autonomous-system 2
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0

```

T-PE2

```

set interfaces ge-2/0/0 encapsulation ethernet-ccc
set interfaces ge-2/0/0 unit 0
set interfaces ge-2/0/2 unit 0 family inet address 192.0.2.15/24
set interfaces ge-2/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.14.1/32 primary
set routing-options autonomous-system 2
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp family l2vpn auto-discovery-mspw
set protocols bgp group mspw type internal
set protocols bgp group mspw local-address 10.255.14.1
set protocols bgp group mspw neighbor 10.255.3.1
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set protocols ldp interface lo0.0
set routing-instances ms-pw instance-type l2vpn
set routing-instances ms-pw interface ge-2/0/0.0
set routing-instances ms-pw route-distinguisher 10.10.10.10:15

```

```

set routing-instances ms-pw l2vpn-id l2vpn-id:100:15
set routing-instances ms-pw vrf-target target:100:115
set routing-instances ms-pw protocols l2vpn site CE2 source-attachment-identifier 700:700:700
set routing-instances ms-pw protocols l2vpn site CE2 interface ge-2/0/0.0 target-attachment-identifier
  800:800:800
set routing-instances ms-pw protocols l2vpn pseudowire-status-tlv
set routing-instances ms-pw protocols l2vpn oam bfd-liveness-detection minimum-interval 300

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure the T-PE1 router in the inter-AS scenario:

NOTE: Repeat this procedure for the T-PE2 device in the MPLS domain, after modifying the appropriate interface names, addresses, and other parameters.

1. Configure the T-PE1 interfaces.

```

[edit interfaces]
user@T-PE1# set ge-3/1/0 unit 0 family inet address 192.0.2.1/24
user@T-PE1# set ge-3/1/0 unit 0 family mpls
user@T-PE1# set ge-3/1/2 encapsulation ethernet-ccc
user@T-PE1# set ge-3/1/2 unit 0
user@T-PE1# set lo0 unit 0 family inet address 10.255.10.1/32 primary

```

2. Set the autonomous system number.

```

[edit routing-options]
user@T-PE1# set autonomous-system 1

```

3. Enable MPLS on all the interfaces of T-PE1, excluding the management interface.

```

[edit protocols]
user@T-PE1# set mpls interface all
user@T-PE1# set mpls interface fxp0.0 disable

```

4. Enable autodiscovery of intermediate S-PEs that make up the MS-PW using BGP.

```
[edit protocols]
user@T-PE1# set bgp family l2vpn auto-discovery-mspw
```

5. Configure the BGP group for T-PE1.

```
[edit protocols]
user@T-PE1# set bgp group mspw type internal
```

6. Assign local and neighbor addresses to the mspw group for T-PE1 to peer with S-PE1.

```
[edit protocols]
user@T-PE1# set bgp group mspw local-address 10.255.10.1
user@T-PE1# set bgp group mspw neighbor 10.255.2.1
```

7. Configure OSPF on all the interfaces of T-PE1, excluding the management interface.

```
[edit protocols]
user@T-PE1# set ospf area 0.0.0.0 interface lo0.0
user@T-PE1# set ospf area 0.0.0.0 interface all
user@T-PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
```

8. Configure LDP on all the interfaces of T-PE1, excluding the management interface.

```
[edit protocols]
user@T-PE1# set ldp interface all
user@T-PE1# set ldp interface fxp0.0 disable
user@T-PE1# set ldp interface lo0.0
```

9. Configure the Layer 2 VPN routing instance on T-PE1.

```
[edit routing-instances]
user@T-PE1# set ms-pw instance-type l2vpn
```

10. Assign the interface name for the mspw routing instance.

```
[edit routing-instances]
```

```
user@T-PE1# set ms-pw interface ge-3/1/2.0
```

11. Configure the route distinguisher for the mspw routing instance.

```
[edit routing-instances]
user@T-PE1# set ms-pw route-distinguisher 10.10.10.15
```

12. Configure the Layer 2 VPN ID community for FEC 129 MS-PW.

```
[edit routing-instances]
user@T-PE1# set ms-pw l2vpn-id l2vpn-id:100:15
```

13. Configure a VPN routing and forwarding (VRF) target for the mspw routing instance.

```
[edit routing-instances]
user@T-PE1# set ms-pw vrf-target target:100:115
```

14. Configure the source attachment identifier (SAI) value using Layer 2 VPN as the routing protocol for the mspw routing instance.

```
[edit routing-instances]
user@T-PE1# set ms-pw protocols l2vpn site CE1 source-attachment-identifier 800:800:800
```

15. Assign the interface name that connects the CE1 site to the VPN, and configure the target attachment identifier (TAI) value using Layer 2 VPN as the routing protocol for the mspw routing instance.

```
[edit routing-instances]
user@T-PE1# set ms-pw protocols l2vpn site CE1 interface ge-3/1/2.0 target-attachment-identifier
700:700:700
```

16. (Optional) Configure T-PE1 to send MS-PW status TLVs.

```
[edit routing-instances]
user@T-PE1# set ms-pw protocols l2vpn pseudowire-status-tlv
```

17. (Optional) Configure OAM capabilities for the VPN.

```
[edit routing-instances]
user@T-PE1# set ms-pw protocols l2vpn oam bfd-liveness-detection minimum-interval 300
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure S-PE1 (ASBR 1) in the inter-AS scenario:

NOTE: Repeat this procedure for the S-PE2 (ASBR 2) device in the MPLS domain, after modifying the appropriate interface names, addresses, and other parameters.

1. Configure S-PE1 (ASBR 1) interfaces.

```
[edit interfaces]
user@S-PE1# set ge-1/3/1 unit 0 family inet address 192.0.2.9/24
user@S-PE1# set ge-1/3/1 unit 0 family mpls
user@S-PE1# set ge-1/3/2 unit 0 family inet address 192.0.2.22/24
user@S-PE1# set ge-1/3/2 unit 0 family mpls
user@S-PE1# set lo0 unit 0 family inet address 10.255.2.1/32 primary
```

2. Set the autonomous system number.

```
[edit routing-options]
user@S-PE1# set autonomous-system 1
```

3. Enable MPLS on all the interfaces of S-PE1 (ASBR 1), excluding the management interface.

```
[edit protocols]
user@S-PE1# set mpls interface all
user@S-PE1# set mpls interface fxp0.0 disable
```

4. Enable autodiscovery of S-PE using BGP.

```
[edit protocols]
user@S-PE1# set bgp family l2vpn auto-discovery-mspw
```

5. Configure the IBGP group for S-PE1 (ASBR 1) to peer with T-PE1.

```
[edit protocols]
user@S-PE1# set bgp group to_T-PE1 type internal
```

6. Configure the IBGP group parameters.

```
[edit protocols]
user@S-PE1# set bgp group to_T-PE1 local-address 10.255.2.1
user@S-PE1# set bgp group to_T-PE1 export next-hop-self
user@S-PE1# set bgp group to_T-PE1 neighbor 10.255.10.1
```

7. Configure the EBGP group for S-PE1 (ASBR 1) to peer with S-PE2 (ASBR 2).

```
[edit protocols]
user@S-PE1# set bgp group to_S-PE2 type external
```

8. Configure the EBGP group parameters.

```
[edit protocols]
user@S-PE1# set bgp group to_S-PE2 local-address 10.255.2.1
user@S-PE1# set bgp group to_S-PE2 peer-as 2
user@S-PE1# set bgp group to_S-PE2 neighbor 10.255.3.1 multihop ttl 1
```

9. Configure OSPF on all the interfaces of S-PE1 (ASBR 1), excluding the management interface.

```
[edit protocols]
user@S-PE1# set ospf area 0.0.0.0 interface all
user@S-PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
user@S-PE1# set ospf area 0.0.0.0 interface lo0.0 passive
```

10. Configure LDP on all the interfaces of S-PE1 (ASBR 1), excluding the management interface.

```
[edit protocols]
user@S-PE1# set ldp interface all
user@S-PE1# set ldp interface fxp0.0 disable
user@S-PE1# set ldp interface lo0.0
```

11. Define the policy for enabling next-hop-self on S-PE1 (ASBR 1).

```
[edit policy-options]
user@S-PE1# set policy-statement next-hop-self then next-hop self
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show routing-instances**, **show routing-options**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

T-PE1

```
user@T-PE1# show interfaces
ge-3/1/0 {
  unit 0 {
    family inet {
      address 192.0.2.1/24;
    }
    family mpls;
  }
}
ge-3/1/2 {
  encapsulation ethernet-ccc;
  unit 0;
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.10.1/32 {
        primary;
      }
    }
  }
}
```

```
user@T-PE1# show routing-options
autonomous-system 1;
```

```
user@T-PE1# show protocols
mpls {
  interface all;
```



```

interface fxp0.0 {
    disable;
}
}
bgp {
    family l2vpn {
        auto-discovery-mspw;
    }
    group mspw {
        type internal;
        local-address 10.255.10.1;
        neighbor 10.255.2.1;
    }
}
ospf {
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
        interface lo0.0;
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}

```

```

user@T-PE1# show routing-instances
ms-pw {
    instance-type l2vpn;
    interface ge-3/1/2.0;
    route-distinguisher 10.10.10.10:15;
    l2vpn-id l2vpn-id:100:15;
    vrf-target target:100:115;
    protocols {
        l2vpn {
            site CE1 {
                source-attachment-identifier 800:800:800;
                interface ge-3/1/2.0 {
                    target-attachment-identifier 700:700:700;
                }
            }
        }
    }
}

```

```
user@S-PE1# show interfaces
ge-1/3/1 {
  unit 0 {
    family inet {
      address 192.0.2.9/24;
    }
    family mpls;
  }
}
ge-1/3/2 {
  unit 0 {
    family inet {
      address 192.0.2.22/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.2.1/32 {
        primary;
      }
    }
  }
}
```

```
user@T-PE1# show routing-options
autonomous-system 1;
```

```
user@S-PE1# show protocols
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
bgp {
  family l2vpn {
    auto-discovery-mspw;
  }
  group to_T-PE1 {
    type internal;
    local-address 10.255.2.1;
    export next-hop-self;
    neighbor 10.255.10.1;
  }
  group to_S-PE2 {
    type external;
    local-address 10.255.2.1;
    peer-as 2;
    neighbor 10.255.3.1 {
      multihop {
        ttl 1;
      }
    }
  }
}
ospf {
  area 0.0.0.0 {
    interface lo0.0 {
      passive;
    }
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
ldp {
  interface all;
```

```

interface fxp0.0 {
  disable;
}
interface lo0.0;
}

```

```

user@T-PE1# show policy-options
policy-statement next-hop-self {
  then {
    next-hop self;
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Verifying the Routes | 1188](#)
- [Verifying the LDP Database | 1191](#)
- [Checking the MS-PW Connections on T-PE1 | 1192](#)
- [Checking the MS-PW Connections on S-PE1 | 1194](#)
- [Checking the MS-PW Connections on S-PE2 | 1195](#)
- [Checking the MS-PW Connections on T-PE2 | 1197](#)

Confirm that the configuration is working properly.

Verifying the Routes

Purpose

Verify that the expected routes are learned.

Action

From operational mode, run the **show route** command for the **bgp.l2vpn.1**, **ldp.l2vpn.1**, **mpls.0**, and **ms-pw.l2vpn.1** routing tables.

From operational mode, run the **show route table bgp.l2vpn.1** command.

```
user@T-PE1> show route table bgp.l2vpn.1
```

```
bgp.l2vpn.1: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

10.10.10.10:15:700:0.0.2.188:700/160 AD2

```
*[BGP/170] 16:13:11, localpref 100, from 10.255.2.1
  AS path: 2 I, validation-state: unverified
  > to 203.0.113.2 via ge-3/1/0.0, Push 300016
```

From operational mode, run the **show route table ldp.l2vpn.1** command.

```
user@T-PE1> show route table ldp.l2vpn.1
```

```
ldp.l2vpn.1: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

10.255.2.1:CtrlWord:5:100:15:700:0.0.2.188:700:800:0.0.3.32:800/304 PW2

```
*[LDP/9] 16:21:27
  Discard
```

From operational mode, run the **show route table mpls.0** command.

```
user@T-PE1> show route table mpls.0
```

```
mpls.0: 12 destinations, 12 routes (12 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
0          *[MPLS/0] 1w6d 00:28:26, metric 1
           Receive
1          *[MPLS/0] 1w6d 00:28:26, metric 1
           Receive
2          *[MPLS/0] 1w6d 00:28:26, metric 1
           Receive
13         *[MPLS/0] 1w6d 00:28:26, metric 1
           Receive
299920     *[LDP/9] 1w5d 01:26:08, metric 1
           > to 203.0.113.2 via ge-3/1/0.0, Pop
299920(S=0) *[LDP/9] 1w5d 01:26:08, metric 1
           > to 203.0.113.2 via ge-3/1/0.0, Pop
299936     *[LDP/9] 1w5d 01:26:08, metric 1
           > to 203.0.113.2 via ge-3/1/0.0, Swap 300016
300096     *[LDP/9] 16:22:35, metric 1
```

```

> to 203.0.113.2 via ge-3/1/0.0, Swap 300128
300112      *[LDP/9] 16:22:35, metric 1
> to 203.0.113.2 via ge-3/1/0.0, Swap 300144
300128      *[LDP/9] 16:22:35, metric 1
> to 203.0.113.2 via ge-3/1/0.0, Swap 300160
300144      *[L2VPN/7] 16:22:33
> via ge-3/1/2.0, Pop      Offset: 4
ge-3/1/2.0  *[L2VPN/7] 16:22:33, metric2 1
> to 203.0.113.2 via ge-3/1/0.0, Push 300176, Push 300016(top)
Offset: 252

```

From operational mode, run the **show route table ms-pw.l2vpn.1** command.

```
user@T-PE1> show route table ms-pw.l2vpn.1
```

```

ms-pw.l2vpn.1: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.10.10.10:15:700:0.0.2.188:700/160 AD2
      *[BGP/170] 16:23:27, localpref 100, from 10.255.2.1
      AS path: 2 I, validation-state: unverified
      > to 203.0.113.2 via ge-3/1/0.0, Push 300016
10.10.10.10:15:800:0.0.3.32:800/160 AD2
      *[L2VPN/170] 1w5d 23:25:19, metric2 1
      Indirect
10.255.2.1:CtrlWord:5:100:15:700:0.0.2.188:700:800:0.0.3.32:800/304 PW2
      *[LDP/9] 16:23:25
      Discard
10.255.2.1:CtrlWord:5:100:15:800:0.0.3.32:800:700:0.0.2.188:700/304 PW2
      *[L2VPN/7] 16:23:27, metric2 1
      > to 203.0.113.2 via ge-3/1/0.0, Push 300016

```

Meaning

The output shows all the learned routes, including the autodiscovery (AD) routes.

The AD2 prefix format is **RD:SAll-type2**, where:

- **RD** is the route distinguisher value.
- **SAll-type2** is the type 2 source attachment identifier value.

The PW2 prefix format is **Neighbor_Addr:C:PWtype:l2vpn-id:SAll-type2:TAIl-type2**, where:

- **Neighbor_Addr** is the loopback address of neighboring S-PE device.
- **C** indicates if Control Word (CW) is enabled or not.
 - **C** is **CtrlWord** if CW is set.
 - **C** is **NoCtrlWord** if CW is not set.
- **PWtype** indicates the type of the pseudowire.
 - **PWtype** is **4** if it is in Ethernet tagged mode.
 - **PWtype** is **5** if it is Ethernet only.
- **l2vpn-id** is the Layer 2 VPN ID for the MS-PW routing instance.
- **SAll-type2** is the type 2 source attachment identifier value.
- **TAIl-type2** is the type 2 target attachment identifier value.

Verifying the LDP Database

Purpose

Verify the MS-PW labels received by T-PE1 from S-PE1 and sent from T-PE1 to S-PE1.

Action

From operational mode, run the **show ldp database** command.

user@T-PE1> **show ldp database**

```
Input label database, 10.255.10.1:0--10.255.2.1:0
  Label      Prefix
    3        10.255.2.1/32
  300112      10.255.3.1/32
  300128      10.255.4.1/32
  299968      10.255.10.1/32
  299904      10.255.13.1/32
  300144      10.255.14.1/32
300176    FEC129 CtrlWord ETHERNET 000a0064:0000000f 000002bc:000002bc:000002bc
00000320:00000320:00000320
```

```
Output label database, 10.255.10.1:0--10.255.2.1:0
  Label      Prefix
  299936      10.255.2.1/32
  300096      10.255.3.1/32
  300112      10.255.4.1/32
```

```

      3      10.255.10.1/32
299920      10.255.13.1/32
300128      10.255.14.1/32
300144    FEC129 CtrlWord ETHERNET 000a0064:0000000f 00000320:00000320:00000320
000002bc:000002bc:000002bc

Input label database, 10.255.10.1:0--10.255.13.1:0
  Label      Prefix
300016      10.255.2.1/32
300128      10.255.3.1/32
300144      10.255.4.1/32
300080      10.255.10.1/32
      3      10.255.13.1/32
300160      10.255.14.1/32

Output label database, 10.255.10.1:0--10.255.13.1:0
  Label      Prefix
299936      10.255.2.1/32
300096      10.255.3.1/32
300112      10.255.4.1/32
      3      10.255.10.1/32
299920      10.255.13.1/32
300128      10.255.14.1/32

```

Meaning

The labels with **FEC129** prefix are related to the MS-PW.

Checking the MS-PW Connections on T-PE1

Purpose

Make sure that all of the FEC 129 MS-PW connections come up correctly.

Action

From operational mode, run the **show l2vpn connections extensive** command.

```
user@T-PE1> show l2vpn connections extensive
```

```
Layer-2 VPN connections:
```

```
Legend for connection status (St)
```

```

EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch     WE -- interface and instance encaps not same

```


VC-Dn -- Virtual circuit down NP -- interface hardware not present
 CM -- control-word mismatch -> -- only outbound connection is up
 CN -- circuit not provisioned <- -- only inbound connection is up
 OR -- out of range Up -- operational
 OL -- no outgoing label Dn -- down
 LD -- local site signaled down CF -- call admission control failure
 RD -- remote site signaled down SC -- local and remote site ID collision
 LN -- local site not designated LM -- local site ID not minimum designated
 RN -- remote site not designated RM -- remote site ID not minimum designated
 XX -- unknown connection status IL -- no incoming label
 MM -- MTU mismatch MI -- Mesh-Group ID not available
 BK -- Backup connection ST -- Standby connection
 PF -- Profile parse failure PB -- Profile busy
 RS -- remote site standby SN -- Static Neighbor
 LB -- Local site not best-site RB -- Remote site not best-site
 VM -- VLAN ID mismatch

Legend for interface status

Up -- operational
 Dn -- down

Instance: ms-pw

L2vpn-id: 100:15

Number of local interfaces: 1

Number of local interfaces up: 1

ge-3/1/2.0

Local source-attachment-id: 800:0.0.3.32:800 (CE1)

Target-attachment-id	Type	St	Time last up	# Up trans
700:0.0.2.188:700	rmt	Up	Sep 18 01:10:55 2013	1

Remote PE: 10.255.2.1, Negotiated control-word: Yes (Null)

Incoming label: 300048, Outgoing label: 300016

Negotiated PW status TLV: Yes

local PW status code: 0x00000000, Neighbor PW status code: 0x00000000

Local interface: ge-3/1/2.0, Status: Up, Encapsulation: ETHERNET

Pseudowire Switching Points :

Local address	Remote address	Status
10.255.2.1	10.255.3.1	forwarding
10.255.3.1	10.255.14.1	forwarding

Connection History:

Sep 18 01:10:55 2013	status update timer	
Sep 18 01:10:55 2013	PE route changed	
Sep 18 01:10:55 2013	Out lbl Update	300016
Sep 18 01:10:55 2013	In lbl Update	300048
Sep 18 01:10:55 2013	loc intf up	ge-3/1/2.0

Check the following fields in the output to verify that MS-PW is established between the T-PE devices:

- **Target-attachment-id**—Check if the TAI value is the SAI value of T-PE2.
- **Remote PE**—Check if the T-PE2 loopback address is listed.
- **Negotiated PW status TLV**—Ensure that the value is **Yes**.
- **Pseudowire Switching Points**—Check if the switching points are listed from S-PE1 to S-PE2 and from S-PE2 to T-PE2.

Meaning

MS-PW is established between T-PE1 and T-PE2 in the forwarding direction.

Checking the MS-PW Connections on S-PE1

Purpose

Make sure that all of the FEC 129 MS-PW connections come up correctly for the mspw routing instance.

Action

From operational mode, run the **show l2vpn connections instance __MSPW__ extensive** command.

```
user@S-PE1> show l2vpn connections instance __MSPW__ extensive
```

```
Layer-2 VPN connections:
```

```
Legend for connection status (St)
```

EI -- encapsulation invalid	NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch	WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down	NP -- interface hardware not present
CM -- control-word mismatch	-> -- only outbound connection is up
CN -- circuit not provisioned	<- -- only inbound connection is up
OR -- out of range	Up -- operational
OL -- no outgoing label	Dn -- down
LD -- local site signaled down	CF -- call admission control failure
RD -- remote site signaled down	SC -- local and remote site ID collision
LN -- local site not designated	LM -- local site ID not minimum designated
RN -- remote site not designated	RM -- remote site ID not minimum designated
XX -- unknown connection status	IL -- no incoming label
MM -- MTU mismatch	MI -- Mesh-Group ID not available
BK -- Backup connection	ST -- Standby connection
PF -- Profile parse failure	PB -- Profile busy
RS -- remote site standby	SN -- Static Neighbor
LB -- Local site not best-site	RB -- Remote site not best-site
VM -- VLAN ID mismatch	

```

Legend for interface status
Up -- operational
Dn -- down

Instance: __MSPW__
  L2vpn-id: 100:15
  Local source-attachment-id: 700:0.0.2.188:700
    Target-attachment-id      Type  St      Time last up      # Up trans
    800:0.0.3.32:800          rmt   Up      Sep 18 01:17:38 2013      1
    Remote PE: 10.255.10.1, Negotiated control-word: Yes (Null), Encapsulation:
ETHERNET
    Incoming label: 300016, Outgoing label: 300048
    Negotiated PW status TLV: Yes
    local PW status code: 0x00000000, Neighbor PW status code: 0x00000000
  Local source-attachment-id: 800:0.0.3.32:800
    Target-attachment-id      Type  St      Time last up      # Up trans
    700:0.0.2.188:700          rmt   Up      Sep 18 01:17:38 2013      1
    Remote PE: 10.255.3.1, Negotiated control-word: Yes (Null), Encapsulation:
ETHERNET
    Incoming label: 300000, Outgoing label: 300064
    Negotiated PW status TLV: Yes
    local PW status code: 0x00000000, Neighbor PW status code: 0x00000000
  Pseudowire Switching Points :
    Local address      Remote address      Status
    10.255.3.1         10.255.14.1        forwarding

```

Check the following fields in the output to verify that MS-PW is established between the T-PE devices:

- **Target-attachment-id**—Check if the TAI value is the SAI value of T-PE2.
- **Remote PE**—Check if the T-PE1 and S-PE2 loopback addresses are listed.
- **Negotiated PW status TLV**—Ensure that the value is **Yes**.
- **Pseudowire Switching Points**—Check if the switching points are listed from S-PE2 to T-PE2.

Meaning

MS-PW is established between T-PE1 and T-PE2 in the forwarding direction.

Checking the MS-PW Connections on S-PE2

Purpose

Make sure that all of the FEC 129 MS-PW connections come up correctly for the mspw routing instance.

Action

From operational mode, run the **show l2vpn connections instance __MSPW__ extensive** command.

```
user@S-PE2> show l2vpn connections instance __MSPW__ extensive
```

Layer-2 VPN connections:

Legend for connection status (St)

EI -- encapsulation invalid	NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch	WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down	NP -- interface hardware not present
CM -- control-word mismatch	-> -- only outbound connection is up
CN -- circuit not provisioned	<- -- only inbound connection is up
OR -- out of range	Up -- operational
OL -- no outgoing label	Dn -- down
LD -- local site signaled down	CF -- call admission control failure
RD -- remote site signaled down	SC -- local and remote site ID collision
LN -- local site not designated	LM -- local site ID not minimum designated
RN -- remote site not designated	RM -- remote site ID not minimum designated
XX -- unknown connection status	IL -- no incoming label
MM -- MTU mismatch	MI -- Mesh-Group ID not available
BK -- Backup connection	ST -- Standby connection
PF -- Profile parse failure	PB -- Profile busy
RS -- remote site standby	SN -- Static Neighbor
LB -- Local site not best-site	RB -- Remote site not best-site
VM -- VLAN ID mismatch	

Legend for interface status

Up -- operational
Dn -- down

Instance: __MSPW__

L2vpn-id: 100:15

Local source-attachment-id: 700:0.0.2.188:700

Target-attachment-id	Type	St	Time last up	# Up trans
800:0.0.3.32:800	rmt	Up	Sep 18 00:58:55 2013	1

Remote PE: 10.255.2.1, Negotiated control-word: Yes (Null), Encapsulation:

ETHERNET

Incoming label: 300064, Outgoing label: 300000

Negotiated PW status TLV: Yes

local PW status code: 0x00000000, Neighbor PW status code: 0x00000000

Pseudowire Switching Points :

Local address	Remote address	Status
10.255.2.1	10.255.10.1	forwarding

```

Local source-attachment-id: 800:0.0.3.32:800
  Target-attachment-id      Type  St      Time last up      # Up trans
700:0.0.2.188:700          rmt   Up      Sep 18 00:58:55 2013      1
  Remote PE: 10.255.14.1, Negotiated control-word: Yes (Null), Encapsulation:
ETHERNET
  Incoming label: 300048, Outgoing label: 300112
  Negotiated PW status TLV: Yes
  local PW status code: 0x00000000, Neighbor PW status code: 0x00000000

```

Check the following fields in the output to verify that MS-PW is established between the T-PE devices:

- **Target-attachment-id**—Check if the TAI value is the SAI value of T-PE1.
- **Remote PE**—Check if the S-PE1 and T-PE2 loopback addresses are listed.
- **Negotiated PW status TLV**—Ensure that the value is **Yes**.
- **Pseudowire Switching Points**—Check if the switching points are listed from S-PE1 to T-PE1.

Meaning

MS-PW is established between T-PE1 and T-PE2 in the reverse direction.

Checking the MS-PW Connections on T-PE2

Purpose

Make sure that all of the FEC 129 MS-PW connections come up correctly.

Action

From operational mode, run the **show l2vpn connections extensive** command.

```
user@T-PE2> show l2vpn connections extensive
```

```
Layer-2 VPN connections:
```

```
Legend for connection status (St)
```

EI -- encapsulation invalid	NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch	WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down	NP -- interface hardware not present
CM -- control-word mismatch	-> -- only outbound connection is up
CN -- circuit not provisioned	<- -- only inbound connection is up
OR -- out of range	Up -- operational
OL -- no outgoing label	Dn -- down
LD -- local site signaled down	CF -- call admission control failure
RD -- remote site signaled down	SC -- local and remote site ID collision

```

LN -- local site not designated  LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated
XX -- unknown connection status  IL -- no incoming label
MM -- MTU mismatch                MI -- Mesh-Group ID not available
BK -- Backup connection           ST -- Standby connection
PF -- Profile parse failure        PB -- Profile busy
RS -- remote site standby          SN -- Static Neighbor
LB -- Local site not best-site     RB -- Remote site not best-site
VM -- VLAN ID mismatch

```

Legend for interface status

```

Up -- operational
Dn -- down

```

Instance: ms-pw

L2vpn-id: 100:15

Number of local interfaces: 1

Number of local interfaces up: 1

ge-2/0/0.0

Local source-attachment-id: 700:0.0.2.188:700 (CE2)

Target-attachment-id	Type	St	Time last up	# Up trans
800:0.0.3.32:800	rmt	Up	Sep 18 01:35:21 2013	1

Remote PE: 10.255.3.1, Negotiated control-word: Yes (Null)

Incoming label: 300112, Outgoing label: 300048

Negotiated PW status TLV: Yes

local PW status code: 0x00000000, Neighbor PW status code: 0x00000000

Local interface: ge-2/0/0.0, Status: Up, Encapsulation: ETHERNET

Pseudowire Switching Points :

Local address	Remote address	Status
10.255.3.1	10.255.2.1	forwarding
10.255.2.1	10.255.10.1	forwarding

Connection History:

Sep 18 01:35:21 2013	status update timer	
Sep 18 01:35:21 2013	PE route changed	
Sep 18 01:35:21 2013	Out lbl Update	300048
Sep 18 01:35:21 2013	In lbl Update	300112
Sep 18 01:35:21 2013	loc intf up	ge-2/0/0.0

Check the following fields in the output to verify that MS-PW is established between the T-PE devices:

- **Target-attachment-id**—Check if the TAI value is the SAI value of T-PE1.
- **Remote PE**—Check if the T-PE1 loopback address is listed.

- **Negotiated PW status TLV**—Ensure that the value is **Yes**.
- **Pseudowire Switching Points**—Check if the switching points are listed from S-PE2 to S-PE1 and from S-PE1 to T-PE1.

Meaning

MS-PW is established between T-PE1 and T-PE2 in the reverse direction.

Troubleshooting

IN THIS SECTION

- [Ping | 1199](#)
- [Bidirectional Forwarding Detection | 1200](#)
- [Traceroute | 1201](#)

To troubleshoot the MS-PW connection, see:

Ping

Problem

How to check the connectivity between the T-PE devices and between a T-PE device and an intermediary device.

Solution

Verify that T-PE1 can ping T-PE2. The **ping mpls l2vpn fec129** command accepts SAs and TAs as integers or IP addresses and also allows you to use the CE-facing interface instead of the other parameters (**instance**, **local-id**, **remote-id**, **remote-pe-address**).

Checking Connectivity Between T-PE1 and T-PE2

```
user@T-PE1> ping mpls l2vpn fec129 instance FEC129-VPWS local-id 800:800:800 remote-pe-address
10.255.14.1 remote-id 700:700:700
```

```
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

```
user@T-PE1> ping mpls l2vpn fec129 interface ge-3/1/2
```

```
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

Checking Connectivity Between T-PE1 and S-PE2

user@T-PE1> **ping mpls l2vpn fec129 interface ge-3/1/2 bottom-label-ttl 2**

```
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

Bidirectional Forwarding Detection

Problem

How to use BFD to troubleshoot the MS-PW connection from the T-PE device.

Solution

From operational mode, verify the **show bfd session extensive** command output.

user@T-PE1> **show bfd session extensive**

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
198.51.100.7	Up	ge-3/1/0.0	0.900	0.300	3

```
Client FEC129-OAM, TX interval 0.300, RX interval 0.300
Session up time 03:12:42
Local diagnostic None, remote diagnostic None
Remote state Up, version 1
Replicated
Session type: VCCV BFD
Min async interval 0.300, min slow interval 1.000
Adaptive async TX interval 0.300, RX interval 0.300
Local min TX interval 0.300, minimum RX interval 0.300, multiplier 3
Remote min TX interval 0.300, min RX interval 0.300, multiplier 3
Local discriminator 19, remote discriminator 19
Echo mode disabled/inactive
Remote is control-plane independent
L2vpn-id 100:15, Local-id 800:0.0.3.32:800, Remote-id 700:0.0.2.188:700
Session ID: 0x103
```



```
1 sessions, 1 clients
Cumulative transmit rate 3.3 pps, cumulative receive rate 3.3 pps
```

Traceroute

Problem

How to verify that MS-PW was established.

Solution

From operational mode, verify **traceroute** output.

```
user@T-PE1> traceroute mpls l2vpn fec129 interface interface
```

```
Probe options: ttl 64, retries 3, exp 7
```

ttl	Label	Protocol	Address	Previous Hop	Probe Status
1		FEC129	10.255.10.1	(null)	Success
2		FEC129	10.255.2.1	10.255.10.1	Success
3		FEC129	10.255.3.1	10.255.2.1	Success
4		FEC129	10.255.14.1	10.255.2.1	Egress

```
Path 1 via ge-3/1/2 destination 198.51.100.0
```

MPLS Stitching For Virtual Machine Connection

IN THIS SECTION


- [When Would I Use Stitching? | 1202](#)
- [How Does MPLS Stitching Work? | 1202](#)
- [How Do I Configure Stitching? | 1203](#)
- [Which Switches Support Stitching? | 1203](#)
- [Q&A | 1203](#)

By using MPLS, the stitching feature of Junos OS provides connectivity between virtual machines that reside either on opposite sides of data center routers or in different data centers. An external controller, programmed in the data-plane, assigns MPLS labels to both virtual machines and servers. Then, the signaled MPLS labels are used between the data center routers, generating static link switched paths (LSPs), resolved over either BGP labeled unicast, RSVP or LDP, to provide the routes dictated by the labels.

When Would I Use Stitching?

There are several ways to connect virtual machines. One option when you have virtual machines on opposite sides of a router (or different data centers) is to use MPLS stitching. A typical topology for using MPLS stitching is shown in [Figure 96 on page 1202](#).

Figure 96: Virtual Machines on Either Side of Routers

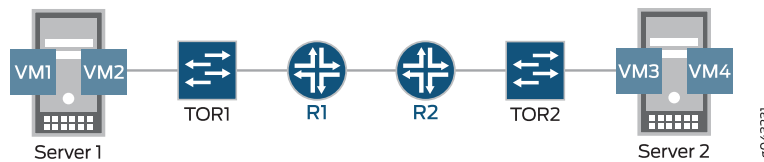

The above topology consists of the following MPLS layers: VMs | Servers | ToRs | Router Router | ToRs | Servers | VMs

NOTE: The label on the left is the top of the label stack.

How Does MPLS Stitching Work?

With stitching, the MPLS static allocation of labels demultiplexes incoming traffic onto any device/entity in the next layer in the direction of traffic flow. Essentially, there is a label hierarchy that picks up labels for the correct top-of-rack switch, server, and virtual machine that receives traffic. Static label assignments are done between the top-of-rack switches and the virtual machines.

For example, imagine that traffic is sent from VM1 to VM3 in [Figure 96 on page 1202](#). When traffic exits Server1, its label stack is L1 | L2 | L3 where:

- L1 represents the egress top-of-rack switch ToR1.
- L2 represents the physical server, Server2, towards which the egress-side ToR will forward the traffic.
- L3: represents the virtual machine on Server2 to which the Server2 should deliver the traffic.

Traffic arriving at ToR1 needs to be sent to ToR2. Since ToR1 and ToR2 are not directly connected, traffic must flow from ToR1 to ToR2 using label-switching starting on the outermost (top) label. Stitching has been added to static-LSP functionality to SWAP L1 to a I-BGP label that ToR2 advertises to ToR1. The label stack now must contain another label at the top to enable forwarding of the labeled packets between

ToR1 and ToR2. An L-Top label is added if L-BGP is resolved over RSVP/LDP. If static LSP is resolved over L-BGP, then the top label is swapped with the L-BGP label and there is no L-Top label. When the traffic exits ToR1, the stack is: L-top | L-BGP | L2 | L3.

Traffic from ToR1 to ToR2 is then label switched over any signaled LSP.

When traffic arrives at ToR2, the top label is removed with PHP (popped) and the label stack becomes L-BGP | L2 | L3. Since L-BGP is a implicit null label, ToR2 pops the static LSP label L2 that corresponds to the egress server and then forwards the packet to the egress server using the static-LSP configuration on ToR2, which corresponds to a single-hop implicit-NUL LSP.

The outgoing stack becomes L3 and the next-hop is the egress server Server2.

When traffic arrives at the egress server Server2, Server2 pops L3 and delivers the packet to VM3.

How Do I Configure Stitching?

The new keyword **stitch** has been added under **transit** to resolve the remote next-hop. For example, instead of **set protocols mpls static-label-switched-path static-to-ToR2 transit 1000000 next-hop 10.9.82.47**, a top-of-rack switch redirects packets to another top-of-rack switch with **set protocols mpls static-label-switched-path static-to-ToR2 transit 1000000 stitch**. The [show mpls static-lsp](#) command has been extended to show the LSP state as 'InProgress' whenever the LSP is waiting for protocol next-hop resolution by resolver.

See the complete example for stitching at *Using MPLS Stitching with BGP to Connect Virtual Machines* for more information.

Which Switches Support Stitching?

See [Feature Explorer](#) for the list of switches that support the [MPLS Stitching For Virtual Machine Connections](#) feature.

Q&A

Q: Is link and node protection for the next-hop provided by MPLS stitching?

A: Link and node protection for the next-hop of transit LSP stitched to L-BGP LSP are not needed. That is provided by L-BGP LSP.

TDM Pseudowires Overview

A TDM pseudowire acts as Layer 2 circuit or service for T1 and E1 circuit signals across an MPLS packet-switched network. On ACX Series routers, you configure a TDM pseudowire with Structure-Agnostic Time Division Multiplexing (TDM) over Packet (SAToP) on the ACX Series built-in channelized T1 and E1 interfaces. When you configure a TDM pseudowire, the network between the customer edge (CE) routers appears transparent to the CE routers, making it seem that the CE routers are directly connected. With the SAToP configuration on the provider edge (PE) router's T1 and E1 interfaces, the interworking function (IWF) forms a payload (frame) that contains the CE router's T1 and E1 Layer 1 data and control word. This data is transported to the remote PE over the pseudowire. The remote PE removes all the Layer 2 and

MPLS headers added in the network cloud and forwards the control word and the Layer 1 data to the remote IWF, which in turn forwards the data to the remote CE router.

Example: TDM Pseudowire Base Configuration

IN THIS SECTION

- [Requirements | 1204](#)
- [Overview of a TDM Pseudowire Base Configuration | 1204](#)
- [Configuring an TDM Pseudowire | 1204](#)

Requirements

The following is a list of the hardware and software requirements for this configuration.

- One ACX Series router
- Junos OS Release 12.2 or later

Overview of a TDM Pseudowire Base Configuration

The configuration shown here is the base configuration of an TDM pseudowire with T1 framing on an ACX Series router. This configuration is for one provider edge router. To complete the TDM pseudowire configuration, you need to repeat this configuration on an other provider edge router in the Multiprotocol Label Switched (MPLS) network.

Configuring an TDM Pseudowire

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them in a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level:

```
set chassis fpc 0 pic 0 framing t1
set interfaces ct1-0/0/0 no-partition interface-type t1
set interfaces t1-0/0/0 encapsulation satop
set interfaces t1-0/0/0 unit 0
set interfaces ge-0/2/0 unit 0 family inet address 20.1.1.2/24
set interfaces ge-0/2/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 70.1.1.1/32
set protocols rsvp interface ge-0/2/0.0
set protocols mpls no-cspf
```

```

set protocols mpls label-switched-path PE1-to-PE2 to 40.1.1.1
set protocols mpls interface ge-0/2/0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/2/0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-0/2/0.0
set protocols ldp interface lo0.0
set protocols l2circuit neighbor 40.1.1.1 interface t1-0/0/0.0 virtual-circuit-id
1

```

NOTE: To configure a TDM pseudowire with E1 framing, include the **e1** statement at the **[edit chassis fpc 0 pic 0 framing]** hierarchy level instead of the **t1** statement shown in this example.

Step-by-Step Procedure

1. Configure the framing format:

```

[edit]
user@host# edit chassis
[edit chassis]
user@host# set fpc 0 pic 0 framing t1

```

2. Create a T1 interface on a channelized T1 interface (**ct1**) and enable full channelization with the **no-partition** statement. On the logical T1 interface, set the Structure-Agnostic TDM over Packet (SAToP) encapsulation mode.

```

[edit]
user@host# edit interfaces
[edit interfaces]
user@host# set ct1-0/0/0 no-partition interface-type t1
user@host# set t1-0/0/0 encapsulation satop
user@host# set t1-0/0/0 unit 0

```

3. Create a Gigabit Ethernet interface and enable MPLS on that interface. Create the loopback (**lo0**) interface:

```
[edit interfaces]
user@host# set ge-0/2/0 unit 0 family inet address 20.1.1.2/24
user@host# set ge-0/2/0 unit 0 family mpls
user@host# set lo0 unit 0 family inet address 70.1.1.1/32
```

4. Enable the MPLS and RSVP protocols on the MPLS interface—**ge-0/2/0.0**:

```
[edit]
user@host# edit protocols
[edit protocols]
user@host# set rsvp interface ge-0/2/0.0
user@host# set mpls interface ge-0/2/0.0
```

5. Configure LDP. If you configure RSVP for a pseudowire, you must also configure LDP:

```
[edit protocols]
user@host# set ldp interface ge-0/2/0.0
user@host# set ldp interface lo0.0
```

6. Configure a point-to-point label-switched path (LSP) and disable constrained-path LSP computation:

```
[edit protocols]
user@host# set mpls label-switched-path PE1-to-PE2 to 40.1.1.1
user@host# set mpls no-cspf
```

7. Configure OSPF and enable traffic engineering on the MPLS interface—**ge-0/2/0.0**, and on the loopback (**lo0**) interface:

```
[edit protocols]
user@host# set ospf traffic-engineering
user@host# set ospf area 0.0.0.0 interface ge-0/2/0.0
user@host# set ospf area 0.0.0.0 interface lo0.0 passive
```

8. Uniquely identify a Layer 2 circuit for the TDM pseudowire:

```
[edit protocols]
user@host# set l2circuit neighbor 40.1.1.1 interface t1-0/0/0.0 virtual-circuit-id 1
```

Results

```
[edit]
user@host# show
chassis {
    fpc 0 {
        pic 0 {
            framing t1;
        }
    }
}
interfaces {
    ct1-0/0/0 {
        no-partition interface-type t1;
    }
    t1-0/0/0 {
        encapsulation satop;
        unit 0;
    }
    ge-0/2/0 {
        unit 0 {
            family inet {
                address 20.1.1.2/24;
            }
            family mpls;
        }
    }
    lo0 {
        unit 0 {
            family inet {
                address 70.1.1.1/32;
            }
        }
    }
}
protocols {
    rsvp {
        interface ge-0/2/0.0;
```

```

    }
    mpls {
        no-cspf;
        label-switched-path PE1-to-PE2 {
            to 40.1.1.1;
        }
        interface ge-0/2/0.0;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface ge-0/2/0.0;
            interface lo0.0 {
                passive;
            }
        }
    }
    ldp {
        interface ge-0/2/0.0;
        interface lo0.0;
    }
    l2circuit {
        neighbor 40.1.1.1 {
            interface t1-0/0/0.0 {
                virtual-circuit-id 1;
            }
        }
    }
}

```

Configuring Load Balancing for Ethernet Pseudowires

You can configure load balancing for IPv4 traffic over Layer 2 Ethernet pseudowires. You can also configure load balancing for Ethernet pseudowires based on IP information. The option to include IP information in the hash key provides support for Ethernet circuit cross-connect (CCC) connections.

NOTE: This feature is supported only on M120, M320, MX Series, and T Series routers.

To configure load balancing for IPv4 traffic over Layer 2 Ethernet pseudowires, include the **ether-pseudowire** statement at the **[edit forwarding-options hash-key family mpls payload]** hierarchy level:


```
[edit forwarding-options]
hash-key {
  family mpls {
    (label-1 | no-labels);
    payload {
      ether-pseudowire;
    }
  }
}
```

NOTE: You must also configure either the **label-1** or the **no-labels** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level.

You can also configure load balancing for Ethernet pseudowires based on IP information. This functionality provides support for load balancing for Ethernet cross-circuit connect (CCC) connections. To include IP information in the hash key, include the **ip** statement at the **[edit forwarding-options hash-key family mpls payload]** hierarchy level:

```
[edit forwarding-options]
hash-key {
  family mpls {
    (label-1 | no-labels);
    payload {
      ip;
    }
  }
}
```

NOTE: You must also configure either the **label-1** or **no-labels** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level.

You can configure load balancing for IPv4 traffic over Ethernet pseudowires to include only Layer 3 IP information in the hash key. To include only Layer 3 IP information, include the **layer-3-only** option at the **[edit forwarding-options family mpls hash-key payload ip]** hierarchy level:

```
[edit forwarding-options]
hash-key {
  family mpls {
```

```

(label-1 | no-labels);
payload {
  ip {
    layer-3-only;
  }
}
}

```

NOTE: You must also configure either the **label-1** or **no-labels** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level.

Configuring Load Balancing Based on MAC Addresses

The hash key mechanism for load-balancing uses Layer 2 media access control (MAC) information such as frame source and destination address. To load-balance traffic based on Layer 2 MAC information, include the **family multiservice** statement at the **[edit forwarding-options hash-key]** hierarchy level:

```

family multiservice {
  destination-mac;
  source-mac;
}

```

To include the destination-address MAC information in the hash key, include the **destination-mac** option. To include the source-address MAC information in the hash key, include the **source-mac** option.

NOTE: Any packets that have the same source and destination address will be sent over the same path.

NOTE: You can configure per-packet load balancing to optimize VPLS traffic flows across multiple paths.

NOTE: Aggregated Ethernet member links will now use the physical MAC address as the source MAC address in 802.3ah OAM packets.

NOTE: ACX Series routers do not support VPLS.

Release History Table

Release	Description
14.1X53	Starting in Junos OS Release 14.1X53 and Junos OS Release 16.1, an Ethernet pseudowire is used to carry Ethernet or 802.3 Protocol Data Units (PDUs) over an MPLS network enabling service providers to offer emulated Ethernet services over existing MPLS networks.

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | 36

Class-of-Service (CoS) for MPLS

IN THIS CHAPTER

- [MPLS Class-of-Service Configuration | 1212](#)

MPLS Class-of-Service Configuration

IN THIS SECTION

- [Configuring Class of Service for MPLS LSPs | 1213](#)
- [Configuring MPLS Rewrite Rules | 1216](#)
- [Configuring CoS Bits for an MPLS Network | 1218](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS | 1218](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect | 1221](#)
- [Configuring CoS on Provider Switches of an MPLS Network | 1223](#)
- [Understanding Using CoS with MPLS Networks on EX Series Switches | 1224](#)
- [Example: Combining CoS with MPLS on EX Series Switches | 1228](#)
- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules | 1243](#)
- [Configuring Rewrite Rules for MPLS EXP Classifiers | 1247](#)
- [Configuring CoS Bits for an MPLS Network | 1249](#)
- [Configuring a Global MPLS EXP Classifier | 1250](#)

Configuring Class of Service for MPLS LSPs

IN THIS SECTION

- [Class of Service for MPLS Overview | 1213](#)
- [Configuring the MPLS CoS Values | 1213](#)
- [Rewriting IEEE 802.1p Packet Headers with the MPLS CoS Value | 1216](#)

The following sections provide an overview of MPLS class of service (CoS) and describe how to configure the MPLS CoS value:

Class of Service for MPLS Overview

When IP traffic enters an LSP tunnel, the ingress router marks all packets with a CoS value, which is used to place the traffic into a transmission priority queue. On the router, for SDH/SONET and T3 interfaces, each interface has four transmit queues. The CoS value is encoded as part of the MPLS header and remains in the packets until the MPLS header is removed when the packets exit from the egress router. The routers within the LSP utilize the CoS value set at the ingress router. The CoS value is encoded by means of the CoS bits (also known as the EXP or experimental bits). For more information, see [“MPLS Label Allocation” on page 421](#).

MPLS class of service works in conjunction with the router's general CoS functionality. If you do not configure any CoS features, the default general CoS settings are used. For MPLS class of service, you might want to prioritize how the transmit queues are serviced by configuring weighted round-robin, and to configure congestion avoidance using random early detection (RED)..

Configuring the MPLS CoS Values

When traffic enters an LSP tunnel, the CoS value in the MPLS header is set in one of three ways:

- The number of the output queue into which the packet was buffered and the packet loss priority (PLP) bit are written into the MPLS header and are used as the packet's CoS value. This behavior is the default, and no configuration is required. *Default MPLS EXP Classifier* explains the default MPLS CoS values, and summarizes how the CoS values are treated.
- You set a fixed CoS value on all packets entering the LSP tunnel. A fixed CoS value means that all packets entering the LSP receive the same class of service.
- You set an MPLS EXP rewrite rule to override the default behavior.

To set a fixed CoS value on all packets entering the LSP, include the **class-of-service** statement:

```
class-of-service cos-value;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit protocols mpls label-switched-path *path-name*]
- [edit protocols mpls label-switched-path *path-name* primary *path-name*]
- [edit protocols mpls label-switched-path *path-name* secondary *path-name*]
- [edit protocols rsvp interface *interface-name* link-protection]
- [edit protocols rsvp interface *interface-name* link-protection bypass *destination*]
- [edit logical-systems *logical-system-name* protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name* primary *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name* secondary *path-name*]
- [edit logical-systems *logical-system-name* protocols rsvp interface *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp interface *interface-name* link-protection bypass *destination*]

The CoS value set using the **class-of-service** statement at the [edit protocols mpls] hierarchy level supersedes the CoS value set at the [edit class-of-service] hierarchy level for an interface. Effectively, the CoS value configured for an LSP overrides the CoS value set for an interface.

The **class-of-service** statement at the [edit protocols mpls label-switched-path] hierarchy level assigns an initial EXP value for the MPLS shim header of packets in the LSP. This value is initialized at the ingress routing device only and overrides the rewrite configuration established for that forwarding class. However, the CoS processing (weighted round robin [WRR] and RED) of packets entering the ingress routing device is not changed by the **class-of-service** statement on an MPLS LSP. Classification is still based on the behavior aggregate (BA) classifier at the [edit class-of-service] hierarchy level or the multifield classifier at the [edit firewall] hierarchy level.

BEST PRACTICE: We recommend configuring all routing devices along the LSP to have the same input classifier for EXP, and, if a rewrite rule is configured, all routing devices should have the same rewrite configuration. Otherwise, traffic at the next LSR might be classified into a different forwarding class, resulting in a different EXP value being written to the EXP header.

The CoS value can be a decimal number from 0 through 7. This number corresponds to a 3-bit binary number. The high-order 2 bits of the CoS value select which transmit queue to use on the outbound interface card.

The low-order bit of the CoS value is treated as the PLP bit and is used to select the RED drop profile to use on the output queue. If the low-order bit is 0, the non-PLP drop profile is used, and if the low-order bit is 1, the PLP drop profile is used. It is generally expected that RED will more aggressively drop packets that have the PLP bit set. For more information about RED and drop profiles, see *Managing Congestion Using RED Drop Profiles and Packet Loss Priorities*.

NOTE: Configuring the PLP drop profile to drop packets more aggressively (for example, setting the CoS value from 6 to 7) decreases the likelihood of traffic getting through.

Table 26 on page 1215 summarizes how MPLS CoS values correspond to the transmit queue and PLP bit. Note that in MPLS, the mapping between the CoS bit value and the output queue is hard-coded. You cannot configure the mapping for MPLS; you can configure it only for IPv4 traffic flows, as described in *Understanding How Forwarding Classes Assign Classes to Output Queues*.

Table 26: MPLS CoS Values

MPLS CoS Value	Bits	Transmit Queue	PLP Bit
0	000	0	Not set
1	001	0	Set
2	010	1	Not set
3	011	1	Set
4	100	2	Not set
5	101	2	Set
6	110	3	Not set
7	111	3	Set

Because the CoS value is part of the MPLS header, the value is associated with the packets only as they travel through the LSP tunnel. The value is not copied back to the IP header when the packets exit from the LSP tunnel.

To configure class of service (CoS) for Multiprotocol Label Switching (MPLS) packets in a label-switched path (LSP):

1. Specify the CoS value

If you do not specify a CoS value, the IP precedence bits from the packet's IP header are used as the packet's CoS value.

Rewriting IEEE 802.1p Packet Headers with the MPLS CoS Value

For Ethernet interfaces installed on a T Series router or an M320 router with a peer connection to an M Series router or a T Series router, you can rewrite both MPLS CoS and IEEE 802.1p values to a configured value (the MPLS CoS values are also known as the EXP or experimental bits). Rewriting these values allows you to pass the configured value to the Layer 2 VLAN path. To rewrite both the MPLS CoS and IEEE 802.1p values, you must include the EXP and IEEE 802.1p rewrite rules in the class of service interface configuration. The EXP rewrite table is applied when you configure the IEEE 802.1p and EXP rewrite rules.

For information about how to configure the EXP and IEEE 802.1p rewrite rules, see *Rewriting Packet Headers to Ensure Forwarding Behavior*.

Configuring MPLS Rewrite Rules

IN THIS SECTION

- [Rewriting the EXP Bits of All Three Labels of an Outgoing Packet | 1216](#)
- [Rewriting MPLS and IPv4 Packet Headers | 1217](#)

You can apply a number of different rewrite rules to MPLS packets.

For more information about how to configure statements at the **[edit class-of-service]** hierarchy level, see the *Class of Service User Guide (Routers and EX9200 Switches)*.

The following sections describe how you can apply rewrite rules to MPLS packets:

Rewriting the EXP Bits of All Three Labels of an Outgoing Packet

In interprovider, carrier-of-carrier, and complex traffic engineering scenarios, it is sometimes necessary to push three labels on the next hop.

By default, on M Series routers except the M320, the top MPLS EXP label of an outgoing packet is not rewritten when you configure swap-push-push and triple-push operations. You can rewrite the EXP bits of all three labels of an outgoing packet, thereby maintaining the class of service (CoS) of an incoming MPLS or non-MPLS packet.

To push three labels on incoming MPLS packets, include the **exp-swap-push-push default** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
exp-swap-push-push default;
```

To push three labels on incoming non-MPLS packets, include the **exp-push-push-push default** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
exp-push-push-push default;
```

For more information about how to configure statements at the **[edit class-of-service]** hierarchy level, see the *Class of Service User Guide (Routers and EX9200 Switches)*.

Rewriting MPLS and IPv4 Packet Headers

You can apply a rewrite rule to MPLS and IPv4 packet headers simultaneously. This allows you to initialize MPLS EXP and IP precedence bits at LSP ingress. You can configure different rewrite rules depending on whether the traffic is VPN or non-VPN.

To rewrite MPLS and IPv4 packet headers, include the **protocol** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules exp *rewrite-rule-name*]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules exp rewrite-rule-name]
protocol types;
```

Use the **protocol** statement to specify the types of MPLS packets and packet headers to which to apply the rewrite rule. The MPLS packet can be a standard MPLS packet or an MPLS packet with an IPv4 payload. Specify the type of MPLS packet by using the following options:

- **mpls-any**—Applies the rewrite rule to MPLS packets and writes the code point value to MPLS headers.
- **mpls-inet-both**—Applies the rewrite rule to VPN MPLS packets with IPv4 payloads. Writes the code point value to the MPLS and IPv4 headers in T Series (except T4000 routers) and M320 routers. On M Series routers, except the M320, the **mpls-inet-both** option causes all ingress MPLS LSP packets with IPv4 payloads to be initialized with 000 code points for IP precedence and MPLS EXP values.
- **mpls-inet-both-non-vpn**—Applies the rewrite rule to any non-VPN MPLS packets with IPv4 payloads. Writes the code point value to the MPLS and IPv4 headers in T Series and M320 routers. On M Series routers, except the M320, the **mpls-inet-both-non-vpn** option causes all ingress MPLS LSP packets with IPv4 payloads to be initialized with 000 code points for IP precedence and MPLS EXP values.

For a detailed example on how to configure rewrite rules for MPLS and IPv4 packets and for more information about how to configure class of service, see the *Class of Service User Guide (Routers and EX9200 Switches)*.

Configuring CoS Bits for an MPLS Network

When traffic enters a labeled-switch path (LSP) tunnel, the CoS bits in the MPLS header are set in one of two ways:

- The number of the output queue into which the packet was buffered and the packet loss priority (PLP) bit are written into the MPLS header and are used as the packet's CoS value. This behavior is the default, and no configuration is required. The [Junos OS Class of Service Configuration Guide](#) explains the IP CoS values, and summarizes how the CoS bits are treated.
- You set a fixed CoS value on all packets entering the LSP tunnel. A fixed CoS value means that all packets entering the LSP receive the same class of service.

To set a fixed CoS value on all packets entering the LSP:

1. Specify a class of service value for the LSP:

NOTE: The CoS value set using the **class-of-service** statement at the **[edit protocols mpls]** hierarchy level supersedes the CoS value set at the **[edit class-of-service]** hierarchy level for an interface. Effectively, the CoS value configured for an LSP overrides the CoS value set for an interface.

```
[edit protocols mpls]
user@switch# set class-of-service cos-value
```

Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. This topic describes configuring CoS components on a provider edge (PE) switch that is using IP Over MPLS.

This task describes how to create a custom DSCP classifier and a custom EXP rewrite rule on the ingress PE switch. It includes configuring a policer firewall filter and applying it to the customer-edge interface of the ingress PE switch. The policer firewall filter ensures that the amount of traffic forwarded through the MPLS tunnel never exceeds the requested bandwidth allocation.

Before you begin, configure the basic components for an MPLS network:

- Configure two PE switches. See [“Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect” on page 73](#).
- Configure one or more provider switches. See [“Configuring MPLS on EX8200 and EX4500 Provider Switches” on page 77](#).

This topic includes:

1. [Configuring CoS | 1219](#)
2. [Configuring an LSP Policer | 1220](#)

Configuring CoS

To configure CoS on a provider edge switch:

1. Import the default DSCP classifier classes to the custom DSCP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name import default
```

2. Add a forwarding class to this custom DSCP classifier and specify a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name forwarding-class forwarding-class loss-priority loss-priority code-points code-point
```

3. Specify the values for the custom EXP rewrite rule, **e1**:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class forwarding-class loss-priority loss-priority code-points code-point
```

4. On EX8200 switches only, bind the custom EXP rewrite rule to the interface:

```
[edit class-of-service]
user@switch# set class-of-service interfaces interface unit unit rewrite-rules exp e1
```

Configuring an LSP Policer

To configure an LSP policer:

NOTE: You cannot configure LSP policers on EX8200 switches. EX8200 switches do not support LSP policers.

1. Specify the number of bits per second permitted, on average, for the firewall policer, which will later be applied to the customer-edge-interface:

```
[edit firewall]
user@switch# set policer mypolicer if-exceeding bandwidth-limit 500m
```

2. Specify the maximum size permitted for bursts of data that exceed the given bandwidth limit for this policer:

```
[edit firewall policer]
user@switch# set mypolicer if-exceeding burst-size-limit 33553920
```

3. Discard traffic that exceeds the rate limits for this policer:

```
[edit firewall policer]
user@switch# set mypolicer then discard
```

4. To reference the policer, configure a filter term that includes the policer action:

```
[edit firewall]
user@switch# set family inet filter myfilter term t1 then policer mypolicer
```

5. Apply the filter to the customer-edge interface:

```
[edit interfaces]
user@switch# set ge-2/0/3 unit 0 family inet address 192.168.121.1/16 policing filter myfilter
```

NOTE: You can also configure schedulers and shapers as needed. See *Defining CoS Schedulers and Scheduler Maps (CLI Procedure)*.

Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. This topic describes configuring CoS components on a provider edge (PE) switch that is using MPLS over circuit-cross connect (CCC).

NOTE: On EX Series switches other than EX8200 switches, if you are using MPLS over CCC, you can use only one DSCP or IP precedence classifier and only one IEEE 802.1p classifier on the CCC interfaces.

This procedure is for creating a custom DSCP classifier and a custom EXP rewrite rule on the ingress PE. It also includes enabling a policer on the label-switched path (LSP) of the ingress PE to ensure that the amount of traffic forwarded through the LSP never exceeds the requested bandwidth allocation.

This topic includes:

1. [Configuring CoS | 1221](#)
2. [Configuring an LSP Policer | 1222](#)

Configuring CoS

To configure CoS on a provider edge switch:

1. Import the default DSCP classifier classes to the custom DSCP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name import default
```

2. Add the expedited-forwarding class to this custom DSCP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name forwarding-class forwarding-class loss-priority
loss-priority code-points code-point
```

3. Specify the values for the custom EXP rewrite rule, **e1**:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class forwarding-class loss-priority loss-priority
code-point code-point
```

4. Bind the DSCP classifier to the CCC interface:

```
[edit ]
```

```
user@switch# set class-of-service interfaces interface unit unit classifier classifier-name
```

5. On EX8200 switches only, bind the custom EXP rewrite rule to the interface:

```
[edit class-of-service]
user@switch# set class-of-service interfaces interface unit unit rewrite-rules exp e1
```

Configuring an LSP Policer

To configure an LSP policer:

NOTE: You cannot configure LSP policers on EX8200 switches. EX8200 switches do not support LSP policers.

1. Specify the number of bits per second permitted, on average, for the policer, which will later be applied to the LSP:

```
[edit firewall]
set policer mypolicer if-exceeding bandwidth-limit 500m
```

2. Specify the maximum size permitted for bursts of data that exceed the given bandwidth limit for this policer:

```
[edit firewall policer]
set mypolicer if-exceeding burst-size-limit 33553920
```

3. Discard traffic that exceeds the rate limits for this policer:

```
[edit firewall policer]
set mypolicer then discard
```

4. To reference the policer, configure a filter term that includes the policer action:

```
[edit firewall]
user@switch# set family any filter myfilter term t1 then policer mypolicer
```

5. Apply the filter to the LSP:

```
[edit protocols mpls]
set label-switched-path lsp_to_pe2_ge1 policing filter myfilter
```

NOTE: You can also configure schedulers and shapers as needed. See *Defining CoS Schedulers and Scheduler Maps (CLI Procedure)*.

Configuring CoS on Provider Switches of an MPLS Network

You can add class-of-service (CoS) components to your MPLS networks on EX Series switches to achieve end-to-end Differentiated Services to match your specific business requirements. The configuration of CoS components on the provider switches is the same regardless of whether the provider edge (PE) switches are using MPLS over CCC or IP over MPLS.

This task shows how to configure a custom EXP classifier and custom EXP rewrite rule on the provider switch.

1. Import the default EXP classifier classes to the custom EXP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 import default
```

2. Add the expedited-forwarding class to this custom EXP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 forwarding-class expedited-forwarding loss-priority low code-points 010
```

3. Specify the values for the custom EXP rewrite rule, **e1**:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority low code-point 111
```

4. On EX8200 switches only, bind the custom EXP rewrite rule to the interface:

```
[edit class-of-service]
user@switch# set class-of-service interfaces ge-0/0/2 unit 0 rewrite-rules exp e1
```

NOTE: You can also configure schedulers and shapers as needed. See *Defining CoS Schedulers and Scheduler Maps (CLI Procedure)*.

Understanding Using CoS with MPLS Networks on EX Series Switches

IN THIS SECTION

- [EXP Classifiers and EXP rewrite Rules | 1224](#)
- [Guidelines for Using CoS Classifiers on CCCs | 1225](#)
- [Using CoS Classifiers with IP over MPLS | 1225](#)
- [Setting CoS Bits in an MPLS Header | 1226](#)
- [EXP Rewrite Rules | 1227](#)
- [Policer | 1227](#)
- [Schedulers | 1228](#)

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. See *EX Series Switch Software Features Overview* for a complete list of the Junos OS MPLS features that are supported on specific EX Series switches.

Juniper Networks EX Series Ethernet Switches support Differentiated Service Code Point (DSCP) or IP precedence and IEEE 802.1p CoS classifiers on the customer-edge interfaces of the ingress provider edge (PE) switch. DSCP or IP precedence classifiers are used for Layer 3 packets. IEEE 802.1p is used for Layer 2 packets.

When a packet enters a customer-edge interface of the ingress PE switch, the switch associates the packet with a particular CoS servicing level before putting the packet onto the label-switched path (LSP). The switches within the LSP utilize the CoS value set at the ingress PE switch. The CoS value that was embedded in the classifier is translated and encoded in the MPLS header by means of the EXP or experimental bits. EX Series switches enable a default EXP classifier and a default EXP rewrite rule. For more information about EXP classifiers and EXP rewrite rules, see *EXP Classifiers and EXP rewrite Rules*.

This topic includes:

EXP Classifiers and EXP rewrite Rules

EX Series switches enable a default EXP classifier and a default EXP rewrite rule. You can configure a custom EXP classifier and a custom EXP rewrite rule if you prefer. However, the switch supports only one type of EXP classifier (default or custom) and only one EXP rewrite rule (default or custom).

You do not bind the EXP classifier or the EXP rewrite rule to individual interfaces. The switch automatically and implicitly applies the default or the custom EXP classifier and the default or the custom EXP rewrite rule to the appropriate MPLS-enabled interfaces. Because rewrite rules affect only egress interfaces, the switch applies the EXP rewrite rule only to those MPLS interfaces that are transmitting MPLS packets (not to the MPLS interfaces that are receiving the packets).

After traversing the MPLS tunnel, the traffic flows out from the egress provider edge (PE) switch. Before the traffic leaves the egress interface, the egress PE switch copies the EXP bits from the MPLS header to the most significant bits in the original IP packet--- that is, to the IP precedence bits. Note that this is the default behavior only on Juniper Networks EX8200 Ethernet Switches (standalone or Virtual Chassis) that are configured for MPLS.

Guidelines for Using CoS Classifiers on CCCs

When you are configuring CoS for MPLS over circuit cross-connect (CCC), there are some additional guidelines, as follows:

- You *must* explicitly bind a CoS classifier to the CCC interface on the ingress PE switch.
- You *must* use the same DSCP, IP precedence, or IEEE 802.1p classifier on CCC interfaces. However, if the CCC interfaces are on the same switch, you cannot configure both a DSCP and an IP precedence classifier on these interfaces. Thus, if you configure one CCC interface to use a DSCP classifier DSCP1, you cannot configure another CCC interface to use another DSCP classifier DSCP2. All the CCC interfaces on the switch must use the same DSCP (or IP precedence) classifier and the same IEEE 802.1p classifier.
- You *cannot* configure one CCC interface to use a DSCP classifier and another CCC interface to use an IP precedence classifier, because these classifier types overlap.
- You *can* configure one CCC interface to use a DSCP classifier and another CCC interface to use IEEE 802.1p classifier.
- You *can* configure one CCC interface to use both a DSCP and an IEEE 802.1p classifier. If you configure a CCC interface to use both these classifiers, the DSCP classifier is used for routing Layer 3 packets and the IEEE 802.1p classifier is used for routing Layer 2 packets.
- You *can* configure one CCC interface to use both an IP precedence and an IEEE 802.1p classifier. If you configure a CCC interface to use both these classifiers, the IP precedence classifier is used for routing Layer 3 packets and the IEEE 802.1p classifier is used for routing Layer 2 packets.

NOTE: These guidelines are not applicable to Juniper Networks EX8200 Ethernet Switches (standalone or Virtual Chassis).

You can define multiple DSCP, IP precedence, and IEEE 802.1p classifiers for the non-CCC interfaces on a switch.

Using CoS Classifiers with IP over MPLS

When you are configuring CoS for IP over MPLS, the customer-edge interface uses the CoS configuration for the switch as the default. You do not have to bind a classifier to the customer-edge interface in this case. There are no restrictions on using multiple DSCP, IP precedence, and IEEE 802.1p classifiers on the same switch.

- You can modify the CoS classifier for a particular interface, but it is not required.

- You can configure a DSCP classifier, DSCP1 on the first interface, another DSCP classifier, DSCP2 on the second interface, and an IP precedence classifier on a third interface, and so forth.

Setting CoS Bits in an MPLS Header

When traffic enters an LSP tunnel, the CoS bits in the MPLS header are set in one of two ways:

- The number of the output queue into which the packet was buffered and the packet loss priority (PLP) bit are written into the MPLS header and are used as the packet's CoS value. This behavior is the default, and no configuration is required. The *Class of Service User Guide (Routers and EX9200 Switches)* explains the IP CoS values, and summarizes how the CoS bits are treated.
- You set a fixed CoS value on all packets entering the LSP tunnel. A fixed CoS value means that all packets entering the LSP receive the same class of service.

The CoS value can be a decimal number from 0 through 7. This number corresponds to a 3-bit binary number. The high-order 2 bits of the CoS value select which transmit queue to use on the outbound interface card.

The low-order bit of the CoS value is treated as the PLP bit and is used to select the RED drop profile to use on the output queue. If the low-order bit is 0, the non-PLP drop profile is used, and if the low-order bit is 1, the PLP drop profile is used. It is generally expected that random early detection (RED) will more aggressively drop packets that have the PLP bit set. For more information about RED and drop profiles, see the *Class of Service User Guide (Routers and EX9200 Switches)*.

NOTE: Configuring the PLP drop profile to drop packets more aggressively (for example, setting the CoS value from 6 to 7) decreases the likelihood of traffic getting through.

Table 27 on page 1226 summarizes how MPLS CoS values correspond to the transmit queue and PLP bit. Note that in MPLS, the mapping between the CoS bit value and the output queue is hard-coded. You cannot configure the mapping for MPLS; you can configure it only for IPv4 traffic flows, as described in the *Class of Service User Guide (Routers and EX9200 Switches)*.

Table 27: MPLS CoS Values

MPLS CoS Value	Bits	Transmit Queue	PLP Bit
0	000	0	Not set
1	001	0	Set
2	010	1	Not set
3	011	1	Set

Table 27: MPLS CoS Values (*continued*)

MPLS CoS Value	Bits	Transmit Queue	PLP Bit
4	100	2	Not set
5	101	2	Set
6	110	3	Not set
7	111	3	Set

Because the CoS value is part of the MPLS header, the value is associated with the packets only while they travel through the LSP tunnel. The value is not copied back to the IP header when the packets exit from the LSP tunnel.

NOTE: On EX8200 switches that run MPLS-based Layer 2 virtual private networks (VPNs):

- If you configure an LSP CoS, the EXP bits of the MPLS packet continue to use the same CoS values that are configured at the interface level.
- For Virtual Chassis, if the input and output interfaces are on different line cards, then the loss priority value that you configured on the first line card is not carried to the subsequent line cards. The loss priority for the outgoing traffic from the subsequent line cards is always set to low.

EXP Rewrite Rules

When traffic passes from the customer-edge interface to an MPLS interface, the DSCP, IP precedence, or IEEE 802.1p CoS classifier is translated into the EXP bits within the MPLS header. You cannot disable the default EXP rewrite rule, but you can configure your own custom EXP classifier and a custom EXP rewrite rule. You cannot bind the EXP classifier to individual MPLS interfaces; the switch applies it globally to all the MPLS-enabled interfaces on the switch.

Only one EXP rewrite rule (either default or custom) is supported on a switch. The switch applies it to all the egress interfaces on which MPLS is enabled.. This is, however, not the case with EX8200 switches. With EX8200 switches, you must explicitly apply the rewrite rule on each of the egress interfaces.

Policer

Policing helps to ensure that the amount of traffic forwarded through an LSP never exceeds the requested bandwidth allocation. During periods of congestion (when the total rate of queuing packets exceeds the rate of transmission), any new packets being sent to an interface can be dropped because there is no place to store them. You can configure a policer on the ingress PE switch to prevent this:

- If you are using MPLS over CCC, you bind the policer to the LSP. You cannot bind a policer to a CCC interface.
- If you are using IP over MPLS, you bind the policer to the **inet-family** customer-edge interface. You cannot bind a policer to the LSP when you are using IP over MPLS.

NOTE: You cannot configure LSP policers on EX8200 switches.

Schedulers

The schedulers for using CoS with MPLS are the same as for the other CoS configurations on EX Series switches. Default schedulers are provided for best-effort and network-control forwarding classes. If you are using assured-forwarding, expedited-forwarding, or any custom forwarding class, we recommend that you configure a scheduler to support that forwarding class. See *Understanding CoS Schedulers*.

Example: Combining CoS with MPLS on EX Series Switches

IN THIS SECTION

- [Requirements | 1229](#)
- [Overview and Topology | 1229](#)
- [Configuring the Local PE Switch | 1231](#)
- [Configuring the Remote PE Switch | 1234](#)
- [Configuring the Provider Switch | 1235](#)
- [Verification | 1236](#)

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. The CoS value is included within the MPLS label, which is passed through the network, enabling end-to-end CoS across the network.

MPLS services are often used to ensure better performance for low-latency applications such as VoIP and other business-critical functions. These applications place specific demands on a network for successful transmission. CoS gives you the ability to control the mix of bandwidth, delay, jitter, and packet loss while taking advantage of the MPLS labeling mechanism.

This example shows how to configure CoS on an MPLS network that is using a unidirectional circuit cross-connect (CCC) from the ingress provider edge (PE) switch to the egress PE switch. for the customer-edge interface of the ingress provider edge (PE) switch. It describes adding the configuration of CoS components to the ingress PE switch, the egress PE switch, and the core provider switches of the

existing MPLS network. Because of the unidirectional configuration, the DSCP classifier needs to be configured only on the ingress PE switch.

Requirements

This example uses the following hardware and software components:

- Junos OS Release 10.1 or later for EX Series switches
- Three EX Series switches

Before you configure CoS with MPLS, be sure you have:

Configured an MPLS network with two PE switches and one provider switch. See [“Example: Configuring MPLS on EX8200 and EX4500 Switches” on page 41](#). This example assumes that an MPLS network has been configured using a cross circuit-connect (CCC).

Overview and Topology

This example describes adding custom classifiers and custom rewrite rules to switches in an MPLS network that is using MPLS over CCC.

It is a unidirectional configuration. Therefore, you need to configure custom classifiers and custom rewrite rules as follows:

- On the ingress PE switch: custom DSCP classifier and custom EXP rewrite rule
- On the egress PE switch: custom EXP classifier
- On the provider switch: customer EXP classifier and custom EXP rewrite rule

NOTE: You can also configure schedulers and shapers as needed. If you are using **assured-forwarding**, **expedited-forwarding**, or other custom forwarding classes, we recommend that you configure a scheduler to support that forwarding class. See *Defining CoS Schedulers and Scheduler Maps (CLI Procedure)*.

The example creates a custom DSCP classifier (**dscp1**) on the ingress PE switch and binds this classifier to the CCC interface. It includes configuration of a policer on the ingress PE switch. The policer is applied as a filter on the label-switched path (LSP) **lsp_to_pe2_ge1** (created in [“Example: Configuring MPLS on EX8200 and EX4500 Switches” on page 41](#)) to ensure that the amount of traffic forwarded through the LSP never exceeds the requested bandwidth allocation.

This example creates a custom EXP rewrite rule (**exp1**) on the ingress PE switch, specifying a loss-priority and code point to be used for the expedited-forwarding class as the packet travels through the LSP. The switch applies this custom rewrite rule on the core interfaces **ge-0/0/5.0** and **ge-0/0/6.0**, which are the egress interfaces for this switch.

[Table 28 on page 1230](#) shows the CoS configuration components added to the ingress PE switch.

Table 28: CoS Configuration Components on the Ingress PE Switch

Property	Settings	Description
Local PE switch hardware	EX Series switch	PE-1
Policing filter configured and applied to the LSP.	policing filter mypolicer filter myfilter	Name of the rate-limiting policer. Name of the filter, which refers to the policer
Custom DSCP classifier	dscp1	Specifies the name of the custom DSCP classifier
Custom EXP rewrite rule	e1	Name of the custom EXP rewrite rule.
Customer-edge interface	ge-0/0/1.0	Interface that receives packets from devices outside the network. The custom DSCP classifier must be specified on this CCC interface.
Core interfaces	ge-0/0/5.0 and ge-0/0/6.0	Interfaces that transmit MPLS packets to other switches within the MPLS network. The EXP rewrite rule is applied implicitly to these interfaces.

[Table 29 on page 1230](#) shows the CoS configuration components added to the egress PE switch in this example.

Table 29: CoS Configuration Components of the Egress PE Switch

Property	Settings	Description
Remote provider edge switch hardware	EX Series switch	PE-2
Custom EXP classifier	exp1	Name of custom EXP classifier
Customer-edge interface	ge-0/0/1.0	Interface that transmits packets from this network to devices outside the network. No CoS classifier is specified for this interface. A scheduler can be specified.

Table 29: CoS Configuration Components of the Egress PE Switch *(continued)*

Property	Settings	Description
Core interfaces	ge-0/0/7.0 and ge-0/0/8.0	Core interfaces on PE-2 that receive MPLS packets from the provider switch. The EXP classifier is enabled by default on the switch and applied implicitly to these interfaces.

[Table 30 on page 1231](#) shows the MPLS configuration components used for the provider switch in this example.

Table 30: CoS Configuration Components of the Provider Switch

Property	Settings	Description
Provider switch hardware	EX Series switch	Transit switch within the MPLS network configuration.
Custom EXP classifier	exp1	Name of the custom EXP classifier.
Custom EXP rewrite rule	e1	Name of the custom EXP rewrite rule.
Core interfaces receiving packets from other MPLS switches.	ge-0/0/5.0 and ge-0/0/6.0	Interfaces that connect the provider switch to the ingress PE switch (PE-1). The EXP classifier is enabled by default on the switch and applied implicitly to these interfaces.
Core interfaces transmitting packets to other switches within the MPLS network.	ge-0/0/7.0 and ge-0/0/8.0	Interfaces that transmit packets to the egress PE (PE-2). The EXP rewrite rule is applied implicitly on these interfaces. Schedulers can also be specified and will be applied to these interfaces.

Configuring the Local PE Switch

CLI Quick Configuration

To quickly configure a custom DSCP classifier, custom EXP rewrite rule, and a policer on the local PE switch, copy the following commands and paste them into the switch terminal window of PE-1:

```
[edit]
```

```
set class-of-service classifiers dscp dscp1 import default
```

```

set class-of-service classifiers dscp dscp1 forwarding-class expedited-forwarding loss-priority low
code-points 000111
set class-of-service rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority low
code-point 111
set class-of-service interfaces ge-0/0/1 unit 0 classifier dscp1
set firewall policer mypolicer if-exceeding bandwidth-limit 500m
set firewall policer mypolicer if-exceeding burst-size-limit 33553920
set firewall policer mypolicer then discard
set firewall family any filter myfilter term t1 then policer mypolicer
set protocols mpls label-switched-path lsp_to_pe2_ge1 to 127.1.1.3 policing filter myfilter

```

Step-by-Step Procedure

To configure a custom DSCP classifier, custom EXP rewrite rule, and a policer on the ingress PE switch:

1. Import the default DSCP classifier classes to the custom DSCP classifier that you are creating:

```

[edit class-of-service]
user@switch# set classifiers dscp dscp1 import default

```

2. Add the expedited-forwarding class to this custom DSCP classifier, specifying a loss priority and code point:

```

[edit class-of-service]
user@switch# set classifiers dscp dscp1 forwarding-class expedited-forwarding loss-priority low
code-points 000111

```

3. Specify the values for the custom EXP rewrite rule, **e1**:

```

[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority low
code-point 111

```

4. Bind the DSCP classifier to the CCC interface:

```

[edit ]
user@switch# set class-of-service interfaces ge-0/0/1 unit 0 classifier dscp1

```

5. Specify the number of bits per second permitted, on average, for the firewall policer, which will later be applied to the LSP:

```

[edit firewall]
set policer mypolicer if-exceeding bandwidth-limit 500m

```


- Specify the maximum size permitted for bursts of data that exceed the given bandwidth limit for this policer:

```
[edit firewall policer]
set mypolicer if-exceeding burst-size-limit 33553920
```

- Discard traffic that exceeds the rate limits for this policer:

```
[edit firewall policer]
set mypolicer then discard
```

- To reference the policer, configure a filter term that includes the policer action:

```
[edit firewall]
user@switch# set family any filter myfilter term t1 then policer mypolicer
```

- Apply the filter to the LSP:

```
[edit protocols mpls]
set label-switched-path lsp_to_pe2_ge1 policing filter myfilter
```

Results

Display the results of the configuration:

```
[edit]
user@switch# show
class-of-service {
  classifiers {
    dscp dscp1 {
      import default;
      forwarding-class expedited-forwarding {
        loss-priority low code-points 000111;
      }
    }
  }
}
interfaces {
  ge-0/0/1 {
    unit 0 {
      classifiers {
        dscp dscp1;
      }
    }
  }
}
```

```
rewrite-rules {
  exp e1 {
    forwarding-class expedited-forwarding {
      loss-priority low code-point 111;
    }
  }
}

firewall {
  family any {
    filter myfilter {
      term t1 {
        then policer mypolicer;
      }
    }
  }
  policer mypolicer {
    if-exceeding {
      bandwidth-limit 500m;
      burst-size-limit 33553920;
    }
    then discard;
  }
}
```

Configuring the Remote PE Switch

CLI Quick Configuration

To quickly configure a custom EXP classifier on the remote PE switch, copy the following commands and paste them into the switch terminal window of PE-2:

[edit]

```
set class-of-service classifiers exp exp1 import default
```

```
set class-of-service classifiers exp exp1 forwarding-class expedited-forwarding loss-priority low
code-points 010
```

Step-by-Step Procedure

To configure a custom EXP classifier on the egress PE switch:

1. Import the default EXP classifier classes to the custom EXP classifier that you are creating:

```
[edit class-of-service]
```

```
user@switch# set classifiers exp exp1 import default
```

2. Add the expedited-forwarding class to this custom EXP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 forwarding-class expedited-forwarding loss-priority low
code-points 010
```

Results

Display the results of the configuration:

```
[edit]
user@switch# show
class-of-service {
  classifiers {
    exp exp1 {
      import default;
      forwarding-class expedited-forwarding {
        loss-priority low code-points 010;
      }
    }
  }
}
```

Configuring the Provider Switch

CLI Quick Configuration

To quickly configure a custom EXP classifier and a custom EXP rewrite rule on the provider switch, copy the following commands and paste them into the switch terminal window of the provider switch:

```
[edit]
set class-of-service classifiers exp exp1 import default
set class-of-service classifiers exp exp1 forwarding-class expedited-forwarding loss-priority low
code-points 010
set class-of-service rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority low
code-point 111
```

Step-by-Step Procedure

To configure a custom EXP classifier and a custom EXP rewrite rule on the provider switch:

1. Import the default EXP classifier classes to the custom EXP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 import default
```

2. Add the expedited-forwarding class to this custom EXP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 forwarding-class expedited-forwarding loss-priority low
code-points 010
```

3. Specify the values for the custom EXP rewrite rule, e1:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority low
code-point 111
```

Results

Display the results of the configuration:

```
[edit]
user@switch# show
class-of-service {
  classifiers {
    exp exp1 {
      import default;
      forwarding-class expedited-forwarding {
        loss-priority low code-points 010;
      }
    }
  }
  rewrite-rules {
    exp e1 {
      forwarding-class expedited-forwarding {
        loss-priority low code-point 111;
      }
    }
  }
}
```

Verification

IN THIS SECTION

- [Verifying That the Policer Firewall Filter Is Operational | 1237](#)
- [Verifying That the CoS Classifiers Are Going to the Right Queue | 1237](#)

- [Verifying the CoS Forwarding Table Mapping | 1241](#)
- [Verifying the Rewrite Rules | 1242](#)

To confirm that the configuration is working properly, perform these tasks:

Verifying That the Policer Firewall Filter Is Operational

Purpose

Verify the operational state of the policer that is configured on the ingress PE switch.

Action

```
user@switch> show firewall
```

```
Filter: myfilter
Policers:
Name                               Packets
mypolicer-t1                       0
```

Meaning

This output shows that the firewall filter **mypolicer** has been created.

Verifying That the CoS Classifiers Are Going to the Right Queue

Purpose

Verify that the CoS classifiers are going to the right queue.

Action

```
user@switch> show class-of-service forwarding-table classifier
```

```
Classifier table index: 7, # entries: 64, Table type: DSCP
Entry #   Code point   Forwarding-class #   PLP
0         000000         0         0
1         000001         0         0
2         000010         0         0
3         000011         0         0
4         000100         0         0
5         000101         0         0
```

6	000110	0	0
7	000111	0	0
8	001000	0	0
9	001001	0	0
10	001010	0	0
11	001011	0	0
12	001100	0	0
13	001101	0	0
14	001110	0	0
15	001111	0	0
16	010000	0	0
17	010001	0	0
18	010010	0	0
19	010011	0	0
20	010100	0	0
21	010101	0	0
22	010110	0	0
23	010111	0	0
24	011000	0	0
25	011001	0	0
26	011010	0	0
27	011011	0	0
28	011100	0	0
29	011101	0	0
30	011110	0	0
31	011111	0	0
32	100000	0	0
33	100001	0	0
34	100010	0	0
35	100011	0	0
36	100100	0	0
37	100101	0	0
38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
47	101111	0	0
48	110000	3	0
49	110001	3	0

50	110010	3	0
51	110011	3	0
52	110100	3	0
53	110101	3	0
54	110110	3	0
55	110111	3	0
56	111000	3	0
57	111001	3	0
58	111010	3	0
59	111011	3	0
60	111100	3	0
61	111101	3	0
62	111110	3	0
63	111111	3	0

Classifier table index: 11, # entries: 8, Table type: IEEE 802.1

Entry #	Code point	Forwarding-class #	PLP
0	000	0	0
1	001	0	0
2	010	0	0
3	011	0	0
4	100	0	0
5	101	0	0
6	110	3	0
7	111	3	0

Classifier table index: 12, # entries: 8, Table type: IPv4 precedence

Entry #	Code point	Forwarding-class #	PLP
0	000	0	0
1	001	0	0
2	010	0	0
3	011	0	0
4	100	0	0
5	101	0	0
6	110	3	0
7	111	3	0

Classifier table index: 16, # entries: 8, Table type: Untrust

Entry #	Code point	Forwarding-class #	PLP
0	000	0	0
1	001	0	0
2	010	0	0
3	011	0	0
4	100	0	0

5	101	0	0
6	110	0	0
7	111	0	0

Classifier table index: 9346, # entries: 64, Table type: DSCP

Entry #	Code point	Forwarding-class #	PLP
0	000000	0	0
1	000001	0	0
2	000010	0	0
3	000011	0	0
4	000100	0	0
5	000101	0	0
6	000110	0	0
7	000111	1	0
8	001000	0	0
9	001001	0	0
10	001010	0	0
11	001011	0	0
12	001100	0	0
13	001101	0	0
14	001110	0	0
15	001111	0	0
16	010000	0	0
17	010001	0	0
18	010010	0	0
19	010011	0	0
20	010100	0	0
21	010101	0	0
22	010110	0	0
23	010111	0	0
24	011000	0	0
25	011001	0	0
26	011010	0	0
27	011011	0	0
28	011100	0	0
29	011101	0	0
30	011110	0	0
31	011111	0	0
32	100000	0	0
33	100001	0	0
34	100010	0	0
35	100011	0	0
36	100100	0	0
37	100101	0	0

38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
47	101111	0	0
48	110000	3	0
49	110001	3	0
50	110010	3	0
51	110011	3	0
52	110100	3	0
53	110101	3	0
54	110110	3	0
55	110111	3	0
56	111000	3	0
57	111001	3	0
58	111010	3	0
59	111011	3	0
60	111100	3	0
61	111101	3	0
62	111110	3	0
63	111111	3	0

Meaning

This output shows that a new DSCP classifier has been created, index **9346**, on the ingress PE switch (PE-1).

Verifying the CoS Forwarding Table Mapping**Purpose**

For each logical interface, display either the table index of the classifier for a given code point type or the queue number (if it is a fixed classification) in the forwarding table.

Action

```
user@switch>show class-of-service forwarding-table classifier mapping
```

Table Index/			
Interface	Index	Q num	Table type
ge-0/0/1.0	92	9346	DSCP

Meaning

The results show that the new DSCP classifier, index number **9346**, is bound to interface **ge-0/0/1.0**.

Verifying the Rewrite Rules

Purpose

Display mapping of the queue number and loss priority to code point value for each rewrite rule as it exists in the forwarding table.

Action

```
user@switch>show class-of-service forwarding-table rewrite-rule
```

```
Rewrite table index: 31, # entries: 4, Table type: DSCP
```

FC#	Low bits	State	High bits	State
0	000000	Enabled	000000	Enabled
1	101110	Enabled	101110	Enabled
2	001010	Enabled	001100	Enabled
3	110000	Enabled	111000	Enabled

```
Rewrite table index: 34, # entries: 4, Table type: IEEE 802.1
```

FC#	Low bits	State	High bits	State
0	000	Enabled	001	Enabled
1	010	Enabled	011	Enabled
2	100	Enabled	101	Enabled
3	110	Enabled	111	Enabled

```
Rewrite table index: 35, # entries: 4, Table type: IPv4 precedence
```

FC#	Low bits	State	High bits	State
0	000	Enabled	000	Enabled
1	101	Enabled	101	Enabled
2	001	Enabled	001	Enabled
3	110	Enabled	111	Enabled

```
Rewrite table index: 9281, # entries: 1, Table type: EXP
```

FC#	Low bits	State	High bits	State
1	111	Enabled	000	Disabled

Meaning

This output shows that a new EXP classifier with the index number **9281** has been created.

Understanding CoS MPLS EXP Classifiers and Rewrite Rules

IN THIS SECTION

- [EXP Classifiers | 1244](#)
- [EXP Rewrite Rules | 1246](#)
- [Schedulers | 1246](#)

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion by applying packet classifiers and rewrite rules to the MPLS traffic. MPLS classifiers are global and apply to all interfaces configured as **family mpls** interfaces.

When a packet enters a customer-edge interface on the ingress provider edge (PE) switch, the switch associates the packet with a particular CoS servicing level before placing the packet onto the label-switched path (LSP). The switches within the LSP utilize the CoS value set at the ingress PE switch to determine the CoS service level. The CoS value embedded in the classifier is translated and encoded in the MPLS header by means of the experimental (EXP) bits.

EXP classifiers map incoming MPLS packets to a forwarding class and a loss priority, and assign MPLS packets to output queues based on the forwarding class mapping. EXP classifiers are behavior aggregate (BA) classifiers.

EXP rewrite rules change (rewrite) the CoS value of the EXP bits in outgoing packets on the egress queues of the switch so that the new (rewritten) value matches the policies of a targeted peer. Policy matching allows the downstream routing platform or switch in a neighboring network to classify each packet into the appropriate service group.

NOTE: On QFX5200, QFX5100, QFX3500, QFX3600, and EX4600 switches, and on QFabric systems, there is no default EXP classifier. If you want to classify incoming MPLS packets using the EXP bits, you must configure a global EXP classifier. The global EXP classifier applies to all MPLS traffic on interfaces configured as **family mpls**.

On QFX10000 switches, there is a no default EXP classifier. If you want to classify incoming MPLS packets using the EXP bits, you must configure EXP classifiers and apply them to logical interfaces configured as **family mpls**. (You cannot apply classifiers to physical interfaces.). You can configure up to 64 EXP classifiers.

There is no default EXP rewrite rule. If you want to rewrite the EXP bit value at the egress interface, you must configure EXP rewrite rules and apply them to logical interfaces.

EXP classifiers and rewrite rules are applied only to interfaces that are configured as **family mpls** (for example, **set interfaces xe-0/0/35 unit 0 family mpls.**)

This topic includes:

EXP Classifiers

On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, unlike DSCP and IEEE 802.1p BA classifiers, EXP classifiers are global to the switch and apply to all switch interfaces that are configured as **family mpls**. On QFX10000 switches, you apply EXP classifiers to individual logical interfaces, and different interfaces can use different EXP classifiers.

When you configure and apply an EXP classifier, MPLS traffic on all **family mpls** interfaces uses the EXP classifier, even on interfaces that also have a fixed classifier. If an interface has both an EXP classifier and a fixed classifier, the EXP classifier is applied to MPLS traffic and the fixed classifier is applied to all other traffic.

Also unlike DSCP and IEEE 802.1p BA classifiers, there is no default EXP classifier. If you want to classify MPLS traffic based on the EXP bits, you must explicitly configure an EXP classifier and apply it to the switch interfaces. Each EXP classifier has eight entries that correspond to the eight EXP CoS values (0 through 7, which correspond to CoS bits 000 through 111).

You can configure up to 64 EXP classifiers.

However, on QFX5200, QFX5100, EX4600, and legacy CLI switches, the switch uses only one MPLS EXP classifier as a global classifier on all interfaces. After you configure an MPLS EXP classifier, you can configure that classifier as the global EXP classifier by including the EXP classifier in the **[edit class-of-service system-defaults classifiers exp]** hierarchy level. All switch interfaces configured as **family mpls** use the global EXP classifier to classify MPLS traffic.

On these switches, only one EXP classifier can be configured as the global EXP classifier at any time. If you want to change the global EXP classifier, delete the global EXP classifier configuration (use the **user@switch# delete class-of-service system-defaults classifiers exp** configuration statement), then configure the new global EXP classifier.

QFX10000 switches do not support global EXP classifiers. You can configure one EXP classifier and apply it to multiple logical interfaces, or configure multiple EXP classifiers and apply different EXP classifiers to different logical interfaces.

If an EXP classifier is not configured, then if a fixed classifier is applied to the interface, the MPLS traffic uses the fixed classifier. (Switches that have a default EXP classifier use the default classifier.) If no EXP classifier and no fixed classifier are applied to the interface, MPLS traffic is treated as best-effort traffic using the 802.1 default untrusted classifier. DSCP classifiers are not applied to MPLS traffic.

On QFX5200, QFX5100, EX4600, and legacy CLI switches, because the EXP classifier is global, you cannot configure some ports to use a fixed IEEE 802.1p classifier for MPLS traffic on some interfaces and the global EXP classifier for MPLS traffic on other interfaces. When you configure a global EXP classifier, all MPLS traffic on all interfaces uses the EXP classifier.

NOTE: The switch uses only the outermost label of incoming EXP packets for classification.

NOTE: MPLS packets with 802.1Q tags are not supported.

EXP Rewrite Rules

As MPLS packets enter or exit a network, edge switches might be required to alter the class-of-service (CoS) settings of the packets. EXP rewrite rules set the value of the EXP CoS bits within the header of the outgoing MPLS packet on **family mpls** interfaces. Each rewrite rule reads the current forwarding class and loss priority associated with the packet, locates the chosen CoS value from a table, and writes that CoS value into the packet header, replacing the old CoS value. EXP rewrite rules apply only to MPLS traffic.

EXP rewrite rules apply only to logical interfaces. You cannot apply EXP rewrite rules to physical interfaces.

There are no default EXP rewrite rules. If you want to rewrite the EXP value in MPLS packets, you must configure EXP rewrite rules and apply them to logical interfaces. If no rewrite rules are applied, all MPLS labels that are pushed have a value of zero (0). The EXP value remains unchanged on MPLS labels that are swapped.

You can configure up to 64 EXP rewrite rules, but you can only apply 16 EXP rewrite rules at any time on the switch. On a given logical interface, all pushed MPLS labels have the same EXP rewrite rule applied to them. You can apply different EXP rewrite rules to different logical interfaces on the same physical interface.

You can apply an EXP rewrite rule to an interface that has a DSCP, DSCP IPv6, or IEEE 802.1p rewrite rule. Only MPLS traffic uses the EXP rewrite rule. MPLS traffic does not use DSCP or DSCP IPv6 rewrite rules.

If the switch is performing penultimate hop popping (PHP), EXP rewrite rules do not take effect. If both an EXP classifier and an EXP rewrite rule are configured on the switch, then the EXP value from the last popped label is copied into the inner label. If either an EXP classifier or an EXP rewrite rule (but not both) is configured on the switch, then the inner label EXP value is sent unchanged.

NOTE: On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.

Schedulers

The schedulers for using CoS with MPLS are the same as for the other CoS configurations on the switch. Default schedulers are provided only for the best-effort, fcoe, no-loss, and network-control default forwarding classes. If you configure a custom forwarding class for MPLS traffic, you need to configure a scheduler to support that forwarding class and provide bandwidth to that forwarding class.

Configuring Rewrite Rules for MPLS EXP Classifiers

You configure EXP rewrite rules to alter CoS values in outgoing MPLS packets on the outbound **family mpls** interfaces of a switch to match the policies of a targeted peer. Policy matching allows the downstream routing platform or switch in a neighboring network to classify each packet into the appropriate service group.

To configure an EXP CoS rewrite rule, create the rule by giving it a name and associating it with a forwarding class, loss priority, and code point. This creates a rewrite table. After the rewrite rule is created, enable it on a logical **family mpls** interface. EXP rewrite rules can only be enabled on logical **family mpls** interfaces, not on physical interfaces or on interfaces of other family types. You can also apply an existing EXP rewrite rule on a logical interface.

NOTE: There are no default rewrite rules.

You can configure up to 64 EXP rewrite rules, but you can only use 16 EXP rewrite rules at any time on the switch. On a given **family mpls** logical interface, all pushed MPLS labels have the same EXP rewrite rule applied to them. You can apply different EXP rewrite rules to different logical interfaces on the same physical interface.

NOTE: On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured, or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.

NOTE: To replace an existing rewrite rule on the interface with a new rewrite rule of the same type, first explicitly remove the existing rewrite rule and then apply the new rule.

To create an EXP rewrite rule for MPLS traffic and enable it on a logical interface:

1. Create an EXP rewrite rule:

```
user@switch# set class-of-service rewrite-rules exp rewrite-rule-name forwarding-class
forwarding-class-name loss-priority level code-points [aliases] [bit-patterns]
```

For example, to configure an EXP rewrite rule named **exp-rr-1** for a forwarding class named **mpls-1** with a loss priority of **low** that rewrites the EXP code point value to **001**:

```
user@switch# set class-of-service rewrite-rules exp exp-rr-1 forwarding-class mpls-1 loss-priority  
low code-points 001
```

2. Apply the rewrite rule to a logical interface:

```
user@switch # set class-of-service interfaces interface-name unit logical-unit rewrite-rules exp  
rewrite-rule-name
```

For example, to apply a rewrite rule named **exp-rr-1** to logical interface **xe-0/0/10.0**:

```
user@switch# set class-of-service interfaces xe-0/0/10 unit 0 rewrite-rules exp exp-rr-1
```

NOTE: In this example, all forwarding classes assigned to port xe-0/0/10 must have rewrite rules. Do not mix forwarding classes that have rewrite rules with forwarding classes that do not have rewrite rules on the same interface.

Configuring CoS Bits for an MPLS Network

When traffic enters a labeled-switch path (LSP) tunnel, the CoS bits in the MPLS header are set in one of two ways:

- The number of the output queue into which the packet was buffered and the packet loss priority (PLP) bit are written into the MPLS header and are used as the packet's CoS value. This behavior is the default, and no configuration is required. The *Class of Service User Guide (Routers and EX9200 Switches)* explains the IP CoS values, and summarizes how the CoS bits are treated.
- You set a fixed CoS value on all packets entering the LSP tunnel. A fixed CoS value means that all packets entering the LSP receive the same class of service.

To set a fixed CoS value on all packets entering the LSP:

1. Specify a class of service value for the LSP:

NOTE: The CoS value set using the **class-of-service** statement at the **[edit protocols mpls]** hierarchy level supersedes the CoS value set at the **[edit class-of-service]** hierarchy level for an interface. Effectively, the CoS value configured for an LSP overrides the CoS value set for an interface.

```
[edit protocols mpls]  
user@switch# set class-of-service cos-value
```

Configuring a Global MPLS EXP Classifier

EXP packet classification associates incoming packets with a particular MPLS CoS servicing level. EXP behavior aggregate (BA) classifiers examine the MPLS EXP value in the packet header to determine the CoS settings applied to the packet. EXP BA classifiers allow you to set the forwarding class and loss priority of an MPLS packet based on the incoming CoS value.

You can configure up to 64 EXP classifiers, however, the switch uses only one MPLS EXP classifier as a global classifier, which is applied only on interfaces configured as **family mpls**. All **family mpls** switch interfaces use the global EXP classifier to classify MPLS traffic.

There is no default EXP classifier. If you want to classify incoming MPLS packets using the EXP bits, you must configure a global EXP classifier. The global classifier applies to all MPLS traffic on all **family mpls** interfaces.

If a global EXP classifier is configured, MPLS traffic on **family mpls** interfaces uses the EXP classifier. If a global EXP classifier is not configured, then if a fixed classifier is applied to the interface, the MPLS traffic uses the fixed classifier. If no EXP classifier and no fixed classifier is applied to the interface, MPLS traffic is treated as best-effort traffic. DSCP classifiers are not applied to MPLS traffic.

To configure an MPLS EXP classifier using the CLI:

1. Create an EXP classifier and associate it with a forwarding class, a loss priority, and a code point:

```
[edit class-of-service classifiers]
user@switch# set (dscp | ieee-802.1 | exp) classifier-name forwarding-class forwarding-class-name
loss-priority level code-points [aliases] [bit-patterns]
```

2. Apply the EXP classifier to the switch interfaces:

```
[edit class-of-service]
user@switch# set system-defaults classifiers exp classifier-name
```

RELATED DOCUMENTATION

| *Class of Service User Guide (Routers and EX9200 Switches)*

Generalized MPLS (GMPLS)

IN THIS CHAPTER

- [GMPLS Configuration | 1251](#)

GMPLS Configuration

IN THIS SECTION

- [Introduction to GMPLS | 1251](#)
- [GMPLS Terms and Acronyms | 1253](#)
- [GMPLS Operation | 1253](#)
- [GMPLS and OSPF | 1254](#)
- [GMPLS and CSPF | 1254](#)
- [GMPLS Features | 1255](#)
- [Configuring MPLS Paths for GMPLS | 1255](#)
- [Tracing LMP Traffic | 1256](#)
- [Configuring MPLS LSPs for GMPLS | 1257](#)
- [Gracefully Tearing Down GMPLS LSPs | 1260](#)
- [GMPLS RSVP-TE VLAN LSP Signaling Overview | 1261](#)
- [Example: Configuring GMPLS RSVP-TE VLAN LSP Signaling | 1268](#)

Introduction to GMPLS

Traditional MPLS is designed to carry Layer 3 IP traffic using established IP-based paths and associating these paths with arbitrarily assigned labels. These labels can be configured explicitly by a network administrator, or can be dynamically assigned by means of a protocol such as LDP or RSVP.

GMPLS generalizes MPLS in that it defines labels for switching varying types of Layer 1, Layer 2, or Layer 3 traffic. GMPLS nodes can have links with one or more of the following switching capabilities:

- Fiber-switched capable (FSC)
- Lambda-switched capable (LSC)
- Time-division multiplexing (TDM) switched-capable (TSC)
- Packet-switched capable (PSC)

Label-switched paths (LSPs) must start and end on links with the same switching capability. For example, routers can establish packet-switched LSPs with other routers. The LSPs might be carried over a TDM-switched LSP between SONET add/drop multiplexers (ADMs), which in turn might be carried over a lambda-switched LSP.

The result of this extension of the MPLS protocol is an expansion in the number of devices that can participate in label switching. Lower-layer devices, such as OXCs and SONET ADMs, can now participate in GMPLS signaling and set up paths to transfer data. A router can participate in signaling optical paths across a transport network.

Two service models determine the visibility that a client node (a router, for example) has into the optical core or transport network. The first is through a user-to-network interface (UNI), which is often referred to as the overlay model. The second is known as the peer model. Juniper Networks supports both models.

NOTE: There is not necessarily a one-to-one correspondence between a physical interface and a GMPLS interface. If a GMPLS connection uses a nonchannelized physical connector, the GMPLS label can use the physical port ID. However, the label for channelized interfaces often is based on a channel or time slot. Consequently, it is best to refer to GMPLS labels as identifiers for a resource on a traffic engineering link.

To establish LSPs, GMPLS uses the following mechanisms:

- An out-of-band control channel and a data channel—RSVP messages for LSP setup are sent over an out-of-band control network. Once the LSP setup is complete and the path is provisioned, the data channel is up and can be used to carry traffic. The Link Management Protocol (LMP) is used to define and manage the data channels between a pair of nodes. You can optionally use LMP to establish and maintain LMP control channels between peers running the same Junos OS Release.
- RSVP-TE extensions for GMPLS—RSVP-TE is already designed to signal the setup of packet LSPs. This has been extended for GMPLS to be able to request path setup for various kinds of LSPs (nonpacket) and request labels like wavelengths, time slots, and fibers as label objects.
- Bidirectional LSPs—Data can travel both ways between GMPLS devices over a single path, so nonpacket LSPs are signaled to be bidirectional.

GMPLS Terms and Acronyms

F

Forwarding adjacency A forwarding path for sending data between GMPLS-enabled devices.

G

Generalized MPLS (GMPLS) An extension to MPLS that allows data from multiple layers to be switched over label-switched paths (LSPs). GMPLS LSP connections are possible between similar Layer 1, Layer 2, and Layer 3 devices.

GMPLS label Layer 3 identifiers, fiber port, time-division multiplexing (TDM) time slot, or dense wavelength-division multiplexing (DWDM) wavelength of a GMPLS-enabled device used as a next-hop identifier.

GMPLS LSP types The four types of GMPLS LSPs are:

- Fiber-switched capable (FSC)—LSPs are switched between two fiber-based devices, such optical cross-connects (OXC) that operate at the level of individual fibers.
- Lambda-switched capable (LSC)—LSPs are switched between two DWDM devices, such as such as OXC that operate at the level of individual wavelengths.
- TDM-switched capable (TDM)—LSPs are switched between two TDM devices, such as SONET ADMs.
- Packet-switched capable (PSC)—LSPs are switched between two packet-based devices, such as routers or ATM switches.

L

Link Management Protocol A protocol used to define a forwarding adjacency between peers and to maintain and allocate resources on the traffic engineering links.

T

Traffic engineering link A logical connection between GMPLS-enabled devices. Traffic engineering links can have addresses or IDs and are associated with certain resources or interfaces. They also have certain attributes (encoding-type, switching capability, bandwidth, and so on). The logical addresses can be routable, although this is not required because they are acting as link identifiers. Each traffic engineering link represents a forwarding adjacency between a pair of devices.

GMPLS Operation

The basic functionality of GMPLS requires close interaction between RSVP and LMP. It works in the following sequence:

1. LMP notifies RSVP of the new entities:
 - Traffic engineering link (forwarding adjacency)

- Resources available for the traffic engineering link
 - Control peer
2. GMPLS extracts the LSP attributes from the configuration and requests RSVP to signal one or more specific paths, which are specified by the traffic engineering link addresses.
 3. RSVP determines the local traffic engineering link, corresponding control adjacency and active control channel, and transmission parameters (such as IP destination). It requests that LMP allocate a resource from the traffic engineering link with the specified attributes. If LMP finds a resource matching the attributes, label allocation succeeds. RSVP sends a PathMsg hop by hop until it reaches the target router.
 4. When the target router receives the PathMsg, RSVP again requests that LMP allocate a resource based on the signaled parameters. If label allocation succeeds, the router sends back a ResvMsg.
 5. If the signaling is successful, a bidirectional optical path is provisioned.

GMPLS and OSPF

You can configure OSPF for GMPLS. OSPF is an interior gateway protocol (IGP) that routes packets within a single autonomous system (AS). OSPF uses link-state information to make routing decisions.

GMPLS and CSPF

GMPLS introduces extra constraints for computing paths for GMPLS LSPs that use CSPF. These additional constraints affect the following link attributes:

- Signal type (minimum LSP bandwidth)
- Encoding type
- Switching type

These new constraints are populated in the traffic engineering database with the exchange of an interface-switching capability descriptor type, length, value (TLV) through an IGP.

The ignored constraints that are exchanged through the interface switching capability descriptor include:

- Maximum LSP bandwidth
- Maximum transmission unit (MTU)

The CSPF path computation is the same as in non-GMPLS environments, except that the links are also limited by GMPLS constraints.

Each link can have multiple interface-switching capability descriptors. All the descriptors are checked before a link is rejected.

The constraints are checked in the following order:

1. The signal type configured for the GMPLS LSP signifies the amount of bandwidth requested. If the desired bandwidth is less than the minimum LSP bandwidth, the interface-switching descriptor is rejected.
2. The encoding type of the link for the ingress and the egress interfaces should match. The encoding type is selected and stored at the ingress node after all the constraints are satisfied by the link and is used to select the link on the egress node.
3. The switching type of the links of the intermediate switches should match that of the GMPLS LSP specified in the configuration.

GMPLS Features

The Junos OS includes the following GMPLS functionality:

- An out-of-band control plane makes it possible to signal LSP path setup.
- RSVP-TE extensions support additional objects beyond Layer 3 packets, such as ports, time slots, and wavelengths.
- The LMP protocol creates and maintains a database of traffic engineering links and peer information. Only the static version of this protocol is supported in the Junos OS. You can optionally configure LMP to establish and maintain LMP control channels between peers running the same Junos OS Release.
- Bidirectional LSPs are required between devices.
- Several GMPLS label types that are defined in RFC 3471, *Generalized MPLS—Signaling Functional Description*, such as MPLS, Generalized, SONET/SDH, Suggested, and Upstream, are supported. Generalized labels do not contain a type field, because the nodes should know from the context of their connection what type of label to expect.
- Traffic parameters facilitate GMPLS bandwidth encoding and SONET/SDH formatting.
- Other supported attributes include interface identification and errored interface identification, user-to-network (UNI)-style signaling, and secondary LSP paths.

Configuring MPLS Paths for GMPLS

As part of the configuration for GMPLS, you need to establish an MPLS path for each unique device connected through GMPLS. Configure the traffic engineering link remote address as the address at the **[edit protocols mpls path path-name]** hierarchy level. Constrained Shortest Path First (CSPF) is supported so you can choose either the **strict** or **loose** option with the address.

See *LMP Configuration Overview* for information about how to obtain a traffic engineering link remote address.

To configure the MPLS path, include the **path** statement at the **[edit protocols mpls]** hierarchy level:

```
[edit protocols mpls]
path path-name {
    next-hop-address (strict | loose);
}
```

For information about how to configure MPLS paths, see [“Creating Named Paths” on page 487](#).

Tracing LMP Traffic

To trace LMP protocol traffic, include the **traceoptions** statement at the **[edit protocols link-management]** hierarchy level:

```
[edit protocols link-management]
traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable>;
    flag flag <flag-modifier> <disable>;
}
```

Use the **file** statement to specify the name of the file that receives the output of the tracing operation. All files are placed in the directory `/var/log`.

The following trace flags display the operations associated with the sending and receiving of various LMP messages:

- **all**—Trace all available operations
- **hello-packets**—Trace hello packets on any LMP control channel
- **init**—Output from the initialization messages
- **packets**—Trace all packets other than hello packets on any LMP control channel
- **parse**—Operation of the parser
- **process**—Operation of the general configuration
- **route-socket**—Operation of route socket events
- **routing**—Operation of the routing protocols
- **server**—Server processing operations
- **show**—Servicing operations for **show** commands
- **state**—Trace state transitions of the LMP control channels and traffic engineering links

Each flag can carry one or more of the following flag modifiers:

- **detail**—Provide detailed trace information
- **receive**—Packets being received
- **send**—Packets being transmitted

Configuring MPLS LSPs for GMPLS

IN THIS SECTION

- [Configuring the Encoding Type | 1257](#)
- [Configuring the GPID | 1258](#)
- [Configuring the Signal Bandwidth Type | 1258](#)
- [Configuring GMPLS Bidirectional LSPs | 1259](#)
- [Allowing Nonpacket GMPLS LSPs to Establish Paths Through Routers Running Junos OS | 1259](#)

To enable the proper GMPLS switching parameters, configure the label-switched path (LSP) attributes that are appropriate for your network connection. The default value for **switching-type** is **psc-1**, which is also appropriate for standard MPLS.

To configure the LSP attributes, include the **lsp-attributes** statement at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name]
lsp-attributes {
  encoding-type type;
  gpipid gpipid;
  signal-bandwidth type;
  switching-type type;
}
```

If you include the **no-cspf** statement in the label-switched path configuration, you must also configure primary and secondary paths, or the configuration cannot be committed.

The following sections describe how to configure each of the LSP attributes for a GMPLS LSP:

Configuring the Encoding Type

You need to specify the encoding type of the payload carried by the LSP. It can be any of the following:

- **ethernet**—Ethernet
- **packet**—Packet
- **pdh**—Plesiochronous digital hierarchy (PDH)
- **sonet-sdh**—SONET/SDH

The default value is **packet**.

To configure the encoding type, include the **encoding-type** statement at the **[edit protocols mpls label-switched-path *lsp-name* lsp-attributes]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
encoding-type type;
```

Configuring the GPID

You need to specify the type of payload carried by the LSP. The payload is the type of packet underneath the MPLS label. The payload is specified by the generalized payload identifier (GPID).

You can specify the GPID with any of the following values:

- **hdlc**—High-Level Data Link Control (HDLC)
- **ethernet**—Ethernet
- **ipv4**—IP version 4 (default)
- **pos-scrambling-crc-16**—For interoperability with other vendors' equipment
- **pos-no-scrambling-crc-16**—For interoperability with other vendors' equipment
- **pos-scrambling-crc-32**—For interoperability with other vendors' equipment
- **pos-no-scrambling-crc-32**—For interoperability with other vendors' equipment
- **ppp**—Point-to-Point Protocol (PPP)

To configure the GPID, include the **gpipid** statement at the **[edit protocols mpls label-switched-path *lsp-name* lsp-attributes]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
gpipid gpipid;
```

Configuring the Signal Bandwidth Type

The signal bandwidth type is the encoding used for path computation and admission control. To configure the signal bandwidth type, include the **signal-bandwidth** statement at the **[edit protocols mpls label-switched-path *lsp-name* lsp-attributes]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
  signal-bandwidth type;
```

Configuring GMPLS Bidirectional LSPs

Because MPLS and GMPLS use the same configuration hierarchy for LSPs, it is helpful to know which LSP attributes control LSP functionality. Standard MPLS packet-switched LSPs are unidirectional, whereas GMPLS nonpacket LSPs are bidirectional.

If you use the default packet-switching type of **psc-1**, your LSP becomes unidirectional. To enable a GMPLS bidirectional LSP, you must select a non-packet-switching type option, such as **lambda**, **fiber**, or **ethernet**. Include the **switching-type** statement at the **[edit protocols mpls label-switched-path *lsp-name* lsp-attributes]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
  switching-type (lambda | fiber | ethernet);
```

Allowing Nonpacket GMPLS LSPs to Establish Paths Through Routers Running Junos OS

By setting the A-bit in the Admin Status object, you can enable nonpacket GMPLS LSPs to establish paths through routers that run Junos. When an ingress router sends an RSVP PATH message with the Admin Status A-bit set, an external device (not a router running the Junos OS) can either perform a Layer 1 path setup test or help bring up an optical cross-connect.

When set, the A-bit in the Admin Status object indicates the administrative down status for a GMPLS LSP. This feature is used specifically by nonpacket GMPLS LSPs. It does not affect control path setup or data forwarding for packet LSPs.

Junos does not distinguish between the control path setup and data path setup. Other nodes along the network path use RSVP PATH signaling using the A-bit in a meaningful way.

To configure the Admin Status object for a GMPLS LSP, include the **admin-down** statement:

```
admin-down;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls label-switched-path *lsp-name*]**
- **[edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name*]**

Gracefully Tearing Down GMPLS LSPs

IN THIS SECTION

- [Temporarily Deleting GMPLS LSPs | 1260](#)
- [Permanently Deleting GMPLS LSPs | 1260](#)
- [Configuring the Graceful Deletion Timeout Interval | 1261](#)

You can gracefully tear down nonpacket GMPLS LSPs. An LSP that is torn down abruptly, a common process in a packet-switched network, can cause stability problems in nonpacket-switched networks. To maintain the stability of nonpacket-switched networks, it might be necessary to tear down LSPs gracefully.

The following sections describe how to tear down GMPLS LSPs gracefully:

Temporarily Deleting GMPLS LSPs

You can gracefully tear down a GMPLS LSP using the **clear rsvp session gracefully** command.

This command gracefully tears down an RSVP session for a nonpacket LSP in two passes. In the first pass, the Admin Status object is signaled along the path to the endpoint of the LSP. During the second pass, the LSP is taken down. Using this command, the LSP is taken down temporarily. After the appropriate interval, the GMPLS LSP is resignaled and then reestablished.

The **clear rsvp session gracefully** command has the following properties:

- It only works on the ingress and egress routers of an RSVP session. If used on a transit router, it has the same behavior as the **clear rsvp session** command.
- It only works for nonpacket LSPs. If used with packet LSPs, it has the same behavior as the **clear rsvp session** command.

For more information, see the [CLI Explorer](#).

Permanently Deleting GMPLS LSPs

When you disable an LSP in the configuration, the LSP is permanently deleted. By configuring the **disable** statement, you can disable a GMPLS LSP permanently. If the LSP being disabled is a nonpacket LSP, then the graceful LSP tear-down procedures that use the Admin Status object are used. If the LSP being disabled is a packet LSP, then the regular signaling procedures for LSP deletion are used.

To disable a GMPLS LSP, include the **disable** statement at any of the following hierarchy levels:

- **[edit protocols mpls label-switched-path *lsp-name*]**—Disable the LSP.
- **[edit protocols link-management *te-link* *te-link-name*]**—Disable a traffic engineering link.

- **[edit protocols link-management [te-link](#) *te-link-name* [interface](#) *interface-name*]**—Disable an interface used by a traffic engineering link.

Configuring the Graceful Deletion Timeout Interval

The router that initiates the graceful deletion procedure for an RSVP session waits for the graceful deletion timeout interval to ensure that all routers along the path (especially the ingress and egress routers) have prepared for the LSP to be taken down.

The ingress router initiates the graceful deletion procedure by sending the Admin Status object in the path message with the **D** bit set. The ingress router expects to receive an Resv message with the **D** bit set from the egress router. If the ingress router does not receive this message within the time specified by the graceful deletion timeout interval, it initiates a forced tear-down of the LSP by sending a PathTear message.

To configure the graceful deletion timeout interval, include the **graceful-deletion-timeout** statement at the **[edit protocols rsvp]** hierarchy level. You can configure a time between 1 through 300 seconds. The default value is 30 seconds.

```
graceful-deletion-timeout seconds;
```

You can configure this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

You can use the **show rsvp version** command to determine the current value configured for the graceful deletion timeout.

GMPLS RSVP-TE VLAN LSP Signaling Overview

IN THIS SECTION

- [Understanding GMPLS RSVP-TE Signaling | 1262](#)
- [Need for GMPLS RSVP-TE VLAN LSP Signaling | 1262](#)
- [GMPLS RSVP-TE VLAN LSP Signaling Functionality | 1264](#)
- [LSP Hierarchy with GMPLS RSVP-TE VLAN LSP | 1264](#)
- [Path Specification for GMPLS RSVP-TE VLAN LSP | 1264](#)
- [GMPLS RSVP-TE VLAN LSP Configuration | 1265](#)
- [Associated Bidirectional Packet LSP | 1266](#)
- [Make-Before-Break for Associated Bidirectional Packet and GMPLS RSVP-TE VLAN LSP | 1266](#)
- [Supported and Unsupported Features | 1267](#)

Understanding GMPLS RSVP-TE Signaling

Signaling is the process of exchanging messages within the control plane to set up, maintain, modify, and terminate data paths (label-switched paths (LSPs)) in the data plane. Generalized MPLS (GMPLS) is a protocol suite that extends the existing control plane of MPLS to manage further classes of interfaces and to support other forms of label switching, such as time-division multiplexing (TDM), fiber (port), Lambda, and so on.

GMPLS extends intelligent IP/MPLS connections from Layer 2 and Layer 3 all the way to Layer 1 optical devices. Unlike MPLS, which is supported mainly by routers and switches, GMPLS can also be supported by optical platforms, including SONET/SDH, optical cross-connects (OXCs), and dense wave division multiplexing (DWDM).

In addition to labels, which are primarily used to forward data in MPLS, other physical entries, such as wavelengths, time slots, and fibers can be used as label objects to forward data in GMPLS, thereby leveraging the existing control plane mechanisms to signal different kinds of LSPs. GMPLS uses RSVP-TE to be able to request the other label objects to signal the various kinds of LSPs (nonpacket). Bidirectional LSPs and an out-of-band control channel and a data channel using the Link Management Protocol (LMP) are the other mechanisms that are used by GMPLS to establish LSPs.

Need for GMPLS RSVP-TE VLAN LSP Signaling

The traditional Layer 2 point-to-point services use Layer 2 circuits and Layer 2 VPN technologies that are based on LDP and BGP. In the traditional deployment, the customer edge (CE) devices do not participate in the signaling of the Layer 2 service. The provider edge (PE) devices manage and provision the Layer 2 service to provide end-to-end connectivity between the CE devices.

One of the biggest challenges of having the PE devices provision the Layer 2 services for each Layer 2 circuit between a pair of CE devices is the network management burden on the provider network.

[Figure 97 on page 1263](#) illustrates how the Layer 2 service is set up and used by the CE routers in a LDP/BGP-based Layer 2 VPN technology. Two CE routers CE1 and CE2 are connected to a provider MPLS network through the PE routers PE1 and PE2 respectively. The CE routers are connected to the PE routers by Ethernet links. Routers CE1 and CE2 are configured with VLAN1 and VLAN2 logical Layer 3 interfaces, so they appear to be directly connected. Routers PE1 and PE2 are configured with Layer 2 circuit (pseudowire) to carry the Layer 2 VLAN traffic between the CE routers. The PE routers use packet MPLS LSPs within the provider MPLS network to carry the Layer 2 VLAN traffic.

Figure 97: Traditional Layer 2 Point-to-Point Services




With the introduction of GMPLS-based VLAN LSP signaling, the need for the PE (also called server-layer) network to provision each individual Layer 2 connection between the CE (also called client) devices is minimized. The client router requests the server-layer router to which it is directly connected, for setting up the Layer 2 service to connect with a remote client router through GMPLS signaling.

The server-layer devices extend the signaling through the server-layer network to connect with the remote client routers. In the process, the server-layer device sets up the data plane for the Layer 2 service at the server-client border, and sets up the data plane for carrying the Layer 2 traffic within the server-layer network. With the Layer 2 service setup, the client routers can run IP/MPLS directly on top of the Layer 2 service and have IP/MPLS adjacency with each other.

In addition to reducing the provisioning activity needed on the server-layer devices, GMPLS signaling also provides the client routers with the flexibility of bringing up the Layer 2 circuits on an on-demand basis without depending on the server-layer administration for the provisioning of the Layer 2 service.

Using the same topology as in Figure 1, [Figure 98 on page 1263](#) illustrates how the Layer 2 service is set up and used by the client routers in GMPLS RSVP-TE-based Layer 2 VPN technology.

Figure 98: GMPLS RSVP-TE VLAN LSP

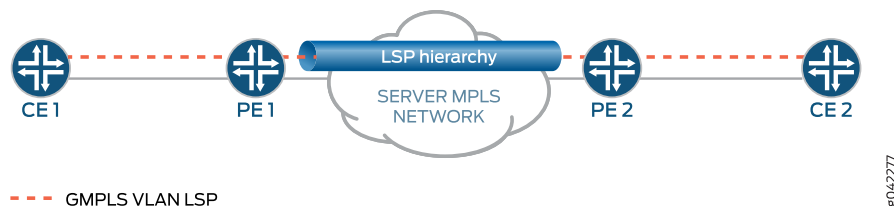

In [Figure 98 on page 1263](#), instead of configuring a pseudowire to carry the Layer 2 VLAN traffic between the client routers, Routers PE1 and PE2 are configured with an IP-based communication channel and other GMPLS-specific configurations (identification of Ethernet links as TE-links) for allowing the exchange of GMPLS RSVP-TE signaling messages with the client routers. Routers CE1 and CE2 are also configured with an IP-based communication channel and relevant GMPLS configuration for exchanging the GMPLS RSVP-TE signaling messages with the server-layer routers. Routers CE1 and CE2 establish an IP/MPLS adjacency on top of this Layer 2 service.

GMPLS RSVP-TE VLAN LSP Signaling Functionality

Based on [Figure 98 on page 1263](#), the client router establishes the Layer 2 service in the server-layer network as follows:

1. Router CE1 initiates GMPLS RSVP-TE signaling with Router PE1. In this signaling message, Router CE1 indicates the VLAN on the Ethernet link for which it needs the Layer 2 service and the remote CE router, Router CE2, with which the VLAN should be connected.

Router CE1 also indicates the remote PE router, Router PE2, to which Router CE2 is connected, and the exact Ethernet link connecting Router CE2 to Router PE2 on which the Layer 2 service is required in the signaling message.
2. Router PE1 uses the information from Router CE1 in the signaling message and determines the remote PE router, Router PE2, with which Router CE2 is attached. Router PE1 then establishes a packet MPLS LSP (associated bidirectional) through the server-layer MPLS network for carrying the VLAN traffic and then passes the GMPLS RSVP-TE signaling message to Router PE2 using the LSP hierarchy mechanism.
3. Router PE2 propagates the GMPLS RSVP-TE signaling message to Router CE2 with the VLAN to be used on the PE2-CE2 Ethernet link.
4. Router CE2 responds with an acknowledgment to the GMPLS RSVP-TE signaling message to Router PE2. Router PE2 then propagates it to Router PE1, which in turn propagates it to Router CE1.
5. As part of this message propagation, Routers PE1 and PE2 set up the forwarding plane to enable bidirectional flow of VLAN Layer 2 traffic between Routers CE1 and CE2.

LSP Hierarchy with GMPLS RSVP-TE VLAN LSP

The Layer 2 service in GMPLS RSVP-TE VLAN LSP signaling is brought up using a hierarchy mechanism in which two different RSVP LSPs are created for the Layer 2 service:

- An end-to-end VLAN LSP that has state information at the client and server-layer routers.
- An associated bidirectional packet transport LSP that is present in the server-layer routers (PE and P) of the server-layer network.

The LSP hierarchy avoids sharing information about technology-specific LSP characteristics with the core nodes of the server-layer network. This solution cleanly separates the VLAN LSP state and the transport LSP state, and ensures that the VLAN LSP state is only present on the nodes (PE, CE) where it is needed.

Path Specification for GMPLS RSVP-TE VLAN LSP

The path for the GMPLS RSVP-TE LSP is configured as an Explicit Route Object (ERO) at the initiating client router. As this LSP traverses different network domains (initiating, terminating at client network, and traversing the server-layer network), the LSP setup falls under the category of an interdomain LSP setup. In an interdomain scenario, one network domain generally does not have full visibility into the

topology of the other network domain. Hence, the ERO that gets configured at the initiating client router does not have full hop information for the server-layer portion. This feature requires that the ERO configured at the CE router has three hops, with the first hop being a strict hop identifying the CE1-PE1 Ethernet link, the second hop being a loose hop identifying the egress PE router (PE2), and the third hop being a strict hop identifying the CE2-PE2 Ethernet link.

GMPLS RSVP-TE VLAN LSP Configuration

The configuration required to set up a GMPLS VLAN LSP at the client and server routers uses the existing GMPLS configuration model with some extensions. The Junos OS GMPLS configuration model for nonpacket LSPs is targeted toward bringing the physical interfaces up and running through GMPLS RSVP-TE signaling, whereas signaling a GMPLS RSVP-TE VLAN LSP aims at bringing up individual VLANs on top of a physical interface. The **ethernet-vlan** configuration statement under the **[edit protocols link-management te-link]** hierarchy enables this.

The client router has physical interfaces connected to a server network, and the server network provides a point-to-point connection between two client routers over the attached physical interfaces. The physical interface is brought into an operational state by GMPLS RSVP-TE as follows:

1. The client router maintains a routing or signaling adjacency with the server network node to which the physical interface is connected, typically through a control channel different from the physical interface, because the physical interface itself is brought up and running only after the signaling.
2. The client router and the server network node identify the physical interfaces connecting them using the TE-link mechanism.
3. The client router and the server network node use the TE-link identifier (IP address) as the GMPLS RSVP hop and the physical interface identifier as the GMPLS label values in the GMPLS RSVP-TE signaling messages to bring the physical interface into an operational state.

In the existing GMPLS configuration, the server and client network nodes use the **protocols link-management peer *peer-name*** configuration statement to specify the adjacent peer node. Because a client router can have one or more physical interfaces connected to the server network node, these physical interfaces are grouped and identified by an IP address through the **protocols link-management te-link *link-name*** configuration statement. The TE-link is assigned a local IP address, a remote IP address, and a list of physical interfaces. The TE-link is then associated with the **protocols link-management peer *peer-name* te-link *te-link-list*** configuration statement.

The out-of-band control channel that is required for exchanging signaling messages is specified using the **protocols link-management peer *peer-name* control-channel *interface-name*** configuration statement. The existence of the server or client network node is made visible to the RSVP and IGP (OSPF) protocols through the **peer-interface *interface-name*** configuration statement under the **[edit protocols rsvp]** and **[edit protocols ospf]** hierarchy levels.

In the existing GMPLS configuration, the label (upstream label and resv label) that is carried in the signaling message is an integer identifier that identifies the physical interface that is required to be brought up. As the label is used to identify the physical interface, the existing GMPLS configuration allows multiple

interfaces to be grouped under a single TE-link. In the existing GMPLS configuration, there is sufficient information in the GMPLS RSVP-TE signaling message, such as TE-link address and label value, to identify the physical interface that is required to be brought up. In contrast, for GMPLS RSVP-TE VLAN LSP configuration, the VLAN ID value is used as the label in the signaling message.

In the GMPLS RSVP-TE VLAN LSP configuration, if multiple interfaces are allowed to be configured under a single TE-link, using VLAN ID as the label value in the signaling message can cause ambiguity as to which physical interface on which the VLAN has to be provisioned. Therefore, the TE-link is configured with the **ethernet-vlan** configuration statement, if the number of physical interfaces that can be configured under the TE-link is restricted to only one.

In the existing GMPLS configuration, the bandwidth for a nonpacket LSP is a discrete quantity that corresponds to the bandwidth of the physical interface that needs to be brought up. So, the GMPLS LSP configuration does not allow any bandwidth to be specified, but allows the bandwidth to be specified only through the **signal-bandwidth** configuration statement under the **[protocols mpls label-switched-path lsp-name lsp-attributes]** hierarchy level. In the GMPLS VLAN LSP configuration, bandwidth is specified similar to that of a packet LSP. In the GMPLS VLAN LSP configuration, the **bandwidth** option is supported and **signal-bandwidth** is not supported.

Associated Bidirectional Packet LSP

The GMPLS RSVP-TE VLAN LSP is carried on an associated bidirectional transport LSP within the server-layer network, which is a single-sided provisioned LSP. The transport LSP signaling is initiated as a unidirectional LSP from the source router to the destination router in the forward direction, and the destination router in turn initiates the signaling of the unidirectional LSP in the reverse direction back to the source router.

Make-Before-Break for Associated Bidirectional Packet and GMPLS RSVP-TE VLAN LSP

The make-before-break support for an associated bidirectional transport LSP follows a similar model, where the destination router for the forward direction of the bidirectional LSP does not perform any make-before-break operations on the reverse direction of the bidirectional LSP. It is the source router (initiator of the associated bidirectional LSP) that initiates the make-before-break newer instance of the associated bidirectional LSP, and the destination router in turn initiates the make-before-break newer instance in the other direction.

For instance, in [Figure 98 on page 1263](#), the unidirectional transport LSP is initiated from Router PE1 to Router PE2 in the forwarding direction, and in turn Router PE2 initiates the transport LSP to Router PE1 in the reverse direction. When a make-before-break instance occurs, only Router PE1 as the initiating client router can establish a new instance of the associated bidirectional LSP. Router PE2 in turn initiates the make-before-break newer instance in the reverse direction.

The make-before-break support for the associated bidirectional transport LSP is used only in scenarios where the transport LSP gets into a state of being locally protected due to link or node failure on the path of the LSP. The GMPLS RSVP-TE VLAN LSP uses the make-before-break mechanism for adjusting seamless bandwidth changes.

NOTE: Periodic re-optimization is not enabled for the associated bidirectional transport LSPs.

The newer make-before-break instance of the GMPLS VLAN LSP is supported under the following constraints:

- It should originate from the same client router as the older instance and be destined to the same client router as the older instance.
- It should use the same server-client links at both the server-client ends as the older instance.
- It should use the same VLAN label at the server-client links as the older instance.
- The GMPLS VLAN LSP should be configured as **adaptive** when the bandwidth change is initiated from the CLI, or else the current instance of the VLAN LSP is torn down and a new VLAN LSP instance is established.

The make-before-break operation for the GMPLS VLAN LSP on the server-layer edge router is rejected if these constraints are not met.

On the server-layer edge routers, when a make-before-break instance of the GMPLS VLAN LSP is seen, a completely new, separate associated bidirectional transport LSP is created to support this make-before-break instance. The existing associated bidirectional LSP (supporting the older instance) is not triggered to initiate a make-before-break instance at the transport LSP level. An implication of this choice (of initiating a new transport LSP) is that at the server-layer resource/bandwidth sharing does not happen when a make-before-break operation is performed for the GMPLS VLAN LSP.

Supported and Unsupported Features

Junos OS supports the following features with the GMPLS RSVP-TE VLAN LSP:

- Request for specific bandwidth and local protection for the VLAN LSP on the client router to the server-layer router.
- Nonstop active routing (NSR) support for the GMPLS VLAN LSP at the client routers, server-layer edge routers, and associated bidirectional transport LSP at the server-layer edge routers.
- Multichassis support.

Junos OS does **not** support the following GMPLS RSVP-TE VLAN LSP functionality:

- Graceful restart support for associated bidirectional packet LSP and GMPLS VLAN LSP.
- End-to-end path computation for GMPLS VLAN LSP using CSPF algorithm at the client router.
- Non-CSPF routing-based discovery of next-hop routers by the different client, server-layer edge routers.
- Automatic provisioning of the client Layer 3 VLAN interfaces upon the successful setup of the VLAN LSP at the client routers.
- MPLS OAM (LSP-ping, BFD).

- Packet MPLS applications, such as next-hop in static route and in IGP shortcuts.
- Local cross connect mechanism, where a client router connects to a remote client router which is connected to the same server router.
- Junos OS Services Framework.
- IPv6 support.
- Logical systems.
- Aggregated Ethernet/SONET/IRB interfaces at the server-client link.

Example: Configuring GMPLS RSVP-TE VLAN LSP Signaling

IN THIS SECTION

- [Requirements | 1268](#)
- [Overview | 1269](#)
- [Configuration | 1275](#)
- [Verification | 1289](#)

This example shows how to configure GMPLS RSVP-TE VLAN LSP signaling on the client routers to enable one client router to connect with a remote client router through a server-layer network using the LSP hierarchy. This enables the client routers to establish, maintain, and provision the Layer 2 services, without depending on the server-layer administration, thereby reducing the burden on the operational expenses of the provider network.

Requirements

This example uses the following hardware and software components:

- Six routers that can be a combination of M Series Multiservice Edge Routers, MX Series 5G Universal Routing Platforms, T Series Core Routers, and PTX Series Packet Transport Routers
- Junos OS Release 14.2 or later running on the client routers and server-layer edge routers

Before you begin:

1. Configure the device interfaces.
2. Configure the interface-associated VLANs.
3. Configure the following routing protocols:
 - RSVP


- MPLS
- LMP

Overview

Starting with Junos OS Release 14.2, the Layer 2 services between two client routers across an external/third-party server-layer network are set up by the client routers on an on-demand basis through GMPLS RSVP-TE signaling. This feature provides the client routers the flexibility to establish, maintain, and provision the Layer 2 services, without depending on the server-layer administration, thereby reducing the burden on the operational expenses of the provider network. In traditional Layer 2 VPN technology based on LDP and BGP, the provider network handled the provisioning activity for each Layer 2 circuit established between two client routers.

Figure 99 on page 1269 illustrates the setting up and signaling of the GMPLS VLAN LSP between two client routers, CE1 and CE2, across a server-layer network with two server-layer edge routers, PE1 and PE2, and one server-layer core router, P.

Figure 99: Setting Up a GMPLS VLAN LSP

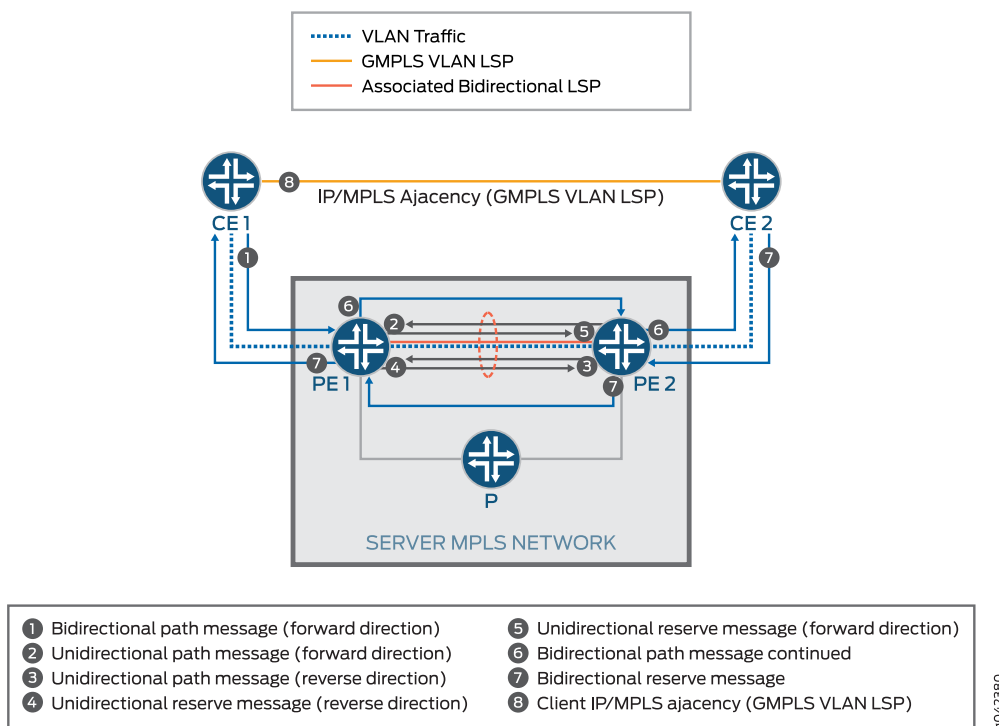

The signaling of GMPLS VLAN LSP is executed as follows:

1. Initiating GMPLS VLAN LSP at CE1

Router CE1 initiates the GMPLS VLAN LSP setup by sending the GMPLS RSVP-TE path message to Router PE1. The signaling between CE1 and PE1 is over an out-of-band control channel, which is a separate control VLAN configured on the Ethernet link connecting the two routers.

The GMPLS RSVP-TE path message initiated by Router CE1 is used to perform the following:

- a. Identify the Ethernet link on which the VLAN is active.
- b. Abstract the Ethernet link as a TE-link and assign an IP address to identify the Ethernet link.
- c. Allocate a VLAN ID from the pool of free VLANs managed by Router CE1 for every Ethernet link connecting Router PE1 to the identified Ethernet link.

This VLAN ID can also be used for the GMPLS VLAN LSP at the CE2-PE2 Ethernet link.

- d. Identify the VLAN for which the Layer 2 service is required to be set up using the allocated VLAN ID as the upstream label object and the upstream direction label value.
- e. Include an ERO object that helps Router PE1 in establishing the VLAN LSP through the server-layer network to the remote client router, CE2. The ERO object in the path message includes three hops:
 - First hop—Strict hop identifying the initiating client-server Ethernet link, PE1-CE1.
 - Second hop—Loose hop identifying the remote server-layer router, PE2.
 - Third hop—Strict hop identifying the remote client-server Ethernet link, PE2-CE2.
- f. Include the bandwidth required for the GMPLS VLAN LSP.
- g. Include any local-protection required within the server-layer network for the VLAN LSP.

2. Initiating Associated Bidirectional Transport LSP at PE1

After Router PE1 receives the path message from Router CE1, the message is validated to check the availability of the Ethernet link and VLAN ID. In the server-layer network, the Layer 2 services between the server-layer routers, PE1 and PE2, are provided at the data plane in a manner similar to Layer 2 circuits. Router PE1 brings up a transport LSP to Router PE2 and then extends the GMPLS VLAN LSP as a hierarchical LSP running on top of the PE1-PE2 transport LSP. The PE1-PE2 transport LSP is a packet LSP and is bidirectional in nature. This is because the GMPLS VLAN LSP is bidirectional and each server-layer router needs to be able to do the following:

- Receive traffic from the server-client Ethernet link (for example, the PE1-CE1 link) and send it to the remote server-layer router, PE2.
- Receive traffic from remote Router PE2 and send it on the PE1-CE1 Ethernet link.

For each GMPLS VLAN LSP, a packet transport LSP is set up within the server-layer network. The transport LSP is exclusively used to carry traffic of the GMPLS VLAN LSP for which it was created. The

transport LSP is dynamically created at the time of receiving the GMPLS VLAN LSP; thus, no configuration is required to trigger its creation. The transport LSP established for the VLAN LSP inherits the bandwidth and the local-protection attributes from the VLAN LSP.

Router PE1 signals the PE1-PE2 transport LSP to Router PE2. Router PE1 determines the destination for the transport LSP from the loose hop specified in the ERO object of the GMPLS RSVP-TE path message from Router CE1 and then signals the VLAN LSP. However, if the PE1-PE2 transport LSP fails to establish, Router PE1 sends back a path error message to Router CE1, and the GMPLS VLAN LSP is not established as well.

3. Setting Up the Associated Bidirectional Transport LSP Between the Server-Layer Routers

The associated bidirectional LSP between routers PE1 and PE2 consists of two unidirectional packet LSPs:

- PE1-to-PE2
- PE2-to-PE1

Router PE1 initiates signaling of a unidirectional packet LSP to Router PE2. This unidirectional packet LSP constitutes the forward direction (PE1-to-PE2) of the associated bidirectional LSP, and the path message carries the Extended Association Object indicating this is a single-sided provisioning model. On receiving the path message for the LSP, Router PE2 responds with a Resv message and triggers the signaling of a unidirectional packet LSP to Router PE1 with the same path as (PE1-to-PE2) in the reverse direction. This unidirectional packet LSP uses the PE2-to-PE1 direction of the associated bidirectional LSP, and this path message carries the same Extended Association Object seen in the PE1-to-PE2 path message.

When Router PE1 receives the Resv message for the PE1-to-PE2 unidirectional LSP and the path message for the PE2-to-PE1 unidirectional LSP, PE1 binds the PE1-to-PE2 and PE2-to-PE1 unidirectional LSPs by matching the Extended Association Objects carried in the respective path messages. For the path message for the PE2-to-PE1 unidirectional LSP, Router PE1 responds with the Resv Message. On receiving the Resv message for the PE1-to-PE2 LSP and the path message for the PE2-to-PE1 LSP, Router PE1 has established the associated bidirectional packet transport LSP.

4. Setting Up the GMPLS VLAN LSP at Router PE1

After successfully establishing the transport LSP, Router PE1 triggers the signaling of the GMPLS VLAN LSP. Router PE1 sends the GMPLS RSVP-TE path message corresponding to the VLAN LSP directly to Router PE2, which is bidirectional in nature and includes the upstream label object.

Router PE2 is not aware of the association between the transport LSP and the VLAN LSP. This association is indicated to Router PE2 by Router PE1.

5. Setting Up the GMPLS VLAN LSP at Router PE2

On receiving the VLAN LSP path message from Router PE1, Router PE2 verifies the availability of the transport LSP. If the transport LSP is not available or the LSP setup is in progress, the VLAN LSP processing is put on hold. When the transport LSP is available, Router PE2 processes the VLAN LSP path message. The ERO object in this path message indicates that the next hop is a strict hop identifying the PE2-to-CE2 Ethernet link. The ERO object can indicate the VLAN ID to be used on the PE2-to-CE2 Ethernet link by Router PE2.

Router PE2 appropriately allocates the VLAN ID to be sent as the upstream label in the VLAN LSP path message to Router CE2, and sends it through an out-of-band control channel.

6. Processing the GMPLS VLAN LSP at Router CE2

On receiving the GMPLS RSVP-TE LSP from Router PE2, Router CE2 validates the availability of VLAN ID for allocation on the PE2-to-CE2 link. Router CE2 then allocates the VLAN ID for this VLAN LSP and sends back a Resv message to Router PE2 with the VLAN ID as the label object in the Resv message.

7. Processing the GMPLS VLAN LSP at Router PE2

On receiving the Resv message from Router CE2, Router PE2 validates that the label object in the Resv message has the same VLAN ID as in the path message. Router PE2 then allocates a 20-bit MPLS label, which is included in the Resv message sent to Router PE1.

Router PE2 then programs the forwarding plane with the entries to provide the Layer 2 service functionality.

NOTE: For all the VLAN IDs that can be allocated as labels on the PE1-to-CE1 and PE2-CE2 Ethernet links, you must manually configure logical interfaces for circuit cross-connect (CCC) purposes on the server-layer edge routers and not for other families, such as IPv4, IPv6, or MPLS.

8. Processing the GMPLS VLAN LSP at Router PE1

On receiving the Resv message for the VLAN LSP from Router PE2, Router PE1 sends a Resv message to Router CE1 with the same VLAN ID it received as the upstream label from Router CE1. Router PE1 programs the forwarding plane with the entries to provide the Layer 2 service functionality as Router PE2.

9. Processing the GMPLS VLAN LSP at Router CE1

On receiving the Resv message from Router PE1, Router CE1 validates that the VLAN ID received in the Resv message matches the VLAN ID in the upstream label in the path message it sent. This completes the setup of the GMPLS VLAN LSP from Router CE1 to Router CE2.

NOTE:

- The GMPLS VLAN LSP setup does not result in the addition of any forwarding plane entries at the client routers, CE1 and CE2. Only the server-layer routers, PE1 and PE2, add the forwarding plane entries for the GMPLS VLAN LSP.
- There is no routing information exchange between the client and the server-layer routers. The client and server-layer routers do not exchange their network topology information with each other.

10. Accounting for Bandwidth of the GMPLS VLAN LSP


On successfully setting up the GMPLS VLAN LSP, both the client and server-layer routers reduce the amount of available bandwidth on the server-client Ethernet links by the bandwidth amount allocated for the GMPLS VLAN LSP. This bandwidth accounting information is used for admission control purposes when additional GMPLS VLAN LSPs are brought up on the server-client Ethernet links.

11. Using GMPLS VLAN LSP by the Client Routers

After successfully setting up the GMPLS VLAN LSP, the client routers – CE1 and CE2 – need to be manually configured with the VLAN logical interface on top of the server-client Ethernet links with the signaled VLAN ID. This logical interface needs to be configured with the IP address and needs to be included in the IGP protocol. As a result of this configuration, Routers CE1 and CE2 establish IGP adjacency and exchange data traffic over the Layer 2 service established through the GMPLS signaling.

[Figure 100 on page 1274](#) illustrates the data traffic flow of the GMPLS VLAN LSP from Router CE1 to Router CE2 after the LSP setup is complete and the necessary CE1-to-CE2 IGP/MPLS adjacency has been established. The server-layer transport LSP originates from Router PE1, traverses a single server-layer core router, Router P, and reaches Router PE2. The server-layer transport LSP is shown as a penultimate-hop pop LSP, where Router P pops off the transport LSP label, and only the service label is present on the P-to-PE2 link.


Figure 100: Data Traffic Flow of GMPLS VLAN LSP

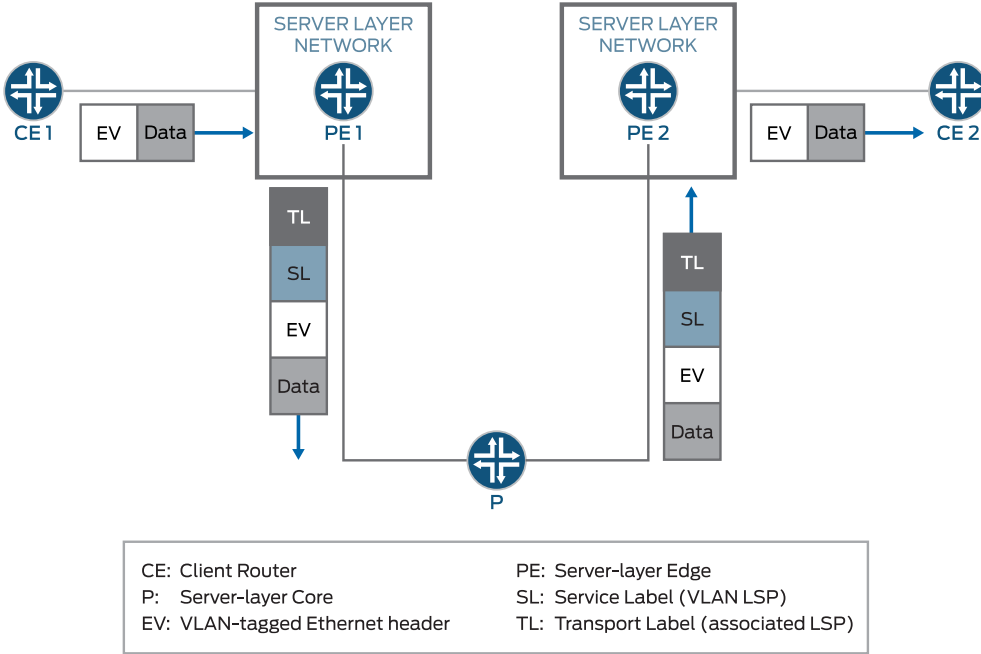

Topology

In [Figure 101 on page 1274](#), GMPLS RSVP-TE VLAN LSP signaling is used to establish the Layer 2 services between the client routers, Router CE1 and Router CE2. The server routers, Router PE1 and Router PE2, have a GRE tunnel established with each of the directly connected client routers. Routers P1 and P2 are also server routers in the server-layer network.

Figure 101: Configuring GMPLS RSVP-TE VLAN LSP Signaling

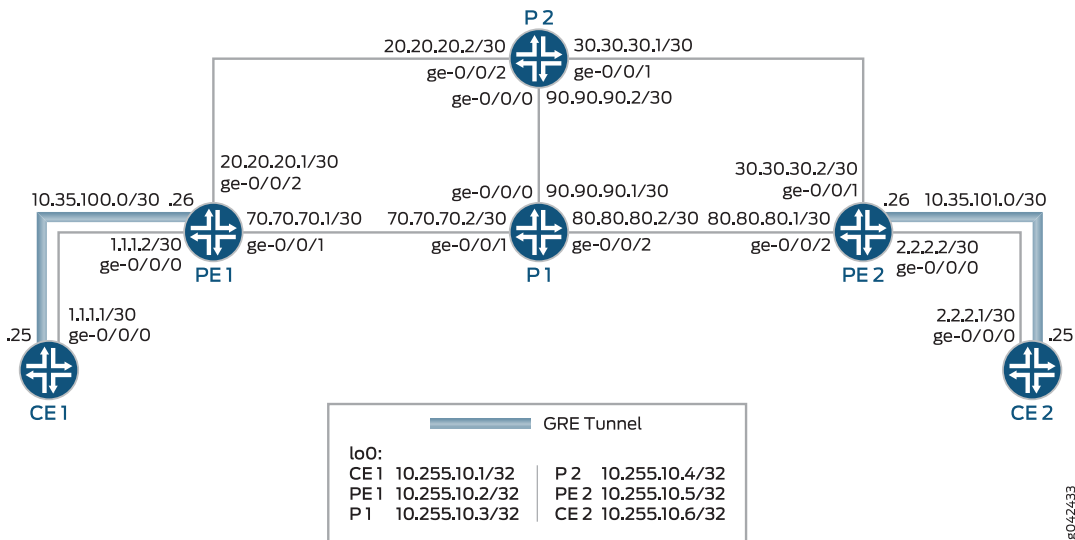

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

CE1

```

set interfaces ge-0/0/0 vlan-tagging
set interfaces ge-0/0/0 unit 1 vlan-id 1
set interfaces ge-0/0/0 unit 1 family inet address 1.1.1.1/30
set interfaces ge-0/0/0 unit 1 family mpls
set interfaces ge-0/0/0 unit 10 vlan-id 10
set interfaces ge-0/0/0 unit 10 family inet address 10.10.10.1/24
set interfaces ge-0/0/0 unit 10 family mpls
set interfaces gre unit 0 tunnel source 1.1.1.1
set interfaces gre unit 0 tunnel destination 1.1.1.2
set interfaces gre unit 0 family inet address 10.35.100.25/30
set interfaces lo0 unit 0 family inet address 10.255.10.1/32
set routing-options router-id 10.255.10.1
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols rsvp peer-interface PE1
set protocols mpls no-cspf
set protocols mpls label-switched-path CE1-to-CE2 from 10.255.10.1
set protocols mpls label-switched-path CE1-to-CE2 to 10.255.10.6
set protocols mpls label-switched-path CE1-to-CE2 lsp-attributes switching-type ethernet-vlan
set protocols mpls label-switched-path CE1-to-CE2 lsp-attributes upstream-label vlan-id 10
set protocols mpls label-switched-path CE1-to-CE2 bandwidth 100m
set protocols mpls label-switched-path CE1-to-CE2 primary path1
set protocols mpls path path1 10.35.1.2 strict
set protocols mpls path path1 10.255.10.5 loose
set protocols mpls path path1 10.36.1.1 strict
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols link-management te-link link10 local-address 10.35.1.1
set protocols link-management te-link link10 remote-address 10.35.1.2
set protocols link-management te-link link10 ethernet-vlan
set protocols link-management te-link link10 interface ge-0/0/0
set protocols link-management peer PE1 address 10.255.10.2
set protocols link-management peer PE1 control-channel gre.0
set protocols link-management peer PE1 te-link link10

```

PE1

```

set interfaces ge-0/0/0 vlan-tagging
set interfaces ge-0/0/0 encapsulation flexible-ethernet-services
set interfaces ge-0/0/0 unit 1 vlan-id 1
set interfaces ge-0/0/0 unit 1 family inet address 1.1.1.2/30
set interfaces ge-0/0/0 unit 1 family mpls
set interfaces ge-0/0/0 unit 10 encapsulation vlan-ccc
set interfaces ge-0/0/0 unit 10 vlan-id 10
set interfaces ge-0/0/1 unit 0 family inet address 70.70.70.1/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 20.20.20.1/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces gre unit 0 tunnel source 1.1.1.2
set interfaces gre unit 0 tunnel destination 1.1.1.1
set interfaces gre unit 0 family inet address 10.35.100.26/30
set interfaces lo0 unit 0 family inet address 10.255.10.2/32
set routing-options router-id 10.255.10.2
set protocols rsvp associated-bidirectional-lsp single-sided-provisioning
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols rsvp peer-interface CE1 dynamic-bidirectional-transport
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols link-management te-link link1 local-address 10.35.1.2
set protocols link-management te-link link1 remote-address 10.35.1.1
set protocols link-management te-link link1 ethernet-vlan vlan-id-range 1-1000
set protocols link-management te-link link1 interface ge-0/0/0
set protocols link-management peer CE1 address 10.255.10.1
set protocols link-management peer CE1 control-channel gre.0
set protocols link-management peer CE1 te-link link1

```

P1

```

set interfaces ge-0/0/0 unit 0 family inet address 90.90.90.1/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 70.70.70.2/24

```

```

set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 80.80.80.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.10.3/32
set routing-options router-id 10.255.10.3
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

P2

```

set interfaces ge-0/0/0 unit 0 family inet address 90.90.90.2/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 30.30.30.1/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 20.20.20.2/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.10.4/32
set routing-options router-id 10.255.10.4
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

PE2

```

set interfaces ge-0/0/0 vlan-tagging
set interfaces ge-0/0/0 encapsulation flexible-ethernet-services
set interfaces ge-0/0/0 unit 0 vlan-id 1
set interfaces ge-0/0/0 unit 0 family inet address 2.2.2.2/30

```

```

set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/0 unit 10 encapsulation vlan-ccc
set interfaces ge-0/0/0 unit 10 vlan-id 10
set interfaces ge-0/0/1 unit 0 family inet address 30.30.30.2/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 80.80.80.1/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces gre unit 0 tunnel source 2.2.2.2
set interfaces gre unit 0 tunnel destination 2.2.2.1
set interfaces gre unit 0 family inet address 10.35.101.26/30
set interfaces lo0 unit 0 family inet address 10.255.10.5/32
set routing-options router-id 10.255.10.5
set protocols rsvp associated-bidirectional-lsp single-sided-provisioning
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols rsvp peer-interface CE2 dynamic-bidirectional-transport
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols link-management te-link link1 local-address 10.36.1.2
set protocols link-management te-link link1 remote-address 10.36.1.1
set protocols link-management te-link link1 ethernet-vlan vlan-id-range 1-1000
set protocols link-management te-link link1 interface ge-0/0/0
set protocols link-management peer CE2 address 10.255.10.6
set protocols link-management peer CE2 control-channel gre.0
set protocols link-management peer CE2 te-link link1

```

CE2

```

set interfaces ge-0/0/0 vlan-tagging
set interfaces ge-0/0/0 unit 1 vlan-id 1
set interfaces ge-0/0/0 unit 1 family inet address 2.2.2.1/24
set interfaces ge-0/0/0 unit 1 family mpls
set interfaces ge-0/0/0 unit 10 vlan-id 10
set interfaces ge-0/0/0 unit 10 family inet address 10.10.10.2/24
set interfaces ge-0/0/0 unit 10 family mpls
set interfaces gre unit 0 tunnel source 2.2.2.1
set interfaces gre unit 0 tunnel destination 2.2.2.2

```

```

set interfaces gre unit 0 family inet address 10.35.101.25/30
set interfaces lo0 unit 0 family inet address 10.255.10.6/32
set routing-options router-id 10.255.10.6
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols rsvp peer-interface PE2
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols link-management te-link link10 local-address 10.36.1.1
set protocols link-management te-link link10 remote-address 10.36.1.2
set protocols link-management te-link link10 ethernet-vlan vlan-id-range 1-1000
set protocols link-management te-link link10 interface ge-0/0/0
set protocols link-management peer PE2 address 10.255.10.5
set protocols link-management peer PE2 control-channel gre.0
set protocols link-management peer PE2 te-link link10

```

Configuring the Client Router

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router CE1:

NOTE: Repeat this procedure for Router CE2 in the server-layer network, after modifying the appropriate interface names, addresses, and any other parameters for the router.

1. Configure the interface connecting Router CE1 to Router PE1.

```

[edit interfaces]
user@CE1# set ge-0/0/0 vlan-tagging

```

2. Configure the control VLAN for the ge-0/0/0 interface.

```

[edit interfaces]
user@CE1# set ge-0/0/0 unit 1 vlan-id 1
user@CE1# set ge-0/0/0 unit 1 family inet address 1.1.1.1/30
user@CE1# set ge-0/0/0 unit 1 family mpls

```

3. Configure the LSP VLAN on the ge-0/0/0 interface.

```
[edit interfaces]
user@CE1# set ge-0/0/0 unit 10 vlan-id 10
user@CE1# set ge-0/0/0 unit 10 family inet address 10.10.10.1/24
user@CE1# set ge-0/0/0 unit 10 family mpls
```

4. Configure the GRE tunnel as the controlling interface for Router CE1.

```
[edit interfaces]
user@CE1# set gre unit 0 tunnel source 1.1.1.1
user@CE1# set gre unit 0 tunnel destination 1.1.1.2
user@CE1# set gre unit 0 family inet address 10.35.100.25/30
```

5. Configure the loopback interface of Router CE1.

```
[edit interfaces]
user@CE1# set lo0 unit 0 family inet address 10.255.10.1/32
```

6. Configure the loopback address of Router CE1 as its router ID.

```
[edit routing-options]
user@CE1# set router-id 10.255.10.1
```

7. Enable RSVP on all the interfaces of Router CE1, excluding the management interface.

```
[edit protocols]
user@CE1# set rsvp interface all
user@CE1# set rsvp interface fxp0.0 disable
```

8. Configure the RSVP peer interface for Router CE1.

```
[edit protocols]
user@CE1# set rsvp peer-interface PE1
```

9. Disable automatic path computation for label-switched paths (LSPs).

```
[edit protocols]
```



```
user@CE1# set mpls no-cspf
```

10. Configure the LSP to connect Router CE1 to Router CE2.

```
[edit protocols]
user@CE1# set mpls label-switched-path CE1-to-CE2 from 10.255.10.1
user@CE1# set mpls label-switched-path CE1-to-CE2 to 10.255.10.6
```

11. Configure the CE1-to-CE2 LSP attributes.

```
[edit protocols]
user@CE1# set mpls label-switched-path CE1-to-CE2 lsp-attributes switching-type ethernet-vlan
user@CE1# set mpls label-switched-path CE1-to-CE2 lsp-attributes upstream-label vlan-id 10
user@CE1# set mpls label-switched-path CE1-to-CE2 bandwidth 100m
```

12. Configure the CE1-to-CE2 LSP path and path parameters.

```
[edit protocols]
user@CE1# set mpls label-switched-path CE1-to-CE2 primary path1
user@CE1# set mpls path path1 10.35.1.2 strict
user@CE1# set mpls path path1 10.255.10.5 loose
user@CE1# set mpls path path1 10.36.1.1 strict
```

13. Enable MPLS on all the interfaces of Router CE1, excluding the management interface.

```
[edit protocols]
user@CE1# set mpls interface all
user@CE1# set mpls interface fxp0.0 disable
```

14. Configure a traffic engineering link, and assign addresses for the local and remote end of the link.

```
[edit protocols]
user@CE1# set link-management te-link link10 local-address 10.35.1.1
user@CE1# set link-management te-link link10 remote-address 10.35.1.2
```

15. Enable setting up of Layer 2 VLAN LSP on the link10 traffic engineering link.

```
[edit protocols]
```

```
user@CE1# set link-management te-link link10 ethernet-vlan
```

16. Configure the Router CE1 interface as the member interface of the link10 traffic engineering link.

```
[edit protocols]
user@CE1# set link-management te-link link10 interface ge-0/0/0
```

17. Configure Router PE1 as the Link Management Protocol (LMP) peer for Router CE1, and configure the peer attributes.

```
[edit protocols]
user@CE1# set link-management peer PE1 address 10.255.10.2
user@CE1# set link-management peer PE1 control-channel gre.0
user@CE1# set link-management peer PE1 te-link link10
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@CE1# show interfaces
ge-0/0/0 {
  vlan-tagging;
  unit 1 {
    vlan-id 1;
    family inet {
      address 1.1.1.1/30;
    }
    family mpls;
  }
  unit 10 {
    vlan-id 10;
    family inet {
      address 10.10.10.1/24;
    }
    family mpls;
  }
}
gre {
  unit 0 {
```

```

    tunnel {
        source 1.1.1.1;
        destination 1.1.1.2;
    }
    family inet {
        address 10.35.100.25/30;
    }
}
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.10.1/32;
        }
    }
}
}

```

```

user@CE1# show routing-options
router-id 10.255.10.1;

```

```

user@CE1# show protocols
rsvp {
    interface all;
    interface fxp0.0 {
        disable;
    }
    peer-interface PE1;
}
mpls {
    no-cspf;
    label-switched-path CE1-to-CE2 {
        from 10.255.10.1;
        to 10.255.10.6;
        lsp-attributes {
            switching-type ethernet-vlan;
            upstream-label {
                vlan-id 10;
            }
        }
        bandwidth 100m;
        primary path1;
    }
    path path1 {

```

```

    10.35.1.2 strict;
    10.255.10.5 loose;
    10.36.1.1 strict;
  }
  interface all;
  interface fxp0.0 {
    disable;
  }
}
link-management {
  te-link link10 {
    local-address 10.35.1.1;
    remote-address 10.35.1.2;
    ethernet-vlan;
    interface ge-0/0/0;
  }
  peer PE1 {
    address 10.255.10.2;
    control-channel gre.0;
    te-link link10;
  }
}
}

```

Configuring the Server Router

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router PE1:

NOTE: Repeat this procedure for Router PE2 in the server-layer network, after modifying the appropriate interface names, addresses, and any other parameters for the router.

1. Configure the interface connecting Router PE1 to Router CE1.

```

[edit interfaces]
user@PE1# set ge-0/0/0 vlan-tagging
user@PE1# set ge-0/0/0 encapsulation flexible-ethernet-services

```

2. Configure the control VLAN for the ge-0/0/0 interface.

```
[edit interfaces]
user@PE1# set ge-0/0/0 unit 1 vlan-id 1
user@PE1# set ge-0/0/0 unit 1 family inet address 1.1.1.2/30
user@PE1# set ge-0/0/0 unit 1 family mpls
```

3. Configure the LSP VLAN on the ge-0/0/0 interface.

```
[edit interfaces]
user@PE1# set ge-0/0/0 unit 10 encapsulation vlan-ccc
user@PE1# set ge-0/0/0 unit 10 vlan-id 10
```

4. Configure the interface connecting Router PE1 to the core routers (Router P1 and Router P2).

```
[edit interfaces]
user@PE1# set ge-0/0/1 unit 0 family inet address 70.70.70.1/30
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 20.20.20.1/30
user@PE1# set ge-0/0/2 unit 0 family mpls
```

5. Configure the GRE tunnel as the controlling interface for Router PE1.

```
[edit interfaces]
user@PE1# set gre unit 0 tunnel source 1.1.1.2
user@PE1# set gre unit 0 tunnel destination 1.1.1.1
user@PE1# set gre unit 0 family inet address 10.35.100.26/30
```

6. Configure the loopback interface of Router PE1.

```
[edit interfaces]
user@PE1# set lo0 unit 0 family inet address 10.255.10.2/32
```

7. Configure the loopback address of Router PE1 as its router ID.

```
[edit routing-options]
user@PE1# set router-id 10.255.10.2
```

8. Configure an associated bidirectional LSP, and enable unidirectional reverse LSP setup for single-sided provisioned forward LSP.

```
[edit protocols]
user@PE1# set rsdp associated-bidirectional-lsp single-sided-provisioning
```

9. Enable RSVP on all the interfaces of Router PE1, excluding the management interface.

```
[edit protocols]
user@PE1# set rsdp interface all
user@PE1# set rsdp interface fxp0.0 disable
```

10. Configure the RSVP peer interface for Router PE1, and enable dynamic setup of bidirectional packet LSP for transporting nonpacket GMPLS LSP.

```
[edit protocols]
user@PE1# set rsdp peer-interface CE1 dynamic-bidirectional-transport
```

11. Enable MPLS on all the interfaces of Router PE1, excluding the management interface.

```
[edit protocols]
user@PE1# set mpls interface all
user@PE1# set mpls interface fxp0.0 disable
```

12. Configure OSPF with traffic engineering capabilities.

```
[edit protocols]
user@PE1# set ospf traffic-engineering
```

13. Enable OSPF area 0 on all the interfaces of Router PE1, excluding the management interface.

```
[edit protocols]
user@PE1# set ospf area 0.0.0.0 interface all
user@PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
```

14. Configure a traffic engineering link, and assign addresses for the local and remote end of the link.

```
[edit protocols]
user@PE1# set link-management te-link link1 local-address 10.35.1.2
user@PE1# set link-management te-link link1 remote-address 10.35.1.1
```

15. Enable setting up of a Layer 2 VLAN LSP for a specific range of VLANs on the link1 traffic engineering link.

```
[edit protocols]
user@PE1# set link-management te-link link1 ethernet-vlan vlan-id-range 1-1000
```

16. Configure the Router PE1 interface as the member interface of the link1 traffic engineering link.

```
[edit protocols]
user@CE1# set link-management te-link link1 interface ge-0/0/0
```

17. Configure Router CE1 as the LMP peer for Router PE1, and configure the peer attributes.

```
[edit protocols]
user@CE1# set link-management peer CE1 address 10.255.10.1
user@CE1# set link-management peer CE1 control-channel gre.0
user@CE1# set link-management peer CE1 te-link link1
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  vlan-tagging;
  encapsulation flexible-ethernet-services;
  unit 1 {
    vlan-id 1;
    family inet {
      address 1.1.1.2/30;
    }
    family mpls;
  }
  unit 10 {
    encapsulation vlan-ccc;
    vlan-id 10;
  }
}
ge-0/0/1 {
  unit 0 {
```

```

        family inet {
            address 70.70.70.1/30;
        }
        family mpls;
    }
}
ge-0/0/2 {
    unit 0 {
        family inet {
            address 20.20.20.1/30;
        }
        family mpls;
    }
}
gre {
    unit 0 {
        tunnel {
            source 1.1.1.2;
            destination 1.1.1.1;
        }
        family inet {
            address 10.35.100.26/30;
        }
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.10.2/32;
        }
    }
}

```

```

user@PE1# show routing-options
router-id 10.255.10.2;

```

```

user@PE1# show protocols
rsvp {
    associated-bidirectional-lsp single-sided-provisioning;
    interface all;
    interface fxp0.0 {
        disable;
    }
}

```



```

    peer-interface CE1 {
        dynamic-bidirectional-transport;
    }
}
mpls {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
link-management {
    te-link link1 {
        local-address 10.35.1.2;
        remote-address 10.35.1.1;
        ethernet-vlan {
            vlan-id-range 1-1000;
        }
        interface ge-0/0/0;
    }
    peer CE1 {
        address 10.255.10.1;
        control-channel gre.0;
        te-link link1;
    }
}

```

Verification

IN THIS SECTION

- [Verifying the Traffic Engineering Link Status on the Client Routers | 1290](#)
- [Verifying the RSVP Session Status on the Client Routers | 1291](#)
- [Verifying the LSP Status on the Server Router | 1292](#)

- [Verifying the CCC Entries in the MPLS Routing Table of the Server Routers | 1293](#)
- [Verifying End-to-End Connectivity | 1294](#)

Confirm that the configuration is working properly.

Verifying the Traffic Engineering Link Status on the Client Routers

Purpose

Verify the status of the traffic engineering link configured between Router CE1 and Router CE2.

Action

From operational mode, run the **show link-management** and the **show link-management te-link detail** commands.

```
user@CE1> show link-management
```

```
Peer name: PE1, System identifier: 50740
State: Up, Control address: 10.255.10.2
Hello interval: 150, Hello dead interval: 500
  Control-channel      State
  gre.0                Active
TE links:
  link10

TE link name: link10, State: Up
  Local identifier: 65075, Remote identifier: 0, Local address: 10.35.1.1, Remote
address: 10.35.1.2, Encoding: Ethernet, Switching: EVPL, Minimum bandwidth: 0bps,

  Maximum bandwidth: 1000Mbps, Total bandwidth: 1000Mbps, Available bandwidth:
900Mbps
  Name                  State Local ID Remote ID      Bandwidth Used
  LSP-name
  ge-0/0/0              Up          54183         0          1000Mbps Yes
  CE1-to-CE2
```

```
user@CE1> show link-management te-link detail
```

```
TE link name: link10, State: Up
  Local identifier: 65075, Remote identifier: 0, Local address: 10.35.1.1, Remote
```

```

address: 10.35.1.2, Encoding: Ethernet, Switching: EVPL, Minimum bandwidth: 0bps,

Maximum bandwidth: 1000Mbps, Total bandwidth: 1000Mbps, Available bandwidth:
900Mbps
Resource: ge-0/0/0, Type: IFD, System identifier: 137, State: Up, Local
identifier: 54183, Remote identifier: 0
Total bandwidth: 1000Mbps, Unallocated bandwidth: 900Mbps
Traffic parameters: Encoding: Ethernet, Switching: EVPL, Granularity: Unknown

Maximum allocations: 4094, Number of allocations: 1, Unique allocations: 1,
In use: Yes
LSP name: CE1-to-CE2, Local label: 10, Remote label: 10, Allocated bandwidth:
100Mbps

```

user@CE2> show link-management

```

Peer name: PE2, System identifier: 50743
State: Up, Control address: 10.255.10.5
Hello interval: 150, Hello dead interval: 500
Control-channel          State
gre.0                    Active
TE links:
link10

TE link name: link10, State: Up
Local identifier: 65075, Remote identifier: 0, Local address: 10.36.1.1, Remote
address: 10.36.1.2, Encoding: Ethernet, Switching: EVPL, Minimum bandwidth: 0bps,

Maximum bandwidth: 1000Mbps, Total bandwidth: 1000Mbps, Available bandwidth:
900Mbps

```

Name	State	Local ID	Remote ID	Bandwidth	Used
LSP-name					
ge-0/0/0	Up	54183	0	1000Mbps	Yes
CE1-to-CE2					

Meaning

The Link Management Protocol (LMP) peering has been established between the client routers, and the traffic engineering link is up on both Routers CE1 and CE2.

Verifying the RSVP Session Status on the Client Routers

Purpose

Verify the status of the RSVP sessions between Router CE1 and Router CE2.

Action

From operational mode, run the **show rsvp session** command.

```
user@CE1> show rsvp session
```

Ingress RSVP: 1 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPname
10.255.10.6	10.255.10.1	Up	0	1 FF	-	10	CE1-to-CE2 Bidir

Total 1 displayed, Up 1, Down 0

Egress RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

```
user@CE2> show rsvp session
```

Ingress RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

Egress RSVP: 1 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPname
10.255.10.6	10.255.10.1	Up	0	1 FF	10	-	CE1-to-CE2 Bidir

Total 1 displayed, Up 1, Down 0

Transit RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

Meaning

The RSVP sessions are established between the ingress router, Router CE1, and the egress router, Router CE2.

Verifying the LSP Status on the Server Router

Purpose

Verify the status of the MPLS LSP on Router PE1.

Action

From operational mode, run the **show mpls lsp** command.

```
user@PE1> show mpls lsp
```

```
Ingress LSP: 1 sessions
To          From          State Rt P    ActivePath    LSPname
10.255.10.5  10.255.10.2    Up    0  *
vlan:0:10:8176:10.255.10.2->10.255.10.5 Assoc-Bidir
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.255.10.2  10.255.10.5    Up    0  1 FF      3      -
vlan:0:10:8176:10.255.10.2->10.255.10.5:rev
Total 1 displayed, Up 1, Down 0

Transit LSP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.255.10.6  10.255.10.1    Up    0  1 FF      10     299808 CE1-to-CE2 Bidir
Total 1 displayed, Up 1, Down 0
```

Meaning

The CE1-to-CE2 LSP is established, and the output displays the LSP attributes.

Verifying the CCC Entries in the MPLS Routing Table of the Server Routers

Purpose

Verify the circuit cross-connect (CCC) interface entries in the MPLS routing table.

Action

From operational mode, run the **show route table mpls.0** and the **show route forwarding-table ccc ccc-interface** commands.

```
user@PE1> show route table mpls.0
```

```
mpls.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 1d 22:14:51, metric 1
            Receive
1          *[MPLS/0] 1d 22:14:51, metric 1
            Receive
2          *[MPLS/0] 1d 22:14:51, metric 1
            Receive
13         *[MPLS/0] 1d 22:14:51, metric 1
```

```

                Receive
299824          *[RSVP/7/1] 17:32:07, metric 1
                > via ge-0/0/0.10, Pop
ge-0/0/0.10    *[RSVP/7/1] 17:32:07, metric 1
                > to 20.20.20.2 via ge-0/0/2.0, label-switched-path CE1-to-CE2

```

```
user@PE1> show route forwarding-table ccc ge-0/0/0.10
```

```

Routing table: default.mpls
MPLS:
Destination      Type RtRef Next hop                Type Index   NhRef Netif
ge-0/0/0.10      (CCC) user      0 20.20.20.2          Push 299808, Push 299872(top)
581              2 ge-0/0/2.0

Routing table: __mpls-oam__.mpls
MPLS:
Destination      Type RtRef Next hop                Type Index   NhRef Netif
default          perm      0                               dscd      534      1

```

Meaning

The output displays the CCC interface that is the client-router-facing interface and the next-hop details for that interface.

Verifying End-to-End Connectivity

Purpose

Verify the connectivity between Router CE1 and the remote client router, Router CE2.

Action

From operational mode, run the **ping** command.

```
user@CE1> ping 10.10.10.2
```

```

PING 10.10.10.2 (10.10.10.2): 56 data bytes
64 bytes from 10.10.10.2: icmp_seq=0 ttl=64 time=15.113 ms
64 bytes from 10.10.10.2: icmp_seq=1 ttl=64 time=13.353 ms
64 bytes from 10.10.10.2: icmp_seq=2 ttl=64 time=13.769 ms
64 bytes from 10.10.10.2: icmp_seq=3 ttl=64 time=10.341 ms
64 bytes from 10.10.10.2: icmp_seq=4 ttl=64 time=12.597 ms
^C
--- 10.10.10.2 ping statistics ---

```

```
5 packets transmitted, 5 packets received, 0% packet loss  
round-trip min/avg/max/stddev = 10.341/13.035/15.113/1.575 ms
```

Meaning

The ping from Router CE1 to Router CE2 is successful.

RELATED DOCUMENTATION

| [Basic MPLS Configuration](#) | 36

8

PART

MPLS VPNs and Circuits

CCC, TCC, and Layer 2.5 Switching | **1297**

CCC, TCC, and Layer 2.5 Switching

IN THIS CHAPTER

- [CCC, TCC, and Layer 2.5 Switching Configuration | 1297](#)

CCC, TCC, and Layer 2.5 Switching Configuration

IN THIS SECTION


- [TCC and Layer 2.5 Switching Overview | 1298](#)
- [Configuring VLAN TCC Encapsulation | 1298](#)
- [Configuring Translation Cross-Connect Interface Switching | 1300](#)
- [CCC Overview | 1302](#)
- [Understanding Carrier-of-Carriers VPNs | 1303](#)
- [Understanding Interprovider and Carrier-of-Carriers VPNs | 1305](#)
- [Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit | 1307](#)
- [VLAN CCC Encapsulation on Transport Side of Pseudowire Client Logical Interfaces Overview | 1310](#)
- [Transmitting Nonstandard BPDUs | 1313](#)
- [TCC Overview | 1313](#)
- [Configuring Layer 2 Switching Cross-Connects Using CCC | 1314](#)
- [Configuring MPLS LSP Tunnel Cross-Connects Using CCC | 1324](#)
- [Configuring TCC | 1329](#)
- [CCC and TCC Graceful Restart | 1335](#)
- [Configuring CCC and TCC Graceful Restart | 1335](#)
- [Configuring an MPLS-Based VLAN CCC Using the Connection Method \(CLI Procedure\) | 1336](#)
- [Configuring CCC Switching for Point-to-Multipoint LSPs | 1338](#)
- [Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN \(CLI Procedure\) | 1340](#)

TCC and Layer 2.5 Switching Overview

Translational cross-connect (TCC) allows you to forward traffic between a variety of Layer 2 protocols or circuits. It is similar to its predecessor, CCC. However, while CCC requires the same Layer 2 encapsulations on both sides of a router (such as Point-to-Point Protocol [PPP] or Frame Relay-to-Frame Relay), TCC lets you connect different types of Layer 2 protocols interchangeably. With TCC, combinations such as PPP-to-ATM and Ethernet-to-Frame Relay cross-connections are possible. Also, TCC can be used to create Layer 2.5 VPNs and Layer 2.5 circuits.

Consider a sample topology ([Figure 102 on page 1298](#)) in which you can configure a full-duplex Layer 2.5 translational cross-connect between Router A and Router C, using a Juniper Networks router, Router B, as the TCC interface. In this topology, Router B strips all PPP encapsulation data from frames arriving from Router A and adds ATM encapsulation data before the frames are sent to Router C. All Layer 2 negotiations are terminated at the interconnecting router (Router B).

Figure 102: Sample Translation Cross-Connect Topology

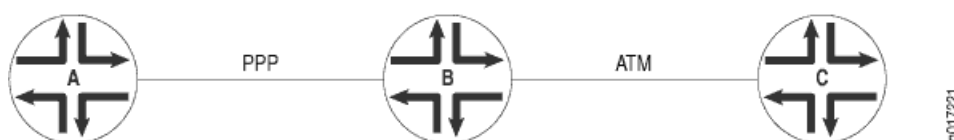

TCC functionality is different from standard Layer 2 switching. TCC only swaps Layer 2 headers. No other processing, such as header checksums, time-to-live (TTL) decrementing, or protocol handling, is performed. Currently, TCC is supported in IPv4, ISO, and MPLS.

Ethernet TCC is supported on interfaces that carry IPv4 traffic only. For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC and extended VLAN CCC are not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC and extended VLAN TCC are not supported.

Configuring VLAN TCC Encapsulation

VLAN TCC encapsulation allows circuits to have different media on either side of the forwarding path. VLAN TCC encapsulation supports TPID 0x8100 only. You must include configuration statements at the logical and physical interface hierarchy levels.

Starting in Junos OS Release 20.1R1, aggregated Ethernet interfaces support VLAN translational cross-connect (TCC) encapsulation. For configuring VLAN TCC encapsulation, you must have the member links of aggregated Ethernet with VLAN TCC encapsulation supported hardware.

NOTE: MX series routers does not perform any external commit check for member links of aggregated interfaces for the VLAN TCC encapsulation supported hardware.

To configure VLAN TCC encapsulation, include the **encapsulation** statement and specify the **vlan-tcc** option:

```
[edit interfaces interface-name unit logical-unit-number]
encapsulation vlan-tcc;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

Additionally, configure the logical interface by including the **proxy** and **remote** statements:

```
proxy {
  inet-address;
}
remote {
  (inet-address | mac-address);
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family tcc]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family tcc]

The proxy address is the IP address of the non-Ethernet TCC neighbor for which the TCC router is acting as a proxy.

The remote address is the IP or MAC address of the remote router. The **remote** statement provides ARP capability from the TCC switching router to the Ethernet neighbor. The MAC address is the physical Layer 2 address of the Ethernet neighbor.

When VLAN TCC encapsulation is configured on the logical interface, you also must specify flexible Ethernet services on the physical interface. To specify flexible Ethernet services, include the **encapsulation** statement at the [edit interfaces *interface-name*] hierarchy level and specify the **flexible-ethernet-services** option:

```
[edit interfaces interface-name]
encapsulation flexible-ethernet-services;
```

Extended VLAN TCC encapsulation supports TPIDs 0x8100 and 0x9901. Extended VLAN TCC is specified at the physical interface level. When configured, all units on that interface must use VLAN TCC encapsulation, and no explicit configuration is needed on logical interfaces.

One-port Gigabit Ethernet, 2-port Gigabit Ethernet, and 4-port Fast Ethernet PICs with VLAN tagging enabled can use VLAN TCC encapsulation. To configure the encapsulation on a physical interface, include the **encapsulation** statement at the **[edit interfaces *interface-name*]** hierarchy level and specify the **extended-vlan-tcc** option:

```
[edit interfaces interface-name]  
encapsulation extended-vlan-tcc;
```

For VLAN TCC encapsulation, all VLAN IDs from 1 through 1024 are valid. VLAN ID 0 is reserved for tagging the priority of frames.

Extended VLAN TCC is not supported on 4-port Gigabit Ethernet PICs.

Configuring Translation Cross-Connect Interface Switching

To configure a full-duplex Layer 2.5 translation cross-connect between two routers (A and C), you can configure a Juniper Networks router (Router B) as the TCC interface. Ethernet TCC encapsulation provides an Ethernet wide area circuit for interconnecting IP traffic. Consider the topology in [Figure 103 on page 1300](#) where the Router A-to-Router B circuit is PPP, and the Router B-to-Router C circuit accepts packets carrying standard TPID values.

Figure 103: Sample Topology of Layer 2.5 Translational Cross-Connect



If traffic flows from Router A to Router C, the Junos OS strips all PPP encapsulation data from incoming packets and adds Ethernet encapsulation data before forwarding the packets. If traffic flows from Router C to Router A, the Junos OS strips all Ethernet encapsulation data from incoming packets and adds PPP encapsulation data before forwarding the packets.

To configure the router as the translational cross-connect interface:

1. In the configuration mode, at the **[edit]** hierarchy level, first configure the interface that is connected to Router A.

```
[edit]  
user@host# edit interfaces interface-name
```

2. (Optional) Specify the description of the interface. For example, you could specify the interface name on Router A that is connected to this interface.

```
[edit interfaces interface-name]
user@host# set description description
```

3. Specify the encapsulation. If the Router A to Router B circuit is PPP, then specify **ppp-tcc** as the encapsulation. If the Router A to Router B circuit is frame relay, specify **frame-relay-tcc**.

```
[edit interfaces interface-name]
user@host# set encapsulation encapsulation-type
```

4. In the configuration mode, at the **[edit]** hierarchy level, first configure the interface that is connected to Router C.

```
[edit]
user@host# edit interfaces interface-name
```

5. (Optional) Specify the description of this interface. For example, you could specify the interface name on Router C that is connected to this interface.

```
[edit interfaces interface-name]
user@host# set description description
```

6. Specify the encapsulation. If the Router B to Router C circuit is Ethernet, then specify **ethernet-tcc** as the encapsulation. If the Router B to Router C circuit is ATM, specify **atm-tcc-vc-mux**.

```
[edit interfaces interface-name]
user@host# set encapsulation encapsulation-type
```

7. Specify the IP address or MAC address of the remote router to provide address resolution protocol (ARP) for the TCC router's Ethernet-based neighbor using the **remote** statement. You must specify the statement at the **[edit interfaces interface-name unit unit-number family tcc]** hierarchy level. You can also specify the MAC address of the remote router instead of the IP address. The MAC address is the physical Layer 2 address of the Ethernet neighbor.

```
[edit interfaces interface-name]
user@host# set unit 0 family family remote inet-address ip-address
```

8. Specify the IP address of the non-Ethernet TCC neighbor for which the TCC router is acting as a proxy using the **proxy** statement. You must specify the statement at the **[edit interfaces interface-name unit unit-number family tcc]** hierarchy level.

```
[edit interfaces interface-name]
user@host# set unit 0 family family proxy inet-address ip-address
```

To verify the TCC connection, use the **show connections** command on TCC router.

CCC Overview

Circuit cross-connect (CCC) allows you to configure transparent connections between two circuits, where a circuit can be a Frame Relay data-link connection identifier (DLCI), an Asynchronous Transfer Mode (ATM) virtual circuit (VC), a Point-to-Point Protocol (PPP) interface, a Cisco High-Level Data Link Control (HDLC) interface, or an MPLS label-switched path (LSP). Using CCC, packets from the source circuit are delivered to the destination circuit with, at most, the Layer 2 address being changed. No other processing—such as header checksums, time-to-live (TTL) decrementing, or protocol processing—is done.

NOTE: The QFX10000 Series switches do not support ATM virtual circuits.

CCC circuits fall into two categories: logical interfaces, which include DLCIs, VCs, virtual local area network (VLAN) IDs, PPP and Cisco HDLC interfaces, and LSPs. The two circuit categories provide three types of cross-connect:

- Layer 2 switching—Cross-connects between logical interfaces provide what is essentially Layer 2 switching. The interfaces that you connect must be of the same type.
- MPLS tunneling—Cross-connects between interfaces and LSPs allow you to connect two distant interface circuits of the same type by creating MPLS tunnels that use LSPs as the conduit.
- LSP stitching—Cross-connects between LSPs provide a way to “stitch” together two label-switched paths, including paths that fall in two different traffic engineering database areas.

For Layer 2 switching and MPLS tunneling, the cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first. For LSP stitching, the cross-connect is unidirectional.

Understanding Carrier-of-Carriers VPNs

IN THIS SECTION


- [Internet Service Provider as the Customer | 1305](#)
- [VPN Service Provider as the Customer | 1305](#)

The customer of a VPN service provider might be a service provider for the end customer. The following are the two main types of carrier-of-carriers VPNs (as described in RFC 4364):

- [“Internet Service Provider as the Customer” on page 1305](#)—The VPN customer is an ISP that uses the VPN service provider’s network to connect its geographically disparate regional networks. The customer does not have to configure MPLS within its regional networks.
- [“VPN Service Provider as the Customer” on page 1305](#)—The VPN customer is itself a VPN service provider offering VPN service to its customers. The carrier-of-carriers VPN service customer relies on the backbone VPN service provider for inter-site connectivity. The customer VPN service provider is required to run MPLS within its regional networks.

[Figure 104 on page 1304](#) illustrates the network architecture used for a carrier-of-carriers VPN service.

Figure 104: Carrier-of-Carriers VPN Architecture

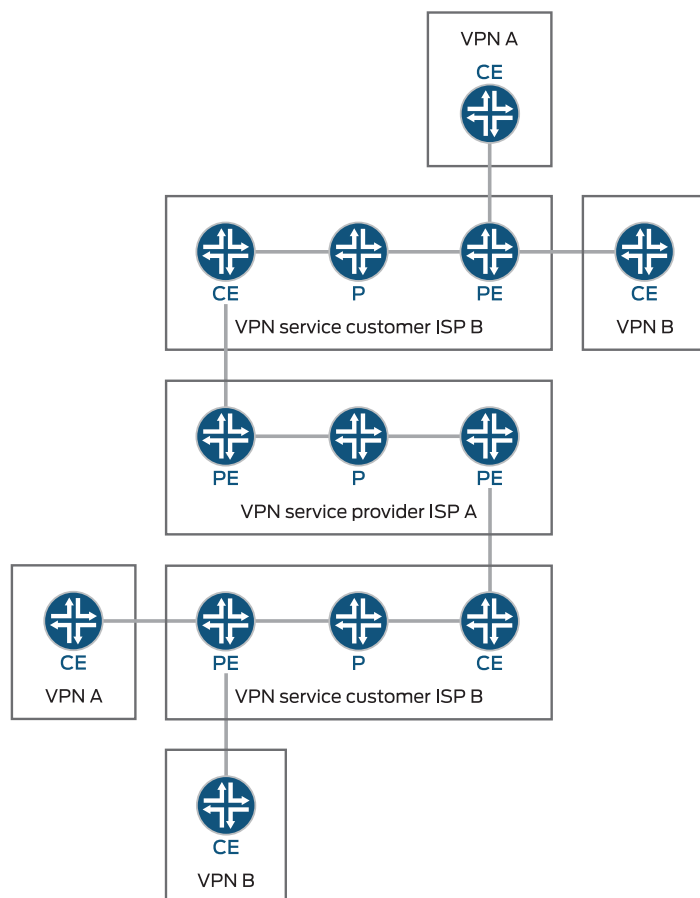

8017197

This topic covers the following:

Internet Service Provider as the Customer

In this type of carrier-of-carriers VPN configuration, ISP A configures its network to provide Internet service to ISP B. ISP B provides the connection to the customer wanting Internet service, but the actual Internet service is provided by ISP A.

This type of carrier-of-carriers VPN configuration has the following characteristics:

- The carrier-of-carriers VPN service customer (ISP B) does not need to configure MPLS on its network.
- The carrier-of-carriers VPN service provider (ISP A) must configure MPLS on its network.
- MPLS must also be configured on the CE routers and PE routers connected together in the carrier-of-carriers VPN service customer's and carrier-of-carriers VPN service provider's networks.

VPN Service Provider as the Customer

A VPN service provider can have customers that are themselves VPN service providers. In this type of configuration, also called a hierarchical or recursive VPN, the customer VPN service provider's VPN-IPv4 routes are considered external routes, and the backbone VPN service provider does not import them into its VRF table. The backbone VPN service provider imports only the customer VPN service provider's internal routes into its VRF table.

The similarities and differences between interprovider and carrier-of-carriers VPNs are shown in [Table 31 on page 1305](#).

Table 31: Comparison of Interprovider and Carrier-of-Carriers VPNs

Feature	ISP Customer	VPN Service Provider Customer
Customer edge device	AS border router	PE router
IBGP sessions	Carry IPv4 routes	Carry external VPN-IPv4 routes with associated labels
Forwarding within the customer network	MPLS is optional	MPLS is required

Support for VPN service as the customer is supported on QFX10000 switches starting with Junos OS Release 17.1R1.

Understanding Interprovider and Carrier-of-Carriers VPNs

All interprovider and carrier-of-carriers VPNs share the following characteristics:

- Each interprovider or carrier-of-carriers VPN customer must distinguish between internal and external customer routes.

- Internal customer routes must be maintained by the VPN service provider in its PE routers.
- External customer routes are carried only by the customer's routing platforms, not by the VPN service provider's routing platforms.

The key difference between interprovider and carrier-of-carriers VPNs is whether the customer sites belong to the same AS or to separate ASs:

- *Interprovider VPNs*—The customer sites belong to different ASs. You need to configure EBGp to exchange the customer's external routes.
- [“Understanding Carrier-of-Carriers VPNs” on page 1303](#)—The customer sites belong to the same AS. You need to configure IBGP to exchange the customer's external routes.

In general, each service provider in a VPN hierarchy is required to maintain its own internal routes in its P routers, and the internal routes of its customers in its PE routers. By recursively applying this rule, it is possible to create a hierarchy of VPNs.

The following are definitions of the types of PE routers specific to interprovider and carrier-of-carriers VPNs:

- The AS border router is located at the AS border and handles traffic leaving and entering the AS.
- The end PE router is the PE router in the customer VPN; it is connected to the CE router at the end customer's site.

Configuring an MPLS-Based VLAN CCC Using a Layer 2 Circuit

You can configure an 802.1Q VLAN as an MPLS-based Layer 2 circuit on the switch to interconnect multiple customer sites with Layer 2 technology.

This topic describes configuring provider edge (PE) switches in an MPLS network using a circuit cross-connect (CCC) on a tagged VLAN interface (802.1Q VLAN) rather than a simple interface.

NOTE: You do not need to make any changes to existing provider switches in your MPLS network to support this type of configuration. For information on configuring provider switches, see [“Configuring MPLS on Provider Switches” on page 62](#).

NOTE: You can send any kind of traffic over a CCC, including nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment.

NOTE: If you configure a physical interface as VLAN-tagged and with the vlan-ccc encapsulation, you cannot configure the associated logical interfaces with the inet family. Doing so could cause the logical interfaces to drop packets.

To configure a PE switch with a VLAN CCC and an MPLS-based Layer 2 circuit:

1. Configure OSPF (or IS-IS) on the loopback (or switch address) and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
```

2. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit logical-unit-number family inet address address
```

```

user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address

```

4. Enable the MPLS protocol with CSPF disabled:

NOTE: CSPF is a shortest-path-first algorithm that has been modified to take into account specific restrictions when the shortest path across the network is calculated. You need to disable CSPF for link protection to function properly on interarea paths.

```

[edit protocols]
user@switch# set mpls no-cspf

```

5. Configure the customer edge interface as a Layer 2 circuit from the local PE switch to the other PE switch:

```

[edit protocols]
user@switch# set l2circuit neighbor address interface interface-name virtual-circuit-id identifier

```

TIP: Use the switch address of the other switch as the neighbor address.

6. Configure MPLS on the core interfaces:

```

[edit protocols]
user@switch# set mpls interface interface-name
user@switch# set mpls interface interface-name
user@switch# set mpls interface interface-name

```

7. Configure LDP on the loopback interface and the core interfaces:

```

[edit protocols]
user@switch# set ldp interface lo0.0
user@switch# set ldp interface interface-name
user@switch# set ldp interface interface-name
user@switch# set ldp interface interface-name

```

8. Configure **family mpls** on the logical units of the core interfaces:

```

[edit]

```

```

user@switch# set interfaces interface-name unit logical-unit-number family mpls
user@switch# set interfaces interface-name unit logical-unit-number family mpls
user@switch# set interfaces interface-name unit logical-unit-number family mpls

```

NOTE: You can enable **family mpls** on either individual interfaces or aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

9. Enable VLAN tagging on the customer edge interface of the local PE switch:

```

[edit]
user@switch# set interfaces interface-name vlan-tagging

```

10. Configure the customer edge interface to use VLAN CCC encapsulation:

```

[edit]
user@switch# set interfaces interface-name encapsulation vlan-ccc

```

11. Configure the logical unit of the customer edge interface with a VLAN ID:

NOTE: The VLAN ID cannot be configured on logical interface unit 0. The logical unit number must be 1 or higher.

The same VLAN ID must be used when configuring the customer edge interface on the other PE switch.

```

[edit ]
user@switch# set interfaces interface-name logical-unit-number vlan-id vlan-id

```

When you have completed configuring one PE switch, follow the same procedures to configure the other PE switch.

NOTE: For EX Series switches, you must use the same type of switch for the other PE switch.

VLAN CCC Encapsulation on Transport Side of Pseudowire Client Logical Interfaces Overview

Currently, Junos OS does not allow the same VLAN ID to be configured on more than one logical interface under the same pseudowire client physical interface. To support **vlan-ccc** encapsulation on transport pseudowire service (PS) interface on the provider edge (PE) device, this restriction is removed and you can configure the same VLAN ID on more than one logical interface.

The primary reason to configure **vlan-ccc** on the transport PS interface is interoperability with the existing access and aggregate devices in the network. Currently, Junos OS supports **ethernet-ccc** encapsulation on the transport PS interface. Typically, while establishing a pseudowire connection, the access device initiates a VLAN-based pseudowire (also known as VLAN-tagged mode), and a PE router signals the Ethernet mode VLAN back to the access device. For this type of pseudowire connection to be established, you can use the **ignore-encapsulation-mismatch** statement. However, the Junos OS device (access device) might not support the **ignore-encapsulation-mismatch** statement and, as a result, the pseudowire connection is not formed. When the **ignore-encapsulation-mismatch** statement is not supported on the access device, you can configure **vlan-ccc** between the nodes to form a pseudowire connection.

The forwarding data path is not changed with the new **vlan-ccc** encapsulation on the transport PS interface and the behavior similar to that when the **ethernet-ccc** encapsulation is configured on the transport PS interface. The transport PS interface either encapsulates or de-encapsulate the outer Layer 2 header and MPLS headers on the transmitted or received packets on the WAN port. Inner Ethernet or VLAN headers of the packet are handled on pseudowire client service logical interfaces. You must configure pseudowire client service logical interfaces with appropriate VLAN IDs or VLAN tags.


The following sections provides details, along with a sample configuration, about pseudowire configuration from both access and aggregation nodes.

Pseudowire Configuration from Access Node

These pseudowires are set up using VLANs from the access node for customer devices attached to the Layer 2 circuit configured on access and PE routers with customer VLANs (C-VLANs). The ingress traffic (from the access node side) on the PE router is single VLAN tagged (inner Ethernet header), and thus the service logical interfaces must be configured with the same VLAN IDs corresponding to the C-VLAN IDs attached to the access node.

[Figure 105 on page 1311](#) provides the details of a transport PS interface from an access node (access node).

Figure 105: Pseudowire Client Transport Logical Interface from Access Node

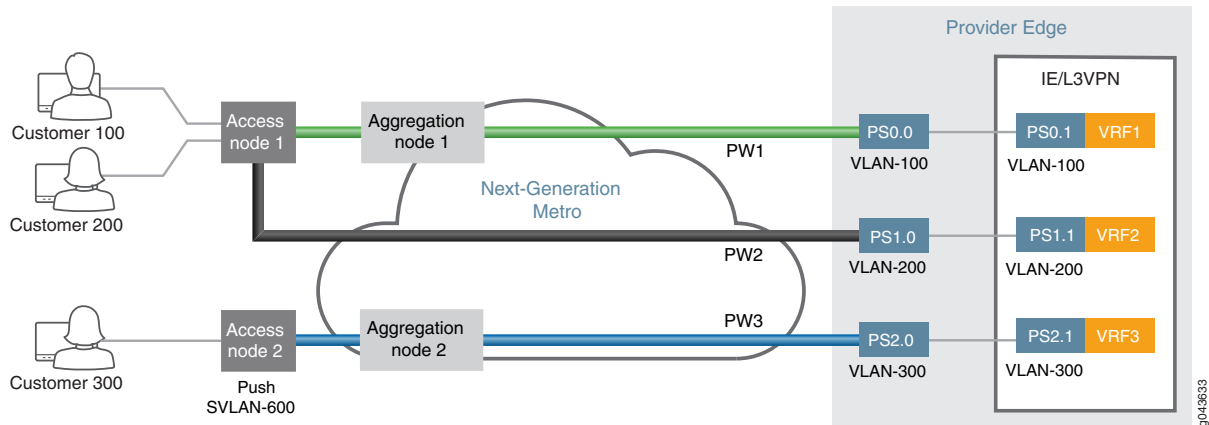

The following example shows the configuration of a pseudowire client logical interface configuration on a PE router from an access node:

```

interfaces {
  ps0 {
    anchor-point lt-3;
    unit 0 {
      encapsulation VLAN-ccc;
      VLAN ID 100;
    }
    unit 1 {
      VLAN ID 100;
      family inet;
    }
  }
}


```

Pseudowire Configuration from Aggregation Node

In this case, the aggregation node processes a stacked VLAN (also known as Q-in-Q). The pseudowire originates from aggregation node and terminates on a PE router. The aggregation node pushes the service VLAN (S-VLAN) tag, and the PE router is expected to operate on two VLAN tags—the outer VLAN tag corresponds to an S-VLAN and the inner VLAN tag corresponds to a C-VLAN. The VLAN ID configured on the transport PS interface at the PE router must match the VLAN tag of the S-VLAN. On the pseudowire client service logical interface, the outer VLAN tag must be configured to match the S-VLAN and the inner VLAN tag must be configured to match the C-VLAN.

[Figure 106 on page 1312](#) provides the details of a transport PS interface from an aggregation node.

Figure 106: Pseudowire Client Transport Logical Interface from Aggregation Node

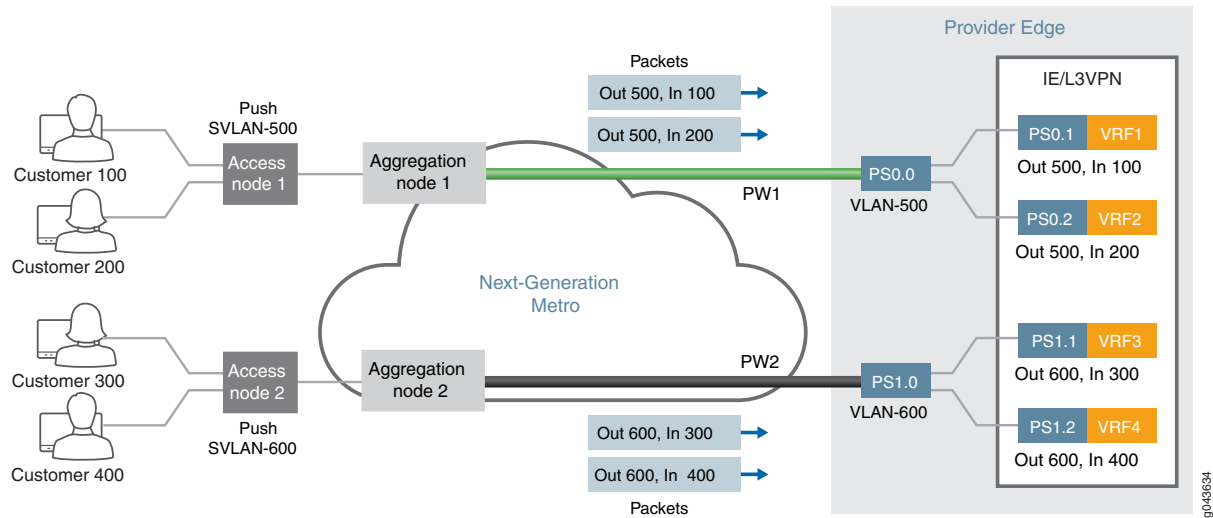

The following example shows the configuration of a pseudowire client logical interface configuration on a PE router from an aggregation node:

```

interfaces {
  ps0 {
    anchor-point lt-3;
    unit 0 {
      encapsulation VLAN-ccc;
      VLAN ID 500;
    }
    unit 1 {
      VLAN tags {
        outer 500;
        inner 100;
      }
    }
    unit 2 {
      VLAN tags {
        outer 500;
        inner 200;
      }
    }
  }
}

```


Transmitting Nonstandard BPDUs

CCC protocol (and Layer 2 Circuit and Layer 2 VPN) configurations can transmit nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment. This is the default behavior on all supported PICs and requires no additional configuration.


The following PICs are supported on M320 and T Series routers:

- 1-port Gigabit Ethernet PIC
- 2-port Gigabit Ethernet PIC
- 4-port Gigabit Ethernet PIC
- 10-port Gigabit Ethernet PIC

TCC Overview

Translational cross-connect (TCC) is a switching concept that enables you to establish interconnections between a variety of Layer 2 protocols or circuits. It is similar to CCC. However, whereas CCC requires the same Layer 2 encapsulations on each side of a Juniper Networks router (such as PPP-to-PPP or Frame Relay-to-Frame Relay), TCC enables you to connect different types of Layer 2 protocols interchangeably. When you use TCC, combinations such as PPP-to-ATM (see [Figure 107 on page 1313](#)) and Ethernet-to-Frame Relay connections are possible.

Figure 107: TCC Example

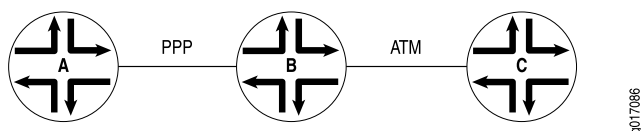

The Layer 2 circuits and encapsulation types that can be interconnected by TCC are:

- Ethernet
- Extended VLANs
- PPP
- HDLC
- ATM
- Frame Relay

TCC works by removing the Layer 2 header when frames enter the router and adding a different Layer 2 header on the frames before they leave the router. In [Figure 107 on page 1313](#), the PPP encapsulation is stripped from the frames arriving at Router B, and the ATM encapsulation is added before the frames are sent to Router C.

Note that all control traffic is terminated at the interconnecting router (Router B). Examples of traffic controllers include the Link Control Protocol (LCP) and the Network Control Protocol (NCP) for PPP, keepalives for HDLC, and Local Management Interface (LMI) for Frame Relay.

TCC functionality is different from standard Layer 2 switching. TCC only swaps Layer 2 headers. No other processing, such as header checksums, TTL decrementing, or protocol handling is performed. TCC is supported for IPv4 only.

Address Resolution Protocol (APR) packet policing on TCC Ethernet interfaces is effective for releases 10.4 and onwards.

You can configure TCC for interface switching and for Layer 2 VPNs. For more information about using TCC for virtual private networks (VPNs), see the *Junos OS VPNs Library for Routing Devices*.

Configuring Layer 2 Switching Cross-Connects Using CCC

IN THIS SECTION


- [Configuring the CCC Encapsulation for Layer 2 Switching Cross-Connects | 1315](#)
- [Configuring the CCC Connection for Layer 2 Switching Cross-Connects | 1320](#)
- [Configuring MPLS for Layer 2 Switching Cross-Connects | 1320](#)
- [Example: Configuring a Layer 2 Switching Cross-Connect | 1321](#)
- [Configuring Layer 2 Switching Cross-Connect on ACX5440 | 1323](#)

Layer 2 switching cross-connects join logical interfaces to form what is essentially Layer 2 switching. The interfaces that you connect must be of the same type.

[Figure 108 on page 1315](#) illustrates a Layer 2 switching cross-connect. In this topology, Router A and Router C have Frame Relay connections to Router B, which is a Juniper Networks router. Circuit cross-connect (CCC) allows you to configure Router B to act as a Frame Relay (Layer 2) switch.

To configure Router B to act as a Frame Relay switch, you configure a circuit from Router A to Router C that passes through Router B, effectively configuring Router B as a Frame Relay switch with respect to these routers. This configuration allows Router B to transparently switch packets (frames) between Router A and Router C without regard to the packets' contents or the Layer 3 protocols. The only processing that Router B performs is to translate DLCI 600 to 750.

Figure 108: Layer 2 Switching Cross-Connect

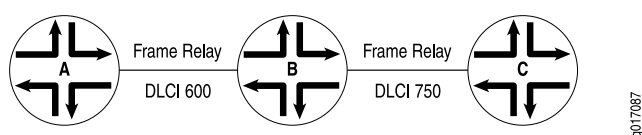

If the Router A-to-Router B and Router B-to-Router C circuits were PPP, for example, the Link Control Protocol and Network Control Protocol exchanges occur between Router A and Router C. These messages are handled transparently by Router B, allowing Router A and Router C to use various PPP options (such as header or address compression and authentication) that Router B might not support. Similarly, Router A and Router C exchange keepalives, providing circuit-to-circuit connectivity status.

You can configure Layer 2 switching cross-connects on PPP, Cisco HDLC, Frame Relay, Ethernet, and ATM circuits. In a single cross-connect, only like interfaces can be connected.

To configure Layer 2 switching cross-connects, you must configure the following on the router that is acting as the switch (Router B in [Figure 108 on page 1315](#)):

Configuring the CCC Encapsulation for Layer 2 Switching Cross-Connects

IN THIS SECTION

- [Configuring ATM Encapsulation for Layer 2 Switching Cross-Connects | 1316](#)
- [Configuring Ethernet Encapsulation for Layer 2 Switching Cross-Connects | 1316](#)
- [Configuring Ethernet VLAN Encapsulation for Layer 2 Switching Cross-Connects | 1317](#)
- [Configuring Aggregated Ethernet Encapsulation for Layer 2 Switching Cross-Connects | 1318](#)
- [Configuring Frame Relay Encapsulation for Layer 2 Switching Cross-Connects | 1319](#)
- [Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching Cross-Connects | 1319](#)

To configure Layer 2 switching cross-connects, configure the CCC encapsulation on the router that is acting as the switch (Router B in [Figure 108 on page 1315](#)).

NOTE: You cannot configure families on CCC interfaces; that is, you cannot include the **family** statement at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level.

For instructions for configuring the encapsulation for Layer 2 switching cross-connects, see the following sections:

Configuring ATM Encapsulation for Layer 2 Switching Cross-Connects

For ATM circuits, specify the encapsulation when configuring the virtual circuit (VC). Configure each VC as a circuit or a regular logical interface by including the following statements:

```
at-fpc/pic/port {
  atm-options {
    vpi vpi-identifier maximum-vcs maximum-vcs;
  }
  unit logical-unit-number {
    encapsulation encapsulation-type;
    point-to-point; # Default interface type
    vci vpi-identifier.vci-identifier;
  }
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces]
- [edit logical-systems *logical-system-name* interfaces]

Configuring Ethernet Encapsulation for Layer 2 Switching Cross-Connects

For Ethernet circuits, specify **ethernet-ccc** in the **encapsulation** statement. This statement configures the entire physical device. For these circuits to work, you must also configure a logical interface (unit 0).

Ethernet interfaces with standard Tag Protocol Identifier (TPID) tagging can use Ethernet CCC encapsulation. On M Series Multiservice Edge Routers, except the M320, one-port Gigabit Ethernet, two-port Gigabit Ethernet, four-port Gigabit Ethernet, and four-port Fast Ethernet PICs can use Ethernet CCC encapsulation. On T Series Core Routers and M320 routers, one-port Gigabit Ethernet and two-port Gigabit Ethernet PICs installed in FPC2 can use Ethernet CCC encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.

```
fe-fpc/pic/port {
  encapsulation ethernet-ccc;
  unit 0;
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces]
- [edit logical-systems *logical-system-name* interfaces]

Configuring Ethernet VLAN Encapsulation for Layer 2 Switching Cross-Connects

An Ethernet virtual LAN (VLAN) circuit can be configured using either the **vlan-ccc** or **extended-vlan-ccc** encapsulation. If you configure the **extended-vlan-ccc** encapsulation on the physical interface, you cannot configure the **inet** family on the logical interfaces. Only the **ccc** family is allowed. If you configure the **vlan-ccc** encapsulation on the physical interface, both the **inet** and **ccc** families are supported on the logical interfaces. Ethernet interfaces in VLAN mode can have multiple logical interfaces.

For encapsulation type **vlan-ccc**, VLAN IDs from 512 through 4094 are reserved for CCC VLANs. For the **extended-vlan-ccc** encapsulation type, all VLAN IDs 1 and higher are valid. VLAN ID 0 is reserved for tagging the priority of frames.

NOTE: Some vendors use the proprietary TPIDs 0x9100 and 0x9901 to encapsulate a VLAN-tagged packet into a VLAN-CCC tunnel to interconnect a geographically separated metro Ethernet network. By configuring the **extended-vlan-ccc** encapsulation type, a Juniper Networks router can accept all three TPIDs (0x8100, 0x9100, and 0x9901).

Configure an Ethernet VLAN circuit with the **vlan-ccc** encapsulation as follows:

```
interfaces {
  type-fpc/pic/port {
    vlan-tagging;
    encapsulation vlan-ccc;
    unit logical-unit-number {
      encapsulation vlan-ccc;
      vlan-id vlan-id;
    }
  }
}
```

You can configure these statements at the following hierarchy levels:

- **[edit interfaces]**
- **[edit logical-systems logical-system-name interfaces]**

Configure an Ethernet VLAN circuit with the **extended-vlan-ccc** encapsulation statement as follows:

```
interfaces {
  type-fpc/pic/port {
    vlan-tagging;
    encapsulation extended-vlan-ccc;
    unit logical-unit-number {
      vlan-id vlan-id;
    }
  }
}
```

```

        family ccc;
    }
}

```

You can configure these statements at the following hierarchy levels:

- **[edit interfaces]**
- **[edit logical-systems *logical-system-name* interfaces]**

Whether you configure the encapsulation as **vlan-ccc** or **extended-vlan-ccc**, you must enable VLAN tagging by including the **vlan-tagging** statement.

Configuring Aggregated Ethernet Encapsulation for Layer 2 Switching Cross-Connects

You can configure aggregated Ethernet interfaces for CCC connections and for Layer 2 virtual private networks (VPNs).

Aggregated Ethernet interfaces configured with VLAN tagging can be configured with multiple logical interfaces. The only encapsulation available for aggregated Ethernet logical interfaces is **vlan-ccc**. When you configure the **vlan-id** statement, you are limited to VLAN IDs 512 through 4094.

Aggregated Ethernet interfaces configured without VLAN tagging can be configured only with the **ethernet-ccc** encapsulation. All untagged Ethernet packets received are forwarded based on the CCC parameters.

To configure aggregated Ethernet interfaces for CCC connections, include the **ae0** statement at the **[edit interfaces]** hierarchy level:

```

[edit interfaces]
ae0 {
    encapsulation (ethernet-ccc | extended-vlan-ccc | vlan-ccc);
    vlan-tagging;
    aggregated-ether-options {
        minimum-links links;
        link-speed speed;
    }
    unit logical-unit-number {
        encapsulation vlan-ccc;
        vlan-id identifier;
        family ccc;
    }
}

```

Be aware of the following limitations when configuring CCC connections over aggregated Ethernet interfaces:

- If you configured load balancing between child links, be aware that a different hash key is used to distribute packets among the child links. Standard aggregated interfaces have family inet configured. An IP version 4 (IPv4) hash key (based on the Layer 3 information) is used to distribute packets among the child links. A CCC connection over an aggregated Ethernet interface has family ccc configured instead. Instead of an IPv4 hash key, an MPLS hash key (based on the destination media access control [MAC] address) is used to distributed packets among the child links.
- The extended-vlan-ccc encapsulation is not supported on the 12-port Fast Ethernet PIC and the 48-port Fast Ethernet PIC.
- The Junos OS does not support the Link Aggregation Control Protocol (LACP) when an aggregated interface is configured as a VLAN (with vlan-ccc encapsulation). LACP can be configured only when the aggregated interface is configured with the ethernet-ccc encapsulation.

For more information about how to configure aggregated Ethernet interfaces, see the *Junos OS Network Interfaces Library for Routing Devices*.

Configuring Frame Relay Encapsulation for Layer 2 Switching Cross-Connects

For Frame Relay circuits, specify the encapsulation when configuring the DLCI. Configure each DLCI as a circuit or a regular logical interface. The DLCI for regular interfaces must be from 1 through 511. For CCC interfaces, it must be from 512 through 4094.

```

interfaces {
  type-fpc/pic/port {
    unit logical-unit-number {
      dlci dlci-identifier;
      encapsulation encapsulation-type;
      point-to-point; # Default interface type
    }
  }
}

```

You can configure these statements at the following hierarchy levels:

- **[edit interfaces]**
- **[edit logical-systems *logical-system-name* interfaces]**

Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching Cross-Connects

For PPP and Cisco HDLC circuits, specify the encapsulation in the **encapsulation** statement. This statement configures the entire physical device. For these circuits to work, you must configure a logical interface (unit 0).

```

interfaces type-fpc/pic/port {
  encapsulation encapsulation-type;
}

```

```

    unit 0;
}

```

You can configure these statements at the following hierarchy levels:

- [edit interfaces *type-fpc/pic/port*]
- [edit logical-systems *logical-system-name* interfaces *type-fpc/pic/port*]

Configuring the CCC Connection for Layer 2 Switching Cross-Connects

To configure Layer 2 switching cross-connects, define the connection between the two circuits by including the **interface-switch** statement. You configure this connection on the router that is acting as the switch (Router B in [Figure 108 on page 1315](#)). The connection joins the interface that comes from the circuit's source to the interface that leads to the circuit's destination. When you specify the interface names, include the logical portion of the name, which corresponds to the logical unit number. The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first.

```

interface-switch connection-name {
    interface interface-name.unit-number;
    interface interface-name.unit-number;
}

```

You can include this statement at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

Configuring MPLS for Layer 2 Switching Cross-Connects

For Layer 2 switching cross-connects to work, you must enable MPLS on the router by including at least the following statements. This minimum configuration enables MPLS on a logical interface for the switching cross-connect.

Include the **family mpls** statement:

```

family mpls;

```

You can configure this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

You can then specify this logical interface in the MPLS protocol configuration:


```

mpls {
  interface interface-name; # Required to enable MPLS on the interface
}

```


You can configure these statements at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

Example: Configuring a Layer 2 Switching Cross-Connect

Configure a full-duplex Layer 2 switching cross-connect between Router A and Router C, using a Juniper Networks router, Router B, as the virtual switch. See the topology in [Figure 109 on page 1321](#) and [Figure 110 on page 1322](#).

Figure 109: Topology of a Frame Relay Layer 2 Switching Cross-Connect

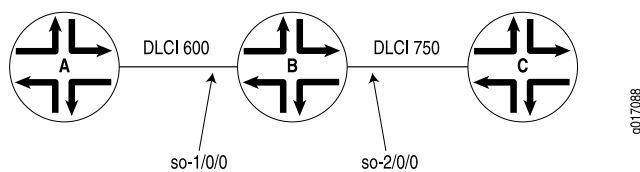

```

[edit]
interfaces {
  so-1/0/0 {
    encapsulation frame-relay-ccc;
    unit 1 {
      point-to-point;
      encapsulation frame-relay-ccc;
      dlci 600;
    }
  }
  so-2/0/0 {
    encapsulation frame-relay-ccc;
    unit 2 {
      point-to-point;
      encapsulation frame-relay-ccc;
      dlci 750;
    }
  }
}
protocols {
  connections {
    interface-switch router-a-to-router-c {


```

```

        interface so-1/0/0.1;
        interface so-2/0/0.2;
    }
}
mpls {
    interface all;
}
}

```

Figure 110: Sample Topology of a VLAN Layer 2 Switching Cross-Connect

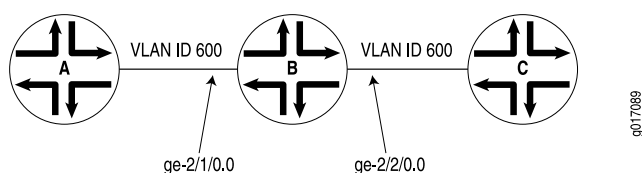

```

[edit]
interfaces {
    ge-2/1/0 {
        vlan-tagging;
        encapsulation vlan-ccc;
        unit 0 {
            encapsulation vlan-ccc;
            vlan-id 600;
        }
    }
    ge-2/2/0 {
        vlan-tagging;
        encapsulation vlan-ccc;
        unit 0 {
            encapsulation vlan-ccc;
            vlan-id 600;
        }
        unit 1 {
            family inet {
                vlan-id 1;
                address 10.9.200.1/24;
            }
        }
    }
}
protocols {
    mpls {

```

```

interface all;
}
connections {
  interface-switch layer2-sw {
    interface ge-2/1/0.0;
    interface ge-2/2/0.0;
  }
}
}

```

Configuring Layer 2 Switching Cross-Connect on ACX5440

Starting in Junos OS Release 19.3R1, you can leverage the hardware support available for cross-connects on the ACX5448 device with the Layer 2 local switching functionality using certain models. With this support, you can provide the EVP and Ethernet Virtual Private Line (EVPL) services..

Local-switching with the following forwarding models are supported:

- VLAN-CCC (logical interface-level local-switching) without any map.
- VLAN-CCC (logical interface-level local-switching) with the following vlan-maps:
 - Push 0x8100.pushVLAN (QinQ type)
 - Swap 0x8100.swapVLAN
- Aggregated Ethernet (AE) static interfaces.
- AE interfaces with LACP, load-balance all active mode.
- Local-switching end-interface support for AE or LAG interface (one non-AE interface and other AE interface).
- Local-switching both interface as AE or LAG interfaces.

To enable Layer 2 local switching on the ACX5448 device, you can use the existing configuration statements for Layer 2 circuits. For example,

```

[edit protocols l2circuit]
local-switching {
  interface interface1 {
    end-interface interface3;
    ignore-encapsulation-mismatch;
    ignore-mtu-mismatch;
  }
}

```


Configuring MPLS LSP Tunnel Cross-Connects Using CCC

IN THIS SECTION

- [Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects | 1325](#)
- [Configuring the CCC Connection for LSP Tunnel Cross-Connects | 1327](#)
- [Example: Configuring an LSP Tunnel Cross-Connect | 1327](#)

MPLS tunnel cross-connects between interfaces and LSPs allow you to connect two distant interface circuits of the same type by creating MPLS tunnels that use LSPs as the conduit. The topology in [Figure 111 on page 1324](#) illustrates an MPLS LSP tunnel cross-connect. In this topology, two separate networks, in this case ATM access networks, are connected through an IP backbone. CCC allows you to establish an LSP tunnel between the two domains. With LSP tunneling, you tunnel the ATM traffic from one network across a SONET backbone to the second network by using an MPLS LSP.

Figure 111: MPLS Tunnel Cross-Connect

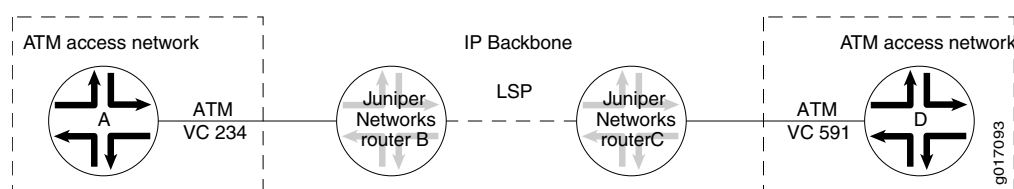

When traffic from Router A (VC 234) reaches Router B, it is encapsulated and placed into an LSP, which is sent through the backbone to Router C. At Router C, the label is removed, and the packets are placed onto the ATM permanent virtual circuit (PVC) (VC 591) and sent to Router D. Similarly, traffic from Router D (VC 591) is sent over an LSP to Router B, then placed on VC 234 to Router A.

You can configure LSP tunnel cross-connect on PPP, Cisco HDLC, Frame Relay, and ATM circuits. In a single cross-connect, only like interfaces can be connected.

When you use MPLS tunnel cross-connects to support IS-IS, you must ensure that the LSP's maximum transmission unit (MTU) can, at a minimum, accommodate a 1492-octet IS-IS protocol data unit (PDU) in addition to the link-level overhead associated with the technology being connected.

For the tunnel cross-connects to work, the IS-IS frame size on the edge routers (Routers A and D in [Figure 112 on page 1327](#)) must be smaller than the LSP's MTU.

NOTE: Frame size values do not include the frame check sequence (FCS) or delimiting flags.

To determine the LSP MTU required to support IS-IS, use the following calculation:

$$\text{IS-IS MTU (minimum 1492, default 1497) + frame overhead + 4 (MPLS shim header) = Minimum LSP MTU}$$

The framing overhead varies based on the encapsulation being used. The following lists the IS-IS encapsulation overhead values for various encapsulations:

- ATM
 - AAL5 multiplex—8 bytes (RFC 1483)
 - VC multiplex—0 bytes
- Frame Relay
 - Multiprotocol—2 bytes (RFCs 1490 and 2427)
 - VC multiplex—0 bytes
- HDLC—4 bytes
- PPP—4 bytes
- VLAN—21 bytes (802.3/LLC)

For IS-IS to work over VLAN-CCC, the LSP's MTU must be at least 1513 bytes (or 1518 for 1497-byte PDUs). If you increase the size of a Fast Ethernet MTU above the default of 1500 bytes, you might need to explicitly configure jumbo frames on intervening equipment.

To modify the MTU, include the **mtu** statement when configuring the logical interface family at the **[edit interfaces interface-name unit logical-unit-number encapsulation family]** hierarchy level. For more information about setting the MTU, see the *Junos OS Network Interfaces Library for Routing Devices*.

To configure an LSP tunnel cross-connect, you must configure the following on the interdomain router (Router B in [Figure 112 on page 1327](#)):

Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects

To configure LSP tunnel cross-connects, you must configure the CCC encapsulation on the ingress and egress routers (Router B and Router C, respectively, in [Figure 112 on page 1327](#)).

NOTE: You cannot configure families on CCC interfaces; that is, you cannot include the **family** statement at the **[edit interfaces interface-name unit logical-unit-number]** hierarchy level.

For PPP or Cisco HDLC circuits, include the **encapsulation** statement to configure the entire physical device. For these circuits to work, you must configure logical unit 0 on the interface.

```

type-fpc/pic/port {
  encapsulation (ppp-ccc | cisco-hdlc-ccc);
  unit 0;
}

```

You can include these statements at the following hierarchy levels:

- **[edit interfaces]**
- **[edit logical-systems *logical-system-name* interfaces]**

For ATM circuits, specify the encapsulation when configuring the VC by including the following statements. For each VC, you configure whether it is a circuit or a regular logical interface.

```

at-fpc/pic/port {
  atm-options {
    vpi vpi-identifier maximum-vcs maximum-vcs;
  }
  unit logical-unit-number {
    point-to-point; # Default interface type
    encapsulation atm-ccc-vc-mux;
    vci vpi-identifier.vci-identifier;
  }
}

```

You can include these statements at the following hierarchy levels:

- **[edit interfaces]**
- **[edit logical-systems *logical-system-name* interfaces]**

For Frame Relay circuits, include the following statements to specify the encapsulation when configuring the DLCI. For each DLCI, you configure whether it is a circuit or a regular logical interface. The DLCI for regular interfaces must be in the range 1 through 511. For CCC interfaces, it must be in the range 512 through 1022.

```

type-fpc/pic/port {
  encapsulation frame-relay-ccc;
  unit logical-unit-number {
    point-to-point; # default interface type
    encapsulation frame-relay-ccc;
    dlci dlci-identifier;
  }
}

```

You can include these statements at the following hierarchy levels:

- [edit interfaces]
- [edit logical-systems *logical-system-name* interfaces]

For more information about the **encapsulation** statement, see the *Junos OS Network Interfaces Library for Routing Devices*.

Configuring the CCC Connection for LSP Tunnel Cross-Connects

To configure LSP tunnel cross-connects, include the **remote-interface-switch** statement to define the connection between the two circuits on the ingress and egress routers (Router B and Router C, respectively, in [Figure 112 on page 1327](#)). The connection joins the interface or LSP that comes from the circuit's source to the interface or LSP that leads to the circuit's destination. When you specify the interface name, include the logical portion of the name, which corresponds to the logical unit number. For the cross-connect to be bidirectional, you must configure cross-connects on two routers.

```
remote-interface-switch connection-name {
    interface interface-name.unit-number;
    transmit-lsp label-switched-path;
    receive-lsp label-switched-path;
}
```


You can include these statements at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

Example: Configuring an LSP Tunnel Cross-Connect

Configure a full-duplex MPLS LSP tunnel cross-connect from Router A to Router D, passing through Router B and Router C. See the topology in [Figure 112 on page 1327](#).

Figure 112: Example Topology of MPLS LSP Tunnel Cross-Connect

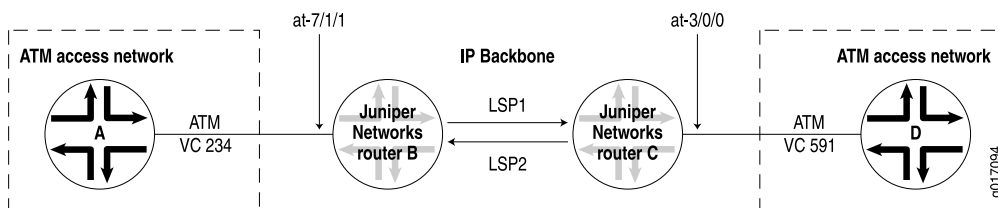

On Router B:

```
[edit]
interfaces {
    at-7/1/1 {
        atm-options {
```

```

        vpi 1 maximum-vcs 600;
    }
    unit 1 {
        point-to-point; # default interface type
        encapsulation atm-ccc-vc-mux;
        vci 1.234;
    }
}
protocols {
    connections {
        remote-interface-switch router-b-to-router-c {
            interface at-7/1/1.1;
            transmit-lsp lsp1;
            receive-lsp lsp2;
        }
    }
}

```

On Router C:

```

[edit]
interfaces {
    at-3/0/0 {
        atm-options {
            vpi 2 maximum-vcs 600;
        }
        unit 2 {
            point-to-point; # default interface type
            encapsulation atm-ccc-vc-mux;
            vci 2.591;
        }
    }
}
protocols {
    connections {
        remote-interface-switch router-b-to-router-c {
            interface at-3/0/0.2;
            transmit-lsp lsp2;
            receive-lsp lsp1;
        }
    }
}

```


Configuring TCC

IN THIS SECTION

- [Configuring the Encapsulation for Layer 2 Switching TCCs | 1329](#)
- [Configuring the Connection for Layer 2 Switching TCCs | 1333](#)
- [Configuring MPLS for Layer 2 Switching TCCs | 1334](#)

This section describes how to configure translational cross-connect (TCC).

To configure TCC, you must perform the following tasks on the router that is acting as the switch:

Configuring the Encapsulation for Layer 2 Switching TCCs

IN THIS SECTION

- [Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching TCCs | 1330](#)
- [Configuring ATM Encapsulation for Layer 2 Switching TCCs | 1330](#)
- [Configuring Frame Relay Encapsulation for Layer 2 Switching TCCs | 1330](#)
- [Configuring Ethernet Encapsulation for Layer 2 Switching TCCs | 1331](#)
- [Configuring Ethernet Extended VLAN Encapsulation for Layer 2 Switching TCCs | 1332](#)
- [Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations | 1333](#)

To configure a Layer 2 switching TCC, specify the TCC encapsulation on the desired interfaces of the router that is acting as the switch.

NOTE: You cannot configure standard protocol families on TCC or CCC interfaces. Only the CCC family is allowed on CCC interfaces, and only the TCC family is allowed on TCC interfaces.

For Ethernet circuits and Ethernet extended VLAN circuits, you must also configure the Address Resolution Protocol (ARP). See [“Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations” on page 1333](#).

Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching TCCs

For PPP and Cisco HDLC circuits, configure the encapsulation type for the entire physical device by specifying the appropriate value for the **encapsulation** statement. For these circuits to work, you must also configure the logical interface **unit 0**.

```
encapsulation (ppp-tcc | cisco-hdlc-tcc);
unit 0{...}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

Configuring ATM Encapsulation for Layer 2 Switching TCCs

For ATM circuits, configure the encapsulation type by specifying the appropriate value for the **encapsulation** statement in the virtual circuit (VC) configuration. Specify whether each VC is a circuit or a regular logical interface.

```
atm-options {
  vpi vpi-identifier maximum-vcs maximum-vcs;
}
unit logical-unit-number {
  encapsulation (atm-tcc-vc-mux | atm-tcc-snap);
  point-to-point;
  vci vpi-identifier.vci-identifier;
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *at-fpc/pic/port*]
- [edit logical-systems *logical-system-name* interfaces *at-fpc/pic/port*]

Configuring Frame Relay Encapsulation for Layer 2 Switching TCCs

For Frame Relay circuits, configure the encapsulation type by specifying the value **frame-relay-tcc** for the **encapsulation** statement when configuring the data-link connection identifier (DLCI). You configure each DLCI as a circuit or a regular logical interface. The DLCI for regular interfaces must be in the range from 1 through 511, but for TCC and CCC interfaces it must be in the range from 512 through 1022.

```
encapsulation frame-relay-tcc;
unit logical-unit-number {
  dlci dlci-identifier;
  encapsulation frame-relay-tcc;
```

```
point-to-point;
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

Configuring Ethernet Encapsulation for Layer 2 Switching TCCs

For Ethernet TCC circuits, configuring the encapsulation type for the entire physical device by specifying the value **ethernet-tcc** for the **encapsulation** statement.

You must also specify static values for a remote address and a proxy address at the [edit interfaces *interface-name* unit *unit-number* family *tcc*] or [edit logical-systems *logical-system-name* interfaces *interface-name* unit *unit-number* family *tcc*] hierarchy level.

The remote address is associated with the TCC switching router's Ethernet neighbor; in the **remote** statement you must specify both the IP address and the media access control (MAC) address of the Ethernet neighbor. The proxy address is associated with the TCC router's other neighbor connected by the unlike link; in the **proxy** statement you must specify the IP address of the non-Ethernet neighbor.

You can configure Ethernet TCC encapsulation for the interfaces on 1-port Gigabit Ethernet, 2-port Gigabit Ethernet, 4-port Fast Ethernet, and 4-port Gigabit Ethernet PICs.

```
encapsulation ethernet-tcc;
unit logical-unit-number {
  family tcc {
    proxy {
      inet-address ip-address;
    }
    remote {
      inet-address ip-address;
      mac-address mac-address;
    }
  }
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces (fe | ge)-*fpc/pic/port*]
- [edit logical-systems *logical-system-name* interfaces (fe | ge)-*fpc/pic/port*]

NOTE: For Ethernet circuits, you must also configure the Address Resolution Protocol (ARP). See [“Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations” on page 1333](#).

Configuring Ethernet Extended VLAN Encapsulation for Layer 2 Switching TCCs

For Ethernet extended VLAN circuits, configure the encapsulation type for the entire physical device by specifying the value **extended-vlan-tcc** for the **encapsulation** statement.

You must also enable VLAN tagging. Ethernet interfaces in VLAN mode can have multiple logical interfaces. With encapsulation type **extended-vlan-tcc**, all VLAN IDs from 0 through 4094 are valid, up to a maximum of 1024 VLANs. As with Ethernet circuits, you must also specify a proxy address and a remote address at the **[edit interfaces *interface-name* unit *logical-unit-number* family tcc]** or **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *unit-number* family tcc]** hierarchy level (see [“Configuring Ethernet Encapsulation for Layer 2 Switching TCCs” on page 1331](#)).

```
encapsulation extended-vlan-tcc;
vlan-tagging;
unit logical-unit-number {
    vlan-id identifier;
    family tcc;
    proxy {
        inet-address ip-address;
    }
    remote {
        inet-address ip-address;
        mac-address mac-address;
    }
}
```

You can configure these statements at the following hierarchy levels:

- **[edit interfaces *interface-name*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name*]**

NOTE: For Ethernet extended VLAN circuits, you must also configure the Address Resolution Protocol (ARP). See [“Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations” on page 1333](#).

Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations

For Ethernet and Ethernet extended VLAN circuits with TCC encapsulation, you must also configure ARP. Because TCC simply removes one Layer 2 header and adds another, the default form of dynamic ARP is not supported; you must configure static ARP.

Because remote and proxy addresses are specified on the router performing TCC switching, you must apply the static ARP statement to the Ethernet-type interfaces of the routers that connect to the TCC-switched router. The **arp** statement must specify the IP address and the MAC address of the remotely connected neighbor by use of the unlike Layer 2 protocol on the far side of the TCC switching router.

```
arp ip-address mac mac-address;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family inet address *ip-address*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family inet address *ip-address*]

Configuring the Connection for Layer 2 Switching TCCs

You must configure the connection between the two circuits of the Layer 2 switching TCC on the router acting as the switch. The connection joins the interface coming from the circuit's source to the interface leading to the circuit's destination. When you specify the interface names, include the logical portion of the name, which corresponds to the logical unit number. The cross-connect is bidirectional, so packets received on the first interface are transmitted from the second interface, and those received on the second interface are transmitted from the first.

To configure a connection for a local interface switch, include the following statements:

```
interface-switch connection-name {
    interface interface-name.unit-number;
}
lsp-switch connection-name {
    transmit-lsp lsp-number;
    receive-lsp lsp-number;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

To configure a connection for a remote interface switch, include the following statements:

```
remote-interface-switch connection-name {
    interface interface-name.unit-number;
    interface interface-name.unit-number;
    transmit-lsp lsp-number;
    receive-lsp lsp-number;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

Configuring MPLS for Layer 2 Switching TCCs

For a Layer 2 switching TCC to work, you must enable MPLS on the router by including at least the following statements. This minimum configuration enables MPLS on a logical interface for the switching cross-connect.

Include the **family mpls** statement:

```
family mpls;
```

You can configure this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

You can then specify this logical interface in the MPLS protocol configuration:

```
mpls {
    interface interface-name; # Required to enable MPLS on the interface
}
```

You can configure these statements at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

NOTE: MPLS LSP link protection does not support TCC.


CCC and TCC Graceful Restart

CCC and TCC graceful restart allows Layer 2 connections between customer edge (CE) routers to restart gracefully. These Layer 2 connections are configured with the **remote-interface-switch** or **lsp-switch** statements. Because these CCC and TCC connections have an implicit dependency on RSVP LSPs, graceful restart for CCC and TCC uses the RSVP graceful restart capabilities.

RSVP graceful restart must be enabled on the PE routers and P routers to enable graceful restart for CCC and TCC. Also, because RSVP is used as the signaling protocol for signaling label information, the neighboring router must use helper mode to assist with the RSVP restart procedures.

[Figure 113 on page 1335](#) illustrates how graceful restart might work on a CCC connection between two CE routers.

Figure 113: Remote Interface Switch Connecting Two CE Routers Using CCC

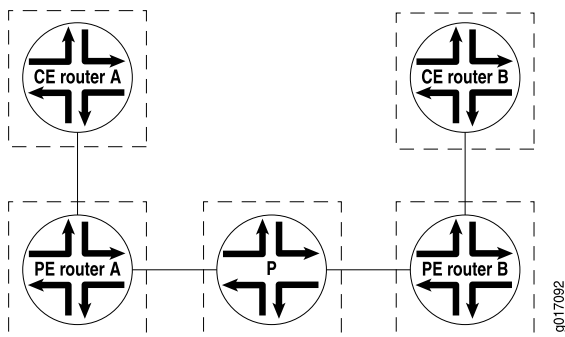

PE Router A is the ingress for the transmit LSP from PE Router A to PE Router B and the egress for the receive LSP from PE Router B to PE Router A. With RSVP graceful restart enabled on all the PE and P routers, the following occurs when PE router A restarts:

- PE Router A preserves the forwarding state associated with the CCC routes (those from CCC to MPLS and from MPLS to CCC).
- Traffic flows without disruption from CE router to CE router.
- After the restart, PE Router A preserves the label for the LSP for which PE Router A is the egress (the receive LSP, for example). The transmit LSP from PE Router A to PE Router B can derive new label mappings, but should not cause any traffic disruption.

Configuring CCC and TCC Graceful Restart

To enable CCC and TCC graceful restart, include the **graceful-restart** statement:

```
graceful-restart;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

Configuring an MPLS-Based VLAN CCC Using the Connection Method (CLI Procedure)

You can configure an 802.1Q VLAN as an MPLS-based connection using EX8200 and EX4500 switches to interconnect multiple customer sites with Layer 2 technology.

This topic describes configuring provider edge (PE) switches in an MPLS network using a circuit cross-connect (CCC) on a tagged VLAN interface (802.1Q VLAN) rather than a simple interface.

NOTE: You do not need to make any changes to existing provider switches in your MPLS network to support this type of configuration. For information on configuring provider switches, see [“Configuring MPLS on EX8200 and EX4500 Provider Switches” on page 77](#).

NOTE: You can send any kind of traffic over a CCC, including nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment.

NOTE: If you configure a physical interface as VLAN-tagged and with the vlan-ccc encapsulation, you cannot configure the associated logical interfaces with the inet family. Doing so could cause the logical interfaces to drop packets.

To configure a PE switch with a VLAN CCC and an MPLS-based connections:

1. Configure OSPF (or IS-IS) on the loopback (or switch address) and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
```

2. Enable traffic engineering for the routing protocol:

```
[edit protocols]
```



```
user@switch# set ospf traffic-engineering
```

3. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
```

4. Enable the MPLS protocol with **cspf** disabled:

NOTE: CSPF is a shortest-path-first algorithm that has been modified to take into account specific restrictions when the shortest path across the network is calculated. You need to disable CSPF for link protection to function properly on interarea paths.

```
[edit protocols]
user@switch# set mpls no-cspf
```

5. Enable VLAN tagging on the customer edge interface of the local PE switch:

```
[edit]
user@switch# set interfaces interface-name vlan-tagging
```

6. Configure the customer edge interface to use encapsulation **vlan-ccc**:

```
[edit]
user@switch# set interfaces interface-name encapsulation vlan-ccc
```

7. Configure the logical unit of the customer edge interface with a VLAN ID:

NOTE: The VLAN ID cannot be configured on logical interface unit 0.

The same VLAN ID must be used when configuring the customer edge interface on the other PE switch.

```
[edit ]
user@switch# set interfaces interface-name logical-unit-number bbrbhadran vlan-id
```

8. Define the label switched path (LSP):

```
[edit protocols]
user@switch# set mpls label-switched-path lsp-name from address
user@switch# set mpls label-switched-path lsp-name to address
```

TIP: You will need to use the specified LSP name again when configuring the CCC.

9. Configure the connection between the two circuits in the CCC connection

```
[edit protocols]
user@switch# set connections remote-interface-switch interface-switch interface local-interface
user@switch# set connections remote-interface-switch interface-switch transmit-lsp destination-lsp
user@switch# set connections remote-interface-switch interface-switch receive-lsp source-lsp
```

Configuring CCC Switching for Point-to-Multipoint LSPs

IN THIS SECTION

- [Configuring the Point-to-Multipoint LSP Switch on Ingress PE Routers | 1339](#)
- [Configuring Local Receivers on a Point-to-Multipoint CCC LSP Switch on Ingress PE Routers | 1339](#)
- [Configuring the Point-to-Multipoint LSP Switch on Egress PE Routers | 1339](#)

You can configure circuit cross-connect (CCC) between two circuits to switch traffic from interfaces to point-to-multipoint LSPs. This feature is useful for handling multicast or broadcast traffic (for example, a digital video stream).

To configure CCC switching for point-to-multipoint LSPs, you do the following:

- On the ingress provider edge (PE) router, you configure CCC to switch traffic from an incoming interface to a point-to-multipoint LSP.
- On the egress PE, you configure CCC to switch traffic from an incoming point-to-multipoint LSP to an outgoing interface.

The CCC connection for point-to-multipoint LSPs is unidirectional.

For more information about point-to-multipoint LSPs, see [“Point-to-Multipoint LSPs Overview” on page 656](#).

To configure a CCC connection for a point-to-multipoint LSP, complete the steps in the following sections:

Configuring the Point-to-Multipoint LSP Switch on Ingress PE Routers

To configure the ingress PE router with a CCC switch for a point-to-multipoint LSP, include the **p2mp-transmit-switch** statement:

```
p2mp-transmit-switch switch-name {
    input-interface input-interface-name.unit-number;
    transmit-p2mp-lsp transmitting-lsp;
}
```

You can include the **p2mp-transmit-switch** statement at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

switch-name specifies the name of the ingress CCC switch.

input-interface *input-interface-name.unit-number* specifies the name of the ingress interface.

transmit-p2mp-lsp *transmitting-lsp* specifies the name of the transmitting point-to-multipoint LSP.

Configuring Local Receivers on a Point-to-Multipoint CCC LSP Switch on Ingress PE Routers

In addition to configuring an incoming CCC interface to a point-to-multipoint LSP on an ingress PE router, you can also configure CCC to switch traffic on an incoming CCC interface to one or more outgoing CCC interfaces by configuring output interfaces as local receivers.

To configure output interfaces, include the **output-interface** statement at the [edit protocols connections **p2mp-transmit-switch p2mp-transmit-switch-name**] hierarchy level.

```
[edit protocols connections]
p2mp-transmit-switch pc-ccc {
    input-interface fe-1/3/1.0;
    transmit-p2mp-lsp myp2mp;
    output-interface [fe-1/3/2.0 fe-1/3/3.0];
}
```

You can configure one or more output interfaces as local receivers on the ingress PE router using this statement.

Use the **show connections p2mp-transmit-switch (extensive | history | status)**, **show route ccc <interface-name> (detail | extensive)**, and **show route forwarding-table ccc <interface-name> (detail | extensive)** commands to view details of the local receiving interfaces on the ingress PE router.

Configuring the Point-to-Multipoint LSP Switch on Egress PE Routers

To configure the CCC switch for a point-to-multipoint LSP on the egress PE router, include the **p2mp-receive-switch** statement.

```
p2mp-receive-switch switch-name {
    output-interface [ output-interface-name.unit-number ];
    receive-p2mp-lsp receptive-lsp;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

switch-name specifies the name of the egress CCC switch.

output-interface [*output-interface-name.unit-number*] specifies the name of one or more egress interfaces.

receive-p2mp-lsp *receptive-lsp* specifies the name of the receptive point-to-multipoint LSP.

Configuring an MPLS-Based VLAN CCC Using a Layer 2 VPN (CLI Procedure)

You can configure an 802.1Q VLAN as an MPLS-based Layer 2 virtual private network (VPN) using EX8200 and EX4500 switches to interconnect multiple customer sites with Layer 2 technology.

This topic describes configuring provider edge (PE) switches in an MPLS network using a circuit cross-connect (CCC) on a tagged VLAN interface (802.1Q VLAN) rather than a simple interface.

NOTE: You do not need to make any changes to existing provider switches in your MPLS network to support this type of configuration. For information on configuring provider switches, see [“Configuring MPLS on EX8200 and EX4500 Provider Switches” on page 77](#).

NOTE: You can send any kind of traffic over a CCC, including nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment.

NOTE: If you configure a physical interface as VLAN-tagged and with the vlan-ccc encapsulation, you cannot configure the associated logical interfaces with the inet family. Doing so could cause the logical interfaces to drop packets.

To configure a PE switch with a VLAN CCC and an MPLS-based Layer 2 VPN:

1. Configure OSPF (or IS-IS) on the loopback (or switch address) and core interfaces:

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
user@switch# set ospf area 0.0.0.0 interface interface-name
```

2. Enable traffic engineering for the routing protocol:

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
user@switch# set interfaces lo0 unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
user@switch# set interfaces interface-name unit logical-unit-number family inet address address
```

4. Enable the MPLS protocol with **cspf** disabled:

NOTE: CSPF is a shortest-path-first algorithm that has been modified to take into account specific restrictions when the shortest path across the network is calculated. You need to disable CSPF for link protection to function properly on interarea paths.

```
[edit protocols]
user@switch# set mpls no-cspf
```

5. Define the label switched path (LSP):

```
[edit protocols]
user@switch# set mpls label-switched-path lsp_name to address
```

TIP: You will need to use the specified LSP name again when configuring the CCC.

6. Configure MPLS on the core interfaces:

```
[edit protocols]
user@switch# set mpls interface interface-name
user@switch# set mpls interface interface-name
user@switch# set mpls interface interface-name
```

7. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface interface-name
user@switch# set rsvp interface interface-name
user@switch# set rsvp interface interface-name
```

8. Configure **family mpls** on the logical units of the core interfaces:

```
[edit]
user@switch# set interfaces interface-name unit logical-unit-number family mpls
user@switch# set interfaces interface-name unit logical-unit-number family mpls
user@switch# set interfaces interface-name unit logical-unit-number family mpls
```

NOTE: You can enable **family mpls** on either individual interfaces or aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

9. Enable VLAN tagging on the customer edge interface of the local PE switch:

```
[edit]
user@switch# set interfaces interface-name vlan-tagging
```

10. Configure the customer edge interface to use encapsulation **vlan-ccc**:

```
[edit]
user@switch# set interfaces interface-name encapsulation vlan-ccc
```

11. Configure the logical unit of the customer edge interface with a VLAN ID:

NOTE: The VLAN ID cannot be configured on logical interface unit 0. The logical unit number must be 1 or higher.

The same VLAN ID must be used when configuring the customer edge interface on the other PE switch.

```
[edit ]
```

```
user@switch# set interfaces interface-name logical-unit-number vlan-id vlan-id
```

12. Configure BGP, specifying the loopback address as the local address and enabling **family l2vpn signaling**:

```
[edit protocols bgp]
```

```
user@switchPE1# set local-address address family l2vpn signaling
```

13. Configure the BGP group, specifying the group name and type:

```
[edit protocols bgp]
```

```
user@switchPE1# set group ibgp type internal
```

14. Configure the BGP neighbor, specifying the loopback address of the remote PE switch as the neighbor's address:

```
[edit protocols bgp]
```

```
user@switchPE1# set neighbor address
```

15. Configure the routing instance, specifying the routing-instance name and using **l2vpn** as the instance type:

```
[edit routing-instances]
```

```
user@switchPE1# set routing-instance-name instance-type l2vpn
```

16. Configure the routing instance to apply to the customer edge interface:

```
[edit routing-instances]
```

```
user@switchPE1# set routing-instance-name interface interface-name
```

17. Configure the routing instance to use a route distinguisher:

```
[edit routing-instances]
```

```
user@switchPE1# set routing-instance-name route-distinguisher address
```

18. Configure the VPN routing and forwarding (VRF) target of the routing instance:

```
[edit routing-instances]
user@switchPE1# set routing-instance-name vrf-target community
```

NOTE: You can create more complex policies by explicitly configuring VRF import and export policies using the import and export options. See the [Junos OS VPNs Configuration Guide](#).

19. Configure the protocols and encapsulation type used by the routing instance:

```
[edit routing-instances]
user@switchPE1# set routing-instance-name protocols l2vpn encapsulation-type ethernet-vlan
```

20. Apply the routing instance to a customer edge interface and specify a description for it:

```
[edit routing-instances]
user@switchPE1# set routing-instance-name protocols interface interface-name description description
```

21. Configure the routing-instance protocols site:

```
[edit routing-instances]
user@switchPE1# set routing-instance-name protocols l2vpn site site-name site-identifier identifier
remote-site-id identifier
```

NOTE: The remote site ID (configured with the **remote-site-id** statement) corresponds to the site ID (configured with the **site-identifier** statement) configured on the other PE switch.

When you have completed configuring one PE switch, follow the same procedures to configure the other PE switch.

NOTE: You must use the same type of switch for the other PE switch. You cannot use an EX8200 as one PE switch and use an EX3200 or EX4200 as the other PE switch.

Release History Table

Release	Description
20.1R1	Starting in Junos OS Release 20.1R1, aggregated Ethernet interfaces support VLAN translational cross-connect (TCC) encapsulation.
19.3R1	Starting in Junos OS Release 19.3R1, you can leverage the hardware support available for cross-connects on the ACX5448 device with the Layer 2 local switching functionality using certain models. With this support, you can provide the EVP and Ethernet Virtual Private Line (EVPL) services.
17.1R1	Support for VPN service as the customer is supported on QFX10000 switches starting with Junos OS Release 17.1R1.

RELATED DOCUMENTATION

[Basic MPLS Configuration](#) | 36

9

PART

MPLS for Software Defined Networking (SDN)

Path Computatoin Element Protocol (PCEP) | **1347**

Path Computatoin Element Protocol (PCEP)

IN THIS CHAPTER

- [PCEP Configuration | 1347](#)

PCEP Configuration

IN THIS SECTION

- [PCEP Overview | 1347](#)
- [Support of the Path Computation Element Protocol for RSVP-TE Overview | 1349](#)
- [Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE | 1367](#)
- [Example: Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support of PCE-Initiated Point-to-Point LSPs | 1384](#)
- [Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support of PCE-Initiated Point-to-Point LSPs | 1395](#)
- [Example: Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support for PCE-Controlled Point-to-Multipoint LSPs | 1399](#)
- [Understanding Path Computation Element Protocol for MPLS RSVP-TE with Support for PCE-Initiated Point-to-Multipoint LSPs | 1420](#)
- [How to Configure Segment Routing for the Path Computation Element Protocol | 1424](#)
- [Static Segment Routing Label Switched Path | 1432](#)
- [Enabling Distributed CSPF for Segment Routing LSPs | 1476](#)
- [Example: Configuring CoS-Based Forwarding and Policy-Based Routing For SR-TE LSPs | 1483](#)

PCEP Overview


A Path Computation Element (PCE) is an entity (component, application, or network node) that is capable of computing a network path or route based on a network graph and applying computational constraints.

A Path Computation Client (PCC) is any client application requesting a path computation to be performed by a PCE. The Path Computation Element Protocol (PCEP) enables communications between a PCC and a PCE, or between two PCEs (defined in RFC 5440).

PCEP is a TCP-based protocol defined by the IETF PCE Working Group, and defines a set of messages and objects used to manage PCEP sessions and to request and send paths for multidomain traffic engineered LSPs (TE LSPs). It provides a mechanism for a PCE to perform path computation for a PCC's external LSPs. The PCEP interactions include LSP status reports sent by the PCC to the PCE, and PCE updates for the external LSPs.

Figure 114 on page 1348 illustrates the role of PCEP in the client-side implementation of a stateful PCE architecture in an MPLS RSVP-TE enabled network.

Figure 114: PCEP Session

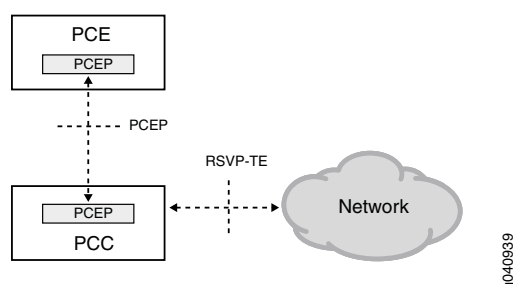

A TCP-based PCEP session connects a PCC to an external PCE. The PCC initiates the PCEP session and stays connected to the PCE for the duration of the PCEP session. During the PCEP session, the PCC requests LSP parameters from the stateful PCE. On receiving one or more LSP parameters from the PCE, the PCC re-signals the TE LSP. When the PCEP session is terminated, the underlying TCP connection is closed immediately, and the PCC attempts to re-establish the PCEP session.

Thus, the PCEP functions include:

- LSP tunnel state synchronization between a PCC and a stateful PCE—When an active stateful PCE connection is detected, a PCC tries to delegate all LSPs to this PCE in a procedure called LSP state synchronization. PCEP enables synchronization of the PCC LSP state to the PCE.
- Delegation of control over LSP tunnels to a stateful PCE—An active stateful PCE controls one or more LSP attributes for computing paths, such as bandwidth, path (ERO), and priority (setup and hold). PCEP enables such delegation of LSPs for path computation.
- Stateful PCE control of timing and sequence of path computations within and across PCEP sessions—An active stateful PCE modifies one or more LSP attributes, such as bandwidth, path (ERO), and priority (setup and hold). PCEP communicates these new LSP attributes from the PCE to the PCC, after which the PCC re-signals the LSP in the specified path.

Support of the Path Computation Element Protocol for RSVP-TE Overview

IN THIS SECTION

- [Understanding MPLS RSVP-TE | 1349](#)
- [Current MPLS RSVP-TE Limitations | 1351](#)
- [Use of an External Path Computing Entity | 1352](#)
- [Components of External Path Computing | 1353](#)
- [Interaction Between a PCE and a PCC Using PCEP | 1355](#)
- [LSP Behavior with External Computing | 1358](#)
- [Configuration Statements Supported for External Computing | 1360](#)
- [PCE-Controlled LSP Protection | 1360](#)
- [PCE-Controlled LSP ERO | 1360](#)
- [PCE-Controlled Point-to-Multipoint RSVP-TE LSPs | 1361](#)
- [PCE-Initiated Point-to-Point LSPs | 1362](#)
- [PCE-Initiated Bypass LSP | 1363](#)
- [PCE-Initiated Point-to-Multipoint LSPs | 1364](#)
- [Auto-Bandwidth and PCE-Controlled LSP | 1364](#)
- [TCP-MD5 Authentication for PCEP Sessions | 1364](#)
- [Impact of Client-Side PCE Implementation on Network Performance | 1366](#)

Understanding MPLS RSVP-TE

Traffic engineering (TE) deals with performance optimization of operational networks, mainly mapping traffic flows onto an existing physical topology. Traffic engineering provides the ability to move traffic flow away from the shortest path selected by the interior gateway protocol (IGP) and onto a potentially less congested physical path across a network.

For traffic engineering in large, dense networks, MPLS capabilities can be implemented because they potentially provide most of the functionality available from an overlay model, in an integrated manner, and at a lower cost than the currently competing alternatives. The primary reason for implementing MPLS traffic engineering is to control paths along which traffic flows through a network. The main advantage of implementing MPLS traffic engineering is that it provides a combination of the traffic engineering capabilities of ATM, along with the class-of-service (CoS) differentiation of IP.

In an MPLS network, data plane information is forwarded using label switching. A packet arriving on a provider edge (PE) router from the customer edge (CE) router has labels applied to it, and it is then forwarded to the egress PE router. The labels are removed at the egress router and it is then forwarded out to the

appropriate destination as an IP packet. The label-switching routers (LSRs) in the MPLS domain use label distribution protocols to communicate the meaning of labels used to forward traffic between and through the LSRs. RSVP-TE is one such label distribution protocol that enables an LSR peer to learn about the label mappings of other peers.

When both MPLS and RSVP are enabled on a router, MPLS becomes a client of RSVP. The primary purpose of the Junos OS RSVP software is to support dynamic signaling within label-switched paths (LSPs). RSVP reserves resources, such as for IP unicast and multicast flows, and requests quality-of-service (QoS) parameters for applications. The protocol is extended in MPLS traffic engineering to enable RSVP to set up LSPs that can be used for traffic engineering in MPLS networks.

When MPLS and RSVP are combined, labels are associated with RSVP flows. Once an LSP is established, the traffic through the path is defined by the label applied at the ingress node of the LSP. The mapping of label to traffic is accomplished using different criteria. The set of packets that are assigned the same label value by a specific node belong to the same forwarding equivalence class (FEC), and effectively define the RSVP flow. When traffic is mapped onto an LSP in this way, the LSP is called an LSP tunnel.

LSP tunnels are a way to establish unidirectional label-switched paths. RSVP-TE builds on the RSVP core protocol by defining new objects and modifying existing objects used in the PATH and RESV objects for LSP establishment. The new objects—LABEL-REQUEST object (LRO), RECORD-ROUTE object (RRO), LABEL object, and EXPLICIT-ROUTE object (ERO)—are optional with respect to the RSVP protocol, except for the LRO and LABEL objects, which are both mandatory for establishing LSP tunnels.

In general, RSVP-TE establishes a label-switched path that ensures frame delivery from ingress to egress router. However, with the new traffic engineering capabilities, the following functions are supported in an MPLS domain:

- Possibility to establish a label-switched path using either a full or partial explicit route (RFC 3209).
- Constraint-based LSP establishment over links that fulfill requirements, such as bandwidth and link properties.
- Endpoint control, which is associated with establishing and managing LSP tunnels at the ingress and egress routers.
- Link management, which manages link resources to do resource-aware routing of traffic engineering LSPs and to program MPLS labels.
- MPLS fast reroute (FRR), which manages the LSPs that need protection and assigns backup tunnel information to these LSPs.


Current MPLS RSVP-TE Limitations

Although the RSVP extensions for traffic engineering enable better network utilization and meet requirements of classes of traffic, today's MPLS RSVP-TE protocol suite has several issues inherent to its distributed nature. This causes a number of issues during contention for bisection capacity, especially within an LSP priority class where a subset of LSPs share common setup and hold priority values. The limitations of RSVP-TE include:

- Lack of visibility of individual per-LSP, per-device bandwidth demands—The ingress routers in an MPLS RSVP-TE network establish LSPs without having a global view of the bandwidth demand on the network. Information about network resource utilization is only available as total reserved capacity by traffic class on a per interface basis. Individual LSP state is available locally on each label edge router (LER) for its own LSPs only. As a result, a number of issues related to demand pattern arise, particularly within a common setup and hold priority.
- Asynchronous and independent nature of RSVP signaling—In RSVP-TE, the constraints for path establishment are controlled by an administrator. As such, bandwidth reserved for an LSP tunnel is set by the administrator and does not automatically imply any limit on the traffic sent over the tunnel. Therefore, bandwidth available on a traffic engineering link is the bandwidth configured for the link, excluding the sum of all reservations made on the link. Thus, the unsignaled demands on an LSP tunnel lead to service degradation of the LSP requiring excess bandwidth, as well as the other LSPs that comply with the bandwidth requirements of the traffic engineering link.
- LSPs established based on dynamic or explicit path options in the order of preference—The ingress routers in an MPLS RSVP-TE network establish LSPs for demands based on the order of arrival. Because the ingress routers do not have a global view of the bandwidth demand on the network, using the order of preference to establish LSPs can cause traffic to be dropped or LSPs not being established at all when there is an excess of bandwidth demand.

As an example, [Figure 115 on page 1352](#) is configured with MPLS RSVP-TE, in which A and G are the label edge routers (LERs). These ingress routers establish LSPs independently based on the order of demands and have no knowledge or control over each other's LSPs. Routers B, C, and D are intermediate or transit routers that connect to the egress routers E and F.

Figure 115: Example MPLS Traffic Engineering

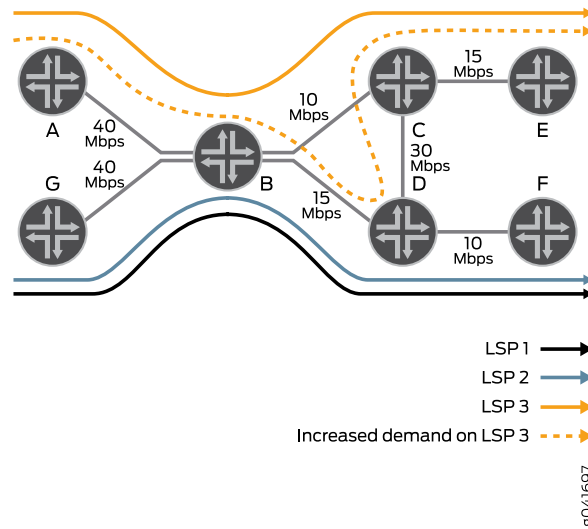

The ingress routers establish LSPs based on the order in which the demands arrive. If Router G receives two demands of capacity 5 each for G-F, then G signals two LSPs – LSP1 and LSP2 – through G-B-D-F. In the same way, when Router A receives the third demand of capacity 10 for A-E, then it signals an LSP, LSP3, through A-B-C-E. However, if the demand on the A-E LSP increases from 10 to 15, Router A cannot signal LSP3 using the same (A-B-C-E) path, because the B-C link has a lower capacity.

Router A should have signaled the increased demand on LSP3 using the A-B-D-C-E path. Since LSP1 and LSP2 have utilized the B-D link based on the order of demands received, LSP3 is not signaled.

Thus, although adequate max-flow bandwidth is available for all the LSPs, LSP3 is subject to potentially prolonged service degradation. This is due to Router A's lack of global demand visibility and the lack of systemic coordination in demand placement by the ingress routers A and G.

Use of an External Path Computing Entity

As a solution to the current limitations found in the MPLS RSVP-TE path computation, an external path computing entity with a global view of per-LSP, per-device demand in the network independent of available capacity is required.

Currently, only online and real-time constraint-based routing path computation is provided in an MPLS RSVP-TE network. Each router performs constraint-based routing calculations independent of the other routers in the network. These calculations are based on currently available topology information—information that is usually recent, but not completely accurate. LSP placements are locally optimized, based on current network status. The MPLS RSVP-TE tunnels are set up using the CLI. An operator configures the TE LSP, which is then signaled by the ingress router.

In addition to the existing traffic engineering capabilities, the MPLS RSVP-TE functionality is extended to include an external path computing entity, called the Path Computation Element (PCE). The PCE computes

the path for the TE LSPs of ingress routers that have been configured for external control. The ingress router that connects to a PCE is called a Path Computation Client (PCC). The PCC is configured with the Path Computation Client Protocol (PCEP) to facilitate external path computing by a PCE.

For more information, see [“Components of External Path Computing” on page 1353](#).

To enable external path computing for a PCC's TE LSPs, include the **lsp-external-controller pccd** statement at the **[edit mpls]** and **[edit mpls lsp lsp-name]** hierarchy levels.

Components of External Path Computing

IN THIS SECTION

- [Path Computation Element | 1353](#)
- [Path Computation Client | 1354](#)
- [Path Computation Element Protocol | 1355](#)

The components that make up an external path computing system are:

Path Computation Element

A Path Computation Element (PCE) can be any entity (component, application, or network node) that is capable of computing a network path or route based on a network graph and applying computational constraints. However, a PCE can compute the path for only those TE LSPs of a PCC that have been configured for external control.

A PCE can either be stateful or stateless.

- **Stateful PCE**—A stateful PCE maintains strict synchronization between the PCE and network states (in terms of topology and resource information), along with the set of computed paths and reserved resources in use in the network. In other words, a stateful PCE utilizes information from the traffic engineering database as well as information about existing paths (for example, TE LSPs) in the network when processing new requests from the PCC.

A stateful PCE is of two types:

- **Passive stateful PCE**—Maintains synchronization with the PCC and learns the PCC LSP states to better optimize path calculations, but does not have control over them.
- **Active stateful PCE**—Actively modifies the PCC LSPs, in addition to learning about the PCC LSP states.

NOTE: In a redundant configuration with main and backup active stateful PCEs, the backup active stateful PCE cannot modify the attributes of delegated LSPs until it becomes the main PCE at the time of a failover. There is no preempting of PCEs in the case of a switchover. The main PCE is backed by a backup PCE, and when the main PCE goes down, the backup PCE assumes the role of the main PCE and remains the main PCE even after the PCE that was previously the main PCE is operational again.

A stateful PCE provides the following functions:

- Offers offline LSP path computation.
- Triggers LSP re-route when there is a need to re-optimize the network.
- Changes LSP bandwidth when there is an increase in bandwidth demand from an application.
- Modifies other LSP attributes on the router, such as ERO, setup priority, and hold priority.

A PCE has a global view of the bandwidth demand in the network and maintains a traffic-engineered database to perform path computations. It performs statistics collection from all the routers in the MPLS domain using SNMP and NETCONF. This provides a mechanism for offline control of the PCC's TE LSPs. Although an offline LSP path computation system can be embedded in a network controller, the PCE acts like a full-fledged network controller that provides control over the PCC's TE LSPs, in addition to computing paths.

Although a stateful PCE allows for optimal path computation and increased path computation success, it requires reliable state synchronization mechanisms, with potentially significant control plane overhead and the maintenance of a large amount of data in terms of states, as in the case of a full mesh of TE LSPs.

- **Stateless PCE**—A stateless PCE does not remember any computed path, and each set of requests is processed independently of each other (RFC 5440).

Path Computation Client

A Path Computation Client (PCC) is any client application requesting a path computation to be performed by a PCE.

A PCC can connect to a maximum of 10 PCEs at one time. The PCC to PCE connection can be a configured static route or a TCP connection that establishes reachability. The PCC assigns each connected PCE a priority number. It sends a message to all the connected PCEs with information about its current LSPs, in a process called LSP state synchronization. For the TE LSPs that have external control enabled, the PCC delegates those LSPs to the main PCE. The PCC elects, as the main PCE, a PCE with the lowest priority number, or the PCE that it connects to first in the absence of a priority number.

The PCC re-signals an LSP based on the computed path it receives from a PCE. When the PCEP session with the main PCE is terminated, the PCC elects a new main PCE, and all delegated LSPs to the previously main PCE are delegated to the newly available main PCE.

Path Computation Element Protocol

The Path Computation Element Protocol (PCEP) is used for communication between PCC and PCE (as well as between two PCEs) (RFC 5440). PCEP is a TCP-based protocol defined by the IETF PCE Working Group, and defines a set of messages and objects used to manage PCEP sessions and to request and send paths for multidomain TE LSPs. The PCEP interactions include PCC messages, as well as notifications of specific states related to the use of a PCE in the context of MPLS RSVP-TE. When PCEP is used for PCE-to-PCE communication, the requesting PCE assumes the role of a PCC.


Thus, the PCEP functions include:

- LSP tunnel state synchronization between PCC and a stateful PCE.
- Delegation of control over LSP tunnels to a stateful PCE.

Interaction Between a PCE and a PCC Using PCEP

Figure 116 on page 1355 illustrates the relationship between a PCE, PCC, and the role of PCEP in the context of MPLS RSVP-TE.

Figure 116: PCC and RSVP-TE

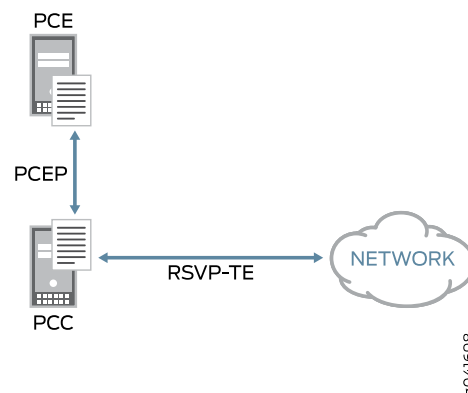

The PCE to PCC communication is enabled by the TCP-based PCEP. The PCC initiates the PCEP session and stays connected to a PCE for the duration of the PCEP session.

NOTE: Starting with Junos OS Release 16.1, you can secure a PCEP session using TCP-MD5 authentication as per RFC 5440. To enable the MD5 security mechanism for a PCEP session, it is recommended that you define and bind the MD5 authentication key at the **[edit protocols pcep pce pce-id]** hierarchy level for a PCEP session. You can, however, also use a predefined keychain from the **[edit security authentication-key-chains key-chain]** hierarchy level to secure a PCEP session. In this case, you should bind the predefined keychain into the PCEP session at the **[edit protocols pcep pce pce-id]** hierarchy level.

The PCE and PCC use the same key to verify the authenticity of each segment sent on the TCP connection of the PCEP session, thereby securing the PCEP communication between the devices, which might be subject to attacks and can disrupt services on the network.

For more information on securing PCEP sessions using MD5 authentication, see [“TCP-MD5 Authentication for PCEP Sessions” on page 1364](#).

Once the PCEP session is established, the PCC performs the following tasks:

1. LSP state synchronization—The PCC sends information about all the LSPs (local and external) to all connected PCEs. For external LSPs, the PCC sends information about any configuration change, RRO change, state change, and so on, to the PCE.

For PCE-initiated LSPs, there is no LSP configuration present on the PCC. The PCE initiating the LSP sends the LSP parameters to the PCC that has indicated its capability of supporting PCE-initiated LSPs.

NOTE: Support for PCE-initiated LSPs is provided in Junos OS Release 13.3 and later releases.

2. LSP delegation—After the LSP state information is synchronized, the PCC then delegates the external LSPs to one PCE, which is the main active stateful PCE. Only the main PCE can set parameters for the external LSP. The parameters that the main PCE modifies include bandwidth, path (ERO), and priority (setup and hold). The parameters specified in the local configuration are overridden by the parameters that are set by the main PCE.

NOTE: When the PCEP session with the main PCE is terminated, the PCC elects a new main PCE, and all delegated LSPs to the previously main PCE are delegated to the newly available main PCE.

In the case of PCE-initiated LSPs, the PCC creates the LSP using the parameters received from the PCE. The PCC assigns the PCE-initiated LSP a unique LSP-ID, and automatically delegates the LSP to the PCE. A PCC cannot revoke the delegation for the PCE-initiated LSPs for an active PCEP session.

When a PCEP session terminates, the PCC starts two timers without immediately deleting the PCE-initiated LSPs – **delegation cleanup timeout** and **lsp cleanup timer** – to avoid disruption of services. During this time, an active stateful PCE can acquire control of the LSPs provisioned by the failed PCE, by sending a create request for the LSP.

Control over PCE-initiated LSPs reverts to the PCC at the expiration of the **delegation cleanup timeout**. When the **delegation cleanup timeout** expires, and no other PCE has acquired control over the LSP from the failed PCE, the PCC takes local control of the non-delegated PCE-initiated LSP. Later, when the original or a new active stateful PCE wishes to acquire control of the locally controlled PCE-initiated LSPs, the PCC delegates these LSPs to the PCE and the **lsp cleanup timer** timer is stopped.

A PCE may return the delegation of the PCE-initiated LSP to the PCC to allow LSP transfer between PCEs. This triggers the **lsp cleanup timer** for the PCE-initiated LSP. The PCC waits for the LSP cleanup timer to expire before removing the non-delegated PCE-initiated LSPs from the failed PCE.

When the **lsp cleanup timer** expires, and no other PCE has acquired control over the LSPs from the failed PCE, the PCC deletes all the LSPs provisioned by the failed PCE.

NOTE: In compliance with *draft-ietf-pce-stateful-pce-09*, revoking of PCE-initiated LSP delegations by a PCC happens in a make-before-break fashion before the LSPs are redelegated to an alternate PCE. Starting in Junos OS Release 18.1R1, the **lsp-cleanup-timer** must be greater than or equal to the **delegation-cleanup-timeout** for the PCC to revoke the LSP delegations. If not, the redelegation timeout interval for the PCC can be set to infinity, where the LSP delegations to that PCE remain intact until specific action is taken by the PCC to change the parameters set by the PCE.

3. LSP signaling—On receiving one or more LSP parameters from the main active stateful PCE, the PCC re-signals the TE LSP based on the PCE provided path. If the PCC fails to set up the LSP, it notifies the PCE of the setup failure and waits for the main PCE to provide new parameters for that LSP, and then re-signals it.


When the PCE specifies a path that is incomplete or has loose hops where only the path endpoints are specified, the PCC does not perform local constraint-based routing to find out the complete set of hops. Instead, the PCC provides RSVP with the PCE provided path, as it is, for signaling, and the path gets set up using IGP hop-by-hop routing.

Considering the topology used in [Figure 115 on page 1352](#), [Figure 117 on page 1358](#) illustrates the partial client-side PCE implementation in the MPLS RSVP-TE enabled network. The ingress routers A and G are the PCCs that are configured to connect to the external stateful PCE through a TCP connection.

The PCE has a global view of the bandwidth demand in the network and performs external path computations after looking up the traffic engineering database. The active stateful PCE then modifies one

or more LSP attributes and sends an update to the PCC. The PCC uses the parameters it receives from the PCE to re-signal the LSP.

Figure 117: Example PCE for MPLS RSVP-TE

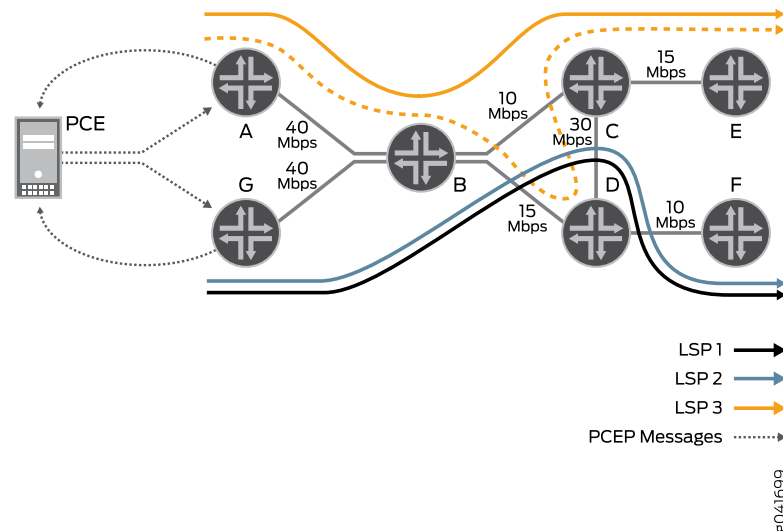

This way, the stateful PCE provides a cooperative operation of distributed functionality used to address specific challenges of a shortest interdomain constrained path computation. It eliminates congestion scenarios in which traffic streams are inefficiently mapped onto available resources, causing overutilization of some subsets of network resources, while other resources remain underutilized.

LSP Behavior with External Computing

IN THIS SECTION

- LSP Types | 1358
- LSP Control Mode | 1359

LSP Types

In a client-side PCE implementation, there are three types of TE LSPs:

- CLI-controlled LSPs—The LSPs that do not have the **lsp-external-controller pccd** statement configured are called CLI-controlled LSPs. Although these LSPs are under local control, the PCC updates the connected PCEs with information about the CLI-controlled LSPs during the initial LSP synchronization process. After the initial LSP synchronization, the PCC informs the PCE of any new and deleted LSPs as well.

- PCE-controlled LSPs—The LSPs that have the **lsp-external-controller pccd** statement configured are called PCE-controlled LSPs. The PCC delegates the PCC-initiated LSPs to the main PCE for external path computation.

The PCC informs the PCE about the configured parameters of a PCE-controlled LSP, such as bandwidth, ERO, and priorities. It also informs the PCE about the actual values used for these parameters to set up the LSP including the RRO, when available.

The PCC sends such LSP status reports to the PCE only when a reconfiguration has occurred or when there is a change in the ERO, RRO, or status of the PCE-controlled LSPs under external control.

There are two types of parameters that come from the CLI configuration of an LSP for a PCE:

- Parameters that are not overridden by a PCE, and that are applied immediately.
- Parameters that are overridden by a PCE. These parameters include bandwidth, path, and priority (setup and hold values). When the control mode switches from external to local, the CLI-configured values for these parameters are applied at the next opportunity to re-signal the LSP. The values are not applied immediately.
- Externally-provisioned LSPs (or PCE-initiated LSPs)—The LSPs that have the **lsp-provisioning** statement configured are called PCE-initiated LSPs. A PCE-initiated LSP is dynamically created by an external PCE; as a result, there is no LSP configuration present on the PCC. The PCC creates the PCE-initiated LSP using the parameters provided by the PCE, and automatically delegates the LSP to the PCE.

NOTE: Support for PCE-initiated LSPs is provided in Junos OS Release 13.3 and later releases.

The CLI-controlled LSPs, PCE-controlled LSPs, and PCE-initiated LSPs can coexist on a PCC.

The CLI-controlled LSPs and PCE-controlled LSPs can coexist on a PCC.

LSP Control Mode

In a client-side PCE implementation, there are two types of control modes for a PCC-controlled LSP:

- External—By default, all PCE-controlled LSPs are under external control. When an LSP is under external control, the PCC uses the PCE-provided parameters to set up the LSP.
- Local—A PCE-controlled LSP can come under local control. When the LSP switches from external control to local control, path computation is done using the CLI-configured parameters and constraint-based routing. Such a switchover happens only when there is a trigger to re-signal the LSP. Until then, the PCC uses the PCE-provided parameters to signal the PCE-controlled LSP, although the LSP remains under local control.

A PCE-controlled LSP switches to local control from its default external control mode in cases such as no connectivity to a PCE or when a PCE returns delegation of LSPs back to the PCC.

For more information about CLI-controlled LSPs and PCE-controlled LSPs, see [“LSP Types” on page 1358](#).

Configuration Statements Supported for External Computing

Table 32 on page 1360 lists the MPLS and existing LSP configuration statements that apply to a PCE-controlled LSP.

Table 32: Applicability of MPLS and Existing LSP Configurations to a PCE-Controlled LSP

Support for PCE-Controlled LSP	Applicable LSP Configuration Statements	Applicable MPLS Configuration Statements
These configuration statements can be configured along with the PCE configuration. However, they take effect only when the local configuration is in use. During PCE control, these configuration statements remain inactive.	<ul style="list-style-type: none"> • admin-group • auto-bandwidth • hop-limit • least-fill • most-fill • random 	<ul style="list-style-type: none"> • admin-group • admin-groups • admin-group-extended • hop-limit • no-cspf • smart-optimize-timer
<p>These configuration statements can be configured along with the PCE configuration, but are overridden by the PCE-controlled LSP attributes. However, when the local configuration is in use, the configured values for these configuration statements are applied.</p> <p>NOTE: Changes to the local configuration using the CLI while the LSP is under the control of a stateful PCE do not have any effect on the LSP. These changes come into effect only when the local configuration is applied.</p>	<ul style="list-style-type: none"> • bandwidth • primary • priority 	<ul style="list-style-type: none"> • priority
These configuration statements cannot be configured along with the PCE configuration.	<ul style="list-style-type: none"> • p2mp • template 	<ul style="list-style-type: none"> • p2mp-lsp-next-hop

The rest of the LSP configuration statements are applicable in the same way as for existing LSPs. On configuring any of the above configuration statements for a PCE-controlled LSP, an MPLS log message is generated to indicate when the configured parameters take effect.

PCE-Controlled LSP Protection

The protection paths, including fast reroute and bypass LSPs, are locally computed by the PCC using constraint-based routing. A stateful PCE specifies the primary path (ERO) only. A PCE can also trigger a non-standby secondary path, even if the local configuration does not have a non-standby secondary path for LSP protection.

PCE-Controlled LSP ERO

For PCE-controlled LSPs (PCC-delegated LSPs and PCE-initiated LSPs), only a full-blown Explicit Route Object (ERO) object has to be sent from the PCE to the PCC; otherwise the PCC rejects the PCUpdate or PCCreate message for that PCEP session.

Starting in Junos OS Release 17.2, in addition to **external cspf**, two new path computation types are introduced for the PCE-controlled LSPs: **local cspf** and **no cspf**.

- **local cspf**—A PCC uses the **local cspf** computation type only when the PCE sends in a Juniper Vendor TLV (enterprise number: 0x0a4c) of type 5.
- **no cspf**—Neither the PCE nor the PCC performs a constrained path calculation. The endpoints and constraints are given to the RSVP module for setting up the LSP with the IGP path.

A PCC uses **no cspf** computation type in the following cases:

- When the PCE sends **local cspf** TLV, and when the Junos OS configuration or matching template for this LSP included **no-cspf** in the PCC-delegated LSP.
- When the PCE sends **local cspf** TLV, and when the Junos OS configuration template for this LSP included **no-cspf** in the PCE-initiated LSP.
- When the PCE does not send **local cspf** TLV with an empty ERO or loose ERO (with loose bit set in the ERO object).

With these new computation types, a PCC can accept an ERO object either as a loose ERO, or as an empty ERO. An external path computing entity that is not capable of computing a path can modify parameters such as bandwidth and color, based on the analytics. In such cases, an empty ERO object or loose ERO is used and the path to be taken is decided by the PCC.

PCE-Controlled Point-to-Multipoint RSVP-TE LSPs

After a PCEP session is established between a PCE and a PCC, the PCC reports all the LSPs in the system to the PCE for LSP state synchronization. This includes PCC-controlled, PCE-delegated, and PCE-initiated point-to-point LSPs. Starting with Junos OS Release 15.1F6 and 16.1R1, this capability is extended to report point-to-multipoint LSPs as well. For a PCE, the point-to-multipoint LSP is similar to that of RSVP point-to-multipoint LSP, where the point-to-multipoint LSP is treated as collection of point-to-point LSPs grouped under a point-to-multipoint identifier.

By default, PCE control of point-to-multipoint LSPs is not supported on a PCC. To add this capability, include the **p2mp-lsp-report-capability** statement at the **[edit protocols pcep pce pce-name]** or **[edit protocols pcep pce-group group-id]** hierarchy levels. After the point-to-multipoint report capability is configured on a PCC, the PCC advertises this capability to the PCE. If the PCE advertises the same point-to-multipoint report capability in return, then the PCC reports the complete point-to-multipoint LSP tree to the PCE for LSP state synchronization.

A PCC with the point-to-multipoint TE LSP capability supports reporting of point-to-multipoint TE LSPs for stateful PCEs, point-to-multipoint update, and LSP database supporting point-to-multipoint LSP name as key. However, the following features and functions are not supported for Junos OS Release 15.1F6 and 16.1:

- Static point-to-multipoint LSPs
- PCE-delegated and PCE-initiated point-to-multipoint LSPs

- Auto-bandwidth
- TE++
- PCE request and reply message
- Creation of point-to-multipoint LSPs using templates
- Configuring forward entry on the PCE-initiated point-to-multipoint LSPs
- Configuring forward entry on the router pointing to a provisioned LSP.

PCE-Initiated Point-to-Point LSPs

Starting with Junos OS Release 16.1, the PCEP functionality is extended to allow a stateful PCE to initiate and provision traffic engineering LSPs through a PCC. Earlier, the LSPs were configured on the PCC and the PCC delegated control over the external LSPs to a PCE. The ownership of the LSP state was maintained by the PCC. With the introduction of the PCE-initiated LSPs, a PCE can initiate and provision a traffic engineering point-to-point LSP dynamically without the need for a locally configured LSP on the PCC. On receiving a PCCreate message from a PCE, the PCC creates the PCE-initiated LSP and automatically delegates the LSP to the PCE.

By default, a PCC rejects the request for provisioning PCE-initiated point-to-point LSPs from a PCE. To enable support of PCE-initiated LSPs on the PCC, include the *lsp-provisioning* statement at the **[edit protocols pcep pce pce-id]** or **[edit protocols pcep pce-group group-id]** hierarchy levels.

A PCC indicates its capability of supporting PCE-initiated point-to-point LSPs while establishing the Path Computation Element Protocol (PCEP) session with the PCE. A PCE selects a PCC with this capability to initiate an LSP. The PCE provides the PCC with the PCE-initiated LSP parameters. On receiving the PCE-initiated point-to-point LSP parameters, the PCC sets up the LSP, assigns an LSP ID, and automatically delegates the LSP to the PCE.

When the PCE initiating the LSP does not provide the PCE-initiated point-to-point LSP parameters, the PCC uses the default parameters. An optional LSP template may also be configured to specify values for the PCE-initiated point-to-point LSP when the LSP parameters are not provided by the PCE. To configure an LSP template for PCE-initiated point-to-point LSPs on the PCC, include the [label-switched-path-template](#) statement at the **[edit protocols mpls lsp-external-controller lsp-external-controller]** hierarchy level.

When a PCEP session terminates, the PCC starts two timers without immediately deleting the PCE-initiated LSPs—**delegation cleanup timeout** and **lsp cleanup timer**—to avoid disruption of services. During this time, an active stateful PCE can acquire control of the LSPs provisioned by the failed PCE.

A PCE may return the delegation of the PCE-initiated point-to-point LSP to the PCC to allow LSP transfer between PCEs. Control over PCE-initiated LSPs reverts to the PCC at the expiration of the delegation cleanup timeout. When the delegation cleanup timeout expires, and no other PCE has acquired control over the LSP from the failed PCE, the PCC takes local control of the non-delegated PCE-initiated LSP. Later, when the original or a new active stateful PCE wishes to acquire control of the locally controlled PCE-initiated point-to-point LSPs, the PCC delegates these LSPs to the PCE and the LSP cleanup timer is stopped.

The PCC waits for the LSP cleanup timer to expire before deleting the non-delegated PCE-initiated point-to-point LSPs from the failed PCE. When the LSP cleanup timer expires, and no other PCE has acquired control over the LSPs from the failed PCE, the PCC deletes all the LSPs provisioned by the failed PCE.

PCE-Initiated Bypass LSP

IN THIS SECTION

- [Understanding PCE-Initiated Bypass LSPs | 1363](#)
- [Benefits of PCE-Initiated Bypass LSP | 1364](#)
- [Behavior of PCE-Initiated Bypass LSPs During PCEP Session Failure | 1364](#)

Understanding PCE-Initiated Bypass LSPs

There can be traffic outages at the time of a link or node failure because the backup protection paths in the network do not have sufficient bandwidth to handle traffic. In such networks, although a PCE may be used to compute all the paths, to optimize network performance, the local protection paths also need to be controlled through the PCE.

Junos OS Release 19.2R1 and later releases provide partial support for the Internet draft draft-cbrt-pce-stateful-local-protection-01 (expires December 2018), *PCEP Extensions for RSVP-TE Local-Protection with PCE-Stateful*, where the PCEP functionality is extended to allow a stateful PCE to initiate, provision, and manage bypass LSPs for a protected interface. Multiple bypass LSPs with bandwidth reservation can be initiated by the PCE to protect a link or node. The bandwidth on the bypass LSP is expected to be smaller than the total bandwidth of the primary LSPs that it might protect.

The existing bypass selection mechanism, that prefers manual bypass LSPs (if available) over dynamic bypass LSPs, is extended to prefer PCE-provisioned bypass LSPs (if available) over dynamic bypass LSPs. The PCE-provisioned bypass LSPs have a higher preference over dynamic bypass LSPs, but are less preferred over manual bypass LSPs.

The set of operations that are used to perform on any operational bypass LSPs, such as **clear rsvp session**, can also be performed on the PCE-initiated bypass LSPs. You can use commands, such as **show path-computation-client status extensive** and **show path-computation-client lsp** to view PCE-initiated bypass LSP statistics.

With the support of PCE-initiated bypass LSP, you can:

- Create a RSVP bypass LSP through PCEP from an external controller, where the bypass LSP:
 - can be for link or node protection.
 - must have a non-zero bandwidth.

- must have a specified strict ERO.
- Update the bandwidth and ERO for an existing PCE-created bypass LSP.
- Oversubscribe the bypass LSP bandwidth for admission control of primary LSPs. This must be a per-bypass parameter, and should allow updating the subscription per bypass LSP.

Benefits of PCE-Initiated Bypass LSP

The PCE-initiated bypass LSPs provide the following benefits:

- Better control over traffic after a failure and more deterministic path computation of protection paths.
- Meet complex constraints and diversity requirements, such as maintaining diverse paths for LSPs, as well as their local protection paths.
- Ensure links are not overloaded during failure events.

Behavior of PCE-Initiated Bypass LSPs During PCEP Session Failure

At the time of a PCEP session failure, the PCE-initiated bypass LSPs become orphan until the expiration of the state timeout timer. The PCE-initiated bypass LSPs get cleaned up on the expiration of the state timeout timer. To obtain control of a PCE-initiated bypass LSP (after PCEP session fails), a PCE (either the primary PCE, or any secondary PCE) sends a PCInitiate message before the expiration of the state timeout timer.

PCE-Initiated Point-to-Multipoint LSPs

With the introduction of point-to-multipoint PCE-initiated LSPs, a PCE can initiate and provision a point-to-multipoint LSP dynamically without the need for local LSP configuration on the PCC. This enables the PCE to control the timing and sequence of the point-to-multipoint path computations within and across Path Computation Element Protocol (PCEP) sessions, thereby creating a dynamic network that is centrally controlled and deployed.

For more information, see [“Understanding Path Computation Element Protocol for MPLS RSVP-TE with Support for PCE-Initiated Point-to-Multipoint LSPs” on page 1420.](#)

Auto-Bandwidth and PCE-Controlled LSP

Starting in Junos OS Release 14.2R4, support of auto-bandwidth is provided for PCE-controlled LSPs. In earlier releases, the auto-bandwidth option did not apply to PCE-controlled LSPs, although LSPs under the control of auto-bandwidth and constraint-based routing could coexist with PCE-controlled LSPs. The statistics collection for auto-bandwidth was taking effect only when the control mode of a PCE-controlled LSP changes from external to local. This was happening in cases such as no connectivity to a PCE or when a PCE returns delegation of LSPs back to the PCC.

TCP-MD5 Authentication for PCEP Sessions

A stateful PCE server automates the creation of traffic engineering paths across the network, increasing network utilization and enabling a customized programmable networking experience with the use of PCEP communication with a PCC. A PCC sends LSP reports to a PCE server, and the PCE updates or provisions LSPs back to the PCC. The data sent over a PCEP session is crucial for a PCE server to perform external

path computing. As a result, an attack on the PCEP communication can disrupt network services. If altered PCEP messages are sent to a PCC, inappropriate LSPs can be set up. Similarly, if altered PCEP messages are sent to a PCE, an incorrect view of the network is learned by the PCE.

Considering the significance of the PCEP communication between a PCE and PCC in executing the PCE functionalities effectively, Junos OS Release 16.1 introduces the feature of securing a PCEP session using TCP-MD5 authentication as per RFC 5440. This feature protects the communication between a PCE and PCC over a PCEP session, which might be subject to an attack, and can disrupt network services.

To enable the MD5 security mechanism for a PCEP session, it is recommended that you define and bind the MD5 authentication key at the **[edit protocols pcep pce pce-id]** hierarchy level for a PCEP session. You can, however, also use a predefined keychain from the **[edit security authentication-key-chains key-chain]** hierarchy level to secure a PCEP session. In this case, you should bind the predefined keychain into the PCEP session at the **[edit protocols pcep pce pce-id]** hierarchy level.

The following configuration is executed on the PCC to establish a secure PCEP session with a PCE:

- Using MD5 authentication key:

```
[edit protocols pcep pce pce-id]
user@PCC# set authentication-key key
```

- Using predefined authentication keychain:

```
[edit protocols pcep pce pce-id]
user@PCC# set authentication-key-chain key-chain
user@PCC# set authentication-algorithm md5
```

For secure PCEP sessions to be established successfully, the MD5 authentication should be configured with the pre-shared authentication key on both the PCE server and the PCC. The PCE and PCC use the same key to verify the authenticity of each segment sent on the TCP connection of the PCEP session.

NOTE:

- Junos OS Release 16.1 supports only TCP-MD5 authentication for PCEP sessions, without extending support for TLS and TCP-AO, such as protection against eavesdropping, tampering, and message forgery.
- Initial application of security mechanism to a PCEP session causes the session to reset.
- If MD5 is misconfigured or not configured on one side of the PCEP session, the session does not get established. Verify that the configurations on the PCC and PCE are matching.
- This feature does not provide support for any session authentication mechanism.
- To view the authentication keychain used by the PCEP session, use the **show path-computation-client status** and **show protocols pcep** command outputs.
- Use the **show system statistics tcp | match auth** command to view the number of packets that get dropped by TCP because of authentication errors.
- Operation of the keychain can be verified by using the **show security keychain detail** command output.

Impact of Client-Side PCE Implementation on Network Performance

The maintenance of a stateful database can be non-trivial. In a single centralized PCE environment, a stateful PCE simply needs to remember all the TE LSPs that the PCE has computed, the TE LSPs that were actually set up (if this can be known), and when the TE LSPs were torn down. However, these requirements cause substantial control protocol overhead in terms of state, network usage and processing, and optimizing links globally across the network. Thus, the concerns of a stateful PCE implementation include:

- Any reliable synchronization mechanism results in significant control plane overhead. PCEs might synchronize state by communicating with each other, but when TE LSPs are set up using distributed computation performed among several PCEs, the problems of synchronization and race condition avoidance become larger and more complex.
- Out-of-band traffic engineering database synchronization can be complex with multiple PCEs set up in a distributed PCE computation model, and can be prone to race conditions, scalability concerns, and so on.
- Path calculations incorporating total network state is highly complex, even if the PCE has detailed information on all paths, priorities, and layers.

In spite of the above concerns, the partial client-side implementation of the stateful PCE is extremely effective in large traffic engineering systems. It provides rapid convergence and significant benefits in terms of optimal resource usage, by providing the requirement for global visibility of a TE LSP state and for ordered control of path reservations across devices within the system being controlled.

Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE

IN THIS SECTION

- [Requirements | 1367](#)
- [Overview | 1367](#)
- [Configuration | 1370](#)
- [Verification | 1377](#)

This example shows how to enable external path computing by a Path Computation Element (PCE) for traffic engineered label-switched paths (TE LSPs) on a Path Computation Client (PCC). It also shows how to configure the Path Computation Element Protocol (PCEP) on the PCC to enable PCE to PCC communication.

Requirements

This example uses the following hardware and software components:

- Three routers that can be a combination of ACX Series routers, M Series Multiservice Edge Routers, MX Series 5G Universal Routing Platforms, T Series Core Routers, or PTX Series Transport Router, one of which is configured as a PCC.
- A TCP connection to an external stateful PCE from the PCC.
- Junos OS Release 12.3 or later running on the PCC along with the JSDN add-on package.

NOTE: The JSDN add-on package is required to be installed along with the core Junos OS installation package.

Before you begin:

1. Configure the device interfaces.
2. Configure MPLS and RSVP-TE.
3. Configure IS-IS or any other IGP protocol.

Overview

Starting with Junos OS Release 12.3, the MPLS RSVP-TE functionality is extended to provide a partial client-side implementation of the stateful PCE architecture (draft-ietf-pce-stateful-pce) on a PCC.

NOTE: The partial client-side implementation of the stateful PCE architecture is based on version 2 of Internet draft draft-ietf-pce-stateful-pce. Starting with Junos OS Release 16.1, this implementation is upgraded to support version 7, as defined in Internet draft draft-ietf-pce-stateful-pce-07. Releases prior to 16.1 support the older version of the PCE draft, causing interoperability issues between a PCC running a previous release and a stateful PCE server that adheres to Internet draft draft-ietf-pce-stateful-pce-07.

To enable external path computing by a PCE, include the **lsp-external-controller** statement on the PCC at the **[edit mpls]** and **[edit mpls lsp lsp-name]** hierarchy levels.

```
lsp-external-controller pccd;
```

An LSP configured with the **lsp-external-controller** statement is referred to as a PCE-controlled LSP and is under the external control of a PCE by default. An active stateful PCE can override the parameters set from the CLI, such as bandwidth, path (ERO), and priority, for such PCE-controlled LSPs of the PCC.

To enable PCE to PCC communication, configure PCEP on the PCC at the **[edit protocols]** hierarchy level.

```
pcep { ... }
```


When configuring PCEP on a PCC, be aware of the following considerations:

- The JSDN add-on package is required to be installed along with the core Junos OS installation package.
- Junos OS Release 12.3 supports only stateful PCEs.
- A PCC can connect to a maximum of 10 stateful PCEs. At any given point in time, there can be only one main PCE (the PCE with the lowest priority value, or the PCE that connects to the PCC first in the absence of a PCE priority) to which the PCC delegates LSPs for path computation.
- For Junos OS Release 12.3, the PCC always initiates the PCEP sessions. PCEP sessions initiated by remote PCEs are not accepted by the PCC.
- Existing LSP features, such as LSP protection and make-before-break, work for PCE-controlled LSPs.
- The auto-bandwidth option is turned off for PCE-controlled LSPs, although LSPs under the control of auto-bandwidth and constraint-based routing can coexist with PCE-controlled LSPs.
- PCE-controlled LSPs can be referred to by other CLI configurations, such as `lsp-nexthop` to routes, forwarding adjacencies, CCC connections, and logical tunnels.
- PCE-controlled LSPs do not support GRES.
- PCE-controlled LSPs under logical-systems are not supported.
- PCE-controlled LSPs cannot be point-to-multipoint LSPs.

- Bidirectional LSPs are not supported.
- PCE-controlled LSPs cannot have secondary paths without a primary path.
- PCE-controlled LSPs depend on external path computation, which impacts overall setup time, reroutes, and make-before-break features.
- Setup time and convergence time (reroute, MBB) for existing LSPs is the same as in previous releases, in the absence of PCE-controlled LSPs. However, a small impact is seen in the presence of PCE-controlled LSPs.
- ERO computation time is expected to be significantly higher than local-CSPF.

Topology

Figure 118: Configuring PCEP for MPLS RSVP-TE

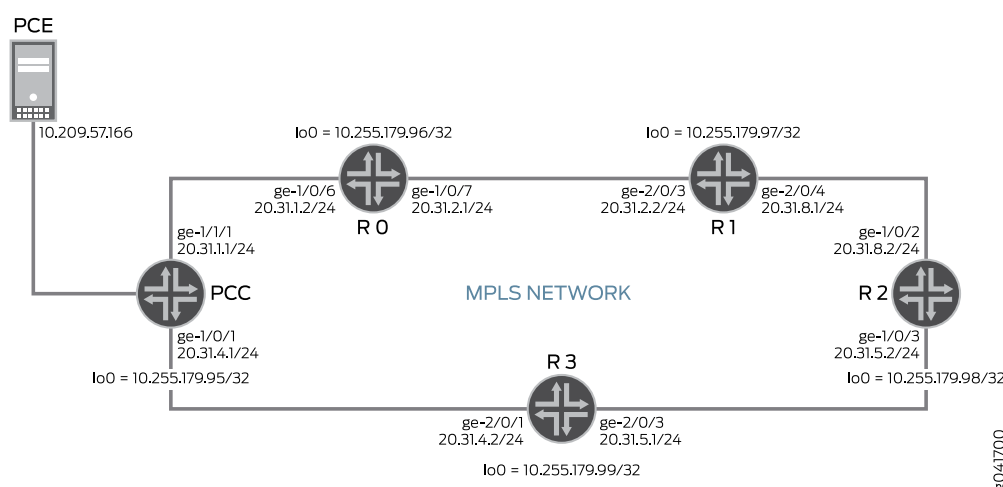

In this example, PCC is the ingress router that connects to the external active stateful PCE.

The external LSPs of Router PCC are computed as follows:

1. Router PCC receives the LSP tunnel configuration that was set up using the CLI. Assuming that the received configuration is enabled with external path computing, Router PCC becomes aware that some of the LSP attributes – bandwidth, path, and priority – are under the control of the stateful PCE and delegates the LSP to the PCE.

In this example, the external LSP is called **PCC-to-R2** and it is being set up from Router PCC to Router R2. The CLI-configured ERO for **PCC-to-R2** is PCC-R0-R1-R2. The bandwidth for **PCC-to-R2** is 10m, and both the setup and hold priority values are 4.

2. Router PCC tries to retrieve the PCE-controlled LSP attributes. To do this, Router PCC sends out a PCRpt message to the stateful PCE stating that the LSP has been configured. The PCRpt message communicates the status of the LSP and contains the local configuration parameters of the LSP.

3. The stateful PCE modifies one or more of the delegated LSP attributes and sends the new LSP parameters to Router PCC through the PCUpd message.
4. On receiving the new LSP parameters, Router PCC sets up a new LSP and re-signals it using the PCE-provided path.

In this example, the PCE-provided ERO for **PCC-to-R2** is PCC-R3-R2. The bandwidth for **PCC-to-R2** is 8m, and both the setup and hold priority values are 3.

5. Router PCC sends a PCRpt with the new RRO to the stateful PCE.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

PCC

```

set interfaces ge-1/0/1 unit 0 family inet address 20.31.4.1/24
set interfaces ge-1/0/1 unit 0 family iso
set interfaces ge-1/0/1 unit 0 family mpls
set interfaces ge-1/1/1 unit 0 family inet address 20.31.1.1/24
set interfaces ge-1/1/1 unit 0 family iso
set interfaces ge-1/1/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.179.95/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls lsp-external-controller pccd
set protocols mpls label-switched-path PCC-to-R2 to 10.255.179.98
set protocols mpls label-switched-path PCC-to-R2 bandwidth 10m
set protocols mpls label-switched-path PCC-to-R2 priority 4 4
set protocols mpls label-switched-path PCC-to-R2 primary to-R2-path
set protocols mpls label-switched-path PCC-to-R2 lsp-external-controller pccd
set protocols mpls path to-R2-path 20.31.1.2 strict
set protocols mpls path to-R2-path 20.31.2.2 strict
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols isis level 1 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable

```

```

set protocols isis interface lo0.0
set protocols pcep pce pce1 destination-ipv4-address 10.209.57.166
set protocols pcep pce pce1 destination-port 4189
set protocols pcep pce pce1 pce-type active
set protocols pcep pce pce1 pce-type stateful

```

R0

```

set interfaces ge-1/0/6 unit 0 family inet address 20.31.1.2/24
set interfaces ge-1/0/6 unit 0 family iso
set interfaces ge-1/0/6 unit 0 family mpls
set interfaces ge-1/0/7 unit 0 family inet address 20.31.2.1/24
set interfaces ge-1/0/7 unit 0 family iso
set interfaces ge-1/0/7 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.179.96/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols isis level 1 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0

```

R1

```

set system ports console log-out-on-disconnect
set interfaces ge-2/0/3 unit 0 family inet address 20.31.2.2/24
set interfaces ge-2/0/3 unit 0 family iso
set interfaces ge-2/0/3 unit 0 family mpls
set interfaces ge-2/0/4 unit 0 family inet address 20.31.8.1/24
set interfaces ge-2/0/4 unit 0 family iso
set interfaces ge-2/0/4 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.179.97/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all

```

```

set protocols mpls interface fxp0.0 disable
set protocols isis level 1 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0

```

R2

```

set interfaces ge-1/0/2 unit 0 family inet address 20.31.8.2/24
set interfaces ge-1/0/2 unit 0 family iso
set interfaces ge-1/0/2 unit 0 family mpls
set interfaces ge-1/0/3 unit 0 family inet address 20.31.5.2/24
set interfaces ge-1/0/3 unit 0 family iso
set interfaces ge-1/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.179.98/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols isis level 1 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0

```

R3

```

set interfaces ge-2/0/1 unit 0 family inet address 20.31.4.2/24
set interfaces ge-2/0/1 unit 0 family iso
set interfaces ge-2/0/1 unit 0 family mpls
set interfaces ge-2/0/3 unit 0 family inet address 20.31.5.1/24
set interfaces ge-2/0/3 unit 0 family iso
set interfaces ge-2/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.179.99/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable

```

```

set protocols isis level 1 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Router PCC:

NOTE: Repeat this procedure for every Juniper Networks ingress router in the MPLS domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

1. Configure the interfaces.

To enable MPLS, include the protocol family on the interface so that the interface does not discard incoming MPLS traffic.

```

[edit interfaces]
user@PCC# set ge-1/0/1 unit 0 family inet address 20.31.4.1/24
user@PCC# set ge-1/0/1 unit 0 family iso
user@PCC# set ge-1/0/1 unit 0 family mpls
user@PCC# set ge-1/1/1 unit 0 family inet address 20.31.1.1/24
user@PCC# set ge-1/1/1 unit 0 family iso
user@PCC# set ge-1/1/1 unit 0 family mpls
user@PCC# set lo0 unit 0 family inet address 10.255.179.95/32

```

2. Enable RSVP on all interfaces of Router PCC, excluding the management interface.

```

[edit protocols]
user@PCC# set rsvp interface all
user@PCC# set rsvp interface fxp0.0 disable

```

3. Configure the label-switched path (LSP) from Router PCC to Router R2 and enable external control of LSPs by the PCE.

```
[edit protocols]
user@PCC# set mpls lsp-external-controller pccd
user@PCC# set mpls label-switched-path PCC-to-R2 to 10.255.179.98/32
user@PCC# set mpls label-switched-path PCC-to-R2 bandwidth 10m
user@PCC# set protocols mpls label-switched-path PCC-to-R2 priority 4 4
user@PCC# set protocols mpls label-switched-path PCC-to-R2 primary to-R2-path
user@PCC# set protocols mpls label-switched-path PCC-to-R2 lsp-external-controller pccd
```

4. Configure the LSP from Router PCC to Router R2, which has local control and is overridden by the PCE-provided LSP parameters.

```
[edit protocols]
user@PCC# set mpls path to-R2-path 20.31.1.2/30 strict
user@PCC# set mpls path to-R2-path 20.31.2.2/30 strict
```

5. Enable MPLS on all interfaces of Router PCC, excluding the management interface.

```
[edit protocols]
user@PCC# set mpls interface all
user@PCC# set mpls interface fxp0.0 disable
```

6. Configure IS-IS on all interfaces of Router PCC, excluding the management interface.

```
[edit protocols]
user@PCC# set isis level 1 disable
user@PCC# set isis interface all
user@PCC# set isis interface fxp0.0 disable
user@PCC# set isis interface lo0.0
```

7. Define the PCE that Router PCC connects to, and configure the IP address of the PCE.

```
[edit protocols]
user@PCC# set pcep pce pce1 destination-ipv4-address 10.209.57.166
```

8. Configure the destination port for Router PCC that connects to a PCE using the TCP-based PCEP.

```
[edit protocols]
user@PCC# set pcep pce pce1 destination-port 4189
```

9. Configure the PCE type.

```
[edit protocols]
user@PCC# set pcep pce pce1 pce-type active
user@PCC# set pcep pce pce1 pce-type stateful
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PCC# show interfaces
ge-1/0/1 {
  unit 0 {
    family inet {
      address 20.31.4.1/24;
    }
    family iso;
    family mpls;
  }
}
ge-1/1/1 {
  unit 0 {
    family inet {
      address 20.31.1.1/24;
    }
    family iso;
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.179.95/32;
    }
  }
}
```

```
user@PCC# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
```

```

        disable;
    }
}
mpls {
    lsp-external-controller pccd;
    label-switched-path PCC-to-R2 {
        to 10.255.179.98;
        bandwidth 10m;
        priority 4 4;
        primary to-R2-path;
        lsp-external-controller pccd;
    }
    path to-R2-path {
        20.31.1.2 strict;
        20.31.2.2 strict;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
}
isis {
    level 1 disable;
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}
pcep {
    pce pce1 {
        destination-ipv4-address 10.209.57.166;
        destination-port 4189;
        pce-type active stateful;
    }
}
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Verifying the PCEP Session Status | 1377](#)
- [Verifying the PCE-Controlled LSP Status When LSP Control Is External | 1378](#)
- [Verifying the PCE-Controlled LSP Status When LSP Control Is Local | 1380](#)

Confirm that the configuration is working properly.

Verifying the PCEP Session Status

Purpose

Verify the PCEP session status between the PCE and Router PCC when the PCE status is up.

Action

From operational mode, run the **show path-computation-client active-pce** command.

user@PCC> show path-computation-client active-pce

```
PCE pce1
General
  IP address          : 10.209.57.166
  Priority             : 0
  PCE status          : PCE_STATE_UP
  Session type        : PCE_TYPE_STATEFULACTIVE
  PCE-mastership      : main

Counters
  PCReqs              Total: 0          last 5min: 0          last hour: 0
  PCReps              Total: 0          last 5min: 0          last hour: 0
  PCRpts              Total: 5          last 5min: 5          last hour: 5
  PCUpdates           Total: 1          last 5min: 1          last hour: 1

Timers
  Local               Keepalive timer: 30 [s]  Dead timer: 120 [s]
  Remote              Keepalive timer: 30 [s]  Dead timer: 120 [s]
```

```

Errors
  PCErr-recv
  PCErr-sent
  PCE-PCC-NTFS
  PCC-PCE-NTFS

```

Meaning

The output displays information about the current active stateful PCE that Router PCC is connected to. The **PCE status** output field indicates the current status of the PCEP session between the PCE and Router PCC.

For **pce1**, the status of the PCEP session is **PCE_STATE_UP**, which indicates that the PCEP session has been established between the PCEP peers.

The statistics of **PCRpts** indicate the number of messages sent by Router PCC to the PCE to report the current status of LSPs. The **PCUpdates** statistics indicate the number of messages received by Router PCC from the PCE. The **PCUpdates** messages include the PCE modified parameters for the PCE-controlled LSPs.

Verifying the PCE-Controlled LSP Status When LSP Control Is External

Purpose

Verify the status of the PCE-controlled LSP from Router PCC to Router R2 when the LSP is under external control.

Action

From operational mode, run the **show mpls lsp name PCC-to-R2 extensive** command.

```
user@PCC> show mpls lsp name PCC-to-R2 extensive
```

```

Ingress LSP: 1 sessions

10.255.179.98
  From: 10.255.183.59, State: Up, ActiveRoute: 0, LSpname: PCC-to-R2
  ActivePath: to-R2-path (primary)
LSPTYPE: Externally controlled, Penultimate hop popping
LSP Control Status: Externally controlled
    LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary  to-R2-path      State: Up
  Priorities: 3 3
  Bandwidth: 8Mbps

```

```

SmartOptimizeTimer: 180
  No computed ERO.
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    20.31.4.2 20.31.5.2
  21 Mar 11 05:00:56.736 EXTCTRL LSP: Sent Path computation request and LSP status

  20 Mar 11 05:00:56.736 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  19 Mar 11 05:00:56.735 Selected as active path
  18 Mar 11 05:00:56.734 EXTCTRL LSP: Sent Path computation request and LSP status

  17 Mar 11 05:00:56.734 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  16 Mar 11 05:00:56.734 Record Route: 20.31.4.2 20.31.5.2
  15 Mar 11 05:00:56.734 Up
  14 Mar 11 05:00:56.713 EXTCTRL LSP: Sent Path computation request and LSP status

  13 Mar 11 05:00:56.713 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  12 Mar 11 05:00:56.712 Originate Call
  11 Mar 11 05:00:56.712 EXTCTRL_LSP: Received setup parameters : 20.31.4.2
20.31.5.2
  10 Mar 11 05:00:49.283 EXTCTRL LSP: Sent Path computation request and LSP status

  9 Mar 11 05:00:49.283 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  8 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  7 Mar 11 05:00:20.581 EXTCTRL LSP: Sent Path computation request and LSP status

  6 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  5 Mar 11 05:00:20.580 EXTCTRL_LSP: Control status became external
  4 Mar 11 05:00:03.716 EXTCTRL_LSP: Control status became local
  3 Mar 11 05:00:03.714 EXTCTRL LSP: Sent Path computation request and LSP status

  2 Mar 11 05:00:03.714 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  1 Mar 11 05:00:00.279 EXTCTRL LSP: Awaiting external controller connection
  Created: Mon Mar 11 05:00:00 2013
  Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions

```

```
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Meaning

In the output, the **LSPTYPE** and **LSP Control Status** output fields show that the LSP is externally controlled. The output also shows a log of the PCEP messages sent between Router PCC and the PCE.

The PCEP session between the PCE and Router PCC is up, and Router PCC receives the following PCE-controlled LSP parameters:

- ERO (path)—20.31.4.2 and 20.31.5.2
- Bandwidth—8Mbps
- Priorities—3 3 (setup and hold values)

Verifying the PCE-Controlled LSP Status When LSP Control Is Local

Purpose

Verify the status of the PCE-controlled LSP from Router PCC to Router R2 when the LSP control becomes local.

Action

From operational mode, run the **show mpls lsp name PCC-to-R2 extensive** command.

user@PCC> show mpls lsp name PCC-to-R2 extensive

```
Ingress LSP: 1 sessions

10.255.179.98
  From: 10.255.183.59, State: Up, ActiveRoute: 0, LSPname: PCC-to-R2
  ActivePath: to-R2-path (primary)
  LSPTYPE: Externally controlled, Penultimate hop popping
  LSP Control Status: Locally controlled
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary to-R2-path State: Up
  Priorities: 4 4 (ActualPriorities 3 3)
  Bandwidth: 10Mbps (ActualBandwidth: 8Mbps)
    SmartOptimizeTimer: 180
    No computed ERO.
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
```

20=Node-ID):

20.31.4.2 20.31.5.2

22 Mar 11 05:02:09.618 EXTCTRL_LSP: Control status became local

21 Mar 11 05:00:56.736 EXTCTRL LSP: Sent Path computation request and LSP status

20 Mar 11 05:00:56.736 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2

19 Mar 11 05:00:56.735 Selected as active path

18 Mar 11 05:00:56.734 EXTCTRL LSP: Sent Path computation request and LSP status

17 Mar 11 05:00:56.734 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2

16 Mar 11 05:00:56.734 Record Route: 20.31.4.2 20.31.5.2

15 Mar 11 05:00:56.734 Up

14 Mar 11 05:00:56.713 EXTCTRL LSP: Sent Path computation request and LSP status

13 Mar 11 05:00:56.713 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2

12 Mar 11 05:00:56.712 Originate Call

11 Mar 11 05:00:56.712 EXTCTRL_LSP: Received setup parameters : 20.31.4.2
20.31.5.2

10 Mar 11 05:00:49.283 EXTCTRL LSP: Sent Path computation request and LSP status

9 Mar 11 05:00:49.283 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2

8 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2

7 Mar 11 05:00:20.581 EXTCTRL LSP: Sent Path computation request and LSP status

6 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2

5 Mar 11 05:00:20.580 EXTCTRL_LSP: Control status became external

4 Mar 11 05:00:03.716 EXTCTRL_LSP: Control status became local

3 Mar 11 05:00:03.714 EXTCTRL LSP: Sent Path computation request and LSP status

2 Mar 11 05:00:03.714 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2

1 Mar 11 05:00:00.279 EXTCTRL LSP: Awaiting external controller connection

Created: Mon Mar 11 05:00:00 2013

Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Meaning

In the output, the **LSP Control Status** output field shows that the LSP is under local control. Although the PCE-controlled LSP is under local control, Router PCC continues to use the PCE-provided parameters, until the next opportunity to re-signal the LSP.

The output now displays the LSP parameters that were configured using the CLI along with the PCE-provided parameters used to establish the LSP as the actual values in use.

- Bandwidth—10Mbps (ActualBandwidth: 8Mbps)
- Priorities—4 4 (ActualPriorities 3 3)

On the trigger to re-signal the LSP, Router PCC uses the local configuration parameters to establish the PCE-controlled LSP.

user@PCC> show mpls lsp name PCC-to-R2 extensive externally-controlled

```
Ingress LSP: 1 sessions

10.255.179.98
  From: 10.255.183.59, State: Up, ActiveRoute: 0, LSPname: PCC-to-R2
  ActivePath: to-R2-path (primary)
  LSPTYPE: Externally controlled, Penultimate hop popping
  LSP Control Status: Locally controlled
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary to-R2-path State: Up
  Priorities: 4 4
  Bandwidth: 10Mbps
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
20.31.1.2 S 20.31.2.2 S 20.31.8.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    20.31.1.2 20.31.2.2 20.31.8.2
  28 Mar 11 05:02:51.787 Record Route: 20.31.1.2 20.31.2.2 20.31.8.2
  27 Mar 11 05:02:51.787 Up
  26 Mar 11 05:02:51.697 EXTCTRL_LSP: Applying local parameters with this
signalling attempt
  25 Mar 11 05:02:51.697 Originate Call
  24 Mar 11 05:02:51.696 Clear Call
```

```

23 Mar 11 05:02:51.696 CSPF: computation result accepted 20.31.1.2 20.31.2.2
20.31.8.2
22 Mar 11 05:02:09.618 EXTCTRL_LSP: Control status became local
21 Mar 11 05:00:56.736 EXTCTRL LSP: Sent Path computation request and LSP status

20 Mar 11 05:00:56.736 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
19 Mar 11 05:00:56.735 Selected as active path
18 Mar 11 05:00:56.734 EXTCTRL LSP: Sent Path computation request and LSP status

17 Mar 11 05:00:56.734 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
16 Mar 11 05:00:56.734 Record Route: 20.31.4.2 20.31.5.2
15 Mar 11 05:00:56.734 Up
14 Mar 11 05:00:56.713 EXTCTRL LSP: Sent Path computation request and LSP status

13 Mar 11 05:00:56.713 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
12 Mar 11 05:00:56.712 Originate Call
11 Mar 11 05:00:56.712 EXTCTRL_LSP: Received setup parameters : 20.31.4.2
20.31.5.2
10 Mar 11 05:00:49.283 EXTCTRL LSP: Sent Path computation request and LSP status

9 Mar 11 05:00:49.283 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
8 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
7 Mar 11 05:00:20.581 EXTCTRL LSP: Sent Path computation request and LSP status

6 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
5 Mar 11 05:00:20.580 EXTCTRL_LSP: Control status became external
4 Mar 11 05:00:03.716 EXTCTRL_LSP: Control status became local
3 Mar 11 05:00:03.714 EXTCTRL LSP: Sent Path computation request and LSP status

2 Mar 11 05:00:03.714 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
1 Mar 11 05:00:00.279 EXTCTRL LSP: Awaiting external controller connection
Created: Mon Mar 11 05:00:00 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

The **Computed ERO** is 20.31.1.2, 20.31.2.2, and 20.31.8.2. The PCE-controlled LSP is established using the local configuration parameters.

Example: Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support of PCE-Initiated Point-to-Point LSPs

IN THIS SECTION

- [Requirements | 1384](#)
- [Overview | 1384](#)
- [Configuration | 1386](#)
- [Verification | 1391](#)

This example shows how to configure the Path Computation Client (PCC) with the capability of supporting Path Computation Element (PCE)-initiated traffic-engineered point-to-point label-switched paths (LSPs).

Requirements

This example uses the following hardware and software components:

- Three routers that can be a combination of ACX Series, M Series, MX Series, or T Series routers.
- A TCP connection to two external stateful PCEs from the ingress router (PCC).
- Junos OS Release 16.1 or later running on the PCC.

Before you begin:

- Configure the device interfaces.
- Configure MPLS and RSVP-TE (RSVP-Traffic Engineering).
- Configure OSPF or any other IGP protocol.

Overview

Starting with Junos OS Release 16.1, the PCEP functionality is extended to allow a stateful PCE to initiate and provision traffic engineering LSPs through a PCC. Earlier, the LSPs were configured on the PCC and the PCC delegated control over the external LSPs to a PCE. The ownership of the LSP state was maintained by the PCC. With the introduction of the PCE-initiated LSPs, a PCE can initiate and provision a traffic

engineering point-to-point LSP dynamically without the need for a locally configured LSP on the PCC. On receiving a PCCreate message from a PCE, the PCC creates the PCE-initiated LSP and automatically delegates the LSP to the PCE.


When configuring the support of PCE-initiated point-to-point LSPs for a PCC, be aware of the following considerations:

- Junos OS Release 13.3 supports only stateful PCEs.
- For Junos OS Release 13.3, the PCC always initiates the PCEP sessions. PCEP sessions initiated by remote PCEs are not accepted by the PCC.
- Existing LSP features, such as LSP protection and make-before-break, work for PCE-initiated LSPs.
- PCE-initiated LSPs do not support graceful Routing Engine switchover (GRES).
- PCE-initiated LSPs under logical systems are not supported.
- PCE-initiated LSPs cannot be point-to-multipoint LSPs.
- Bidirectional LSPs are not supported.
- RSVP-TE for unnumbered links is not supported. PCE-initiated LSPs support only numbered links.
- The PCE initiating a segment routing LSP can use the binding segment ID (SID) labels associated with non-colored segment routing LSPs to provision the PCE-initiated segment routing LSP paths.

Starting in Junos OS Release 18.2R1, statically configured non-colored segment routing LSPs on the ingress device are reported to a PCE through a PCEP session. These non-colored segment routing LSPs may have binding SID labels associated with them. With this feature, the PCE can use this binding SID label in the label stack to provision PCE-initiated segment routing LSP paths.

Topology

Figure 119: Example PCE-Initiated Point-to-Point LSP for MPLS RSVP-TE

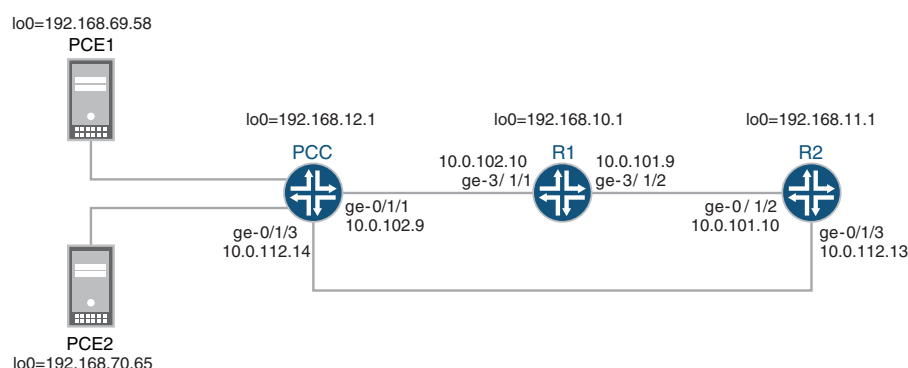

In this example, PCC is the ingress router that connects to two external stateful PCEs: PCE1 and PCE2.

When there is a new demand, the active stateful PCE dynamically initiates an LSP to meet the requirement. Since PCC is configured with the capability of supporting the PCE-initiated LSP, path computation on PCC is performed as follows:

1. A PCE sends a PCCreate message to the PCC to initiate and provision an LSP. The PCC sets up the PCE-initiated LSP using the parameters received from the PCE, and automatically delegates the PCE-initiated LSP to the PCE that initiated it.

In this example, PCE1 is the active stateful PCE that initiates and provisions the PCE-initiated LSP on PCC. On receiving the PCE-initiated LSP parameters, PCC sets up the LSP and automatically delegates the PCE-initiated LSP to PCE1.

2. When the PCEP session between PCC and PCE1 is terminated, PCC starts two timers for the PCE1-initiated LSP: delegation cleanup timeout and the LSP cleanup timer. During this time, PCE1 or PCE2 can acquire control of the PCE-initiated LSP.
3. If PCE2 acquires control over the PCE-initiated LSP before the expiration of the LSP cleanup timer, PCC delegates the PCE-initiated LSP to PCE2, and the LSP cleanup timer and the delegation cleanup timeout are stopped.
4. If the delegation cleanup timeout expired, and neither PCE1 nor PCE2 acquired control over the PCE-initiated LSP, PCC takes local control of the non-delegated PCE-initiated LSP until the expiration of the LSP cleanup timer.
5. After the expiration of the LSP cleanup timer, PCC deletes the PCE-initiated LSP provisioned by PCE1.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

PCC

```
set interfaces ge-0/1/1 unit 0 family inet address 10.0.102.9/24
set interfaces ge-0/1/1 unit 0 family iso
set interfaces ge-0/1/1 unit 0 family mpls
set interfaces ge-0/1/3 unit 0 family inet address 10.0.112.14/24
set interfaces ge-0/1/3 unit 0 family iso
set interfaces ge-0/1/3 unit 0 family mpls
```

```

set interfaces lo0 unit 0 family inet address 192.168.12.1/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls lsp-external-controller ppcd
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols pcep pce-group PCEGROUP pce-type active
set protocols pcep pce-group PCEGROUP pce-type stateful
set protocols pcep pce-group PCEGROUP lsp-provisioning
set protocols pcep pce-group PCEGROUP lsp-cleanup-timer 30
set protocols pcep pce PCE1 destination-ipv4-address 192.168.69.58
set protocols pcep pce PCE1 destination-port 4189
set protocols pcep pce PCE1 pce-group PCEGROUP
set protocols pcep pce PCE2 destination-ipv4-address 192.168.70.65
set protocols pcep pce PCE2 destination-port 4189
set protocols pcep pce PCE2 pce-group PCEGROUP

```

R1

```

set interfaces ge-3/1/1 unit 0 family inet address 10.0.102.10/24
set interfaces ge-3/1/1 unit 0 family iso
set interfaces ge-3/1/1 unit 0 family mpls
set interfaces ge-3/1/2 unit 0 family inet address 10.0.101.9/24
set interfaces ge-3/1/2 unit 0 family iso
set interfaces ge-3/1/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.168.10.1/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

R2

```

set interfaces ge-0/1/1 unit 0 family inet address 10.0.101.10/24
set interfaces ge-0/1/1 unit 0 family iso
set interfaces ge-0/1/1 unit 0 family mpls
set interfaces ge-0/1/3 unit 0 family inet address 10.0.112.13/24
set interfaces ge-0/1/3 unit 0 family iso
set interfaces ge-0/1/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.168.11.1/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure the PCC router:

NOTE: Repeat this procedure for every Juniper Networks ingress router in the MPLS domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

1. Configure the interfaces.

To enable MPLS, include the protocol family on the interface so that the interface does not discard incoming MPLS traffic.

```

[edit interfaces]
user@PCC# set ge-0/1/1 unit 0 family inet address 10.0.102.9/24
user@PCC# set ge-0/1/1 unit 0 family iso
user@PCC# set ge-0/1/1 unit 0 family mpls
user@PCC# set ge-0/1/3 unit 0 family inet address 10.0.112.14/24
user@PCC# set ge-0/1/3 unit 0 family iso
user@PCC# set ge-0/1/3 unit 0 family mpls
user@PCC# set lo0 unit 0 family inet address 192.168.12.1/32

```

2. Enable RSVP on all interfaces of the PCC, excluding the management interface.

```
[edit protocols]
user@PCC# set rsvp interface all
user@PCC# set rsvp interface fxp0.0 disable
```

3. Enable external control of LSPs by the PCEs.

```
[edit protocols]
user@PCC# set mpls lsp-external-controller pccd
```

4. Enable MPLS on all interfaces of the PCC, excluding the management interface.

```
[edit protocols]
user@PCC# set mpls interface all
user@PCC# set mpls interface fxp0.0 disable
```

5. Configure OSPF on all interfaces of the PCC, excluding the management interface.

```
[edit protocols]
user@PCC# set ospf traffic-engineering
user@PCC# set ospf area 0.0.0.0 interface all
user@PCC# set ospf area 0.0.0.0 interface fxp0.0 disable
user@PCC# set ospf interface lo0.0
```

6. Define the PCE group and enable support of PCE-initiated LSPs for the PCE group.

```
[edit protocols]
user@PCC# set protocols pcep pce-group PCEGROUP pce-type active
user@PCC# set protocols pcep pce-group PCEGROUP pce-type stateful
user@PCC# set protocols pcep pce-group PCEGROUP lsp-provisioning
user@PCC# set protocols pcep pce-group PCEGROUP lsp-cleanup-timer 30
```

7. Define the PCEs that connect to the PCC.

```
[edit protocols]
user@PCC# set pcep pce PCE1 destination-ipv4-address 192.168.69.58
user@PCC# set pcep pce PCE1 destination-port 4189
user@PCC# set pcep pce PCE1 pce-group PCEGROUP
```

```

user@PCC# set pcep pce PCE2 destination-ipv4-address 192.168.70.65
user@PCC# set pcep pce PCE2 destination-port 4189
user@PCC# set pcep pce PCE2 pce-group PCEGROUP

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@PCC# show interfaces
ge-0/1/1 {
  unit 0 {
    family inet {
      address 10.0.102.9/24;
    }
    family iso;
    family mpls;
  }
}
ge-0/1/3 {
  unit 0 {
    family inet {
      address 10.0.112.14/24;
    }
    family iso;
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.168.12.1/32;
    }
  }
}

```

```

user@PCC# show protocols
rsvp {
  interface all;
}
interface fxp0.0 {

```

```

        disable;
    }
}
mpls {
    lsp-external-controller pccd;
    interface all;
    interface fxp0.0 {
        disable;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
pce-group PCEGROUP {
    pce-type active stateful;
    lsp-provisioning;
    lsp-cleanup-timer 30;
}
pce PCE1 {
    destination-ipv4-address 192.168.69.58;
    destination-port 4189;
    pce-group PCEGROUP;
}
pce PCE2 {
    destination-ipv4-address 192.168.70.65;
    destination-port 4189;
    pce-group PCEGROUP;
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Verifying PCC Status | 1392](#)
- [Verifying PCE1 Status | 1392](#)
- [Verifying the PCE-Initiated LSP Status When the LSP Is Externally Provisioned | 1394](#)

Confirm that the configuration is working properly.

Verifying PCC Status

Purpose

Verify the PCEP session status and LSP summary between the PCC and the connected PCEs.

Action

From operational mode, run the **show path-computation-client status** command.

```
user@PCC# show path-computation-client status
```

Session	Type	Provisioning	Status
PCE1	Stateful Active	On	Up
PCE2	Stateful Active	On	Up


```
LSP Summary
Total number of LSPs      : 1
Static LSPs               : 0
Externally controlled LSPs : 0
Externally provisioned LSPs : 1/16000 (current/limit)
Orphaned LSPs             : 0
```



```
PCE1 (main)
Delegated                  : 1
Externally provisioned    : 1
PCE2
Delegated                  : 0
Externally provisioned    : 0
```

Meaning

The output displays the status of the PCEP session between the active stateful PCEs and the PCC. It also displays information about the different types of LSPs on the PCC, and the number of LSPs provisioned by the connected PCEs and delegated to them.

PCE1 is the main active PCE and has one PCE-initiated LSP that has been automatically delegated to it by the PCC.

Verifying PCE1 Status

Purpose

Verify the status of the main active stateful PCE.

Action

From operational mode, run the **show path-computation-client active-pce detail** command.

user@PCC# **show path-computation-client active-pce**

```
PCE PCE1
-----
General
  IP address           : 192.168.69.58
  Priority              : 0
  PCE status           : PCE_STATE_UP
  Session type         : PCE_TYPE_STATEFULACTIVE
  LSP provisioning allowed : On
  LSP cleanup timer     : 30 [s]
  PCE-mastership       : main
  Max unknown messages  : 5
  Keepalives received   : 0
  Keepalives sent      : 0
  Dead timer           : 0 [s]
  Elapsed as main current : 1 [s]
  Elapsed as main total  : 446380 [s]
  Unknown msgs/min rate : 0
  Session failures      : 2198
  Corrupted messages    : 0
  Delegation timeout set : 30
  Delegation timeout in  : 0 [s]
  Delegation failures    : 0
  Connection down       : 167092 [s]

Counters
  PCReqs               Total: 0          last 5min: 0          last hour: 0
  PCReps               Total: 0          last 5min: 0          last hour: 0
  PCRpts               Total: 5          last 5min: 5          last hour: 5
  PCUpdates            Total: 0          last 5min: 0          last hour: 0
  PCCreates            Total: 1          last 5min: 1          last hour: 1

Timers
  Local  Keepalive timer: 30 [s]  Dead timer: 120 [s]  LSP cleanup timer:
30 [s]
```

```

Remote Keepalive timer:    0 [s]  Dead timer:    0 [s]  LSP cleanup timer:
- [s]

Errors
  PCErr-recv
  PCErr-sent
  PCE-PCC-NTFS
  PCC-PCE-NTFS

```

Meaning

The output displays information about the current active stateful PCE to which the PCC is connected. The **PCE status** output field indicates the current status of the PCEP session between a PCE and PCC.

For PCE1, the status of the PCEP session is **PCE_STATE_UP**, which indicates that the PCEP session has been established with the PCC.

Verifying the PCE-Initiated LSP Status When the LSP Is Externally Provisioned

Purpose

Verify the status of the PCE-initiated LSP.

Action

From operational mode, run the **show mpls lsp externally-provisioned detail** command.

```
user@PCC# show mpls lsp externally-provisioned detail
```

```

Ingress LSP: 1 sessions

10.0.101.10
  From: 10.0.102.9, State: Up, ActiveRoute: 0, LSPname: lsp15
  ActivePath: path1 (primary)
  Link protection desired
  LSPTYPE: Externally Provisioned, Penultimate hop popping
  LSP Control Status: Externally controlled
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary   path1           State: Up
    Priorities: 7 0
    Bandwidth: 8Mbps
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.0.102.10 S 10.0.101.9 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node

```

```
10=SoftPreempt 20=Node-ID):
10.0.102.10 S 10.0.101.9 S
```

Meaning

In the output, the **LSPtype** output field shows that the LSP is externally provisioned.

The PCEP session between PCC and PCE1 is up, and the PCC receives the following PCE-initiated LSP parameters:

- ERO (path)—10.0.102.10 and 10.0.101.9
- Bandwidth—8 Mbps
- Priority—7 0 (setup and hold values)

Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support of PCE-Initiated Point-to-Point LSPs

You can configure a Path Computation Client (PCC) with the capability of supporting dynamically created label switched paths (LSPs) from a centralized external path computing entity. A stateful Path Computaiton Element (PCE) can be used to perform external path computation and generate dynamic LSPs when there is an increase in demand.

A PCC creates the PCE-initiated point-to-point LSP using the PCE-provided LSP parameters, or parameters from a pre-configured LSP template when the PCE does not provision the LSP, and automatically delegates the PCE-initiated point-to-point LSP to the respective PCE. As a result, for PCE-initiated LSPs, there is no need for a locally configured LSP on the PCC.

A CLI-controlled LSP, PCE-controlled LSP, and PCE-initiated LSP can coexist with each other on a PCC.

Before you begin:

- Configure the device interfaces.
- Configure MPLS and RSVP-TE.
- Configure OSPF or any other IGP protocol.

To configure PCC to support PCE-initiated point-to-point LSPs, complete the following tasks:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@PCC# edit protocols pcep
```

2. Specify the number of messages per minute that the PCC can receive at maximum.

```
[edit protocols pcep]
user@PCC# set message-rate-limit messages-per-minute
```

3. Specify the number of externally provisioned label switched paths (LSPs) over all connected PCEs that the PCC can accept at maximum.

```
[edit protocols pcep]
user@PCC# set max-provisioned-lsps max-count
```

4. Specify the unique user defined ID for the connected PCE to configure the PCE parameters.

```
[edit protocols pcep]
user@PCC# edit pce pce-id
```

5. Specify the amount of time (in seconds) that the PCC must wait before returning control of LSPs to the routing protocol process after a PCEP session is disconnected.

```
[edit protocols pcep pce pce-id]
user@PCC# set delegation-cleanup-timeout seconds
```

6. Specify the IPv4 address of the PCE to connect with.

```
[edit protocols pcep pce pce-id]
user@PCC# set destination-ipv4-address ipv4-address
```

7. Specify the TCP port number that the PCE is using

```
[edit protocols pcep pce pce-id]
user@PCC# set destination-port port-number
```

The value can range from 1 through 65535 and the default value is 4189.

8. Specify the amount of time (in seconds) that the PCC must wait before deleting any non-delegated PCE-initiated LSPs from the failed PCE after a PCEP session terminates.

```
[edit protocols pcep pce pce-id]
```

```
user@PCC# set lsp-cleanup-timer seconds
```

9. Configure the PCC to accept SPs that are externally provisioned by connected PCEs. By default, the PCC rejects PCE-initiated LSPs.

```
[edit protocols pcep pce pce-id]  
user@PCC# set lsp-provisioning
```

10. Specify the number of unknown messages per minute that the PCC can receive at maximum after which the PCEP session is closed.

```
[edit protocols pcep pce pce-id]  
user@PCC# set max-unknown-messages messages-per-minute
```

The value can range from 1 through 16384, and the default value is 0 (disabled or no limit).

11. Specify the number of unknown requests per minute that the PCC can receive at maximum after which the PCEP session is terminated.

```
[edit protocols pcep pce pce-id]  
user@PCC# set max-unknown-requests requests-per-minute
```

The value can range from 0 through 16384, and the default value is 5. A value of 0 disables this statement.

12. Configure the PCE type.

```
[edit protocols pcep pce pce-id]  
user@PCC# set pce-type active stateful
```

13. Specify the amount of time (in seconds) that the PCC must wait for a reply before resending a request.

```
[edit protocols pcep pce pce-id]  
user@PCC# set request-timer seconds
```

The value can range from 0 through 65535 seconds.

14. Verify and commit the configuration.

```
user@PCC# show
user@PCC# commit
```

Sample Output

```
[edit]
user@PCC# edit protocols pcep

[edit protocols pcep]
user@PCC# set message-rate-limit 50

[edit protocols pcep]
user@PCC# set max-provisioned-lsps 16000

[edit protocols pcep]
user@PCC# edit pce PCE

[edit protocols pcep pce PCE]
user@PCC# set delegation-cleanup-timeout 20

[edit protocols pcep pce PCE]
user@PCC# set destination-ipv4-address 192.168.69.58

[edit protocols pcep pce PCE]
user@PCC# set destination-port 4189

[edit protocols pcep pce PCE]
user@PCC# set lsp-cleanup-timer 50

[edit protocols pcep pce PCE]
user@PCC# set lsp-provisioning

[edit protocols pcep pce PCE]
user@PCC# set max-unknown-messages 5

[edit protocols pcep pce PCE]
user@PCC# set max-unknown-requests 5

[edit protocols pcep pce PCE]
user@PCC# set request-timer 50

[edit protocols pcep pce PCE]
user@PCC# up
```

```

[edit protocols pcep]
user@PCC# show
message-rate-limit 50;
max-provisioned-lsps 16000;
pce PCE {
    destination-ipv4-address 192.168.69.58;
    destination-port 4189;
    lsp-provisioning;
    lsp-cleanup-timer 50;
    request-timer 50;
    max-unknown-requests 5;
    max-unknown-messages 5;
    delegation-cleanup-timeout 20;
}

[edit protocols pcep]
user@PCC# commit
commit complete

```

Example: Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support for PCE-Controlled Point-to-Multipoint LSPs

IN THIS SECTION

- [Requirements | 1399](#)
- [Overview | 1400](#)
- [Configuration | 1401](#)
- [Verification | 1414](#)

This example shows how to configure the Path Computation Client (PCC) with the capability of reporting point-to-multipoint traffic engineered label-switched paths (TE LSPs) to a Path Computation Element (PCE).

Requirements

This example uses the following hardware and software components:

- Three routers that can be a combination of ACX Series, M Series, MX Series, or T Series routers.
- One virtual machine configured with Virtual Route Reflector (VRR) feature.

- A TCP connection to an external stateful PCE from the VRR.
- Junos OS Release 16.1 or later running on the PCC.

Before you begin:

- Configure the device interfaces.
- Configure MPLS and RSVP-TE.
- Configure OSPF or any other IGP protocol.


Overview

After a PCEP session is established between a PCE and a PCC, the PCC reports all the LSPs in the system to the PCE for LSP state synchronization. This includes PCC-controlled, PCE-delegated, and PCE-initiated point-to-point LSPs. Starting with Junos OS Release 15.1F6 and 16.1R1, this capability is extended to report point-to-multipoint LSPs as well.

By default, PCE control of point-to-multipoint LSPs is not supported on a PCC. To add this capability, include the **p2mp-lsp-report-capability** statement at the **[edit protocols pcep pce pce-name]** or **[edit protocols pcep pce-group group-id]** hierarchy levels.

Topology

Figure 120: Example PCE-Controlled Point-to-Multipoint LSPs

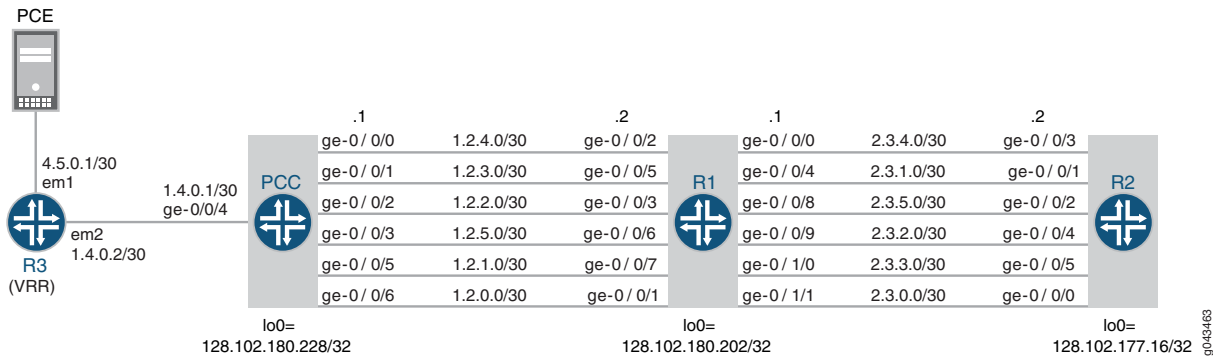

In this example, PCC is the ingress router, Router R1 is the transit router, and Router R2 is the egress router. PCC is connected to a Virtual Route Reflector (VRR) that is connected to a PCE. There are many point-to-multipoint interfaces between PCC, Router R1, and Router R2.

The reporting of point-to-multipoint LSPs is executed as follows:

1. If Router PCC is configured with point-to-point and point-to-multipoint LSPs without the support for point-to-multipoint reporting capability, only the point-to-point LSPs are reported to the connected PCE. By default, a PCC does not support point-to-multipoint LSP reporting capability.
2. When Router PCC is configured with point-to-multipoint LSP reporting capability, PCC first advertises this capability to PCE through a report message.
3. By default, a PCE provides support for point-to-multipoint LSP capability. On receiving the PCC's advertisement for point-to-multipoint LSP capability, the PCE in return advertises its capability to the PCC.
4. On receiving the PCE's advertisement of the point-to-multipoint capability, PCC reports all branches of point-to-multipoint LSPs to the PCE using the update message.
5. Once all the LSPs are reported to the PCE, LSP state is synchronized between the PCE and PCC.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

PCC

```
set interfaces ge-0/0/0 unit 0 family inet address 1.2.4.1/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 1.2.3.1/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 1.2.2.1/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 1.2.5.1/30
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 1.4.0.1/30
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces ge-0/0/5 unit 0 family inet address 1.2.1.1/30
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/0/6 unit 0 family inet address 1.2.0.1/30
set interfaces ge-0/0/6 unit 0 family mpls
```

```

set routing-options autonomous-system 100
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls lsp-external-controller pccd pce-controlled-lsp pcc_delegated_no_cspf_*
    label-switched-path-template lsp_template_no_cspf
set protocols mpls lsp-external-controller pccd pce-controlled-lsp pce_initiated_no_ero_no_cspf_*
    label-switched-path-template lsp_template_no_cspf
set protocols mpls lsp-external-controller pccd pce-controlled-lsp pce_initiated_loose_ero_no_cspf_*
    label-switched-path-template lsp_template_no_cspf
set protocols mpls traffic-engineering database import policy TE
set protocols mpls admin-groups violet 1
set protocols mpls admin-groups indigo 2
set protocols mpls admin-groups blue 3
set protocols mpls admin-groups green 4
set protocols mpls admin-groups yellow 5
set protocols mpls admin-groups orange 6
set protocols mpls label-switched-path lsp_template_no_cspf template
set protocols mpls label-switched-path lsp_template_no_cspf no-cspf
set protocols mpls label-switched-path lsp1-pcc to 128.102.177.16
set protocols mpls label-switched-path lsp2-pcc to 128.102.177.16
set protocols mpls label-switched-path lsp2-pcc lsp-external-controller pccd
set protocols mpls path loose-path 1.2.3.2 loose
set protocols mpls path strict-path 1.2.3.2 strict
set protocols mpls path strict-path 2.3.3.2 strict
set protocols mpls path path-B
set protocols mpls path path-C
set protocols mpls interface all
set protocols mpls interface ge-0/0/6.0 admin-group violet
set protocols mpls interface ge-0/0/5.0 admin-group indigo
set protocols mpls interface ge-0/0/2.0 admin-group blue
set protocols mpls interface ge-0/0/1.0 admin-group green
set protocols mpls interface ge-0/0/0.0 admin-group yellow
set protocols mpls interface ge-0/0/3.0 admin-group orange
set protocols mpls interface fxp0.0 disable
set protocols bgp group northstar type internal
set protocols bgp group northstar local-address 128.102.180.228
set protocols bgp group northstar family traffic-engineering unicast
set protocols bgp group northstar export TE
set protocols bgp group northstar neighbor 128.102.180.215
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/6.0

```

```

set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0 interface-type p2p
set protocols pcep pce pce1 local-address 10.102.180.228
set protocols pcep pce pce1 destination-ipv4-address 10.102.180.246
set protocols pcep pce pce1 destination-port 4189
set protocols pcep pce pce1 pce-type active
set protocols pcep pce pce1 pce-type stateful
set protocols pcep pce pce1 lsp-provisioning
set protocols pcep pce pce1 lsp-cleanup-timer 0
set protocols pcep pce pce1 delegation-cleanup-timeout 60
set protocols pcep pce pce1 p2mp-lsp-report-capability
set policy-options policy-statement TE term 1 from family traffic-engineering
set policy-options policy-statement TE term 1 then accept

```

R1

```

set interfaces ge-0/0/0 unit 0 family inet address 2.3.4.1/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 1.2.0.2/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 1.2.4.2/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 1.2.2.2/30
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 2.3.1.1/30
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces ge-0/0/5 unit 0 family inet address 1.2.3.2/30
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/0/6 unit 0 family inet address 1.2.5.2/30
set interfaces ge-0/0/6 unit 0 family mpls
set interfaces ge-0/0/7 unit 0 family inet address 1.2.1.2/30
set interfaces ge-0/0/7 unit 0 family mpls
set interfaces ge-0/0/8 unit 0 family inet address 2.3.5.1/30
set interfaces ge-0/0/8 unit 0 family mpls
set interfaces ge-0/0/9 unit 0 family inet address 2.3.2.1/30
set interfaces ge-0/0/9 unit 0 family mpls

```

```

set interfaces ge-0/1/0 unit 0 family inet address 2.3.3.1/30
set interfaces ge-0/1/0 unit 0 family mpls
set interfaces ge-0/1/1 unit 0 family inet address 2.3.0.1/30
set interfaces ge-0/1/1 unit 0 family mpls
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls admin-groups violet 1
set protocols mpls admin-groups indigo 2
set protocols mpls admin-groups blue 3
set protocols mpls admin-groups green 4
set protocols mpls admin-groups yellow 5
set protocols mpls admin-groups orange 6
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-0/0/1.0 admin-group violet
set protocols mpls interface ge-0/0/7.0 admin-group indigo
set protocols mpls interface ge-0/0/3.0 admin-group blue
set protocols mpls interface ge-0/0/5.0 admin-group green
set protocols mpls interface ge-0/0/2.0 admin-group yellow
set protocols mpls interface ge-0/0/6.0 admin-group orange
set protocols mpls interface ge-0/1/1.0 admin-group violet
set protocols mpls interface ge-0/0/4.0 admin-group indigo
set protocols mpls interface ge-0/0/9.0 admin-group blue
set protocols mpls interface ge-0/1/0.0 admin-group green
set protocols mpls interface ge-0/0/0.0 admin-group yellow
set protocols mpls interface ge-0/0/8.0 admin-group orange
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/7.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/6.0
set protocols ospf area 0.0.0.0 interface ge-0/1/1.0

```

R2

```

set interfaces ge-0/0/0 unit 0 family inet address 2.3.0.2/30
set interfaces ge-0/0/0 unit 0 family mpls

```

```

set interfaces ge-0/0/1 unit 0 family inet address 2.3.1.2/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 2.3.5.2/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 2.3.4.2/30
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 2.3.2.2/30
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces ge-0/0/5 unit 0 family inet address 2.3.3.2/30
set interfaces ge-0/0/5 unit 0 family mpls
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls admin-groups violet 1
set protocols mpls admin-groups indigo 2
set protocols mpls admin-groups blue 3
set protocols mpls admin-groups green 4
set protocols mpls admin-groups yellow 5
set protocols mpls admin-groups orange 6
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-0/0/0.0 admin-group violet
set protocols mpls interface ge-0/0/1.0 admin-group indigo
set protocols mpls interface ge-0/0/4.0 admin-group blue
set protocols mpls interface ge-0/0/5.0 admin-group green
set protocols mpls interface ge-0/0/3.0 admin-group yellow
set protocols mpls interface ge-0/0/2.0 admin-group orange
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

R3

```

set interfaces em0 unit 0 family inet address 10.102.180.215/19
set interfaces em1 unit 0 family inet address 4.5.0.1/30
set interfaces em2 unit 0 family inet address 1.4.0.2/30

```

```

set interfaces em2 unit 0 family mpls
set routing-options router-id 128.102.180.215
set routing-options autonomous-system 100
set protocols topology-export
set protocols rsvp interface all
set protocols mpls lsp-external-controller pccd
set protocols mpls traffic-engineering database import igp-topology
set protocols mpls traffic-engineering database import policy TE
set protocols mpls interface all
set protocols bgp group northstar type internal
set protocols bgp group northstar local-address 128.102.180.215
set protocols bgp group northstar family traffic-engineering unicast
set protocols bgp group northstar neighbor 128.102.180.228
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface em2.0 interface-type p2p
set policy-options policy-statement TE from family traffic-engineering
set policy-options policy-statement TE then accept

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure the PCC router:

1. Configure the interfaces of Router PCC. To enable MPLS, include the protocol family on the interface so that the interface does not discard incoming MPLS traffic.

```

[edit interfaces]
user@PCC# set ge-0/0/0 unit 0 family inet address 1.2.4.1/30
user@PCC# set ge-0/0/0 unit 0 family mpls
user@PCC# set ge-0/0/1 unit 0 family inet address 1.2.3.1/30
user@PCC# set ge-0/0/1 unit 0 family mpls
user@PCC# set ge-0/0/2 unit 0 family inet address 1.2.2.1/30
user@PCC# set ge-0/0/2 unit 0 family mpls
user@PCC# set ge-0/0/3 unit 0 family inet address 1.2.5.1/30
user@PCC# set ge-0/0/3 unit 0 family mpls
user@PCC# set ge-0/0/4 unit 0 family inet address 1.4.0.1/30
user@PCC# set ge-0/0/4 unit 0 family mpls
user@PCC# set ge-0/0/5 unit 0 family inet address 1.2.1.1/30
user@PCC# set ge-0/0/5 unit 0 family mpls
user@PCC# set ge-0/0/6 unit 0 family inet address 1.2.0.1/30

```

```
user@PCC# set ge-0/0/6 unit 0 family mpls
```

2. Configure the autonomous system number for Router PCC.

```
[edit routing-options]
user@PCC# set autonomous-system 100
```

3. Enable RSVP on all interfaces of Router PCC, excluding the management interface.

```
[edit protocols]
user@PCC# set rsvp interface all
user@PCC# set rsvp interface fxp0.0 disable
```

4. Enable MPLS on all the interfaces of Router PCC, excluding the management interface.

```
[edit protocols]
user@PCC# set mpls interface all
user@PCC# set mpls interface fxp0.0 disable
```

5. Configure a dynamic LSP and disable automatic path computation for the LSP.

```
[edit protocols]
user@PCC# set mpls label-switched-path lsp_template_no_cspf template
user@PCC# set mpls label-switched-path lsp_template_no_cspf no-cspf
```

6. Configure point-to-multipoint LSPs and define external path computing entity for the LSP.

```
[edit protocols]
user@PCC# set mpls label-switched-path lsp1-pcc to 128.102.177.16
user@PCC# set mpls label-switched-path lsp2-pcc to 128.102.177.16
user@PCC# set mpls label-switched-path lsp2-pcc lsp-external-controller pccd
```

7. Enable external path computing for the MPLS LSPs and assign a template for externally provisioned LSPs.

```
[edit protocols]
```

```

user@PCC# set mpls lsp-external-controller pccd pce-controlled-lsp pcc_delegated_no_cspf_*
label-switched-path-template lsp_template_no_cspf
user@PCC# set mpls lsp-external-controller pccd pce-controlled-lsp pce_initiated_no_ero_no_cspf_*
label-switched-path-template lsp_template_no_cspf
user@PCC# set mpls lsp-external-controller pccd pce-controlled-lsp pce_initiated_loose_ero_no_cspf_*
label-switched-path-template lsp_template_no_cspf

```

8. Configure the LSPs that have local control and are overridden by the PCE-provided LSP parameters.

```

[edit protocols]
user@PCC# set mpls path loose-path 1.2.3.2 loose
user@PCC# set mpls path strict-path 1.2.3.2 strict
user@PCC# set mpls path strict-path 2.3.3.2 strict
user@PCC# set mpls path path-B
user@PCC# set mpls path path-C

```

9. Configure MPLS administrative group policies for constrained-path LSP computation.

```

[edit protocols]
user@PCC# set mpls admin-groups violet 1
user@PCC# set mpls admin-groups indigo 2
user@PCC# set mpls admin-groups blue 3
user@PCC# set mpls admin-groups green 4
user@PCC# set mpls admin-groups yellow 5
user@PCC# set mpls admin-groups orange 6

```

10. Assign the configured administrative group policies to Router PCC interfaces.

```

[edit protocols]
user@PCC# set mpls interface ge-0/0/6.0 admin-group violet
user@PCC# set mpls interface ge-0/0/5.0 admin-group indigo
user@PCC# set mpls interface ge-0/0/2.0 admin-group blue
user@PCC# set mpls interface ge-0/0/1.0 admin-group green
user@PCC# set mpls interface ge-0/0/0.0 admin-group yellow
user@PCC# set mpls interface ge-0/0/3.0 admin-group orange

```

11. Configure a traffic engineering database (TED) import policy.

```

[edit protocols]
user@PCC# set mpls traffic-engineering database import policy TE

```


12. Configure a BGP internal group.

```
[edit protocols]
user@PCC# set bgp group northstar type internal
user@PCC# set bgp group northstar local-address 128.102.180.228
user@PCC# set bgp group northstar neighbor 128.102.180.215
```

13. Configure traffic engineering for BGP and assign the export policy.

```
[edit protocols]
user@PCC# set bgp group northstar family traffic-engineering unicast
user@PCC# set bgp group northstar export TE
```

14. Configure OSPF area 0 on all the point-to-multipoint interfaces of Router PCC.

```
[edit protocols]
user@PCC# set ospf area 0.0.0.0 interface lo0.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/6.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/2.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/1.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/3.0
```

15. Configure OSPF area 0 on the point-to-point interface of Router PCC.

```
[edit protocols]
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/4.0 interface-type p2p
```

16. Enable traffic engineering for OSPF.

```
[edit protocols]
user@PCC# set ospf traffic-engineering
```

17. Define the PCE that Router PCC connects to, and configure the the PCE parameters.

```
[edit protocols]
user@PCC# set pcep pce pce1 local-address 10.102.180.228
user@PCC# set pcep pce pce1 destination-ipv4-address 10.102.180.246
```

```

user@PCC# set pcep pce pce1 destination-port 4189
user@PCC# set pcep pce pce1 pce-type active
user@PCC# set pcep pce pce1 pce-type stateful
user@PCC# set pcep pce pce1 lsp-provisioning
user@PCC# set pcep pce pce1 lsp-cleanup-timer 0
user@PCC# set pcep pce pce1 delegation-cleanup-timeout 60

```

18. Configure Router PCC to enable point-to-multipoint LSP capability for external path computing.

```

[edit protocols]
set pcep pce pce1 p2mp-lsp-report-capability

```

19. Configure the traffic engineering policy.

```

[edit policy-options]
user@PCC# set policy-statement TE term 1 from family traffic-engineering
user@PCC# set policy-statement TE term 1 then accept

```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@PCC# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 1.2.4.1/30;
    }
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 1.2.3.1/30;
    }
    family mpls;
  }
}

```

```
ge-0/0/2 {  
  unit 0 {  
    family inet {  
      address 1.2.2.1/30;  
    }  
    family mpls;  
  }  
}  
ge-0/0/3 {  
  unit 0 {  
    family inet {  
      address 1.2.5.1/30;  
    }  
    family mpls;  
  }  
}  
ge-0/0/4 {  
  unit 0 {  
    family inet {  
      address 1.4.0.1/30;  
    }  
    family mpls;  
  }  
}  
ge-0/0/5 {  
  unit 0 {  
    family inet {  
      address 1.2.1.1/30;  
    }  
    family mpls;  
  }  
}  
ge-0/0/6 {  
  unit 0 {  
    family inet {  
      address 1.2.0.1/30;  
    }  
    family mpls;  
  }  
}
```

```
user@PCC# show protocols  
rsvp {  
  interface all;
```

```

interface fxp0.0 {
    disable;
}
}
mpls {
    lsp-external-controller pccd {
        pce-controlled-lsp pcc_delegated_no_cspf_* {
            label-switched-path-template {
                lsp_template_no_cspf;
            }
        }
        pce-controlled-lsp pce_initiated_no_ero_no_cspf_* {
            label-switched-path-template {
                lsp_template_no_cspf;
            }
        }
        pce-controlled-lsp pce_initiated_loose_ero_no_cspf_* {
            label-switched-path-template {
                lsp_template_no_cspf;
            }
        }
    }
}
traffic-engineering {
    database {
        import {
            policy TE;
        }
    }
}
admin-groups {
    violet 1;
    indigo 2;
    blue 3;
    green 4;
    yellow 5;
    orange 6;
}
label-switched-path lsp_template_no_cspf {
    template;
    no-cspf;
}
label-switched-path lsp1-pcc {
    to 128.102.177.16;
}

```

```

label-switched-path lsp2-pcc {
    to 128.102.177.16;
    lsp-external-controller pccd;
}
path loose-path {
    1.2.3.2 loose;
}
path strict-path {
    1.2.3.2 strict;
    2.3.3.2 strict;
}
path path-B;
path path-C;
interface all;
interface ge-0/0/6.0 {
    admin-group violet;
}
interface ge-0/0/5.0 {
    admin-group indigo;
}
interface ge-0/0/2.0 {
    admin-group blue;
}
interface ge-0/0/1.0 {
    admin-group green;
}
interface ge-0/0/0.0 {
    admin-group yellow;
}
interface ge-0/0/3.0 {
    admin-group orange;
}
interface fxp0.0 {
    disable;
}
}
bgp {
    group northstar {
        type internal;
        local-address 128.102.180.228;
        family traffic-engineering {
            unicast;
        }
        export TE;
    }
}

```

```

        neighbor 128.102.180.215;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface lo0.0;
        interface ge-0/0/6.0;
        interface ge-0/0/5.0;
        interface ge-0/0/2.0;
        interface ge-0/0/1.0;
        interface ge-0/0/0.0;
        interface ge-0/0/3.0;
        interface ge-0/0/4.0 {
            interface-type p2p;
        }
    }
}
pcep {
    pce pce1 {
        local-address 10.102.180.228;
        destination-ipv4-address 10.102.180.246;
        destination-port 4189;
        pce-type active stateful;
        lsp-provisioning;
        lsp-cleanup-timer 0;
        delegation-cleanup-timeout 60;
        p2mp-lsp-report-capability;
    }
}

```

Verification

IN THIS SECTION

- [Verifying LSP Configuration on the PCC | 1415](#)
- [Verifying PCE Configuration on the PCC | 1418](#)

Confirm that the configuration is working properly.

Verifying LSP Configuration on the PCC

Purpose

Verify the LSP type and running state of the point-to-multipoint LSP.

Action

From operational mode, run the **show mpls lsp extensive** command.

```
user@PCC> show mpls lsp extensive
```

```
Ingress LSP: 2 sessions

128.102.177.16
  From: 128.102.180.228, State: Up, ActiveRoute: 0, LSPname: lsp1-pcc
  ActivePath: (primary)
  LSPtype: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
  1.2.1.2 S 2.3.0.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
      1.2.1.2 2.3.0.2
    6 Jul 12 14:44:10.620 Selected as active path
    5 Jul 12 14:44:10.617 Record Route: 1.2.1.2 2.3.0.2
    4 Jul 12 14:44:10.615 Up
    3 Jul 12 14:44:10.175 Originate Call
    2 Jul 12 14:44:10.174 CSPF: computation result accepted 1.2.1.2 2.3.0.2
    1 Jul 12 14:43:41.442 CSPF failed: no route toward 128.102.177.16[2 times]
  Created: Tue Jul 12 14:42:43 2016

128.102.177.16
  From: 128.102.180.228, State: Up, ActiveRoute: 0, LSPname: lsp2-pcc
  ActivePath: (primary)
  LSPtype: Externally controlled - static configured, Penultimate hop popping
  LSP Control Status: Externally controlled
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    External Path CSPF Status: external
```

```

SmartOptimizeTimer: 180
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    1.2.4.2 2.3.0.2
50 Jul 12 14:50:14.699 EXTCTRL LSP: Sent Path computation request and LSP status

49 Jul 12 14:50:14.698 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0
48 Jul 12 14:49:27.859 EXTCTRL LSP: Sent Path computation request and LSP status

47 Jul 12 14:49:27.859 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0
46 Jul 12 14:49:27.858 EXTCTRL LSP: Sent Path computation request and LSP status

45 Jul 12 14:49:27.858 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0
44 Jul 12 14:49:27.858 EXTCTRL_LSP: Control status became external
43 Jul 12 14:49:03.746 EXTCTRL_LSP: Control status became local
42 Jul 12 14:46:52.367 EXTCTRL LSP: Sent Path computation request and LSP status

41 Jul 12 14:46:52.367 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0
40 Jul 12 14:46:52.367 EXTCTRL LSP: Sent Path computation request and LSP status

39 Jul 12 14:46:52.366 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0
38 Jul 12 14:46:52.366 EXTCTRL_LSP: Control status became external
37 Jul 12 14:46:41.584 Selected as active path
36 Jul 12 14:46:41.565 Record Route: 1.2.4.2 2.3.0.2
35 Jul 12 14:46:41.565 Up
34 Jul 12 14:46:41.374 EXTCTRL_LSP: Applying local parameters with this
signalling attempt
33 Jul 12 14:46:41.374 Originate Call
32 Jul 12 14:46:41.374 CSPF: computation result accepted 1.2.4.2 2.3.0.2
31 Jul 12 14:46:28.254 EXTCTRL_LSP: Control status became local
30 Jul 12 14:46:12.494 EXTCTRL LSP: Sent Path computation request and LSP status

29 Jul 12 14:46:12.494 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority

```


setup 7 hold 0
28 Jul 12 14:45:43.164 EXTCTRL LSP: Sent Path computation request and LSP status

27 Jul 12 14:45:43.164 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0

26 Jul 12 14:45:13.424 EXTCTRL LSP: Sent Path computation request and LSP status

25 Jul 12 14:45:13.423 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0

24 Jul 12 14:44:44.774 EXTCTRL LSP: Sent Path computation request and LSP status

23 Jul 12 14:44:44.773 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0

22 Jul 12 14:44:15.053 EXTCTRL LSP: Sent Path computation request and LSP status

21 Jul 12 14:44:15.053 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0

20 Jul 12 14:43:45.705 EXTCTRL LSP: Sent Path computation request and LSP status

19 Jul 12 14:43:45.705 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0

18 Jul 12 14:43:45.705 EXTCTRL LSP: Sent Path computation request and LSP status

17 Jul 12 14:43:45.705 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0

16 Jul 12 14:43:45.705 EXTCTRL_LSP: Control status became external

15 Jul 12 14:43:42.398 CSPF failed: no route toward 128.102.177.16

14 Jul 12 14:43:13.009 EXTCTRL_LSP: Control status became local

13 Jul 12 14:43:13.009 EXTCTRL LSP: Sent Path computation request and LSP status

12 Jul 12 14:43:13.008 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0

11 Jul 12 14:42:43.343 EXTCTRL LSP: Sent Path computation request and LSP status

10 Jul 12 14:42:43.343 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0

```

 9 Jul 12 14:42:43.343 EXTCTRL LSP: Sent Path computation request and LSP status

 8 Jul 12 14:42:43.343 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0
 7 Jul 12 14:42:43.342 EXTCTRL LSP: Sent Path computation request and LSP status

 6 Jul 12 14:42:43.342 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0
 5 Jul 12 14:42:43.341 EXTCTRL_LSP: Control status became external
 4 Jul 12 14:42:43.337 EXTCTRL_LSP: Control status became local
 3 Jul 12 14:42:43.323 EXTCTRL LSP: Sent Path computation request and LSP status

 2 Jul 12 14:42:43.323 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0) priority
setup 7 hold 0
 1 Jul 12 14:42:43.258 EXTCTRL LSP: Awaiting external controller connection
Created: Tue Jul 12 14:42:43 2016
Total 2 displayed, Up 2, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The output displays the lsp2-pcc LSP as the PCE-controlled LSP.

Verifying PCE Configuration on the PCC

Purpose

Verify the PCE parameters configuration and PCE state.

Action

From operational mode, run the **show path-computation-client active-pce** command.

```
user@PCC> show path-computation-client active-pce
```

```

PCE pce1
-----
General

```

```

PCE IP address      : 10.102.180.246
Local IP address    : 10.102.180.228
Priority            : 0
PCE status          : PCE_STATE_UP
Session type        : PCE_TYPE_STATEFULACTIVE
LSP provisioning allowed : On
P2MP LSP report allowed : On
P2MP LSP update allowed : Off
P2MP LSP init allowed  : Off
PCE-mastership      : main

```

Counters

PCReqs	Total: 0	last 5min: 0	last hour: 0
PCReps	Total: 0	last 5min: 0	last hour: 0
PCRpts	Total: 12	last 5min: 0	last hour: 12
PCUpdates	Total: 1	last 5min: 0	last hour: 1
PCCreates	Total: 0	last 5min: 0	last hour: 0

Timers

```

Local  Keepalive timer: 30 [s] Dead timer: 120 [s] LSP cleanup timer:
0 [s]
Remote Keepalive timer: 30 [s] Dead timer: 120 [s] LSP cleanup timer:
0 [s]

```

Errors

```

PCErr-recv
PCErr-sent
      Type: 1      Value: 2      Count: 1
PCE-PCC-NTFS
PCC-PCE-NTFS

```

Meaning

The output displays the active PCE that Router PCC is connected to, and the pce1 PCE parameters and state.

Understanding Path Computation Element Protocol for MPLS RSVP-TE with Support for PCE-Initiated Point-to-Multipoint LSPs

IN THIS SECTION

- [Benefits of PCE-Initiated Point-to-Multipoint LSPs | 1420](#)
- [Signaling of PCE-Initiated Point-to-Multipoint LSPs | 1420](#)
- [Behavior of PCE-Initiated Point-to-Multipoint LSPs After PCEP Session Failure | 1421](#)
- [Configuring PCE-Initiated Point-to-Multipoint LSP Capability | 1421](#)
- [Supported and Unsupported Features for PCE-Initiated Point-to-Multipoint LSPs | 1421](#)
- [Mapping PCE-initiated Point-To-Multipoint LSPs to MVPN | 1422](#)

With the introduction of point-to-multipoint PCE-initiated LSPs, a PCE can initiate and provision a point-to-multipoint LSP dynamically without the need for local LSP configuration on the PCC. This enables the PCE to control the timing and sequence of the point-to-multipoint path computations within and across Path Computation Element Protocol (PCEP) sessions, thereby creating a dynamic network that is centrally controlled and deployed.

Benefits of PCE-Initiated Point-to-Multipoint LSPs

Meets the requirements of point-to-multipoint traffic engineering LSP placement in response to application demands through dynamic creation and tear down of point-to-multipoint LSPs, thereby creating a dynamic network that is centrally controlled and deployed.

Signaling of PCE-Initiated Point-to-Multipoint LSPs

The signaling of PCE-initiated point-to-multipoint LSPs is as follows:

- **When a new branch is added (Grafting)**—Only the new branch sub-LSP is signaled and does not result in re-signaling of the entire point-to-multipoint tree.

If any topology changes occurred before provisioning of the new sub-LSP, then the Path Computation Server (PCS) re-computes the entire point-to-multipoint tree and updates the point-to-multipoint LSP using a PC update message.

- **When a branch is deleted (Pruning)**—The deleted branch sub-LSP is torn down and does not result in re-signaling of the entire point-to-multipoint tree.
- **When a branch sub-LSP parameter is changed**—Change in sub-LSP parameters, such as Explicit Route Object (ERO), bandwidth, or priority, can happen either because of optimization, or on user request. If

there is a re-signaling request for a sub-LSP, the entire point-to-multipoint tree is re-signaled, and then the switchover to the new instance happens once the new instances of all the branches are up.

- **When a branch sub-LSP path fails**—An error is reported to the PCS for the failed branch sub-LSP. On receiving the new ERO from the PCS, the entire point-to-multipoint tree is re-signaled along with the failed branch sub-LSP, and the switchover to the new instance happens in a make-before-break (MBB) fashion.

Behavior of PCE-Initiated Point-to-Multipoint LSPs After PCEP Session Failure

When a PCEP session fails, the PCE-initiated point-to-multipoint LSPs are orphaned until the expiration of the **state timeout** timer. After the **state timeout** timer expires, the PCE-initiated LSPs are cleaned up.

To obtain control of a PCE-initiated point-to-multipoint LSP after a PCEP session failure, the primary or secondary PCE sends a **PCInitiate** message before the **state timeout** timer expires.

Configuring PCE-Initiated Point-to-Multipoint LSP Capability

By default, the creation and provisioning of point-to-multipoint LSPs by a PCE is not supported on a PCC. To enable this capability, include the **p2mp-lsp-init-capability** and **p2mp-lsp-update-capability** statements at the **[edit protocols pcep pce pce-name]** or **[edit protocols pcep pce-group group-id]** hierarchy levels.

The **p2mp-lsp-init-capability** statement provides the capability to provision point-to-multipoint RSVP-TE LSPs by a PCE. The **p2mp-lsp-update-capability** statement provides the capability to update point-to-multipoint RSVP-TE LSP parameters by a PCE.

Supported and Unsupported Features for PCE-Initiated Point-to-Multipoint LSPs

The following features are supported with PCE-initiated point-to-multipoint LSPs:

- Partial compliance with the Internet draft draft-ietf-pce-stateful-pce-p2mp (expires October 2018), *Path Computation Element (PCE) Protocol Extensions for Stateful PCE usage for Point-to-Multipoint Traffic Engineering Label Switched Paths*.

The following features are not supported with PCE-initiated point-to-multipoint LSPs:

- Delegation of point-to-multipoint locally controlled LSP.
- LSP control delegation.
- Interior gateway protocol (IGP) extension for PCE discovery within an IGP routing domain.
- Request/response messaging.
- Direct movement of branch sub-LSP from one point-to-multipoint tree to another.

The same can be achieved by deleting a branch sub-LSP from the first point-to-multipoint tree and re-adding it to another after the **PCReport** message indicates LSP removal from the device.

- IPv6 is not supported.
- SERO based signalling is not supported.

- Empty-ERO feature is not supported.
- Link protection is not supported.

Mapping PCE-initiated Point-To-Multipoint LSPs to MVPN

You can associate a single or range of MVPN multicast flows (S,G) to a dynamically created PCE-initiated point-to-multipoint label-switched path (LSP). You can specify only selective types of flows for this feature to work. This includes:

- Route distinguisher (RD) which is mapped to the MVPN routing-instance.
- (S,G) which is the source of a multicast packet and destination multicast group address. This is used to filter incoming traffic for mapping it to the tunnel.
- Point-to-multipoint LSP that is used to send traffic that matches the above-mentioned flow specification.

For more details, see Internet draft draft-ietf-pce-pcep-flowspec-05 (expires February 16, 2020) *PCEP Extension for Flow Specification*.

The current implementation of this feature does not implement the following sections of the draft:

- Section 3.1.2—Advertising PCE capabilities in IGP
- Section 3.2—PCReq and PCRep message
- Section 7—Most of the flow specifications, except route distinguisher and IPv4 multicast flow specifications, are not supported.

To enable the mapping of PCE-initiated point-to-multipoint LSPs to MVPN:

- Include the **pce_traffic_steering** statement at the **[edit protocols pcep pce pce-id]** hierarchy level to indicate the support for flow specification capability (also called traffic steering) by the PCC.
- Include the **external-controller** statement at the **[edit routing-instances routing-instance-name provider-tunnel]** hierarchy level.

The presence of **external-controller** in the provider-tunnel configuration for MVPN indicates that the point-to-multipoint LSP and (S,G) for this MVPN instance can be provided by the external controller. This enables the external controller to dynamically configure (S,G) and point-to-multipoint LSP for MVPN.

Take the following into consideration for mapping of PCE-initiated point-to-multipoint LSPs to MVPN:

- If you do not enable the **external-controller pccd** statement for a particular MVPN instance, then the PCCD process does not configure (S,G) dynamically.
- If you disable the **external-controller pccd** configuration from the CLI, then the dynamically learned multicast flows (S,G) for that particular MVPN instance is deleted and reported to the external controller.
- When (S,G) is already configured from the CLI, the PCC cannot configure (S,G) dynamically as local configuration has a higher priority.

- If any particular (S,G) is learned from the external controller dynamically and then you configure the same (S,G) for the same MVPN instance, then the dynamically learned (S,G) is deleted and reported to the external controller through the PCC.
- If the routing protocol process reboots, then the PCCD process reconfigures all the (S,G) again.
- If the PCCD process reboots, then MVPN reports all PCCD configured (S,G) to the external controller.
- If user enables **external-controller pccd** for a particular MVPN instance, then MVPN requests the PCCD process to configure (S,G), if any present.
- If there are major configuration changes to a particular MVPN instance, then MVPN requests the PCCD process to reconfigure all (S,G) for that particular MVPN instance.
- All flow specifications associated with any PCE-initiated point-to-multipoint LSP must have the same RD. During PC initiation if all flow specifications do not have the same RD, then the PC initiate message is dropped with an error.
- You can associate a point-to-multipoint LSP only with selective type of flow specifications, otherwise the PC initiate message is dropped with an error.
- During PC update if all flow specifications do not have same the RD either due to a new flow specification addition, or due to existing flow specification update, then the PCC drops the update message.
- During PC update if all flow specifications do not meet the selective condition either due to new flow specification addition, or due to existing flow specifications update, then the PCC drops the update message.
- Behavior for mapping of PCE-initiated point-to-multipoint LSP with MVPN routing-instance and mapping of static (locally configured) point-to-multipoint LSP with MVPN instance is the same at user level.
- A flow specification ID can be associated with only one point-to-multipoint LSP. To associate the same RD and (S,G) to multiple point-to-multipoint LSPs, you can add multiple flow specifications with different IDs and same RD & (S,G).
- For PCEP-mapped dynamic (S,G), the threshold value is always the default value of 0.
- There is no limit on the number of flow specifications mapped to a single PCE-initiated point-to-multipoint LSP.
- The current implementation of this feature does not support:
 - Reporting of forwarding states that are associated with the point-to-multipoint LSP.
 - Inclusive provider tunnel dynamic configuration
 - Mapping for MVPN ingress replication tunnel
 - Programmable routing protocol process (prpd)
 - Reporting of CLI configured point-to-multipoint LSP which is mapped to MVPN multicast flows (S,G).

How to Configure Segment Routing for the Path Computation Element Protocol

SUMMARY

You can enable segment routing or Source Packet Routing in Networking (SPRING) traffic-engineering (SR-TE) with the Path Computation Element Protocol (PCEP) for traffic steering. With this support, the advantages of segment routing are extended to the label-switched paths (LSPs) that are externally controlled by a Path Computation Element (PCE).

IN THIS SECTION

- [Segment Routing for the Path Computation Element Protocol Overview | 1424](#)

Segment Routing for the Path Computation Element Protocol Overview

IN THIS SECTION

- [Benefits of Segment Routing for PCEP | 1424](#)
- [Segment Routing for Traffic Engineering | 1425](#)
- [Junos OS Implementation of Segment Routing for PCEP | 1425](#)
- [Segment Routing for PCEP Limitations and Unsupported Features | 1431](#)

Benefits of Segment Routing for PCEP

- Setting up of LSPs through an external controller provides a global view of per-LSP and per-device bandwidth demand on the network, enabling online and real-time constraint-based path computation.

The advantages of segment routing are extended to the LSPs initiated by an external controller, also known as a Path Computation Element (PCE), augmenting the benefits of external path computing in an MPLS network.

- A Path Computation Client (PCC, an ingress MX Series router) with delegation capability can take back control of the delegated segment routing LSPs from the PCE when the PCEP session goes down; the LSPs would otherwise be deleted from the PCC. You can thus ensure LSP data protection by averting a situation where packets are silently discarded or dropped (also known as a traffic black-hole condition).

Segment Routing for Traffic Engineering

Segment routing can operate over an IPv4 or IPv6 data plane, and supports equal-cost multipath (ECMP). With the IGP extensions built into it, segment routing integrates with the rich multiservice capabilities of MPLS, including Layer 3 VPN, Virtual Private Wire Service (VPWS), Virtual Private LAN Service (VPLS), and Ethernet VPN (EVPN).

Some of the high-level components of the segment routing-traffic engineering (SR-TE) solution include:

- Use of an IGP for advertising link characteristics. This functionality is similar to RSVP-TE.
- Use of Constrained Shortest Path First (CSPF) on the ingress device or the PCE.
- Use of an IGP for advertising labels for links.

In SR-TE functionality:

1. The ingress device constructs an LSP by stacking the labels of the links that it wants to traverse.
2. The per-link IGP advertisement is combined with label stacking to create source routed LSPs on the ingress device, so the transit devices are not aware of the end-to-end LSPs.
3. LSPs are created between edge nodes without placing any per-LSP memory requirements on the transit devices. (Creation of such LSPs is enabled as there is no per-LSP signaling in SR-TE.)
4. Per-neighbor labels are stacked, which results in the management of a large number of labels, leading to control plane scaling.

Junos OS Implementation of Segment Routing for PCEP

IN THIS SECTION

- [PCE-Initiated Segment Routing LSPs | 1425](#)
- [PCE-Delegated Segment Routing LSPs | 1427](#)

Junos OS implements segment routing for PCEP for two types of LSPs—PCE-initiated LSPs and PCE-delegated LSPs.

PCE-Initiated Segment Routing LSPs

The PCE-initiated segment routing LSPs are those LSPs that the PCE creates for the adjacency and node segmentsadjacency and node segments.

The PCE performs the following functions:

1. Computes the path of the segment routing LSP.
2. Provisions the LSP on the Path Computation Client (PCC) using PCEP segment routing extensions.
3. Parses the PCEP segment routing extensions.
4. Creates a tunnel route on the PCC that has its own preference value and is made available in the inet.3 routing table to resolve IP traffic and services like any other tunnel route.

The PCC performs the following functions:

1. Selects the outgoing interface based on the first network access identifier (NAI) in the source Explicit Route Object (S-ERO).

Junos OS supports S-EROs that contain the first hop as a strict hop; Junos OS doesn't support selection of the outgoing interface on the PCC based on a loose-hop node segment ID (SID). However, the remaining hops can be loose. No specific processing is done for the S-EROs that are beyond the first hop, other than to simply use the label for next-hop creation.

2. Rejects the S-ERO if:

- The S-ERO does not have labels in it.
- The S-ERO carries more than six hops.

Creates an equal-cost multipath (ECMP) route when there are multiple LSPs to the same destination with the same metric.

3. Waits for the PCE to process any event that leads to a change in the segment routing LSP after it is provisioned--for example, if the label is changed or withdrawn, or if one of the interfaces traversed by the LSP goes down.

When the PCEP session goes down, the PCE-initiated segment routing LSP:

1. Remains up for 300 seconds.
2. The LSP is deleted from the PCC after 300 seconds.

For more details, see Internet drafts [draft-ietf-pce-lsp-setup-type-03.txt](#) (expires December 25, 2015), *Conveying path setup type in PCEP messages*, and [draft-ietf-pce-segment-routing-06.txt](#) (expires February 10, 2016), *PCEP Extensions for Segment Routing*.

PCE-Delegated Segment Routing LSPs

The PCE-delegated segment routing LSPs are those LSPs that the PCC configures locally and then delegates to a PCE controller.

NOTE:

Junos OS Release 20.1R1 supports:

- PCE delegation capability only for non-colored segment routing LSPs with IPv4 destinations.
- Delegation and reporting of only the first segment of a segment list to an external controller. Multiple segments are not supported for PCE delegation.

The PCC can delegate a segment routing LSP to an external controller (the PCE) in the following ways:

- **Initial delegation**—The local LSPs are yet to be configured on the PCC, and the delegation of the LSP happens at the time the LSP is configured.
- **Delegation of existing LSP**—The local LSPs are configured on the PCC, and the delegation of the LSP happens after the source-routing path is configured. That is, the delegation capability is enabled on existing segment routing LSPs.

After delegating a segment routing LSP, the PCE controls the delegated LSPs and can modify the LSP attributes for path computation. The LSP control reverts back to the PCC when the PCEP session between the PCC and the PCE goes down. The PCE-delegated LSPs have an advantage over PCE-initiated LSPs in case the PCEP session goes down. For PCE-initiated LSPs, when the PCEP session is down, the LSPs are deleted from the PCC. However, for PCE-delegated LSPs, when the PCEP session goes down, the PCC takes back control of the delegated LSPs from the PCE. As a result, with PCE-delegated LSPs, we avert a situation where packets are silently discarded (also known as a traffic black-hole condition) when the session goes down.

The following types of segment routing LSPs support the PCE-delegation capability:

- **Static LSPs**—Statically configured source-routing paths that have the entire label stack statically configured.
- **Auto-translated LSPs**—Statically configured source-routing-paths that are automatically translated.
- **Computed LSPs**—Statically configured source-routing-paths that are computed with distributed Constrained Shortest Path First (CSPF).
- **Dynamic LSPs**—Dynamically created tunnels triggered through the Dynamic Tunnel Module that have last-hop ERO resolution.

Depending on the source of the segment routing LSP, you can configure the delegation capability on the PCC. To enable delegation of segment routing LSPs, include the **`lsp-external-controller pccd`** statement at the appropriate level under the **`[edit protocols source-packet-routing]`** hierarchy.

Table 33 on page 1428 shows a mapping of the LSP source to the corresponding configuration hierarchy level at which the delegation capability is enabled.

NOTE: You must include the **`lsp-external-controller pccd`** statement at the **`[edit protocols source-packet-routing]`** and **`[edit protocols mpls]`** hierarchy levels before configuring the delegation capability on the PCC.

Table 33: Mapping of Segment Routing LSP Source with Configuration Hierarchy

Source of Segment Routing LSP	Configuration Hierarchy
<ul style="list-style-type: none"> • Auto-translated LSPs • Static LSPs 	Primary segment list at <code>[edit protocols source-packet-routing source-routing-path lsp-name primary path-name]</code>
Computed LSPs (distributed CSPF)	Primary segment list of the source-routing path at: <ul style="list-style-type: none"> • <code>[edit protocols source-packet-routing source-routing-path lsp-name primary path-name compute profile-name]</code> • <code>[edit protocols source-packet-routing source-routing-path lsp-name primary path-name]</code>
Dynamic LSPs	Primary segment list of the source-routing path template at: <ul style="list-style-type: none"> • <code>[edit protocols source-packet-routing source-routing-path-template template-name primary primary-segment-list-name]</code> • <code>[edit protocols source-packet-routing source-routing-path-template template-name]</code>

You can view the control status of the SR-TE LSPs from the **`show spring-traffic-engineering`** command output.

Table 34 on page 1429 displays the PCEP interaction when the **`lsp-external-controller`** statement is configured for a source-routing path.

Table 34: PCEP Interaction LSP Delegation

lsp-external-controller Configuration Hierarchy	source-routing-path Delegation State	PCEP Interaction Between PCC and PCE
Primary segment list of source-routing path	Initial delegation	<ol style="list-style-type: none"> 1. A PCReport is sent to the PCE for delegation. PCReport contains only constraints and path details (such as ERO). 2. PCE calculates the path for LSP and reports path to be in the down state. 3. No route is programmed by the local LSP until the controller computes the ERO and notifies the result to the PCC through PCUpdate. <p>The same behavior is seen when the routing protocol process (rpd) restarts or a Routing Engine switchover happens.</p>

Table 34: PCEP Interaction LSP Delegation (*continued*)

lsp-external-controller Configuration Hierarchy	source-routing-path Delegation State	PCEP Interaction Between PCC and PCE
Primary segment list of source-routing path	Delegation of existing path	<ol style="list-style-type: none"> 1. A PCReport is sent to the PCE for delegation. PCReport contains only constraints and path details (such as ERO). 2. A corresponding primary segment is delegated to the PCE. 3. PCE calculates the path for the LSP. 4. The primary segment continues to contribute to the route as determined by the local configuration or computation until a PCUpdate is received from the PCE. <ul style="list-style-type: none"> • If Seamless BFD (S-BFD) is not configured for the primary segment, then there is no further update to the route and the LSP state is also not monitored and reported to the PCE. The LSP state at this point is reported as up or down depending on whether path computation had succeeded at that point. • If S-BFD is configured for the primary segment, then the state of the primary segment is tracked and reported to the PCE. If BFD detects the primary segment to be down, the corresponding primary path is removed from the route. The same route that was previously calculated is reprogrammed if that path is up now. 5. If a PCUpdate message is received from the PCE, SR-TE uses the received parameter to set up the path for which the PCReport message was sent. The programmed path then includes only the segment list received from the PCE and all the other segment lists that were previously programmed are removed. This reprogramming of the route happens in a make-before-break fashion.
Primary segment of source-routing path	Delegation is not configured or has been deleted	The segment list from the PCE (if available) is no longer used and the computation result from the local configuration is used. When the local result for the segment list is available, the corresponding segment list is used to program the route in a make-before-break fashion.

Table 34: PCEP Interaction LSP Delegation (*continued*)

lsp-external-controller Configuration Hierarchy	source-routing-path Delegation State	PCEP Interaction Between PCC and PCE
Segment list of source-routing path	Delegation is enabled after LSP is configured	Delegation functionality is triggered for the primary segment list under the source-routing path.
Segment list of source-routing path	Delegation is not configured or has been deleted	Delegation functionality is removed from the primary segment list under the source-routing path.
Primary segment list of source-routing path template	Delegation is enabled after LSP is configured	<ul style="list-style-type: none"> Under the source-routing path template—Delegation functionality is triggered for the entire source-routing path. Template configurations can be applied only to the Dynamic Tunnel Module. Under the primary path in the source-routing path template—Delegation functionality is triggered for that particular primary path according to the configuration.
Primary segment list of source-routing path template	Delegation is not configured or has been deleted	Delegation functionality is removed from all the source-routing paths and primary paths that match the template configuration.

Segment Routing for PCEP Limitations and Unsupported Features

The support of segment routing for PCEP does not add to the performance burden on the system; however, it has the following limitations:

- An SR-TE LSP is not locally protected on the PCC. When the LSP is more than six hops, no service is provided on the LSP other than to carry plain IP traffic.
- Graceful Routing Engine switchover (GRES) and unified in-service software upgrade (unified ISSU) are not supported.
- Nonstop active routing (NSR) is not supported.
- IPv6 is not supported.
- PCE-delegated LSPs does not support the following:
 - Colored SR-TE LSPs
 - IPv6 LSPs
 - Secondary segment list of the source-routing path. Only one path of the segment list can be delegated.
 - Multisegment standard. Only the first segment of the segment list is delegated and reported to the controller.

WHAT'S NEXT

For more information on configuring Segment Routing for the Path Computation Element Protocol, see [Example: Configure Segment Routing for the Path Computation Element Protocol](#).

Static Segment Routing Label Switched Path

IN THIS SECTION

- [Understanding Static Segment Routing LSP in MPLS Networks | 1432](#)
- [Example: Configuring Static Segment Routing Label Switched Path | 1457](#)

The segment routing architecture enables the ingress devices in a core network to steer traffic through explicit paths. You can configure these paths using segment lists to define the paths that the incoming traffic should take. The incoming traffic may be labeled or IP traffic, causing the forwarding operation at the ingress device to be either a label swap, or a destination-based lookup.

Understanding Static Segment Routing LSP in MPLS Networks

IN THIS SECTION

- [Introduction to Segment Routing LSPs | 1433](#)
- [Benefits of using Segment Routing LSPs | 1434](#)
- [Colored Static Segment Routing LSP | 1434](#)
- [Non-Colored Static Segment Routing LSP | 1435](#)
- [Static Segment Routing LSP Provisioning | 1442](#)
- [Static Segment Routing LSP Limitations | 1442](#)
- [Dynamic Creation of Segment Routing LSPs | 1443](#)
- [Color-Based Mapping of VPN Services | 1449](#)
- [Tunnel Templates for PCE-Initiated Segment Routing LSPs | 1456](#)

Source packet routing or segment routing is a control-plane architecture that enables an ingress router to steer a packet through a specific set of nodes and links in the network without relying on the intermediate nodes in the network to determine the actual path it should take.

Introduction to Segment Routing LSPs

Segment routing leverages the source routing paradigm. A device steers a packet through an ordered list of instructions, called segments. A segment can represent any instruction, topological or service-based. A segment can have a local semantic to a segment routing node or to a global node within a segment routing domain. Segment routing enforces a flow through any topological path and service chain while maintaining per-flow state only at the ingress device to the segment routing domain. Segment routing can be directly applied to the MPLS architecture with no change on the forwarding plane. A segment is encoded as an MPLS label. An ordered list of segments is encoded as a stack of labels. The segment to process is on the top of the stack. Upon completion of a segment, the related label is popped from the stack.

Segment routing LSPs can either be dynamic or static in nature.

Dynamic segment routing LSPs—When a segment routing LSP is created either by an external controller and downloaded to an ingress device through Path Computation Element Protocol (PCEP) extensions, or from a BGP segment routing policy through BGP segment routing extensions, the LSP is dynamically provisioned. The segment list of the dynamic segment routing LSP is contained in the PCEP Explicit Route Object (ERO), or the BGP segment routing policy of the LSP.

Static segment routing LSPs—When a segment routing LSP is created on the ingress device through local configuration, the LSP is statically provisioned.

A static segment routing LSP can further be classified as colored and non-colored LSPs based on the configuration of the **color** statement at the **[edit protocols source-packet-routing source-routing-path *lsp-name*]** hierarchy level.

For example:

```
[edit protocols]
  source-packet-routing {
    source-routing-path lsp_name {
      to destination_address;
      color color_value;
      binding-sid binding-label;
      primary segment_list_1_name weight weight;
      ...
      primary segment_list_n_name weight weight;
      secondary segment_list_n_name;
      sr-preference sr_preference_value;
    }
  }
```

Here, each primary and secondary statement refers to a segment list.

```
[edit protocols]
  source-packet-routing {
    segment-list segment_list_name {
      hop_1_name label sid_label;
      ...
      hop_n_name label sid_label;
    }
  }
```

Benefits of using Segment Routing LSPs

- Static segment routing does not rely on per LSP forwarding state on transit routers. Hence, removing the need of provisioning and maintaining per LSP forwarding state in the core.
- Provide higher scalability to MPLS networks.

Colored Static Segment Routing LSP

IN THIS SECTION

- [Understanding Colored Static Segment Routing LSPs | 1435](#)
- [Segment List of Colored Segment Routing LSPs | 1435](#)

A static segment routing LSP configured with the **color** statement is called a colored LSP.

Understanding Colored Static Segment Routing LSPs

Similar to a BGP segment routing policy, the ingress route of the colored LSP is installed in the **inetcolor.0** or **inet6color.0** routing tables, with **destination-ip-address, color** as key for mapping IP traffic.

A static colored segment routing LSP may have a binding SID, for which a route is installed in the **mpls.0** routing table. This binding SID label is used to map labeled traffic to the segment routing LSP. The gateways of the route are derived from the segment list configurations under the primary and secondary paths.

Segment List of Colored Segment Routing LSPs

The colored static segment routing LSPs already provide support for first hop label mode of resolving an LSP. However, first hop IP mode is not supported for colored segment routing LSPs. Starting in Junos OS Release 19.1R1, a commit check feature is introduced to ensure that all the segment lists contributing to the colored routes have the minimum label present for all hops. If this requirement is not met, the commit is blocked.

Non-Colored Static Segment Routing LSP

IN THIS SECTION

- [Understanding Non-Colored Segment Routing LSPs | 1435](#)
- [Segment List of Non-Colored Segment Routing LSPs | 1436](#)

A static segment routing LSP that is configured without the **color** statement is a non-colored LSP. Similar to PCEP segment routing tunnels, the ingress route is installed in the **inet.3** or **inet6.3** routing tables.

Junos OS supports non-colored static segment routing LSPs on ingress routers. You can provision non-colored static segment routing LSP by configuring one source routed path and one or more segment lists. These segment lists can be used by multiple non-colored segment routing LSPs.

Understanding Non-Colored Segment Routing LSPs

The non-colored segment routing LSP has a unique name and a destination IP address. An ingress route to the destination is installed in the **inet.3** routing table with a default preference of 8 and a metric of 1. This route allows non-colored services to be mapped to the segment routing LSP pertaining to the destination. In case the non-colored segment routing LSP does not require an ingress route then the ingress route can be disabled. A non-colored segment routing LSP uses binding SID label to achieve segment routing LSP stitching. This label that can be used to model the segment routing LSP as a segment that may be further used to construct other segment routing LSPs in a hierarchical manner. The transit of the binding SID label, by default, has a preference of 8 and a metric of 1.

Starting in Junos OS Release 18.2R1, statically configured non-colored segment routing LSPs on the ingress device are reported to the Path Computation Element (PCE) through a Path Computation Element Protocol

(PCEP) session. These non-colored segment routing LSPs may have binding service identifier (SID) labels associated with them. With this feature, the PCE can use this binding SID label in the label stack to provision PCE-initiated segment routing LSP paths.

A non-colored segment routing LSP can have a maximum of 8 primary paths. If there are multiple operational primary paths then the packet forwarding engine (PFE) distributes traffic over the paths based on the load balancing factors like the weight configured on the path. This is equal cost multi path (ECMP) if none of the paths have a weight configured on them or weighted ECMP if at least one of the paths has a non-zero weight configured on the paths. In both the cases, when one or some of the paths fail, the PFE rebalances the traffic over the remaining paths that automatically leads to achieving path protection. A non-colored segment routing LSP can have a secondary path for dedicated path protection. Upon failure of a primary path, the PFE rebalances the traffic to the remaining functional primary paths. Otherwise, the PFE switches the traffic to the backup path, hence achieving path protection. A non-colored segment routing LSP may specify a metric at `[edit protocols source-packet-routing source-routing-path lsp-name]` for its ingress and binding-SID routes. Multiple non-colored segment routing LSPs have the same destination address that contribute to the next hop of the ingress route.

Multiple non-colored segment routing LSPs have the same destination address that contribute to the next hop of the ingress route. Each path, either primary or secondary, of each segment routing LSP is considered as a gateway candidate, if the path is functional and the segment routing LSP has the best preference of all these segment routing LSPs. However, the maximum number of gateways that the next-hop can hold cannot exceed the RPD multi-path limit, which is 128 by default. Extra paths are pruned, firstly secondary paths and then primary paths. A given segment list may be referred multiple times as primary or secondary paths by these segment routing LSPs. In this case, there are multiple gateways, each having a unique segment routing LSP tunnel ID. These gateways are distinct, although they have identical outgoing label stack and interface. A non-colored segment routing LSP and a colored segment routing LSP may also have the same destination address. However, they correspond to different destination addresses for ingress routes, as the colored segment routing LSP's destination address is constructed with both its destination address and color.

NOTE: In the case where a static non-colored segment routing LSP and a PCEP-created segment routing LSP co-exist and have the same to address that contributes to the same ingress route, if they also have the same preference. Otherwise, the segment routing LSP with the best preference is installed for the route.

Segment List of Non-Colored Segment Routing LSPs

A segment list consists of a list of hops. These hops are based on the SID label or an IP address. The number of SID labels in the segment list should not exceed the maximum segment list limit. You can configure the maximum segment list limit at the `[edit protocols source-packet-routing]` hierarchy level.

Prior to Junos OS Release 19.1R1, for a non-colored static segment routing LSP to be usable, the first hop of the segment list had to be an IP address of an outgoing interface and the second to *n*th hops could be

SID labels. Starting in Junos OS Release 19.1R1, this requirement does not apply, as the first hop of the non-colored static LSPs now provides support for SID labels, in addition to IP addresses. With the first hop label support, MPLS fast reroute (FRR) and weighted equal-cost multipath is enabled for resolving the static non-colored segment routing LSPs, similar to colored static LSPs.

For the first-hop label mode to take effect, you must include the **inherit-label-nexthops** statement globally or individually for a segment list, and the first hop of the segment list must include both IP address and label. If the first hop includes only IP address, the **inherit-label-nexthops** statement does not have any effect.

You can configure **inherit-label-nexthops** at any one of the following hierarchies. The **inherit-label-nexthops** statement takes effect only if the segment list first hop includes both IP address and label.

- **Segment list level**—At the `[edit protocols source-packet-routing segment-list segment-list-name]` hierarchy level.
- **Globally**—At the `[edit protocols source-packet-routing]` hierarchy level.

When the **inherit-label-nexthops** statement is configured globally, it takes precedence over the segment-list level configuration, and the **inherit-label-nexthops** configuration is applied to all the segment lists. When the **inherit-label-nexthops** statement is not configured globally, only segment lists with both labels and IP address present in the first hop, and configured with **inherit-label-nexthops** statement are resolved using SID labels.

For dynamic non-colored static LSPs, that is the PCEP-driven segment routing LSPs, the **inherit-label-nexthops** statement must be enabled globally, as the segment-level configuration is not applied.

[Table 22 on page 711](#) describes the mode of segment routing LSP resolution based on the first hop specification.

Table 35: Non-Colored Static LSP Resolution Based on First Hop Specification

First Hop Specification	Mode of LSP Resolution
IP address only For example: <pre> segment-list path-1 { hop-1 ip-address 172.0.12.2; hop-2 label 1000012; hop-3 label 1000013; hop-4 label 1000014; }</pre>	The segment list is resolved using the IP address.

Table 35: Non-Colored Static LSP Resolution Based on First Hop Specification (*continued*)

First Hop Specification	Mode of LSP Resolution
<p>SID only</p> <p>For example:</p> <pre>segment-list path-2 { hop-1 label 1000011; hop-2 label 1000012; hop-3 label 1000013; hop-4 label 1000014; }</pre>	<p>The segment list is resolved using SID labels.</p>
<p>IP address and SID (without the inherit-label-nexthops configuration)</p> <p>For example:</p> <pre>segment-list path-3 { hop1 { label 801006; ip-address 172.24.1.2; } hop-2 label 1000012; hop-3 label 1000013; hop-4 label 1000014; }</pre>	<p>By default, the segment list is resolved using IP address.</p>
<p>IP address and SID (with the inherit-label-nexthops configuration)</p> <p>For example:</p> <pre>segment-list path-3 { inherit-label-nexthops; hop1 { label 801006; ip-address 172.24.1.2; } hop-2 label 1000012; hop-3 label 1000013; hop-4 label 1000014; }</pre>	<p>The segment list is resolved using SID labels.</p>

You can use the **show route *ip-address* protocol spring-te active-path table inet.3** command to view the non-colored segment routing traffic-engineered LSPs having multiple segment lists installed in the inet.3 routing table.

For example:

```
user@host> show route 7.7.7.7 protocol spring-te active-path table inet.3
```

```
inet.3: 42 destinations, 59 routes (41 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

7.7.7.7/32      *[SPRING-TE/8] 00:01:25, metric 1, metric2 0
                > to 11.1.1.2 via et-0/0/0.1, Push 801007
                  to 21.1.1.2 via et-0/0/2.1, Push 801007
                  to 11.102.1.2 via et-0/0/0.2, Push 801007, Push 801002(top)

                  to 21.202.1.2 via et-0/0/2.2, Push 801007, Push 801005(top)

                  to 11.103.1.2 via et-0/0/0.3, Push 801007, Push 801003(top)

                  to 21.203.1.2 via et-0/0/2.3, Push 801007, Push 801006(top)

                  to 11.104.1.2 via et-0/0/0.4, Push 801007, Push 801003, Push
801002(top)
                  to 21.204.1.2 via et-0/0/2.4, Push 801007, Push 801006, Push
801005(top)
```


NOTE:

The first hop type of segment lists of a static segment routing LSP can cause a commit to fail, if:

- Different segment lists of a tunnel have different first hop resolution types. This is applicable to both colored and non-colored static segment routing LSPs. However, this does not apply for PCEP-driven LSPs; a system log message is generated for the mismatch in the first hop resolution type at the time of computing the path.

For example:

```
segment-list path-1 {
  hop-1 ip-address 172.0.12.2;
  hop-2 label 1000012;
  hop-3 label 1000013;
  hop-4 label 1000014;
}
segment-list path-2 {
  hop-1 label 1000011;
  hop-2 label 1000012;
  hop-3 label 1000013;
  hop-4 label 1000014;
}
source-routing-path lsp1 {
  to 172.10.10.1;
  primary {
    path-1;
    path-2;
  }
}
```

The commit of tunnel *lsp1* fails, as path-1 is of IP addressmode and path-2 is of label mode.

- The binding SID is enabled for the static non-colored LSP whose segment list type is SID label.

For example:

```
segment-list path-3 {
  hop-1 label 1000011;
  hop-2 label 1000012;
  hop-3 label 1000013;
  hop-4 label 1000014;
}
source-routing-path lsp1 {
```

```

to 172.10.10.1;
binding-sid 333;
primary {
    path-3;
}
}

```

Configuring binding SID over label segment list is supported only for colored static LSPs and not for no-colored static LSPs.

Static Segment Routing LSP Provisioning

Segment provisioning is performed on per-router basis. For a given segment on a router, a unique service identifier (SID) label is allocated from a desired label pool which may be from the dynamic label pool for an adjacency SID label or from the segment routing global block (SRGB) for a prefix SID or node SID. The adjacency SID label can be dynamically allocated, which is the default behavior, or be allocated from a local static label pool (SRLB). A route for the SID label is then installed in the mpls.0 table.

Junos OS allows static segment routing LSPs by configuring the **segment** statement at the **[edit protocols mpls static-label-switched-path static-label-switched-path]** hierarchy level. A static segment LSP is identified by a unique SID label that falls under Junos OS static label pool. You can configure the Junos OS static label pool by configuring the **static-label-range static-label-range** statement at the **[edit protocols mpls label-range]** hierarchy level.

Static Segment Routing LSP Limitations

- Junos OS currently has a limitation that the next hop cannot be built to push more than the maximum segment list depth labels. So, a segment list with more than the maximum SID labels (excluding the SID label of the first hop which is used to resolve forwarding next-hop) is not usable for colored or non-colored segment routing LSPs. Also, the actual number allowed for a given segment routing LSP may be even lower than the maximum limit, if an MPLS service is on the segment routing LSP or the segment routing LSP is on a link or a node protection path. In all cases, the total number of service labels, SID labels, and link or node protection labels must not exceed the maximum segment list depth. You can configure the maximum segment list limit at **[edit protocols source-packet-routing]** hierarchy level. Multiple non-colored segment routing LSPs with less than or equal to the maximum SID labels can be stitched together to construct a longer segment routing LSP. This is called segment routing LSP stitching. It can be achieved using binding-SID label.
- The segment routing LSP stitching is actually performed at path level. If a non-colored segment routing LSP has multiple paths that is multiple segment lists, each path can be independently stitched to another non-colored segment routing LSP at a stitching point. A non-colored segment routing LSP which is dedicated to stitching may disable ingress route installation by configuring **no-ingress** statement at **[edit protocols source-packet-routing source-routing-path lsp-name]** hierarchy level.

- A maximum of 8 primary paths and 1 secondary path are supported per non-colored static segment routing LSP. If there is a violation in configuration, commit check fails with an error.
- If any segment-list is configured with more labels than the maximum segment list depth, the configuration commit check fails with an error.

Dynamic Creation of Segment Routing LSPs

IN THIS SECTION

- [Configuring Dynamic Segment Routing LSP Template | 1443](#)
- [Resolving Dynamic Segment Routing LSPs | 1444](#)
- [Considerations for Configuring Dynamic Creation of Segment Routing LSPs | 1448](#)
- [Services Supported over Dynamic Segment Routing LSPs | 1448](#)
- [Behavior With Multiple Tunnel Sources in Segment Routing | 1449](#)
- [Dynamic Segment Routing LSPs Limitations | 1449](#)

In segment routing networks that have each provider edge (PE) device connected to every other PE device, a large amount of configuration is required for setting up the segment routing label-switched paths (LSPs), although only a few segment routing traffic-engineered (SR-TE) paths may be used. You can enable BGP-triggered dynamic creation of these LSPs to reduce the amount of configuration in such deployments.

Configuring Dynamic Segment Routing LSP Template

To configure the template for enabling dynamic creation of segment routing LSPs, you must include the [spring-te](#) statement at the `[edit routing-options dynamic-tunnels]` hierarchy.

- The following is a sample configuration for color dynamic segment routing LSP template:

```
[edit routing-options]
dynamic-tunnels {
  <dynamic-tunnel-name> {
    spring-te {
      source-routing-path-template {
        <template-name1> color [c1 c2];
        <template-name2> color [c3];
        <template-name3> color-any;
      }
      destination-networks {
        <dest1>;
        <dest2>;
      }
    }
  }
}
```

```

    }
  }
}

```

- The following is a sample configuration for non-color dynamic segment routing LSP template:

```

dynamic-tunnels {
  <dynamic-tunnel-name> {
    spring-te {
      source-routing-path-template {
        <template-name1>;
      }
      destination-networks {
        <dest1>;
        <dest2>;
      }
    }
  }
}

```

Resolving Dynamic Segment Routing LSPs

IN THIS SECTION

- [Resolving Colored Dynamic Segment Routing LSP | 1444](#)
- [Resolving Uncolored Dynamic Segment Routing LSPs | 1445](#)
- [Dynamic Segment Routing LSP Sample Configuration | 1445](#)

Resolving Colored Dynamic Segment Routing LSP

When the BGP prefixes are assigned with color community, they initially get resolved over the catch-all-route-for-that-particular-color policy, and in turn, the SR-TE template on which the BGP prefix should be resolved onto is identified. The destinations SID is then derived from the BGP payload prefix next-hop attribute. For example, if the next hop of the BGP payload prefix is an IP address that belongs to Device A, then the node-SID of Device A is taken and a corresponding label is prepared and pushed to the bottom of the stack. The BGP payload prefix is resolved in a color-only mode, where the node-SID of Device A is at the bottom of the final label stack, and the SR-TE path labels are on top.

The final LSP template name is a combination of prefix, color, and tunnel name; for example, **<prefix>:<color>:dt-srte-<tunnel-name>**. The color in the LSP name is displayed in hexadecimal format, and the format of the tunnel name is similar to that of RSVP-triggered tunnel LSP names.

To successfully resolve a colored destination network, the color should have a valid template mapping, either to a specific color, or through the **color-any** template. Without a valid mapping, the tunnel is not created and the BGP route requesting for resolution remains unresolved.

Resolving Uncolored Dynamic Segment Routing LSPs

The catch-all routes for non-colored LSPs are added to the inet.3 routing table. The non-colored tunnel destination must be configured in a different **spring-te** configuration with only one template name in the mapping list. This template name is used for all the tunnel routes matching any of the destination networks configured under the same **spring-te** configuration. These tunnels are similar to RSVP tunnels in functionality.

The final LSP template name is a combination of prefix and tunnel name; for example, **<prefix>:dt-srte-<tunnel-name>**.

Dynamic Segment Routing LSP Sample Configuration

IN THIS SECTION

- [Colored Dynamic Segment Routing LSPs | 1445](#)
- [Non-Colored Dynamic Segment Routing LSPs | 1446](#)
- [Unresolved Dynamic Segment Routing LSP | 1447](#)

The dynamic segment routing LSP template always carries a partial path. The last hop node SID is derived automatically at the tunnel creation time depending on the protocol next-hop address (PNH) node SID. The same template can be used by multiple tunnels to different destinations. In such cases, the partial path remains the same, and only the last hop changes depending on the PNH. Dynamic segment routing LSP templates are not common to a single tunnel, as a result a full path cannot be carried on it. You can use a segment list if a full path is to be used.

Colored Dynamic Segment Routing LSPs

Sample configuration for colored dynamic segment routing LSPs:

```
protocols source-packet-routing {
  source-routing-path-template sr_lsp1 {
    primary sr_sl1
    primary sr_sl2 weight 2
    sr-preference 180;
  }
}
dynamic-tunnels tunnel1 {
  spring-te {
    source-routing-path-template {
```

```

        sr_lsp1 color [ 123 124 125 ];
        sr_lsp2 color-any
    }
    destination-networks {
        22.33.44.0/24;
    }
}
}
}

```

For the above-mentioned sample configuration, the route entries are as follows:

inetcolor.0 tunnel route: 22.33.44.0-0/24 --> RT_NH_TUNNEL

inetcolor6.0 tunnel route: ffff::22.33.44.0-0/120 --> RT_NH_TUNNEL

BGP prefix to tunnel mapping:

R1(prefix) -> 22.33.44.55-101(PNH) LSP tunnel name = 22.33.44.55:65:dt-srte-tunnel1

R1(prefix) -> ffff::22.33.44.55-101(PNH) LSP tunnel name = 22.33.44.55:65:dt-srte-tunnel1

R1(prefix) -> ffff::22.33.44.55-124(PNH) LSP tunnel name = 22.33.44.55:7c:dt-srte-tunnel1

inetcolor.0 tunnel route:

22.33.44.55-101/64 --> <next-hop>

22.33.44.55-124/64 --> <next-hop>

inetcolor6.0 tunnel route:

ffff::22.33.44.55-101/160 --> <next-hop>

ffff::22.33.44.55-124/160 --> <next-hop>

Non-Colored Dynamic Segment Routing LSPs

Sample configuration for non-colored dynamic segment routing LSPs:

```

protocols source-packet-routing {
    source-routing-path-template sr_lsp1 {
        primary sr_sl1
        primary sr_sl2 weight 2
        sr-preference 180;
    }
}
dynamic-tunnels {
    tunnel1 {
        spring-te {
            source-routing-path-template {

```

inet.3 tunnel route: 22.33.44.0/24 --> RT_NH_TUNNEL

BGP prefix to tunnel mapping:

R1(prefix) -> ffff::22.33.44.55(PNH) LSP template name = LSP1 --- 22.33.44.55:dt-srte-tunnel2

inet6.3 tunnel route: ffff::22.33.44.55/128 --> <next-hop>

Sample configuration for unresolved dynamic segment routing LSPs:

```
protocols source-packet-routing {
  source-routing-path-template sr_lsp1 {
    primary sr_sl1
    primary sr_sl2 weight 2
    sr-preference 180;
  }
}
dynamic-tunnels tunnel1 {
  spring-te {
```

```

source-routing-path-template {
    sr_lsp1 color [120 121 122 123];
}
destination-networks {
    22.33.44.0/24;
    1.1.1.0/24;
}
}
}

```

For the above-mentioned sample configuration, the route entries are as follows:

inetcolor.0 tunnel route: 22.33.44.0 - 0/24 --> RT_NH_TUNNEL 1.1.1.0 - 0 /24 --> RT_NH_TUNNEL

inetcolor6.0 tunnel route: ffff::22.33.44.0 - 0/120 --> RT_NH_TUNNEL ffff::1.1.1.0 - 0 /24 --> RT_NH_TUNNEL

BGP prefix to tunnel mapping: R1(prefix) -> 22.33.44.55-124(PNH) Tunnel will not be created. (Template not found for the color).

Considerations for Configuring Dynamic Creation of Segment Routing LSPs

When configuring the dynamic creation of segment routing LSPs, take the following into consideration:

- A template can be assigned with a color object. When the dynamic tunnel **spring-te** configuration includes a template with a color object, you must configure all other templates with color objects as well. All destinations are assumed to be colored within that configuration.
- A template can have a list of colors defined on it, or can be configured with the **color-any** option. Both these options can coexist in the same **spring-te** configuration. In such cases, templates assigned with specific colors have a higher preference.
- In a **spring-te** configuration, only one template can be defined with the **color-any** option.
- The color-to-template mapping is done on a one-to-one basis. One color cannot map to multiple templates.
- The template name should be configured in the **spring-te** statement under the **[edit protocols]** hierarchy, and should have the **primary** option enabled.
- Colored and non-colored destinations cannot co-exist in the same **spring-te** configuration.
- You cannot configure same destination networks, with or without color, under different **spring-te** configuration statements.
- In non-colored **spring-te** configuration, only one template can be configured without color object.

Services Supported over Dynamic Segment Routing LSPs

The following services are supported over colored dynamic segment routing LSPs:

- Layer 3 VPN

- BGP EVPN
- Export policy services

The following services are supported over non-colored dynamic segment routing LSPs:

- Layer 3 VPN
- Layer 2 VPN
- Multipath configurations

Behavior With Multiple Tunnel Sources in Segment Routing

When two sources download routes to the same destination from segment routing (for example static and dynamic sourced tunnels), then the segment routing preference is used for choosing the active route entry. A higher value has greater preference. In case the preference remains the same, then the tunnel source is used to determine the route entry.

Dynamic Segment Routing LSPs Limitations

The dynamic SR-TE LSPs do not support the following features and functionalities:

- IPv6 segment routing tunnels.
- Static tunnels.
- 6PE is not supported.
- Distributed CSPF.
- sBFD and LDP tunnelling is not supported for dynamic SR-TE LSPs and in a template.
- Install and B-SID routes in a template.

Color-Based Mapping of VPN Services

IN THIS SECTION

- [VPN Service Coloring | 1450](#)
- [Specifying VPN Service Mapping Mode | 1453](#)
- [Color-IP Protocol Next Hop Resolution | 1454](#)
- [Fallback to IP Protocol Next Hop Resolution | 1455](#)
- [Supported and Unsupported Features for Color-Based Mapping of VPN Services | 1455](#)

You can specify color as a protocol next hop constraint (in addition to the IPv4 or IPv6 address) for resolving transport tunnels over static colored and BGP segment routing traffic-engineered (SRTE) LSPs. This is called the color-IP protocol next hop resolution, where you are required to configure a resolution-map

and apply to the VPN services. With this feature, you can enable color-based traffic steering of Layer 2 and Layer 3 VPN services.

Junos OS supports colored SRTE LSPs associated with a single color. The color-based mapping of VPN services feature is supported on static colored LSPs and BGP SRTE LSPs.

VPN Service Coloring

IN THIS SECTION

- [Egress Color Assignment | 1450](#)
- [Ingress Color Assignment | 1452](#)

In general, a VPN service may be assigned a color on the egress router where the VPN NLRI is advertised, or on an ingress router where the VPN NLRI is received and processed.

You can assign a color to the VPN services at different levels:

- Per routing instance.
- Per BGP group.
- Per BGP neighbor.
- Per prefix.

Once you assign a color, the color is attached to a VPN service in the form of BGP color extended community.

You can assign multiple colors to a VPN service, referred to as multi-color VPN services. In such cases, the last color attached is considered as the color of the VPN service, and all other colors are ignored.

Multiple colors are assigned by egress and/or ingress devices through multiple policies in the following order:

- BGP export policy on the egress device.
- BGP import policy on the ingress device.
- VRF import policy on the ingress device.

The two modes of VPN service coloring are:

Egress Color Assignment

In this mode, the egress device (that is, the advertiser of the VPN NLRI) is responsible for coloring the VPN service. To enable this mode, you can define a routing policy, and apply it in the VPN service's

routing-instance **vrf-export**, group export, or group neighbor export at the **[edit protocols bgp]** hierarchy level. The VPN NLRI is advertised by BGP with the specified color extended community.

For example:

```
[edit routing-options]
community red-comm {
  members color:0:50;
}
```

```
[edit policy-options]
policy-statement pol-color {
  term t1 {
    from {
      [any match conditions];
    }
    then {
      community add red-comm;
      accept;
    }
  }
}
```

```
[edit routing-instances]
vpn-X {
  ...
  vrf-export pol-color ...;
}
```

Or

NOTE: When you apply the routing policy as an export policy of a BGP group or BGP neighbor, you must include the **vpn-apply-export** statement at the BGP, BGP group, or BGP neighbor level in order for the policy to take an effect on the VPN NLRI.

```
[edit protocols bgp]
group PEs {
  ...
  neighbor PE-A {
    export pol-color ...;
```

```

        vpn-apply-export;
    }
}

```

The routing policies are applied to Layer 3 VPN prefix NLRIs, Layer 2 VPN NLRIs, and EVPN NLRIs. The color extended community is inherited by all the VPN routes, imported, and installed in the target VRFs on one or multiple ingress devices.

Ingress Color Assignment

In this mode, the ingress device (that is, the receiver of the VPN NLRI) is responsible for coloring the VPN service. To enable this mode, you can define a routing policy, and apply it to the VPN service's routing-instance **vrf-import**, group import, or group neighbor import at the **[edit protocols bgp]** hierarchy level. All the VPN routes matching the routing policy is attached with the specified color extended community.

For example:

```

[edit routing-options]
community red-comm {
    members color:0:50;
}

```

```

[edit policy-options]
policy-statement pol-color {
    term t1 {
        from {
            [any match conditions];
        }
        then {
            community add red-comm;
            accept;
        }
    }
}

```

```

[edit routing-instances]
vpn-Y {
    ...
    vrf-import pol-color ...;
}

```

Or

```
[edit protocols bgp]
group PEs {
  ...
  neighbor PE-B {
    import pol-color ...;
  }
}
```

Specifying VPN Service Mapping Mode

To specify flexible VPN service mapping modes, you must define a policy using the **resolution-map** statement, and refer the policy in a VPN service's routing-instance **vrf-import**, group import, or group neighbor import at the **[edit protocols bgp]** hierarchy level. All the VPN routes matching the routing policy are attached with the specified resolution-map.

For example:

```
[edit policy-options]
resolution-map map-A {
  <mode-1>;
  <mode-2>;
  ...
}
policy-statement pol-resolution {
  term t1 {
    from {
      [any match conditions];
    }
    then {
      resolution-map map-A;
      accept;
    }
  }
}
```

You can apply import policy to the VPN service's routing-instance.

```
[edit routing-instances]
vpn-Y {
  ...
  vrf-import pol-resolution ...;
}
```

You can also apply the import policy to a BGP group or BGP neighbor.

```
[edit protocols bgp]
group PEs {
  ...
  neighbor PE-B {
    import pol-resolution ...;
  }
}
```

NOTE: Each VPN service mapping mode should have a unique name defined in the resolution-map. Only a single entry of IP-color is supported in the resolution-map, where the VPN route(s) are resolved using a colored-IP protocol next hop in the form of **ip-address:color**.

Color-IP Protocol Next Hop Resolution

The protocol next hop resolution process is enhanced to support colored-IP protocol next hop resolution. For a colored VPN service, the protocol next hop resolution process takes a color and a resolution-map, builds a colored-IP protocol next hop in the form of *IP-address:color*, and resolves the protocol next hop in the inet6color.0 routing table.

You must configure a policy to support multipath resolution of colored Layer 2 VPN, Layer 3 VPN, or EVPN services over colored LSPs. The policy must then be applied with the relevant RIB table as the resolver import policy.

For example:

```
[edit policy-options]
policy-statement mpath {
  then multipath-resolve;
}
```

```
[edit routing-options]
resolution {
  rib bgp.l3vpn.0 {
    inetcolor-import mpath;
  }
}
resolution {
  rib bgp.l3vpn-inet6.0 {
    inet6color-import mpath;
  }
}
```

```

resolution {
    rib bgp.l2vpn.0 {
        inetcolor-import mpath;
    }
}
resolution {
    rib mpls.0 {
        inetcolor-import mpath;
    }
}
resolution {
    rib bgp.evpn.0 {
        inetcolor-import mpath;
    }
}

```

Fallback to IP Protocol Next Hop Resolution

If a colored VPN service does not have a resolution-map applied to it, the VPN service ignores its color and falls back to the IP protocol next hop resolution. Conversely, if a non-colored VPN service has a resolution-map applied to it, the resolution-map is ignored, and the VPN service uses the IP protocol next hop resolution.

The fallback is a simple process from colored SRTE LSPs to LDP LSPs, by using a RIB group for LDP to install routes in inet{6}color.0 routing tables. A longest prefix match for a colored-IP protocol next hop ensures that if a colored SRTE LSP route does not exist, an LDP route with a matching IP address should be returned.

Supported and Unsupported Features for Color-Based Mapping of VPN Services

The following features and functionality are supported with color-based mapping of VPN services:

- BGP Layer 3 VPN
- BGP Layer 2 VPN (Kompella Layer 2 VPN)
- BGP EVPN
- Resolution-map with a single IP-color option.
- Colored IPv4 and IPv6 protocol next hop resolution.
- Routing information base (also known as routing table) group based fallback to LDP LSP in inetcolor.0 routing table.
- Colored SRTE LSP.
- Virtual platforms.

- 64-bit Junos OS.
- Logical systems.

The following features and functionality are not supported with color-based mapping of VPN services:

- Colored MPLS LSPs, such as RSVP, LDP, BGP-LU, static.
- Layer 2 circuit
- FEC-129 BGP auto-discovered and LDP-signaled Layer 2 VPN.
- VPLS
- MVPN
- IPv4 and IPv6 using resolution-map.
- BGP labeled unicast.

Tunnel Templates for PCE-Initiated Segment Routing LSPs

You can configure a tunnel template for PCE-initiated segment routing LSPs to pass down two additional parameters for these LSPs - Bidirectional forwarding detection (BFD) and LDP tunneling.

When a PCE-Initiated segment routing LSP is being created, the LSP is checked against policy statements (if any) and if there is a match, the policy applies the configured template for that LSP. The template configuration is inherited only if it is not provided by the LSP source (PCEP); for example, metric.

To configure a template:

1. Include the [source-routing-path-template](#) statement at the **[edit protocols source-packet-routing]** hierarchy level. You can configure the additional BFD and LDP tunneling parameters here.
2. Include the *source-routing-path-template-map* statement at the **[edit protocols source-packet-routing]** hierarchy level to list the policy statements against which the PCE-initiated LSP should be checked.
3. Define a policy to list the LSPs on which the template should be applied.

The **from** statement can include either the LSP name or LSP regular expression using the **lsp** and **lsp-regex** match conditions. These options are mutually exclusive, so you can specify only one option at a given point in time.

The **then** statement must include the **sr-te-template** option with an accept action. This applies the template to the PCE-initiated LSP.

Take the following into consideration when configuring a template for PCE-initiated LSPs:

- Template configuration is not applicable to statically configured segment routing LSPs, or any other client's segment routing LSP.
- PCEP-provided configuration has precedence over template configuration.

- PCEP LSP does not inherit template segment-list configuration.

Example: Configuring Static Segment Routing Label Switched Path

IN THIS SECTION

- [Requirements | 1457](#)
- [Overview | 1457](#)
- [Configuration | 1458](#)
- [Verification | 1471](#)

This example shows how to configure static segment routing label switched paths (LSPs) in MPLS networks. This configuration helps to bring higher scalability to MPLS networks.

Requirements

This example uses the following hardware and software components:

- Seven MX Series 5G Universal Routing Platforms
- Junos OS Release 18.1 or later running on all the routers

Before you begin, be sure you configure the device interfaces.


Overview

Junos OS a set of explicit segment routing paths are configured on the ingress router of a non-colored static segment routing tunnel by configuring the **segment-list** statement at the **[edit protocols source-packet-routing]** hierarchy level. You can configure segment routing tunnel by configuring the **source-routing-path** statement at **[edit protocols source-packet-routing]** hierarchy level. The segment routing tunnel has a destination address and one or more primary paths and optionally secondary paths that refer to the segment list. Each segment list consists of a sequence of hops. For non-colored static segment routing tunnel, the first hop of the segment list specifies an immediate next hop IP address and the second to Nth hop specifies the segment identifies (SID) labels corresponding to the link or node which the path traverses. The route to the destination of the segment routing tunnel is installed in inet.3 table.

Topology

In this example, configure layer 3 VPN on the provider edge routers PE1 and PE5. Configure the MPLS protocol on all the routers. The segment routing tunnel is configured from router PE1 to router PE5 with a primary path configured on router PE1 and router PE5 . Router PE1 is also configured with secondary path for path protection. The transit routers PE2 to PE4 are configured with adjacency SID labels with label pop and an outgoing interface.

Figure 121: Static Segment Routing Label Switched Path

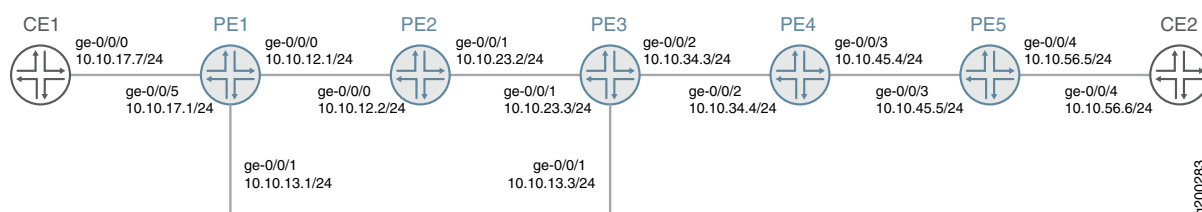

Configuration

IN THIS SECTION

- Configuring Device PE1 | 1462
- Configuring Device PE2 | 1468
- Results | 1469

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

PE1

```
set interfaces ge-0/0/0 unit 0 family inet address 10.10.12.1/24
set interfaces ge-0/0/0 unit 0 family mpls maximum-labels 5
set interfaces ge-0/0/1 unit 0 family inet address 10.10.13.1/24
set interfaces ge-0/0/1 unit 0 family mpls maximum-labels 5
set interfaces ge-0/0/5 unit 0 family inet address 10.10.17.1/24
set routing-options autonomous-system 65000
set routing-options forwarding-table export load-balance-policy
set routing-options forwarding-table chained-composite-next-hop ingress l3vpn
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols bgp group pe type internal
set protocols bgp group pe local-address 192.168.147.211
set protocols bgp group pe family inet-vpn unicast
set protocols bgp group pe neighbor 192.168.146.181
```

```

set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols source-packet-routing segment-list sl-15-primary hop-1 ip-address 10.10.13.3
set protocols source-packet-routing segment-list sl-15-primary hop-2 label 1000134
set protocols source-packet-routing segment-list sl-15-primary hop-3 label 1000145
set protocols source-packet-routing segment-list sl-15-backup hop-1 ip-address 10.10.12.2
set protocols source-packet-routing segment-list sl-15-backup hop-2 label 1000123
set protocols source-packet-routing segment-list sl-15-backup hop-3 label 1000134
set protocols source-packet-routing segment-list sl-15-backup hop-4 label 1000145
set protocols source-packet-routing source-routing-path lsp-15 to 192.168.146.181
set protocols source-packet-routing source-routing-path lsp-15 binding-sid 1000999
set protocols source-packet-routing source-routing-path lsp-15 primary sl-15-primary
set protocols source-packet-routing source-routing-path lsp-15 secondary sl-15-backup
set policy-options policy-statement VPN-A-export term a from protocol ospf
set policy-options policy-statement VPN-A-export term a from protocol direct
set policy-options policy-statement VPN-A-export term a then community add VPN-A
set policy-options policy-statement VPN-A-export term a then accept
set policy-options policy-statement VPN-A-export term b then reject
set policy-options policy-statement VPN-A-import term a from protocol bgp
set policy-options policy-statement VPN-A-import term a from community VPN-A
set policy-options policy-statement VPN-A-import term a then accept
set policy-options policy-statement VPN-A-import term b then reject
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf from route-filter 10.10.0.0/16 orlonger
set policy-options policy-statement bgp-to-ospf then accept
set policy-options policy-statement load-balance-policy then load-balance per-packet
set policy-options community VPN-A members target:65000:1
set routing-instances VRF1 instance-type vrf
set routing-instances VRF1 interface ge-0/0/5.0
set routing-instances VRF1 route-distinguisher 192.168.147.211:1
set routing-instances VRF1 vrf-import VPN-A-import
set routing-instances VRF1 vrf-export VPN-A-export
set routing-instances VRF1 vrf-table-label
set routing-instances VRF1 protocols ospf export bgp-to-ospf
set routing-instances VRF1 protocols ospf area 0.0.0.0 interface ge-0/0/5.0

```

PE2

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.12.2/24

```

```

set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 10.10.23.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set protocols mpls static-label-switched-path adj-23 segment 1000123
set protocols mpls static-label-switched-path adj-23 segment next-hop 10.10.23.3
set protocols mpls static-label-switched-path adj-23 segment pop
set protocols mpls static-label-switched-path adj-21 segment 1000221
set protocols mpls static-label-switched-path adj-21 segment next-hop 10.10.12.1
set protocols mpls static-label-switched-path adj-21 segment pop
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0

```

PE3

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.13.3/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 10.10.23.3/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 10.10.34.3/24
set interfaces ge-0/0/2 unit 0 family mpls
set protocols mpls static-label-switched-path adj-34 segment 1000134
set protocols mpls static-label-switched-path adj-34 segment next-hop 10.10.34.4
set protocols mpls static-label-switched-path adj-34 segment pop
set protocols mpls static-label-switched-path adj-32 segment 1000232
set protocols mpls static-label-switched-path adj-32 segment next-hop 10.10.23.2
set protocols mpls static-label-switched-path adj-32 segment pop
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0

```

PE4

```

set interfaces ge-0/0/2 unit 0 family inet address 10.10.34.4/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 10.10.45.4/24
set interfaces ge-0/0/3 unit 0 family mpls
set protocols mpls static-label-switched-path adj-45 segment 1000145
set protocols mpls static-label-switched-path adj-45 segment next-hop 10.10.45.5
set protocols mpls static-label-switched-path adj-45 segment pop
set protocols mpls static-label-switched-path adj-43 segment 1000243
set protocols mpls static-label-switched-path adj-43 segment next-hop 10.10.34.3
set protocols mpls static-label-switched-path adj-43 segment pop
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0

```

PE5

```

set interfaces ge-0/0/3 unit 0 family inet address 10.10.45.5/24
set interfaces ge-0/0/3 unit 0 family mpls maximum-labels 5
set interfaces ge-0/0/4 unit 0 family inet address 10.10.56.5/24
set routing-options autonomous-system 65000
set protocols mpls interface ge-0/0/3.0
set protocols mpls label-range static-label-range 1000000 1000999
set protocols bgp group pe type internal
set protocols bgp group pe local-address 192.168.146.181
set protocols bgp group pe family inet-vpn unicast
set protocols bgp group pe neighbor 192.168.147.211
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols bfd sbfd local-discriminator 0.0.0.32 minimum-receive-interval 1000
set protocols source-packet-routing segment-list sl-51 hop-1 ip-address 10.10.45.4
set protocols source-packet-routing segment-list sl-51 hop-2 label 1000243
set protocols source-packet-routing segment-list sl-51 hop-3 label 1000232
set protocols source-packet-routing segment-list sl-51 hop-4 label 1000221
set protocols source-packet-routing source-routing-path lsp-51 to 192.168.147.211
set protocols source-packet-routing source-routing-path lsp-51 primary sl-51
set policy-options policy-statement VPN-A-export term a from protocol ospf
set policy-options policy-statement VPN-A-export term a from protocol direct
set policy-options policy-statement VPN-A-export term a then community add VPN-A

```

```

set policy-options policy-statement VPN-A-export term a then accept
set policy-options policy-statement VPN-A-export term b then reject
set policy-options policy-statement VPN-A-import term a from protocol bgp
set policy-options policy-statement VPN-A-import term a from community VPN-A
set policy-options policy-statement VPN-A-import term a then accept
set policy-options policy-statement VPN-A-import term b then reject
set policy-options policy-statement bgp-to-ospf from protocol bgp
set policy-options policy-statement bgp-to-ospf from route-filter 10.10.0.0/16 orlonger
set policy-options policy-statement bgp-to-ospf then accept
set policy-options community VPN-A members target:65000:1
set routing-instances VRF1 instance-type vrf
set routing-instances VRF1 interface ge-0/0/4.0
set routing-instances VRF1 route-distinguisher 192.168.146.181:1
set routing-instances VRF1 vrf-import VPN-A-import
set routing-instances VRF1 vrf-export VPN-A-export
set routing-instances VRF1 vrf-table-label
set routing-instances VRF1 protocols ospf export bgp-to-ospf
set routing-instances VRF1 protocols ospf area 0.0.0.0 interface ge-0/0/4.0

```

CE1

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.17.7/24
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0

```

CE2

```

set interfaces ge-0/0/4 unit 0 family inet address 10.10.56.6/24
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0

```

Configuring Device PE1

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the interfaces.

```
[edit interfaces]
set ge-0/0/0 unit 0 family inet address 10.10.12.1/24
set ge-0/0/0 unit 0 family mpls maximum-labels 5

set ge-0/0/1 unit 0 family inet address 10.10.13.1/24
set ge-0/0/1 unit 0 family mpls maximum-labels 5

set ge-0/0/5 unit 0 family inet address 10.10.17.1/24
```

2. Configure autonomous system number and options to control packet forwarding routing options.

```
[edit routing-options]
set autonomous-system 65000
set forwarding-table export load-balance-policy
set forwarding-table chained-composite-next-hop ingress l3vpn
```

3. Configure the interfaces with the MPLS protocol and configure the MPLS label range.

```
[edit protocols mpls]
set interface ge-0/0/0.0
set interface ge-0/0/1.0
set label-range static-label-range 1000000 1000999
```

4. Configure the type of peer group, local address, protocol family for NLRI in updates, and IP address of a neighbor for the peer group.

```
[edit protocols bgp]
set group pe type internal
set group pe local-address 192.168.147.211
set group pe family inet-vpn unicast
set group pe neighbor 192.168.146.181
```

5. Configure the protocol area interfaces.

```
[edit protocols ospf]
set area 0.0.0.0 interface ge-0/0/0.0
set area 0.0.0.0 interface lo0.0
set area 0.0.0.0 interface ge-0/0/1.0
```

6. Configure the IPv4 address and labels of primary and secondary paths for source routing-traffic engineering (TE) policies of protocol source packet routing (SPRING).

```
[edit protocols source-packet-routing segment-list]
set sl-15-primary hop-1 ip-address 10.10.13.3
set sl-15-primary hop-2 label 1000134
set sl-15-primary hop-3 label 1000145
set sl-15-backup hop-1 ip-address 10.10.12.2
set sl-15-backup hop-2 label 1000123
set sl-15-backup hop-3 label 1000134
set sl-15-backup hop-4 label 1000145
```

7. Configure destination IPv4 address, binding SID label, primary, and secondary source routing path for protocol SPRING.

```
[edit protocols source-packet-routing source-routing-path]
set lsp-15 to 192.168.146.181
set lsp-15 binding-sid 1000999
set lsp-15 primary sl-15-primary
set lsp-15 secondary sl-15-backup
```

8. Configure policy options.

```
[edit policy-options policy-statement]
set VPN-A-export term a from protocol ospf
set VPN-A-export term a from protocol direct
set VPN-A-export term a then community add VPN-A
set VPN-A-export term a then accept
set VPN-A-export term b then reject
set VPN-A-import term a from protocol bgp
set VPN-A-import term a from community VPN-A
set VPN-A-import term a then accept
set VPN-A-import term b then reject
set bgp-to-ospf from protocol bgp
set bgp-to-ospf from route-filter 10.10.0.0/16 orlonger
set bgp-to-ospf then accept
set load-balance-policy then load-balance per-packet
```

9. Configure BGP community information.

```
[edit policy-options]
```



```
set community VPN-A members target:65000:1
```

10. Configure routing instance VRF1 with instance type, interface, router distinguisher, VRF import, export and table label. Configure export policy and interface of area for protocol OSPF.

```
[edit routing-instances VRF1]
set instance-type vrf
set interface ge-0/0/5.0
set route-distinguisher 192.168.147.211:1
set vrf-import VPN-A-import
set vrf-export VPN-A-export
set vrf-table-label
set protocols ospf export bgp-to-ospf
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show policy-options**, **show protocols**, **show routing-options**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 55.1.12.1/24;
    }
    family mpls {
      maximum-labels 5;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 55.1.13.1/24;
    }
    family mpls {
      maximum-labels 5;
    }
  }
}
```

```

ge-0/0/5 {
  unit 0 {
    family inet {
      address 55.1.17.1/24;
    }
  }
}

```

user@PE1# show routing-options

```

autonomous-system 65000;
forwarding-table {
export load-balance-policy;
  chained-composite-next-hop {
    ingress {
      l3vpn;
    }
  }
}

```

user@PE1# show protocols

```

mpls {
  interface ge-0/0/0.0;
  interface ge-0/0/1.0;
  label-range {
    static-label-range 1000000 1000999;
  }
}
bgp {
  group pe {
    type internal;
    local-address 128.9.147.211;
    family inet-vpn {
      unicast;
    }
    neighbor 128.9.146.181;
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-0/0/0.0;
    interface lo0.0;
    interface ge-0/0/1.0;
  }
}

```

```

    }
}
bfd {
}
source-packet-routing {
    segment-list sl-15-primary {
        hop-1 ip-address 55.1.13.3;
        hop-2 label 1000134;
        hop-3 label 1000145;
    }
    segment-list sl-15-backup {
        hop-1 ip-address 55.1.12.2;
        hop-2 label 1000123;
        hop-3 label 1000134;
        hop-4 label 1000145;
    }
    source-routing-path lsp-15 {
        to 128.9.146.181;
        binding-sid 1000999;
        primary {
            sl-15-primary;
        }
        secondary {
            sl-15-backup;
        }
    }
}
}

```

```

user@PE1# show policy-options
policy-statement VPN-A-export {
    term a {
        from protocol [ ospf direct ];
        then {
            community add VPN-A;
            accept;
        }
    }
    term b {
        then reject;
    }
}
policy-statement VPN-A-import {
    term a {
        from {

```

```

        protocol bgp;
        community VPN-A;
    }
    then accept;
}
term b {
    then reject;
}
}
policy-statement bgp-to-ospf {
    from {
        protocol bgp;
        route-filter 55.1.0.0/16 orlonger;
    }
    then accept;
}
policy-statement load-balance-policy {
    then {
        load-balance per-packet;
    }
}
community VPN-A members target:65000:1;

```

```

user@PE1# show routing-instances
VRF1 {
    instance-type vrf;
    interface ge-0/0/5.0;
    route-distinguisher 128.9.147.211:1;
    vrf-import VPN-A-import;
    vrf-export VPN-A-export;
    vrf-table-label;
    protocols {
        ospf {
            export bgp-to-ospf;
            area 0.0.0.0 {
                interface ge-0/0/5.0;
            }
        }
    }
}

```

Configuring Device PE2

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

1. Configure the interfaces.

```
[edit interfaces]
set ge-0/0/0 unit 0 family inet address 10.10.12.2/24
set ge-0/0/0 unit 0 family mpls

set ge-0/0/1 unit 0 family inet address 10.10.23.2/24
set ge-0/0/1 unit 0 family mpls
```

2. Configure the static LSP for protocol MPLS.

```
[edit protocols mpls static-label-switched-path]
set adj-23 segment 1000123
set adj-23 segment next-hop 10.10.23.3
set adj-23 segment pop
set adj-21 segment 1000221
set adj-21 segment next-hop 10.10.12.1
set adj-21 segment pop
```

3. Configure interfaces and static label range for protocol MPLS.

```
[edit protocols mpls]
set interface ge-0/0/0.0
set interface ge-0/0/1.0
set label-range static-label-range 1000000 1000999
```

4. Configure interfaces for protocol OSPF.

```
[edit protocols ospf area 0.0.0.0]
set interface ge-0/0/0.0
set interface ge-0/0/1.0
```

Results

From configuration mode on router PE2, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

user@PE2# **show interfaces**

```
ge-0/0/0 {
  unit 0 {
    family inet {
      address 55.1.12.2/24;
    }
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 55.1.23.2/24;
    }
    family mpls;
  }
}
```

user@PE2# **show protocols**

```
mpls {
  static-label-switched-path adj-23 {
    segment {
      1000123;
      next-hop 55.1.23.3;
      pop;
    }
  }
  static-label-switched-path adj-21 {
    segment {
      1000221;
      next-hop 55.1.12.1;
      pop;
    }
  }
  interface ge-0/0/0.0;
  interface ge-0/0/1.0;
  label-range {
    static-label-range 1000000 1000999;
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-0/0/0.0;
    interface ge-0/0/1.0;
```

```
}
}
```

Verification

IN THIS SECTION

- Verifying Route Entry of Routing Table inet.3 of Router PE1 | 1471
- Verifying Route Table Entries of Routing Table mpls.0 of Router PE1 | 1472
- Verifying SPRING Traffic Engineered LSP of Router PE1 | 1472
- Verifying SPRING Traffic Engineered LSPs on the Ingress Router of Router PE1 | 1473
- Verifying the Routing Table Entries of Routing Table mpls.0 of Router PE2 | 1474
- Verifying the Status of Static MPLS LSP Segments of Router PE2 | 1475

Confirm that the configuration is working properly.

Verifying Route Entry of Routing Table inet.3 of Router PE1

Purpose

Verify the route entry of routing table inet.3 of router PE1.

Action

From operational mode, enter the **show route table inet.3** command.

```
user@PE1> show route table inet.3
```

```
inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.146.181/32    *[SPRING-TE/8] 03:09:26, metric 1
                    > to 10.10.13.3 via ge-0/0/1.0, Push 1000145, Push 1000134(top)

                    to 10.10.12.2 via ge-0/0/0.0, Push 1000145, Push 1000134,
                    Push 1000123(top)
```

Meaning

The output displays the ingress routes of segment routing tunnels.

Verifying Route Table Entries of Routing Table mpls.0 of Router PE1

Purpose

Verify the route entries of routing table mpls.0

Action

From operational mode, enter the **show route table mpls.0** command.

user@PE1> **show route table mpls.0**

```
mpls.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 03:25:52, metric 1
            Receive
1          *[MPLS/0] 03:25:52, metric 1
            Receive
2          *[MPLS/0] 03:25:52, metric 1
            Receive
13         *[MPLS/0] 03:25:52, metric 1
            Receive
16         *[VPN/0] 03:25:52
            > via lsi.0 (VRF1), Pop
1000999    *[SPRING-TE/8] 03:04:03, metric 1
            > to 10.10.13.3 via ge-0/0/1.0, Swap 1000145, Push 1000134(top)

            to 10.10.12.2 via ge-0/0/0.0, Swap 1000145, Push 1000134,
            Push 1000123(top)
```

Meaning

The output displays the SID labels of segment routing tunnels.

Verifying SPRING Traffic Engineered LSP of Router PE1

Purpose

Verify SPRING traffic engineered LSPs on the ingress routers.

Action

From operational mode, enter the **show spring-traffic-engineering overview** command.

user@PE1> **show spring-traffic-engineering overview**


```

Overview of SPRING-TE:
  Route preference: 8
  Number of LSPs: 1 (Up: 1, Down: 0)
  External controllers:
    < Not configured >

```

Meaning

The output displays the overview of SPRING traffic engineered LSPs on the ingress router.

Verifying SPRING Traffic Engineered LSPs on the Ingress Router of Router PE1

Purpose

Verify SPRING traffic engineered LSPs on the ingress router.

Action

From operational mode, enter the **show spring-traffic-engineering lsp detail** command.

```
user@PE1# show spring-traffic-engineering lsp detail
```

```

Name: lsp-15
To: 192.168.146.181
State: Up
  Path: sl-15-primary
  Outgoing interface: ge-0/0/1.0
  BFD status: N/A (Up: 0, Down: 0)
  SR-ERO hop count: 3
    Hop 1 (Strict):
      NAI: IPv4 Adjacency ID, 0.0.0.0 -> 10.10.13.3
      SID type: None
    Hop 2 (Strict):
      NAI: None
      SID type: 20-bit label, Value: 1000134
    Hop 3 (Strict):
      NAI: None
      SID type: 20-bit label, Value: 1000145
  Path: sl-15-backup
  Outgoing interface: ge-0/0/0.0
  BFD status: N/A (Up: 0, Down: 0)
  SR-ERO hop count: 4
    Hop 1 (Strict):
      NAI: IPv4 Adjacency ID, 0.0.0.0 -> 10.10.12.2
      SID type: None

```

```

Hop 2 (Strict):
  NAI: None
  SID type: 20-bit label, Value: 1000123
Hop 3 (Strict):
  NAI: None
  SID type: 20-bit label, Value: 1000134
Hop 4 (Strict):
  NAI: None
  SID type: 20-bit label, Value: 1000145

Total displayed LSPs: 1 (Up: 1, Down: 0)

```

Meaning

The output displays details of SPRING traffic engineered LSPs on the ingress router

Verifying the Routing Table Entries of Routing Table mpls.0 of Router PE2

Purpose

Verify the routing table entries of routing table mpls.0 of router PE2.

Action

From operational mode, enter the **show route table mpls.0** command.

```
user@PE2> show route table mpls.0
```

```

mpls.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 03:22:29, metric 1
            Receive
1          *[MPLS/0] 03:22:29, metric 1
            Receive
2          *[MPLS/0] 03:22:29, metric 1
            Receive
13         *[MPLS/0] 03:22:29, metric 1
            Receive
1000123    *[MPLS/6] 03:22:29, metric 1
            > to 10.10.23.3 via ge-0/0/1.0, Pop
1000123(S=0) *[MPLS/6] 03:22:29, metric 1
            > to 10.10.23.3 via ge-0/0/1.0, Pop
1000221    *[MPLS/6] 03:22:29, metric 1
            > to 10.10.12.1 via ge-0/0/0.0, Pop

```

```
1000221(S=0)          *[MPLS/6] 03:22:29, metric 1
                      > to 10.10.12.1 via ge-0/0/0.0, Pop
```

Verifying the Status of Static MPLS LSP Segments of Router PE2

Purpose

Verify the status of MPLS LSP segments of router PE2.

Action

From operational mode, enter the **show mpls static-lsp** command.

```
user@PE2> show mpls static-lsp
```

```
Ingress LSPs:
Total 0, displayed 0, Up 0, Down 0

Transit LSPs:
Total 0, displayed 0, Up 0, Down 0

Bypass LSPs:
Total 0, displayed 0, Up 0, Down 0

Segment LSPs:
LSPname                SID-label    State
adj-21                 1000221      Up
adj-23                 1000123      Up
Total 2, displayed 2, Up 2, Down 0
```

Meaning

The output displays the status of static MPLS LSP segments of router PE2.

Release History Table

Release	Description
19.4R1	You can configure a tunnel template for PCE-initiated segment routing LSPs to pass down two additional parameters for these LSPs - Bidirectional forwarding detection (BFD) and LDP tunneling.
19.1R1	Starting in Junos OS Release 19.1R1, a commit check feature is introduced to ensure that all the segment lists contributing to the colored routes have the minimum label present for all hops.
19.1R1	Starting in Junos OS Release 19.1R1, this requirement does not apply, as the first hop of the non-colored static LSPs now provides support for SID labels, in addition to IP addresses. With the first hop label support, MPLS fast reroute (FRR) and weighted equal-cost multipath is enabled for resolving the static non-colored segment routing LSPs, similar to colored static LSPs.
18.2R1	Starting in Junos OS Release 18.2R1, statically configured non-colored segment routing LSPs on the ingress device are reported to the Path Computation Element (PCE) through a Path Computation Element Protocol (PCEP) session.

Enabling Distributed CSPF for Segment Routing LSPs

IN THIS SECTION

- [Distributed CSPF Computation Constraints | 1477](#)
- [Distributed CSPF Computation Algorithm | 1477](#)
- [Distributed CSPF Computation Database | 1478](#)
- [Configuring Distributed CSPF Computation Constraints | 1478](#)
- [Distributed CSPF Computation | 1480](#)
- [Interaction Between Distributed CSPF Computation and SRTE Features | 1480](#)
- [Distributed CSPF Computation Sample Configurations | 1481](#)

Prior to Junos OS Release 19.2R1S1, for traffic engineering of segment routing paths, you could either explicitly configure static paths, or use computed paths from an external controller. With the distributed Constrained Shortest Path First (CSPF) for segment routing LSP feature, you can compute a segment routing LSP locally on the ingress device according to the constraints you have configured. With this feature, the LSPs are optimized based on the configured constraints and metric type (traffic-engineering or IGP). The LSPs are computed to utilize the available ECMP paths to the destination with segment routing label stack compression enabled or disabled.

Distributed CSPF Computation Constraints

Segment routing LSP paths are computed when all the configured constraints are met.

The distributed CSPF computation feature supports the following subset of constraints specified in the Internet draft, draft-ietf-spring-segment-routing-policy-03.txt, *Segment Routing Policy for Traffic Engineering*:

- Inclusion and exclusion of administrative groups.
- Inclusion of loose or strict hop IP addresses.

NOTE: You can specify only router IDs in the loose or strict hop constraints. Labels and other IP addresses cannot be specified as loose or strict hop constraints in Junos OS Release 19.2R1-S1.

- Maximum number of segment IDs (SIDs) in the segment list.
- Maximum number of segment lists per candidate segment routing path.

The distributed CSPF computation feature for segment routing LSPs does not support the following types of constraints and deployment scenarios:

- IPv6 addresses.
- Inter domain segment routing traffic engineering (SRTE) LSPs.
- Unnumbered interfaces.
- Multiple protocols routing protocols such as, OSPF, ISIS, and BGP-LS, enabled at the same time.
- Computation with prefixes or anycast addresses as destinations.
- Including and excluding interface IP addresses as constraints.

Distributed CSPF Computation Algorithm

IN THIS SECTION

- [Label Stack Compression Enabled | 1478](#)
- [Label Stack Compression Disabled | 1478](#)

The distributed CSPF computation feature for segment routing LSPs uses the label stack compression algorithm with CSPF.

Label Stack Compression Enabled

A compressed label stack represents a set of paths from a source to a destination. It generally consists of node SIDs and adjacency SIDs. When label stack compression is enabled, the result of the computation is a set of paths that maximize ECMP to the destination, with minimum number of SIDs in the stack, while conforming to constraints.

Label Stack Compression Disabled

The multipath CSPF computation with label stack compression disabled finds up to N segment lists to destination, where:

- The cost of all segment lists is equal to and the same as the shortest traffic-engineering metric to reach the destination.
- Each segment list is comprised of adjacency SIDs.
- The value of N is the maximum number of segment lists allowed for the candidate path by configuration.
- No two segment lists are identical.
- Each segment list satisfies all the configured constraints.

Distributed CSPF Computation Database

The database used for SRTE computation has all links, nodes, prefixes and their characteristics irrespective of whether traffic-engineering is enabled in those advertising nodes. In other words, it is the union of the traffic-engineering database (TED) and the IGP link state database of all domains that the computing node has learnt from.

Configuring Distributed CSPF Computation Constraints

You can use a compute profile to logically group the computation constraints. These compute profiles are referenced by the segment routing paths for computing the primary and secondary segment routing LSPs.

To configure a compute profile, include the **compute-profile** statement at the **[edit protocols source-packet-routing]** hierarchy level.

The configuration for the supported computation constraints include:

• Administrative groups

You can configure **admin-groups** under the **[edit protocols mpls]** hierarchy level. Junos OS applies the administrative group configuration to the segment routing traffic-engineering (SRTE) interfaces.

To configure the computation constraints you can specify three categories for a set of administrative groups. The computation constraint configuration can be common to all candidate segment routing paths, or it can be under individual candidate paths.

- **include-any**—Specifies that any link with at least one of the configured administrative groups in the list is acceptable for the path to traverse.

- **include-all**—Specifies that any link with all of the configured administrative groups in the list is acceptable for the path to traverse.
- **exclude**—Specifies that any link which does not have any of the configured administrative groups in the list is acceptable for the path to traverse.

- **Explicit path**

You can specify a series of router IDs in the compute profile as a constraint for computing the SRTE candidate paths. Each hop has to be an IPv4 address and can be of type strict or loose. If the type of a hop is not configured, strict is used. You must include the **compute** option under the [segment-list](#) statement when specifying the explicit path constraint.

- **Maximum number of segment lists (ECMP paths)**

You can associate a candidate path with a number of dynamic segment-lists. The paths are ECMP paths, where each segment-list translates into a next hop gateway with active weight. These paths are a result of path computation with or without compression.

You can configure this attribute using the **maximum-computed-segment-lists** *maximum-computed-segment-lists* option under the [compute-profile](#) configuration statement. This configuration determines the maximum number of such segment lists computed for a given primary and secondary LSP.

- **Maximum segment list depth**

The maximum segment list depth computation parameter ensures that amongst the ECMP paths that satisfy all other constraints such as administrative group, only the paths that have segment lists less than or equal to the maximum segment list depth are used. When you configure this parameter as a constraint under the compute-profile, it overrides the **maximum-segment-list-depth** configuration under the **[edit protocols source-packet-routing]** hierarchy level, if present.

You can configure this attribute using the **maximum-segment-list-depth** *maximum-segment-list-depth* option under the [compute-profile](#) configuration statement.

- **Protected or unprotected adjacency SIDs**

You can configure protected or unprotected adjacency SID as a constraint under the [compute-profile](#) to avoid links with the specified SID type.

- **Metric type**

You can specify the type of metric on the link to be used for computation. By default, SR-TE LSPs use traffic-engineering metrics of the links for computation. The traffic-engineering metric for links is advertised by traffic-engineering extensions of IGP protocols. However, you may also choose to use the IGP-metric for computation by using the metric-type configuration in the compute profile.

You can configure this attribute using the **metric-type (igp | te)** option under the [compute-profile](#) configuration statement.

Distributed CSPF Computation

The SRTE candidate paths are computed locally such that they satisfy the configured constraints. When label stack compression is disabled, the multi-path CSPF computation result is a set of adjacency SID stacks. When label stack compression is enabled, the result is a set of compressed label stacks (composed of adjacent SIDs and node SIDs).

When secondary paths are computed, the links, nodes and SRLGs taken by the primary paths are not avoided for computation. For more information on primary and secondary paths, see [“Configuring Primary and Secondary LSPs” on page 569](#).

For any LSPs with unsuccessful computation result, the computation is retried as traffic-engineering database (TED) changes.

Interaction Between Distributed CSPF Computation and SRTE Features

IN THIS SECTION

- [Weights Associated With Paths of an SRTE Policy | 1480](#)
- [BFD Liveness Detection | 1480](#)
- [inherit-label-nexthops | 1480](#)
- [Auto-Translate Feature | 1480](#)

Weights Associated With Paths of an SRTE Policy

You can configure weights against computed and static SRTE paths, which contribute to the next hops of the route. However, a single path that has computation enabled can result in multiple segment lists. These computed segment lists are treated as ECMP amongst themselves. You can assign hierarchical ECMP weights to these segments, considering the weights assigned to each of the configured primaries.

BFD Liveness Detection

You can configure BFD liveness detection for the computed primary or secondary paths. Every computed primary or secondary path can result in multiple segment lists, as a result, the BFD parameters configured against the segment lists are applied to all the computed segment lists. If all the active primary paths go down, the pre-programmed secondary path (if provided) becomes active.

inherit-label-nexthops

You are not required to explicitly enable the **inherit-label-nexthops** configuration under the **[edit protocols source-packet-routing segment-list segment-list-name]** hierarchy for the computed primary or secondary paths, as it is a default behavior.

Auto-Translate Feature

You can configure the auto-translate feature on the segment lists, and the primary or secondary paths with the auto-translate feature reference these segment lists. On the other hand, the primary or secondary

on which compute feature is enabled cannot reference any segment list. As a result, you cannot enable both the compute feature and the auto-translate feature for a given primary or secondary path. However, you could have an LSP configured with a primary path with compute type and another with auto-translate type.

Distributed CSPF Computation Sample Configurations

IN THIS SECTION

- [Example 1 | 1481](#)
- [Example 2 | 1482](#)
- [Example 3 | 1482](#)

Example 1

In Example 1,

- The non-computed primary path references a configured segment-list. In this example, the configured segment list *static_sl1* is referenced, and it also serves as the name for this primary path.
- A computed primary should have a name configured, and this name should not reference any configured segment list. In this example, *compute_segment1* is not a configured segment list.
- The *compute_profile_red* compute-profile is applied to the primary path with the name *compute_segment1*.
- The *compute_profile_red* compute-profile includes a segment list of type **compute**, which is used to specify the explicit path constraint for the computation.

```
[edit protocols source-packet-routing]
segment-list static_sl1{
  hop1 label 80000
}
segment-list exp_path1 {
  hop1 ip-address 10.1.1.1 loose
  hop2 ip-address 2.2.2.2
  compute
}
compute-profile compute_profile_red {
  include-any red
  segment-list exp_path1
  maximum-segment-list-depth 5
}
```

The weights for computed path next-hops and static next-hops are 2 and 3, respectively. Assuming the next-hops for computed paths are *comp_nh1*, *comp_nh2*, and *comp_nh3*, and the next-hop for static path is *static_nh*, the weights are applied as follows:

Next-Hop	Weight
comp_nh1	2
comp_nh2	2
comp_nh3	2
static_nh	9

Example 2

In Example 2, both the primary and secondary paths can be of compute type and can have their own compute-profiles.

```
[edit protocols source-packet-routing]
compute-profile compute_profile_green{
  include-any green
  maximum-segment-list-depth 5
}
compute-profile compute_profile_red{
  include-any red
  maximum-segment-list-depth 8
}
```

Example 3

In Example 3, when compute is mentioned under a primary or secondary path, it results in local computation of a path to the destination without any constraints or other parameters for the computation.

```
[edit protocols source-packet-routing]
source-routing-path srte_colored_policy1 {
  to 5.5.5.5
  color 5
  binding-sid 10001
  primary {
    compute_segment1 {
      compute
    }
  }
}
```

Example: Configuring CoS-Based Forwarding and Policy-Based Routing For SR-TE LSPs

SUMMARY

CoS-based forwarding (CBF) and policy-based routing (PBR, also known as filter-based forwarding) can be enabled for non-colored segment routing-traffic engineered (SR-TE) LSPs to steer selective traffic over an explicit SR-TE path, providing you the benefit of servicing traffic based on class-of-service or a policy.

IN THIS SECTION

- [CoS-Based Forwarding and Policy-Based Routing For SR-TE LSPs Overview | 1483](#)
- [Configure CoS-Based Forwarding and Policy-Based Routing for SR-TE LSPs | 1484](#)

CoS-Based Forwarding and Policy-Based Routing For SR-TE LSPs Overview

IN THIS SECTION

- [Benefits of CoS-Based Forwarding \(CBF\) and Policy-Based Routing \(PBR\) For SR-TE LSPs | 1483](#)
- [Segment Routing Path Sources Supporting CBF and PBR | 1483](#)
- [Considerations for Configuring CBF and PBR for SR-TE LSPs | 1484](#)

Benefits of CoS-Based Forwarding (CBF) and Policy-Based Routing (PBR) For SR-TE LSPs

With CBF and PBR you can:

- Use combinations of segment routing-traffic engineering (SR-TE) paths to steer service traffic in the core.
- Choose the supporting services to resolve over the selected SR-TE paths.

Segment Routing Path Sources Supporting CBF and PBR

The following segment routing path sources support CoS-based forwarding and policy-based routing:

- **Static SR-TE paths**—Statically configured source-routing paths that have the entire label stack statically configured.
- **PCEP**—Dynamically provisioning source-routing paths created on a controller, and downloaded to an ingress router in an ERO either through PCEP segment routing extensions, or in a BGP segment routing policy through BGP segment routing extensions.

- **Dynamic LSPs**—Dynamically created tunnels triggered through the Dynamic Tunnel Module that have last-hop ERO resolution.
- **Auto-translated paths**—Statically configured source-routing paths that are automatically translated.

Considerations for Configuring CBF and PBR for SR-TE LSPs

Remember:

- CBF and PBR is enabled only on non-colored SR-TE LSPs that are either statically or dynamically configured.
- Both CBF and PBR configurations for SR-TE LSPs can co-exist on a device; the order of configuration decides the type in which the routes are forwarded.
- For PBR, if the first-hop of the SR-TE LSP is a label, then you must include the **resolution preserve-nexthop-hierarchy** statement at the **[edit routing-options]** hierarchy level.
- The class-based forwarding of routes for CBF is visible only in the forwarding table and not on the routes.
- The policy-based forwarding of routes for PBR is done on the routes and is seen in the **show route** command output.

Configure CoS-Based Forwarding and Policy-Based Routing for SR-TE LSPs

SUMMARY

CoS-based forwarding (CBF) and policy-based routing (PBR, also known as filter-based forwarding FBF) can be used to steer selective traffic using an explicit segment routing-traffic engineered (SR-TE) label-switched path (LSP). Only non-colored segment routing LSPs that have the next hop configured as first hop label or IP address support CBF and PBR .

Before You Begin

- You must be running Junos OS Release 20.1 and later releases to enable CBF and PBR for non-colored SR-TE LSPs.
- Configure the device interfaces and ensure the devices are connected to the network.
- Define segment lists and configure SR-TE LSPs and their associated parameters.

To configure an SR-TE LSP, do the following:

1. Define the segment list with label parameters.

```
[edit protocol]
```

```

user@host# set source-packet-routing segment-list segment-list-name hop-name ip-address ip-address
user@host# set source-packet-routing segment-list segment-list-name hop-name label number

```

For example:

```

[edit protocol]
user@host# set source-packet-routing segment-list sr1 hop1 ip-address 11.1.1.2
user@host# set source-packet-routing segment-list sr1 hop2 label 801002
user@host# set source-packet-routing segment-list sr1 hop3 label 801003
user@host# set source-packet-routing segment-list sr1 hop4 label 801007
user@host# set source-packet-routing segment-list sr1 hop1 ip-address 11.1.1.2
user@host# set source-packet-routing segment-list sr1 hop2 label 801002
user@host# set source-packet-routing segment-list sr1 hop3 label 801003
user@host# set source-packet-routing segment-list sr1 hop4 label 801007
user@host# set source-packet-routing segment-list sr2 hop1 ip-address 11.11.1.2
user@host# set source-packet-routing segment-list sr2 hop2 label 801002
user@host# set source-packet-routing segment-list sr2 hop3 label 801003
user@host# set source-packet-routing segment-list sr2 hop4 label 801007
user@host# set source-packet-routing segment-list sr3 hop1 ip-address 11.12.1.2
user@host# set source-packet-routing segment-list sr3 hop2 label 801002
user@host# set source-packet-routing segment-list sr3 hop3 label 801003
user@host# set source-packet-routing segment-list sr3 hop4 label 801007
user@host# set source-packet-routing segment-list sr4 hop1 ip-address 11.13.1.2
user@host# set source-packet-routing segment-list sr4 hop2 label 801002
user@host# set source-packet-routing segment-list sr4 hop3 label 801003
user@host# set source-packet-routing segment-list sr4 hop4 label 801007

```

2. Configure the source-routing path for the SR-TE LSPs and specify the preference value and primary segment for the path.

```

[edit protocols]
user@host# set source-packet-routing source-routing-path source-routing-path-name to destination-ip-address
user@host# set source-packet-routing source-routing-path source-routing-path-name preference preference
user@host# set source-packet-routing source-routing-path source-routing-path-name primary primary-segment

```

For example:

```

[edit protocols]
user@host# set source-packet-routing source-routing-path srtel1 to 7.7.7.7
user@host# set source-packet-routing source-routing-path srtel1 preference 1
user@host# set source-packet-routing source-routing-path srtel1 primary sr1
user@host# set source-packet-routing source-routing-path srtel2 to 7.7.7.7

```

```

user@host# set source-packet-routing source-routing-path srtelsp2 preference 1
user@host# set source-packet-routing source-routing-path srtelsp2 primary sr2
user@host# set source-packet-routing source-routing-path srtelsp3 to 7.7.7.7
user@host# set source-packet-routing source-routing-path srtelsp3 preference 1
user@host# set source-packet-routing source-routing-path srtelsp3 primary sr3
user@host# set source-packet-routing source-routing-path srtelsp4 to 7.7.7.7
user@host# set source-packet-routing source-routing-path srtelsp4 preference 1
user@host# set source-packet-routing source-routing-path srtelsp4 primary sr4

```

You can now configure CBF and PBR for the configured SR-TE LSPs.

To configure CBF, do the following

1. Define Differentiated Services Code Point (DSCP) classifiers to handle incoming IPv4 packets, forwarding classes, and option values.

```

[edit class-of-service]
user@host# set classifiers dscpclassifier-name forwarding-class forwarding-class-name loss-priority level
code-points [ aliases ] [ 6 bit-patterns ]

```

For example:

```

[edit class-of-service]
user@host# set classifiers dscp mydscp forwarding-class af11 loss-priority low code-points 001010
user@host# set classifiers dscp mydscp forwarding-class af11 loss-priority medium-high code-points 001100
user@host# set classifiers dscp mydscp forwarding-class af11 loss-priority high code-points 001110
user@host# set classifiers dscp mydscp forwarding-class af21 loss-priority low code-points 010010
user@host# set classifiers dscp mydscp forwarding-class af21 loss-priority medium-high code-points 010100
user@host# set classifiers dscp mydscp forwarding-class af21 loss-priority high code-points 010110
user@host# set classifiers dscp mydscp forwarding-class af31 loss-priority low code-points 011010
user@host# set classifiers dscp mydscp forwarding-class af31 loss-priority medium-high code-points 011100
user@host# set classifiers dscp mydscp forwarding-class af31 loss-priority high code-points 011110
user@host# set classifiers dscp mydscp forwarding-class af41 loss-priority low code-points 100010
user@host# set classifiers dscp mydscp forwarding-class af41 loss-priority medium-high code-points 100100
user@host# set classifiers dscp mydscp forwarding-class af41 loss-priority high code-points 100110

```

2. Define forwarding classes (FCs) for grouping packets for transmission, and assign packets to output queues.

```

[edit class-of-service]
user@host# set forwarding-classes queue queue-numner class-name

```

For example:

```
[edit class-of-service]
user@host# set forwarding-classes queue 0 af11
user@host# set forwarding-classes queue 1 af21
user@host# set forwarding-classes queue 2 af31
user@host# set forwarding-classes queue 3 af41
```

3. Assign the configured classifiers to the device interfaces.

```
[edit class-of-service]
user@host# set interfaces interface-name unit unit classifiers dscp classifier-name
```

For example:

```
[edit class-of-service]
user@host# set interfaces ge-0/0/8 unit 1 classifiers dscp mydscp
user@host# set interfaces ge-0/0/8 unit 2 classifiers dscp mydscp
```

4. Define CoS-based forwarding policy options with LSP next-hop as the SR-TE LSP.

```
[edit class-of-service]
user@host# set forwarding-policy next-hop-map map-name forwarding-classes class-name lsp-next-hop
source-routing-path-name
```

For example:

```
[edit class-of-service]
user@host# set forwarding-policy next-hop-map my_cbf forwarding-class af11 lsp-next-hop srtelsp1
user@host# set forwarding-policy next-hop-map my_cbf forwarding-class af21 lsp-next-hop srtelsp2
user@host# set forwarding-policy next-hop-map my_cbf forwarding-class af41 lsp-next-hop srtelsp3
user@host# set forwarding-policy next-hop-map my_cbf forwarding-class af31 lsp-next-hop srtelsp4
```

5. Discard traffic that does not meet any forwarding class in the next-hop map.

```
[edit class-of-service]
user@host# set forwarding-policy next-hop-map map-name forwarding-class-default discard
```

For example:

```
[edit class-of-service]
user@host# set forwarding-policy next-hop-map my_cbf forwarding-class-default discard
```

6. Configure a policy statement that specifies that routes matching the route filter are subject to the CoS next-hop mapping specified by map-name.

```
[edit policy-options]
user@host# set policy-statement policy-name from route-filter destination-prefix match-type <actions>
user@host# set policy-statement policy-name then cos-next-hop-map map-name
```

For example:

```
[edit policy-options]
user@host# set policy-statement cbf from route-filter 4.0.0.1/16 orlonger
user@host# set policy-statement cbf then cos-next-hop-map my_cbf
```

7. Apply the policy to routes being exported from the routing table into the forwarding table. This enables CBF for SR-TE LSPs.

```
[edit routing-options]
user@host# set forwarding-table export policy-name
```

For example:

```
[edit routing-options]
user@host# set forwarding-table export cbf
```

8. Commit the configuration.

```
user@host# commit
```

Verify CBF Configuration

You can verify the CBF configuration using the **show route forwarding-table destination *ip-address* vpn *vpn-name* extensive** command.

```
user@host> show route forwarding-table destination 4.0.0.1 vpn vpn1 extensive
```

```
Routing table: vpn1.inet [Index 8]
Internet:

Destination:  4.0.0.1/32
Route type:   user
Route reference: 0                      Route interface-index: 0
```



```

Multicast RPF nh index: 0
P2mpidx: 0
Flags: sent to PFE
Next-hop type: indirect          Index: 1048579  Reference: 10001
Next-hop type: indexed          Index: 837      Reference: 2
Route type: idx:0
Nexthop: 11.1.1.2
Next-hop type: Push 296, Push 801007, Push 801003, Push 801002(top) Index: 807
Reference: 3
Load Balance Label: None
Next-hop interface: ge-0/0/1.1
Route type: idx:1
Nexthop: 11.11.1.2
Next-hop type: Push 296, Push 801007, Push 801003, Push 801002(top) Index: 809
Reference: 3
Load Balance Label: None
Next-hop interface: ge-0/0/1.2
Route type: idx:2
Nexthop: 11.13.1.2
Next-hop type: Push 296, Push 801007, Push 801003, Push 801002(top) Index: 810
Reference: 3
Load Balance Label: None
Next-hop interface: ge-0/0/1.4
Route type: idx:3
Nexthop: 11.12.1.2
Next-hop type: Push 296, Push 801007, Push 801003, Push 801002(top) Index: 824
Reference: 3
Load Balance Label: None
Next-hop interface: ge-0/0/1.3
Route type: idx:xx
Next-hop type: discard          Index: 34      Reference: 2

```

For CBF, the class-based forwarding of routes is visible only in the forwarding table, unlike PBR, where the filtered routes are visible in the **show route** command output.

To configure PBR, do the following

1. Configure a policy statement which specifies that routes matching the protocol and route filter are subject to the LSP next-hop, or are load balanced as equal-cost multipath (ECMP) in the forwarding table.

```

[edit policy-options]
user@host# set policy-statement policy-name from protocol protocol-name

```

```

user@host# set policy-statement policy-name from route-filter destination-prefix match-type <actions>
user@host# set policy-statement policy-name then install-nexthop lsp lsp-name
user@host# set policy-statement policy-name then load-balance per-packet

```

For example:

```

[edit policy-options]
user@host# set policy-statement pbr term 1 from protocol bgp
user@host# set policy-statement pbr term 1 from route-filter 4.0.0.1/32 exact
user@host# set policy-statement pbr term 1 then install-nexthop lsp srtelsp1
user@host# set policy-statement pbr term 1 then load-balance per-packet
user@host# set policy-statement pbr term 1 then reject

```

2. Configure the device to perform custom route resolution on protocol next hops of routes.

NOTE: The **resolution preserve-nexthop-hierarchy** statement is mandatory for PBR to work when the first-hop of the SR-TE LSP is a label.

```

[edit routing-options]
user@host# set resolution preserve-nexthop-hierarchy

```

3. Apply the policy to routes being exported from the routing table into the forwarding table. This enables PBR for SR-TE LSPs.

```

[edit routing-options]
user@host# set forwarding-table export policy-name

```

For example:

```

[edit routing-options]
user@host# set forwarding-table export pbr

```

4. Commit the configuration.

```

user@host# commit

```

Verify PBR Configuration

You can verify the PBR configuration using the **show route destination-prefix** command.

user@host> **show route 4.0.0.1**

```
vpn1.inet.0: 10003 destinations, 10003 routes (10003 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

4.0.0.1/32          *[BGP/170] 00:24:12, localpref 100, from 7.7.7.7
                   AS path: 10 I, validation-state: unverified
                     to 11.1.1.2 via ge-0/0/1.1, Push 50983, Push 801007, Push
801003, Push 801002(top)
                     > to 11.11.1.2 via ge-0/0/1.2, Push 50983, Push 801007, Push
801003, Push 801002(top)
                     to 11.12.1.2 via ge-0/0/1.3, Push 50983, Push 801007, Push
801003, Push 801002(top)
                     to 11.13.1.2 via ge-0/0/1.4, Push 50983, Push 801007, Push
801003, Push 801002(top)
```

user@host> **show route 4.0.0.1 expanded-nh extensive**

```
vpn1.inet.0: 10003 destinations, 10003 routes (10003 active, 0 holddown, 0 hidden)
4.0.0.1/32 (1 entry, 1 announced)
Installed-nexthop:
Indr (0xc7aaa54) 7.7.7.7 Push 50983 Session-ID: 0x16f
  Krt_inh (0xc745a84) Index:1048579 PNH: 7.7.7.7
    Chain (0xc7aa798) Index:823 Push 50983
      Router (0xc417034) 11.1.1.2 Push 801007, Push 801003, Push 801002(top) via
ge-0/0/1.1
```

The output displays all next-hops for the destination prefix, 4.0.0.1. The **expanded-nh extensive** options displays the filtered next-hops under the **Krt_inh** output field.

user@host> **show route 4.0.0.2**

```
vpn1.inet.0: 10003 destinations, 10003 routes (10003 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

4.0.0.2/32          *[BGP/170] 00:30:14, localpref 100, from 7.7.7.7
                   AS path: 10 I, validation-state: unverified
                     to 11.1.1.2 via ge-0/0/1.1, Push 569, Push 801007, Push
801003, Push 801002(top)
                     > to 11.11.1.2 via ge-0/0/1.2, Push 569, Push 801007, Push
```

```

801003, Push 801002(top)
           to 11.12.1.2 via ge-0/0/1.3, Push 569, Push 801007, Push
801003, Push 801002(top)
           to 11.17.1.2 via ge-0/0/1.8, Push 569, Push 801007, Push
801003, Push 801002(top)

```

user@host> **show route 7.7.7.7 protocol spring-te**

```

inet.0: 10082 destinations, 10119 routes (10082 active, 0 holddown, 0 hidden)

inet.3: 25 destinations, 77 routes (25 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

7.7.7.7/32      *[SPRING-TE/1] 00:00:32, metric 1, metric2 4
>   to 11.1.1.2 via ge-0/0/1.1, Push 801007, Push 801003, Push
801002(top)
           to 11.11.1.2 via ge-0/0/1.2, Push 801007, Push 801003, Push
801002(top)
           to 11.12.1.2 via ge-0/0/1.3, Push 801007, Push 801003, Push
801002(top)
           to 11.17.1.2 via ge-0/0/1.8, Push 801007, Push 801003, Push
801002(top)

```

For PBR the **show route** command output does the policy-based filtering of routes.

Release History Table

Release	Description
19.4R1	You can associate a single or range of MVPN multicast flows (S,G) to a dynamically created PCE-initiated point-to-multipoint label-switched path (LSP).
19.4R1	You can configure a tunnel template for PCE-initiated segment routing LSPs to pass down two additional parameters for these LSPs - Bidirectional forwarding detection (BFD) and LDP tunneling.
19.1R1	Starting in Junos OS Release 19.1R1, a commit check feature is introduced to ensure that all the segment lists contributing to the colored routes have the minimum label present for all hops.
19.1R1	Starting in Junos OS Release 19.1R1, this requirement does not apply, as the first hop of the non-colored static LSPs now provides support for SID labels, in addition to IP addresses. With the first hop label support, MPLS fast reroute (FRR) and weighted equal-cost multipath is enabled for resolving the static non-colored segment routing LSPs, similar to colored static LSPs.
18.2R1	Starting in Junos OS Release 18.2R1, statically configured non-colored segment routing LSPs on the ingress device are reported to the Path Computation Element (PCE) through a Path Computation Element Protocol (PCEP) session.
17.2R1	Starting in Junos OS Release 17.2, in addition to external cspf , two new path computation types are introduced for the PCE-controlled LSPs: local cspf and no cspf .
16.1	Starting with Junos OS Release 16.1, you can secure a PCEP session using TCP-MD5 authentication as per RFC 5440.
16.1	Junos OS Release 16.1 introduces the feature of securing a PCEP session using TCP-MD5 authentication as per RFC 5440.
14.2R4	Starting in Junos OS Release 14.2R4, support of auto-bandwidth is provided for PCE-controlled LSPs.

RELATED DOCUMENTATION

| *NorthStar Controller User Guide*

10

PART

MPLS Troubleshooting

Troubleshooting MPLS | **1495**

Troubleshooting MPLS

IN THIS CHAPTER

- [Troubleshooting MPLS | 1495](#)

Troubleshooting MPLS

IN THIS SECTION

- [Verify MPLS Interfaces | 1496](#)
- [Verify the MPLS Configuration | 1498](#)
- [Checking the MPLS Layer | 1501](#)
- [Verify That Node-Link Protection Is Up | 1519](#)
- [Verify That Link Protection Is Up | 1526](#)
- [Verify One-to-One Backup | 1531](#)
- [Verify That the Primary Path Is Operational | 1539](#)
- [Verify That the Secondary Path Is Established | 1541](#)
- [Verifying the Physical Layer | 1544](#)
- [Checking the Data Link Layer | 1552](#)
- [Verifying the IP and IGP Layers | 1566](#)
- [Verifying the IP Layer | 1568](#)
- [Verify the LSP Again | 1582](#)
- [Checking the RSVP Layer | 1585](#)
- [Determining LSP Statistics | 1602](#)
- [Verifying LSP Use in Your Network | 1604](#)
- [Verify That Load Balancing Is Working | 1608](#)
- [Verify the Operation of Uneven Bandwidth Load Balancing | 1612](#)
- [Use the traceroute Command to Verify MPLS Labels | 1614](#)
- [Troubleshooting GMPLS and GRE Tunnel | 1615](#)

- [Determining LSP Status | 1638](#)
- [Checking That RSVP Path Messages Are Sent and Received | 1644](#)

Verify MPLS Interfaces

Purpose

If the MPLS protocol is not configured correctly on the routers in your network, the interfaces are not able to perform MPLS switching.

NOTE: For a labeled route to be resolved over an interface, **family mpls** must be configured at the **[edit interfaces]** hierarchy level for the route to be successfully resolved. When the interface is not configured with **family mpls**, labelled routes do not get resolved.

Action

To verify MPLS interfaces, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show mpls interface
```

Sample Output 1

The following sample output is for all routers in the network shown in *MPLS Network Topology*.

```
user@R1> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>

user@R2> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>
```



```
so-0/0/3.0      Up      <none>
```

```
user@R3> show mpls interface
```

Interface	State	Administrative groups
so-0/0/0.0	Up	<none>
so-0/0/1.0	Up	<none>
so-0/0/2.0	Up	<none>
so-0/0/3.0	Up	<none>

```
user@R4> show mpls interface
```

Interface	State	Administrative groups
so-0/0/0.0	Up	<none>
so-0/0/1.0	Up	<none>
so-0/0/2.0	Up	<none>
so-0/0/3.0	Up	<none>

```
user@R5> show mpls interface
```

Interface	State	Administrative groups
so-0/0/0.0	Up	<none>
so-0/0/1.0	Up	<none>
so-0/0/2.0	Up	<none>

```
user@R6> show mpls interface
```

Interface	State	Administrative groups
so-0/0/0.0	Up	<none>
so-0/0/1.0	Up	<none>
so-0/0/2.0	Up	<none>
so-0/0/3.0	Up	<none>

Sample Output 2

```
user@R6> show mpls interface
```

Interface	State	Administrative groups
so-0/0/0.0	Up	<none>
so-0/0/1.0	Up	<none>
so-0/0/3.0	Up	<none>

so-0/0/2.0 is missing

Sample Output 3

```
user@host> show mpls interface
MPLS not configured
```

Meaning

Sample Output 1 shows that all MPLS interfaces on all routers in the network are enabled (**Up**) and can perform MPLS switching. If you fail to configure the correct interface at the **[edit protocols mpls]** hierarchy level or include the **family mpls** statement at the **[edit interfaces type-fpc/pic/port unit number]** hierarchy level, the interface cannot perform MPLS switching, and does not appear in the output for the **show mpls interface** command.

Administrative groups are not configured on any of the interfaces shown in the example network in *MPLS Network Topology*. However, if they were, the output would indicate which affinity class bits are enabled on the router.

Sample Output 2 shows that interface **so-0/0/2.0** is missing and therefore might be incorrectly configured. For example, the interface might not be included at the **[edit protocols mpls]** hierarchy level, or the **family mpls** statement might not be included at the **[edit interfaces type-fpc/pic/port unit number]** hierarchy level. If the interface is configured correctly, RSVP might not have signaled over this interface yet. For more information on determining which interface is incorrectly configured, see *Verify Protocol Families*.

Sample Output 3 shows that the MPLS protocol is not configured at the **[edit protocols mpls]** hierarchy level.

Verify the MPLS Configuration

Purpose

After you have checked the transit and ingress routers, use the **traceroute** command to verify the BGP next hop, and used the **ping** command to verify the active path, you can check for problems with the MPLS configuration at the **[edit protocols mpls]** and **[edit interfaces]** hierarchy levels.

NOTE: For a labeled route to be resolved over an interface, **family mpls** must be configured at the **[edit interfaces]** hierarchy level for the route to be successfully resolved. When the interface is not configured with **family mpls**, labelled routes do not get resolved.

Action

To verify the MPLS configuration, enter the following commands from the ingress, transit, and egress routers:

```

user@host> show configuration protocols mpls
user@host> show configuration interfaces

```

Sample Output 1

```

user@R1> show configuration protocols mpls
label-switched-path R1-to-R6 {
    to 10.0.0.6;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}

user@R3> show configuration protocols mpls
interface fxp0.0 {
    disable;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0;

user@R6> show configuration protocols mpls
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
inactive: interface so-0/0/3.0; <<< Incorrectly configured

```

Sample Output 2

```
user@R6> show configuration interfaces
so-0/0/0 {
    unit 0 {
        family inet {
            address 10.1.56.2/30;
        }
        family iso;
        family mpls;
    }
}
so-0/0/1 {
    unit 0 {
        family inet {
            address 10.1.46.2/30;
        }
        family iso;
        family mpls;
    }
}
so-0/0/2 {
    unit 0 {
        family inet {
            address 10.1.26.2/30;
        }
        family iso;
        family mpls;
    }
}
so-0/0/3 {
    unit 0 {
        family inet {
            address 10.1.36.2/30;
        }
        family iso;
        family mpls;
    }
}
fxp0 {
    unit 0 {
        family inet {
            address 192.168.70.148/21;
        }
    }
}
```

```

    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.0.0.6/32;
            address 127.0.0.1/32;
        }
        family iso {
            address 49.0003.1000.0000.0006.00;
        }
    }
}
}

```

Meaning

Sample Output 1 from the ingress, transit, and egress routers shows that the configuration of interfaces on egress router **R6** is incorrect. Interface **so-0/0/3.0** is included as inactive at the **[edit protocols mpls]** hierarchy level, when it should be active because it is the interface through which the LSP travels.

Sample Output 2 shows that interfaces are correctly configured for MPLS on egress router **R6**. The interfaces are also correctly configured on the ingress and transit routers (not shown).

Checking the MPLS Layer

Purpose

After you have configured the label-switched path (LSP), issued the **show mpls lsp** command, and determined that there is an error, you might find that the error is not in the physical, data link, Internet Protocol (IP), interior gateway protocol (IGP), or Resource Reservation Protocol (RSVP) layers. Continue investigating the problem at the MPLS layer of the network.

[Figure 122 on page 1502](#) illustrates the MPLS layer of the layered MPLS model.

Figure 122: Checking the MPLS Layer


BGP Layer	traceroute <i>host-name</i> show bgp summary show configuration protocols bgp show route <i>destination-prefix</i> detail show route receive protocol bgp <i>neighbor-address</i>
MPLS Layer	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> traceroute <i>address</i> ping mpls rsvp <i>lsp-name</i> detail
RSVP Layer	show rsvp session show rsvp neighbor show rsvp interface
↩ IGP and IP Layers Functioning ↩	
OSPF Layer	show ospf neighbor show configuration protocols ospf show ospf interface
IS-IS Layer	show isis adjacency show configuration protocols isis show isis interface
IP Layer	show ospf neighbor extensive show interfaces terse
IP Layer	show isis adjacency extensive show interfaces terse
Data Link Layer	show interfaces extensive "JUNOS Interfaces Operations Guide"
Physical Layer	show interfaces show interfaces terse ping <i>host</i>

g015547

With the MPLS layer, you check whether the LSP is up and functioning correctly. If the network is not functioning at this layer, the LSP does not work as configured.

Figure 123 on page 1502 illustrates the MPLS network used in this topic.

Figure 123: MPLS Network Broken at the MPLS Layer

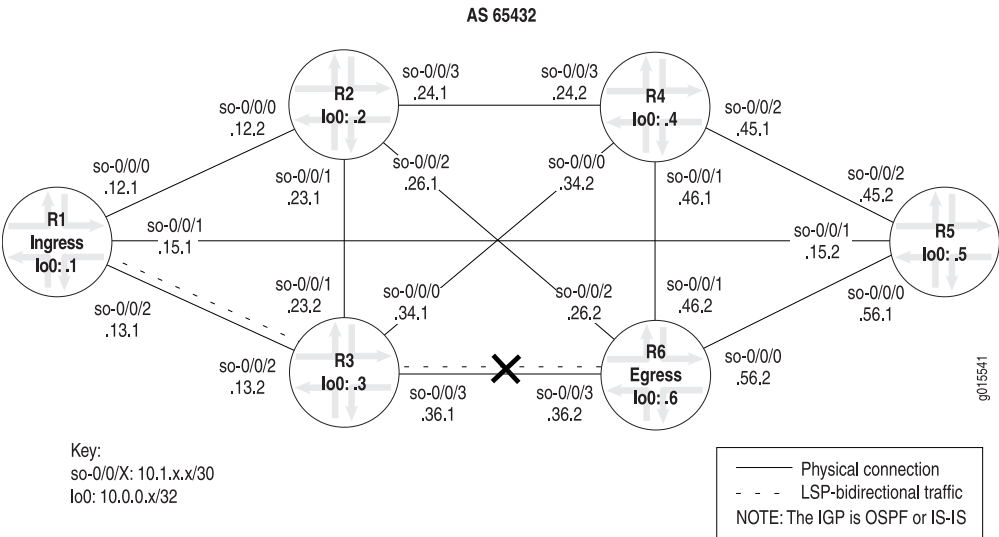

The network shown in [Figure 123 on page 1502](#) is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router **R1**, through transit router **R3**, to egress router **R6**. In addition, a reverse LSP is configured to run from **R6** through **R3** to **R1**, creating bidirectional traffic.

However, in this example, the reverse LSP is down without a path from **R6** to **R1**.

The cross shown in [Figure 123 on page 1502](#) indicates where the LSP is broken. Some possible reasons the LSP is broken might include an incorrectly configured MPLS protocol, or interfaces that are incorrectly configured for MPLS.

In the network shown in [Figure 123 on page 1502](#), a configuration error on egress router **R6** prevents the LSP from traversing the network as expected.

To check the MPLS layer, follow these steps:

1. [Verify the LSP | 1503](#)
2. [Verify the LSP Route on the Transit Router | 1507](#)
3. [Verify the LSP Route on the Ingress Router | 1509](#)
4. [Verify MPLS Labels with the traceroute Command | 1511](#)
5. [Verify MPLS Labels with the ping Command | 1512](#)
6. [Take Appropriate Action | 1514](#)
7. [Verify the LSP Again | 1515](#)

Verify the LSP

Purpose

Typically, you use the **show mpls lsp extensive** command to verify the LSP. However for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

Action

To verify that the LSP is up, enter some or all of the following commands from the ingress router:

```
user@host> show mpls lsp
user@host> show mpls lsp extensive
user@host> show mpls lsp name name
user@host> show mpls lsp name name extensive
```

Sample Output 1

```

user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.6     10.0.0.1      Dn     0  -              R1-to-R6
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R6> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.1     10.0.0.6      Dn     0  -              R6-to-R1
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```


Sample Output 2

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 22 second(s).
    1 Nov  2 14:43:38  CSPF failed: no route toward 10.0.0.6 [175 times]
  Created: Tue Nov  2 13:18:39 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Dn, ActiveRoute: 0, LSPname: R6-to-R1
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 13 second(s).
    1 Nov  2 14:38:12  CSPF failed: no route toward 10.0.0.1 [177 times]

```

```
Created: Tue Nov  2 13:12:22 2004
Total 1 displayed, Up 0, Down 1
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Sample Output 3

```
user@R1> show mpls lsp name R1-to-R6
Ingress LSP: 1 sessions

```

To	From	State	Rt	ActivePath	P	LSPname
10.0.0.6	10.0.0.1	Dn	0	-		R1-to-R6

```
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Sample Output 4

```
user@R1> show mpls lsp name R1-to-R6 extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 10 second(s).
    1 Nov  2 14:51:53 CSPF failed: no route toward 10.0.0.6[192 times]
```

```

Created: Tue Nov  2 13:18:39 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

Sample Output 1 shows a brief description of the state of the LSP for the ingress, transit, and egress routers. Output from ingress router **R1** and egress router **R6** shows that both LSPs are down, **R1-to-R6** and **R6-toR1**. With the configured LSPs on **R1** and **R6**, we would expect egress LSP sessions on both **R1** and **R6**. In addition, transit router **R3** has no transit sessions.

Sample Output 2 shows all information about the LSPs, including all past state history and the reason why an LSP failed. Output from **R1** and **R6** indicates that there is no route to the destination because the Constrained Shortest Path First (CSPF) algorithm failed.

Sample Outputs 3 and 4 show examples of the output for the **show mpls lsp name** command with the **extensive** option. In this instance, the output is very similar to the **show mpls lsp** command because only one LSP is configured in the example network in [“MPLS Network Broken at the MPLS Layer” on page 1502](#). However, in a large network with many LSPs configured, the results would be quite different between the two commands.

Verify the LSP Route on the Transit Router

Purpose

If the LSP is up, the LSP route should appear in the **mpls.0** routing table. MPLS maintains an MPLS path routing table (**mpls.0**), which contains a list of the next label-switched router in each LSP. This routing table is used on transit routers to route packets to the next router along an LSP. If routes are not present in the output for the transit router, check the MPLS protocol configuration on the ingress and egress routers.

Action

To verify the LSP route on the transit router, enter the following command from the transit router:

```
user@host> show route table mpls.0
```

Sample Output 1

```
user@R3> show route table mpls.0
```

```

mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
0          *[MPLS/0] 16w2d 21:52:40, metric 1
            Receive
1          *[MPLS/0] 16w2d 21:52:40, metric 1
            Receive
2          *[MPLS/0] 16w2d 21:52:40, metric 1
            Receive

```

Sample Output 2

user@R3> show route table mpls.0

```

mpls.0: 7 destinations, 7 routes (7 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
0          *[MPLS/0] 16w2d 22:26:08, metric 1
            Receive
1          *[MPLS/0] 16w2d 22:26:08, metric 1
            Receive
2          *[MPLS/0] 16w2d 22:26:08, metric 1
            Receive
100864     *[RSVP/7] 00:07:23, metric 1
            > via so-0/0/2.0, label-switched-path R6-to-R1
100864(S=0) *[RSVP/7] 00:07:23, metric 1
            > via so-0/0/2.0, label-switched-path R6-to-R1
100880     *[RSVP/7] 00:07:01, metric 1
            > via so-0/0/3.0, label-switched-path R1-to-R6
100880(S=0) *[RSVP/7] 00:07:01, metric 1
            > via so-0/0/3.0, label-switched-path R1-to-R6

```

Meaning

Sample Output 1 from transit router **R3** shows three route entries in the form of MPLS label entries. These MPLS labels are reserved MPLS labels defined in RFC 3032, and are always present in the **mpls.0** routing table, regardless of the state of the LSP. The incoming labels assigned by RSVP to the upstream neighbor are missing from the output, indicating that the LSP is down. For more information on MPLS label entries, see *Checklist for Verifying LSP Use*.

In contrast, Sample Output 2 shows the MPLS labels and routes for a correctly configured LSP. The three reserved MPLS labels are present, and the four other entries represent the incoming labels assigned by RSVP to the upstream neighbor. These four entries represent two routes. There are two entries per route

because the stack values in the MPLS header may be different. For each route, the second entry **100864 (S=0)** and **100880 (S=0)** indicates that the stack depth is not 1, and additional label values are included in the packet. In contrast, the first entry, **100864** and **100880** has an inferred S=1 value which indicates a stack depth of 1 and makes each label the last label in that particular packet. The dual entries indicate that this is the penultimate router. For more information on MPLS label stacking, see RFC 3032, *MPLS Label Stack Encoding*.

Verify the LSP Route on the Ingress Router

Purpose

Check whether the LSP route is included in the active entries in the **inet.3** routing table for the specified address.

Action

To verify the LSP route, enter the following command from the ingress router:

```
user@host> show route destination
```

Sample Output 1

```
user@R1> show route 10.0.0.6
```

```
inet.0 : 27 destinations, 27 routes (27 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.0.0.6/32      *[IS-IS/18] 6d 01:41:37, metric 20
                  to 10.1.12.2 via so-0/0/0.0
                  > to 10.1.15.2 via so-0/0/1.0
                  to 10.1.13.2 via so-0/0/2.0
```

```
user@R6> show route 10.0.0.1
```

```
inet.0 : 28 destinations, 28 routes (28 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.0.0.1/32      *[IS-IS/18] 5d 01:01:38, metric 20
                  to 10.1.56.1 via so-0/0/0.0
                  > to 10.1.26.1 via so-0/0/2.0
                  to 10.1.36.1 via so-0/0/3.0
```

Sample Output 2

user@R1> show route 10.0.0.6

```
inet.0: 28 destinations, 28 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
10.0.0.6/32      *[IS-IS/18] 6d 02:13:42, metric 20
                  to 10.1.12.2 via so-0/0/0.0
                  > to 10.1.15.2 via so-0/0/1.0
                  to 10.1.13.2 via so-0/0/2.0
```

```
inet.3 : 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
10.0.0.6/32      *[RSVP/7] 00:08:07, metric 20
                  > via so-0/0/2.0, label-switched-path R1-to-R6
```

user@R6> show route 10.0.0.1

```
inet.0: 29 destinations, 29 routes (28 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
10.0.0.1/32      *[IS-IS/18] 5d 01:34:03, metric 20
                  to 10.1.56.1 via so-0/0/0.0
                  > to 10.1.26.1 via so-0/0/2.0
                  to 10.1.36.1 via so-0/0/3.0
```

```
inet.3 : 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
10.0.0.1/32      *[RSVP/7] 00:10:39, metric 20
                  > via so-0/0/3.0, label-switched-path R6-to-R1
```

Meaning

Sample Output 1 shows entries in the **inet.0** routing table only. The **inet.3** routing table is missing from the output because the LSP is not working. The **inet.0** routing table is used by interior gateway protocols (IGPs) and Border Gateway Protocol (BGP) to store routing information. In this case, the IGP is Intermediate System-to-Intermediate System (IS-IS). For more information on the **inet.0** routing table, see the *Junos MPLS Applications Configuration Guide*.

If the LSP was working, we would expect to see entries that include the LSP in the **inet.3** routing table. The **inet.3** routing table is used on ingress routers to route BGP packets to the destination egress router.

BGP uses the **inet.3** routing table on the ingress router to help resolve next-hop addresses. BGP is configured in the example network shown in [“MPLS Network Broken at the MPLS Layer”](#) on page 1502.

Sample Output 2 shows output you should receive when the LSP is up. The output shows both the **inet.0** and **inet.3** routing tables, indicating that LSPs **R1-to-R6** and **R6-to-R1** are available.

Verify MPLS Labels with the traceroute Command

Purpose

Display the route packets take to a BGP destination where the BGP next hop for that route is the LSP egress address. By default, BGP uses the **inet.0** and the **inet.3** routing tables to resolve the next-hop address. When the next-hop address of the BGP route is not the router ID of the egress router, traffic is mapped to IGP routes, not to the LSP. Use the **traceroute** command as a debugging tool to determine whether the LSP is being used to forward traffic.

Action

To verify MPLS labels, enter the following command from the ingress router:

```
user@host> traceroute hostname
```

Sample Output 1

```
user@R1> traceroute 100.100.6.1
traceroute to 100.100.6.1 (100.100.6.1), 30 hops max, 40 byte packets
 1  10.1.12.2 (10.1.12.2)  0.627 ms  0.561 ms  0.520 ms
 2  10.1.26.2 (10.1.26.2)  0.570 ms !N  0.558 ms !N  4.879 ms !N

user@R6> traceroute 100.100.1.1
traceroute to 100.100.1.1 (100.100.1.1), 30 hops max, 40 byte packets
 1  10.1.26.1 (10.1.26.1)  0.630 ms  0.545 ms  0.488 ms
 2  10.1.12.1 (10.1.12.1)  0.551 ms !N  0.557 ms !N  0.526 ms !N
```

Sample Output 2

```
user@R1> traceroute 100.100.6.1
to 100.100.6.1 (100.100.6.1), 30 hops max, 40 byte packets
 1  10.1.13.2 (10.1.13.2)  0.866 ms  0.746 ms  0.724 ms
```

```

MPLS Label=100912 CoS=0 TTL=1 S=1
2 10.1.36.2 (10.1.36.2) 0.577 ms !N 0.597 ms !N 0.546 ms !N

user@R6> traceroute 100.100.1.1
traceroute to 100.100.1.1 (100.100.1.1), 30 hops max, 40 byte packets
1 10.1.36.1 (10.1.36.1) 0.802 ms 0.716 ms 0.688 ms
MPLS Label=100896 CoS=0 TTL=1 S=1
2 10.1.13.1 (10.1.13.1) 0.570 ms !N 0.568 ms !N 0.546 ms !N

```

Meaning

Sample Output 1 shows that BGP traffic is not using the LSP, consequently MPLS labels do not appear in the output. Instead of using the LSP, BGP traffic is using the IGP (IS-IS, in the example network in [“MPLS Network Broken at the MPLS Layer” on page 1502](#)) to reach the BGP next-hop LSP egress address. The Junos OS default behavior uses LSPs for BGP traffic when the BGP next hop equals the LSP egress address.

Sample Output 2 is an example of output for a correctly configured LSP. The output shows MPLS labels, indicating that BGP traffic is using the LSP to reach the BGP next hop.

Verify MPLS Labels with the ping Command

Purpose

When you ping a specific LSP, you check that echo requests are sent over the LSP as MPLS packets.

Action

To verify MPLS labels, enter the following command from the ingress router to ping the egress router:

```
user@host> ping mpls rsvp lsp-name detail
```

For example:

```
user@R1> ping mpls rsvp R1-to-R6 detail
```

Sample Output 1

```

user@R1> ping mpls rsvp R1-to-R6 detail
LSP R1-to-R6 - LSP has no active path, exiting.

user@R6> ping mpls rsvp R6-to-R1 detail
LSP R6-to-R1 - LSP has no active path, exiting.

```


Sample Output 2

```

user@R1> traceroute 10.0.0.6
traceroute to 10.0.0.6 (10.0.0.6), 30 hops max, 40 byte packets
 1  10.1.15.2 (10.1.15.2)  0.708 ms  0.613 ms  0.576 ms
 2  10.0.0.6 (10.0.0.6)  0.763 ms  0.708 ms  0.700 ms

user@R1> ping mpls rsvp R1-to-R6 detail
Request for seq 1, to interface 69, label 100880
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 69, label 100880
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 69, label 100880
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 69, label 100880
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 69, label 100880
Reply for seq 5, return code: Egress-ok

--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss

user@R6> ping mpls rsvp R6-to-R1 detail
Request for seq 1, to interface 70, label 100864
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 70, label 100864
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 70, label 100864
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 70, label 100864
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 70, label 100864
Reply for seq 5, return code: Egress-ok

--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss

```

Meaning

Sample Output 1 shows that the LSP does not have an active path to forward echo requests, indicating that the LSP is down.

Sample Output 2 is an example of output you should receive when the LSP is up and forwarding packets.

Take Appropriate Action

Problem

Description: Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, an interface is incorrectly configured at the **[edit protocols mpls]** hierarchy level on egress router **R6**.

Solution

To correct the error in this example, follow these steps:

1. Activate the interface in the MPLS protocol configuration on egress router **R6**:

```
user@R6> edit
user@R6# edit protocols mpls
[edit protocols mpls]
user@R6# show
user@R6# activate interface so-0/0/3.0
```

2. Verify and commit the configuration:

```
[edit protocols mpls]
user@R6# show
user@R6# commit
```

Sample Output

```
user@R6> edit
Entering configuration mode

[edit]
user@R6# edit protocols mpls

[edit protocols mpls]
user@R6# show
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
inactive: interface so-0/0/3.0; <<< Incorrectly configured interface

[edit protocols mpls]
```

```

user@R6# activate interface so-0/0/3

[edit protocols mpls]
user@R6# show
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
interface so-0/0/3.0; <<< Correctly configured interface

[edit protocols mpls]
user@R6# commit
commit complete

```

Meaning

The sample output shows that the incorrectly configured interface **so-0/0/3.0** on egress router **R6** is now activated at the **[edit protocols mpls]** hierarchy level. The LSP can now come up.

Verify the LSP Again

Purpose

After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the BGP layer has been resolved.

Action

To verify the LSP again, enter the following command from the ingress, transit, and egress routers:

```

user@host> show mpls lsp extensive

```

Sample Output

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1,  State: Up ,  ActiveRoute: 1 ,  LSPname: R1-to-R6
  ActivePath:  (primary)

```

```

LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.1.13.2 10.1.36.2
    6 Nov  2 15:48:52 Selected as active path
    5 Nov  2 15:48:52 Record Route:  10.1.13.2 10.1.36.2
    4 Nov  2 15:48:52 Up
    3 Nov  2 15:48:52 Originate Call
    2 Nov  2 15:48:52 CSPF: computation result accepted
    1 Nov  2 15:48:22 CSPF failed: no route toward 10.0.0.6[308 times]
Created: Tue Nov  2 13:18:39 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
From: 10.0.0.6,  LSPstate: Up , ActiveRoute: 0
LSPname: R6-to-R1 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 159, Since: Tue Nov  2 15:48:30 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 39106 protocol 0
PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 10 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Transit LSP: 2 sessions

10.0.0.1

From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1
 LSPname: R6-to-R1, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 3
 Resv style: 1 FF, Label in: 100864, Label out: 3
 Time left: 123, Since: Tue Nov 2 15:35:41 2004
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 1 receiver 39106 protocol 0
 PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 10 pkts
 Adspec: received MTU 1500 sent MTU 1500
 PATH sentto: 10.1.13.1 (so-0/0/2.0) 10 pkts
 RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 10 pkts
 Explct route: 10.1.13.1
 Record route: 10.1.36.2 <self> 10.1.13.1

10.0.0.6

From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
 LSPname: R1-to-R6, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 3
 Resv style: 1 FF, Label in: 100880, Label out: 3
 Time left: 145, Since: Tue Nov 2 15:36:03 2004
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 1 receiver 48015 protocol 0
 PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 10 pkts
 Adspec: received MTU 1500 sent MTU 1500
 PATH sentto: 10.1.36.2 (so-0/0/3.0) 10 pkts
 RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 10 pkts
 Explct route: 10.1.36.2
 Record route: 10.1.13.1 <self> 10.1.36.2

Total 2 displayed, Up 2, Down 0

user@R6> **show mpls lsp extensive**

Ingress LSP: 1 sessions

10.0.0.1

From: 10.0.0.6, **State: Up, ActiveRoute: 1, LSPname: R6-to-R1**
 ActivePath: (primary)
 LoadBalance: Random
 Encoding type: Packet, Switching type: Packet, GPID: IPv4

```

*Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.36.1 S 10.1.13.1 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.1.36.1 10.1.13.1
        6 Nov  2 15:41:44 Selected as active path
        5 Nov  2 15:41:44 Record Route:  10.1.36.1 10.1.13.1
        4 Nov  2 15:41:44 Up
        3 Nov  2 15:41:44 Originate Call
        2 Nov  2 15:41:44 CSPF: computation result accepted
        1 Nov  2 15:41:14 CSPF failed: no route toward 10.0.0.1[306 times]
    Created: Tue Nov  2 13:12:21 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.6
    From: 10.0.0.1,  LSPstate: Up,  ActiveRoute: 0
    LSPname: R1-to-R6 , LSPpath: Primary
    Suggested label received: -, Suggested label sent: -
    Recovery label received: -, Recovery label sent: -
    Resv style: 1 FF, Label in: 3, Label out: -
    Time left:  157, Since: Tue Nov  2 15:42:06 2004
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Port number: sender 1 receiver 48015 protocol 0
    PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 11 pkts
    Adspec: received MTU 1500
    PATH sentto: localclient
    RESV rcvfrom: localclient
    Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** has an active route to **R6** and the state is up.

Sample Output 2 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**. Both LSPs are up.

Sample Output 3 from egress router **R6** shows that the LSP is up and the active route is the primary route. The LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

Verify That Node-Link Protection Is Up

Purpose

After you configure node-link protection, you must check that bypass paths are up. You can also check the number of LSPs protected by the bypass paths. In the network shown in [“Node-Link Protection” on page 277](#), two bypass paths should be up: one next-hop bypass path protecting the link between **R1** and **R2** (or next-hop **10.0.12.14**), and a next-next-hop bypass path avoiding **R2**.

Action

To verify node-link protection (many-to-one backup), enter the following Junos OS CLI operational mode commands on the ingress router. You can also issue the commands on transit routers and other routers used in the bypass path for slightly different information.

```
show mpls lsp
show mpls lsp extensive
show rsvp interface
show rsvp interface extensive
show rsvp session detail
```

Sample Output

```
user@R1> show mpls lsp
```

Ingress LSP: 1 sessions

To	From	State	Rt	ActivePath	P	LSPname
192.168.5.1	192.168.1.1	Up	0	via-r2	*	lsp2-r1-to-r5

Total 1 displayed, Up 1 , Down 0

Egress LSP: 1 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPname
192.168.1.1	192.168.5.1	Up	0	1 FF	3		- r5-to-r1

Total 1 displayed, **Up 1** , Down 0

Transit LSP: 2 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPname
192.168.0.1	192.168.6.1	Up	0	1 FF	100464	101952	lsp1-r6-to-r0

```

192.168.6.1      192.168.0.1      Up          0  1 FF  100448      3  r0-to-t6
Total 2 displayed, Up 2, Down 0

```

Meaning

Sample output from **R1** for the **show mpls lsp** command shows a brief description of the state of configured and active LSPs for which **R1** is the ingress, transit, and egress router. All LSPs are up. **R1** is the ingress router for **lsp2-r1-to-r5**, and the egress router for return LSP **r5-to-r1**. Two LSPs transit **R1**, **lsp1-r6-to-r0** and the return LSP **r0-to-t6**. For more detailed information about the LSP, include the **extensive** option when you issue the **show mpls lsp** command.

Sample Output

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up , ActiveRoute: 0, LSPname: lsp2-r1-to-r5
  ActivePath: via-r2 (primary)
    Node/Link protection desired
    LoadBalance: Random
    Encoding type: Packet, Switching type: Packet, GPID: IPv4
    *Primary   via-r2           State: Up
      SmartOptimizeTimer: 180
      Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.0.12.14(Label=101872) 10.0.24.2(Label=101360) 10.0.45.2(Label=3)
    11 Jul 11 14:30:58 Link-protection Up
    10 Jul 11 14:28:28 Selected as active path
    [...Output truncated...]
    Created: Tue Jul 11 14:22:58 2006
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.1.1
  From: 192.168.5.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r5-to-r1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -

```



```

Resv style: 1 FF, Label in: 3, Label out: -
Time left: 146, Since: Tue Jul 11 14:28:36 2006
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 29228 protocol 0
PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 362 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.0.45.2 10.0.24.2 10.0.12.14 <self>
Total 1 displayed, Up 1, Down 0

```

Transit LSP: 2 sessions

192.168.0.1

From: 192.168.6.1, **LSPstate: Up**, ActiveRoute: 0

LSPname: lsp1-r6-to-r0, LSPpath: Primary

```

Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 101952
Resv style: 1 SE, Label in: 100464, Label out: 101952
Time left: 157, Since: Tue Jul 11 14:31:38 2006
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 11131 protocol 0

```

Node/Link protection desired

Type: Node/Link protected LSP, using Bypass->10.0.12.14->10.0.24.2

1 Jul 11 14:31:38 Node protection up, using Bypass->10.0.12.14->10.0.24.2

```

PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 509 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.0.12.14 (fe-0/1/0.0) 356 pkts
RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 358 pkts
Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

```

192.168.6.1

From: 192.168.0.1, **LSPstate: Up**, ActiveRoute: 0

LSPname: r0-to-t6, LSPpath: Primary

```

Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100448, Label out: 3
Time left: 147, Since: Tue Jul 11 14:31:36 2006
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 23481 protocol 0
PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 358 pkts
Adspec: received MTU 1500 sent MTU 1500

```

```

PATH sentto: 10.0.16.2 (so-0/0/3.0) 350 pkts
RESV rcvfrom: 10.0.16.2 (so-0/0/3.0) 323 pkts
Explot route: 10.0.16.2
Record route: 10.0.50.2 10.0.45.2 10.0.24.2 10.0.12.14 <self> 10.0.16.2
Total 2 displayed, Up 2, Down 0

```

Meaning

Sample output from **R1** for the **show mpls lsp extensive** command shows detailed information about all LSPs for which **R1** is the ingress, egress, or transit router, including all past state history and the reason why an LSP failed. All LSPs are up. The main two LSPs **lsp2-r1-to-r5** and **lsp1-r6-to-r0** have node-link protection as indicated by the **Node/Link protection desired** field in the ingress and transit sections of the output. In the ingress section of the output, the **Link-protection Up** field shows that **lsp2-r1-to-r5** has link protection up. In the transit section of the output, the **Type: Node/Link protected LSP** field shows that **lsp1-r6-to-r0** has node-link protection up, and in case of failure will use the bypass LSP **Bypass->10.0.12.14->10.0.24.2**.

Sample Output

```

user@R1> show rsvp interface
RSVP interface: 4 active

```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
fe-0/1/0.0	Up	2	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/1.0	Up	1	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/2.0	Up	0	100%	100Mbps	100Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

Meaning

Sample output from **R1** for the **show rsvp interface** command shows four interfaces enabled with RSVP (**Up**). Interface **fe-0/1/0.0** has two active RSVP reservations (**Active resv**) that might indicate sessions for the two main LSPs, **lsp1-r6-to-r0** and **lsp2-r1-to-r5**. Interface **fe-0/1/0.0** is the connecting interface between **R1** and **R2**, and both LSPs are configured with a strict path through **fe-0/1/0.0**. For more detailed information about what is happening on interface **fe-0/1/0.0**, issue the **show rsvp interface extensive** command.

Sample Output

```

user@R1> show rsvp interface extensive
RSVP interface: 3 active
fe-0/1/0.0 Index 67, State Ena/Up

```

```

NoAuthentication, NoAggregate, NoReliable, LinkProtection
HelloInterval 9(second)
Address 10.0.12.13
ActiveResv 2, PreemptionCnt 0, Update threshold 10%
Subscription 100%,
bc0 = ct0, StaticBW 100Mbps
ct0: StaticBW 100Mbps, AvailableBW 100Mbps
MaxAvailableBW 100Mbps = (bc0*subscription)
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
Protection: On, Bypass: 2, LSP: 2, Protected LSP: 2, Unprotected LSP: 0
  2 Jul 14 14:49:40 New bypass Bypass->10.0.12.14
  1 Jul 14 14:49:34 New bypass Bypass->10.0.12.14->10.0.24.2
Bypass: Bypass->10.0.12.14, State: Up, Type: LP, LSP: 0, Backup: 0
  3 Jul 14 14:49:42 Record Route: 10.0.17.14 10.0.27.1
  2 Jul 14 14:49:42 Up
  1 Jul 14 14:49:42 CSPF: computation result accepted
Bypass: Bypass->10.0.12.14->10.0.24.2, State: Up, Type: NP, LSP: 2, Backup:0
  4 Jul 14 14:50:04 Record Route: 10.0.17.14 10.0.79.2 10.0.59.1 10.0.45.1
  3 Jul 14 14:50:04 Up
  2 Jul 14 14:50:04 CSPF: computation result accepted
  1 Jul 14 14:49:34 CSPF failed: no route toward 10.0.24.2
[...Output truncated...]

```

Meaning

Sample output from **R1** for the **show rsvp interface extensive** command shows more detailed information about the activity on all RSVP interfaces (3). However, only output for **fe-0/1/0.0** is shown. Protection is enabled (**Protection: On**), with two bypass paths (**Bypass: 2**) protecting two LSPs (**Protected LSP: 2**). All LSPs are protected, as indicated by the **Unprotected LSP: 0** field. The first bypass **Bypass->10.0.12.14** is a link protection bypass path (**Type: LP**), protecting the link between **R1** and **R2 fe-0/1/0.0**. The second bypass path **10.0.12.14->10.0.24.2** is a node-link protected LSP, avoiding **R2** in case of node failure.

Sample Output

```

user@R1> show rsvp session detail
Ingress RSVP: 2 sessions

192.168.4.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->10.0.12.14->10.0.24.2
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 102000

```

Resv style: 1 SE, Label in: -, Label out: 102000
 Time left: -, Since: Tue Jul 11 14:30:53 2006
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 1 receiver 60120 protocol 0

Type: Bypass LSP

Number of data route tunnel through: 2

Number of RSVP session tunnel through: 0
 PATH rcvfrom: localclient
 Adspec: sent MTU 1500
 Path MTU: received 1500
 PATH sentto: 10.0.17.14 (fe-0/1/1.0) 336 pkts
 RESV rcvfrom: 10.0.17.14 (fe-0/1/1.0) 310 pkts
Explct route: 10.0.17.14 10.0.79.2 10.0.59.1 10.0.45.1
 Record route: <self> 10.0.17.14 10.0.79.2 10.0.59.1 10.0.45.1

192.168.5.1

From: 192.168.1.1, **LSPstate: Up**, ActiveRoute: 0
LSPname: lsp2-r1-to-r5, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 101872
 Resv style: 1 SE, Label in: -, Label out: 101872
 Time left: -, Since: Tue Jul 11 14:28:28 2006
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 2 receiver 60118 protocol 0

Node/Link protection desired

Type: Node/Link protected LSP

PATH rcvfrom: localclient
 Adspec: sent MTU 1500
 Path MTU: received 1500
 PATH sentto: 10.0.12.14 (fe-0/1/0.0) 344 pkts
 RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 349 pkts
Explct route: 10.0.12.14 10.0.24.2 10.0.45.2
 Record route: <self> 10.0.12.14 10.0.24.2 10.0.45.2

Total 2 displayed, Up 2, Down 0

Egress RSVP: 1 sessions

192.168.1.1

From: 192.168.5.1, **LSPstate: Up**, ActiveRoute: 0
 LSPname: r5-to-r1, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: -
 Resv style: 1 FF, Label in: 3, Label out: -

```

Time left: 147, Since: Tue Jul 11 14:28:36 2006
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 29228 protocol 0
PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 348 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.0.45.2 10.0.24.2 10.0.12.14 <self>
Total 1 displayed, Up 1, Down 0

```

Transit RSVP: 2 sessions

192.168.0.1

From: 192.168.6.1, **LSPstate: Up**, ActiveRoute: 0

LSPname: lsp1-r6-to-r0, LSPpath: Primary

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: 101952

Resv style: 1 SE, Label in: 100464, Label out: 101952

Time left: 134, Since: Tue Jul 11 14:31:38 2006

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

Port number: sender 1 receiver 11131 protocol 0

Node/Link protection desired

Type: Node/Link protected LSP

PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 488 pkts

Adspec: received MTU 1500 sent MTU 1500

PATH sentto: 10.0.12.14 (fe-0/1/0.0) 339 pkts

RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 343 pkts

Explt route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

192.168.6.1

From: 192.168.0.1, **LSPstate: Up**, ActiveRoute: 0

LSPname: r0-to-t6, LSPpath: Primary

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: 3

Resv style: 1 FF, Label in: 100448, Label out: 3

Time left: 158, Since: Tue Jul 11 14:31:36 2006

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

Port number: sender 1 receiver 23481 protocol 0

PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 344 pkts

Adspec: received MTU 1500 sent MTU 1500

PATH sentto: 10.0.16.2 (so-0/0/3.0) 337 pkts

RESV rcvfrom: 10.0.16.2 (so-0/0/3.0) 310 pkts

```

    Explot route: 10.0.16.2
    Record route: 10.0.50.2 10.0.45.2 10.0.24.2 10.0.12.14 <self> 10.0.16.2
    Total 2 displayed, Up 2, Down 0

```

Meaning

Sample output from **R1** shows detailed information about the RSVP sessions active on **R1**. All sessions are up, with two ingress sessions, one egress session, and two transit sessions.

Within the ingress section, the first session is a bypass path, as indicated by the **Type: Bypass LSP** field; and the second session is a protected LSP (**lsp2-r1-to-r5**) originating on **R1**, as indicated by the **Type: Node/Link protected LSP** field.

Conclusion

Multiprotocol Label Switching (MPLS) label-switched path (LSP) link protection and node-link protection are facility-based methods used to reduce the amount of time needed to reroute LSP traffic. These protection methods are often compared to fast reroute—the other Junos OS LSP protection method.

While fast reroute protects LSPs on a one-to-one basis, link protection and node-link protection protect multiple LSPs by using a single, logical bypass LSP. Link protection provides robust backup support for a link, node-link protection bypasses a node or a link, and both types of protection are designed to interoperate with other vendor equipment. Such functionality makes link protection and node-link protection excellent choices for scalability, redundancy, and performance in MPLS-enabled networks.

Related Information

For additional information about MPLS fast reroute and MPLS protection methods, see the following:

- *Junos User Guide*
- *Junos MPLS Applications Configuration Guide*
- Semeria, Chuck. *RSVP Signaling Extensions for MPLS Traffic Engineering*. White paper. 2002
- Semeria, Chuck. *IP Dependability: Network Link and Node Protection*. White paper. 2002
- RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*

Verify That Link Protection Is Up

Purpose

When you verify link protection, you must check that the bypass LSP is up. You can also check the number of LSPs protected by the bypass. In the network shown in *Many-to-One or Link Protection*, a bypass path should be up to protect the link between **R1** and **R2**, or next-hop **10.0.12.14**, and the two LSPs traversing the link, **lsp2-r1-to-r5** and **lsp1-r6-to-r0**.

Action

To verify link protection (many-to-one backup), enter the following Junos OS CLI operational mode commands on the ingress router:

```
user@host> show mpls lsp extensive
user@host> show rsvp session detail
user@host> show rsvp interface
```

Sample Output

```
user@R1> show mpls lsp extensive | no-more
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: lsp2-r1-to-r5
  ActivePath:   via-r2 (primary)
Link protection desired
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary   via-r2           State: Up
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):
      10.0.12.14(Label=101264) 10.0.24.2(Label=100736) 10.0.45.2(Label=3)
    6 Jun 16 14:06:33   Link-protection Up
    5 Jun 16 14:05:39   Selected as active path
    4 Jun 16 14:05:39   Record Route:  10.0.12.14(Label=101264)
10.0.24.2(Label=100736) 10.0.45.2(Label=3)
    3 Jun 16 14:05:39   Up
    2 Jun 16 14:05:39   Originate Call
    1 Jun 16 14:05:39   CSPF: computation result accepted
    Created: Fri Jun 16 14:05:38 2006
Total 1 displayed, Up 1, Down 0

[...Output truncated...]

Transit LSP: 2 sessions

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
```

LSPname: lsp1-r6-to-r0, LSPpath: Primary

Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 101296
 Resv style: 1 SE, Label in: 100192, Label out: 101296
 Time left: 116, Since: Mon Jun 19 10:26:32 2006
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 1 receiver 58739 protocol 0

Link protection desired

Type: Link protected LSP, using Bypass->10.0.12.14

1 Jun 19 10:26:32 Link protection up, using Bypass->10.0.12.14

PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 579 pkts
 Adspec: received MTU 1500 sent MTU 1500
 PATH sentto: 10.0.12.14 (fe-0/1/0.0) 474 pkts
 RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 501 pkts
 Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
 Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
 [...Output truncated...]

Meaning

The sample output from ingress router **R1** shows that **lsp2-r1-to-r5** and **lsp1-r6-to-r0** have link protection up, and both LSPs are using the bypass path, **10.0.12.14**. However, the **show mpls lsp** command does not list the bypass path. For information about the bypass path, use the **show rsvp session** command.

Sample Output

```
user@R1> show rsvp session detail
```

Ingress RSVP: 2 sessions

```
192.168.2.1
```

```
From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
```

LSPname: Bypass->10.0.12.14

Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 101456
 Resv style: 1 SE, Label in: -, Label out: 101456
 Time left: -, Since: Fri May 26 18:38:09 2006
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 1 receiver 18709 protocol 0

Type: Bypass LSP**Number of data route tunnel through: 2**

```
Number of RSVP session tunnel through: 0
```

```
PATH rcvfrom: localclient
```

```
Adspec: sent MTU 1500
```


Path MTU: received 1500
 PATH sentto: 10.0.17.14 (fe-0/1/1.0) 51939 pkts
 RESV rcvfrom: 10.0.17.14 (fe-0/1/1.0) 55095 pkts

Explct route: 10.0.17.14 10.0.27.1

Record route: <self> 10.0.17.14 10.0.27.1

192.168.5.1

From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0

LSPname: lsp2-r1-to-r5, LSPpath: Primary

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: 101264

Resv style: 1 SE, Label in: -, Label out: 101264

Time left: -, Since: Fri Jun 16 14:05:39 2006

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

Port number: sender 1 receiver 18724 protocol 0

Link protection desired

Type: Link protected LSP

PATH rcvfrom: localclient

Adspec: sent MTU 1500

Path MTU: received 1500

PATH sentto: 10.0.12.14 (fe-0/1/0.0) 8477 pkts

RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 8992 pkts

Explct route: 10.0.12.14 10.0.24.2 10.0.45.2

Record route: <self> 10.0.12.14 10.0.24.2 10.0.45.2

Total 2 displayed, Up 2, Down 0

Egress RSVP: 1 sessions

192.168.1.1

From: 192.168.5.1, LSPstate: Up, ActiveRoute: 0

LSPname: r5-to-r1, LSPpath: Primary

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: -

Resv style: 1 FF, Label in: 3, Label out: -

Time left: 159, Since: Mon May 22 22:08:16 2006

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

Port number: sender 1 receiver 64449 protocol 0

PATH rcvfrom: 10.0.17.14 (fe-0/1/1.0) 63145 pkts

Adspec: received MTU 1500

PATH sentto: localclient

RESV rcvfrom: localclient

Record route: 10.0.59.1 10.0.79.2 10.0.17.14 <self>

Total 1 displayed, Up 1, Down 0

Transit RSVP: 2 sessions

```

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp1-r6-to-r0, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101296
  Resv style: 1 SE, Label in: 100192, Label out: 101296
  Time left: 129, Since: Mon Jun 19 10:26:32 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 58739 protocol 0
  Link protection desired
  Type: Link protected LSP
  PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 3128 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 2533 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 2685 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
  Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

192.168.6.1
  From: 192.168.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r0-to-r6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100128, Label out: 3
  Time left: 143, Since: Thu May 25 12:30:26 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 4111 protocol 0
  PATH rcvfrom: 10.0.17.14 (fe-0/1/1.0) 57716 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.16.2 (so-0/0/3.0) 54524 pkts
  RESV rcvfrom: 10.0.16.2 (so-0/0/3.0) 50534 pkts
  Explct route: 10.0.16.2
  Record route: 10.0.50.2 10.0.59.1 10.0.79.2 10.0.17.14 <self> 10.0.16.2
Total 2 displayed, Up 2, Down 0

```

Meaning

The sample output from ingress router **R1** shows the ingress, egress, and transit LSPs for **R1**. Some information is similar to that found in the **show mpls lsp** command. However, because link protection is an RSVP feature, information about bypass paths is provided. The bypass path appears as a separate RSVP ingress session for the protected interface, as indicated by the **Type** field.

The bypass path name is automatically generated. By default, the name appears as **Bypass > interface-address**, where the interface address is the next downstream router's interface (**10.0.12.14**). The explicit route **10.0.17.14 10.0.27.1** for the session shows **R7** as the transit node and **R2** as the egress node.

Within the ingress RSVP section of the output, the LSP originating at **R1 (lsp2-r1-to-r5)** is shown requesting link protection. Since a bypass path is in place to protect the downstream link, **lsp2-r1-to-r5** is associated with the bypass, as indicated by the **Link protected LSP** field.

The egress section of the output shows the return LSP **r5-to-r1**, which is not protected.

The transit section of the output shows link protection requested by **lsp1-r6-to-r0**. Since a bypass path is in place to protect the downstream link, **lsp1-r6-to-r0** is associated with the bypass, as indicated by the **Link protected LSP** field. Also included in the transit section of the output is the return LSP **r0-to-r6**, which is not protected.

Sample Output

```
user@R1> show rsvp interface
RSVP interface: 4 active
```

Interface	State	Active resv	Subscription	Static BW	Available BW	Reserved BW	Highwater mark
fe-0/1/0.0	Up	2	100%	100Mbps	100Mbps	0bps	35Mbps
fe-0/1/1.0	Up	1	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/2.0	Up	0	100%	100Mbps	100Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

Meaning

The sample output from ingress router **R1** shows the number of LSPs going through the interfaces configured on **R1**. The **Active resv** field shows the number of LSPs for each interface. For example, interface **fe-0/1/0.0** between **R1** and **R2** has two active reservations, **lsp1-r6-to-r0** and **lsp2-r1-to-r5**; interface **fe-0/1/1.0** between **R1** and **R7** has one, the bypass (**10.0.12.14**); interface **fe-0/1/2.0** between **R6** and **R1** has no LSP reservations; and interface **so-0/0/3.0** between **R6** and **R1** has one LSP reservation, **lsp1-r6-to-r0**.

Verify One-to-One Backup

Purpose

You can verify that one-to-one backup is established by examining the ingress router and the other routers in the network.

Action

To verify one-to-one backup, enter the following Junos OS CLI operational mode commands:

```
user@host> show mpls lsp ingress extensive
user@host> show rsvp session
```

Sample Output

The following sample output is from the ingress router **R1** :

```
user@R1> show mpls lsp ingress extensive
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: r1-to-r5
  ActivePath: via-r2 (primary)
    FastReroute desired
    LoadBalance: Random
    Encoding type: Packet, Switching type: Packet, GPID: IPv4
    *Primary   via-r2                State: Up
      SmartOptimizeTimer: 180
      Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.0.12.14(flag=9) 10.0.24.2(flag=1) 10.0.45.2
    8 May 11 14:51:46 Fast-reroute Detour Up
    7 May 11 14:50:55 Record Route: 10.0.12.14(flag=9) 10.0.24.2(flag=1) 10.0.45.2
6 May 11 14:50:55 Record Route: 10.0.12.14(flag=9) 10.0.24.2 10.0.45.2
5 May 11 14:50:52 Selected as active path
4 May 11 14:50:52 Record Route: 10.0.12.14 10.0.24.2 10.0.45.2
3 May 11 14:50:52 Up
2 May 11 14:50:52 Originate Call
1 May 11 14:50:52 CSPF: computation result accepted
Created: Thu May 11 14:50:52 2006
Total 1 displayed, Up 1, Down 0
```

Meaning

The sample output from **R1** shows that the **FastReroute desired** object was included in the Path messages for the LSP, allowing **R1** to select the active path for the LSP and establish a detour path to avoid **R2**.

In line 8, **Fast-reroute Detour Up** shows that the detour is operational. Lines 6 and 7 indicate that transit routers **R2** and **R4** have established their detour paths.

R2, 10.0.12.14, includes (**flag=9**), indicating that node protection is available for the downstream node and link. **R4, 10.0.24.2**, includes (**flag=1**), indicating that link protection is available for the next downstream link. In this case, **R4** can protect only the downstream link because the node is the egress router **R5**, which cannot be protected. For more information about flags, see the *Junos User Guide*.

The output for the **show mpls lsp extensive** command does not show the actual path of the detour. To see the actual links used by the detour paths, you must use the **show rsvp session ingress detail** command.

Sample Output

The following sample output is from the ingress router **R1** in the network shown in *One-to-One Backup Detours*.

```

user@R1> show rsvp session ingress detail
Ingress RSVP: 1 sessions

192.168.5.1
  From: 192.168.1.1,  LSPstate: Up,  ActiveRoute: 0
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100848
  Resv style: 1 FF, Label in: -, Label out: 100848
  Time left:      -, Since: Thu May 11 14:17:15 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 9228 protocol 0

  FastReroute desired
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 35 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 25 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2
  Record route: <self> 10.0.12.14 10.0.24.2 10.0.45.2

  Detour is Up
  Detour Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Detour adspec: sent MTU 1500
  Path MTU: received 1500
  Detour PATH sentto: 10.0.17.14 (fe-0/1/1.0) 23 pkts
  Detour RESV rcvfrom: 10.0.17.14 (fe-0/1/1.0) 20 pkts

  Detour Explct route: 10.0.17.14 10.0.79.2 10.0.59.1
  Detour Record route: <self> 10.0.17.14 10.0.79.2 10.0.59.1
  Detour Label out: 100848
Total 1 displayed, Up 1, Down 0

```

Meaning

The sample output from **R1** shows the RSVP session of the main LSP. The detour path is established, **Detour is Up**. The physical path of the detour is displayed in **Detour Explct route**. The detour path uses **R7** and **R9** as transit routers to reach **R5**, the egress router.

Sample Output

The following sample output is from the first transit router R2 in the network shown in *One-to-One Backup Detours*:

```
user@R2> show rsvp session transit detail
Transit RSVP: 1 sessions

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 1
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100448
  Resv style: 1 FF, Label in: 100720, Label out: 100448
  Time left: 126, Since: Wed May 10 16:12:21 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 5 receiver 9216 protocol 0

  FastReroute desired
  PATH rcvfrom: 10.0.12.13 (fe-0/1/0.0) 173 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.24.2 (so-0/0/1.0) 171 pkts
  RESV rcvfrom: 10.0.24.2 (so-0/0/1.0) 169 pkts
  Explct route: 10.0.24.2 10.0.45.2
  Record route: 10.0.12.13 <self> 10.0.24.2 10.0.45.2

  Detour is Up
  Detour Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Detour adspec: received MTU 1500 sent MTU 1500
  Path MTU: received 1500
  Detour PATH sentto: 10.0.27.2 (so-0/0/3.0) 169 pkts
  Detour RESV rcvfrom: 10.0.27.2 (so-0/0/3.0) 167 pkts

  Detour Explct route: 10.0.27.2 10.0.79.2 10.0.59.1
  Detour Record route: 10.0.12.13 <self> 10.0.27.2 10.0.79.2 10.0.59.1
  Detour Label out: 100736
Total 1 displayed, Up 1, Down 0
```

Meaning

The sample output from **R2** shows the detour is established (**Detour is Up**) and avoids **R4**, and the link connecting **R4** and **R5** (**10.0.45.2**). The detour path is through **R7** (**10.0.27.2**) and **R9** (**10.0.79.2**) to **R5**

(10.0.59.1), which is different from the explicit route for the detour from **R1**. **R1** has the detour passing through the 10.0.17.14 link on **R7**, while **R1** is using the 10.0.27.2 link. Both detours merge at **R9** through the 10.0.79.2 link to **R5** (10.0.59.1).

Sample Output

The following sample output is from the second transit router **R4** in the network shown in *One-to-One Backup Detours*:

```
user@R4> show rsvp session transit detail
Transit RSVP: 1 sessions

192.168.5.1
  From: 192.168.1.1,  LSPstate: Up,  ActiveRoute: 1
    LSPname: r1-to-r5,  LSPpath: Primary
    Suggested label received: -, Suggested label sent: -
    Recovery label received: -, Recovery label sent: 3
    Resv style: 1 FF, Label in: 100448, Label out: 3
    Time left: 155, Since: Wed May 10 16:15:38 2006
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Port number: sender 5 receiver 9216 protocol 0
    FastReroute desired
    PATH rcvfrom: 10.0.24.1 (so-0/0/1.0) 178 pkts
    Adspec: received MTU 1500 sent MTU 1500
    PATH sentto: 10.0.45.2 (so-0/0/2.0) 178 pkts
    RESV rcvfrom: 10.0.45.2 (so-0/0/2.0) 175 pkts
    Explct route: 10.0.45.2
    Record route: 10.0.12.13 10.0.24.1 <self> 10.0.45.2
    Detour is Up
    Detour Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Detour adspec: received MTU 1500 sent MTU 1500
    Path MTU: received 1500
    Detour PATH sentto: 10.0.49.2 (so-0/0/3.0) 176 pkts
    Detour RESV rcvfrom: 10.0.49.2 (so-0/0/3.0) 175 pkts
    Detour Explct route: 10.0.49.2 10.0.59.1
    Detour Record route: 10.0.12.13 10.0.24.1 <self> 10.0.49.2 10.0.59.1
    Detour Label out: 100352
Total 1 displayed, Up 1, Down 0
```

Meaning

The sample output from **R4** shows the detour is established (**Detour is Up**) and avoids the link connecting **R4** and **R5** (10.0.45.2). The detour path is through **R9** (10.0.49.2) to **R5** (10.0.59.1). Some of the information

is similar to that found in the output for **R1** and **R2**. However, the explicit route for the detour is different, going through the link connecting **R4** and **R9** (so-0/0/3 or 10.0.49.2).

Sample Output

The following sample output is from **R7**, which is used in the detour path in the network shown in *One-to-One Backup Detours*:

```
user@R7> show rsvp session transit detail
Transit RSVP: 1 sessions, 1 detours

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 1
    LSPname: r1-to-r5, LSPpath: Primary
    Suggested label received: -, Suggested label sent: -
    Recovery label received: -, Recovery label sent: 100368
    Resv style: 1 FF, Label in: 100736, Label out: 100368
    Time left: 135, Since: Wed May 10 16:14:42 2006
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Port number: sender 5 receiver 9216 protocol 0
    Detour branch from 10.0.27.1, to skip 192.168.4.1, Up
      Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
      Adspec: received MTU 1500
      Path MTU: received 0
      PATH rcvfrom: 10.0.27.1 (so-0/0/3.0) 179 pkts
      Adspec: received MTU 1500 sent MTU 1500
      PATH sentto: 10.0.79.2 (so-0/0/1.0) 177 pkts
      RESV rcvfrom: 10.0.79.2 (so-0/0/1.0) 179 pkts
      Explct route: 10.0.79.2 10.0.59.1
      Record route: 10.0.12.13 10.0.27.1 <self> 10.0.79.2 10.0.59.1
      Label in: 100736, Label out: 100368
    Detour branch from 10.0.17.13, to skip 192.168.2.1, Up
      Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
      Adspec: received MTU 1500
      Path MTU: received 0
      PATH rcvfrom: 10.0.17.13 (fe-0/1/1.0) 179 pkts
      Adspec: received MTU 1500
      PATH sentto: 10.0.79.2 (so-0/0/1.0) 0 pkts
      RESV rcvfrom: 10.0.79.2 (so-0/0/1.0) 0 pkts
      Explct route: 10.0.79.2 10.0.59.1
      Record route: 10.0.17.13 <self> 10.0.79.2 10.0.59.1
      Label in: 100752, Label out: 100368
Total 1 displayed, Up 1, Down 0
```


Meaning

The sample output from **R7** shows the same information as for a regular transit router used in the primary path of the LSP: the ingress address (**192.168.1.1**), the egress address (**192.168.5.1**), and the name of the LSP (**r1-to-r5**). Two detour paths are displayed; the first to avoid **R4** (**192.168.4.1**) and the second to avoid **R2** (**192.168.2.1**). Because **R7** is used as a transit router by **R2** and **R4**, **R7** can merge the detour paths together as indicated by the identical **Label out** value (**100368**) for both detour paths. Whether **R7** receives traffic from **R4** with a label value of **100736** or from **R2** with a label value of **100752**, **R7** forwards the packet to **R5** with a label value of **100368**.

Sample Output

The following sample output is from **R9**, which is a router used in the detour path in the network shown in *One-to-One Backup Detours*:

```
user@R9> show rsvp session transit detail
Transit RSVP: 1 sessions, 1 detours

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 1
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100352, Label out: 3
  Time left: 141, Since: Wed May 10 16:16:40 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 5 receiver 9216 protocol 0

Detour branch from 10.0.49.1, to skip 192.168.5.1, Up
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Adspec: received MTU 1500
  Path MTU: received 0
  PATH rcvfrom: 10.0.49.1 (so-0/0/3.0) 183 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.59.1 (so-0/0/0.0) 182 pkts
  RESV rcvfrom: 10.0.59.1 (so-0/0/0.0) 183 pkts
  Explct route: 10.0.59.1
  Record route: 10.0.12.13 10.0.24.1 10.0.49.1 <self> 10.0.59.1
  Label in: 100352, Label out: 3

Detour branch from 10.0.27.1, to skip 192.168.4.1, Up
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Adspec: received MTU 1500
  Path MTU: received 0

Detour branch from 10.0.17.13, to skip 192.168.2.1, Up
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Adspec: received MTU 1500
```

```

Path MTU: received 0
PATH rcvfrom: 10.0.79.1 (so-0/0/1.0) 181 pkts
Adspec: received MTU 1500
PATH sentto: 10.0.59.1 (so-0/0/0.0) 0 pkts
RESV rcvfrom: 10.0.59.1 (so-0/0/0.0) 0 pkts

Explit route: 10.0.59.1
Record route: 10.0.12.13 10.0.27.1 10.0.79.1 <self> 10.0.59.1
Label in: 100368, Label out: 3
Total 1 displayed, Up 1, Down 0

```

Meaning

The sample output from **R9** shows that **R9** is the penultimate router for the detour path, the explicit route includes only the egress link address (**10.0.59.1**), and the **Label out** value (**3**) indicates that **R9** has performed penultimate-hop label popping. Also, the detour branch from **10.0.27.1** does not include path information because **R7** has merged the detour paths from **R2** and **R4**. Notice that the **Label out** value in the detour branch from **10.0.17.13** is **100368**, the same value as the **Label out** value on **R7**.

Sample Output

The following sample output is from the egress router **R5** in the network shown in *One-to-One Backup Detours*:

```

user@R5> show rsvp session egress detail
Egress RSVP: 1 sessions, 1 detours

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 119, Since: Thu May 11 14:44:31 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 9230 protocol 0

FastReroute desired
PATH rcvfrom: 10.0.45.1 (so-0/0/2.0) 258 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient

Record route: 10.0.12.13 10.0.24.1 10.0.45.1 <self>
Detour branch from 10.0.49.1, to skip 192.168.5.1, Up
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

```

```

    Adspec: received MTU 1500
    Path MTU: received 0
Detour branch from 10.0.27.1, to skip 192.168.4.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
Detour branch from 10.0.17.13, to skip 192.168.2.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
    PATH rcvfrom: 10.0.59.2 (so-0/0/0.0) 254 pkts
    Adspec: received MTU 1500
    PATH sentto: localclient
    RESV rcvfrom: localclient
    Record route: 10.0.12.13 10.0.24.1 10.0.49.1 10.0.59.2 <self>
Label in: 3, Label out: -
Total 1 displayed, Up 1, Down 0

```

Meaning

The sample output from **R5** shows the main LSP in the **Record route** field and the detours through the network.

Verify That the Primary Path Is Operational

Purpose

Primary paths must always be used in the network if they are available, therefore an LSP always moves back to the primary path after a failure, unless the configuration is adjusted. For more information on adjusting the configuration to prevent a failed primary path from reestablishing, see [“Preventing Use of a Path That Previously Failed” on page 283](#).

Action

To verify that the primary path is operational, enter the following Junos OS command-line interface (CLI) operational mode commands:

```

user@host> show mpls lsp extensive ingress
user@host> show rsvp interface

```

Sample Output 1

```

user@R1> show mpls lsp extensive ingress
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: r1-to-r5
    ActivePath: via-r2 (primary)
    LoadBalance: Random
    Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary via-r2                State: Up
    Priorities: 6 6
    Bandwidth: 35Mbps
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 11)
10.0.12.14 S 10.0.24.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.0.12.14 10.0.24.2
        5 Apr 29 14:40:43 Selected as active path
        4 Apr 29 14:40:43 Record Route: 10.0.12.14 10.0.24.2
        3 Apr 29 14:40:43 Up
        2 Apr 29 14:40:43 Originate Call
        1 Apr 29 14:40:43 CSPF: computation result accepted
Standby via-r7                State: Dn
    SmartOptimizeTimer: 180
    No computed ERO.
    Created: Sat Apr 29 14:40:43 2006
Total 1 displayed, Up 1, Down 0

```

Sample Output 2

```

user@R1> show rsvp interface
RSVP interface: 3 active

```

Interface	State	Active resv	Subscription	Static BW	Available BW	Reserved BW	Highwater mark
fe-0/1/0.0	Up	2	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/1.0	Up	1	100%	100Mbps	100Mbps	0bps	0bps

```
so-0/0/3.0  Up           1    100%   155.52Mbps   155.52Mbps   0bps       0bps
```

Meaning

Sample output 1 shows that the LSP is operational and is using the primary path (**via-r2**) with **R2 (10.0.12.14)** and **R4 (10.0.24.2)** as transit routers. The priority values are the same for setup and hold, **6 6**. Priority 0 is the highest (best) priority and 7 is the lowest (worst) priority. The Junos OS default for setup and hold priority is 7:0. Unless some LSPs are more important than others, preserving the default is a good practice. Configuring a setup priority that is better than the hold priority is not allowed, resulting in a failed commit in order to avoid preemption loops.

Verify That the Secondary Path Is Established

Purpose

When the secondary path is configured with the **standby** statement, the secondary path should be *up* but *not active*; it will become active if the primary path fails. A secondary path configured without the **standby** statement will not come up unless the primary path fails. To test that the secondary path is correctly configured and would come up if the primary path were to fail, you must deactivate a link or node critical to the primary path, then issue the **show mpls lsp *lsp-path-name* extensive** command.

Action

To verify that the secondary path is established, enter the following Junos OS CLI operational mode command:

Sample Output

```
user@R1> show mpls lsp extensive
```

Sample Output

The following sample output shows a correctly configured secondary path before and after it comes up. In the example, interface **fe-0/1/0** on **R2** is deactivated, which brings down the primary path **via-r2**. The ingress router **R1** switches traffic to the secondary path **via-r7**.

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: r1-to-r5
  ActivePath: via-r2 (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-r2          State: Up
    Priorities: 6 6
    Bandwidth: 35Mbps
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.0.12.14 10.0.24.2 10.0.45.2
    5 Apr 29 14:40:43 Selected as active path
    4 Apr 29 14:40:43 Record Route: 10.0.12.14 10.0.24.2
    3 Apr 29 14:40:43 Up
    2 Apr 29 14:40:43 Originate Call
    1 Apr 29 14:40:43 CSPF: computation result accepted
  Secondary via-r7          State: Dn
    SmartOptimizeTimer: 180
    No computed ERO.
    Created: Sat Apr 29 14:40:43 2006
Total 1 displayed, Up 1, Down 0

[edit interfaces]
user@R2# deactivate fe-0/1/0

[edit interfaces]
user@R2# show
inactive: fe-0/1/0 {
    unit 0 {
        family inet {
            address 10.0.12.14/30;
        }
        family iso;
        family mpls;
    }
}

```

```

user@R1> show mpls lsp name r1-to-r4 extensive
Ingress LSP: 1 sessions

192.168.4.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: r1-to-r4
    ActivePath: via-r7 (secondary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
    Primary via-r2          State: Dn
      Priorities: 6 6
      Bandwidth: 35Mbps
      SmartOptimizeTimer: 180
      Will be enqueued for recomputation in 14 second(s).
10 Apr 29 14:52:33 CSPF failed: no route toward 10.0.12.1 4[21 times]
  9 Apr 29 14:42:48 Clear Call
  8 Apr 29 14:42:48 Deselected as active
  7 Apr 29 14:42:48 Session preempted
  6 Apr 29 14:42:48 Down
  5 Apr 29 14:40:43 Selected as active path
  4 Apr 29 14:40:43 Record Route: 10.0.12.14 10.0.24.2
  3 Apr 29 14:40:43 Up
  2 Apr 29 14:40:43 Originate Call
  1 Apr 29 14:40:43 CSPF: computation result accepted
*Standby via-r7          State: Up
  SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 11)
10.0.17.14 S 10.0.47.1 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    10.0.17.14 10.0.47.1
  5 Apr 29 14:42:48 Selected as active path
  4 Apr 29 14:41:12 Record Route: 10.0.17.14 10.0.47.1
  3 Apr 29 14:41:12 Up
  2 Apr 29 14:41:12 Originate Call
  1 Apr 29 14:41:12 CSPF: computation result accepted
  Created: Sat Apr 29 14:40:43 2006
  Total 1 displayed, Up 1, Down 0

```

Meaning

The sample output from egress router **R1** shows a correctly configured standby secondary path in a down state because the primary path is still up. Upon deactivation of an interface (**interface fe-0/1/0** on **R2**) critical to the primary path, the primary path **via-r2** goes down and the standby secondary path **via-r7** comes up, allowing **R1** to switch traffic to the standby secondary path.

Verifying the Physical Layer

Purpose

After you have configured the LSP, issued the **show mpls lsp extensive** command, and determined that there is an error, you can start investigating the problem at the physical layer of the network.

Figure 124 on page 1544 illustrates the physical layer of the layered MPLS model.

Figure 124: Verifying the Physical Layer

BGP Layer	traceroute <i>host-name</i> show bgp summary show configuration protocols bgp show route <i>destination-prefix</i> detail show route receive protocol bgp <i>neighbor-address</i>
MPLS Layer	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> traceroute <i>address</i> ping mpls rsvp <i>lsp-name</i> detail
RSVP Layer	show rsvp session show rsvp neighbor show rsvp interface
↩ IGP and IP Layers Functioning ↪	
OSPF Layer	IS-IS Layer
show ospf neighbor show configuration protocols ospf show ospf interface	show isis adjacency show configuration protocols isis show isis interface
IP Layer	IP Layer
show ospf neighbor extensive show interfaces terse	show isis adjacency extensive show interfaces terse
Data Link Layer	show interfaces extensive <i>"JUNOS Interfaces Operations Guide"</i>
Physical Layer	show interfaces show interfaces terse ping <i>host</i>


0015543

With this layer, you must ensure that the routers are connected, and that the interfaces are up and configured correctly on the ingress, egress, and transit routers.

If the network is not functioning at this layer, the label-switched path (LSP) does not work as configured.

Figure 125 on page 1545 illustrates the MPLS network and the problem described in this topic.

Figure 125: MPLS Network Broken at the Physical Layer

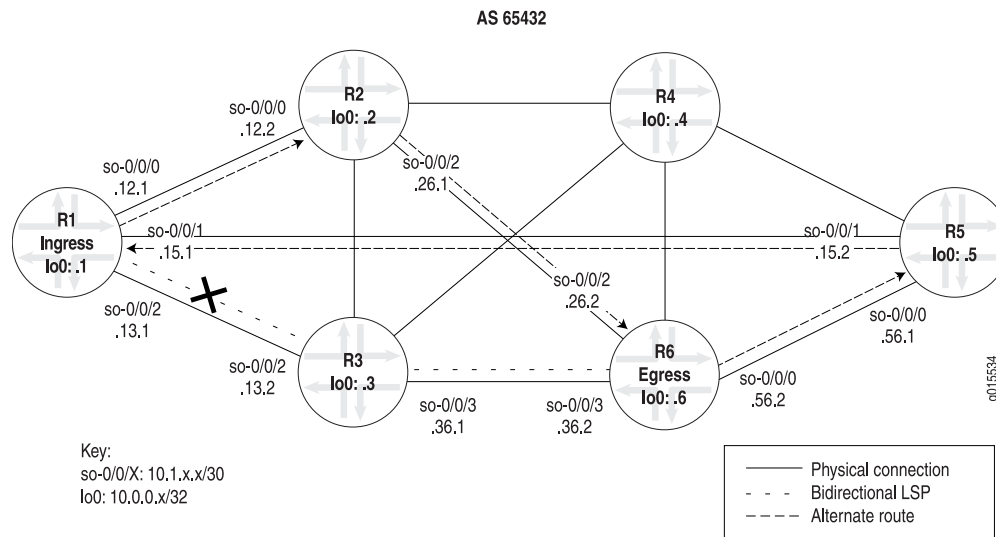

The network shown in [Figure 125 on page 1545](#) is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router **R1**, through transit router **R3**, to egress router **R6**. In addition, a reverse LSP is configured to run from **R6** through **R3** to **R1**, creating bidirectional traffic.

However, in this example, traffic does not use the configured LSP. Instead traffic uses the alternate route from **R1** through **R2** to **R6**, and in the reverse direction, from **R6** through **R5** to **R1**.

When you become aware of a situation where an alternate route is used rather than the configured LSP, verify that the physical layer is functioning correctly. You might find that routers are not connected, or that interfaces are not up and configured correctly on the ingress, egress, or transit routers.

The cross shown in [Figure 125 on page 1545](#) indicates where the LSP is broken because of a configuration error on ingress router **R1**.

To check the physical layer, follow these steps:

1. [Verify the LSP | 1545](#)
2. [Verify Router Connection | 1547](#)
3. [Verify Interfaces | 1548](#)
4. [Take Appropriate Action | 1549](#)
5. [Verify the LSP Again | 1550](#)

Verify the LSP

Purpose

Typically, you use the **show mpls lsp extensive** command to verify the LSP. However, for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls**

lsp extensive) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

Action

To determine whether the LSP is up, enter the following command from the ingress router:

```
user@ingress-router> show mpls lsp extensive
```

Sample Output

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.12.2 S 10.1.26.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.12.2 10.1.26.2
    99 Sep 18 14:19:04 CSPF: computation result accepted
    98 Sep 18 14:19:04 CSPF: link down/deleted
10.1.13.1(R1.00/10.0.0.1)->10.1.13.2(R3.00/10.0.0.3)
    97 Sep 18 14:19:01 Record Route: 10.1.12.2 10.1.26.2
    96 Sep 18 14:19:01 Up
    95 Sep 18 14:19:01 Clear Call
    94 Sep 18 14:19:01 CSPF: computation result accepted
    93 Sep 18 14:19:01 MPLS label allocation failure
    92 Sep 18 14:19:01 Down
    91 Aug 17 12:22:52 Selected as active path
    90 Aug 17 12:22:52 Record Route: 10.1.13.2 10.1.36.2
    89 Aug 17 12:22:52 Up
    [...Output truncated...]
    Created: Sat Jul 10 18:18:44 2004
    Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
```

```

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 144, Since: Tue Aug 17 12:23:14 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39024 protocol 0
  PATH rcvfrom: 10.1.15.2 (so-0/0/1.0) 67333 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.56.2 10.1.15.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The sample output from ingress router **R1** shows that the LSP is using an alternate path rather than the configured path. The configured path for the LSP is **R1** through **R3** to **R6**, and for the reverse LSP, **R6** through **R3** to **R1**. The alternate path used by the LSP is **R1** through **R2** to **R6**, and for the reverse LSP, **R6** through **R5** to **R1**.

Verify Router Connection

Purpose

Confirm that the appropriate ingress, transit, and egress routers are functioning by examining whether the packets have been received and transmitted with 0% packet loss.

Action

To determine that the routers are connected, enter the following command from the ingress and transit routers:

```
user@host> ping host
```

Sample Output

```

user@R1> ping 10.0.0.3 count 3
PING 10.0.0.3 (10.0.0.3): 56 data bytes
64 bytes from 10.0.0.3: icmp_seq=0 ttl=254 time=0.859 ms
64 bytes from 10.0.0.3: icmp_seq=1 ttl=254 time=0.746 ms
64 bytes from 10.0.0.3: icmp_seq=2 ttl=254 time=0.776 ms

--- 10.0.0.3 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.746/0.794/0.859/0.048 ms

user@R3> ping 10.0.0.6 count 3
PING 10.0.0.6 (10.0.0.6): 56 data bytes
64 bytes from 10.0.0.6: icmp_seq=0 ttl=255 time=0.968 ms
64 bytes from 10.0.0.6: icmp_seq=1 ttl=255 time=3.221 ms
64 bytes from 10.0.0.6: icmp_seq=2 ttl=255 time=0.749 ms

--- 10.0.0.6 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.749/1.646/3.221/1.117 ms

```

Meaning

The sample output shows that ingress router **R1** is receiving packets from transit router **R3**, and that the transit router is receiving packets from the egress router. Therefore, the routers in the LSP are connected.

Verify Interfaces

Purpose

Confirm that the interfaces are configured correctly with the **family mpls** statement.

Action

To determine that the relevant interfaces are up and configured correctly, enter the following commands from the ingress, transit, and egress routers:

```

user@host> show interfaces terse
user@host> show configuration interfaces type-fpc/pic/port

```

Sample Output

```

user@R1> show interfaces so* terse
Interface          Admin Link Proto Local          Remote
so-0/0/0           up   up
so-0/0/0.0         up   up   inet  10.1.12.1/30
                               iso
                               mpls
so-0/0/1           up   up
so-0/0/1.0         up   up   inet  10.1.15.1/30
                               iso
                               mpls
so-0/0/2           up   up
so-0/0/2.0         up   up   inet  10.1.13.1/30
                               iso  <<< family mpls is missing
so-0/0/3           up   down

```

```

user@R1> show configuration interfaces so-0/0/2
unit 0 {
    family inet {
        address 10.1.13.1/30;
    }
    family iso; <<< family mpls is missing
}

```

Meaning

The sample output shows that interface **so-0/0/2.0** on the ingress router does not have the **family mpls** statement configured at the **[edit interfaces type-fpc/pic/port]** hierarchy level, indicating that the interface is incorrectly configured to support the LSP. The LSP is configured correctly at the **[edit protocols mpls]** hierarchy level.

The output from the transit and egress routers (not shown) shows that the interfaces on those routers are configured correctly.

Take Appropriate Action

Problem

Description: Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In the example below, the **family mpls** statement, which was missing, is included in the configuration of ingress router **R1**.

Solution

To correct the error in this example, enter the following commands:

```
[edit interfaces type-fpc/pic/port]
user@R1# set family mpls
user@R1# show
user@R1# commit
```

Sample Output

```
[edit interfaces so-0/0/2 unit 0]
user@R1# set family mpls

[edit interfaces so-0/0/2 unit 0]
user@R1# show
family inet {
    address 10.1.13.1/30;
}
family iso;
family mpls;

[edit interfaces so-0/0/2 unit 0]
user@R1# commit
commit complete
```

Meaning

The sample output from ingress router **R1** shows that the **family mpls** statement is configured correctly for interface **so-0/0/2.0**, and that the LSP is now functioning as originally configured.

Verify the LSP Again

Purpose

After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the physical layer has been resolved.

Action

To verify that the LSP is up and traversing the network as expected, enter the following command:

```
user@host> show mpls lsp extensive
```

Sample Output 1

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.1.13.2 10.1.36.2
    112 Sep 21 16:27:33 Record Route: 10.1.13.2 10.1.36.2
    111 Sep 21 16:27:33 Up
    110 Sep 21 16:27:33 CSPF: computation result accepted
    109 Sep 21 16:27:33 CSPF: link down/deleted
10.1.12.1(R1.00/10.0.0.1)->10.1.12.2(R2.00/10.0.0.2)
    108 Sep 21 16:27:33 CSPF: link down/deleted
10.1.15.1(R1.00/10.0.0.1)->10.1.15.2(R5.00/10.0.0.5)
  [Output truncated...]
  Created: Sat Jul 10 18:18:44 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 149, Since: Tue Sep 21 16:29:43 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 39024 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 7 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Sample Output 2

```
[edit protocols mpls]
user@R1# show
label-switched-path R1-to-R6 {
    to 10.0.0.6;
}
interface fxp0.0 {
    disable;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
```

Meaning

Sample Output 1 from ingress router **R1** shows that the LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

Sample Output 2 from ingress router **R1** shows that the LSP is forced to take the intended path because MPLS is deactivated on **R1** interfaces **so-0/0/0.0** and **so-0/0/1.0**. If these interfaces were not deactivated, even though the configuration is now correct, the LSP would still traverse the network through the alternate path.

Checking the Data Link Layer

Purpose

After you have configured the label-switched path (LSP), issued the **show mpls lsp extensive** command, and determined that there is an error, you might find that the error is not in the physical layer. Continue investigating the problem at the data link layer of the network.

[Figure 126 on page 1553](#) illustrates the data link layer of the layered MPLS model.

Figure 126: Checking the Data Link Layer


BGP Layer	tracroute <i>host-name</i> show bgp summary show configuration protocols bgp show route <i>destination-prefix</i> detail show route receive protocol bgp <i>neighbor-address</i>
MPLS Layer	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> tracroute <i>address</i> ping mpls rsvp <i>lsp-name</i> detail
RSVP Layer	show rsvp session show rsvp neighbor show rsvp interface
↩ IGP and IP Layers Functioning ↪	
OSPF Layer show ospf neighbor show configuration protocols ospf show ospf interface	IS-IS Layer show isis adjacency show configuration protocols isis show isis interface
IP Layer show ospf neighbor extensive show interfaces terse	IP Layer show isis adjacency extensive show interfaces terse
Data Link Layer	show interfaces extensive "JUNOS Interfaces Operations Guide"
Physical Layer	show interfaces show interfaces terse ping <i>host</i>

g015544

With this layer, you must check the encapsulation mode, for example, Point-to-Point Protocol (PPP) or Cisco High-Level Data Link Control (HDLC); PPP options, for example, header encapsulation; frame check sequence (FCS) size; and whether keepalive frames are enabled or disabled. Also, check the ingress, egress, and transit routers.

Figure 127 on page 1553 illustrates the MPLS network used in this topic.

Figure 127: MPLS Network Broken at the Data Link Layer

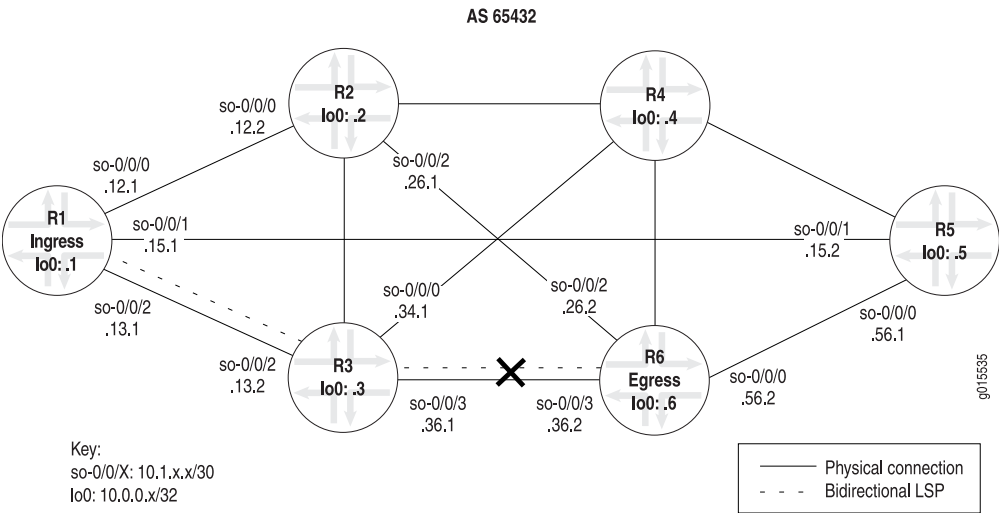

The network shown in [Figure 127 on page 1553](#) is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router **R1**, through transit router **R3**, to egress router **R6**. In addition, a reverse LSP is configured to run from **R6** through **R3** to **R1**, creating bidirectional traffic.

However, in this example, the LSP is down without a path in either direction, from **R1** to **R6** or from **R6** to **R1**.

When you verify that the data link layer is not functioning correctly, you might find a mismatch with PPP or Cisco HDLC encapsulation, PPP options, or keepalive frames.

The cross shown in [Figure 127 on page 1553](#) indicates where the LSP is broken because of a configuration error on ingress router **R1** that prevents the LSP from traversing the network as expected.

To check the data link layer, follow these steps:

1. [Verify the LSP | 1554](#)
2. [Verify Interfaces | 1555](#)
3. [Take Appropriate Action | 1560](#)
4. [Verify the LSP Again | 1561](#)

Verify the LSP

Purpose

Typically, you use the **show mpls lsp extensive** command to verify the LSP. However for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name name** or **show mpls lsp name name extensive**).

Action

To determine whether the LSP is up, enter the following command from the ingress router:

```
user@host> show mpls lsp extensive
```

Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1 , State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
```

```

ActivePath: (none)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
Primary                               State: Dn
    Will be enqueued for recomputation in 15 second(s).
140 Sep 30 12:01:12 CSPF failed: no route toward 10.0.0.6[26 times]
139 Sep 30 11:48:57 Deselected as active
138 Sep 30 11:48:56 CSPF failed: no route toward 10.0.0.6
137 Sep 30 11:48:56 Clear Call
136 Sep 30 11:48:56 CSPF: link down/deleted
10.1.36.1(R3.00/10.0.0.3)->10.1.36.2(R6.00/10.0.0.6)
135 Sep 30 11:48:56 ResvTear received
134 Sep 30 11:48:56 Down
133 Sep 30 11:48:56 CSPF failed: no route toward 10.0.0.6
132 Sep 30 11:48:56 10.1.13.2: No Route toward dest
[...Output truncated...]
Created: Sat Jul 10 18:18:44 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The sample output from ingress router **R1** shows the LSPs within which it participates. The ingress LSP is down, without a path from **R1** to **R6**. Because a reverse LSP is configured in the network shown in [“MPLS Network Broken at the Data Link Layer” on page 1553](#), we would expect an egress LSP session to be up. However, **R1** does not have any egress LSPs, indicating that the LSP from **R6** to **R1** is not functioning.

Verify Interfaces

Purpose

From your network topology, determine the adjacent interfaces through which the LSP is meant to traverse, and examine the output for the encapsulation type, PPP options, FCS size, and whether keepalive frames are enabled or disabled

NOTE: Before you proceed with this step, check the physical layer to ensure that the problem is not in the physical layer.

Action

To verify the functioning of adjacent interfaces, enter the following commands from the relevant routers:

```
user@host> show interfaces type-fpc/pic/port extensive
user@host> show interfaces type-fpc/pic/port
```

Sample Output 1

```
user@R6> show interfaces so-0/0/3 extensive
Physical interface: so-0/0/3, Enabled, Physical link is Up
  Interface index: 131, SNMP ifIndex: 27, Generation: 14
  Link-level type: Cisco-HDLC , MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3,
  Loopback: None,
  FCS: 16 , Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Link-Layer-Down   Point-To-Point SNMP-Traps 16384
  Link flags    : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 357 (last sent 00:00:04 ago)
  CoS queues     : 4 supported
  Last flapped   : 2004-07-21 16:03:49 PDT (10w0d 07:01 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes   :           203368873           0 bps
    Output bytes   :           186714992          88 bps
    Input  packets :           3641808           0 pps
    Output packets :           3297569           0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Bucket drops: 0,
    Policed discards: 1770, L3 incompletes: 0, L2 channel errors: 0, L2 mismatch
    timeouts: 0,
    HS link CRC errors: 0, HS link FIFO overflows: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO
    underflows: 0,
    MTU errors: 0
```

Queue counters:	Queued packets	Transmitted packets	Dropped packets
0 best-effort	197012	197012	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	3100557	3100557	0

SONET alarms : None

SONET defects : None

SONET PHY:	Seconds	Count	State
PLL Lock	0	0	OK
PHY Light	0	0	OK
SONET section:			
BIP-B1	0	0	
SEF	1	3	OK
LOS	1	1	OK
LOF	1	1	OK
ES-S	1		
SES-S	1		
SEFS-S	1		
SONET line:			
BIP-B2	0	0	
REI-L	0	0	
RDI-L	0	0	OK
AIS-L	0	0	OK
BERR-SF	0	0	OK
BERR-SD	0	0	OK
ES-L	1		
SES-L	1		
UAS-L	0		
ES-LFE	0		
SES-LFE	0		
UAS-LFE	0		
SONET path:			
BIP-B3	0	0	
REI-P	0	0	
LOP-P	0	0	OK
AIS-P	0	0	OK
RDI-P	0	0	OK
UNEQ-P	0	0	OK
PLM-P	0	0	OK
ES-P	1		
SES-P	1		
UAS-P	0		

```

ES-PFE                                0
SES-PFE                               0
UAS-PFE                               0
Received SONET overhead:
  F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
  S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
  Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
  F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
  S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00

Received path trace: R3 so-0/0/3
52 33 20 73 6f 2d 30 2f 30 2f 33 00 00 00 00 00  R3 so-0/0/3.. ...
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....

Transmitted path trace: R6 so-0/0/3
52 36 20 73 6f 2d 30 2f 30 2f 33 00 00 00 00 00  R6 so-0/0/3 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....

HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket  : Disabled
  Giant threshold: 4484, Runt threshold: 3
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %             bps    %         bytes
  0 best-effort           95      147744000  95          0      low  none
  3 network-control        5       7776000    5          0      low  none

Logical interface so-0/0/3.0 (Index 71) (SNMP ifIndex 28) (Generation 16)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: Cisco-HDLC
Traffic statistics:
  Input  bytes :      406737746
  Output bytes :      186714992
  Input  packets:      7283616
  Output packets:      3297569
Local statistics:
  Input  bytes :      203368873
  Output bytes :      186714992
  Input  packets:      3641808
  Output packets:      3297569
```

```

Transit statistics:
  Input  bytes   :           203368873           0 bps
  Output bytes   :                0           0 bps
  Input  packets :          3641808           0 pps
  Output packets :                0           0 pps
Protocol inet, MTU: 4470, Generation: 46, Route table: 0
  Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 10.1.36.0/30, Local: 10.1.36.2, Broadcast: 10.1.36.3, Generation: 38
Protocol iso, MTU: 4469, Generation: 47, Route table: 0
  Flags: None
Protocol mpls, MTU: 4458, Generation: 48, Route table: 0
  Flags: None

```

Sample Output 2

```

user@R3> show interfaces so-0/0/3
Physical interface: so-0/0/3, Enabled, Physical link is Up
  Interface index: 131, SNMP ifIndex: 24
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3,
Loopback: None, FCS: 16,
  Payload scrambler: Enabled
  Device flags    : Present Running
  Interface flags: Point-To-Point SNMP-Traps
Link flags   : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 736827 (00:00:03 ago), Output: 736972 (00:00:05 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Opened, mpls: Opened
  CHAP state: Not-configured
  CoS queues      : 4 supported
  Last flapped    : 2004-07-21 16:08:01 PDT (10w5d 19:57 ago)
  Input rate      : 40 bps (0 pps)
  Output rate     : 48 bps (0 pps)
  SONET alarms    : None
  SONET defects   : None

Logical interface so-0/0/3.0 (Index 70) (SNMP ifIndex 51)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP

```

```

Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.1.36.0/30, Local: 10.1.36.1, Broadcast: 10.1.36.3
Protocol iso, MTU: 4470
  Flags: None
Protocol mpls, MTU: 4458
  Flags: None

```

Meaning

Sample Output 1 from egress router **R6** shows that there are no SONET alarms or defects (**none**), the states are all **OK**, and the path trace shows the distant end (**R3 so-0.0.0**), indicating that the physical link is up. However, the logical link is down, and the link-level type is Cisco HDLC.

Sample Output 2 from transit router **R3** shows that the link-level type is PPP, indicating that the encapsulation types are mismatched, resulting in the LSP going down.

Take Appropriate Action

Problem

Description: Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In the example below, the encapsulation types are mismatched.

Solution

To correct the error in this example, enter the following commands:

```

[edit interfaces so-0/0/3]
user@R1# show
user@R1# delete encapsulation
user@R1# show
user@R1# commit

```

Sample Output

```

[edit interfaces so-0/0/3]
user@R6# show
encapsulation cisco-hdlc;
unit 0 {
  family inet {
    address 10.1.36.2/30;
  }
  family iso;
}

```



```

        family mpls;
    }

[edit interfaces so-0/0/3]
user@R6# delete encapsulation

[edit interfaces so-0/0/3]
user@R6# show
unit 0 {
    family inet {
        address 10.1.36.2/30;
    }
    family iso;
    family mpls;
}

[edit interfaces so-0/0/3]
user@R6# commit
commit complete

```

Meaning

The sample output from egress router **R6** shows that the Cisco HDLC was incorrectly configured on interface **so-0/0/3** which prevented the LSP from using the intended path. The problem was corrected when the **encapsulation** statement was deleted and the configuration committed.

Verify the LSP Again

Purpose

After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the data link layer has been resolved.

Action

From the ingress, egress, and transit routers, verify that the LSP is up and traversing the network as expected:

```

user@host> show mpls lsp extensive

```

Sample Output 1

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1 , State: Up,  ActiveRoute: 1 , LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
  10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
145 Sep 30 12:25:01 Selected as active path
144 Sep 30 12:25:01 Record Route:  10.1.13.2 10.1.36.2
143 Sep 30 12:25:01 Up
142 Sep 30 12:25:01 Originate Call
141 Sep 30 12:25:01 CSPF: computation result accepted
140 Sep 30 12:24:32 CSPF failed: no route toward 10.0.0.6[74 times]
139 Sep 30 11:48:57 Deselected as active
138 Sep 30 11:48:56 CSPF failed: no route toward 10.0.0.6
137 Sep 30 11:48:56 Clear Call
136 Sep 30 11:48:56 CSPF: link down/deleted
10.1.36.1(R3.00/10.0.0.3)->10.1.36.2(R6.00/10.0.0.6)
  [...Output truncated...]
  Created: Sat Jul 10 18:18:43 2004
Total 1 displayed, Up 1 , Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6 , LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 134, Since: Thu Sep 30 12:24:56 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 6 receiver 39024 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 7 pkts

```

```

Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient

Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Sample Output 2

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1
ActivePath: (primary)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.36.1 S 10.1.13.1 S
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    10.1.36.1 10.1.13.1
50 Sep 30 12:24:12 Selected as active path
49 Sep 30 12:24:12 Record Route: 10.1.36.1 10.1.13.1
48 Sep 30 12:24:12 Up
47 Sep 30 12:24:12 Originate Call
46 Sep 30 12:24:12 CSPF: computation result accepted
45 Sep 30 12:23:43 CSPF failed: no route toward 10.0.0.1[73 times]
44 Sep 30 11:48:12 Deselected as active
43 Sep 30 11:48:12 CSPF failed: no route toward 10.0.0.1
42 Sep 30 11:48:12 CSPF: link down/deleted
10.1.36.2(R6.00/10.0.0.6)->10.1.36.1(R3.00/10.0.0.3)
[...Output truncated...]
Created: Tue Aug 17 12:18:34 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

```

10.0.0.6

From: 10.0.0.1 , LSPstate: Up, ActiveRoute: 0
 LSPname: R1-to-R6, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: -
 Resv style: 1 FF, Label in: 3, Label out: -
 Time left: 159, Since: Thu Sep 30 12:24:16 2004
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 19 receiver 44251 protocol 0
 PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 4 pkts
 Adspec: received MTU 1500
 PATH sentto: localclient
 RESV rcvfrom: localclient
Record route: 10.1.13.1 10.1.36.1 <self>
 Total 1 displayed, Up 1, Down 0

 Transit LSP: 0 sessions
 Total 0 displayed, Up 0, Down 0

Sample Output 3

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions
  
```

10.0.0.1

From: 10.0.0.6 , LSPstate: Up, ActiveRoute: 1
 LSPname: R6-to-R1, LSPpath: Primary
 Suggested label received: -, Suggested label sent: -
 Recovery label received: -, Recovery label sent: 3
 Resv style: 1 FF, Label in: 100176, Label out: 3
 Time left: 143, Since: Thu Sep 30 12:21:25 2004
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
 Port number: sender 6 receiver 39024 protocol 0

```

PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 10 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.13.1 (so-0/0/2.0) 9 pkts
RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 9 pkts
Explct route: 10.1.13.1

```

Record route: 10.1.36.2 <self> 10.1.13.1

10.0.0.6

```

From: 10.0.0.1 , LSPstate: Up, ActiveRoute: 1
LSPname: R1-to-R6, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100192, Label out: 3
Time left: 148, Since: Thu Sep 30 12:21:30 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 19 receiver 44251 protocol 0
PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 9 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.36.2 (so-0/0/3.0) 9 pkts
RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 9 pkts
Explct route: 10.1.36.2

```

Record route: 10.1.13.1 <self> 10.1.36.2

Total 2 displayed, Up 2, Down 0

Sample Output 4

```

user@R1> show configuration protocols mpls
label-switched-path R1-to-R6 {
    to 10.0.0.6;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;

user@R6> show configuration protocols mpls
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;

```

```

inactive: interface so-0/0/2.0;
interface so-0/0/3.0;

user@R3> show configuration protocols mpls
interface fxp0.0 {
    disable;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0;

```

Meaning

Sample Outputs 1 and 2 from ingress router **R1** and egress router **R6**, respectively, show that the LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

Sample Output 3 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**.

Sample Output 4 shows the interfaces that were deactivated on the ingress, egress, and transit routers, forcing the LSP to take the intended path. If these interfaces were not deactivated, even though the configuration is now correct, the LSP would still traverse the network through the alternate path.

Verifying the IP and IGP Layers

Problem

Description: After you have configured the label-switched path (LSP), issued the **show mpls lsp extensive** command, and determined that there is an error, you might find that the error is not in the physical or data link layers. Continue investigating the problem at the IP and IGP layers of the network.

[Figure 128 on page 1567](#) illustrates the IP and IGP layers of the layered MPLS model.

Figure 128: IP and IGP Layers

BGP Layer	tracertoute <i>host-name</i> show bgp summary show configuration protocols bgp show route <i>destination-prefix</i> detail show route receive protocol bgp <i>neighbor-address</i>
MPLS Layer	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> tracertoute <i>address</i> ping mpls rsvp <i>lsp-name</i> detail
RSVP Layer	show rsvp session show rsvp neighbor show rsvp interface
↩ IGP and IP Layers Functioning ↪	
OSPF Layer show ospf neighbor show configuration protocols ospf show ospf interface	IS-IS Layer show isis adjacency show configuration protocols isis show isis interface
IP Layer show ospf neighbor extensive show interfaces terse	IP Layer show isis adjacency extensive show interfaces terse
Data Link Layer	show interfaces extensive "JUNOS Interfaces Operations Guide"
Physical Layer	show interfaces show interfaces terse ping <i>host</i>

g015545

Solution

At the IP and IGP layers, you must check the following:


- Interfaces have correct IP addressing, and the IGP neighbors or adjacencies are established.
- Open Shortest Path First (OSPF) or Intermediate System-to-Intermediate System (IS-IS) protocols are configured and running correctly.
 - If the OSPF protocol is configured, check the IP layer first, then the OSPF configuration, making sure that the protocol, interfaces, and traffic engineering are configured correctly.
 - If the IS-IS protocol is configured, it doesn't matter whether you check IS-IS or IP first because both protocols are independent of each other. Verify that IS-IS adjacencies are up, and that the interfaces and IS-IS protocol are configured correctly.

NOTE: The IS-IS protocol has traffic engineering enabled by default.

If the network is not functioning at the IP or IGP layers, the LSP does not work as configured.

Figure 129 on page 1568 illustrates the MPLS network used in this topic.

Figure 129: MPLS Network Broken at the IP and IGP Layers

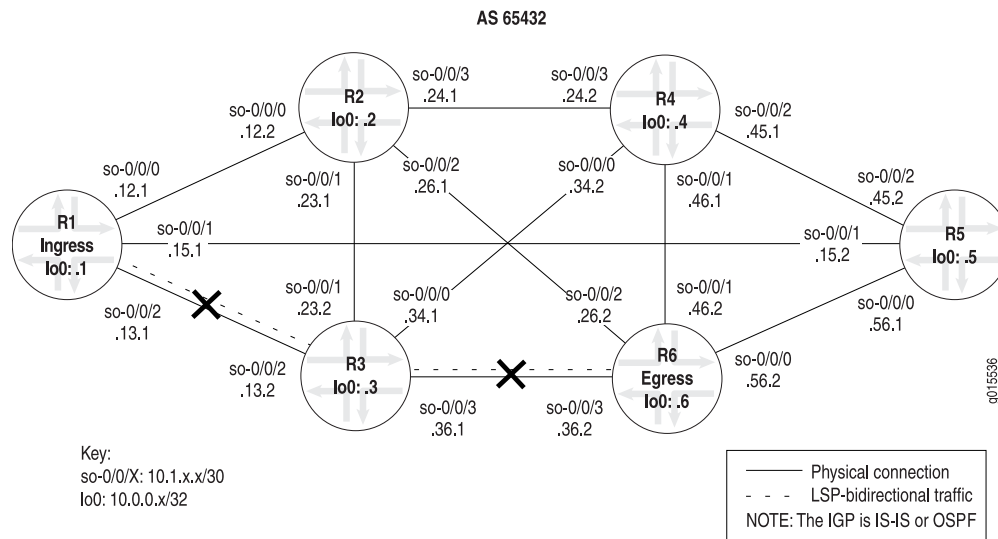

The network shown in [Figure 129 on page 1568](#) is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router **R1**, through transit router **R3**, to egress router **R6**. In addition, a reverse LSP is configured to run from **R6**, through **R3**, to **R1**, creating bidirectional traffic. The crosses in [Figure 129 on page 1568](#) indicate where the LSP is not working because of the following problems at the IP and IGP layer:

- An IP address is configured incorrectly on the ingress router (**R1**).
- The OSPF protocol is configured with a router ID (RID) but without the loopback (**lo0**) interface, and traffic engineering is missing from the transit router (**R3**).
- Levels in the IS-IS network are mismatched.


Verifying the IP Layer

Purpose

You can check the IP layer before or after you check the interior gateway protocol (IGP) layer, depending on whether you have OSPF or IS-IS configured as the IGP. If your MPLS network is configured with OSPF as the IGP, you must first verify the IP layer, checking that the interfaces have correct IP addressing and that the OSPF neighbors are established before you check the OSPF layer.

If you have IS-IS configured as the IGP in your MPLS network, you can verify either the IP layer or the IS-IS protocol layer first. The order in which you check the IP or IS-IS layer does not affect the results.

Figure 130: MPLS Network Broken at the IP Layer

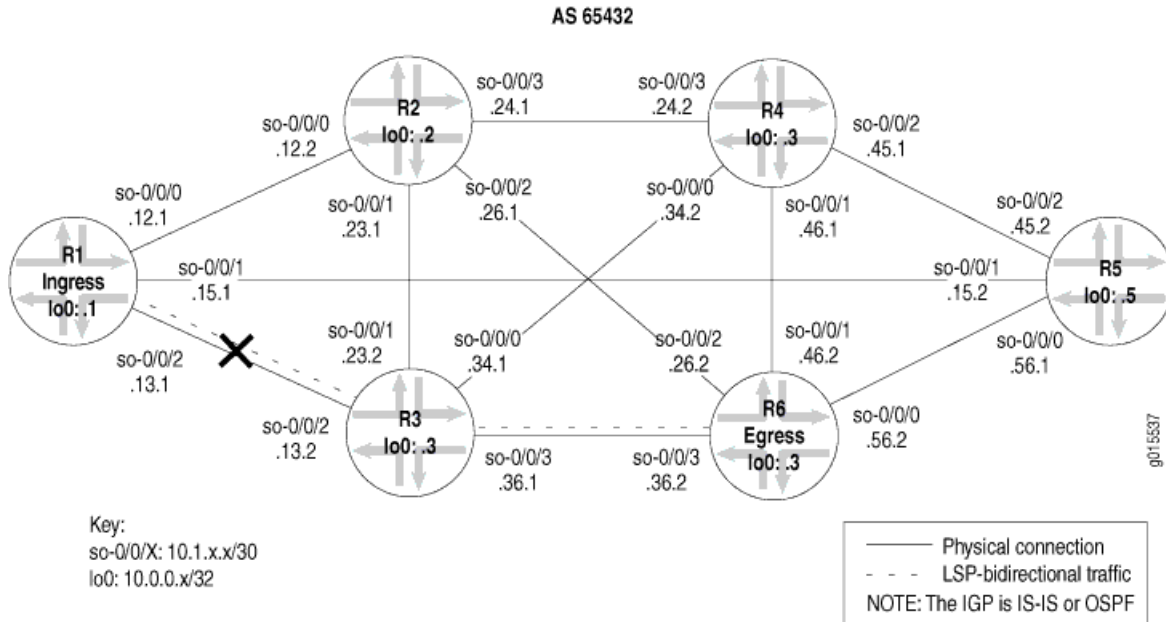

The cross in [Figure 130 on page 1569](#) indicates where the LSP is broken because of the incorrect configuration of an IP address on ingress router **R1**.

1. [Verify the LSP | 1569](#)
2. [Verify IP Addressing | 1570](#)
3. [Verify Neighbors or Adjacencies at the IP Layer | 1572](#)
4. [Take Appropriate Action | 1577](#)
5. [Verify the LSP Again | 1578](#)

Verify the LSP

Purpose

After configuring the LSP, you must verify that the LSP is up. LSPs can be ingress, transit, or egress. Use the **show mpls lsp** command for quick verification of the LSP state, with the **extensive** option (**show mpls lsp extensive**) as a follow-up if the LSP is down. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name name** or **show mpls lsp name name extensive**).

Action

To verify that the LSP is up, enter the following command from the ingress router:

```
user@host> show mpls lsp extensive
```

Sample Output 1

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
    ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 25 second(s).
  44 Oct 15 16:56:11 CSPF failed:  no route toward 10.0.0.6 [2685 times]
  43 Oct 14 19:07:09 Clear Call
  42 Oct 14 19:06:56 Deselected as active
  41 Oct 14 19:06:56 10.1.12.1: MPLS label allocation failure
  40 Oct 14 19:06:56 Down
  39 Oct 14 18:43:43 Selected as active path
  38 Oct 14 18:43:43 Record Route:  10.1.13.2 10.1.36.2
  37 Oct 14 18:43:43 Up
  [...Output truncated...]
  Created: Thu Oct 14 16:04:33 2004
Total 1 displayed, Up 0,  Down 1

Egress LSP: 0 sessions
Total 0 displayed , Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed , Up 0, Down 0

```

Meaning

The sample output from ingress router **R1** shows that an MPLS label allocation failure occurred and the Constrained Shortest Path First (CSPF) algorithm failed, resulting in no route to destination **10.0.0.6** on **R6**.

Verify IP Addressing

Purpose

When you investigate the IP layer, you verify that interfaces have correct IP addressing, and that OSPF neighbors or IS-IS adjacencies are established. In this example, an IP address is configured incorrectly on the ingress router (**R1**).

Action

To verify IP addressing, enter the following command from the ingress, transit, and egress routers:

```
user@host> show interfaces terse
```

Sample Output

```
user@R1> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
so-0/0/0	up	up			
so-0/0/0.0	up	up	inet	10.1.12.1/30	
			iso		
			mpls		
so-0/0/1	up	up			
so-0/0/1.0	up	up	inet	10.1.15.1/30	
			iso		
			mpls		
so-0/0/2	up	up			
so-0/0/2.0	up	up	inet	10.1.13.2 <<< Incorrect IP address	
			iso		
			mpls		
lo0	up	up			
lo0.0	up	up	inet	10.0.0.1	
			iso	49.0004.1000.0000.0001.00	

```
user@R3> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
so-0/0/0	up	up			
so-0/0/0.0	up	up	inet	10.1.34.1/30	
			iso		
			mpls		
so-0/0/1	up	up			
so-0/0/1.0	up	up	inet	10.1.23.2/30	
			iso		
			mpls		
so-0/0/2	up	up			
so-0/0/2.0	up	up	inet	10.1.13.2/30 <<< Identical to R1	
			iso		
			mpls		
so-0/0/3	up	up			
so-0/0/3.0	up	up	inet	10.1.36.1/30	
			iso		

```

mpls
lo0          up    up
lo0.0        up    up    inet  10.0.0.3
                                iso   49.0004.1000.0000.0003.00

user@R6> show interfaces terse
Interface          Admin Link Proto Local              Remote
so-0/0/0           up    up
so-0/0/0.0         up    up    inet  10.1.56.2/30
                                iso
                                mpls
so-0/0/1           up    up
so-0/0/1.0         up    up    inet  10.1.46.2/30
                                iso
                                mpls
so-0/0/2           up    up
so-0/0/2.0         up    up    inet  10.1.26.2/30
                                iso
                                mpls
so-0/0/3           up    up
so-0/0/3.0         up    up    inet  10.1.36.2/30
                                iso
                                mpls
lo0.0              up    up    inet  10.0.0.6
                                iso   49.0004.1000.0000.0006.00

```

Meaning

The sample output shows that the IP addresses for interface **so-0/0/2.0** on **R1** and interface **so-0/0/2.0** on **R3** are identical. Interface IP addresses within a network must be unique for the interface to be identified correctly.

Verify Neighbors or Adjacencies at the IP Layer

Purpose

If the IP addressing is configured incorrectly then the OSPF neighbors or IS-IS adjacencies both need to be checked to determine if one or both of them are established.

Action

To verify neighbors (OSPF) or adjacencies (IS-IS), enter the following commands from the ingress, transit, and egress routers:

```

user@host> show ospf neighbor extensive
user@host> show isis adjacency extensive

```

Sample Output 1

```

user@R1> show ospf neighbor extensive
Address          Interface          State      ID              Pri  Dead
10.1.12.2        so-0/0/0.0        Full      10.0.0.2        128  34
    area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
    Up 1d 04:45:20, adjacent 1d 04:45:20
10.1.15.2        so-0/0/1.0        Full      10.0.0.5        128  35
    area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
    Up 1d 04:45:20, adjacent 1d 04:45:10 <<< no adjacency with R3 so-0/0/2

user@R3> show ospf neighbor extensive
Address          Interface          State      ID              Pri  Dead
10.1.23.1        so-0/0/1.0        Full      10.0.0.2        128  35
    area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
    Up 1w2d 04:54:30, adjacent 1w2d 04:54:21
10.1.36.2        so-0/0/3.0        Full      10.0.0.6        128  39
    area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
    Up 1w2d 04:54:30, adjacent 1w2d 04:54:30 <<< no adjacency with R1 so-0/0/2

user@R6> show ospf neighbor extensive
Address          Interface          State      ID              Pri  Dead
10.1.56.1        so-0/0/0.0        Full      10.0.0.5        128  39
    area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
    Up 1d 02:59:35, adjacent 1d 02:59:35
10.1.26.1        so-0/0/2.0        Full      10.0.0.2        128  36
    area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
    Up 1w2d 04:57:30, adjacent 1w2d 04:57:30
10.1.36.1        so-0/0/3.0        Full      10.0.0.3        128  36
    area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
    Up 1w2d 04:56:11, adjacent 1w2d 04:56:11

```

Sample Output 2

```

user@R1> show isis adjacency extensive
R2
    Interface: so-0/0/0.0,  Level: 2, State: Up , Expires in 23 secs
    Priority: 0, Up/Down transitions: 1, Last transition: 05:57:16 ago
    Circuit type: 2,  Speaks: IP , IPv6

```

Topologies: Unicast
Restart capable: Yes

IP addresses: 10.1.12.2

Transition log:

When	State	Reason
Fri Oct 15 14:58:35	Up	Seenself

R5

Interface: so-0/0/1.0, **Level: 2, State: Up**, Expires in 26 secs
Priority: 0, Up/Down transitions: 1, Last transition: 05:56:52 ago
Circuit type: 2, **Speaks: IP** , IPv6
Topologies: Unicast
Restart capable: Yes

IP addresses: 10.1.15.2

Transition log:

When	State	Reason
Fri Oct 15 14:59:00	Up	Seenself

R3

Interface: so-0/0/2.0, Level: 2, State: Up, Expires in 26 secs
Priority: 0, Up/Down transitions: 1, Last transition: 05:56:51 ago
Circuit type: 2, **Speaks: IP** , IPv6
Topologies: Unicast
Restart capable: Yes

IP addresses: 10.1.13.2

Transition log:

When	State	Reason
Fri Oct 15 14:59:01	Up	Seenself

user@R3> **show isis adjacency extensive**

R4

Interface: so-0/0/0.0, **Level: 2, State: Up** , Expires in 25 secs
Priority: 0, Up/Down transitions: 1, Last transition: 1w1d 00:22:51 ago
Circuit type: 2, **Speaks: IP** , IPv6
Topologies: Unicast
Restart capable: Yes

IP addresses: 10.1.34.2

Transition log:

When	State	Reason
Thu Oct 28 15:13:12	Up	Seenself

R2

Interface: so-0/0/1.0, **Level: 2, State: Up** , Expires in 25 secs

Priority: 0, Up/Down transitions: 1, Last transition: 2w2d 18:02:48 ago
 Circuit type: 2, **Speaks: IP** , IPv6
 Topologies: Unicast
 Restart capable: Yes

IP addresses: 10.1.23.1

Transition log:

When	State	Reason
Tue Oct 19 21:33:15	Up	Seenself

R1

Interface: so-0/0/2.0, **Level: 2, State: Up** , Expires in 22 secs
 Priority: 0, Up/Down transitions: 1, Last transition: 2w2d 17:24:06 ago
 Circuit type: 2, **Speaks: IP** , IPv6
 Topologies: Unicast
 Restart capable: Yes

IP addresses: 10.1.13.1

Transition log:

When	State	Reason
Tue Oct 19 22:11:57	Up	Seenself

R6

Interface: so-0/0/3.0, **Level: 2, State: Up** , Expires in 21 secs
 Priority: 0, Up/Down transitions: 1, Last transition: 2w1d 00:07:00 ago
 Circuit type: 2, **Speaks: IP** , IPv6
 Topologies: Unicast
 Restart capable: Yes

IP addresses: 10.1.36.2

Transition log:

When	State	Reason
Thu Oct 21 15:29:03	Up	Seenself

user@R6> **show isis adjacency extensive**

R5

Interface: so-0/0/0.0, **Level: 2, State: Up** , Expires in 23 secs
 Priority: 0, Up/Down transitions: 1, Last transition: 1w2d 01:10:03 ago
 Circuit type: 2, **Speaks: IP** , IPv6
 Topologies: Unicast
 Restart capable: Yes

IP addresses: 10.1.56.1

Transition log:

When	State	Reason
Wed Oct 27 14:35:32	Up	Seenself

R4

```
Interface: so-0/0/1.0,  Level: 2, State: Up , Expires in 25 secs
Priority: 0, Up/Down transitions: 1, Last transition: 1w1d 00:26:50 ago
Circuit type: 2,  Speaks: IP , IPv6
Topologies: Unicast
Restart capable: Yes
  IP addresses: 10.1.46.1
Transition log:
When                State      Reason
Thu Oct 28 15:18:45  Up       Seenself
```

R2

```
Interface: so-0/0/2.0,  Level: 2, State: Up , Expires in 24 secs
Priority: 0, Up/Down transitions: 1, Last transition: 2w1d 00:11:40 ago
Circuit type: 2,  Speaks: IP , IPv6
Topologies: Unicast
Restart capable: Yes
  IP addresses: 10.1.26.1
Transition log:
When                State      Reason
Thu Oct 21 15:33:55  Up       Seenself
```

R3

```
Interface: so-0/0/3.0,  Level: 2, State: Up , Expires in 19 secs
Priority: 0, Up/Down transitions: 1, Last transition: 2w1d 00:11:40 ago
Circuit type: 2,  Speaks: IP , IPv6
Topologies: Unicast
Restart capable: Yes
  IP addresses: 10.1.36.1
Transition log:
When                State      Reason
Thu Oct 21 15:33:55  Up       Seenself
```

Meaning

Sample Output 1 from the ingress, transit, and egress routers shows that **R1** and **R3** are not established OSPF neighbors. Considering that the two interfaces **so-0/0/2.0** (**R1** and **R3**) are configured with identical IP addresses, you would expect this. The OSPF protocol routes IP packets based solely on the destination IP address contained in the IP packet header. Therefore, identical IP addresses in the autonomous system (AS) result in neighbors not establishing.

Sample Output 2 from the ingress, transit, and egress routers shows that **R1** and **R3** have established an IS-IS adjacency despite the identical IP addresses configured on interfaces **so-0/0/2.0** on **R1** and **R3**. The

IS-IS protocol behaves differently from the OSPF protocol because it does not rely on IP to establish an adjacency. However, if the LSP is not up, it is still useful to check the IP subnet addressing in case there is a mistake in that layer. Correcting the addressing error might bring the LSP back up.

Take Appropriate Action

Problem

Description: Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, the IP address of an interface on transit router **R2** is incorrectly configured.

Solution

To correct the error in this example, enter the following commands:

```
[edit interfaces so-0/0/2]
user@R1# show
user@R1# rename unit 0 family inet address 10.1.13.2/30 to address 10.1.13.1/30
user@R1# show
user@R1# commit
```

Sample Output

```
[edit interfaces so-0/0/2]
user@R1# show
unit 0 {
    family inet {
        address 10.1.13.2/30; <<< Incorrect IP address
    }
    family iso;
    family mpls;
}

[edit interfaces so-0/0/2]
user@R1# rename unit 0 family inet address 10.1.13.2/30 to address 10.1.13.1/30

[edit interfaces so-0/0/2]
user@R1# show
unit 0 {
    family inet {
        address 10.1.13.1/30; <<< Correct IP address.
    }
    family iso;
    family mpls;
```

```

}

[edit interfaces so-0/0/2]
user@R1# commit
commit complete

```

Meaning

The sample output shows that interface **so-0/0/2** on ingress router **R1** is now configured with the correct IP address. This correction results in unique subnet IP addresses for all interfaces in the MPLS network in [“MPLS Network Broken at the IP and IGP Layers” on page 1568](#), and the possibility that the LSP might come up.

Verify the LSP Again

Purpose

After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the OSPF protocol has been resolved.

Action

To verify the LSP again, enter the following command on the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

Sample Output 1

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1 , LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    10.1.13.2 10.1.36.2

```

```

54 Oct 15 21:28:16 Selected as active path
53 Oct 15 21:28:16 Record Route:  10.1.13.2 10.1.36.2
52 Oct 15 21:28:16 Up
51 Oct 15 21:28:16 10.1.15.1: MPLS label allocation failure[2 times]
50 Oct 15 21:28:11 CSPF: computation result accepted
49 Oct 15 21:27:42 10.1.15.1: MPLS label allocation failure
48 Oct 15 21:27:42 CSPF: computation result accepted
47 Oct 15 21:27:31 10.1.15.1: MPLS label allocation failure[4 times]
46 Oct 15 21:27:13 Originate Call
45 Oct 15 21:27:13 CSPF: computation result accepted
[...Output truncated...]
Created: Thu Oct 14 16:04:34 2004
Total 1 displayed,  Up 1 , Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6,  LSPstate: Up , ActiveRoute: 0
  LSPname: R6-to-R1 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left:  149, Since: Fri Oct 15 21:28:13 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 13 receiver 39024 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 10 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed,  Up 1 , Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Sample Output 2

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Egress LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

10.0.0.1

From: 10.0.0.6, **LSPstate: Up** , ActiveRoute: 1

LSPname: R6-to-R1 , LSPpath: Primary

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: 3

Resv style: 1 FF, Label in: 100336, Label out: 3

Time left: 156, Since: Fri Oct 15 21:15:47 2004

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

Port number: sender 13 receiver 39024 protocol 0

PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 11 pkts

Adspec: received MTU 1500 sent MTU 1500

PATH sentto: 10.1.13.1 (so-0/0/2.0) 11 pkts

RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 11 pkts

Explct route: 10.1.13.1

Record route: 10.1.36.2 <self> 10.1.13.1

10.0.0.6

From: 10.0.0.1, **LSPstate: Up** , ActiveRoute: 1

LSPname: R1-to-R6 , LSPpath: Primary

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: 3

Resv style: 1 FF, Label in: 100352, Label out: 3

Time left: 159, Since: Fri Oct 15 21:15:50 2004

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

Port number: sender 5 receiver 47901 protocol 0

PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 11 pkts

Adspec: received MTU 1500 sent MTU 1500

PATH sentto: 10.1.36.2 (so-0/0/3.0) 11 pkts

RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 11 pkts

Explct route: 10.1.36.2

Record route: 10.1.13.1 <self> 10.1.36.2

Total 2 displayed, **Up 2** , Down 0

Sample Output 3

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Up , ActiveRoute: 1, LSPname: R6-to-R1
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.36.1 S 10.1.13.1 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.36.1 10.1.13.1
    187 Oct 15 21:20:05 Selected as active path
    186 Oct 15 21:20:05 Record Route: 10.1.36.1 10.1.13.1
    185 Oct 15 21:20:05 Up
    184 Oct 15 21:20:05 Clear Call
    183 Oct 15 21:20:05 CSPF: computation result accepted
    182 Oct 15 21:20:05 CSPF: link down/deleted
10.1.13.2(R3.00/10.0.0.3)->10.1.13.2(R1.00/10.0.0.1)
  [...Output truncated...]
  Created: Tue Aug 17 12:18:33 2004
Total 1 displayed, Up 1 , Down 0

Egress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: R1-to-R6 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 144, Since: Fri Oct 15 21:20:08 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 5 receiver 47901 protocol 0
  PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 11 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.13.1 10.1.36.1 <self>

```

```
Total 1 displayed,  Up 1 , Down 0
```

```
Transit LSP: 0 sessions
```

```
Total 0 displayed, Up 0, Down 0
```

Meaning

Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** has an active route to **R6** and the state is up. The output shows that the egress LSP session **R6-to-R1** received and sent a recovery label.

Sample Output 2 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**. Both LSPs are up.

Sample Output 3 from egress router **R6** shows that the LSP is up and the active route is the primary route. The LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

Verify the LSP Again

Purpose

After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the IS-IS protocol has been resolved.

Action

To verify that the LSP is up and traversing the network as expected, enter the following command from the ingress, egress, and transit routers:

```
user@host> show mpls lsp extensive
```

Sample Output

```
user@R1> show mpls lsp extensive
```

```
Ingress LSP: 1 sessions
```

```
10.0.0.6
```

```
From: 10.0.0.1, State: Up , ActiveRoute: 1, LSPname: R1-to-R6
```

```
ActivePath: (primary)
```

```
LoadBalance: Random
```

```
Encoding type: Packet, Switching type: Packet, GPID: IPv4
```

```

*Primary                               State: Up
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    10.1.13.2 10.1.36.2
  4 Oct 19 21:22:54 Selected as active path
  3 Oct 19 21:22:53 Record Route:  10.1.13.2 10.1.36.2
  2 Oct 19 21:22:53 Up
  1 Oct 19 21:22:53 Originate Call
  Created: Tue Oct 19 21:22:53 2004
Total 1 displayed,  Up 1 , Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6,  LSPstate: Up , ActiveRoute: 0
    LSPname: R6-to-R1 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left:  117, Since: Tue Oct 19 21:17:42 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 39064 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 10 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed,  Up 1 , Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP:  2 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1

```

```

LSPname: R6-to-R1 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100416, Label out: 3
Time left: 139, Since: Tue Oct 19 21:05:11 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 2 receiver 39064 protocol 0
PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 11 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.13.1 (so-0/0/2.0) 11 pkts
RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 11 pkts
Explct route: 10.1.13.1
Record route: 10.1.36.2 <self> 10.1.13.1

10.0.0.6
From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
LSPname: R1-to-R6 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100448, Label out: 3
Time left: 135, Since: Tue Oct 19 21:10:22 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 47951 protocol 0
PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 4 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.36.2 (so-0/0/3.0) 4 pkts
RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 4 pkts
Record route: 10.1.13.1 <self> 10.1.36.2
Total 2 displayed, Up 2 , Down 0

user@R6> run show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1
ActivePath: (primary)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
10.1.36.1 S 10.1.13.1 S
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

10.1.36.1 10.1.13.1

```



```

19 Oct 19 21:09:52 Selected as active path
18 Oct 19 21:09:52 Record Route: 10.1.36.1 10.1.13.1
17 Oct 19 21:09:52 Up
16 Oct 19 21:09:52 Originate Call
15 Oct 19 21:09:52 CSPF: computation result accepted
Created: Tue Oct 19 18:30:09 2004
Total 1 displayed, Up 1 , Down 0

```

Egress LSP: 1 sessions

```

10.0.0.6
From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
LSPname: R1-to-R6 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 120, Since: Tue Oct 19 21:15:03 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 47951 protocol 0
PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 4 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1 , Down 0

```

```

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The sample output from ingress router **R1** and egress router **R6** shows that the LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**. In addition, the sample output from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6**, and the other from **R6** to **R1**.

Checking the RSVP Layer

Purpose

After you have configured the label-switched path (LSP), issued the **show mpls lsp extensive** command, and determined that there is an error, you might find that the error is not in the physical, data link, or Internet Protocol (IP) and interior gateway protocol (IGP) layers. Continue investigating the problem at the RSVP layer of the network.

Figure 131 on page 1586 illustrates the RSVP layer of the layered MPLS model.

Figure 131: Checking the RSVP Layer

BGP Layer	traceroute <i>host-name</i> show bgp summary show configuration protocols bgp show route <i>destination-prefix</i> detail show route receive protocol bgp <i>neighbor-address</i>
MPLS Layer	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> traceroute <i>address</i> ping mpls rsvp <i>lsp-name</i> detail
RSVP Layer	show rsvp session show rsvp neighbor show rsvp interface
↙ IGP and IP Layers Functioning ↘	
OSPF Layer	IS-IS Layer
show ospf neighbor show configuration protocols ospf show ospf interface	show isis adjacency show configuration protocols isis show isis interface
IP Layer	IP Layer
show ospf neighbor extensive show interfaces terse	show isis adjacency extensive show interfaces terse
Data Link Layer	show interfaces extensive <i>"JUNOS Interfaces Operations Guide"</i>
Physical Layer	show interfaces show interfaces terse ping <i>host</i>


g015546

With this layer, you check that dynamic RSVP signaling is occurring as expected, neighbors are connected, and interfaces are configured correctly for RSVP. Check the ingress, egress, and transit routers.

If the network is not functioning at this layer, the LSP does not work as configured.

Figure 132 on page 1587 illustrates the MPLS network used in this topic.

Figure 132: MPLS Network Broken at the RSVP Layer

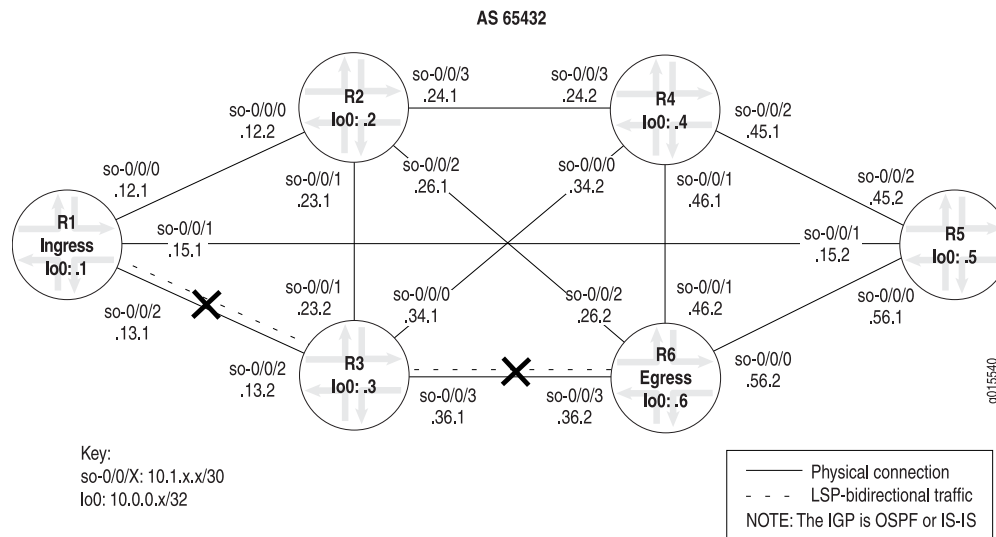

The network shown in [Figure 132 on page 1587](#) is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router **R1**, through transit router **R3**, to egress router **R6**. In addition, a reverse LSP is configured to run from **R6** through **R3** to **R1**, creating bidirectional traffic.

However, in this example, the LSP is down without a path in either direction, from **R1** to **R6** or from **R6** to **R1**.

The crosses shown in [Figure 132 on page 1587](#) indicate where the LSP is broken. Some possible reasons the LSP is broken might include that dynamic RSVP signaling is not occurring as expected, neighbors are not connected, or interfaces are incorrectly configured for RSVP.

In the network in [Figure 132 on page 1587](#), a configuration error on transit router **R3** prevents the LSP from traversing the network as expected.

To check the RSVP layer, follow these steps:

1. [Verify the LSP | 1587](#)
2. [Verify RSVP Sessions | 1589](#)
3. [Verify RSVP Neighbors | 1592](#)
4. [Verify RSVP Interfaces | 1593](#)
5. [Verify the RSVP Protocol Configuration | 1595](#)
6. [Take Appropriate Action | 1596](#)
7. [Verify the LSP Again | 1598](#)

Verify the LSP

Purpose

Typically, you use the **show mpls lsp extensive** command to verify the LSP. However for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

Action

To determine whether the LSP is up, enter the following command from the ingress router:

```
user@host> show mpls lsp extensive
```

Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0,  LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    2 Oct 27 15:06:05 10.1.13.2:  No Route toward dest [4 times]
    1 Oct 27 15:05:56 Originate Call
  Created: Wed Oct 27 15:05:55 2004
Total 1 displayed, Up 0,  Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
```

```

Total 0 displayed, Up 0, Down 0

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Dn, ActiveRoute: 0,  LSPname: R6-to-R1
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 22 second(s).
    1 Oct 27 14:59:12  CSPF failed: no route toward 10.0.0.1 [4 times]
  Created: Wed Oct 27 14:57:44 2004
Total 1 displayed, Up 0,  Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The sample output shows that the LSP is down in both directions, from **R1** to **R6**, and from **R6** to **R1**. The output from **R1** shows that **R1** is using a no-cspf LSP since it tried to originate the call without being able to reach the destination. The output from **R6** shows that the Constrained Shortest Path First (CSPF) algorithm failed, resulting in no route to destination **10.0.0.1**.

Verify RSVP Sessions

Purpose

When an RSVP session is successfully created, the LSP is set up along the paths created by the RSVP session. If the RSVP session is unsuccessful, the LSP does not work as configured.

Action

To verify currently active RSVP sessions, enter the following command from the ingress, transit, and egress routers:

```
user@host> show rsvp session
```

Sample Output 1

```

user@R1> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R6> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Sample Output 2

```

user@R1> show rsvp session
Ingress RSVP: 1 sessions

```

To	From	State	Rt	Style	Labelin	Labelout	LSPname
10.0.0.6	10.0.0.1	Up	1	1 FF	-	100768	R1-to-R6

```

Total 1 displayed, Up 1 , Down 0

```

```

Egress RSVP: 1 sessions
To           From           State Rt Style Labelin Labelout LSPname
10.0.0.1      10.0.0.6      Up    0 1 FF      3      -   R6-to-R1
Total 1 displayed, Up 1 , Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 2 sessions
To           From           State Rt Style Labelin Labelout LSPname
10.0.0.1      10.0.0.6      Up    1 1 FF   100784      3   R6-to-R1
10.0.0.6      10.0.0.1      Up    1 1 FF   100768      3   R1-to-R6
Total 2 displayed, Up 2 , Down 0

user@R6> show rsvp session
Ingress RSVP: 1 sessions
To           From           State Rt Style Labelin Labelout LSPname
10.0.0.1      10.0.0.6      Up    1 1 FF      -   100784   R6-to-R1
Total 1 displayed, Up 1 , Down 0

Egress RSVP: 1 sessions
To           From           State Rt Style Labelin Labelout LSPname
10.0.0.6      10.0.0.1      Up    0 1 FF      3      -   R1-to-R6
Total 1 displayed, Up 1 , Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

Sample Output 1 from all routers shows that no RSVP sessions were successfully created, even though the LSP **R6-to-R1** is configured.

In contrast to Sample Output 1 and to illustrate correct output, Sample Output 2 shows the output from the ingress, transit, and egress routers when the RSVP configuration is correct, and the LSP is traversing

the network as configured. **R1** and **R6** both show an ingress and egress RSVP session, with the LSP **R1-to-R6**, and the reverse LSP **R6-to-R1**. Transit router **R3** shows two transit RSVP sessions.

Verify RSVP Neighbors

Purpose

Display a list of RSVP neighbors that were learned dynamically when exchanging RSVP packets. Once a neighbor is learned, it is never removed from the list of RSVP neighbors unless the RSVP configuration is removed from the router.

Action

To verify RSVP neighbors, enter the following command from the ingress, transit, and egress routers:

```
user@host> show rsvp neighbor
```

Sample Output 1

```
user@R1> show rsvp neighbor
RSVP neighbor: 1 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.13.2         10  1/0      9:22          9    64/64    32

user@R3> show rsvp neighbor
RSVP neighbor: 2 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.13.1         0  1/0     28:20          9   190/190   41
10.1.36.2        16:50 1/1     15:37          9   105/78   38

user@R6> show rsvp neighbor
RSVP neighbor: 1 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.36.1        17:30 1/1     16:15          9   104/78   39
```

Sample Output 2

```
user@R3> show rsvp neighbor
RSVP neighbor: 2 learned
```


Address	Idle	Up/Dn	LastChange	HelloInt	HelloTx/Rx	MsgRcvd
10.1.13.1	5	1/0	9:14	9	63/63	33
10.1.36.2	5	1/0	9:05	9	62/62	32

```
user@R6> show rsvp neighbor
```

```
Rsvp neighbor: 1 learned
```

Address	Idle	Up/Dn	LastChange	HelloInt	HelloTx/Rx	MsgRcvd
10.1.36.1	5	1/0	8:54	9	61/61	32

Meaning

Sample Output 1 shows that **R1** and **R6** have one RSVP neighbor each, **R3**. However, the values in the **Up/Dn** field are different. **R1** has a value of **1/0** and **R6** has a value of **1/1**, indicating that **R1** is an active neighbor with **R3**, but **R6** is not. When the up count is one more than the down count, the neighbor is active; if the values are equal, the neighbor is down. The values for **R6** are equal, **1/1**, indicating that the neighbor **R3** is down.

Transit router **R3** knows about two neighbors, **R1** and **R6**. The **Up/Dn** field indicates that **R1** is an active neighbor and **R6** is down. At this point it is not possible to determine if the problem resides with **R3** or **R6**, because both neighbors are not active.

In contrast to Sample Output 1 and to illustrate correct output, Sample Output 2 shows the correct neighbor relationship between transit router **R3** and egress router **R6**. The **Up/Dn** field shows the up count to be one more than the down count, **1/0**, indicating that the neighbors are active.

Verify RSVP Interfaces

Purpose

Display the status of each interface on which RSVP is enabled to determine where the configuration error occurred.

Action

To verify the status of RSVP interfaces, enter the following command from the ingress, transit, and egress routers:

```
user@host> show rsvp interface
```

Sample Output 1

```
user@R1> show rsvp interface
```

```
RSVP interface: 3 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R3> show rsvp interface
```

```
RSVP interface: 3 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
<<< Missing interface so-0/0/3.0
```

```
user@R6> show rsvp interface
```

```
RSVP interface: 4 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

Sample Output 2

```
user@R1> show rsvp interface
```

```
RSVP interface: 3 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
so-0/0/2.0 Up 1 100% 155.52Mbps 155.52Mbps 0bps 0bps
```

```
user@R3> show rsvp interface
```

```
Rsvp interface: 4 active
```

Interface	State	Active resv	Subscription	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R6> show rsvp interface
```

```
Rsvp interface: 4 active
```

Interface	State	Active resv	Subscription	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

Meaning

Sample Output 1 shows that even though each router has interfaces that are up and have RSVP active, there are no reservations (**Active resv**) on any of the routers. In this example, we would expect at least one reservation on the ingress and egress routers, and two reservations on the transit router.

In addition, interface **so-0/0/3** on transit router **R3** is not included in the configuration. The inclusion of this interface is critical to the success of the LSP.

In contrast to Sample Output 1 and to illustrate correct output, Sample Output 2 shows the relevant interfaces with active reservations.

Verify the RSVP Protocol Configuration

Purpose

After you have checked RSVP sessions, interfaces, neighbors, and determined that there might be a configuration error, verify the RSVP protocol configuration.

Action

To verify the RSVP configuration, enter the following command from the ingress, transit, and egress routers:

```
user@host> show configuration protocols rsvp
```

Sample Output

```
user@R1> show configuration protocols rsvp
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}

user@R3> show configuration protocols rsvp
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0; <<< Missing interface so-0/0/3.0
interface fxp0.0 {
    disable;
}

user@R6> show configuration protocols rsvp
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0;
interface fxp0.0 {
    disable;
}
```

Meaning

The sample output shows that **R3** has interface **so-0/0/3.0** missing from the RSVP protocol configuration. This interface is critical for the correct functioning of the LSP.

Take Appropriate Action

Problem

Description: Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, an interface is missing from the configuration of router R3.

Solution

To correct the error in this example, follow these steps:

1. Include the missing interface in the configuration of transit router R3:

```
user@R3> edit
user@R3# edit protocols rsvp
[edit protocols rsvp]
user@R3# show
user@R3# set interface so-0/0/3.0
```

2. Verify and commit the configuration:

```
[edit protocols rsvp]
user@R3# show
user@R3# commit
```

Sample Output

```
user@R3> edit
Entering configuration mode

[edit]
user@R3# edit protocols rsvp

[edit protocols rsvp]
user@R3# show
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0; <<< Missing interface so-0/0/3.0
interface fxp0.0 {
    disable;
}
[edit protocols rsvp]
user@R3# set interface so-0/0/3.0

[edit protocols rsvp]
user@R3# show
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
```

```

}
interface so-0/0/3.0; <<< Interface now included in the configuration

[edit protocols rsvp]
user@R3# commit
commit complete

```

Meaning

The sample output shows that the missing interface **so-0/0/3.0** on transit router **R3** is now correctly included at the **[edit protocols rsvp]** hierarchy level. This results in the possibility that the LSP might come up.

Verify the LSP Again

Purpose

After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the MPLS layer has been resolved.

Action

To verify the LSP again, enter the following command on the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

Sample Output 1

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
      5 Oct 27 15:28:57 Selected as active path
      4 Oct 27 15:28:57 Record Route: 10.1.13.2 10.1.36.2

```

```

    3 Oct 27 15:28:57 Up
    2 Oct 27 15:28:44 10.1.13.2: No Route toward dest[35 times]
    1 Oct 27 15:05:56 Originate Call
Created: Wed Oct 27 15:05:56 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 136, Since: Wed Oct 27 15:29:20 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39092 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 6 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Sample Output 2

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

```

```

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100672, Label out: 3
  Time left: 152, Since: Wed Oct 27 15:16:39 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39092 protocol 0
  PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 7 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.1.13.1 (so-0/0/2.0) 7 pkts
  RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 7 pkts
  Explct route: 10.1.13.1
  Record route: 10.1.36.2 <self> 10.1.13.1

```

```

10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
  LSPname: R1-to-R6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100656, Label out: 3
  Time left: 129, Since: Wed Oct 27 14:53:14 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 47977 protocol 0
  PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 40 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.1.36.2 (so-0/0/3.0) 7 pkts
  RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 7 pkts
  Record route: 10.1.13.1 <self> 10.1.36.2
Total 2 displayed, Up 2, Down 0

```

Sample Output 3

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Up, ActiveRoute: 1 , LSPname: R6-to-R1

```



```

ActivePath: (primary)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.36.1 S 10.1.13.1 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.1.36.1 10.1.13.1
        6 Oct 27 15:22:06 Selected as active path
        5 Oct 27 15:22:06 Record Route: 10.1.36.1 10.1.13.1
        4 Oct 27 15:22:06 Up
        3 Oct 27 15:22:06 Originate Call
        2 Oct 27 15:22:06 CSPF: computation result accepted
        1 Oct 27 15:21:36 CSPF failed: no route toward 10.0.0.1[50 times]
    Created: Wed Oct 27 14:57:45 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.6
    From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
    LSPname: R1-to-R6, LSPpath: Primary
    Suggested label received: -, Suggested label sent: -
    Recovery label received: -, Recovery label sent: -
    Resv style: 1 FF, Label in: 3, Label out: -
    Time left: 119, Since: Wed Oct 27 15:21:43 2004
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Port number: sender 1 receiver 47977 protocol 0
    PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 7 pkts
    Adspec: received MTU 1500
    PATH sentto: localclient
    RESV rcvfrom: localclient
    Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** has an active route to **R6** and the state is up.

Sample Output 2 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**. Both LSPs are up.

Sample Output 3 from egress router **R6** shows that the LSP is up and the active route is the primary route. The LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

Determining LSP Statistics

Purpose

Display detailed information about RSVP objects to assist the diagnosis of an LSP problem.

Action

To verify RSVP objects, enter the following Junos OS CLI operational mode command:

```
user@host> show rsvp session detail
```

Sample Output

```
user@R1> show rsvp session detail
Ingress RSVP: 1 sessions

10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
  LSPname:  R1-to-R6 , LSPpath:  Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100064
  Resv style: 1 FF, Label in: -, Label out: 100064
  Time left:    -, Since: Tue Aug 17 12:22:52 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 12 receiver 44251 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  PATH sentto: 10.1.13.2 (so-0/0/2.0) 182 pkts
  RESV rcvfrom: 10.1.13.2 (so-0/0/2.0) 159 pkts
  Explct route: 10.1.13.2 10.1.36.2
  Record route: <self> 10.1.13.2 10.1.36.2
Total 1 displayed, Up 1, Down 0

Egress RSVP: 1 sessions
```

10.0.0.1

```

From: 10.0.0.6 , LSPstate: Up, ActiveRoute: 0
LSPname: R6-to-R1, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 135, Since: Tue Aug 17 12:23:14 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 39024 protocol 0
PATH rcvfrom: 10.1.15.2 (so-0/0/1.0) 158 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.56.2 10.1.15.2 <self>
Total 1 displayed, Up 1, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The sample output shows that there is one ingress and one egress RSVP session. The ingress session has a source address of **10.0.0.1 (R1)**, and the session is up, with one active route. The LSP name is **R1-to-R6** and it is the primary path for the LSP.

The recovery label (**100064**) is sent by a graceful restart router to its neighbor to recover a forwarding state. It is probably the old label that the router advertised before it went down.

This session is using the fixed filter (**FF**) reservation style (**Resv style**). Since this is an ingress router, there is no inbound label. The outbound label (provided by the next downstream router) is **100064**.

The **Time Left** field provides the number of seconds remaining in the RSVP session, and the **Tspec** object provides information about the controlled load rate (**rate**) and maximum burst size (**peak**), an infinite value (**Infbps**) for the guaranteed delivery option, and the indication that packets smaller than 20 bytes are treated as 20 bytes, while packets larger than 1500 bytes are treated as 1500 bytes.

The port number is the IPv4 tunnel ID, while the sender/receiver port number is the LSP ID. The IPv4 tunnel ID is unique for the life of the LSP, while the sender/receiver LSP ID can change, for example, with an SE style reservation.

The **PATH rcvfrom** field includes the source of the path message. Since this is the ingress router, the local client originated the path message.

The **PATH sentto** field includes the path message destination (**10.1.13.2**) and outgoing interface (**so-0/0/2.0**). The **RESV rcvfrom** field includes both the source of the Resv message received (**10.1.13.2**) and the incoming interface (**so-0/0/2.0**).

The RSVP explicit route and the route record values are identical: **10.1.13.2** and **10.1.36.2**. In most cases, the explicit route and the record route values are identical. Differences indicate that some path rerouting has occurred, typically during Fast-Reroute.

The **Total** fields indicate the total number of ingress, egress, and transit RSVP sessions, with the total being equal to the sum of the up and down sessions. In this example, there is one ingress session, one egress session, and no transit RSVP sessions.


Verifying LSP Use in Your Network

Purpose

When you verify the valid use of an LSP on the ingress and transit routers in your network, you can determine if there is a problem with Multiprotocol Label Switching (MPLS) in your network.

Figure 133 on page 1604 describes the example network used in this topic.

Figure 133: MPLS Topology for Verifying LSP Use

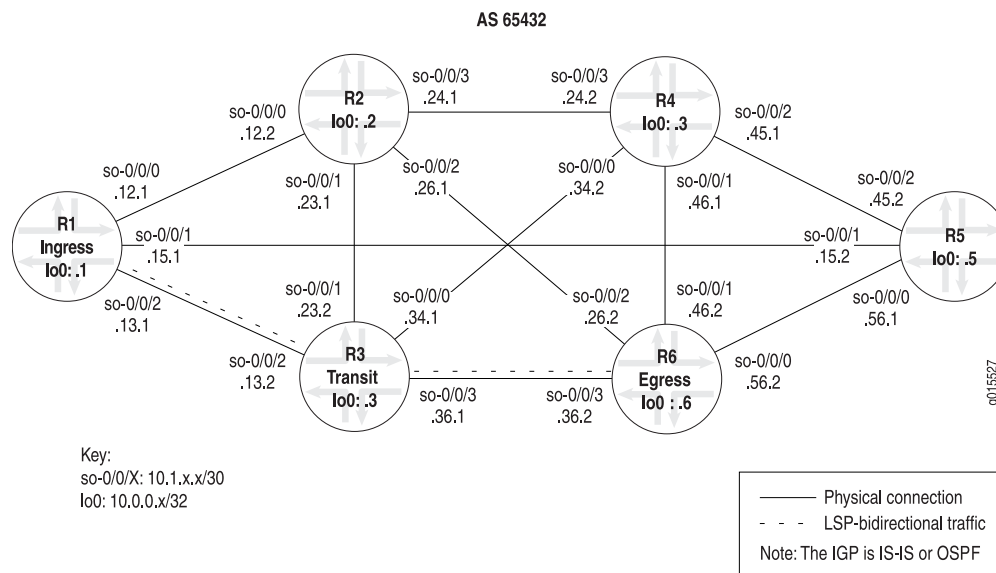

The MPLS network in Figure 133 on page 1604 illustrates a router-only network with SONET interfaces that consist of the following components:

- A full-mesh interior Border Gateway Protocol (IBGP) topology, using AS 65432
- MPLS and Resource Reservation Protocol (RSVP) enabled on all routers
- A **send-statics** policy on routers R1 and R6 that allows a new route to be advertised into the network
- An LSP between routers R1 and R6

The network shown in [Figure 133 on page 1604](#) is a Border Gateway Protocol (BGP) full-mesh network. Since route reflectors and confederations are not used to propagate BGP learned routes, each router must have a BGP session with every other router running BGP.

To verify LSP use in your network, follow these steps:

1. [Verifying an LSP on the Ingress Router | 1605](#)
2. [Verifying an LSP on a Transit Router | 1606](#)

Verifying an LSP on the Ingress Router

Purpose

You can verify the availability of an LSP when it is up by examining the **inet.3** routing table on the ingress router. The **inet.3** routing table contains the host address of each LSP's egress router. This routing table is used on ingress routers to route BGP packets to the destination egress router. BGP uses the **inet.3** routing table on the ingress router to help resolve next-hop addresses.

Action

To verify an LSP on an ingress router, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show route table inet.3
```

Sample Output

```
user@R1> show route table inet.3
```

```
inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.6/32          *[RSVP/7] 4w0d 22:40:57, metric 20
                    > via so-0/0/2.0, label-switched-path R1-to-R6
```

Meaning

The sample output shows the **inet.3** routing table. By default, only BGP and MPLS virtual private networks (VPNs) can use the **inet.3** route table to resolve next-hop information. One destination is listed in the route table, **10.0.0.6**. This destination (**10.0.0.6**) is signaled by RSVP, and is the current active path, as indicated by the asterisk (*). The protocol preference for this route is **7**, and the metric associated with it is **20**. The label-switched path is **R1-to-R6**, through interface **so-0/0/2.0**, which is the physical next-hop transit interface.

Typically, the penultimate router in the LSP either pops the packet's label or changes the label to a value of 0. If the penultimate router pops the top label and an IPv4 packet is underneath, the egress router routes the IPv4 packet, consulting the IP routing table **inet.0** to determine how to forward the packet. If another type of label (such as one created by Label Distribution Protocol (LDP) tunneling or VPNs, but not IPv4) is underneath the top label, the egress router does not examine the **inet.0** routing table. Instead, it examines the **mpls.0** routing table for forwarding decisions.

If the penultimate router changes the packet's label to a value of 0, the egress router strips off the 0 label, indicating that an IPv4 packet follows. The packet is examined by the **inet.0** routing table for forwarding decisions.

When a transit or egress router receives an MPLS packet, information in the MPLS forwarding table is used to determine the next transit router in the LSP or whether this router is the egress router.

When BGP resolves a next-hop prefix, it examines both the **inet.0** and **inet.3** routing tables, seeking the next hop with the lowest preference; for example, RSVP preference 7 is preferred over OSPF preference 10. The RSVP signaled LSP is used to reach the BGP next hop. This is the default when the BGP next hop equals the LSP egress address. Once the BGP next hop is resolved through an LSP, the BGP traffic uses the LSP to forward BGP transit traffic.

Verifying an LSP on a Transit Router

Purpose

You can verify the availability of an LSP when it is up by examining the **mpls.0** routing table on a transit router. MPLS maintains the **mpls.0** routing table, which contains a list of the next label-switched router in each LSP. This routing table is used on transit routers to route packets to the next router along an LSP.

Action

To verify an LSP on a transit router, enter the following Junos OS CLI operational mode command:

```
user@host> show route table mpls.0
```

Sample Output

```
user@R3> show route table mpls.0
```

```
mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                * [MPLS/0] 7w3d 22:20:56, metric 1
                  Receive
1                * [MPLS/0] 7w3d 22:20:56, metric 1
```

```

                Receive
2              * [MPLS/0] 7w3d 22:20:56, metric 1
                Receive
100064        * [RSVP/7] 2w1d 04:17:36, metric 1
              > via so-0/0/3.0, label-switched-path R1-to-R6
100064 (S=0)  * [RSVP/7] 2w1d 04:17:36, metric 1
              > via so-0/0/3.0, label-switched-path R1-to-R6

```

Meaning

The sample output from transit router **R3** shows route entries in the form of MPLS label entries, indicating that there is only one active route, even though there are five active entries.

The first three MPLS labels are reserved MPLS labels defined in RFC 3032. Packets received with these label values are sent to the Routing Engine for processing. Label 0 is the IPv4 explicit null label. Label 1 is the MPLS equivalent of the IP Router Alert label and Label 2 is the IPv6 explicit null label.

The two entries with the **100064** label are for the same LSP, **R1-to-R6**. There are two entries because the stack values in the MPLS header may be different. The second entry, **100064 (S=0)**, indicates that the stack depth is not 1 and additional label values are included in the packet. In contrast, the first entry of **100064** has an inferred S=1 which indicates a stack depth of 1 and makes it the last label in the packet. The dual entry indicates that this is the penultimate router. For more information on MPLS label stacking, see RFC 3032, *MPLS Label Stack Encoding*.

The incoming label is the MPLS header of the MPLS packet, and is assigned by RSVP to the upstream neighbor. Juniper Networks routers dynamically assign labels for RSVP traffic-engineered LSPs in the range from 100,000 through 1,048,575.

The router assigns labels starting at label 100,000, in increments of 16. The sequence of label assignments is 100,000, 100,016, 100,032, 100,048, and so on. At the end of the assigned labels, the label numbers start over at 100001, incrementing in units of 16. Juniper Networks reserves labels for various purposes. [Table 36 on page 1607](#) lists the various label range allocations for incoming labels.

Table 36: MPLS Label Range Allocations

Incoming Label	Status
0 through 15	Reserved by IETF
16 through 1023	Reserved for static LSP assignment
1024 through 9999	Reserved for internal use (for example, CCC labels)
10,000 through 99,999	Reserved for static LSP assignment

Table 36: MPLS Label Range Allocations (*continued*)

Incoming Label	Status
100,000 through 1,048,575	Reserved for dynamic label assignment

Verify That Load Balancing Is Working

Purpose

After configuring load balancing, check that traffic is load-balanced equally across paths. In this section, the command output reflects the load-balancing configuration of the example network shown in [“Load-Balancing Network Topology” on page 166](#). The **clear** commands are used to reset LSP and interface counters to zero so that the values reflect the operation of the load-balancing configuration.

Action

To verify load balancing across interfaces and LSPs, use the following command on the ingress router:

```
user@host# show configuration
```

To verify load balancing across interfaces and LSPs, use the following commands on a transit router:

```
user@host# show route
user@host# show route forwarding-table
user@host# show mpls lsp statistics
user@host# monitor interface traffic
user@host# clear mpls lsp statistics
user@host# clear interface statistics
```

Sample Output

The following sample output is for the configuration on ingress router **R1**:

```
user@R1> show configuration | no-more
[...Output truncated...]
routing-options {
  [...Output truncated...]
  forwarding-table {
    export lbpp;
  }
}
```



```
[...Output truncated...]
policy-options {
    policy-statement lbpp {
        then {
            load-balance per-packet;
        }
    }
}
```

Meaning

The sample output for the **show configuration** command on ingress router **R1** shows that load balancing is correctly configured with the **lbpp** policy statement. Also, the **lbpp** policy is exported into the forwarding table at the **[edit routing-options]** hierarchy level.

Sample Output

The following sample output is from transit router R2:

```
user@R2> show route 192.168.0.1 terse

inet.0: 25 destinations, 27 routes (25 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 192.168.0.1/32   O 10      3           so-0/0/1.0
                   >so-0/0/2.0

[...Output truncated...]
```

Meaning

The sample output for the **show route** command issued on transit router **R2** shows the two equal-cost paths (**so-0/0/1** and **so-0/0/2**) through the network to the loopback address to **R0 (192.168.0.1)**. Even though the right angle bracket (>) usually indicates the active route, in this instance it does not, as shown in the following four sample outputs.

Sample Output

The following sample output is from transit router R2:

```
user@R2> monitor interface traffic

R2                               Seconds: 65                Time: 11:41:14
```

Interface	Link	Input packets	(pps)	Output packets	(pps)
so-0/0/0	Up	0	(0)	0	(0)
so-0/0/1	Up	126	(0)	164659	(2128)
so-0/0/2	Up	85219	(1004)	164598	(2128)
so-0/0/3	Up	0	(0)	0	(0)
fe-0/1/0	Up	328954	(4265)	85475	(1094)
fe-0/1/1	Up	0	(0)	0	(0)
fe-0/1/2	Up	0	(0)	0	(0)
fe-0/1/3	Up	0	(0)	0	(0)

[...Output truncated...]

Meaning

The sample output for the **monitor interface traffic** command issued on transit router **R2** shows that output traffic is evenly distributed across the two interfaces **so-0/0/1** and **so-0/0/2**.

Sample Output

The following sample output is from transit router R2:

```

user@R2> show mpls lsp statistics
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 5 sessions
To           From           State    Packets    Bytes LSPname
192.168.0.1  192.168.1.1    Up       87997     17951388 lsp1
192.168.0.1  192.168.1.1    Up       87997     17951388 lsp2
192.168.0.1  192.168.1.1    Up       87997     17951388 lsp3
192.168.0.1  192.168.1.1    Up       87997     17951388 lsp4
192.168.6.1  192.168.0.1    Up         0           0 r0-r1
Total 5 displayed, Up 5, Down 0

```

Meaning

The sample output for the **show mpls lsp statistics** command issued on transit router **R2** shows that output traffic is evenly distributed across the four LSPs configured on ingress router **R6**.

Sample Output

The following sample output is from transit router R2:

```
user@R2> show route forwarding-table destination 10.0.90.14
Routing table: inet
Internet:
Destination          Type RtRef Next hop          Type Index NhRef Netif
10.0.90.12/30        user      0                ulst 262144  6
                    ucst 345  5 so-0/0/1.0
                    ucst 339  2 so-0/0/2.0
```

Meaning

The sample output for the **show route forwarding-table destination** command issued on transit router R2 shows **ulst** in the **Type** field, which indicates that load balancing is working. The two unicast (**ucst**) entries in the **Type** field are the two next hops for the LSPs.

Sample Output

The following sample output is from transit router R2:

```
user@R2> show route forwarding-table | find mpls
Routing table: mpls
MPLS:
Destination          Type RtRef Next hop          Type Index NhRef Netif
default              perm      0                dscd   38    1
0                    user      0                recv   37    3
1                    user      0                recv   37    3
2                    user      0                recv   37    3
100112                user      0                Swap 100032      so-0/0/1.0
100128                user      0                Swap 100048      so-0/0/1.0
100144                user      0 10.0.12.13          Swap 100096      fe-0/1/0.0
100160                user      0                Swap 100112      so-0/0/2.0
100176                user      0                Swap 100128      so-0/0/2.0
```

Meaning

The sample output for the **show route forwarding-table | find mpls** command issued on transit router R2 shows the MPLS routing table that contains the labels received and used by this router to forward packets to the next-hop router. This routing table is used mostly on transit routers to route packets to the next router along an LSP. The first three labels in the **Destination** column (Label 0, Label 1, and Label 2) are automatically entered by MPLS when the protocol is enabled. These labels are reserved MPLS labels

defined in RFC 3032. Label 0 is the IPv4 explicit null label. Label 1 is the MPLS equivalent of the IP Router Alert label, and Label 2 is the IPv6 explicit null label.

The remaining five labels in the **Destination** column are nonreserved labels that the router uses to forward traffic, and the last column **Netif**, shows the interfaces used to send the labeled traffic. For nonreserved labels, the second **Type** column shows the operation performed on matching packets. In this example, all non-reserved packets are swapped for outgoing packet labels. For example, packets with the label **100112** have their label swapped for **100032** before they are pushed out of interface **so-0/0/1.0**.

Verify the Operation of Uneven Bandwidth Load Balancing

Purpose

When a router is performing unequal-cost load balancing between LSPs paths, the **show route detail** command displays a balance field associated with each next hop being used.

Action

To verify that an RSVP LSP is unevenly load-balanced, use the following Junos OS CLI operational mode commands:

```
user@host> show route protocol rsvp detail
user@host> show mpls lsp statistics
```

Sample Output

```
user@R1> show route protocol rsvp detail

inet.0: 25 destinations, 25 routes (25 active, 0 holddown, 0 hidden)
10.0.90.14/32 (1 entry, 1 announced)
  State: <FlashAll>
  *RSVP   Preference: 7
          Next-hop reference count: 7
          Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1  balance 10%
            Label-switched-path lsp1
            Label operation: Push 100768
            Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1  balance 20%
              Label-switched-path lsp2
              Label operation: Push 100736
              Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1  balance 30%,
selected
              Label-switched-path lsp3
```

```

Label operation: Push 100752
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 40%
Label-switched-path lsp4
Label operation: Push 100784
State: <Active Int>
Local AS: 65432
Age: 8:03 Metric: 4
Task: RSVP
Announcement bits (2): 0-KRT 4-Resolve tree 1
AS path: I
inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
192.168.0.1/32 (1 entry, 1 announced)
State: <FlashAll>
*RSVP Preference: 7
Next-hop reference count: 7
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 10%
Label-switched-path lsp1
Label operation: Push 100768
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 20%
Label-switched-path lsp2
Label operation: Push 100736
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 30%
Label-switched-path lsp3
Label operation: Push 100752
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 40%, selected

Label-switched-path lsp4
Label operation: Push 100784
State: <Active Int>
Local AS: 65432
Age: 8:03 Metric: 4
Task: RSVP
Announcement bits (1): 1-Resolve tree 1
AS path: I

```

user@R1> **show mpls lsp statistics**

Ingress LSP: 4 sessions

To	From	State	Packets	Bytes	LSPname
192.168.0.1	192.168.1.1	Up	10067	845628	lsp1
192.168.0.1	192.168.1.1	Up	20026	1682184	lsp2
192.168.0.1	192.168.1.1	Up	29796	2502864	lsp3
192.168.0.1	192.168.1.1	Up	40111	3369324	lsp4

Total 4 displayed, Up 4, Down 0

```

Egress LSP: 1 sessions
To           From           State    Packets      Bytes LSPname
192.168.1.1   192.168.0.1   Up       NA           NA r0-r1
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The sample output from ingress router **R1** shows that traffic is distributed according to the LSP bandwidth configuration, as indicated by the **Balance: xx%** field. For example, **lsp1** has 10 Mbps of bandwidth configured, as reflected in the **Balance: 10%** field.

Use the traceroute Command to Verify MPLS Labels

Purpose

You can use the **traceroute** command to verify that packets are being sent over the LSP.

Action

To verify MPLS labels, enter the following Junos OS CLI operational mode command, where **host-name** is the IP address or the name of the remote host:

```
user@host> traceroute host-name
```

Sample Output 1

```

user@R1> traceroute 100.100.6.1
traceroute to 100.100.6.1 (100.100.6.1), 30 hops max, 40 byte packets
 1  10.1.12.2 (10.1.12.2)  0.861 ms  0.718 ms  0.679 ms
    MPLS Label=100048 CoS=0 TTL=1 S=1
 2  10.1.24.2 (10.1.24.2)  0.822 ms  0.731 ms  0.708 ms
    MPLS Label=100016 CoS=0 TTL=1 S=1
 3  10.1.46.2 (10.1.46.2)  0.571 ms !N  0.547 ms !N  0.532 ms !N

```

Sample Output 2

```
user@R1> traceroute 10.0.0.6
traceroute to 10.0.0.6 (10.0.0.6), 30 hops max, 40 byte packets
 1  10.1.13.2 (10.1.13.2)  0.605 ms  0.548 ms  0.503 ms
 2  10.0.0.6 (10.0.0.6)  0.761 ms  0.676 ms  0.675 ms
```

Meaning

Sample Output 1 shows that MPLS labels are used to forward packets through the network. Included in the output is a label value (**MPLS Label=100048**), the time-to-live value (**TTL=1**), and the stack bit value (**S=1**).

The **MPLS Label** field is used to identify the packet to a particular LSP. It is a 20-bit field, with a maximum value of $(2^{20}-1)$, or approximately 1,000,000.

The TTL value contains a limit on the number of hops that this MPLS packet can travel through the network (1). It is decremented at each hop, and if the TTL value drops below one, the packet is discarded.

The bottom of the stack bit value (**S=1**) indicates that is the last label in the stack and that this MPLS packet has one label associated with it. The MPLS implementation in the Junos OS supports a stacking depth of 3 on the M-series routers and up to 5 on the T-series platforms. For more information on MPLS label stacking, see RFC 3032, *MPLS Label Stack Encoding*.

MPLS labels appear in Sample Output 1 because the **traceroute** command is issued to a BGP destination where the BGP next hop for that route is the LSP egress address. The Junos OS default behavior uses LSPs for BGP traffic when the BGP next hop equals the LSP egress address.

Sample Output 2 shows that MPLS labels do not appear in the output for the **traceroute** command. If the BGP next hop does not equal the LSP egress address or the destination is an IGP route, the BGP traffic does not use the LSP. Instead of using the LSP, the BGP traffic is using the IGP (IS-IS, in this case) to reach the egress address (**R6**).

Troubleshooting GMPLS and GRE Tunnel

Problem

Description: The logical control channel for GMPLS must be a point-to-point link and must have some form of IP reachability. On broadcast interfaces or when there are multiple hops between control channel peers, use a GRE tunnel for the control channel. For more detailed information on GMPLS and GRE tunnels see the *Junos MPLS Applications Configuration Guide* and the *Junos User Guide*.

A tunnel PIC is *not* required to configure a GRE tunnel for the GMPLS control channel. Instead, use the software-based **gre** interface, rather than the hardware-based **gr-fpc/pic/port** interface.



CAUTION: Due to restrictions to the software-based **gre** interface, the GMPLS control channel is the only supported use of the software-based **gre** interface. Any other use is expressly unsupported and might cause an application failure.

The following example shows a basic **gre** interface configuration. In this case, the tunnel source is the loopback address of the local router and the destination address is the loopback destination of the remote router. Traffic that has a next hop of the tunnel destination will use the tunnel. The tunnel is not automatically used by all the traffic passing through the interface. Only traffic with the tunnel destination as the next hop uses the tunnel.

Sample Output

```
user@R1> show configuration interfaces
[...Output truncated...]
gre {
    unit 0 {
        tunnel {
            source 10.0.12.13;
            destination 10.0.12.14;
        }
        family inet {
            address 10.35.1.6/30;
        }
        family mpls;
    }
}
```

Sample Output

The following sample output for the **show interfaces** command shows the encapsulation type and header, the maximum speed, packets through the logical interface, the destination, and logical address.

```
user@R1> show interfaces gre
Physical interface: gre, Enabled, Physical link is Up
Interface index: 10, SNMP ifIndex: 8
Type: GRE, Link-level type: GRE, MTU: Unlimited, Speed: Unlimited
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Input packets : 0
Output packets: 0
```



```

Logical interface gre.0 (Index 70) (SNMP ifIndex 47)
  Flags: Point-To-Point SNMP-Traps 0x4000
    IP-Header 10.0.12.14:10.0.12.13:47:df:64:0000000000000000
    Encapsulation: GRE-NULL
    Input packets : 171734
    Output packets: 194560
    Protocol inet, MTU: 1476
      Flags: None
      Addresses, Flags: Is-Preferred Is-Primary
        Destination: 10.35.1.4/30, Local: 10.35.1.6, Broadcast: 10.35.1.7
    Protocol mpls, MTU: 1464
      Flags: None


```

The following are various requirements when you configure a GMPLS LSP using a GRE tunnel:

- The data channel must start and end on the same type of interface.
- The control channel can be a GRE tunnel that starts and ends on the same or different interface type.
- The GRE tunnel must be configured indirectly with the **peer-interface *peer-name*** statement at the **[edit protocols ospf]** hierarchy level.
- The GRE interface must be disabled at the **[edit protocols ospf]** and **[edit protocols rsvp]** hierarchy levels.
- Data and control channels must be defined correctly in the LMP configuration .
- It is optional to disable Constrained Shortest Path First (CSPF) with the **no-cspf** statement.

This case focuses on the incorrect configuration of the endpoints of the GRE tunnel. However, you can use a similar process and commands to diagnose other GRE tunnel problems. [Figure 134 on page 1617](#) illustrates a network topology with MPLS tunneled through a GRE interface.

Figure 134: GMPLS Network Topology

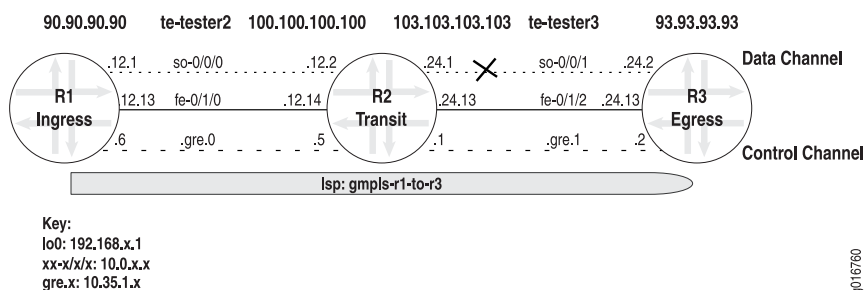

The MPLS network topology in [Figure 134 on page 1617](#) shows Juniper Networks routers configured with a GRE tunnel that consists of the following components:

- A strict GMPLS LSP path from the ingress router to the egress router.
- On the ingress router, CSPF disabled with the **no-cspf** statement at the [edit protocol mpls label-switched-path *lsp-name*] hierarchy level.
- Traffic-engineering links and control channels within the **peer** statement at the [edit protocols link-management] hierarchy level on all routers.
- OSPF and OSPF traffic engineering configured on all routers.
- A reference to the **peer-interface** in both OSPF and RSVP on all routers.
- A switching-type problem between **R2** and **R3**.

Symptom

The LSP in the network shown in [Figure 134 on page 1617](#) is down, as indicated by the output from the **show mpls lsp** and **show rsvp session** commands, which display very similar information. The **show mpls lsp** command shows all LSPs configured on the router, as well as all transit and egress LSPs. The **show rsvp session** command displays summary information about RSVP sessions. You can use either command to verify the state of the LSP. In this case, LSP **gmpls-r1-to-r3** is down (**Dn**).

Sample Output

```
user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
192.168.4.1 192.168.1.1 Dn  0 -      gmpls-r1-to-r3
Bidir
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R1> show rsvp session
Ingress RSVP: 1 sessions
To          From          State  Rt Style Labelin Labelout LSPname
192.168.4.1 192.168.1.1 Dn   0 0 -   -   - gmpls-r1-to-r3
Bidir
Total 1 displayed, Up 0, Down 1

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Cause

The cause of the problem with the GMPLS LSP is the configuration of different interface types at both ends of the GMPLS data channel.

Troubleshooting Commands

The Junos OS includes commands that are useful when troubleshooting a problem. This topic provides a brief description of each command, followed by sample output, and a discussion of the output in relation to the problem.

You can use the following commands when troubleshooting a GMPLS problem:

```
user@host> show mpls lsp extensive
user@host> show rsvp session detail
user@host> show link-management peer
user@host> show link-management te-link
user@host> show configuration protocols mpls
user@host> monitor start filename
user@host> show log filename
```

Sample Output

Use the show mpls lsp extensive command on transit router R1 to display detailed information about all LSPs transiting, terminating, and configured on the router.

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

192.168.4.1
  From: 192.168.1.1, State: Dn, ActiveRoute: 0, LSPname: gmpls-r1-to-r3
  Bidirectional
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: SDH/SONET, Switching type: PSC-1, GPID: IPv4
  Primary    pl                      State: Dn
    SmartOptimizeTimer: 180
8 Dec 20 18:08:02 192.168.4.1: MPLS label allocation failure [3 times]
  7 Dec 20 18:07:53 Originate Call
  6 Dec 20 18:07:53 Clear Call
  5 Dec 20 18:07:53 Deselected as active
```

```

    4 Dec 20 18:06:13 Selected as active path
    3 Dec 20 18:06:13 Record Route:  100.100.100.100 93.93.93.93
    2 Dec 20 18:06:13 Up
    1 Dec 20 18:06:13 Originate Call
Created: Wed Dec 20 18:06:12 2006
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The sample output for the **show mpls lsp extensive** command shows an error message (**MPLS label allocation failure**) in the log section of the output. This LSP event indicates that the MPLS protocol or the **family mpls** statement were not configured properly. When the LSP event is preceded by an IP address, the address is typically the router that has the MPLS configuration error. In this case, it appears that the router with the **lo0** address of **192.168.4.1 (R3)** has an MPLS configuration error.

Sample Output

Use the **show rsvp session detail** command to display detailed information about RSVP sessions.

```

user@R1> show rsvp session detail
Ingress RSVP: 1 sessions

192.168.4.1
  From: 192.168.1.1,  LSPstate: Dn, ActiveRoute: 0
    LSPname: gmpls-r1-to-r3, LSPpath: Primary
  Bidirectional, Upstream label in: 21253, Upstream label out: -
  Suggested label received: -,  Suggested label sent: 21253
  Recovery label received: -, Recovery label sent: -
    Resv style: 0 - , Label in: -, Label out: -
  Time left:    -, Since: Wed Dec 20 18:07:53 2006
  Tspec: rate 0bps size 0bps peak 155.52Mbps m 20 M 1500
  Port number: sender 2 receiver 46115 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 0
  PATH sentto: 10.35.1.5 (tester2) 3 pkts
    Explt route: 100.100.100.100 93.93.93.93

```

Total 1 displayed, Up 0, Down 1

Egress RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

Meaning

The sample output for the **show RSVP session detail** command shows that LSP **gmpls-r1-to-r3** is down (**LSPstate: Dn**). The route record is incomplete, indicating a problem with the explicit route **100.100.100.100/32**. The address **100.100.100.100** is the data channel on **R2** so-0/0/0, and the address **93.93.93.93** is the data channel on **R3**.

Sample Output

Use the `show link-management peer` command to display MPLS peer link information.

```
user@R1> show link-management peer
```

Peer name: tester2, System identifier: 48428

State: Up, Control address: 10.35.1.5

```
Control-channel      State
gre.0               Active
```

TE links:

tester2

```
user@R2> show link-management peer
```

Peer name: tester2, System identifier: 48428

State: Up, Control address: 10.35.1.6

```
Control-channel      State
gre.0               Active
```

TE links:

te-tester2

Peer name: tester3 , System identifier: 48429

```
State: Up , Control address: 10.35.1.2
```

```
Control-channel      State
gre.1               Active
```

TE links:

te-tester3

```

user@R3> show link-management peer
Peer name: tester3, System identifier: 48429
State: Up, Control address: 10.35.1.1
Control-channel          State
gre.0                    Active
TE links:
te-tester3

```

Meaning

The sample output from all routers in the example network in [Figure 134 on page 1617](#) for the **show link-management peer** command shows that all control channels are up and active. A detailed analysis of the output shows the following information:

- Name of the peer, **tester2** or **tester3**, which is the same on neighboring routers for ease of troubleshooting.
- Internal identifier for the peer, **48428** for **tester2** and **48429** for **tester3**. The internal identifier is a range of values from 0 through 64,000.
- The state of the peer, which can be up or down. In this case, all peers are up.
- The address to which a control channel is established, for example, **10.35.1.5**.
- The state of the control channel, which can be up, down, or active.
- The traffic-engineered links that are managed by their peer, indicating that control channel **gre.0** is managed by **tester3**.

Sample Output

Use the **show link-management te-link** command to display the resources used to set up Multiprotocol Label Switching (MPLS) traffic-engineered forwarding paths.

```

user@R1> show link-management te-link
TE link name:  tester2, State: Up
Local identifier: 2005, Remote identifier: 21253, Local address: 90.90.90.90,
Remote address: 100.100.100.100,
Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 155.52Mbps, Maximum
bandwidth: 155.52Mbps, Total bandwidth: 155.52Mbps,
Available bandwidth: 0bps

```

Name	State	Local ID	Remote ID	Bandwidth	Used	LSP-name
so-0/0/0	Up	21253	21253	155.52Mbps	Yes	gmpls-r1-to-r3

```

user@R2> show link-management te-link

```

```

TE link name:  te-tester2, State: Up
  Local identifier: 7002, Remote identifier: 22292, Local address: 100.100.100.100,
  Remote address: 90.90.90.90,
  Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 155.52Mbps, Maximum
  bandwidth: 155.52Mbps, Total bandwidth: 155.52Mbps,
  Available bandwidth: 0bps
    Name          State Local ID  Remote ID      Bandwidth  Used   LSP-name
    so-0/0/0      Up          21253         21253        155.52Mbps  Yes   gmpls-r1-to-r3
TE link name:  te-tester3, State: Up
  Local identifier: 7003, Remote identifier: 21254, Local address: 103.103.103.103,
  Remote address: 93.93.93.93,
  Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 155.52Mbps, Maximum
  bandwidth: 155.52Mbps, Total bandwidth: 155.52Mbps,
  Available bandwidth: 0bps
    Name          State Local ID  Remote ID      Bandwidth  Used   LSP-name
    so-0/0/1      Up          21252         21252        155.52Mbps  Yes   gmpls-r1-to-r3

user@R3> show link-management te-link
TE link name:  te-tester3, State: Up
  Local identifier: 7003, Remote identifier: 21254,  Local address: 93.93.93.93,
  Remote address: 103.103.103.103,
  Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 0bps, Maximum bandwidth:
  0bps, Total bandwidth: 0bps,
  Available bandwidth: 0bps
    Name          State Local ID  Remote ID      Bandwidth Used   LSP-name
    so-0/0/1      Dn          21252         21252        155.52Mbps  No

```

Meaning

The sample output for the **show link-management te-link** command issued on the three routers in the network in [Figure 134 on page 1617](#) shows the resources allocated to the traffic-engineered links **te-tester2** and **te-tester3**. The resources are the SONET interfaces **so-0/0/0** and **so-0/0/1**. On **R1** and **R2**, the SONET interfaces are used for the LSP **gmpls-r1-to-r3**, as indicated by **Yes** in the **Used** field. However, the SONET interface **so-0/0/1** on **R3** is down (**Dn**) and is not used for the LSP (**Used No**). Further investigation is required to discover why the SONET interface on **R3** is down.

Sample Outut

Use the `show log filename` command to display the contents of the specified log file. In this case, the log file `rsvp.log` is configured at the `[edit protocols rsvp traceoptions]` hierarchy level. When the log file is configured, you must issue the `monitor start filename` command to begin logging messages to the file.

```
user@R1> show configuration protocols rsvp
traceoptions {
    file rsvp.log size 3m world-readable;
    flag state detail;
    flag error detail;
    flag packets detail;
}

user@R1> monitor start rsvp.log
```

NOTE: The **find Error** option entered after the pipe (|) searches the output for an instance of the term *Error*.

Sample Output

```
user@R3>
show log rsvp.log | find Error

Dec 28 17:23:32 Error Len 20 Session preempted flag 0 by 192.168.4.1 TE-link
103.103.103.103
[...Output truncated...]
Dec 28 17:23:32 RSVP new resv state,session 192.168.4.1(port/tunnel ID 46115 Ext-ID
192.168.1.1)Proto 0
Dec 28 17:23:32          RSVP-LMP reset LMP request for gmpls-r1-to-r3
Dec 28 17:23:32          RSVP->LMP request - resource for LSP gmpls-r1-to-r3
Dec 28 17:23:32      LMP->RSVP resource request gmpls-r1-to-r3 failed cannot find resource encoding type
SDH/SONET remote label 21252 bandwidth bw[0
Dec 28 17:23:32      RSVP-LMP reset LMP request for gmpls-r1-to-r3
Dec 28 17:23:32 RSVP originate PathErr 192.168.4.1->192.168.2.1 MPLS label allocation failure LSP
gmpls-r1-to-r3(2/46115)
Dec 28 17:23:32 RSVP send PathErr 192.168.4.1->192.168.2.1 Len=196 tester3
Dec 28 17:23:32 Session7 Len 16 192.168.4.1(port/tunnel ID 46115 Ext-ID
192.168.1.1) Proto 0
Dec 28 17:23:32 Hop          Len 20 192.168.4.1/0x086e4770 TE-link 103.103.103.103
Dec 28 17:23:32 Error       Len 20 MPLS label allocation failure flag 0 by
```



```

192.168.4.1 TE-link 103.103.103.103
Dec 28 17:23:32   Sender7   Len 12 192.168.1.1(port/lsp ID  2)
Dec 28 17:23:32   Tspec      Len 36 rate 0bps size 0bps peak 155.52Mbps m 20 M 1500
Dec 28 17:23:32   ADspec     Len 48 MTU 1500
Dec 28 17:23:32   RecRoute   Len 20  103.103.103.103 90.90.90.90
Dec 28 17:23:32   SuggLabel  Len  8  21252
Dec 28 17:23:32   UpstrLabel Len  8  21252

```

Meaning

The sample output from the egress router **R3** for the **show log rsvp.log** command is a snippet taken from the log file. The snippet shows a Link Management Protocol (LMP) resource request for the LSP **gmpls-r1-to-r3**. The request has problems with the encoding type (SDH/SONET), indicating a possible error with the SONET interface connecting **R2** and **R3**. Further investigation of the configuration of the LMP on **R2** and **R3** is required.

Sample Output

Use the show configuration *statement-path* command to display a specific configuration hierarchy; in this instance, link-management.

```

user@R2> show configuration protocols link-management
te-link te-tester2 {
    local-address 100.100.100.100;
    remote-address 90.90.90.90;
    remote-id 22292;
    interface so-0/0/0 {
        local-address 100.100.100.100;
        remote-address 90.90.90.90;
        remote-id 21253;
    }
}
te-link te-tester3 {
    local-address 103.103.103.103;
    remote-address 93.93.93.93;
    remote-id 21254;
    interface so-0/0/1 {
        local-address 103.103.103.103;
        remote-address 93.93.93.93;
        remote-id 21252;
    }
}
peer tester2 {
    address 10.35.1.6;
}

```

```

        control-channel gre.0;
        te-link te-tester2;
    }
    peer tester3 {
        address 10.35.1.2;
        control-channel gre.1;
        te-link te-tester3;
    }

user@R3> show configuration protocols link-management
te-link te-tester3 {
    local-address 93.93.93.93;
    remote-address 103.103.103.103;
    remote-id 21254;
}
    interface at-0/3/1 {
        local-address 93.93.93.93;
        remote-address 103.103.103.103;
        remote-id 21252;
    }
}
peer tester3 {
    address 10.35.1.1;
    control-channel gre.0;
    te-link te-tester3;
}

```

Meaning

The sample output from transit router **R2** and ingress router **R3** for the **show configuration protocols link-management** command shows that the interface type on the two routers is different. The resource allocated to **te-tester3** on transit router **R2** is a SONET interface, while the resource allocated to **te-tester3** on egress router **R3** is an ATM interface. The interface type on each end of the data or control channels must be of the same type. In this case, both ends should be SONET or ATM.

Solution

Solution

The solution to the problem of different interface or encapsulation types at either end of the GMPLS LSP is to make sure that the interface type is the same at both ends. In this case, the ATM interface was deleted from the link-management configuration on **R3**, and a SONET interface was configured instead.

The following commands illustrate the correct configuration and commands to verify that the GMPLS LSP is up and using the data channel:

```

user@R3> show configuration protocols link-management
user@R3> show mpls lsp
user@R3> show link-management te-link

```

Sample Output

```

user@R3> show configuration protocols link-management
te-link te-tester3 {
    local-address 93.93.93.93;
    remote-address 103.103.103.103;
    remote-id 21254;
    interface so-0/0/1 { # SONET interface replaces the incorrect ATM interface
        local-address 93.93.93.93;
        remote-address 103.103.103.103;
        remote-id 21252;
    }
}
peer tester3 {
    address 10.35.1.1;
    control-channel gre.0;
    te-link te-tester3;
}

user@R3> show mpls lsp
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
Egress LSP: 1 sessions

```

To	From	State	Rt	Style	Labelin	Labelout	LSPname
192.168.4.1	192.168.1.1	Up	0	1 FF	21252	-	gmpls-r1-to-r3

```

Bidir
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show link-management te-link
TE link name: te-tester3, State: Up
Local identifier: 7003, Remote identifier: 21254, Local address: 93.93.93.93,
Remote address: 103.103.103.103,
Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 155.52Mbps, Maximum
bandwidth: 155.52Mbps, Total bandwidth: 155.52Mbps,
Available bandwidth: 0bps

```

Name	State	Local ID	ID	Remote ID	Bandwidth Used	LSP-name
so-0/0/1	Up	21252	21252	155.52Mbps	Yes	gmpls-r1-to-r3

Meaning

The sample output for the **show protocols link-management**, **show mpls lsp**, and **show link-management te-link** commands from ingress router **R3** show that the problem is solved. LMP is correctly configured, and the LSP **gmpls-r1-to-r3** is up and using the data channel **so-0/0/1**.

Conclusion

In conclusion, both ends of a GMPLS data channel must be the same encapsulation or interface type. This case illustrates the correct configuration of the data channel. The principles are the same for the control channel.

Router Configurations

Output that shows the configurations of the ingress router in the network. The **no-more** option entered after the pipe (|) prevents the output from being paginated if the output is longer than the length of the terminal screen.

Sample Output

The following sample output is for ingress router R1:

```
user@R1> show configuration | no-more
[...Output truncated...]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        address 10.0.12.1/32 {
          destination 10.0.12.2;
        }
      }
      family mpls;
    }
  }
  fe-0/1/0 {
    unit 0 {
      family inet {
        address 10.0.12.13/30;
      }
      family mpls;
    }
  }
}
```

```

fxp0 {
    unit 0 {
        family inet {
            address 192.168.70.143/21;
        }
    }
}
gre {
    unit 0 {
        tunnel {
            source 10.0.12.13;
            destination 10.0.12.14;
        }
        family inet {
            address 10.35.1.6/30;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.168.1.1/32;
        }
    }
}
}
routing-options {
    static {
        /* corporate and alpha net */
        route 172.16.0.0/12 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        /* old lab nets */
        route 192.168.0.0/16 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        route 0.0.0.0/0 {
            discard;
            retain;
        }
    }
}

```

```

        no-readvertise;
    }
}
router-id 192.168.1.1;
autonomous-system 65432;
}
protocols {
    rsvp {
        traceoptions {
            file rsvp.log size 3m world-readable;
            flag state detail;
            flag error detail;
            flag packets detail;
        }
        interface fxp0.0 {
            disable;
        }
        interface all;
        interface lo0.0;
        interface gre.0 {
            disable;
        }
        peer-interface tester2;
    }
    mpls {
        label-switched-path gmpls-r1-to-r3 {
            from 192.168.1.1;
            to 192.168.4.1;
            lsp-attributes {
                switching-type psc-1;
                encoding-type sonet-sdh;
            }
            no-cspf;
            primary p1;
        }
        path p1 {
            100.100.100.100 strict;
            93.93.93.93 strict;
        }
        interface all;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {

```

```

        interface lo0.0;
        interface fe-0/1/0.0;
        interface fxp0.0 {
            disable;
        }
        interface gre.0 {
            disable;
        }
        peer-interface tester2;
    }
}
link-management {
    te-link tester2 {
        local-address 90.90.90.90;
        remote-address 100.100.100.100;
        remote-id 21253;
        interface so-0/0/0 {
            local-address 90.90.90.90;
            remote-address 100.100.100.100;
            remote-id 21253;
        }
    }
    peer tester2 {
        address 10.35.1.5;
        control-channel gre.0;
        te-link tester2;
    }
}
}

```

Sample Output

The following sample output is for transit router R2:

```

user@R2>show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/0 {
        unit 0 {
            family inet {
                address 10.0.12.2/32 {
                    destination 10.0.12.1;
                }
            }
        }
    }
}

```

```

        }
        family mpls;
    }
}
so-0/0/1 {
    unit 0 {
        family inet {
            address 10.0.24.1/32 {
                destination 10.0.24.2;
            }
        }
        family mpls;
    }
}
fe-0/1/0 {
    unit 0 {
        family inet {
            address 10.0.12.14/30;
        }
        family mpls;
    }
}
fe-0/1/2 {
    unit 0 {
        family inet {
            address 10.0.24.13/30;
        }
        family mpls;
    }
}
fxp0 {
    unit 0 {
        family inet {
            address 192.168.70.144/21;
        }
    }
}
gre {
    unit 0 {
        tunnel {
            source 10.0.12.14;
            destination 10.0.12.13;
        }
        family inet {

```



```

        address 10.35.1.5/30;
    }
    family mpls;
}
unit 1 {
    tunnel {
        source 10.0.24.13;
        destination 10.0.24.14;
    }
    family inet {
        address 10.35.1.1/30;
    }
    family mpls;
}
}
lo0 {
    unit 0 {
        family inet {
            address 192.168.2.1/32;
        }
    }
}
}
routing-options {
    static {
        route 172.16.0.0/12 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        route 192.168.0.0/16 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        route 0.0.0.0/0 {
            discard;
            retain;
            no-readvertise;
        }
    }
}
router-id 192.168.2.1;
autonomous-system 65432;
}

```

```

protocols {
  rsvp {
    traceoptions {
      file rsvp.log size 3m world-readable;
      flag packets detail;
      flag state detail;
      flag error detail;
    }
    interface fxp0.0;
    interface lo0.0;
    interface all;
    interface gre.0 {
      disable;
    }
    peer-interface tester2;
    peer-interface tester3;
  }
  mpls {
    interface all;
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface lo0.0;
      interface fxp0.0 {
        disable;
      }
      interface gre.0 {
        disable;
      }
      interface fe-0/1/0.0;
      interface fe-0/1/2.0;
      interface gre.1 {
        disable;
      }
      peer-interface tester2;
      peer-interface tester3;
    }
  }
  link-management {
    te-link te-tester2 {
      local-address 100.100.100.100;
      remote-address 90.90.90.90;
      remote-id 22292;
    }
  }
}

```

```

        interface so-0/0/0 {
            local-address 100.100.100.100;
            remote-address 90.90.90.90;
            remote-id 21253;
        }
    }
    te-link te-tester3 {
        local-address 103.103.103.103;
        remote-address 93.93.93.93;
        remote-id 21254;
        interface so-0/0/1 {
            local-address 103.103.103.103;
            remote-address 93.93.93.93;
            remote-id 21252;
        }
    }
    peer tester2 {
        address 10.35.1.6;
        control-channel gre.0;
        te-link te-tester2;
    }
    peer tester3 {
        address 10.35.1.2;
        control-channel gre.1;
        te-link te-tester3;
    }
}

```

Sample Output

The following sample output is for egress router R3:

```

user@R3> show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.0.24.2/32;
            }
            family mpls;
        }
    }
}

```

```

}
fe-0/1/2 {
    unit 0 {
        family inet {
            address 10.0.24.14/30;
        }
        family mpls;
    }
}
fxp0 {
    unit 0 {
        family inet {
            address 192.168.70.146/21;
        }
    }
}
gre {
    unit 0 {
        tunnel {
            source 10.0.24.14;
            destination 10.0.24.13;
        }
        family inet {
            address 10.35.1.2/30;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.168.4.1/32;
        }
    }
}
}
routing-options {
    static {
        route 172.16.0.0/12 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        route 192.168.0.0/16 {

```

```

        next-hop 192.168.71.254;
        retain;
        no-readvertise;
    }
    route 0.0.0.0/0 {
        discard;
        retain;
        no-readvertise;
    }
}
router-id 192.168.4.1;
autonomous-system 65432;
}
protocols {
    rsvp {
        traceoptions {
            file rsvp.log size 3m world-readable;
            flag packets detail;
            flag error;
            flag state;
            flag lmp;
        }
        interface fxp0.0 {
            disable;
        }
        interface all;
        interface lo0.0;
        interface gre.0 {
            disable;
        }
        peer-interface tester3;
    }
    mpls {
        interface all;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface fxp0.0 {
                disable;
            }
            interface fe-0/1/2.0;
            interface gre.0 {
                disable;
            }
        }
    }
}

```

```

    }
    interface lo0.0;
    peer-interface tester3;
  }
}
link-management {
  te-link te-tester3 {
    local-address 93.93.93.93;
    remote-address 103.103.103.103;
    remote-id 21254;
    interface so-0/0/1 {
      local-address 93.93.93.93;
      remote-address 103.103.103.103;
      remote-id 21252;
    }
  }
  peer tester3 {
    address 10.35.1.1;
    control-channel gre.0;
    te-link te-tester3;
  }
}
}


```

Determining LSP Status

Display detailed information about Resource Reservation Protocol (RSVP) objects and the label-switched path (LSP) history to pinpoint a problem with the LSP.

[Figure 135 on page 1639](#) illustrates the network topology used in this topic.

Figure 135: MPLS Network Topology

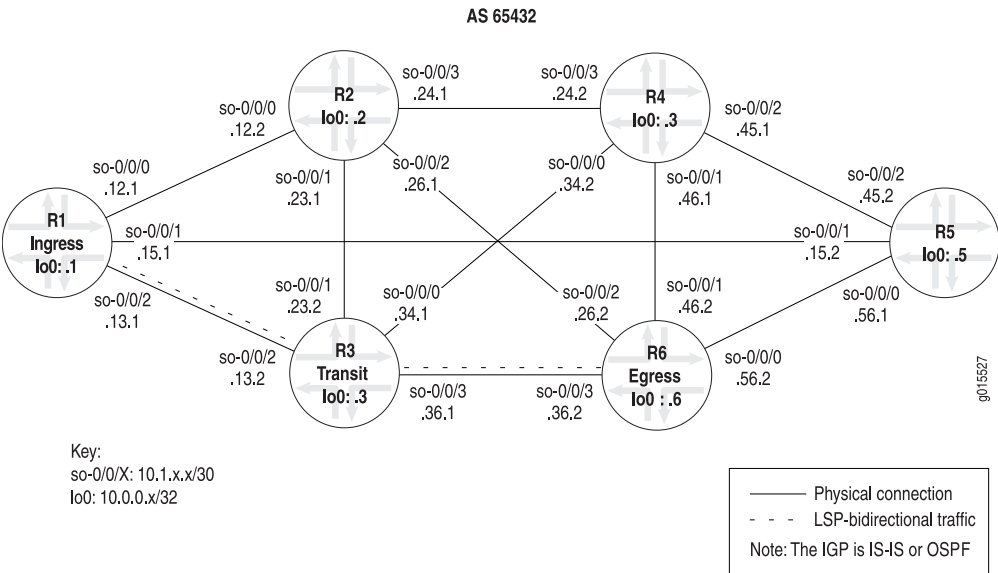

To determine the LSP state, follow these steps:

1. [Check the Status of the LSP | 1639](#)
2. [Display Extensive Status About the LSP | 1640](#)

Check the Status of the LSP

Purpose

Display the status of the label-switched path (LSP).

Action

To determine the LSP status, on the ingress router, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show mpls lsp
```

Sample Output

```
user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From      State Rt ActivePath      P      LSPName
10.0.0.6    10.0.0.1    Up    1      *    R1-to-R6
Total 1 displayed, Up 1, Down 0
```

```

Egress LSP: 1 sessions
To          From          State Rt  Style  Labelin Labelout LSPname
10.0.0.1    10.0.0.6    Up   0 1 FF   3    - R6-to-R1
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Meaning

The sample output is from the ingress router (**R1**), and shows ingress, egress, and transit LSP information. Ingress information is for the sessions that originate from this router, egress information is for sessions that terminate on this router, and transit information is for sessions that transit through this router.

There is one ingress route from **R1 (10.0.0.1)** to **R6 (10.0.0.6)**. This route is currently up, and is an active route installed in the routing table (**Rt**). The LSP **R1-to-R6** is the primary path (**P**) as opposed to the secondary path, and is indicated by an asterisk (*). The route to **R6** does not contain a named path (**ActivePath**).

There is one egress LSP from **R6** to **R1**. The **State** is up, with no routes installed in the routing table. RSVP reservation style (**Style**) consists of two parts. The first is the number of active reservations (**1**). The second is the reservation style, which is **FF** (fixed filter). The reservation style can be **FF**, **SE** (shared explicit), or **WF** (wildcard filter). There are three incoming labels (**Labelin**) and no labels going out (**Labelout**) for this LSP.

There are no transit LSPs.

For more information on checking the LSP state, see *Checklist for Working with the Layered MPLS Troubleshooting Model*.

Display Extensive Status About the LSP

Purpose

Display extensive information about LSPs, including all past state history and the reasons why an LSP might have failed.

Action

To display extensive information about LSPs, on the ingress router, enter the following Junos OS CLI operational mode command:

```
user@host> show mpls lsp extensive
```


Sample Output

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State:  Up , ActiveRoute:  1 , LSPname:  R1-to-R6
  ActivePath:  (primary)
  LoadBalance:  Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State:  Up
    Computed ERO  (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.13.2 S 10.1.36.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
91 Aug 17 12:22:52 Selected as active path
90 Aug 17 12:22:52 Record Route:  10.1.13.2 10.1.36.2
89 Aug 17 12:22:52 Up
88 Aug 17 12:22:52 Originate Call
87 Aug 17 12:22:52 CSPF: computation result accepted
86 Aug 17 12:22:23 CSPF failed: no route toward 10.0.0.6[13920 times]
85 Aug 12 19:12:51 Clear Call
84 Aug 12 19:12:50 10.1.56.2: MPLS label allocation failure
83 Aug 12 19:12:47 Deselected as active
82 Aug 12 19:12:47 10.1.56.2: MPLS label allocation failure
81 Aug 12 19:12:47 ResvTear received
80 Aug 12 19:12:47 Down
79 Aug 12 19:12:31 10.1.56.2: MPLS label allocation failure[4 times]
78 Aug 12 19:09:58 Selected as active path
77 Aug 12 19:09:58 Record Route:  10.1.15.2 10.1.56.2
76 Aug 12 19:09:58 Up
75 Aug 12 19:09:57 Originate Call
74 Aug 12 19:09:57 CSPF: computation result accepted
73 Aug 12 19:09:29 CSPF failed: no route toward 10.0.0.6[11 times]
72 Aug 12 19:04:36 Clear Call
71 Aug 12 19:04:23 Deselected as active
70 Aug 12 19:04:23 ResvTear received
69 Aug 12 19:04:23 Down
68 Aug 12 19:04:23 CSPF failed: no route toward 10.0.0.6
67 Aug 12 19:04:23 10.1.15.2: Session preempted
66 Aug 12 16:45:35 Record Route:  10.1.15.2 10.1.56.2
65 Aug 12 16:45:35 Up

```

```

64 Aug 12 16:45:35 Clear Call
63 Aug 12 16:45:35 CSPF: computation result accepted
62 Aug 12 16:45:35 ResvTear received
61 Aug 12 16:45:35 Down
60 Aug 12 16:45:35 10.1.13.2: Session preempted
59 Aug 12 14:50:52 Selected as active path
58 Aug 12 14:50:52 Record Route: 10.1.13.2 10.1.36.2
57 Aug 12 14:50:52 Up
56 Aug 12 14:50:52 Originate Call
55 Aug 12 14:50:52 CSPF: computation result accepted
54 Aug 12 14:50:23 CSPF failed: no route toward 10.0.0.6[7 times]
53 Aug 12 14:47:22 Deselected as active
52 Aug 12 14:47:22 CSPF failed: no route toward 10.0.0.6
51 Aug 12 14:47:22 Clear Call
50 Aug 12 14:47:22 CSPF: link down/deleted
10.1.12.1(R1.00/10.0.0.1)->10.1.12.2(R2.00/10.0.0.2)
49 Aug 12 14:47:22 CSPF: link down/deleted
10.1.15.1(R1.00/10.0.0.1)->10.1.15.2(R5.00/10.0.0.5)
48 Aug 12 14:47:22 10.1.15.1: MPLS label allocation failure
47 Aug 12 14:47:22 Clear Call
46 Aug 12 14:47:22 CSPF: computation result accepted
45 Aug 12 14:47:22 10.1.12.1: MPLS label allocation failure
44 Aug 12 14:47:22 MPLS label allocation failure
43 Aug 12 14:47:22 Down
42 Jul 23 11:27:21 Selected as active path

```

Created: Sat Jul 10 18:18:44 2004

Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1

```

From: 10.0.0.6, LSPstate: Up , ActiveRoute: 0
LSPname: R6-to-R1 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 141, Since: Tue Aug 17 12:23:14 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 39024 protocol 0
PATH rcvfrom: 10.1.15.2 (so-0/0/1.0) 130 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.56.2 10.1.15.2 <self>

```

```
Total 1 displayed, Up 1, Down 0
```

```
Transit LSP: 0 sessions
```

```
Total 0 displayed, Up 0, Down 0
```

Meaning

The sample output is from the ingress router (**R1**), and shows ingress, egress, and transit LSP information in detail, including all past state history and the reasons why an LSP failed. Ingress information is for sessions that originate from this router, egress information is for sessions that terminate on this router, and transit information is for sessions that transit through this router.

There is one ingress route from **R1 (10.0.0.1)** to **R6 (10.0.0.6)**. This route is currently up (**State**), with one route actively using the LSP, **R1-to-R6**. The LSP active path is the primary path. Even if the LSP does not contain a **primary** or **secondary** keyword, the router still treats the LSP as a primary LSP, indicating that if the LSP fails, the router will attempt to signal inactive LSPs at 30-second intervals, by default.

Load balancing is **Random**, which is the default, indicating that when selecting the physical path for an LSP, the router randomly selects among equal-cost paths that have an equal hop count. Other options that you can configure are **Least-fill** and **Most-fill**. **Least-fill** places the LSP over the least utilized link of the equal-cost paths with equal hop count. **Most-fill** places the LSP over the most utilized link of the equal-cost paths sharing an equal hop count. Utilization is based on the percentage of available bandwidth.

The **Encoding type** field shows Generalized MPLS (GMPLS) signaling parameters (**Packet**), indicating IPv4. The **Switching type** is **Packet**, and the Generalized Payload Identifier (**GPID**) is IPv4.

The primary path is the active path, as indicated by an asterisk (*). The state of the LSP is **Up**.

The Explicit Route Object (**ERO**) includes the Constrained Shortest Path First (CSPF) cost (**20**) for the physical path that the LSP follows. The presence of the CSPF metric indicates that this is a CSPF LSP. The absence of the CSPF metric indicates a no-CSPF LSP.

The field **10.1.13.2 S** indicates the actual ERO. The RSVP signaling messages went to **10.1.13.2** strictly (as a next hop) and finished at **10.1.36.2** strictly. All ERO addresses are strict hops when the LSP is a CSPF LSP. Loose hops can only display in a no-CSPF LSP.

The received Record Route Object (**RRO**) has the following protection flags:

- **0x01**—Local protection available. The link downstream of this node is protected by a local repair mechanism. This flag can only be set if the Local protection flag was set in the **SESSION_ATTRIBUTE** object of the corresponding path message.
- **0x02**—Local protection in use. A local repair mechanism is in use to maintain this tunnel (usually because of an outage of the link it was routed over previously).
- **0x04**—Bandwidth protection. The downstream router has a backup path providing the same bandwidth guarantee as the protected LSP for the protected section.

- **0x08**—Node protection. The downstream router has a backup path providing protection against link and node failure on the corresponding path section. If the downstream router can set up only a link-protection backup path, the “Local protection available” bit is set but the “Node protection” bit is cleared.
- **0x10**—Preemption pending. The preempting node sets this flag if a pending preemption is in progress for the traffic engineered LSP. This indicates to the ingress label edge router (LER) of this LSP that it should be rerouted.

For more information on protection flags, see the *Junos Routing Protocols and Policies Command Reference*.

The field **10.1.13.2.10.1.36.2** is the actual received record route (**RRO**). Note that the addresses in the **RRO** field match those in the **ERO** field. This is the normal case for CSPF LSPs. If the RRO and ERO addresses do not match for a CSPF LSP, the LSP has to reroute or detour.

The lines numbered 91 through 42 contain the 49 most recent entries to the history log. Each line is time stamped. The most recent entries have the largest log history number and are at the top of the log, indicating that line 91 is the most recent history log entry. When you read the log, start with the oldest entry (**42**) to the most recent (**91**).

The history log was started on July 10, and displays the following sequence of activities: an LSP was selected as active, was found to be down, MPLS label allocation failed several times, was deleted several times, was preempted because of an ResvTear, was deselected as active, and was cleared. In the end, the router computed a CSPF ERO, signaled the call, the LSP came up with the listed RRO (line 90), and was listed as active.

For more information on error messages, see the *Junos MPLS Network Operations Guide Log Reference*.

The total number of ingress LSPs displayed is **1**, with **1** up and **0** down. The number in the **Up** field plus the number in the **Down** field should equal the total.

There is one egress LSP session from **R6** to **R1**. The **State** is up, with no routes installed in the routing table. RSVP reservation style (**Style**) consists of two parts. The first is the number of active reservations (**1**). The second is the reservation style, which is **FF** (fixed filter). The reservation style can be **FF**, **SE** (shared explicit), or **WF** (wildcard filter). There are three incoming labels (**Labelin**) and no labels going out (**Labelout**) for this LSP.

There are no transit LSPs.

For more information on checking the LSP state, see *Checklist for Working with the Layered MPLS Troubleshooting Model*.

Checking That RSVP Path Messages Are Sent and Received

Purpose

The presence or absence of various RSVP messages can help determine if there is a problem with Multiprotocol Label Switching (MPLS) in your network. For example, if path messages occur in the output without Resv messages, it might indicate that label-switched paths (LSPs) are not being created.

Action

To check that RSVP Path messages are sent and received, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show rsvp statistics
```

Sample Output

```
user@R1> show rsvp statistics
```

PacketType	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Path	114523	80185	1	0
PathErr	5	10	0	0
PathTear	12	6	0	0
Resv FF	80515	111476	0	0
Resv WF	0	0	0	0
Resv SE	0	0	0	0
ResvErr	0	0	0	0
ResvTear	0	5	0	0
ResvConf	0	0	0	0
Ack	0	0	0	0
SRefresh	0	0	0	0
Hello	915851	915881	0	0
EndtoEnd RSVP	0	0	0	0

Errors	Total	Last 5 seconds
Rcv pkt bad length	0	0
Rcv pkt unknown type	0	0
Rcv pkt bad version	0	0
Rcv pkt auth fail	0	0
Rcv pkt bad checksum	0	0
Rcv pkt bad format	0	0
Memory allocation fail	0	0
No path information	0	0
Resv style conflict	0	0
Port conflict	0	0
Resv no interface	0	0
PathErr to client	15	0
ResvErr to client	0	0
Path timeout	0	0

Resv timeout	0	0
Message out-of-order	0	0
Unknown ack msg	0	0
Recv nack	0	0
Recv duplicated msg-id	0	0
No TE-link to recv Hop	0	0

Meaning

The sample output shows RSVP messages sent and received. The total number of RSVP Path messages is 11,4532 sent and 80,185 received. Within the last 5 seconds, no messages have been sent or received.

A total of 5 **PathErr** messages were sent and 10 received. When path errors occur (usually because of parameter problems in a path message), the router sends a unicast PathErr message to the sender that issued the path message. In this case, **R1** sent at least 10 path messages with an error, as indicated by the 10 PathErr messages that **R1** has received. The downstream router sent **R1** five path messages with an error, as indicated by the five PathErr messages that **R1** has sent. PathErr messages transmit in the opposite direction to path messages.

A total of 12 **PathTear** messages were sent and 6 received, none in the last 5 seconds. In contrast to PathErr messages, PathTear messages travel in the same direction as path messages. Since path messages are both sent and received, PathTear messages are also sent and received. However, if only path messages are sent, then only the PathTear messages that are sent appear in the output.

A total of 80,515 reservation (**Resv**) messages with the fixed filter (**FF**) reservation style were sent and 111,476 received, none in the last 5 seconds. An **FF** reservation style indicates that within each session, each receiver establishes its own reservation with each upstream sender, and that all selected senders are listed. No messages for the wildcard filter (**WF**) or shared explicit (**SE**) reservation styles are sent or received. For more information on RSVP reservation styles, see the *Junos MPLS Applications Configuration Guide*.

Other RSVP message types are not sent or received. For information on the ResvErr, ResvTear, and Resvconf message types, see the *Junos MPLS Applications Configuration Guide*.

Ack and summary refresh (SRefresh) messages do not appear in the output. Ack and summary refresh messages are defined in RFC 2961 and are part of the RSVP extensions. Ack messages are used to reduce the amount of RSVP control traffic in the network.

A total of 915,851 hello messages were sent and 915,881 received, with none transmitted or received in the last 5 seconds. The RSVP hello interval is 9 seconds. If more than one hello message is sent or received in the last 5 seconds, it implies that more than one interface supports RSVP.

EndtoEnd RSVP messages are legacy RSVP messages that are not used for RSVP traffic engineering. These counters increment only when RSVP forwards legacy RSVP messages issued by a virtual private network (VPN) customer for transit across the backbone to the other site(s) in the VPN. They are called end-to-end

messages because they are intended for the opposite side of the network and only have meaning at the two ends of the provider network.

The **Errors** section of the output shows statistics about RSVP packets with errors. A total of 15 **PathErr to client** packets were sent to the Routing Engine. The total combines the sent and received **PathErr** packets.

11

PART

Configuration Statements

MPLS Configuration Statements | **1649**

RSVP Configuration Statements | **1951**

LDP Configuration Statements | **2027**

CCC and TCC Configuration Statements | **2120**

GMPLS Configuration Statements | **2142**

PCEP Configuration Statements | **2191**

MPLS Configuration Statements

IN THIS CHAPTER

- abstract-hop | 1656
- adaptive | 1658
- adjust-interval | 1659
- adjust-threshold | 1660
- adjust-threshold-absolute | 1661
- adjust-threshold-activate-bandwidth | 1662
- adjust-threshold-overflow-limit | 1663
- adjust-threshold-underflow-limit | 1664
- admin-down | 1665
- admin-group (for Interfaces) | 1666
- admin-group (for LSPs) | 1667
- admin-group-extended | 1668
- admin-groups | 1670
- admin-groups-extended | 1671
- admin-groups-extended-range | 1673
- advertise-mode (MPLS) | 1675
- advertisement-hold-time | 1676
- allow-fragmentation | 1677
- always-mark-connection-protection-tlv | 1678
- associate-backup-pe-groups | 1679
- associate-lsp | 1680
- auto-bandwidth (MPLS Tunnel) | 1681
- auto-bandwidth (MPLS Statistics) | 1683
- auto-policing | 1684
- backup-pe-group | 1685
- bandwidth (Fast Reroute, Signaled, and Multiclass LSPs) | 1686
- bandwidth (Static LSP) | 1688
- bandwidth-model | 1689

- [bandwidth-percent](#) | 1690
- [bfd-liveness-detection \(Protocols MPLS\)](#) | 1691
- [bfd-liveness-detection \(LSP\)](#) | 1693
- [class-of-service \(Protocols MPLS\)](#) | 1695
- [compute-options](#) | 1696
- [compute-profile](#) | 1697
- [connections \(MPLS\)](#) | 1699
- [constituent-list](#) | 1700
- [container-label-switched-path](#) | 1701
- [corouted-bidirectional](#) | 1702
- [corouted-bidirectional-passive](#) | 1703
- [credibility](#) | 1704
- [database](#) | 1706
- [delay \(querier\)](#) | 1707
- [delay \(responder\)](#) | 1708
- [description \(Protocols MPLS\)](#) | 1709
- [description \(Protocols Layer 2 VPN\)](#) | 1710
- [deselect-on-bandwidth-failure](#) | 1711
- [diffserv-te](#) | 1712
- [disable \(Protocols MPLS\)](#) | 1713
- [dual-transport](#) | 1714
- [dynamic \(Source Packet Routing\)](#) | 1715
- [dynamic-tunnels](#) | 1717
- [egress-protection \(MPLS\)](#) | 1719
- [encapsulation-type \(Layer 2 VPNs\)](#) | 1721
- [encoding-type](#) | 1723
- [entropy-label](#) | 1724
- [entropy-label](#) | 1725
- [ethernet-vlan \(Protocols Link Management\)](#) | 1726
- [ether-pseudowire](#) | 1727
- [exclude \(for Administrative Groups\)](#) | 1728
- [exclude \(for Fast Reroute\)](#) | 1729
- [exclude-srlg](#) | 1730
- [exp](#) | 1731

- expand-loose-hop | 1732
- explicit-null (Protocols MPLS) | 1733
- export (MPLS Traffic engineering database) | 1734
- failure-action (Protocols MPLS) | 1735
- family | 1736
- family mpls | 1737
- fast-reroute (Protocols MPLS) | 1741
- fate-sharing | 1742
- forwarding-rib | 1744
- forwarding-table | 1745
- from (Protocols MPLS) | 1746
- gpip | 1747
- gre (Routing Options) | 1749
- hop-limit | 1750
- import (MPLS Traffic Engineering Database) | 1752
- ip-tunnel-rpf-check | 1754
- ipv4 (Family MPLS) | 1756
- ipv6 (Family MPLS) | 1758
- ip-version (Family MPLS) | 1759
- include-all (for Administrative Groups) | 1760
- include-all (for Fast Reroute) | 1761
- include-any (for Administrative Groups) | 1762
- include-any (for Fast Reroute) | 1763
- ingress (LSP) | 1764
- install (Protocols MPLS) | 1766
- ingress-policy | 1769
- interface (Protocols MPLS) | 1770
- interface (MPLS) | 1771
- inter-domain | 1772
- ip-tunnel-rpf-check | 1773
- ipv6-tunneling | 1774
- label-switched-path (Protocols MPLS) | 1775
- label-switched-path | 1781
- label-switched-path-template (Container LSP) | 1782

- [ldp-tunneling](#) | **1783**
- [least-fill](#) | **1783**
- [link-protection \(Dynamic LSPs\)](#) | **1784**
- [link-protection \(Static LSPs\)](#) | **1785**
- [load-balance-label-capability](#) | **1786**
- [log-updown \(Protocols MPLS\)](#) | **1787**
- [longest-match](#) | **1789**
- [loss \(querier\)](#) | **1790**
- [loss \(responder\)](#) | **1791**
- [loss-delay \(querier\)](#) | **1792**
- [lsp-attributes](#) | **1793**
- [lsping-channel-type](#) | **1794**
- [l2vpn](#) | **1795**
- [maximum-bandwidth \(Protocols MPLS\)](#) | **1798**
- [maximum-helper-recovery-time](#) | **1799**
- [maximum-helper-restart-time \(RSVP\)](#) | **1800**
- [maximum-labels](#) | **1801**
- [minimum-bandwidth-adjust-interval](#) | **1802**
- [minimum-bandwidth-adjust-threshold-change](#) | **1803**
- [minimum-bandwidth-adjust-threshold-value](#) | **1804**
- [metric \(Protocols MPLS\)](#) | **1805**
- [minimum-bandwidth](#) | **1806**
- [monitor-bandwidth](#) | **1807**
- [most-fill](#) | **1807**
- [mpls \(Protocols\)](#) | **1808**
- [mpls](#) | **1809**
- [mpls-tp-mode](#) | **1812**
- [mtu-signaling](#) | **1813**
- [neighbor \(Protocols Layer 2 Circuit\)](#) | **1814**
- [next-hop \(Protocols MPLS\)](#) | **1816**
- [no-bfd-triggered-local-repair](#) | **1817**
- [no-cspf](#) | **1818**
- [no-decrement-ttl](#) | **1820**
- [graceful-restart \(Enabling Globally\)](#) | **1822**

- [helper-disable \(Multiple Protocols\) | 1824](#)
- [no-install-to-address | 1825](#)
- [no-load-balance-label-capability | 1826](#)
- [no-mcast-replication | 1827](#)
- [no-propagate-ttl | 1828](#)
- [no-transit-statistics | 1829](#)
- [no-trap | 1830](#)
- [node-protection \(Static LSP\) | 1831](#)
- [normalization | 1832](#)
- [oam \(Protocols MPLS\) | 1834](#)
- [optimize-adaptive-teardown | 1837](#)
- [optimize-aggressive | 1838](#)
- [optimize-hold-dead-delay | 1839](#)
- [optimize-switchover-delay | 1840](#)
- [optimize-timer \(Protocols MPLS\) | 1841](#)
- [p2mp \(Protocols MPLS\) | 1843](#)
- [p2mp-lsp-next-hop | 1844](#)
- [path \(Protocols MPLS\) | 1845](#)
- [path | 1847](#)
- [path-mtu | 1848](#)
- [per-prefix-label | 1849](#)
- [performance-monitoring \(Protocols MPLS\) | 1851](#)
- [policing \(Protocols MPLS\) | 1853](#)
- [policing | 1854](#)
- [policy-multipath | 1855](#)
- [policy-statement | 1857](#)
- [pop | 1863](#)
- [pop-and-forward \(Protocols MPLS\) | 1864](#)
- [preference \(Protocols MPLS\) | 1865](#)
- [primary \(Protocols MPLS\) | 1867](#)
- [primary | 1868](#)
- [priority \(Protocols MPLS\) | 1869](#)
- [protection-revert-time | 1870](#)
- [push | 1871](#)

- random | 1872
- record | 1873
- remote-interface-switch | 1874
- remote-site-id | 1876
- retry-limit | 1877
- retry-timer | 1878
- revert-timer | 1879
- revert-timer | 1880
- resignal-minimum-bandwidth | 1881
- resolution-map | 1882
- responder (performance-monitoring) | 1883
- rpf-check-policy (Routing Options) | 1884
- rsvp-error-hold-time | 1885
- sampling (Protocols MPLS) | 1886
- sbfd | 1888
- secondary (Protocols MPLS) | 1889
- secondary | 1891
- segment | 1892
- segment-list | 1894
- select | 1899
- signal-bandwidth | 1900
- signaling | 1901
- site (Layer 2 Circuits) | 1902
- site-identifier (Layer 2 Circuits) | 1903
- smart-optimize-timer | 1904
- soft-preemption (Protocols MPLS) | 1905
- source-routing-path | 1906
- source-routing-path-template | 1909
- splitting-merging | 1911
- spring-te (Dynamic Tunnels) | 1913
- srgb-label-range | 1914
- srlg | 1915
- srlg-cost | 1916
- srlg-value | 1917

- standby | **1918**
- standby | **1919**
- static-label-switched-path | **1920**
- statistics (Protocols MPLS) | **1922**
- swap | **1924**
- switch-away-lsps | **1925**
- switching-type | **1926**
- sync-active-path-bandwidth | **1927**
- te-class-matrix | **1929**
- to | **1931**
- traceoptions (Protocols MPLS) | **1932**
- traffic-class (delay) | **1935**
- traffic-class (loss) | **1937**
- traffic-class (loss-delay) | **1939**
- traffic-engineering (Protocols MPLS) | **1941**
- traffic-engineering | **1943**
- traffic-engineering (Protocols BGP) | **1944**
- transit-lsp-association | **1946**
- ultimate-hop-popping | **1947**
- vrf-table-label | **1949**

abstract-hop

Syntax

```
abstract-hop abstract-hop-name {
    constituent-list constituent-list-name (include-any-list | include-all-list | exclude-all-list | exclude-any-list);
    operators (AND | OR);
}
```

Hierarchy Level

```
[edit logical systems logical-systems-name protocols mpls]
[edit protocols mpls]
```

Release Information

Statement introduced in Junos OS Release 17.1 for all platforms.

Description

Define router clusters or groups, similar to the sequence of real-hop constraints (strict or loose), as a sequence of abstract hops for setting up a label-switched path (LSP).

An abstract hop is a logical combination of the existing traffic engineering constraints, such as administrative groups, extended administrative groups, and Shared Risk Link Groups (SRLGs), along with the ordering property of real hops. As a result, when a sequence of abstract hops is used in a path constraint, ordering is achieved among the groups of routers that meet a logical combination of link or node attributes called constituent attributes. A path can use a combination of real and abstract hops as constraints.

Options

abstract-hop-name—Name of the abstract hop that is a logical combination of the existing traffic engineering constraints, such as administrative groups, extended administrative groups, and SRLGs, along with the ordering property of real hops.

constituent-list constituent-list-name—Name of the predefined constituent list to be included in defining the abstract hop. A constituent list enables you to define a set of constituent attributes that is identified with a user-defined name.

include-any-list—Satisfy any one of the attributes specified in the constituent list.

include-all-list—Satisfy all of the attributes specified in the constituent list.

exclude-all-list—Satisfy none of the attributes specified in the constituent list.

exclude-any-list—Fail to satisfy any one of the attributes specified in the constituent list.

operators—Specify the operation between constituent lists when more than one constituent list is included in the abstract hop definition.

AND—Satisfy all the constituent lists referenced in the abstract hop definition for the attached node to be a member of the abstract hop.

OR—Satisfy at least one of the constituent lists referenced in the abstract hop definition for the attached node to be a member of the abstract hop.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring Abstract Hops for MPLS LSPs | 441](#)

[constituent-list | 1700](#)

[show mpls abstract-hop-membership | 2288](#)

[show mpls lsp abstract-computation | 2358](#)

adaptive

Syntax

```
adaptive;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |  
  secondary) path-name],  
[edit protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

During reroute, do not double-count bandwidth on links shared by the old and new paths. Including this statement causes RSVP to use shared explicit (SE) reservation styles and assists in smooth transition during rerouting.

Default

The configured object is disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Adaptive LSP Configuration](#) | [587](#)

adjust-interval

Syntax

```
adjust-interval seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Specify the bandwidth reallocation interval.

Options

seconds—Bandwidth reallocation interval, in seconds.

Range: 300 through 315,360,000 seconds

Default: 86,400 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Automatic Bandwidth Allocation Interval](#) | 518

adjust-threshold

Syntax

```
adjust-threshold percent;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Specify in percentage how sensitive the automatic bandwidth adjustment for a label-switched path (LSP) is to changes in bandwidth utilization.

To specify the changes in the automatic bandwidth adjustment for a LSP in absolute value, use the [adjust-threshold-absolute](#) statement instead.

Options

percent—Bandwidth demand for the current bandwidth adjustment interval is determined and compared to the LSP's current bandwidth allocation. If the percentage difference in bandwidth is greater than or equal to the percentage specified by this statement, the LSP's bandwidth is adjusted to the current bandwidth demand.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Automatic Bandwidth Adjustment Threshold](#) | 520

adjust-threshold-absolute

Syntax

```
adjust-threshold-absolute bps;
```

Hierarchy Level

```
[edit logical-systems name protocols mpls label-switched-path name auto-bandwidth ],
[edit logical-systems name routing-instances name protocols mpls label-switched-path name auto-bandwidth ],
[edit protocols mpls label-switched-path name auto-bandwidth ],
[edit routing-instances name protocols mpls label-switched-path name auto-bandwidth ]
```

Release Information

Statement introduced before Junos OS Release 17.4R1 on all platforms.

Description

Specify in bits per second how sensitive the automatic bandwidth adjustment for a label-switched path (LSP) is to changes in the average LSP utilization.

The **adjust-threshold-absolute** statement works in conjunction with the **adjust-threshold** statement, which specifies the change in automatic bandwidth adjustment for an LSP as a percentage.

By triggering automatic bandwidth LSP resignaling based on absolute change in bandwidth instead of percentage bandwidth change, LSP resignaling can be optimized for both big and small LSPs at the same time.

Options

bps—Change in average LSP utilization to trigger automatic bandwidth adjustment in bits per second.

Default: 0 bps

Required Privilege Level

routing

RELATED DOCUMENTATION

[Configuring the Automatic Bandwidth Adjustment Threshold](#) | 520

adjust-threshold-activate-bandwidth

Syntax

```
adjust-threshold-activate-bandwidth bps;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced before Junos OS Release 14.1.

Description

Specify an absolute value to prevent automatic adjustment of signaled bandwidth and aggressive re-signaling of a label-switched path (LSP) when the actual bandwidth over the LSP is below the configured threshold, although the adjust-threshold percentage condition is satisfied.

Options

bps—Amount of bandwidth that is compared with the maximum of all traffic samples during an adjustment interval. If the maximum average bandwidth is less than this configured value, automatic bandwidth adjustment or re-signaling does not happen, even if the adjust-threshold percentage condition is satisfied.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Automatic Bandwidth Adjustment Threshold](#) | 520

adjust-threshold-overflow-limit

Syntax

```
adjust-threshold-overflow-limit number;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced in Junos OS Release 7.5.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Specify the number of consecutive bandwidth overflow samples before triggering a bandwidth adjustment.

Options

number—Number of consecutive bandwidth overflow samples.

Range: 1 through 65,535

Default: This feature is disabled by default.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring a Limit on Bandwidth Overflow and Underflow Samples](#) | 520

adjust-threshold-underflow-limit

Syntax

```
adjust-threshold-underflow-limit number;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced in Junos OS Release 11.3.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Specify the number of consecutive bandwidth underflow samples before triggering a bandwidth adjustment.

Options

number—Number of consecutive bandwidth underflow samples.

Range: 1 through 65,535

Default: This feature is disabled by default.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring a Limit on Bandwidth Overflow and Underflow Samples](#) | 520

admin-down

Syntax

```
admin-down;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 8.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Set a nonpacket GMPLS LSP to the administrative down state. This statement does not affect control path setup or data forwarding for packet LSPs.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Allowing Nonpacket GMPLS LSPs to Establish Paths Through Routers Running Junos OS](#) | 1259

admin-group (for Interfaces)

Syntax

```
admin-group [ group-names ];
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls interface interface-name],  
[edit protocols mpls interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Define administrative groups for an interface.

Options

group-names—One or more names of groups defined with the [admin-groups](#) statement at the [\[edit protocols mpls\]](#) hierarchy level.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Administrative Groups for LSPs | 502](#)

[admin-groups | 1670](#)

admin-group (for LSPs)

Syntax

```
admin-group {
  exclude [ group-names ];
  include-all [ group-names ];
  include-any [ group-names ];
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Define the administrative groups to include or exclude an LSP and a path's primary and secondary paths.

Options

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Administrative Groups for LSPs](#) | 502

admin-group-extended

Syntax

```
admin-group-extended {
  apply-groups group-value;
  apply-groups-except group-value;
  exclude [ group-values ];
  include-all [ group-values ];
  include-any [ group-values ];
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary | secondary)
  path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced in Junos OS Release 11.1.

Description

Specifies the group name and group identifier for an administrative group. The group identifier must be within the range of values specified by the **admin-groups-extended-range** statement. The extended administrative group values are global and must be identically configured on all the supported routers participating in the network. The domain-wide extended administrative groups database, learned from other routers through IGP flooding, is used by CSPF for path computation.

Options

apply-groups—Apply the specified administrative groups for the LSP or for the primary and secondary paths.

apply-groups-except—Exclude the specified administrative groups from the LSP or from the primary and secondary paths.

exclude—Define the administrative groups to exclude from an LSP or from the primary and secondary paths.

include-all—Require the LSP to traverse links that include all of the defined administrative groups.

include-any—Define the administrative groups to include for an LSP for the primary and secondary paths.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring Extended Administrative Groups for LSPs 504
Configuring Administrative Groups for LSPs 502
admin-groups-extended 1671
admin-groups-extended-range 1673

admin-groups

Syntax

```
admin-groups {  
    group-name group-value;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure administrative groups to implement link coloring of resource classes.

Options

group-name—Name of the group. You can assign up to 32 names. The names and their corresponding values must be identical across all routers within a single domain.

group-value—Value assigned to the group. The names and their corresponding values must be identical across all routers within a single domain.

Range: 0 through 31

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Administrative Groups for LSPs | 502](#)

[admin-group \(for Interfaces\) | 1666](#)

admin-groups-extended

Syntax

```
admin-groups-extended group-name {
  group-value group-identifier;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls interface interface-name],
[edit logical-systems logical-system-name routing-options],
[edit protocols mpls interface interface-name],
[edit routing-options]
```

Release Information

Statement introduced in Junos OS Release 11.1.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Specifies the group name and group identifier for an administrative group. The group identifier must be within the range of values specified by the **admin-groups-extended-range** statement. The extended administrative group values are global and must be identically configured on all the supported routers participating in the network. The domain-wide extended administrative groups database, learned from other routers through IGP flooding, is used by CSPF for path computation.

Options

group-name—The range of configurable values is between 32 and 4,294,967,295. The range maximum must be greater than the range minimum.

group-value group-identifier—The group identifier must be within the range of configurable values, 32 and 4,294,967,295.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Extended Administrative Groups for LSPs | 504](#)

[Configuring Administrative Groups for LSPs | 502](#)

admin-group-extended | 1668

admin-groups-extended-range | 1673

admin-groups-extended-range

Syntax

```
admin-groups-extended-range {
    maximum maximum-number;
    minimum minimum-number;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options],
[edit routing-options]
```

Release Information

Statement introduced in Junos OS Release 11.1.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Enables you to configure extended administrative groups, represented by a 32-bit value, expanding the number of administrative groups supported in the network beyond just 32. In MPLS traffic engineering, a link can be configured with a set of administrative groups (also known as colors or resource classes). Administrative groups are carried in IGPs (OSPFv2 and IS-IS) as a 32-bit value assigned to each link. By default, Juniper Networks routers interpret this 32-bit value as a bit mask with each bit representing a group. This normally limits each network to a total of 32 distinct administrative groups (value range 0 through 31).

The extended administrative groups configuration accepts a set of interfaces with a corresponding set of extended administrative group names. It converts the names into a set of 32-bit values and propagates this information into the IGP. The extended administrative group values are global and must be identically configured on all the supported routers participating in the network. The domain-wide extended administrative groups database, learned from other routers through IGP flooding, is used by CSPF for path computation.

Options

maximum *maximum-number*—The range of configurable values is between 32 and 4,294,967,295. The range maximum must be greater than the range minimum.

minimum *minimum-number*—The range of configurable values is between 32 and 4,294,967,295. The range maximum must be greater than the range minimum.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring Extended Administrative Groups for LSPs 504
Configuring Administrative Groups for LSPs 502
admin-group-extended 1668

advertise-mode (MPLS)

Syntax

```
advertise-mode (stub-alias | stub-proxy);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls egress-protection context-identifier context-id],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name egress-protection
context-identifier context-id],
[edit protocols mpls egress-protection context-identifier context-id],
[edit protocols mpls label-switched-path lsp-name egress-protection context-identifier context-id]
```

Release Information

Statement introduced in Junos OS Release 13.3.

Description

Configure the method for the interior gateway protocol (IGP) to advertise egress protection availability.

Egress protection availability is advertised in the IGP. Label protocols along with CSPF use this information to do egress protection.

Options

stub-alias—Context identifier has an alias.

In the alias method, the LSP end-point address has an explicit backup egress node where the backup node can be learned or configured on the penultimate hop node (PHN) of a protected LSP. With this model, the PHN of a protected LSP sets up the bypass LSP tunnel to back up the egress node by avoiding the primary egress node. This model requires a Junos OS upgrade in core nodes, but is flexible enough to support all traffic engineering constraints.

stub-proxy—Context-identifier has a stub proxy node.

A stub node is one that only appears at the end of an AS path, which means it does not provide transit service. In this mode, known as the virtual or proxy mode, the LSP end-point address is represented as a node with bidirectional links, with the LSP's primary egress node and backup egress node. With this representation, the penultimate hop of the LSP primary egress point can behave like a PLR in setting up a bypass tunnel to back up the egress by avoiding the primary egress node. This model has the advantage that you do not need to upgrade Junos OS on core nodes and thereby helps operators to deploy this technology.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Egress Protection for Layer 3 VPN Edge Protection Overview

Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP

advertisement-hold-time

Syntax

```
advertisement-hold-time seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Do not advertise when the LSP goes from up to down, for a certain period of time known as the hold time.

Options

seconds—Hold time, in seconds.

Range: 0 through 65,535 seconds

Default: 5 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Damping Advertisement of LSP State Changes | 529](#)

allow-fragmentation

Syntax

```
allow-fragmentation;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls path-mtu],  
[edit protocols mpls path-mtu]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Allow IP packets to be fragmented before they are encapsulated in MPLS.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Enabling Packet Fragmentation](#) | 805

always-mark-connection-protection-tlv

Syntax

```
always-mark-connection-protection-tlv;
```

Hierarchy Level

```
[edit logical-systems logical-systems-name protocols mpls interface interface-name],  
[edit protocols mpls interface interface-name]
```

Release Information

Statement introduced in Junos OS Release 10.2.

Description

(MX Series routers only) Enable you to switch an LSP away from a network node using a bypass LSP. This feature could be used in maintenance of active networks when a network device needs to be replaced without interrupting traffic passing through the network. The LSPs can be either static or dynamic.

This statement marks all OAM traffic transiting this interface in preparation for switching the traffic to an alternate path based on the OAM functionality. To switch traffic to the bypass LSP, you then need to configure the **switch-away-lsps** statement.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Switching LSPs Away from a Network Node | 799](#)

associate-backup-pe-groups

Syntax

```
associate-backup-pe-groups;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 9.0.

Description

Enable an LSP to monitor the status of its destination PE router. You can configure multiple backup PE router groups using the same router's address. Backup PE router groups provide ingress PE router redundancy when point-to-multipoint LSPs are configured for multicast distribution. A failure of this LSP indicates to all of the backup PE router groups that the destination PE router is down. This statement is not tied to a specific backup PE router group. It applies to all groups that are interested in the status of the LSP to the destination address.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Enabling Point-to-Point LSPs to Monitor Egress PE Routers](#) | 692

associate-lsp

Syntax

```
associate-lsp lsp-name {  
    from from-ip-address;  
}
```

Hierarchy Level

```
[edit protocols mpls label-switched-path lsp-name oam]
```

Release Information

Statement introduced in Junos OS Release 12.1.

Description

Configure associated bidirectional label-switched paths (LSPs) on the two ends of an LSP for sending and receiving GAL and G-Ach OAM messages.

Options

from *from-ip-address*—(Optional) Source address for the associated LSP configuration.

If omitted, this is derived from the **to** address of the ingress LSP configuration.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring the MPLS Transport Profile for OAM](#) | 1125

auto-bandwidth (MPLS Tunnel)

Syntax

```
auto-bandwidth {
  adjust-interval seconds;
  adjust-threshold percent;
  adjust-threshold-absolute;
  adjust-threshold-activate-bandwidth bps
  adjust-threshold-overflow-limit number;
  adjust-threshold-underflow-limit number;
  maximum-bandwidth bps;
  minimum-bandwidth bps;
  minimum-bandwidth-adjust-interval
  minimum-bandwidth-adjust-threshold-change
  minimum-bandwidth-adjust-threshold-value
  monitor-bandwidth;
  resignal-minimum-bandwidth
  sync-active-path-bandwidth
}
```

Hierarchy Level

```
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for QFX Series switches.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 Series switches.

Description

Allow an MPLS tunnel to automatically adjust its bandwidth allocation based on the volume of traffic flowing through the tunnel.

NOTE: In calculating the value for **Max AvgBW** (relative to the ingress LSP), the sample collected during make before break (MBB) is ignored to prevent inaccurate results. The first sample after a bandwidth adjustment, or after a change in the LSP ID (regardless of path change), is also ignored.

Options

adjust-threshold-absolute *adjust-threshold-absolute-value*—Configure an absolute value based threshold along with the percentage based threshold that helps avoid the bandwidth getting triggered for LSPs of both small and large bandwidth reservations.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Automatic Bandwidth Allocation for LSPs | 516](#)

[request mpls lsp adjust-autobandwidth | 2260](#)

[show mpls lsp autobandwidth | 2361](#)

auto-bandwidth (MPLS Statistics)

Syntax

```
auto-bandwidth;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls statistics],  
[edit protocols mpls statistics]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for QFX Series switches.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 Series switches.

Description

Collect statistics related to automatic bandwidth.

Required Privilege Level

routing and trace—To view this statement in the configuration.

routing-control and trace-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Automatic Bandwidth Allocation for LSPs | 516](#)

[Configuring MPLS to Gather Statistics | 386](#)

[statistics | 1922](#)

auto-policing

Syntax

```
auto-policing {
  class all (drop | loss-priority-high | loss-priority-low);
  class ctnumber (drop | loss-priority-high | loss-priority-low);
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced for QFX10000 Series switches in release 15.1X53-D40.

Description

Enable the automatic policing of all the MPLS LSPs on the router or logical system.

Options

class all—Apply the same policer action to all the class types (**ct0**, **ct1**, **ct2**, and **ct3**).

class ctnumber—Specific class type (**ct0**, **ct1**, **ct2**, or **ct3**) to which to apply a policer action.

Policer actions—You can specify the following policer actions:

Default: no action

- **drop**—Drop all packets.
- **loss-priority-high**—Set the packet loss priority (PLP) to high.
- **loss-priority-low**—Set the PLP to low.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[policing \(Protocols MPLS\) | 1853](#)

[Configuring Automatic Policers | 151v](#)

backup-pe-group

Syntax

```
backup-pe-group group-name {
    backups [ addresses ];
    local-address address;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options multicast],
[edit logical-systems logical-system-name routing-options multicast],
[edit routing-instances routing-instance-name routing-options multicast],
[edit routing-options multicast]
```

Release Information

Statement introduced in Junos OS Release 9.0.

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Description

Configure a backup provider edge (PE) group for ingress PE redundancy when point-to-multipoint label-switched paths (LSPs) are used for multicast distribution.

Options

group-name—Name of the group for PE backups.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Example: Configuring Ingress PE Redundancy*

bandwidth (Fast Reroute, Signaled, and Multiclass LSPs)

Syntax

```
bandwidth bps {
  ct0 bps;
  ct1 bps;
  ct2 bps;
  ct3 bps;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name fast-reroute],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
  secondary) path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name fast-reroute],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

When configuring an LSP, specify the traffic rate associated with the LSP.

When configuring fast reroute, allocate bandwidth for the reroute path. By default, no bandwidth is reserved for the rerouted path. The fast reroute bandwidth does not need to be identical to that allocated for the LSP itself.

When configuring a multiclass LSP, use the **ctnumber bandwidth** statements to specify the bandwidth to be allocated for each class type.

Options

bps—Bandwidth, in bits per second. You can specify this as an integer value. You can also use the abbreviations **k** (for a thousand), **m** (for a million), or **g** (for a billion).

Range: Any positive integer

Default: 0 (no bandwidth is reserved)

NOTE: On the ACX Series, *bps* is the only supported option.

ctnumber bps—Bandwidth for the specified class type, in bits per second. You can specify this as an integer value. If you do so, count your zeros carefully, or you can use the abbreviations **k** (for a thousand), **m** (for a million), or **g** (for a billion [also called a thousand million]).

Range: Any positive integer

Default: 0 (no bandwidth is reserved)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Fast Reroute | 473](#)

[Configuring the Bandwidth Value for LSPs | 515](#)

[Configuring Traffic-Engineered LSPs | 1121](#)

[Configuring Class-Type Bandwidth Constraints for Multiclass LSPs](#)

bandwidth (Static LSP)

Syntax

```
bandwidth bps;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name bypass],  
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],  
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name transit incoming-label],  
[edit protocols mpls static-label-switched-path lsp-name bypass],  
[edit protocols mpls static-label-switched-path lsp-name ingress],  
[edit protocols mpls static-label-switched-path lsp-name transit incoming-label]
```

Release Information

Statement introduced in Junos OS Release 10.1.

Description

When configuring a static LSP, specify the traffic rate associated with the LSP.

Options

bps—Bandwidth, in bits per second. You can specify this as an integer value. You can also use the abbreviations **k** (for a thousand), **m** (for a million), or **g** (for a billion).

Range: Any positive integer

Default: 0 (no bandwidth is reserved)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Static LSPs](#) | 573

bandwidth-model

Syntax

```
bandwidth-model {
  extended-mam;
  mam;
  rdm;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls diffserv-te],
[edit protocols mpls diffserv-te]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Configure the bandwidth model for differentiated services. Note that you cannot configure both bandwidth models at the same time.

Options

extended-mam—The extended maximum allocation model (MAM) is a bandwidth model based on MAM.

mam—The MAM is defined in RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*.

rdm—The Russian dolls bandwidth allocation model (RDM) is defined in RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*. RDM makes efficient use of bandwidth by allowing the class types to share bandwidth.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Bandwidth Model](#) | 1116

bandwidth-percent

Syntax

```
bandwidth-percent percentage;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name fast-reroute],  
[edit protocols mpls label-switched-path lsp-name fast-reroute]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure the percentage of bandwidth to reserve for the detour path in case the primary path for a traffic engineered LSP or a multiclass LSP fails. The percentage configured indicates the percentage of the protected path's bandwidth that is reserved for the detour path.

Options

percentage—The percentage of the protected path's bandwidth that is reserved for the detour path.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Fast Reroute | 473](#)

[Configuring Fast Reroute for Traffic-Engineered LSPs | 1122](#)

[Configuring Fast Reroute for Multiclass LSPs](#)

bfd-liveness-detection (Protocols MPLS)

Syntax

```

bfd-liveness-detection {
  failure-action {
    make-before-break teardown-timeout seconds;
    teardown;
  }
  minimum-interval milliseconds;
  minimum-receive-interval milliseconds;
  minimum-transmit-interval milliseconds;
  multiplier detection-time-multiplier;
}

```

Hierarchy Level

```

[edit protocols mpls label-switched-path lsp-name oam],
[edit protocols mpls oam]

```

Release Information

Statement introduced in Junos OS Release 7.6.

failure-action option added in Junos OS Release 8.5.

Statement introduced in Junos OS Release 12.2 for EX Series switches.

Description

Enable Bidirectional Forwarding Detection (BFD) for all of the MPLS LSPs or for just a specific LSP.

Options

minimum-interval—Minimum transmit and receive interval.

Range: 50 through 255,000 milliseconds

Default: 50

minimum-receive-interval—Minimum receive interval.

Range: 50 through 255,000 milliseconds

Default: 50

minimum-transmit-interval—Minimum transmit interval.

Range: 50 through 255,000 milliseconds

Default: 50

multiplier—Detection time multiplier.

Range: 1 through 255

Default: 3

The **failure-action** statement is explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring BFD for MPLS IPv4 LSPs | 142](#)

[Configuring Bidirectional Forwarding Detection for MPLS \(CLI Procedure\) | 135](#)

bfd-liveness-detection (LSP)

Syntax

```

bfd-liveness-detection {
  minimum-interval milliseconds;
  multiplier multiplier;
  no-router-alert-option;
  sbfd {
    remote-discriminator remote-discriminator;
  }
}

```

Hierarchy Level

[edit protocols source-packet-routing [segment-list](#)],

[edit protocols source-packet-routing source-routing-path *lsp-name* primary *segment-list-name*],

[edit protocols source-packet-routing source-routing-path *lsp-name* secondary *segment-list-name*]

Release Information

Statement introduced in Junos OS Release 18.4R1.

Support at the following hierarchy levels introduced in Junos OS Release 19.1R1: **[edit protocols source-packet-routing source-routing-path *lsp-name* primary *segment-list-name*]**, and **[edit protocols source-packet-routing source-routing-path *lsp-name* secondary *segment-list-name*]**.

NOTE: Starting in Junos OS Release 19.1R1, the **bfd-liveness-detection** statement is not supported at the **[edit protocols source-packet-routing [segment-list](#)]** hierarchy level.

Description

Bidirectional forwarding detection options.

Options

minimum-interval—Minimum transmit and receive interval (milliseconds).

Range: 1 through 255000

multiplier—Detection time multiplier.

Default: 3

Range: 1 through 255

no-router-alert-option—Do not set the Router Alert option in IP header.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing

class-of-service (Protocols MPLS)

Syntax

```
class-of-service class-of-service cos-value;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Class-of-service (CoS) value given to all packets in the LSP.

The CoS value might affect the scheduling or queuing algorithm of traffic traveling along an LSP.

Options

cos-value—CoS value. A higher value typically corresponds to a higher level of service.

Range: 0 through 7

Default: If you do not specify a CoS value, the IP precedence bits from the packet's IP header are used as the packet's CoS value.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Class of Service for MPLS LSPs](#) | 1213

[Configuring the Ingress Router for Static LSPs | 574](#)[Configuring the Intermediate \(Transit\) and Egress Routers for Static LSPs | 577](#)

compute-options

Syntax

```
compute-options;
```

Hierarchy Level

```
[edit protocols source-packet-routing]
```

Release Information

Statement introduced in Junos OS Release 19.2R1-S1 on MX Series and PTX Series routers.

Description

Configure compute options applicable to all the computed paths.

Required Privilege Level

routing

RELATED DOCUMENTATION

[Enabling Distributed CSPF for Segment Routing LSPs | 700](#)[compute-profile | 1697](#)

compute-profile

Syntax

```
compute-profile name {
  protected {
    mandatory;
  }
  unprotected {
    mandatory;
  }
  admin-group include-any [ include-any ... ] include-all [ include-all ... ] exclude [ exclude ... ];
  compute-segment-list compute-segment-list;
  maximum-computed-segment-lists maximum-computed-segment-lists;
  maximum-segment-list-depth maximum-segment-list-depth;
  metric-type {
    (igp | te);
  }
  no-label-stack-compression;
}
```

Hierarchy Level

```
[edit protocols source-packet-routing]
```

Release Information

Statement introduced in Junos OS Release 19.2R1-S1 on MX Series and PTX Series routers.

Description

Configure the compute profile for dynamically computed paths. You can use a compute profile to logically group the computation constraints. These compute profiles are referenced by the segment routing paths for computing the primary and secondary segment routing LSPs.

Options

name—Name of the computation-profile.

protected—Choose protected labels if available.

Values:

- **mandatory**—Mandatorily choose protected labels.

unprotected—Choose unprotected labels if available.

Values:

- **mandatory**—Mandatorily choose unprotected labels.

compute-segment-list—Name of the compute type segment list.

maximum-computed-segment-lists—Maximum number of segment-lists (ECMP paths) to be computed.

Range: 1 through 128

maximum-segment-list-depth—Maximum depth of computed path.

Range: 1 through 16

metric-type—Specify the metric type used for computation.

Values:

- **igp**—Interior gateway protocol metric.
- **te**—Traffic-engineering metric.

no-label-stack-compression—Provide fully expanded path, using adjacency segment identifiers.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing

RELATED DOCUMENTATION

[Enabling Distributed CSPF for Segment Routing LSPs | 700](#)

[compute-options | 1696](#)

connections (MPLS)

Syntax

```
connections {  
  remote-interface-switch connection-name {  
    interface interface-name.unit-number;  
    transmit-lsp label-switched-path;  
    receive-lsp label-switched-path;  
  }  
}
```

Hierarchy Level

[edit protocols]

Release Information

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Define the connection between two circuits in a CCC connection.

The remaining statements are explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring MPLS on EX8200 and EX4500 Switches](#) | 41

constituent-list

Syntax

```
constituent-list constituent-list-name {
  (administrative-group [ group-names ] | administrative-group-extended [ extended-administrative-group-names ] |
  srlg [ srlg-names ] );
}
```

Hierarchy Level

```
[edit logical systems logical-systems-name protocols mpls]
[edit protocols mpls]
```

Release Information

Statement introduced in Junos OS Release 17.1 for all platforms.

Description

Create a list of traffic engineering attributes called constituent attributes, which are the link and node attributes whose logical combination makes up an abstract hop. The constituent attributes are listed under administrative groups, extended administrative groups, and Shared Risk Link Groups (SRLGs).

Options

constituent-list-name—Name of the constituent list that includes constituent traffic engineering attributes for use in the abstract hop definition.

administrative-group [group-names]—Names of administrative groups to include in the constituent list.

administrative-group-extended [extended-administrative-group-names]—Names of extended administrative groups to include in the constituent list.

srlg [srlg-names]—Names of SRLGs to include in the constituent list.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring Abstract Hops for MPLS LSPs | 441](#)

[abstract-hop | 1656](#)

[show mpls abstract-hop-membership | 2288](#)

container-label-switched-path

Syntax

```
container-label-switched-path lsp-name {  
    disable;  
    description description;  
    label-switched-path-template;  
    splitting-merging;  
    suffix string;  
    to ip-address;  
}
```

Hierarchy Level

```
[edit protocols mpls]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.

Description

Configure a multi-label-switched path (LSP) tunnel between the ingress and the egress routers. The container LSP consists of several member LSPs to the same destination.

Options

disable—Disable MPLS container-label-switched path.

description *description*—Text describing the container LSP.

suffix *string*—Suffix to generate names of member LSPs of the container LSP.

to *ip-address*—IP address of the egress router.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

corouted-bidirectional

Syntax

```
corouted-bidirectional;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify that the label-switched path be established as a corouted bidirectional packet LSP. You cannot configure this statement at the same time as the **corouted-bidirectional-passive** statement.

Default

This statement is disabled by default.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Corouted Bidirectional LSPs | 530](#)

[corouted-bidirectional-passive | 1703](#)

corouted-bidirectional-passive

Syntax

```
corouted-bidirectional-passive;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify that the label-switched path be a passive LSP associated with a bidirectional LSP when it is signaled at the ingress router. This passive LSP enables the MPLS application to utilize the reverse LSP. You cannot configure this statement at the same time as the **corouted-bidirectional** statement.

Default

This statement is disabled by default.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Corouted Bidirectional LSPs | 530](#)

[corouted-bidirectional | 1702](#)

credibility

Syntax

```
credibility {  
    direct;  
    isis-level-1;  
    isis-level-2;  
    ospf;  
    static;  
    unknown;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls traffic-engineering database export],  
[edit protocols mpls traffic-engineering database export]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Statement introduced in Junos OS Release 17.1R1 on QFX Series and QFX10000 switches.

Description

Configure preference values for entries from BGP-TE to the traffic engineering database. A protocol with a higher credibility value is preferred over a protocol with a lower credibility value.

The credibility order for the BGP-TE protocols is as follows:

- **Unknown**—80
- **OSPF**—81
- **ISIS Level 1**—82
- **ISIS Level 2**—83
- **Static**—84
- **Direct**—85

Options

direct— Entries sourced from directly connected links.

isis-level-1—Entries sourced from IS-IS Level 1.

isis-level-2—Entries sourced from IS-IS Level 2.

ospf—Entries sourced from OSPF.

static—Entries sourced from static configuration.

unknown—Entries sourced from unknown entities.

Range: 0 through 512

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [traffic-engineering](#) | **1941**

database

Syntax

```
database {  
    export;  
    import;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls traffic-engineering],  
[edit protocols mpls traffic-engineering]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Statement introduced in Junos OS Release 17.1R1 for QFX Series and QFX10000 switches.

Description

Include link and node entries from the traffic engineering database into the **lsdist.0** routing information base (RIB), so it gets picked up by the BGP export policy.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [traffic-engineering](#) | **1941**

delay (querier)

Syntax

```
delay {
  traffic-class tc-value {
    average-sample-size sample size;
    padding-size size;
    query-interval milliseconds;
    rtt-delay-threshold rtt threshold value;
    twcd-delay-threshold twcd threshold value;
  }
}
```

Hierarchy Level

```
[edit protocols mpls oam performance-monitoring querier],
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring querier],
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring querier],
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring querier]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure delay measurement options.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Pro-Active Loss and Delay Measurements | 416](#)

[On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview | 387](#)

[performance-monitoring \(Protocols MPLS\) | 1851](#)

delay (responder)

Syntax

```
delay {
  min-query-interval milliseconds;
}
```

Hierarchy Level

```
[edit protocols mpls oam performance-monitoring responder],
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring responder],
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring responder],
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring responder]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure delay measurement options.

Options

min-query-interval *milliseconds*—(Optional) Specify the minimum query interval that the responder supports. If the minimum query interval of the responder is greater than the query interval configured at querier, the effective message query rate will be the minimum query interval configured for the responder.

Default: 10 seconds

Range: 1000 through 4294967295 milliseconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Pro-Active Loss and Delay Measurements](#) | 416

[On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview](#) | 387

[performance-monitoring \(Protocols MPLS\)](#) | 1851

description (Protocols MPLS)

Syntax

```
description text;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name bypass],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name transit incoming-label],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls static-label-switched-path lsp-name bypass],
[edit protocols mpls static-label-switched-path lsp-name ingress],
[edit protocols mpls static-label-switched-path lsp-name transit incoming-label]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Provides a textual description of the LSP. Enclose any descriptive text that includes spaces in quotation marks (" "). Any descriptive text you include is displayed in the output of the **show mpls lsp detail** command and has no effect on the operation of the LSP.

Options

text—Provide a textual description of the LSP. The description text can be no more than 80 characters in length.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring a Text Description for LSPs](#) | 498

description (Protocols Layer 2 VPN)

Syntax

```
description text;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn site site-name
  interface interface-name],
[edit routing-instances routing-instance-name protocols l2vpn site site-name interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Description

Describe the VPN or virtual private LAN service (VPLS) routing instance.

Options

text—Provide a text description. If the text includes one or more spaces, enclose it in quotation marks (" "). Any descriptive text you include is displayed in the output of the **show route instance detail** command and has no effect on operation.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Site](#)

[Configuring an MPLS-Based Layer 2 VPN \(CLI Procedure\)](#)

deselect-on-bandwidth-failure

Syntax

```
deselect-on-bandwidth-failure {  
    tear-lsp;  
}
```

Hierarchy Level

```
[edit protocols mpls],  
[edit protocols mpls label-switched-path path-name]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Deselect an active path if it does not meet the auto-bandwidth criteria required for path selection. The **deselect-on-bandwidth-failure** statement does not apply to static bandwidth.

Options

tear-lsp— Bring down an active path if none of the paths are able to reserve the required bandwidth.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

diffserv-te

Syntax

```
diffserv-te {  
  bandwidth-model {  
    extended-mam;  
    mam;  
    rdm;  
  }  
  te-class-matrix {  
    tnumber {  
      priority priority;  
      traffic-class {  
        cnumber priority priority;  
      }  
    }  
  }  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify properties for differentiated services in traffic engineering.

Options

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

disable (Protocols MPLS)

Syntax

```
disable;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit logical-systems logical-system-name protocols mpls interface interface-name],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls],  
[edit protocols mpls interface interface-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Disable the functionality of the configured object.

Default

The configured object is enabled (operational) unless explicitly disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[label-switched-path](#) | 1775

[interface](#) | 1770

dual-transport

Syntax

```
dual-transport {  
    inet-lsr-id inet-lsr-id;  
    inet6-lsr-id inet6-lsr-id;  
}
```

Hierarchy Level

[edit protocols ldp]

Release Information

Statement introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series.

Description

Configure to allow Junos LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. **inet-lsr-id** and **inet6-lsr-id** are the two LSR IDs that have to be configured to establish an LDP session over IPv4 and IPv6 TCP transport. These two IDs should be non-zero and must be configured with different values.

Options

inet-lsr-id *inet-lsr-id*— Configure the LSR ID to establish an LDP session over IPv4 TCP transport.

inet6-lsr-id *inet6-lsr-id*— Configure the LSR ID to establish an LDP session over IPv6 TCP transport.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[LDP Native IPv6 Support Overview | 860](#)

[Example: Configuring LDP Native IPv6 Support | 979](#)

[Configuring LDP Native IPv6 Support | 977](#)

[family \(Protocols LDP\) | 1736](#)

dynamic (Source Packet Routing)

Syntax

```
dynamic {  
  protected {  
    mandatory;  
  }  
  unprotected {  
    mandatory;  
  }  
}
```

Hierarchy Level

[edit protocols source-packet-routing [segment-list](#)]

Release Information

Statement introduced in Junos OS Release 19.2R1 on all platforms.

Description

Enable dynamic computation of segment routing label-switched paths (LSPs) based on tunnel destination and translation service to fetch the corresponding segment identifiers (SIDs).

NOTE:

When the dynamic statement is enabled, all the next hops must have an IP address assigned as a minimum configuration. In the case of segment-lists, if a next hop has both IP address and label configured, then the configured label is retained.

NOTE:

- Because translation service use IGP instance of traffic-engineered database (TED), you must include the **igp-topology** statement at the **[edit protocols isis traffic-engineering]** hierarchy level for successful translation.
- The **auto-translation** and **dynamic** statements are mutually exclusive, and only either of them can be configured under a segment-list.

Options

protected—(Optional) Ensures a protected adjacency SID is used for the links of the LSP.

unprotected—(Optional) Ensures an unprotected adjacency SID is used for the links of the LSP.

mandatory—(Optional) Enabled translation to fail if the specified type of adjacency SID cannot be found for a link. This option does not have effect on node SIDs.

Required Privilege Level

routing

RELATED DOCUMENTATION

| [Understanding Static Segment Routing LSP in MPLS Networks](#) | 707

dynamic-tunnels

Syntax

```
dynamic-tunnels tunnel-name {
  destination-networks prefix;
  gre;
  rsvp-te entry-name {
    destination-networks network-prefix;
    label-switched-path-template (Multicast) {
      default-template;
      template-name;
    }
  }
  source-address address;
  spring-te;
  traceoptions;
  tunnel-attributes name {
    dynamic-tunnel-anchor-pfe dynamic-tunnel-anchor-pfe;
    dynamic-tunnel-anti-spoof (off | on);
    dynamic-tunnel-gre-key
    dynamic-tunnel-mtu dynamic-tunnel-mtu;
    dynamic-tunnel-source-prefix dynamic-tunnel-source-prefix;
    dynamic-tunnel-type V4oV6;
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],
[edit logical-systems logical-system-name routing-options],
[edit routing-instances routing-instance-name routing-options],
[edit routing-options]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Configure a dynamic tunnel between two PE routers.

NOTE: ACX Series routers do not support the **gre** statement.

Configure dynamic IPv4-over-IPv6 tunnels and define their attributes to forward IPv4 traffic over an IPv6-only network. IPv4 traffic is tunneled from customer premises equipment to IPv4-over-IPv6 gateways. You must also configure **extended-nexthop** option at **[edit protocols bgp family inet unicast]** hierarchy level to allow BGP to route IPv4 address families over an IPv6 session.

Options

gre—Enable dynamic generic routing encapsulation type tunnel mode for IPv4

Values:

- **next-hop-based-tunnel**—Enable next hop base dynamic-tunnel for steering IPv4 traffic with IPv6 next hop address.

source-address—Specify the source address of the tunnel.

tunnel-name—Name of the dynamic tunnel.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

<i>extended-nexthop</i>
<i>tunnel-attributes</i>
<i>Example: Configuring a Two-Tiered Virtualized Data Center for Large Enterprise Networks</i>
<i>Understanding Redistribution of IPv4 Routes with IPv6 Next Hop into BGP</i>

egress-protection (MPLS)

Syntax

```
egress-protection {
  context-identifier context-id {
    primary | protector;
    metric igp-metric-value;
    advertise-mode (stub-alias | stub-proxy);
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 10.4.

Options **primary**, **protector**, and **metric** introduced in Junos OS Release 11.4R3.

Option **advertise-mode** introduced in Junos OS Release 13.3.

Description

Enables an Edge Protection Virtual Circuit (EPVC) for the MPLS protocol.

Options

context-identifier *context-id-ip-address*—(Optional) The context identifier IPv4 address.

metric *igp-metric-value*—(Optional) The IGP metric value ranging from **2** through **16777215**.

(primary | protector)—On the primary PE router, configure as type **primary**. On the protector PE router, configure as type **protector**.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring Egress Protection for Layer 3 VPN Services

| *Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP*

encapsulation-type (Layer 2 VPNs)

Syntax

```
encapsulation-type (atm-aal5 | atm-cell | atm-cell-port-mode | atm-cell-vc-mode | atm-cell-vp-mode | cesop |
  cisco-hdlc | ethernet | ethernet-vlan | frame-relay | frame-relay-port-mode | interworking | ppp | satop-e1 | satop-e3
  | satop-t1 | satop-t3);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols l2circuit neighbor address interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn neighbor address],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls],
[edit protocols l2circuit neighbor address interface interface-name],
[edit routing-instances routing-instance-name protocols l2vpn],
[edit routing-instances routing-instance-name protocols l2vpn neighbor address],
[edit routing-instances routing-instance-name protocols vpls],
[edit routing-instances routing-instance-name protocols vpls neighbor address]
```

Release Information

Statement introduced in Junos OS Release 9.2.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Description

Specify the type of Layer 2 traffic originating from the CE device. Only the **ethernet** and **ethernet-vlan** encapsulation types are supported for VPLS. Not all encapsulation types are supported on the switches. See the switch CLI.

Options

atm-aal5—ATM Adaptation Layer (AAL/5)

atm-cell—ATM cell relay

atm-cell-port-mode—ATM cell relay port promiscuous mode

atm-cell-vc-mode—ATM VC cell relay nonpromiscuous mode

atm-cell-vp-mode—ATM virtual path (VP) cell relay promiscuous mode

cesop—CESOP-based Layer 2 VPN

cisco-hdlc—Cisco Systems-compatible HDLC

ethernet—Ethernet

ethernet-vlan—Ethernet VLAN

frame-relay—Frame Relay

frame-relay-port-mode—Frame Relay port mode

interworking—Layer 2.5 interworking VPN

ppp—PPP

satsop-e1—SATSOP-E1-based Layer 2 VPN

satsop-e3—SATSOP-E3-based Layer 2 VPN

satsop-t1—SATSOP-T1-based Layer 2 VPN

satsop-t3—SATSOP-T3-based Layer 2 VPN

Default: For VPLS networks, the default encapsulation type is **ethernet**.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring the Encapsulation Type

Configuring VPLS Routing Instances

Configuring the Encapsulation Type for the Layer 2 Circuit Neighbor Interface

Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)

encoding-type

Syntax

```
encoding-type (ethernet | packet | pdh | sonet-sdh);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name lsp-attributes],  
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Specify the encoding type of payload carried by the LSP. It can be any of the following:

- **ethernet**—Ethernet
- **packet**—Packet
- **pdh**—Plesiochronous digital hierarchy (PDH)
- **sonet-sdh**—SONET/SDH

Default

packet

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Encoding Type](#) | 1257

entropy-label

Syntax

```
entropy-label {  
    ingress-policy ingress-policy-name;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],
```

Release Information

Statement introduced in Junos OS Release 14.1.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 Series switches.

Description

Assists the transit router in load-balancing MPLS traffic across ECMP paths or Link Aggregation groups by introducing the entropy label to the MPLS label stack. The entropy label allows routers to load balance MPLS traffic by using a hash-input without the need to perform deep packet inspection. Deep packet inspection requires more of the router's processing power and is not a capability shared by all routers.

Options

The other statements are explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Entropy Label for LSPs](#) | 533

entropy-label

Syntax

```
entropy-label {
    import policy-name;
    no-next-hop-validation;
}
```

Hierarchy Level

```
[edit logical-systems logical-system name protocols bgp family inet labeled-unicast],
[edit logical-systems logical-system name protocols bgp group group-name family inet labeled-unicast],
[edit logical-systems logical-system name protocols bgp group group-name neighbor address labeled-unicast],
[edit protocols bgp family inet labeled-unicast],
[edit protocols bgp group group-name family inet labeled-unicast],
[edit protocols bgp group group-name neighbor address labeled-unicast]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 Series switches.

Description

Insert the entropy label into the BGP labeled unicast LSP packets, which assists the transit router in load-balancing BGP traffic across equal-cost multipaths or link aggregation groups. The ingress label edge router inspects the flow information of a packet and maps it to an entropy label, which is inserted into the BGP label stack. LSRs in the core use this entropy label as the key to hash the packet and direct it to the correct path.

Options

import *policy-name*— (Optional) Specify a policy that lists the routes that allow the use of entropy labels.

no-next-hop-validation—(Optional) Do not validate the next-hop field in the entropy label capability attribute against the route next hop.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

labeled-unicast

[policy-statement](#) | 1857

Configuring an Entropy Label for a BGP Labeled Unicast LSP

[Example: Configuring an Entropy Label for a BGP Labeled Unicast LSP](#) | 534

Understanding Entropy Label for BGP Labeled Unicast LSP

ethernet-vlan (Protocols Link Management)

Syntax

```
ethernet-label {  
    vlan-id-range vlan-id-range;  
}
```

Hierarchy Level

```
[edit protocols link-management te-link te-link-name]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Description

Specify the TE-link to be used for Layer 2 VLAN label-switched path (LSP).

Options

vlan-id-range *vlan-id-range*—Pool of VLAN IDs.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

ether-pseudowire

Syntax

```
ether-pseudowire {  
    zero-control-word;  
}
```

Hierarchy Level

[edit forwarding-options enhanced-hash-key family mpls]

Release Information

Statement introduced in Junos OS Release 16.1 for the MX Series.

Description

Load-balance IP over Ethernet pseudowire. Presence of zero-control-word in the payload indicates an Ethernet frame.

zero-control-word— Precedes Ethernet packet to indicate the start Ethernet frame in an MPLS ether-pseudowire payload.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[enhanced-hash-key](#)

[hash-key](#)

[family mpls | 1737](#)

[MPLS Encapsulated Payload Load-balancing Overview | 186](#)

exclude (for Administrative Groups)

Syntax

```
exclude [ group-names ];
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name admin-group],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary | secondary) path-name  
  admin-group],  
[edit protocols mpls label-switched-path lsp-name admin-group],  
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name admin-group]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Define the administrative groups to exclude for an LSP or for a path's primary and secondary paths.

Options

group-names—Names of one or more groups defined with the **admin-groups** statement.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Administrative Groups for LSPs | 502](#)

exclude (for Fast Reroute)

Syntax

```
(exclude [ group-names ] | no-exclude);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name fast-reroute],  
[edit protocols mpls label-switched-path lsp-name fast-reroute]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

Description

Control exclusion of administrative groups:

- **exclude**—Define the administrative groups to exclude for fast reroute.
- **no-exclude**—Disable administrative group exclusion.

Options

group-names—Names of one or more groups defined with the **admin-groups** statement.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Fast Reroute | 473](#)

[admin-groups | 1670](#)

exclude-srlg

Syntax

```
exclude-srlg;
```

Hierarchy Level

```
[edit protocols mpls],  
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls label-switched-path path-name],  
[edit logical-systems logical-system-name protocols mpls label-switched-path path-name],  
[edit protocols rsvp interface interface-name link-protection],  
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],  
[edit protocols rsvp interface interface-name link-protection bypass destination],  
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection bypass destination]
```

Release Information

Statement introduced in Junos OS Release 11.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Exclude Shared Risk Link Group (SRLG) links for the secondary path for critical links where it is imperative to keep the secondary and primary label-switched paths completely disjoint from any common SRLG.

When specified, the Constrained Shortest Path First (CSPF) algorithm excludes any link belonging to the set of SRLGs in the primary path. When not specified and if a link belongs to the set of SRLGs in the primary path, CSPF adds the SRLG cost to the metric, but still accepts the link for computing the path.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Excluding SRLG Links Completely for the Secondary LSP](#) | 213

exp

Syntax

```
exp classifier-name {
  import (classifier-name | default);
  forwarding-class class-name {
    loss-priority level {
      code-points [aliases] [3-bit-patterns];
    }
  }
}
```

Hierarchy Level

```
[edit class-of-service classifiers],
  [edit class-of-service code-point-aliases],
  [edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules],
  [edit class-of-service rewrite-rules]
```

Release Information

Statement introduced in Junos OS Release 10.1 for EX Series switches.

Description

Define the experimental bits (EXP) code point mapping that is applied to MPLS packets. You can define an **exp** classifier only on EX3200 switches, EX4200 and EX8200 standalone switches, and EX8200 Virtual Chassis. You can bind an **exp** rewrite rule on EX8200 standalone switches and EX8200 Virtual Chassis.

EX Series switches support only one EXP code mapping on the switch (either default or custom). It is applied globally and implicitly to all the MPLS-enabled interfaces on the switch. You cannot bind it or disable it on individual interfaces.

Options

classifier-name—Name of the classifier.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Understanding Using CoS with MPLS Networks on EX Series Switches | 1224](#)

[Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect | 73](#)

[Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS | 67](#)

[Configuring CoS on Provider Switches of an MPLS Network | 1223](#)

expand-loose-hop

Syntax

```
expand-loose-hop;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit protocols mpls]
```

Release Information

Statement introduced in Junos OS Release 7.6.

Point-to-multipoint LSP support introduced in Junos OS Release 11.2.

Description

Allow an LSP to traverse multiple OSPF areas within a service provider's network.

Allows a point-to-multipoint LSP to span multiple domains in a network. Effectively, this allows you to configure one or more sub-LSPs (branches) in separate network domains. Examples of such domains include OSPF areas and autonomous systems (ASs). A sub-LSP of an inter-domain point-to-multipoint LSP can be intra-area, inter-area, or inter-AS, depending on the location of the egress node (leaf) with respect to the ingress node (source). Only OSPF areas are supported for inter-domain point-to-multipoint LSPs. IS-IS levels are not supported.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Enabling Interarea Traffic Engineering | 1061](#)

[Configuring Inter-Domain Point-to-Multipoint LSPs | 687](#)

explicit-null (Protocols MPLS)

Syntax

```
explicit-null;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Advertise label 0 to the egress router of an LSP.

Default

If you do not include the **explicit-null** statement in the MPLS configuration, label 3 (implicit null) is advertised.

NOTE: Junos OS does not support explicit null routes with next hops to virtual tunnel (vt-) interfaces.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring RSVP to Pop the Label on the Ultimate-Hop Router](#) | 810

export (MPLS Traffic engineering database)

Syntax

```
export {  
  credibility;  
  policy policy-name;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls traffic-engineering database],  
[edit protocols mpls traffic-engineering database]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Description

Configure the traffic engineering database export-related parameters.

Options

policy *policy-name*—Name of the export policy.

The remaining statement is explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [traffic-engineering](#) | 1941

failure-action (Protocols MPLS)

Syntax

```
failure-action {  
    make-before-break teardown-timeout seconds;  
    teardown;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls oam bfd-liveness-detection],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name oam bfd-liveness-detection],  
[edit protocols mpls label-switched-path lsp-name oam bfd-liveness-detection],  
[edit protocols mpls oam bfd-liveness-detection]
```

Release Information

Statement introduced in Junos OS Release 9.4.

Description

Configure route and next-hop properties in the event of a Bidirectional Forwarding Detection (BFD) protocol session failure event on an RSVP label-switched path (LSP). The failure event could be an existing BFD session that has gone down or a BFD session that never came up. RSVP adds back the route or next hop when the relevant BFD session comes back up.

Options

make-before-break—When a BFD session fails for an RSVP LSP, an attempt is made to signal a new LSP path before tearing down the old LSP path.

teardown—When a BFD session fails for an RSVP LSP, the associated LSP path is taken down and resigaled immediately.

teardown-timeout *seconds*—When you configure the **make-before-break** option, you can specify a time in seconds for the **teardown-timeout** option. At the end of the time specified, the associated RSVP LSP is automatically torn down and resigaled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

family

Syntax

```
family {  
    inet;  
    inet6;  
}
```

Hierarchy Level

```
[edit protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series.

Description

Configure the address family as inet for IPv4 or inet6 for IPv6, or both. If the address family is not configured, then the default address family is IPv4.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[LDP Native IPv6 Support Overview | 860](#)

[Example: Configuring LDP Native IPv6 Support | 979](#)

[Configuring LDP Native IPv6 Support | 977](#)

[dual-transport | 1714](#)

family mpls

Syntax

```
family mpls {
  all-labels;
  label-1;
  label-2;
  label-3;
  no-labels;
  no-label-1-exp;
  payload {
    ether-pseudowire {
      zero-control-word;
    }
    ip {
      disable;
      layer-3-only;
      port-data {
        source-msb;
        source-lsb;
        destination-msb;
        destination-lsb;
      }
    }
  }
}
```

Hierarchy Level

[edit forwarding-options hash-key]

Release Information

Statement introduced before Junos OS Release 7.4.

no-label-1-exp option introduced in Junos OS Release 8.0.

label-3 and **no-labels** options introduced in Junos OS Release 8.1.

ether-pseudowire statement introduced in Junos OS Release 9.1 (M320 and T Series routers only); support extended to M120 and MX Series routers in Junos OS Release 9.4.

all-labels and **payload ip disable** options introduced in Junos OS Release 12.1X48R2. (PTX Series Packet Transport Routers only).

zero-control-word option introduced in Junos OS Release 16.1 for the M Series, MX Series, and PTX Series.

Description

For aggregated Ethernet and SONET/SDH interfaces only, configure load balancing based on MPLS labels and payload. Only the IPv4 protocol is supported.

Options

family mpls—(Aggregated Ethernet interfaces, aggregated SONET/SDH interfaces, and multiple equal-cost MPLS next hops only) Incorporate MPLS label and payload information into the hash key for per-flow load balancing. Only the IPv4 protocol is supported.

- **all-labels**—(PTX Series Packet Transport Routers only) Up to eight MPLS labels are included in the hash key to identify the uniqueness of a flow in the Packet Forwarding Engine. This is the default setting.
- **label-1**—(M120, M320, MX Series, and T Series routers only) Include the first MPLS label into the hash key. This is used for a one-label packet for per-flow load balancing IPv4 VPLS traffic based on IP information and MPLS labels.
- **label-2**—(M120, M320, MX Series, and T Series routers only) Include the second MPLS label into the hash key. This is used for a two-label packet for per-flow load balancing IPv4 VPLS traffic based on IP information and MPLS labels. To use the second MPLS label in the hash key, include both the **label-1** and **label-2** statements at the **[edit forwarding-options hash-key family mpls]** hierarchy level. By default, the router provides hashing on the first and second labels. If both labels are specified, the entire first label and the first 16 bits of the second label are hashed.
- **label-3**—(M120, M320, MX Series, and T Series routers only) Include the third MPLS label into the hash key. To use the third MPLS label, include the **label-1**, **label-2**, and **label-3** statements at the **[edit forwarding-options hash-key family mpls]** hierarchy level.
- **no-labels**—Include no MPLS labels into the hash key.
- **no-label-1-exp**—(M120, M320, MX Series, and T Series routers only) The EXP bit of the first label is not used in the hash calculation to avoid reordering complications.
- **payload**—Incorporate bits from the IP payload into the hash key for per-flow load balancing Layer 2 information based on MPLS labels.
 - **disable**—(PTX Series Packet Transport Routers only) Exclude IP payload from the hash key.
 - **ether-pseudowire**—(M120, M320, MX Series, and T Series routers only) Load-balance IPv4 traffic over Layer 2 Ethernet pseudowires.
 - **zero-control-word**—(M Series, MX Series, and PTX Series) Precedes Ethernet packet to indicate the start of an Ethernet frame in an MPLS ether-pseudowire payload.
 - **ip**—Include the IP address of the IPv4 or IPv6 payload into the hash key for per-flow load balancing Layer 2 information based on MPLS labels. For the PTX Series Packet Transport Routers, this is the default setting with both Layer 3 and Layer 4 IP information included in the hash key.
 - **disable**—(PTX Series Packet Transport Routers only) Exclude IP payload from the hash key.
 - **layer-3-only**—Include only Layer 3 IP information from the IP payload data into the hash key for per-flow load balancing Layer 2 information based on MPLS labels.
 - **port-data**—(M120, M320, MX Series, and T Series routers only) Include the source and destination port field information into the hash key. By default, the most significant byte and least significant byte of the source and destination port fields are hashed. To select specific bytes to be hashed,

include one or more of the **source-msb**, **source-lsb**, **destination-msb**, and **destination-lsb** options at the **[edit forwarding-options hash-key family mpls payload ip port-data]** hierarchy level. To prevent all four bytes from being hashed, include the **layer-3-only** statement at the **[edit forwarding-options hash-key family mpls payload ip]** hierarchy level.

- **destination-lsb**—Include the least-significant byte of the destination port.
- **destination-msb**—Include the most-significant byte of the destination port.
- **source-lsb**—Include the least-significant byte of the source port.
- **source-msb**—Include the most-significant byte of the source port.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Load Balancing Based on MPLS Labels | 161](#)

[Configuring Load Balancing for Ethernet Pseudowires | 1208](#)

fast-reroute (Protocols MPLS)

Syntax

```
fast-reroute {
  (bandwidth bps | bandwidth-percent percentage);
  (exclude [ group-names ] | no-exclude );
  hop-limit number;
  (include-all [ group-names ] | no-include-all);
  (include-any [ group-names ] | no-include-any);
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Establish detours for the LSP so that if a node or link in the LSP fails, the traffic on the LSP can be rerouted with minimal packet loss.

Options

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Fast Reroute](#) | 473

[Fast Reroute Overview](#) | 471

[MPLS Feature Support on QFX Series and EX4600 Switches](#) | 11

[Understanding Interprovider and Carrier-of-Carriers VPNs](#) | 1305

fate-sharing

Syntax

```
fate-sharing {
  group group-name {
    cost value;
    from address <to address>;
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options],
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],
[edit routing-options],
[edit routing-instances routing-instance-name routing-options]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

Specify a backup path in case the primary path becomes unusable.

You specify one or more objects with common characteristics within a group. All objects are treated as /32 host addresses. The objects can be a LAN interface, a router ID, or a point-to-point link. Sequence is insignificant.

Changing the fate-sharing database does not affect existing established LSPs until the next CSPF reoptimization. The fate-sharing database does affect fast-reroute detour path computations.

Options

cost *value*—Cost assigned to the group.

Range: 1 through 65,535

Default: 1

from *address*—Address of the router or address of the LAN/NBMA interface. For example, an Ethernet network with four hosts in the same fate-sharing group would require you to list all four of the separate **from** addresses in the group.

group *group-name*—Each fate-sharing group must have a name, which can have a maximum of 32 characters, including letters, numbers, periods (.), and hyphens (-). You can define up to 512 groups.

to *address*—(Optional) Address of egress router. For point-to-point link objects, you must specify both a **from** and a **to** address.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Alternate Backup Paths Using Fate Sharing | 489](#)

MPLS Applications User Guide

forwarding-rib

Syntax

```
forwarding-rib name {  
    inet-import [ inet-import ... ];  
}
```

Hierarchy Level

```
[edit logical-systems name routing-instances name routing-options dynamic-tunnels],  
[edit logical-systems name routing-options dynamic-tunnels],  
[edit logical-systems name tenants name routing-instances name routing-options dynamic-tunnels],  
[edit routing-instances name routing-options dynamic-tunnels],  
[edit routing-options dynamic-tunnels],  
[edit tenants name routing-instances name routing-options dynamic-tunnels]
```

Release Information

Statement introduced in Junos OS Release 18.3R1 on PTX Series routers and QFX Series switches.

Description

Configure policy control for forwarding routing table next hops for MPLS-over-UDP dynamic tunnels. With this configuration, you can resolve the dynamic tunnel destination routes over select prefixes.

Options

name—Name of the routing table.

inet-import—Name of the import policy for IPv4 dynamic-tunnels.

Required Privilege Level

routing

RELATED DOCUMENTATION

[Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels](#) | 93

forwarding-table

Syntax

```
forwarding-table {  
  export [ policy--names ];  
  (indirect-next-hop | no-indirect-next-hop);  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options],  
[edit routing-options]
```

Release Information

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

Configure information about the routing device's forwarding table.

The remaining statements are explained separately. See [CLI Explorer](#).

Options

remnant-holdtime—Sets the remnant hold time, which is required for the MXVC-ISSU, where the recommended value is 900..

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring Per-Packet Load Balancing*

from (Protocols MPLS)

Syntax

```
from address;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Specify the source address to use for the LSP.

The address you specify does not affect the outgoing interface used by the LSP.

Default

If you do not include this statement, the software automatically selects the loopback interface as the address.

Options

address—IP address.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Ingress Router Address for LSPs](#) | 484

gpId

Syntax

```
gpId { ethernet | hdlc | ipv4 | pos-scrambling-crc-16 | pos-no-scrambling-crc-16 | pos-scrambling-crc-32 |  
pos-no-scrambling-crc-32 | ppp};
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name lsp-attributes],  
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
```

Release Information

Statement introduced before Junos OS Release 7.4.

pos-scrambling-crc-16, **pos-no-scrambling-crc-16**, **pos-scrambling-crc-32**, and **pos-no-scrambling-crc-32** options added in Junos OS Release 8.0.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the type of payload carried by the LSP. It can be any of the following:

- **ethernet**—Ethernet (GPID value: 33)
- **hdlc**—High-level Data Link Control (HDLC) (GPID value: 44)
- **ipv4**—IP version 4 (GPID value: 0x0800)
- **pos-no-scrambling-crc-16**—for interoperability with other vendors' equipment (GPID value: 29)
- **pos-no-scrambling-crc-32**—for interoperability with other vendors' equipment (GPID value: 30)
- **pos-scrambling-crc-16**—for interoperability with other vendors' equipment (GPID value: 31)
- **pos-scrambling-crc-32**—for interoperability with other vendors' equipment (GPID value: 32)
- **ppp**—Point-to-Point Protocol (PPP) (GPID value: 50)

Default

ipv4

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

gre (Routing Options)

Syntax

```
gre;  
next-hop-based-tunnel;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options dynamic-tunnels tunnel-name],  
[edit routing-options dynamic-tunnels tunnel-name]
```

Release Information

Statement introduced in Junos OS Release 10.1.

next-hop-based-tunnel option introduced in Junos OS Release 16.2.

Description

Enable generic routing encapsulation (GRE) type for IPv4 to automatically establish label-switched paths (LSPs) for any new provider edge (PE) router added to a full mesh of LSPs.

Options

next-hop-based-tunnel—Create a tunnel composite next hop for every dynamic GRE tunnel configured.

The tunnel composite next hop includes the dynamic tunnel's encapsulation data and a VPN label (when chained composite next hop is not enabled). When this option is not configured, the default interface-based tunnel mode is enabled. By configuring this option, a device can scale up to 32,000 IP tunnels, which is otherwise restricted to the system limit on the number of interfaces supported.

At a given point in time, either the next-hop-based dynamic tunnel or the default interface-based dynamic GRE tunnel can exist on a device. A switchover from one tunnel mode to another deletes the existing tunnels and creates new tunnels in the new tunnel mode. As a result, a tunnel mode switchover can impact network performance.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring MPLS-Signaled LSPs to Use GRE Tunnels*

hop-limit

Syntax

```
hop-limit number;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name fast-reroute],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection bypass bypass-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name fast-reroute],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name],
[edit protocols rsvp interface interface-name link-protection],
[edit protocols rsvp interface interface-name link-protection bypass bypass-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the maximum number of routers that an LSP can traverse. This limit can be applied to any of the following:

- LSPs—The configured hop limit includes the ingress and egress routers. You can specify a hop limit for an LSP and for both primary and secondary paths.
- Fast reroute detour—Specify the number of additional routers a fast reroute detour can traverse relative to the protected LSP. For example, if an LSP traverses 4 routers, any detour for the LSP can be no more than 10 router hops, including the ingress and egress routers.
- Link protection bypass—Specify the maximum number of routers that a link protection bypass can traverse.

Options

number—Maximum number of hops.

Range: 2 through 255 (for an LSP or for a link protection bypass); 0 through 255 (for fast reroute)

Default: 255 (for an LSP or for a link protection bypass); 6 (for fast reroute)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring Fast Reroute 473
Limiting the Number of Hops in LSPs 515
Configuring the Hop Limit for Bypass LSPs 380

import (MPLS Traffic Engineering Database)

Syntax

```
import {
  bgp-ls-identifier domain-identifier;
  identifier identifier;
  policy policy-name;
  igp-topology{
    bgp-link-state;
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls traffic-engineering database],
[edit protocols mpls traffic-engineering database]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Description

Configure the traffic engineering database import parameters.

Options

bgp-ls-identifier *domain-identifier*—BGP-TE domain identifier.

identifier *identifier*—BGP-TE identifier.

Range: 2 through 18446744073709551615

policy *policy-name*—Name of the import policy.

igp-topology—Download IGP topology information into the traffic engineering database (TED). In Junos OS, the IGP installs topology information into a database called the traffic engineering database. The traffic engineering database contains the aggregated topology information. The IGP routes are installed by the traffic engineering database on behalf of the corresponding IGP into a user-visible routing table called `Isdist.0`, subject to route policies.

bgp-link-state—Export IGP topology information into BGP-Link State (BGP-LS) from the `Isdist.0` routing table. The `Isdist.0` routing table stores the network topology information from the traffic engineering database. The BGP-LS reads IGP entries from `Isdist.0` and advertises the information to BGP peers.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [traffic-engineering](#) | 1941

ip-tunnel-rpf-check

Syntax

```
ip-tunnel-rpf-check {  
    mode (strict | loose);  
    fail-filter filter-name;  
}
```

Hierarchy Level

```
[edit routing-instances routing-instance-name routing-options forwarding-table]
```

Release Information

Statement introduced in Junos OS Release 17.1 for MX Series Routers with MICs.

Description

Configure the system to enable anti-spoofing protection for next-hop-based dynamic tunnels, where reverse path forwarding checks are placed to ensure that the tunnel traffic is received from a legitimate source through designated IP tunnel, where the source is reachable on the same tunnel on which the packet was received.

When a packet comes from a nondesignated source, the reverse path forwarding check fails in the strict mode, and passes in the loose mode. When a packet comes from a nonexistent source, the reverse path forwarding check fails.

By default, the reverse path forwarding check is in strict mode, where the packets are not forwarded if the source of the packet is from a nondesignated tunnel.

Options

mode (strict | loose)—(Optional) Specify the mode of the reverse path forwarding check to enable anti-spoofing protection for next-hop-based dynamic tunnels.

In the strict mode (default), the reverse path forwarding check fails when the packet is received from a nondesignated tunnel source. The check passes only for packets from designated tunnels.

In the loose mode, the reverse path forwarding check passes even if the packet is received from a nondesignated tunnel source.

When the packet is from a nonexistent tunnel source, the reverse path forwarding check fails in both the strict and loose modes.

Default: If you omit the mode statement, the default behavior is strict mode.

fail-filter *filter-name*—(Optional) Attach a filter to the Layer 3 VPN to log packets that failed the reverse path forwarding check.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview | 111](#)

[Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels | 114](#)

ipv4 (Family MPLS)

Syntax

```

ipv4 {
  destination-address ip-address {
    except;
  }
  destination-prefix-list destination-prefix-list-name {
    except;
  }
  protocol protocol {
    (source-port | source-port-except);
    (destination-port | destination-port-except);
  }
  source-address ip-address {
    except;
  }
  source-prefix-list source-prefix-list-name {
    except;
  }
}

```

Hierarchy Level

```
[edit firewall family mpls filter name term name from ip-version]
```

Release Information

Statement introduced in Junos OS Release 18.4R1 on MX Series routers with MPC and MIC interfaces.

Description

Define Layer 3 and Layer 4 match items to match IPv4 packets for IP-based filtering of MPLS traffic.

Options

destination-address *ip-address*—Match MPLS traffic with the specified IPv4 destination address.

destination-prefix-list *destination-prefix-list-name*—Match MPLS traffic with the specified IPv4 destination prefixes. The prefix-list is defined under the **[edit policy-options prefix-list *prefix-list-name*]** hierarchy level.

protocol *protocol*—Specify one or a range of inner IPv4 protocols for IP-based filtering of MPLS traffic.

source-address *ip-address*—Match MPLS traffic with the specified IPv4 source address.

source-prefix-list *source-prefix-list-name*—Match MPLS traffic with the specified IPv4 source prefixes. The prefix-list is defined under the **[edit policy-options prefix-list *prefix-list-name*]** hierarchy level.

Required Privilege Level

firewall—To view this statement in the configuration.

firewall-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Understanding IP-Based Filtering and Selective Port Mirroring of MPLS Traffic](#) | 193

ipv6 (Family MPLS)

Syntax

```

ipv6 {
  destination-address destination-ip-address {
    except;
  }
  destination-prefix-list prefix-list-name {
    except;
  }
  protocol protocol {
    (source-port | source-port-except);
    (destination-port | destination-port-except);
  }
  source-address ip-address {
    except;
  }
  source-prefix-list source-prefix-list-name {
    except;
  }
}

```

Hierarchy Level

```
[edit firewall family mpls filter name term name from ip-version],
```

Release Information

Statement introduced in Junos OS Release 18.4R1 on MX Series routers with MPC and MIC interfaces.

Description

Define Layer 3 and Layer 4 match items to match IPv6 packets for IP-based filtering of MPLS traffic.

Options

destination-address *ip-address*—Match MPLS traffic with the specified IPv6 destination address.

destination-prefix-list *destination-prefix-list-name*—Match MPLS traffic with the specified list of IPv6 destination prefixes. The prefix-list is defined under the **[edit policy-options prefix-list *prefix-list-name*]** hierarchy level. You must configure separate prefix-lists for IPv4 and IPv6 addresses.

protocol *protocol*—Specify one or a range of inner IPv6 next header for IP-based filtering of MPLS traffic.

source-address *ip-address*—Match MPLS traffic with the specified IPv6 source address.

source-prefix-list *source-prefix-list-name*—Match MPLS traffic with the specified IPv6 source prefixes. The prefix-list is defined under the **[edit policy-options prefix-list *prefix-list-name*]** hierarchy level. You must configure separate prefix-lists for IPv4 and IPv6 addresses.

Required Privilege Level

firewall

ip-version (Family MPLS)

Syntax

```
ip-version {
  ipv4;
  ipv6;
}
```

Hierarchy Level

```
[edit firewall family mpls filter name term name from]
```

Release Information

Statement introduced in Junos OS Release 18.4R1 on MX Series routers with MPC and MIC interfaces.

Description

Specify inner IP version to enable IP-based filtering of MPLS family filter.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level

firewall—To view this statement in the configuration.

firewall-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Understanding IP-Based Filtering and Selective Port Mirroring of MPLS Traffic](#) | 193

include-all (for Administrative Groups)

Syntax

```
include-all [ group-names ];
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name admin-group],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary | secondary) path-name  
  admin-group],  
[edit protocols mpls label-switched-path lsp-name admin-group],  
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name admin-group]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Require the LSP to traverse links that include all of the defined administrative groups.

Options

group-names—One or more names of groups defined with the **admin-groups** statement.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Administrative Groups for LSPs | 502](#)

[admin-groups | 1670](#)

include-all (for Fast Reroute)

Syntax

```
(include-all [ group-names ] | no-include-all);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name fast-reroute],  
[edit protocols mpls label-switched-path lsp-name fast-reroute]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

Description

Control inclusion of administrative groups:

- **include-all**—Define the administrative groups that must all be included for fast reroute.
- **no-include-all**—Disable administrative group inclusion.

Options

group-names—One or more names of groups defined with the **admin-groups** statement.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Fast Reroute](#) | 473

include-any (for Administrative Groups)

Syntax

```
include-any [ group-names ];
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name admin-group],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary | secondary) path-name
  admin-group],
[edit protocols mpls label-switched-path lsp-name admin-group],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name admin-group]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Define the administrative groups to include for an LSP or for a path's primary and secondary paths.

Options

group-names—One or more names of groups defined with the **admin-groups** statement.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Administrative Groups for LSPs | 502](#)

include-any (for Fast Reroute)

Syntax

```
(include-any [ group-names ] | no-include-any);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name fast-reroute],  
[edit protocols mpls label-switched-path lsp-name fast-reroute]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

Description

Control inclusion of administrative groups:

- **include-any**—Define the administrative groups to include for fast reroute.
- **no-include-any**—Disable administrative group inclusion.

Options

group-names—One or more names of groups defined with the **admin-groups** statement.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Fast Reroute](#) | 473

ingress (LSP)

Syntax

```
ingress {
  bandwidth bps;
  class-of-service cos-value;
  description string;
  entropy-label;
  install {
    destination-prefix <active>;
  }
  link-protection bypass-name name;
  metric metric;
  next-hop (address | interface-name | address/interface-name);
  node-protection bypass-name name next-next-label label;
  no-install-to-address;
  policing {
    filter filter-name;
    no-auto-policing;
  }
  preference preference;
  push out-label;
  to address;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name],
[edit protocols mpls static-label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 10.1.

entropy-label option introduced in Junos OS Release 14.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Configure an ingress LSR for a static LSP.

The remaining statements are explained separately

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Static LSPs](#) | 573

install (Protocols MPLS)

Syntax

```
install {
    destination-prefix <active>;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls static-label-switched-path lsp-name ingress]
[edit protocols source-packet-routing source-routing-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Support at the **[edit protocols source-packet-routing source-routing-path *lsp-name*]** hierarchy level introduced in Junos OS Release 19.1R1.

Description

Associate one or more prefixes with an LSP. When the LSP is up, all the prefixes are installed as entries into the inet.3 or inet6.3 routing table.

The support of the **install** statement at the **[edit protocols source-packet-routing source-routing-path *lsp-name*]** is applicable for both colored and non-colored segment routing LSPs.

For static colored LSPs, when the install prefix is configured, a route similar to the tunnel ingress route is installed in the **inetcolor.0** or **inet6color.0** routing table.

On the other hand, for static non-colored LSPs, when the install prefix is configured, a route similar to the tunnel **to** route is installed in **inet.3** or **inet6.3** routing table.

You can use the [show route table](#) command to view the **install** routes for both colored and non-colored segment routing traffic-engineered LSPs.

NOTE:

Take the following into consideration when configuring the **install *destination-prefix*** statement at the **[edit protocols source-packet-routing source-routing-path *lsp-name*]** hierarchy level:

- The install prefixes should be unique in a tunnel, and should not be the same as the tunnel **to** address. A commit check is done to ensure that the prefixes are unique.
- If two install prefixes are same across two different tunnels, then the gateways of the both tunnels are considered only if the segment lists are of the same resolution type. If the first hop resolution types vary, the route is not installed. In such cases, a system log message is generated to record the error.

For example:

```
[edit protocols source-packet-routing]
segment-list path-1 {
  hop-1 ip-address 172.0.12.2;
  hop-2 label 1000012;
  hop-3 label 1000013;
  hop-4 label 1000014;
}
source-routing-path lsp1 {
  to 10.10.10.1;
  install 20.20.20.2;
  install 30.30.30.3;
  primary {
    path-1;
  }
}
```

The **inet.3** routing table has two additional routes (to 20.20.20.2 and 30.30.30.3) with next hops derived from the same segment list path-1 with same attributes as the **to** address route.

Options

active—(Optional) Install the route into the inet.0 or inet6.0 routing table. This allows you to issue a **ping** or **traceroute** command on this address.

NOTE: The **install *destination-prefix* active** statement is not supported on static LSPs. When the **install *destination-prefix* active** statement is configured for a static LSP, the MPLS routes do not get installed into the inet.0 routing table.

destination-prefix—IPv4 or IPv6 address to associate with the LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Adding LSP-Related Routes to the inet.3 or inet6.3 Routing Table](#) | 476

ingress-policy

Syntax

```
ingress-policy [ ingress-policy-names ];
```

Hierarchy Level

```
[edit logical-system logical-system-name protocols ldp entropy-label],  
[edit logical-system logical-system-name protocols ldp oam],  
[edit protocols ldp entropy-label],  
[edit protocols ldp oam]
```

Release Information

Statement introduced in Junos OS Release 9.4.

Statement introduced at the **[edit protocols ldp entropy-label]** hierarchy level in Junos OS Release 14.1.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 Series switches.

Description

Configure an LDP ingress policy for either the entropy label or Operation, Administration, and Management (OAM).

For OAM, configure the ingress policy to choose which forwarding equivalence classes (FECs) need to have OAM enabled. If the FEC passes through the policy or if the FEC is explicitly configured, OAM is enabled for a FEC. For FECs chosen using a policy, the BFD parameters configured under **[edit protocols ldp oam bfd-liveness-detection]** are applied.

Options

ingress-policy-names—Specify the names of the ingress policies.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring OAM Ingress Policies for LDP | 1141](#)

[Configuring the Entropy Label for LSPs | 533](#)

interface (Protocols MPLS)

Syntax

```
interface (interface-name | all) {  
    disable;  
    admin-group [ group-names ];  
    srlg srlg-name;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Enable MPLS on one or more interfaces.

Options

interface-name—Name of the interface on which to configure MPLS. To configure all interfaces, specify **all**. For details about specifying interfaces, see the *Junos OS Network Interfaces Library for Routing Devices*.

srlg srlg-name—Name of the SRLG to associate with an interface.

The remaining options are explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Intermediate \(Transit\) and Egress Routers for Static LSPs | 577](#)

[Example: Configuring SRLG | 200](#)

interface (MPLS)

Syntax

```
interface (all | interface-name);
```

Hierarchy Level

```
[edit protocols mpls]
```

Release Information

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Enable MPLS on all interfaces on the switch or on the specified interface.

Default

MPLS is disabled.

Options

all—All interfaces on the switch.

interface-name—Name of an interface:

- Aggregated Ethernet—**aex**
- Gigabit Ethernet—**ge-fpc/pic/port**

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring MPLS on EX8200 and EX4500 Switches](#) | 41

[Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS](#) | 1218

[Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect](#) | 1221

[Configuring MPLS on EX8200 and EX4500 Provider Switches](#) | 77

inter-domain

Syntax

```
inter-domain;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path label-switched-path-name],  
[edit protocols mpls label-switched-path label-switched-path-name]
```

Release Information

Statement introduced in Junos OS Release 10.2.

Description

Allows the router to search for routes in the IGP database. You need to configure this statement on routers that might be unable to locate a path using intra-domain CSPF (by looking in the traffic engineering database (TED)). When you configure inter-area or inter-AS LSPs, the **inter-domain** statement is required.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring an LSP Across ASs | 528](#)

[label-switched-path | 1775](#)

ip-tunnel-rpf-check

Syntax

```
ip-tunnel-rpf-check {
    mode (strict | loose);
    fail-filter filter-name;
}
```

Hierarchy Level

```
[edit routing-instances routing-instance-name routing-options forwarding-table]
```

Release Information

Statement introduced in Junos OS Release 17.1 for MX Series Routers with MICs.

Description

Configure the system to enable anti-spoofing protection for next-hop-based dynamic tunnels, where reverse path forwarding checks are placed to ensure that the tunnel traffic is received from a legitimate source through designated IP tunnel, where the source is reachable on the same tunnel on which the packet was received.

When a packet comes from a nondesignated source, the reverse path forwarding check fails in the strict mode, and passes in the loose mode. When a packet comes from a nonexistent source, the reverse path forwarding check fails.

By default, the reverse path forwarding check is in strict mode, where the packets are not forwarded if the source of the packet is from a nondesignated tunnel.

Options

mode (strict | loose)—(Optional) Specify the mode of the reverse path forwarding check to enable anti-spoofing protection for next-hop-based dynamic tunnels.

In the strict mode (default), the reverse path forwarding check fails when the packet is received from a nondesignated tunnel source. The check passes only for packets from designated tunnels.

In the loose mode, the reverse path forwarding check passes even if the packet is received from a nondesignated tunnel source.

When the packet is from a nonexistent tunnel source, the reverse path forwarding check fails in both the strict and loose modes.

Default: If you omit the mode statement, the default behavior is strict mode.

fail-filter *filter-name*—(Optional) Attach a filter to the Layer 3 VPN to log packets that failed the reverse path forwarding check.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels Overview | 111](#)

[Example: Configuring Anti-Spoofing Protection for Next-Hop-Based Dynamic Tunnels | 114](#)

ipv6-tunneling

Syntax

```
ipv6-tunneling;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Series switches.

Description

Allow IPv6 routes to be resolved over an MPLS network by converting LDP and RSVP routes stored in the inet.3 routing table to IPv4-mapped IPv6 addresses and then copying them into the inet6.3 routing table. This routing table can be used to resolve next hops for both inet6 and inet6-vpn routes.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Tunneling IPv6 Traffic over MPLS IPv4 Networks | 81](#)

label-switched-path (Protocols MPLS)

Syntax

```
label-switched-path lsp-name {
  disable;
  adaptive;
  admin-down;
  admin-group {
    exclude [ group-names ];
    include-all [ group-names ];
    include-any [ group-names ];
  }
  auto-bandwidth {
    adjust-interval seconds;
    adjust-threshold percentage;
    maximum-bandwidth bps;
    minimum-bandwidth bps;
    monitor-bandwidth;
  }
  bandwidth bps {
    ct0 bps;
    ct1 bps;
    ct2 bps;
    ct3 bps;
  }
  class-of-service cos-value;
  cross-credibility-cspf;
  description text;
  entropy-label;
  fast-reroute {
    (bandwidth bps | bandwidth-percent percentage);
    (exclude [ group-names ] | no-exclude);
    hop-limit number;
    (include-all [ group-names ] | no-include-all);
    (include-any [ group-names ] | no-include-any);
  }
  from address;
  install {
    destination-prefix/prefix-length <active>;
  }
  inter-domain;
  ldp-tunneling;
  link-protection;
  lsp-attributes {
```

```

lsp-external-controller;
encoding-type (ethernet | packet | pdh | sonet-sdh);
gpid (ethernet | hdlc | ipv4 | pos-scrambling-crc-16 | pos-no-scrambling-crc-16 | pos-scrambling-crc-32 |
pos-no-scrambling-crc-32 | ppp);
signal-bandwidth type;
switching-type (fiber | lambda | psc-1 | tdm);
}
metric metric;
no-cspf;
no-decrement-ttl;
node-link-protection;
optimize-timer seconds;
p2mp lsp-name;
policing {
    filter filter-name;
    no-auto-policing;
}
preference preference;
primary path-name {
    adaptive;
    admin-group {
        exclude [ group-names ];
        include-all [ group-names ];
        include-any [ group-names ];
    }
    bandwidth bps {
        ct0 bps;
        ct1 bps;
        ct2 bps;
        ct3 bps;
    }
    class-of-service cos-value;
    hop-limit number;
    no-cspf;
    no-decrement-ttl;
    optimize-timer seconds;
    preference preference;
    priority setup-priority reservation-priority;
    (record | no-record);
    select (manual | unconditional);
    standby;
}
priority setup-priority reservation-priority;
(random | least-fill | most-fill);

```



```

(record | no-record);
retry-limit number;
retry-timer seconds;
revert-timer seconds;
secondary path-name {
    adaptive;
    admin-group {
        exclude [ group-names ];
        include-all [ group-names ];
        include-any [ group-names ];
    }
    bandwidth bps {
        ct0 bps;
        ct1 bps;
        ct2 bps;
        ct3 bps;
    }
    class-of-service cos-value;
    hop-limit number;
    no-cspf;
    no-decrement-ttl;
    optimize-timer seconds;
    preference preference;
    priority setup-priority reservation-priority;
    (record | no-record);
    select (manual | unconditional);
    standby;
}
soft-preemption;
standby;
to address;
traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable>;
    flag flag <flag-modifier> <disable>;
}
}

```

Hierarchy Level

```

[edit logical-systems logical-system-name protocols mpls],
[edit protocols mpls]

```

Release Information

Statement introduced before Junos OS Release 7.4.

cross-credibility-cspf option introduced in Junos OS Release 14.2.

self-ping-duration and **no-self-ping** options introduced in Junos OS Release 16.1.

Description

Configure an LSP to use in dynamic MPLS. When configuring an LSP, you must specify the address of the egress router in the **to** statement. All remaining statements are optional.

Options

lsp-name—Name that identifies the LSP. The name can be up to 64 characters and can contain letters, digits, periods, and hyphens. To include other characters, enclose the name in quotation marks. The name must be unique within the ingress router.

cross-credibility-cspf—Enable path computation across credibility levels. The constraint path computation is run across multi-protocol links and nodes, instead of a credibility-by-credibility basis.

link-protection—Enable protection for LSP from link faults only.

no-self-ping—Disable self-ping for the LSP.

NOTE: Starting in Junos OS 17.4, you can override the behavior of self-ping running by default using ***no-self-ping*** statement.

self-ping-duration seconds—Specify the duration (in seconds) for which to run the self-ping mechanism unless the ping succeeds sooner.

LSP self-ping for an LSP starts at the ingress label edge router (LER), once a Resv message for that LSP has been received. The configured self-ping time indicates the duration for which the self-ping mechanism runs once the LSP instance is signaled to be **UP**.

By default, self-ping is enabled. The LSP types like CCC, P2MP, VLAN-based , and non-default instances do not support self-ping .

The self-ping mechanism runs until the self-ping probe is received back (at which point the traffic is immediately switched to it) , or until the configured self-ping duration for the LSP is over (at which point traffic is switched over).

When LSP self-ping-duration is enabled, the LSP behavior reverts back to a timer-based mechanism similar to the ***optimize-switchover-delay***, where a specific amount of time is provided for all the downstream nodes to install the forwarding path before switchover. When LSP self-ping-duration is not enabled, the default behavior is to wait for an infinite amount of time for the self-ping to succeed before switching the traffic.

Range: 1 through 65535 seconds

NOTE: Starting in Junos OS 17.4R1, the default time-out duration for which the self-ping runs on an LSP instance is reduced from 65535 (runs until success) to 1800 seconds. You can also configure the self ping duration value between 1 to 65535 (runs until success) seconds.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Ingress and Egress Router Addresses for LSPs | 484](#)

[Configuring Primary and Secondary LSPs | 569](#)

label-switched-path

Syntax

```
label-switched-path lsp-name to remote-provider-edge-switch;
```

Hierarchy Level

```
[edit protocols mpls]
```

Release Information

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Define a label-switched path (LSP) to the remote provider edge switch to use for MPLS traffic. You must specify this statement on the provider edge switch.

Options

lsp-name —Name that identifies the LSP. The name can be up to 32 characters and can contain letters, digits, periods, and hyphens. To include other characters, enclose the name in quotation marks. The name must be unique on the ingress switch.

remote-provider-edge-switch —Either the loopback address or the switch address.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring MPLS on EX8200 and EX4500 Switches](#) | 41

[Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS](#) | 1218

[Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect](#) | 1221

label-switched-path-template (Container LSP)

Syntax

```
label-switched-path-template {  
    (default-template | lsp-template-name);  
}
```

Hierarchy Level

```
[edit protocols mpls container-label-switched-path lsp-name]  
[edit routing-instances instance-name provider-tunnel]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.

Statement introduced in Junos OS Release 18.2. under the heirarchy level [edit routing-instances *instance-name* provider-tunnel]

Description

Specify the LSP template. An LSP template is used as the basis for other dynamically generated LSPs.

Options

default-template—Specify that the default LSP template be used for the dynamically generated LSPs.

lsp-template-name—Specify the name of an LSP to be used as a template for the dynamically generated LSPs.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[container-label-switched-path](#) | 1701

ldp-tunneling

Syntax

```
ldp-tunneling;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable the LSP to be used for LDP tunneling.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Enabling LDP over RSVP-Established LSPs](#) | 1040

least-fill

See

[random](#)

link-protection (Dynamic LSPs)

Syntax

```
link-protection;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

Description

Enable link protection on the specified LSP, which helps to ensure that traffic sent over a specific interface to a neighboring router can continue to reach the router if that interface fails. For point-to-multipoint LSPs, including this statement extends link protection to all of the paths used by the LSP.

To fully enable link protection, you must also include the **link-protection** statement at the **[edit protocols rsvp interface *interface-name*]** or **[edit logical-systems *logical-system-name* protocols rsvp interface *interface-name*]** hierarchy level.

Default

Link protection is disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Link Protection for Point-to-Multipoint LSPs | 689](#)

[Configuring Node Protection or Link Protection for LSPs | 384](#)

[link-protection \(RSVP\) | 1983](#)

link-protection (Static LSPs)

Syntax

```
link-protection bypass-name name;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],  
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name transit incoming-label],  
[edit protocols mpls static-label-switched-path lsp-name ingress],  
[edit protocols mpls static-label-switched-path lsp-name transit incoming-label]
```

Release Information

Statement introduced in Junos OS Release 10.1.

Description

Enable link protection on the specified static LSP. Link protection helps to ensure that traffic sent over a specific interface to a neighboring router can continue to reach the router if that interface fails.

Default

Link protection is disabled.

Options

bypass-name *name*—Bypass LSP name.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Static LSPs | 573](#)

[Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP | 660](#)

load-balance-label-capability

Syntax

```
load-balance-label-capability;
```

Hierarchy Level

```
[edit forwarding-options]
```

Release Information

Statement introduced in Junos OS Release 14.1.

Description

Enables the router to push and pop the load balancing label and causes LDP and RSVP to advertise the entropy label TLV to neighboring routers.

The **load-balance-label-capability** and **no-load-balance-label-capability** statements at the **[edit forwarding-options]** hierarchy level are mutually exclusive, and at a given point in time, configuring one statement overrides the other.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Entropy Label for LSPs | 533](#)

[no-load-balance-label-capability | 1826](#)

log-updown (Protocols MPLS)

Syntax

```
log-updown {  
  no-trap {  
    mpls-lsp-traps;  
    rfc3812-traps;  
  }  
  (syslog | no-syslog);  
  trap;  
  trap-path-down;  
  trap-path-up;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

The **mpls-lsp-traps** and **rfc-3812-traps** options added in Junos OS Release 9.0.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Log a message or send an SNMP trap whenever an LSP makes a transition from up to down, or vice versa, and whenever an LSP switches from one active path to another. Only the ingress router performs these operations.

NOTE: System log messages for LSPs are generated by default. To disable the default logging of messages for LSPs, configure the **no-syslog** option under the **log-updown** statement.

Default

There is no default behavior for this statement. If you do not specify the options, the configuration cannot be committed.

Options

no-syslog—Do not log a message to the system log file.

no-trap—Do not send an SNMP trap.

syslog—Log a message to the system log file.

trap—Send an SNMP trap.

trap-path-down—Send an SNMP trap when an LSP path goes down.

trap-path-up—Send an SNMP trap when an LSP path comes up.

The **no-trap** statement is explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[System Log Messages and SNMP Traps for MPLS | 159](#)

Network Management and Monitoring Guide

[no-trap | 1830](#)

[traceoptions \(Protocols MPLS\) | 1932](#)

longest-match

Syntax

```
longest-match {  
  policy value |(expression) | [values ];  
}
```

Hierarchy Level

```
[edit protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 16.1 for the M Series, MX Series, and PTX Series.

Description

Enable longest match to allow LDP to learn the routes aggregated or summarized across OSPF areas or IS-IS levels in inter-domain.

Options

policy *value* |(expression) | [*values*]— Specify policy to provide per prefix granularity.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Longest Match Support for LDP Overview | 861](#)

[Example: Configuring Longest Match for LDP | 868](#)

[Configuring Longest Match for LDP | 867](#)

loss (querier)

Syntax

```
loss {
  traffic-class tc-value {
    average-sample-size sample size;
    loss-threshold loss threshold value;
    loss-threshold-window number of samples for loss threshold;
    measurement-quantity bytes|packets;
    query-interval milliseconds;
  }
}
```

Hierarchy Level

```
[edit protocols mpls oam performance-monitoring querier],
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring querier],
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring querier],
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring querier]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure loss measurement options.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Pro-Active Loss and Delay Measurements | 416](#)

[On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview | 387](#)

[performance-monitoring \(Protocols MPLS\) | 1851](#)

loss (responder)

Syntax

```
loss {
  min-query-interval milliseconds;
}
```

Hierarchy Level

```
[edit protocols mpls oam performance-monitoring responder],
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring responder],
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring responder],
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring responder]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure loss measurement options.

Options

min-query-interval *milliseconds*—(Optional) Specify the minimum query interval that the responder supports. If the minimum query interval of the responder is greater than the query interval configured at the querier, the effective message query rate is the minimum query interval configured for the responder.

Default: 10 seconds

Range: 1000 through 4294967295 milliseconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Pro-Active Loss and Delay Measurements | 416](#)

[On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview | 387](#)

[performance-monitoring \(Protocols MPLS\) | 1851](#)

loss-delay (querier)

Syntax

```
loss-delay {
  traffic-class tc-value {
    average-sample-size sample size;
    loss-threshold loss threshold value;
    loss-threshold-window number of samples for loss threshold;
    measurement-quantity bytes|packets;
    padding-size size;
    query-interval milliseconds;
    rtt-delay-threshold rtt threshold value;
    twcd-delay-threshold twcd threshold value;
  }
}
```

Hierarchy Level

```
[edit protocols mpls oam performance-monitoring querier],
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring querier],
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring querier],
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring querier]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure combined loss-delay measurement options.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Pro-Active Loss and Delay Measurements](#) | 416

[On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview](#) | 387

[performance-monitoring \(Protocols MPLS\)](#) | 1851

lsp-attributes

Syntax

```
lsp-attributes {
  encoding-type (ethernet | packet | pdh | sonet-sdh);
  gpid (ethernet | hdlc | ipv4 | pos-scrambling-crc-16 | pos-no-scrambling-crc-16 | pos-scrambling-crc-32 |
    pos-no-scrambling-crc-32 | ppp);
  signal-bandwidth type;
  switching-type (fiber | lambda | psc-1 | tdm);
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

pos-scrambling-crc-16, **pos-no-scrambling-crc-16**, **pos-scrambling-crc-32**, and **pos-no-scrambling-crc-32** options added in Junos OS Release 8.0.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Define the parameters signaled during LSP setup. These usually determine the nature of the resource (label) allocated for the LSP.

The remaining statements are explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring MPLS LSPs for GMPLS](#) | 1257

lsping-channel-type

Syntax

```
lsping-channle-type {
  ipv4;
  on-demand-cv;
}
```

Hierarchy Level

```
[edit protocols mpls label-switched-path lsp-name oam mpls-tp-mode]
[edit protocols mpls oam mpls-tp-mode]
```

Release Information

Statement introduced in Junos OS Release 16.1.

Description

Specify the control-channel types for MPLS-TP mode. By default, LSPING (0x0008) is used, and the GACH-TLV is used along with this channel type.

As per RFC 7026, GACH-TLV is deprecated for ipv4 and on-demand-cv channel types.

Options

ipv4—Channel type 0x0021. This channel type uses the IP/UDP encapsulation and provides interoperability support with other vendor devices using IP addressing.

on-demand-cv—Channel type 0x0025. This is a new pseudowire channel type and is used for on-demand CV without IP/UDP encapsulation, where IP addressing is not available or non-IP encapsulation is preferred.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[mpls-tp-mode](#) | 1812

I2vpn

Syntax

```

I2vpn {
  (control-word | no-control-word);
  encapsulation-type type;
  oam {
    bfd-liveness-detection {
      detection-time {
        threshold milliseconds;
      }
      minimum-interval milliseconds;
      minimum-receive-interval milliseconds;
      multiplier number;
      no-adaptation;
      transmit-interval {
        threshold milliseconds;
        minimum-interval milliseconds;
      }
      version (1 | automatic);
    }
    ping-interval seconds;
  }
  site site-name {
    community COMM;
    control-word ;
    encapsulation-type ethernet;
    ignore-encapsulation-mismatch;
    ignore-mtu-mismatch;
    interface interface-name {
      description text;
      community COMM;
      control-word ;
      encapsulation-type ethernet;
      ignore-encapsulation-mismatch;
      ignore-mtu-mismatch;
      mtu 1500;
      no-control-word;
      oam {
        bfd-liveness-detection {
          detection-time {
            threshold milliseconds;
          }
          minimum-interval milliseconds;
        }
      }
    }
  }
}

```

```

        minimum-receive-interval milliseconds;
        multiplier number;
        no-adaptation;
        transmit-interval {
            threshold milliseconds;
            minimum-interval milliseconds;
        }
        version (1 | automatic);
    }
    ping-interval seconds; seconds;
}
remote-site-id remote-site-id;
target-attachment-identifier identifier;
}
mtu 1500;
no-control-word;
oam {
    bfd-liveness-detection {
        detection-time {
            threshold milliseconds;
        }
        minimum-interval milliseconds;
        minimum-receive-interval milliseconds;
        multiplier number;
        no-adaptation;
        transmit-interval {
            threshold milliseconds;
            minimum-interval milliseconds;
        }
        version (1 | automatic);
    }
    ping-interval seconds; seconds;
}
site-identifier identifier;
site-preference preference-value {
    backup;
    primary;
}
source-attachment-identifier identifier;
}
traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable>;
    flag flag <flag-modifier> <disable>;
}

```

```
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols],  
[edit routing-instances routing-instance-name protocols]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Description

Enable a Layer 2 VPN routing instance on a PE router or switch.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring a Layer 2 VPN Routing Instance

Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)

maximum-bandwidth (Protocols MPLS)

Syntax

```
maximum-bandwidth bps;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Specify the maximum amount of bandwidth in bits per second (bps).

Options

bps—Maximum amount of bandwidth.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth](#) | 519

maximum-helper-recovery-time

Syntax

```
maximum-helper-recovery-time seconds;
```

Hierarchy Level

```
[edit protocols rsvp graceful-restart],  
[edit logical-systems logical-system-name protocols rsvp graceful-restart]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the length of time the router or switch retains the state of its Resource Reservation Protocol (RSVP) neighbors while they undergo a graceful restart.

Options

seconds—Length of time that the router retains the state of its Resource Reservation Protocol (RSVP) neighbors while they undergo a graceful restart.

Range: 1 through 3600

Default: 180

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring Graceful Restart Options for RSVP, CCC, and TCC

[maximum-helper-restart-time \(RSVP\)](#) | [1800](#)

maximum-helper-restart-time (RSVP)

Syntax

```
maximum-helper-restart-time seconds;
```

Hierarchy Level

```
[edit protocols rsvp graceful-restart],  
[edit logical-systems logical-system-name protocols rsvp graceful-restart]
```

Release Information

Statement introduced in Junos OS Release 8.3.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the length of time the router or switch waits after it discovers that a neighboring router has gone down before it declares the neighbor down. This value is applied to all RSVP neighbor routers and should be based on the time that the slowest RSVP neighbor requires for restart.

Options

seconds—The time the router or switch waits after it discovers that a neighboring router has gone down before it declares the neighbor down.

Range: 1 through 1800

Default: 60

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring Graceful Restart Options for RSVP, CCC, and TCC

[maximum-helper-recovery-time](#) | **1799**

maximum-labels

Syntax

```
maximum-labels maximum-labels;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number family mpls],  
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family mpls]
```

Release Information

Statement introduced in Junos OS Release 10.1.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 switches.

Description

On the logical interface, specify the maximum number of MPLS labels upon which MPLS can operate.

Options

maximum-labels—Maximum number of labels for the protocol family.

NOTE: On PTX Series routers with third-generation FPCs, the maximum labels that can be pushed cannot exceed 8 labels.

Range: 3 through 16

Default: 3

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Maximum Number of MPLS Labels | 461](#)

Junos OS VPNs Library for Routing Devices

minimum-bandwidth-adjust-interval

Syntax

```
minimum-bandwidth-adjust-interval seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Specify the duration (in seconds) for which minimum bandwidth is frozen.

Options

seconds—Minimum bandwidth reallocation interval, in seconds.

Range: 300 through 31,536,000 seconds.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth](#) | 519

minimum-bandwidth-adjust-threshold-change

Syntax

```
minimum-bandwidth-adjust-threshold-change percentage;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Specify the percentage change in maximum average bandwidth to freeze the minimum bandwidth.

Options

percentage—Percentage change in maximum average bandwidth.

Range: Range: 0 through 100 percent.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth](#) | 519

minimum-bandwidth-adjust-threshold-value

Syntax

```
minimum-bandwidth-adjust-threshold-value bps;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Specify the value in bits per second (bps) to freeze the minimum bandwidth if the maximum average bandwidth falls below this value.

Options

bps—Threshold value for minimum bandwidth if the maximum average bandwidth falls below the specified value.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth](#) | 519

metric (Protocols MPLS)

Syntax

```
metric metric;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],  
[edit protocols mpls label-switched-path lsp-name],  
[edit protocols mpls static-label-switched-path lsp-name ingress]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Compare against another LSP or against an IGP route. To disable dynamic metric tracking, assign a fixed metric value to an LSP. If no metric is assigned, the LSP metric is dynamic and automatically tracks underlying IGP metrics.

Options

metric—LSP metric value.

Default: No metric assigned (dynamic)

Range: 1 through 16,777,215

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Static LSP Metrics](#) | 497

minimum-bandwidth

Syntax

```
minimum-bandwidth bps;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Set the minimum bandwidth in bps for an LSP with automatic bandwidth allocation enabled.

NOTE: For a label-switched path (LSP) that has both **bandwidth** and **minimum-bandwidth** for autobandwidth configured under the **[edit protocols mpls label-switched-path lsp-name]** hierarchy level, the LSP bandwidth is adjusted differently.

The LSP is initiated with the bandwidth value configured under the **bandwidth** statement at the **[edit protocols mpls label-switched-path lsp-name]** hierarchy level. At the expiry of the **adjust-interval** timer, the LSP bandwidth gets adjusted based on the traffic flow.

If the bandwidth to be signaled is less than the value configured under the **minimum-bandwidth** statement at the **[edit protocols mpls label-switched-path lsp-name autobandwidth]** hierarchy level, then the LSP is signaled only using the minimum bandwidth.

If the bandwidth to be signaled is greater than the value configured under the **maximum-bandwidth** statement at the **[edit protocols mpls label-switched-path lsp-name autobandwidth]** hierarchy level, then the LSP is signaled only using the maximum bandwidth.

Options

bps—Minimum bandwidth for the LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth](#) | 519

monitor-bandwidth

Syntax

```
monitor-bandwidth;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Do not automatically adjust bandwidth allocation. However, the maximum average bandwidth utilization is monitored on the LSP, and the information is recorded in the MPLS statistics file.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Passive Bandwidth Utilization Monitoring](#) | 522

most-fill

See

[random](#)

mpls (Protocols)

Syntax

```
mpls { ... }
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols],  
[edit protocols]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Enable MPLS on the router.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring MPLS](#) | 38

mpls

Syntax

```
mpls {
    disable;
    class-of-service cos-value;
    no-cspf;
    no-decrement-ttl;

    advertisement-hold-time seconds;
    explicit-null;
    icmp-tunneling;
    interface (interface-name | all) {
        disable;
    }
    ipv6-tunneling;
    no-propagate-ttl;
    path path-name {
        (address | hostname) <loose | strict>;
    }
    label-switched-path lsp-name {
        disable;
        auto-bandwidth {
            adjust-interval seconds;
            adjust-threshold percentage;
            adjust-threshold-overflow-limit count;
            adjust-threshold-underflow-limit
            maximum-bandwidth bps;
            minimum-bandwidth bps;
            monitor-bandwidth;
        }
        description text-string;
        from address;
        install destination-prefix</prefix-length> <active>;
        ldp-tunneling;
        no-cspf;
        no-decrement-ttl;
        primary path-name {
            adaptive;
            select (manual | unconditional);
        }
        secondary path-name {
            adaptive;
            select (manual | unconditional);
        }
    }
}
```

```

    }
    to address;
    traceoptions {
        file filename <files number> <size maximum-file-size> <world-readable | no-world-readable>;
        flag flag;
    }
}
static-label-switched-path lsp-name {
    bypass bypass-name {
        description text-string;
        next-hop (address | interface-name | address/interface-name);
        to address;
    }
    ingress {
        description string;
        install {
            destination-prefix <active>;
        }
        link-protection bypass-name name;
        next-hop (address | interface-name | address/interface-name);
        to address;
    }
    transit incoming-label {
        bandwidth bps;
        description text-string;
        link-protection bypass-name name;
        next-hop (address | interface-name | address/interface-name);
        pop;
        swap out-label;
    }
    statistics {
        auto-bandwidth;
        file filename <files number> <size maximum-file-size> <world-readable | no-world-readable>;
        interval seconds;
    }
    traceoptions {
        file filename <files number> <size maximum-file-size> <world-readable | no-world-readable>;
        flag flag;
    }
    traffic-engineering (bgp | bgp-igp);
}
}

```

Hierarchy Level

[edit protocols]

Release Information

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Statement introduced in Release 19.4R1 for cRPD.

Description

Enable MPLS on the switch.

The remaining statements are explained separately.

Default

MPLS is disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring MPLS on EX8200 and EX4500 Switches | 41](#)

[Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS | 1218](#)

[Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect | 1221](#)

[Configuring MPLS on EX8200 and EX4500 Provider Switches | 77](#)

[Junos OS MPLS Applications Configuration Guide](#)

mpls-tp-mode

Syntax

```
mpls-tp-mode;  
lsping-channel-type;
```

Hierarchy Level

```
[edit protocols mpls label-switched-path lsp-name oam],  
[edit protocols mpls oam]
```

Release Information

Statement introduced in Junos OS Release 12.1.

lsping-channel-type statement introduced in Junos OS Release 16.1.

Description

Enable GAL or G-Ach OAM operation without IP encapsulation on a label-switched path (LSP).

Include this statement at the **[edit protocols mpls oam]** hierarchy level to enable GAL or G-Ach OAM operation without IP encapsulation on all LSPs in the MPLS network. Include this statement at the **[edit protocols mpls label-switched-path *lsp-name* oam]** hierarchy level to enable GAL and G-Ach OAM operation without IP encapsulation on a specific LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring the MPLS Transport Profile for OAM](#) | 1125

mtu-signaling

Syntax

```
mtu-signaling;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls path-mtu rsvp],  
[edit protocols mpls path-mtu rsvp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable MTU signaling in RSVP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Enabling MTU Signaling in RSVP](#) | 805

neighbor (Protocols Layer 2 Circuit)

Syntax

```
neighbor address {
  interface interface-name {
    backup-neighbor address {
      community name;
      hot-standby;
      psn-tunnel-endpoint address;
      standby;
      virtual-circuit-id number;
    }
    bandwidth (bandwidth | ctnumber bandwidth);
    community community-name;
    (control-word | no-control-word);
    description text;
    egress-protection {
      protected-l2circuit {
        egress-pe address;
        ingress-pe address;
        virtual-circuit-id identifier;
      }
      protector-interface interface-name;
      protector-pe address {
        context-identifier identifier;
        lsp lsp-name;
      }
    }
  }
  encapsulation-type type;
  ignore-encapsulation-mismatch;
  ignore-mtu-mismatch;
  mtu mtu-number;
  no-revert;
  protect-interface interface-name;
  pseudowire-status-tlv hot-standby-vc-on;
  psn-tunnel-endpoint address;
  revert-time seconds;
  static {
    incoming-label label;
    outgoing-label label;
    send-oam;
  }
  switchover-delay milliseconds;
```

```

    virtual-circuit-id identifier;
  }
}

```

Hierarchy Level

```

[edit logical-systems logical-system-name protocols l2circuit],
[edit protocols l2circuit]

```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Description

Each Layer 2 circuit is represented by the logical interface connecting the local provider edge (PE) router or switch to the local customer edge (CE) router or switch. All the Layer 2 circuits using a particular remote PE router or switch designated for remote CE routers or switches are listed under the **neighbor** statement (neighbor designates the PE router or switch). Each neighbor is identified by its IP address and is usually the end-point destination for the LSP tunnel (transporting the Layer 2 circuit).

Options

address—IP address of a neighboring router or switch.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring the Neighbor Interface for the Layer 2 Circuit*

next-hop (Protocols MPLS)

Syntax

```
next-hop (address | interface-name | address/interface-name);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name bypass],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name transit incoming-label],
[edit protocols mpls static-label-switched-path lsp-name bypass],
[edit protocols mpls static-label-switched-path lsp-name ingress],
[edit protocols mpls static-label-switched-path lsp-name transit incoming-label]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Support for IPv6 addresses in static LSP configurations added in Junos OS Release 17.2R1.

Support for IPv4 or IPv6 lookup after popping the label added in Junos OS Release 17.4R1.

Description

Location of the next hop to the destination, specified as the IPv4 or IPv6 address of the next hop, the interface name (for point-to-point interfaces only), or the ***address/interface-name*** to specify an IP address on an operational interface.

Options

address—IPv4 or IPv6 address of the next-hop router.

NOTE: IPv6 static LSPs are not supported at the [edit protocols mpls static-label-switched-path *lsp-name* ingress] hierarchy level.

interface-name—IP address of the outgoing interface. It must be a point-to-point interface. The name can be a simple or fully qualified domain name.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

no-bfd-triggered-local-repair

Syntax

```
no-bfd-triggered-local-repair;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options],  
[edit routing-options]
```

Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Disable Bidirectional Forwarding Detection (BFD) sessions to trigger fast reroute (FRR) using MPLS-FRR and loop-free alternates (LFAs). When this statement is configured, no BFD-triggered local repair is supported. However, logical interface down-based local repair is in force.

When using this statement to disable local repair, you also must restart routing to ensure proper behavior. To restart routing, include the **graceful-restart** command for the interior gateway protocol (IGP) used in your configuration. For example, if your IGP is OSPF, include the **graceful-restart** statement at the [edit protocols ospf] hierarchy level.

Default

BFD-triggered local repair is the default behavior. The loss of a neighbor results in BFD local repair for all next hops that derive themselves from the base next hop with which the BFD session is established.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[BFD-Triggered Local Repair for Rapid Convergence](#) | 140

[graceful-restart \(Enabling Globally\)](#) | 1822

no-cspf

Syntax

```
no-cspf;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Disable constrained-path LSP computation.

An explicit-path LSP is completely configured through operator action. Once configured, it is initiated only along the explicitly specified path.

A constrained-path LSP relies on an ingress router to compute the complete path. The ingress router takes into account the following information during the computation:

- Interior gateway protocol (IGP) topology database
- Link utilization information from extensions in the IGP link-state database
- Administrative group information from extensions in the IGP link-state database
- LSP requirements, including bandwidth, hop count, and administrative group

Constrained-path LSPs can generally avoid link failures and congested links. They also permit recomputation (therefore, a new path) during topology changes or unsuccessful setup.

Default

Constrained-path LSP computation enabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Disabling Constrained-Path LSP Computation | 482](#)

[Configuring Explicit-Path LSPs | 563](#)

no-decrement-ttl

Syntax

```
no-decrement-ttl;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 on the QFX Series.

Statement introduced in Junos OS Evolved Release 19.3R1 on PTX10003.

Statement introduced in Junos OS Evolved Release 20.1R1 on PTX10008.

Description

Disable normal time-to-live (TTL) decrementing, which decrements the TTL field in the IP header by 1. This statement decrements the IP TTL by 1 before encapsulating the IP packet within an MPLS packet. When the penultimate router pops off the top label, it does not use the standard write-back procedure of writing the MPLS TTL into the IP TTL field. Therefore, the IP packet is decremented by 1. The ultimate router then decrements the packet by one more for a total cloud appearance of 2, thus hiding the network topology.

Default

Normal TTL decrementing enabled; the TTL field value is decremented by 1 as the packet passes through each label-switched router in the LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Disabling Normal TTL Decrementing

| no-propagate-ttl | 1828

graceful-restart (Enabling Globally)

Syntax

```
graceful-restart {  
  disable;  
  helper-disable;  
  maximum-helper-recovery-time seconds;  
  maximum-helper-restart-time seconds;  
  notify-duration seconds;  
  recovery-time seconds;  
  restart-duration seconds;  
  stale-routes-time seconds;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options],  
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],  
[edit routing-options],  
[edit routing-instances routing-instance-name routing-options]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 12.1 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

You configure the graceful restart routing option globally to enable the feature, but not to enable graceful restart for all routing protocols in a routing instance. To enable graceful restart globally, include the graceful-restart statement under the **[edit routing options]** hierarchy level. This enables graceful restart globally for all routing protocols. You can, optionally, modify the global settings at the individual protocol level.

NOTE:

- For VPNs, the **graceful-restart** statement allows a router whose VPN control plane is undergoing a restart to continue to forward traffic while recovering its state from neighboring routers.
- For BGP, if you configure graceful restart after a BGP session has been established, the BGP session restarts and the peers negotiate graceful restart capabilities.
- LDP sessions flap when **graceful-restart** configurations change.

Default

Graceful restart is disabled by default.

Options

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Enabling Graceful Restart

Configuring Routing Protocols Graceful Restart

Configuring Graceful Restart for MPLS-Related Protocols

Configuring VPN Graceful Restart

Configuring Logical System Graceful Restart

Configuring Graceful Restart for QFabric Systems

helper-disable (Multiple Protocols)

Syntax

```
helper-disable;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols (isis | ldp | ospf | ospf3 | rsvp) graceful-restart],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ldp | ospf | ospf3)
graceful-restart],
[edit protocols (isis | ldp | ospf | ospf3 | rsvp) graceful-restart],
[edit routing-instances routing-instance-name protocols (ldp | ospf | ospf3) graceful-restart]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Disable helper mode for graceful restart. When helper mode is disabled, a router or switch cannot help a neighboring router that is attempting to restart.

Default

Helper mode is enabled by default for these supported protocols: IS-IS, LDP, OSPF/OSPFv3, and RSVP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Routing Protocols Graceful Restart](#)

[Configuring Graceful Restart for MPLS-Related Protocols](#)

no-install-to-address

Syntax

```
no-install-to-address;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],  
[edit protocols mpls label-switched-path lsp-name],  
[edit protocols mpls static-label-switched-path lsp-name ingress]
```

Release Information

Statement introduced in Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Prevent the egress router address configured using the **to** statement from being installed into the inet.3 and inet.0 routing tables.

Default

The egress router address for an LSP is installed into the inet.3 and inet.0 routing tables.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Preventing the Addition of Egress Router Addresses to Routing Tables | 485](#)
[to | 1931](#)

no-load-balance-label-capability

Syntax

```
no-load-balance-label-capability;
```

Hierarchy Level

```
[edit forwarding-options]
```

Release Information

Statement introduced in Junos OS Release 14.1.

Description

Disables advertisement of entropy label capability in LDP and RSVP.

When you configure the **no-load-balance-label-capability** statement, it also disables the flow-aware transport of pseudowires (FAT) flow label for FEC 128.

The **load-balance-label-capability** and **no-load-balance-label-capability** statements at the **[edit forwarding-options]** hierarchy level are mutually exclusive, and at a given point in time, configuring one statement overrides the other.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[load-balance-label-capability](#) | 1786

[entropy-label](#) | 1724

[Configuring the Entropy Label for LSPs](#) | 533

no-mcast-replication

Syntax

```
no-mcast-replication;
```

Hierarchy Level

```
[edit chassis fpc slot-number pic pic-number],  
[edit chassis lcc number fpc slot-number pic pic-number]
```

Release Information

Statement introduced in Junos OS Release 11.3.

Description

For point-to-multipoint LSPs configured on T Series routers, protect the Packet Forwarding Engine (PFE) from bandwidth saturation. When a PFE does not need to replicate traffic, the PFE's bandwidth is less likely to become saturated. When you include the **no-mcast-replication** statement, the PFE is forced to be a leaf node in the binary tree. Leaf nodes, unlike branch nodes, do not replicate traffic in the process of forwarding traffic. Because leaf nodes have no children, they do not need to replicate traffic, and thus are less likely to become saturated with traffic.

Default

If you omit the **no-mcast-replication** statement, the PFE can become a branch node or a leaf node. When the PFE becomes a branch node, the PFE must replicate traffic.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Point-to-Multipoint LSPs Overview](#) | 656

no-propagate-ttl

Syntax

```
no-propagate-ttl;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 on the QFX Series.

Statement introduced in Junos OS Evolved Release 20.1R1 on PTX10008.

Description

Disable normal time-to-live (TTL) decrementing. You configure this statement once per router, and it affects all RSVP-signaled or LDP-signaled LSPs. When this router acts as an ingress router for an LSP, it pushes an MPLS header with a TTL value of 255, regardless of the IP packet TTL. When the router acts as the penultimate router, it pops the MPLS header without writing the MPLS TTL into the IP packet.

When you add the **no-propagate-ttl** statement to the configuration or delete it from the configuration, the effect takes place immediately. There is no need to clear existing RSVP LSPs or LDP sessions.

Default

Normal TTL decrementing enabled; the TTL field value is decremented by 1 as the packet passes through each label-switched router in the LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Disabling Normal TTL Decrementing

Example: Diagnosing Networking Problems Related to Layer 3 VPNs by Disabling TTL Decrementing (on Layer 3 VPNs User Guide for Routing Devices or in the Junos VPNs Configuration Guide)

[no-decrement-ttl](#) | **1820**

no-transit-statistics

Syntax

```
no-transit-statistics;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls statistics],  
[edit protocols mpls statistics]
```

Release Information

Statement introduced in Junos OS Release 10.2 for PTX Series.

Description

(PTX Series only) Disables the collection of MPLS statistics for LSPs transiting the router.

Required Privilege Level

routing and trace—To view this statement in the configuration.

routing-control and trace-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring MPLS to Gather Statistics](#) | [386](#)

[statistics](#) | [1922](#)

no-trap

Syntax

```
no-trap {  
    mpls-lsp-traps;  
    rfc-3812-traps;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls log-updown],  
[edit protocols mpls log-updown]
```

Release Information

Statement introduced before Junos OS Release 7.4.

The **mpls-lsp-traps** and **rfc-3812-traps** options added in Junos OS Release 9.0.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Prevent the transmission of SNMP traps.

Options

mpls-lsp-traps—Block the MPLS LSP traps defined in the **rfc-3812-traps**, but allows the **rfc3812.mib** traps.

rfc-3812-traps—Block the traps defined in the **rfc3812.mib**, but allows the MPLS LSP traps defined in the **jnx-mpls.mib**.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[System Log Messages and SNMP Traps for MPLS | 159](#)

Network Management and Monitoring Guide

[traceoptions \(Protocols MPLS\) | 1932](#)

node-protection (Static LSP)

Syntax

```
node-protection bypass-name name next-next-label label;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],  
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name transit incoming-label],  
[edit protocols mpls static-label-switched-path lsp-name ingress],  
[edit protocols mpls static-label-switched-path lsp-name transit incoming-label]
```

Release Information

Statement introduced in JUNOS Release 10.1.

Description

Enable node protection on the specified static bypass LSP. Node protection ensures that traffic from an LSP traversing a neighboring router can continue to reach its destination even if the neighboring router fails.

Default

Node protection is disabled.

Options

bypass-name *name*—Bypass LSP name.

next-next-label *label*—Bypass LSP name.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Static LSPs](#) | 573

normalization

Syntax

```
normalization {
    failover-normalization;
    no-incremental-normalize;
    normalization-retry-duration seconds;
    normalization-retry-limits number;
    normalize-interval seconds;
}
```

Hierarchy Level

```
[edit protocols mpls container-label-switched-path lsp-name splitting-merging]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Statement introduced in Junos OS Release 17.2R1 for QFX Series switches.

Description

Perform normalailzation.

Options

failover-normalization—Enable the ingress router to pro-actively normalize or re-distribute traffic when a link or node failure happens on a member LSP. A member LSP can go down between two scheduled normalization events because of a link-failure or pre-emption.

Default: Disabled

no-incremental-normalize—Disables automatic switchover by the ingress router to a new instance of the container LSP until the desired demand is satisfied, although the given number of LSPs can be successfully signaled such that the new aggregate bandwidth value exceeds the old aggregate bandwidth value.

Default: False (disabled)

normalization-retry-duration *seconds*—Specifies the duration before which the ingress router performs a normalization reattempt when the previous normalization has not been successful. Normalization is done until a sufficient number of LSPs come up with an aggregate bandwidth that is more than the current aggregate or desired bandwidth.

Default: 30 seconds

normalization-retry-limits *number*—Specifies the maximum number of times the ingress router performs normalization reattempts until a sufficient number of LSPs come up successfully with new bandwidth values.

Default: 1

normalize-interval *seconds*—Specifies the duration between two normalization events.

Range: 21600 seconds through 6 hours

Default: 21600 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [splitting-merging](#) | [1911](#)

oam (Protocols MPLS)

Syntax

```

oam {
  bfd-liveness-detection{
    failure-action teardown;
    minimum-interval milliseconds;
    minimum-receive-interval milliseconds;
    minimum-transmit-interval milliseconds;
    multiplier detection-time-multiplier;
  }
  lsp-ping-interval seconds;
  mpls-tp-mode;
  performance-monitoring {
    querier {
      loss {
        traffic-class tc-value {
          query-interval milliseconds;
          measurement-quantity bytes|packets;
          average-sample-size sample size;
          loss-threshold loss threshold value;
          loss-threshold-window number of samples for loss threshold;
        }
      }
    }
    delay {
      traffic-class tc-value {
        query-interval milliseconds;
        padding-size size;
        average-sample-size sample size;
        rtt-delay-threshold rtt threshold value;
        twcd-delay-threshold twcd threshold value;
      }
    }
  }
  loss-delay {
    traffic-class tc-value {
      query-interval milliseconds;
      measurement-quantity bytes|packets;
      padding-size size;
      average-sample-size sample size;
      loss-threshold loss threshold value;
      loss-threshold-window number of samples for loss threshold;
      rtt-delay-threshold rtt threshold value;
      twcd-delay-threshold twcd threshold value;
    }
  }
}

```

```

    }
  }
  responder {
    loss {
      min-query-interval milliseconds;
    }
    delay {
      min-query-interval milliseconds;
    }
  }
}
}
}

```

Hierarchy Level

```

[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name]
[edit protocols mpls label-switched-path lsp-name primary path-name]

```

Release Information

Statement introduced in Junos OS Release 7.6.

lsp-ping-interval option introduced in Junos OS Release 9.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

performance-monitoring configuration statement introduced in Junos OS Release 15.1.

Description

Enable Operation, Administration, and Maintenance (OAM) for RSVP-signaled LSPs.

Options

lsp-ping-interval *seconds*—Specify the duration of the LSP ping interval in seconds. To issue a ping on an RSVP-signaled LSP, use the **ping mpls rsvp** command.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring BFD for MPLS IPv4 LSPs](#) | 142

optimize-adaptive-teardown

Syntax

```
optimize-adaptive-teardown {  
  p2p:  
    delay value (3..65535 seconds)  
}
```

Hierarchy Level

[edit protocols mpls]

Release Information

Statement introduced in Junos OS Release 15.1R1.

Description

Make use of a new feedback mechanism from TAG library which relies on RPD infrastructure to decide when all the routes using the old LSP instance have fully shifted to the new LSP instance after MBB switchover. When this statement is configured, the **optimize-hold-dead-delay** statement, which delays the teardown of the old LSP instance after MBB switchover, is ignored.

Options

p2p—Only point-to-point LSPs configured in the system will be affected.

delay—Delays the tearing down of old optimized LSP paths based on the configured value.

Range: from 3 through 65535 seconds

Default: 600 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Optimizing Signaled LSPs | 510](#)

[Achieving a Make-Before-Break, Hitless Switchover for LSPs | 507](#)

optimize-aggressive

Syntax

```
optimize-aggressive;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

If enabled, the LSP reoptimization is based solely on the IGP metric. The reoptimization process ignores the available bandwidth ratio calculations, the least-fill 10 percent congestion improvement rule, and the hop-counts rule. This statement makes reoptimization more aggressive than the default.

Default

Aggressive optimization is disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Optimizing Signaled LSPs](#) | 510

optimize-hold-dead-delay

Syntax

```
optimize-hold-dead-delay seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switch-path lsp-name],
[edit protocols mpls],
[edit protocols mpls label-switch-path lsp-name]
```

Description

Allows you to specify the amount of time to delay the tear down of old paths after the router has switched traffic to new optimized paths. This delay timer starts when the timer specified by the **optimize-switchover-delay** statement has elapsed, which is typically 30 seconds, and at the start of the next retry sequence (in other words, the delay is not an absolute countdown of the seconds configured here).

You only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). The specified delay helps to ensure that old paths are not torn down before all routes have been switched over to the new optimized paths.

Options

seconds—Configure the time in seconds to wait before tearing down the old paths that were in use prior to the last LSP optimization.

Default: 60 to 90 seconds

Range: 0 through 65,535 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Optimizing Signaled LSPs | 510](#)

[optimize-switchover-delay | 1840](#)

[optimize-timer | 1841](#)

optimize-switchover-delay

Syntax

```
optimize-switchover-delay seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced in Junos OS Release 11.1R1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Delays the switch over of LSPs to newly optimized paths. You only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). The specified delay helps to ensure that the new optimized paths have been established before traffic is switched over from the old paths.

Options

seconds—Configure the time in seconds to wait before switching LSPs to newly optimized paths.

Default: 1 second

Range: 1 through 900 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Optimizing Signaled LSPs | 510](#)

[optimize-hold-dead-delay | 1839](#)

[optimize-timer | 1841](#)

optimize-timer (Protocols MPLS)

Syntax

```
optimize-timer seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Enable periodic reoptimization of an LSP that is already set up. If topology changes occur, an existing path might become suboptimal, and a subsequent recomputation might be able to determine a better path. This feature is useful only on LSPs for which constrained-path computation is enabled; that is, for which the **no-cspf** statement is not configured. Also, you only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers).

To avoid extensive resource consumption that might result because of frequent path recomputations, or to avoid destabilizing the network as a result of constantly changing LSPs, we recommend that you either leave the timer value sufficiently large or disable the timer value.

Default

The optimize timer is disabled.

Options

seconds—Length of the optimize timer, in seconds.

Range: 0 through 65,535 seconds

Default: 0 seconds (the optimize timer is disabled)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Optimizing Signaled LSPs](#) | 510

p2mp (Protocols MPLS)

Syntax

```
p2mp p2mp-lsp-name;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

Description

Specify an LSP as either a point-to-multipoint LSP or as a branch LSP of a point-to-multipoint LSP by specifying the point-to-multipoint LSP path name.

Options

p2mp-lsp-name—Name of the point-to-multipoint LSP path that identifies the sequence of nodes that form the point-to-multipoint LSP. The name can contain up to 32 characters and can include letters, digits, periods, and hyphens. To include other characters or use a longer name, enclose the name in quotation marks. The name must be unique within the ingress router.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Primary Point-to-Multipoint LSP](#) | 686

p2mp-lsp-next-hop

Syntax

```
p2mp-lsp-next-hop {
    metric metric;
    preference preference;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options static route
destination-prefix],
[edit logical-systems logical-system-name routing-options static route destination-prefix],
[edit routing-instances routing-instance-name routing-options static route destination-prefix],
[edit routing-options static route destination-prefix]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Specify a point-to-multipoint LSP as the next hop for a static route, and configure an independent metric or preference on that next-hop LSP.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Static Unicast Routes for Point-to-Multipoint LSPs | 581](#)

[Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP | 660](#)

[Example: Configuring an RSVP-Signaled Point-to-Multipoint LSP on Logical Systems](#)

path (Protocols MPLS)

Syntax

```
path path-name {
    abstract-hop-name (abstract | loose | loose-link | strict);
    (address | hostname) <strict | loose>;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.

abstract-hop-name option introduced in Junos OS Release 17.1 for all platforms.

Description

Create a named path and optionally specify the sequence of explicit routers that form the path.

You must include this statement when configuring explicit LSPs.

Options

abstract-hop-name—Name of the predefined abstract hop. The abstract hop can be used in combination with real IP next hops. An abstract hop is traversed by traversing the member nodes. This traversal can be done by either links that satisfy the logical combination of defined constituent attributes, or by any kind of link. This choice is controlled by the use of abstract hop qualifiers – abstract, loose, loose-link, and strict.

abstract—Indicate that the next hop configured in the **path** statement is an abstract hop..

loose-link—Indicate that the next hop in the **path** statement is a loose-link abstract hop. This means that the LSP cannot traverse other routers before reaching this router. In other words, the abstract hop of type loose-link is processed only if any of the viable routers is reached in constraint through a link of associated abstract hop membership.

loose—Indicate that the next hop in the **path** statement is a loose abstract hop. The path can traverse any real nodes that do not have abstract hop membership, before reaching a node with abstract hop membership, which is a feasible starting point for processing the next abstract hop.

strict—Indicate that the next hop in the **path** statement is a strict abstract hop. After the last processed hop in the constraint list, the path can traverse any real nodes that do not have abstract hop membership, before reaching a node with abstract hop membership, which is a feasible starting point for processing the next abstract hop.

address—IP address of each transit router in the LSP. You must specify the address or hostname of each transit router, although you do not need to list each transit router if its type is **loose**. As an option, you can include the ingress and egress routers in the path. Specify the addresses in order, starting with the ingress router (optional) or the first transit router, and continuing sequentially along the path until reaching the egress router (optional) or the router immediately before the egress router.

Default: If you do not specify any routers explicitly, no routing limitations are imposed on the LSP.

hostname—See **address**.

Default: If you do not specify any routers explicitly, no routing limitations are imposed on the LSP.

loose—(Optional) Indicate that the next address in the **path** statement is a loose link. This means that the LSP can traverse through other routers before reaching this router.

Default: **strict**

path-name—Name that identifies the sequence of nodes that form an LSP. The name can contain up to 32 characters and can include letters, digits, periods, and hyphens. To include other characters or use a longer name, enclose the name in quotation marks. The name must be unique within the ingress router.

strict—(Optional) Indicate that the LSP must go to the next address specified in the **path** statement without traversing other nodes. This is the default.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Creating Named Paths | 487](#)

[abstract-hop | 1656](#)

path

Syntax

```
path destination {
  <address | hostname> <strict | loose>
}
```

Hierarchy Level

[edit protocols [mpls](#)]

Release Information

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Configure path protection on your MPLS network.

Options

destination —Name of a label switched path (LSP). In addition to specifying the name of the configured LSP, you can include some other designation such as **primary-path**.

address —(Optional) IP address of each transit switch (or the IP address of the loopback interface on the switch) in the LSP. If you want to control exactly which switches are selected for the LSP, specify the address or hostname of each transit switch. Specify the addresses in order, starting with the first provider (transit) switch, and continuing sequentially along the path until reaching the egress provider edge switch.

Default: If you do not specify the addresses or hostnames of any switches, the LSP is calculated by the switch.

hostname —(Optional) See **address** .

Default: If you do not specify the addresses or hostnames of any switches, the LSP is calculated by the switch.

loose—(Optional) Indicates that the next address in the **path** statement is a loose link. This means that the LSP can traverse through other switches before reaching this switch.

Default: **strict**

strict—(Optional) Indicates that the LSP must go to the next address specified in the **path** statement without traversing other switches. This is the default.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Path Protection in an MPLS Network \(CLI Procedure\) | 279](#)

path-mtu

Syntax

```
path-mtu {  
    allow-fragmentation;  
    rsvp {  
        mtu-signaling;  
    }  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Configure MTU options for MPLS paths, including packet fragmentation and MTU signaling.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring MTU Signaling in RSVP | 804](#)

per-prefix-label

Syntax

```
per-prefix-label;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp family inet labeled-unicast],
[edit logical-systems logical-system-name protocols bgp group group-name family inet labeled-unicast],
[edit protocols bgp family inet labeled-unicast],
[edit protocols bgp group group-name family inet labeled-unicast],
[edit routing-instances instance-name logical-systems logical-system-name protocols bgp family inet labeled-unicast],
[edit routing-instances instance-name logical-systems logical-system-name protocols bgp group group-name family
  inet labeled-unicast],
[edit routing-instances instance-name protocols bgp family inet labeled-unicast],
[edit routing-instances instance-name protocols bgp group group-name family inet labeled-unicast]
```

Release Information

Statement introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.

Statement introduced in Junos OS Release 12.3 for M Series, T Series, and MX Series routers.

Description

Allocate a unique label for each prefix. The **per-prefix-label** statement helps minimize packet loss in most deployments.

Although allocating a label for each prefix is not generally ideal for scaling, it is assumed that a small number of labels are used for BGP labeled-unicast. When labeled BGP is used to set up transport label-switched paths (LSPs), the common case is that each prefix has a unique next hop. Thus, the use of per-prefix labels does not have an adverse scaling impact. On the contrary, the use of per-prefix labels reduces churn in the network when multipath load balancing is enabled for IPv4 labeled-unicast, and a subset of the paths are withdrawn for some reason.

The advantage of per-prefix labeling is that the advertised upstream label is more stable during network changes. That is, if the downstream label changes, the advertised upstream label remains the same under most scenarios. This way, the upstream router is isolated from the downstream network change, and the overall network is more stable. The greater stability of the advertised upstream label helps to reduce traffic loss during many different network change scenarios.

Default

By default, label allocation is per next-hop router.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [MPLS Label Allocation](#) | 421

performance-monitoring (Protocols MPLS)

Syntax

```

performance-monitoring {
  querier {
    delay {
      traffic-class tc-value {
        average-sample-size sample size;
        padding-size size;
        query-interval milliseconds;
        rtt-delay-threshold rtt threshold value;
        twcd-delay-threshold twcd threshold value;
      }
    }
    loss {
      traffic-class tc-value {
        average-sample-size sample size;
        loss-threshold loss threshold value;
        loss-threshold-window number of samples for loss threshold;
        measurement-quantity bytes|packets;
        query-interval milliseconds;
      }
    }
    loss-delay {
      traffic-class tc-value {
        average-sample-size sample size;
        loss-threshold loss threshold value;
        loss-threshold-window number of samples for loss threshold;
        measurement-quantity bytes|packets;
        padding-size size;
        query-interval milliseconds;
        rtt-delay-threshold rtt threshold value;
        twcd-delay-threshold twcd threshold value;
      }
    }
  }
  responder {
    delay {
      min-query-interval milliseconds;
    }
    loss {
      min-query-interval milliseconds;
    }
  }
}

```

```
}
```

Hierarchy Level

```
[edit protocols mpls oam],  
[edit protocols mpls label-switched-path lsp-name oam],  
[edit protocols mpls label-switched-path lsp-name primary path-name oam],  
[edit protocols mpls label-switched-path lsp-name secondary path-name oam]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure performance monitoring options.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

policing (Protocols MPLS)

Syntax

```
policing {  
    filter filter-name;  
    no-auto-policing;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],  
[edit protocols mpls label-switched-path lsp-name],  
[edit protocols mpls static-label-switched-path lsp-name ingress]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the policing filter for the LSP.

Options

filter *filter-name*—Specify the name of the policing filter.

no-auto-policing—Disable automatic policing on this LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Policers for LSPs | 148](#)

[auto-policing | 1684](#)

policing

Syntax

```
policing (filter filter-name | no-automatic-policing);
```

Hierarchy Level

```
[edit protocols mpls label-switched-path lsp-name]  
[edit interfaces interface-id unit number-of-logical-unit family inet address ip-address]
```

Release Information

Statement introduced in Junos OS Release 10.1 for EX Series switches.

Description

Apply a rate-limiting policer as the specified policing filter:

- To the LSP for MPLS over CCC.
- To the customer-edge interface for IP over MPLS.

Options

filter *filter-name*—Specify the name of the policing filter.

no-automatic-policing—Disable automatic policing on this LSP.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

policer

Configuring Policers to Control Traffic Rates (CLI Procedure)

[Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect](#) | **1221**

[Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS](#) | **1218**

policy-multipath

Syntax

```
policy-multipath policy [ policy ]
  traceoptions <file filename <files files> <size size> <(world-readable | no-world-readable)>> name detail disable
  receive send
}
```

Hierarchy Level

```
[edit logical-systems name routing-instances name routing-options rib],
[edit logical-systems name routing-options rib],
[edit logical-systems name tenants name routing-instances name routing-options rib],
[edit routing-instances name routing-options rib],
[edit routing-options rib],
[edit tenants name routing-instances name routing-options rib]
```

Release Information

Statement introduced in Junos OS Release 19.1R1 for all platforms.

Description

Create policy-based multipath route using a combination of segment routing traffic-engineered (SR-TE) LDP or RSVP routes and SR-TE IP routes. You can resolve BGP service routes over the multipath route, and apply export policies to steer traffic differently for different prefixes. The policy-based multipath feature is supported for both IP and IPv6 protocols.

Options

policy—Import policy to create policy-based multipath.

NOTE: This statement is supported only at the **[edit routing-option policy-multipath]** hierarchy level.

Any action commands configured in the policy, such as apply, is evaluated using the active route. For non-active routes, the policy is applied to check if the routes can participate in the multipath route or not. Multipath routes inherit all attributes of the active route. These attributes can be modified using the multipath policy configuration.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing

RELATED DOCUMENTATION

| [Policy-Based Multipath Routes Overview](#) | 187

policy-statement

Syntax

```

policy-statement policy-name {
  term term-name {
    from {
      as-path-unique-count count (equal | orhigher | orlower);
      family family-name;
      match-conditions;
      policy subroutine-policy-name;
      prefix-list prefix-list-name;
      prefix-list-filter prefix-list-name match-type <actions>;
      protocol protocol-name;
      route-filter destination-prefix match-type <actions>;
      source-address-filter source-prefix match-type <actions>;
      tag value;
      traffic-engineering;
    }
    to {
      match-conditions;
      policy subroutine-policy-name;
    }
    then actions;
  }
  then {
    aggregate-bandwidth;
    dynamic-tunnel-attributes dynamic-tunnel-attributes;
    limit-bandwidth limit-bandwidth;
    multipath-resolve;
    no-entropy-label-capability;
    prefix-segment {
      index index;
      node-segment;
    }
    priority (high | medium | low);
    resolution-map map-name;
  }
}

```

Hierarchy Level

```

[edit dynamic-profiles profile-name policy-options],
[edit logical-systems logical-system-name policy-options],

```

[edit policy-options]

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Support for configuration in the dynamic database introduced in Junos OS Release 9.5.

Support for configuration in the dynamic database introduced in Junos OS Release 9.5 for EX Series switches.

inet-mdt option introduced in Junos OS Release 10.0R2.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

route-target option introduced in Junos OS Release 12.2.

Statement introduced in Junos OS 14.1X53-D20 for the OCX Series.

protocol and **traffic-engineering** options introduced in Junos OS Release 14.2.

no-entropy-label-capability option introduced in Junos OS Release 15.1.

priority and **tag value** options introduced in Junos OS Release 17.1.

as-path-unique-count option introduced in Junos OS Release 17.2R1.

prefix-segment option introduced in Junos OS Release 17.2R1 for MX Series routers, PTX Series routers, QFX5100 switches, and QFX10000 switches.

multipath-resolve and **dynamic-tunnel-attributes** options introduced in Junos OS Release 17.3R1.

aggregate-bandwidth and **limit-bandwidth** *limit-bandwidth* options introduced in Junos OS Release 17.4R1 for MX Series, PTX Series, and QFX Series.

l-isis and *l-ospf* keywords at the **protocol** option is introduced in Junos OS Release 19.1R1.

resolution-map statement introduced in Junos OS Release 19.2R1-S1 on MX and PTX Series routers.

lsp and **lsp-regex** options introduced in Junos OS Release 19.4R1.

Description

Define a routing policy, including subroutine policies.

A *term* is a named structure in which match conditions and actions are defined. Routing policies are made up of one or more terms. Each routing policy term is identified by a term name. The name can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. To include spaces in the name, enclose the entire name in double quotation marks.

Each term contains a set of match conditions and a set of actions:

- Match conditions are criteria that a route must match before the actions can be applied. If a route matches all criteria, one or more actions are applied to the route.
- Actions specify whether to accept or reject the route, control how a series of policies are evaluated, and manipulate the characteristics associated with a route.

Generally, a router compares a route against the match conditions of each term in a routing policy, starting with the first and moving through the terms in the order in which they are defined, until a match is made and an explicitly configured or default action of **accept** or **reject** is taken. If none of the terms in the policy match the route, the router compares the route against the next policy, and so on, until either an action is taken or the default policy is evaluated.

If none of the match conditions of each term evaluates to true, the final action is executed. The final action is defined in an unnamed term. Additionally, you can define a default action (either **accept** or **reject**) that overrides any action intrinsic to the protocol.

The order of match conditions in a term is not relevant, because a route must match all match conditions in a term for an action to be taken.

To list the routing policies under the **[edit policy-options]** hierarchy level by **policy-statement** *policy-name* in alphabetical order, enter the **show policy-options** configuration command.

The statements are explained separately.

Options

actions—(Optional) One or more actions to take if the conditions match. The actions are described in *Configuring Flow Control Actions*.

family *family-name*—(Optional) Specify an address family protocol. Specify **inet** for IPv4. Specify **inet6** for 128-bit IPv6, and to enable interpretation of IPv6 router filter addresses. For IS-IS traffic, specify **iso**. For IPv4 multicast VPN traffic, specify **inet-mvpn**. For IPv6 multicast VPN traffic, specify **inet6-mvpn**. For multicast-distribution-tree (MDT) IPv4 traffic, specify **inet-mdt**. For BGP route target VPN traffic, specify **route-target**. For traffic engineering, specify **traffic-engineering**.

NOTE: When **family** is not specified, the routing device or routing instance uses the address family or families carried by BGP. If multiprotocol BGP (MP-BGP) is enabled, the policy defaults to the protocol family or families carried in the network layer reachability information (NLRI) as configured in the *family* statement for BGP. If MP-BGP is not enabled, the policy uses the default BGP address family unicast IPv4.

from—(Optional) Match a route based on its source address.

as-path-unique-count *count* (*equal* | *orhigher* | *orlower*)—(Optional) Specify a number from 0 through 1024 to filter routes based on the number of unique autonomous systems (ASs) in the AS path. Specify the match condition for the unique AS path count.

aggregate-bandwidth—(Optional) Enable BGP to advertise aggregate outbound link bandwidth for load balancing.

dynamic-tunnel-attributes *dynamic-tunnel-attributes*—(Optional) Choose a set of defined dynamic tunnel attributes for forwarding traffic over V4oV6 tunnels.

match-conditions—(Optional in **from** statement; required in **to** statement) One or more conditions to use to make a match. The qualifiers are described in *Routing Policy Match Conditions*.

multipath-resolve *multipath-resolve*—(Optional) Enable the use of all paths for resolution over the specified prefix.

limit-bandwidth *limit-bandwidth*—(Optional) Specify the limit for advertised aggregate outbound link bandwidth for load balancing.

Range: 0 through 4,294,967,295 bytes

no-entropy-label-capability—(Optional) Disable the entropy label capability advertisement at egress or transit routes specified in the policy.

priority (*high* | *medium* | *low*)—(Optional) Configure the priority for an IS-IS route to change the default order in which the routes are installed in the routing table, in the event of a network topology change.

policy subroutine-policy-name—Use another policy as a match condition within this policy. The name identifying the subroutine policy can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" "). Policy names cannot take the form `__.*-internal__`, as this form is reserved. For information about how to configure subroutines, see *Understanding Policy Subroutines in Routing Policy Match Conditions*.

policy-name—Name that identifies the policy. The name can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" ").

prefix-list prefix-list-name—Name of a list of IPv4 or IPv6 prefixes.

prefix-list-filter prefix-list-name—Name of a prefix list to evaluate using qualifiers; **match-type** is the type of match, and **actions** is the action to take if the prefixes match.

protocol protocol-name—Name of the protocol used to control traffic engineering database import at the originating point.

Starting in Junos OS Release 19.1R1, you can specify options to match label IS-IS and label OSPF routes using the **l-isis** and **l-ospf** options, respectively. The **isis** options matches all IS-IS routes, excluding labelled IS-IS routes. The **ospf** option matches all OSPF routes, including OSPFv2, OSPFv3 and labelled OSPF routes.

resolution-map—(Optional) Set resolution map modes. A given resolution-map can be shared across multiple policy-statements.

route-filter destination-prefix match-type <actions>—(Optional) List of routes on which to perform an immediate match; **destination-prefix** is the IPv4 or IPv6 route prefix to match, **match-type** is the type of match (see *Configuring Route Lists*), and **actions** is the action to take if the **destination-prefix** matches.

source-address-filter source-prefix match-type <actions>—(Optional) Unicast source addresses in multiprotocol BGP (MBGP) and Multicast Source Discovery Protocol (MSDP) environments on which to perform an immediate match. **source-prefix** is the IPv4 or IPv6 route prefix to match, **match-type** is the type of match (see *Configuring Route Lists*), and **actions** is the action to take if the **source-prefix** matches.

tag value—(Optional) A numeric value that identifies a route. You can tag certain routes to prioritize them over other routes. In the event of a network topology change, Junos OS updates these routes in the routing table before updating other routes with lower priority. You can also tag some routes to identify and reject them based on your requirement.

term term-name—Name that identifies the term. The term name must be unique in the policy. It can contain letters, numbers, and hyphens (-) and can be up to 64 characters long. To include spaces in the name, enclose the entire name in quotation marks (" "). A policy statement can include multiple terms. We recommend that you name all terms. However, you do have the option to include an unnamed term which must be the final term in the policy. To configure an unnamed term, omit the **term** statement when defining match conditions and actions.

to—(Optional) Match a route based on its destination address or the protocols into which the route is being advertised.

then—(Optional) Actions to take on matching routes. The actions are described in *Configuring Flow Control Actions* and *Configuring Actions That Manipulate Route Characteristics*.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

dynamic-db

Understanding Source Packet Routing in Networking (SPRING)

pop

Syntax

```
pop;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name transit incoming-label],  
[edit protocols mpls static-label-switched-path lsp-name transit incoming-label]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Remove the label from the top of the label stack. If there is another label in the stack, that label becomes the label at the top of the label stack. Otherwise, the packet is forwarded as a native protocol packet (typically, as an IP packet).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Intermediate and Egress Routers for Static LSPs | 577](#)

[swap | 1924](#)

pop-and-forward (Protocols MPLS)

Syntax

```
pop-and-forward;
```

Hierarchy Level

```
[edit logical-systems name protocols mpls label-switched-path ],  
[edit logical-systems name routing-instances name protocols mpls label-switched-path ],  
[edit protocols mpls label-switched-path ],  
[edit routing-instances name protocols mpls label-switched-path ]
```

Release Information

Statement introduced in Junos OS Release 18.1R1 on MX Series routers, PTX Series routers, and vMX.

Description

Enable LSP as pop-and-forward with auto-delegation signaling enabled by default.

The LSP undergoes a make-before-break from a regular point-to-point LSP to a pop-and-forward LSP.

Required Privilege Level

routing

RELATED DOCUMENTATION

[Pop-and-Forward LSP Configuration](#) | 693

[show rsvp pop-and-forward](#) | 2505

[pop-and-forward \(Protocols RSVP\)](#) | 2003

preference (Protocols MPLS)

Syntax

```
preference preference;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name],
[edit protocols mpls static-label-switched-path lsp-name ingress]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Preference for the route.

You can optionally configure multiple LSPs between the same pair of ingress and egress routers. This is useful for balancing the load among the LSPs because all LSPs, by default, have the same preference level. To prefer one LSP over another, set different preference levels for individual LSPs. The LSP with the lowest preference value is used. The default preference for LSPs is lower (more preferred) than all learned routes except direct interface routes.

Options

preference—Preference to assign to the route. A route with a lower preference value is preferred.

Range: 1 through 255

Default: 5 for static MPLS LSPs, 7 for RSVP MPLS LSPs, 9 for LDP MPLS LSPs

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Preference Values for LSPs | 506](#)

[Configuring the Ingress Router for Static LSPs | 574](#)

[Configuring the Intermediate \(Transit\) and Egress Routers for Static LSPs | 577](#)

primary (Protocols MPLS)

Syntax

```
primary path-name {
  adaptive;
  admin-group {
    exclude [ group-names ];
    include-all [ group-names ];
    include-any [ group-names ];
  }
  bandwidth bps;
  class-of-service cos-value;
  hop-limit number;
  no-cspf;
  no-decrement-ttl;
  optimize-timer seconds;
  preference preference;
  priority setup-priority reservation-priority;
  (record | no-record);
  select (manual | unconditional);
  standby;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the primary path to use for an LSP. You can configure only one primary path.

You can optionally specify preference, CoS, and bandwidth values for the primary path, which override any equivalent values that you configure for the LSP (at the `[edit mpls label-switched-path lsp-name]` hierarchy level).

Options

path-name—Name of a path that you created with the **path** statement.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Primary and Secondary LSPs](#) | 569

primary**Syntax**

```
primary path-name;
```

Hierarchy Level

```
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Specify the primary path to use for a label switched path (LSP). You can configure only one primary path.

Options

path-name —Name of the primary path that you created with the **path** statement.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Path Protection in an MPLS Network \(CLI Procedure\)](#) | 279

priority (Protocols MPLS)

Syntax

```
priority setup-priority reservation-priority;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure the setup priority and reservation priority for an LSP. If insufficient link bandwidth is available during session establishment, the setup priority is compared with other setup priorities for established sessions on the link to determine whether some of them should be preempted to accommodate the new session. Sessions with lower hold priorities are preempted.

Options

reservation-priority—Reservation priority, used to keep a reservation after it has been set up. A smaller number has a higher priority. The priority must be greater than or equal to the setup priority to prevent preemption loops.

Range: 0 through 7, where 0 is the highest and 7 is the lowest priority.

Default: 0 (Once the session is set up, no other session can preempt it.)

setup-priority—Setup priority.

Range: 0 through 7, where 0 is the highest and 7 is the lowest priority.

Default: 7 (The session cannot preempt any existing sessions.)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

protection-revert-time

Syntax

```
protection-revert-time seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls interface interface-name static],  
[edit protocols mpls interface interface-name static]
```

Release Information

Statement introduced in Junos OS Release 10.1.

Description

Specify the amount of time (in seconds) that a static LSP must wait before traffic reverts from the bypass path to the original path.

If you have configured a value of 0 seconds for the **protection-revert-time** statement and traffic is switched to the bypass path, the traffic remains on that path indefinitely. It is never switched back to the original path unless the bypass path is down or you intervene.

Options

seconds—Time in seconds.

Range: 0 through 65,535 seconds

Default: 5 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

push

Syntax

```
push out-label;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name bypass],  
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],  
[edit protocols mpls static-label-switched-path lsp-name bypass],  
[edit protocols mpls static-label-switched-path lsp-name ingress]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Add a new label to the top of the label stack. This statement is used to configure static LSPs at ingress routers and to configure bypass LSPs for static LSPs.

Options

out-label—Manually assigned outgoing label value.

Range: 0 through 1,048,575.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[pop | 1863](#)

[swap | 1924](#)

[Configuring the Ingress Router for Static LSPs | 574](#)

random

Syntax

```
(random | least-fill | most-fill);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure the preferred path when several equal-cost candidate paths to a destination exist, and prefer the path with the highest available bandwidth (with the largest minimum available bandwidth ratio). The available bandwidth ratio of a link is the available bandwidth on a link divided by the maximum reservable bandwidth on the link.

- **least-fill**—Prefer the path with the most available bandwidth (with the largest available bandwidth ratio).
- **most-fill**—Prefer the path with the least available bandwidth (with the minimum available bandwidth ratio). The minimum available bandwidth ratio of a path is the smallest available bandwidth ratio belonging to any of the links in the path.
- **random**—Choose the path at random.

Default

random

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring CSPF Tie Breaking](#) | 481

record

Syntax

```
(record | no-record);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path (primary | secondary) path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify whether an LSP should actively record the path by sending the record route object (RRO) of an LSP. The RRO is used to record the path that the LSP traverses. It includes the IP address, router ID, and node ID of the routers in the path. Recording LSP path can be useful for diagnostics and loop detection.

Default

Recording LSP path is enabled by default when you have node or link protection configured on the device.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Disabling Path Route Recording by LSPs](#) | 507

remote-interface-switch

Syntax

```
remote-interface-switch connection-name {
  interface interface-name.unit-number;
  receive-lsp label-switched-path;
  transmit-lsp label-switched-path;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols connections],
[edit protocols connections \(MPLS\)]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Configure MPLS LSP tunnel cross-connects. This makes an association between a CCC interface and two LSPs, one for transmitting MPLS packets from the local provider edge switch to the remote provider edge switch and the other for receiving MPLS packets on the local provider edge switch from the remote provider edge switch.

Options

connection-name—Connection name.

interface interface-name.unit-number—Interface name. Include the logical portion of the name, which corresponds to the logical unit number of the CCC interface.

receive-lsp label-switched-path—Name of the LSP from the connection's source. This LSP name was specified by the **label-switched-path** statement on the remote provider edge switch in the **protocols mpls** stanza.

transmit-lsp label-switched-path—Name of the LSP to the connection's destination. This LSP name was specified by the **label-switched-path** statement on the local provider edge switch in the **protocols mpls** stanza.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring MPLS LSP Tunnel Cross-Connects Using CCC | 1324](#)

[Example: Configuring MPLS on EX8200 and EX4500 Switches | 41](#)

[Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect | 73](#)

[Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS | 67](#)

MPLS Applications User Guide

remote-site-id

Syntax

```
remote-site-id remote-site-ID;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn site site-name  
  interface interface-name],  
[edit routing-instances routing-instance-name protocols l2vpn site site-name interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Description

Control the remote interface to which the interface should connect. If you do not explicitly configure the remote site ID, the order of the interfaces configured for the site determines the default value. This statement is optional.

Options

remote-site-ID—Identifier specifying the interface on the remote PE router the Layer 2 VPN routing instance connects to.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring the Remote Site ID

Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)

retry-limit

Syntax

```
retry-limit number;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name],
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Maximum number of times the ingress router tries to establish the primary path. This counter is reset each time a primary path is created successfully. When the limit is exceeded, no more connection attempts are made. Intervention is then required to restart the connection.

Options

number—Maximum number of tries to establish the primary path.

Range: 0 through 10,000

Default: 0 (The ingress node never stops trying to establish the primary path.)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Connection Between Ingress and Egress Routers](#) | 492

retry-timer

Syntax

```
retry-timer seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Amount of time the ingress router waits between attempts to establish the primary path.

Options

seconds—Amount of time between attempts to connect to the primary path.

Range: 1 through 600 seconds

Default: 30 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Connection Between Ingress and Egress Routers](#) | 492

revert-timer

Syntax

```
revert-timer seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

BFD behavior modified in Junos OS Release 9.0.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the amount of time (in seconds) that an LSP must wait before traffic reverts to a primary path. If during this time the primary path experiences any connectivity problem or stability problem, the timer is restarted.

If you have configured BFD on the LSP, the Junos OS waits until the BFD session is restored before starting the revert timer counter.

If you have configured a value of 0 seconds for the **revert-timer** statement and traffic is switched to the secondary path, the traffic remains on that path indefinitely. It is never switched back to the primary path unless you intervene.

Options

seconds—Time in seconds.

Range: 0 through 65,535 seconds

Default: 60 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Revert Timer for LSPs | 570](#)

revert-timer

Syntax

```
revert-timer seconds;
```

Hierarchy Level

```
[edit protocols mpls],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Specify the amount of time that a label switched path (LSP) must wait before traffic reverts to a primary path. If during this time the primary path experiences any connectivity problem or stability problem, the timer is restarted.

If you have configured a value of 0 seconds for the **revert-timer** statement and traffic is switched to the secondary path, the traffic remains on that path indefinitely. It is never switched back to the primary path unless you intervene.

Default

60 seconds

Options

seconds —Value in seconds.

Range: 0 through 65,535 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Path Protection in an MPLS Network \(CLI Procedure\)](#) | 279

resignal-minimum-bandwidth

Syntax

```
resignal-minimum-bandwidth;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],  
[edit protocols mpls label-switched-path lsp-name auto-bandwidth]
```

Release Information

Statement introduced in Junos OS Release 12.2.

Description

Resignal the LSP using the configured minimum bandwidth when an LSP comes back up after going down.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Automatic Bandwidth Allocation for LSPs](#) | 516

resolution-map

Syntax

```
resolution-map name {
    mode (color-only | ip-color);
}
```

Hierarchy Level

```
[edit logical-systems name policy-options],
[edit policy-options]
```

Release Information

Statement introduced in Junos OS Release 19.2R1-S1 on MX Series and PTX Series routers.

Description

Define a set of protocol next hop resolution modes.

A resolution-map can be referred by a new resolution-map action of a policy statement, which is in turn applied to a VPN service through the routing-instance **import-vrf**. A given resolution-map may be shared by multiple policy-statements.

Options

name—Resolution Map name.

mode—List of resolution modes in order that defines fallback mechanism.

Values:

- color-only—Color-only protocol next hop resolution mode.
- ip-color—Colored-IP protocol next hop resolution mode.

Required Privilege Level

routing

RELATED DOCUMENTATION

Color-Based Mapping of VPN Services Overview

[Static Segment Routing Label Switched Path](#) | 706

responder (performance-monitoring)

Syntax

```
responder {  
  delay {  
    min-query-interval milliseconds;  
  }  
  loss {  
    min-query-interval milliseconds;  
  }  
}
```

Hierarchy Level

```
[edit protocols mpls oam performance-monitoring],  
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring],  
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring],  
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure responder options.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Pro-Active Loss and Delay Measurements](#) | 416

[On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview](#) | 387

[performance-monitoring \(Protocols MPLS\)](#) | 1851

rpf-check-policy (Routing Options)

Syntax

```
rpf-check-policy policy;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options multicast],  
[edit routing-options multicast]
```

Release Information

Statement introduced in Junos OS Release 8.0.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Enable you to control whether a reverse path forwarding (RPF) check is performed for a source and group entry before installing a route in the multicast forwarding cache. This makes it possible to use point-to-multipoint LSPs to distribute multicast traffic to Protocol Independent Multicast (PIM) islands situated downstream from the egress routers of the point-to-multipoint LSPs.

Options

policy—Name of the RPF check routing policy.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring a Multicast RPF Check Policy for Point-to-Multipoint LSPs](#) | 690

rsvp-error-hold-time

Syntax

```
rsvp-error-hold-time seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Amount of time MPLS retains RSVP PathErr messages and considers them for CSPF computations. The more time you configure, the more time a source node (ingress of an RSVP LSP) can have to learn about the failures of its LSP by monitoring PathErr messages transmitted from downstream nodes.

Information from the PathErr messages is incorporated into subsequent LSP computations, which can improve the accuracy and speed of LSP setup. Some PathErr messages are also used to update traffic engineering database bandwidth information, reducing inconsistencies between the database and the network.

Options

seconds—Amount of time MPLS retains RSVP PathErr messages and considers them for CSPF computations.

Range: 0 through 240 seconds

Default: 25 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Improving Traffic Engineering Database Accuracy with RSVP PathErr Messages](#) | 1108

sampling (Protocols MPLS)

Syntax

```
sampling {
  cut-off-threshold percentile;
  use-average-aggregate;
  use-percentile percentile;
}
```

Hierarchy Level

```
[edit protocols mpls container-label-switched-path lsp-name splitting-merging]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Statement introduced in Junos OS Release 17.2R1 for the QFX Series switches.

Description

Configure traffic sampling. By default, sampling mode is set to **Max Aggregate** which means the system will compare each new sample with the previous sample. If the new sample is higher than the old sample, then the newer sample is considered **Sampled Aggregate bandwidth**

Max Aggregate Example

If normalization happens every 20min (T0, T20, T40..) then if at time T0 the traffic rate is 185Gbps, and subsequently drops to 7.5Gbps at time T3, the max-aggregate sample for the current normalization window T0-T20 will be 185Gbps. When the current normalization window expires at time T20, we use the previous sampled max-aggregate of 185Gbps to calculate the split/merge activities of the next (or now current) normalization window between T20 – T40. If traffic remains at 7.5Gbps for this second normalization period, then at time T40 the max-aggregate sample of 7.5Gbps would then be used for split/merge activities. Even though traffic volumes dropped at time T3, LSP split/merge activities would not occur until time T40 which might be unexpected. This default behavior can be modified with use-average-aggregate or use-percentile to achieve alternative normalization behavior if desired.

Options

cut-off-threshold *percentile*—Specify the percentile value to be used as a cut-off threshold in removing outlier bandwidth samples. All the aggregate bandwidth samples determined as outliers are used for computing aggregate bandwidth used at the time of normalization.

Default: 0 percentile (the ingress considers all aggregate bandwidth samples for normalization.)

Range: 0 through 100

use-average-aggregate—Specify the ingress router to take average of the aggregate samples for normalization.

This option is mutually exclusive with the **use-percentile** configuration option.

use-percentile *percentile*—Specify the ingress router to compute and use the **pth** percentile from all the bandwidth samples, and use that for normalization.

This option is mutually exclusive with the **use-average-aggregate** configuration option.

Range: 0 through 100

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [splitting-merging](#) | **1911**

sbfd

Syntax

```
sbfd {  
    remote-discriminator remote-discriminator;  
}
```

Hierarchy Level

[edit protocols source-packet-routing [source-routing-path](#) name primary name [bfd-liveness-detection \(LSP\)](#)],
[edit protocols source-packet-routing [source-routing-path](#) name secondary name [bfd-liveness-detection \(LSP\)](#)]

Release Information

Statement introduced in Junos OS Release 19.1R1.

Description

Configure seamless BFD (S-BFD) parameters in the source routing path.

Options

remote-discriminator—Remote discriminator of reflector

Range: 1 through 4294967295

Required Privilege Level

routing

RELATED DOCUMENTATION

[Routing Engine-based S-BFD for Segment-Routing Traffic Engineering with First-Hop Label Resolution](#) | 750

[bfd-liveness-detection \(LSP\)](#) | 1693

secondary (Protocols MPLS)

Syntax

```
secondary path-name {
  adaptive;
  admin-group {
    exclude [ group-names ];
    include-all [ group-names ];
    include-any [ group-names ];
  }
  bandwidth bps;
  class-of-service cos-value;
  hop-limit number;
  no-cspf;
  no-decrement-ttl;
  optimize-timer seconds;
  preference preference;
  priority setup-priority reservation-priority;
  (record | no-record);
  retry-limit number;
  retry-timer seconds;
  select (manual | unconditional);
  standby;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify one or more secondary paths to use for the LSP. You can configure more than one secondary path. All secondary paths are equal, and the first one that is available is chosen.

You can specify secondary paths even if you have not specified any primary paths.

Optionally, you can specify preference, CoS, and bandwidth values for the secondary path, which override any equivalent values that you configure for the LSP (at the **[edit mpls label-switched-path]** hierarchy level).

Options

path-name—Name of a path that you created with the **path** statement.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Primary and Secondary LSPs](#) | 569

secondary

Syntax

```
secondary path-name {  
    standby;  
}
```

Hierarchy Level

```
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Specify one or more secondary paths to use for the label switched path (LSP). You can configure more than one secondary path. All secondary paths are equal, and the first one that is available is chosen.

Options

path-name —Name of a secondary path that you created with the **path** statement.

The remaining statement is explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Path Protection in an MPLS Network \(CLI Procedure\)](#) | 279

segment

Syntax

```
segment {
  (pop | swap swap);
  description description;
  next-hop next-hop;
  sid-label;
}
```

Hierarchy Level

```
[edit logical-systems name protocols mpls static-label-switched-path],
[edit logical-systems name routing-instances name protocols mpls static-label-switched-path],
[edit protocols mpls static-label-switched-path],
[edit routing-instances name protocols mpls static-label-switched-path]
```

Release Information

Statement introduced in Junos OS Release OS 18.1R1 for MX Series, PTX Series, and QFX Series.

Description

Static segment for segment routing. A static segment is identified by a unique name. This segment type is assigned a segment identifier (SID) which falls under a default range of 100000 through 1048575. The segment has label operation such as pop-and-forward for adjacency segment and swap-and-forward for prefix or node segment. For both types of label operation, the segment is assigned a next hop that specifies the remote IP address if the outgoing interface is a multi-access interface, or the name of the outgoing interface if the interface is a point-to-point interface. Static segment configuration is used to statically configure or provision the adjacency SIDs, node SIDs, and prefix SIDs on transit routers.

Options

pop—Pop the SID label

swap—Swap the SID label to this label

description—Text description of label-switched path

next-hop—IPv4 address or interface of next-hop router

sid-label—Segment identifier (SID) label

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing

RELATED DOCUMENTATION

Static Segment Routing Label Switched Path 706
segment-list 1894
source-routing-path 1906

segment-list

Syntax

```
segment-list name {
  hop-name {
    (loose | strict);
    ip_address IP address;
    label number ;
    label-type node;
  }
  auto-translate {
    protected mandatory;
    unprotected mandatory;
  }
  dynamic;
  compute;
  inherit-label-nexthops;
}
```

Hierarchy Level

```
[edit logical-systems name protocols source-packet-routing],
[edit protocols source-packet-routing]
```

Release Information

Statement introduced in Junos OS Release 17.4R1 for MX Series and PTX Series with FPC-PTX-P1-A.

ip-address statement introduced in Junos OS Release 18.1R1 on MX Series routers.

inherit-label-nexthops, **node-type**, and **auto-translate** statements introduced in Junos OS Release 19.1R1 on MX Series routers.

dynamic statement introduced in Junos OS Release 19.2R1 on all platforms.

compute, **loose**, and **strict** statements introduced in Junos OS Release 19.1R1-S1 on MX Series routers.


Description

Specify an name to identify the segment routing list (used in traffic engineering policy) and the explicit path for source routing label switched path (LSPs) to traverse through traffic engineering segments. The segment list is essentially a stack of segment identifiers.

Starting in Junos OS release 19.1R1 for MX and PTX Series routers, you can enable a translation service to translate next-hop IP addresses into the corresponding segment identifier (SID) labels. The translation service keeps track of the node reached at each hop.

When configured, the **segment-list** of a segment routing traffic engineering (SR-TE) LSP accepts IP addresses for all the hops along the path. These IP addresses can be either the loopback address of a node, or the

IP address of a link, as identified by the **node-type**. When **auto-translation** is enabled, next hop IP addresses are automatically translated to corresponding SIDs using the translation service. A retry rate can be set for the retry timer at the **source-packet-routing** hierarchy level.



NOTE: The segment list enables BGP and static segment routing LSP to steer traffic based on segment routing policies. When a segment list is used by the protocol BGP, the BGP protocol validates these segment identifiers and selects valid segments for traffic engineering.

Options

<hop-name>—Indicates the next hop in the segment routing traffic engineering policy (SR-TE).

- **ip-address**—Specify the IP address of the hop. For a segment-list to be used by a non-colored segment routing LSP, the first hop must specify an IP address.
- **label**—Specify the SID label of the hop in a segment routing traffic engineering segment list. In static segment routing LSPs, the source routing path uses the segment list only if the second to Nth hop specifies segment identifiers (SID) labels.

NOTE: The range is from 0 to 1,048,576 and is applies to BGP and static segment routing LSPs.

- **label-type**—Use with the option below to indicate that the specified address is the IP address of the node, for example, its loopback address, as opposed to that of a link.
- **node**—Hops that have been specified as **node** are translated to a prefix SID, which can be either a node SID or an anycast SID depending on the type of hop IP address. IP addresses not identified as **node** are consider to be a link.

NOTE: If the first hop is a **node**, for LSP resolution to work correctly, **inherit-label-nexthops** must be enabled at either **source-packet-routing** hierarchy level, or at the relevant **segment-list** hierarchy level.

- **loose | strict**—IP hops specified using router IDs in the sequence can be strict or loose hops. A strict hop must be directly connected to the previous node in the sequence. A loose hop is not necessarily directly connected to the previous node.

NOTE: You can specify only router IDs as loose or strict hop constraints. Labels and other IP addresses are not supported as loose or strict hop constraints in Junos OS Release 19.2R1-S1.

auto-translate— This option must be enabled before a given segment list can use IP addresses instead of SIDs for any hop other than the first hop. In addition, all hops in the segment list must have IP addresses. If any hops on the list have both an IP address and a label configured, the label will be retained. Link addresses are only translated into labels if the preceding node advertises an adjacency SID for the address (otherwise translation fails).

NOTE: In Junos OS Release 19.1R1, for auto-translate to work for OSPF, RSVP for segment routing must be enabled on all participating interfaces.

- **protected**—(Optional) Enable this option to ensure the adjacency SID is eligible to have a backup path, and that a B-flag is set in adjacency SID advertisements. Note that unless **mandatory** is also selected, the choice succeeds regardless.
- **mandatory**—(Optional) Enable this option to have translation fail if any *unprotected* links are found in the hop-list.
- **unprotected**—(Optional) Enable this option to ensure that no backup path is calculated for a specific adjacency SID, and that a B-flag is not set in adjacency SID advertisements. Note that unless **mandatory** is also selected, the choice succeeds regardless.
- **mandatory**—(Optional) Enable this option to have translation fail if any *protected* links are found in the hop-list.

compute—(Optional) Enable use of explicit paths specified in segment list for path computation.

inherit-label-nexthops—Inherit label next hops for first hop in this segment list that have both IP address and label configured in the first hop.

You can configure the **inherit-label-nexthops** statement globally or individually for each segment list.

The **inherit-label-nexthops** statement takes effect only when the segment list first hop has both IP address and SID label present.

If the **inherit-label-nexthops** is not configured at the **[edit protocols source-packet-routing segment-list]** hierarchy, and the first hop in the segment list has both IP address and label specified, the default behavior is to use the IP address.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

<i>Static Adjacency Segment Identifier for ISIS</i>
Static Segment Routing Label Switched Path 706
<i>Segment Routing Traffic Engineering at BGP Ingress Peer Overview</i>
Understanding Static Segment Routing LSP in MPLS Networks 707
show spring-traffic-engineering 2692
<i>extended-nexthop-color</i>
source-routing-path 1906
<i>sr-preference-override</i>

select

Syntax

```
select (manual | unconditional);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the conditions under which the path is selected to carry traffic. The **manual** and **unconditional** options are mutually exclusive.

Options

manual—The path is selected for carrying traffic if it is up and stable for at least the revert timer window (potentially before the revert timer has elapsed). Traffic is sent to other working paths if the current path is down or degraded (receiving errors).

unconditional—The path is always selected for carrying traffic, even if it is currently down or degraded (receiving errors).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Specifying the Conditions for Path Selection](#) | 571

signal-bandwidth

Syntax

```
signal-bandwidth type;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name lsp-attributes],  
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the bandwidth encoding of the signal used for path computation and admission control.

Options

type—Configure the type of bandwidth encoding used on the LSP. It can be any of the following values: **10gigether**, **ds1**, **ds3**, **e1**, **e3**, **ethernet**, **fastether**, **gigether**, **stm-1**, **stm-4**, **stm-16**, **stm-64**, **stm-256**, **sts-1**, **vt1-5**, or **vt2**.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Signal Bandwidth Type](#) | 1258

signaling

Syntax

```
signaling;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp family inet-mdt],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp family inet-mvpn],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name
  family inet-mdt],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name
  family inet-mvpn],
[edit routing-instances routing-instance-name protocols bgp family inet-mdt],
[edit routing-instances routing-instance-name protocols bgp family inet-mvpn],
[edit routing-instances routing-instance-name protocols bgp group group-name family inet-mdt],
[edit routing-instances routing-instance-name protocols bgp group group-name family inet-mvpn]
```

Release Information

Statement introduced in Junos OS Release 9.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Description

Enable signaling in BGP. For multicast distribution tree (MDT) subaddress family identifier (SAFI) NLRI signaling, configure signaling under the **inet-mdt** family. For multiprotocol BGP (MBGP) intra-AS NLRI signaling, configure signaling under the **inet-mvpn** family.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring Source-Specific Multicast for Draft-Rosen Multicast VPNs

site (Layer 2 Circuits)

Syntax

```
site site-name {
    hot-standby;
    site-identifier identifier;
    site-preference preference-value {
        backup;
        primary;
    }
    interface interface-name {
        description text;
        remote-site-id remote-site-ID;
    }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn],
[edit routing-instances routing-instance-name protocols l2vpn]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

hot-standby option introduced in Junos OS Release 14.2 for MX Series routers.

Description

Specify the site name, site identifier, and interfaces connecting to the site. Allows you to configure a remote site ID for remote sites.

Options

hot-standby—Turn on the protector behavior for the site. This keeps backup pseudowire in continuous standby mode and ready for traffic forwarding.

site-identifier *identifier*—Numerical identifier for the site used as a default reference for the remote site ID.

site-name—Name of the site.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Site](#)

[Configuring an MPLS-Based Layer 2 VPN \(CLI Procedure\)](#)

site-identifier (Layer 2 Circuits)

Syntax

```
site-identifier identifier;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn site site-name],
[edit routing-instances routing-instance-name protocols l2vpn site site-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Description

Specify the numerical identifier for the local Layer 2 VPN site.

Options

identifier—The numerical identifier for the Layer 2 VPN site, which can be any number from 1 through 65,534.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Site](#)

[Configuring an MPLS-Based Layer 2 VPN \(CLI Procedure\)](#)

smart-optimize-timer

Syntax

```
smart-optimize-timer seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable the smart optimization timer. When you enable the smart optimization timer on a router, the Junos OS operates on the assumption that the original LSP path is preferable to any alternate or secondary path. When you enable the smart optimization timer and an LSP fails and its traffic is switched to an alternate path, the smart optimization timer starts and waits 3 minutes (this time is configurable). After 3 minutes have passed, the LSP is switched back to the original path. If the original path fails again and the LSP is switched to an alternate path again, the router waits 1 hour before attempting to switch the LSP back to its original path.

If you want to disable the smart optimizer, you can set it to zero. The **smart-optimize-timer** value in seconds indicates the time before which the LSP is switched back to its primary path in case the primary path becomes available. Otherwise, the time to wait is controlled by the **optimize-timer**, which is usually set to a high value. Some ISPs have the **optimize-timer** set to once a day. Sometimes after the smart optimizer causes the LSP to be placed back on its primary path, the primary path goes down again within 60 minutes. When this happens, the **smart-optimize-timer** is disabled automatically, and the **optimize-timer** (regular path optimization) goes into effect. This is to protect against a flapping link being used.

Default

The smart optimization timer is enabled by default.

Options

seconds—(Optional) Specify the number of seconds to wait before switching an LSP back to its original path. If you do not specify the number of seconds, the default value is used.

Range: 0 through 65,535 seconds

Default: 180 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Smart Optimize Timer for LSPs | 514](#)

[Optimizing Signaled LSPs | 510](#)

[optimize-aggressive | 1838](#)

[optimize-timer | 1841](#)

soft-preemption (Protocols MPLS)

Syntax

```
soft-preemption;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Attempt to establish a new path for a preempted LSP before tearing it down.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring MPLS Soft Preemption | 500](#)

source-routing-path

Syntax

```
source-routing-path name {
  binding-sid binding-sid;
  color color;
  lsp-external-controller;
  metric value;
  no-ingress;
  primary name {
    lsp-external-controller;
    weight weight;
  }
  secondary name {
    weight weight;
  }
  sr-preference sr-preference;
  to to;
}
```

Hierarchy Level

```
[edit logical-systems name protocols source-packet-routing],
[edit protocols source-packet-routing]
```

Release Information

Statement introduced in Junos OS Release 17.4R1 for MX Series and PTX Series with FPC-PTX-P1-A. The **metric**, **no-ingress**, and **secondary** statements are introduced in Junos OS Release 18.1R1 for MX Series.

lsp-external-controller statement introduced in Junos OS Release 20.1R1.

Description

Configure a source routing label switched path (LSP) for steering traffic at an ingress router. Specify a binding segment identifier from the static label range. Configure other parameters such as color, weight, preference, and segment routing preference for traffic engineering.

Starting with Junos OS Release 18.1R1, compute static non-colored segment routing label switched paths (LSPs) for protocol SPRING-TE in an MPLS network. Configure parameters such as destination address, binding SIDs, primary segment, secondary segment, metric, and preference. These segment routing LSPs do not have a color associated with them. If an ingress route is not required for a non-colored segment routing LSP then the ingress route installation in inet.3 table can be disabled.

Options

name—Specify a name to identify a source routing path.

binding-sid—(Optional) Specify the binding label to enable transit functionality for this tunnel. For a non-colored static segment routing LSP, the binding SID label of protocol SPRING-TE have a default preference value of 8 and a metric of 1.

Range: 16 through 1,048,576

color—(Colored segment routing LSPs only) Specify a color identifier for the tunnel end point. For non-colored segment routing LSPs, you do not have to configure the color parameter.

lsp-external-controller—Enable external path computing capability for the device. See [lsp-external-controller](#) for more information.

metric—Specify metric for routes downloaded for the non-colored static segment routing tunnel.

You can configure the label range at `[edit protocols mpls label-range static label-range]` hierarchy level.

Default: 1000000 through 1048575

Range:

NOTE:

1 through 16777215 (for BGP)

no-ingress—Disable ingress route that is not required for the non-colored static segment routing tunnel

primary— Specify a primary segment list for the configured source routing path.

The non-colored static segment routing LSP can have a maximum of 8 primary paths. incase of multiple operational primary paths, the PFE distributes the traffic over the paths based on the weight configured on the paths. If none of the paths have weights configured then the weights default to 1 making it an ECMP path. the paths become weighted ECMP if at least one of the paths have a non-zero weight. In both cases , when one or some of the paths fail, the PFE automatically re-balances the traffic over the remaining paths resulting in path protection.

weight weight_value— Specify a percentage of the bandwidth with respect to the sum of weights of all paths for the primary segment list. If forwarding interfaces are also configured with weighted ECMP, then Junos OS applies hierarchical weighted ECMP. If the weight percentage is not configured, then only IGP weights are applied on the forwarding interfaces.

secondary—Specify a secondary segment list for the configured non-colored static segment routing LSP.

sr-preference— Configure a preference for segment routing routes for traffic engineering. BGP chooses a higher preference over a lower preference value.

Range: 0 through 4,294,967,295

to—Specify the IP address of the tunnel end-point

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

<i>extended-nexthop-color</i>
segment-list 1894
<i>source-packet-routing</i>
<i>sr-preference-override</i>
<i>Segment Routing Traffic Engineering at BGP Ingress Peer Overview</i>
How to Configure Segment Routing for the Path Computation Element Protocol 1424

source-routing-path-template

Syntax

```
source-routing-path-template name {
  bfd-liveness-detection;
  ldp-tunneling;
  metric metric;
  no-ingress;
  primary name {
    lsp-external-controller;
    weight weight;
  }
  secondary name;
  sr-preference sr-preference;
}
```

Hierarchy Level

```
[edit protocols source-packet-routing]
```

Release Information

Statement introduced in Junos OS Release 19.2R1.

bfd-liveness-detection and **ldp-tunneling** options introduced in Junos OS Release 19.4R1.

lsp-external-controller statement introduced in Junos OS Release 20.1R1.

Description

Configure a source-routing-path-template for dynamic creation of segment routing label-switched paths (LSPs).

Options

name—Name of the source routing path.

bfd-liveness-detection—Configure Bidirectional forwarding detection (BFD) options for PCE-initiated segment routing LSP template. See *bfd-liveness-detection* for more information.

ldp-tunneling—Allow LDP to use this LSP for tunneling. This configuration can be applied to PCE-initiated segment routing LSPs only.

lsp-external-controller—Enable external path computing capability for the device. See [lsp-external-controller](#) for more information.

metric—Metric for routes downloaded for this tunnel.

Range: 1 through 16777215

no-ingress—Disable ingress functionality for this tunnel.

primary name—Configure a named identifier for the segment-list that describes the primary segment routing path along which the packet is to be routed. This segment list must have the **dynamic** statement enabled for dynamic creation of segment routing LSPs.

weight weight—(Optional) Specify the balance factor for this segment list in SR-TE tunnel.

If the forwarding interfaces have weights assigned by IGP, then hierarchical weighted ECMP is applied. When weight is not specified, only the IGP weights are applied on the forwarding interfaces.

secondary name—Configure a named identifier for the segment-list that describes the secondary segment routing path along which the packet is to be routed. This segment list must have the **dynamic** statement enabled for dynamic creation of segment routing LSPs.

sr-preference—Segment routing preference for the segment routing traffic engineered (SR-TE) routes. A greater value indicates higher preference.

The preference value of the routes programmed for the segment routing LSP is inherited from the **preference value** statement at the **[edit protocols source-packet-routing]** hierarchy level. When this value is not configured, the default preference value of 8 is used.

Range: 0 through 4294967295

Required Privilege Level

routing

RELATED DOCUMENTATION

[Understanding Static Segment Routing LSP in MPLS Networks | 707](#)

source-routing-path-template-map

splitting-merging

Syntax

```
splitting-merging {
  maximum-member-lsps number;
  maximum-signaling-bandwidth bps;
  merging-bandwidth bps;
  minimum-member-lsps number;
  minimum-signaling-bandwidth bps;
  normalization;
  sampling;
  splitting-bandwidth bps;
  splitting-merging-threshold percent;
}
```

Hierarchy Level

```
[edit protocols mpls container-label-switched-path lsp-name]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Statement introduced for QFX Series switches in Junos OS Release 15.1X53-D30.

Description

Perform splitting and merging.

Options

maximum-member-lsps *number*—Number of label-switched paths (LSPs) that a container LSP can have as member LSPs at maximum.

Default: 1

maximum-signaling-bandwidth *bandwidth*—Amount of bandwidth in bits per second (bps) that can be signaled for an LSP at maximum after normalization. When **maximum-signaling-bandwidth** is not configured, the value is derived from the **splitting-bandwidth**.

When auto-bandwidth adjustment is done between two normalization events, per LSP auto-bandwidth configuration and thresholds are used instead of the **splitting-bandwidth**.

Default: 1 bps

merging-bandwidth *bandwidth*—Amount of bandwidth in bits per second (bps) that is used for merging during normalization.

Default: 1 bps

minimum-member-lsps *number*—Number of LSPd that a container LSP can have as member LSPs at minimum.

Default: 64

minimum-signaling-bandwidth *bandwidth*—Amount of bandwidth in bits per second (bps) that can be signaled for an LSP at minimum after normalization. When **minimum-signaling-bandwidth** is not configured, the value is derived from the **merging-bandwidth**.

When auto-bandwidth adjustment is done between two normalization events, per LSP auto-bandwidth configuration and thresholds are used instead of the **merging-bandwidth**.

Default: 1 bps

splitting-bandwidth *bandwidth*—Amount of bandwidth in bits per second (bps) that can be used for splitting during normalization.

Default: 1 bps

splitting-merging-threshold *percent*—Percentage changes in aggregate bandwidth relevant for splitting and merging.

Default: 0%

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [container-label-switched-path](#) | 1701

spring-te (Dynamic Tunnels)

Syntax

```
spring-te {
  destination-networks name;
  source-routing-path-template name {
    (color [ color ... ] | color-any);
  }
}
```

Hierarchy Level

```
[edit routing-options dynamic-tunnels],
```

Release Information

Statement introduced in Junos OS Release 19.2R1 on all platforms.

Description

Enable next hop-base dynamic tunnel mode.

Options

source-routing-path-template *template-name*—Configure template color mapping for segment routing traffic-engineered (SPRING-TE) dynamic LSP parameters.

color—Specify set of color list to be mapped to corresponding SPRING-TE template.

- When enabled, all templates should have color objects defined.
- All destinations are assumed to be colored as well.
- A color can be mapped to only one template at a given point in time.
- Both the **color** and **color-any** statements can coexist. When the two statements are enabled together, preference is given to a specific color template than color-any.
- A colored and non-colored destination cannot co-exist in the same SR-TE configuration.

color-any—Enables mapping of any color to corresponding SPRING-TE template. Only one color-any template can be configured for one SR-TE LSP.

Required Privilege Level

routing

RELATED DOCUMENTATION

[Understanding Static Segment Routing LSP in MPLS Networks](#) | 707

srgb-label-range

Syntax

```
srgb-label-range <range-start> <range-end>
```

Hierarchy Level

```
[edit protocols mpls label-range],  
[edit protocols ospf source-packet-routing srgb]
```

Release Information

Statement introduced in Junos OS Release 19.1 for MX Series routers.

Description

SRGB configured under **mpls label-range** is termed as global SRGB. The MPLS label range is based on the start range and the end range. The value of the start range indicates the start of the label range, and the value of the end range along with the value of the start range indicate the end of the label range.

Options

<range-start> <range-end>—Start range and end range of the global SRGB label block.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[source-packet-routing](#)

srlg

Syntax

```
srlg {  
  srlg-name {  
    srlg-cost srlg-cost;  
    srlg-value srlg-value;  
  }  
}
```

Hierarchy Level

```
[edit routing-options],  
[edit logical-systems logical-system-name routing-options]  
[edit protocols mpls interface interface-name]
```

Release Information

Statement introduced in Junos OS Release 11.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Configure Shared Risk Link Group (SRLG) parameters.

Options

srlg-cost *srlg-cost*—Specify a cost for the SRLG ranging from **1** through **65535**.

srlg-value *srlg-value*—Specify a Group ID for the SRLG ranging from **1** through **4294967295**.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring SRLG | 200](#)

srlg-cost

Syntax

```
srlg-cost srlg-cost;
```

Hierarchy Level

```
[edit routing-options srlg],  
[edit logical-systems logical-system-name routing-options srlg]
```

Release Information

Statement introduced in Junos OS Release 11.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Specify a cost for the Shared Risk Link Group (SRLG) ranging from **1** through **65535**.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Example: Configuring SRLG](#) | [200](#)

srlg-value

Syntax

```
srlg-value srlg-value;
```

Hierarchy Level

```
[edit routing-options srlg],  
[edit logical-systems logical-system-name routing-options srlg]
```

Release Information

Statement introduced in Junos OS Release 11.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Specify a Group ID for the Shared Risk Link Group (SRLG) ranging from **1** through **4294967295**.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring SRLG](#) | 200

standby

Syntax

```
standby;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |  
    secondary) path-name],  
[edit protocols mpls],  
[edit protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Enable the path to remain up at all times to provide instant switchover if connectivity problems occur.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Hot Standby of Secondary Paths for LSPs | 572](#)

[Configuring Path Protection in an MPLS Network \(CLI Procedure\) | 279](#)

standby

Syntax

```
standby;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |  
    secondary) path-name],  
[edit protocols mpls],  
[edit protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Virtual Chassis and Virtual Chassis Fabric.

Description

Have the path remain up at all times to provide instant switchover if connectivity problems occur.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Hot Standby of Secondary Paths for LSPs](#) | 572

static-label-switched-path

Syntax

```
static-label-switched-path lsp-name {
    bypass bypass-name {
        bandwidth bps;
        description string;
        next-hop (address | interface-name | address/interface-name);
        push out-label;
        to address;
    }
    ingress {
        bandwidth bps;
        class-of-service cos-value;
        description string;
        install {
            destination-prefix <active>;
        }
        link-protection bypass-name name;
        metric metric;
        next-hop (address | interface-name | address/interface-name);
        node-protection bypass-name name next-next-label label;
        no-install-to-address;
        policing {
            filter filter-name;
            no-auto-policing;
        }
        preference preference;
        push out-label;
        to address;
    }
    transit incoming-label {
        bandwidth bps;
        description string;
        link-protection bypass-name name;
        next-hop (address | interface-name | address/interface-name);
        node-protection bypass-name name next-next-label label;
        pop;
        swap out-label;
    }
}
```

Hierarchy Level


```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced in Junos OS Release 10.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Statement introduced in 19.4R1 for cRPD instances.

Description

Configure a static LSP.

Options

lsp-name—Name of the path.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Static LSPs](#) | 573

statistics (Protocols MPLS)

Syntax

```
statistics {
  auto-bandwidth (MPLS Statistics);
  file filename <files number> <size size> <world-readable | no-world-readable>;
  interval seconds;
  no-transit-statistics;
  traffic-class-statistics;
  transit-statistics-polling;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

traffic-class-statistics option introduced in Junos OS Release 14.2.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 Series switches.

Description

Enable MPLS statistics collection and reporting.

Options

file *filename*—(Optional) Name of the file to receive the output. We recommend that you place MPLS tracing output in the file `mpls-stat` in the `/var/log` directory.

files *number*—(Optional) Maximum number of trace files. When a trace file named *file* reaches its maximum size, it is renamed *file.0*, then *file.1*, and so on, until the maximum number of files is reached. Then, the oldest file is overwritten.

Range: 2 or more

Default: 2 files

If you specify a maximum number of files, you also must specify a maximum file size with the **size** option.

interval *seconds*—Interval at which to periodically collect statistics.

Range: 1 through 65,535

Default: 300 seconds

no-world-readable—(Optional) Prevent users from reading the log file.

size *size*—(Optional) Maximum size of each file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a file named *file* reaches this size, it is renamed *file.0*. When the *file* again reaches its maximum size, *file.0* is renamed *file.1* and *file* is renamed *file.0*. This renaming scheme continues until the maximum number of files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you also must specify a maximum number of files with the **files** option.

world-readable—(Optional) Enable users to read the log file.

Syntax: Syntax: **xk** to specify KB, **xm** to specify MB, or **xg** to specify GB

Range: 10 KB through the maximum file size supported on your system

Default: 1 MB

traffic-class-statistics—(Optional) Create counters that maintain data traffic statistics per traffic class at the ingress of all types of LSPs and egress of ultimate hop popping (UHP) point-to-point LSPs. These counters are not created by default and are required to be configured to perform traffic-class-scoped loss measurement.

transit-statistics-polling—(Optional) Enable the polling and display of MPLS statistics for LSPs transiting the router. By default, RSVP does not periodically poll for transit LSP statistics. You cannot configure this statement and the **no-transit-statistics** statement at the same time.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing and trace—To view this statement in the configuration.

routing-control and trace-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring MPLS to Gather Statistics | 386](#)

[Configuring Automatic Bandwidth Allocation for LSPs | 516](#)

swap

Syntax

```
swap out-label;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name transit incoming-label],  
[edit protocols mpls static-label-switched-path lsp-name transit incoming-label]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Remove the label at the top of the label stack and replace it with the specified label. Manually assigned incoming labels can have values from 1,000,000 through 1,048,575. This statement is used to configure static LSPs at transit routers.

Options

out-label—Manually assigned outgoing label value.

Range: 0 through 1,048,575

Default: If you do not define the **out-label** option, the original label value remains unchanged.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[pop](#) | 1863

[push](#) | 1871

[Configuring the Intermediate \(Transit\) and Egress Routers for Static LSPs](#) | 577

switch-away-lsps

Syntax

```
switch-away-lsps;
```

Hierarchy Level

```
[edit logical-systems logical-systems-name protocols mpls interface interface-name],  
[edit protocols mpls interface interface-name]
```

Release Information

Statement introduced in Junos OS Release 10.2.

Description

(MX Series routers only) Enable you to switch an LSP away from a network node using a bypass LSP. This feature could be used in maintenance of active networks when a network device needs to be replaced without interrupting traffic passing through the network. The LSPs can be either static or dynamic. Configure this statement only after you have configured and committed the **always-mark-connection-protection-tlv** statement.

The **always-mark-connection-protection-tlv** statement marks all OAM traffic transiting this interface in preparation for switching the traffic to an alternate path based on the OAM functionality. When you configure the **switch-away-lsps** statement, traffic is switched to the bypass LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Switching LSPs Away from a Network Node](#) | 799

switching-type

Syntax

```
switching-type (fiber | lambda | psc-1 | tdm);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name lsp-attributes],  
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the switching method for the LSP. The switching method can be one of the following values:

- **fiber**—Fiber switching
- **lambda**—Lambda switching
- **psc-1**—Packet switching
- **tdm**—Time-division multiplexing (TDM) switching

Default

psc-1

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring MPLS LSPs for GMPLS](#) | 1257

sync-active-path-bandwidth

Syntax

```
sync-active-path-bandwidth;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name auto-bandwidth],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name auto-bandwidth],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name]
```

Release Information

Statement introduced in Junos OS Release 13.2.

Description

When you have a primary and a secondary path configuration, specify that a path needs to be signaled with the active-path bandwidth when the auto-bandwidth adjustment happens and that the secondary path synchronizes the bandwidth reservations to that of the primary path.

When a primary path fails, bandwidth reservations are made by the secondary path on the links that it uses. If you include the **sync-active-path-bandwidth** statement, the secondary path releases the bandwidth it has reserved and adjusts its bandwidth after the primary path begins carrying traffic.

For example, suppose the active path is a secondary path with a reserved bandwidth of 10 GB as a result of the automatic bandwidth adjustment. Then suppose there is a switchover from the secondary path to the primary path. After some time the primary path reserves 5 GB as a result of a new automatic adjustment. Without the **sync-active-path-bandwidth** statement, the secondary path does not release the 10 GB after a switchover occurs. That bandwidth is wasted. If the **sync-active-path-bandwidth** is included in the configuration, the secondary path adjusts its bandwidth to 5 GB along with the primary path.

Default

When you have a primary and a secondary path configuration, and the primary path fails, bandwidth reservations are made by the secondary path on the links that it uses. When the primary path comes back and the traffic switches over, the secondary path does not release its bandwidth reservations.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Disabling Constrained-Path LSP Computation | 482](#)

[Configuring Explicit-Path LSPs | 563](#)

te-class-matrix

Syntax

```
te-class-matrix {
  tnumber {
    priority priority;
    traffic-class {
      ctnumber priority priority;
    }
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls diffserv-te],
[edit protocols mpls diffserv-te]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the traffic engineering class matrix for a multiclass LSP or a DiffServ-aware traffic engineering LSP.

Default

The default traffic engineering class matrix is:

```
te-class-matrix {
  te0 traffic-class ct0 priority 7;
  te1 traffic-class ct1 priority 7;
  te2 traffic-class ct2 priority 7;
  te3 traffic-class ct3 priority 7;
  te4 traffic-class ct0 priority 0;
  te5 traffic-class ct1 priority 0;
  te6 traffic-class ct2 priority 0;
  te7 traffic-class ct3 priority 0;
}
```

If you define any of the traffic engineering classes, all the default values are dropped.

Options

ctnumber—Specify the number of the class type. It can be one of four values: **ct0**, **ct1**, **ct2**, or **ct3**.

priority *priority*—Specify the priority of the class type. It can be one of eight values from 0 through 7.

tenumber—Specify the number of the traffic engineering class. It can be one of eight values: **te0**, **te1**, **te2**, **te3**, **te4**, **te5**, **te6**, or **te7**. You must configure the traffic engineering classes in order, starting with **te0**.

traffic-class—Specify the traffic class for the traffic engineering class.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Traffic Engineering Classes](#) | 1117

to

Syntax

```
to address;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name bypass],
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls static-label-switched-path lsp-name bypass],
[edit protocols mpls static-label-switched-path lsp-name ingress]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Support for IPv6 addresses in static LSP configurations are provided in Junos OS Release 17.2R1.

Description

Specify the egress router of a dynamic LSP.

Options

address—IPv4 or IPv6 address of the egress router.

NOTE: IPv6 static LSPs are not supported at the `[edit protocols mpls static-label-switched-path lsp-name ingress]` hierarchy level.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Egress Router Address for LSPs](#) | 485

traceoptions (Protocols MPLS)

Syntax

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

ted-export option introduced in Junos OS Release 14.2.

ted-import option introduced in Junos OS Release 14.2.

lsp-history option added in Junos OS Release 15.1.

Description

Configure MPLS tracing options at the protocol level or for a label-switched path.

To specify more than one tracing operation, include multiple **flag** statements.

Default

The default MPLS protocol-level tracing options are inherited from the routing protocols **traceoptions** statement included at the **[edit routing-options]** hierarchy level.

Options

filename—Name of the file to receive the output of the tracing operation. All files are placed in the directory **/var/log**. We recommend that you place MPLS tracing output in the file **mpls-log**.

files *number*—(Optional) Maximum number of trace files. When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**, then **trace-file.1**, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Range: 2 through 1000

Default: 2 files

If you specify a maximum number of files, you must also include the **size** statement to specify the maximum file size.

flag—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements.

MPLS Tracing Flags

- **all**—Trace all operations
- **autobw-state**—Automatic bandwidth events.
- **connection**—All circuit cross-connect (CCC) activity
- **connection-detail**—Detailed CCC activity
- **cspf**—CSPF computations
- **cspf-link**—Links visited during CSPF computations
- **cspf-node**—Nodes visited during CSPF computations
- **error**—MPLS error packets
- **graceful-restart**—Trace MPLS graceful restart events
- **lsp-history**—Trace LSP history events
- **lsping**—Trace lsping packets and return codes
- **nsr-synchronization**—Trace NSR synchronization events
- **nsr-synchronization-detail**—Trace NSR synchronization events in detail
- **state**—All LSP state transitions
- **static**—Trace static label-switched path
- **ted-export**—Trace leaking of entries from **lsdist.0** table into the traffic engineering database
- **ted-import**—Trace leaking traffic engineering database entries into the **lsdist.0** table
- **timer**—Timer usage

no-world-readable—(Optional) Allow only certain users to read the log file.

size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches this size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Syntax: **xk** to specify KB, **xm** to specify MB, or **xg** to specify GB

Range: 10 KB through the maximum file size supported on your system

Default: 1 MB

If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

world-readable—(Optional) Allow any user to read the log file.

Required Privilege Level

routing and trace—To view this statement in the configuration.

routing-control and trace-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Tracing MPLS and LSP Packets and Operations](#) | 1142

traffic-class (delay)

Syntax

```
traffic-class tc-value {
  average-sample-size sample size;
  padding-size size;
  query-interval milliseconds;
  rtt-delay-threshold rtt threshold value;
  twcd-delay-threshold twcd threshold value;
}
```

Hierarchy Level

```
[edit protocols mpls oam performance-monitoring querier delay],
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring querier delay],
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring querier delay],
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring querier delay]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure traffic class specific options.

Specify the traffic classes for which loss measurement has to be performed. This parameter takes one of the *tc-all|tc-0|tc-1|tc-2|tc-3|tc-4|tc-5|tc-6|tc-7|tc-none* traffic-class values. For each traffic class, you can configure the respective parameters.

To enable traffic-class parameters, configure the **traffic-class-statistics** configuration statement under the **[edit protocol mpls statistic]** hierarchy level.

Options

average-sample-size *sample size*—(Optional) Specify the number of samples used for calculating the average of various metrics.

Default: 5

Range: 1 through 30

padding-size *size*—(Optional) Specify the delay-measurement message length, which is used to calculate the delay experienced by messages of different sizes.

Default: 0

Range: 1 through 1500

query-interval *milliseconds*—Specify the minimum transmit interval, which signifies how often the loss measurement message is generated from the querier.

Default: 10 seconds

Range: 1000 through 4294967295 milliseconds

rtt-delay-threshold *rtt threshold value*—Specify the round-trip delay threshold value.

Range: 1 through 4294967295 microseconds

twcd-delay-threshold *twcd threshold value*—Specify the two-way channel delay threshold value.

Range: 1 through 4294967295 microseconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Pro-Active Loss and Delay Measurements | 416](#)

[On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview | 387](#)

[performance-monitoring \(Protocols MPLS\) | 1851](#)

traffic-class (loss)

Syntax

```
traffic-class tc-value {
  average-sample-size sample size;
  loss-threshold loss threshold value;
  loss-threshold-window number of samples for loss threshold;
  measurement-quantity bytes|packets;
  query-interval milliseconds;
}
```

Hierarchy Level

```
[edit protocols mpls oam performance-monitoring querier loss],
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring querier loss],
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring querier loss],
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring querier loss]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure traffic class specific options.

Specify the traffic classes for which loss measurement has to be performed. This parameter takes one of the *tc-all|tc-0|tc-1|tc-2|tc-3|tc-4|tc-5|tc-6|tc-7|tc-none* traffic-class values. For each traffic class, you can configure the respective parameters.

To enable traffic-class parameters, configure the **traffic-class-statistics** configuration statement under the **[edit protocol mpls statistic]** hierarchy level.

Options

average-sample-size *sample size*—(Optional) Specify the number of samples used for calculating the average of various metrics.

Default: 5

Range: 1 through 30

loss-threshold *loss threshold value*—Specify the threshold value that will be used with **loss-threshold-window** to calculate the loss within specified window size.

Range: 1 through 4294967295

loss-threshold-window *number of samples for loss threshold*—Specify the number of samples used for loss threshold calculation.

Range: 1 through 30

measurement-quantity *bytes|packets*—(Optional) Specify whether packet or byte loss is being measured at the querier.

Default: packets

query-interval *milliseconds*—Specify the minimum transmit interval, which signifies how often the loss measurement message is generated from the querier.

Default: 10 seconds

Range: 1000 through 4294967295 milliseconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Pro-Active Loss and Delay Measurements | 416](#)

[On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview | 387](#)

[performance-monitoring \(Protocols MPLS\) | 1851](#)

traffic-class (loss-delay)

Syntax

```
traffic-class tc-value {
  average-sample-size sample size;
  loss-threshold loss threshold value;
  loss-threshold-window number of samples for loss threshold;
  measurement-quantity bytes|packets;
  padding-size size;
  query-interval milliseconds;
  rtt-delay-threshold rtt threshold value;
  twcd-delay-threshold twcd threshold value;
}
```

Hierarchy Level

```
[edit protocols mpls oam performance-monitoring querier loss-delay],
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring querier loss-delay],
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring querier loss-delay],
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring querier loss-delay]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Configure traffic class specific options.

Specify the traffic classes for which loss measurement has to be performed. This parameter takes one of the *tc-all|tc-0|tc-1|tc-2|tc-3|tc-4|tc-5|tc-6|tc-7|tc-none* traffic-class values. For each traffic class, you can configure the respective parameters.

To enable traffic-class parameters, configure the **traffic-class-statistics** configuration statement under the **[edit protocol mpls statistic]** hierarchy level.

Options

average-sample-size *sample size*—(Optional) Specify the number of samples used for calculating the average of various metrics.

Default: 5

Range: 1 through 30

loss-threshold *loss threshold value*—Specify the threshold value that will be used with **loss-threshold-window** to calculate loss within specified window size.

Range: 1 through 4294967295

loss-threshold-window *number of samples for loss threshold*—Specify the number of samples used for loss threshold calculation.

Range: 1 through 30

measurement-quantity *bytes|packets*—(Optional) Specify whether packet or byte loss is being measured at the querier.

Default: packets

padding-size *size*—(Optional) Specify the delay-measurement message length, which is used to calculate the delay experienced by messages of different sizes.

Default: 0

Range: 1 through 1500

query-interval *milliseconds*—Specify the minimum transmit interval, which signifies how often the loss measurement message is generated from the querier.

Default: 10 seconds

Range: 1000 through 4294967295 milliseconds

rtt-delay-threshold *rtt threshold value*—Specify the round-trip delay threshold value.

Range: 1 through 4294967295 microseconds

twcd-delay-threshold *twcd threshold value*—Specify the two-way channel delay threshold value.

Range: 1 through 4294967295 microseconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Pro-Active Loss and Delay Measurements | 416](#)

[On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview | 387](#)

[performance-monitoring \(Protocols MPLS\) | 1851](#)

traffic-engineering (Protocols MPLS)

Syntax

```
traffic-engineering (bgp | bgp-igp | bgp-igp-both-ribs | mpls-forwarding);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.1 for EX Series switches.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Select whether MPLS performs traffic engineering on BGP destinations only or on both BGP and IGP destinations. Affects only LSPs originating from this routing device, not transit or egress LSPs.

Default

bgp

Options

bgp—On BGP destinations only. Ingress routes are installed in the inet.3 routing table.

bgp-igp—On both BGP and IGP destinations. Ingress routes are installed in the inet.0 routing table. If IGP shortcuts are enabled, the shortcut routes are automatically installed in the inet.0 routing table.

bgp-igp-both-ribs—On both BGP and IGP destinations. Ingress routes are installed in the inet.0 and inet.3 routing tables. This option is used to support VPNs.

mpls-forwarding—On both BGP and IGP destinations. Use ingress routes for forwarding only, not for routing.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Traffic Engineering for LSPs | 1058](#)

traffic-engineering

Syntax

```
traffic-engineering {
  disable;
}
```

Hierarchy Level

```
[edit protocols ospf | isis]
```

Release Information

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Enable the traffic engineering features of the specified routing protocol.

Default

Traffic engineering is disabled.

Starting in Junos OS release 15.1, traffic engineering is enabled by default whenever the IS-IS protocol is enabled. You can disable it by including the **disable** statement at the **[edit protocols isis traffic-engineering]** hierarchy level. For the EX3300, EX4200, EX4500, EX4550, EX8200 and XRE200, you can disable traffic engineering starting in Junos OS release 15.1R7.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring MPLS on EX8200 and EX4500 Switches | 41](#)

[Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect | 73](#)

[Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS | 67](#)

[Configuring MPLS on EX8200 and EX4500 Provider Switches | 77](#)

[Configuring an OSPF Network \(J-Web Procedure\)](#)

[MPLS Applications User Guide](#)

traffic-engineering (Protocols BGP)

Syntax

```
traffic-engineering {
    unicast;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp family],
[edit logical-systems logical-system-name protocols bgp group group-name family],
[edit logical-systems logical-system-name protocols bgp group group-name neighbor address family],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp family],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name
    family],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name
    neighbor address family],
[edit protocols bgp family],
[edit protocols bgp group group-name family],
[edit protocols bgp group group-name neighbor address family],
[edit routing-instances routing-instance-name protocols bgp family],
[edit routing-instances routing-instance-name protocols bgp group group-name family],
[edit routing-instances routing-instance-name protocols bgp group group-name neighbor address family]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Statement introduced on QFX5100 switches in Junos OS Release 15.1

Statement introduced on QFX10000 switches in Junos OS Release 17.1.

Description

Enable traffic engineering address family. This generates a multiprotocol address family indicator (AFI) and a subsequent address family identifier (SAFI) to be negotiated with the BGP peers.

The BGP network layer reachability information (NLRI) information is exchanged between the peers only when the traffic engineering AFI and SAFI are shared between them. If the peers do not agree on the use of the AFI and SAFI, the connection between the peers is terminated.

Options

unicast—Include BGP-TE NLRI.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Example: Configuring Link State Distribution Using BGP](#) | 1082

transit-lsp-association

Syntax

```
transit-lsp-association transit-association-lsp-group-name {
  from-1 address-of-associated-lsp-1;
  from-2 address-of-associated-lsp-2;
  lsp-name-1 name-of-associated-lsp-1;
  lsp-name-2 name-of-associated-lsp-2;
}
```

Hierarchy Level

[edit protocols mpls]

Release Information

Statement introduced in Junos OS Release 12.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Associate two label-switched paths (LSPs) at a transit node to configure a path for sending and receiving GAL and G-Ach messages for MPLS-TP OAM.

Options

transit-association-lsp-group-name—Name of the transit association LSP group.

from-1 address-of-associated-lsp-1—Address of the first associated LSP.

from-2 address-of-associated-lsp-2—Address of the second associated LSP.

lsp-name-1 name-of-associated-lsp-1—Name of the first associated LSP.

lsp-name-2 name-of-associated-lsp-1—Name of the second associated LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring the MPLS Transport Profile for OAM](#) | 1125

ultimate-hop-popping

Syntax

```
ultimate-hop-popping;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path label-switched-path-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path label-switched-path-name]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Statement introduced in Junos OS Release 13.2 for PTX Series Packet Transport Routers.

Description

Enable ultimate-hop popping on LSPs. Configure this statement on the device at the LSP ingress. In ultimate-hop popping, the MPLS label is popped from the IP packet at the PE router. The IP address is checked in a second address lookup (also at the PE router), and then the packet is forwarded to its destination.

Be aware of the following platform requirements and restrictions:

- UHP LSPs using VT interfaces—Supported on all M Series, MX Series, T Series, and TX Matrix routers.
- UHP LSPs using LSI interfaces—Supported on MX 3D Series routers only.
- UHP LSP requirements for the egress PE device—For M Series and T Series routers, a VT interface is needed.
- UHP LSPs and Layer 3 VPNs—UHP LSPs are supported for Layer 3 VPNs configured on MX 3D Series routers only.
- UHP LSPs and VPLS—UHP LSPs are supported for VPLS configured on MX 3D Series routers only. You must configure the *no-tunnel-services* statement at the **[edit routing-instances *routing-instance-name* protocols vpls]** hierarchy level.

Default

Ultimate-hop popping is disabled by default on LSPs. Penultimate-hop popping is the default behavior. In penultimate-hop popping, the final MPLS label is popped from the IP packet at the last provider router in the network before being forwarded to the PE router. The PE router receives the packet and checks the IP address, and then the packet is forwarded to its destination.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Ultimate-Hop Popping for LSPs | 559](#)

[explicit-null | 1733](#)

vrf-table-label

Syntax

```
vrf-table-label {  
    source-class-usage;  
    static;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit routing-instances routing-instance-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Support for the **source-class-usage** statement added in Junos OS Release 9.3.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 15.1F5 and 16.1R2 for PTX5000 routers with third-generation FPCs installed.

Statement introduced in Junos OS Release 15.1F6 and 16.1R2 for PTX3000 routers with third-generation FPCs.

Statement introduced in Junos OS Release 16.1X65 and 17.2R1 for PTX1000 routers.

Statement introduced in cRPD Release 19.4R1.

Support for the **static** statement added in Junos OS Release 17.2.

Description

Map the inner label of a packet to a specific VPN routing and forwarding (VRF) instance. This allows the examination of the encapsulated IP header. The first lookup is done on the VPN label to determine which VRF instance to refer to, and the second lookup is done on the IP header to determine how to forward packets to the correct end hosts.

When you include the **vrf-table-label** statement in the configuration of a VRF routing instance, a label-switched interface (LSI) logical interface label is created and mapped to the VRF routing table. Any routes in the VRF routing table are advertised with the LSI logical interface label allocated for the VRF routing table. When packets destined for the VRF routing instance arrive on a core-facing interface, they are treated as if the enclosed IP packet arrived on the LSI interface and are then forwarded and filtered based on the correct table.

All routes in a VRF routing instance configured with this option are advertised with one label allocated per VRF.

NOTE:

- The **vrf-table-label** statement is supported on PTX5000 and PTX3000 routers only when third-generation FPCs are installed on the router and **enhanced-ip** command is configured on the chassis.
- Starting in Junos OS Release 17.2, you can configure the **enhanced-ip** command, which is supported on platforms using Modular Port Concentrators (MPCs) equipped with Junos Trio chipsets. You can also separate the MPLS labels used for different label spaces which provides more flexibility and scalability. The **vrf-table-label** space is increased to at least 16,000, if the platform can support the scale.

Options

The remaining statements are explained separately.

Range: 16 through 1,048,575 for static label value.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Filtering Packets in Layer 3 VPNs Based on IP Headers

Configuring EXP-Based Traffic Classification for VPLS

Load Balancing and IP Header Filtering for Layer 3 VPNs

RSVP Configuration Statements

IN THIS CHAPTER

- admin-group | 1953
- aggregate (Protocols RSVP) | 1954
- authentication-key (Protocols RSVP) | 1956
- bandwidth (Protocols RSVP) | 1957
- bypass (Signaled LSP) | 1959
- bypass (Static LSP) | 1961
- chained-composite-next-hop | 1962
- class-of-service (Protocols RSVP) | 1965
- destination-networks | 1966
- devices | 1967
- disable (Protocols RSVP) | 1968
- dynamic-bidirectional-transport | 1969
- fast-reroute (Protocols RSVP) | 1970
- graceful-deletion-timeout | 1971
- graceful-restart (Protocols RSVP) | 1972
- hello-acknowledgements | 1973
- hello-interval (Protocols RSVP) | 1974
- hop-limit | 1975
- interface (Protocols RSVP) | 1977
- keep-multiplier | 1979
- label-switched-path-template (Multicast) | 1981
- link-protection (RSVP) | 1983
- load-balance (Protocols RSVP) | 1985
- max-bypasses | 1986
- no-local-reversion | 1987
- node-hello | 1989
- no-adjacency-down-notification (Protocols IS-IS) | 1991
- no-authentication-check (Protocols RSVP) | 1992

- no-cspf (Protocols RSVP) | 1993
- no-interface-hello | 1994
- no-neighbor-down-notification | 1995
- no-node-id-subobject | 1996
- no-p2mp-sublsp | 1997
- no-enhanced-frr-bypass (Protocols RSVP) | 1998
- node-link-protection (Protocols MPLS) | 1999
- optimize-timer (Protocols RSVP) | 2000
- path (Protocols RSVP) | 2001
- peer-interface (Protocols RSVP) | 2002
- pop-and-forward (Protocols RSVP) | 2003
- preemption | 2004
- priority (Protocols RSVP) | 2006
- refresh-time | 2007
- reliable | 2008
- rsvp | 2009
- rsvp-te (Routing Options) | 2010
- setup-protection | 2011
- soft-preemption (Protocols RSVP) | 2012
- static-label-switched-path | 2013
- subscription | 2015
- traceoptions (Protocols RSVP) | 2017
- transit | 2020
- tunnel-services (RSVP) | 2022
- ultimate-hop-popping | 2023
- update-threshold | 2025

admin-group

Syntax

```
admin-group {
  exclude [ group-names ];
  include-all [ group-names ];
  include-any [ group-names ];
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection bypass bypass-name],
[edit protocols rsvp interface interface-name link-protection],
[edit protocols rsvp interface interface-name link-protection bypass bypass-name]
```

Release Information

Statement introduced in Junos OS Release 9.2.

Description

Enable you to configure administrative groups for bypass label-switched paths (LSPs). You can configure administrative groups either globally for all bypass LSPs traversing an interface or for just a specific bypass LSP.

Options

exclude *group-names*—Specify the administrative groups to exclude for a bypass LSP.

include-all *group-names*—Specify the administrative groups whose links the bypass LSP must traverse.

include-any *group-names*—Specify the administrative groups whose links the bypass LSP can traverse.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Administrative Groups for Bypass LSPs](#) | 378

aggregate (Protocols RSVP)

Syntax

```
(aggregate | no-aggregate);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp peer-interface peer-interface-name],  
[edit protocols rsvp peer-interface peer-interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Control the use of RSVP aggregate messages on an interface or peer interface, as described below.

NOTE: Starting in Junos OS Release 15.2, the **aggregate** statement is deprecated at the **[edit protocols rsvp interface *interface-name*]** and **[edit logical-systems *logical-system-name* protocols rsvp interface *interface-name*]** hierarchy levels, as RSVP message aggregation is enabled by default.

- **aggregate**—Use RSVP aggregate messages.
- **no-aggregate**—Do not use RSVP aggregate messages.

Aggregate messages can pack multiple RSVP messages into a single transmission, thereby reducing network overhead and enhancing efficiency. The number of supportable sessions and processing overhead are significantly improved when aggregation is enabled.

Not all routers connected to a subnet need to support aggregation simultaneously. Each RSVP router negotiates its intention to use aggregate messages on a per-neighbor basis. Only when both routers agree are aggregate messages sent.

To have refresh reduction and reliable delivery, you must include the **aggregate** and **reliable** statements.

Default

Aggregation is enabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

	RSVP Refresh Reduction 776
	Configuring RSVP Refresh Reduction 783
	reliable 2008

authentication-key (Protocols RSVP)

Syntax

```
authentication-key key;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name],  
[edit logical-systems logical-system-name protocols rsvp peer-interface peer-interface-name],  
[edit protocols rsvp],  
[edit protocols rsvp interface interface-name],  
[edit protocols rsvp peer-interface peer-interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Authentication key (password). Neighboring routers use the password to verify the authenticity of packets sent from this interface or peer interface. To authenticate node hellos or remote messages between the Point of Local Repair (PLR) to the Merge Point (MP), enable **authentication-key** at the **[edit protocols rsvp]** hierarchy level.

RSVP uses HMAC-MD5 authentication, which is defined in RFC 2104, *HMAC: Keyed-Hashing for Message Authentication*.

All routers that are connected to the same IP subnet must use the same authentication scheme and password.

Options

key—Authentication password. It can be 1 through 16 contiguous digits or letters. Separate decimal digits with periods. Separate hexadecimal digits with periods and precede the string with 0x. If you include spaces in the password, enclose the entire password in quotation marks (" ").

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring RSVP Authentication](#) | 786

bandwidth (Protocols RSVP)

Syntax

```
bandwidth bps;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection bypass bypass-name],
[edit protocols rsvp interface interface-name],
[edit protocols rsvp interface interface-name link-protection],
[edit protocols rsvp interface interface-name link-protection bypass bypass-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

For certain logical interfaces (such as Asynchronous Transfer Mode [ATM], Permanent Virtual Circuit [PVC], or Frame Relay), you cannot determine the correct bandwidth from the hardware. This statement enables you to specify the actual available bandwidth.

This statement also enables you to specify the bandwidth for a bypass label switched path (LSP). If you have configured multiple bypasses, this statement is mandatory and is applied to all of the bypass LSPs.

Default

The hardware raw bandwidth is used.

Options

bps—Bandwidth in bits per second. You can specify this as an integer value. If you do so, count your zeros carefully, or you can use the abbreviations **k** (for a thousand), **m** (for a million), or **g** (for a billion [also called a thousand million]).

Range: Any positive integer

Default: 0 (no bandwidth is reserved)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Bandwidth for Bypass LSPs | 379](#)

[Configuring Link Protection on Interfaces Used by LSPs | 376](#)

[Configuring Bypass LSPs | 378](#)

bypass (Signaled LSP)

Syntax

```
bypass bypass-name {
  bandwidth bps;
  description text;
  hop-limit number;
  no-cspf;
  path address <strict | loose>;
  priority setup-priority reservation-priority;
  subscription subscription-percentage;
  to address;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],
[edit protocols rsvp interface interface-name link-protection]
```

Release Information

Statement introduced before Junos OS Release 7.4.

description option was added in Junos OS Release 10.4.

subscription *subscription-percentage* option introduced in Junos OS Release 19.2R1 on all platforms.

Description

Enables you to configure specific bandwidth and path constraints for a bypass LSP. It is possible to individually configure multiple bypass LSPs. If you do not configure the bypass LSPs individually, they all share the same path and bandwidth constraints.

If you specify the **bandwidth**, **hop-limit**, and **path** statements for the bypass LSP, these values take precedence over the values configured at the **[edit protocols rsvp interface *interface-name* link-protection]** hierarchy level. The other attributes (**subscription**, **no-node-protection**, and **optimize-timer**) are inherited from the general constraints.

Options

bypass-name—(Required) Specify a name for the bypass LSP. The name can be up to 64 characters.

description—Provides a textual description of the bypass LSP. Enclose any descriptive text that includes spaces in quotation marks (" "). Any descriptive text you include is displayed in the output of the **show mpls lsp bypass detail** command and has no effect on the operation of the bypass LSP. The description text can be no more than 80 characters in length.

subscription *subscription-percentage*—(Optional) Specify the subscription percentage per manual bypass LSP. The subscription percentage configured under a particular manual bypass LSP overrides the subscription percentage configured commonly for all manual bypass LSPs under an interface.

Range: 0 through 65000

to *address*—(Required) Specify the address for the interface of the immediate next-hop node (for link protection) or the next-next-hop node (for node-link protection). The address specified determines whether this is a link protection bypass or a node-link protection bypass. On multiaccess networks (for example, a LAN), this address is also used to specify which next-hop node is being protected.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Bypass LSPs](#) | 378

bypass (Static LSP)

Syntax

```
bypass bypass-name {  
    bandwidth bps;  
    description string;  
    next-hop (address | interface-name | address/interface-name);  
    push out-label;  
    to address;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name],  
[edit protocols mpls static-label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 10.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Configure specific bandwidth and path constraints for a bypass ingress LSP. It is possible to configure multiple bypass LSPs individually. If you do not, they all share the same path and bandwidth constraints.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Static LSPs](#) | 573

chained-composite-next-hop

Syntax

```
chained-composite-next-hop {  
    ingress;  
    transit;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options forwarding-table],  
[edit routing-options forwarding-table]
```

NOTE: The **[edit logical-systems]** hierarchy level is not supported on the QFX10000 switches.

Release Information

Statement introduced in Junos OS Release 12.1.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 15.1 for QFX10000 Series switches.

Description

Allows you to configure the chained composite next hops for devices handling ingress or transit traffic in the network.

Chained composite next hops help to facilitate the handling of large volumes of transit traffic in the core of large networks by allowing the router to process much larger volumes of routes. A chained composite next hop allows the router to direct sets of routes sharing the same destination to a common forwarding next hop, rather than having each route also include the destination. In the event that a network destination is changed, rather than having to update all of the routes sharing that destination with the new information, just the shared forwarding next hop is updated with the new information. The chained composite next hops continue to point to this forwarding next hop which now contains the new destination.

On platforms containing only MPCs, such as PTX Series Packet Transport Routers, the MX80 router, the MX2020 router, and the QFX10000 switches, chained composite next hops are enabled by default. On MX Series 5G Universal Routing Platforms containing both DPC and MPC FPCs and on T4000 Core Routers containing MPC and FPCs, chained composite next hops are disabled by default and need to be explicitly configured.

To explicitly configure chained composite next hops, include the **enhanced-ip** statement at the **[edit chassis network-services]** hierarchy level. However, take the following into consideration when enabling the **enhanced-ip** mode:

- Non-service DPCs do not work with enhanced network services mode options. Only MPCs, MS-DPCs, and MS-MPCs provide support for the **enhanced-ip** configuration.
- If you configure chained composite next hops on MX Series routers with both MPCs, and DPCs or DPCEs, the network services mode must be changed from **enhanced-ip** to **ethernet** for the DPC or DPCE to come online.

You can verify the FPC status in such cases, using the **show chassis fpc** command output, where the DPCs and DPCEs are marked as **FPC misconfiguration**.

NOTE:

- When chained composite next hops are enabled on a device, the BGP connections are reset.
- On MX Series routers with DPCs or DPCEs, only the *l3vpn* option is supported under the *ingress* configuration statement; all other configuration options and functionality are not supported.
- The **transit** statement and the associated functionality is supported only on PTX Packet Transport Routers and QFX10000 switches.
- On MX Series routers, removing the **chained-composite-next-hop** statement from a PE device configuration causes all IBGP sessions to be torn down and triggers the BGP session to flap as well. A similar change on a router configured as a route reflector does not have any effect, however.

The following is a sample system log message that is generated to record such an event:

```
Nov  6 15:16:21.670 host PE1: rpd[6947]: bgp_peer_mgmt_clear:5995:
NOTIFICATION sent to 10.0.100.2 (External AS 100): code 6 (Cease) subcode
 4 (Administratively Reset), Reason: Management session cleared BGP
neighbor
```

- Starting with Junos OS Release 17.2, you cannot configure **chained-composite-next-hop ingress l3vpn extended-space** on a logical system.

The remaining statements are explained separately. See [CLI Explorer](#).

Default

This statement is disabled by default.

Options

ingress—Enable or disable composite chained next hop for ingress traffic.

transit—(PTX and QFX10000) Enable or disable composite chained next hop for transit traffic. Starting in Junos OS Release 14.1, the **transit l3vpn** statement is enabled by default on PTX Series Packet Transport Routers only.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

<i>Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs</i>
<i>Chained Composite Next Hops for Transit Devices for VPNs</i>
<i>Example: Configuring Chained Composite Next Hops for Direct PE-PE Connections in VPNs</i>
<i>ingress</i>
transit (Chained Composite Next Hops) 2470

class-of-service (Protocols RSVP)

Syntax

```
class-of-service cos-value;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],  
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection bypass bypass-name],  
[edit protocols rsvp interface interface-name link-protection],  
[edit protocols rsvp interface interface-name link-protection bypass bypass-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Class-of-service (CoS) value given to all packets in the bypass LSP. You can specify a single CoS value for all the bypass LSPs traversing an interface. You can also configure CoS values for specific bypass LSPs traversing an interface.

The CoS value might affect the scheduling or queuing algorithm of traffic traveling along an LSP.

Options

cos-value—CoS value. A higher value typically corresponds to a higher level of service.

Range: 0 through 7

Default: If you do not specify a CoS value, the IP precedence bits from the packet's IP header are used as the packet's CoS value.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Class of Service for Bypass LSPs](#) | 380

destination-networks

Syntax

```
destination-networks prefix;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options dynamic-tunnels  
  tunnel-name],  
[edit logical-systems logical-system-name routing-options dynamic-tunnels tunnel-name rsvp-te entry],  
[edit logical-systems logical-system-name routing-options dynamic-tunnels tunnel-name],  
[edit routing-instances routing-instance-name routing-options dynamic-tunnels tunnel-name],  
[edit routing-instances routing-instance-name routing-options dynamic-tunnels tunnel-name rsvp-te entry],  
[edit routing-options dynamic-tunnels tunnel-name],  
[edit routing-options dynamic-tunnels tunnel-name rsvp-te entry]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Specify the IPv4 prefix range for the destination network. Only tunnels within the specified IPv4 prefix range can be created.

Options

prefix—Destination prefix of the network.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring GRE Tunnels for Layer 3 VPNs](#)

[Configuring Dynamic Tunnels](#)

[Configuring RSVP Automatic Mesh](#) | 802

devices

Syntax

```
devices device-names;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced in Junos OS Release 8.1.

Description

Specifies one of the virtual tunnel (VT) interfaces to de-encapsulate the egress traffic for ultimate-hop popping on point-to-multipoint LSPs. If no device is specified, the selection process is performed automatically.

Default

The device selection process is performed automatically if no device is configured. Junos OS selects one of the available VT interfaces to de-encapsulate the egress traffic.

Options

device-names—Specify which VT interfaces are used to handle the RSVP traffic.

Range: 0 to 8 devices

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs | 810](#)

Understanding Redundant Virtual Tunnel Interfaces in MBGP MVPNs

disable (Protocols RSVP)

Syntax

```
disable;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit logical-systems logical-system-name protocols rsvp graceful-restart],  
[edit logical-systems logical-system-name protocols rsvp interface interface-name],  
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],  
[edit logical-systems logical-system-name protocols rsvp peer-interface peer-interface-name],  
[edit protocols rsvp],  
[edit protocols rsvp graceful-restart],  
[edit protocols rsvp interface interface-name],  
[edit protocols rsvp interface interface-name link-protection],  
[edit protocols rsvp peer-interface peer-interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Explicitly disable RSVP or RSVP graceful restart. Explicitly disable link protection on the specified interface.

Default

RSVP is enabled on interfaces and peer interfaces configured with the RSVP **interface** statement. RSVP graceful restart is enabled on the router. Link protection is disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Minimum RSVP Configuration | 780](#)

[Configuring RSVP Graceful Restart | 817](#)

[Configuring Link Protection on Interfaces Used by LSPs | 376](#)

dynamic-bidirectional-transport

Syntax

```
dynamic-bidirectional-transport {  
    template template;  
}
```

Hierarchy Level

```
[edit protocols rsvp peer-interface peer-interface-name]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Description

Enable the dynamic setup of associated bidirectional packet LSP for transporting non-packet Generalized Multiprotocol Label Switching (GMPLS) label-switched path (LSP).

Options

template *template*—Name of the template for the dynamic bidirectional packet LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

fast-reroute (Protocols RSVP)

Syntax

```
fast-reroute optimize-timer seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement added in Junos OS Release 7.5.

Statement introduced in Junos OS Release 14.1 for the QFX Series.

Description

Configure the optimize timer for fast reroute. The optimize timer triggers a periodic optimization process that recomputes the fast reroute detour LSPs to use network resources more efficiently.

Options

seconds—Specify the number of seconds between fast reroute detour LSP optimizations.

Range: 0 through 65,535 seconds

Default: 0 (disabled)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Optimization Interval for Fast Reroute Paths](#) | 476

graceful-deletion-timeout

Syntax

```
graceful-deletion-timeout seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the time, in seconds, before completing graceful deletion of signaling.

Options

seconds—Time before completing graceful deletion of signaling.

Range: 1 through 300 seconds

Default: 30 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Graceful Deletion Timeout Interval](#) | 1261

graceful-restart (Protocols RSVP)

Syntax

```
graceful-restart {  
  disable;  
  helper-disable;  
  maximum-helper-recovery-time seconds;  
  maximum-helper-restart-time seconds;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options],  
[edit protocols rsvp],  
[edit routing-options]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure graceful restart on the router. You must configure the **graceful-restart** statement at the **[edit routing-options]** hierarchy level to enable graceful restart on the router.

Options

disable—Disable graceful restart on the router or for RSVP.

helper-disable—Disable RSVP graceful restart helper mode (this option is only available at the **[edit protocols rsvp]** hierarchy level).

Default: Helper mode is enabled by default.

maximum-helper-recovery-time *seconds*—The maximum length of time the router stores the state of neighboring routers when they undergo a graceful restart. The value applies to all neighboring routers, so it should be based on the time that the slowest RSVP neighbor requires for restart.

Default: 180 seconds

Range: 1 through 3600 seconds

maximum-helper-restart-time *seconds*—The maximum length of time the router waits between when it discovers that a neighboring router has gone down and when it declares the neighbor down. This value is applied to all neighboring routers, so it should be based on the time that the slowest RSVP neighbor requires for restart.

Default: 20 seconds

Range: 1 through 1800 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring RSVP Graceful Restart | 817](#)

hello-acknowledgements

Syntax

```
hello-acknowledgements;
```

Hierarchy Level

```
[edit logical-systems logical-systems-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced in Junos OS Release 10.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable hello messages from nonsession neighbors to be acknowledged with a hello acknowledgment message. Once hello acknowledgments are enabled, the router continues to acknowledge hello messages from any nonsession RSVP neighbors unless the interface itself goes down or the configuration is changed by an administrator.

Default

Hello acknowledgments are disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Hello Acknowledgments for Nonsession RSVP Neighbors | 798](#)

hello-interval (Protocols RSVP)

Syntax

```
hello-interval seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name],  
[edit logical-systems logical-system-name protocols rsvp peer-interface peer-interface-name],  
[edit protocols rsvp interface interface-name],  
[edit protocols rsvp peer-interface peer-interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable the sending of hello packets on the interface.

Options

seconds—Length of time between hello packets. A value of 0 disables the sending of hello packets on the interface.

Range: 1 through 60 seconds

Default: 9 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the RSVP Hello Interval](#) | 785

hop-limit

Syntax

```
hop-limit number;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name fast-reroute],
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name (primary |
secondary) path-name],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection bypass bypass-name],
[edit protocols mpls],
[edit protocols mpls label-switched-path lsp-name],
[edit protocols mpls label-switched-path lsp-name fast-reroute],
[edit protocols mpls label-switched-path lsp-name (primary | secondary) path-name],
[edit protocols rsvp interface interface-name link-protection],
[edit protocols rsvp interface interface-name link-protection bypass bypass-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the maximum number of routers that an LSP can traverse. This limit can be applied to any of the following:

- LSPs—The configured hop limit includes the ingress and egress routers. You can specify a hop limit for an LSP and for both primary and secondary paths.
- Fast reroute detour—Specify the number of additional routers a fast reroute detour can traverse relative to the protected LSP. For example, if an LSP traverses 4 routers, any detour for the LSP can be no more than 10 router hops, including the ingress and egress routers.
- Link protection bypass—Specify the maximum number of routers that a link protection bypass can traverse.

Options

number—Maximum number of hops.

Range: 2 through 255 (for an LSP or for a link protection bypass); 0 through 255 (for fast reroute)

Default: 255 (for an LSP or for a link protection bypass); 6 (for fast reroute)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring Fast Reroute 473
Limiting the Number of Hops in LSPs 515
Configuring the Hop Limit for Bypass LSPs 380

interface (Protocols RSVP)

Syntax

```

interface interface-name {
    disable;
    (aggregate | no-aggregate);
    authentication-key key;
    bandwidth bps;
    hello-interval seconds;
    link-protection {
        disable;
        admin-group {
            exclude [ group-names ];
            include-all [ group-names ];
            include-any [ group-names ];
        }
        bandwidth bps;
        bypass bypass-name {
            bandwidth bps {
                ct0 bps;
                ct1 bps;
                ct2 bps;
                ct3 bps;
            }
            description text;
            class-of-service cos-value;
            hop-limit number;
            no-cspf;
            path address <strict | loose>;
            priority setup-priority reservation-priority;
            to address;
        }
        class-of-service cos-value;
        hop-limit number;
        max-bypasses number;
        no-cspf;
        no-node-protection;
        optimize-timer seconds;
        path address <strict | loose>;
        priority setup-priority reservation-priority;
        subscription percentage;
    }
    (reliable | no-reliable);
    subscription percentage {

```

```

    ct0 percentage;
    ct1 percentage;
    ct2 percentage;
    ct3 percentage;
  }
  update-threshold threshold;
}

```

Hierarchy Level

```

[edit logical-systems logical-system-name protocols rsvp],
[edit protocols rsvp]

```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable RSVP on one or more router interfaces.

Default

RSVP is disabled on all interfaces.

Options

interface-name—Name of an interface. To configure all interfaces, specify **all**. For details about specifying interfaces, see the *Junos OS Network Interfaces Library for Routing Devices*.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Minimum RSVP Configuration](#) | 780

keep-multiplier

Syntax

```
keep-multiplier number;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify a value used by RSVP to calculate timer values for network outages, and declare that a reservation or a neighbor is down. It indicates the number of messages that can be lost before a particular state is declared stale and must be deleted. The keep multiplier directly affects the lifetime of an RSVP state.

Starting in Junos OS Release 16.1, for MX Series routers and PTX Series routers, the default RSVP message refresh time, to which this multiplier is applied, has increased from 30 seconds to 20 minutes. The higher message refresh time provides support for RSVP Refresh Reduction Extensions, and improved scaling for MPLS traffic-engineered LSPs, as defined in RFC 2961. The changes are backward compatible so if any nodes in the two-hop neighborhood do not support the higher refresh time, the updated node will automatically fall back to the previous default refresh time to prevent error or tear down messages.

Options

number—Multiplier value.

Range: 1 through 255

Default: 3

NOTE: For MX Series routers and PTX Series routers (running Junos OS release 16.1 or later), this multiplier is applied to a default refresh time of 20 minutes. In earlier Junos OS releases, and for other platforms, the default refresh time remains 30 seconds.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Timers for RSVP Refresh Messages](#) | 803

label-switched-path-template (Multicast)

Syntax

```
label-switched-path-template {
  (default-template | lsp-template-name);
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel rsvp-te],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel ingress-replication
  label-switched-path],
[edit logical-systems logical-system-name routing-instances routing-instance-name provider-tunnel selective group
  address source source-address rsvp-te],
[edit logical-systems logical-system-name routing-options dynamic-tunnels tunnel-name rsvp-te entry-name],
[edit protocols mvpn inter-region-segmented template template-name region region-name ingress-replication
  label-switched-path],
[edit protocols mvpn inter-region-segmented template template-name region region-name rsvpe-te],
[edit protocols mvpn inter-region-template template template-name all-regions ingress-replication
  label-switched-path],
[edit protocols mvpn inter-region-template template template-name all-regions rsvp-te],
[edit routing-instances routing-instance-name provider-tunnel ingress-replication label-switched-path],
[edit routing-instances routing-instance-name provider-tunnel rsvp-te],
[edit routing-instances routing-instance-name provider-tunnel selective group address source source-address rsvp-te],
[edit routing-options dynamic-tunnels tunnel-name rsvp-te entry-name]
[edit routing-instances instance-name provider-tunnel]
```

Release Information

Statement introduced in Junos OS Release 8.5.

Statement introduced in Junos OS Release 18.2. under the heirarchy level [edit routing-instances *instance-name* provider-tunnel]

Description

Specify the LSP template. An LSP template is used as the basis for other dynamically generated LSPs. This feature can be used for a number of applications, including point-to-multipoint LSPs, flooding VPLS traffic, configuring ingress replication for IP multicast using MBGP MVPNs, and to enable RSVP automatic mesh. There is no default setting for the **label-switched-path-template** statement, so you must configure either the default-template using the **default-template** option, or you must specify the name of your preconfigured LSP template.

Options

default-template—Specify that the default LSP template be used for the dynamically generated LSPs.

lsp-template-name—Specify the name of an LSP to be used as a template for the dynamically generated LSPs.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring Ingress Replication for IP Multicast Using MBGP MVPNs

Configuring Point-to-Multipoint LSPs for an MBGP MVPN

Configuring Dynamic Point-to-Multipoint Flooding LSPs

[Configuring RSVP Automatic Mesh | 802](#)

link-protection (RSVP)

Syntax

```
link-protection {
  disable;
  admin-group {
    exclude [ group-names ];
    include-all [ group-names ];
    include-any [ group-names ];
  }
  bandwidth bps;
  bypass bypass-name {
    bandwidth bps {
      ct0 bps;
      ct1 bps;
      ct2 bps;
      ct3 bps;
    }
  }
  description text;
  class-of-service cos-value;
  hop-limit number;
  no-cspf;
  path address <strict | loose>;
  priority setup-priority reservation-priority;
  to address;
}
class-of-service cos-value;
hop-limit number;
max-bypasses number;
no-cspf;
no-node-protection;
optimize-timer seconds;
path address <strict | loose>;
priority setup-priority reservation-priority;
subscription percentage;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name],
[edit protocols rsvp interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

Description

Enable link protection on the specified interface. Using link protection, you can configure a network to reroute traffic quickly around broken links. To fully enable link protection, you also need to configure the **link-protection** statement at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level. You can configure single or multiple bypasses for protected interface.

Default

Link protection is disabled.

Options

no-node-protection—Disable node-link protection on the RSVP interface. Link protection remains active. When this option is configured, the router can only initiate a next-hop bypass, not a next-next-hop bypass.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Link Protection on Interfaces Used by LSPs](#) | 376

[link-protection \(Dynamic LSPs\)](#) | 1784

load-balance (Protocols RSVP)

Syntax

```
load-balance {  
    bandwidth;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Load-balance traffic between RSVP LSPs.

Options

bandwidth—Load-balance traffic between RSVP LSPs based on the bandwidth configured for each LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Load Balancing Across RSVP LSPs | 801](#)

max-bypasses

Syntax

```
max-bypasses number;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name],  
[edit protocols rsvp interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Range modified in Junos OS Release 9.3.

Description

Specify the maximum number of dynamic bypass LSPs permitted for protecting this interface. When this option is configured, multiple bypasses for link protection are enabled. Call admission control (CAC) is also enabled. The limit on bypasses configured applies only to dynamically generated bypass LSPs. By default, this option is disabled and only one dynamic bypass LSP is enabled for each interface. If you configure **max-bypasses**, you must also configure the **bandwidth** statement.

Options

number—Configure the maximum number of bypass LSPs. If you configure a value of 0, no dynamic bypass LSPs are allowed to be established for the interface. Only static bypass LSPs can be configured.

Range: 0 through 99

Default: 1

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Maximum Number of Bypass LSPs | 380](#)

no-local-reversion

Syntax

```
local-reversion;  
no-local-reversion;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced in Junos OS Release 10.4.

Description

Disable RSVP local revertive mode as specified in RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*.

NOTE: For Junos OS Release 16.1 running on MX Series or PTX Series routers, **no-local-reversion** is enabled by default, that is, local reversion is not running, and the statement has been deprecated. To enable local reversion, use the **local-reversion** statement.

RSVP local revertive mode is supported on all Juniper Networks routers running Junos OS. It is the default behavior. If you include this statement, the Juniper Networks router uses global revertive mode instead. You might need to disable RSVP local revertive mode on Juniper Networks routers if your network includes equipment that does not support this mode.

The following information can also be found in RFC 4090. Refer to the RFC for additional information. When an LSP fails, the connection can be repaired locally using a traffic protection mechanism such as fast reroute. To restore the LSP to a full working path, RFC 4090 specifies the following strategies:

- Local revertive mode—Upon detecting that the path is restored, the point of local repair (PLR) resignals each of the LSPs that were formerly routed over the restored path. Every LSP successfully resignaled along the restored path is switched back.
- Global revertive mode—The ingress router of each tunnel is responsible for reoptimizing the LSPs that used the failed path. There are several potential reoptimization triggers: RSVP error messages, inspection of OSPF LSAs or IS-IS LSPs, and timers. This re-optimization process can proceed as soon as the failure is detected. It is not tied to the restoration of the failed path.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

node-hello

Syntax

```
(node-hello | no-node-hello);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced in Junos OS Release 10.0.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable node-ID based RSVP hellos globally on all of the RSVP interfaces on the router to allow Juniper Networks routers to interoperate with the equipment of other vendors. By default, the Junos OS uses interface-based RSVP hellos; node-ID based RSVP hellos are disabled. If you have not enabled RSVP node IDs on the router, Junos OS does not accept any node-ID hello packets.

NOTE: For Junos OS Release 16.1 running on MX Series or PTX Series routers, when using enhanced FRR, node-ID based hellos are enabled by default. To disable node-id based hello sessions, use the **no-node-hello** statement.

NOTE: If **link-protection** is enabled, remote node hellos that are initiated by the Point of Local Repair (PLR) to Node Protecting Merge Point (NP-MP) are enabled automatically. Similarly, if **no-enhanced-frr-profile** is enabled (that is, enhanced FRR is off), remote node hellos are automatically disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring RSVP Node-ID Hellos | 788](#)

| no-enhanced-frr-bypass | 1998

no-adjacency-down-notification (Protocols IS-IS)

Syntax

```
no-adjacency-down-notification;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols isis interface interface-name],  
[edit protocols isis interface interface-name]
```

Release Information

Statement introduced in Junos OS Release 8.0.

Description

Disable adjacency down notification for IS-IS to allow for migration from IS-IS to OSPF without disruption of the RSVP neighbors and associated RSVP-signaled label-switched paths (LSPs).

Whenever IS-IS is deactivated, the IS-IS adjacencies are brought down. IS-IS signals to RSVP to bring down any RSVP neighbors associated with the IS-IS adjacencies, and this further causes the associated LSPs signaled by RSVP to go down as well.

A similar process occurs whenever OSPF is deactivated. The OSPF neighbors are brought down. OSPF signals to RSVP to bring down any of the RSVP neighbors associated with the OSPF neighbors, and this further causes the associated LSPs signaled by RSVP to go down as well.

If you need to migrate from IS-IS to OSPF or from OSPF to IS-IS, the internal gateway protocol (IGP) notification to RSVP for an adjacency or neighbor down event needs to be ignored. Using the **no-adjacency-down-notification** or **no-neighbor-down-notification** statements, you can disable IS-IS adjacency down notification or OSPF neighbor down notification, respectively, until the migration is complete. The network administrator is responsible for configuring the statements before the migration, and then removing them from the configuration afterward, so that IGP notification can function normally.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[no-neighbor-down-notification](#) | 1995

no-authentication-check (Protocols RSVP)

Syntax

```
no-authentication-check;
```

Hierarchy Level

```
[edit protocols rsvp],
```

Release Information

Statement introduced in Junos OS Release 18.4R1.

Description

Skip authentication check for received messages.

Required Privilege Level

routing

RELATED DOCUMENTATION

[RSVP Authentication](#) | [771](#)

no-cspf (Protocols RSVP)

Syntax

```
no-cspf;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],  
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection bypass bypass-name],  
[edit protocols rsvp interface interface-name link-protection],  
[edit protocols rsvp interface interface-name link-protection bypass bypass-name]
```

Release Information

Statement introduced in Junos OS Release 7.5.

Description

Disable CSPF computation on all bypass LSPs or on a specific bypass LSP. You need to disable CSPF for link protection to function properly on interarea paths.

Default

CSPF is enabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Disabling CSPF for Bypass LSPs](#) | 381

no-interface-hello

Syntax

```
no-interface-hello;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced in Junos OS Release 10.0.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Explicitly disable RSVP interface hellos globally on the router.

NOTE: For Junos OS Release 16.1 running on MX Series or PTX Series routers, the behavior of this statement has changed. On these platforms, rather than disabling RSVP interface hellos globally, the **no-interface-hello** command triggers a switch back to the previous profile for all label-switched paths (LSPs.)

This type of configuration might be necessary in networks where the Juniper Networks router has numerous RSVP connections with equipment from other vendors. However, if you disable RSVP interface hellos globally, you can also configure a hello interval on an RSVP interface using the [hello-interval](#) statement. This configuration disables RSVP interface hellos globally but enables RSVP interface hellos on the specified interface. This configuration might be necessary in a heterogeneous network where some devices support RSVP node-ID hellos and other devices support RSVP interface hellos.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring RSVP Node-ID Hellos | 788](#)

[hello-interval \(Protocols RSVP\) | 1974](#)

no-neighbor-down-notification

Syntax

```
no-neighbor-down-notification;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ospf area area-id interface interface-name],  
[edit protocols ospf area area-id interface interface-name]
```

Release Information

Statement introduced in Junos OS Release 8.0.

Description

Disable neighbor down notification for OSPF to allow for migration from OSPF to IS-IS without disruption of the RSVP neighbors and associated RSVP-signaled LSPs.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

no-node-id-subobject

Syntax

```
no-node-id-subobject;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced in Junos OS Release 9.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Disable the record route object (RRO) node-ID subobject for compatibility with earlier versions of Junos OS.

NOTE: For Junos OS Release 16.1 running on MX Series or PTX Series routers, the behavior of this statement has changed. On these platforms, rather than disabling the record route object (RRO) node ID sub-object, the **no-node-id-subobject** command triggers a switch back to the previous profile for all label-switched paths (LSPs).

To interoperate with other vendors' equipment, Junos OS supports the RRO node-ID subobject for use in inter-AS link and node protection configurations.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Inter-AS Node and Link Protection](#) | 385

no-p2mp-sublsp

Syntax

```
no-p2mp-sublsp;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced in Junos OS Release 9.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Reject Resv messages that include the S2L_SUB_LSP object. By default, Resv messages that include the S2L_SUB_LSP object are accepted. However, in a network which includes Juniper Networks devices running both Junos OS Release 9.2 and later and Junos OS Release 9.1 and earlier, it is necessary to configure the **no-p2mp-sublsp** statement on devices running Junos OS Release 9.2 and later to ensure that point-to-multipoint LSPs function properly.

Default

Resv messages that include the S2L_SUB_LSP object are accepted.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Preserving Point-to-Multipoint LSP Functioning with Different Junos OS Releases](#) | 693

no-enhanced-frr-bypass (Protocols RSVP)

Syntax

```
no-enhanced-frr-bypass;
```

Hierarchy Level

```
[edit protocols rsvp ]
```

Release Information

Statement introduced in Junos OS Release 15.2R1.

Description

Enable **no-enhanced-frr-bypass** to turn off all Fast reroute (FRR) facility protection enhancements, which includes improved LSP scaling and enhanced RSVP message handling, and reduce the default refresh time to 30 seconds.

FRR is enabled by default for MX Series and PTX Series routers starting in Junos OS Release 15.2R1.

Default

This feature, **no-enhanced-frr-bypass**, is disabled by default. That is, enhanced FRR is enabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [RSVP Refresh Reduction](#) | [776](#)

node-link-protection (Protocols MPLS)

Syntax

```
node-link-protection;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],  
[edit protocols mpls label-switched-path lsp-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

Description

Enable node and link protection on the specified LSP. To fully enable node and link protection, you also need to include the **link-protection** statement at the **[edit protocols rsvp interface *interface-name*]** hierarchy level.

Default

Node and link protection is disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Node Protection or Link Protection for LSPs | 384](#)

[MPLS Feature Support on QFX Series and EX4600 Switches | 11](#)

[Understanding Interprovider and Carrier-of-Carriers VPNs | 1305](#)

optimize-timer (Protocols RSVP)

Syntax

```
optimize-timer seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],  
[edit protocols rsvp interface interface-name link-protection]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure an optimize timer for a bypass LSP. The optimize timer initiates a periodic optimization process that reshuffles data LSPs among bypass LSPs to achieve the most efficient use of network resources. The optimization process attempts to either minimize the number of bypasses currently in use, minimize the total amount of bandwidth reserved for all bypasses, or both.

Options

seconds—Specify the number of seconds between optimizations.

Range: 0 through 65,535 seconds

Default: 0 (disabled)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Optimization Interval for Bypass LSPs](#) | 382

path (Protocols RSVP)

Syntax

```
path address <strict | loose>;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection bypass bypass-name],
[edit protocols rsvp interface interface-name link-protection],
[edit protocols rsvp interface interface-name link-protection bypass bypass-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure an explicit path (a sequence of strict or loose routes) to control where and how a bypass LSP is established. If multiple bypasses are configured, they all will use the same explicit path.

Default

No path is configured. CSPF automatically calculates the path the bypass LSP takes.

Options

address—IP address of each transit router in the LSP. You must specify the address or hostname of each transit router, although you do not need to list each transit router if its type is **loose**. As an option, you can include the ingress and egress routers in the path. Specify the addresses in order, starting with the ingress router (optional) or the first transit router, and continuing sequentially along the path until reaching the egress router (optional) or the router immediately before the egress router.

Default: If you do not specify any routers explicitly, no routing limitations are imposed on the bypass LSP.

loose—(Optional) The next address in the **path** statement is loose. The LSP can traverse other routers before reaching this router.

Default: **strict**

strict—(Optional) The LSP must go to the next address specified in the **path** statement without traversing other nodes. This is the default.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring an Explicit Path for Bypass LSPs](#) | 382

peer-interface (Protocols RSVP)

Syntax

```
peer-interface peer-interface-name {  
    disable;  
    (aggregate | no-aggregate);  
    authentication-key key;  
    dynamic-bidirectional-transport template template;  
    hello-interval seconds;  
    (reliable | no-reliable);  
}
```

Hierarchy Level

```
[edit protocols rsvp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

dynamic-bidirectional-transport template *template* option introduced in Junos OS Release 14.2.

Description

Configure the name of the LMP peer device.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring RSVP and OSPF for LMP Peer Interfaces](#)

pop-and-forward (Protocols RSVP)

Syntax

```
pop-and-forward {  
    application-label depth depth;  
}
```

Hierarchy Level

```
[edit logical-systems name protocols rsvp],  
[edit logical-systems name routing-instances name protocols rsvp],  
[edit protocols rsvp],  
[edit routing-instances name protocols rsvp]
```

Release Information

Statement introduced in Junos OS Release 18.1R1 on MX Series routers, PTX Series routers, and vMX.

Description

Specify RSVP pop-and-forward LSP tunnel-specific global parameters. The application label depth (AppLD) value must be configured uniformly across the RSVP-TE network.

Options

application-label depth *depth*—Specify the maximum number of service labels.

Range: 0 through 3

Default: 1

Required Privilege Level

routing

RELATED DOCUMENTATION

[Pop-and-Forward LSP Configuration](#) | 693

[show rsvp pop-and-forward](#) | 2505

[pop-and-forward \(Protocols MPLS\)](#) | 1864

preemption

Syntax

```
preemption {  
  (aggressive | disabled | normal);  
  soft-preemption {  
    cleanup-timer seconds;  
  }  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Control RSVP session preemption.

Default

normal

Options

aggressive—Preempt RSVP sessions whenever bandwidth is insufficient to handle all sessions. A session is preempted whenever bandwidth is lowered or a new higher-priority session is established.

disabled—Do not preempt RSVP sessions.

normal—Preempt RSVP sessions to accommodate new higher-priority sessions when bandwidth is insufficient to handle all sessions.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

priority (Protocols RSVP)

Syntax

```
priority setup-priority reservation-priority;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection bypass bypass-name],
[edit protocols rsvp interface interface-name link-protection],
[edit protocols rsvp interface interface-name link-protection bypass bypass-name],
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure the setup priority and reservation priority for a bypass LSP. If insufficient link bandwidth is available during session establishment, the setup priority is compared with other setup priorities for established sessions on the link to determine whether some of them should be preempted to accommodate the new session. The session with the lower-hold priority is preempted.

Options

reservation-priority—Reservation priority, used to keep a reservation after it has been set up. A smaller number has a higher priority. The priority must be greater than or equal to the setup priority to prevent preemption loops.

Range: 0 through 7, where 0 is the highest and 7 is the lowest priority.

Default: 0 (Once the session is set up, no other session can preempt it.)

setup-priority—Setup priority.

Range: 0 through 7, where 0 is the highest and 7 is the lowest priority.

Default: 7 (The session cannot preempt any existing sessions.)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Priority and Preemption for Bypass LSPs | 383](#)

[Configuring Priority and Preemption for LSPs | 501](#)

refresh-time

Syntax

```
refresh-time seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Set the refresh time.

Options

seconds—Refresh time.

Range: 1 through 65,535

Default: 30 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Timers for RSVP Refresh Messages](#) | 803

reliable

Syntax

```
(reliable | no-reliable);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name],  
[edit logical-systems logical-system-name protocols rsvp peer-interface peer-interface-name],  
[edit protocols rsvp interface interface-name],  
[edit protocols rsvp peer-interface peer-interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable reliable message delivery on the interface.

To have both refresh reduction and reliable delivery, enable both the **aggregate** and **reliable** statements.

NOTE: For Junos OS Release 16.1 running on MX Series or PTX Series routers, setting **no-reliable** on an interface automatically disables the fast reroute (FRR) scalability enhancements, including refresh reduction, for all label-switched paths (LSPs) traversing the interface.

Default

Starting in Junos OS Release 16.1R1, all refresh reduction extensions are enabled by default.

Prior to Junos OS Release 16.1R1, the **reliable** option is disabled by default.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring RSVP Refresh Reduction | 783](#)

[aggregate | 1954](#)

rsvp

Syntax

```
rsvp;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols],  
[edit protocols]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Description

Enable Resource Reservation Protocol (RSVP) signaling.

You must include the **rsvp** statement in the configuration to enable RSVP on the router.

The primary purpose of RSVP in Junos OS for EX Series switches is to support dynamic signaling within label switched paths (LSPs).

Default

RSVP is disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Minimum RSVP Configuration | 780](#)

[Example: Configuring MPLS on EX8200 and EX4500 Switches | 41](#)

[Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect | 73](#)

[Configuring MPLS on EX8200 and EX4500 Provider Switches | 77](#)

rsvp-te (Routing Options)

Syntax

```
rsvp-te entry-name {
  destination-networks network-prefix;
  label-switched-path-template (Multicast) {
    default-template;
    template-name;
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options dynamic-tunnels tunnel-name],
[edit routing-options dynamic-tunnels tunnel-name]
```

Release Information

Statement introduced in Junos OS Release 10.1.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Enable RSVP to automatically establish LSPs for any new PE router added to a full mesh of LSPs. To enable this feature, you must configure the **rsvp-te** statement on all of the PE routers in the full mesh.

Options

entry-name—Specify the entry for the RSVP tunnel.

The other options are explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring RSVP Automatic Mesh | 802](#)

Configuring Dynamic Point-to-Multipoint Flooding LSPs

setup-protection

Syntax

```
setup-protection;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Description

The facility-backup fast reroute mechanism can provide setup protection for LSPs which are in the process of being signaled. Both point-to-point LSPs and point-to-multipoint LSPs are supported. You should configure the **setup-protection** statement on each of the routers along the LSP path on which you want to enable LSP setup protection. You should also configure IGP traffic engineering on all of the routers on the LSP path.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring RSVP Setup Protection](#) | 800

soft-preemption (Protocols RSVP)

Syntax

```
soft-preemption {  
    cleanup-timer seconds;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp preemption],  
[edit protocols rsvp preemption]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable soft preemption to attempt to establish a new path for a preempted LSP before tearing it down.

Options

cleanup-timer—A value of 0 disables soft preemption.

Range: 0 through 10800 seconds

Default: 30 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring MPLS Soft Preemption](#) | 500

static-label-switched-path

Syntax

```
static-label-switched-path lsp-name {
  bypass bypass-name {
    bandwidth bps;
    description string;
    next-hop (address | interface-name | address/interface-name);
    push out-label;
    to address;
  }
  ingress {
    bandwidth bps;
    class-of-service cos-value;
    description string;
    install {
      destination-prefix <active>;
    }
    link-protection bypass-name name;
    metric metric;
    next-hop (address | interface-name | address/interface-name);
    node-protection bypass-name name next-next-label label;
    no-install-to-address;
    policing {
      filter filter-name;
      no-auto-policing;
    }
    preference preference;
    push out-label;
    to address;
  }
  transit incoming-label {
    bandwidth bps;
    description string;
    link-protection bypass-name name;
    next-hop (address | interface-name | address/interface-name);
    node-protection bypass-name name next-next-label label;
    pop;
    swap out-label;
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit protocols mpls]
```

Release Information

Statement introduced in Junos OS Release 10.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Statement introduced in 19.4R1 for cRPD instances.

Description

Configure a static LSP.

Options

lsp-name—Name of the path.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Static LSPs](#) | 573

subscription

Syntax

```
subscription percentage {
  ct0 percentage;
  ct1 percentage;
  ct2 percentage;
  ct3 percentage;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name],
[edit logical-systems logical-system-name protocols rsvp interface interface-name link-protection],
[edit protocols rsvp interface interface-name],
[edit protocols rsvp interface interface-name link-protection]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Configure the amount of bandwidth subscribed to a class type (when you have enabled Differentiated Services) or bypass LSP (when you have enabled link protection). **subscription** is the percentage of the link bandwidth that can be used for the RSVP reservation process.

Options

ctnumber percentage—Percentage of the class-type bandwidth allowed for reservations. If you specify a value greater than 100, you are oversubscribing the class type. You can specify bandwidth subscriptions for class types 0 through 3. This option is not available for bypass LSPs.

Range: 0 through 65,000

Default: 100 percent

percentage—Percentage of the class-type or bypass LSP bandwidth allowed for reservations. If you specify a value greater than 100, you are oversubscribing the class type or bypass LSP.

Range: 0 through 65,000

Default: 100 percent

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Bandwidth Subscription Percentage for LSPs | 567](#)

[Configuring the Amount of Bandwidth Subscribed for Bypass LSPs | 383](#)

traceoptions (Protocols RSVP)

Syntax

```
traceoptions {
  enhanced-frr ;
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag <flag-modifier> <disable>;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],
[edit protocols rsvp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable RSVP-level trace options.

Default

The default RSVP-level trace options are those inherited from the routing protocols **traceoptions** statement included at the **[edit routing-options]** hierarchy level.

Options

disable—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as **all**.

enhanced-frr—(Optional) Enable this option to trace internal events and state changes related to the FRR facility protection enhancements associated with the increased RSVP scaling introduced in Junos OS Release 16.1.

filename—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory **/var/log**. We recommend that you place RSVP tracing output in the file **rsvp-log**.

files number—(Optional) Maximum number of trace files. When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**, then **trace-file.1**, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Range: 2 through 1000

Default: 2 files

If you specify a maximum number of files, you must also include the **size** statement to specify the maximum file size.

flag—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements.

- **all**—All tracing operations
- **error**—All detected error conditions
- **event**—RSVP-related events
- **io-event [detail] [disable]** —Enable tracing of events that occur within the RSVP I/O task; can only be configured for the master routing instance. The trace output is generally independent of routing instance.
- **io-packets [detail] [disable] [receive] [send]** —Enable tracing of messages as they are received from the network or as they are sent out. This flag can be configured independently for each routing instance. Both bundled and individual messages are identified. Use *detail* to show all objects contained in the message. Use *send* and *receive* to limit tracing to outgoing or incoming packets.
- **lmp**—RSVP-LMP interactions
- **packets**—All RSVP packets
- **path**—All path messages
- **pathtear**—PathTear messages
- **resv**—Resv messages
- **resvtear**—ResvTear messages
- **route**—Routing information
- **state**—Session state transitions, including when RSVP-signaled LSPs come up and go down.

flag-modifier—(Optional) Modifier for the tracing flag. You can specify one or more of these modifiers:

- **detail**—Provide detailed trace information
- **receive**—Packets being received
- **send**—Packets being transmitted

no-world-readable—(Optional) Enable only certain users to read the log file.

size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches this size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Syntax: **xk** to specify KB, **xm** to specify MB, or **xg** to specify GB

Range: 10 KB through the maximum file size supported on your system

Default: 1 MB

If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

world-readable—(Optional) Enable any user to read the log file.

Required Privilege Level

routing and trace—To view this statement in the configuration.

routing-control and trace-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Tracing RSVP Protocol Traffic](#) | 811

transit

Syntax

```
transit incoming-label {
  bandwidth bps;
  description string;
  link-protection bypass-name name;
  member-interface member-interface;
  next-hop (address | interface-name | address/interface-name);
  node-protection bypass-name name next-next-label label;
  pop;
  stitch {
    bandwidth bps;
    description string;
    link-protection bypass-name name;
    next-hop (address | interface-name | address/interface-name);
    node-protection bypass-name name next-next-label label;
  }
  swap out-label;
}
```

Hierarchy Level

```
[edit logical-systems name protocols mpls static-label-switched-path name],
[edit logical-systems name routing-instances name protocols mpls static-label-switched-path name],
[edit logical-systems name tenants name routing-instances name protocols mpls static-label-switched-path name],
[edit protocols mpls static-label-switched-path name],
[edit routing-instances name protocols mpls static-label-switched-path name],
[edit tenants name routing-instances name protocols mpls static-label-switched-path name]
```

Release Information

Statement introduced in Junos OS Release 10.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

switch option introduced in Junos OS Release 14.1X53-D25.

member-interface option introduced in Junos OS Release 17.4R1 for the MX Series and PTX 5000.

Description

Configure a transit static LSP.

NOTE: When configuring transit static LSPs with label operation as **stitch**, the configured next-hop can only be a valid IP address and not an interface name.

Options

incoming-label—Incoming label value.

Range: 1000000 through 1048575

member-interface—Aggregated Ethernet (AE) member interface name.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Static LSPs | 573](#)

[Configuring Static Adjacency Segment Identifier for Aggregate Ethernet Member Links Using Single-Hop Static LSP | 759](#)

tunnel-services (RSVP)

Syntax

```
tunnel-services {  
    devices device-names;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp],  
[edit protocols rsvp]
```

Release Information

Statement introduced in Junos OS Release 8.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable ultimate-hop popping on point-to-multipoint LSPs. The Junos OS selects one of the available virtual tunnel (VT) interfaces to de-encapsulate the egress traffic. By default, the selection process is performed automatically.

Default

Ultimate-hop popping is disabled.

Options

devices *device-names*—Specify which VT interfaces are used to handle the RSVP traffic.

Range: 0 to 8 devices

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs](#) | 810

ultimate-hop-popping

Syntax

```
ultimate-hop-popping;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols mpls],  
[edit logical-systems logical-system-name protocols mpls label-switched-path label-switched-path-name],  
[edit protocols mpls],  
[edit protocols mpls label-switched-path label-switched-path-name]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Statement introduced in Junos OS Release 13.2 for PTX Series Packet Transport Routers.

Description

Enable ultimate-hop popping on LSPs. Configure this statement on the device at the LSP ingress. In ultimate-hop popping, the MPLS label is popped from the IP packet at the PE router. The IP address is checked in a second address lookup (also at the PE router), and then the packet is forwarded to its destination.

Be aware of the following platform requirements and restrictions:

- UHP LSPs using VT interfaces—Supported on all M Series, MX Series, T Series, and TX Matrix routers.
- UHP LSPs using LSI interfaces—Supported on MX 3D Series routers only.
- UHP LSP requirements for the egress PE device—For M Series and T Series routers, a VT interface is needed.
- UHP LSPs and Layer 3 VPNs—UHP LSPs are supported for Layer 3 VPNs configured on MX 3D Series routers only.
- UHP LSPs and VPLS—UHP LSPs are supported for VPLS configured on MX 3D Series routers only. You must configure the *no-tunnel-services* statement at the **[edit routing-instances *routing-instance-name* protocols vpls]** hierarchy level.

Default

Ultimate-hop popping is disabled by default on LSPs. Penultimate-hop popping is the default behavior. In penultimate-hop popping, the final MPLS label is popped from the IP packet at the last provider router in the network before being forwarded to the PE router. The PE router receives the packet and checks the IP address, and then the packet is forwarded to its destination.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Ultimate-Hop Popping for LSPs | 559](#)

[explicit-null | 1733](#)

update-threshold

Syntax

```
update-threshold {  
    threshold-percent;  
    threshold-value threshold-value;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols rsvp interface interface-name],  
[edit protocols rsvp interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

threshold-value option introduced in Junos OS Release 19.4R1 on all platforms.

Description

Adjust the threshold at which a change in bandwidth triggers an interior gateway protocol (IGP) update.

Options

threshold-percent—Specify the percentage change in reserved bandwidth to trigger IGP update.

Default: 10 percent

Range: 0.001 through 20 percent

threshold-value *threshold-value*—Specify the change in reserved bandwidth to trigger IGP update. (is capped at 20% of link bandwidth).

If the threshold-value is configured to greater than 20% of bandwidth on that link, the threshold-value is capped at 20% of bandwidth.

For instance, if bandwidth on an interface is 1Gbps, and the **threshold-value** is configured greater than 200Mbps, the **threshold-value** is capped at 200Mbps. The *threshold-percent* is displayed as 20.000% and the **threshold-value** as 200Mbps.

NOTE: The two options, *threshold-percent* and **threshold-value**, are mutually exclusive. You can configure only one option at a given point in time to generate an IGP update for lower bandwidth reservations. As a result, when one option is configured, the other option is calculated and displayed on the CLI.

For instance, on a link of 1Gbps, if the *threshold-percent* is configured to 5%, the **threshold-value** is calculated and displayed as 50Mbps. Similarly, if the **threshold-value** is configured to 50m, then the *threshold-percent* is calculated and displayed as 5%.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the RSVP Update Threshold on an Interface](#) | 786

LDP Configuration Statements

IN THIS CHAPTER

- [allow-subnet-mismatch](#) | 2030
- [authentication-algorithm](#) | 2031
- [authentication-key \(Protocols LDP\)](#) | 2034
- [authentication-key-chain \(Protocols LDP\)](#) | 2035
- [auto-targeted-session](#) | 2037
- [bfd-liveness-detection \(Protocols LDP\)](#) | 2039
- [deaggregate](#) | 2041
- [disable \(Protocols LDP\)](#) | 2042
- [dod-request-policy](#) | 2043
- [downstream-on-demand](#) | 2044
- [ecmp](#) | 2045
- [egress-policy](#) | 2046
- [explicit-null \(Protocols LDP\)](#) | 2047
- [export \(Protocols LDP\)](#) | 2048
- [failure-action \(Protocols LDP\)](#) | 2049
- [fec](#) | 2050
- [graceful-restart \(Protocols LDP\)](#) | 2052
- [hello-interval \(Protocols LDP\)](#) | 2053
- [helper-disable \(LDP\)](#) | 2054
- [holddown-interval](#) | 2055
- [hold-time \(Protocols LDP\)](#) | 2056
- [ignore-lsp-metrics](#) | 2057
- [igp-synchronization](#) | 2058
- [import \(Protocols LDP\)](#) | 2059
- [ingress-policy](#) | 2060
- [interface \(Protocols LDP\)](#) | 2061
- [keepalive-interval](#) | 2062
- [keepalive-timeout](#) | 2063

- l2-smart-policy | 2064
- label-withdrawal-delay | 2065
- ldp | 2066
- ldp-synchronization | 2068
- log-updown (Protocols LDP) | 2069
- make-before-break (LDP) | 2070
- mapping-server-entry | 2071
- maximum-neighbor-recovery-time | 2072
- mldp-inband-signalling (Protocols Multipoint LDP) | 2073
- mofrr-asm-starg (Multicast-Only Fast Reroute in a PIM Domain) | 2074
- mofrr-disjoint-upstream-only (Multicast-Only Fast Reroute in a PIM Domain) | 2076
- mofrr-no-backup-join (Multicast-Only Fast Reroute in a PIM Domain) | 2077
- mofrr-primary-path-selection-by-routing (Multicast-Only Fast Reroute) | 2078
- neighbor (Protocols LDP) | 2080
- no-forwarding | 2081
- oam (Protocols LDP) | 2082
- p2mp (Protocols LDP) | 2084
- p2mp-ldp-next-hop | 2086
- periodic-traceroute | 2087
- policing (Protocols LDP) | 2089
- policy (Multicast-Only Fast Reroute) | 2090
- policy (Protocols Multipoint LDP) | 2093
- preference (Protocols LDP) | 2094
- prefix-segment (Routing Options) | 2095
- prefix-segment-range | 2096
- reconnect-time | 2098
- recovery-time | 2099
- session (Protocols LDP) | 2100
- session-group | 2102
- session-protection | 2104
- source-packet-routing | 2105
- stream-protection (Multicast-Only Fast Reroute) | 2106
- strict-targeted-hellos | 2107
- targeted-hello | 2108

- [traceoptions \(Protocols LDP\) | 2109](#)
- [track-igp-metric | 2112](#)
- [track-igp-metric \(LSP\) | 2113](#)
- [traffic-statistics \(Protocols LDP\) | 2114](#)
- [transport-address | 2116](#)
- [version \(BFD\) | 2118](#)

allow-subnet-mismatch

Syntax

```
allow-subnet-mismatch;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp interface interface-name],  
[edit protocols ldp interface interface-name]
```

Release Information

Statement introduced in Junos OS Release 9.3.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Ignore the LDP subnet check. For Junos OS Release 8.4 and later releases, an LDP source address subnet check was added for the neighbor establishment procedure. The source address in the LDP link hello packet is matched against the interface address.

Default

The source address in the LDP link hello packet is matched against the interface address.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Ignoring the LDP Subnet Check | 1045](#)

authentication-algorithm

Syntax

```
authentication-algorithm algorithm;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp],
[edit logical-systems logical-system-name protocols bgp group group-name],
[edit logical-systems logical-system-name protocols bgp group group-name neighbor address],
[edit logical-systems logical-system-name protocols ldp session session-address],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name
  neighbor address],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp session session-address],
[edit logical-systems logical-system-name routing-options bmp],
[edit logical-systems logical-system-name routing-options bmp station station-name],
[edit protocols bgp],
[edit protocols bgp group group-name],
[edit protocols bgp group group-name neighbor address],
[edit protocols ldp session session-address],
[edit routing-instances routing-instance-name protocols bgp],
[edit routing-instances routing-instance-name protocols bgp group group-name],
[edit routing-instances routing-instance-name protocols bgp group group-name neighbor address],
[edit routing-instances routing-instance-name protocols ldp session session-address],
[edit routing-options bmp],
[edit routing-options bmp station station-name]
```

Release Information

Statement introduced in Junos OS Release 7.6.

Statement introduced for BGP in Junos OS Release 8.0.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Statement introduced for BMP in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced for BMP in Junos OS Release 13.3.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

Configure an authentication algorithm type.

NOTE: Keep the following points in mind when you configure the authentication algorithm in an IPsec proposal:

- When both ends of an IPsec VPN tunnel contain the same IKE proposal but different IPsec proposals, an error occurs and the tunnel is not established in this scenario. For example, if one end of the tunnel contains router 1 configured with the authentication algorithm as hmac-sha-256-128 and the other end of the tunnel contains router 2 configured with the authentication algorithm as hmac-md5-96, the VPN tunnel is not established.
- When both ends of an IPsec VPN tunnel contain the same IKE proposal but different IPsec proposals, and when one end of the tunnel contains two IPsec proposals to check whether a less secure algorithm is selected or not, an error occurs and the tunnel is not established. For example, if you configure two authentication algorithms for an IPsec proposal as hmac-sha-256-128 and hmac-md5-96 on one end of the tunnel, router 1, and if you configure the algorithm for an IPsec proposal as hmac-md5-96 on the other end of the tunnel, router 2, the tunnel is not established and the number of proposals mismatch.
- When you configure two IPsec proposals at both ends of a tunnel, such as the **authentication-algorithm hmac-sha-256-128** and **authentication-algorithm hmac-md5-96** statements at the `[edit services ipsec-vpn ipsec proposal proposal-name]` hierarchy level on one of the tunnel, router 1 (with the algorithms in two successive statements to specify the order), and the **authentication-algorithm hmac-md5-96** and **authentication-algorithm hmac-sha-256-128** statements at the `[edit services ipsec-vpn ipsec proposal proposal-name]` hierarchy level on one of the tunnel, router 2 (with the algorithms in two successive statements to specify the order, which is the reverse order of router 1), the tunnel is established in this combination as expected because the number of proposals is the same on both ends and they contain the same set of algorithms. However, the authentication algorithm selected is hmac-md5-96 and not the stronger algorithm of hmac-sha-256-128. This method of selection of the algorithm occurs because the first matching proposal is selected. Also, for a default proposal, regardless of whether the router supports the Advanced Encryption Standard (AES) encryption algorithm, the 3des-cbc algorithm is chosen and not the aes-cfb algorithm, which is because of the first algorithm in the default proposal being selected. In the sample scenario described here, on router 2, if you reverse the order of the algorithm configuration in the proposal so that it is the same order as the one specified on router 1, hmac-sha-256-128 is selected as the authentication method.
- You must be aware of the order of proposals in an IPsec policy at the time of configuration if you want the matching of proposals to happen in a certain order of preference, such as the strongest algorithm to be considered first when a match is made when both policies from the two peers have a proposal.

Options

algorithm—Specify one of the following types of authentication algorithms:

- **aes-128-cmac-96**—Cipher-based message authentication code (AES128, 96 bits).
- **hmac-sha-1-96**—Hash-based message authentication code (SHA1, 96 bits).
- **md5**—Message digest 5.

Default: **hmac-sha-1-96**

NOTE: The default is not displayed in the output of the **show bgp bmp** command unless a key or key-chain is also configured.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring Router Authentication for BGP

Configuring BGP Monitoring Protocol Version 3

authentication-key (Protocols LDP)

Syntax

```
authentication-key md5-authentication-key;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp session address],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp session address],  
[edit protocols ldp session address],  
[edit routing-instances routing-instance-name protocols ldp session address]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Configure the MD5 authentication signature. The maximum length of the authentication signature is 69 characters.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the TCP MD5 Signature for LDP Sessions](#) | 1041

authentication-key-chain (Protocols LDP)

Syntax

```
authentication-key-chain key-chain;
```

Hierarchy Level

```
[edit logical-systems name protocols ldp session address],  
[edit logical-systems name routing-instances instance-name protocols ldp session address],  
[edit protocols ldp session address],  
[edit routing-instances instance-name protocols ldp session address]
```

Release Information

Statement introduced in Junos OS Release 8.0.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Apply and enable an authentication keychain to the routing device. Note that the referenced key chain must be defined. When configuring the authentication key update mechanism for LDP, you cannot commit the **0.0.0.0/allow** statement with authentication keys or key chains. The CLI issues a warning and fails to commit such configurations.

NOTE: You must also configure an authentication algorithm using the **authentication-algorithm** statement.

Options

key-chain—Authentication keychain name. It can be up to 126 characters. Characters can include any ASCII strings. If you include spaces, enclose all characters in quotation marks (" ").

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring the Authentication Key Update Mechanism for BGP and LDP Routing Protocols

Configuring Miscellaneous LDP Properties | 1038

authentication-algorithm | 2031

auto-targeted-session

Syntax

```
auto-targeted-session {  
    maximum-sessions seconds;  
    teardown-delay seconds;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Description

Configure session parameters for LDP sessions established with the remote LFA node that are automatically targeted using the loopback addresses. Configure parameters of automatically targeted sessions for remote LFA only.

Options

maximum-sessions *seconds* —Specify the maximum number of auto-targeted LDP sessions allowed. Include this statement to optimize the use of router memory.

Default: 100

Range: 1 through 1000

teardown-delay *seconds* —Specify the minimum time period for which the auto-targeted session must be alive before tearing down the auto-targeted LDP sessions to the remote LFA node. Include this statement to prevent rapid route-resolution in case of temporary change in IGP topology.

Default: 90 seconds

Range: 1 through 300 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

no-eligible-remote-backup

| *remote-backup-calculation*

bfd-liveness-detection (Protocols LDP)

Syntax

```

bfd-liveness-detection {
  detection-time threshold milliseconds;
  ecmp;
  failure-action {
    remove-nexthop;
    remove-route;
  }
  holddown-interval seconds;
  minimum-interval milliseconds;
  minimum-receive-interval milliseconds;
  minimum-transmit-interval milliseconds;
  multiplier detection-time-multiplier;
  no-adaptation;
  transmit-interval {
    minimum-interval milliseconds;
    threshold milliseconds;
  }
  version (0 | 1 | automatic);
}

```

Hierarchy Level

```

[edit logical-systems logical-system-name protocols ldp oam],
[edit logical-systems logical-system-name protocols ldp oam fec address],
[edit protocols ldp oam],
[edit protocols ldp oam fec address]

```

Release Information

Statement introduced in Junos OS Release 7.6.

Support for the **bfd-liveness-detection** statement at the **[edit protocols ldp oam fec address]** hierarchy level and the **ecmp** option added in Junos OS Release 9.0.

Support for the **failure-action** statement with the **remove-nexthop** and **remove-route** options and the **holddown-interval** statement added in Junos OS Release 9.4.

Description

Enable Bidirectional Forwarding Detection (BFD) for all MPLS LSPs or for just a specific LSP.

Options

minimum-interval—Minimum transmit and receive interval.

Range: 50 through 255,000 milliseconds

Default: 50

minimum-receive-interval—Minimum receive interval.

Range: 50 through 255,000 milliseconds

Default: 50

minimum-transmit-interval—Minimum transmit interval.

Range: 50 through 255,000 milliseconds

Default: 50

multiplier—Detection time multiplier.

Range: 50 through 255

Default: 3

The other options are explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring BFD for LDP LSPs](#) | 903

deaggregate

Syntax

```
deaggregate | no-deaggregate;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Control forwarding equivalence class (FEC) deaggregation on the router. The use of the **deaggregate** statement in LDP is a standard practice that we recommend for LDP deployments.

Default

Deaggregation is disabled on the router.

Options

deaggregate—Deaggregate FECs.

no-deaggregate—Aggregate FECs.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring FEC Deaggregation](#) | 900

disable (Protocols LDP)

Syntax

```
disable;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp graceful-restart],
[edit logical-systems logical-system-name protocols ldp interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp interface
  interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options graceful-restart],
[edit protocols ldp graceful-restart],
[edit protocols ldp interface interface-name],
[edit routing-instances routing-instance-name protocols ldp interface interface-name],
[edit routing-instances routing-instance-name routing-options graceful-restart]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Explicitly disable LDP on an interface, or explicitly disable LDP graceful restart.

Default

LDP is enabled on interfaces configured with the LDP **interface** statement. LDP graceful restart is automatically enabled when graceful restart is enabled under the **[edit routing-options]** hierarchy level.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Enabling and Disabling LDP | 863](#)

[Configuring LDP Graceful Restart | 888](#)

dod-request-policy

Syntax

```
dod-request-policy dod-request-policy-name;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the name of the LDP downstream on demand request policy. The **dod-request-policy** statement performs exact match, as a result, LDP sends label request messages only for those FECs matching in the downstream on demand request policy.

Options

dod-request-policy-name—Specify the name of the downstream on demand request policy.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring LDP Downstream on Demand](#) | 971

downstream-on-demand

Syntax

```
downstream-on-demand;
```

Hierarchy Level

```
[edit logical systems logical-system-name protocols ldp session session-address],  
[edit protocols ldp session session-address]
```

Release Information

Statement introduced in Junos OS Release 12.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable LDP downstream on demand on the LDP session. LDP is widely deployed in downstream unsolicited advertisement mode. As service providers integrate the access and aggregation networks into a single MPLS domain, LDP downstream on demand is needed to distribute the bindings between access and aggregation networks to minimize the workload for the access node (AN) control plane and to avoid the storage of tens of thousands of label bindings from upstream aggregation nodes.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring LDP Downstream on Demand](#) | 971

ecmp

Syntax

```
ecmp;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp oam bfd-liveness-detection],  
[edit logical-systems logical-system-name protocols ldp oam fec address bfd-liveness-detection],  
[edit protocols ldp oam bfd-liveness-detection],  
[edit protocols ldp oam fec address bfd-liveness-detection]
```

Release Information

Statement introduced in Junos OS Release 8.5.

Statement introduced in Junos OS Release 15.1X53-D30 for QFX Series switches.

Description

Allows LDP to establish BFD sessions for all ECMP paths configured for the specified FEC. If you configure the **ecmp** statement, you must also configure the **periodic-traceroute** statement for the specified FEC. If you do not do so, the commit operation fails. You can configure the **periodic-traceroute** statement at the global hierarchy level ([**edit protocols ldp oam**]) while only configuring the **ecmp** statement for a specific FEC ([**edit protocols ldp oam fec *address* bfd-liveness-detection**]).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring ECMP-Aware BFD for LDP LSPs](#) | 906

egress-policy

Syntax

```
egress-policy [ policy-names ];
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Control the prefixes advertised into LDP.

Default

Only the loopback address is advertised.

Options

policy-names—Name of one or more routing policies.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Prefixes Advertised into LDP from the Routing Table](#) | 899

explicit-null (Protocols LDP)

Syntax

```
explicit-null;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Advertise label 0 to the egress router of a label-switched path (LSP).

Default

If you do not include the **explicit-null** statement in the MPLS configuration, label 3 (implicit null) is advertised.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring MPLS and LDP to Pop the Label on the Ultimate-Hop Router](#) | 1039

export (Protocols LDP)

Syntax

```
export [ policy-names ];
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Apply policy filters to outbound LDP label bindings. Filters are applied to all label bindings from all neighbors.

Options

policy-names—Name of one or more routing policies.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Filtering Outbound LDP Label Bindings](#) | 894

failure-action (Protocols LDP)

Syntax

```
failure-action {
  remove-nexthop;
  remove-route;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp oam bfd-livenesss-detection],
[edit logical-systems logical-system-name protocols ldp oam fec address bfd-livenesss-detection],
[edit protocols ldp oam bfd-livenesss-detection],
[edit protocols ldp oam fec address bfd-livenesss-detection]
```

Release Information

Statement introduced in Junos OS Release 9.4.

Description

Configure route and next-hop properties in the event of a BFD session failure event on an LDP LSP. The failure event could be an existing BFD session that has gone down or could be a BFD session that never came up. LDP adds back the route or next hop when the relevant BFD session comes back up.

Options

remove-nexthop—Remove a route corresponding to a next hop of the LSP's route at the ingress node when a BFD session failure event is detected.

remove-route—Remove the route corresponding to an LSP from the appropriate routing tables when a BFD session failure event is detected. If the LSP is configured with ECMP and a BFD session corresponding to any path goes down, the route is removed.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring a Failure Action for the BFD Session on an LDP LSP](#) | 907

fec

Syntax

```
fec fec-address {
  bfd-liveness-detection {
    detection-time threshold milliseconds;
    ecmp;
    failure-action {
      remove-nexthop;
      remove-route;
    }
    holddown-interval milliseconds;
    ingress-policy ingress-policy-name;
    minimum-interval milliseconds;
    minimum-receive-interval milliseconds;
    minimum-transmit-interval milliseconds;
    multiplier detection-time-multiplier;
    no-adaptation;
    transmit-interval {
      minimum-interval milliseconds;
      threshold milliseconds;
    }
    version (0 | 1 | automatic);
  }
  no-bfd-liveness-detection;
  periodic-traceroute {
    disable;
    exp exp-value;
    fanout fanout-value;
    frequency minutes;
    paths number-of-paths;
    retries retry-attempts;
    source address;
    ttl ttl-value;
    wait seconds;
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-systems-name protocols ldp oam],
[edit protocols ldp oam]
```

Release Information

Statement introduced in Junos OS Release 8.5.

Statement introduced in Junos OS Release 12.2 for EX Series switches.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Allows you to configure BFD for a specific LDP forwarding equivalence class (FEC).

Options

fec-address—Specify the FEC address.

The other statements are explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring BFD for LDP LSPs](#) | 903

graceful-restart (Protocols LDP)

Syntax

```
graceful-restart {  
  disable;  
  helper-disable;  
  maximum-neighbor-recovery-time value;  
  reconnect-time seconds;  
  recovery-time value;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Configure LDP graceful restart on the LDP master protocol instance or for a specific routing instance.

NOTE: When you alter the graceful restart configuration at either the **[edit routing-options graceful-restart]** or **[edit protocols ldp graceful-restart]** hierarchy levels, any running LDP session is automatically restarted to apply the graceful restart configuration. This behavior mirrors the behavior of BGP when you alter its graceful restart configuration.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring LDP Graceful Restart](#) | 888

hello-interval (Protocols LDP)

Syntax

```
hello-interval seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp interface interface-name],
[edit logical-systems logical-system-name protocols ldp targeted-hello],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp interface
  interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp targeted-hello],
[edit protocols ldp interface interface-name],
[edit protocols ldp targeted-hello],
[edit routing-instances routing-instance-name protocols ldp interface interface-name],
[edit routing-instances routing-instance-name protocols ldp targeted-hello]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Support for LDP targeted hellos added in Junos OS Release 9.5.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Control the LDP timer that regulates how often hello messages are sent. You can control the rate both link hello messages and targeted hello messages are sent depending on the hierarchy level at which you configure the **hello-interval** statement.

Options

seconds—Length of time between transmission of hello packets.

Range: 1 through 65,535 seconds

Default: 5 seconds for link hello messages, 15 seconds for targeted hello messages

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the LDP Timer for Hello Messages](#) | 864

helper-disable (LDP)

Syntax

```
helper-disable;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp graceful-restart],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp graceful-restart],  
[edit protocols ldp graceful-restart],  
[edit routing-instances routing-instance-name protocols ldp graceful-restart]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Disable helper mode for LDP graceful restart. When helper mode is disabled, a router cannot help a neighboring router that is attempting to restart LDP.

Default

Helper mode is enabled by default on all routing protocols (including LDP) that support graceful restart.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring LDP Graceful Restart](#) | 888

holddown-interval

Syntax

```
holddown-interval holddown-interval;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp oam bfd-livenesss-detection],  
[edit logical-systems logical-system-name protocols ldp oam fec address bfd-livenesss-detection],  
[edit protocols ldp oam bfd-livenesss-detection],  
[edit protocols ldp oam fec address bfd-livenesss-detection]
```

Release Information

Statement introduced in Junos OS Release 9.4.

Description

Specify how long the BFD session should be up before adding the route or next hop. Specifying a time of 0 seconds causes the route or next hop to be added as soon as the BFD session comes back up.

Options

holddown-interval—Number of seconds the BFD session should remain up before adding the route or next hop.

Default: 0 seconds

Range: 0 through 65,535 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Holddown Interval for the BFD Session](#) | 908

hold-time (Protocols LDP)

Syntax

```
hold-time seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp interface interface-name],
[edit logical-systems logical-system-name protocols ldp targeted-hello],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp interface
  interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp targeted-hello],
[edit protocols ldp interface interface-name],
[edit protocols ldp targeted-hello],
[edit routing-instances routing-instance-name protocols ldp interface interface-name],
[edit routing-instances routing-instance-name protocols ldp targeted-hello]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Support for LDP targeted hellos added in Junos OS Release 9.5.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify how long an LDP node should wait for a hello message before declaring a neighbor to be down. This value is sent as part of a hello message so that each LDP node tells its neighbors how long to wait. You can specify times for both link hello messages and targeted hello messages depending on the hierarchy level at which you configure the **hold-time** statement.

Options

seconds—Hold-time value.

Range: 1 through 65,535 seconds

Default: 15 seconds for link hello messages, 45 seconds for targeted hello messages

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Delay Before LDP Neighbors Are Considered Down](#) | 865

ignore-lsp-metrics

Syntax

```
ignore-lsp-metrics;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ospf traffic-engineering shortcuts],  
[edit protocols ospf traffic-engineering shortcuts]
```

Release Information

Statement introduced in Junos OS Release 7.5.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Cause OSPF to ignore the RSVP LSP metric.

Some other vendors use an OSPF metric of 1 for the loopback address. Juniper Networks routers use an OSPF metric of 0 for the loopback address. This can cause interoperability problems when you configure LDP tunneling over RSVP LSPs in heterogeneous networks.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Enabling LDP over RSVP-Established LSPs in Heterogeneous Networks](#) | 1040

igp-synchronization

Syntax

```
igp-synchronization holddown-interval seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 9.5.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Configure the time the LDP waits before informing the IGP that the LDP neighbor and session for an interface are operational. For large networks with numerous FECs, you might need to configure a longer value to allow enough time for the LDP label databases to be exchanged.

Options

holddown-interval *seconds*—Time the LDP waits before informing the IGP that the LDP neighbor and session for an interface are operational.

Default: 10 seconds

Range: 10 through 60 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring LDP Synchronization with the IGP on the Router](#) | 1044

import (Protocols LDP)

Syntax

```
import [ policy-names ];
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Apply policy filters to received LDP label bindings. Filters are applied to all label bindings from all neighbors.

Options

policy-names—Name of one or more routing policies.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Filtering Inbound LDP Label Bindings | 891](#)

ingress-policy

Syntax

```
ingress-policy [ ingress-policy-names ];
```

Hierarchy Level

```
[edit logical-system logical-system-name protocols ldp entropy-label],  
[edit logical-system logical-system-name protocols ldp oam],  
[edit protocols ldp entropy-label],  
[edit protocols ldp oam]
```

Release Information

Statement introduced in Junos OS Release 9.4.

Statement introduced at the **[edit protocols ldp entropy-label]** hierarchy level in Junos OS Release 14.1.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 Series switches.

Description

Configure an LDP ingress policy for either the entropy label or Operation, Administration, and Management (OAM).

For OAM, configure the ingress policy to choose which forwarding equivalence classes (FECs) need to have OAM enabled. If the FEC passes through the policy or if the FEC is explicitly configured, OAM is enabled for a FEC. For FECs chosen using a policy, the BFD parameters configured under **[edit protocols ldp oam bfd-liveness-detection]** are applied.

Options

ingress-policy-names—Specify the names of the ingress policies.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring OAM Ingress Policies for LDP | 1141](#)

[Configuring the Entropy Label for LSPs | 533](#)

interface (Protocols LDP)

Syntax

```
interface interface-name {
  disable;
  hello-interval seconds;
  hold-time seconds;
  transport-address (interface | loopback);
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],
[edit protocols ldp],
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable LDP on one or more router interfaces.

Default

LDP is disabled on all interfaces.

Options

interface-name—Name of an interface. To configure all interfaces, specify **all**.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Enabling and Disabling LDP](#) | 863

keepalive-interval

Syntax

```
keepalive-interval seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Set the keepalive interval value.

Options

seconds—Keepalive value.

Range: 1 through 65,535

Default: 10 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Interval for LDP Keepalive Messages](#) | 866

keepalive-timeout

Syntax

```
keepalive-timeout seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Set the keepalive timeout value. The keepalive timeout defines the amount of time that the neighbor LDP node waits before determining that the session has failed.

Options

seconds—Keepalive timeout value.

Range: 1 through 65,535

Default: 30 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the LDP Keepalive Timeout](#) | 867

I2-smart-policy

Syntax

```
I2-smart-policy;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 8.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Prevent LDP from exporting IPv4 FECs over sessions with Layer 2 neighbors only. IPv4 FECs received over such sessions are filtered out.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring LDP IPv4 FEC Filtering](#) | 902

label-withdrawal-delay

Syntax

```
label-withdrawal-delay seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 9.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Delay the withdrawal of labels to reduce router workload during IGP convergence.

Options

seconds—Configure the number of seconds to wait before withdrawing labels for the LDP LSPs.

Default: 60 seconds

Range: 0 through 300 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Label Withdrawal Timer](#) | 1044

Ldp

Syntax

```

ldp {
  auto-targeted-session;
  (deaggregate | no-deaggregate);
  dual-transport ;
  egress-policy [ policy-names ];
  entropy-label;
  explicit-null;
  export [ policy-names ];
  family (Protocols LDP);
  graceful-restart;
  igp-synchronization;
  import [ policy-names];
  interface (interface-name | all);
  keepalive-interval seconds;
  keepalive-timeout seconds;
  log-updown;
  longest-match;
  make-before-break;
  neighbor;
  no-forwarding;
  oam;
  p2mp;
  policing;
  preference preference;
  session;
  session-group;
  session-protection;
  strict-targeted-hellos;
  traceoptions;
  track-igp-metric;
  traffic-statistics;
  transport-address (address | interface | router-id);
  transport-preference [ipv4 | ipv6];
}

```

Hierarchy Level

[edit logical-systems *logical-system-name* protocols],
 [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols],
 [edit protocols],

```
[edit routing-instances routing-instance-name protocols]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

dual-transport statement introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series.

family statement introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series.

transport-preference option introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series.

Description

Enable LDP routing on the router or switch.

You must include the **ldp** statement in the configuration to enable LDP on the router or switch.

Default

LDP is disabled on the router.

Options

transport-preference ipv4 | ipv6— Select the preferred transport for TCP connection when both IPv4 and IPv6 are enabled. If **transport-preference ipv4** is configured, LDP will attempt to establish the TCP connection using IPv4. If **transport-preference ipv6** is configured, LDP will attempt to establish the TCP connection using IPv6.

Default: ipv6

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Minimum LDP Configuration | 863](#)

[Enabling and Disabling LDP | 863](#)

Ldp-synchronization

Syntax

```
ldp-synchronization {  
    disable;  
    hold-time seconds;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ospf interface interface-name],  
[edit logical-systems logical-system-name routing-instances routing-instance-name  
protocols ospf interface interface-name],  
[edit protocols ospf interface interface-name],  
[edit routing-instances routing-instance-name protocols ospf interface interface-name]
```

Release Information

Statement introduced in Junos OS Release 7.5.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable synchronization by advertising the maximum cost metric until LDP is operational on the link.

Options

The other statements are explained separately.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring LDP Synchronization with the IGP on LDP Links](#) | 1043

log-updown (Protocols LDP)

Syntax

```
log-updown {  
    trap disable;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Disable LDP traps on the router, logical system, or routing instance.

Options

trap disable—Disable LDP traps.

Default: LDP traps are enabled on the router.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Disabling SNMP Traps for LDP](#) | 1043

make-before-break (LDP)

Syntax

```
make-before-break {  
    timeout seconds;  
    switchover-delay seconds;  
}
```

Hierarchy Level

```
[edit protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Description

Configures make before break (MBB) for multicast LDP (MLDP) link protection to ensure minimum packet loss when attempting to signal a new label-switched path (LSP) before tearing down the old LSP path.

Options

timeout *seconds*—Specify a value to change a make -before-break timeout for point-to-multipoint LSPs.

Even if an MBB acknowledgment is not received for a point-to-multipoint LSP before the specified timeout period expires, the label-switching router (LSR) performs an MBB switchover from the old LSR to the new upstream LSR.

Range: 1 through 300 seconds

Default: 30 seconds

switchover-delay *seconds*—Specify a value to change switchover delay for a point-to-multipoint LSP from the old LSR to the new upstream LSR. If an MBB acknowledgment is received on a point of local repair (PLR) router, the PLR waits for the specified seconds to switch its upstream LSR from the old LSR to the new LSR.

Range: 1 through 300 seconds

Default: 30 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

mapping-server-entry

Syntax

```
mapping-server-entry mapping-server-name {  
    prefix-segment prefix;  
    prefix-segment-range prefix-segment-range-name;  
}
```

Hierarchy Level

```
[edit logical-systems name routing-instances name routing-options source-packet-routing],  
[edit logical-systems name routing-options source-packet-routing],  
[edit routing-instances name routing-options source-packet-routing],  
[edit routing-options source-packet-routing]
```

Release Information

Statement introduced in Junos OS Release 18.2R1.

Description

Configure an LDP mapping server to enable interoperability between islands of devices supporting only segment routing and only LDP in an LDP network domain.

The mapping server configuration can be included on any device in the segment routing network.

Options

mapping-server-entry-name—Name of the LDP mapping server.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing

maximum-neighbor-recovery-time

Syntax

```
maximum-neighbor-recovery-time seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp graceful-restart],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp graceful-restart],
[edit protocols ldp graceful-restart],
[edit routing-instances routing-instance-name protocols ldp graceful-restart]
```

Release Information

Statement introduced before Junos OS Release 7.4. Statement changed from **maximum-recovery-time** to **maximum-neighbor-recovery-time** in Junos OS Release 9.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the maximum amount of time to wait before giving up an attempt to gracefully restart.

Options

seconds—Configure the maximum recovery time, in seconds.

Range: 120 through 1800 seconds

Default: 140 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Recovery Time and Maximum Recovery Time | 890](#)

[Configuring Graceful Restart Options for LDP](#)

[no-strict-lsa-checking](#)

[recovery-time](#)

mldp-inband-signalling (Protocols Multipoint LDP)

Syntax

```
mldp-inband-signalling {
  policy policy-name;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols pim],
[edit protocols pim],
```

Release Information

Statement introduced in Junos OS Release 13.2.

Support added in Junos OS Release 18.2R1 for using this command in conjunction with distributed MLD or distributed IGMP.

Description

Multipoint LDP (mLDP) in-band signalling lets you carry multicast traffic across an existing IP/MPLS backbone, while avoiding the use of PIM in the provider core.

On the label-edge router (LER), enable PIM to use mLDP in-band signaling for the upstream neighbors when the LER does not detect a PIM upstream neighbor. On the egress nodes, configure the MPLS LSP root in the PIM configuration, using the **policy** statement.

When used in conjunction with distributed MLD or distributed IGMP, mLDP inband signalling supports interconnecting separate PIM domains via a MPLS-based core. To enable the inter-working, **chassis network-services enhanced-ip** must be enabled and you need to set the **dynamic-profiles profile-name protocols igmp|mld interface interface-name** to **distributed**. Enabling this command, **mldp-inband-signalling**, has PIM act as a multipoint LDP inband edge router.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs](#) | 996

mofrr-asm-starg (Multicast-Only Fast Reroute in a PIM Domain)

Syntax

```
mofrr-asm-starg;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options multicast
stream-protection],
[edit logical-systems logical-system-name routing-options multicast stream-protection],
[edit routing-instances routing-instance-name routing-options multicast stream-protection],
[edit routing-options multicast stream-protection]
```

Release Information

Statement introduced in Junos OS Release 14.1.

Statement introduced in Junos OS Release 17.4R1 for QFX Series switches.

Description

Enable **mofrr-asm-starg** to include any-source multicast (ASM) for (*,G) joins in the Multicast-only fast reroute (MoFRR).

NOTE: **mofrr-asm-starg** applies to IP-PIM only. When enabled for group G, *,G will undergo MoFRR as long as there is no S#,G for Group G. In other words, *,G MoFRR will cease and any old states will be torn down when S#,G is created. Note too, that **mofrr-asm-starg** is not supported for mLDP (since mLDP itself does not support *,G).

In a PIM domain with MoFRR enabled, the default for **stream-protection** is S,G routes only.

Context: Multicast-only fast reroute (MoFRR) can be used to reduce traffic loss in a multicast distribution tree in the event of link down. To employ MoFRR, a downstream router is configured with an alternative path back towards the source, over which it receives a backup live stream of the same multicast traffic. That router propagates the same (S,G) join toward both upstream neighbors in order to create duplicate multicast trees. If a failure is detected on the primary tree, the router switches to the backup tree to prevent packet loss.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Understanding Multicast-Only Fast Reroute | 940](#)

Understanding Multicast-Only Fast Reroute on Switches

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain on Switches

[Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain | 949](#)

mofrr-disjoint-upstream-only (Multicast-Only Fast Reroute in a PIM Domain)

Syntax

```
mofrr-disjoint-upstream-only;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options multicast
stream-protection],
[edit logical-systems logical-system-name routing-options multicast stream-protection],
[edit routing-instances routing-instance-name routing-options multicast stream-protection],
[edit routing-options multicast stream-protection]
```

Release Information

Statement introduced in Junos OS Release 14.1.

Statement introduced in Junos OS Release 17.4R1 for QFX Series switches.

Description

When you configure multicast-only fast reroute (MoFRR) in a PIM domain, allow only a disjoint RPF (an RPF on a separate plane) to be selected as the backup RPF path.

In a multipoint LDP MoFRR domain, the same label is shared between parallel links to the same upstream neighbor. This is not the case in a PIM domain, where each link forms a neighbor. The **mofrr-disjoint-upstream-only** statement does not allow a backup RPF path to be selected if the path goes to the same upstream neighbor as that of the primary RPF path. This ensures that MoFRR is triggered only on a topology that has multiple RPF upstream neighbors.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Understanding Multicast-Only Fast Reroute | 940](#)

[Understanding Multicast-Only Fast Reroute on Switches](#)

[Example: Configuring Multicast-Only Fast Reroute in a PIM Domain](#)

[Example: Configuring Multicast-Only Fast Reroute in a PIM Domain on Switches](#)

[Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain | 949](#)

mofrr-no-backup-join (Multicast-Only Fast Reroute in a PIM Domain)

Syntax

```
mofrr-no-backup-join;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options multicast
stream-protection],
[edit logical-systems logical-system-name routing-options multicast stream-protection],
[edit routing-instances routing-instance-name routing-options multicast stream-protection],
[edit routing-options multicast stream-protection]
```

Release Information

Statement introduced in Junos OS Release 14.1.

Statement introduced in Junos OS Release 17.4R1 for QFX Series switches.

Description

When you configure multicast-only fast reroute (MoFRR) in a PIM domain, prevent sending join messages on the backup path, but retain all other MoFRR functionality.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Understanding Multicast-Only Fast Reroute | 940](#)

Understanding Multicast-Only Fast Reroute on Switches

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain on Switches

[Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain | 949](#)

mofr-primary-path-selection-by-routing (Multicast-Only Fast Reroute)

Syntax

```
mofr-primary-path-selection-by-routing;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options multicast
stream-protection],
[edit logical-systems logical-system-name routing-options multicast stream-protection],
[edit routing-instances routing-instance-name routing-options multicast stream-protection],
[edit routing-options multicast stream-protection]
```

Release Information

Statement introduced in Junos OS Release 14.1.

Statement introduced in Junos OS Release 17.4R1 for QFX Series switches.

Description

MoFRR is supported on both equal-cost multipath (ECMP) paths and non-ECMP paths. Unicast loop-free alternate (LFA) routes need to be enabled to support MoFRR on non-ECMP paths. LFA routes are enabled with the link-protection statement in the interior gateway protocol (IGP) configuration. When you enable link protection on an OSPF or IS-IS interface, Junos OS creates a backup LFA path to the primary next hop for all destination routes that traverse the protected interface.

In the context of load balancing, MoFRR prioritizes the disjoint backup in favor of load balancing the available paths.

For Junos OS releases before 15.1R7, for both ECMP and Non-ECMP scenarios, the default MoFRR behavior was *sticky*, that is, if the Active link went down, the Active Path selection would give preference to Backup Path for the transition. The Active Path would not follow the unicast selected gateway

Starting in Junos OS Release 15.1R7 however, the default behavior for non-EMCP scenarios is to be *nonsticky*, that is, the selection of Active Path strictly follows unicast selected gateway. MoFRR no longer chooses a unicast LFA path to become the MoFRR Active path; only a unicast LFA path can be selected to become MoFRR Backup.

Default

By default, the backup path gets promoted to be the primary path when MoFRR is configured in a PIM domain.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Understanding Multicast-Only Fast Reroute | 940](#)

Understanding Multicast-Only Fast Reroute on Switches

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain on Switches

[Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain | 949](#)

neighbor (Protocols LDP)

Syntax

```
neighbor neighbor-address;
```

Hierarchy Level

```
[edit protocols ldp],
```

Release Information

Statement introduced in Junos OS Release 14.2R1 on all platforms.

Description

Configure an LDP targeted neighbor.

LDP sends a targeted hello message to the configured remote neighbor with a targeted request-send-targeted hello message (T) bit set. If the remote neighbor allows receipt of asymmetric hello messages, or if it is configured with the source address as the targeted neighbor, it responds with a targeted hello message. The receipt of a targeted hello message establishes a targeted adjacency with the remote neighbor as described in RFC 5036. Subsequently, a targeted session is established to the remote neighbor.

Options

neighbor-address—IP address of the remote LDP neighbor.

Required Privilege Level

routing

RELATED DOCUMENTATION

[Minimum LDP Configuration | 863](#)

[Enabling and Disabling LDP | 863](#)

no-forwarding

Syntax

```
no-forwarding;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Do not add ingress routes to the inet.0 routing table even if [traffic-engineering](#) **bgp-igp** (configured at the [\[edit protocols mpls\]](#) hierarchy level) is enabled.

Default

The **no-forwarding** statement is disabled. Ingress routes are added to the inet.0 routing table instead of the inet.3 routing table when [traffic-engineering](#) **bgp-igp** is enabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Preventing Addition of Ingress Routes to the inet.0 Routing Table](#) | 1039

[Configuring Virtual-Router Routing Instances in VPNs](#)

oam (Protocols LDP)

Syntax

```
oam {
  bfd-liveness-detection {
    detection-time threshold milliseconds;
    ecmp;
    failure-action {
      remove-nexthop;
      remove-route;
    }
    holddown-interval milliseconds;
    ingress-policy ingress-policy-name;
    minimum-interval milliseconds;
    minimum-receive-interval milliseconds;
    minimum-transmit-interval milliseconds;
    multiplier detection-time-multiplier;
    no-adaptation;
    transmit-interval {
      minimum-interval milliseconds;
      threshold milliseconds;
    }
    version (0 | 1 | automatic);
  }
  fec fec-address;
  ingress-policy ingress-policy-name;
  lsp-ping-interval seconds;
  periodic-traceroute {
    disable;
    exp exp-value;
    fanout fanout-value;
    frequency minutes;
    paths number-of-paths;
    retries retry-attempts;
    source address;
    ttl ttl-value;
    wait seconds;
  }
}
```

Hierarchy Level

[edit logical-systems *logical-system-name* protocols ldp]

```
[edit protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 7.6.

lsp-ping-interval option introduced in Junos OS Release 9.4.

Description

Configure Operation, Administration, and Maintenance (OAM) and Bidirectional Forwarding Detection (BFD) protocol for LDP.

Options

fec fec-address—Specify the forwarding equivalence class (FEC) address. You must either specify a FEC address or configure an OAM ingress policy to ensure that the BFD session comes up.

lsp-ping-interval seconds—Specify the duration of the LSP ping interval in seconds. To issue a ping on an LDP-signaled LSP, use the **ping mpls ldp** command.

Default: 60 seconds

Range: 30 through 3,600 seconds

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring BFD for LDP LSPs](#) | 903

p2mp (Protocols LDP)

Syntax

```
p2mp {
  no-rsvp-tunneling;
  recursive;
  root-address root-address;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],
[edit protocols ldp],
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 11.2.

no-rsvp-tunneling option added in Junos OS Release 16.1R5.

Description

Enable point-to-multipoint MPLS LSPs in an LDP-signaled LSP.

Options

no-rsvp-tunneling—(Optional) Disable LDP point-to-multipoint LSPs from using RSVP-TE LSPs for tunneling, and use LDP paths instead.

NOTE: The **no-rsvp-tunneling** option is introduced in Junos OS Release 16.1R5, 17.3R1, 17.2R2, 16.2R3, and later releases.

Starting in Junos OS Release 12.3R1, Junos OS provides support for Multipoint LDP (M-LDP) for Targeted LDP (T-LDP) sessions with unicast replication, in addition to link sessions. As a result, the default behavior of M-LDP over RSVP tunneling is similar to unicast LDP. However, because T-LDP is chosen over LDP and link sessions to signal point-to-multipoint LSPs, the **no-rsvp-tunneling** option enables LDP natively throughout the network.

recursive—(Optional) Configure point-to-multipoint recursive parameters, including **route**.

root-address *root-address*—(Optional) Specify the root address of the point-to-multipoint LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring Point-to-Multipoint LDP LSPs as the Data Plane for Intra-AS MBGP MVPNs

[Point-to-Multipoint LSPs Overview](#) | 656

p2mp-ldp-next-hop

Syntax

```
p2mp-ldp-next-hop {
  root-address root-address{
    lsp-id id;
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options static route
destination-prefix],
[edit logical-systems logical-system-name routing-options static route destination-prefix],
[edit routing-instances routing-instance-name routing-options static route destination-prefix].
[edit routing-options static route destination-prefix]
```

Release Information

Statement introduced in Junos OS Release 13.3.

Description

Specify a point-to-multipoint LDP label-switched path (LSP) as the next hop for a static route, and configure a root and provide an *lsp-id* on that LDP-signalled label-switched path.

Options

root-address *root address*— Specify the root address of the point-to-multipoint LSP.

lsp-id *id*— Specify the generic LSP identifier. The range is 1 through 65535.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

periodic-traceroute

Syntax

```
periodic-traceroute {
  disable;
  exp exp-value;
  fanout fanout-value;
  frequency minutes;
  paths number-of-paths;
  retries retry-attempts;
  source address;
  ttl ttl-value;
  wait seconds;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp oam],
[edit logical-systems logical-system-name protocols ldp oam fec fec-address],
[edit protocols ldp oam],
[edit protocols ldp oam fec fec-address]
```

Release Information

Statement introduced in Junos OS Release 8.4.

Support added at the **[edit protocols ldp oam]** and **[edit logical-systems *logical-system-name* protocols ldp oam]** hierarchy levels in Junos OS Release 9.0.

Statement introduced in Junos OS Release 12.2 for EX Series switches.

Description

Enable tracing of forwarding equivalence classes (FECs) for LDP LSPs.

Options

disable—(Optional) Disable tracing for a specific FEC. This option is available at the **[edit protocols ldp oam fec *fec-address* periodic-traceroute]** and **[edit logical-systems *logical-system-name* protocols ldp oam fec *fec-address* periodic-traceroute]** hierarchy levels only.

exp *exp-value*—(Optional) Specify the class of service to use when sending probes.

Default: 7

Range: 0 through 7

fanout *fanout-value*—(Optional) Specify the maximum number of next hops to search per node.

Default: 16

Range: 1 through 16

frequency *minutes*—(Optional) Specify the interval between traceroute attempts.

Default: 60 minutes

Range: 15 through 120 minutes

paths *number-of-paths*—(Optional) Specify the maximum number of paths to search.

Default: 3

Range: 1 through 255

retries *retry-attempts*—(Optional) Specify the number of attempts to send a probe to a specific node before giving up.

Default: 3

Range: 1 through 9

source *address*—(Optional) Specify the IPv4 source address to use when sending probes.

ttl *value*—(Optional) Specify the maximum time-to-live value. Nodes that are beyond this value are not traced.

Default: 64

Range: 1 through 255

wait *seconds*—(Optional) Specify the wait interval before resending a probe packet.

Default: 10 seconds

Range: 5 through 15 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring LDP LSP Traceroute](#) | 1045

policing (Protocols LDP)

Syntax

```
policing {  
  fec fec-address {  
    ingress-traffic filter-name;  
    transit-traffic filter-name;  
  }  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Enable policing of forwarding equivalence classes (FECs) for LDP.

Options

fec *fec-address*—Specify the address for the FEC.

ingress-traffic *filter-name*—Specify the name of the filter for policing ingress FEC traffic.

transit-traffic *filter-name*—Specify the name of the filter for policing transit FEC traffic.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Policers for LDP FECs](#) | 901

policy (Multicast-Only Fast Reroute)

Syntax

```
policy policy-name;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options multicast
stream-protection],
[edit logical-systems logical-system-name routing-options multicast stream-protection],
[edit routing-instances routing-instance-name routing-options multicast stream-protection],
[edit routing-options multicast stream-protection]
```

Release Information

Statement introduced in Junos OS Release 14.1.

Statement introduced in Junos OS Release 17.4R1 for QFX Series switches.

Description

When you configure multicast-only fast reroute (MoFRR), apply a routing policy that filters for a restricted set of multicast streams to be affected by your MoFRR configuration. You can apply filters that are based on source or group addresses.

For example:

```
routing-options {
  multicast {
    stream-protection {
      policy mofrr-select;
    }
  }
}
policy-statement mofrr-select {
  term A {
    from {
      source-address-filter 225.1.1.1/32 exact;
    }
    then {
      accept;
    }
  }
  term B {
    from {
```

```

        source-address-filter 226.0.0.0/8 orlonger;
    }
    then {
        accept;
    }
}
term C {
    from {
        source-address-filter 227.1.1.0/24 orlonger;
        source-address-filter 227.4.1.0/24 orlonger;
        source-address-filter 227.16.1.0/24 orlonger;
    }
    then {
        accept;
    }
}
term D {
    from {
        source-address-filter 227.1.1.1/32 exact;
    }
    then {
        reject; #MoFRR disabled
    }
}
term E {
    from {
        route-filter 227.1.1.0/24 orlonger;
    }
    then accept;
}
...
}

```

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Understanding Multicast-Only Fast Reroute | 940](#)

Understanding Multicast-Only Fast Reroute on Switches

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain on Switches

[Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain | 949](#)

policy (Protocols Multipoint LDP)

Syntax

```
policy policy-name;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols pim mldp-inband-signalling],  
[edit protocols pim mldp-inband-signalling]
```

Release Information

Statement introduced in Junos OS Release 13.2.

Description

Multipoint LDP (M-LDP) in-band signaling enables you to carry multicast traffic across an existing IP/MPLS backbone, while avoiding the use of PIM in the provider core.

On the egress nodes of the point-to-multipoint LSP, specify an M-LDP join translation filter policy where PIM messages are translated into M-LDP FEC bindings. The policy statement is needed when internal BGP (IBGP) is not available in the core site or to override IBGP-based LSP root detection.

The filter policy is configured at the **[edit policy-options]** hierarchy level. The policy generally specifies one or more source-address filters and the point-to-multipoint LDP root IP address using the **p2mp-lsp-root** policy action.

Options

policy-name—Name of a policy configured at the **[edit policy-options]** hierarchy level.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs](#) | 996

preference (Protocols LDP)

Syntax

```
preference preference;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit protocols ldp interface interface-name],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit protocols ldp interface interface-name],  
[edit routing-instances routing-instance-name protocols ldp interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Set the route preference level for LDP routes.

Options

preference—Preferred value.

Range: 0 through 255

Default: 9

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring LDP Route Preferences](#) | 887

prefix-segment (Routing Options)

Syntax

```
prefix-segment prefix-segment {  
    index index;  
}
```

Hierarchy Level

```
[edit logical-systems name routing-instances name routing-options source-packet-routing mapping-server-entry],  
[edit logical-systems name routing-options source-packet-routing mapping-server-entry],  
[edit routing-instances name routing-options source-packet-routing mapping-server-entry],  
[edit routing-options source-packet-routing mapping-server-entry]
```

Release Information

Statement introduced in Junos OS Release 18.2R1.

Description

Configure the IP address and index number of the prefix segment for the LDP mapping server.

Options

prefix-segment—IP address of the prefix segment.

index *index*—Prefix segment index.

Range: 0 through 199999

Required Privilege Level

routing

RELATED DOCUMENTATION

[LDP Mapping Server for Interoperability of Segment Routing with LDP Overview | 1033](#)
[source-packet-routing | 2105](#)

prefix-segment-range

Syntax

```
prefix-segment-range prefix-segment-range-name {
    attached;
    domain-wide-flooding;
    no-node-segment;
    size size;
    start-index start-index;
    start-prefix start-prefix;
}
```

Hierarchy Level

```
[edit logical-systems name routing-instances name routing-options source-packet-routing mapping-server-entry],
[edit logical-systems name routing-options source-packet-routing mapping-server-entry],
[edit routing-instances name routing-options source-packet-routing mapping-server-entry],
[edit routing-options source-packet-routing mapping-server-entry]
```

Release Information

Statement introduced in Junos OS Release 18.2R1.

attached, **domain-wide-flooding**, and **no-node-segment** options introduced in Junos OS Release 19.1R1.

Description

Configure the prefix segment range for the LDP mapping server.

Options

prefix-segment-range-name—Name of the prefix segment range.

attached—(Optional) Set the flag in IS-IS mapping server advertisement to indicate that the prefixes and SIDs advertised in the SID or Label Binding TLV are directly connected to their originators.

domain-wide-flooding—(Optional) Set an S flag in the IS-IS mapping server advertisement to indicate that the SID or Label Binding TLV is flooded across the entire routing domain.

no-node-segment—(Optional) Clear the node segment flag in the mapping server prefix segment to indicate that the prefix has originated from a single node.

size *size*—Size of prefix segment range.

Range: 1 through 1024

start-index *start-index*—Include start index.

Range: 0 through 199999

start-prefix *start-prefix*—Include start prefix.

Required Privilege Level

- routing—To view this statement in the configuration.
- routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[LDP Mapping Server for Interoperability of Segment Routing with LDP Overview | 1033](#)

[source-packet-routing | 2105](#)

[mapping-server-entry | 2071](#)

reconnect-time

Syntax

```
reconnect-time seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp graceful-restart],  
[edit protocols ldp graceful-restart],  
[edit routing-instances routing-instance-name protocols ldp graceful-restart]
```

Release Information

Statement introduced in Junos OS Release 9.1.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the length of time required to reestablish a Label Distribution Protocol (LDP) session after graceful restart.

Options

seconds—Time required for reconnection.

Range: 30 through 300

Default: 60 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring LDP Graceful Restart](#) | 888 on *MPLS Applications User Guide*

Configuring Graceful Restart Options for LDP

recovery-time

Syntax

```
recovery-time seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp graceful-restart],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp graceful-restart],  
[edit protocols ldp graceful-restart],  
[edit routing-instances routing-instance-name protocols ldp graceful-restart]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the amount of time a router waits for LDP to restart gracefully.

Options

seconds—Configure the recovery time, in seconds.

Range: 120 through 1800 seconds

Default: 140 seconds

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Recovery Time and Maximum Recovery Time | 890](#)

session (Protocols LDP)

Syntax

```
session session-address {
  authentication-algorithm (aes-128-cmac-96 | hmac-sha-1-96 | md5);
  authentication-key authentication-key;
  authentication-key-chain authentication-key-chain;
  downstream-on-demand downstream-on-demand;
  (mtu-discovery | no-mtu-discovery);
  transport-address transport-address;
}
```

Hierarchy Level

```
[edit logical-systems name protocols ldp],
[edit logical-systems name routing-instances name protocols ldp],
[edit protocols ldp],
[edit routing-instances name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

authentication-algorithm statement introduced in Junos OS Release 7.6.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

transport-address option introduced in Junos OS Release 19.1R1 for all platforms.

Description

Configure LDP session parameters by specifying the session destination address.

Options

session-address—Session destination address.

authentication-algorithm—Authentication algorithm name.

Values:

- **aes-128-cmac-96**—Cipher-based Message Authentication Code (AES128) (96 bits).
- **hmac-sha-1-96**—Hash-based Message Authentication Code (SHA1) (96 bits).
- **md5**—Message Digest 5.

authentication-key—MD5 authentication key.

authentication-key-chain—Key chain name.

downstream-on-demand—Configure downstream on demand label distribution mode.

mtu-discovery—Enable TCP path MTU discovery.

no-mtu-discovery—Disable TCP path MTU discovery.

transport-address *transport-address*—IP address used for TCP sessions to the LDP neighbors that have targeted-LDP adjacencies.

You cannot configure this statement for LDP sessions that have discovered adjacencies.

The transport-address configuration can be rejected at the time of validation, if there is no interface with the configured IP address.

Required Privilege Level

routing

RELATED DOCUMENTATION

| [Configuring the TCP MD5 Signature for LDP Sessions](#) | 1041

session-group

Syntax

```
session-group name {
  authentication-algorithm (aes-128-cmac-96 | hmac-sha-1-96 | md5);
  authentication-key authentication-key;
  authentication-key-chain authentication-key-chain;
  downstream-on-demand;
  (mtu-discovery | no-mtu-discovery);
  transport-address transport-address;
}
```

Hierarchy Level

```
[edit logical-systems name protocols ldp],
[edit logical-systems name routing-instances name protocols ldp],
[edit protocols ldp],
[edit routing-instances name protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 16.1.

transport-address option introduced in Junos OS Release 19.1R1 for all platforms.

Description

Specify the prefix address of the aggregated group of LDP neighbors for the remote end of the LDP session.

The **session-group** statement is useful when an LDP neighbor is dynamic; for instance, in the case of remote loop free alternate (LFA), a targeted or indirect LDP neighbor is automatically picked from any of the nodes in the network.

The **session-group** statement can also be used for configuring authentication for a prefix group, as LDP authentication for all sessions or authentication at the interface level is not supported.

The remaining statements are explained separately. See [CLI Explorer](#).

Options

name—Session destination address or prefix length.

authentication-algorithm—Authentication algorithm name.

Values:

- *aes-128-cmac-96*—Cipher-based Message Authentication Code (AES128) (96 bits)
- *hmac-sha-1-96*—Hash-based Message Authentication Code (SHA1) (96 bits)

- *md5*—Message Digest 5

authentication-key—MD5 authentication key.

authentication-key-chain—Authentication key chain name.

downstream-on-demand—Configure downstream on demand label distribution mode.

mtu-discovery | no-mtu-discovery—Enable and disable TCP path MTU discovery, respectively.

transport-address *transport-address*—IP address used for TCP sessions to the LDP neighbors that have targeted-LDP adjacencies, and fall under the same IP subnet.

You cannot configure this statement for LDP sessions that have discovered adjacencies.

The transport-address configuration can be rejected at the time of validation, if there is no interface with the configured IP address.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the TCP MD5 Signature for LDP Sessions](#) | 1041

session-protection

Syntax

```
session-protection {  
    timeout seconds;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Description

Configure when an LDP session is torn down and resignaled after the router stops receiving hello messages from a neighboring router. You might want to modify this behavior to prevent an LDP session from being unnecessarily terminated and reestablished. The LDP session remains up for the duration specified as long as the routers maintain IP network connectivity.

Options

timeout *seconds*—Time in seconds before the LDP session is torn down and resignaled.

Range: 1 through 65,535 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring LDP Session Protection](#) | 1043

source-packet-routing

Syntax

```
mapping-server-entry mapping-server-entry;
```

Hierarchy Level

```
[edit logical-systems name routing-instances name routing-options],  
[edit logical-systems name routing-options],  
[edit routing-instances name routing-options],  
[edit routing-options]
```

Release Information

Statement introduced in Junos OS Release 18.2R1.

Description

Configure interoperability between islands of devices supporting only segment routing and LDP in an LDP network domain where there is gradual deployment of segment routing.

Required Privilege Level

routing

stream-protection (Multicast-Only Fast Reroute)

Syntax

```
stream-protection {
  mofrr-asm-starg;
  mofrr-disjoint-upstream-only;
  mofrr-no-backup-join;
  mofrr-primary-path-selection-by-routing;
  policy policy-name;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options multicast],
[edit logical-systems logical-system-name routing-options multicast],
[edit routing-instances routing-instance-name routing-options multicast],
[edit routing-options multicast]
```

Release Information

Statement introduced in Junos OS Release 14.1.

Statement introduced in Junos OS Release 17.4R1 for QFX Series switches.

Description

Enable multicast-only fast reroute (MoFRR) on a routing or switching device. MoFRR minimizes packet loss in a network when there is a link failure.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Understanding Multicast-Only Fast Reroute | 940](#)

Understanding Multicast-Only Fast Reroute on Switches

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain

Example: Configuring Multicast-Only Fast Reroute in a PIM Domain on Switches

[Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain | 949](#)

strict-targeted-hellos

Syntax

```
strict-targeted-hellos;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Prevent LDP sessions from being established with remote neighbors that have not been specifically configured. LDP peers will not respond to targeted hellos coming from a source that is not one of the configured remote neighbors.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Enabling Strict Targeted Hello Messages for LDP | 866](#)

targeted-hello

Syntax

```
targeted-hello {  
    hello-interval seconds;  
    hold-time seconds;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced in Junos OS Release 9.5.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify the LDP timer and LDP hold time for targeted hellos.

Options

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the LDP Timer for Hello Messages | 864](#)

[Configuring the Delay Before LDP Neighbors Are Considered Down | 865](#)

traceoptions (Protocols LDP)

Syntax

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag <flag-modifier> <disable>;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],
[edit protocols ldp],
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

match-on address option for the **filter** flag modifier added in Junos OS Release 10.4.

nsr-synchronization and **p2mp-nsr-synchronization** operations for **flag** statement introduced in Junos OS Release 13.3.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Specify LDP protocol-level trace options.

Default

The default LDP protocol-level trace options are inherited from the routing protocols **traceoptions** statement included at the **[edit routing-options]** hierarchy level.

Options

disable—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as **all**.

file *filename*—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory **ldp-log**. We recommend that you place LDP tracing output in the file **ldp-log**.

files *number*—(Optional) Maximum number of trace files. When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**, then **trace-file.1**, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Range: 2 through 1000

Default: 2 files

If you specify a maximum number of files, you must also include the **size** statement to specify the maximum file size.

flag *flag*—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements.

- **address**—Operation of address and address withdrawal messages
- **binding**—Label-binding operations
- **error**—Error conditions
- **event**—Protocol events
- **initialization**—Operation of initialization messages
- **label**—Operation of label request, label map, label withdrawal, and label release messages
- **notification**—Operation of notification messages
- **nsr-synchronization**— Nonstop active routing synchronization events
- **p2mp-nsr-synchronization**—Point-to-multipoint nonstop active routing synchronization events
- **packets**—Equivalent to setting **address**, **initialization**, **label**, **notification**, and **periodic** flags (see also the **filter** flag modifier)
- **path**—Label-switched path operations
- **periodic**—Operation of hello and keepalive messages
- **route**—Operation of route messages
- **state**—Protocol state transitions

flag-modifier—(Optional) Modifier for the tracing flag. You can specify one or more of these modifiers:

- **detail**—Provide detailed trace information.
- **disable**—Disable this trace flag.
- **filter**—Filter to apply to this flag. The **filter** flag modifier can be applied only to the **route**, **path**, and **binding** flags. This flag modifier has the following options:
 - **match-on**—Match on argument specified. The **match-on** option has the following suboptions:
 - **address**—Filter based on the source and destination addresses of packets. Available for the **packets** flag option only.
 - **fec**—Filter based on the FEC associated with the traced object.
 - **policy *policy-name***—Specify the filter policy.
- **receive**—Packets being received.
- **send**—Packets being transmitted.

no-world-readable—(Optional) Prevent all users from reading the log file.

size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches this size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Syntax: **xk** to specify KB, **xm** to specify MB, or **xg** to specify GB

Range: 10 KB through the maximum file size supported on your system

Default: 1 MB

If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

world-readable—(Optional) Enable any user to read the log file.

Required Privilege Level

routing and trace—To view this statement in the configuration.

routing-control and trace-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Tracing LDP Protocol Traffic | 1049](#)

Network Management and Monitoring Guide

track-igp-metric

Syntax

```
track-igp-metric;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],  
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],  
[edit protocols ldp],  
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Statement introduced in Junos OS Release 18.4R1 on MX5, MX10, MX40, MX104, MX204, MX240, MX480, MX960, MX2008, MX2010, MX2020, MX10003, and MX10008 routers.

Statement introduced in Junos OS Release 18.4R1 on PTX1000, PTX3000, PTX5000, PTX10002-60C, PTX10008, and PTX10016 routers.

Description

Cause the IGP route metric to be used for the LDP routes instead of the default LDP route metric (the default LDP route metric is 1).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring LDP to Use the IGP Route Metric](#) | 1038

track-igp-metric (LSP)

Syntax

```
track-igp-metric <install-v4-prefixes> <install-v6-prefixes>;
```

Hierarchy Level

The hierarchy level for **track-igp-metric** globally enabled for all LSPs:

```
[edit protocols mpls]
```

The hierarchy level for **track-igp-metric** at the per LSP level:

```
[edit protocols mpls label-switched-path pathname],
```

Release Information

Statement introduced in Junos OS Release 18.4R1.

Description

Track IGP metric for LSP install prefixes

Options

install-v4-prefixes—Track IGP metric for IPV4 prefixes.

install-v6-prefixes—Track IGP metric for IPV6 prefixes.

Required Privilege Level

routing

RELATED DOCUMENTATION

| *Install Prefix IGP Overview*

traffic-statistics (Protocols LDP)

Syntax

```
traffic-statistics {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  interval seconds;
  no-penultimate-hop;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],
[edit protocols ldp],
[edit routing-instances routing-instance-name protocols ldp]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

LDP traffic statistics display the amount of traffic passed through a router for a particular FEC.

Options

file *filename*—Name of the file to receive the output of the LDP statistics operation. Enclose the name within quotation marks. All files are placed in the directory **/var/log**.

files *number*—(Optional) Maximum number of LDP statistics files. When a statistics file named ***ldp-stat*** reaches its maximum size, it is renamed ***ldp-stat.0***, then ***ldp-stat.1***, and so on, until the maximum number of LDP statistics files is reached. Then the oldest file is overwritten.

Range: 2 through 1000

Default: 2 files

If you specify a maximum number of files, you also must include the **size** statement to specify the maximum file size.

interval *seconds*—(Optional) Specify the interval at which the statistics are polled and written to the file.

Default: 300 seconds (5 minutes)

no-penultimate-hop—(Optional) Do not collect traffic statistics on the penultimate hop router.

no-world-readable—(Optional) Prevent all users from reading the log file.

size *size*—(Optional) Maximum size of each statistics file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a statistics file named *ldp-stat* reaches this size, it is renamed *ldp-stat.0*. When *ldp-stat* again reaches this size, *ldp-stat.0* is renamed *ldp-stat.1* and *ldp-stat* is renamed *ldp-stat.0*. This renaming scheme continues until the maximum number of statistics files is reached. Then the oldest statistics file is overwritten.

Syntax: *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB

Range: 10 KB through the maximum file size supported on your system

Default: 1 MB

If you specify a maximum file size, you also must also include the **files** statement to specify the maximum number of files.

world-readable—(Optional) Enable log file access for all users.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Collecting LDP Statistics](#) | 1046

transport-address

Syntax

```
transport-address (address | interface | router-id);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp],
[edit logical-systems logical-system-name protocols ldp interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ldp],
[edit protocols ldp],
[edit protocols ldp interface interface-name],
[edit routing-instances routing-instance-name protocols ldp interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

address option introduced in Junos OS Release 19.1R1 for all platforms.

Description

Enables you to configure the IP address used to specify the TCP session for the LDP session. Routers must first establish a TCP session between one another before they can establish an LDP session. The TCP session enables the routers to exchange the label advertisements needed for the LDP session. To establish the TCP session, each router must learn the other router's transport address. The transport address is an IP address used to identify the TCP session over which the LDP session will run.

Default

router-id

Options

address—Use the specified IP address as the transport address for the LDP session.

interface—Use the first IP address on the interface as the transport address for any LDP sessions to neighbors that can be reached over that interface. You cannot specify the **interface** option when there are multiple parallel links to the same LDP neighbor, because the LDP specification requires that the same transport address be advertised on all interfaces to the same neighbor. If LDP detects multiple parallel links to the same neighbor, it disables interfaces to that neighbor one by one until the condition is cleared, either by disconnecting the neighbor on an interface or by specifying the **router-id** option.

router-id—Use router identifier as the transport address. Unless otherwise configured, the router identifier is the loopback address.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Specifying the Transport Address Used by LDP](#) | 896

version (BFD)

Syntax

```
version (0 | 1 | automatic);
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ldp oam bfd-liveness-detection],
[edit logical-systems logical-system-name protocols ldp oam fec address bfd-liveness-detection],
[edit system services dhcp-local-server liveness-detection method bfd],
[edit system services dhcp-local-server dhcpv6 liveness-detection method bfd],
[edit forwarding-options dhcp-relay liveness-detection method bfd],
[edit forwarding-options dhcp-relay dhcpv6 liveness-detection method bfd],
[edit system services dhcp-local-server group group-name liveness-detection method bfd],
[edit system services dhcp-local-server dhcpv6 group group-name liveness-detection method bfd],
[edit forwarding-options dhcp-relay group group-name liveness-detection method bfd],
[edit forwarding-options dhcp-relay dhcpv6 group group-name liveness-detection method bfd],
[edit protocols ldp oam bfd-liveness-detection],
[edit protocols ldp oam fec address bfd-liveness-detection]
```

Release Information

Statement introduced in Junos OS Release 12.1.

Statement introduced in Junos OS Release 12.3R2 for EX Series switches.

Description

Configure the BFD protocol version to detect.

Options

0—Use BFD protocol version 0.

1—Use BFD protocol version 1.

automatic—Autodetect the BFD protocol version.

Default: automatic

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring Group Liveness Detection with BFD for DHCP Local Server Clients

Example: Configuring Global Liveness Detection with BFD for DHCP Relay Agent Clients

[Configuring BFD for LDP LSPs](#) | **903**

CCC and TCC Configuration Statements

IN THIS CHAPTER

- connections (Circuits) | 2121
- encapsulation (Logical Interface) | 2123
- encapsulation | 2128
- interface-switch | 2135
- l2circuit-control-passthrough | 2136
- lsp-switch | 2137
- output-interface (CCC) | 2138
- p2mp-receive-switch | 2139
- p2mp-transmit-switch | 2140
- remote-interface-switch | 2141

connections (Circuits)

Syntax

```
connections {
  interface-switch connection-name {
    interface interface-name.unit-number;
  }
  lsp-switch connection-name {
    transmit-lsp label-switched-path;
    receive-lsp label-switched-path;
  }
  p2mp-receive-switch {
    output-interface [ interface-name.unit-number ];
    receive-p2mp-lsp receiving-point-to-multipoint-lsp;
  }
  p2mp-transmit-switch {
    input-interface interface-name.unit-number;
    transmit-p2mp-lsp transmitting-point-to-multipoint-lsp;
  }
  remote-interface-switch connection-name {
    interface interface-name.unit-number;
    receive-lsp label-switched-path;
    transmit-lsp label-switched-path;
  }
}
```

Hierarchy Level

[edit logical-systems *logical-system-name* protocols],
[edit protocols]

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Define the connection between two circuits in a CCC connection.

Options

The remaining statements are explained separately. See [CLI Explorer](#).

NOTE: The **edit logical-systems** hierarchy is not available on QFabric systems.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Layer 2 Switching Cross-Connects Using CCC | 1314](#)

[Configuring MPLS LSP Tunnel Cross-Connects Using CCC | 1324](#)

[Configuring TCC | 1329](#)

[Configuring CCC Switching for Point-to-Multipoint LSPs | 1338](#)

encapsulation (Logical Interface)

Syntax

```
encapsulation (atm-ccc-cell-relay | atm-ccc-vc-mux | atm-cisco-nlpid | atm-mlppp-llc | atm-nlpid | atm-ppp-llc |
atm-ppp-vc-mux | atm-snap | atm-tcc-snap | atm-tcc-vc-mux | atm-vc-mux | ether-over-atm-llc |
ether-vpls-over-atm-llc | ether-vpls-over-fr | ether-vpls-over-ppp | ethernet | ethernet-ccc | ethernet-vpls |
ethernet-vpls-fr | frame-relay-ccc | frame-relay-ether-type | frame-relay-ether-type-tcc | frame-relay-ppp |
frame-relay-tcc | gre-fragmentation | multilink-frame-relay-end-to-end | multilink-ppp | ppp-over-ether |
ppp-over-ether-over-atm-llc | vlan-bridge | vlan-ccc | vlan-vci-ccc | vlan-tcc | vlan-vpls | vxlan);
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number],
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number],
[edit interfaces rlsq number unit logical-unit-number]
[edit protocols evpn]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers

(**ethernet**, **vlan-ccc**, and **vlan-tcc** options only).

Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers. Only the **atm-ccc-cell-relay** and **atm-ccc-vc-mux** options are supported on ACX Series routers.

Statement introduced in Junos OS Release 17.3R1 for QFX10000 Series switches (**ethernet-ccc** and **vlan-ccc** options only).

Description

Configure a logical link-layer encapsulation type. Not all encapsulation types are supported on the switches. See the switch CLI.

Starting in Junos OS Release 20.1R1, aggregated ethernet interfaces supports VLAN TCC (Translational cross-connect) encapsulation on MX series platforms. See [“Configuring VLAN TCC Encapsulation” on page 1298](#) for more details. Non-ethernet media types, SONET and ATM interfaces are only supported. It is expected that the user will have the member links of aggregated ethernet with supported hardware for configuring VLAN TCC encapsulation and no commit check is performed externally for the aggregated ethernet (AE) interfaces.

Options

atm-ccc-cell-relay—Use ATM cell-relay encapsulation.

atm-ccc-vc-mux—Use ATM virtual circuit (VC) multiplex encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

atm-cisco-nlpid—Use Cisco ATM network layer protocol identifier (NLPID) encapsulation. When you use this encapsulation type, you can configure the **inet** family only.

atm-mlppp-llc—For ATM2 IQ interfaces only, use Multilink Point-to-Point (MLPPP) over AAL5 LLC. For this encapsulation type, your router must be equipped with a Link Services or Voice Services PIC. MLPPP over ATM encapsulation is not supported on ATM2 IQ OC48 interfaces.

atm-nlpid—Use ATM NLPID encapsulation. When you use this encapsulation type, you can configure the **inet** family only.

atm-ppp-llc—(ATM2 IQ interfaces and MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP only) Use PPP over AAL5 LLC encapsulation.

atm-ppp-vc-mux—(ATM2 IQ interfaces and MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP only) Use PPP over ATM AAL5 multiplex encapsulation.

atm-snap—(All interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) Use ATM subnetwork attachment point (SNAP) encapsulation.

atm-tcc-snap—Use ATM SNAP encapsulation on translational cross-connect (TCC) circuits.

atm-tcc-vc-mux—Use ATM VC multiplex encapsulation on TCC circuits. When you use this encapsulation type, you can configure the **tcc** family only.

atm-vc-mux—(All interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) Use ATM VC multiplex encapsulation. When you use this encapsulation type, you can configure the **inet** family only.

ether-over-atm-llc—(All IP interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) For interfaces that carry IP traffic, use Ethernet over ATM LLC encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces.

ether-vpls-over-atm-llc—For ATM2 IQ interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.

ether-vpls-over-fr—For E1, T1, E3, T3, and SONET interfaces only, use the Ethernet virtual private LAN service (VPLS) over Frame Relay encapsulation to support Bridged Ethernet over Frame Relay encapsulated TDM interfaces for VPLS applications, per RFC 2427, *Multiprotocol Interconnect over Frame Relay*.

NOTE: The SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, and the DS3/E3 MIC do not support Ethernet over Frame Relay encapsulation.

ether-vpls-over-ppp—For E1, T1, E3, T3, and SONET interfaces only, use the Ethernet virtual private LAN service (VPLS) over Point-to-Point Protocol (PPP) encapsulation to support Bridged Ethernet over PPP-encapsulated TDM interfaces for VPLS applications.

ethernet—Use Ethernet II encapsulation (as described in RFC 894, *A Standard for the Transmission of IP Datagrams over Ethernet Networks*).

ethernet-ccc—Use Ethernet CCC encapsulation on Ethernet interfaces.

ethernet-vpls—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard Tag Protocol ID (TPID) values.

NOTE: The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

ethernet-vpls-fr—Use in a VPLS setup when a CE device is connected to a PE router over a time-division multiplexing (TDM) link. This encapsulation type enables the PE router to terminate the outer layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.

frame-relay-ccc—Use Frame Relay encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

frame-relay-ether-type—Use Frame Relay ether type encapsulation for compatibility with Cisco Frame Relay. The physical interface must be configured with flexible-frame-relay encapsulation.

frame-relay-ether-type-tcc—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media. The physical interface must be configured with flexible-frame-relay encapsulation.

frame-relay-ppp—Use PPP over Frame Relay circuits. When you use this encapsulation type, you can configure the **ppp** family only.

frame-relay-tcc—Use Frame Relay encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.

gre-fragmentation—For adaptive services interfaces only, use GRE fragmentation encapsulation to enable fragmentation of IPv4 packets in GRE tunnels. This encapsulation clears the do not fragment (DF) bit in the packet header. If the packet's size exceeds the tunnel's maximum transmission unit (MTU) value, the packet is fragmented before encapsulation.

multilink-frame-relay-end-to-end—Use MLFR FRF.15 encapsulation. This encapsulation is used only on multilink, link services, and voice services interfaces and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.

multilink-ppp—Use MLPPP encapsulation. This encapsulation is used only on multilink, link services, and voice services interfaces and their constituent T1 or E1 interfaces.

ppp-over-ether—Use PPP over Ethernet encapsulation to configure an underlying Ethernet interface for a dynamic PPPoE logical interface on M120 and M320 routers with Intelligent Queuing 2 (IQ2) PICs, and on MX Series routers with MPCs.

ppp-over-ether-over-atm-llc—(MX Series routers with MPCs using the ATM MIC with SFP only) For underlying ATM interfaces, use PPP over Ethernet over ATM LLC encapsulation. When you use this encapsulation type, you cannot configure the interface address. Instead, configure the interface address on the PPP interface.

vlan-bridge—Use Ethernet VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q tagging, flexible-ethernet-services, and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.

vlan-ccc—Use Ethernet virtual LAN (VLAN) encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

vlan-vci-ccc—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

vlan-tcc—Use Ethernet VLAN encapsulation on TCC circuits. When you use this encapsulation type, you can configure the **tcc** family only.

vlan-vpls—Use Ethernet VLAN encapsulation on VPLS circuits.

vxlan—Use VXLAN data plane encapsulation for EVPN.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release History Table

Release	Description
20.1R1	Starting in Junos OS Release 20.1R1, aggregated ethernet interfaces supports VLAN TCC (Translational cross-connect) encapsulation on MX series platforms.

RELATED DOCUMENTATION

[Configuring Layer 2 Switching Cross-Connects Using CCC | 1314](#)

[Configuring the Encapsulation for Layer 2 Switching TCCs | 1329](#)

[Configuring Interface Encapsulation on Logical Interfaces](#)

[Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects | 1325](#)

[Circuit and Translational Cross-Connects Overview](#)

[Identifying the Access Concentrator](#)

[Configuring ATM Interface Encapsulation](#)

[Configuring VLAN and Extended VLAN Encapsulation](#)

[Configuring ATM-to-Ethernet Interworking](#)

[Configuring Interface Encapsulation on PTX Series Packet Transport Routers](#)

[Configuring CCC Encapsulation for Layer 2 VPNs](#)

[Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits](#)

[Configuring ATM for Subscriber Access](#)

[Understanding CoS on ATM IMA Pseudowire Interfaces Overview](#)

[Configuring Policing on an ATM IMA Pseudowire](#)

encapsulation

List of Syntax

[Syntax for Physical Interfaces: M Series, MX Series, QFX Series, T Series, PTX Series on page 2128](#)

[Syntax for Physical Interfaces: SRX Series on page 2128](#)

[Syntax for Logical Interfaces: SRX Series on page 2128](#)

Syntax for Physical Interfaces: M Series, MX Series, QFX Series, T Series, PTX Series

```
encapsulation (atm-ccc-cell-relay | atm-pvc | cisco-hdlc | cisco-hdlc-ccc | cisco-hdlc-tcc | ethernet-bridge | ethernet-ccc
| ethernet-over-atm | ethernet-tcc | ethernet-vpls | ethernet-vpls-fr | ether-vpls-over-atm-llc | ethernet-vpls-ppp
| extended-frame-relay-ccc | extended-frame-relay-ether-type-tcc | extended-frame-relay-tcc |
extended-vlan-bridge | extended-vlan-ccc | extended-vlan-tcc | extended-vlan-vpls | flexible-ethernet-services |
flexible-frame-relay | frame-relay | frame-relay-ccc | frame-relay-ether-type | frame-relay-ether-type-tcc |
frame-relay-port-ccc | frame-relay-tcc | generic-services | multilink-frame-relay-uni-nni | ppp | ppp-ccc | ppp-tcc
| vlan-ccc | vlan-vci-ccc | vlan-vpls);
```

Syntax for Physical Interfaces: SRX Series

```
encapsulation (ether-vpls-ppp | ethernet-bridge | ethernet-ccc | ethernet-tcc | ethernet-vpls |
extended-frame-relay-ccc | extended-frame-relay-tcc | extended-vlan-bridge | extended-vlan-ccc |
extended-vlan-tcc | extended-vlan-vpls | flexible-ethernet-services | frame-relay-port-ccc | vlan-ccc | vlan-vpls);
```

Syntax for Logical Interfaces: SRX Series

```
encapsulation ( dix | ether-vpls-fr | frame-relay-ppp | ppp-over-ether | vlan-bridge | vlan-ccc | vlan-tcc | vlan-vpls );
```

Physical Interfaces: M Series, MX Series, QFX Series, T Series, PTX Series

```
[edit interfaces interface-name],
[edit interfaces rlsq number:number]
```

Logical Interfaces

```
[edit interfaces interface-name unit logical-unit-number ]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.5.


Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers (**flexible-ethernet-services**, **ethernet-ccc**, and **ethernet-tcc** options only).

Description

For M Series, MX Series, QFX Series, T Series, PTX Series, specify the physical link-layer encapsulation type.

For SRX Series, specify logical link layer encapsulation.



NOTE: Not all encapsulation types are supported on the switches. See the switch CLI.

Default

ppp—Use serial PPP encapsulation.

Physical Interface Options and Logical Interface Options

[Warning: element unresolved in stylesheets: <title> (in <config-options>). This is probably a new element that is not yet supported in the stylesheets.]

Physical Interface Options and Logical Interface Options

For physical interfaces:

NOTE: Frame Relay, ATM, PPP, SONET, and SATSOP options are not supported on EX Series switches.

- **atm-ccc-cell-relay**—Use ATM cell-relay encapsulation.
- **atm-pvc**—Defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*. When you configure physical ATM interfaces with ATM PVC encapsulation, an RFC 2684-compliant ATM Adaptation Layer 5 (AAL5) tunnel is set up to route the ATM cells over a Multiprotocol Label Switching (MPLS) path that is typically established between two MPLS-capable routers using the Label Distribution Protocol (LDP).
- **cisco-hdlc**—Use Cisco-compatible High-Level Data Link Control (HDLC) framing. E1, E3, SONET/SDH, T1, and T3 interfaces can use Cisco HDLC encapsulation. Two related versions are supported:
 - CCC version (**cisco-hdlc-ccc**)—The logical interface does not require an encapsulation statement. When you use this encapsulation type, you can configure the **ccc** family only.
 - TCC version (**cisco-hdlc-tcc**)—Similar to CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.
- **cisco-hdlc-ccc**—Use Cisco-compatible HDLC framing on CCC circuits.
- **cisco-hdlc-tcc**—Use Cisco-compatible HDLC framing on TCC circuits for connecting different media.
- **ethernet-bridge**—Use Ethernet bridge encapsulation on Ethernet interfaces that have bridging enabled and that must accept all packets.
- **ethernet-over-atm**—For interfaces that carry IPv4 traffic, use Ethernet over ATM encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces. As defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*, this encapsulation type allows ATM interfaces to connect to devices that support only bridge protocol data units (BPDUs). Junos OS does not completely support bridging, but accepts BPDU packets as a default gateway. If you use the router as an edge device, then the router acts as a default gateway. It accepts Ethernet LLC/SNAP frames with IP or ARP in the payload, and drops the rest. For packets destined to the Ethernet LAN, a route lookup is done using the destination IP address. If the route lookup yields a full address match, the packet is encapsulated with an LLC/SNAP and MAC header, and the packet is forwarded to the ATM interface.
- **ethernet-tcc**—For interfaces that carry IPv4 traffic, use Ethernet TCC encapsulation on interfaces that must accept packets carrying standard TPID values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC is not supported.

- **ethernet-vpls**—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard TPID values. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.
- **ethernet-vpls-fr**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.
- **ethernet-vpls-ppp**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 PPP connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use it to forward the packet into a given VPLS instance.
- **ether-vpls-over-atm-llc**—For ATM intelligent queuing (IQ) interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.
- **extended-frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to CCC. When you use this encapsulation type, you can configure the **ccc** family only.
- **extended-frame-relay-ether-type-tcc**—Use extended Frame Relay ether type TCC for Cisco-compatible Frame Relay for DLCIs 1 through 1022. This encapsulation type is used for circuits with different media on either side of the connection.
- **extended-frame-relay-tcc**—Use Frame Relay encapsulation on TCC circuits to connect different media. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to TCC.
- **extended-vlan-bridge**—Use extended VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q VLAN tagging and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.
- **extended-vlan-ccc**—Use extended VLAN encapsulation on CCC circuits with Gigabit Ethernet and 4-port Fast Ethernet interfaces that must accept packets carrying 802.1Q values. Extended VLAN CCC encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. When you use this encapsulation type, you can configure the **ccc** family only. For 8-port, 12-port, and 48-port Fast Ethernet PICs, extended VLAN CCC is not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC is not supported.
- **extended-vlan-tcc**—For interfaces that carry IPv4 traffic, use extended VLAN encapsulation on TCC circuits with Gigabit Ethernet interfaces on which you want to use 802.1Q tagging. For 4-port Gigabit Ethernet PICs, extended VLAN TCC is not supported.

- **extended-vlan-vpls**—Use extended VLAN VPLS encapsulation on Ethernet interfaces that have VLAN 802.1Q tagging and VPLS enabled and that must accept packets carrying TPIDs 0x8100, 0x9100, and 0x9901. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.

NOTE: The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

- **flexible-ethernet-services**—For Gigabit Ethernet IQ interfaces and Gigabit Ethernet PICs with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and for Gigabit Ethernet interfaces, use flexible Ethernet services encapsulation when you want to configure multiple per-unit Ethernet encapsulations. Aggregated Ethernet bundles can use this encapsulation type. This encapsulation type allows you to configure any combination of route, TCC, CCC, Layer 2 virtual private networks (VPNs), and VPLS encapsulations on a single physical port. If you configure flexible Ethernet services encapsulation on the physical interface, VLAN IDs from 1 through 511 are no longer reserved for normal VLANs.
- **flexible-frame-relay**—For IQ interfaces only, use flexible Frame Relay encapsulation when you want to configure multiple per-unit Frame Relay encapsulations. This encapsulation type allows you to configure any combination of TCC, CCC, and standard Frame Relay encapsulations on a single physical port. Also, each logical interface can have any DLCI value from 1 through 1022.
- **frame-relay**—Use Frame Relay encapsulation is defined in RFC 1490, *Multiprotocol Interconnect over Frame Relay*. E1, E3, link services, SONET/SDH, T1, T3, and voice services interfaces can use Frame Relay encapsulation.
- **frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. This encapsulation is same as standard Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to CCC. The logical interface must also have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
- **frame-relay-ether-type**—Use Frame Relay ether type encapsulation for compatibility with the Cisco Frame Relay. IETF frame relay encapsulation identifies the payload format using NLPID and SNAP formats. Cisco-compatible Frame Relay encapsulation uses the Ethernet type to identify the type of payload.

NOTE: When the encapsulation type is set to Cisco-compatible Frame Relay encapsulation, ensure that the LMI type is set to ANSI or Q933-A.

- **frame-relay-ether-type-tcc**—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media. This encapsulation is Cisco-compatible Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to TCC.

- **frame-relay-port-ccc**—Use Frame Relay port CCC encapsulation to transparently carry all the DLCIs between two customer edge (CE) routers without explicitly configuring each DLCI on the two provider edge (PE) routers with Frame Relay transport. The connection between the two CE routers can be either user-to-network interface (UNI) or network-to-network interface (NNI); this is completely transparent to the PE routers. When you use this encapsulation type, you can configure the **ccc** family only.
- **frame-relay-tcc**—This encapsulation is similar to Frame Relay CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.
- **generic-services**—Use generic services encapsulation for services with a hierarchical scheduler.
- **multilink-frame-relay-uni-nni**—Use MLFR UNI NNI encapsulation. This encapsulation is used on link services, voice services interfaces functioning as FRF.16 bundles, and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.
-
- **ppp**—Use serial PPP encapsulation. This encapsulation is defined in RFC 1661, *The Point-to-Point Protocol (PPP) for the Transmission of Multiprotocol Datagrams over Point-to-Point Links*. PPP is the default encapsulation type for physical interfaces. E1, E3, SONET/SDH, T1, and T3 interfaces can use PPP encapsulation.
- **ppp-ccc**—Use serial PPP encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.
- **ppp-tcc**—Use serial PPP encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.
- **vlan-ccc**—Use Ethernet VLAN encapsulation on CCC circuits. VLAN CCC encapsulation supports TPID 0x8100 only. When you use this encapsulation type, you can configure the **ccc** family only.
- **vlan-vci-ccc**—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only. All logical interfaces configured on the Ethernet interface must also have the encapsulation type set to **vlan-vci-ccc**.
- **vlan-vpls**—Use VLAN VPLS encapsulation on Ethernet interfaces with VLAN tagging and VPLS enabled. Interfaces with VLAN VPLS encapsulation accept packets carrying standard TPID values only. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.

NOTE:

- Label-switched interfaces (LSIs) do not support VLAN VPLS encapsulation. Therefore, you can only use VLAN VPLS encapsulation on a PE-router-to-CE-router interface and not a core-facing interface.
- Starting with Junos OS release 13.3, a commit error occurs when you configure **vlan-vpls** encapsulation on a physical interface and configure **family inet** on one of the logical units. Previously, it was possible to commit this invalid configuration.

For logical interfaces:

- **frame-relay**—Configure a Frame Relay encapsulation when the physical interface has multiple logical units, and the units are either point to point or multipoint.
- **multilink-frame-relay-uni-nni**—Link services interfaces functioning as FRF.16 bundles can use Multilink Frame Relay UNI NNI encapsulation.
- **ppp**—For normal mode (when the device is using only one ISDN B-channel per call). Point-to-Point Protocol is for communication between two computers using a serial interface.
- **ppp-over-ether**—This encapsulation is used for underlying interfaces of pp0 interfaces.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Understanding Physical Encapsulation on an Interface

Configuring Interface Encapsulation on Physical Interfaces

Configuring CCC Encapsulation for Layer 2 VPNs

[Configuring Layer 2 Switching Cross-Connects Using CCC | 1314](#)

Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits

Configuring ATM Interface Encapsulation

Configuring ATM-to-Ethernet Interworking

Configuring VLAN and Extended VLAN Encapsulation

Configuring VLAN and Extended VLAN Encapsulation

Configuring Encapsulation for Layer 2 Wholesale VLAN Interfaces

Configuring Interfaces for Layer 2 Circuits

Configuring Interface Encapsulation on PTX Series Packet Transport Routers

[Configuring MPLS LSP Tunnel Cross-Connects Using CCC | 1324](#)

[Configuring TCC | 1329](#)

Configuring VPLS Interface Encapsulation

Configuring Interfaces for VPLS Routing

Defining the Encapsulation for Switching Cross-Connects

Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)

interface-switch

Syntax

```
interface-switch connection-name {
    interface interface-name.unit-number;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols connections],
[edit protocols connections]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure Layer 2 switching cross-connects. The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first.

For Layer 2 switching cross-connects to work, you must also configure MPLS.

Options

connection-name—Connection name (up to 128 characters in Junos 12.3 and later).

interface interface-name.unit-number—Interface name. Include the logical portion of the name, which corresponds to the logical unit number.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration

RELATED DOCUMENTATION

[Configuring the CCC Connection for Layer 2 Switching Cross-Connects | 1320](#)

[Defining the Connection for Switching Cross-Connects](#)

[MPLS Applications User Guide](#)

l2circuit-control-passthrough

Syntax

```
l2circuit-control-passthrough;
```

Hierarchy Level

```
[edit forwarding-options]
```

Release Information

Statement introduced in Junos OS Release 19.3R1 for PTX Series routers.

Description

Configure the device to allow LACP, LLDP, OAM LFM, and OAM CFM packets to cross the Layer 2 circuit. If the **l2circuit-control-passthrough** statement is not configured, LACP, LLDP, OAM LFM, and OAM CFM packets are classified as control packets and are not transmitted across the Layer 2 circuit.

NOTE: For MX Series routers, the functionality that the **l2circuit-control-passthrough** command provides is performed automatically.

Default

By default, this statement is not configured.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

forwarding-options

[Configuring Layer 2 Switching Cross-Connects Using CCC | 1314](#)

Configuring an MPLS-Based VLAN CCC with Pop, Push, and Swap and Control Passthrough

lsp-switch

Syntax

```
lsp-switch connection-name {  
    transmit-lsp label-switched-path;  
    receive-lsp label-switched-path;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols connections],  
[edit protocols connections]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure Layer 2 switching cross-connects.

Options

connection-name—Connection name.

receive-lsp label-switched-path—Name of the LSP from the connection's source.

transmit-lsp label-switched-path—Name of the LSP to the connection's destination.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the Connection for Layer 2 Switching TCCs](#) | 1333

output-interface (CCC)

Syntax

```
output-interface [interface-name 1 interface-name n];
```

Hierarchy Level

```
[edit protocols connections p2mp-transmit-switch p2mp-transmit-switch-name]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Description

Specify one or more output interfaces to switch traffic on an incoming CCC interface to one or more outgoing CCC interfaces.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring CCC Switching for Point-to-Multipoint LSPs](#) | 1338

p2mp-receive-switch

Syntax

```
p2mp-receive-switch point-to-multipoint-switch-name {  
    output-interface [ interface-name.unit-number ];  
    receive-p2mp-lsp receiving-point-to-multipoint-lsp;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols connections],  
[edit protocols connections]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure the CCC switch for a point-to-multipoint LSP on the egress PE router.

Options

point-to-multipoint-switch-name—Point-to-multipoint CCC receive switch name.

output-interface *interface-name.unit-number*—Name of the egress interfaces for the point-to-multipoint LSP traffic. You can configure multiple output interfaces.

receive-p2mp-lsp *receiving-point-to-multipoint-lsp*—Name of the point-to-multipoint LSP that is switched to the output interface.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Point-to-Multipoint LSP Switch on Egress PE Routers](#) | 1339

p2mp-transmit-switch

Syntax

```
p2mp-transmit-switch point-to-multipoint-transmit-switch-name {  
    input-interface interface-name.unit-number;  
    transmit-p2mp-lsp transmitting-point-to-multipoint-lsp;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols connections],  
[edit protocols connections]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure the CCC switch for the point-to-multipoint LSP on the ingress PE router.

Options

point-to-multipoint-transmit-switch-name—Point-to-multipoint CCC transmit switch name.

input-interface input-interface-name.unit-number—Specify the name of the interface carrying incoming traffic to be switched to the point-to-multipoint LSP.

transmit-p2mp-lsp transmitting-point-to-multipoint-lsp—Specify the name of the point-to-multipoint LSP carrying traffic to the CCC switch on the egress PE router.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Point-to-Multipoint LSP Switch on Ingress PE Routers](#) | 1339

remote-interface-switch

Syntax

```
remote-interface-switch connection-name {  
    interface interface-name.unit-number;  
    transmit-lsp label-switched-path;  
    receive-lsp label-switched-path;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols connections],  
[edit protocols connections]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure MPLS LSP tunnel cross-connects.

Options

connection-name—Connection name.

interface interface-name.unit-number—Interface name. Include the logical portion of the name, which corresponds to the logical unit number.

receive-lsp label-switched-path—Name of the LSP from the connection's source.

transmit-lsp label-switched-path—Name of the LSP to the connection's destination.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring MPLS LSP Tunnel Cross-Connects Using CCC](#) | 1324

GMPLS Configuration Statements

IN THIS CHAPTER

- address (Peer) | 2143
- control-channel (Protocols Link Management Peer) | 2144
- dead-interval | 2145
- disable (GMPLS) | 2146
- disable (OSPF) | 2147
- export (Protocols BGP) | 2149
- hello-dead-interval | 2150
- hello-interval (LMP) | 2151
- hello-interval (Protocols OSPF) | 2152
- import | 2154
- instance-type | 2156
- interface (Protocols Link Management) | 2159
- label-switched-path (Protocols Link Management) | 2160
- link-management | 2161
- lmp-control-channel | 2163
- lmp-protocol | 2164
- local-address (Protocols Link Management) | 2165
- l2circuit | 2166
- passive (Protocols Link Management) | 2168
- peer (Protocols LMP) | 2169
- peer-interface (Protocols OSPF) | 2170
- remote-address (for LMP Control Channel) | 2171
- remote-address (for LMP Traffic Engineering) | 2172
- remote-id | 2173
- retransmission-interval | 2174
- retransmit-interval (OSPF) | 2175
- retry-limit (Protocols Link Management) | 2177
- route-distinguisher | 2178

- [te-link](#) | [2182](#)
- [traceoptions \(Protocols Link Management\)](#) | [2184](#)
- [transit-delay \(OSPF\)](#) | [2186](#)
- [upstream-label](#) | [2188](#)
- [vrf-target](#) | [2189](#)

address (Peer)

Syntax

```
address ip-address;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name],
[edit protocols link-management peer peer-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Specify the ID of the peer.

Default

The loopback address is advertised.

Options

ip-address—IP address of the peer.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring the ID for LMP Peers](#)

control-channel (Protocols Link Management Peer)

Syntax

```
control-channel control-channel-interface;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name],  
[edit protocols link-management peer peer-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Specify the control channel interface for the peer.

Options

control-channel-interface—Name of the control channel interface.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring LMP Peers*

dead-interval

Syntax

```
dead-interval seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ospf area area-id peer-interface interface-name],
[edit logical-systems logical-system-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit logical-systems logical-system-name protocols (ospf | ospf3) area area-id virtual-link],
[edit logical-systems logical-system-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area
  area-id interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3) area area-id
  interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3) area area-id
  virtual-link],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast
  | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit protocols ospf area area-id peer-interface interface-name],
[edit protocols (ospf | ospf3) area area-id interface interface-name],
[edit protocols (ospf | ospf3) area area-id virtual-link],
[edit protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols (ospf | ospf3) area area-id virtual-link],
[edit routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast)
  area area-id interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Support for the **realm** statement introduced in Junos OS Release 9.2.

Support for the **realm** statement introduced in Junos OS Release 9.2 for EX Series switches.

Description

Specify how long OSPF waits before declaring that a neighboring routing device is unavailable. This is an interval during which the routing device receives no hello packets from the neighbor.

Options

seconds—Interval to wait.

Range: 1 through 65,535 seconds

Default: Four times the hello interval—40 seconds (broadcast and point-to-point networks); 120 seconds (nonbroadcast multiple access (NBMA) networks)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring OSPF Timers

Configuring RSVP and OSPF for LMP Peer Interfaces

[hello-interval](#) | [2152](#)

disable (GMPLS)**Syntax**

```
disable;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management te-link te-link-name],
[edit protocols link-management te-link te-link-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Disable a traffic engineering link.

Default

The configured object is enabled (operational) unless explicitly disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Disabling the Traffic Engineering Link for LMP Peers

disable (OSPF)

Syntax

```
disable;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols (ospf | ospf3)],
[edit logical-systems logical-system-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit logical-systems logical-system-name protocols ospf area area-id peer-interfaceinterface-name],
[edit logical-systems logical-system-name protocols (ospf | ospf3) virtual-link],
[edit logical-systems logical-system-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast)],
[edit logical-systems logical-system-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3)],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3) virtual-link],
[edit logical-systems logical-system-name routing-instances routing-instances protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast)],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit protocols (ospf | ospf3)],
[edit protocols (ospf | ospf3) area area-id interface interface-name],
[edit protocols (ospf | ospf3) virtual-link],
[edit protocols ospf area area-id peer-interface interface-name],
[edit protocols ospf area area-id virtual-link neighbor-id router-id transit-area area-id],
[edit protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast)],
[edit protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols (ospf | ospf3)],
[edit routing-instances routing-instance-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols (ospf | ospf3) virtual-link],
[edit routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast)],
[edit routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area area-id interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Support for the **realm** statement introduced in Junos OS Release 9.2.

Support for the **realm** statement introduced in Junos OS Release 9.2 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

Disable OSPF, an OSPF interface, or an OSPF virtual link.

By default, control packets sent to the remote end of a virtual link must be forwarded using the default topology. In addition, the transit area path consists only of links that are in the default topology. You can disable a virtual link for a configured topology, but not for a default topology. Include the **disable** statement at the **[edit protocols ospf area *area-id* virtual-link neighbor-id router-id transit-area *area-id* topology *name*]** hierarchy level.

NOTE: If you disable the virtual link by including the **disable** statement at the **[edit protocols ospf area *area-id* virtual-link neighbor-id router-id transit-area *area-id*]** hierarchy level, you disable the virtual link for all topologies, including the default topology. You cannot disable the virtual link only in the default topology.

Default

The configured object is enabled (operational) unless explicitly disabled.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Understanding OSPF Configurations

Configuring RSVP and OSPF for LMP Peer Interfaces

export (Protocols BGP)

Syntax

```
export [ policy-names ];
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp],
[edit logical-systems logical-system-name protocols bgp group group-name],
[edit logical-systems logical-system-name protocols bgp group group-name neighbor address],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name
  neighbor address],
[edit protocols bgp],
[edit protocols bgp group group-name],
[edit protocols bgp group group-name neighbor address],
[edit routing-instances routing-instance-name protocols bgp],
[edit routing-instances routing-instance-name protocols bgp group group-name],
[edit routing-instances routing-instance-name protocols bgp group group-name neighbor address]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

Apply one or more policies to routes being exported from the routing table into BGP.

If you specify more than one policy, they are evaluated in the order specified, from left to right, and the first matching filter is applied to the route. If no routes match the filters, the routing table exports into BGP only the routes that it learned from BGP. If an action specified in one of the policies manipulates a route characteristic, the policy framework software carries the new route characteristic forward during the evaluation of the remaining policies. For example, if the action specified in the first policy of a chain sets a route's metric to 500, this route matches the criterion of **metric 500** defined in the next policy.

Options

policy-names—Name of one or more policies.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Routing Policies to Control BGP Route Advertisements](#)

[Routing Policies, Firewall Filters, and Traffic Policers User Guide](#)

[import](#) | [2154](#)

hello-dead-interval

Syntax

```
hello-dead-interval milliseconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name lmp-protocol],
[edit protocols link-management peer peer-name lmp-protocol]
```

Release Information

Statement introduced in Junos OS Release 8.0.

Description

Specify how long the Link Management Protocol (LMP) waits before declaring the control channel to be dead. This is an interval during which the router receives no LMP hello packets from the neighbor on a control that is active or up.

Options

milliseconds—Interval to wait before declaring the control channel to be dead.

Range: 500 through 300,000

Default: 500 milliseconds (three times the hello interval)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Hello Message Intervals for LMP Control Channels](#)

[hello-interval \(LMP\)](#) | [2151](#)

hello-interval (LMP)

Syntax

```
hello-interval milliseconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name lmp-protocol],  
[edit protocols link-management peer peer-name lmp-protocol]
```

Release Information

Statement introduced in Junos OS Release 8.1.

Description

Specify how often the router sends Link Management Protocol (LMP) hello packets.

Options

milliseconds—Length of time between hello packets.

Range: 150 through 300,000

Default: 150 milliseconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring Hello Message Intervals for LMP Control Channels

[hello-dead-interval](#) | **2150**

hello-interval (Protocols OSPF)

Syntax

```
hello-interval seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ospf area area-id peer-interface interface-name],
[edit logical-systems logical-system-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit logical-systems logical-system-name protocols (ospf | ospf3) area area-id virtual-link],
[edit logical-systems logical-system-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area
  area-id interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3) area area-id
  interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3) area area-id
  virtual-link],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast
  | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit protocols ospf area area-id peer-interface interface-name],
[edit protocols (ospf | ospf3) area area-id interface interface-name],
[edit protocols (ospf | ospf3) area area-id virtual-link],
[edit protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols (ospf | ospf3) area area-id virtual-link],
[edit routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast)
  area area-id interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Support for the **realm** statement introduced in Junos OS Release 9.2.

Support for the **realm** statement introduced in Junos OS Release 9.2 for EX Series switches.

Description

Specify how often the routing device sends hello packets out the interface. The hello interval must be the same for all routing devices on a shared logical IP network.

Options

seconds—Time between hello packets, in seconds.

Range: 1 through 255 seconds

Default: 10 seconds (broadcast and point-to-point networks); 30 seconds (nonbroadcast multiple access [NBMA] networks)

Required Privilege Level

- routing—To view this statement in the configuration.
- routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

<i>Example: Configuring OSPF Timers</i>
<i>Configuring RSVP and OSPF for LMP Peer Interfaces</i>
dead-interval 2145

import

Syntax

```
import [ policy-names ];
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols bgp],
[edit logical-systems logical-system-name protocols bgp group group-name],
[edit logical-systems logical-system-name protocols bgp group group-name neighbor address],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols bgp group group-name
  neighbor address],
[edit protocols bgp],
[edit protocols bgp group group-name],
[edit protocols bgp group group-name neighbor address],
[edit routing-instances routing-instance-name protocols bgp],
[edit routing-instances routing-instance-name protocols bgp group group-name],
[edit routing-instances routing-instance-name protocols bgp group group-name neighbor address]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

Apply one or more routing policies to routes being imported into the Junos OS routing table from BGP.

If you specify more than one policy, they are evaluated in the order specified, from left to right, and the first matching filter is applied to the route. If no match is found, BGP places into the routing table only those routes that were learned from BGP routing devices. The policy framework software evaluates the routing policies in a chain sequentially. If an action specified in one of the policies manipulates a route characteristic, the policy framework software carries the new route characteristic forward during the evaluation of the remaining policies. For example, if the action specified in the first policy of a chain sets a route's metric to 500, this route matches the criterion of **metric 500** defined in the next policy.

It is also important to understand that in Junos OS, although an import policy (inbound route filter) might reject a route, not use it for traffic forwarding, and not include it in an advertisement to other peers, the router retains these routes as hidden routes. These hidden routes are not available for policy or routing purposes. However, they do occupy memory space on the router. A service provider filtering routes to

control the amount of information being kept in memory and processed by a router might want the router to entirely drop the routes being rejected by the import policy.

Hidden routes can be viewed by using the **show route receive-protocol bgp neighbor-address hidden** command. The hidden routes can then be retained or dropped from the routing table by configuring the **keep all | none** statement at the **[edit protocols bgp]** or **[edit protocols bgp group group-name]** hierarchy level.

The rules of BGP route retention are as follows:

- By default, all routes learned from BGP are retained, except those where the AS path is looped. (The AS path includes the local AS.)
- By configuring the **keep all** statement, all routes learned from BGP are retained, even those with the local AS in the AS path.
- By configuring the **keep none** statement, all routes received are discarded. When this statement is configured and the inbound policy changes, Junos OS re-advertises all the routes advertised by the peer.

Options

policy-names—Name of one or more policies.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring BGP Interactions with IGPs

Configuring Routing Policies to Control BGP Route Advertisements

Understanding Routing Policies

[export](#) | [2149](#)

instance-type

Syntax

```
instance-type type;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit routing-instances routing-instance-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

virtual-switch and **layer2-control** options introduced in Junos OS Release 8.4.

Statement introduced in Junos OS Release 9.2 for EX Series switches.

Statement introduced in Junos OS Release 11.3 for the QFX Series.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

mpls-internet-multicast option introduced in Junos OS Release 11.1 for the EX Series, M Series, MX Series, and T Series.

evpn option introduced in Junos OS Release 13.2 for MX 3D Series routers.

evpn option introduced in Junos OS Release 17.3 for the QFX Series.

forwarding option introduced in Junos OS Release 14.2 for the PTX Series.

mpls-forwarding option introduced in Junos OS Release 16.1 for the MX Series.

evpn-vpws option introduced in Junos OS Release 17.1 for MX Series routers.

Support for logical systems on MX Series routers added in Junos OS Release 17.4R1.

Description

Define the type of routing instance.

Options

NOTE: On ACX Series routers, you can configure only the forwarding, virtual router, and VRF routing instances.

type—Can be one of the following:

- **evpn**—(MX 3D Series routers, QFX switches and EX9200 switches)—Enable an Ethernet VPN (EVPN) on the routing instance.
hierarchy level.
- **evpn-vpws**—Enable an Ethernet VPN (EVPN) Virtual Private Wire Service (VPWS) on the routing instance.

- **forwarding**—Provide support for filter-based forwarding, where interfaces are not associated with instances. All interfaces belong to the default instance. Other instances are used for populating RPD learned routes. For this instance type, there is no one-to-one mapping between an interface and a routing instance. All interfaces belong to the default instance inet.0.
- **l2backhaul-vpn**—Provide support for Layer 2 wholesale VLAN packets with no existing corresponding logical interface. When using this instance, the router learns both the outer tag and inner tag of the incoming packets, when the **instance-role** statement is defined as **access**, or the outer VLAN tag only, when the **instance-role** statement is defined as **nni**.
- **l2vpn**—Enable a Layer 2 VPN on the routing instance. You must configure the **interface**, **route-distinguisher**, **vrf-import**, and **vrf-export** statements for this type of routing instance.
- **layer2-control**—(MX Series routers only) Provide support for RSTP or MSTP in customer edge interfaces of a VPLS routing instance. This instance type cannot be used if the customer edge interface is multihomed to two provider edge interfaces. If the customer edge interface is multihomed to two provider edge interfaces, use the default BPDU tunneling.
- **mpls-forwarding**—(MX Series routers only) Allow filtering and translation of route distinguisher (RD) values in IPv4 and IPv6 VPN address families on both routes received and routes sent for selected BGP sessions. In particular, for Inter-AS VPN Option-B networks, this option can prevent the malicious injection of VPN labels from one peer AS boundary router to another.
- **mpls-internet-multicast**—(EX Series, M Series, MX Series, and T Series routers only) Provide support for ingress replication provider tunnels to carry IP multicast data between routers through an MPLS cloud, using MBGP or next-generation MVPN.
- **no-forwarding**—This is the default routing instance. Do not create a corresponding forwarding instance. Use this routing instance type when a separation of routing table information is required. There is no corresponding forwarding table. All routes are installed into the default forwarding table. IS-IS instances are strictly nonforwarding instance types.
- **virtual-router**—Enable a virtual router routing instance. This instance type is similar to a VPN routing and forwarding instance type, but used for non-VPN-related applications. You must configure the **interface** statement for this type of routing instance. You do not need to configure the **route-distinguisher**, **vrf-import**, and **vrf-export** statements.
- **virtual-switch**—(MX Series routers, EX9200 switches, and QFX switches only) Provide support for Layer 2 bridging. Use this routing instance type to isolate a LAN segment with its Spanning Tree Protocol (STP) instance and to separate its VLAN identifier space.

- **vpls**—Enable VPLS on the routing instance. Use this routing instance type for point-to-multipoint LAN implementations between a set of sites in a VPN. You must configure the **interface**, **route-distinguisher**, **vrf-import**, and **vrf-export** statements for this type of routing instance.
- **vrf**—VPN routing and forwarding (VRF) instance. Provides support for Layer 3 VPNs, where interface routes for each instance go into the corresponding forwarding table only. Required to create a Layer 3 VPN. Create a VRF table (**instance-name.inet.0**) that contains the routes originating from and destined for a particular Layer 3 VPN. For this instance type, there is a one-to-one mapping between an interface and a routing instance. Each VRF instance corresponds with a forwarding table. Routes on an interface go into the corresponding forwarding table. You must configure the **interface**, **route-distinguisher**, **vrf-import**, and **vrf-export** statements for this type of routing instance.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring the Instance Type

Configuring EVPN Routing Instances

Configuring EVPN Routing Instances on EX9200 Switches

Configuring Virtual Router Routing Instances

Example: Configuring Filter-Based Forwarding on the Source Address

Example: Configuring Filter-Based Forwarding on Logical Systems

interface (Protocols Link Management)

Syntax

```
interface interface-name;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management te-link te-link-name],  
[edit protocols link-management te-link te-link-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Specify the egress router interface.

Options

interface-name—Name of the interface to the egress router.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [LMP Configuration Overview](#)

label-switched-path (Protocols Link Management)

Syntax

```
label-switched-path lsp-name;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management te-link te-link-name],  
[edit protocols link-management te-link te-link-name]
```

Release Information

Statement introduced in Junos OS Release 7.4.

Description

Specify the label-switched path (LSP) to be used by the forwarding adjacency.

Options

lsp-name—Name of the LSP.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring Forwarding Adjacencies*

link-management

Syntax

```

link-management {
  peer peer-name {
    address ip-address;
    control-channel control-channel-interface;
    imp-control-channel control-channel-interface {
      remote-address ip-address;
    }
    imp-protocol {
      hello-dead-interval milliseconds;
      hello-interval milliseconds;
      passive;
      retransmission-interval milliseconds;
      retry-limit number;
    }
    te-link te-link-name;
  }
  te-link te-link-name {
    disable;
    interface interface-name {
      disable;
      local-address ip-address;
      remote-address ip-address;
      remote-id id-number;
    }
    local-address ip-address;
    remote-address ip-address;
    remote-id id-number;
  }
  traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable>;
    flag flag <flag-modifier> <disable>;
  }
}

```

Hierarchy Level

```

[edit logical-systems logical-system-name protocols],
[edit protocols]

```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Enable Link Management Protocol (LMP) on the router.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *LMP Configuration Overview*

Imp-control-channel

Syntax

```
imp-control-channel control-channel-interface {  
    remote-address ip-address;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name],  
[edit protocols link-management peer peer-name]
```

Release Information

Statement introduced in Junos OS Release 8.1.

Description

Specify the Link Management Protocol (LMP) control channel interface for the peer.

Options

control-channel-interface—Name of the control channel interface.

The remaining statement is described separately in this chapter.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring the LMP Control Channel Interface for the Peer*

Imp-protocol

Syntax

```
imp-protocol {  
    hello-dead-interval milliseconds;  
    hello-interval milliseconds;  
    passive;  
    retransmission-interval milliseconds;  
    retry-limit number;  
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name],  
[edit protocols link-management peer peer-name]
```

Release Information

Statement introduced in Junos OS Release 8.1.

Description

Configure attributes of Link Management Protocol (LMP) to establish and maintain the LMP control channel for the peer.

Options

The statements are described separately in this chapter.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring LMP Peers](#)

local-address (Protocols Link Management)

Syntax

```
local-address ip-address;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management te-link te-link-name],
[edit logical-systems logical-system-name protocols link-management te-link te-link-name interface interface-name],
[edit protocols link-management te-link te-link-name],
[edit protocols link-management te-link te-link-name interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Specify the local IP address associated with the traffic engineering link. If you configure the local IP address, you must also configure the [remote-address](#) statement.

Options

local-address—Local IP address of the traffic engineering link.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring the Local IP Address for Traffic Engineering Links

Configuring the Local IP Address for Forwarding Adjacencies

[remote-address \(for LMP Traffic Engineering\)](#) | [2172](#)

I2circuit

Syntax

```

I2circuit {
  auto-sensing{
    password password;
  }
  local-switching {
    interface interface-name {
      description text;
      end-interface {
        interface interface-name;
        protect-interface interface-name;
      }
      ignore-mtu-mismatch;
      protect-interface interface-name;
    }
  }
  neighbor address {
    interface interface-name {
      backup-neighbor address;
      bandwidth (bandwidth | ctnumber bandwidth);
      community community-name;
      connection-protection;
      (control-word | no-control-word);
      description text;
      egress-protection;
      encapsulation-type type;
      ignore-encapsulation-mismatch;
      ignore-mtu-mismatch;
      mtu mtu-number;
      protect-interface interface-name;
      pseudowire-status-tlv hot-standby-vc-on;
      psn-tunnel-endpoint address;
      virtual-circuit-id identifier;
    }
  }
  traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable>;
    flag flag <flag-modifier> <disable>;
  }
}

```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols],
[edit protocols]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.

Description

Enables a Layer 2 circuit.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring ATM Trunking on Layer 2 Circuits

Configuring Bandwidth Allocation and Call Admission Control in Layer 2 Circuits

Configuring Interfaces for Layer 2 Circuits

Configuring LDP for Layer 2 Circuits

Configuring Policies for Layer 2 Circuits

Configuring Static Layer 2 Circuits

Tracing Layer 2 Circuit Operations

passive (Protocols Link Management)

Syntax

```
passive;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name lmp-protocol],  
[edit protocols link-management peer peer-name lmp-protocol]
```

Release Information

Statement introduced in Junos OS Release 8.1.

Description

Specify that the router not configure the Link Management Protocol (LMP) control channels but wait for the remote peer to configure the LMP control channels.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Preventing the Local Peer from Initiating LMP Negotiation

peer (Protocols LMP)

Syntax

```
peer peer-name {
  address ip-address;
  control-channel control-channel-interface;
  imp-control-channel control-channel-interface;
  imp-protocol {
    hello-dead-interval milliseconds;
    hello-interval milliseconds;
    passive;
    retransmission-interval milliseconds;
    retry-limit number;
  }
  te-link te-link-name;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management],
[edit protocols link-management]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Imp-protocol statement and substatements added in Junos OS Release 8.1.

Description

Configure a network peer.

Options

peer-name—Name of the network peer.

The remaining statements are described separately in this chapter.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring LMP Peers](#)

peer-interface (Protocols OSPF)

Syntax

```
peer-interface interface-name {
  disable;
  dead-interval seconds;
  hello-interval seconds;
  retransmit-interval seconds;
  transit-delay seconds;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ospf area area-id],
[edit protocols ospf area area-id]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure a peer interface.

Options

interface-name—Name of the peer interface. To configure all interfaces, you can specify **all**.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring OSPFv2 Peer interfaces

Configuring RSVP and OSPF for LMP Peer Interfaces

Configuring a Hierarchy of RSVP LSPs to Tunnel Multiple RSVP LSPs Over a Single RSVP LSP

remote-address (for LMP Control Channel)

Syntax

```
remote-address ip-address;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name lmp-control-channel  
  control-channel-interface],  
[edit protocols link-management peer peer-name lmp-control-channel control-channel-interface]
```

Release Information

Statement introduced in Junos OS Release 8.1.

Description

Specify the remote IP address for the Link Management Protocol (LMP) control channel interface.

Options

ip-address—Remote IP address mapped to the LMP control channel interface.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring the Remote IP Address for LMP Control Channels*

remote-address (for LMP Traffic Engineering)

Syntax

```
remote-address ip-address;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management te-link te-link-name],
[edit logical-systems logical-system-name protocols link-management te-link te-link-name interface interface-name],
[edit protocols link-management te-link te-link-name],
[edit protocols link-management te-link te-link-name interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Specify the remote IP address for the traffic engineering link. If you configure the remote IP address, you must also configure the [local-address](#) statement.

Options

ip-address—Remote IP address mapped to the traffic engineering link.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring the Remote IP Address for Traffic Engineering Links](#)

[Configuring the Remote IP Address for Forwarding Adjacencies](#)

[local-address \(Protocols Link Management\)](#) | 2165

remote-id

Syntax

```
remote-id id-number;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management te-link te-link-name],  
[edit logical-systems logical-system-name protocols link-management te-link te-link-name interface interface-name],  
[edit protocols link-management te-link te-link-name],  
[edit protocols link-management te-link te-link-name interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Specify the ID assigned to a traffic engineering link or an interface (resource) on the peer node.

Options

id-number—ID number for the remote device.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring the Remote ID for Traffic Engineering Links*

retransmission-interval

Syntax

```
retransmission-interval milliseconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name lmp-protocol],  
[edit protocols link-management peer peer-name lmp-protocol]
```

Release Information

Statement introduced in Junos OS Release 8.1.

Description

Specify how often Link Management Protocol (LMP) sends Config and LinkSummary messages on the LMP control channel.

Options

milliseconds—Length of time between Config messages.

Range: 500 through 300,000

Default: 500 milliseconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[retry-limit \(Protocols Link Management\) | 2177](#)

Controlling Message Exchange for LMP Control Channels

retransmit-interval (OSPF)

Syntax

```
retransmit-interval seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ospf area area-id peer-interface interface-name],
[edit logical-systems logical-system-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit logical-systems logical-system-name protocols (ospf | ospf3) area area-id virtual-link],
[edit logical-systems logical-system-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area
  area-id interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3) area area-id
  interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (ospf | ospf3) area area-id
  virtual-link],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast
  | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit protocols ospf area area-id peer-interface interface-name],
[edit protocols (ospf | ospf3) area area-id interface interface-name],
[edit protocols (ospf | ospf3) area area-id virtual-link],
[edit protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols (ospf | ospf3) area area-id virtual-link],
[edit routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast)
  area area-id interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Support for the **realm** statement introduced in Junos OS Release 9.2.

Support for the **realm** statement introduced in Junos OS Release 9.2 for EX Series switches.

Description

Specify how long the routing device waits to receive a link-state acknowledgment packet before retransmitting link-state advertisements (LSAs) to an interface's neighbors.

Options

seconds—Interval to wait.

Range: 1 through 65,535 seconds

Default: 5 seconds

NOTE: You must configure LSA retransmit intervals to be equal to or greater than 3 seconds to avoid triggering a retransmit trap, because Junos OS delays LSA acknowledgments by up to 2 seconds.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring OSPF Timers

Configuring RSVP and OSPF for LMP Peer Interfaces

retry-limit (Protocols Link Management)

Syntax

```
retry-limit number;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management peer peer-name lmp-protocol],  
[edit protocols link-management peer peer-name lmp-protocol]
```

Release Information

Statement introduced in Junos OS Release 8.1.

Description

Specify how many times the Link Management Protocol (LMP) sends Config and LinkSummary messages on the LMP control channel without receiving an appropriate acknowledgment before it logs a message and restarts the LMP control channel configuration process.

Options

number—Maximum number of times messages are sent without receiving an acknowledgment.

Range: 3 through 1000

Default: 3

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[retransmission-interval](#) | [2174](#)

Controlling Message Exchange for LMP Control Channels

route-distinguisher

Syntax

```
route-distinguisher (as-number:id | ip-address:id);
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn mesh-group
  mesh-group-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls mesh-group
  mesh-group-name],
[edit routing-instances routing-instance-name],
[edit routing-instances routing-instance-name protocols l2vpn mesh-group mesh-group-name],
[edit routing-instances routing-instance-name protocols vpls mesh-group mesh-group-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Support at **[edit routing-instances *routing-instance-name* protocols vpls mesh-group *mesh-group-name*]**

hierarchy level introduced in Junos OS Release 11.2.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Support at **[edit routing-instances *routing-instance-name* protocols l2vpn mesh-group *mesh-group-name*]**

hierarchy level introduced in Junos OS Release 13.2.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Series switches.

Statement introduced in cRPD Release 19.4R1.

Description

Specify an identifier attached to a route, enabling you to distinguish to which VPN or virtual private LAN service (VPLS) the route belongs. Each routing instance must have a unique route distinguisher (RD) associated with it. The RD is used to place bounds around a VPN so that the same IP address prefixes can be used in different VPNs without having them overlap. If the instance type is **vrf**, the **route-distinguisher** statement is required.

For Layer 2 VPNs and VPLS, if you configure the **l2vpn-use-bgp-rules** statement, you must configure a unique RD for each PE router participating in the routing instance.

For other types of VPNs, we recommend that you use a unique RD for each provider edge (PE) router participating in specific routing instance. Although you can use the same RD on all PE routers for the same VPN routing instance, if you use a unique RD, you can determine the customer edge (CE) router from which a route originated within the VPN.

For Layer 2 VPNs and VPLSs, if you configure mesh groups, the RD in each mesh group must be unique.



CAUTION: We strongly recommend that if you change an RD that has already been configured, or change the routing-instance type from **virtual-router** to **vrf**, make the change during a maintenance window, as follows:

1. Deactivate the routing instance.
2. Change the RD.
3. Activate the routing instance.

This is not required if you are configuring the RD for the first time.

Options

as-number:number—as-number is an assigned AS number, and **number** is any 2-byte or 4-byte value. The AS number can be from 1 through 4,294,967,295. If the AS number is a 2-byte value, the administrative number is a 4-byte value. If the AS number is 4-byte value, the administrative number is a 2-byte value. An RD consisting of a 4-byte AS number and a 2-byte administrative number is defined as a type 2 RD in RFC 4364 *BGP/MPLS IP VPNs*.

NOTE: In Junos OS Release 9.1 and later, the numeric range for AS numbers is extended to provide BGP support for 4-byte AS numbers, as defined in RFC 4893, *BGP Support for Four-octet AS Number Space*. All releases of Junos OS support 2-byte AS numbers. To configure an RD that includes a 4-byte AS number, append the letter “L” to the end of the AS number. For example, an RD with the 4-byte AS number 7,765,000 and an administrative number of 1,000 is represented as **77765000L:1000**.

In Junos OS Release 9.2 and later, you can also configure a 4-byte AS number using the AS dot notation format of two integer values joined by a period: *<16-bit high-order value in decimal>.<16-bit low-order value in decimal>*. For example, the 4-byte AS number of 65,546 in the plain-number format is represented as 1.10 in AS dot notation format.

ip-address:id—IP address (**ip-address** is a 4-byte value) within your assigned prefix range and a 2-byte value for the **id**. The IP address can be any globally unique unicast address.

Range: 0 through 4,294,967,295 ($2^{32} - 1$). If the router you are configuring is a BGP peer of a router that does not support 4-byte AS numbers, you need to configure a local AS number. For more information, see *Using 4-Byte Autonomous System Numbers in BGP Networks Technology Overview*.

NOTE: For Ethernet VPN (EVPN), an RD that includes zero as the **id** value is reserved for the default EVPN routing instance by default. Because the same RD cannot be assigned for two routing instances, using a **ip-address:id** RD for another routing instance (default-switch), where the **id** value is zero, throws a commit error.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

<i>Example: Configuring BGP Route Target Filtering for VPNs</i>
<i>Example: Configuring FEC 129 BGP Autodiscovery for VPWS</i>
<i>Configuring EVPN Routing Instances</i>
<i>Configuring Routing Instances on PE Routers in VPNs</i>
<i>Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)</i>
<i>Configuring an MPLS-Based Layer 3 VPN (CLI Procedure)</i>
<i>path-selection</i>

te-link

Syntax

```
te-link te-link-name {
  disable;
  ethernet-vlan;
  interface interface-name {
    disable;
    local-address ip-address;
    remote-address ip-address;
    remote-id id-number;
  }
  local-address ip-address;
  remote-address ip-address;
  remote-id id-number;
}
```

Hierarchy Level

```
[edit protocols link-management],
[edit protocols link-management peer peer-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

ethernet-vlan option introduced in Junos OS Release 14.2.

Description

Represent a collection of physical ports or time slots. Assign a traffic engineering link to the specified network peer.

Options

te-link-name—Name of the collection of physical ports or the name of the time slots.

disable—Disable the traffic engineering link or an interface to a traffic engineering link.

The remaining statements are explained separately..

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring LMP Traffic Engineering Links*

traceoptions (Protocols Link Management)

Syntax

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag <flag-modifier> <disable>;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols link-management],
[edit protocols link-management]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Support for **hello-packets**, **packets**, and **state** flags added in Junos OS Release 8.1.

Description

Trace options for the LMP protocol.

Options

disable—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as **all**.

filename—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory `/var/log`.

files number—(Optional) Maximum number of trace files. When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**, then **trace-file.1**, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Range: 2 through 1000

Default: 2 files

If you specify a maximum number of files, you must also include the **size** statement to specify the maximum file size.

flag—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements.

- **all**—Trace all available operations
- **hello-packets**—Trace hello packets on any LMP control channel
- **init**—Output from the initialization messages

- **packets**—Trace all packets other than hello packets on any LMP control channel
- **parse**—Operation of the parser
- **process**—Operation of the general configuration
- **route-socket**—Operation of route socket events
- **routing**—Operation of the routing protocols
- **server**—Server processing operations
- **show**—**show** command servicing operations
- **state**—Trace state transitions of the LMP control channels and traffic engineering links

flag-modifier—(Optional) Modifier for the tracing flag. You can specify one or more of these modifiers:

- **detail**—Provide detailed trace information
- **receive**—Packets being received
- **send**—Packets being transmitted

no-world-readable—(Optional) Prevent all users from reading the log file.

size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches this size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Syntax: **xk** to specify KB, **xm** to specify MB, or **xg** to specify GB

Range: 10 KB through the maximum file size supported on your system

Default: 1 MB

If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

world-readable—(Optional) Enable log file access for all users.

Required Privilege Level

routing and trace—To view this statement in the configuration.

routing-control and trace-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Tracing LMP Traffic | 1256](#)

Network Management and Monitoring Guide

transit-delay (OSPF)

Syntax

```
transit-delay seconds;
```

Hierarchy Level

```
[edit logical-systems logical-system-name protocols ospf area area-id peer-interface interface-name],
[edit logical-systems logical-system-name protocols (ospf | ospf3) area area-id interface interface-name],
[edit logical-systems logical-system-name protocols (ospf | ospf3) area area-id virtual-link],
[edit logical-systems logical-system-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area
  area-id interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf area area-id interface
  interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf area area-id
  virtual-link],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast
  | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit protocols ospf area area-id peer-interface interface-name],
[edit protocols (ospf | ospf3) area area-id interface interface-name],
[edit protocols (ospf | ospf3) area area-id virtual-link],
[edit protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast) area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols ospf area area-id interface interface-name],
[edit routing-instances routing-instance-name protocols ospf area area-id virtual-link],
[edit routing-instances routing-instance-name protocols ospf3 realm (ipv4-unicast | ipv4-multicast | ipv6-multicast)
  area area-id interface interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Support for the **realm** statement introduced in Junos OS Release 9.2.

Support for the **realm** statement introduced in Junos OS Release 9.2 for EX Series switches.

Description

Set the estimated time required to transmit a link-state update on the interface. When calculating this time, make sure to account for transmission and propagation delays.

You should never have to modify the transit delay time.

Options

seconds—Estimated time, in seconds.

Range: 1 through 65,535 seconds

Default: 1 second

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Example: Configuring OSPF Timers

Configuring RSVP and OSPF for LMP Peer Interfaces

upstream-label

Syntax

```
upstream-label {  
  vlan-id vlan-id;  
}
```

Hierarchy Level

```
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
```

Release Information

Statement introduced in Junos OS Release 14.2.

Description

Specify the upstream label for the bidirectional label-switched path (LSP).

Options

vlan-id *vlan-id*—VLAN ID to be used for the Generalized MPLS (GMPLS) VLAN LSP at the ingress provider edge (PE) to customer edge (CE) link.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring MPLS LSPs for GMPLS](#) | 1257

vrf-target

Syntax

```
vrf-target {
    community;
    auto
    import community-name;
    export community-name;
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn mesh-group
mesh-group-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols vpls mesh-group
mesh-group-name],
[edit routing-instances routing-instance-name protocols evpn vni-options],
[edit routing-instances routing-instance-name protocols l2vpn mesh-group mesh-group-name],
[edit routing-instances routing-instance-name protocols vpls mesh-group mesh-group-name],
[edit switch-options]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 11.1 for EX Series switches.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Series switches. **auto option** was also added at this time.

auto option added in Junos OS Release 19.1R1 for MX series.

Statement introduced in cRPD Release 19.4R1.

Description

Specify a virtual routing and forwarding (VRF) target community. If you configure the **community** option only, default VRF import and export policies are generated that accept and tag routes with the specified target community. The purpose of the **vrf-target** statement is to simplify the configuration by allowing you to configure most statements at the **[edit routing-instances]** hierarchy level. In effect, this statement configures a single policy for import and a single policy for export to replace the per-VRF policies for every community.

You can still create more complex policies by explicitly configuring VRF import and export policies using the **import** and **export** options.

Options

community—Community name.

auto—Automatically derives the route target (RT). The auto-derived route targets have higher precedence over manually configured RT in vrf-target, vrf-export policies, and vrf-import policies.

NOTE: Auto-derived route targets are supported only in virtual switch and EVPN routing instances.

import community-name—Allowed communities accepted from neighbors.

export community-name—Allowed communities sent to neighbors.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring Policies for the VRF Table on PE Routers in VPNs

Example: Configuring FEC 129 BGP Autodiscovery for VPWS

PCEP Configuration Statements

IN THIS CHAPTER

- [pcep | 2192](#)
- [delegation-cleanup-timeout | 2193](#)
- [delegation-priority | 2195](#)
- [destination-ipv4-address | 2196](#)
- [destination-port | 2197](#)
- [label-switched-path-template | 2198](#)
- [lsp-cleanup-timer | 2199](#)
- [lsp-external-controller | 2201](#)
- [max-unknown-messages | 2202](#)
- [max-unknown-requests | 2203](#)
- [message-rate-limit | 2204](#)
- [pce | 2205](#)
- [pce-group \(PCE\) | 2208](#)
- [pce-group \(Protocols PCEP\) | 2209](#)
- [pce-type | 2210](#)
- [querier \(performance-monitoring\) | 2211](#)
- [traceoptions \(PCE\) | 2213](#)
- [traceoptions \(Protocols PCEP\) | 2215](#)
- [update-rate-limit | 2217](#)

pcep

Syntax

```
pcep {  
  message-rate-limit messages-per-minute;  
  pce pce-id;  
  pce-group pce-group-id;  
  traceoptions;  
  update-rate-limit updates-per-minute;  
}
```

Hierarchy Level

[edit protocols]

Release Information

Statement introduced in Junos OS Release 12.3.

Statement introduced in Junos OS Release 16.3R for QFX Series switches.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Configure the Path Computation Client (PCC) parameters.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Support of the Path Computation Element Protocol for RSVP-TE Overview | 1349](#)

[Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE | 1367](#)

[Example: Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support of PCE-Initiated Point-to-Point LSPs | 1384](#)

[Example: Configuring Path Computation Element Protocol for MPLS RSVP-TE with Support for PCE-Controlled Point-to-Multipoint LSPs | 1399](#)

delegation-cleanup-timeout

Syntax

```
delegation-cleanup-timeout seconds;
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series switches added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Specify the amount of time (in seconds) that a Path Computation Client (PCC) must wait before returning control of all LSPs to the routing protocol process after a PCEP session with the main active stateful Path Computation Element (PCE) is disconnected.

NOTE: In compliance with *draft-ietf-pce-stateful-pce-09*, revoking of PCE-initiated LSP delegations by a PCC happens in a make-before-break fashion before the LSPs are redelegated to an alternate PCE. Starting in Junos OS Release 18.1R1, the **lsp-cleanup-timer** must be greater than or equal to the **delegation-cleanup-timeout** for the PCC to revoke the LSP delegations. If not, the redelegation timeout interval for the PCC can be set to infinity, where the LSP delegations to that PCE remain intact until specific action is taken by the PCC to change the parameters set by the PCE.

Options

seconds—Time (in seconds) that a PCC must wait before returning control of all LSPs to the routing protocol process after a PCEP session with the main active stateful PCE is disconnected.

A value of 0 indicates immediate delegation cleanup.

Range: 0 through 2147483647 seconds Prior to Junos OS Release 18.4R1, the maximum range value is 600 seconds.

Default: 30 seconds

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pce | 2205](#)

delegation-priority

Syntax

```
delegation-priority priority-number;
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series switches added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Specify the priority number of the active stateful Path Computation Element (PCE). This value is used by the Path Computation Client (PCC) to elect a PCE to delegate LSPs. No two PCEs can have the same delegation-priority value. The PCC elects the PCE with a lower priority as the main active stateful PCE to delegate LSPs.

Options

priority-number—Priority number of the active stateful PCE.

Range: 1 through 65535

Default: 0 (no priority is set)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pce](#) | [2205](#)

destination-ipv4-address

Syntax

```
destination-ipv4-address ipv4-address;
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series switches added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Specify the IPv4 address of the Path Computation Element (PCE) to which the Path Computation Client (PCC) should connect.

Options

ipv4-address—IPv4 address of the PCE.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[pce](#) | [2205](#)

destination-port

Syntax

```
destination-port port-number;
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFXswitches added in Junos OS Release 16.1R3.

Description

Specify the TCP port number of the Path Computation Element (PCE) to which the Path Computation Client (PCC) should connect.

Options

port-number—Destination TCP port number.

Range: 1 through 65535

Default: 4189

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pce](#) | [2205](#)

label-switched-path-template

Syntax

```
label-switched-path-template {  
    (default-template | lsp-template-name);  
}
```

Hierarchy Level

```
[edit protocols mpls lsp-external-controller lsp-external-controller]
```

Release Information

Statement introduced in Junos OS Release 13.3.

Description

Specify the LSP template with parameters for setting up the PCE-initiated LSPs when the PCE initiating the LSP does not provide the PCE-initiated parameters. When **label-switched-path-template** is not configured, the default LSP parameters are used.

Options

default-template—Specify that the default LSP template be used for the dynamically generated PCE-initiated LSPs.

lsp-template-name—Specify the name of the LSP template to be used for setting up PCE-initiated LSPs.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pcep](#) | [2192](#)

lsp-cleanup-timer

Syntax

```
lsp-cleanup-timer seconds;
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]  
[edit protocols pcep pce-group group-id]
```

Release Information

Statement introduced in Junos OS Release 13.3.

Description

Specify the amount of time (in seconds) that the Path Computation Client (PCC) must wait before deleting any non-delegated Path Computation Element (PCE)-initiated LSPs from the failed PCE after a PCEP session terminates.

NOTE: In compliance with *draft-ietf-pce-stateful-pce-09*, revoking of PCE-initiated LSP delegations by a PCC happens in a make-before-break fashion before the LSPs are redelegated to an alternate PCE. Starting in Junos OS Release 18.1R1, the **lsp-cleanup-timer** must be greater than or equal to the **delegation-cleanup-timeout** for the PCC to revoke the LSP delegations. If not, the redelegation timeout interval for the PCC can be set to infinity, where the LSP delegations to that PCE remain intact until specific action is taken by the PCC to change the parameters set by the PCE.

Options

seconds—Time (in seconds) that the PCC must wait before deleting any non-delegated PCE-initiated LSPs from the failed PCE after a PCEP session terminates. Non-delegated PCE-initiated LSPs are deleted immediately.

Range: 0 through 2147483647 seconds

Default: 60

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pcep](#) | **2192**

lsp-external-controller

Syntax

```
lsp-external-controller controller-name;
```

Hierarchy Level

```
[edit protocols mpls],  
[edit protocols mpls label-switched-path lsp-name]  
[edit protocols spring-traffic-engineering]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Statement introduced in Junos OS Release 16.1R3 for QFX Series switches.

Support for ACX Series added in Junos OS Release 17.1.

Support at the **[edit protocols spring-traffic-engineering]** hierarchy level introduced in Junos OS Release 17.2.

Support at the following hierarchy levels introduced in Junos OS Release 20.1R1: **[edit protocols source-packet-routing source-routing-path *name* , [edit protocols source-packet-routing source-routing-path *name* primary *name* , and [edit protocols source-packet-routing source-routing-path-template *name* .**

Description

Enable external path computing capability for the device.

Options

controller-name—Name of the external path computing entity. By default, *pccd* is the only allowed LSP external controller.

Values: *pccd*

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[pcep | 2192](#)

[PCEP Configuration | 1347](#)

max-unknown-messages

Syntax

```
max-unknown-messages messages-per-minute;
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series switches added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Specify the number of unknown messages per minute that the Path Computation Client (PCC) can receive at maximum after which the PCEP session is closed.

Options

messages-per-minute—Number of unknown messages per minute that the PCC can receive at maximum after which the PCEP session is closed. Recommended value is 5. If the number of unknown messages received by the PCC is greater than or equal to the maximum number, the PCEP session is closed.

Range: 1 through 16384

Default: 0 (disabled or no limit)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[pce](#) | [2205](#)

max-unknown-requests

Syntax

```
max-unknown-requests requests-per-minute;
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]  
[edit protocols pcep pce-group group-id]
```

Release Information

Statement introduced in Junos OS Release 13.3.

Description

Specifies the number of unknown requests per minute that the Path Computation Client (PCC) can receive at maximum after which the PCEP session is terminated.

Options

requests-per-minute—Number of unknown requests per minute that the PCC can receive at maximum after which the PCEP session is terminated.

Range: 0 through 16384 (0 disables this statement)

Default: 5

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pce](#) | [2205](#)

message-rate-limit

Syntax

```
message-rate-limit messages-per-minute;
```

Hierarchy Level

```
[edit protocols pcep]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Specify the number of messages per minute that the Path Computation Client (PCC) can receive at maximum.

Options

messages-per-minute—Number of messages per minute that the PCC can receive at maximum.

Range: 1 through 16384

Default: 0 (disabled or no limit)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pcep](#) | [2192](#)

pce

Syntax

```
pce pce-id {
    authentication-key key;
    authentication-key-chain key-chain;
    delegation-cleanup-timeout seconds;
    delegation-priority priority-number;
    destination-ipv4-address ipv4-address;
    destination-port port-number;
    local-address ip-address;
    lsp-cleanup-timer seconds;
    lsp-provisioning;
    lsp-retry-delegation;
    lsp-retry-delegation-timer seconds;
    max-sid-depth max-sid-depth;
    max-unknown-messages messages-per-minute;
    max-unknown-requests requests-per-minute;
    p2mp-lsp-init-capability;
    p2mp-lsp-report-capability;
    p2mp-lsp-update-capability;
    pce-group pce-group-name;
    pce_traffic_steering;
    pce-type ;
    request-timer seconds;
    request-priority priority;
    spring-capability;
    traceoptions ;
}
```

Hierarchy Level

```
[edit protocols pcep]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series switches added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

lsp-cleanup-timer, **lsp-provisioning**, **max-unknown-requests**, **request-timer**, and **request-priority** options introduced in Junos OS Release 13.3.

authentication-key key, **authentication-key-chain key-chain**, and **p2mp-lsp-report-capability** options introduced in Junos OS Release 16.1.

max-sid-depth and **spring-capability** options introduced in Junos OS Release 17.2.

p2mp-lsp-init-capability and **p2mp-lsp-update-capability** options introduced in Junos OS Release 18.3R1 on all platforms.

pce_traffic_steering option introduced in Junos OS Release 19.4R1 on all platforms.

Description

Configure per-Path Computation Element (PCE) parameters.

Options

pce-id—IP address of the PCE.

authentication-key key—(Optional) Authentication password. It can be up to 126 characters. Characters can include any ASCII strings. If you include spaces, enclose all characters in quotation marks (" ").

It is recommended to define and bind an authentication key for securing a PCEP session, as opposed to binding an authentication keychain.

authentication-key-chain key-chain—(Optional) Authentication keychain password. It can be up to 126 characters. Characters can include any ASCII strings. If you include spaces, enclose all characters in quotation marks (" ").

local-address ip-address—(Optional) IP address of the local end of the PCEP session, the PCC.

lsp-retry-delegation—(Optional) Enable retry LSP delegation process.

lsp-retry-delegation-timer—(Optional) Specify the amount of time (in seconds) that the Path Computation Client (PCC) must wait before retrying delegation of Path Computation Element (PCE)-initiated LSPs in case of delegation failure or re-delegation.

Default: 3600 seconds

Range: 0 through 4294967294 seconds

max-sid-depth—(Optional) Specify the maximum value for service identifier (SID) depth.

Default: 5

Range: 1 through 5

p2mp-lsp-init-capability—(Optional) Capability to provision point-to-multipoint RSVP-TE LSPs by a PCE. By default, this capability is not supported on a PCC, and should be explicitly configured to enable PCE-initiated point-to-multipoint LSPs.

p2mp-lsp-report-capability—(Optional) Capability to report point-to-multipoint RSVP-TE LSPs to a PCE. By default, this capability is not supported on a PCC, and should be explicitly configured to enable reporting of point-to-multipoint LSPs to a PCE.

p2mp-lsp-update-capability—(Optional) Capability to update point-to-multipoint RSVP-TE LSP parameters by a PCE. By default, this capability is not supported on a PCC, and should be explicitly configured to enable updating of PCE-initiated point-to-multipoint LSPs.

pce_traffic_steering—(Optional) Configure the flow specification capability (also called traffic steering functionality) for enabling the mapping of PCE-initiated point-to-multipoint LSPs to an MVPN routing-instance.

spring-capability—(Optional) Enable SPRING-based provisioning for the PCE.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[pcep | 2192](#)

[PCEP Configuration | 1347](#)

pce-group (PCE)**Syntax**

```
pce-group pce-group-name;
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series switches added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Specify the Path Computation Element (PCE) group to which the configured PCE belongs.

Options

pce-group-name—Name of the PCE group.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[pce | 2205](#)

pce-group (Protocols PCEP)

Syntax

```
pce-group pce-group-id {
  delegation-cleanup-timeout seconds;
  max-unknown-messages messages-per-minute;
  pce-type {
    active stateful;
  }
  traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable>;
    flag (all | pcep);
    no-remote-trace;
  }
}
```

Hierarchy Level

[edit protocols pcep]

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series switches added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Configure the Path Computation Element (PCE) group parameters. A maximum of 10 PCE groups can be configured at any given point in time.

The remaining statements are explained separately.

NOTE: A PCE group can include PCEs that are either only stateful or only active stateful. A combination of stateful PCEs and active stateful PCEs in one PCE group is not supported.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[pcep](#) | [2192](#)

pce-type

Syntax

```
pce-type {  
    active stateful;  
}
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series switches added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Configure the path computation element (PCE) type:

- **active**—Uses LSP state information learned from PCCs to optimize path computations, and actively updates LSP parameters in those PCCs that delegated control over their LSPs to the PCE.
- **stateful**—Uses LSP state information learned from PCCs to optimize path computations, but does not actively update the LSP state. A PCC maintains synchronization with the PCE.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[pce](#) | [2205](#)

querier (performance-monitoring)

Syntax

```

querier {
  delay {
    traffic-class tc-value {
      average-sample-size sample size;
      padding-size size;
      query-interval milliseconds;
      rtt-delay-threshold rtt threshold value;
      twcd-delay-threshold twcd threshold value;
    }
  }
  loss {
    traffic-class tc-value {
      average-sample-size sample size;
      loss-threshold loss threshold value;
      loss-threshold-window number of samples for loss threshold;
      measurement-quantity bytes|packets;
      query-interval milliseconds;
    }
  }
  loss-delay {
    traffic-class tc-value {
      average-sample-size sample size;
      loss-threshold loss threshold value;
      loss-threshold-window number of samples for loss threshold;
      measurement-quantity bytes|packets;
      padding-size size;
      query-interval milliseconds;
      rtt-delay-threshold rtt threshold value;
      twcd-delay-threshold twcd threshold value;
    }
  }
}

```

Hierarchy Level

```

[edit protocols mpls oam performance-monitoring],
[edit protocols mpls label-switched-path lsp-name oam performance-monitoring],
[edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring],
[edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring]

```

Release Information

Statement introduced in Junos OS Release 15.1.

Command introduced in Junos OS Release 16.1R3 for QFX Series switches.

Description

Configure querier options.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

traceoptions (PCE)

Syntax

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag (all | pcep);
  no-remote-trace;
}
```

Hierarchy Level

```
[edit protocols pcep pce pce-id]
```

Description

Configure the Path Computation Element Protocol (PCEP) tracing options.

Options

filename—Name of the file to receive the output of the tracing operation. All files are placed in the directory `/var/log`.

files number—(Optional) Maximum number of trace files. When a trace file named `trace-file` reaches its maximum size, it is renamed `trace-file.0`, then `trace-file.1`, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Range: 2 through 1000 files

Default: 2 files. If you specify a maximum number of files, you must also include the ***size*** statement to specify the maximum file size.

flag—Area of path computation client process (pccd) to enable debugging output.

- **all**—Trace all areas of PCD code.
- **pcep**—Trace Path Computation Element Protocol (PCEP) operations.

no-remote-trace—(Optional) Disable remote tracing options.

no-world-readable—(Optional) Allow only certain users to read the log file.

size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named `trace-file` reaches this size, it is renamed `trace-file.0`. When the trace-file again reaches this size, `trace-file.0` is renamed `trace-file.1` and `trace-file` is renamed `trace-file.0`. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Syntax: ***xk*** to specify KB, ***xm*** to specify MB, or ***xg*** to specify GB.

Range: 10 KB through the maximum file size supported on your system.

Default: 1 MB. If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

world-readable—(Optional) Allow any user to read the log file.

Required Privilege Level

routing and trace—To view this statement in the configuration.

routing-control and trace-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pce](#) | [2205](#)

traceoptions (Protocols PCEP)

Syntax

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag;
  no-remote-trace;
}
```

Hierarchy Level

[edit protocols pcep]

Description

Configure the Path Computation Element Protocol (PCEP) tracing options.

Options

filename—Name of the file to receive the output of the tracing operation. All files are placed in the directory `/var/log`.

files number—(Optional) Maximum number of trace files. When a trace file named `trace-file` reaches its maximum size, it is renamed `trace-file.0`, then `trace-file.1`, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Range: 2 through 1000 files

Default: 2 files. If you specify a maximum number of files, you must also include the ***size*** statement to specify the maximum file size.

flag—Area of path computation client process (pccd) to enable debugging output.

PCEP Tracing Flags

- ***all***—Trace all areas of PCCD code
- ***pccd-config***—All configuration parsing operations
- ***pccd-core***—PCCD core operations
- ***pccd-functions***—PCCD function entries and outs
- ***pccd-main***—PCCD main module
- ***pccd-rpd***—PCCD communication with RPD
- ***pccd-ui***—PCCD user interface handling

no-remote-trace—(Optional) Disable remote tracing options.

no-world-readable—(Optional) Allow only certain users to read the log file.

size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB).

When a trace file named trace-file reaches this size, it is renamed trace-file.0. When the trace-file again reaches this size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Syntax: *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB.

Range: 10 KB through the maximum file size supported on your system.

Default: 1 MB. If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

world-readable—(Optional) Allow any user to read the log file.

Required Privilege Level

routing and trace—To view this statement in the configuration.

routing-control and trace-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pcep](#) | [2192](#)

update-rate-limit

Syntax

```
update-rate-limit updates-per-minute;
```

Hierarchy Level

```
[edit protocols pcep]
```

Release Information

Statement introduced in Junos OS Release 12.3.

Support for PTX Series added in Junos OS Release 14.2.

Support for QFX Series switches added in Junos OS Release 16.1R3.

Support for ACX Series added in Junos OS Release 17.1R1.

Description

Specify the number of updates per minute that the Path Computation Client (PCC) can receive at maximum. Updates above this limit are ignored by the PCC.

Options

updates-per-minute—Number of updates per minute that the PCC can receive at maximum.

Range: 1 through 16384

Default: 0 (disabled or no limit)

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [pcep](#) | [2192](#)

12

PART

Operational Commands

MPLS Operational Commands | **2219**

RSVP Operational Commands | **2473**

LDP Operational Commands | **2546**

CCC and TCC Operational Commands | **2632**

PCEP Operational Commands | **2663**

MPLS Operational Commands

IN THIS CHAPTER

- `clear mpls lsp` | 2221
- `clear mpls container-lsp` | 2223
- `clear performance-monitoring mpls lsp` | 2225
- `monitor mpls delay rsvp` | 2226
- `monitor mpls loss rsvp` | 2232
- `monitor mpls loss-delay rsvp` | 2238
- `ping mpls bgp` | 2243
- `ping mpls lsp-end-point` | 2246
- `ping mpls l2circuit` | 2249
- `ping mpls l2vpn` | 2252
- `ping mpls l3vpn` | 2255
- `request mpls container-lsp` | 2258
- `request mpls lsp adjust-autobandwidth` | 2260
- `show connections` | 2262
- `show dynamic-tunnels database` | 2266
- `show link-management` | 2271
- `show link-management peer` | 2275
- `show link-management routing` | 2278
- `show link-management statistics` | 2282
- `show link-management te-link` | 2285
- `show mpls abstract-hop-membership` | 2288
- `show mpls admin-groups` | 2290
- `show mpls association` | 2292
- `show mpls call-admission-control` | 2294
- `show mpls container-lsp` | 2297
- `show mpls context-identifier` | 2306
- `show mpls correlation label` | 2309
- `show mpls correlation nexthop-id` | 2310

- [show mpls cspf | 2312](#)
- [show mpls diffserv-te | 2315](#)
- [show mpls interface | 2317](#)
- [show mpls egress-protection | 2319](#)
- [show mpls interface | 2322](#)
- [show mpls label usage | 2325](#)
- [show mpls label usage label-range | 2329](#)
- [show mpls lsp | 2332](#)
- [show mpls lsp abstract-computation | 2358](#)
- [show mpls lsp autobandwidth | 2361](#)
- [show mpls path | 2364](#)
- [show mpls srlg | 2366](#)
- [show mpls static-lsp | 2368](#)
- [show performance-monitoring mpls lsp | 2372](#)
- [show route forwarding-table | 2380](#)
- [show route table | 2391](#)
- [show ted database | 2447](#)
- [show ted link | 2459](#)
- [show ted protocol | 2464](#)
- [traceroute mpls bgp | 2466](#)
- [transit \(Chained Composite Next Hops\) | 2470](#)

clear mpls lsp

List of Syntax

[Syntax on page 2221](#)

[Syntax \(EX and QFX Series Switches\) on page 2221](#)

Syntax

```
clear mpls lsp
<all>
<autobandwidth>
<counters>
<logical-system (all | logical-system-name)>
<name name>
<optimize | optimize-aggressive>
<path regular-expression>
<statistics>
```

Syntax (EX and QFX Series Switches)

```
clear mpls lsp
<all>
<autobandwidth>
<name name>
<optimize | optimize-aggressive>
<path regular-expression>
<statistics>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Release the routes and states associated with MPLS label-switched paths (LSPs), and start new LSPs.



CAUTION: This command disconnects existing Resource Reservation Protocol (RSVP) sessions on the ingress routing device. If there is a time lag between the old path being torn down and the new path being set up, this command might impact traffic traveling along the LSPs.

Options

all—Reset and restart all LSPs that originated from this routing device; that is, all LSPs for which this routing device is the ingress routing device. Depending on the number of LSPs involved, it might take a while to restart all the LSPs.

autobandwidth—(Optional) Clear LSP autobandwidth counters.

counters—(Optional) Reset the flap and the MBB counters to zero.

logical-system (**all** | **logical-system-name**)—(Optional) Perform this operation on all logical systems or on a particular logical system.

name **name**—(Optional) Reset and restart the specified LSP or group of LSPs. You can include wildcard characters in the interface name, as described in the *Junos Network Interfaces Configuration Guide*.

optimize | **optimize-aggressive**—(Optional) Run nonpreemptive optimization or aggressive optimization computation now.

path **regular-expression**—(Optional) Clear the specific LSP path matching the specified regular expression.

statistics—(Optional) Clear LSP statistics. You cannot clear the MPLS LSP statistics using a regular expression (**name** and **path** options) on transit routers.

Required Privilege Level

clear

RELATED DOCUMENTATION

[show mpls lsp | 2332](#)

[show rsvp session | 2508](#)

List of Sample Output

[clear mpls lsp all on page 2222](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
clear mpls lsp all
```

```
user@host> clear mpls lsp all
```

clear mpls container-lsp

Syntax

```
clear mpls container-lsp
<autobandwidth>
<history>
<logical-system (all | logical-system-name)>
<member>
<name name>
<optimize | optimize-aggressive>
<statistics>
```

Release Information

Statement introduced in Junos OS Release 14.2.

Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.

Description

Release the routes and states associated with MPLS container label-switched paths (LSPs), and start new LSPs.

Options

none—Reset and restart all LSPs that originated from this routing device; that is, all LSPs for which this routing device is the ingress routing device. Depending on the number of LSPs involved, it might take a while to restart all the LSPs.

autobandwidth—(Optional) Clear LSP autobandwidth counters.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

name *name*—(Optional) Reset and restart the specified LSP or group of LSPs. You can include wildcard characters in the interface name, as described in the *Junos Network Interfaces Configuration Guide*.

optimize | optimize-aggressive—(Optional) Run nonpreemptive optimization or aggressive optimization computation now.

statistics—(Optional) Clear LSP statistics. You cannot clear the MPLS LSP statistics using a regular expression (**name** and **path** options) on transit routers.

Required Privilege Level

clear

RELATED DOCUMENTATION

[show mpls container-lsp | 2297](#)

[request mpls container-lsp | 2258](#)

List of Sample Output

[clear mpls container-lsp on page 2224](#)

[clear mpls container-lsp name on page 2224](#)

[clear mpls container-lsp statistics on page 2224](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear mpls container-lsp

```
user@host> clear mpls container-lsp
```

clear mpls container-lsp name

```
user@host> clear mpls container-lsp name name
```

clear mpls container-lsp statistics

```
user@host> clear mpls container-lsp statistics
```


clear performance-monitoring mpls lsp

Syntax

```
clear performance-monitoring mpls lsp  
<name lsp-name>
```

Release Information

Command introduced in Junos OS Release 15.1.

Description

Restart the performance monitoring statistics.

Options

none—Reset and restart all performance monitoring for all LSPs.

name *lsp-name*—(Optional) Reset and restart performance monitoring for the specified LSP.

Required Privilege Level

clear

RELATED DOCUMENTATION

[performance-monitoring \(Protocols MPLS\) | 1851](#)

[show performance-monitoring mpls lsp | 2372](#)

List of Sample Output

[clear performance-monitoring mpls lsp on page 2225](#)

Output Fields

When you enter this command, performance monitoring is restarted.

Sample Output

```
clear performance-monitoring mpls lsp
```

```
user@host> clear performance-monitoring mpls lsp
```

monitor mpls delay rsvp

Syntax

```
monitor mpls delay rsvp lsp-name
<detail>
<count count>
<interval seconds>
<padding-size padding-size>
<traffic-class traffic-class>
```

Release Information

Command introduced in Junos OS Release 14.2.

Description

Perform an on-demand delay measurement and display the measured values for associated bidirectional MPLS ultimate hop popping (UHP) point-to-point label-switched paths (LSPs).

Options

lsp-name—Name of the associated bidirectional MPLS UHP LSP for which the delay measurement is performed.

detail—(Optional) Display detailed output of the LSP delay measurement.

count count—(Optional) Specify the number of delay measurements to be carried out for the MPLS UHP LSP. For LSP delay measurement, the number of queries sent is the specified count number plus one additional query, because the LSP delay is measured using successive messages.

Default: 10

Range: 1 through 1000000

interval seconds—(Optional) Specify in seconds the interval between two successive query messages.

Range: 1 through 255 seconds

padding-size padding-size— (Optional) Specify the length of padding TLV to be included in the query message.

Range: 0 through 1500

traffic-class traffic-class—(Optional) Specify the traffic class for the LSP delay measurement. When the traffic-class value is not specified, the default traffic-class code-point of 111 is used.

Range: 0 though 7

Required Privilege Level

view

RELATED DOCUMENTATION

[monitor mpls loss rsvp | 2232](#)

[monitor mpls loss-delay rsvp | 2238](#)

[Example: Configuring On-Demand Loss and Delay Measurement | 394](#)

List of Sample Output

[monitor mpls lsp delay rsvp count on page 2228](#)

[monitor mpls lsp delay rsvp count detail on page 2229](#)

Output Fields

[Table 37 on page 2227](#) describes the output fields for the **monitor mpls delay rsvp** command. Output fields are listed in the approximate order in which they appear.

Table 37: monitor mpls delay rsvp Output Fields

Field Name	Field Description	Level of Output
Current two-way channel delay	Sum of packet delays, excluding the processing time of the remote provider edge (PE) router.	All Levels
Current round-trip-time	Total time taken for completing round-trip of packet.	All Levels
Best two-way channel delay	Best available two-way channel delay count.	All Levels
Worst two-way channel delay	Worst available two-way channel delay count.	All Levels
Average two-way channel delay	Average of the available two-way channel delay counts.	All Levels
Best round-trip-time	Best available round-trip-time count.	All Levels
Worst round-trip-time	Worst available round-trip-time count.	All Levels
Average round-trip-time	Average of the available round-trip-time counts.	All Levels
Average forward delay variation	Average of the variation in forward delay.	All Levels
Average reverse delay variation	Average of the variation in reverse delay.	All Levels

Table 37: monitor mpls delay rsvp Output Fields (continued)

Field Name	Field Description	Level of Output
DM queries sent	Number of queries sent for delay measurement.	All Levels
DM responses received	Number of responses received for delay measurement queries.	All Levels
DM queries timedout	Number of timed out queries sent for delay measurement.	All Levels
DM responses dropped due to errors	Number of loss measurement responses dropped due to errors.	All Levels
Response code	Status of the messages used for delay measurement. Response code can be one of the following: <ul style="list-style-type: none"> • Success—Successful response code. • Failed—Failed response code. 	detail
Querier transmit timestamp	Timestamp on the query message when the message is sent out the ingress PE router (querier). This is done in the hardware before packet is sent out of an interface.	detail
Responder receive timestamp	Timestamp on the response message when the message is received by the egress PE router (responder). This is done in the hardware before packet is received by an interface.	detail
Responder transmit timestamp	Timestamp on the query message when the message is sent out the egress PE router (responder). This is done in the hardware before packet is sent out of an interface.	detail
Querier receive timestamp	Timestamp on the response message when the message is received by the ingress PE router (querier). This is done in the hardware before packet is received by an interface.	detail

Sample Output

```
monitor mpls lsp delay rsvp count
```

```
user@host> monitor mpls lsp delay rsvp LSP-A count 2
```

```

(1)
Current two-way channel delay      : 44 usecs
Current round-trip-time            : 3243 usecs
(2)
Current two-way channel delay      : 45 usecs
Current round-trip-time            : 1752 usecs

Best two-way channel delay         : 44 usecs
Worst two-way channel delay        : 45 usecs
Average two-way channel delay      : 45 usecs
Best round-trip-time               : 1752 usecs
Worst round-trip-time              : 3243 usecs
Average round-trip-time            : 2498 usecs
Average forward delay variation    : 1 usecs
Average reverse delay variation    : 1 usecs

DM queries sent                    : 2
DM responses received              : 2
DM queries timedout                : 0
DM responses dropped due to errors : 0

```

monitor mpls lsp delay rsvp count detail

user@host> monitor mpls lsp delay rsvp LSP-A count 2 detail

```

(1)
Response code                      : Success
Querier transmit timestamp         : 1404129122 secs, 479955401 nsecs
Responder receive timestamp        : 1404129122 secs, 468519022 nsecs
Responder transmit timestamp       : 1404129122 secs, 470255123 nsecs
Querier receive timestamp          : 1404129122 secs, 481736403 nsecs
Current two-way channel delay      : 44 usecs
Current round-trip-time            : 1781 usecs
(2)
Response code                      : Success
Querier transmit timestamp         : 1404129123 secs, 480926210 nsecs
Responder receive timestamp        : 1404129123 secs, 469488696 nsecs
Responder transmit timestamp       : 1404129123 secs, 471130706 nsecs
Querier receive timestamp          : 1404129123 secs, 482613911 nsecs
Current two-way channel delay      : 45 usecs
Current round-trip-time            : 1687 usecs

```

```

Best two-way channel delay      : 44 usecs
Worst two-way channel delay     : 45 usecs
Average two-way channel delay   : 45 usecs
Best round-trip-time           : 1687 usecs
Worst round-trip-time          : 1781 usecs
Average round-trip-time        : 1734 usecs
Average forward delay variation : 1 usecs
Average reverse delay variation : 1 usecs

DM queries sent                 : 2
DM responses received           : 2
DM queries timedout             : 0
DM responses dropped due to errors : 0
user@host> monitor mpls loss-delay-measurement lsp LSP1_A_to_B count 2
(1)
Current forward loss            : 0 packets
Current forward loss ratio      : 0.000000
Current forward throughput      : 0.957 kpps
Current reverse loss            : 0 packets
Current reverse loss ratio      : 0.000000
Current reverse throughput      : 0.962 kpps
Current two-way channel delay    : 48 usecs
Current round-trip-time         : 3476 usecs
(2)
Current forward loss            : 0 packets
Current forward loss ratio      : 0.000000
Current forward throughput      : 0.599 kpps
Current reverse loss            : 0 packets
Current reverse loss ratio      : 0.000000
Current reverse throughput      : 0.599 kpps
Current two-way channel delay    : 50 usecs
Current round-trip-time         : 1856 usecs

Cumulative forward transmit count : 1557
Cumulative forward loss            : 0 packets
Average forward loss ratio         : 0.000000
Average forward throughput         : 0.778 kpps
Cumulative reverse transmit count  : 1562
Cumulative reverse loss            : 0 packets
Average reverse loss ratio         : 0.000000
Average reverse throughput         : 0.780 kpps

Best two-way channel delay      : 48 usecs
Worst two-way channel delay     : 50 usecs

```

Average two-way channel delay	: 49 usecs
Best round-trip-time	: 1856 usecs
Worst round-trip-time	: 3476 usecs
Average round-trip-time	: 2445 usecs
Average forward delay variation	: 1 usecs
Average reverse delay variation	: 1 usecs
LDM queries sent	: 3
LDM responses received	: 3
LDM queries timedout	: 0
LDM responses dropped due to errors	: 0

monitor mpls loss rsvp

Syntax

```
monitor mpls loss rsvp lsp-name
<detail>
<bytes>
<count count>
<interval seconds>
<traffic-class traffic-class>
```

Release Information

Command introduced in Junos OS Release 14.2.

Description

Perform an on-demand loss measurement and display the measured values for associated bidirectional MPLS ultimate hop popping (UHP) point-to-point label-switched paths (LSPs).

Options

lsp-name—Name of the associated bidirectional MPLS UHP LSP for which the loss measurement is performed.

detail—(Optional) Display detailed output of the LSP loss measurement.

bytes—(Optional) Specify the measurement quantity for the LSP loss measurement as bytes. By default, LSP loss is measured in packets.

NOTE: The byte count of a packet sent or received over a channel counts only the payload, including the total length of that packet and excluding the headers, labels, and framing of the channel itself.

count count—(Optional) Specify the number of loss measurements to be carried out for the MPLS UHP LSP. For LSP loss measurement, the number of queries sent is the specified count number plus one additional query, because the LSP loss is measured using successive messages.

Default: 10

Range: 1 through 1000000

interval seconds—(Optional) Specify in seconds the interval between two successive query messages.

Range: 1 through 255 seconds

traffic-class *traffic-class*—(Optional) Specify the traffic class and enable traffic-class-statistics for the LSP loss measurement.

Range: 0 though 7

Required Privilege Level

view

RELATED DOCUMENTATION

[monitor mpls delay rsvp | 2226](#)

[monitor mpls loss-delay rsvp | 2238](#)

[Example: Configuring On-Demand Loss and Delay Measurement | 394](#)

List of Sample Output

[monitor mpls lsp loss rsvp count on page 2235](#)

[monitor mpls lsp loss rsvp detail on page 2236](#)

Output Fields

[Table 37 on page 2227](#) describes the output fields for the **monitor mpls loss rsvp** command. Output fields are listed in the approximate order in which they appear.

Table 38: monitor mpls loss rsvp Output Fields

Field Name	Field Description	Level of Output
Current forward loss	Difference between the current forward transmit count and the current forward receive count.	All Levels
Current forward loss ratio	Total packet loss (current forward loss divided by current forward transmit count).	All Levels
Current forward throughput	Current forward transmit count divided by 1000.	All Levels
Current reverse loss	Difference between the current reverse transmit count and the current reverse receive count.	All Levels
Current reverse loss ratio	Total packet loss (current reverse loss divided by current reverse transmit count).	All Levels
Current reverse throughput	Current reverse transmit count divided by 1000.	All Levels

Table 38: monitor mpls loss rsvp Output Fields (*continued*)

Field Name	Field Description	Level of Output
Cumulative forward transmit count	Cumulative forward transmit counter value at the time the loss measurement message was originated.	All Levels
Cumulative forward loss	Cumulative forward loss counter value at the time the loss measurement message was originated.	All Levels
Average forward loss ratio	Average packet loss (current forward loss divided by current forward transmit count).	All Levels
Average forward throughput	Average forward transmit count divided by 1000.	All Levels
Cumulative reverse transmit count	Cumulative reverse transmit counter value at the time the loss measurement message was originated.	All Levels
Cumulative reverse loss	Difference between the cumulative reverse transmit count and the cumulative reverse receive count.	All Levels
Average reverse loss ratio	Average packet loss (average reverse loss divided by average reverse transmit count).	All Levels
Average reverse throughput	Average reverse transmit count divided by 1000.	All Levels
LM queries sent	Number of queries sent for loss measurement.	All Levels
LM responses received	Number of responses received for loss measurement queries.	All Levels
LM queries timedout	Number of timed out queries sent for loss measurement.	All Levels
LM responses dropped due to errors	Number of loss measurement responses dropped due to errors.	All Levels
Response code	Status of the messages used for loss measurement. Response code can be one of the following: <ul style="list-style-type: none"> ● Success—Successful response code. ● Failed—Failed response code. 	detail
Origin timestamp	Time and date the loss measurement message is originated without any specific format (NTP and PTP).	detail

Table 38: monitor mpls loss rsvp Output Fields (*continued*)

Field Name	Field Description	Level of Output
Forward transmit count	Forward transmit counter value at the time the loss measurement message was originated.	detail
Forward receive count	Forward receive counter value at the time the loss measurement message was originated.	detail
Reverse transmit count	Reverse transmit counter value at the time the loss measurement message was originated.	detail
Reverse receive count	Reverse receive counter value at the time the loss measurement message was originated.	detail
Current forward transmit count	Difference between the current forward transit count and the previous forward transit count.	detail
Current forward receive count	Difference between the current forward receive count and the previous forward receive count.	detail
Current reverse transmit count	Difference between the current reverse transit count and the previous reverse transit count.	detail
Current reverse receive count	Difference between the current reverse receive count and the previous reverse receive count.	detail

Sample Output

monitor mpls lsp loss rsvp count

user@host> **monitor mpls lsp loss rsvp count 2**

```
(1)
Current forward loss           : 0 packets
Current forward loss ratio     : 0.000000
Current forward throughput     : 1.006 kpps
Current reverse loss           : 0 packets
Current reverse loss ratio     : 0.000000
Current reverse throughput     : 1.007 kpps
```

```

(2)
Current forward loss           : 0 packets
Current forward loss ratio     : 0.000000
Current forward throughput     : 0.559 kpps
Current reverse loss           : 0 packets
Current reverse loss ratio     : 0.000000
Current reverse throughput     : 0.562 kpps

Cumulative forward transmit count : 1559
Cumulative forward loss           : 0 packets
Average forward loss ratio       : 0.000000
Average forward throughput       : 0.782 kpps
Cumulative reverse transmit count : 1563
Cumulative reverse loss         : 0 packets
Average reverse loss ratio       : 0.000000
Average reverse throughput       : 0.784 kpps

LM queries sent                 : 3
LM responses received           : 3
LM queries timedout             : 0
LM responses dropped due to errors : 0

```

monitor mpls lsp loss rsvp detail

user@host> monitor mpls lsp loss rsvp detail

```

(0)
Response code                   : Success
Origin timestamp                : 1404129082 secs, 905571890 nsecs
Forward transmit count          : 83040
Forward receive count           : 83040
Reverse transmit count          : 83100
Reverse receive count           : 83100

(1)
Response code                   : Success
Origin timestamp                : 1404129083 secs, 905048410 nsecs
Forward transmit count          : 83841
Forward receive count           : 83841
Reverse transmit count          : 83904
Reverse receive count           : 83904
Current forward transmit count  : 801
Current forward receive count   : 801
Current forward loss            : 0 packets
Current forward loss ratio      : 0.000000

```

```

Current forward throughput      : 0.801 kpps
Current reverse transmit count  : 804
Current reverse receive count   : 804
Current reverse loss            : 0 packets
Current reverse loss ratio      : 0.000000
Current reverse throughput      : 0.804 kpps
(2)
Response code                   : Success
Origin timestamp                : 1404129084 secs, 904828715 nsecs
Forward transmit count          : 84423
Forward receive count           : 84423
Reverse transmit count          : 84487
Reverse receive count           : 84487
Current forward transmit count   : 582
Current forward receive count    : 582
Current forward loss            : 0 packets
Current forward loss ratio      : 0.000000
Current forward throughput      : 0.582 kpps
Current reverse transmit count   : 583
Current reverse receive count    : 583
Current reverse loss            : 0 packets
Current reverse loss ratio      : 0.000000
Current reverse throughput      : 0.583 kpps

Cumulative forward transmit count : 1383
Cumulative forward loss           : 0 packets
Average forward loss ratio        : 0.000000
Average forward throughput        : 0.692 kpps
Cumulative reverse transmit count : 1387
Cumulative reverse loss           : 0 packets
Average reverse loss ratio        : 0.000000
Average reverse throughput        : 0.694 kpps

LM queries sent                  : 3
LM responses received            : 3
LM queries timedout              : 0
LM responses dropped due to errors : 0

```

monitor mpls loss-delay rsvp

Syntax

```
monitor mpls loss-delay rsvp lsp-name
<detail>
<bytes>
<count count>
<interval seconds>
<padding-size padding-size>
<traffic-class traffic-class>
```

Release Information

Command introduced in Junos OS Release 14.2.

Description

Perform a simultaneous on-demand loss and delay measurement using combined loss and delay messages, and display the measured values for associated bidirectional MPLS ultimate hop popping (UHP) point-to-point label-switched paths (LSPs).

Options

lsp-name—Name of the associated bidirectional MPLS UHP LSP for which the delay measurement is performed.

detail—(Optional) Display detailed output of the LSP delay measurement.

bytes—(Optional) Specify the measurement quantity for the LSP loss measurement as bytes. By default, LSP loss is measured in packets.

NOTE: The byte count of a packet sent or received over a channel counts only the payload, including the total length of that packet and excluding the headers, labels, and framing of the channel itself.

count count—(Optional) Specify the number of delay measurements to be carried out for the MPLS UHP LSP. For LSP delay measurement, the number of queries sent is the specified count number plus one additional query, because the LSP delay is measured using successive messages.

Default: 10

Range: 1 through 1000000

interval seconds—(Optional) Specify in seconds the interval between two successive query messages.

Range: 1 through 255 seconds

padding-size *padding-size*—(Optional) Specify the length of padding TLV to be included in the query message.

Range: 0 through 1500

traffic-class *traffic-class*—(Optional) Specify the traffic class for the LSP delay measurement. When the traffic-class value is not specified, the default traffic-class code-point of 111 is used.

Range: 0 though 7

Required Privilege Level

view

RELATED DOCUMENTATION

[monitor mpls loss rsvp | 2232](#)

[monitor mpls delay rsvp | 2226](#)

[Example: Configuring On-Demand Loss and Delay Measurement | 394](#)

List of Sample Output

[monitor mpls loss-delay rsvp count on page 2239](#)

[monitor mpls loss-delay rsvp count detail on page 2240](#)

Output Fields

For output field descriptions, see the [monitor mpls loss rsvp](#) and [monitor mpls delay rsvp](#) commands.

Sample Output

monitor mpls loss-delay rsvp count

user@host> **monitor mpls loss-delay rsvp LSP-A count 2**

```
(1)
Current forward loss           : 0 packets
Current forward loss ratio     : 0.000000
Current forward throughput     : 0.957 kpps
Current reverse loss           : 0 packets
Current reverse loss ratio     : 0.000000
Current reverse throughput     : 0.962 kpps
Current two-way channel delay   : 48 usecs
Current round-trip-time        : 3476 usecs
(2)
```

```

Current forward loss           : 0 packets
Current forward loss ratio     : 0.000000
Current forward throughput     : 0.599 kpps
Current reverse loss           : 0 packets
Current reverse loss ratio     : 0.000000
Current reverse throughput     : 0.599 kpps
Current two-way channel delay   : 50 usecs
Current round-trip-time        : 1856 usecs

Cumulative forward transmit count : 1557
Cumulative forward loss           : 0 packets
Average forward loss ratio       : 0.000000
Average forward throughput       : 0.778 kpps
Cumulative reverse transmit count : 1562
Cumulative reverse loss          : 0 packets
Average reverse loss ratio       : 0.000000
Average reverse throughput       : 0.780 kpps

Best two-way channel delay       : 48 usecs
Worst two-way channel delay      : 50 usecs
Average two-way channel delay    : 49 usecs
Best round-trip-time            : 1856 usecs
Worst round-trip-time           : 3476 usecs
Average round-trip-time         : 2445 usecs
Average forward delay variation  : 1 usecs
Average reverse delay variation  : 1 usecs

LDM queries sent                : 3
LDM responses received           : 3
LDM queries timedout            : 0
LDM responses dropped due to errors : 0

```

monitor mpls loss-delay rsvp count detail

user@host> monitor mpls loss-delay rsvp LSP-A count 2 detail

```

(0)
Response code                   : Success
Forward transmit count          : 142049
Forward receive count           : 142049
Reverse transmit count          : 142167
Reverse receive count           : 142167
Querier transmit timestamp      : 1404129161 secs, 554422723 nsecs

```



```

Responder receive timestamp      : 1404129161 secs, 542877570 nsecs
Responder transmit timestamp     : 1404129161 secs, 546004545 nsecs
Querier receive timestamp       : 1404129161 secs, 557599327 nsecs
(1)
Response code                   : Success
Forward transmit count          : 143049
Forward receive count           : 143049
Reverse transmit count          : 143168
Reverse receive count           : 143168
Current forward transmit count   : 1000
Current forward receive count    : 1000
Current forward loss             : 0 packets
Current forward loss ratio       : 0.000000
Current forward throughput       : 1.000 kpps
Current reverse transmit count   : 1001
Current reverse receive count    : 1001
Current reverse loss             : 0 packets
Current reverse loss ratio       : 0.000000
Current reverse throughput       : 1.001 kpps
Querier transmit timestamp       : 1404129162 secs, 554465742 nsecs
Responder receive timestamp      : 1404129162 secs, 542919166 nsecs
Responder transmit timestamp     : 1404129162 secs, 545812736 nsecs
Querier receive timestamp       : 1404129162 secs, 557409175 nsecs
Current two-way channel delay    : 49 usecs
Current round-trip-time          : 2943 usecs
(2)
Response code                   : Success
Forward transmit count          : 143677
Forward receive count           : 143677
Reverse transmit count          : 143799
Reverse receive count           : 143799
Current forward transmit count   : 628
Current forward receive count    : 628
Current forward loss             : 0 packets
Current forward loss ratio       : 0.000000
Current forward throughput       : 0.627 kpps
Current reverse transmit count   : 631
Current reverse receive count    : 631
Current reverse loss             : 0 packets
Current reverse loss ratio       : 0.000000
Current reverse throughput       : 0.630 kpps
Querier transmit timestamp       : 1404129163 secs, 556698575 nsecs
Responder receive timestamp      : 1404129163 secs, 545150128 nsecs
Responder transmit timestamp     : 1404129163 secs, 546918408 nsecs

```

Querier receive timestamp	: 1404129163 secs, 558515047 nsecs
Current two-way channel delay	: 48 usecs
Current round-trip-time	: 1816 usecs
Cumulative forward transmit count	: 1628
Cumulative forward loss	: 0 packets
Average forward loss ratio	: 0.000000
Average forward throughput	: 0.813 kpps
Cumulative reverse transmit count	: 1632
Cumulative reverse loss	: 0 packets
Average reverse loss ratio	: 0.000000
Average reverse throughput	: 0.815 kpps
Best two-way channel delay	: 48 usecs
Worst two-way channel delay	: 49 usecs
Average two-way channel delay	: 49 usecs
Best round-trip-time	: 1816 usecs
Worst round-trip-time	: 3176 usecs
Average round-trip-time	: 2645 usecs
Average forward delay variation	: 1 usecs
Average reverse delay variation	: 0 usecs
LDM queries sent	: 3
LDM responses received	: 3
LDM queries timedout	: 0
LDM responses dropped due to errors	: 0

ping mpls bgp

Syntax

```
ping mpls bgp fec
<bottom-label-ttl>
<count count>
<destination address>
<detail>
<exp forwarding-class>
<instance routing-instance-name>
<logical-system (all | logical-system-name)>
<size bytes>
<source source-address>
<sweep>
```

Release Information

Command introduced in Junos OS Release 11.1.

Description

Check the operability of MPLS BGP-signaled label-switched path (LSP) connections. Press Ctrl+c to interrupt a **ping mpls bgp** command.

NOTE: The **ping mpls bgp fec** command only supports single paths.

Options

bottom-label-ttl—(Optional) Time-to-live (TTL) value for the bottom label in the label stack. The range of values is 1 through 255. The default value is **255**.

count count—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is 1 through 1,000,000. The default value is 5.

destination address—(Optional) Specify an address other than the default (127.0.0.1/32) for the ping echo requests. The address can be anything within the 127/8 subnet.

detail—(Optional) Display detailed information about the echo requests sent and received.

exp forwarding-class—(Optional) Value of the forwarding class for the MPLS ping packets.

fec—Ping a BGP-signaled LSP using the forwarding equivalence class (FEC) prefix and length.

instance routing-instance-name—(Optional) Allows you to ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

size bytes—(Optional) Size of the LSP ping request packet (88 through 65468 bytes). Packets are 4-byte aligned. For example, If you enter a size of 89, 90, 91, or 92, the router or switch uses a size value of 92 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 88-byte minimum.

source *source-address*—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

sweep—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

Additional Information

If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only BGP forwarding equivalence classes (FECs).

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

NOTE: In a Juniper-Cisco interoperation network scenario, a point-to-multipoint LSP ping echo reply message from a Cisco device in a different IGP area is dropped on the Juniper device when the source address of the reply message is an interface address other than the loopback address or router ID. Starting in Junos OS Release 13.3X8, 14.2R6, 15.1R4, 15.1F6, 15.1F5-S8, 16.1R1, and later releases, such point-to-multipoint LSP ping echo reply messages are accepted by the Juniper device and the messages get logged as uncorrelated responses.

Required Privilege Level

network

List of Sample Output

[ping mpls bgp fec count on page 2245](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with

error codes are not counted in the received packets count. They are accounted for separately. To display the error codes, use the **detail** option (for example, **ping mpls bgp 10.255.245.222 detail**).

Sample Output

ping mpls bgp fec count

user@host> **ping mpls bgp 10.255.245.222 count 10**

```
!!!xxx...x--- 1sping statistics ---10 packets transmitted, 3 packets received, 70%  
packet loss 4 packets received with error status, not counted as received.
```

ping mpls lsp-end-point

Syntax

```
ping mpls lsp-end-point prefix-name
<count count>
<destination address>
<detail>
<exp forwarding-class>
<instance routing-instance-name>
<logical-system (all | logical-system-name)>
<size bytes>
<source source-address>
<sweep>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

The **size** and **sweep** options were introduced in Junos OS Release 9.6.

The **instance** option was introduced in Junos OS Release 10.0.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Check the operability of MPLS label-switched path (LSP) endpoint connections. Type Ctrl+c to interrupt a **ping mpls** command.

Options

count *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is **1** through **1,000,000**. The default value is **5**.

destination *address*—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

detail—(Optional) Display detailed information about the echo requests sent and received.

exp *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

instance *routing-instance-name*—(Optional) Ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP connection.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

prefix-name—LDP forwarding equivalence class (FEC) prefix or RSVP LSP endpoint address.

size bytes—(Optional) Size of the LSP ping request packet. If the endpoint is LDP-based, the minimum size of the packet is **88** bytes. If the endpoint is RSVP-based, the minimum size of the packet is **100** bytes. The maximum size in either case is **65468** bytes.

source source-address—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

sweep—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

Additional Information

If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

NOTE: In a Juniper-Cisco interoperation network scenario, a point-to-multipoint LSP ping echo reply message from a Cisco device in a different IGP area is dropped on the Juniper device when the source address of the reply message is an interface address other than the loopback address or router ID. Starting in Junos OS Release 13.3X8, 14.2R6, 15.1R4, 15.1F6, 15.1F5-S8, 16.1R1, and later releases, such point-to-multipoint LSP ping echo reply messages are accepted by the Juniper device and the messages get logged as uncorrelated responses.

Required Privilege Level

network

List of Sample Output

[ping mpls lsp-end-point detail on page 2248](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An **x** indicates that an echo reply was received with an error code. Packets with an error code are not counted in the received packets count. They are accounted for separately.

Sample Output

ping mpls lsp-end-point detail

user@host> **ping mpls lsp-end-point 10.255.245.119 detail**

```
Route to end point address is via LDP FEC
Request for seq 1, to interface 67, label 100032
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 67, label 100032
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 67, label 100032
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 67, label 100032
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 67, label 100032
Reply for seq 5, return code: Egress-ok
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```


ping mpls l2circuit

Syntax

```
ping mpls l2circuit (interface interface-name | virtual-circuit virtual-circuit-id neighbor address)
<count count>
<destination address>
<detail>
<exp forwarding-class>
<logical-system (all | logical-system-name)>
reply-mode (application-level-control-channel | ip-udp | no-reply)
<size bytes>
<source source-address>
<sweep>
<v1>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

The **size** and **sweep** options were introduced in Junos OS Release 9.6.

The **reply-mode** option and its suboptions are introduced in Junos OS Release 10.4R1.

Description

Check the operability of the MPLS Layer 2 circuit connections. Type Ctrl+c to interrupt a **ping mpls l2circuit** command.

NOTE: This command is not supported on EX4500 and EX4550 switches.

Options

count *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is **1** through **1,000,000**. The default value is **5**.

destination *address*—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

detail—(Optional) Display detailed information about the echo requests sent and received.

exp *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

interface *interface-name*—Ping an interface configured for the Layer 2 circuit on the egress provider edge (PE) router.

logical-system (**all** | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

reply-mode—(Optional) Reply mode for the ping request. This option has the following suboptions:

application-level-control-channel—Reply using an application level control channel.

ip-udp—Reply using an IPv4 or IPv6 UDP packet.

no-reply—Do not reply to the ping request.

NOTE: The **reply-mode** option and its suboptions **application-level-control-channel**, **ip-udp**, and **no-reply** are also available in Junos OS Release 10.2R4 and 10.3R2.

size bytes—(Optional) Size of the label-switched path (LSP) ping request packet (**96** through **65468** bytes). Packets are 4-byte aligned. For example, If you enter a size of 97, 98, 99, or 100, the router or switch uses a size value of 100 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 96-byte minimum.

source source-address—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

sweep—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

v1—(Optional) Use the type 9 Layer 2 circuit type, length, and value (TLV).

virtual-circuit virtual-circuit-id neighbor address—Ping the virtual circuit identifier on the egress PE router or switch and the specified neighbor, testing the integrity of the Layer 2 circuit between the ingress and egress PE routers or switches.

Additional Information

You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the egress PE router or switch (the router or switch receiving the MPLS echo packets) to ping a Layer 2 circuit.

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

Required Privilege Level

network

List of Sample Output

[ping mpls l2circuit interface on page 2251](#)

[ping mpls l2circuit virtual-circuit detail on page 2251](#)

[ping mpls l2circuit interface <interface-name> reply-mode on page 2251](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with an error code are not counted in the received packets count. They are accounted for separately.

Sample Output

ping mpls l2circuit interface

```
user@host> ping mpls l2circuit interface so-1/0/0.1
```

```
Request for seq 1, to interface 69, labels <100000, 100208>, packet size 100
Reply for seq 1, return code: Egress-ok, time: 0.439 ms
```

ping mpls l2circuit virtual-circuit detail

```
user@host> ping mpls l2circuit virtual-circuit 200 neighbor 10.255.245.122/32 detail
```

```
Request for seq 1, to interface 68, labels <100048, 100128>, packet size 100

Reply for seq 1, return code: Egress-ok time: 0.539 ms
```

ping mpls l2circuit interface <interface-name> reply-mode

```
user@host> ping mpls l2circuit interface lt-1/2/0.21 reply-mode application-level-control-channel
```

```
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

ping mpls l2vpn

Syntax

```
ping mpls l2vpn (instance instance-name local-site-id local-site-id-number remote-site-id remote-site-id-number |
  interface interface-name)
<bottom-label-ttl>
<count count>
<destination address>
<detail>
<exp forwarding-class>
<logical-system (all | logical-system-name)>
reply-mode (application-level-control-channel | ip-udp | no-reply)
<size bytes>
<source source-address>
<sweep>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

The **size** and **sweep** options were introduced in Junos OS Release 9.6.

The **reply-mode** option and its suboptions are introduced in Junos OS Release 10.4R1.

Description

Check the operability of MPLS Layer 2 virtual private network (VPN) connections. Type Ctrl+c to interrupt a **ping mpls l2vpn** command.

Options

bottom-label-ttl—(Optional) Display the time-to-live value for the bottom label in the label stack.

count *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is 1 through 1,000,000. The default value is 5.

destination *address*—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

detail—(Optional) Display detailed information about the echo requests sent and received.

exp *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

instance *instance-name* local-site-id *local-site-id-number* remote-site-id *remote-site-id-number*—Ping a combination of the Layer 2 VPN routing instance name, the local site identifier, and the remote site identifier, testing the integrity of the Layer 2 VPN circuit (specified by the identifiers) between the ingress and egress provider edge (PE) routers or switches.

interface *interface-name*—Ping an interface configured for the Layer 2 VPN on the egress PE router or switch.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

reply-mode—(Optional) Reply mode for the ping request. This option has the following suboptions:

application-level-control-channel—Reply using an application level control channel.

ip-udp—Reply using an IPv4 or IPv6 UDP packet.

no-reply—Do not reply to the ping request.

The **reply-mode** option and its suboptions **application-level-control-channel**, **ip-udp**, and **no-reply** are also available in Junos OS Release 10.2R4 and 10.3R2.

size *bytes*—(Optional) Size of the label-switched path (LSP) ping request packet (96 through 65468 bytes). Packets are 4-byte aligned. For example, If you enter a size of 97, 98, 99, or 100, the router or switch uses a size value of 100 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 96-byte minimum.

source *source-address*—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

sweep—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

Additional Information

You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the egress PE router or switch (the router or switch receiving the MPLS echo packets) to ping a Layer 2 circuit.

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

Required Privilege Level

network

List of Sample Output

[ping mpls l2vpn instance on page 2254](#)

[ping mpls l2vpn instance detail on page 2254](#)

[ping mpls l2vpn interface <interface-name> reply-mode on page 2254](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code these packets are not counted in the received packets count. They are accounted for separately.

Sample Output

ping mpls l2vpn instance

```
user@host> ping mpls l2vpn instance vpn1 remote-site-id 1 local-site-id 2
```

```
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

ping mpls l2vpn instance detail

```
user@host> ping mpls l2vpn instance vpn1 remote-site-id 1 local-site-id 2 detail
```

```
Request for seq 1, to interface 68, labels <800001, 100176>
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 68, labels <800001, 100176>
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 68, labels <800001, 100176>
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 68, labels <800001, 100176>
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 68, labels <800001, 100176>
Reply for seq 5, return code: Egress-ok

--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

ping mpls l2vpn interface <interface-name> reply-mode

```
user@host> ping mpls l2vpn interface lt-1/2/0.21 reply-mode ip-udp
```

```
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

ping mpls l3vpn

Syntax

```
ping mpls l3vpn prefix prefix-name
<|l3vpn-name>
<bottom-label-ttl>
<count count>
<destination address>
<detail>
<exp forwarding-class>
<logical-system (all | logical-system-name)>
<size bytes>
<source source-address>
<sweep>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

The **size** and **sweep** options were introduced in Junos OS Release 9.6.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Virtual Chassis and Virtual Chassis Fabric.

Description

Check the operability of a MPLS Layer 3 virtual private network (VPN) connection. Type Ctrl+c to interrupt a **ping mpls l3vpn** command.

Options

bottom-label-ttl—(Optional) Display the time-to-live value for the bottom label in the label stack.

count *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is **1** through **1,000,000**. The default value is **5**.

destination *address*—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

detail—(Optional) Display detailed information about the echo requests sent and received.

exp *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

l3vpn-name—(Optional) Layer 3 VPN name.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

prefix *prefix-name*—Ping to test whether a prefix is present in a provider edge (PE) router's or switch's VPN routing and forwarding (VRF) table, by means of a Layer 3 VPN destination prefix. This option does not test the connection between a PE router or switch and a customer edge (CE) router or switch.

size *bytes*—(Optional) Size of the label-switched path (LSP) ping request packet (96 through 65468 bytes). Packets are 4-byte aligned. For example, If you enter a size of 97, 98, 99, or 100, the router or switch uses a size value of 100 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 96-byte minimum.

source *source-address*—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (lo.0).

sweep—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

Additional Information

You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the egress PE router or switch (the router or switch receiving the MPLS echo packets) to ping a Layer 2 circuit.

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

If the Layer 3 VPN traffic transits a route reflector within the network, the **ping mpls l3vpn** command does not work.

Required Privilege Level

network

List of Sample Output

[ping mpls l3vpn on page 2256](#)

[ping mpls l3vpn detail on page 2257](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code these packets are not counted in the received packets count. They are accounted for separately.

Sample Output

ping mpls l3vpn

```
user@host> ping mpls l3vpn vpn1 prefix 10.255.245.122/32
```



```
!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

ping mpls l3vpn detail

user@host> ping mpls l3vpn vpn1 prefix 10.255.245.122/32 detail

```
Request for seq 1, to interface 68, labels <100128, 100112>
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 68, labels <100128, 100112>
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 68, labels <100128, 100112>
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 68, labels <100128, 100112>
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 68, labels <100128, 100112>
Reply for seq 5, return code: Egress-ok
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

request mpls container-lsp

Syntax

```
request mpls container-lsp
<logical-system (all | logical-system-name)>
<name lsp-name>
<adjust-autobandwidth>
<normalization>
```

Release Information

Command introduced in Junos OS Release 14.2.

Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.

Description

Manually trigger a bandwidth allocation adjustment for the container label-switched path (LSP).

Options

none—Manually trigger a bandwidth allocation adjustment for all active member LSP paths.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

name *lsp-name*—(Optional) Manually trigger a bandwidth allocation adjustment on the specified member LSP only.

adjust-autobandwidth—(Optional) Request LSP autobandwidth adjustment.

normalization—(Optional) Request container LSP normalization.

Required Privilege Level

clear, maintenance

RELATED DOCUMENTATION

[show mpls container-lsp | 2297](#)

[clear mpls container-lsp | 2223](#)

List of Sample Output

[request mpls container-lsp on page 2259](#)

[request mpls container-lsp on page 2259](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
request mpls container-lsp
```

```
user@host> request mpls container-lsp lsp-name normalize
```

```
request mpls container-lsp
```

```
user@host> request mpls container-lsp normalize bandwidth bps
```

request mpls lsp adjust-autobandwidth

List of Syntax

[Syntax on page 2260](#)

[Syntax \(EX and QFX Series Switches\) on page 2260](#)

Syntax

```
request mpls lsp adjust-autobandwidth
<logical-system (all | logical-system-name)>
<name lsp-name>
```

Syntax (EX and QFX Series Switches)

```
request mpls lsp adjust-autobandwidth
<name lsp-name>
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.5 for EX Series switches.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 Series switches.

Description

Manually trigger a bandwidth allocation adjustment for active label-switched paths (LSPs).

Without running this command, the bandwidth adjustment is recomputed at a configurable interval. The default interval is 5 minutes. If you do not want to wait for the periodic adjustment (for example, during a software demonstration), this command is useful.

During bandwidth allocation adjustment, the LSP stays up to enable the bandwidth to be changed without dropping any traffic. This functionality is often referred to as *make-before-break*.

Options

none—Manually trigger a bandwidth allocation adjustment for all active LSP paths.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

name *lsp-name*—(Optional) Manually trigger a bandwidth allocation adjustment on the specified LSP only.

Additional Information

For this command to work properly, the following conditions must exist:

- Automatic bandwidth allocation must be enabled on the LSP. The parameters for adjustment interval and maximum average bandwidth are not reset after you issue the **request mpls lsp adjust-autobandwidth** command.
- The difference between the adjusted bandwidth and the current LSP path bandwidth must be greater than the threshold limit.

Required Privilege Level

clear, maintenance

RELATED DOCUMENTATION

[auto-bandwidth | 1681](#)

[Configuring Automatic Bandwidth Allocation for LSPs | 516](#)

List of Sample Output

[request mpls lsp adjust-auto-bandwidth on page 2261](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
request mpls lsp adjust-auto-bandwidth
```

```
user@host> request mpls lsp adjust-auto-bandwidth
```

show connections

List of Syntax

[Syntax on page 2262](#)

[Syntax \(EX Series Switches\) on page 2262](#)

Syntax

```
show connections
<brief | extensive>
<all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch | remote-interface-switch>
<down | up | up-down>
<history>
<labels>
<logical-system (all | logical-system-name)>
<name>
<status>
```

Syntax (EX Series Switches)

```
show connections
<brief | extensive>
<all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch | remote-interface-switch>
<down | up | up-down>
<history>
<labels>
<name>
<status>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display information about the configured circuit cross-connect (CCC) connections.

Options

none—Display the standard level of output for all configured CCC connections.

all—(Optional) Display all connections.

brief | extensive—(Optional) Display the specified level of output. Use history to display information about connection history. Use labels to display labels used for transmit and receive LSPs. Use status to display information about the connection and interface status.

interface-switch—(Optional) Display interface switch connections only.

lsp-switch—(Optional) Display LSP switch connections only.

p2mp-receive-switch—(Optional) Display point-to-multipoint LSP to local interfaces switch connections only.

p2mp-transmit-switch—(Optional) Display local interface to point-to-multipoint LSP switch connections only.

remote-interface-switch—(Optional) Display remote interface switch connections only.

down | up | up-down—(Optional) Display nonoperational, operational, or both kinds of connections.

history—(Optional) Display information about connection history.

labels—(Optional) Display labels used for transmit and receive.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

name—(Optional) Display information about the specified connection only.

status—(Optional) Display information about the connection and interface status.

Required Privilege Level

view

Output Fields

[Table 39 on page 2263](#) describes the output fields for the **show connections** command. Output fields are listed in the approximate order in which they appear.

Table 39: show connections Output Fields

Field Name	Field Description
CCC and TCC connections [Link Monitoring On Off]	Whether link monitoring is enabled: On or Off .
Legend for Status (St)	Connection or circuit status. See the output's legend for an explanation of the status field values.

Table 39: show connections Output Fields (*continued*)

Field Name	Field Description
Legend for connection types	Type of connection: <ul style="list-style-type: none"> • if-sw—Layer 2 switching cross-connect. • rmt-if—Remote interface switch. While graceful restart is in progress, rmt-if will display a state (St) of Restart. • lsp-sw—LSP stitching cross-connect. While graceful restart is in progress, lsp-sw will display a state (St) of Restart.
Legend for circuit types	Type of circuits: <ul style="list-style-type: none"> • intf—Interface circuit. • tlsp—Transmit LSP circuit. • rlsp—Receive LSP circuit.
Connection/Circuit	Name of the configured CCC connection.
Type	Type of connection.
St	State of the connection.
Time last up	Time that the connection or circuit last transitioned to the Up (operational) state.
# Up trans	Number of times that the connection or circuit has transitioned to the Up (operational) state.

Sample Output

show connections

user@switch> **show connections**

```
CCC and TCC connections [Link Monitoring On]
Legend for status (St)           Legend for connection types
UN -- uninitialized             if-sw:  interface switching
NP -- not present               rmt-if: remote interface switching
WE -- wrong encapsulation       lsp-sw: LSP switching
DS -- disabled
Dn -- down                      Legend for circuit types
-> -- only outbound conn is up  intf -- interface
```



```

<- -- only inbound conn is up      tlsp -- transmit LSP
Up -- operational                   rlsp -- receive LSP
RmtDn -- remote CCC down
Restart -- restarting

```

CCC Graceful restart : Restarting

Connection/Circuit	Type	St	Time last up	# Up trans
IFSW-ed	if-sw	Up	Aug 5 15:39:15	1
so-1/0/2.0	intf	Up		
t1-0/1/2.0	intf	Up		
SW-db	rmt-if	Restart		0
so-1/0/3.0	intf	Up		
pro4-ca	tlsp	Dn		
pro4-ac	rlsp	NP		

show dynamic-tunnels database

Syntax

```
show dynamic-tunnels database
<destination>
<logical-system (all | logical-system-name) >
<table routing-table-name>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

Display dynamic tunnel database information.

Options

none—Display dynamic tunnel database information for all destinations and routing tables.

destination—(Optional) Display database entries for the specified IP address (with optional destination prefix length) only.

logical-system (all | logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.

table routing-table-name—(Optional) Display database entries for the specified table only.

Required Privilege Level

view

List of Sample Output

[show dynamic-tunnels database \(Tunnel Is Up\) on page 2268](#)

[show dynamic-tunnels database \(No Tunnel PIC\) on page 2268](#)

[show dynamic-tunnels database \(Tunnel Is Expiring\) on page 2268](#)

[show dynamic-tunnels database \(Destination Specified\) on page 2269](#)

[show dynamic-tunnels database \(Localization\) on page 2269](#)

[show dynamic-tunnels database \(MPLS-over-UDP Dynamic Tunnels on PTX Series Routers and QFX Series Switches\) on page 2269](#)

[show dynamic-tunnels database \(Segment Routing LSPs\) on page 2270](#)

Output Fields

[Table 40 on page 2267](#) lists the output fields for the **show dynamic-tunnels database** command. Output fields are listed in the approximate order in which they appear.

Table 40: show dynamic-tunnels database Output Fields

Field Name	Field Description
Table	Name of the routing table (for example, inet.0).
Destination-network	Destination IP address and subnet.
Tunnel to	Destination IP address and prefix of the tunnel.
State	State of the tunnel: Up , Up (expires in <i>nn:nn:nn</i>seconds) , or Dn (down).
Reference count	Number of routes across the dynamic tunnel that are currently being resolved.
Next-hop type	Type of tunnel: GRE or UDP (BGP-Signal). <ul style="list-style-type: none"> • GRE or UDP (BGP signal) • SRTE—Segment routing traffic-engineered LSP.
Source address	Source IP address of the tunnel.
Next-hop	IP address of the destination interface.
VPN Label	The label provided by the peer device to identify the VPN through which the packet needs to go. This label is used to identify the VRF for route lookup.
Ingress Route	The IGP route along with the corresponding metric that has been selected for forwarding the tunnel-encapsulated packet.
Localized PFE	Packet Forwarding Engine interface which is the anchor Packet Forwarding Engine for the localized next-hop-based dynamic tunnels. When the anchor Packet Forwarding Engine of the tunnel goes down, it is represented by a # near the Packet Forwarding Engine name.
LSP template name	Name of the segment routing traffic-engineered template configured for dynamic creation of segment routing LSPs.
State	State of the destination interface: Up , Dn , or Dn (no tunnel pic) .
Status	Status of the dynamic segment routing LSP.

Sample Output

show dynamic-tunnels database (Tunnel Is Up)

```
user@host> show dynamic-tunnels database
```

```
Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32
Reference count: 4
Next-hop type: UDP
Source address: 10.255.120.92
Next hop: tunnel-composite, 0x31132f64, nhid 3406
VPN Label: Push 120 Reference count: 3
Ingress Route: 10.255.120.94/32, via metric 2
Traffic Statistics: Packets 241367951, Bytes 356741831578
State: Up
```

show dynamic-tunnels database (No Tunnel PIC)

```
user@host> show dynamic-tunnels database
```

```
Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32 State: Dn
Reference count: 2
Next-hop type: gre
Source address: 10.255.120.92
State: Dn (no tunnel pic)
```

show dynamic-tunnels database (Tunnel Is Expiring)

```
user@host> show dynamic-tunnels database
```

```
Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32 State: Up (expires in 00:14:56 seconds)
Reference count: 0
```

```

Next-hop type: gre
Source address: 10.255.120.92
Next hop: gr-4/3/0.32769
State: Up

```

show dynamic-tunnels database (Destination Specified)

```
user@host> show dynamic-tunnels database 10.255.120.94
```

```

Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32 State: Up
Reference count: 2
Next-hop type: gre
Source address: 10.255.120.92
Next hop: gr-4/3/0.32769
State: Up

```

show dynamic-tunnels database (Localization)

```
user@host> show dynamic-tunnels database
```

```

Destination-network: 1.0.0.0/8
Tunnel to: 1.1.1.6/32
Reference count: 5
Next-hop type: UDP
Source address: 1.1.1.2
Next hop: tunnel-composite, 0xc807930, nhid 1016
Localized PFE: pfe-1/0/0
VPN Label: Push 299808 Reference count: 4
Ingress Route: 1.1.1.6/32, via metric 2
Traffic Statistics: Packets 0, Bytes 0
State: Up

```

show dynamic-tunnels database (MPLS-over-UDP Dynamic Tunnels on PTX Series Routers and QFX Series Switches)

```
user@host> show dynamic-tunnels database
```

```

*- Signal Tunnels #- PFE-down
Table: inet.3

```

```
Destination-network: 22.33.0.0/16
```

```
Destination-network: 22.33.44.0/24
```

show dynamic-tunnels database (Segment Routing LSPs)

```
user@host> show dynamic-tunnels database
```

```
Table: inetcolor.0
```

```
Destination-network: 22.33.44.0:0/24
```

```
Tunnel to: 22.33.44.55:124/64
```

```
Reference count: 2
```

```
Next-hop type: SRTE
```

```
LSP template name: 22.33.44.55:7c:dt-srte-tunnel1
```

```
Status: Initiated/Established
```

show link-management

Syntax

```
show link-management
```

Release Information

Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display Multiprotocol Label Switching (MPLS) peer and traffic engineering link information.

Options

This command has no options.

Required Privilege Level

view

RELATED DOCUMENTATION

show link-management peer 2275
show link-management routing 2278
show link-management statistics 2282
show link-management te-link 2285

List of Sample Output

[show link-management on page 2273](#)

Output Fields

[Table 41 on page 2271](#) describes the output fields for the **show link-management** command. Output fields are listed in the approximate order in which they appear.

Table 41: show link-management Output Fields

Field Name	Field Description
Peer Name	Name of the peer.
System identifier	Internal identifier for the peer. The range of values is 0 through 64,000.
State	State of the peer: Up or Down.

Table 41: show link-management Output Fields (*continued*)

Field Name	Field Description
Control address	Address to which a control channel is established.
CC local ID	Identifier assigned to the control channel by the local peer. The range of values is 1 through 4,294,967,296 .
CC remote ID	Identifier assigned to the control channel by the remote peer. The range of values is 1 through 4,294,967,296 .
State	State of the control channel: Up or Down .
TxSeqNum	Sequence number of the hello message being sent to the peer. The range of values is 1 through 4,294,967,295 .
RcvSeqNum	Sequence number of the last hello message received from the peer. The range of values is 0 through 4,294,967,295 .
Flags	Code that provides information about the control channel. Currently supports only code value R , which indicates that the control channel is restarting after a failure in the control plane, as when the Link Management Protocol (LMP) process starts or restarts.
TE links	Traffic-engineered links that are managed by their peer.
TE link name	Name of the traffic-engineered link.
State	State of the traffic-engineered link: Up , Down , or Init .
Local identifier	Identifier of the local side of the link.
Remote identifier	Identifier of the remote side of the link.
Local address	Address of the local side of the link.
Remote address	Address of the remote side of the link.
Encoding	Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include SDH/SONET , Ethernet , Packet , and PDH .
Switching	Type of switching that can be performed on the traffic-engineered link. Supported values are PSC-1 and Packet .

Table 41: show link-management Output Fields (*continued*)

Field Name	Field Description
Minimum bandwidth	Smallest single allocation of bandwidth possible on the traffic-engineered link. This number is equal to the smallest bandwidth interface that is a member of the traffic-engineered link (in bps).
Maximum bandwidth	Largest single allocation of bandwidth possible on the traffic-engineered link. This number is equal to the largest bandwidth interface that is a member of the link (in bps).
Total bandwidth	Sum of the bandwidth, in bits per second (bps) and megabits per second (Mbps), of all interfaces that are members of the link.
Available bandwidth	Sum of the bandwidths of all interfaces that are members of the link and that are not yet allocated (in bps).
Name	Name of the interface.
State	State of the interface: Up or Down .
Local ID	Identifier of the local side of the interface.
Remote ID	Identifier of the remote side of the interface.
Bandwidth	Bandwidth, in bps or Mbps, of the member interface.
Used	Whether the resource is allocated to an LSP: Yes or No .
LSP-name	LSP name.

Sample Output

show link-management

user@host> **show link-management**

```

Peer name: PEER-A, System identifier: 11973
State: Up, Control address: 10.255.245.4
  CC local ID CC remote ID State      TxSeqNum  RcvSeqNum  Flags
      24547      24547 Up          1027      1026
TE links:
  pro4-ba

```

TE link name: pro4-ba, State: Init
Local identifier: 2662, Remote identifier: 0, Encoding: SDH/SONET, Switching:
PSC-1,
Minimum bandwidth: 155.52Mbps, Maximum bandwidth: 155.52Mbps, Total bandwidth:
155.52Mbps,
Available bandwidth: 155.52Mbps

Name	State	Local ID	Remote ID	Bandwidth Used	LSP-name
so-1/0/2	Up	21271	0	155.52Mbps	No

show link-management peer

Syntax

```
show link-management peer
<name peer-name>
```

Release Information

Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display Multiprotocol Label Switching (MPLS) peer link information.

Options

- none**—Display all peer link information.
- name *peer-name***—(Optional) Display information for the specified peer only.

Required Privilege Level

view

RELATED DOCUMENTATION

show link-management 2271
show link-management routing 2278
show link-management statistics 2282
show link-management te-link 2285

List of Sample Output

[show link-management peer on page 2276](#)

Output Fields

[Table 42 on page 2275](#) describes the output fields for the **show link-management peer** command. Output fields are listed in the approximate order in which they appear.

Table 42: show link-management peer Output Fields

Field Name	Field Description
Peer Name	Name of the peer.
System identifier	Internal identifier for the peer. The range of values is 0 through 64,000.

Table 42: show link-management peer Output Fields (*continued*)

Field Name	Field Description
State	State of the peer: Up or Down .
Control address	Address to which a control channel is established.
Hello interval	How often the routing device sends Link Management Protocol (LMP) hello packets.
Hello dead interval	How long LMP waits before declaring the control channel to be dead. This is an interval during which the routing device receives no LMP hello packets from the neighbor on a control that is active or up.
CC local ID	Identifier assigned to the control channel by the local peer. The range of values is 1 through 4,294,967,296 .
CC remote ID	Identifier assigned to the control channel by the remote peer. The range of values is 1 through 4,294,967,296 .
State	State of the control channel: Up or Down .
TxSeqNum	Sequence number of the hello message being sent to the peer. The range of values is 1 through 4,294,967,295 .
RcvSeqNum	Sequence number of the last hello message received from the peer. The range of values is 0 through 4,294,967,295 .
Flags	Code that provides information about the control channel. Currently supports only code value R , which indicates that the control channel is restarting after a failure in the control plane, as when the Link Management Protocol (LMP) process starts or restarts.
TE links	Traffic-engineered links that are managed by their peer.

Sample Output

show link-management peer

user@host> **show link-management peer**

```
Peer name: sonet, System identifier: 41448
  State: Up, Control address: 70.70.70.70
  Hello interval: 10000, Hello dead interval: 30000
```

CC local ID	CC remote ID	State	TxSeqNum	RcvSeqNum	Flags
3265	0	ConfSnd	1	0	R
TE links:					
to-sonet					

show link-management routing

Syntax

```
show link-management routing
<peer <name name> | te-link <name name>>
<resource <name name>>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display Multiprotocol Label Switching (MPLS) peer or traffic engineering link information from the routing process.

Options

none—Display all peer and traffic-engineered link information.

peer <name name>—(Optional) Display information for all peers or for the specified peer only.

resource <name name>—(Optional) Display information for all resources or for the specified resource only.

te-link <name name>—(Optional) Display information for all traffic-engineered forwarding paths or for the specified path only.

Required Privilege Level

view

RELATED DOCUMENTATION

[show link-management](#) | 2271

[show link-management peer](#) | 2275

[show link-management statistics](#) | 2282

[show link-management te-link](#) | 2285

List of Sample Output

[show link-management routing on page 2280](#)

Output Fields

[Table 43 on page 2279](#) describes the output fields for the **show link-management routing** command. Output fields are listed in the approximate order in which they appear.

Table 43: show link-management routing Output Fields

Field Name	Field Description
Peer Name	Name of the peer.
System identifier	Internal identifier for the peer. The range of values is 0 through 64,000.
State	State of the peer: Up or Down .
Control address	Address to which a control channel is established.
Control channel	Interface over which control packets are sent.
State	State of the control channel.
TE link name	Traffic-engineered link name.
State	State of the traffic-engineered link: Up or Down .
Local identifier	Identifier of the local side of the link.
Remote identifier	Identifier of the remote side of the link.
Local address	Address of the local side of the link.
Remote address	Address of the remote side of the link.
Encoding	Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include SDH/SONET , Ethernet , and Packet .
Minimum bandwidth	Smallest single allocation of bandwidth, in bits per second (bps) or megabits per second (Mbps), possible on the traffic-engineered link. This number is equal to the smallest bandwidth interface that is a member of the traffic-engineered link.
Maximum bandwidth	Largest single allocation of bandwidth, in bps or Mbps, possible on the traffic-engineered link. This number is equal to the largest bandwidth interface that is a member of the link (in bps).
Total bandwidth	Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link.
Available bandwidth	Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link and that are not yet allocated.
Resource	Forwarding adjacency LSP information.

Table 43: show link-management routing Output Fields (*continued*)

Field Name	Field Description
Type	Type of resource. The type is always a forwarding adjacency LSP.
State	State of the LSP: Up or Down .
System Identifier	Internal identifier for the peer. The range of values is 0 through 64,000 .
Total bandwidth	Bandwidth resource, in bps or Mbps, on the TE-link learned from the routing process.
Traffic parameters	<ul style="list-style-type: none"> • Encoding—Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include SDH/SONET, Ethernet, and Packet. • Switching—Type of switching that can be performed on the traffic-engineered link: PSC-1 and Packet. • Granularity—Layer 2 data for switching Layer 2 LSPs for this resource. Not supported. This value is always unknown.

Sample Output

show link-management routing

user@host> show link-management routing

```

Peer name: __rpd:fe-0/1/0.0, System identifier: 2147483649
State: Up, Control address: (null)
  Control-channel          State
  fe-0/1/0.0              Active

Peer name: __rpd:fe-0/1/2.0, System identifier: 2147483650
State: Up, Control address: (null)
  Control-channel          State
  fe-0/1/2.0              Active

Peer name: __rpd:so-0/2/0.0, System identifier: 2147483651
State: Down, Control address: (null)
  Control-channel          State
  so-0/2/0.0              State

Peer name: __rpd:so-0/2/1.0, System identifier: 2147483652
State: Down, Control address: (null)
  Control-channel          State

```


so-0/2/1.0

...

TE link name: __rpd:fe-0/1/0.0, State: Up
Local identifier: 2147483649, Remote identifier: 0,
Local address: 192.168.37.66, Remote address: 192.168.37.66,
Encoding: Ethernet, Minimum bandwidth: 0bps, Maximum bandwidth: 100Mbps,
Total bandwidth: 100Mbps, Available bandwidth: 100Mbps

TE link name: __rpd:fe-0/1/2.0, State: Up
Local identifier: 2147483650, Remote identifier: 0,
Local address: 192.168.37.73, Remote address: 192.168.37.73,
Encoding: Ethernet, Minimum bandwidth: 0bps, Maximum bandwidth: 100Mbps,
Total bandwidth: 100Mbps, Available bandwidth: 100Mbps

TE link name: __rpd:so-0/2/0.0, State: Down
Local identifier: 2147483651, Remote identifier: 0,
Local address: 192.168.37.82, Remote address: 192.168.37.95,
Encoding: Ethernet, Minimum bandwidth: 0bps, Maximum bandwidth: 155.52Mbps,
Total bandwidth: 155.52Mbps, Available bandwidth: 155.52Mbps

...

Resource: falsp-bd, Type: LSP, State: Dn System identifier: 2147483652,
Total bandwidth: 0bps, Traffic parameters: Encoding: Packet, Switching: Packet,
Granularity: Unknown

Resource: falsp-be, Type: LSP, State: Up System identifier: 2147483654,
Total bandwidth: bw[1]=10Mbps, Traffic parameters: Encoding: Packet,
Switching: Packet, Granularity: Unknown

show link-management statistics

Syntax

```
show link-management statistics
<peer <name name>>
```

Release Information

Command introduced in Junos OS Release 8.0.
Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display statistical information for Link Management Protocol (LMP) packets.

Options

- none**—Display information for all peers.
- peer <name name>**—(Optional) Display information for all peers or for the specified peer only.

Required Privilege Level

view

RELATED DOCUMENTATION

show link-management	 2271
show link-management peer	 2275
show link-management routing	 2278
show link-management te-link	 2285

List of Sample Output

[show link-management statistics on page 2283](#)

Output Fields

[Table 44 on page 2282](#) describes the output fields for the **show link-management statistics** command. Output fields are listed in the approximate order in which they appear.

Table 44: show link-management statistics Output Fields

Field Name	Field Description
Received packets	Number of received packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.

Table 44: show link-management statistics Output Fields (continued)

Field Name	Field Description
Received bad packets	Number of received bad packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.
Small packets	Number of packets that are too small.
Wrong protocol version	Number of packets specifying the wrong LMP version.
Messages for unknown peer	Number of packets destined for an unknown peer.
Messages for bad state	Number of packets indicating a state that does not match the recipient.
Stale acknowledgments	Number of configAck and LinkSummaryAck packets received that have a stale message ID.
Stale negative acknowledgments	Number of configNack and LinkSummaryNack packets received that have a stale message ID.
Sent packets	Number of sent packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.
Retransmitted packets	Number of retransmitted packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.
Dropped packets	Number of packets sent, by message type, that have been dropped by the receiver after the LMP retransmission interval has been exceeded. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.

Sample Output

```
show link-management statistics
```

```
user@host> show link-management statistics peer pro4-a
```

```
Statistics for peer pro4-a
  Received packets
    Config: 1
    Hello: 2572
  Small packets: 0
  Wrong protocol version: 0
  Messages for unknown peer: 0
  Messages for bad state: 0
  Stale acknowledgments: 0
  Stale negative acknowledgments: 0
  Sent packets
    Config: 2
    ConfigAck: 1
    Hello: 2572
  Retransmitted packets
    Config: 1
```

show link-management te-link

Syntax

```
show link-management te-link
<brief | detail>
<name name>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display the resources used to set up Multiprotocol Label Switching (MPLS) traffic-engineered forwarding paths.

Options

none—Display information for all traffic-engineered links.

brief | detail—(Optional) Display the specified level of output.

name *name*—(Optional) Display information for the specified traffic-engineered link only.

Required Privilege Level

view

RELATED DOCUMENTATION

[show link-management](#) | 2271

[show link-management peer](#) | 2275

[show link-management routing](#) | 2278

[show link-management statistics](#) | 2282

List of Sample Output

[show link-management te-link on page 2287](#)

Output Fields

[Table 45 on page 2286](#) describes the output fields for the **show link-management te-link** command. Output fields are listed in the approximate order in which they appear.

Table 45: show link-management te-link Output Fields

Field Name	Field Description
TE link name	Traffic-engineered link name.
State	State of the traffic-engineered link: Up or Down .
Local identifier	Identifier of the local side of the link.
Remote identifier	Identifier of the remote side of the link.
Local address	Address of the local side of the link.
Remote address	Address of the remote side of the link.
Encoding	Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include SDH/SONET , Ethernet , Packet , and PDH .
Switching	Type of switching that can be performed on the traffic-engineered link. Supported values are PSC-1 and Packet .
Minimum bandwidth	Smallest single allocation of bandwidth, in bits per second (bps) or megabits per second (Mbps), possible on the traffic-engineered link. This number is equal to the smallest bandwidth interface that is a member of the traffic-engineered link.
Maximum bandwidth	Largest single allocation of bandwidth, in bps or Mbps, possible on the traffic-engineered link. This number is equal to the largest bandwidth interface that is a member of the link.
Total bandwidth	Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link (in bps).
Available Bandwidth	Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link and that are not yet allocated.
Name	Name of the interface.
State	State of the interface: Up or Down .
Local ID	Identifier of the local side of the interface.
Remote ID	Identifier of the remote side of the interface.
Bandwidth	Bandwidth, in bps or Mbps, of the member interface.
Used	Whether the resource is allocated to an LSP: Yes or No .

Table 45: show link-management te-link Output Fields (continued)

Field Name	Field Description
LSP-name	LSP name.

Sample Output

show link-management te-link

user@host> show link-management te-link

```

TE link name: FA-bd, State: Up
  Local identifier: 4144, Remote identifier: 0, Local address: 2.2.2.1,
  Remote address: 2.2.2.2, Encoding: Ethernet, Switching: Packet,
  Minimum bandwidth: 0bps, Maximum bandwidth: 0bps, Total bandwidth: 0bps,
  Available bandwidth: 0bps
    Name          State Local ID Remote ID      Bandwidth Used LSP-name
    falsp-bd      Dn          43077         0            0bps No

TE link name: FA-be, State: Up
  Local identifier: 4145, Remote identifier: 0, Local address: 1.1.1.1,
  Remote address: 1.1.1.2, Encoding: Ethernet, Switching: Packet,
  Minimum bandwidth: 0bps, Maximum bandwidth: 10Mbps, Total bandwidth: 10Mbps,
  Available bandwidth: 8Mbps
    Name          State Local ID Remote ID      Bandwidth Used LSP-name
    falsp-be      Up          43076         0           10Mbps Yes  e2elsp-bf

```

show mpls abstract-hop-membership

Syntax

```
show mpls abstract-hop-membership
<abstract-hop-name>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced in Junos OS Release 17.1 for all platforms.

Description

Display MPLS abstract hop membership tables for each abstract hop configured on the device.

Options

none—(Optional) Display the MPLS abstract hop membership table for all the configured abstract hops on the router.

abstract-hop-name—(Optional) Display the MPLS abstract hop membership table for the specified abstract hop.

instance instance-name—(Optional) Display the MPLS abstract hop membership table for the specified instance. If *instance-name* is omitted, information is displayed for the master instance.

logical-system (all | logical-system-name)—(Optional) Display the MPLS abstract hop membership table for all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

[Example: Configuring Abstract Hops for MPLS LSPs | 441](#)

[abstract-hop | 1656](#)

[constituent-list | 1700](#)

[show mpls lsp abstract-computation | 2358](#)

List of Sample Output

[show mpls abstract-hop-membership on page 2289](#)

Output Fields

Table 46 on page 2289 describes the output fields for the **show mpls abstract-hop-membership** command. Output fields are listed in the approximate order in which they appear.

Table 46: show mpls abstract-hop-membership Output Fields

Field Name	Field Description
Abstract hop	Name of the abstract hop.
Credibility	Credibility value associated with the interior gateway protocol in use.
Address	IP address of the abstract hop member nodes.

Sample Output

show mpls abstract-hop-membership

user@host> **show mpls abstract-hop-membership**

Abstract hop: ah1

Credibility: 0
Address: 127.0.0.6
Address: 127.0.0.1
Address: 127.0.0.2
Address: 127.0.0.3

Abstract hop: ah2

Credibility: 0
Address: 127.0.0.6
Address: 127.0.0.3
Address: 127.0.0.4

Abstract hop: ah3

Credibility: 0
Address: 127.0.0.6
Address: 127.0.0.3
Address: 127.0.0.5

show mpls admin-groups

List of Syntax

[Syntax on page 2290](#)

[Syntax \(EX Series Switches\) on page 2290](#)

Syntax

```
show mpls admin-groups
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show mpls admin-groups
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance *instance-name* option added in Junos OS Release 15.1.

Description

Display information about configured Multiprotocol Label Switching (MPLS) administrative groups.

Options

none—Display information about the configured MPLS administrative groups.

instance *instance-name*—(Optional) Display MPLS administrative group information for the specified instance. If ***instance-name*** is omitted, MPLS administrative group information for the master instance is displayed.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show mpls admin-groups on page 2291](#)

Output Fields

[Table 47 on page 2291](#) describes the output fields for the **show mpls admin-groups** command. Output fields are listed in the approximate order in which they appear.

Table 47: show mpls admin-groups Output Fields

Field Name	Field Description
Group	Name of the administrative group.
Bit index	Value assigned to the administrative group.

Sample Output

show mpls admin-groups

user@host> **show mpls admin-groups**

Group	Bit index
black	3
blue	2
gold	1
green	0

show mpls association

Syntax

```
show mpls association (iif incoming-interface | oif outgoing-interface)
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced in Junos OS Release 16.1 for the M Series, MX Series, and T Series.

Description

Display the Multiprotocol Label Switching (MPLS) label-switched paths (LSPs) based on the association with an incoming or outgoing LSP interface. The command output displays the list of RSVP-TE LSPs carrying traffic in and out of the same interface.

Options

iif *incoming-interface-name*—Display list of RSVP-TE LSPs that share the specified incoming interface to bring in traffic. This option works on transit label-switching routers (LSRs) and egress label edge routers (LERs).

oif *outgoing-interface-name*—Display list of RSVP-TE LSPs that share the specified outgoing interface to carry out traffic. This option works on ingress LERs and transit LSRs.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

[show mpls correlation nexthop-id](#) | [2310](#)

List of Sample Output

[show mpls association iif on page 2293](#)

[show mpls association oif on page 2293](#)

Output Fields

[Table 48 on page 2293](#) describes the output fields for the **show mpls association** command. Output fields are listed in the approximate order in which they appear.

Table 48: show mpls association Output Fields

Field Name	Field Description
To	Destination IP address of the corresponding LSP.
From	Source IP address of the corresponding LSP.
State	State of the corresponding LSP handled by this RSVP session: Up , Dn (down), or Restart .
LSPname	Name of the LSP.

Sample Output

show mpls association iif

```
user@host> show mpls association iif ge-0/0/0.0
```

```

To           From           State      LSPname
128.102.174.121 128.102.180.21 Up         LSP-ABC
128.102.174.121 128.102.180.21 Up         LSP-ABC1
128.102.174.121 128.102.180.21 Up         LSP-ABC2
128.102.174.121 128.102.180.21 Up         LSP-ABC3
Total 4 displayed, Up 4, Down 0
```

show mpls association oif

```
user@host> show mpls association oif ge-0/0/0.0
```

```

To           From           State      LSPname
128.102.174.121 128.102.180.21 Up         LSP-ABC
128.102.174.121 128.102.180.21 Up         LSP-ABC1
128.102.174.121 128.102.180.21 Up         LSP-ABC2
128.102.174.121 128.102.180.21 Up         LSP-ABC3
```

show mpls call-admission-control

List of Syntax

[Syntax on page 2294](#)

[Syntax \(EX Series Switches\) on page 2294](#)

Syntax

```
show mpls call-admission-control
<instance instance-name>
<logical-system (all | logical-system-name)>
<lsp-name>
```

Syntax (EX Series Switches)

```
show mpls call-admission-control
<lsp-name>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance *instance-name* option added in Junos OS Release 15.1.

Description

Display Multiprotocol Label Switching (MPLS) label-switched path (LSP) call admission control (CAC) information.

Options

none—Display CAC information for all LSPs.

instance *instance-name*—(Optional) Display MPLS LSP CAC information for the specified instance. If *instance-name* is omitted, MPLS LSP CAC information for the master instance is displayed.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

lsp-name—(Optional) Display CAC information for the specified LSP only.

Additional Information

The available bandwidth on an LSP path at a particular class type is the total path bandwidth at that class type minus the total bandwidth reserved by any Layer 2 connection at that class type.

Required Privilege Level

view

List of Sample Output

[show mpls call-admission-control on page 2295](#)

Output Fields

[Table 49 on page 2295](#) describes the output fields for the **show mpls call-admission-control** command.

Output fields are listed in the approximate order in which they appear.

Table 49: show mpls call-admission-control Output Fields

Field Name	Field Description
Available bandwidth	Current available bandwidth on each LSP path. Depending on whether the LSP is an E-LSP or a regular LSP, either per-class bandwidth or a single bandwidth value (corresponding to best-effort bandwidth at ct0) is displayed. The available bandwidth on an LSP path at a particular class type is the total path bandwidth at that class type minus the total bandwidth reserved by some Layer 2 connections at that class type.
Layer2 connections	Different Layer 2 connections that had some bandwidth requirement and were admitted into an LSP path.
LSP name	LSP pathname.
Neighbor address	Neighbor address from which CAC and bandwidth booking are configured for Layer 2 circuits.
Circuit	Interface name and circuit information.
Primary	LSP's primary standby path.
Standby	LSP's secondary standby path.
VC bandwidth	Bandwidth constraints associated with a Layer 2 circuit route.

Sample Output

show mpls call-admission-control

user@host# **show mpls call-admission-control**

```
LSP name: prol-be
  *Primary
    Available bandwidth: 0bps
```

LSP name: prol-be-1

*Primary

Available bandwidth: 60kbps

LSP name: prol-be-gold

*Primary

Available bandwidth: <ct0 50kbps> <ct1 20kbps> <ct2 30kbps> <ct3 0bps>

Layer2 connections:

Neighbor address: 10.255.245.215, Circuit: so-0/3/0.0(vc 5)

VC bandwidth: <ct0 50kbps> <ct1 40kbps> <ct2 40kbps>

LSP name: prol-be-gold-2

*Primary

Available bandwidth: <ct0 0bps> <ct1 40kbps> <ct2 40kbps> <ct3 0bps>

LSP name: prol-be-silver

*Primary prim1

Available bandwidth: <ct0 10kbps> <ct1 20kbps> <ct2 0bps> <ct3 40kbps>

Layer2 connections:

Neighbor address: 10.255.245.215, Circuit: so-0/3/0.1(vc 3)

VC bandwidth: <ct0 20kbps> <ct1 20kbps>

Standby sec1

Available bandwidth: <ct0 10kbps> <ct1 10kbps> <ct2 20kbps> <ct3 0bps>

Layer2 connections:

Neighbor address: 10.255.245.215, Circuit: so-0/3/0.1(vc 3)

VC bandwidth: <ct0 20kbps> <ct1 20kbps>

show mpls container-lsp

Syntax

```
show mpls container-lsp
<brief | detail | extensive | terse>
<count-active-routes>
<defaults>
<descriptions>
<down | up>
<egress>
<ingress>
<logical-system (all | logical-system-name)>
<name name>
<statistics>
<transit>
<unidirectional>
```

Release Information

Command introduced in Junos OS Release 14.2.

Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.

Description

Display information about configured and active Multiprotocol Label Switching (MPLS) container label-switched paths (LSPs).

Options

none—Display standard information about all configured and active member LSPs of the container LSP.

brief | detail | extensive | terse—(Optional) Display the specified level of output. The extensive option displays the same information as the detail option, but covers the most recent 50 events.

count-active-routes—(Optional) Show active routes for the container LSP.

defaults—(Optional) Display the default settings of the container LSP.

descriptions—(Optional) Display the container LSP descriptions. To view this information, you must configure the description statement at the **[edit protocol mpls container-lsp]** hierarchy level. Only the LSPs with a description are displayed. This command is only valid for the ingress routing device, because the description is not propagated in RSVP messages.

down | up—(Optional) Display only LSPs that are inactive or active, respectively.

egress—(Optional) Display the LSPs ending at this device.

NOTE: The **egress** option displays all the LSPs including regular LSPs, members of container LSPs, and transit LSPs. This is an expected behavior for all platforms.

- ingress**—(Optional) Display the member LSPs originating from this device.
- logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.
- name *name***—(Optional) Display information about the specified LSP or group of LSPs.
- statistics**—(Optional) Display accounting information about LSPs. Statistics are not available for LSPs on the egress routing device, because the penultimate routing device in the LSP sets the label to 0. Also, as the packet arrives at the egress routing device, the hardware removes its MPLS header and the packet reverts to being an IPv4 packet. Therefore, it is counted as an IPv4 packet, not an MPLS packet.
- transit**—(Optional) Display LSPs transiting this routing device.
- unidirectional**—(Optional) Display unidirectional LSP information.

Required Privilege Level
view

RELATED DOCUMENTATION

- [request mpls container-lsp | 2258](#)
- [clear mpls container-lsp | 2223](#)

List of Sample Output
[show mpls container-lsp on page 2303](#)
[show mpls container-lsp extensive on page 2303](#)

Output Fields

[Table 50 on page 2298](#) describes the output fields for the **show mpls container-lsp** command. Output fields are listed in the approximate order in which they appear.

Table 50: show mpls container-lsp Output Fields

Field Name	Field Description	Level of Output
Ingress LSP	Information about the member LSPs on the ingress routing device. Each LSP has one line of output.	All levels

Table 50: show mpls container-lsp Output Fields (*continued*)

Field Name	Field Description	Level of Output
Container LSP name	Name of the container LSP.	All levels
Member LSP count	Number of member LSPs in the container LSP.	All levels
To	Destination (egress routing device) of the session.	brief
From	Source (ingress routing device) of the session.	brief detail
State	State of the LSP handled by this RSVP session: <ul style="list-style-type: none"> • Up • Dn (down) • Restart 	brief detail
Rt	Number of active routes (prefixes) installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table (inet.0). For transit and egress RSVP sessions, the routing table is the primary MPLS table (mpls.0).	brief
P	Path. An asterisk (*) underneath this column indicates that the LSP is a primary path.	brief
ActivePath	(Ingress LSP) Name of the active path: Primary or Secondary.	detail extensive
LSPname	Name of the member LSP.	brief detail
Egress LSP	Information about the LSPs on the egress routing device. MPLS learns this information by querying RSVP, which holds all the transit and egress session information. Each session has one line of output.	All levels
Transit LSP	Number of LSPs on the transit routing devices and the state of these paths. MPLS learns this information by querying RSVP, which holds all the transit and egress session information.	All levels
Min LSPs	Minimum number of member LSPs. Default: 1	extensive
Max LSPs	Number of member LSPs that the container LSP can have at maximum. Default: 64 (due to ECMP limit)	extensive

Table 50: show mpls container-lsp Output Fields (*continued*)

Field Name	Field Description	Level of Output
Aggregate bandwidth	Sum of the bandwidths of all member LSPs.	extensive
NormalizeTimer	Duration between two normalization events. When not configured, 21600 seconds (6 hours) is set as the default value.	extensive
NormalizeThreshold	Change in aggregate LSP utilization to trigger splitting or merging expressed in percentage.	extensive
Max Signaling BW	Maximum bandwidth used to signal LSPs after a normalization event. Default value is 0 bps. When not configured, the value is inherited from the splitting bandwidth configuration. NOTE: Between two normalization events, when auto-bandwidth adjustment happens, the per-LSP auto-bandwidth configuration and thresholds are used, instead of the maximum signaling bandwidth threshold.	extensive
Min Signaling BW	Minimum bandwidth used to signal LSPs after a normalization event. Default value is 0 bps. When not configured, the value is inherited from the merging bandwidth configuration. NOTE: Between two normalization events, when auto-bandwidth adjustment happens, the per-LSP auto-bandwidth configuration and thresholds are used, instead of the minimum signaling bandwidth threshold.	extensive
Splitting BW	Bandwidth used for LSP splitting and merging. Default value is 0 bps. When not configured, the value is inherited from the auto-bandwidth maximum bandwidth configuration.	extensive
Merging BW	Bandwidth used for LSP splitting and merging. Default value is 0 bps. When not configured, the value is inherited from the auto-bandwidth minimum bandwidth configuration.	extensive
LSPtype		extensive
LoadBalance		extensive
MinBW	Minimum LSP bandwidth in bps related to auto-bandwidth.	extensive

Table 50: show mpls container-lsp Output Fields (*continued*)

Field Name	Field Description	Level of Output
AdjustTimer	Total amount of time in seconds allowed before LSP bandwidth adjustment take place. Range: 300 through 315360000 seconds	extensive
Max AvgBW util	Current value of the actual maximum average bandwidth utilization in bps.	extensive
Overflow limit	Threshold overflow limit.	extensive
Underflow limit	Threshold underflow limit.	extensive
Encoding type		extensive
Switching type		extensive
GPID		extensive
Priorities	Setup priority and hold priority values. For setup priority, 0 and 7 is the highest and lowest priority, respectively. When not explicitly configured, 7 and 0 are set as the default values for the setup priority and hold priority, respectively.	extensive
Bandwidth		extensive
SmartOptimizeTimer	Time in seconds allowed before path reoptimization.	extensive
Computed ERO	Computed explicit route. A series of hops, each with an address followed by a hop indicator. The value of the hop indicator can be strict (S) or loose (L).	extensive

Table 50: show mpls container-lsp Output Fields (*continued*)

Field Name	Field Description	Level of Output
Received RRO	<p>Received record route.</p> <p>RRO is a series of hops, each with an address followed by a flag. In most cases, the received RRO is the same as the computed ERO. If the received RRO is different from the computed ERO, there is a topology change in the network, and the route is taking a detour.</p> <p>The following flags identify the protection capability and status of the downstream node:</p> <ul style="list-style-type: none"> • 0x01—Local protection available. The link downstream from this node is protected by a local repair mechanism. This flag can be set only if the local protection flag was set in the SESSION_ATTRIBUTE object of the corresponding path message. • 0x02—Local protection in use. A local repair mechanism is in use to maintain this tunnel (usually because of an outage of the link it was routed over previously). • 0x03—Combination of 0x01 and 0x02. • 0x04—Bandwidth protection. The downstream routing device has a backup path providing the same bandwidth guarantee as the protected LSP for the protected section. • 0x08—Node protection. The downstream routing device has a backup path providing protection against link and node failure on the corresponding path section. If the downstream routing device can set up only a link-protection backup path, the local protection available bit is set but the node protection bit is cleared. • 0x09—Detour is established. Combination of 0x01 and 0x08. • 0x10—Preemption pending. The preempting node sets this flag if a pending preemption is in progress for the traffic engine LSP. This flag indicates to the ingress legacy edge router (LER) of this LSP that it should be rerouted. • 0x20—Node ID. Indicates that the address specified in the RRO's IPv4 or IPv6 sub-object is a node ID address, which refers to the router address or router ID. Nodes must use the same address consistently. • 0xb—Detour is in use. Combination of 0x01, 0x02, and 0x08. 	extensive
Make-before-break		extensive
Record Route		extensive

Table 50: show mpls container-lsp Output Fields (continued)

Field Name	Field Description	Level of Output
Automatic Autobw adjustment succeeded		extensive
CSPF		extensive
Created	Date and time the LSP was created.	extensive

Sample Output

show mpls container-lsp

user@host> show mpls container-lsp

```
Ingress LSP: 1 sessions
Container LSP name          Member LSP count
test                        2
To          From          State Rt P    ActivePath    LSPname
10.255.107.76 10.255.107.78 Up    0 *          test-1
10.255.107.76 10.255.107.78 Up    0 *          test-2
Total 2 displayed, Up 2, Down 0

naling Egress LSP: 1 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

show mpls container-lsp extensive

user@host> show mpls container-lsp extensive

```
Ingress LSP: 1 sessions
Container LSP name: test, Member count: 2
Normalization
  Min LSPs: 2, Max LSPs: 64, Aggregate bandwidth: 0bps
  NormalizeTimer: 1800 secs, NormalizeThreshold: 0%
```

Max Signaling BW: 2kbps, Min Signaling BW: 2kbps, Splitting BW: 5Mbps, Merging BW: 2kbps

Normalization in 989 second(s)

10.255.107.76

From: 10.255.107.78, State: Up, ActiveRoute: 0, LSPname: test-1

ActivePath: (primary)

LSPTYPE: Dynamic Configured, Penultimate hop popping

LoadBalance: Random

Autobandwidth

MinBW: 1000bps

AdjustTimer: 300 secs

Max AvgBW util: 0bps, Bandwidth Adjustment in 89 second(s).

Overflow limit: 0, Overflow sample count: 0

Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps

Encoding type: Packet, Switching type: Packet, GPID: IPv4

*Primary State: Up, No-decrement-ttl

Priorities: 7 0

Bandwidth: 1000bps

SmartOptimizeTimer: 180

Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)

1.3.0.2 S 1.7.0.1 S

Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt 20=Node-ID):

1.3.0.2 1.7.0.1

11 Jul 13 20:08:26.613 Make-before-break: Switched to new instance

10 Jul 13 20:08:04.360 Record Route: 1.3.0.2 1.7.0.1

9 Jul 13 20:08:04.360 Up

8 Jul 13 20:08:04.360 Automatic Autobw adjustment succeeded: BW changes from 2000 bps to 1000 bps

7 Jul 13 20:08:04.314 Originate make-before-break call

6 Jul 13 20:08:04.314 CSPF: computation result accepted 1.3.0.2 1.7.0.1

5 Jul 13 20:05:02.423 Selected as active path

4 Jul 13 20:05:02.422 Record Route: 1.3.0.2 1.7.0.1

3 Jul 13 20:05:02.421 Up

2 Jul 13 20:05:02.376 Originate Call

1 Jul 13 20:05:02.376 CSPF: computation result accepted 1.3.0.2 1.7.0.1

Created: Sat Jul 13 20:03:03 2013

10.255.107.76

From: 10.255.107.78, State: Up, ActiveRoute: 0, LSPname: test-2

ActivePath: (primary)

LSPTYPE: Dynamic Configured, Penultimate hop popping

LoadBalance: Random

Autobandwidth

MinBW: 1000bps


```

AdjustTimer: 300 secs
Max AvgBW util: 0bps, Bandwidth Adjustment in 89 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up, No-decrement-ttl
  Priorities: 7 0
  Bandwidth: 1000bps
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
1.2.0.2 S 1.4.0.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    1.2.0.2 1.4.0.2
11 Jul 13 20:08:05.363 Make-before-break: Switched to new instance
10 Jul 13 20:08:04.450 Record Route:  1.2.0.2 1.4.0.2
 9 Jul 13 20:08:04.449 Up
 8 Jul 13 20:08:04.449 Automatic Autobw adjustment succeeded: BW changes from
2000 bps to 1000 bps
 7 Jul 13 20:08:04.327 Originate make-before-break call
 6 Jul 13 20:08:04.327 CSPF: computation result accepted  1.2.0.2 1.4.0.2
 5 Jul 13 20:05:00.849 Selected as active path
 4 Jul 13 20:05:00.841 Record Route:  1.3.0.2 1.7.0.1
 3 Jul 13 20:05:00.831 Up
 2 Jul 13 20:05:00.513 Originate Call
 1 Jul 13 20:05:00.502 CSPF: computation result accepted  1.3.0.2 1.7.0.1
Created: Sat Jul 13 20:03:03 2013
Total 2 displayed, Up 2, Down 0

Egress LSP: 1 sessions
Total 0 displayed, Up 0, Down 0
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

show mpls context-identifier

Syntax

```
show mpls context-identifier
<brief | detail>
<logical-system (all | logical-system-name)>
<primary>;
<protector>;
```

Release Information

Command introduced in Junos OS Release 11.4R3.

Description

Display information about configured egress protection context identifiers.

Options

none—Display standard information about egress protection.

brief | detail—(Optional) Display the specified level of output.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

primary—(Optional) Perform this operation on the primary node.

protector—(Optional) Perform this operation on the protector node.

Required Privilege Level

view

RELATED DOCUMENTATION

Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP

Example: Configuring MPLS Egress Protection for Layer 3 VPN Services

List of Sample Output

[show mpls context-identifier detail \(Protector\) on page 2307](#)

[show mpls context-identifier detail \(Primary\) on page 2308](#)

Output Fields

[Table 51 on page 2307](#) describes the output fields for the **show mpls egress-protection detail** command. Output fields are listed in the approximate order in which they appear.

Table 51: show mpls lsp Output Fields

Field Name	Field Description	Level of Output
ID	Context identifier.	All levels
Type	Indicates node type: protector or primary	All levels
Metric	MPLS cost value of the context identifier route. This route appears in inet.0 on the protector and primary nodes. On the protector node, the metric is a larger number.	All levels
Mode	Indicates <code>advertise-mode</code> : proxy or alias	detail
Context table	Name of the MPLS routing table created for egress protection.	All levels
Context LSPs	Names of the LSPs that have egress protection configured. Loopback interface addresses of the devices from which the LSPs are originated.	detail
Total	Total number of primary and protector nodes.	All levels
Primary	Number of primary nodes.	All levels
Protector	Number of protector nodes.	All levels

Sample Output

show mpls context-identifier detail (Protector)

```
user@host> show mpls context-identifier detail
```

```
ID: 166.1.3.1
  Type: protector, Metric: 16777215, Mode: alias
  Context table: __166.1.3.1__.mpls.0, Label out: 299968
```

Sample Output

show mpls context-identifier detail (Primary)

user@host> **show mpls context-identifier detail**

```
ID: 166.1.3.1
```

```
  Type: primary, Metric: 1, Mode: alias
```

```
Total 1, Primary 1, Protector 0
```

show mpls correlation label

Syntax

```
show mpls correlation label label-value  
<brief | detail | extensive | terse>  
<descriptions>  
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced in Junos OS Release 15.2 for the M Series, MX Series, and T Series.

Description

Display the correlation information for the Multiprotocol Label Switching (MPLS) label-switched path (LSP) with the owner of the label.

Options

label-value—Display information about the specified label.

brief | detail | extensive | terse—(Optional) Display the specified level of output. The extensive option displays the same information as the detail option, but covers the most recent 50 events.

descriptions—(Optional) Display the LSP descriptions. To view this information, you must configure the description statement at the [**edit protocol mpls lsp**] hierarchy level. Only the LSPs with a description are displayed. This command is only valid for the ingress routing device, because the description is not propagated in RSVP messages.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

[show mpls correlation nexthop-id](#) | 2310

[show mpls association](#) | 2292

show mpls correlation nexthop-id

Syntax

```
show mpls correlation nexthop-id nexthop-id
<descriptions>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced in Junos OS Release 16.1 for the M Series, MX Series, and T Series.

Description

Display the correlation information for the Multiprotocol Label Switching (MPLS) label-switched path (LSP) with the owner of the next-hop ID.

Options

nexthop-id—Display information about the specified next-hop ID.

descriptions—(Optional) Display the LSP descriptions. To view this information, you must configure the description statement at the **[edit protocol mpls lsp]** hierarchy level. Only the LSPs with a description are displayed. This command is only valid for the ingress routing device, because the description is not propagated in RSVP messages.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

[show mpls association](#) | [2292](#)

List of Sample Output

[show mpls correlation nexthop-id on page 2311](#)

Output Fields

[Table 52 on page 2311](#) describes the output fields for the **show mpls correlation nexthop-id** command. Output fields are listed in the approximate order in which they appear.

Table 52: show mpls correlation nexthop-id Output Fields

Field Name	Field Description
LSP name	Name of the LSP associated with the specified next-hop ID.

Sample Output

show mpls correlation nexthop-id

user@host> **show mpls correlation nexthop-id *nexthop-id***

```
LSP name: LSP-ABC
```

show mpls cspf

List of Syntax

[Syntax on page 2312](#)

[Syntax \(EX Series Switches\) on page 2312](#)

Syntax

```
show mpls cspf
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show mpls cspf
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance *instance-name* option added in Junos OS Release 15.1.

Description

Display Multiprotocol Label Switching (MPLS) Constrained Shortest Path First (CSPF) statistics.

Options

none—Display MPLS CSFP statistics.

instance *instance-name*—(Optional) Display MPLS CSPF information for the specified instance. If *instance-name* is omitted, MPLS CSPF information for the master instance is displayed.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show mpls cspf on page 2314](#)

Output Fields

[Table 53 on page 2313](#) describes the output fields for the **show mpls cspf** command. Output fields are listed in the approximate order in which they appear.

Table 53: show mpls cspf Output Fields

Field Name	Field Description
Queue length	Number of LSPs queued for automatic path computation.
current	Current queue length.
maximum	Maximum queue length (high-water mark).
dequeued	Number of aborted computation attempts.
Paths	Counters for label-switched path computations.
total	Sum of the next four fields.
successful	Number of path computations that were successfully completed.
no route	Number of path computations that failed because the destination is unreachable.
Sys Error	Number of path computations that failed because of lack of memory.
CSPFs	Total number of CSPF computations. A single path might require multiple CSPF computations.
Time	Time, in seconds, required to perform the label-switched path computation.
Total	Total amount of time consumed by the CSPF path computation algorithm.
CSPFs	Total number of CSPF computations.
Avg per CSPF	Average amount of time required for each CSPF computation.
% of rpd	Percentage of routing process CPU used in the CSPF computation.

Sample Output

show mpls cspf

user@host> **show mpls cspf**

CSPF statistics					
Queue length	current	maximum	dequeued		
	0	0	0		
Paths	total	successful	no route	sys error	CSPFs
	0	0	0	0	0
Time (secs)	total	CSPFs	avg per CSPF	% of rpd	
	0.000000	0.000000	0.000000	0.0000	

show mpls diffserv-te

List of Syntax

[Syntax on page 2315](#)

[Syntax \(EX Series Switches\) on page 2315](#)

Syntax

```
show mpls diffserve-te
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show mpls diffserve-te
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance *instance-name* option added in Junos OS Release 15.1.

Description

Display Multiprotocol Label Switching (MPLS) label-switched path (LSP) Differentiated Services (DiffServ) class and preemption priority information.

Options

none—Display DiffServ classes and priorities used by MPLS LSPs.

instance *instance-name*—(Optional) Display DiffServ classes and priorities used by MPLS LSPs for the specified instance. If ***instance-name*** is omitted, DiffServ information for the master instance is displayed.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show mpls diffserv-te on page 2316](#)

Output Fields

[Table 54 on page 2316](#) describes the output fields for the **show mpls diffserv-te** command. Output fields are listed in the approximate order in which they appear.

Table 54: show mpls diffserv-te Output Fields

Field Name	Field Description
Bandwidth model	Bandwidth constraint model supported. The maximum allocation model (MAM) for EXP-inferred LSPs (E-LSPs) is currently supported.
TE class	DiffServ traffic engineering class.
Traffic class	MPLS class type that corresponds to the DiffServ traffic engineering class: <ul style="list-style-type: none"> • ct0—Best effort • ct1—Assured forwarding • ct2—Expedited forwarding • ct3—Network control
Priority	MPLS preemption priority for this class type, a value from 0 through 7. Interior gateway protocols (IGPs) distribute information about the available bandwidth for each traffic engineering class.

Sample Output

show mpls diffserv-te

user@host> **show mpls diffserv-te**

```

Bandwidth model: Maximum Allocation Model with support for E-LSPs.
TE class      Traffic class      Priority
te0           ct0                   3
te1           ct1                   2

```

show mpls interface

Syntax

```
show mpls interface
```

Release Information

Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display information about MPLS-enabled interfaces. MPLS is enabled on an interface when the interface is configured with both the **set protocols mpls interface *interface-name*** and **set interfaces *interface-name* unit 0 family mpls** commands.

Required Privilege Level

view

RELATED DOCUMENTATION

- [Example: Configuring MPLS on EX8200 and EX4500 Switches | 41](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS | 1218](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect | 1221](#)
- [Configuring MPLS on EX8200 and EX4500 Provider Switches | 77](#)

List of Sample Output

[show mpls interface on page 2318](#)

Output Fields

[Table 55 on page 2317](#) describes the output fields for the **show mpls interface** command. Output fields are listed in the approximate order in which they appear.

Table 55: show mpls interface Output Fields

Field Name	Field Description
Interface	Name of the interface.
State	State of the interface: Up or Dn (down).
Administrative groups	Administratively assigned colors of the link.

Sample Output

show mpls interface

user@switch> **show mpls interface**

Interface	State	Administrative groups
so-1/0/0.0	Up	Blue Yellow Red

show mpls egress-protection

Syntax

```
show mpls egress-protection  
<brief | detail>  
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced in Junos OS Release 11.4R3.

Description

Display information about egress protection.

NOTE: Use this command on the device configured as the protector PE router to display information about egress protection. If you use this command on the device configured as the primary PE router, no output is displayed.

Options

none—Display standard information about egress protection.

brief | detail—(Optional) Display the specified level of output.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

Example: Configuring MPLS Egress Protection for Layer 3 VPN Services

Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP

List of Sample Output

[show mpls egress-protection detail \(Centralized Protector\) on page 2320](#)

[show mpls egress-protection detail \(Collocated Protector\) on page 2320](#)

Output Fields

Table 51 on page 2307 describes the output fields for the **show mpls egress-protection detail** command. Output fields are listed in the approximate order in which they appear.

Table 56: show mpls lsp Output Fields

Field Name	Field Description
Instance	Indicates egress instance name
Type	Indicates type of the VRF. It can be either local-vrf or remote-vrf
RIB	Indicates the edge-protection created routing table
Context-Id	Indicates the context-ID associated with the RIB.
Interface/Enhanced-lookup	<p>Show VT interfaces associated with the backup RIB.</p> <p>Shows Enhanced-lookup for MX Series 5G Universal Routing Platforms with the Enhanced IP Network Services mode configured using the network-services enhanced-ip statement at the [edit chassis] hierarchy level.</p>

Sample Output

show mpls egress-protection detail (Centralized Protector)

```
user@host> show mpls egress-protection detail
```

Instance	Type	Protection-Type
rsite1	remote-vrf	Protector
RIB __99.99.1.4-rsite1__.inet.0, Context-Id 99.99.1.4, Enhanced-lookup		
Route Target 1:1		
rsite24	remote-vrf	Protector
RIB __99.99.1.4-rsite24__.inet.0, Context-Id 99.99.1.4, Enhanced-lookup		
Route Target 100:1023		

Sample Output

show mpls egress-protection detail (Collocated Protector)

```
user@host> show mpls egress-protection detail
```



```
Instance          Type      Protection-Type
site2             local-vrf  Protector
  RIB __66.6.6.6-site2__.inet.0, Context-Id 66.6.6.6, Interface vt-1/3/0.87031809

  Route Target 100:251
site12            local-vrf  Protector
  RIB __66.6.6.6-site12__.inet.0, Context-Id 66.6.6.6, Interface vt-1/3/0.87031808

  Route Target 100:250
  Route Target 100:251

site2             local-vrf  Protector
  RIB __66.6.6.6-site2__.inet.0, Context-Id 66.6.6.6, Interface vt-1/3/0.87031809

  Route Target 100:251
```

show mpls interface

List of Syntax

[Syntax on page 2322](#)

[Syntax \(EX Series Switches\) on page 2322](#)

Syntax

```
show mpls interface
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show mpls interface
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance *instance-name* option added in Junos OS Release 15.1.

Description

Display information about Multiprotocol Label Switching (MPLS)-enabled interfaces.

Options

none—Display information about MPLS-enabled interfaces.

instance *instance-name*—(Optional) Display information about MPLS-enabled interfaces for the specified routing instance. If ***instance-name*** is omitted, information about MPLS-enabled interfaces is displayed for the master instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Additional Information

MPLS is enabled on an interface when the interface is configured with both the **set protocol mpls interface *interface-name*** and **set interface *interface-name* unit 0 family mpls** statements.

Required Privilege Level

view

List of Sample Output

[show mpls interface on page 2324](#)

Output Fields

[Table 57 on page 2323](#) describes the output fields for the **show mpls interface** command. Output fields are listed in the approximate order in which they appear.

Table 57: show mpls interface Output Fields

Field Name	Field Description
Interface	Name of the interface.
State	State of the interface: Up or Dn (down).
Administrative groups	Administratively assigned colors of the link.
Maximum labels	Maximum number of MPLS labels upon which MPLS can operate on a logical interface. This is configured using the maximum-labels statement at the [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family mpls] or the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family mpls] hierarchy levels.
Static protection revert time	Time (in seconds) that a static LSP must wait before traffic reverts from the bypass path to the original path. This is configured using the protection-revert-time statement at the [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static] or the [edit protocols mpls interface <i>interface-name</i> static] hierarchy levels.
Always mark connection protection tlv	Enabled or Disabled : Enabled indicates that the always-mark-connection-protection-tlv statement is configured at the [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static] or the [edit protocols mpls interface <i>interface-name</i> static] hierarchy levels. When this statement is configured, it marks all OAM traffic transiting this interface in preparation for switching the traffic to an alternate path based on the OAM functionality. To switch traffic to the bypass LSP, the switch-away-lsps statement must be configured.

Table 57: show mpls interface Output Fields (*continued*)

Field Name	Field Description
Switch away lsps	Enabled or Disabled : Enabled indicates that the switch-away-lsps statement is configured at the [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static] or the [edit protocols mpls interface <i>interface-name</i> static] hierarchy levels. This enables you to switch an LSP away from a network node using a bypass LSP. This feature can be used in maintenance of active networks when a network device needs to be replaced without interrupting traffic passing through the network. The LSPs can be either static or dynamic.

Sample Output

show mpls interface

user@host> show mpls interface

```
Interface: ge-0/2/1.57
  State: Up
  Administrative group: <none>
  Maximum labels: 5
  Static protection revert time: 5 seconds
  Always mark connection protection tlv: Disabled
  Switch away lsps : Disabled
```

show mpls label usage

Syntax

```
show mpls label usage
<label label value>
<label-range range-start range-end>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced in Junos OS Release 15.1.

Support for the **label** statement added in Junos OS Release 17.2.

Support for the **label-range** statement added in Junos OS Release 17.2.

Description

Show the available label space resource in RPD and also the applications that use the label space in RPD. There are four different label spaces currently used in MPLS—namely LSI, dynamic, block, and static. Each label space has a fixed number and cannot grow beyond the fixed value. Using this command, the administrator can monitor the available labels in each label space and the applications that are using the labels. Based on the availability of labels, the administrator can decide to stop any service and free some labels or use other service where the labels are available.

Starting in Junos OS Release 17.2, you can configure the **enhanced-ip** command, which is supported on platforms using Modular Port Concentrators (MPCs) equipped with Junos Trio chipsets. You can also separate the MPLS labels used for different label spaces which provides more flexibility and scalability.

When you set each member router's network services to **enhanced-ip**, only MPC or Modular Interface Cards (MICs) modules and Multiservices Dense Port Concentrator (MS-DPC) modules are powered on in the chassis. Non-service DPCs do not work with enhanced IP network services.

Options

none— Display the available labels in each label space and the applications using the labels.

label *label value*—(Optional) Display the information about which *label value* is used by which protocol, if any.

label-range *range-start range-end* —(Optional) Display the complete information about the **label-range** specified. With the **enhanced-ip** command enabled on the supported device, effective ranges and configured ranges along with details of different label spaces such as LSI, dynamic, block, and static types are displayed.

logical-system (*all* | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Additional Information

Once the label space crosses the threshold, a new syslog message is added.

<label-space-name> label space usage crossed threshold limit of 90%.

For instance, LSI label space usage crossed threshold limit of 90%.

Required Privilege Level

view

List of Sample Output

[show mpls label usage on page 2326](#)

Output Fields

[Table 58 on page 2326](#) describes the output fields for the **show mpls label usage** command. Output fields are listed in the order in which they appear.

Table 58: show mpls label usage Fields

Field Name	Field Description
Label Space	Indicates the different types of labels currently used in MPLS.
Total	Indicates the total label space available.
Available	Indicates the number of freely available labels and also the percentage of the label space available.
Applications	Indicates the applications that use the MPLS label spaces.
Effective Ranges	Indicates actual ranges in use, which can be different from configured ranges, if conflicting with label already allocated.
Configured Ranges	Indicates the currently configured range assigned to different label spaces on the device.

Sample Output

show mpls label usage

user@host> **show mpls label usage**

```

Label space Total    Available      Applications
LSI           999984  999971 (100.00%) BGP/LDP VPLS with no-tunnel-services, BGP
L3VPN with vrf-table-label

```

```

Block          999984  999971 (100.00%) BGP/LDP VPLS with tunnel-services, BGP L2VPN
Dynamic        999984  999971 (100.00%) RSVP, LDP, PW, L3VPN, RSVP-P2MP, LDP-P2MP,
MVPN, EVPN, BGP
Static         48576   48576  (100.00%) Static LSP, Static PW

```

With **enhanced-ip** enabled on the supported device, you get the following additional output.

user@host> **show mpls label usage**

```

Label space Total    Available      Applications
LSI           996983  996983 (100.00%) BGP/LDP VPLS with no-tunnel-services, BGP
L3VPN with vrf-table-label
Block         996983  996983 (100.00%) BGP/LDP VPLS with tunnel-services, BGP L2VPN
Dynamic       996983  996983 (100.00%) RSVP, LDP, PW, L3VPN, RSVP-P2MP, LDP-P2MP,
MVPN, EVPN, BGP
Static        48576   48576  (100.00%) Static LSP, Static PW
Effective Ranges
Range name  Shared with Start    End
Dynamic     16      999
Dynamic     4001    999999
Static      1000000 1048575
SRGB        1000    2999    OSPF
SRGB        3000    4000    GLOBAL
Configured Ranges
Range name  Shared with Start    End
Dynamic     16      999
Dynamic     4001    999999
Static      1000000 1048575
SRGB        1000    2999    OSPF
SRGB        3000    4000    GLOBAL

```

user@host> **show mpls label usage label 101**

```

Label 101 is used by protocol BGP

```

user@host> **show mpls label usage label 102**

```

Label 102 is used by protocol LDP

```

user@host> **show mpls label usage label 103**

Label 103 is not allocated to any protocol

show mpls label usage label-range

Syntax

```
show mpls label usage label-range
<block-label-range range-start range-end>
<dynamic-label-range range-start range-end>
<label-limit label-limit value>
<lsi-label-range range-start range-end>
<static-label-range range-start range-end>
```

Release Information

Command introduced in Junos OS Release 17.2.

Description

There are four different label spaces currently used in MPLS—namely LSI, dynamic, block, and static. Each label space has a fixed number and cannot grow beyond the fixed value. Using **show mpls label usage label-range** command, the administrator can monitor the available labels in each label space and the applications that are using the labels. Based on the availability of labels, the administrator can decide to stop any service and free some labels or use other service where the labels are available.

Starting in Junos OS Release 17.2, you can configure the **enhanced-ip** command, which is supported on platforms using Modular Port Concentrators (MPCs) equipped with Junos Trio chipsets. You can also separate the MPLS labels used for different label spaces which provides more flexibility and scalability.

When you set each member router's network services to **enhanced-ip**, only MPC or Modular Interface Cards (MICs) modules and Multiservices Dense Port Concentrator (MS-DPC) modules are powered on in the chassis. Non-service DPCs do not work with enhanced IP network services.

Options

block-label-range range-start range-end—Display the details of block label type.

dynamic-label-range range-start range-end —Display the details of dynamic label type.

label-limit label-limit value—Limit for the number of concurrent active labels.

lsi-label-range range-start range-end—Display the details of LSI label type.

static-label-range range-start range-end—Display the details of static label type.

Required Privilege Level

view

RELATED DOCUMENTATION

[show mpls label usage](#) | 2325

Output Fields

[Table 59 on page 2330](#) describes the output fields for the **show mpls label usage label-range** command. Output fields are listed in the order in which they appear.

Table 59: show mpls label usage label-range Fields

Field Name	Field Description
Label Space	Indicates the different types of labels currently used in MPLS.
Total	Indicates the total label space available.
Available	Indicates the number of freely available labels and also the percentage of the label space available.
Applications	Indicates the applications that use the MPLS label spaces.
Effective Ranges	Indicates actual ranges in use, which can be different from configured ranges, if conflicting with label already allocated.
Configured Ranges	Indicates the currently configured range assigned to different label spaces on the device.
Total	Indicates the currently used labels with label type and application type details.

Sample Output

With the **enhanced-ip** command enabled on the supported device, you get the following output.

```
user@host> show mpls label usage label-range 16 600
```

```

Label space Total   Available      Applications
LSI           101      99    (98.02% ) BGP/LDP VPLS with no-tunnel-services, BGP
L3VPN with vrf-table-label
Block        101      101   (100.00%) BGP/LDP VPLS with tunnel-services, BGP L2VPN
Dynamic       101      98    (97.03% ) RSVP, LDP, PW, L3VPN, RSVP-P2MP, LDP-P2MP,
MVPN, EVPN, BGP
Static       48576   48576  (100.00%) Static LSP, Static PW
Effective Ranges

```

Range name	Shared	with	Start	End
LSI	300		400	
Block	500		600	
Dynamic	100		200	
Static	1000000		1048575	

Configured Ranges

Range name	Shared	with	Start	End
LSI	300		400	
Block	500		600	
Dynamic	100		200	
Static	1000000		1048575	

Total(16 to 600) 5

Label type Alloc count

LSI 2

Dynamic 3

App type Alloc count

LDP 1

BGP 2

RT_INSTANCE 2

show mpls lsp

List of Syntax

[Syntax on page 2332](#)

[Syntax \(EX Series Switches\) on page 2332](#)

Syntax

```
show mpls lsp
<brief | detail | extensive | terse>
<abstract-computation>
<autobandwidth>
<bidirectional | unidirectional>
<bypass>
<count-active-routes>
<defaults>
<descriptions>
<down | up>
<externally-controlled>
<externally-provisioned>
<instance routing-instance-name>
<locally-provisioned>
<logical-system (all | logical-system-name)>
<lsp-type>
<name name>
<p2mp>
<reverse-statistics>
<segment>
<statistics>
<transit>
```

Syntax (EX Series Switches)

```
show mpls lsp
<brief | detail | extensive | terse>
<bidirectional | unidirectional>
<bypass>
<descriptions>
<down | up>
<externally-controlled>
<externally-provisioned>
<lsp-type>
<name name>
<p2mp>
```

```
<statistics>
<transit>
```

Release Information

Command introduced before Junos OS Release 7.4.

defaults option added in Junos OS Release 8.5.

Command introduced in Junos OS Release 9.5 for EX Series switches.

autobandwidth option added in Junos OS Release 11.4.

externally-controlled option added in Junos OS Release 12.3.

externally-provisioned option added in Junos OS Release 13.3.

Command introduced in Junos OS Release 13.2X51-D15 for QFX Series.

instance *instance-name* option added in Junos OS Release 15.1.

Description

Display information about configured and active dynamic Multiprotocol Label Switching (MPLS) label-switched paths (LSPs).

Options

none—Display standard information about all configured and active dynamic MPLS LSPs.

brief | detail | extensive | terse—(Optional) Display the specified level of output. The extensive option displays the same information as the detail option, but covers the most recent 50 events.

In the extensive command output, the duplicate back-to-back messages are recorded as aggregated messages. An additional timestamp is included for these aggregated messages, where if the aggregated messages are five or less, timestamp deltas are recorded for each message, and if the aggregated messages are greater than five, the first and last timestamp is recorded.

For example:

- All timestamps

```
9204 Jun 29 13:23:45.405 54.239.43.110: Explicit Route: bad strict route [3
times - 13:21:00, 13:22:01, 13:23:10]
```

- Timestamp deltas

```
9204 Jun 29 13:23:45.405 54.239.43.110: Explicit Route: bad strict route [3
times - 13:21:00, +1:01, +2:10]
```

- First and last timestamp

```
9204 Jun 29 13:23:45.405 54.239.43.110: Explicit Route: bad strict route [6
times - 13:21:00, 13:23:10]
```

abstract-computation—(Optional) Display abstract computation preprocessing for LSPs.

See [show mpls lsp abstract-computation](#) for more details.

autobandwidth—(Optional) Display automatic bandwidth information. This option is explained separately (see [show mpls lsp autobandwidth](#)).

bidirectional | unidirectional—(Optional) Display bidirectional or unidirectional LSP information, respectively.

bypass—(Optional) Display LSPs used for protecting other LSPs.

count-active-routes—(Optional) Display active routes for LSPs.

defaults—(Optional) Display the MPLS LSP default settings.

descriptions—(Optional) Display the MPLS label-switched path (LSP) descriptions. To view this information, you must configure the description statement at the **[edit protocol mpls lsp]** hierarchy level. Only LSPs with a description are displayed. This command is only valid for the ingress routing device, because the description is not propagated in RSVP messages.

down | up—(Optional) Display only LSPs that are inactive or active, respectively.

externally-controlled—(Optional) Display the LSPs that are under the control of an external Path Computation Element (PCE).

externally-provisioned—(Optional) Display the LSPs that are generated dynamically and provisioned by an external Path Computation Element (PCE).

instance *instance-name*—(Optional) Display MPLS LSP information for the specified instance. If *instance-name* is omitted, MPLS LSP information is displayed for the master instance.

locally-provisioned—(Optional) Display LSPs that have been provisioned locally by the Path Computation Client (PCC).

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

lsp-type—(Optional) Display information about a particular LSP type:

- **bypass**—Sessions for bypass LSPs.
- **egress**—Sessions that terminate on this routing device.
- **ingress**—Sessions that originate from this routing device.

- **pop-and-forward**—Sessions that originate from RSVP-TE pop-and-forward LSP tunnels.
- **transit**—Sessions that pass through this routing device.

name *name*—(Optional) Display information about the specified LSP or group of LSPs.

p2mp—(Optional) Display information about point-to-multipoint LSPs.

reverse-statistics—(Optional) Display packet statistics for reverse direction of LSPs.

segment—(Optional) Display segment identifier (SID) labels.

statistics—(Optional) (Ingress and transit routers only) Display accounting information about LSPs. Statistics are not available for LSPs on the egress routing device, because the penultimate routing device in the LSP sets the label to 0. Also, as the packet arrives at the egress routing device, the hardware removes its MPLS header and the packet reverts to being an IPv4 packet. Therefore, it is counted as an IPv4 packet, not an MPLS packet.

NOTE: If a bypass LSP is configured for the primary static LSP, display cumulative statistics of packets traversing through the protected LSP and bypass LSP when traffic is re-optimized when the protected LSP link is restored. (Bypass LSPs are not supported on QFX Series switches.)

When used with the **bypass** option (**show mpls lsp bypass statistics**), display statistics for the traffic that flows only through the bypass LSP.

transit—(Optional) Display LSPs transiting this routing device.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear mpls lsp | 2221](#)

[show mpls lsp autobandwidth | 2361](#)

List of Sample Output

[show mpls lsp defaults on page 2346](#)

[show mpls lsp descriptions on page 2346](#)

[show mpls lsp detail on page 2346](#)

[show mpls lsp detail \(When Egress Protection Is in Standby Mode\) on page 2347](#)

[show mpls lsp detail \(When Egress Protection Is in Effect During a Local Repair\) on page 2348](#)

[show mpls lsp extensive on page 2349](#)

[show mpls lsp ingress extensive on page 2351](#)

[show mpls lsp extensive \(automatic bandwidth adjustment enabled\) on page 2352](#)

[show mpls lsp bypass extensive on page 2353](#)

[show mpls lsp p2mp on page 2354](#)

[show mpls lsp p2mp detail on page 2354](#)

[show mpls lsp detail count-active-routes on page 2355](#)

[show mpls lsp statistics extensive on page 2356](#)

Output Fields

Table 60 on page 2336 describes the output fields for the **show mpls lsp** command. Output fields are listed in the approximate order in which they appear.

Table 60: show mpls lsp Output Fields

Field Name	Field Description	Level of Output
Ingress LSP	Information about LSPs on the ingress routing device. Each session has one line of output.	All levels
Egress LSP	Information about the LSPs on the egress routing device. MPLS learns this information by querying RSVP, which holds all the transit and egress session information. Each session has one line of output.	All levels
Transit LSP	Number of LSPs on the transit routing devices and the state of these paths. MPLS learns this information by querying RSVP, which holds all the transit and egress session information.	All levels
P2MP name	Name of the point-to-multipoint LSP. Dynamically generated P2MP LSPs used for VPLS flooding use dynamically generated P2MP LSP names. The name uses the format <i>identifier:vppls:router-id:routing-instance-name</i> . The <i>identifier</i> is automatically generated by Junos OS.	All levels
P2MP branch count	Number of destination LSPs the point-to-multipoint LSP is transmitting to.	All levels
P	An asterisk (*) under this heading indicates that the LSP is a primary path.	All levels
address	(detail and extensive) Destination (egress routing device) of the LSP.	detail extensive
To	Destination (egress routing device) of the session.	brief
From	Source (ingress routing device) of the session.	brief detail
State	State of the LSP handled by this RSVP session: Up , Dn (down), or Restart .	brief detail

Table 60: show mpls lsp Output Fields (continued)

Field Name	Field Description	Level of Output
Active Route	Number of active routes (prefixes) installed in the forwarding table. For ingress LSPs, the forwarding table is the primary IPv4 table (inet.0). For transit and egress RSVP sessions, the forwarding table is the primary MPLS table (mpls.0).	detail extensive
Rt	Number of active routes (prefixes) installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table (inet.0). For transit and egress RSVP sessions, the routing table is the primary MPLS table (mpls.0).	brief
P	Path. An asterisk (*) underneath this column indicates that the LSP is a primary path.	brief
ActivePath	(Ingress LSP) Name of the active path: Primary or Secondary .	detail extensive
LSPname	Name of the LSP.	brief detail
Statistics	Displays the number of packets and the number of bytes transmitted over the LSP. These counters are reset to zero whenever the LSP path is optimized (for example, during an automatic bandwidth allocation).	extensive
Aggregate statistics	Displays the number of packets and the number of bytes transmitted over the LSP. These counters continue to iterate even if the LSP path is optimized. You can reset these counters to zero using the clear mpls lsp statistics command.	extensive
Packets	Displays the number of packets transmitted over the LSP.	brief extensive
Bytes	Displays the number of bytes transmitted over the LSP.	brief extensive
DiffServeInfo	Type of LSP: multiclass LSP (multiclass diffServ-TE LSP) or Differentiated-Services-aware traffic engineering LSP (diffServ-TE LSP).	detail
LSPtype	Type of LSP: <ul style="list-style-type: none"> • Static configured—Static • Dynamic configured—Dynamic • Externally controlled—External path computing entity Also indicates if the LSP is a Penultimate hop popping LSP or an Ultimate hop popping LSP.	detail extensive

Table 60: show mpls lsp Output Fields (continued)

Field Name	Field Description	Level of Output
Bypass	(Bypass LSP) Destination address (egress routing device) for the bypass LSP.	All levels
LSPpath	Indicates whether the RSVP session is for the primary or secondary LSP path. LSPpath can be either primary or secondary and can be displayed on the ingress, egress, and transit routing devices.	detail
Bidir	(GMPLS) The LSP allows data to travel in both directions between GMPLS devices.	All levels
Bidirectional	(GMPLS) The LSP allows data to travel both ways between GMPLS devices.	All levels
FastReroute desired	Fast reroute has been requested by the ingress routing device.	detail
Link protection desired	Link protection has been requested by the ingress routing device.	detail
Node/Link protection desired	Link protection has been requested by the ingress routing device.	detail
LSP Control Status	<p>(Ingress LSP) LSP control mode:</p> <ul style="list-style-type: none"> • External—By default, all PCE-controlled LSPs are under external control. When an LSP is under external control, the PCC uses the PCE-provided parameters to set up the LSP. • Local—A PCE-controlled LSP can come under local control. When the LSP switches from external control to local control, path computation is done using the CLI-configured parameters and constraint-based routing. Such a switchover happens only when there is a trigger to re-signal the LSP. Until then, the PCC uses the PCE-provided parameters to signal the PCE-controlled LSP, although the LSP remains under local control. <p>A PCE-controlled LSP switches to local control from its default external control mode in cases such as no connectivity to a PCE or when a PCE returns delegation of LSPs back to the PCC.</p>	extensive

Table 60: show mpls lsp Output Fields (continued)

Field Name	Field Description	Level of Output
External Path CSPF status	(PCE-controlled LSPs) Status of the PCE-controlled LSP with per path attributes: <ul style="list-style-type: none"> • Local • External 	extensive
Externally Computed ERO	(PCE-controlled LSPs) Externally computed explicit route when the route object is not null or empty. A series of hops, each with an address followed by a hop indicator. The value of the hop indicator can be strict (S) or loose (L).	extensive
EXTCTRL_LSP	(PCE-controlled LSPs) Display path history including the bandwidth, priority, and metric values received from the external controller.	extensive
flap counter	Counts the number of times a LSP flaps down or up.	extensive
LoadBalance	(Ingress LSP) CSPF load-balancing rule that was configured to select the LSP's path among equal-cost paths: Most-fill , Least-fill , or Random .	detail extensive
Signal type	Signal type for GMPLS LSPs. The signal type determines the peak data rate for the LSP: DS0 , DS3 , STS-1 , STM-1 , or STM-4 .	All levels
Encoding type	LSP encoding type: Packet , Ethernet , PDH , SDH/SONET , Lambda , or Fiber .	All levels
Switching type	Type of switching on the links needed for the LSP: Fiber , Lambda , Packet , TDM , or PSC-1 .	All levels
GPID	Generalized Payload Identifier (identifier of the payload carried by an LSP): HDLC , Ethernet , IPv4 , PPP , or Unknown .	All levels
Protection	Configured protection capability desired for the LSP: Extra , Enhanced , none , One plus one , One to one , or Shared .	All levels
Upstream label in	(Bidirectional LSPs) Incoming label for reverse direction traffic for this LSP.	All levels
Upstream label out	(Bidirectional LSPs) Outgoing label for reverse direction traffic for this LSP.	All levels
Suggested label received	(Bidirectional LSPs) Label the upstream interface suggests to use in the Resv message that is sent.	All levels

Table 60: show mpls lsp Output Fields (*continued*)

Field Name	Field Description	Level of Output
Suggested label sent	(Bidirectional LSPs) Label the downstream node suggests to use in the Resv message that is returned.	All levels
Autobandwidth	(Ingress LSP) The LSP is performing autobandwidth allocation.	detail extensive
Mbb counter	Counts the number of times a LSP incurs MBB.	extensive
MinBW	(Ingress LSP) Configured minimum value of the LSP, in bps.	detail extensive
MaxBW	(Ingress LSP) Configured maximum value of the LSP, in bps.	detail extensive
Dynamic MinBW	(Ingress LSP) Displays the current dynamically specified minimum bandwidth allocation for the LSP, in bps.	detail extensive
Dynamic MinBW	(Ingress LSP) Displays the current dynamically specified minimum bandwidth allocation for the LSP, in bps.	detail extensive
AdjustTimer	(Ingress LSP) Configured value for the adjust-timer statement, indicating the total amount of time allowed before bandwidth adjustment will take place, in seconds.	detail extensive
Adjustment Threshold	(Ingress LSP) Configured value for the adjust-threshold statement. Specifies how sensitive the automatic bandwidth adjustment for an LSP is to changes in bandwidth utilization.	detail extensive
Time for Next Adjustment	(Ingress LSP) Time in seconds until the next automatic bandwidth adjustment sample is taken.	detail extensive
Time of Last Adjustment	(Ingress LSP) Date and time since the last automatic bandwidth adjustment was completed.	detail extensive
MaxAvgBW util	(Ingress LSP) Current value of the actual maximum average bandwidth utilization, in bps.	detail extensive
Overflow limit	(Ingress LSP) Configured value of the threshold overflow limit.	detail extensive
Overflow sample count	(Ingress LSP) Current value for the overflow sample count.	detail extensive

Table 60: show mpls lsp Output Fields (continued)

Field Name	Field Description	Level of Output
Bandwidth Adjustment in <i>nnn</i> second(s)	(Ingress LSP) Current value of the bandwidth adjustment timer, indicating the amount of time remaining until the bandwidth adjustment will take place, in seconds.	detail extensive
Underflow limit	(Ingress LSP) Configured value of the threshold underflow limit.	detail extensive
Underflow sample count	(Ingress LSP) Current value for the underflow sample count.	detail extensive
Underflow Max AvgBW	(Ingress LSP) The highest sample bandwidth among the underflow samples recorded currently. This is the signaling bandwidth if an adjustment occurs because of an underflow.	detail extensive
Active path indicator	(Ingress LSP) A value of * indicates that the path is active. The absence of * indicates that the path is not active. In the following example, "long" is the active path. *Primary long Standby short	detail extensive
Primary	(Ingress LSP) Name of the primary path.	detail extensive
Secondary	(Ingress LSP) Name of the secondary path.	detail extensive
Standby	(Ingress LSP) Name of the path in standby mode.	detail extensive
State	(Ingress LSP) State of the path: Up or Dn (down).	detail extensive
COS	(Ingress LSP) Class-of-service value.	detail extensive
Bandwidth per class	(Ingress LSP) Active bandwidth for the LSP path for each MPLS class type, in bps.	detail extensive
Priorities	(Ingress LSP) Configured value of the setup priority and the hold priority respectively (the setup priority is displayed first), where 0 is the highest priority and 7 is the lowest priority. If you have not explicitly configured these values, the default values are displayed (7 for the setup priority and 0 for the hold priority).	detail extensive
OptimizeTimer	(Ingress LSP) Configured value of the optimize timer, indicating the total amount of time allowed before path reoptimization, in seconds.	detail extensive

Table 60: show mpls lsp Output Fields (*continued*)

Field Name	Field Description	Level of Output
SmartOptimizeTimer	(Ingress LSP) Configured value of the smart optimize timer, indicating the total amount of time allowed before path reoptimization, in seconds.	detail extensive
Reoptimization in xxx seconds	(Ingress LSP) Current value of the optimize timer, indicating the amount of time remaining until the path will be reoptimized, in seconds.	detail extensive
Computed ERO (S [L] denotes strict [loose] hops)	(Ingress LSP) Computed explicit route. A series of hops, each with an address followed by a hop indicator. The value of the hop indicator can be strict (S) or loose (L).	detail extensive
CSPF metric	(Ingress LSP) Constrained Shortest Path First metric for this path.	detail extensive

Table 60: show mpls lsp Output Fields (continued)

Field Name	Field Description	Level of Output
Received RRO	<p>(Ingress LSP) Received record route. A series of hops, each with an address followed by a flag. (In most cases, the received record route is the same as the computed explicit route. If Received RRO is different from Computed ERO, there is a topology change in the network, and the route is taking a detour.) The following flags identify the protection capability and status of the downstream node:</p> <ul style="list-style-type: none"> ● 0x01—Local protection available. The link downstream from this node is protected by a local repair mechanism. This flag can be set only if the Local protection flag was set in the SESSION_ATTRIBUTE object of the corresponding Path message. ● 0x02—Local protection in use. A local repair mechanism is in use to maintain this tunnel (usually because of an outage of the link it was routed over previously). ● 0x03—Combination of 0x01 and 0x02. ● 0x04—Bandwidth protection. The downstream routing device has a backup path providing the same bandwidth guarantee as the protected LSP for the protected section. ● 0x08—Node protection. The downstream routing device has a backup path providing protection against link and node failure on the corresponding path section. If the downstream routing device can set up only a link-protection backup path, the Local protection available bit is set but the Node protection bit is cleared. ● 0x09—Detour is established. Combination of 0x01 and 0x08. ● 0x10—Preemption pending. The preempting node sets this flag if a pending preemption is in progress for the traffic engine LSP. This flag indicates to the ingress legacy edge router (LER) of this LSP that it should be rerouted. ● 0x20—Node ID. Indicates that the address specified in the RRO's IPv4 or IPv6 sub-object is a node ID address, which refers to the router address or router ID. Nodes must use the same address consistently. ● 0xb—Detour is in use. Combination of 0x01, 0x02, and 0x08. 	detail extensive
Labels	<p>Labels of pop-and-forward LSP tunnel:</p> <ul style="list-style-type: none"> ● P—Pop labels. ● D—Delegation labels. 	extensive
Index number	(Ingress LSP) Log entry number of each LSP path event. The numbers are in chronological descending order, with a maximum of 50 index numbers displayed.	extensive

Table 60: show mpls lsp Output Fields (continued)

Field Name	Field Description	Level of Output
Date	(Ingress LSP) Date of the LSP event.	extensive
Time	(Ingress LSP) Time of the LSP event.	extensive
Event	(Ingress LSP) Description of the LSP event.	extensive
Created	(Ingress LSP) Date and time the LSP was created.	extensive
Resv style	(Bypass) RSVP reservation style. This field consists of two parts. The first is the number of active reservations. The second is the reservation style, which can be FF (fixed filter), SE (shared explicit), or WF (wildcard filter).	brief detail extensive
Labelin	Incoming label for this LSP.	brief detail
Labelout	Outgoing label for this LSP.	brief detail
LSPname	Name of the LSP.	brief detail
Time left	Number of seconds remaining in the lifetime of the reservation.	detail
Since	Date and time when the RSVP session was initiated.	detail
Tspec	Sender's traffic specification, which describes the sender's traffic parameters.	detail
Port number	Protocol ID and sender or receiver port used in this RSVP session.	detail
PATH rcvfrom	Address of the previous-hop (upstream) routing device or client, interface the neighbor used to reach this router, and number of packets received from the upstream neighbor.	detail
PATH sentto	Address of the next-hop (downstream) routing device or client, interface used to reach this neighbor, and number of packets sent to the downstream routing device.	detail
RESV rcvfrom	Address of the previous-hop (upstream) routing device or client, interface the neighbor used to reach this routing device, and number of packets received from the upstream neighbor. The output in this field, which is consistent with that in the PATH rcvfrom field, indicates that the RSVP negotiation is complete.	detail

Table 60: show mpls lsp Output Fields (continued)

Field Name	Field Description	Level of Output
Record route	Recorded route for the session, taken from the record route object.	detail
Pop-and-forward	Attributes of the pop-and-forward LSP tunnel.	extensive
ETLD In	Number of transport labels that the LSP-Hop can potentially receive from its upstream hop. It is recorded as Effective Transport Label Depth (ETLD) at the transit and egress devices.	extensive
ETLD Out	Number of transport labels the LSP-Hop can potentially send to its downstream hop. It is recorded as ETLD at the transit and ingress devices.	extensive
Delegation hop	Specifies if the transit hop is selected as a delegation label: <ul style="list-style-type: none"> • Yes • No 	extensive
Soft preempt	Number of soft preemptions that occurred on a path and when the last soft preemption occurred. Only successful soft preemptions are counted (those that actually resulted in a new path being used).	detail
Soft preemption pending	Path is in the process of being soft preempted. This display is removed once the ingress router has calculated a new path.	detail
MPLS-TE LSP Defaults	Default settings for MPLS traffic engineered LSPs: <ul style="list-style-type: none"> • LSP Holding Priority—Determines the degree to which an LSP holds on to its session reservation after the LSP has been set up successfully. • LSP Setup Priority—Determines whether a new LSP that preempts an existing LSP can be established. • Hop Limit—Specifies the maximum number of routers the LSP can traverse (including the ingress and egress). • Bandwidth—Specifies the bandwidth in bits per second for the LSP. • LSP Retry Timer—Length of time in seconds that the ingress router waits between attempts to establish the primary path. 	defaults

The XML tag name of the **bandwidth** tag under the **auto-bandwidth** tag has been updated to **maximum-average-bandwidth**. You can see the new tag when you issue the **show mpls lsp extensive** command with the **| display xml** pipe option. If you have any scripts that use the **bandwidth** tag, ensure that they are updated to **maximum-average-bandwidth**.

Sample Output

show mpls lsp defaults

user@host> show mpls lsp defaults

```
MPLS-TE LSP Defaults
  LSP Holding Priority      0
  LSP Setup Priority       7
  Hop Limit                255
  Bandwidth                0
  LSP Retry Timer          30 seconds
```

show mpls lsp descriptions

user@host> show mpls lsp descriptions

```
Ingress LSP: 3 sessions
To           LSP name           Description
10.0.0.195   to-sanjose                 to-sanjose-desc
10.0.0.195   to-sanjose-other-desc      other-desc
Total 2 displayed, Up 2, Down 0
```

show mpls lsp detail

user@host> show mpls lsp detail

```
Ingress LSP: 1 sessions

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
  ActivePath: (primary)
  LSPTYPE: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
  10.0.0.18 S 10.0.0.22 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
  20=Node-ID):
      10.0.0.18 10.0.0.22
Total 1 displayed, Up 1, Down 0
```

```

Egress LSP: 1 sessions

192.168.0.5
  From: 192.168.0.4, LSPstate: Up, ActiveRoute: 0
  LSPname: E-D, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 157, Since: Wed Jul 18 17:55:12 2012
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 46128 protocol 0
  PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 3 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.0.22 10.0.0.18 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

show mpls lsp detail (When Egress Protection Is in Standby Mode)

user@host> show mpls lsp detail

```

Ingress LSP: 1 sessions

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
  ActivePath: (primary)
  LSPtype: Static Configured, Ultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
10.0.0.18 S 10.0.0.22 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
      10.0.0.18 10.0.0.22
    11 Sep 20 15:54:35.032 Make-before-break: Switched to new instance
    10 Sep 20 15:54:34.029 Record Route: 10.0.0.18 10.0.0.22

```

```

    9 Sep 20 15:54:34.029 Up
    8 Sep 20 15:54:20.271 Originate make-before-break call
    7 Sep 20 15:54:20.271 CSPF: computation result accepted 10.0.0.18 10.0.0.22
    6 Sep 20 15:52:10.247 Selected as active path
    5 Sep 20 15:52:10.246 Record Route: 10.0.0.18 10.0.0.22
    4 Sep 20 15:52:10.243 Up
    3 Sep 20 15:52:09.745 Originate Call
    2 Sep 20 15:52:09.745 CSPF: computation result accepted 10.0.0.18 10.0.0.22
    1 Sep 20 15:51:39.903 CSPF failed: no route toward 192.168.0.4
Created: Thu Sep 20 15:51:08 2012
Total 1 displayed, Up 1, Down 0

```

Egress LSP: 1 sessions

```

192.168.0.5
  From: 192.168.0.4, LSPstate: Up, ActiveRoute: 0
  LSPname: E-D, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 148, Since: Thu Sep 20 15:52:10 2012
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 49601 protocol 0
  PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 27 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.0.22 10.0.0.18 <self>
Total 1 displayed, Up 1, Down 0

```

Transit LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

show mpls lsp detail (When Egress Protection Is in Effect During a Local Repair)

user@host> show mpls lsp detail

Ingress LSP: 1 sessions

```

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
  ActivePath: (primary)
  LSPtype: Static Configured, Penultimate hop popping
  LoadBalance: Random

```

```

Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
10.0.0.18 S 10.0.0.22 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.0.0.18 10.0.0.22
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.0.5
  From: 192.168.0.4, LSPstate: Down, ActiveRoute: 0
  LSPname: E-D, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 157, Since: Wed Jul 18 17:55:12 2012
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 46128 protocol 0
Egress protection PLR as protector: In Use
PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 3 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.0.22 10.0.0.18 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

show mpls lsp extensive

```
user@host> show mpls lsp extensive
```

```

Ingress LSP: 1 sessions

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
  ActivePath: (primary)
  LSPTtype: Static Configured, Ultimate hop popping
  LSP Control Status: Externally controlled

```

```

LoadBalance: Random
Metric: 10
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  External Path CSPF status: local
  Bandwidth: 98.76kbps
  SmartOptimizeTimer: 180
  Include All: green
  Externally Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 0)
1.2.3.2 S 2.3.3.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.0.0.18 10.0.0.22
  9 May 17 16:55:06.574 EXTCTRL LSP: Sent Path computation request and LSP status

  8 May 17 16:55:06.574 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 98760 req BW 0 admin group(exclude 0 include any 0 include all 16)
priority setup 5 hold 4 hops: 1.2.3.2 2.3.3.2
  7 May 17 16:55:06.574 Selected as active path
  6 May 17 16:55:06.558 EXTCTRL LSP: Sent Path computation request and LSP status

  8 May 17 16:55:06.574 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 98760 req BW 0 admin group(exclude 0 include any 0 include all 16)
priority setup 5 hold 4 hops: 1.2.3.2 2.3.3.2
  7 May 17 16:55:06.574 Selected as active path
  6 May 17 16:55:06.558 EXTCTRL LSP: Sent Path computation request and LSP status

  5 May 17 16:55:06.558 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 98760 req BW 0 admin group(exclude 0 include any 0 include all 16)
priority setup 5 hold 4 hops: 1.2.3.2 2.3.3.2
  4 May 17 16:55:06.557 Record Route: 1.2.3.2 2.3.3.2
  3 May 17 16:55:06.557 Up
  2 May 17 16:55:06.382 Originate Call
  1 May 17 16:55:06.382 EXTCTRL_LSP: Received setup parameters :: local_cspf,
1.2.3.2 2.3.3.2
  Created: Tue May 17 16:55:07 2016
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.0.5
  From: 192.168.0.4, LSPstate: Up, ActiveRoute: 0
  LSPname: E-D, LSPpath: Primary

```

```

Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 148, Since: Thu Sep 20 15:52:10 2012
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 49601 protocol 0
PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 27 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.0.0.22 10.0.0.18 <self>

```

show mpls lsp ingress extensive

user@host> show mpls lsp ingress extensive

```

Ingress LSP: 1 sessions

50.0.0.1
  From: 10.0.0.1, State: Up, ActiveRoute: 0, LSPname: test
  ActivePath: (primary)
  LSPTtype: Static Pop-and-forward Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    OptimizeTimer: 300
    SmartOptimizeTimer: 180
    Reoptimization in 240 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
    1.1.1.2 S 4.4.4.1 S 5.5.5.2 S
      Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
        (Labels: P=Pop D=Delegation)
        80.1.1.2(Label=18 P) 50.1.1.2(Label=17 P) 70.1.1.2(Label=16 P)
        92.1.1.1(Label=16 D) 93.1.1.2(Label=16 P) 99.1.1.1(Label=16 P)
        99.2.1.1(Label=16 P) 99.3.1.2(Label=3)
    17 Aug 3 13:17:33.601 CSPF: computation result ignored, new path less avail
bw[3 times]
    16 Aug 3 13:02:51.283 CSPF: computation result ignored, new path no benefit[2
times]
    15 Aug 3 12:54:36.678 Selected as active path
    14 Aug 3 12:54:36.676 Record Route: 1.1.1.2 4.4.4.1 5.5.5.2

```

```

13 Aug  3 12:54:36.676 Up
12 Aug  3 12:54:33.924 Deselected as active
11 Aug  3 12:54:33.924 Originate Call
10 Aug  3 12:54:33.923 Clear Call
 9 Aug  3 12:54:33.923 CSPF: computation result accepted 1.1.1.2 4.4.4.1 5.5.5.2

 8 Aug  3 12:54:33.922 2.2.2.2: No Route toward dest
 7 Aug  3 12:54:28.177 CSPF: computation result ignored, new path no benefit[4
times]
 6 Aug  3 12:35:03.830 Selected as active path
 5 Aug  3 12:35:03.828 Record Route: 2.2.2.2 3.3.3.2
 4 Aug  3 12:35:03.827 Up
 3 Aug  3 12:35:03.814 Originate Call
 2 Aug  3 12:35:03.814 CSPF: computation result accepted 2.2.2.2 3.3.3.2
 1 Aug  3 12:34:34.921 CSPF failed: no route toward 50.0.0.1
Created: Tue Aug  3 12:34:35 2010
Total 1 displayed, Up 1, Down 0

```

show mpls lsp extensive (automatic bandwidth adjustment enabled)

user@host> show mpls lsp extensive

```

Ingress LSP: 1 sessions

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
  ActivePath: (primary)
  Node/Link protection desired
  LSPTYPE: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 300bps, MaxBW: 1000bps, Dynamic MinBW: 1000bps
  Adjustment Timer: 300 secs AdjustThreshold: 25%
  Max AvgBW util: 963.739bps, Bandwidth Adjustment in 0 second(s).
  Min BW Adjust Interval: 1000, MinBW Adjust Threshold (in %): 50
  Overflow limit: 0, Overflow sample count: 0
  Underflow limit: 0, Underflow sample count: 9, Underflow Max AvgBW: 614.421bps
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  Bandwidth: 1000bps
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
10.0.0.18 S 10.0.0.22 S

```



```

    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
        192.168.0.6(flag=0x20) 10.0.0.18(Label=299792) 192.168.0.4(flag=0x20)
10.0.0.22(Label=3)
    12 Apr 30 10:25:17.024 Make-before-break: Switched to new instance
    11 Apr 30 10:25:16.023 Record Route: 192.168.0.6(flag=0x20)
10.0.0.18(Label=299792) 192.168.0.4(flag=0x20) 10.0.0.22(Label=3)
    10 Apr 30 10:25:16.023 Up
    9 Apr 30 10:25:16.023 Automatic Autobw adjustment succeeded: BW changes from
300 bps to 1000 bps
    8 Apr 30 10:25:15.946 Originate make-before-break call
    7 Apr 30 10:25:15.946 CSPF: computation result accepted 10.0.0.18 10.0.0.22
    6 Apr 30 10:16:42.891 Selected as active path
    5 Apr 30 10:16:42.891 Record Route: 192.168.0.6(flag=0x20)
10.0.0.18(Label=299776) 192.168.0.4(flag=0x20) 10.0.0.22(Label=3)
    4 Apr 30 10:16:42.890 Up
    3 Apr 30 10:16:42.828 Originate Call
    2 Apr 30 10:16:42.828 CSPF: computation result accepted 10.0.0.18 10.0.0.22
    1 Apr 30 10:16:14.064 CSPF: could not determine self[2 times]
    Created: Tue Apr 30 10:15:16 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

show mpls lsp bypass extensive

```
user@host # show mpls lsp bypass extensive
```

```

Ingress LSP: 1 sessions

2.2.2.2
  From: 1.1.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->1.1.2.2
  LSPTtype: Static Configured
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 300032
  Resv style: 1 SE, Label in: -, Label out: 300032
  Time left: -, Since: Tue Dec 3 15:19:49 2013
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

```

```

Port number: sender 1 receiver 55750 protocol 0
Type: Bypass LSP
  Number of data route tunnel through: 1
  Number of RSVP session tunnel through: 0
PATH rcvfrom: localclient
Adspec: sent MTU 1500
Path MTU: received 1500
PATH sentto: 1.1.5.2 (lt-1/2/0.15) 1221 pkts
RESV rcvfrom: 1.1.5.2 (lt-1/2/0.15) 1221 pkts, Entropy label: No
Explot route: 1.1.5.2 1.2.5.1
Record route: <self> 1.1.5.2 1.2.5.1
+      4 Dec  3 15:19:49 Record Route: 1.1.5.2 1.2.5.1
+      3 Dec  3 15:19:49 Up
+      2 Dec  3 15:19:49 CSPF: computation result accepted
+      1 Dec  3 15:19:47 Originate Call
Total 1 displayed, Up 1, Down 0
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
Transit LSP: 0 sessions

```

show mpls lsp p2mp

user@host> show mpls lsp p2mp

```

Ingress LSP: 2 sessions
P2MP name: p2mp-lsp1, P2MP branch count: 1
To          From          State Rt P ActivePath      LSPname
10.255.245.51 10.255.245.50 Up    0 * path1        p2mp-branch-1
P2MP name: p2mp-lsp2, P2MP branch count: 1
To          From          State Rt P ActivePath      LSPname
10.255.245.51 10.255.245.50 Up    0 * path1        p2mp-st-br1
Total 2 displayed, Up 2, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

show mpls lsp p2mp detail

user@host> show mpls lsp p2mp detail

```

Ingress LSP: 2 sessions
P2MP name: p2mp-lsp1, P2MP branch count: 1

10.255.245.51
  From: 10.255.245.50, State: Up, ActiveRoute: 0, LSPname: p2mp-branch-1
  ActivePath: path1 (primary)
  P2MP name: p2mp-lsp1
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary   path1           State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 25)
192.168.208.17 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    192.168.208.17
P2MP name: p2mp-lsp2, P2MP branch count: 1

10.255.245.51
  From: 10.255.245.50, State: Up, ActiveRoute: 0, LSPname: p2mp-st-br1
  ActivePath: path1 (primary)
  P2MP name: p2mp-lsp2
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary   path1           State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 25)
192.168.208.17 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    192.168.208.17
Total 2 displayed, Up 2, Down 0

```

show mpls lsp detail count-active-routes

user@host> show mpls lsp detail count-active-routes

```

Ingress LSP: 1 sessions

213.119.192.2
  From: 156.154.162.128, State: Up, ActiveRoute: 1, LSPname: to-lahore
  ActivePath: (primary)
  LSPtype: Static Configured
  LoadBalance: Random
  Autobandwidth
  MinBW: 5Mbps MaxBW: 250Mbps

```

```

AdjustTimer: 300 secs
Max AvgBW util: 0bps, Bandwidth Adjustment in 102 second(s).
Overflow limit: 0, Overflow sample count: 0
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  Bandwidth: 5Mbps
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 4)
10.252.0.177 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.252.0.177
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

show mpls lsp statistics extensive

```
user@host> show mpls lsp statistics extensive
```

```

Ingress LSP: 1 sessions

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
  Statistics: Packets 302, Bytes 28992
  Aggregate statistics: Packets 302, Bytes 28992
  ActivePath: (primary)
  LSPTYPE: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
10.0.0.18 S 10.0.0.22 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.0.0.18 10.0.0.22
    6 Oct 3 11:18:28.281 Selected as active path

```

```
5 Oct  3 11:18:28.281 Record Route:  10.0.0.18 10.0.0.22
4 Oct  3 11:18:28.280 Up
3 Oct  3 11:18:27.995 Originate Call
2 Oct  3 11:18:27.995 CSPF: computation result accepted  10.0.0.18 10.0.0.22
1 Oct  3 11:17:59.118 CSPF failed: no route toward 192.168.0.4[2 times]
Created: Wed Oct  3 11:17:01 2012
Total 1 displayed, Up 1, Down 0
```

show mpls lsp abstract-computation

Syntax

```
show mpls lsp abstract-computation
<brief | detail | extensive>;
<logical-system (all | logical-system-name)>;
<name lsp-name>;
```

Release Information

Command introduced in Junos OS Release 17.1 for all platforms.

Description

Display the ingress to egress abstract hop computation used by the constrained shortest path in the preprocessing for LSPs. The command output displays the various computation passes involved per LSP, and the qualifying exit devices for each pass. It also displays the affinity per pass, and the current start device chosen for the pass.

Options

brief | detail | extensive—(Optional) Display the desired level of output.

logical-system (all | *logical-system-name*)—(Optional) Display the abstract computation for abstract hop constraints on all logical systems or on a particular logical system.

lsp-name—(Optional) Name of the LSP for which the abstract hop computation is displayed.

Required Privilege Level

view

RELATED DOCUMENTATION

[Example: Configuring Abstract Hops for MPLS LSPs | 441](#)

[abstract-hop | 1656](#)

[constituent-list | 1700](#)

[show mpls abstract-hop-membership | 2288](#)

List of Sample Output

[show mpls lsp abstract-computation on page 2359](#)

Output Fields

[Table 61 on page 2359](#) describes the output fields for the **show mpls lsp abstract-computation** command. Output fields are listed in the approximate order in which they appear.

Table 61: show mpls lsp abstract-computation Output Fields

Field Name	Field Description
Path computation using abstract hops for LSP	Name of the LSP for which the abstract hop computation is performed.
Path type	The type of the path can be primary or secondary.
Path name	Name of the path.
Credibility	Credibility value associated with the interior gateway protocol in use.
Total no of CSPF passes	Number of constrained shortest path passes for the abstract hop.
CSPF pass no	Constrained shortest path pass number for the abstract hop computation.
Start address of the pass	IP address where the pass starts.
Affinity	Name of the abstract hop.
Destination	Destination IP address for a node in the pass.
State	State of the backtracking: <ul style="list-style-type: none"> • Valid • Disqualified

Sample Output

show mpls lsp abstract-computation

user@R0> **show mpls lsp abstract-computation**

```

Path computation using abstract hops for LSP: R0-R31
Path type: Primary, Path name: prim
Credibility: 0, Total no of CSPF passes: 2
CSPF pass no: 0
Start address of the pass: 127.0.0.6
Destination: 127.0.0.1, State: VALID
Destination: 127.0.0.2, State: VALID
Destination: 127.0.0.3, State: VALID
Affinity: ahl

```

```
CSPF pass no: 1
Start address of the pass: 127.0.0.1
Destination: 127.0.0.3, State: VALID
Path type: Secondary, Path name: nonstdby
Path type: Standby, Path name: stdby
Credibility: 0, Total no of CSPF passes: 2
CSPF pass no: 0
Start address of the pass: 127.0.0.6
Destination: 127.0.0.3, State: VALID
Destination: 127.0.0.4, State: VALID
Affinity: ah2
CSPF pass no: 1
Start address of the pass: 127.0.0.4
Destination: 127.0.0.3, State: VALID
```


show mpls lsp autobandwidth

Syntax

```
show mpls lsp autobandwidth
<brief | detail | extensive>
<logical-system (all | logical-system-name)>
<name lsp-name>
```

Release Information

Statement introduced in Junos OS Release 11.4.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 15.1X54-D60 for the ACX5000 Series.

Statement introduced in Junos OS Release 17.2R1 for QFX10000 Series switches.

name *lsp-name* option introduced in Junos OS Release 18.1R1 for all platforms.

Description

Display automatic bandwidth information for the LSP(s).

After a Routing Engine switchover, the output of the **show mpls autobandwidth** command might not be up-to-date, as the automatic bandwidth information for the LSP(s) is gathered by the new master Routing Engine during the first adjustment interval.

Options

brief | detail | extensive —(Optional) Display the specified level of output. The extensive option displays the same information as the detail option, but covers the most recent 50 events.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

name *lsp-name*—(Optional) Specify name of the LSP for which the automatic bandwidth information should be displayed.

Required Privilege Level

view

RELATED DOCUMENTATION

[show mpls lsp | 2332](#)

[Achieving a Make-Before-Break, Hitless Switchover for LSPs | 507](#)

List of Sample Output

[show mpls lsp autobandwidth on page 2363](#)

Output Fields

Table 62 on page 2362 describes the output fields for the **show mpls lsp autobandwidth** command. Output fields are listed in the approximate order in which they appear.

Table 62: show mpls lsp autobandwidth Output Fields

Field Name	Field Description	Level of Output
To	Destination (egress routing device) of the session.	All Levels
From	Source (ingress routing device) of the session.	All Levels
LSPname	Name of the LSP.	All Levels
Min BW	(Ingress LSP) Configured minimum value of the LSP, in bps.	detail extensive
Max BW	(Ingress LSP) Configured maximum value of the LSP, in bps.	detail extensive
Max AvgBW util	(Ingress LSP) Current value of the actual maximum average bandwidth utilization, in bps. NOTE: In calculating this value, the sample collected during make before break (MBB) is ignored to prevent inaccurate results. The first sample after a bandwidth adjustment, or after a change in the LSP ID (regardless of path change), is also ignored.	detail extensive
Overflow limit	(Ingress LSP) Configured value of the threshold overflow limit.	detail extensive
Overflow sample count	(Ingress LSP) Current value for the overflow sample count.	detail extensive
Underflow limit	(Ingress LSP) Configured value of the threshold underflow limit.	detail extensive
Underflow sample count	(Ingress LSP) Current value for the underflow sample count.	detail extensive
Adjustment Timer	(Ingress LSP) Configured value for the adjust-timer statement, indicating the total amount of time allowed before bandwidth adjustment will take place, in seconds.	detail extensive
Adjustment Threshold	(Ingress LSP) Configured value for the adjust-threshold statement. Specifies how sensitive the automatic bandwidth adjustment for an LSP is to changes in bandwidth utilization.	detail extensive
Time for Next Adjustment	(Ingress LSP) Time in seconds until the next automatic bandwidth adjustment sample is taken.	detail extensive

Table 62: show mpls lsp autobandwidth Output Fields (*continued*)

Field Name	Field Description	Level of Output
Time of Last Adjustment	(Ingress LSP) Date and time since the last automatic bandwidth adjustment was completed.	detail extensive
Last BW	Previous active bandwidth of the LSP.	detail extensive
Last Requested BW	Bandwidth requested in the previous automatic bandwidth adjustment.	detail extensive
Last Signaled BW	Bandwidth signaled in the previous automatic bandwidth adjustment.	detail extensive
Highest Watermark BW	Maximum bandwidth used by the LSP.	detail extensive
Total AutoBw Adjustments	Total number of attempts to adjust automatic bandwidth including failed and successful adjustments.	detail extensive
Successful Adjustments	Number of successful automatic bandwidth adjustments.	detail extensive
Failed Adjustments	Number of failed automatic bandwidth adjustments.	detail extensive

Sample Output

show mpls lsp autobandwidth

user@host> **show mpls lsp autobandwidth extensive**

```
To: 10.255.106.133,
From: 10.255.106.135, LSPname: r0-r1
Min BW: 100kbps, Max BW: 0bps, Max AvgBW util: 2.33249Mbps
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 0
Adjustment Timer: 300 sec, Adjustment Threshold: 0
Time for Next Adjustment: 23 sec, Time of Last Adjustment: Fri Jun  3 21:05:37
2011
Last BW: 100kbps, Last Requested BW: 2.2169Mbps, Last Signaled BW: 2.2169Mbps,
Highest Watermark BW: 2.33249Mbps
Total AutoBw Adjustments: 1, Successful Adjustments: 1, Failed Adjustments: 0
```

show mpls path

List of Syntax

[Syntax on page 2364](#)

[Syntax \(EX Series Switches\) on page 2364](#)

Syntax

```
show mpls path
<instance instance-name>
<logical-system (all | logical-system-name)>
<path-name>
```

Syntax (EX Series Switches)

```
show mpls path
<path-name>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance *instance-name* option added in Junos OS Release 15.1.

Description

Display dynamic Multiprotocol Label Switching (MPLS) label-switched paths (LSPs).

Options

none—Display standard information about all MPLS LSPs.

instance *instance-name*—(Optional) Display the dynamic MPLS LSP for the specified instance. If *instance-name* is omitted, dynamic MPLS LSP for the master instance is displayed.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

path-name—(Optional) Display information about the specified LSP only.

Required Privilege Level

view

List of Sample Output

[show mpls path on page 2365](#)

Output Fields

Table 63 on page 2365 describes the output fields for the **show mpls path** command. Output fields are listed in the approximate order in which they appear.

Table 63: show mpls path Output Fields

Field Name	Field Description
Path name	Information about ingress LSPs. Each path has one line of output.
Address	Addresses of the routing devices that form the LSP.
Strict/loose address	Whether the address is a configured as a strict or loose address.

Sample Output

show mpls path

user@host> **show mpls path**

Path name	Address	Strict/loose address
p1	123.456.55.6	Strict
	123.456.1.6	Loose
p2	191.456.1.4	Strict

show mpls srlg

Syntax

```
show mpls srlg
<logical-systems (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 11.4.

Description

Display Shared Risk Link Group (SRLG) cost and value configuration information.

NOTE: If an SRLG is associated with a link that is used by an ingress LSP in the router, then on deleting the SRLG configuration from that router, the SRLG gets removed from the SRLG table only on the next reoptimization of the LSP. Until then, the output of the **run show mpls srlg** command displays **Unknown-XXX** instead of the SRLG name and a non zero srlg-cost for that SRLG.

Options

logical-system (all | *logical-system-name*)—(Optional) View SRLG configuration information for all logical systems or a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

[Example: Configuring SRLG | 200](#)

Output Fields

[Table 64 on page 2366](#) lists the output fields for the **show mpls srlg** command. Output fields are listed in the approximate order in which they appear.

Table 64: show mpls srlg Output Fields

Field Name	Field Description
SRLG	Name of the SRLG.

Table 64: show mpls srlg Output Fields (continued)

Field Name	Field Description
Value	A group ID for the SRLG ranging from 1 through 4294967295 .
Cost	A cost for the Shared Risk Link Group (SRLG) ranging from 1 through 65535 .

Sample Output

user@host> show mpls srlg

SRLG	Value	Cost
srlg-a	101	10

show mpls static-lsp

Syntax

```
show mpls static-lsp
<brief | detail | extensive | terse>
<bypass>
<descriptions>
<down | up>
<ingress>
<instance instance-name>
<logical-system (all | logical-system-name)>
<lsp-type>
<name name>
<statistics>
<transit>
```

Release Information

Command introduced in Junos OS Release 10.1.

Command updated in Junos OS Release 14.1X53-D25 to accommodate the stitching feature of MPLS.

Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D30 for QFX Virtual Chassis and Virtual Chassis Fabric.

Description

Display information about configured and active static Multiprotocol Label Switching (MPLS) label-switched paths (LSPs).

Options

none—Display standard information about all configured and active static MPLS LSPs.

brief | detail | extensive | terse—(Optional) Display the specified level of output. The **extensive** option displays the same information as the **detail** option, but covers the most recent 50 events.

bypass—(Optional) Display LSPs used for protecting other static LSPs.

descriptions—(Optional) Display the MPLS static LSP descriptions. To view this information, you must configure the description statement at the [edit protocols mpls static-label-switched-path *path-name* bypass], [edit protocols mpls static-label-switched-path *path-name* ingress], or [edit protocols mpls static-label-switched-path *path-name* transit *incoming-label*] hierarchy levels. Only static LSPs with a description are displayed.

down | up—(Optional) Display only static LSPs that are inactive or active, respectively.

instance *instance-name*—(Optional) Display information about all configured and active static MPLS LSPs for the specified routing instance. If ***instance-name*** is omitted, information about all configured and active static MPLS LSPs for the master instance is displayed.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

lsp-type—(Optional) Display information about a particular LSP type:

- **bypass**—Sessions for bypass LSPs.
- **ingress**—Sessions that originate from this routing device.
- **transit**—Sessions that pass through this routing device.

name *name*—(Optional) Display information about the specified static LSP or group of LSPs.

statistics—(Optional) Display accounting information about static LSPs.

transit—(Optional) Display static LSPs transiting this routing device.

Required Privilege Level

view

List of Sample Output

[show mpls static-lsp extensive on page 2370](#)

[show mpls static-lsp statistics ingress on page 2371](#)

[show mpls static-lsp \(when MPLS stitching is used\) on page 2371](#)

Output Fields

[Table 50 on page 2298](#) describes the output fields for the **show mpls static-lsp** command. Output fields are listed in the approximate order in which they appear.

Table 65: show mpls static-lsp Output Fields

Field Name	Field Description	Level of Output
Ingress LSPs	Information about the static LSPs on the ingress routing device. Each session has one line of output.	All levels
Transit LSPs	Number of static LSPs on the transit routing devices and the state of these paths. MPLS learns this information by querying RSVP, which holds all the transit and egress session information.	All levels
Bypass LSPs	Information about the bypass LSPs configured on the routing device. Each session has one line of output.	All levels
LSPname	Name of the static LSP.	All levels

Table 65: show mpls static-lsp Output Fields (*continued*)

Field Name	Field Description	Level of Output
To	Destination (egress routing device) of the session.	All levels
State	State of the static LSP handled by this RSVP session: Up , Dn (down), or Restart .	All levels
Packets	Number of packet transiting the static LSP (statistics option only).	All levels
Bytes	Number of bytes transiting the static LSP (statistics option only).	All levels
Nexthop	IP address for the next-hop router for the static LSP.	detail, extensive
Bypass	(Bypass LSP) Destination address (egress routing device) for the bypass LSP.	All levels
Link protection desired	Link protection has been requested by the ingress routing device.	detail, extensive
LabelOperation	Label operation to perform: Push , Pop , Swap .	detail, extensive
Outgoing-label	Outgoing label to use for the MPLS packet in either push or swap label operations.	detail, extensive
Created	(Ingress LSP) Date and time the static LSP was created.	extensive
Bandwidth	Bandwidth configured for the static LSP.	detail, extensive
Resv style	(Bypass) RSVP reservation style. This field consists of two parts: the number of active reservations and the reservation style, which can be FF (fixed filter), SE (shared explicit), or WF (wildcard filter).	All levels

Sample Output

show mpls static-lsp extensive

user@host> show mpls static-lsp extensive

```
Ingress LSPs:
LSPname: alpha-to-beta, To: 192.168.14.1
State: Dn
```

```

Nexthop: 192.168.10.1
LabelOperation: Push, Outgoing-label: 1000001
Created: Thu Jan 14 16:44:43 2010
Bandwidth: 0 bps
Total 1, displayed 1, Up 0, Down 1

Transit LSPs:
Total 0, displayed 0, Up 0, Down 0

Bypass LSPs:
Total 0, displayed 0, Up 0, Down 0

```

show mpls static-lsp statistics ingress

```
user@host> show mpls static-lsp statistics ingress
```

```

Ingress LSPs:
LSPname                To           State    Packets    Bytes
alpha-to-beta          192.168.14.1 Dn        NA         NA
Total 1, displayed 1, Up 0, Down 1

```

show mpls static-lsp (when MPLS stitching is used)

The show mpls static-lsp command was extended in Junos release 14.1X53-D25 to accommodate the stitching feature of MPLS. This example shows the LSP state as 'InProgress' because the LSP is waiting for protocol next-hop resolution. For more information, see

```
user@host> show mpls static-lsp
```

```

Ingress LSPs:
Total 0, displayed 0, Up 0, Down 0

Transit LSPs: LSPname                Incoming-label  State
to-165                1000000        InProgress

```

show performance-monitoring mpls lsp

Syntax

```
show performance-monitoring mpls lsp  
<brief | detail | extensive>  
<name lsp name>
```

Release Information

Command introduced in Junos OS Release 15.1.

Description

Display the following performance monitoring data:

- Packet loss measurement
- Packet throughput measurement
- Two-way channel delay
- Round-trip delay
- Inter-packet delay variation (IPDV)

Options

none—Display standard information performance monitoring data.

brief | detail | extensive—(Optional) Display the specified level of output.

NOTE: The extensive option displays the same information as the detail option.

name *lsp name*—(Optional) Display information about the specified LSP.

Required Privilege Level

View

RELATED DOCUMENTATION

[clear performance-monitoring mpls lsp | 2225](#)

[performance-monitoring \(Protocols MPLS\) | 1851](#)

List of Sample Output

[show performance-monitoring mpls lsp on page 2376](#)

[show performance-monitoring mpls lsp detail on page 2377](#)

Output Fields

[Table 66 on page 2373](#) describes the output fields for the **show performance-monitoring mpls lsp** command.

Output fields are listed in the approximate order in which they appear.

Table 66: show performance-monitoring mpls lsp Output Fields

Field Name	Display Data	Field Description	Level of Output
Session	Total	Total number of performance monitoring sessions created.	All Levels
	Up	Number of performance monitoring sessions that are up and running.	All Levels
	Down	Number of performance monitoring sessions that are down.	All Levels
LSP name		Name of the LSP.	All Levels

Table 66: show performance-monitoring mpls lsp Output Fields (*continued*)

Field Name	Display Data		Field Description	Level of Output
Loss measurement Data	Traffic-class		Traffic class for which loss measurement is performed.	All Levels
	Queries sent		Total number of queries sent for loss measurement.	All Levels
	Responses received		Total number of responses received for loss measurement queries.	All Levels
	Responses dropped due to errors		Total number of loss measurement responses dropped due to errors.	All Levels
	Queries timeout		Number of timed out queries sent for loss measurement.	All Levels
	Forward loss measurement	Average packet loss	Average packet loss (total loss of packets divided by the total number of samples used since the session is up).	All Levels
		Average packet throughput	Total number of packets sent divided by the time considered for measurement.	All Levels
	Reverse loss measurement	Average packet loss	Average packet loss (total loss of packets divided by the total number of samples used since the session is up).	All Levels
		Average packet throughput	Total number of packets sent divided by the time considered for measurement.	All Levels

Table 66: show performance-monitoring mpls lsp Output Fields (*continued*)

Field Name	Display Data	Field Description	Level of Output
Delay measurement Data	Traffic-class	Traffic class for which delay measurement is performed.	All Levels
	Queries sent	Total number of queries sent for delay measurement.	All Levels
	Responses received	Total number of responses received for delay measurement queries.	All Levels
	Responses dropped due to errors	Total number of delay measurement responses dropped due to errors.	All Levels
	Queries timeout	Number of timed out queries sent for delay measurement.	All Levels
	Best 2-way channel delay	Best available two-way channel delay.	All Levels
	Worst 2-way channel delay	Worst available two-way channel delay.	All Levels
	Best round trip time	Best available round-trip time.	All Levels
	Worst round trip time	Worst available round-trip time.	All Levels
	Avg absolute fw delay variation	Average of the variation in forward delay.	All Levels
	Avg absolute rv delay variation	Average of the variation in reverse delay.	All Levels
	Two-way channel delay	Sum of packet delays, excluding the processing time of the remote provider edge (PE) router.	detail, extensive
	Two-way round trip delay	Total time taken for completing round-trip of packet.	detail, extensive

Sample Output

show performance-monitoring mpls lsp

user@host> show performance-monitoring mpls lsp

```

Session Total: 3 Up: 3 Down: 0
  LSP name:to_bad, PM State:Up
    Loss measurement Data:
      Duration: 00:04:43
      Traffic-class: None
      Queries sent: 282
      Responses received: 282
      Responses dropped due to errors: 0
      Queries timeout: 0
      Forward loss measurement:
        Average packet loss: 0
        Average packet throughput: 554338
      Reverse loss measurement:
        Average packet loss: 0
        Average packet throughput: 1352077
  LSP name:to_bad, PM State:Up
    Delay measurement Data:
      Duration: 00:04:43
      Traffic-class: 0
      Queries sent: 282
      Responses received: 282
      Responses dropped due to errors: 0
      Queries timeout: 0
      Best 2-way channel delay: 72 usecs
      Worst 2-way channel delay: 365 usecs
      Best round trip time: 843 usecs
      Worst round trip time: 105523 usecs
      Avg absolute fw delay variation: 1619 usecs
      Avg absolute rv delay variation: 1619 usecs
  LSP name:to_bad, PM State:Up
    Loss measurement Data:
      Duration: 00:04:43
      Traffic-class: None
      Queries sent: 282
      Responses received: 282
      Responses dropped due to errors: 0
      Queries timeout: 0
      Forward loss measurement:
        Average packet loss: 0

```



```

    Average packet throughput: 553927
Reverse loss measurement:
    Average packet loss: 0
    Average packet throughput: 1351531
Delay measurement Data:
    Best 2-way channel delay: 76 usecs
    Worst 2-way channel delay: 368 usecs
    Best round trip time: 1082 usecs
    Worst round trip time: 126146 usecs
    Avg absolute fw delay variation: 1618 usecs
    Avg absolute rv delay variation: 1619 usecs

```

show performance-monitoring mpls lsp detail

user@host> show performance-monitoring mpls lsp detail

```

Session Total: 3 Up: 3 Down: 0
LSP name:to_bad, PM State:Up
Loss measurement Data:
    Duration: 00:04:53
    Traffic-class: None
    Queries sent: 292
    Responses received: 292
    Responses dropped due to errors: 0
    Queries timeout: 0
Forward loss measurement:
    Average packet loss: 0
    Average packet throughput: 554486
    Packet loss samples:
        00000000 00000000 00000000 00000000 00000000
    Packet throughput samples:
        00554002 00557550 00557717 00558822 00557107
Reverse loss measurement:
    Average packet loss: 0
    Average packet throughput: 1352406
    Packet loss samples:
        00000000 00000000 00000000 00000000 00000000
    Packet throughput samples:
        01351088 01365948 01353926 01362976 01358788
LSP name:to_bad, PM State:Up
Delay measurement Data:
    Duration: 00:04:53
    Traffic-class: 0
    Queries sent: 292

```

```

Responses received: 292
Responses dropped due to errors: 0
Queries timeout: 0
Best 2-way channel delay: 72 usecs
Worst 2-way channel delay: 365 usecs
Best round trip time: 843 usecs
Worst round trip time: 105523 usecs
Avg absolute fw delay variation: 1683 usecs
Avg absolute rv delay variation: 1684 usecs
  Two-way channel delay:
    73 usecs 73 usecs 73 usecs 73 usecs 72 usecs
  Two-way round trip delay:
    922 usecs 2234 usecs 884 usecs 1121 usecs 1169 usecs
LSP name:to_bad, PM State:Up
Loss measurement Data:
  Duration: 00:04:53
  Traffic-class: None
  Queries sent: 292
  Responses received: 292
  Responses dropped due to errors: 0
  Queries timeout: 0
  Forward loss measurement:
    Average packet loss: 0
    Average packet throughput: 554089
    Packet loss samples:
      00000000 00000000 00000000 00000000 00000000
    Packet throughput samples:
      00554007 00557548 00557713 00558547 00557385
  Reverse loss measurement:
    Average packet loss: 0
    Average packet throughput: 1351914
    Packet loss samples:
      00000000 00000000 00000000 00000000 00000000
    Packet throughput samples:
      01358923 01352980 01362436 01223841 01496977
Delay measurement Data:
  Best 2-way channel delay: 76 usecs
  Worst 2-way channel delay: 368 usecs
  Best round trip time: 1082 usecs
  Worst round trip time: 126146 usecs
  Avg absolute fw delay variation: 1682 usecs
  Avg absolute rv delay variation: 1683 usecs
  Two-way channel delay:
    76 usecs 76 usecs 76 usecs 77 usecs 77 usecs

```

Two-way round trip delay:

107496 usecs 102369 usecs 104048 usecs 1433 usecs 103306 usecs

show route forwarding-table

Syntax

```
show route forwarding-table
<detail | extensive | summary>
<ccc ccc-interface-name>
<destination>
<family family-name>
<label label>
<matching ip_prefix>
<multicast>
<vpn vpn>
```

Release Information

Command introduced in Junos OS Release 9.5 for EX Series switches.

Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Command introduced in Junos OS Release 14.1X53-D30 for QFX Virtual Chassis and Virtual Chassis Fabric.

Description

Display the Routing Engine's forwarding table, including the network-layer prefixes and their next hops. This command is used to help verify that the routing protocol process has relayed the correction information to the forwarding table. The Routing Engine constructs and maintains one or more routing tables. From the routing tables, the Routing Engine derives a table of active routes, called the forwarding table.

Options

none—Display the routes in the forwarding table.

detail | extensive | summary—(Optional) Display the specified level of output.

ccc—(Optional) Display the specified circuit cross-connect interface name for entries to match.

destination—(Optional) Display the destination prefix.

family family-name—(Optional) Display routing table entries for the specified family: **ethernet-switching**, **inet**, **inet6**, **iso**, **mpls**, **vlan classification**.

label label—(Optional) Display route entries for the specified label name.

matching ip_prefix—(Optional) Display route entries for the specified IP prefix.

multicast—(Optional) Display route entries for multicast routes.

vpn vpn—(Optional) Display route entries for the specified VPN.

Required Privilege Level

view

RELATED DOCUMENTATION

Example: Configuring MPLS on EX8200 and EX4500 Switches 41
Configuring MPLS on EX8200 and EX4500 Provider Switches 77

List of Sample Output

- [show route forwarding-table on page 2384](#)
- [show route forwarding-table summary on page 2385](#)
- [show route forwarding-table extensive on page 2385](#)
- [show route forwarding-table ccc on page 2387](#)
- [show route forwarding-table family \(MPLS\) on page 2387](#)
- [show route forwarding-table family \(IPv6\) on page 2388](#)
- [show route forwarding-table label on page 2389](#)
- [show route forwarding-table matching on page 2389](#)
- [show route forwarding-table multicast on page 2389](#)

Output Fields

[Table 67 on page 2381](#) lists the output fields for the **show route forwarding-table** command. Output fields are listed in the approximate order in which they appear. Field names might be abbreviated (as shown in parentheses) when no level of output is specified or when the **detail** keyword is used instead of the **extensive** keyword.

Table 67: show route forwarding-table Output Fields

Field Name	Field Description	Level of Output
Routing table	Name of the routing table (for example, inet , inet6 , mpls).	All levels
Address family	Address family (for example, IP , IPv6 , ISO , MPLS).	All levels
Destination	Destination of the route.	detail , extensive

Table 67: show route forwarding-table Output Fields (*continued*)

Field Name	Field Description	Level of Output
Route Type (Type)	<p>How the route was placed into the forwarding table. When the detail keyword is used, the route type might be abbreviated (as shown in parentheses):</p> <ul style="list-style-type: none"> • cloned (clon)—(TCP or multicast only) Cloned route. • destination (dest)—Remote addresses directly reachable through an interface. • destination down (iddn)—Destination route for which the interface is unreachable. • interface cloned (ifcl)—Cloned route for which the interface is unreachable. • route down (ifdn)—Interface route for which the interface is unreachable. • ignore (ignr)—Ignore this route. • interface (intf)—Installed as a result of configuring an interface. • permanent (perm)—Routes installed by the kernel when the routing table is initialized. • user—Routes installed by the routing protocol process or as a result of the configuration. 	All levels
Route reference (RtRef)	Number of routes to reference.	detail, extensive
Flags	<p>Route type flags:</p> <ul style="list-style-type: none"> • none—No flags are enabled. • accounting—Route has accounting enabled. • cached—Cache route. • incoming-iface interface-number —Check against incoming interface. • prefix load balance—Load balancing is enabled for this prefix. • sent to PFE—Route has been sent to the Packet Forwarding Engine. • static—Static route. 	extensive
Nexthop	IP address of the next hop to the destination.	detail, extensive

Table 67: show route forwarding-table Output Fields (*continued*)

Field Name	Field Description	Level of Output
Next hop type (Type)	<p>Next-hop type. When the detail keyword is used, the next-hop type might be abbreviated (as indicated in parentheses):</p> <ul style="list-style-type: none"> • broadcast (bcst)—Broadcast. • deny—Deny. • hold—Next hop is waiting to be resolved into a unicast or multicast type. • indexed (idxd)—Indexed next hop. • indirect (indr)—Indirect next hop. • local (locl)—Local address on an interface. • routed multicast (mcrt)—Regular multicast next hop • multicast (mcst)—Wire multicast next hop (limited to the LAN). • multicast discard (mdsc)—Multicast discard. • multicast group (mgrp) —Multicast group member. • receive (recv)—Receive. • reject (rjct)—Discard. An ICMP unreachable message was sent. • resolve (rslv)—Resolving the next hop. • unicast (ucst)—Unicast. • unilist (ulst)—List of unicast next hops. A packet sent to this next hop goes to any next hop in the list. 	detail, extensive
Index	Software index of the next hop that is used to route the traffic for a given prefix.	detail, extensive none
Route interface-index	Logical interface index from which the route is learned. For example, for interface routes, this is the logical interface index of the route itself. For static routes, this field is zero. For routes learned through routing protocols, this is the logical interface index from which the route is learned.	extensive
Reference (NhRef)	Number of routes that refer to this next hop.	none detail, extensive
Next-hop interface (Netif)	Interface used to reach the next hop.	none detail, extensive
Alternate forward nh index	Index number of the alternate next hop interface. Seen with multicast option only.	extensive
Next-hop L3 Interface	The next hop layer 3 interface. This option can be expressed as a VLAN name and is only seen with the multicast option.	extensive

Table 67: show route forwarding-table Output Fields (*continued*)

Field Name	Field Description	Level of Output
Next-hop L2 Interfaces	The next hop layer 2 interfaces. Seen with multicast option only.	extensive

Sample Output

show route forwarding-table

user@switch> show route forwarding-table

```

Routing table: default.inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          user   2 0:12:f2:21:cf:0    ucst  333   5 me0.0
default          perm   0                      rjct   36    2
0.0.0.0/32       perm   0                      dscd   34    1
2.2.2.0/24       intf   0                      rslv  1309   1 ae0.0
2.2.2.0/32       dest   0 2.2.2.0           recv  1307   1 ae0.0
2.2.2.1/32       dest   0 0:21:59:cc:89:c0   ucst  1320   1 ae0.0
2.2.2.2/32       intf   0 2.2.2.2           locl  1308   2
2.2.2.2/32       dest   0 2.2.2.2           locl  1308   2
2.2.2.255/32     dest   0 2.2.2.255         bcst  1306   1 ae0.0
3.3.3.0/24       intf   0                      rslv  1313   1 ae1.0
3.3.3.0/32       dest   0 3.3.3.0           recv  1311   1 ae1.0
3.3.3.1/32       intf   0 3.3.3.1           locl  1312   2
3.3.3.1/32       dest   0 3.3.3.1           locl  1312   2
3.3.3.2/32       dest   0 0:21:59:cc:89:c1   ucst  1321  24 ae1.0
3.3.3.255/32     dest   0 3.3.3.255         bcst  1310   1 ae1.0
4.4.4.0/24       user   0 3.3.3.2           ucst  1321  24 ae1.0
8.8.8.8/32       user   0 3.3.3.2           ucst  1321  24 ae1.0
9.9.9.9/32       intf   0 9.9.9.9           locl  1280   1
10.10.10.10/32    user   0 3.3.3.2           ucst  1321  24 ae1.0
10.93.8.0/21      intf   0                      rslv   323   1 me0.0
10.93.8.0/32      dest   0 10.93.8.0         recv   321   1 me0.0
10.93.13.238/32   intf   0 10.93.13.238      locl   322   2
10.93.13.238/32   dest   0 10.93.13.238      locl   322   2
10.93.15.254/32   dest   0 0:12:f2:21:cf:0    ucst   333   5 me0.0
10.93.15.255/32   dest   0 10.93.15.255      bcst   320   1 me0.0
14.14.14.0/24     ifdn   0                      rslv  1319   1 ge-0/0/25.0

```


14.14.14.0/32	iddn	0	14.14.14.0	recv	1317	1	ge-0/0/25.0
14.14.14.2/32	user	0		rjct	36	2	
14.14.14.2/32	intf	0	14.14.14.2	locl	1318	2	
14.14.14.2/32	iddn	0	14.14.14.2	locl	1318	2	
14.14.14.255/32	iddn	0	14.14.14.255	bcst	1316	1	ge-0/0/25.0
224.0.0.0/4	perm	1		mdsc	35	1	
224.0.0.1/32	perm	0	224.0.0.1	mcst	31	3	
224.0.0.5/32	user	1	224.0.0.5	mcst	31	3	
255.255.255.255/32	perm	0		bcst	32	1	

show route forwarding-table summary

user@switch> show route forwarding-table summary

```

Routing table: default.inet
Internet:
    user:          6 routes
    perm:          5 routes
    intf:          8 routes
    dest:          12 routes
    ifdn:          1 routes
    iddn:          3 routes

```

show route forwarding-table extensive

user@switch> show route forwarding-table extensive

```

Routing table: default.inet [Index 0]
Internet:

Destination: default
  Route type: user
  Route reference: 2
  Route interface-index: 0
  Flags: sent to PFE, rt nh decoupled
  Nexthop: 0:12:f2:21:cf:0
  Next-hop type: unicast
  Index: 333
  Reference: 5
  Next-hop interface: me0.0

Destination: default
  Route type: permanent
  Route reference: 0
  Route interface-index: 0

```

```

Flags: none
Next-hop type: reject                Index: 36      Reference: 2

Destination: 0.0.0.0/32
Route type: permanent
Route reference: 0                    Route interface-index: 0
Flags: sent to PFE
Next-hop type: discard                Index: 34      Reference: 1

Destination: 2.2.2.0/24
Route type: interface
Route reference: 0                    Route interface-index: 66
Flags: sent to PFE
Next-hop type: resolve                Index: 1309    Reference: 1
Next-hop interface: ae0.0

Destination: 2.2.2.0/32
Route type: destination
Route reference: 0                    Route interface-index: 66
Flags: sent to PFE
Nexthop: 2.2.2.0
Next-hop type: receive                Index: 1307    Reference: 1
Next-hop interface: ae0.0

Destination: 2.2.2.1/32
Route type: destination
Route reference: 0                    Route interface-index: 66
Flags: sent to PFE
Nexthop: 0:21:59:cc:89:c0
Next-hop type: unicast                Index: 1320    Reference: 1
Next-hop interface: ae0.0

Destination: 2.2.2.2/32
Route type: interface
Route reference: 0                    Route interface-index: 0
Flags: sent to PFE
Nexthop: 2.2.2.2
Next-hop type: local                  Index: 1308    Reference: 2

Destination: 2.2.2.2/32
Route type: destination
Route reference: 0                    Route interface-index: 66
Flags: none
Nexthop: 2.2.2.2

```

```

Next-hop type: local                Index: 1308    Reference: 2

Destination: 2.2.2.255/32
Route type: destination
Route reference: 0                  Route interface-index: 66
Flags: sent to PFE
Nexthop: 2.2.2.255
Next-hop type: broadcast            Index: 1306    Reference: 1
Next-hop interface: ae0.0

```

show route forwarding-table ccc

```
user@switch> show route forwarding-table ccc ge-0/0/0.10
```

```

Routing table: default.mpls
MPLS:
Destination      Type RtRef Next hop                Type Index NhRef Netif
ge-0/0/0.10      (CCC) user    0 3.3.3.2                Push 300112 1343    2 ae1.0

```

show route forwarding-table family (MPLS)

```
user@switch> show route forwarding-table family mpls
```

```

Routing table: default.mpls
MPLS:
Destination      Type RtRef Next hop                Type Index NhRef Netif
default          perm    0                    dscd    50    1
0                user    0                    recv    49    3
1                user    0                    recv    49    3
2                user    0                    recv    49    3
299776           user    0                    Pop     1334   2 ge-0/0/0.10
299792           user    0                    Pop     1339   2 ge-0/0/0.14
299808           user    0                    Pop     1341   2 ge-0/0/0.2
299824           user    0                    Pop     1344   2 ge-0/0/0.11
299840           user    0                    Pop     1345   2 ge-0/0/0.13
299856           user    0                    Pop     1346   2 ge-0/0/0.18
299872           user    0                    Pop     1347   2 ge-0/0/0.16
299888           user    0                    Pop     1348   2 ge-0/0/0.7
299904           user    0                    Pop     1349   2 ge-0/0/0.20
299920           user    0                    Pop     1350   2 ge-0/0/0.19
299936           user    0                    Pop     1351   2 ge-0/0/0.17
299952           user    0                    Pop     1352   2 ge-0/0/0.9

```

```

299968      user      0      Pop      1353      2 ge-0/0/0.1
299984      user      0      Pop      1354      2 ge-0/0/0.12
300000      user      0      Pop      1355      2 ge-0/0/0.8
300016      user      0      Pop      1356      2 ge-0/0/0.4
300032      user      0      Pop      1357      2 ge-0/0/0.5
300048      user      0      Pop      1358      2 ge-0/0/0.3
300064      user      0      Pop      1359      2 ge-0/0/0.15
ge-0/0/0.1  (CCC) user      0 3.3.3.2      Push 300064 1340      2 ae1.0
ge-0/0/0.2  (CCC) user      0 3.3.3.2      Push 299872 1328      2 ae1.0
ge-0/0/0.3  (CCC) user      0 3.3.3.2      Push 299792 1323      2 ae1.0
ge-0/0/0.4  (CCC) user      0 3.3.3.2      Push 300016 1337      2 ae1.0
ge-0/0/0.5  (CCC) user      0 3.3.3.2      Push 299824 1325      2 ae1.0
ge-0/0/0.7  (CCC) user      0 3.3.3.2      Push 299920 1331      2 ae1.0
ge-0/0/0.8  (CCC) user      0 3.3.3.2      Push 299840 1326      2 ae1.0
ge-0/0/0.9  (CCC) user      0 3.3.3.2      Push 299888 1329      2 ae1.0
ge-0/0/0.10 (CCC) user      0 3.3.3.2      Push 300112 1343      2 ae1.0
ge-0/0/0.11 (CCC) user      0 3.3.3.2      Push 299776 1322      2 ae1.0
ge-0/0/0.12 (CCC) user      0 3.3.3.2      Push 299952 1333      2 ae1.0
ge-0/0/0.13 (CCC) user      0 3.3.3.2      Push 300096 1342      2 ae1.0
ge-0/0/0.14 (CCC) user      0 3.3.3.2      Push 299984 1335      2 ae1.0
ge-0/0/0.15 (CCC) user      0 3.3.3.2      Push 299936 1332      2 ae1.0
ge-0/0/0.16 (CCC) user      0 3.3.3.2      Push 299808 1324      2 ae1.0
ge-0/0/0.17 (CCC) user      0 3.3.3.2      Push 300000 1336      2 ae1.0
ge-0/0/0.18 (CCC) user      0 3.3.3.2      Push 300032 1338      2 ae1.0
ge-0/0/0.19 (CCC) user      0 3.3.3.2      Push 299904 1330      2 ae1.0
ge-0/0/0.20 (CCC) user      0 3.3.3.2      Push 299856 1327      2 ae1.0

```

show route forwarding-table family (IPv6)

user@switch> show route forwarding-table family inet6

```

Routing table: default.inet6
Internet6:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm      0      rjct      44      1
::/128          perm      0      dscd      42      1
ff00::/8        perm      0      mdsc      43      1
ff02::1/128     perm      0 ff02::1      mcst      39      1

Routing table: default-switch.inet6
Internet6:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm      0      rjct      530     1
::/128          perm      0      dscd      528     1

```

```

2:1::3a00/312      user      0              indr 131070      2
                  comp      572      1
2:1::3a82/320      user      0              indr 131071      3
                  comp      573      1
2:1::3af0/320      user      0              indr 131071      3
                  comp      573      1
2:1:0:ff00::/56    user      0              mdsc 529          2
ff00::/8           perm      0              mdsc 529          2
ff02::1/128        perm      0 ff02::1        mcst 526          1

```

Routing table: __master.anon__.inet6

Internet6:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	554	1	
::/128	perm	0		dscd	552	1	
ff00::/8	perm	0		mdsc	553	1	
ff02::1/128	perm	0	ff02::1	mcst	550	1	

show route forwarding-table label

user@switch> show route forwarding-table label 29976

Routing table: default.mpls

MPLS:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
299776	user	0		Pop	1334	2	ge-0/0/0.10

show route forwarding-table matching

user@switch> show route forwarding-table matching 3

Routing table: default.inet

Internet:

show route forwarding-table multicast

user@switch> show route forwarding-table multicast

Routing table: default.inet

Internet:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
224.0.0.0/4	perm	1		mdsc	35	1	
224.0.0.1/32	perm	0	224.0.0.1	mcst	31	3	
224.0.0.5/32	user	1	224.0.0.5	mcst	31	3	

Routing table: __master.anon__.inet

Internet:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
224.0.0.0/4	perm	0		mdsc	1289	1	
224.0.0.1/32	perm	0	224.0.0.1	mcst	1285	1	

Routing table: default.inet6

Internet6:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
ff00::/8	perm	0		mdsc	43	1	
ff02::1/128	perm	0	ff02::1	mcst	39	1	

show route table

List of Syntax

[Syntax on page 2391](#)

[Syntax \(EX Series Switches, QFX Series Switches\) on page 2391](#)

Syntax

```
show route table routing-table-name
<brief | detail | extensive | terse>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches, QFX Series Switches)

```
show route table routing-table-name
<brief | detail | extensive | terse>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in Junos OS Release 14.1X53-D15 for QFX Series switches.

Show route table evpn statement introduced in Junos OS Release 15.1X53-D30 for QFX Series switches.

Description

Display the route entries in a particular routing table.

Options

brief | detail | extensive | terse—(Optional) Display the specified level of output.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

routing-table-name—Display route entries for all routing tables whose names begin with this string (for example, inet.0 and inet6.0 are both displayed when you run the **show route table inet** command).

Required Privilege Level

view

RELATED DOCUMENTATION

| [show route summary](#)

List of Sample Output

[show route table bgp.l2vpn.0 on page 2405](#)
[show route table bgp.l3vpn.0 on page 2405](#)
[show route table bgp.l3vpn.0 detail on page 2406](#)
[show route table bgp.rtarget.0 \(When Proxy BGP Route Target Filtering Is Configured\) on page 2408](#)
[show route table bgp.evpn.0 on page 2408](#)
[show route table evpna.evpn.0 on page 2409](#)
[show route table inet.0 on page 2409](#)
[show route table inet.3 on page 2410](#)
[show route table inet.3 protocol ospf on page 2410](#)
[show route table inet6.0 on page 2411](#)
[show route table inet6.3 on page 2411](#)
[show route table inetflow detail on page 2411](#)
[show route table inetflow.0 extensive \(BGP Flowspec Redirect to IP\) on page 2412](#)
[show route table lsdist.0 extensive on page 2414](#)
[show route table l2circuit.0 on page 2416](#)
[show route table lsdist.0 on page 2416](#)
[show route table mpls on page 2417](#)
[show route table mpls extensive on page 2417](#)
[show route table mpls.0 on page 2418](#)
[show route table mpls.0 detail \(PTX Series\) on page 2419](#)
[show route table mpls.0 ccc ge-0/0/1.1004 detail on page 2420](#)
[show route table mpls.0 protocol evpn on page 2421](#)
[show route table mpls.0 protocol ospf on page 2430](#)
[show route table mpls.0 extensive \(PTX Series\) on page 2430](#)
[show route table mpls.0 \(RSVP Route—Transit LSP\) on page 2431](#)
[show route table vpls_1 detail on page 2432](#)
[show route table vpn-a on page 2432](#)
[show route table vpn-a.mdt.0 on page 2433](#)
[show route table VPN-A detail on page 2433](#)
[show route table VPN-AB.inet.0 on page 2434](#)
[show route table VPN_blue.mvpn-inet6.0 on page 2434](#)
[show route table vrf1.mvpn.0 extensive on page 2435](#)
[show route table inetflow detail on page 2436](#)
[show route table bgp.evpn.0 extensive | no-more \(EVPN\) on page 2440](#)
[show route table default-switch.evpn.0 extensive on page 2444](#)
[show route table evpn1.evpn-mcsn on page 2445](#)
[show route table evpn1 \(Multihomed Proxy MAC and IP Address\) on page 2445](#)

Output Fields

Table 68 on page 2393 describes the output fields for the **show route table** command. Output fields are listed in the approximate order in which they appear.

Table 68: show route table Output Fields

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).
Restart complete	<p>All protocols have restarted for this routing table.</p> <p>Restart state:</p> <ul style="list-style-type: none"> ● Pending:protocol-name—List of protocols that have not yet completed graceful restart for this routing table. ● Complete—All protocols have restarted for this routing table. <p>For example, if the output shows-</p> <ul style="list-style-type: none"> ● LDP.inet.0 : 5 routes (4 active, 1 holddown, 0 hidden) <p style="padding-left: 40px;">Restart Pending: OSPF LDP VPN</p> <p>This indicates that OSPF, LDP, and VPN protocols did not restart for the LDP.inet.0 routing table.</p> <ul style="list-style-type: none"> ● vpls_1.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden) <p style="padding-left: 40px;">Restart Complete</p> <p>This indicates that all protocols have restarted for the vpls_1.l2vpn.0 routing table.</p>
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.
<i>number routes</i>	<p>Number of routes in the routing table and total number of routes in the following states:</p> <ul style="list-style-type: none"> ● active (routes that are active) ● holddown (routes that are in the pending state before being declared inactive) ● hidden (routes that are not used because of a routing policy)

Table 68: show route table Output Fields (*continued*)

Field Name	Field Description
<i>route-destination</i> (entry, announced)	<p>Route destination (for example:10.0.0.1/24). The entry value is the number of routes for this destination, and the announced value is the number of routes being announced for this destination. Sometimes the route destination is presented in another format, such as:</p> <ul style="list-style-type: none"> • MPLS-label (for example, 80001). • interface-name (for example, ge-1/0/2). • neighbor-address:control-word-status:encapsulation type:vc-id:source (Layer 2 circuit only; for example, 10.1.1.195:NoCtrlWord:1:1:Local/96). • neighbor-address—Address of the neighbor. • control-word-status—Whether the use of the control word has been negotiated for this virtual circuit: NoCtrlWord or CtrlWord. • encapsulation type—Type of encapsulation, represented by a number: (1) Frame Relay DLCI, (2) ATM AAL5 VCC transport, (3) ATM transparent cell transport, (4) Ethernet, (5) VLAN Ethernet, (6) HDLC, (7) PPP, (8) ATM VCC cell transport, (10) ATM VPC cell transport. • vc-id—Virtual circuit identifier. • source—Source of the advertisement: Local or Remote. • inclusive multicast Ethernet tag route—Type of route destination represented by (for example, 3:100.100.100.10:100::0::10::100.100.100.10/384): <ul style="list-style-type: none"> • route distinguisher—(8 octets) Route distinguisher (RD) must be the RD of the EVPN instance (EVI) that is advertising the NLRI. • Ethernet tag ID—(4 octets) Identifier of the Ethernet tag. Can set to 0 or to a valid Ethernet tag value. • IP address length—(1 octet) Length of IP address in bits. • originating router's IP address—(4 or 16 octets) Must set to the provider edge (PE) device's IP address. This address should be common for all EVIs on the PE device, and may be the PE device's loopback address.
label stacking	<p>(Next-to-the-last-hop routing device for MPLS only) Depth of the MPLS label stack, where the label-popping operation is needed to remove one or more labels from the top of the stack. A pair of routes is displayed, because the pop operation is performed only when the stack depth is two or more labels.</p> <ul style="list-style-type: none"> • S=0 route indicates that a packet with an incoming label stack depth of 2 or more exits this routing device with one fewer label (the label-popping operation is performed). • If there is no S= information, the route is a normal MPLS route, which has a stack depth of 1 (the label-popping operation is not performed).

Table 68: show route table Output Fields (*continued*)

Field Name	Field Description
[<i>protocol, preference</i>]	<p>Protocol from which the route was learned and the preference value for the route.</p> <ul style="list-style-type: none"> • +—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table. • - —A hyphen indicates the last active route. • *—An asterisk indicates that the route is both the active and the last active route. An asterisk before a to line indicates the best subpath to the route. <p>In every routing metric except for the BGP LocalPref attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the LocalPref value in the Preference2 field. For example, if the LocalPref value for Route 1 is 100, the Preference2 value is -101. If the LocalPref value for Route 2 is 155, the Preference2 value is -156. Route 2 is preferred because it has a higher LocalPref value and a lower Preference2 value.</p>
Level	(IS-IS only). In IS-IS, a single AS can be divided into smaller groups called areas. Routing between areas is organized hierarchically, allowing a domain to be administratively divided into smaller areas. This organization is accomplished by configuring Level 1 and Level 2 intermediate systems. Level 1 systems route within an area. When the destination is outside an area, they route toward a Level 2 system. Level 2 intermediate systems route between areas and toward other ASs.
Route Distinguisher	IP subnet augmented with a 64-bit prefix.
PMSI	Provider multicast service interface (MVPN routing table).
Next-hop type	Type of next hop. For a description of possible values for this field, see Table 69 on page 2400 .
Next-hop reference count	Number of references made to the next hop.
Flood nexthop branches exceed maximum message	Indicates that the number of flood next-hop branches exceeded the system limit of 32 branches, and only a subset of the flood next-hop branches were installed in the kernel.
Source	IP address of the route source.
Next hop	Network layer address of the directly reachable neighboring system.

Table 68: show route table Output Fields (*continued*)

Field Name	Field Description
via	<p>Interface used to reach the next hop. If there is more than one interface available to the next hop, the name of the interface that is actually used is followed by the word Selected. This field can also contain the following information:</p> <ul style="list-style-type: none"> • Weight—Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible. • Balance—Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a routing device is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.
Label-switched-path <i>lsp-path-name</i>	Name of the LSP used to reach the next hop.
Label operation	MPLS label and operation occurring at this routing device. The operation can be pop (where a label is removed from the top of the stack), push (where another label is added to the label stack), or swap (where a label is replaced by another label).
Interface	(Local only) Local interface name.
Protocol next hop	Network layer address of the remote routing device that advertised the prefix. This address is used to derive a forwarding next hop.
Indirect next hop	Index designation used to specify the mapping between protocol next hops, tags, kernel export policy, and the forwarding next hops.
State	State of the route (a route can be in more than one state). See Table 70 on page 2401 .
Local AS	AS number of the local routing devices.
Age	How long the route has been known.
AIGP	Accumulated interior gateway protocol (AIGP) BGP attribute.
Metricn	Cost value of the indicated route. For routes within an AS, the cost is determined by IGP and the individual protocol metrics. For external routes, destinations, or routing domains, the cost is determined by a preference value.
MED-plus-IGP	Metric value for BGP path selection to which the IGP cost to the next-hop destination has been added.

Table 68: show route table Output Fields (*continued*)

Field Name	Field Description
TTL-Action	For MPLS LSPs, state of the TTL propagation attribute. Can be enabled or disabled for all RSVP-signaled and LDP-signaled LSPs or for specific VRF routing instances.
Task	Name of the protocol that has added the route.
Announcement bits	<p>The number of BGP peers or protocols to which Junos OS has announced this route, followed by the list of the recipients of the announcement. Junos OS can also announce the route to the kernel routing table (KRT) for installing the route into the Packet Forwarding Engine, to a resolve tree, a Layer 2 VC, or even a VPN. For example, n-Resolve inet indicates that the specified route is used for route resolution for next hops found in the routing table.</p> <ul style="list-style-type: none"> • n—An index used by Juniper Networks customer support only.
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> • I—IGP. • E—EGP. • Recorded—The AS path is recorded by the sample process (sampled). • ?—Incomplete; typically, the AS path was aggregated. <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> • []—Brackets enclose the number that precedes the AS path. This number represents the number of ASs present in the AS path, when calculated as defined in RFC 4271. This value is used in the AS-path merge process, as defined in RFC 4893. • []—If more than one AS number is configured on the routing device, or if AS path prepending is configured, brackets enclose the local AS number associated with the AS path. • { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order. • ()—Parentheses enclose a confederation. • ([])—Parentheses and brackets enclose a confederation set. <p>NOTE: In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>

Table 68: show route table Output Fields (*continued*)

Field Name	Field Description
validation-state	<p>(BGP-learned routes) Validation status of the route:</p> <ul style="list-style-type: none"> • Invalid—Indicates that the prefix is found, but either the corresponding AS received from the EBGP peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database. • Unknown—Indicates that the prefix is not among the prefixes or prefix ranges in the database. • Unverified—Indicates that the origin of the prefix is not verified against the database. This is because the database got populated and the validation is not called for in the BGP import policy, although origin validation is enabled, or the origin validation is not enabled for the BGP peers. • Valid—Indicates that the prefix and autonomous system pair are found in the database.
FECs bound to route	Indicates point-to-multipoint root address, multicast source address, and multicast group address when multipoint LDP (M-LDP) inband signaling is configured.
Primary Upstream	When multipoint LDP with multicast-only fast reroute (MoFRR) is configured, indicates the primary upstream path. MoFRR transmits a multicast join message from a receiver toward a source on a primary path, while also transmitting a secondary multicast join message from the receiver toward the source on a backup path.
RPF Nexthops	When multipoint LDP with MoFRR is configured, indicates the reverse-path forwarding (RPF) next-hop information. Data packets are received from both the primary path and the secondary paths. The redundant packets are discarded at topology merge points due to the RPF checks.
Label	Multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.
weight	Value used to distinguish MoFRR primary and backup routes. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.
VC Label	MPLS label assigned to the Layer 2 circuit virtual connection.
MTU	Maximum transmission unit (MTU) of the Layer 2 circuit.
VLAN ID	VLAN identifier of the Layer 2 circuit.
Prefixes bound to route	Forwarding equivalent class (FEC) bound to this route. Applicable only to routes installed by LDP.

Table 68: show route table Output Fields (*continued*)

Field Name	Field Description
Communities	Community path attribute for the route. See Table 71 on page 2404 for all possible values for this field.
Layer2-info: encaps	Layer 2 encapsulation (for example, VPLS).
control flags	Control flags: none or Site Down .
mtu	Maximum transmission unit (MTU) information.
Label-Base, range	First label in a block of labels and label block size. A remote PE routing device uses this first label when sending traffic toward the advertising PE routing device.
status vector	Layer 2 VPN and VPLS network layer reachability information (NLRI).
Accepted Multipath	Current active path when BGP multipath is configured.
Accepted LongLivedStale	The LongLivedStale flag indicates that the route was marked LLGR-stale by this router, as part of the operation of LLGR receiver mode. Either this flag or the LongLivedStaleImport flag might be displayed for a route. Neither of these flags is displayed at the same time as the Stale (ordinary GR stale) flag.
Accepted LongLivedStaleImport	<p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy. Either this flag or the LongLivedStale flag might be displayed for a route. Neither of these flags is displayed at the same time as the Stale (ordinary GR stale) flag.</p> <p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and import into the inet.0 routing table</p>
ImportAccepted LongLivedStaleImport	<p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and imported into the inet.0 routing table</p> <p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy.</p>
Accepted MultipathContrib	Path currently contributing to BGP multipath.
Localpref	Local preference value included in the route.
Router ID	BGP router ID as advertised by the neighbor in the open message.

Table 68: show route table Output Fields (*continued*)

Field Name	Field Description
Primary Routing Table	In a routing table group, the name of the primary routing table in which the route resides.
Secondary Tables	In a routing table group, the name of one or more secondary tables in which the route resides.

Table 69 on page 2400 describes all possible values for the Next-hop Types output field.

Table 69: Next-hop Types Output Field Values

Next-Hop Type	Description
Broadcast (bcast)	Broadcast next hop.
Deny	Deny next hop.
Discard	Discard next hop.
Flood	Flood next hop. Consists of components called branches, up to a maximum of 32 branches. Each flood next-hop branch sends a copy of the traffic to the forwarding interface. Used by point-to-multipoint RSVP, point-to-multipoint LDP, point-to-multipoint CCC, and multicast.
Hold	Next hop is waiting to be resolved into a unicast or multicast type.
Indexed (idxd)	Indexed next hop.
Indirect (indr)	Used with applications that have a protocol next hop address that is remote. You are likely to see this next-hop type for internal BGP (IBGP) routes when the BGP next hop is a BGP neighbor that is not directly connected.
Interface	Used for a network address assigned to an interface. Unlike the router next hop, the interface next hop does not reference any specific node on the network.
Local (locl)	Local address on an interface. This next-hop type causes packets with this destination address to be received locally.
Multicast (mcst)	Wire multicast next hop (limited to the LAN).
Multicast discard (mdsc)	Multicast discard.

Table 69: Next-hop Types Output Field Values (*continued*)

Next-Hop Type	Description
Multicast group (mgrp)	Multicast group member.
Receive (recv)	Receive.
Reject (rjct)	Discard. An ICMP unreachable message was sent.
Resolve (rslv)	Resolving next hop.
Routed multicast (mcrt)	Regular multicast next hop.
Router	<p>A specific node or set of nodes to which the routing device forwards packets that match the route prefix.</p> <p>To qualify as a next-hop type router, the route must meet the following criteria:</p> <ul style="list-style-type: none"> • Must not be a direct or local subnet for the routing device. • Must have a next hop that is directly connected to the routing device.
Table	Routing table next hop.
Unicast (ucst)	Unicast.
Unilist (ulst)	List of unicast next hops. A packet sent to this next hop goes to any next hop in the list.

Table 70 on page 2401 describes all possible values for the State output field. A route can be in more than one state (for example, <Active NoReadvrt Int Ext>).

Table 70: State Output Field Values

Value	Description
Accounting	Route needs accounting.
Active	Route is active.
Always Compare MED	Path with a lower multiple exit discriminator (MED) is available.
AS path	Shorter AS path is available.

Table 70: State Output Field Values (*continued*)

Value	Description
Cisco Non-deterministic MED selection	Cisco nondeterministic MED is enabled, and a path with a lower MED is available.
Clone	Route is a clone.
Cluster list length	Length of cluster list sent by the route reflector.
Delete	Route has been deleted.
Ex	Exterior route.
Ext	BGP route received from an external BGP neighbor.
FlashAll	Forces all protocols to be notified of a change to any route, active or inactive, for a prefix. When not set, protocols are informed of a prefix only when the active route changes.
Hidden	Route not used because of routing policy.
IfCheck	Route needs forwarding RPF check.
IGP metric	Path through next hop with lower IGP metric is available.
Inactive reason	Flags for this route, which was not selected as best for a particular destination.
Initial	Route being added.
Int	Interior route.
Int Ext	BGP route received from an internal BGP peer or a BGP confederation peer.
Interior > Exterior > Exterior via Interior	Direct, static, IGP, or EBGp path is available.
Local Preference	Path with a higher local preference value is available.
Martian	Route is a martian (ignored because it is obviously invalid).
MartianOK	Route exempt from martian filtering.

Table 70: State Output Field Values (*continued*)

Value	Description
Next hop address	Path with lower metric next hop is available.
No difference	Path from neighbor with lower IP address is available.
NoReadvrt	Route not to be advertised.
NotBest	Route not chosen because it does not have the lowest MED.
Not Best in its group	Incoming BGP AS is not the best of a group (only one AS can be the best).
NotInstall	Route not to be installed in the forwarding table.
Number of gateways	Path with a greater number of next hops is available.
Origin	Path with a lower origin code is available.
Pending	Route pending because of a hold-down configured on another route.
Release	Route scheduled for release.
RIB preference	Route from a higher-numbered routing table is available.
Route Distinguisher	64-bit prefix added to IP subnets to make them unique.
Route Metric or MED comparison	Route with a lower metric or MED is available.
Route Preference	Route with lower preference value is available.
Router ID	Path through a neighbor with lower ID is available.
Secondary	Route not a primary route.
Unusable path	Path is not usable because of one of the following conditions: <ul style="list-style-type: none"> • The route is damped. • The route is rejected by an import policy. • The route is unresolved.
Update source	Last tiebreaker is the lowest IP address value.

Table 71 on page 2404 describes the possible values for the Communities output field.

Table 71: Communities Output Field Values

Value	Description
<i>area-number</i>	4 bytes, encoding a 32-bit area number. For AS-external routes, the value is 0 . A nonzero value identifies the route as internal to the OSPF domain, and as within the identified area. Area numbers are relative to a particular OSPF domain.
bandwidth: local AS number:link-bandwidth-number	Link-bandwidth community value used for unequal-cost load balancing. When BGP has several candidate paths available for multipath purposes, it does not perform unequal-cost load balancing according to the link-bandwidth community unless all candidate paths have this attribute.
domain-id	Unique configurable number that identifies the OSPF domain.
domain-id-vendor	Unique configurable number that further identifies the OSPF domain.
<i>link-bandwidth-number</i>	Link-bandwidth number: from 0 through 4,294,967,295 (bytes per second).
<i>local AS number</i>	Local AS number: from 1 through 65,535 .
<i>options</i>	1 byte. Currently this is only used if the route type is 5 or 7 . Setting the least significant bit in the field indicates that the route carries a type 2 metric.
origin	(Used with VPNs) Identifies where the route came from.
<i>ospf-route-type</i>	1 byte, encoded as 1 or 2 for intra-area routes (depending on whether the route came from a type 1 or a type 2 LSA); 3 for summary routes; 5 for external routes (area number must be 0); 7 for NSSA routes; or 129 for sham link endpoint addresses.
route-type-vendor	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute 0x8000 . The format is area-number:ospf-route-type:options .
rte-type	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute 0x0306 . The format is area-number:ospf-route-type:options .
target	Defines which VPN the route participates in; target has the format 32-bit IP address:16-bit number . For example, 10.19.0.0:100.
unknown IANA	Incoming IANA codes with a value between 0x1 and 0x7fff . This code of the BGP extended community attribute is accepted, but it is not recognized.

Table 71: Communities Output Field Values (*continued*)

Value	Description
unknown OSPF vendor community	Incoming IANA codes with a value above 0x8000 . This code of the BGP extended community attribute is accepted, but it is not recognized.
evpn-mcast-flags	Identifies the value in the multicast flags extended community and whether snooping is enabled. A value of 0x1 indicates that the route supports IGMP proxy.
evpn-l2-info	Identifies whether Multihomed Proxy MAC and IP Address Route Advertisement is enabled. A value of 0x20 indicates that the proxy bit is set. . Use the show bridge mac-ip-table extensive statement to determine whether the MAC and IP address route was learned locally or from a PE device.

Sample Output

show route table bgp.l2vpn.0

user@host> **show route table bgp.l2vpn.0**

```

bgp.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.24.1:1:4:1/96
      *[BGP/170] 01:08:58, localpref 100, from 192.168.24.1
      AS path: I
      > to 10.0.16.2 via fe-0/0/1.0, label-switched-path am

```

show route table bgp.l3vpn.0

user@host> **show route table bgp.l3vpn.0**

```

bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.71.15:100:10.255.71.17/32
      *[BGP/170] 00:03:59, MED 1, localpref 100, from
10.255.71.15
      AS path: I
      > via so-2/1/0.0, Push 100020, Push 100011(top)
10.255.71.15:200:10.255.71.18/32

```

```

*[BGP/170] 00:03:59, MED 1, localpref 100, from
10.255.71.15
AS path: I
> via so-2/1/0.0, Push 100021, Push 100011(top)

```

show route table bgp.l3vpn.0 detail

user@host> show route table bgp.l3vpn.0 detail

```

bgp.l3vpn.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)

10.255.245.12:1:172.16.4.0/8 (1 entry, 1 announced)
  *BGP   Preference: 170/-101
        Route Distinguisher: 10.255.245.12:1
        Source: 10.255.245.12
        Next hop: 192.168.208.66 via fe-0/0/0.0, selected
        Label operation: Push 182449
        Protocol next hop: 10.255.245.12
        Push 182449
        Indirect next hop: 863a630 297
        State: <Active Int Ext>
        Local AS:      35 Peer AS:      35
        Age: 12:19      Metric2: 1
        Task: BGP_35.10.255.245.12+179
        Announcement bits (1): 0-BGP.0.0.0.0+179
        AS path: 30 10458 14203 2914 3356 I (Atomic) Aggregator: 3356 4.68.0.11
        Communities: 2914:420 target:11111:1 origin:56:78
        VPN Label: 182449
        Localpref: 100
        Router ID: 10.255.245.12

10.255.245.12:1:4.17.225.0/24 (1 entry, 1 announced)
  *BGP   Preference: 170/-101
        Route Distinguisher: 10.255.245.12:1
        Source: 10.255.245.12
        Next hop: 192.168.208.66 via fe-0/0/0.0, selected
        Label operation: Push 182465
        Protocol next hop: 10.255.245.12
        Push 182465
        Indirect next hop: 863a8f0 305
        State: <Active Int Ext>
        Local AS:      35 Peer AS:      35
        Age: 12:19      Metric2: 1
        Task: BGP_35.10.255.245.12+179

```

```

Announcement bits (1): 0-BGP.0.0.0.0+179
AS path: 30 10458 14203 2914 11853 11853 11853 6496 6496 6496 6496 6496 6496 I
Communities: 2914:410 target:12:34 target:11111:1 origin:12:34
VPN Label: 182465
Localpref: 100
Router ID: 10.255.245.12

10.255.245.12:1:4.17.226.0/23 (1 entry, 1 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.245.12:1
Source: 10.255.245.12
Next hop: 192.168.208.66 via fe-0/0/0.0, selected
Label operation: Push 182465
Protocol next hop: 10.255.245.12
Push 182465
Indirect next hop: 86bd210 330
State: <Active Int Ext>
Local AS: 35 Peer AS: 35
Age: 12:19 Metric2: 1
Task: BGP_35.10.255.245.12+179
Announcement bits (1): 0-BGP.0.0.0.0+179
AS path: 30 10458 14203 2914 11853 11853 11853 6496 6496 6496 6496 6496

6496 I
Communities: 2914:410 target:12:34 target:11111:1 origin:12:34
VPN Label: 182465
Localpref: 100
Router ID: 10.255.245.12

10.255.245.12:1:4.17.251.0/24 (1 entry, 1 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.245.12:1
Source: 10.255.245.12
Next hop: 192.168.208.66 via fe-0/0/0.0, selected
Label operation: Push 182465
Protocol next hop: 10.255.245.12
Push 182465
Indirect next hop: 86bd210 330
State: <Active Int Ext>
Local AS: 35 Peer AS: 35
Age: 12:19 Metric2: 1
Task: BGP_35.10.255.245.12+179
Announcement bits (1): 0-BGP.0.0.0.0+179
AS path: 30 10458 14203 2914 11853 11853 11853 6496 6496 6496 6496 6496

```

```

6496 I
Communities: 2914:410 target:12:34 target:11111:1 origin:12:34
VPN Label: 182465
Localpref: 100

```

show route table bgp.rtarget.0 (When Proxy BGP Route Target Filtering Is Configured)

user@host> show route table bgp.rtarget.0

```

bgp.rtarget.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

100:100:100/96
    *[RTarget/5] 00:03:14
        Type Proxy
            for 10.255.165.103
            for 10.255.166.124
        Local

```

show route table bgp.evpn.0

user@host> show route table bgp.evpn.0

```

bgp.evpn.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2:100.100.100.2:100::0::00:26:88:5f:67:b0/304
    *[BGP/170] 11:00:05, localpref 100, from 100.100.100.2
        AS path: I, validation-state: unverified
    > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1
2:100.100.100.2:100::0::00:51:51:51:51:51/304
    *[BGP/170] 11:00:05, localpref 100, from 100.100.100.2
        AS path: I, validation-state: unverified
    > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1
2:100.100.100.3:100::0::00:52:52:52:52:52/304
    *[BGP/170] 10:59:58, localpref 100, from 100.100.100.3
        AS path: I, validation-state: unverified
    > to 100.64.13.3 via ge-2/0/8.0, label-switched-path R0toR2
2:100.100.100.3:100::0::a8:d0:e5:5b:01:c8/304
    *[BGP/170] 10:59:58, localpref 100, from 100.100.100.3
        AS path: I, validation-state: unverified
    > to 100.64.13.3 via ge-2/0/8.0, label-switched-path R0toR2

```



```

3:100.100.100.2:100::1000::100.100.100.2/304
    *[BGP/170] 11:00:16, localpref 100, from 100.100.100.2
        AS path: I, validation-state: unverified
        > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1
3:100.100.100.2:100::2000::100.100.100.2/304
    *[BGP/170] 11:00:16, localpref 100, from 100.100.100.2
        AS path: I, validation-state: unverified
        > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1

```

show route table evpna.evpn.0

user@host> show route table evpna.evpn.0

```

evpna.evpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

3:100.100.100.10:100::0::10::100.100.100.10/384
    *[EVPN/170] 01:37:09
        Indirect
3:100.100.100.2:100::2000::100.100.100.2/304
    *[EVPN/170] 01:37:12
        Indirect

```

show route table inet.0

user@host> show route table inet.0

```

inet.0: 12 destinations, 12 routes (11 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

0.0.0.0/0          *[Static/5] 00:51:57
                   > to 172.16.5.254 via fxp0.0
10.0.0.1/32        *[Direct/0] 00:51:58
                   > via at-5/3/0.0
10.0.0.2/32        *[Local/0] 00:51:58
                   Local
10.12.12.21/32     *[Local/0] 00:51:57
                   Reject
10.13.13.13/32     *[Direct/0] 00:51:58
                   > via t3-5/2/1.0
10.13.13.14/32     *[Local/0] 00:51:58
                   Local
10.13.13.21/32     *[Local/0] 00:51:58

```

```

Local
10.13.13.22/32    *[Direct/0] 00:33:59
                  > via t3-5/2/0.0
127.0.0.1/32     [Direct/0] 00:51:58
                  > via lo0.0
10.222.5.0/24    *[Direct/0] 00:51:58
                  > via fxp0.0
10.222.5.81/32   *[Local/0] 00:51:58
                  Local

```

show route table inet.3

user@host> show route table inet.3

```

inet.3: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.5/32      *[LDP/9] 00:25:43, metric 10, tag 200
                  to 10.2.94.2 via lt-1/2/0.49
                  > to 10.2.3.2 via lt-1/2/0.23

```

show route table inet.3 protocol ospf

user@host> show route table inet.3 protocol ospf

```

inet.3: 9 destinations, 18 routes (9 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.20/32      [L-OSPF/10] 1d 00:00:56, metric 2
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800020
                  to 10.0.6.60 via lt-1/2/0.12, Push 800020, Push 800030(top)
1.1.1.30/32      [L-OSPF/10] 1d 00:01:01, metric 3
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800030
                  to 10.0.6.60 via lt-1/2/0.12, Push 800030
1.1.1.40/32      [L-OSPF/10] 1d 00:01:01, metric 4
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800040
                  to 10.0.6.60 via lt-1/2/0.12, Push 800040
1.1.1.50/32      [L-OSPF/10] 1d 00:01:01, metric 5
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800050
                  to 10.0.6.60 via lt-1/2/0.12, Push 800050
1.1.1.60/32      [L-OSPF/10] 1d 00:01:01, metric 6
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800060
                  to 10.0.6.60 via lt-1/2/0.12, Pop

```

show route table inet6.0

```
user@host> show route table inet6.0
```

```
inet6.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Route, * = Both

fec0:0:0:3::/64 *[Direct/0] 00:01:34
>via fe-0/1/0.0

fec0:0:0:3::/128 *[Local/0] 00:01:34
>Local

fec0:0:0:4::/64 *[Static/5] 00:01:34
>to fec0:0:0:3::ffff via fe-0/1/0.0
```

show route table inet6.3

```
user@router> show route table inet6.3
```

```
inet6.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

::10.255.245.195/128
      *[LDP/9] 00:00:22, metric 1
      > via so-1/0/0.0
::10.255.245.196/128
      *[LDP/9] 00:00:08, metric 1
      > via so-1/0/0.0, Push 100008
```

show route table inetflow detail

```
user@host> show route table inetflow detail
```

```
inetflow.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.12.44.1,*/48 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
              Next-hop reference count: 2
              State: <Active Ext>
              Local AS: 64502 Peer AS: 64500
              Age: 4
              Task: BGP_64500.10.12.99.5+3792
              Announcement bits (1): 0-Flow
              AS path: 64500 I
```

```

Communities: traffic-rate:0:0
Validation state: Accept, Originator: 10.12.99.5
Via: 10.12.44.0/24, Active
Localpref: 100
Router ID: 10.255.71.161

10.12.56.1,*/48 (1 entry, 1 announced)
  *Flow Preference: 5
    Next-hop reference count: 2
    State: <Active>
    Local AS: 64502
    Age: 6:30
    Task: RT Flow
    Announcement bits (2): 0-Flow 1-BGP.0.0.0.0+179
    AS path: I
    Communities: 1:1

```

show route table inetflow.0 extensive (BGP Flowspec Redirect to IP)

user@host> show route table inetflow.0 extensive

```

inetflow.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
2.2.2.2,*/term:1 (1 entry, 1 announced)
TSI:
KRT in dfwd;
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xb209500 (adv_entry)
Advertised metrics:
Nexthop: 21.1.4.5
Localpref: 100
AS path: [100] I
Communities: redirect-to-ip:21.1.4.5:0
Action(s): accept,count
*Flow Preference: 5
Next hop type: Indirect, Next hop index: 0
Address: 0xa2b931c
Next-hop reference count: 1Next hop:
State: <Active> L
ocal AS: 69
Age: 2
Validation State: unverified
Task: RT Flow
Announcement bits (1): 0-Flow
AS path: I
Communities: redirect-to-ip:21.1.4.5:0

```

user@host> **show route table inetflow.0 extensive**

```
inetflow.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
2.2.2.2,*/term:1 (1 entry, 1 announced)
TSI:
KRT in dfwd;
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xb209500 (adv_entry)
Advertised metrics:
Nexthop: 21.1.4.5
Localpref: 100
AS path: [100] I
Communities: redirect-to-nexthop
Action(s): accept,count
*Flow Preference: 5
Next hop type: Indirect, Next hop index: 0
Address: 0xa2b931c
Next-hop reference count: 1
Next hop:
State: <Active>
Local AS: 69
Age: 2
Validation State: unverified
Task: RT Flow
Announcement bits (1): 0-Flow
AS path: I
Communities: redirect-to-nexthop
regress@10.102.178.210> show route table inetflow.0 extensive
inetflow.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
4.4.4.4,*/term:1 (1 entry, 1 announced)
TSI:
KRT in dfwd;
Action(s): accept,count
*BGP Preference: 170/-101
Next hop type: Fictitious, Next hop index: 0
Address: 0xc5e3c30
Next-hop reference count: 3
Next hop: 21.1.4.5
State: <Active Int Ext>
Local AS: 100 Peer AS: 100
Age: 10
Validation State: unverified
Task: BGP_100.1.1.1.1+179
Announcement bits (1): 0-Flow
AS path: I
Communities: redirect-to-nexthop
```

```
Accepted
Localpref: 100
Router ID: 1.1.1.1
```

show route table lsdist.0 extensive

user@host> show route table lsdist.0 extensive

```
lsdist.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
NODE { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 ISIS-L1:0 }/1152
(1 entry, 1 announced)
TSI:
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xa62f378 (adv_entry)
  Advertised metrics:
    Nexthop: Self
    Localpref: 100
    AS path: [4170512532] I
    Communities:
Path NODE { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 ISIS-L1:0 }
Vector len 4. Val: 0
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0x95dfc64
    Next-hop reference count: 9
    State: <Active NotInstall>
    Local AS: 4170512532
    Age: 6:05
    Validation State: unverified
    Task: IS-IS
    Announcement bits (1): 0-BGP_RT_Background
    AS path: I
    IPv4 Router-ids:
      128.220.11.197
    Area membership:
      47 00 05 80 ff f8 00 00 00 01 08 00 01
    SPRING-Capabilities: - SRGB block [Start: 800000,
Range: 256, Flags: 0xc0]
    SPRING-Algorithms:
      - Algo: 0
  LINK { Local { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 }.{
IPv4:8.65.1.105 } Remote { AS:4170512532 BGP-LS ID:4170512532 ISO:4284.3300.5067)
TSI:
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xa62f3cc (adv_entry)
```

```

Advertised metrics:
  Nexthop: Self
  Localpref: 100
  AS path: [4170512532] I
  Communities:
Path LINK { Local { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 }.{
IPv4:8.65.1.105 } Remote { AS:4170512532 BGP-LS ID:4170512532 ISO:4284.33000
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0x95dfc64
    Next-hop reference count: 9
    State: <Active NotInstall>
    Local AS: 4170512532
    Age: 6:05
    Validation State: unverified
    Task: IS-IS
    Announcement bits (1): 0-BGP_RT_Background
    AS path: I
    Color: 32768
    Maximum bandwidth: 1000Mbps
    Reservable bandwidth: 1000Mbps
    Unreserved bandwidth by priority:
      0 1000Mbps
      1 1000Mbps
      2 1000Mbps
      3 1000Mbps
      4 1000Mbps
      5 1000Mbps
      6 1000Mbps
      7 1000Mbps
    Metric: 10
    TE Metric: 10
    LAN IPV4 Adj-SID - Label: 299776, Flags: 0x30,
Weight: 0, Nbr: 10.220.1.83

PREFIX { Node { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 } {
IPv4:128.220.11.197/32 } ISIS-L1:0 }/1152 (1 entry, 1 announced) TSI: Page 0 idx
0, (group ibgp type Internal) Type 1 val 0xa62f43c (adv_entry)
  Advertised metrics:
    Nexthop: Self
    Localpref: 100
    AS path: [4170512532] I
    Communities:

```

```

Path PREFIX { Node { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 } {
  IPv4:128.220.11.197/32 } ISIS-L1:0 } Vector len 4. Val: 0
    *IS-IS Preference: 15
      Level: 1
      Next hop type: Fictitious, Next hop index: 0
      Address: 0x95dfc64
      Next-hop reference count: 9
      State:<Active NotInstall>
      Local AS: 4170512532
      Age: 6:05
      Validation State: unverified
      Task: IS-IS
      Announcement bits (1): 0-BGP_RT_Background
      AS path: I
      Prefix SID: 67, Flags: 0x40, Algo: 0

```

show route table l2circuit.0

user@host> show route table l2circuit.0

```

l2circuit.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.1.1.195:NoCtrlWord:1:1:Local/96
    *[L2CKT/7] 00:50:47
    > via so-0/1/2.0, Push 100049
    via so-0/1/3.0, Push 100049
10.1.1.195:NoCtrlWord:1:1:Remote/96
    *[LDP/9] 00:50:14
    Discard
10.1.1.195:CtrlWord:1:2:Local/96
    *[L2CKT/7] 00:50:47
    > via so-0/1/2.0, Push 100049
    via so-0/1/3.0, Push 100049
10.1.1.195:CtrlWord:1:2:Remote/96
    *[LDP/9] 00:50:14
    Discard

```

show route table lsdist.0

user@host> show route table lsdist.0


```

lsdist.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

LINK { Local { AS:4 BGP-LS ID:100 IPv4:4.4.4.4 }.{ IPv4:4.4.4.4 } Remote { AS:4
BGP-LS ID:100 IPv4:7.7.7.7 }.{ IPv4:7.7.7.7 } Undefined:0 }/1152
      *[BGP-LS-EPE/170] 00:20:56
      Fictitious
LINK { Local { AS:4 BGP-LS ID:100 IPv4:4.4.4.4 }.{ IPv4:4.4.4.4 IfIndex:339 }
Remote { AS:4 BGP-LS ID:100 IPv4:7.7.7.7 }.{ IPv4:7.7.7.7 } Undefined:0 }/1152
      *[BGP-LS-EPE/170] 00:20:56
      Fictitious
LINK { Local { AS:4 BGP-LS ID:100 IPv4:4.4.4.4 }.{ IPv4:50.1.1.1 } Remote { AS:4
BGP-LS ID:100 IPv4:5.5.5.5 }.{ IPv4:50.1.1.2 } Undefined:0 }/1152
      *[BGP-LS-EPE/170] 00:20:56
      Fictitious

```

show route table mpls

user@host> show route table mpls

```

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 00:13:55, metric 1
           Receive
1          *[MPLS/0] 00:13:55, metric 1
           Receive
2          *[MPLS/0] 00:13:55, metric 1
           Receive
1024       *[VPN/0] 00:04:18
           to table red.inet.0, Pop

```

show route table mpls extensive

user@host> show route table mpls extensive

```

100000 (1 entry, 1 announced)
TSI:
KRT in-kernel 100000 /36 -> {so-1/0/0.0}
      *LDP      Preference: 9
              Next hop: via so-1/0/0.0, selected
              Pop

```

```

State: <Active Int>
Age: 29:50      Metric: 1
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
Prefixes bound to route: 10.0.0.194/32

```

show route table mpls.0

```
user@host> show route table mpls.0
```

```

mpls.0: 18 destinations, 19 routes (18 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 11:39:56, metric 1
           to table inet.0
0(S=0)     *[MPLS/0] 11:39:56, metric 1
           to table mpls.0
1          *[MPLS/0] 11:39:56, metric 1
           Receive
2          *[MPLS/0] 11:39:56, metric 1
           to table inet6.0
2(S=0)     *[MPLS/0] 11:39:56, metric 1
           to table mpls.0
13         *[MPLS/0] 11:39:56, metric 1
           Receive
303168     *[EVPN/7] 11:00:49, routing-instance pbbn10, route-type
Ingress-MAC, ISID 0
           to table pbbn10.evpn-mac.0
303184     *[EVPN/7] 11:00:53, routing-instance pbbn10, route-type
Ingress-IM, ISID 1000
           to table pbbn10.evpn-mac.0
           [EVPN/7] 11:00:53, routing-instance pbbn10, route-type
Ingress-IM, ISID 2000
           to table pbbn10.evpn-mac.0
303264     *[EVPN/7] 11:00:53, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-IM, ISID 1000
           > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303280     *[EVPN/7] 11:00:53, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-IM, ISID 2000
           > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303328     *[EVPN/7] 11:00:49, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
           > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1

```

```

303344          *[EVPN/7] 11:00:49, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
          > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303360          *[EVPN/7] 11:00:47, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC 00:26:88:5f:67:b0
          > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303376          *[EVPN/7] 11:00:47, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC 00:51:51:51:51:51
          > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303392          *[EVPN/7] 11:00:35, remote-pe 100.100.100.3, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
          > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2
303408          *[EVPN/7] 11:00:35, remote-pe 100.100.100.3, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
          > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2
303424          *[EVPN/7] 11:00:33, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC a8:d0:e5:5b:01:c8
          > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2
303440          *[EVPN/7] 11:00:33, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC 00:52:52:52:52:52
          > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2

```

show route table mpls.0 detail (PTX Series)

user@host> show route table mpls.0 detail

```

ge-0/0/2.600 (1 entry, 1 announced)
  *L2VPN Preference: 7
    Next hop type: Indirect
    Address: 0x9438f34
    Next-hop reference count: 2
    Next hop type: Router, Next hop index: 567
    Next hop: 10.0.0.1 via ge-0/0/1.0, selected
    Label operation: Push 299808
    Label TTL action: prop-ttl
    Load balance label: Label 299808:None;
    Session Id: 0x1
    Protocol next hop: 10.255.255.1
    Label operation: Push 299872 Offset: 252
    Label TTL action: no-prop-ttl
    Load balance label: Label 299872:Flow label PUSH;
    Composite next hop: 0x9438ed8 570 INH Session ID: 0x2
    Indirect next hop: 0x9448208 262142 INH Session ID: 0x2
    State: <Active Int>

```

```

Age: 21          Metric2: 1
Validation State: unverified
Task: Common L2 VC
Announcement bits (2): 0-KRT 2-Common L2 VC
AS path: I

```

show route table mpls.0 ccc ge-0/0/1.1004 detail

user@host>show route table mpls.0 ccc ge-0/0/1.1004 detail

```

mpls.0: 121 destinations, 121 routes (121 active, 0 holddown, 0 hidden)
ge-0/0/1.1004 (1 entry, 1 announced)
    *EVPN    Preference: 7
            Next hop type: List, Next hop index: 1048577
            Address: 0xdc14770
            Next-hop reference count: 3
            Next hop: ELNH Address 0xd011e30
                Next hop type: Indirect, Next hop index: 0
                Address: 0xd011e30
                Next-hop reference count: 3
                Protocol next hop: 100.100.100.1
                Label operation: Push 301952
                Composite next hop: 0xd011dc0 754 INH Session ID: 0x146
                Indirect next hop: 0xb69a890 1048615 INH Session ID: 0x146
                    Next hop type: Router, Next hop index: 735
                    Address: 0xd00e530
                    Next-hop reference count: 23
                    Next hop: 100.46.1.2 via ge-0/0/5.0
                    Label-switched-path pe4_to_pe1
                    Label operation: Push 300320
                    Label TTL action: prop-ttl
                    Load balance label: Label 300320: None;
                    Label element ptr: 0xd00e580
                    Label parent element ptr: 0x0
                    Label element references: 18
                    Label element child references: 16
                    Label element lsp id: 5
            Next hop: ELNH Address 0xd012070
                Next hop type: Indirect, Next hop index: 0
                Address: 0xd012070
                Next-hop reference count: 3
                Protocol next hop: 100.100.100.2
                Label operation: Push 301888
                Composite next hop: 0xd012000 755 INH Session ID: 0x143

```

```

Indirect next hop: 0xb69a9a0 1048641 INH Session ID: 0x143
  Next hop type: Router, Next hop index: 716
  Address: 0xd00e710
  Next-hop reference count: 23
  Next hop: 100.46.1.2 via ge-0/0/5.0
  Label-switched-path pe4_to_pe2
  Label operation: Push 300304
  Label TTL action: prop-ttl
  Load balance label: Label 300304: None;
  Label element ptr: 0xd00e760
  Label parent element ptr: 0x0
  Label element references: 15
  Label element child references: 13
  Label element lsp id: 6
Next hop: ELNH Address 0xd0121f0, selected
  Next hop type: Indirect, Next hop index: 0
  Address: 0xd0121f0
  Next-hop reference count: 3
  Protocol next hop: 100.100.100.3
  Label operation: Push 301984
  Composite next hop: 0xd012180 756 INH Session ID: 0x145
  Indirect next hop: 0xb69aab0 1048642 INH Session ID: 0x145
    Next hop type: Router, Next hop index: 801
    Address: 0xd010ed0
    Next-hop reference count: 32
    Next hop: 100.46.1.2 via ge-0/0/5.0
    Label-switched-path pe4_to_pe3
    Label operation: Push 300336
    Label TTL action: prop-ttl
    Load balance label: Label 300336: None;
    Label element ptr: 0xd0108c0
    Label parent element ptr: 0x0
    Label element references: 22
    Label element child references: 20
    Label element lsp id: 7
State: < Active Int >
Age: 2:06:50
Validation State: unverified
Task: evpn global task
Announcement bits (1): 1-KRT
AS path: I

```

show route table mpls.0 protocol evpn

user@host>**show route table mpls.0 protocol evpn**

```

mpls.0: 121 destinations, 121 routes (121 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

299872          *[EVPN/7] 02:30:58, routing-instance mhevpn, route-type
Ingress-IM, vlan-id 10
                to table mhevpn.evpn-mac.0
300016          *[EVPN/7] 02:30:38, routing-instance VS-1, route-type Ingress-IM,
vlan-id 110
                to table VS-1.evpn-mac.0
300032          *[EVPN/7] 02:30:38, routing-instance VS-1, route-type Ingress-IM,
vlan-id 120
                to table VS-1.evpn-mac.0
300048          *[EVPN/7] 02:30:38, routing-instance VS-1, route-type Ingress-IM,
vlan-id 130
                to table VS-1.evpn-mac.0
300064          *[EVPN/7] 02:30:38, routing-instance VS-2, route-type Ingress-IM,
vlan-id 210
                to table VS-2.evpn-mac.0
300080          *[EVPN/7] 02:30:38, routing-instance VS-2, route-type Ingress-IM,
vlan-id 220
                to table VS-2.evpn-mac.0
300096          *[EVPN/7] 02:30:38, routing-instance VS-2, route-type Ingress-IM,
vlan-id 230
                to table VS-2.evpn-mac.0
300112          *[EVPN/7] 02:27:06, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:44:44:44:44:44:44:44:44:44
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300128          *[EVPN/7] 02:29:22, routing-instance mhevpn, route-type
Ingress-Aliasing
                to table mhevpn.evpn-mac.0
300144          *[EVPN/7] 02:27:06, routing-instance VS-1, route-type Egress-MAC,
ESI 00:44:44:44:44:44:44:44:44:44
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300160          *[EVPN/7] 02:29:22, routing-instance VS-1, route-type
Ingress-Aliasing
                to table VS-1.evpn-mac.0
300176          *[EVPN/7] 02:27:07, routing-instance VS-2, route-type Egress-MAC,
ESI 00:44:44:44:44:44:44:44:44:44
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300192          *[EVPN/7] 02:29:22, routing-instance VS-2, route-type
Ingress-Aliasing
                to table VS-2.evpn-mac.0
300208          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-IM, vlan-id 120

```

```

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300224      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
mhevpn, route-type Egress-IM, vlan-id 10
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300240      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-IM, vlan-id 110
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300256      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-IM, vlan-id 130
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300272      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-IM, vlan-id 210
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300288      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-IM, vlan-id 220
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300304      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-IM, vlan-id 230
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300320      *[EVPN/7] 02:27:06, routing-instance VS-1, route-type Egress-MAC,
ESI 00:11:11:11:11:11:11:11:11:11
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300336      *[EVPN/7] 02:27:06, routing-instance VS-1, route-type Egress-MAC,
ESI 00:33:33:33:33:33:33:33:33:33
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300368      *[EVPN/7] 02:27:07, routing-instance VS-2, route-type Egress-MAC,
ESI 00:33:33:33:33:33:33:33:33:33
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300384      *[EVPN/7] 02:27:07, routing-instance VS-2, route-type Egress-MAC,
ESI 00:11:11:11:11:11:11:11:11:11
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300416      *[EVPN/7] 02:27:06, routing-instance mhevpn, route-type

```

```

Egress-MAC, ESI 00:33:33:33:33:33:33:33:33:33
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

    to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300432    *[EVPN/7] 02:27:06, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:11:11:11:11:11:11:11:11:11
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

    to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

    to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300480    *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300496    *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300560    *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300592    *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300608    *[EVPN/7] 02:29:23
    > via ge-0/0/1.1001, Pop
300624    *[EVPN/7] 02:29:23
    > via ge-0/0/1.2001, Pop
301232    *[EVPN/7] 02:29:17
    > via ge-0/0/1.1002, Pop
301296    *[EVPN/7] 02:29:10
    > via ge-0/0/1.1003, Pop
301312    *[EVPN/7] 02:27:06
    > via ae10.2003, Pop
    to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301360    *[EVPN/7] 02:29:01
    > via ge-0/0/1.1004, Pop
301408    *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
vpws1004, route-type Egress, vlan-id 2004
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301456    *[EVPN/7] 02:27:06
    > via ae10.1010, Pop
    to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301552    *[EVPN/7] 02:27:07, routing-instance VS-1, route-type Egress-MAC,
ESI 00:22:22:22:22:22:22:22:22:22

```



```

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301568      *[EVPN/7] 02:27:07, routing-instance VS-2, route-type Egress-MAC,
ESI 00:22:22:22:22:22:22:22:22
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301648      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
vpws1010, route-type Egress, vlan-id 2010
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301664      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301680      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301696      *[EVPN/7] 02:27:07, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:22:22:22:22:22:22:22:22
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301712      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301728      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301744      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-IM, vlan-id 230
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301760      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
vpws1010, route-type Egress, vlan-id 2010
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301776      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301792      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-IM, vlan-id 130
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301808      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
vpws1004, route-type Egress, vlan-id 2004
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301824      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-IM, vlan-id 10
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301840      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1002, route-type Egress, vlan-id 2002
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301856      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance

```

```

vpws1003, route-type Egress, vlan-id 2003
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301872      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1003, route-type Egress Protection, vlan-id 2003
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301888      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1010, route-type Egress Protection, vlan-id 1010
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301904      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-IM, vlan-id 220
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301920      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-IM, vlan-id 210
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301936      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-IM, vlan-id 230
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301952      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-SH, vlan-id 230
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301968      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-IM, vlan-id 220
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301984      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-SH, vlan-id 220
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302000      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-IM, vlan-id 210
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302016      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-SH, vlan-id 210
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302032      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302048      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302064      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302080      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3

```

```

302096          *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-MAC
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302112          *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-MAC
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302128          *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-MAC
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302144          *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-MAC
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302160          *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-IM, vlan-id 120
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302176          *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-IM, vlan-id 110
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302192          *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-IM, vlan-id 130
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302208          *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-SH, vlan-id 130
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302224          *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-IM, vlan-id 120
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302240          *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-SH, vlan-id 120
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302256          *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-IM, vlan-id 110
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302272          *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-SH, vlan-id 110
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302288          *[EVPN/7] 02:27:06, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-MAC
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302304          *[EVPN/7] 02:27:06, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-MAC
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302320          *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-MAC

```

```

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302336      *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302352      *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
vpws1004, route-type Egress, vlan-id 2004
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302368      *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-IM, vlan-id 10
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302384      *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-SH, vlan-id 10
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302400      *[EVPN/7] 02:26:21
> via ge-0/0/1.3001, Pop
302432      *[EVPN/7] 02:26:21, remote-pe 100.100.100.3, routing-instance
vpws3001, route-type Egress, vlan-id 40000
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302448      *[EVPN/7] 02:26:21, remote-pe 100.100.100.1, routing-instance
vpws3001, route-type Egress, vlan-id 40000
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302464      *[EVPN/7] 02:26:20, remote-pe 100.100.100.2, routing-instance
vpws3001, route-type Egress, vlan-id 40000
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302480      *[EVPN/7] 02:26:14
> via ge-0/0/1.3016, Pop
302512      *[EVPN/7] 02:26:14, remote-pe 100.100.100.1, routing-instance
vpws3016, route-type Egress, vlan-id 40016
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302528      *[EVPN/7] 02:26:14, remote-pe 100.100.100.2, routing-instance
vpws3016, route-type Egress, vlan-id 40016
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302560      *[EVPN/7] 02:26:06
> via ae10.3011, Pop
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302592      *[EVPN/7] 02:26:07, remote-pe 100.100.100.1, routing-instance
vpws3011, route-type Egress, vlan-id 401100
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302608      *[EVPN/7] 02:26:07, remote-pe 100.100.100.2, routing-instance
vpws3011, route-type Egress, vlan-id 401100
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302624      *[EVPN/7] 02:26:07, remote-pe 100.100.100.3, routing-instance
vpws3011, route-type Egress Protection, vlan-id 301100
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3

```

```

302656          *[EVPN/7] 02:25:59
                > via ae10.3006, Pop
                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302688          *[EVPN/7] 02:26:00, remote-pe 100.100.100.2, routing-instance
vpws3006, route-type Egress, vlan-id 400600
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302704          *[EVPN/7] 02:26:00, remote-pe 100.100.100.1, routing-instance
vpws3006, route-type Egress, vlan-id 400600
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302720          *[EVPN/7] 02:25:59, remote-pe 100.100.100.3, routing-instance
vpws3006, route-type Egress, vlan-id 400600
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302736          *[EVPN/7] 02:25:59, remote-pe 100.100.100.3, routing-instance
vpws3006, route-type Egress Protection, vlan-id 300600
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ge-0/0/1.1001    *[EVPN/7] 02:29:23
                > via ge-0/0/1.2001
ge-0/0/1.2001    *[EVPN/7] 02:29:23
                > via ge-0/0/1.1001
ge-0/0/1.1002    *[EVPN/7] 02:27:06
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ae10.2003        *[EVPN/7] 02:29:10
                > via ge-0/0/1.1003
ge-0/0/1.1003    *[EVPN/7] 02:27:06
                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3

                > via ae10.2003
ge-0/0/1.1004    *[EVPN/7] 02:27:06
                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ae10.1010        *[EVPN/7] 02:27:06
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
ge-0/0/1.3001    *[EVPN/7] 02:26:20
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ge-0/0/1.3016    *[EVPN/7] 02:26:13
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
ae10.3011        *[EVPN/7] 02:26:06

```

```

ae10.3006          > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
                   *[EVPN/7] 02:25:59
                   > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

                   to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

                   to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3

```

show route table mpls.0 protocol ospf

user@host> show route table mpls.0 protocol ospf

```

mpls.0: 29 destinations, 29 routes (29 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

299952          *[L-OSPF/10] 23:59:42, metric 0
                > to 10.0.10.70 via lt-1/2/0.14, Pop
                to 10.0.6.60 via lt-1/2/0.12, Swap 800070, Push 800030(top)
299952(S=0)     *[L-OSPF/10] 23:59:42, metric 0
                > to 10.0.10.70 via lt-1/2/0.14, Pop
                to 10.0.6.60 via lt-1/2/0.12, Swap 800070, Push 800030(top)
299968          *[L-OSPF/10] 23:59:48, metric 0
                > to 10.0.6.60 via lt-1/2/0.12, Pop

```

show route table mpls.0 extensive (PTX Series)

user@host> show route table mpls.0 extensive

```

ge-0/0/2.600 (1 entry, 1 announced)
TSI:
KRT in-kernel ge-0/0/2.600.0      /32 -> {composite(570)}
    *L2VPN Preference: 7
        Next hop type: Indirect
        Address: 0x9438f34
        Next-hop reference count: 2
        Next hop type: Router, Next hop index: 567
        Next hop: 10.0.0.1 via ge-0/0/1.0, selected
        Label operation: Push 299808
        Label TTL action: prop-ttl
        Load balance label: Label 299808:None;
        Session Id: 0x1
        Protocol next hop: 10.255.255.1
        Label operation: Push 299872 Offset: 252

```

```

Label TTL action: no-prop-ttl
Load balance label: Label 299872:Flow label PUSH;
Composite next hop: 0x9438ed8 570 INH Session ID: 0x2
Indirect next hop: 0x9448208 262142 INH Session ID: 0x2
State: <Active Int>
Age: 47          Metric2: 1
Validation State: unverified
Task: Common L2 VC
Announcement bits (2): 0-KRT 2-Common L2 VC
AS path: I
Composite next hops: 1
    Protocol next hop: 10.255.255.1 Metric: 1
    Label operation: Push 299872 Offset: 252
    Label TTL action: no-prop-ttl
    Load balance label: Label 299872:Flow label PUSH;
    Composite next hop: 0x9438ed8 570 INH Session ID: 0x2
    Indirect next hop: 0x9448208 262142 INH Session ID: 0x2
    Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.0.0.1 via ge-0/0/1.0
        Session Id: 0x1
    10.255.255.1/32 Originating RIB: inet.3
        Metric: 1                      Node path count: 1
        Forwarding nexthops: 1
            Nexthop: 10.0.0.1 via ge-0/0/1.0

```

show route table mpls.0 (RSVP Route—Transit LSP)

user@host> show route table mpls.0

```

mpls.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 00:37:31, metric 1
            Receive
1          *[MPLS/0] 00:37:31, metric 1
            Receive
2          *[MPLS/0] 00:37:31, metric 1
            Receive
13         *[MPLS/0] 00:37:31, metric 1
            Receive
300352     *[RSVP/7/1] 00:08:00, metric 1
            > to 10.64.0.106 via ge-1/0/1.0, label-switched-path lsp1_p2p

```

```

300352(S=0)      *[RSVP/7/1] 00:08:00, metric 1
                  > to 10.64.0.106 via ge-1/0/1.0, label-switched-path lsp1_p2p
300384           *[RSVP/7/2] 00:05:20, metric 1
                  > to 10.64.1.106 via ge-1/0/0.0, Pop
300384(S=0)      *[RSVP/7/2] 00:05:20, metric 1
                  > to 10.64.1.106 via ge-1/0/0.0, Pop

```

show route table vpls_1 detail

user@host> show route table vpls_1 detail

```

vpls_1.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

172.16.1.11:1000:1:1/96 (1 entry, 1 announced)
*L2VPN Preference: 170/-1
Receive table: vpls_1.l2vpn.0
Next-hop reference count: 2
State: <Active Int Ext>
Age: 4:29:47 Metric2: 1
Task: vpls_1-l2vpn
Announcement bits (1): 1-BGP.0.0.0.0+179
AS path: I
Communities: Layer2-info: encaps:VPLS, control flags:Site-Down
Label-base: 800000, range: 8, status-vector: 0xFF

```

show route table vpn-a

user@host> show route table vpn-a

```

vpn-a.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

+ = Active Route, - = Last Active, * = Both
192.168.16.1:1:1:1/96
      *[VPN/7] 05:48:27
      Discard
192.168.24.1:1:2:1/96
      *[BGP/170] 00:02:53, localpref 100, from 192.168.24.1
      AS path: I
      > to 10.0.16.2 via fe-0/0/1.0, label-switched-path am
192.168.24.1:1:3:1/96
      *[BGP/170] 00:02:53, localpref 100, from 192.168.24.1

```



```

        AS path: I
    > to 10.0.16.2 via fe-0/0/1.0, label-switched-path am

```

show route table vpn-a.mdt.0

```
user@host> show route table vpn-a.mdt.0
```

```

vpn-a.mdt.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1:1:0:10.255.14.216:232.1.1.1/144
    *[MVPN/70] 01:23:05, metric2 1
    Indirect
1:1:1:10.255.14.218:232.1.1.1/144
    *[BGP/170] 00:57:49, localpref 100, from 10.255.14.218
    AS path: I
    > via so-0/0/0.0, label-switched-path r0e-to-r1
1:1:2:10.255.14.217:232.1.1.1/144
    *[BGP/170] 00:57:49, localpref 100, from 10.255.14.217
    AS path: I
    > via so-0/0/1.0, label-switched-path r0-to-r2

```

show route table VPN-A detail

```
user@host> show route table VPN-A detail
```

```

VPN-AB.inet.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
10.255.179.9/32 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
              Route Distinguisher: 10.255.179.13:200
              Next hop type: Indirect
              Next-hop reference count: 5
              Source: 10.255.179.13
              Next hop type: Router, Next hop index: 732
              Next hop: 10.39.1.14 via fe-0/3/0.0, selected
              Label operation: Push 299824, Push 299824(top)
              Protocol next hop: 10.255.179.13
              Push 299824
              Indirect next hop: 8f275a0 1048574
              State: (Secondary Active Int Ext)
              Local AS: 1 Peer AS: 1
              Age: 3:41:06 Metric: 1 Metric2: 1
              Task: BGP_1.10.255.179.13+64309

```

```

Announcement bits (2): 0-KRT 1-BGP RT Background
AS path: I
Communities: target:1:200 rte-type:0.0.0.0:1:0
Import Accepted
VPN Label: 299824 TTL Action: vrf-ttl-propagate
Localpref: 100
Router ID: 10.255.179.13
Primary Routing Table bgp.l3vpn.0

```

show route table VPN-AB.inet.0

```
user@host> show route table VPN-AB.inet.0
```

```

VPN-AB.inet.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.39.1.0/30      *[OSPF/10] 00:07:24, metric 1
                  > via so-7/3/1.0
10.39.1.4/30      *[Direct/0] 00:08:42
                  > via so-5/1/0.0
10.39.1.6/32      *[Local/0] 00:08:46
                  Local
10.255.71.16/32   *[Static/5] 00:07:24
                  > via so-2/0/0.0
10.255.71.17/32   *[BGP/170] 00:07:24, MED 1, localpref 100, from
10.255.71.15
                  AS path: I
                  > via so-2/1/0.0, Push 100020, Push 100011(top)
10.255.71.18/32   *[BGP/170] 00:07:24, MED 1, localpref 100, from
10.255.71.15
                  AS path: I
                  > via so-2/1/0.0, Push 100021, Push 100011(top)
10.255.245.245/32 *[BGP/170] 00:08:35, localpref 100
                  AS path: 2 I
                  > to 10.39.1.5 via so-5/1/0.0
10.255.245.246/32 *[OSPF/10] 00:07:24, metric 1
                  > via so-7/3/1.0

```

show route table VPN_blue.mvpn-inet6.0

```
user@host> show route table VPN_blue.mvpn-inet6.0
```

```

vpn_blue.mvpn-inet6.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1:10.255.2.202:65536:10.255.2.202/432
    *[BGP/170] 00:02:37, localpref 100, from 10.255.2.202
        AS path: I
        > via so-0/1/3.0
1:10.255.2.203:65536:10.255.2.203/432
    *[BGP/170] 00:02:37, localpref 100, from 10.255.2.203
        AS path: I
        > via so-0/1/0.0
1:10.255.2.204:65536:10.255.2.204/432
    *[MVPN/70] 00:57:23, metric2 1
        Indirect
5:10.255.2.202:65536:128:::192.168.90.2:128:ffff::1/432
    *[BGP/170] 00:02:37, localpref 100, from 10.255.2.202
        AS path: I
        > via so-0/1/3.0
6:10.255.2.203:65536:64500:128:::10.12.53.12:128:ffff::1/432
    *[PIM/105] 00:02:37
        Multicast (IPv6)
7:10.255.2.202:65536:64500:128:::192.168.90.2:128:ffff::1/432
    *[MVPN/70] 00:02:37, metric2 1
        Indirect

```

show route table vrf1.mvpn.0 extensive

user@host> show route table vrf1.mvpn.0 extensive

```

1:10.255.50.77:1:10.255.50.77/240 (1 entry, 1 announced)
    *MVPN    Preference: 70
             PMSI: Flags 0x0: Label 0: RSVP-TE:
Session_13[10.255.50.77:0:25624:10.255.50.77]
    Next hop type: Indirect
    Address: 0xbb2c944
    Next-hop reference count: 360
    Protocol next hop: 10.255.50.77
    Indirect next hop: 0x0 - INH Session ID: 0x0
    State: <Active Int Ext>
    Age: 53:03      Metric2: 1
    Validation State: unverified
    Task: mvpn global task
    Announcement bits (3): 0-PIM.vrf1 1-mvpn global task 2-rt-export
    AS path: I

```

show route table inetflow detail

```
user@host> show route table inetflow detail
```

```
inetflow.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.12.44.1,*/48 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
              Next-hop reference count: 2
              State: <Active Ext>
              Local AS: 64502 Peer AS: 64500
              Age: 4
              Task: BGP_64500.10.12.99.5+3792
              Announcement bits (1): 0-Flow
              AS path: 64500 I
              Communities: traffic-rate:0:0
              Validation state: Accept, Originator: 10.12.99.5
              Via: 10.12.44.0/24, Active
              Localpref: 100
              Router ID: 10.255.71.161

10.12.56.1,*/48 (1 entry, 1 announced)
    *Flow      Preference: 5
              Next-hop reference count: 2
              State: <Active>
              Local AS: 64502
              Age: 6:30
              Task: RT Flow
              Announcement bits (2): 0-Flow 1-BGP.0.0.0.0+179
              AS path: I
              Communities: 1:1
```

```
user@host> show route table green.l2vpn.0 (VPLS Multihoming with FEC 129)
```

```
green.l2vpn.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.1.1.2:100:10.1.1.2/96 AD
    *[VPLS/170] 1d 03:11:03, metric2 1
    Indirect
10.1.1.4:100:10.1.1.4/96 AD
    *[BGP/170] 1d 03:11:02, localpref 100, from 10.1.1.4
    AS path: I, validation-state: unverified
    > via ge-1/2/1.5
10.1.1.2:100:1:0/96 MH
```

```

          *[VPLS/170] 1d 03:11:03, metric2 1
          Indirect
10.1.1.4:100:1:0/96 MH
          *[BGP/170] 1d 03:11:02, localpref 100, from 10.1.1.4
          AS path: I, validation-state: unverified
          > via ge-1/2/1.5
10.1.1.4:NoCtrlWord:5:100:100:10.1.1.2:10.1.1.4/176
          *[VPLS/7] 1d 03:11:02, metric2 1
          > via ge-1/2/1.5
10.1.1.4:NoCtrlWord:5:100:100:10.1.1.4:10.1.1.2/176
          *[LDP/9] 1d 03:11:02
          Discard

```

user@host> **show route table red extensive**

```

red.inet.0: 364481 destinations, 714087 routes (364480 active, 48448 holddown, 1
hidden)
10.0.0.0/32 (3 entries, 1 announced)
    State: <OnList CalcForwarding>
TSI:
KRT in-kernel 10.0.0.0/32 -> {composite(1048575)} Page 0 idx 1 Type 1 val 0x934342c

    Nexthop: Self
    AS path: [2] I
    Communities: target:2:1
Path 10.0.0.0 from 10.3.0.0 Vector len 4. Val: 1
    @BGP      Preference: 170/-1
              Route Distinguisher: 2:1
              Next hop type: Indirect
              Address: 0x258059e4
              Next-hop reference count: 2
              Source: 2.2.0.0
              Next hop type: Router
              Next hop: 10.1.1.1 via ge-1/1/9.0, selected
              Label operation: Push 707633
              Label TTL action: prop-ttl
              Session Id: 0x17d8
              Protocol next hop: 10.2.0.0
              Push 16
              Composite next hop: 0x25805988 - INH Session ID: 0x193c
              Indirect next hop: 0x23eea900 - INH Session ID: 0x193c
              State: <Secondary Active Int Ext ProtectionPath ProtectionCand>
              Local AS:      2 Peer AS:      2

```

```

Age: 23          Metric2: 35
Validation State: unverified
Task: BGP_172.16.2.0.0+34549
AS path: I
Communities: target:2:1
Import Accepted
VPN Label: 16
Localpref: 0
Router ID: 10.2.0.0
Primary Routing Table bgp.l3vpn.0
Composite next hops: 1
    Protocol next hop: 10.2.0.0 Metric: 35
    Push 16
    Composite next hop: 0x25805988 - INH Session ID: 0x193c
    Indirect next hop: 0x23eea900 - INH Session ID: 0x193c
    Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.1.1.1 via ge-1/1/9.0
        Session Id: 0x17d8
    2.2.0.0/32 Originating RIB: inet.3
        Metric: 35                      Node path count: 1
        Forwarding nexthops: 1
            Nexthop: 10.1.1.1 via ge-1/1/9.0
BGP Preference: 170/-1
Route Distinguisher: 2:1
Next hop type: Indirect
Address: 0x9347028
Next-hop reference count: 3
Source: 10.3.0.0
Next hop type: Router, Next hop index: 702
Next hop: 10.1.4.2 via ge-1/0/0.0, selected
Label operation: Push 634278
Label TTL action: prop-ttl
Session Id: 0x17d9
Protocol next hop: 10.3.0.0
Push 16
Composite next hop: 0x93463a0 1048575 INH Session ID: 0x17da
Indirect next hop: 0x91e8800 1048574 INH Session ID: 0x17da
State: <Secondary NotBest Int Ext ProtectionPath ProtectionCand>
Inactive reason: Not Best in its group - IGP metric
Local AS:      2 Peer AS:      2
Age: 3:34      Metric2: 70
Validation State: unverified
Task: BGP_172.16.3.0.0+32805

```

```

Announcement bits (2): 0-KRT 1-BGP_RT_Background
AS path: I
Communities: target:2:1
Import Accepted
VPN Label: 16
Localpref: 0
Router ID: 10.3.0.0
Primary Routing Table bgp.l3vpn.0
Composite next hops: 1
    Protocol next hop: 10.3.0.0 Metric: 70
    Push 16
    Composite next hop: 0x93463a0 1048575 INH Session ID:
0x17da
    Indirect next hop: 0x91e8800 1048574 INH Session ID: 0x17da

    Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.1.4.2 via ge-1/0/0.0
        Session Id: 0x17d9
    10.3.0.0/32 Originating RIB: inet.3
        Metric: 70                      Node path count: 1
        Forwarding nexthops: 1
        Nexthop: 10.1.4.2 via ge-1/0/0.0
#Multipath Preference: 255
    Next hop type: Indirect
    Address: 0x24afca30
    Next-hop reference count: 1
    Next hop type: Router
    Next hop: 10.1.1.1 via ge-1/1/9.0, selected
    Label operation: Push 707633
    Label TTL action: prop-ttl
    Session Id: 0x17d8
    Next hop type: Router, Next hop index: 702
    Next hop: 10.1.4.2 via ge-1/0/0.0
    Label operation: Push 634278
    Label TTL action: prop-ttl
    Session Id: 0x17d9
    Protocol next hop: 10.2.0.0
    Push 16
    Composite next hop: 0x25805988 - INH Session ID: 0x193c
    Indirect next hop: 0x23eea900 - INH Session ID: 0x193c Weight 0x1

    Protocol next hop: 10.3.0.0
    Push 16

```

```

Composite next hop: 0x93463a0 1048575 INH Session ID: 0x17da
Indirect next hop: 0x91e8800 1048574 INH Session ID: 0x17da Weight
0x4000

State: <ForwardingOnly Int Ext>
Inactive reason: Forwarding use only
Age: 23          Metric2: 35
Validation State: unverified
Task: RT
AS path: I
Communities: target:2:1

```

show route table bgp.evpn.0 extensive | no-more (EVPN)

user@host> show route table bgp.evpn.0 extensive | no-more

```

bgp.evpn.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
2:1000:10::100::00:aa:aa:aa:aa:aa/304 (1 entry, 0 announced)
  *BGP      Preference: 170/-101
            Route Distinguisher: 1000:10
            Next hop type: Indirect
            Address: 0x9420fd0
            Next-hop reference count: 12
            Source: 10.2.3.4
            Protocol next hop: 10.2.3.4
            Indirect next hop: 0x2 no-forward INH Session ID: 0x0
            State: Local AS: 17 Peer AS:17 Age:21:12 Metric2:1 Validation State:
unverified
            Task: BGP_17.1.2.3.4+50756
            AS path: I
            Communities: target:1111:8388708 encapsulation0:0:0:0:3
            Import Accepted
            Route Label: 100
            ESI: 00:00:00:00:00:00:00:00:00:00
            Localpref: 100
            Router ID: 10.2.3.4
            Secondary Tables: default-switch.evpn.0
            Indirect next hops: 1
              Protocol next hop: 10.2.3.4 Metric: 1
              Indirect next hop: 0x2 no-forward INH Session ID: 0x0
              Indirect path forwarding next hops: 1
                Next hop type: Router
                Next hop: 10.10.10.1 via xe-0/0/1.0
                Session Id: 0x2
                1.2.3.4/32 Originating RIB: inet.0

```



```

Metric: 1                               Node path count: 1
Forwarding nexthops: 2
Nexthop: 10.92.78.102 via em0.0

2:1000:10::200::00:bb:bb:bb:bb:bb/304 (1 entry, 0 announced)
  *BGP   Preference: 170/-101
        Route Distinguisher: 1000:10
        Next hop type: Indirect
        Address: 0x9420fd0
        Next-hop reference count: 12
        Source: 10.2.3.4
        Protocol next hop: 10.2.3.4
        Indirect next hop: 0x2 no-forward INH Session ID: 0x0
    State: Local AS:17 Peer AS:17 Age:19:43 Metric2:1 Validation
State:unverified
    Task: BGP_17.1.2.3.4+50756
    AS path: I
    Communities: target:2222:22 encapsulation0:0:0:0:3
    Import Accepted
    Route Label: 200
    ESI: 00:00:00:00:00:00:00:00:00:00:00
    Localpref: 100
    Router ID: 10.2.3.4
    Secondary Tables: default-switch.evpn.0
    Indirect next hops: 1
      Protocol next hop: 10.2.3.4 Metric: 1
      Indirect next hop: 0x2 no-forward INH Session ID: 0x0
      Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.10.10.1 via xe-0/0/1.0
        Session Id: 0x2
      10.2.3.4/32 Originating RIB: inet.0
        Metric: 1                               Node path count: 1
        Forwarding nexthops: 2
        Nexthop: 10.92.78.102 via em0.0

2:1000:10::300::00:cc:cc:cc:cc:cc/304 (1 entry, 0 announced)
  *BGP   Preference: 170/-101
        Route Distinguisher: 1000:10
        Next hop type: Indirect
        Address: 0x9420fd0
        Next-hop reference count: 12
        Source: 10.2.3.4

```

```

        Protocol next hop: 10.2.3.4
        Indirect next hop: 0x2 no-forward INH Session ID: 0x0
    State: Local AS:17 Peer AS:17 Age:17:21 Metric2:1 Validation State:
unverified Task: BGP 17,1,2,3,4+50756
    AS path: I
        Communities: target:3333:33 encapsulation0:0:0:0:3
        Import Accepted
        Route Label: 300
        ESI: 00:00:00:00:00:00:00:00:00:00
        Localpref: 100
        Router ID: 10.2.3.4
        Secondary Tables: default-switch.evpn.0
        Indirect next hops: 1
            Protocol next hop: 10.2.3.4 Metric: 1
            Indirect next hop: 0x2 no-forward INH Session ID: 0x0
            Indirect path forwarding next hops: 1
                Next hop type: Router
                Next hop: 10.10.10.1 via xe-0/0/1.0
                Session Id: 0x2
            10.2.3.4/32 Originating RIB: inet.0
                Metric: 1 Node path count: 1
                Forwarding nexthops: 2
                Nexthop: 10.92.78.102 via em0.0

3:1000:10::100::1.2.3.4/304 (1 entry, 0 announced)
    *BGP Preference: 170/-101
        Route Distinguisher: 1000:10
        PMSI: Flags 0x0: Label 100: Type INGRESS-REPLICATION 1.2.3.4
        Next hop type: Indirect
        Address: 0x9420fd0
        Next-hop reference count: 12
        Source: 10.2.3.4
        Protocol next hop: 10.2.3.4
        Indirect next hop: 0x2 no-forward INH Session ID: 0x0
    State: Local AS:17 Peer AS:17 Age:37:01 Metric2:1 Validation State:
unverified Task: BGP 17.1.2.3.4+50756
    AS path: I
        Communities: target:1111:8388708 encapsulation0:0:0:0:3
        Import Accepted
        Localpref: 100
        Router ID: 10.2.3.4
        Secondary Tables: default-switch.evpn.0
        Indirect next hops: 1
            Protocol next hop: 10.2.3.4 Metric: 1

```

```

        Indirect next hop: 0x2 no-forward INH Session ID: 0x0
        Indirect path forwarding next hops: 1
            Next hop type: Router
            Next hop: 10.10.10.1 via xe-0/0/1.0
            Session Id: 0x2
        10.2.3.4/32 Originating RIB: inet.0
            Metric: 1                      Node path count: 1
            Forwarding nexthops: 2
                Nexthop: 10.92.78.102 via em0.0

3:1000:10::200::1.2.3.4/304 (1 entry, 0 announced)
    *BGP      Preference: 170/-101
              Route Distinguisher: 1000:10
              PMSI: Flags 0x0: Label 200: Type INGRESS-REPLICATION 1.2.3.4
              Next hop type: Indirect
              Address: 0x9420fd0
              Next-hop reference count: 12
              Source: 10.2.3.4
              Protocol next hop: 10.2.3.4
              Indirect next hop: 0x2 no-forward INH Session ID: 0x0
              State: Local AS: 17 Peer AS: 17 Age:35:22 Metric2:1 Validation
State:unverified Task: BGP 17.1.2.3.4+50756
              AS path:I Communities: target:2222:22 encapsulation):0:0:0:0:3

Import Accepted
    Localpref: 100
    Router ID: 10.2.3.4
    Secondary Tables: default-switch.evpn.0
    Indirect next hops: 1
        Protocol next hop: 10.2.3.4 Metric: 1
        Indirect next hop: 0x2 no-forward INH Session ID: 0x0
        Indirect path forwarding next hops: 1
            Next hop type: Router
            Next hop: 10.10.10.1 via xe-0/0/1.0
            Session Id: 0x2
        10.2.3.4/32 Originating RIB: inet.0
            Metric: 1                      Node path count: 1
            Forwarding nexthops: 2
                Nexthop: 10.92.78.102 via em0.0

3:1000:10::300::1.2.3.4/304 (1 entry, 0 announced)
    *BGP      Preference: 170/-101
              Route Distinguisher: 1000:10
              PMSI: Flags 0x0: Label 300: Type INGRESS-REPLICATION 1.2.3.4

```

```

        Next hop type: Indirect
        Address: 0x9420fd0
        Next-hop reference count: 12
        Source: 10.2.3.4
        Protocol next hop: 10.2.3.4
        Indirect next hop: 0x2 no-forward INH Session ID: 0x0
    State: Local AS: 17 Peer AS: 17 Age 35:22 Metric2:1 Validation State:
unverified Task: BGP 17.1.2.3.4+5075
        6 AS path: I Communities: target:3333:33 encapsulation0:0:0:0:3
Import Accepted Localpref:100
        Router ID: 10.2.3.4
        Secondary Tables: default-switch.evpn.0
        Indirect next hops: 1
            Protocol next hop: 10.2.3.4 Metric: 1
            Indirect next hop: 0x2 no-forward INH Session ID: 0x0
            Indirect path forwarding next hops: 1
                Next hop type: Router
                Next hop: 10.10.10.1 via xe-0/0/1.0
                Session Id: 0x2
            10.2.3.4/32 Originating RIB: inet.0
                Metric: 1 Node path count: 1
                Forwarding nexthops: 2
                    Nexthop: 10.92.78.102 via em0.0

```

show route table default-switch.evpn.0 extensive

The following shows the partial output listing for the EVPN VNI table.

user@host> show route table default-switch.evpn.0 extensive

```

3:1000:10::100::00:aa:aa:aa:aa:aa/304 (1 entry, 1 announced)
    *BGP Preference: 170/-101
        Route Distinguisher: 10.255.0.1:00
        PMSI: Flags 0x0: Label 100: Type INGRESS-REPLICATION 1.2.3.4
        Next hop type: Indirect, Next hop index: 0
        Address: 0xcebfad0
        Next-hop reference count: 26
        Source: 10.255.0.1
        Protocol next hop: 10.255.0.1
        Indirect next hop: 0x2 no-forward INH Session ID: 0x0
        State: <Secondary Active Int Ext>
    Local AS: 100 Peer AS: 100
        Age: 1:35:30 Metric2: 2
        Validation State: unverified

```

```

Task: BGP_100.10.255.0.1
Announcement bits (1): 0-default-switch-evpn
AS path: I
Communities: target:100:100 encapsulation:vxlan (0x8)
evpn-mcast-flags:0x1:snooping-enabled
. . .

```

show route table evpn1.evpn-mcsn

The following shows the output listing for the multicast information used by the rpd and mcsnoopd.

user@host> **show route table default-switch.evpn-mcsn.1**

```

default-switch.evpn-mcsn.1: 9 destinations, 9 routes (9 active, 0 holddown, 0
hidden)
+ = Active Route, - = Last Active, * = Both

0.14,0.0,0.0/48      *[Multicast/180] 00:01:02
                    to 1.1.1.1 via vtep.32770
                    to 1.2.2.2 via vtep.32771
                    to 1.6.6.6 via vtep.32769
                    to 1.3.3.3 via vtep.32772
0.14,0.0,0.0,224.0.0.0/52*[Multicast/180] 00:01:02
                    to 1.1.1.1 via vtep.32770
                    to 1.2.2.2 via vtep.32771
                    to 1.6.6.6 via vtep.32769
0.14,0.0,0.0,225.1.1.1/80*[Multicast/180] 00:00:06
                    to 1.1.1.1 via vtep.32770
                    to 1.2.2.2 via vtep.32771
                    to 1.6.6.6 via vtep.32769
                    to 1.3.3.3 via vtep.32772

```

show route table evpn1 (Multihomed Proxy MAC and IP Address)

The following shows a partial output listing for an EVPN instance. This indicates when Multihomed Proxy MAC and IP Address Route Advertisement is enabled.

user@host> **show route table evpn-1**

```

2:666:11010003::1002::00:00:00:00:00:02::102.1.1.2/304 MAC/IP (1 entry, 1 announced)
TSI:
Page 0 idx 0, (group vteps type Internal) Type 1 val 0xb20eb10 (adv_entry)
  Advertised metrics:

```

```
Nexthop: 103.1.1.1
Localpref: 100
AS path: [666] I
Communities: target:666:1002 evpn-l2-info:0x20:proxy (mtu 0)
Path 2:666:11010003::1002::00:00:00:00:00:02::102.1.1.2 Vector len 4. Val: 0
  *EVPN   Preference: 170
          Next hop type: Indirect, Next hop index: 0
          Address: 0xc3a9cf0
          Next-hop reference count: 36
          Protocol next hop: 103.1.1.1
          Indirect next hop: 0x0 - INH Session ID: 0x0
          State: <Active Int Ext>
```

show ted database

List of Syntax

[Syntax on page 2447](#)

[Syntax \(EX Series Switches\) on page 2447](#)

Syntax

```
show ted database
<brief | detail | extensive>
<instance instance-name>
<logical-system (all | logical-system-name)>
<system-name>
<topology-id topology bgp-ls-epe>
```

Syntax (EX Series Switches)

```
show ted database
<brief | detail | extensive>
<system-name>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance *instance-name* option added in Junos OS Release 15.1.

topology-id *topology* option added in Junos OS Release 17.4R1 for MX Series and PTX Series.

Description

Display the entries in the Multiprotocol Label Switching (MPLS) traffic engineering database.

Options

none—Display standard information about all entries in the traffic engineering database.

brief | detail | extensive—(Optional) Display the specified level of output.

instance *instance-name*—(Optional) Display routing instance information for the specified instance. If *instance-name* is omitted, information is displayed for the master instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

system-name—(Optional) Display traffic engineering database information for a particular system.

topology-id *topology*— Display the topology information. By default, traffic engineering topology information is displayed.

Required Privilege Level

view

List of Sample Output

[show ted database brief on page 2451](#)

[show ted database detail on page 2452](#)

[show ted database extensive on page 2453](#)

[show ted database topology-id igp on page 2456](#)

[show ted database topology-id bgp-ls-epe extensive on page 2457](#)

Output Fields

[Table 72 on page 2448](#) describes the output fields for the **show ted database** command. Output fields are listed in the approximate order in which they appear.

Table 72: show ted database Output Fields

Field Name	Field Description	Level of Output
TED database	Number of nodes and pseudonodes participating in IS-IS and OSPF domain routing.	All levels
ID	Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode. If the node contains a router ID, it is displayed in parentheses.	brief
NodeID	Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.	extensive
Type	Type of node. It can be either Rtr (router) or Net (pseudonode).	All levels
Age(s)	How long since the node was last refreshed, in seconds.	All levels
LnkIn	Number of nodes pointing toward this node.	All levels
LnkOut	Number of nodes to which this node points.	All levels
Protocol	Protocol that reported the node information: <ul style="list-style-type: none"> • IS-IS(1)—IS-IS Level 1. • IS-IS(2)—IS-IS Level 2. • OSPF (area-number)—OSPF from the specified area. 	All levels
To	Address on the far end of a link.	detail extensive

Table 72: show ted database Output Fields (*continued*)

Field Name	Field Description	Level of Output
Local	Address of the local interface being used to reach the remote node.	detail extensive
Remote	Address of the interface on the remote node.	detail extensive
Local interface index	The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.	detail extensive
Remote interface index	The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.	detail extensive
Metric	Configured traffic engineering metric.	extensive
IGP metric	Configured interior gateway protocol metric.	extensive
Static BW	Total interface bandwidth in bps.	extensive
Reservable bandwidth	Subscription factor for the interface, which is the percentage of the link bandwidth that can be used for the RSVP reservation process. You configure this by including the subscription statement when configuring RSVP.	extensive
Available BW [priority]	(Must include diffserv-te statement when configuring LSPs) Amount of bandwidth actually reserved by RSVP for each priority level. The bandwidth shown is for the entire interface, not for each individual LSP.	extensive
Diffserv-TE BW Model	Bandwidth constraint model used by the LSPs.	extensive
Available BW [TE-class]	(Must include the diffserv-te statement when configuring LSPs) Amount of bandwidth actually reserved by RSVP for each traffic engineering class.	extensive
Static BW [CT-class]	Total interface bandwidth used by an MPLS traffic class, in bps.	extensive

Table 72: show ted database Output Fields (*continued*)

Field Name	Field Description	Level of Output
Interface Switching Capability Descriptor (n)	<p>Information about the interface switching capability descriptor, which is a subtype length value (TLV) of the link TLV. <i>n</i> is the index number.</p> <ul style="list-style-type: none"> • Switching type—Type of switching to be performed on a particular link: <ul style="list-style-type: none"> • PSC-1—Packet switch-capable 1 • PSC-2—Packet switch-capable 2 • PSC-3—Packet switch-capable 3 • PSC-4—Packet switch-capable 4 • L2SC—Layer-2-switch-capable • TDM—Time-division-multiplexing-capable • LSC—Lambda switch-capable • FSC—Fiber switch-capable • Encoding type—Encoding of the LSP being requested: <ul style="list-style-type: none"> • Packet • Ethernet • ANSI/ETSI PDH • Reserved • SDH /SONET • Digital Wrapper • Lambda (photonic) • Fiber • FiberSDH/SONET • Maximum LSP BW [priority] bps—Maximum LSP bandwidth information. Amount of bandwidth actually reserved for each priority level. The bandwidth shown is for the entire interface. <ul style="list-style-type: none"> • [n]—Priority level. The range is from 0 (high) through 7 (low). • n Mbps—Amount of the maximum bandwidth. • Minimum LSP BW—Minimum LSP bandwidth in Mbps. Amount of bandwidth actually reserved for each priority level. The bandwidth shown is for the entire interface. Minimum LSP BW is displayed only when switching type is PSC-1 or TDM. • Interface MTU—Displayed only when switching type is TDM. • Interface supports standard SONET/SDH—Displayed only when switching type is TDM. 	extensive

Sample Output

show ted database brief

user@host> show ted database brief

```
TED database: 12 ISIS nodes 0 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-A.00                      ---   3178     2     0
Router-B.00                      ---   3152     2     0
Router-B.02                      Net    802     0     2 IS-IS(2)
    To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-C.00                      ---   3126     2     0
Router-C.02                      Net    38     0     2 IS-IS(2)
    To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-D.00                      ---   3144     2     0
Router-D.02                      Net   723     0     2 IS-IS(2)
    To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-D.03                      Net   607     0     2 IS-IS(2)
    To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-E.00                      ---   3178     2     0
Router-E.02                      Net   131     0     2 IS-IS(2)
    To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-F.00                      ---   3153     2     0
Router-F.02                      Net   769     0     2 IS-IS(2)
```

```

To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0

```

show ted database detail

```

TED database: 12 ISIS nodes 0 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-A.00                      ---   2913     2     0
Router-B.00                      ---   2887     2     0
Router-B.02                      Net    537     0     2 IS-IS(2)
  To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-C.00                      ---   2861     2     0
Router-C.02                      Net    597     0     2 IS-IS(2)
  To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-D.00                      ---   2879     2     0
Router-D.02                      Net    458     0     2 IS-IS(2)
  To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-D.03                      Net    342     0     2 IS-IS(2)
  To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-E.00                      ---   2913     2     0
Router-E.02                      Net    640     0     2 IS-IS(2)
  To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0

```

```

ID                               Type Age(s) LnkIn LnkOut Protocol
Router-F.00                     ---   2888    2      0
Router-F.02                     Net    504    0      2 IS-IS(2)
    To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
    To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0

```

show ted database extensive

user@host> show ted database extensive

```

TED database: 12 ISIS nodes 0 INET nodes
NodeID: Router-A.00
    Type: ---, Age: 3067 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-B.00
    Type: ---, Age: 3041 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-B.02
    Type: Net, Age: 691 secs, LinkIn: 0, LinkOut: 2
    Protocol: IS-IS(2)
        To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
            Local interface index: 0, Remote interface index: 0
            Metric: 0
            IGP metric: 10
            Interface Switching Capability Descriptor(1):
                Switching type: Packet
                Encoding type: Packet
                Maximum LSP BW [priority] bps:
                    [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
                    [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
            To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
                Local interface index: 0, Remote interface index: 0
                Metric: 0
                IGP metric: 20
                Interface Switching Capability Descriptor(1):
                    Switching type: Packet
                    Encoding type: Packet
                    Maximum LSP BW [priority] bps:
                        [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
                        [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
NodeID: Router-C.00
    Type: ---, Age: 3015 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-C.02
    Type: Net, Age: 751 secs, LinkIn: 0, LinkOut: 2

```

```

Protocol: IS-IS(2)
  To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    Metric: 0
    IGP metric: 10
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
        [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
  To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    Metric: 0
    IGP metric: 10      Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
        [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
NodeID: Router-D.00
  Type: ---, Age: 3034 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-D.02
  Type: Net, Age: 613 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
  To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    Metric: 0
    IGP metric: 10
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
        [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
  To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    Metric: 0
    IGP metric: 10
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps

```

```

                [4] 0bps          [5] 0bps          [6] 0bps          [7] 0bps
NodeID: Router-D.03
Type: Net, Age: 497 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
  To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    Metric: 0
    IGP metric: 10
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 0bps          [1] 0bps          [2] 0bps          [3] 0bps
        [4] 0bps          [5] 0bps          [6] 0bps          [7] 0bps
  To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    Metric: 0
    IGP metric: 10
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 0bps          [1] 0bps          [2] 0bps          [3] 0bps
        [4] 0bps          [5] 0bps          [6] 0bps          [7] 0bps
NodeID: Router-E.00
Type: ---, Age: 3068 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-E.02
Type: Net, Age: 21 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
  To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    Metric: 0
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 0bps          [1] 0bps          [2] 0bps          [3] 0bps
        [4] 0bps          [5] 0bps          [6] 0bps          [7] 0bps
  To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    Metric: 0
    IGP metric: 10
    Interface Switching Capability Descriptor(1):
      Switching type: Packet

```

```

        Encoding type: Packet
        Maximum LSP BW [priority] bps:
            [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
            [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
NodeID: Router-F.00
    Type: ---, Age: 3043 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-F.02
    Type: Net, Age: 659 secs, LinkIn: 0, LinkOut: 2
    Protocol: IS-IS(2)
        To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
        Metric: 0
        IGP metric: 10
        Interface Switching Capability Descriptor(1):
            Switching type: Packet
            Encoding type: Packet
            Maximum LSP BW [priority] bps:
                [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
                [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
        To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
        Local interface index: 0, Remote interface index: 0
        Metric: 0
        IGP metric: 10      Interface Switching Capability Descriptor(1):
            Switching type: Packet
            Encoding type: Packet
            Maximum LSP BW [priority] bps:
                [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
                [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps

```

show ted database topology-id igp

user@host> show ted database topology-id igp

```

TED database: 3 ISIS nodes 3 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
Router A.00(128.220.1.2)         Rtr   193     2      2 IS-IS(2)
    To: Router B.00(128.220.18.198), Local: 2.3.0.2, Remote: 2.3.0.1
        Local interface index: 334, Remote interface index: 336
    To: Router B.00(128.220.18.198), Local: 2.3.1.2, Remote: 2.3.1.1
        Local interface index: 333, Remote interface index: 335
ID                               Type Age(s) LnkIn LnkOut Protocol
Router C.00(128.220.1.52)         Rtr   193     2      2 IS-IS(2)
    To: Router B.00(128.220.18.198), Local: 1.2.0.1, Remote: 1.2.0.2
        Local interface index: 335, Remote interface index: 334

```



```

To: Router B.00(128.220.18.198), Local: 1.2.1.1, Remote: 1.2.1.2
  Local interface index: 334, Remote interface index: 333
ID                                     Type Age(s) LnkIn LnkOut Protocol
Router B.00(128.220.18.198)    Rtr   193     4     4 IS-IS(2)
  To: Router A.00(128.220.1.2), Local: 2.3.0.1, Remote: 2.3.0.2
    Local interface index: 336, Remote interface index: 334
  To: Router A.00(128.220.1.2), Local: 2.3.1.1, Remote: 2.3.1.2
    Local interface index: 335, Remote interface index: 333
  To: Router C.00(128.220.1.52), Local: 1.2.0.2, Remote: 1.2.0.1
    Local interface index: 334, Remote interface index: 335
  To: Router C.00(128.220.1.52), Local: 1.2.1.2, Remote: 1.2.1.1
    Local interface index: 333, Remote interface index: 334

```

show ted database topology-id bgp-ls-epe extensive

user@host> show ted database topology-id bgp-ls-epe extensive

```

TED database: 0 ISIS nodes 3 INET nodes
NodeID: 4.4.4.4                                     << DUT router-id
  Type: Rtr, Age: 270 secs, LinkIn: 0, LinkOut: 3
  Protocol: BGP-LS-EPE(0)                             << Protocol
    To: 5.5.5.5, Local: 50.1.1.1, Remote: 50.1.1.2 << Peer router-id and local and
remote interface used for BGP session.
      Local interface index: 0, Remote interface index: 0
      Interface Switching Capability Descriptor(1):
        Switching type: Packet
        Encoding type: Packet
        Maximum LSP BW [priority] bps:
          [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
          [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
      BGP-Peer-SID:                                     << BGP-Peer-SID Information
        SID: 1000007, Type: Node-SID Flags: 0x30, Weight: 0 << BGP-Node-SID
        SID: 1000002, Type: Set-SID Flags: 0x30, Weight: 0 << BGP-Set-SID
    To: 7.7.7.7, Local: 4.4.4.4, Remote: 7.7.7.7
      Local interface index: 0, Remote interface index: 0
      Interface Switching Capability Descriptor(1):
        Switching type: Packet
        Encoding type: Packet
        Maximum LSP BW [priority] bps:
          [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
          [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
      BGP-Peer-SID:
        SID: 1000006, Type: Node-SID Flags: 0x30, Weight: 0 << BGP-Node-SID
    To: 7.7.7.7, Local: 4.4.4.4, Remote: 7.7.7.7

```

```
Local interface index: 339, Remote interface index: 0
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
    [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
  BGP-Peer-SID:
    SID: 1000005, Type: Adj-SID Flags: 0x30, Weight: 0 << BGP-Adj-SID
NodeID: 5.5.5.5
  Type: Rtr, Age: 270 secs, LinkIn: 1, LinkOut: 0
  Protocol: BGP-LS-EPE(0)
NodeID: 7.7.7.7
  Type: Rtr, Age: 270 secs, LinkIn: 2, LinkOut: 0
  Protocol: BGP-LS-EPE(0)
```

show ted link

List of Syntax

[Syntax on page 2459](#)

[Syntax \(EX Series Switches\) on page 2459](#)

Syntax

```
show ted link
<brief | detail>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show ted link
<brief | detail>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance *instance-name* option added in Junos OS Release 15.1.

Description

Display Multiprotocol Label Switching (MPLS) traffic engineering database link information.

Options

none—Display standard information about traffic engineering database link information.

brief | detail—(Optional) Display the specified level of output.

instance *instance-name*—(Optional) Display routing instance information for the specified instance. If *instance-name* is omitted, information is displayed for the master instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show ted link brief on page 2461](#)

[show ted link detail on page 2461](#)

[show ted link topology-id bgp-ls-epe detail on page 2462](#)

Output Fields

Table 73 on page 2460 describes the output fields for the **show ted link** command. Output fields are listed in the approximate order in which they appear.

Table 73: show ted link Output Fields

Field Name	Field Description	Level of Output
ID	Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.	brief
-->ID	Hostname and address of the node that the link is going to. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.	brief
<i>hostname</i>	Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.	detail
<i>hostname</i>	Hostname and address of the node that the link is going to. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.	detail
Local Path	Number of paths CSPF on the local routing device has placed on the link.	All levels
Metric	Configured traffic engineering metric.	extensive
IGP metric	Configured interior gateway protocol metric.	detail
Local BW	Amount of bandwidth the local routing device has placed on the link.	All levels
Local	Address of the local interface being used to reach the remote node.	detail extensive
Remote	Address of the interface on the remote node.	detail extensive
Local interface index	The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.	detail
Remote interface index	The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.	detail

Sample Output

show ted link brief

```
user@host> show ted link brief
```

ID	->ID	LocalPath	LocalBW
Router-B.02	Router-A.00		0 0bps
Router-B.02	Router-B.00		0 0bps
Router-C.02	Router-B.00		0 0bps
Router-C.02	Router-C.00		0 0bps
Router-D.02	Router-F.00		0 0bps
Router-D.02	Router-D.00		0 0bps
Router-D.03	Router-D.00		0 0bps
Router-D.03	Router-C.00		0 0bps
Router-E.02	Router-A.00		0 0bps
Router-E.02	Router-E.00		0 0bps
Router-F.02	Router-E.00		0 0bps
Router-F.02	Router-F.00		0 0bps

show ted link detail

```
user@host> show ted link detail
```

```
Router-B.02->Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-B.02->Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 20 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-C.02->Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 40 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-C.02->Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
```

```

Router-D.02->Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-D.02->Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 60 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-D.03->Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-D.03->Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-E.02->Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 60 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-E.02->Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 20 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-F.02->Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
Router-F.02->Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 40 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps

```

show ted link topology-id bgp-ls-epe detail

```
user@host> show ted link topology-id bgp-ls-epe detail
```

```

4.4.4.4->5.5.5.5, Local: 50.1.1.1, Remote: 50.1.1.2
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
  SID: 1000007 Type: Node-SID Flags: 0x30 Weight: 0
  SID: 1000002 Type: Set-SID Flags: 0x30 Weight: 0
4.4.4.4->7.7.7.7, Local: 4.4.4.4, Remote: 7.7.7.7
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
  SID: 1000006 Type: Node-SID Flags: 0x30 Weight: 0
4.4.4.4->7.7.7.7, Local: 4.4.4.4, Remote: 7.7.7.7
  Local interface index: 339, Remote interface index: 0
  LocalPath: 0, AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
  SID: 1000005 Type: Adj-SID Flags: 0x30 Weight: 0

```

show ted protocol

List of Syntax

[Syntax on page 2464](#)

[Syntax \(EX Series Switches\) on page 2464](#)

Syntax

```
show ted protocol
<brief | detail>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show ted protocol
<brief | detail>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance *instance-name* option added in Junos OS Release 15.1.

Description

Display information about the protocols from which the Multiprotocol Label Switching (MPLS) traffic engineering database learned about its nodes.

Options

none—Display standard information about the protocols from which the traffic engineering database learned about its nodes.

brief | detail—(Optional) Display the specified level of output.

instance *instance-name*—(Optional) Display routing instance information for the specified instance. If *instance-name* is omitted, information is displayed for the master instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show ted protocol on page 2465](#)

Output Fields

Table 74 on page 2465 describes the output fields for the **show ted protocol** command. Output fields are listed in the approximate order in which they appear.

Table 74: show ted protocol Output Fields

Field Name	Field Description
Protocol name	Protocol that reported the node information: <ul style="list-style-type: none"> • IS-IS(1)—IS-IS Level 1. • IS-IS(2)—IS-IS Level 2. • OSPF (<i>area-number</i>)—OSPF from the specified area.
Credibility	If the protocols provide conflicting information about a node, the protocol with the highest credibility value is the one that the traffic engineering database uses.
Self node	Address the protocol uses as the local address.

Sample Output

show ted protocol

```
user@host> show ted protocol
```

Protocol name	Credibility	Self node
IS-IS(2)	2 (highest)	corriedale.00(123.456.1.11)
IS-IS(1)	1	corriedale.00(123.456.1.11)

```
user@host> show ted protocol topology-id bgp-ls-epe detail
```

Protocol name	Credibility	Self node
BGP-LS-EPE(0)	342	200.0.0.4

traceroute mpls bgp

Syntax

```
traceroute mpls bgp fec
<destination destination-address>
<detail>
<exp exp>
<fanout fanout-number>
<logical-system logical system-name>
<no-resolve>
<paths paths-number>
<pipe-mode>
<retries retries-number>
<routing-instance routing-instance-name>
<source source-address>
<ttl value>
<wait seconds>
```

Release Information

Command introduced in Junos OS Release 14.2.

Description

Trace route to a remote host for an MPLS label-switched path (LSP) signaled by the Border Gateway Protocol (BGP). Use **traceroute mpls bgp** as a debugging tool to locate MPLS BGP forwarding issues in a network. (Currently supported for IPv4 packets only.)

To use the **traceroute mpls bgp** command, make sure you have BGP routes with MPLS labels.

NOTE: The **traceroute mpls bgp fec** command only supports single paths.

Options

fec—Specify the IP address and optional prefix of the forwarding equivalence class (FEC). Suppose you are at PE1, use would want to use the IP address of PE2 to trace the BGP path to that router.

destination *destination-address*—(Optional) Specify the destination address to use when sending probes.

detail—(Optional) Display detailed output.

exp *exp*—(Optional) Specify the class of service to use when sending probes.

Range: 0 through 7

Default: 7

fanout *fanout-number*—(Optional) Specify the maximum number of next hops to search per node.

Range: 1 through 16

Default: 16

logical-system *logical-system-name*—(Optional) Specify the name of the logical system for the traceroute attempt.

no-resolve—(Optional) Specify not to resolve the hostname that corresponds to the IP address.

paths *paths-number*—(Optional) Specify the number of paths to search.

Range: 1 through 255

Default: 16

pipe-mode—(Optional) Specify to trace only the outermost FEC.

retries *retries-number*—(Optional) Specify the number of times to resend probe values.

Range: 1 through 9

Default: 3

routing-instance *routing-instance-name*—(Optional) Specify the name of the routing instance for the trace route attempt.

source *source-address*—(Optional) Specify the source address of the outgoing traceroute packets.

ttl *value*—(Optional) Specify the maximum time-to-live value to include in the traceroute request, in seconds.

Range: 1 through 125

Default: 64

wait *seconds*—(Optional) Specify the number of seconds to wait before resending a probe.

Range: 5 through 15

Default: 10

Required Privilege Level

network

RELATED DOCUMENTATION

| [ping mpls bgp](#) | [2243](#)

List of Sample Output

[traceroute mpls bgp on page 2468](#)

[traceroute mpls bgp detail on page 2469](#)

Output Fields

Table 75 on page 2468 describes the output fields for the **traceroute mpls bgp fec** command and the **traceroute mpls bgp fec detail** command. Output fields are listed in the approximate order in which they appear.

Table 75: traceroute mpls bgp Output Fields

Field Name	Field Description	Level of Output
Probe options	Probe options specified in the traceroute mpls bgp fec command.	All levels
ttl	Time to live value of the labeled packet.	None
Label	Outgoing label used for forwarding the packet along the label-switched paths.	None
Protocol	Signaling protocol used. For this command, it is BGP.	None
Address	Address of the next hop.	None
Previous Hop	Address of the previous hop. Previous hop address of the first hop is null .	None
Probe status	Forwarding status from the first hop to the last-hop label-switching router (egress point in the label-switched paths).	None
Hop	Address of the hops in the label-switched path from the first hop to the last hop. Depth indicates the level of the hop.	detail
Parent	Address of the previous hop. Parent value for the first hop is null .	detail
Return Code	Return code for reporting the result of processing the echo request by the receiver.	detail
Response time	Time for the echo request to reach the receiver.	detail
Multipath type	Labels or addresses used by the specified multipath type. If multipaths are not used, the value is none .	detail
Label Stack	Label stack used to forward the packet.	detail

Sample Output

traceroute mpls bgp

user@host> **traceroute mpls bgp fec**

```

    Probe options: retries 3, exp 7
ttl Label  Protocol Address  Previous Hop  Probe Status Fec-Stack-Sent Fec-Change
1   299824  LDP      81.1.2.2    (null)       Success      LDP, BGP       PUSH-RSVP
2   299825  RSVP     81.2.3.3    81.1.2.2    Success      RSVP, LDP, BGP (null)
3   299826  RSVP     81.3.4.4    81.2.3.3    Egress       RSVP, LDP, BGP POP-RSVP
3   299826  LDP      81.3.4.4    81.2.3.3    Success      LDP, BGP       (null)
4   299827  LDP      81.4.5.5    81.3.4.4    Egress       LDP, BGP       POP-LDP
4   299827  BGP      81.4.5.5    81.3.4.4    Egress       BGP            (null)

```

traceroute mpls bgp detail

user@host> **traceroute mpls bgp fec detail**

```

Probe options: retries 3, exp 7
Hop 2.2.1.81.rev.sfr.net (81.1.2.2) Depth 1
  Probe status: Success
  Parent: (null)
  Return code: Label switched at stack-depth 1
  Sender timestamp: 2013-03-22 05:55:19 PDT 822.99 msec
  Receiver timestamp: 2013-03-22 05:55:19 PDT 856.05 msec
  Response time: 33.06 msec
  MTU: Unknown
  Multipath type: IP bitmask
    Address Range 1: 127.0.0.64 ~ 127.0.0.127
  Label Stack:
    Label 1 Value 299824 Protocol LDP
    Label 2 Value 299276 Protocol BGP
  Fec-Stack-Sent: LDP, BGP
  Fec-Change:
    Operation: PUSH    Protocol RSVP

```

transit (Chained Composite Next Hops)

Syntax

```
transit {
  (all | no-all);
  (l2vpn | no-l2vpn);
  (l3vpn | no-l3vpn);
  (labeled-bgp | no-labeled-bgp);
  (ldp | no-ldp);
  (ldp-p2mp | no-ldp-p2mp);
  lsp-statistics-from-route;
  (rsvp | no-rsvp);
  (rsvp-p2mp | no-rsvp-p2mp);
  (static | no-static);
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-options forwarding-table chained-composite-next-hop],
[edit routing-options forwarding-table chained-composite-next-hop]
```

NOTE: The [edit logical-systems] hierarchy level is not supported on the QFX10000 switches.

Release Information

Statement introduced in Junos OS Release 12.1.

Statement introduced in Junos OS Release 15.1 for QFX10000 Series switches.

Description

Allows you to configure the chained composite next hops transit configuration options for devices handling transit traffic in the network. This statement and the associated functionality is available only on PTX Packet Transport Routers and QFX10000 switches.

Default

All of the **transit** statement options are enabled on PTX transport routers and QFX10000 switches. However, you can disable any of the statements with a **no** option.

Starting in Junos OS Release 14.1, the **transit l3vpn** statement is enabled by default on PTX Series Packet Transport Routers only.

Options

all | no-all—Enable or disable chained composite next-hops for all of the possible packet transit protocols and applications. The **all | no-all** statements do not apply to the **lsp-statistics-from-route** statement.

l2vpn | no-l2vpn—Enable or disable chained composite next-hops for Layer 2 VPNs.

l3vpn | no-l3vpn—Enable or disable chained composite next-hops for Layer 3 VPNs.

labeled-bgp | no-labeled-bgp—Enable or disable chained composite next-hops for labeled BGP.

ldp | no-ldp—Enable or disable chained composite next-hops for LDP.

ldp-p2mp | no-ldp-p2mp—Enable or disable chained composite next-hops for LDP-signaled P2MP LSPs.

NOTE: The **ldp-p2mp** and **rsvp-p2mp** statements are not supported on MX series routers.

On an MX series router with redundant Routing Engines and enhanced-ip mode configuration, enabling the **ldp-p2mp** and **rsvp-p2mp** statements under the **[edit routing-options forwarding-table chained-composite-next-hop transit]** hierarchy level causes ping from the current master logical system to fail at the time of a Routing Engine switchover.

lsp-statistics-from-route—Enable LSP statistics collection from the route.

rsvp | no-rsvp—Enable or disable chained composite next-hops for RSVP.

rsvp-p2mp | no-rsvp-p2mp—Enable or disable chained composite next-hops for RSVP-signaled P2MP LSPs.

NOTE: The **ldp-p2mp** and **rsvp-p2mp** statements are not supported on MX series routers.

On an MX series router with redundant Routing Engines and enhanced-ip mode configuration, enabling the **rsvp-p2mp** and **ldp-p2mp** statements under the **[edit routing-options forwarding-table chained-composite-next-hop transit]** hierarchy level causes ping from the current master logical system to fail at the time of a Routing Engine switchover.

static | no-static—Chained composite next hops are enabled for transit static LSPs by default. You can also disable this functionality for transit static LSPs.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs

[chained-composite-next-hop](#) | **1962**

RSVP Operational Commands

IN THIS CHAPTER

- `clear rsvp session` | 2474
- `clear rsvp statistics` | 2476
- `monitor label-switched-path` | 2478
- `ping mpls rsvp` | 2482
- `show rsvp interface` | 2489
- `show rsvp neighbor` | 2497
- `show rsvp route-session-id` | 2503
- `show rsvp pop-and-forward` | 2505
- `show rsvp session` | 2508
- `show rsvp session` | 2523
- `show rsvp statistics` | 2529
- `show rsvp version` | 2537
- `traceroute mpls rsvp` | 2541

clear rsvp session

List of Syntax

[Syntax on page 2474](#)

[Syntax \(EX and QFX Series Switches\) on page 2474](#)

Syntax

```
clear rsvp session
<all>
<connection-destination address>
<connection-source address>
<gracefully>
<logical-system (all | logical-system-name)>
<lsp-id identifier>
<name name>
<optimize-fast-reroute>
<tunnel-id identifier>
```

Syntax (EX and QFX Series Switches)

```
clear rsvp session
<connection-destination address>
<connection-source address>
<gracefully>
<lsp-id identifier>
<name name>
<optimize-fast-reroute>
<tunnel-id identifier>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Reset and restart Resource Reservation Protocol (RSVP) sessions.

Options

all—Clear all RSVP sessions for which this routing device is the ingress, transit, or egress routing device.

connection-source *address*—(Optional) Source address for GMPLS and MPLS LSPs from the RSVP sender template.

connection-destination *address*—(Optional) Destination address for GMPLS and MPLS LSPs from the RSVP sender template.

gracefully—(Optional) Gracefully reset an RSVP session for a nonpacket LSP in two passes. In the first pass, the Admin-Status object is signaled along the path to the other endpoint of the RSVP session. In the second pass, the path used by the RSVP session is torn down. This option can only be used on the ingress or egress routing device of the RSVP session and is only valid for nonpacket LSPs.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

lsp-id *identifier*—(Optional) LSP identifier (source port) for the RSVP sender template.

name *name*—(Optional) Reset and restart the specified RSVP session.

optimize-fast-reroute—(Optional) Begin fast reroute optimization.

tunnel-id *identifier*—(Optional) Tunnel identifier (destination port) for the RSVP session.

Required Privilege Level

clear

RELATED DOCUMENTATION

[clear mpls lsp | 2221](#)

[show rsvp session | 2508](#)

List of Sample Output

[clear rsvp session all on page 2475](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
clear rsvp session all
```

```
user@host> clear rsvp session all
```

clear rsvp statistics

List of Syntax

[Syntax on page 2476](#)

[Syntax \(EX Series Switches\) on page 2476](#)

Syntax

```
clear rsvp statistics  
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
clear rsvp statistics
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Clear Resource Reservation Protocol (RSVP) packet and error statistics.

Options

none—Clear RSVP packet and error statistics.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

clear

RELATED DOCUMENTATION

[show rsvp statistics](#) | [2529](#)

List of Sample Output

[clear rsvp statistics on page 2477](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
clear rsvp statistics
```

```
user@host> clear rsvp statistics
```

monitor label-switched-path

Syntax

```
monitor label-switched-path lsp-name
<logical-system (logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.

Logical system support introduced in Junos OS Release 9.4.

Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Display the real-time status of the specified RSVP label-switched path (LSP). You can also use this command to monitor LSPs configured within logical systems.

Options

logical-system (*logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

lsp-name—Name of the LSP.

Additional Information

You can track the amount of traffic traversing an RSVP LSP and observe its essential parameters, such as uptime, ingress and egress addresses, labels, routes, and ports. Values are typically sampled every second. The display also allows you to scroll to other currently running LSPs. You cannot use this command to display information about static LSPs or LDP-signaled LSPs.

The output of this command shows how much each field has changed since you started the command or since you cleared the counters by using the **c** key. To control the output of the **monitor label-switched-path** command while it is running, use the keys listed in [Table 76 on page 2478](#). The keys are not case-sensitive.

Table 76: Output Control Keys for the monitor label-switched-path Command

Key	Action
c	Clears the screen and refreshes the display for this LSP.
f	Freezes the display, preventing new information from being displayed.
l	Monitors a different LSP. After you type l, you can type the new LSP name.
n	Displays information about the next LSP (whose name is alphabetically higher than the current LSP name) configured on the router.

Table 76: Output Control Keys for the monitor label-switched-path Command (*continued*)

Key	Action
p	Goes to the previous LSP (whose name is alphabetically lower than the current LSP name) configured on the router.
q or Esc	Quits the command and returns to the command prompt.
t	Thaws, or restarts, the data display for this LSP.

Required Privilege Level

trace

List of Sample Output[monitor label-switched-path on page 2480](#)**Output Fields**

[Table 77 on page 2479](#) describes the output fields for the **monitor label-switched-path** command. Output fields are listed in the approximate order in which they appear.

Table 77: monitor label-switched-path Output Fields

Field Name	Field Description
(1)	<p>Displays the following information:</p> <ul style="list-style-type: none"> • hostname—Name of the router. • Seconds—Time elapsed since this display was started. • Time—Current local time.
(2)	<p>Delay—Length of the time delay, in milliseconds, required to obtain the information in the monitor display. The first number shows the current sampling delay. The second number shows the shortest delay recorded to date. The third number shows the worst delay recorded to date. This delay can vary substantially depending on the system load.</p>
(3)	<p>Displays the following:</p> <ul style="list-style-type: none"> • To—Destination address of the LSP. • From—Originating address of the LSP. • State—Current state of the LSP: Up or Down.
(4)	<p>Displays the following:</p> <ul style="list-style-type: none"> • LSPName—Name of the LSP. • Type—Type of LSP: Ingress, Egress, or Transit.

Sample Output

```
user@host> monitor label-switched-path
```

[illegible]

(12)

(13)Next='n', Prev='p', Quit='q' or ESC, Freeze='f', Thaw='t', Clear='c',
LSP='l'

ping mpls rsvp

Syntax

```
ping mpls rsvp  
  <lsp-name>  
  <count count>  
  <destination address>  
  <detail>  
  <dynamic-bypass>  
  <egress egress-address>  
  <exp forwarding-class>  
  <interface interface-name>  
  <logical-system (all | logical-system-name)>  
  <manual-bypass>  
  <multipoint>  
  <size bytes>  
  <source source-address>  
  <standby standby-path-name>  
  <sweep>
```

Release Information

Command introduced before Junos OS Release 7.4.

The **egress** and **multipoint** options were introduced in Junos OS Release 9.2.

The **size** and **sweep** options were introduced in Junos OS Release 9.6.

The **dynamic-bypass** and **manual-bypass** options were introduced in Junos OS Release 10.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Check the operability of MPLS RSVP-signaled label-switched path (LSP) connections. Type Ctrl+c to interrupt a **ping mpls** command.

Options

count count—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is **1** through **1,000,000**. The default value is **5**.

destination address—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

detail—(Optional) Display detailed information about the echo requests sent and received.

NOTE: When using the **detail** option, the reported time is based on the system time configured on the local and remote routers. Differences in these system times can result in inaccurate one way ping trip times being reported.

In practice, it is difficult to synchronize the system times of independent Juniper Networks routers with sufficient accuracy to provide a meaningful time value for the **detail** option (even when synchronized using NTP).

dynamic-bypass—(Optional) Ping dynamically generated bypass LSPs, used for protecting other LSPs.

egress egress-address—(Optional) Only the specified egress router or switch responds to the ping request.

exp forwarding-class—(Optional) Value of the forwarding class for the MPLS ping packets.

interface—(Optional) Specify the name of the interface protected by the manual bypass LSP. This option is only available when you have also used the **manual-bypass** option.

logical-system (all | logical-system-name)—(Optional) Perform this operation on all logical systems or on the specified logical system.

lsp-name—Ping an RSVP-signaled LSP using an LSP name.

manual-bypass—(Optional) Ping manually configured bypass LSPs, used for protecting other LSPs. For this option, you must also specify the interface protected by the manual bypass LSP using the **interface** option.

multipoint—(Optional) Send ping requests to each of the egress routers or switches participating in a point-to-multipoint LSP. You can also include the **egress** option to ping a specific egress router or switch participating in a point-to-multipoint LSP.

size bytes—(Optional) Size of the LSP ping request packet (**100** through **65468** bytes). Packets are 4-byte aligned. For example, if you enter a size of 101, 102, 103, or 104, the router or switch uses a size value of 104 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 100-byte minimum.

source source-address—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface.

standby standby-path-name—(Optional) Name of the standby path.

sweep —(Optional) Automatically determine the size of the maximum transmission unit (MTU).

Additional Information

If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

NOTE: In a Juniper-Cisco interoperation network scenario, a point-to-multipoint LSP ping echo reply message from a Cisco device in a different IGP area is dropped on the Juniper device when the source address of the reply message is an interface address other than the loopback address or router ID. Starting in Junos OS Release 13.3X8, 14.2R6, 15.1R4, 15.1F6, 15.1F5-S8, 16.1R1, and later releases, such point-to-multipoint LSP ping echo reply messages are accepted by the Juniper device and the messages get logged as uncorrelated responses.

Required Privilege Level

network

List of Sample Output

[ping mpls rsvp \(Echo Reply Received\) on page 2484](#)
[ping mpls rsvp \(Echo Reply with Error Code\) on page 2485](#)
[ping mpls rsvp detail on page 2485](#)
[ping mpls rsvp multipoint egress detail count on page 2485](#)
[ping mpls rsvp multipoint detail count on page 2485](#)
[ping mpls rsvp destination detail count size on page 2486](#)
[ping mpls rsvp destination detail sweep size on page 2487](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with an error code are not counted in the received packets count. They are accounted for separately.

Sample Output

ping mpls rsvp (Echo Reply Received)

```
user@host> ping mpls rsvp test1
```

```
!!!!!-- lsping statistics ---5 packets transmitted, 5 packets received, 0% packet
loss
```

ping mpls rsvp (Echo Reply with Error Code)

```
user@host> ping mpls rsvp test2
```

```
!!xxx-- lsping statistics ---5 packets transmitted, 2 packets received, 60% packet
loss3 packets received with error status, not counted as received.
```

ping mpls rsvp detail

```
user@host> ping mpls rsvp to-green detail
```

```
Request for seq 1, to interface 67, labels <100095, 0, 0>
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 67, labels <100095, 0, 0>
Reply for seq 2, return code: Egress-ok
```

ping mpls rsvp multipoint egress detail count

```
user@host>ping mpls rsvp sample-lsp multipoint egress 192.168.1.3 detail count 1
```

```
Request for seq 1, to interface 70, label 299952
Request for seq 1, to interface 70, no label stack.
Request for seq 1, to interface 67, no label stack.

Reply for seq 1, egress 192.168.1.3, return code: Egress-ok, time: 0.242 ms
Local transmit time: 1205310695s 215737us
Remote receive time: 1205310695s 215979us

--- lsping, egress 192.168.1.3 statistics ---
1 packets transmitted, 1 packets received, 0% packet loss
```

ping mpls rsvp multipoint detail count

```
user@host>ping mpls rsvp sample-lsp multipoint detail count 1
```

```
Request for seq 1, to interface 70, label 299952
Request for seq 1, to interface 70, no label stack.
Request for seq 1, to interface 67, no label stack.
```

```

Reply for seq 1, return code: Unknown TLV, time: 9.877 m Local transmit time:
1205310615s 347317us
  Remote receive time: 1205310615s 357194us
Reply for seq 1, egress 192.168.1.3, return code: Egress-ok, time: 0.351 ms
  Local transmit time: 1205310615s 347262us
  Remote receive time: 1205310615s 347613us
Reply for seq 1, egress 192.168.1.13, return code: Egress-ok, time: 0.301 ms
  Local transmit time: 1205310615s 347167us
  Remote receive time: 1205310615s 347468us
Timeout for seq 1, egress 192.168.1.1
Timeout for seq 1, egress 192.168.1.4
Timeout for seq 1, egress 192.168.1.14

--- lsping, egress 192.168.1.1 statistics ---
1 packets transmitted, 0 packets received, 100% packet loss

--- lsping, egress 192.168.1.3 statistics ---
1 packets transmitted, 1 packets received, 0% packet loss

--- lsping, egress 192.168.1.4 statistics ---
1 packets transmitted, 0 packets received, 100% packet loss

--- lsping, egress 192.168.1.13 statistics ---
1 packets transmitted, 1 packets received, 0% packet loss

--- lsping, egress 192.168.1.14 statistics ---
1 packets transmitted, 0 packets received, 100% packet loss

```

ping mpls rsvp destination detail count size

user@host>ping mpls rsvp chaser-access destination 192.168.0.1 detail count 1 size 4468

```

Request for seq 1, to interface 88, label 299984, packet size 4468
Reply for seq 1, return code: Egress-ok, time: 44.804 ms
  Local transmit time: 2009-03-30 22:05:02 CEST 408.629 ms
  Remote receive time: 2009-03-30 22:05:02 CEST 453.433 ms

--- lsping statistics ---
1 packets transmitted, 1 packets received, 0% packet loss

```

ping mpls rsvp destination detail sweep size

user@router> **ping mpls rsvp chaser-access destination 192.168.0.1 detail sweep size 4500**

```
Request for seq 1, to interface 86, no label stack., packet size 100
Reply for seq 1, return code: Egress-ok, time: -39.264 ms
    Local transmit time: 2009-04-24 14:05:40 CEST 541.423 ms
    Remote receive time: 2009-04-24 14:05:40 CEST 502.159 ms
Request for seq 2, to interface 86, no label stack., packet size 2300
Reply for seq 2, return code: Egress-ok, time: -38.179 ms
    Local transmit time: 2009-04-24 14:05:41 CEST 544.240 ms
    Remote receive time: 2009-04-24 14:05:41 CEST 506.061 ms
Request for seq 3, to interface 86, no label stack., packet size 4500
Timeout for seq 3
Request for seq 4, to interface 86, no label stack., packet size 3400
Reply for seq 4, return code: Egress-ok, time: -37.545 ms
    Local transmit time: 2009-04-24 14:05:45 CEST 549.953 ms
    Remote receive time: 2009-04-24 14:05:45 CEST 512.408 ms
Request for seq 5, to interface 86, no label stack., packet size 3952
Reply for seq 5, return code: Egress-ok, time: -37.176 ms
    Local transmit time: 2009-04-24 14:05:46 CEST 555.881 ms
    Remote receive time: 2009-04-24 14:05:46 CEST 518.705 ms
Request for seq 6, to interface 86, no label stack., packet size 4228
Reply for seq 6, return code: Egress-ok, time: -36.962 ms
    Local transmit time: 2009-04-24 14:05:47 CEST 561.809 ms
    Remote receive time: 2009-04-24 14:05:47 CEST 524.847 ms
Request for seq 7, to interface 86, no label stack., packet size 4368
Reply for seq 7, return code: Egress-ok, time: -36.922 ms
    Local transmit time: 2009-04-24 14:05:48 CEST 568.738 ms
    Remote receive time: 2009-04-24 14:05:48 CEST 531.816 ms
Request for seq 8, to interface 86, no label stack., packet size 4440
Reply for seq 8, return code: Egress-ok, time: -36.855 ms
    Local transmit time: 2009-04-24 14:05:49 CEST 575.669 ms
    Remote receive time: 2009-04-24 14:05:49 CEST 538.814 ms
Request for seq 9, to interface 86, no label stack., packet size 4476
Timeout for seq 9
Request for seq 10, to interface 86, no label stack., packet size 4460
Reply for seq 10, return code: Egress-ok, time: -36.906 ms
    Local transmit time: 2009-04-24 14:05:53 CEST 584.382 ms
    Remote receive time: 2009-04-24 14:05:53 CEST 547.476 ms
Request for seq 11, to interface 86, no label stack., packet size 4480
Timeout for seq 11
Request for seq 12, to interface 86, no label stack., packet size 4472
Timeout for seq 12
Request for seq 13, to interface 86, no label stack., packet size 4468
```

```
Reply for seq 13, return code: Egress-ok, time: -36.943 ms
    Local transmit time: 2009-04-24 14:06:00 CEST 594.884 ms
    Remote receive time: 2009-04-24 14:06:00 CEST 557.941 ms
Request for seq 14, to interface 86, no label stack., packet size 4476
Timeout for seq 14
Request for seq 15, to interface 86, no label stack., packet size 4472
Timeout for seq 15

--- lsp ping sweep result---
Maximum Transmission Unit (MTU) is 4468 bytes
```


show rsvp interface

List of Syntax

[Syntax on page 2489](#)

[Syntax \(EX Series Switches\) on page 2489](#)

Syntax

```
show rsvp interface
<brief | detail | extensive>
<instance instance-name>
<link-management>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show rsvp interface
<brief | detail | extensive>
<link-management>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance option added in Junos OS Release 15.1 for the MX Series.

Description

Display the status of Resource Reservation Protocol (RSVP)-enabled interfaces and packet statistics. The RSVP input/input module collects statistics for certain events on a per-interface basis. Most of these events were tracked on a routing-instance basis in Junos OS releases earlier than Release 17.2. The **show rsvp interface detail** command displays these event counters under the **Events** section of the output only when the values of these fields are higher than zero. These statistics are also maintained at the global level (per routing-instance) and are also displayed in the output of the **show rsvp statistics** command.

Options

none—Display standard information about the status of RSVP-enabled interfaces and packet statistics.

brief | detail | extensive | link-management—(Optional) Display the specified level of output.

instance *instance-name*—(Optional) Display RSVP status information for the specified instance. If **instance-name** is omitted, RSVP status information is displayed for the master instance.

link-management—(Optional) Use the link-management option to display the control peers and corresponding TE-link information created by the Link Management Protocol (LMP).

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show rsvp interface brief on page 2493](#)

[show rsvp interface detail on page 2493](#)

[show rsvp interface extensive on page 2494](#)

[show rsvp interface link-management on page 2495](#)

[show rsvp interface detail RSVP interface: 9 active on page 2495](#)

Output Fields

[Table 78 on page 2490](#) lists the output fields for the **show rsvp interface** command. Output fields are listed in the approximate order in which they appear.

Table 78: show rsvp interface Output Fields

Field Name	Field Description	Level of Output
RSVP interface	Number of interfaces on which RSVP is active. Each interface has one line of output.	All levels
Interface	Name of the interface.	All levels
Index	Index of the interface.	detail
State	State of the interface. <ul style="list-style-type: none"> • Disabled—No traffic engineering information is displayed. • Down—Interface is not operational. • Enabled—Displays traffic engineering information. • Up—Interface is operational. 	All levels
NoAuthentication	Interface does not support RSVP authentication.	detail
NoAggregate	Interface does not support refresh reduction.	detail
NoReliable	Interface does not support refresh reduction message ID extension.	detail
NoLinkProtection	Interface does not support link protection.	detail

Table 78: show rsvp interface Output Fields (continued)

Field Name	Field Description	Level of Output
HelloInterval	Frequency at which RSVP hellos are sent on this interface (in seconds). Prior to Junos OS Release 18.2R2, when the no-interface-hello statement is configured under the [edit protocols rsvp] hierarchy, and there is no interface-specific configuration for the hello interval, the HelloInterval output field displayed the default hello interval time of 9 seconds. Starting in Junos OS Release 18.2R2, with a similar configuration, the HelloInterval output field displays 0 as the hello interval.	detail
Address	IP address of the local interface.	detail
Active control channel	Next-hop link address to transmit messages.	None specified
TElink	Traffic-engineered links that are managed by the peer they are associated with.	None specified
Active resv	Number of reservations that are actively reserving bandwidth on the interface.	All levels
PreemptionCnt	Number of times an RSVP session was preempted on this interface.	detail
Update threshold	Percentage change in reserved bandwidth to trigger an IGP update.	detail
Subscription	User-configured subscription factor.	All levels
Actual	Available RSVP bandwidth that is recalculated after considering SPRING bandwidth utilization.	extensive
bc number	Bandwidth allocated for the specified bandwidth constraint.	extensive
ct number	Bandwidth allocated for the specified class type.	extensive
Static BW	Total interface bandwidth, in bps.	All levels
Available BW	Amount of bandwidth that RSVP is allowed to reserve, in bps. It is equal to (static bandwidth * subscription factor).	al levels
Reserved BW	Currently reserved bandwidth, in bps.	All levels
SoftPreemptionCnt	Number of times a soft preemption occurred on this interface. This number is not included in the PreemptionCnt value.	detail

Table 78: show rsvp interface Output Fields (*continued*)

Field Name	Field Description	Level of Output
Overbooked BW	Currently overbooked bandwidth, in bps, by class type (ct0 through ct3).	detail
Highwater mark	Highest bandwidth that has ever been reserved on this interface, in bps.	brief
PacketType	Type of RSVP packet.	detail
Total Sent	Total number of packets sent.	detail
Total Received	Total number of packets received since RSVP was enabled.	detail
Last 5 seconds Sent	Number of packets sent in the last 5 seconds.	detail
Last 5 seconds Received	Number of packets received in the last 5 seconds.	detail
Path	Statistics about Path messages, which are sent from the RSVP sender along the data paths and store path state information in each node along the path.	detail
PathErr	Statistics about PathErr messages, which are advisory messages that are sent upstream to the sender.	detail
PathTear	Statistics about PathTear messages, which remove path states and dependent reservation states in any routers along a path.	detail
Resv	Statistics about Resv messages, which are sent from the RSVP receiver along the data paths and store reservation state information in each node along the path.	detail
ResvErr	Statistics about ResvErr messages, which are advisory messages that are sent when an attempt to establish a reservation fails.	detail
ResvTear	Statistics about ResvTear messages, which remove reservation states along a path.	detail
Hello	Number of RSVP hello packets that have been sent to and received from the neighbor.	detail
Ack	Acknowledge message for refresh reductions.	detail

Table 78: show rsvp interface Output Fields (*continued*)

Field Name	Field Description	Level of Output
Srefresh	Summary refresh messages.	detail
EndtoEnd RSVP	Statistics for the number of end-to-end RSVP messages sent.	detail
Queue	CoS transmit queue number and its associated forwarding class designation.	extensive
TxRate	Configured bandwidth in Mbps and configured bandwidth as a percentage of the specified queue.	extensive
Priority	Weight of the queue relative to other configured queues, in percentage.	extensive
queue-priority-value	Low, High, None, or Exact. None indicates no rate limiting. Exact indicates the queue transmits at the configured rate only.	extensive

Sample Output

show rsvp interface brief

```
user@host> show rsvp interface brief
```

```

RSVP interface: 1 active
           Active Subscr- Static   Available   Reserved   Highwater
Interface  State  resv   iption  BW         BW         BW         mark
de0.0      Up      1     23%    10Mbps     989.992kbps 1.31Mbps    1.31Mbps

```

show rsvp interface detail

Starting in Junos OS Release 15.2, this command also shows conditional PathTear statistics and Node Hellos.

```
user@host> show rsvp interface detail
```

```

so-0/1/1.0  Index 6, State: Ena/Up
  NoAuthentication, NoAggregate, NoReliable, NoLinkProtection
  HelloInterval 3(second)
  Address 192.168.207.29, 10.255.245.194
  ActiveResv 0, PreemptionCnt 0, SoftPreemptionCnt 0, Update threshold 10%

```

```

Subscription 100%, StaticBW 155.52Mbps, AvailableBW 155.52Mbps
ReservedBW [0] 155Mbps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
SoftPreemptionCnt1
OverbookedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 155Mbps[5] 0bps[6] 0bps[7] 0bps
PacketType          Total                Last 5 seconds
                   Sent      Received    Sent      Received
Path                16          0         1          0
PathErr             0          0         0          0
PathTear            1          0         0          0
Resv                0          11         0          1
ResvErr             0          0         0          0
ResvTear            0          0         0          0
Hello              66          67         1          1
Ack                 0          0         0          0
Srefresh            0          0         0          0
EndtoEnd RSVP      0          0         0          0
Node Hello         100         100         0          0
PathTear(Condl.)   0          3         0          0

```

show rsvp interface extensive

user@host> show rsvp interface extensive

```

so-1/0/0.0 Index 72, State Ena/Up
NoAuthentication, NoAggregate, NoReliable, NoLinkProtection
HelloInterval 9(second)
Address 192.168.213.22, 10.255.240.175
ActiveResv 1, PreemptionCnt 0, SoftPreemptionCnt 0, Update threshold 10%
Subscription 100%, Actual 60%
bc0 = (ct0+ct1+ct2+ct3), StaticBW 622.08Mbps
bc1 = (ct1+ct2+ct3), StaticBW 466.56Mbps
bc2 = (ct2+ct3), StaticBW 311.04Mbps
bc3 = ct3, StaticBW 155.52Mbps
ct0: StaticBW 155.52Mbps, AvailableBW 522.08Mbps
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
ct1: StaticBW 155.52Mbps, AvailableBW 366.56Mbps
ReservedBW [0] 100Mbps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
ct2: StaticBW 155.52Mbps, AvailableBW 311.04Mbps
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
ct3: StaticBW 155.52Mbps, AvailableBW 155.52Mbps
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
Queue          TxRate          Priority Exact
0              155.52Mbps          25%      Low

```

1	155.52Mbps	25%	Low
2	155.52Mbps	25%	Low
3	155.52Mbps	25%	Low

show rsvp interface link-management

user@host> show rsvp interface link-management

```

RSVP interface: 2 active
PEER-C State: Up
Active Control Channel: so-0/1/0.0

TElink: TElnk1, Link ID: 37811
ActiveResv 0, PreemptionCnt 0
StaticBW 155.52Mbps, ReservedBW: 0bps, AvailableBW: 155.52Mbps

TElink: TElnk2, Link ID: 37808
ActiveResv 1, PreemptionCnt 0
StaticBW 155.52Mbps, ReservedBW: 0bps, AvailableBW: 155.52Mbps

PEER-B State: Up
Active Control Channel: so-1/0/0.0

TElink: TElnkAB1, Link ID: 1598
ActiveResv 0, PreemptionCnt 0
StaticBW 622.08Mbps, ReservedBW: 0bps, AvailableBW: 622.08Mbps

TElink: TElnkAB2, Link ID: 1597
ActiveResv 0, PreemptionCnt 0
StaticBW 622.08Mbps, ReservedBW: 0bps, AvailableBW: 622.08Mbps

```

show rsvp interface detail RSVP interface: 9 active

user@host> show rsvp interface detail RSVP interface: 9 active

```

fxp0.0 Index 4, State Dis/Up
NoAuthentication, Aggregate, Reliable, NoLinkProtection HelloInterval 9(second)
Address 10.9.148.47
Event                               Count
bad packet length                   1
bad packet version                   1
authentication fail                  1
bad checksum                         1

```

bad packet format	1
rcv pkt disabled intf	1
state timeout	1
message out-of-order	1
unknown ack	1
unknown nack	1
received nack	1
send failure	1

PacketType		Total	Last 5 seconds			
Sent	Received		Sent	Received		
Path		0	0	0	0	0
PathErr		0	0	0	0	0
PathTear		0	0	0	0	0
Resv		0	0	0	0	0
ResvErr		0	0	0	0	0
ResvTear		0	0	0	0	0
ResvConf		0	0	0	0	0
Bundle		0	0	0	0	0
Hello		0	0	0	0	0
Ack		0	0	0	0	0
Srefresh		0	0	0	0	0
Notify		0	0	0	0	0
Unknown		0	0	0	0	0
EndtoEnd RSVP		0	0	0	0	0
Backup Path		0	0	0	0	0
Cnd PathTear		0	0	0	0	0

show rsvp neighbor

List of Syntax

[Syntax on page 2497](#)

[Syntax \(EX Series Switches\) on page 2497](#)

Syntax

```
show rsvp neighbor
<brief | detail | extensive>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show rsvp neighbor
<brief | detail>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance option added in Junos OS Release 15.1 for the MX Series.

Description

Display Resource Reservation Protocol (RSVP) neighbors that were discovered dynamically during the exchange of RSVP packets.

Options

none—Display standard information about RSVP neighbors.

brief | detail—(Optional) Display the specified level of output.

instance *instance-name*—(Optional) Display the RSVP neighbor information for the specified instance. If **instance-name** is omitted, RSVP neighbor information is displayed for the master instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show rsvp neighbor on page 2501](#)

[show rsvp neighbor detail on page 2502](#)

Output Fields

Table 79 on page 2498 lists the output fields for the **show rsvp neighbor** command. Output fields are listed in the approximate order in which they appear.

Table 79: show rsvp neighbor Output Fields

Field Name	Field Description	Level of Output
RSVP neighbor	Number of neighbors that the routing device has learned of. Each neighbor has one line of output.	All levels
via	Name of the interface where the neighbor has been detected. In the case of generalized MPLS (GMPLS) LSPs, the name of the peer where the neighbor has been detected.	detail
Address	Address of a learned neighbor.	All levels
Idle	Length of time the neighbor has been idle, in seconds. NOTE: Until Junos OS Release 15.1, in the output of the show rsvp neighbor command, the value under the Idle field immediately reflects the changed idle time when a link in the neighboring router is brought down. Starting with Junos OS Release 15.2, a router does not declare a neighbor as idle when a hello adjacency exists and has not timed out. When an interface is brought down, RSVP brings down the neighbor because of the notification it receives from IGP. The reason for considering the IGP-down notification is to support BFD-triggered fast reroute (FRR) and RSVP-TE is not directly a client for BFD notifications. When RSVP brings down the neighbor, the input/output process is not impacted. As a result, the idle time in the output of the show command is not immediately updated.	All levels
Up/Dn	Number of neighbor up or down transitions detected by RSVP hello packets. If the up count is 1 greater than the down count, the neighbor is currently up. Otherwise, the neighbor is down. Neighbors that do not support RSVP hello packets, such as routers running Junos OS Release 3.2 or earlier, are not reported as up or down.	All levels
Up cnt and Down cnt	Number of neighbor up or down transitions detected by RSVP hello packets. If the up count is 1 greater than the down count, the neighbor is currently up. Otherwise, the neighbor is down. Neighbors that do not support RSVP hello packets, such as routers running Junos OS Release 3.2 or earlier, are not reported as up or down.	detail

Table 79: show rsvp neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
status	<p>State of the RSVP neighbor:</p> <ul style="list-style-type: none"> • Up—Routing device can detect RSVP Hello messages from the neighbor. • Down—Routing device has received one of the following indications: <ul style="list-style-type: none"> • Communication failure from the neighbor. • Communication from IGP that the neighbor is unavailable. • Change in the sequence numbers in the RSVP Hello messages sent by the neighbor. • Restarting—RSVP neighbor is unavailable and might be restarting. The neighbor remains in this state until it has restarted or is declared dead. This state is possible only when graceful restart is enabled. • Restarted—RSVP neighbor has restarted and is undergoing state recovery (graceful restart) procedures. • Dead—Routing device has lost all communication with the RSVP neighbor. Any RSVP sessions with that neighbor are torn down. 	detail
LastChange	Time elapsed since the neighbor state changed either from up to down or from down to up. The format is hh:mm:ss .	All levels
Last changed time	Time elapsed since the neighbor state changed either from up to down or from down to up.	detail
HelloInt	Frequency at which RSVP hellos are sent on this interface (in seconds).	All levels
HelloTx/Rx	Number of hello packets sent to and received from the neighbor.	All levels
Hello	Number of RSVP hello packets that have been sent to and received from the neighbor.	detail
Message received	Number of Path and Resv messages that this routing device has received from the neighbor.	detail
Remote Instance	Identification provided by the remote routing device during Hello message exchange.	detail
Local Instance	Identification sent to the remote routing device during Hello message exchange.	detail

Table 79: show rsvp neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
Refresh reduction	<p>Measure of processing overhead requests of refresh messages. Refresh reduction extensions improve routing device performance by reducing the process overhead, thus increasing the number of LSPs a routing device can support. Refresh reduction can have the following values:</p> <ul style="list-style-type: none"> • operational—All four RSVP refresh reduction extensions—message ack, bundling, summary refresh, and staged refresh timer—are functional between the two neighboring routing devices. For a detailed explanation of these extensions, see RFC 2961. • incomplete—Some RSVP refresh reduction extensions are functional between the two neighboring routing devices. • not operational—Either the refresh reduction feature has been turned off, or the remote routing device cannot support the refresh reduction extensions. 	detail
Remote end	<p>Neighboring routing device's status with regard to refresh reduction:</p> <ul style="list-style-type: none"> • enabled—Remote routing device has requested refresh reduction during RSVP message exchanges. • disabled—Remote routing device does not require refresh reduction. 	detail
Pop label	Pop labels of the RSVP-TE pop-and-forward LSP tunnels.	detail
Ack-extension	<p>An RSVP refresh reduction extension:</p> <ul style="list-style-type: none"> • enabled—Both local and remote routing devices support the ack-extension (RFC 2961). • disabled—Remote routing device does not support the ack-extension. 	detail
Link protection	<p>Status of the MPLS fast reroute mechanism that protects traffic from link failure:</p> <ul style="list-style-type: none"> • enabled—Link protection feature has been turned on, protecting the neighbor with a bypass LSP. • disabled—No link protection feature has been enabled for this neighbor. 	detail
LSP name	Name of the bypass LSP.	detail

Table 79: show rsvp neighbor Output Fields (*continued*)

Field Name	Field Description	Level of Output
Bypass LSP	Status of the bypass LSP. It can have the following values: <ul style="list-style-type: none"> • does not exist—Bypass LSP is not available. • connecting—Routing device is in the process of establishing a bypass LSP, and the LSP is not available for link protection at the moment. • operational—Bypass LSP is up and running. • down—Bypass LSP has gone down, with the most probable cause a node or a link failure on the bypass path. 	detail
Backup routes	Number of user LSPs (or routes) that are being protected by a bypass LSP (before link failure).	detail
Backup LSPs	Number of LSPs that have been temporarily established to maintain traffic by refreshing the downstream LSPs during link failure (not a one-to-one correspondence).	detail
Bypass explicit route	Explicit route object's (ERO) path that is taken by the bypass LSP.	detail
Restart time	Length of time a neighbor waits to receive a Hello from the restarting node before declaring the node dead and deleting the states (in milliseconds).	detail
Recovery time	Length of time during which the restarting node attempts to recover its lost states with help from its neighbors (in milliseconds). Recovery time is advertised by the restarting node to its neighbors, and applies to nodal faults. The restarting node considers its graceful restart complete after this time has elapsed.	detail

Sample Output

show rsvp neighbor

user@host> **show rsvp neighbor**

```

RSVP neighbor: 2 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx
192.168.207.203   0  3/2    13:01      3    366/349
192.168.207.207   0  1/0    22:49      3    448/448

```

show rsvp neighbor detail

Starting in Junos OS Release 16.1, this command also shows whether enhanced FRR procurers are enabled on the neighbor. Neighbors with Point of Local Repair (PLR) or Node Protecting Merge Point (NP-MP) also show the Hellos sent /received count.

user@host> **show rsvp neighbor detail**

```

RSVP neighbor: 2 learned
Address: 192.168.207.203   via: ecstasy1 status: Up
  Last changed time: 28:47, Idle: 0 sec, Up cnt: 3, Down cnt: 2
  Message received: 632
  Hello: sent 673, received 656, interval 3 sec
  Remote instance: 0x6432838a, Local instance: 0x74b72e36
  Refresh reduction: operational
    Remote end: enabled, Ack-extension: enabled
  Enhanced FRR local protection: enabled
    LSPs (total 76): Phop 0, PPhop 0, Nhop 76, NNhop 0
  Pop Label: 299808(unprotected) 299840(link-protected)
Link protection: enabled
  LSP name: Bypass_to_192.168.207.203
  Bypass LSP: operational, Backup routes: 1, Backup LSPs: 0
  Bypass explicit route: 192.168.207.207 192.168.207.224
Restart time: 60000 msec, Recovery time: 0 msec

```

show rsvp route-session-id

Syntax

```
show rsvp route-session-id
```

Release Information

Command introduced in Junos OS Release 16.1 for the MX Series.

Description

Display the session ID and the version information associated with the ingress route added by the Resource Reservation Protocol (RSVP) in the inet.3 table.

Session ID is a pre-populated identifier used for indirect next hops in BGP Prefix Independent Convergence (PIC) enabled router. Session ID is used to identify the session or path.

NOTE: **protect core** configuration is not required to display the **route-session-id**.

Options

none—Validate and display RSVP route session details.

Required Privilege Level

view

List of Sample Output

[show rsvp route-session-id on page 2504](#)

Output Fields

[Table 80 on page 2503](#) describes the output fields for the **show rsvp route-session-id** command. Output fields are listed in the approximate order in which they appear.

Table 80: show rsvp route-session-id Output Fields

Field Name	Field Description
Ingress Route Destination	Destination (egress routing device) of the session.
Ingress Route Preference	RSVP preference value of the ingress session.
Ingress Route Metric 1	Metric 1 associated with the RSVP ingress route.

Table 80: show rsvp route-session-id Output Fields (*continued*)

Field Name	Field Description
Ingress Route Metric 2	Metric 2 associated with the RSVP ingress route.
Ingress Route Session ID	Session ID associated with the RSVP ingress route.
Version	Version number associated with the RSVP ingress route.

Sample Output

show rsvp route-session-id

user@host> **show rsvp route-session-id**

```
RSVP Ingress Route Session ID Database:
=====
Ingress Route Destination: 1.1.1.5/32
Ingress Route Preference: 7
Ingress Route Metric 1:    20,          Metric 2: 0
Ingress Route Session ID: 0x146,       Version: 0
```


show rsvp pop-and-forward

Syntax

```
show rsvp pop-and-forward
<brief | detail | extensive>
<instance routing-instance-name>
<label label>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced in Junos OS Release 18.1R1 on MX Series routers, PTX Series routers, and vMX series routers.

Description

Display RSVP-TE pop-and-forward LSP tunnel information. This information includes the set of in-labels (one-hop pop label or a delegation label), the number of session using each label and the next segment-label (if there is another delegation hop downstream), and whether the in-label is used for unprotected or protected LSPs.

Options

none—Display the standard level of information for the RSVP-TE pop-and-forward LSP tunnels.

brief | detail | extensive—(Optional) Display the desired level of output. The brief option is the default level of output.

The detail option provides more information about the hops in a delegation segment (whether its one-hop or multi-hop).

The extensive option lists the set of LSPs that are using a given pop or delegation label.

instance *routing-instance-name*—(Optional) Display the RSVP-TE pop-and-forward LSP tunnel information for the specified routing instance.

label *label*—(Optional) Display the RSVP-TE pop-and-forward LSP tunnel information for the specified label.

logical-system (all | *logical-system-name*)—(Optional) Display the RSVP-TE pop-and-forward LSP tunnel information for all or the specified logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

List of Sample Output

[show rsvp pop-and-forward on page 2506](#)

[show rsvp pop-and-forward extensive on page 2506](#)

[show rsvp pop-and-forward label on page 2507](#)

Sample Output

show rsvp pop-and-forward

user@host> show rsvp pop-and-forward

RSVP pop-and-forward: 2 shared labels				
Label-in	Hop-count	Next-segment-label	Protection	Session-count
299840	3	299808	unprotected	100
299872	3	299824	unprotected	50

show rsvp pop-and-forward extensive

user@host> show rsvp pop-and-forward extensive

RSVP pop-and-forward: 2 shared labels				
299840 (shared-label)				
Next-segment-label: 299808, Hop-count: 3				
Protection: unprotected, Session-count: 2				
Segment-id:				
Hop 1: 70.1.1.2(label=299808)				
Hop 2: 92.1.1.1(label=299808)				
Hop 3: 93.1.1.2				
Segment route:				
Primary: 70.1.1.2, OutIf: ge-0/0/2.0				
Lsp-session list (name, dest-ip, sender-ip, lsp-id):				
pop1, 10.10.10.10, 2.2.2.2, 2				
pop2, 10.10.10.10, 2.2.2.2, 1				
299872 (shared-label)				
Next-segment-label: 299824, Hop-count: 3				
Protection: unprotected, Session-count: 4				

```
Segment-id:
  Hop 1: 70.1.1.2(label=299808)
  Hop 2: 92.1.1.1(label=299808)
  Hop 3: 93.1.1.2
Segment route:
  Primary: 70.1.1.2, OutIf: ge-0/0/2.0
Lsp-session list (name, dest-ip, sender-ip, lsp-id):
  pop147, 9.9.9.9, 2.2.2.2, 1
  pop148, 9.9.9.9, 2.2.2.2, 1
  pop150, 9.9.9.9, 2.2.2.2, 1
  pop149, 9.9.9.9, 2.2.2.2, 1
```

show rsvp pop-and-forward label

user@host> **show rsvp pop-and-forward label 299872**

RSVP pop-and-forward: 2 shared labels				
Label-in	Hop-count	Next-segment-label	Protection	Session-count
299872	3	299824	unprotected	4

show rsvp session

List of Syntax

[Syntax on page 2508](#)

[Syntax \(EX and QFX Series Switches\) on page 2508](#)

Syntax

```
show rsvp session
<brief | detail | extensive | terse>
<bidirectional | unidirectional>
<bypass>
<down | up>
<externally-provisioned>
<instance instance-name>
<interface interface-name>
<logical-system (all | logical-system-name)>
<lsp-type>
<name session-name>
<p2mp>
<session-type>
<statistics>
<te-link te-link>
```

Syntax (EX and QFX Series Switches)

```
show rsvp session
<brief | detail | extensive | terse>
<bidirectional | unidirectional>
<bypass>
<down | up>
<externally-provisioned>
<interface interface-name>
<lsp-type>
<name session-name>
<p2mp>
<session-type>
<statistics>
<te-link te-link>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

externally-provisioned option added in Junos OS Release 13.3.

Command introduced in Junos OS Release 13.2X51-D15 for QFX Series.

instance option added in Junos OS Release 15.1 for the MX Series.

Description

Display information about RSVP sessions.

Options

none—Display standard information about all RSVP sessions.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

bidirectional | unidirectional—(Optional) Display information about bidirectional or unidirectional RSVP sessions only, respectively.

bypass—(Optional) Display RSVP sessions for bypass LSPs.

down | up—(Optional) Display only LSPs that are inactive or active, respectively.

externally-provisioned—(Optional) Display the LSPs that are generated dynamically and provisioned by an external Path Computation Element (PCE).

instance *instance-name*—(Optional) Display RSVP sessions for the specified instance. If **instance-name** is omitted, RSVP session information is displayed for the master instance.

interface *interface-name*—(Optional) Display RSVP sessions for the specified interface only.

RSVP reserves resources only for outgoing LSPs of an interface. Because resources are not reserved for incoming LSPs, the **show rsvp sessions interface *interface-name*** command output displays only those RSVP sessions whose next hops correspond to the specified interface.

To identify the number of RSVP sessions formed over the uplink interface on the egress label-switching router (LSR), you can use the following command:

```
user@host> show rsvp session egress extensive | match "PATH rcvfrom:" | match interface-name | count
```

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

lsp-type—(Optional) Display information about RSVP sessions with regard to LSPs:

- **bypass**—Sessions used for bypass LSPs.
- **lsp**—Sessions used to set up LSPs.
- **nolsp**—Sessions not used to set up LSPs.

name *session-name*—(Optional) Display information about the named session.

p2mp—(Optional) Display point-to-multipoint information.

session-type—(Optional) Display information about a particular session type:

- **egress**—Sessions that terminate on this routing device.

To identify the number of RSVP sessions formed over the uplink interface on the egress label-switching router (LSR), you can use the following command:

```
user@host> show rsvp session egress extensive | match "PATH rcvfrom:" | match interface-name
| count
```

- **ingress**—Sessions that originate from this routing device.
- **transit**—Sessions that transit through this routing device.

statistics—(Optional) Display packet statistics.

te-link te-link—(Optional) Display sessions with reservations on the specified TE link.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear rsvp session](#) | [2474](#)

List of Sample Output

[show rsvp session on page 2515](#)

[show rsvp session statistics on page 2516](#)

[show rsvp session detail on page 2516](#)

[show rsvp session detail \(When Egress Protection Is in Standby Mode\) on page 2517](#)

[show rsvp session detail \(When Egress Protection Is in Effect During a Local Repair\) on page 2517](#)

[show rsvp session detail \(Path MTU Output Field\) on page 2518](#)

[show rsvp session detail \(GMPLS\) on page 2518](#)

[show rsvp session extensive on page 2519](#)

[show rsvp session extensive transit on page 2520](#)

[show rsvp session p2mp \(Ingress Router\) on page 2521](#)

[show rsvp session p2mp \(Transit Router\) on page 2521](#)

Output Fields

[Table 81 on page 2511](#) describes the output fields for the **show rsvp session** command. Output fields are listed in the approximate order in which they appear.

Table 81: show rsvp session Output Fields

Field Name	Field Description	Level of Output
Ingress RSVP	Information about ingress RSVP sessions.	detail
Ingress RSVP	Information about ingress RSVP sessions. Each session has one line of output.	All levels
Egress RSVP	Information about egress RSVP sessions.	All levels
Transit RSVP	Information about the transit RSVP sessions.	All levels
P2MP name	(Appears only when the p2mp option is specified). Name of the point-to-multipoint LSP path.	All levels
P2MP branch count	(Appears only when the p2mp option is specified). Number of LSPs receiving packets from the point-to-multipoint LSP.	All levels
To	Destination (egress routing device) of the session.	All levels
From	Source (ingress routing device) of the session.	All levels
State	State of the path: Up , Down , or AdminDn . AdminDn indicates that the LSP is being taken down gracefully.	All levels
Address	Destination (egress routing device) of the LSP.	detail
From	Source (ingress routing device) of the session.	detail
LSPstate	State of the LSP that is being handled by this RSVP session. It can be either Up , Dn (down), or AdminDn . AdminDn indicates that the LSP is being taken down gracefully.	brief detail
Rt	Number of active routes (prefixes) that have been installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table (inet.0). For transit and egress RSVP sessions, the routing table is the primary MPLS table (mpls.0).	brief
Active Route	Number of active routes (prefixes) that have been installed in the forwarding table. For ingress RSVP sessions, the forwarding table is the primary IPv4 table (inet.0). For transit and egress RSVP sessions, the forwarding table is the primary MPLS table (mpls.0).	detail
LSPname	Name of the LSP.	brief detail

Table 81: show rsvp session Output Fields (*continued*)

Field Name	Field Description	Level of Output
LSPpath	Indicates whether the RSVP session is for the primary or secondary LSP path. LSPpath can be either primary or secondary and can be displayed on the ingress, egress, and transit routing devices. LSPpath can also indicate when a graceful LSP deletion has been triggered.	detail
Bypass	(Egress routing device) Destination address for the bypass LSP.	detail
Bidir	(When LSP is bidirectional) LSP will allow data to travel in both directions between GMPLS devices.	detail
Bidirectional	(When LSP is bidirectional) LSP will allow data to travel both ways between GMPLS devices.	detail
Upstream label in	(When LSP is bidirectional) Incoming label for reverse direction traffic for this LSP.	detail
Upstream label out	(When LSP is bidirectional) Outgoing label for reverse direction traffic for this LSP.	detail
Recovery label received	(When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.	detail
Recovery label sent	(When LSP is bidirectional) Label the downstream node suggests for use in its Resv messages that is returned.	detail
Suggested label received	(When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.	detail
Suggested label sent	(When LSP is bidirectional) Label the downstream node suggests for use in its Resv message that is returned.	detail
Resv style or Style	RSVP reservation style. This field consists of two parts. The first is the number of active reservations. The second is the reservation style, which can be FF (fixed filter), SE (shared explicit), or WF (wildcard filter).	brief detail
Label in	Incoming label for this LSP.	brief detail
Label out	Outgoing label for this LSP.	brief detail
Time left	Number of seconds remaining in the lifetime of the reservation.	brief detail

Table 81: show rsvp session Output Fields (*continued*)

Field Name	Field Description	Level of Output
Since	Date and time when the RSVP session was initiated.	detail
Tspec	Sender's traffic specification, which describes the sender's traffic parameters.	detail
DiffServ info	Indicates whether the LSP is a multiclass LSP (multiclass diffServ-TE LSP) or a Differentiated-Services-aware traffic engineering LSP (diffServ-TE LSP).	detail
bandwidth	Bandwidth for each class type (ct0 , ct1 , ct2 , or ct3).	detail
Port number	Protocol ID and sender/receiver port used in this RSVP session.	detail
Attrib flags	Non-PHP indicates that ultimate hop popping has been requested by the LSP using this RSVP session	extensive
FastReroute desired	Fast reroute has been requested by the ingress routing device.	detail
Soft preemption desired	Soft preemption has been requested by the ingress routing device.	detail
FastReroute desired	(Data [not a bypass or backup] LSP when the protection scheme has been requested) Fast reroute (one-to-one backup) has been requested by the ingress routing device.	detail extensive
Link protection desired	(Data [not a bypass or backup] LSP when the protection scheme has been requested) Link protection (many-to-one backup) has been requested by the ingress routing device.	detail extensive
Node/Link protection desired	(Data [not a bypass or backup] LSP when the protection scheme has been requested) Node and link protection (many-to-one backup) has been requested by the ingress routing device.	detail extensive

Table 81: show rsvp session Output Fields (*continued*)

Field Name	Field Description	Level of Output
Type	<p>LSP type:</p> <ul style="list-style-type: none"> • Link protected LSP—LSP has been protected by link protection at the outgoing interface. The name of the bypass used is also listed here (extensive). • Node/Link protected LSP—LSP has been protected by node and link protection at the outgoing interface. The name of the bypass used is also listed here (extensive). • Protection down—LSP is not currently protected. • Bypass LSP—LSP that is used to protected one or more user LSPs in case of link failure. • Backup LSP at Point-of-Local-Repair (PLR)—LSP that has been temporarily established to protected a user LSP at the ingress of a failed link. • Backup LSP at Merge Point (MP)—LSP that has been temporarily established to protected a user LSP at the egress of a failed link. 	detail extensive
New bypass	New bypass (the bypass name is also displayed) has been activated to protect the LSP.	extensive
Link protection up, using <i>bypass-name</i>	Link protection (the bypass name is also displayed) has been activated for the LSP.	extensive
Creating backup LSP, link down	A link down event occurred, and traffic is being switched over to the bypass LSP.	extensive
Deleting backup LSP, protected LSP restored	Link has come back up and the LSP has been restored. Because the backup LSP is no longer needed, it is deleted.	extensive
Path mtu	Displays the value of the path MTU received from the network (through signaling) and the value used for forwarding. This value is only displayed on ingress routing devices with the allow-fragmentation statement configured at the [edit protocols mpls path-mtu] hierarchy level. If there is a detour LSP, the path MTU for the detour is also displayed.	detail

Table 81: show rsvp session Output Fields (*continued*)

Field Name	Field Description	Level of Output
Egress protection PLR as protector	RSVP state on the Protector or the point-of-local-repair (PLR) routing device: <ul style="list-style-type: none"> • Active— Egress protection is available at the Protector or the PLR routing device. • In Use— Local repair has been completed. 	detail
PATH rcvfrom	Address of the previous-hop (upstream) routing device or client, interface the neighbor used to reach this routing device, and number of packets received from the upstream neighbor.	detail
Adspec	MTU signaled from the ingress routing device to the egress routing device by means of the adspec object.	detail
PATH sentto	Address of the next-hop (downstream) routing device or client, interface used to reach this neighbor (or peer-name in the GMPLS LSP case), and number of packets sent to the downstream routing device.	detail
Explt route	Explicit route for the session. Normally this value will be the same as that of record route. Differences indicate that path rerouting has occurred, typically during fast reroute.	detail
Record route	Recorded route for the session, taken from the record route object. Normally this value will be the same as that of explct route. Differences indicate that path rerouting has occurred, typically during fast reroute.	detail

Sample Output

show rsvp session

user@host> **show rsvp session**

```
Ingress RSVP: 1 sessions
To          From          State  Rt  Style  Labelin  Labelout  LSPname
10.255.245.214 10.255.245.212 AdminDn 0  1  FF      -      22293 LSP Bidir
Total 1 displayed, Up 1, Down 0

Egress RSVP: 2 sessions
To          From          State  Rt  Style  Labelin  Labelout  LSPname
```

```

10.255.245.194 10.255.245.195 Up      0  1 FF  39811      - Gpro3-ba Bidir
10.255.245.194 10.255.245.195 Up      0  1 FF      3      - pro3-ba
Total 2 displayed, Up 2, Down 0

```

Transit RSVP: 1 sessions

```

To           From           State Rt Style Labelin Labelout LSPname
10.255.245.198 10.255.245.197 Up      0  1 SE  100000      3 pro3-de
Total 1 displayed, Up 1, Down 0

```

show rsvp session statistics

user@host> show rsvp session statistics

```

Ingress RSVP: 2 sessions
To           From           State  Packets    Bytes    LSPname
10.255.245.24 10.255.245.22  Up      0          0      pro3-bd
10.255.245.24 10.255.245.22  Up    44868    2333136  pro3-bd-2
Total 2 displayed, Up 2, Down 0
Egress RSVP: 2 sessions
To           From           State  Packets    Bytes    LSPname
10.255.245.22 10.255.245.24  Up      0          0      pro3-db
10.255.245.22 10.255.245.24  Up      0          0    pro3-db-2
Total 2 displayed, Up 2, Down 0
Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

show rsvp session detail

user@host> show rsvp session detail

```

Ingress RSVP: 1 sessions
1.1.1.1.1
  From: 2.2.2.2, LSPstate: Up, ActiveRoute: 0
  LSPname: to-a, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: -, Label out: 3
  Time left:    -, Since: Fri Mar 26 18:42:42 2004
  Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
  DiffServ info: diffServ-TE LSP, bandwidth: <ctl 300kbps>
  Port number: sender 1 receiver 15876 protocol 0
  PATH rcvfrom: localclient

```

```

Adspec: sent MTU 1500
PATH sentto: 192.168.37.16 (tl-0/2/1.0) 1 pkt

```

show rsvp session detail (When Egress Protection Is in Standby Mode)

```
user@host> show rsvp session detail
```

```

Ingress RSVP: 1 sessions
1.1.1.1
  From: 2.2.2.2, LSPstate: Up, ActiveRoute: 0
  LSPname: to-a, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: -, Label out: 3
  Time left:    -, Since: Fri Mar 26 18:42:42 2004
  Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
  DiffServ info: diffServ-TE LSP, bandwidth: <ctl 300kbps>
  Port number: sender 1 receiver 15876 protocol 0
  Egress protection PLR as protector: Active
PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  PATH sentto: 192.168.37.16 (tl-0/2/1.0) 1 pkt

```

show rsvp session detail (When Egress Protection Is in Effect During a Local Repair)

```
user@host> show rsvp session detail
```

```

Ingress RSVP: 1 sessions
1.1.1.1
  From: 2.2.2.2, LSPstate: Down, ActiveRoute: 0
  LSPname: to-a, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: -, Label out: 3
  Time left:    -, Since: Fri Mar 26 18:42:42 2004
  Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
  DiffServ info: diffServ-TE LSP, bandwidth: <ctl 300kbps>
  Port number: sender 1 receiver 15876 protocol 0
  Egress protection PLR as protector: In Use
PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  PATH sentto: 192.168.37.16 (tl-0/2/1.0) 1 pkt

```

show rsvp session detail (Path MTU Output Field)

```
user@host> show rsvp session detail
```

```
Ingress RSVP: 1 sessions
10.255.245.3
  From: 10.255.245.5, LSPstate: Up, ActiveRoute: 3
  LSPname: to-c, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100432
  Resv style: 1 FF, Label in: -, Label out: 100432
  Time left:    -, Since: Mon Aug 16 17:54:40 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 9192
  Port number: sender 1 receiver 57843 protocol 0
  FastReroute desired
  PATH rcvfrom: localclient
  Adspec: sent MTU 4470
  Path mtu: received 4470, using 4458 for forwarding
  PATH sentto: 192.168.37.89 (so-0/2/3.0) 11 pkts
  RESV rcvfrom: 192.168.37.89 (so-0/2/3.0) 10 pkts
  Explct route: 192.168.37.89
  Record route: <self> 192.168.37.89 192.168.37.87
    Detour is Up
    Detour Tspec: rate 0bps size 0bps peak Infbps m 20 M 9192
    Detour adspec: sent MTU 1512
    Path mtu: received 1512, using 1500 for forwarding
```

show rsvp session detail (GMPLS)

```
user@host> show rsvp session detail
```

```
Ingress RSVP: 1 sessions
192.168.4.1
  From: 192.168.1.1, LSPstate: Dn, ActiveRoute: 0
  LSPname: gmpls-rl-to-r3, LSPpath: Primary
  Bidirectional, Upstream label in: 21253, Upstream label out: -
  Suggested label received: -, Suggested label sent: 21253
  Recovery label received: -, Recovery label sent: -
  Resv style: 0 -, Label in: -, Label out: -
  Time left:    -, Since: Mon Aug 16 17:54:40 2006
  Tspec: rate 0bps size 0bps peak 155.52Mbps m 20 M 1500
  Port number: sender 2 receiver 46115 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  PATH MTU: received 0
```

```

PATH sentto: 10.35.1.5 (so-0/2/3.0) 11 pkts
Explct route: 100.100.100.100 93.93.93.93
Record route: <self> 100.100.100.100 93.93.93.93
Total 1 displayed, Up 0, Down 1
Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

show rsvp session extensive

Starting in Junos OS Release 16.1, this command includes additional details for both the incoming and outgoing Path and Resv messages. The information includes the internal message handle and revision number, as well as the message ID included by the neighbor in the signaling message.

user@host> **show rsvp session extensive**

```

Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 1 sessions

16.0.0.5
  From: 16.0.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lto5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 299856
  Resv style: 1 SE, Label in: 299776, Label out: 299856
  Time left: 123, Since: Sat Nov 29 10:39:15 2014
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 52631 protocol 0
  PATH rcvfrom: 16.1.2.1 (ge-0/0/0.0) 2 pkts
  incoming message handle: P-1/2, ID: 0xc82fd7/322
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 16.2.4.4 (ge-0/0/1.0) 1 pkts
  outgoing message state: refreshing, ID: 0xcacec0/22
  RESV rcvfrom: 16.2.4.4 (ge-0/0/1.0) 1 pkts, Entropy label: Yes
  incoming message handle: R-2/1, ID: 0xc82f3e/217
  RESV
  outgoing message state: refreshing, ID: 0xcacec0/17
  Explct route: 16.2.4.4 16.99.0.5

```

```
Record route: 16.1.2.1 <self> 16.2.4.4 16.99.0.5
Total 1 displayed, Up 1, Down 0
```

show rsvp session extensive transit

Starting in Junos OS Release 16.1, this command also shows node-related details, including whether enhanced local protection is enabled for the LSP and whether the node is a merge point. If the latter is true, both the IP address of the Point of Local Repair (PLR) and the status (LP-MP, NP-MP, or Non-MP) are shown.

user@host> **show rsvp session extensive transit**

```
From: 81.1.1.1, LSPstate: Up, ActiveRoute: 0
LSPname: A-D-1, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 299776
Resv style: 1 SE, Label in: 299776, Label out: 299776
Time left: 117, Since: Tue May 6 08:39:44 2014
Tspec: rate 700Mbps size 700Mbps peak Infbps m 20 M 1500
Port number: sender 1 receiver 24131 protocol 0
Node/Link protection desired
Type: Node/Link protected LSP, using Bypass->81.2.3.3->81.3.4.4
    2 May 6 08:39:47 Node protection up, using Bypass->81.2.3.3->81.3.4.4
    1 May 6 08:39:44 New bypass Bypass->81.2.3.3->81.3.4.4
Enhanced Local Protection: Enabled, LP-MP for 81.2.2.2, NP-MP for 81.1.1.1
PATH rcvfrom: 81.1.2.1 (lt-0/2/0.201) 5371 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 81.2.3.3 (lt-0/2/0.203) 5374 pkts
RESV rcvfrom: 81.2.3.3 (lt-0/2/0.203) 5372 pkts, Entropy label: No
Record route: 81.1.2.1 <self> 81.3.3.3 (node-id) 81.2.3.3 81.4.4.4 (node-id)
81.3.4.4
Total 1 displayed, Up 1, Down 0
```

If enhanced FRR is not enabled (either because it is disabled on the router itself or one of the neighbors along the LSP path does not support it), either of the following lines might be displayed:

```
Enhanced Local Protection: Disabled, Reason: User Config
```

```
Enhanced Local Protection: Disabled, Reason: Backward Compatibility
```

If enhanced FRR is not enabled and the router is not an MP, the following line is displayed:

Enhanced Local Protection: Enabled, Non-MP

show rsvp session p2mp (Ingress Router)

user@host> show rsvp session p2mp

```
Ingress RSVP: 3 sessions
P2MP name: test, P2MP branch count: 1
To          From          State   Rt  Style Labelin Labelout LSPname
10.255.10.95 10.255.10.2   Up      0   1 SE    -         3 to-pe1
P2MP name: test2, P2MP branch count: 2
To          From          State   Rt  Style Labelin Labelout LSPname
10.255.10.23 10.255.10.2   Up      0   1 SE    -         299776 to-pe3
10.255.10.16 10.255.10.2   Up      0   1 SE    -         299776 to-pe4
Total 3 displayed, Up 3, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

show rsvp session p2mp (Transit Router)

user@host> show rsvp session p2mp

```
Ingress RSVP: 1 sessions
P2MP name: test, P2MP branch count: 1
To          From          State   Rt  Style Labelin Labelout LSPname
10.255.10.23 10.255.10.95   Up      0   1 SE    -         299792 to-pe2
Total 1 displayed, Up 1, Down 0

Egress RSVP: 1 sessions
P2MP name: test, P2MP branch count: 1
To          From          State   Rt  Style Labelin Labelout LSPname
10.255.10.95 10.255.10.2   Up      0   1 SE    3         -         to-pe1
Total 1 displayed, Up 1, Down 0

Transit RSVP: 2 sessions
```

P2MP name: test2, P2MP branch count: 2

To	From	State	Rt	Style	Labelin	Labelout	LSPname
10.255.10.23	10.255.10.2	Up	0	1 SE	299776	299808	to-pe3
10.255.10.16	10.255.10.2	Up	0	1 SE	299776	299856	to-pe4

Total 2 displayed, Up 2, Down 0

show rsvp session

Syntax

```
show rsvp session
<brief | detail | extensive | terse>
<bidirectional | unidirectional>
<down | up>
<interface interface-name>
<lsp-type>
<name session-name>
<session-type>
<statistics>
<te-link te-link>
```

Release Information

Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display information about Resource Reservation Protocol (RSVP) sessions.

Options

none—Display standard information about all RSVP sessions.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

bidirectional | unidirectional—(Optional) Display information about bidirectional or unidirectional RSVP sessions only, respectively.

down | up—(Optional) Display only LSPs that are inactive or active, respectively.

interface *interface-name*—(Optional) Display RSVP sessions for the specified interface only.

lsp-type —(Optional) Display information about RSVP sessions with regard to LSPs:

- **bypass**—Sessions used for bypass LSPs.
- **lsp**—Sessions used to set up LSPs.
- **nolsp**—Sessions not used to set up LSPs.

name *session-name*—(Optional) Display information about the named session.

session-type—(Optional) Display information about a particular session type:

- **egress**—Sessions that terminate on this switch.
- **ingress**—Sessions that originate from this switch.

- **transit**—Sessions that transit through this switch.

statistics—(Optional) Display packet statistics.

te-link *te-link*—(Optional) Display sessions with reservations on the specified traffic-engineered link name.

Required Privilege Level

view

RELATED DOCUMENTATION

[Example: Configuring MPLS on EX8200 and EX4500 Switches | 41](#)

[Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect | 73](#)

[Configuring MPLS on Provider Edge Switches Using IP-Over-MPLS | 67](#)

[Configuring MPLS on EX8200 and EX4500 Provider Switches | 77](#)

List of Sample Output

[show rsvp session on page 2526](#)

[show rsvp session statistics on page 2527](#)

[show rsvp session detail on page 2527](#)

[show rsvp session extensive on page 2528](#)

Output Fields

[Table 82 on page 2524](#) describes the output fields for the **show rsvp session** command. Output fields are listed in the approximate order in which they appear.

Table 82: show rsvp session Output Fields

Field Name	Field Description	Level of Output
Ingress RSVP	Information about ingress RSVP sessions.	detail
Ingress RSVP	Information about ingress RSVP sessions. Each session has one line of output.	All levels
Egress RSVP	Information about egress RSVP sessions.	All levels
Transit RSVP	Information about the transit RSVP sessions.	All levels
To	Destination (egress switch) of the session.	All levels
From	Source (ingress switch) of the session.	All levels

Table 82: show rsvp session Output Fields (continued)

Field Name	Field Description	Level of Output
State	State of the path: Up , Down , or AdminDn . AdminDn indicates that the LSP is being taken down gracefully.	All levels
Address	Destination (egress switch) of the LSP.	detail
LSPstate	State of the LSP that is being handled by this RSVP session. It can be either Up , Dn (down), or AdminDn . AdminDn indicates that the LSP is being taken down gracefully.	brief, detail
Rt	Number of active routes (prefixes) that have been installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table (inet.0). For transit and egress RSVP sessions, the routing table is the primary MPLS table (mpls.0).	brief
ActiveRoute	Number of active routes (prefixes) that have been installed in the forwarding table. For ingress RSVP sessions, the forwarding table is the primary IPv4 table (inet.0). For transit and egress RSVP sessions, the forwarding table is the primary MPLS table (mpls.0).	detail
LSPname	Name of the LSP.	brief, detail
LSPpath	Indicates whether the RSVP session is for the primary or secondary LSP path. LSPpath can be either primary or secondary and can be displayed on the ingress, egress, and transit switches. LSPpath can also indicate when a graceful LSP deletion has been triggered.	detail
Recovery label received	(When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.	detail
Recovery label sent	(When LSP is bidirectional) Label the downstream node suggests for use in its Resv messages that is returned.	detail
Suggested label received	(When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.	detail
Suggested label sent	(When LSP is bidirectional) Label the downstream node suggests for use in its Resv message that is returned.	detail
Resv style or Style	RSVP reservation style. This field consists of two parts. The first is the number of active reservations. The second is the reservation style, which can be FF (fixed filter), SE (shared explicit), or WF (wildcard filter).	brief detail

Table 82: show rsvp session Output Fields (*continued*)

Field Name	Field Description	Level of Output
Label in	Incoming label for this LSP.	brief, detail
Label out	Outgoing label for this LSP.	brief, detail
Time left	Number of seconds remaining in the lifetime of the reservation.	brief, detail
Since	Date and time when the RSVP session was initiated.	detail
Tspec	Sender's traffic specification, which describes the sender's traffic parameters.	detail
Port number	Protocol ID and sender/receiver port used in this RSVP session.	detail
Creating backup LSP, link down	A link down event occurred, and traffic is being switched over to the bypass LSP.	extensive
Deleting backup LSP, protected LSP restored	Link has come back up and the LSP has been restored. Because the backup LSP is no longer needed, it is deleted.	extensive
PATH rcvfrom	Address of the previous-hop (upstream) switch or client, interface the neighbor used to reach this switch, and number of packets received from the upstream neighbor.	detail

Sample Output

show rsvp session

```
user@switch> show rsvp session
```

```
Ingress RSVP: 1 sessions
To           From           State   Rt  Style  Labelin  Labelout  LSPname
10.255.245.214 10.255.245.212 AdminDn  0   1 FF      -        22293 LSP Bidir
Total 1 displayed, Up 1, Down 0

Egress RSVP: 2 sessions
To           From           State   Rt  Style  Labelin  Labelout  LSPname
10.255.245.194 10.255.245.195 Up       0   1 FF    39811    - Gpro3-ba Bidir
10.255.245.194 10.255.245.195 Up       0   1 FF      3        - pro3-ba
```

Total 2 displayed, Up 2, Down 0

Transit RSVP: 1 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPname
10.255.245.198	10.255.245.197	Up	0	1 SE	100000	3	pro3-de

Total 1 displayed, Up 1, Down 0

show rsvp session statistics

user@switch> show rsvp session statistics

Ingress RSVP: 2 sessions

To	From	State	Packets	Bytes	LSPname
10.255.245.24	10.255.245.22	Up	0	0	pro3-bd
10.255.245.24	10.255.245.22	Up	44868	2333136	pro3-bd-2

Total 2 displayed, Up 2, Down 0

Egress RSVP: 2 sessions

To	From	State	Packets	Bytes	LSPname
10.255.245.22	10.255.245.24	Up	0	0	pro3-db
10.255.245.22	10.255.245.24	Up	0	0	pro3-db-2

Total 2 displayed, Up 2, Down 0

Transit RSVP: 0 sessions

Total 0 displayed, Up 0, Down 0

show rsvp session detail

user@switch> show rsvp session detail

Ingress RSVP: 1 sessions

1.1.1.1

From: 2.2.2.2, LSPstate: Up, ActiveRoute: 0

LSPname: to-a, LSPpath: Primary

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: 3

Resv style: 1 FF, Label in: -, Label out: 3

Time left: -, Since: Fri Mar 26 18:42:42 2004

Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500

DiffServ info: diffServ-TE LSP, bandwidth: <ctl 300kbps>

Port number: sender 1 receiver 15876 protocol 0

PATH rcvfrom: localclient

Adspec: sent MTU 1500

PATH sentto: 192.168.37.16 (tl-0/2/1.0) 1 pkt

show rsvp session extensive

user@switch> **show rsvp session extensive**

```
8.8.8.8
  From: 9.9.9.9, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp_to_240, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 322832
  Resv style: 1 FF, Label in: -, Label out: 322832
  Time left:    -, Since: Thu Feb 26 16:25:39 2009
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 44542 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 3.3.3.2 (xe-0/1/0.0) 238 pkts
  RESV rcvfrom: 3.3.3.2 (xe-0/1/0.0) 234 pkts
  Explct route: 3.3.3.2 4.4.4.2
```


show rsvp statistics

List of Syntax

[Syntax on page 2529](#)

[Syntax \(EX Series Switches\) on page 2529](#)

Syntax

```
show rsvp statistics
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show rsvp statistics
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

instance option added in Junos OS Release 15.1 for the MX Series.

Description

Display Resource Reservation Protocol (RSVP) packet and error statistics. The RSVP input/output module collects statistics for certain events on a per-interface basis. Most of these events were tracked on a routing-instance basis in Junos OS releases earlier than Release 17.2. The "show rsvp interface detail" command displays these event counters under the Events section of the output only when the values of these fields are higher than zero. These statistics are also maintained at the global level (per routing-instance) and are also displayed in the output of the "show rsvp statistics" command.

Options

none—Display RSVP packet and error statistics.

instance *instance-name*—(Optional) Display RSVP packet and error statistics for the specified instance. If **instance-name** is omitted, RSVP statistics are displayed for the master instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear rsvp statistics](#) | [2476](#)

List of Sample Output

[show rsvp statistics on page 2533](#)

[show rsvp statistics on page 2534](#)

Output Fields

[Table 83 on page 2530](#) describes the output fields for the **show rsvp statistics** command. Output fields are listed in the approximate order in which they appear.

Table 83: show rsvp statistics Output Fields

Field Name	Field Description
Packet Type	Statistics about different RSVP messages.
Total Sent	Total number of packets sent since RSVP was enabled.
Total Received	Total number of packets received since RSVP was enabled.
Last 5 seconds Sent	Total number of packets sent in the last 5 seconds.
Last 5 seconds Received	Number of packets received in the last 5 seconds.
Path	Statistics about Path messages, which are sent from the RSVP sender along the data paths and which store path state information in each node along the path.
PathErr	Statistics about PathErr messages, which are advisory messages that are sent upstream to the sender.
PathTear	Statistics about PathTear messages, which remove path states and dependent reservation states in any routing devices along a path.
Resv FF	Statistics about fixed-filter reservation style messages, which consist of distinct reservations among explicit senders.
Resv WF	Statistics about wildcard-filter reservation style messages, which consist of shared reservations among wildcard senders.
Res SE	Statistics about shared-explicit reservation style messages, which consist of shared reservations among explicit senders.
ResvErr	Statistics about ResvErr messages, which are advisory messages that are sent when an attempt to establish a reservation fails.

Table 83: show rsvp statistics Output Fields (*continued*)

Field Name	Field Description
ResvTear	Statistics about ResvTear messages, which remove reservation states along a path.
ResvConf	Statistics about ResvConfirm messages, which are responses to confirm a reservation request.
Ack	Acknowledge message for refresh reductions.
SRefresh	Summary refresh messages.
Hello	Number of RSVP hello packets that have been sent to and received from the neighbor.
EndtoEnd RSVP	Statistics for the number of End-to-end RSVP messages.
Errors	Statistics about errored RSVP packets.
Rcv pkt bad length	The packet was not processed because its length is inappropriate.
Rcv pkt unknown type	The packet is not one of the well-known RSVP types, as defined in RFC 2205, <i>Resource ReSerVation Protocol (RSVP)</i> .
Rcv pkt bad version	The packet is not an RSVP version 1 packet.
Rcv pkt auth fail	The packet failed authentication checks.
Rcv pkt bad checksum	The RSVP checksum check failed.
Rcv pkt bad format	General packet processing failed because the packet was badly formed.
Memory allocation fail	An internal resource failure occurred.
No path information	A reservation was received, but no sender is active.
Resv style conflict	The same session contains inconsistent reservation styles.
Port conflict	There were inconsistent port numbers for the same session.
Resv no interface	An interface for the receive reservation packets cannot be located.
PathErr to client	Number of PathErr packets delivered to the local client.

Table 83: show rsvp statistics Output Fields (*continued*)

Field Name	Field Description
ResvErr to client	Number of ResvErr packets delivered to the local client.
Path timeout	Number of times the sender timed out because the path was removed.
Resv timeout	Number of times the receiver timed out because the reservation was removed.
Message out-of-order	Records the number of RSVP incoming messages that are considered out of order. This is detected from the message ID object's sequence number.
Unknown ack msg	A neighboring routing device replies with an ACK object that contains an unknown message ID. This can indicate a message ID handshake problem. For example, a router receives an ACK for message IDs 1, 2, and 3. However, it only has state for message IDs 1 and 3. The router increments the unknown ack counter by 1.
Recv nack	If a neighboring router receives an unknown message ID in an RSVP refresh message, the router sends a Resv nack message back to the sender. This can happen if that neighbor has been rebooted. For this case, the router sends a regular RSVP refresh message to recover the state and start the message-ID handshake process again.
Recv duplicated msg-id	Number of times the same message ID is used by two different RSVP messages. This duplication is usually caused when a neighboring routing device restarts.
No TE-link to recv Hop	Counter of packets discarded because a TE link was not found.
Rcv pkt disabled interface	Number of RSVP packets received on an interface that is not enabled for RSVP.
Transmit buffer full	Number of times the buffer for assembling an outgoing RSVP message was not large enough.
Transmit failure	Number of times the RSVP task failed to send out a packet.
Receive failure	Number of times the RSVP task failed to read an incoming packet.
P2MP RESV discarded by appl	Number of Resv messages discarded because the MPLS label is not valid for the P2MP LSP application.
Rate limit	Number of RSVP packets dropped due to rate limiting.
Err msg loop detected	Number of RSVP error messages that have looped back to their originator. This is detected by checking the error node address in the ERROR_SPEC object.

Sample Output

show rsvp statistics

Starting in Junos OS Release 16.1, this command also shows conditional PathTear statistics and the number of times an LSP state has been retained because of Link Protecting Merge Point (LP-MP) or Node Protecting Merge Point (NP-MP) determination.

```
user@host> show rsvp statistics
```

PacketType	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Path	355	408	0	0
PathErr	2	13	0	0
PathTear	101	139	0	0
Resv FF	0	0	0	0
Resv WF	0	0	0	0
Resv SE	419	225	0	0
ResvErr	0	0	0	0
ResvTear	0	13	0	0
ResvConf	0	0	0	0
Bundle	455	378	0	0
Ack	682	1414	0	0
SRefresh	395198	236030	5	2
Hello	578809	578221	4	4
EndtoEnd RSVP	0	0	0	0
Node Hello	50	50	0	0
PathTear(Cond1.)	0	3	0	0
Errors	Total		Last 5 seconds	
Rcv pkt bad length	0		0	
Rcv pkt unknown type	0		0	
Rcv pkt bad version	0		0	
Rcv pkt auth fail	0		0	
Rcv pkt bad checksum	0		0	
Rcv pkt bad format	0		0	
Memory allocation fail	0		0	
No path information	10		0	
Resv style conflict	0		0	
Port conflict	0		0	
Resv no interface	0		0	
PathErr to client	38		0	
ResvErr to client	0		0	
Path timeout	8		0	
Resv timeout	57		0	

Message out-of-order	0	0
Unknown ack msg	2978	0
Recv nack	86	0
Recv duplicated msg-id	5	0
No TE-link to recv Hop	0	0
Rcv pkt disabled interface	0	0
Transmit buffer full	0	0
Transmit failure	0	0
Receive failure	0	0
P2MP RESV discarded by appl	0	0
Rate limit	306	0
Err msg loop detected	0	0
MP Path LP-avail rcved	0	0
MP Path NP-avail rcved	0	0
PLR bk RSB life ext	0	0
MP bk PSB life ext	0	0
LP-MP state retained on failure	0	0
NP-MP state retained on failure	0	0
Fast refresh skipped	0	0
MP bk Srefresh Nack rcved	0	0
RSB life extended for nh FRR	0	0

show rsvp statistics

user@host> show rsvp statistics

PacketType	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Path	21	0	0	0
PathErr	0	4	0	0
PathTear	9	0	0	0
Resv	0	9	0	0
ResvErr	0	0	0	0
ResvTear	0	2	0	0
ResvConf	0	0	0	0
Bundle	28	2	0	0
Hello	172814	172802	5	5
Ack	11	12	0	0
Srefresh	142	143	0	0
Notify	0	0	0	0
Unknown	0	0	0	0
EndtoEnd RSVP	0	0	0	0
Backup Path	0	0	0	0
Backup Tear	0	0	0	0

Cnd PathTear	0	0	0	0
Rmt PathTear	0	0	0	0
Rmt Backup	0	0	0	0
Errors	Total		Last 5 seconds	
Rcv pkt bad length	0		0	
Rcv pkt unknown type	0		0	
Rcv pkt bad version	0		0	
Rcv pkt auth fail	0		0	
Rcv pkt bad checksum	0		0	
Rcv pkt bad format	0		0	
Message out-of-order	0		0	
Unknown msg-id ack	0		0	
Unknown msg-id nack	0		0	
Rcv msg-id nack	0		0	
Rcv pkt disabled interface	0		0	
Transmit failure	3		0	
Memory allocation fail	0		0	
ID allocation failed	0		0	
No path information	0		0	
Resv style conflict	0		0	
Port conflict	0		0	
Resv no interface	0		0	
PathErr to client	4		0	
ResvErr to client	0		0	
Path timeout	0		0	
Resv timeout	0		0	
No TE-link to rcv Hop	0		0	
Transmit buffer full	0		0	
P2MP RESV discarded by app	0		0	
Rate limit	0		0	
Err msg loop detected	0		0	
MP Path LP-avail rcvd	0		0	
MP Path NP-avail rcvd	0		0	
PLR bk RSB life ext	0		0	
RSB life ext for nh FRR	0		0	
MP pri PSB life ext LP	0		0	
Rcvd state rejected	0		0	
No matching senders	0		0	
Del from client	5		0	
Enhanced FRR Stats	Total		Last 5 seconds	
LP-MP LSPs retained	0		0	
NP-MP LSPs retained	0		0	

Non-MP LSPs deleted	0	0
LSPs deleted on Phop down	0	0
LSPs deleted on PPhop down	0	0
LP avail signaled LSPs	0	0
NP avail signaled LSPs	0	0
NP flag reset for Phop	0	0
LSPs retained on Cnd tear	0	0
Upstr long refresh LSPs	0	0
Upstr short refresh LSPs	0	0
Dnstr long refresh LSPs	6	0
Dnstr short refresh LSPs	0	0
PathTear ignored on MP	0	0
RRO change Remote PathTear	0	0
Primary down Rmt PathTear	0	0

show rsvp version

List of Syntax

[Syntax on page 2537](#)

[Syntax \(EX Series Switches\) on page 2537](#)

Syntax

```
show rsvp version
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches)

```
show rsvp version
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display information about the Resource Reservation Protocol (RSVP) protocol settings, such as the version of the RSVP software, the refresh timer and keep multiplier, and local RSVP graceful restart capabilities on a routing device.

Options

none—Display RSVP protocol settings.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show rsvp version on page 2540](#)

Output Fields

[Table 84 on page 2538](#) describes the output fields for the **show rsvp version** command. Output fields are listed in the approximate order in which they appear.

Table 84: show rsvp version Output Fields

Field Name	Field Description
Resource ReSerVation Protocol, version	RSVP software version.
RSVP protocol	Status of RSVP: Enabled or Disabled .
R(refresh timer)	Configured time interval used to generate periodic RSVP messages.
K(keep multiplier)	Number of RSVP messages that can be lost before an RSVP state is declared stale.
Preemption	Currently configured preemption capability: Aggressive , Disabled , or Normal . The default is Normal .
Soft-preemption cleanup	Time, in seconds, that an LSP is kept after it has been soft preempted. This is a global property of the RSVP protocol.
Graceful deleting timeout	Currently configured value for the graceful-deletion-timeout statement. The router that initiates the graceful deletion procedure for an RSVP session waits for the graceful deletion timeout interval to ensure that all routers along the path (especially the ingress and egress routers) have prepared for the LSP to be taken down.
NSR Mode	Status of the nonstop active routing feature for RSVP on the restarting device: Disabled , Enabled/Master , or Enabled/Standby .
NSR State	<p>State of the nonstop active routing feature for RSVP on the restarting device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> • Idle • TE-link sync complete • Neighbor sync complete • Path state sync complete • Resv state sync complete • Bypass sync complete • Init sync complete
Setup protection	Status of point-to-point and point-to-multipoint LSP setup protection configuration on the device: Enabled or Disabled .

Table 84: show rsvp version Output Fields (continued)

Field Name	Field Description
Route Session-Id count	<p>Total count of session IDs associated with the combination of all the RSVP ingress routes.</p> <p>NOTE: Starting in Junos OS Release 16.1, the show rsvp version command output displays the Route Session-Id count output field by default, irrespective of the presence of associated session IDs.</p> <p>When there are no session IDs associated with any RSVP ingress route, the <i>Route Session-Id count</i> value is zero (0).</p>
Graceful restart	Status of the graceful restart feature for RSVP on the restarting routing device: Enabled or Disabled .
Restart helper mode	Status of the helper mode feature: Enabled or Disabled . When this feature is enabled, the restarting routing device can help the neighbor with its RSVP restart procedures.
Maximum helper restart time	Number of milliseconds (ms) configured for the maximum helper restart time. The maximum helper restart time is the length of time the routing device waits before declaring that an RSVP neighbor attempting to restart gracefully is down.
Maximum helper recovery time	Number of milliseconds configured for the maximum helper recovery time. The maximum helper recovery time is the amount of time the routing device maintains the state of an RSVP neighbor attempting to restart gracefully.
Restart time	Number of milliseconds that a neighbor waits to receive a Hello message from the restarting node before declaring the node dead and deleting the states.
Recovery time	Number of milliseconds during which the restarting node attempts to recover its lost states with help from its neighbors. Recovery time is advertised by the restarting node to its neighbors, and applies to nodal faults. The restarting node considers its graceful restart complete after this time has elapsed.
P2p transit LSP nexthop mode	Point-to-point transit LSP next-hop mode on PTX Series devices. The possible values are Chained or Unchained .
P2mp transit LSP nexthop mode	Point-to-multipoint transit LSP next-hop mode on PTX Series devices. The possible values are Chained or Unchained .

Sample Output

show rsvp version

Starting with Junos OS Release 16.1, this command also shows whether enhanced FRR procurers are enabled on the router.

```
user@host> show rsvp version
```

```
Resource ReSerVation Protocol, version 1. rfc2205
  RSVP protocol:                Enabled
  R(refresh timer):              30 seconds
  K(keep multiplier):            3
  Preemption:                    Normal
  Soft-preemption cleanup:        30 seconds
  Graceful deletion timeout:      30 seconds
  NSR mode:                      Enabled/Master
  NSR state:                     Init sync complete
  Setup protection:              Disabled
  Route Session-Id count:        1
  Graceful restart:              Disabled
  Restart helper mode:           Enabled
  Maximum helper restart time:    20000 msec
  Maximum helper recovery time:   180000 msec
  Restart time:                  0 msec
  P2p transit LSP nexthop mode:  Unchained
  P2mp transit LSP nexthop mode: Unchained
  Enhanced FRR local protection: Enabled
```

traceroute mpls rsvp

Syntax

```
traceroute mpls <rsvp> lsp-name  
<detail>  
<egress>  
<exp>  
<logical-system>  
<multipoint>  
<no-resolve>  
<retries>  
<source source-address>  
<ttl>
```

Release Information

Command introduced in Junos OS Release 9.2.

egress, **multipoint**, and **ttl** options added in Junos OS Release 11.2.

Description

Trace route to a remote host for an MPLS LSP signaled by RSVP. Use **traceroute mpls rsvp** as a debugging tool to locate MPLS label-switched path (LSP) forwarding issues in a network. (Currently supported for IPv4 packets only.)

Options

lsp-name—Specify the name of the LSP to be traced.

detail—(Optional) Display detailed output.

egress—(Optional) Request that a specific point-to-multipoint egress node reply to the trace route. The trace route would follow the associated sub-LSP to the egress node.

exp—(Optional) Specify the class of service to use when sending probes. The range of values is 0 through 7. The default value is 7.

logical-system—(Optional) Specify the name of the logical system for the traceroute attempt.

multipoint—(Optional) Perform a trace route on a point-to-multipoint LSP.

no-resolve—(Optional) Specify not to resolve the hostname that corresponds to the IP address.

retries—(Optional) Specify the number of times to resend probe. The range of values is 1 through 9. The default value is 3.

source *source-address*—(Optional) Specify the source address of the outgoing traceroute packets.

ttl—(Optional) Specify the number of hops to follow before forcing the trace route to quit.

Required Privilege Level

network

List of Sample Output[traceroute mpls rsvp on page 2543](#)[traceroute mpls rsvp detail on page 2543](#)[traceroute mpls rsvp multipoint \(branch node for sub-LSPs\) on page 2544](#)[traceroute mpls rsvp multipoint \(single-hop sub-LSPs\) on page 2545](#)**Output Fields**

[Table 85 on page 2542](#) describes the output fields for the **traceroute mpls rsvp *lsp-name*** and **traceroute mpls rsvp *lsp-name* detail** commands. Output fields are listed in the approximate order in which they appear.

Table 85: traceroute mpls rsvp Output Fields

Field Name	Field Description	Level of Output
Probe options	Probe options specified in the traceroute mpls rsvp <i>lsp-name</i> command.	all levels
ttl	Time-to-live value of the labeled packet.	none specified
Label	MPLS label used to forward the packets along the LSP.	none specified
Protocol	Signaling protocol used. For this command, it is RSVP-TE.	none specified
Address	Address of the next hop.	none specified
Previous Hop	Address of the previous hop. Previous hop address of the first hop is null.	none specified
Probe status	Forwarding status from the first hop to the last-hop label-switching router (egress point in the label-switched paths). Displays Success if the trace to a hop is successful or Egress if the trace has reached the last router on the path.	none specified
Hop	Address of the hops in the label-switched path from the first hop to the last hop. Depth indicates the level of the hop.	detail
Parent	Address of the previous hop. Parent value for the first hop is null.	detail
Return Code	Return code for reporting the result of processing the echo request by the receiver.	detail

Table 85: traceroute mpls rsvp Output Fields (*continued*)

Field Name	Field Description	Level of Output
Sender timestamp	Displays the timestamp when the MPLS echo request is sent to the next hop.	detail
Receiver timestamp	Timestamp when the echo request from the previous hop is received and acknowledged with an echo response by the next hop.	detail
Response time	Time for the echo request to reach the receiver.	detail
MTU	Size of the largest packet that includes the label stack forwarded to the next hop.	detail
Multipath type	Labels or addresses used by the specified multipath type. If multipaths are not used, the value is none.	detail
Label stack	Label stack used to forward the packet.	detail
Path	Displays the sub-lsp path number for this traceroute, the interface used, and the destination address.	all levels

Sample Output

traceroute mpls rsvp

```
user@host> traceroute mpls rsvp lsp-chicago-atlanta
```

```
Probe options: retries 3, exp 7
```

ttl	Label	Protocol	Address	Previous Hop	Probe Status
1	299792	RSVP-TE	192.168.1.2	(null)	Success
2	299803	RSVP-TE	192.168.2.3	192.168.1.2	Success
3	3	RSVP-TE	192.168.3.4	192.168.2.3	Egress

```
Path 1 via ge-0/0/0.1 destination 127.0.0.64
```

traceroute mpls rsvp detail

```
user@host> traceroute mpls rsvp lsp-chicago-atlanta detail
```

```
Probe options: retries 3, exp 7
```

```
Hop 192.168.1.2 Depth 1
```

```
Probe status: Success
```

```
Parent: (null)
```

```
Return code: Label-switched at stack-depth 1
```

```
Sender timestamp: 2008-04-17 09:35:27 EDT 400.88 msec
```

```
Receiver timestamp: 2008-04-17 09:35:27 EDT 427.87 msec
```

```
Response time: 26.99 msec
```

```
MTU: Unknown
```

```
Multipath type: IP bitmask
```

```
Address Range 1: 127.0.0.64 ~ 127.0.0.127
```

```
Label Stack:
```

```
Label 1 Value 299792 Protocol RSVP-TE
```

```
Hop 192.168.2.3 Depth 2
```

```
Probe status: Success
```

```
Parent: 192.168.1.2
```

```
Return code: Upstream interface index unknown label-switched at stack-depth 1
```

```
Sender timestamp: 2008-04-17 09:35:27 EDT 522.13 msec
```

```
Receiver timestamp: 2008-04-17 09:35:27 EDT 548.69 msec
```

```
Response time: 26.55 msec
```

```
MTU: 1518
```

```
Multipath type: IP bitmask
```

```
Address Range 1: 127.0.0.64 ~ 127.0.0.127
```

```
Label Stack:
```

```
Label 1 Value 299803 Protocol RSVP-TE
```

traceroute mpls rsvp multipoint (branch node for sub-LSPs)

The following traceroute output is for a point-to-multipoint LSP where the penultimate node is a branch node for the sub-LSPs.

```
user@host> traceroute mpls rsvp multipoint p2mplsp
```

```
Probe options: retries 3, exp 7
```

ttl	Label	Protocol	Address	Previous Hop	Probe Status
1	300000	RSVP-TE	81.1.2.2	(null)	Success
2	299968	RSVP-TE	81.2.3.3	81.1.2.2	Success
3	299952	RSVP-TE	81.3.4.4	81.2.3.3	Success
4	299920	RSVP-TE	81.4.6.6	81.3.4.4	Egress

Path 1 via lt-1/2/0.102 destination 127.0.0.64

ttl	Label	Protocol	Address	Previous Hop	Probe Status
4	299920	RSVP-TE	81.4.5.5	81.3.4.4	Egress

Path 2 via lt-1/2/0.102 destination 127.0.0.64

traceroute mpls rsvp multipoint (single-hop sub-LSPs)

The following traceroute output is for a point-to-multipoint LSP with multiple single-hop sub-LSPs.

```
user@host> traceroute mpls rsvp multipoint p2mplsp
```

Probe options: retries 3, exp 7

ttl	Label	Protocol	Address	Previous Hop	Probe Status
1	0	RSVP-TE	81.1.2.2	(null)	Egress

Path 1 via lt-1/2/0.102 destination 127.0.0.64

ttl	Label	Protocol	Address	Previous Hop	Probe Status
1	0	RSVP-TE	81.1.8.8	(null)	Egress

Path 2 via lt-1/2/0.108 destination 127.0.0.64

ttl	Label	Protocol	Address	Previous Hop	Probe Status
1	0	RSVP-TE	81.1.9.9	(null)	Egress

Path 3 via lt-1/2/0.109 destination 127.0.0.64

LDP Operational Commands

IN THIS CHAPTER

- `clear ldp neighbor` | 2547
- `clear ldp session` | 2548
- `clear ldp statistics` | 2550
- `ping mpls ldp` | 2551
- `ping mpls segment routing ospf` | 2554
- `ping mpls segment routing isis` | 2557
- `show ldp database` | 2560
- `show ldp fec-filters` | 2571
- `show ldp interface` | 2573
- `show ldp neighbor` | 2575
- `show ldp overview` | 2578
- `show ldp p2mp tunnel` | 2583
- `show ldp path` | 2584
- `show ldp route` | 2586
- `show ldp session` | 2597
- `show ldp statistics` | 2605
- `show ldp traffic-statistics` | 2611
- `show security keychain` | 2616
- `traceroute mpls ldp` | 2619
- `traceroute mpls segment-routing ospf` | 2624
- `traceroute mpls segment-routing isis` | 2628

clear ldp neighbor

Syntax

```
clear ldp neighbor  
<instance instance-name>  
<logical-system (all | logical-system-name)>  
<neighbor>
```

Description

Tear down Label Distribution Protocol (LDP) neighbor connections.

Options

none—Tear down connections with all LDP neighbors for all routing instances.

instance *instance name*—(Optional) Clear the LDP session for the specified routing instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

neighbor—(Optional) Clear an LDP session for the specified neighbor (IP address) only.

Required Privilege Level

clear

RELATED DOCUMENTATION

| [show ldp neighbor](#) | [2575](#)

List of Sample Output

[clear ldp neighbor on page 2547](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear ldp neighbor

user@host> clear ldp neighbor

clear ldp session

Syntax

```
clear ldp session  
<all>  
<destination>  
<instance instance-name>  
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Clear Label Distribution Protocol (LDP) sessions.

Options

all—Clear LDP sessions for all destinations for all routing instances.

destination—(Optional) Clear an LDP session for the specified destination (IP address).

instance *instance-name*—(Optional) Clear the LDP session for the specified routing instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

clear

RELATED DOCUMENTATION

| [show ldp session](#) | [2597](#)

List of Sample Output

[clear ldp session on page 2549](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear ldap session

```
user@host> clear ldap session all
```

clear ldp statistics

Syntax

```
clear ldp statistics  
<instance instance-name>  
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Set all Label Distribution Protocol (LDP) statistics to zero.

Options

none—Set all LDP statistics to zero for all routing instances.

instance *instance-name*—(Optional) Clear the LDP session for the specified routing instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

clear

RELATED DOCUMENTATION

[show ldp statistics | 2605](#)

[show ldp traffic-statistics | 2611](#)

List of Sample Output

[clear ldp statistics on page 2550](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear ldp statistics

```
user@host> clear ldp statistics
```

ping mpls ldp

Syntax

```
ping mpls ldp fec
<count count>
<destination address>
<detail>
<exp forwarding-class>
<instance routing-instance-name>
<logical-system (all | logical-system-name)>
<p2mp root-addr ip-address lsp-id identifier>
<size bytes>
<source source-address>
<stitched-protocol>
<sweep>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

size and **sweep** options introduced in Junos OS Release 9.6.

instance option introduced in Junos OS Release 10.0.

p2mp, **root-address**, and **lsp-id** options introduced in Junos OS Release 11.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Check the operability of MPLS LDP-signaled label-switched path (LSP) connections. Type Ctrl+c to interrupt a **ping mpls** command.

Options

count *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is **1** through **1,000,000**. The default value is **5**.

destination *address*—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

detail—(Optional) Display detailed information about the echo requests sent and received.

exp *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

fec—Ping an LDP-signaled LSP using the forwarding equivalence class (FEC) prefix and length.

instance *routing-instance-name*—(Optional) Allows you to ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP.

logical-system (**all** | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

p2mp root-addr ip-address lsp-id identifier—(Optional) Ping the end points of a point-to-multipoint LSP. Enter the IP address of the point-to-multipoint LSP root and the ID number of the point-to-multipoint LSP.

size bytes—(Optional) Size of the LSP ping request packet (**88** through **65468** bytes). Packets are 4-byte aligned. For example, If you enter a size of 89, 90, 91, or 92, the router or switch uses a size value of 92 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 88-byte minimum.

source source-address—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

stitched-protocol—(Optional) Protocol stitched on intermediate node.

sweep—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

Additional Information

If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

You can configure the ping interval for the **ping mpls ldp** command by specifying a new time in seconds using the **lsp-ping-interval** statement at the **[edit protocols ldp oam]** hierarchy level. For more information, see the *MPLS Applications User Guide*.

In asymmetric MTU scenarios, the echo response may be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

NOTE: In a Juniper-Cisco interoperation network scenario, a point-to-multipoint LSP ping echo reply message from a Cisco device in a different IGP area is dropped on the Juniper device when the source address of the reply message is an interface address other than the loopback address or router ID. Starting in Junos OS Release 13.3X8, 14.2R6, 15.1R4, 15.1F6, 15.1F5-S8, 16.1R1, and later releases, such point-to-multipoint LSP ping echo reply messages are accepted by the Juniper device and the messages get logged as uncorrelated responses.

Required Privilege Level

network

List of Sample Output

[ping mpls ldp fec count on page 2553](#)

[ping mpls ldp p2mp root-addr lsp-id on page 2553](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with error codes are not counted in the received packets count. They are accounted for separately.

Sample Output

ping mpls ldp fec count

```
user@host> ping mpls ldp 10.255.245.222 count 10
```

```
!!!xxx...x--- lsping statistics ---10 packets transmitted, 3 packets received, 70%
packet loss 4 packets received with error status, not counted as received.
```

ping mpls ldp p2mp root-addr lsp-id

```
user@host> ping mpls ldp p2mp root-addr 10.1.1.1/32 lsp-id 1 count 1
```

```
Request for seq 1, to interface 71, no label stack.
Request for seq 1, to interface 70, label 299786
Reply for seq 1, egress 10.1.1.3, return code: Egress-ok, time: 18.936 ms
    Local transmit time: 2009-01-12 03:50:03 PST 407.281 ms
    Remote receive time: 2009-01-12 03:50:03 PST 426.217 ms
Reply for seq 1, egress 10.1.1.4, return code: Egress-ok, time: 18.936 ms
    Local transmit time: 2009-01-12 03:50:03 PST 407.281 ms
    Remote receive time: 2009-01-12 03:50:03 PST 426.217 ms
Reply for seq 1, egress 10.1.1.5, return code: Egress-ok, time: 18.936 ms
    Local transmit time: 2009-01-12 03:50:03 PST 407.281 ms
    Remote receive time: 2009-01-12 03:50:03 PST 426.217 ms
```

ping mpls segment routing ospf

Syntax

```
ping mpls segment routing ospf fec
<count count>
<destination address>
<detail>
<exp forwarding-class>
<instance routing-instance-name>
<logical-system (all | logical-system-name)>
<p2mp root-addr ip-address lsp-id identifier>
<size bytes>
<source source-address>
<stitched-protocol>
<sweep>
```

Release Information

Command introduced in Junos OS Release 19.1R1

Description

Check the operability of MPLS segment routing label-switched path (LSP) connections added by ospf protocol. Type Ctrl+c to interrupt a **ping mpls segment routing ospf** command.

Options

count *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is **1** through **1,000,000**. The default value is **5**.

destination *address*—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

detail—(Optional) Display detailed information about the echo requests sent and received.

exp *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

fec—Ping an LDP-signaled LSP using the forwarding equivalence class (FEC) prefix and length.

instance *routing-instance-name*—(Optional) Allows you to ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

p2mp root-addr *ip-address* *lsp-id identifier*—(Optional) Ping the end points of a point-to-multipoint LSP. Enter the IP address of the point-to-multipoint LSP root and the ID number of the point-to-multipoint LSP.

size bytes—(Optional) Size of the LSP ping request packet (88 through 65468 bytes). Packets are 4-byte aligned. For example, If you enter a size of 89, 90, 91, or 92, the router or switch uses a size value of 92 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 88-byte minimum.

source source-address—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (lo.0).

stitched-protocol—(Optional) Protocol stitched on intermediate node.

sweep—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

Required Privilege Level

network

List of Sample Output

[ping mpls segment-routing ospf on page 2555](#)

[ping mpls segment-routing isis on page 2555](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with error codes are not counted in the received packets count. They are accounted for separately.

Sample Output

ping mpls segment-routing ospf

```
user@host>ping mpls segment-routing ospf 6.6.6.6
```

```
!!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

ping mpls segment-routing isis

```
user@host>ping mpls segment-routing ospf 6.6.6.6 detail
```

```
Request for seq 1, to interface 333, label 22, packet size 80
Reply for seq 1, return code: Egress-ok, time: -7542.667 ms
    Local transmit time: 2019-03-06 11:55:03 IST 639.914 ms
```

```
Remote receive time: 2019-03-06 11:54:56 IST 97.247 ms
Request for seq 2, to interface 333, label 22, packet size 80
Reply for seq 2, return code: Egress-ok, time: -7543.680 ms
Local transmit time: 2019-03-06 11:55:04 IST 641.965 ms
Remote receive time: 2019-03-06 11:54:57 IST 98.285 ms
Request for seq 3, to interface 333, label 22, packet size 80
Reply for seq 3, return code: Egress-ok, time: -7530.457 ms
Local transmit time: 2019-03-06 11:55:05 IST 639.923 ms
Remote receive time: 2019-03-06 11:54:58 IST 109.466 ms
Request for seq 4, to interface 333, label 22, packet size 80
Reply for seq 4, return code: Egress-ok, time: -7540.548 ms
Local transmit time: 2019-03-06 11:55:06 IST 642.870 ms
Remote receive time: 2019-03-06 11:54:59 IST 102.322 ms
Request for seq 5, to interface 333, label 22, packet size 80
Reply for seq 5, return code: Egress-ok, time: -7540.672 ms
Local transmit time: 2019-03-06 11:55:07 IST 646.870 ms
Remote receive time: 2019-03-06 11:55:00 IST 106.198 ms

--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

ping mpls segment routing isis

Syntax

```
ping mpls segment routing isis fec
<count count>
<destination address>
<detail>
<exp forwarding-class>
<instance routing-instance-name>
<logical-system (all | logical-system-name)>
<p2mp root-addr ip-address lsp-id identifier>
<size bytes>
<source source-address>
<stitched-protocol>
<sweep>
```

Release Information

Command introduced in Junos OS Release 19.1R1

Description

Check the operability of MPLS segment routing label-switched path (LSP) connections added by ISIS protocol. Type Ctrl+c to interrupt a **ping mpls segment routing isis** command.

Options

count *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is **1** through **1,000,000**. The default value is **5**.

destination *address*—(Optional) Specify an address other than the default (**127.0.0.1/32**) for the ping echo requests. The address can be anything within the **127/8** subnet.

detail—(Optional) Display detailed information about the echo requests sent and received.

exp *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

fec—Ping an LDP-signaled LSP using the forwarding equivalence class (FEC) prefix and length.

instance *routing-instance-name*—(Optional) Allows you to ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP.

logical-system (*all* | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

p2mp root-addr *ip-address* *lsp-id identifier*—(Optional) Ping the end points of a point-to-multipoint LSP. Enter the IP address of the point-to-multipoint LSP root and the ID number of the point-to-multipoint LSP.

size bytes—(Optional) Size of the LSP ping request packet (88 through 65468 bytes). Packets are 4-byte aligned. For example, If you enter a size of 89, 90, 91, or 92, the router or switch uses a size value of 92 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 88-byte minimum.

source source-address—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (lo.0).

stitched-protocol—(Optional) Protocol stitched on intermediate node.

sweep—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

Required Privilege Level

network

List of Sample Output

[ping mpls segment-routing isis on page 2558](#)

[ping mpls segment-routing isis on page 2558](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with error codes are not counted in the received packets count. They are accounted for separately.

Sample Output

ping mpls segment-routing isis

```
user@host>ping mpls segment-routing isis 6.6.6.6
```

```
!!!!!
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

ping mpls segment-routing isis

```
user@host>ping mpls segment-routing isis 6.6.6.6 detail
```

```
Request for seq 1, to interface 333, label 402006, packet size 80
Reply for seq 1, return code: Egress-ok, time: -7539.106 ms
    Local transmit time: 2019-03-06 11:54:15 IST 966.883 ms
```

```
Remote receive time: 2019-03-06 11:54:08 IST 427.777 ms
Request for seq 2, to interface 333, label 402006, packet size 80
Reply for seq 2, return code: Egress-ok, time: -7535.925 ms
Local transmit time: 2019-03-06 11:54:16 IST 978.890 ms
Remote receive time: 2019-03-06 11:54:09 IST 442.965 ms
Request for seq 3, to interface 333, label 402006, packet size 80
Reply for seq 3, return code: Egress-ok, time: -7526.134 ms
Local transmit time: 2019-03-06 11:54:17 IST 972.870 ms
Remote receive time: 2019-03-06 11:54:10 IST 446.736 ms
Request for seq 4, to interface 333, label 402006, packet size 80
Reply for seq 4, return code: Egress-ok, time: -7539.500 ms
Local transmit time: 2019-03-06 11:54:18 IST 967.014 ms
Remote receive time: 2019-03-06 11:54:11 IST 427.514 ms
Request for seq 5, to interface 333, label 402006, packet size 80
Reply for seq 5, return code: Egress-ok, time: -7539.605 ms
Local transmit time: 2019-03-06 11:54:19 IST 969.893 ms
Remote receive time: 2019-03-06 11:54:12 IST 430.288 ms

--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

show ldp database

Syntax

```
show ldp database
<brief | detail | extensive>
<inet | l2circuit>
<instance instance-name>
<logical-system (all | logical-system-name)>
<p2mp>
<session session>
<summary>
```

Release Information

Command introduced before Junos OS Release 7.4.

summary option introduced in Junos OS Release 14.2.

Description

Display entries in the LDP database.

Options

none—Display standard information about all entries in the LDP database for all routing instances.

brief | detail | extensive—(Optional) Display the specified level of output.

inet | l2circuit—(Optional) Display only IPv4 or Layer 2 circuit bindings.

instance *instance-name*—(Optional) Display routing instance information for the specified instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

p2mp—(Optional) Display point-to-multipoint binding information.

session *session*—(Optional) Display database for the specified session only. ***session*** is the destination address of the LDP session.

summary—(Optional)—Display summary output. This option displays the number of labels received and advertised for each LDP session.

Required Privilege Level

view

List of Sample Output

[show ldp database \(master\) on page 2563](#)

[show ldp database \(standby\) on page 2564](#)

[show ldp database l2circuit detail on page 2566](#)

[show ldp database l2circuit extensive on page 2566](#)

[show ldp database p2mp \(master\) on page 2567](#)

[show ldp database p2mp \(standby\) on page 2567](#)

[show ldp database session on page 2567](#)

[show ldp database \(Ingress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 2568](#)

[show ldp database \(Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 2569](#)

[show ldp database summary on page 2570](#)

Output Fields

Table 86 on page 2561 describes the output fields for the **show ldp database** command. Output fields are listed in the approximate order in which they appear.

Table 86: show ldp database Output Fields

Field Name	Field Description	Level of Output
Input label database	Label received from the other router.	All levels
Output label database	Label advertised to the other router.	All levels
<i>session-identifier</i>	Session identifier, which includes the local and remote label space identifiers.	All levels
Labels received	Number of labels received from the other router.	All levels
Labels advertised	Number of labels advertised to the other router.	All levels.
Label	Label binding to a route prefix.	All levels

Table 86: show ldp database Output Fields (*continued*)

Field Name	Field Description	Level of Output
Prefix	<p>Route prefix.</p> <p>It can be one of the following values:</p> <ul style="list-style-type: none"> • IP prefix. • Point-to-multipoint root address, multicast source address, and multicast group address when multipoint LDP (M-LDP) inband signaling is configured. • Layer 2 encapsulation type. <p>Layer 2 encapsulation types are displayed in the format L2CKT control word status encapsulation-type vc-number, for example, L2CKT CtlfWord FRAME RELAY VC 2</p> <ul style="list-style-type: none"> • control-word-status—Displays whether the use of the control word has been negotiated for this virtual circuit: <ul style="list-style-type: none"> • NoCtrlWord • CtrlWord • encapsulation-type—Encapsulation type: <ul style="list-style-type: none"> • FRAME RELAY • ATM AAL5 • ATM CELL • VLAN • ETHERNET • CISCO_HDLC • PPP • VC number—Virtual circuit number. It can have any numeric value. • (Stale)—When you display the LDP database for the neighbor of a restarting router, the bindings learned from the restarting neighbor are displayed as (Stale). Stale bindings are deleted if they are not refreshed within the recovery time. 	All levels
MTU	MTU of the Layer 2 circuit. MTU is displayed for all encapsulation types except ATM cell encapsulations.	detail
VCCV Control Channel types	<p>Virtual Circuit Connection Verification (VCCV) control channel types.</p> <ul style="list-style-type: none"> • MPLS router alert label • MPLS PW label with TTL=1 	extensive

Table 86: show ldp database Output Fields (*continued*)

Field Name	Field Description	Level of Output
VCCV Control Verification types	The only valid VCCV control verification type is LSP ping .	extensive
TDM payload size	Size of the Time Division Multiplex (TDM) payload.	All levels
TDM bitrate	Bit rate for the TDM traffic.	All levels
Requested VLAN ID	(VLANs) VLAN identifier of the Layer 2 circuit.	detail
Cell bundle size	(ATM cell encapsulations) Maximum number of cells that the Layer 2 circuit can receive in a packet.	detail
State	State of the label binding: <ul style="list-style-type: none"> • Active—Label binding has been installed and distributed appropriately. A label binding is almost always in this state. • New—New label that has not yet been distributed. <ul style="list-style-type: none"> • MapRcv—Waiting to receive a label mapping message. • MapSend—Waiting to send a label mapping message. • RelRcv—Waiting to receive a label release message. • RelRsnd—Waiting to receive a label release message before resending label mapping message. • RelSend—Waiting to send a label release message. • ReqSend—Waiting to send a label request message. • W/dSend—Waiting to send a label withdrawal message. 	detail
Age	Time elapsed since the binding was created.	detail

Sample Output

```
show ldp database (master)
```

```
user@host> show ldp database extensive
```

```

Input label database, 10.255.107.232:0--10.255.107.236:0
  Label      Prefix
299840      10.255.107.232/32
            State: Active
            Age: 9:35
            Entropy Label Capability: No
      3      10.255.107.236/32
            State: Active
            Age: 9:35
            Entropy Label Capability: No
299776      L2CKT CtrlWord VLAN VC 100
            MTU: 1500 Requested VLAN ID: 600 Flow Label T Bit: 1 Flow Label R Bit:
1
            State: Active
            Age: 9:35
            Entropy Label Capability: No
            VCCV Control Channel types:
              PWE3 control word
              MPLS router alert label
              MPLS PW label with TTL=1
            VCCV Control Verification types:
              LSP ping
              BFD with PW-ACH-encapsulation for Fault Detection
              BFD with IP/UDP-encapsulation for Fault Detection

Output label database, 10.255.107.232:0--10.255.107.236:0
  Label      Prefix
      3      10.255.107.232/32
            State: Active
            Age: 9:35
            Entropy Label Capability: No
299776      10.255.107.236/32
            State: Active
            Age: 9:35
            Entropy Label Capability: No

```

show ldp database (standby)

```
user@host> show ldp database extensive
```

```

Input label database, 10.255.107.236:0--10.255.107.234:0
  Label      Prefix
299808      10.255.107.230/32

```

```

        State: Active
        Age: 1d 2:46:36
        Standby binding state:
            Map messages: 1
            Release messages: 0
    Label Prefix
301136 10.255.107.232/32
        State: Active
        Age: 1d 2:46:36
        Standby binding state:
            Map messages: 1
            Release messages: 0
    Label Prefix
    3 10.255.107.234/32
        State: Active
        Age: 1d 2:46:36
        Standby binding state:
            Map messages: 1
            Release messages: 0
    Label Prefix
302480 10.255.107.236/32
        State: Active
        Age: 1d 2:46:36
        Standby binding state:
            Map messages: 1
            Release messages: 0

Output label database, 10.255.107.236:0--10.255.107.234:0
    Label Prefix
299904 10.255.107.230/32
        State: Active
        Age: 1d 2:46:36
299936 10.255.107.232/32
        State: Active
        Age: 1d 2:46:36
299872 10.255.107.234/32
        State: Active
        Age: 1d 2:46:36
    3 10.255.107.236/32
        State: Active
        Age: 1d 2:46:36
299952 P2MP root-addr 10.255.107.230, lsp-id 16777217
        State: Active
        Age: 1d 2:46:36

```

show ldp database l2circuit detail

```
user@host> show ldp database l2circuit detail
```

```
Input label database, 10.255.245.44:0--10.255.245.45:0
  Label      Prefix
  100176     L2CKT CtrlWord ATM CELL (VC Mode) VC 100
              Cell bundle size: 80
              State: Active
              Age: 9:48
  100256     L2CKT CtrlWord FRAME RELAY VC 101
              MTU: 4470
              State: Active
              Age: 9:48

Output label database, 10.255.245.44:0--10.255.245.45:0
  Label      Prefix
  100048     L2CKT CtrlWord ATM CELL (VC Mode) VC 100
              Cell bundle size: 80
              State: Active
              Age: 9:48
  100112     L2CKT CtrlWord FRAME RELAY VC 101
              MTU: 4470
              State: Active
              Age: 9:48
```

show ldp database l2circuit extensive

```
user@host> show ldp database l2circuit extensive
```

```
Input label database, 10.255.245.198:0--10.255.245.194:0
  Label      Prefix
  299872     L2CKT CtrlWord PPP VC 100
              MTU: 4470
              VCCV Control Channel types:
                  MPLS router alert label
                  MPLS PW label with TTL=1
              VCCV Control Verification types:
                  LSP ping
  Label      Prefix
              State: Active
              Age: 19:23:08
```

show ldp database p2mp (master)

```
user@host> show ldp database p2mp extensive
```

```
Input label database, 10.255.107.232:0--10.255.107.236:0
  Label      Prefix
  569649     P2MP root-addr 10.255.107.232, lsp-id 16777217
              State: Active
              Age: 2d 6:41:46

Output label database, 10.255.107.232:0--10.255.107.236:0

Input label database, 10.255.107.232:0--10.255.107.238:0

Output label database, 10.255.107.232:0--10.255.107.238:0
  Label      Prefix
  299888     P2MP root-addr 10.255.107.230, lsp-id 16777217
              State: Active
              Age: 2d 6:41:35
```

show ldp database p2mp (standby)

```
user@host> show ldp database p2mp extensive
```

```
Input label database, 10.255.107.236:0--10.255.107.232:0
  Label      Prefix
  299968     P2MP root-addr 10.255.107.230, lsp-id 16777217
              State: Active
              Age: 4d 22:21:57
              Standby binding state:
                  Map messages: 1
                  Release messages: 0

Output label database, 10.255.107.236:0--10.255.107.232:0
  Label      Prefix
  3          P2MP root-addr 10.255.107.232, lsp-id 1
              State: Active
              Age: 4d 22:21:57
```

show ldp database session

```
user@host> show ldp database session 10.1.1.195
```

Input label database, 10.0.0.194:0--10.1.1.195:0

Label	Prefix
100002	10.255.245.197/32
100003	10.255.245.196/32
100004	10.0.0.194/32
3	10.1.1.195/32
100000	L2CKT NoCtrlWord FRAME RELAY VC 1
100001	L2CKT CtrlWord FRAME RELAY VC 2

Output label database, 10.0.0.194:0--10.1.1.195:0

Label	Prefix
100003	10.255.245.197/32
100004	10.1.1.195/32
100002	10.255.245.196/32
3	10.0.0.194/32
100000	L2CKT CtrlWord FRAME RELAY VC 2
100001	L2CKT NoCtrlWord FRAME RELAY VC 1

show ldp database (Ingress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

user@host> show ldp database

Input label database, 1.1.1.2:0--1.1.1.3:0

Label	Prefix
299808	1.1.1.2/32
3	1.1.1.3/32
299792	1.1.1.6/32
299776	10.255.2.227/32
299840	P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
299824	P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11

Output label database, 1.1.1.2:0--1.1.1.3:0

Label	Prefix
3	1.1.1.2/32
299776	1.1.1.3/32
299808	1.1.1.6/32
299792	10.255.2.227/32

Input label database, 1.1.1.2:0--1.1.1.6:0

Label	Prefix
299856	1.1.1.2/32
299792	1.1.1.3/32
3	1.1.1.6/32
299776	10.255.2.227/32
299888	P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7


```

299808      P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
299824      P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11
299840      P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11
299872      P2MP root-addr 1.1.1.2, grp: ff3e::1:2, src: abcd::1:2:7:7

```

Output label database, 1.1.1.2:0--1.1.1.6:0

Label	Prefix
3	1.1.1.2/32
299776	1.1.1.3/32
299808	1.1.1.6/32
299792	10.255.2.227/32

show ldp database (Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

user@host> show ldp database

Input label database, 10.255.2.227:0--1.1.1.3:0

Label	Prefix
299808	1.1.1.2/32
3	1.1.1.3/32
299792	1.1.1.6/32
299776	10.255.2.227/32

Output label database, 10.255.2.227:0--1.1.1.3:0

Label	Prefix
299856	1.1.1.2/32
299776	1.1.1.3/32
299792	1.1.1.6/32
3	10.255.2.227/32

Input label database, 10.255.2.227:0--1.1.1.6:0

Label	Prefix
299856	1.1.1.2/32
299792	1.1.1.3/32
3	1.1.1.6/32
299776	10.255.2.227/32

Output label database, 10.255.2.227:0--1.1.1.6:0

Label	Prefix
299856	1.1.1.2/32
299776	1.1.1.3/32
299792	1.1.1.6/32
3	10.255.2.227/32
299888	P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7

```
299808      P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
299824      P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11
299840      P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11
299872      P2MP root-addr 1.1.1.2, grp: ff3e::1:2, src: abcd::1:2:7:7
```

show ldp database summary

```
user@host> show ldp database summary
```

Session ID	Labels received	Labels advertised
10.255.0.1:0--10.255.0.2:0	4	4
10.255.0.1:0--10.255.0.3:0	4	4

show ldp fec-filters

Syntax

```
show ldp fec-filters
<fec>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Display information about configured Label Distribution Protocol (LDP) forwarding equivalence class (FEC) filters.

Options

- fec**—(Optional) Display FEC filter information for the specified FEC.
- instance *instance-name***—(Optional) Display FEC filter information for the specified instance.
- logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show ldp fec-filters on page 2572](#)

Output Fields

[Table 87 on page 2571](#) lists the output fields for the **show ldp fec-filters** command. Output fields are listed in the approximate order in which they appear.

Table 87: show ldp fec-filters Output Fields

Field Name	Field Description
Ingress	Names of the FEC filters on the ingress routers.
Transit	Names of the FEC filters on the transit routers.

Sample Output

show ldp fec-filters

user@host> **show ldp fec-filters 10/8**

```
10.22.1.2/32
  Ingress: f1-10.22.1.2/32 (index: 3)
  Transit: (null) (index: 0)
```

show ldp interface

Syntax

```
show ldp interface
<brief | detail | extensive>
<interface-name>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Display the status of Label Distribution Protocol (LDP)-enabled interfaces.

Options

- none**—Display standard status information about all LDP-enabled interface for all routing instances.
- interface-name**—(Optional) Display information for the specified interface.
- brief | detail | extensive**—(Optional) Display the specified level of output.
- instance instance-name**—(Optional) Display information for the specified routing instance.
- logical-system (all | logical-system-name)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show ldp interface extensive on page 2574](#)

Output Fields

[Table 88 on page 2573](#) describes the output fields for the **show ldp interface** command. Output fields are listed in the approximate order in which they appear.

Table 88: show ldp interface Output Fields

Field Name	Field Description	Level of Output
Interface	Interface name.	All levels

Table 88: show ldp interface Output Fields (*continued*)

Field Name	Field Description	Level of Output
Label space ID	Label space identifier that the router is advertising on the interface.	All levels
Nbr count	Number of neighbors on the interface.	All levels
Next hello	How long until the next hello packet is sent on this interface, in seconds.	All levels
Hello interval	One-third of the negotiated hold time (in seconds). If the user-configured value for the hello interval is smaller than the computed value, the user-configured value is used.	detail extensive
Hold time	Configured hold time, in seconds.	detail extensive
Transport address	Address to which the neighbor wants the local route to establish the LDP session.	extensive
Local hello interval	Locally configured hello interval.	extensive

Sample Output

show ldp interface extensive

user@host> **show ldp interface extensive**

```

Interface          Label space ID      Nbr count  Next hello
fe-0/0/3.0         10.255.245.6:0      2           0
  Hello interval: 1, Hold time: 15, Transport address: 10.255.245.6
  Local hello interval: 2, Index: 69

```

show ldp neighbor

Syntax

```
show ldp neighbor
<brief | detail | extensive>
<auto-targeted>
<instance instance-name>
<logical-system (all | logical-system-name)>
<neighbor-address>
```

Release Information

Command introduced before Junos OS Release 7.4.

neighbor-address option added in Junos OS Release 8.5.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

auto-targeted option added in Junos OS Release 14.2.

Description

Display Label Distribution Protocol (LDP) neighbor information.

Options

none—Display standard information about LDP neighbors for all routing instances.

brief | detail | extensive—(Optional) Display the specified level of output.

auto-targeted—(Optional) Display information about LDP neighbors that are automatically targeted using the loopback addresses.

instance *instance-name*—(Optional) Display information for the specified routing instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

neighbor-address—(Optional) Display information about the specified LDP neighbor.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear ldp neighbor](#) | [2547](#)

List of Sample Output

[show ldp neighbor extensive on page 2576](#)

[show ldp neighbor auto-targeted extensive on page 2577](#)

Output Fields

[Table 89 on page 2576](#) describes the output fields for the **show ldp neighbor** command. Output fields are listed in the approximate order in which they appear.

Table 89: show ldp neighbor Output Fields

Field Name	Field Description	Level of Output
Address	IP address of the neighbor.	All levels
Interface	Interface over which the neighbor was discovered.	All levels
Label space ID	Label space identifier advertised by the neighbor.	All levels
Hold time	Remaining hold time before the neighbor expires, in seconds.	All levels
Transport address	Address to which the neighbor wants the local route to establish the LDP session.	detail
Configuration sequence	Counter that increments whenever the neighbor changes its configuration.	detail
Up for	Length of time the LDP neighbor has been in operation.	detail extensive
Reference count	Reference count for the LDP neighbor.	extensive
Hold time	Displays the neighbor's hold time. The hold time is the proposed hold times for the local and peer routers.	extensive
Proposed local/peer	Hold time value proposed by the local router and the peer router.	extensive

Sample Output

show ldp neighbor extensive

```
user@host> show ldp neighbor extensive
```

```

Address          Interface      Label space ID   Hold Time
192.168.37.23    so-1/0/0.0    10.255.245.5:0   44
  Transport address: 10.255.245.5, Configuration sequence: 6
```



```
Up for 00:03:37
Reference count: 1
Hold time: 45, Proposed local/peer: 15/45
```

show ldp neighbor auto-targeted extensive

```
user@host> show ldp neighbor auto-targeted extensive
```

```
Address          Interface      Label space ID      Hold time
10.255.107.236   lo0.0         10.255.107.236:0    41
  Transport address: 10.255.107.236, Configuration sequence: 14
  Up for 00:10:53
  Reference count: 2
  Hold time: 45, Proposed local/peer: 45/45
  Hello interval: 15
  Hello flags: targeted
  Neighbor types: Auto-targeted
```

show ldp overview

Syntax

```
show ldp overview
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switch and QFX Series)

```
show ldp overview
<instance instance-name>
```

Release Information

Command introduced in Junos OS Release 11.2.

Description

Display LDP overview information.

Options

none— Display standard overview information about LDP for all routing instances.

instance *instance-name*— (Optional) Display LDP overview information for the specified routing instance.

logical-system (all | *logical-system-name*)— (Optional) Display LDP information from systems or a particular logical system on the devices.

Required Privilege Level

view

List of Sample Output

[show ldp overview on page 2581](#)

Output Fields

[Table 90 on page 2578](#) lists the output fields for the **show ldp overview** command. Output fields are listed in the approximate order in which they appear.

Table 90: show ldp overview Output Fields

Field Name	Field description	Level of Output
Instance	LDP routing instance.	All Levels
Router ID	Router ID of the routing device.	All Levels

Table 90: show ldp overview Output Fields (*continued*)

Field Name	Field description	Level of Output
Message ID	Unique identifier of message.	All Levels
Configuration sequence	Value of configuration sequence.	All Levels
Deaggregate	Status of control forwarding equivalence class (FEC) deaggregation on the router. By default it is disabled on the router.	All Levels
Explicit null	Advertise label 0 to the egress routing device of an LSP. Explicit null: enabled or disabled . NOTE: If you do not include the explicit-null statement in the configuration, label 3 (implicit null) is advertised.	All Levels
IPv6 tunneling	Internet Protocol version 6 tunneling: enabled or disabled .	All Levels
Strict targeted hellos	Prevent LDP sessions from being established with remote neighbors that have not been specifically configured. Strict targeted hellos: enabled or disabled . NOTE: LDP peers will not respond to targeted hellos coming from a source that is not one of the configured remote neighbors.	All Levels
Loopback if added	Loopback interface is added: yes or no .	All Levels
Route preference	Default preference value (also known as an administrative distance) assigned to each route that the routing table receives. LDP preference is: 9	All Levels
Unicast transit LSP chaining	Unicast transit LSP chaining: enabled or disabled .	All Levels
P2MP transit LSP chaining	P2MP transit LSP chaining: enabled or disabled .	All Levels
Transit LSP statistics based on route statistics	Transit LSP statistics based on route statistics: enabled or disabled .	All Levels
Longest match	Longest match for label mapping: enabled or disabled .	All Levels
Capabilities enabled	Enabled capabilities: none	All Levels

Table 90: show ldp overview Output Fields (*continued*)

Field Name	Field description	Level of Output
Timers	<ul style="list-style-type: none"> • Keepalive interval: Keepalive interval value. • Keepalive timeout: Time interval for which the neighbor LDP node waits before determining session failure. • Link hello interval: Specify how often the router sends Link Management Protocol (LMP) hello packets. • Link hello hold time: Time interval for which an LDP node waits for a hello message before declaring a neighbor is down. • Targeted hello interval: Specify how often LDP sends targeted hello messages. • Targeted hello hold time: Time interval for which a sending LSR maintains a record of targeted hello messages from the receiving LSR without receipt of another targeted hello message from that LSR. • Label withdraw delay: Time interval for withdrawing labels to reduce router workload during IGP convergence. 	All Levels
Graceful restart	<p>Graceful restart attributes.</p> <ul style="list-style-type: none"> • Restart– Graceful restart capability: enabled or disabled. • Helper– Standard graceful restart helper capability: enabled or disabled. • Restart in process– Graceful restart in process. • Reconnect time– Period of time that a restarting LSR (label switched router) designates to LDP neighbors to wait until the former reestablishes the session after restarting. • Max neighbor reconnect time– Maximum reconnect time. • Recovery time– Period of time that an LSR preserves its state across the restart. • Max neighbor recovery time– Maximum recovery time designated to LDP neighbors by a restarting LSR. 	All Levels
Traffic Engineering	<ul style="list-style-type: none"> • Bgp igp– BGP and IGP destinations: enabled or disabled. When enabled, IGP's use MPLS paths for forwarding traffic. • Both ribs– BGP and IGP destinations with routes in both RIBs: enabled or disabled. • Mpls forwarding– MPLS routes used for forwarding: enabled or disabled. 	All Levels

Table 90: show ldp overview Output Fields (*continued*)

Field Name	Field description	Level of Output
IGP	<ul style="list-style-type: none"> ● Tracking igp metric—Cause the IGP route metric to be used for the LDP routes instead of the default LDP route metric (the default LDP route metric is 1). ● Sync session up delay— Time interval to synchronize LDP session. 	All Levels
Session protection	<ul style="list-style-type: none"> ● Session protection— Remote neighbor added to LDP configuration which enables protection for all sessions in the corresponding LDP instance: enabled or disabled. ● Session protection timeout— Period of time until which the remote neighbor is connected to LSR in the absence of link neighbors. 	All Levels
Interface addresses advertising	Advertises interface address.	All Levels
Label allocation	<p>Label accounting information.</p> <ul style="list-style-type: none"> ● Current number of LDP labels allocated—Number of labels currently in use. ● Total number of LDP labels allocated—Cumulative number of labels being allocated. ● Total number of LDP labels freed—Cumulative number of labels being freed. ● Total number of LDP label allocation failures—Cumulative number of failures for allocating a label. ● Current number of labels allocated by all protocols—Number of labels currently being used by routing protocols. 	All Levels

Sample Output

show ldp overview

user@host> show ldp overview

```
Instance: master
Router ID: 192.168.2.1
Message id: 0
Configuration sequence: 1
Deaggregate: disabled
```

```
Explicit null: disabled
IPv6 tunneling: disabled
Strict targeted hellos: disabled
Loopback if added: yes
Route preference: 9
Unicast transit LSP chaining: disabled
P2MP transit LSP chaining: disabled
Transit LSP statistics based on route statistics: disabled
Longest Match: enabled
Capabilities enabled: none
Timers:
  Keepalive interval: 10, Keepalive timeout: 30
  Link hello interval: 5, Link hello hold time: 15
  Targeted hello interval: 15, Targeted hello hold time: 45
  Label withdraw delay: 60
Graceful restart:
  Restart: enabled, Helper: enabled, Restart in process: false
  Reconnect time: 60000, Max neighbor reconnect time: 120000
  Recovery time: 160000, Max neighbor recovery time: 240000
Traffic Engineering:
  Bgp igp: disabled
  Both ribs: disabled
  Mpls forwarding: disabled
IGP:
  Tracking igp metric: disabled
  Sync session up delay: 10
Session protection:
  Session protection: disabled
  Session protecton timeout: 0
Interface addresses advertising:
  192.168.2.1
Label allocation:
  Current number of LDP labels allocated: 3
  Total number of LDP labels allocated: 3
  Total number of LDP labels freed: 0
  Total number of LDP label allocation failure: 0
  Current number of labels allocated by all protocols: 3
```

show ldp p2mp tunnel

Syntax

```
show ldp p2mp tunnel
<brief | detail | extensive>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced in Junos OS Release 13.3.

Description

Display LDP point-to-multipoint tunnel table information.

Options

brief | detail | extensive—(Optional) Display the specified level of output.

instance *instance-name*—(Optional) Display routing instance information for the specified instance only.

logical-system (all | *logical-system-name*)—(Optional) Display LDP point-to-multipoint tunnel table information of all logical systems or a particular logical system.

Required Privilege Level

View

Sample Output

show ldp p2mp tunnel

user@host> **show ldp p2mp tunnel extensive**

```
Instance      Tunnel type      Tunnel name
0             Name             10.254.1.1:1:ldp-p2mp:mvpn:vpn-1
P2MP root-addr 10.255.107.232, lsp-id 16777217
Self id 805306372
Reference count 2
```

show ldp path

Syntax

```
show ldp path
<brief | detail | extensive>
<destination>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Display Label Distribution Protocol (LDP) label-switched paths (LSPs).

Options

- none**—Display standard information about all LDP LSPs for all routing instances.
- brief | detail | extensive**—(Optional) Display the specified level of output.
- destination**—(Optional) Restrict the output to entries that match the specified destination prefix.
- instance instance-name**—(Optional) Display information for the specified routing instance only.
- logical-system (all | logical-system-name)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show ldp path extensive on page 2585](#)

Output Fields

[Table 91 on page 2584](#) describes the output fields for the **show ldp path** command. Output fields are listed in the approximate order in which they appear.

Table 91: show ldp path Output Fields

Field Name	Field Description
Output Session (label)	Session ID and labels that this system has sent using LDP. These correspond to MPLS packets received.

Table 91: show ldp path Output Fields (*continued*)

Field Name	Field Description
Input Session (label)	Session ID and labels that this system has received using LDP. These correspond to MPLS packets transmitted.
route	MPLS route.
Attached route	Route corresponding to the LSP.
Ingress route	The router acts as the ingress for the LSP.
Reference count	Reference count for the LDP neighbor.
Transit route	Names of the forwarding equivalence class (FEC) filters on the transit routers.
Global label	MPLS label that is used globally.

Sample Output

show ldp path extensive

user@host> **show ldp path extensive**

```

Output Session (label)      Input Session (label)
10.255.14.220:0(3)          ( )
    Attached route: 10.255.14.221/32
    Reference count: 3, Global label: 3
10.255.14.220:0(100000)      10.255.14.220:0(3)
    Attached route: 10.255.14.220/32, Ingress route
    Reference count: 2, Transit route, Global label: 100000
10.255.14.220:0(100001)      10.255.14.220:0(100001)
    Attached route: 10.255.14.214/32, Ingress route
    Reference count: 2, Transit route, Global label: 100001

```

show ldp route

Syntax

```
show ldp route
<brief | detail | extensive>
<destination>
<fec-and-route>
<fec-only>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Display the entries in the Label Distribution Protocol (LDP) internal topology table. The internal topology table contains routes from inet.0 and inet.3 and is used when binding a label to a forwarding equivalence class (FEC).

Options

none—Display standard information about all entries in the LDP internal topology table for all routing instances.

brief | detail | extensive—(Optional) Display the specified level of output.

destination—(Optional) Restrict the output to entries that are longer than the specified destination prefix and prefix length.

fec-and-route—Display the show routes and the FECs.

fec-only—Display only LDP FECs.

instance *instance-name*—(Optional) Display entries for the specified routing instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

List of Sample Output

[show ldp route detail on page 2587](#)

[show ldp route extensive on page 2588](#)

[show ldp route fec-and-route on page 2589](#)

[show ldp route fec-and-route on page 2591](#)

[show ldp route fec-only on page 2594](#)

[show ldp route fec-only detail on page 2595](#)

Output Fields

Table 92 on page 2587 describes the output fields for the **show ldp route** command. Output fields are listed in the approximate order in which they appear.

Table 92: show ldp route Output Fields

Field Name	Field Description
Destination	Destination prefix.
Next-hop intf/lsp/table	Interface that is the next hop to the destination prefix.
Next-hop address	IP address of the next hop.
Session ID	LDP session ID.
Route flags	Information about the route. For example, the Ingress TTL propagate flag indicates that the time-to-live (TTL) value is being propagated with the route.
Bound to outgoing label	The route has been bound to LSPs with the label being distributed for that LSP.
Topology entry	The topology that the route is bound to.
Ingress route status	Status of the ingress route. For example, it could be Active or Inactive .
Last modified	The length of time since the ingress route status last changed.
Last event(s)	The last event that occurred.

Sample Output

show ldp route detail

```
user@host> show ldp route 10.255.8.5 detail
```

```

Destination      Next-hop intf/lsp      Next-hop address
10.255.8.5/32    fl
  Session ID 10.255.170.84:0--10.255.170.92:0
                fe-0/0/0.0          192.168.100.2
```

```

Session ID 10.255.170.84:0--10.255.8.5:0
          so-0/2/1.0
Session ID 10.255.170.84:0--10.255.8.5:0
          so-0/2/2.0
Session ID 10.255.170.84:0--10.255.8.3:0
Bound to outgoing label 299776, Topology entry: 0x8c38a80
BFD dest addr  BFD state LSP-ping Next-hop addr  Next-hop intf/lsp
127.0.0.64      up        up        192.168.100.2  fe-0/0/0.0
127.0.1.64      up        up                so-0/2/1.0
127.0.2.64      up        up                so-0/2/2.0
127.0.3.64      up        up                f1
.....

```

show ldp route extensive

user@host> show ldp route extensive

```

Destination      Next-hop intf/lsp/table  Next-hop address
10.0.0.0/30      ge-1/2/0.18             10.0.0.17
  Session ID 192.168.0.6:0--192.168.0.5:0
  Route flags: None
Destination      Next-hop intf/lsp/table  Next-hop address
10.0.0.4/30      ge-1/2/0.18             10.0.0.17
  Session ID 192.168.0.6:0--192.168.0.5:0
  Route flags: None
Destination      Next-hop intf/lsp/table  Next-hop address
10.0.0.8/30      ge-1/2/1.21             10.0.0.22
  Session ID 192.168.0.6:0--192.168.0.4:0
  Route flags: None
Destination      Next-hop intf/lsp/table  Next-hop address
10.0.0.12/30     ge-1/2/1.21             10.0.0.22
  Session ID 192.168.0.6:0--192.168.0.4:0
  Route flags: None
Destination      Next-hop intf/lsp/table  Next-hop address
10.0.0.16/30     ge-1/2/0.18
  Route flags: None
Destination      Next-hop intf/lsp/table  Next-hop address
10.0.0.18/32
  Route flags: None
Destination      Next-hop intf/lsp/table  Next-hop address
10.0.0.20/30     ge-1/2/1.21
  Route flags: None
Destination      Next-hop intf/lsp/table  Next-hop address

```

```

10.0.0.21/32
  Route flags: None
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.1/32   ge-1/2/0.18                 10.0.0.17
  Session ID 192.168.0.6:0--192.168.0.5:0
  Route flags: None
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.2/32   ge-1/2/1.21                 10.0.0.22
  Session ID 192.168.0.6:0--192.168.0.4:0
                  ge-1/2/0.18                 10.0.0.17
  Session ID 192.168.0.6:0--192.168.0.5:0
  Route flags: None
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.3/32   ge-1/2/1.21                 10.0.0.22
  Session ID 192.168.0.6:0--192.168.0.4:0
  Route flags: None
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.4/32   ge-1/2/1.21                 10.0.0.22
  Session ID 192.168.0.6:0--192.168.0.4:0
  Bound to outgoing label 299808, Topology entry: 0x92a483c
  Ingress route status: Active, Last modified: 00:01:19 ago
  Route flags: Ingress TTL propagate, Transit TTL propagate
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.5/32   ge-1/2/0.18                 10.0.0.17
  Session ID 192.168.0.6:0--192.168.0.5:0
  Bound to outgoing label 299792, Topology entry: 0x92a47f8
  Ingress route status: Active, Last modified: 00:01:19 ago
  Route flags: Ingress TTL propagate, Transit TTL propagate
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.6/32   lo0.6
  Bound to outgoing label 3, Topology entry: 0x92a4a5c
  Ingress route status: Inactive
  Route type: Egress route
  Route flags: None
Destination      Next-hop intf/lsp/table      Next-hop address
10.10.20.1/32    fe-1/0/0.0                  192.168.199.37
                  LSP LDP->10.255.107.230

```

show ldp route fec-and-route

user@host> show ldp route fec-and-route

```

Destination      Next-hop intf/lsp/table      Next-hop address
10.4.0.0/16       fxp0.0                      10.92.31.254

```

10.5.0.0/16	fxp0.0	10.92.31.254
10.6.128.0/17	fxp0.0	10.92.31.254
10.9.0.0/16	fxp0.0	10.92.31.254
10.10.0.0/16	fxp0.0	10.92.31.254
10.13.4.0/23	fxp0.0	10.92.31.254
10.13.10.0/23	fxp0.0	10.92.31.254
10.82.0.0/15	fxp0.0	10.92.31.254
10.84.0.0/16	fxp0.0	10.92.31.254
10.85.12.0/22	fxp0.0	10.92.31.254
10.92.0.0/16	fxp0.0	10.92.31.254
10.92.16.0/20	fxp0.0	
10.92.20.175/32		
10.94.0.0/16	fxp0.0	10.92.31.254
10.99.0.0/16	fxp0.0	10.92.31.254
10.102.0.0/16	fxp0.0	10.92.31.254
10.150.0.0/16	fxp0.0	10.92.31.254
10.155.0.0/16	fxp0.0	10.92.31.254
10.157.64.0/19	fxp0.0	10.92.31.254
10.160.0.0/16	fxp0.0	10.92.31.254
10.204.0.0/16	fxp0.0	10.92.31.254
10.205.0.0/16	fxp0.0	10.92.31.254
10.206.0.0/16	fxp0.0	10.92.31.254
10.207.0.0/16	fxp0.0	10.92.31.254
10.209.0.0/16	fxp0.0	10.92.31.254
10.212.0.0/16	fxp0.0	10.92.31.254
10.213.0.0/16	fxp0.0	10.92.31.254
10.214.0.0/16	fxp0.0	10.92.31.254
10.215.0.0/16	fxp0.0	10.92.31.254
10.216.0.0/16	fxp0.0	10.92.31.254
10.218.13.0/24	fxp0.0	10.92.31.254
10.218.14.0/24	fxp0.0	10.92.31.254
10.218.16.0/20	fxp0.0	10.92.31.254
10.218.32.0/20	fxp0.0	10.92.31.254
10.227.0.0/16	fxp0.0	10.92.31.254
10.255.111.0/24	ge-0/0/2.0	11.11.11.2
10.255.111.1/32	ge-0/0/2.0	11.11.11.2
10.255.111.2/32	ge-0/0/2.0	11.11.11.2
10.255.111.3/32	ge-0/0/2.0	11.11.11.2
10.255.111.4/32	ge-0/0/2.0	11.11.11.2
10.255.111.4/32	ge-0/0/2.0	11.11.11.2
10.255.112.1/32	lo0.0	
10.255.112.1/32	lo0.0	
10.255.112.2/32	ge-0/0/2.0	11.11.11.2
10.255.112.2/32	ge-0/0/2.0	11.11.11.2

11.11.11.0/24	ge-0/0/2.0	
11.11.11.1/32		
12.12.12.0/24	ge-0/0/2.0	11.11.11.2
15.15.15.0/24	ge-0/0/1.0	
15.15.15.1/32		
22.22.22.0/24	ge-0/0/0.0	
22.22.22.1/32		
23.23.23.0/24	ge-0/0/2.0	11.11.11.2
24.24.24.0/24	ge-0/0/2.0	11.11.11.2
25.25.25.0/24	ge-0/0/2.0	11.11.11.2
128.92.17.45/32	ge-0/0/2.0	11.11.11.2
128.92.20.175/32	lo0.0	
128.92.21.186/32	ge-0/0/2.0	11.11.11.2
128.92.25.135/32	ge-0/0/2.0	11.11.11.2
128.92.27.91/32	ge-0/0/2.0	11.11.11.2
128.92.28.70/32	ge-0/0/2.0	11.11.11.2
172.16.0.0/12	fxp0.0	10.92.31.254
192.168.0.0/16	fxp0.0	10.92.31.254
192.168.102.0/23	fxp0.0	10.92.31.254
207.17.136.0/24	fxp0.0	10.92.31.254
207.17.136.192/32	fxp0.0	10.92.31.254
207.17.137.0/24	fxp0.0	10.92.31.254
224.0.0.5/32		

show ldp route fec-and-route

user@host> show ldp route fec-and-route

Destination	Next-hop intf/lsp/table	Next-hop address
10.4.0.0/16	fxp0.0	10.92.31.254
10.5.0.0/16	fxp0.0	10.92.31.254
10.6.128.0/17	fxp0.0	10.92.31.254
10.9.0.0/16	fxp0.0	10.92.31.254
10.10.0.0/16	fxp0.0	10.92.31.254
10.13.4.0/23	fxp0.0	10.92.31.254
10.13.10.0/23	fxp0.0	10.92.31.254
10.82.0.0/15	fxp0.0	10.92.31.254
10.84.0.0/16	fxp0.0	10.92.31.254
10.85.12.0/22	fxp0.0	10.92.31.254
10.92.0.0/16	fxp0.0	10.92.31.254
10.92.16.0/20	fxp0.0	
10.92.20.175/32		
10.94.0.0/16	fxp0.0	10.92.31.254
10.99.0.0/16	fxp0.0	10.92.31.254

```

10.102.0.0/16      fxp0.0          10.92.31.254
10.150.0.0/16      fxp0.0          10.92.31.254
10.155.0.0/16      fxp0.0          10.92.31.254
10.157.64.0/19     fxp0.0          10.92.31.254
10.160.0.0/16      fxp0.0          10.92.31.254
10.204.0.0/16      fxp0.0          10.92.31.254
10.205.0.0/16      fxp0.0          10.92.31.254
10.206.0.0/16      fxp0.0          10.92.31.254
10.207.0.0/16      fxp0.0          10.92.31.254
10.209.0.0/16      fxp0.0          10.92.31.254
10.212.0.0/16      fxp0.0          10.92.31.254
10.213.0.0/16      fxp0.0          10.92.31.254
10.214.0.0/16      fxp0.0          10.92.31.254
10.215.0.0/16      fxp0.0          10.92.31.254
10.216.0.0/16      fxp0.0          10.92.31.254
10.218.13.0/24     fxp0.0          10.92.31.254
10.218.14.0/24     fxp0.0          10.92.31.254
10.218.16.0/20     fxp0.0          10.92.31.254
10.218.32.0/20     fxp0.0          10.92.31.254
10.227.0.0/16      fxp0.0          10.92.31.254
10.255.111.0/24    ge-0/0/2.0      11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
10.255.111.1/32    ge-0/0/2.0      11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300192, Topology entry: 0xb5de1b0
  Ingress route status: Active, Last modified: 09:57:49 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.2/32   ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300208, Topology entry: 0xb5de1f8
  Ingress route status: Active, Last modified: 09:57:49 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.3/32   ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300224, Topology entry: 0xb5de240
  Ingress route status: Active, Last modified: 09:57:49 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.4/32   ge-0/0/2.0                  11.11.11.2

```



```

Session ID 10.255.112.1:0--10.255.112.2:0
Bound to outgoing label 300112, Topology entry: 0xb5de708
Ingress route status: Active, Last modified: 10:10:56 ago
Last event(s): Evaluate Update ingress route Update transit route
Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.4/32   ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
Bound to outgoing label 300112, Topology entry: 0xb5de708
Ingress route status: Active, Last modified: 10:10:56 ago
Last event(s): Evaluate Update ingress route Update transit route
Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.1/32   lo0.0
Bound to outgoing label 3, Topology entry: 0xb5de120
Ingress route status: Inactive
Last event(s): Evaluate Update history
Route type: Egress route
Route flags: Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.1/32   lo0.0
Bound to outgoing label 3, Topology entry: 0xb5de120
Ingress route status: Inactive
Last event(s): Evaluate Update history
Route type: Egress route
Route flags: Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.2/32   ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
Bound to outgoing label 300064, Topology entry: 0xb5de630
Ingress route status: Active, Last modified: 10:11:04 ago
Last event(s): Update ingress route
Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.2/32   ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
Bound to outgoing label 300064, Topology entry: 0xb5de630
Ingress route status: Active, Last modified: 10:11:04 ago
Last event(s): Update ingress route
Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
11.11.11.0/24     ge-0/0/2.0
11.11.11.1/32
12.12.12.0/24     ge-0/0/2.0                  11.11.11.2

```

```

    Session ID 10.255.112.1:0--10.255.112.2:0
15.15.15.0/24      ge-0/0/1.0
15.15.15.1/32
22.22.22.0/24      ge-0/0/0.0
22.22.22.1/32
23.23.23.0/24      ge-0/0/2.0      11.11.11.2
    Session ID 10.255.112.1:0--10.255.112.2:0
24.24.24.0/24      ge-0/0/2.0      11.11.11.2
    Session ID 10.255.112.1:0--10.255.112.2:0
25.25.25.0/24      ge-0/0/2.0      11.11.11.2
    Session ID 10.255.112.1:0--10.255.112.2:0
128.92.17.45/32     ge-0/0/2.0      11.11.11.2
    Session ID 10.255.112.1:0--10.255.112.2:0
128.92.20.175/32    lo0.0
128.92.21.186/32    ge-0/0/2.0      11.11.11.2
    Session ID 10.255.112.1:0--10.255.112.2:0
128.92.25.135/32    ge-0/0/2.0      11.11.11.2
    Session ID 10.255.112.1:0--10.255.112.2:0
128.92.27.91/32     ge-0/0/2.0      11.11.11.2
    Session ID 10.255.112.1:0--10.255.112.2:0
128.92.28.70/32     ge-0/0/2.0      11.11.11.2
    Session ID 10.255.112.1:0--10.255.112.2:0
172.16.0.0/12       fxp0.0          10.92.31.254
192.168.0.0/16       fxp0.0          10.92.31.254
192.168.102.0/23     fxp0.0          10.92.31.254
207.17.136.0/24      fxp0.0          10.92.31.254
207.17.136.192/32    fxp0.0          10.92.31.254
207.17.137.0/24      fxp0.0          10.92.31.254
224.0.0.5/32

```

show ldp route fec-only

user@host> show ldp route fec-only

```

user@host_re0> show ldp route fec-only
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.1/32   ge-0/0/2.0                  11.11.11.2
10.255.111.2/32   ge-0/0/2.0                  11.11.11.2
10.255.111.3/32   ge-0/0/2.0                  11.11.11.2
10.255.111.4/32   ge-0/0/2.0                  11.11.11.2
10.255.112.1/32   lo0.0
10.255.112.2/32   ge-0/0/2.0                  11.11.11.2

```

show ldp route fec-only detail

```
user@host> show ldp route fec-only detail
```

```

Destination          Next-hop intf/lsp/table      Next-hop address
10.255.111.1/32      ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300192, Topology entry: 0xb5de1b0
  Ingress route status: Active, Last modified: 09:55:10 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination          Next-hop intf/lsp/table      Next-hop address
10.255.111.2/32      ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300208, Topology entry: 0xb5de1f8
  Ingress route status: Active, Last modified: 09:55:10 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination          Next-hop intf/lsp/table      Next-hop address
10.255.111.3/32      ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300224, Topology entry: 0xb5de240
  Ingress route status: Active, Last modified: 09:55:10 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination          Next-hop intf/lsp/table      Next-hop address
10.255.111.4/32      ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300112, Topology entry: 0xb5de708
  Ingress route status: Active, Last modified: 10:08:17 ago
  Last event(s): Evaluate Update ingress route Update transit route
  Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination          Next-hop intf/lsp/table      Next-hop address
10.255.112.1/32      lo0.0
  Bound to outgoing label 3, Topology entry: 0xb5de120
  Ingress route status: Inactive
  Last event(s): Evaluate Update history
  Route type: Egress route
  Route flags: Allow longest match
Destination          Next-hop intf/lsp/table      Next-hop address
10.255.112.2/32      ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300064, Topology entry: 0xb5de630
  Ingress route status: Active, Last modified: 10:08:25 ago

```

Last event(s): Update ingress route

Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match

show ldp session

Syntax

```
show ldp session
<brief | detail | extensive>
<auto-targeted>
<destination>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

auto-targeted option added in Junos OS Release 14.2.

Description

Display information about Label Distribution Protocol (LDP) sessions.

Options

none—Display standard information about all LDP sessions for all routing instances.

brief | detail | extensive—(Optional) Display the specified level of output.

auto-targeted—(Optional) Display information about LDP sessions that are automatically targeted using loopback addresses.

destination—(Optional) Restrict LDP session display to the specified address.

instance *instance-name*—(Optional) Display routing instance information for the specified instance. If *instance-name* is omitted, information is displayed for the master instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear ldp session](#) | [2548](#)

List of Sample Output

[show ldp session brief on page 2601](#)

[show ldp session detail on page 2602](#)

[show ldp session extensive on page 2602](#)

[show ldp session auto-targeted detail on page 2603](#)

Output Fields

Table 93 on page 2598 describes the output fields for the **show ldp session** command. Output fields are listed in the approximate order in which they appear.

Table 93: show ldp session Output Fields

Field Name	Field Description	Level of Output
Address	Transport address of the session.	any
State	State of the session: Nonexistent , Connecting , Initialized , OpenRec , OpenSent , Operational , or Closing . The states correspond to the state diagram specified in Internet Draft LDP Specification draft-ietf-mpls-rfc3036bis-01.txt.	any
Connection	TCP connection state: Closed , Opening , or Open .	any
Hold time	Time remaining until the session will be closed, in seconds.	any
Session ID	LDP identifiers of the peers of this session.	detail extensive
Next keepalive	Time until next keepalive is sent, in seconds.	detail extensive
Active	Whether the local router is playing the active role in the session and during session establishment.	detail extensive
Passive	Whether the local router is playing the passive role in the session and during session establishment.	detail extensive
Maximum PDU	Maximum protocol data unit (PDU) size (packet size) for the session.	detail extensive
Hold time	Time remaining until the session will be closed, in seconds. This value corresponds to the one configured using the keepalive-timeout statement configured at the [edit protocols ldp] hierarchy level.	detail extensive
Neighbor count	Number of neighbors that are contributing to the session.	detail extensive
Neighbor types	Category of LDP session: discovered or auto-targeted .	any
Keepalive interval	Keepalive interval, in seconds.	detail extensive

Table 93: show ldp session Output Fields (*continued*)

Field Name	Field Description	Level of Output
Connect retry interval	TCP connection retry interval, in seconds.	detail extensive
Local address	Local transport address.	detail extensive
Remote address	Remote transport address.	detail extensive
Up for	Time that this session has been up.	detail extensive
Last down	Time since the session last went down.	detail extensive
Reason	Reason the session went down: <ul style="list-style-type: none"> • Aborted graceful restart • Authentication key was changed • Bad type length value (TLV) • Bad protocol data unit (PDU) packets • Command-line interface (CLI) command • Connect time expired • Connection error • Connection reset • Error during initialization • Hold time expired • No adjacency or all adjacencies down • Notification received • Received notification from peer • Unexpected End of File (EOF) • Unknown reason 	detail extensive
Number of session flaps	Number of times the session changes from up to down.	detail extensive
Restarting	LDP is in the process of gracefully restarting.	detail extensive
Capabilities advertised	LDP capabilities advertised to a peer.	detail extensive
Capabilities received	LDP capabilities received from a peer.	detail extensive

Table 93: show ldp session Output Fields (*continued*)

Field Name	Field Description	Level of Output
Protection	Information about the status of MPLS LDP session protection.	detail extensive
restart complete in <i>nnn</i> msec	Amount of time (in milliseconds) remaining until graceful restart is declared complete.	detail extensive
Authentication type	Shows the longest match MD5 authentication	detail extensive
Local	<p>Information about graceful restart for the local end of an LDP session. Graceful restart and helper mode are independent.</p> <ul style="list-style-type: none"> • Restart—Status of the graceful restart feature at the local end of the LDP session: enabled or disabled. • Helper mode—Status of the helper mode feature at the local end of the LDP session: enabled or disabled. When this feature is enabled, the local end of the LDP session can help the restarting router with its LDP restart procedures. • Reconnect time—Amount of time to wait from when a restart is initiated until the router can exchange LDP messages with its neighbors. The default is 60000 msec and is not configurable. (Reconnect timeout refers to "FT Reconnect timeout" in draft-ietf-mpls-ldp-restart-06, <i>Internet Draft Graceful Restart Mechanism for LDP</i>.) 	detail extensive
Remote	<p>Information about graceful restart at the remote end of an LDP session. Graceful restart and helper mode are independent.</p> <ul style="list-style-type: none"> • Restart—Status of the graceful restart feature at the remote end of the LDP session: enabled or disabled. • Helper mode—Status of the helper mode feature at the remote end of the LDP session: enabled or disabled. When this feature is enabled, the remote end of the LDP session can help the restarting router with its LDP restart procedures. • Reconnect time—Amount of time in milliseconds from when a restart is initiated until the remote router can exchange LDP messages with its neighbors. 	detail extensive
Local maximum recovery time	Amount of time during which the restarting node attempts to recover its lost states with help from its neighbors (in milliseconds).	detail extensive
Next-hop addresses received	Next-hop addresses received on the session.	detail extensive

Table 93: show ldp session Output Fields (*continued*)

Field Name	Field Description	Level of Output
Queue depth	Number of messages that are queued for sending to the peers in the group.	extensive
Message type	<p>Type of message being sent:</p> <ul style="list-style-type: none"> • Initialization—Session initialization negotiation messages sent by an LSR to an LDP peer when the transport connection is established. • Keepalive—Keepalive timer messages sent by an LSR to an LDP peer to keep the session active when there is no information or PDU exchanged between them. • Notification—Notification messages (such as state of the LDP session) or error information (such as bad PDU length) sent by an LSR to an LDP peer. • Address—Message sent by an LSR to an LDP peer to advertise interface addresses. • Address withdraw—Message sent by an LSR to an LDP peer to withdraw a previously advertised interface address. • Label mapping—Message sent by an LSR to an LDP peer to advertise label mapping for a forwarding equivalence class (FEC). • Label request—Message sent by an LSR to an LDP peer to request a label mapping for an FEC. • Label withdraw—Message sent by an LSR to an LDP peer to withdraw a previously advertised FEC-label mapping. • Label release—Message sent by an LSR to an LDP peer to notify the peer that a specific FEC-label mapping has been released. • Label abort—Message sent by an LSR to an LDP peer to abort a label request message. • Total—Messages sent and received during the lifetime of the session. • Last 5 seconds—Messages sent and received during the current session. 	extensive

Sample Output

```
show ldp session brief
```

```
user@host> show ldp session brief
```

Address	State	Connection	Hold time
10.255.72.160	Operational	Open	21
10.255.72.164	Operational	Open	20
10.255.72.172	Operational	Open	21

show ldp session detail

user@host> show ldp session detail

```

Address: 192.168.0.3, State: Operational, Connection: Open, Hold time: 27
  Session ID: 192.168.0.2:0--192.168.0.3:0
  Next keepalive in 7 seconds
  Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
  Neighbor types: discovered
  Keepalive interval: 10, Connect retry interval: 1
  Local address: 192.168.0.2, Remote address: 192.168.0.3
  Up for 00:00:02
  Capabilities advertised: none
  Capabilities received: none
  Protection: disabled
  Local - Restart: enabled, Helper mode: enabled, Reconnect time: 60000
  Remote - Restart: enabled, Helper mode: enabled, Reconnect time: 60000
  Local maximum neighbor reconnect time: 120000 msec
  Local maximum neighbor recovery time: 240000 msec
  Local Label Advertisement mode: Downstream unsolicited
  Remote Label Advertisement mode: Downstream unsolicited
  Negotiated Label Advertisement mode: Downstream unsolicited
  Nonstop routing state: Not in sync
  Next-hop addresses received:
    10.0.0.5
    10.0.0.33

```

show ldp session extensive

user@host> show ldp session extensive

```

Address: 192.168.0.3, State: Operational, Connection: Open, Hold time: 22
  Session ID: 192.168.0.2:0--192.168.0.3:0
  Next keepalive in 2 seconds
  Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
  Neighbor types: discovered
  Keepalive interval: 10, Connect retry interval: 1
  Local address: 192.168.0.2, Remote address: 192.168.0.3

```

```

Up for 00:05:37
Capabilities advertised: none
Capabilities received: none
Protection: disabled
Local - Restart: enabled, Helper mode: enabled, Reconnect time: 60000
Remote - Restart: enabled, Helper mode: enabled, Reconnect time: 60000
Local maximum neighbor reconnect time: 120000 msec
Local maximum neighbor recovery time: 240000 msec
Local Label Advertisement mode: Downstream unsolicited
Remote Label Advertisement mode: Downstream unsolicited
Negotiated Label Advertisement mode: Downstream unsolicited
Nonstop routing state: Not in sync
Next-hop addresses received:
  10.0.0.5
  10.0.0.33
Queue depth: 0

```

Message type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Initialization	1	1	0	0
Keepalive	33	33	1	1
Notification	0	0	0	0
Address	1	1	0	0
Address withdraw	0	0	0	0
Label mapping	7	5	0	0
Label request	0	0	0	0
Label withdraw	3	1	0	0
Label release	1	3	0	0
Label abort	0	0	0	0

show ldp session auto-targeted detail

```
user@host> show ldp session auto-generated detail
```

```

Address: 192.168.1.5, State: Operational, Connection: Open, Hold time: 25
  Session ID: 192.168.1.1:0--192.168.1.5:0
  Next keepalive in 5 seconds
  Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
  Neighbor types: discovered, Auto-targeted
                    ^^^^^^^^^^^^^^^
  Keepalive interval: 10, Connect retry interval: 1
  Local address: 192.168.1.1, Remote address: 192.168.1.5
  Up for 00:00:34
  Capabilities advertised: none
  Capabilities received: none

```

```
Protection: disabled
Local - Restart: disabled, Helper mode: enabled
Remote - Restart: disabled, Helper mode: enabled
Local maximum neighbor reconnect time: 120000 msec
Local maximum neighbor recovery time: 240000 msec
Local Label Advertisement mode: Downstream unsolicited
Remote Label Advertisement mode: Downstream unsolicited
Negotiated Label Advertisement mode: Downstream unsolicited
Nonstop routing state: Not in sync
Next-hop addresses received:
  192.168.1.2
  192.168.1.3
```

show ldp statistics

Syntax

```
show ldp statistics
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Display Label Distribution Protocol (LDP) statistics.

Options

- none**—Display LDP statistics for all routing instances.
- instance *instance-name***—(Optional) Display information for the specified routing instance only.
- logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear ldp statistics](#) | [2550](#)

List of Sample Output

[show ldp statistics on page 2609](#)

Output Fields

[Table 94 on page 2605](#) lists the output fields for the **show ldp statistics** command. Output fields are listed in the approximate order in which they appear.

Table 94: show ldp statistics Output Fields

Field Name	Field Description
Total Sent, Received	Total number of each message type sent and received.

Table 94: show ldp statistics Output Fields (*continued*)

Field Name	Field Description
Last 5 seconds Sent, Received	Number of each message type sent and received in the last 5 seconds.
Message type	<p>LDP message types:</p> <ul style="list-style-type: none"> • Hello—Messages that enable LDP nodes to discover one another and to detect the failure of a neighbor or of the link to the neighbor. • Initialization—Messages that indicate an LDP session has started. • Keepalive—Messages that ensure that the keepalive timeout is not exceeded. • Notification—Advisory information and signal error information. • Address—Messages with address information. • Address withdrawal—Messages regarding address withdrawal. • Label mapping—Messages with label mapping information. • Label request—Request for a label mapping from a neighboring router. • Label withdrawal—Withdrawal message sent by the downstream LSR to recall a label that it previously mapped. If an LSR that has received a label mapping subsequently determines that it no longer needs that label, it can send a label release message that frees the label for use. • Label release—Message sent by the downstream LSR to recall a label that it previously mapped. If an LSR that has received a label mapping subsequently determines that it no longer needs that label, it can send a label release message that frees the label for use. • Label abort—Messages about label interruptions. • All UDP—All hello messages sent by LSRs to the well-known UDP port, 646. • All TCP—All LDP session messages.

Table 94: show ldp statistics Output Fields *(continued)*

Field Name	Field Description
Event type	

Table 94: show ldp statistics Output Fields (*continued*)

Field Name	Field Description
	<p>LDP events and errors:</p> <ul style="list-style-type: none"> • Sessions opened—Number of LDP sessions that have been opened. • Sessions closed—Number of LDP sessions that have been closed. • Topology changes—Number of changes to the known LDP topology. • No interface—Number of missing interface address messages. When a new LDP session is initialized and before sending label lapping or label request messages, the LSR advertises its interface addresses with one or more address messages. • No session—Number of missing session messages. Session messages are used to establish, maintain, and terminate sessions between LDP peers. • No adjacency—The exchange of hello adjacency messages results in the creation of an adjacency. The LDP identifier, together with the sender's LDP identifier in the PDU header, enables the receiver to match the initialization message with one of its hello adjacencies. If there is no matching hello adjacency, the LSR sends a session the initialization message is rejected. • Unknown version—The LDP protocol version is not supported by the receiver, or it is supported but is not the version negotiated for the session during session establishment. • Malformed PDU—An LDP PDU received on a TCP connection for an LDP session is malformed if the LDP identifier in the PDU header is unknown to the receiver, or if it is known but is not the LDP identifier associated by the receiver with the LDP peer for this LDP session. <p>An LDP PDU is considered to be malformed if the LDP protocol version is not supported by the receiver, or it is supported but is not the version negotiated for the session during session establishment.</p> <p>An LDP PDU is considered malformed if the PDU length field is too small (less than 14) or too large (greater than maximum PDU length).</p> • Malformed message—Malformed LDP messages that are part of the LDP discovery mechanism are handled by silently discarding them. <p>An LDP message is malformed if the message type is unknown. If the message type is less than 0x8000 (high order bit = 0), it is an error signaled by the unknown message type status code.</p> <p>An LDP message is considered to be malformed If the message length is too large, meaning that the message extends beyond the end of the containing LDP PDU.</p> <p>The LDP message is considered to be malformed if the message length is too small, meaning that it is smaller than the smallest possible value component.</p> <p>The LDP message is considered to be malformed if the message is missing one or more mandatory parameters.</p> • Unknown message type—If the message type is less than 0x8000 (high order bit = 0) or greater than or equal to 0x8000 (high order bit = 1) it is considered to be an unknown message. • Inappropriate message—The message is not of the type that the receiver expects to receive. • Malformed TLV—The TLV ILength is too large or the receiver cannot decode the TLV value. This can indicate an issue in either the sending or receiving LSR.

Table 94: show ldp statistics Output Fields (*continued*)

Field Name	Field Description
	<ul style="list-style-type: none"> • Bad TLV value—The TLV Length is too large. • Missing TLV—The TLV is missing one or more mandatory parameters. • PDU too large—The PDF is greater than the maximum PDU length. Section "Initialization Message" in RFC 5036 describes how the maximum PDU length for a session is determined.
Total	Total number of each event or error.
Last 5 seconds	Number of each event or error in the last 5 seconds.

Sample Output

show ldp statistics

user@host> show ldp statistics

Message type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Hello	265	263	2	2
Initialization	2	2	0	0
Keepalive	112	111	1	0
Notification	0	0	0	0
Address	2	2	0	0
Address withdraw	0	0	0	0
Label mapping	7	6	0	0
Label request	0	0	0	0
Label withdraw	2	0	0	0
Label release	0	2	0	0
Label abort	0	0	0	0
All UDP	265	263	2	2
All TCP	123	121	1	0
Event type		Total	Last 5 seconds	
Sessions opened		2	0	
Sessions closed		0	0	
Topology changes		11	0	
No interface		0	0	

No session	0	0
No adjacency	0	0
Unknown version	0	0
Malformed PDU	0	0
Malformed message	0	0
Unknown message type	0	0
Inappropriate message	0	0
Malformed TLV	0	0
Bad TLV value	0	0
Missing TLV	0	0
PDU too large	0	0

show ldp traffic-statistics

Syntax

```
show ldp traffic-statistics  
<instance instance-name>  
<logical-system (all | logical-system-name)>  
<p2mp>
```

Release Information

Command introduced before Junos OS Release 7.4.

p2mp option added in Junos OS Release 11.2.

Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

Description

Display Label Distribution Protocol (LDP) traffic statistics.

NOTE: If nonstop active routing features is configured, **show ldp traffic-statistics** command is not supported on backup Routing Engines.

Options

none—Display LDP traffic statistics for all routing instances.

instance *instance-name*—(Optional) Display LDP traffic statistics for the specified routing instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

p2mp—(Optional) Display only the data traffic statistics for a point-to-multipoint LSP.

Additional Information

To collect output from this command on a periodic basis, configure the [traffic-statistics](#) statement for the LDP protocol. For more information, see the *Junos MPLS Applications Configuration Guide*.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear ldp statistics](#) | [2550](#)

[Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain | 949](#)

[Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs | 1006](#)

List of Sample Output

[show ldp traffic-statistics on page 2613](#)

[show ldp traffic-statistics p2mp \(Ingress or transit router only, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 2614](#)

[show ldp traffic-statistics p2mp \(Multipoint LDP with Multicast-Only Fast Reroute\) on page 2615](#)

Output Fields

Table 95 on page 2612 lists the output fields for the **show ldp traffic-statistics** command. Output fields are listed in the approximate order in which they appear.

Table 95: show ldp traffic-statistics Output Fields

Field Name	Field Description
Message type	LDP message types.
FEC	Forwarding equivalence class (FEC) for which LDP traffic statistics are collected. For P2MP LSPs, FEC appears as a combination of root address and the LSP ID (root_addr:lsp_id). For M-LDP P2MP LSPs, FEC appears as a combination of root address multicast source address, and multicast group address (root_addr:lsp_id/grp,src).
Type	Type of traffic originating from a router, either Ingress (originating from this router) or Transit (forwarded through this router).
Packets	Number of packets passed by the FEC since its LSP came up.
Bytes	Number of bytes of data passed by the FEC since its LSP came up.
Shared	Whether a label is shared by prefixes: Yes or No . A Yes value indicates that several prefixes are bound to the same label (for example, when several prefixes are advertised with an egress policy). The LDP traffic statistics for this case apply to all the prefixes and should be treated as such.
Nexthop	The next hop address for P2MP LSPs. (This is the downstream LDP Session ID.)

Table 95: show ldp traffic-statistics Output Fields (*continued*)

Field Name	Field Description
Label	<p>For multipoint LDP with multicast-only fast reroute (MoFRR), the multipoint LDP node selects two separate upstream peers and sends two separate labels, one to each upstream peer. The same algorithm described in RFC 6388 is used to select the primary upstream path. The backup upstream path selection again uses the same algorithm but excludes the primary upstream LSR as a candidate. Two streams of MPLS traffic are sent to the egress node from the two different upstream peers. The MPLS traffic from only one of the upstream neighbors is selected as the primary path to accept the traffic, and the other becomes the backup path. The traffic on the backup path is dropped. When the primary upstream path fails, the traffic from the backup path is then accepted. The multipoint LDP node selects the two upstream paths based on the interior gateway protocol (IGP) root node next hop.</p> <p>Multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.</p>
Backup route	For multipoint LDP with MoFRR, the route that is used if the primary route becomes unavailable.

Sample Output

show ldp traffic-statistics

user@host> **show ldp traffic-statistics**

FEC	Type	Packets	Bytes	Shared
10.35.3.0/30	Transit	0	0	Yes
	Ingress	0	0	No
10.35.10.1/32	Transit	0	0	Yes
	Ingress	0	0	No
10.255.245.214/32	Transit	0	0	No
	Ingress	11	752	No

192.168.37.36/30	Transit	0	0	Yes
	Ingress	0	0	No
FEC(root_addr:lsp_id) Nexthop Packets Bytes Shared				
10.255.72.160:16777217	192.168.8.81	152056	14597376	No
	192.168.8.1	152056	14597376	No
	192.168.8.65	152056	14597376	No
NET FEC Statistics:				
FEC	Type	Packets	Bytes	Shared
10.255.107.230/32	Transit	30858	2022345	No
	Ingress	20	5120	No

show ldp traffic-statistics p2mp (Ingress or transit router only, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

user@host> **show ldp traffic-statistics p2mp**

P2MP FEC Statistics:				
FEC(root_addr:lsp_id/grp,src)	Nexthop	Packets	Bytes	
Shared				
11.99.0.73:239.10.0.1,11.98.0.10	11.99.0.117	243408	121217184	
No				
	11.99.0.13	236286	117670428	
No				
11.99.0.73:239.10.0.2,11.98.0.10	11.99.0.117	248800	123902400	
No				
	11.99.0.13	240759	119897982	
No				
11.99.0.73:239.10.0.1,11.98.0.20	11.99.0.117	250286	124642428	
No				
	11.99.0.13	243741	121383018	
No				
11.99.0.73:239.10.0.2,11.98.0.20	11.99.0.117	252970	125979060	
No				
	11.99.0.13	245218	122118564	
No				

show ldp traffic-statistics p2mp (Multipoint LDP with Multicast-Only Fast Reroute)

user@host> show ldp traffic-statistics p2mp

P2MP FEC Statistics:			
FEC(root_addr:lsp_id/grp,src)	Nexthop	Packets	Bytes
Shared			
1.1.1.1:232.1.1.1,192.168.219.11, Label: 301568	1.3.8.2	0	0
No	1.3.4.2	0	0
No			
1.1.1.1:232.1.1.1,192.168.219.11, Label: 301584, Backup route	1.3.4.2	0	0
No	1.3.8.2	0	0
No			
1.1.1.1:232.1.1.2,192.168.219.11, Label: 301600	1.3.8.2	0	0
No	1.3.4.2	0	0
No			
1.1.1.1:232.1.1.2,192.168.219.11, Label: 301616, Backup route	1.3.4.2	0	0
No	1.3.8.2	0	0
No			

show security keychain

Syntax

```
show security keychain  
<brief | detail>
```

Release Information

Command introduced in Junos OS Release 11.2.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Display information about authentication keychains configured for the Border Gateway Protocol (BGP), the Label Distribution Protocol (LDP) routing protocols, the Bidirectional Forwarding Detection (BFD) protocol, and the Intermediate System-to-Intermediate System (IS-IS) protocol.

Options

none—Display information about authentication keychains.

brief | detail—(Optional) Display the specified level of output.

Required Privilege Level

view

List of Sample Output

[show security keychain brief on page 2618](#)

[show security keychain detail on page 2618](#)

Output Fields

[Table 96 on page 2616](#) describes the output fields for the **show security keychain** command. Output fields are listed in the approximate order in which they appear.

Table 96: show security keychain Output Fields

Field Name	Field Description	Level of Output
keychain	The name of the keychain in operation.	All levels
Active-ID Send	Number of routing protocols packets sent with the active key.	All levels
Active-ID Receive	Number of routing protocols packets received with the active key.	All levels
Next-ID Send	Number of routing protocols packets sent with the next key.	All levels

Table 96: show security keychain Output Fields (*continued*)

Field Name	Field Description	Level of Output
Next-ID Receive	Number of routing protocols packets received with the next key.	All levels
Transition	Amount of time until the current key will be replaced with the next key in the keychain.	All levels
Tolerance	Configured clock-skew tolerance, in seconds, for accepting keys for a key chain.	All levels
Id	Identification number configured for the current key.	detail
Algorithm	Authentication algorithm configured for the current key.	detail
State	<p>State of the current key.</p> <p>The value can be:</p> <ul style="list-style-type: none"> • receive • send • send-receive <p>For the active key, the State can be send-receive, send, or receive. For keys that have a future start time, the State is inactive. Compare the State field to the Mode field.</p>	detail
Option	<p>For IS-IS only, the option determines how Junos OS encodes the message authentication code in routing protocol packets.</p> <p>The values can be:</p> <ul style="list-style-type: none"> • basic—Based on RFC 5304. • isis-enhanced—Based on RFC 5310. <p>The default value is basic. When you configure the isis-enhanced option, Junos OS sends RFC 5310-encoded routing protocol packets and accepts both RFC 5304-encoded and RFC 5310-encoded routing protocol packets that are received from other devices.</p> <p>When you configure basic (or do not include the options statement in the key configuration) Junos OS sends and receives RFC 5304-encoded routing protocols packets, and drops 5310-encoded routing protocol packets that are received from other devices.</p> <p>Because this setting is for IS-IS only, the TCP and the BFD protocol ignore the encoding option configured in the key.</p>	detail

Table 96: show security keychain Output Fields (continued)

Field Name	Field Description	Level of Output
Start-time	Time that the current key became active.	detail
Mode	<p>Mode of each key (Informational only.)</p> <p>The value can be</p> <ul style="list-style-type: none"> ● receive ● send ● send-receive <p>The mode of the key is based on the configuration. Suppose you configure two keys, one with a start-time of today and the other with a start-time of next week. For both keys, the Mode can be send-receive, send, or receive, regardless of the configured start-time. Compare the Mode field to the State field.</p>	detail

Sample Output

show security keychain brief

```
user@host> show security keychain brief
```

keychain	Active-ID		Next-ID		Transition	Tolerance
	Send	Receive	Send	Receive		
hakr	3	3	1	1	1d 23:58	3600

show security keychain detail

```
user@host> show security keychain detail
```

keychain	Active-ID		Next-ID		Transition	Tolerance
	Send	Receive	Send	Receive		
hakr	3	3	1	1	1d 23:58	3600
Id 3, Algorithm hmac-md5, State send-receive, Option basic						
Start-time Wed Aug 11 16:28:00 2010, Mode send-receive						
Id 1, Algorithm hmac-md5, State inactive, Option basic						
Start-time Fri Aug 20 11:30:57 2010, Mode send-receive						

traceroute mpls ldp

Syntax

```
traceroute mpls <ldp> fec
<destination ip-address>
<detail>
<exp exp>
<fanout fanout-number>
<logical-system logical-system-name>
<no-resolve>
<paths maximum-paths>
<pipe-mode>
<retries retries-number>
<routing-instance routing-instance-name>
<source ip-address>
<ttl value>
<update>
<wait seconds>
```

Release Information

Command introduced in Junos OS Release 8.4.

Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

Description

Trace route to a remote host for an MPLS label-switched path signaled by the LDP. Use **traceroute mpls ldp** as a debugging tool to locate MPLS label-switched path forwarding issues in a network. (Currently supported for IPv4 packets only.)

Options

fec—Specify the IP address and optional prefix of the forwarding equivalence class (FEC).

destination *ip-address*—(Optional) Specify the destination address to use when sending probes.

Values: The destination IP address must be within the 127.0.0.0/8 IP address space for Operation, Administration, and Maintenance (OAM) packets.

detail—(Optional) Display detailed output.

exp *exp*—(Optional) Specify the class-of-service to use when sending probes.

Range: 0 through 7

Default: 7

fanout *fanout-number*—(Optional) Specify the maximum number of nexthops to search per node.

Range: 1 through 16

Default: 16

logical-system—(Optional) Specify the name of the logical system for the traceroute attempt.

no-resolve—(Optional) Specify not to resolve the hostname that corresponds to the IP address.

paths *maximum-paths*—(Optional) Specify the maximum number of paths to search.

Range: 1 through 255

Default: 16

pipe-mode—(Optional) Specify to trace only nodes that understand LDP FEC.

In an interoperation with other vendor devices or devices running Junos OS Release that do not support tracing of hierarchical LSPs as described in RFC 6424, continuous non-complaint probe status is displayed in the **traceroute mpls ldp** command output. To avoid this LDP loop creation, use the **pipe-mode** option with the **traceroute mpls ldp fec** command.

NOTE: Even after using the **traceroute mpls ldp fec pipe-mode** command, one or more intermediate transit nodes that do not understand LDP FEC can return non-complaint probe status in the command output.

retries *retries-number*—(Optional) Specify the number of times to resend probe values.

Range: 1 through 9

Default: 3

routing-instance *routing-instance-name*—(Optional) Specify the name of the routing instance for the traceroute attempt.

source *source-address*—(Optional) Specify the source address of the outgoing traceroute packets.

ttl *value*—(Optional) Specify the maximum time-to-live value to include in the traceroute request, in seconds.

Range: 1 through 125

Default: 64

update—(Optional) Update database contents with traceroute results.

wait *seconds*—(Optional) Specify the number of seconds to wait before resending a probe.

Range: 5 through 15

Default: 10

Required Privilege Level

network

List of Sample Output

[traceroute mpls ldp on page 2622](#)

[traceroute mpls ldp detail on page 2622](#)

Output Fields

[Table 75 on page 2468](#) describes the output fields for the **traceroute mpls ldp fec** command and the **traceroute mpls ldp fec detail** commands. Output fields are listed in the approximate order in which they appear.

Table 97: traceroute mpls ldp Output Fields

Field Name	Field Description	Level of Output
Probe options	Probe options specified in the traceroute mpls ldp fec command.	all levels
ttl	Time to live value of the labeled packet.	none specified
Label	Outgoing label used for forwarding the packet along the label-switched paths.	none specified
Protocol	Signaling protocol used. For this command, it is LDP.	none specified
Address	Address of the next hop.	none specified
Previous Hop	Address of the previous hop. Previous hop address of the first hop is null .	none specified
Probe status	Forwarding status from the first hop to the last-hop label-switching router (egress point in the label-switched paths).	none specified
Hop	Address of the hops in the label-switched path from the first hop to the last hop. Depth indicates the level of the hop.	detail
Parent	Address of the previous hop. Parent value for the first hop is null .	detail
Return Code	Return code for reporting the result of processing the echo request by the receiver.	detail
Response time	Time for the echo request to reach the receiver.	detail
Multipath type	Labels or addresses used by the specified multipath type. If multipaths are not used, the value is none .	detail
Label Stack	Label stack used to forward the packet.	detail

Sample Output

traceroute mpls ldp

user@router> traceroute mpls ldp 4.4.4.4

```
Probe options: ttl 64, retries 3, wait 10, paths 16, exp 7, fanout 16
ttl    Label  Protocol  Address      Previous Hop  Probe Status
  1    100016  LDP       24.24.24.1   (null)        Success
  2    100000  LDP       20.20.20.2   24.24.24.1    Success
  3      3    LDP       22.22.22.4   20.20.20.2    Egress

Path 1 via fe-0/3/3.101 destination 127.0.0.64
```

traceroute mpls ldp detail

user@router> traceroute mpls ldp 4.4.4.4 detail

```
Probe Options: ttl 64, retries 3, wait 10, paths 3, exp 7
Hop 24.24.24.1 Depth 1
  Parent (null)
  Return code: Label switched at stack-depth 1
  Response time 165.93 msec
  Multipath type: IP bitmask
    Address Range 1: 127.0.0.0 ~ 127.0.3.255
  Label Stack:
    Label 1 Value 100032 Protocol LDP

Hop 20.20.20.2 Depth 2
  Parent 24.24.24.1
  Return code: Upstream interface index unknown label-switched at stack-depth 1

  Response time 19.05 msec
  Multipath type: IP bitmask
    Address Range 1: 127.0.0.0 ~ 127.0.3.255
  Label Stack:
    Label 1 Value 100000 Protocol LDP

Hop 22.22.22.4 Depth 3
  Parent 20.20.20.2
  Return code: Egress-ok at stack-depth 1
  Response time 0.79 msec
```

Multipath type: None

Label Stack:

Label 1 Value 3 Protocol LDP

traceroute mpls segment-routing ospf

Syntax

```
traceroute mpls segment-routing ospf<ldp> fec
<destination ip-address>
<detail>
<exp exp>
<fanout fanout-number>
<logical-system logical-system-name>
<no-resolve>
<paths maximum-paths>
<pipe-mode>
<retries retries-number>
<routing-instance routing-instance-name>
<source ip-address>
<ttl value>
<update>
<wait seconds>
```

Release Information

Command introduced in Junos OS Release 19.1R1.

Description

Trace route to a remote host for a segment routing label-switched path added by the ISIS protocol. Use **traceroute mpls segment-routing isisp** as a debugging tool to locate MPLS label-switched path forwarding issues in a network. (Currently supported for IPv4 packets only.)

Options

fec—Specify the IP address and optional prefix of the forwarding equivalence class (FEC).

destination ip-address—(Optional) Specify the destination address to use when sending probes.

Values: The destination IP address must be within the 127.0.0.0/8 IP address space for Operation, Administration, and Maintenance (OAM) packets.

detail—(Optional) Display detailed output.

exp exp—(Optional) Specify the class-of-service to use when sending probes.

Range: 0 through 7

Default: 7

fanout fanout-number—(Optional) Specify the maximum number of nexthops to search per node.

Range: 1 through 16

Default: 16

logical-system—(Optional) Specify the name of the logical system for the traceroute attempt.

no-resolve—(Optional) Specify not to resolve the hostname that corresponds to the IP address.

paths *maximum-paths*—(Optional) Specify the maximum number of paths to search.

Range: 1 through 255

Default: 16

retries *retries-number*—(Optional) Specify the number of times to resend probe values.

Range: 1 through 9

Default: 3

routing-instance *routing-instance-name*—(Optional) Specify the name of the routing instance for the traceroute attempt.

source *source-address*—(Optional) Specify the source address of the outgoing traceroute packets.

ttl *value*—(Optional) Specify the maximum time-to-live value to include in the traceroute request, in seconds.

Range: 1 through 125

Default: 64

wait *seconds*—(Optional) Specify the number of seconds to wait before resending a probe.

Range: 5 through 15

Default: 10

Required Privilege Level

network

List of Sample Output

[traceroute mpls segment-routing isis on page 2626](#)

Output Fields

[Table 75 on page 2468](#) describes the output fields for the **traceroute mpls segment-routing isis fec** command and the **traceroute mpls segment-routing isis fec detail** commands. Output fields are listed in the approximate order in which they appear.

Table 98: traceroute mpls ldp Output Fields

Field Name	Field Description	Level of Output
Probe options	Probe options specified in the traceroute mpls ldp fec command.	all levels
ttl	Time to live value of the labeled packet.	none specified
Label	Outgoing label used for forwarding the packet along the label-switched paths.	none specified

Table 98: traceroute mpls ldp Output Fields (continued)

Field Name	Field Description	Level of Output
Protocol	Signaling protocol used. For this command, it is LDP.	none specified
Address	Address of the next hop.	none specified
Previous Hop	Address of the previous hop. Previous hop address of the first hop is null .	none specified
Probe status	Forwarding status from the first hop to the last-hop label-switching router (egress point in the label-switched paths).	none specified
Hop	Address of the hops in the label-switched path from the first hop to the last hop. Depth indicates the level of the hop.	detail
Parent	Address of the previous hop. Parent value for the first hop is null .	detail
Return Code	Return code for reporting the result of processing the echo request by the receiver.	detail
Response time	Time for the echo request to reach the receiver.	detail
Multipath type	Labels or addresses used by the specified multipath type. If multipaths are not used, the value is none .	detail
Label Stack	Label stack used to forward the packet.	detail

Sample Output

traceroute mpls segment-routing isis

user@router> **traceroute mpls ldp 4.4.4.4**

Probe options: ttl 64, retries 3, wait 10, paths 16, exp 7, fanout 16

ttl	Label	Protocol	Address	Previous Hop	Probe Status
1	402006	ISIS	12.1.1.2	(null)	Success
FEC-Stack-Sent: ISIS					
ttl	Label	Protocol	Address	Previous Hop	Probe Status

```

    2  402006  ISIS      23.1.1.2      12.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol Address      Previous Hop  Probe Status
    3  402006  ISIS      34.1.1.2      23.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol Address      Previous Hop  Probe Status
    4  402006  ISIS      45.1.1.2      34.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol Address      Previous Hop  Probe Status
    5           3  ISIS      56.1.1.2      45.1.1.2      Egress
FEC-Stack-Sent: ISIS

```

Path 1 via ge-0/0/0.0 destination 127.0.0.64

```

ttl   Label  Protocol Address      Previous Hop  Probe Status
    3  402006  ISIS      34.2.1.2      23.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol Address      Previous Hop  Probe Status
    4  402006  ISIS      45.1.1.2      34.2.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol Address      Previous Hop  Probe Status
    5           3  ISIS      56.1.1.2      45.1.1.2      Egress
FEC-Stack-Sent: ISIS

```

Path 2 via ge-0/0/0.0 destination 127.0.0.65

```

ttl   Label  Protocol Address      Previous Hop  Probe Status
    3  402006  ISIS      34.5.1.2      23.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol Address      Previous Hop  Probe Status
    4  402006  ISIS      45.2.1.2      34.5.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol Address      Previous Hop  Probe Status
    5           3  ISIS      56.1.1.2      45.2.1.2      Egress
FEC-Stack-Sent: ISIS

```

Path 3 via ge-0/0/0.0 destination 127.0.0.69

traceroute mpls segment-routing isis

Syntax

```
traceroute mpls segment-routing isis<ldp> fec
<destination ip-address>
<detail>
<exp exp>
<fanout fanout-number>
<logical-system logical-system-name>
<no-resolve>
<paths maximum-paths>
<pipe-mode>
<retries retries-number>
<routing-instance routing-instance-name>
<source ip-address>
<ttl value>
<update>
<wait seconds>
```

Release Information

Command introduced in Junos OS Release 19.1R1.

Description

Trace route to a remote host for a segment routing label-switched path added by the ISIS protocol. Use **traceroute mpls segment-routing isisp** as a debugging tool to locate MPLS label-switched path forwarding issues in a network. (Currently supported for IPv4 packets only.)

Options

fec—Specify the IP address and optional prefix of the forwarding equivalence class (FEC).

destination ip-address—(Optional) Specify the destination address to use when sending probes.

Values: The destination IP address must be within the 127.0.0.0/8 IP address space for Operation, Administration, and Maintenance (OAM) packets.

detail—(Optional) Display detailed output.

exp exp—(Optional) Specify the class-of-service to use when sending probes.

Range: 0 through 7

Default: 7

fanout fanout-number—(Optional) Specify the maximum number of nexthops to search per node.

Range: 1 through 16

Default: 16

logical-system—(Optional) Specify the name of the logical system for the traceroute attempt.

no-resolve—(Optional) Specify not to resolve the hostname that corresponds to the IP address.

paths *maximum-paths*—(Optional) Specify the maximum number of paths to search.

Range: 1 through 255

Default: 16

retries *retries-number*—(Optional) Specify the number of times to resend probe values.

Range: 1 through 9

Default: 3

routing-instance *routing-instance-name*—(Optional) Specify the name of the routing instance for the traceroute attempt.

source *source-address*—(Optional) Specify the source address of the outgoing traceroute packets.

ttl *value*—(Optional) Specify the maximum time-to-live value to include in the traceroute request, in seconds.

Range: 1 through 125

Default: 64

wait *seconds*—(Optional) Specify the number of seconds to wait before resending a probe.

Range: 5 through 15

Default: 10

Required Privilege Level

network

List of Sample Output

[traceroute mpls segment-routing isis on page 2630](#)

Output Fields

[Table 75 on page 2468](#) describes the output fields for the **traceroute mpls segment-routing isis fec** command and the **traceroute mpls segment-routing isis fec detail** commands. Output fields are listed in the approximate order in which they appear.

Table 99: traceroute mpls ldp Output Fields

Field Name	Field Description	Level of Output
Probe options	Probe options specified in the traceroute mpls ldp fec command.	all levels
ttl	Time to live value of the labeled packet.	none specified
Label	Outgoing label used for forwarding the packet along the label-switched paths.	none specified

Table 99: traceroute mpls ldp Output Fields (continued)

Field Name	Field Description	Level of Output
Protocol	Signaling protocol used. For this command, it is LDP.	none specified
Address	Address of the next hop.	none specified
Previous Hop	Address of the previous hop. Previous hop address of the first hop is null .	none specified
Probe status	Forwarding status from the first hop to the last-hop label-switching router (egress point in the label-switched paths).	none specified
Hop	Address of the hops in the label-switched path from the first hop to the last hop. Depth indicates the level of the hop.	detail
Parent	Address of the previous hop. Parent value for the first hop is null .	detail
Return Code	Return code for reporting the result of processing the echo request by the receiver.	detail
Response time	Time for the echo request to reach the receiver.	detail
Multipath type	Labels or addresses used by the specified multipath type. If multipaths are not used, the value is none .	detail
Label Stack	Label stack used to forward the packet.	detail

Sample Output

traceroute mpls segment-routing isis

user@router> **traceroute mpls ldp 4.4.4.4**

Probe options: ttl 64, retries 3, wait 10, paths 16, exp 7, fanout 16

ttl	Label	Protocol	Address	Previous Hop	Probe Status
1	402006	ISIS	12.1.1.2	(null)	Success
FEC-Stack-Sent: ISIS					
ttl	Label	Protocol	Address	Previous Hop	Probe Status

```

    2  402006  ISIS      23.1.1.2      12.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol  Address        Previous Hop    Probe Status
    3  402006  ISIS      34.1.1.2      23.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol  Address        Previous Hop    Probe Status
    4  402006  ISIS      45.1.1.2      34.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol  Address        Previous Hop    Probe Status
    5           3  ISIS      56.1.1.2      45.1.1.2      Egress
FEC-Stack-Sent: ISIS

```

Path 1 via ge-0/0/0.0 destination 127.0.0.64

```

ttl   Label  Protocol  Address        Previous Hop    Probe Status
    3  402006  ISIS      34.2.1.2      23.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol  Address        Previous Hop    Probe Status
    4  402006  ISIS      45.1.1.2      34.2.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol  Address        Previous Hop    Probe Status
    5           3  ISIS      56.1.1.2      45.1.1.2      Egress
FEC-Stack-Sent: ISIS

```

Path 2 via ge-0/0/0.0 destination 127.0.0.65

```

ttl   Label  Protocol  Address        Previous Hop    Probe Status
    3  402006  ISIS      34.5.1.2      23.1.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol  Address        Previous Hop    Probe Status
    4  402006  ISIS      45.2.1.2      34.5.1.2      Success
FEC-Stack-Sent: ISIS
ttl   Label  Protocol  Address        Previous Hop    Probe Status
    5           3  ISIS      56.1.1.2      45.2.1.2      Egress
FEC-Stack-Sent: ISIS

```

Path 3 via ge-0/0/0.0 destination 127.0.0.69

CCC and TCC Operational Commands

IN THIS CHAPTER

- [show connections](#) | [2633](#)
- [show route ccc](#) | [2637](#)
- [show route forwarding-table](#) | [2639](#)

show connections

List of Syntax

[Syntax on page 2633](#)

[Syntax \(EX Series Switches\) on page 2633](#)

Syntax

```
show connections
<brief | extensive>
<all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch | remote-interface-switch>
<down | up | up-down>
<history>
<labels>
<logical-system (all | logical-system-name)>
<name>
<status>
```

Syntax (EX Series Switches)

```
show connections
<brief | extensive>
<all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch | remote-interface-switch>
<down | up | up-down>
<history>
<labels>
<name>
<status>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.5 for EX Series switches.

Description

Display information about the configured circuit cross-connect (CCC) connections.

Options

none—Display the standard level of output for all configured CCC connections.

all—(Optional) Display all connections.

brief | extensive—(Optional) Display the specified level of output. Use history to display information about connection history. Use labels to display labels used for transmit and receive LSPs. Use status to display information about the connection and interface status.

- interface-switch**—(Optional) Display interface switch connections only.
- lsp-switch**—(Optional) Display LSP switch connections only.
- p2mp-receive-switch**—(Optional) Display point-to-multipoint LSP to local interfaces switch connections only.
- p2mp-transmit-switch**—(Optional) Display local interface to point-to-multipoint LSP switch connections only.
- remote-interface-switch**—(Optional) Display remote interface switch connections only.
- down | up | up-down**—(Optional) Display nonoperational, operational, or both kinds of connections.
- history**—(Optional) Display information about connection history.
- labels**—(Optional) Display labels used for transmit and receive.
- logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.
- name**—(Optional) Display information about the specified connection only.
- status**—(Optional) Display information about the connection and interface status.

Required Privilege Level

view

Output Fields

[Table 39 on page 2263](#) describes the output fields for the **show connections** command. Output fields are listed in the approximate order in which they appear.

Table 100: show connections Output Fields

Field Name	Field Description
CCC and TCC connections [Link Monitoring On Off]	Whether link monitoring is enabled: On or Off .
Legend for Status (St)	Connection or circuit status. See the output's legend for an explanation of the status field values.

Table 100: show connections Output Fields (*continued*)

Field Name	Field Description
Legend for connection types	Type of connection: <ul style="list-style-type: none"> • if-sw—Layer 2 switching cross-connect. • rmt-if—Remote interface switch. While graceful restart is in progress, rmt-if will display a state (St) of Restart. • lsp-sw—LSP stitching cross-connect. While graceful restart is in progress, lsp-sw will display a state (St) of Restart.
Legend for circuit types	Type of circuits: <ul style="list-style-type: none"> • intf—Interface circuit. • tlsp—Transmit LSP circuit. • rlsp—Receive LSP circuit.
Connection/Circuit	Name of the configured CCC connection.
Type	Type of connection.
St	State of the connection.
Time last up	Time that the connection or circuit last transitioned to the Up (operational) state.
# Up trans	Number of times that the connection or circuit has transitioned to the Up (operational) state.

Sample Output

show connections

user@switch> **show connections**

```

CCC and TCC connections [Link Monitoring On]
  Legend for status (St)           Legend for connection types
  UN -- uninitialized             if-sw:  interface switching
  NP -- not present               rmt-if: remote interface switching
  WE -- wrong encapsulation       lsp-sw: LSP switching
  DS -- disabled
  Dn -- down
  -> -- only outbound conn is up
  Legend for circuit types
  intf -- interface

```

```
<- -- only inbound conn is up      tlsp -- transmit LSP
Up -- operational                    rlsp -- receive LSP
RmtDn -- remote CCC down
Restart -- restarting
```

CCC Graceful restart : Restarting

Connection/Circuit	Type	St	Time last up	# Up trans
IFSW-ed	if-sw	Up	Aug 5 15:39:15	1
so-1/0/2.0	intf	Up		
tl-0/1/2.0	intf	Up		
SW-db	rmt-if	Restart		0
so-1/0/3.0	intf	Up		
pro4-ca	tlsp	Dn		
pro4-ac	rlsp	NP		

show route ccc

Syntax

```
show route ccc ccc  
<brief | detail | extensive | terse>  
<logical-system (all | logical-system-name)>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

Display circuit cross-connect (CCC) entries in the Multiprotocol Link Switching (MPLS) routing table.

Options

ccc—Name of an entry with a circuit cross-connect interface.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

| [show connections](#) | [2262](#)

List of Sample Output

[show route ccc extensive on page 2637](#)

Output Fields

For information about output fields, see the output field tables for the *show route* command, the *show route detail* command, the *show route extensive* command, or the *show route terse* command.

Sample Output

show route ccc extensive

```
user@host> show route ccc fe-0/1/0.600 extensive
```

```
mpls.0: 19 destinations, 19 routes (19 active, 0 holddown, 0 hidden)
fe-0/1/2.600 (1 entry, 1 announced)
```

```
TSI:
```

```
KRT in-kernel fe-0/1/2.600.0      /16 -> {0.0.0.0}
    *CCC      Preference: 7
              Next-hop reference count: 2
              Next hop: via so-0/0/3.0 weight 0x1, selected
              Label operation: Push 101424
              State: <Active Int>
              Local AS: 100
              Age: 28:13   Metric: 3
              Task: MPLS
              Announcement bits (1): 0-KRT
              AS path: I
```

show route forwarding-table

List of Syntax

[Syntax on page 2639](#)

[Syntax \(MX Series Routers\) on page 2639](#)

[Syntax \(TX Matrix and TX Matrix Plus Routers\) on page 2639](#)

Syntax

```
show route forwarding-table
<detail | extensive | summary>
<all>
<ccc interface-name>
<destination destination-prefix>
<family family | matching matching>
<interface-name interface-name>
<label name>
<matching matching>
<multicast>
<table (default | logical-system-name/routing-instance-name | routing-instance-name)>
<vlan (all | vlan-name)>
<vpn vpn>
```

Syntax (MX Series Routers)

```
show route forwarding-table
<detail | extensive | summary>
<all>
<bridge-domain (all | domain-name)>
<ccc interface-name>
<destination destination-prefix>
<family family | matching matching>
<interface-name interface-name>
<label name>
<learning-vlan-id learning-vlan-id>
<matching matching>
<multicast>
<table (default | logical-system-name/routing-instance-name | routing-instance-name)>
<vlan (all | vlan-name)>
<vpn vpn>
```

Syntax (TX Matrix and TX Matrix Plus Routers)

```

show route forwarding-table
<detail | extensive | summary>
<all>
<ccc interface-name>
<destination destination-prefix>
<family family | matching matching>
<interface-name interface-name>
<matching matching>
<label name>
<lcc number>
<multicast>
<table routing-instance-name>
<vpn vpn>

```

Release Information

Command introduced before Junos OS Release 7.4.

Option **bridge-domain** introduced in Junos OS Release 7.5

Option **learning-vlan-id** introduced in Junos OS Release 8.4

Options **all** and **vlan** introduced in Junos OS Release 9.6.

Command introduced in Junos OS Release 11.3 for the QFX Series.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

Display the Routing Engine's forwarding table, including the network-layer prefixes and their next hops. This command is used to help verify that the routing protocol process has relayed the correction information to the forwarding table. The Routing Engine constructs and maintains one or more routing tables. From the routing tables, the Routing Engine derives a table of active routes, called the forwarding table.

NOTE: The Routing Engine copies the forwarding table to the Packet Forwarding Engine, the part of the router that is responsible for forwarding packets. To display the entries in the Packet Forwarding Engine's forwarding table, use the **show pfe route** command.

Options

none—Display the routes in the forwarding tables. By default, the **show route forwarding-table** command does not display information about private, or internal, forwarding tables.

detail | extensive | summary—(Optional) Display the specified level of output.

all—(Optional) Display routing table entries for all forwarding tables, including private, or internal, tables.

bridge-domain (**all** | **bridge-domain-name**)—(MX Series routers only) (Optional) Display route entries for all bridge domains or the specified bridge domain.

ccc interface-name—(Optional) Display route entries for the specified circuit cross-connect interface.

destination destination-prefix—(Optional) Destination prefix.

family family—(Optional) Display routing table entries for the specified family: **bridge** (**ccc** | **destination** | **detail** | **extensive** | **interface-name** | **label** | **learning-vlan-id** | **matching** | **multicast** | **summary** | **table** | **vlan** | **vpn**), **ethernet-switching**, **evpn**, **fibre-channel**, **fmembers**, **inet**, **inet6**, **iso**, **mcsnoop-inet**, **mcsnoop-inet6**, **mpls**, **satellite-inet**, **satellite-inet6**, **satellite-vpls**, **tnp**, **unix**, **vpls**, or **vlan-classification**.

interface-name interface-name—(Optional) Display routing table entries for the specified interface.

label name—(Optional) Display route entries for the specified label.

lcc number—(TX Matrix and TX matrix Plus routers only) (Optional) On a routing matrix composed of a TX Matrix router and T640 routers, display information for the specified T640 router (or line-card chassis) connected to the TX Matrix router. On a routing matrix composed of the TX Matrix Plus router and T1600 or T4000 routers, display information for the specified router (line-card chassis) connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

learning-vlan-id learning-vlan-id—(MX Series routers only) (Optional) Display learned information for all VLANs or for the specified VLAN.

matching matching—(Optional) Display routing table entries matching the specified prefix or prefix length.

multicast—(Optional) Display routing table entries for multicast routes.

table —(Optional) Display route entries for all the routing tables in the main routing instance or for the specified routing instance. If your device supports logical systems, you can also display route entries for the specified logical system and routing instance. To view the routing instances on your device, use the **show route instance** command.

vlan (all | vlan-name)—(Optional) Display information for all VLANs or for the specified VLAN.

vpn vpn—(Optional) Display routing table entries for a specified VPN.

Required Privilege Level

view

List of Sample Output

[show route forwarding-table on page 2647](#)

[show route forwarding-table detail on page 2649](#)

[show route forwarding-table destination extensive \(Weights and Balances\) on page 2650](#)

[show route forwarding-table extensive on page 2650](#)

[show route forwarding-table extensive \(RPF\) on page 2653](#)

[show route forwarding-table extensive \(PIM using point-to-multipoint mode\) on page 2653](#)

[show route forwarding-table \(dynamic list next hop\) on page 2654](#)

[show route forwarding-table family mpls on page 2655](#)

[show route forwarding-table family mpls ccc ge-0/0/1.1004 on page 2655](#)

[show route forwarding-table family vpls on page 2656](#)

[show route forwarding-table vpls \(Broadcast, unknown unicast, and multicast \(BUM\) hashing is enabled\) on page 2656](#)

[show route forwarding-table vpls \(Broadcast, unknown unicast, and multicast \(BUM\) hashing is enabled with MAC Statistics\) on page 2657](#)

[show route forwarding-table family vpls extensive on page 2657](#)

[show route forwarding-table table default on page 2659](#)

[show route forwarding-table table logical-system-name/routing-instance-name on page 2660](#)

[show route forwarding-table vpn on page 2661](#)

Output Fields

[Table 67 on page 2381](#) lists the output fields for the **show route forwarding-table** command. Output fields are listed in the approximate order in which they appear. Field names might be abbreviated (as shown in parentheses) when no level of output is specified, or when the **detail** keyword is used instead of the **extensive** keyword.

Table 101: show route forwarding-table Output Fields

Field Name	Field Description	Level of Output
Logical system	Name of the logical system. This field is displayed if you specify the table logical-system-name/routing-instance-name option on a device that is configured for and supports logical systems.	All levels
Routing table	Name of the routing table (for example, inet, inet6, mpls).	All levels

Table 101: show route forwarding-table Output Fields (continued)

Field Name	Field Description	Level of Output
Enabled protocols		All levels

Table 101: show route forwarding-table Output Fields (continued)

Field Name	Field Description	Level of Output
	<p>The features and protocols that have been enabled for a given routing table. This field can contain the following values:</p> <ul style="list-style-type: none"> • BUM hashing—BUM hashing is enabled. • MAC Stats—Mac Statistics is enabled. • Bridging—Routing instance is a normal layer 2 bridge. • No VLAN—No VLANs are associated with the bridge domain. • All VLANs—The vlan-id all statement has been enabled for this bridge domain. • Single VLAN—Single VLAN ID is associated with the bridge domain. • MAC action drop—New MACs will be dropped when the MAC address limit is reached. • Dual VLAN—Dual VLAN tags are associated with the bridge domain • No local switching—No local switching is enabled for this routing instance.. • Learning disabled—Layer 2 learning is disabled for this routing instance. • MAC limit reached—The maximum number of MAC addresses that was configured for this routing instance has been reached. • VPLS—The VPLS protocol is enabled. • No IRB I2-copy—The no-irb-layer-2-copy feature is enabled for this routing instance. • ACKed by all peers—All peers have acknowledged this routing instance. • BUM Pruning—BUM pruning is enabled on the VPLS instance. • Def BD VXLAN—VXLAN is enabled for the default bridge domain. • EVPN—EVPN protocol is enabled for this routing instance. • Def BD OVSDb—Open vSwitch Database (OVSDb) is enabled on the default bridge domain. • Def BD Ingress replication—VXLAN ingress node replication is enabled on the default bridge domain. • L2 backhaul—Layer 2 backhaul is enabled. • FRR optimize—Fast reroute optimization • MAC pinning—MAC pinning is enabled for this bridge domain. • MAC Aging Timer—The MAC table aging time is set per routing instance. • EVPN VXLAN—This routing instance supports EVPN with VXLAN encapsulation. • PBBN—This routing instance is configured as a provider backbone bridged network. 	

Table 101: show route forwarding-table Output Fields (*continued*)

Field Name	Field Description	Level of Output
	<ul style="list-style-type: none"> • PBN—This routing instance is configured as a provider bridge network. • ETREE—The ETREE protocol is enabled on this EVPN routing instance. • ARP/NDP suppression—EVPN ARP NDP suppression is enabled in this routing instance. • Def BD EVPN VXLAN—EVPN VXLAN is enabled for the default bridge domain. • MPLS control word—Control word is enabled for this MPLS routing instance. 	
Address family	Address family (for example, IP , IPv6 , ISO , MPLS , and VPLS).	All levels
Destination	Destination of the route.	detail extensive
Route Type (Type)	<p>How the route was placed into the forwarding table. When the detail keyword is used, the route type might be abbreviated (as shown in parentheses):</p> <ul style="list-style-type: none"> • cloned (clon)—(TCP or multicast only) Cloned route. • destination (dest)—Remote addresses directly reachable through an interface. • destination down (iddn)—Destination route for which the interface is unreachable. • interface cloned (ifcl)—Cloned route for which the interface is unreachable. • route down (ifdn)—Interface route for which the interface is unreachable. • ignore (ignr)—Ignore this route. • interface (intf)—Installed as a result of configuring an interface. • permanent (perm)—Routes installed by the kernel when the routing table is initialized. • user—Routes installed by the routing protocol process or as a result of the configuration. 	All levels
Route Reference (RtRef)	Number of routes to reference.	detail extensive

Table 101: show route forwarding-table Output Fields (*continued*)

Field Name	Field Description	Level of Output
Flags	<p>Route type flags:</p> <ul style="list-style-type: none"> • none—No flags are enabled. • accounting—Route has accounting enabled. • cached—Cache route. • incoming-iface <i>interface-number</i>—Check against incoming interface. • prefix load balance—Load balancing is enabled for this prefix. • rt nh decoupled—Route has been decoupled from the next hop to the destination. • sent to PFE—Route has been sent to the Packet Forwarding Engine. • static—Static route. 	extensive
Next hop	<p>IP address of the next hop to the destination.</p> <p>NOTE: For static routes that use point-to-point (P2P) outgoing interfaces, the next-hop address is not displayed in the output.</p>	detail extensive
Next hop Type (Type)	<p>Next-hop type. When the detail keyword is used, the next-hop type might be abbreviated (as indicated in parentheses):</p> <ul style="list-style-type: none"> • broadcast (bcst)—Broadcast. • deny—Deny. • discard (dscd)—Discard. • hold—Next hop is waiting to be resolved into a unicast or multicast type. • indexed (idxd)—Indexed next hop. • indirect (indr)—Indirect next hop. • local (loc)—Local address on an interface. • routed multicast (mcrt)—Regular multicast next hop. • multicast (mcst)—Wire multicast next hop (limited to the LAN). • multicast discard (mdsc)—Multicast discard. • multicast group (mgrp)—Multicast group member. • receive (rcv)—Receive. • reject (rjct)—Discard. An ICMP unreachable message was sent. • resolve (rslv)—Resolving the next hop. • unicast (ucst)—Unicast. • unilist (ulst)—List of unicast next hops. A packet sent to this next hop goes to any next hop in the list. 	detail extensive

Table 101: show route forwarding-table Output Fields (*continued*)

Field Name	Field Description	Level of Output
Index	Software index of the next hop that is used to route the traffic for a given prefix.	detail extensive none
Route interface-index	Logical interface index from which the route is learned. For example, for interface routes, this is the logical interface index of the route itself. For static routes, this field is zero. For routes learned through routing protocols, this is the logical interface index from which the route is learned.	extensive
Reference (NhRef)	Number of routes that refer to this next hop.	detail extensive none
Next-hop interface (Netif)	Interface used to reach the next hop.	detail extensive none
Weight	Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible (see the Balance field description).	extensive
Balance	Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a router is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.	extensive
RPF interface	List of interfaces from which the prefix can be accepted. Reverse path forwarding (RPF) information is displayed only when rpf-check is configured on the interface.	extensive

Sample Output

show route forwarding-table

user@host> **show route forwarding-table**

```

Routing table: default.inet
Internet:
Destination          Type RtRef Next hop          Type Index NhRef Netif

```

```

default      perm      0      rjct      46      4
0.0.0.0/32   perm      0      dscd      44      1
172.16.1.0/24 ifdn      0      rslv      608      1 ge-2/0/1.0
172.16.1.0/32 iddn      0 172.16.1.0      rcv      606      1 ge-2/0/1.0
172.16.1.1/32 user      0      rjct      46      4
172.16.1.1/32 intf      0 172.16.1.1      locl      607      2
172.16.1.1/32 iddn      0 172.16.1.1      locl      607      2
172.16.1.255/32 iddn      0 ff:ff:ff:ff:ff:ff bcst      605      1 ge-2/0/1.0
10.0.0.0/24  intf      0      rslv      616      1 ge-2/0/0.0
10.0.0.0/32  dest      0 10.0.0.0      rcv      614      1 ge-2/0/0.0
10.0.0.1/32  intf      0 10.0.0.1      locl      615      2
10.0.0.1/32  dest      0 10.0.0.1      locl      615      2
10.0.0.255/32 dest      0 10.0.0.255      bcst      613      1 ge-2/0/0.0
10.1.1.0/24  ifdn      0      rslv      612      1 ge-2/0/1.0
10.1.1.0/32  iddn      0 10.1.1.0      rcv      610      1 ge-2/0/1.0
10.1.1.1/32  user      0      rjct      46      4
10.1.1.1/32  intf      0 10.1.1.1      locl      611      2
10.1.1.1/32  iddn      0 10.1.1.1      locl      611      2
10.1.1.255/32 iddn      0 ff:ff:ff:ff:ff:ff bcst      609      1 ge-2/0/1.0
10.209.0.0/16 user      0 10.209.63.254      ucst      419      20 fxp0.0
10.209.0.0/16 user      1 0:12:1e:ca:98:0      ucst      419      20 fxp0.0
10.209.0.0/18 intf      0      rslv      418      1 fxp0.0
10.209.0.0/32 dest      0 10.209.0.0      rcv      416      1 fxp0.0
10.209.2.131/32 intf      0 10.209.2.131      locl      417      2
10.209.2.131/32 dest      0 10.209.2.131      locl      417      2
10.209.17.55/32 dest      0 0:30:48:5b:78:d2      ucst      435      1 fxp0.0
10.209.63.42/32 dest      0 0:23:7d:58:92:ca      ucst      434      1 fxp0.0
10.209.63.254/32 dest      0 0:12:1e:ca:98:0      ucst      419      20 fxp0.0
10.209.63.255/32 dest      0 10.209.63.255      bcst      415      1 fxp0.0
10.227.0.0/16 user      0 10.209.63.254      ucst      419      20 fxp0.0

```

...

Routing table: iso

ISO:

```

Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm      0      rjct      27      1
47.0005.80ff.f800.0000.0108.0003.0102.5524.5220.00
intf      0      locl      28      1

```

Routing table: inet6

Internet6:

```

Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm      0      rjct      6      1

```



```

ff00::/8      perm      0      mdsc      4      1
ff02::1/128   perm      0 ff02::1   mcst      3      1

Routing table: ccc
MPLS:
Interface.Label  Type RtRef Next hop      Type Index NhRef Netif
default          perm      0      rjct 16      1
100004(top)fe-0/0/1.0

```

show route forwarding-table detail

user@host> show route forwarding-table detail

```

Routing table: inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          user      2 0:90:69:8e:b1:1b ucst  132      4 fxp0.0
default          perm      0      rjct   14      1
10.1.1.0/24      intf      0 ff.3.0.21   ucst  322      1 so-5/3/0.0
10.1.1.0/32      dest      0 10.1.1.0    recv  324      1 so-5/3/0.0
10.1.1.1/32      intf      0 10.1.1.1    locl  321      1
10.1.1.255/32    dest      0 10.1.1.255  bcst  323      1 so-5/3/0.0
10.21.21.0/24    intf      0 ff.3.0.21   ucst  326      1 so-5/3/0.0
10.21.21.0/32    dest      0 10.21.21.0  recv  328      1 so-5/3/0.0
10.21.21.1/32    intf      0 10.21.21.1  locl  325      1
10.21.21.255/32  dest      0 10.21.21.255 bcst  327      1 so-5/3/0.0
127.0.0.1/32     intf      0 127.0.0.1    locl  320      1
172.17.28.19/32  clon      1 192.168.4.254 ucst  132      4 fxp0.0
172.17.28.44/32  clon      1 192.168.4.254 ucst  132      4 fxp0.0

...

Routing table: private1__.inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm      0      rjct   46      1
10.0.0.0/8       intf      0      rslv  136      1 fxp1.0
10.0.0.0/32      dest      0 10.0.0.0    recv  134      1 fxp1.0
10.0.0.4/32      intf      0 10.0.0.4    locl  135      2
10.0.0.4/32      dest      0 10.0.0.4    locl  135      2

...

Routing table: iso

```

```

ISO:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm    0              rjct   38    1

Routing table: inet6
Internet6:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm    0              rjct   22    1
ff00::/8         perm    0              mdsc   21    1
ff02::1/128      perm    0 ff02::1      mcst   17    1

...

Routing table: mpls
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm    0              rjct  28    1

```

show route forwarding-table destination extensive (Weights and Balances)

user@host> **show route forwarding-table destination 3.4.2.1 extensive**

```

Routing table: inet [Index 0]
Internet:

Destination:  3.4.2.1/32
  Route type: user
  Route reference: 0
  Route interface-index: 0
  Flags: sent to PFE
  Next-hop type: unilist
  Index: 262143  Reference: 1
  Nexthop: 172.16.4.4
  Next-hop type: unicast
  Index: 335     Reference: 2
  Next-hop interface: so-1/1/0.0
  Weight: 22     Balance: 3
  Nexthop: 145.12.1.2
  Next-hop type: unicast
  Index: 337     Reference: 2
  Next-hop interface: so-0/1/2.0
  Weight: 33     Balance: 33

```

show route forwarding-table extensive

user@host> **show route forwarding-table extensive**

```

Routing table: inet [Index 0]
Internet:

```

```

Destination:  default
  Route type:  user
  Route reference: 2
  Flags: sent to PFE
  Nexthop: 00:00:5E:00:53:1b
  Next-hop type: unicast
  Next-hop interface: fxp0.0
                                Route interface-index: 0
                                Index: 132      Reference: 4

```

```

Destination:  default
  Route type:  permanent
  Route reference: 0
  Flags: none
  Next-hop type: reject
                                Route interface-index: 0
                                Index: 14       Reference: 1

```

```

Destination:  127.0.0.1/32
  Route type:  interface
  Route reference: 0
  Flags: sent to PFE
  Nexthop: 127.0.0.1
  Next-hop type: local
                                Route interface-index: 0
                                Index: 320      Reference: 1

```

...

```

Routing table: privatel__.inet [Index 1]
Internet:

```

```

Destination:  default
  Route type:  permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
                                Route interface-index: 0
                                Index: 46       Reference: 1

```

```

Destination:  10.0.0.0/8
  Route type:  interface
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: resolve
  Next-hop interface: fxp1.0
                                Route interface-index: 3
                                Index: 136      Reference: 1

```

...

```

Routing table: iso [Index 0]
ISO:

```

```

Destination:  default
  Route type: permanent
  Route reference: 0                      Route interface-index: 0
  Flags: sent to PFE
  Next-hop type: reject                   Index: 38      Reference: 1

```

```

Routing table: inet6 [Index 0]
Internet6:

```

```

Destination:  default
  Route type: permanent
  Route reference: 0                      Route interface-index: 0
  Flags: sent to PFE
  Next-hop type: reject                   Index: 22      Reference: 1

```

```

Destination:  ff00::/8
  Route type: permanent
  Route reference: 0                      Route interface-index: 0
  Flags: sent to PFE
  Next-hop type: multicast discard       Index: 21      Reference: 1

```

```

...

```

```

Routing table: private1__inet6 [Index 1]
Internet6:

```

```

Destination:  default
  Route type: permanent
  Route reference: 0                      Route interface-index: 0
  Flags: sent to PFE
  Next-hop type: reject                   Index: 54      Reference: 1

```

```

Destination:  fe80::2a0:a5ff:fe3d:375/128
  Route type: interface
  Route reference: 0                      Route interface-index: 0
  Flags: sent to PFE
  Nexthop: fe80::2a0:a5ff:fe3d:375
  Next-hop type: local                    Index: 75      Reference: 1

```

```

...

```

show route forwarding-table extensive (RPF)

The next example is based on the following configuration, which enables an RPF check on all routes that are learned from this interface, including the interface route:

```
so-1/1/0 {
  unit 0 {
    family inet {
      rpf-check;
      address 192.0.2.2/30;
    }
  }
}
```

user@host> **show route forwarding-table extensive**

```
Routing table: inet [Index 0]
Internet:
...
...
Destination: 192.0.2.3/32
  Route type: destination
  Route reference: 0                      Route interface-index: 67
  Flags: sent to PFE
  Nexthop: 192.0.2.3
  Next-hop type: broadcast                Index: 328      Reference: 1
  Next-hop interface: so-1/1/0.0
  RPF interface: so-1/1/0.0
```

show route forwarding-table extensive (PIM using point-to-multipoint mode)

user@host> **show route forwarding-table extensive**

```
Destination: 198.51.100.0/24
  Route type: user
  Route reference: 0                      Route interface-index: 335
  Multicast RPF nh index: 0
  P2mpidx: 0
  Flags: cached, check incoming interface , accounting, sent to PFE, rt nh
decoupled
  Next-hop type: indirect                Index: 1048575  Reference: 4
  Nexthop:
  Next-hop type: composite                Index: 627      Reference: 1
```

```

Next-hop type: unicast          Index: 1048574  Reference: 2
Next-hop interface: st0.1, 192.0.2.0

```

show route forwarding-table (dynamic list next hop)

The **show route forwarding table** output shows the two next hop elements for a multihomed EVPN destination.

```
user@host> show route forwarding-table label 299952 extensive
```

```

MPLS:

Destination: 299952
Route type: user
Route reference: 0          Route interface-index: 0
Multicast RPF nh index: 0
P2mpidx: 0
Flags: sent to PFE, rt nh decoupled
Next-hop type: indirect          Index: 1048575  Reference: 2
Nexthop:
Next-hop type: composite          Index: 601      Reference: 2
Next-hop type: indirect          Index: 1048574  Reference: 3
Nexthop: 1.0.0.4
Next-hop type: Push 301632, Push 299776(top) Index: 600 Reference: 2
Load Balance Label: None
Next-hop interface: ge-0/0/1.0
Next-hop type: indirect          Index: 1048577  Reference: 3
Nexthop: 1.0.0.4
Next-hop type: Push 301344, Push 299792(top) Index: 619 Reference: 2
Load Balance Label: None
Next-hop interface: ge-0/0/1.0

```

After one of the PE router has been disabled in the EVPN multihomed network, the same **show route forwarding table** output command shows one next hop element and one empty next hop element.

```
user@host> show route forwarding-table label 299952 extensive
```

```

Routing table: default.mpls [Index 0]
MPLS:

Destination: 299952
Route type: user
Route reference: 0          Route interface-index: 0

```

```

Multicast RPF nh index: 0
P2mpidx: 0
Flags: sent to PFE, rt nh decoupled
Next-hop type: indirect          Index: 1048575  Reference: 2
Nexthop:
Next-hop type: composite        Index: 601      Reference: 2
Next-hop type: indirect        Index: 1048577 Reference: 3
Nexthop: 1.0.0.4
Next-hop type: Push 301344, Push 299792(top) Index: 619 Reference: 2
Load Balance Label: None
Next-hop interface: ge-0/0/1.0

```

show route forwarding-table family mpls

user@host> show route forwarding-table family mpls

```

Routing table: mpls
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm   0              rjct   19    1
0                user   0              recv   18    3
1                user   0              recv   18    3
2                user   0              recv   18    3
100000           user   0 10.31.1.6      swap  100001 fe-1/1/0.0
800002           user   0              Pop                    vt-0/3/0.32770
vt-0/3/0.32770 (VPLS)
                  user   0              indr   351    4
                  Push 800000, Push 100002(top)
so-0/0/0.0

```

show route forwarding-table family mpls ccc ge-0/0/1.1004

user@host> show route forwarding-table mpls ccc ge-0/0/1.1004

```

Routing table: default.mpls
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
ge-0/0/1.1004 (CCC) user   0              ulst  1048577 2
                  comp    754      3
                  comp    755      3
                  comp    756      3

Routing table: __mpls-oam__.mpls

```

```

MPLS:
Destination      Type RtRef Next hop      Type Index   NhRef Netif
default          perm    0              dscd    556     1

```

show route forwarding-table family vpls

```
user@host> show route forwarding-table family vpls
```

```

Routing table: green.vpls
VPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          dynm    0              flood   353     1
default          perm    0              rjct    298     1
fe-0/1/0.0       dynm    0              flood   355     1
00:00:5E:00:53:1f/48      <<<<<Remote CE

                                dynm    0              indr    351     4
                                Push 800000, Push 100002(top)

so-0/0/0.0
00:00:5E:00:53:1f/48      <<<<<<Local CE

                                dynm    0              ucst    354     2 fe-0/1/0.0

```

show route forwarding-table vpls (Broadcast, unknown unicast, and multicast (BUM) hashing is enabled)

```
user@host> show route forwarding-table vpls
```

```

Routing table: green.vpls
VPLS:
Enabled protocols: BUM hashing
Destination      Type RtRef Next hop      Type Index   NhRef Netif
default          perm    0              dscd    519     1
lsi.1048832      intf    0              indr   1048574     4
                                172.16.3.2    Push 262145     621     2

ge-3/0/0.0
00:00:5E:00:53:01/48 user    0              ucst    590     5 ge-2/3/9.0
0x30003/51       user    0              comp    627     2
ge-2/3/9.0       intf    0              ucst    590     5 ge-2/3/9.0
ge-3/1/3.0       intf    0              ucst    619     4 ge-3/1/3.0
0x30002/51       user    0              comp    600     2
0x30001/51       user    0              comp    597     2

```


show route forwarding-table vpls (Broadcast, unknown unicast, and multicast (BUM) hashing is enabled with MAC Statistics)

user@host> **show route forwarding-table vpls**

```
Routing table: green.vpls
VPLS:
Enabled protocols: BUM hashing, MAC Stats
Destination      Type RtRef Next hop      Type Index   NhRef Netif
default          perm    0                dscd   519     1
lsi.1048834      intf    0                indr  1048574   4
                  172.16.3.2    Push 262145   592     2
ge-3/0/0.0
00:19:e2:25:d0:01/48 user    0                ucst   590     5 ge-2/3/9.0
0x30003/51       user    0                comp   630     2
ge-2/3/9.0       intf    0                ucst   590     5 ge-2/3/9.0
ge-3/1/3.0       intf    0                ucst   591     4 ge-3/1/3.0
0x30002/51       user    0                comp   627     2
0x30001/51       user    0                comp   624     2
```

show route forwarding-table family vpls extensive

user@host> **show route forwarding-table family vpls extensive**

```
Routing table: green.vpls [Index 2]
VPLS:

Destination: default
Route type: dynamic
Route reference: 0                Route interface-index: 72
Flags: sent to PFE
Next-hop type: flood             Index: 289      Reference: 1
Next-hop type: unicast           Index: 291      Reference: 3
Next-hop interface: fe-0/1/3.0
Next-hop type: unicast           Index: 290      Reference: 3
Next-hop interface: fe-0/1/2.0

Destination: default
Route type: permanent
Route reference: 0                Route interface-index: 0
Flags: none
Next-hop type: discard           Index: 341      Reference: 1

Destination: fe-0/1/2.0
Route type: dynamic
```



```

Next-hop interface: fe-0/1/2.0
Route used as destination:
  Packet count:          96      Byte count:          8079
Route used as source:
  Packet count:          296     Byte count:          24955

Destination: 00:00:5E:00:53:05/48
Route type: dynamic
Route reference: 0              Route interface-index: 74
Flags: sent to PFE, prefix load balance
Next-hop type: indirect        Index: 301      Reference: 5
Next hop: 10.31.3.2
Next-hop type: Push 800000
Next-hop interface: fe-0/1/1.0

```

show route forwarding-table table default

user@host> show route forwarding-table table default

```

Routing table: default.inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm    0                rjct   36    2
0.0.0.0/32       perm    0                dscd   34    1
10.0.60.0/30     user    0 10.0.60.13      ucst   713    5 fe-0/1/3.0
10.0.60.12/30    intf    0                rslv   688    1 fe-0/1/3.0
10.0.60.12/32    dest    0 10.0.60.12      recv   686    1 fe-0/1/3.0
10.0.60.13/32    dest    0 0:5:85:8b:bc:22 ucst   713    5 fe-0/1/3.0
10.0.60.14/32    intf    0 10.0.60.14      locl   687    2
10.0.60.14/32    dest    0 10.0.60.14      locl   687    2
10.0.60.15/32    dest    0 10.0.60.15      bcst   685    1 fe-0/1/3.0
10.0.67.12/30    user    0 10.0.60.13      ucst   713    5 fe-0/1/3.0
10.0.80.0/30     ifdn    0 ff.3.0.21       ucst   676    1 so-0/0/1.0
10.0.80.0/32     dest    0 10.0.80.0       recv   678    1 so-0/0/1.0
10.0.80.2/32     user    0                rjct   36    2
10.0.80.2/32     intf    0 10.0.80.2       locl   675    1
10.0.80.3/32     dest    0 10.0.80.3       bcst   677    1 so-0/0/1.0
10.0.90.12/30    intf    0                rslv   684    1 fe-0/1/0.0
10.0.90.12/32    dest    0 10.0.90.12      recv   682    1 fe-0/1/0.0
10.0.90.14/32    intf    0 10.0.90.14      locl   683    2
10.0.90.14/32    dest    0 10.0.90.14      locl   683    2
10.0.90.15/32    dest    0 10.0.90.15      bcst   681    1 fe-0/1/0.0
10.5.0.0/16      user    0 192.168.187.126 ucst   324    15 fxp0.0
10.10.0.0/16     user    0 192.168.187.126 ucst   324    15 fxp0.0

```

```

10.13.10.0/23      user      0 192.168.187.126   ucst      324      15 fxp0.0
10.84.0.0/16       user      0 192.168.187.126   ucst      324      15 fxp0.0
10.150.0.0/16      user      0 192.168.187.126   ucst      324      15 fxp0.0
10.157.64.0/19     user      0 192.168.187.126   ucst      324      15 fxp0.0
10.209.0.0/16      user      0 192.168.187.126   ucst      324      15 fxp0.0

```

...

Routing table: default.iso

ISO:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	60	1	

Routing table: default.inet6

Internet6:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	44	1	
::/128	perm	0		dscd	42	1	
ff00::/8	perm	0		mdsc	43	1	
ff02::1/128	perm	0	ff02::1	mcst	39	1	

Routing table: default.mpls

MPLS:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		dscd	50	1	

show route forwarding-table table logical-system-name/routing-instance-name

user@host> **show route forwarding-table table R4/vpn-red**

Logical system: R4

Routing table: vpn-red.inet

Internet:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	563	1	
0.0.0.0/32	perm	0		dscd	561	2	
172.16.0.1/32	user	0		dscd	561	2	
172.16.2.0/24	intf	0		rslv	771	1	ge-1/2/0.3
172.16.2.0/32	dest	0	172.16.2.0	recv	769	1	ge-1/2/0.3
172.16.2.1/32	intf	0	172.16.2.1	locl	770	2	
172.16.2.1/32	dest	0	172.16.2.1	locl	770	2	
172.16.2.2/32	dest	0	0.4.80.3.0.1b.c0.d5.e4.bd.0.1b.c0.d5.e4.bc.8.0	ucst	789	1	ge-1/2/0.3
172.16.2.255/32	dest	0	172.16.2.255	bcst	768	1	ge-1/2/0.3

```

172.16.233.0/4      perm      1      mdsc    562      1
172.16.233.1/32    perm      0 172.16.233.1    mcst    558      1
255.255.255.255/32 perm      0      bcst    559      1

Logical system: R4
Routing table: vpn-red.iso
ISO:
Destination          Type RtRef Next hop          Type Index NhRef Netif
default              perm      0      rjct    608      1

Logical system: R4
Routing table: vpn-red.inet6
Internet6:
Destination          Type RtRef Next hop          Type Index NhRef Netif
default              perm      0      rjct    708      1
::/128              perm      0      dscd    706      1
ff00::/8            perm      0      mdsc    707      1
ff02::1/128         perm      0 ff02::1    mcst    704      1

Logical system: R4
Routing table: vpn-red.mpls
MPLS:
Destination          Type RtRef Next hop          Type Index NhRef Netif
default              perm      0      dscd    638

```

show route forwarding-table vpn

user@host> show route forwarding-table vpn VPN-A

```

Routing table:: VPN-A.inet
Internet:
Destination          Type RtRef Nexthop          Type Index NhRef Netif
default              perm      0      rjct      4      4
10.39.10.20/30       intf      0 ff.3.0.21    ucst     40      1
so-0/0/0.0
10.39.10.21/32       intf      0 10.39.10.21    locl     36      1
10.255.14.172/32     user      0      ucst     69      2
so-0/0/0.0
10.255.14.175/32     user      0      indr     81      3
Push 100004, Push
100004(top) so-1/0/0.0
172.16.233.0/4       perm      2      mdsc      5      3
172.16.233.1/32     perm      0 172.16.233.1    mcst      1      8

```

172.16.233.5/32	user	1	172.16.233.5	mcst	1	8
255.255.255.255/32	perm	0		bcst	2	3

On QFX5200, the results for this command look like this:

show route forwarding-table family mpls

```

Routing table: default.mpls
MPLS:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0 dscd 65 1
0 user 0 recv 64 4
1 user 0 recv 64 4
2 user 0 recv 64 4
13 user 0 recv 64 4
300384 user 0 9.1.1.1 Pop 1711 2 xe-0/0/34.0
300384(S=0) user 0 9.1.1.1 Pop 1712 2 xe-0/0/34.0
300400 user 0 ulst 131071 2
                                10.1.1.2 Pop 1713 1 xe-0/0/38.0
                                172.16.11.2 Pop 1714 1 xe-0/0/40.0
300400(S=0) user 0 ulst 131072 2
                                10.1.1.2 Pop 1715 1 xe-0/0/38.0
                                172.16.11.2 Pop 1716 1 xe-0/0/40.0

Routing table: __mpls-oam__.mpls
MPLS:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0 dscd 1681 1

```

PCEP Operational Commands

IN THIS CHAPTER

- clear path-computation-client statistics | 2664
- request path-computation-client active-pce | 2666
- show isis spring sensor info | 2667
- show path-computation-client active-pce | 2670
- show path-computation-client lsp | 2675
- show path-computation-client statistics | 2681
- show path-computation-client status | 2689
- show spring-traffic-engineering | 2692

clear path-computation-client statistics

Syntax

```
clear path-computation-client statistics  
<pce-id | all>
```

Release Information

Statement introduced in Junos OS Release 12.3.

Statement introduced in Junos OS Release 16.1R3 for QFX Series switches.

Command introduced in Junos OS Release 17.1R1 for ACX Series routers.

Description

Clear Path Computation Element (PCE) statistics.

Options

pce-id—(Optional) Clear statistics of the specified PCE.

all—(Optional) Clear statistics of all available PCEs configured on the path computation client (PCC).

Required Privilege Level

clear

RELATED DOCUMENTATION

[show path-computation-client statistics](#) | [2681](#)

List of Sample Output

[clear path-computation-client statistics pce-id on page 2664](#)

[clear path-computation-client statistics all on page 2665](#)

Output Fields

When you enter this command, you are not provided feedback on the status of your request.

Sample Output

```
clear path-computation-client statistics pce-id
```

```
user@host> clear path-computation-client statistics pce1
```


clear path-computation-client statistics all

user@host> clear path-computation-client statistics all

request path-computation-client active-pce

Syntax

```
request path-computation-client active-pce pce-id
```

Release Information

Command introduced in Junos OS Release 12.3.

Command introduced in Junos OS Release 16.1R3 for QFX Series switches.

Command introduced in Junos OS Release 17.1R1 for ACX Series routers.

Description

Request a new active Path Computation Element (PCE).

Options

pce-id—Unique user defined ID for this PCE.

retry-delegation—Retry label-switched path (LSP) delegation

Required Privilege Level

request

RELATED DOCUMENTATION

| [show path-computation-client active-pce](#) | 2670

Output Fields

This command produces no output. To verify the operation of the command, run the [show path-computation-client active-pce](#) before and after running the **request path-computation-client active-pce** command.

show isis spring sensor info

Syntax

```
show isis spring sensor info
logical-system (all | logical-system-name)
```

Release Information

Command introduced in 19.1R1 on MX Series routers with MPC and MIC interfaces, and PTX series routers.

Description

Displays a list of sensors associated with the label IS-IS route and next hops for segment routing traffic. The command only displays the information related to the sensors and not the traffic statistics.

Options

none— Display the sensor information of an IS-IS SPRING route.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

view

RELATED DOCUMENTATION

sensor-based-stats

source-packet-routing (Protocols IS-IS and OSPF)

Understanding Source Packet Routing in Networking (SPRING)

List of Sample Output

[show isis spring sensor info on page 2668](#)

Output Fields

Table 1 describes the output fields for the **show isis spring sensor info** command. Output fields are listed in the approximate order in which they appear.

Table 102: show isis spring sensor info Output Fields

Field	Field Description
Sensor-name	Represents the router or interface that the sensor is associated with.

Table 102: show isis spring sensor info Output Fields (*continued*)

Field	Field Description
Sensor-id	Unique number associated either with route or interface.

Sample Output

show isis spring sensor info

user@host> **show isis spring sensor info**

Per-interface-per-member-link Ingress Sensor:

```
-----
Sensor-name                Sensor-id
aggr_ingress_intf_sensor   3221225484
```

Per-interface-per-member-link Egress Sensor:

```
-----
Sensor-name                Sensor-id
ge-0/0/0.0                 3221225497
ge-0/0/1.0                 3221225498
ge-0/0/2.0                 3221225499
```

Per-sid Ingress Sensor:

```
-----
Sensor-name                Sensor-id
16                          3221225478
17                          3221225479
18                          3221225474
19                          3221225475
20                          3221225482
21                          3221225483
22                          3221225480
23                          3221225481
24                          3221225489
25                          3221225490
400001                     3221225491
400002                     3221225492
400005                     3221225487
400006                     3221225488
400009                     3221225493
400010                     3221225494
```

400011	3221225495
400012	3221225496
IPv4/IPv6 Per-sid Egress Sensor:	

Sensor-name	Sensor-id
L-ISIS-::10.10.10.1	3221225474

show path-computation-client active-pce

Syntax

```
show path-computation-client active-pce  
<brief | detail>
```

Release Information

Command introduced in Junos OS Release 12.3.

Command introduced in Junos OS Release 16.1R3 for QFX Series switches.

Command introduced in Junos OS Release 17.1R1 for ACX Series routers.

Description

Displays information about the current active Path Computation Element (PCE).

Options

none—Display brief information about the current active PCE.

brief | detail—(Optional) Display the specific level of output.

Required Privilege Level

view

RELATED DOCUMENTATION

[request path-computation-client active-pce](#) | [2666](#)

List of Sample Output

[show path-computation-client active-pce on page 2673](#)

[show path-computation-client active-pce detail on page 2673](#)

Output Fields

[Table 103 on page 2670](#) describes the output fields for the **show path-computation-client active-pce** command. Output fields are listed in the approximate order in which they appear.

Table 103: show path-computation-client active-pce Output Fields

Field Name	Field Description	Level of Output
IP address	IP address of the current active PCE.	All levels
Priority	Active PCE priority.	All levels

Table 103: show path-computation-client active-pce Output Fields (*continued*)

Field Name	Field Description	Level of Output
PCE status	<p>Active PCE state:</p> <ul style="list-style-type: none"> • PCE_STATE_NEW—Initial PCEP session state. • PCE_STATE_RECONNECT—Trying to re-establish TCP connection with the PCEP peer. • PCE_STATE_CONNECTING—Establishing TCP connection with the PCEP peer. • PCE_STATE_CONNECTED—TCP connection established with the PCEP peer. • PCE_STATE_SYNC—Open messages exchanged with the PCEP peer and entering SYNC state. • PCE_STATE_UP—PCEP session established. 	All levels
Session type	<p>Active PCE type:</p> <ul style="list-style-type: none"> • PCE_TYPE_STATELESS—Does not learn LSP state information from PCC. • PCE_TYPE_STATEFUL—Uses LSP state information learned from PCCs to optimize path computations, but does not actively update LSP state. A PCC maintains synchronization with the PCE. • PCE_TYPE_STATEFULACTIVE—Uses LSP state information learned from PCCs to optimize path computations, and actively updates LSP parameters in those PCCs that delegate control of their LSPs to the PCE. 	All levels
PCE-mastership	<p>PCE mastership state:</p> <ul style="list-style-type: none"> • main—Current active PCE. • backup—Backup PCE. 	All levels
PCRpts	Number of PC report (PCRpt) messages sent by PCC to a stateful PCE to report current state of LSP(s).	All levels
PCUpdates	Number of PC update (PCUpd) messages sent by a PCE to a PCC to update LSP parameters.	All levels
Local Keepalive timer	Keepalive timer used by or for the PCC.	All levels
Local Dead timer	Dead timer used by or for the PCC.	All levels
Remote Keepalive timer	Keepalive timer used by or for the PCE.	All levels

Table 103: show path-computation-client active-pce Output Fields (*continued*)

Field Name	Field Description	Level of Output
Remote Dead timer	Dead timer used by or for the PCE.	All levels
PCErr-recv	Information about type, value, and number of PC Error messages received.	All levels
Max unknown messages	Maximum number of unknown messages received for a PCEP session. Recommended value is 5. If the number of unknown messages received by a PCC or PCE is greater than or equal to the maximum number, the PCEP session is closed.	detail
Keepalives received	Number of Keepalive messages received by a PCC from a PCE.	detail
Keepalives sent	Number of Keepalive messages sent by a PCC to a PCE.	detail
Dead timer	Dead timer used by the current active PCE.	detail
Elapsed as main current	Time (in seconds) the PCE is in the main mastership state.	detail
Elapsed as main total	Time (in seconds) the PCE became main from the last PCCD restart.	detail
Unknown msgs/min rate	Number of unknown messages received per minute.	detail
Session failures	Number of PCEP session failures with the PCE.	detail
Delegation timeout in	Time (in seconds) left for LSP delegation to timeout.	detail
Delegation failures	Number of LSP delegation failures.	detail
Connection down	Time (in seconds) since the PCEP session is down.	detail
PCErr-sent	Information about type, value, and number of PC Error messages sent.	All levels

Sample Output

show path-computation-client active-pce

```
user@host> show path-computation-client active-pce
```

```
PCE pce1
General
  IP address           : 10.209.57.166
  Priority              : 2
  PCE status           : PCE_STATE_NEW
  Session type         : PCE_TYPE_STATEFULACTIVE
  PCE-mastership       : main

Counters
  PCReqs               Total: 0          last 5min: 0          last hour: 0
  PCReps               Total: 0          last 5min: 0          last hour: 0
  PCRpts               Total: 0          last 5min: 0          last hour: 0
  PCUpdates            Total: 0          last 5min: 0          last hour: 0

Timers
  Local               Keepalive timer: 0 [s]   Dead timer: 0 [s]
  Remote              Keepalive timer: 0 [s]   Dead timer: 0 [s]

Errors
  PCErr-recv
  PCErr-sent
    Type: 19          Value: 3          Count: 1
  PCE-PCC-NTFS
  PCC-PCE-NTFS
```

show path-computation-client active-pce detail

```
user@host> show path-computation-client active-pce detail
```

```
PCE pce1
General
  IP address           : 172.22.25.223
  Priority              : 1
```

```

PCE status           : PCE_STATE_RECONNECT
Session type         : PCE_TYPE_STATEFULACTIVE
PCE-mastership       : main
Max unknown messages : 5
Keepalives received  : 0
Keepalives sent      : 0
Dead timer           : 0 [s]
Elapsed as main current : 1 [s]
Elapsed as main total : 2542 [s]
Unknown msgs/min rate : 0
Session failures     : 575
Delegation timeout in : 14 [s]
Delegation failures   : 21928
Connection down      : 16 [s]

```

Counters

PCReqs	Total: 0	last 5min: 0	last hour: 0
PCReps	Total: 0	last 5min: 0	last hour: 0
PCRpts	Total: 31512	last 5min: 7243	last hour:
7243			
PCUpdates	Total: 80	last 5min: 40	last hour: 40

Timers

Local	Keepalive timer:	30 [s]	Dead timer:	120 [s]
Remote	Keepalive timer:	30 [s]	Dead timer:	120 [s]

Errors

```

PCErr-recv
PCErr-sent
Type: 1      Value: 2      Count: 12
PCE-PCC-NTFS
PCC-PCE-NTFS

```

show path-computation-client lsp

Syntax

```
show path-computation-client lsp
<extensive>
<p2mp>
```

Release Information

Command introduced in Junos OS Release 17.2R1 on MX Series routers.

extensive and **p2mp** options introduced in Junos OS Release 18.3R1 on MX Series routers.

Description

Display the state of label-switched paths (LSPs) known to the Path Computation Client (PCC).

Options

none—Display information about LSPs known to the PCC.

extensive—(Optional) Display extensive level of output about each known LSP - point-to-point and point-to-multipoint LSPs.

p2mp—(Optional) Display information about known point-to-multipoint Path Computation Element (PCE)-initiated LSPs.

Required Privilege Level

view

RELATED DOCUMENTATION

[show path-computation-client active-pce | 2670](#)

[show path-computation-client statistics | 2681](#)

[show path-computation-client status | 2689](#)

List of Sample Output

[show path-computation-client lsp on page 2678](#)

[show path-computation-client lsp p2mp on page 2678](#)

[show path-computation-client lsp extensive \(PCE-Initiated Point-to-Multipoint LSP Mapping to MVPN\) on page 2679](#)

Output Fields

[Table 104 on page 2676](#) describes the output fields for the **show path-computation-client lsp** command. Output fields are listed in the approximate order in which they appear.

Table 104: show path-computation-client lsp Output Fields

Field Name	Field Description
LSP Name	Name of the LSP.
Status	LSP status: <ul style="list-style-type: none"> • Primary(Act)—Primary LSP. • Bypass—PCE-initiated bypass LSP.
PLSP-Id	PCEP-specific unique identifier for each LSP. The ID is created by the PCC for the lifetime of a PCEP session.
LSP-Type	Type of LSP: <ul style="list-style-type: none"> • External provisioned • Local
Controller	Name of the external path computing entity.
Path-Setup-Type	Protocol used to set up the LSP: <ul style="list-style-type: none"> • RSVP-TE • SPRING-TE
Template	Name of template used.
P2MP name	Name of the point-to-multipoint tree that includes the sub-LSPs of the PCE-initiated LSP.
P2MP Branch Name	Name of the branch sub-LSP that makes up the point-to-multipoint tree of the PCE-initiated LSP.
PathName	Name of LSP path.
From	Ingress IP address of LSP.
To	Egress IP address of LSP.
State	LSP state: up, down.
Active Path	Name of active path.
Link Protection	LSP Link protection.

Table 104: show path-computation-client lsp Output Fields (*continued*)

Field Name	Field Description
P2mp tree	Name of the point-to-multipoint tree that includes the sub-LSPs of the PCE-initiated LSP.
Path cspf status	CSPF computation done by an external controller or local router.
LSP-ID	LSP identifier.
RSVP Error	RSVP error ID.
Priorities	Setup and hold priorities.
Bandwidth	LSP bandwidth.
Requested AutoBw	Requested bandwidth to controller for auto-bandwidth.
Controller	Name of external controller.
Record Route	LSP record route object.
From PCE ERO (received)	Explicit Route Object (ERO) received by controller from the routing protocol process.
From RPD ERO (reported)	ERO reported from the routing protocol process.
Configured ERO on PCC	ERO configured on router.
PCE Traffic Steering	MVPN flow specification capability.
FS-ID	Flow specification ID.
Route Distinguisher	Route Distinguisher of MVPN instance.
Source Prefix	Matching source address of MVPN flow specification.
Multicast Group Prefix	Matching group address of MVPN flow specification.
State	Flow specification state of specific flow specification ID.
Last Rpt/Pcreqest received from RPD at	Time the last PC report or PE request message was received.
Last Update sent to PCE at	Time the last update was sent to PCE.

Table 104: show path-computation-client lsp Output Fields (*continued*)

Field Name	Field Description
Last PcUpdate/PcCreate received from PCE at	Time the last PC update message was received from the controller.
Last error sent to PCE at	Time the last PC error was sent to the controller.
Last 5 reasons to send Report/Pcrequest	<ul style="list-style-type: none"> • Reconfig • Down • Get_info • Up • Active

Sample Output

show path-computation-client lsp

```
user@host> show path-computation-client lsp
```

Name	Status	PLSP-Id	LSP-Type	Controller	
Path-Setup-Type	Template		p2mp-name		
lsp1	Primary(Act)	1	ext-provised	pce1	rsvp
	default_pvc	-			
lsp1	Bypass	2	ext-provised	pce1	rsvp
	default_pvc	-			

show path-computation-client lsp p2mp

```
user@host> show path-computation-client lsp p2mp
```

```

P2MP name: p2mp_tree1

P2MP Branch Name: p2mp_tree1_leaf1

P2MP Branch Name: p2mp_tree1_leaf2

P2MP name: p2mp_tree2

P2MP Branch Name: p2mp_tree2_leaf1

```

P2MP Branch Name: p2mp_tree2_leaf2

show path-computation-client lsp extensive (PCE-Initiated Point-to-Multipoint LSP Mapping to MVPN)

user@host> show path-computation-client lsp extensive

```

LSP Name           : lsp_test
PathName           : primary
From : 128.220.10.163 To : 128.220.10.151 State : Up
Active Path        : primary
Link Protection none
LSP Type           : ext-provised
P2mp tree          : p2mp_test
Path cspf status    : external_cspf
Template           : default_pvc
PLSP-ID            : 2
LSP-ID             : 1
RSVP Error         : 0x0
Priorities         : 0
Bandwidth          : 98760
Requested AutoBw    : 0
Controller         : pcel
Record Route       : 1.4.0.2(S) 1.1.0.4(S) 4.7.0.2(S) 1.1.0.4(S) 7.8.0.2(S)
                    1.1.0.0(S)
From PCE ERO (received) : 128.220.10.15(L)
From RPD ERO (reported) : 128.220.10.15(L)
Configured ERO on PCC   : 128.220.10.15(L)
PCE Traffic Steering   :
  FS-ID: 1
    Route Distinguisher : 12345112:123
    Source Prefix.       : 10.220.10.15/24
    Multicast Group Prefix : 10.220.10.11/24
    State                : Active(MVPN instance configured)
  FS-ID: 2
    Route Distinguisher. : 12345112:123
    Source Prefix.       : 10.220.10.15/24
    Multicast Group Prefix : 10.220.10.12/24
    State                : Inactive(MVPN S,G already exist)
Last Rpt/Pcrequest received from RPD at      : 23:46:12.000
Last Update sent to PCE at                   : 05:30:00.000
Last PcUpdate/PcCreate received from PCE at   : 23:46:12.000
Last error sent to PCE at                    : 05:30:00.000

```

Last 5 reasons to send Report/Pcrequest : Reconfig, Down, Get_info, Up,
Active,

show path-computation-client statistics

Syntax

```
show path-computation-client statistics
<brief | detail>
<all>
```

Release Information

Command introduced in Junos OS Release 12.3.

Command introduced in Junos OS Release 16.1R3 for QFX Series switches.

Command introduced in Junos OS Release 17.1R1 for ACX Series routers.

Description

Display statistics about the Path Computation Element (PCE).

Options

none—Display statistics about the primary PCE.

brief | detail—(Optional) Display the specific level of output.

all—(Optional) Display the statistics about all PCEs configured on the PCC.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear path-computation-client statistics](#) | [2664](#)

List of Sample Output

[show path-computation-client statistics all on page 2684](#)

[show path-computation-client statistics detail on page 2686](#)

[show path-computation-client statistics \(PCE-Initiated Point-to-Multipoint LSP Mapping to MVPN\) on page 2687](#)

Output Fields

[Table 105 on page 2682](#) describes the output fields for the **show path-computation-client statistics** command. Output fields are listed in the approximate order in which they appear.

Table 105: show path-computation-client statistics Output Fields

Field Name	Field Description	Level of Output
IP address	IP address of the PCE.	All levels
Priority	PCE priority.	All levels
PCE status	PCE state: <ul style="list-style-type: none"> • PCE_STATE_NEW—Initial PCEP session state. • PCE_STATE_RECONNECT—Trying to re-establish TCP connection with the PCEP peer. • PCE_STATE_CONNECTING—Establishing TCP connection with the PCEP peer. • PCE_STATE_CONNECTED—TCP connection established with the PCEP peer. • PCE_STATE_SYNC—Open messages exchanged with the PCEP peer and entering SYNC state. • PCE_STATE_UP—PCEP session established. 	All levels
Session type	Active PCE type: <ul style="list-style-type: none"> • PCE_TYPE_STATELESS—Does not learn LSP state information from PCC. • PCE_TYPE_STATEFUL—Uses LSP state information learned from PCCs to optimize path computations, but does not actively update LSP state. A PCC maintains synchronization with the PCE. • PCE_TYPE_STATEFULACTIVE—Uses LSP state information learned from PCCs to optimize path computations, and actively updates LSP parameters in those PCCs that delegate control of their LSPs to the PCE. 	All levels
PCE-mastership	PCE mastership state: <ul style="list-style-type: none"> • main • primary • backup 	All levels

Table 105: show path-computation-client statistics Output Fields (*continued*)

Field Name	Field Description	Level of Output
PCRpts	Number of PC report (PCRpt) messages sent by PCC to a stateful PCE to report current state of LSP(s).	All levels
PCUpdates	Number of PC update (PCUpd) messages sent by a PCE to a PCC to update LSP parameters.	All levels
Local Keepalive timer	Keepalive timer used by or for the PCC.	All levels
Local Dead timer	Dead timer used by or for the PCC.	All levels
Remote Keepalive timer	Keepalive timer used by or for the PCE.	All levels
Remote Dead timer	Dead timer used by or for the PCE.	All levels
PCErr-recv	Information about type, value, and number of PC Error messages received.	All levels
PCErr-sent	Information about type, value, and number of PC Error messages sent.	All levels
Max unknown messages	Maximum number of unknown messages received for a PCEP session. Recommended value is 5. If the number of unknown messages received by a PCC or PCE is greater than or equal to the maximum number, the PCEP session is closed.	detail
Keepalives received	Number of Keepalive messages received by a PCC from a PCE.	detail
Keepalives sent	Number of Keepalive messages sent by a PCC to a PCE.	detail
Elapsed as main current	Time (in seconds) the PCE is in the main mastership state.	detail
Elapsed as main total	Time (in seconds) the PCE became main from the last PCCD restart.	detail

Table 105: show path-computation-client statistics Output Fields (*continued*)

Field Name	Field Description	Level of Output
Unknown msgs/min rate	Number of unknown messages received per minute.	detail
Session failures	Number of PCEP session failures with the PCE.	detail
Delegation timeout in	Time (in seconds) left for LSP delegation to timeout.	detail
Delegation failures	Number of LSP delegation failures.	detail
Connection down	Time (in seconds) since the PCEP session is down.	detail
Local IP address	IP address of the PCC.	detail
LSP provisioning allowed	LSP provisioning capability.	detail
P2MP LSP report allowed	Report capability of point-to-multipoint LSP.	detail
P2MP LSP update allowed	Update capability of point-to-multipoint LSP.	detail
P2MP LSP init allowed	Initiate capability of point-to-multipoint LSP.	detail
PCE Traffic Steering	Traffic steering capability of the PCE.	detail

Sample Output

show path-computation-client statistics all

user@host> **show path-computation-client statistics all**

```
PCE pce1
```

General

IP address : 10.209.57.166
 Priority : 2
 PCE status : PCE_STATE_NEW
 Session type : PCE_TYPE_STATEFULACTIVE
 PCE-mastership : main

Counters

PCReqs	Total: 0	last 5min: 0	last hour: 0
PCReps	Total: 0	last 5min: 0	last hour: 0
PCRpts	Total: 0	last 5min: 0	last hour: 0
PCUpdates	Total: 0	last 5min: 0	last hour: 0

Timers

Local	Keepalive timer:	0 [s]	Dead timer:	0 [s]
Remote	Keepalive timer:	0 [s]	Dead timer:	0 [s]

Errors

PCErr-recv
 PCErr-sent
 PCE-PCC-NTFS
 PCC-PCE-NTFS

PCE pce2

General

IP address : 10.31.32.1
 Priority : 10
 PCE status : PCE_STATE_NEW
 Session type : PCE_TYPE_STATEFULACTIVE
 PCE-mastership : backup

Counters

PCReqs	Total: 0	last 5min: 0	last hour: 0
PCReps	Total: 0	last 5min: 0	last hour: 0
PCRpts	Total: 0	last 5min: 0	last hour: 0
PCUpdates	Total: 0	last 5min: 0	last hour: 0

```

Timers
  Local          Keepalive timer:      0 [s]  Dead timer:      0 [s]
  Remote         Keepalive timer:      0 [s]  Dead timer:      0 [s]

Errors
  PCErr-recv
  PCErr-sent
  PCE-PCC-NTFS
  PCC-PCE-NTFS

```

show path-computation-client statistics detail

```
user@host> show path-computation-client statistics detail
```

```

PCE pcel
General
  IP address          : 10.209.57.166
  Priority             : 2
  PCE status          : PCE_STATE_NEW
  Session type        : PCE_TYPE_STATEFULACTIVE
  PCE-mastership      : main
  Max unknown messages : 5
  Keepalives received : 0
  Keepalives sent     : 0
  Dead timer          : 0 [s]
  Elapsed as main current : 294 [s]
  Elapsed as main total  : 294 [s]
  Unknown msgs/min rate : 0
  Session failures     : 0
  Replies timedout     : 0
  Delegation timeout in : 26 [s]
  Delegation failures  : 0
  Connection down      : 4 [s]

Counters
  PCReqs          Total: 0          last 5min: 0          last hour: 0
  PCReps          Total: 0          last 5min: 0          last hour: 0
  PCRpts          Total: 0          last 5min: 0          last hour: 0
  PCUpdates       Total: 0          last 5min: 0          last hour: 0

```

```

Timers
  Local      Keepalive timer:      0 [s]  Dead timer:      0 [s]
  Remote     Keepalive timer:      0 [s]  Dead timer:      0 [s]

Errors
  PCErr-recv
  PCErr-sent
  PCE-PCC-NTFS
  PCC-PCE-NTFS

```

show path-computation-client statistics (PCE-Initiated Point-to-Multipoint LSP Mapping to MVPN)

```
user@host> show path-computation-client statistics
```

```

PCE pcel
-----
General
  PCE IP address      : 10.220.11.59
  Local IP address    : 128.220.11.56
  Priority             : 0
  PCE status          : PCE_STATE_UP
  Session type        : PCE_TYPE_STATEFULACTIVE
  LSP provisioning allowed : On
  P2MP LSP report allowed : On
  P2MP LSP update allowed : On
  P2MP LSP init allowed  : Off
  PCE-mastership      : main
  PCE Traffic Steering  : On

Counters
  PCReqs      Total: 0      last 5min: 0      last hour: 0
  PCReps      Total: 0      last 5min: 0      last hour: 0
  PCRpts      Total: 4      last 5min: 0      last hour: 0
  PCUpdates   Total: 2      last 5min: 0      last hour: 0
  PCCreates   Total: 1      last 5min: 0      last hour: 0

Timers
  Local  Keepalive timer:  30 [s]  Dead timer:  120 [s]  LSP cleanup timer:
500 [s]
  Remote Keepalive timer:  30 [s]  Dead timer:  120 [s]  LSP cleanup timer:
0 [s]

```

Errors

PCErr-recv

PCErr-sent

PCE-PCC-NTFS

PCC-PCE-NTFS

Pcupdate empty ero action counters

Send-err : 0

Tear down path : 0

Routing decision : 0

Routing decision failed: 0

show path-computation-client status

Syntax

```
show path-computation-client status  
<extensive>
```

Release Information

Command introduced in Junos OS Release 17.2R1 on MX Series routers.

extensive option introduced in Junos OS Release 18.3R1 on MX Series routers.

Description

Display the status of the Path Computation Client (PCC).

Options

none—Display the status of the PCC.

extensive—(Optional) Display extensive information about the PCC including point-to-point and point-to-multipoint PCE-initiated LSPs.

For point-to-multipoint PCE-initiated LSPs, the extensive output displays the point-to-multipoint LSP tree and branches separately for a PCEP session.

Required Privilege Level

view

RELATED DOCUMENTATION

[show path-computation-client active-pce | 2670](#)

[show path-computation-client statistics | 2681](#)

[show path-computation-client lsp | 2675](#)

List of Sample Output

[show path-computation-client status on page 2690](#)

Output Fields

[Table 106 on page 2690](#) describes the output fields for the **show path-computation-client status** command. Output fields are listed in the approximate order in which they appear.

Table 106: show path-computation-client status Output Fields

Field Name	Field Description
Session	Name of the PCE with which the PCEP session is established.
Type	Type of PCE.
Provisioning	Provisioning status of the PCE.
Status	PCEP session status.
Total number of LSPs	Number of LSPs in total.
Static LSPs	Status of point-to-point and point-to-multipoint static LSPs.
Externally controlled LSPs	Status of point-to-point and point-to-multipoint LSPs that are controlled by a PCE.
Externally provisioned LSPs	Status of point-to-point and point-to-multipoint LSPs that are provisioned by a PCE.
Orphaned LSPs	Status of LSPs that are in the orphaned state because of PCEP session failure.
Delegated	Status of point-to-point and point-to-multipoint LSPs that are delegated to the PCE by the PCC.

Sample Output

show path-computation-client status

user@host> **show path-computation-client status extensive**

Session	Type	Provisioning	Status
pce1	Stateful Active	On	Up
LSP Summary			
Total number of LSPs		: 0	
Static LSPs		: 0	
P2P		: 0	
		: 0/0 (primary/bypass)	
P2MP		: 0/0 (branches/trees)	
Externally controlled LSPs		: 0	
P2P		: 0	

```

                : 0/0 (primary/bypass)
      P2MP                : 0/0 (branches/trees)
Externally provisioned LSPs : 0/16000 (current/limit)
      P2P                : 0
                : 0/0 (primary/ bypass)
      P2MP                : 0/0 (branches/trees)
Orphaned LSPs           : 0

pcel (main)
  Delegated              : 0
    P2P                  : 0
                : 0/0 (primary/bypass)
    P2MP                  : 0/0 (branches/trees)
Externally provisioned: 0
    P2P                  : 0
                : 0/0 (primary/bypass)
    P2MP                  : 0/0 (branches/trees)

```

show spring-traffic-engineering

Syntax

```
show spring-traffic-engineering (lsp | overview | sbfd)
<brief | detail>
<logical-system (all | logical-system-name)>
<name lsp-name>
```

Release Information

Command introduced in Junos OS Release 17.2 on MX Series routers.

sbfd option introduced in Junos OS Release 19.4R1 on all platforms.

Description

Display ingress details of SPRING traffic engineering.

Options

brief | detail—(Optional) Display the specific level of output.

lsp—Display details of SPRING traffic engineered LSPs on the ingress router or the Path Computation Client (PCC).

overview—Display overview of SPRING traffic engineered LSPs on the ingress router, or the PCC.

sbfd—Display SPRING Traffic Engineered BFD session.

name *lsp-name*—(Optional) Regular expression for LSP names to match for displaying SPRING traffic engineering details.

Required Privilege Level

view

RELATED DOCUMENTATION

[How to Configure Segment Routing for the Path Computation Element Protocol](#) | 1424

List of Sample Output

[show spring-traffic-engineering lsp name on page 2694](#)

[show spring-traffic-engineering lsp detail on page 2695](#)

[show spring-traffic-engineering lsp detail \(PCE-Delegated LSPs\) on page 2695](#)

[show spring-traffic-engineering overview on page 2695](#)

[show spring-traffic-engineering sbfd detail on page 2695](#)

[show spring-traffic-engineering lsp detail name <name> on page 2696](#)

Output Fields

Table 107 on page 2693 describes the output fields for the **show spring-traffic-engineering** command. Output fields are listed in the approximate order in which they appear.

Table 107: show spring-traffic-engineering Output Fields

Field Name	Field Description
To	IP address of the SR-TE LSP destination.
State	State of the SR-TE LSP: <ul style="list-style-type: none"> • Up • Down
LSP Name	Name of the SR-TE LSP.
S-ERO	Source Explicit Route Object (ERO), or LSP path.
Bandwidth	Bandwidth allocated for the SR-TE LSP.
Delegation info	LSP control and routing status: <ul style="list-style-type: none"> • Control-status: <ul style="list-style-type: none"> • Externally controlled—PCE has control of the source-routing-path. This can happen when: <ul style="list-style-type: none"> • The lsp-external-controller pccd statement is configured either under the source-routing-path or under the primary segment list. • The request path-computation-client retry-delegation lsp-name command is issued for a delegated LSP which was not previously controlled by the PCE. • Locally controlled—PCC has control of the source-routing-path. This can happen when: <ul style="list-style-type: none"> • The PCE has returned the control of the source-routing-path. • Delegation timer with the PCE has expired. • Routing-status: Applicable to delegated source-routing-paths only. <ul style="list-style-type: none"> • Externally routed—PCE provided the ERO for the source-routing-path for a delegated LSP through PCUpdate. • Locally routed—PCE does not provide ERO for the source-routing-path.
Route preference	Route preference of the SR-TE LSP.
Number of LSPs	Statistics of the total number of SR-TE LSPs and the LSP state.

Table 107: show spring-traffic-engineering Output Fields (continued)

Field Name	Field Description
External controllers	Name of the LSP external controller. By default the only supported external controller is pccd .
BFD name	Name of the BFD session. The name is auto-generated in the V4-srte_bfd_session-id for IPv6. The name is based on the Explicit Route Object (ERO) stack of the LSP path, that is, if multiple LSPs have same path they share the same BFD session name.
BFD status	Status of the BFD session: UP, DOWN.
Referencing LSPs	Name of referencing LSP. If the LSP does not have a path name, then the referencing LSP is displayed as unnamed path .
SR-ERO hop count	Number of hops in the segment routing ERO.
Hop 1	Represents the path of the BFD session. If any other LSP is on same path, it has the same BFD session.
Total displayed BFD sessions	Total count of all the BFD sessions.
Tunnel source	Source of the tunnel configuration; for example, static configuration .
Ingress telemetry statistics	Ingress telemetry statistics including the sensor name and ID.
Transit telemetry statistics	Transit telemetry statistics including the sensor name and ID.

Sample Output

show spring-traffic-engineering lsp name

user@host> **show spring-traffic-engineering lsp name *lsp-name***

To	State	LSP Name
10.1.1.7	Up	to-R1

show spring-traffic-engineering lsp detail

```
user@host> show spring-traffic-engineering lsp detail
```

```
10.1.1.7
  State: Up
  S-ERO: 24.1.1.1(80001) 10.1.1.3(4509) 11.2.1.2(9875)
  Bandwidth: 100M
  The above line is in IP address(label) format.
```

show spring-traffic-engineering lsp detail (PCE-Delegated LSPs)

```
user@host> show spring-traffic-engineering lsp detail
```

```
srte_at_dlg_to_r5
Oct 16 14:39:11
Name: srte_at_dlg_to_r5
Tunnel-source: Static configuration
To: 128.220.14.141
State: Up
  Path: sr_auto_to_r5
  Outgoing interface: NA
+ Delegation info:
+ Control-status: Externally controlled
+ Routing-status: Externally routed
  Auto-translate status: Disabled Auto-translate result: N/A
  BFD status: N/A BFD name: N/A
```

show spring-traffic-engineering overview

```
user@host> show spring-traffic-engineering overview
```

```
Overview of SPRING-TE:
  Route preference: 8
  Number of LSPs: 0 (Up: 0, Down: 0)
  External controllers:
    pccd
```

show spring-traffic-engineering sbfd detail

```
user@host> show spring-traffic-engineering sbfd detail
```

```

BFD name: V4-srte_bfd_session-1
BFD status: Down
Referencing LSPs:
  sr-lsp1:path1
  sr-lsp2:path1
SR-ERO hop count: 2
Hop 1 (Strict):
  NAI: IPv4 Adjacency ID, 1.2.1.1 -> 1.2.1.2
  SID type: 20-bit label, Value: 299776
Hop 2 (Strict):
  NAI: IPv4 Adjacency ID, 2.3.0.1 -> 2.3.0.2
  SID type: 20-bit label, Value: 299824

Total displayed BFD sessions: 2 (Up: 2, Down: 0)

```

show spring-traffic-engineering lsp detail name <name>

user@host> **show spring-traffic-engineering lsp detail name sr_plcy1**

```

Name: sr_plcy1
Tunnel source: Static configuration
To: 1.1.1.1
State: Up
  Path: s11
Ingress telelemetry statistics:
  Sensor-Name: i;st;0;f;sr_plcy1;s11, Id: 3758096390
Transit telelemetry statistics:
  Sensor-Name: t;st;0;f;sr_plcy1;s11, Id: 3758096391
  Path: s12
Ingress telelemetry statistics:
  Sensor-Name: i;st;0;f;sr_plcy1;s12, Id: 3758096390
Transit telelemetry statistics:
  Sensor-Name: t;st;0;f;sr_plcy1;s12, Id: 3758096391

```