



J-Web Platform Package for EX Series Ethernet Switches

J-Web Platform Package User Guide for EX Series Switches, Release 15.1R1

Release

15.1R1



Modified: 2015-06-30

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

J-Web Platform Package for EX Series Ethernet Switches J-Web Platform Package User Guide for EX Series Switches, Release 15.1R1
Release 15.1R1
Copyright © 2015, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	ix
	Documentation and Release Notes	ix
	Supported Platforms	ix
	Using the Examples in This Manual	ix
	Merging a Full Example	x
	Merging a Snippet	x
	Documentation Conventions	xi
	Documentation Feedback	xiii
	Requesting Technical Support	xiii
	Self-Help Online Tools and Resources	xiii
	Opening a Case with JTAC	xiv
Part 1	Overview	
Chapter 1	J-Web Overview	3
	J-Web User Interface for EX Series Switches Overview	3
	J-Web Packages	3
	Release Compatibility	4
	Software Requirements	5
	J-Web Interface—Platform Package	6
	J-Web Platform Package—First Look	6
Chapter 2	Understanding the J-Web User Interface	9
	Understanding J-Web User Interface Sessions	9
Part 2	Configuring a Switch Using J-Web Interface	
Chapter 3	Starting J-Web	13
	Starting the J-Web Interface	13
Chapter 4	Configuring System Basics	15
	Connecting and Configuring an EX Series Switch (J-Web Procedure)	15
	Configuring Management Access for the EX Series Switch (J-Web Procedure)	18
	Generating SSL Certificates to Be Used for Secure Web Access	21
Chapter 5	Configuring Interfaces	23
	Configuring Gigabit Ethernet Interfaces (J-Web Procedure)	23
Chapter 6	Configuring Layer 3 Protocols	31
	Configuring Static Routing (J-Web Procedure)	31

Part 3	Administering a Switch Using J-Web Interface	
Chapter 7	Managing Users	35
	Managing Users (J-Web Procedure)	35
Chapter 8	Managing Configurations and Files	39
	Using the Commit Options to Commit Configuration Changes (J-Web Procedure)	39
Chapter 9	Managing Software and Licenses	43
	Updating J-Web Interface on EX Series Switches (J-Web Procedure)	43
	Installing J-Web Application Package by Using Auto Update	43
	Installing J-Web Application Package by Using Manual Update	44
	Upgrading Junos OS on EX Series Switches (J-Web Procedure)	45
	Installing Junos OS Upgrades from a Remote Server	45
	Installing Junos OS Upgrades by Uploading File from Local Computer	46
	Rebooting or Halting the EX Series Switch (J-Web Procedure)	46
Part 4	Index	
	Index	51

List of Figures

Part 2	Configuring a Switch Using J-Web Interface	
Chapter 4	Configuring System Basics	15
	Figure 1: LCD Panel in an EX3200, EX4200, EX4500, EX4550, or EX8200 Switch	16
	Figure 2: LCD Panel in an EX4300 Switch	16

List of Tables

	About the Documentation	ix
	Table 1: Notice Icons	xi
	Table 2: Text and Syntax Conventions	xi
Part 1	Overview	
Chapter 1	J-Web Overview	3
	Table 3: J-Web Release Compatibility Matrix	5
	Table 4: J-Web Platform Package Interface Elements	6
Part 2	Configuring a Switch Using J-Web Interface	
Chapter 4	Configuring System Basics	15
	Table 5: Secure Management Access Configuration Summary	19
Chapter 5	Configuring Interfaces	23
	Table 6: Port Edit Options	25
	Table 7: Recommended CoS Settings for Port Roles	28
Chapter 6	Configuring Layer 3 Protocols	31
	Table 8: Static Routing Configuration Summary	31
Part 3	Administering a Switch Using J-Web Interface	
Chapter 7	Managing Users	35
	Table 9: User Management Configuration Page Summary	36
	Table 10: Add an Authentication Server	37
Chapter 8	Managing Configurations and Files	39
	Table 11: Commit Options	40
	Table 12: Commit Preference Options	40
Chapter 9	Managing Software and Licenses	43
	Table 13: Install Remote Summary	45
	Table 14: Upload Package Summary	46

About the Documentation

- Documentation and Release Notes on page ix
- Supported Platforms on page ix
- Using the Examples in This Manual on page ix
- Documentation Conventions on page xi
- Documentation Feedback on page xiii
- Requesting Technical Support on page xiii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks[®] technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- EX Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

Table 1 on page xi defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xi defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none">Introduces or emphasizes important new terms.Identifies guide names.Identifies RFC and Internet draft titles.	<ul style="list-style-type: none">A policy <i>term</i> is a named structure that defines match conditions and actions.<i>Junos OS CLI User Guide</i>RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name domain-name
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none">To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level.The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (string1 string2 string3)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop address; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none">In the Logical Interfaces box, select All Interfaces.To cancel the configuration, click Cancel.

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page at the Juniper Networks Technical Documentation site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [J-Web Overview on page 3](#)
- [Understanding the J-Web User Interface on page 9](#)

CHAPTER 1

J-Web Overview

- [J-Web User Interface for EX Series Switches Overview on page 3](#)
- [J-Web Interface—Platform Package on page 6](#)

J-Web User Interface for EX Series Switches Overview

Juniper Networks EX Series Ethernet Switches are shipped with the Juniper Networks Junos operating system (Junos OS) installed.

Junos OS has the following primary user interfaces:

- Juniper Web Device Manager (J-Web) GUI
- Junos OS CLI

You can use these interfaces to access, configure, and manage your EX Series switch.

This topic provides an overview of the J-Web interface. For information about the CLI, see *CLI User Interface Overview*.

J-Web Packages

For Junos OS Release 14.1X53-D10 and later, the J-Web interface is available in two packages:

- Platform package—Provides basic features of J-Web and is installed as part of Junos OS.
- Application package—Provides complete features of J-Web and is an installable package.

Platform Package

The Platform package of J-Web is installed as part of Junos OS that is shipped with your EX Series switch. The Platform package provides the basic features of the J-Web interface. The Platform package enables you to configure and maintain your switch.

Application Package

The Application package is not installed by default on your switch. You must download it and install it over the Platform package on your switch. The Application package

provides all the features of the J-Web interface that enable you to configure, monitor, maintain, and troubleshoot your switch.

The Platform package, which is installed as part of the Junos OS that is shipped with your switch, follows the Junos OS release cycle. However, the Application packages have their own release cycle which is independent of the Junos OS release cycle. This separate release cycle helps you get the latest features of J-Web by installing the latest version of the Application package, without waiting for Junos OS releases.



NOTE: The J-Web Application package is hot-pluggable. You can install it on top of the current Junos OS installation, and you need not reboot the switch after the installation.



NOTE: To determine which J-Web package you are currently using, click **Help > About**. The About window appears. If you are using a Platform package, only the Platform package details are displayed. If you are using an Application package, then the Platform package and Application package details are displayed.

If your current J-Web package is:	Then you can:
Platform package	Upgrade to the Application package.
Application package	Update to a latest version of the Application package available on the Juniper Networks server that is compatible with the Junos OS on your switch.
<p>NOTE: If you upgrade Junos OS on your switch, the current J-Web package is replaced with the J-Web Platform package that is associated with the upgraded Junos OS release. You can then install the latest Application package that is associated with the main release of the upgraded Junos OS, over the Platform package.</p>	

Release Compatibility

The Application packages of J-Web have their own release cycles (A1, A2, A3, and so on), which are independent of the Junos OS release cycle. An Application package is compatible only with the corresponding major release of Junos OS.

For example, the compatibility is as follows:

- Application package 14.1X53-A1 is compatible with all Junos OS Release 14.1X53-D<x> where x is 10, 15, 20, and so on.
- Application package 15.1A1 is compatible with all Junos OS Release 15.1R<x>, where x is 1, 2, 3, and so on.

The [Table 3 on page 5](#) illustrates the example of the release compatibility.

Table 3: J-Web Release Compatibility Matrix

Junos OS Release	Associated J-Web Application Package Release
14.1X53-D10	Application package 14.1X53-A1
	Application package 14.1X53-A2
	Application package 14.1X53-A3
15.1R1	Application package 15.1A1
	Application package 15.1A2
	Application package 15.1A3

Any available later version of the Application package for a Junos OS release supersedes the earlier version. Thus, if Application package version 15.1A2 is available, it will supersede version 15.1A1. We recommend that you install the latest available version of the Application package.

Software Requirements

To access the J-Web interface, your management device requires the following software:

- Supported browsers—Microsoft Internet Explorer version 9 or 10, Mozilla Firefox version 24 through 30, and Google Chrome version 27 through 36.



TIP: For best viewing of the J-Web user interface, set the screen resolution to 1440 X 900 pixels.



NOTE: Other browser versions might not work on the switch. The browser and the network must support receiving and processing HTTP 1.1 GZIP compressed data.

- Language support—English-version browsers

Related Documentation

- EX Series Switch Software Features Overview*
- CLI User Interface Overview*

J-Web Interface—Platform Package

With the J-Web Platform package, you can:

- Configure Ethernet interfaces.
- Configure static routing.
- Configure system properties, such as:
 - User management and authentication management.
 - Management access, such as, HTTPS, HTTP, Telnet, or SSH.
- Manage software upgrades or schedule a reboot.

J-Web Platform Package—First Look

Each page of the J-Web interface is divided into panes.

- Top pane—It is located at the top of the page. It displays the J-Web logo and hostname, tasks—Configure, Monitor, and Maintain, Commit, Update Available logo (if available), and username and Help.
- Side pane—It is located on the left side of the page. It displays suboptions of the tasks—Configure or Maintain—currently selected in the top pane. Click a suboption to access it in the work area.
- Work area—This is the main work area of the J-Web interface, located below the top pane and to the right of the side pane. It displays various text boxes, selection boxes, buttons and other options corresponding to the suboption that you select in the side pane. It is the location where you monitor, configure, and manage (maintain) the switch.

The layout of the panes enables you to quickly navigate through the interface.

[Table 4 on page 6](#) summarizes the elements of the J-Web Platform interface.

Table 4: J-Web Platform Package Interface Elements

Element	Description
Top Pane	
J-Web	The J-Web logo and hostname of the switch.
Hostname	
Taskbar	Menu that displays the main options. Click the tab to access an option. <ul style="list-style-type: none"> • Configure—Configure the switch, and view the configuration history. • Maintain—Update J-Web interface, upgrade Junos OS, and reboot the switch.

Table 4: J-Web Platform Package Interface Elements (*continued*)

Element	Description
Commit Options	<p>A set of options using which you can configure committing multiple changes with a single commit.</p> <ul style="list-style-type: none"> Commit—Commits the candidate configuration of the current user session, along with changes from other user sessions. Compare—Displays the XML log of pending configurations on the device. Discard—Discards the candidate configuration of the current user session, along with changes from other user sessions. Preference—Indicates your choice of committing all configurations changes together or committing each configuration change immediately. The two commit options are: <ul style="list-style-type: none"> Validate configuration changes—Loads all configuration changes for an accumulated single commit. If there are errors in loading the configuration, the errors are logged. This is the default mode. Validate and commit configuration changes—Sets the system to force an immediate commit on every page after every configuration change. <p>NOTE: There are some pages on which configuration changes must be committed immediately. For such pages, if you configure the commit options for a single commit, the system displays warning notifications that remind you to commit your changes immediately. An example of such a page is the Ports page (Configure > Interfaces > Ports).</p>
Update Available	<p>This icon message appears only if there is a J-Web Application package update available on the Juniper Networks server.</p> <p>Mouse over the icon to know the latest version of J-Web Application package available on the Juniper Networks server. Click on the icon to update the J-Web Application package.</p>
<i>username</i>	<p>The username you used to log in to the switch.</p> <p>The down arrow option displays Logout. Logout ends your current session with the switch and returns you to the login page.</p>
Help	<p>Displays links to help topics and information about the J-Web interface.</p> <ul style="list-style-type: none"> Help Contents—Provides context-sensitive help. About—Displays information about the J-Web interface, such as the version number.
Work Area	
Configuration hierarchy	<p>(Applies to the Junos OS CLI configuration editor only) Displays the hierarchy of committed statements in the switch configuration.</p> <ul style="list-style-type: none"> Click Expand all to display the entire hierarchy. Click Hide all to display only the statements at the top level. Click + to expand individual items. Click - to hide individual items.

**Related
Documentation**

- [Using the Commit Options to Commit Configuration Changes \(J-Web Procedure\) on page 39](#)
- *EX Series Switch Software Features Overview*
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 15](#)
- *CLI User Interface Overview*

CHAPTER 2

Understanding the J-Web User Interface

- [Understanding J-Web User Interface Sessions on page 9](#)

Understanding J-Web User Interface Sessions

You establish a J-Web session with the switch through an HTTP-enabled or HTTPS-enabled Web browser. To use HTTPS, you must have installed a certificate on the switch and enabled HTTPS. See “[Generating SSL Certificates to Be Used for Secure Web Access](#)” on page 21.

When you attempt to log in through the J-Web interface, the switch authenticates your username with the same methods used for Telnet and SSH.

If the switch does not detect any activity through the J-Web interface for 15 minutes, the session times out and is terminated. You must log in again to begin a new session.

To explicitly terminate a J-Web session at any time, click **Logout** in the top pane.

Related Documentation

- [J-Web User Interface for EX Series Switches Overview on page 3](#)
- [Configuring Management Access for the EX Series Switch \(J-Web Procedure\) on page 18](#)

PART 2

Configuring a Switch Using J-Web Interface

- [Starting J-Web on page 13](#)
- [Configuring System Basics on page 15](#)
- [Configuring Interfaces on page 23](#)
- [Configuring Layer 3 Protocols on page 31](#)

CHAPTER 3

Starting J-Web

- [Starting the J-Web Interface on page 13](#)

Starting the J-Web Interface

You can use the J-Web interface to configure and manage the EX Series switch.

To start the J-Web interface:

1. Launch your HTTP-enabled or HTTPS-enabled Web browser.

To use HTTPS, you must have installed a certificate on the switch and enabled HTTPS.

2. After **http://** or **https://** in your Web browser, type the hostname or IP address of the switch and press **Enter**.

The J-Web login page appears.

3. On the login page, type your username and password, and click **Login**.



NOTE: The default username is root with no password. You must change this during initial configuration or the system does not accept the configuration.

If you are using an Application package of J-Web, the Dashboard information page appears; if you are using a Platform package of J-Web, the Configure Options page appears.

To explicitly terminate a J-Web session at any time, click **Logout** in the top pane.

Related Documentation

- [J-Web User Interface for EX Series Switches Overview on page 3](#)
- [Dashboard for EX Series Switches](#)

CHAPTER 4

Configuring System Basics

- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 15](#)
- [Configuring Management Access for the EX Series Switch \(J-Web Procedure\) on page 18](#)
- [Generating SSL Certificates to Be Used for Secure Web Access on page 21](#)

Connecting and Configuring an EX Series Switch (J-Web Procedure)

There are two ways to connect and configure an EX Series switch: one method is through the console by using the CLI and the other is by using the J-Web interface.



NOTE: EX2200-24T-4G-DC switches do not support switch connection and configuration through J-Web procedure.

This topic describes the J-Web procedure.



NOTE: Before you begin the configuration, enable a DHCP client on the management PC that you will connect to the switch so that the PC can obtain an IP address dynamically.



NOTE: Read the following steps before you begin the configuration. You must complete the initial configuration by using EZSetup within 10 minutes. The switch exits EZSetup after 10 minutes and reverts to the factory default configuration, and the PC loses connectivity to the switch.

- EX2200 and EX2200-C switch—The LEDs on the network ports on the front panel blink when the switch is in the initial setup mode.
- EX3200, EX3300, EX4200, EX4300, EX4500, EX4550, EX6200, or EX8200 switch—The LCD panel displays a count-down timer when the switch is in initial setup mode.

To connect and configure the switch by using the J-Web interface:

1. Transition the switch into initial setup mode:
 - EX2200 and EX2200-C switch—Press the mode button located on the lower right corner of the front panel for 10 seconds.
 - EX3200, EX3300, EX4200, EX4300, EX4500, EX4550, EX6200, or EX8200 switch—Use the **Menu** and **Enter** buttons located to the right of the LCD panel (see [Figure 1 on page 16](#) or [Figure 2 on page 16](#)):

Figure 1: LCD Panel in an EX3200, EX4200, EX4500, EX4550, or EX8200 Switch


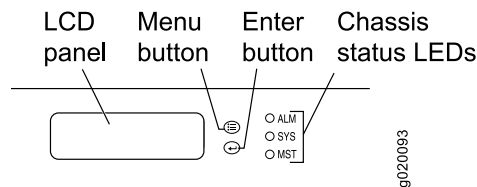


Figure 2: LCD Panel in an EX4300 Switch

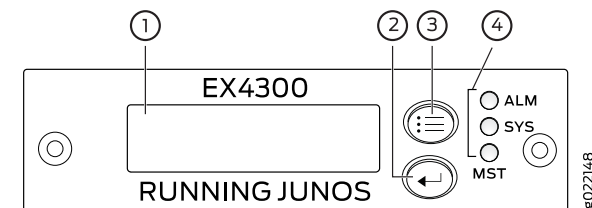

1—LCD panel	3—LCD panel Menu button
2—LCD panel Enter button	4—Chassis status LEDs

1. Press the **Menu** button until you see **MAINTENANCE MENU**. Then press the **Enter** button.
 2. Press **Menu** until you see **ENTER EZSetup**. Then press **Enter**.
If EZSetup does not appear as an option in the menu, select **Factory Default** to return the switch to the factory default configuration. EZSetup is displayed in the menu of standalone switches only when a switch is set to the factory default configuration.
 3. Press **Enter** to confirm setup and continue with EZSetup.
2. Connect the Ethernet cable from the Ethernet port on the PC to the switch.
 - EX2200, EX3200, or EX4200 switch—Connect the cable to port 0 (ge-0/0/0) on the front panel of the switch.
 - EX3300, EX4500, or EX4550 switch—Connect the cable to the port labeled **MGMT** on the front panel (LCD panel side) of the switch.
 - EX4300 switch—Connect the cable to the port labeled **MGMT** on the rear panel of the switch.

- EX6200 switch—Connect the cable to one of the ports labeled **MGMT** on the Switch Fabric and Routing Engine (SRE) module in slot 4 or 5 in an EX6210 switch.
- EX8200 switch—Connect the cable to the port labeled **MGMT** on the Switch Fabric and Routing Engine (SRE) module in slot SRE0 in an EX8208 switch or on the Routing Engine (RE) module in slot RE0 in an EX8216 switch.

These ports are configured as the DHCP server with the default IP address, 192.168.1.1. The switch can assign an IP address to the management PC in the IP address range 192.168.1.2 through 192.168.1.253.

3. From the PC, open a Web browser, type **http://192.168.1.1** in the address field, and press **Enter**.
4. On the J-Web login page, type **root** as the username, leave the password field blank, and click **Login**.
5. On the Introduction page, click **Next**.
6. On the Basic Settings page, modify the hostname, the root password, and date and time settings:
 - Enter the hostname. This is optional.
 - Enter a password and reenter the password.
 - Specify the time zone.
 - Synchronize the date and time settings of the switch with the management PC or set them manually by selecting the appropriate option button. This is optional.

Click **Next**.

7. Use the Management Options page to select the management scenario:



NOTE: On EX4500, EX6210, and EX8200 switches, only the out-of-band management option is available.

- **In-band Management—Use VLAN 'default' for management.**

Select this option to configure all data interfaces as members of the default VLAN. Click **Next**. Specify the management IP address and the default gateway for the default VLAN.

- **In-band Management—Create new VLAN for management.**

Select this option to create a management VLAN. Click **Next**. Specify the VLAN name, VLAN ID, member interfaces, management IP address, and default gateway for the new VLAN.

- **Out-of-band Management—Configure management port.**

Select this option to configure only the management interface. Click **Next**. Specify the IP address and default gateway for the management interface.

8. Click **Next**.

9. On the Manage Access page, you can select options to enable Telnet, SSH, and SNMP services. For SNMP, you can configure the read community, location, and contact.
10. Click **Next**. The Summary screen displays the configured settings.
11. Click **Finish**. The configuration is committed as the active switch configuration.



NOTE: After the configuration is committed, the connectivity between the PC and the switch might be lost. To renew the connection, release and renew the IP address by executing the appropriate commands on the management PC or by removing and reinserting the Ethernet cable.

12. (For EX4500 switches only) In the CLI, enter the **request chassis pic-mode intraconnect** operational mode command to set the PIC mode to intraconnect.

You can now log in by using the CLI or the J-Web interface to continue configuring the switch.

If you use the J-Web interface to continue configuring the switch, the Web session is redirected to the new management IP address. If the connection cannot be made, the J-Web interface displays instructions for starting a J-Web session.

**Related
Documentation**

- *Connecting and Configuring an EX Series Switch (CLI Procedure)*
- *Installing and Connecting an EX2200 Switch*
- *Installing and Connecting an EX3200 Switch*
- *Installing and Connecting an EX3300 Switch*
- *Installing and Connecting an EX4200 Switch*
- *Installing and Connecting an EX4300 Switch*
- *Installing and Connecting an EX4500 Switch*
- *Installing and Connecting an EX4550 Switch*
- *Installing and Connecting an EX6210 Switch*
- *Installing and Connecting an EX8208 Switch*
- *Installing and Connecting an EX8216 Switch*

Configuring Management Access for the EX Series Switch (J-Web Procedure)

You can manage an EX Series switch remotely through the J-Web interface. To communicate with the switch, the J-Web interface uses HTTP. HTTP enables easy Web access, but uses no encryption. The data that is transmitted between the Web browser and the switch by means of HTTP is vulnerable to interception and attack. To enable secure Web access the switch supports HTTPS. You can enable HTTP or HTTPS access on specific interfaces and ports as needed.

Navigate to the Secure Access Configuration page by selecting **Configure > System Properties > Management Access**. On this page, you can enable HTTP and HTTPS access on interfaces for managing the EX Series switch through the J-Web interface. You can also install SSL certificates and enable Junos XML management protocol over SSL with the Secure Access page.

1. Click **Edit** to modify the configuration. Enter information into the Management Access Configuration page as described in [Table 5 on page 19](#).
2. To verify that Web access is enabled correctly, connect to the switch using the appropriate method:
 - For HTTP access—In your Web browser, type **http://URL** or **http://IP address**.
 - For HTTPS access—In your Web browser, type **https://URL** or **https://IP address**.
 - For SSL Junos XML management protocol access—To use this option, you must have a Junos XML management protocol client such as Junos Scope. For information about how to log in to Junos Scope, see the *Junos Scope Software User Guide*.



NOTE: After you make changes to the configuration on this page, you must commit the changes for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See [Using the Commit Options to Commit Configuration Changes](#) for details about all commit options.

Table 5: Secure Management Access Configuration Summary

Field	Function	Your Action
Management Access tab		
Management Port IP/Management Port IPv6	Specifies the management port IP address. The software supports both IPv4 (displayed as IP) and IPv6 address. NOTE: IPv6 is not supported on EX2200 and EX 4500 switches.	<p>To specify an IPv4 address:</p> <ol style="list-style-type: none"> 1. Select the check box IPv4 address. 2. Type an IP address—for example: 10.10.10.10. 3. Enter the subnet mask or address prefix. For example, 24 bits represents 255.255.255.0. 4. Click OK. <p>To specify an IPv6 address:</p> <ol style="list-style-type: none"> 1. Select the check box IPv6 address. 2. Type an IP address—for example: 2001:ab8:85a3::8a2e:370:7334. 3. Enter the subnet mask or address prefix. 4. Click OK.

Table 5: Secure Management Access Configuration Summary (*continued*)

Field	Function	Your Action
Default Gateway	Defines a default gateway through which to direct packets addressed to networks that are not explicitly listed in the bridge table constructed by the switch.	For IPv4 address type a 32-bit IP address, in dotted decimal notation. Type a 128-bit IP address for IPv6 address type.
Loopback address	Specifies the IP address of the loopback interface.	Type an IP address.
Subnet Mask	Specifies the subnet mask for the loopback interface.	Enter the subnet mask or address prefix.
Services tab		
Services	Specifies services to be enabled: telnet and SSH.	Select to enable the required services.
Enable Junos XML management protocol over Clear Text	Enables clear text access to the Junos XML management protocol XML scripting API.	To enable clear text access, select the Enable Junos XML management protocol over Clear Text check box.
Enable Junos XML protocol over SSL	Enables secure SSL access to the Junos XML management protocol XML scripting API.	To enable SSL access, select the Enable Junos XML management protocol over SSL check box.
Junos XML management protocol Certificate	Specifies SSL certificates to be used for encryption. This field is available only after you create at least one SSL certificate.	To enable an SSL certificate, select a certificate from the Junos XML management protocol SSL Certificate list—for example, new .
Enable HTTP	Enables HTTP access on interfaces.	To enable HTTP access, select the Enable HTTP access check box. Select and clear interfaces by clicking the direction arrows: <ul style="list-style-type: none"> To enable HTTP access on an interface, add the interface to the HTTP Interfaces list. You can either select either all interfaces or specific interfaces.
Enable HTTPS	Enables HTTPS access on interfaces.	To enable HTTPS access, select the Enable HTTPS access check box. Select and deselect interfaces by clicking the direction arrows: <ul style="list-style-type: none"> To enable HTTPS access on an interface, add the interface to the HTTPS Interfaces list. You can either select either all interfaces or specific interfaces. <p>NOTE: Specify the certificate to be used for HTTPS access.</p>
Certificates tab		

Table 5: Secure Management Access Configuration Summary (*continued*)

Certificates	<p>Displays digital certificates required for SSL access to the switch.</p> <p>Allows you to add and delete SSL certificates.</p>	<p>To add a certificate:</p> <ol style="list-style-type: none"> 1. Have a general SSL certificate available. See Generating SSL Certificates for more information. 2. Click Add. The Add a Local Certificate page opens. 3. Type a name in the Certificate Name box—for example, new. 4. Open the certificate file and copy its contents. 5. Paste the generated certificate and RSA private key in the Certificate box. <p>To edit a certificate, select it and click Edit.</p> <p>To delete a certificate, select it and click Delete.</p>
--------------	---	---

Related Documentation

- [Security Features for EX Series Switches Overview](#)
- [Understanding J-Web User Interface Sessions on page 9](#)
- [Enabling HTTPS and XNM-SSL Services on Switches Using Self-Signed Certificates \(CLI Procedure\)](#)

Generating SSL Certificates to Be Used for Secure Web Access

You can set up secure Web access for an EX Series switch. To enable secure Web access, you must generate a digital Secure Sockets Layer (SSL) certificate and then enable HTTPS access on the switch.

To generate an SSL certificate:

1. Enter the following **openssl** command in your SSH command-line interface on a BSD or Linux system on which **openssl** is installed. The **openssl** command generates a self-signed SSL certificate in the privacy-enhanced mail (PEM) format. It writes the certificate and an unencrypted 1024-bit RSA private key to the specified file.

```
% openssl req -x509 -nodes -newkey rsa:1024 -keyout filename.pem -out filename.pem
```

where **filename** is the name of a file in which you want the SSL certificate to be written—for example, **my-certificate**.

2. When prompted, type the appropriate information in the identification form. For example, type **US** for the country name.
3. Display the contents of the file that you created.

```
cat my-certificate.pem
```

You can use the J-Web Configuration page to install the SSL certificate on the switch. To do this, copy the file containing the certificate from the BSD or Linux system to the switch. Then open the file, copy its contents, and paste them into the Certificate box on the J-Web Secure Access Configuration page.

You can also use the following CLI statement to install the SSL certificate on the switch:

[edit]

```
user@switch# set security certificates local my-signed-cert load-key-file my-certificate.pem
```

**Related
Documentation**

- [Configuring Management Access for the EX Series Switch \(J-Web Procedure\) on page 18](#)
- *Security Features for EX Series Switches Overview*

Configuring Interfaces

- [Configuring Gigabit Ethernet Interfaces \(J-Web Procedure\)](#) on page 23

Configuring Gigabit Ethernet Interfaces (J-Web Procedure)

You can configure specific properties on your Ethernet interface to ensure optimal performance of your network in a high-traffic environment.

To configure properties on a Gigabit Ethernet interface, a 10-Gigabit Ethernet interface, and a 40-Gigabit Ethernet interface on an EX Series switch:

1. Select **Interfaces > Ports**.

The page that is displayed lists Gigabit Ethernet, 10-Gigabit Ethernet interfaces, and 40-Gigabit Ethernet interfaces, and their link statuses.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See [“Using the Commit Options to Commit Configuration Changes \(J-Web Procedure\)”](#) on page 39 for details about all commit options.

2. Select the interface you want to configure. For an EX8200 Virtual Chassis configuration, select the member and the FPC slot if the interface you want to configure is not listed under **Ports** in the top table on the page.

Details for the selected interface, such as administrative status, link status, speed, duplex, and flow control, are displayed in the **Details of port** table on the page.



NOTE: You can select multiple interfaces and modify their settings at the same time. However, while doing this, you cannot modify the IP address or enable or disable the administrative status of the selected interfaces.



NOTE: In the J-Web interface, you cannot configure interface ranges and interface groups.

3. Click **Edit** and select the set of options you want to configure first:

- Port Role—Enables you to assign a profile for the selected interface.



NOTE: When you select a particular port role, preconfigured port security parameters are set for the VLAN that the interface belongs to. For example, if you select the port role **Desktop**, the port security options **examine-dhcp** and **arp-inspection** are enabled on the VLAN that the interface belongs to. If there are interfaces in the VLAN that have static IP addresses, those interfaces might lose connectivity because those static IP addresses might not be present in the DHCP pool. Therefore, when you select a port role, ensure that the corresponding port security settings for the VLAN are applicable to the interface.

For basic information about port security features such as DHCP snooping (CLI option **examine-dhcp**) or dynamic ARP inspection (DAI) (CLI option **arp-inspection**), see *Configuring Port Security (J-Web Procedure)*. For detailed descriptions of port security features, see the Port Security topics in the EX Series documentation at <http://www.juniper.net/techpubs/>.

Click **Details** to view the configuration parameters for the selected port role.

- VLAN—Enables you to configure VLAN options for the selected interface.
 - Link—Enables you to modify the following link options for the selected interface:
 - Speed
 - MTU
 - Autonegotiation
 - Flow Control
 - Duplex
 - Media Type
 - IP—Enables you to configure an IP address for the interface.
4. Configure the interface by configuring options in the selected option set. See [Table 6 on page 25](#) for details of the options.
5. Repeat Steps 3 and 4 for the remaining option sets that you want to configure for the interface.



NOTE: To enable or disable the administrative status of a selected interface, click **Enable Port** or **Disable Port**.

Table 6: Port Edit Options

Field	Function	Your Action
Port Role Options		
Port Role	<p>Specifies a profile (role) to assign to the interface.</p> <p>NOTE: After a port role is configured on the interface, you cannot specify VLAN options or IP options.</p> <p>NOTE: Port roles are not supported by the <code>et</code> interfaces (40-Gigabit Ethernet interfaces) on EX4300 and EX4550 switches.</p> <p>NOTE: Only the following port roles can be applied on EX8200 switch interfaces:</p> <ul style="list-style-type: none"> • Default • Layer 2 uplink • Routed uplink 	
Default	<p>Applies the default role.</p> <p>The interface family is set to ethernet-switching, port mode is set to access, and RSTP is enabled.</p>	<ol style="list-style-type: none"> 1. Click Details to view CLI commands for this role. 2. Click OK.
Desktop	<p>Applies the desktop role.</p> <p>The interface family is set to ethernet-switching, port mode is set to access, RSTP is enabled with the edge and point-to-point options, and port security parameters (MAC limit =1; dynamic ARP inspection and DHCP snooping enabled) are set.</p> <p>To enable security configuration, select the Enable Security Configuration check box. The forwarding-options dhcp-security-arp-inspection will be configured.</p>	<ol style="list-style-type: none"> 1. Select an existing VLAN configuration or type the name of a new VLAN configuration to be associated with the interface. 2. Click Details to view CLI commands for this role. 3. Click OK.
Desktop and Phone	<p>Applies the desktop and phone role.</p> <p>The interface family is set to ethernet-switching, port mode is set to access, port security parameters (MAC limit =1; dynamic ARP Inspection and DHCP snooping enabled) are set, and recommended class-of-service (CoS) parameters are specified for forwarding classes, schedulers, and classifiers. See Table 7 on page 28 for more CoS information.</p> <p>To enable security configuration, select the Enable Security Configuration check box. The forwarding-options dhcp-security groups and forwarding-options dhcp-security-arp-inspection will be configured.</p>	<ol style="list-style-type: none"> 1. Select an existing VLAN configuration or type the name of a new VLAN configuration to be associated with the interface. <p>You can also select an existing VoIP VLAN configuration or a new VoIP VLAN configuration to be associated with the interface.</p> <p>NOTE: VoIP is not supported on EX8200 switches.</p> <ol style="list-style-type: none"> 2. Click Details to view CLI commands for this role. 3. Click OK.

Table 6: Port Edit Options (*continued*)

Field	Function	Your Action
Wireless Access Point	<p>Applies the wireless access point role.</p> <p>The interface family is set to ethernet-switching, port mode is set to access, and RSTP is enabled with the edge and point-to-point options.</p>	<ol style="list-style-type: none"> 1. Select an existing VLAN configuration or type the name of a new VLAN configuration to be associated with the interface. Type the VLAN ID for a new VLAN. 2. Click Details to view CLI commands for this role. 3. Click OK.
Routed Uplink	<p>Applies the routed uplink role.</p> <p>The interface family is set to inet, and recommended CoS parameters are set for schedulers and classifiers. See Table 7 on page 28 for more CoS information.</p>	<p>To specify an IPv4 address:</p> <ol style="list-style-type: none"> 1. Select the IPv4 address check box. 2. Type an IP address—for example: 10.10.10.10. 3. Enter the subnet mask or address prefix. For example, 24 bits represents 255.255.255.0. 4. Click OK. <p>To specify an IPv6 address:</p> <ol style="list-style-type: none"> 1. Select the IPv6 address check box. 2. Type an IP address—for example: 2001:ab8:85a3::8a2e:370:7334. 3. Enter the subnet mask or address prefix. 4. Click OK. <p>NOTE: IPv6 is not supported on EX2200 VC switches.</p>
Layer 2 Uplink	<p>Applies the Layer 2 uplink role.</p> <p>The interface family is set to ethernet-switching, port mode is set to trunk, RSTP is enabled with the point-to-point option, and trusted DHCP is configured for port security.</p> <p>To enable security configuration, select the Enable Security Configuration check box. The forwarding-options dhcp-security groups and forwarding-options dhcp-security-arp-inspection will be configured.</p>	<ol style="list-style-type: none"> 1. For this port role, you can select a VLAN member and associate a native VLAN with the interface. 2. Click Details to view CLI commands for this role. 3. Click OK.
None	Specifies that no port role is configured for the selected interface.	
NOTE: For an EX8200 switch, dynamic ARP inspection and DHCP snooping parameters are not configured.		
VLAN Options		

Table 6: Port Edit Options (*continued*)

Field	Function	Your Action
Port Mode	Specifies the mode of operation for the interface: trunk or access.	<p>If you select Trunk, you can:</p> <ol style="list-style-type: none"> 1. Click Add to add a VLAN member. 2. Select the VLAN and click OK. 3. (Optional) Associate a native VLAN with the interface. 4. Click OK. <p>If you select Access, you can:</p> <ol style="list-style-type: none"> 1. Select the VLAN member to be associated with the interface. 2. (Optional) Associate a VoIP VLAN with the interface. Only a VLAN with a VLAN ID can be associated as a VoIP VLAN. <p>NOTE: VoIP is not supported on EX8200 switches.</p> <ol style="list-style-type: none"> 3. Click OK.
Link Options		
MTU (bytes)	Specifies the maximum transmission unit size (MTU) for the interface.	Type a value from 256 through 9216. The default MTU size for Gigabit Ethernet interfaces is 1514.
Speed	Specifies the speed for the mode.	<p>Select one of the following values: 10 Mbps, 100 Mbps, 1000 Mbps, or Auto-Negotiation.</p> <p>NOTE: EX4300 switches supports Auto-Negotiation 10M-100M apart from the values mentioned above.</p>
Duplex	Specifies the link mode.	<p>Select one: automatic, half, or full.</p> <p>NOTE: Link mode half is not supported on EX4300 switches.</p>
Description	<p>Describes the link.</p> <p>NOTE: If the interface is part of a link aggregation group (LAG), only the Description option is enabled. Other Port Edit options are unavailable.</p>	Enter a brief description for the link.
Enable Auto Negotiation	Enables or disables autonegotiation.	Select the check box to enable autonegotiation, or clear the check box to disable it. By default, autonegotiation is enabled.
Enable Flow Control	Enables or disables flow control.	Select the check box to enable flow control to regulate the amount of traffic sent out of the interface, or clear the check box to disable flow control and permit unrestricted traffic. Flow control is enabled by default.

Table 6: Port Edit Options (*continued*)

Field	Function	Your Action
Media Type	Specifies the media type selected.	Select the check box to enable the media type. Then select Copper or Fiber .
IP Options		
IPv4 Address	Specifies an IPv4 address for the interface. NOTE: If the IPv4 Address check box is cleared, the interface still belongs to the inet family.	<ol style="list-style-type: none"> 1. Select the IPv4 address check box to specify an IPv4 address. 2. Type an IP address—for example: 10.10.10.10. 3. Enter the subnet mask or address prefix. For example, 24 bits represents 255.255.255.0. 4. Click OK.
IPv6 Address	Specifies an IPv6 address for the interface. NOTE: If the IPv6 Address check box is cleared, the interface still belongs to the inet family.	<ol style="list-style-type: none"> 1. Select the IPv6 address check box to specify an IPv6 address. 2. Type an IP address—for example: 2001:ab8:85a3::8a2e:370:7334. 3. Enter the subnet mask or address prefix. 4. Click OK. <p>NOTE: IPv6 address is not supported on EX2200 and EX4500 switches.</p>

Table 7: Recommended CoS Settings for Port Roles

CoS Parameter	Recommended Settings
Forwarding Classes	<p>There are four forwarding classes:</p> <ul style="list-style-type: none"> • voice—Queue number is set to 7. • expedited-forwarding—Queue number is set to 5. • assured-forwarding—Queue number is set to 1. • best-effort—Queue number is set to 0.
Schedulers	<p>The schedulers and their settings are:</p> <ul style="list-style-type: none"> • Strict-priority—Transmission rate is set to 10 percent and buffer size to 5 percent. • Expedited-scheduler—Transmission rate is set to 30 percent, buffer size to 30 percent, and priority to low. • Assured-scheduler—Transmission rate is set to 25 percent, buffer size to 25 percent, and priority to low. • Best-effort scheduler—Transmission rate is set to 35 percent, buffer size to 40 percent, and priority to low.
Scheduler maps	When a desktop and phone, routed uplink, or Layer 2 uplink role is applied on an interface, the forwarding classes and schedulers are mapped using the scheduler map.
ieee-802.1 classifier	Imports the default ieee-802.1 classifier configuration and sets the loss priority to low for the code point 101 for the voice forwarding class.

Table 7: Recommended CoS Settings for Port Roles (*continued*)

CoS Parameter	Recommended Settings
dscp classifier	Imports the default dscp classifier configuration and sets the loss priority to low for the code point 101110 for the voice forwarding class.

**Related
Documentation**

- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Monitoring Interface Status and Traffic*
- *EX Series Switches Interfaces Overview*
- *Junos OS CoS for EX Series Switches Overview*
- *Understanding Interface Naming Conventions on EX Series Switches*

Configuring Layer 3 Protocols

- [Configuring Static Routing \(J-Web Procedure\) on page 31](#)

Configuring Static Routing (J-Web Procedure)

You can use the J-Web interface to configure static routes for EX Series switches.

To configure static routes:

1. Select **Configure > Routing > Static Routing**. The Static Routing page displays details of the configured routes.



NOTE: After you make changes to the configuration on this page, you must commit the changes for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See [Using the Commit Options to Commit Configuration Changes](#) for details about all commit options.

2. Click one of the following options:
 - **Add**—To configure a route. Enter information into the routing page as described in [Table 8 on page 31](#).
 - **Edit**—To modify an existing route. Enter information into the routing page as described in [Table 8 on page 31](#).
 - **Delete**—To delete an existing route.

Table 8: Static Routing Configuration Summary

Field	Function	Your Action
Default Route		

Table 8: Static Routing Configuration Summary (*continued*)

Field	Function	Your Action
Default Route	<p>Specifies the default gateway for the switch.</p> <p>NOTE: IPv6 is not supported on EX2200 and EX4500 switches.</p>	<p>To specify an IPv4 address:</p> <ol style="list-style-type: none"> 1. Select IPv4. 2. Type an IP address—for example, 10.10.10.10. 3. Enter the subnet mask or address prefix. For example, 24 bits represents 255.255.255.0. <p>To specify an IPv6 address:</p> <ol style="list-style-type: none"> 1. Select IPv6. 2. Type an IP address—for example, 2001:ab8:85a3::8a2e:370:7334. 3. Enter the subnet mask or address prefix.
Static Routes		
Nexthop	<p>Specifies the next-hop address or addresses to be used when routing traffic to the static route.</p>	<p>To add an address:</p> <ol style="list-style-type: none"> 1. Click Add. 2. In the IP address dialog, enter the IP address. <p>NOTE: If a route has multiple next-hop addresses, traffic is routed across each address in round-robin fashion.</p> <ol style="list-style-type: none"> 3. Click OK. <p>To delete a next-hop address, select it from the list and click Delete.</p>

- Related Documentation**
- *Configuring Static Routing (CLI Procedure)*
 - *Monitoring Routing Information*
 - *Layer 3 Protocols Supported on EX Series Switches*

PART 3

Administering a Switch Using J-Web Interface

- [Managing Users on page 35](#)
- [Managing Configurations and Files on page 39](#)
- [Managing Software and Licenses on page 43](#)

CHAPTER 7

Managing Users

- [Managing Users \(J-Web Procedure\) on page 35](#)

Managing Users (J-Web Procedure)

You can use the Users Configuration page for user information to add new users to an EX Series switch. For each account, you define a login name and password for the user and specify a login class for access privileges.

To configure users:

1. Select **Configure > System Properties > User Management**.

The User Management page displays details of users, the authentication order, the RADIUS servers and TACACS servers present.

2. Click **Edit**.

3. Click any of the following options on the **Users** tab:

- **Add**—Select this option to add a user. Enter details as described in [Table 9 on page 36](#).
- **Edit**—Select this option to edit an existing user's details. Enter details as described in [Table 9 on page 36](#).
- **Delete**—Select this option to delete a user.

4. Click an option on the **Authentication Methods and Order** tab:

- **Authentication Order**—Drag and drop the authentication type from the Available Methods section to the Selected Methods. Click the up or down buttons to modify the authentication order.
- **RADIUS server**—Click one of the following options:
 - **Add**—Select this option to add an authentication server. Enter details as described in [Table 10 on page 37](#).
 - **Edit**—Select this option to modify the authentication server details. Enter details as described in [Table 10 on page 37](#).
 - **Delete**—Select this option to delete an authentication server from the list.
- **TACACS server**—Click one of the following options:

- **Add**—Select this option to add an authentication server. Enter details as described in [Table 10 on page 37](#).
- **Edit**—Select this option to modify the authentication server details. Enter details as described in [Table 10 on page 37](#).
- **Delete**—Select this option to delete an authentication server from the list.



NOTE: After you make changes to the configuration on this page, you must commit the changes for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See [Using the Commit Options to Commit Configuration Changes](#) for details about all commit options.

Table 9: User Management Configuration Page Summary

Field	Function	Your Action
User Information		
Username (required)	Specifies the name that identifies the user.	Type the username. It must be unique within the switching platform. Do not include spaces, colons, or commas in the username.
User Id	Specifies the user identification.	Type the user's ID.
Full Name	Specifies the user's full name.	Type the user's full name. If the full name contains spaces, enclose it in quotation marks. Do not include colons or commas.
Login Class (required)	Defines the user's access privilege.	Select the user's login class from the list: <ul style="list-style-type: none"> • operator • read-only • super-user/superuser • unauthorized This list also includes any user-defined login classes.
Password	Specifies the login password for this user.	Type the login password for this user. The login password must meet these criteria: <ul style="list-style-type: none"> • The password must be at least 6 characters long. • It can include alphabetic, numeric, and special characters, but not control characters. • It must contain at least one change of case or character class.
Confirm Password	Verifies the login password for this user.	Retype the login password for this user.

Table 10: Add an Authentication Server

Field	Function	Your Action
IP Address	Specifies the IP address of the server.	Type the server's 32-bit IP address, in dotted decimal notation.
Password	Specifies the password of the server.	Type the password of the server.
Confirm Password	Verifies that the password of the server is entered correctly.	Retype the password of the server.
Server Port	Specifies the port with which the server is associated.	Type the port number.
Source Address	Specifies the source address of the server.	Type the server's 32-bit IP address, in dotted decimal notation.
Retry Attempts	Specifies the number of login retries allowed after a login failure.	Type the number. NOTE: Only 1 retry is permitted for a TACACS server.
Time out	Specifies the time interval to wait before the connection to the server is closed.	Type the interval in seconds.

**Related
Documentation**

- [Configuring Management Access for the EX Series Switch \(J-Web Procedure\) on page 18](#)

CHAPTER 8

Managing Configurations and Files

- [Using the Commit Options to Commit Configuration Changes \(J-Web Procedure\)](#) on page 39

Using the Commit Options to Commit Configuration Changes (J-Web Procedure)

You can use the single-commit feature to commit all outstanding configuration changes in the J-Web interface on EX Series switches simultaneously. This helps in reducing the time J-Web takes for committing configurations because when changes are committed at every step, rollback configurations pile up.

For example, suppose you want to delete a firewall filter and add a new one. With immediate commits, you would need to commit your changes twice for this action. Using single commit, you can decrease the number of commits to one, thus saving time for working on other configurations.

When you edit a configuration, you work on a copy of the current configuration, which is your candidate configuration. The changes you make to the candidate configuration are visible through the user interface immediately, allowing other users to edit those configurations, but they do not take effect on the switch until you commit the changes. When you commit the configuration, the candidate file is checked for proper syntax, activated, and marked as the current, operational software configuration file. If multiple users are editing the configuration when you commit the candidate configuration, changes made by all users take effect.

You can configure the commit options to either commit all configuration changes together or commit each configuration change immediately using the J-Web Commit Preference page.



NOTE: There are some pages on which configuration changes must be committed immediately. For such pages, if you configure the commit options for a single commit, the system displays warning notifications that remind you to commit your changes immediately. An example of such a page is the Interface Page (Configure > Interface).

To configure the commit options on an EX Series switch using the J-Web interface:

1. Select **Commit Options**.



NOTE: All action links except **Preference** are disabled unless you edit, add, or delete a configuration.

2. Choose an action. See [Table 11 on page 40](#) for details on the actions.
3. Configure the commit options by selecting **Preference**. See [Table 12 on page 40](#) for details on preference options.

Table 11: Commit Options

Menu Item	Function	Your Action
Commit	Commits the candidate configuration of the current user session, along with changes from other user sessions.	<ol style="list-style-type: none"> 1. Select Commit Options > Commit. Changes are committed after the system validates your configuration. A window displays that the configuration was successfully committed or that the commit failed. 2. Click OK. Click Details to view the commit log.
Compare	Displays the XML log of pending uncommitted configurations on the device.	<ol style="list-style-type: none"> 1. Select Commit Options > Compare. The XML log of pending configurations on the devices are displayed similar to the CLI interface, in a “human-readable” form. 2. Click Close.
Discard	Discards the candidate configuration of your current session, along with changes from other user sessions.	<ol style="list-style-type: none"> 1. Select Commit Options > Discard. 2. Click OK to confirm the discard action. Your changes are discarded after the system validates your configuration.
Preference	Indicates your choice of committing all global configurations together or committing each configuration change immediately.	<ol style="list-style-type: none"> 1. Select Commit Options > Preference. The Commit Preference page is displayed. 2. Configure the commit options by selecting your preference. See Table 12 on page 40 for details on preference options.

Table 12: Commit Preference Options

Option	Function
Validate and commit configuration changes	Sets the system to validate and force an immediate commit on every screen after every configuration change.
Validate configuration changes	<p>Loads all the configuration changes for an accumulated single commit. If there are errors in loading the configuration, the errors are logged. This is the default mode.</p> <p>Once you select this option, you need to select Commit Options > Commit to commit your changes.</p>

- Related Documentation**
- [J-Web User Interface for EX Series Switches Overview on page 3](#)
 - *EX Series Switch Software Features Overview*

CHAPTER 9

Managing Software and Licenses

- [Updating J-Web Interface on EX Series Switches \(J-Web Procedure\) on page 43](#)
- [Upgrading Junos OS on EX Series Switches \(J-Web Procedure\) on page 45](#)
- [Rebooting or Halting the EX Series Switch \(J-Web Procedure\) on page 46](#)

Updating J-Web Interface on EX Series Switches (J-Web Procedure)

You can update the J-Web software packages on a single fixed-configuration switch or for all members of a Virtual Chassis.

You can use the J-Web interface to install the latest Application package that is associated with the installed Junos OS, from a server by using FTP or HTTP, or by uploading the file to the switch.

There are two ways in which you can use the J-Web interface to download and install the J-Web Application package:

- Auto update
- Manual update
- [Installing J-Web Application Package by Using Auto Update on page 43](#)
- [Installing J-Web Application Package by Using Manual Update on page 44](#)

Installing J-Web Application Package by Using Auto Update

To *automatically* check for and install the latest version of the J-Web Application package:

1. Click **Update Now** in the Update Available window that appears when you log in to the J-Web interface.

**NOTE:**

- For the Update Available window to appear when you log in, your switch or computer should be connected to the Internet.
- The Update Available window appears only if there is a latest update available on the Juniper Networks server.
- For the Update Available window to appear when you log in, the Check for updates automatically on every login in the *Update Preference* section in the Maintain > Update J-Web side pane must be selected.
- If you choose *Update Later*, you can update to the latest J-Web Application package by clicking the orange icon next to *Update Available* on the top pane of the J-Web interface or through Maintain > Update J-Web.

2. If the switch is connected to the Internet, the Update J-Web window appears. Enter the authentication details to download from the Juniper Networks download server. The J-Web Application package downloads and installs on the switch.

If the switch is not connected to the Internet and your computer is connected to the Internet, download the latest version of the J-Web Application package to your computer and install it on your switch. Click **Download Application Package** in the Update J-Web window, enter authentication details to download from the Juniper Networks download server, and download the file to your computer. Select the file and click **Update**.



NOTE: You can also download the file to your computer and update it on the switch later by clicking *Select Application Package* in the Maintain > Update J-Web side pane, and selecting where the package is located.

Installing J-Web Application Package by Using Manual Update

To *manually* check for and install the latest J-Web Application package:

1. Go to **Maintain > Update J-Web** in the side pane, and click **Check for updates**.

If the latest update is available on the Juniper Networks server, the Update Available window appears.

2. Click **Update Now** in the Update Available window.
3. If the switch is connected to the Internet, the Update J-Web window appears. Enter the authentication details to download from the Juniper Networks download server, and click **Update**. The J-Web Application package downloads and installs on the switch.

If the switch is not connected to the Internet and your computer is connected to the Internet, download the latest version of the J-Web Application package to your local computer and install it on your switch. Click **Download Application Package** in the

Update J-Web window, enter authentication details to download from the Juniper Networks download server, and download the file to your local system. Select the file, and click **Update**.



NOTE: You can also download the file to your computer and update it on the switch later by clicking *Select Application Package* in the *Maintain > Update J-Web* side pane, and selecting where the downloaded package is located.

Upgrading Junos OS on EX Series Switches (J-Web Procedure)

You can upgrade the Junos OS package on a single fixed-configuration switch or for all members of a Virtual Chassis.

You can use the J-Web interface to download and install Junos OS upgrades from a remote server by using FTP or HTTP, or by copying the file to the EX Series switch.

- [Installing Junos OS Upgrades from a Remote Server on page 45](#)
- [Installing Junos OS Upgrades by Uploading File from Local Computer on page 46](#)

Installing Junos OS Upgrades from a Remote Server

To install Junos OS upgrade from a remote server by using FTP or HTTP:

1. Download the software package as described in *Downloading Software Packages from Juniper Networks*.
2. Log in to the Juniper Networks authentication system using the username (generally your e-mail address) and password supplied by Juniper Networks representatives.
3. In the J-Web interface, select **Maintain > Update Junos**.
4. In the *Update Junos* section, select **Remote Server**. The *Install Package* section appears below the Update Junos section.
5. In the Install Package section, enter information into the fields described in [Table 13 on page 45](#).
6. Click **Fetch and Install Package**. The software is activated after the switch has rebooted.

Table 13: Install Remote Summary

Field	Function	Your Action
Package Location (required)	Specifies the FTP or HTTP server, file path, and software package name.	Type the full address of the software package location on the FTP or HTTP server—one of the following: <i>ftp://hostname/pathname/package-name</i> <i>http://hostname/pathname/package-name</i>
User	Specifies the username, if the server requires one.	Type the username.

Table 13: Install Remote Summary (*continued*)

Field	Function	Your Action
Password	Specifies the password, if the server requires one.	Type the password.
Reboot If Required	<p>NOTE: Reboot is disabled if you enter a J-Web Application package name in the Package Location text box. To enable Reboot, enter a Junos package name in the Package Location text box.</p> <p>If this box is checked, the switching platform will automatically reboot when the upgrade is complete.</p>	Check the box if you want the switching platform to reboot automatically when the upgrade is complete.

Installing Junos OS Upgrades by Uploading File from Local Computer

To install software upgrades by uploading files:

1. Download the software package.
2. In the J-Web interface, select **Maintain > Update Junos**.
3. In the *Update Junos* section, select **Local File**. The *Upload Package* section appears below the Update Junos section.
4. In the Upload Package section, enter information into the fields described in [Table 14 on page 46](#).
5. Click **Upload and Install Package**. The software is activated after the switching platform completes the installation procedure.

Table 14: Upload Package Summary

Field	Function	Your Action
File to Upload (required)	Specifies the location of the software package.	Type the location of the software package, or click Browse to navigate to the location.
Reboot If Required	Specifies that the switching platform is automatically rebooted when the upgrade is complete.	Select the check box if you want the switching platform to reboot automatically when the upgrade is complete.

Rebooting or Halting the EX Series Switch (J-Web Procedure)

You can use the J-Web interface to schedule a reboot or to halt the switching platform.

To reboot or halt the switching platform by using the J-Web interface:

1. In the J-Web interface, select **Maintain > Reboot**.
2. Select one:
 - **Reboot Immediately**—Reboots the switching platform immediately.
 - **Reboot in *number of minutes***—Reboots the switch in the number of minutes from now that you specify.

- **Reboot when the system time is *hour:minute*** —Reboots the switch at the absolute time that you specify, on the current day. You must select a 2-digit hour in 24-hour format and a 2-digit minute.
 - **Halt Immediately**— Stops the switching platform software immediately. After the switching platform software has stopped, you can access the switching platform through the console port only.
3. (Optional) In the Message box, type a message to be displayed to any users on the switching platform before the reboot occurs.
 4. Click **Schedule**. The J-Web interface requests confirmation to perform the reboot or halt.
 5. Click **OK** to confirm the operation.
 - If the reboot is scheduled to occur immediately, the switch reboots. You cannot access the J-Web interface until the switch has restarted and the boot sequence is complete. After the reboot is complete, refresh the browser window to display the J-Web interface login page.
 - If the reboot is scheduled to occur in the future, the Reboot page displays the time until reboot. You have the option to cancel the request by clicking **Cancel Reboot** on the J-Web interface Reboot page.
 - If the switch is halted, all software processes stop and you can access the switching platform through the console port only. Reboot the switch by pressing any key on the keyboard.

**Related
Documentation**

- [Starting the J-Web Interface on page 13](#)

PART 4

Index

- [Index on page 51](#)

Index

Symbols

#, comments in configuration statements.....	xii
(), in syntax descriptions.....	xii
< >, in syntax descriptions.....	xii
[], in configuration statements.....	xii
{ }, in configuration statements.....	xii
(pipe), in syntax descriptions.....	xii

A

access privileges	
specifying	35
Add a RADIUS Server page	
field summary.....	37
Add a User Configuration page	
field summary.....	36
authentication	
specifying access privileges	35

B

braces, in configuration statements.....	xii
brackets	
angle, in syntax descriptions.....	xii
square, in configuration statements.....	xii

C

certificates See SSL certificates	
comments, in configuration statements.....	xii
Configuration	
adding users.....	35
secure Web access.....	18
Configuring	
EX-series switch.....	15
management access.....	18
conventions	
text and syntax.....	xi
curly braces, in configuration statements.....	xii
customer support.....	xiii
contacting JTAC.....	xiii

D

default gateway	
defining.....	20
default gateway, static routing.....	32
documentation	
comments on.....	xiii

F

font conventions.....	xi
-----------------------	----

H

halting a switching platform	
with J-Web.....	46
halting a switching platform immediately	
with J-Web	47
HTTP (Hypertext Transfer Protocol)	
enabling Web access	18
HTTPS (Hypertext Transfer Protocol over SSL)	
enabling secure access	18
Quick Configuration.....	18
Hypertext Transfer Protocol See HTTP	
Hypertext Transfer Protocol over SSL See HTTPS	

I

Install Remote page	
field summary.....	45

J

Junos XML management protocol	
enabling secure access.....	18
Junos XML management protocol over SSL.....	18

L

login classes	
specifying	35

M

Management access	
configuring.....	18
managing	
reboots.....	46
manuals	
comments on.....	xiii

N

next hop	
address for static routes.....	32

P

parentheses, in syntax descriptions.....	xii
--	-----

passwords	
RADIUS secret.....	37

R

RADIUS	
secret	37
reboot immediately	
with J-Web.....	46
rebooting	
with J-Web	46

S

scheduling a reboot	
with J-Web.....	46
secret	
RADIUS	37
secure access	
Junos XML management protocol SSL	
access.....	18
Secure Access page	
field summary.....	19
software	
halting immediately (J-Web)	47
SSL (Secure Sockets Layer)	
enabling secure access (Quick	
Configuration).....	18
SSL certificates	
adding	21
static routes	
Configuration.....	31
Static Routes page	
field summary.....	31
static routing	
default gateway.....	32
support, technical See technical support	
switching platform	
halting (J-Web).....	46
rebooting (J-Web).....	46
syntax conventions.....	xi

T

technical support	
contacting JTAC.....	xiii

U

upgrades	
installing Junos OS from remote server.....	45
Upload package page	
field summary.....	46

username	
specifying	35
users	
adding	35

W

Web access, secure See secure access	
--------------------------------------	--